


# INSTALLATION

**WARNING:** THIS UNIT IS NOT SHIPPED WITH THE HANDSET BATTERY PACK INSTALLED. INSERT HANDSET BATTERY BEFORE INITIAL SETUP AND USE.

**1** **PLUG** the telephone cord into telephone wall jack. **PLUG** the other end of the cord into the back of the base unit.

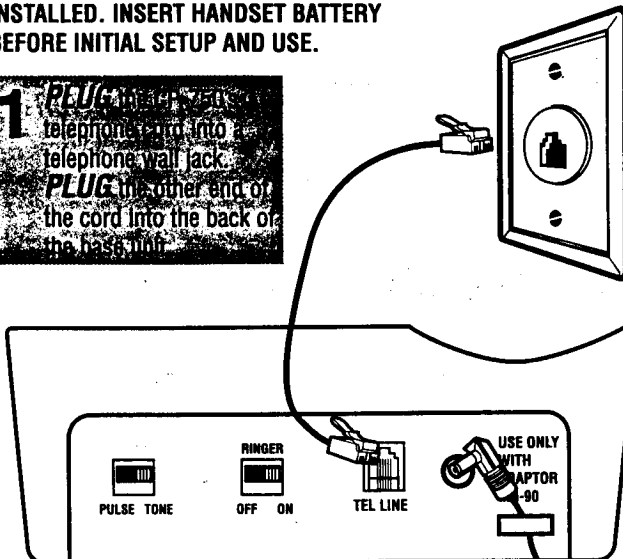


**2** **CONNECT** the AC Adapter Plug into the AC Adapter Outlet on the back of the CP-750 charging cradle. **DO NOT** touch the cord or the AC Adapter until you have made a secure connection.

**3** **PLUG** the AC Adapter into an electrical wall outlet. Place the handset (with battery pack installed) in the cradle.

**4** It may be necessary to set the **TONE/PULSE SWITCH**.

**5** Raise the charging cradle antenna for clear reception.

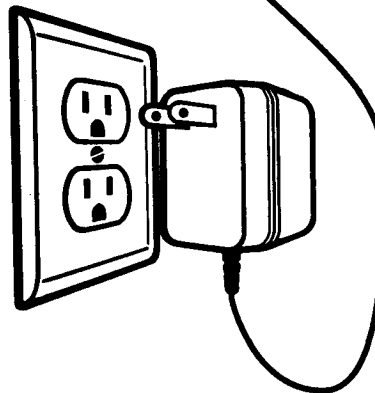

# REFERENCIA RÁPIDA

## INSTALACIÓN

**1** **ENCHUFE** el cordón de su CP-750 en un enchufe para teléfono en la pared. **ENCHUFE** el otro extremo del cordón telefónico en la parte posterior de la unidad base.

**2** **CONECTE** el enchufe del adaptador de CA en la entrada de tomacorriente para adaptador de CA que hay en la parte de atrás de la base para carga de su CP-750.

## USO EN PARED O ESCRITORIO

Se incluye un soporte para empotrado en pared si se desee. Enrolle en forma apretada el cordón telefónico al rededor de las cuatro guías en la parte interior del soporte para empotrado. Haga pasar el cordón telefónico a través del orificio en el centro del soporte. Vea el dibujo. El auricular puede ser cargado en la posición mirando hacia afuera o boca abajo, aún si se ha empotrado en la pared.

## CALLER ID SERVICE OPTIONS

You must subscribe to a Caller ID service (available from most local telephone companies) in order to receive Caller ID information. Most Caller ID services offer the following two options:

### 1. Standard Caller ID with name and number

The name, phone number and local time (if available) of the incoming call are received after your phone rings.

### 2. Call Waiting Caller ID with name and number

The name, phone number and local time (if available) of the incoming call are received after your phone rings. If you are on the phone and receive another call, you will hear a tone, telling you there is a call waiting. The Call Waiting Caller ID information will appear on the display.


#### NOTE:

- The display illustrations in the remainder of this section are presented with the assumption that your Caller ID service provides both name and number. If you have a number-only service, the name will be blank.

## ANSWERING CALLER ID CALLS

When you receive a call, the CP-750 will receive the Caller ID information from your phone company within the first two rings. Caller ID information will display even if the ringer is set to off.

When all of the data is received, you will hear a low-high confirmation tone and the Caller ID information will appear on the display:



# HOLD OPERATION


**2** To continue your phone conversation, press **TALK**, **HOLD**, or pick up an extension phone connected to the same line. When the extension phone is picked up, the CP-750 automatically disconnects itself from the line. Extension phone pick up during HS Hold mode will discontinue the Hold mode, connect the call to the extension phone, and cause the CP-750 to go idle after a 10-second display time-out.

#### NOTE:

- The Call Timer will not be disrupted if **HOLD** is pressed. The Hold timer (5 minute count down timer) will display and the Call Timer will continue, hidden from view, during any Hold mode.

## DIALING A NUMBER USING THE SEND KEY (DISPLAY & DIAL)

Send-Key Dialing is extremely reliable because you can see the number you have entered before actually dialing it.




#### NOTE:

- After seven rings the page will stop.


## BATTERY CONDITION

You can check the power level of the battery to avoid battery depletion.

**1** Press **BATTERY** when the handset is out of the charging cradle. The following display will appear when the battery is fully charged:



As the battery discharges, the stack symbols will disappear, starting from the right. When the battery is low, the display will look like:



**1** Once you hear the confirmation tone, if you press **TALK**, the CP-750 will automatically retain all the Caller ID information received.

**NOTE:**

- If you press TALK before you hear the Caller ID confirmation tone, the Caller ID information for that call will be lost.

## ANSWERING CALL WAITING CALLER ID CALLS

If you subscribe to a Call Waiting Caller ID service with your telephone company, the CP-750 can receive a Caller ID call while you are on the line with another party.

**1** If a second call comes while you are on the phone, your CP-750 will beep.

**2** You can now view the LCD screen to see the name and number of the incoming caller. You can decide whether to answer the second call or ignore it and continue with the first call.

**3** If you choose to take the second call, press **FLASH** to answer it.

**4** You may continue to press **FLASH** to switch between the two calling parties indefinitely.

## SAVING CALLER ID INFORMATION

The CP-750 automatically saves up to 50 Caller ID entries. Any Caller ID information (name, phone number, date, time) that is transmitted will be stored for your reference or use in the autodialer and redial memory.

All Caller ID names and numbers are stored in reverse order of receipt (last call is displayed as highest memory number.) If the memory becomes full, the newest entries will be saved and the oldest ones will be erased.





## RECEIVING CALLER ID INFORMATION IF CALL IS NOT ANSWERED

If Caller ID calls are not answered, the CP-750 will

any other reason, the name and/or number information is currently not available from your local phone company, an "Unavailable" message will appear on the display. The time and date information for the call will still be recorded into the CP-750's memory.

## DIALING STORED CALLER ID NUMBERS

The CP-750 allows you to place calls using stored Caller ID information.

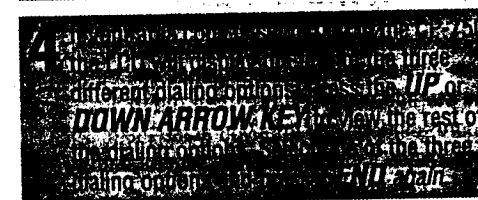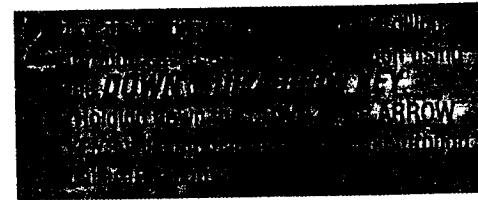

**NOTES:**

- If you have programmed your local area code into the CP-750 before using this feature then the CP-750 will not prompt you for different dialing options. See "Programming the CP-750" for more information.
- If no button is pressed for 30 seconds during viewing of Caller ID information the LCD will time-out to a blank display.

## TOLL CALL INDICATOR

A globe icon in LCD indicates a Caller ID telephone number record which may result in a toll charge if dialed out.

**NOTE:**

- CASIO PHONEMATE makes no guarantees regarding

## STORING NAMES AND NUMBERS IN AUTODIAL

You may store up to 20 of your most frequently dialed names and numbers into the autodial memory. Autodial names can be up to 16 characters long, and the accompanying phone numbers can be up to 24 digits each.

- 1** Press **PROGRAM**.
- 2** Press **AUTODIAL**.
- 3** Press the **LEFT** or **RIGHT ARROW KEY** to locate a memory location.
- 4** Enter a telephone number on the keypad.
- 5** Press the **UP ARROW KEY** to move the cursor to the name field.
- 6** Enter the name using the keypad. Pressing a key once displays the first upper case letter on that key. Pressing it repeatedly will cycle through all of the upper and lower case characters on that key. Stop when the desired character appears in the display. The \*1\* key provides unique characters and icons.
- 7** Press the **RIGHT ARROW KEY** to move the cursor one space to the right.
- 8** Press **AUTODIAL** again when you finish to save the new entry. Nothing will be stored until the **AUTODIAL** key is pressed.
- 9** Press **PROGRAM** to exit the mode.

## PROGRAMMING PAUSES IN AUTODIAL

When you are programming numbers into the autodialer, the **HOLD (PAUSE)** key can be used to insert a two-second "pause" (wait period) between digits.

For example, if you need to dial a "9" in order to obtain an outside line, you can use the **PAUSE**

- 3** Press the **LEFT** or **RIGHT ARROW KEY** to locate a memory location.
- 4** Press the **UP ARROW KEY** to move the cursor to the name field. Pressing a key once displays the first upper case letter on that key. Pressing it repeatedly will cycle through all of the upper and lower case characters on that key. Stop when the desired character appears in the display. The \*1\* key provides unique characters and icons.
- 5** Press the **RIGHT ARROW KEY** to move the cursor one space to the right.
- 6** Press the **DOWN** or **UP ARROW KEY** to find the autodial name and number you wish to erase.
- 7** If you only wish to erase the number, press the **RIGHT ARROW KEY** to activate the cursor and press the **RIGHT**, **LEFT**, **UP**, **DOWN**, or **NUMBER** keys to make erasures.
- 8** Press **AUTODIAL** once to erase the information. The information will be saved.
- 9** Press **PROGRAM** to exit the programming mode.

## ERASING AUTODIAL NAMES AND NUMBERS

- 1** Press **AUTODIAL** to enter the autodial mode.
- 2** Press the **DOWN** or **UP ARROW KEY** to find the autodial name and number you wish to erase.
- 3** Press and release **DELETE**. **DELETE** will appear in the display.

**5** Use the **DOWN** or **UP ARROW KEY** to select the Caller ID entry you wish to save.

**6** You can either save the entry exactly as it appears, or you can edit the name and/or number. To save the entry without any editing, just press **AUTODIAL**. To edit the entry, press the **UP ARROW KEY** and proceed as described in the "TO EDIT AUTODIAL ENTRIES" section.

**7** When you are finished, press **PROGRAM** to exit "Program" mode.

## TRANSFER REDIAL NUMBER TO AUTODIAL MEMORY

This feature allows you to transfer a phone number from the Redial Memory directly into the Autodial Memory. If you wish, you can add a name before you complete the transfer.

**1** Follow steps 1-4 in the "CALLER ID" section.

**2** Press **REDIAL** (Redial Memory).

**3** Follow steps 1-4 in the "CALLER ID" section and save.

# PROGRAMMING THE CP-750

## PROGRAMMING OPTIONS

1. Ringer Tone
2. Default Volume Setting
3. Autodialer (see section )
4. Local Area Code Setting
5. Outside Line
6. Call Waiting Caller ID
7. On-Screen Help

### NOTE:

- If no button is pressed for 30 seconds during programming functions the LCD will time-out to a blank display.

### PROGRAM OPTION 1: RINGER TONE

You can select one of 4 ringer tones for the CP-750.

**1** Press **PROGRAM**.

**2** Press the **UP ARROW KEY** once. The words "RINGER TONE" and its current setting (1-4) will be displayed.

**3** Press the **LEFT** or **RIGHT ARROW KEYS** to select a ringer tone. The CP-750 will ring once to confirm the tone you have selected.

### PROGRAM OPTION 5: OUTSIDE LINE

If your telephone system requires that you enter an extra digit in order to obtain an outside line, the CP-750 can dial this digit for you automatically whenever you dial a stored Caller ID number. This may be useful if you use your CP-750 at a business that uses a PBX telephone system.

**1** Press **PROGRAM**.

**2** Press the **UP ARROW KEY** once. The words "OUTSIDE LINE" and its current setting (1-4) will be displayed.

**3** Use the **LEFT** or **RIGHT ARROW KEY** to select a digit.

**4** Press **PROGRAM**.


### PROGRAM OPTION 6: CALL WAITING CALLER ID

The Call Waiting Caller ID option is factory preset to "ON". If you do not subscribe to Call Waiting

# INITIAL SETUP

## WALL/DESK USE

A wall mount bracket is included and can be installed if needed. Tightly coil the telephone cord around the four guides on the inside of the wall mounting bracket. Pull the telephone cord through the center opening on the wall mounting bracket. Refer to the drawing. The handset can be charged face out or face down, even when wall mounted.

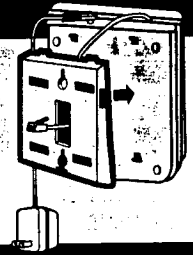

## TONE/PULSE SWITCH

This switch tells the CP-750 to dial out with either touchtone or pulse signals to match the service you have with your local telephone company. The CP-750 is shipped with the **TONE/PULSE SWITCH** in the TONE position. If you do not have touchtone service, set the switch to pulse on the back of the charging cradle.

- TONE** = for Touchtone systems
- PULSE** = for Rotary dialing or Pulse systems



## RINGER ON/OFF

The CP-750 is shipped with the base and handset RINGER ON/OFF SWITCHES in the ON position. You can independently set the ringers of the CP-750 to ON or OFF.

# HANDSET / TELE

## STANDBY MODE

**1** The CP-750 is in "Standby" mode whenever it is idle. When a call comes in, the handset is in the charging cradle, the display will either be blank

OR

**1** If you have new caller ID entries from recent unanswered calls, it will show the "NEW CALLERS" message with the number of new callers at the lower portion of the display screen. Press **CALLER ID** to view the names and numbers of "New Callers".

NOTE:

- If the handset is in "Standby Mode" but not in the charging cradle, the display will go blank after a short time to conserve battery power.

## TO PLACE A CALL

**1** Pick up the handset and press **TALK**. The following display will be briefly shown. This display indicates that the handset is establishing contact with the charging cradle.



**2** A dial tone will be established. (In this example, CH03 is the current channel number of 40 available channels in your area.) Wait for dial tone and dial the phone number. The number will appear in the display as you dial.




NOTE:

- The LINE IN-USE INDICATOR on the charging cradle lights solid to show the handset is in use.

**2** When **TALK** is pressed, the handset volume returns to the volume level which you programmed. See **PROGRAMMING THE CP-750** for more information.

## MODEM MONITOR™

When the CP-750 detects a modem in use on the line to which it is connected, the Modem Monitor™ feature prevents the CP-750 from going off-hook. When you attempt to make a call on the CP-750 and a modem is connected, you will hear the modem data through the handset. The data you hear is protected from interruption. The **MODEM MONITOR™ INDICATOR** on the base will flash slowly and when you attempt to go off-hook the handset will display:



NOTE:

- If you wish to override Modem Monitor™ after pressing **TALK** you can do so by pressing **9**. (You may also need to manually deactivate the modem activity at your computer or fax machine.)

## CALL TIMER

About 10 seconds after you enter "Talk" mode, a Call Timer will appear on the display. The timer will automatically be reset whenever you place a new call.

NOTES:

- The length of time shown on the display is intended only to be an estimate duration of a phone call. CASIO PHONEMATE makes no guarantees regarding the accuracy of this timer.
- The Call Timer will not be disrupted if **HOLD** is pressed. The Hold timer (5 minute count down timer) will display and the Call Timer will continue, hidden from view, during any Hold mode.

## LAST CALL TIME DISPLAY

**RIGHT ARROW / CHANNEL**

# IMPORTANT FEATURES

## **Caller ID**

If you subscribe to a Caller Identification Service (available from most local telephone companies), the CP-750 can display the name and phone number of incoming calls. With the Caller ID feature, you can see who is calling before you answer a call.

## **Call Waiting Caller ID**

If you subscribe to a Call Waiting Caller ID service from your local telephone company, the CP-750 can display the name and number of an incoming call while you are already talking to another party on the cordless handset. NOTE: You must order the complete package that is known as "CALL WAITING/ CALLER ID" from your local telephone company. If you simply order the two services of CALL WAITING and CALLER ID you may not receive Call Waiting Caller ID service.

## **Caller ID Memory**

The CP-750 automatically stores the Caller ID names and numbers of the last 50 calls you have received.

## **Modem Monitor™ Connection Protection**

Modem Monitor™ protects modem and fax connections when a call attempt is made from any phone that includes the Modem Monitor™ feature. It distinguishes between data and standard voice communication and allows for normal telephone operation.

## **Supertwist Nematic (STN) LCD**

Advanced LCD technology in your CP-750 provides clear, multi-angle viewing of caller's name and phone number if you subscribe to Caller ID service from your local telephone company.

## **Autodial Memory Backup**

CASIO PHONEMATE's memory backup system maintains up to 20 autodial names and numbers indefinitely until you erase them. This non-volatile memory does not require battery power.

## **Charging The Battery**

Charge the battery for 12-15 hours before using the cordless handset for the first time. The handset is always charging while it is in the charging cradle and cannot be overcharged.

To charge the battery, first check the AC Adapter to see that it is connected correctly. Then, place the handset in the charging cradle. The CHARGING INDICATOR on the charging cradle lights solid to indicate that the CP-750 is charging.

## **Local Area Code Setting**

If you are planning to use the Caller ID features on the CP-750 and you reside in a 7-digit dialing area, you may want to program your local area code into the handset's memory after you have charged the battery for the first time. The CP-750 uses this information to automatically dial stored Caller ID numbers correctly from a 7-digit dialing area. If you have 10 or 11 digit dialing in your area, leave the area code setting at 000. The CP-750 will prompt you to choose between 7, 10, or 11 digit dialing each time you make a caller ID call.

## **Headset Jack / Belt Clip Included**

The CP-750 handset has a 2.5mm jack for attachment of a headset (headset not included). The belt clip snaps into to the back of the handset.

# ADDITIONAL INFO

## HANDSET CHARGING INDICATOR

The **HANDSET CHARGING INDICATOR** lights solid when the handset is placed in the charger. Place the handset in the charger for 12-15 hours before the first use or when the battery begins to run low.

## LINE-IN-USE INDICATOR

The **LINE-IN-USE INDICATOR** (located on the charging cradle) will light solid whenever the CP-750 is in "TALK" mode, whenever any other extension telephone on the same line is being used, or whenever the telephone cord is not properly plugged into the wall jack or telephone.

## MOVING THE CP-750

Unplug the CP-750 from the wall outlet if you wish to move the unit. Place the handset in the charging cradle after relocating the CP-750. This will reset the CP-750's security code. All autodial, Caller ID and redial numbers will be saved.

## POWER FAILURE/ NON-VOLATILE MEMORY

CASIO PHONEMATE's memory backup system maintains up to 20 autodial names and numbers and stored Caller ID information (up to 50 records) indefinitely until you erase them. This non-volatile memory does not require battery power.

## TWO-LINE INSTALLATION

Two-line installations may require a two-line T-adapter for the CP-750 to operate correctly. The T-adapter allows you to connect your machine to Line 1 or Line 2. The CP-750 will only answer one line. (See Accessories Order Form.)

## MULTI-LINE INSTALLATION

Installations with more than two lines, such as business PBX or Key Systems, may require a separate RJ11 jack for answering machines. Please contact your telephone equipment provider for additional information. (See Accessories Order Form.)

## CLEANING THE CP-750

**CAUTION:** Disconnect the CP-750 from the power outlet before cleaning. Use a damp cloth or moist sponge only to clean:


1. The antenna.
2. The plastic cabinet of the handset and charging cradle.
3. The battery charging contacts on the handset.

A mild soap, like dishwashing detergent, will help remove grease or oil. Do not spray cleaners directly onto the unit. Cleaners should only be used on the plastic surfaces. Thoroughly dry all parts of the handset and charging cradle before re-using.

## HANDSET BATTERY INSTALLATION

If it becomes necessary to replace the battery pack:

1. Press down on the battery compartment cover and slide it toward the bottom of the handset.
2. Install the new battery pack with the red wire on the right side of the black wire (see drawing.)

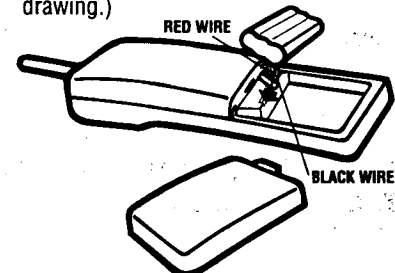

3. Replace the battery cover by sliding it up from the bottom.
4. Place the handset in the charger cradle and charge the battery pack for 12-15 hours.

**WARNING: Use only NiCd Rechargeable Battery Pack (3.6 volts 600 mAh.)**

Handset battery life: 6.6 hours talk time, 7 days standby time.



# IMPORTANT SAFETY INSTRUCTIONS

## INSTALLATION INSTRUCTIONS

1. Never install telephone wiring during a lightning storm.
2. Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations.
3. Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected at the network interface.
4. Use caution when installing or modifying telephone lines.

## SAFETY PRECAUTIONS

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

1. Read and understand all instructions.
2. Follow all warnings and instructions marked on the product.
3. Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
4. Do not use this product near water; for example, near a bath tub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool.
5. Do not place this product on an unstable cart, stand, or table. The product may fall, causing serious damage to the product.
6. Slots and openings in the cabinet and the back or bottom are provided for ventilation, to protect it from overheating, these openings must not be blocked or covered. The openings should never be blocked by placing the product on the bed, sofa, rug, or other similar surface. This product should never be placed near or over a radiator or heat register. This product should not be placed in an enclosed environment unless proper ventilation is provided.
7. Do not allow anything to rest on the power cord. Do not locate this product where the cord will be abused by animals or persons walking on it.
8. Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.
9. Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short out parts that could result in a risk of fire or electric shock. Never spill liquid of any kind on the product.
10. To reduce the risk of electric shock, do not disassemble this product, but take it to a qualified serviceperson when service or repair work is required. Opening or removing covers may expose you to dangerous voltages or other risks. Incorrect re-assembly can cause electric shock when the appliance is subsequently used.
11. Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
  - A. When the power supply cord or plug is damaged or frayed.
  - B. If liquid has been spilled into the product.
  - C. If the product has been exposed to rain or water.
  - D. If the product does not operate normally by following the operating instructions. Adjust only those controls, that are covered by the operating instructions because improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal operation.
  - E. If the product has been dropped or the cabinet has been damaged.
  - F. If the product exhibits a distinct change in performance.
12. Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
13. Do not use the telephone to report a gas leak while near the leak.

**SAVE THESE INSTRUCTIONS**

# IMPORTANT CORDLESS TELEPHONE INFORMATION

G

## INTERFERENCE INFORMATION

Notice: This cordless telephone uses radio communications between the handset and the base unit, and may not ensure privacy of communication. Other devices including other cordless telephones may interfere with the operation of this cordless telephone or cause noise during operation. Cordless telephone equipment generates and receives radio waves and, if not installed and used properly, may pick up interference.

To prevent interference:

Avoid locations such as heating appliances, electrical equipment (e.g., fluorescent lamp, TV, radio, refrigerator, computer), places subject to direct sunlight, excessive dust, moisture, vibration, etc.

Locate the base unit in a high place in the house (such as the second floor) in order to receive the most effective communication range. Fully extend the base unit antenna. Telephones must not cause interference to any licensed radio service.

## WARNING

To prevent fire or shock hazard, do not expose the set to rain or moisture.

To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.

## CAUTION

1. Use batteries only intended for recharging. Use only the following battery pack:  
Nickel-Cadmium Rechargeable, 3.6 volts, 600 mAh.
2. Do not dispose of the battery in a fire. The cell may explode. Check with local codes for special disposal instructions.
3. Do not open or mutilate the battery. Released electrolyte is corrosive and may cause damage to the eyes or skin. It may be toxic if swallowed.
4. Exercise care when handling the battery in order not to short the battery with conducting materials such as rings, bracelets, and keys. The battery or conductor may overheat and cause burns.



Ni-Cd

CONTAINS: NICKEL-CADMIUM  
RECHARGEABLE BATTERY.  
MUST BE RECYCLED OR  
DISPOSED OF PROPERLY.

## CHARGE THE HANDSET BATTERY BEFORE USING THE CORDLESS TELEPHONE

The battery loses its charge during shipping and storage. Be sure to charge the battery before you use the CP-750 cordless telephone. Place the handset in the base unit. The CHARGING INDICATOR on the base will light. Leave the handset in the base unit for 12-15 hours.


## DIGITAL SECURITY CODE

The Digital Security Coding System automatically resets a new personal security code, to one of over 64,000 combinations, every time you return the CP-750 handset to the base unit. (Whenever the handset is returned to the base unit, you will hear a beep.) The security code prevents unauthorized use of your telephone line, false rings and false dialling.

**3** PLUG the AC Adapter into an electrical wall outlet. Place the handset (with battery pack installed) in the cradle.

**4** Turn on the power on the TONE/PULSE SWITCH.

**5** Pick up the handset and dial the number to be called.

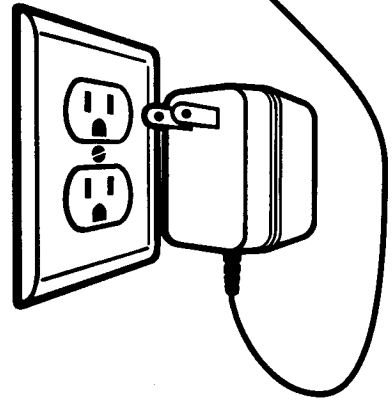

3482-920-0-01

# REFERENCIA RÁPIDA

## INSTALACIÓN

**1** ENCHUFAR el adaptador de corriente en un enchufe de pared. Colocar el auricular (con la pila instalada) en el soporte.

**2** Encender el interruptor de TONOS/PULSOS.

**3** Levantar el auricular y marcar el número que desea llamar.

**4** Operar el teléfono como se muestra.

**5** Colgar el auricular para terminar la llamada.

## USO EN PARED O ESCRITORIO

Se incluye un soporte para empotrado en pared si se desee. Enrolle en forma apretada el cordón telefónico al rededor de las cuatro guías en la parte interior del soporte para empotrado. Haga pasar el cordón telefónico a través del orificio en el centro del soporte. Vea el dibujo. El auricular puede ser cargado en la posición mirando hacia afuera o boca abajo, aún si se ha empotrado en la pared.

## INTERRUPTOR SELECTOR TONOS/PULSOS

Este interruptor le indica a su CP-750 que la marcación de números es a través de tonos o por pulsos de acuerdo al tipo e servicios que tenga de su compañía de servicios telefónicos. Su CP-750 es empacado con el interruptor TONE/PULSE (Tonos/Pulsos) en la posición para operación por tonos "TONE." Si usted no tuviera servicio telefónico por tonos, cambie el interruptor a la posición PULSE (Pulsos) en la parte posterior de la base para carga.

- TONE** = para servicio telefónico por tonos
- PULSE** = para servicio telefónico por pulsos

## TIMBRE ENCENDIDO/ APAGADO "ON/OFF"

Su CP-750 es empacado con los interruptores para el timbre en la base y el auricular en la posición encendido (ON). A su gusto, usted puede tener apagados o encendidos los timbres de su CP-750.

## ¡IMPORTANTE! CARGUE COMPLETAMENTE LA PILA DEL AURICULAR DE 12 A 15 HORAS ANTES DE USAR EL TELEFONO

El desempeño de la pila es determinado por la duración del primer ciclo de carga. Si usted se precipita a usar su teléfono antes de que la pila haya cargado completamente, usted reducirá el tiempo efectivo de uso por carga de su teléfono.

Instale la pila y conecte el teléfono como se muestra, luego coloque el auricular en la base para cargar, con las teclas de números hacia abajo. El INDICADOR DE CARGA (CHARGE INDICATOR) en la base se encenderá. Deje el auricular en la base de 12 a 15 horas.

The last number entered will be deleted. Press **DELETE** and the last number entered will be erased.

**2** After you have successfully entered the send number you wish to dial, press **SEND**. The CP-750 will dial the number.

## REDIAL

The CP-750 remembers the last number you dialed. The redial memory will hold up to 32 digits. Every time you dial a new telephone number, the redial memory is updated with that new number.

**1** Press **TALK** and wait for a dial tone.

**2** Press **REDIAL**.

## REDIAL WHEN BUSY

If you receive a busy signal after placing a call and you wish to try again immediately, there is no need to hang up the phone.

**1** Press **REDIAL** while hearing a busy signal and the CP-750 will automatically hang up, reconnect, and dial the number again.

## DISPLAY REDIALING

Display Redialing allows you to view the contents of the redial memory before dialing. This is useful if you aren't sure what number was last dialed on the CP-750.

**1** Make sure the unit is in "Standby" mode. Press **REDIAL**. You will be able to view the last 15 digits of the last number dialed.

**2** Press **SEND** to dial.

## PAGING THE HANDSET FROM THE CHARGING CRADLE

**1** Press **PAGE** on the charging cradle. The base unit will issue beeps to confirm that the paging signal to the HS has been enabled. You will hear the handset ring.

### NOTE:

- Charge the battery for 12-15 hours before using.
- If **BATTERY** is pressed while the handset is in the cradle, "CHARGING" will appear in the LCD.

## LOW BATTERY INDICATOR

The CP-750 will automatically detect a low battery. If this happens, you will hear a double beep, and the "LOW BATTERY" display will appear.

If the Low Battery indicator appears while you are talking on the CP-750, you may only have a few minutes left before the battery discharges completely, in which case you will be disconnected. To prevent this, simply pick up an extension phone and place the CP-750 back in the charger. Place the handset in the charger for 12 - 15 hours to recharge the battery.

### NOTE:

- The battery can be recharged many times, but if you get a low battery indication even after 12-15 hours of charging, you should replace the battery pack. See the Accessories order form to purchase a battery pack.

## OUT OF RANGE ALARM

The CP-750 cordless handset operates like any other cordless handset. You can use it in the yard, at the pool, at the mailbox, or any place within the operating range of the charging cradle. If you move out of the charging cradle's operating range, you may hear a triple beep warning tone and/or static interference. Move closer to the charging cradle to deactivate the alarm and prevent disconnection. If you remain out of range for too long, the CP-750 will disconnect from the line.

If the handset loses its security code, you will also hear an alarm tone. To reset this security code, place the handset in the charging cradle for a few seconds. Pick up the handset and try your call again.

Interference from other appliances may also cause the alarm to sound. To prevent interference, move the charging cradle to another location and raise its antenna.

memory.

If the handset is in the charger, "NEW CALLERS" will appear on the display. This message will stay on the screen and go away after you review the stored Caller ID information.

The NEW CALLS count in the LCD indicates all CPID records not yet viewed. The NEW CALLS INDICATOR on the base will flash slowly until you have reviewed all your stored Caller ID records.

**NOTE:**

- If the handset is out of the cradle, the LCD screen will only say <NEW CALLERS> for 5 seconds and then go blank. It will say <NEW CALLERS> again if put back into the charging cradle.

## REVIEWING STORED CALLER ID INFORMATION

If you received calls while you were away from your CP-750, you can retrieve the stored Caller ID entries from memory. CPID records can also be viewed and scrolled while off-hook (while you are on an active call).

- 1** Press **CALLER ID**. The entry for the most recently received call will be displayed.

The name will be displayed on the top line, the number on the second line, and the time and date of that call will be displayed on the third line of the display (all information is displayed at once). The word NEW indicates that this is a new caller ID record. The word NEW will be displayed for each record that is being viewed for the first time. The two digit number (example "22") in the lower right corner of the display indicates that N Johnson is your most recent caller and it is your twenty-second call. This helps you keep track of how many entries are currently stored in your CP-750.


- 2** Use the **DOWN** or **UP ARROW KEY** to see the other entries. **DOWN** scrolls through older records and **UP** scrolls the opposite direction.

## "BLOCKED" AND "UNAVAILABLE" MESSAGES


If a caller chooses to partially or completely "block" Caller ID information, a message will appear on the display indicating that the name and/or phone number has been blocked. If, for

## DELETING INDIVIDUAL CALLER ID ENTRIES

Specific Caller ID entries may be deleted.

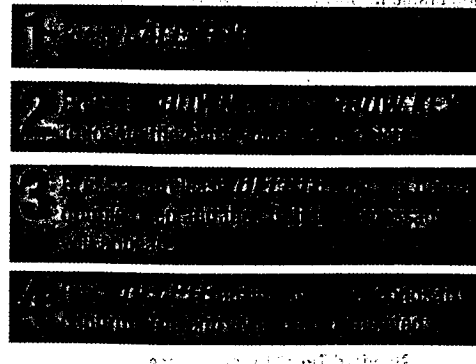

## DELETING ALL CALLER ID INFORMATION

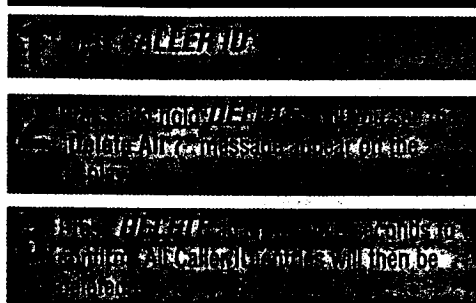

## USING THE CORDLESS PHONE WITHOUT CALLER ID

If you do not subscribe to a Caller ID service, you can still benefit from most of the CP-750's advanced features. However, you should be aware of the following:

1. Pressing **CALLER ID** will simply display the "NO CALLS" message
2. The Call Waiting Caller ID and Outside Line program options will have no effect.

**NOTE:**

- Certain sounds and voice pitches may occasionally cause the CP-750 to incorrectly "think" that the local phone company is sending Call Waiting Caller ID information. Although no Caller ID data will show up on the display, the CP-750 may mute the phone line for a second or so. To prevent this annoyance, simply make sure that the Call Waiting Caller ID program option is set to "OFF".

then the number you wish to redial.

## USING AUTODIAL

**1** Press **AUTODIAL**. (You may press **TALK** first if you wish. Autodial can be dialed from off hook mode or on hook mode). If phone numbers are programmed into the autodial memory, the first programmed number will appear in the display.

**2** Press the **DOWN** or **UP ARROW KEY** to select an autodial number.

**3** When you locate the number, press **SEND** to dial it. The CP-750 will automatically dial the number on the display.

### NOTE:

- If no button is pressed for 30 seconds during viewing of autodial records the LCD will time-out to a blank display.

## A FASTER WAY TO USE THE AUTODIALER

If you know the autodial number (01 - 20) of the name and number that you wish to call, you can enter it directly.

**1** For example, if you know that the name and number of the person you are calling are stored in autodial 06 just press **AUTODIAL**, "6", **SEND**. The CP-750 will then establish a dial tone and dial the number.

## EDITING AUTODIAL ENTRIES

**1** Press **PROGRAM**.

**2** Press the **UP ARROW KEY** three times or the **DOWN ARROW KEY** five times (or just press **AUTODIAL**).

## ERASING ALL AUTODIAL NAMES AND NUMBERS

**1** Press **PROGRAM**.

**2** Press **AUTODIAL**.

**3** Press **DELETE** to confirm. All autodial entries are deleted.

## TRANSFER CALLER ID TO AUTODIAL MEMORY

This feature allows you to transfer a phone number from Caller ID memory directly into the Autodial Memory. This saves you time and eliminates the chance of entering an incorrect phone number into memory. You can even edit the name and number before you complete the transfer.

**1** Press **PROGRAM**.

### NOTE:

- If you make a mistake or change your mind at any time during this procedure, simply press **PROGRAM** again to quit.

**2** Press **AUTODIAL**. You will see 01 flashing in the top right hand corner of the display. (The rest of the display may or may not be blank depending on the current contents of the display.)

**3** Use the **LEFT** or **RIGHT ARROW KEY** to select the autodial location where you wish to transfer the Caller ID number. (Again, the rest of the display may or may not be blank. If it is not blank, the contents of this location will be written over once you complete the transfer.)

**4** Press **CALLER ID**. The most recently received Caller ID entry will appear in the display.

## PROGRAM OPTION 2: DEFAULT VOLUME SETTING

Every time the **TALK** key is pressed, the handset will start out with the factory set default volume setting or the volume level you program here.

- 1 Press **PROGRAM**.
- 2 Press the **UP ARROW KEY** twice. The "DEFAULT VOLUME" display will appear.
- 3 Use the **LEFT** or **RIGHT ARROW KEY** to adjust the default handset volume level.
- 4 Press **PROGRAM** again to finish.

## PROGRAM OPTION 4: LOCAL AREA CODE SETTING

The CP-750 can make returning phone calls easier for users who reside in a 7-digit dialing area by automatically dialing stored Caller ID numbers. In order for this feature to work correctly, it is necessary to program your local area code into the unit.

- 1 Press **PROGRAM**.
- 2 Press the **UP ARROW KEY** four times. The "Area Code" program display will appear. (000 is the factory default setting).
- 3 Use the keypad to enter the three digits of your local area code.
- 4 Press **PROGRAM** again to finish.

If you have the 10 or 11 digit dialing system in your area, leave the area code setting at 000. The CP-750 will prompt you to choose between 7, 10, or 11-digit dialing each time you make a caller ID call.

- 1 Press **PROGRAM**.
- 2 Press the **UP ARROW KEY** twice. The "Help" display will appear.
- 3 Use the **LEFT** or **RIGHT ARROW KEY** to switch between the two help modes.
- 4 Press **PROGRAM** again to finish.

## PROGRAM OPTION 7: ON-SCREEN HELP

Two modes of on-screen help are available while you program the CP-750. These are:

1. **Automatic Help**  
A help message will automatically scroll across the screen whenever you wait 15 seconds without pressing a key. If you do not wish to wait 15 seconds, you can always see the help message immediately by pressing the **SEND** key.
2. **"SEND key" Help**  
The help messages (with the exception of the initial message) will not appear unless you press the **SEND** key.

### NOTE:

- In either mode, you can stop the help message at any time by pressing any key.

## TO CHANGE THE HELP OPTION

- 1 Press **PROGRAM**.
- 2 Press the **UP ARROW KEY** four times. The "Help" display will appear.
- 3 Use the **LEFT** or **RIGHT ARROW KEY** to switch between the two help modes.
- 4 Press **PROGRAM** again to finish.

OR

**1** If you have new caller ID entries from recent unanswered calls, it will show the "NEW CALLERS" message with the number of new callers at the lower far right of the display screen. Press **CALLER ID** to view the names and numbers of "New Callers"

NOTE:

- If the handset is in "Standby Mode" but not in the charging cradle, the display will go blank after a short time to conserve battery power.

## TO PLACE A CALL

**1** Pick up the handset and press **TALK**. The following display will be briefly shown. This display indicates that the handset is establishing contact with the charging cradle.

SCANNING CHANNELS...

**2** If you have an established line, this example shows the current channel number and available channels in your area. Wait for dial tone and dial the phone number. The number will appear in the display as you dial.

VOLUME ■■■■  
CH03

NOTE:

- The LINE IN-USE INDICATOR on the charging cradle lights solid to show the handset is in use.

## TO END A CALL

**1** Press **TALK** to return the handset to the charging cradle.

NOTE:

- When you return the handset to the charging cradle, you are hanging up the phone and returning to Standby Mode. The CP-750 is now ready to receive a call and the **CHARGING INDICATOR** lights solid to show that the battery is charging.

## IF YOU MISDIALED A NUMBER

**1** Press **RIGHT ARROW** to redial the number.

## TO RECEIVE A CALL

**1** When you pick up the cordless handset, the display will briefly show "SCANNING CHANNELS" and "VOLUME". Speak

**2** Press **TALK** on the handset or **CALLER ID** on the charging cradle.

## HANDSET VOLUME CONTROL

Whenever the CP-750 is in "Talk" mode, the handset volume will be displayed.

**1** Press **RIGHT ARROW KEY**

When the CP-750 detects a modem in use on the line to which it is connected, the Modem Monitor™ feature prevents the CP-750 from going off-hook. When you attempt to make a call on the CP-750 and a modem is connected, you will hear the modem data through the handset. The data you hear is protected from interruption. The MODEM MONITOR™ INDICATOR on the base will flash slowly and when you attempt to go off-hook the handset will display:

MODEM IN USE

NOTE:

- If you wish to override Modem Monitor™ after pressing **TALK** you can do so by pressing **9**. (You may also need to manually deactivate the modem activity at your computer or fax machine.)

## CALL TIMER

About 10 seconds after you enter "Talk" mode, a Call Timer will appear on the display. The timer will automatically be reset whenever you place a new call.

NOTES:

- The length of time shown on the display is intended only to be an estimate duration of a phone call. CASIO PHONEMATE makes no guarantees regarding the accuracy of this timer.
- The Call Timer will not be disrupted if **HOLD** is pressed. The Hold timer (5 minute count down timer) will display and the Call Timer will continue, hidden from view, during any Hold mode.

## LAST CALL TIME DISPLAY

Press the **RIGHT ARROW (CHANNEL) KEY** to view the approximate length of the last call after you have hung up the phone.

## CHANGING CHANNELS MANUALLY

After **TALK** is pressed, the CP-750 selects the best of 40 available channels in your area. If you hear noise or interference while using the CP-750, press **CHANNEL** on the handset to change channels.

## FLASH/CALL WAITING

**1** If you subscribe to a call waiting service and you receive another call while using the phone, press **FLASH** to answer the second call. To return to the first call, press **FLASH** again.

**FLASH** may also be used on a business phone system (CENTREX, PBX) for transferring calls.

## HOLD

You may place a call on hold while using the cordless handset.

**1** Press **HOLD** to place a call on hold. The **TALK INDICATOR** will flash slowly.

NOTE:

- You can place a call on hold for up to 5 minutes. During **HOLD**, do not return the handset to the charging cradle. Doing so will disconnect the caller.





### Blocked or Unavailable Caller ID Message

If a caller chooses to partially or completely "block" Caller ID information, a message will appear on the display indicating that the name and/or phone number has been blocked. If, for any other reason, the name and/or number information is currently not available from your local phone company, an "Unavailable" message will appear on the display. The time and date information for the call will be recorded into the CP-750's memory.

### Local Area Code Setting

If you live in a 7 digit dialing area and you program your local area code into the unit, the CP-750 can make returning phone calls easier by automatically dialing stored Caller ID numbers. If you live in a 10 or 11 digit dialing area, leave this setting at 000.

### Call Waiting Caller ID does not work

1. You must subscribe to the combined package service Call Waiting Caller ID from your local telephone company to use this feature. Simply subscribing to Call Waiting and Caller ID may not be sufficient to receive incoming Caller ID information while you are on the line.
2. Turn the CP-750's Call Waiting Caller ID option on.

### LINE IN USE INDICATOR lights yet the handset or extension phone are not in use

The telephone cord is not properly plugged in. Connect one end of the telephone cord to the wall jack and connect the other end of the telephone line cord to the back of the CP-750.

### No sound from the handset

Check the **VOLUME CONTROL**. It may have been programmed to a low level.

### No Dial Tones heard when calling out

1. Was the battery pack charged for at least 12-15 hours? Does "Low Battery" appear on the display?
2. Check the AC adaptor and telephone cord connection at the charging cradle and wall outlet.
3. Check the connection of the battery pack.

### The handset does not ring

1. Check the ringer switch on the side of the handset and make sure it is not set to "OFF".
2. Check AC adaptor and telephone cord connection at the charging cradle and wall outlet.
3. Was the battery pack charged for at least 12-15 hours? Does "Low Battery" appear on the display?

### The "Line Error" message occasionally appears

The "Line Error" message may occasionally appear due to electrical static on the telephone line. This is normal. However, if you consistently see this message when you should be receiving Caller ID data (i.e. between the first and second rings), you may have a problem with your phone line. Contact your local telephone company.

### The beep tones are a warning alarm to let you know:

1. That the handset is out of communication range with the charger cradle. Move the handset closer to your charger cradle.
2. That the charger cradle had some problem like a power failure. Return the handset to the charger cradle for 5 seconds and make sure all cords are connected correctly.

### The handset is too far from the charger cradle

1. The handset is too far from the charger cradle.
2. The cordless handset is picking up interference from one of several sources: electrical appliances such as radio, TV, fluorescent lights, etc. Move the charger cradle to reduce interference.
3. Press **CHANNEL** to select another channel.
4. Raise the charging cradle antenna.

### Check the AC ADAPTER and telephone cord connection

1. Check the AC ADAPTER and telephone cord connection.
2. You may have had a power failure. Return the handset to the charger cradle for 5 seconds to reset the Digital Security Code.

### The handset is updating the security code

This is normal operation. The handset is updating the security code.

### Unplug the AC ADAPTER PLUG from the back of the CP-750 for 10 seconds

Unplug the AC ADAPTER PLUG from the back of the CP-750 for 10 seconds. Remove the battery from the handset. Plug the AC ADAPTER back into the charging cradle and re-insert the battery in the handset. Return the handset to the charger cradle for 10 seconds.

If these actions do not remedy the problem, call the CASIO PHONEMATE Helpline. The Helpline staff can often resolve problems or recommend service when needed.

## ROOTING

Unless you live close to a CASIO PHONEMATE Service Center, you may need to mail your telephone and charging cradle to CASIO PHONEMATE for repair. You should:

1. Package the unit in its original box or a comparable protective package.
2. Include a clear and specific written explanation of the problem.
3. Include your name, address, and phone number.
4. Provide a legible photocopy of the dated store receipt for warranty purposes.

Should you have additional questions, please call the CASIO PHONEMATE Helpline at (310) 320-9810 (from 8:00 am. to 4:00 p.m. Pacific Standard Time) for assistance.



Design and specifications are subject to change without notice.

CASIO PHONEMATE, INC.  
20665 Manhattan Place, Torrance CA 90501  
Internet web site address: <http://www.CASIOPHONEMATE.com>

M1S1 3/99  
Printed in Malaysia

## WARRANTY

### IMPORTANT! SALES SLIP OR EVIDENCE OF PURCHASE DATE REQUIRED

This limited warranty gives you specific legal rights; you may also have other rights which vary from state to state. The limited warranty is extended only to the original consumer of a CASIO PHONEMATE product and is valid only with respect to consumers within the United States of America and Canada. Should this product prove defective by reason of improper workmanship or material during the period of one (1) year from the date of original purchase, CASIO PHONEMATE will repair or, at its option, replace the product without charge for parts or labor. If CASIO PHONEMATE elects to replace the product, such replacement may be accomplished with a factory-reconditioned unit.

This limited warranty does not apply: (a) to any product damaged by accident, misuse, improper line voltage, lightning, fire, water, or other acts of nature, (b) if the product is altered or repaired by anyone other than CASIO PHONEMATE, INC. or one of its authorized warranty stations or (c) if the FCC-approved connector plugs are removed. This limited warranty does not cover broken or marred cabinets.

Except to the extent prohibited by applicable law, all implied warranties made by CASIO PHONEMATE in connection with this product are limited in duration to a period of one (1) year from the date of original purchase, and no warranties, whether expressed or implied, shall apply to this product after said period.

Should this product prove defective in workmanship or material, the consumer's sole remedies shall be such repair or replacement as is herein-above provided. Under no circumstances shall CASIO PHONEMATE be liable for any loss or damage, direct, consequential, or incidental arising out of the use of or inability to use this product.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusion may not apply to you.

In order to obtain warranty service, you must provide evidence of purchase date. For your convenience, keep the dealer's dated bill of sale or delivery ticket as evidence of the purchase date.

Before returning or exchanging your product, call CASIO PHONEMATE's Helpline at (310) 320-9810.

# FCC REQUIREMENTS USER INSTRUCTIONS

1. This equipment complies with Part 68 of the FCC rules. On the bottom of this equipment is a label that contains, among other information, the FCC registration number and Ringer Equivalence Number (REN) for this equipment. If requested, provide this information to your telephone company.
2. The REN is useful to determine the quantity of devices you may connect to your telephone line and still have all of those devices ring when your number is called. In most, but not all areas, the sum of the RENs of all devices should not exceed five (5.0). To be certain of the number of devices you may connect to your line, as determined by the REN, you should call your local telephone company to determine the maximum REN for your calling area.
3. If your answering machine causes harm to the telephone network, the telephone company may discontinue your service temporarily. If possible, they will notify you in advance. But if advance notice is not practical, you will be notified as soon as possible. You will be advised of your right to file a complaint with the FCC.
4. Your telephone company may make changes in its facilities, equipment, operations, or procedures that could affect the proper operation of your equipment. If they do, you will be given advance notice so as to give you an opportunity to maintain uninterrupted service.
5. If there is a problem with this unit, the telephone company may ask you to disconnect this equipment from the network until the problem has been corrected or you are sure that the equipment is not malfunctioning.
6. Repairs can only be made by the manufacturer or an authorized service agency. Unauthorized repairs void registration and warranty. Contact seller or manufacturer for details of permissible user-performed routine repairs, and where and how to have other than routine repairs made.
7. This equipment may not be used on coin service provided by the telephone company. Connection to party lines is subject to state tariffs. (Contact your state public utility commission or corporation commission for information.)

Jack: RJ11 Ringer Equivalence: See bottom/underside of the CP-750 base unit.  
CASIO PHONEMATE, Inc. 20665 Manhattan Place, Torrance, CA 90501

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any changes made by the user not approved by CASIO PHONEMATE can void the user's authority to operate the equipment. This product is hearing aid compatible.