


INITIAL SETUP

WALL/DESK USE

A wall mount bracket is included and can be installed if needed. Tightly coil the telephone cord around the four guides on the inside of the wall mounting bracket. Pull the telephone cord through the center opening on the wall mounting bracket. Refer to the drawing. The handset can be charged face out or face down, even when wall mounted.

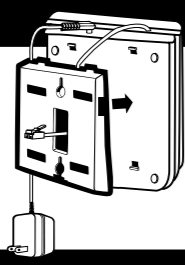

TONE/PULSE SWITCH

This switch tells the CP-750 to dial out with either touchtone or pulse signals to match the service you have with your local telephone company. The CP-750 is shipped with the **TONE/PULSE SWITCH** in the TONE position. If you do not have touchtone service, set the switch to pulse on the back of the charging cradle.

TONE = for Touchtone systems
PULSE = for Rotary dialing or Pulse systems



RINGER ON/OFF

The CP-750 is shipped with the base and handset RINGER ON/OFF SWITCHES in the ON position. You can independently set the ringers of the CP-750 to ON or OFF.

CALL WAITING & CALLER ID

CALLER ID SERVICE OPTIONS

You must subscribe to a Caller ID service (available from most local telephone companies) in order to receive Caller ID information. Most Caller ID services offer the following two options:

- Standard Caller ID with name and number**
The name, phone number and local time (if available) of the incoming call are received after your phone rings.
- Call Waiting Caller ID with name and number**
The name, phone number and local time (if available) of the incoming call are received after your phone rings. If you are on the phone and receive another call, you will hear a tone, telling you there is a call waiting. The Call Waiting Caller ID information will appear on the display.

NOTE:

The display illustrations in the remainder of this section are presented with the assumption that your Caller ID service provides both name and number. If you have a number-only service, the name will be blank.

ANSWERING CALLER ID CALLS

When you receive a call, the CP-750 will receive the Caller ID information from your phone company within the first two rings. Caller ID information will display even if the ringer is set to off.

When all of the data is received, you will hear a low-high confirmation tone and the Caller ID information will appear on the display:



- Once you hear the confirmation tone, you can press **TALK** to answer the call and automatically retain all the Caller ID information received.

NOTE:

If you press TALK before you hear the Caller ID confirmation tone, the Caller ID information for that call will be lost.

ANSWERING CALL WAITING CALLER ID CALLS

If you subscribe to a Call Waiting Caller ID service with your telephone company, the CP-750 can receive a Caller ID call while you are on the line with another party.

- If a second call comes while you are on the phone, your CP-750 will beep.
- You can now view the LCD screen to see the name and number of the incoming caller. You can decide whether to answer the second call or ignore it and continue with the first call.

- If you choose to take the second call, press **FLASH** to answer it.

- You may continue to press **FLASH** to switch between the two calling parties indefinitely.

SAVING CALLER ID INFORMATION

The CP-750 automatically saves up to 50 Caller ID entries. Any Caller ID information (name, phone number, date, time) that is transmitted will be stored for your reference or use in the autodialer and redial memory.

All Caller ID names and numbers are stored in reverse order of receipt (last call is displayed as highest memory number.) If the memory becomes full, the newest entries will be saved and the oldest ones will be erased.

any other reason, the name and/or number information is currently not available from your local phone company, an "Unavailable" message will appear on the display. The time and date information for the call will still be recorded into the CP-750's memory.

DIALING STORED CALLER ID NUMBERS

The CP-750 allows you to place calls using stored Caller ID information.

- Press **CALLER ID**. (You may press **TALK** first if you wish. Caller ID can be dialed from off hook mode or on hook mode).
- Locate the desired numbers by scrolling through saved Caller ID information using the **DOWN** or **UP ARROW KEY**. (Holding down the DOWN or UP ARROW KEYS will automatically fast scroll through Caller ID records).
- Press **SEND**.
- If your area code is set to 000 in the CP-750 the LCD will display the first of the three different dialing options. Press the **UP** or **DOWN ARROW KEY** to view the rest of the dialing options. Select one of the three dialing options and press **SEND** again.

- The CP-750 will automatically establish a dial tone and place the call.

NOTE:

If you have programmed your local area code into the CP-750 before using this feature then the CP-750 will not prompt you for different dialing options. See "Programming the CP-750" for more information. If no button is pressed for 30 seconds during viewing of Caller ID information the LCD will time-out to a blank display.

TOLL CALL INDICATOR

A globe icon in LCD indicates a Caller ID telephone number record which may result in a toll charge if dialed out.

NOTE:

CASIO PHONEMATE makes no guarantees regarding the accuracy of this toll call indicator.

DELETING INDIVIDUAL CALLER ID ENTRIES

Specific Caller ID entries may be deleted.

- Press **CALLER ID**.
- Press the **DOWN** or **UP ARROW KEY** to locate the entry you wish to delete.
- Press and release **DELETE**. You will hear a double beep and the "Delete ?" message will appear.
- Press **DELETE** again within 5 seconds to confirm. The entry will then be deleted.

DELETING ALL CALLER ID INFORMATION

All Caller ID information will be deleted.

- Press **CALLER ID**.
- Press and hold **DELETE** until you see the "Delete All ?" message appear on the display.
- Press **DELETE** again within 5 seconds to confirm. All Caller ID entries will then be deleted.

USING THE CORDLESS PHONE WITHOUT CALLER ID

If you do not subscribe to a Caller ID service, you can still benefit from most of the CP-750's advanced features. However, you should be aware of the following:

- Pressing **CALLER ID** will simply display the "NO CALLS" message
- The Call Waiting Caller ID and Outside Line program options will have no effect.

NOTE:

Certain sounds and voice pitches may occasionally cause the CP-750 to incorrectly "think" that the local phone company is sending Call Waiting Caller ID information. Although no Caller ID data will show up on the display, the CP-750 may mute the phone line for a second or so. To prevent this annoyance, simply make sure that the Call Waiting Caller ID program option is set to "OFF".

"BLOCKED" AND "UNAVAILABLE" MESSAGES

If a caller chooses to partially or completely "block" Caller ID information, a message will appear on the display indicating that the name and/or phone number has been blocked. If, for

AUTODIAL

STORING NAMES AND NUMBERS IN AUTODIAL

You may store up to 20 of your most frequently dialed names and numbers into the autodial memory. Autodial names can be up to 16 characters long, and the accompanying phone numbers can be up to 24 digits each.

- Press **PROGRAM**.
- Press **AUTODIAL**.
- Press the **LEFT** or **RIGHT ARROW KEY** to locate a memory location.
- Enter a telephone number on the keypad.
- Press the **UP ARROW KEY** to move the cursor to the name field.
- Enter the name using the keypad. Pressing a key once displays the first upper case letter on that key. Pressing it repeatedly will cycle through all of the upper and lower case characters on that key. Stop when the desired character appears in the display. The "1" key provides unique characters and icons.
- Press the **RIGHT ARROW KEY** to move the cursor one space to the right.
- Press **AUTODIAL** again when you finish to save the new entry. Nothing will be stored until the **AUTODIAL** key is pressed.
- Press **PROGRAM** to exit the mode.

PROGRAMMING PAUSES IN AUTODIAL

When you are programming numbers into the autodialer, the **HOLD (PAUSE)** key can be used to insert a two-second "pause" (wait period) between digits.

For example, if you need to dial a "9" in order to obtain an outside line, you can use the **PAUSE** key to insert a two second pause for the second dial tone.

- Just press **9**, **PAUSE/HOLD**, and then the number you wish to program.

USING AUTODIAL

- Press **AUTODIAL**. (You may press **TALK** first if you wish. Autodial can be dialed from off hook mode or on hook mode). If phone numbers are programmed into the autodial memory, the first programmed number will appear in the display.
- Press the **DOWN** or **UP ARROW KEY** to select an autodial number.
- When you locate the number, press **SEND** to dial it. The CP-750 will automatically dial the number on the display.

NOTE:

If no button is pressed for 30 seconds during viewing of autodial records the LCD will time-out to a blank display.

A FASTER WAY TO USE THE AUTODIALER

If you know the autodial number (01 - 20) of the name and number that you wish to call, you can enter it directly.

- For example, if you know that the name and number of the person you are calling are stored in autodial 06 just press **AUTODIAL** *6* **SEND**. The CP-750 will then establish a dial tone and dial the number.

EDITING AUTODIAL ENTRIES

- Press **PROGRAM**.
- Press the **UP ARROW KEY** three times or the **DOWN ARROW KEY** five times (or just press **AUTODIAL**).

- Press the **LEFT** or **RIGHT ARROW KEY** to locate the number you wish to edit.

- Press the **UP ARROW KEY**. The entire phone number will flash. When the entire phone number is flashing, entering a number on the keypad will erase the previously stored phone number from the display and replace it.

- If you only wish to change a few digits, press the **LEFT ARROW KEY** to activate the cursor, and then use the **RIGHT** or **LEFT ARROW, DELETE**, and **NUMBER** keys to make changes.

- Press the **UP ARROW KEY**. The entire name will now flash. As in the previous step, entering a number key (for a character entry) at this point will erase the flashing name from the display and replace it.

- If you only wish to change a few letters, press the **RIGHT ARROW KEY** to activate the cursor, and then use the **RIGHT** or **LEFT ARROW, DELETE**, and **NUMBER** keys to make changes.

- Press **AUTODIAL** once the correct information is entered and your changes will be saved.

- Press **PROGRAM** to exit the programming mode.

ERASING AUTODIAL NAMES AND NUMBERS

- To erase numbers in autodial, press **AUTODIAL**.
- Press the **DOWN** or **UP ARROW KEY** to find the autodial name and number you wish to erase.
- Press and release **DELETE**. "DELETE ?" will appear in the display.
- Press **DELETE** again within 5 seconds to confirm. The entry will then be deleted.

ERASING ALL AUTODIAL NAMES AND NUMBERS

- If you wish to delete all Autodial names and numbers, press **AUTODIAL**.
- Press and hold **DELETE** until "DELETE ALL?" appears in the display.
- Press **DELETE** again within 5 seconds to confirm. All autodialer entries will then be deleted.

TRANSFER CALLER ID TO AUTODIAL MEMORY

This feature allows you to transfer a phone number from Caller ID memory directly into the Autodial Memory. This saves you time and eliminates the chance of entering an incorrect phone number into memory. You can even edit the name and number before you complete the transfer.

- Press **PROGRAM**. The "PROGRAM MODE" display will flash on the screen.
 - If you make a mistake or change your mind at any time during this procedure, simply press **PROGRAM** again to quit.
- Press **AUTODIAL**. You will see 01 flashing in the lower right-hand corner of the display. (The rest of the display may or may not be blank, depending on the current contents of location #1).
- Use the **LEFT** or **RIGHT ARROW KEY** to select the autodial location where you wish to transfer the Caller ID number. (Again, the rest of the display may or may not be blank. If it is not blank, the contents of this location will be written over once you complete the transfer.)
- Press **CALLER ID**. The most recently received Caller ID entry will appear in the display.

- Use the **DOWN** or **UP ARROW KEY** to select the Caller ID entry you wish to save.

- You can either save the entry exactly as it appears, or you can edit the name and/or number. To save the entry without any editing, just press **AUTODIAL**. To edit the entry, press the **UP ARROW KEY** and proceed as described in the "TO EDIT AUTODIAL ENTRIES" section.

- When you are finished, press **PROGRAM** to exit "Program" mode.

PROGRAMMING THE CP-750

PROGRAMMING OPTIONS

- Ringer Tone
- Default Volume Setting
- Autodialer (see section)
- Local Area Code Setting
- Outside Line
- Call Waiting Caller ID
- On-Screen Help

NOTE: If no button is pressed for 30 seconds during programming functions the LCD will time-out to a blank display.

PROGRAM OPTION 1: RINGER TONE

You can select one of 4 ringer tones for the CP-750.

- Press **PROGRAM**.
- Press the **UP ARROW KEY** once. The words "RINGER TONE" and its current setting (1-4) will be displayed.
- Press the **LEFT** or **RIGHT ARROW KEYS** to select a ringer tone. The CP-750 will ring once to confirm the tone you have selected.

- Press **PROGRAM** again to finish.

PROGRAM OPTION 2: DEFAULT VOLUME SETTING

Every time the **TALK** key is pressed, the handset will start out with the factory set default volume setting or the volume level you program here.

- Press **PROGRAM**.
- Press the **UP ARROW KEY** twice. The "DEFAULT VOLUME" display will appear.
- Use the **LEFT** or **RIGHT ARROW KEY** to adjust the default handset volume level.

- Press **PROGRAM** again to finish.

PROGRAM OPTION 4: LOCAL AREA CODE SETTING

The CP-750 can make returning phone calls easier for users who reside in a 7-digit dialing area by automatically dialing stored Caller ID numbers. In order for this feature to work correctly, it is necessary to program your local area code into the unit.

- Press **PROGRAM**.
- Press the **UP ARROW KEY** four times. The "Area Code" program display will appear. (000 is the factory default setting).
- Use the keypad to enter the three digits of your local area code.

- Press **PROGRAM** again to finish.

If you have the 10 or 11 digit dialing system in your area, leave the area code setting at 000. The CP-750 will prompt you to choose between 7, 10, or 11-digit dialing each time you make a caller ID call.

TRANSFER REDIAL NUMBER TO AUTODIAL MEMORY

This feature allows you to transfer a phone number from the Redial Memory directly into the Autodial Memory. If you wish, you can add a name before you complete the transfer.

- Follow steps 1-3 under "TRANSFER CALLER ID TO AUTODIAL MEMORY".
- Press **REDIAL**. The contents of the Redial Memory will appear in the display.
- Follow steps 6-7 under "TRANSFER CALLER ID TO AUTODIAL MEMORY" to edit and save your autodial entry.

PROGRAM OPTION 5: OUTSIDE LINE

If your telephone system requires that you enter an extra digit in order to obtain an outside line, the CP-750 can dial this digit for you automatically whenever you dial a stored Caller ID number. This may be useful if you use your CP-750 at a business that uses a PBX telephone system.

- Press **PROGRAM**.
- Press the **UP ARROW KEY** five times. The "Outside Line" display will appear.

- Use the **LEFT** or **RIGHT ARROW KEY** to select a digit.

- Press **PROGRAM** again to finish.

PROGRAM OPTION 6: CALL WAITING CALLER ID

The Call Waiting Caller ID option is factory preset to "ON." If you do not subscribe to Call Waiting Caller ID, you should set this option to "OFF."

- Press **PROGRAM**.
- Press the **UP ARROW KEY** six times. The "Call Waiting Caller ID" Option display will appear.
- Use the **LEFT** or **RIGHT ARROW KEY** to turn this option ON or OFF.

- Press **PROGRAM** again to finish.

PROGRAM OPTION 7: ON-SCREEN HELP

Two modes of on-screen help are available while you program the CP-750. These are:

- Automatic Help**
A help message will automatically scroll across the screen whenever you wait 15 seconds without pressing a key. If you do not wish to wait 15 seconds, you can always see the help message immediately by pressing the **SEND** key.
- "SEND key" Help**
The help messages (with the exception of the initial message) will not appear unless you press the **SEND** key.

NOTE: In either mode, you can stop the help message at any time by pressing any key.

TO CHANGE THE HELP OPTION

- Press **PROGRAM**.
- Press the **UP ARROW KEY** seven times. The "Help" display will appear.
- Use the **LEFT** or **RIGHT ARROW KEY** to switch between the two help modes.
- Press **PROGRAM** again to finish.

HANDSET / TELEPHONE OPERATION

STANDBY MODE

- The CP-750 is in "Standby" mode whenever it is idle, waiting for a call. If the handset is in the charging cradle, the display will either be blank

OR

- If you have new caller ID entries from recent unanswered calls, it will show the "NEW CALLERS" message with the number of new callers at the lower far right of the display screen. Press **CALLER ID** to view the names and numbers of "New Callers".

NOTE:

If the handset is in "Standby Mode" but not in the charging cradle, the display will go blank after a short time to conserve battery power.

TO PLACE A CALL

- Pick up the handset and press **TALK**. The following display will be briefly shown. This display indicates that the handset is establishing contact with the charging cradle.



- A dial tone will be established. (In this example, CH03 is the current channel number of 40 available channels in your area.) Wait for dial tone and dial the phone number. The number will appear in the display as you dial.



NOTE:

The LINE IN-USE INDICATOR on the charging cradle lights solid to show the handset is in use.

TO END A CALL

- To hang up, press **TALK** or return the handset to the charging cradle.

NOTE:

When you return the handset to the charging cradle, you are hanging up the phone and returning to Standby Mode. The CP-750 is now ready to receive a call and the **CHARGING INDICATOR** lights solid to show that the battery is charging.

IF YOU MISDIALED A NUMBER

- Press **TALK** twice ("off" and "on.") Wait for dial tone and dial the correct number.

TO RECEIVE A CALL

- When the phone rings, pick up the cordless handset and press **TALK**. You will briefly see the "SCANNING CHANNELS" display, followed by the "VOLUME" display. Speak to the caller.

- To hang up, press **TALK** on the handset or return the handset to the charging cradle.

HANDSET VOLUME CONTROL

Whenever the CP-750 is in "Talk" mode, the handset volume will be displayed.

- Press the **DOWN** or **UP ARROW KEY** to adjust the volume.

- When **TALK** is pressed, the handset volume returns to the volume level at which you programmed it (see PROGRAMMING THE CP-750, "Default Volume").

MODEM MONITOR™

When the CP-750 detects a modem in use on the line to which it is connected, the Modem Monitor™ feature prevents the CP-750 from going off-hook. When you attempt to make a call on the CP-750 and a modem is connected, you will hear the modem data through the handset. The data you hear is protected from interruption. The MODEM MONITOR™ INDICATOR on the base will flash slowly and when you attempt to go off-hook the handset will display:



NOTE:

If you wish to override Modem Monitor™ after pressing **TALK** you can do so by pressing 9. (You may also need to manually deactivate the modem activity at your computer or fax machine.)

CALL TIMER

About 10 seconds after you enter "Talk" mode, a Call Timer will appear on the display. The timer will automatically be reset whenever you place a new call.

- The length of time shown on the display is intended only to be an estimate duration of a phone call. CASIO PHONEMATE makes no guarantees regarding the accuracy of this timer.
- The Call Timer will not be disrupted if **HOLD** is pressed. The Hold timer (5 minute count down timer) will display and the Call Timer will continue, hidden from view, during any Hold mode.

LAST CALL TIME DISPLAY

- Press the **RIGHT ARROW (CHANNEL) KEY** to view the approximate length of the last call after you have hung up the phone.

CHANGING CHANNELS MANUALLY

- After **TALK** is pressed, the CP-750 selects the best of 40 available channels in your area. If you hear noise or interference while using the CP-750, press **CHANNEL** on the handset to change channels.

FLASH/CALL WAITING

- If you subscribe to a call waiting service and you receive another call while using the phone, press **FLASH** to answer the second call. To return to the first call, press **FLASH** again.

FLASH may also be used on a business phone system (CENTREX, PBX) for transferring calls.

HOLD

You may place a call on hold while using the cordless handset.

- Press **HOLD** to place a call on hold. The TALK INDICATOR will flash slowly.

NOTE:

You can place a call on hold for up to 5 minutes. During **HOLD**, do not return the handset to the charging cradle. Doing so will disconnect the caller.

- To continue your phone conversation, press **TALK**, **HOLD**, or pick up an extension phone connected to the same line. When the extension phone is picked up, the CP-750 automatically disconnects itself from the line. Extension phone pick-up during HS Hold mode will discontinue the Hold mode, connect the call to the new extension phone, and cause the CP-750 to go idle after a 10-second display time out.

IMPORTANT CORDLESS TELEPHONE INFORMATION

INTERFERENCE INFORMATION

Notice: This cordless telephone uses radio communications between the handset and the base unit, and may not ensure privacy of communication. Other devices including other cordless telephones may interfere with the operation of this cordless telephone or cause noise during operation. Cordless telephone equipment generates and receives radio waves and, if not installed and used properly, may pick up interference.

To prevent interference:

Avoid locations such as heating appliances, electrical equipment (e.g., fluorescent lamp, TV, radio, refrigerator, computer), places subject to direct sunlight, excessive dust, moisture, vibration, etc.

Locate the base unit in a high place in the house (such as the second floor) in order to receive the most effective communication range. Fully extend the base unit antenna. Telephones must not cause interference to any licensed radio service.

WARNING

To prevent fire or shock hazard, do not expose the set to rain or moisture.

To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.

CAUTION

1. Use batteries only intended for recharging. Use only the following battery pack: Nickel-Cadmium Rechargeable, 3.6 volts, 600 mAh.

2. Do not dispose of the battery in a fire. The cell may explode. Check with local codes for special disposal instructions.

3. Do not open or mutilate the battery. Released electrolyte is corrosive and may cause damage to the eyes or skin. It may be toxic if swallowed.

4. Exercise care when handling the battery in order not to short the battery with conducting materials such as rings, bracelets, and keys. The battery or conductor may overheat and cause burns.



CONTAINS: NICKEL-CADMIUM RECHARGEABLE BATTERY. MUST BE RECYCLED OR DISPOSED OF PROPERLY.

CHARGE THE HANDSET BATTERY BEFORE USING THE CORDLESS TELEPHONE

The battery loses its charge during shipping and storage. Be sure to charge the battery before you use the CP-750 cordless telephone. Place the handset in the base unit. The CHARGING INDICATOR on the base will light. Leave the handset in the base unit for 12-15 hours.

DIGITAL SECURITY CODE

The Digital Security Coding System automatically resets a new personal security code, to one of over 64,000 combinations, every time you return the CP-750 handset to the base unit. (Whenever the handset is returned to the base unit, you will hear a beep.) The security code prevents unauthorized use of your telephone line, false rings and false dialing.

IMPORTANT SAFETY INSTRUCTIONS

INSTALLATION INSTRUCTIONS

- Never install telephone wiring during a lightning storm.
- Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations.
- Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected at the network interface.
- Use caution when installing or modifying telephone lines.

SAFETY PRECAUTIONS

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

- Read and understand all instructions.
- Follow all warnings and instructions marked on the product.
- Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
- Do not use this product near water: for example, near a bath tub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool.
- Do not place this product on an unstable cart, stand, or table. The product may fall, causing serious damage to the product.
- Slots and openings in the cabinet and the back or bottom are provided for ventilation, to protect it from overheating, these openings must not be blocked or covered. The openings should never be blocked by placing the product on the bed, sofa, rug, or other similar surface. This product should never be placed near or over a radiator or heat register. This product should not be placed in an enclosed environment unless proper ventilation is provided.
- Do not allow anything to rest on the power cord. Do not locate this product where the cord will be abused by animals or persons walking on it.
- Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.
- Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short out parts that could result in a risk of fire or electric shock. Never spill liquid of any kind on the product.
- To reduce the risk of electric shock, do not disassemble this product, but take it to a qualified serviceworker when service or repair work is required. Opening or removing covers may expose you to dangerous voltages or other risks. Incorrect re-assembly can cause electric shock when the appliance is subsequently used.
- Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - When the power supply cord or plug is damaged or frayed.
 - If liquid has been spilled into the product.
 - If the product has been exposed to rain or water.
 - If the product does not operate normally by following the operating instructions. Adjust only those controls, that are covered by the operating instructions because improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal operation.
 - If the product has been dropped or the cabinet has been damaged.
 - If the product exhibits a distinct change in performance.
- Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
- Do not use the telephone to report a gas leak while near the leak.

SAVE THESE INSTRUCTIONS

ADDITIONAL INFO

HANDSET CHARGING INDICATOR

The **HANDSET CHARGING INDICATOR** lights solid when the handset is placed in the charger. Place the handset in the charger for 12-15 hours before the first use or when the battery begins to run low.

LINE-IN-USE INDICATOR

The **LINE-IN-USE INDICATOR** (located on the charging cradle) will light solid whenever the CP-750 is in "TALK" mode, whenever any other extension telephone on the same line is being used, or whenever the telephone cord is not properly plugged into the wall jack or telephone.

MOVING THE CP-750

Unplug the CP-750 from the wall outlet if you wish to move the unit. Place the handset in the charging cradle after relocating the CP-750. This will reset the CP-750's security code. All autodial, Caller ID and redial numbers will be saved.

POWER FAILURE/ NON-VOLATILE MEMORY

CASIO PHONEMATE's memory backup system maintains up to 20 autodial names and numbers and stored Caller ID information (up to 50 records) indefinitely until you erase them. This non-volatile memory does not require battery power.

TWO-LINE INSTALLATION

Two-line installations may require a two-line T-adaptor for the CP-750 to operate correctly. The T-adaptor allows you to connect your machine to Line 1 or Line 2. The CP-750 will only answer one line. (See Accessories Order Form.)

MULTI-LINE INSTALLATION

Installations with more than two lines, such as business PBX or Key Systems, may require a separate RJ11 jack for answering machines. Please contact your telephone equipment provider for additional information. (See Accessories Order Form.)

CLEANING THE CP-750


CAUTION: Disconnect the CP-750 from the power outlet before cleaning. Use a damp cloth or moist sponge only to clean:

- The antenna.
- The plastic cabinet of the handset and charging cradle.
- The battery charging contacts on the handset. A mild soap, like dishwashing detergent, will help remove grease or oil. Do not spray cleaners directly onto the unit. Cleaners should only be used on the plastic surfaces. Thoroughly dry all parts of the handset and charging cradle before re-using.

HANDSET BATTERY INSTALLATION

THIS UNIT IS SHIPPED WITH THE HANDSET BATTERY PACK INSTALLED. If it becomes necessary to replace the battery pack:

- Press down on the battery compartment cover and slide it toward the bottom of the handset.
- Install the new battery pack with the red wire on the right side of the black wire (see drawing.)

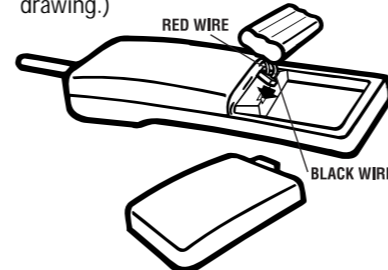

- Replace the battery cover by sliding it up from the bottom.
- Place the handset in the charger cradle and charge the battery pack for 12-15 hours.

WARNING: Use only NiCd Rechargeable Battery Pack (3.6 volts 600 mAh.)

Handset battery life: 6.6 hours talk time, 7 days standby time.

IMPORTANT FEATURES

Caller ID

If you subscribe to a Caller Identification Service (available from most local telephone companies), the CP-750 can display the name and phone number of incoming calls. With the Caller ID feature, you can see who is calling before you answer a call.

Call Waiting Caller ID

If you subscribe to a Call Waiting Caller ID service from your local telephone company, the CP-750 can display the name and number of an incoming call while you are already talking to another party on the cordless handset. **NOTE:** You must order the complete package that is known as "CALL WAITING/ CALLER ID" from your local telephone company. If you simply order the two services of CALL WAITING and CALLER ID you may not receive Call Waiting Caller ID service.

Caller ID Memory

The CP-750 automatically stores the Caller ID names and numbers of the last 50 calls you have received.

Modem Monitor™ Connection Protection

Modem Monitor™ protects modem and fax connections when a call attempt is made from any phone that includes the Modem Monitor™ feature. It distinguishes between data and standard voice communication and allows for normal telephone operation.

Supertwist Nematic (STN) LCD

Advanced LCD technology in your CP-750 provides clear, multi-angle viewing of caller's name and phone number if you subscribe to Caller ID service from your local telephone company.

Autodial Memory Backup

CASIO PHONEMATE's memory backup system maintains up to 20 autodial names and numbers indefinitely until you erase them. This non-volatile memory does not require battery power.

Charging The Battery

Charge the battery for 12-15 hours before using the cordless handset for the first time. The handset is always charging while it is in the charging cradle and cannot be overcharged.

To charge the battery, first check the AC Adapter to see that it is connected correctly. Then, place the handset in the charging cradle. The CHARGING INDICATOR on the charging cradle lights solid to indicate that the CP-750 is charging.

Local Area Code Setting

If you are planning to use the Caller ID features on the CP-750 and you reside in a 7-digit dialing area, you may want to program your local area code into the handset's memory after you have charged the battery for the first time. The CP-750 uses this information to automatically dial stored Caller ID numbers correctly from a 7-digit dialing area. If you have 10 or 11 digit dialing in your area, leave the area code setting at 000. The CP-750 will prompt you to choose between 7, 10, or 11 digit dialing each time you make a caller ID call.

Headset Jack / Belt Clip Included

The CP-750 handset has a 2.5mm jack for attachment of a headset (headset not included). The belt clip snaps into to the back of the handset.




CP-750 EASY TO USE OWNER'S GUIDE

900 MHz CORDLESS PHONE WITH CALL WAITING CALLER ID



INSTALLATION

1 PLUG the CP-750's telephone cord into a telephone wall jack. **PLUG** the other end of the cord into the back of the base unit.

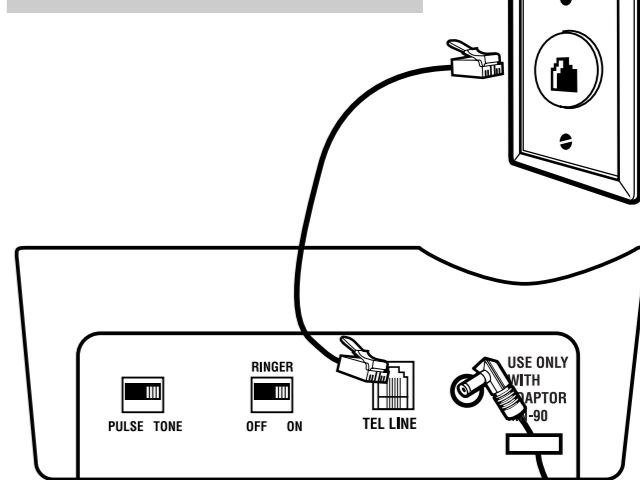


2 CONNECT the AC Adapter Plug into the AC Adapter Outlet on the back of the CP-750 charging cradle. **LOOP** the cord through the AC Adapter Cord Holder to prevent accidental disconnection.

3 PLUG the AC Adapter into an electrical wall outlet. Place the handset (with battery pack installed) in the cradle.

4 It may be necessary to set the **PHONE/PULSE SWITCH**.

5 Raise the charging cradle antenna for clear reception.

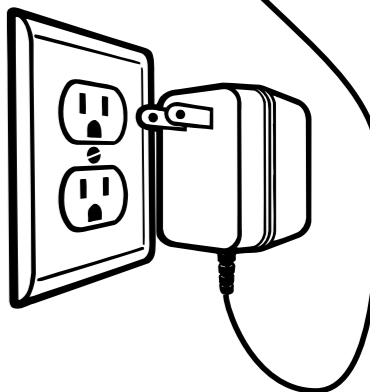

Open for easy operating guide!

FCC REQUIREMENTS USER INSTRUCTIONS

- This equipment complies with Part 68 of the FCC rules. On the bottom of this equipment is a label that contains, among other information, the FCC registration number and Ringer Equivalence Number (REN) for this equipment. If requested, provide this information to your telephone company.
- The REN is useful to determine the quantity of devices you may connect to your telephone line and still have all of those devices ring when your number is called. In most, but not all areas, the sum of the RENs of all devices should not exceed five (5.0). To be certain of the number of devices you may connect to your line, as determined by the REN, you should call your local telephone company to determine the maximum REN for your calling area.
- If your answering machine causes harm to the telephone network, the telephone company may discontinue your service temporarily. If possible, they will notify you in advance. But if advance notice is not practical, you will be notified as soon as possible. You will be advised of your right to file a complaint with the FCC.
- Your telephone company may make changes in its facilities, equipment, operations, or procedures that could affect the proper operation of your equipment. If they do, you will be given advance notice so as to give you an opportunity to maintain uninterrupted service.
- If there is a problem with this unit, the telephone company may ask you to disconnect this equipment from the network until the problem has been corrected or you are sure that the equipment is not malfunctioning.
- Repairs can only be made by the manufacturer or an authorized service agency. Unauthorized repairs void registration and warranty. Contact seller or manufacturer for details of permissible user-performed routine repairs, and where and how to have other than routine repairs made.
- This equipment may not be used on coin service provided by the telephone company. Connection to party lines is subject to state tariffs. (Contact your state public utility commission or corporation commission for information.)

Jack: RJ11 Ringer Equivalence: See bottom/underside of the CP-750 base unit. CASIO PHONEMATE, Inc. 20665 Manhattan Place, Torrance, CA 90501

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any changes made by the user not approved by CASIO PHONEMATE can void the user's authority to operate the equipment. This product is hearing aid compatible.

TROUBLESHOOTING

"Blocked" and "Unavailable" Messages.

If a caller chooses to partially or completely "block" Caller ID information, a message will appear on the display indicating that the name and/or phone number has been blocked. If, for any other reason, the name and/or number information is currently not available from your local phone company, an "Unavailable" message will appear on the display. The time and date information for the call will be recorded into the CP-750's memory.

Local Area Code Setting

If you live in a 7 digit dialing area and you program your local area code into the unit, the CP-750 can make returning phone calls easier by automatically dialing stored Caller ID numbers. If you live in a 10 or 11 digit dialing area, leave this setting at 000.

Call Waiting Caller ID does not work

- You must subscribe to the combined package service Call Waiting Caller ID from your local telephone company to use this feature. Simply subscribing to Call Waiting and Caller ID may not be sufficient to receive incoming Caller ID information while you are on the line.
- Turn the CP-750's Call Waiting Caller ID option on.

LINE IN USE INDICATOR lights yet the handset or extension phone are not in use.

The telephone cord is not properly plugged in. Connect one end of the telephone cord to the wall jack and connect the other end of the telephone line cord to the back of the CP-750.

No sound from the handset.

Check the **VOLUME CONTROL**. It may have been programmed to a low level.

No Dial Tone is heard when calling out.

- Was the battery pack charged for at least 12-15 hours? Does "Low Battery" appear on the display?
- Check the AC adaptor and telephone cord connection at the charging cradle and wall outlet.
- Check the connection of the battery pack.

The handset does not ring.

- Check the ringer switch on the side of the handset and make sure it is not set to "OFF".
- Check AC adaptor and telephone cord connection at the charging cradle and wall outlet.
- Was the battery pack charged for at least 12-15 hours? Does "Low Battery" appear on the display?

"Line Error" Message

The "Line Error" message may occasionally appear due to electrical static on the telephone line. This is normal. However, if you consistently see this message when you should be receiving Caller ID data (i.e. between the first and second rings), you may have a problem with your phone line. Contact your local telephone company.

You hear continuous short beeps instead of a dial tone when using the cordless handset.

The beep tones are a warning alarm to let you know:

- That the handset is out of communication range with the charger cradle. Move the handset closer to your charger cradle.
- That the charger cradle had some problem like a power failure. Return the handset to the charger cradle for 5 seconds and make sure all cords are connected correctly.

Interference Noise is heard.

- The handset is too far from the charger cradle.
- The cordless handset is picking up interference from one of several sources: electrical appliances such as radio, TV, fluorescent lights, etc. Move the charger cradle to reduce interference.
- Press **CHANNEL** to select another channel.
- Raise the charging cradle antenna.

No Page Tone is heard at the Handset.

- Check the AC ADAPTER and telephone cord connection.
- You may have had a power failure. Return the handset to the charger cradle for 5 seconds to reset the Digital Security Code.

A beep is heard each time the handset is returned to the charger cradle.

This is normal operation. The handset is updating the security code.

After several attempts the CP-750 will not operate properly.

Unplug the AC ADAPTER PLUG from the back of the CP-750 for 10 seconds. Remove the battery from the handset. Plug the AC ADAPTER back into the charging cradle and re-insert the battery in the handset. Return the handset to the charger cradle for 10 seconds.

If these actions do not remedy the problem, call the CASIO PHONEMATE Helpline. The Helpline staff can often resolve problems or recommend service when needed.

Unless you live close to a CASIO PHONEMATE Service Center, you may need to mail your telephone and charging cradle to CASIO PHONEMATE for repair. You should:

- Package the unit in its original box or a comparable protective package.
- Include a clear and specific written explanation of the problem.
- Include your name, address, and phone number.
- Provide a legible photocopy of the dated store receipt for warranty purposes.

Should you have additional questions, please call the CASIO PHONEMATE Helpline at (310) 320-9810 (from 8:00 am. to 4:00 p.m. Pacific Standard Time) for assistance.

Design and specifications are subject to change without notice.

CASIO PHONEMATE, INC.

20665 Manhattan Place, Torrance CA 90501

Internet web site address: <http://www.CASIOPHONEMATE.com>

M1S1 3/99

Printed in China

WARRANTY

IMPORTANT! SALES SLIP OR EVIDENCE OF PURCHASE DATE REQUIRED

This limited warranty gives you specific legal rights; you may also have other rights which vary from state to state. The limited warranty is extended only to the original consumer of a CASIO PHONEMATE product and is valid only with respect to consumers within the United States of America and Canada. Should this product prove defective by reason of improper workmanship or material during the period of one (1) year from the date of original purchase, CASIO PHONEMATE will repair or, at its option, replace the product without charge for parts or labor. If CASIO PHONEMATE elects to replace the product, such replacement may be accomplished with a factory-reconditioned unit.

This limited warranty does not apply: (a) to any product damaged by accident, misuse, improper line voltage, lightning, fire, water, or other acts of nature, (b) if the product is altered or repaired by anyone other than CASIO PHONEMATE, INC. or one of its authorized warranty stations or (c) if the FCC-approved connector plugs are removed. This limited warranty does not cover broken or marred cabinets.

Except to the extent prohibited by applicable law, all implied warranties made by CASIO PHONEMATE in connection with this product are limited in duration to a period of one (1) year from the date of original purchase, and no warranties, whether expressed or implied, shall apply to this product after said period.

Should this product prove defective in workmanship or material, the consumer's sole remedies shall be such repair or replacement as is herein-above provided. Under no circumstances shall CASIO PHONEMATE be liable for any loss or damage, direct, consequential, or incidental arising out of the use of or inability to use this product.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusion may not apply to you.

In order to obtain warranty service, you must provide evidence of purchase date. For your convenience, keep the dealer's dated bill of sale or delivery ticket as evidence of the purchase date.

Before returning or exchanging your product, call CASIO PHONEMATE's Helpline at (310) 320-9810.

ACCESSORIES

To order accessories, simply cut out this order form, fill in the appropriate information and send it with payment (check, money order or credit card information) to: CASIO PHONEMATE Parts Department, 8805 Kelso Drive, Baltimore, MD 21221 or Call: 1-800-322-9995 for credit card orders.

Description	Part No.	Price	Qty.	Total
Lightning Arrestor - Helps protect telephone devices from damage caused by lightning strikes to the telephone line.	2700140	\$19.95		
Recommended for areas prone to electrical storms.				
Rechargeable Battery Pack - For Model CP-750	3201010	\$15.00		
AC Adapter - For Model CP-750 (specify black or white)	1601081 (white)	\$13.50		
Modular Duplex T-Adapter - Converts a single modular telephone jack to a double jack.	2700156	\$5.95		
Modular Two Line T-Adapter - Splits one RJ14 two line jack into two RJ11 single line jacks.	2700135	\$5.95		
Headset (over ear)	8000688	\$19.95		
Headset (over head)	8000689	\$19.95		
Belt Clip (white)	2401734	\$4.95		
Belt Clip (black)	2401735	\$4.95		
	Subtotal			
	CA & MD residents add applicable sales tax			
	All orders add shipping and handling			\$3.50
	Total			

Enclosed is my check/money order for the total amount.

Please charge my credit card.

VISA MasterCard

_____ Card No. _____ Expiration Date _____

Name _____

Street Address _____

City _____ State _____ Zip Code _____

Signature _____ Telephone _____

We do not accept C.O.D. orders. Allow 15 working days for delivery. Prices subject to change without notice. Returns subject to 20% restocking charge upon approval.

REFERENCIA RÁPIDA

INSTALACIÓN

1 ENCHUFE el cordón de su CP-750 en un enchufe para teléfono en la pared. **ENCHUFE** el otro extremo del cordón telefónico en la parte posterior de la unidad base.

2 CONECTE el enchufe del adaptador de CA en la entrada de tomacorriente para adaptador de CA que hay en la parte de atrás de la base para carga de su CP-750. **ENGANCHE** el cordón en el sujetador de cordón para evitar una desconexión accidental.

3 ENCHUFE el adaptador de CA en un tomacorriente eléctrico de pared. Coloque el auricular (con su paquete de pilas ya instalado) en la unidad base para carga.

4 Puede que se necesite ajustar el interruptor selector para modo de operación TONOS o de PULSOS.

5 Saque y extienda completamente la antena en la base para carga para lograr la mejor recepción.