


Five-Band Wireless Adjustable Signal Booster / Kit

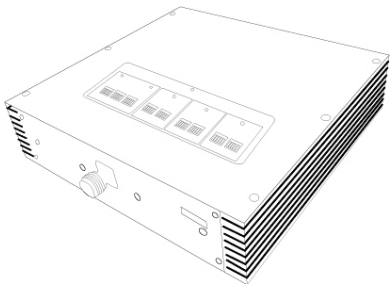

Force-5™ Booster, Force-5
Omni Kit, Force-5 Panel Kits
(FORCE-5)

User Guide

<u>INTRODUCTION</u>	<u>2</u>
<u>THEORY OF OPERATION</u>	<u>2</u>
<u>SURECALL FORCE-5 PACKAGES</u>	<u>3</u>
<u>FORCE-5 BOOSTER HARDWARE</u>	<u>5</u>
<u>INSTALLATION</u>	<u>6</u>
<u>SITE SELECTION</u>	<u>6</u>
<u>INSTALLATION INSTRUCTIONS</u>	<u>7</u>
<u>LEDs</u>	<u>12</u>
<u>AUTOMATIC SHUTDOWN</u>	<u>13</u>
<u>TROUBLESHOOTING</u>	<u>14</u>
<u>FREQUENTLY ASKED QUESTIONS</u>	<u>16</u>
<u>OBTAINING TECHNICAL SUPPORT</u>	<u>16</u>
<u>WARRANTY</u>	<u>17</u>
<u>SPECIFICATIONS</u>	<u>19</u>
<u>SAFETY INFORMATION</u>	<u>20</u>

Congratulations on purchasing the SureCall Force-5, the finest cellular signal booster available!

SureCall adjustable cellular signal boosters and kits from Cellphone-Mate remove frustrations over dropped calls, limited range, and slow data rates by amplifying incoming and outgoing cellular signals in buildings, offices, and homes. The Force-5 is designed with leading-edge technologies to detect and amplify weak incoming signals your cellular device would otherwise miss and to broadcast a significantly stronger signal back to the cell tower.

This guide contains all the information you need to get your SureCall Force-5 booster system up and running.

Theory of Operation

The SureCall Force-5 is a high-quality bidirectional signal booster that boosts cellular signals for areas prone to weak or shadowed cellular coverage.

The Force-5 works with two antennas:

- × An inside antenna that communicates with your cell phone.
- × An outside antenna that communicates with the cell tower.

Signals sent from a cell tower are received by the outside antenna, amplified by the booster and then sent to your phone via the inside antenna.

When your phone transmits, the signal is sent to the inside antenna, and then sent to the cell tower via the outside antenna.

Some cell signal is required for the Force-5 to enhance cellular signal coverage. The weakest cell signal for the Force-5 to work is low -100dBm to high -90dBm. dBm is an abbreviation for the power ratio in decibels of the radio power per one milliwatt.

To measure your existing cell signal on an Apple iPhone, dial ***3001#12345#*** and press **Call**. In the top-left corner, a number appears instead of bars.

For Android devices, you can download several apps to measure exact signal strength. Look up **check real signal strength** to find a cell signal measurement app.

SureCall Force-5 Packages

Force-5 - Antenna Kitting Information

Table 1. Force-5

Component	Product Number (Description)	Gain/Loss					Notes
		LTE-A	LTE-V	800 MHz	1900 MHz	1700 MHz\2100 MHz	
Outdoor Antennas*	CM288W	3 dBi	3 dBi	3 dBi	4 dBi	4 dBi\4 dBi	
	CM288W-L	5 dBi	5 dBi	6 dBi	8 dBi	8 dBi\8 dBi	
	CM230W	10 dBi	10 dBi	10 dBi	10 dBi	10 dBi\10 dBi	
	CM248W	7 dBi	7 dBi	7 dBi	10 dBi	10 dBi\10 dBi	
Outdoor Cable*	CM400-65NN (65 feet)	3.74 dB	3.74 dB	3.89 dB	5.43 dB	5.11 dB\5.75 dB	65 feet or longer
Indoor Antennas*	CM248W	7 dBi	7 dBi	7 dBi	10 dBi	10 dBi\10 dBi	
	CM222W	3 dBi	3 dBi	3 dBi	6 dBi	6 dBi\6 dBi	
Indoor Cable*	CM400-40NN (40 feet)	2.53dB	2.53dB	2.63dB	3.57dB	3.36 dB\3.77 dB	40 feet or longer

* All equivalent antennas and cables are suitable for use with the Force-5 booster.

Table 2. Dual Indoor Antenna Kit

Component	Product Number (Description)	Quantity	Notes
Outdoor Antennas*	CM230W	1 pcs	
	CM248W	1 pcs	
Outdoor Cable*	CM400-65NN (65 feet)	1 pcs	65 feet or longer
Indoor Cable*	CM400-20NN (20 feet)	1 pcs	20 feet or longer
Splitter	CM-WS-2	1 pcs	
Cable After Splitting*	CM400-40NN (40 feet)	2 pcs	40 feet or longer
Indoor Antenna*	CM248W	2 pcs	

* All equivalent antennas and cables are suitable for use with the Force-5 booster.

Table 3. Four Indoor Antenna Kit

Component	Product Number (Description)	Quantity	Notes
Outdoor Antennas*	CM230W	1 pcs	
	CM248W	1 pcs	
Outdoor Cable*	CM400-65NN (65 feet)	1 pcs	65 feet or longer
Indoor Cable*	CM400-20NN (20 feet)	1 pcs	20 feet or longer
Splitter	CM-WS-4	1 pcs	
Cable After Splitting	CM400-40NN (40 feet)	4 pcs	40 feet or longer
Indoor Antenna*	CM248W	4 pcs	

* All equivalent antennas and cables are suitable for use with the Force-5 booster.

Note: Multiple indoor antenna kit is also an option.

Note: For the signal booster to work, the following items are required:


- × Outside antenna
- × Cable for connecting the outside antenna to the booster
- × Signal booster
- × Inside antenna
- × Cable for connecting the inside antenna to the booster
- × Power supply

Warning: Unauthorized antennas, cables, and/or coupling devices are prohibited by FCC new rules. Please contact FCC for details: 1-888-CALL-FCC.

Changes or modifications not expressly approved by Cellphone-Mate could void the user's authority to operate the equipment.

Force-5 Booster Hardware

The following figure shows the key hardware components on the SureCall Force-5 cellular signal booster. Refer to this figure as you install your SureCall Force-5 components.

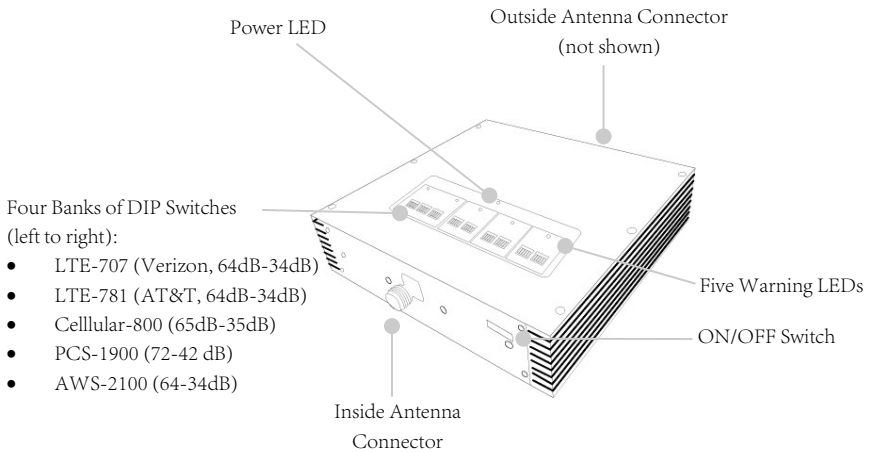

Unpack all package contents and check for damage. For missing or damaged items, contact your reseller. Keep the carton and packing material to store the product or if you need to return it.

Site Selection

For optimum performance, select a location for your booster that:

- × Provides the best signal strength possible. To measure your existing cell signal on an Apple iPhone, dial *3001#12345##* and press Call. In the top-left corner, a number appears instead of bars. For Android devices, you can download several apps to measure exact signal strength. Look up “check real signal strength” to find a cell signal measurement app.
- × Avoids areas where wireless signals can be blocked or reflected by buildings, walls, trees, hills, and other terrain features. This can result in low signal strength.
- × Is not close to energy-efficient windows, which can affect signal penetration into a home or office.

Note: The cell phone tower site in relation to the location where you install your booster also determines signal strength. Although cell phone providers try to place towers for maximum coverage, local ordinances and terrain features can restrict tower locations, which can limit signal strength at your location.

Installation Instructions

The Force-5 signal booster is suited for installation in a building or home.

Step 1. Connect the Outside Antenna

1. Mount the fiberglass antenna in an outside mounting location that:
 - × Has at least a 12-inch radius clear of obstructions and other radiating elements.
 - × Is at least 75 feet in a straight line from the inside antenna when used in an area prone to weak cellular signals and operating the booster at full 65 dB gain.
 - × Is not co-located or operating with any other antenna or booster.

FCC 27.50(d)(4) Statement: Fixed, mobile, and portable (hand-held) stations operating in the 1710 – 1755 MHz band are limited 1 Watt EIRP. Fixed stations operating in this band are limited to a maximum antenna height of 10 meters above ground. Mobile and portable stations operating in this band must employ a means for limiting power to the minimum necessary for successful communications.

2. Using the CM400 cable, connect the outside antenna to the booster connector marked **OUTSIDE** (see page 5).
3. Hand tighten the connection.


Step 2. Connect the Inside Antenna

1. Mount the inside antenna:
 - × Omnidirectional dome antenna: mount the antenna on the ceiling in a central location where you want reception.
 - × Panel antenna: install the antenna

IMPORTANT: A minimum separation distance of 30 vertical feet is necessary between the outside and inside antennas. If the inside coverage is not sufficient, you may need as much as 80 feet of separation. See the following table.

To Use This Much Booster Gain...	Allow This Much Separation...
40 dB	5 – 10 feet
45 dB	15 – 20 feet
50 dB	50 - 55 feet
55 dB	55 – 65 feet
65 dB	70 – 80 feet

- × Use directional flat-panel antennas for long, narrow spaces. Mount them as close as possible to the center of the wall at one end of long narrow space.
- × Use omnidirectional dome antennas for square spaces favorable to using a central antenna. Mount them in the ceiling, as close to the center of the desired coverage area as possible, with the domed side pointing down

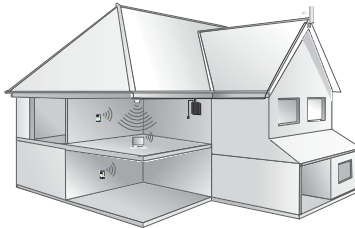

2. Using the CM400 cable, connect the inside antenna to the booster connector marked **INSIDE** (see page 5).
3. Hand tighten the connection.

Step 3. Mount the Booster (Optional)

1. Select a location for your booster.
2. Attach the supplied mounting kit to the booster using the supplied screws. Tighten the screws with a screwdriver until snug, then add a ¼-to-1/2 turn. Do not over tighten.
3. Orient the signal booster so the LEDs and DIP switches face away from the wall and the LEDs are seen easily. Then mount the signal booster to the wall using appropriate screws and/or wall anchors.
4. Connect the outdoor antenna cable to the **Outdoor Antenna** port on the booster.
5. Connect the indoor antenna cable to the **Indoor Antenna** port on the booster.
6. Verify that all cable connections are snug, and that the outdoor and indoor antennas are connected to the proper jacks.

Step 4. Connect to AC Power

1. Connect the AC power cord to the booster (see page 5).
2. Connect the plug on the other end to a 110V AC power outlet. Be sure all connections to the booster are tight and secure.
 - × The booster turns on automatically.
 - × The **Power** LED goes ON to show that the booster is ready for use (see page 5).
 - × The **Alert** LEDs flash up to 15 seconds on each band to show the band is activated (see page 5).

The booster is rated for 5-20V input voltage. DO NOT use the booster with a higher voltage power supply. This can damage the booster and/or cause personal injury.

Step 5. Configure Switch Settings

Facing the front of your booster, find 4 banks of dual in-line package (DIP) switches (see page 5). These switches let you attenuate the dB gain manually for uplink and downlink channels.

- × Bank 1 controls LTE amplification in the building:
 - The switches marked **LTE 707** control **uplink** amplification for Verizon.
 - The switches marked **LTE-781** control **uplink** amplification for AT&T.
 - The switches between **LTE 707** and **LTE-781** control **downlink** amplification for both Verizon and AT&T.
- × Bank 2 controls Cellular amplification in the building.
- × Bank 3 controls PCS amplification in the building.
- × Bank 4 controls AWS amplification in the building.

The DIP switches in each bank correspond to the following dB gain values:

Switch 1	Switch 2	Switch 3	Switch 4	Switch 5
1 dB	2 dB	4 dB	8 dB	16 dB

For maximum gain on all channels, your booster ships with all DIP switches turned ON. This setting should always be your starting point when installing or reinstalling the booster. To change it, move the DIP switches to the ON or OFF position.

- × Moving a switch down (away from the LEDs) turns OFF the switch and increases booster gain for the selected channel.
- × Moving a switch up (toward the LEDs) turns ON the switch and decreases booster gain for the selected channel.

Switch settings are cumulative. This means the total amount of attenuation for a channel equals the combined dB of all DIP switches in the same bank being set to ON.

To Achieve...	Set the DIP Switches in the Same Bank as Follows...				
	SW1 (1 dB)	SW2 (2 dB)	SW3 (4 dB)	SW4 (8 dB)	SW5 (16 dB)
0 dB	OFF	OFF	OFF	OFF	OFF
1 dB	ON	OFF	OFF	OFF	OFF
3 dB	ON	ON	OFF	OFF	OFF
7 dB	ON	ON	ON	OFF	OFF
15 dB	ON	ON	ON	ON	OFF
21 dB	ON	OFF	ON	OFF	ON
31 dB	ON	ON	ON	ON	ON

Tip: The Force-5 signal booster comes unattenuated or fully powered. If you cannot obtain sufficient antenna separation, use the DIP switches to attenuate the booster's dB gain.

LEDs

The top panel of the signal booster has a **Power** light-emitting diode (LED), along with the following warning LEDs (see page 5):

- × LTE-707
- × LTE-781
- × Cellular-800
- × PCS-1900
- × AWS-2100

LED	Designation	Description
LTE-707	LTE 707 Uplink	OFF = normal operation. ON = LTE 707 uplink warning (Verizon). Power off booster immediately.
LTE-781	LTE 781 Uplink	OFF = normal operation. ON = LTE 781 uplink warning (AT&T). Power off booster immediately.
Cellular-800	Cellular Uplink	OFF = normal operation. ON = cellular uplink warning. Power off booster immediately.
PCS-1900	PCS Uplink	OFF = normal operation. ON = PCS uplink warning. Power off booster immediately.
AWS-2100	AWS Uplink	OFF = normal operation. ON = AWS uplink warning. Power off booster immediately.
Power	Power	Green ON or blink = booster is receiving power. OFF = booster is not receiving power. Red ON = oscillation has occurred for longer than 15 minutes and the booster is shutting down (see Automatic Shutdown on page 13).

Automatic Shutdown

SureCall boosters that have automatic shutdown work in the following way:

1. The cellular LEDs are usually the first side to experience oscillation. When oscillation is detected in the uplink and/or downlink, the appropriate red **Warning** LEDs flash and **Power** turns red.
2. If oscillation occurs on the LTE, Cellular, PCS, or AWS side, the respective LED blinks as appropriate and **Power** turns red due to cellular oscillation.
3. If the problem is not resolved, the affected side shuts down after 30 seconds. In general, the cellular side oscillates more easily than the PCS side.
4. The booster wakes up and **Power** (LED 3) turns green. If oscillation resumes, the LEDs flash as described previously. These 30-second cycles continue for 15 minutes or until the problem is resolved.
5. If the problem is not resolved within 15 minutes, the booster shuts down automatically (all LEDs OFF except **Power**, which is red) and must be reset by unplugging the booster from the power supply and plugging it back in.
6. To resolve oscillation, increase antenna separation and/or the attenuation (see the table on page 8).

In the unlikely event you encounter a problem, use the following steps to identify and resolve the issue.

Problem	Resolution
<p>Booster has no power.</p>	<ol style="list-style-type: none"> 1. Verify that the switch on the power supply is turned on and red LED is ON. 2. Connect the power supply to an alternate power source. 3. Be sure the power source is not controlled by a switch that can remove power from the outlet. 4. Check the green POWER LED on the booster. If it is OFF, return the power supply to Cellphone-Mate. Contact tech support at 1-888-365-6283, email support@surecall.com, or go to surecall.com and log on via online support to receive a Return Merchandise Authorization (RMA).
<p>After installing the booster system, you have no signal or reception.</p>	<ol style="list-style-type: none"> 1. Check the strength of the outside signal as close as you can to the outside antenna. To measure your existing cell signal: Apple iPhone: dial *3001#12345#* and press Call. In the top-left corner, a number replaces the bars. Android devices: download apps to measure exact signal strength, such as Network Signal Info in the Google Play store. Search "check real signal strength" to find other cell signal measurement apps. 2. Double-check all booster and antenna cable connections. 3. Be sure your booster's dB gain is turned up to full power on each switch.
<p>One of the red lights next to the switches on your booster is flashing.</p>	<ol style="list-style-type: none"> 1. Turn down the dB gain on the switch until the light goes OFF or turns yellow. 2. Be sure the inside panel antenna is facing away from the outside antenna. 3. Use the recommended antenna separation: <ul style="list-style-type: none"> · 65dB — 60 ft. separation · 63dB — 50-60 ft. separation · 55dB — 40-50 ft. separation · 50dB — 30-40 ft. separation · 45dB — 20-30 ft. separation · 40dB — 10-20 ft. separation · 35dB — 10 ft. separation

Problem	Resolution
Your booster restarted and shut down for 15 minutes, and is now shut down permanently.	Each SureCall booster is equipped with Auto Shutdown to prevent cell tower interference. The outside antenna may be close to a cell tower. Move the outside antenna to a location that provides sufficient distance from the cell tower to prevent the booster from automatically enabling Auto Shutdown. Once away from the original location, perform the procedure under Step 4. Connect to AC Power on page 9.
The red LED goes ON.	More antenna separation is needed. If you cannot provide more antenna separation and the Alert LEDs flash after the initial activation period, lower the switch below the blinking LED by 5 dB (for example, from 50 to 45) and monitor the bars on your cell phone to see whether reception improves.
The Power LED does not turn ON.	Be sure the AC outlet is working and is not controlled by a wall switch that can remove power from the outlet.
The Alert LEDs flash after the initial activation period.	Lower the switch below the blinking LED by 5 dB (for example, from 60 to 55) and monitor the bars on your cell phone to see whether reception has improved.
The Alert LEDs continue to flash.	The booster shuts down automatically, and then restarts after 60 seconds. Turn down the switch that is oscillating (for example, Cellular-800 or PCS-1900) to prevent the booster from shutting down automatically.

FREQUENTLY ASKED QUESTIONS

For a list of Frequently Asked Questions and a comprehensive, up-to-date Troubleshooting Guide, please visit our website at: www.surecall.com or call us at 1-800-365-6283.

You can also consult a Cellphone-Mate technical specialist directly by emailing us at support@surecall.com.

Record the model and serial number for your products:

Serial #: _____

Purchase Date: _____

Two-Year Product Warranty

Cellphone-Mate warrants its products for two years from the date of purchase against defects in workmanship and/or materials.

Products returned by customers must be in their original, un-modified condition, shipped in the original or protective packaging with proof-of-purchase documentation enclosed, and a Return Merchandise Authorization (RMA) number printed clearly on the outside of the shipping container.

Buyers may obtain an RMA number for warranty returns by calling the Cellphone-Mate Return Department toll-free at 1-888-365-6283. Any returns received by Cellphone-Mate without an RMA number clearly printed on the outside of the shipping container will be returned to sender. In order to receive full credit for signal boosters, all accessories originally included in the signal booster box must be returned with the signal booster. (The Buyer does not need to include accessories sold in addition to the signal booster, such as antennas or cables.)

This warranty does not apply to any product determined by Cellphone-Mate to have been subjected to misuse, abuse, neglect, or mishandling that alters or damages the product's physical or electronic properties.

Cellphone-Mate warrants to the Buyer that each of its products, when shipped, will be free from defects in material and workmanship, and will perform in full accordance with applicable specifications. The limit of liability under this warranty is, at Cellphone-Mate's option, to repair or replace any product or part thereof which shall within TWO YEARS of purchase as determined by examination by Cellphone-Mate, prove defective in material and/or workmanship. Warranty returns must first be authorized in writing by Cellphone-Mate. Disassembly of any Cellphone-Mate, Inc. product by anyone other than an authorized representative of Cellphone-Mate voids this warranty in its entirety. Cellphone-Mate reserves the right to make changes in any of its products without incurring any obligation to make the same changes on previously delivered products.

As a condition to the warranties provided for herein, the Buyer will prepay the shipping charges for all products returned to Cellphone-Mate for repair, and Cellphone-Mate will pay the return shipping with the exception of products returned from outside the United States, in which case the Buyer will pay the shipping charges.

The Buyer will pay the cost of inspecting and testing any goods returned under the warranty or otherwise, which are found to meet the applicable specifications or which are not defective or not covered by this warranty.

Products sold by Cellphone-Mate shall not be considered defective or non-conforming to the Buyer's order if they satisfactorily fulfill the performance requirements that were published in the product specification literature, or in accordance with samples provided by Cellphone-Mate. This warranty shall not apply to any products or parts thereof which have been subject to accident, negligence, alteration, abuse, or misuse.

Cellphone-Mate makes no warranty whatsoever in respect to accessories or parts not supplied by it.

Limitations of Warranty, Damages and Liability:

EXCEPT AS EXPRESSLY SET FORTH HEREIN, THERE ARE NO WARRANTIES, CONDITIONS, GUARANTEES, OR REPRESENTATIONS AS TO MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR OTHER WARRANTIES, CONDITIONS, GUARANTEES, OR REPRESENTATIONS, WHETHER EXPRESSED OR IMPLIED, IN LAW OR IN FACT, ORAL OR IN WRITING.

CELLPHONE-MATE AGGREGATE LIABILITY IN DAMAGES OR OTHERWISE SHALL NOT EXCEED THE PAYMENT, IF ANY, RECEIVED BY CELLPHONE-MATE, INC. FOR THE UNIT OF PRODUCT OR SERVICE FURNISHED OR TO BE FURNISHED, AS THE CASE MAY BE, WHICH IS THE SUBJECT OF CLAIM OR DISPUTE. IN NO EVENT SHALL CELLPHONE-MATE, INC. BE LIABLE FOR INCIDENTAL, CONSEQUENTIAL, OR SPECIAL DAMAGES, HOWSOEVER CAUSED.

All matters regarding this warranty shall be interpreted in accordance with the laws of the State of California, and any controversy that cannot be settled directly shall be settled by arbitration in California in accordance with the rules then prevailing of the American Arbitration Association, and judgment upon the award rendered may be entered in any court having jurisdiction thereof.

If one or more provisions provided herein are held to be invalid or unenforceable under applicable law, then such provision shall be ineffective and excluded to the extent of such invalidity or unenforceability without affecting in any way the remaining provisions hereof.

Specification	FORCE-5
Uplink Frequency Range:	Cellular-800: 824 – 849 MHz PCS: 1850 – 1910 MHz LTE-A: 698 – 716 MHz LTE-V: 776 – 787 MHz AWS: 1710 – 1755 MHz
Downlink Frequency Range:	Cellular-800: 869 – 894 MHz PCS: 1930 – 1990 MHz LTE-A: 728 – 746 MHz LTE-V: 746 – 757 MHz AWS: 2110 – 2155 MHz
Supported Standards:	CDMA, GSM, LTE
Input/Output Impedance:	50 Ω
Maximum Gain:	Cellular-800: 65 dB PCS: 72 dB LTE-A: 63.5 dB LTE-V: 64.3 dB AWS: 71 dB
Noise Figure:	8 dB
VSWR:	≤ 2.0
AC Power Transmitter:	Input AC 110 V, 60 Hz Output: DC 19 V
Maximum Output Power:	1 Watt EIRP
Cable:	CM400 recommended
RF Connectors:	N Female, both ends
Power Consumption:	<50W
Dimensions:	11.3 x 10.9 x 3.5 in. (28.6 x 27.6 x 8.84 cm.)
Weight:	16.5 lbs. (7.48 kgs.)
FCC ID (USA):	RSNFORCE-5

This is a **CONSUMER** device.

BEFORE USE, you **MUST REGISTER THIS DEVICE** with your wireless provider and have your provider's consent. Most wireless providers consent to the use of signal boosters. Some providers may not consent to the use of this device on their network. If you are unsure, contact your provider.

You **MUST** operate this device with approved antennas and cables as specified by the manufacturer. Antennas **MUST** be installed at least 20 cm (8 inches) from any person.

You **MUST** cease operating this device immediately if requested by the FCC or a licensed wireless service provider.

WARNING. E911 location information may not be provided or may be inaccurate for calls served by using this device.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- × Reorient or relocate the receiving antenna.
- × Increase the separation between the equipment and receiver.
- × Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- × Consult the dealer or an experienced radio/TV technician for help.



48346 Milmont Drive
Fremont, California 94538
USA
888.365.6283
Fax: 510.996.7250

www.surecall.com

Cellphone-Mate has made a good faith effort to ensure the accuracy of the information in this document and disclaims the implied warranties of merchantability and fitness for a particular purpose and makes no express warranties, except as may be stated in its written agreement with and for its customers.

Cellphone-Mate shall not be held liable to anyone for any indirect, special or consequential damages due to omissions or errors. The information and specifications in this document are subject to change without notice.

Copyright © 2014. All Rights Reserved.

All trademarks and registered trademarks are the property of their respective owners.

Force-5 User Guide
February 10, 2014

(20130228) V1.3??