



**SmaRT 902**  
**Remote Control System**  
**Manual**

U007.0-SmaRT902\_system-R

**This document is the property of Cervis, Inc. and cannot be copied, modified, or reproduced without the express prior written consent of Cervis, Inc. Cervis, Inc. reserves the right to change this manual or edit, delete, or modify any information without prior notification.**

## **FCC Statements**

### **15.19 – Two Part Warning**

**This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:**

- (1) This device may not cause harmful interference and**
- (2) This device must accept any interference received, including interference that may cause undesired operation.**

### **15.21 – Unauthorized Modification**

**NOTICE: The manufacturer is not responsible for any unauthorized modifications to this equipment made by the user. Such modifications could void the user's authority to operate the equipment.**

**Cervis, Inc.**

Visit our Web site at:

[www.cervisinc.com](http://www.cervisinc.com)

© 2007 Cervis, Inc. All rights reserved. Content is subject to change without notice.

## Contents

FCC Statements .....	i
<b>1.0 Smart 902 Remote Control System.....</b>	<b>1</b>
1.1 Features.....	1
1.2 PTO-902 Handheld Remote .....	2
1.3 BU-902F Base Unit.....	2
1.4 Communication Configuration Options .....	3
1.4.1 Associate Handheld to Base Unit Procedure.....	3
1.4.2 Disassociate Handheld to Base Unit Procedure .....	4
<b>2.0 Handheld Battery Installation or Change .....</b>	<b>6</b>
<b>3.0 Base Unit Installation .....</b>	<b>7</b>
<b>4.0 Using the Smart PTO-902 Handheld Remote.....</b>	<b>8</b>
To operate the system:.....	8
<b>5.0 Wiring Harness.....</b>	<b>9</b>
<b>6.0 Specifications.....</b>	<b>10</b>
6.1 Handheld.....	10
6.2 Base Unit .....	11

## Figures

Figure 1. PTO-902 Handheld Remote and BU-902F Base Unit.....	1
Figure 2. PTO-902 (without bumper).....	2
Figure 3. Female Twelve (12) Pin Connector.....	3
Figure 4. BU-902F LEDs .....	3
Figure 5. Handheld PTO Buttons.....	4
Figure 6. Handheld Battery Installation .....	6
Figure 7. Base Unit.....	7
Figure 8. Wiring Harness Cable.....	7
Figure 9. PTO-902 Front Panel Buttons and Diagnostic LEDs.....	8

## Tables

Table 1 - Handheld Specifications.....	10
Table 2 - Base Unit Specifications.....	11



## 1.0 SmarT 902 Remote Control System

The standard SmarT 902 Remote Control System consists of a 2-button PTO-902 wireless handheld transmitter, a BU-902F base unit, and the wiring harness that is used to connect the base unit to the controlled apparatus. A single base unit is capable of communicating with up to eight PTO-902 Handheld units. The rugged construction, compact size, and multiple output versatility allow for SmarT Systems to be used for many applications that require remote operation.



*Figure 1. PTO-902 Handheld Remote and BU-902F Base Unit*

### 1.1 Features

- IP65 Enclosure
- Operating Temp: -20°C to +55°C
- Storage Temp: -40°C to +85°C
- PTO-902 Handheld has two Push-to-Operate (PTO) buttons
- Handheld powered by three AAA Batteries (+3.6VDC to 4.5VDC)
- Base Unit +9VDC to +16VDC Input Power
- Two FET high side switching outputs (8A max.)
- License Free Frequency, 900MHz Spread Spectrum Technology
- 300' (100m) Range
- Rugged high-impact polymer enclosure
- Removable rubber bumper (handheld)
- Lanyard
- Compact Weatherproof Design
- Five base unit and three handheld diagnostic LEDs
- Single connector interface for ease of wiring

## 1.2 PTO-902 Handheld Remote

The SmaRT PTO-902 Handheld Remote features a 300' handheld-to-base unit communication range providing two function press-to-operate (PTO) control. Using direct sequence spread spectrum (DSSS) wireless technology at 900MHz, the handheld unit provides a robust link with a base unit in congested radio environments. SmaRT handheld units feature seamless association to a SmaRT BU-902F Base Unit without the need to open either case.

The handheld enclosure is constructed of rugged high-impact polymer with a polycarbonate face plate securely sealed and attached by eight screws. It is further protected by a removable rubber bumper that covers the back and sides of the unit extending beyond the recessed faceplate. A convenient lanyard that attaches to the remote is provided.

The handheld is powered by three size AAA batteries. Three status/diagnostic LEDs are visible on the handheld faceplate as shown in Figure 2 below.

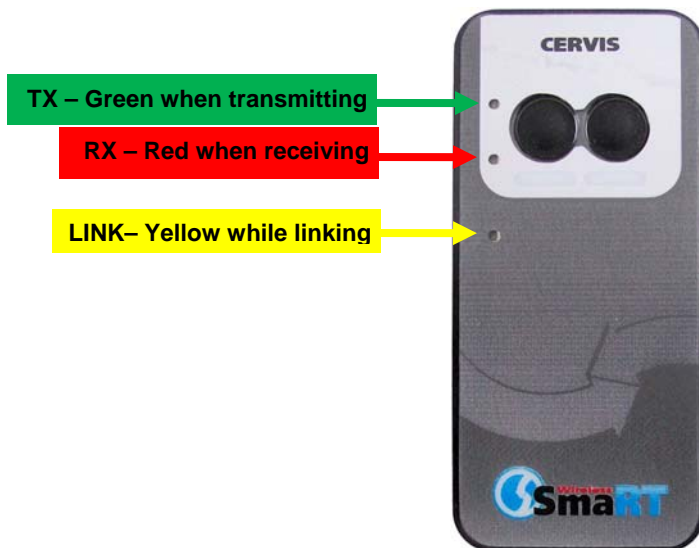



Figure 2. PTO-902 (without bumper)

## 1.3 BU-902F Base Unit

The SmaRT BU-902F Base Unit features two FET, 8A max high-side switching outputs. It accepts an input power operating voltage range from +9 to +16VDC. Using Direct Sequence Spread Spectrum (DSSS) wireless technology at 900MHz, the base unit provides a robust link with a handheld in congested radio environments

SmaRT base units feature seamless association to a SmaRT handheld unit without the need to open either the remote or base unit case. All controlled apparatus connections to the base unit are made via a single cable.

The base unit compact enclosure is constructed of rugged, heavy duty high impact plastic—the type commonly used by the automotive industry. VDC power to the unit and output signals are ported via the heavy duty twelve (12) pin automotive-type connector.

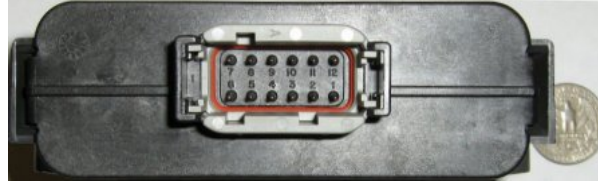

*Figure 3. Female Twelve (12) Pin Connector*

The unit has five status/diagnostic LEDs that are used to determine the state of the unit. The LEDs are shown in Figure 4 below.



*Figure 4. BU-902F LEDs*

## 1.4 Communication Configuration Options

A standard Smart 902 System comes with one PTO-902 Handheld Remote and one BU-902F Base Unit, but each base unit can establish communication with up to eight PTO-902 Handheld Remotes. Each handheld must first establish a communications link with the base unit before the base unit can recognize the handheld unit. This process is called Association.

### 1.4.1 Associate Handheld to Base Unit Procedure

Use the following step to Associate a handheld remote to a base unit.

1. Remove power from the base unit.
2. Stand near the base unit in line of sight with the handheld in your hand.
3. Press and hold both buttons (see Figure 5). TX lights steady green.
4. Continue to hold both buttons for the five seconds it takes for the LINK LED to begin flashing yellow.

- When LINK flashes yellow, release the two buttons. The RX button flashes red allowing two (2) seconds for you to make the next button press.

✓ **Note:** *If the next button press is not performed within the two second interval that RX flashes red, the procedure is aborted and must be started anew to establish the Association.*

- Press and hold the Associate button (See below). The RX extinguishes, the TX lights steady green, and the LINK LED lights steady yellow.
- Apply power to the base unit while continuing to hold the Associate button.

The base unit and handheld begin to Associate and establish a communications link. Once the Association is complete, the yellow LINK led extinguishes, the RX begins flashing red, and the TX lights steady green and remains so until the button is released.

- Release the Associate button. The RX LED extinguishes, the TX LED flashes green for a brief time, and then it too extinguishes.

The SmaRT 902 System is ready for use with that particular handheld remote.

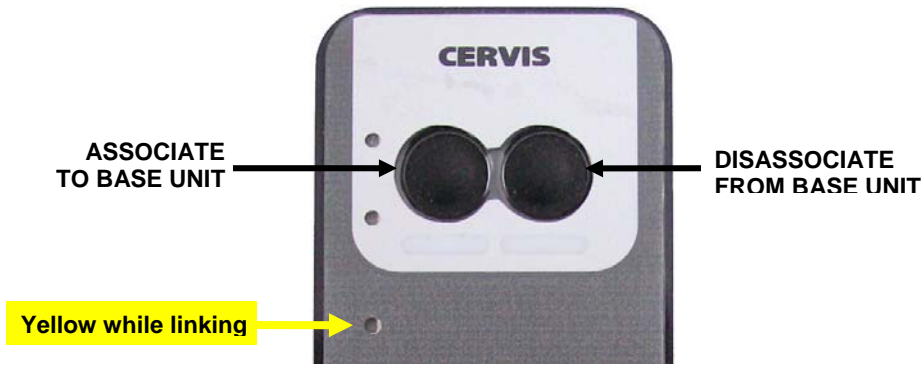


Figure 5. Handheld PTO Buttons

### 1.4.2 Disassociate Handheld to Base Unit Procedure

In some circumstances it may become necessary to disassociate a handheld that is linked to a base unit. The procedure to Disassociate handhelds from the base unit is almost identical to the Associate procedure except the Disassociate button is used and held throughout the process.

✓ **Note:** *The following procedure will Disassociate all remotes linked to the base unit.*

#### CAUTION



Completion of the following steps will Disassociate all handheld remote links previously established. It will be necessary to perform the Associate Procedure (1.4.1 above) using each handheld to re-establish communication links with the base unit.



1. Remove power from the base unit.
2. Stand near the base unit in line of sight with the handheld in your hand.
3. Press and hold both buttons (see Figure 5). TX lights steady green.
4. Continue to hold both buttons for the five seconds it takes for the LINK LED to begin flashing yellow.
5. When LINK flashes yellow, release the two buttons. The RX button flashes red allowing two (2) seconds for you to make the next button press.

✓ **Note:** *If the next button press is not performed within the two second interval that RX flashes red, the procedure is aborted and must be started anew to establish the Association.*

6. Press and hold the Disassociate button. (See Figure 5 above.) The RX extinguishes, the TX lights steady green, and the LINK LED lights steady yellow.
7. Apply power to the base unit while continuing to hold the Disassociate button.

The base unit and all previously linked handhelds begin to Disassociate communications links. Once the Disassociation is complete, the yellow LINK led extinguishes, the RX begins flashing red, and the TX lights steady green and remains so until the button is released.

8. Release the Disassociate button. The RX LED extinguishes, the TX LED flashes green for a brief time, and then it too extinguishes.

The SmaRT BU-902F Base Unit will not communicate with any handheld remote units. A handheld remote must use the Association Procedure to re-establish a communication link with the base unit.


## 2.0 Handheld Battery Installation or Change

The SmaRT handheld unit is powered by three size AAA batteries. When installing batteries, be sure to observe proper polarity as marked on the inside of the compartment to avoid damaging the unit.

1. Remove the four small Phillips screws from the Battery Compartment cover and lift the cover from the handheld.
2. If installing batteries in an empty battery compartment, install three fresh size AAA batteries. Be sure to position the batteries as shown in Figure 6 below.

If replacing expired batteries, remove the old batteries and install three fresh size AAA batteries. Be sure to position the batteries as shown in Figure 6 below.

3. Replace the compartment cover and tighten the four Phillips screws. These screws should not be over-tightened, but they should be tight enough to assure the gasket provides a proper seal.

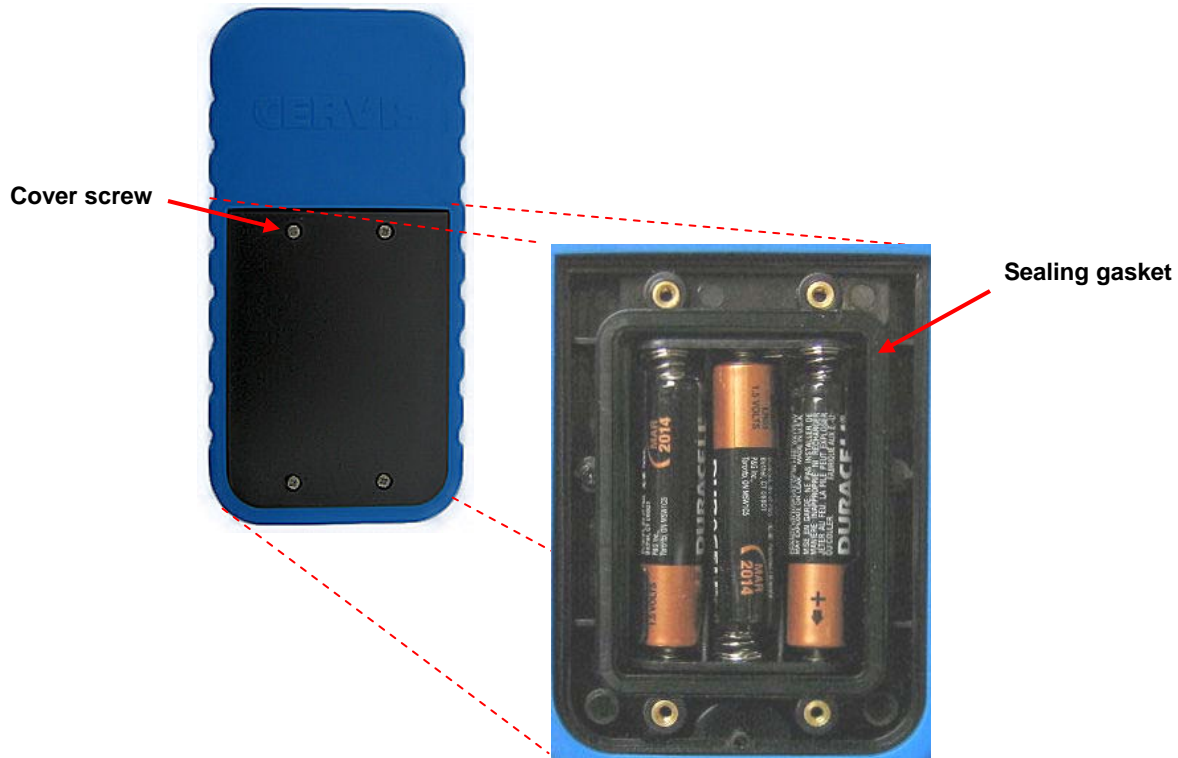

**Figure 6. Handheld Battery Installation**

✓ **Note:** Cover screws must be tightened enough to assure the gasket is compressed. Do not over-tighten the screws.

**CAUTION**



Be sure to observe proper polarity when placing batteries in the handheld battery compartment.

### 3.0 Base Unit Installation


**CAUTION** *Make sure the machine on which the base unit is to be attached is disabled during installation.*

Use the configuration diagrams supplied by Cervis to guide you in mounting the base unit and connecting your wiring harness. Mounting of the base unit is left much to your discretion with the following guidelines:

- Before installing, make sure that the configuration diagrams supplied with the system are available. Keep them so they are available at all times.
- Make sure the wiring harness is at hand.
- Always mount the receiver away from any intense radio or electric disturbance sources.
- Make sure the mount is secure. Mount the unit where you have enough room for your wiring harness connections.




**Figure 7. Base Unit**

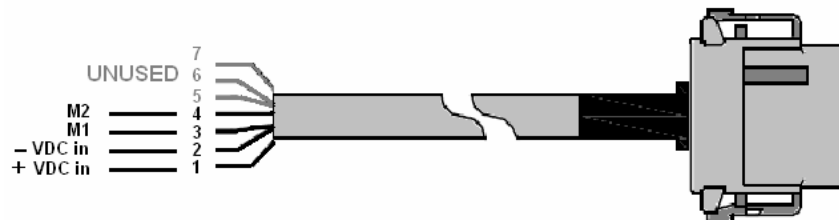

**Figure 8. Wiring Harness Cable**

## 4.0 Using the SmaRT PTO-902 Handheld Remote

The front panel of the SmaRT PTO-902 Handheld Remote has two (2) push-to-operate buttons and three (3) diagnostic LEDs. Each of the two buttons have dual functions as described in Figure 9.

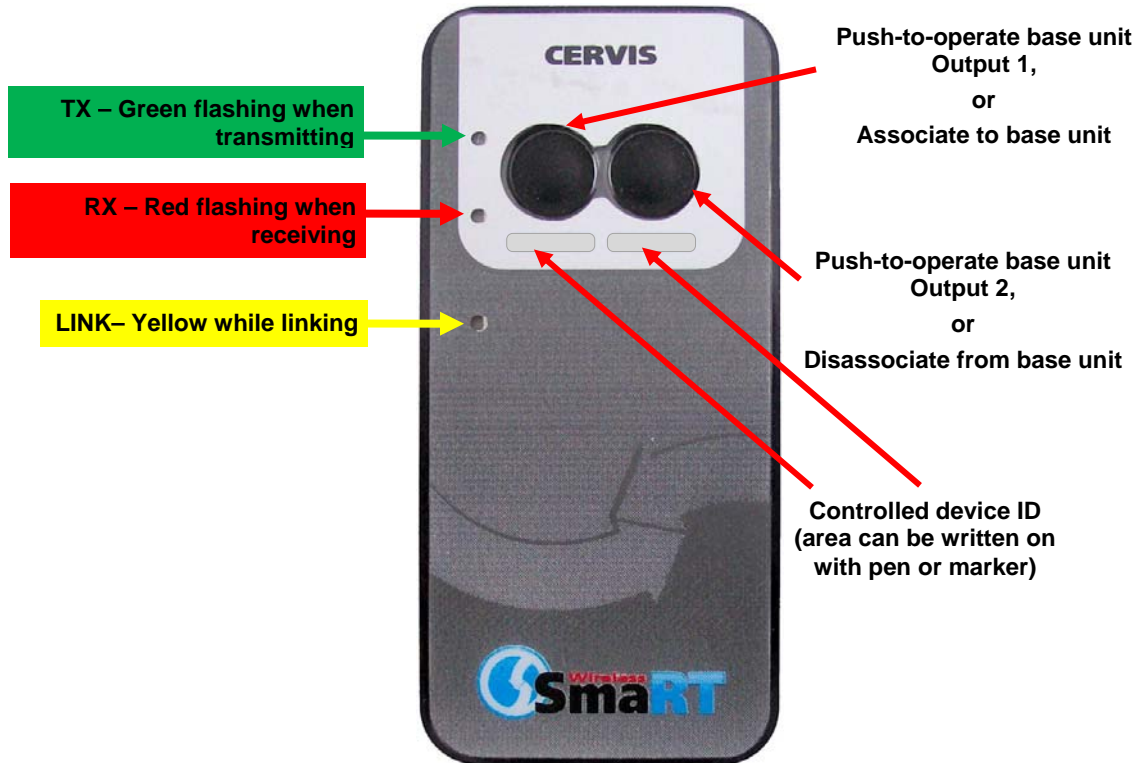

*Figure 9. PTO-902 Front Panel Buttons and Diagnostic LEDs*

### To operate the system:

1. Communication between the handheld and base unit must be established using the Association Procedure (1.4.1).
2. You must be line of sight of the base unit while holding the handheld, within 300 ft. (100m) of the unit.
3. Each button is push-to-operate (PTO). Each is dedicated to its assigned (or hardwired) output driven by the base unit. The output is only controlled when the button is pressed and held.

## 5.0 Wiring Harness

ITEM	DESCRIPTION	CERVIS PART#	QTY
1	WEDGE BLOCK	357	1
2	PLUG	Y2-03	1
3	SOCKET CONTACT	358	4
4	7 COND. CABLE	9936K28	36*
5	INNER RUBBER BOOT	B2-05C	1
6	OUTER RUBBER BOOT	B2-05D	1
7	PIN STOPPER	356	8

\*Note: 2a and 2b create Item 2.

**ITEM 2**

BASE UNIT FACEPLATE

**ITEM 1**

BASE UNIT FACEPLATE

PRODUCT NAME: HM-1000	2	3	4																
SUGGESTED WIRING ARRANGEMENT:																			
<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th colspan="2">--REVISION--</th> </tr> <tr> <th>NO.</th> <th>DESCRIPTION</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>DRAWING ISSUED FOR PRODUCTION</td> </tr> <tr> <td>2</td> <td></td> </tr> <tr> <td>3</td> <td></td> </tr> <tr> <td>4</td> <td></td> </tr> <tr> <td>5</td> <td></td> </tr> <tr> <td>6</td> <td></td> </tr> </tbody> </table>				--REVISION--		NO.	DESCRIPTION	1	DRAWING ISSUED FOR PRODUCTION	2		3		4		5		6	
--REVISION--																			
NO.	DESCRIPTION																		
1	DRAWING ISSUED FOR PRODUCTION																		
2																			
3																			
4																			
5																			
6																			
		DRAWING NO. 07100450 WWW.CERVISINC.COM																	
MATERIAL: A		SCALE: A																	
SIZE: 1		SHEET 1 OF 1																	
REV: 1		LEVEL:																	
DRAWN: K. KARNIS		APPROVED:																	

## 6.0 Specifications

### 6.1 Handheld

Table 1 - Handheld Specifications

Item	Description
<b>Power</b>	<b>V<sub>in</sub></b> +3.6V to +4.5V
	<b>Batteries</b> Three (3) AAA
	<b>Auto-shutdown</b> 5 Sec. of button inactivity
<b>Environment</b>	<b>T<sub>Operating</sub></b> -20°C to 55°C (-4°F to 131°F)
	<b>T<sub>Storage</sub></b> -40°C to 55°C (-40°F to 131°F)
	<b>Humidity</b> 0 to 100%
<b>Radio</b>	<b>Frequency</b> 906-924MHz
	<b>License</b> No license required
	<b>Modulation</b> DSSS
	<b>Antenna</b> Internal
<b>Enclosure</b>	<b>Dimensions</b> 119mm x 133mm x 36mm (5.24" x 4.69" x 1.42")
	<b>Total Weight</b> 165.28 gr. (5.83 oz.)
	<b>Durability</b> High Impact Polymer case Polycarbonate faceplate Impact absorbing bumper
<b>Indicators</b>	<b>Green</b> Green while transmitting
	<b>Red</b> Red while receiving
	<b>Yellow</b> Yellow during link
<b>Control Functions</b>	<b>Pushbuttons</b> Two function
	<b>Style</b> Push-to-operate
	<b>Button Life</b> 5-million operations (typical)

## 6.2 Base Unit

*Table 2 - Base Unit Specifications*

Item	Description
<b>Power V<sub>in</sub></b>	+9VDC to +16VDC
<b>Environment</b>	<b>T<sub>Operating</sub></b> -20°C to 70°C (-4°F to 158°F) <b>T<sub>Storage</sub></b> -40°C to 85°C (-40°F to 185°F) <b>Humidity</b> 0 to 100% <b>Vibration/Shock</b> IEC60068-2-6
<b>Radio</b>	<b>Frequency</b> 906-924MHz <b>License</b> No license required <b>Modulation</b> DSSS <b>Antenna</b> Internal
<b>Enclosure</b>	<b>Dimensions</b> 119mm x 133mm x 36mm (5.24" x 4.69" x 1.42") <b>Durability</b> High Impact Polymer
<b>Indicators</b>	<b>Power</b> Yellow OK Red/green Fault <b>TX/RX</b> Green Receive Red Transmit <b>Health</b> Green Pulse/Sec. OK <b>LED1</b> Green Output 1 Active <b>LED2</b> Green Output 2 Active
<b>Outputs</b>	<b>FET XVDC</b> 8A max. high-side switching







## **Cervis, Inc.**

Visit our Web site at: [www.cervisinc.com](http://www.cervisinc.com)

The SmaRT Remote Control System is manufactured and distributed by Cervis, Inc.

© 2007 Cervis, Inc. All rights reserved. Content is subject to change without notice.