


OVERVIEW

The Remote Light Switch offers a convenient way to control the lights in your home. The Remote Light Switch is compatible with Security+ 2.0™ and MyQ™ products. The Remote Light Switch is compatible with up to 8 Security+ 2.0™ remote controls and a combination of up to 8 MyQ™ enabled garage door openers or LiftMaster® Internet Gateway devices. This product is NOT recommended for control of household appliances or fans. Not for use with 3-way or 4-way switch combinations.

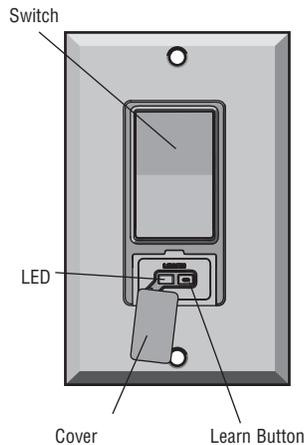

SPECIFICATIONS

Bulb Type: Compact fluorescent, incandescent, or LED.

Max Load Rating: 300 Watts

Incandescent Lamp 300 Watts

Compact Fluorescent Lamp (CFL) . . . 2.5 Amps

Voltage 120 Vac

NOTE: The wall plate is not provided.

⚠️ WARNING

To prevent possible SERIOUS INJURY or DEATH from electrocution or fire:

- Turn off power at the fuse box or circuit breaker BEFORE proceeding.
- The light control is ONLY for indoor use.
- Installation and wiring MUST be in compliance with ALL local electrical and building codes.


NOTICE: To comply with FCC and/or Industry Canada (IC) rules, adjustment or modifications of this transceiver are prohibited. THERE ARE NO USER SERVICEABLE PARTS.

This device complies with Part 15 of the FCC rules and IC RSS-210. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

AVIS : Les règles de la FCC et/ou d'Industrie Canada (IC) interdisent tout ajustement ou toute modification de ce récepteur. IL N'EXISTE AUCUNE PIÈCE SUSCEPTIBLE D'ÊTRE ENTRETENUE PAR L'UTILISATEUR.

Cet appareil est conforme aux dispositions de la partie 15 du règlement de la FCC et de la norme IC RSS-210. Son utilisation est assujettie aux deux conditions suivantes : (1) ce dispositif ne peut causer des interférences nuisibles, et (2) ce dispositif doit accepter toute interférence reçue, y compris une interférence pouvant causer un fonctionnement non souhaité.

CARTON INVENTORY

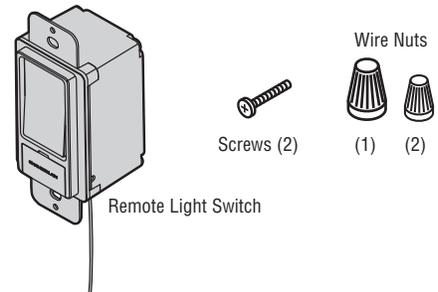

MODES OF OPERATION

The remote light switch can be programmed to Security+ 2.0™ remote controls, MyQ™ garage door openers, or LiftMaster® Internet Gateway devices.

REMOTE CONTROL OPERATION:

Allows you to activate the remote light switch from a remote control.



GARAGE DOOR OPENER OPERATION:

Allows you to synchronize the remote light switch with your garage door opener light bulbs. **Example:** The garage door opener light bulbs are set to automatically turn off after 4 ½ minutes, the remote light switch will also turn off after 4 ½ minutes.



INTERNET GATEWAY OPERATION:

Allows you to activate the remote light switch from a web browser (requires the internet gateway accessory model 828LM).



INSTALLATION

BEFORE YOU BEGIN:

This device **REQUIRES** a ground; if a ground is not available, contact a qualified electrician. If you are not experienced and familiar with electrical wiring and electrical codes, contact a qualified electrician. Some codes require installation by a qualified electrician.

NOTE: Install in accordance with all national and local codes.

1. Disconnect power at the circuit breaker or fuse box **BEFORE** proceeding.
2. Remove wall plate and set aside for re-assembly.

REMOVE OLD WALL SWITCH:


1. Remove switch from switch box.
2. During removal, identify or label the load and line wires.

NOTE: Typically a line wire is the incoming hot wire from the circuit breaker. The load wire is the wire supplying power between the switch and the light.

3. Keep load wires separated from line wire.

INSTALL NEW SWITCH:

1. Identify the antenna routing (Figure 2).

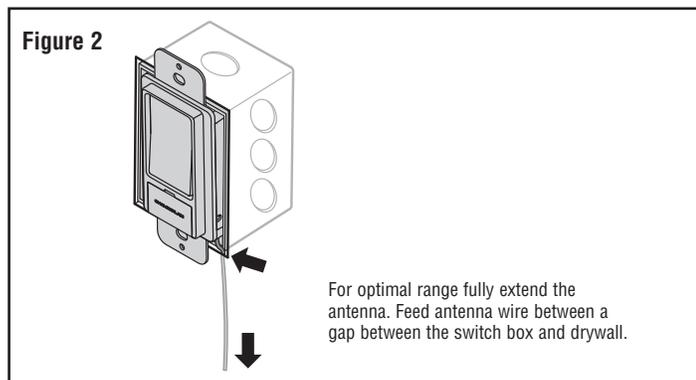

2. Connect the wires (Figure 3).

- Green wire to ground.
Connect the green wire on the new switch to the exposed copper ground, green wire, or to the ground connection within metal switch box. (**NOTE:** If ground doesn't exist contact an electrician to add a ground. This product will not function without a proper ground.)
- Red wire to load.
- Black wire to line.

3. Secure connections with a wire nut and wrap each wire nut with electrical tape.

NOTE: Turn all wire nuts clockwise, making sure the bare wires are covered. Tug on each wire nut to make sure the connections are good.

4. Carefully pack the wiring back into switch box. Make sure the wires are not pinched or strained. Make sure the antenna is hanging straight down between the switch box and the drywall.
5. Fasten the remote light switch to switch box with the screws (provided).
6. Fasten the wall plate securely over the switch box with the original screws from the wall plate.
7. Turn on the power to circuit at fuse box or circuit breaker.
8. Test the light switch, manually press the light switch to ensure the light is functional. If it is not functional, see Troubleshooting.
9. Open the cover on the light switch so you can view the LED.
10. Allow up to 10 minutes for remote light switch to power up properly, when the LED stops flashing (up to 10 minutes) proceed to Programming.

⚠️ WARNING

To prevent possible **SERIOUS INJURY** or **DEATH** from electrocution or fire:

- Turn off power at the fuse box or circuit breaker **BEFORE** proceeding.
- The light control is **ONLY** for indoor use.
- Installation and wiring **MUST** be in compliance with **ALL** local electrical and building codes.

IMPORTANT NOTE: This illustration is only an example and your application and wiring may look different.

Figure 1


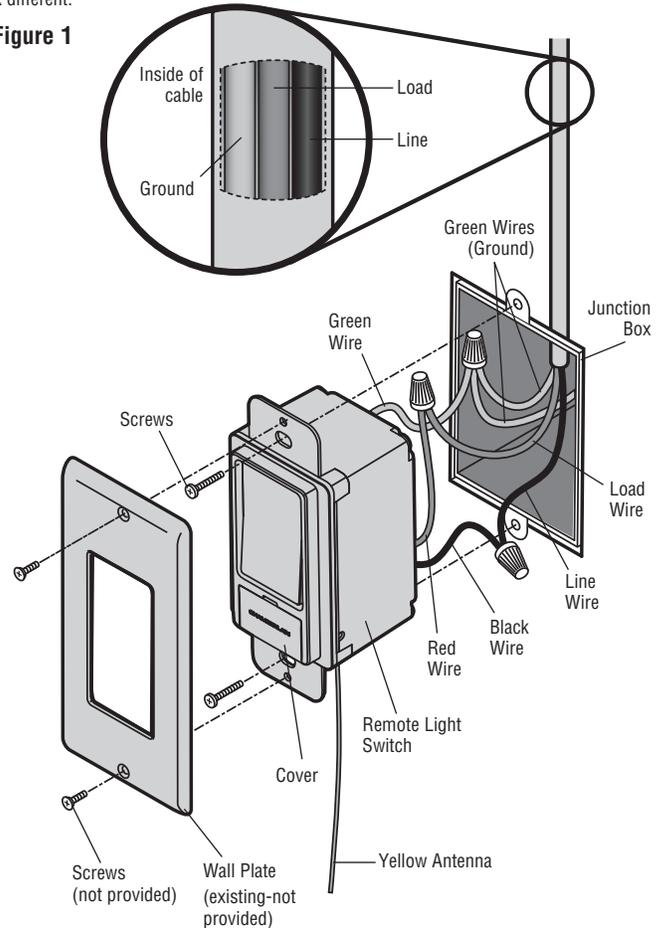



Figure 3

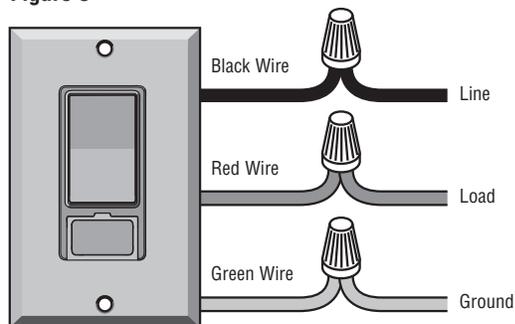


PROGRAMMING

IMPORTANT NOTE: Allow 10 minutes for remote light switch to power up properly, prior to proceeding to Programming.

1 Press and HOLD the remote control button. **OR** Press the Learn button on the garage door opener. **OR** Visit www.myliftmaster.com. Go to "Manage Devices", then "Learn Device" to program to the internet gateway accessory.

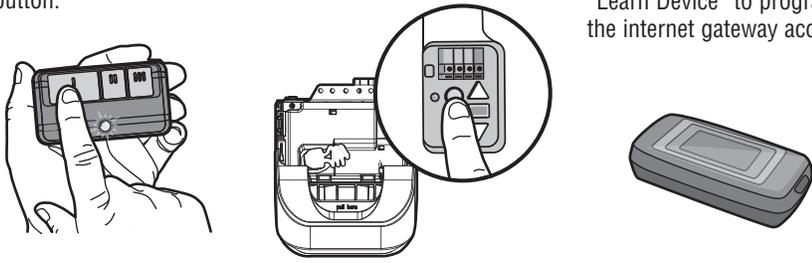


2

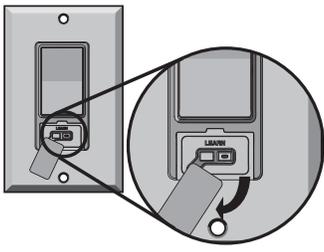

Lift the cover on the remote light switch to access the "LEARN" button.


3

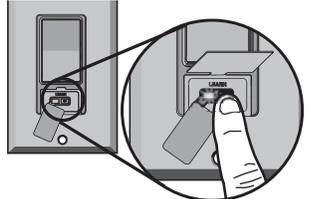

Then press and release the "LEARN" button. The LED will FLASH once. Programming is complete.


NOTE: If needed, press and hold the "LEARN" button with a narrow instrument.

NOTE: If the remote control button is not held down until the remote light switch LED flashes, the code has not been accepted.

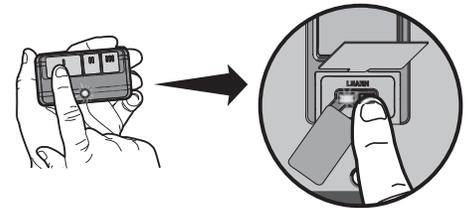


TO ERASE ALL CODES FROM MEMORY

1 Press and HOLD the "LEARN" button until the LED goes out (approximately 6 seconds). All codes are now erased.

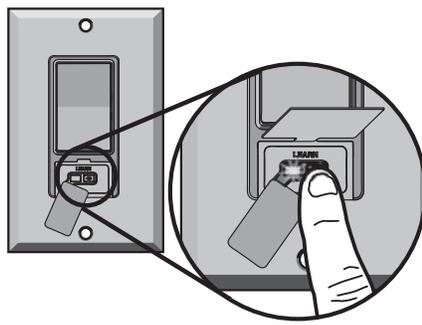


TESTING

1 Press the switch to the ON position. The light should turn on. Press the switch to the OFF position. The light should turn off.

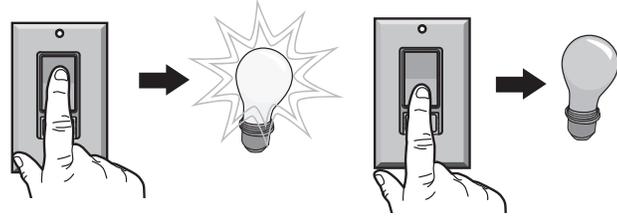

2 Press remote control button. The light should turn on. Press again and the light should turn off.

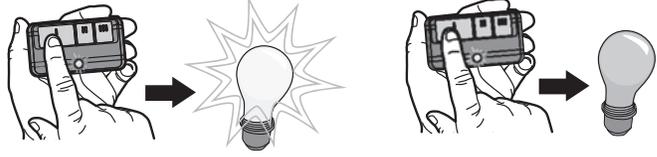

Test the remote control operation at various locations within your home for convenience and range. The remote control range will vary depending on your house and wiring construction. The range may be reduced by metal lath, foil-backed insulation or aluminum siding.

TROUBLESHOOTING

If the light does not operate, check to be sure:

- The power is **ON**. Check the fuse box or circuit breaker.
- The device is properly grounded.
- The light bulb is “good”.
- The switch is in the **ON** position.
- The electrical wiring is correct. Review the wiring instructions.
- You are pressing the remote control button selected to operate the light control.
- The remote control has power. **NOTE:** *The test light on the remote control should glow when the button is pressed, if not replace the battery.*

CAUTION

To avoid electric shock, press the switch to the OFF position when changing the light bulb.