



Chengdu Ebyte Electronic Technology Co.,Ltd

Wireless Modem

User Manual



E95-DTU (400SL22-485)

All rights to interpret and modify this manual belong to
Chengdu Ebyte Electronic Technology Co., Ltd.

Contents

1. Introduction	3
1.1 Brief Introduction	3
1.2 Features.....	3
1.3 Quick Start.....	4
1.4 Parts Description.....	6
1.5 Size	7
2. Interface Description	7
2.1 Power interface description	7
2.2 Communication interface description.....	8
3. Technical Index.....	9
3.1 Model specification	9
3.2 General specifications.....	9
3.3 Frequency range and channel number	9
3.4 Transmit power level	10
3.5 Air speed class	10
3.6 Current parameter	10
3.7 Sending and receiving length and data separate method	10
4. Function Details.....	11
4.1 Fixed-point transmission (hexadecimal).....	11
4.2 Broadcast transmission (hexadecimal)	11
4.3 Broadcast address	12
4.4 Listening address	12
5. Operating mode	12
5.1 Transparent transmission mode (mode 0)	12
5.2 WOR mode (mode 1).....	13
5.3 Configuration mode (mode 2).....	13
5.4 Deep sleep mode (mode 3)	13
6. Register read and write control.....	13
6.1 Instruction format	13
6.2 Register description	14
6.3 Factory default parameters.....	17
7. Relay Network Mode Use	17
8. PC Configuration Instructions	18
9. Program the DTU	19
10. Connection Diagram in Test and Practical Application	20
11. Related Products	20
12. Practical Application.....	21
13. Precautions for Use.....	22
Important Statement	23
Revision History	23
About us.....	23

1. Introduction

1.1 Brief Introduction

E95-DTU (400SL22-485) is a wireless data transmission DTU that uses military-grade LoRa modulation technology. It has a variety of transmission methods. It works in the 433MHz. The DTU provides a transparent RS485 interface, plastic shell, rail type installation structure, support 8-28V voltage input. LoRa spread spectrum technology will bring a longer communication distance, and has the advantage of strong anti-interference ability.

As a communication medium, wireless data transmission station has a certain scope of application like optical fiber, microwave and open wire: it provides real-time and reliable data transmission of monitoring signals in private networks under certain special conditions, with low cost, installation and maintenance convenience, strong diffraction ability, flexible network structure, and long coverage. It is suitable for many and scattered locations and complex geographic environments. It can be connected with PLC, RTU, rain gauge, level gauge and other data terminals.

1.2 Features

- ★ Using the latest LoRa technology, it is farther and more powerful than traditional LoRa digital DTU;
- ★ With data encryption, and the packet length can be set;
- ★ Adopt flame-retardant plastic shell, guide rail type installation structure, convenient and efficient installation
- ★ Hidden buttons are used to switch working modes to avoid false triggers, and the equipment is more reliable in operation;
- ★ Simple high-efficiency power supply design, support power supply configuration or line pressure mode, support 8 ~ 28V power supply;
- ★ Support LBT function, the DTU automatically waits for transmission according to the current environmental noise intensity. Greatly improve the communication success rate of the DTU in harsh environments;
- ★ Support wireless sending of command data packets, remote configuration or reading of DTU parameters;
Support communication key function, effectively prevent data from being intercepted;
- ★ It can realize multi-level relay networking, effectively expand the communication distance, and realize ultra-long-distance communication;
- ★ Using temperature compensation circuit, the frequency stability is better than $\pm 1.5\text{PPM}$;
Working temperature range: $-40^{\circ}\text{C} \sim +85^{\circ}\text{C}$, adapt to various harsh working environments, real industrial grade products;
- ★ Multiple protection functions such as power reverse connection protection, over-connection protection, antenna surge protection, etc., greatly increase the reliability of the DTU;
- ★ Powerful software function, all parameters can be set by programming: such as power, frequency, air rate, address ID, etc.;
Ultra-low power consumption, standby current is only 15mA (lower power consumption in power-saving mode and sleep mode);
- ★ Built-in watchdog and precise time layout. Once an abnormality occurs, the DTU will automatically restart and continue to work according to the previous parameter settings.

1.3 Quick Start


- ① Prepare two E95-DTU (400SL22-485)




- ② First install the antenna for the digital DTU, and then install the power supply. The user selects the power adapter for power supply according to the needs.



- ③ Use USB to RS-485 or other methods to connect the computer to the digital DTU;

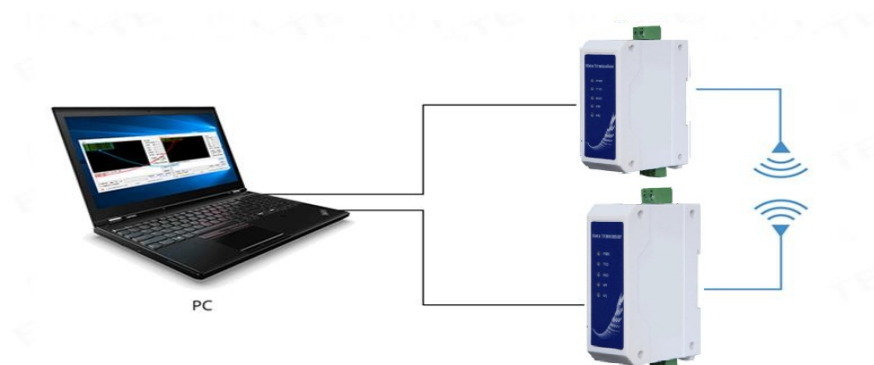

- ④ Start two serial port debugging assistants, select the serial port baud rate to be 9600bps (default), and the check method to be 8N1 to make serial port transparent transmission;

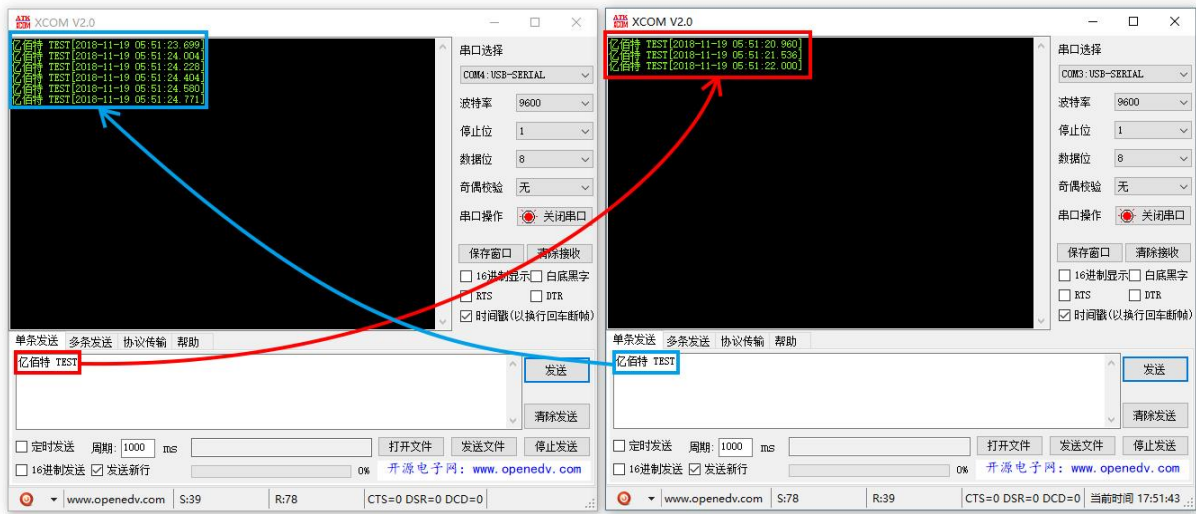


- ⑤ If the customer needs to switch the working mode, it can be controlled by the Mode button to switch between different working modes (M0 indicator, M1 indicator). Press and hold the Mode button for about 1 S and then release it to switch modes. The mode switching details are shown in the table below:

No.	Type	M1	M0	Description
Mode 0	Transparent Transmission Mode	Light Off	Light Off	Serial port open, wireless open, transparent transmission (factory default mode), support special command air configuration
Mode 1	WOR Mode	Light Off	Light On	Can be defined as WOR sender and WOR receiver, support air wakeup
Mode 2	Configuration Mode	Light On	Light Off	The user accesses the register through the serial port to control the working status of the DTU. The user can configure the DTU through the computer configuration software.
Mode 3	Deep Sleep Mode	Light On	Light On	DTU goes to sleep mode


- ★ **Note:** The DTU has a power-down save mode function (the factory default setting is transparent transmission mode), the user needs to switch the corresponding mode according to the M1 and M0 indicators (effective immediately).

1.4 Parts Description

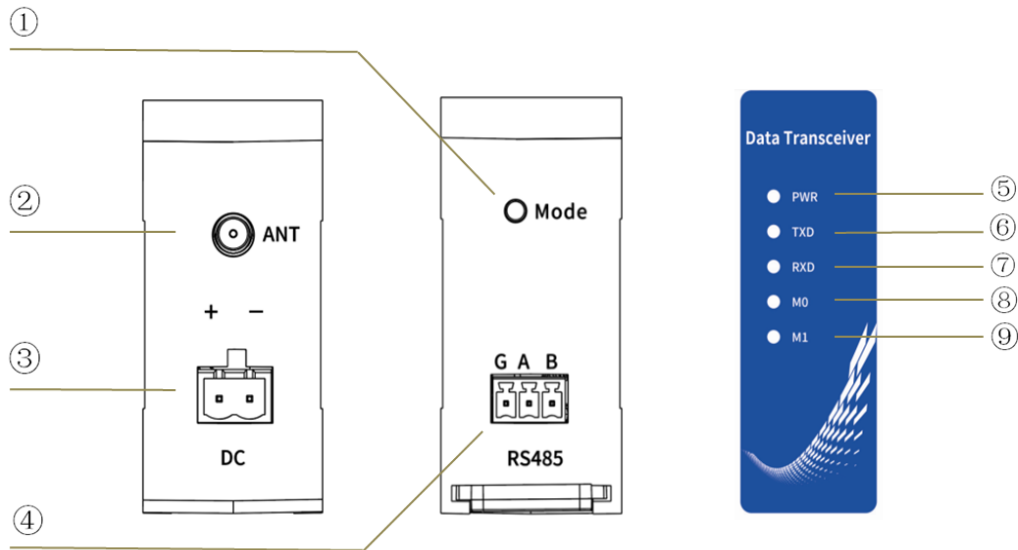


No.	Name	Function	Description
1	Mode	Mode switch button	Working mode switching control
2	ANT	RF interface	SMA-K, External thread inner hole
3	DC	Power supply	DC power input port, pressure line port
4	RS485	RS485 interface	Standard RS-485 interface
5	PWR	Power indicator	Lights up when the power is on
6	TXD	Sending indicator	Flashes when sending data
7	RXD	Receiving indicator	Flashes when receiving data
8	MO	Mode indicator	Working mode indicator
9	M1	Mode indicator	Working mode indicator

1.5 Size

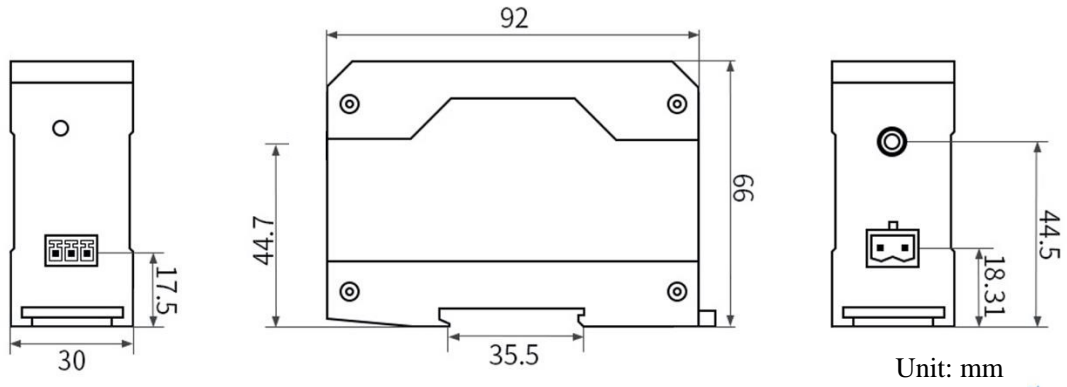

2. Interface Description


2.1 Power interface description

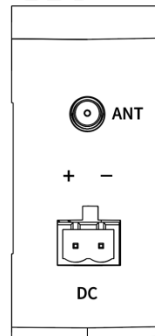

E95-DTU can be powered by 8~28V DC power supply, it is recommended to use 12V or 24V DC power supply. The wiring port adopts wiring terminal (2 Pin) connection.

2.2 Communication interface description

E95-DTU can use 3.81 terminal block to connect with equipment through RS-485.

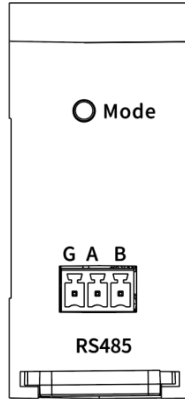

No.	Standard definition	Function	Description
1	G	signal ground	Anti-interference, grounding
2	A	RS-485 bus A interface	RS-485 A interface is connected to device A interface
3	B	RS-485 bus B interface	RS-485 B interface is connected to device B interface

- ★ Note: The communication is not smooth when connecting the DTU to multiple devices, but there is no such phenomenon in a single device. Please try to connect a 120Ω resistor in parallel between the 485_A terminal and the 485_B terminal.

3. Technical Index

3.1 Model specification

Model	Working Frequency	Distance	Specifications	Recommended Application Scenarios
	Hz	km		
E95-DTU(400SL22-485)	433MHz	5	LoRa Spread spectrum anti-interference	Suitable for environments with long distances and susceptible to interference

★ Note: Sunny, open environment without obstruction, 12V/1A power supply, 5dBi suction antenna, antenna height 2 meters from the ground, use factory default parameters.

3.2 General specifications

No.	Term	Specification	Description
1	Size	92*67*30 mm	Review installation dimensions for details
2	Weight	95 g	Weight tolerance 5g
3	Working Temperature	-40℃ ~+85℃	Meet the needs of industrial use
4	Voltage Range	8~28V DC	Recommend to use 12V or 24V
5	Interface	RS485	3.81 terminal block
6	Baud Rate	Default 9600	Baud rate range 1200~115200
7	Address Code	Default 0	A total of 65536 address codes can be set

3.3 Frequency range and channel number

Model	Default Frequency	Frequency Range	Channel Spacing	Number of Channels
	Hz	Hz	Hz	
E95-DTU(400SL22-485)	433MHz	433MHz	1M	1, Half Duplex

★ Note: In the same area, multiple groups of digital DTUs are used for one-to-one communication at the same time. It is recommended that each group of digital DTUs set the channel spacing above 2MHz.

3.5 Air speed class

Model	Default Air Rate	Level	Air Speed Class
	bps		bps
E95-DTU(400SL22-485)	2.4k	8	0.3、1.2、2.4、4.8、9.6、19.2、38.4、62.5k

- ★ Note: The higher the air speed setting, the faster the transmission rate and the shorter the transmission distance; therefore, when the speed meets the requirements of use, it is recommended that the airspeed be as low as possible.

3.6 Current parameter

Model	Transmitting Current mA		Waiting Current mA	
	12V	24V	12V	24V
E95-DTU(400SL22-485)	45	26	10	7

- ★ Note: It is recommended to reserve more than 50% of the current margin when selecting the power supply, which is conducive to the long-term stable operation of the DTU.


3.7 Sending and receiving length and data separate method

Model	Cache Size	Data Separate Method
E95-DTU(400SL22-485)	1000 Bytes	Data can be separated sent with 32/64/128/240 bytes by command


- ★ Note:
1. If the DTU's single received data is greater than the single packet capacity, the excess data will be automatically allocated to the second transmission until the transmission is completed;
 2. The single received data of the DTU cannot be larger than the buffer capacity.

4. Function Details

4.1 Fixed-point transmission (hexadecimal)

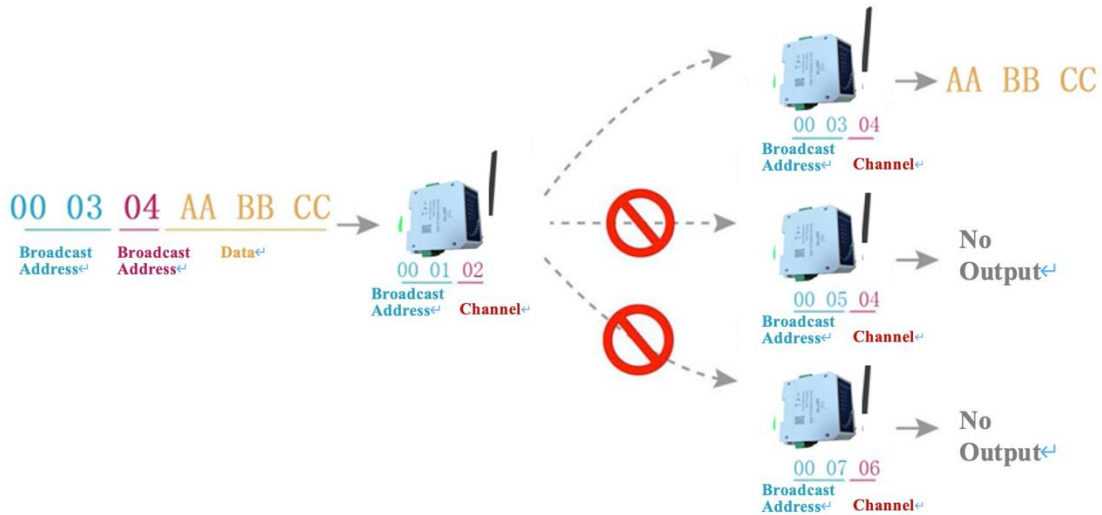

4.2 Broadcast transmission (hexadecimal)

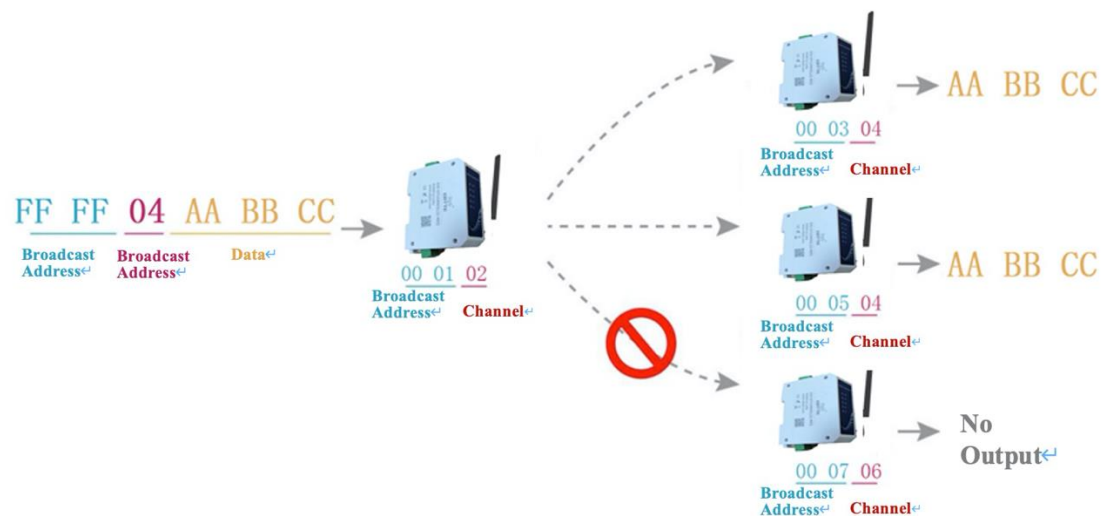

4.3 Broadcast address

- Example: Set the address of DTU A to 0xFFFF and the channel to 0x04.
- When DTU A is used as a transmitter (same mode, transparent transmission mode), all receiving DTU under the 0x04 channel can receive data to achieve the purpose of broadcasting.

4.4 Listening address

- Example: Set the address of DTU A to 0xFFFF and the channel to 0x04.
- When DTU A is receiving, it can receive all the data under channel 0x04 to achieve the purpose of monitoring.

5. Operating mode

E95-DTU has four working modes. When there is no demanding low power consumption requirement, it is recommended to configure the DTU to transparent transmission mode (mode 0) if normal communication is required;

The default setting of the DTU at the factory is transparent transmission mode (mode 0).

No.	Type	M1	M0	Description
Mode 0	Transparent transmission mode	Light Off	Light Off	Serial port open, wireless open, transparent transmission (factory default mode), support special command air configuration.
Mode 1	WOR Mode	Light Off	Light On	Can be defined as WOR sender and WOR receiver, support air wakeup
Mode 2	Configuration Mode	Light On	Light Off	The user accesses the register through the serial port to control the working status of the DTU. The user can configure the DTU through the upper computer configuration software.
Mode 3	Deep Sleep Mode	Light On	Light On	DTU goes to sleep mode.

Note: If there is no low power consumption requirement, no need to care about WOR mode (mode 1).

5.1 Transparent transmission mode (mode 0)

Type	When the M0 indicator light is off and the M1 indicator light is off, the DTU is working in mode 0
Sending	Users can input data through the serial port, and the DTU will start wireless transmission.
Receiving	The DTU receiving function is turned on, and after receiving the wireless data, it will be output through the serial port TXD pin.

5.2 WOR mode (mode 1)

Type	When the M0 indicator light is on and the M1 indicator light is off, the DTU is working in mode 1
Sending	When defined as the transmitter, the wake-up code for a certain period of time will be automatically added before transmission
Receiving	Data can be received normally, and the receiving function is equivalent to mode 0

5.3 Configuration mode (mode 2)

Type	When the M0 indicator light is off and the M1 indicator light is on, the DTU is working in mode 2
Sending	Can be configured wirelessly
Receiving	Can be configured wirelessly
Configuring	The user can access the register to configure the working status of the radio

5.4 Deep sleep mode (mode 3)

Type	When the M0 indicator light is on and the M1 indicator light is on, the DTU is working in mode 3
Sending	Unable to transmit data wirelessly.
Receiving	Unable to receive data wirelessly.

6. Register read and write control

6.1 Instruction format

In configuration mode (mode 2: M1 indicator light is on, M0 indicator light is off), the supported command list is as follows (when setting, only 9600, 8N1 format is supported):

No.	Instruction Format	Detailed Description																		
1	Set Register	<p>Command: C0+start address+length+parameter C1+start address+length+parameter</p> <p>Example 1: Configure the channel as 0x09</p> <table><thead><tr><th></th><th>Instruction</th><th>Start Address</th><th>Length</th><th>Parameter</th></tr></thead><tbody><tr><td>Send:</td><td>C0</td><td>05</td><td>01</td><td>09</td></tr><tr><td>Return:</td><td>C1</td><td>05</td><td>01</td><td>09</td></tr></tbody></table> <p>Example 2: Configure the radio address (0x1234), network address (0x00), serial port (9600 8N1), airspeed (1.2K) at the same time</p> <p>Send: C0 00 04 12 34 00 61 Return: C1 00 04 12 34 00 61</p>		Instruction	Start Address	Length	Parameter	Send:	C0	05	01	09	Return:	C1	05	01	09			
	Instruction	Start Address	Length	Parameter																
Send:	C0	05	01	09																
Return:	C1	05	01	09																
2	Read Register	<p>Command: C1+start address+length Response: C1+start address+length+parameter</p> <p>Example 1: Read the channel</p> <table><thead><tr><th></th><th>Instruction</th><th>Start Address</th><th>Length</th><th>Parameter</th></tr></thead><tbody><tr><td>Send:</td><td>C1</td><td>05</td><td>01</td><td></td></tr><tr><td>Return:</td><td>C1</td><td>05</td><td>01</td><td>09</td></tr></tbody></table> <p>Example 2: Read the DTU address, network address, serial port, airspeed at the same time</p> <p>Send: C1 00 04 Return: C1 00 04 12 34 00 61</p>		Instruction	Start Address	Length	Parameter	Send:	C1	05	01		Return:	C1	05	01	09			
	Instruction	Start Address	Length	Parameter																
Send:	C1	05	01																	
Return:	C1	05	01	09																
3	Set Up Temporary Register	<p>Command: C2 + start address + length + parameters Response: C1 + start address + length + parameters</p> <p>Example 1: Configure the channel as 0x09</p> <table><thead><tr><th></th><th>Instruction</th><th>Start Address</th><th>Length</th><th>Parameter</th></tr></thead><tbody><tr><td>Send:</td><td>C2</td><td>05</td><td>01</td><td>09</td></tr><tr><td>Return:</td><td>C1</td><td>05</td><td>01</td><td>09</td></tr></tbody></table> <p>Example 2: Configure the DTU address (0x1234), network address (0x00), serial port (9600 8N1), airspeed (1.2K) at the same time</p> <p>Send: C2 00 04 12 34 00 61 Return: C1 00 04 12 34 00 61</p>		Instruction	Start Address	Length	Parameter	Send:	C2	05	01	09	Return:	C1	05	01	09			
	Instruction	Start Address	Length	Parameter																
Send:	C2	05	01	09																
Return:	C1	05	01	09																
5	Wireless Configuration	<p>Instructions: CF CF + regular instructions Response: CF CF + regular response</p> <p>Example 1: The wireless configuration channel is 0x09</p> <table><thead><tr><th></th><th>Wireless Command Header</th><th>Command</th><th>Start Address</th><th>Length</th><th>Parameter</th></tr></thead><tbody><tr><td>Send:</td><td>CF CF</td><td>C0</td><td>05</td><td>01</td><td>09</td></tr><tr><td>Return:</td><td>CF CF</td><td>C1</td><td>05</td><td>01</td><td>09</td></tr></tbody></table> <p>Example 2: Wirelessly configure the DTU address (0x1234), network address (0x00), serial port (9600 8N1), airspeed (1.2K) at the same time</p> <p>Send: CF CF C0 00 04 12 34 00 61 Return: CF CF C1 00 04 12 34 00 61</p>		Wireless Command Header	Command	Start Address	Length	Parameter	Send:	CF CF	C0	05	01	09	Return:	CF CF	C1	05	01	09
	Wireless Command Header	Command	Start Address	Length	Parameter															
Send:	CF CF	C0	05	01	09															
Return:	CF CF	C1	05	01	09															
6	Format Error	<p>Format Error Response FF FF FF</p>																		

6.2 Register description

No.	Read and Write	Name	Description	Remarks
00H	Read/Write	ADDH	ADDH (Default 0)	High byte and low byte of radio address; Note: When the DTU address is equal to FFFF, it can be used as the broadcast and monitor address, that is: the DTU will not perform address filtering at this time
01H	Read/Write	ADDL	ADDL (Default 0)	

02H	Read/Write	NETID	NETID (Default 0)			Network address, used to distinguish networks; When communicating with each other, they should be set to the same.
03H	Read/Write	REG0	7	6	5	UART serial port rate (bps)
			0	0	0	The serial port baud rate is 1200
			0	0	1	The serial port baud rate is 2400
			0	1	0	The serial port baud rate is 4800
			0	1	1	The serial port baud rate is 9600 (default)
			1	0	0	The serial port baud rate is 19200
			1	0	1	The serial port baud rate is 38400
			1	1	0	The serial port baud rate is 57600
			1	1	1	The serial port baud rate is 115200
			4	3		Serial parity bit
			0	0		8N1 (default)
			0	1		8O1
			1	0		8E1
			1	1		8N1 (等同 00)
			2	1	0	Wireless air rate (bps)
			0	0	0	Air speed 0.3k
			0	0	1	Air speed 1.2k
			0	1	0	Air speed 2.4k (default)
			0	1	1	Air speed 4.8k
			1	0	0	Air speed 9.6k
			1	0	1	Air speed 19.2k
			1	1	0	Air speed 38.4k
			1	1	1	Air speed 62.5k
04H	Read/Write	REG1	7	6		Data Packet Separate setting
			0	0		240 Bytes (default)
			0	1		128 Bytes
			1	0		64 Bytes
			1	1		32 Bytes
			5			RSSI Environmental noise enable
			0			Disabled (default)
			1			Enable
			4	3	2	Remain

--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--

			1	1	1	4000ms	
07H	Write	CRYPT_H	High byte of key (default 0)			Only write, read returns 0; Used for encryption to avoid interception of wireless data in the air by similar DTUs; The DTU will use these two bytes as a calculation factor to transform and encrypt the air wireless signal.	
08H	Write	CRYPT_L	Low byte of key (default 0)				
80H ~ 86H	Read	PID	Product information 7 bytes			Product information 7 bytes	

7. Relay Network Mode Use

No.	Relay mode description
1	After setting the relay mode through the configuration mode, switch to the normal mode and the relay starts to work.
2	In relay mode, ADDH and ADDL are no longer used as radio addresses, but correspond to NETID forwarding and pairing respectively. If one network is received, it will be forwarded to another network. The network ID of the repeater itself is invalid.
3	In the relay mode, the relay station cannot send and receive data, and cannot perform low-power operation.
4	When the user enters other modes from mode 3 (sleep mode) or is in the reset process, the radio will reset the user parameters, during which AUX outputs low level.

Description of relay networking rules:

- 1、Forwarding rules, the relay can forward data in both directions between two NETIDs.
- 2、In the relay mode, ADDH\ADDL is no longer used as a DTU address, but as a NETID forwarding pairing.

As shown:

①Primary relay

"Node 1" NETID is 08.

"Node 2" NETID is 33.

The ADDH\ADDL of relay 1 are 08 and 33 respectively.

So, the signal sent by node 1 (08) can be forwarded to node 2 (33)

At the same time, node 1 and node 2 have the same address, so the data sent by node 1 can be received by node 2.

②Secondary relay


The ADDH\ADDL of relay 2 are 33 and 05 respectively.

So, Relay 2 can forward the data of Relay 1 to the network NETID: 05.

Therefore, node 3 and node 4 can receive node 1 data. Node 4 normally outputs data, and node 3 has a different address from node 1, so no data is output.


③Two-way relay

As shown in the configuration: the data sent by node 1 can be received by nodes 2 and 4, and the data sent by nodes 2 and 4 can also be received by node 1.

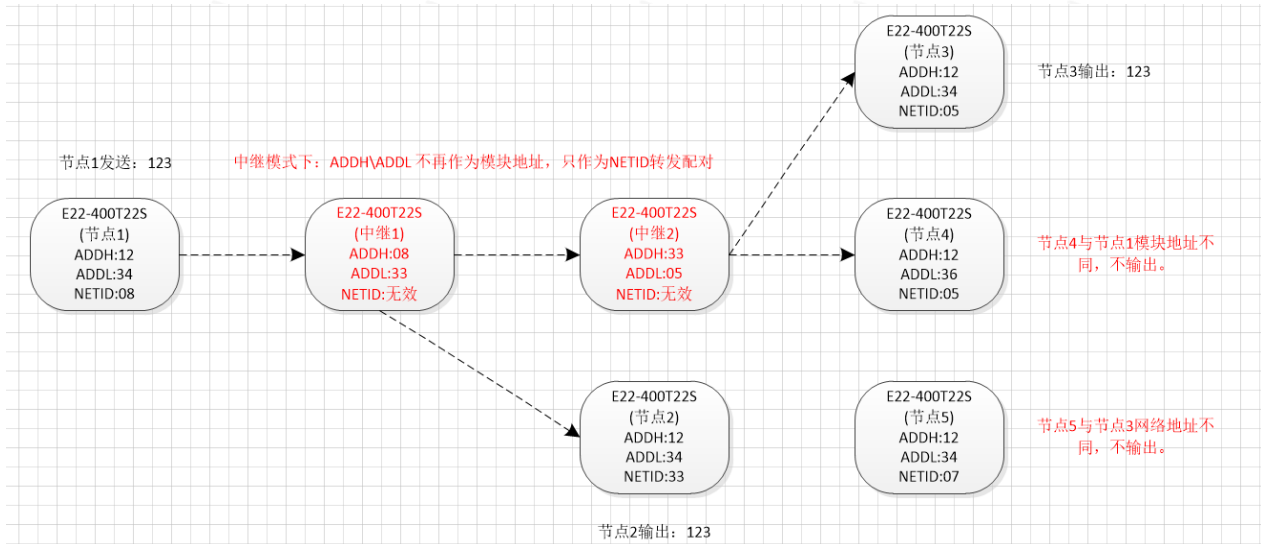


8. PC Configuration Instructions

- The following figure shows the display interface of the E95-DTU (400SL22-485) configuration host computer. The user can switch to the configuration mode through the MODE button, and quickly configure and read the parameters on the host computer.

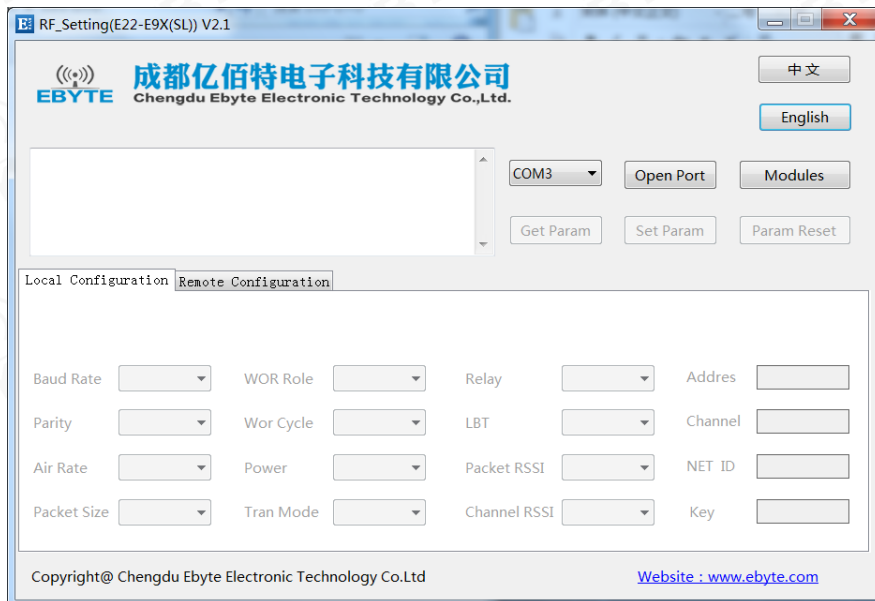

- In the configuration of the host computer, the DTU address, frequency channel, network ID, and key are all in decimal display mode, and the value range of each parameter:
Network Address: 0~65535
Frequency Channel: 1
Network ID: 0~255
Key: 0~65535
- When using the host computer to configure the relay mode, the user needs to pay attention. Since the parameters in the host computer are in decimal display mode, the DTU address and network ID need to be converted when filling in. If the network ID input by the transmitting terminal A is 02, and the network ID input by the receiving terminal B is 10, when the relay terminal R sets the radio address, the hexadecimal value 0X020A is converted to the decimal value 522 as the relay terminal R. Radio address. That is, the radio address value that needs to be filled in by the relay terminal R at this time is 522.


9. Program the DTU

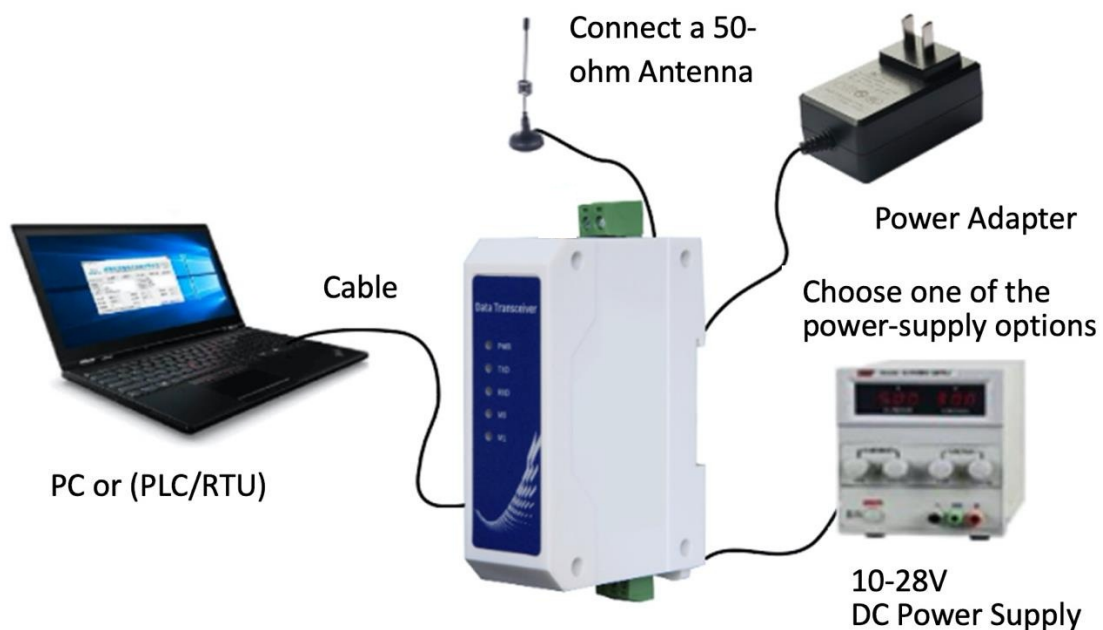

Operating Mode	M1	M0	Remark
Configuration mode	Light On	Light Off	Only use the configuration software to program the DTU in the current mode

- 1、 Programming can only be carried out in a specific working mode (see the above table). If the programming fails, please confirm whether the working mode of the DTU is correct.
- 2、 If you don't need complicated programming to open the E95-DTU (400SL22-485) configuration software, you can modify the relevant parameters.

10. Connection Diagram in Test and Practical Application

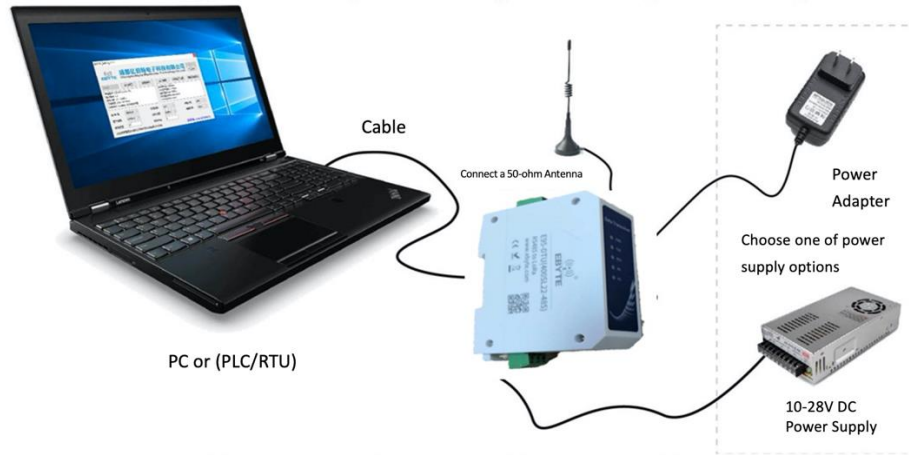

11. Related Products

Model	Interface Type	Frequency Hz	Transmit power dBm	Distance km	Features
E95-DTU(400SL30-485)	RS485	410.125/493.125M	30	10	Cost-effective LoRa, Rail Type, RS232, E90-DTU SL series intercommunication
E95-DTU(400F20-485)	RS485	410/510M	20	1	Ultra-low price digital DTU, Rail Type, RS485,, E90-DTU F series intercommunication
E95-DTU(433L20-485)	RS485	410/441M	20	3	Cost-effective LoRa, Rail Type, RS485, E90-DTU L series intercommunication
E95-DTU(433L30-485)	RS485	410/441M	30	8	Cost-effective LoRa, Rail Type, RS485, E90-DTU L series intercommunication
E95-DTU(433L20-232)	RS232	410/441M	20	3	Cost-effective LoRa, Rail Type, RS232, E90-DTU L series intercommunication
E95-DTU(433L30-232)	RS232	410/441M	30	8	Cost-effective LoRa, Rail Type, RS232, E90-DTU L series intercommunication
E95-DTU(400F20-232)	RS232	410/510M	20	1	Ultra-low price digital DTU, Rail Type, RS232,, E90-DTU F series intercommunication
E95-DTU(400SL22-232)	RS232	410.125/493.125M	22	5	Cost-effective LoRa, Rail Type, RS232, E90-DTU SL series intercommunication
E95-DTU(400SL30-232)	RS232	410.125/493.125M	30	10	Cost-effective LoRa, Rail Type, RS232, E90-DTU SL series intercommunication

12. Practical Application

Ebyte DTU is suitable for all kinds of point-to-point and point-to-multipoint wireless data transmission systems, such as smart homes, IoT transformation, power load monitoring, distribution automation, hydrology and water regime monitoring and reporting, tap water pipe network monitoring, urban street lights Industrial automation such as monitoring, air defense alarm control, railway signal monitoring, railway water supply centralized control, oil and gas supply pipeline network monitoring, GPS positioning system, remote meter reading, electronic hoisting scale, automatic target reporting, earthquake observation and reporting, fire prevention and theft prevention, environmental monitoring, etc. System, as shown below:

13. Precautions for Use

1. Please take good care of the warranty card of the device. The warranty card contains the factory number (and important technical parameters) of the device, which has important reference value for the user's future maintenance and new equipment.
2. During the warranty period, if the DTU is damaged due to the quality of the product itself rather than man-made damage or natural disasters such as lightning strikes, it enjoys free warranty; please do not repair by yourself, and contact our company if there is a problem. Ebyte provides first-class After-sales service.
3. Do not operate this DTU in the vicinity of some flammable places (such as coal mines) or explosive dangerous objects (such as detonators for detonation).
4. A suitable DC stabilized power supply should be selected, which requires strong anti-high frequency interference, small ripple, and sufficient load capacity; preferably, it should also have over-current, over-voltage protection and lightning protection functions to ensure that the DTU is normal jobs.
5. Do not use it in a working environment that exceeds the environmental characteristics of the DTU, such as high temperature, humidity, low temperature, strong electromagnetic field or dusty environment.
6. Don't let the DTU continuously be in full load transmitting state, otherwise the transmitter may be burnt out.
7. The ground wire of the DTU should be well connected with the ground wire of the external equipment (such as PC, PLC, etc.) and the ground wire of the power supply, otherwise the communication interface will be burnt easily; do not plug or unplug the serial port with power on.
8. When testing a DTU, you must connect a matching antenna or a 50Ω dummy load, otherwise the transmitter will be easily damaged; if the antenna is connected, the distance between the human body and the antenna should be more than 2 meters to avoid injury. Touch the antenna when transmitting.
9. Wireless data transmission stations often have different communication distances in different environments. The communication distance is often affected by temperature, humidity, obstacle density, obstacle volume, and electromagnetic environment; in order to ensure stable communication, it is recommended to reserve more than 50% The communication distance margin.
10. If the measured communication distance is not ideal, it is recommended to analyze and improve the communication distance from the antenna quality and antenna installation method. You can also contact support@cdebyte.com for help.
11. When selecting the power supply, in addition to keeping 50% of the current margin as recommended, it should also be noted that its ripple must not exceed 100mV.
12. Wireless communication products need to be connected to an impedance-matched antenna to work normally. Even short-term tests cannot be omitted. Product damage caused by this reason will not be covered by the warranty.

Important Statement

1. Ebyte reserves the right of final interpretation and modification of all contents in this manual.
2. Due to the continuous improvement of product hardware and software, this manual may be changed without prior notice. The latest version of the manual shall prevail.
3. It is everyone's responsibility to protect the environment: In order to reduce the use of paper, this manual only prints the Chinese part, and the English manual only provides electronic documents. If necessary, please download it from our official website; in addition, if not specifically requested by the user, the user can order in bulk. At the time, we only provide product manuals according to a certain percentage of the order quantity, not every DTU is matched with it, please understand.

Revision History

Version	Date	Description	Issued By
1.0	2020-08-17	Original Version	ken

About us

Technical support: support@cdebyte.com

Documents and RF Setting download link: www.ebyte.com

Thank you for using Ebyte products! Please contact us with any questions or suggestions: info@cdebyte.com

Official hotline:028-61399028

Web: www.ebyte.com

Address: B5 Mould Park, 199# Xiqu Ave, High-tech District, Sichuan, China



Chengdu Ebyte Electronic Technology Co.,Ltd.

FCC Statement:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the

user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.