



Cisco ASA 5500 Series Configuration Guide using the CLI

Software Version 8.4 and 8.6 for the ASA 5505, ASA 5510, ASA 5520, ASA 5540, ASA 5550, ASA 5580, ASA 5512-X, ASA 5515-X, ASA 5525-X, ASA 5545-X, ASA 5555-X, and ASA 5585-X

Released: January 31, 2011

Updated: October 31, 2012

Americas Headquarters

Cisco Systems, Inc.
170 West Tasman Drive
San Jose, CA 95134-1706
USA
<http://www.cisco.com>
Tel: 408 526-4000
800 553-NETS (6387)
Fax: 408 527-0883

Text Part Number: N/A, Online only

THE SPECIFICATIONS AND INFORMATION REGARDING THE PRODUCTS IN THIS MANUAL ARE SUBJECT TO CHANGE WITHOUT NOTICE. ALL STATEMENTS, INFORMATION, AND RECOMMENDATIONS IN THIS MANUAL ARE BELIEVED TO BE ACCURATE BUT ARE PRESENTED WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED. USERS MUST TAKE FULL RESPONSIBILITY FOR THEIR APPLICATION OF ANY PRODUCTS.

THE SOFTWARE LICENSE AND LIMITED WARRANTY FOR THE ACCOMPANYING PRODUCT ARE SET FORTH IN THE INFORMATION PACKET THAT SHIPPED WITH THE PRODUCT AND ARE INCORPORATED HEREIN BY THIS REFERENCE. IF YOU ARE UNABLE TO LOCATE THE SOFTWARE LICENSE OR LIMITED WARRANTY, CONTACT YOUR CISCO REPRESENTATIVE FOR A COPY.

The Cisco implementation of TCP header compression is an adaptation of a program developed by the University of California, Berkeley (UCB) as part of UCB's public domain version of the UNIX operating system. All rights reserved. Copyright © 1981, Regents of the University of California.

NOTWITHSTANDING ANY OTHER WARRANTY HEREIN, ALL DOCUMENT FILES AND SOFTWARE OF THESE SUPPLIERS ARE PROVIDED "AS IS" WITH ALL FAULTS. CISCO AND THE ABOVE-NAMED SUPPLIERS DISCLAIM ALL WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING, WITHOUT LIMITATION, THOSE OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT OR ARISING FROM A COURSE OF DEALING, USAGE, OR TRADE PRACTICE.

IN NO EVENT SHALL CISCO OR ITS SUPPLIERS BE LIABLE FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, OR INCIDENTAL DAMAGES, INCLUDING, WITHOUT LIMITATION, LOST PROFITS OR LOSS OR DAMAGE TO DATA ARISING OUT OF THE USE OR INABILITY TO USE THIS MANUAL, EVEN IF CISCO OR ITS SUPPLIERS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL: www.cisco.com/go/trademarks. Third-party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1110R)

Cisco ASA 5500 Series Configuration Guide using the CLI
Copyright © 2011-2012 Cisco Systems, Inc. All rights reserved.



CONTENTS

About This Guide	ixv
Document Objectives	ixv
Audience	ixv
Related Documentation	ixv
Conventions	ixvi
Obtaining Documentation and Submitting a Service Request	ixvii

PART 1

Getting Started with the ASA

CHAPTER 1

Introduction to the Cisco ASA 5500 Series	1-1
Hardware and Software Compatibility	1-1
VPN Specifications	1-1
New Features	1-1
New Features in Version 8.6(1)	1-2
New Features in Version 8.4(5)	1-4
New Features in Version 8.4(4.1)	1-6
New Features in Version 8.4(3)	1-9
New Features in Version 8.4(2)	1-12
New Features in Version 8.4(1)	1-19
Firewall Functional Overview	1-24
Security Policy Overview	1-24
Permitting or Denying Traffic with Access Lists	1-25
Applying NAT	1-25
Protecting from IP Fragments	1-25
Using AAA for Through Traffic	1-25
Applying HTTP, HTTPS, or FTP Filtering	1-25
Applying Application Inspection	1-25
Sending Traffic to the IPS Module	1-26
Sending Traffic to the Content Security and Control Module	1-26
Applying QoS Policies	1-26
Applying Connection Limits and TCP Normalization	1-26
Enabling Threat Detection	1-26
Enabling the Botnet Traffic Filter	1-27
Configuring Cisco Unified Communications	1-27

Firewall Mode Overview 1-27
 Stateful Inspection Overview 1-27
 VPN Functional Overview 1-28
 Security Context Overview 1-29

CHAPTER 2

Getting Started 2-1

Accessing the Appliance Command-Line Interface 2-1
 Configuring ASDM Access for Appliances 2-2
 Accessing ASDM Using the Factory Default Configuration 2-2
 Accessing ASDM Using a Non-Default Configuration (ASA 5505) 2-3
 Accessing ASDM Using a Non-Default Configuration (ASA 5510 and Higher) 2-5
 Starting ASDM 2-6
 Connecting to ASDM for the First Time 2-7
 Starting ASDM from the ASDM-IDM Launcher 2-8
 Starting ASDM from the Java Web Start Application 2-8
 Using ASDM in Demo Mode 2-9
 Factory Default Configurations 2-10
 Restoring the Factory Default Configuration 2-11
 ASA 5505 Default Configuration 2-11
 ASA 5505 Routed Mode Default Configuration 2-11
 ASA 5505 Transparent Mode Sample Configuration 2-13
 ASA 5510 and Higher Default Configuration 2-15
 Working with the Configuration 2-15
 Saving Configuration Changes 2-16
 Saving Configuration Changes in Single Context Mode 2-16
 Saving Configuration Changes in Multiple Context Mode 2-16
 Copying the Startup Configuration to the Running Configuration 2-17
 Viewing the Configuration 2-18
 Clearing and Removing Configuration Settings 2-18
 Creating Text Configuration Files Offline 2-19
 Applying Configuration Changes to Connections 2-19

CHAPTER 3

Managing Feature Licenses 3-1

Supported Feature Licenses Per Model 3-1
 Licenses Per Model 3-1
 License Notes 3-16
 VPN License and Feature Compatibility 3-20
 Information About Feature Licenses 3-20

Preinstalled License	3-21
Permanent License	3-21
Time-Based Licenses	3-21
Time-Based License Activation Guidelines	3-21
How the Time-Based License Timer Works	3-21
How Permanent and Time-Based Licenses Combine	3-22
Stacking Time-Based Licenses	3-23
Time-Based License Expiration	3-23
Shared AnyConnect Premium Licenses	3-23
Information About the Shared Licensing Server and Participants	3-24
Communication Issues Between Participant and Server	3-25
Information About the Shared Licensing Backup Server	3-25
Failover and Shared Licenses	3-25
Maximum Number of Participants	3-27
Failover Licenses (8.3(1) and Later)	3-28
Failover License Requirements and Exceptions	3-28
How Failover Licenses Combine	3-28
Loss of Communication Between Failover Units	3-29
Upgrading Failover Pairs	3-30
No Payload Encryption Models	3-30
Licenses FAQ	3-30
Guidelines and Limitations	3-31
Configuring Licenses	3-32
Obtaining an Activation Key	3-33
Activating or Deactivating Keys	3-33
Configuring a Shared License	3-35
Configuring the Shared Licensing Server	3-35
Configuring the Shared Licensing Backup Server (Optional)	3-37
Configuring the Shared Licensing Participant	3-37
Monitoring Licenses	3-38
Viewing Your Current License	3-38
Monitoring the Shared License	3-44
Feature History for Licensing	3-46

PART 2**Configuring Firewall and Security Context Modes****CHAPTER 4****Configuring the Transparent or Routed Firewall 4-1**

Configuring the Firewall Mode	4-1
Information About the Firewall Mode	4-1

- Information About Routed Firewall Mode 4-2
- Information About Transparent Firewall Mode 4-2
- Licensing Requirements for the Firewall Mode 4-6
- Default Settings 4-6
- Guidelines and Limitations 4-6
- Setting the Firewall Mode 4-8
- Feature History for Firewall Mode 4-9
- Configuring ARP Inspection for the Transparent Firewall 4-9
 - Information About ARP Inspection 4-10
 - Licensing Requirements for ARP Inspection 4-10
 - Default Settings 4-10
 - Guidelines and Limitations 4-10
 - Configuring ARP Inspection 4-11
 - Task Flow for Configuring ARP Inspection 4-11
 - Adding a Static ARP Entry 4-11
 - Enabling ARP Inspection 4-12
 - Monitoring ARP Inspection 4-12
 - Feature History for ARP Inspection 4-13
- Customizing the MAC Address Table for the Transparent Firewall 4-13
 - Information About the MAC Address Table 4-14
 - Licensing Requirements for the MAC Address Table 4-14
 - Default Settings 4-14
 - Guidelines and Limitations 4-14
 - Configuring the MAC Address Table 4-15
 - Adding a Static MAC Address 4-15
 - Setting the MAC Address Timeout 4-15
 - Disabling MAC Address Learning 4-16
 - Monitoring the MAC Address Table 4-16
 - Feature History for the MAC Address Table 4-17
- Firewall Mode Examples 4-17
 - How Data Moves Through the ASA in Routed Firewall Mode 4-17
 - An Inside User Visits a Web Server 4-18
 - An Outside User Visits a Web Server on the DMZ 4-19
 - An Inside User Visits a Web Server on the DMZ 4-20
 - An Outside User Attempts to Access an Inside Host 4-21
 - A DMZ User Attempts to Access an Inside Host 4-22
 - How Data Moves Through the Transparent Firewall 4-23
 - An Inside User Visits a Web Server 4-24
 - An Inside User Visits a Web Server Using NAT 4-25

An Outside User Visits a Web Server on the Inside Network	4-26
An Outside User Attempts to Access an Inside Host	4-27

CHAPTER 5

Configuring Multiple Context Mode	5-1
Information About Security Contexts	5-1
Common Uses for Security Contexts	5-2
Context Configuration Files	5-2
Context Configurations	5-2
System Configuration	5-2
Admin Context Configuration	5-2
How the ASA Classifies Packets	5-3
Valid Classifier Criteria	5-3
Classification Examples	5-4
Cascading Security Contexts	5-6
Management Access to Security Contexts	5-7
System Administrator Access	5-7
Context Administrator Access	5-8
Information About Resource Management	5-8
Resource Limits	5-8
Default Class	5-9
Class Members	5-10
Information About MAC Addresses	5-11
Default MAC Address	5-11
Interaction with Manual MAC Addresses	5-11
Failover MAC Addresses	5-12
MAC Address Format	5-12
Licensing Requirements for Multiple Context Mode	5-12
Guidelines and Limitations	5-13
Default Settings	5-14
Configuring Multiple Contexts	5-14
Task Flow for Configuring Multiple Context Mode	5-14
Enabling or Disabling Multiple Context Mode	5-15
Enabling Multiple Context Mode	5-15
Restoring Single Context Mode	5-16
Configuring a Class for Resource Management	5-16
Configuring a Security Context	5-18
Automatically Assigning MAC Addresses to Context Interfaces	5-22
Changing Between Contexts and the System Execution Space	5-23
Managing Security Contexts	5-23

Removing a Security Context	5-24
Changing the Admin Context	5-24
Changing the Security Context URL	5-25
Reloading a Security Context	5-26
Reloading by Clearing the Configuration	5-26
Reloading by Removing and Re-adding the Context	5-27
Monitoring Security Contexts	5-27
Viewing Context Information	5-27
Viewing Resource Allocation	5-29
Viewing Resource Usage	5-32
Monitoring SYN Attacks in Contexts	5-33
Viewing Assigned MAC Addresses	5-35
Viewing MAC Addresses in the System Configuration	5-36
Viewing MAC Addresses Within a Context	5-37
Configuration Examples for Multiple Context Mode	5-38
Feature History for Multiple Context Mode	5-39

PART 3

Configuring Interfaces

CHAPTER 6

Starting Interface Configuration (ASA 5510 and Higher) 6-1

Information About Starting ASA 5510 and Higher Interface Configuration	6-1
Auto-MDI/MDIX Feature	6-2
Interfaces in Transparent Mode	6-2
Management Interface	6-2
Management Interface Overview	6-2
Management <i>Slot/Port</i> Interface	6-2
Using Any Interface for Management-Only Traffic	6-3
Management Interface for Transparent Mode	6-3
No Support for Redundant Management Interfaces	6-4
Management 0/0 Interface on the ASA 5512-X through ASA 5555-X	6-4
Redundant Interfaces	6-4
Redundant Interface MAC Address	6-4
EtherChannels	6-5
Channel Group Interfaces	6-5
Connecting to an EtherChannel on Another Device	6-5
Link Aggregation Control Protocol	6-6
Load Balancing	6-7
EtherChannel MAC Address	6-7
Licensing Requirements for ASA 5510 and Higher Interfaces	6-8

Guidelines and Limitations	6-9
Default Settings	6-11
Starting Interface Configuration (ASA 5510 and Higher)	6-12
Task Flow for Starting Interface Configuration	6-12
Converting In-Use Interfaces to a Redundant or EtherChannel Interface	6-13
Enabling the Physical Interface and Configuring Ethernet Parameters	6-22
Configuring a Redundant Interface	6-25
Configuring a Redundant Interface	6-25
Changing the Active Interface	6-27
Configuring an EtherChannel	6-27
Adding Interfaces to the EtherChannel	6-27
Customizing the EtherChannel	6-29
Configuring VLAN Subinterfaces and 802.1Q Trunking	6-30
Enabling Jumbo Frame Support (Supported Models)	6-32
Monitoring Interfaces	6-33
Configuration Examples for ASA 5510 and Higher Interfaces	6-33
Physical Interface Parameters Example	6-33
Subinterface Parameters Example	6-33
Multiple Context Mode Example	6-34
EtherChannel Example	6-34
Where to Go Next	6-34
Feature History for ASA 5510 and Higher Interfaces	6-35

CHAPTER 7

Starting Interface Configuration (ASA 5505)	7-1
Information About ASA 5505 Interfaces	7-1
Understanding ASA 5505 Ports and Interfaces	7-2
Maximum Active VLAN Interfaces for Your License	7-2
VLAN MAC Addresses	7-4
Power over Ethernet	7-4
Monitoring Traffic Using SPAN	7-4
Auto-MDI/MDIX Feature	7-4
Licensing Requirements for ASA 5505 Interfaces	7-4
Guidelines and Limitations	7-5
Default Settings	7-5
Starting ASA 5505 Interface Configuration	7-6
Task Flow for Starting Interface Configuration	7-6
Configuring VLAN Interfaces	7-6
Configuring and Enabling Switch Ports as Access Ports	7-7

- Configuring and Enabling Switch Ports as Trunk Ports 7-9
- Monitoring Interfaces 7-11
- Configuration Examples for ASA 5505 Interfaces 7-11
 - Access Port Example 7-11
 - Trunk Port Example 7-12
- Where to Go Next 7-13
- Feature History for ASA 5505 Interfaces 7-13

CHAPTER 8

Completing Interface Configuration (Routed Mode) 8-1

- Information About Completing Interface Configuration in Routed Mode 8-1
 - Security Levels 8-1
 - Dual IP Stack (IPv4 and IPv6) 8-2
- Licensing Requirements for Completing Interface Configuration in Routed Mode 8-2
- Guidelines and Limitations 8-5
- Default Settings 8-5
- Completing Interface Configuration in Routed Mode 8-5
 - Task Flow for Completing Interface Configuration 8-6
 - Configuring General Interface Parameters 8-6
 - Configuring the MAC Address and MTU 8-9
 - Configuring IPv6 Addressing 8-11
 - Information About IPv6 8-12
 - Configuring a Global IPv6 Address and Other Options 8-13
 - Allowing Same Security Level Communication 8-15
- Monitoring Interfaces 8-16
- Configuration Examples for Interfaces in Routed Mode 8-16
 - ASA 5505 Example 8-16
- Feature History for Interfaces in Routed Mode 8-17

CHAPTER 9

Completing Interface Configuration (Transparent Mode) 9-1

- Information About Completing Interface Configuration in Transparent Mode 9-1
 - Bridge Groups in Transparent Mode 9-1
 - Security Levels 9-2
- Licensing Requirements for Completing Interface Configuration in Transparent Mode 9-2
- Guidelines and Limitations 9-5
- Default Settings 9-6
- Completing Interface Configuration in Transparent Mode 9-6
 - Task Flow for Completing Interface Configuration 9-6

Configuring Bridge Groups	9-7
Configuring General Interface Parameters	9-8
Configuring a Management Interface (ASA 5510 and Higher)	9-11
Configuring the MAC Address and MTU	9-12
Configuring IPv6 Addressing	9-15
Information About IPv6	9-15
Configuring a Global IPv6 Address and Other Options	9-17
Allowing Same Security Level Communication	9-18
Monitoring Interfaces	9-19
Configuration Examples for Interfaces in Transparent Mode	9-19
Feature History for Interfaces in Transparent Mode	9-20

PART 4**Configuring Basic Settings****CHAPTER 10****Configuring Basic Settings 10-1**

Configuring the Hostname, Domain Name, and Passwords	10-1
Changing the Login Password	10-1
Changing the Enable Password	10-2
Setting the Hostname	10-2
Setting the Domain Name	10-3
Setting the Date and Time	10-3
Setting the Time Zone and Daylight Saving Time Date Range	10-3
Setting the Date and Time Using an NTP Server	10-4
Setting the Date and Time Manually	10-6
Configuring the Master Passphrase	10-6
Information About the Master Passphrase	10-6
Licensing Requirements for the Master Passphrase	10-7
Guidelines and Limitations	10-7
Adding or Changing the Master Passphrase	10-7
Disabling the Master Passphrase	10-9
Recovering the Master Passphrase	10-10
Feature History for the Master Passphrase	10-11
Configuring the DNS Server	10-11
Monitoring DNS Cache	10-12
DNS Cache Monitoring Commands	10-12
Feature History for DNS Cache	10-12

CHAPTER 11

Configuring DHCP 11-1

- Information About DHCP 11-1
- Licensing Requirements for DHCP 11-1
- Guidelines and Limitations 11-2
- Configuring a DHCP Server 11-2
 - Enabling the DHCP Server 11-3
 - Configuring DHCP Options 11-4
 - Options that Return an IP Address 11-4
 - Options that Return a Text String 11-4
 - Options that Return a Hexadecimal Value 11-5
 - Using Cisco IP Phones with a DHCP Server 11-6
- Configuring DHCP Relay Services 11-7
- DHCP Monitoring Commands 11-8
- Feature History for DHCP 11-8

CHAPTER 12

Configuring Dynamic DNS 12-1

- Information About DDNS 12-1
- Licensing Requirements for DDNS 12-2
- Guidelines and Limitations 12-2
- Configuring DDNS 12-2
- Configuration Examples for DDNS 12-3
 - Example 1: Client Updates Both A and PTR RRs for Static IP Addresses 12-3
 - Example 2: Client Updates Both A and PTR RRs; DHCP Server Honors Client Update Request; FQDN Provided Through Configuration 12-3
 - Example 3: Client Includes FQDN Option Instructing Server Not to Update Either RR; Server Overrides Client and Updates Both RRs. 12-4
 - Example 4: Client Asks Server To Perform Both Updates; Server Configured to Update PTR RR Only; Honors Client Request and Updates Both A and PTR RR 12-5
 - Example 5: Client Updates A RR; Server Updates PTR RR 12-5
- DDNS Monitoring Commands 12-6
- Feature History for DDNS 12-6

PART 5

Configuring Objects and Access Lists

CHAPTER 13

Configuring Objects 13-1

- Configuring Objects and Groups 13-1
 - Information About Objects and Groups 13-1
 - Information About Objects 13-2

Information About Object Groups	13-2
Licensing Requirements for Objects and Groups	13-2
Guidelines and Limitations for Objects and Groups	13-3
Configuring Objects	13-3
Configuring a Network Object	13-3
Configuring a Service Object	13-4
Configuring Object Groups	13-6
Adding a Protocol Object Group	13-6
Adding a Network Object Group	13-7
Adding a Service Object Group	13-8
Adding an ICMP Type Object Group	13-9
Nesting Object Groups	13-10
Removing Object Groups	13-11
Monitoring Objects and Groups	13-11
Feature History for Objects and Groups	13-12
Configuring Regular Expressions	13-12
Creating a Regular Expression	13-12
Creating a Regular Expression Class Map	13-15
Scheduling Extended Access List Activation	13-16
Information About Scheduling Access List Activation	13-16
Licensing Requirements for Scheduling Access List Activation	13-16
Guidelines and Limitations for Scheduling Access List Activation	13-16
Configuring and Applying Time Ranges	13-17
Configuration Examples for Scheduling Access List Activation	13-18
Feature History for Scheduling Access List Activation	13-18

CHAPTER 14**Information About Access Lists 14-1**

Access List Types	14-1
Access Control Entry Order	14-2
Access Control Implicit Deny	14-3
IP Addresses Used for Access Lists When You Use NAT	14-3
Where to Go Next	14-3

CHAPTER 15**Adding an Extended Access List 15-1**

Information About Extended Access Lists	15-1
Licensing Requirements for Extended Access Lists	15-1
Default Settings	15-2
Configuring Extended Access Lists	15-2

- Adding an Extended Access List 15-3
- Adding Remarks to Access Lists 15-5
- Monitoring Extended Access Lists 15-5
- Configuration Examples for Extended Access Lists 15-5
 - Configuration Examples for Extended Access Lists (No Objects) 15-6
 - Configuration Examples for Extended Access Lists (Using Objects) 15-6
- Where to Go Next 15-7
- Feature History for Extended Access Lists 15-7

CHAPTER 16

Adding an EtherType Access List 16-1

- Information About EtherType Access Lists 16-1
- Licensing Requirements for EtherType Access Lists 16-1
- Guidelines and Limitations 16-2
- Default Settings 16-2
- Configuring EtherType Access Lists 16-2
 - Task Flow for Configuring EtherType Access Lists 16-2
 - Adding EtherType Access Lists 16-3
 - Adding Remarks to Access Lists 16-4
- What to Do Next 16-4
- Monitoring EtherType Access Lists 16-4
- Configuration Examples for EtherType Access Lists 16-5
- Feature History for EtherType Access Lists 16-5

CHAPTER 17

Adding a Standard Access List 17-1

- Information About Standard Access Lists 17-1
- Licensing Requirements for Standard Access Lists 17-1
- Guidelines and Limitations 17-1
- Default Settings 17-2
- Adding Standard Access Lists 17-3
 - Task Flow for Configuring Extended Access Lists 17-3
 - Adding a Standard Access List 17-3
 - Adding Remarks to Access Lists 17-4
- What to Do Next 17-4
- Monitoring Access Lists 17-4
- Configuration Examples for Standard Access Lists 17-4
- Feature History for Standard Access Lists 17-5

CHAPTER 18

- Adding a Webtype Access List 18-1**
 - Licensing Requirements for Webtype Access Lists 18-1
 - Guidelines and Limitations 18-1
 - Default Settings 18-2
 - Using Webtype Access Lists 18-2
 - Task Flow for Configuring Webtype Access Lists 18-2
 - Adding Webtype Access Lists with a URL String 18-3
 - Adding Webtype Access Lists with an IP Address 18-4
 - Adding Remarks to Access Lists 18-5
 - What to Do Next 18-5
 - Monitoring Webtype Access Lists 18-5
 - Configuration Examples for Webtype Access Lists 18-5
 - Feature History for Webtype Access Lists 18-7

CHAPTER 19

- Adding an IPv6 Access List 19-1**
 - Information About IPv6 Access Lists 19-1
 - Licensing Requirements for IPv6 Access Lists 19-1
 - Prerequisites for Adding IPv6 Access Lists 19-2
 - Guidelines and Limitations 19-2
 - Default Settings 19-3
 - Configuring IPv6 Access Lists 19-4
 - Task Flow for Configuring IPv6 Access Lists 19-4
 - Adding IPv6 Access Lists 19-5
 - Adding Remarks to Access Lists 19-6
 - Monitoring IPv6 Access Lists 19-7
 - Configuration Examples for IPv6 Access Lists 19-7
 - Where to Go Next 19-7
 - Feature History for IPv6 Access Lists 19-7

CHAPTER 20

- Configuring Logging for Access Lists 20-1**
 - Configuring Logging for Access Lists 20-1
 - Information About Logging Access List Activity 20-1
 - Licensing Requirements for Access List Logging 20-2
 - Guidelines and Limitations 20-2
 - Default Settings 20-3
 - Configuring Access List Logging 20-3
 - Monitoring Access Lists 20-4

- Configuration Examples for Access List Logging 20-4
- Feature History for Access List Logging 20-5
- Managing Deny Flows 20-5
 - Information About Managing Deny Flows 20-6
 - Licensing Requirements for Managing Deny Flows 20-6
 - Guidelines and Limitations 20-6
 - Default Settings 20-7
 - Managing Deny Flows 20-7
 - Monitoring Deny Flows 20-7
 - Feature History for Managing Deny Flows 20-8

PART 6

Configuring IP Routing

CHAPTER 21

Routing Overview 21-1

- Information About Routing 21-1
 - Switching 21-2
 - Path Determination 21-2
 - Supported Route Types 21-2
 - Static Versus Dynamic 21-3
 - Single-Path Versus Multipath 21-3
 - Flat Versus Hierarchical 21-3
 - Link-State Versus Distance Vector 21-4
- How Routing Behaves Within the ASA 21-4
 - Egress Interface Selection Process 21-4
 - Next Hop Selection Process 21-4
- Supported Internet Protocols for Routing 21-5
- Information About the Routing Table 21-6
 - Displaying the Routing Table 21-6
 - How the Routing Table Is Populated 21-6
 - Backup Routes 21-8
 - How Forwarding Decisions Are Made 21-8
 - Dynamic Routing and Failover 21-9
- Information About IPv6 Support 21-9
 - Features That Support IPv6 21-9
 - IPv6-Enabled Commands 21-10
 - Entering IPv6 Addresses in Commands 21-11
- Disabling Proxy ARPs 21-11

CHAPTER 22**Configuring Static and Default Routes 22-1**

- Information About Static and Default Routes 22-1
- Licensing Requirements for Static and Default Routes 22-2
- Guidelines and Limitations 22-2
- Configuring Static and Default Routes 22-2
 - Configuring a Static Route 22-3
 - Adding or Editing a Static Route 22-3
 - Configuring a Default Static Route 22-4
 - Limitations on Configuring a Default Static Route 22-4
- Configuring IPv6 Default and Static Routes 22-5
- Monitoring a Static or Default Route 22-6
- Configuration Examples for Static or Default Routes 22-8
- Feature History for Static and Default Routes 22-8

CHAPTER 23**Defining Route Maps 23-1**

- Information About Route Maps 23-1
 - Permit and Deny Clauses 23-2
 - Match and Set Clause Values 23-2
- Licensing Requirements for Route Maps 23-3
- Guidelines and Limitations 23-3
- Defining a Route Map 23-4
- Customizing a Route Map 23-4
 - Defining a Route to Match a Specific Destination Address 23-4
 - Configuring the Metric Values for a Route Action 23-5
- Configuration Example for Route Maps 23-6
- Feature History for Route Maps 23-6

CHAPTER 24**Configuring OSPF 24-1**

- Information About OSPF 24-1
- Licensing Requirements for OSPF 24-2
- Guidelines and Limitations 24-3
- Configuring OSPF 24-3
- Customizing OSPF 24-4
 - Redistributing Routes Into OSPF 24-4
 - Configuring Route Summarization When Redistributing Routes Into OSPF 24-6
 - Configuring Route Summarization Between OSPF Areas 24-7
 - Configuring OSPF Interface Parameters 24-8

- Configuring OSPF Area Parameters 24-10
- Configuring OSPF NSSA 24-11
- Defining Static OSPF Neighbors 24-12
- Configuring Route Calculation Timers 24-13
- Logging Neighbors Going Up or Down 24-13
- Restarting the OSPF Process 24-14
- Configuration Example for OSPF 24-14
- Monitoring OSPF 24-16
- Feature History for OSPF 24-17

CHAPTER 25

Configuring RIP 25-1

- Information About RIP 25-1
 - Routing Update Process 25-2
 - RIP Routing Metric 25-2
 - RIP Stability Features 25-2
 - RIP Timers 25-2
- Licensing Requirements for RIP 25-3
- Guidelines and Limitations 25-3
- Configuring RIP 25-4
 - Enabling RIP 25-4
- Customizing RIP 25-4
 - Configuring the RIP Version 25-5
 - Configuring Interfaces for RIP 25-6
 - Configuring the RIP Send and Receive Version on an Interface 25-6
 - Configuring Route Summarization 25-7
 - Filtering Networks in RIP 25-8
 - Redistributing Routes into the RIP Routing Process 25-8
 - Enabling RIP Authentication 25-9
 - . Restarting the RIP Process 25-10
- Monitoring RIP 25-11
- Configuration Example for RIP 25-11
- Feature History for RIP 25-11

CHAPTER 26

Configuring Multicast Routing 26-1

- Information About Multicast Routing 26-1
 - Stub Multicast Routing 26-2
 - PIM Multicast Routing 26-2
 - Multicast Group Concept 26-2

Multicast Addresses	26-2
Licensing Requirements for Multicast Routing	26-2
Guidelines and Limitations	26-3
Enabling Multicast Routing	26-3
Customizing Multicast Routing	26-4
Configuring Stub Multicast Routing and Forwarding IGMP Messages	26-4
Configuring a Static Multicast Route	26-4
Configuring IGMP Features	26-5
Disabling IGMP on an Interface	26-6
Configuring IGMP Group Membership	26-6
Configuring a Statically Joined IGMP Group	26-6
Controlling Access to Multicast Groups	26-7
Limiting the Number of IGMP States on an Interface	26-7
Modifying the Query Messages to Multicast Groups	26-8
Changing the IGMP Version	26-9
Configuring PIM Features	26-9
Enabling and Disabling PIM on an Interface	26-10
Configuring a Static Rendezvous Point Address	26-10
Configuring the Designated Router Priority	26-11
Configuring and Filtering PIM Register Messages	26-11
Configuring PIM Message Intervals	26-12
Filtering PIM Neighbors	26-12
Configuring a Bidirectional Neighbor Filter	26-13
Configuring a Multicast Boundary	26-14
Configuration Example for Multicast Routing	26-14
Additional References	26-15
Related Documents	26-15
RFCs	26-15
Feature History for Multicast Routing	26-15

CHAPTER 27

Configuring EIGRP	27-1
Information About EIGRP	27-1
Licensing Requirements for EIGRP	27-2
Guidelines and Limitations	27-2
Configuring EIGRP	27-3
Enabling EIGRP	27-3
Enabling EIGRP Stub Routing	27-3
Customizing EIGRP	27-4

- Defining a Network for an EIGRP Routing Process 27-5
- Configuring Interfaces for EIGRP 27-6
 - Configuring Passive Interfaces 27-7
- Configuring the Summary Aggregate Addresses on Interfaces 27-8
- Changing the Interface Delay Value 27-9
- Enabling EIGRP Authentication on an Interface 27-9
- Defining an EIGRP Neighbor 27-10
- Redistributing Routes Into EIGRP 27-11
- Filtering Networks in EIGRP 27-12
- Customizing the EIGRP Hello Interval and Hold Time 27-13
- Disabling Automatic Route Summarization 27-14
- Configuring Default Information in EIGRP 27-15
- Disabling EIGRP Split Horizon 27-16
- Restarting the EIGRP Process 27-17
- Monitoring EIGRP 27-17
- Configuration Example for EIGRP 27-18
- Feature History for EIGRP 27-19

CHAPTER 28

- Configuring IPv6 Neighbor Discovery 28-1**
 - Information About IPv6 Neighbor Discovery 28-1
 - Neighbor Solicitation Messages 28-2
 - Neighbor Reachable Time 28-3
 - Router Advertisement Messages 28-3
 - Static IPv6 Neighbors 28-4
 - Licensing Requirements for IPv6 Neighbor Discovery 28-4
 - Guidelines and Limitations 28-4
 - Default Settings for IPv6 Neighbor Discovery 28-6
 - Configuring the Neighbor Solicitation Message Interval 28-7
 - Configuring the Neighbor Reachable Time 28-7
 - Configuring the Router Advertisement Transmission Interval 28-8
 - Configuring the Router Lifetime Value 28-8
 - Configuring DAD Settings 28-9
 - Configuring IPv6 Addresses on an Interface 28-9
 - Suppressing Router Advertisement Messages 28-10
 - Configuring the IPv6 Prefix 28-11
 - Configuring a Static IPv6 Neighbor 28-12
 - Monitoring IPv6 Neighbor Discovery 28-13

Additional References	28-13
Related Documents for IPv6 Prefixes	28-14
RFCs for IPv6 Prefixes and Documentation	28-14
Feature History for IPv6 Neighbor Discovery	28-14

PART 7**Configuring Network Address Translation****CHAPTER 29****Information About NAT 29-1**

Why Use NAT?	29-1
NAT Terminology	29-2
NAT Types	29-3
NAT Types Overview	29-3
Static NAT	29-3
Information About Static NAT	29-3
Information About Static NAT with Port Translation	29-4
Information About One-to-Many Static NAT	29-6
Information About Other Mapping Scenarios (Not Recommended)	29-7
Dynamic NAT	29-8
Information About Dynamic NAT	29-9
Dynamic NAT Disadvantages and Advantages	29-10
Dynamic PAT	29-10
Information About Dynamic PAT	29-10
Dynamic PAT Disadvantages and Advantages	29-11
Identity NAT	29-11
NAT in Routed and Transparent Mode	29-12
NAT in Routed Mode	29-13
NAT in Transparent Mode	29-13
NAT for VPN	29-14
How NAT is Implemented	29-16
Main Differences Between Network Object NAT and Twice NAT	29-16
Information About Network Object NAT	29-17
Information About Twice NAT	29-17
NAT Rule Order	29-20
NAT Interfaces	29-21
Routing NAT Packets	29-21
Mapped Addresses and Routing	29-22
Transparent Mode Routing Requirements for Remote Networks	29-24
Determining the Egress Interface	29-24

DNS and NAT 29-24
 Where to Go Next 29-27

CHAPTER 30

Configuring Network Object NAT 30-1
 Information About Network Object NAT 30-1
 Licensing Requirements for Network Object NAT 30-2
 Prerequisites for Network Object NAT 30-2
 Guidelines and Limitations 30-2
 Default Settings 30-3
 Configuring Network Object NAT 30-3
 Configuring Dynamic NAT 30-4
 Configuring Dynamic PAT (Hide) 30-6
 Configuring Static NAT or Static NAT-with-Port-Translation 30-10
 Configuring Identity NAT 30-12
 Monitoring Network Object NAT 30-14
 Configuration Examples for Network Object NAT 30-15
 Providing Access to an Inside Web Server (Static NAT) 30-15
 NAT for Inside Hosts (Dynamic NAT) and NAT for an Outside Web Server (Static NAT) 30-16
 Inside Load Balancer with Multiple Mapped Addresses (Static NAT, One-to-Many) 30-17
 Single Address for FTP, HTTP, and SMTP (Static NAT-with-Port-Translation) 30-18
 DNS Server on Mapped Interface, Web Server on Real Interface (Static NAT with DNS Modification) 30-19
 DNS Server and Web Server on Mapped Interface, Web Server is Translated (Static NAT with DNS Modification) 30-21
 Feature History for Network Object NAT 30-22

CHAPTER 31

Configuring Twice NAT 31-1
 Information About Twice NAT 31-1
 Licensing Requirements for Twice NAT 31-2
 Prerequisites for Twice NAT 31-2
 Guidelines and Limitations 31-2
 Default Settings 31-3
 Configuring Twice NAT 31-3
 Configuring Dynamic NAT 31-4
 Configuring Dynamic PAT (Hide) 31-8
 Configuring Static NAT or Static NAT-with-Port-Translation 31-15
 Configuring Identity NAT 31-20
 Monitoring Twice NAT 31-24

Configuration Examples for Twice NAT	31-24
Different Translation Depending on the Destination (Dynamic PAT)	31-24
Different Translation Depending on the Destination Address and Port (Dynamic PAT)	31-26
Feature History for Twice NAT	31-28

PART 8**Configuring Service Policies Using the Modular Policy Framework****CHAPTER 32****Configuring a Service Policy Using the Modular Policy Framework 32-1**

Information About Service Policies	32-1
Supported Features for Through Traffic	32-2
Supported Features for Management Traffic	32-2
Feature Directionality	32-2
Feature Matching Within a Service Policy	32-3
Order in Which Multiple Feature Actions are Applied	32-4
Incompatibility of Certain Feature Actions	32-5
Feature Matching for Multiple Service Policies	32-6
Licensing Requirements for Service Policies	32-6
Guidelines and Limitations	32-6
Default Settings	32-7
Default Configuration	32-7
Default Class Maps	32-8
Task Flows for Configuring Service Policies	32-9
Task Flow for Using the Modular Policy Framework	32-9
Task Flow for Configuring Hierarchical Policy Maps for QoS Traffic Shaping	32-11
Identifying Traffic (Layer 3/4 Class Maps)	32-12
Creating a Layer 3/4 Class Map for Through Traffic	32-12
Creating a Layer 3/4 Class Map for Management Traffic	32-14
Defining Actions (Layer 3/4 Policy Map)	32-15
Applying Actions to an Interface (Service Policy)	32-17
Monitoring Modular Policy Framework	32-18
Configuration Examples for Modular Policy Framework	32-18
Applying Inspection and QoS Policing to HTTP Traffic	32-19
Applying Inspection to HTTP Traffic Globally	32-19
Applying Inspection and Connection Limits to HTTP Traffic to Specific Servers	32-20
Applying Inspection to HTTP Traffic with NAT	32-21
Feature History for Service Policies	32-21

CHAPTER 33

Configuring Special Actions for Application Inspections (Inspection Policy Map) 33-1

- Information About Inspection Policy Maps 33-1
- Guidelines and Limitations 33-2
- Default Inspection Policy Maps 33-2
- Defining Actions in an Inspection Policy Map 33-2
- Identifying Traffic in an Inspection Class Map 33-6
- Where to Go Next 33-7

PART 9

Configuring Access Control

CHAPTER 34

Configuring Access Rules 34-1

- Information About Access Rules 34-1
 - General Information About Rules 34-2
 - Implicit Permits 34-2
 - Information About Interface Access Rules and Global Access Rules 34-2
 - Using Access Rules and EtherType Rules on the Same Interface 34-2
 - Implicit Deny 34-3
 - Inbound and Outbound Rules 34-3
 - Information About Extended Access Rules 34-4
 - Access Rules for Returning Traffic 34-4
 - Allowing Broadcast and Multicast Traffic through the Transparent Firewall Using Access Rules 34-5
 - Management Access Rules 34-5
 - Information About EtherType Rules 34-5
 - Supported EtherTypes and Other Traffic 34-6
 - Access Rules for Returning Traffic 34-6
 - Allowing MPLS 34-6
- Licensing Requirements for Access Rules 34-6
- Prerequisites 34-7
- Guidelines and Limitations 34-7
- Default Settings 34-7
- Configuring Access Rules 34-7
- Monitoring Access Rules 34-8
- Configuration Examples for Permitting or Denying Network Access 34-9
- Feature History for Access Rules 34-10

Configuring AAA Servers and the Local Database 35-1

Information About AAA	35-1
Information About Authentication	35-2
Information About Authorization	35-2
Information About Accounting	35-3
Summary of Server Support	35-3
RADIUS Server Support	35-4
Authentication Methods	35-4
Attribute Support	35-4
RADIUS Authorization Functions	35-5
TACACS+ Server Support	35-5
RSA/SDI Server Support	35-5
RSA/SDI Version Support	35-5
Two-step Authentication Process	35-5
RSA/SDI Primary and Replica Servers	35-6
NT Server Support	35-6
Kerberos Server Support	35-6
LDAP Server Support	35-6
Authentication with LDAP	35-6
LDAP Server Types	35-7
HTTP Forms Authentication for Clientless SSL VPN	35-8
Local Database Support, Including as a Falback Method	35-8
How Falback Works with Multiple Servers in a Group	35-8
Using Certificates and User Login Credentials	35-9
Using User Login Credentials	35-9
Using Certificates	35-9
Licensing Requirements for AAA Servers	35-10
Guidelines and Limitations	35-10
Configuring AAA	35-10
Task Flow for Configuring AAA	35-11
Configuring AAA Server Groups	35-11
Configuring Authorization with LDAP for VPN	35-16
Configuring LDAP Attribute Maps	35-18
Adding a User Account to the Local Database	35-20
Guidelines	35-20
Limitations	35-21
Managing User Passwords	35-25
Changing User Passwords	35-27
Authenticating Users with a Public Key for SSH	35-28

- Differentiating User Roles Using AAA 35-28
 - Using Local Authentication 35-28
 - Using RADIUS Authentication 35-29
 - Using LDAP Authentication 35-29
 - Using TACACS+ Authentication 35-30
- Monitoring AAA Servers 35-30
- Additional References 35-31
 - RFCs 35-31
- Feature History for AAA Servers 35-31

CHAPTER 36

Configuring the Identity Firewall 36-1

- Information About the Identity Firewall 36-1
 - Overview of the Identity Firewall 36-1
 - Architecture for Identity Firewall Deployments 36-2
 - Features of the Identity Firewall 36-3
 - Deployment Scenarios 36-4
 - Cut-through Proxy and VPN Authentication 36-7
- Licensing for the Identity Firewall 36-8
- Guidelines and Limitations 36-8
- Prerequisites 36-9
- Configuring the Identity Firewall 36-10
- Task Flow for Configuring the Identity Firewall 36-10
 - Configuring the Active Directory Domain 36-11
 - Configuring Active Directory Agents 36-13
 - Configuring Identity Options 36-14
 - Configuring Identity-based Access Rules 36-20
 - Configuring Cut-through Proxy Authentication 36-22
 - Configuring VPN Authentication 36-24
- Monitoring the Identity Firewall 36-25
 - Monitoring AD Agents 36-26
 - Monitoring Groups 36-26
 - Monitoring Memory Usage for the Identity Firewall 36-26
 - Monitoring Users for the Identity Firewall 36-27
- Feature History for the Identity Firewall 36-28

CHAPTER 37

Configuring Management Access 37-1

- Configuring ASA Access for ASDM, Telnet, or SSH 37-1
 - Licensing Requirements for ASA Access for ASDM, Telnet, or SSH 37-2

Guidelines and Limitations	37-2
Configuring Telnet Access	37-3
Using a Telnet Client	37-4
Configuring SSH Access	37-4
Using an SSH Client	37-5
Configuring HTTPS Access for ASDM	37-6
Configuring CLI Parameters	37-6
Licensing Requirements for CLI Parameters	37-7
Guidelines and Limitations	37-7
Configuring a Login Banner	37-7
Customizing a CLI Prompt	37-8
Changing the Console Timeout	37-9
Configuring ICMP Access	37-10
Information About ICMP Access	37-10
Licensing Requirements for ICMP Access	37-10
Guidelines and Limitations	37-10
Default Settings	37-11
Configuring ICMP Access	37-11
Configuring Management Access Over a VPN Tunnel	37-12
Licensing Requirements for a Management Interface	37-12
Guidelines and Limitations	37-12
Configuring a Management Interface	37-13
Configuring AAA for System Administrators	37-13
Information About AAA for System Administrators	37-14
Information About Management Authentication	37-14
Information About Command Authorization	37-14
Licensing Requirements for AAA for System Administrators	37-17
Prerequisites	37-17
Guidelines and Limitations	37-18
Default Settings	37-18
Configuring Authentication for CLI and ASDM Access	37-19
Configuring Authentication to Access Privileged EXEC Mode (the enable Command)	37-19
Configuring Authentication for the enable Command	37-20
Authenticating Users with the login Command	37-20
Limiting User CLI and ASDM Access with Management Authorization	37-21
Configuring Command Authorization	37-22
Configuring Local Command Authorization	37-23
Viewing Local Command Privilege Levels	37-26
Configuring Commands on the TACACS+ Server	37-26

- Configuring TACACS+ Command Authorization 37-29
- Configuring Management Access Accounting 37-30
- Viewing the Currently Logged-In User 37-30
- Recovering from a Lockout 37-31
- Setting a Management Session Quota 37-32
- Feature History for Management Access 37-33

CHAPTER 38

Configuring AAA Rules for Network Access 38-1

- AAA Performance 38-1
- Licensing Requirements for AAA Rules 38-1
- Guidelines and Limitations 38-2
- Configuring Authentication for Network Access 38-2
 - Information About Authentication 38-2
 - One-Time Authentication 38-2
 - Applications Required to Receive an Authentication Challenge 38-2
 - ASA Authentication Prompts 38-3
 - Static PAT and HTTP 38-4
 - Configuring Network Access Authentication 38-4
 - Enabling Secure Authentication of Web Clients 38-6
 - Authenticating Directly with the ASA 38-7
 - Authenticating HTTP(S) Connections with a Virtual Server 38-8
 - Authenticating Telnet Connections with a Virtual Server 38-9
- Configuring Authorization for Network Access 38-11
 - Configuring TACACS+ Authorization 38-11
 - Configuring RADIUS Authorization 38-14
 - Configuring a RADIUS Server to Send Downloadable Access Control Lists 38-14
 - Configuring a RADIUS Server to Download Per-User Access Control List Names 38-18
- Configuring Accounting for Network Access 38-18
- Using MAC Addresses to Exempt Traffic from Authentication and Authorization 38-20
- Feature History for AAA Rules 38-21

CHAPTER 39

Configuring Filtering Services 39-1

- Information About Web Traffic Filtering 39-1
- Configuring ActiveX Filtering 39-2
 - Information About ActiveX Filtering 39-2
- Licensing Requirements for ActiveX Filtering 39-2
 - Guidelines and Limitations for ActiveX Filtering 39-3
 - Configuring ActiveX Filtering 39-3

Configuration Examples for ActiveX Filtering	39-3
Feature History for ActiveX Filtering	39-4
Configuring Java Applet Filtering	39-4
Information About Java Applet Filtering	39-4
Licensing Requirements for Java Applet Filtering	39-4
Guidelines and Limitations for Java Applet Filtering	39-5
Configuring Java Applet Filtering	39-5
Configuration Examples for Java Applet Filtering	39-5
Feature History for Java Applet Filtering	39-6
Filtering URLs and FTP Requests with an External Server	39-6
Information About URL Filtering	39-6
Licensing Requirements for URL Filtering	39-7
Guidelines and Limitations for URL Filtering	39-7
Identifying the Filtering Server	39-8
Configuring Additional URL Filtering Settings	39-10
Buffering the Content Server Response	39-10
Caching Server Addresses	39-11
Filtering HTTP URLs	39-11
Filtering HTTPS URLs	39-13
Filtering FTP Requests	39-14
Monitoring Filtering Statistics	39-15
Feature History for URL Filtering	39-17

CHAPTER 40**Configuring Web Cache Services Using WCCP 40-1**

Information About WCCP	40-1
Guidelines and Limitations	40-1
Licensing Requirements for WCCP	40-2
Enabling WCCP Redirection	40-3
WCCP Monitoring Commands	40-4
Feature History for WCCP	40-4

CHAPTER 41**Configuring Digital Certificates 41-1**

Information About Digital Certificates	41-1
Public Key Cryptography	41-2
Certificate Scalability	41-2
Key Pairs	41-2
Trustpoints	41-3
Certificate Enrollment	41-3

- Proxy for SCEP Requests 41-3
- Revocation Checking 41-4
 - Supported CA Servers 41-4
 - CRLs 41-4
 - OCSF 41-5
- The Local CA 41-6
 - Storage for Local CA Files 41-6
 - The Local CA Server 41-6
- Licensing Requirements for Digital Certificates 41-7
- Prerequisites for Local Certificates 41-7
 - Prerequisites for SCEP Proxy Support 41-7
- Guidelines and Limitations 41-8
- Configuring Digital Certificates 41-9
 - Configuring Key Pairs 41-9
 - Removing Key Pairs 41-10
 - Configuring Trustpoints 41-10
 - Configuring CRLs for a Trustpoint 41-13
 - Exporting a Trustpoint Configuration 41-15
 - Importing a Trustpoint Configuration 41-16
 - Configuring CA Certificate Map Rules 41-17
 - Obtaining Certificates Manually 41-18
 - Obtaining Certificates Automatically with SCEP 41-20
 - Configuring Proxy Support for SCEP Requests 41-21
 - Enabling the Local CA Server 41-22
 - Configuring the Local CA Server 41-23
 - Customizing the Local CA Server 41-25
 - Debugging the Local CA Server 41-26
 - Disabling the Local CA Server 41-26
 - Deleting the Local CA Server 41-26
 - Configuring Local CA Certificate Characteristics 41-27
 - Configuring the Issuer Name 41-28
 - Configuring the CA Certificate Lifetime 41-28
 - Configuring the User Certificate Lifetime 41-29
 - Configuring the CRL Lifetime 41-30
 - Configuring the Server Keysize 41-30
 - Setting Up External Local CA File Storage 41-31
 - Downloading CRLs 41-33
 - Storing CRLs 41-34
 - Setting Up Enrollment Parameters 41-35

Adding and Enrolling Users	41-36
Renewing Users	41-38
Restoring Users	41-39
Removing Users	41-39
Revoking Certificates	41-40
Maintaining the Local CA Certificate Database	41-40
Rolling Over Local CA Certificates	41-40
Archiving the Local CA Server Certificate and Keypair	41-41
Monitoring Digital Certificates	41-41
Feature History for Certificate Management	41-43

PART 10**Configuring Application Inspection****CHAPTER 42****Getting Started with Application Layer Protocol Inspection 42-1**

Information about Application Layer Protocol Inspection	42-1
How Inspection Engines Work	42-1
When to Use Application Protocol Inspection	42-2
Guidelines and Limitations	42-3
Default Settings	42-4
Configuring Application Layer Protocol Inspection	42-6

CHAPTER 43**Configuring Inspection of Basic Internet Protocols 43-1**

DNS Inspection	43-1
How DNS Application Inspection Works	43-2
How DNS Rewrite Works	43-2
Configuring DNS Rewrite	43-3
Configuring DNS Rewrite with Two NAT Zones	43-4
Overview of DNS Rewrite with Three NAT Zones	43-4
Configuring DNS Rewrite with Three NAT Zones	43-6
Configuring a DNS Inspection Policy Map for Additional Inspection Control	43-7
Verifying and Monitoring DNS Inspection	43-10
FTP Inspection	43-11
FTP Inspection Overview	43-11
Using the strict Option	43-11
Configuring an FTP Inspection Policy Map for Additional Inspection Control	43-12
Verifying and Monitoring FTP Inspection	43-16
HTTP Inspection	43-16
HTTP Inspection Overview	43-16

- Configuring an HTTP Inspection Policy Map for Additional Inspection Control 43-17
- ICMP Inspection 43-20
- ICMP Error Inspection 43-21
- Instant Messaging Inspection 43-21
 - IM Inspection Overview 43-21
 - Configuring an Instant Messaging Inspection Policy Map for Additional Inspection Control 43-21
- IP Options Inspection 43-24
 - IP Options Inspection Overview 43-25
 - Configuring an IP Options Inspection Policy Map for Additional Inspection Control 43-25
- IPsec Pass Through Inspection 43-26
 - IPsec Pass Through Inspection Overview 43-27
 - Example for Defining an IPsec Pass Through Parameter Map 43-27
- IPv6 Inspection 43-27
 - Configuring an IPv6 Inspection Policy Map 43-28
- NetBIOS Inspection 43-28
 - NetBIOS Inspection Overview 43-28
 - Configuring a NetBIOS Inspection Policy Map for Additional Inspection Control 43-29
- PPTP Inspection 43-30
- SMTP and Extended SMTP Inspection 43-31
 - SMTP and ESMTP Inspection Overview 43-31
 - Configuring an ESMTP Inspection Policy Map for Additional Inspection Control 43-32
- TFTP Inspection 43-34

CHAPTER 44

Configuring Inspection for Voice and Video Protocols 44-1

- CTIQBE Inspection 44-1
 - CTIQBE Inspection Overview 44-1
 - Limitations and Restrictions 44-2
 - Verifying and Monitoring CTIQBE Inspection 44-2
- H.323 Inspection 44-3
 - H.323 Inspection Overview 44-4
 - How H.323 Works 44-4
 - H.239 Support in H.245 Messages 44-5
 - Limitations and Restrictions 44-5
 - Configuring an H.323 Inspection Policy Map for Additional Inspection Control 44-6
 - Configuring H.323 and H.225 Timeout Values 44-9
 - Verifying and Monitoring H.323 Inspection 44-9
 - Monitoring H.225 Sessions 44-9
 - Monitoring H.245 Sessions 44-10

Monitoring H.323 RAS Sessions	44-10
MGCP Inspection	44-11
MGCP Inspection Overview	44-11
Configuring an MGCP Inspection Policy Map for Additional Inspection Control	44-13
Configuring MGCP Timeout Values	44-14
Verifying and Monitoring MGCP Inspection	44-14
RTSP Inspection	44-15
RTSP Inspection Overview	44-15
Using RealPlayer	44-16
Restrictions and Limitations	44-16
Configuring an RTSP Inspection Policy Map for Additional Inspection Control	44-16
SIP Inspection	44-19
SIP Inspection Overview	44-19
SIP Instant Messaging	44-19
Configuring a SIP Inspection Policy Map for Additional Inspection Control	44-20
Configuring SIP Timeout Values	44-24
Verifying and Monitoring SIP Inspection	44-24
Skinny (SCCP) Inspection	44-25
SCCP Inspection Overview	44-25
Supporting Cisco IP Phones	44-26
Restrictions and Limitations	44-26
Configuring a Skinny (SCCP) Inspection Policy Map for Additional Inspection Control	44-26
Verifying and Monitoring SCCP Inspection	44-28

CHAPTER 45**Configuring Inspection of Database and Directory Protocols** 45-1

ILS Inspection	45-1
SQL*Net Inspection	45-2
Sun RPC Inspection	45-3
Sun RPC Inspection Overview	45-3
Managing Sun RPC Services	45-4
Verifying and Monitoring Sun RPC Inspection	45-4

CHAPTER 46**Configuring Inspection for Management Application Protocols** 46-1

DCERPC Inspection	46-1
DCERPC Overview	46-1
Configuring a DCERPC Inspection Policy Map for Additional Inspection Control	46-2
GTP Inspection	46-3
GTP Inspection Overview	46-3

- Configuring a GTP Inspection Policy Map for Additional Inspection Control 46-4
- Verifying and Monitoring GTP Inspection 46-8
- RADIUS Accounting Inspection 46-9
 - RADIUS Accounting Inspection Overview 46-9
 - Configuring a RADIUS Inspection Policy Map for Additional Inspection Control 46-10
- RSH Inspection 46-11
- SNMP Inspection 46-11
 - SNMP Inspection Overview 46-11
 - Configuring an SNMP Inspection Policy Map for Additional Inspection Control 46-11
- XDMCP Inspection 46-12

PART 11

Configuring Unified Communications

CHAPTER 47

Information About Cisco Unified Communications Proxy Features 47-1

- Information About the Adaptive Security Appliance in Cisco Unified Communications 47-1
- TLS Proxy Applications in Cisco Unified Communications 47-3
- Licensing for Cisco Unified Communications Proxy Features 47-4

CHAPTER 48

Configuring the Cisco Phone Proxy 48-1

- Information About the Cisco Phone Proxy 48-1
 - Phone Proxy Functionality 48-1
 - Supported Cisco UCM and IP Phones for the Phone Proxy 48-3
- Licensing Requirements for the Phone Proxy 48-4
- Prerequisites for the Phone Proxy 48-6
 - Media Termination Instance Prerequisites 48-6
 - Certificates from the Cisco UCM 48-7
 - DNS Lookup Prerequisites 48-7
 - Cisco Unified Communications Manager Prerequisites 48-7
 - Access List Rules 48-7
 - NAT and PAT Prerequisites 48-8
 - Prerequisites for IP Phones on Multiple Interfaces 48-9
 - 7960 and 7940 IP Phones Support 48-9
 - Cisco IP Communicator Prerequisites 48-10
 - Prerequisites for Rate Limiting TFTP Requests 48-11
 - Rate Limiting Configuration Example 48-11
 - About ICMP Traffic Destined for the Media Termination Address 48-11
- End-User Phone Provisioning 48-12
 - Ways to Deploy IP Phones to End Users 48-12

Phone Proxy Guidelines and Limitations	48-12
General Guidelines and Limitations	48-13
Media Termination Address Guidelines and Limitations	48-14
Configuring the Phone Proxy	48-14
Task Flow for Configuring the Phone Proxy in a Non-secure Cisco UCM Cluster	48-15
Importing Certificates from the Cisco UCM	48-15
Task Flow for Configuring the Phone Proxy in a Mixed-mode Cisco UCM Cluster	48-17
Creating Trustpoints and Generating Certificates	48-17
Creating the CTL File	48-18
Using an Existing CTL File	48-20
Creating the TLS Proxy Instance for a Non-secure Cisco UCM Cluster	48-20
Creating the TLS Proxy for a Mixed-mode Cisco UCM Cluster	48-21
Creating the Media Termination Instance	48-22
Creating the Phone Proxy Instance	48-23
Enabling the Phone Proxy with SIP and Skinny Inspection	48-25
Configuring Linksys Routers with UDP Port Forwarding for the Phone Proxy	48-26
Configuring Your Router	48-27
Troubleshooting the Phone Proxy	48-27
Debugging Information from the Security Appliance	48-27
Debugging Information from IP Phones	48-31
IP Phone Registration Failure	48-32
TFTP Auth Error Displays on IP Phone Console	48-32
Configuration File Parsing Error	48-33
Configuration File Parsing Error: Unable to Get DNS Response	48-33
Non-configuration File Parsing Error	48-34
Cisco UCM Does Not Respond to TFTP Request for Configuration File	48-34
IP Phone Does Not Respond After the Security Appliance Sends TFTP Data	48-35
IP Phone Requesting Unsigned File Error	48-36
IP Phone Unable to Download CTL File	48-36
IP Phone Registration Failure from Signaling Connections	48-37
SSL Handshake Failure	48-39
Certificate Validation Errors	48-40
Media Termination Address Errors	48-40
Audio Problems with IP Phones	48-41
Saving SAST Keys	48-41
Configuration Examples for the Phone Proxy	48-43
Example 1: Nonsecure Cisco UCM cluster, Cisco UCM and TFTP Server on Publisher	48-43
Example 2: Mixed-mode Cisco UCM cluster, Cisco UCM and TFTP Server on Publisher	48-45
Example 3: Mixed-mode Cisco UCM cluster, Cisco UCM and TFTP Server on Different Servers	48-46

Example 4: Mixed-mode Cisco UCM cluster, Primary Cisco UCM, Secondary and TFTP Server on Different Servers **48-47**

Example 5: LSC Provisioning in Mixed-mode Cisco UCM cluster; Cisco UCM and TFTP Server on Publisher **48-49**

Example 6: VLAN Transversal **48-51**

Feature History for the Phone Proxy **48-53**

CHAPTER 49

Configuring the TLS Proxy for Encrypted Voice Inspection 49-1

Information about the TLS Proxy for Encrypted Voice Inspection **49-1**

 Decryption and Inspection of Unified Communications Encrypted Signaling **49-2**

 CTL Client Overview **49-3**

Licensing for the TLS Proxy **49-5**

Prerequisites for the TLS Proxy for Encrypted Voice Inspection **49-7**

Configuring the TLS Proxy for Encrypted Voice Inspection **49-7**

 Task flow for Configuring the TLS Proxy for Encrypted Voice Inspection **49-8**

 Creating Trustpoints and Generating Certificates **49-9**

 Creating an Internal CA **49-10**

 Creating a CTL Provider Instance **49-11**

 Creating the TLS Proxy Instance **49-12**

 Enabling the TLS Proxy Instance for Skinny or SIP Inspection **49-13**

Monitoring the TLS Proxy **49-15**

Feature History for the TLS Proxy for Encrypted Voice Inspection **49-17**

CHAPTER 50

Configuring Cisco Mobility Advantage 50-1

Information about the Cisco Mobility Advantage Proxy Feature **50-1**

 Cisco Mobility Advantage Proxy Functionality **50-1**

 Mobility Advantage Proxy Deployment Scenarios **50-2**

 Mobility Advantage Proxy Using NAT/PAT **50-4**

 Trust Relationships for Cisco UMA Deployments **50-5**

Licensing for the Cisco Mobility Advantage Proxy Feature **50-6**

Configuring Cisco Mobility Advantage **50-6**

 Task Flow for Configuring Cisco Mobility Advantage **50-7**

 Installing the Cisco UMA Server Certificate **50-7**

 Creating the TLS Proxy Instance **50-8**

 Enabling the TLS Proxy for MMP Inspection **50-9**

Monitoring for Cisco Mobility Advantage **50-10**

Configuration Examples for Cisco Mobility Advantage **50-11**

 Example 1: Cisco UMC/Cisco UMA Architecture – Security Appliance as Firewall with TLS Proxy and MMP Inspection **50-11**

Example 2: Cisco UMC/Cisco UMA Architecture – Security Appliance as TLS Proxy Only	50-12
Feature History for Cisco Mobility Advantage	50-14

CHAPTER 51

Configuring Cisco Unified Presence	51-1
Information About Cisco Unified Presence	51-1
Architecture for Cisco Unified Presence for SIP Federation Deployments	51-1
Trust Relationship in the Presence Federation	51-4
Security Certificate Exchange Between Cisco UP and the Security Appliance	51-5
XMPP Federation Deployments	51-5
Configuration Requirements for XMPP Federation	51-6
Licensing for Cisco Unified Presence	51-7
Configuring Cisco Unified Presence Proxy for SIP Federation	51-8
Task Flow for Configuring Cisco Unified Presence Federation Proxy for SIP Federation	51-9
Creating Trustpoints and Generating Certificates	51-9
Installing Certificates	51-10
Creating the TLS Proxy Instance	51-12
Enabling the TLS Proxy for SIP Inspection	51-13
Monitoring Cisco Unified Presence	51-14
Configuration Example for Cisco Unified Presence	51-14
Example Configuration for SIP Federation Deployments	51-15
Example Access List Configuration for XMPP Federation	51-17
Example NAT Configuration for XMPP Federation	51-18
Feature History for Cisco Unified Presence	51-20

CHAPTER 52

Configuring Cisco Intercompany Media Engine Proxy	52-1
Information About Cisco Intercompany Media Engine Proxy	52-1
Features of Cisco Intercompany Media Engine Proxy	52-1
How the UC-IME Works with the PSTN and the Internet	52-2
Tickets and Passwords	52-3
Call Fallback to the PSTN	52-5
Architecture and Deployment Scenarios for Cisco Intercompany Media Engine	52-5
Architecture	52-5
Basic Deployment	52-6
Off Path Deployment	52-7
Licensing for Cisco Intercompany Media Engine	52-8
Guidelines and Limitations	52-9
Configuring Cisco Intercompany Media Engine Proxy	52-11
Task Flow for Configuring Cisco Intercompany Media Engine	52-11

- Configuring NAT for Cisco Intercompany Media Engine Proxy 52-12
- Configuring PAT for the Cisco UCM Server 52-14
- Creating Access Lists for Cisco Intercompany Media Engine Proxy 52-16
- Creating the Media Termination Instance 52-17
- Creating the Cisco Intercompany Media Engine Proxy 52-18
- Creating Trustpoints and Generating Certificates 52-21
- Creating the TLS Proxy 52-24
- Enabling SIP Inspection for the Cisco Intercompany Media Engine Proxy 52-25
- (Optional) Configuring TLS within the Local Enterprise 52-27
- (Optional) Configuring Off Path Signaling 52-30
- Configuring the Cisco UC-IMC Proxy by using the UC-IME Proxy Pane 52-31
- Configuring the Cisco UC-IMC Proxy by using the Unified Communications Wizard 52-33
- Troubleshooting Cisco Intercompany Media Engine Proxy 52-34
- Feature History for Cisco Intercompany Media Engine Proxy 52-37

PART 12

Configuring Connection Settings and QoS

CHAPTER 53

Configuring Connection Settings 53-1

- Information About Connection Settings 53-1
 - TCP Intercept and Limiting Embryonic Connections 53-2
 - Disabling TCP Intercept for Management Packets for Clientless SSL Compatibility 53-2
 - Dead Connection Detection (DCD) 53-2
 - TCP Sequence Randomization 53-3
 - TCP Normalization 53-3
 - TCP State Bypass 53-3
- Licensing Requirements for Connection Settings 53-4
- Guidelines and Limitations 53-5
 - TCP State Bypass Guidelines and Limitations 53-5
- Default Settings 53-5
- Configuring Connection Settings 53-6
 - Task Flow For Configuring Configuration Settings (Except Global Timeouts) 53-6
 - Customizing the TCP Normalizer with a TCP Map 53-6
 - Configuring Connection Settings 53-10
- Monitoring Connection Settings 53-14
 - Monitoring TCP State Bypass 53-14
- Configuration Examples for Connection Settings 53-14
 - Configuration Examples for Connection Limits and Timeouts 53-15
 - Configuration Examples for TCP State Bypass 53-15

Configuration Examples for TCP Normalization	53-15
Feature History for Connection Settings	53-16

CHAPTER 54

Configuring QoS	54-1
Information About QoS	54-1
Supported QoS Features	54-2
What is a Token Bucket?	54-2
Information About Policing	54-3
Information About Priority Queuing	54-3
Information About Traffic Shaping	54-4
How QoS Features Interact	54-4
DSCP and DiffServ Preservation	54-5
Licensing Requirements for QoS	54-5
Guidelines and Limitations	54-5
Configuring QoS	54-6
Determining the Queue and TX Ring Limits for a Standard Priority Queue	54-6
Configuring the Standard Priority Queue for an Interface	54-7
Configuring a Service Rule for Standard Priority Queuing and Policing	54-9
Configuring a Service Rule for Traffic Shaping and Hierarchical Priority Queuing	54-12
(Optional) Configuring the Hierarchical Priority Queuing Policy	54-12
Configuring the Service Rule	54-13
Monitoring QoS	54-15
Viewing QoS Police Statistics	54-15
Viewing QoS Standard Priority Statistics	54-16
Viewing QoS Shaping Statistics	54-16
Viewing QoS Standard Priority Queue Statistics	54-17
Feature History for QoS	54-18

PART 13**Configuring Advanced Network Protection****CHAPTER 55**

Configuring the Botnet Traffic Filter	55-1
Information About the Botnet Traffic Filter	55-1
Botnet Traffic Filter Address Types	55-2
Botnet Traffic Filter Actions for Known Addresses	55-2
Botnet Traffic Filter Databases	55-2
Information About the Dynamic Database	55-2
Information About the Static Database	55-3
Information About the DNS Reverse Lookup Cache and DNS Host Cache	55-4

- How the Botnet Traffic Filter Works 55-5
- Licensing Requirements for the Botnet Traffic Filter 55-6
- Guidelines and Limitations 55-6
- Default Settings 55-6
- Configuring the Botnet Traffic Filter 55-6
 - Task Flow for Configuring the Botnet Traffic Filter 55-7
 - Configuring the Dynamic Database 55-7
 - Adding Entries to the Static Database 55-9
 - Enabling DNS Snooping 55-10
 - Enabling Traffic Classification and Actions for the Botnet Traffic Filter 55-12
 - Blocking Botnet Traffic Manually 55-15
 - Searching the Dynamic Database 55-16
- Monitoring the Botnet Traffic Filter 55-17
 - Botnet Traffic Filter Syslog Messaging 55-17
 - Botnet Traffic Filter Commands 55-17
- Configuration Examples for the Botnet Traffic Filter 55-19
 - Recommended Configuration Example 55-19
 - Other Configuration Examples 55-20
- Where to Go Next 55-21
- Feature History for the Botnet Traffic Filter 55-22

CHAPTER 56

- Configuring Threat Detection 56-1**
 - Information About Threat Detection 56-1
 - Licensing Requirements for Threat Detection 56-1
 - Configuring Basic Threat Detection Statistics 56-2
 - Information About Basic Threat Detection Statistics 56-2
 - Guidelines and Limitations 56-3
 - Default Settings 56-3
 - Configuring Basic Threat Detection Statistics 56-4
 - Monitoring Basic Threat Detection Statistics 56-5
 - Feature History for Basic Threat Detection Statistics 56-6
 - Configuring Advanced Threat Detection Statistics 56-6
 - Information About Advanced Threat Detection Statistics 56-6
 - Guidelines and Limitations 56-6
 - Default Settings 56-7
 - Configuring Advanced Threat Detection Statistics 56-7
 - Monitoring Advanced Threat Detection Statistics 56-9
 - Feature History for Advanced Threat Detection Statistics 56-14

Configuring Scanning Threat Detection	56-15
Information About Scanning Threat Detection	56-15
Guidelines and Limitations	56-16
Default Settings	56-16
Configuring Scanning Threat Detection	56-17
Monitoring Shunned Hosts, Attackers, and Targets	56-17
Feature History for Scanning Threat Detection	56-18
Configuration Examples for Threat Detection	56-19

CHAPTER 57**Using Protection Tools 57-1**

Preventing IP Spoofing	57-1
Configuring the Fragment Size	57-2
Blocking Unwanted Connections	57-2
Configuring IP Audit for Basic IPS Support	57-3
Configuring IP Audit	57-3
IP Audit Signature List	57-4

PART 14**Configuring Modules****CHAPTER 58****Configuring the ASA IPS Module 58-1**

Information About the ASA IPS module	58-1
How the ASA IPS module Works with the ASA	58-2
Operating Modes	58-2
Using Virtual Sensors (ASA 5510 and Higher)	58-3
Information About Management Access	58-4
Licensing Requirements for the ASA IPS module	58-5
Guidelines and Limitations	58-5
Default Settings	58-6
Configuring the ASA IPS module	58-6
Task Flow for the ASA IPS Module	58-7
Connecting Management Interface Cables	58-7
Sessioning to the Module from the ASA	58-9
Configuring Basic IPS Module Network Settings	58-10
(ASA 5510 and Higher) Configuring Basic Network Settings	58-10
(ASA 5505) Configuring Basic Network Settings	58-11
(ASA 5512-X through ASA 5555-X) Installing the Software Module	58-14
Configuring the Security Policy on the ASA IPS module	58-14
Assigning Virtual Sensors to a Security Context (ASA 5510 and Higher)	58-15

- Diverting Traffic to the ASA IPS module 58-17
- Monitoring the ASA IPS module 58-20
- Troubleshooting the ASA IPS module 58-21
 - Installing an Image on the Module 58-21
 - Uninstalling a Software Module Image 58-23
 - Resetting the Password 58-23
 - Reloading or Resetting the Module 58-24
 - Shutting Down the Module 58-24
- Configuration Examples for the ASA IPS module 58-25
- Feature History for the ASA IPS module 58-25

CHAPTER 59

Configuring the ASA CX Module 59-1

- Information About the ASA CX Module 59-1
 - How the ASA CX Module Works with the ASA 59-2
 - Information About ASA CX Management 59-2
 - Initial Configuration 59-3
 - Policy Configuration and Management 59-3
 - Information About Authentication Proxy 59-3
 - Information About VPN and the ASA CX Module 59-4
 - Compatibility with ASA Features 59-4
- Licensing Requirements for the ASA CX Module 59-4
- Guidelines and Limitations 59-4
- Default Settings 59-5
- Configuring the ASA CX Module 59-5
 - Task Flow for the ASA CX Module 59-6
 - Connecting Management Interface Cables 59-6
 - Configuring the ASA CX Management IP Address 59-7
 - Configuring Basic ASA CX Settings at the ASA CX CLI 59-7
 - Configuring the Security Policy on the ASA CX Module Using PRSM 59-9
 - (Optional) Configuring the Authentication Proxy Port 59-10
 - Redirecting Traffic to the ASA CX Module 59-11
- Monitoring the ASA CX Module 59-12
 - Showing Module Status 59-12
 - Showing Module Statistics 59-13
 - Monitoring Module Connections 59-14
 - Capturing Module Traffic 59-17
- Troubleshooting the ASA CX Module 59-17
 - General Recovery Procedures 59-17

Resetting the Password	59-17
Reloading or Resetting the Module	59-18
Shutting Down the Module	59-19
Debugging the Module	59-19
Problems with the Authentication Proxy	59-20
Configuration Examples for the ASA CX Module	59-21
Feature History for the ASA CX Module	59-22

CHAPTER 60

Configuring the ASA CSC Module	60-1
Information About the CSC SSM	60-1
Determining What Traffic to Scan	60-3
Licensing Requirements for the CSC SSM	60-5
Prerequisites for the CSC SSM	60-5
Guidelines and Limitations	60-6
Default Settings	60-6
Configuring the CSC SSM	60-7
Before Configuring the CSC SSM	60-7
Connecting to the CSC SSM	60-8
Diverting Traffic to the CSC SSM	60-10
Monitoring the CSC SSM	60-13
Troubleshooting the CSC Module	60-14
Installing an Image on the Module	60-14
Resetting the Password	60-15
Reloading or Resetting the Module	60-16
Shutting Down the Module	60-16
Configuration Examples for the CSC SSM	60-16
Where to Go Next	60-18
Additional References	60-18
Feature History for the CSC SSM	60-18

PART 15**Configuring High Availability****CHAPTER 61**

Information About High Availability	61-1
Introduction to Failover and High Availability	61-1
Failover System Requirements	61-2
Hardware Requirements	61-2
Software Requirements	61-2

- License Requirements 61-2
- Failover and Stateful Failover Links 61-3
 - Failover Link 61-3
 - Stateful Failover Link 61-4
 - Failover Interface Speed for Stateful Links 61-5
 - Avoiding Interrupted Failover Links 61-5
- Active/Active and Active/Standby Failover 61-8
 - Determining Which Type of Failover to Use 61-8
- Stateless (Regular) and Stateful Failover 61-9
 - Stateless (Regular) Failover 61-9
 - Stateful Failover 61-10
- Transparent Firewall Mode Requirements 61-11
- Auto Update Server Support in Failover Configurations 61-12
 - Auto Update Process Overview 61-12
 - Monitoring the Auto Update Process 61-13
- Failover Health Monitoring 61-14
 - Unit Health Monitoring 61-14
 - Interface Monitoring 61-15
- Failover Times 61-16
- Failover Messages 61-16
 - Failover System Messages 61-16
 - Debug Messages 61-16
 - SNMP 61-17

CHAPTER 62

- Configuring Active/Standby Failover 62-1**
 - Information About Active/Standby Failover 62-1
 - Active/Standby Failover Overview 62-1
 - Primary/Secondary Status and Active/Standby Status 62-2
 - Device Initialization and Configuration Synchronization 62-2
 - Command Replication 62-3
 - Failover Triggers 62-4
 - Failover Actions 62-4
 - Optional Active/Standby Failover Settings 62-6
 - Licensing Requirements for Active/Standby Failover 62-6
 - Prerequisites for Active/Standby Failover 62-6
 - Guidelines and Limitations 62-6
 - Configuring Active/Standby Failover 62-7
 - Task Flow for Configuring Active/Standby Failover 62-8

Configuring the Primary Unit	62-8
Configuring the Secondary Unit	62-11
Configuring Optional Active/Standby Failover Settings	62-12
Enabling HTTP Replication with Stateful Failover	62-13
Disabling and Enabling Interface Monitoring	62-13
Configuring Failover Criteria	62-14
Configuring the Unit and Interface Health Poll Times	62-14
Configuring Virtual MAC Addresses	62-15
Controlling Failover	62-16
Forcing Failover	62-16
Disabling Failover	62-17
Restoring a Failed Unit	62-17
Testing the Failover Functionality	62-17
Monitoring Active/Standby Failover	62-18
Feature History for Active/Standby Failover	62-18

CHAPTER 63**Configuring Active/Active Failover 63-1**

Information About Active/Active Failover	63-1
Active/Active Failover Overview	63-1
Primary/Secondary Status and Active/Standby Status	63-2
Device Initialization and Configuration Synchronization	63-3
Command Replication	63-3
Failover Triggers	63-4
Failover Actions	63-5
Optional Active/Active Failover Settings	63-6
Licensing Requirements for Active/Active Failover	63-6
Prerequisites for Active/Active Failover	63-7
Guidelines and Limitations	63-7
Configuring Active/Active Failover	63-8
Task Flow for Configuring Active/Active Failover	63-8
Configuring the Primary Failover Unit	63-8
Configuring the Secondary Failover Unit	63-11
Configuring Optional Active/Active Failover Settings	63-12
Configuring Failover Group Preemption	63-12
Enabling HTTP Replication with Stateful Failover	63-14
Disabling and Enabling Interface Monitoring	63-14
Configuring Interface Health Monitoring	63-15
Configuring Failover Criteria	63-16
Configuring Virtual MAC Addresses	63-16

- Configuring Support for Asymmetrically Routed Packets 63-18
- Remote Command Execution 63-21
 - Changing Command Modes 63-22
 - Security Considerations 63-23
 - Limitations of Remote Command Execution 63-23
- Controlling Failover 63-23
 - Forcing Failover 63-23
 - Disabling Failover 63-24
 - Restoring a Failed Unit or Failover Group 63-24
 - Testing the Failover Functionality 63-24
- Monitoring Active/Active Failover 63-25
- Feature History for Active/Active Failover 63-25

PART 16

Configuring VPN

CHAPTER 64

Configuring IPsec and ISAKMP 64-1

- Information About Tunneling, IPsec, and ISAKMP 64-1
 - IPsec Overview 64-2
 - ISAKMP and IKE Overview 64-2
- Licensing Requirements for Remote Access IPsec VPNs 64-3
- Guidelines and Limitations 64-8
- Configuring ISAKMP 64-8
 - Configuring IKEv1 and IKEv2 Policies 64-9
 - Enabling IKE on the Outside Interface 64-13
 - Disabling IKEv1 Aggressive Mode 64-13
 - Determining an ID Method for IKEv1 and IKEv2 ISAKMP Peers 64-13
 - Enabling IPsec over NAT-T 64-14
 - Using NAT-T 64-15
 - Enabling IPsec with IKEv1 over TCP 64-15
 - Waiting for Active Sessions to Terminate Before Rebooting 64-16
 - Alerting Peers Before Disconnecting 64-16
- Configuring Certificate Group Matching for IKEv1 64-17
 - Creating a Certificate Group Matching Rule and Policy 64-17
 - Using the Tunnel-group-map default-group Command 64-19
- Configuring IPsec 64-19
 - Understanding IPsec Tunnels 64-19
 - Understanding IKEv1 Transform Sets and IKEv2 Proposals 64-19
 - Defining Crypto Maps 64-20

Applying Crypto Maps to Interfaces	64-26
Using Interface Access Lists	64-26
Changing IPsec SA Lifetimes	64-29
Creating a Basic IPsec Configuration	64-29
Using Dynamic Crypto Maps	64-31
Providing Site-to-Site Redundancy	64-34
Viewing an IPsec Configuration	64-34
Clearing Security Associations	64-34
Clearing Crypto Map Configurations	64-35
Supporting the Nokia VPN Client	64-35

CHAPTER 65

Configuring L2TP over IPsec	65-1
Information About L2TP over IPsec/IKEv1	65-1
IPsec Transport and Tunnel Modes	65-2
Licensing Requirements for L2TP over IPsec	65-3
Prerequisites for Configuring L2TP over IPsec	65-7
Guidelines and Limitations	65-7
Configuring L2TP over IPsec	65-8
Configuration Example for L2TP over IPsec Using ASA 8.2.5	65-17
Configuration Example for L2TP over IPsec Using ASA 8.4.1 and later	65-17
Feature History for L2TP over IPsec	65-18

CHAPTER 66

Setting General VPN Parameters	66-1
Configuring VPNs in Single, Routed Mode	66-1
Configuring IPsec to Bypass ACLs	66-1
Permitting Intra-Interface Traffic (Hairpinning)	66-2
NAT Considerations for Intra-Interface Traffic	66-3
Setting Maximum Active IPsec or SSL VPN Sessions	66-3
Using Client Update to Ensure Acceptable IPsec Client Revision Levels	66-4
Understanding Load Balancing	66-6
Comparing Load Balancing to Failover	66-7
Load Balancing	66-7
Failover	66-7
Implementing Load Balancing	66-7
Prerequisites	66-8
Eligible Platforms	66-8
Eligible Clients	66-8
VPN Load-Balancing Algorithm	66-8

VPN Load-Balancing Cluster Configurations 66-9

Some Typical Mixed Cluster Scenarios 66-10

 Scenario 1: Mixed Cluster with No SSL VPN Connections 66-10

 Scenario 2: Mixed Cluster Handling SSL VPN Connections 66-10

Configuring Load Balancing 66-11

 Configuring the Public and Private Interfaces for Load Balancing 66-11

 Configuring the Load Balancing Cluster Attributes 66-12

 Enabling Redirection Using a Fully Qualified Domain Name 66-13

 Frequently Asked Questions About Load Balancing 66-14

 IP Address Pool Exhaustion 66-14

 Unique IP Address Pools 66-14

 Using Load Balancing and Failover on the Same Device 66-15

 Load Balancing on Multiple Interfaces 66-15

 Maximum Simultaneous Sessions for Load Balancing Clusters 66-15

 Viewing Load Balancing 66-15

 Configuring VPN Session Limits 66-16

CHAPTER 67

Configuring Connection Profiles, Group Policies, and Users 67-1

 Overview of Connection Profiles, Group Policies, and Users 67-1

 Connection Profiles 67-2

 General Connection Profile Connection Parameters 67-3

 IPsec Tunnel-Group Connection Parameters 67-4

 Connection Profile Connection Parameters for SSL VPN Sessions 67-5

 Configuring Connection Profiles 67-6

 Maximum Connection Profiles 67-6

 Default IPsec Remote Access Connection Profile Configuration 67-7

 Configuring IPsec Tunnel-Group General Attributes 67-7

 Configuring Remote-Access Connection Profiles 67-7

 Specifying a Name and Type for the Remote Access Connection Profile 67-8

 Configuring Remote-Access Connection Profile General Attributes 67-8

 Configuring Double Authentication 67-12

 Configuring Remote-Access Connection Profile IPsec IKEv1 Attributes 67-13

 Configuring IPsec Remote-Access Connection Profile PPP Attributes 67-15

 Configuring LAN-to-LAN Connection Profiles 67-17

 Default LAN-to-LAN Connection Profile Configuration 67-17

 Specifying a Name and Type for a LAN-to-LAN Connection Profile 67-17

 Configuring LAN-to-LAN Connection Profile General Attributes 67-17

 Configuring LAN-to-LAN IPsec IKEv1 Attributes 67-18

 Configuring Connection Profiles for Clientless SSL VPN Sessions 67-20

Configuring General Tunnel-Group Attributes for Clientless SSL VPN Sessions	67-20
Configuring Tunnel-Group Attributes for Clientless SSL VPN Sessions	67-23
Customizing Login Windows for Users of Clientless SSL VPN sessions	67-27
Configuring Microsoft Active Directory Settings for Password Management	67-28
Using Active Directory to Force the User to Change Password at Next Logon	67-29
Using Active Directory to Specify Maximum Password Age	67-30
Using Active Directory to Override an Account Disabled AAA Indicator	67-31
Using Active Directory to Enforce Minimum Password Length	67-32
Using Active Directory to Enforce Password Complexity	67-33
Configuring the Connection Profile for RADIUS/SDI Message Support for the AnyConnect Client	67-34
AnyConnect Client and RADIUS/SDI Server Interaction	67-34
Configuring the Security Appliance to Support RADIUS/SDI Messages	67-35
Group Policies	67-36
Default Group Policy	67-37
Configuring Group Policies	67-39
Configuring an External Group Policy	67-39
Configuring an Internal Group Policy	67-40
Configuring Group Policy Attributes	67-40
Configuring WINS and DNS Servers	67-40
Configuring VPN-Specific Attributes	67-42
Configuring Security Attributes	67-46
Configuring the Banner Message	67-48
Configuring IPsec-UDP Attributes for IKEv1	67-49
Configuring Split-Tunneling Attributes	67-49
Configuring Domain Attributes for Tunneling	67-51
Configuring Attributes for VPN Hardware Clients	67-53
Configuring Backup Server Attributes	67-56
Configuring Browser Client Parameters	67-57
Configuring Network Admission Control Parameters	67-59
Configuring Address Pools	67-62
Configuring Firewall Policies	67-63
Supporting a Zone Labs Integrity Server	67-64
Overview of the Integrity Server and ASA Interaction	67-64
Configuring Integrity Server Support	67-65
Setting Client Firewall Parameters	67-66
Configuring Client Access Rules	67-68
Configuring Group-Policy Attributes for Clientless SSL VPN Sessions	67-70
Configuring Group-Policy Attributes for AnyConnect Secure Mobility Client Connections	67-77
Configuring User Attributes	67-79

- Viewing the Username Configuration 67-79
- Configuring Attributes for Specific Users 67-79
 - Setting a User Password and Privilege Level 67-80
 - Configuring User Attributes 67-80
 - Configuring VPN User Attributes 67-81
 - Configuring Clientless SSL VPN Access for Specific Users 67-85

CHAPTER 68

Configuring IP Addresses for VPNs 68-1

- Configuring an IP Address Assignment Method 68-1
 - Configuring Local IP Address Pools 68-2
 - Configuring AAA Addressing 68-2
 - Configuring DHCP Addressing 68-3

CHAPTER 69

Configuring Remote Access IPsec VPNs 69-1

- Information About Remote Access IPsec VPNs 69-1
- Licensing Requirements for Remote Access IPsec VPNs 69-2
- Guidelines and Limitations 69-7
- Configuring Remote Access IPsec VPNs 69-7
 - Configuring Interfaces 69-7
 - Configuring ISAKMP Policy and Enabling ISAKMP on the Outside Interface 69-8
 - Configuring an Address Pool 69-9
 - Adding a User 69-10
 - Creating an IKEv1 Transform Set or IKEv2 Proposal 69-10
 - Defining a Tunnel Group 69-11
 - Creating a Dynamic Crypto Map 69-12
 - Creating a Crypto Map Entry to Use the Dynamic Crypto Map 69-13
 - Saving the Security Appliance Configuration 69-14
- Configuration Examples for Remote Access IPsec VPNs 69-14
- Feature History for Remote Access VPNs 69-15

CHAPTER 70

Configuring Network Admission Control 70-1

- Information about Network Admission Control 70-1
- Licensing Requirements 70-2
- Prerequisites for NAC 70-4
- Guidelines and Limitations 70-4
- Viewing the NAC Policies on the Security Appliance 70-5
- Adding, Accessing, or Removing a NAC Policy 70-7
- Configuring a NAC Policy 70-8

Specifying the Access Control Server Group	70-8
Setting the Query-for-Posture-Changes Timer	70-9
Setting the Revalidation Timer	70-10
Configuring the Default ACL for NAC	70-10
Configuring Exemptions from NAC	70-11
Assigning a NAC Policy to a Group Policy	70-13
Changing Global NAC Framework Settings	70-13
Changing Clientless Authentication Settings	70-13
Enabling and Disabling Clientless Authentication	70-14
Changing the Login Credentials Used for Clientless Authentication	70-14
Changing NAC Framework Session Attributes	70-15

CHAPTER 71

Configuring Easy VPN Services on the ASA 5505	71-1
Specifying the Client/Server Role of the Cisco ASA 5505	71-1
Specifying the Primary and Secondary Servers	71-2
Specifying the Mode	71-3
NEM with Multiple Interfaces	71-3
Configuring Automatic Xauth Authentication	71-4
Configuring IPsec Over TCP	71-4
Comparing Tunneling Options	71-5
Specifying the Tunnel Group or Trustpoint	71-6
Specifying the Tunnel Group	71-7
Specifying the Trustpoint	71-7
Configuring Split Tunneling	71-8
Configuring Device Pass-Through	71-8
Configuring Remote Management	71-9
Guidelines for Configuring the Easy VPN Server	71-10
Group Policy and User Attributes Pushed to the Client	71-10
Authentication Options	71-12

CHAPTER 72

Configuring the PPPoE Client	72-1
PPPoE Client Overview	72-1
Configuring the PPPoE Client Username and Password	72-2
Enabling PPPoE	72-3
Using PPPoE with a Fixed IP Address	72-3
Monitoring and Debugging the PPPoE Client	72-4
Clearing the Configuration	72-5

Using Related Commands 72-5

CHAPTER 73

Configuring LAN-to-LAN IPsec VPNs 73-1

- Summary of the Configuration 73-1
- Configuring Interfaces 73-2
- Configuring ISAKMP Policy and Enabling ISAKMP on the Outside Interface 73-3
 - Configuring ISAKMP Policies for IKEv1 Connections 73-4
 - Configuring ISAKMP Policies for IKEv2 Connections 73-4
- Creating an IKEv1 Transform Set 73-5
- Creating an IKEv2 Proposal 73-6
- Configuring an ACL 73-7
- Defining a Tunnel Group 73-7
- Creating a Crypto Map and Applying It To an Interface 73-9
 - Applying Crypto Maps to Interfaces 73-10

CHAPTER 74

Configuring Clientless SSL VPN 74-1

- Information About Clientless SSL VPN 74-1
- Licensing Requirements 74-2
- Prerequisites for Clientless SSL VPN 74-4
- Guidelines and Limitations 74-4
- Observing Clientless SSL VPN Security Precautions 74-5
 - Disabling URL on the Portal Page 74-6
- Using SSL to Access the Central Site 74-6
 - Using HTTPS for Clientless SSL VPN Sessions 74-7
 - Configuring Clientless SSL VPN and ASDM Ports 74-7
 - Configuring Support for Proxy Servers 74-8
 - Configuring SSL/TLS Encryption Protocols 74-10
 - Authenticating with Digital Certificates 74-11
 - Enabling Cookies on Browsers for Clientless SSL VPN 74-11
- Configuring Application Helper 74-11
 - Managing Passwords 74-12
- Using Single Sign-on with Clientless SSL VPN 74-13
 - Configuring SSO with HTTP Basic or NTLM Authentication 74-14
 - Configuring SSO Authentication Using SiteMinder 74-15
 - Adding the Cisco Authentication Scheme to SiteMinder 74-16
 - Configuring SSO Authentication Using SAML Browser Post Profile 74-17
 - Configuring the SAML POST SSO Server 74-19
 - Configuring SSO with the HTTP Form Protocol 74-20

Gathering HTTP Form Data	74-24
Configuring SSO for Plug-ins	74-28
Configuring SSO with Macro Substitution	74-28
Encoding	74-29
Authenticating with Digital Certificates	74-31
Creating and Applying Clientless SSL VPN Policies for Accessing Resources	74-31
Assigning Users to Group Policies	74-31
Using the Security Appliance Authentication Server	74-31
Using a RADIUS Server	74-31
Using an LDAP Server	74-32
Configuring Connection Profile Attributes for Clientless SSL VPN	74-32
Configuring Group Policy and User Attributes for Clientless SSL VPN	74-33
Configuring Browser Access to Plug-ins	74-34
Preparing the Security Appliance for a Plug-in	74-36
Installing Plug-ins Redistributed By Cisco	74-36
Providing Access to Third-Party Plug-ins	74-38
Configuring and Applying the POST URL	74-39
Providing Access to a Citrix Java Presentation Server	74-40
Preparing the Citrix MetraFrame Server for Clientless SSL VPN Access	74-40
Creating and Installing the Citrix Plug-in	74-40
Viewing the Plug-ins Installed on the Security Appliance	74-41
Why a Microsoft Kerberos Constrained Delegation Solution	74-41
Understanding How KCD Works	74-42
Authentication Flow with KCD	74-43
Before Configuring KCD	74-44
Configuring KCD	74-45
Showing KCD Status Information	74-46
Showing Cached Kerberos Tickets	74-47
Clearing Cached Kerberos Tickets	74-48
Configuring Application Access	74-48
Logging Off Smart Tunnel	74-48
Configuring Smart Tunnel Access	74-48
About Smart Tunnels	74-49
Why Smart Tunnels?	74-49
Adding Applications to Be Eligible for Smart Tunnel Access	74-51
Assigning a Smart Tunnel List	74-55
Configuring and Applying Smart Tunnel Policy	74-56
Configuring and Applying a Smart Tunnel Tunnel Policy	74-57
Specifying Servers for Smart Tunnel Auto Sign-on	74-58
Adding or Editing a Smart Tunnel Auto Sign-on Server Entry	74-60

- Automating Smart Tunnel Access **74-61**
 - Enabling and Disabling Smart Tunnel Access **74-62**
- Logging Off Smart Tunnel **74-63**
 - When Its Parent Process Terminates **74-63**
 - With A Notification Icon **74-64**
- Configuring Port Forwarding **74-64**
 - Information About Port Forwarding **74-65**
 - Configuring DNS for Port Forwarding **74-66**
 - Adding Applications to Be Eligible for Port Forwarding **74-67**
 - Assigning a Port Forwarding List **74-69**
 - Automating Port Forwarding **74-70**
 - Enabling and Disabling Port Forwarding **74-70**
- Application Access User Notes **74-71**
 - Using Application Access on Vista **74-71**
 - Closing Application Access to Prevent hosts File Errors **74-71**
 - Recovering from hosts File Errors When Using Application Access **74-72**
 - Understanding the hosts File **74-72**
 - Stopping Application Access Improperly **74-73**
 - Reconfiguring a Host's File Automatically Using Clientless SSL VPN **74-73**
 - Reconfiguring hosts File Manually **74-73**
- Configuring File Access **74-74**
 - CIFS File Access Requirement and Limitation **74-75**
 - Adding Support for File Access **74-75**
- Ensuring Clock Accuracy for SharePoint Access **74-78**
- Using Clientless SSL VPN with PDAs **74-78**
- Using E-Mail over Clientless SSL VPN **74-79**
 - Configuring E-mail Proxies **74-79**
 - Configuring Web E-mail: MS Outlook Web App **74-80**
- Configuring Portal Access Rules **74-80**
- Optimizing Clientless SSL VPN Performance **74-81**
 - Configuring Caching **74-81**
 - Configuring Content Transformation **74-82**
 - Configuring a Certificate for Signing Rewritten Java Content **74-82**
 - Disabling Content Rewrite **74-83**
 - Using Proxy Bypass **74-83**
 - Configuring Application Profile Customization Framework **74-84**
 - APCF Syntax **74-85**
- Clientless SSL VPN End User Setup **74-87**
 - Defining the End User Interface **74-88**

Viewing the Clientless SSL VPN Home Page	74-88
Viewing the Clientless SSL VPN Application Access Panel	74-88
Viewing the Floating Toolbar	74-89
Customizing Clientless SSL VPN Pages	74-90
Information About Customization	74-90
Exporting a Customization Template	74-91
Editing the Customization Template	74-91
Importing a Customization Object	74-97
Applying Customizations to Connection Profiles, Group Policies and Users	74-97
Login Screen Advanced Customization	74-99
Modifying Your HTML File	74-101
Configuring Browser Access to Client-Server Plug-ins	74-102
About Installing Browser Plug-ins	74-103
RDP Plug-in ActiveX Debug Quick Reference	74-104
Preparing the Security Appliance for a Plug-in	74-105
Configuring the ASA to Use the New HTML File	74-105
Customizing Help	74-106
Customizing a Help File Provided By Cisco	74-107
Creating Help Files for Languages Not Provided by Cisco	74-108
Importing a Help File to Flash Memory	74-108
Exporting a Previously Imported Help File from Flash Memory	74-108
Requiring Usernames and Passwords	74-109
Communicating Security Tips	74-109
Configuring Remote Systems to Use Clientless SSL VPN Features	74-110
Starting Clientless SSL VPN	74-110
Using the Clientless SSL VPN Floating Toolbar	74-111
Browsing the Web	74-111
Browsing the Network (File Management)	74-112
Using Port Forwarding	74-112
Using E-mail Via Port Forwarding	74-113
Using E-mail Via Web Access	74-114
Using E-mail Via E-mail Proxy	74-114
Using Smart Tunnel	74-114
Translating the Language of User Messages	74-115
Understanding Language Translation	74-115
Creating Translation Tables	74-116
Referencing the Language in a Customization Object	74-118
Changing a Group Policy or User Attributes to Use the Customization Object	74-120
Capturing Data	74-121

Creating a Capture File 74-121
 Using a Browser to Display Capture Data 74-122

CHAPTER 75

Configuring AnyConnect VPN Client Connections 75-1
 Information About AnyConnect VPN Client Connections 75-1
 Licensing Requirements for AnyConnect Connections 75-2
 Guidelines and Limitations 75-5
 Remote PC System Requirements 75-5
 Remote HTTPS Certificates Limitation 75-5
 Configuring AnyConnect Connections 75-5
 Configuring the ASA to Web-Deploy the Client 75-6
 Enabling Permanent Client Installation 75-7
 Configuring DTLS 75-8
 Prompting Remote Users 75-8
 Enabling AnyConnect Client Profile Downloads 75-10
 Enabling Additional AnyConnect Client Features 75-11
 Enabling Start Before Logon 75-11
 Translating Languages for AnyConnect User Messages 75-12
 Understanding Language Translation 75-12
 Creating Translation Tables 75-12
 Configuring Advanced AnyConnect Features 75-14
 Enabling Rekey 75-14
 Enabling and Adjusting Dead Peer Detection 75-15
 Enabling Keepalive 75-16
 Using Compression 75-16
 Adjusting MTU Size 75-17
 Configuring Session Timeouts 75-17
 Updating AnyConnect Client Images 75-18
 Enabling IPv6 VPN Access 75-18
 Monitoring AnyConnect Connections 75-19
 Logging Off AnyConnect VPN Sessions 75-20
 Configuration Examples for Enabling AnyConnect Connections 75-21
 Feature History for AnyConnect Connections 75-21

CHAPTER 76

Configuring AnyConnect Host Scan 76-1
 Host Scan Dependencies and System Requirements 76-1
 Dependencies 76-1
 System Requirements 76-2

Licensing	76-2
Host Scan Packaging	76-2
Installing and Enabling Host Scan on the ASA	76-3
Installing or Upgrading Host Scan	76-3
Enabling or Disabling a Host Scan	76-4
Viewing the Host Scan Version Enabled on the ASA	76-5
Uninstalling Host Scan	76-5
Assigning AnyConnect Feature Modules to Group Policies	76-6
Other Important Documentation Addressing Host Scan	76-7

PART 17**Configuring Logging, SNMP, and Smart Call Home****CHAPTER 77****Configuring Logging 77-1**

Information About Logging	77-1
Logging in Multiple Context Mode	77-2
Analyzing Syslog Messages	77-2
Syslog Message Format	77-3
Severity Levels	77-3
Message Classes and Range of Syslog IDs	77-4
Filtering Syslog Messages	77-4
Using Custom Message Lists	77-4
Licensing Requirements for Logging	77-5
Prerequisites for Logging	77-5
Guidelines and Limitations	77-5
Configuring Logging	77-6
Enabling Logging	77-6
Configuring an Output Destination	77-6
Sending Syslog Messages to an External Syslog Server	77-8
Sending Syslog Messages to the Internal Log Buffer	77-9
Sending Syslog Messages to an E-mail Address	77-10
Sending Syslog Messages to ASDM	77-11
Sending Syslog Messages to the Console Port	77-11
Sending Syslog Messages to an SNMP Server	77-11
Sending Syslog Messages to a Telnet or SSH Session	77-12
Creating a Custom Event List	77-13
Generating Syslog Messages in EMBLEM Format to a Syslog Server	77-14
Generating Syslog Messages in EMBLEM Format to Other Output Destinations	77-14
Changing the Amount of Internal Flash Memory Available for Logs	77-15
Configuring the Logging Queue	77-15

- Sending All Syslog Messages in a Class to a Specified Output Destination 77-16
- Enabling Secure Logging 77-16
- Including the Device ID in Non-EMBLEM Format Syslog Messages 77-17
- Including the Date and Time in Syslog Messages 77-18
- Disabling a Syslog Message 77-18
- Changing the Severity Level of a Syslog Message 77-18
- Limiting the Rate of Syslog Message Generation 77-19
- Monitoring the Logs 77-19
- Configuration Examples for Logging 77-20
- Feature History for Logging 77-20

CHAPTER 78

Configuring NetFlow Secure Event Logging (NSEL) 78-1

- Information About NSEL 78-1
 - Using NSEL and Syslog Messages 78-2
- Licensing Requirements for NSEL 78-3
- Prerequisites for NSEL 78-3
- Guidelines and Limitations 78-4
- Configuring NSEL 78-4
 - Configuring NSEL Collectors 78-5
 - Configuring Flow-Export Actions Through Modular Policy Framework 78-5
 - Configuring Template Timeout Intervals 78-7
 - Changing the Time Interval for Sending Flow-Update Events to a Collector 78-8
 - Delaying Flow-Create Events 78-9
 - Disabling and Reenabling NetFlow-related Syslog Messages 78-9
 - Clearing Runtime Counters 78-10
- Monitoring NSEL 78-10
 - NSEL Monitoring Commands 78-10
- Configuration Examples for NSEL 78-12
- Where to Go Next 78-13
- Additional References 78-13
 - Related Documents 78-14
 - RFCs 78-14
- Feature History for NSEL 78-14

CHAPTER 79

Configuring SNMP 79-1

- Information About SNMP 79-1
 - Information About SNMP Terminology 79-2
 - Information About MIBs and Traps 79-2

SNMP Object Identifiers	79-3
SNMP Physical Vendor Type Values	79-5
Supported Tables in MIBs	79-11
Supported Traps (Notifications)	79-12
SNMP Version 3	79-15
SNMP Version 3 Overview	79-15
Security Models	79-16
SNMP Groups	79-16
SNMP Users	79-16
SNMP Hosts	79-16
Implementation Differences Between the ASA, ASA Services Module, and the Cisco IOS Software	79-16
Licensing Requirements for SNMP	79-17
Prerequisites for SNMP	79-17
Guidelines and Limitations	79-17
Configuring SNMP	79-18
Enabling SNMP	79-18
Configuring SNMP Traps	79-20
Configuring a CPU Usage Threshold	79-21
Configuring a Physical Interface Threshold	79-21
Using SNMP Version 1 or 2c	79-22
Using SNMP Version 3	79-23
Troubleshooting Tips	79-24
Interface Types and Examples	79-25
Monitoring SNMP	79-26
SNMP Syslog Messaging	79-27
SNMP Monitoring	79-27
Configuration Examples for SNMP	79-28
Configuration Example for SNMP Versions 1 and 2c	79-28
Configuration Example for SNMP Version 3	79-28
Where to Go Next	79-29
Additional References	79-29
RFCs for SNMP Version 3	79-29
MIBs	79-29
Application Services and Third-Party Tools	79-31
Feature History for SNMP	79-31

CHAPTER 80

Configuring Anonymous Reporting and Smart Call Home 80-1

- Information About Anonymous Reporting and Smart Call Home 80-1
 - Information About Anonymous Reporting 80-2
 - What is Sent to Cisco? 80-2
 - DNS Requirement 80-3
 - Anonymous Reporting and Smart Call Home Prompt 80-3
 - Information About Smart Call Home 80-4
- Licensing Requirements for Anonymous Reporting and Smart Call Home 80-4
- Prerequisites for Smart Call Home and Anonymous Reporting 80-5
- Guidelines and Limitations 80-5
- Configuring Anonymous Reporting and Smart Call Home 80-6
 - Configuring Anonymous Reporting 80-6
 - Configuring Smart Call Home 80-7
 - Enabling Smart Call Home 80-7
 - Declaring and Authenticating a CA Trust Point 80-8
 - Configuring DNS 80-8
 - Subscribing to Alert Groups 80-9
 - Testing Call Home Communications 80-11
 - Optional Configuration Procedures 80-13
- Monitoring Smart Call Home 80-19
- Configuration Example for Smart Call Home 80-19
- Feature History for Anonymous Reporting and Smart Call Home 80-20

PART 18

System Administration

CHAPTER 81

Managing Software and Configurations 81-1

- Managing the Flash File System 81-1
 - Viewing Files in Flash Memory 81-1
 - Deleting Files from Flash Memory 81-2
- Downloading Software or Configuration Files to Flash Memory 81-2
 - Downloading a File to a Specific Location 81-3
 - Downloading a File to the Startup or Running Configuration 81-3
- Configuring the Application Image and ASDM Image to Boot 81-4
- Configuring the File to Boot as the Startup Configuration 81-5
- Deleting Files from a USB Drive on the ASA 5500-X Series 81-5
- Performing Zero Downtime Upgrades for Failover Pairs 81-6
 - Upgrading an Active/Standby Failover Configuration 81-6
 - Upgrading an Active/Active Failover Configuration 81-7

Backing Up Configuration Files or Other Files	81-8
Backing up the Single Mode Configuration or Multiple Mode System Configuration	81-8
Backing Up a Context Configuration or Other File in Flash Memory	81-8
Backing Up a Context Configuration within a Context	81-9
Copying the Configuration from the Terminal Display	81-9
Backing Up Additional Files Using the Export and Import Commands	81-9
Using a Script to Back Up and Restore Files	81-10
Prerequisites	81-10
Running the Script	81-10
Sample Script	81-11
Configuring Auto Update Support	81-16
Configuring Communication with an Auto Update Server	81-16
Configuring Client Updates as an Auto Update Server	81-18
Viewing Auto Update Status	81-19
Downgrading Your Software	81-19
Information About Activation Key Compatibility	81-20
Performing the Downgrade	81-20

CHAPTER 82**Troubleshooting 82-1**

Testing Your Configuration	82-1
Enabling ICMP Debugging Messages and Syslog Messages	82-2
Pinging ASA Interfaces	82-3
Passing Traffic Through the ASA	82-5
Disabling the Test Configuration	82-7
Determining Packet Routing with Traceroute	82-7
Tracing Packets with Packet Tracer	82-7
Handling TCP Packet Loss	82-8
Reloading the ASA	82-8
Performing Password Recovery	82-8
Recovering Passwords for the ASA	82-9
Disabling Password Recovery	82-10
Resetting the Password on the SSM Hardware Module	82-11
Using the ROM Monitor to Load a Software Image	82-11
Erasing the Flash File System	82-12
Other Troubleshooting Tools	82-13
Viewing Debugging Messages	82-13
Capturing Packets	82-14
Viewing the Crash Dump	82-14
Coredump	82-14

Monitoring Per-Process CPU Usage 82-14
 Common Problems 82-14

PART 19

Reference

APPENDIX A

Using the Command-Line Interface A-1

Firewall Mode and Security Context Mode A-1
 Command Modes and Prompts A-2
 Syntax Formatting A-3
 Abbreviating Commands A-3
 Command-Line Editing A-3
 Command Completion A-4
 Command Help A-4
 Filtering show Command Output A-4
 Command Output Paging A-5
 Adding Comments A-5
 Text Configuration Files A-5
 How Commands Correspond with Lines in the Text File A-6
 Command-Specific Configuration Mode Commands A-6
 Automatic Text Entries A-7
 Line Order A-7
 Commands Not Included in the Text Configuration A-7
 Passwords A-7
 Multiple Security Context Files A-7
 Supported Character Sets A-8

APPENDIX B

Addresses, Protocols, and Ports B-1

IPv4 Addresses and Subnet Masks B-1
 Classes B-1
 Private Networks B-2
 Subnet Masks B-2
 Determining the Subnet Mask B-3
 Determining the Address to Use with the Subnet Mask B-3
 IPv6 Addresses B-5
 IPv6 Address Format B-5
 IPv6 Address Types B-6
 Unicast Addresses B-6
 Multicast Address B-8

Anycast Address	B-9
Required Addresses	B-10
IPv6 Address Prefixes	B-10
Protocols and Applications	B-11
TCP and UDP Ports	B-11
Local Ports and Protocols	B-14
ICMP Types	B-15

APPENDIX C**Configuring an External Server for Authorization and Authentication** **C-1**

Understanding Policy Enforcement of Permissions and Attributes	C-1
Configuring an External LDAP Server	C-2
Organizing the ASA for LDAP Operations	C-3
Searching the LDAP Hierarchy	C-3
Binding the ASA to the LDAP Server	C-4
Defining the ASA LDAP Configuration	C-5
Supported Cisco Attributes for LDAP Authorization	C-5
Cisco AV Pair Attribute Syntax	C-13
Cisco AV Pairs ACL Examples	C-14
Active Directory/LDAP VPN Remote Access Authorization Examples	C-16
User-Based Attributes Policy Enforcement	C-16
Placing LDAP Users in a Specific Group Policy	C-18
Enforcing Static IP Address Assignment for AnyConnect Tunnels	C-20
Enforcing Dial-in Allow or Deny Access	C-22
Enforcing Logon Hours and Time-of-Day Rules	C-25
Configuring an External RADIUS Server	C-27
Reviewing the RADIUS Configuration Procedure	C-27
ASA RADIUS Authorization Attributes	C-27
ASA IETF RADIUS Authorization Attributes	C-36
RADIUS Accounting Disconnect Reason Codes	C-37
Configuring an External TACACS+ Server	C-38

GLOSSARY**INDEX**



About This Guide

This preface introduces *Cisco ASA 5500 Series Configuration Guide using the CLI* and includes the following sections:

- [Document Objectives, page lxx](#)
- [Audience, page lxx](#)
- [Related Documentation, page lxx](#)
- [Conventions, page lxxi](#)
- [Obtaining Documentation and Submitting a Service Request, page lxxii](#)

Document Objectives

The purpose of this guide is to help you configure the ASA using the command-line interface. This guide does not cover every feature, but describes only the most common configuration scenarios.

You can also configure and monitor the ASA by using ASDM, a web-based GUI application. ASDM includes configuration wizards to guide you through some common configuration scenarios, and online help for less common scenarios.

This guide applies to the Cisco ASA 5500 series . Throughout this guide, the term “ASA” applies generically to supported models, unless specified otherwise.

Audience

This guide is for network managers who perform any of the following tasks:

- Manage network security
- Install and configure firewalls/ASAs
- Configure VPNs
- Configure intrusion detection software

Related Documentation

For more information, see *Navigating the Cisco ASA 5500 Series Documentation* at <http://www.cisco.com/en/US/docs/security/asa/roadmap/asaroadmap.html>.

Conventions

This document uses the following conventions:

Convention	Indication
bold font	Commands and keywords and user-entered text appear in bold font .
<i>italic font</i>	Document titles, new or emphasized terms, and arguments for which you supply values are in <i>italic font</i> .
[]	Elements in square brackets are optional.
{ x y z }	Required alternative keywords are grouped in braces and separated by vertical bars.
[x y z]	Optional alternative keywords are grouped in brackets and separated by vertical bars.
string	A nonquoted set of characters. Do not use quotation marks around the string or the string will include the quotation marks.
courier font	Terminal sessions and information the system displays appear in <i>courier font</i> .
< >	Nonprinting characters such as passwords are in angle brackets.
[]	Default responses to system prompts are in square brackets.
!, #	An exclamation point (!) or a pound sign (#) at the beginning of a line of code indicates a comment line.



Note

Means *reader take note*.



Tip

Means *the following information will help you solve a problem*.



Caution

Means *reader be careful*. In this situation, you might perform an action that could result in equipment damage or loss of data.



Timesaver

Means *the described action saves time*. You can save time by performing the action described in the paragraph.



Warning

Means *reader be warned*. In this situation, you might perform an action that could result in **bodily injury**.

Obtaining Documentation and Submitting a Service Request

For information on obtaining documentation, submitting a service request, and gathering additional information, see the monthly *What's New in Cisco Product Documentation*, which also lists all new and revised Cisco technical documentation, at:

<http://www.cisco.com/en/US/docs/general/whatsnew/whatsnew.html>

Subscribe to the *What's New in Cisco Product Documentation* as an RSS feed and set content to be delivered directly to your desktop using a reader application. The RSS feeds are a free service. Cisco currently supports RSS Version 2.0.



PART 1

Getting Started with the ASA



CHAPTER 1

Introduction to the Cisco ASA 5500 Series

The ASA provides advanced Stateful Firewall and VPN concentrator functionality in one device, and for some models, an integrated Intrusion Prevention System (IPS) module or an integrated Content Security and Control (CSC) module. The ASA includes many advanced features, such as multiple security contexts (similar to virtualized firewalls), transparent (Layer 2) firewall or routed (Layer 3) firewall operation, advanced inspection engines, IPsec VPN, SSL VPN, clientless SSL VPN support, and many more features.

This chapter includes the following sections:

- [Hardware and Software Compatibility, page 1-1](#)
- [VPN Specifications, page 1-1](#)
- [New Features, page 1-1](#)
- [Firewall Functional Overview, page 1-24](#)
- [VPN Functional Overview, page 1-28](#)
- [Security Context Overview, page 1-29](#)

Hardware and Software Compatibility

For a complete list of supported hardware and software, see the *Cisco ASA Compatibility*:
<http://www.cisco.com/en/US/docs/security/asa/compatibility/asamatrx.html>

VPN Specifications

See *Supported VPN Platforms, Cisco ASA 5500 Series*:

<http://www.cisco.com/en/US/docs/security/asa/compatibility/asa-vpn-compatibility.html>

New Features

This section includes the following topics:

- [New Features in Version 8.6\(1\), page 1-2](#)
- [New Features in Version 8.4\(5\), page 1-4](#)

- [New Features in Version 8.4\(4.1\), page 1-6](#)
- [New Features in Version 8.4\(3\), page 1-9](#)
- [New Features in Version 8.4\(2\), page 1-12](#)
- [New Features in Version 8.4\(1\), page 1-19](#)

**Note**

New, changed, and deprecated syslog messages are listed in syslog message guide.

**Note**

Version 8.4(4) was removed from Cisco.com due to build issues; please upgrade to Version 8.4(4.1) or later.

New Features in Version 8.6(1)

Released: February 28, 2012

[Table 1-1](#) lists the new features for ASA Version 8.6(1). This ASA software version is only supported on the ASA 5512-X, ASA 5515-X, ASA 5525-X, ASA 5545-X, and ASA 5555-X.

**Note**

Version 8.6(1) includes all features in 8.4(2), plus the features listed in this table.

Features added in 8.4(3) are not included in 8.6(1) unless they are explicitly listed in this table.

Table 1-1 *New Features for ASA Version 8.6(1)*

Feature	Description
Hardware Features	
Support for the ASA 5512-X through ASA 5555-X	We introduced support for the ASA 5512-X, ASA 5515-X, ASA 5525-X, ASA 5545-X, and ASA 5555-X.
IPS Features	
Support for the IPS SSP for the ASA 5512-X through ASA 5555-X	We introduced support for the IPS SSP software module for the ASA 5512-X, ASA 5515-X, ASA 5525-X, ASA 5545-X, and ASA 5555-X. We introduced or modified the following commands: session , show module , sw-module .
Remote Access Features	
Clientless SSL VPN browser support	The ASA now supports clientless SSL VPN with Microsoft Internet Explorer 9 and Firefox 4. <i>Also available in Version 8.4(3).</i>

Table 1-1 New Features for ASA Version 8.6(1) (continued)

Feature	Description
Compression for DTLS and TLS	<p>To improve throughput, Cisco now supports compression for DTLS and TLS on AnyConnect 3.0 or later. Each tunneling method configures compression separately, and the preferred configuration is to have both SSL and DTLS compression as LZS. This feature enhances migration from legacy VPN clients.</p> <p>Note Using data compression on high speed remote access connections passing highly compressible data requires significant processing power on the ASA. With other activity and traffic on the ASA, the number of sessions that can be supported on the platform is reduced.</p> <p>We introduced or modified the following commands: anyconnect dtls compression [lzs none] and anyconnect ssl compression [deflate lzs none].</p> <p><i>Also available in Version 8.4(3).</i></p>
Clientless SSL VPN Session Timeout Alerts	<p>Allows you to create custom messages to alert users that their VPN session is about to end because of inactivity or a session timeout.</p> <p>We introduced the following commands: vpn-session-timeout alert-interval, vpn-idle-timeout alert-interval.</p> <p><i>Also available in Version 8.4(3).</i></p>
Multiple Context Mode Features	
Automatic generation of a MAC address prefix	<p>In multiple context mode, the ASA now converts the automatic MAC address generation configuration to use a default prefix. The ASA auto-generates the prefix based on the last two bytes of the interface MAC address. This conversion happens automatically when you reload, or if you reenables MAC address generation. The prefix method of generation provides many benefits, including a better guarantee of unique MAC addresses on a segment. You can view the auto-generated prefix by entering the show running-config mac-address command. If you want to change the prefix, you can reconfigure the feature with a custom prefix. The legacy method of MAC address generation is no longer available.</p> <p>Note To maintain hitless upgrade for failover pairs, the ASA does <i>not</i> convert the MAC address method in an existing configuration upon a reload if failover is enabled. However, we strongly recommend that you manually change to the prefix method of generation. After upgrading, to use the prefix method of MAC address generation, reenables MAC address generation to use the default prefix.</p> <p>We modified the following command: mac-address auto.</p>
AAA Features	
Increased maximum LDAP values per attribute	<p>The maximum number of values that the ASA can receive for a single attribute was increased from 1000 (the default) to 5000, with an allowed range of 500 to 5000. If a response message is received that exceeds the configured limit, the ASA rejects the authentication. If the ASA detects that a single attribute has more than 1000 values, then the ASA generates informational syslog 109036. For more than 5000 attributes, the ASA generates error level syslog 109037.</p> <p>We introduced the following command: ldap-max-value-range number (Enter this command in aaa-server host configuration mode).</p> <p><i>Also available in Version 8.4(3).</i></p>

Table 1-1 New Features for ASA Version 8.6(1) (continued)

Feature	Description
Support for sub-range of LDAP search results	When an LDAP search results in an attribute with a large number of values, depending on the server configuration, it might return a sub-range of the values and expect the ASA to initiate additional queries for the remaining value ranges. The ASA now makes multiple queries for the remaining ranges, and combines the responses into a complete array of attribute values. <i>Also available in Version 8.4(3).</i>
Troubleshooting Features	
Regular expression matching for the show asp table classifier and show asp table filter commands	You can now enter the show asp table classifier and show asp table filter commands with a regular expression to filter output. We modified the following commands: show asp table classifier match regex , show asp table filter match regex . <i>Also available in Version 8.4(3).</i>

New Features in Version 8.4(5)

Released: October 31, 2012

[Table 1-2](#) lists the new features for ASA interim Version 8.4(5)/ASDM Version 7.0(2).

Table 1-2 New Features for ASA Version 8.4(5)/ASDM Version 7.0(2)

Feature	Description
Firewall Features	
EtherType ACL support for IS-IS traffic (transparent firewall mode)	In transparent firewall mode, the ASA can now pass IS-IS traffic using an EtherType ACL. We modified the following command: access-list ethertype {permit deny} is-is . We modified the following screen: Configuration > Device Management > Management Access > EtherType Rules. <i>This feature is not available in 8.5(1), 8.6(1), or 9.0(1).</i>

Table 1-2 New Features for ASA Version 8.4(5)/ASDM Version 7.0(2) (continued)

Feature	Description
ARP cache additions for non-connected subnets	<p>The ASA ARP cache only contains entries from directly-connected subnets by default. You can now enable the ARP cache to also include non-directly-connected subnets. We do not recommend enabling this feature unless you know the security risks. This feature could facilitate denial of service (DoS) attack against the ASA; a user on any interface could send out many ARP replies and overload the ASA ARP table with false entries.</p> <p>You may want to use this feature if you use:</p> <ul style="list-style-type: none"> • Secondary subnets. • Proxy ARP on adjacent routes for traffic forwarding. <p>We introduced the following command: arp permit-nonconnected.</p> <p>We modified the following screen: Configuration > Device Management > Advanced > ARP > ARP Static Table.</p> <p><i>This feature is not available in 8.5(1), 8.6(1), or 9.0(1).</i></p>
Increased maximum connection limits for service policy rules	<p>The maximum number of connections for service policy rules was increased from 65535 to 2000000.</p> <p>We modified the following commands: set connection conn-max, set connection embryonic-conn-max, set connection per-client-embryonic-max, set connection per-client-max.</p> <p>We modified the following screen: Configuration > Firewall > Service Policy Rules > Connection Settings.</p> <p><i>This feature is not available in 8.5(1) or 8.6(1).</i></p>
Remote Access Features	
Host Scan support for low bandwidth or high latency networks	<p>Host Scan now contacts the ASA periodically while it compiles and sends its dynamic access policy report to the ASA. The ASA has increased its timers to wait for Host Scan to send its DAP report. This results in more successful VPN connections especially over high latency networks such as dial-up or slow broadband.</p> <p><i>This feature is not available in 8.5(1), 8.6(1), or 9.0(1).</i></p>
Monitoring Features	
NAT-MIB cnatAddrBindNumberOfEntries and cnatAddrBindSessionCount OIDs to allow polling for Xlate count.	<p>Support was added for the NAT-MIB cnatAddrBindNumberOfEntries and cnatAddrBindSessionCount OIDs to support xlate_count and max_xlate_count for SNMP.</p> <p>This data is equivalent to the show xlate count command.</p> <p><i>This feature is not available in 8.5(1), 8.6(1), or 9.0(1).</i></p>
NSEL	<p>Flow-update events have been introduced to provide periodic byte counters for flow traffic. You can change the time interval at which flow-update events are sent to the NetFlow collector. You can filter to which collectors flow-update records will be sent.</p> <p>We introduced the following command: flow-export active refresh-interval.</p> <p>We modified the following command: flow-export event-type.</p> <p><i>This feature is not available in 8.5(1), 8.6(1), or 9.0(1).</i></p>

Table 1-2 New Features for ASA Version 8.4(5)/ASDM Version 7.0(2) (continued)

Feature	Description
Hardware Features	
ASA 5585-X DC power supply support	Support was added for the ASA 5585-X DC power supply. <i>This feature is not available in 8.5(1), 8.6(1), or 9.0(1).</i>

New Features in Version 8.4(4.1)

Released: June 18, 2012

Table 1-3 lists the new features for ASA Version 8.4(4.1).



Note

Version 8.4(4) was removed from Cisco.com due to build issues; please upgrade to Version 8.4(4.1) or later.

Table 1-3 New Features for ASA Version 8.4(4.1)

Feature	Description
Certification Features	
FIPS and Common Criteria certifications	The FIPS 140-2 Non-Proprietary Security Policy was updated as part of the Level 2 FIPS 140-2 validation for the Cisco ASA 5500 series adaptive security appliances, which includes the Cisco ASA 5505, ASA 5510, ASA 5520, ASA 5540, ASA 5550, and ASA 5585-X. The Common Criteria Evaluation Assurance Level 4 (EAL4) was updated, which provides the basis for a specific Target of Evaluation (TOE) of the Cisco ASA and VPN platform solutions. <i>This feature is not available in 8.5(1) or 8.6(1).</i>
Remote Access Features	
Clientless SSL VPN: Enhanced quality for rewriter engines	The clientless SSL VPN rewriter engines were significantly improved to provide better quality and efficacy. As a result, you can expect a better end-user experience for clientless SSL VPN users. We did not add or modify any commands for this feature. <i>This feature is not available in 8.5(1) or 8.6(1).</i>
Authentication and Encryption Features	
Support for password policy, password change, and SSH public key authentication	The ASA enables administrators with the necessary privileges to do the following for users in the current context: modify password policy, change passwords, and authenticate using an SSH public key. We introduced or modified the following commands: password-policy lifetime , password-policy minimum changes , password-policy minimum-length , password-policy minimum-lowercase , password-policy minimum-uppercase , password-policy minimum-numeric , password-policy minimum-special , password-policy authenticate enable , username , username attributes , clear configure username , change-password , clear configure password-policy , show running-config password-policy . <i>This feature is not available in 8.5(1) or 8.6(1).</i>

Table 1-3 New Features for ASA Version 8.4(4.1) (continued)

Feature	Description
Support for maximum number of management sessions allowed and Diffie-Hellman Key Exchange Group 14 support for SSH	<p>The maximum number of simultaneous ASDM, SSH, and Telnet sessions allowed was added. Support for Diffie-Hellman Key Exchange Group 14 for SSH was added.</p> <p>We introduced or modified the following commands: quota management-session, show running-config quota management-session, show quota management-session, ssh.</p> <p><i>This feature is not available in 8.5(1) or 8.6(1).</i></p>
Additional ephemeral Diffie-Hellman ciphers for SSL encryption	<p>The ASA now supports the following ephemeral Diffie-Hellman (DHE) SSL cipher suites:</p> <ul style="list-style-type: none"> • DHE-AES128-SHA1 • DHE-AES256-SHA1 <p>These cipher suites are specified in RFC 3268, <i>Advanced Encryption Standard (AES) Ciphersuites for Transport Layer Security (TLS)</i>.</p> <p>When supported by the client, DHE is the preferred cipher because it provides Perfect Forward Secrecy. See the following limitations:</p> <ul style="list-style-type: none"> • DHE is not supported on SSL 3.0 connections, so make sure to also enable TLS 1.0 for the SSL server. <pre>!! set server version hostname(config)# ssl server-version tlsv1 sslv3 !! set client version hostname(config) # ssl client-version any</pre> <ul style="list-style-type: none"> • Some popular applications do not support DHE, so include at least one other SSL encryption method to ensure that a cipher suite common to both the SSL client and server can be used. • Some clients may not support DHE, including AnyConnect 2.5 and 3.0, Cisco Secure Desktop, and Internet Explorer 9.0. <p>We modified the following command: ssl encryption.</p> <p><i>This feature is not available in 8.5(1) or 8.6(1).</i></p>
File System Features	
Image verification	<p>Support for SHA-512 image integrity checking was added.</p> <p>We modified the following command: verify.</p> <p><i>This feature is not available in 8.5(1) or 8.6(1).</i></p>
Failover Features	
Configure the connection replication rate during a bulk sync	<p>You can now configure the rate at which the ASA replicates connections to the standby unit when using Stateful Failover. By default, connections are replicated to the standby unit during a 15 second period. However, when a bulk sync occurs (for example, when you first enable failover), 15 seconds may not be long enough to sync large numbers of connections due to a limit on the maximum connections per second. For example, the maximum connections on the ASA is 8 million; replicating 8 million connections in 15 seconds means creating 533 K connections per second. However, the maximum connections allowed per second is 300 K. You can now specify the rate of replication to be less than or equal to the maximum connections per second, and the sync period will be adjusted until all the connections are synced.</p> <p>We introduced the following command: failover replication rate rate.</p> <p><i>This feature is not available in 8.6(1). This feature is also in 8.5(1.7).</i></p>

Table 1-3 New Features for ASA Version 8.4(4.1) (continued)

Feature	Description
Application Inspection Features	
SunRPC change from dynamic ACL to pin-hole mechanism	<p>Previously, Sun RPC inspection does not support outbound access lists because the inspection engine uses dynamic access lists instead of secondary connections.</p> <p>In this release, when you configure dynamic access lists on the ASA, they are supported on the ingress direction only and the ASA drops egress traffic destined to dynamic ports. Therefore, Sun RPC inspection implements a pinhole mechanism to support egress traffic. Sun RPC inspection uses this pinhole mechanism to support outbound dynamic access lists.</p> <p><i>This feature is not available in 8.5(1) or 8.6(1).</i></p>
Inspection reset action change	<p>Previously, when the ASA dropped a packet due to an inspection engine rule, the ASA sent only one RST to the source device of the dropped packet. This behavior could cause resource issues.</p> <p>In this release, when you configure an inspection engine to use a reset action and a packet triggers a reset, the ASA sends a TCP reset under the following conditions:</p> <ul style="list-style-type: none"> • The ASA sends a TCP reset to the inside host when the service resetoutbound command is enabled. (The service resetoutbound command is disabled by default.) • The ASA sends a TCP reset to the outside host when the service resetinbound command is enabled. (The service resetinbound command is disabled by default.) <p>For more information, see the service command in the ASA command reference.</p> <p>This behavior ensures that a reset action will reset the connections on the ASA and on inside servers; therefore countering denial of service attacks. For outside hosts, the ASA does not send a reset by default and information is not revealed through a TCP reset.</p> <p><i>This feature is not available in 8.5(1) or 8.6(1).</i></p>
Platform Features	
Improved pseudo-random number generation	<p>Hardware-based noise for additional entropy was added to the software-based random number generation process. This change makes pseudo-random number generation (PRNG) more random and more difficult for attackers to get a repeatable pattern or guess the next random number to be used for encryption and decryption operations. Two changes were made to improve PRNG:</p> <ul style="list-style-type: none"> • Use the current hardware-based RNG for random data to use as one of the parameters for software-based RNG. • If the hardware-based RNG is not available, use additional hardware noise sources for software-based RNG. Depending on your model, the following hardware sensors are used: <ul style="list-style-type: none"> – ASA 5505—Voltage sensors. – ASA 5510 and 5550—Fan speed sensors. – ASA 5520, 5540, and 5580—Temperature sensors. – ASA 5585-X—Fan speed sensors. <p>We introduced the following commands: show debug menu cts [128 129]</p> <p><i>This feature is not available in 8.5(1) or 8.6(1).</i></p>
Module Features	

Table 1-3 New Features for ASA Version 8.4(4.1) (continued)

Feature	Description
ASA 5585-X support for the ASA CX SSP-10 and -20	<p>The ASA CX module lets you enforce security based on the complete context of a situation. This context includes the identity of the user (who), the application or website that the user is trying to access (what), the origin of the access attempt (where), the time of the attempted access (when), and the properties of the device used for the access (how). With the ASA CX module, you can extract the full context of a flow and enforce granular policies such as permitting access to Facebook but denying access to games on Facebook or permitting finance employees access to a sensitive enterprise database but denying the same to other employees.</p> <p>We introduced or modified the following commands: capture, cxsc, cxsc auth-proxy, debug cxsc, hw-module module password-reset, hw-module module reload, hw-module module reset, hw-module module shutdown, session do setup host ip, session do get-config, session do password-reset, show asp table classify domain cxsc, show asp table classify domain cxsc-auth-proxy, show capture, show conn, show module, show service-policy.</p> <p><i>This feature is not available in 8.6(1).</i></p>
ASA 5585-X support for network modules	<p>The ASA 5585-X now supports additional interfaces on network modules in slot 1. You can install one or two of the following optional network modules:</p> <ul style="list-style-type: none"> • ASA 4-port 10G Network Module • ASA 8-port 10G Network Module • ASA 20-port 1G Network Module <p><i>This feature is not available in 8.6(1).</i></p>

New Features in Version 8.4(3)

Released: January 9, 2012

Table 1-4 lists the new features for ASA Version 8.4(3).

Table 1-4 New Features for ASA Version 8.4(3)

Feature	Description
NAT Features	
Round robin PAT pool allocation uses the same IP address for existing hosts	<p>When using a PAT pool with round robin allocation, if a host has an existing connection, then subsequent connections from that host will use the same PAT IP address if ports are available.</p> <p>We did not modify any commands.</p> <p><i>This feature is not available in 8.5(1) or 8.6(1).</i></p>
Flat range of PAT ports for a PAT pool	<p>If available, the real source port number is used for the mapped port. However, if the real port is <i>not</i> available, by default the mapped ports are chosen from the same range of ports as the real port number: 0 to 511, 512 to 1023, and 1024 to 65535. Therefore, ports below 1024 have only a small PAT pool.</p> <p>If you have a lot of traffic that uses the lower port ranges, when using a PAT pool, you can now specify a flat range of ports to be used instead of the three unequal-sized tiers: either 1024 to 65535, or 1 to 65535.</p> <p><i>This feature is not available in 8.5(1) or 8.6(1).</i></p>

Table 1-4 New Features for ASA Version 8.4(3) (continued)

Feature	Description
Extended PAT for a PAT pool	<p>Each PAT IP address allows up to 65535 ports. If 65535 ports do not provide enough translations, you can now enable extended PAT for a PAT pool. Extended PAT uses 65535 ports per <i>service</i>, as opposed to per IP address, by including the destination address and port in the translation information.</p> <p><i>This feature is not available in 8.5(1) or 8.6(1).</i></p>
Configurable timeout for PAT xlate	<p>When a PAT xlate times out (by default after 30 seconds), and the ASA reuses the port for a new translation, some upstream routers might reject the new connection because the previous connection might still be open on the upstream device. The PAT xlate timeout is now configurable, to a value between 30 seconds and 5 minutes.</p> <p><i>This feature is not available in 8.5(1) or 8.6(1).</i></p>
Automatic NAT rules to translate a VPN peer's local IP address back to the peer's real IP address	<p>In rare situations, you might want to use a VPN peer's real IP address on the inside network instead of an assigned local IP address. Normally with VPN, the peer is given an assigned local IP address to access the inside network. However, you might want to translate the local IP address back to the peer's real public IP address if, for example, your inside servers and network security is based on the peer's real IP address.</p> <p>You can enable this feature on one interface per tunnel group. Object NAT rules are dynamically added and deleted when the VPN session is established or disconnected. You can view the rules using the show nat command.</p> <p>Note Because of routing issues, we do not recommend using this feature unless you know you need this feature; contact Cisco TAC to confirm feature compatibility with your network. See the following limitations:</p> <ul style="list-style-type: none"> • Only supports Cisco IPsec and AnyConnect Client. • Return traffic to the public IP addresses must be routed back to the ASA so the NAT policy and VPN policy can be applied. • Does not support load-balancing (because of routing issues). • Does not support roaming (public IP changing). <p>We introduced the following command: nat-assigned-to-public-ip interface (tunnel-group general-attributes configuration mode).</p>
Remote Access Features	
Clientless SSL VPN browser support	The ASA now supports clientless SSL VPN with Microsoft Internet Explorer 9 and Firefox 4.

Table 1-4 New Features for ASA Version 8.4(3) (continued)

Feature	Description
Compression for DTLS and TLS	<p>To improve throughput, Cisco now supports compression for DTLS and TLS on AnyConnect 3.0 or later. Each tunneling method configures compression separately, and the preferred configuration is to have both SSL and DTLS compression as LZS. This feature enhances migration from legacy VPN clients.</p> <p>Note Using data compression on high speed remote access connections passing highly compressible data requires significant processing power on the ASA. With other activity and traffic on the ASA, the number of sessions that can be supported on the platform is reduced.</p> <p>We introduced or modified the following commands: anyconnect dtls compression [lzs none] and anyconnect ssl compression [deflate lzs none].</p>
VPN Session Timeout Alerts	<p>Allows you to create custom messages to alert users that their VPN session is about to end because of inactivity or a session timeout.</p> <p>We introduced the following commands: vpn-session-timeout alert-interval, vpn-idle-timeout alert-interval.</p>
AAA Features	
Increased maximum LDAP values per attribute	<p>The maximum number of values that the ASA can receive for a single attribute was increased from 1000 (the default) to 5000, with an allowed range of 500 to 5000. If a response message is received that exceeds the configured limit, the ASA rejects the authentication. If the ASA detects that a single attribute has more than 1000 values, then the ASA generates informational syslog 109036. For more than 5000 attributes, the ASA generates error level syslog 109037.</p> <p>We introduced the following command: ldap-max-value-range number (Enter this command in aaa-server host configuration mode).</p>
Support for sub-range of LDAP search results	<p>When an LDAP search results in an attribute with a large number of values, depending on the server configuration, it might return a sub-range of the values and expect the ASA to initiate additional queries for the remaining value ranges. The ASA now makes multiple queries for the remaining ranges, and combines the responses into a complete array of attribute values.</p>
Key vendor-specific attributes (VSAs) sent in RADIUS access request and accounting request packets from the ASA	<p>Four New VSAs—Tunnel Group Name (146) and Client Type (150) are sent in RADIUS access request packets from the ASA. Session Type (151) and Session Subtype (152) are sent in RADIUS accounting request packets from the ASA. All four attributes are sent for all accounting request packet types: Start, Interim-Update, and Stop. The RADIUS server (for example, ACS and ISE) can then enforce authorization and policy attributes or use them for accounting and billing purposes.</p>
Troubleshooting Features	
Regular expression matching for the show asp table classifier and show asp table filter commands	<p>You can now enter the show asp table classifier and show asp table filter commands with a regular expression to filter output.</p> <p>We modified the following commands: show asp table classifier match regex, show asp table filter match regex.</p>

New Features in Version 8.4(2)

Released: June 20, 2011

Table 1-5 lists the new features for ASA Version 8.4(2).

Table 1-5 *New Features for ASA Version 8.4(2)*

Feature	Description
Firewall Features	
Identity Firewall	<p>Typically, a firewall is not aware of the user identities and, therefore, cannot apply security policies based on identity.</p> <p>The Identity Firewall in the ASA provides more granular access control based on users' identities. You can configure access rules and security policies based on usernames and user groups name rather than through source IP addresses. The ASA applies the security policies based on an association of IP addresses to Windows Active Directory login information and reports events based on the mapped usernames instead of network IP addresses.</p> <p>The Identity Firewall integrates with Window Active Directory in conjunction with an external Active Directory (AD) Agent that provides the actual identity mapping. The ASA uses Windows Active Directory as the source to retrieve the current user identity information for specific IP addresses.</p> <p>In an enterprise, some users log onto the network by using other authentication mechanisms, such as authenticating with a web portal (cut-through proxy) or by using a VPN. You can configure the Identity Firewall to allow these types of authentication in connection with identity-based access policies.</p>
Identity NAT configurable proxy ARP and route lookup	<p>In earlier releases for identity NAT, proxy ARP was disabled, and a route lookup was always used to determine the egress interface. You could not configure these settings. In 8.4(2) and later, the default behavior for identity NAT was changed to match the behavior of other static NAT configurations: proxy ARP is enabled, and the NAT configuration determines the egress interface (if specified) by default. You can leave these settings as is, or you can enable or disable them discretely. Note that you can now also disable proxy ARP for regular static NAT.</p> <p>For pre-8.3 configurations, the migration of NAT exempt rules (the nat 0 access-list command) to 8.4(2) and later now includes the following keywords to disable proxy ARP and to use a route lookup: no-proxy-arp and route-lookup. The unidirectional keyword that was used for migrating to 8.3(2) and 8.4(1) is no longer used for migration. When upgrading to 8.4(2) from 8.3(1), 8.3(2), and 8.4(1), all identity NAT configurations will now include the no-proxy-arp and route-lookup keywords, to maintain existing functionality. The unidirectional keyword is removed.</p>

Table 1-5 New Features for ASA Version 8.4(2) (continued)

Feature	Description
PAT pool and round robin address assignment	<p>You can now specify a pool of PAT addresses instead of a single address. You can also optionally enable round-robin assignment of PAT addresses instead of first using all ports on a PAT address before using the next address in the pool. These features help prevent a large number of connections from a single PAT address from appearing to be part of a DoS attack and makes configuration of large numbers of PAT addresses easy.</p> <p>Note Currently in 8.4(2), the PAT pool feature is not available as a fallback method for dynamic NAT or PAT. You can only configure the PAT pool as the primary method for dynamic PAT (CSCtq20634).</p>
IPv6 Inspection	<p>You can configure IPv6 inspection by configuring a service policy to selectively block IPv6 traffic based on the extension header. IPv6 packets are subjected to an early security check. The ASA always passes hop-by-hop and destination option types of extension headers while blocking router header and no next header.</p> <p>You can enable default IPv6 inspection or customize IPv6 inspection. By defining a policy map for IPv6 inspection you can configure the ASA to selectively drop IPv6 packets based on following types of extension headers found anywhere in the IPv6 packet:</p> <ul style="list-style-type: none"> • Hop-by-Hop Options • Routing (Type 0) • Fragment • Destination Options • Authentication • Encapsulating Security Payload
Remote Access Features	
Portal Access Rules	<p>This enhancement allows customers to configure a global clientless SSL VPN access policy to permit or deny clientless SSL VPN sessions based on the data present in the HTTP header. If denied, an error code is returned to the clients. This denial is performed before user authentication and thus minimizes the use of processing resources.</p> <p><i>Also available in Version 8.2(5).</i></p>
Clientless support for Microsoft Outlook Web App 2010	<p>The ASA 8.4(2) clientless SSL VPN core rewriter now supports Microsoft Outlook Web App 2010.</p>
Secure Hash Algorithm SHA-2 Support for IPsec IKEv2 Integrity and PRF	<p>This release supports the Secure Hash Algorithm SHA-2 for increased cryptographic hashing security for IPsec/IKEv2 AnyConnect Secure Mobility Client connections to the ASA. SHA-2 includes hash functions with digests of 256, 384, or 512 bits, to meet U.S. government requirements.</p>

Table 1-5 New Features for ASA Version 8.4(2) (continued)

Feature	Description
Secure Hash Algorithm SHA-2 Support for Digital Signature over IPsec IKEv2	<p>This release supports the use of SHA-2 compliant signature algorithms to authenticate IPsec IKEv2 VPN connections that use digital certificates, with the hash sizes SHA-256, SHA-384, and SHA-512.</p> <p>SHA-2 digital signature for IPsec IKEv2 connections is supported with the AnyConnect Secure Mobility Client, Version 3.0.1 or later.</p>
Split Tunnel DNS policy for AnyConnect	<p>This release includes a new policy pushed down to the AnyConnect Secure Mobility Client for resolving DNS addresses over split tunnels. This policy applies to VPN connections using the SSL or IPsec/IKEv2 protocol and instructs the AnyConnect client to resolve all DNS addresses through the VPN tunnel. If DNS resolution fails, the address remains unresolved and the AnyConnect client does not try to resolve the address through public DNS servers.</p> <p>By default, this feature is disabled. The client sends DNS queries over the tunnel according to the split tunnel policy: tunnel all networks, tunnel networks specified in a network list, or exclude networks specified in a network list.</p> <p><i>Also available in Version 8.2(5).</i></p>
Mobile Posture (formerly referred to as AnyConnect Identification Extensions for Mobile Device Detection)	<p>You can now configure the ASA to permit or deny VPN connections to mobile devices, enable or disable mobile device access on a per group bases, and gather information about connected mobile devices based on a mobile device's posture data. The following mobile platforms support this capability: AnyConnect for iPhone/iPad/iPod Versions 2.5.x and AnyConnect for Android Version 2.4.x.</p> <p>Licensing Requirements</p> <p>Enforcing remote access controls and gathering posture data from mobile devices requires an AnyConnect Mobile license and either an AnyConnect Essentials or AnyConnect Premium license to be installed on the ASA. You receive the following functionality based on the license you install:</p> <ul style="list-style-type: none"> • AnyConnect Premium License Functionality <p>Enterprises that install the AnyConnect Premium license will be able to enforce DAP policies, on supported mobile devices, based on these DAP attributes and any other existing endpoint attributes. This includes allowing or denying remote access from a mobile device.</p> • AnyConnect Essentials License Functionality <p>Enterprises that install the AnyConnect Essentials license will be able to do the following:</p> <ul style="list-style-type: none"> – Enable or disable mobile device access on a per group basis and to configure that feature using ASDM. – Display information about connected mobile devices via CLI or ASDM without having the ability to enforce DAP policies or deny or allow remote access to those mobile devices. <p><i>Also available in Version 8.2(5).</i></p>

Table 1-5 New Features for ASA Version 8.4(2) (continued)

Feature	Description
SSL SHA-2 digital signature	<p>You can now use of SHA-2 compliant signature algorithms to authenticate SSL VPN connections that use digital certificates. Our support for SHA-2 includes all three hash sizes: SHA-256, SHA-384, and SHA-512. SHA-2 requires AnyConnect 2.5(1) or later (2.5(2) or later recommended). This release does not support SHA-2 for other uses or products.</p> <p>Caution: To support failover of SHA-2 connections, the standby ASA must be running the same image.</p> <p><i>Also available in Version 8.2(5).</i></p>
SHA2 certificate signature support for Microsoft Windows 7 and Android-native VPN clients	<p>ASA supports SHA2 certificate signature support for Microsoft Windows 7 and Android-native VPN clients when using the L2TP/IPsec protocol.</p> <p><i>Also available in Version 8.2(5).</i></p>
Enable/disable certificate mapping to override the group-url attribute	<p>This feature changes the preference of a connection profile during the connection profile selection process. By default, if the ASA matches a certificate field value specified in a connection profile to the field value of the certificate used by the endpoint, the ASA assigns that profile to the VPN connection. This optional feature changes the preference to a connection profile that specifies the group URL requested by the endpoint. The new option lets administrators rely on the group URL preference used by many older ASA software releases.</p> <p><i>Also available in Version 8.2(5).</i></p>
ASA 5585-X Features	
Support for Dual SSPs for SSP-40 and SSP-60	<p>For SSP-40 and SSP-60, you can use two SSPs of the same level in the same chassis. Mixed-level SSPs are not supported (for example, an SSP-40 with an SSP-60 is not supported). Each SSP acts as an independent device, with separate configurations and management. You can use the two SSPs as a failover pair if desired.</p> <p>Note When using two SSPs in the chassis, VPN is not supported; note, however, that VPN has not been disabled.</p>
Support for the IPS SSP-10, -20, -40, and -60	<p>We introduced support for the IPS SSP-10, -20, -40, and -60 for the ASA 5585-X. You can only install the IPS SSP with a matching-level SSP; for example, SSP-10 and IPS SSP-10.</p> <p><i>Also available in Version 8.2(5).</i></p>
CSC SSM Features	
CSC SSM Support	<p>For the CSC SSM, support for the following features has been added:</p> <ul style="list-style-type: none"> • HTTPS traffic redirection: URL filtering and WRS queries for incoming HTTPS connections. • Configuring global approved whitelists for incoming and outgoing SMTP and POP3 e-mail. • E-mail notification for product license renewals.
Monitoring Features	
Smart Call-Home Anonymous Reporting	<p>Customers can now help to improve the ASA platform by enabling Anonymous Reporting, which allows Cisco to securely receive minimal error and health information from the device.</p> <p><i>Also available in Version 8.2(5).</i></p>

Table 1-5 New Features for ASA Version 8.4(2) (continued)

Feature	Description
IF-MIB ifAlias OID support	The ASA now supports the ifAlias OID. When you browse the IF-MIB, the ifAlias OID will be set to the value that has been set for the interface description. <i>Also available in Version 8.2(5).</i>
Interface Features	
Support for Pause Frames for Flow Control on 1-Gigabit Ethernet Interface	You can now enable pause (XOFF) frames for flow control on 1-Gigabit Ethernet interfaces; support was previously added for 10-Gigabit Ethernet interfaces in 8.2(2). <i>Also available in Version 8.2(5).</i>
Management Features	
Increased SSH security; the SSH default username is no longer supported	Starting in 8.4(2), you can no longer connect to the ASA using SSH with the pix or asa username and the login password. To use SSH, you must configure AAA authentication using the aaa authentication ssh console LOCAL command (CLI) or Configuration > Device Management > Users/AAA > AAA Access > Authentication (ASDM); then define a local user by entering the username command (CLI) or choosing Configuration > Device Management > Users/AAA > User Accounts (ASDM). If you want to use a AAA server for authentication instead of the local database, we recommend also configuring local authentication as a backup method.
Unified Communications Features	
ASA-Tandberg Interoperability with H.323 Inspection	H.323 Inspection now supports uni-directional signaling for two-way video sessions. This enhancement allows H.323 Inspection of one-way video conferences supported by Tandberg video phones. Supporting uni-directional signaling allows Tandberg phones to switch video modes (close their side of an H.263 video session and reopen the session using H.264, the compression standard for high-definition video). <i>Also available in Version 8.2(5).</i>
Routing Features	
Timeout for connections using a backup static route	When multiple static routes exist to a network with different metrics, the ASA uses the one with the best metric at the time of connection creation. If a better route becomes available, then this timeout lets connections be closed so a connection can be reestablished to use the better route. The default is 0 (the connection never times out). To take advantage of this feature, change the timeout to a new value. <i>Also available in Version 8.2(5).</i>

Released: May 23, 2011

Table 1-6 lists the new features for ASA Version 8.2(5).

Table 1-6 New Features for ASA Version 8.2(5)

Feature	Description
Monitoring Features	
Smart Call-Home Anonymous Reporting	Customers can now help to improve the ASA platform by enabling Anonymous Reporting, which allows Cisco to securely receive minimal error and health information from the device. <i>Also available in Version 8.4(2).</i>

Table 1-6 New Features for ASA Version 8.2(5) (continued)

Feature	Description
IF-MIB ifAlias OID support	<p>The ASA now supports the ifAlias OID. When you browse the IF-MIB, the ifAlias OID will be set to the value that has been set for the interface description.</p> <p><i>Also available in Version 8.4(2).</i></p>
Remote Access Features	
Portal Access Rules	<p>This enhancement allows customers to configure a global clientless SSL VPN access policy to permit or deny clientless SSL VPN sessions based on the data present in the HTTP header. If denied, an error code is returned to the clients. This denial is performed before user authentication and thus minimizes the use of processing resources.</p> <p><i>Also available in Version 8.4(2).</i></p>
Mobile Posture (formerly referred to as AnyConnect Identification Extensions for Mobile Device Detection)	<p>You can now configure the ASA to permit or deny VPN connections to mobile devices, enable or disable mobile device access on a per-group basis, and gather information about connected mobile devices based on the mobile device posture data. The following mobile platforms support this capability: AnyConnect for iPhone/iPad/iPod Versions 2.5.x and AnyConnect for Android Version 2.4.x. You do not need to enable CSD to configure these attributes in ASDM.</p> <p>Licensing Requirements</p> <p>Enforcing remote access controls and gathering posture data from mobile devices requires an AnyConnect Mobile license and either an AnyConnect Essentials or AnyConnect Premium license to be installed on the ASA. You receive the following functionality based on the license you install:</p> <ul style="list-style-type: none"> • AnyConnect Premium License Functionality <p>Enterprises that install the AnyConnect Premium license will be able to enforce DAP policies, on supported mobile devices, based on these DAP attributes and any other existing endpoint attributes. This includes allowing or denying remote access from a mobile device.</p> • AnyConnect Essentials License Functionality <p>Enterprises that install the AnyConnect Essentials license will be able to do the following:</p> <ul style="list-style-type: none"> – Enable or disable mobile device access on a per-group basis and to configure that feature using ASDM. – Display information about connected mobile devices via CLI or ASDM without having the ability to enforce DAP policies or deny or allow remote access to those mobile devices. <p><i>Also available in Version 8.4(2).</i></p>
Split Tunnel DNS policy for AnyConnect	<p>This release includes a new policy pushed down to the AnyConnect Secure Mobility Client for resolving DNS addresses over split tunnels. This policy applies to VPN connections using the SSL or IPsec/IKEv2 protocol and instructs the AnyConnect client to resolve all DNS addresses through the VPN tunnel. If DNS resolution fails, the address remains unresolved and the AnyConnect client does not try to resolve the address through public DNS servers.</p> <p>By default, this feature is disabled. The client sends DNS queries over the tunnel according to the split tunnel policy—tunnel all networks, tunnel networks specified in a network list, or exclude networks specified in a network list.</p> <p><i>Also available in Version 8.4(2).</i></p>

Table 1-6 New Features for ASA Version 8.2(5) (continued)

Feature	Description
SSL SHA-2 digital signature	<p>You can now use of SHA-2 compliant signature algorithms to authenticate SSL VPN connections that use digital certificates. Our support for SHA-2 includes all three hash sizes: SHA-256, SHA-384, and SHA-512. SHA-2 requires AnyConnect 2.5(1) or later (2.5(2) or later recommended). This release does not support SHA-2 for other uses or products.</p> <p>Caution: To support failover of SHA-2 connections, the standby ASA must be running the same image.</p> <p><i>Also available in Version 8.4(2).</i></p>
L2TP/IPsec support for Android	<p>We now support VPN connections between Android mobile devices and ASA 5500 series devices, when using the L2TP/IPsec protocol and the native Android VPN client. Mobile devices must be using the Android 2.1 or later operating system.</p> <p><i>Also available in Version 8.4(1).</i></p>
SHA2 certificate signature support for Microsoft Windows 7 and Android-native VPN clients	<p>ASA supports SHA2 certificate signature support for Microsoft Windows 7 and Android-native VPN clients when using the L2TP/IPsec protocol.</p> <p><i>Also available in Version 8.4(2).</i></p>
Enable/disable certificate mapping to override the group-url attribute	<p>This feature changes the preference of a connection profile during the connection profile selection process. By default, if the ASA matches a certificate field value specified in a connection profile to the field value of the certificate used by the endpoint, the ASA assigns that profile to the VPN connection. This optional feature changes the preference to a connection profile that specifies the group URL requested by the endpoint. The new option lets administrators rely on the group URL preference used by many older ASA software releases.</p> <p><i>Also available in Version 8.4(2).</i></p>
Interface Features	
Support for Pause Frames for Flow Control on 1-Gigabit Ethernet Interface	<p>You can now enable pause (XOFF) frames for flow control on 1-Gigabit Ethernet interfaces; support was previously added for 10-Gigabit Ethernet interfaces in 8.2(2).</p> <p><i>Also available in Version 8.4(2).</i></p>
Unified Communications Features	
ASA-Tandberg Interoperability with H.323 Inspection	<p>H.323 Inspection now supports uni-directional signaling for two-way video sessions. This enhancement allows H.323 Inspection of one-way video conferences supported by Tandberg video phones. Supporting uni-directional signaling allows Tandberg phones to switch video modes (close their side of an H.263 video session and reopen the session using H.264, the compression standard for high-definition video).</p> <p><i>Also available in Version 8.4(2).</i></p>
Routing Features	
Timeout for connections using a backup static route	<p>When multiple static routes exist to a network with different metrics, the ASA uses the one with the best metric at the time of connection creation. If a better route becomes available, then this timeout lets connections be closed so a connection can be reestablished to use the better route. The default is 0 (the connection never times out). To take advantage of this feature, change the timeout to a new value.</p> <p><i>Also available in Version 8.4(2).</i></p>

New Features in Version 8.4(1)

Released: January 31, 2011

Table 1-7 lists the new features for ASA Version 8.4(1).

Table 1-7 New Features for ASA Version 8.4(1)

Feature	Description
Hardware Features	
Support for the ASA 5585-X	<p>We introduced support for the ASA 5585-X with Security Services Processor (SSP)-10, -20, -40, and -60.</p> <p>Note Support was previously added in 8.2(3) and 8.2(4); the ASA 5585-X is not supported in 8.3(x).</p>
No Payload Encryption hardware for export	<p>You can purchase the ASA 5585-X with No Payload Encryption. For export to some countries, payload encryption cannot be enabled on the Cisco ASA 5500 series. The ASA software senses a No Payload Encryption model, and disables the following features:</p> <ul style="list-style-type: none"> • Unified Communications • VPN <p>You can still install the Strong Encryption (3DES/AES) license for use with management connections. For example, you can use ASDM HTTPS/SSL, SSHv2, Telnet and SNMPv3. You can also download the dynamic database for the Botnet Traffic Filer (which uses SSL).</p>
Remote Access Features	
L2TP/IPsec Support on Android Platforms	<p>We now support VPN connections between Android mobile devices and ASA 5500 series devices, when using the L2TP/IPsec protocol and the native Android VPN client. Mobile devices must be using the Android 2.1, or later, operating system.</p> <p><i>Also available in Version 8.2(5).</i></p>
UTF-8 Character Support for AnyConnect Passwords	<p>AnyConnect 3.0 used with ASA 8.4(1), supports UTF-8 characters in passwords sent using RADIUS/MSCHAP and LDAP protocols.</p>
IPsec VPN Connections with IKEv2	<p>Internet Key Exchange Version 2 (IKEv2) is the latest key exchange protocol used to establish and control Internet Protocol Security (IPsec) tunnels. The ASA now supports IPsec with IKEv2 for the AnyConnect Secure Mobility Client, Version 3.0(1), for all client operating systems.</p> <p>On the ASA, you enable IPsec connections for users in the group policy. For the AnyConnect client, you specify the primary protocol (IPsec or SSL) for each ASA in the server list of the client profile.</p> <p>IPsec remote access VPN using IKEv2 was added to the AnyConnect Essentials and AnyConnect Premium licenses.</p> <p>Site-to-site sessions were added to the Other VPN license (formerly IPsec VPN). The Other VPN license is included in the Base license.</p> <p>We modified the following commands: vpn-tunnel-protocol, crypto ikev2 policy, crypto ikev2 enable, crypto ipsec ikev2, crypto dynamic-map, crypto map.</p>

Table 1-7 New Features for ASA Version 8.4(1) (continued)

Feature	Description
SSL SHA-2 digital signature	<p>This release supports the use of SHA-2 compliant signature algorithms to authenticate SSL VPN connections that use digital certificates. Our support for SHA-2 includes all three hash sizes: SHA-256, SHA-384, and SHA-512. SHA-2 requires AnyConnect 2.5.1 or later (2.5.2 or later recommended). This release does not support SHA-2 for other uses or products. This feature does not involve configuration changes.</p> <p>Caution: To support failover of SHA-2 connections, the standby ASA must be running the same image. To support this feature, we added the Signature Algorithm field to the show crypto ca certificate command to identify the digest algorithm used when generating the signature.</p>
SCEP Proxy	<p>SCEP Proxy provides the AnyConnect Secure Mobility Client with support for automated third-party certificate enrollment. Use this feature to support AnyConnect with zero-touch, secure deployment of device certificates to authorize endpoint connections, enforce policies that prevent access by non-corporate assets, and track corporate assets. This feature requires an AnyConnect Premium license and will not work with an Essentials license.</p> <p>We introduced or modified the following commands: crypto ikev2 enable, scep-enrollment enable, scep-forwarding-url, debug crypto ca scep-proxy, secondary-username-from-certificate, secondary-pre-fill-username.</p>
Host Scan Package Support	<p>This feature provides the necessary support for the ASA to install or upgrade a Host Scan package and enable or disable Host Scan. This package may either be a standalone Host Scan package or one that ASA extracts from an AnyConnect Next Generation package.</p> <p>In previous releases of AnyConnect, an endpoint's posture was determined by Cisco Secure Desktop (CSD). Host Scan was one of many features bundled in CSD. Unbundling Host Scan from CSD gives AnyConnect administrators greater freedom to update and install Host Scan separately from the other features of CSD.</p> <p>We introduced the following command: csd hostscan image path.</p>
Kerberos Constrained Delegation (KCD)	<p>This release implements the KCD protocol transition and constrained delegation extensions on the ASA. KCD provides Clientless SSL VPN (also known as WebVPN) users with SSO access to any web services protected by Kerberos. Examples of such services or applications include Outlook Web Access (OWA), Sharepoint, and Internet Information Server (IIS).</p> <p>Implementing protocol transition allows the ASA to obtain Kerberos service tickets on behalf of remote access users without requiring them to authenticate to the KDC (through Kerberos). Instead, a user authenticates to ASA using any of the supported authentication mechanisms, including digital certificates and Smartcards, for Clientless SSL VPN (also known as WebVPN). When user authentication is complete, the ASA requests and obtains an impersonate ticket, which is a service ticket for ASA on behalf of the user. The ASA may then use the impersonate ticket to obtain other service tickets for the remote access user.</p> <p>Constrained delegation provides a way for domain administrators to limit the network resources that a service trusted for delegation (for example, the ASA) can access. This task is accomplished by configuring the account under which the service is running to be trusted for delegation to a specific instance of a service running on a specific computer.</p> <p>We modified the following commands: kcd-server, clear aaa, show aaa, test aaa-server authentication.</p>
Clientless SSL VPN browser support	The ASA now supports clientless SSL VPN with Apple Safari 5.

Table 1-7 New Features for ASA Version 8.4(1) (continued)

Feature	Description
Clientless VPN Auto Sign-on Enhancement	<p>Smart tunnel now supports HTTP-based auto sign-on on Firefox as well as Internet Explorer. Similar to when Internet Explorer is used, the administrator decides to which hosts a Firefox browser will automatically send credentials. For some authentication methods, it may be necessary for the administrator to specify a realm string on the ASA to match that on the web application (in the Add Smart Tunnel Auto Sign-on Server window). You can now use bookmarks with macro substitutions for auto sign-on with Smart tunnel as well.</p> <p>The POST plug-in is now obsolete. The former POST plug-in was created so that administrators could specify a bookmark with sign-on macros and receive a kick-off page to load prior to posting the the POST request. The POST plug-in approach allows requests that required the presence of cookies, and other header items, fetched ahead of time to go through. The administrator can now specify pre-load pages when creating bookmarks to achieve the same functionality. Same as the POST plug-in, the administrator specifies the pre-load page URL and the URL to send the POST request to.</p> <p>You can now replace the default preconfigured SSL VPN portal with your own portal. The administrators do this by specifying a URL as an External Portal. Unlike the group-policy home page, the External Portal supports POST requests with macro substitution (for auto sign-on) as well as pre-load pages.</p> <p>We introduced or modified the following command: smart-tunnel auto-signon.</p>
Expanded Smart Tunnel application support	<p>Smart Tunnel adds support for the following applications:</p> <ul style="list-style-type: none"> • Microsoft Outlook Exchange Server 2010 (native support). Users can now use Smart Tunnel to connect Microsoft Office Outlook to a Microsoft Exchange Server. • Microsoft Sharepoint/Office 2010. Users can now perform remote file editing using Microsoft Office 2010 Applications and Microsoft Sharepoint by using Smart Tunnel.
Interface Features	
EtherChannel support (ASA 5510 and higher)	<p>You can configure up to 48 802.3ad EtherChannels of eight active interfaces each.</p> <p>Note You cannot use interfaces on the 4GE SSM, including the integrated 4GE SSM in slot 1 on the ASA 5550, as part of an EtherChannel.</p> <p>We introduced the following commands: channel-group, lACP port-priority, interface port-channel, lACP max-bundle, port-channel min-bundle, port-channel load-balance, lACP system-priority, clear lACP counters, show lACP, show port-channel.</p>

Table 1-7 New Features for ASA Version 8.4(1) (continued)

Feature	Description
Bridge groups for transparent mode	<p>If you do not want the overhead of security contexts, or want to maximize your use of security contexts, you can group interfaces together in a bridge group, and then configure multiple bridge groups, one for each network. Bridge group traffic is isolated from other bridge groups. You can configure up to 8 bridge groups in single mode or per context in multiple mode, with 4 interfaces maximum per bridge group.</p> <p>Note Although you can configure multiple bridge groups on the ASA 5505, the restriction of 2 data interfaces in transparent mode on the ASA 5505 means you can only effectively use 1 bridge group.</p> <p>We introduced the following commands: interface bvi, bridge-group, show bridge-group.</p>
Scalability Features	
Increased contexts for the ASA 5550, 5580, and 5585-X	For the ASA 5550 and ASA 5585-X with SSP-10, the maximum contexts was increased from 50 to 100. For the ASA 5580 and 5585-X with SSP-20 and higher, the maximum was increased from 50 to 250.
Increased VLANs for the ASA 5580 and 5585-X	For the ASA 5580 and 5585-X, the maximum VLANs was increased from 250 to 1024.
Additional platform support	Google Chrome has been added as a supported platform for ASA Version 8.4. Both 32-bit and 64-bit platforms are supported on Windows XP, Vista, and 7 and Mac OS X Version 6.0.
Increased connections for the ASA 5580 and 5585-X	<p>We increased the firewall connection limits:</p> <ul style="list-style-type: none"> • ASA 5580-20—1,000,000 to 2,000,000. • ASA 5580-40—2,000,000 to 4,000,000. • ASA 5585-X with SSP-10: 750,000 to 1,000,000. • ASA 5585-X with SSP-20: 1,000,000 to 2,000,000. • ASA 5585-X with SSP-40: 2,000,000 to 4,000,000. • ASA 5585-X with SSP-60: 2,000,000 to 10,000,000.
Increased AnyConnect VPN sessions for the ASA 5580	The AnyConnect VPN session limit was increased from 5,000 to 10,000.
Increased Other VPN sessions for the ASA 5580	The other VPN session limit was increased from 5,000 to 10,000.
High Availability Features	
Stateful Failover with Dynamic Routing Protocols	<p>Routes that are learned through dynamic routing protocols (such as OSPF and EIGRP) on the active unit are now maintained in a Routing Information Base (RIB) table on the standby unit. Upon a failover event, traffic on the secondary active unit now passes with minimal disruption because routes are known.</p> <p>We modified the following commands: show failover, show route, show route failover.</p>
Unified Communication Features	

Table 1-7 New Features for ASA Version 8.4(1) (continued)

Feature	Description
UC Protocol Inspection Enhancements	<p>SIP Inspection and SCCP Inspection are enhanced to support new features in the Unified Communications Solutions; such as, SCCP v2.0 support, support for GETPORT messages in SCCP Inspection, SDP field support in INVITE messages with SIP Inspection, and QSIG tunneling over SIP. Additionally, the Cisco Intercompany Media Engine supports Cisco RT Lite phones and third-party video endpoints (such as, Tandberg).</p> <p>We did not modify any commands.</p>
Inspection Features	
DCERPC Enhancement	<p>DCERPC Inspection was enhanced to support inspection of RemoteCreateInstance RPC messages.</p> <p>We did not modify an commands.</p>
Troubleshooting and Monitoring Features	
SNMP traps and MIBs	<p>Supports the following additional keywords: connection-limit-reached, entity cpu-temperature, cpu threshold rising, entity fan-failure, entity power-supply, ikev2 stop start, interface-threshold, memory-threshold, nat packet-discard, warmstart.</p> <p>The entPhysicalTable reports entries for sensors, fans, power supplies, and related components.</p> <p>Supports the following additional MIBs: ENTITY-SENSOR-MIB, CISCO-ENTITY-SENSOR-EXT-MIB, CISCO-ENTITY-FRU-CONTROL-MIB, CISCO-PROCESS-MIB, CISCO-ENHANCED-MEMPOOL-MIB, CISCO-L4L7MODULE-RESOURCE-LIMIT-MIB, NAT-MIB, EVENT-MIB, EXPRESSION-MIB</p> <p>Supports the following additional traps: warmstart, cpmCPURisingThreshold, mteTriggerFired, cirResourceLimitReached, natPacketDiscard, ciscoEntSensorExtThresholdNotification.</p> <p>We introduced or modified the following commands: snmp cpu threshold rising, snmp interface threshold, snmp-server enable traps.</p>
TCP Ping Enhancement	<p>TCP ping allows users whose ICMP echo requests are blocked to check connectivity over TCP. With the TCP ping enhancement you can specify a source IP address and a port and source interface to send pings to a hostname or an IPv4 address.</p> <p>We modified the following command: ping tcp.</p>
Show Top CPU Processes	<p>You can now monitor the processes that run on the CPU to obtain information related to the percentage of the CPU used by any given process. You can also see information about the load on the CPU, broken down per process, at 5 minutes, 1 minute, and 5 seconds prior to the log time. Information is updated automatically every 5 seconds to provide real-time statistics, and a refresh button in the pane allows a manual data refresh at any time.</p> <p>We introduced the following command: show process cpu-usage sorted.</p>

Table 1-7 New Features for ASA Version 8.4(1) (continued)

Feature	Description
General Features	
Password Encryption Visibility	You can show password encryption in a security context. We modified the following command: show password encryption .

Firewall Functional Overview

Firewalls protect inside networks from unauthorized access by users on an outside network. A firewall can also protect inside networks from each other, for example, by keeping a human resources network separate from a user network. If you have network resources that need to be available to an outside user, such as a web or FTP server, you can place these resources on a separate network behind the firewall, called a *demilitarized zone* (DMZ). The firewall allows limited access to the DMZ, but because the DMZ only includes the public servers, an attack there only affects the servers and does not affect the other inside networks. You can also control when inside users access outside networks (for example, access to the Internet), by allowing only certain addresses out, by requiring authentication or authorization, or by coordinating with an external URL filtering server.

When discussing networks connected to a firewall, the *outside* network is in front of the firewall, the *inside* network is protected and behind the firewall, and a *DMZ*, while behind the firewall, allows limited access to outside users. Because the ASA lets you configure many interfaces with varied security policies, including many inside interfaces, many DMZs, and even many outside interfaces if desired, these terms are used in a general sense only.

This section includes the following topics:

- [Security Policy Overview, page 1-24](#)
- [Firewall Mode Overview, page 1-27](#)
- [Stateful Inspection Overview, page 1-27](#)

Security Policy Overview

A security policy determines which traffic is allowed to pass through the firewall to access another network. By default, the ASA allows traffic to flow freely from an inside network (higher security level) to an outside network (lower security level). You can apply actions to traffic to customize the security policy. This section includes the following topics:

- [Permitting or Denying Traffic with Access Lists, page 1-25](#)
- [Applying NAT, page 1-25](#)
- [Protecting from IP Fragments, page 1-25](#)
- [Using AAA for Through Traffic, page 1-25](#)
- [Applying HTTP, HTTPS, or FTP Filtering, page 1-25](#)
- [Applying Application Inspection, page 1-25](#)
- [Sending Traffic to the IPS Module, page 1-26](#)

- [Sending Traffic to the Content Security and Control Module, page 1-26](#)
- [Applying QoS Policies, page 1-26](#)
- [Applying Connection Limits and TCP Normalization, page 1-26](#)
- [Enabling Threat Detection, page 1-26](#)
- [Enabling the Botnet Traffic Filter, page 1-27](#)
- [Configuring Cisco Unified Communications, page 1-27](#)

Permitting or Denying Traffic with Access Lists

You can apply an access list to limit traffic from inside to outside, or allow traffic from outside to inside. For transparent firewall mode, you can also apply an EtherType access list to allow non-IP traffic.

Applying NAT

Some of the benefits of NAT include the following:

- You can use private addresses on your inside networks. Private addresses are not routable on the Internet.
- NAT hides the local addresses from other networks, so attackers cannot learn the real address of a host.
- NAT can resolve IP routing problems by supporting overlapping IP addresses.

Protecting from IP Fragments

The ASA provides IP fragment protection. This feature performs full reassembly of all ICMP error messages and virtual reassembly of the remaining IP fragments that are routed through the ASA. Fragments that fail the security check are dropped and logged. Virtual reassembly cannot be disabled.

Using AAA for Through Traffic

You can require authentication and/or authorization for certain types of traffic, for example, for HTTP. The ASA also sends accounting information to a RADIUS or TACACS+ server.

Applying HTTP, HTTPS, or FTP Filtering

Although you can use access lists to prevent outbound access to specific websites or FTP servers, configuring and managing web usage this way is not practical because of the size and dynamic nature of the Internet. We recommend that you use the ASA in conjunction with a separate server running one of the following Internet filtering products:

- Websense Enterprise
- Secure Computing SmartFilter

Applying Application Inspection

Inspection engines are required for services that embed IP addressing information in the user data packet or that open secondary channels on dynamically assigned ports. These protocols require the ASA to perform a deep packet inspection.

Sending Traffic to the IPS Module

If your model supports the IPS module for intrusion prevention, then you can send traffic to the module for inspection. The IPS module monitors and performs real-time analysis of network traffic by looking for anomalies and misuse based on an extensive, embedded signature library. When the system detects unauthorized activity, it can terminate the specific connection, permanently block the attacking host, log the incident, and send an alert to the device manager. Other legitimate connections continue to operate independently without interruption. For more information, see the documentation for your IPS module.

Sending Traffic to the Content Security and Control Module

If your model supports it, the CSC SSM provides protection against viruses, spyware, spam, and other unwanted traffic. It accomplishes this by scanning the FTP, HTTP, POP3, and SMTP traffic that you configure the ASA to send to it.

Applying QoS Policies

Some network traffic, such as voice and streaming video, cannot tolerate long latency times. QoS is a network feature that lets you give priority to these types of traffic. QoS refers to the capability of a network to provide better service to selected network traffic.

Applying Connection Limits and TCP Normalization

You can limit TCP and UDP connections and embryonic connections. Limiting the number of connections and embryonic connections protects you from a DoS attack. The ASA uses the embryonic limit to trigger TCP Intercept, which protects inside systems from a DoS attack perpetrated by flooding an interface with TCP SYN packets. An embryonic connection is a connection request that has not finished the necessary handshake between source and destination.

TCP normalization is a feature consisting of advanced TCP connection settings designed to drop packets that do not appear normal.

Enabling Threat Detection

You can configure scanning threat detection and basic threat detection, and also how to use statistics to analyze threats.

Basic threat detection detects activity that might be related to an attack, such as a DoS attack, and automatically sends a system log message.

A typical scanning attack consists of a host that tests the accessibility of every IP address in a subnet (by scanning through many hosts in the subnet or sweeping through many ports in a host or subnet). The scanning threat detection feature determines when a host is performing a scan. Unlike IPS scan detection that is based on traffic signatures, the ASA scanning threat detection feature maintains an extensive database that contains host statistics that can be analyzed for scanning activity.

The host database tracks suspicious activity such as connections with no return activity, access of closed service ports, vulnerable TCP behaviors such as non-random IPID, and many more behaviors.

You can configure the ASA to send system log messages about an attacker or you can automatically shun the host.

Enabling the Botnet Traffic Filter

Malware is malicious software that is installed on an unknowing host. Malware that attempts network activity such as sending private data (passwords, credit card numbers, key strokes, or proprietary data) can be detected by the Botnet Traffic Filter when the malware starts a connection to a known bad IP address. The Botnet Traffic Filter checks incoming and outgoing connections against a dynamic database of known bad domain names and IP addresses (the blacklist), and then logs any suspicious activity. When you see syslog messages about the malware activity, you can take steps to isolate and disinfect the host.

Configuring Cisco Unified Communications

The Cisco ASA 5500 series is a strategic platform to provide proxy functions for unified communications deployments. The purpose of a proxy is to terminate and reoriginate connections between a client and server. The proxy delivers a range of security functions such as traffic inspection, protocol conformance, and policy control to ensure security for the internal network. An increasingly popular function of a proxy is to terminate encrypted connections in order to apply security policies while maintaining confidentiality of connections.

Firewall Mode Overview

The ASA runs in two different firewall modes:

- Routed
- Transparent

In routed mode, the ASA is considered to be a router hop in the network.

In transparent mode, the ASA acts like a “bump in the wire,” or a “stealth firewall,” and is not considered a router hop. The ASA connects to the same network on its inside and outside interfaces.

You might use a transparent firewall to simplify your network configuration. Transparent mode is also useful if you want the firewall to be invisible to attackers. You can also use a transparent firewall for traffic that would otherwise be blocked in routed mode. For example, a transparent firewall can allow multicast streams using an EtherType access list.

Stateful Inspection Overview

All traffic that goes through the ASA is inspected using the Adaptive Security Algorithm and either allowed through or dropped. A simple packet filter can check for the correct source address, destination address, and ports, but it does not check that the packet sequence or flags are correct. A filter also checks every packet against the filter, which can be a slow process.

**Note**

The TCP state bypass feature allows you to customize the packet flow. See the [“TCP State Bypass” section on page 53-3](#).

A stateful firewall like the ASA, however, takes into consideration the state of a packet:

- Is this a new connection?

If it is a new connection, the ASA has to check the packet against access lists and perform other tasks to determine if the packet is allowed or denied. To perform this check, the first packet of the session goes through the “session management path,” and depending on the type of traffic, it might also pass through the “control plane path.”

The session management path is responsible for the following tasks:

- Performing the access list checks
- Performing route lookups
- Allocating NAT translations (xlates)
- Establishing sessions in the “fast path”

Some packets that require Layer 7 inspection (the packet payload must be inspected or altered) are passed on to the control plane path. Layer 7 inspection engines are required for protocols that have two or more channels: a data channel, which uses well-known port numbers, and a control channel, which uses different port numbers for each session. These protocols include FTP, H.323, and SNMP.

- Is this an established connection?

If the connection is already established, the ASA does not need to re-check packets; most matching packets can go through the “fast” path in both directions. The fast path is responsible for the following tasks:

- IP checksum verification
- Session lookup
- TCP sequence number check
- NAT translations based on existing sessions
- Layer 3 and Layer 4 header adjustments

For UDP or other connectionless protocols, the ASA creates connection state information so that it can also use the fast path.

Data packets for protocols that require Layer 7 inspection can also go through the fast path.

Some established session packets must continue to go through the session management path or the control plane path. Packets that go through the session management path include HTTP packets that require inspection or content filtering. Packets that go through the control plane path include the control packets for protocols that require Layer 7 inspection.

VPN Functional Overview

A VPN is a secure connection across a TCP/IP network (such as the Internet) that appears as a private connection. This secure connection is called a tunnel. The ASA uses tunneling protocols to negotiate security parameters, create and manage tunnels, encapsulate packets, transmit or receive them through the tunnel, and unencapsulate them. The ASA functions as a bidirectional tunnel endpoint: it can receive plain packets, encapsulate them, and send them to the other end of the tunnel where they are unencapsulated and sent to their final destination. It can also receive encapsulated packets, unencapsulate them, and send them to their final destination. The ASA invokes various standard protocols to accomplish these functions.

The ASA performs the following functions:

- Establishes tunnels
- Negotiates tunnel parameters

- Authenticates users
- Assigns user addresses
- Encrypts and decrypts data
- Manages security keys
- Manages data transfer across the tunnel
- Manages data transfer inbound and outbound as a tunnel endpoint or router

The ASA invokes various standard protocols to accomplish these functions.

Security Context Overview

You can partition a single ASA into multiple virtual devices, known as security contexts. Each context is an independent device, with its own security policy, interfaces, and administrators. Multiple contexts are similar to having multiple standalone devices. Many features are supported in multiple context mode, including routing tables, firewall features, IPS, and management. Some features are not supported, including VPN and dynamic routing protocols.

In multiple context mode, the ASA includes a configuration for each context that identifies the security policy, interfaces, and almost all the options you can configure on a standalone device. The system administrator adds and manages contexts by configuring them in the system configuration, which, like a single mode configuration, is the startup configuration. The system configuration identifies basic settings for the ASA. The system configuration does not include any network interfaces or network settings for itself; rather, when the system needs to access network resources (such as downloading the contexts from the server), it uses one of the contexts that is designated as the admin context.

The admin context is just like any other context, except that when a user logs into the admin context, then that user has system administrator rights and can access the system and all other contexts.



CHAPTER 2

Getting Started

This chapter describes how to get started with your ASA. This chapter includes the following sections:

- [Accessing the Appliance Command-Line Interface, page 2-1](#)
- [Configuring ASDM Access for Appliances, page 2-2](#)
- [Starting ASDM, page 2-6](#)
- [Factory Default Configurations, page 2-10](#)
- [Working with the Configuration, page 2-15](#)
- [Applying Configuration Changes to Connections, page 2-19](#)

Accessing the Appliance Command-Line Interface

For initial configuration, access the CLI directly from the console port. Later, you can configure remote access using Telnet or SSH according to [Chapter 37, “Configuring Management Access.”](#) If your system is already in multiple context mode, then accessing the console port places you in the system execution space. See [Chapter 5, “Configuring Multiple Context Mode,”](#) for more information about multiple context mode.

Detailed Steps

-
- Step 1** Connect a PC to the console port using the provided console cable, and connect to the console using a terminal emulator set for 9600 baud, 8 data bits, no parity, 1 stop bit, no flow control.
- See the hardware guide for your ASA for more information about the console cable.
- Step 2** Press the **Enter** key to see the following prompt:
- ```
hostname>
```
- This prompt indicates that you are in user EXEC mode. Only basic commands are available from user EXEC mode.
- Step 3** To access privileged EXEC mode, enter the following command:
- ```
hostname> enable
```
- The following prompt appears:
- ```
Password:
```

All non-configuration commands are available in privileged EXEC mode. You can also enter configuration mode from privileged EXEC mode.

**Step 4** Enter the enable password at the prompt.

By default, the password is blank, and you can press the **Enter** key to continue. See the “[Configuring the Hostname, Domain Name, and Passwords](#)” section on page 10-1 to change the enable password.

The prompt changes to the following:

```
hostname#
```

To exit privileged mode, enter the **disable**, **exit**, or **quit** command.

**Step 5** To access global configuration mode, enter the following command:

```
hostname# configure terminal
```

The prompt changes to the following:

```
hostname(config)#
```

You can begin to configure the ASA from global configuration mode. To exit global configuration mode, enter the **exit**, **quit**, or **end** command.

## Configuring ASDM Access for Appliances

ASDM access requires some minimal configuration so you can communicate over the network with a management interface. This section includes the following topics:

- [Accessing ASDM Using the Factory Default Configuration, page 2-2](#)
- [Accessing ASDM Using a Non-Default Configuration \(ASA 5505\), page 2-3](#)
- [Accessing ASDM Using a Non-Default Configuration \(ASA 5510 and Higher\), page 2-5](#)

### Accessing ASDM Using the Factory Default Configuration

With a factory default configuration (see the “[Factory Default Configurations](#)” section on page 2-10), ASDM connectivity is preconfigured with default network settings. Connect to ASDM using the following interface and network settings:

- The management interface depends on your model:
  - ASA 5505—The switch port to which you connect to ASDM can be any port, except for Ethernet 0/0.
  - ASA 5510 and higher—The interface to which you connect to ASDM is Management 0/0.
- The default management address is 192.168.1.1.
- The clients allowed to access ASDM must be on the 192.168.1.0/24 network. The default configuration enables DHCP so your management station can be assigned an IP address in this range. To allow other client IP addresses to access ASDM, see the “[Configuring ASA Access for ASDM, Telnet, or SSH](#)” section on page 37-1.

To launch ASDM, see the “[Starting ASDM](#)” section on page 2-6.

**Note**

To change to multiple context mode, see the [“Enabling or Disabling Multiple Context Mode”](#) section on page 5-15. After changing to multiple context mode, you can access ASDM from the admin context using the network settings above.

## Accessing ASDM Using a Non-Default Configuration (ASA 5505)

If you do not have a factory default configuration, or want to change to transparent firewall mode, perform the following steps. See also the sample configurations in the [“ASA 5505 Default Configuration”](#) section on page 2-11.

### Prerequisites

Access the CLI according to the [“Accessing the Appliance Command-Line Interface”](#) section on page 2-1.

### Detailed Steps

|        | Command                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           | Purpose                                                                                                                                                                      |
|--------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Step 1 | (Optional)<br><code>firewall transparent</code><br><br><b>Example:</b><br><code>hostname(config)# firewall transparent</code>                                                                                                                                                                                                                                                                                                                                                                                                                     | Enables transparent firewall mode. This command clears your configuration. See the <a href="#">“Configuring the Firewall Mode”</a> section on page 4-1 for more information. |
| Step 2 | Do one of the following to configure a management interface, depending on your mode:<br><br>Routed mode:<br><code>interface vlan number</code><br><code>  ip address ip_address [mask]</code><br><code>  nameif name</code><br><code>  security-level level</code><br><br><b>Example:</b><br><code>hostname(config)# interface vlan 1</code><br><code>hostname(config-if)# ip address</code><br><code>192.168.1.1 255.255.255.0</code><br><code>hostname(config-if)# nameif inside</code><br><code>hostname(config-if)# security-level 100</code> | Configures an interface in routed mode. The <b>security-level</b> is a number between 1 and 100, where 100 is the most secure.                                               |

| Command                                                                                                                                                                                                                                                                                                                                                                                                                                                        | Purpose                                                                                                                                                                                                                                                                                                                                                                                                       |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>Transparent mode:</p> <pre>interface bvi number   ip address ip_address [mask]  interface vlan number   bridge-group bvi_number   nameif name   security-level level</pre> <p><b>Example:</b></p> <pre>hostname(config)# interface bvi 1 hostname(config-if)# ip address 192.168.1.1 255.255.255.0  hostname(config)# interface vlan 1 hostname(config-if)# bridge-group 1 hostname(config-if)# nameif inside hostname(config-if)# security-level 100</pre> | <p>Configures a bridge virtual interface and assigns a management VLAN to the bridge group. The <b>security-level</b> is a number between 1 and 100, where 100 is the most secure.</p>                                                                                                                                                                                                                        |
| <p><b>Step 3</b></p> <pre>interface ethernet 0/n   switchport access vlan number   no shutdown</pre> <p><b>Example:</b></p> <pre>hostname(config)# interface ethernet 0/1 hostname(config-if)# switchport access vlan 1 hostname(config-if)# no shutdown</pre>                                                                                                                                                                                                 | <p>Enables the management switchport and assigns it to the management VLAN.</p>                                                                                                                                                                                                                                                                                                                               |
| <p><b>Step 4</b></p> <pre>dhcpd address ip_address-ip_address interface_name dhcpd enable interface_name</pre> <p><b>Example:</b></p> <pre>hostname(config)# dhcpd address 192.168.1.5-192.168.1.254 inside hostname(config)# dhcpd enable inside</pre>                                                                                                                                                                                                        | <p>Enables DHCP for the management host on the management interface network. Make sure you do not include the management address in the range.</p> <p><b>Note</b> By default, the IPS module, if installed, uses 192.168.1.2 for its internal management address, so be sure not to use this address in the DHCP range. You can later change the IPS module management address using the ASA if required.</p> |
| <p><b>Step 5</b></p> <pre>http server enable</pre> <p><b>Example:</b></p> <pre>hostname(config)# http server enable</pre>                                                                                                                                                                                                                                                                                                                                      | <p>Enables the HTTP server for ASDM.</p>                                                                                                                                                                                                                                                                                                                                                                      |
| <p><b>Step 6</b></p> <pre>http ip_address mask interface_name</pre> <p><b>Example:</b></p> <pre>hostname(config)# http 192.168.1.0 255.255.255.0 inside</pre>                                                                                                                                                                                                                                                                                                  | <p>Allows the management host to access ASDM.</p>                                                                                                                                                                                                                                                                                                                                                             |
| <p><b>Step 7</b></p> <pre>write memory</pre> <p><b>Example:</b></p> <pre>hostname(config)# write memory</pre>                                                                                                                                                                                                                                                                                                                                                  | <p>Saves the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                               |
| <p><b>Step 8</b></p> <p>To launch ASDM, see the <a href="#">“Starting ASDM” section on page 2-6</a>.</p>                                                                                                                                                                                                                                                                                                                                                       | <p>Launches ASDM.</p>                                                                                                                                                                                                                                                                                                                                                                                         |

## Examples

The following configuration converts the firewall mode to transparent mode, configures the VLAN 1 interface and assigns it to BVI 1, enables a switchport, and enables ASDM for a management host:

```

firewall transparent
interface bvi 1
 ip address 192.168.1.1 255.255.255.0
interface vlan 1
 bridge-group 1
 nameif inside
 security-level 100
interface ethernet 0/1
 switchport access vlan 1
 no shutdown
dhcpd address 192.168.1.5-192.168.1.254 inside
dhcpd enable inside
http server enable
http 192.168.1.0 255.255.255.0 inside

```

## Accessing ASDM Using a Non-Default Configuration (ASA 5510 and Higher)

If you do not have a factory default configuration, or want to change the firewall or context mode, perform the following steps.

### Prerequisites

Access the CLI according to the [“Accessing the Appliance Command-Line Interface”](#) section on page 2-1.

### Detailed Steps

|        | Command                                                                                                                                                                                                                                                                                                                                                                                                                             | Purpose                                                                                                                                                                      |
|--------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Step 1 | (Optional)<br><b>firewall transparent</b><br><br><b>Example:</b><br>hostname(config)# firewall transparent                                                                                                                                                                                                                                                                                                                          | Enables transparent firewall mode. This command clears your configuration. See the <a href="#">“Configuring the Firewall Mode”</a> section on page 4-1 for more information. |
| Step 2 | <b>interface management 0/0</b><br><b>ip address</b> <i>ip_address mask</i><br><b>nameif</b> <i>name</i><br><b>security-level</b> <i>number</i><br><b>no shutdown</b><br><br><b>Example:</b><br>hostname(config)# interface management 0/0<br>hostname(config-if)# ip address<br>192.168.1.1 255.255.255.0<br>hostname(config-if)# nameif management<br>hostname(config-if)# security-level 100<br>hostname(config-if)# no shutdown | Configures the Management 0/0 interface. The <b>security-level</b> is a number between 1 and 100, where 100 is the most secure.                                              |

|        | Command                                                                                                                                                                                                                                                        | Purpose                                                                                                                                                                                                                                                                  |
|--------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Step 3 | <pre> <b>dhcpd address</b> ip_address-ip_address interface_name <b>dhcpd enable</b> interface_name </pre> <p><b>Example:</b><br/> hostname(config)# dhcpd address<br/> 192.168.1.2-192.168.1.254 management<br/> hostname(config)# dhcpd enable management</p> | Enables DHCP for the management host on the management interface network. Make sure you do not include the Management 0/0 address in the range.                                                                                                                          |
| Step 4 | <pre> <b>http server enable</b> </pre> <p><b>Example:</b><br/> hostname(config)# http server enable</p>                                                                                                                                                        | Enables the HTTP server for ASDM.                                                                                                                                                                                                                                        |
| Step 5 | <pre> <b>http</b> ip_address mask interface_name </pre> <p><b>Example:</b><br/> hostname(config)# http 192.168.1.0<br/> 255.255.255.0 management</p>                                                                                                           | Allows the management host to access ASDM.                                                                                                                                                                                                                               |
| Step 6 | <pre> <b>write memory</b> </pre> <p><b>Example:</b><br/> hostname(config)# write memory</p>                                                                                                                                                                    | Saves the configuration.                                                                                                                                                                                                                                                 |
| Step 7 | <p>(Optional)</p> <pre> <b>mode multiple</b> </pre> <p><b>Example:</b><br/> hostname(config)# mode multiple</p>                                                                                                                                                | Sets the mode to multiple mode. When prompted, confirm that you want to convert the existing configuration to be the admin context. You are then prompted to reload the ASASM. See <a href="#">Chapter 5, “Configuring Multiple Context Mode,”</a> for more information. |
| Step 8 | To launch ASDM, see the <a href="#">“Starting ASDM” section on page 2-6.</a>                                                                                                                                                                                   | Launches ASDM.                                                                                                                                                                                                                                                           |

## Examples

The following configuration converts the firewall mode to transparent mode, configures the Management 0/0 interface, and enables ASDM for a management host:

```

firewall transparent
interface management 0/0
 ip address 192.168.1.1 255.255.255.0
 nameif management
 security-level 100
 no shutdown
dhcpd address 192.168.1.2-192.168.1.254 management
dhcpd enable management
http server enable
http 192.168.1.0 255.255.255.0 management

```

## Starting ASDM

You can start ASDM using two methods:

- **ASDM-IDM Launcher (Windows only)**—The Launcher is an application downloaded from the ASA using a web browser that you can use to connect to any ASA IP address. You do not need to re-download the launcher if you want to connect to other ASAs. The Launcher also lets you run a virtual ASDM in Demo mode using files downloaded locally.
- **Java Web Start**—For each ASA that you manage, you need to connect with a web browser and then save or launch the Java Web Start application. You can optionally save the application to your PC; however you need separate applications for each ASA IP address.

**Note**

Within ASDM, you can choose a different ASA IP address to manage; the difference between the Launcher and Java Web Start application functionality rests primarily in how you initially connect to the ASA and launch ASDM.

This section describes how to connect to ASDM initially, and then launch ASDM using the Launcher or the Java Web Start application. This section includes the following topics:

- [Connecting to ASDM for the First Time, page 2-7](#)
- [Starting ASDM from the ASDM-IDM Launcher, page 2-8](#)
- [Starting ASDM from the Java Web Start Application, page 2-8](#)
- [Using ASDM in Demo Mode, page 2-9](#)

**Note**

ASDM allows multiple PCs or workstations to each have one browser session open with the same ASA software. A single ASA can support up to five concurrent ASDM sessions in single, routed mode. Only one session per browser per PC or workstation is supported for a specified ASA. In multiple context mode, five concurrent ASDM sessions are supported per context, up to a maximum of 32 total connections for each ASA.

## Connecting to ASDM for the First Time

To connect to ASDM for the first time to download the ASDM-IDM Launcher or Java Web Start application, perform the following steps:

**Step 1** From a supported web browser on the ASA network, enter the following URL:

```
https://interface_ip_address/admin
```

Where *interface\_ip\_address* is the management IP address of the ASA. See the “[Configuring ASDM Access for Appliances](#)” section on page 2-2 for more information about management access.

See the ASDM release notes for your release for the requirements to run ASDM.

The ASDM launch page appears with the following buttons:

- **Install ASDM Launcher and Run ASDM** (Windows only)
- **Run ASDM**
- **Run Startup Wizard**

**Step 2** To download the Launcher:

- a. Click **Install ASDM Launcher and Run ASDM**.

- b. Enter the username and password, and click **OK**. For a factory default configuration, leave these fields empty. With no HTTPS authentication configured, you can gain access to ASDM with no username and the **enable** password, which is blank by default. With HTTPS authentication enabled, enter your username and associated password.
- c. Save the installer to your PC, and then start the installer. The ASDM-IDM Launcher opens automatically after installation is complete.
- d. See the “[Starting ASDM from the ASDM-IDM Launcher](#)” section on page 2-8 to use the Launcher to connect to ASDM.

**Step 3** To use the Java Web Start application:

- a. Click **Run ASDM** or **Run Startup Wizard**.
- b. Save the application to your PC when prompted. You can optionally open it instead of saving it.
- c. See the “[Starting ASDM from the Java Web Start Application](#)” section on page 2-8 to use the Java Web Start application to connect to ASDM.

## Starting ASDM from the ASDM-IDM Launcher

To start ASDM from the ASDM-IDM Launcher, perform the following steps.

### Prerequisites

Download the ASDM-IDM Launcher according to the “[Connecting to ASDM for the First Time](#)” section on page 2-7.

### Detailed Steps

**Step 1** Start the ASDM-IDM Launcher application.

**Step 2** Enter or choose the ASA IP address or hostname to which you want to connect. To clear the list of IP addresses, click the trash can icon next to the Device/IP Address/Name field.

**Step 3** Enter your username and your password, and then click **OK**.

For a factory default configuration, leave these fields empty. With no HTTPS authentication configured, you can gain access to ASDM with no username and the **enable** password, which is blank by default. With HTTPS authentication enabled, enter your username and associated password.

If there is a new version of ASDM on the ASA, the ASDM Launcher automatically downloads the new version and requests that you update the current version before starting ASDM.

The main ASDM window appears.

## Starting ASDM from the Java Web Start Application

To start ASDM from the Java Web Start application, perform the following steps.

## Prerequisites

Download the Java Web Start application according to the [“Connecting to ASDM for the First Time” section on page 2-7](#).

## Detailed Steps

- 
- Step 1** Start the Java Web Start application.
- Step 2** Accept any certificates according to the dialog boxes that appear. The Cisco ASDM-IDM Launcher appears.
- Step 3** Enter the username and password, and click **OK**. For a factory default configuration, leave these fields empty. With no HTTPS authentication configured, you can gain access to ASDM with no username and the **enable** password, which is blank by default. With HTTPS authentication enabled, enter your username and associated password.
- The main ASDM window appears.
- 

## Using ASDM in Demo Mode

The ASDM Demo Mode, a separately installed application, lets you run ASDM without having a live device available. In this mode, you can do the following:

- Perform configuration and selected monitoring tasks via ASDM as though you were interacting with a real device.
- Demonstrate ASDM or ASA features using the ASDM interface.
- Perform configuration and monitoring tasks with the CSC SSM.
- Obtain simulated monitoring and logging data, including real-time syslog messages. The data shown is randomly generated; however, the experience is identical to what you would see when you are connected to a real device.

This mode has been updated to support the following features:

- For global policies, an ASA in single, routed mode and intrusion prevention
- For object NAT, an ASA in single, routed mode and a firewall DMZ.
- For the Botnet Traffic Filter, an ASA in single, routed mode and security contexts.
- Site-to-Site VPN with IPv6 (Clientless SSL VPN and IPsec VPN)
- Promiscuous IDS (intrusion prevention)
- Unified Communication Wizard

This mode does not support the following:

- Saving changes made to the configuration that appear in the GUI.
- File or disk operations.
- Historical monitoring data.
- Non-administrative users.
- These features:
  - File menu:

Save Running Configuration to Flash

Save Running Configuration to TFTP Server

Save Running Configuration to Standby Unit

Save Internal Log Buffer to Flash

Clear Internal Log Buffer

– Tools menu:

Command Line Interface

Ping

File Management

Update Software

File Transfer

Upload Image from Local PC

System Reload

– Toolbar/Status bar > Save

– Configuration > Interface > Edit Interface > Renew DHCP Lease

– Configuring a standby device after failover

• Operations that cause a rereading of the configuration, in which the GUI reverts to the original configuration:

– Switching contexts

– Making changes in the Interface pane

– NAT pane changes

– Clock pane changes

To run ASDM in Demo Mode, perform the following steps:

---

**Step 1** Download the ASDM Demo Mode installer, `asdm-demo-version.msi`, from the following location:  
<http://www.cisco.com/cisco/web/download/index.html>.

**Step 2** Double-click the installer to install the software.

**Step 3** Double-click the Cisco ASDM Launcher shortcut on your desktop, or open it from the **Start** menu.

**Step 4** Check the **Run in Demo Mode** check box.

The Demo Mode window appears.

---

## Factory Default Configurations

The factory default configuration is the configuration applied by Cisco to new ASAs.

- ASA 5505—The factory default configuration configures interfaces and NAT so that the ASA is ready to use in your network immediately.
- ASA 5510 and higher—The factory default configuration configures an interface for management so you can connect to it using ASDM, with which you can then complete your configuration.

The factory default configuration is available only for routed firewall mode and single context mode. See [Chapter 5, “Configuring Multiple Context Mode,”](#) for more information about multiple context mode. See [Chapter 4, “Configuring the Transparent or Routed Firewall,”](#) for more information about routed and transparent firewall mode. For the ASA 5505, a sample transparent mode configuration is provided in this section.

**Note**

In addition to the image files and the (hidden) default configuration, the following folders and files are standard in flash memory: `log/`, `crypto_archive/`, and `coredumpinfo/coredump.cfg`. The date on these files may not match the date of the image files in flash memory. These files aid in potential troubleshooting; they do not indicate that a failure has occurred.

This section includes the following topics:

- [Restoring the Factory Default Configuration, page 2-11](#)
- [ASA 5505 Default Configuration, page 2-11](#)
- [ASA 5510 and Higher Default Configuration, page 2-15](#)

## Restoring the Factory Default Configuration

This section describes how to restore the factory default configuration.

### Limitations

This feature is available only in routed firewall mode; transparent mode does not support IP addresses for interfaces. In addition, this feature is available only in single context mode; an ASA with a cleared configuration does not have any defined contexts to configure automatically using this feature.

### Detailed Steps

### What to Do Next

See the [“Working with the Configuration”](#) section on [page 2-15](#) to start configuring the ASA.

## ASA 5505 Default Configuration

The default configuration is available for routed mode only. This section describes the default configuration and also provides a sample transparent mode configuration that you can copy and paste as a starting point. This section includes the following topics:

- [ASA 5505 Routed Mode Default Configuration, page 2-11](#)
- [ASA 5505 Transparent Mode Sample Configuration, page 2-13](#)

### ASA 5505 Routed Mode Default Configuration


The default factory configuration for the ASA 5505 configures the following:

- Interfaces—Inside (VLAN 1) and outside (VLAN 2).
- Switchports enabled and assigned—Ethernet 0/1 through 0/7 switch ports assigned to inside. Ethernet 0/0 assigned to outside.

- IP addresses— Outside address from DHCP; inside address set manually to 192.168.1.1/24.
- Network Address Translation (NAT)—All inside IP addresses are translated when accessing the outside using interface PAT.
- Traffic flow—IPv4 and IPv6 traffic allowed from inside to outside (this behavior is implicit on the ASA). Outside users are prevented from accessing the inside.
- DHCP server—Enabled for inside hosts, so a PC connecting to the inside interface receives an address between 192.168.1.5 and 192.168.1.254. DNS, WINS, and domain information obtained from the DHCP client on the outside interface is passed to the DHCP clients on the inside interface.
- Default route—Derived from DHCP.
- ASDM access—Inside hosts allowed.

Figure 2-1 shows the traffic flow for an ASA 5505 in routed mode.

**Figure 2-1 ASA 5505 Routed Mode**

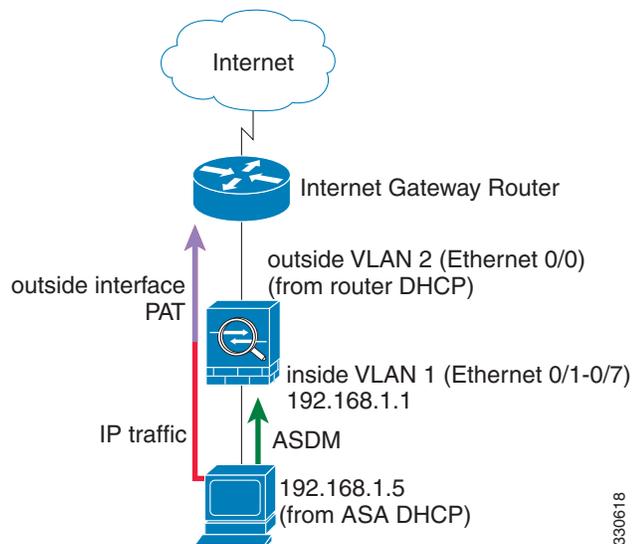

The configuration consists of the following commands:

```
interface Ethernet 0/0
 switchport access vlan 2
 no shutdown
interface Ethernet 0/1
 switchport access vlan 1
 no shutdown
interface Ethernet 0/2
 switchport access vlan 1
 no shutdown
interface Ethernet 0/3
 switchport access vlan 1
 no shutdown
interface Ethernet 0/4
 switchport access vlan 1
 no shutdown
interface Ethernet 0/5
 switchport access vlan 1
 no shutdown
interface Ethernet 0/6
 switchport access vlan 1
```

```

no shutdown
interface Ethernet 0/7
 switchport access vlan 1
 no shutdown
interface vlan2
 nameif outside
 no shutdown
 ip address dhcp setroute
interface vlan1
 nameif inside
 ip address 192.168.1.1 255.255.255.0
 security-level 100
 no shutdown
object network obj_any
 subnet 0 0
 nat (inside,outside) dynamic interface
http server enable
http 192.168.1.0 255.255.255.0 inside
dhcpd address 192.168.1.5-192.168.1.254 inside
dhcpd auto_config outside
dhcpd enable inside
logging asdm informational

```

**Note**

For testing purposes, you can allow ping from inside to outside by enabling ICMP inspection. Add the following commands to the default configuration:

```

policy-map global_policy
 class inspection_default
 inspect icmp


```

## ASA 5505 Transparent Mode Sample Configuration

When you change the mode to transparent mode, the configuration is erased. You can copy and paste the following sample configuration at the CLI to get started. This configuration uses the default configuration as a starting point. Note the following areas you may need to modify:

- IP addresses—The IP addresses configured should be changed to match the network to which you are connecting.
- Static routes—For some kinds of traffic, static routes are required. See the [“MAC Address vs. Route Lookups”](#) section on page 4-4.
- [Figure 2-2](#) shows the traffic flow for an ASA 5505 in transparent mode.

Figure 2-2 ASA 5505 Transparent Mode

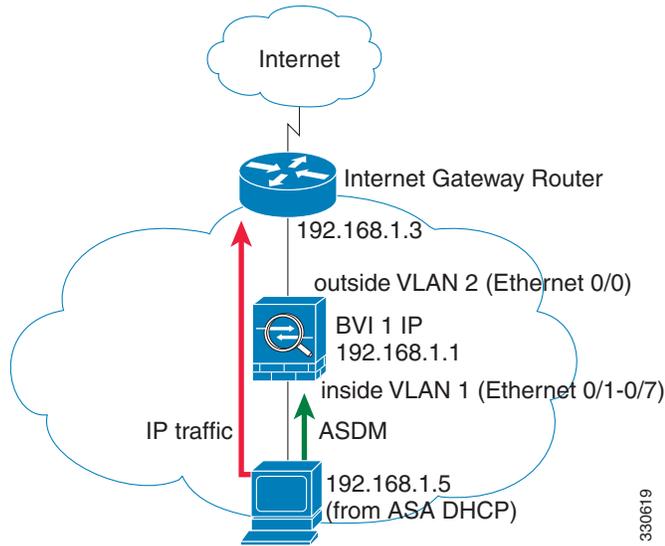

330619

```

firewall transparent
interface Ethernet 0/0
 switchport access vlan 2
 no shutdown
interface Ethernet 0/1
 switchport access vlan 1
 no shutdown
interface Ethernet 0/2
 switchport access vlan 1
 no shutdown
interface Ethernet 0/3
 switchport access vlan 1
 no shutdown
interface Ethernet 0/4
 switchport access vlan 1
 no shutdown
interface Ethernet 0/5
 switchport access vlan 1
 no shutdown
interface Ethernet 0/6
 switchport access vlan 1
 no shutdown
interface Ethernet 0/7
 switchport access vlan 1
 no shutdown
interface bvi 1
 ip address 192.168.1.1 255.255.255.0
interface vlan2
 nameif outside
 security-level 0
 bridge-group 1
 no shutdown
interface vlan1
 nameif inside
 security-level 100
 bridge-group 1
 no shutdown
http server enable
http 192.168.1.0 255.255.255.0 inside
dhcpd address 192.168.1.5-192.168.1.254 inside

```

```
dhcpd enable inside
```

**Note**

For testing purposes, you can allow ping from inside to outside by enabling ICMP inspection. Add the following commands to the sample configuration:

```
policy-map global_policy
 class inspection_default
 inspect icmp
```

## ASA 5510 and Higher Default Configuration

The default factory configuration for the ASA 5510 and higher configures the following:

- Management interface—Management 0/0 (management).
- IP address—The management address is 192.168.1.1/24.
- DHCP server—Enabled for management hosts, so a PC connecting to the management interface receives an address between 192.168.1.2 and 192.168.1.254.
- ASDM access—Management hosts allowed.

The configuration consists of the following commands:

```
interface management 0/0
 ip address 192.168.1.1 255.255.255.0
 nameif management
 security-level 100
 no shutdown
asdm logging informational 100
asdm history enable
http server enable
http 192.168.1.0 255.255.255.0 management
dhcpd address 192.168.1.2-192.168.1.254 management
dhcpd lease 3600
dhcpd ping_timeout 750
dhcpd enable management
```

## Working with the Configuration

This section describes how to work with the configuration. The ASA loads the configuration from a text file, called the startup configuration. This file resides by default as a hidden file in internal flash memory. You can, however, specify a different path for the startup configuration. (For more information, see [Chapter 81, “Managing Software and Configurations.”](#))

When you enter a command, the change is made only to the running configuration in memory. You must manually save the running configuration to the startup configuration for your changes to remain after a reboot.

The information in this section applies to both single and multiple security contexts, except where noted. Additional information about contexts is in [Chapter 5, “Configuring Multiple Context Mode.”](#)

This section includes the following topics:

- [Saving Configuration Changes, page 2-16](#)
- [Copying the Startup Configuration to the Running Configuration, page 2-17](#)

- [Viewing the Configuration, page 2-18](#)
- [Clearing and Removing Configuration Settings, page 2-18](#)
- [Creating Text Configuration Files Offline, page 2-19](#)

## Saving Configuration Changes

This section describes how to save your configuration and includes the following topics:

- [Saving Configuration Changes in Single Context Mode, page 2-16](#)
- [Saving Configuration Changes in Multiple Context Mode, page 2-16](#)

### Saving Configuration Changes in Single Context Mode

To save the running configuration to the startup configuration, enter the following command:

| Command                                                | Purpose                                                                                                                         |
|--------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------|
| <code>write memory</code>                              | Saves the running configuration to the startup configuration.                                                                   |
| <b>Example:</b><br><code>hostname# write memory</code> | <b>Note</b> The <code>copy running-config startup-config</code> command is equivalent to the <code>write memory</code> command. |

### Saving Configuration Changes in Multiple Context Mode

You can save each context (and system) configuration separately, or you can save all context configurations at the same time. This section includes the following topics:

- [Saving Each Context and System Separately, page 2-16](#)
- [Saving All Context Configurations at the Same Time, page 2-17](#)

#### Saving Each Context and System Separately

To save the system or context configuration, enter the following command within the system or context:

| Command                                                | Purpose                                                                                                                                                                                                                                                                                                                                                                                                                      |
|--------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>write memory</code>                              | Saves the running configuration to the startup configuration.                                                                                                                                                                                                                                                                                                                                                                |
| <b>Example:</b><br><code>hostname# write memory</code> | For multiple context mode, context startup configurations can reside on external servers. In this case, the ASA saves the configuration back to the server you identified in the context URL, except for an HTTP or HTTPS URL, which do not let you save the configuration to the server.<br><b>Note</b> The <code>copy running-config startup-config</code> command is equivalent to the <code>write memory</code> command. |

## Saving All Context Configurations at the Same Time

To save all context configurations at the same time, as well as the system configuration, enter the following command in the system execution space:

| Command                                                                                                   | Purpose                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|-----------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <pre>write memory all [/noconfirm]</pre> <p><b>Example:</b><br/>hostname# write memory all /noconfirm</p> | <p>Saves the running configuration to the startup configuration for all contexts and the system configuration.</p> <p>If you do not enter the <b>/noconfirm</b> keyword, you see the following prompt:<br/>Are you sure [Y/N]:</p> <p>After you enter <b>Y</b>, the ASA saves the system configuration and each context. Context startup configurations can reside on external servers. In this case, the ASA saves the configuration back to the server you identified in the context URL, except for an HTTP or HTTPS URL, which do not let you save the configuration to the server.</p> |

After the ASA saves each context, the following message appears:

```
'Saving context 'b' ... (1/3 contexts saved) '
```

Sometimes, a context is not saved because of an error. See the following information for errors:

- For contexts that are not saved because of low memory, the following message appears:  
The context 'context a' could not be saved due to Unavailability of resources
- For contexts that are not saved because the remote destination is unreachable, the following message appears:  
The context 'context a' could not be saved due to non-reachability of destination
- For contexts that are not saved because the context is locked, the following message appears:  
Unable to save the configuration for the following contexts as these contexts are locked.  
context 'a' , context 'x' , context 'z' .  
  
A context is only locked if another user is already saving the configuration or in the process of deleting the context.
- For contexts that are not saved because the startup configuration is read-only (for example, on an HTTP server), the following message report is printed at the end of all other messages:  
Unable to save the configuration for the following contexts as these contexts have read-only config-urls:  
context 'a' , context 'b' , context 'c' .
- For contexts that are not saved because of bad sectors in the flash memory, the following message appears:  
The context 'context a' could not be saved due to Unknown errors

## Copying the Startup Configuration to the Running Configuration

Copy a new startup configuration to the running configuration using one of the following options.

| Command                                                                             | Purpose                                                                                                                                                                                                                                                                                                                                                                                               |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>copy startup-config running-config</code>                                     | Merges the startup configuration with the running configuration. A merge adds any new commands from the new configuration to the running configuration. If the configurations are the same, no changes occur. If commands conflict or if commands affect the running of the context, then the effect of the merge depends on the command. You might get errors, or you might have unexpected results. |
| <code>reload</code>                                                                 | Reloads the ASA, which loads the startup configuration and discards the running configuration.                                                                                                                                                                                                                                                                                                        |
| <code>clear configure all</code><br><code>copy startup-config running-config</code> | Loads the startup configuration and discards the running configuration without requiring a reload.                                                                                                                                                                                                                                                                                                    |

## Viewing the Configuration

The following commands let you view the running and startup configurations.

| Command                                         | Purpose                                                |
|-------------------------------------------------|--------------------------------------------------------|
| <code>show running-config</code>                | Views the running configuration.                       |
| <code>show running-config <i>command</i></code> | Views the running configuration of a specific command. |
| <code>show startup-config</code>                | Views the startup configuration.                       |

## Clearing and Removing Configuration Settings

To erase settings, enter one of the following commands.

| Command                                                                                                          | Purpose                                                                                                                                                                                                                                                                                                                                          |
|------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>clear configure <i>configurationcommand</i></code><br><code>[<i>level2configurationcommand</i>]</code>     | Clears all the configuration for a specified command. If you only want to clear the configuration for a specific version of the command, you can enter a value for <i>level2configurationcommand</i> .                                                                                                                                           |
| <b>Example:</b><br><code>hostname(config)# clear configure aaa</code>                                            | For example, to clear the configuration for all <b>aaa</b> commands, enter the following command:<br><br><code>hostname(config)# clear configure aaa</code><br><br>To clear the configuration for only <b>aaa authentication</b> commands, enter the following command:<br><br><code>hostname(config)# clear configure aaa authentication</code> |
| <code>no <i>configurationcommand</i></code><br><code>[<i>level2configurationcommand</i>] <i>qualifier</i></code> | Disables the specific parameters or options of a command. In this case, you use the <b>no</b> command to remove the specific configuration identified by <i>qualifier</i> .                                                                                                                                                                      |
| <b>Example:</b><br><code>hostname(config)# no nat (inside) 1</code>                                              | For example, to remove a specific <b>nat</b> command, enter enough of the command to identify it uniquely as follows:<br><br><code>hostname(config)# no nat (inside) 1</code>                                                                                                                                                                    |

| Command                                                                                    | Purpose                                                                                                                                                                                                                                                                                               |
|--------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>write erase</b><br><br><b>Example:</b><br>hostname(config)# write erase                 | Erases the startup configuration.                                                                                                                                                                                                                                                                     |
| <b>clear configure all</b><br><br><b>Example:</b><br>hostname(config)# clear configure all | Erases the running configuration.<br><br><b>Note</b> In multiple context mode, if you enter <b>clear configure all</b> from the system configuration, you also remove all contexts and stop them from running. The context configuration files are not erased, and remain in their original location. |

## Creating Text Configuration Files Offline

This guide describes how to use the CLI to configure the ASA; when you save commands, the changes are written to a text file. Instead of using the CLI, however, you can edit a text file directly on your PC and paste a configuration at the configuration mode command-line prompt in its entirety, or line by line. Alternatively, you can download a text file to the ASA internal flash memory. See [Chapter 81, “Managing Software and Configurations,”](#) for information on downloading the configuration file to the ASA.

In most cases, commands described in this guide are preceded by a CLI prompt. The prompt in the following example is “hostname(config)#”:

```
hostname(config)# context a
```

In the text configuration file you are not prompted to enter commands, so the prompt is omitted as follows:

```
context a
```

For additional information about formatting the file, see [Appendix A, “Using the Command-Line Interface.”](#)

## Applying Configuration Changes to Connections

When you make security policy changes to the configuration, all *new* connections use the new security policy. Existing connections continue to use the policy that was configured at the time of the connection establishment. To ensure that all connections use the new policy, you need to disconnect the current connections so they can reconnect using the new policy. To disconnect connections, enter one of the following commands:

| Command                                                                                                                                                                                                                                                                                                                          | Purpose                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <pre>clear local-host [<i>ip_address</i>] [all]</pre> <p><b>Example:</b><br/>hostname(config)# clear local-host all</p>                                                                                                                                                                                                          | <p>This command reinitializes per-client run-time states such as connection limits and embryonic limits. As a result, this command removes any connection that uses those limits. See the <b>show local-host all</b> command to view all current connections per host.</p> <p>With no arguments, this command clears all affected through-the-box connections. To also clear to-the-box connections (including your current management session), use the <b>all</b> keyword. To clear connections to and from a particular IP address, use the <i>ip_address</i> argument.</p> |
| <pre>clear conn [all] [protocol {tcp   udp}] [address <i>src_ip</i>[-<i>src_ip</i>] [netmask <i>mask</i>]] [port <i>src_port</i>[-<i>src_port</i>]] [address <i>dest_ip</i>[-<i>dest_ip</i>] [netmask <i>mask</i>]] [port <i>dest_port</i>[-<i>dest_port</i>]]</pre> <p><b>Example:</b><br/>hostname(config)# clear conn all</p> | <p>This command terminates connections in any state. See the <b>show conn</b> command to view all current connections.</p> <p>With no arguments, this command clears all through-the-box connections. To also clear to-the-box connections (including your current management session), use the <b>all</b> keyword. To clear specific connections based on the source IP address, destination IP address, port, and/or protocol, you can specify the desired options.</p>                                                                                                      |
| <pre>clear xlate [<i>arguments</i>]</pre> <p><b>Example:</b><br/>hostname(config)# clear xlate</p>                                                                                                                                                                                                                               | <p>This command clears dynamic NAT sessions; static sessions are not affected. As a result, it removes any connections using those NAT sessions.</p> <p>With no arguments, this command clears all NAT sessions. See the command reference for more information about the arguments available.</p>                                                                                                                                                                                                                                                                             |



## CHAPTER 3

# Managing Feature Licenses

---

A license specifies the options that are enabled on a given ASA. This document describes how to obtain a license activation key and how to activate it. It also describes the available licenses for each model.



### Note

This chapter describes licensing for Version 8.4 and 8.6; for other versions, see the licensing documentation that applies to your version:

[http://www.cisco.com/en/US/products/ps6120/products\\_licensing\\_information\\_listing.html](http://www.cisco.com/en/US/products/ps6120/products_licensing_information_listing.html)

---

This chapter includes the following sections:

- [Supported Feature Licenses Per Model, page 3-1](#)
- [Information About Feature Licenses, page 3-20](#)
- [Guidelines and Limitations, page 3-31](#)
- [Configuring Licenses, page 3-32](#)
- [Monitoring Licenses, page 3-38](#)
- [Feature History for Licensing, page 3-46](#)

## Supported Feature Licenses Per Model

This section describes the licenses available for each model as well as important notes about licenses. This section includes the following topics:

- [Licenses Per Model, page 3-1](#)
- [License Notes, page 3-16](#)
- [VPN License and Feature Compatibility, page 3-20](#)

## Licenses Per Model

This section lists the feature licenses available for each model:

- [ASA 5505, page 3-2](#)
- [ASA 5510, page 3-3](#)
- [ASA 5520, page 3-4](#)

- [ASA 5540, page 3-5](#)
- [ASA 5550, page 3-6](#)
- [ASA 5580, page 3-7](#)
- [ASA 5512-X, page 3-8](#)
- [ASA 5515-X, page 3-8](#)
- [ASA 5525-X, page 3-9](#)
- [ASA 5545-X, page 3-10](#)
- [ASA 5555-X, page 3-11](#)
- [ASA 5585-X with SSP-10, page 3-12](#)
- [ASA 5585-X with SSP-20, page 3-13](#)
- [ASA 5585-X with SSP-40 and -60, page 3-14](#)

Items that are in italics are separate, optional licenses with which that you can replace the Base or Security Plus license. You can mix and match licenses, for example, the 24 Unified Communications license plus the Strong Encryption license; or the 500 AnyConnect Premium license plus the GTP/GPRS license; or all four licenses together. (See Table 4-1.)

For detailed information about licenses, see the “[License Notes](#)” section on page 3-16.

### ASA 5505

**Table 3-1 ASA 5505 License Features**

| Licenses                                 | Description (Base License in Plain Text) |                                                   |  |    | Description (Security Plus Lic. in Plain Text) |                                                  |                                                   |  |    |    |
|------------------------------------------|------------------------------------------|---------------------------------------------------|--|----|------------------------------------------------|--------------------------------------------------|---------------------------------------------------|--|----|----|
| <b>Firewall Licenses</b>                 |                                          |                                                   |  |    |                                                |                                                  |                                                   |  |    |    |
| Botnet Traffic Filter                    | Disabled                                 | <i>Opt. Time-based lic: Available</i>             |  |    | Disabled                                       | <i>Opt. Time-based lic: Available</i>            |                                                   |  |    |    |
| Firewall Conns, Concurrent               | 10,000                                   |                                                   |  |    | 25,000                                         |                                                  |                                                   |  |    |    |
| GTP/GPRS                                 | No support                               |                                                   |  |    | No support                                     |                                                  |                                                   |  |    |    |
| Intercompany Media Eng.                  | Disabled                                 | <i>Optional license: Available</i>                |  |    | Disabled                                       | <i>Optional license: Available</i>               |                                                   |  |    |    |
| UC Phone Proxy Sessions                  | 2                                        | <i>Optional license: 24</i>                       |  |    | 2                                              | <i>Optional license: 24</i>                      |                                                   |  |    |    |
| <b>VPN Licenses</b>                      |                                          |                                                   |  |    |                                                |                                                  |                                                   |  |    |    |
| Adv. Endpoint Assessment                 | Disabled                                 | <i>Optional license: Available</i>                |  |    | Disabled                                       | <i>Optional license: Available</i>               |                                                   |  |    |    |
| AnyConnect for Cisco VPN Phone           | Disabled                                 | <i>Optional license: Available</i>                |  |    | Disabled                                       | <i>Optional license: Available</i>               |                                                   |  |    |    |
| AnyConnect Essentials                    | Disabled                                 | <i>Optional license: Available (25 sessions)</i>  |  |    | Disabled                                       | <i>Optional license: Available (25 sessions)</i> |                                                   |  |    |    |
| AnyConnect for Mobile                    | Disabled                                 | <i>Optional license: Available</i>                |  |    | Disabled                                       | <i>Optional license: Available</i>               |                                                   |  |    |    |
| AnyConnect Premium (sessions)            | 2                                        | <i>Optional Permanent or Time-based licenses:</i> |  | 10 | 25                                             | 2                                                | <i>Optional Permanent or Time-based licenses:</i> |  | 10 | 25 |
| Other VPN (sessions)                     | 10                                       |                                                   |  |    | 25                                             |                                                  |                                                   |  |    |    |
| Total VPN (sessions), combined all types | up to 25 <sup>1</sup>                    |                                                   |  |    | up to 25                                       |                                                  |                                                   |  |    |    |
| VPN Load Balancing                       | No support                               |                                                   |  |    | No support                                     |                                                  |                                                   |  |    |    |
| <b>General Licenses</b>                  |                                          |                                                   |  |    |                                                |                                                  |                                                   |  |    |    |

Table 3-1 ASA 5505 License Features (continued)

| Licenses                              | Description (Base License in Plain Text)                           |                                     |    |                  | Description (Security Plus Lic. in Plain Text)                    |                                     |    |                  |
|---------------------------------------|--------------------------------------------------------------------|-------------------------------------|----|------------------|-------------------------------------------------------------------|-------------------------------------|----|------------------|
| Encryption                            | Base (DES)                                                         | <i>Opt. lic.: Strong (3DES/AES)</i> |    |                  | Base (DES)                                                        | <i>Opt. lic.: Strong (3DES/AES)</i> |    |                  |
| Failover                              | No support                                                         |                                     |    |                  | Active/Standby (no stateful failover)                             |                                     |    |                  |
| Interfaces of all types, Max.         | 52                                                                 |                                     |    |                  | 120                                                               |                                     |    |                  |
| Security Contexts                     | No support                                                         |                                     |    |                  | No support                                                        |                                     |    |                  |
| Inside Hosts, concurrent <sup>2</sup> | 10 <sup>3</sup>                                                    | <i>Opt. licenses:</i>               | 50 | <i>Unlimited</i> | 10 <sup>3</sup>                                                   | <i>Opt. licenses:</i>               | 50 | <i>Unlimited</i> |
| VLANs, maximum                        | Routed mode: 3 (2 regular and 1 restricted)<br>Transparent mode: 2 |                                     |    |                  | Routed mode: 20<br>Transparent mode: 3 (2 regular and 1 failover) |                                     |    |                  |
| VLAN Trunks, maximum                  | No support                                                         |                                     |    |                  | 8 trunks                                                          |                                     |    |                  |

1. The total number of VPN sessions depends on your licenses. If you enable AnyConnect Essentials, then the total is the model maximum of 25. If you enable AnyConnect Premium, then the total is the AnyConnect Premium value plus the Other VPN value, not to exceed 25 sessions.
2. In routed mode, hosts on the inside (Business and Home VLANs) count toward the limit when they communicate with the outside (Internet VLAN), including when the inside initiates a connection to the outside as well as when the outside initiates a connection to the inside. Note that even when the outside initiates a connection to the inside, outside hosts are *not* counted toward the limit; only the inside hosts count. Hosts that initiate traffic between Business and Home are also not counted toward the limit. The interface associated with the default route is considered to be the outside Internet interface. If there is no default route, hosts on all interfaces are counted toward the limit. In transparent mode, the interface with the lowest number of hosts is counted toward the host limit. Use the **show local-host** command to view host limits.
3. For a 10-user license, the max. DHCP clients is 32. For 50 users, the max. is 128. For unlimited users, the max. is 250, which is the max. for other models.

## ASA 5510

Table 3-2 ASA 5510 License Features

| Licenses                       | Description (Base License in Plain Text) |                                                   |    |     | Description (Security Plus Lic. in Plain Text) |                                                   |    |     |
|--------------------------------|------------------------------------------|---------------------------------------------------|----|-----|------------------------------------------------|---------------------------------------------------|----|-----|
| <b>Firewall Licenses</b>       |                                          |                                                   |    |     |                                                |                                                   |    |     |
| Botnet Traffic Filter          | Disabled                                 | <i>Optional Time-based license: Available</i>     |    |     | Disabled                                       | <i>Optional Time-based license: Available</i>     |    |     |
| Firewall Conns, Concurrent     | 50,000                                   |                                                   |    |     | 130,000                                        |                                                   |    |     |
| GTP/GPRS                       | No support                               |                                                   |    |     | No support                                     |                                                   |    |     |
| Intercompany Media Eng.        | Disabled                                 | <i>Optional license: Available</i>                |    |     | Disabled                                       | <i>Optional license: Available</i>                |    |     |
| UC Phone Proxy Sessions        | 2                                        | <i>Optional licenses:</i>                         |    |     | 2                                              | <i>Optional licenses:</i>                         |    |     |
|                                |                                          | 24                                                | 50 | 100 |                                                | 24                                                | 50 | 100 |
| <b>VPN Licenses</b>            |                                          |                                                   |    |     |                                                |                                                   |    |     |
| Adv. Endpoint Assessment       | Disabled                                 | <i>Optional license: Available</i>                |    |     | Disabled                                       | <i>Optional license: Available</i>                |    |     |
| AnyConnect for Cisco VPN Phone | Disabled                                 | <i>Optional license: Available</i>                |    |     | Disabled                                       | <i>Optional license: Available</i>                |    |     |
| AnyConnect Essentials          | Disabled                                 | <i>Optional license: Available (250 sessions)</i> |    |     | Disabled                                       | <i>Optional license: Available (250 sessions)</i> |    |     |
| AnyConnect for Mobile          | Disabled                                 | <i>Optional license: Available</i>                |    |     | Disabled                                       | <i>Optional license: Available</i>                |    |     |

Table 3-2 ASA 5510 License Features (continued)

| Licenses                                 | Description (Base License in Plain Text)                                |                                           |    |                                      |     | Description (Security Plus Lic. in Plain Text)                                                        |                                     |                                           |                                      |    |     |     |
|------------------------------------------|-------------------------------------------------------------------------|-------------------------------------------|----|--------------------------------------|-----|-------------------------------------------------------------------------------------------------------|-------------------------------------|-------------------------------------------|--------------------------------------|----|-----|-----|
| AnyConnect Premium (sessions)            | 2                                                                       | <i>Optional Perm. or Time-based lic.:</i> |    |                                      |     |                                                                                                       | 2                                   | <i>Optional Perm. or Time-based lic.:</i> |                                      |    |     |     |
|                                          |                                                                         | 10                                        | 25 | 50                                   | 100 | 250                                                                                                   |                                     | 10                                        | 25                                   | 50 | 100 | 250 |
|                                          | <i>Optional Shared licenses: Participant or Server. For the Server:</i> |                                           |    |                                      |     | <i>Optional Shared licenses: Participant or Server. For the Server:</i>                               |                                     |                                           |                                      |    |     |     |
|                                          | 500-50,000 in increments of 500                                         |                                           |    | 50,000-545,000 in increments of 1000 |     | 500-50,000 in increments of 500                                                                       |                                     |                                           | 50,000-545,000 in increments of 1000 |    |     |     |
| Total VPN (sessions), combined all types | 250                                                                     |                                           |    |                                      |     | 250                                                                                                   |                                     |                                           |                                      |    |     |     |
| Other VPN (sessions)                     | 250                                                                     |                                           |    |                                      |     | 250                                                                                                   |                                     |                                           |                                      |    |     |     |
| VPN Load Balancing                       | No support                                                              |                                           |    |                                      |     | Supported                                                                                             |                                     |                                           |                                      |    |     |     |
| <b>General Licenses</b>                  |                                                                         |                                           |    |                                      |     |                                                                                                       |                                     |                                           |                                      |    |     |     |
| Encryption                               | Base (DES)                                                              | <i>Opt. lic.: Strong (3DES/AES)</i>       |    |                                      |     | Base (DES)                                                                                            | <i>Opt. lic.: Strong (3DES/AES)</i> |                                           |                                      |    |     |     |
| Failover                                 | No support                                                              |                                           |    |                                      |     | Active/Standby or Active/Active                                                                       |                                     |                                           |                                      |    |     |     |
| Interfaces of all types, Max.            | 240                                                                     |                                           |    |                                      |     | 440                                                                                                   |                                     |                                           |                                      |    |     |     |
| Interface Speed                          | All: Fast Ethernet                                                      |                                           |    |                                      |     | Ethernet 0/0 and 0/1: Gigabit Ethernet <sup>1</sup><br>Ethernet 0/2, 0/3, 0/4 (and others): Fast Eth. |                                     |                                           |                                      |    |     |     |
| Security Contexts                        | No support                                                              |                                           |    |                                      |     | 2                                                                                                     | <i>Optional licenses:</i>           |                                           |                                      | 5  |     |     |
| VLANs, Maximum                           | 50                                                                      |                                           |    |                                      |     | 100                                                                                                   |                                     |                                           |                                      |    |     |     |

1. Although the Ethernet 0/0 and 0/1 ports are Gigabit Ethernet, they are still identified as "Ethernet" in the software.

### ASA 5520

Table 3-3 ASA 5520 License Features

| Licenses                       | Description (Base License in Plain Text) |                                                   |  |  |    |    |     |     |     |     |      |
|--------------------------------|------------------------------------------|---------------------------------------------------|--|--|----|----|-----|-----|-----|-----|------|
| <b>Firewall Licenses</b>       |                                          |                                                   |  |  |    |    |     |     |     |     |      |
| Botnet Traffic Filter          | Disabled                                 | <i>Optional Time-based license: Available</i>     |  |  |    |    |     |     |     |     |      |
| Firewall Conns, Concurrent     | 280,000                                  |                                                   |  |  |    |    |     |     |     |     |      |
| GTP/GPRS                       | Disabled                                 | <i>Optional license: Available</i>                |  |  |    |    |     |     |     |     |      |
| Intercompany Media Eng.        | Disabled                                 | <i>Optional license: Available</i>                |  |  |    |    |     |     |     |     |      |
| UC Phone Proxy Sessions        | 2                                        | <i>Optional licenses:</i>                         |  |  | 24 | 50 | 100 | 250 | 500 | 750 | 1000 |
| <b>VPN Licenses</b>            |                                          |                                                   |  |  |    |    |     |     |     |     |      |
| Adv. Endpoint Assessment       | Disabled                                 | <i>Optional license: Available</i>                |  |  |    |    |     |     |     |     |      |
| AnyConnect for Cisco VPN Phone | Disabled                                 | <i>Optional license: Available</i>                |  |  |    |    |     |     |     |     |      |
| AnyConnect Essentials          | Disabled                                 | <i>Optional license: Available (750 sessions)</i> |  |  |    |    |     |     |     |     |      |
| AnyConnect for Mobile          | Disabled                                 | <i>Optional license: Available</i>                |  |  |    |    |     |     |     |     |      |

Table 3-3 ASA 5520 License Features (continued)

| Licenses                                 | Description (Base License in Plain Text)                                |                                                   |                                            |    |     |                                      |     |     |  |  |  |
|------------------------------------------|-------------------------------------------------------------------------|---------------------------------------------------|--------------------------------------------|----|-----|--------------------------------------|-----|-----|--|--|--|
| AnyConnect Premium (sessions)            | 2                                                                       | <i>Optional Permanent or Time-based licenses:</i> |                                            |    |     |                                      |     |     |  |  |  |
|                                          |                                                                         | 10                                                | 25                                         | 50 | 100 | 250                                  | 500 | 750 |  |  |  |
|                                          | <i>Optional Shared licenses: Participant or Server. For the Server:</i> |                                                   |                                            |    |     |                                      |     |     |  |  |  |
|                                          | 500-50,000 in increments of 500                                         |                                                   |                                            |    |     | 50,000-545,000 in increments of 1000 |     |     |  |  |  |
| Total VPN (sessions), combined all types | 750                                                                     |                                                   |                                            |    |     |                                      |     |     |  |  |  |
| Other VPN (sessions)                     | 750                                                                     |                                                   |                                            |    |     |                                      |     |     |  |  |  |
| VPN Load Balancing                       | Supported                                                               |                                                   |                                            |    |     |                                      |     |     |  |  |  |
| <b>General Licenses</b>                  |                                                                         |                                                   |                                            |    |     |                                      |     |     |  |  |  |
| Encryption                               | Base (DES)                                                              |                                                   | <i>Optional license: Strong (3DES/AES)</i> |    |     |                                      |     |     |  |  |  |
| Failover                                 | Active/Standby or Active/Active                                         |                                                   |                                            |    |     |                                      |     |     |  |  |  |
| Interfaces of all types, Max.            | 640                                                                     |                                                   |                                            |    |     |                                      |     |     |  |  |  |
| Security Contexts                        | 2                                                                       | <i>Optional licenses:</i>                         |                                            |    | 5   | 10                                   | 20  |     |  |  |  |
| VLANs, Maximum                           | 150                                                                     |                                                   |                                            |    |     |                                      |     |     |  |  |  |

## ASA 5540

Table 3-4 ASA 5540 License Features

| Licenses                                 | Description (Base License in Plain Text)                                |                                                   |                                                    |    |     |                                      |     |     |      |      |      |      |
|------------------------------------------|-------------------------------------------------------------------------|---------------------------------------------------|----------------------------------------------------|----|-----|--------------------------------------|-----|-----|------|------|------|------|
| <b>Firewall Licenses</b>                 |                                                                         |                                                   |                                                    |    |     |                                      |     |     |      |      |      |      |
| Botnet Traffic Filter                    | Disabled                                                                |                                                   | <i>Optional Time-based license: Available</i>      |    |     |                                      |     |     |      |      |      |      |
| Firewall Conns, Concurrent               | 400,000                                                                 |                                                   |                                                    |    |     |                                      |     |     |      |      |      |      |
| GTP/GPRS                                 | Disabled                                                                |                                                   | <i>Optional license: Available</i>                 |    |     |                                      |     |     |      |      |      |      |
| Intercompany Media Eng.                  | Disabled                                                                |                                                   | <i>Optional license: Available</i>                 |    |     |                                      |     |     |      |      |      |      |
| UC Phone Proxy Sessions                  | 2                                                                       | <i>Optional licenses:</i>                         |                                                    |    | 24  | 50                                   | 100 | 250 | 500  | 750  | 1000 | 2000 |
| <b>VPN Licenses</b>                      |                                                                         |                                                   |                                                    |    |     |                                      |     |     |      |      |      |      |
| Adv. Endpoint Assessment                 | Disabled                                                                |                                                   | <i>Optional license: Available</i>                 |    |     |                                      |     |     |      |      |      |      |
| AnyConnect for Cisco VPN Phone           | Disabled                                                                |                                                   | <i>Optional license: Available</i>                 |    |     |                                      |     |     |      |      |      |      |
| AnyConnect Essentials                    | Disabled                                                                |                                                   | <i>Optional license: Available (2500 sessions)</i> |    |     |                                      |     |     |      |      |      |      |
| AnyConnect for Mobile                    | Disabled                                                                |                                                   | <i>Optional license: Available</i>                 |    |     |                                      |     |     |      |      |      |      |
| AnyConnect Premium (sessions)            | 2                                                                       | <i>Optional Permanent or Time-based licenses:</i> |                                                    |    |     |                                      |     |     |      |      |      |      |
|                                          |                                                                         | 10                                                | 25                                                 | 50 | 100 | 250                                  | 500 | 750 | 1000 | 2500 |      |      |
|                                          | <i>Optional Shared licenses: Participant or Server. For the Server:</i> |                                                   |                                                    |    |     |                                      |     |     |      |      |      |      |
|                                          | 500-50,000 in increments of 500                                         |                                                   |                                                    |    |     | 50,000-545,000 in increments of 1000 |     |     |      |      |      |      |
| Total VPN (sessions), combined all types | 5000                                                                    |                                                   |                                                    |    |     |                                      |     |     |      |      |      |      |
| Other VPN (sessions)                     | 5000                                                                    |                                                   |                                                    |    |     |                                      |     |     |      |      |      |      |

Table 3-4 ASA 5540 License Features (continued)

| Licenses                      | Description (Base License in Plain Text) |                                            |   |    |    |    |
|-------------------------------|------------------------------------------|--------------------------------------------|---|----|----|----|
| VPN Load Balancing            | Supported                                |                                            |   |    |    |    |
| <b>General Licenses</b>       |                                          |                                            |   |    |    |    |
| Encryption                    | Base (DES)                               | <i>Optional license: Strong (3DES/AES)</i> |   |    |    |    |
| Failover                      | Active/Standby or Active/Active          |                                            |   |    |    |    |
| Interfaces of all types, Max. | 840                                      |                                            |   |    |    |    |
| Security Contexts             | 2                                        | <i>Optional licenses:</i>                  | 5 | 10 | 20 | 50 |
| VLANs, Maximum                | 200                                      |                                            |   |    |    |    |

## ASA 5550

Table 3-5 ASA 5550 License Features

| Licenses                                 | Description (Base License in Plain Text) |                                                                         |    |     |     |     |                                      |      |      |      |      |
|------------------------------------------|------------------------------------------|-------------------------------------------------------------------------|----|-----|-----|-----|--------------------------------------|------|------|------|------|
| <b>Firewall Licenses</b>                 |                                          |                                                                         |    |     |     |     |                                      |      |      |      |      |
| Botnet Traffic Filter                    | Disabled                                 | <i>Optional Time-based license: Available</i>                           |    |     |     |     |                                      |      |      |      |      |
| Firewall Conns, Concurrent               | 650,000                                  |                                                                         |    |     |     |     |                                      |      |      |      |      |
| GTP/GPRS                                 | Disabled                                 | <i>Optional license: Available</i>                                      |    |     |     |     |                                      |      |      |      |      |
| Intercompany Media Eng.                  | Disabled                                 | <i>Optional license: Available</i>                                      |    |     |     |     |                                      |      |      |      |      |
| UC Phone Proxy Sessions                  | 2                                        | <i>Optional licenses:</i>                                               |    |     |     |     |                                      |      |      |      |      |
|                                          |                                          | 24                                                                      | 50 | 100 | 250 | 500 | 750                                  | 1000 | 2000 | 3000 |      |
| <b>VPN Licenses</b>                      |                                          |                                                                         |    |     |     |     |                                      |      |      |      |      |
| Adv. Endpoint Assessment                 | Disabled                                 | <i>Optional license: Available</i>                                      |    |     |     |     |                                      |      |      |      |      |
| AnyConnect for Cisco VPN Phone           | Disabled                                 | <i>Optional license: Available</i>                                      |    |     |     |     |                                      |      |      |      |      |
| AnyConnect Essentials                    | Disabled                                 | <i>Optional license: Available (5000 sessions)</i>                      |    |     |     |     |                                      |      |      |      |      |
| AnyConnect for Mobile                    | Disabled                                 | <i>Optional license: Available</i>                                      |    |     |     |     |                                      |      |      |      |      |
| AnyConnect Premium (sessions)            | 2                                        | <i>Optional Permanent or Time-based licenses:</i>                       |    |     |     |     |                                      |      |      |      |      |
|                                          |                                          | 10                                                                      | 25 | 50  | 100 | 250 | 500                                  | 750  | 1000 | 2500 | 5000 |
|                                          |                                          | <i>Optional Shared licenses: Participant or Server. For the Server:</i> |    |     |     |     |                                      |      |      |      |      |
|                                          |                                          | 500-50,000 in increments of 500                                         |    |     |     |     | 50,000-545,000 in increments of 1000 |      |      |      |      |
| Total VPN (sessions), combined all types | 5000                                     |                                                                         |    |     |     |     |                                      |      |      |      |      |
| Other VPN (sessions)                     | 5000                                     |                                                                         |    |     |     |     |                                      |      |      |      |      |
| VPN Load Balancing                       | Supported                                |                                                                         |    |     |     |     |                                      |      |      |      |      |
| <b>General Licenses</b>                  |                                          |                                                                         |    |     |     |     |                                      |      |      |      |      |
| Encryption                               | Base (DES)                               | <i>Optional license: Strong (3DES/AES)</i>                              |    |     |     |     |                                      |      |      |      |      |
| Failover                                 | Active/Standby or Active/Active          |                                                                         |    |     |     |     |                                      |      |      |      |      |
| Interfaces of all types, Max.            | 1640                                     |                                                                         |    |     |     |     |                                      |      |      |      |      |

Table 3-5 ASA 5550 License Features (continued)

| Licenses          | Description (Base License in Plain Text) |                           |  |  |   |    |    |    |     |
|-------------------|------------------------------------------|---------------------------|--|--|---|----|----|----|-----|
| Security Contexts | 2                                        | <i>Optional licenses:</i> |  |  | 5 | 10 | 20 | 50 | 100 |
| VLANs, Maximum    | 400                                      |                           |  |  |   |    |    |    |     |

## ASA 5580

Table 3-6 ASA 5580 License Features

| Licenses                                 | Description (Base License in Plain Text)                                |    |                                                     |     |     |     |                                      |      |      |      |                     |  |
|------------------------------------------|-------------------------------------------------------------------------|----|-----------------------------------------------------|-----|-----|-----|--------------------------------------|------|------|------|---------------------|--|
| <b>Firewall Licenses</b>                 |                                                                         |    |                                                     |     |     |     |                                      |      |      |      |                     |  |
| Botnet Traffic Filter                    | Disabled                                                                |    | <i>Optional Time-based license: Available</i>       |     |     |     |                                      |      |      |      |                     |  |
| Firewall Conns, Concurrent               | 5580-20: 2,000,000                                                      |    |                                                     |     |     |     | 5580-40: 4,000,000                   |      |      |      |                     |  |
| GTP/GPRS                                 | Disabled                                                                |    | <i>Optional license: Available</i>                  |     |     |     |                                      |      |      |      |                     |  |
| Intercompany Media Eng.                  | Disabled                                                                |    | <i>Optional license: Available</i>                  |     |     |     |                                      |      |      |      |                     |  |
| UC Phone Proxy Sessions                  | 2                                                                       |    | <i>Optional licenses:</i>                           |     |     |     |                                      |      |      |      |                     |  |
|                                          | 24                                                                      | 50 | 100                                                 | 250 | 500 | 750 | 1000                                 | 2000 | 3000 | 5000 | 10,000 <sup>1</sup> |  |
| <b>VPN Licenses</b>                      |                                                                         |    |                                                     |     |     |     |                                      |      |      |      |                     |  |
| Adv. Endpoint Assessment                 | Disabled                                                                |    | <i>Optional license: Available</i>                  |     |     |     |                                      |      |      |      |                     |  |
| AnyConnect for Cisco VPN Phone           | Disabled                                                                |    | <i>Optional license: Available</i>                  |     |     |     |                                      |      |      |      |                     |  |
| AnyConnect Essentials                    | Disabled                                                                |    | <i>Optional license: Available (10000 sessions)</i> |     |     |     |                                      |      |      |      |                     |  |
| AnyConnect for Mobile                    | Disabled                                                                |    | <i>Optional license: Available</i>                  |     |     |     |                                      |      |      |      |                     |  |
| AnyConnect Premium (sessions)            | 2                                                                       |    | <i>Optional Permanent or Time-based licenses:</i>   |     |     |     |                                      |      |      |      |                     |  |
|                                          | 10                                                                      | 25 | 50                                                  | 100 | 250 | 500 | 750                                  | 1000 | 2500 | 5000 | 10,000              |  |
|                                          | <i>Optional Shared licenses: Participant or Server. For the Server:</i> |    |                                                     |     |     |     |                                      |      |      |      |                     |  |
|                                          | 500-50,000 in increments of 500                                         |    |                                                     |     |     |     | 50,000-545,000 in increments of 1000 |      |      |      |                     |  |
| Total VPN (sessions), combined all types | 10,000                                                                  |    |                                                     |     |     |     |                                      |      |      |      |                     |  |
| Other VPN (sessions)                     | 10,000                                                                  |    |                                                     |     |     |     |                                      |      |      |      |                     |  |
| VPN Load Balancing                       | Supported                                                               |    |                                                     |     |     |     |                                      |      |      |      |                     |  |
| <b>General Licenses</b>                  |                                                                         |    |                                                     |     |     |     |                                      |      |      |      |                     |  |
| Encryption                               | Base (DES)                                                              |    | <i>Optional license: Strong (3DES/AES)</i>          |     |     |     |                                      |      |      |      |                     |  |
| Failover                                 | Active/Standby or Active/Active                                         |    |                                                     |     |     |     |                                      |      |      |      |                     |  |
| Interfaces of all types, Max.            | 4176                                                                    |    |                                                     |     |     |     |                                      |      |      |      |                     |  |
| Security Contexts                        | 2                                                                       |    | <i>Optional licenses:</i>                           |     |     | 5   | 10                                   | 20   | 50   | 100  | 250                 |  |
| VLANs, Maximum                           | 1024                                                                    |    |                                                     |     |     |     |                                      |      |      |      |                     |  |

1. With the 10,000-session UC license, the total combined sessions can be 10,000, but the maximum number of Phone Proxy sessions is 5000.

**ASA 5512-X**

If you have a No Payload Encryption model, then some of the features in [Table 3-7](#) are not supported. See the [“No Payload Encryption Models”](#) section on page 3-30 for a list of unsupported features.

**Table 3-7 ASA 5512-X License Features**

| Licenses                                 | Description (Base License in Plain Text)                                |                                           |                                                   |     |     | Description (Security Plus Lic. in Plain Text)                          |                                           |                                                   |    |    |     |
|------------------------------------------|-------------------------------------------------------------------------|-------------------------------------------|---------------------------------------------------|-----|-----|-------------------------------------------------------------------------|-------------------------------------------|---------------------------------------------------|----|----|-----|
| <b>Firewall Licenses</b>                 |                                                                         |                                           |                                                   |     |     |                                                                         |                                           |                                                   |    |    |     |
| Botnet Traffic Filter                    | Disabled                                                                |                                           | <i>Optional Time-based license: Available</i>     |     |     | Disabled                                                                |                                           | <i>Optional Time-based license: Available</i>     |    |    |     |
| Firewall Conns, Concurrent               | 100,000                                                                 |                                           |                                                   |     |     | 250,000                                                                 |                                           |                                                   |    |    |     |
| GTP/GPRS                                 | No support                                                              |                                           |                                                   |     |     | Disabled                                                                |                                           | <i>Optional license: Available</i>                |    |    |     |
| Intercompany Media Eng.                  | Disabled                                                                |                                           | <i>Optional license: Available</i>                |     |     | Disabled                                                                |                                           | <i>Optional license: Available</i>                |    |    |     |
| UC Phone Proxy Sessions                  | 2                                                                       | <i>Optional licenses:</i>                 |                                                   |     |     | 2                                                                       | <i>Optional licenses:</i>                 |                                                   |    |    |     |
|                                          |                                                                         | 24                                        | 50                                                | 100 | 250 |                                                                         | 500                                       |                                                   | 24 | 50 | 100 |
| <b>VPN Licenses</b>                      |                                                                         |                                           |                                                   |     |     |                                                                         |                                           |                                                   |    |    |     |
| Adv. Endpoint Assessment                 | Disabled                                                                |                                           | <i>Optional license: Available</i>                |     |     | Disabled                                                                |                                           | <i>Optional license: Available</i>                |    |    |     |
| AnyConnect for Cisco VPN Phone           | Disabled                                                                |                                           | <i>Optional license: Available</i>                |     |     | Disabled                                                                |                                           | <i>Optional license: Available</i>                |    |    |     |
| AnyConnect Essentials                    | Disabled                                                                |                                           | <i>Optional license: Available (250 sessions)</i> |     |     | Disabled                                                                |                                           | <i>Optional license: Available (250 sessions)</i> |    |    |     |
| AnyConnect for Mobile                    | Disabled                                                                |                                           | <i>Optional license: Available</i>                |     |     | Disabled                                                                |                                           | <i>Optional license: Available</i>                |    |    |     |
| AnyConnect Premium (sessions)            | 2                                                                       | <i>Optional Perm. or Time-based lic.:</i> |                                                   |     |     | 2                                                                       | <i>Optional Perm. or Time-based lic.:</i> |                                                   |    |    |     |
|                                          |                                                                         | 10                                        | 25                                                | 50  | 100 |                                                                         | 250                                       | 10                                                | 25 | 50 | 100 |
|                                          | <i>Optional Shared licenses: Participant or Server. For the Server:</i> |                                           |                                                   |     |     | <i>Optional Shared licenses: Participant or Server. For the Server:</i> |                                           |                                                   |    |    |     |
|                                          | <i>500-50,000 in increments of 500</i>                                  |                                           | <i>50,000-545,000 in increments of 1000</i>       |     |     | <i>500-50,000 in increments of 500</i>                                  |                                           | <i>50,000-545,000 in increments of 1000</i>       |    |    |     |
| Total VPN (sessions), combined all types | 250                                                                     |                                           |                                                   |     |     | 250                                                                     |                                           |                                                   |    |    |     |
| Other VPN (sessions)                     | 250                                                                     |                                           |                                                   |     |     | 250                                                                     |                                           |                                                   |    |    |     |
| VPN Load Balancing                       | No support                                                              |                                           |                                                   |     |     | Supported                                                               |                                           |                                                   |    |    |     |
| <b>General Licenses</b>                  |                                                                         |                                           |                                                   |     |     |                                                                         |                                           |                                                   |    |    |     |
| Encryption                               | Base (DES)                                                              |                                           | <i>Opt. lic.: Strong (3DES/AES)</i>               |     |     | Base (DES)                                                              |                                           | <i>Opt. lic.: Strong (3DES/AES)</i>               |    |    |     |
| Failover                                 | No support                                                              |                                           |                                                   |     |     | Active/Standby or Active/Active                                         |                                           |                                                   |    |    |     |
| Interfaces of all types, Max.            | 328                                                                     |                                           |                                                   |     |     | 528                                                                     |                                           |                                                   |    |    |     |
| Security Contexts                        | No support                                                              |                                           |                                                   |     |     | 2                                                                       |                                           | <i>Optional licenses:</i>                         |    | 5  |     |
| IPS Module                               | Disabled                                                                |                                           | <i>Optional license: Available</i>                |     |     | Disabled                                                                |                                           | <i>Optional license: Available</i>                |    |    |     |
| VLANs, Maximum                           | 50                                                                      |                                           |                                                   |     |     | 100                                                                     |                                           |                                                   |    |    |     |

**ASA 5515-X**

If you have a No Payload Encryption model, then some of the features in [Table 3-8](#) are not supported. See the [“No Payload Encryption Models”](#) section on page 3-30 for a list of unsupported features.

**Table 3-8 ASA 5515-X License Features**

| Licenses                                 | Description (Base License in Plain Text)                                |                                                   |    |                                      |     |     |     |     |
|------------------------------------------|-------------------------------------------------------------------------|---------------------------------------------------|----|--------------------------------------|-----|-----|-----|-----|
| <b>Firewall Licenses</b>                 |                                                                         |                                                   |    |                                      |     |     |     |     |
| Botnet Traffic Filter                    | Disabled                                                                | <i>Optional Time-based license: Available</i>     |    |                                      |     |     |     |     |
| Firewall Conns, Concurrent               | 250,000                                                                 |                                                   |    |                                      |     |     |     |     |
| GTP/GPRS                                 | Disabled                                                                | <i>Optional license: Available</i>                |    |                                      |     |     |     |     |
| Intercompany Media Eng.                  | Disabled                                                                | <i>Optional license: Available</i>                |    |                                      |     |     |     |     |
| UC Phone Proxy Sessions                  | 2                                                                       | <i>Optional licenses:</i>                         |    | 24                                   | 50  | 100 | 250 | 500 |
| <b>VPN Licenses</b>                      |                                                                         |                                                   |    |                                      |     |     |     |     |
| Adv. Endpoint Assessment                 | Disabled                                                                | <i>Optional license: Available</i>                |    |                                      |     |     |     |     |
| AnyConnect for Cisco VPN Phone           | Disabled                                                                | <i>Optional license: Available</i>                |    |                                      |     |     |     |     |
| AnyConnect Essentials                    | Disabled                                                                | <i>Optional license: Available (250 sessions)</i> |    |                                      |     |     |     |     |
| AnyConnect for Mobile                    | Disabled                                                                | <i>Optional license: Available</i>                |    |                                      |     |     |     |     |
| AnyConnect Premium (sessions)            | 2                                                                       | <i>Optional Permanent or Time-based licenses:</i> |    |                                      |     |     |     |     |
|                                          |                                                                         | 10                                                | 25 | 50                                   | 100 | 250 |     |     |
|                                          | <i>Optional Shared licenses: Participant or Server. For the Server:</i> |                                                   |    |                                      |     |     |     |     |
|                                          | 500-50,000 in increments of 500                                         |                                                   |    | 50,000-545,000 in increments of 1000 |     |     |     |     |
| Total VPN (sessions), combined all types | 250                                                                     |                                                   |    |                                      |     |     |     |     |
| Other VPN (sessions)                     | 250                                                                     |                                                   |    |                                      |     |     |     |     |
| VPN Load Balancing                       | Supported                                                               |                                                   |    |                                      |     |     |     |     |
| <b>General Licenses</b>                  |                                                                         |                                                   |    |                                      |     |     |     |     |
| Encryption                               | Base (DES)                                                              | <i>Optional license: Strong (3DES/AES)</i>        |    |                                      |     |     |     |     |
| Failover                                 | Active/Standby or Active/Active                                         |                                                   |    |                                      |     |     |     |     |
| Interfaces of all types, Max.            | 528                                                                     |                                                   |    |                                      |     |     |     |     |
| Security Contexts                        | 2                                                                       | <i>Optional licenses:</i>                         |    | 5                                    |     |     |     |     |
| IPS Module                               | Disabled                                                                | <i>Optional license: Available</i>                |    |                                      |     |     |     |     |
| VLANs, Maximum                           | 100                                                                     |                                                   |    |                                      |     |     |     |     |

**ASA 5525-X**

If you have a No Payload Encryption model, then some of the features in [Table 3-9](#) are not supported. See the [“No Payload Encryption Models”](#) section on [page 3-30](#) for a list of unsupported features.

**Table 3-9 ASA 5525-X License Features**

| Licenses                   | Description (Base License in Plain Text) |                                               |  |  |  |  |  |
|----------------------------|------------------------------------------|-----------------------------------------------|--|--|--|--|--|
| <b>Firewall Licenses</b>   |                                          |                                               |  |  |  |  |  |
| Botnet Traffic Filter      | Disabled                                 | <i>Optional Time-based license: Available</i> |  |  |  |  |  |
| Firewall Conns, Concurrent | 500,000                                  |                                               |  |  |  |  |  |
| GTP/GPRS                   | Disabled                                 | <i>Optional license: Available</i>            |  |  |  |  |  |

**Table 3-9 ASA 5525-X License Features (continued)**

| Licenses                                 | Description (Base License in Plain Text)                                |                                                   |                                                   |    |     |     |                                      |     |     |     |      |
|------------------------------------------|-------------------------------------------------------------------------|---------------------------------------------------|---------------------------------------------------|----|-----|-----|--------------------------------------|-----|-----|-----|------|
| Intercompany Media Eng.                  | Disabled                                                                |                                                   | <i>Optional license: Available</i>                |    |     |     |                                      |     |     |     |      |
| UC Phone Proxy Sessions                  | 2                                                                       | <i>Optional licenses:</i>                         |                                                   |    | 24  | 50  | 100                                  | 250 | 500 | 750 | 1000 |
| <b>VPN Licenses</b>                      |                                                                         |                                                   |                                                   |    |     |     |                                      |     |     |     |      |
| Adv. Endpoint Assessment                 | Disabled                                                                |                                                   | <i>Optional license: Available</i>                |    |     |     |                                      |     |     |     |      |
| AnyConnect for Cisco VPN Phone           | Disabled                                                                |                                                   | <i>Optional license: Available</i>                |    |     |     |                                      |     |     |     |      |
| AnyConnect Essentials                    | Disabled                                                                |                                                   | <i>Optional license: Available (750 sessions)</i> |    |     |     |                                      |     |     |     |      |
| AnyConnect for Mobile                    | Disabled                                                                |                                                   | <i>Optional license: Available</i>                |    |     |     |                                      |     |     |     |      |
| AnyConnect Premium (sessions)            | 2                                                                       | <i>Optional Permanent or Time-based licenses:</i> |                                                   |    |     |     |                                      |     |     |     |      |
|                                          |                                                                         | 10                                                | 25                                                | 50 | 100 | 250 | 500                                  | 750 |     |     |      |
|                                          | <i>Optional Shared licenses: Participant or Server. For the Server:</i> |                                                   |                                                   |    |     |     |                                      |     |     |     |      |
|                                          | 500-50,000 in increments of 500                                         |                                                   |                                                   |    |     |     | 50,000-545,000 in increments of 1000 |     |     |     |      |
| Total VPN (sessions), combined all types | 750                                                                     |                                                   |                                                   |    |     |     |                                      |     |     |     |      |
| Other VPN (sessions)                     | 750                                                                     |                                                   |                                                   |    |     |     |                                      |     |     |     |      |
| VPN Load Balancing                       | Supported                                                               |                                                   |                                                   |    |     |     |                                      |     |     |     |      |
| <b>General Licenses</b>                  |                                                                         |                                                   |                                                   |    |     |     |                                      |     |     |     |      |
| Encryption                               | Base (DES)                                                              |                                                   | <i>Optional license: Strong (3DES/AES)</i>        |    |     |     |                                      |     |     |     |      |
| Failover                                 | Active/Standby or Active/Active                                         |                                                   |                                                   |    |     |     |                                      |     |     |     |      |
| Interfaces of all types, Max.            | 928                                                                     |                                                   |                                                   |    |     |     |                                      |     |     |     |      |
| Security Contexts                        | 2                                                                       | <i>Optional licenses:</i>                         |                                                   |    | 5   | 10  | 20                                   |     |     |     |      |
| IPS Module                               | Disabled                                                                |                                                   | <i>Optional license: Available</i>                |    |     |     |                                      |     |     |     |      |
| VLANs, Maximum                           | 200                                                                     |                                                   |                                                   |    |     |     |                                      |     |     |     |      |

**ASA 5545-X**

If you have a No Payload Encryption model, then some of the features in [Table 3-10](#) are not supported. See the “[No Payload Encryption Models](#)” section on page 3-30 for a list of unsupported features.

**Table 3-10 ASA 5545-X License Features**

| Licenses                       | Description (Base License in Plain Text) |                           |                                               |  |    |    |     |     |     |     |      |      |
|--------------------------------|------------------------------------------|---------------------------|-----------------------------------------------|--|----|----|-----|-----|-----|-----|------|------|
| <b>Firewall Licenses</b>       |                                          |                           |                                               |  |    |    |     |     |     |     |      |      |
| Botnet Traffic Filter          | Disabled                                 |                           | <i>Optional Time-based license: Available</i> |  |    |    |     |     |     |     |      |      |
| Firewall Conns, Concurrent     | 750,000                                  |                           |                                               |  |    |    |     |     |     |     |      |      |
| GTP/GPRS                       | Disabled                                 |                           | <i>Optional license: Available</i>            |  |    |    |     |     |     |     |      |      |
| Intercompany Media Eng.        | Disabled                                 |                           | <i>Optional license: Available</i>            |  |    |    |     |     |     |     |      |      |
| UC Phone Proxy Sessions        | 2                                        | <i>Optional licenses:</i> |                                               |  | 24 | 50 | 100 | 250 | 500 | 750 | 1000 | 2000 |
| <b>VPN Licenses</b>            |                                          |                           |                                               |  |    |    |     |     |     |     |      |      |
| Adv. Endpoint Assessment       | Disabled                                 |                           | <i>Optional license: Available</i>            |  |    |    |     |     |     |     |      |      |
| AnyConnect for Cisco VPN Phone | Disabled                                 |                           | <i>Optional license: Available</i>            |  |    |    |     |     |     |     |      |      |

Table 3-10 ASA 5545-X License Features (continued)

| Licenses                                 | Description (Base License in Plain Text)                                |                                                    |    |     |     |                                      |     |      |      |  |
|------------------------------------------|-------------------------------------------------------------------------|----------------------------------------------------|----|-----|-----|--------------------------------------|-----|------|------|--|
| AnyConnect Essentials                    | Disabled                                                                | <i>Optional license: Available (2500 sessions)</i> |    |     |     |                                      |     |      |      |  |
| AnyConnect for Mobile                    | Disabled                                                                | <i>Optional license: Available</i>                 |    |     |     |                                      |     |      |      |  |
| AnyConnect Premium (sessions)            | 2                                                                       | <i>Optional Permanent or Time-based licenses:</i>  |    |     |     |                                      |     |      |      |  |
|                                          | 10                                                                      | 25                                                 | 50 | 100 | 250 | 500                                  | 750 | 1000 | 2500 |  |
|                                          | <i>Optional Shared licenses: Participant or Server. For the Server:</i> |                                                    |    |     |     |                                      |     |      |      |  |
|                                          | 500-50,000 in increments of 500                                         |                                                    |    |     |     | 50,000-545,000 in increments of 1000 |     |      |      |  |
| Total VPN (sessions), combined all types | 2500                                                                    |                                                    |    |     |     |                                      |     |      |      |  |
| Other VPN (sessions)                     | 2500                                                                    |                                                    |    |     |     |                                      |     |      |      |  |
| VPN Load Balancing                       | Supported                                                               |                                                    |    |     |     |                                      |     |      |      |  |
| <b>General Licenses</b>                  |                                                                         |                                                    |    |     |     |                                      |     |      |      |  |
| Encryption                               | Base (DES)                                                              | <i>Optional license: Strong (3DES/AES)</i>         |    |     |     |                                      |     |      |      |  |
| Failover                                 | Active/Standby or Active/Active                                         |                                                    |    |     |     |                                      |     |      |      |  |
| Interfaces of all types, Max.            | 1328                                                                    |                                                    |    |     |     |                                      |     |      |      |  |
| Security Contexts                        | 2                                                                       | <i>Optional licenses:</i>                          |    |     | 5   | 10                                   | 20  | 50   |      |  |
| IPS Module                               | Disabled                                                                | <i>Optional license: Available</i>                 |    |     |     |                                      |     |      |      |  |
| VLANs, Maximum                           | 300                                                                     |                                                    |    |     |     |                                      |     |      |      |  |

**ASA 5555-X**

If you have a No Payload Encryption model, then some of the features in [Table 3-11](#) are not supported. See the [“No Payload Encryption Models”](#) section on page 3-30 for a list of unsupported features.

Table 3-11 ASA 5555-X License Features

| Licenses                       | Description (Base License in Plain Text) |                                                    |     |     |     |     |      |      |      |  |
|--------------------------------|------------------------------------------|----------------------------------------------------|-----|-----|-----|-----|------|------|------|--|
| <b>Firewall Licenses</b>       |                                          |                                                    |     |     |     |     |      |      |      |  |
| Botnet Traffic Filter          | Disabled                                 | <i>Optional Time-based license: Available</i>      |     |     |     |     |      |      |      |  |
| Firewall Conns, Concurrent     | 1,000,000                                |                                                    |     |     |     |     |      |      |      |  |
| GTP/GPRS                       | Disabled                                 | <i>Optional license: Available</i>                 |     |     |     |     |      |      |      |  |
| Intercompany Media Eng.        | Disabled                                 | <i>Optional license: Available</i>                 |     |     |     |     |      |      |      |  |
| UC Phone Proxy Sessions        | 2                                        | <i>Optional licenses:</i>                          |     |     |     |     |      |      |      |  |
|                                | 24                                       | 50                                                 | 100 | 250 | 500 | 750 | 1000 | 2000 | 3000 |  |
| <b>VPN Licenses</b>            |                                          |                                                    |     |     |     |     |      |      |      |  |
| Adv. Endpoint Assessment       | Disabled                                 | <i>Optional license: Available</i>                 |     |     |     |     |      |      |      |  |
| AnyConnect for Cisco VPN Phone | Disabled                                 | <i>Optional license: Available</i>                 |     |     |     |     |      |      |      |  |
| AnyConnect Essentials          | Disabled                                 | <i>Optional license: Available (5000 sessions)</i> |     |     |     |     |      |      |      |  |
| AnyConnect for Mobile          | Disabled                                 | <i>Optional license: Available</i>                 |     |     |     |     |      |      |      |  |

Table 3-11 ASA 5555-X License Features (continued)

| Licenses                                 | Description (Base License in Plain Text)                                |                                                   |    |    |     |                                      |     |     |      |      |      |  |
|------------------------------------------|-------------------------------------------------------------------------|---------------------------------------------------|----|----|-----|--------------------------------------|-----|-----|------|------|------|--|
| AnyConnect Premium (sessions)            | 2                                                                       | <i>Optional Permanent or Time-based licenses:</i> |    |    |     |                                      |     |     |      |      |      |  |
|                                          |                                                                         | 10                                                | 25 | 50 | 100 | 250                                  | 500 | 750 | 1000 | 2500 | 5000 |  |
|                                          | <i>Optional Shared licenses: Participant or Server. For the Server:</i> |                                                   |    |    |     |                                      |     |     |      |      |      |  |
|                                          | 500-50,000 in increments of 500                                         |                                                   |    |    |     | 50,000-545,000 in increments of 1000 |     |     |      |      |      |  |
| Total VPN (sessions), combined all types | 5000                                                                    |                                                   |    |    |     |                                      |     |     |      |      |      |  |
| Other VPN (sessions)                     | 5000                                                                    |                                                   |    |    |     |                                      |     |     |      |      |      |  |
| VPN Load Balancing                       | Supported                                                               |                                                   |    |    |     |                                      |     |     |      |      |      |  |
| <b>General Licenses</b>                  |                                                                         |                                                   |    |    |     |                                      |     |     |      |      |      |  |
| Encryption                               | Base (DES)                                                              | <i>Optional license: Strong (3DES/AES)</i>        |    |    |     |                                      |     |     |      |      |      |  |
| Failover                                 | Active/Standby or Active/Active                                         |                                                   |    |    |     |                                      |     |     |      |      |      |  |
| Interfaces of all types, Max.            | 2128                                                                    |                                                   |    |    |     |                                      |     |     |      |      |      |  |
| Security Contexts                        | 2                                                                       | <i>Optional licenses:</i>                         |    |    | 5   | 10                                   | 20  | 50  | 100  |      |      |  |
| IPS Module                               | Disabled                                                                | <i>Optional license: Available</i>                |    |    |     |                                      |     |     |      |      |      |  |
| VLANs, Maximum                           | 500                                                                     |                                                   |    |    |     |                                      |     |     |      |      |      |  |

**ASA 5585-X with SSP-10**

If you have a No Payload Encryption model, then some of the features in [Table 3-12](#) are not supported. See the “[No Payload Encryption Models](#)” section on page 3-30 for a list of unsupported features.

Table 3-12 ASA 5585-X with SSP-10 License Features

| Licenses                       | Description (Base License in Plain Text) |                                                    |      |      |      | Description (Security Plus License in Plain Text) |                                                    |                           |      |      |     |     |
|--------------------------------|------------------------------------------|----------------------------------------------------|------|------|------|---------------------------------------------------|----------------------------------------------------|---------------------------|------|------|-----|-----|
| <b>Firewall Licenses</b>       |                                          |                                                    |      |      |      |                                                   |                                                    |                           |      |      |     |     |
| Botnet Traffic Filter          | Disabled                                 | <i>Opt. Time-based lic: Available</i>              |      |      |      | Disabled                                          | <i>Opt. Time-based lic: Available</i>              |                           |      |      |     |     |
| Firewall Conns, Concurrent     | 1,000,000                                |                                                    |      |      |      | 1,000,000                                         |                                                    |                           |      |      |     |     |
| GTP/GPRS                       | Disabled                                 | <i>Optional license: Available</i>                 |      |      |      | Disabled                                          | <i>Optional license: Available</i>                 |                           |      |      |     |     |
| Intercompany Media Eng.        | Disabled                                 | <i>Optional license: Available</i>                 |      |      |      | Disabled                                          | <i>Optional license: Available</i>                 |                           |      |      |     |     |
| UC Phone Proxy Sessions        | 2                                        | <i>Optional licenses:</i>                          |      |      |      |                                                   | 2                                                  | <i>Optional licenses:</i> |      |      |     |     |
|                                |                                          | 24                                                 | 50   | 100  | 250  | 500                                               |                                                    | 24                        | 50   | 100  | 250 | 500 |
|                                |                                          | 750                                                | 1000 | 2000 | 3000 | 750                                               |                                                    | 1000                      | 2000 | 3000 |     |     |
| <b>VPN Licenses</b>            |                                          |                                                    |      |      |      |                                                   |                                                    |                           |      |      |     |     |
| Adv. Endpoint Assessment       | Disabled                                 | <i>Optional license: Available</i>                 |      |      |      | Disabled                                          | <i>Optional license: Available</i>                 |                           |      |      |     |     |
| AnyConnect for Cisco VPN Phone | Disabled                                 | <i>Optional license: Available</i>                 |      |      |      | Disabled                                          | <i>Optional license: Available</i>                 |                           |      |      |     |     |
| AnyConnect Essentials          | Disabled                                 | <i>Optional license: Available (5000 sessions)</i> |      |      |      | Disabled                                          | <i>Optional license: Available (5000 sessions)</i> |                           |      |      |     |     |
| AnyConnect for Mobile          | Disabled                                 | <i>Optional license: Available</i>                 |      |      |      | Disabled                                          | <i>Optional license: Available</i>                 |                           |      |      |     |     |

Table 3-12 ASA 5585-X with SSP-10 License Features (continued)

| Licenses                                 | Description (Base License in Plain Text)                                |                                           |     |      |      | Description (Security Plus License in Plain Text)                       |                                     |                                           |     |      |      |      |
|------------------------------------------|-------------------------------------------------------------------------|-------------------------------------------|-----|------|------|-------------------------------------------------------------------------|-------------------------------------|-------------------------------------------|-----|------|------|------|
| AnyConnect Premium (sessions)            | 2                                                                       | <i>Opt. Permanent or Time-based lic.:</i> |     |      |      |                                                                         | 2                                   | <i>Opt. Permanent or Time-based lic.:</i> |     |      |      |      |
|                                          |                                                                         | 10                                        | 25  | 50   | 100  | 250                                                                     |                                     | 10                                        | 25  | 50   | 100  | 250  |
|                                          |                                                                         | 500                                       | 750 | 1000 | 2500 | 5000                                                                    |                                     | 500                                       | 750 | 1000 | 2500 | 5000 |
|                                          | <i>Optional Shared licenses: Participant or Server. For the Server:</i> |                                           |     |      |      | <i>Optional Shared licenses: Participant or Server. For the Server:</i> |                                     |                                           |     |      |      |      |
|                                          | 500-50,000 in increments of 500                                         |                                           |     |      |      | 500-50,000 in increments of 500                                         |                                     |                                           |     |      |      |      |
|                                          | 50,000-545,000 in increments of 1000                                    |                                           |     |      |      | 50,000-545,000 in increments of 1000                                    |                                     |                                           |     |      |      |      |
| Total VPN (sessions), combined all types | 5000                                                                    |                                           |     |      |      | 5000                                                                    |                                     |                                           |     |      |      |      |
| Other VPN (sessions)                     | 5000                                                                    |                                           |     |      |      | 5000                                                                    |                                     |                                           |     |      |      |      |
| VPN Load Balancing                       | Supported                                                               |                                           |     |      |      | Supported                                                               |                                     |                                           |     |      |      |      |
| <b>General Licenses</b>                  |                                                                         |                                           |     |      |      |                                                                         |                                     |                                           |     |      |      |      |
| 10 GE I/O                                | Disabled; fiber ifcs run at 1 GE                                        |                                           |     |      |      | Enabled; fiber ifcs run at 10 GE                                        |                                     |                                           |     |      |      |      |
| Encryption                               | Base (DES)                                                              | <i>Opt. lic.: Strong (3DES/AES)</i>       |     |      |      | Base (DES)                                                              | <i>Opt. lic.: Strong (3DES/AES)</i> |                                           |     |      |      |      |
| Failover                                 | Active/Standby or Active/Active                                         |                                           |     |      |      | Active/Standby or Active/Active                                         |                                     |                                           |     |      |      |      |
| Interfaces of all types, Max.            | 4176                                                                    |                                           |     |      |      | 4176                                                                    |                                     |                                           |     |      |      |      |
| Security Contexts                        | 2                                                                       | <i>Optional licenses:</i>                 |     |      |      |                                                                         | 2                                   | <i>Optional licenses:</i>                 |     |      |      |      |
|                                          |                                                                         | 5                                         | 10  | 20   | 50   | 100                                                                     |                                     | 5                                         | 10  | 20   | 50   | 100  |
| VLANs, Maximum                           | 1024                                                                    |                                           |     |      |      | 1024                                                                    |                                     |                                           |     |      |      |      |

**ASA 5585-X with SSP-20**

If you have a No Payload Encryption model, then some of the features in Table 3-13 are not supported. See the “No Payload Encryption Models” section on page 3-30 for a list of unsupported features.

Table 3-13 ASA 5585-X with SSP-20 License Features

| Licenses                       | Description (Base License in Plain Text) |                                       |      |      |                     | Description (Security Plus Lic. in Plain Text) |                                       |                           |      |      |                     |      |
|--------------------------------|------------------------------------------|---------------------------------------|------|------|---------------------|------------------------------------------------|---------------------------------------|---------------------------|------|------|---------------------|------|
| <b>Firewall Licenses</b>       |                                          |                                       |      |      |                     |                                                |                                       |                           |      |      |                     |      |
| Botnet Traffic Filter          | Disabled                                 | <i>Opt. Time-based lic: Available</i> |      |      |                     | Disabled                                       | <i>Opt. Time-based lic: Available</i> |                           |      |      |                     |      |
| Firewall Conns, Concurrent     | 2,000,000                                |                                       |      |      |                     | 2,000,000                                      |                                       |                           |      |      |                     |      |
| GTP/GPRS                       | Disabled                                 | <i>Optional license: Available</i>    |      |      |                     | Disabled                                       | <i>Optional license: Available</i>    |                           |      |      |                     |      |
| Intercompany Media Eng.        | Disabled                                 | <i>Optional license: Available</i>    |      |      |                     | Disabled                                       | <i>Optional license: Available</i>    |                           |      |      |                     |      |
| UC Phone Proxy Sessions        | 2                                        | <i>Optional licenses:</i>             |      |      | 24                  | 50                                             | 2                                     | <i>Optional licenses:</i> |      |      | 24                  | 50   |
|                                |                                          | 100                                   | 250  | 500  | 750                 | 1000                                           |                                       | 100                       | 250  | 500  | 750                 | 1000 |
|                                |                                          | 2000                                  | 3000 | 5000 | 10,000 <sup>1</sup> |                                                |                                       | 2000                      | 3000 | 5000 | 10,000 <sup>1</sup> |      |
| <b>VPN Licenses</b>            |                                          |                                       |      |      |                     |                                                |                                       |                           |      |      |                     |      |
| Adv. Endpoint Assessment       | Disabled                                 | <i>Optional license: Available</i>    |      |      |                     | Disabled                                       | <i>Optional license: Available</i>    |                           |      |      |                     |      |
| AnyConnect for Cisco VPN Phone | Disabled                                 | <i>Optional license: Available</i>    |      |      |                     |                                                |                                       |                           |      |      |                     |      |

Table 3-13 ASA 5585-X with SSP-20 License Features (continued)

| Licenses                                 | Description (Base License in Plain Text)                                |                                                   |                                                      |      |        | Description (Security Plus Lic. in Plain Text)                          |                                                   |                                                      |      |        |
|------------------------------------------|-------------------------------------------------------------------------|---------------------------------------------------|------------------------------------------------------|------|--------|-------------------------------------------------------------------------|---------------------------------------------------|------------------------------------------------------|------|--------|
| AnyConnect Essentials                    | Disabled                                                                |                                                   | <i>Optional license: Available (10,000 sessions)</i> |      |        | Disabled                                                                |                                                   | <i>Optional license: Available (10,000 sessions)</i> |      |        |
| AnyConnect for Mobile                    | Disabled                                                                |                                                   | <i>Optional license: Available</i>                   |      |        | Disabled                                                                |                                                   | <i>Optional license: Available</i>                   |      |        |
| AnyConnect Premium (sessions)            | 2                                                                       | <i>Optional Permanent or Time-based licenses:</i> |                                                      |      |        | 2                                                                       | <i>Optional Permanent or Time-based licenses:</i> |                                                      |      |        |
|                                          |                                                                         |                                                   | 10                                                   | 25   |        |                                                                         | 10                                                | 25                                                   |      |        |
|                                          |                                                                         | 50                                                | 100                                                  | 250  | 500    |                                                                         | 750                                               |                                                      |      |        |
|                                          |                                                                         | 1000                                              | 2500                                                 | 5000 | 10,000 |                                                                         | 1000                                              | 2500                                                 | 5000 | 10,000 |
|                                          | <i>Optional Shared licenses: Participant or Server. For the Server:</i> |                                                   |                                                      |      |        | <i>Optional Shared licenses: Participant or Server. For the Server:</i> |                                                   |                                                      |      |        |
|                                          | 500-50,000 in increments of 500                                         |                                                   |                                                      |      |        | 500-50,000 in increments of 500                                         |                                                   |                                                      |      |        |
|                                          | 50,000-545,000 in increments of 1000                                    |                                                   |                                                      |      |        | 50,000-545,000 in increments of 1000                                    |                                                   |                                                      |      |        |
| Total VPN (sessions), combined all types | 10,000                                                                  |                                                   |                                                      |      |        | 10,000                                                                  |                                                   |                                                      |      |        |
| Other VPN (sessions)                     | 10,000                                                                  |                                                   |                                                      |      |        | 10,000                                                                  |                                                   |                                                      |      |        |
| VPN Load Balancing                       | Supported                                                               |                                                   |                                                      |      |        | Supported                                                               |                                                   |                                                      |      |        |
| <b>General Licenses</b>                  |                                                                         |                                                   |                                                      |      |        |                                                                         |                                                   |                                                      |      |        |
| 10 GE I/O                                | Disabled; fiber ifcs run at 1 GE                                        |                                                   |                                                      |      |        | Enabled; fiber ifcs run at 10 GE                                        |                                                   |                                                      |      |        |
| Encryption                               | Base (DES)                                                              |                                                   | <i>Opt. lic.: Strong (3DES/AES)</i>                  |      |        | Base (DES)                                                              |                                                   | <i>Opt. lic.: Strong (3DES/AES)</i>                  |      |        |
| Failover                                 | Active/Standby or Active/Active                                         |                                                   |                                                      |      |        | Active/Standby or Active/Active                                         |                                                   |                                                      |      |        |
| Interfaces of all types, Max.            | 4176                                                                    |                                                   |                                                      |      |        | 4176                                                                    |                                                   |                                                      |      |        |
| Security Contexts                        | 2                                                                       | <i>Optional licenses:</i>                         |                                                      |      |        | 2                                                                       | <i>Optional licenses:</i>                         |                                                      |      |        |
|                                          |                                                                         |                                                   | 5                                                    | 10   |        |                                                                         | 5                                                 | 10                                                   |      |        |
|                                          |                                                                         | 20                                                | 50                                                   | 100  | 250    |                                                                         | 20                                                | 50                                                   | 100  | 250    |
| VLANs, Maximum                           | 1024                                                                    |                                                   |                                                      |      |        | 1024                                                                    |                                                   |                                                      |      |        |

1. With the 10,000-session UC license, the total combined sessions can be 10,000, but the maximum number of Phone Proxy sessions is 5000.

#### ASA 5585-X with SSP-40 and -60

If you have a No Payload Encryption model, then some of the features in Table 3-14 are not supported. See the “No Payload Encryption Models” section on page 3-30 for a list of unsupported features.



#### Note

(8.4(2) and later) For SSP-40 and SSP-60, you can use two SSPs of the same level in the same chassis. Mixed-level SSPs are not supported (for example, an SSP-40 with an SSP-60 is not supported). Each SSP acts as an independent device, with separate configurations and management. You can use the two SSPs as a failover pair if desired. When using two SSPs in the chassis, VPN is not supported; note, however, that VPN has not been disabled.

Table 3-14 ASA 5585-X with SSP-40 and -60 License Features

| Licenses                 | Description (Base License in Plain Text) |                                               |
|--------------------------|------------------------------------------|-----------------------------------------------|
| <b>Firewall Licenses</b> |                                          |                                               |
| Botnet Traffic Filter    | Disabled                                 | <i>Optional Time-based license: Available</i> |

Table 3-14 ASA 5585-X with SSP-40 and -60 License Features (continued)

| Licenses                                 | Description (Base License in Plain Text)                                |    |                                                      |     |     |     |                                             |      |      |      |                     |  |
|------------------------------------------|-------------------------------------------------------------------------|----|------------------------------------------------------|-----|-----|-----|---------------------------------------------|------|------|------|---------------------|--|
| Firewall Conns, Concurrent               | 5585-X with SSP-40: 4,000,000                                           |    |                                                      |     |     |     | 5585-X with SSP-60: 10,000,000              |      |      |      |                     |  |
| GTP/GPRS                                 | Disabled                                                                |    | <i>Optional license: Available</i>                   |     |     |     |                                             |      |      |      |                     |  |
| Intercompany Media Eng.                  | Disabled                                                                |    | <i>Optional license: Available</i>                   |     |     |     |                                             |      |      |      |                     |  |
| UC Phone Proxy Sessions                  | 2                                                                       |    | <i>Optional licenses:</i>                            |     |     |     |                                             |      |      |      |                     |  |
|                                          | 24                                                                      | 50 | 100                                                  | 250 | 500 | 750 | 1000                                        | 2000 | 3000 | 5000 | 10,000 <sup>1</sup> |  |
| <b>VPN Licenses</b>                      |                                                                         |    |                                                      |     |     |     |                                             |      |      |      |                     |  |
| Adv. Endpoint Assessment                 | Disabled                                                                |    | <i>Optional license: Available</i>                   |     |     |     |                                             |      |      |      |                     |  |
| AnyConnect for Cisco VPN Phone           | Disabled                                                                |    | <i>Optional license: Available</i>                   |     |     |     |                                             |      |      |      |                     |  |
| AnyConnect Essentials                    | Disabled                                                                |    | <i>Optional license: Available (10,000 sessions)</i> |     |     |     |                                             |      |      |      |                     |  |
| AnyConnect for Mobile                    | Disabled                                                                |    | <i>Optional license: Available</i>                   |     |     |     |                                             |      |      |      |                     |  |
| AnyConnect Premium (sessions)            | 2                                                                       |    | <i>Optional Permanent or Time-based licenses:</i>    |     |     |     |                                             |      |      |      |                     |  |
|                                          | 10                                                                      | 25 | 50                                                   | 100 | 250 | 500 | 750                                         | 1000 | 2500 | 5000 | 10,000              |  |
|                                          | <i>Optional Shared licenses: Participant or Server. For the Server:</i> |    |                                                      |     |     |     |                                             |      |      |      |                     |  |
|                                          | <i>500-50,000 in increments of 500</i>                                  |    |                                                      |     |     |     | <i>50,000-545,000 in increments of 1000</i> |      |      |      |                     |  |
| Total VPN (sessions), combined all types | 10,000                                                                  |    |                                                      |     |     |     |                                             |      |      |      |                     |  |
| Other VPN (sessions)                     | 10,000                                                                  |    |                                                      |     |     |     |                                             |      |      |      |                     |  |
| VPN Load Balancing                       | Supported                                                               |    |                                                      |     |     |     |                                             |      |      |      |                     |  |
| <b>General Licenses</b>                  |                                                                         |    |                                                      |     |     |     |                                             |      |      |      |                     |  |
| 10 GE I/O                                | Enabled; fiber ifcs run at 10 GE                                        |    |                                                      |     |     |     |                                             |      |      |      |                     |  |
| Encryption                               | Base (DES)                                                              |    | <i>Optional license: Strong (3DES/AES)</i>           |     |     |     |                                             |      |      |      |                     |  |
| Failover                                 | Active/Standby or Active/Active                                         |    |                                                      |     |     |     |                                             |      |      |      |                     |  |
| Interfaces of all types, Max.            | 4176                                                                    |    |                                                      |     |     |     |                                             |      |      |      |                     |  |
| Security Contexts                        | 2                                                                       |    | <i>Optional licenses:</i>                            |     |     | 5   | 10                                          | 20   | 50   | 100  | 250                 |  |
| VLANs, Maximum                           | 1024                                                                    |    |                                                      |     |     |     |                                             |      |      |      |                     |  |

1. With the 10,000-session UC license, the total combined sessions can be 10,000, but the maximum number of Phone Proxy sessions is 5000.

## License Notes

Table 3-15 includes common footnotes shared by multiple tables in the “Licenses Per Model” section on page 3-1.

**Table 3-15 License Notes**

| License                        | Notes                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|--------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| AnyConnect Essentials          | <p>AnyConnect Essentials sessions include the following VPN types:</p> <ul style="list-style-type: none"> <li>• SSL VPN</li> <li>• IPsec remote access VPN using IKEv2</li> </ul> <p>This license does not support browser-based (clientless) SSL VPN access or Cisco Secure Desktop. For these features, activate an AnyConnect Premium license instead of the AnyConnect Essentials license.</p> <p><b>Note</b> With the AnyConnect Essentials license, VPN users can use a web browser to log in, and download and start (WebLaunch) the AnyConnect client.</p> <p>The AnyConnect client software offers the same set of client features, whether it is enabled by this license or an AnyConnect Premium license.</p> <p>The AnyConnect Essentials license cannot be active at the same time as the following licenses on a given ASA: AnyConnect Premium license (all types) or the Advanced Endpoint Assessment license. You can, however, run AnyConnect Essentials and AnyConnect Premium licenses on different ASAs in the same network.</p> <p>By default, the ASA uses the AnyConnect Essentials license, but you can disable it to use other licenses by using the <b>no anyconnect-essentials</b> command or in ASDM, using the <b>Configuration &gt; Remote Access VPN &gt; Network (Client) Access &gt; Advanced &gt; AnyConnect Essentials</b> pane.</p> <p>See also the “VPN License and Feature Compatibility” section on page 3-20.</p> |
| AnyConnect for Cisco VPN Phone | <p>In conjunction with an AnyConnect Premium license, this license enables access from hardware IP phones that have built in AnyConnect compatibility.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |

Table 3-15 License Notes (continued)

| License                   | Notes                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|---------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| AnyConnect for Mobile     | <p>This license provides access to the AnyConnect Client for touch-screen mobile devices running Windows Mobile 5.0, 6.0, and 6.1. We recommend using this license if you want to support mobile access to AnyConnect 2.3 and later versions. This license requires activation of one of the following licenses to specify the total number of SSL VPN sessions permitted: AnyConnect Essentials or AnyConnect Premium.</p> <p><b>Mobile Posture Support</b></p> <p>Enforcing remote access controls and gathering posture data from mobile devices requires an AnyConnect Mobile license and either an AnyConnect Essentials or AnyConnect Premium license to be installed on the ASA. Here is the functionality you receive based on the license you install.</p> <ul style="list-style-type: none"> <li>• AnyConnect Premium License Functionality <ul style="list-style-type: none"> <li>– Enforce DAP policies on supported mobile devices based on DAP attributes and any other existing endpoint attributes. This includes allowing or denying remote access from a mobile device.</li> </ul> </li> <li>• AnyConnect Essentials License Functionality <ul style="list-style-type: none"> <li>– Enable or disable mobile device access on a per group basis and to configure that feature using ASDM.</li> <li>– Display information about connected mobile devices via CLI or ASDM without having the ability to enforce DAP policies or deny or allow remote access to those mobile devices.</li> </ul> </li> </ul> |
| AnyConnect Premium        | <p>AnyConnect Premium sessions include the following VPN types:</p> <ul style="list-style-type: none"> <li>• SSL VPN</li> <li>• Clientless SSL VPN</li> <li>• IPsec remote access VPN using IKEv2</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| AnyConnect Premium Shared | <p>A shared license lets the ASA act as a shared license server for multiple client ASAs. The shared license pool is large, but the maximum number of sessions used by each individual ASA cannot exceed the maximum number listed for permanent licenses.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| Botnet Traffic Filter     | <p>Requires a Strong Encryption (3DES/AES) License to download the dynamic database.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| Encryption                | <p>The DES license cannot be disabled. If you have the 3DES license installed, DES is still available. To prevent the use of DES when you want to only use strong encryption, be sure to configure any relevant commands to use only string encryption.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| Failover, Active/Active   | <p>You cannot use Active/Active failover and VPN; if you want to use VPN, use Active/Standby failover.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |

Table 3-15 License Notes (continued)

| License                                  | Notes                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Intercompany Media Engine                | <p>When you enable the Intercompany Media Engine (IME) license, you can use TLS proxy sessions up to the configured TLS proxy limit. If you also have a Unified Communications (UC) license installed that is higher than the default TLS proxy limit, then the ASA sets the limit to be the UC license limit plus an additional number of sessions depending on your model. You can manually configure the TLS proxy limit using the <b>tls-proxy maximum-sessions</b> command or in ASDM, using the <b>Configuration &gt; Firewall &gt; Unified Communications &gt; TLS Proxy</b> pane. To view the limits of your model, enter the <b>tls-proxy maximum-sessions ?</b> command. If you also install the UC license, then the TLS proxy sessions available for UC are also available for IME sessions. For example, if the configured limit is 1000 TLS proxy sessions, and you purchase a 750-session UC license, then the first 250 IME sessions do not affect the sessions available for UC. If you need more than 250 sessions for IME, then the remaining 750 sessions of the platform limit are used on a first-come, first-served basis by UC and IME.</p> <ul style="list-style-type: none"> <li>For a license part number ending in “K8”, TLS proxy sessions are limited to 1000.</li> <li>For a license part number ending in “K9”, the TLS proxy limit depends on your configuration and the platform model.</li> </ul> <p><b>Note</b> K8 and K9 refer to whether the license is restricted for export: K8 is unrestricted, and K9 is restricted.</p> <p>You might also use SRTP encryption sessions for your connections:</p> <ul style="list-style-type: none"> <li>For a K8 license, SRTP sessions are limited to 250.</li> <li>For a K9 license, there is no limit.</li> </ul> <p><b>Note</b> Only calls that require encryption/decryption for media are counted toward the SRTP limit; if passthrough is set for the call, even if both legs are SRTP, they do not count toward the limit.</p> |
| Interfaces of all types, Max.            | The maximum number of combined interfaces; for example, VLANs, physical, redundant, bridge group, and EtherChannel interfaces.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| IPS Module                               | For failover pairs, both units need an IPS module license.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| Other VPN                                | <p>Other VPN sessions include the following VPN types:</p> <ul style="list-style-type: none"> <li>IPsec remote access VPN using IKEv1</li> <li>IPsec site-to-site VPN using IKEv1</li> <li>IPsec site-to-site VPN using IKEv2</li> </ul> <p>This license is included in the Base license.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| Total VPN (sessions), combined all types | <ul style="list-style-type: none"> <li>Although the maximum VPN sessions add up to more than the maximum VPN AnyConnect and Other VPN sessions, the combined sessions should not exceed the VPN session limit. If you exceed the maximum VPN sessions, you can overload the ASA, so be sure to size your network appropriately.</li> <li>If you start a clientless SSL VPN session and then start an AnyConnect client session from the portal, 1 session is used in total. However, if you start the AnyConnect client first (from a standalone client, for example) and then log into the clientless SSL VPN portal, then 2 sessions are used.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |

Table 3-15 License Notes (continued)

| License                 | Notes                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|-------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| UC Phone Proxy sessions | <p>The following applications use TLS proxy sessions for their connections. Each TLS proxy session used by these applications (and only these applications) is counted against the UC license limit:</p> <ul style="list-style-type: none"> <li>• Phone Proxy</li> <li>• Presence Federation Proxy</li> <li>• Encrypted Voice Inspection</li> </ul> <p>Other applications that use TLS proxy sessions do not count toward the UC limit, for example, Mobility Advantage Proxy (which does not require a license) and IME (which requires a separate IME license).</p> <p>Some UC applications might use multiple sessions for a connection. For example, if you configure a phone with a primary and backup Cisco Unified Communications Manager, there are 2 TLS proxy connections, so 2 UC Proxy sessions are used.</p> <p>You independently set the TLS proxy limit using the <b>tls-proxy maximum-sessions</b> command or in ASDM, using the <b>Configuration &gt; Firewall &gt; Unified Communications &gt; TLS Proxy</b> pane. To view the limits of your model, enter the <b>tls-proxy maximum-sessions ?</b> command. When you apply a UC license that is higher than the default TLS proxy limit, the ASA automatically sets the TLS proxy limit to match the UC limit. The TLS proxy limit takes precedence over the UC license limit; if you set the TLS proxy limit to be less than the UC license, then you cannot use all of the sessions in your UC license.</p> <p><b>Note</b> For license part numbers ending in “K8” (for example, licenses under 250 users), TLS proxy sessions are limited to 1000. For license part numbers ending in “K9” (for example, licenses 250 users or larger), the TLS proxy limit depends on the configuration, up to the model limit. K8 and K9 refer to whether the license is restricted for export: K8 is unrestricted, and K9 is restricted.</p> <p>If you clear the configuration (using the <b>clear configure all</b> command, for example), then the TLS proxy limit is set to the default for your model; if this default is lower than the UC license limit, then you see an error message to use the <b>tls-proxy maximum-sessions</b> command to raise the limit again (in ASDM, use the <b>TLS Proxy</b> pane). If you use failover and enter the <b>write standby</b> command or in ASDM, use <b>File &gt; Save Running Configuration to Standby Unit</b> on the primary unit to force a configuration synchronization, the <b>clear configure all</b> command is generated on the secondary unit automatically, so you may see the warning message on the secondary unit. Because the configuration synchronization restores the TLS proxy limit set on the primary unit, you can ignore the warning.</p> <p>You might also use SRTP encryption sessions for your connections:</p> <ul style="list-style-type: none"> <li>• For K8 licenses, SRTP sessions are limited to 250.</li> <li>• For K9 licenses, there is not limit.</li> </ul> <p><b>Note</b> Only calls that require encryption/decryption for media are counted toward the SRTP limit; if passthrough is set for the call, even if both legs are SRTP, they do not count toward the limit.</p> |
| VPN Load Balancing      | VPN load balancing requires a Strong Encryption (3DES/AES) License.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |

## VPN License and Feature Compatibility

Table 3-16 shows how the VPN licenses and features can combine.

For a detailed list of the features supported by the AnyConnect Essentials license and AnyConnect Premium license, see *AnyConnect Secure Mobility Client Features, Licenses, and OSs*:

- Version 3.0:  
[http://www.cisco.com/en/US/docs/security/vpn\\_client/anyconnect/anyconnect30/feature/guide/anyconnect30features.html](http://www.cisco.com/en/US/docs/security/vpn_client/anyconnect/anyconnect30/feature/guide/anyconnect30features.html)
- Version 2.5:  
[http://www.cisco.com/en/US/docs/security/vpn\\_client/anyconnect/anyconnect25/feature/guide/anyconnect25features.html](http://www.cisco.com/en/US/docs/security/vpn_client/anyconnect/anyconnect25/feature/guide/anyconnect25features.html)

**Table 3-16** VPN License and Feature Compatibility

| Supported with:                    | Enable one of the following licenses: <sup>1</sup> |                    |
|------------------------------------|----------------------------------------------------|--------------------|
|                                    | AnyConnect Essentials                              | AnyConnect Premium |
| AnyConnect for Cisco VPN Phone     | No                                                 | Yes                |
| AnyConnect for Mobile <sup>2</sup> | Yes                                                | Yes                |
| Advanced Endpoint Assessment       | No                                                 | Yes                |
| AnyConnect Premium Shared          | No                                                 | Yes                |
| Client-based SSL VPN               | Yes                                                | Yes                |
| Browser-based (clientless) SSL VPN | No                                                 | Yes                |
| IPsec VPN                          | Yes                                                | Yes                |
| VPN Load Balancing                 | Yes                                                | Yes                |
| Cisco Secure Desktop               | No                                                 | Yes                |

1. You can only have one license type active, either the AnyConnect Essentials license or the AnyConnect Premium license. By default, the ASA includes an AnyConnect Premium license for 2 sessions. If you install the AnyConnect Essentials license, then it is used by default. See the **no anyconnect-essentials** command to enable the Premium license instead.
2. Mobile Posture support is different for the AnyConnect Essentials vs. the AnyConnect Premium license. See Table 3-15 on page 3-16 for details.

## Information About Feature Licenses

A license specifies the options that are enabled on a given ASA. It is represented by an activation key that is a 160-bit (5 32-bit words or 20 bytes) value. This value encodes the serial number (an 11 character string) and the enabled features.

This section includes the following topics:

- [Preinstalled License, page 3-21](#)
- [Permanent License, page 3-21](#)
- [Time-Based Licenses, page 3-21](#)
- [Shared AnyConnect Premium Licenses, page 3-23](#)
- [Failover Licenses \(8.3\(1\) and Later\), page 3-28](#)
- [No Payload Encryption Models, page 3-30](#)

- [Licenses FAQ, page 3-30](#)

## Preinstalled License

By default, your ASA ships with a license already installed. This license might be the Base License, to which you want to add more licenses, or it might already have all of your licenses installed, depending on what you ordered and what your vendor installed for you. See the [“Monitoring Licenses” section on page 3-38](#) section to determine which licenses you have installed.

## Permanent License

You can have one permanent activation key installed. The permanent activation key includes all licensed features in a single key. If you also install time-based licenses, the ASA combines the permanent and time-based licenses into a running license. See the [“How Permanent and Time-Based Licenses Combine” section on page 3-22](#) for more information about how the ASA combines the licenses.

## Time-Based Licenses

In addition to permanent licenses, you can purchase time-based licenses or receive an evaluation license that has a time-limit. For example, you might buy a time-based AnyConnect Premium license to handle short-term surges in the number of concurrent SSL VPN users, or you might order a Botnet Traffic Filter time-based license that is valid for 1 year.

This section includes the following topics:

- [Time-Based License Activation Guidelines, page 3-21](#)
- [How the Time-Based License Timer Works, page 3-21](#)
- [How Permanent and Time-Based Licenses Combine, page 3-22](#)
- [Stacking Time-Based Licenses, page 3-23](#)
- [Time-Based License Expiration, page 3-23](#)

## Time-Based License Activation Guidelines

- You can install multiple time-based licenses, including multiple licenses for the same feature. However, only one time-based license per feature can be *active* at a time. The inactive license remains installed, and ready for use. For example, if you install a 1000-session AnyConnect Premium license, and a 2500-session AnyConnect Premium license, then only one of these licenses can be active.
- If you activate an evaluation license that has multiple features in the key, then you cannot also activate another time-based license for one of the included features. For example, if an evaluation license includes the Botnet Traffic Filter and a 1000-session AnyConnect Premium license, you cannot also activate a standalone time-based 2500-session AnyConnect Premium license.

## How the Time-Based License Timer Works

- The timer for the time-based license starts counting down when you activate it on the ASA.

- If you stop using the time-based license before it times out, then the timer halts. The timer only starts again when you reactivate the time-based license.
- If the time-based license is active, and you shut down the ASA, then the timer continues to count down. If you intend to leave the ASA in a shut down state for an extended period of time, then you should deactivate the time-based license before you shut down.

**Note**

We suggest you do not change the system clock after you install the time-based license. If you set the clock to be a later date, then if you reload, the ASA checks the system clock against the original installation time, and assumes that more time has passed than has actually been used. If you set the clock back, and the actual running time is greater than the time between the original installation time and the system clock, then the license immediately expires after a reload.

## How Permanent and Time-Based Licenses Combine

When you activate a time-based license, then features from both permanent and time-based licenses combine to form the running license. How the permanent and time-based licenses combine depends on the type of license. [Table 3-17](#) lists the combination rules for each feature license.

**Note**

Even when the permanent license is used, if the time-based license is active, it continues to count down.

**Table 3-17** Time-Based License Combination Rules

| Time-Based Feature                    | Combined License Rule                                                                                                                                                                                                                                                                                                                                                                            |
|---------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| AnyConnect Premium Sessions           | The higher value is used, either time-based or permanent. For example, if the permanent license is 1000 sessions, and the time-based license is 2500 sessions, then 2500 sessions are enabled. Typically, you will not install a time-based license that has less capability than the permanent license, but if you do so, then the permanent license is used.                                   |
| Unified Communications Proxy Sessions | The time-based license sessions are added to the permanent sessions, up to the platform limit. For example, if the permanent license is 2500 sessions, and the time-based license is 1000 sessions, then 3500 sessions are enabled for as long as the time-based license is active.                                                                                                              |
| Security Contexts                     | The time-based license contexts are added to the permanent contexts, up to the platform limit. For example, if the permanent license is 10 contexts, and the time-based license is 20 contexts, then 30 contexts are enabled for as long as the time-based license is active.                                                                                                                    |
| Botnet Traffic Filter                 | There is no permanent Botnet Traffic Filter license available; the time-based license is used.                                                                                                                                                                                                                                                                                                   |
| All Others                            | The higher value is used, either time-based or permanent. For licenses that have a status of enabled or disabled, then the license with the enabled status is used. For licenses with numerical tiers, the higher value is used. Typically, you will not install a time-based license that has less capability than the permanent license, but if you do so, then the permanent license is used. |

To view the combined license, see the [“Monitoring Licenses”](#) section on page 3-38.

## Stacking Time-Based Licenses

In many cases, you might need to renew your time-based license and have a seamless transition from the old license to the new one. For features that are only available with a time-based license, it is especially important that the license not expire before you can apply the new license. The ASA allows you to *stack* time-based licenses so you do not have to worry about the license expiring or about losing time on your licenses because you installed the new one early.

When you install an identical time-based license as one already installed, then the licenses are combined, and the duration equals the combined duration.

For example:

1. You install a 52-week Botnet Traffic Filter license, and use the license for 25 weeks (27 weeks remain).
2. You then purchase another 52-week Botnet Traffic Filter license. When you install the second license, the licenses combine to have a duration of 79 weeks (52 weeks plus 27 weeks).

Similarly:

1. You install an 8-week 1000-session AnyConnect Premium license, and use it for 2 weeks (6 weeks remain).
2. You then install another 8-week 1000-session license, and the licenses combine to be 1000-sessions for 14 weeks (8 weeks plus 6 weeks).

If the licenses are not identical (for example, a 1000-session AnyConnect Premium license vs. a 2500-session license), then the licenses are *not* combined. Because only one time-based license per feature can be active, only one of the licenses can be active. See the [“Activating or Deactivating Keys” section on page 3-33](#) for more information about activating licenses.

Although non-identical licenses do not combine, when the current license expires, the ASA automatically activates an installed license of the same feature if available. See the [“Time-Based License Expiration” section on page 3-23](#) for more information.

## Time-Based License Expiration

When the current license for a feature expires, the ASA automatically activates an installed license of the same feature if available. If there are no other time-based licenses available for the feature, then the permanent license is used.

If you have more than one additional time-based license installed for a feature, then the ASA uses the first license it finds; which license is used is not user-configurable and depends on internal operations. If you prefer to use a different time-based license than the one the ASA activated, then you must manually activate the license you prefer. See the [“Activating or Deactivating Keys” section on page 3-33](#).

For example, you have a time-based 2500-session AnyConnect Premium license (active), a time-based 1000-session AnyConnect Premium license (inactive), and a permanent 500-session AnyConnect Premium license. While the 2500-session license expires, the ASA activates the 1000-session license. After the 1000-session license expires, the ASA uses the 500-session permanent license.

## Shared AnyConnect Premium Licenses

A shared license lets you purchase a large number of AnyConnect Premium sessions and share the sessions as needed among a group of ASAs by configuring one of the ASAs as a shared licensing server, and the rest as shared licensing participants. This section describes how a shared license works and includes the following topics:

- [Information About the Shared Licensing Server and Participants, page 3-24](#)
- [Communication Issues Between Participant and Server, page 3-25](#)
- [Information About the Shared Licensing Backup Server, page 3-25](#)
- [Failover and Shared Licenses, page 3-25](#)
- [Maximum Number of Participants, page 3-27](#)

## Information About the Shared Licensing Server and Participants

The following steps describe how shared licenses operate:

1. Decide which ASA should be the shared licensing server, and purchase the shared licensing server license using that device serial number.
2. Decide which ASAs should be shared licensing participants, including the shared licensing backup server, and obtain a shared licensing participant license for each device, using each device serial number.
3. (Optional) Designate a second ASA as a shared licensing backup server. You can only specify one backup server.




---

**Note** The shared licensing backup server only needs a participant license.

---

4. Configure a shared secret on the shared licensing server; any participants with the shared secret can use the shared license.
5. When you configure the ASA as a participant, it registers with the shared licensing server by sending information about itself, including the local license and model information.




---

**Note** The participant needs to be able to communicate with the server over the IP network; it does not have to be on the same subnet.

---

6. The shared licensing server responds with information about how often the participant should poll the server.
7. When a participant uses up the sessions of the local license, it sends a request to the shared licensing server for additional sessions in 50-session increments.
8. The shared licensing server responds with a shared license. The total sessions used by a participant cannot exceed the maximum sessions for the platform model.




---

**Note** The shared licensing server can also participate in the shared license pool. It does not need a participant license as well as the server license to participate.

---

- a. If there are not enough sessions left in the shared license pool for the participant, then the server responds with as many sessions as available.
  - b. The participant continues to send refresh messages requesting more sessions until the server can adequately fulfill the request.
9. When the load is reduced on a participant, it sends a message to the server to release the shared sessions.

**Note**

---

The ASA uses SSL between the server and participant to encrypt all communications.

---

## Communication Issues Between Participant and Server

See the following guidelines for communication issues between the participant and server:

- If a participant fails to send a refresh after 3 times the refresh interval, then the server releases the sessions back into the shared license pool.
- If the participant cannot reach the license server to send the refresh, then the participant can continue to use the shared license it received from the server for up to 24 hours.
- If the participant is still not able to communicate with a license server after 24 hours, then the participant releases the shared license, even if it still needs the sessions. The participant leaves existing connections established, but cannot accept new connections beyond the license limit.
- If a participant reconnects with the server before 24 hours expires, but after the server expired the participant sessions, then the participant needs to send a new request for the sessions; the server responds with as many sessions as can be reassigned to that participant.

## Information About the Shared Licensing Backup Server

The shared licensing backup server must register successfully with the main shared licensing server before it can take on the backup role. When it registers, the main shared licensing server syncs server settings as well as the shared license information with the backup, including a list of registered participants and the current license usage. The main server and backup server sync the data at 10 second intervals. After the initial sync, the backup server can successfully perform backup duties, even after a reload.

When the main server goes down, the backup server takes over server operation. The backup server can operate for up to 30 continuous days, after which the backup server stops issuing sessions to participants, and existing sessions time out. Be sure to reinstate the main server within that 30-day period. Critical-level syslog messages are sent at 15 days, and again at 30 days.

When the main server comes back up, it syncs with the backup server, and then takes over server operation.

When the backup server is not active, it acts as a regular participant of the main shared licensing server.

**Note**

---

When you first launch the main shared licensing server, the backup server can only operate independently for 5 days. The operational limit increases day-by-day, until 30 days is reached. Also, if the main server later goes down for any length of time, the backup server operational limit decrements day-by-day. When the main server comes back up, the backup server starts to increment again day-by-day. For example, if the main server is down for 20 days, with the backup server active during that time, then the backup server will only have a 10-day limit left over. The backup server “recharges” up to the maximum 30 days after 20 more days as an inactive backup. This recharging function is implemented to discourage misuse of the shared license.

---

## Failover and Shared Licenses

This section describes how shared licenses interact with failover and includes the following topics:

- [“Failover and Shared License Servers” section on page 3-26](#)

- “Failover and Shared License Participants” section on page 3-27

## Failover and Shared License Servers

This section describes how the main server and backup server interact with failover. Because the shared licensing server is also performing normal duties as the ASA, including performing functions such as being a VPN gateway and firewall, then you might need to configure failover for the main and backup shared licensing servers for increased reliability.

**Note**

---

The backup server mechanism is separate from, but compatible with, failover.

---


Shared licenses are supported only in single context mode, so Active/Active failover is not supported.

---

For Active/Standby failover, the primary unit acts as the main shared licensing server, and the standby unit acts as the main shared licensing server after failover. The standby unit does *not* act as the backup shared licensing server. Instead, you can have a second pair of units acting as the backup server, if desired.

For example, you have a network with 2 failover pairs. Pair #1 includes the main licensing server. Pair #2 includes the backup server. When the primary unit from Pair #1 goes down, the standby unit immediately becomes the new main licensing server. The backup server from Pair #2 never gets used. Only if both units in Pair #1 go down does the backup server in Pair #2 come into use as the shared licensing server. If Pair #1 remains down, and the primary unit in Pair #2 goes down, then the standby unit in Pair #2 comes into use as the shared licensing server (see [Figure 3-1](#)).

Figure 3-1 Failover and Shared License Servers

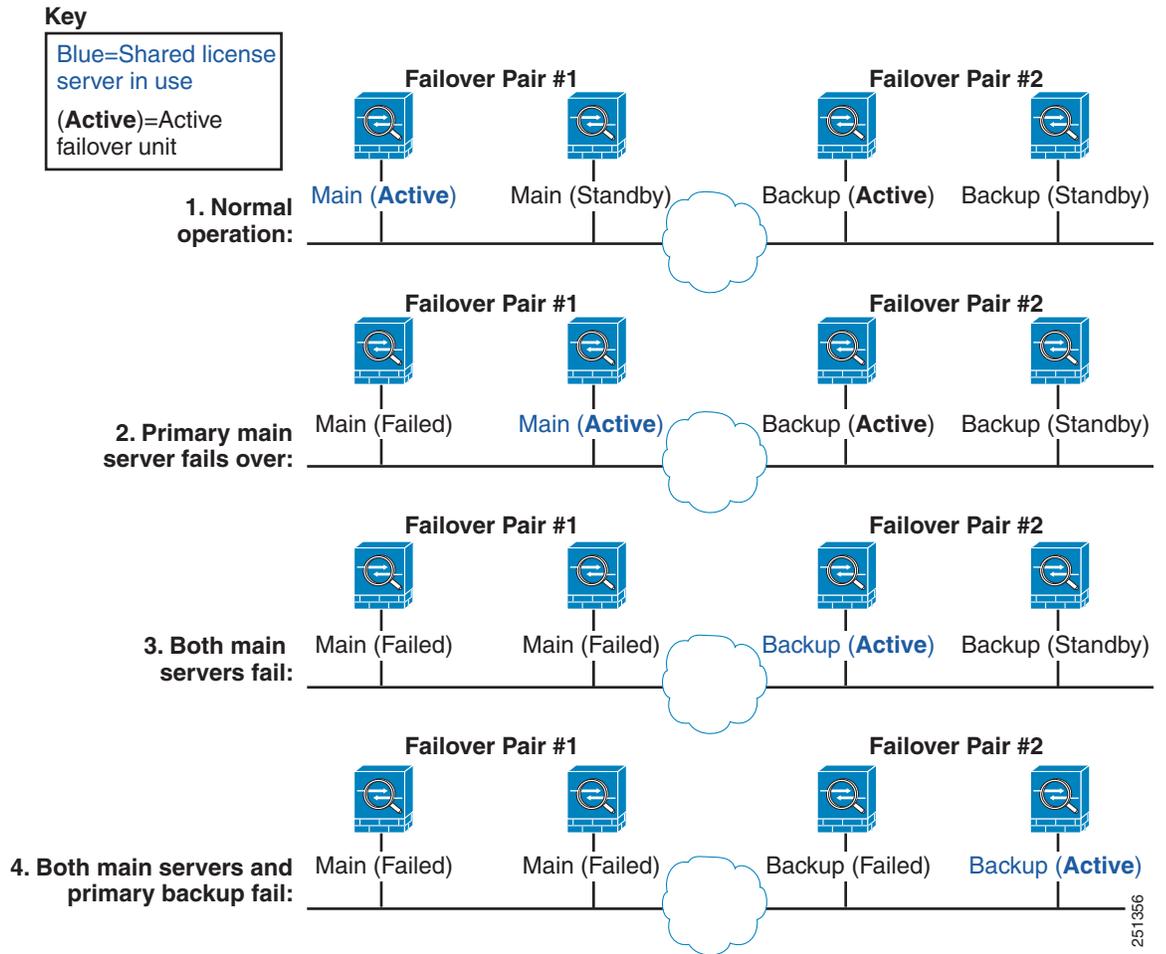

The standby backup server shares the same operating limits as the primary backup server; if the standby unit becomes active, it continues counting down where the primary unit left off. See the “[Information About the Shared Licensing Backup Server](#)” section on page 3-25 for more information.

### Failover and Shared License Participants

For participant pairs, both units register with the shared licensing server using separate participant IDs. The active unit syncs its participant ID with the standby unit. The standby unit uses this ID to generate a transfer request when it switches to the active role. This transfer request is used to move the shared sessions from the previously active unit to the new active unit.

### Maximum Number of Participants

The ASA does not limit the number of participants for the shared license; however, a very large shared network could potentially affect the performance on the licensing server. In this case, you can increase the delay between participant refreshes, or you can create two shared networks.

## Failover Licenses (8.3(1) and Later)

With some exceptions, failover units do not require the same license on each unit. For earlier versions, see the licensing document for your version.

This section includes the following topics:

- [Failover License Requirements and Exceptions, page 3-28](#)
- [How Failover Licenses Combine, page 3-28](#)
- [Loss of Communication Between Failover Units, page 3-29](#)
- [Upgrading Failover Pairs, page 3-30](#)

### Failover License Requirements and Exceptions

Failover units do not require the same license on each unit.

Older versions of ASA software required that the licenses match on each unit. Starting with Version 8.3(1), you no longer need to install identical licenses. Typically, you buy a license only for the primary unit; for Active/Standby failover, the secondary unit inherits the primary license when it becomes active. If you have licenses on both units, they combine into a single running failover cluster license.

The exceptions to this rule include:

- Security Plus license for the ASA 5505, 5510, and 5512-X—The Base license does not support failover, so you cannot enable failover on a standby unit that only has the Base license.
- IPS module license for the ASA 5500-X—You must purchase an IPS module license for each unit, just as you would need to purchase a hardware module for each unit for other models.
- Encryption license—Both units must have the same encryption license.

**Note**

---

A valid permanent key is required; in rare instances, your authentication key can be removed. If your key consists of all 0's, then you need to reinstall a valid authentication key before failover can be enabled.

---

### How Failover Licenses Combine

For failover pairs, the licenses on each unit are combined into a single running failover cluster license. For Active/Active failover, the license usage of the two units combined cannot exceed the failover cluster license.

If you buy separate licenses for the primary and secondary unit, then the combined license uses the following rules:

- For licenses that have numerical tiers, such as the number of sessions, the values from both the primary and secondary licenses are combined up to the platform limit. If both licenses in use are time-based, then the licenses count down simultaneously.

For example:

- You have two ASAs with 10 AnyConnect Premium sessions installed on each; the licenses will be combined for a total of 20 AnyConnect Premium sessions.
- You have two ASA 5520s with 500 AnyConnect Premium sessions each; because the platform limit is 750, the combined license allows 750 AnyConnect Premium sessions.

**Note**

In the above example, if the AnyConnect Premium licenses are time-based, you might want to disable one of the licenses so you do not “waste” a 500 session license from which you can only use 250 sessions because of the platform limit.

- You have two ASA 5540s, one with 20 contexts and the other with 10 contexts; the combined license allows 30 contexts. For Active/Active failover, one unit can use 18 contexts and the other unit can use 12 contexts, for example, for a total of 30; the combined usage cannot exceed the failover cluster license (in this case, 30).
- For licenses that have a status of enabled or disabled, then the license with the enabled status is used.
- For time-based licenses that are enabled or disabled (and do not have numerical tiers), the duration is the combined duration of both licenses. The primary unit counts down its license first, and when it expires, the secondary unit starts counting down its license. This rule also applies to Active/Active failover, even though both units are actively operating.

For example, if you have 48 weeks left on the Botnet Traffic Filter license on both units, then the combined duration is 96 weeks.

To view the combined license, see the [“Monitoring Licenses” section on page 3-38](#).

## Loss of Communication Between Failover Units

If the failover units lose communication for more than 30 days, then each unit reverts to the license installed locally. During the 30-day grace period, the combined running license continues to be used by both units.

If you restore communication during the 30-day grace period, then for time-based licenses, the time elapsed is subtracted from the primary license; if the primary license becomes expired, only then does the secondary license start to count down.

If you do not restore communication during the 30-day period, then for time-based licenses, time is subtracted from both primary and secondary licenses, if installed. They are treated as two separate licenses and do not benefit from the failover combined license. The time elapsed includes the 30-day grace period.

For example:

1. You have a 52-week Botnet Traffic Filter license installed on both units. The combined running license allows a total duration of 104 weeks.
2. The units operate as a failover unit for 10 weeks, leaving 94 weeks on the combined license (42 weeks on the primary, and 52 weeks on the secondary).
3. If the units lose communication (for example the primary unit fails over to the secondary unit), the secondary unit continues to use the combined license, and continues to count down from 94 weeks.
4. The time-based license behavior depends on when communication is restored:
  - Within 30 days—The time elapsed is subtracted from the primary unit license. In this case, communication is restored after 4 weeks. Therefore, 4 weeks are subtracted from the primary license leaving 90 weeks combined (38 weeks on the primary, and 52 weeks on the secondary).
  - After 30 days—The time elapsed is subtracted from both units. In this case, communication is restored after 6 weeks. Therefore, 6 weeks are subtracted from both the primary and secondary licenses, leaving 84 weeks combined (36 weeks on the primary, and 46 weeks on the secondary).

## Upgrading Failover Pairs

Because failover pairs do not require the same license on both units, you can apply new licenses to each unit without any downtime. If you apply a permanent license that requires a reload (see [Table 3-18 on page 3-34](#)), then you can fail over to the other unit while you reload. If both units require reloading, then you can reload them separately so you have no downtime.

## No Payload Encryption Models

You can purchase some models with No Payload Encryption. For export to some countries, payload encryption cannot be enabled on the Cisco ASA 5500 series. The ASA software senses a No Payload Encryption model, and disables the following features:

- Unified Communications
- VPN

You can still install the Strong Encryption (3DES/AES) license for use with management connections. For example, you can use ASDM HTTPS/SSL, SSHv2, Telnet and SNMPv3. You can also download the dynamic database for the Botnet Traffic Filer (which uses SSL).

When you view the license (see the [“Monitoring Licenses” section on page 3-38](#)), VPN and Unified Communications licenses will not be listed.

## Licenses FAQ

- Q.** Can I activate multiple time-based licenses, for example, AnyConnect Premium and Botnet Traffic Filter?
- A.** Yes. You can use one time-based license per feature at a time.
- Q.** Can I “stack” time-based licenses so that when the time limit runs out, it will automatically use the next license?
- A.** Yes. For identical licenses, the time limit is combined when you install multiple time-based licenses. For non-identical licenses (for example, a 1000-session AnyConnect Premium license and a 2500-session license), the ASA automatically activates the next time-based license it finds for the feature.
- Q.** Can I install a new permanent license while maintaining an active time-based license?
- A.** Yes. Activating a permanent license does not affect time-based licenses.
- Q.** For failover, can I use a shared licensing server as the primary unit, and the shared licensing backup server as the secondary unit?
- A.** No. The secondary unit has the same running license as the primary unit; in the case of the shared licensing server, they require a server license. The backup server requires a participant license. The backup server can be in a separate failover pair of two backup servers.
- Q.** Do I need to buy the same licenses for the secondary unit in a failover pair?

- A.** No. Starting with Version 8.3(1), you do not have to have matching licenses on both units. Typically, you buy a license only for the primary unit; the secondary unit inherits the primary license when it becomes active. In the case where you also have a separate license on the secondary unit (for example, if you purchased matching licenses for pre-8.3 software), the licenses are combined into a running failover cluster license, up to the model limits.
- Q.** Can I use a time-based or permanent AnyConnect Premium license in addition to a shared AnyConnect Premium license?
- A.** Yes. The shared license is used only after the sessions from the locally installed license (time-based or permanent) are used up. **Note:** On the shared licensing server, the permanent AnyConnect Premium license is not used; you can however use a time-based license at the same time as the shared licensing server license. In this case, the time-based license sessions are available for local AnyConnect Premium sessions only; they cannot be added to the shared licensing pool for use by participants.

## Guidelines and Limitations

See the following guidelines for activation keys.

### Context Mode Guidelines

- In multiple context mode, apply the activation key in the system execution space.
- Shared licenses are not supported in multiple context mode.

### Firewall Mode Guidelines

All license types are available in both routed and transparent mode.

### Failover Guidelines

- Shared licenses are not supported in Active/Active mode. See the [“Failover and Shared Licenses” section on page 3-25](#) for more information.
- Failover units do not require the same license on each unit.

Older versions of ASA software required that the licenses match on each unit. Starting with Version 8.3(1), you no longer need to install identical licenses. Typically, you buy a license only for the primary unit; for Active/Standby failover, the secondary unit inherits the primary license when it becomes active. If you have licenses on both units, they combine into a single running failover cluster license.



---

**Note** Failover units do require the same RAM on both units.

---

- For the ASA 5505 and 5510, both units require the Security Plus license; the Base license does not support failover, so you cannot enable failover on a standby unit that only has the Base license.

### Upgrade and Downgrade Guidelines

Your activation key remains compatible if you upgrade to the latest version from any previous version. However, you might have issues if you want to maintain downgrade capability:

- Downgrading to Version 8.1 or earlier—After you upgrade, if you activate additional feature licenses that were introduced *before* 8.2, then the activation key continues to be compatible with earlier versions if you downgrade. However if you activate feature licenses that were introduced in 8.2 *or later*, then the activation key is not backward compatible. If you have an incompatible license key, then see the following guidelines:
  - If you previously entered an activation key in an earlier version, then the ASA uses that key (without any of the new licenses you activated in Version 8.2 or later).
  - If you have a new system and do not have an earlier activation key, then you need to request a new activation key compatible with the earlier version.
- Downgrading to Version 8.2 or earlier—Version 8.3 introduced more robust time-based key usage as well as failover license changes:
  - If you have more than one time-based activation key active, when you downgrade, only the most recently activated time-based key can be active. Any other keys are made inactive. If the last time-based license is for a feature introduced in 8.3, then that license still remains the active license even though it cannot be used in earlier versions. Reenter the permanent key or a valid time-based key.
  - If you have mismatched licenses on a failover pair, then downgrading will disable failover. Even if the keys are matching, the license used will no longer be a combined license.
  - If you have one time-based license installed, but it is for a feature introduced in 8.3, then after you downgrade, that time-based license remains active. You need to reenter the permanent key to disable the time-based license.

#### Additional Guidelines and Limitations

- The activation key is not stored in your configuration file; it is stored as a hidden file in flash memory.
- The activation key is tied to the serial number of the device. Feature licenses cannot be transferred between devices (except in the case of a hardware failure). If you have to replace your device due to a hardware failure and it is covered by Cisco TAC, contact the Cisco Licensing Team to have your existing license transferred to the new serial number. The Cisco Licensing Team will ask for the Product Authorization Key reference number and existing serial number.
- Once purchased, you cannot return a license for a refund or for an upgraded license.
- Although you can activate all license types, some features are incompatible with each other; for example, multiple context mode and VPN. In the case of the AnyConnect Essentials license, the license is incompatible with the following licenses: AnyConnect Premium license, shared AnyConnect Premium license, and Advanced Endpoint Assessment license. By default, the AnyConnect Essentials license is used instead of the above licenses, but you can disable the AnyConnect Essentials license in the configuration to restore use of the other licenses using the **no anyconnect-essentials** command.

## Configuring Licenses

This section includes the following topics:

- [Obtaining an Activation Key, page 3-33](#)
- [Activating or Deactivating Keys, page 3-33](#)
- [Configuring a Shared License, page 3-35](#)

## Obtaining an Activation Key

To obtain an activation key, you need a Product Authorization Key, which you can purchase from your Cisco account representative. You need to purchase a separate Product Activation Key for each feature license. For example, if you have the Base License, you can purchase separate keys for Advanced Endpoint Assessment and for additional AnyConnect Premium sessions.

After obtaining the Product Authorization Keys, register them on Cisco.com by performing the following steps.

### Detailed Steps

---

**Step 1** Obtain the serial number for your ASA by entering the following command.

```
hostname# show activation-key
```

**Step 2** If you are not already registered with Cisco.com, create an account.

**Step 3** Go to the following licensing website:

<http://www.cisco.com/go/license>

**Step 4** Enter the following information, when prompted:

- Product Authorization Key (if you have multiple keys, enter one of the keys first. You have to enter each key as a separate process.)
- The serial number of your ASA
- Your e-mail address

An activation key is automatically generated and sent to the email address that you provide. This key includes all features you have registered so far for permanent licenses. For time-based licenses, each license has a separate activation key.

**Step 5** If you have additional Product Authorization Keys, repeat [Step 4](#) for each Product Authorization Key. After you enter all of the Product Authorization Keys, the final activation key provided includes all of the permanent features you registered.

---

## Activating or Deactivating Keys

This section describes how to enter a new activation key, and how to activate and deactivate time-based keys.

### Prerequisites

- If you are already in multiple context mode, enter the activation key in the system execution space.
- Some permanent licenses require you to reload the ASA after you activate them. [Table 3-18](#) lists the licenses that require reloading.

**Table 3-18** Permanent License Reloading Requirements

| Model              | License Action Requiring Reload                                                        |
|--------------------|----------------------------------------------------------------------------------------|
| ASA 5505, ASA 5510 | Changing between the Base and Security Plus license.                                   |
| All models         | Changing the Encryption license.                                                       |
| All models         | Downgrading any permanent license (for example, going from 10 contexts to 2 contexts). |

### Limitations and Restrictions

Your activation key remains compatible if you upgrade to the latest version from any previous version. However, you might have issues if you want to maintain downgrade capability:

- Downgrading to Version 8.1 or earlier—After you upgrade, if you activate additional feature licenses that were introduced *before* 8.2, then the activation key continues to be compatible with earlier versions if you downgrade. However if you activate feature licenses that were introduced in 8.2 or later, then the activation key is not backward compatible. If you have an incompatible license key, then see the following guidelines:
  - If you previously entered an activation key in an earlier version, then the ASA uses that key (without any of the new licenses you activated in Version 8.2 or later).
  - If you have a new system and do not have an earlier activation key, then you need to request a new activation key compatible with the earlier version.
- Downgrading to Version 8.2 or earlier—Version 8.3 introduced more robust time-based key usage as well as failover license changes:
  - If you have more than one time-based activation key active, when you downgrade, only the most recently activated time-based key can be active. Any other keys are made inactive.
  - If you have mismatched licenses on a failover pair, then downgrading will disable failover. Even if the keys are matching, the license used will no longer be a combined license.

## Detailed Steps

|        | Command                                                                                                                                                                                              | Purpose                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|--------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Step 1 | <p><b>activation-key</b> <i>key</i> [<b>activate</b>   <b>deactivate</b>]</p> <p><b>Example:</b><br/> <pre>hostname# activation-key 0xd11b3d48 0xa80a4c0a 0x48e0fd1c 0xb0443480 0x843fc490</pre></p> | <p>Applies an activation key to the ASA. The <i>key</i> is a five-element hexadecimal string with one space between each element. The leading 0x specifier is optional; all values are assumed to be hexadecimal.</p> <p>You can install one permanent key, and multiple time-based keys. If you enter a new permanent key, it overwrites the already installed one.</p> <p>The <b>activate</b> and <b>deactivate</b> keywords are available for time-based keys only. If you do not enter any value, <b>activate</b> is the default. The last time-based key that you activate for a given feature is the active one. To deactivate any active time-based key, enter the <b>deactivate</b> keyword. If you enter a key for the first time, and specify <b>deactivate</b>, then the key is installed on the ASA in an inactive state. See the “<a href="#">Time-Based Licenses</a>” section on <a href="#">page 3-21</a> for more information.</p> |
| Step 2 | <p>(Might be required.)</p> <p><b>reload</b></p> <p><b>Example:</b><br/> <pre>hostname# reload</pre></p>                                                                                             | <p>Reloads the ASA. Some permanent licenses require you to reload the ASA after entering the new activation key. See <a href="#">Table 3-18 on page 3-34</a> for a list of licenses that need reloading. If you need to reload, you will see the following message:</p> <p>WARNING: The running activation key was not updated with the requested key. The flash activation key was updated with the requested key, and will become active after the next reload.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |

## Configuring a Shared License

This section describes how to configure the shared licensing server and participants. For more information about shared licenses, see the “[Shared AnyConnect Premium Licenses](#)” section on [page 3-23](#).

This section includes the following topics:

- [Configuring the Shared Licensing Server, page 3-35](#)
- [Configuring the Shared Licensing Backup Server \(Optional\), page 3-37](#)
- [Configuring the Shared Licensing Participant, page 3-37](#)

## Configuring the Shared Licensing Server

This section describes how to configure the ASA to be a shared licensing server.

### Prerequisites

The server must have a shared licensing server key.

## Detailed Steps

|        | Command                                                                                                                                                                                                                                                                                    | Purpose                                                                                                                                                                                                                           |
|--------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Step 1 | <code>license-server secret <i>secret</i></code><br><br><b>Example:</b><br><code>hostname(config)# license-server secret farscape</code>                                                                                                                                                   | Sets the shared secret, a string between 4 and 128 ASCII characters. Any participant with this secret can use the licensing server.                                                                                               |
| Step 2 | (Optional)<br><code>license-server refresh-interval <i>seconds</i></code><br><br><b>Example:</b><br><code>hostname(config)# license-server refresh-interval 100</code>                                                                                                                     | Sets the refresh interval between 10 and 300 seconds; this value is provided to participants to set how often they should communicate with the server. The default is 30 seconds.                                                 |
| Step 3 | (Optional)<br><code>license-server port <i>port</i></code><br><br><b>Example:</b><br><code>hostname(config)# license-server port 40000</code>                                                                                                                                              | Sets the port on which the server listens for SSL connections from participants, between 1 and 65535. The default is TCP port 50554.                                                                                              |
| Step 4 | (Optional)<br><code>license-server backup <i>address</i> <b>backup-id</b> <i>serial_number</i> [<b>ha-backup-id</b> <i>ha_serial_number</i>]</code><br><br><b>Example:</b><br><code>hostname(config)# license-server backup 10.1.1.2 backup-id JMX0916L0Z4 ha-backup-id JMX1378N0W3</code> | Identifies the backup server IP address and serial number. If the backup server is part of a failover pair, identify the standby unit serial number as well. You can only identify 1 backup server and its optional standby unit. |
| Step 5 | <code>license-server enable <i>interface_name</i></code><br><br><b>Example:</b><br><code>hostname(config)# license-server enable inside</code>                                                                                                                                             | Enables this unit to be the shared licensing server. Specify the interface on which participants contact the server. You can repeat this command for as many interfaces as desired.                                               |

## Examples

The following example sets the shared secret, changes the refresh interval and port, configures a backup server, and enables this unit as the shared licensing server on the inside interface and dmz interface:

```
hostname(config)# license-server secret farscape
hostname(config)# license-server refresh-interval 100
hostname(config)# license-server port 40000
hostname(config)# license-server backup 10.1.1.2 backup-id JMX0916L0Z4 ha-backup-id JMX1378N0W3
hostname(config)# license-server enable inside
```

```
hostname(config)# license-server enable dmz
```

### What to Do Next

See the “[Configuring the Shared Licensing Backup Server \(Optional\)](#)” section on page 3-37, or the “[Configuring the Shared Licensing Participant](#)” section on page 3-37.

## Configuring the Shared Licensing Backup Server (Optional)

This section enables a shared license participant to act as the backup server if the main server goes down.

### Prerequisites

The backup server must have a shared licensing participant key.

### Detailed Steps

|        | Command                                                                                                                                                                      | Purpose                                                                                                                                                                                    |
|--------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Step 1 | <pre>license-server address address secret secret [port port]</pre> <p><b>Example:</b><br/> <pre>hostname(config)# license-server address 10.1.1.1 secret farscape</pre></p> | Identifies the shared licensing server IP address and shared secret. If you changed the default port in the server configuration, set the port for the backup server to match.             |
| Step 2 | <pre>license-server backup enable interface_name</pre> <p><b>Example:</b><br/> <pre>hostname(config)# license-server backup enable inside</pre></p>                          | Enables this unit to be the shared licensing backup server. Specify the interface on which participants contact the server. You can repeat this command for as many interfaces as desired. |

### Examples

The following example identifies the license server and shared secret, and enables this unit as the backup shared license server on the inside interface and dmz interface:

```
hostname(config)# license-server address 10.1.1.1 secret farscape
hostname(config)# license-server backup enable inside
hostname(config)# license-server backup enable dmz
```

### What to Do Next

See the “[Configuring the Shared Licensing Participant](#)” section on page 3-37.

## Configuring the Shared Licensing Participant

This section configures a shared licensing participant to communicate with the shared licensing server.

## Prerequisites

The participant must have a shared licensing participant key.

## Detailed Steps

|        | Command                                                                                                                                                                | Purpose                                                                                                                                                                      |
|--------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Step 1 | <pre>license-server address address secret secret [port port]</pre> <p><b>Example:</b><br/> hostname(config)# license-server address<br/> 10.1.1.1 secret farscape</p> | Identifies the shared licensing server IP address and shared secret. If you changed the default port in the server configuration, set the port for the participant to match. |
| Step 2 | <p>(Optional)</p> <pre>license-server backup address address</pre> <p><b>Example:</b><br/> hostname(config)# license-server backup<br/> address 10.1.1.2</p>           | If you configured a backup server, enter the backup server address.                                                                                                          |

## Examples

The following example sets the license server IP address and shared secret, as well as the backup license server IP address:

```
hostname(config)# license-server address 10.1.1.1 secret farscape
hostname(config)# license-server backup address 10.1.1.2
```

# Monitoring Licenses

This section includes the following topics:

- [Viewing Your Current License, page 3-38](#)
- [Monitoring the Shared License, page 3-44](#)

## Viewing Your Current License

This section describes how to view your current license, and for time-based activation keys, how much time the license has left.

### Guidelines

If you have a No Payload Encryption model, then you view the license, VPN and Unified Communications licenses will not be listed. See the [“No Payload Encryption Models” section on page 3-30](#) for more information.

## Detailed Steps

| Command                                                              | Purpose                                                                                                                                                                                                                                           |
|----------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>show activation-key [detail]</code>                            | This command shows the permanent license, active time-based licenses, and the running license, which is a combination of the permanent license and active time-based licenses. The <b>detail</b> keyword also shows inactive time-based licenses. |
| <b>Example:</b><br><code>hostname# show activation-key detail</code> | For failover units, this command also shows the “Failover cluster” license, which is the combined keys of the primary and secondary units.                                                                                                        |

## Examples

**Example 3-1 Standalone Unit Output for the show activation-key command**

The following is sample output from the **show activation-key** command for a standalone unit that shows the running license (the combined permanent license and time-based licenses), as well as each active time-based license:

```
hostname# show activation-key

Serial Number: JMX1232L11M
Running Permanent Activation Key: 0xce06dc6b 0x8a7b5ab7 0xa1e21dd4 0xd2c4b8b8 0xc4594f9c
Running Timebased Activation Key: 0xa821d549 0x35725fe4 0xc918b97b 0xce0b987b 0x47c7c285
Running Timebased Activation Key: 0xyadayad2 0xyadayad2 0xyadayad2 0xyadayad2 0xyadayad2

Licensed features for this platform:
Maximum Physical Interfaces : Unlimited perpetual
Maximum VLANs : 150 perpetual
Inside Hosts : Unlimited perpetual
Failover : Active/Active perpetual
VPN-DES : Enabled perpetual
VPN-3DES-AES : Enabled perpetual
Security Contexts : 10 perpetual
GTP/GPRS : Enabled perpetual
AnyConnect Premium Peers : 2 perpetual
AnyConnect Essentials : Disabled perpetual
Other VPN Peers : 750 perpetual
Total VPN Peers : 750 perpetual
Shared License : Enabled perpetual
 Shared AnyConnect Premium Peers : 12000 perpetual
AnyConnect for Mobile : Disabled perpetual
AnyConnect for Cisco VPN Phone : Disabled perpetual
Advanced Endpoint Assessment : Disabled perpetual
UC Phone Proxy Sessions : 12 62 days
Total UC Proxy Sessions : 12 62 days
Botnet Traffic Filter : Enabled 646 days
Intercompany Media Engine : Disabled perpetual

This platform has a Base license.

The flash permanent activation key is the SAME as the running permanent key.

Active Timebased Activation Key:
0xa821d549 0x35725fe4 0xc918b97b 0xce0b987b 0x47c7c285
Botnet Traffic Filter : Enabled 646 days

0xyadayad2 0xyadayad2 0xyadayad2 0xyadayad2 0xyadayad2
Total UC Proxy Sessions : 10 62 days
```

**Example 3-2 Standalone Unit Output for show activation-key detail**

The following is sample output from the **show activation-key detail** command for a standalone unit that shows the running license (the combined permanent license and time-based licenses), as well as the permanent license and each installed time-based license (active and inactive):

```
hostname# show activation-key detail

Serial Number: 88810093382
Running Permanent Activation Key: 0xce06dc6b 0x8a7b5ab7 0xa1e21dd4 0xd2c4b8b8 0xc4594f9c
Running Timebased Activation Key: 0xa821d549 0x35725fe4 0xc918b97b 0xce0b987b 0x47c7c285

Licensed features for this platform:
Maximum Physical Interfaces : 8 perpetual
VLANs : 20 DMZ Unrestricted
Dual ISPs : Enabled perpetual
VLAN Trunk Ports : 8 perpetual
Inside Hosts : Unlimited perpetual
Failover : Active/Standby perpetual
VPN-DES : Enabled perpetual
VPN-3DES-AES : Enabled perpetual
AnyConnect Premium Peers : 2 perpetual
AnyConnect Essentials : Disabled perpetual
Other VPN Peers : 25 perpetual
Total VPN Peers : 25 perpetual
AnyConnect for Mobile : Disabled perpetual
AnyConnect for Cisco VPN Phone : Disabled perpetual
Advanced Endpoint Assessment : Disabled perpetual
UC Phone Proxy Sessions : 2 perpetual
Total UC Proxy Sessions : 2 perpetual
Botnet Traffic Filter : Enabled 39 days
Intercompany Media Engine : Disabled perpetual

This platform has an ASA 5505 Security Plus license.

Running Permanent Activation Key: 0xce06dc6b 0x8a7b5ab7 0xa1e21dd4 0xd2c4b8b8 0xc4594f9c

Licensed features for this platform:
Maximum Physical Interfaces : 8 perpetual
VLANs : 20 DMZ Unrestricted
Dual ISPs : Enabled perpetual
VLAN Trunk Ports : 8 perpetual
Inside Hosts : Unlimited perpetual
Failover : Active/Standby perpetual
VPN-DES : Enabled perpetual
VPN-3DES-AES : Enabled perpetual
AnyConnect Premium Peers : 2 perpetual
AnyConnect Essentials : Disabled perpetual
Other VPN Peers : 25 perpetual
Total VPN Peers : 25 perpetual
AnyConnect for Mobile : Disabled perpetual
AnyConnect for Cisco VPN Phone : Disabled perpetual
Advanced Endpoint Assessment : Disabled perpetual
UC Phone Proxy Sessions : 2 perpetual
Total UC Proxy Sessions : 2 perpetual
Botnet Traffic Filter : Enabled 39 days
Intercompany Media Engine : Disabled perpetual

The flash permanent activation key is the SAME as the running permanent key.

Active Timebased Activation Key:
```

```
0xa821d549 0x35725fe4 0xc918b97b 0xce0b987b 0x47c7c285
Botnet Traffic Filter : Enabled 39 days
```

```
Inactive Timebased Activation Key:
Oxyadayada3 Oxyadayada3 Oxyadayada3 Oxyadayada3 Oxyadayada3
AnyConnect Premium Peers : 25 7 days
```

### Example 3-3 Primary Unit Output in a Failover Pair for show activation-key detail

The following is sample output from the **show activation-key detail** command for the primary failover unit that shows:

- The primary unit license (the combined permanent license and time-based licenses).
- The “Failover Cluster” license, which is the combined licenses from the primary and secondary units. This is the license that is actually running on the ASA. The values in this license that reflect the combination of the primary and secondary licenses are in bold.
- The primary unit permanent license.
- The primary unit installed time-based licenses (active and inactive).

```
hostname# show activation-key detail
```

```
Serial Number: P3000000171
Running Permanent Activation Key: 0xce06dc6b 0x8a7b5ab7 0xa1e21dd4 0xd2c4b8b8 0xc4594f9c
Running Timebased Activation Key: 0xa821d549 0x35725fe4 0xc918b97b 0xce0b987b 0x47c7c285
```

```
Licensed features for this platform:
```

```
Maximum Physical Interfaces : Unlimited perpetual
Maximum VLANs : 150 perpetual
Inside Hosts : Unlimited perpetual
Failover : Active/Active perpetual
VPN-DES : Enabled perpetual
VPN-3DES-AES : Enabled perpetual
Security Contexts : 12 perpetual
GTP/GPRS : Enabled perpetual
AnyConnect Premium Peers : 2 perpetual
AnyConnect Essentials : Disabled perpetual
Other VPN Peers : 750 perpetual
Total VPN Peers : 750 perpetual
Shared License : Disabled perpetual
AnyConnect for Mobile : Disabled perpetual
AnyConnect for Cisco VPN Phone : Disabled perpetual
Advanced Endpoint Assessment : Disabled perpetual
UC Phone Proxy Sessions : 2 perpetual
Total UC Proxy Sessions : 2 perpetual
Botnet Traffic Filter : Enabled 33 days
Intercompany Media Engine : Disabled perpetual
```

This platform has an ASA 5520 VPN Plus license.

```
Failover cluster licensed features for this platform:
```

```
Maximum Physical Interfaces : Unlimited perpetual
Maximum VLANs : 150 perpetual
Inside Hosts : Unlimited perpetual
Failover : Active/Active perpetual
VPN-DES : Enabled perpetual
VPN-3DES-AES : Enabled perpetual
Security Contexts : 12 perpetual
GTP/GPRS : Enabled perpetual
AnyConnect Premium Peers : 4 perpetual
AnyConnect Essentials : Disabled perpetual
```

```

Other VPN Peers : 750 perpetual
Total VPN Peers : 750 perpetual
Shared License : Disabled perpetual
AnyConnect for Mobile : Disabled perpetual
AnyConnect for Cisco VPN Phone : Disabled perpetual
Advanced Endpoint Assessment : Disabled perpetual
UC Phone Proxy Sessions : 4 perpetual
Total UC Proxy Sessions : 4 perpetual
Botnet Traffic Filter : Enabled 33 days
Intercompany Media Engine : Disabled perpetual

```

This platform has an ASA 5520 VPN Plus license.

Running Permanent Activation Key: 0xce06dc6b 0x8a7b5ab7 0xa1e21dd4 0xd2c4b8b8 0xc4594f9c

Licensed features for this platform:

```

Maximum Physical Interfaces : Unlimited perpetual
Maximum VLANs : 150 perpetual
Inside Hosts : Unlimited perpetual
Failover : Active/Active perpetual
VPN-DES : Enabled perpetual
VPN-3DES-AES : Disabled perpetual
Security Contexts : 2 perpetual
GTP/GPRS : Disabled perpetual
AnyConnect Premium Peers : 2 perpetual
AnyConnect Essentials : Disabled perpetual
Other VPN Peers : 750 perpetual
Total VPN Peers : 750 perpetual
Shared License : Disabled perpetual
AnyConnect for Mobile : Disabled perpetual
AnyConnect for Cisco VPN Phone : Disabled perpetual
Advanced Endpoint Assessment : Disabled perpetual
UC Phone Proxy Sessions : 2 perpetual
Total UC Proxy Sessions : 2 perpetual
Botnet Traffic Filter : Disabled perpetual
Intercompany Media Engine : Disabled perpetual

```

The flash permanent activation key is the SAME as the running permanent key.

Active Timebased Activation Key:

```

0xa821d549 0x35725fe4 0xc918b97b 0xce0b987b 0x47c7c285
Botnet Traffic Filter : Enabled 33 days

```

Inactive Timebased Activation Key:

```

0xyadayad3 0xyadayad3 0xyadayad3 0xyadayad3 0xyadayad3
Security Contexts : 2 7 days
AnyConnect Premium Peers : 100 7 days

```

```

0xyadayad4 0xyadayad4 0xyadayad4 0xyadayad4 0xyadayad4
Total UC Proxy Sessions : 100 14 days

```

### Example 3-4 Secondary Unit Output in a Failover Pair for show activation-key detail

The following is sample output from the **show activation-key detail** command for the secondary failover unit that shows:

- The secondary unit license (the combined permanent license and time-based licenses).
- The “Failover Cluster” license, which is the combined licenses from the primary and secondary units. This is the license that is actually running on the ASA. The values in this license that reflect the combination of the primary and secondary licenses are in bold.

- The secondary unit permanent license.
- The secondary installed time-based licenses (active and inactive). This unit does not have any time-based licenses, so none display in this sample output.

```
hostname# show activation-key detail
```

```
Serial Number: P3000000011
Running Activation Key: Oxyadayad1 Oxyadayad1 Oxyadayad1 Oxyadayad1 Oxyadayad1
```

```
Licensed features for this platform:
```

```
Maximum Physical Interfaces : Unlimited perpetual
Maximum VLANs : 150 perpetual
Inside Hosts : Unlimited perpetual
Failover : Active/Active perpetual
VPN-DES : Enabled perpetual
VPN-3DES-AES : Disabled perpetual
Security Contexts : 2 perpetual
GTP/GPRS : Disabled perpetual
AnyConnect Premium Peers : 2 perpetual
AnyConnect Essentials : Disabled perpetual
Other VPN Peers : 750 perpetual
Total VPN Peers : 750 perpetual
Shared License : Disabled perpetual
AnyConnect for Mobile : Disabled perpetual
AnyConnect for Cisco VPN Phone : Disabled perpetual
Advanced Endpoint Assessment : Disabled perpetual
UC Phone Proxy Sessions : 2 perpetual
Total UC Proxy Sessions : 2 perpetual
Botnet Traffic Filter : Disabled perpetual
Intercompany Media Engine : Disabled perpetual
```

```
This platform has an ASA 5520 VPN Plus license.
```

```
Failover cluster licensed features for this platform:
```

```
Maximum Physical Interfaces : Unlimited perpetual
Maximum VLANs : 150 perpetual
Inside Hosts : Unlimited perpetual
Failover : Active/Active perpetual
VPN-DES : Enabled perpetual
VPN-3DES-AES : Enabled perpetual
Security Contexts : 10 perpetual
GTP/GPRS : Enabled perpetual
AnyConnect Premium Peers : 4 perpetual
AnyConnect Essentials : Disabled perpetual
Other VPN Peers : 750 perpetual
Total VPN Peers : 750 perpetual
Shared License : Disabled perpetual
AnyConnect for Mobile : Disabled perpetual
AnyConnect for Cisco VPN Phone : Disabled perpetual
Advanced Endpoint Assessment : Disabled perpetual
UC Phone Proxy Sessions : 4 perpetual
Total UC Proxy Sessions : 4 perpetual
Botnet Traffic Filter : Enabled 33 days
Intercompany Media Engine : Disabled perpetual
```

```
This platform has an ASA 5520 VPN Plus license.
```

```
Running Permanent Activation Key: Oxyadayad1 Oxyadayad1 Oxyadayad1 Oxyadayad1 Oxyadayad1
```

```
Licensed features for this platform:
```

```
Maximum Physical Interfaces : Unlimited perpetual
Maximum VLANs : 150 perpetual
Inside Hosts : Unlimited perpetual
```

```

Failover : Active/Active perpetual
VPN-DES : Enabled perpetual
VPN-3DES-AES : Disabled perpetual
Security Contexts : 2 perpetual
GTP/GPRS : Disabled perpetual
AnyConnect Premium Peers : 2 perpetual
AnyConnect Essentials : Disabled perpetual
Other VPN Peers : 750 perpetual
Total VPN Peers : 750 perpetual
Shared License : Disabled perpetual
AnyConnect for Mobile : Disabled perpetual
AnyConnect for Cisco VPN Phone : Disabled perpetual
Advanced Endpoint Assessment : Disabled perpetual
UC Phone Proxy Sessions : 2 perpetual
Total UC Proxy Sessions : 2 perpetual
Botnet Traffic Filter : Disabled perpetual
Intercompany Media Engine : Disabled perpetual

```

The flash permanent activation key is the SAME as the running permanent key.

## Monitoring the Shared License

To monitor the shared license, enter one of the following commands.

| Command                                                                | Purpose                                                                                                                                                                                                                                                                                                                                                                                                |
|------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>show shared license [detail   client [hostname]   backup]</code> | Shows shared license statistics. Optional keywords are available only for the licensing server: the <b>detail</b> keyword shows statistics per participant. To limit the display to one participant, use the <b>client</b> keyword. The <b>backup</b> keyword shows information about the backup server.<br><br>To clear the shared license statistics, enter the <b>clear shared license</b> command. |
| <code>show activation-key</code>                                       | Shows the licenses installed on the ASA. The <b>show version</b> command also shows license information.                                                                                                                                                                                                                                                                                               |
| <code>show vpn-sessiondb</code>                                        | Shows license information about VPN sessions.                                                                                                                                                                                                                                                                                                                                                          |

### Examples

The following is sample output from the **show shared license** command on the license participant:

```

hostname> show shared license
Primary License Server : 10.3.32.20
 Version : 1
 Status : Inactive

Shared license utilization:
SSLVPN:
 Total for network : 5000
 Available : 5000
 Utilized : 0
This device:
 Platform limit : 250
 Current usage : 0
 High usage : 0

```

```

Messages Tx/Rx/Error:
 Registration : 0 / 0 / 0
 Get : 0 / 0 / 0
 Release : 0 / 0 / 0
 Transfer : 0 / 0 / 0

```

The following is sample output from the **show shared license detail** command on the license server:

```

hostname> show shared license detail
Backup License Server Info:

```

```

Device ID : ABCD
Address : 10.1.1.2
Registered : NO
HA peer ID : EFGH
Registered : NO
 Messages Tx/Rx/Error:
 Hello : 0 / 0 / 0
 Sync : 0 / 0 / 0
 Update : 0 / 0 / 0

```

Shared license utilization:

```

SSLVPN:
 Total for network : 500
 Available : 500
 Utilized : 0
This device:
 Platform limit : 250
 Current usage : 0
 High usage : 0
 Messages Tx/Rx/Error:
 Registration : 0 / 0 / 0
 Get : 0 / 0 / 0
 Release : 0 / 0 / 0
 Transfer : 0 / 0 / 0

```

Client Info:

```

Hostname : 5540-A
Device ID : XXXXXXXXXXXX
SSLVPN:
 Current usage : 0
 High : 0
 Messages Tx/Rx/Error:
 Registration : 1 / 1 / 0
 Get : 0 / 0 / 0
 Release : 0 / 0 / 0
 Transfer : 0 / 0 / 0

```

...

# Feature History for Licensing

Table 3-19 lists each feature change and the platform release in which it was implemented.

**Table 3-19** Feature History for Licensing

| Feature Name                                                    | Platform Releases | Feature Information                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|-----------------------------------------------------------------|-------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Increased Connections and VLANs                                 | 7.0(5)            | <p>Increased the following limits:</p> <ul style="list-style-type: none"> <li>• ASA5510 Base license connections from 32000 to 5000; VLANs from 0 to 10.</li> <li>• ASA5510 Security Plus license connections from 64000 to 130000; VLANs from 10 to 25.</li> <li>• ASA5520 connections from 130000 to 280000; VLANs from 25 to 100.</li> <li>• ASA5540 connections from 280000 to 400000; VLANs from 100 to 200.</li> </ul>                                                                                                                                                                                                                                                                                                                                        |
| SSL VPN Licenses                                                | 7.1(1)            | SSL VPN licenses were introduced.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| Increased SSL VPN Licenses                                      | 7.2(1)            | A 5000-user SSL VPN license was introduced for the ASA 5550 and above.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| Increased interfaces for the Base license on the ASA 5510       | 7.2(2)            | For the Base license on the ASA 5510, the maximum number of interfaces was increased from 3 plus a management interface to unlimited interfaces.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| Increased VLANs                                                 | 7.2(2)            | <p>The maximum number of VLANs for the Security Plus license on the ASA 5505 was increased from 5 (3 fully functional; 1 failover; one restricted to a backup interface) to 20 fully functional interfaces. In addition, the number of trunk ports was increased from 1 to 8. Now there are 20 fully functional interfaces, you do not need to use the backup interface command to cripple a backup ISP interface; you can use a fully-functional interface for it. The backup interface command is still useful for an Easy VPN configuration.</p> <p>VLAN limits were also increased for the ASA 5510 (from 10 to 50 for the Base license, and from 25 to 100 for the Security Plus license), the ASA 5520 (from 100 to 150), the ASA 5550 (from 200 to 250).</p> |
| Gigabit Ethernet Support for the ASA 5510 Security Plus License | 7.2(3)            | <p>The ASA 5510 now supports Gigabit Ethernet (1000 Mbps) for the Ethernet 0/0 and 0/1 ports with the Security Plus license. In the Base license, they continue to be used as Fast Ethernet (100 Mbps) ports. Ethernet 0/2, 0/3, and 0/4 remain as Fast Ethernet ports for both licenses.</p> <p><b>Note</b> The interface names remain Ethernet 0/0 and Ethernet 0/1.</p> <p>Use the <b>speed</b> command to change the speed on the interface and use the <b>show interface</b> command to see what speed is currently configured for each interface.</p>                                                                                                                                                                                                         |

Table 3-19 Feature History for Licensing (continued)

| Feature Name                                  | Platform Releases | Feature Information                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|-----------------------------------------------|-------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Advanced Endpoint Assessment License          | 8.0(2)            | <p>The Advanced Endpoint Assessment license was introduced. As a condition for the completion of a Cisco AnyConnect or clientless SSL VPN connections, the remote computer scans for a greatly expanded collection of antivirus and antispyware applications, firewalls, operating systems, and associated updates. It also scans for any registry entries, filenames, and process names that you specify. It sends the scan results to the ASA. The ASA uses both the user login credentials and the computer scan results to assign a Dynamic Access Policy (DAP).</p> <p>With an Advanced Endpoint Assessment License, you can enhance Host Scan by configuring an attempt to update noncompliant computers to meet version requirements.</p> <p>Cisco can provide timely updates to the list of applications and versions that Host Scan supports in a package that is separate from Cisco Secure Desktop.</p> |
| VPN Load Balancing for the ASA 5510           | 8.0(2)            | VPN load balancing is now supported on the ASA 5510 Security Plus license.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| AnyConnect for Mobile License                 | 8.0(3)            | The AnyConnect for Mobile license was introduced. It lets Windows mobile devices connect to the ASA using the AnyConnect client.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| Time-based Licenses                           | 8.0(4)/8.1(2)     | Support for time-based licenses was introduced.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| Increased VLANs for the ASA 5580              | 8.1(2)            | The number of VLANs supported on the ASA 5580 are increased from 100 to 250.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| Unified Communications Proxy Sessions license | 8.0(4)            | <p>The UC Proxy sessions license was introduced. Phone Proxy, Presence Federation Proxy, and Encrypted Voice Inspection applications use TLS proxy sessions for their connections. Each TLS proxy session is counted against the UC license limit. All of these applications are licensed under the UC Proxy umbrella, and can be mixed and matched.</p> <p>This feature is not available in Version 8.1.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| Botnet Traffic Filter License                 | 8.2(1)            | The Botnet Traffic Filter license was introduced. The Botnet Traffic Filter protects against malware network activity by tracking connections to known bad domains and IP addresses.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |

Table 3-19 Feature History for Licensing (continued)

| Feature Name                                                                       | Platform Releases | Feature Information                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|------------------------------------------------------------------------------------|-------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| AnyConnect Essentials License                                                      | 8.2(1)            | <p>The AnyConnect Essentials License was introduced. This license enables AnyConnect VPN client access to the ASA. This license does not support browser-based SSL VPN access or Cisco Secure Desktop. For these features, activate an AnyConnect Premium license instead of the AnyConnect Essentials license.</p> <p><b>Note</b> With the AnyConnect Essentials license, VPN users can use a Web browser to log in, and download and start (WebLaunch) the AnyConnect client.</p> <p>The AnyConnect client software offers the same set of client features, whether it is enabled by this license or an AnyConnect Premium license.</p> <p>The AnyConnect Essentials license cannot be active at the same time as the following licenses on a given ASA: AnyConnect Premium license (all types) or the Advanced Endpoint Assessment license. You can, however, run AnyConnect Essentials and AnyConnect Premium licenses on different ASAs in the same network.</p> <p>By default, the ASA uses the AnyConnect Essentials license, but you can disable it to use other licenses by using the <b>no anyconnect-essentials</b> command.</p> |
| SSL VPN license changed to AnyConnect Premium SSL VPN Edition license              | 8.2(1)            | The SSL VPN license name was changed to the AnyConnect Premium SSL VPN Edition license.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| Shared Licenses for SSL VPN                                                        | 8.2(1)            | Shared licenses for SSL VPN were introduced. Multiple ASAs can share a pool of SSL VPN sessions on an as-needed basis.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| Mobility Proxy application no longer requires Unified Communications Proxy license | 8.2(2)            | The Mobility Proxy no longer requires the UC Proxy license.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| 10 GE I/O license for the ASA 5585-X with SSP-20                                   | 8.2(3)            | <p>We introduced the 10 GE I/O license for the ASA 5585-X with SSP-20 to enable 10-Gigabit Ethernet speeds for the fiber ports. The SSP-60 supports 10-Gigabit Ethernet speeds by default.</p> <p><b>Note</b> The ASA 5585-X is not supported in 8.3(x).</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| 10 GE I/O license for the ASA 5585-X with SSP-10                                   | 8.2(4)            | <p>We introduced the 10 GE I/O license for the ASA 5585-X with SSP-10 to enable 10-Gigabit Ethernet speeds for the fiber ports. The SSP-40 supports 10-Gigabit Ethernet speeds by default.</p> <p><b>Note</b> The ASA 5585-X is not supported in 8.3(x).</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |

Table 3-19 Feature History for Licensing (continued)

| Feature Name                                                                             | Platform Releases | Feature Information                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|------------------------------------------------------------------------------------------|-------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Non-identical failover licenses                                                          | 8.3(1)            | Failover licenses no longer need to be identical on each unit. The license used for both units is the combined license from the primary and secondary units.<br><br>We modified the following commands: <b>show activation-key</b> and <b>show version</b> .                                                                                                                                                                                                                                                                        |
| Stackable time-based licenses                                                            | 8.3(1)            | Time-based licenses are now stackable. In many cases, you might need to renew your time-based license and have a seamless transition from the old license to the new one. For features that are only available with a time-based license, it is especially important that the license not expire before you can apply the new license. The ASA allows you to <i>stack</i> time-based licenses so you do not have to worry about the license expiring or about losing time on your licenses because you installed the new one early. |
| Intercompany Media Engine License                                                        | 8.3(1)            | The IME license was introduced.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| Multiple time-based licenses active at the same time                                     | 8.3(1)            | You can now install multiple time-based licenses, and have one license per feature active at a time.<br><br>The following commands were modified: <b>show activation-key</b> and <b>show version</b> .                                                                                                                                                                                                                                                                                                                              |
| Discrete activation and deactivation of time-based licenses.                             | 8.3(1)            | You can now activate or deactivate time-based licenses using a command.<br><br>The following command was modified: <b>activation-key [activate   deactivate]</b> .                                                                                                                                                                                                                                                                                                                                                                  |
| AnyConnect Premium SSL VPN Edition license changed to AnyConnect Premium SSL VPN license | 8.3(1)            | The AnyConnect Premium SSL VPN Edition license name was changed to the AnyConnect Premium SSL VPN license.                                                                                                                                                                                                                                                                                                                                                                                                                          |
| No Payload Encryption image for export                                                   | 8.3(2)            | If you install the No Payload Encryption software on the ASA 5505 through 5550, then you disable Unified Communications, strong encryption VPN, and strong encryption management protocols.<br><br><b>Note</b> This special image is only supported in 8.3(x); for No Payload Encryption support in 8.4(1) and later, you need to purchase a special hardware version of the ASA.                                                                                                                                                   |
| Increased contexts for the ASA 5550, 5580, and 5585-X                                    | 8.4(1)            | For the ASA 5550 and ASA 5585-X with SSP-10, the maximum contexts was increased from 50 to 100. For the ASA 5580 and 5585-X with SSP-20 and higher, the maximum was increased from 50 to 250.                                                                                                                                                                                                                                                                                                                                       |
| Increased VLANs for the ASA 5580 and 5585-X                                              | 8.4(1)            | For the ASA 5580 and 5585-X, the maximum VLANs was increased from 250 to 1024.                                                                                                                                                                                                                                                                                                                                                                                                                                                      |

Table 3-19 Feature History for Licensing (continued)

| Feature Name                                                             | Platform Releases | Feature Information                                                                                                                                                                                                                                                                                                                                                                                                                   |
|--------------------------------------------------------------------------|-------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Increased connections for the ASA 5580 and 5585-X                        | 8.4(1)            | We increased the firewall connection limits: <ul style="list-style-type: none"> <li>ASA 5580-20—1,000,000 to 2,000,000.</li> <li>ASA 5580-40—2,000,000 to 4,000,000.</li> <li>ASA 5585-X with SSP-10: 750,000 to 1,000,000.</li> <li>ASA 5585-X with SSP-20: 1,000,000 to 2,000,000.</li> <li>ASA 5585-X with SSP-40: 2,000,000 to 4,000,000.</li> <li>ASA 5585-X with SSP-60: 2,000,000 to 10,000,000.</li> </ul>                    |
| AnyConnect Premium SSL VPN license changed to AnyConnect Premium license | 8.4(1)            | The AnyConnect Premium SSL VPN license name was changed to the AnyConnect Premium license. The license information display was changed from “SSL VPN Peers” to “AnyConnect Premium Peers.”                                                                                                                                                                                                                                            |
| Increased AnyConnect VPN sessions for the ASA 5580                       | 8.4(1)            | The AnyConnect VPN session limit was increased from 5,000 to 10,000.                                                                                                                                                                                                                                                                                                                                                                  |
| Increased Other VPN sessions for the ASA 5580                            | 8.4(1)            | The other VPN session limit was increased from 5,000 to 10,000.                                                                                                                                                                                                                                                                                                                                                                       |
| IPsec remote access VPN using IKEv2                                      | 8.4(1)            | IPsec remote access VPN using IKEv2 was added to the AnyConnect Essentials and AnyConnect Premium licenses. IKEv2 site-to-site sessions were added to the Other VPN license (formerly IPsec VPN). The Other VPN license is included in the Base license.                                                                                                                                                                              |
| No Payload Encryption hardware for export                                | 8.4(1)            | For models available with No Payload Encryption (for example, the ASA 5585-X), the ASA software disables Unified Communications and VPN features, making the ASA available for export to certain countries.                                                                                                                                                                                                                           |
| Dual SSPs for SSP-20 and SSP-40                                          | 8.4(2)            | For SSP-40 and SSP-60, you can use two SSPs of the same level in the same chassis. Mixed-level SSPs are not supported (for example, an SSP-40 with an SSP-60 is not supported). Each SSP acts as an independent device, with separate configurations and management. You can use the two SSPs as a failover pair if desired. When using two SSPs in the chassis, VPN is not supported; note, however, that VPN has not been disabled. |
| IPS Module license for the ASA 5512-X through ASA 5555-X                 | 8.6(1)            | The IPS SSP software module on the ASA 5512-X, ASA 5515-X, ASA 5525-X, ASA 5545-X, and ASA 5555-X requires the IPS module license.                                                                                                                                                                                                                                                                                                    |



## **PART 2**

# **Configuring Firewall and Security Context Modes**





## CHAPTER 4

# Configuring the Transparent or Routed Firewall

---

This chapter describes how to set the firewall mode to routed or transparent, as well as how the firewall works in each firewall mode.

In multiple context mode, you cannot set the firewall mode separately for each context; you can only set the firewall mode for the entire ASA.

This chapter includes the following sections:

- [Configuring the Firewall Mode, page 4-1](#)
- [Configuring ARP Inspection for the Transparent Firewall, page 4-9](#)
- [Customizing the MAC Address Table for the Transparent Firewall, page 4-13](#)
- [Firewall Mode Examples, page 4-17](#)

## Configuring the Firewall Mode

This section describes routed and transparent firewall mode, and how to set the mode. This section includes the following topics:

- [Information About the Firewall Mode, page 4-1](#)
- [Licensing Requirements for the Firewall Mode, page 4-6](#)
- [Default Settings, page 4-6](#)
- [Guidelines and Limitations, page 4-6](#)
- [Setting the Firewall Mode, page 4-8](#)
- [Feature History for Firewall Mode, page 4-9](#)

## Information About the Firewall Mode

This section describes routed and transparent firewall mode and includes the following topics:

- [Information About Routed Firewall Mode, page 4-2](#)
- [Information About Transparent Firewall Mode, page 4-2](#)

## Information About Routed Firewall Mode

In routed mode, the ASA is considered to be a router hop in the network. It can use OSPF or RIP (in single context mode). Routed mode supports many interfaces. Each interface is on a different subnet. You can share interfaces between contexts.

The ASA acts as a router between connected networks, and each interface requires an IP address on a different subnet. In single context mode, the routed firewall supports OSPF, EIGRP, and RIP. Multiple context mode supports static routes only. We recommend using the advanced routing capabilities of the upstream and downstream routers instead of relying on the ASA for extensive routing needs.

## Information About Transparent Firewall Mode

Traditionally, a firewall is a routed hop and acts as a default gateway for hosts that connect to one of its screened subnets. A transparent firewall, on the other hand, is a Layer 2 firewall that acts like a “bump in the wire,” or a “stealth firewall,” and is not seen as a router hop to connected devices.

This section describes transparent firewall mode and includes the following topics:

- [Transparent Firewall Network, page 4-2](#)
- [Bridge Groups, page 4-2](#)
- [Management Interface \(ASA 5510 and Higher\), page 4-3](#)
- [Allowing Layer 3 Traffic, page 4-3](#)
- [Allowed MAC Addresses, page 4-3](#)
- [Passing Traffic Not Allowed in Routed Mode, page 4-3](#)
- [BPDU Handling, page 4-4](#)
- [MAC Address vs. Route Lookups, page 4-4](#)
- [Using the Transparent Firewall in Your Network, page 4-5](#)

### Transparent Firewall Network

The ASA connects the same network between its interfaces. Because the firewall is not a routed hop, you can easily introduce a transparent firewall into an existing network.

### Bridge Groups

If you do not want the overhead of security contexts, or want to maximize your use of security contexts, you can group interfaces together in a bridge group, and then configure multiple bridge groups, one for each network. Bridge group traffic is isolated from other bridge groups; traffic is not routed to another bridge group within the ASA, and traffic must exit the ASA before it is routed by an external router back to another bridge group in the ASA. Although the bridging functions are separate for each bridge group, many other functions are shared between all bridge groups. For example, all bridge groups share a syslog server or AAA server configuration. For complete security policy separation, use security contexts with one bridge group in each context.

**Note**

Each bridge group requires a management IP address. The ASA uses this IP address as the source address for packets originating from the bridge group. The management IP address must be on the same subnet as the connected network. For another method of management, see the [“Management Interface \(ASA 5510 and Higher\)”](#) section on page 4-3.

The ASA does not support traffic on secondary networks; only traffic on the same network as the management IP address is supported.

### Management Interface (ASA 5510 and Higher)

In addition to each bridge group management IP address, you can add a separate Management *slot/port* interface that is not part of any bridge group, and that allows only management traffic to the ASA. For more information, see the “[Management Interface](#)” section on page 6-2.

### Allowing Layer 3 Traffic

- IPv4 and IPv6 traffic is allowed through the transparent firewall automatically from a higher security interface to a lower security interface, without an access list.
- ARPs are allowed through the transparent firewall in both directions without an access list. ARP traffic can be controlled by ARP inspection.
- For Layer 3 traffic travelling from a low to a high security interface, an extended access list is required on the low security interface. See [Chapter 15, “Adding an Extended Access List,”](#) or [Chapter 19, “Adding an IPv6 Access List,”](#) for more information.

### Allowed MAC Addresses

The following destination MAC addresses are allowed through the transparent firewall. Any MAC address not on this list is dropped.

- TRUE broadcast destination MAC address equal to FFFF.FFFF.FFFF
- IPv4 multicast MAC addresses from 0100.5E00.0000 to 0100.5EFE.FFFF
- IPv6 multicast MAC addresses from 3333.0000.0000 to 3333.FFFF.FFFF
- BPDU multicast address equal to 0100.0CCC.CCCD
- AppleTalk multicast MAC addresses from 0900.0700.0000 to 0900.07FF.FFFF

### Passing Traffic Not Allowed in Routed Mode

In routed mode, some types of traffic cannot pass through the ASA even if you allow it in an access list. The transparent firewall, however, can allow almost any traffic through using either an extended access list (for IP traffic) or an EtherType access list (for non-IP traffic).

Non-IP traffic (for example AppleTalk, IPX, BPDUs, and MPLS) can be configured to go through using an EtherType access list.



#### Note

The transparent mode ASA does not pass CDP packets, or any packets that do not have a valid EtherType greater than or equal to 0x600. For example, you cannot pass IS-IS packets. An exception is made for BPDUs, which are supported.

### Passing Traffic For Routed-Mode Features

For features that are not directly supported on the transparent firewall, you can allow traffic to pass through so that upstream and downstream routers can support the functionality. For example, by using an extended access list, you can allow DHCP traffic (instead of the unsupported DHCP relay feature) or

multicast traffic such as that created by IP/TV. You can also establish routing protocol adjacencies through a transparent firewall; you can allow OSPF, RIP, EIGRP, or BGP traffic through based on an extended access list. Likewise, protocols like HSRP or VRRP can pass through the ASA.

## BPDU Handling

To prevent loops using the Spanning Tree Protocol, BPDUs are passed by default. To block BPDUs, you need to configure an EtherType access list to deny them. If you are using failover, you might want to block BPDUs to prevent the switch port from going into a blocking state when the topology changes. See the [“Transparent Firewall Mode Requirements” section on page 61-11](#) for more information.

## MAC Address vs. Route Lookups

When the ASA runs in transparent mode, the outgoing interface of a packet is determined by performing a MAC address lookup instead of a route lookup.

Route lookups, however, are necessary for the following traffic types:

- Traffic originating on the ASA—For example, if your syslog server is located on a remote network, you must use a static route so the ASA can reach that subnet.
- Traffic that is at least one hop away from the ASA with NAT enabled—The ASA needs to perform a route lookup; you need to add a static route on the ASA for the real host address.
- Voice over IP (VoIP) traffic with inspection enabled, and the endpoint is at least one hop away from the ASA—For example, if you use the transparent firewall between a CCM and an H.323 gateway, and there is a router between the transparent firewall and the H.323 gateway, then you need to add a static route on the ASA for the H.323 gateway for successful call completion.
- VoIP or DNS traffic with inspection enabled, with NAT enabled, and the embedded address is at least one hop away from the ASA—To successfully translate the IP address inside VoIP and DNS packets, the ASA needs to perform a route lookup; you need to add a static route on the ASA for the real host address that is embedded in the packet.

## Using the Transparent Firewall in Your Network

Figure 4-1 shows a typical transparent firewall network where the outside devices are on the same subnet as the inside devices. The inside router and hosts appear to be directly connected to the outside router.

**Figure 4-1** Transparent Firewall Network


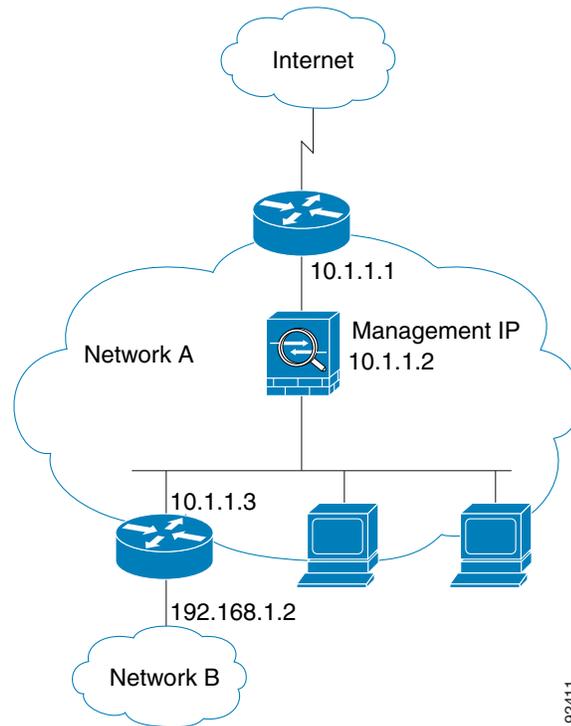


Figure 4-2 shows two networks connected to the ASA, which has two bridge groups.

**Figure 4-2** Transparent Firewall Network with Two Bridge Groups

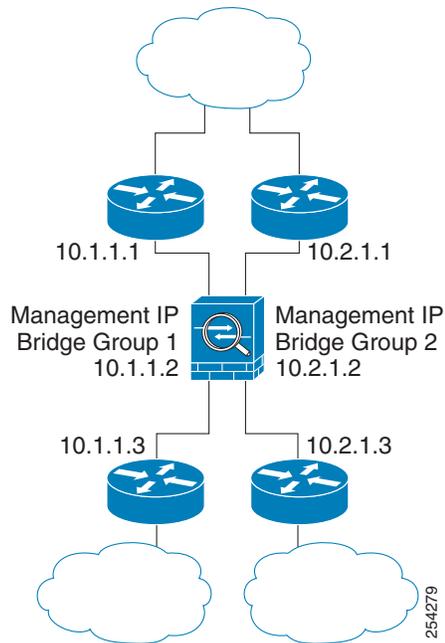

## Licensing Requirements for the Firewall Mode

The following table shows the licensing requirements for this feature.

| Model      | License Requirement |
|------------|---------------------|
| All models | Base License.       |

## Default Settings

The default mode is routed mode.

## Guidelines and Limitations

This section includes the guidelines and limitations for this feature.

### Context Mode Guidelines

- For the ASA 5500 series appliances, the firewall mode is set for the entire system and all contexts; you cannot set the mode individually for each context.

- When you change modes, the ASA clears the running configuration because many commands are not supported for both modes. This action removes any contexts from running. If you then re-add a context that has an existing configuration that was created for the wrong mode, the context configuration might not work correctly. Be sure to recreate your context configurations for the correct mode before you re-add them, or add new contexts with new paths for the new configurations.

### Transparent Firewall Guidelines

Follow these guidelines when planning your transparent firewall network:

- In transparent firewall mode, the management interface updates the MAC address table in the same manner as a data interface; therefore you should not connect both a management and a data interface to the same switch unless you configure one of the switch ports as a routed port (by default Cisco Catalyst switches share a MAC address for all VLAN switch ports). Otherwise, if traffic arrives on the management interface from the physically-connected switch, then the ASA updates the MAC address table to use the *management* interface to access the switch, instead of the data interface. This action causes a temporary traffic interruption; the ASA will not re-update the MAC address table for packets from the switch to the data interface for at least 30 seconds for security reasons.
- Each directly-connected network must be on the same subnet.
- Do not specify the bridge group management IP address as the default gateway for connected devices; devices need to specify the router on the other side of the ASA as the default gateway.
- The default route for the transparent firewall, which is required to provide a return path for management traffic, is only applied to management traffic from one bridge group network. This is because the default route specifies an interface in the bridge group as well as the router IP address on the bridge group network, and you can only define one default route. If you have management traffic from more than one bridge group network, you need to specify a static route that identifies the network from which you expect management traffic.

See the [“Guidelines and Limitations” section on page 9-5](#) for more guidelines.

### IPv6 Guidelines

Supports IPv6.

### Additional Guidelines and Limitations

- When you change firewall modes, the ASA clears the running configuration because many commands are not supported for both modes. The startup configuration remains unchanged. If you reload without saving, then the startup configuration is loaded, and the mode reverts back to the original setting. See the [“Setting the Firewall Mode” section on page 4-8](#) for information about backing up your configuration file.
- If you download a text configuration to the ASA that changes the mode with the **firewall transparent** command, be sure to put the command at the top of the configuration; the ASA changes the mode as soon as it reads the command and then continues reading the configuration you downloaded. If the command appears later in the configuration, the ASA clears all the preceding lines in the configuration. See the [“Downloading Software or Configuration Files to Flash Memory” section on page 81-2](#) for information about downloading text files.

### Unsupported Features in Transparent Mode

[Table 4-1](#) lists the features are not supported in transparent mode.

**Table 4-1** *Unsupported Features in Transparent Mode*

| Feature                             | Description                                                                                                                                                                                                                                                                                                                                                        |
|-------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Dynamic DNS                         | —                                                                                                                                                                                                                                                                                                                                                                  |
| DHCP relay                          | The transparent firewall can act as a DHCP server, but it does not support the DHCP relay commands. DHCP relay is not required because you can allow DHCP traffic to pass through using two extended access lists: one that allows DHCP requests from the inside interface to the outside, and one that allows the replies from the server in the other direction. |
| Dynamic routing protocols           | You can, however, add static routes for traffic originating on the ASA. You can also allow dynamic routing protocols through the ASA using an extended access list.                                                                                                                                                                                                |
| Multicast IP routing                | You can allow multicast traffic through the ASA by allowing it in an extended access list.                                                                                                                                                                                                                                                                         |
| QoS                                 | —                                                                                                                                                                                                                                                                                                                                                                  |
| VPN termination for through traffic | The transparent firewall supports site-to-site VPN tunnels for management connections only. It does not terminate VPN connections for traffic through the ASA. You can pass VPN traffic through the ASA using an extended access list, but it does not terminate non-management connections. SSL VPN is also not supported.                                        |

## Setting the Firewall Mode

This section describes how to change the firewall mode.



### Note

We recommend that you set the firewall mode before you perform any other configuration because changing the firewall mode clears the running configuration.

### Prerequisites

When you change modes, the ASA clears the running configuration (see the [“Guidelines and Limitations”](#) section on page 4-6 for more information).

- If you already have a populated configuration, be sure to back up your configuration before changing the mode; you can use this backup for reference when creating your new configuration. See the [“Backing Up Configuration Files or Other Files”](#) section on page 81-8.
- Use the CLI at the console port to change the mode. If you use any other type of session, including the ASDM Command Line Interface tool or SSH, you will be disconnected when the configuration is cleared, and you will have to reconnect to the ASA using the console port in any case.
- For the ASA 5500 series appliances, set the mode for the whole system in the system execution space.

## Detailed Steps

| Command                                                                | Purpose                                                                                                                |
|------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------|
| <code>firewall transparent</code>                                      | Sets the firewall mode to transparent. To change the mode to routed, enter the <b>no firewall transparent</b> command. |
| <b>Example:</b><br><code>hostname(config)# firewall transparent</code> | <b>Note</b> You are not prompted to confirm the firewall mode change; the change occurs immediately.                   |

## Feature History for Firewall Mode

Table 4-2 lists the release history for each feature change and the platform release in which it was implemented.

**Table 4-2** Feature History for Firewall Mode

| Feature Name                       | Releases | Feature Information                                                                                                                                                                                                                                                                                                 |
|------------------------------------|----------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Transparent firewall mode          | 7.0(1)   | A transparent firewall is a Layer 2 firewall that acts like a “bump in the wire,” or a “stealth firewall,” and is not seen as a router hop to connected devices.<br><br>We introduced the following commands: <b>firewall transparent</b> , <b>show firewall</b> .                                                  |
| Transparent firewall bridge groups | 8.4(1)   | Multiple bridge groups are now allowed in transparent firewall mode. Also, you can now configure up to four interfaces (per bridge group); formerly, you could only configure two interfaces in transparent mode.<br><br>We introduced the following commands: <b>firewall transparent</b> , <b>show firewall</b> . |

## Configuring ARP Inspection for the Transparent Firewall

This section describes ARP inspection and how to enable it and includes the following topics:

- [Information About ARP Inspection, page 4-10](#)
- [Licensing Requirements for ARP Inspection, page 4-10](#)
- [Default Settings, page 4-10](#)
- [Guidelines and Limitations, page 4-10](#)
- [Configuring ARP Inspection, page 4-11](#)
- [Monitoring ARP Inspection, page 4-12](#)
- [Feature History for ARP Inspection, page 4-13](#)

## Information About ARP Inspection

By default, all ARP packets are allowed through the ASA. You can control the flow of ARP packets by enabling ARP inspection.

When you enable ARP inspection, the ASA compares the MAC address, IP address, and source interface in all ARP packets to static entries in the ARP table, and takes the following actions:

- If the IP address, MAC address, and source interface match an ARP entry, the packet is passed through.
- If there is a mismatch between the MAC address, the IP address, or the interface, then the ASA drops the packet.
- If the ARP packet does not match any entries in the static ARP table, then you can set the ASA to either forward the packet out all interfaces (flood), or to drop the packet.



**Note** The dedicated management interface, if present, never floods packets even if this parameter is set to flood.

ARP inspection prevents malicious users from impersonating other hosts or routers (known as ARP spoofing). ARP spoofing can enable a “man-in-the-middle” attack. For example, a host sends an ARP request to the gateway router; the gateway router responds with the gateway router MAC address. The attacker, however, sends another ARP response to the host with the attacker MAC address instead of the router MAC address. The attacker can now intercept all the host traffic before forwarding it on to the router.

ARP inspection ensures that an attacker cannot send an ARP response with the attacker MAC address, so long as the correct MAC address and the associated IP address are in the static ARP table.

## Licensing Requirements for ARP Inspection

The following table shows the licensing requirements for this feature.

| Model      | License Requirement |
|------------|---------------------|
| All models | Base License.       |

## Default Settings

By default, all ARP packets are allowed through the ASA.

If you enable ARP inspection, the default setting is to flood non-matching packets.

## Guidelines and Limitations

### Context Mode Guidelines

- Supported in single and multiple context mode.
- In multiple context mode, configure ARP inspection within each context.

**Firewall Mode Guidelines**

Supported only in transparent firewall mode. Routed mode is not supported.

## Configuring ARP Inspection

This section describes how to configure ARP inspection and includes the following topics:

- [Task Flow for Configuring ARP Inspection, page 4-11](#)
- [Adding a Static ARP Entry, page 4-11](#)
- [Enabling ARP Inspection, page 4-12](#)

### Task Flow for Configuring ARP Inspection

To configure ARP Inspection, perform the following steps:

- 
- Step 1** Add static ARP entries according to the “[Adding a Static ARP Entry](#)” section on page 4-11. ARP inspection compares ARP packets with static ARP entries in the ARP table, so static ARP entries are required for this feature.
- Step 2** Enable ARP inspection according to the “[Enabling ARP Inspection](#)” section on page 4-12.
- 

### Adding a Static ARP Entry

ARP inspection compares ARP packets with static ARP entries in the ARP table. Although hosts identify a packet destination by an IP address, the actual delivery of the packet on Ethernet relies on the Ethernet MAC address. When a router or host wants to deliver a packet on a directly connected network, it sends an ARP request asking for the MAC address associated with the IP address, and then delivers the packet to the MAC address according to the ARP response. The host or router keeps an ARP table so it does not have to send ARP requests for every packet it needs to deliver. The ARP table is dynamically updated whenever ARP responses are sent on the network, and if an entry is not used for a period of time, it times out. If an entry is incorrect (for example, the MAC address changes for a given IP address), the entry times out before it can be updated.

**Note**

The transparent firewall uses dynamic ARP entries in the ARP table for traffic to and from the ASA, such as management traffic.

---

#### Detailed Steps

| Command                                                                                 | Purpose                  |
|-----------------------------------------------------------------------------------------|--------------------------|
| <code>arp interface_name ip_address mac_address</code>                                  | Adds a static ARP entry. |
| <p><b>Example:</b></p> <pre>hostname(config)# arp outside 10.1.1.1 0009.7cbe.2100</pre> |                          |

## Examples

For example, to allow ARP responses from the router at 10.1.1.1 with the MAC address 0009.7cbe.2100 on the outside interface, enter the following command:

```
hostname(config)# arp outside 10.1.1.1 0009.7cbe.2100
```

## What to Do Next

Enable ARP inspection according to the [“Enabling ARP Inspection” section on page 4-12](#).

## Enabling ARP Inspection

This section describes how to enable ARP inspection.

### Detailed Steps

| Command                                                                                                                                                | Purpose                                                                                                                                                                                                                                                                                                                                         |
|--------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <pre>arp-inspection interface_name enable [flood   no-flood]</pre> <p><b>Example:</b><br/>hostname(config)# arp-inspection outside enable no-flood</p> | <p>Enables ARP inspection.</p> <p>The <b>flood</b> keyword forwards non-matching ARP packets out all interfaces, and <b>no-flood</b> drops non-matching packets.</p> <p><b>Note</b> The default setting is to flood non-matching packets. To restrict ARP through the ASA to only static entries, then set this command to <b>no-flood</b>.</p> |

## Examples

For example, to enable ARP inspection on the outside interface, and to drop all non-matching ARP packets, enter the following command:

```
hostname(config)# arp-inspection outside enable no-flood
```

## Monitoring ARP Inspection

To monitor ARP inspection, perform the following task:

| Command                        | Purpose                                                          |
|--------------------------------|------------------------------------------------------------------|
| <pre>show arp-inspection</pre> | Shows the current settings for ARP inspection on all interfaces. |

## Feature History for ARP Inspection

Table 4-2 lists the release history for each feature change and the platform release in which it was implemented.

**Table 4-3** Feature History for ARP Inspection

| Feature Name                                  | Releases | Feature Information                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|-----------------------------------------------|----------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ARP inspection                                | 7.0(1)   | <p>ARP inspection compares the MAC address, IP address, and source interface in all ARP packets to static entries in the ARP table.</p> <p>We introduced the following commands: <b>arp</b>, <b>arp-inspection</b>, and <b>show arp-inspection</b>.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| ARP cache additions for non-connected subnets | 8.4(5)   | <p>The ASA ARP cache only contains entries from directly-connected subnets by default. You can now enable the ARP cache to also include non-directly-connected subnets. We do not recommend enabling this feature unless you know the security risks. This feature could facilitate denial of service (DoS) attack against the ASA; a user on any interface could send out many ARP replies and overload the ASA ARP table with false entries.</p> <p>You may want to use this feature if you use:</p> <ul style="list-style-type: none"> <li>• Secondary subnets.</li> <li>• Proxy ARP on adjacent routes for traffic forwarding.</li> </ul> <p>We introduced the following command: <b>arp permit-nonconnected</b>.</p> <p><i>This feature is not available in 8.5(1), 8.6(1), or 9.0(1).</i></p> |

## Customizing the MAC Address Table for the Transparent Firewall

This section describes the MAC address table and includes the following topics:

- [Information About the MAC Address Table, page 4-14](#)
- [Licensing Requirements for the MAC Address Table, page 4-14](#)
- [Default Settings, page 4-14](#)
- [Guidelines and Limitations, page 4-14](#)
- [Configuring the MAC Address Table, page 4-15](#)
- [Monitoring the MAC Address Table, page 4-16](#)
- [Feature History for the MAC Address Table, page 4-17](#)

## Information About the MAC Address Table

The ASA learns and builds a MAC address table in a similar way as a normal bridge or switch: when a device sends a packet through the ASA, the ASA adds the MAC address to its table. The table associates the MAC address with the source interface so that the ASA knows to send any packets addressed to the device out the correct interface.

The ASA 5505 includes a built-in switch; the switch MAC address table maintains the MAC address-to-switch port mapping for traffic within each VLAN. This section only discusses the *bridge* MAC address table, which maintains the MAC address-to-VLAN interface mapping for traffic that passes between VLANs.

Because the ASA is a firewall, if the destination MAC address of a packet is not in the table, the ASA does not flood the original packet on all interfaces as a normal bridge does. Instead, it generates the following packets for directly connected devices or for remote devices:

- Packets for directly connected devices—The ASA generates an ARP request for the destination IP address, so that the ASA can learn which interface receives the ARP response.
- Packets for remote devices—The ASA generates a ping to the destination IP address so that the ASA can learn which interface receives the ping reply.

The original packet is dropped.

## Licensing Requirements for the MAC Address Table

The following table shows the licensing requirements for this feature.

| Model      | License Requirement |
|------------|---------------------|
| All models | Base License.       |

## Default Settings

The default timeout value for dynamic MAC address table entries is 5 minutes.

By default, each interface automatically learns the MAC addresses of entering traffic, and the ASA adds corresponding entries to the MAC address table.

## Guidelines and Limitations

### Context Mode Guidelines

- Supported in single and multiple context mode.
- In multiple context mode, configure the MAC address table within each context.

### Firewall Mode Guidelines

Supported only in transparent firewall mode. Routed mode is not supported.

**Additional Guidelines**

In transparent firewall mode, the management interface updates the MAC address table in the same manner as a data interface; therefore you should not connect both a management and a data interface to the same switch unless you configure one of the switch ports as a routed port (by default Cisco Catalyst switches share a MAC address for all VLAN switch ports). Otherwise, if traffic arrives on the management interface from the physically-connected switch, then the ASA updates the MAC address table to use the *management* interface to access the switch, instead of the data interface. This action causes a temporary traffic interruption; the ASA will not re-update the MAC address table for packets from the switch to the data interface for at least 30 seconds for security reasons.

## Configuring the MAC Address Table

This section describes how you can customize the MAC address table and includes the following sections:

- [Adding a Static MAC Address, page 4-15](#)
- [Setting the MAC Address Timeout, page 4-15](#)
- [Disabling MAC Address Learning, page 4-16](#)

### Adding a Static MAC Address

Normally, MAC addresses are added to the MAC address table dynamically as traffic from a particular MAC address enters an interface. You can add static MAC addresses to the MAC address table if desired. One benefit to adding static entries is to guard against MAC spoofing. If a client with the same MAC address as a static entry attempts to send traffic to an interface that does not match the static entry, then the ASA drops the traffic and generates a system message. When you add a static ARP entry (see the “[Adding a Static ARP Entry](#)” section on page 4-11), a static MAC address entry is automatically added to the MAC address table.

To add a static MAC address to the MAC address table, enter the following command:

| Command                                                                                            | Purpose                                                                                           |
|----------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------|
| <pre>mac-address-table static interface_name mac_address</pre>                                     | <p>Adds a static MAC address entry.</p> <p>The <i>interface_name</i> is the source interface.</p> |
| <p><b>Example:</b></p> <pre>hostname(config)# mac-address-table static inside 0009.7cbe.2100</pre> |                                                                                                   |

### Setting the MAC Address Timeout

The default timeout value for dynamic MAC address table entries is 5 minutes, but you can change the timeout. To change the timeout, enter the following command:

| Command                                                              | Purpose                                                                                                                                     |
|----------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------|
| <code>mac-address-table aging-time timeout_value</code>              | Sets the MAC address entry timeout.<br><br>The <i>timeout_value</i> (in minutes) is between 5 and 720 (12 hours). 5 minutes is the default. |
| <b>Example:</b><br>hostname(config)# mac-address-table aging-time 10 |                                                                                                                                             |

## Disabling MAC Address Learning

By default, each interface automatically learns the MAC addresses of entering traffic, and the ASA adds corresponding entries to the MAC address table. You can disable MAC address learning if desired, however, unless you statically add MAC addresses to the table, no traffic can pass through the ASA.

To disable MAC address learning, enter the following command:

| Command                                                       | Purpose                                                                                                                                                                                                 |
|---------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>mac-learn interface_name disable</code>                 | Disables MAC address learning.<br><br>The <b>no</b> form of this command reenables MAC address learning. The <b>clear configure mac-learn</b> command reenables MAC address learning on all interfaces. |
| <b>Example:</b><br>hostname(config)# mac-learn inside disable |                                                                                                                                                                                                         |

## Monitoring the MAC Address Table

You can view the entire MAC address table (including static and dynamic entries for both interfaces), or you can view the MAC address table for an interface. To view the MAC address table, enter the following command:

| Command                                              | Purpose                      |
|------------------------------------------------------|------------------------------|
| <code>show mac-address-table [interface_name]</code> | Shows the MAC address table. |

### Examples

The following is sample output from the **show mac-address-table** command that shows the entire table:

```
hostname# show mac-address-table
interface mac address type Time Left

outside 0009.7cbe.2100 static -
inside 0010.7cbe.6101 static -
inside 0009.7cbe.5101 dynamic 10
```

The following is sample output from the **show mac-address-table** command that shows the table for the inside interface:

```
hostname# show mac-address-table inside
interface mac address type Time Left

inside 0010.7cbe.6101 static -
```

```
inside 0009.7cbe.5101 dynamic 10
```

## Feature History for the MAC Address Table

Table 4-2 lists the release history for each feature change and the platform release in which it was implemented.

**Table 4-4** Feature History for the MAC Address Table

| Feature Name      | Releases | Feature Information                                                                                                                                                                                                                       |
|-------------------|----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| MAC address table | 7.0(1)   | Transparent firewall mode uses a MAC address table.<br>We introduced the following commands:<br><b>mac-address-table static</b> , <b>mac-address-table aging-time</b> ,<br><b>mac-learn disable</b> , and <b>show mac-address-table</b> . |

## Firewall Mode Examples

This section includes examples of how traffic moves through the ASA and includes the following topics:

- [How Data Moves Through the ASA in Routed Firewall Mode, page 4-17](#)
- [How Data Moves Through the Transparent Firewall, page 4-23](#)

## How Data Moves Through the ASA in Routed Firewall Mode


This section describes how data moves through the ASA in routed firewall mode and includes the following topics:

- [An Inside User Visits a Web Server, page 4-18](#)
- [An Outside User Visits a Web Server on the DMZ, page 4-19](#)
- [An Inside User Visits a Web Server on the DMZ, page 4-20](#)
- [An Outside User Attempts to Access an Inside Host, page 4-21](#)
- [A DMZ User Attempts to Access an Inside Host, page 4-22](#)

## An Inside User Visits a Web Server

Figure 4-3 shows an inside user accessing an outside web server.

**Figure 4-3** Inside to Outside

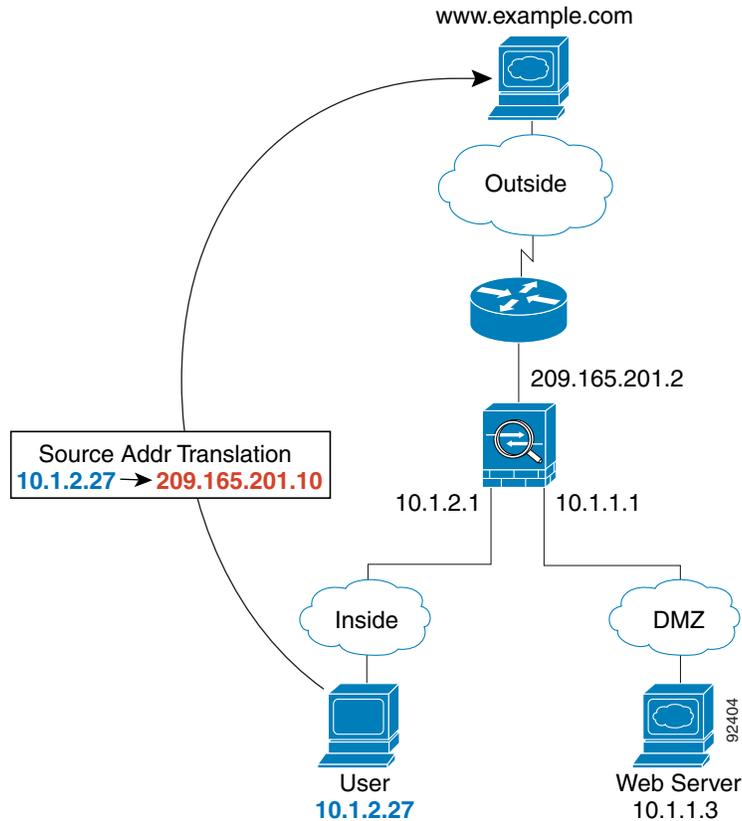

The following steps describe how data moves through the ASA (see Figure 4-3):

1. The user on the inside network requests a web page from `www.example.com`.
2. The ASA receives the packet and because it is a new session, the ASA verifies that the packet is allowed according to the terms of the security policy (access lists, filters, AAA).

For multiple context mode, the ASA first classifies the packet according to either a unique interface or a unique destination address associated with a context; the destination address is associated by matching an address translation in a context. In this case, the interface would be unique; the `www.example.com` IP address does not have a current address translation in a context.

3. The ASA translates the local source address (10.1.2.27) to the global address 209.165.201.10, which is on the outside interface subnet.


The global address could be on any subnet, but routing is simplified when it is on the outside interface subnet.

4. The ASA then records that a session is established and forwards the packet from the outside interface.

5. When `www.example.com` responds to the request, the packet goes through the ASA, and because the session is already established, the packet bypasses the many lookups associated with a new connection. The ASA performs NAT by translating the global destination address to the local user address, `10.1.2.27`.
6. The ASA forwards the packet to the inside user.

## An Outside User Visits a Web Server on the DMZ

Figure 4-4 shows an outside user accessing the DMZ web server.

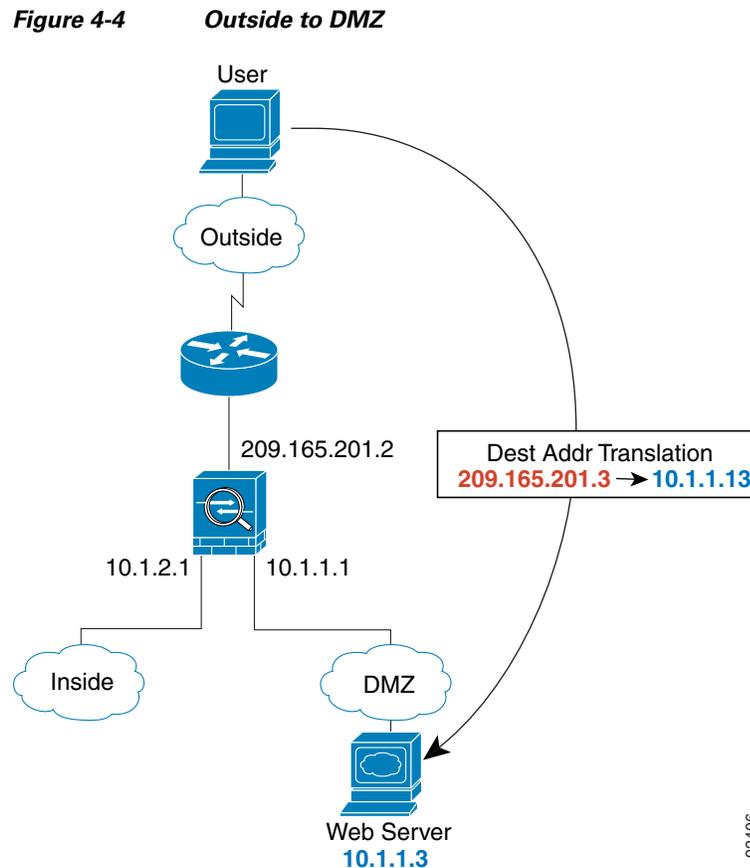

The following steps describe how data moves through the ASA (see Figure 4-4):


1. A user on the outside network requests a web page from the DMZ web server using the global destination address of `209.165.201.3`, which is on the outside interface subnet.
2. The ASA untranslates the destination address to the local address `10.1.1.3`.
3. The ASA receives the packet and because it is a new session, the ASA verifies that the packet is allowed according to the terms of the security policy (access lists, filters, AAA).  
For multiple context mode, the ASA first classifies the packet according to either a unique interface or a unique destination address associated with a context; the destination address is associated by matching an address translation in a context. In this case, the classifier “knows” that the DMZ web server address belongs to a certain context because of the server address translation.
4. The ASA then adds a session entry to the fast path and forwards the packet from the DMZ interface.

5. When the DMZ web server responds to the request, the packet goes through the ASA and because the session is already established, the packet bypasses the many lookups associated with a new connection. The ASA performs NAT by translating the local source address to 209.165.201.3.
6. The ASA forwards the packet to the outside user.

## An Inside User Visits a Web Server on the DMZ

Figure 4-5 shows an inside user accessing the DMZ web server.

**Figure 4-5** Inside to DMZ

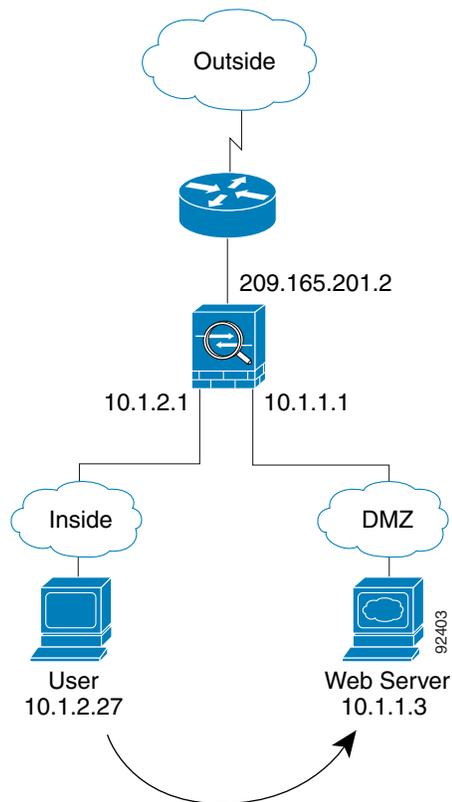


The following steps describe how data moves through the ASA (see Figure 4-5):

1. A user on the inside network requests a web page from the DMZ web server using the destination address of 10.1.1.3.
2. The ASA receives the packet and because it is a new session, the ASA verifies that the packet is allowed according to the terms of the security policy (access lists, filters, AAA).  
For multiple context mode, the ASA first classifies the packet according to either a unique interface or a unique destination address associated with a context; the destination address is associated by matching an address translation in a context. In this case, the interface is unique; the web server IP address does not have a current address translation.
3. The ASA then records that a session is established and forwards the packet out of the DMZ interface.
4. When the DMZ web server responds to the request, the packet goes through the fast path, which lets the packet bypass the many lookups associated with a new connection.

- The ASA forwards the packet to the inside user.

## An Outside User Attempts to Access an Inside Host

Figure 4-6 shows an outside user attempting to access the inside network.

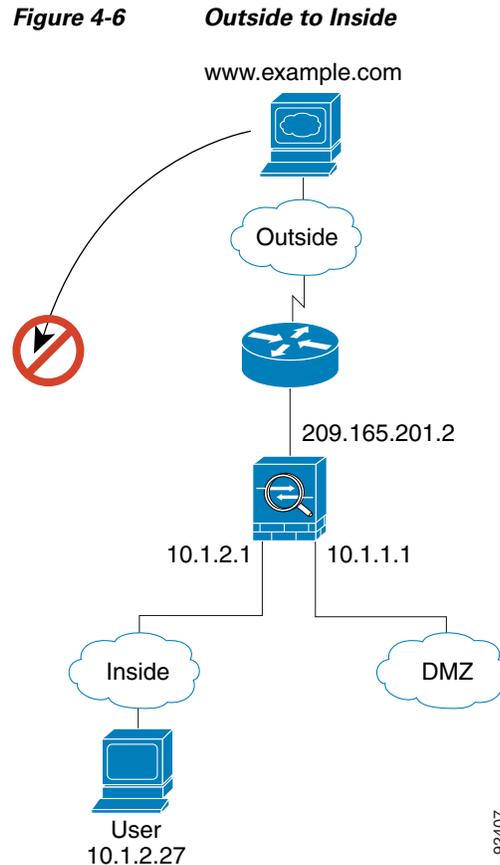


The following steps describe how data moves through the ASA (see Figure 4-6):

- A user on the outside network attempts to reach an inside host (assuming the host has a routable IP address).  
If the inside network uses private addresses, no outside user can reach the inside network without NAT. The outside user might attempt to reach an inside user by using an existing NAT session.
- The ASA receives the packet and because it is a new session, the ASA verifies if the packet is allowed according to the security policy (access lists, filters, AAA).
- The packet is denied, and the ASA drops the packet and logs the connection attempt.  
If the outside user is attempting to attack the inside network, the ASA employs many technologies to determine if a packet is valid for an already established session.

## A DMZ User Attempts to Access an Inside Host

Figure 4-7 shows a user in the DMZ attempting to access the inside network.

Figure 4-7 DMZ to Inside

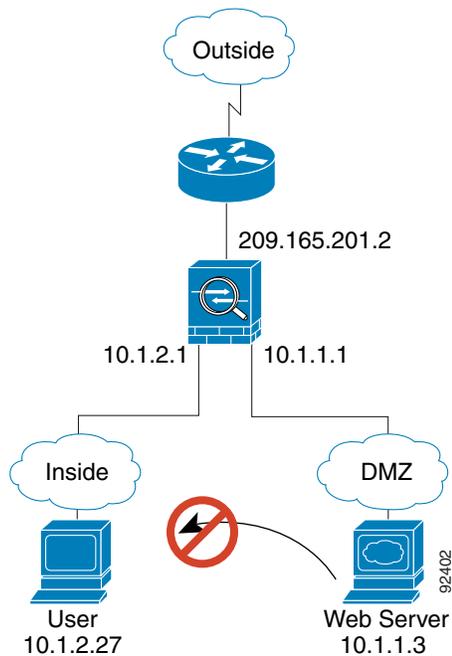

The following steps describe how data moves through the ASA (see Figure 4-7):


1. A user on the DMZ network attempts to reach an inside host. Because the DMZ does not have to route the traffic on the Internet, the private addressing scheme does not prevent routing.
2. The ASA receives the packet and because it is a new session, the ASA verifies if the packet is allowed according to the security policy (access lists, filters, AAA).

The packet is denied, and the ASA drops the packet and logs the connection attempt.

## How Data Moves Through the Transparent Firewall

Figure 4-8 shows a typical transparent firewall implementation with an inside network that contains a public web server. The ASA has an access list so that the inside users can access Internet resources. Another access list lets the outside users access only the web server on the inside network.

**Figure 4-8** Typical Transparent Firewall Data Path

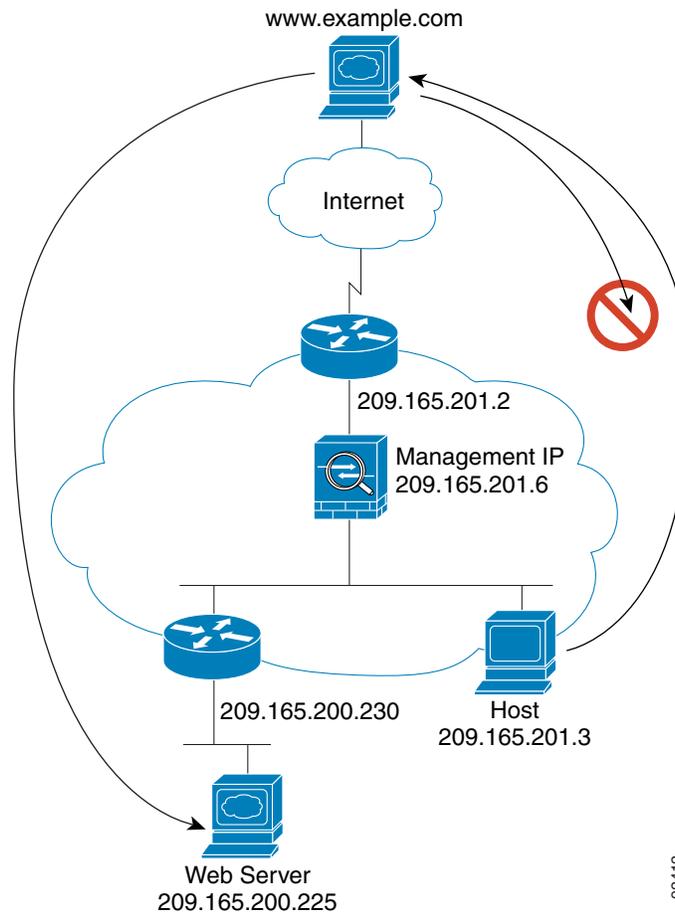


This section describes how data moves through the ASA and includes the following topics:

- [An Inside User Visits a Web Server, page 4-24](#)
- [An Inside User Visits a Web Server Using NAT, page 4-25](#)
- [An Outside User Visits a Web Server on the Inside Network, page 4-26](#)
- [An Outside User Attempts to Access an Inside Host, page 4-27](#)

## An Inside User Visits a Web Server

Figure 4-9 shows an inside user accessing an outside web server.

**Figure 4-9** Inside to Outside

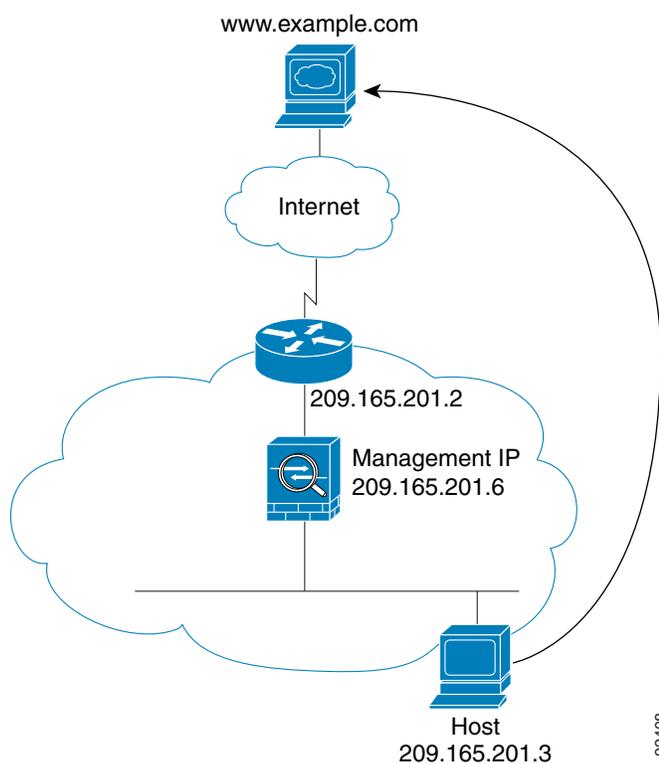

The following steps describe how data moves through the ASA (see Figure 4-9):

1. The user on the inside network requests a web page from `www.example.com`.
2. The ASA receives the packet and adds the source MAC address to the MAC address table, if required. Because it is a new session, it verifies that the packet is allowed according to the terms of the security policy (access lists, filters, AAA).

For multiple context mode, the ASA first classifies the packet according to a unique interface.

3. The ASA records that a session is established.
4. If the destination MAC address is in its table, the ASA forwards the packet out of the outside interface. The destination MAC address is that of the upstream router, 209.165.201.2.


If the destination MAC address is not in the ASA table, the ASA attempts to discover the MAC address by sending an ARP request or a ping. The first packet is dropped.

5. The web server responds to the request; because the session is already established, the packet bypasses the many lookups associated with a new connection.
6. The ASA forwards the packet to the inside user.

## An Inside User Visits a Web Server Using NAT

Figure 4-10 shows an inside user accessing an outside web server.

**Figure 4-10** Inside to Outside with NAT

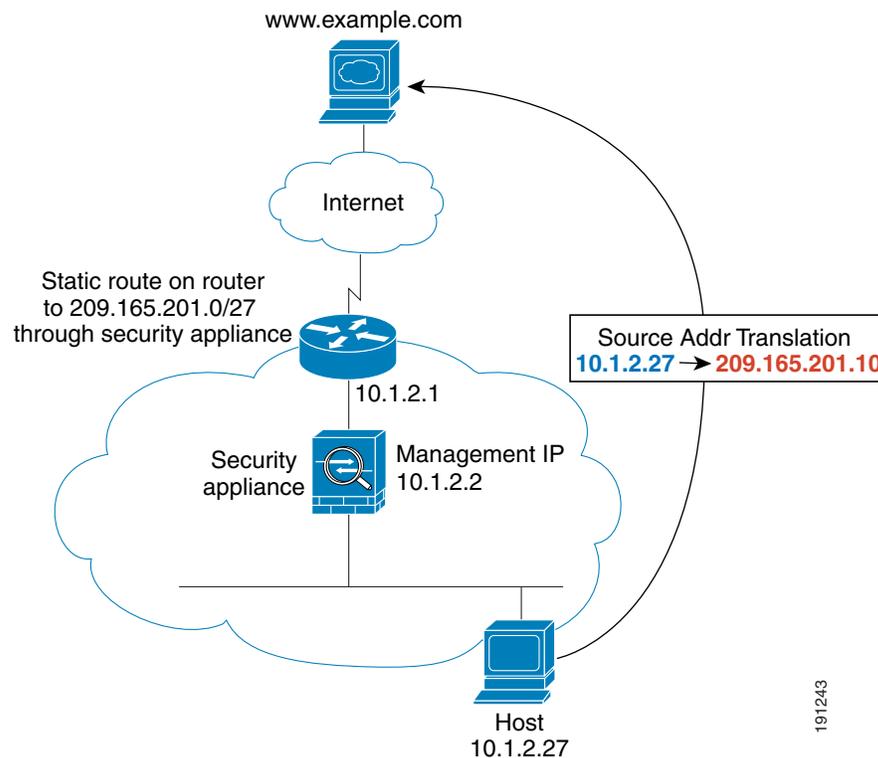

The following steps describe how data moves through the ASA (see Figure 4-10):

1. The user on the inside network requests a web page from www.example.com.
2. The ASA receives the packet and adds the source MAC address to the MAC address table, if required. Because it is a new session, it verifies that the packet is allowed according to the terms of the security policy (access lists, filters, AAA).

For multiple context mode, the ASA first classifies the packet according to a unique interface.

3. The ASA translates the real address (10.1.2.27) to the mapped address 209.165.201.10. Because the mapped address is not on the same network as the outside interface, then be sure the upstream router has a static route to the mapped network that points to the ASA.
4. The ASA then records that a session is established and forwards the packet from the outside interface.
5. If the destination MAC address is in its table, the ASA forwards the packet out of the outside interface. The destination MAC address is that of the upstream router, 10.1.2.1.


If the destination MAC address is not in the ASA table, the ASA attempts to discover the MAC address by sending an ARP request and a ping. The first packet is dropped.

6. The web server responds to the request; because the session is already established, the packet bypasses the many lookups associated with a new connection.
7. The ASA performs NAT by translating the mapped address to the real address, 10.1.2.27.

## An Outside User Visits a Web Server on the Inside Network

Figure 4-11 shows an outside user accessing the inside web server.

**Figure 4-11** *Outside to Inside*

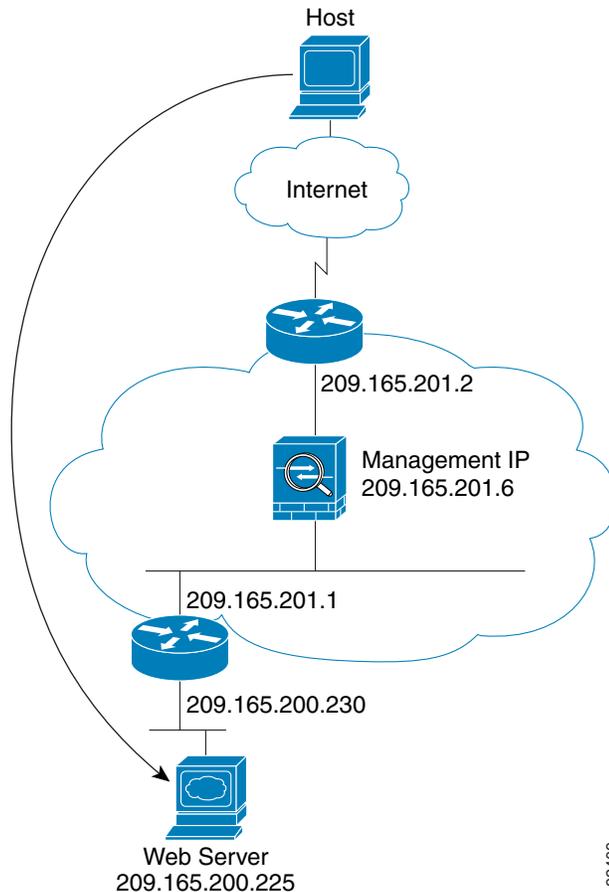

92409

The following steps describe how data moves through the ASA (see Figure 4-11):

1. A user on the outside network requests a web page from the inside web server.
2. The ASA receives the packet and adds the source MAC address to the MAC address table, if required. Because it is a new session, it verifies that the packet is allowed according to the terms of the security policy (access lists, filters, AAA).

For multiple context mode, the ASA first classifies the packet according to a unique interface.

3. The ASA records that a session is established.
4. If the destination MAC address is in its table, the ASA forwards the packet out of the inside interface. The destination MAC address is that of the downstream router, 209.165.201.1.


If the destination MAC address is not in the ASA table, the ASA attempts to discover the MAC address by sending an ARP request and a ping. The first packet is dropped.

5. The web server responds to the request; because the session is already established, the packet bypasses the many lookups associated with a new connection.
6. The ASA forwards the packet to the outside user.

## An Outside User Attempts to Access an Inside Host

Figure 4-12 shows an outside user attempting to access a host on the inside network.

**Figure 4-12** *Outside to Inside*

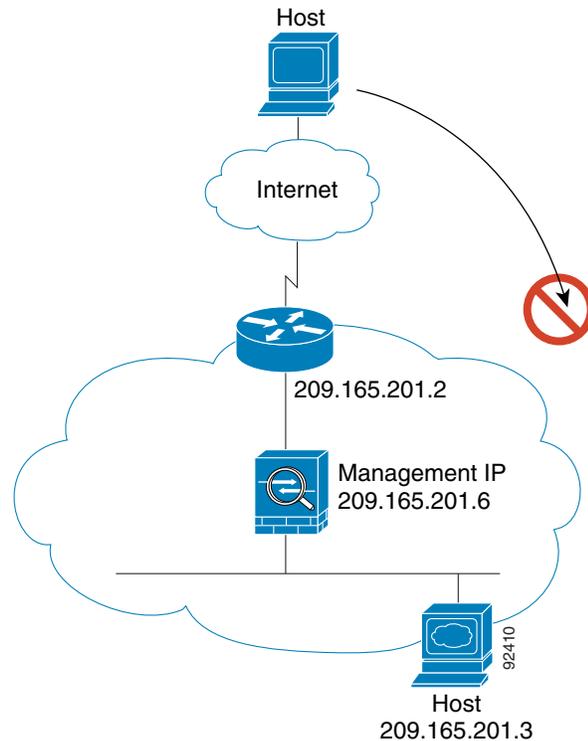

The following steps describe how data moves through the ASA (see Figure 4-12):

1. A user on the outside network attempts to reach an inside host.
2. The ASA receives the packet and adds the source MAC address to the MAC address table, if required. Because it is a new session, it verifies if the packet is allowed according to the terms of the security policy (access lists, filters, AAA).  
For multiple context mode, the ASA first classifies the packet according to a unique interface.
3. The packet is denied because there is no access list permitting the outside host, and the ASA drops the packet.
4. If the outside user is attempting to attack the inside network, the ASA employs many technologies to determine if a packet is valid for an already established session.





# CHAPTER 5

## Configuring Multiple Context Mode

---

This chapter describes how to configure multiple security contexts on the ASA and includes the following sections:

- [Information About Security Contexts, page 5-1](#)
- [Licensing Requirements for Multiple Context Mode, page 5-12](#)
- [Guidelines and Limitations, page 5-13](#)
- [Default Settings, page 5-14](#)
- [Configuring Multiple Contexts, page 5-14](#)
- [Changing Between Contexts and the System Execution Space, page 5-23](#)
- [Managing Security Contexts, page 5-23](#)
- [Monitoring Security Contexts, page 5-27](#)
- [Configuration Examples for Multiple Context Mode, page 5-38](#)
- [Feature History for Multiple Context Mode, page 5-39](#)

## Information About Security Contexts

You can partition a single ASA into multiple virtual devices, known as security contexts. Each context is an independent device, with its own security policy, interfaces, and administrators. Multiple contexts are similar to having multiple standalone devices. Many features are supported in multiple context mode, including routing tables, firewall features, IPS, and management. Some features are not supported, including VPN and dynamic routing protocols.



### Note

---

When the ASA is configured for security contexts (for example, for Active/Active Stateful Failover), IPsec or SSL VPN cannot be enabled. Therefore, these features are unavailable.

---

This section provides an overview of security contexts and includes the following topics:

- [Common Uses for Security Contexts, page 5-2](#)
- [Context Configuration Files, page 5-2](#)
- [How the ASA Classifies Packets, page 5-3](#)
- [Cascading Security Contexts, page 5-6](#)
- [Management Access to Security Contexts, page 5-7](#)

- [Information About Resource Management, page 5-8](#)
- [Information About MAC Addresses, page 5-11](#)

## Common Uses for Security Contexts

You might want to use multiple security contexts in the following situations:

- You are a service provider and want to sell security services to many customers. By enabling multiple security contexts on the ASA, you can implement a cost-effective, space-saving solution that keeps all customer traffic separate and secure, and also eases configuration.
- You are a large enterprise or a college campus and want to keep departments completely separate.
- You are an enterprise that wants to provide distinct security policies to different departments.
- You have any network that requires more than one ASA.

## Context Configuration Files

This section describes how the ASA implements multiple context mode configurations and includes the following sections:

- [Context Configurations, page 5-2](#)
- [System Configuration, page 5-2](#)
- [Admin Context Configuration, page 5-2](#)

## Context Configurations

The ASA includes a configuration for each context that identifies the security policy, interfaces, and almost all the options you can configure on a standalone device. You can store context configurations on the internal flash memory or the external flash memory card, or you can download them from a TFTP, FTP, or HTTP(S) server.

## System Configuration

The system administrator adds and manages contexts by configuring each context configuration location, allocated interfaces, and other context operating parameters in the system configuration, which, like a single mode configuration, is the startup configuration. The system configuration identifies basic settings for the ASA. The system configuration does not include any network interfaces or network settings for itself; rather, when the system needs to access network resources (such as downloading the contexts from the server), it uses one of the contexts that is designated as the *admin context*. The system configuration does include a specialized failover interface for failover traffic only.

## Admin Context Configuration

The admin context is just like any other context, except that when a user logs in to the admin context, then that user has system administrator rights and can access the system and all other contexts. The admin context is not restricted in any way, and can be used as a regular context. However, because

logging into the admin context grants you administrator privileges over all contexts, you might need to restrict access to the admin context to appropriate users. The admin context must reside on flash memory, and not remotely.

If your system is already in multiple context mode, or if you convert from single mode, the admin context is created automatically as a file on the internal flash memory called `admin.cfg`. This context is named “admin.” If you do not want to use `admin.cfg` as the admin context, you can change the admin context.

## How the ASA Classifies Packets

Each packet that enters the ASA must be classified, so that the ASA can determine to which context to send a packet. This section includes the following topics:

- [Valid Classifier Criteria, page 5-3](#)
- [Classification Examples, page 5-4](#)

**Note**

---

If the destination MAC address is a multicast or broadcast MAC address, the packet is duplicated and delivered to each context.

---

### Valid Classifier Criteria

This section describes the criteria used by the classifier and includes the following topics:

- [Unique Interfaces, page 5-3](#)
- [Unique MAC Addresses, page 5-3](#)
- [NAT Configuration, page 5-4](#)

**Note**

---

For management traffic destined for an interface, the interface IP address is used for classification.

---

The routing table is not used for packet classification.

---

### Unique Interfaces

If only one context is associated with the ingress interface, the ASA classifies the packet into that context. In transparent firewall mode, unique interfaces for contexts are required, so this method is used to classify packets at all times.

### Unique MAC Addresses

If multiple contexts share an interface, then the classifier uses the interface MAC address. The ASA lets you assign a different MAC address in each context to the same shared interface. By default, shared interfaces do not have unique MAC addresses; the interface uses the burned-in MAC address in every context. An upstream router cannot route directly to a context without unique MAC addresses. You can set the MAC addresses manually when you configure each interface (see the [“Configuring the MAC Address and MTU”](#) section on page 8-9), or you can automatically generate MAC addresses (see the [“Automatically Assigning MAC Addresses to Context Interfaces”](#) section on page 5-22).


## NAT Configuration

If you do not use unique MAC addresses, then the mapped addresses in your NAT configuration are used to classify packets. We recommend using MAC addresses instead of NAT, so that traffic classification can occur regardless of the completeness of the NAT configuration.

## Classification Examples

Figure 5-1 shows multiple contexts sharing an outside interface. The classifier assigns the packet to Context B because Context B includes the MAC address to which the router sends the packet.


**Figure 5-1** Packet Classification with a Shared Interface using MAC Addresses

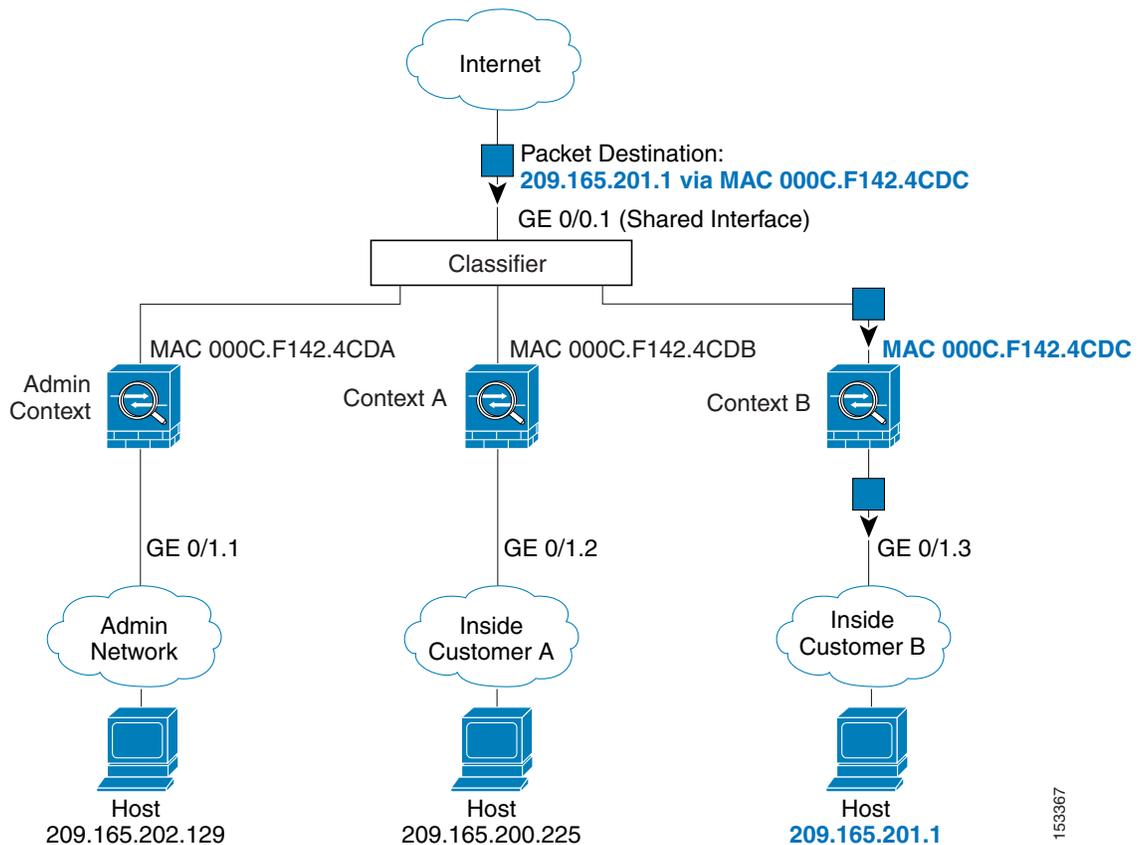

153367


Note that all new incoming traffic must be classified, even from inside networks. [Figure 5-2](#) shows a host on the Context B inside network accessing the Internet. The classifier assigns the packet to Context B because the ingress interface is Gigabit Ethernet 0/1.3, which is assigned to Context B.

**Figure 5-2** Incoming Traffic from Inside Networks

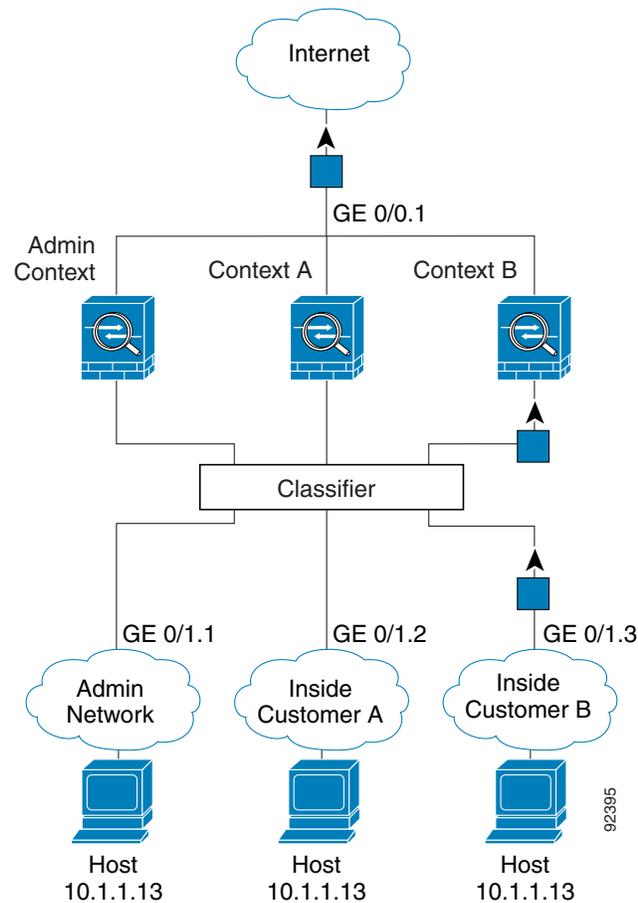

For transparent firewalls, you must use unique interfaces. [Figure 5-3](#) shows a host on the Context B inside network accessing the Internet. The classifier assigns the packet to Context B because the ingress interface is Gigabit Ethernet 1/0.3, which is assigned to Context B.

**Figure 5-3** Transparent Firewall Contexts

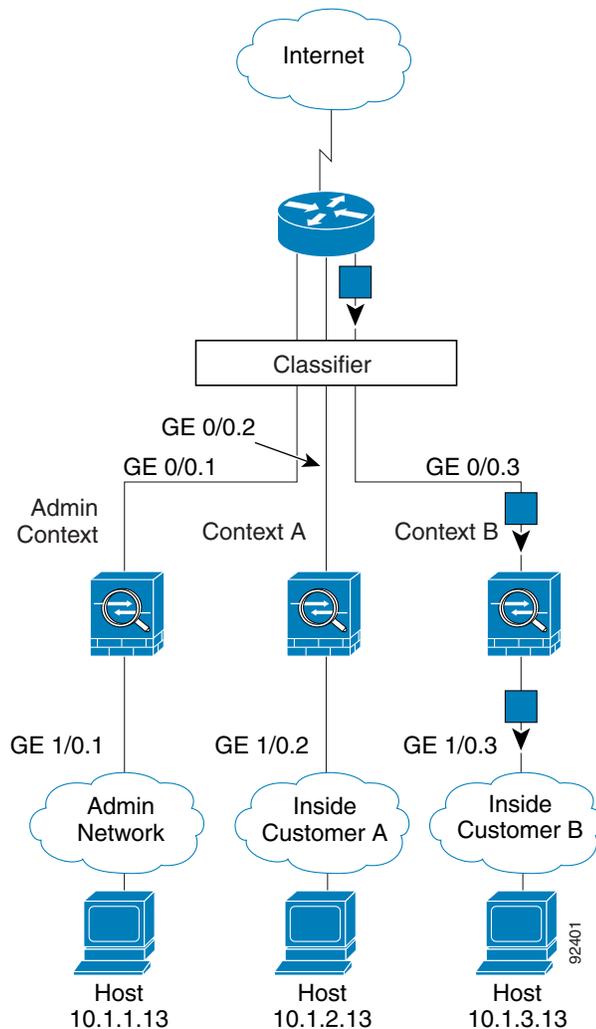

## Cascading Security Contexts

Placing a context directly in front of another context is called cascading contexts; the outside interface of one context is the same interface as the inside interface of another context. You might want to cascade contexts if you want to simplify the configuration of some contexts by configuring shared parameters in the top context.




### Note

Cascading contexts requires that you configure unique MAC addresses for each context interface. Because of the limitations of classifying packets on shared interfaces without MAC addresses, we do not recommend using cascading contexts without unique MAC addresses.

Figure 5-4 shows a gateway context with two contexts behind the gateway.

**Figure 5-4 Cascading Contexts**

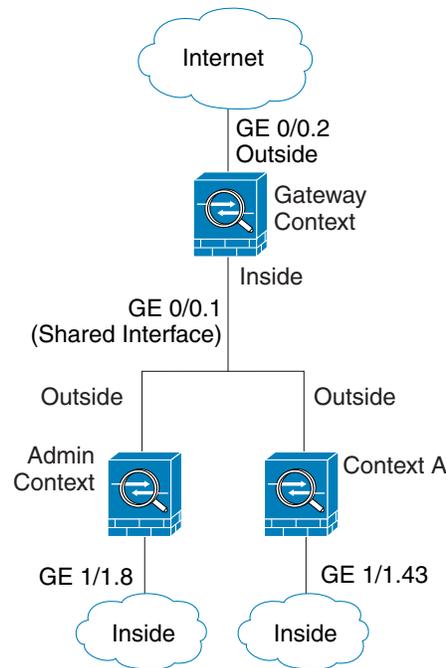

## Management Access to Security Contexts

The ASA provides system administrator access in multiple context mode as well as access for individual context administrators. The following sections describe logging in as a system administrator or as a context administrator:

- [System Administrator Access, page 5-7](#)
- [Context Administrator Access, page 5-8](#)

### System Administrator Access

You can access the ASA as a system administrator in two ways:

- Access the ASA console.
  - From the console, you access the *system execution space*, which means that any commands you enter affect only the system configuration or the running of the system (for run-time commands).
- Access the admin context using Telnet, SSH, or ASDM.

See [Chapter 37, “Configuring Management Access,”](#) to enable Telnet, SSH, and SDM access.

As the system administrator, you can access all contexts.

When you change to a context from admin or the system, your username changes to the default “enable\_15” username. If you configured command authorization in that context, you need to either configure authorization privileges for the “enable\_15” user, or you can log in as a different name for which you provide sufficient privileges in the command authorization configuration for the context. To

log in with a username, enter the **login** command. For example, you log in to the admin context with the username “admin.” The admin context does not have any command authorization configuration, but all other contexts include command authorization. For convenience, each context configuration includes a user “admin” with maximum privileges. When you change from the admin context to context A, your username is altered, so you must log in again as “admin” by entering the **login** command. When you change to context B, you must again enter the **login** command to log in as “admin.”

The system execution space does not support any AAA commands, but you can configure its own enable password, as well as usernames in the local database to provide individual logins.

## Context Administrator Access

You can access a context using Telnet, SSH, or ASDM. If you log in to a non-admin context, you can only access the configuration for that context. You can provide individual logins to the context. See [Chapter 37, “Configuring Management Access,”](#) to enable Telnet, SSH, and SDM access and to configure management authentication.

## Information About Resource Management

By default, all security contexts have unlimited access to the resources of the ASA, except where maximum limits per context are enforced. However, if you find that one or more contexts use too many resources, and they cause other contexts to be denied connections, for example, then you can configure resource management to limit the use of resources per context.

The ASA manages resources by assigning contexts to resource classes. Each context uses the resource limits set by the class.

This section includes the following topics:

- [Resource Limits, page 5-8](#)
- [Default Class, page 5-9](#)
- [Class Members, page 5-10](#)


## Resource Limits

When you create a class, the ASA does not set aside a portion of the resources for each context assigned to the class; rather, the ASA sets the maximum limit for a context. If you oversubscribe resources, or allow some resources to be unlimited, a few contexts can “use up” those resources, potentially affecting service to other contexts.

You can set the limit for individual resources, as a percentage (if there is a hard system limit) or as an absolute value.

You can oversubscribe the ASA by assigning more than 100 percent of a resource across all contexts. For example, you can set the Bronze class to limit connections to 20 percent per context, and then assign 10 contexts to the class for a total of 200 percent. If contexts concurrently use more than the system limit, then each context gets less than the 20 percent you intended. (See [Figure 5-5.](#))

**Figure 5-5 Resource Oversubscription**

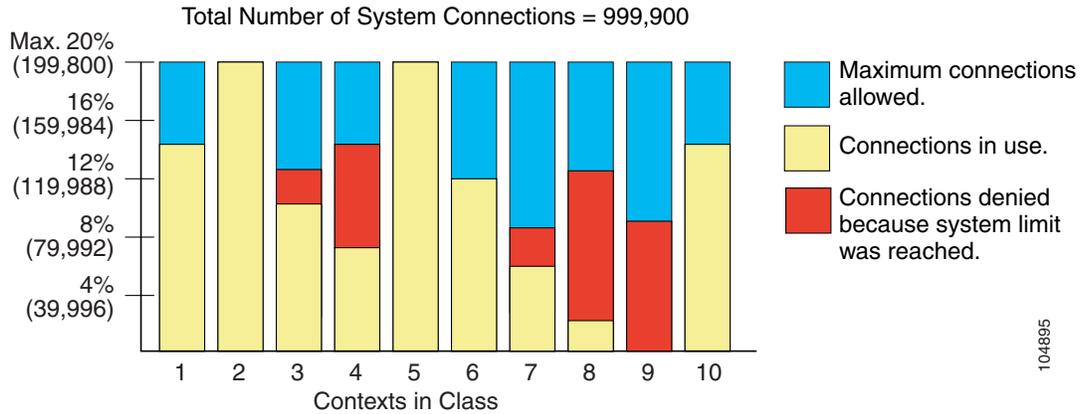


104895

If you assign an absolute value to a resource across all contexts that exceeds the practical limit of the ASA, then the performance of the ASA might be impaired.

The ASA lets you assign unlimited access to one or more resources in a class, instead of a percentage or absolute number. When a resource is unlimited, contexts can use as much of the resource as the system has available or that is practically available. For example, Context A, B, and C are in the Silver Class, which limits each class member to 1 percent of the connections, for a total of 3 percent; but the three contexts are currently only using 2 percent combined. Gold Class has unlimited access to connections. The contexts in the Gold Class can use more than the 97 percent of “unassigned” connections; they can also use the 1 percent of connections not currently in use by Context A, B, and C, even if that means that Context A, B, and C are unable to reach their 3 percent combined limit. (See Figure 5-6.) Setting unlimited access is similar to oversubscribing the ASA, except that you have less control over how much you oversubscribe the system.

**Figure 5-6 Unlimited Resources**

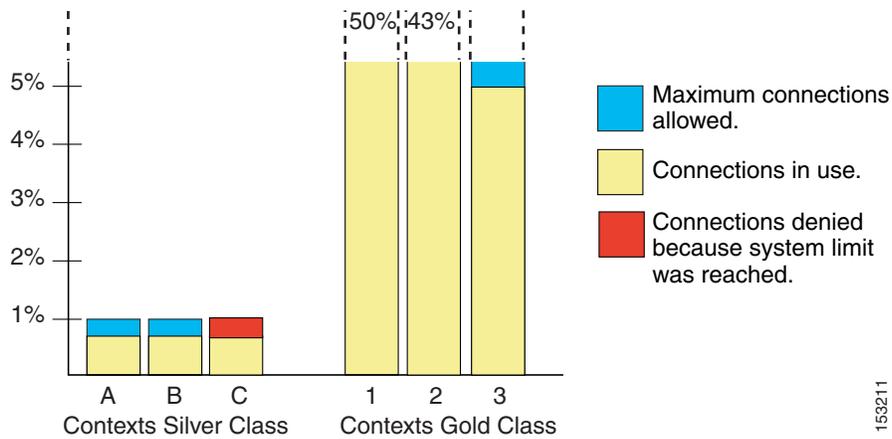

153211

## Default Class

All contexts belong to the default class if they are not assigned to another class; you do not have to actively assign a context to the default class.


If a context belongs to a class other than the default class, those class settings always override the default class settings. However, if the other class has any settings that are not defined, then the member context uses the default class for those limits. For example, if you create a class with a 2 percent limit for all concurrent connections, but no other limits, then all other limits are inherited from the default class. Conversely, if you create a class with a limit for all resources, the class uses no settings from the default class.

By default, the default class provides unlimited access to resources for all contexts, except for the following limits, which are by default set to the maximum allowed per context:

- Telnet sessions—5 sessions.
- SSH sessions—5 sessions.
- IPsec sessions—5 sessions.
- MAC addresses—65,535 entries.

Figure 5-7 shows the relationship between the default class and other classes. Contexts A and C belong to classes with some limits set; other limits are inherited from the default class. Context B inherits no limits from default because all limits are set in its class, the Gold class. Context D was not assigned to a class, and is by default a member of the default class.

Figure 5-7 Resource Classes

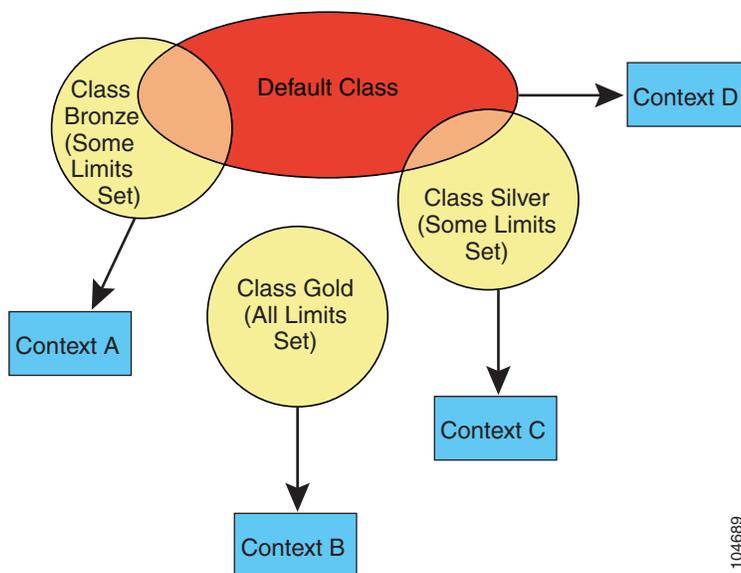

## Class Members

To use the settings of a class, assign the context to the class when you define the context. All contexts belong to the default class if they are not assigned to another class; you do not have to actively assign a context to default. You can only assign a context to one resource class. The exception to this rule is that limits that are undefined in the member class are inherited from the default class; so in effect, a context could be a member of default plus another class.

## Information About MAC Addresses

To allow contexts to share interfaces, you should assign unique MAC addresses to each shared context interface.

The MAC address is used to classify packets within a context. If you share an interface, but do not have unique MAC addresses for the interface in each context, then other classification methods are attempted that might not provide full coverage. See the “[How the ASA Classifies Packets](#)” section on page 5-3 for information about classifying packets.

In the rare circumstance that the generated MAC address conflicts with another private MAC address in your network, you can manually set the MAC address for the interface within the context. See the “[Configuring the MAC Address and MTU](#)” section on page 8-9 to manually set the MAC address.

This section includes the following topics:

- [Default MAC Address](#), page 5-11
- [Interaction with Manual MAC Addresses](#), page 5-11
- [Failover MAC Addresses](#), page 5-12
- [MAC Address Format](#), page 5-12

### Default MAC Address

If you disable MAC address generation, the physical interface uses the burned-in MAC address, and all subinterfaces of a physical interface use the same burned-in MAC address.

See the following sections for your release for additional information about automatic MAC address generation. See also the “[MAC Address Format](#)” section on page 5-12.

#### 8.6(1) and Later

Automatic MAC address generation is enabled—Uses an autogenerated prefix. The ASA autogenerates the prefix based on the last two bytes of the interface MAC address. You cannot use the legacy auto-generation method (without a prefix).

**Note**

To maintain hitless upgrade for failover pairs, the ASA does not convert an existing auto-generation configuration upon a reload if failover is enabled. However, we strongly recommend that you manually change to the prefix method of generation when using failover. After upgrading, to use the prefix method of MAC address generation, reenable MAC address autogeneration to use a prefix.

#### Earlier Releases

Automatic MAC address generation is disabled.

### Interaction with Manual MAC Addresses

If you manually assign a MAC address and also enable auto-generation, then the manually assigned MAC address is used. If you later remove the manual MAC address, the auto-generated address is used.

Because auto-generated addresses (when using a prefix) start with A2, you cannot start manual MAC addresses with A2 if you also want to use auto-generation.

## Failover MAC Addresses

For use with failover, the ASA generates both an active and standby MAC address for each interface. If the active unit fails over and the standby unit becomes active, the new active unit starts using the active MAC addresses to minimize network disruption. See the “[MAC Address Format](#)” section for more information.

## MAC Address Format

The MAC address format without a prefix is a legacy version not supported on newer ASA versions.

### MAC Address Format Using a Prefix

The ASA generates the MAC address using the following format:

*A2xx.yyzz.zzzz*

Where *xx.yy* is a user-defined prefix or an autogenerated prefix based on the last two bytes of the interface MAC address, and *zz.zzzz* is an internal counter generated by the ASA. For the standby MAC address, the address is identical except that the internal counter is increased by 1.

For an example of how the prefix is used, if you set a prefix of 77, then the ASA converts 77 into the hexadecimal value 004D (*yyxx*). When used in the MAC address, the prefix is reversed (*xxyy*) to match the ASA native form:

**A24D.00***zz.zzzz*

For a prefix of 1009 (03F1), the MAC address is:

**A2F1.03***zz.zzzz*

### MAC Address Format Without a Prefix (Legacy Method; Not Available in 8.6(1) and Later)

Without a prefix, the MAC address is generated using the following format:

- Active unit MAC address: *12\_slot.port\_subid.contextid*.
- Standby unit MAC address: *02\_slot.port\_subid.contextid*.

For platforms with no interface slots, the slot is always 0. The *port* is the interface port. The *subid* is an internal ID for the subinterface, which is not viewable. The *contextid* is an internal ID for the context, viewable with the **show context detail** command. For example, the interface GigabitEthernet 0/1.200 in the context with the ID 1 has the following generated MAC addresses, where the internal ID for subinterface 200 is 31:

- Active: 1200.0131.0001
- Standby: 0200.0131.0001

This MAC address generation method does not allow for persistent MAC addresses across reloads, does not allow for multiple ASAs on the same network segment (because unique MAC addresses are not guaranteed), and does not prevent overlapping MAC addresses with manually assigned MAC addresses. We recommend using a prefix with the MAC address generation to avoid these issues.

# Licensing Requirements for Multiple Context Mode

| Model                                | License Requirement                                                                         |
|--------------------------------------|---------------------------------------------------------------------------------------------|
| ASA 5505                             | No support.                                                                                 |
| ASA 5510                             | Security Plus License: 2 contexts.<br><i>Optional license: 5 contexts.</i>                  |
| ASA 5520                             | Base License: 2 contexts.<br><i>Optional licenses: 5, 10, or 20 contexts.</i>               |
| ASA 5540                             | Base License: 2 contexts.<br><i>Optional licenses: 5, 10, 20, or 50 contexts.</i>           |
| ASA 5550                             | Base License: 2 contexts.<br><i>Optional licenses: 5, 10, 20, 50, or 100 contexts.</i>      |
| ASA 5580                             | Base License: 2 contexts.<br><i>Optional licenses: 5, 10, 20, 50, 100, or 250 contexts.</i> |
| ASA 5512-X                           | No support.                                                                                 |
| ASA 5515-X                           | Security Plus License: 2 contexts.<br><i>Optional license: 5 contexts.</i>                  |
| ASA 5525-X                           | Base License: 2 contexts.<br><i>Optional licenses: 5, 10, or 20 contexts.</i>               |
| ASA 5545-X                           | Base License: 2 contexts.<br><i>Optional licenses: 5, 10, 20, or 50 contexts.</i>           |
| ASA 5555-X                           | Base License: 2 contexts.<br><i>Optional licenses: 5, 10, 20, 50, or 100 contexts.</i>      |
| ASA 5585-X with SSP-10               | Base License: 2 contexts.<br><i>Optional licenses: 5, 10, 20, 50, or 100 contexts.</i>      |
| ASA 5585-X with SSP-20, -40, and -60 | Base License: 2 contexts.<br><i>Optional licenses: 5, 10, 20, 50, 100, or 250 contexts.</i> |

## Guidelines and Limitations

This section includes the guidelines and limitations for this feature.

### Firewall Mode Guidelines

Supported in routed and transparent firewall mode.

### Failover Guidelines

Active/Active mode failover is only supported in multiple context mode.

### IPv6 Guidelines

Supports IPv6.

**Model Guidelines**

Does not support the ASA 5505.

**Unsupported Features**

Multiple context mode does not support the following features:

- Dynamic routing protocols  
Security contexts support only static routes. You cannot enable OSPF, RIP, or EIGRP in multiple context mode.
- VPN
- Multicast routing
- Threat Detection
- Phone Proxy
- QoS
- Unified Communications

**Additional Guidelines**

The context mode (single or multiple) is not stored in the configuration file, even though it does endure reboots. If you need to copy your configuration to another device, set the mode on the new device to match.

## Default Settings

By default, the ASA is in single context mode.

## Configuring Multiple Contexts

This section describes how to configure multiple context mode, and includes the following topics:

- [Task Flow for Configuring Multiple Context Mode, page 5-14](#)
- [Enabling or Disabling Multiple Context Mode, page 5-15](#)
- [Configuring a Class for Resource Management, page 5-16](#)
- [Configuring a Security Context, page 5-18](#)
- [Automatically Assigning MAC Addresses to Context Interfaces, page 5-22](#)

## Task Flow for Configuring Multiple Context Mode

To configure multiple context mode, perform the following steps:

- 
- Step 1** Enable multiple context mode. See the “[Enabling or Disabling Multiple Context Mode](#)” section on [page 5-15](#).
- Step 2** (Optional) Configure classes for resource management. See the “[Configuring a Class for Resource Management](#)” section on [page 5-16](#).

- Step 3** Configure interfaces in the system execution space. See [Chapter 6, “Starting Interface Configuration \(ASA 5510 and Higher\).”](#)
- Step 4** Configure security contexts. See the [“Configuring a Security Context”](#) section on page 5-18.
- Step 5** (Optional) Automatically assign MAC addresses to context interfaces. See the [“Automatically Assigning MAC Addresses to Context Interfaces”](#) section on page 5-22.
- Step 6** Complete interface configuration in the context. See [Chapter 8, “Completing Interface Configuration \(Routed Mode\),”](#) or [Chapter 9, “Completing Interface Configuration \(Transparent Mode\).”](#)

## Enabling or Disabling Multiple Context Mode

Your ASA might already be configured for multiple security contexts depending on how you ordered it from Cisco. If you are upgrading, however, you might need to convert from single mode to multiple mode by following the procedures in this section.

This section includes the following topics:

- [Enabling Multiple Context Mode, page 5-15](#)
- [Restoring Single Context Mode, page 5-16](#)

### Enabling Multiple Context Mode

When you convert from single mode to multiple mode, the ASA converts the running configuration into two files: a new startup configuration that comprises the system configuration, and admin.cfg that comprises the admin context (in the root directory of the internal flash memory). The original running configuration is saved as old\_running.cfg (in the root directory of the internal flash memory). The original startup configuration is not saved. The ASA automatically adds an entry for the admin context to the system configuration with the name “admin.”

#### Prerequisites

- When you convert from single mode to multiple mode, the ASA converts the running configuration into two files. The original startup configuration is not saved, so if it differs from the running configuration, you should back it up before proceeding.
- The context mode (single or multiple) is not stored in the configuration file, even though it does endure reboots. If you need to copy your configuration to another device, set the mode on the new device to match.

#### Detailed Steps

| Command                                                         | Purpose                                                               |
|-----------------------------------------------------------------|-----------------------------------------------------------------------|
| <code>mode multiple</code>                                      | Changes to multiple context mode. You are prompted to reboot the ASA. |
| <b>Example:</b><br><code>hostname(config)# mode multiple</code> |                                                                       |

## Restoring Single Context Mode

To copy the old running configuration to the startup configuration and to change the mode to single mode, perform the following steps.

### Prerequisites

Perform this procedure in the system execution space.

### Detailed Steps

|        | Command                                                                                                                                                 | Purpose                                                                                                |
|--------|---------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------|
| Step 1 | <pre>copy flash:old_running.cfg startup-config</pre> <p><b>Example:</b><br/> <pre>hostname(config)# copy flash:old_running.cfg startup-config</pre></p> | Copies the backup version of your original running configuration to the current startup configuration. |
| Step 2 | <pre>mode single</pre> <p><b>Example:</b><br/> <pre>hostname(config)# mode single</pre></p>                                                             | Sets the mode to single mode. You are prompted to reboot the ASA.                                      |

## Configuring a Class for Resource Management

To configure a class in the system configuration, perform the following steps. You can change the value of a particular resource limit by reentering the command with a new value.

### Prerequisites

Perform this procedure in the system execution space.

### Guidelines

[Table 5-1](#) lists the resource types and the limits. See also the **show resource types** command.

Table 5-1 Resource Names and Limits

| Resource Name | Rate or Concurrent | Minimum and Maximum Number per Context | System Limit <sup>1</sup>                                                                                                                                                | Description                                                                                                                                                                                                                                                                                                  |
|---------------|--------------------|----------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| mac-addresses | Concurrent         | N/A                                    | 65,535                                                                                                                                                                   | For transparent firewall mode, the number of MAC addresses allowed in the MAC address table.                                                                                                                                                                                                                 |
| conns         | Concurrent or Rate | N/A                                    | Concurrent connections:<br>See the “ <a href="#">Supported Feature Licenses Per Model</a> ” section on page 3-1 for the connection limit for your platform.<br>Rate: N/A | TCP or UDP connections between any two hosts, including connections between one host and multiple other hosts.                                                                                                                                                                                               |
| inspects      | Rate               | N/A                                    | N/A                                                                                                                                                                      | Application inspections.                                                                                                                                                                                                                                                                                     |
| hosts         | Concurrent         | N/A                                    | N/A                                                                                                                                                                      | Hosts that can connect through the ASA.                                                                                                                                                                                                                                                                      |
| asdm          | Concurrent         | 1 minimum<br>5 maximum                 | 200                                                                                                                                                                      | ASDM management sessions.<br><b>Note</b> ASDM sessions use two HTTPS connections: one for monitoring that is always present, and one for making configuration changes that is present only when you make changes. For example, the system limit of 32 ASDM sessions represents a limit of 64 HTTPS sessions. |
| ssh           | Concurrent         | 1 minimum<br>5 maximum                 | 100                                                                                                                                                                      | SSH sessions.                                                                                                                                                                                                                                                                                                |
| syslogs       | Rate               | N/A                                    | N/A                                                                                                                                                                      | Syslog messages.                                                                                                                                                                                                                                                                                             |
| telnet        | Concurrent         | 1 minimum<br>5 maximum                 | 100                                                                                                                                                                      | Telnet sessions.                                                                                                                                                                                                                                                                                             |
| xlates        | Concurrent         | N/A                                    | N/A                                                                                                                                                                      | Address translations.                                                                                                                                                                                                                                                                                        |

1. If this column value is N/A, then you cannot set a percentage of the resource because there is no hard system limit for the resource.

## Detailed Steps

|        | Command                                                                                                                                                                | Purpose                                                                                                                                                                                             |
|--------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Step 1 | <p><code>class name</code></p> <p><b>Example:</b><br/> <pre>hostname(config)# threat-detection scanning-threat shun except ip-address 10.1.1.0 255.255.255.0</pre></p> | Specifies the class name and enters the class configuration mode. The <i>name</i> is a string up to 20 characters long. To set the limits for the default class, enter <b>default</b> for the name. |
| Step 2 | Do one or more of the following:                                                                                                                                       |                                                                                                                                                                                                     |

| Command                                                                                                                          | Purpose                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|----------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>limit-resource all 0</b><br><br><b>Example:</b><br>hostname(config)# limit-resource all 0                                     | Sets all resource limits (shown in <a href="#">Table 5-1</a> ) to be unlimited. For example, you might want to create a class that includes the admin context that has no limitations. The default class has all resources set to unlimited by default.                                                                                                                                                                                                                 |
| <b>limit-resource [rate] resource_name number[%]</b><br><br><b>Example:</b><br>hostname(config)# limit-resource rate inspects 10 | Sets a particular resource limit. For this particular resource, the limit overrides the limit set for <b>all</b> . Enter the <b>rate</b> argument to set the rate per second for certain resources. For resources that do not have a system limit, you cannot set the percentage (%) between 1 and 100; you can only set an absolute value. See <a href="#">Table 5-1</a> for resources for which you can set the rate per second and which do not have a system limit. |

## Examples

For example, to set the default class limit for conns to 10 percent instead of unlimited, enter the following commands:

```
hostname(config)# class default
hostname(config-class)# limit-resource conns 10%
```

All other resources remain at unlimited.

To add a class called gold, enter the following commands:

```
hostname(config)# class gold
hostname(config-class)# limit-resource mac-addresses 10000
hostname(config-class)# limit-resource conns 15%
hostname(config-class)# limit-resource rate conns 1000
hostname(config-class)# limit-resource rate inspects 500
hostname(config-class)# limit-resource hosts 9000
hostname(config-class)# limit-resource asdm 5
hostname(config-class)# limit-resource ssh 5
hostname(config-class)# limit-resource rate syslogs 5000
hostname(config-class)# limit-resource telnet 5
hostname(config-class)# limit-resource xlates 36000
```

## Configuring a Security Context

The security context definition in the system configuration identifies the context name, configuration file URL, and interfaces that a context can use.

### Prerequisites

- Perform this procedure in the system execution space.
- For ASA 5500 series appliances, configure physical interface parameters, VLAN subinterfaces, and redundant interfaces according to the [Chapter 6, “Starting Interface Configuration \(ASA 5510 and Higher\).”](#)
- If you do not have an admin context (for example, if you clear the configuration) then you must first specify the admin context name by entering the following command:

```
hostname(config)# admin-context name
```

Although this context name does not exist yet in your configuration, you can subsequently enter the **context** *name* command to match the specified name to continue the admin context configuration.

### Detailed Steps

|        | Command                                                                                                                                    | Purpose                                                                                                                                                                                                                                                                                                                                                                                            |
|--------|--------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Step 1 | <p><b>context</b> <i>name</i></p> <p><b>Example:</b><br/>hostname(config)# context administrator</p>                                       | <p>Adds or modifies a context. The <i>name</i> is a string up to 32 characters long. This name is case sensitive, so you can have two contexts named “customerA” and “CustomerA,” for example. You can use letters, digits, or hyphens, but you cannot start or end the name with a hyphen.</p> <p>“System” or “Null” (in upper or lower case letters) are reserved names, and cannot be used.</p> |
| Step 2 | <p>(Optional)</p> <p><b>description</b> <i>text</i></p> <p><b>Example:</b><br/>hostname(config)# description<br/>Administrator Context</p> | <p>Adds a description for this context.</p>                                                                                                                                                                                                                                                                                                                                                        |

| Command                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    | Purpose                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p><b>Step 3</b> To allocate a physical interface:</p> <pre>allocate-interface physical_interface [mapped_name] [visible   invisible]</pre> <p>To allocate one or more subinterfaces:</p> <pre>allocate-interface physical_interface.subinterface[-physical_ interface.subinterface] [mapped_name[-mapped_name]] [visible   invisible]</pre> <p><b>Example:</b></p> <pre>hostname(config-ctx)# allocate-interface gigabitethernet0/1.100 int1 hostname(config-ctx)# allocate-interface gigabitethernet0/1.200 int2 hostname(config-ctx)# allocate-interface gigabitethernet0/2.300-gigabitethernet0/2. 305 int3-int8</pre> | <p>Specifies the interfaces you can use in the context. Do not include a space between the interface type and the port number.</p> <p>Enter these commands multiple times to specify different ranges. If you remove an allocation with the <b>no</b> form of this command, then any context commands that include this interface are removed from the running configuration.</p> <p>Transparent firewall mode allows a limited number of interfaces to pass through traffic; however, you can use a dedicated management interface, Management <i>slot/port</i>, (physical, subinterface, redundant, or EtherChannel) as an additional interface for management traffic. The management interface for transparent mode does not flood a packet out the interface when that packet is not in the MAC address table.</p> <p>You can assign the same interfaces to multiple contexts in routed mode, if desired.</p> <p>The <i>mapped_name</i> is an alphanumeric alias for the interface that can be used within the context instead of the interface ID. If you do not specify a mapped name, the interface ID is used within the context. For security purposes, you might not want the context administrator to know which interfaces are being used by the context. A mapped name must start with a letter, end with a letter or digit, and have as interior characters only letters, digits, or an underscore. For example, you can use the following names:</p> <pre>int0, inta, int_0</pre> <p>If you specify a range of subinterfaces, you can specify a matching range of mapped names. Follow these guidelines for ranges:</p> <ul style="list-style-type: none"> <li>The mapped name must consist of an alphabetic portion followed by a numeric portion. The alphabetic portion of the mapped name must match for both ends of the range. For example, enter the following range: <pre>int0-int10</pre> <p>If you enter <code>gig0/1.1-gig0/1.5 happy1-sad5</code>, for example, the command fails.</p> </li> <li>The numeric portion of the mapped name must include the same quantity of numbers as the subinterface range. For example, both ranges include 100 interfaces: <pre>gigabitethernet0/0.100-gigabitethernet0/0.199 int1-int100</pre> <p>If you enter <code>gig0/0.100-gig0/0.199 int1-int15</code>, for example, the command fails.</p> </li> </ul> <p>Specify <b>visible</b> to see the real interface ID in the <b>show interface</b> command if you set a mapped name. The default <b>invisible</b> keyword shows only the mapped name.</p> |

|        | Command                                                                                                                                                                                              | Purpose                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|--------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Step 4 | <p><b>config-url</b> <i>url</i></p> <p><b>Example:</b><br/> <pre>hostname(config-ctx)# config-url ftp://user1:passw0rd@10.1.1.1/configlets/te st.cfg</pre></p>                                       | <p>Identifies the URL from which the system downloads the context configuration. When you add a context URL, the system immediately loads the context so that it is running, if the configuration is available.</p> <p><b>Note</b> Enter the <b>allocate-interface</b> command(s) before you enter the <b>config-url</b> command. If you enter the <b>config-url</b> command first, the ASA loads the context configuration immediately. If the context contains any commands that refer to (not yet configured) interfaces, those commands fail.</p> <p>The filename does not require a file extension, although we recommend using “.cfg”. The server must be accessible from the admin context. If the configuration file is not available, you see the following message:</p> <pre>WARNING: Could not fetch the URL disk:/url INFO: Creating context with default config</pre> <p>For non-HTTP(S) URL locations, after you specify the URL, you can then change to the context, configure it at the CLI, and enter the <b>write memory</b> command to write the file to the URL location. (HTTP(S) is read only).</p> <p><b>Note</b> The admin context file must be stored on the internal flash memory.</p> <p>Available URL types include: <b>disknumber</b> (for flash memory), <b>ftp</b>, <b>http</b>, <b>https</b>, or <b>tftp</b>.</p> <p>To change the URL, reenter the <b>config-url</b> command with a new URL. See the “<a href="#">Changing the Security Context URL</a>” section on <a href="#">page 5-25</a> for more information about changing the URL.</p> |
| Step 5 | <p>(Optional)</p> <p><b>member</b> <i>class_name</i></p> <p><b>Example:</b><br/> <pre>hostname(config-ctx)# member gold</pre></p>                                                                    | <p>Assigns the context to a resource class. If you do not specify a class, the context belongs to the default class. You can only assign a context to one resource class.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| Step 6 | <p>(Optional)</p> <p><b>join-failover-group</b> {1   2}</p> <p><b>Example:</b><br/> <pre>hostname(config-ctx)# join-failover-group 2</pre></p>                                                       | <p>Assigns a context to a failover group in Active/Active failover. By default, contexts are in group 1. The admin context must always be in group 1.</p> <p>See the “<a href="#">Configuring the Primary Failover Unit</a>” section on <a href="#">page 63-8</a> for detailed information about failover groups.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| Step 7 | <p>(Optional)</p> <p><b>allocate-ips</b> <i>sensor_name</i> [<i>mapped_name</i>]<br/> [<b>default</b>]</p> <p><b>Example:</b><br/> <pre>hostname(config-ctx)# allocate-ips sensor1 highsec</pre></p> | <p>Assigns an IPS virtual sensor to this context if you have the AIP SSM installed.</p> <p>See the “<a href="#">Assigning Virtual Sensors to a Security Context (ASA 5510 and Higher)</a>” section on <a href="#">page 58-15</a> for detailed information about virtual sensors.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |

## Examples

The following example sets the admin context to be “administrator,” creates a context called “administrator” on the internal flash memory, and then adds two contexts from an FTP server:

```
hostname(config)# admin-context administrator
hostname(config)# context administrator
hostname(config-ctx)# allocate-interface gigabitethernet0/0.1
hostname(config-ctx)# allocate-interface gigabitethernet0/1.1
hostname(config-ctx)# config-url flash:/admin.cfg

hostname(config-ctx)# context test
hostname(config-ctx)# allocate-interface gigabitethernet0/0.100 int1
hostname(config-ctx)# allocate-interface gigabitethernet0/0.102 int2
hostname(config-ctx)# allocate-interface gigabitethernet0/0.110-gigabitethernet0/0.115
int3-int8
hostname(config-ctx)# config-url ftp://user1:passw0rd@10.1.1.1/configlets/test.cfg
hostname(config-ctx)# member gold

hostname(config-ctx)# context sample
hostname(config-ctx)# allocate-interface gigabitethernet0/1.200 int1
hostname(config-ctx)# allocate-interface gigabitethernet0/1.212 int2
hostname(config-ctx)# allocate-interface gigabitethernet0/1.230-gigabitethernet0/1.235
int3-int8
hostname(config-ctx)# config-url ftp://user1:passw0rd@10.1.1.1/configlets/sample.cfg
hostname(config-ctx)# member silver
```

## Automatically Assigning MAC Addresses to Context Interfaces

This section describes how to configure auto-generation of MAC addresses.

The MAC address is used to classify packets within a context. See the [“Information About MAC Addresses” section on page 5-11](#) for more information, especially if you are upgrading from an earlier ASA version. See also the [“Viewing Assigned MAC Addresses” section on page 5-35](#).

### Guidelines

- When you configure a **nameif** command for the interface in a context, the new MAC address is generated immediately. If you enable this feature after you configure context interfaces, then MAC addresses are generated for all interfaces immediately after you enable it. If you disable this feature, the MAC address for each interface reverts to the default MAC address. For example, subinterfaces of GigabitEthernet 0/1 revert to using the MAC address of GigabitEthernet 0/1.
- In the rare circumstance that the generated MAC address conflicts with another private MAC address in your network, you can manually set the MAC address for the interface within the context. See the [“Configuring the MAC Address and MTU” section on page 8-9](#) to manually set the MAC address.

## Detailed Steps

| Command                                                                                                                           | Purpose                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|-----------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>mac-address auto</b> [ <b>prefix</b> <i>prefix</i> ]<br><br><b>Example:</b><br>hostname(config)# mac-address auto prefix<br>19 | Automatically assign private MAC addresses to each context interface.<br><br>The <i>prefix</i> is a decimal value between 0 and 65535. This prefix is converted to a 4-digit hexadecimal number, and used as part of the MAC address. The prefix ensures that each ASA uses unique MAC addresses, so you can have multiple ASAs on a network segment, for example. See the “ <a href="#">MAC Address Format</a> ” section for more information about how the prefix is used. |

## Changing Between Contexts and the System Execution Space

If you log in to the system execution space (or the admin context using Telnet or SSH), you can change between contexts and perform configuration and monitoring tasks within each context. The running configuration that you edit in a configuration mode, or that is used in the **copy** or **write** commands, depends on your location. When you are in the system execution space, the running configuration consists only of the system configuration; when you are in a context, the running configuration consists only of that context. For example, you cannot view all running configurations (system plus all contexts) by entering the **show running-config** command. Only the current configuration displays.

To change between the system execution space and a context, or between contexts, see the following commands:

| Command                             | Purpose                                                                                  |
|-------------------------------------|------------------------------------------------------------------------------------------|
| <b>changeto context</b> <i>name</i> | Changes to a context. The prompt changes to the following:<br>hostname/ <i>name</i> #    |
| <b>changeto system</b>              | Changes to the system execution space. The prompt changes to the following:<br>hostname# |

## Managing Security Contexts

This section describes how to manage security contexts and includes the following topics:

- [Removing a Security Context, page 5-24](#)
- [Changing the Admin Context, page 5-24](#)
- [Changing the Security Context URL, page 5-25](#)
- [Reloading a Security Context, page 5-26](#)

## Removing a Security Context

You can only remove a context by editing the system configuration. You cannot remove the current admin context, unless you remove all contexts using the **clear context** command.



### Note

If you use failover, there is a delay between when you remove the context on the active unit and when the context is removed on the standby unit. You might see an error message indicating that the number of interfaces on the active and standby units are not consistent; this error is temporary and can be ignored.

### Prerequisites

Perform this procedure in the system execution space.

### Detailed Steps

| Command                      | Purpose                                                          |
|------------------------------|------------------------------------------------------------------|
| <code>no context name</code> | Removes a single context. All context commands are also removed. |
| <code>clear context</code>   | Removes all contexts (including the admin context).              |

## Changing the Admin Context

The system configuration does not include any network interfaces or network settings for itself; rather, when the system needs to access network resources (such as downloading the contexts from the server), it uses one of the contexts that is designated as the admin context.

The admin context is just like any other context, except that when a user logs in to the admin context, then that user has system administrator rights and can access the system and all other contexts. The admin context is not restricted in any way, and can be used as a regular context. However, because logging into the admin context grants you administrator privileges over all contexts, you might need to restrict access to the admin context to appropriate users.

### Guidelines

You can set any context to be the admin context, as long as the configuration file is stored in the internal flash memory.

### Prerequisites

Perform this procedure in the system execution space.

## Detailed Steps

| Command                                                                                                                     | Purpose                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|-----------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>admin-context</b> <i>context_name</i><br><br><b>Example:</b><br><pre>hostname(config)# admin-context administrator</pre> | Sets the admin context. Any remote management sessions, such as Telnet, SSH, or HTTPS, that are connected to the admin context are terminated. You must reconnect to the new admin context.<br><br><b>Note</b> A few system commands, including <b>ntp server</b> , identify an interface name that belongs to the admin context. If you change the admin context, and that interface name does not exist in the new admin context, be sure to update any system commands that refer to the interface. |

## Changing the Security Context URL

This section describes how to change the context URL.

### Guidelines

- You cannot change the security context URL without reloading the configuration from the new URL. The ASA merges the new configuration with the current running configuration.
- Reentering the same URL also merges the saved configuration with the running configuration.

A merge adds any new commands from the new configuration to the running configuration.

- If the configurations are the same, no changes occur.
- If commands conflict or if commands affect the running of the context, then the effect of the merge depends on the command. You might get errors, or you might have unexpected results. If the running configuration is blank (for example, if the server was unavailable and the configuration was never downloaded), then the new configuration is used.

If you do not want to merge the configurations, you can clear the running configuration, which disrupts any communications through the context, and then reload the configuration from the new URL.

### Prerequisites

Perform this procedure in the system execution space.

## Detailed Steps

|        | Command                                                                                                                                                                                                                                        | Purpose                                                                                              |
|--------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------|
| Step 1 | <p>(Optional, if you do not want to perform a merge)</p> <pre>changeto context <i>name</i> clear configure all</pre> <p><b>Example:</b><br/> <pre>hostname(config)# changeto context ctx1 hostname/ctx1(config)# clear configure all</pre></p> | Changes to the context and clears its configuration. If you want to perform a merge, skip to Step 2. |
| Step 2 | <pre>changeto system</pre> <p><b>Example:</b><br/> <pre>hostname/ctx1(config)# changeto system hostname(config)#</pre></p>                                                                                                                     | Changes to the system execution space.                                                               |
| Step 3 | <pre>context <i>name</i></pre> <p><b>Example:</b><br/> <pre>hostname(config)# context ctx1</pre></p>                                                                                                                                           | Enters the context configuration mode for the context you want to change.                            |
| Step 4 | <pre>config-url <i>new_url</i></pre> <p><b>Example:</b><br/> <pre>hostname(config)# config-url ftp://user1:passw0rd@10.1.1.1/configlets/c tx1.cfg</pre></p>                                                                                    | Enters the new URL. The system immediately loads the context so that it is running.                  |

## Reloading a Security Context

You can reload the context in two ways:

- Clear the running configuration and then import the startup configuration.  
This action clears most attributes associated with the context, such as connections and NAT tables.
- Remove the context from the system configuration.  
This action clears additional attributes, such as memory allocation, which might be useful for troubleshooting. However, to add the context back to the system requires you to respecify the URL and interfaces.

This section includes the following topics:

- [Reloading by Clearing the Configuration, page 5-26](#)
- [Reloading by Removing and Re-adding the Context, page 5-27](#)

### Reloading by Clearing the Configuration

To reload the context by clearing the context configuration, and reloading the configuration from the URL, perform the following steps.

## Detailed Steps

|        | Command                                                                                                                          | Purpose                                                                                                                                                          |
|--------|----------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Step 1 | <b>changeto context</b> <i>name</i><br><br><b>Example:</b><br>hostname(comfig)# changeto context ctx1<br>hostname/ctx1(comfig)#  | Changes to the context that you want to reload.                                                                                                                  |
| Step 2 | <b>clear configure all</b><br><br><b>Example:</b><br>hostname/ctx1(config)# clear configure all                                  | Clears the running configuration. This command clears all connections.                                                                                           |
| Step 3 | <b>copy startup-config running-config</b><br><br><b>Example:</b><br>hostname/ctx1(config)# copy startup-config<br>running-config | Reloads the configuration. The ASA copies the configuration from the URL specified in the system configuration. You cannot change the URL from within a context. |

## Reloading by Removing and Re-adding the Context

To reload the context by removing the context and then re-adding it, perform the steps in the following sections:

1. [“Removing a Security Context” section on page 5-24](#)
2. [“Configuring a Security Context” section on page 5-18](#)

# Monitoring Security Contexts

This section describes how to view and monitor context information and includes the following topics:

- [Viewing Context Information, page 5-27](#)
- [Viewing Context Information, page 5-27](#)
- [Viewing Resource Allocation, page 5-29](#)
- [Viewing Resource Usage, page 5-32](#)
- [Monitoring SYN Attacks in Contexts, page 5-33](#)
- [Viewing Assigned MAC Addresses, page 5-35](#)

## Viewing Context Information

From the system execution space, you can view a list of contexts including the name, allocated interfaces, and configuration file URL.

From the system execution space, view all contexts by entering the following command:

| Command                                                                  | Purpose                                                                                                                                                                                                                                                                                                      |
|--------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>show context</code> [ <i>name</i>   <b>detail</b>   <b>count</b> ] | Shows all contexts.<br><br>The <b>detail</b> option shows additional information. See the following sample outputs below for more information.<br><br>If you want to show information for a particular context, specify the <i>name</i> .<br><br>The <b>count</b> option shows the total number of contexts. |

The following is sample output from the **show context** command. The following sample output shows three contexts:

```
hostname# show context

Context Name Interfaces URL
*admin GigabitEthernet0/1.100 disk0:/admin.cfg
 GigabitEthernet0/1.101
contexta GigabitEthernet0/1.200 disk0:/contexta.cfg
 GigabitEthernet0/1.201
contextb GigabitEthernet0/1.300 disk0:/contextb.cfg
 GigabitEthernet0/1.301
Total active Security Contexts: 3
```

Table 5-2 shows each field description.

**Table 5-2** *show context Fields*

| Field        | Description                                                                           |
|--------------|---------------------------------------------------------------------------------------|
| Context Name | Lists all context names. The context name with the asterisk (*) is the admin context. |
| Interfaces   | The interfaces assigned to the context.                                               |
| URL          | The URL from which the ASA loads the context configuration.                           |

The following is sample output from the **show context detail** command:

```
hostname# show context detail

Context "admin", has been created, but initial ACL rules not complete
 Config URL: disk0:/admin.cfg
 Real Interfaces: Management0/0
 Mapped Interfaces: Management0/0
 Flags: 0x00000013, ID: 1

Context "ctx", has been created, but initial ACL rules not complete
 Config URL: ctx.cfg
 Real Interfaces: GigabitEthernet0/0.10, GigabitEthernet0/1.20,
 GigabitEthernet0/2.30
 Mapped Interfaces: int1, int2, int3
 Flags: 0x00000011, ID: 2

Context "system", is a system resource
 Config URL: startup-config
 Real Interfaces:
 Mapped Interfaces: Control0/0, GigabitEthernet0/0,
 GigabitEthernet0/0.10, GigabitEthernet0/1, GigabitEthernet0/1.10,
```

```
GigabitEthernet0/1.20, GigabitEthernet0/2, GigabitEthernet0/2.30,
GigabitEthernet0/3, Management0/0, Management0/0.1
Flags: 0x00000019, ID: 257
```

```
Context "null", is a system resource
Config URL: ... null ...
Real Interfaces:
Mapped Interfaces:
Flags: 0x00000009, ID: 258
```

See the command reference for more information about the **detail** output.

The following is sample output from the **show context count** command:

```
hostname# show context count
Total active contexts: 2
```

## Viewing Resource Allocation

From the system execution space, you can view the allocation for each resource across all classes and class members.

To view the resource allocation, enter the following command:

| Command                                        | Purpose                                                                                                                                                                                                                                                                                                                                                                      |
|------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>show resource allocation [detail]</code> | Shows the resource allocation. This command shows the resource allocation, but does not show the actual resources being used. See the <a href="#">“Viewing Resource Usage” section on page 5-32</a> for more information about actual resource usage.<br><br>The <b>detail</b> argument shows additional information. See the following sample outputs for more information. |

The following sample output shows the total allocation of each resource as an absolute value and as a percentage of the available system resources:

```
hostname# show resource allocation
Resource Total % of Avail
Conns [rate] 35000 N/A
Inspects [rate] 35000 N/A
Syslogs [rate] 10500 N/A
Conns 305000 30.50%
Hosts 78842 N/A
SSH 35 35.00%
Telnet 35 35.00%
Xlates 91749 N/A
All unlimited
```

Table 5-3 shows each field description.

**Table 5-3** *show resource allocation Fields*

| Field      | Description                                                                                                                                                                                                                                                                              |
|------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Resource   | The name of the resource that you can limit.                                                                                                                                                                                                                                             |
| Total      | The total amount of the resource that is allocated across all contexts. The amount is an absolute number of concurrent instances or instances per second. If you specified a percentage in the class definition, the ASA converts the percentage to an absolute number for this display. |
| % of Avail | The percentage of the total system resources that is allocated across all contexts, if the resource has a hard system limit. If a resource does not have a system limit, this column shows N/A.                                                                                          |

The following is sample output from the **show resource allocation detail** command:

```

hostname# show resource allocation detail
Resource Origin:
 A Value was derived from the resource 'all'
 C Value set in the definition of this class
 D Value set in default class
Resource Class Mmbrs Origin Limit Total Total %
Conns [rate] default all CA unlimited
gold 1 C 34000 34000 N/A
silver 1 CA 17000 17000 N/A
bronze 0 CA 8500
All Contexts: 3 51000 N/A

Inspects [rate] default all CA unlimited
gold 1 DA unlimited
silver 1 CA 10000 10000 N/A
bronze 0 CA 5000
All Contexts: 3 10000 N/A

Syslogs [rate] default all CA unlimited
gold 1 C 6000 6000 N/A
silver 1 CA 3000 3000 N/A
bronze 0 CA 1500
All Contexts: 3 9000 N/A

Conns default all CA unlimited
gold 1 C 200000 200000 20.00%
silver 1 CA 100000 100000 10.00%
bronze 0 CA 50000
All Contexts: 3 300000 30.00%

Hosts default all CA unlimited
gold 1 DA unlimited
silver 1 CA 26214 26214 N/A
bronze 0 CA 13107
All Contexts: 3 26214 N/A

SSH default all C 5
gold 1 D 5 5 5.00%
silver 1 CA 10 10 10.00%
bronze 0 CA 5
All Contexts: 3 20 20.00%

Telnet default all C 5

```

|               |               |     |    |           |        |         |
|---------------|---------------|-----|----|-----------|--------|---------|
|               | gold          | 1   | D  | 5         | 5      | 5.00%   |
|               | silver        | 1   | CA | 10        | 10     | 10.00%  |
|               | bronze        | 0   | CA | 5         |        |         |
|               | All Contexts: | 3   |    |           | 20     | 20.00%  |
| Xlates        | default       | all | CA | unlimited |        |         |
|               | gold          | 1   | DA | unlimited |        |         |
|               | silver        | 1   | CA | 23040     | 23040  | N/A     |
|               | bronze        | 0   | CA | 11520     |        |         |
|               | All Contexts: | 3   |    |           | 23040  | N/A     |
| mac-addresses | default       | all | C  | 65535     |        |         |
|               | gold          | 1   | D  | 65535     | 65535  | 100.00% |
|               | silver        | 1   | CA | 6553      | 6553   | 9.99%   |
|               | bronze        | 0   | CA | 3276      |        |         |
|               | All Contexts: | 3   |    |           | 137623 | 209.99% |

Table 5-4 shows each field description.

**Table 5-4** *show resource allocation detail Fields*

| Field      | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Resource   | The name of the resource that you can limit.                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| Class      | The name of each class, including the default class.<br>The All contexts field shows the total values across all classes.                                                                                                                                                                                                                                                                                                                                                           |
| Mmbrs      | The number of contexts assigned to each class.                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| Origin     | The origin of the resource limit, as follows: <ul style="list-style-type: none"> <li>• A—You set this limit with the <b>all</b> option, instead of as an individual resource.</li> <li>• C—This limit is derived from the member class.</li> <li>• D—This limit was not defined in the member class, but was derived from the default class. For a context assigned to the default class, the value will be “C” instead of “D.”</li> </ul> The ASA can combine “A” with “C” or “D.” |
| Limit      | The limit of the resource per context, as an absolute number. If you specified a percentage in the class definition, the ASA converts the percentage to an absolute number for this display.                                                                                                                                                                                                                                                                                        |
| Total      | The total amount of the resource that is allocated across all contexts in the class. The amount is an absolute number of concurrent instances or instances per second. If the resource is unlimited, this display is blank.                                                                                                                                                                                                                                                         |
| % of Avail | The percentage of the total system resources that is allocated across all contexts in the class. If the resource is unlimited, this display is blank. If the resource does not have a system limit, then this column shows N/A.                                                                                                                                                                                                                                                     |

## Viewing Resource Usage

From the system execution space, you can view the resource usage for each context and display the system resource usage.

From the system execution space, view the resource usage for each context by entering the following command:

| Command                                                                                                                                                                   | Purpose                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <pre>show resource usage [context context_name   top n   all   summary   system] [resource {resource_name   all}   detail] [counter counter_name [count_threshold]]</pre> | <p>By default, <b>all</b> context usage is displayed; each context is listed separately.</p> <p>Enter the <b>top n</b> keyword to show the contexts that are the top <i>n</i> users of the specified resource. You must specify a single resource type, and not <b>resource all</b>, with this option.</p> <p>The <b>summary</b> option shows all context usage combined.</p> <p>The <b>system</b> option shows all context usage combined, but shows the system limits for resources instead of the combined context limits.</p> <p>For the <b>resource</b> <i>resource_name</i>, see <a href="#">Table 5-1</a> for available resource names. See also the <b>show resource type</b> command. Specify <b>all</b> (the default) for all types.</p> <p>The <b>detail</b> option shows the resource usage of all resources, including those you cannot manage. For example, you can view the number of TCP intercepts.</p> <p>The <b>counter</b> <i>counter_name</i> is one of the following keywords:</p> <ul style="list-style-type: none"> <li>• <b>current</b>—Shows the active concurrent instances or the current rate of the resource.</li> <li>• <b>denied</b>—Shows the number of instances that were denied because they exceeded the resource limit shown in the Limit column.</li> <li>• <b>peak</b>—Shows the peak concurrent instances, or the peak rate of the resource since the statistics were last cleared, either using the <b>clear resource usage</b> command or because the device rebooted.</li> <li>• <b>all</b>—(Default) Shows all statistics.</li> </ul> <p>The <i>count_threshold</i> sets the number above which resources are shown. The default is 1. If the usage of the resource is below the number you set, then the resource is not shown. If you specify <b>all</b> for the counter name, then the <i>count_threshold</i> applies to the current usage.</p> <p><b>Note</b> To show all resources, set the <i>count_threshold</i> to <b>0</b>.</p> |

The following is sample output from the **show resource usage context** command, which shows the resource usage for the admin context:

```
hostname# show resource usage context admin
```

| Resource | Current | Peak | Limit | Denied | Context |
|----------|---------|------|-------|--------|---------|
| Telnet   | 1       | 1    | 5     | 0      | admin   |
| Conns    | 44      | 55   | N/A   | 0      | admin   |
| Hosts    | 45      | 56   | N/A   | 0      | admin   |

The following is sample output from the **show resource usage summary** command, which shows the resource usage for all contexts and all resources. This sample shows the limits for 6 contexts.

```
hostname# show resource usage summary
```

| Resource        | Current | Peak | Limit      | Denied | Context |
|-----------------|---------|------|------------|--------|---------|
| Syslogs [rate]  | 1743    | 2132 | N/A        | 0      | Summary |
| Conns           | 584     | 763  | 280000 (S) | 0      | Summary |
| Xlates          | 8526    | 8966 | N/A        | 0      | Summary |
| Hosts           | 254     | 254  | N/A        | 0      | Summary |
| Conns [rate]    | 270     | 535  | N/A        | 1704   | Summary |
| Inspects [rate] | 270     | 535  | N/A        | 0      | Summary |

S = System: Combined context limits exceed the system limit; the system limit is shown.

The following is sample output from the **show resource usage summary** command, which shows the limits for 25 contexts. Because the context limit for Telnet and SSH connections is 5 per context, then the combined limit is 125. The system limit is only 100, so the system limit is shown.

```
hostname# show resource usage summary
```

| Resource | Current | Peak | Limit   | Denied | Context |
|----------|---------|------|---------|--------|---------|
| Telnet   | 1       | 1    | 100 [S] | 0      | Summary |
| SSH      | 2       | 2    | 100 [S] | 0      | Summary |
| Conns    | 56      | 90   | N/A     | 0      | Summary |
| Hosts    | 89      | 102  | N/A     | 0      | Summary |

S = System: Combined context limits exceed the system limit; the system limit is shown.

The following is sample output from the **show resource usage system** command, which shows the resource usage for all contexts, but it shows the system limit instead of the combined context limits. The **counter all 0** option is used to show resources that are not currently in use. The Denied statistics indicate how many times the resource was denied due to the system limit, if available.

```
hostname# show resource usage system counter all 0
```

| Resource        | Current | Peak | Limit  | Denied | Context |
|-----------------|---------|------|--------|--------|---------|
| Telnet          | 0       | 0    | 100    | 0      | System  |
| SSH             | 0       | 0    | 100    | 0      | System  |
| ASDM            | 0       | 0    | 32     | 0      | System  |
| Syslogs [rate]  | 1       | 18   | N/A    | 0      | System  |
| Conns           | 0       | 1    | 280000 | 0      | System  |
| Xlates          | 0       | 0    | N/A    | 0      | System  |
| Hosts           | 0       | 2    | N/A    | 0      | System  |
| Conns [rate]    | 1       | 1    | N/A    | 0      | System  |
| Inspects [rate] | 0       | 0    | N/A    | 0      | System  |

## Monitoring SYN Attacks in Contexts

The ASA prevents SYN attacks using TCP Intercept. TCP Intercept uses the SYN cookies algorithm to prevent TCP SYN-flooding attacks. A SYN-flooding attack consists of a series of SYN packets usually originating from spoofed IP addresses. The constant flood of SYN packets keeps the server SYN queue full, which prevents it from servicing connection requests. When the embryonic connection threshold of a connection is crossed, the ASA acts as a proxy for the server and generates a SYN-ACK response to the client SYN request. When the ASA receives an ACK back from the client, it can then authenticate the client and allow the connection to the server.

Monitor SYN attacks using the following commands:

| Command                                         | Purpose                                                                               |
|-------------------------------------------------|---------------------------------------------------------------------------------------|
| <code>show perfmon</code>                       | Monitors the rate of attacks for individual contexts.                                 |
| <code>show resource usage detail</code>         | Monitors the amount of resources being used by TCP intercept for individual contexts. |
| <code>show resource usage summary detail</code> | Monitors the resources being used by TCP intercept for the entire system.             |

The following is sample output from the `show perfmon` command that shows the rate of TCP intercepts for a context called `admin`.

```
hostname/admin# show perfmon

Context:admin
PERFMON STATS: Current Average
Xlates 0/s 0/s
Connections 0/s 0/s
TCP Conns 0/s 0/s
UDP Conns 0/s 0/s
URL Access 0/s 0/s
URL Server Req 0/s 0/s
WebSns Req 0/s 0/s
TCP Fixup 0/s 0/s
HTTP Fixup 0/s 0/s
FTP Fixup 0/s 0/s
AAA Authen 0/s 0/s
AAA Author 0/s 0/s
AAA Account 0/s 0/s
TCP Intercept 322779/s 322779/s
```

The following is sample output from the `show resource usage detail` command that shows the amount of resources being used by TCP Intercept for individual contexts. (Sample text in *italics* shows the TCP intercept information.)

```
hostname(config)# show resource usage detail

Resource Current Peak Limit Denied Context
memory 843732 847288 unlimited 0 admin
chunk:channels 14 15 unlimited 0 admin
chunk:fixup 15 15 unlimited 0 admin
chunk:hole 1 1 unlimited 0 admin
chunk:ip-users 10 10 unlimited 0 admin
chunk:list-elem 21 21 unlimited 0 admin
chunk:list-hdr 3 4 unlimited 0 admin
chunk:route 2 2 unlimited 0 admin
chunk:static 1 1 unlimited 0 admin
tcp-intercepts 328787 803610 unlimited 0 admin
np-statics 3 3 unlimited 0 admin
statics 1 1 unlimited 0 admin
ace-rules 1 1 unlimited 0 admin
console-access-rul 2 2 unlimited 0 admin
fixup-rules 14 15 unlimited 0 admin
memory 959872 960000 unlimited 0 c1
chunk:channels 15 16 unlimited 0 c1
chunk:dbgtrace 1 1 unlimited 0 c1
chunk:fixup 15 15 unlimited 0 c1
chunk:global 1 1 unlimited 0 c1
chunk:hole 2 2 unlimited 0 c1
chunk:ip-users 10 10 unlimited 0 c1
chunk:udp-ctrl-blk 1 1 unlimited 0 c1
chunk:list-elem 24 24 unlimited 0 c1
chunk:list-hdr 5 6 unlimited 0 c1
```

```

chunk:nat 1 1 unlimited 0 c1
chunk:route 2 2 unlimited 0 c1
chunk:static 1 1 unlimited 0 c1
tcp-intercept-rate 16056 16254 unlimited 0 c1
globals 1 1 unlimited 0 c1
np-statics 3 3 unlimited 0 c1
statics 1 1 unlimited 0 c1
nats 1 1 unlimited 0 c1
ace-rules 2 2 unlimited 0 c1
console-access-rul 2 2 unlimited 0 c1
fixup-rules 14 15 unlimited 0 c1
memory 232695716 232020648 unlimited 0 system
chunk:channels 17 20 unlimited 0 system
chunk:dbgtrace 3 3 unlimited 0 system
chunk:fixup 15 15 unlimited 0 system
chunk:ip-users 4 4 unlimited 0 system
chunk:list-elem 1014 1014 unlimited 0 system
chunk:list-hdr 1 1 unlimited 0 system
chunk:route 1 1 unlimited 0 system
block:16384 510 885 unlimited 0 system
block:2048 32 34 unlimited 0 system

```

The following sample output shows the resources being used by TCP intercept for the entire system. (Sample text in italics shows the TCP intercept information.)

```

hostname(config)# show resource usage summary detail
Resource Current Peak Limit Denied Context
memory 238421312 238434336 unlimited 0 Summary
chunk:channels 46 48 unlimited 0 Summary
chunk:dbgtrace 4 4 unlimited 0 Summary
chunk:fixup 45 45 unlimited 0 Summary
chunk:global 1 1 unlimited 0 Summary
chunk:hole 3 3 unlimited 0 Summary
chunk:ip-users 24 24 unlimited 0 Summary
chunk:udp-ctrl-blk 1 1 unlimited 0 Summary
chunk:list-elem 1059 1059 unlimited 0 Summary
chunk:list-hdr 10 11 unlimited 0 Summary
chunk:nat 1 1 unlimited 0 Summary
chunk:route 5 5 unlimited 0 Summary
chunk:static 2 2 unlimited 0 Summary
block:16384 510 885 unlimited 0 Summary
block:2048 32 35 unlimited 0 Summary
tcp-intercept-rate 341306 811579 unlimited 0 Summary
globals 1 1 unlimited 0 Summary
np-statics 6 6 unlimited 0 Summary
statics 2 2 N/A 0 Summary
nats 1 1 N/A 0 Summary
ace-rules 3 3 N/A 0 Summary
console-access-rul 4 4 N/A 0 Summary
fixup-rules 43 44 N/A 0 Summary

```

## Viewing Assigned MAC Addresses

You can view auto-generated MAC addresses within the system configuration or within the context. This section includes the following topics:

- [Viewing MAC Addresses in the System Configuration, page 5-36](#)
- [Viewing MAC Addresses Within a Context, page 5-37](#)

## Viewing MAC Addresses in the System Configuration

This section describes how to view MAC addresses in the system configuration.

### Guidelines

If you manually assign a MAC address to an interface, but also have auto-generation enabled, the auto-generated address continues to show in the configuration even though the manual MAC address is the one that is in use. If you later remove the manual MAC address, the auto-generated one shown will be used.

### Detailed Steps

| Command                                             | Purpose                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|-----------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>show running-config all context [name]</code> | Shows the assigned MAC addresses from the system execution space. The <b>all</b> option is required to view the assigned MAC addresses. Although this command is user-configurable in global configuration mode only, the <b>mac-address auto</b> command appears as a read-only entry in the configuration for each context along with the assigned MAC address. Only allocated interfaces that are configured with a <b>nameif</b> command within the context have a MAC address assigned. |

### Examples

The following output from the **show running-config all context admin** command shows the primary and standby MAC address assigned to the Management0/0 interface:

```
hostname# show running-config all context admin

context admin
 allocate-interface Management0/0
 mac-address auto Management0/0 a24d.0000.1440 a24d.0000.1441
 config-url disk0:/admin.cfg
```

The following output from the **show running-config all context** command shows all the MAC addresses (primary and standby) for all context interfaces. Note that because the GigabitEthernet0/0 and GigabitEthernet0/1 main interfaces are not configured with a **nameif** command inside the contexts, no MAC addresses have been generated for them.

```
hostname# show running-config all context

admin-context admin
context admin
 allocate-interface Management0/0
 mac-address auto Management0/0 a2d2.0400.125a a2d2.0400.125b
 config-url disk0:/admin.cfg
!

context CTX1
 allocate-interface GigabitEthernet0/0
 allocate-interface GigabitEthernet0/0.1-GigabitEthernet0/0.5
 mac-address auto GigabitEthernet0/0.1 a2d2.0400.11bc a2d2.0400.11bd
 mac-address auto GigabitEthernet0/0.2 a2d2.0400.11c0 a2d2.0400.11c1
 mac-address auto GigabitEthernet0/0.3 a2d2.0400.11c4 a2d2.0400.11c5
 mac-address auto GigabitEthernet0/0.4 a2d2.0400.11c8 a2d2.0400.11c9
```

```

mac-address auto GigabitEthernet0/0.5 a2d2.0400.11cc a2d2.0400.11cd
allocate-interface GigabitEthernet0/1
allocate-interface GigabitEthernet0/1.1-GigabitEthernet0/1.3
mac-address auto GigabitEthernet0/1.1 a2d2.0400.120c a2d2.0400.120d
mac-address auto GigabitEthernet0/1.2 a2d2.0400.1210 a2d2.0400.1211
mac-address auto GigabitEthernet0/1.3 a2d2.0400.1214 a2d2.0400.1215
config-url disk0:/CTX1.cfg
!

context CTX2
allocate-interface GigabitEthernet0/0
allocate-interface GigabitEthernet0/0.1-GigabitEthernet0/0.5
mac-address auto GigabitEthernet0/0.1 a2d2.0400.11ba a2d2.0400.11bb
mac-address auto GigabitEthernet0/0.2 a2d2.0400.11be a2d2.0400.11bf
mac-address auto GigabitEthernet0/0.3 a2d2.0400.11c2 a2d2.0400.11c3
mac-address auto GigabitEthernet0/0.4 a2d2.0400.11c6 a2d2.0400.11c7
mac-address auto GigabitEthernet0/0.5 a2d2.0400.11ca a2d2.0400.11cb
allocate-interface GigabitEthernet0/1
allocate-interface GigabitEthernet0/1.1-GigabitEthernet0/1.3
mac-address auto GigabitEthernet0/1.1 a2d2.0400.120a a2d2.0400.120b
mac-address auto GigabitEthernet0/1.2 a2d2.0400.120e a2d2.0400.120f
mac-address auto GigabitEthernet0/1.3 a2d2.0400.1212 a2d2.0400.1213
config-url disk0:/CTX2.cfg
!

```

## Viewing MAC Addresses Within a Context

This section describes how to view MAC addresses within a context.

### Detailed Steps

| Command                                                   | Purpose                                                            |
|-----------------------------------------------------------|--------------------------------------------------------------------|
| <code>show interface   include (Interface)   (MAC)</code> | Shows the MAC address in use by each interface within the context. |

### Examples

For example:

```

hostname/context# show interface | include (Interface) | (MAC)

Interface GigabitEthernet1/1.1 "g1/1.1", is down, line protocol is down
MAC address a201.0101.0600, MTU 1500
Interface GigabitEthernet1/1.2 "g1/1.2", is down, line protocol is down
MAC address a201.0102.0600, MTU 1500
Interface GigabitEthernet1/1.3 "g1/1.3", is down, line protocol is down
MAC address a201.0103.0600, MTU 1500
...

```



#### Note

The `show interface` command shows the MAC address in use; if you manually assign a MAC address and also have auto-generation enabled, then you can only view the unused auto-generated address from within the system configuration.

# Configuration Examples for Multiple Context Mode

The following example:

- Automatically sets the MAC addresses in contexts.
- Sets the default class limit for conns to 10 percent instead of unlimited.
- Creates a gold resource class.
- Sets the admin context to be “administrator.”
- Creates a context called “administrator” on the internal flash memory to be part of the default resource class.
- Adds two contexts from an FTP server as part of the gold resource class.

```
hostname(config)# mac-address auto prefix 19

hostname(config)# class default
hostname(config-class)# limit-resource conns 10%

hostname(config)# class gold
hostname(config-class)# limit-resource mac-addresses 10000
hostname(config-class)# limit-resource conns 15%
hostname(config-class)# limit-resource rate conns 1000
hostname(config-class)# limit-resource rate inspects 500
hostname(config-class)# limit-resource hosts 9000
hostname(config-class)# limit-resource asdm 5
hostname(config-class)# limit-resource ssh 5
hostname(config-class)# limit-resource rate syslogs 5000
hostname(config-class)# limit-resource telnet 5
hostname(config-class)# limit-resource xlates 36000

hostname(config)# admin-context administrator
hostname(config)# context administrator
hostname(config-ctx)# allocate-interface gigabitethernet0/0.1
hostname(config-ctx)# allocate-interface gigabitethernet0/1.1
hostname(config-ctx)# config-url flash:/admin.cfg

hostname(config-ctx)# context test
hostname(config-ctx)# allocate-interface gigabitethernet0/0.100 int1
hostname(config-ctx)# allocate-interface gigabitethernet0/0.102 int2
hostname(config-ctx)# allocate-interface gigabitethernet0/0.110-gigabitethernet0/0.115
int3-int8
hostname(config-ctx)# config-url ftp://user1:passw0rd@10.1.1.1/configlets/test.cfg
hostname(config-ctx)# member gold

hostname(config-ctx)# context sample
hostname(config-ctx)# allocate-interface gigabitethernet0/1.200 int1
hostname(config-ctx)# allocate-interface gigabitethernet0/1.212 int2
hostname(config-ctx)# allocate-interface gigabitethernet0/1.230-gigabitethernet0/1.235
int3-int8
hostname(config-ctx)# config-url ftp://user1:passw0rd@10.1.1.1/configlets/sample.cfg
hostname(config-ctx)# member gold
```

# Feature History for Multiple Context Mode

Table 5-5 lists each feature change and the platform release in which it was implemented.

**Table 5-5** Feature History for Multiple Context Mode

| Feature Name                                  | Platform Releases | Feature Information                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|-----------------------------------------------|-------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Multiple security contexts                    | 7.0(1)            | Multiple context mode was introduced.<br>We introduced the following commands: <b>context</b> , <b>mode</b> , and <b>class</b> .                                                                                                                                                                                                                                                                                                                                                             |
| Automatic MAC address assignment              | 7.2(1)            | Automatic assignment of MAC address to context interfaces was introduced.<br>We introduced the following command: <b>mac-address auto</b> .                                                                                                                                                                                                                                                                                                                                                  |
| Resource management                           | 7.2(1)            | Resource management was introduced.<br>We introduced the following commands: <b>class</b> , <b>limit-resource</b> , and <b>member</b> .                                                                                                                                                                                                                                                                                                                                                      |
| Virtual sensors for IPS                       | 8.0(2)            | The AIP SSM running IPS software Version 6.0 and above can run multiple virtual sensors, which means you can configure multiple security policies on the AIP SSM. You can assign each context or single mode ASA to one or more virtual sensors, or you can assign multiple security contexts to the same virtual sensor.<br>We introduced the following command: <b>allocate-ips</b> .                                                                                                      |
| Automatic MAC address assignment enhancements | 8.0(5)/8.2(2)     | The MAC address format was changed to use a prefix, to use a fixed starting value (A2), and to use a different scheme for the primary and secondary unit MAC addresses in a failover pair. The MAC addresses are also now persistent across reloads. The command parser now checks if auto-generation is enabled; if you want to also manually assign a MAC address, you cannot start the manual MAC address with A2.<br>We modified the following command: <b>mac-address auto prefix</b> . |

Table 5-5 Feature History for Multiple Context Mode (continued)

| Feature Name                                                                         | Platform Releases | Feature Information                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|--------------------------------------------------------------------------------------|-------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Maximum contexts increased for the ASA 5550 and 5580                                 | 8.4(1)            | The maximum security contexts for the ASA 5550 was increased from 50 to 100. The maximum for the ASA 5580 was increased from 50 to 250.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| Automatic generation of a MAC address prefix for the <b>mac-address auto</b> command | 8.6(1)            | <p>In multiple context mode, the ASA now converts the automatic MAC address generation configuration to use a default prefix. The ASA auto-generates the prefix based on the last two bytes of the interface MAC address. This conversion happens automatically when you reload, or if you reenables MAC address generation. The prefix method of generation provides many benefits, including a better guarantee of unique MAC addresses on a segment. You can view the auto-generated prefix by entering the <b>show running-config mac-address</b> command. If you want to change the prefix, you can reconfigure the feature with a custom prefix. The legacy method of MAC address generation is no longer available.</p> <p><b>Note</b> To maintain hitless upgrade for failover pairs, the ASA does <i>not</i> convert the MAC address method in an existing configuration upon a reload if failover is enabled. However, we strongly recommend that you manually change to the prefix method of generation when using failover. After upgrading, to use the prefix method of MAC address generation, reenables MAC address generation to use the default prefix.</p> <p>We modified the following command: <b>mac-address auto</b>.</p> |



## **PART 3**

### **Configuring Interfaces**





# CHAPTER 6

## Starting Interface Configuration (ASA 5510 and Higher)

---

This chapter includes tasks for starting your interface configuration for the ASA 5510 and higher, including configuring Ethernet settings, redundant interfaces, and EtherChannels.



**Note**

For ASA 5505 configuration, see [Chapter 7, “Starting Interface Configuration \(ASA 5505\).”](#)

For multiple context mode, complete all tasks in this section in the system execution space. To change from the context to the system execution space, enter the **changeto system** command.

---

This chapter includes the following sections:

- [Information About Starting ASA 5510 and Higher Interface Configuration, page 6-1](#)
- [Licensing Requirements for ASA 5510 and Higher Interfaces, page 6-8](#)
- [Guidelines and Limitations, page 6-9](#)
- [Default Settings, page 6-11](#)
- [Starting Interface Configuration \(ASA 5510 and Higher\), page 6-12](#)
- [Monitoring Interfaces, page 6-33](#)
- [Configuration Examples for ASA 5510 and Higher Interfaces, page 6-33](#)
- [Where to Go Next, page 6-34](#)
- [Feature History for ASA 5510 and Higher Interfaces, page 6-35](#)

## Information About Starting ASA 5510 and Higher Interface Configuration

This section includes the following topics:

- [Auto-MDI/MDIX Feature, page 6-2](#)
- [Interfaces in Transparent Mode, page 6-2](#)
- [Management Interface, page 6-2](#)
- [Redundant Interfaces, page 6-4](#)
- [EtherChannels, page 6-5](#)

## Auto-MDI/MDIX Feature

For RJ-45 interfaces on the ASA 5500 series, the default auto-negotiation setting also includes the Auto-MDI/MDIX feature. Auto-MDI/MDIX eliminates the need for crossover cabling by performing an internal crossover when a straight cable is detected during the auto-negotiation phase. Either the speed or duplex must be set to auto-negotiate to enable Auto-MDI/MDIX for the interface. If you explicitly set both the speed and duplex to a fixed value, thus disabling auto-negotiation for both settings, then Auto-MDI/MDIX is also disabled. For Gigabit Ethernet, when the speed and duplex are set to 1000 and full, then the interface always auto-negotiates; therefore Auto-MDI/MDIX is always enabled and you cannot disable it.

## Interfaces in Transparent Mode

Interfaces in transparent mode belong to a “bridge group,” one bridge group for each network. You can have up to eight bridge groups of four interfaces each per context or in single mode. For more information about bridge groups, see the “[Bridge Groups in Transparent Mode](#)” section on page 9-1.

## Management Interface

- [Management Interface Overview](#), page 6-2
- [Management Slot/Port Interface](#), page 6-2
- [Using Any Interface for Management-Only Traffic](#), page 6-3
- [Management Interface for Transparent Mode](#), page 6-3
- [No Support for Redundant Management Interfaces](#), page 6-4
- [Management 0/0 Interface on the ASA 5512-X through ASA 5555-X](#), page 6-4

## Management Interface Overview

You can manage the ASA by connecting to:

- Any through-traffic interface
- A dedicated Management *Slot/Port* interface (if available for your model)

You may need to configure management access to the interface according to [Chapter 37, “Configuring Management Access.”](#)

## Management *Slot/Port* Interface

[Table 6-1](#) shows the Management interfaces per model.-

**Table 6-1** Management Interfaces Per Model

| Model    | Configurable for Through Traffic <sup>1</sup> | Management 0/0 <sup>2</sup> | Management 0/1 | Management 1/0 | Management 1/1 |
|----------|-----------------------------------------------|-----------------------------|----------------|----------------|----------------|
| ASA 5505 | N/A                                           | No                          | No             | No             | No             |
| ASA 5510 | Yes                                           | Yes                         | No             | No             | No             |

**Table 6-1** Management Interfaces Per Model

| Model      | Configurable for Through Traffic <sup>1</sup> | Management 0/0 <sup>2</sup> | Management 0/1 | Management 1/0   | Management 1/1   |
|------------|-----------------------------------------------|-----------------------------|----------------|------------------|------------------|
| ASA 5520   | Yes                                           | Yes                         | No             | No               | No               |
| ASA 5540   | Yes                                           | Yes                         | No             | No               | No               |
| ASA 5550   | Yes                                           | Yes                         | No             | No               | No               |
| ASA 5580   | Yes                                           | Yes                         | Yes            | No               | No               |
| ASA 5512-X | No                                            | Yes                         | No             | No               | No               |
| ASA 5515-X | No                                            | Yes                         | No             | No               | No               |
| ASA 5525-X | No                                            | Yes                         | No             | No               | No               |
| ASA 5545-X | No                                            | Yes                         | No             | No               | No               |
| ASA 5555-X | No                                            | Yes                         | No             | No               | No               |
| ASA 5585-X | Yes                                           | Yes                         | Yes            | Yes <sup>3</sup> | Yes <sup>3</sup> |

1. By default, the Management 0/0 interface is configured for management-only traffic (the **management-only** command). For supported models in routed mode, you can remove the limitation and pass through traffic. If your model includes additional Management interfaces, you can use them for through traffic as well. The Management interfaces might not be optimized for through-traffic, however.
2. The Management 0/0 interface is configured for ASDM access as part of the default factory configuration. See the [“Factory Default Configurations” section on page 2-10](#) for more information.
3. If you installed an SSP in slot 1, then Management 1/0 and 1/1 provide management access to the SSP in slot 1 only.

**Note**

If you installed an IPS module, then the IPS module management interface(s) provides management access for the IPS module only. For the ASA 5512-X through ASA 5555-X, the IPS SSP software module uses the same physical Management 0/0 interface as the ASA.

## Using Any Interface for Management-Only Traffic

You can use any interface as a dedicated management-only interface by configuring it for management traffic, including an EtherChannel interface (see the **management-only** command).

## Management Interface for Transparent Mode

In transparent firewall mode, in addition to the maximum allowed through-traffic interfaces, you can also use the Management interface (either the physical interface, a subinterface (if supported for your model), or an EtherChannel interface comprised of Management interfaces (if you have multiple Management interfaces)) as a separate management interface. You cannot use any other interface types as management interfaces.

If your model does not include a Management interface, you must manage the transparent firewall from a data interface.

In multiple context mode, you cannot share any interfaces, including the Management interface, across contexts. To provide management per context, you can create subinterfaces of the Management interface and allocate a Management subinterface to each context. Note that the ASA 5512-X through ASA 5555-X do not allow subinterfaces on the Management interface, so for per-context management, you must connect to a data interface.

For 8.4(1) and later, the management interface is not part of a normal bridge group. Note that for operational purposes, it is part of a non-configurable bridge group.

**Note**

In transparent firewall mode, the management interface updates the MAC address table in the same manner as a data interface; therefore you should not connect both a management and a data interface to the same switch unless you configure one of the switch ports as a routed port (by default Cisco Catalyst switches share a MAC address for all VLAN switch ports). Otherwise, if traffic arrives on the management interface from the physically-connected switch, then the ASA updates the MAC address table to use the *management* interface to access the switch, instead of the data interface. This action causes a temporary traffic interruption; the ASA will not re-update the MAC address table for packets from the switch to the data interface for at least 30 seconds for security reasons.

## No Support for Redundant Management Interfaces

Redundant interfaces do not support Management *slot/port* interfaces as members. You also cannot set a redundant interface comprised of non-Management interfaces as management-only.

## Management 0/0 Interface on the ASA 5512-X through ASA 5555-X

The Management 0/0 interface on the ASA 5512-X through ASA 5555-X has the following characteristics:

- No through traffic support
- No subinterface support
- No priority queue support
- No multicast MAC support
- The IPS SSP software module shares the Management 0/0 interface. Separate MAC addresses and IP addresses are supported for the ASA and IPS module. You must perform configuration of the IPS IP address within the IPS operating system. However, physical characteristics (such as enabling the interface) are configured on the ASA.

## Redundant Interfaces

A logical redundant interface consists of a pair of physical interfaces: an active and a standby interface. When the active interface fails, the standby interface becomes active and starts passing traffic. You can configure a redundant interface to increase the ASA reliability. This feature is separate from device-level failover, but you can configure redundant interfaces as well as device-level failover if desired.

## Redundant Interface MAC Address

The redundant interface uses the MAC address of the first physical interface that you add. If you change the order of the member interfaces in the configuration, then the MAC address changes to match the MAC address of the interface that is now listed first. Alternatively, you can assign a MAC address to the redundant interface, which is used regardless of the member interface MAC addresses (see the [“Configuring the MAC Address and MTU” section on page 8-9](#) or the [“Configuring Multiple Contexts” section on page 5-14](#)). When the active interface fails over to the standby, the same MAC address is maintained so that traffic is not disrupted.

## EtherChannels

An 802.3ad EtherChannel is a logical interface (called a port-channel interface) consisting of a bundle of individual Ethernet links (a channel group) so that you increase the bandwidth for a single network. A port channel interface is used in the same way as a physical interface when you configure interface-related features.

You can configure up to 48 EtherChannels.

This section includes the following topics:

- [Channel Group Interfaces, page 6-5](#)
- [Connecting to an EtherChannel on Another Device, page 6-5](#)
- [Link Aggregation Control Protocol, page 6-6](#)
- [Load Balancing, page 6-7](#)
- [EtherChannel MAC Address, page 6-7](#)

### Channel Group Interfaces

Each channel group can have eight active interfaces. Note that you can assign up to 16 interfaces to a channel group. While only eight interfaces can be active, the remaining interfaces can act as standby links in case of interface failure.


All interfaces in the channel group must be the same type and speed. The first interface added to the channel group determines the correct type and speed.

The EtherChannel aggregates the traffic across all the available active interfaces in the channel. The port is selected using a proprietary hash algorithm, based on source or destination MAC addresses, IP addresses, TCP and UDP port numbers and vlan numbers.


### Connecting to an EtherChannel on Another Device

The device to which you connect the ASA EtherChannel must also support 802.3ad EtherChannels; for example, you can connect to the Catalyst 6500 switch.

When the switch is part of a Virtual Switching System (VSS), then you can connect ASA interfaces within the same EtherChannel to separate switches in the VSS. The switch interfaces are members of the same EtherChannel port-channel interface, because the separate switches act like a single switch (see [Figure 6-1](#)).

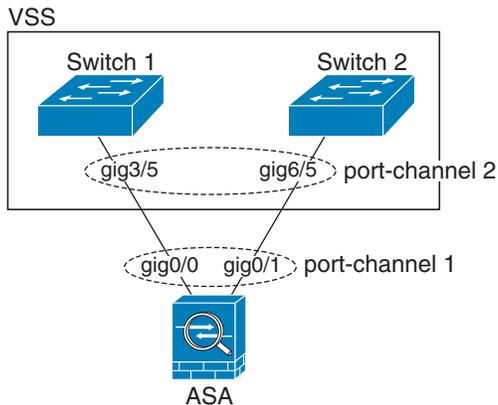**Figure 6-1** Connecting to a VSS

If you use the ASA in an Active/Standby failover deployment, then you need to create separate EtherChannels on the switches in the VSS, one for each ASA (see Figure 6-1). On each ASA, a single EtherChannel connects to both switches. Even if you could group all switch interfaces into a single EtherChannel connecting to both ASAs (in this case, the EtherChannel will not be established because of the separate ASA system IDs), a single EtherChannel would not be desirable because you do not want traffic sent to the standby ASA.

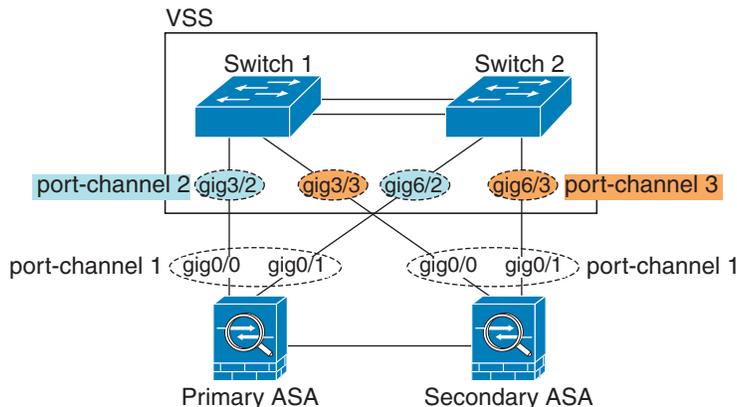**Figure 6-2** Active/Standby Failover and VSS

## Link Aggregation Control Protocol

The Link Aggregation Control Protocol (LACP) aggregates interfaces by exchanging the Link Aggregation Control Protocol Data Units (LACPDU)s between two network devices.

You can configure each physical interface in an EtherChannel to be:

- **Active**—Sends and receives LACP updates. An active EtherChannel can establish connectivity with either an active or a passive EtherChannel. You should use the active mode unless you need to minimize the amount of LACP traffic.
- **Passive**—Receives LACP updates. A passive EtherChannel can only establish connectivity with an active EtherChannel.

- On—The EtherChannel is always on, and LACP is not used. An “on” EtherChannel can only establish a connection with another “on” EtherChannel.

LACP coordinates the automatic addition and deletion of links to the EtherChannel without user intervention. It also handles misconfigurations and checks that both ends of member interfaces are connected to the correct channel group. “On” mode cannot use standby interfaces in the channel group when an interface goes down, and the connectivity and configurations are not checked.

## Load Balancing

The ASA distributes packets to the interfaces in the EtherChannel by hashing the source and destination IP address of the packet (this criteria is configurable; see the “[Customizing the EtherChannel](#)” section on page 6-29). The hash result is a 3-bit value (0 to 7).

The eight hash result values are distributed in a round robin fashion between the channel group interfaces, starting with the interface with the lowest ID (slot/port). For example, all packets with a hash result of 0 go to GigabitEthernet 0/0, packets with a hash result of 1 go to GigabitEthernet 0/1, packets with a hash result of 2 go to GigabitEthernet 0/2, and so on.

Because there are eight hash result values regardless of how many active interfaces are in the EtherChannel, packets might not be distributed evenly depending on the number of active interfaces.

[Table 6-2](#) shows the load balancing amounts per interface for each number of active interfaces. The active interfaces in **bold** have even distribution.

**Table 6-2** Load Distribution per Interface

| # of Active Interfaces | % Distribution Per Interface |              |              |              |              |              |              |              |
|------------------------|------------------------------|--------------|--------------|--------------|--------------|--------------|--------------|--------------|
|                        | 1                            | 2            | 3            | 4            | 5            | 6            | 7            | 8            |
| 1                      | <b>100%</b>                  | —            | —            | —            | —            | —            | —            | —            |
| 2                      | <b>50%</b>                   | <b>50%</b>   | —            | —            | —            | —            | —            | —            |
| 3                      | 37.5%                        | 37.5%        | 25%          | —            | —            | —            | —            | —            |
| 4                      | <b>25%</b>                   | <b>25%</b>   | <b>25%</b>   | <b>25%</b>   | —            | —            | —            | —            |
| 5                      | 25%                          | 25%          | 25%          | 12.5%        | 12.5%        | —            | —            | —            |
| 6                      | 25%                          | 25%          | 12.5%        | 12.5%        | 12.5%        | 12.5%        | —            | —            |
| 7                      | 25%                          | 12.5%        | 12.5%        | 12.5%        | 12.5%        | 12.5%        | 12.5%        | —            |
| 8                      | <b>12.5%</b>                 | <b>12.5%</b> | <b>12.5%</b> | <b>12.5%</b> | <b>12.5%</b> | <b>12.5%</b> | <b>12.5%</b> | <b>12.5%</b> |

If an active interface goes down and is not replaced by a standby interface, then traffic is rebalanced between the remaining links. The failure is masked from both Spanning Tree at Layer 2 and the routing table at Layer 3, so the switchover is transparent to other network devices.

## EtherChannel MAC Address

All interfaces that are part of the channel group share the same MAC address. This feature makes the EtherChannel transparent to network applications and users, because they only see the one logical connection; they have no knowledge of the individual links.

The port-channel interface uses the lowest numbered channel group interface MAC address as the port-channel MAC address. Alternatively you can manually configure a MAC address for the port-channel interface. In multiple context mode, you can automatically assign unique MAC addresses

to interfaces, including an EtherChannel port interface. We recommend manually, or in multiple context mode, automatically configuring a unique MAC address in case the group channel interface membership changes. If you remove the interface that was providing the port-channel MAC address, then the port-channel MAC address changes to the next lowest numbered interface, thus causing traffic disruption.

## Licensing Requirements for ASA 5510 and Higher Interfaces

| Model      | License Requirement                                                                                                                                                                                                                                                                                               |
|------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ASA 5510   | VLANs:<br>Base License: 50<br>Security Plus License: 100<br>Interface Speed:<br>Base License—All interfaces Fast Ethernet.<br>Security Plus License—Ethernet 0/0 and 0/1: Gigabit Ethernet; all others Fast Ethernet.<br>Interfaces of all types <sup>1</sup> :<br>Base License: 52<br>Security Plus License: 120 |
| ASA 5520   | VLANs:<br>Base License: 150.<br>Interfaces of all types <sup>1</sup> :<br>Base License: 640                                                                                                                                                                                                                       |
| ASA 5540   | VLANs:<br>Base License: 200<br>Interfaces of all types <sup>1</sup> :<br>Base License: 840                                                                                                                                                                                                                        |
| ASA 5550   | VLANs:<br>Base License: 400<br>Interfaces of all types <sup>1</sup> :<br>Base License: 1640                                                                                                                                                                                                                       |
| ASA 5580   | VLANs:<br>Base License: 1024<br>Interfaces of all types <sup>1</sup> :<br>Base License: 4176                                                                                                                                                                                                                      |
| ASA 5512-X | VLANs:<br>Base License: 50<br>Interfaces of all types <sup>1</sup> :<br>Base License: 328                                                                                                                                                                                                                         |

| Model      | License Requirement                                                                                                                                                                                                                                                                                                         |
|------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ASA 5515-X | VLANs:<br>Base License: 100<br>Interfaces of all types <sup>1</sup> :<br>Base License: 528                                                                                                                                                                                                                                  |
| ASA 5525-X | VLANs:<br>Base License: 200<br>Interfaces of all types <sup>1</sup> :<br>Base License: 928                                                                                                                                                                                                                                  |
| ASA 5545-X | VLANs:<br>Base License: 300<br>Interfaces of all types <sup>1</sup> :<br>Base License: 1328                                                                                                                                                                                                                                 |
| ASA 5555-X | VLANs:<br>Base License: 500<br>Interfaces of all types <sup>1</sup> :<br>Base License: 2128                                                                                                                                                                                                                                 |
| ASA 5585-X | VLANs:<br>Base License: 1024<br>Interface Speed for SSP-10 and SSP-20:<br>Base License—1-Gigabit Ethernet for fiber interfaces<br>10 GE I/O License—10-Gigabit Ethernet for fiber interfaces<br>(SSP-40 and SSP-60 support 10-Gigabit Ethernet by default.)<br>Interfaces of all types <sup>1</sup> :<br>Base License: 4176 |

1. The maximum number of combined interfaces; for example, VLANs, physical, redundant, bridge group, and EtherChannel interfaces.

## Guidelines and Limitations

This section includes the guidelines and limitations for this feature.

### Context Mode Guidelines

In multiple context mode, configure the physical interfaces in the system execution space according to the [“Starting Interface Configuration \(ASA 5510 and Higher\)”](#) section on page 6-12. Then, configure the logical interface parameters in the context execution space according to [Chapter 8, “Completing Interface Configuration \(Routed Mode\),”](#) or [Chapter 9, “Completing Interface Configuration \(Transparent Mode\).”](#)

**Firewall Mode Guidelines**

- For transparent mode, you can configure up to eight bridge groups per context or for a single mode device.
- Each bridge group can include up to four interfaces.
- For multiple context, transparent mode, each context must use different interfaces; you cannot share an interface across contexts.

**Failover Guidelines**

- When you use a redundant or EtherChannel interface as a failover link, it must be pre-configured on both units in the failover pair; you cannot configure it on the primary unit and expect it to replicate to the secondary unit because *the failover link itself is required for replication*.
- If you use a redundant or EtherChannel interface for the state link, no special configuration is required; the configuration can replicate from the primary unit as normal.
- You can monitor redundant or EtherChannel interfaces for failover using the **monitor-interface** command; be sure to reference the logical redundant interface name. When an active member interface fails over to a standby interface, this activity does not cause the redundant or EtherChannel interface to appear to be failed when being monitored for device-level failover. Only when all physical interfaces fail does the redundant or EtherChannel interface appear to be failed (for an EtherChannel interface, the number of member interfaces allowed to fail is configurable).
- If you use an EtherChannel interface for a failover or state link, then to prevent out-of-order packets, only one interface in the EtherChannel is used. If that interface fails, then the next interface in the EtherChannel is used. You cannot alter the EtherChannel configuration while it is in use as a failover link. To alter the configuration, you need to either shut down the EtherChannel while you make changes, or temporarily disable failover; either action prevents failover from occurring for the duration.
- Although you can configure failover and failover state links on a port channel link, this port channel cannot be shared with other firewall traffic.

**Redundant Interface Guidelines**

- You can configure up to 8 redundant interface pairs.
- All ASA configuration refers to the logical redundant interface instead of the member physical interfaces.
- You cannot use a redundant interface as part of an EtherChannel, nor can you use an EtherChannel as part of a redundant interface. You cannot use the same physical interfaces in a redundant interface and an EtherChannel interface. You can, however, configure both types on the ASA if they do not use the same physical interfaces.
- If you shut down the active interface, then the standby interface becomes active.
- Redundant interfaces do not support Management *slot/port* interfaces as members. You also cannot set a redundant interface comprised of non-Management interfaces as management-only.
- For failover guidelines, see the [“Failover Guidelines” section on page 6-10](#).

**EtherChannel Guidelines**

- You can configure up to 48 EtherChannels.
- Each channel group can have eight active interfaces. Note that you can assign up to 16 interfaces to a channel group. While only eight interfaces can be active, the remaining interfaces can act as standby links in case of interface failure.

- All interfaces in the channel group must be the same type and speed. The first interface added to the channel group determines the correct type and speed.
- The device to which you connect the ASA 5500 EtherChannel must also support 802.3ad EtherChannels; for example, you can connect to the Catalyst 6500 switch.
- All ASA configuration refers to the logical EtherChannel interface instead of the member physical interfaces.
- You cannot use a redundant interface as part of an EtherChannel, nor can you use an EtherChannel as part of a redundant interface. You cannot use the same physical interfaces in a redundant interface and an EtherChannel interface. You can, however, configure both types on the ASA if they do not use the same physical interfaces.
- You cannot use interfaces on the 4GE SSM, including the integrated 4GE SSM in slot 1 on the ASA 5550, as part of an EtherChannel.
- For failover guidelines, see the [“Failover Guidelines” section on page 6-10](#).

## Default Settings

This section lists default settings for interfaces if you do not have a factory default configuration. For information about the factory default configurations, see the [“Factory Default Configurations” section on page 2-10](#).

### Default State of Interfaces

The default state of an interface depends on the type and the context mode.

In multiple context mode, all allocated interfaces are enabled by default, no matter what the state of the interface is in the system execution space. However, for traffic to pass through the interface, the interface also has to be enabled in the system execution space. If you shut down an interface in the system execution space, then that interface is down in all contexts that share it.

In single mode or in the system execution space, interfaces have the following default states:

- Physical interfaces—Disabled.
- Redundant Interfaces—Enabled. However, for traffic to pass through the redundant interface, the member physical interfaces must also be enabled.
- Subinterfaces—Enabled. However, for traffic to pass through the subinterface, the physical interface must also be enabled.
- EtherChannel port-channel interfaces—Enabled. However, for traffic to pass through the EtherChannel, the channel group physical interfaces must also be enabled.

### Default Speed and Duplex

- By default, the speed and duplex for copper (RJ-45) interfaces are set to auto-negotiate.
- The fiber interface for the ASA 5550 (slot 1) and the 4GE SSM has a fixed speed and does not support duplex, but you can set the interface to negotiate link parameters (the default) or not to negotiate.
- For fiber interfaces for the ASA 5580 and 5585-X, the speed is set for automatic link negotiation.

**Default Connector Type**

The ASA 5550 (slot 1) and the 4GE SSM for the ASA 5510 and higher ASA include two connector types: copper RJ-45 and fiber SFP. RJ-45 is the default. You can configure the ASA to use the fiber SFP connectors.

**Default MAC Addresses**

By default, the physical interface uses the burned-in MAC address, and all subinterfaces of a physical interface use the same burned-in MAC address.

## Starting Interface Configuration (ASA 5510 and Higher)

This section includes the following topics:

- [Task Flow for Starting Interface Configuration, page 6-12](#)
- [Converting In-Use Interfaces to a Redundant or EtherChannel Interface, page 6-13](#)
- [Enabling the Physical Interface and Configuring Ethernet Parameters, page 6-22](#)
- [Configuring a Redundant Interface, page 6-25](#)
- [Configuring an EtherChannel, page 6-27](#)
- [Configuring VLAN Subinterfaces and 802.1Q Trunking, page 6-30](#)
- [Enabling Jumbo Frame Support \(Supported Models\), page 6-32](#)

## Task Flow for Starting Interface Configuration

**Note**

If you have an existing configuration, and want to convert interfaces that are in use to a redundant or EtherChannel interface, perform your configuration offline to minimize disruption. See the [“Converting In-Use Interfaces to a Redundant or EtherChannel Interface”](#) section on page 6-13.

To start configuring interfaces, perform the following steps:

- 
- Step 1** (Multiple context mode) Complete all tasks in this section in the system execution space. To change from the context to the system execution space, enter the **changeto system** command.
- Step 2** Enable the physical interface, and optionally change Ethernet parameters. See the [“Enabling the Physical Interface and Configuring Ethernet Parameters”](#) section on page 6-22.
- Physical interfaces are disabled by default.
- Step 3** (Optional) Configure redundant interface pairs. See the [“Configuring a Redundant Interface”](#) section on page 6-25.
- A logical redundant interface pairs an active and a standby physical interface. When the active interface fails, the standby interface becomes active and starts passing traffic.
- Step 4** (Optional) Configure an EtherChannel. See the [“Configuring an EtherChannel”](#) section on page 6-27.
- An EtherChannel groups multiple Ethernet interfaces into a single logical interface.



**Note** You cannot use interfaces on the 4GE SSM, including the integrated 4GE SSM in slot 1 on the ASA 5550, as part of an EtherChannel.

- Step 5** (Optional) Configure VLAN subinterfaces. See the [“Configuring VLAN Subinterfaces and 802.1Q Trunking”](#) section on page 6-30.
- Step 6** (Optional) Enable jumbo frame support on the ASA 5580 and 5585-X according to the [“Enabling Jumbo Frame Support \(Supported Models\)”](#) section on page 6-32.
- Step 7** (Multiple context mode only) To complete the configuration of interfaces in the system execution space, perform the following tasks that are documented in [Chapter 5, “Configuring Multiple Context Mode”](#):
- To assign interfaces to contexts, see the [“Configuring a Security Context”](#) section on page 5-18.
  - (Optional) To automatically assign unique MAC addresses to context interfaces, see the [“Automatically Assigning MAC Addresses to Context Interfaces”](#) section on page 5-22.
- The MAC address is used to classify packets within a context. If you share an interface, but do not have unique MAC addresses for the interface in each context, then the destination IP address is used to classify packets. Alternatively, you can manually assign MAC addresses within the context according to the [“Configuring the MAC Address and MTU”](#) section on page 8-9.
- Step 8** Complete the interface configuration according to [Chapter 8, “Completing Interface Configuration \(Routed Mode\),”](#) or [Chapter 9, “Completing Interface Configuration \(Transparent Mode\).”](#)

## Converting In-Use Interfaces to a Redundant or EtherChannel Interface

If you have an existing configuration and want to take advantage of the redundant or EtherChannel interface feature for interfaces that are currently in use, you will have some amount of downtime when you convert to the logical interfaces.

This section provides an overview of how to convert your existing interfaces to a redundant or EtherChannel interface with minimal downtime. See the [“Configuring a Redundant Interface”](#) section on page 6-25 and the [“Configuring an EtherChannel”](#) section on page 6-27 for more information.

- [Detailed Steps \(Single Mode\)](#), page 6-13
- [Detailed Steps \(Multiple Mode\)](#), page 6-18

### Detailed Steps (Single Mode)

We recommend that you update your configuration offline as a text file, and reimport the whole configuration for the following reasons:

- Because you cannot add a named interface as a member of a redundant or EtherChannel interface, you must remove the name from the interface. When you remove the name from the interface, any command that referred to that name is deleted. Because commands that refer to interface names are widespread throughout the configuration and affect multiple features, removing a name from an in-use interface at the CLI or in ASDM would cause significant damage to your configuration, not to mention significant downtime while you reconfigure all your features around a new interface name.
- Changing your configuration offline lets you use the same interface names for your new logical interfaces, so you do not need to touch the feature configurations that refer to interface names. You only need to change the interface configuration.

- Clearing the running configuration and immediately applying a new configuration will minimize the downtime of your interfaces. You will not be waiting to configure the interfaces in real time.

- 
- Step 1** Connect to the ASA; if you are using failover, connect to the active ASA.
- Step 2** If you are using failover, disable failover by entering the **no failover** command.
- Step 3** Copy the running configuration by entering the **more system:running-config** command and copying the display output to a text editor.

Be sure to save an extra copy of the old configuration in case you make an error when you edit it.

- Step 4** For each in-use interface that you want to add to a redundant or EtherChannel interface, cut and paste all commands under the **interface** command to the end of the interface configuration section for use in creating your new logical interfaces. The only exceptions are the following commands, which should stay with the physical interface configuration:

- **media-type**
- **speed**
- **duplex**
- **flowcontrol**



**Note** You can only add *physical* interfaces to an EtherChannel or redundant interface; you cannot have VLANs configured for the physical interfaces.

Be sure to match the above values for all interfaces in a given EtherChannel or redundant interface. Note that the duplex setting for an EtherChannel interface must be Full or Auto.

---

For example, you have the following interface configuration. The bolded commands are the ones we want to use with three new EtherChannel interfaces, and that you should cut and paste to the end of the interface section.

```
interface GigabitEthernet0/0
 nameif outside
 security-level 0
 ip address 10.86.194.225 255.255.255.0
 no shutdown
!
interface GigabitEthernet0/1
 nameif inside
 security-level 100
 ip address 192.168.1.3 255.255.255.0
 no shutdown
!
interface GigabitEthernet0/2
 shutdown
 no nameif
 no security-level
 no ip address
!
interface GigabitEthernet0/3
 shutdown
 no nameif
 no security-level
 no ip address
!
interface GigabitEthernet0/4
 shutdown
```

```

no nameif
no security-level
no ip address
!
interface GigabitEthernet0/5
shutdown
no nameif
no security-level
no ip address
!
interface Management0/0
nameif mgmt
security-level 100
ip address 10.1.1.5 255.255.255.0
no shutdown
!
interface Management0/1
shutdown
no nameif
no security-level
no ip address

```

**Step 5** Above each pasted command section, create your new logical interfaces by entering one of the following commands:

- **interface redundant** *number* [1-8]
- **interface port-channel** *channel\_id* [1-48]

For example:

```

...

interface port-channel 1
nameif outside
security-level 0
ip address 10.86.194.225 255.255.255.0
no shutdown
!
interface port-channel 2
nameif inside
security-level 100
ip address 192.168.1.3 255.255.255.0
no shutdown
!
interface port-channel 3
nameif mgmt
security-level 100
ip address 10.1.1.5 255.255.255.0
no shutdown

```

**Step 6** Assign the physical interfaces to the new logical interfaces:

- Redundant interface—Enter the following commands under the new **interface redundant** command:

```

member-interface physical_interface1
member-interface physical_interface2

```

Where the physical interfaces are any two interfaces of the same type (either formerly in use or unused). You cannot assign a Management interface to a redundant interface.

For example, to take advantage of existing cabling, you would continue to use the formerly in-use interfaces in their old roles as part of the inside and outside redundant interfaces:

```

interface redundant 1
 nameif outside
 security-level 0
 ip address 10.86.194.225 255.255.255.0
 member-interface GigabitEthernet0/0
 member-interface GigabitEthernet0/2

interface redundant 2
 nameif inside
 security-level 100
 ip address 192.168.1.3 255.255.255.0
 member-interface GigabitEthernet0/1
 member-interface GigabitEthernet0/3

```

- EtherChannel interface—Enter the following command under each interface you want to add to the EtherChannel (either formerly in use or unused). You can assign up to 16 interfaces per EtherChannel, although only eight can be active; the others are in a standby state in case of failure.

```
channel-group channel_id mode active
```

For example, to take advantage of existing cabling, you would continue to use the formerly in-use interfaces in their old roles as part of the inside and outside EtherChannel interfaces:

```

interface GigabitEthernet0/0
 channel-group 1 mode active
 no shutdown
!
interface GigabitEthernet0/1
 channel-group 2 mode active
 no shutdown
!
interface GigabitEthernet0/2
 channel-group 1 mode active
 shutdown
 no nameif
 no security-level
 no ip address
!
interface GigabitEthernet0/3
 channel-group 1 mode active
 shutdown
 no nameif
 no security-level
 no ip address
!
interface GigabitEthernet0/4
 channel-group 2 mode active
 shutdown
 no nameif
 no security-level
 no ip address
!
interface GigabitEthernet0/5
 channel-group 2 mode active
 shutdown
 no nameif
 no security-level
 no ip address
!
interface Management0/0
 channel-group 3 mode active
 no shutdown
!
interface Management0/1

```

```

channel-group 3 mode active
shutdown
no nameif
no security-level
no ip address

...

```

- Step 7** Enable each formerly unused interface that is now part of a logical interface by adding **no** in front of the **shutdown** command.

For example, your final EtherChannel configuration is:

```

interface GigabitEthernet0/0
channel-group 1 mode active
no shutdown
!
interface GigabitEthernet0/1
channel-group 2 mode active
no shutdown
!
interface GigabitEthernet0/2
channel-group 1 mode active
no shutdown
no nameif
no security-level
no ip address
!
interface GigabitEthernet0/3
channel-group 1 mode active
no shutdown
no nameif
no security-level
no ip address
!
interface GigabitEthernet0/4
channel-group 2 mode active
no shutdown
no nameif
no security-level
no ip address
!
interface GigabitEthernet0/5
channel-group 2 mode active
no shutdown
no nameif
no security-level
no ip address
!
interface Management0/0
channel-group 3 mode active
no shutdown
!
interface Management0/1
channel-group 3 mode active
no shutdown
no nameif
no security-level
no ip address
!
interface port-channel 1
nameif outside
security-level 0
ip address 10.86.194.225 255.255.255.0

```

```

!
interface port-channel 2
 nameif inside
 security-level 100
 ip address 192.168.1.3 255.255.255.0
!
interface port-channel 3
 nameif mgmt
 security-level 100
 ip address 10.1.1.5 255.255.255.0

```




---

**Note** Other optional EtherChannel parameters can be configured after you import the new configuration. See the [“Configuring an EtherChannel”](#) section on page 6-27.

---

**Step 8** At the ASA CLI prompt, perform the following steps depending on your connection (console or remote).

- Console connection:
  - a. Copy the entire new configuration to the clipboard, including the altered interface section.
  - b. Clear the running configuration by entering:
 

```
hostname(config)# clear configure all
```

Traffic through the ASA stops at this point.
  - c. Paste in the new configuration at the prompt.
 

Traffic through the ASA resumes.
- Remote connection:
  - a. Save the new configuration to a TFTP or FTP server, so you can copy it to the startup configuration on the ASA. For example, you can run a TFTP or FTP server on your PC.
  - b. Clear the startup configuration by entering:
 

```
hostname(config)# write erase
```
  - c. Copy the new configuration to the startup configuration by entering:
 

```
hostname(config)# copy url startup-config
```

See the [“Downloading a File to a Specific Location”](#) section on page 81-3
  - d. Reload the ASA using the **reload** command. Do not save the running configuration.

**Step 9** Reenable failover by entering the **failover** command.

---

## Detailed Steps (Multiple Mode)

We recommend that you update your system and context configurations offline as text files, and reimport them for the following reasons:

- Because you cannot add an allocated interface as a member of a redundant or EtherChannel interface, you must deallocate the interface from any contexts. When you deallocate the interface, any context command that referred to that interface is deleted. Because commands that refer to interfaces are widespread throughout the configuration and affect multiple features, removing an allocation from an in-use interface at the CLI or in ASDM would cause significant damage to your configuration, not to mention significant downtime while you reconfigure all your features around a new interface.

- Changing your configuration offline lets you use the same interface names for your new logical interfaces, so you do not need to touch the feature configurations that refer to interface names. You only need to change the interface configuration.
- Clearing the running system configuration and immediately applying a new configuration will minimize the downtime of your interfaces. You will not be waiting to configure the interfaces in real time.

- 
- Step 1** Connect to the ASA, and change to the system; if you are using failover, connect to the active ASA.
- Step 2** If you are using failover, disable failover by entering the **no failover** command.
- Step 3** In the system, copy the running configuration by entering the **more system:running-config** command and copying the display output to a text editor.

Be sure to save an extra copy of the old configuration in case you make an error when you edit it.

For example, you have the following interface configuration and allocation in the system configuration, with shared interfaces between two contexts.

#### System

```
interface GigabitEthernet0/0
 no shutdown
interface GigabitEthernet0/1
 no shutdown
interface GigabitEthernet0/2
 shutdown
interface GigabitEthernet0/3
 shutdown
interface GigabitEthernet0/4
 shutdown
interface GigabitEthernet0/5
 shutdown
interface Management0/0
 no shutdown
interface Management1/0
 shutdown
!
context customerA
 allocate-interface gigabitethernet0/0 int1
 allocate-interface gigabitethernet0/1 int2
 allocate-interface management0/0 mgmt
context customerB
 allocate-interface gigabitethernet0/0
 allocate-interface gigabitethernet0/1
 allocate-interface management0/0
```

- Step 4** Get copies of *all* context configurations that will use the new EtherChannel or redundant interface. See the [“Backing Up a Context Configuration or Other File in Flash Memory”](#) section on page 81-8.

For example, you download the following context configurations (interface configuration shown):

#### CustomerA Context

```
interface int1
 nameif outside
 security-level 0
 ip address 10.86.194.225 255.255.255.0
!
interface int2
 nameif inside
 security-level 100
```

```

ip address 192.168.1.3 255.255.255.0
no shutdown
!
interface mgmt
nameif mgmt
security-level 100
ip address 10.1.1.5 255.255.255.0
management-only

```

### CustomerB Context

```

interface GigabitEthernet0/0
nameif outside
security-level 0
ip address 10.20.15.5 255.255.255.0
!
interface GigabitEthernet0/1
nameif inside
security-level 100
ip address 192.168.6.78 255.255.255.0
!
interface Management0/0
nameif mgmt
security-level 100
ip address 10.8.1.8 255.255.255.0
management-only

```

- Step 5** In the system configuration, create the new logical interfaces according to the “[Configuring a Redundant Interface](#)” section on page 6-25 or the “[Configuring an EtherChannel](#)” section on page 6-27. Be sure to enter the **no shutdown** command on any additional physical interfaces you want to use as part of the logical interface.



**Note** You can only add *physical* interfaces to an EtherChannel or redundant interface; you cannot have VLANs configured for the physical interfaces.

Be sure to match physical interface parameters such as speed and duplex for all interfaces in a given EtherChannel or redundant interface. Note that the duplex setting for an EtherChannel interface must be Full or Auto.

For example, the new configuration is:

### System

```

interface GigabitEthernet0/0
channel-group 1 mode active
no shutdown
!
interface GigabitEthernet0/1
channel-group 2 mode active
no shutdown
!
interface GigabitEthernet0/2
channel-group 1 mode active
no shutdown
!
interface GigabitEthernet0/3
channel-group 1 mode active
no shutdown
!

```

```

interface GigabitEthernet0/4
 channel-group 2 mode active
 no shutdown
!
interface GigabitEthernet0/5
 channel-group 2 mode active
 no shutdown
!
interface Management0/0
 channel-group 3 mode active
 no shutdown
!
interface Management0/1
 channel-group 3 mode active
 no shutdown
!
interface port-channel 1
interface port-channel 2
interface port-channel 3

```

- Step 6** Change the interface allocation per context to use the new EtherChannel or redundant interfaces. See the “Configuring a Security Context” section on page 5-18.

For example, to take advantage of existing cabling, you would continue to use the formerly in-use interfaces in their old roles as part of the inside and outside redundant interfaces:

```

context customerA
 allocate-interface port-channel1 int1
 allocate-interface port-channel2 int2
 allocate-interface port-channel3 mgmt
context customerB
 allocate-interface port-channel1
 allocate-interface port-channel2
 allocate-interface port-channel3

```



**Note**

You might want to take this opportunity to assign mapped names to interfaces if you have not done so already. For example, the configuration for customerA does not need to be altered at all; it just needs to be reapplied on the ASA. The customerB configuration, however, needs to have all of the interface IDs changed; if you assign mapped names for customerB, you still have to change the interface IDs in the context configuration, but mapped names might help future interface changes.

- Step 7** For contexts that do not use mapped names, change the context configuration to use the new EtherChannel or redundant interface ID. (Contexts that use mapped interface names do not require any alteration.)

For example:

**CustomerB Context**

```

interface port-channel1
 nameif outside
 security-level 0
 ip address 10.20.15.5 255.255.255.0
!
interface port-channel2
 nameif inside
 security-level 100
 ip address 192.168.6.78 255.255.255.0
!

```

```
interface port-channel3
 nameif mgmt
 security-level 100
 ip address 10.8.1.8 255.255.255.0
 management-only
```

- Step 8** Copy the new context configuration files over the old ones. For example, if your contexts are on an FTP server, copy over the existing files (making backups as desired) using FTP. If your contexts are in flash memory, you can use the **copy** command and run a TFTP or FTP server on your PC, or use secure copy. See the [“Downloading a File to a Specific Location” section on page 81-3](#). This change only affects the startup configuration; the running configuration is still using the old context configuration.
- Step 9** At the ASA system CLI prompt, perform the following steps depending on your connection (console or remote).
- Console connection:
    - a. Copy the entire new system configuration to the clipboard, including the altered interface section.
    - b. Clear the running configuration (both system and contexts) by entering:
 

```
hostname(config)# clear configure all
```

Traffic through the ASA stops at this point.
    - c. Paste in the new system configuration at the prompt.
 

All of the new context configurations now reload. When they are finished reloading, traffic through the ASA resumes.
  - Remote connection:
    - a. Save the new system configuration to a TFTP or FTP server, so you can copy it to the startup configuration on the ASA. For example, you can run a TFTP or FTP server on your PC.
    - b. Clear the startup configuration by entering:
 

```
hostname(config)# write erase
```
    - c. Copy the new system configuration to the startup configuration by entering:
 

```
hostname(config)# copy url startup-config
```

See the [“Downloading a File to a Specific Location” section on page 81-3](#)
    - d. Reload the ASA using the **reload** command. Do not save the running configuration.
- Step 10** Reenable failover by entering the **failover** command.
- 

## Enabling the Physical Interface and Configuring Ethernet Parameters

This section describes how to:

- Enable the physical interface
- Set a specific speed and duplex (if available)
- Enable pause frames for flow control

## Prerequisites

For multiple context mode, complete this procedure in the system execution space. To change from the context to the system execution space, enter the **changeto system** command.

## Detailed Steps

|        | Command                                                                                                                                                                                   | Purpose                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|--------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Step 1 | <pre><b>interface</b> <i>physical_interface</i></pre> <p><b>Example:</b><br/> <pre>hostname(config)# interface gigabitethernet 0/0</pre></p>                                              | <p>Specifies the interface you want to configure.</p> <p>where the <i>physical_interface</i> ID includes the type, slot, and port number as <i>type[slot/port</i>.</p> <p>The physical interface types include the following:</p> <ul style="list-style-type: none"> <li>• <b>ethernet</b></li> <li>• <b>gigabitethernet</b></li> <li>• <b>tengigabitethernet</b></li> <li>• <b>management</b></li> </ul> <p>Enter the type followed by <i>slot/port</i>, for example, <b>gigabitethernet0/1</b> or <b>ethernet 0/1</b>. A space is optional between the type and the slot/port.</p> |
| Step 2 | <p>(Optional)</p> <pre><b>media-type sfp</b></pre> <p><b>Example:</b><br/> <pre>hostname(config-if)# media-type sfp</pre></p>                                                             | <p>Sets the media type to SFP, if available for your model. To restore the default RJ-45, enter the <b>media-type rj45</b> command.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| Step 3 | <p>(Optional)</p> <pre><b>speed</b> {<b>auto</b>   <b>10</b>   <b>100</b>   <b>1000</b>   <b>nonegotiate</b>}</pre> <p><b>Example:</b><br/> <pre>hostname(config-if)# speed 100</pre></p> | <p>Sets the speed.</p> <p>For copper interfaces, the default setting is <b>auto</b>.</p> <p>For SFP interfaces, the default setting is <b>no speed nonegotiate</b>, which sets the speed to the maximum speed and enables link negotiation for flow-control parameters and remote fault information. The <b>nonegotiate</b> keyword is the only keyword available for SFP interfaces. The <b>speed nonegotiate</b> command disables link negotiation.</p>                                                                                                                            |
| Step 4 | <p>(Optional)</p> <pre><b>duplex</b> {<b>auto</b>   <b>full</b>   <b>half</b>}</pre> <p><b>Example:</b><br/> <pre>hostname(config-if)# duplex full</pre></p>                              | <p>Sets the duplex for copper interfaces. The <b>auto</b> setting is the default.</p> <p><b>Note</b> The duplex setting for an EtherChannel interface must be Full or Auto.</p>                                                                                                                                                                                                                                                                                                                                                                                                      |

| Command                                                                                                                                                                                              | Purpose                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p><b>Step 5</b> (Optional)</p> <pre>flowcontrol send on [low_water high_water pause_time] [noconfirm]</pre> <p><b>Example:</b></p> <pre>hostname(config-if)# flowcontrol send on 95 200 10000</pre> | <p>Enables pause (XOFF) frames for flow control on 1-Gigabit and 10-Gigabit Ethernet interfaces.</p> <p>If you have a traffic burst, dropped packets can occur if the burst exceeds the buffering capacity of the FIFO buffer on the NIC and the receive ring buffers. Enabling pause frames for flow control can alleviate this issue. Pause (XOFF) and XON frames are generated automatically by the NIC hardware based on the FIFO buffer usage. A pause frame is sent when the buffer usage exceeds the high-water mark. The default <i>high_water</i> value is 128 KB (10 GigabitEthernet) and 24 KB (1 GigabitEthernet); you can set it between 0 and 511 (10 GigabitEthernet) or 0 and 47 KB (1 GigabitEthernet). After a pause is sent, an XON frame can be sent when the buffer usage is reduced below the low-water mark. By default, the <i>low_water</i> value is 64 KB (10 GigabitEthernet) and 16 KB (1 GigabitEthernet); you can set it between 0 and 511 (10 GigabitEthernet) or 0 and 47 KB (1 GigabitEthernet). The link partner can resume traffic after receiving an XON, or after the XOFF expires, as controlled by the timer value in the pause frame. The default <i>pause_time</i> value is 26624; you can set it between 0 and 65535. If the buffer usage is consistently above the high-water mark, pause frames are sent repeatedly, controlled by the pause refresh threshold value.</p> <p>When you use this command, you see the following warning:</p> <pre>Changing flow-control parameters will reset the interface. Packets may be lost during the reset. Proceed with flow-control changes?</pre> <p>To change the parameters without being prompted, use the <b>noconfirm</b> keyword.</p> <p><b>Note</b> Only flow control frames defined in 802.3x are supported. Priority-based flow control is not supported.</p> |
| <p><b>Step 6</b> <code>no shutdown</code></p> <p><b>Example:</b></p> <pre>hostname(config-if)# no shutdown</pre>                                                                                     | <p>Enables the interface. To disable the interface, enter the <b>shutdown</b> command. If you enter the <b>shutdown</b> command, you also shut down all subinterfaces. If you shut down an interface in the system execution space, then that interface is shut down in all contexts that share it.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |

## What to Do Next

### Optional Tasks:

- Configure redundant interface pairs. See the [“Configuring a Redundant Interface”](#) section on page 6-25.
- Configure an EtherChannel. See the [“Configuring an EtherChannel”](#) section on page 6-27.
- Configure VLAN subinterfaces. See the [“Configuring VLAN Subinterfaces and 802.1Q Trunking”](#) section on page 6-30.

### Required Tasks:

- For multiple context mode, assign interfaces to contexts and automatically assign unique MAC addresses to context interfaces. See the [“Configuring Multiple Contexts”](#) section on page 5-14.

- For single context mode, complete the interface configuration. See [Chapter 8, “Completing Interface Configuration \(Routed Mode\),”](#) or [Chapter 9, “Completing Interface Configuration \(Transparent Mode\).”](#)

## Configuring a Redundant Interface

A logical redundant interface consists of a pair of physical interfaces: an active and a standby interface. When the active interface fails, the standby interface becomes active and starts passing traffic. You can configure a redundant interface to increase the ASA reliability. This feature is separate from device-level failover, but you can configure redundant interfaces as well as failover if desired.

This section describes how to configure redundant interfaces and includes the following topics:

- [Configuring a Redundant Interface, page 6-25](#)
- [Changing the Active Interface, page 6-27](#)

## Configuring a Redundant Interface

This section describes how to create a redundant interface. By default, redundant interfaces are enabled.

### Guidelines and Limitations

- You can configure up to 8 redundant interface pairs.
- Redundant interface delay values are configurable, but by default the ASA inherits the default delay values based on the physical type of its member interfaces.
- See also the [“Redundant Interface Guidelines” section on page 6-10](#).

### Prerequisites

- Both member interfaces must be of the same physical type. For example, both must be Ethernet.
- You cannot add a physical interface to the redundant interface if you configured a name for it. You must first remove the name using the **no nameif** command.
- For multiple context mode, complete this procedure in the system execution space. To change from the context to the system execution space, enter the **changeto system** command.



#### Caution

---

If you are using a physical interface already in your configuration, removing the name will clear any configuration that refers to the interface.

---

## Detailed Steps

|        | Command                                                                                                                                      | Purpose                                                                                                                                                                                                                                                                                                                                                                                                                        |
|--------|----------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Step 1 | <pre><b>interface</b> <b>redundant</b> <i>number</i></pre> <p><b>Example:</b><br/>hostname(config)# interface redundant 1</p>                | <p>Adds the logical redundant interface, where the <i>number</i> argument is an integer between 1 and 8.</p> <p><b>Note</b> You need to add at least one member interface to the redundant interface before you can configure logical parameters for it such as a name.</p>                                                                                                                                                    |
| Step 2 | <pre><b>member-interface</b> <i>physical_interface</i></pre> <p><b>Example:</b><br/>hostname(config-if)# member-interface management 0/0</p> | <p>Adds the first member interface to the redundant interface.</p> <p>See the <a href="#">“Enabling the Physical Interface and Configuring Ethernet Parameters”</a> section for a description of the physical interface ID.</p> <p>Redundant interfaces do not support Management <i>slot/port</i> interfaces as members.</p> <p>After you add the interface, any configuration for it (such as an IP address) is removed.</p> |
| Step 3 | <pre><b>member-interface</b> <i>physical_interface</i></pre> <p><b>Example:</b><br/>hostname(config-if)# member-interface management 1/0</p> | <p>Adds the second member interface to the redundant interface.</p> <p>Make sure the second interface is the same physical type as the first interface.</p> <p>To remove a member interface, enter the <b>no member-interface <i>physical_interface</i></b> command. You cannot remove both member interfaces from the redundant interface; the redundant interface requires at least one member interface.</p>                |

## Examples

The following example creates two redundant interfaces:

```
hostname(config)# interface redundant 1
hostname(config-if)# member-interface gigabitethernet 0/0
hostname(config-if)# member-interface gigabitethernet 0/1
hostname(config-if)# interface redundant 2
hostname(config-if)# member-interface gigabitethernet 0/2
hostname(config-if)# member-interface gigabitethernet 0/3
```

## What to Do Next

Optional Task:

- Configure VLAN subinterfaces. See the [“Configuring VLAN Subinterfaces and 802.1Q Trunking”](#) section on page 6-30.

Required Tasks:

- For multiple context mode, assign interfaces to contexts and automatically assign unique MAC addresses to context interfaces. See the [“Configuring Multiple Contexts”](#) section on page 5-14.
- For single context mode, complete the interface configuration. See the [Chapter 8, “Completing Interface Configuration \(Routed Mode\)”](#), or [Chapter 9, “Completing Interface Configuration \(Transparent Mode\)”](#).

## Changing the Active Interface

By default, the active interface is the first interface listed in the configuration, if it is available. To view which interface is active, enter the following command:

```
hostname# show interface redundantnumber detail | grep Member
```

For example:

```
hostname# show interface redundant1 detail | grep Member
Members GigabitEthernet0/3 (Active), GigabitEthernet0/2
```

To change the active interface, enter the following command:

```
hostname# redundant-interface redundantnumber active-member physical_interface
```

where the **redundantnumber** argument is the redundant interface ID, such as **redundant1**.

The *physical\_interface* is the member interface ID that you want to be active.

## Configuring an EtherChannel

This section describes how to create an EtherChannel port-channel interface, assign interfaces to the EtherChannel, and customize the EtherChannel.

This section includes the following topics:

- [Adding Interfaces to the EtherChannel, page 6-27](#)
- [Customizing the EtherChannel, page 6-29](#)

## Adding Interfaces to the EtherChannel

This section describes how to create an EtherChannel port-channel interface and assign interfaces to the EtherChannel. By default, port-channel interfaces are enabled.

### Guidelines and Limitations

- You can configure up to 48 EtherChannels.
- Each channel group can have eight active interfaces. Note that you can assign up to 16 interfaces to a channel group. While only eight interfaces can be active, the remaining interfaces can act as standby links in case of interface failure.
- You cannot use interfaces on the 4GE SSM, including the integrated 4GE SSM in slot 1 on the ASA 5550, as part of an EtherChannel.
- See also the “[EtherChannel Guidelines](#)” section on page 6-10.

### Prerequisites

- All interfaces in the channel group must be the same type, speed, and duplex. Half duplex is not supported.
- You cannot add a physical interface to the channel group if you configured a name for it. You must first remove the name using the **no nameif** command.
- For multiple context mode, complete this procedure in the system execution space. To change from the context to the system execution space, enter the **changeto system** command.

**Caution**

If you are using a physical interface already in your configuration, removing the name will clear any configuration that refers to the interface.

**Detailed Steps**

|               | <b>Command</b>                                                                                                                                                                                     | <b>Purpose</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|---------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Step 1</b> | <pre><b>interface</b> <i>physical_interface</i></pre> <p><b>Example:</b><br/> <pre>hostname(config)# interface gigabitethernet 0/0</pre></p>                                                       | <p>Specifies the interface you want to add to the channel group, where the <i>physical_interface</i> ID includes the type, slot, and port number as <i>type[slot]/port</i>. This first interface in the channel group determines the type and speed for all other interfaces in the group.</p> <p>In transparent mode, if you create a channel group with multiple Management interfaces, then you can use this EtherChannel as the management-only interface.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Step 2</b> | <pre><b>channel-group</b> <i>channel_id</i> <b>mode</b> {<b>active</b>   <b>passive</b>   <b>on</b>}</pre> <p><b>Example:</b><br/> <pre>hostname(config-if)# channel-group 1 mode active</pre></p> | <p>Assigns this physical interface to an EtherChannel with the <i>channel_id</i> between 1 and 48. If the port-channel interface for this channel ID does not yet exist in the configuration, one will be added:</p> <pre><b>interface port-channel</b> <i>channel_id</i></pre> <p>We recommend using <b>active</b> mode. For information about active, passive, and on modes, see the <a href="#">“Link Aggregation Control Protocol”</a> section on page 6-6.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Step 3</b> | <p>(Optional)</p> <pre><b>lacp port-priority</b> <i>number</i></pre> <p><b>Example:</b><br/> <pre>hostname(config-if)# lacp port-priority 12345</pre></p>                                          | <p>Sets the priority for a physical interface in the channel group between 1 and 65535. The default is 32768. The higher the number, the lower the priority. The ASA uses this setting to decide which interfaces are active and which are standby if you assign more interfaces than can be used. If the port priority setting is the same for all interfaces, then the priority is determined by the interface ID (slot/port). The lowest interface ID is the highest priority. For example, GigabitEthernet 0/0 is a higher priority than GigabitEthernet 0/1.</p> <p>If you want to prioritize an interface to be active even though it has a higher interface ID, then set this command to have a lower value. For example, to make GigabitEthernet 1/3 active before GigabitEthernet 0/7, then make the <b>lacp port-priority</b> value be 12345 on the 1/3 interface vs. the default 32768 on the 0/7 interface.</p> <p>If the device at the other end of the EtherChannel has conflicting port priorities, the system priority is used to determine which port priorities to use. See the <b>lacp system-priority</b> command in the <a href="#">“Customizing the EtherChannel”</a> section on page 6-29.</p> |
| <b>Step 4</b> | Repeat steps 1 through 5 for each interface you want to add to the channel group.                                                                                                                  | Each interface in the channel group must be the same type and speed. Half duplex is not supported. If you add an interface that does not match, it will be placed in a suspended state.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |

## What to Do Next

### Optional Tasks:

- Customize the EtherChannel interface. See the “[Customizing the EtherChannel](#)” section on page 6-29.
- Configure VLAN subinterfaces. See the “[Configuring VLAN Subinterfaces and 802.1Q Trunking](#)” section on page 6-30.

### Required Tasks:

- For multiple context mode, assign interfaces to contexts and automatically assign unique MAC addresses to context interfaces. See the “[Configuring Multiple Contexts](#)” section on page 5-14.
- For single context mode, complete the interface configuration. See the [Chapter 8, “Completing Interface Configuration \(Routed Mode\)”](#), or [Chapter 9, “Completing Interface Configuration \(Transparent Mode\)”](#).

## Customizing the EtherChannel

This section describes how to set the maximum number of interfaces in the EtherChannel, the minimum number of operating interfaces for the EtherChannel to be active, the load balancing algorithm, and other optional parameters.

### Detailed Steps

|        | Command                                                                                                               | Purpose                                                                                                                                                                                                                                                                                                                                                                                          |
|--------|-----------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Step 1 | <b>interface port-channel</b> <i>channel_id</i><br><br><b>Example:</b><br>hostname(config)# interface port-channel 1  | Specifies the port-channel interface. This interface was created automatically when you added an interface to the channel group. If you have not yet added an interface, then this command creates the port-channel interface.<br><br><b>Note</b> You need to add at least one member interface to the port-channel interface before you can configure logical parameters for it such as a name. |
| Step 2 | <b>lacp max-bundle</b> <i>number</i><br><br><b>Example:</b><br>hostname(config-if)# lacp max-bundle 6                 | Specifies the maximum number of active interfaces allowed in the channel group, between 1 and 8. The default is 8.                                                                                                                                                                                                                                                                               |
| Step 3 | <b>port-channel min-bundle</b> <i>number</i><br><br><b>Example:</b><br>hostname(config-if)# port-channel min-bundle 2 | Specifies the minimum number of active interfaces required for the port-channel interface to become active, between 1 and 8. The default is 1. If the active interfaces in the channel group falls below this value, then the port-channel interface goes down, and could trigger a device-level failover.                                                                                       |

|        | Command                                                                                                                                                                                                                                                                                                                                                                                                     | Purpose                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|--------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Step 4 | <pre>port-channel load-balance {dst-ip   dst-ip-port   dst-mac   dst-port   src-dst-ip   src-dst-ip-port   src-dst-mac   src-dst-port   src-ip   src-ip-port   src-mac   src-port   vlan-dst-ip   vlan-dst-ip-port   vlan-only   vlan-src-dst-ip   vlan-src-dst-ip-port   vlan-src-ip   vlan-src-ip-port}</pre> <p><b>Example:</b><br/> hostname(config-if)# port-channel<br/> load-balance src-dst-mac</p> | <p>Configures the load-balancing algorithm. By default, the ASA balances the packet load on interfaces according to the source and destination IP address (<b>src-dst-ip</b>) of the packet. If you want to change the properties on which the packet is categorized, use this command. For example, if your traffic is biased heavily towards the same source and destination IP addresses, then the traffic assignment to interfaces in the EtherChannel will be unbalanced. Changing to a different algorithm can result in more evenly distributed traffic. For more information about load balancing, see the <a href="#">“Load Balancing”</a> section on page 6-7.</p> |
| Step 5 | <pre>lacp system-priority number</pre> <p><b>Example:</b><br/> hostname(config)# lacp system-priority<br/> 12345</p>                                                                                                                                                                                                                                                                                        | <p>Sets the LACP system priority, from 1 to 65535. The default is 32768. The higher the number, the lower the priority. This command is global for the ASA.</p> <p>If the device at the other end of the EtherChannel has conflicting port priorities, the system priority is used to determine which port priorities to use. For interface priorities within an EtherChannel, see the <b>lacp port-priority</b> command in the <a href="#">“Adding Interfaces to the EtherChannel”</a> section on page 6-27.</p>                                                                                                                                                            |
| Step 6 | <p>(Optional)</p> <p>You can set the Ethernet properties for the port-channel interface to override the properties set on the individual interfaces.</p>                                                                                                                                                                                                                                                    | <p>This method provides a shortcut to set these parameters because these parameters must match for all interfaces in the channel group. See the <a href="#">“Enabling the Physical Interface and Configuring Ethernet Parameters”</a> section on page 6-22 for Ethernet commands.</p>                                                                                                                                                                                                                                                                                                                                                                                        |

## What to Do Next

### Optional Task:

- Configure VLAN subinterfaces. See the [“Configuring VLAN Subinterfaces and 802.1Q Trunking”](#) section on page 6-30.

### Required Tasks:

- For multiple context mode, assign interfaces to contexts and automatically assign unique MAC addresses to context interfaces. See the [“Configuring Multiple Contexts”](#) section on page 5-14.
- For single context mode, complete the interface configuration. See the [Chapter 8, “Completing Interface Configuration \(Routed Mode\),”](#) or [Chapter 9, “Completing Interface Configuration \(Transparent Mode\).”](#)

## Configuring VLAN Subinterfaces and 802.1Q Trunking

Subinterfaces let you divide a physical, redundant, or EtherChannel interface into multiple logical interfaces that are tagged with different VLAN IDs. An interface with one or more VLAN subinterfaces is automatically configured as an 802.1Q trunk. Because VLANs allow you to keep traffic separate on a given physical interface, you can increase the number of interfaces available to your network without adding additional physical interfaces or ASAs. This feature is particularly useful in multiple context mode so that you can assign unique interfaces to each context.

## Guidelines and Limitations

- Maximum subinterfaces—To determine how many VLAN subinterfaces are allowed for your platform, see the “[Licensing Requirements for ASA 5510 and Higher Interfaces](#)” section on page 6-8.
- Preventing untagged packets on the physical interface—If you use subinterfaces, you typically do not also want the physical interface to pass traffic, because the physical interface passes untagged packets. This property is also true for the active physical interface in a redundant interface pair. Because the physical or redundant interface must be enabled for the subinterface to pass traffic, ensure that the physical or redundant interface does not pass traffic by leaving out the **nameif** command. If you want to let the physical or redundant interface pass untagged packets, you can configure the **nameif** command as usual. See [Chapter 8, “Completing Interface Configuration \(Routed Mode\),”](#) or [Chapter 9, “Completing Interface Configuration \(Transparent Mode\),”](#) for more information about completing the interface configuration.
- (ASA 5512-X through ASA 5555-X) You cannot configure subinterfaces on the Management 0/0 interface.

## Prerequisites

For multiple context mode, complete this procedure in the system execution space. To change from the context to the system execution space, enter the **changeto system** command.

## Detailed Steps

|        | Command                                                                                                                                                                                                                                 | Purpose                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|--------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Step 1 | <p><b>interface</b> {<i>physical_interface</i>   <b>redundant</b> <i>number</i>   <b>port-channel</b> <i>number</i>}.<i>subinterface</i></p> <p><b>Example:</b><br/> <pre>hostname(config)# interface gigabitethernet 0/1.100</pre></p> | <p>Specifies the new subinterface. See the “<a href="#">Enabling the Physical Interface and Configuring Ethernet Parameters</a>” section for a description of the physical interface ID.</p> <p>The <b>redundant</b> <i>number</i> argument is the redundant interface ID, such as <b>redundant 1</b>.</p> <p>The <b>port-channel</b> <i>number</i> argument is the EtherChannel interface ID, such as <b>port-channel 1</b>.</p> <p>The <i>subinterface</i> ID is an integer between 1 and 4294967293.</p>                                                                                                                                                    |
| Step 2 | <p><b>vlan</b> <i>vlan_id</i></p> <p><b>Example:</b><br/> <pre>hostname(config-subif)# vlan 101</pre></p>                                                                                                                               | <p>Specifies the VLAN for the subinterface. The <i>vlan_id</i> is an integer between 1 and 4094. Some VLAN IDs might be reserved on connected switches, so check the switch documentation for more information.</p> <p>You can only assign a single VLAN to a subinterface, and you cannot assign the same VLAN to multiple subinterfaces. You cannot assign a VLAN to the physical interface. Each subinterface must have a VLAN ID before it can pass traffic. To change a VLAN ID, you do not need to remove the old VLAN ID with the <b>no</b> option; you can enter the <b>vlan</b> command with a different VLAN ID, and the ASA changes the old ID.</p> |

## What to Do Next

(Optional) For the ASA 5580 and 5585-X, enable jumbo frame support according to the [“Enabling Jumbo Frame Support \(Supported Models\)”](#) section on page 6-32.

## Enabling Jumbo Frame Support (Supported Models)

A jumbo frame is an Ethernet packet larger than the standard maximum of 1518 bytes (including Layer 2 header and FCS), up to 9216 bytes. You can enable support for jumbo frames for all interfaces by increasing the amount of memory to process Ethernet frames. Assigning more memory for jumbo frames might limit the maximum use of other features, such as access lists.

Supported models include:

- ASA 5512-X
- ASA 5515-X
- ASA 5525-X
- ASA 5545-X
- ASA 5555-X
- ASA 5580
- ASA 5585-X

## Prerequisites

- In multiple context mode, set this option in the system execution space.
- Changes in this setting require you to reload the ASA.
- Be sure to set the MTU for each interface that needs to transmit jumbo frames to a higher value than the default 1500; for example, set the value to 9000 using the **mtu** command. See the [“Configuring the MAC Address and MTU”](#) section on page 8-9. In multiple context mode, set the MTU within each context.

## Detailed Steps

| Command                                                      | Purpose                                                                                                                   |
|--------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------|
| <b>jumbo-frame reservation</b>                               | Enables jumbo frame support for the ASA 5580 and 5585-X. To disable jumbo frames, use the <b>no</b> form of this command. |
| <b>Example:</b><br>hostname(config)# jumbo-frame reservation |                                                                                                                           |

## Examples

The following example enables jumbo frame reservation, saves the configuration, and reloads the ASA:

```
hostname(config)# jumbo-frame reservation
WARNING: this command will take effect after the running-config is saved
and the system has been rebooted. Command accepted.
```

```
hostname(config)# write memory
Building configuration...
```

```

Cryptochecksum: 718e3706 4edb11ea 69af58d0 0a6b7cb5

70291 bytes copied in 3.710 secs (23430 bytes/sec)
[OK]
hostname(config)# reload
Proceed with reload? [confirm] y

```

## Monitoring Interfaces

To monitor interfaces, enter one of the following commands:

| Command                                                                                                                                                                                                            | Purpose                                                                                                                                                        |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>show interface</code>                                                                                                                                                                                        | Displays interface statistics.                                                                                                                                 |
| <code>show interface ip brief</code>                                                                                                                                                                               | Displays interface IP addresses and status.                                                                                                                    |
| <code>show lacp</code> {[ <i>channel_group_number</i> ] { <b>counters</b>   <b>internal</b>   <b>neighbor</b> }   <b>sys-id</b> }                                                                                  | For EtherChannel, displays LACP information such as traffic statistics, system identifier and neighbor details.                                                |
| <code>show port-channel</code> [ <i>channel_group_number</i> ] [ <b>brief</b>   <b>detail</b>   <b>port</b>   <b>protocol</b>   <b>summary</b> ]                                                                   | For EtherChannel, displays EtherChannel information in a detailed and one-line summary form. This command also displays the port and port-channel information. |
| <code>show port-channel</code> <i>channel_group_number</i> <b>load-balance</b> [ <b>hash-result</b> { <b>ip</b>   <b>ipv6</b>   <b>l4port</b>   <b>mac</b>   <b>mixed</b>   <b>vlan-only</b> } <i>parameters</i> ] | For EtherChannel, displays port-channel load-balance information along with the hash result and member interface selected for a given set of parameters.       |

## Configuration Examples for ASA 5510 and Higher Interfaces

This section includes the following topics:

- [Physical Interface Parameters Example, page 6-33](#)
- [Subinterface Parameters Example, page 6-33](#)
- [Multiple Context Mode Example, page 6-34](#)
- [EtherChannel Example, page 6-34](#)

### Physical Interface Parameters Example

The following example configures parameters for the physical interface in single mode:

```

interface gigabitethernet 0/1
 speed 1000
 duplex full
 no shutdown

```

### Subinterface Parameters Example

The following example configures parameters for a subinterface in single mode:

```
interface gigabitethernet 0/1.1
 vlan 101
 no shutdown
```

## Multiple Context Mode Example

The following example configures interface parameters in multiple context mode for the system configuration, and allocates the gigabitethernet 0/1.1 subinterface to contextA:

```
interface gigabitethernet 0/1
 speed 1000
 duplex full
 no shutdown
interface gigabitethernet 0/1.1
 vlan 101
 context contextA
 allocate-interface gigabitethernet 0/1.1
```

## EtherChannel Example

The following example configures three interfaces as part of an EtherChannel. It also sets the system priority to be a higher priority, and GigabitEthernet 0/2 to be a higher priority than the other interfaces in case more than eight interfaces are assigned to the EtherChannel.

```
lacp system-priority 1234
interface GigabitEthernet0/0
 channel-group 1 mode active
interface GigabitEthernet0/1
 channel-group 1 mode active
interface GigabitEthernet0/2
 lacp port-priority 1234
 channel-group 1 mode passive
interface Port-channel1
 lacp max-bundle 4
 port-channel min-bundle 2
 port-channel load-balance dst-ip
```

## Where to Go Next

- For multiple context mode:
  - a. Assign interfaces to contexts and automatically assign unique MAC addresses to context interfaces. See [Chapter 5, “Configuring Multiple Context Mode.”](#)
  - b. Complete the interface configuration according to [Chapter 8, “Completing Interface Configuration \(Routed Mode\),”](#) or [Chapter 9, “Completing Interface Configuration \(Transparent Mode\).”](#)
- For single context mode, complete the interface configuration according to [Chapter 8, “Completing Interface Configuration \(Routed Mode\),”](#) or [Chapter 9, “Completing Interface Configuration \(Transparent Mode\).”](#)

# Feature History for ASA 5510 and Higher Interfaces

Table 6-3 lists the release history for this feature.

**Table 6-3** Feature History for Interfaces

| Feature Name                                                    | Releases | Feature Information                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|-----------------------------------------------------------------|----------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Increased VLANs                                                 | 7.0(5)   | Increased the following limits: <ul style="list-style-type: none"> <li>• ASA5510 Base license VLANs from 0 to 10.</li> <li>• ASA5510 Security Plus license VLANs from 10 to 25.</li> <li>• ASA5520 VLANs from 25 to 100.</li> <li>• ASA5540 VLANs from 100 to 200.</li> </ul>                                                                                                                                                                                                                                                                                  |
| Increased interfaces for the Base license on the ASA 5510       | 7.2(2)   | For the Base license on the ASA 5510, the maximum number of interfaces was increased from 3 plus a management interface to unlimited interfaces.                                                                                                                                                                                                                                                                                                                                                                                                               |
| Increased VLANs                                                 | 7.2(2)   | VLAN limits were increased for the ASA 5510 (from 10 to 50 for the Base license, and from 25 to 100 for the Security Plus license), the ASA 5520 (from 100 to 150), the ASA 5550 (from 200 to 250).                                                                                                                                                                                                                                                                                                                                                            |
| Gigabit Ethernet Support for the ASA 5510 Security Plus License | 7.2(3)   | The ASA 5510 ASA now supports GE (Gigabit Ethernet) for port 0 and 1 with the Security Plus license. If you upgrade the license from Base to Security Plus, the capacity of the external Ethernet0/0 and Ethernet0/1 ports increases from the original FE (Fast Ethernet) (100 Mbps) to GE (1000 Mbps). The interface names will remain Ethernet 0/0 and Ethernet 0/1. Use the <b>speed</b> command to change the speed on the interface and use the <b>show interface</b> command to see what speed is currently configured for each interface.               |
| Jumbo packet support for the ASA 5580                           | 8.1(1)   | The Cisco ASA 5580 supports jumbo frames. A jumbo frame is an Ethernet packet larger than the standard maximum of 1518 bytes (including Layer 2 header and FCS), up to 9216 bytes. You can enable support for jumbo frames for all interfaces by increasing the amount of memory to process Ethernet frames. Assigning more memory for jumbo frames might limit the maximum use of other features, such as access lists.<br><br>This feature is also supported on the ASA 5585-X.<br><br>We introduced the following command: <b>jumbo-frame reservation</b> . |
| Increased VLANs for the ASA 5580                                | 8.1(2)   | The number of VLANs supported on the ASA 5580 are increased from 100 to 250.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |

Table 6-3 Feature History for Interfaces (continued)

| Feature Name                                                                             | Releases      | Feature Information                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|------------------------------------------------------------------------------------------|---------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Support for Pause Frames for Flow Control on the ASA 5580 10-Gigabit Ethernet Interfaces | 8.2(2)        | You can now enable pause (XOFF) frames for flow control. This feature is also supported on the ASA 5585-X. We introduced the following command: <b>flowcontrol</b> .                                                                                                                                                                                                                                                                                                           |
| Support for Pause Frames for Flow Control on 1-Gigabit Ethernet Interfaces               | 8.2(5)/8.4(2) | You can now enable pause (XOFF) frames for flow control for 1-Gigabit interfaces on all models. We modified the following command: <b>flowcontrol</b> .                                                                                                                                                                                                                                                                                                                        |
| EtherChannel support                                                                     | 8.4(1)        | You can configure up to 48 802.3ad EtherChannels of eight active interfaces each. We introduced the following commands: <b>channel-group</b> , <b>lACP port-priority</b> , <b>interface port-channel</b> , <b>lACP max-bundle</b> , <b>port-channel min-bundle</b> , <b>port-channel load-balance</b> , <b>lACP system-priority</b> , <b>clear lACP counters</b> , <b>show lACP</b> , <b>show port-channel</b> .<br><b>Note</b> EtherChannel is not supported on the ASA 5505. |



## CHAPTER 7

# Starting Interface Configuration (ASA 5505)

---

This chapter includes tasks for starting your interface configuration for the ASA 5505, including creating VLAN interfaces and assigning them to switch ports.

For ASA 5510 and higher configuration, see the [“Feature History for ASA 5505 Interfaces”](#) section on page 7-13.

This chapter includes the following sections:

- [Information About ASA 5505 Interfaces](#), page 7-1
- [Licensing Requirements for ASA 5505 Interfaces](#), page 7-4
- [Guidelines and Limitations](#), page 7-5
- [Default Settings](#), page 7-5
- [Starting ASA 5505 Interface Configuration](#), page 7-6
- [Monitoring Interfaces](#), page 7-11
- [Configuration Examples for ASA 5505 Interfaces](#), page 7-11
- [Where to Go Next](#), page 7-13
- [Feature History for ASA 5505 Interfaces](#), page 7-13

## Information About ASA 5505 Interfaces

This section describes the ports and interfaces of the ASA 5505 and includes the following topics:

- [Understanding ASA 5505 Ports and Interfaces](#), page 7-2
- [Maximum Active VLAN Interfaces for Your License](#), page 7-2
- [VLAN MAC Addresses](#), page 7-4
- [Power over Ethernet](#), page 7-4
- [Monitoring Traffic Using SPAN](#), page 7-4
- [Auto-MDI/MDIX Feature](#), page 7-4

## Understanding ASA 5505 Ports and Interfaces

The ASA 5505 supports a built-in switch. There are two kinds of ports and interfaces that you need to configure:

- Physical switch ports—The ASA has 8 Fast Ethernet switch ports that forward traffic at Layer 2, using the switching function in hardware. Two of these ports are PoE ports. See the “[Power over Ethernet](#)” section on page 7-4 for more information. You can connect these interfaces directly to user equipment such as PCs, IP phones, or a DSL modem. Or you can connect to another switch.
- Logical VLAN interfaces—In routed mode, these interfaces forward traffic between VLAN networks at Layer 3, using the configured security policy to apply firewall and VPN services. In transparent mode, these interfaces forward traffic between the VLANs on the same network at Layer 2, using the configured security policy to apply firewall services. See the “[Maximum Active VLAN Interfaces for Your License](#)” section for more information about the maximum VLAN interfaces. VLAN interfaces let you divide your equipment into separate VLANs, for example, home, business, and Internet VLANs.

To segregate the switch ports into separate VLANs, you assign each switch port to a VLAN interface. Switch ports on the same VLAN can communicate with each other using hardware switching. But when a switch port on VLAN 1 wants to communicate with a switch port on VLAN 2, then the ASA applies the security policy to the traffic and routes or bridges between the two VLANs.

## Maximum Active VLAN Interfaces for Your License

In routed mode, you can configure the following VLANs depending on your license:

- Base license—3 active VLANs. The third VLAN can only be configured to initiate traffic to one other VLAN. See [Figure 7-1](#) for more information.
- Security Plus license—20 active VLANs.

In transparent firewall mode, you can configure the following VLANs depending on your license:

- Base license—2 active VLANs in 1 bridge group.
- Security Plus license—3 active VLANs: 2 active VLANs in 1 bridge group, and 1 active VLAN for the failover link.

**Note**


---

An *active VLAN* is a VLAN with a **nameif** command configured.

---

With the Base license in routed mode, the third VLAN can only be configured to initiate traffic to one other VLAN. See [Figure 7-1](#) for an example network where the Home VLAN can communicate with the Internet, but cannot initiate contact with Business.

**Figure 7-1** ASA 5505 with Base License

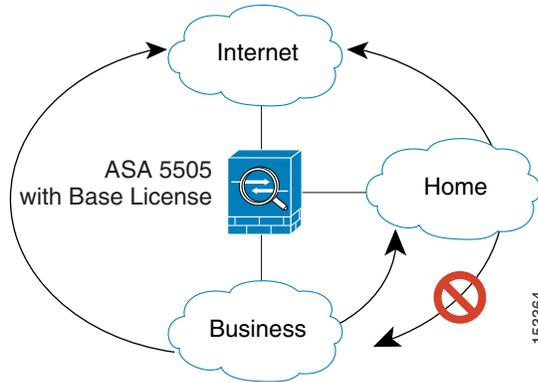

With the Security Plus license, you can configure 20 VLAN interfaces in routed mode, including a VLAN interface for failover and a VLAN interface as a backup link to your ISP. You can configure the backup interface to not pass through traffic unless the route through the primary interface fails. You can configure trunk ports to accommodate multiple VLANs per port.




**Note**

The ASA 5505 supports Active/Standby failover, but not Stateful Failover.

See [Figure 7-2](#) for an example network.

**Figure 7-2** ASA 5505 with Security Plus License

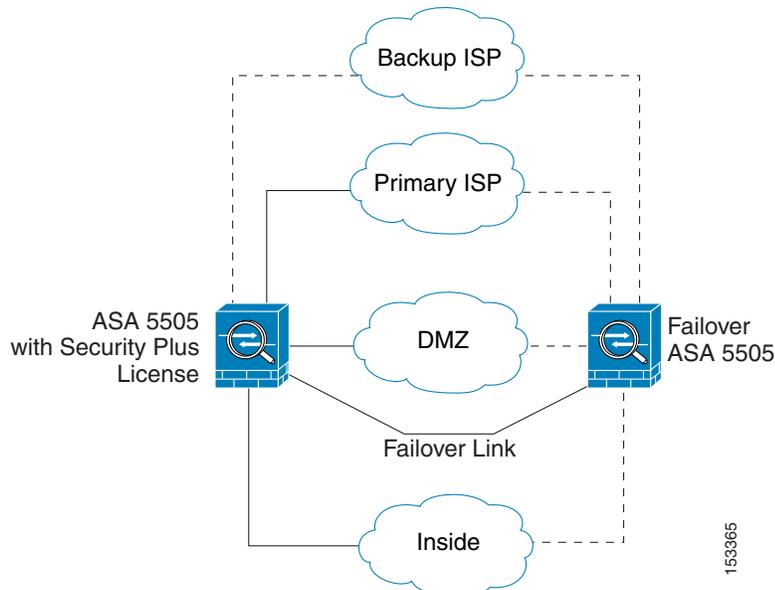

## VLAN MAC Addresses

- Routed firewall mode—All VLAN interfaces share a MAC address. Ensure that any connected switches can support this scenario. If the connected switches require unique MAC addresses, you can manually assign MAC addresses. See the [“Configuring the MAC Address and MTU” section on page 8-9](#).
- Transparent firewall mode—Each VLAN has a unique MAC address. You can override the generated MAC addresses if desired by manually assigning MAC addresses. See the [“Configuring the MAC Address and MTU” section on page 9-12](#).

## Power over Ethernet

Ethernet 0/6 and Ethernet 0/7 support PoE for devices such as IP phones or wireless access points. If you install a non-PoE device or do not connect to these switch ports, the ASA does not supply power to the switch ports.

If you shut down the switch port using the **shutdown** command, you disable power to the device. Power is restored when you enable the port using the **no shutdown** command. See the [“Configuring and Enabling Switch Ports as Access Ports” section on page 7-7](#) for more information about shutting down a switch port.

To view the status of PoE switch ports, including the type of device connected (Cisco or IEEE 802.3af), use the **show power inline** command.

## Monitoring Traffic Using SPAN

If you want to monitor traffic that enters or exits one or more switch ports, you can enable SPAN, also known as switch port monitoring. The port for which you enable SPAN (called the destination port) receives a copy of every packet transmitted or received on a specified source port. The SPAN feature lets you attach a sniffer to the destination port so you can monitor all traffic; without SPAN, you would have to attach a sniffer to every port you want to monitor. You can only enable SPAN for one destination port.

See the **switchport monitor** command in the command reference for more information.

## Auto-MDI/MDIX Feature

All ASA 5505 interfaces include the Auto-MDI/MDIX feature. Auto-MDI/MDIX eliminates the need for crossover cabling by performing an internal crossover when a straight cable is detected during the auto-negotiation phase. You cannot disable Auto-MDI/MDIX.

## Licensing Requirements for ASA 5505 Interfaces

| Model    | License Requirement                                                                                                                                                                                                                                                                                          |
|----------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ASA 5505 | VLANs:<br>Base License: 3 (2 regular zones and 1 restricted zone that can only communicate with 1 other zone)<br>Security Plus License: 20<br>VLAN Trunks:<br>Base License: None.<br>Security Plus License: 8.<br>Interfaces of all types <sup>1</sup> :<br>Base License: 52.<br>Security Plus License: 120. |

1. The maximum number of combined interfaces; for example, VLANs, physical, redundant, and bridge group interfaces.

## Guidelines and Limitations

This section includes the guidelines and limitations for this feature.

### Context Mode Guidelines

The ASA 5505 does not support multiple context mode.

### Firewall Mode Guidelines

- In transparent mode, you can configure up to eight bridge groups. Note that you must use at least one bridge group; data interfaces must belong to a bridge group.
- Each bridge group can include up to four VLAN interfaces, up to the license limit.

## Default Settings

This section lists default settings for interfaces if you do not have a factory default configuration. For information about the factory default configurations, see the [“Factory Default Configurations” section on page 2-10](#).

### Default State of Interfaces

Interfaces have the following default states:

- Switch ports—Disabled.
- VLANs—Enabled. However, for traffic to pass through the VLAN, the switch port must also be enabled.

### Default Speed and Duplex

By default, the speed and duplex are set to auto-negotiate.

# Starting ASA 5505 Interface Configuration

This section includes the following topics:

- [Task Flow for Starting Interface Configuration, page 7-6](#)
- [Configuring VLAN Interfaces, page 7-6](#)
- [Configuring and Enabling Switch Ports as Access Ports, page 7-7](#)
- [Configuring and Enabling Switch Ports as Trunk Ports, page 7-9](#)

## Task Flow for Starting Interface Configuration

To configure interfaces in single mode, perform the following steps:

- 
- |               |                                                                                                                                                                                                                         |
|---------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Step 1</b> | Configure VLAN interfaces. See the <a href="#">“Configuring VLAN Interfaces”</a> section on page 7-6.                                                                                                                   |
| <b>Step 2</b> | Configure and enable switch ports as access ports. See the <a href="#">“Configuring and Enabling Switch Ports as Access Ports”</a> section on page 7-7.                                                                 |
| <b>Step 3</b> | (Optional for Security Plus licenses) Configure and enable switch ports as trunk ports. See the <a href="#">“Configuring and Enabling Switch Ports as Trunk Ports”</a> section on page 7-9.                             |
| <b>Step 4</b> | Complete the interface configuration according to <a href="#">Chapter 8, “Completing Interface Configuration (Routed Mode),”</a> or <a href="#">Chapter 9, “Completing Interface Configuration (Transparent Mode).”</a> |
- 

## Configuring VLAN Interfaces

This section describes how to configure VLAN interfaces. For more information about ASA 5505 interfaces, see the [“Information About ASA 5505 Interfaces”](#) section on page 7-1.

### Guidelines

We suggest that you finalize your interface configuration before you enable Easy VPN.

## Detailed Steps

|        | Command                                                                                                                                                                               | Purpose                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|--------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Step 1 | <p><code>interface vlan number</code></p> <p><b>Example:</b><br/> <pre>hostname(config)# interface vlan 100</pre></p>                                                                 | <p>Adds a VLAN interface, where the <i>number</i> is between 1 and 4090.</p> <p>To remove this VLAN interface and all associated configuration, enter the <b>no interface vlan</b> command. Because this interface also includes the interface name configuration, and the name is used in other commands, those commands are also removed.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| Step 2 | <p>(Optional for the Base license)</p> <p><code>no forward interface vlan number</code></p> <p><b>Example:</b><br/> <pre>hostname(config-if)# no forward interface vlan 101</pre></p> | <p>Allows this interface to be the third VLAN by limiting it from initiating contact to one other VLAN.</p> <p>The <i>number</i> specifies the VLAN ID to which this VLAN interface cannot initiate traffic.</p> <p>With the Base license, you can only configure a third VLAN if you use this command to limit it.</p> <p>For example, you have one VLAN assigned to the outside for Internet access, one VLAN assigned to an inside business network, and a third VLAN assigned to your home network. The home network does not need to access the business network, so you can use the <b>no forward interface</b> command on the home VLAN; the business network can access the home network, but the home network cannot access the business network.</p> <p>If you already have two VLAN interfaces configured with a <b>nameif</b> command, be sure to enter the <b>no forward interface</b> command before the <b>nameif</b> command on the third interface; the ASA does not allow three fully functioning VLAN interfaces with the Base license on the ASA 5505.</p> <p><b>Note</b> If you upgrade to the Security Plus license, you can remove this command and achieve full functionality for this interface. If you leave this command in place, this interface continues to be limited even after upgrading.</p> |

## What to Do Next

Configure the switch ports. See the [“Configuring and Enabling Switch Ports as Access Ports”](#) section on page 7-7 and the [“Configuring and Enabling Switch Ports as Trunk Ports”](#) section on page 7-9.

## Configuring and Enabling Switch Ports as Access Ports

By default (with no configuration), all switch ports are shut down, and assigned to VLAN 1. To assign a switch port to a single VLAN, configure it as an access port. To create a trunk port to carry multiple VLANs, see the [“Configuring and Enabling Switch Ports as Trunk Ports”](#) section on page 7-9. If you have a factory default configuration, see the [“ASA 5505 Default Configuration”](#) section on page 2-11 to check if you want to change the default interface settings according to this procedure.

For more information about ASA 5505 interfaces, see the [“Information About ASA 5505 Interfaces”](#) section on page 7-1.

**Caution**

The ASA 5505 does not support Spanning Tree Protocol for loop detection in the network. Therefore you must ensure that any connection with the ASA does not end up in a network loop.

**Detailed Steps**

|               | <b>Command</b>                                                                                                         | <b>Purpose</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|---------------|------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Step 1</b> | <pre>interface ethernet0/port</pre> <p><b>Example:</b><br/>hostname(config)# interface ethernet0/1</p>                 | Specifies the switch port you want to configure, where <i>port</i> is 0 through 7.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Step 2</b> | <pre>switchport access vlan number</pre> <p><b>Example:</b><br/>hostname(config-if)# switchport access vlan 100</p>    | <p>Assigns this switch port to a VLAN, where <i>number</i> is the VLAN ID, between 1 and 4090. See the <a href="#">“Configuring VLAN Interfaces” section on page 7-6</a> to configure the VLAN interface that you want to assign to this switch port. To view configured VLANs, enter the <b>show interface</b> command.</p> <p><b>Note</b> You might assign multiple switch ports to the primary or backup VLANs if the Internet access device includes Layer 2 redundancy.</p>                                                                                                                                                                                                                                                                                     |
| <b>Step 3</b> | <p>(Optional)</p> <pre>switchport protected</pre> <p><b>Example:</b><br/>hostname(config-if)# switchport protected</p> | <p>Prevents the switch port from communicating with other protected switch ports on the same VLAN.</p> <p>You might want to prevent switch ports from communicating with each other if the devices on those switch ports are primarily accessed from other VLANs, you do not need to allow intra-VLAN access, and you want to isolate the devices from each other in case of infection or other security breach. For example, if you have a DMZ that hosts three web servers, you can isolate the web servers from each other if you apply the <b>switchport protected</b> command to each switch port. The inside and outside networks can both communicate with all three web servers, and vice versa, but the web servers cannot communicate with each other.</p> |
| <b>Step 4</b> | <p>(Optional)</p> <pre>speed {auto   10   100}</pre> <p><b>Example:</b><br/>hostname(config-if)# speed 100</p>         | Sets the speed. The <b>auto</b> setting is the default. If you set the speed to anything other than <b>auto</b> on PoE ports Ethernet 0/6 or 0/7, then Cisco IP phones and Cisco wireless access points that do not support IEEE 802.3af will not be detected and supplied with power.                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Step 5</b> | <p>(Optional)</p> <pre>duplex {auto   full   half}</pre> <p><b>Example:</b><br/>hostname(config-if)# duplex full</p>   | Sets the duplex. The <b>auto</b> setting is the default. If you set the duplex to anything other than <b>auto</b> on PoE ports Ethernet 0/6 or 0/7, then Cisco IP phones and Cisco wireless access points that do not support IEEE 802.3af will not be detected and supplied with power.                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Step 6</b> | <pre>no shutdown</pre> <p><b>Example:</b><br/>hostname(config-if)# no shutdown</p>                                     | Enables the switch port. To disable the switch port, enter the <b>shutdown</b> command.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |

## What to Do Next

- If you want to configure a switch port as a trunk port, see the “[Configuring and Enabling Switch Ports as Trunk Ports](#)” section on page 7-9.
- To complete the interface configuration, see [Chapter 8, “Completing Interface Configuration \(Routed Mode\)”](#) or [Chapter 9, “Completing Interface Configuration \(Transparent Mode\)”](#).

## Configuring and Enabling Switch Ports as Trunk Ports

This procedure describes how to create a trunk port that can carry multiple VLANs using 802.1Q tagging. Trunk mode is available only with the Security Plus license.

To create an access port, where an interface is assigned to only one VLAN, see the “[Configuring and Enabling Switch Ports as Access Ports](#)” section on page 7-7.

### Guidelines

This switch port cannot pass traffic until you assign at least one VLAN to it, native or non-native.

### Detailed Steps

|        | Command                                                                                                                                                                                                                         | Purpose                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|--------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Step 1 | <code>interface ethernet0/port</code><br><br><b>Example:</b><br><code>hostname(config)# interface ethernet0/1</code>                                                                                                            | Specifies the switch port you want to configure, where <i>port</i> is 0 through 7.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| Step 2 | To assign VLANs to this trunk, do one or more of the following:<br><br><code>switchport trunk allowed vlan vlan_range</code><br><br><b>Example:</b><br><code>hostname(config)# switchport trunk allowed<br/>vlan 100-200</code> | Identifies one or more VLANs that you can assign to the trunk port, where the <i>vlan_range</i> (with VLANs between 1 and 4090) can be identified in one of the following ways: <ul style="list-style-type: none"> <li>• A single number (n)</li> <li>• A range (n-x)</li> <li>• Separate numbers and ranges by commas, for example:<br/>5,7-10,13,45-100</li> </ul> <p>You can enter spaces instead of commas, but the command is saved to the configuration with commas.</p> <p>You can include the native VLAN in this command, but it is not required; the native VLAN is passed whether it is included in this command or not.</p> |

|        | Command                                                                                                                                             | Purpose                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|--------|-----------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|        | <pre>switchport trunk native vlan <i>vlan_id</i></pre> <p><b>Example:</b><br/> <pre>hostname(config-if)# switchport trunk native vlan 100</pre></p> | <p>Assigns a native VLAN to the trunk, where the <i>vlan_id</i> is a single VLAN ID between 1 and 4090.</p> <p>Packets on the native VLAN are not modified when sent over the trunk. For example, if a port has VLANs 2, 3 and 4 assigned to it, and VLAN 2 is the native VLAN, then packets on VLAN 2 that egress the port are not modified with an 802.1Q header. Frames which ingress (enter) this port and have no 802.1Q header are put into VLAN 2.</p> <p>Each port can only have one native VLAN, but every port can have either the same or a different native VLAN.</p>                                                                                                                                                                                    |
| Step 3 | <pre>switchport mode trunk</pre> <p><b>Example:</b><br/> <pre>hostname(config-if)# switchport mode trunk</pre></p>                                  | <p>Makes this switch port a trunk port. To restore this port to access mode, enter the <b>switchport mode access</b> command.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| Step 4 | <p>(Optional)</p> <pre>switchport protected</pre> <p><b>Example:</b><br/> <pre>hostname(config-if)# switchport protected</pre></p>                  | <p>Prevents the switch port from communicating with other protected switch ports on the same VLAN.</p> <p>You might want to prevent switch ports from communicating with each other if the devices on those switch ports are primarily accessed from other VLANs, you do not need to allow intra-VLAN access, and you want to isolate the devices from each other in case of infection or other security breach. For example, if you have a DMZ that hosts three web servers, you can isolate the web servers from each other if you apply the <b>switchport protected</b> command to each switch port. The inside and outside networks can both communicate with all three web servers, and vice versa, but the web servers cannot communicate with each other.</p> |
| Step 5 | <p>(Optional)</p> <pre>speed {<b>auto</b>   10   100}</pre> <p><b>Example:</b><br/> <pre>hostname(config-if)# speed 100</pre></p>                   | <p>Sets the speed. The <b>auto</b> setting is the default. If you set the speed to anything other than <b>auto</b> on PoE ports Ethernet 0/6 or 0/7, then Cisco IP phones and Cisco wireless access points that do not support IEEE 802.3af will not be detected and supplied with power.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| Step 6 | <p>(Optional)</p> <pre>duplex {<b>auto</b>   full   half}</pre> <p><b>Example:</b><br/> <pre>hostname(config-if)# duplex full</pre></p>             | <p>Sets the duplex. The <b>auto</b> setting is the default. If you set the duplex to anything other than <b>auto</b> on PoE ports Ethernet 0/6 or 0/7, then Cisco IP phones and Cisco wireless access points that do not support IEEE 802.3af will not be detected and supplied with power.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| Step 7 | <pre>no shutdown</pre> <p><b>Example:</b><br/> <pre>hostname(config-if)# no shutdown</pre></p>                                                      | <p>Enables the switch port. To disable the switch port, enter the <b>shutdown</b> command.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |

# Monitoring Interfaces

To monitor interfaces, enter one of the following commands:

| Command                              | Purpose                                     |
|--------------------------------------|---------------------------------------------|
| <code>show interface</code>          | Displays interface statistics.              |
| <code>show interface ip brief</code> | Displays interface IP addresses and status. |

## Configuration Examples for ASA 5505 Interfaces

This section includes the following topics:

- [Access Port Example, page 7-11](#)
- [Trunk Port Example, page 7-12](#)

### Access Port Example

The following example configures five VLAN interfaces, including the failover interface which is configured using the **failover lan** command:

```

hostname(config)# interface vlan 100
hostname(config-if)# nameif outside
hostname(config-if)# security-level 0
hostname(config-if)# ip address 10.1.1.1 255.255.255.0
hostname(config-if)# no shutdown

hostname(config-if)# interface vlan 200
hostname(config-if)# nameif inside
hostname(config-if)# security-level 100
hostname(config-if)# ip address 10.2.1.1 255.255.255.0
hostname(config-if)# no shutdown

hostname(config-if)# interface vlan 300
hostname(config-if)# nameif dmz
hostname(config-if)# security-level 50
hostname(config-if)# ip address 10.3.1.1 255.255.255.0
hostname(config-if)# no shutdown

hostname(config-if)# interface vlan 400
hostname(config-if)# nameif backup-isp
hostname(config-if)# security-level 50
hostname(config-if)# ip address 10.1.2.1 255.255.255.0
hostname(config-if)# no shutdown

hostname(config-if)# failover lan faillink vlan500
hostname(config)# failover interface ip faillink 10.4.1.1 255.255.255.0 standby 10.4.1.2
255.255.255.0

hostname(config)# interface ethernet 0/0
hostname(config-if)# switchport access vlan 100
hostname(config-if)# no shutdown

hostname(config-if)# interface ethernet 0/1
hostname(config-if)# switchport access vlan 200

```

```

hostname(config-if)# no shutdown

hostname(config-if)# interface ethernet 0/2
hostname(config-if)# switchport access vlan 300
hostname(config-if)# no shutdown

hostname(config-if)# interface ethernet 0/3
hostname(config-if)# switchport access vlan 400
hostname(config-if)# no shutdown

hostname(config-if)# interface ethernet 0/4
hostname(config-if)# switchport access vlan 500
hostname(config-if)# no shutdown

```

## Trunk Port Example

The following example configures seven VLAN interfaces, including the failover interface which is configured using the **failover lan** command. VLANs 200, 201, and 202 are trunked on Ethernet 0/1.

```

hostname(config)# interface vlan 100
hostname(config-if)# nameif outside
hostname(config-if)# security-level 0
hostname(config-if)# ip address 10.1.1.1 255.255.255.0
hostname(config-if)# no shutdown

hostname(config-if)# interface vlan 200
hostname(config-if)# nameif inside
hostname(config-if)# security-level 100
hostname(config-if)# ip address 10.2.1.1 255.255.255.0
hostname(config-if)# no shutdown

hostname(config-if)# interface vlan 201
hostname(config-if)# nameif dept1
hostname(config-if)# security-level 90
hostname(config-if)# ip address 10.2.2.1 255.255.255.0
hostname(config-if)# no shutdown

hostname(config-if)# interface vlan 202
hostname(config-if)# nameif dept2
hostname(config-if)# security-level 90
hostname(config-if)# ip address 10.2.3.1 255.255.255.0
hostname(config-if)# no shutdown

hostname(config-if)# interface vlan 300
hostname(config-if)# nameif dmz
hostname(config-if)# security-level 50
hostname(config-if)# ip address 10.3.1.1 255.255.255.0
hostname(config-if)# no shutdown

hostname(config-if)# interface vlan 400
hostname(config-if)# nameif backup-isp
hostname(config-if)# security-level 50
hostname(config-if)# ip address 10.1.2.1 255.255.255.0
hostname(config-if)# no shutdown

hostname(config-if)# failover lan faillink vlan500
hostname(config)# failover interface ip faillink 10.4.1.1 255.255.255.0 standby 10.4.1.2
255.255.255.0

hostname(config)# interface ethernet 0/0
hostname(config-if)# switchport access vlan 100

```

```

hostname(config-if)# no shutdown

hostname(config-if)# interface ethernet 0/1
hostname(config-if)# switchport mode trunk
hostname(config-if)# switchport trunk allowed vlan 200-202
hostname(config-if)# switchport trunk native vlan 5
hostname(config-if)# no shutdown

hostname(config-if)# interface ethernet 0/2
hostname(config-if)# switchport access vlan 300
hostname(config-if)# no shutdown

hostname(config-if)# interface ethernet 0/3
hostname(config-if)# switchport access vlan 400
hostname(config-if)# no shutdown

hostname(config-if)# interface ethernet 0/4
hostname(config-if)# switchport access vlan 500
hostname(config-if)# no shutdown

```

## Where to Go Next

Complete the interface configuration according to [Chapter 8, “Completing Interface Configuration \(Routed Mode\)”](#) or [Chapter 9, “Completing Interface Configuration \(Transparent Mode\)”](#).

## Feature History for ASA 5505 Interfaces

[Table 7-1](#) lists the release history for this feature.

**Table 7-1** Feature History for Interfaces

| Feature Name                         | Releases      | Feature Information                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|--------------------------------------|---------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Increased VLANs                      | 7.2(2)        | The maximum number of VLANs for the Security Plus license on the ASA 5505 was increased from 5 (3 fully functional; 1 failover; one restricted to a backup interface) to 20 fully functional interfaces. In addition, the number of trunk ports was increased from 1 to 8. Now there are 20 fully functional interfaces, you do not need to use the backup interface command to cripple a backup ISP interface; you can use a fully-functional interface for it. The backup interface command is still useful for an Easy VPN configuration. |
| Native VLAN support for the ASA 5505 | 7.2(4)/8.0(4) | You can now include the native VLAN in an ASA 5505 trunk port.<br><br>We introduced the following command: <b>switchport trunk native vlan</b> .                                                                                                                                                                                                                                                                                                                                                                                             |





# CHAPTER 8

## Completing Interface Configuration (Routed Mode)

---

This chapter includes tasks to complete the interface configuration for all models in routed firewall mode. This chapter includes the following sections:

- [Information About Completing Interface Configuration in Routed Mode, page 8-1](#)
- [Licensing Requirements for Completing Interface Configuration in Routed Mode, page 8-2](#)
- [Guidelines and Limitations, page 8-5](#)
- [Default Settings, page 8-5](#)
- [Completing Interface Configuration in Routed Mode, page 8-5](#)
- [Monitoring Interfaces, page 8-16](#)
- [Configuration Examples for Interfaces in Routed Mode, page 8-16](#)
- [Feature History for Interfaces in Routed Mode, page 8-17](#)



### Note

For multiple context mode, complete the tasks in this section in the context execution space. Enter the **changeto context *name*** command to change to the context you want to configure.

---

## Information About Completing Interface Configuration in Routed Mode

This section includes the following topics:

- [Security Levels, page 8-1](#)
- [Dual IP Stack \(IPv4 and IPv6\), page 8-2](#)

### Security Levels

Each interface must have a security level from 0 (lowest) to 100 (highest). For example, you should assign your most secure network, such as the inside host network, to level 100. While the outside network connected to the Internet can be level 0. Other networks, such as DMZs can be in between. You can assign interfaces to the same security level. See the [“Allowing Same Security Level Communication” section on page 8-15](#) for more information.

The level controls the following behavior:

- Network access—By default, there is an implicit permit from a higher security interface to a lower security interface (outbound). Hosts on the higher security interface can access any host on a lower security interface. You can limit access by applying an access list to the interface.

If you enable communication for same security interfaces (see the [“Allowing Same Security Level Communication” section on page 8-15](#)), there is an implicit permit for interfaces to access other interfaces on the same security level or lower.

- Inspection engines—Some application inspection engines are dependent on the security level. For same security interfaces, inspection engines apply to traffic in either direction.
  - NetBIOS inspection engine—Applied only for outbound connections.
  - SQL\*Net inspection engine—If a control connection for the SQL\*Net (formerly OraServ) port exists between a pair of hosts, then only an inbound data connection is permitted through the ASA.
- Filtering—HTTP(S) and FTP filtering applies only for outbound connections (from a higher level to a lower level).

If you enable communication for same security interfaces, you can filter traffic in either direction.

- **established** command—This command allows return connections from a lower security host to a higher security host if there is already an established connection from the higher level host to the lower level host.

If you enable communication for same security interfaces, you can configure **established** commands for both directions.

## Dual IP Stack (IPv4 and IPv6)

The ASA supports the configuration of both IPv6 and IPv4 on an interface. You do not need to enter any special commands to do so; simply enter the IPv4 configuration commands and IPv6 configuration commands as you normally would. Make sure you configure a default route for both IPv4 and IPv6.

# Licensing Requirements for Completing Interface Configuration in Routed Mode

| Model    | License Requirement                                                                                                                                                                                                                                                                                                                               |
|----------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ASA 5505 | <p>VLANs:</p> <p>Base License: 3 (2 regular zones and 1 restricted zone that can only communicate with 1 other zone)</p> <p>Security Plus License: 20</p> <p>VLAN Trunks:</p> <p>Base License: None.</p> <p>Security Plus License: 8.</p> <p>Interfaces of all types<sup>1</sup>:</p> <p>Base License: 52.</p> <p>Security Plus License: 120.</p> |

1. The maximum number of combined interfaces; for example, VLANs, physical, redundant, and bridge group interfaces.

| Model    | License Requirement                                                                                                                                                                                                                                                                                                                                    |
|----------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ASA 5510 | <p>VLANs:</p> <p>Base License: 50</p> <p>Security Plus License: 100</p> <p>Interface Speed:</p> <p>Base License—All interfaces Fast Ethernet.</p> <p>Security Plus License—Ethernet 0/0 and 0/1: Gigabit Ethernet; all others Fast Ethernet.</p> <p>Interfaces of all types<sup>1</sup>:</p> <p>Base License: 52</p> <p>Security Plus License: 120</p> |
| ASA 5520 | <p>VLANs:</p> <p>Base License: 150.</p> <p>Interfaces of all types<sup>1</sup>:</p> <p>Base License: 640</p>                                                                                                                                                                                                                                           |
| ASA 5540 | <p>VLANs:</p> <p>Base License: 200</p> <p>Interfaces of all types<sup>1</sup>:</p> <p>Base License: 840</p>                                                                                                                                                                                                                                            |
| ASA 5550 | <p>VLANs:</p> <p>Base License: 400</p> <p>Interfaces of all types<sup>1</sup>:</p> <p>Base License: 1640</p>                                                                                                                                                                                                                                           |

| Model      | License Requirement                                                                                                                                                                                                                                                                                                         |
|------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ASA 5580   | VLANs:<br>Base License: 1024<br>Interfaces of all types <sup>1</sup> :<br>Base License: 4176                                                                                                                                                                                                                                |
| ASA 5512-X | VLANs:<br>Base License: 50<br>Interfaces of all types <sup>1</sup> :<br>Base License: 328                                                                                                                                                                                                                                   |
| ASA 5515-X | VLANs:<br>Base License: 100<br>Interfaces of all types <sup>1</sup> :<br>Base License: 528                                                                                                                                                                                                                                  |
| ASA 5525-X | VLANs:<br>Base License: 200<br>Interfaces of all types <sup>1</sup> :<br>Base License: 928                                                                                                                                                                                                                                  |
| ASA 5545-X | VLANs:<br>Base License: 300<br>Interfaces of all types <sup>1</sup> :<br>Base License: 1328                                                                                                                                                                                                                                 |
| ASA 5555-X | VLANs:<br>Base License: 500<br>Interfaces of all types <sup>1</sup> :<br>Base License: 2128                                                                                                                                                                                                                                 |
| ASA 5585-X | VLANs:<br>Base License: 1024<br>Interface Speed for SSP-10 and SSP-20:<br>Base License—1-Gigabit Ethernet for fiber interfaces<br>10 GE I/O License—10-Gigabit Ethernet for fiber interfaces<br>(SSP-40 and SSP-60 support 10-Gigabit Ethernet by default.)<br>Interfaces of all types <sup>1</sup> :<br>Base License: 4176 |

1. The maximum number of combined interfaces; for example, VLANs, physical, redundant, bridge group, and EtherChannel interfaces.

# Guidelines and Limitations

This section includes the guidelines and limitations for this feature.

## Context Mode Guidelines

- For the ASA 5510 and higher in multiple context mode, configure the physical interfaces in the system execution space according to [Chapter 6, “Starting Interface Configuration \(ASA 5510 and Higher\)”](#). Then, configure the logical interface parameters in the context execution space according to this chapter.

The ASA 5505 does not support multiple context mode.

- In multiple context mode, you can only configure context interfaces that you already assigned to the context in the system configuration according to the [“Configuring Multiple Contexts”](#) section on [page 5-14](#).
- PPPoE is not supported in multiple context mode.

## Firewall Mode Guidelines

Supported in routed firewall mode. For transparent mode, see [Chapter 9, “Completing Interface Configuration \(Transparent Mode\)”](#).

## Failover Guidelines

Do not finish configuring failover interfaces with the procedures in this chapter. See the [“Configuring Active/Standby Failover”](#) section on [page 62-7](#) or the [“Configuring Active/Active Failover”](#) section on [page 63-8](#) to configure the failover and state links. In multiple context mode, failover interfaces are configured in the system configuration.

## IPv6 Guidelines

Supports IPv6.

# Default Settings

This section lists default settings for interfaces if you do not have a factory default configuration. For information about the factory default configurations, see the [“Factory Default Configurations”](#) section on [page 2-10](#).

## Default Security Level

The default security level is 0. If you name an interface “inside” and you do not set the security level explicitly, then the ASA sets the security level to 100.



### Note

If you change the security level of an interface, and you do not want to wait for existing connections to time out before the new security information is used, you can clear the connections using the **clear local-host** command.

# Completing Interface Configuration in Routed Mode

This section includes the following topics:

- [Task Flow for Completing Interface Configuration, page 8-6](#)
- [Configuring General Interface Parameters, page 8-6](#)
- [Configuring the MAC Address and MTU, page 8-9](#)
- [Configuring IPv6 Addressing, page 8-11](#)
- [Allowing Same Security Level Communication, page 8-15](#)

## Task Flow for Completing Interface Configuration

- 
- Step 1** Set up your interfaces depending on your model:
- ASA 5510 and higher—[Chapter 6, “Starting Interface Configuration \(ASA 5510 and Higher\).”](#)
  - ASA 5505—[Chapter 7, “Starting Interface Configuration \(ASA 5505\).”](#)
- Step 2** (Multiple context mode) Allocate interfaces to the context according to the [“Configuring Multiple Contexts” section on page 5-14.](#)
- Step 3** (Multiple context mode) Enter the **changeto context name** command to change to the context you want to configure. Configure general interface parameters, including the interface name, security level, and IPv4 address. See the [“Configuring General Interface Parameters” section on page 8-6.](#)
- Step 4** (Optional) Configure the MAC address and the MTU. See the [“Configuring the MAC Address and MTU” section on page 8-9.](#)
- Step 5** (Optional) Configure IPv6 addressing. See the [“Configuring IPv6 Addressing” section on page 8-11.](#)
- Step 6** (Optional) Allow same security level communication, either by allowing communication between two interfaces or by allowing traffic to enter and exit the same interface. See the [“Allowing Same Security Level Communication” section on page 8-15.](#)
- 

## Configuring General Interface Parameters

This procedure describes how to set the name, security level, IPv4 address and other options.

For the ASA 5510 and higher, you must configure interface parameters for the following interface types:

- Physical interfaces
- VLAN subinterfaces
- Redundant interfaces
- EtherChannel interfaces

For the ASA 5505, you must configure interface parameters for the following interface types:

- VLAN interfaces

### Guidelines and Limitations

- For the ASA 5550, for maximum throughput, be sure to balance your traffic over the two interface slots; for example, assign the inside interface to slot 1 and the outside interface to slot 0.

- If you are using failover, do not use this procedure to name interfaces that you are reserving for failover and Stateful Failover communications. See the [“Configuring Active/Standby Failover” section on page 62-7](#) or the [“Configuring Active/Active Failover” section on page 63-8](#) to configure the failover and state links.

## Restrictions

- PPPoE is not supported in multiple context mode.

## Prerequisites

- Set up your interfaces depending on your model:
  - ASA 5510 and higher—[Chapter 6, “Starting Interface Configuration \(ASA 5510 and Higher\).”](#)
  - ASA 5505—[Chapter 7, “Starting Interface Configuration \(ASA 5505\).”](#)
- In multiple context mode, you can only configure context interfaces that you already assigned to the context in the system configuration according to the [“Configuring Multiple Contexts” section on page 5-14](#).
- In multiple context mode, complete this procedure in the context execution space. To change from the system to a context configuration, enter the **changeto context name** command.

## Detailed Steps

|        | Command                                                                                                                                                                                                                                                                                                               | Purpose                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|--------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Step 1 | <p>For the ASA 5510 and higher:</p> <pre>interface {{redundant number   port-channel number   physical_interface} [.subinterface]   mapped_name}</pre> <p>For the ASA 5505:</p> <pre>hostname(config)# interface vlan number</pre> <p><b>Example:</b></p> <pre>hostname(config)# interface gigabithethernet 0/0</pre> | <p>If you are not already in interface configuration mode, enters interface configuration mode.</p> <p>The <b>redundant number</b> argument is the redundant interface ID, such as <b>redundant 1</b>.</p> <p>The <b>port-channel number</b> argument is the EtherChannel interface ID, such as <b>port-channel 1</b>.</p> <p>See the <a href="#">“Enabling the Physical Interface and Configuring Ethernet Parameters”</a> section for a description of the physical interface ID.</p> <p>Append the <i>subinterface</i> ID to the physical or redundant interface ID separated by a period (.).</p> <p>In multiple context mode, enter the <i>mapped_name</i> if one was assigned using the <b>allocate-interface</b> command.</p> |
| Step 2 | <pre>nameif name</pre> <p><b>Example:</b></p> <pre>hostname(config-if)# nameif inside</pre>                                                                                                                                                                                                                           | <p>Names the interface.</p> <p>The <i>name</i> is a text string up to 48 characters, and is not case-sensitive. You can change the name by reentering this command with a new value. Do not enter the <b>no</b> form, because that command causes all commands that refer to that name to be deleted.</p>                                                                                                                                                                                                                                                                                                                                                                                                                            |
| Step 3 | Do one of the following:                                                                                                                                                                                                                                                                                              |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |

| Command                                                                                                                                                                                                    | Purpose                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p><b>ip address</b> <i>ip_address</i> [<i>mask</i>] [<b>standby</b> <i>ip_address</i>]</p> <p><b>Example:</b><br/> <pre>hostname(config-if)# ip address 10.1.1.1 255.255.255.0 standby 10.1.1.2</pre></p> | <p>Sets the IP address manually.</p> <p><b>Note</b> For use with failover, you must set the IP address and standby address manually; DHCP and PPPoE are not supported.</p> <p>The <i>ip_address</i> and <i>mask</i> arguments set the interface IP address and subnet mask.</p> <p>The <b>standby</b> <i>ip_address</i> argument is used for failover. See the “<a href="#">Configuring Active/Standby Failover</a>” section on page 62-7 or the “<a href="#">Configuring Active/Active Failover</a>” section on page 63-8 for more information.</p> |
| <p><b>ip address dhcp</b> [<b>setroute</b>]</p> <p><b>Example:</b><br/> <pre>hostname(config-if)# ip address dhcp</pre></p>                                                                                | <p>Obtains an IP address from a DHCP server.</p> <p>The <b>setroute</b> keyword lets the ASA use the default route supplied by the DHCP server.</p> <p>Reenter this command to reset the DHCP lease and request a new lease.</p> <p>If you do not enable the interface using the <b>no shutdown</b> command before you enter the <b>ip address dhcp</b> command, some DHCP requests might not be sent.</p>                                                                                                                                           |
| <p>To obtain an IP address from a PPPoE server, see <a href="#">Chapter 72, “Configuring the PPPoE Client.”</a></p>                                                                                        | <p>PPPoE is not supported in multiple context mode.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <p><b>Step 4</b> <b>security-level</b> <i>number</i></p> <p><b>Example:</b><br/> <pre>hostname(config-if)# security-level 50</pre></p>                                                                     | <p>Sets the security level, where <i>number</i> is an integer between 0 (lowest) and 100 (highest). See the “<a href="#">Security Levels</a>” section on page 8-1.</p>                                                                                                                                                                                                                                                                                                                                                                               |
| <p><b>Step 5</b> (Optional)</p> <p><b>management-only</b></p> <p><b>Example:</b><br/> <pre>hostname(config-if)# management-only</pre></p>                                                                  | <p>Sets an interface to management-only mode so that it does not pass through traffic.</p> <p>By default, Management interfaces are configured as management-only. To disable this setting, enter the <b>no management-only</b> command.</p> <p>(ASA 5512-X through ASA 5555-X) You cannot disable <b>management-only</b> on the Management 0/0 interface.</p> <p>The <b>management-only</b> command is not supported for a redundant interface.</p>                                                                                                 |

## Example

The following example configures parameters for VLAN 101:

```
hostname(config)# interface vlan 101
hostname(config-if)# nameif inside
hostname(config-if)# security-level 100
hostname(config-if)# ip address 10.1.1.1 255.255.255.0
```

The following example configures parameters in multiple context mode for the context configuration. The interface ID is a mapped name.

```
hostname/contextA(config)# interface int1
```

```
hostname/contextA(config-if)# nameif outside
hostname/contextA(config-if)# security-level 100
hostname/contextA(config-if)# ip address 10.1.2.1 255.255.255.0
```

## What to Do Next

- (Optional) Configure the MAC address and the MTU. See the [“Configuring the MAC Address and MTU” section on page 8-9](#).
- (Optional) Configure IPv6 addressing. See the [“Configuring IPv6 Addressing” section on page 8-11](#).

## Configuring the MAC Address and MTU

This section describes how to configure MAC addresses for interfaces and how to set the MTU.

### Information About MAC Addresses

By default, the physical interface uses the burned-in MAC address, and all subinterfaces of a physical interface use the same burned-in MAC address.

A redundant interface uses the MAC address of the first physical interface that you add. If you change the order of the member interfaces in the configuration, then the MAC address changes to match the MAC address of the interface that is now listed first. If you assign a MAC address to the redundant interface using this command, then it is used regardless of the member interface MAC addresses.

For an EtherChannel, all interfaces that are part of the channel group share the same MAC address. This feature makes the EtherChannel transparent to network applications and users, because they only see the one logical connection; they have no knowledge of the individual links. The port-channel interface uses the lowest numbered channel group interface MAC address as the port-channel MAC address.

Alternatively you can manually configure a MAC address for the port-channel interface. In multiple context mode, you can automatically assign unique MAC addresses to interfaces, including an EtherChannel port interface. We recommend manually, or in multiple context mode, automatically configuring a unique MAC address in case the group channel interface membership changes. If you remove the interface that was providing the port-channel MAC address, then the port-channel MAC address changes to the next lowest numbered interface, thus causing traffic disruption.

In multiple context mode, if you share an interface between contexts, you can assign a unique MAC address to the interface in each context. This feature lets the ASA easily classify packets into the appropriate context. Using a shared interface without unique MAC addresses is possible, but has some limitations. See the [“How the ASA Classifies Packets” section on page 5-3](#) for more information. You can assign each MAC address manually, or you can automatically generate MAC addresses for shared interfaces in contexts. See the [“Automatically Assigning MAC Addresses to Context Interfaces” section on page 5-22](#) to automatically generate MAC addresses. If you automatically generate MAC addresses, you can use this procedure to override the generated address.

For single context mode, or for interfaces that are not shared in multiple context mode, you might want to assign unique MAC addresses to subinterfaces. For example, your service provider might perform access control based on the MAC address.

### Information About the MTU

The MTU is the maximum datagram size that is sent on a connection. Data that is larger than the MTU value is fragmented before being sent.

The ASA supports IP path MTU discovery (as defined in RFC 1191), which allows a host to dynamically discover and cope with the differences in the maximum allowable MTU size of the various links along the path. Sometimes, the ASA cannot forward a datagram because the packet is larger than the MTU that you set for the interface, but the “don't fragment” (DF) bit is set. The network software sends a message to the sending host, alerting it to the problem. The host has to fragment packets for the destination so that they fit the smallest packet size of all the links along the path.

The default MTU is 1500 bytes in a block for Ethernet interfaces. This value is sufficient for most applications, but you can pick a lower number if network conditions require it.

To enable jumbo frames, see the “[Enabling Jumbo Frame Support \(Supported Models\)](#)” section on [page 6-32](#). A jumbo frame is an Ethernet packet larger than the standard maximum of 1518 bytes (including Layer 2 header and FCS), up to 9216 bytes. Jumbo frames require extra memory to process, and assigning more memory for jumbo frames might limit the maximum use of other features, such as access lists. To use jumbo frames, set the value higher, for example, to 9000 bytes.

## Prerequisites

- Set up your interfaces depending on your model:
  - ASA 5510 and higher—[Chapter 6, “Starting Interface Configuration \(ASA 5510 and Higher\).”](#)
  - ASA 5505—[Chapter 7, “Starting Interface Configuration \(ASA 5505\).”](#)
- In multiple context mode, you can only configure context interfaces that you already assigned to the context in the system configuration according to the “[Configuring Multiple Contexts](#)” section on [page 5-14](#).
- In multiple context mode, complete this procedure in the context execution space. To change from the system to a context configuration, enter the **changeto context name** command.

## Detailed Steps

|               | Command                                                                                                                                                                                                                                                                                                                                                                                           | Purpose                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|---------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Step 1</b> | <p>For the ASA 5510 and higher:</p> <pre><b>interface</b> {{<b>redundant</b> <i>number</i>  <br/><b>port-channel</b> <i>number</i>  <br/><i>physical_interface</i>}[.<i>subinterface</i>]  <br/><i>mapped_name</i>}</pre> <p>For the ASA 5505:</p> <pre>hostname(config)# <b>interface</b> <b>vlan</b> <i>number</i></pre> <p><b>Example:</b></p> <pre>hostname(config)# interface vlan 100</pre> | <p>If you are not already in interface configuration mode, enters interface configuration mode.</p> <p>The <b>redundant</b> <i>number</i> argument is the redundant interface ID, such as <b>redundant 1</b>.</p> <p>The <b>port-channel</b> <i>number</i> argument is the EtherChannel interface ID, such as <b>port-channel 1</b>.</p> <p>See the “<a href="#">Enabling the Physical Interface and Configuring Ethernet Parameters</a>” section for a description of the physical interface ID.</p> <p>Append the <i>subinterface</i> ID to the physical or redundant interface ID separated by a period (.).</p> <p>In multiple context mode, enter the <i>mapped_name</i> if one was assigned using the <b>allocate-interface</b> command.</p> |
| <b>Step 2</b> | <pre><b>mac-address</b> <i>mac_address</i><br/>[<b>standby</b> <i>mac_address</i>]</pre> <p><b>Example:</b></p> <pre>hostname(config-if)# mac-address<br/>000C.F142.4CDE</pre>                                                                                                                                                                                                                    | <p>Assigns a private MAC address to this interface. The <i>mac_address</i> is in H.H.H format, where H is a 16-bit hexadecimal digit. For example, the MAC address 00-0C-F1-42-4C-DE is entered as 000C.F142.4CDE.</p> <p>The first two bytes of a manual MAC address cannot be A2 if you also want to use auto-generated MAC addresses.</p> <p>For use with failover, set the <b>standby</b> MAC address. If the active unit fails over and the standby unit becomes active, the new active unit starts using the active MAC addresses to minimize network disruption, while the old active unit uses the standby address.</p>                                                                                                                    |
| <b>Step 3</b> | <pre><b>mtu</b> <i>interface_name bytes</i></pre> <p><b>Example:</b></p> <pre>hostname(config)# mtu inside 9200</pre>                                                                                                                                                                                                                                                                             | <p>Sets the MTU between 300 and 65,535 bytes. The default is 1500 bytes.</p> <p><b>Note</b> When you set the MTU for a redundant or port-channel interface, the ASA applies the setting to all member interfaces.</p> <p>For models that support jumbo frames, if you enter a value for any interface that is greater than 1500, then you need to enable jumbo frame support. See the “<a href="#">Enabling Jumbo Frame Support (Supported Models)</a>” section on page 6-32.</p>                                                                                                                                                                                                                                                                  |

## What to Do Next

(Optional) Configure IPv6 addressing. See the “[Configuring IPv6 Addressing](#)” section on page 8-11.

## Configuring IPv6 Addressing

This section describes how to configure IPv6 addressing. For more information about IPv6, see the “[Information About IPv6 Support](#)” section on page 21-9 and the “[IPv6 Addresses](#)” section on page B-5.

This section includes the following topics:

- [Information About IPv6, page 8-12](#)
- [Configuring a Global IPv6 Address and Other Options, page 8-13](#)

## Information About IPv6

This section includes information about how to configure IPv6, and includes the following topics:

- [IPv6 Addressing, page 8-12](#)
- [Duplicate Address Detection, page 8-12](#)
- [Modified EUI-64 Interface IDs, page 8-13](#)

### IPv6 Addressing

You can configure two types of unicast addresses for IPv6:

- **Global**—The global address is a public address that you can use on the public network.
- **Link-local**—The link-local address is a private address that you can only use on the directly-connected network. Routers do not forward packets using link-local addresses; they are only for communication on a particular physical network segment. They can be used for address configuration or for the ND functions such as address resolution and neighbor discovery.

At a minimum, you need to configure a link-local addresses for IPv6 to operate. If you configure a global address, a link-local address is automatically configured on the interface, so you do not also need to specifically configure a link-local address. If you do not configure a global address, then you need to configure the link-local address, either automatically or manually.



#### Note

If you want to only configure the link-local addresses, see the **ipv6 enable** (to auto-configure) or **ipv6 address link-local** (to manually configure) command in the command reference.

### Duplicate Address Detection

During the stateless autoconfiguration process, duplicate address detection (DAD) verifies the uniqueness of new unicast IPv6 addresses before the addresses are assigned to interfaces (the new addresses remain in a tentative state while duplicate address detection is performed). Duplicate address detection is performed first on the new link-local address. When the link-local address is verified as unique, then duplicate address detection is performed all the other IPv6 unicast addresses on the interface.

Duplicate address detection is suspended on interfaces that are administratively down. While an interface is administratively down, the unicast IPv6 addresses assigned to the interface are set to a pending state. An interface returning to an administratively up state restarts duplicate address detection for all of the unicast IPv6 addresses on the interface.

When a duplicate address is identified, the state of the address is set to DUPLICATE, the address is not used, and the following error message is generated:

```
%ASA-4-325002: Duplicate address ipv6_address/MAC_address on interface
```

If the duplicate address is the link-local address of the interface, the processing of IPv6 packets is disabled on the interface. If the duplicate address is a global address, the address is not used. However, all configuration commands associated with the duplicate address remain as configured while the state of the address is set to DUPLICATE.

If the link-local address for an interface changes, duplicate address detection is performed on the new link-local address and all of the other IPv6 address associated with the interface are regenerated (duplicate address detection is performed only on the new link-local address).

The ASA uses neighbor solicitation messages to perform duplicate address detection. By default, the number of times an interface performs duplicate address detection is 1.

### Modified EUI-64 Interface IDs

RFC 3513: Internet Protocol Version 6 (IPv6) Addressing Architecture requires that the interface identifier portion of all unicast IPv6 addresses, except those that start with binary value 000, be 64 bits long and be constructed in Modified EUI-64 format. The ASA can enforce this requirement for hosts attached to the local link.

When this feature is enabled on an interface, the source addresses of IPv6 packets received on that interface are verified against the source MAC addresses to ensure that the interface identifiers use the Modified EUI-64 format. If the IPv6 packets do not use the Modified EUI-64 format for the interface identifier, the packets are dropped and the following system log message is generated:

```
%ASA-3-325003: EUI-64 source address check failed.
```

The address format verification is only performed when a flow is created. Packets from an existing flow are not checked. Additionally, the address verification can only be performed for hosts on the local link. Packets received from hosts behind a router will fail the address format verification, and be dropped, because their source MAC address will be the router MAC address and not the host MAC address.

## Configuring a Global IPv6 Address and Other Options

To configure a global IPv6 address and other options, perform the following steps.



### Note

---

Configuring the global address automatically configures the link-local address, so you do not need to configure it separately.

---

### Restrictions

The ASA does not support IPv6 anycast addresses.

### Prerequisites

- Set up your interfaces depending on your model:
  - ASA 5510 and higher—[Chapter 6, “Starting Interface Configuration \(ASA 5510 and Higher\).”](#)
  - ASA 5505—[Chapter 7, “Starting Interface Configuration \(ASA 5505\).”](#)
- In multiple context mode, you can only configure context interfaces that you already assigned to the context in the system configuration according to the [“Configuring Multiple Contexts” section on page 5-14](#).
- In multiple context mode, complete this procedure in the context execution space. To change from the system to a context configuration, enter the **changeto context name** command.

## Detailed Steps

| Command                                                                                                                                                                                                                                                                                                                                    | Purpose                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p><b>Step 1</b></p> <p>For the ASA 5510 and higher:</p> <pre>interface {{redundant number   port-channel number   physical_interface} [.subinterface]   mapped_name}</pre> <p>For the ASA 5505:</p> <pre>hostname(config)# interface vlan number</pre> <p><b>Example:</b></p> <pre>hostname(config)# interface gigabithethernet 0/0</pre> | <p>If you are not already in interface configuration mode, enters interface configuration mode.</p> <p>The <b>redundant number</b> argument is the redundant interface ID, such as <b>redundant 1</b>.</p> <p>The <b>port-channel number</b> argument is the EtherChannel interface ID, such as <b>port-channel 1</b>.</p> <p>See the “<a href="#">Enabling the Physical Interface and Configuring Ethernet Parameters</a>” section for a description of the physical interface ID.</p> <p>Append the <i>subinterface</i> ID to the physical or redundant interface ID separated by a period (.).</p> <p>In multiple context mode, enter the <i>mapped_name</i> if one was assigned using the <b>allocate-interface</b> command.</p> |
| <p><b>Step 2</b></p> <p>Do one of the following:</p> <pre>ipv6 address autoconfig</pre> <p><b>Example:</b></p> <pre>hostname(config-if)# ipv6 address autoconfig</pre>                                                                                                                                                                     | <p>Enables stateless autoconfiguration on the interface. Enabling stateless autoconfiguration on the interface configures IPv6 addresses based on prefixes received in Router Advertisement messages. A link-local address, based on the Modified EUI-64 interface ID, is automatically generated for the interface when stateless autoconfiguration is enabled.</p> <p><b>Note</b> Although RFC 4862 specifies that hosts configured for stateless autoconfiguration do not send Router Advertisement messages, the ASA does send Router Advertisement messages in this case. See the <b>ipv6 nd suppress-ra</b> command to suppress messages.</p>                                                                                  |
| <pre>ipv6 address ipv6-address/prefix-length [standby ipv6-address]</pre> <p><b>Example:</b></p> <pre>hostname(config-if)# ipv6 address 2001:0DB8::BA98:0:3210/48</pre>                                                                                                                                                                    | <p>Assigns a global address to the interface. When you assign a global address, the link-local address is automatically created for the interface.</p> <p><b>standby</b> specifies the interface address used by the secondary unit or failover group in a failover pair.</p> <p>See the “<a href="#">IPv6 Addresses</a>” section on page B-5 for more information about IPv6 addressing.</p>                                                                                                                                                                                                                                                                                                                                        |
| <pre>ipv6 address ipv6-prefix/prefix-length eui-64</pre> <p><b>Example:</b></p> <pre>hostname(config-if)# ipv6 address 2001:0DB8::BA98::/48 eui-64</pre>                                                                                                                                                                                   | <p>Assigns a global address to the interface by combining the specified prefix with an interface ID generated from the interface MAC address using the Modified EUI-64 format. When you assign a global address, the link-local address is automatically created for the interface.</p> <p>You do not need to specify the standby address; the interface ID will be generated automatically.</p> <p>See the “<a href="#">IPv6 Addresses</a>” section on page B-5 for more information about IPv6 addressing.</p>                                                                                                                                                                                                                     |

|        | Command                                                                                                                                   | Purpose                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|--------|-------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Step 3 | (Optional)<br><code>ipv6 nd suppress-ra</code><br><br><b>Example:</b><br><code>hostname(config-if)# ipv6 nd suppress-ra</code>            | Suppresses Router Advertisement messages on an interface. By default, Router Advertisement messages are automatically sent in response to router solicitation messages. You may want to disable these messages on any interface for which you do not want the ASA to supply the IPv6 prefix (for example, the outside interface).                                                                                                                                                                                                                                                                             |
| Step 4 | (Optional)<br><code>ipv6 nd dad attempts value</code><br><br><b>Example:</b><br><code>hostname(config-if)# ipv6 nd dad attempts 3</code>  | Changes the number of duplicate address detection attempts. The <i>value</i> argument can be any value from 0 to 600. Setting the <i>value</i> argument to 0 disables duplicate address detection on the interface.<br><br>By default, the number of times an interface performs duplicate address detection is 1. See the <a href="#">“Duplicate Address Detection” section on page 8-12</a> for more information.                                                                                                                                                                                           |
| Step 5 | (Optional)<br><code>ipv6 nd ns-interval value</code><br><br><b>Example:</b><br><code>hostname(config-if)# ipv6 nd ns-interval 2000</code> | Changes the neighbor solicitation message interval. When you configure an interface to send out more than one duplicate address detection attempt with the <code>ipv6 nd dad attempts</code> command, this command configures the interval at which the neighbor solicitation messages are sent out. By default, they are sent out once every 1000 milliseconds. The <i>value</i> argument can be from 1000 to 3600000 milliseconds.<br><br><b>Note</b> Changing this value changes it for all neighbor solicitation messages sent out on the interface, not just those used for duplicate address detection. |
| Step 6 | (Optional)<br><code>ipv6 enforce-eui64 if_name</code><br><br><b>Example:</b><br><code>hostname(config)# ipv6 enforce-eui64 inside</code>  | Enforces the use of Modified EUI-64 format interface identifiers in IPv6 addresses on a local link.<br><br>The <i>if_name</i> argument is the name of the interface, as specified by the <code>nameif</code> command, on which you are enabling the address format enforcement.<br><br>See the <a href="#">“Modified EUI-64 Interface IDs” section on page 8-13</a> for more information.                                                                                                                                                                                                                     |

## Allowing Same Security Level Communication

By default, interfaces on the same security level cannot communicate with each other, and packets cannot enter and exit the same interface. This section describes how to enable inter-interface communication when interfaces are on the same security level, and how to enable intra-interface communication.

### Information About Inter-Interface Communication

Allowing interfaces on the same security level to communicate with each other provides the following benefits:

- You can configure more than 101 communicating interfaces.  
If you use different levels for each interface and do not assign any interfaces to the same security level, you can configure only one interface per level (0 to 100).
- You want traffic to flow freely between all same security interfaces without access lists.

If you enable same security interface communication, you can still configure interfaces at different security levels as usual.

### Information About Intra-Interface Communication

Intra-interface communication might be useful for VPN traffic that enters an interface, but is then routed out the same interface. The VPN traffic might be unencrypted in this case, or it might be reencrypted for another VPN connection. For example, if you have a hub and spoke VPN network, where the ASA is the hub, and remote VPN networks are spokes, for one spoke to communicate with another spoke, traffic must go into the ASA and then out again to the other spoke.



#### Note

All traffic allowed by this feature is still subject to firewall rules. Be careful not to create an asymmetric routing situation that can cause return traffic not to traverse the ASA.

### Detailed Steps

| Command                                                   | Purpose                                                                                     |
|-----------------------------------------------------------|---------------------------------------------------------------------------------------------|
| <code>same-security-traffic permit inter-interface</code> | Enables interfaces on the same security level so that they can communicate with each other. |
| <code>same-security-traffic permit intra-interface</code> | Enables communication between hosts connected to the same interface.                        |

## Monitoring Interfaces

To monitor interfaces, enter one of the following commands:

| Command                              | Purpose                                     |
|--------------------------------------|---------------------------------------------|
| <code>show interface</code>          | Displays interface statistics.              |
| <code>show interface ip brief</code> | Displays interface IP addresses and status. |

## Configuration Examples for Interfaces in Routed Mode

This section includes the following topics:

- [ASA 5505 Example, page 8-16](#)

### ASA 5505 Example

The following example configures three VLAN interfaces for the Base license. The third home interface cannot forward traffic to the business interface.

```
hostname(config)# interface vlan 100
```

```

hostname(config-if)# nameif outside
hostname(config-if)# security-level 0
hostname(config-if)# ip address dhcp
hostname(config-if)# no shutdown

hostname(config-if)# interface vlan 200
hostname(config-if)# nameif business
hostname(config-if)# security-level 100
hostname(config-if)# ip address 10.1.1.1 255.255.255.0
hostname(config-if)# no shutdown

hostname(config-if)# interface vlan 300
hostname(config-if)# no forward interface vlan 200
hostname(config-if)# nameif home
hostname(config-if)# security-level 50
hostname(config-if)# ip address 10.2.1.1 255.255.255.0
hostname(config-if)# no shutdown

```

## Feature History for Interfaces in Routed Mode

Table 8-1 lists the release history for this feature.

**Table 8-1** Feature History for Interfaces

| Feature Name    | Releases | Feature Information                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|-----------------|----------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Increased VLANs | 7.0(5)   | <p>Increased the following limits:</p> <ul style="list-style-type: none"> <li>• ASA5510 Base license VLANs from 0 to 10.</li> <li>• ASA5510 Security Plus license VLANs from 10 to 25.</li> <li>• ASA5520 VLANs from 25 to 100.</li> <li>• ASA5540 VLANs from 100 to 200.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| Increased VLANs | 7.2(2)   | <p>The maximum number of VLANs for the Security Plus license on the ASA 5505 was increased from 5 (3 fully functional; 1 failover; one restricted to a backup interface) to 20 fully functional interfaces. In addition, the number of trunk ports was increased from 1 to 8. Now there are 20 fully functional interfaces, you do not need to use the backup interface command to cripple a backup ISP interface; you can use a fully-functional interface for it. The backup interface command is still useful for an Easy VPN configuration.</p> <p>VLAN limits were also increased for the ASA 5510 (from 10 to 50 for the Base license, and from 25 to 100 for the Security Plus license), the ASA 5520 (from 100 to 150), the ASA 5550 (from 200 to 250).</p> |

Table 8-1 Feature History for Interfaces (continued)

| Feature Name                                                                             | Releases      | Feature Information                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|------------------------------------------------------------------------------------------|---------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Gigabit Ethernet Support for the ASA 5510 Security Plus License                          | 7.2(3)        | The ASA 5510 now supports GE (Gigabit Ethernet) for port 0 and 1 with the Security Plus license. If you upgrade the license from Base to Security Plus, the capacity of the external Ethernet0/0 and Ethernet0/1 ports increases from the original FE (Fast Ethernet) (100 Mbps) to GE (1000 Mbps). The interface names will remain Ethernet 0/0 and Ethernet 0/1. Use the <b>speed</b> command to change the speed on the interface and use the <b>show interface</b> command to see what speed is currently configured for each interface. |
| Native VLAN support for the ASA 5505                                                     | 7.2(4)/8.0(4) | You can now include the native VLAN in an ASA 5505 trunk port.<br><br>We introduced the following command: <b>switchport trunk native vlan</b> .                                                                                                                                                                                                                                                                                                                                                                                             |
| Jumbo packet support for the ASA 5580                                                    | 8.1(1)        | The Cisco ASA 5580 supports jumbo frames. A jumbo frame is an Ethernet packet larger than the standard maximum of 1518 bytes (including Layer 2 header and FCS), up to 9216 bytes. You can enable support for jumbo frames for all interfaces by increasing the amount of memory to process Ethernet frames. Assigning more memory for jumbo frames might limit the maximum use of other features, such as access lists.<br><br>We introduced the following command: <b>jumbo-frame reservation</b> .                                        |
| Increased VLANs for the ASA 5580                                                         | 8.1(2)        | The number of VLANs supported on the ASA 5580 are increased from 100 to 250.                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| IPv6 support for transparent mode                                                        | 8.2(1)        | IPv6 support was introduced for transparent firewall mode.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| Support for Pause Frames for Flow Control on the ASA 5580 10 Gigabit Ethernet Interfaces | 8.2(2)        | You can now enable pause (XOFF) frames for flow control.<br><br>We introduced the following command: <b>flowcontrol</b> .                                                                                                                                                                                                                                                                                                                                                                                                                    |



# CHAPTER 9

## Completing Interface Configuration (Transparent Mode)

---

This chapter includes tasks to complete the interface configuration for all models in transparent firewall mode.

This chapter includes the following sections:

- [Information About Completing Interface Configuration in Transparent Mode, page 9-1](#)
- [Licensing Requirements for Completing Interface Configuration in Transparent Mode, page 9-2](#)
- [Guidelines and Limitations, page 9-5](#)
- [Default Settings, page 9-6](#)
- [Completing Interface Configuration in Transparent Mode, page 9-6](#)
- [Monitoring Interfaces, page 9-19](#)
- [Configuration Examples for Interfaces in Transparent Mode, page 9-19](#)
- [Feature History for Interfaces in Transparent Mode, page 9-20](#)



### Note

---

For multiple context mode, complete the tasks in this section in the context execution space. Enter the `changeto context name` command to change to the context you want to configure.

---

## Information About Completing Interface Configuration in Transparent Mode

This section includes the following topics:

- [Bridge Groups in Transparent Mode, page 9-1](#)
- [Security Levels, page 9-2](#)

### Bridge Groups in Transparent Mode

If you do not want the overhead of security contexts, or want to maximize your use of security contexts, you can group interfaces together in a bridge group, and then configure multiple bridge groups, one for each network. Bridge group traffic is isolated from other bridge groups; traffic is not routed to another bridge group within the ASA, and traffic must exit the ASA before it is routed by an external router back

to another bridge group in the ASA. Although the bridging functions are separate for each bridge group, many other functions are shared between all bridge groups. For example, all bridge groups share a syslog server or AAA server configuration. For complete security policy separation, use security contexts with one bridge group in each context. At least one bridge group is required per context or in single mode.

Each bridge group requires a management IP address. For another method of management, see the [“Management Interface”](#) section.

**Note**

The ASA does not support traffic on secondary networks; only traffic on the same network as the management IP address is supported.

## Security Levels

Each interface must have a security level from 0 (lowest) to 100 (highest). For example, you should assign your most secure network, such as the inside host network, to level 100. While the outside network connected to the Internet can be level 0. Other networks, such as DMZs can be in between. You can assign interfaces to the same security level. See the [“Allowing Same Security Level Communication”](#) section on page 9-18 for more information.

The level controls the following behavior:

- Network access—By default, there is an implicit permit from a higher security interface to a lower security interface (outbound). Hosts on the higher security interface can access any host on a lower security interface. You can limit access by applying an access list to the interface.

If you enable communication for same security interfaces (see the [“Allowing Same Security Level Communication”](#) section on page 9-18), there is an implicit permit for interfaces to access other interfaces on the same security level or lower.

- Inspection engines—Some application inspection engines are dependent on the security level. For same security interfaces, inspection engines apply to traffic in either direction.
  - NetBIOS inspection engine—Applied only for outbound connections.
  - SQL\*Net inspection engine—If a control connection for the SQL\*Net (formerly OraServ) port exists between a pair of hosts, then only an inbound data connection is permitted through the ASA.
- Filtering—HTTP(S) and FTP filtering applies only for outbound connections (from a higher level to a lower level).

If you enable communication for same security interfaces, you can filter traffic in either direction.

- **established** command—This command allows return connections from a lower security host to a higher security host if there is already an established connection from the higher level host to the lower level host.

If you enable communication for same security interfaces, you can configure **established** commands for both directions.

# Licensing Requirements for Completing Interface Configuration in Transparent Mode

| Model    | License Requirement                                                                                                                                                                                                                                                                                          |
|----------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ASA 5505 | VLANs:<br>Base License: 3 (2 regular zones and 1 restricted zone that can only communicate with 1 other zone)<br>Security Plus License: 20<br>VLAN Trunks:<br>Base License: None.<br>Security Plus License: 8.<br>Interfaces of all types <sup>1</sup> :<br>Base License: 52.<br>Security Plus License: 120. |

1. The maximum number of combined interfaces; for example, VLANs, physical, redundant, and bridge group interfaces.

| Model    | License Requirement                                                                                                                                                                                                                                                                                               |
|----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ASA 5510 | VLANs:<br>Base License: 50<br>Security Plus License: 100<br>Interface Speed:<br>Base License—All interfaces Fast Ethernet.<br>Security Plus License—Ethernet 0/0 and 0/1: Gigabit Ethernet; all others Fast Ethernet.<br>Interfaces of all types <sup>1</sup> :<br>Base License: 52<br>Security Plus License: 120 |
| ASA 5520 | VLANs:<br>Base License: 150.<br>Interfaces of all types <sup>1</sup> :<br>Base License: 640                                                                                                                                                                                                                       |
| ASA 5540 | VLANs:<br>Base License: 200<br>Interfaces of all types <sup>1</sup> :<br>Base License: 840                                                                                                                                                                                                                        |
| ASA 5550 | VLANs:<br>Base License: 400<br>Interfaces of all types <sup>1</sup> :<br>Base License: 1640                                                                                                                                                                                                                       |

| Model      | License Requirement                                                                                                                                                                                                                                                                                                         |
|------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ASA 5580   | VLANs:<br>Base License: 1024<br>Interfaces of all types <sup>1</sup> :<br>Base License: 4176                                                                                                                                                                                                                                |
| ASA 5512-X | VLANs:<br>Base License: 50<br>Interfaces of all types <sup>1</sup> :<br>Base License: 328                                                                                                                                                                                                                                   |
| ASA 5515-X | VLANs:<br>Base License: 100<br>Interfaces of all types <sup>1</sup> :<br>Base License: 528                                                                                                                                                                                                                                  |
| ASA 5525-X | VLANs:<br>Base License: 200<br>Interfaces of all types <sup>1</sup> :<br>Base License: 928                                                                                                                                                                                                                                  |
| ASA 5545-X | VLANs:<br>Base License: 300<br>Interfaces of all types <sup>1</sup> :<br>Base License: 1328                                                                                                                                                                                                                                 |
| ASA 5555-X | VLANs:<br>Base License: 500<br>Interfaces of all types <sup>1</sup> :<br>Base License: 2128                                                                                                                                                                                                                                 |
| ASA 5585-X | VLANs:<br>Base License: 1024<br>Interface Speed for SSP-10 and SSP-20:<br>Base License—1-Gigabit Ethernet for fiber interfaces<br>10 GE I/O License—10-Gigabit Ethernet for fiber interfaces<br>(SSP-40 and SSP-60 support 10-Gigabit Ethernet by default.)<br>Interfaces of all types <sup>1</sup> :<br>Base License: 4176 |

1. The maximum number of combined interfaces; for example, VLANs, physical, redundant, bridge group, and EtherChannel interfaces.

# Guidelines and Limitations

This section includes the guidelines and limitations for this feature.

## Context Mode Guidelines

- For the ASA 5510 and higher in multiple context mode, configure the physical interfaces in the system execution space according to [Chapter 6, “Starting Interface Configuration \(ASA 5510 and Higher\)”](#). Then, configure the logical interface parameters in the context execution space according to this chapter.

The ASA 5505 does not support multiple context mode.

- You can only configure context interfaces that you already assigned to the context in the system configuration using the **allocate-interface** command.

## Firewall Mode Guidelines

- You can configure up to 8 bridge groups in single mode or per context in multiple mode. Note that you must use at least 1 bridge group; data interfaces must belong to a bridge group.



---

**Note** Although you can configure multiple bridge groups on the ASA 5505, the restriction of 2 data interfaces in transparent mode on the ASA 5505 means you can only effectively use 1 bridge group.

---

- Each bridge group can include up to 4 interfaces.
- For IPv4, a management IP address is required for each bridge group for both management traffic and for traffic to pass through the ASA.

Unlike routed mode, which requires an IP address for each interface, a transparent firewall has an IP address assigned to the entire bridge group. The ASA uses this IP address as the source address for packets originating on the ASA, such as system messages or AAA communications. In addition to the bridge group management address, you can optionally configure a management interface for some models; see the [“Management Interface” section on page 6-2](#) for more information.

The management IP address must be on the same subnet as the connected network. You cannot set the subnet to a host subnet (255.255.255.255). The ASA does not support traffic on secondary networks; only traffic on the same network as the management IP address is supported. See the [“Configuring Bridge Groups” section on page 9-7](#) for more information about management IP subnets.

- For IPv6, at a minimum you need to configure link-local addresses for each interface for through traffic. For full functionality, including the ability to manage the ASA, you need to configure a global IPv6 address for each bridge group.
- For multiple context mode, each context must use different interfaces; you cannot share an interface across contexts.
- For multiple context mode, each context typically uses a different subnet. You can use overlapping subnets, but your network topology requires router and NAT configuration to make it possible from a routing standpoint.

**Failover Guidelines**

Do not finish configuring failover interfaces with the procedures in this chapter. See the “[Configuring Active/Standby Failover](#)” section on page 62-7 or the “[Configuring Active/Active Failover](#)” section on page 63-8 to configure the failover and state links. In multiple context mode, failover interfaces are configured in the system configuration.

**IPv6 Guidelines**

- Supports IPv6.
- No support for IPv6 anycast addresses in transparent mode.

## Default Settings

This section lists default settings for interfaces if you do not have a factory default configuration. For information about the factory default configurations, see the “[Factory Default Configurations](#)” section on page 2-10.

**Default Security Level**

The default security level is 0. If you name an interface “inside” and you do not set the security level explicitly, then the ASA sets the security level to 100.

**Note**

If you change the security level of an interface, and you do not want to wait for existing connections to time out before the new security information is used, you can clear the connections using the **clear local-host** command.

## Completing Interface Configuration in Transparent Mode

This section includes the following topics:

- [Task Flow for Completing Interface Configuration](#), page 9-6
- [Configuring Bridge Groups](#), page 9-7
- [Configuring General Interface Parameters](#), page 9-8
- [Configuring a Management Interface \(ASA 5510 and Higher\)](#), page 9-11
- [Configuring the MAC Address and MTU](#), page 9-12
- [Configuring IPv6 Addressing](#), page 9-15
- [Allowing Same Security Level Communication](#), page 9-18

## Task Flow for Completing Interface Configuration

- 
- Step 1** Set up your interfaces depending on your model:
- ASA 5510 and higher—[Chapter 6, “Starting Interface Configuration \(ASA 5510 and Higher\).”](#)
  - ASA 5505—[Chapter 7, “Starting Interface Configuration \(ASA 5505\).”](#)

- Step 2** (Multiple context mode) Allocate interfaces to the context according to the “[Configuring Multiple Contexts](#)” section on page 5-14.
  - Step 3** (Multiple context mode) Enter the **changeto context** *name* command to change to the context you want to configure. Configure one or more bridge groups, including the IPv4 address. See the “[Configuring Bridge Groups](#)” section on page 9-7.
  - Step 4** Configure general interface parameters, including the interface name and security level. See the “[Configuring General Interface Parameters](#)” section on page 9-8.
  - Step 5** (Optional; not supported for the ASA 5505) Configure a management interface. See the “[Configuring a Management Interface \(ASA 5510 and Higher\)](#)” section on page 9-11.
  - Step 6** (Optional) Configure the MAC address and the MTU. See the “[Configuring the MAC Address and MTU](#)” section on page 9-12.
  - Step 7** (Optional) Configure IPv6 addressing. See the “[Configuring IPv6 Addressing](#)” section on page 9-15.
  - Step 8** (Optional) Allow same security level communication, either by allowing communication between two interfaces or by allowing traffic to enter and exit the same interface. See the “[Allowing Same Security Level Communication](#)” section on page 9-18.
- 

## Configuring Bridge Groups

Each bridge group requires a management IP address. The ASA uses this IP address as the source address for packets originating from the bridge group. The management IP address must be on the same subnet as the connected network. For IPv4 traffic, the management IP address is required to pass any traffic. For IPv6 traffic, you must, at a minimum, configure the link-local addresses to pass traffic, but a global management address is recommended for full functionality, including remote management and other management operations.

### Guidelines and Limitations

You can configure up to 8 bridge groups in single mode or per context in multiple mode. Note that you must use at least one bridge group; data interfaces must belong to a bridge group.

**Note**

For a separate management interface (for supported models), a non-configurable bridge group (ID 101) is automatically added to your configuration. This bridge group is not included in the bridge group limit.

## Detailed Steps

|        | Command                                                                                                                                                                                      | Purpose                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|--------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Step 1 | <code>interface bvi <i>bridge_group_number</i></code><br><br><b>Example:</b><br>hostname(config)# interface bvi 1                                                                            | Creates a bridge group, where <i>bridge_group_number</i> is an integer between 1 and 100.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| Step 2 | <code>ip address <i>ip_address</i> [<i>mask</i>]<br/>[<i>standby ip_address</i>]</code><br><br><b>Example:</b><br>hostname(config-if)# ip address 10.1.3.1<br>255.255.255.0 standby 10.1.3.2 | Specifies the management IP address for the bridge group.<br><br>Do not assign a host address (/32 or 255.255.255.255) to the bridge group. Also, do not use other subnets that contain fewer than 3 host addresses (one each for the upstream router, downstream router, and transparent firewall) such as a /30 subnet (255.255.255.252). The ASA drops all ARP packets to or from the first and last addresses in a subnet. Therefore, if you use a /30 subnet and assign a reserved address from that subnet to the upstream router, then the ASA drops the ARP request from the downstream router to the upstream router.<br><br>The ASA does not support traffic on secondary networks; only traffic on the same network as the management IP address is supported.<br><br>The <b>standby</b> keyword and address is used for failover. |

## Examples

The following example sets the management address and standby address of bridge group 1:

```
hostname(config)# interface bvi 1
hostname(config-if)# ip address 10.1.3.1 255.255.255.0 standby 10.1.3.2
```

## What to Do Next

Configure general interface parameters. See the [“Configuring General Interface Parameters”](#) section on page 9-8.

## Configuring General Interface Parameters

This procedure describes how to set the name, security level, and bridge group for each transparent interface.

To configure a separate management interface, see the [“Configuring a Management Interface \(ASA 5510 and Higher\)”](#) section on page 9-11.

For the ASA 5510 and higher, you must configure interface parameters for the following interface types:

- Physical interfaces
- VLAN subinterfaces
- Redundant interfaces
- EtherChannel interfaces

For the ASA 5505, you must configure interface parameters for the following interface types:

- VLAN interfaces

### Guidelines and Limitations

- You can configure up to four interfaces per bridge group.
- For the ASA 5550, for maximum throughput, be sure to balance your traffic over the two interface slots; for example, assign the inside interface to slot 1 and the outside interface to slot 0.
- For information about security levels, see the [“Security Levels” section on page 9-2](#).
- If you are using failover, do not use this procedure to name interfaces that you are reserving for failover and Stateful Failover communications. See the [“Configuring Active/Standby Failover” section on page 62-7](#) or the [“Configuring Active/Active Failover” section on page 63-8](#) to configure the failover and state links.

### Prerequisites

- Set up your interfaces depending on your model:
  - ASA 5510 and higher—[Chapter 6, “Starting Interface Configuration \(ASA 5510 and Higher\).”](#)
  - ASA 5505—[Chapter 7, “Starting Interface Configuration \(ASA 5505\).”](#)
- In multiple context mode, you can only configure context interfaces that you already assigned to the context in the system configuration according to the [“Configuring Multiple Contexts” section on page 5-14](#).
- In multiple context mode, complete this procedure in the context execution space. To change from the system to a context configuration, enter the **changeto context name** command.

## Detailed Steps

|        | Command                                                                                                                                                                                                                                                                                                   | Purpose                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|--------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Step 1 | <p>For the ASA 5510 and higher:</p> <pre>interface {{redundant number   port-channel number   physical_interface} [.subinterface]   mapped_name}</pre> <p>For the ASA 5505:</p> <pre>hostname(config)# interface vlan number</pre> <p><b>Example:</b></p> <pre>hostname(config)# interface vlan 100</pre> | <p>If you are not already in interface configuration mode, enters interface configuration mode.</p> <p>The <b>redundant number</b> argument is the redundant interface ID, such as <b>redundant 1</b>.</p> <p>The <b>port-channel number</b> argument is the EtherChannel interface ID, such as <b>port-channel 1</b>.</p> <p>See the “<a href="#">Enabling the Physical Interface and Configuring Ethernet Parameters</a>” section for a description of the physical interface ID. Do not use this procedure for Management interfaces; see the “<a href="#">Configuring a Management Interface (ASA 5510 and Higher)</a>” section on page 9-11 to configure the Management interface.</p> <p>Append the <i>subinterface</i> ID to the physical or redundant interface ID separated by a period (.).</p> <p>In multiple context mode, enter the <i>mapped_name</i> if one was assigned using the <b>allocate-interface</b> command.</p> |
| Step 2 | <pre>bridge-group number</pre> <p><b>Example:</b></p> <pre>hostname(config-if)# bridge-group 1</pre>                                                                                                                                                                                                      | <p>Assigns the interface to a bridge group, where <i>number</i> is an integer between 1 and 100. You can assign up to four interfaces to a bridge group. You cannot assign the same interface to more than one bridge group.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| Step 3 | <pre>nameif name</pre> <p><b>Example:</b></p> <pre>hostname(config-if)# nameif inside</pre>                                                                                                                                                                                                               | <p>Names the interface.</p> <p>The <i>name</i> is a text string up to 48 characters, and is not case-sensitive. You can change the name by reentering this command with a new value. Do not enter the <b>no</b> form, because that command causes all commands that refer to that name to be deleted.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| Step 4 | <pre>security-level number</pre> <p><b>Example:</b></p> <pre>hostname(config-if)# security-level 50</pre>                                                                                                                                                                                                 | <p>Sets the security level, where <i>number</i> is an integer between 0 (lowest) and 100 (highest).</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |

## What to Do Next

- (Optional) Configure a management interface. See the “[Configuring a Management Interface \(ASA 5510 and Higher\)](#)” section on page 9-11.
- (Optional) Configure the MAC address and the MTU. See the “[Configuring the MAC Address and MTU](#)” section on page 9-12.
- (Optional) Configure IPv6 addressing. See the “[Configuring IPv6 Addressing](#)” section on page 9-15.

## Configuring a Management Interface (ASA 5510 and Higher)

You can configure one management interface separate from the bridge group interfaces in single mode or per context. For more information, see the [“Management Interface” section on page 6-2](#).

### Restrictions

- See the [“Management Interface” section on page 6-2](#).
- Do not assign this interface to a bridge group; a non-configurable bridge group (ID 101) is automatically added to your configuration. This bridge group is not included in the bridge group limit.
- If your model does not include a Management interface, you must manage the transparent firewall from a data interface; skip this procedure. (For example, on the ASA 5505.)
- In multiple context mode, you cannot share any interfaces, including the Management interface, across contexts. To provide management per context, you can create subinterfaces of the Management interface and allocate a Management subinterface to each context. Note that the ASA 5512-X through ASA 5555-X do not allow subinterfaces on the Management interface, so for per-context management, you must connect to a data interface.

### Prerequisites

- Complete the procedures in [Chapter 6, “Starting Interface Configuration \(ASA 5510 and Higher\).”](#)
- In multiple context mode, you can only configure context interfaces that you already assigned to the context in the system configuration according to the [“Configuring Multiple Contexts” section on page 5-14](#).
- In multiple context mode, complete this procedure in the context execution space. To change from the system to a context configuration, enter the **changeto context name** command.

### Detailed Steps

|        | Command                                                                                                                                                 | Purpose                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|--------|---------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Step 1 | <pre>interface {{port-channel number   management slot/port}[.subinterface]   mapped_name}  Example: hostname(config)# interface management 0/0.1</pre> | <p>If you are not already in interface configuration mode, enters interface configuration mode for the management interface.</p> <p>The <b>port-channel number</b> argument is the EtherChannel interface ID, such as <b>port-channel 1</b>. The EtherChannel interface must have only Management member interfaces.</p> <p>Redundant interfaces do not support Management <i>slot/port</i> interfaces as members. You also cannot set a redundant interface comprised of non-Management interfaces as management-only.</p> <p>In multiple context mode, enter the <i>mapped_name</i> if one was assigned using the <b>allocate-interface</b> command.</p> |
| Step 2 | <pre>nameif name  Example: hostname(config-if)# nameif management</pre>                                                                                 | <p>Names the interface.</p> <p>The <i>name</i> is a text string up to 48 characters, and is not case-sensitive. You can change the name by reentering this command with a new value. Do not enter the <b>no</b> form, because that command causes all commands that refer to that name to be deleted.</p>                                                                                                                                                                                                                                                                                                                                                  |

|               | Command                                                                                                                                                                                                        | Purpose                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|---------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Step 3</b> | Do one of the following:                                                                                                                                                                                       |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|               | <pre><b>ip address</b> <i>ip_address</i> [<i>mask</i>] [<b>standby</b> <i>ip_address</i>]</pre> <p><b>Example:</b><br/> <pre>hostname(config-if)# ip address 10.1.1.1 255.255.255.0 standby 10.1.1.2</pre></p> | <p>Sets the IP address manually.</p> <p><b>Note</b> For use with failover, you must set the IP address and standby address manually; DHCP is not supported.</p> <p>The <i>ip_address</i> and <i>mask</i> arguments set the interface IP address and subnet mask.</p> <p>The <b>standby</b> <i>ip_address</i> argument is used for failover. See the “<a href="#">Configuring Active/Standby Failover</a>” section on page 62-7 or the “<a href="#">Configuring Active/Active Failover</a>” section on page 63-8 for more information.</p> |
|               | <pre><b>ip address dhcp</b> [<b>setroute</b>]</pre> <p><b>Example:</b><br/> <pre>hostname(config-if)# ip address dhcp</pre></p>                                                                                | <p>Obtains an IP address from a DHCP server.</p> <p>The <b>setroute</b> keyword lets the ASA use the default route supplied by the DHCP server.</p> <p>Reenter this command to reset the DHCP lease and request a new lease.</p> <p>If you do not enable the interface using the <b>no shutdown</b> command before you enter the <b>ip address dhcp</b> command, some DHCP requests might not be sent.</p>                                                                                                                                |
| <b>Step 4</b> | <pre><b>security-level</b> <i>number</i></pre> <p><b>Example:</b><br/> <pre>hostname(config-if)# security-level 50</pre></p>                                                                                   | <p>Sets the security level, where <i>number</i> is an integer between 0 (lowest) and 100 (highest).</p>                                                                                                                                                                                                                                                                                                                                                                                                                                   |

### What to Do Next

- (Optional) Configure the MAC address and the MTU. See the “[Configuring the MAC Address and MTU](#)” section on page 9-12.
- (Optional) Configure IPv6 addressing. See the “[Configuring IPv6 Addressing](#)” section on page 9-15.

## Configuring the MAC Address and MTU

This section describes how to configure MAC addresses for interfaces and how to set the MTU.

### Information About MAC Addresses

By default, the physical interface uses the burned-in MAC address, and all subinterfaces of a physical interface use the same burned-in MAC address.

A redundant interface uses the MAC address of the first physical interface that you add. If you change the order of the member interfaces in the configuration, then the MAC address changes to match the MAC address of the interface that is now listed first. If you assign a MAC address to the redundant interface using this command, then it is used regardless of the member interface MAC addresses.

For an EtherChannel, all interfaces that are part of the channel group share the same MAC address. This feature makes the EtherChannel transparent to network applications and users, because they only see the one logical connection; they have no knowledge of the individual links. The port-channel interface uses the lowest numbered channel group interface MAC address as the port-channel MAC address.

Alternatively you can manually configure a MAC address for the port-channel interface. In multiple context mode, you can automatically assign unique MAC addresses to interfaces, including an EtherChannel port interface. We recommend manually, or in multiple context mode, automatically configuring a unique MAC address in case the group channel interface membership changes. If you remove the interface that was providing the port-channel MAC address, then the port-channel MAC address changes to the next lowest numbered interface, thus causing traffic disruption.

In multiple context mode, if you share an interface between contexts, you can assign a unique MAC address to the interface in each context. This feature lets the ASA easily classify packets into the appropriate context. Using a shared interface without unique MAC addresses is possible, but has some limitations. See the [“How the ASA Classifies Packets”](#) section on page 5-3 for more information. You can assign each MAC address manually, or you can automatically generate MAC addresses for shared interfaces in contexts. See the [“Automatically Assigning MAC Addresses to Context Interfaces”](#) section on page 5-22 to automatically generate MAC addresses. If you automatically generate MAC addresses, you can use this procedure to override the generated address.

For single context mode, or for interfaces that are not shared in multiple context mode, you might want to assign unique MAC addresses to subinterfaces. For example, your service provider might perform access control based on the MAC address.

## Information About the MTU

The MTU is the maximum datagram size that is sent on a connection. Data that is larger than the MTU value is fragmented before being sent.

The ASA supports IP path MTU discovery (as defined in RFC 1191), which allows a host to dynamically discover and cope with the differences in the maximum allowable MTU size of the various links along the path. Sometimes, the ASA cannot forward a datagram because the packet is larger than the MTU that you set for the interface, but the “don't fragment” (DF) bit is set. The network software sends a message to the sending host, alerting it to the problem. The host has to fragment packets for the destination so that they fit the smallest packet size of all the links along the path.

The default MTU is 1500 bytes in a block for Ethernet interfaces. This value is sufficient for most applications, but you can pick a lower number if network conditions require it.

To enable jumbo frames, see the [“Enabling Jumbo Frame Support \(Supported Models\)”](#) section on page 6-32. A jumbo frame is an Ethernet packet larger than the standard maximum of 1518 bytes (including Layer 2 header and FCS), up to 9216 bytes. Jumbo frames require extra memory to process, and assigning more memory for jumbo frames might limit the maximum use of other features, such as access lists. To use jumbo frames, set the value higher, for example, to 9000 bytes.

## Prerequisites

- Set up your interfaces depending on your model:
  - ASA 5510 and higher—[Chapter 6, “Starting Interface Configuration \(ASA 5510 and Higher\).”](#)
  - ASA 5505—[Chapter 7, “Starting Interface Configuration \(ASA 5505\).”](#)
- In multiple context mode, you can only configure context interfaces that you already assigned to the context in the system configuration according to the [“Configuring Multiple Contexts”](#) section on page 5-14.

- In multiple context mode, complete this procedure in the context execution space. To change from the system to a context configuration, enter the **changeto context name** command.

## Detailed Steps

|               | Command                                                                                                                                                                                                                                                                                                   | Purpose                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|---------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Step 1</b> | <p>For the ASA 5510 and higher:</p> <pre>interface {{redundant number   port-channel number   physical_interface} [.subinterface]   mapped_name}</pre> <p>For the ASA 5505:</p> <pre>hostname(config)# interface vlan number</pre> <p><b>Example:</b></p> <pre>hostname(config)# interface vlan 100</pre> | <p>If you are not already in interface configuration mode, enters interface configuration mode.</p> <p>The <b>redundant number</b> argument is the redundant interface ID, such as <b>redundant 1</b>.</p> <p>The <b>port-channel number</b> argument is the EtherChannel interface ID, such as <b>port-channel 1</b>.</p> <p>See the “<a href="#">Enabling the Physical Interface and Configuring Ethernet Parameters</a>” section for a description of the physical interface ID.</p> <p>Append the <i>subinterface</i> ID to the physical or redundant interface ID separated by a period (.).</p> <p>In multiple context mode, enter the <i>mapped_name</i> if one was assigned using the <b>allocate-interface</b> command.</p> |
| <b>Step 2</b> | <pre>mac-address mac_address [standby mac_address]</pre> <p><b>Example:</b></p> <pre>hostname(config-if)# mac-address 000C.F142.4CDE</pre>                                                                                                                                                                | <p>Assigns a private MAC address to this interface. The <i>mac_address</i> is in H.H.H format, where H is a 16-bit hexadecimal digit. For example, the MAC address 00-0C-F1-42-4C-DE is entered as 000C.F142.4CDE.</p> <p>The first two bytes of a manual MAC address cannot be A2 if you also want to use auto-generated MAC addresses.</p> <p>For use with failover, set the <b>standby</b> MAC address. If the active unit fails over and the standby unit becomes active, the new active unit starts using the active MAC addresses to minimize network disruption, while the old active unit uses the standby address.</p>                                                                                                      |
| <b>Step 3</b> | <pre>mtu interface_name bytes</pre> <p><b>Example:</b></p> <pre>hostname(config)# mtu inside 9200</pre>                                                                                                                                                                                                   | <p>Sets the MTU between 300 and 65,535 bytes. The default is 1500 bytes.</p> <p><b>Note</b> When you set the MTU for a redundant or port-channel interface, the ASA applies the setting to all member interfaces.</p> <p>For models that support jumbo frames, if you enter a value for any interface that is greater than 1500, then you need to enable jumbo frame support. See the “<a href="#">Enabling Jumbo Frame Support (Supported Models)</a>” section on page 6-32.</p>                                                                                                                                                                                                                                                    |

## What to Do Next

(Optional) Configure IPv6 addressing. See the “[Configuring IPv6 Addressing](#)” section on page 9-15.

## Configuring IPv6 Addressing

This section describes how to configure IPv6 addressing. For more information about IPv6, see the “[Information About IPv6 Support](#)” section on page 21-9 and the “[IPv6 Addresses](#)” section on page B-5.

This section includes the following topics:

- [Information About IPv6, page 9-15](#)
- [Configuring a Global IPv6 Address and Other Options, page 9-17](#)

### Information About IPv6

This section includes information about how to configure IPv6, and includes the following topics:

- [IPv6 Addressing, page 9-15](#)
- [Duplicate Address Detection, page 9-15](#)
- [Modified EUI-64 Interface IDs, page 9-16](#)
- [Unsupported Commands, page 9-16](#)

### IPv6 Addressing

You can configure two types of unicast addresses for IPv6:

- **Global**—The global address is a public address that you can use on the public network. This address needs to be configured for each bridge group, and not per-interface. You can also configure a global IPv6 address for the management interface.
- **Link-local**—The link-local address is a private address that you can only use on the directly-connected network. Routers do not forward packets using link-local addresses; they are only for communication on a particular physical network segment. They can be used for address configuration or for the ND functions such as address resolution and neighbor discovery. Because the link-local address is only available on a segment, and is tied to the interface MAC address, you need to configure the link-local address per interface.

At a minimum, you need to configure a link-local address for IPv6 to operate. If you configure a global address, a link-local address is automatically configured on each interface, so you do not also need to specifically configure a link-local address. If you do not configure a global address, then you need to configure the link-local address, either automatically or manually.

**Note**

If you want to only configure the link-local addresses, see the **ipv6 enable** (to auto-configure) or **ipv6 address link-local** (to manually configure) command in the command reference.

### Duplicate Address Detection

During the stateless autoconfiguration process, duplicate address detection (DAD) verifies the uniqueness of new unicast IPv6 addresses before the addresses are assigned to interfaces (the new addresses remain in a tentative state while duplicate address detection is performed). Duplicate address detection is performed first on the new link-local address. When the link local address is verified as unique, then duplicate address detection is performed all the other IPv6 unicast addresses on the interface.

Duplicate address detection is suspended on interfaces that are administratively down. While an interface is administratively down, the unicast IPv6 addresses assigned to the interface are set to a pending state. An interface returning to an administratively up state restarts duplicate address detection for all of the unicast IPv6 addresses on the interface.

When a duplicate address is identified, the state of the address is set to DUPLICATE, the address is not used, and the following error message is generated:

```
%ASA-4-325002: Duplicate address ipv6_address/MAC_address on interface
```

If the duplicate address is the link-local address of the interface, the processing of IPv6 packets is disabled on the interface. If the duplicate address is a global address, the address is not used. However, all configuration commands associated with the duplicate address remain as configured while the state of the address is set to DUPLICATE.

If the link-local address for an interface changes, duplicate address detection is performed on the new link-local address and all of the other IPv6 address associated with the interface are regenerated (duplicate address detection is performed only on the new link-local address).

The ASA uses neighbor solicitation messages to perform duplicate address detection. By default, the number of times an interface performs duplicate address detection is 1.

## Modified EUI-64 Interface IDs

RFC 3513: Internet Protocol Version 6 (IPv6) Addressing Architecture requires that the interface identifier portion of all unicast IPv6 addresses, except those that start with binary value 000, be 64 bits long and be constructed in Modified EUI-64 format. The ASA can enforce this requirement for hosts attached to the local link.

When this feature is enabled on an interface, the source addresses of IPv6 packets received on that interface are verified against the source MAC addresses to ensure that the interface identifiers use the Modified EUI-64 format. If the IPv6 packets do not use the Modified EUI-64 format for the interface identifier, the packets are dropped and the following system log message is generated:

```
%ASA-3-325003: EUI-64 source address check failed.
```

The address format verification is only performed when a flow is created. Packets from an existing flow are not checked. Additionally, the address verification can only be performed for hosts on the local link. Packets received from hosts behind a router will fail the address format verification, and be dropped, because their source MAC address will be the router MAC address and not the host MAC address.

## Unsupported Commands

The following IPv6 commands are not supported in transparent firewall mode, because they require router capabilities:

- **ipv6 address autoconfig**
- **ipv6 nd prefix**
- **ipv6 nd ra-interval**
- **ipv6 nd ra-lifetime**
- **ipv6 nd suppress-ra**

The **ipv6 local pool VPN** command is not supported, because transparent mode does not support VPN.

## Configuring a Global IPv6 Address and Other Options

To configure a global IPv6 address and other options for a bridge group or management interface, perform the following steps.



### Note

Configuring the global address automatically configures the link-local address, so you do not need to configure it separately.

### Restrictions

The ASA does not support IPv6 anycast addresses.

### Prerequisites

- Set up your interfaces depending on your model:
  - ASA 5510 and higher—[Chapter 6, “Starting Interface Configuration \(ASA 5510 and Higher\).”](#)
  - ASA 5505—[Chapter 7, “Starting Interface Configuration \(ASA 5505\).”](#)
- In multiple context mode, you can only configure context interfaces that you already assigned to the context in the system configuration according to the [“Configuring Multiple Contexts” section on page 5-14.](#)
- In multiple context mode, complete this procedure in the context execution space. To change from the system to a context configuration, enter the **changeto context name** command.

### Detailed Steps

|        | Command                                                                                                                                                                                                        | Purpose                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|--------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Step 1 | For the bridge group:<br><pre>interface bvi bridge_group_id</pre><br>For the management interface:<br><pre>interface management_interface_id</pre><br>Example:<br><pre>hostname(config)# interface bvi 1</pre> | If you are not already in interface configuration mode, enters interface configuration mode.                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| Step 2 | <pre>ipv6 address ipv6-address/prefix-length [standby ipv6-address]</pre><br>Example:<br><pre>hostname(config-if)# ipv6 address 2001:0DB8::BA98:0:3210/48</pre>                                                | Assigns a global address to the interface. When you assign a global address, the link-local address is automatically created for the interface (for a bridge group, for each member interface).<br><b>standby</b> specifies the interface address used by the secondary unit or failover group in a failover pair.<br><b>Note</b> The <b>eui-64</b> keyword to use the Modified EUI-64 interface ID for the interface ID is not supported in transparent mode.<br>See the <a href="#">“IPv6 Addresses” section on page B-5</a> for more information about IPv6 addressing. |

|        | Command                                                                                                                      | Purpose                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|--------|------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Step 3 | (Optional)<br><code>ipv6 nd suppress-ra</code><br><br><b>Example:</b><br>hostname(config-if)# ipv6 nd suppress-ra            | Suppresses Router Advertisement messages on an interface. By default, Router Advertisement messages are automatically sent in response to router solicitation messages. You may want to disable these messages on any interface for which you do not want the ASA to supply the IPv6 prefix (for example, the outside interface).                                                                                                                                                                                                                                                                             |
| Step 4 | (Optional)<br><code>ipv6 nd dad attempts value</code><br><br><b>Example:</b><br>hostname(config-if)# ipv6 nd dad attempts 3  | Changes the number of duplicate address detection attempts. The <i>value</i> argument can be any value from 0 to 600. Setting the <i>value</i> argument to 0 disables duplicate address detection on the interface.<br><br>By default, the number of times an interface performs duplicate address detection is 1. See the <a href="#">“Duplicate Address Detection” section on page 9-15</a> for more information.                                                                                                                                                                                           |
| Step 5 | (Optional)<br><code>ipv6 nd ns-interval value</code><br><br><b>Example:</b><br>hostname(config-if)# ipv6 nd ns-interval 2000 | Changes the neighbor solicitation message interval. When you configure an interface to send out more than one duplicate address detection attempt with the <code>ipv6 nd dad attempts</code> command, this command configures the interval at which the neighbor solicitation messages are sent out. By default, they are sent out once every 1000 milliseconds. The <i>value</i> argument can be from 1000 to 3600000 milliseconds.<br><br><b>Note</b> Changing this value changes it for all neighbor solicitation messages sent out on the interface, not just those used for duplicate address detection. |
| Step 6 | (Optional)<br><code>ipv6 enforce-eui64 if_name</code><br><br><b>Example:</b><br>hostname(config)# ipv6 enforce-eui64 inside  | Enforces the use of Modified EUI-64 format interface identifiers in IPv6 addresses on a local link.<br><br>The <i>if_name</i> argument is the name of the interface, as specified by the <code>nameif</code> command, on which you are enabling the address format enforcement.<br><br>See the <a href="#">“Modified EUI-64 Interface IDs” section on page 9-16</a> for more information.                                                                                                                                                                                                                     |

## Allowing Same Security Level Communication

By default, interfaces on the same security level cannot communicate with each other, and packets cannot enter and exit the same interface. This section describes how to enable inter-interface communication when interfaces are on the same security level.

### Information About Inter-Interface Communication

Allowing interfaces on the same security level to communicate with each other is useful if you want traffic to flow freely between all same security interfaces without access lists.

If you enable same security interface communication, you can still configure interfaces at different security levels as usual.

## Detailed Steps

| Command                                                   | Purpose                                                                                     |
|-----------------------------------------------------------|---------------------------------------------------------------------------------------------|
| <code>same-security-traffic permit inter-interface</code> | Enables interfaces on the same security level so that they can communicate with each other. |

## Monitoring Interfaces

To monitor interfaces, enter one of the following commands:

| Command                              | Purpose                                     |
|--------------------------------------|---------------------------------------------|
| <code>show interface</code>          | Displays interface statistics.              |
| <code>show interface ip brief</code> | Displays interface IP addresses and status. |
| <code>show bridge-group</code>       | Shows bridge group information.             |

## Configuration Examples for Interfaces in Transparent Mode

The following example includes two bridge groups of three interfaces each, plus a management-only interface:

```

interface gigabitethernet 0/0
 nameif inside1
 security-level 100
 bridge-group 1
 no shutdown
interface gigabitethernet 0/1
 nameif outside1
 security-level 0
 bridge-group 1
 no shutdown
interface gigabitethernet 0/2
 nameif dmz1
 security-level 50
 bridge-group 1
 no shutdown
interface bvi 1
 ip address 10.1.3.1 255.255.255.0 standby 10.1.3.2

interface gigabitethernet 1/0
 nameif inside2
 security-level 100
 bridge-group 2
 no shutdown
interface gigabitethernet 1/1
 nameif outside2
 security-level 0
 bridge-group 2
 no shutdown
interface gigabitethernet 1/2
 nameif dmz2
 security-level 50
 bridge-group 2

```

```

no shutdown
interface bvi 2
 ip address 10.3.5.8 255.255.255.0 standby 10.3.5.9

interface management 0/0
 nameif mgmt
 security-level 100
 ip address 10.2.1.1 255.255.255.0 standby 10.2.1.2
no shutdown

```

## Feature History for Interfaces in Transparent Mode

Table 9-1 lists each feature change and the platform release in which it was implemented.

**Table 9-1** Feature History for Interfaces in Transparent Mode

| Feature Name                                                    | Platform Releases | Feature Information                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|-----------------------------------------------------------------|-------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Increased VLANs                                                 | 7.0(5)            | <p>Increased the following limits:</p> <ul style="list-style-type: none"> <li>ASA5510 Base license VLANs from 0 to 10.</li> <li>ASA5510 Security Plus license VLANs from 10 to 25.</li> <li>ASA5520 VLANs from 25 to 100.</li> <li>ASA5540 VLANs from 100 to 200.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| Increased VLANs                                                 | 7.2(2)            | <p>The maximum number of VLANs for the Security Plus license on the ASA 5505 was increased from 5 (3 fully functional; 1 failover; one restricted to a backup interface) to 20 fully functional interfaces. In addition, the number of trunk ports was increased from 1 to 8. Now there are 20 fully functional interfaces, you do not need to use the backup interface command to cripple a backup ISP interface; you can use a fully-functional interface for it. The backup interface command is still useful for an Easy VPN configuration.</p> <p>VLAN limits were also increased for the ASA 5510 (from 10 to 50 for the Base license, and from 25 to 100 for the Security Plus license), the ASA 5520 (from 100 to 150), the ASA 5550 (from 200 to 250).</p> |
| Gigabit Ethernet Support for the ASA 5510 Security Plus License | 7.2(3)            | <p>The ASA 5510 now supports GE (Gigabit Ethernet) for port 0 and 1 with the Security Plus license. If you upgrade the license from Base to Security Plus, the capacity of the external Ethernet0/0 and Ethernet0/1 ports increases from the original FE (Fast Ethernet) (100 Mbps) to GE (1000 Mbps). The interface names will remain Ethernet 0/0 and Ethernet 0/1. Use the <b>speed</b> command to change the speed on the interface and use the <b>show interface</b> command to see what speed is currently configured for each interface.</p>                                                                                                                                                                                                                 |

Table 9-1 Feature History for Interfaces in Transparent Mode (continued)

| Feature Name                                                                             | Platform Releases | Feature Information                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|------------------------------------------------------------------------------------------|-------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Native VLAN support for the ASA 5505                                                     | 7.2(4)/8.0(4)     | You can now include the native VLAN in an ASA 5505 trunk port.<br><br>We introduced the following command: <b>switchport trunk native vlan</b> .                                                                                                                                                                                                                                                                                                                                                      |
| Jumbo packet support for the ASA 5580                                                    | 8.1(1)            | The Cisco ASA 5580 supports jumbo frames. A jumbo frame is an Ethernet packet larger than the standard maximum of 1518 bytes (including Layer 2 header and FCS), up to 9216 bytes. You can enable support for jumbo frames for all interfaces by increasing the amount of memory to process Ethernet frames. Assigning more memory for jumbo frames might limit the maximum use of other features, such as access lists.<br><br>We introduced the following command: <b>jumbo-frame reservation</b> . |
| Increased VLANs for the ASA 5580                                                         | 8.1(2)            | The number of VLANs supported on the ASA 5580 are increased from 100 to 250.                                                                                                                                                                                                                                                                                                                                                                                                                          |
| IPv6 support for transparent mode                                                        | 8.2(1)            | IPv6 support was introduced for transparent firewall mode.                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| Support for Pause Frames for Flow Control on the ASA 5580 10-Gigabit Ethernet Interfaces | 8.2(2)            | You can now enable pause (XOFF) frames for flow control.<br><br>We introduced the following command: <b>flowcontrol</b> .                                                                                                                                                                                                                                                                                                                                                                             |
| Bridge groups for transparent mode                                                       | 8.4(1)            | If you do not want the overhead of security contexts, or want to maximize your use of security contexts, you can group interfaces together in a bridge group, and then configure multiple bridge groups, one for each network. Bridge group traffic is isolated from other bridge groups. You can configure up to eight bridge groups of four interfaces each in single mode or per context.<br><br>We introduced the following commands: <b>interface bvi</b> , <b>show bridge-group</b> .           |





## **PART 4**

### **Configuring Basic Settings**





# CHAPTER 10

## Configuring Basic Settings

---

This chapter describes how to configure basic settings on your ASA that are typically required for a functioning configuration. This chapter includes the following sections:

- [Configuring the Hostname, Domain Name, and Passwords, page 10-1](#)
- [Setting the Date and Time, page 10-3](#)
- [Configuring the Master Passphrase, page 10-6](#)
- [Configuring the DNS Server, page 10-11](#)

## Configuring the Hostname, Domain Name, and Passwords

This section describes how to change the device name and passwords, and includes the following topics:

- [Changing the Login Password, page 10-1](#)
- [Changing the Enable Password, page 10-2](#)
- [Setting the Hostname, page 10-2](#)
- [Setting the Domain Name, page 10-3](#)

## Changing the Login Password

To change the login password, enter the following command:

| Command                                   | Purpose                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|-------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>{passwd   password} password</code> | <p>Changes the login password. The login password is used for Telnet and SSH connections. The default login password is “cisco.”</p> <p>You can enter <b>passwd</b> or <b>password</b>. The password is a case-sensitive password of up to 16 alphanumeric and special characters. You can use any character in the password except a question mark or a space.</p> <p>The password is saved in the configuration in encrypted form, so you cannot view the original password after you enter it. Use the <b>no password</b> command to restore the password to the default setting.</p> |

## Changing the Enable Password

To change the enable password, enter the following command:

| Command                                                                                                                  | Purpose                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|--------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p><b>enable password</b> <i>password</i></p> <p><b>Example:</b><br/> <pre>hostname(config)# passwd Pa\$\$w0rd</pre></p> | <p>Changes the enable password, which lets you enter privileged EXEC mode. By default, the enable password is blank.</p> <p>The <i>password</i> argument is a case-sensitive password of up to 16 alphanumeric and special characters. You can use any character in the password except a question mark or a space.</p> <p>This command changes the password for the highest privilege level. If you configure local command authorization, you can set enable passwords for each privilege level from 0 to 15.</p> <p>The password is saved in the configuration in encrypted form, so you cannot view the original password after you enter it. Enter the <b>enable password</b> command without a password to set the password to the default, which is blank.</p> |

## Setting the Hostname

To set the hostname, enter the following command:

| Command                                                                                                                         | Purpose                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|---------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p><b>hostname</b> <i>name</i></p> <p><b>Example:</b><br/> <pre>hostname(config)# hostname farscape farscape(config)#</pre></p> | <p>Specifies the hostname for the ASA or for a context.</p> <p>This name can be up to 63 characters. A hostname must start and end with a letter or digit, and have as interior characters only letters, digits, or a hyphen.</p> <p>When you set a hostname for the ASA, that name appears in the command line prompt. If you establish sessions to multiple devices, the hostname helps you keep track of where you enter commands. The default hostname depends on your platform.</p> <p>For multiple context mode, the hostname that you set in the system execution space appears in the command line prompt for all contexts. The hostname that you optionally set within a context does not appear in the command line, but can be used by the <b>banner</b> command <b>\$(hostname)</b> token.</p> |

## Setting the Domain Name

To set the domain name, enter the following command:

| Command                                                                                            | Purpose                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|----------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>domain-name</b> <i>name</i><br><br><b>Example:</b><br>hostname(config)# domain-name example.com | Specifies the domain name for the ASA.<br><br>The ASA appends the domain name as a suffix to unqualified names. For example, if you set the domain name to “example.com,” and specify a syslog server by the unqualified name of “jupiter,” then the ASA qualifies the name to “jupiter.example.com.”<br><br>The default domain name is default.domain.invalid.<br><br>For multiple context mode, you can set the domain name for each context, as well as within the system execution space. |

## Setting the Date and Time

This section includes the following topics:

- [Setting the Time Zone and Daylight Saving Time Date Range, page 10-3](#)
- [Setting the Date and Time Using an NTP Server, page 10-4](#)
- [Setting the Date and Time Manually, page 10-6](#)

## Setting the Time Zone and Daylight Saving Time Date Range

To change the time zone and daylight saving time date range, perform the following steps:

|               | Command                                                                                                                                                                                                                                 | Purpose                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|---------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Step 1</b> | <b>clock timezone</b> <i>zone</i><br>[-] <i>hours</i> [ <i>minutes</i> ]<br><br><b>Example:</b><br>hostname(config)# clock<br>timezone PST -8                                                                                           | Sets the time zone. By default, the time zone is UTC and the daylight saving time date range is from 2:00 a.m. on the first Sunday in April to 2:00 a.m. on the last Sunday in October.<br><br>Where <i>zone</i> specifies the time zone as a string, for example, <b>PST</b> for Pacific Standard Time.<br><br>The [-] <i>hours</i> value sets the number of hours of offset from UTC. For example, PST is <b>-8</b> hours.<br><br>The <i>minutes</i> value sets the number of minutes of offset from UTC. |
| <b>Step 2</b> | To change the date range for daylight saving time from the default, enter one of the following commands. The default recurring date range is from 2:00 a.m. on the second Sunday in March to 2:00 a.m. on the first Sunday in November. |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |

| Command                                                                                                                                                                                                                 | Purpose                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <pre>clock summer-time zone date {day month   month day} year hh:mm {day month   month day} year hh:mm [offset]</pre> <p><b>Example:</b></p> <pre>hostname(config)# clock summer-time PDT 1 April 2010 2:00 60</pre>    | <p>Sets the start and end dates for daylight saving time as a specific date in a specific year. If you use this command, you need to reset the dates every year.</p> <p>The <i>zone</i> value specifies the time zone as a string, for example, <b>PDT</b> for Pacific Daylight Time.</p> <p>The <i>day</i> value sets the day of the month, from 1 to 31. You can enter the day and month as <b>April 1</b> or as <b>1 April</b>, for example, depending on your standard date format.</p> <p>The <i>month</i> value sets the month as a string. You can enter the day and month as <b>April 1</b> or as <b>1 April</b>, depending on your standard date format.</p> <p>The <i>year</i> value sets the year using four digits, for example, <b>2004</b>. The year range is 1993 to 2035.</p> <p>The <i>hh:mm</i> value sets the hour and minutes in 24-hour time.</p> <p>The <i>offset</i> value sets the number of minutes to change the time for daylight saving time. By default, the value is 60 minutes.</p> |
| <pre>clock summer-time zone recurring [week weekday month hh:mm week weekday month hh:mm] [offset]</pre> <p><b>Example:</b></p> <pre>hostname(config)# clock summer-time PDT recurring first Monday April 2:00 60</pre> | <p>Specifies the start and end dates for daylight saving time, in the form of a day and time of the month, and not a specific date in a year.</p> <p>This command enables you to set a recurring date range that you do not need to change yearly.</p> <p>The <i>zone</i> value specifies the time zone as a string, for example, <b>PDT</b> for Pacific Daylight Time.</p> <p>The <i>week</i> value specifies the week of the month as an integer between 1 and 4 or as the words <b>first</b> or <b>last</b>. For example, if the day might fall in the partial fifth week, then specify <b>last</b>.</p> <p>The <i>weekday</i> value specifies the day of the week: <b>Monday, Tuesday, Wednesday</b>, and so on.</p> <p>The <i>month</i> value sets the month as a string.</p> <p>The <i>hh:mm</i> value sets the hour and minutes in 24-hour time.</p> <p>The <i>offset</i> value sets the number of minutes to change the time for daylight savings time. By default, the value is 60 minutes.</p>           |

## Setting the Date and Time Using an NTP Server

To obtain the date and time from an NTP server, perform the following steps:

### Detailed Steps

|        | Command                                                                                          | Purpose                                    |
|--------|--------------------------------------------------------------------------------------------------|--------------------------------------------|
| Step 1 | <pre>ntp authenticate</pre> <p><b>Example:</b></p> <pre>hostname(config)# ntp authenticate</pre> | Enables authentication with an NTP server. |

|                      |                                                                                                                                                               |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|----------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p><b>Step 2</b></p> | <pre>ntp trusted-key key_id</pre> <p><b>Example:</b><br/>hostname(config)# ntp trusted-key 1 </p>                                                             | <p>Specifies an authentication key ID to be a trusted key, which is required for authentication with an NTP server.</p> <p>The <i>key_id</i> argument is a value between 1 and 4294967295. You can enter multiple trusted keys for use with multiple servers.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <p><b>Step 3</b></p> | <pre>ntp authentication-key key_id md5 key</pre> <p><b>Example:</b><br/>hostname(config)# ntp authentication-key 1 md5 aNiceKey </p>                          | <p>Sets a key to authenticate with an NTP server.</p> <p>The <i>key_id</i> argument is the ID you set in <a href="#">Step 2</a> using the <b>ntp trusted-key</b> command, and the <i>key</i> argument is a string up to 32 characters long.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <p><b>Step 4</b></p> | <pre>ntp server ip_address [key key_id] [source interface_name] [prefer]</pre> <p><b>Example:</b><br/>hostname(config)# ntp server 10.1.1.1 key 1 prefer </p> | <p>Identifies an NTP server.</p> <p>The <i>key_id</i> argument is the ID you set in <a href="#">Step 2</a> using the <b>ntp trusted-key</b> command.</p> <p>The <b>source interface_name</b> keyword-argument pair identifies the outgoing interface for NTP packets if you do not want to use the default interface in the routing table. Because the system does not include any interfaces in multiple context mode, specify an interface name defined in the admin context.</p> <p>The <b>prefer</b> keyword sets this NTP server as the preferred server if multiple servers have similar accuracy. NTP uses an algorithm to determine which server is the most accurate and synchronizes to that one. If servers are of similar accuracy, then the <b>prefer</b> keyword specifies which of those servers to use. However, if a server is significantly more accurate than the preferred one, the ASA uses the more accurate one. For example, the ASA uses a server of stratum 2 over a server of stratum 3 that is preferred.</p> <p>You can identify multiple servers; the ASA uses the most accurate server.</p> <p><b>Note</b> In multiple context mode, set the time in the system configuration only.</p> |

## Setting the Date and Time Manually

To set the date and time manually, perform the following steps:

### Detailed Steps

| Command                                                                                                                         | Purpose                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|---------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <pre>clock set hh:mm:ss {month day   day month} year</pre> <p><b>Example:</b><br/>hostname# clock set 20:54:00 april 1 2004</p> | <p>Sets the date time manually.</p> <p>The <i>hh:mm:ss</i> argument sets the hour, minutes, and seconds in 24-hour time. For example, enter <b>20:54:00</b> for 8:54 pm.</p> <p>The <i>day</i> value sets the day of the month, from 1 to 31. You can enter the day and month as <b>april 1</b> or as <b>1 april</b>, for example, depending on your standard date format.</p> <p>The <i>month</i> value sets the month. Depending on your standard date format, you can enter the day and month as <b>april 1</b> or as <b>1 april</b>.</p> <p>The <i>year</i> value sets the year using four digits, for example, <b>2004</b>. The year range is from 1993 to 2035.</p> <p>The default time zone is UTC. If you change the time zone after you enter the <b>clock set</b> command using the <b>clock timezone</b> command, the time automatically adjusts to the new time zone.</p> <p>This command sets the time in the hardware chip, and does not save the time in the configuration file. This time endures reboots. Unlike the other <b>clock</b> commands, this command is a privileged EXEC command. To reset the clock, you need to set a new time with the <b>clock set</b> command.</p> |

## Configuring the Master Passphrase

This section describes how to configure the master passphrase and includes the following topics:

- [Information About the Master Passphrase, page 10-6](#)
- [Licensing Requirements for the Master Passphrase, page 10-7](#)
- [Guidelines and Limitations, page 10-7](#)
- [Adding or Changing the Master Passphrase, page 10-7](#)
- [Disabling the Master Passphrase, page 10-9](#)
- [Recovering the Master Passphrase, page 10-10](#)
- [Feature History for the Master Passphrase, page 10-11](#)

## Information About the Master Passphrase

The master passphrase feature allows you to securely store plain text passwords in encrypted format. The master passphrase provides a key that is used to universally encrypt or mask all passwords, without changing any functionality. Features that implement the master passphrase include the following:

- OSPF

- EIGRP
- VPN load balancing
- VPN (remote access and site-to-site)
- Failover
- AAA servers
- Logging
- Shared licenses

## Licensing Requirements for the Master Passphrase

| Model      | License Requirement |
|------------|---------------------|
| All models | Base License.       |

## Guidelines and Limitations

This section includes the guidelines and limitations for this feature.

### Context Mode Guidelines

Supported in single and multiple context mode.

## Adding or Changing the Master Passphrase

This section describes how to add or change the master passphrase.

### Prerequisites

- If failover is enabled but no failover shared key is set, an error message appears if you change the master passphrase, informing you that you must enter a failover shared key to protect the master passphrase changes from being sent as plain text.
- This procedure will only be accepted in a secure session, for example by console, SSH, or ASDM via HTTPS.

To add or change the master passphrase, perform the following steps:

## Detailed Steps

|        | Command                                                                                                                                                                                                                                                           | Purpose                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|--------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Step 1 | <p><b>key config-key password-encryption</b><br/>[<i>new_passphrase</i> [<i>old_passphrase</i>]]</p> <p><b>Example:</b><br/>hostname(config)# key config-key<br/>password-encryption<br/>Old key: bumblebee<br/>New key: haverford<br/>Confirm key: haverford</p> | <p>Sets the passphrase used for generating the encryption key. The passphrase must be between 8 and 128 characters long. All characters except a back space and double quotes are accepted for the passphrase.</p> <p>If you do not enter the new passphrase in the command, you are prompted for it.</p> <p>When you want to change the passphrase, you also have to enter the old passphrase.</p> <p>See the “Examples” section on page 10-9 for examples of the interactive prompts.</p> <p><b>Note</b> Use the interactive prompts to enter passwords to avoid having the passwords logged in the command history buffer.</p> <p>Use the <b>no key config-key password-encrypt</b> command with caution, because it changes the encrypted passwords into plain text passwords. You can use the <b>no</b> form of this command when downgrading to a software version that does not support password encryption.</p> |
| Step 2 | <p><b>password encryption aes</b></p> <p><b>Example:</b><br/>hostname(config)# password encryption aes</p>                                                                                                                                                        | <p>Enables password encryption. As soon as password encryption is turned on and the master passphrase is available, all the user passwords will be encrypted. The running configuration will show the passwords in the encrypted format.</p> <p>If the passphrase is not configured at the time that password encryption is enabled, the command will succeed in anticipation that the passphrase will be available in the future.</p> <p>If you later disable password encryption using the <b>no password encryption aes</b> command, all existing encrypted passwords are left unchanged, and as long as the master passphrase exists, the encrypted passwords will be decrypted, as required by the application.</p>                                                                                                                                                                                                |
| Step 3 | <p><b>write memory</b></p> <p><b>Example:</b><br/>hostname(config)# write memory</p>                                                                                                                                                                              | <p>Saves the runtime value of the master passphrase and the resulting configuration. If you do not enter this command, passwords in startup configuration may still be visible if they were not saved with encryption before.</p> <p>In addition, in multiple context mode the master passphrase is changed in the system context configuration. As a result, the passwords in all contexts will be affected. If the <b>write memory</b> command is not entered in the system context mode, but not in all user contexts, then the encrypted passwords in user contexts may be stale. Alternatively, use the <b>write memory all</b> command in the system context to save all configurations.</p>                                                                                                                                                                                                                      |

## Examples

In the following configuration example, no previous key is present:

```
hostname (config)# key config-key password-encryption 12345678
```

In the following configuration example, a key already exists:

```
Hostname (config)# key config-key password-encryption 23456789
Old key: 12345678
hostname (config)#
```

In the following configuration example, you want to key in interactively, but a key already exists. The Old key, New key, and Confirm key prompts will appear on your screen if you enter the **key config-key password-encryption** command and press **Enter** to access interactive mode.

```
hostname (config)# key config-key password-encryption
Old key: 12345678
New key: 23456789
Confirm key: 23456789
```

In the following example, you want to key in interactively, but no key is present. The New key and Confirm key prompts will appear on your screen if you are in interactive mode.

```
hostname (config)# key config-key password-encryption
New key: 12345678
Confirm key: 12345678
```

## Disabling the Master Passphrase

Disabling the master passphrase reverts encrypted passwords into plain text passwords. Removing the passphrase might be useful if you downgrade to a previous software version that does not support encrypted passwords.

### Prerequisites

- You must know the current master passphrase to disable it. If you do not know the passphrase, see the [“Recovering the Master Passphrase”](#) section on page 10-10.
- This procedure will only be accepted in a secure session, that is, by Telnet, SSH, or ASDM via HTTPS.

## Detailed Steps

|        | Command                                                                                                                                                                                                                                                                                                                                                                                                                 | Purpose                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|--------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Step 1 | <p><b>no key config-key password-encryption</b><br/>[old_passphrase]]</p> <p><b>Example:</b><br/>hostname(config)# no key config-key<br/>password-encryption</p> <p>Warning! You have chosen to revert the encrypted passwords to plain text. This operation will expose passwords in the configuration and therefore exercise caution while viewing, storing, and copying configuration.</p> <p>Old key: bumblebee</p> | <p>Removes the master passphrase.</p> <p>If you do not enter the passphrase in the command, you are prompted for it.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| Step 2 | <p><b>write memory</b></p> <p><b>Example:</b><br/>hostname(config)# write memory</p>                                                                                                                                                                                                                                                                                                                                    | <p>Saves the run time value of the master passphrase and the resulting configuration. The non-volatile memory containing the passphrase will be erased and overwritten with the 0xFF pattern.</p> <p>In multiple mode the master passphrase is changed in the system context configuration. As a result the passwords in all contexts will be affected. If the <b>write memory</b> command is not entered in the system context mode, but not in all user contexts, then the encrypted passwords in user contexts may be stale. Alternatively, use the <b>write memory all</b> command in the system context to save all configurations.</p> |

## Recovering the Master Passphrase

You cannot recover the master passphrase.

If the master passphrase is lost or unknown, you can remove it using the **write erase** command followed by the **reload** command. These commands remove the master key and the configuration that includes the encrypted passwords.

## Feature History for the Master Passphrase

Table 10-1 lists each feature change and the platform release in which it was implemented.

**Table 10-1** Feature History for the Master Passphrase

| Feature Name                   | Platform Releases | Feature Information                                                                                                                                                                                                                                                                            |
|--------------------------------|-------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Master Passphrase              | 8.3(1)            | This feature was introduced.<br><br>We introduced the following commands: <b>key config-key password-encryption</b> , <b>password encryption aes</b> , <b>clear configure password encryption aes</b> , <b>show running-config password encryption aes</b> , <b>show password encryption</b> . |
| Password Encryption Visibility | 8.4(1)            | We modified the <b>show password encryption</b> command.                                                                                                                                                                                                                                       |

## Configuring the DNS Server

Some ASA features require use of a DNS server to access external servers by domain name; for example, the Botnet Traffic Filter feature requires a DNS server to access the dynamic database server and to resolve entries in the static database. Other features, such as the **ping** or **traceroute** command, let you enter a name that you want to ping or traceroute, and the ASA can resolve the name by communicating with a DNS server. Many SSL VPN and certificate commands also support names.



### Note

The ASA has limited support for using the DNS server, depending on the feature. For example, most commands require you to enter an IP address and can only use a name when you manually configure the **name** command to associate a name with an IP address and enable use of the names using the **names** command.

For information about dynamic DNS, see the “[Configuring DDNS](#)” section on page 12-2.

### Prerequisites

Make sure that you configure the appropriate routing for any interface on which you enable DNS domain lookup so you can reach the DNS server. See the “[Information About Routing](#)” section on page 21-1 for more information about routing.

### Detailed Steps

|        | Command                                                                                                               | Purpose                                                                                               |
|--------|-----------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------|
| Step 1 | <code>dns domain-lookup interface_name</code><br><br><b>Example:</b><br>hostname(config)# dns domain-lookup<br>inside | Enables the ASA to send DNS requests to a DNS server to perform a name lookup for supported commands. |

|               |                                                                                                                                                                                    |                                                                                                                                                                                                                                           |
|---------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Step 2</b> | <pre>dns server-group DefaultDNS</pre> <p><b>Example:</b><br/>hostname(config)# dns server-group DefaultDNS </p>                                                                   | <p>Specifies the DNS server group that the ASA uses for outgoing requests.</p> <p>Other DNS server groups can be configured for VPN tunnel groups. See the <b>tunnel-group</b> command in the command reference for more information.</p> |
| <b>Step 3</b> | <pre>name-server ip_address [ip_address2] [...] [ip_address6]</pre> <p><b>Example:</b><br/>hostname(config-dns-server-group)# name-server 10.1.1.5 192.168.1.67 209.165.201.6 </p> | <p>Specifies one or more DNS servers. You can enter all six IP addresses in the same command, separated by spaces, or you can enter each command separately. The ASA tries each DNS server in order until it receives a response.</p>     |

## Monitoring DNS Cache

The ASA provides a local cache of DNS information from external DNS queries that are sent for certain clientless SSL VPN and certificate commands. Each DNS translation request is first looked for in the local cache. If the local cache has the information, the resulting IP address is returned. If the local cache can not resolve the request, a DNS query is sent to the various DNS servers that have been configured. If an external DNS server resolves the request, the resulting IP address is stored in the local cache with its corresponding hostname.

## DNS Cache Monitoring Commands

To monitor the DNS cache, enter the following command:

| Command                     | Purpose                                                                                                                                                           |
|-----------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>show dns-hosts</code> | Show the DNS cache, which includes dynamically learned entries from a DNS server as well as manually entered name and IP addresses using the <b>name</b> command. |

## Feature History for DNS Cache

Table 2 lists each feature change and the platform release in which it was implemented.

**Table 2** Feature History for DNS Cache

| Feature Name | Platform Releases | Feature Information                                                                                                                                   |
|--------------|-------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------|
| DNS Cache    | 7.0(1)            | DNS cache stores responses that allow a DNS server to respond more quickly to queries.<br>We introduced the following command: <b>show dns host</b> . |



# CHAPTER 11

## Configuring DHCP

---

This chapter describes how to configure the DHCP server and includes the following sections:

- [Information About DHCP, page 11-1](#)
- [Licensing Requirements for DHCP, page 11-1](#)
- [Guidelines and Limitations, page 11-2](#)
- [Configuring a DHCP Server, page 11-2](#)
- [Configuring DHCP Relay Services, page 11-7](#)
- [DHCP Monitoring Commands, page 11-8](#)
- [Feature History for DHCP, page 11-8](#)

### Information About DHCP

DHCP provides network configuration parameters, such as IP addresses, to DHCP clients. The ASA can provide a DHCP server or DHCP relay services to DHCP clients attached to ASA interfaces. The DHCP server provides network configuration parameters directly to DHCP clients. DHCP relay passes DHCP requests received on one interface to an external DHCP server located behind a different interface.

### Licensing Requirements for DHCP

[Table 11-1](#) shows the licensing requirements for DHCP.

**Table 11-1**     *Licensing Requirements*

| Model      | License Requirement |
|------------|---------------------|
| All models | Base License.       |

For the ASA 5505, the maximum number of DHCP client addresses varies depending on the license:

- If the limit is 10 hosts, the maximum available DHCP pool is 32 addresses.
- If the limit is 50 hosts, the maximum available DHCP pool is 128 addresses.
- If the number of hosts is unlimited, the maximum available DHCP pool is 256 addresses.

**Note**

By default, the ASA 5505 ships with a 10-user license.

## Guidelines and Limitations

Use the following guidelines to configure the DHCP server:

- You can configure a DHCP server on each interface of the ASA. Each interface can have its own pool of addresses to draw from. However the other DHCP settings, such as DNS servers, domain name, options, ping timeout, and WINS servers, are configured globally and used by the DHCP server on all interfaces.
- You cannot configure a DHCP client or DHCP relay services on an interface on which the server is enabled. Additionally, DHCP clients must be directly connected to the interface on which the server is enabled.
- The ASA does not support QIP DHCP servers for use with DHCP proxy.
- The relay agent cannot be enabled if the DHCP server is also enabled.
- When it receives a DHCP request, the ASA sends a discovery message to the DHCP server. This message includes the IP address (within a subnet) configured with the **dhcp-network-scope** command in the group policy. If the server has an address pool that falls within that subnet, the server sends the offer message with the pool information to the IP address—not to the source IP address of the discovery message.
- For example, if the server has a pool in the range of 209.165.200.225 to 209.165.200.254, mask 255.255.255.0, and the IP address specified by the **dhcp-network-scope** command is 209.165.200.1, the server sends that pool in the offer message to the ASA.

### Failover Guidelines

Supports Active/Active and Active/Standby failover.

### Firewall Mode Guidelines

Supported in routed and transparent firewall modes.

### Context Mode Guidelines

Supported in single mode and multiple context mode.

## Configuring a DHCP Server

This section describes how to configure a DHCP server provided by the ASA and includes the following topics:

- [Enabling the DHCP Server, page 11-3](#)
- [Configuring DHCP Options, page 11-4](#)
- [Using Cisco IP Phones with a DHCP Server, page 11-6](#)
- [DHCP Monitoring Commands, page 11-8](#)

## Enabling the DHCP Server

The ASA can act as a DHCP server. DHCP is a protocol that provides network settings to hosts, including the host IP address, the default gateway, and a DNS server.


**Note**

The ASA DHCP server does not support BOOTP requests. In multiple context mode, you cannot enable the DHCP server or DHCP relay on an interface that is used by more than one context.

To enable the DHCP server on a ASA interface, perform the following steps:

|               | Command                                                                                                                                                              | Purpose                                                                                                                                                                                                                                                                                        |
|---------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Step 1</b> | <b>dhcpd address</b> <i>ip_address-ip_address</i><br><i>interface_name</i><br><br><b>Example:</b><br>hostname(config)# dhcpd address<br>10.0.1.101-10.0.1.110 inside | Create a DHCP address pool. The ASA assigns a client one of the addresses from this pool to use for a given length of time. These addresses are the local, untranslated addresses for the directly connected network.<br><br>The address pool must be on the same subnet as the ASA interface. |
| <b>Step 2</b> | <b>dhcpd dns</b> <i>dns1</i> [ <i>dns2</i> ]<br><br><b>Example:</b><br>hostname(config)# dhcpd dns 209.165.201.2<br>209.165.202.129                                  | (Optional) Specifies the IP address(es) of the DNS server(s).                                                                                                                                                                                                                                  |
| <b>Step 3</b> | <b>dhcpd wins</b> <i>wins1</i> [ <i>wins2</i> ]<br><br><b>Example:</b><br>hostname(config)# dhcpd wins 209.165.201.5                                                 | (Optional) Specifies the IP address(es) of the WINS server(s). You can specify up to two WINS servers.                                                                                                                                                                                         |
| <b>Step 4</b> | <b>dhcpd lease</b> <i>lease_length</i><br><br><b>Example:</b><br>hostname(config)# dhcpd lease 3000                                                                  | (Optional) Change the lease length to be granted to the client. This lease equals the amount of time (in seconds) the client can use its allocated IP address before the lease expires. Enter a value between 0 to 1,048,575. The default value is 3600 seconds.                               |
| <b>Step 5</b> | <b>dhcpd domain</b> <i>domain_name</i><br><br><b>Example:</b><br>hostname(config)# dhcpd domain example.com                                                          | (Optional) Configures the domain name.                                                                                                                                                                                                                                                         |
| <b>Step 6</b> | <b>dhcpd ping_timeout</b> <i>milliseconds</i><br><br><b>Example:</b><br>hostname(config)# dhcpd ping timeout 20                                                      | (Optional) Configures the DHCP ping timeout value. To avoid address conflicts, the ASA sends two ICMP ping packets to an address before assigning that address to a DHCP client. This command specifies the timeout value for those packets.                                                   |

|               | Command                                                                                                           | Purpose                                                                                                                                                                                                                                                                                                          |
|---------------|-------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Step 7</b> | <code>dhcpd option 3 ip gateway_ip</code><br><br><b>Example:</b><br>hostname(config)# dhcpd option 3 ip 10.10.1.1 | Defines a default gateway that is sent to DHCP clients. If you do not use the <b>dhcpd option 3</b> command to define the default gateway, DHCP clients use the IP address of the management interface. As a result, the DHCP ACK does not include this option. The management interface does not route traffic. |
| <b>Step 8</b> | <code>dhcpd enable interface_name</code><br><br><b>Example:</b><br>hostname(config)# dhcpd enable outside         | Enables the DHCP daemon within the ASA to listen for DHCP client requests on the enabled interface.                                                                                                                                                                                                              |

## Configuring DHCP Options

You can configure the ASA to send information for the DHCP options listed in RFC 2132. The DHCP options include the following three categories:

- [Options that Return an IP Address, page 11-4](#)
- [Options that Return a Text String, page 11-4](#)
- [Options that Return a Hexadecimal Value, page 11-5](#)

The ASA supports all three categories. To configure a DHCP option, choose one of the following commands:

### Options that Return an IP Address

| Command                                                                                                                             | Purpose                                                        |
|-------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------|
| <code>dhcpd option code ip addr_1 [addr_2]</code><br><br><b>Example:</b><br>hostname(config)# dhcpd option 2 ip 10.10.1.1 10.10.1.2 | Configures a DHCP option that returns one or two IP addresses. |

### Options that Return a Text String

| Command                                                                                                                  | Purpose                                              |
|--------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------|
| <code>dhcpd option code ascii text</code><br><br><b>Example:</b><br>hostname(config)# dhcpd option 2 ascii examplestring | Configures a DHCP option that returns a text string. |

## Options that Return a Hexadecimal Value

| Command                                                                                                                    | Purpose                                                    |
|----------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------|
| <code>dhcpd option code hex value</code>                                                                                   | Configures a DHCP option that returns a hexadecimal value. |
| <p><b>Example:</b></p> <pre>hostname(config)# dhcpd option 2 hex 22.0011.01.FF1111.00FF.0000.AAAA.1111.1111 .1111.11</pre> |                                                            |



### Note

The ASA does not verify that the option type and value that you provide match the expected type and value for the option code as defined in RFC 2132. For example, you can enter the `dhcpd option 46 ascii hello` command, and the ASA accepts the configuration, although option 46 is defined in RFC 2132 to expect a single-digit, hexadecimal value. For more information about the option codes and their associated types and expected values, see RFC 2132.

Table 11-2 shows the DHCP options that are not supported by the `dhcpd option` command.

**Table 11-2** *Unsupported DHCP Options*

| Option Code | Description               |
|-------------|---------------------------|
| 0           | DHCPOPT_PAD               |
| 1           | HCPOPT_SUBNET_MASK        |
| 12          | DHCPOPT_HOST_NAME         |
| 50          | DHCPOPT_REQUESTED_ADDRESS |
| 51          | DHCPOPT_LEASE_TIME        |
| 52          | DHCPOPT_OPTION_OVERLOAD   |
| 53          | DHCPOPT_MESSAGE_TYPE      |
| 54          | DHCPOPT_SERVER_IDENTIFIER |
| 58          | DHCPOPT_RENEWAL_TIME      |
| 59          | DHCPOPT_REBINDING_TIME    |
| 61          | DHCPOPT_CLIENT_IDENTIFIER |
| 67          | DHCPOPT_BOOT_FILE_NAME    |
| 82          | DHCPOPT_RELAY_INFORMATION |
| 255         | DHCPOPT_END               |

DHCP options 3, 66, and 150 are used to configure Cisco IP Phones. For more information about configuring these options, see the [“Using Cisco IP Phones with a DHCP Server”](#) section on page 11-6.

## Using Cisco IP Phones with a DHCP Server

Enterprises with small branch offices that implement a Cisco IP Telephony Voice over IP solution typically implement Cisco CallManager at a central office to control Cisco IP Phones at small branch offices. This implementation allows centralized call processing, reduces the equipment required, and eliminates the administration of additional Cisco CallManager and other servers at branch offices.

Cisco IP Phones download their configuration from a TFTP server. When a Cisco IP Phone starts, if it does not have both the IP address and TFTP server IP address preconfigured, it sends a request with option 150 or 66 to the DHCP server to obtain this information.

- DHCP option 150 provides the IP addresses of a list of TFTP servers.
- DHCP option 66 gives the IP address or the hostname of a single TFTP server.


**Note**

Cisco IP Phones might also include DHCP option 3 in their requests, which sets the default route.

A single request might include both options 150 and 66. In this case, the ASA DHCP server provides values for both options in the response if they are already configured on the ASA.

You can configure the ASA to send information for most options listed in RFC 2132. The following examples show the syntax for any option number, as well as the syntax for options 3, 66, and 150:

| Command                                                                                              | Purpose                                                                                        |
|------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------|
| <b>dhcpcd option</b> <i>number value</i><br><br><b>Example:</b><br>hostname(config)# dhcpcd option 2 | Provides information for DHCP requests that include an option number as specified in RFC-2132. |

| Command                                                                                                                              | Purpose                                                         |
|--------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------|
| <b>dhcpcd option 66 ascii</b> <i>server_name</i><br><br><b>Example:</b><br>hostname(config)# dhcpcd option 66 ascii<br>exampleserver | Provides the IP address or name of a TFTP server for option 66. |

| Command                                                                                                                                              | Purpose                                                                                                                                                                                                                                                                                                  |
|------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>dhcpcd option 150 ip</b> <i>server_ip1</i><br>[ <i>server_ip2</i> ]<br><br><b>Example:</b><br>hostname(config)# dhcpcd option 150 ip<br>10.10.1.1 | Provides the IP address or names of one or two TFTP servers for option 150. The <i>server_ip1</i> is the IP address or name of the primary TFTP server while <i>server_ip2</i> is the IP address or name of the secondary TFTP server. A maximum of two TFTP servers can be identified using option 150. |

| Command                                                                     | Purpose                 |
|-----------------------------------------------------------------------------|-------------------------|
| <code>dhcpd option 3 ip router_ip1</code>                                   | Sets the default route. |
| <b>Example:</b><br><pre>hostname(config)# dhcpd option 3 ip 10.10.1.1</pre> |                         |

## Configuring DHCP Relay Services

A DHCP relay agent allows the ASA to forward DHCP requests from clients to a router connected to a different interface.

The following restrictions apply to the use of the DHCP relay agent:

- The relay agent cannot be enabled if the DHCP server feature is also enabled.
- DHCP clients must be directly connected to the ASA and cannot send requests through another relay agent or a router.
- For multiple context mode, you cannot enable DHCP relay on an interface that is used by more than one context.
- DHCP Relay services are not available in transparent firewall mode. An ASA in transparent firewall mode only allows ARP traffic through; all other traffic requires an access list. To allow DHCP requests and replies through the ASA in transparent mode, you need to configure two access lists, one that allows DHCP requests from the inside interface to the outside, and one that allows the replies from the server in the other direction.
- When DHCP relay is enabled and more than one DHCP relay server is defined, the ASA forwards client requests to each defined DHCP relay server. Replies from the servers are also forwarded to the client until the client DHCP relay binding is removed. The binding is removed when the ASA receives any of the following DHCP messages: ACK, NACK, or decline.



### Note

You cannot enable DHCP Relay on an interface running DHCP Proxy. You must Remove VPN DHCP configuration first or you will see an error message. This error happens if both DHCP relay and DHCP proxy are enabled. Ensure that either DHCP relay or DHCP proxy are enabled, but not both.

To enable DHCP relay, perform the following steps:

|               | Command                                                                                                                                         | Purpose                                                                                                                                                           |
|---------------|-------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Step 1</b> | <b>dhcprelay server</b> <i>ip_address if_name</i><br><br><b>Example:</b><br><pre>hostname(config)# dhcprelay server 201.168.200.4 outside</pre> | Set the IP address of a DHCP server on a different interface from the DHCP client.<br><br>You can use this command up to ten times to identify up to ten servers. |
| <b>Step 2</b> | <b>dhcprelay enable</b> <i>interface</i><br><br><b>Example:</b><br><pre>hostname(config)# dhcprelay enable inside</pre>                         | Enables DHCP relay on the interface connected to the clients.                                                                                                     |

|        | Command                                                                                                              | Purpose                                                                                                                                                                                                                                                                                                                                                                               |
|--------|----------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Step 3 | <code>dhcprelay timeout seconds</code><br><br><b>Example:</b><br>hostname(config)# dhcprelay timeout 25              | (Optional) Set the number of seconds allowed for relay address negotiation.                                                                                                                                                                                                                                                                                                           |
| Step 4 | <code>dhcprelay setroute interface_name</code><br><br><b>Example:</b><br>hostname(config)# dhcprelay setroute inside | (Optional) Change the first default router address in the packet sent from the DHCP server to the address of the ASA interface.<br><br>This action allows the client to set its default route to point to the ASA even if the DHCP server specifies a different router.<br><br>If there is no default router option in the packet, the ASA adds one containing the interface address. |

## DHCP Monitoring Commands

To monitor DHCP, enter one of the following commands:

| Command                                    | Purpose                                       |
|--------------------------------------------|-----------------------------------------------|
| <code>show running-config dhcpd</code>     | Shows the current DHCP configuration.         |
| <code>show running-config dhcprelay</code> | Shows the current DHCP relay services status. |

## Feature History for DHCP

Table 11-3 lists each feature change and the platform release in which it was implemented.

Table 11-3 Feature History for DHCP

| Feature Name | Releases | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|--------------|----------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| DHCP         | 7.0(1)   | The ASA can provide a DHCP server or DHCP relay services to DHCP clients attached to ASA interfaces.<br><br>We introduced the following commands: <code>dhcp client update dns</code> , <code>dhcpd address</code> , <code>dhcpd domain</code> , <code>dhcpd enable</code> , <code>dhcpd lease</code> , <code>dhcpd option</code> , <code>dhcpd ping timeout</code> , <code>dhcpd update dns</code> , <code>dhcpd wins</code> , <code>dhcp-network-scope</code> , <code>dhcprelay enable</code> , <code>dhcprelay server</code> , <code>dhcprelay setroute</code> , <code>dhcprelay trusted</code> , <code>dhcp-server</code> , <code>show running-config dhcpd</code> , and <code>show running-config dhcprelay</code> . |



## CHAPTER 12

# Configuring Dynamic DNS

---

This chapter describes how to configure DDNS update methods and includes the following topics:

- [Information About DDNS, page 12-1](#)
- [Licensing Requirements for DDNS, page 12-2](#)
- [Guidelines and Limitations, page 12-2](#)
- [Configuring DDNS, page 12-2](#)
- [Configuration Examples for DDNS, page 12-3](#)
- [DDNS Monitoring Commands, page 12-6](#)
- [Feature History for DDNS, page 12-6](#)

## Information About DDNS

DDNS update integrates DNS with DHCP. The two protocols are complementary: DHCP centralizes and automates IP address allocation; DDNS update automatically records the association between assigned addresses and hostnames at pre-defined intervals. DDNS allows frequently changing address-hostname associations to be updated frequently. Mobile hosts, for example, can then move freely on a network without user or administrator intervention. DDNS provides the necessary dynamic update and synchronization of the name-to-address mapping and address-to-name mapping on the DNS server. To configure the DNS server for other uses, see the [“Configuring the DNS Server” section on page 10-11](#). To configure DHCP, see the [“Configuring a DHCP Server” section on page 11-2](#).

EDNS allows DNS requesters to advertise the size of their UDP packets and facilitates the transfer of packets larger than 512 octets. When a DNS server receives a request over UDP, it identifies the size of the UDP packet from the OPT resource record (RR) and scales its response to contain as many resource records as are allowed in the maximum UDP packet size specified by the requester. The size of the DNS packets can be up to 4096 bytes for BIND or 1280 bytes for the Windows 2003 DNS Server. Several additional **message-length maximum** commands are available:

- The existing global limit: **message-length maximum 512**
- A client or server specific limit: **message-length maximum client 4096**
- The dynamic value specified in the OPT RR field: **message-length maximum client auto**

If the three commands are present at the same time, the ASA enforces the minimum of the three specified values.

# Licensing Requirements for DDNS

The following table shows the licensing requirements for DDNS:

| Model      | License Requirement |
|------------|---------------------|
| All models | Base License.       |

## Guidelines and Limitations

### Failover Guidelines

Supports Active/Active and Active/Standby failover.

### Firewall Mode Guidelines

Supported in routed firewall mode.

### Context Mode Guidelines

Supported in single and multiple context modes.

Supported in transparent mode for the DNS Client pane.

### IPv6 Guidelines

Supports IPv6.

## Configuring DDNS

This section describes examples for configuring the ASA to support Dynamic DNS. DDNS update integrates DNS with DHCP. The two protocols are complementary—DHCP centralizes and automates IP address allocation, while dynamic DNS update automatically records the association between assigned addresses and hostnames. When you use DHCP and dynamic DNS update, this configures a host automatically for network access whenever it attaches to the IP network. You can locate and reach the host using its permanent, unique DNS hostname. Mobile hosts, for example, can move freely without user or administrator intervention.

DDNS provides address and domain name mapping so that hosts can find each other, even though their DHCP-assigned IP addresses change frequently. The DDNS name and address mapping is held on the DHCP server in two resource records: the A RR includes the name-to IP address mapping, while the PTR RR maps addresses to names. Of the two methods for performing DDNS updates—the IETF standard defined by RFC 2136 and a generic HTTP method—the ASA supports the IETF method in this release.

The two most common DDNS update configurations are the following:

- The DHCP client updates the A RR, while the DHCP server updates the PTR RR.
- The DHCP server updates both the A RR and PTR RR.

In general, the DHCP server maintains DNS PTR RRs on behalf of clients. Clients may be configured to perform all desired DNS updates. The server may be configured to honor these updates or not. To update the PTR RR, the DHCP server must know the FQDN of the client. The client provides an FQDN to the server using a DHCP option called Client FQDN.

## Configuration Examples for DDNS

The following examples present five common scenarios:

- [Example 1: Client Updates Both A and PTR RRs for Static IP Addresses, page 12-3](#)
- [Example 2: Client Updates Both A and PTR RRs; DHCP Server Honors Client Update Request; FQDN Provided Through Configuration, page 12-3](#)
- [Example 3: Client Includes FQDN Option Instructing Server Not to Update Either RR; Server Overrides Client and Updates Both RRs., page 12-4](#)
- [Example 4: Client Asks Server To Perform Both Updates; Server Configured to Update PTR RR Only; Honors Client Request and Updates Both A and PTR RR, page 12-5](#)
- [Example 5: Client Updates A RR; Server Updates PTR RR, page 12-5](#)

### Example 1: Client Updates Both A and PTR RRs for Static IP Addresses

The following example shows how to configure the client to request that it update both A and PTR resource records for static IP addresses.

To configure this scenario, perform the following steps:

- 
- Step 1** To define a DDNS update method called `ddns-2` that requests that the client update both the A RR and PTR RR, enter the following commands:
- ```
hostname(config)# ddns update method ddns-2
hostname(DDNS-update-method)# ddns both
```
- Step 2** To associate the method `ddns-2` with the `eth1` interface, enter the following commands:
- ```
hostname(DDNS-update-method)# interface eth1
hostname(config-if)# ddns update ddns-2
hostname(config-if)# ddns update hostname asa.example.com
```
- Step 3** To configure a static IP address for `eth1`, enter the following command:
- ```
hostname(config-if)# ip address 10.0.0.40 255.255.255.0
```
-

Example 2: Client Updates Both A and PTR RRs; DHCP Server Honors Client Update Request; FQDN Provided Through Configuration

The following example shows how to configure the DHCP client to request that it update both the A and PTR RRs, and the DHCP server to honor these requests.

To configure this scenario, perform the following steps:

-
- Step 1** To configure the DHCP client to request that the DHCP server perform no updates, enter the following command:

```
hostname(config)# dhcp-client update dns server none
```

- Step 2** To create a DDNS update method named ddns-2 on the DHCP client that requests that the client perform both A and PTR updates, enter the following commands:

```
hostname(config)# ddns update method ddns-2
hostname(DDNS-update-method)# ddns both
```

- Step 3** To associate the method named ddns-2 with the ASA interface named Ethernet0, and enable DHCP on the interface, enter the following commands:

```
hostname(DDNS-update-method)# interface Ethernet0
hostname(if-config)# ddns update ddns-2
hostname(if-config)# ddns update hostname asa.example.com
hostname(if-config)# ip address dhcp
```

- Step 4** To configure the DHCP server, enter the following command:

```
hostname(if-config)# dhcpd update dns
```

Example 3: Client Includes FQDN Option Instructing Server Not to Update Either RR; Server Overrides Client and Updates Both RRs.

The following example shows how to configure the DHCP client to include the FQDN option that instruct the DHCP server not to honor either the A or PTR updates. The example also shows how to configure the server to override the client request. As a result, the client does not perform any updates.

To configure this scenario, perform the following steps:

-
- Step 1** To configure the update method named ddns-2 to request that it make both A and PTR RR updates, enter the following commands:

```
hostname(config)# ddns update method ddns-2
hostname(DDNS-update-method)# ddns both
```

- Step 2** To assign the DDNS update method named ddns-2 on interface Ethernet0 and provide the client hostname (asa), enter the following commands:

```
hostname(DDNS-update-method)# interface Ethernet0
hostname(if-config)# ddns update ddns-2
hostname(if-config)# ddns update hostname asa.example.com
```

- Step 3** To enable the DHCP client feature on the interface, enter the following commands:

```
hostname(if-config)# dhcp client update dns server none
hostname(if-config)# ip address dhcp
```

- Step 4** To configure the DHCP server to override the client update requests, enter the following command:

```
hostname(if-config)# dhcpd update dns both override
```

Example 4: Client Asks Server To Perform Both Updates; Server Configured to Update PTR RR Only; Honors Client Request and Updates Both A and PTR RR

The following example shows how to configure the server to perform only PTR RR updates by default. However, the server honors the client request that it perform both A and PTR updates. The server also forms the FQDN by appending the domain name (example.com) to the hostname that the client (asa) has provided.

To configure this scenario, perform the following steps:

Step 1 To configure the DHCP client on interface Ethernet0, enter the following commands:

```
hostname(config)# interface Ethernet0
hostname(config-if)# dhcp client update dns both
hostname(config-if)# ddns update hostname asa
```

Step 2 To configure the DHCP server, enter the following commands:

```
hostname(config-if)# dhcpd update dns
hostname(config-if)# dhcpd domain example.com
```

Example 5: Client Updates A RR; Server Updates PTR RR

The following example shows how to configure the client to update the A resource record and how to configure the server to update the PTR records. Also, the client uses the domain name from the DHCP server to form the FQDN.

To configure this scenario, perform the following steps:

Step 1 To define the DDNS update method named ddns-2, enter the following commands:

```
hostname(config)# ddns update method ddns-2
hostname(DDNS-update-method)# ddns
```

Step 2 To configure the DHCP client for interface Ethernet0 and assign the update method to the interface, enter the following commands:

```
hostname(DDNS-update-method)# interface Ethernet0
hostname(config-if)# dhcp client update dns
hostname(config-if)# ddns update ddns-2
hostname(config-if)# ddns update hostname asa
```

Step 3 To configure the DHCP server, enter the following commands:

```
hostname(config-if)# dhcpd update dns
hostname(config-if)# dhcpd domain example.com
```

DDNS Monitoring Commands

To monitor DDNS, enter one of the following commands:

Command	Purpose
<code>show running-config ddns</code>	Shows the current DDNS configuration.
<code>show running-config dns server-group</code>	Shows the current DNS server group status.

Feature History for DDNS

Table 12-1 lists each feature change and the platform release in which it was implemented.

Table 12-1 Feature History for DDNS

Feature Name	Releases	Feature Information
DDNS	7.0(1)	This feature was introduced. The following commands were introduced: ddns , ddns update , dhcp client update dns , dhcpd update dns , show running-config ddns , and show running-config dns server-group .



PART 5

Configuring Objects and Access Lists



CHAPTER 13

Configuring Objects

Objects are reusable components for use in your configuration. They can be defined and used in ASA configurations in the place of inline IP addresses. Objects make it easy to maintain your configurations because you can modify an object in one place and have it be reflected in all other places that are referencing it. Without objects you would have to modify the parameters for every feature when required, instead of just once. For example, if a network object defines an IP address and subnet mask, and you want to change the address, you only need to change it in the object definition, not in every feature that refers to that IP address.

This chapter describes how to configure objects, and it includes the following sections:

- [Configuring Objects and Groups, page 13-1](#)
- [Configuring Regular Expressions, page 13-12](#)
- [Scheduling Extended Access List Activation, page 13-16](#)

Configuring Objects and Groups

This section includes the following topics:

- [Information About Objects and Groups, page 13-1](#)
- [Licensing Requirements for Objects and Groups, page 13-2](#)
- [Guidelines and Limitations for Objects and Groups, page 13-3](#)
- [Configuring Objects, page 13-3](#)
- [Configuring Object Groups, page 13-6](#)
- [Monitoring Objects and Groups, page 13-11](#)
- [Feature History for Objects and Groups, page 13-12](#)

Information About Objects and Groups

The ASA supports objects and object groups. You can attach or detach objects from one or more object groups when needed, ensuring that the objects are not duplicated but can be re-used wherever needed.

This section includes the following topics:

- [Information About Objects, page 13-2](#)

- [Information About Object Groups, page 13-2](#)

Information About Objects

Objects are created in and used by the ASA in the place of an inline IP address in any given configuration. You can define an object with a particular IP address and netmask pair or a protocol (and, optionally, a port) and use this object in several configurations. The advantage is that whenever you want to modify the configurations created to this IP address or protocol, you do not need to modify all rules in the running configuration. You can modify the object, and then the change automatically applies to all rules that use the specified object. You can configure two types of objects: network objects and service objects. These objects can be used in Network Address Translation (NAT), access lists, and object groups.

Information About Object Groups

By grouping like objects together, you can use the object group in an ACE instead of having to enter an ACE for each object separately. You can create the following types of object groups:

- Protocol
- Network
- Service
- ICMP type

For example, consider the following three object groups:

- MyServices—Includes the TCP and UDP port numbers of the service requests that are allowed access to the internal network.
- TrustedHosts—Includes the host and network addresses allowed access to the greatest range of services and servers.
- PublicServers—Includes the host addresses of servers to which the greatest access is provided.

After creating these groups, you could use a single ACE to allow trusted hosts to make specific service requests to a group of public servers.

You can also nest object groups in other object groups.

Licensing Requirements for Objects and Groups

The following table shows the licensing requirements for this feature:

Model	License Requirement
All models	Base License.

Guidelines and Limitations for Objects and Groups

This section includes the guidelines and limitations for this feature.

Context Mode Guidelines

Supported in single and multiple context mode.

Firewall Mode Guidelines

Supported in routed and transparent firewall modes.

IPv6 Guidelines

Supports IPv6, with limitations. (See the [“Additional Guidelines and Limitations”](#) section on page 13-3.)

Additional Guidelines and Limitations

The following guidelines and limitations apply to object groups:

- Objects and object groups share the same name space.
- Object groups must have unique names. While you might want to create a network object group named “Engineering” and a service object group named “Engineering,” you need to add an identifier (or “tag”) to the end of at least one object group name to make it unique. For example, you can use the names “Engineering_admins” and “Engineering_hosts” to make the object group names unique and to aid in identification.
- You cannot remove an object group or make an object group empty if it is used in a command.
- The ASA does not support IPv6 nested object groups, so you cannot group an object with IPv6 entities under another IPv6 object group.

Configuring Objects

This section includes the following topics:

- [Configuring a Network Object, page 13-3](#)
- [Configuring a Service Object, page 13-4](#)

Configuring a Network Object

A network object contains a single IP address/mask pair. Network objects can be of three types: host, subnet, or range.

You can also configure auto NAT as part of the object definition; see [Chapter 30, “Configuring Network Object NAT,”](#) for more information.

Detailed Steps

	Command	Purpose
Step 1	object network <i>obj_name</i> Example: hostname(config)# object-network OBJECT1	Creates a new network object. The <i>obj_name</i> is a text string up to 64 characters in length and can be any combination of letters, digits, and the following characters: <ul style="list-style-type: none"> • underscore “_” • dash “-” • period “.” The prompt changes to network object configuration mode.
Step 2	{host ip_addr subnet net_addr net_mask range ip_addr_1 ip_addr_2} Example: hostname(config-network-object)# host 10.2.2.2	Assigns the IP address to the named object. You can configure a host address, a subnet, or a range of addresses.
Step 3	description <i>text</i> Example: hostname(config-network-object)# description Engineering Network	Adds a description to the object.

Examples

To create a network object, enter the following commands:

```
hostname (config)# object network OBJECT1
hostname (config-network-object)# host 10.2.2.2
```

Configuring a Service Object

A service object contains a protocol and optional source and/or destination port.

Detailed Steps

	Command	Purpose
Step 1	<pre>object service <i>obj_name</i></pre> <p>Example: <pre>hostname(config)# object-service SERVOBJECT1</pre></p>	<p>Creates a new service object. The <i>obj_name</i> is a text string up to 64 characters in length and can be any combination of letters, digits, and the following characters:</p> <ul style="list-style-type: none"> • underscore “_” • dash “-” • period “.” <p>The prompt changes to service object configuration mode.</p>
Step 2	<pre>service {<i>protocol</i> icmp <i>icmp-type</i> icmp6 <i>icmp6-type</i> {tcp udp} [source <i>operator</i> <i>port</i>] [destination <i>operator</i> <i>port</i>]}</pre> <p>Example: <pre>hostname(config-service-object)# service tcp source eq www destination eq ssh</pre></p>	<p>Creates a service object for the source mapped address.</p> <p>The <i>protocol</i> argument specifies an IP protocol name or number.</p> <p>The icmp, tcp, or udp keywords specify that this service object is for either the ICMP, TCP, or UDP protocol.</p> <p>The <i>icmp-type</i> argument names the ICMP type.</p> <p>The icmp6 keyword specifies that the service type is for ICMP version 6 connections.</p> <p>The <i>icmp6-type</i> argument names the ICMP version 6 type.</p> <p>The source keyword specifies the source port.</p> <p>The destination keyword specifies the destination port.</p> <p>The <i>operator port</i> argument specifies a single port/code value that supports configuring the port for the protocol. You can specify “eq,” “neq,” “lt,” “gt,” and “range” when configuring a port for TCP or UDP. The “range” operator lists the beginning port and ending port.</p>

Example

To create a service object, enter the following commands:

```
hostname (config)# object service SERVOBJECT1
hostname (config-service-object)# service tcp source eq www destination eq ssh
```

Configuring Object Groups

This section includes the following topics:

- [Adding a Protocol Object Group, page 13-6](#)
- [Adding a Network Object Group, page 13-7](#)
- [Adding a Service Object Group, page 13-8](#)
- [Adding an ICMP Type Object Group, page 13-9](#)
- [Nesting Object Groups, page 13-10](#)
- [Removing Object Groups, page 13-11](#)

Adding a Protocol Object Group

To add or change a protocol object group, perform the steps in this section. After you add the group, you can add more objects as required by following this procedure again for the same group name and specifying additional objects. You do not need to reenter existing objects; the commands you already set remain in place unless you remove them with the **no** form of the command.

Detailed Steps

	Command	Purpose
Step 1	object-group protocol <i>obj_grp_id</i> Example: hostname(config)# object-group protocol tcp_udp_icmp	Adds a protocol group. The <i>obj_grp_id</i> is a text string up to 64 characters in length and can be any combination of letters, digits, and the following characters: <ul style="list-style-type: none"> • underscore “_” • dash “-” • period “.” The prompt changes to protocol configuration mode.
Step 2	description <i>text</i> Example: hostname(config-protocol)# description New Group	(Optional) Adds a description. The description can be up to 200 characters.
Step 3	protocol-object <i>protocol</i> Example: hostname(config-protocol)# protocol-object tcp	Defines the protocols in the group. Enter the command for each protocol. The protocol is the numeric identifier of the specified IP protocol (1 to 254) or a keyword identifier (for example, icmp , tcp , or udp). To include all IP protocols, use the keyword ip . For a list of protocols that you can specify, see the “Protocols and Applications” section on page B-11.

Example

To create a protocol group for TCP, UDP, and ICMP, enter the following commands:

```
hostname (config)# object-group protocol tcp_udp_icmp
hostname (config-protocol)# protocol-object tcp
hostname (config-protocol)# protocol-object udp
```

```
hostname (config-protocol)# protocol-object icmp
```

Adding a Network Object Group

A network object group supports IPv4 and IPv6 addresses.

To add or change a network object group, perform the steps in this section. After you add the group, you can add more objects as required by following this procedure again for the same group name and specifying additional objects. You do not need to reenter existing objects; the commands you already set remain in place unless you remove them with the no form of the command.

Detailed Steps

	Command	Purpose
Step 1	object-group network <i>grp_id</i> Example: hostname(config)# object-group network admins	Adds a network group. The <i>grp_id</i> is a text string up to 64 characters in length and can be any combination of letters, digits, and the following characters: <ul style="list-style-type: none"> • underscore “_” • dash “-” • period “.” The prompt changes to protocol configuration mode.
Step 2	description <i>text</i> Example: hostname(config-network)# description Administrator Addresses	(Optional) Adds a description. The description can be up to 200 characters.
Step 3	network-object { object <i>name</i> host <i>ip_address</i> ip_address <i>mask</i> } Example: hostname(config-network)# network-object host 10.2.2.4	The object keyword adds an additional object to the network object group. Defines the networks in the group. Enter the command for each network or address.

Example

To create a network group that includes the IP addresses of three administrators, enter the following commands:

```
hostname (config)# object-group network admins
hostname (config-protocol)# description Administrator Addresses
hostname (config-protocol)# network-object host 10.2.2.4
hostname (config-protocol)# network-object host 10.2.2.78
hostname (config-protocol)# network-object host 10.2.2.34
```

Adding a Service Object Group

To add or change a service object group, perform the steps in this section. After you add the group, you can add more objects as required by following this procedure again for the same group name and specifying additional objects. You do not need to reenter existing objects; the commands you already set remain in place unless you remove them with the **no** form of the command.

Detailed Steps

	Command	Purpose
Step 1	<p>object-group service <i>grp_id</i> {tcp udp tcp-udp}</p> <p>Example: hostname(config)# object-group service services1 tcp-udp</p>	<p>Adds a service group.</p> <p>The object keyword adds an additional object to the service object group.</p> <p>The <i>grp_id</i> is a text string up to 64 characters in length and can be any combination of letters, digits, and the following characters:</p> <ul style="list-style-type: none"> • underscore “_” • dash “-” • period “.” <p>Specify the protocol for the services (ports) you want to add with either the tcp, udp, or tcp-udp keywords. Enter the tcp-udp keyword if your service uses both TCP and UDP with the same port number, for example, DNS (port53).</p> <p>The prompt changes to service configuration mode.</p>
Step 2	<p>description <i>text</i></p> <p>Example: hostname(config-service)# description DNS Group</p>	<p>(Optional) Adds a description. The description can be up to 200 characters.</p>
Step 3	<p>port-object {eq <i>port</i> range <i>begin_port end_port</i>}</p> <p>Example: hostname(config-service)# port-object eq domain</p>	<p>Defines the ports in the group. Enter the command for each port or range of ports. For a list of permitted keywords and well-known port assignments, see the “Protocols and Applications” section on page B-11.</p>

Example

To create service groups that include DNS (TCP/UDP), LDAP (TCP), and RADIUS (UDP), enter the following commands:

```
hostname (config)# object-group service services1 tcp-udp
hostname (config-service)# description DNS Group
hostname (config-service)# port-object eq domain

hostname (config)# object-group service services2 udp
hostname (config-service)# description RADIUS Group
hostname (config-service)# port-object eq radius
```

```

hostname (config-service)# port-object eq radius-acct

hostname (config)# object-group service services3 tcp
hostname (config-service)# description LDAP Group
hostname (config-service)# port-object eq ldap

```

Adding an ICMP Type Object Group

To add or change an ICMP type object group, perform the steps in this section. After you add the group, you can add more objects as required by following this procedure again for the same group name and specifying additional objects. You do not need to reenter existing objects; the commands you already set remain in place unless you remove them with the **no** form of the command.

Detailed Steps

	Command	Purpose
Step 1	object-group icmp-type <i>grp_id</i> Example: hostname(config)# object-group icmp-type ping	Adds an ICMP type object group. The <i>grp_id</i> is a text string up to 64 characters in length and can be any combination of letters, digits, and the following characters: <ul style="list-style-type: none"> • underscore “_” • dash “-” • period “.” The prompt changes to ICMP type configuration mode.
Step 2	description <i>text</i> Example: hostname(config-icmp-type)# description Ping Group	(Optional) Adds a description. The description can be up to 200 characters.
Step 3	icmp-object <i>icmp-type</i> Example: hostname(config-icmp-type)# icmp-object echo-reply	Defines the ICMP types in the group. Enter the command for each type. For a list of ICMP types, see the “ICMP Types” section on page B-15 .

Example

Create an ICMP type group that includes echo-reply and echo (for controlling ping) by entering the following commands:

```

hostname (config)# object-group icmp-type ping
hostname (config-service)# description Ping Group
hostname (config-service)# icmp-object echo
hostname (config-service)# icmp-object echo-reply

```

Nesting Object Groups

You can nest object groups hierarchically so that one object group can contain other object groups of the same type and you can mix and match nested group objects and regular objects within an object group. The ASA does not support IPv6 nested object groups, however, so you cannot group an object with IPv6 entities under another IPv6 object-group.

To nest an object group within another object group of the same type, first create the group that you want to nest (see the “Configuring Object Groups” section on page 13-6), and then perform the steps in this section.

Detailed Steps

	Command	Purpose
Step 1	<pre>object-group group {{protocol network icmp-type} grp_id service grp_id {tcp udp tcp-udp}}</pre> <p>Example: hostname(config)# object-group network Engineering_group</p>	<p>Adds or edits the specified object group type under which you want to nest another object group.</p> <p>The service_grp_id is a text string up to 64 characters in length and can be any combination of letters, digits, and the following characters:</p> <ul style="list-style-type: none"> • underscore “_” • dash “-” • period “.”
Step 2	<pre>group-object group_id</pre> <p>Example: hostname(config-network)# group-object Engineering_groups</p>	<p>Adds the specified group under the object group you specified in Step 1. The nested group must be of the same type. You can mix and match nested group objects and regular objects within an object group.</p>

Examples

Create network object groups for privileged users from various departments by entering the following commands:

```
hostname (config)# object-group network eng
hostname (config-network)# network-object host 10.1.1.5
hostname (config-network)# network-object host 10.1.1.9
hostname (config-network)# network-object host 10.1.1.89

hostname (config)# object-group network hr
hostname (config-network)# network-object host 10.1.2.8
hostname (config-network)# network-object host 10.1.2.12

hostname (config)# object-group network finance
hostname (config-network)# network-object host 10.1.4.89
hostname (config-network)# network-object host 10.1.4.100
```

You then nest all three groups together as follows:

```
hostname (config)# object-group network admin
hostname (config-network)# group-object eng
hostname (config-network)# group-object hr
hostname (config-network)# group-object finance
```

You only need to specify the admin object group in your ACE as follows:

```
hostname (config)# access-list ACL_IN extended permit ip object-group admin host
209.165.201.29
```

Removing Object Groups

You can remove a specific object group or remove all object groups of a specified type; however, you cannot remove an object group or make an object group empty if it is used in an access list.

Detailed Step

Step 1 Do one of the following:

```
no object-group grp_id
```

Example:

```
hostname(config)# no object-group
Engineering_host
```

Removes the specified object group. The *grp_id* is a text string up to 64 characters in length and can be any combination of letters, digits, and the following characters:

- underscore “_”
- dash “-”
- period “.”

```
clear object-group [protocol | network |
services | icmp-type]
```

Example:

```
hostname(config)# clear-object group
network
```

Removes all object groups of the specified type.



Note If you do not enter a type, all object groups are removed.

Monitoring Objects and Groups

To monitor objects and groups, enter the following commands:

Command	Purpose
<code>show access-list</code>	Displays the access list entries that are expanded out into individual entries without their object groupings.
<code>show running-config object-group</code>	Displays all current object groups.
<code>show running-config object-group grp_id</code>	Displays the current object groups by their group ID.
<code>show running-config object-group grp_type</code>	Displays the current object groups by their group type.

Feature History for Objects and Groups

Table 1 lists each feature change and the platform release in which it was implemented.

Table 1 Feature History for Object Groups

Feature Name	Releases	Feature Information
Object groups	7.0(1)	Object groups simplify access list creation and maintenance. We introduced or modified the following commands: object-group protocol , object-group network , object-group service , object-group icmp_type .
Objects	8.3(1)	Object support was introduced. We introduced or modified the following commands: object-network , object-service , object-group network , object-group service , network object , access-list extended , access-list webtype , access-list remark .

Configuring Regular Expressions

A regular expression matches text strings either literally as an exact string, or by using *metacharacters* so that you can match multiple variants of a text string. You can use a regular expression to match the content of certain application traffic; for example, you can match a URL string inside an HTTP packet. This section describes how to create a regular expression and includes the following topics:

- [Creating a Regular Expression, page 13-12](#)
- [Creating a Regular Expression Class Map, page 13-15](#)

Creating a Regular Expression

A regular expression matches text strings either literally as an exact string, or by using *metacharacters* so you can match multiple variants of a text string. You can use a regular expression to match the content of certain application traffic; for example, you can match a URL string inside an HTTP packet.

Guidelines

Use **Ctrl+V** to escape all of the special characters in the CLI, such as question mark (?) or a tab. For example, type **d[Ctrl+V]?g** to enter **d?g** in the configuration.

See the **regex** command in the command reference for performance impact information when matching a regular expression to packets.



Note

As an optimization, the ASA searches on the deobfuscated URL. Deobfuscation compresses multiple forward slashes (/) into a single slash. For strings that commonly use double slashes, like “http://”, be sure to search for “http:/" instead.

Table 13-2 lists the metacharacters that have special meanings.

Table 13-2 *regex Metacharacters*

Character	Description	Notes
.	Dot	Matches any single character. For example, d.g matches dog, dag, dtg, and any word that contains those characters, such as doggonnit.
(exp)	Subexpression	A subexpression segregates characters from surrounding characters, so that you can use other metacharacters on the subexpression. For example, d(ola)g matches dog and dag, but dolag matches do and ag. A subexpression can also be used with repeat quantifiers to differentiate the characters meant for repetition. For example, ab(xy){3}z matches abxyxyz.
	Alternation	Matches either expression it separates. For example, dog cat matches dog or cat.
?	Question mark	A quantifier that indicates that there are 0 or 1 of the previous expression. For example, lo?se matches lse or lose. Note You must enter Ctrl+V and then the question mark or else the help function is invoked.
*	Asterisk	A quantifier that indicates that there are 0, 1 or any number of the previous expression. For example, lo*se matches lse, lose, loose, and so on.
+	Plus	A quantifier that indicates that there is at least 1 of the previous expression. For example, lo+se matches lose and loose, but not lse.
{x} or {x,}	Minimum repeat quantifier	Repeat at least <i>x</i> times. For example, ab(xy){2,}z matches abxyxyz, abxyxyz, and so on.
[abc]	Character class	Matches any character in the brackets. For example, [abc] matches a, b, or c.
[^abc]	Negated character class	Matches a single character that is not contained within the brackets. For example, [^abc] matches any character other than a, b, or c. [^A-Z] matches any single character that is not an uppercase letter.
[a-c]	Character range class	Matches any character in the range. [a-z] matches any lowercase letter. You can mix characters and ranges: [abcq-z] matches a, b, c, q, r, s, t, u, v, w, x, y, z, and so does [a-cq-z] . The dash (-) character is literal only if it is the last or the first character within the brackets: [abc-] or [-abc] .
“”	Quotation marks	Preserves trailing or leading spaces in the string. For example, “ test” preserves the leading space when it looks for a match.
^	Caret	Specifies the beginning of a line.

Table 13-2 *regex Metacharacters (continued)*

Character	Description	Notes
\	Escape character	When used with a metacharacter, matches a literal character. For example, \[matches the left square bracket.
<i>char</i>	Character	When character is not a metacharacter, matches the literal character.
\r	Carriage return	Matches a carriage return 0x0d.
\n	Newline	Matches a new line 0x0a.
\t	Tab	Matches a tab 0x09.
\f	Formfeed	Matches a form feed 0x0c.
\xNN	Escaped hexadecimal number	Matches an ASCII character using hexadecimal (exactly two digits).
\NNN	Escaped octal number	Matches an ASCII character as octal (exactly three digits). For example, the character 040 represents a space.

Detailed Steps

- Step 1** To test a regular expression to make sure it matches what you think it will match, enter the following command:

```
hostname(config)# test regex input_text regular_expression
```

Where the *input_text* argument is a string you want to match using the regular expression, up to 201 characters in length.

The *regular_expression* argument can be up to 100 characters in length.

Use **Ctrl+V** to escape all of the special characters in the CLI. For example, to enter a tab in the input text in the **test regex** command, you must enter **test regex “test[Ctrl+V Tab]” “test\t”**.

If the regular expression matches the input text, you see the following message:

```
INFO: Regular expression match succeeded.
```

If the regular expression does not match the input text, you see the following message:

```
INFO: Regular expression match failed.
```

- Step 2** To add a regular expression after you tested it, enter the following command:

```
hostname(config)# regex name regular_expression
```

Where the *name* argument can be up to 40 characters in length.

The *regular_expression* argument can be up to 100 characters in length.

Examples

The following example creates two regular expressions for use in an inspection policy map:

```
hostname(config)# regex url_example example\.com
```

```
hostname(config)# regex url_example2 example2\.com
```

Creating a Regular Expression Class Map

A regular expression class map identifies one or more regular expressions. You can use a regular expression class map to match the content of certain traffic; for example, you can match URL strings inside HTTP packets.

Detailed Steps

Step 1 Create one or more regular expressions according to the “[Configuring Regular Expressions](#)” section.

Step 2 Create a class map by entering the following command:

```
hostname(config)# class-map type regex match-any class_map_name  
hostname(config-cmap)#
```

Where *class_map_name* is a string up to 40 characters in length. The name “class-default” is reserved. All types of class maps use the same name space, so you cannot reuse a name already used by another type of class map.

The **match-any** keyword specifies that the traffic matches the class map if it matches at least one of the regular expressions.

The CLI enters class-map configuration mode.

Step 3 (Optional) Add a description to the class map by entering the following command:

```
hostname(config-cmap)# description string
```

Step 4 Identify the regular expressions you want to include by entering the following command for each regular expression:

```
hostname(config-cmap)# match regex regex_name
```

Examples

The following example creates two regular expressions, and adds them to a regular expression class map. Traffic matches the class map if it includes the string “example.com” or “example2.com.”

```
hostname(config)# regex url_example example\.com  
hostname(config)# regex url_example2 example2\.com  
hostname(config)# class-map type regex match-any URLs  
hostname(config-cmap)# match regex url_example  
hostname(config-cmap)# match regex url_example2
```

Scheduling Extended Access List Activation

This section includes the following topics:

- [Information About Scheduling Access List Activation, page 13-16](#)
- [Licensing Requirements for Scheduling Access List Activation, page 13-16](#)
- [Guidelines and Limitations for Scheduling Access List Activation, page 13-16](#)
- [Configuring and Applying Time Ranges, page 13-17](#)
- [Configuration Examples for Scheduling Access List Activation, page 13-18](#)
- [Feature History for Scheduling Access List Activation, page 13-18](#)

Information About Scheduling Access List Activation

You can schedule each ACE in an access list to be activated at specific times of the day and week by applying a time range to the ACE.

Licensing Requirements for Scheduling Access List Activation

The following table shows the licensing requirements for this feature:

Model	License Requirement
All models	Base License.

Guidelines and Limitations for Scheduling Access List Activation

This section includes the guidelines and limitations for this feature.

Context Mode Guidelines

Supported in single and multiple context mode.

Firewall Mode Guidelines

Supported in routed and transparent firewall modes.

IPv6 Guidelines

Supports IPv6.

Additional Guidelines and Limitations

The following guidelines and limitations apply to using object groups with access lists:

- Users could experience a delay of approximately 80 to 100 seconds after the specified end time for the ACL to become inactive. For example, if the specified end time is 3:50, because the end time is inclusive, the command is picked up anywhere between 3:51:00 and 3:51:59. After the command is picked up, the ASA finishes any currently running task and then services the command to deactivate the ACL.
- Multiple periodic entries are allowed per **time-range** command. If a **time-range** command has both **absolute** and **periodic** values specified, then the **periodic** commands are evaluated only after the **absolute** start time is reached, and they are not further evaluated after the **absolute** end time is reached.

Configuring and Applying Time Ranges

You can add a time range to implement a time-based access list. To identify the time range, perform the steps in this section.

Detailed Steps

	Command	Purpose
Step 1	time-range <i>name</i> Example: hostname(config)# time range Sales	Identifies the time-range name.
Step 2	Do one of the following: periodic <i>days-of-the-week time to</i> <i>[days-of-the-week] time</i> Example: hostname(config-time-range)# periodic monday 7:59 to friday 17:01	Specifies a recurring time range. You can specify the following values for <i>days-of-the-week</i> : <ul style="list-style-type: none"> • monday, tuesday, wednesday, thursday, friday, saturday, or sunday. • daily • weekdays • weekend The <i>time</i> is in the format <i>hh:mm</i> . For example, 8:00 is 8:00 a.m. and 20:00 is 8:00 p.m.

Command	Purpose
<pre>absolute start time date [end time date]</pre> <p>Example:</p> <pre>hostname(config-time-range)# absolute start 7:59 2 january 2009</pre>	<p>Specifies an absolute time range.</p> <p>The <i>time</i> is in the format <i>hh:mm</i>. For example, 8:00 is 8:00 a.m. and 20:00 is 8:00 p.m.</p> <p>The <i>date</i> is in the format <i>day month year</i>; for example, 1 january 2006.</p>
<p>Step 3</p> <pre>access-list access_list_name [extended] {deny / permit}...[time-range name]</pre> <p>Example:</p> <pre>hostname(config)# access list Marketing extended deny tcp host 209.165.200.225 host 209.165 201.1 time-range Pacific_Coast</pre>	<p>Applies the time range to an ACE.</p> <p> Note If you also enable logging for the ACE, use the log keyword before the time-range keyword. If you disable the ACE using the inactive keyword, use the inactive keyword as the last keyword.</p> <p>See Chapter 15, “Adding an Extended Access List,” for complete access-list command syntax.</p>

Example

The following example binds an access list named “Sales” to a time range named “New_York_Minute”:

```
hostname(config)# access-list Sales line 1 extended deny tcp host 209.165.200.225 host
209.165.201.1 time-range New_York_Minute
```

Configuration Examples for Scheduling Access List Activation

The following is an example of an absolute time range beginning at 8:00 a.m. on January 1, 2006. Because no end time and date are specified, the time range is in effect indefinitely.

```
hostname(config)# time-range for2006
hostname(config-time-range)# absolute start 8:00 1 january 2006
```

The following is an example of a weekly periodic time range from 8:00 a.m. to 6:00 p.m. on weekdays:

```
hostname(config)# time-range workinghours
hostname(config-time-range)# periodic weekdays 8:00 to 18:00
```

Feature History for Scheduling Access List Activation

[Table 13-3](#) lists each feature change and the platform release in which it was implemented.

Table 13-3 Feature History for Scheduling Access List Activation

Feature Name	Releases	Feature Information
Scheduling access list activation	7.0	<p>You can schedule each ACE in an access list to be activated at specific times of the day and week.</p> <p>We introduced or modified the following commands: object-group <i>protocol</i>, object-group <i>network</i>, object-group <i>service</i>, object-group <i>icmp_type</i>.</p>



CHAPTER 14

Information About Access Lists

Cisco ASAs provide basic traffic filtering capabilities with access lists, which control access in your network by preventing certain traffic from entering or exiting. This chapter describes access lists and shows how to add them to your network configuration.

Access lists are made up of one or more access control entries (ACEs). An ACE is a single entry in an access list that specifies a permit or deny rule (to forward or drop the packet) and is applied to a protocol, to a source and destination IP address or network, and, optionally, to the source and destination ports.

Access lists can be configured for all routed and network protocols (IP, AppleTalk, and so on) to filter the packets of those protocols as the packets pass through a router.

Access lists are used in a variety of features. If your feature uses Modular Policy Framework, you can use an access list to identify traffic within a traffic class map. For more information on Modular Policy Framework, see [Chapter 32, “Configuring a Service Policy Using the Modular Policy Framework.”](#)

This chapter includes the following sections:

- [Access List Types, page 14-1](#)
- [Access Control Entry Order, page 14-2](#)
- [Access Control Implicit Deny, page 14-3](#)
- [IP Addresses Used for Access Lists When You Use NAT, page 14-3](#)
- [Where to Go Next, page 14-3](#)

Access List Types

The ASA uses five types of access control lists:

- Standard access lists—Identify the destination IP addresses of OSPF routes and can be used in a route map for OSPF redistribution. Standard access lists cannot be applied to interfaces to control traffic. For more information, see [Chapter 17, “Adding a Standard Access List.”](#)
- Extended access lists—Use one or more access control entries (ACE) in which you can specify the line number to insert the ACE, the source and destination addresses, and, depending upon the ACE type, the protocol, the ports (for TCP or UDP), or the ICMP type (for ICMP). For more information, see [Chapter 15, “Adding an Extended Access List.”](#)
- EtherType access lists—Use one or more ACEs that specify an EtherType. For more information, see [Chapter 16, “Adding an EtherType Access List.”](#)
- Webtype access lists—Used in a configuration that supports filtering for clientless SSL VPN. For more information, see [Chapter 18, “Adding a Webtype Access List.”](#)

- IPv6 access lists—Determine which IPv6 traffic to block and which traffic to forward at router interfaces. For more information, see [Chapter 19, “Adding an IPv6 Access List.”](#)

Table 14-1 lists the types of access lists and some common uses for them.

Table 14-1 Access List Types and Common Uses

Access List Use	Access List Type	Description
Control network access for IP traffic (routed and transparent mode)	Extended	The ASA does not allow any traffic from a lower security interface to a higher security interface unless it is explicitly permitted by an extended access list. Note To access the ASA interface for management access, you do not also need an access list allowing the host IP address. You only need to configure management access according to Chapter 37, “Configuring Management Access.”
Identify traffic for AAA rules	Extended	AAA rules use access lists to identify traffic.
Control network access for IP traffic for a given user	Extended, downloaded from a AAA server per user	You can configure the RADIUS server to download a dynamic access list to be applied to the user, or the server can send the name of an access list that you already configured on the ASA.
Identify addresses for NAT (policy NAT and NAT exemption)	Extended	Policy NAT lets you identify local traffic for address translation by specifying the source and destination addresses in an extended access list.
Establish VPN access	Extended	You can use an extended access list in VPN commands.
Identify traffic in a traffic class map for Modular Policy Framework	Extended EtherType	Access lists can be used to identify traffic in a class map, which is used for features that support Modular Policy Framework. Features that support Modular Policy Framework include TCP and general connection settings, and inspection.
For transparent firewall mode, control network access for non-IP traffic	EtherType	You can configure an access list that controls traffic based on its EtherType.
Identify OSPF route redistribution	Standard	Standard access lists include only the destination address. You can use a standard access list to control the redistribution of OSPF routes.
Filtering for WebVPN	Webtype	You can configure a Webtype access list to filter URLs.
Control network access for IPV6 networks	IPV6	You can add and apply access lists to control traffic in IPv6 networks.

Access Control Entry Order

An access list is made up of one or more access control entries (ACEs). Each ACE that you enter for a given access list name is appended to the end of the access list. Depending on the access list type, you can specify the source and destination addresses, the protocol, the ports (for TCP or UDP), the ICMP type (for ICMP), or the EtherType.

The order of ACEs is important. When the ASA decides whether to forward or to drop a packet, the ASA tests the packet against each ACE in the order in which the entries are listed. After a match is found, no more ACEs are checked. For example, if you create an ACE at the beginning of an access list that explicitly permits all traffic, no further statements are checked, and the packet is forwarded.

Access Control Implicit Deny

All access lists have an implicit deny statement at the end, so unless you explicitly permit traffic to pass, it will be denied. For example, if you want to allow all users to access a network through the ASA except for one or more particular addresses, then you need to deny those particular addresses and then permit all others.

For EtherType access lists, the implicit deny at the end of the access list does not affect IP traffic or ARPs; for example, if you allow EtherType 8037, the implicit deny at the end of the access list does not now block any IP traffic that you previously allowed with an extended access list (or implicitly allowed from a high security interface to a low security interface). However, if you *explicitly* deny all traffic with an EtherType ACE, then IP and ARP traffic is denied.

IP Addresses Used for Access Lists When You Use NAT

For the following features, you should always use the *real* IP address in the access list when you use NAT, even if the address as seen on an interface is the mapped address:

- **access-group** command
- Modular Policy Framework **match access-list** command
- Botnet Traffic Filter **dynamic-filter enable classify-list** command
- AAA **aaa ... match** commands
- WCCP **wccp redirect-list group-list** command

The following features use access lists, but these access lists use the *mapped* values as seen on an interface:

- IPsec access lists
- capture command access lists
- Per-user access lists
- Routing protocols
- All other features...

Where to Go Next

For information about implementing access lists, see the following chapters in this guide:

- [Chapter 15, “Adding an Extended Access List”](#)
- [Chapter 16, “Adding an EtherType Access List”](#)

- [Chapter 17, “Adding a Standard Access List”](#)
- [Chapter 18, “Adding a Webtype Access List”](#)
- [Chapter 19, “Adding an IPv6 Access List”](#)
- [Chapter 34, “Configuring Access Rules”](#)



CHAPTER 15

Adding an Extended Access List

This chapter describes how to configure extended access lists (also known as access control lists), and it includes the following sections:

- [Information About Extended Access Lists, page 15-1](#)
- [Licensing Requirements for Extended Access Lists, page 15-1](#)
- [Guidelines and Limitations, page 15-1](#)
- [Default Settings, page 15-2](#)
- [Configuring Extended Access Lists, page 15-2](#)
- [Monitoring Extended Access Lists, page 15-5](#)
- [Configuration Examples for Extended Access Lists, page 15-5](#)
- [Where to Go Next, page 15-7](#)
- [Feature History for Extended Access Lists, page 15-7](#)

Information About Extended Access Lists

Access lists are used to control network access or to specify traffic for many features to act upon. An extended access list is made up of one or more access control entries (ACE) in which you can specify the line number to insert the ACE, the source and destination addresses, and, depending upon the ACE type, the protocol, the ports (for TCP or UDP), or the ICMP type. You can identify all of these parameters within the **access-list** command, or you can use objects for each parameter.

Licensing Requirements for Extended Access Lists

The following table shows the licensing requirements for this feature:

Model	License Requirement
All models	Base License.

Guidelines and Limitations

This section includes the guidelines and limitations for this feature.

Context Mode Guidelines

Supported in single and multiple context mode.

Firewall Mode Guidelines

Supported only in routed and transparent firewall modes.

IPv6 Guidelines

IPv6 is supported.

Additional Guidelines and Limitations

The following guidelines and limitations apply to creating an extended access list:

- Enter the access list name in uppercase letters so that the name is easy to see in the configuration. You might want to name the access list for the interface (for example, INSIDE), or you can name it for the purpose for which it is created (for example, NO_NAT or VPN).
- Typically, you identify the **ip** keyword for the protocol, but other protocols are accepted. For a list of protocol names, see the “[Protocols and Applications](#)” section on page B-11.
- You can specify the source and destination ports only for the TCP or UDP protocols. For a list of permitted keywords and well-known port assignments, see the “[TCP and UDP Ports](#)” section on page B-11. DNS, Discard, Echo, Ident, NTP, RPC, SUNRPC, and Talk each require one definition for TCP and one for UDP. TACACS+ requires one definition for port 49 on TCP.
- When you specify a network mask, the method is different from the Cisco IOS software **access-list** command. The ASA uses a network mask (for example, 255.255.255.0 for a Class C mask). The Cisco IOS mask uses wildcard bits (for example, 0.0.0.255).

Default Settings

Table 15-1 lists the default settings for extended access list parameters.

Table 15-1 Default Extended Access List Parameters

Parameters	Default
ACE logging	ACE logging generates system log message 106023 for denied packets. A deny ACE must be present to log denied packets.
log	When the log keyword is specified, the default level for system log message 106100 is 6 (informational), and the default interval is 300 seconds.

Configuring Extended Access Lists

This section shows how to add and delete an access control entry and access list, and it includes the following topics:

- [Adding an Extended Access List](#), page 15-3
- [Adding Remarks to Access Lists](#), page 15-5

Adding an Extended Access List

An access list is made up of one or more access control entries (ACEs) with the same access list ID. To create an access list you start by creating an ACE and applying a list name. An access list with one entry is still considered a list, although you can add multiple entries to the list.

Prerequisites

(Optional) Create an object or object group according to the [“Configuring Objects and Groups” section on page 13-1](#).

Guidelines

To delete an ACE, enter the **no access-list** command with the entire command syntax string as it appears in the configuration. To remove the entire access list, use the **clear configure access-list** command.

Detailed Steps

Command	Purpose
<p>(For IP traffic, no ports)</p> <pre>access-list access_list_name [line line_number] extended {deny permit} {protocol object-group prot_grp_id} {source_address mask object nw_obj_id object-group nw_grp_id} {dest_address mask object nw_obj_id object-group nw_grp_id} [log [[level] [interval secs] disable default]] [inactive time-range time_range_name]</pre> <p>(For TCP or UDP traffic, with ports)</p> <pre>access-list access_list_name [line line_number] extended {deny permit} {tcp udp object-group prot_grp_id} {source_address mask object nw_obj_id object-group nw_grp_id} [operator port object-group svc_grp_id] {dest_address mask object nw_obj_id object-group nw_grp_id} [operator port object-group svc_grp_id] [log [[level] [interval secs] disable default]] [inactive time-range time_range_name]</pre> <p>(For ICMP traffic)</p> <pre>access-list access_list_name [line line_number] extended {deny permit} icmp {source_address mask object nw_obj_id object-group nw_grp_id} {dest_address mask object nw_obj_id object-group nw_grp_id} [icmp_type object-group icmp_grp_id] [log [[level] [interval secs] disable default]] [inactive time-range time_range_name]</pre>	<p>Adds an extended ACE.</p> <p>The line <i>line_number</i> option specifies the line number at which insert the ACE. If you do not specify a line number, the ACE is added to the end of the access list. The line number is not saved in the configuration; it only specifies where to insert the ACE.</p> <p>The deny keyword denies a packet if the conditions are matched. The permit keyword permits a packet if the conditions are matched.</p> <p>Instead of entering the protocol, IP address, or port directly in the command, you can use network objects, or protocol, network, port, or ICMP object groups using the object and object-group keyword. See “Configuring Objects and Groups” section on page 13-1 for more information about creating objects.</p> <p>The <i>protocol</i> argument specifies the IP protocol name or number. For example UDP is 17, TCP is 6, and EGP is 47.</p> <p>The <i>source_address</i> specifies the IP address of the network or host from which the packet is being sent. Enter the host keyword before the IP address to specify a single address. In this case, do not enter a mask. Enter the any keyword instead of the address and mask to specify any address.</p> <p>For the TCP and UDP protocols only, the <i>operator port</i> option matches the port numbers used by the source or destination. The permitted operators are as follows:</p> <ul style="list-style-type: none"> • lt—less than. • gt—greater than. • dq—equal to. • neq—not equal to. • range—an inclusive range of values. When you use this operator, specify two port numbers, for example: range 100 200. <p>The <i>dest_address</i> argument specifies the IP address of the network or host to which the packet is being sent. Enter the host keyword before the IP address to specify a single address. In this case, do not enter a mask. Enter the any keyword instead of the address and mask to specify any address.</p> <p>The <i>icmp_type</i> argument specifies the ICMP type if the protocol is ICMP.</p> <p>The time-range keyword specifies when an access list is activated. See the “Scheduling Extended Access List Activation” section on page 13-16 for more information.</p> <p>The inactive keyword disables an ACE. To reen able it, enter the entire ACE without the inactive keyword. This feature enables you to keep a record of an inactive ACE in your configuration to make reenabling easier.</p> <p>For the log keyword, see Chapter 20, “Configuring Logging for Access Lists.”</p>
<p>Example:</p> <pre>hostname(config)# access-list ACL_IN extended permit ip any any</pre>	

Adding Remarks to Access Lists

You can include remarks about entries in any access list, including extended, EtherType, IPv6, standard, and Webtype access lists. The remarks make the access list easier to understand.

To add a remark after the last **access-list** command you entered, enter the following command:

Command	Purpose
access-list <i>access_list_name</i> remark <i>text</i>	Adds a remark after the last access-list command you entered. The text can be up to 100 characters in length. You can enter leading spaces at the beginning of the text. Trailing spaces are ignored.
Example: hostname(config)# access-list OUT remark - this is the inside admin address	If you enter the remark before any access-list command, then the remark is the first line in the access list. If you delete an access list using the no access-list <i>access_list_name</i> command, then all the remarks are also removed.

Example

You can add remarks before each ACE, and the remark appears in the access list in this location. Entering a dash (-) at the beginning of the remark helps set it apart from the ACEs.

```
hostname(config)# access-list OUT remark - this is the inside admin address
hostname(config)# access-list OUT extended permit ip host 209.168.200.3 any
hostname(config)# access-list OUT remark - this is the hr admin address
hostname(config)# access-list OUT extended permit ip host 209.168.200.4 any
```

Monitoring Extended Access Lists

To monitor extended access lists, enter one of the following commands:

Command	Purpose
show access list	Displays the access list entries by number.
show running-config access-list	Displays the current running access-list configuration.

Configuration Examples for Extended Access Lists

This section includes the following topics:

- [Configuration Examples for Extended Access Lists \(No Objects\)](#), page 15-6
- [Configuration Examples for Extended Access Lists \(Using Objects\)](#), page 15-6

Configuration Examples for Extended Access Lists (No Objects)

The following access list allows all hosts (on the interface to which you apply the access list) to go through the ASA:

```
hostname(config)# access-list ACL_IN extended permit ip any any
```

The following sample access list prevents hosts on 192.168.1.0/24 from accessing the 209.165.201.0/27 network. All other addresses are permitted.

```
hostname(config)# access-list ACL_IN extended deny tcp 192.168.1.0 255.255.255.0
209.165.201.0 255.255.255.224
hostname(config)# access-list ACL_IN extended permit ip any any
```

If you want to restrict access to selected hosts only, then enter a limited permit ACE. By default, all other traffic is denied unless explicitly permitted.

```
hostname(config)# access-list ACL_IN extended permit ip 192.168.1.0 255.255.255.0
209.165.201.0 255.255.255.224
```

The following access list restricts all hosts (on the interface to which you apply the access list) from accessing a website at address 209.165.201.29. All other traffic is allowed.

```
hostname(config)# access-list ACL_IN extended deny tcp any host 209.165.201.29 eq www
hostname(config)# access-list ACL_IN extended permit ip any any
```

The following access list that uses object groups restricts several hosts on the inside network from accessing several web servers. All other traffic is allowed.

```
hostname(config-network)# access-list ACL_IN extended deny tcp object-group denied
object-group web eq www
hostname(config)# access-list ACL_IN extended permit ip any any
hostname(config)# access-group ACL_IN in interface inside
```

The following example temporarily disables an access list that permits traffic from one group of network objects (A) to another group of network objects (B):

```
hostname(config)# access-list 104 permit ip host object-group A object-group B inactive
```

To implement a time-based access list, use the **time-range** command to define specific times of the day and week. Then use the **access-list extended** command to bind the time range to an access list. The following example binds an access list named “Sales” to a time range named “New_York_Minute.”

```
hostname(config)# access-list Sales line 1 extended deny tcp host 209.165.200.225 host
209.165.201.1 time-range New_York_Minute
```

Configuration Examples for Extended Access Lists (Using Objects)

The following normal access list that does not use object groups restricts several hosts on the inside network from accessing several web servers. All other traffic is allowed.

```
hostname(config)# access-list ACL_IN extended deny tcp host 10.1.1.4 host 209.165.201.29
eq www
hostname(config)# access-list ACL_IN extended deny tcp host 10.1.1.78 host 209.165.201.29
eq www
hostname(config)# access-list ACL_IN extended deny tcp host 10.1.1.89 host 209.165.201.29
eq www
hostname(config)# access-list ACL_IN extended deny tcp host 10.1.1.4 host 209.165.201.16
eq www
```

```

hostname(config)# access-list ACL_IN extended deny tcp host 10.1.1.78 host 209.165.201.16
eq www
hostname(config)# access-list ACL_IN extended deny tcp host 10.1.1.89 host 209.165.201.16
eq www
hostname(config)# access-list ACL_IN extended deny tcp host 10.1.1.4 host 209.165.201.78
eq www
hostname(config)# access-list ACL_IN extended deny tcp host 10.1.1.78 host 209.165.201.78
eq www
hostname(config)# access-list ACL_IN extended deny tcp host 10.1.1.89 host 209.165.201.78
eq www
hostname(config)# access-list ACL_IN extended permit ip any any
hostname(config)# access-group ACL_IN in interface inside

```

If you make two network object groups, one for the inside hosts, and one for the web servers, then the configuration can be simplified and can be easily modified to add more hosts:

```

hostname(config)# object-group network denied
hostname(config-network)# network-object host 10.1.1.4
hostname(config-network)# network-object host 10.1.1.78
hostname(config-network)# network-object host 10.1.1.89

hostname(config-network)# object-group network web
hostname(config-network)# network-object host 209.165.201.29
hostname(config-network)# network-object host 209.165.201.16
hostname(config-network)# network-object host 209.165.201.78

hostname(config-network)# access-list ACL_IN extended deny tcp port object-group denied
object-group web eq www
hostname(config)# access-list ACL_IN extended permit ip any any
hostname(config)# access-group ACL_IN in interface inside

```

Where to Go Next

Apply the access list to an interface. See the [“Configuring Access Rules”](#) section on page 34-7 for more information.

Feature History for Extended Access Lists

Table 15-2 lists each feature change and the platform release in which it was implemented.

Table 15-2 Feature History for Extended Access Lists

Feature Name	Releases	Feature Information
Extended access lists	7.0(1)	Access lists are used to control network access or to specify traffic for many features to act upon. An extended access control list is made up of one or more access control entries (ACE) in which you can specify the line number to insert the ACE, the source and destination addresses, and, depending upon the ACE type, the protocol, the ports (for TCP or UDP), or the IPCMP type (for ICMP). We introduced the following command: access-list extended .



CHAPTER 16

Adding an EtherType Access List

This chapter describes how to configure EtherType access lists and includes the following sections:

- [Information About EtherType Access Lists, page 16-1](#)
- [Licensing Requirements for EtherType Access Lists, page 16-1](#)
- [Guidelines and Limitations, page 16-2](#)
- [Default Settings, page 16-2](#)
- [Configuring EtherType Access Lists, page 16-2](#)
- [Monitoring EtherType Access Lists, page 16-4](#)
- [What to Do Next, page 16-4](#)
- [Configuration Examples for EtherType Access Lists, page 16-5](#)
- [Feature History for EtherType Access Lists, page 16-5](#)

Information About EtherType Access Lists

An EtherType access list is made up of one or more Access Control Entries (ACEs) that specify an EtherType. An EtherType rule controls any EtherType identified by a 16-bit hexadecimal number, as well as other traffic types. See the [“Supported EtherTypes and Other Traffic”](#) section on page 34-6 for more information.

For information about creating an access rule with the EtherType access list, see [Chapter 34, “Configuring Access Rules.”](#)

Licensing Requirements for EtherType Access Lists

The following table shows the licensing requirements for this feature:

Model	License Requirement
All models	Base License.

Guidelines and Limitations

This section includes the guidelines and limitations for this feature.

Context Mode Guidelines

Available in single and multiple context modes.

Firewall Mode Guidelines

Supported in transparent firewall mode only.

IPv6 Guidelines

Supports IPv6.

Additional Guidelines and Limitations

The following guidelines and limitations apply to EtherType access lists:

- For EtherType access lists, the implicit deny at the end of the access list does not affect IP traffic or ARPs; for example, if you allow EtherType 8037, the implicit deny at the end of the access list does not now block any IP traffic that you previously allowed with an extended access list (or implicitly allowed from a high security interface to a low security interface). However, if you *explicitly* deny all traffic with an EtherType ACE, then IP and ARP traffic is denied.
- 802.3-formatted frames are not handled by the access list because they use a length field as opposed to a type field.
- See the “[Supported EtherTypes and Other Traffic](#)” section on page 34-6 for more information about supported traffic.

Default Settings

Access list logging generates system log message 106023 for denied packets. Deny packets must be present to log denied packets.

When you configure logging for the access list, the default severity level for system log message 106100 is 6 (informational).

Configuring EtherType Access Lists

This section includes the following topics:

- [Task Flow for Configuring EtherType Access Lists, page 16-2](#)
- [Adding EtherType Access Lists, page 16-3](#)
- [Adding Remarks to Access Lists, page 16-4](#)

Task Flow for Configuring EtherType Access Lists

Use the following guidelines to create and implement an access list:

- Step 1** Create an access list by adding an ACE and applying an access list name, as shown in the “Adding EtherType Access Lists” section on page 16-3.
- Step 2** Apply the access list to an interface. (See the “Configuring Access Rules” section on page 34-7 for more information.)

Adding EtherType Access Lists

To configure an access list that controls traffic based upon its EtherType, perform the following steps:

Detailed Steps

Command	Purpose
<pre>access-list access_list_name ethertype {deny permit} {ipx bpdu mpls-unicast mpls-multicast is-is any hex_number}</pre> <p>Example: hostname(config)# hostname(config)# access-list ETHER ethertype permit ipx</p>	<p>Adds an EtherType ACE.</p> <p>The <i>access_list_name</i> argument lists the name or number of an access list. When you specify an access list name, the ACE is added to the end of the access list. Enter the <i>access_list_name</i> in upper case letters so that the name is easy to see in the configuration. You might want to name the access list for the interface (for example, INSIDE) or for the purpose (for example, MPLS or PIX).</p> <p>The permit keyword permits access if the conditions are matched.</p> <p>The deny keyword denies access if the conditions are matched. If an EtherType access list is configured to deny all, all ethernet frames are discarded. Only physical protocol traffic, such as auto-negotiation, is still allowed.</p> <p>The ipx keyword specifies access to IPX.</p> <p>The bpdu keyword specifies access to bridge protocol data units, which are allowed by default.</p> <p>The mpls-unicast keyword specifies access to MPLS unicast.</p> <p>The mpls-multicast keyword specifies access to MPLS multicast.</p> <p>The is-is keyword specifies access to IS-IS traffic (Version 8.4(5) only).</p> <p>The any keyword specifies access for any traffic.</p> <p>The <i>hex_number</i> argument indicates any EtherType that can be identified by a 16-bit hexadecimal number greater than or equal to 0x600. (See RFC 1700, “Assigned Numbers,” at http://www.ietf.org/rfc/rfc1700.txt for a list of EtherTypes.)</p> <p> Note To remove an EtherType ACE, enter the no access-list command with the entire command syntax string as it appears in the configuration.</p>

Example

The following sample access list allows common EtherTypes originating on the inside interface:

```
hostname(config)# access-list ETHER ethertype permit ipx
hostname(config)# access-list ETHER ethertype permit mpls-unicast
hostname(config)# access-group ETHER in interface inside
```

Adding Remarks to Access Lists

You can include remarks about entries in any access list, including extended, EtherType, IPv6, standard, and Webtype access lists. The remarks make an access list easier to understand.

To add a remark after the last **access-list** command you entered, enter the following command:

Command	Purpose
<code>access-list access_list_name remark text</code>	Adds a remark after the last access-list command you entered.
Example: <code>hostname(config)# access-list OUT remark - this is the inside admin address</code>	The text can be up to 100 characters in length. You can enter leading spaces at the beginning of the text. Trailing spaces are ignored. If you enter the remark before any access-list command, then the remark is the first line in the access list. If you delete an access list using the no access-list access_list_name command, then all remarks are also removed.

Example

You can add remarks before each ACE, and the remarks appear in the access list in these locations. Entering a dash (-) at the beginning of a remark helps to set it apart from the ACE.

```
hostname(config)# access-list OUT remark - this is the inside admin address
hostname(config)# access-list OUT extended permit ip host 209.168.200.3 any
hostname(config)# access-list OUT remark - this is the hr admin address
hostname(config)# access-list OUT extended permit ip host 209.168.200.4 any
```

What to Do Next

Apply the access list to an interface. (See the “[Configuring Access Rules](#)” section on page 34-7 for more information.)

Monitoring EtherType Access Lists

To monitor EtherType access lists, enter one of the following commands:

Command	Purpose
<code>show access-list</code>	Displays the access list entries by number.
<code>show running-config access-list</code>	Displays the current running access-list configuration.

Configuration Examples for EtherType Access Lists

The following example shows how to configure EtherType access lists:

The following access list allows some EtherTypes through the ASA, but it denies IPX:

```
hostname(config)# access-list ETHER ethertype deny ipx
hostname(config)# access-list ETHER ethertype permit 0x1234
hostname(config)# access-list ETHER ethertype permit mpls-unicast
hostname(config)# access-group ETHER in interface inside
hostname(config)# access-group ETHER in interface outside
```

The following access list denies traffic with EtherType 0x1256, but it allows all others on both interfaces:

```
hostname(config)# access-list nonIP ethertype deny 1256
hostname(config)# access-list nonIP ethertype permit any
hostname(config)# access-group ETHER in interface inside
hostname(config)# access-group ETHER in interface outside
```

Feature History for EtherType Access Lists

Table 16-1 lists each feature change and the platform release in which it was implemented.

Table 16-1 Feature History for EtherType Access Lists

Feature Name	Releases	Feature Information
EtherType access lists	7.0(1)	EtherType access lists control traffic based upon its EtherType. We introduced the feature and the following command: access-list ethertype.



CHAPTER 17

Adding a Standard Access List

This chapter describes how to configure a standard access list and includes the following sections:

- [Information About Standard Access Lists, page 17-1](#)
- [Licensing Requirements for Standard Access Lists, page 17-1](#)
- [Guidelines and Limitations, page 17-1](#)
- [Default Settings, page 17-2](#)
- [Adding Standard Access Lists, page 17-3](#)
- [What to Do Next, page 17-4](#)
- [Monitoring Access Lists, page 17-4](#)
- [Configuration Examples for Standard Access Lists, page 17-4](#)
- [Feature History for Standard Access Lists, page 17-5](#)

Information About Standard Access Lists

Standard access lists identify the destination IP addresses of OSPF routes and can be used in a route map for OSPF redistribution. Standard access lists cannot be applied to interfaces to control traffic.

Licensing Requirements for Standard Access Lists

The following table shows the licensing requirements for this feature:

Model	License Requirement
All models	Base License.

Guidelines and Limitations

This section includes the guidelines and limitations for this feature:

- [Context Mode Guidelines, page 17-2](#)
- [Firewall Mode Guidelines, page 17-2](#)

- [IPv6 Guidelines, page 17-2](#)
- [Additional Guidelines and Limitations, page 17-2](#)

Context Mode Guidelines

Supported in single context mode only.

Firewall Mode Guidelines

Supported in routed and transparent firewall modes.

IPv6 Guidelines

Supports IPv6.

Additional Guidelines and Limitations

The following guidelines and limitations apply for standard Access Lists:

- Standard ACLs identify the destination IP addresses (not source addresses) of OSPF routes and can be used in a route map for OSPF redistribution. Standard ACLs cannot be applied to interfaces to control traffic.
- To add additional ACEs at the end of the access list, enter another **access-list** command, specifying the same access list name.
- When used with the **access-group** command, the **deny** keyword does not allow a packet to traverse the ASA. By default, the ASA denies all packets on the originating interface unless you specifically permit access.
- When specifying a source, local, or destination address, use the following guidelines:
 - Use a 32-bit quantity in four-part, dotted-decimal format.
 - Use the keyword **any** as an abbreviation for an address and mask of 0.0.0.0.0.0.0.
 - Use the **host ip_address** option as an abbreviation for a mask of 255.255.255.255.
- You can disable an ACE by specifying the keyword **inactive** in the **access-list** command.

Default Settings

[Table 17-1](#) lists the default settings for standard Access List parameters.

Table 17-1 Default Standard Access List Parameters

Parameters	Default
deny	The ASA denies all packets on the originating interface unless you specifically permit access. Access list logging generates system log message 106023 for denied packets. Deny packets must be present to log denied packets.

Adding Standard Access Lists

This section includes the following topics:

- [Task Flow for Configuring Extended Access Lists, page 17-3](#)
- [Adding a Standard Access List, page 17-3](#)[Adding Remarks to Access Lists, page 17-4](#)

Task Flow for Configuring Extended Access Lists

Use the following guidelines to create and implement an access list:

- Create an access list by adding an ACE and applying an access list name. See in the [“Adding Standard Access Lists”](#) section on page 17-3.
- Apply the access list to an interface. See the [“Configuring Access Rules”](#) section on page 34-7 for more information.

Adding a Standard Access List

To add an access list to identify the destination IP addresses of OSPF routes, which can be used in a route map for OSPF redistribution, enter the following command:

Command	Purpose
<pre>hostname(config)# access-list access_list_name standard {deny permit} {any ip_address mask}</pre>	<p>Adds a standard access list entry. To add another ACE to the end of the access list, enter another access-list command, specifying the same access list name.</p> <p>The <i>access_list_name</i> argument specifies the name of number of an access list.</p> <p>The any keyword specifies access to anyone.</p> <p>The deny keyword denies access if the conditions are matched.</p> <p>The host <i>ip_address</i> syntax specifies access to a host IP address.</p> <p>The <i>ip_address ip_mask</i> argument specifies access to a specific IP address and subnet mask.</p> <p>The line <i>line-num</i> option specifies the line number at which to insert an ACE.</p> <p>The permit keyword permits access if the conditions are matched.</p> <p>To remove an ACE, enter the no access-list command with the entire command syntax string as it appears in the configuration.</p>
<p>Example:</p> <pre>hostname(config)# access-list OSPF standard permit 192.168.1.0 255.255.255.0</pre>	

Adding Remarks to Access Lists

You can include remarks about entries in any access list, including extended, EtherType, IPv6, standard, and Webtype access lists. The remarks make the access list easier to understand.

To add a remark after the last **access-list** command you entered, enter the following command:

Command	Purpose
access-list <i>access_list_name</i> remark <i>text</i>	Adds a remark after the last access-list command you entered.
Example: hostname(config)# access-list OUT remark - this is the inside admin address	The text can be up to 100 characters in length. You can enter leading spaces at the beginning of the text. Trailing spaces are ignored. If you enter the remark before any access-list command, then the remark is the first line in the access list. If you delete an access list using the no access-list <i>access_list_name</i> command, then all the remarks are also removed.

Example

You can add a remark before each ACE, and the remarks appear in the access lists in these location. Entering a dash (-) at the beginning of a remark helps to set it apart from an ACE.

```
hostname(config)# access-list OUT remark - this is the inside admin address
hostname(config)# access-list OUT extended permit ip host 209.168.200.3 any
hostname(config)# access-list OUT remark - this is the hr admin address
hostname(config)# access-list OUT extended permit ip host 209.168.200.4 any
```

What to Do Next

Apply the access list to an interface. See the [“Configuring Access Rules” section on page 34-7](#) for more information.

Monitoring Access Lists

To monitor access lists, perform one of the following tasks:

Command	Purpose
show access-list	Displays the access list entries by number.
show running-config access-list	Displays the current running access-list configuration.

Configuration Examples for Standard Access Lists

The following example shows how to deny IP traffic through the ASA:

```
hostname(config)# access-list 77 standard deny
```

The following example shows how to permit IP traffic through the ASA if conditions are matched:

```
hostname(config)# access-list 77 standard permit
```

The following example shows how to specify a destination address:

```
hostname(config)# access-list 77 standard permit host 10.1.10.123
```

Feature History for Standard Access Lists

[Table 17-2](#) lists each feature change and the platform release in which it was implemented.

Table 17-2 Feature History for Standard Access Lists

Feature Name	Releases	Feature Information
Standard access lists	7.0(1)	Standard access lists identify the destination IP addresses of OSPF routes, which can be used in a route map for OSPF redistribution. We introduced the feature and the following command: access-list standard.



CHAPTER 18

Adding a Webtype Access List

Webtype access lists are added to a configuration that supports filtering for clientless SSL VPN. This chapter describes how to add an access list to the configuration that supports filtering for WebVPN.

This chapter includes the following sections:

- [Licensing Requirements for Webtype Access Lists, page 18-1](#)
- [Guidelines and Limitations, page 18-1](#)
- [Default Settings, page 18-2](#)
- [Using Webtype Access Lists, page 18-2](#)
- [What to Do Next, page 18-5](#)
- [Monitoring Webtype Access Lists, page 18-5](#)
- [Configuration Examples for Webtype Access Lists, page 18-5](#)
- [Feature History for Webtype Access Lists, page 18-7](#)

Licensing Requirements for Webtype Access Lists

The following table shows the licensing requirements for this feature:

Model	License Requirement
All models	Base License.

Guidelines and Limitations

This section includes the guidelines and limitations for this feature:

- [Context Mode Guidelines, page 18-1](#)
- [Firewall Mode Guidelines, page 18-2](#)
- [Additional Guidelines and Limitations, page 18-2](#)

Context Mode Guidelines

Supported in single and multiple context mode.

Firewall Mode Guidelines

Supported in routed and transparent firewall mode.

IPv6 Guidelines

Supports IPv6.

Additional Guidelines and Limitations

The following guidelines and limitations apply to Webtype access lists:

- The **access-list webtype** command is used to configure clientless SSL VPN filtering. The URL specified may be full or partial (no file specified), may include wildcards for the server, or may specify a port. See the [“Adding Webtype Access Lists with a URL String”](#) section on page 18-3 for information about using wildcard characters in the URL string.
- Valid protocol identifiers are http, https, cifs, imap4, pop3, and smtp. The RL may also contain the keyword **any** to refer to any URL. An asterisk may be used to refer to a subcomponent of a DNS name.

Default Settings

Table 18-1 lists the default settings for Webtype access lists parameters.

Table 18-1 Default Webtype Access List Parameters

Parameters	Default
deny	The ASA denies all packets on the originating interface unless you specifically permit access.
log	Access list logging generates system log message 106023 for denied packets. Deny packets must be present to log denied packets.

Using Webtype Access Lists

This section includes the following topics:

- [Task Flow for Configuring Webtype Access Lists](#), page 18-2
- [Adding Webtype Access Lists with a URL String](#), page 18-3
- [Adding Webtype Access Lists with an IP Address](#), page 18-4
- [Adding Remarks to Access Lists](#), page 18-5

Task Flow for Configuring Webtype Access Lists

Use the following guidelines to create and implement an access list:

- Create an access list by adding an ACE and applying an access list name. See the [“Using Webtype Access Lists”](#) section on page 18-2.
- Apply the access list to an interface. See the [“Configuring Access Rules”](#) section on page 34-7 for more information.

Adding Webtype Access Lists with a URL String

To add an access list to the configuration that supports filtering for clientless SSL VPN, enter the following command:

Command	Purpose
<pre>access-list access_list_name webtype {deny permit} url [url_string any] [log[[disable default] level] interval secs] [time_range name]]</pre> <p>Example:</p> <pre>hostname(config)# access-list acl_company webtype deny url http://*.cisco.example</pre>	<p>Adds an access list to the configuration that supports filtering for WebVPN.</p> <p>The <i>access_list_name</i> argument specifies the name or number of an access list.</p> <p>The any keyword specifies all URLs.</p> <p>The deny keyword denies access if the conditions are matched.</p> <p>The interval option specifies the time interval at which to generate system log message 106100; valid values are from 1 to 600 seconds.</p> <p>The log [[disable default] <i>level</i>] option specifies that system log message 106100 is generated for the ACE. When the log optional keyword is specified, the default level for system log message 106100 is 6 (informational). See the log command for more information.</p> <p>The permit keyword permits access if the conditions are matched.</p> <p>The time_range name option specifies a keyword for attaching the time-range option to this access list element.</p> <p>The url keyword specifies that a URL be used for filtering.</p> <p>The <i>url_string</i> option specifies the URL to be filtered.</p> <p>You can use the following wildcard characters to define more than one wildcard in the Webtype access list entry:</p> <ul style="list-style-type: none"> • Enter an asterisk "*" to match no characters or any number of characters. • Enter a question mark "?" to match any one character exactly. • Enter square brackets "[" to create a range operator that matches any one character in a range. <p> Note To match any http URL, you must enter http://*/* instead of the former method of entering http://*.</p> <p>To remove an access list, use the no form of this command with the complete syntax string as it appears in the configuration.</p>

Adding Webtype Access Lists with an IP Address

To add an access list to the configuration that supports filtering for clientless SSL VPN, enter the following command:

Command	Purpose
<pre>access-list access_list_name webtype {deny permit} tcp [host ip_address ip_address subnet_mask any] [oper port[port]] [log[[disable default] level] interval secs][time_range name]</pre>	<p>Adds an access list to the configuration that supports filtering for WebVPN.</p> <p>The <i>access_list_name</i> argument specifies the name or number of an access list.</p> <p>The any keyword specifies all IP addresses.</p> <p>The deny keyword denies access if the conditions are matched.</p> <p>The host ip_address option specifies a host IP address.</p> <p>The interval option specifies the time interval at which to generate system log message 106100; valid values are from 1 to 600 seconds.</p> <p>The <i>ip_address ip_mask</i> option specifies a specific IP address and subnet mask.</p> <p>The log [[disable default] level] option specifies that system log message 106100 is generated for the ACE. When the log optional keyword is specified, the default level for system log message 106100 is 6 (informational). See the log command for more information.</p> <p>The permit keyword permits access if the conditions are matched.</p> <p>The port option specifies the decimal number or name of a TCP or UDP port.</p> <p>The time_range name option specifies a keyword for attaching the time-range option to this access list element.</p> <p>To remove an access list, use the no form of this command with the complete syntax string as it appears in the configuration.</p>
<p>Example:</p> <pre>hostname(config)# access-list acl_company webtype permit tcp any</pre>	

Adding Remarks to Access Lists

You can include remarks about entries in any access list, including extended, EtherType, IPv6, standard, and Webtype access lists. The remarks make the access list easier to understand.

To add a remark after the last **access-list** command you entered, enter the following command:

Command	Purpose
access-list <i>access_list_name</i> remark <i>text</i>	Adds a remark after the last access-list command you entered.
Example: hostname(config)# access-list OUT remark - this is the inside admin address	The text can be up to 100 characters in length. You can enter leading spaces at the beginning of the text. Trailing spaces are ignored. If you enter the remark before any access-list command, then the remark is the first line in the access list. If you delete an access list using the no access-list <i>access_list_name</i> command, then all the remarks are also removed.

Example

You can add a remark before each ACE, and the remarks appear in the access list in these locations. Entering a dash (-) at the beginning of a remark helps set it apart from an ACE.

```
hostname(config)# access-list OUT remark - this is the inside admin address
hostname(config)# access-list OUT extended permit ip host 209.168.200.3 any
hostname(config)# access-list OUT remark - this is the hr admin address
hostname(config)# access-list OUT extended permit ip host 209.168.200.4 any
```

What to Do Next

Apply the access list to an interface. See the “[Configuring Access Rules](#)” section on page 34-7 for more information.

Monitoring Webtype Access Lists

To monitor webtype access lists, enter the following command:

Command	Purpose
show running-config access list	Displays the access-list configuration running on the ASA.

Configuration Examples for Webtype Access Lists

The following example shows how to deny access to a specific company URL:

```
hostname(config)# access-list acl_company webtype deny url http://*.example.com
```

The following example shows how to deny access to a specific file:

```
hostname(config)# access-list acl_file webtype deny url
https://www.example.com/dir/file.html
```

The following example shows how to deny HTTP access to any URL through port 8080:

```
hostname(config)# access-list acl_company webtype deny url http://my-server:8080/*
```

The following examples show how to use wildcards in Webtype access lists.

- The following example matches URLs such as `http://www.example.com/` and `http://www.example.net/`:

```
access-list test webtype permit url http://www.*ample/
```
- The following example matches URLs such as `http://www.cisco.com` and `ftp://wwz.example.com`:

```
access-list test webtype permit url *://ww?.c*co*/
```
- The following example matches URLs such as `http://www.cisco.com:80` and `https://www.cisco.com:81`:

```
access-list test webtype permit url *://ww?.c*co*:8[01]/
```

The range operator “[]” in the preceding example specifies that either character **0** or **1** can occur.

- The following example matches URLs such as `http://www.example.com` and `http://www.example.net`:

```
access-list test webtype permit url http://www.[a-z]ample?*/
```

The range operator “[]” in the preceding example specifies that any character in the range from **a** to **z** can occur.

- The following example matches URLs such as `http://www.cisco.com/anything/crazy/url/ddtscgiz`:

```
access-list test webtype permit url htt*://*/cgi?*
```



Note

To match any http URL, you must enter **http://*/*** instead of the former method of entering `http://*`.

The following example shows how to enforce a webtype access list to disable access to specific CIFS shares.

In this scenario we have a root folder named “shares” that contains two sub-folders named “Marketing_Reports” and “Sales_Reports.” We want to specifically deny access to the “shares/Marketing_Reports” folder.

```
access-list CIFS_Avoid webtype deny url cifs://172.16.10.40/shares/Marketing_Reports.
```

However, due to the implicit “deny all,” the above access list makes all of the sub-folders inaccessible (“shares/Sales_Reports” and “shares/Marketing_Reports”), including the root folder (“shares”).

To fix the problem, add a new access list to allow access to the root folder and the remaining sub-folders:

```
access-list CIFS_Allow webtype permit url cifs://172.16.10.40/shares*
```

Feature History for Webtype Access Lists

Table 18-2 lists each feature change and the platform release in which it was implemented.

Table 18-2 Feature History for Webtype Access Lists

Feature Name	Releases	Feature Information
Webtype access lists	7.0(1)	Webtype access lists are access lists that are added to a configuration that supports filtering for clientless SSL VPN. We introduced the feature and the following command: access-list webtype.



CHAPTER 19

Adding an IPv6 Access List

This chapter describes how to configure IPv6 access lists to control and filter traffic through the ASA.

This chapter includes the following sections:

- [Information About IPv6 Access Lists, page 19-1](#)
- [Licensing Requirements for IPv6 Access Lists, page 19-1](#)
- [Prerequisites for Adding IPv6 Access Lists, page 19-2](#)
- [Guidelines and Limitations, page 19-2](#)
- [Default Settings, page 19-3](#)
- [Configuring IPv6 Access Lists, page 19-4](#)
- [Monitoring IPv6 Access Lists, page 19-7](#)
- [Configuration Examples for IPv6 Access Lists, page 19-7](#)
- [Where to Go Next, page 19-7](#)
- [Feature History for IPv6 Access Lists, page 19-7](#)

Information About IPv6 Access Lists

The typical access list functionality in IPv6 is similar to access lists in IPv4. Access lists determine which traffic to block and which traffic to forward at router interfaces. Access lists allow filtering based upon source and destination addresses, inbound and outbound to specific interfaces. Each access list has an implicit deny statement at the end. You define IPv6 access lists and set their deny and permit conditions using the **ipv6 access-list** command with the **deny** and **permit** keywords in global configuration mode.

Licensing Requirements for IPv6 Access Lists

The following table shows the licensing requirements for this feature:

Model	License Requirement
All models	Base License.

Prerequisites for Adding IPv6 Access Lists

You should be familiar with IPv6 addressing and basic configuration. See the **ipv6** commands in the *Cisco Security Appliance Command Reference* for more information about configuring IPv6.

Guidelines and Limitations

This section includes the guidelines and limitations for this feature.

Context Mode Guidelines

Supported in single and multiple context modes.

Firewall Mode Guidelines

Supported in routed and transparent firewall modes.

IPv6 Guidelines

Supports IPv6.

Additional Guidelines and Limitations

The following guidelines and limitations apply to IPv6 access lists:

- The **ipv6 access-list** command allows you to specify whether an IPv6 address is permitted or denied access to a port or protocol. Each command is called an ACE. One or more ACEs with the same access list name are referred to as an access list. Apply an access list to an interface using the **access-group** command.
- The ASA denies all packets from an outside interface to an inside interface unless you specifically permit access using an access list. All packets are allowed by default from an inside interface to an outside interface unless you specifically deny access.
- The **ipv6 access-list** command is similar to the **access-list** command, except that it is IPv6-specific. For additional information about access lists, refer to the **access-list extended** command.
- The **ipv6 access-list icmp** command is used to filter ICMPv6 messages that pass through the ASA. To configure the ICMPv6 traffic that is allowed to originate and terminate at a specific interface, use the **ipv6 icmp** command.
- See the **object-group** command for information on how to configure object groups.
- Possible operands for the operator option of the **ipv6 access-list** command include **lt** for less than, **gt** for greater than, **eq** for equal to, **neq** for not equal to, and **range** for an inclusive range. Use the **ipv6 access-list** command without an operator and port to indicate all ports by default.
- ICMP message types are filtered by the access rule. Omitting the *icmp_type* argument indicates all ICMP types. If you specify ICMP types, the value can be a valid ICMP type number (from 0 to 255) or one of the following ICMP type literals:
 - destination-unreachable
 - packet-too-big
 - time-exceeded
 - parameter-problem
 - echo-request

- echo-reply
 - membership-query
 - membership-report
 - membership-reduction
 - router-renumbering
 - router-solicitation
 - router-advertisement
 - neighbor-solicitation
 - neighbor-advertisement
 - neighbor-redirect
- If the protocol argument is specified, valid values are **icmp**, **ip**, **tcp**, **udp**, or an integer in the range of 1 to 254, representing an IP protocol number.

Default Settings

Table 19-1 lists the default settings for IPv6 access list parameters.

Table 19-1 Default IPv6 Access List Parameters

Parameters	Default
default	The default option specifies that a syslog message 106100 is generated for the ACE.
interval <i>secs</i>	Specifies the time interval at which to generate a 106100 syslog message; valid values are from 1 to 600 seconds. The default interval is 300 seconds. This value is also used as the timeout value for deleting an inactive flow.
<i>level</i>	The <i>level</i> option specifies the syslog level for message 106100; valid values are from 0 to 7. The default level is 6 (informational).
log	The log option specifies logging action for the ACE. If you do not specify the log keyword or you specify the log default keyword, then message 106023 is generated when a packet is denied by the ACE. If you specify the log keyword alone or with a level or interval, then message 106100 is generated when a packet is denied by the ACE. Packets that are denied by the implicit deny at the end of an access list are not logged. You must implicitly deny packets with an ACE to enable logging.

Configuring IPv6 Access Lists

This section includes the following topics:

- [Task Flow for Configuring IPv6 Access Lists, page 19-4](#)
- [Adding IPv6 Access Lists, page 19-5](#)
- [Adding Remarks to Access Lists, page 19-6](#)

Task Flow for Configuring IPv6 Access Lists

Use the following guidelines to create and implement an access list:

- Create an access list by adding an ACE and applying an access list name, as shown in the [“Adding IPv6 Access Lists” section on page 19-5](#).
- Apply the access list to an interface. (See the [“Configuring Access Rules” section on page 34-7](#) for more information.)

Adding IPv6 Access Lists

You can add a regular IPv6 access list or add an IPv6 access list with TCP.

To add a regular IPv6 access list, enter the following command:

Command	Purpose
<pre> ipv6 access-list <i>id</i> [line <i>line-num</i>] {deny permit} {<i>protocol</i> object-group <i>protocol_obj_grp_id</i>} {<i>source-ipv6-prefix/prefix-length</i> any host <i>source-ipv6-address</i> object-group <i>network_obj_grp_id</i>} [<i>operator</i> {<i>port</i> [<i>port</i>] object-group <i>service_obj_grp_id</i>}] {<i>destination-ipv6-prefix/prefix-length</i> any host <i>destination-ipv6-address</i> object-group <i>network_obj_grp_id</i>} [<i>operator</i> <i>port</i> [<i>port</i>] object-group <i>service_obj_grp_id</i>] [log [[<i>level</i>]]] [interval <i>secs</i>] disable default]] </pre>	<p>Configures an IPv6 access list.</p> <p>The any keyword is an abbreviation for the IPv6 prefix <code>::/0</code>, indicating any IPv6 address.</p> <p>The deny keyword denies access if the conditions are matched.</p> <p>The <i>destination-ipv6-address</i> argument identifies the IPv6 address of the host receiving the traffic.</p> <p>The <i>destination-ipv6-prefix</i> argument identifies the IPv6 network address where the traffic is destined.</p> <p>The disable option disables syslog messaging.</p> <p>The host keyword indicates that the address refers to a specific host.</p> <p>The <i>id</i> keyword specifies the number of an access list.</p> <p>The line <i>line-num</i> option specifies the line number for inserting the access rule into the list. By default, the ACE is added to the end of the access list.</p> <p>The <i>network_obj_grp_id</i> argument specifies existing network object group identification.</p> <p>The object-group option specifies an object group.</p> <p>The <i>operator</i> option compares the source IP address or destination IP address ports. For a list of permitted operands, see the “Guidelines and Limitations” section on page 19-2.</p> <p>The permit keyword permits access if the conditions are matched.</p> <p>The <i>port</i> option specifies the port that you permit or deny access. You can specify the port either by a number in the range of 0 to 65535 or by a literal name if the protocol is tcp or udp. For a list of permitted TCP or UDP literal names, see the “Guidelines and Limitations” section on page 19-2.</p> <p>The <i>prefix-length</i> argument indicates how many of the high-order, contiguous bits of the address comprise the IPv6 prefix.</p> <p>The <i>protocol</i> argument specifies the name or number of an IP protocol.</p> <p>The <i>protocol_obj_grp_id</i> indicates the existing protocol object group ID.</p> <p>The <i>service_obj_grp_id</i> option specifies the object group.</p> <p>The <i>source-ipv6-address</i> specifies the address of the host sending traffic.</p> <p>The <i>source-ipv6-prefix</i> specifies the IPv6 address of traffic origin.</p>

Example:

```

hostname(config)# ipv6 access-list acl_grp
permit tcp any host
3001:1::203:A0FF:FED6:162D

```

To configure an IPv6 access list with ICMP, enter the following command:

Command	Purpose
<pre>ipv6 access-list id [line line-num] {deny permit} icmp6 {source-ipv6-prefix/prefix-length any host source-ipv6-address object-group network_obj_grp_id} {destination-ipv6-prefix/prefix-length any host destination-ipv6-address object-group network_obj_grp_id} [icmp_type object-group icmp_type_obj_grp_id] [log [[level] [interval secs] disable default]]</pre>	<p>Configures an IPv6 access list with ICMP.</p> <p>The icmp6 keyword specifies that the access rule applies to ICMPv6 traffic passing through the ASA.</p> <p>The <i>icmp_type</i> argument specifies the ICMP message type being filtered by the access rule. The value can be a valid ICMP type number from 0 to 255. (For a list of the permitted ICMP type literals, see the “Guidelines and Limitations” section on page 19-2.)</p> <p>The <i>icmp_type_obj_grp_id</i> option specifies the object group ICMP type ID.</p> <p>For details about additional ipv6 access-list command parameters, see the preceding procedure for adding a regular IPv6 access list, or see the ipv6 access-list command in the <i>Cisco Security Appliance Command Reference</i>.</p>
<p>Example:</p> <pre>hostname(config)# ipv6 access list acl_grp permit tcp any host 3001:1::203:A0FF:FED6:162D</pre>	

Adding Remarks to Access Lists

You can include remarks about entries in any access list, including extended, EtherType, IPv6, standard, and Webtype access lists. The remarks make the access list easier to understand.

To add a remark after the last **access-list** command you entered, enter the following command:

Command	Purpose
<pre>access-list access_list_name remark text</pre>	<p>Adds a remark after the last access-list command you entered.</p> <p>The text can be up to 100 characters in length. You can enter leading spaces at the beginning of the text. Trailing spaces are ignored.</p> <p>If you enter the remark before any access-list command, then the remark is the first line in the access list.</p> <p>If you delete an access list using the no access-list access_list_name command, then all the remarks are also removed.</p>
<p>Example:</p> <pre>hostname(config)# access-list OUT remark - this is the inside admin address</pre>	

Example

You can add remarks before each ACE, and the remarks appear in the access list in these locations. Entering a dash (-) at the beginning of a remark helps set it apart from an ACE.

```
hostname(config)# access-list OUT remark - this is the inside admin address
hostname(config)# access-list OUT extended permit ip host 209.168.200.3 any
hostname(config)# access-list OUT remark - this is the hr admin address
hostname(config)# access-list OUT extended permit ip host 209.168.200.4 any
```

Monitoring IPv6 Access Lists

To monitor IPv6 access lists, perform one of the following tasks:

Command	Purpose
<code>show ipv6 access-list</code>	Displays all IPv6 access list information.

Configuration Examples for IPv6 Access Lists

The following example shows how to configure IPv6 access lists:

The following example allows any host using TCP to access the 3001:1::203:A0FF:FED6:162D server:

```
hostname(config)# ipv6 access-list acl_grp permit tcp any host 3001:1::203:A0FF:FED6:162D
```

The following example uses `eq` and a port to deny access to just FTP:

```
hostname(config)# ipv6 access-list acl_out deny tcp any host 3001:1::203:A0FF:FED6:162D eq ftp
hostname(config)# access-group acl_out in interface inside
```

The following example uses `lt` to permit access to all ports less than port 2025, which permits access to the well-known ports (1 to 1024):

```
hostname(config)# ipv6 access-list acl_dmz1 permit tcp any host 3001:1::203:A0FF:FED6:162D lt 1025
hostname(config)# access-group acl_dmz1 in interface dmz1
```

Where to Go Next

Apply the access list to an interface. (See the [“Configuring Access Rules”](#) section on page 34-7 for more information.)

Feature History for IPv6 Access Lists

[Table 19-2](#) lists each feature change and the platform release in which it was implemented.

Table 19-2 Feature History for IPv6 Access Lists

Feature Name	Releases	Feature Information
IPv6 access lists	7.0(1)	We introduced the following command: <code>ipv6 access-list</code> .



CHAPTER 20

Configuring Logging for Access Lists

This chapter describes how to configure access list logging for extended access lists and Webtype access lists, and it describes how to manage deny flows.

This chapter includes the following sections:

- [Configuring Logging for Access Lists, page 20-1](#)
- [Managing Deny Flows, page 20-5](#)

Configuring Logging for Access Lists

This section includes the following topics:

- [Information About Logging Access List Activity, page 20-1](#)
- [Licensing Requirements for Access List Logging, page 20-2](#)
- [Guidelines and Limitations, page 20-2](#)
- [Default Settings, page 20-3](#)
- [Configuring Access List Logging, page 20-3](#)
- [Monitoring Access Lists, page 20-4](#)
- [Configuration Examples for Access List Logging, page 20-4](#)
- [Feature History for Access List Logging, page 20-5](#)

Information About Logging Access List Activity

By default, when traffic is denied by an extended ACE or a Webtype ACE, the ASA generates syslog message 106023 for each denied packet in the following form:

```
%ASA|PIX-4-106023: Deny protocol src [interface_name:source_address/source_port] dst  
interface_name:dest_address/dest_port [type {string}, code {code}] by access_group acl_id
```

If the ASA is attacked, the number of syslog messages for denied packets can be very large. We recommend that you instead enable logging using syslog message 106100, which provides statistics for each ACE and enables you to limit the number of syslog messages produced. Alternatively, you can disable all logging.

**Note**

Only ACEs in the access list generate logging messages; the implicit deny at the end of the access list does not generate a message. If you want all denied traffic to generate messages, add the implicit ACE manually to the end of the access list, as shown in the following example:

```
hostname(config)# access-list TEST deny ip any any log
```

The **log** options at the end of the extended **access-list** command enable you to set the following behavior:

- Enable message 106100 instead of message 106023
- Disable all logging
- Return to the default logging using message 106023

Syslog message 106100 uses the following form:

```
%ASA|PIX-n-106100: access-list acl_id {permitted | denied} protocol
interface_name/source_address(source_port) -> interface_name/dest_address(dest_port)
hit-cnt number ({first hit | number-second interval})
```

When you enable logging for message 106100, if a packet matches an ACE, the ASA creates a flow entry to track the number of packets received within a specific interval. The ASA generates a syslog message at the first hit and at the end of each interval, identifying the total number of hits during the interval and the timestamp for the last hit. At the end of each interval, the ASA resets the hit count to 0. If no packets match the ACE during an interval, the ASA deletes the flow entry.

A flow is defined by the source and destination IP addresses, protocols, and ports. Because the source port might differ for a new connection between the same two hosts, you might not see the same flow increment because a new flow was created for the connection. See the [“Managing Deny Flows” section on page 20-5](#) to limit the number of logging flows.

Permitted packets that belong to established connections do not need to be checked against access lists; only the initial packet is logged and included in the hit count. For connectionless protocols, such as ICMP, all packets are logged, even if they are permitted, and all denied packets are logged.

See the *syslog message guide* for detailed information about this syslog message.

Licensing Requirements for Access List Logging

The following table shows the licensing requirements for this feature:

Model	License Requirement
All models	Base License.

Guidelines and Limitations

This section includes the guidelines and limitations for this feature.

Context Mode Guidelines

Supported in single and multiple context mode.

Firewall Mode Guidelines

Supported only in routed and transparent firewall modes.

IPv6 Guidelines

Supports IPv6.

Additional Guidelines and Limitations

ACE logging generates syslog message 106023 for denied packets. A deny ACE must be present to log denied packets.

Default Settings

Table 20-1 lists the default settings for extended access list parameters.

Table 20-1 Default Extended Access List Parameters

Parameters	Default
log	When the log keyword is specified, the default level for syslog message 106100 is 6 (informational), and the default interval is 300 seconds.

Configuring Access List Logging

This sections describes how to configure access list logging.

**Note**

For complete access list command syntax, see the [“Configuring Extended Access Lists”](#) section on page 15-2 and the [“Using Webtype Access Lists”](#) section on page 18-2.

To configure logging for an ACE, enter the following command:

Command	Purpose
<pre>access-list access_list_name [extended] {deny / permit}...[log [[level] [interval secs] disable default]]</pre> <p>Example:</p> <pre>hostname(config)# access-list outside-acl permit ip host 10.0.0.0 any log 7 interval 600</pre>	<p>Configures logging for an ACE.</p> <p>The access-list <i>access_list_name</i> syntax specifies the access list for which you want to configure logging.</p> <p>The extended option adds an ACE.</p> <p>The deny keyword denies a packet if the conditions are matched. Some features do not allow deny ACEs, such as NAT. (See the command documentation for each feature that uses an access list for more information.)</p> <p>The permit keyword permits a packet if the conditions are matched.</p> <p>If you enter the log option without any arguments, you enable syslog message 106100 at the default level (6) and for the default interval (300 seconds). See the following options:</p> <ul style="list-style-type: none"> • level—A severity level between 0 and 7. The default is 6. • interval secs—The time interval in seconds between syslog messages, from 1 to 600. The default is 300. This value is also used as the timeout value for deleting an inactive flow. • disable—Disables all access list logging. • default—Enables logging to message 106023. This setting is the same as having no log option. <p>(See the access-list command in the <i>Cisco Security Appliance Command Reference</i> for more information about command options.)</p>

Monitoring Access Lists

To monitor access lists, enter one of the following commands:

Command	Purpose
<code>show access list</code>	Displays the access list entries by number.
<code>show running-config access-list</code>	Displays the current running access list configuration.

Configuration Examples for Access List Logging

This section includes sample configurations for logging access lists.

You might configure the following access list:

```
hostname(config)# access-list outside-acl permit ip host 10.10.0.0 any log 7 interval 600
hostname(config)# access-list outside-acl permit ip host 10.255.255.255 any
hostname(config)# access-list outside-acl deny ip any any log 2
hostname(config)# access-group outside-acl in interface outside
```

When the first ACE of outside-acl permits a packet, the ASA generates the following syslog message:

```
%ASA|PIX-7-106100: access-list outside-acl permitted tcp outside/10.0.0.0(12345) ->
inside/192.168.1.1(1357) hit-cnt 1 (first hit)
```

Although 20 additional packets for this connection arrive on the outside interface, the traffic does not have to be checked against the access list, and the hit count does not increase.

If one or more connections by the same host are initiated within the specified 10-minute interval (and the source and destination ports remain the same), then the hit count is incremented by 1, and the following syslog message displays at the end of the 10-minute interval:

```
%ASA|PIX-7-106100: access-list outside-acl permitted tcp outside/10.0.0.0(12345)->
inside/192.168.1.1(1357) hit-cnt 2 (600-second interval)
```

When the third ACE denies a packet, the ASA generates the following syslog message:

```
%ASA|PIX-2-106100: access-list outside-acl denied ip outside/10.255.255.255(12345) ->
inside/192.168.1.1(1357) hit-cnt 1 (first hit)
```

If 20 additional attempts occur within a 5-minute interval (the default), the following syslog message appears at the end of 5 minutes:

```
%ASA|PIX-2-106100: access-list outside-acl denied ip outside/10.255.255.255(12345) ->
inside/192.168.1.1(1357) hit-cnt 21 (300-second interval)
```

Feature History for Access List Logging

Table 20-2 lists each feature change and the platform release in which it was implemented.

Table 20-2 Feature History for Access List Logging

Feature Name	Releases	Feature Information
Access list logging	7.0(1)	You can enable logging using syslog message 106100, which provides statistics for each ACE and lets you limit the number of syslog messages produced. We introduced the following command: access-list .
ACL Timestamp	8.3(1)	The ASA reports the timestamp for the last access rule hit.

Managing Deny Flows

This section includes the following topics:

- [Information About Managing Deny Flows, page 20-6](#)
- [Licensing Requirements for Managing Deny Flows, page 20-6](#)
- [Guidelines and Limitations, page 20-6](#)
- [Managing Deny Flows, page 20-7](#)
- [Monitoring Deny Flows, page 20-7](#)
- [Feature History for Managing Deny Flows, page 20-8](#)

Information About Managing Deny Flows

When you enable logging for message 106100, if a packet matches an ACE, the ASA creates a flow entry to track the number of packets received within a specific interval. The ASA has a maximum of 32 K logging flows for ACEs. A large number of flows can exist concurrently at any point of time. To prevent unlimited consumption of memory and CPU resources, the ASA places a limit on the number of concurrent *deny* flows; the limit is placed on deny flows only (not on permit flows) because they can indicate an attack. When the limit is reached, the ASA does not create a new deny flow for logging until the existing flows expire.

For example, if someone initiates a DoS attack, the ASA can create a large number of deny flows in a short period of time. Restricting the number of deny flows prevents unlimited consumption of memory and CPU resources.

When you reach the maximum number of deny flows, the ASA issues syslog message 106100:

```
%ASA|PIX-1-106101: The number of ACL log deny-flows has reached limit (number).
```

The **access-list alert-interval** command sets the time interval for generating syslog message 106001. Syslog message 106001 alerts you that the ASA has reached a deny flow maximum. When the deny flow maximum is reached, another syslog message 106001 is generated if at least six seconds have passed since the last 106001 message was generated.

Licensing Requirements for Managing Deny Flows

The following table shows the licensing requirements for this feature:

Model	License Requirement
All models	Base License.

Guidelines and Limitations

This section includes the guidelines and limitations for this feature.

Context Mode Guidelines

Supported in single and multiple context mode.

Firewall Mode Guidelines

Supported only in routed and transparent firewall modes.

IPv6 Guidelines

Supports IPv6.

Additional Guidelines and Limitations

The ASA places a limit on the number of concurrent *deny* flows only—not permit flows.

Default Settings

Table 20-1 lists the default settings for managing deny flows.

Table 20-3 Default Parameters for Managing Deny Flows

Parameters	Default
<i>numbers</i>	The <i>numbers</i> argument specifies the maximum number of deny flows. The default is 4096.
<i>secs</i>	The <i>secs</i> argument specifies the time, in seconds, between syslog messages. The default is 300.

Managing Deny Flows

To configure the maximum number of deny flows and to set the interval between deny flow alert messages (106100), enter the following command:

Command	Purpose
<code>access-list deny-flow-max <i>number</i></code>	Sets the maximum number of deny flows.
Example: hostname(config)# access-list deny-flow-max 3000	The <i>numbers</i> argument specifies the maximum number, which can be between 1 and 4096. The default is 4096.

To set the amount of time between syslog messages (number 106101), which identifies that the maximum number of deny flows was reached, enter the following command:

Command	Purpose
<code>access-list alert-interval <i>secs</i></code>	Sets the time, in seconds, between syslog messages.
Example: hostname(config)# access-list alert-interval 200	The <i>secs</i> argument specifies the time interval between each deny flow maximum message. Valid values are from 1 to 3600 seconds. The default is 300 seconds.

Monitoring Deny Flows

To monitor access lists, enter one of the following commands:

Command	Purpose
<code>show access-list</code>	Displays access list entries by number.
<code>show running-config access-list</code>	Displays the current running access list configuration.

Feature History for Managing Deny Flows

Table 20-2 lists each feature change and the platform release in which it was implemented.

Table 20-4 Feature History for Managing Deny Flows

Feature Name	Releases	Feature Information
Managing Deny Flows	7.0(1)	You can configure the maximum number of deny flows and set the interval between deny flow alert messages. We introduced the following commands: access-list deny-flow and access-list alert-interval .



PART 6

Configuring IP Routing



CHAPTER 21

Routing Overview

This chapter describes underlying concepts of how routing behaves within the ASA, and the routing protocols that are supported.

This chapter includes the following sections:

- [Information About Routing, page 21-1](#)
- [How Routing Behaves Within the ASA, page 21-4](#)
- [Supported Internet Protocols for Routing, page 21-5](#)
- [Information About the Routing Table, page 21-6](#)
- [Information About IPv6 Support, page 21-9](#)
- [Disabling Proxy ARPs, page 21-11](#)

Information About Routing

Routing is the act of moving information across an internetwork from a source to a destination. Along the way, at least one intermediate node typically is encountered. Routing involves two basic activities: determining optimal routing paths and transporting information groups (typically called packets) through an internetwork. In the context of the routing process, the latter of these is referred to as packet switching. Although packet switching is relatively straightforward, path determination can be very complex.

This section includes the following topics:

- [Switching, page 21-2](#)
- [Path Determination, page 21-2](#)
- [Supported Route Types, page 21-2](#)

Switching

Switching algorithms is relatively simple; it is the same for most routing protocols. In most cases, a host determines that it must send a packet to another host. Having acquired a router address by some means, the source host sends a packet addressed specifically to a router physical (Media Access Control [MAC]-layer) address, this time with the protocol (network layer) address of the destination host.

As it examines the packet destination protocol address, the router determines that it either knows or does not know how to forward the packet to the next hop. If the router does not know how to forward the packet, it typically drops the packet. If the router knows how to forward the packet, however, it changes the destination physical address to that of the next hop and transmits the packet.

The next hop may be the ultimate destination host. If not, the next hop is usually another router, which executes the same switching decision process. As the packet moves through the internetwork, its physical address changes, but its protocol address remains constant.

Path Determination

Routing protocols use metrics to evaluate what path will be the best for a packet to travel. A metric is a standard of measurement, such as path bandwidth, that is used by routing algorithms to determine the optimal path to a destination. To aid the process of path determination, routing algorithms initialize and maintain routing tables, which include route information. Route information varies depending on the routing algorithm used.

Routing algorithms fill routing tables with a variety of information. Destination or next hop associations tell a router that a particular destination can be reached optimally by sending the packet to a particular router representing the next hop on the way to the final destination. When a router receives an incoming packet, it checks the destination address and attempts to associate this address with a next hop.

Routing tables also can include other information, such as data about the desirability of a path. Routers compare metrics to determine optimal routes, and these metrics differ depending on the design of the routing algorithm used.

Routers communicate with one another and maintain their routing tables through the transmission of a variety of messages. The routing update message is one such message that generally consists of all or a portion of a routing table. By analyzing routing updates from all other routers, a router can build a detailed picture of network topology. A link-state advertisement, another example of a message sent between routers, informs other routers of the state of the sender links. Link information also can be used to build a complete picture of network topology to enable routers to determine optimal routes to network destinations.

**Note**

Asymmetric routing is only supported for Active/Active failover in multiple context mode. For more information, see the [“Configuring Active/Active Failover”](#) section on page 63-8.

Supported Route Types

There are several route types that a router can use. The ASA uses the following route types:

- [Static Versus Dynamic](#), page 21-3
- [Single-Path Versus Multipath](#), page 21-3
- [Flat Versus Hierarchical](#), page 21-3

- [Link-State Versus Distance Vector, page 21-4](#)

Static Versus Dynamic

Static routing algorithms are hardly algorithms at all, but are table mappings established by the network administrator before the beginning of routing. These mappings do not change unless the network administrator alters them. Algorithms that use static routes are simple to design and work well in environments where network traffic is relatively predictable and where network design is relatively simple.

Because static routing systems cannot react to network changes, they generally are considered unsuitable for large, constantly changing networks. Most of the dominant routing algorithms are dynamic routing algorithms, which adjust to changing network circumstances by analyzing incoming routing update messages. If the message indicates that a network change has occurred, the routing software recalculates routes and sends out new routing update messages. These messages permeate the network, stimulating routers to rerun their algorithms and change their routing tables accordingly.

Dynamic routing algorithms can be supplemented with static routes where appropriate. A router of last resort (a router to which all unroutable packets are sent), for example, can be designated to act as a repository for all unroutable packets, ensuring that all messages are at least handled in some way.

**Note**

There is no dynamic routing support in multi-context mode. As a result, there is no route tracking.

Single-Path Versus Multipath

Some sophisticated routing protocols support multiple paths to the same destination. Unlike single-path algorithms, these multipath algorithms permit traffic multiplexing over multiple lines. The advantages of multipath algorithms are substantially better throughput and reliability, which is generally called load sharing.

Flat Versus Hierarchical

Some routing algorithms operate in a flat space, while others use routing hierarchies. In a flat routing system, the routers are peers of all others. In a hierarchical routing system, some routers form what amounts to a routing backbone. Packets from nonbackbone routers travel to the backbone routers, where they are sent through the backbone until they reach the general area of the destination. At this point, they travel from the last backbone router through one or more nonbackbone routers to the final destination.

Routing systems often designate logical groups of nodes, called domains, autonomous systems, or areas. In hierarchical systems, some routers in a domain can communicate with routers in other domains, while others can communicate only with routers within their domain. In very large networks, additional hierarchical levels may exist, with routers at the highest hierarchical level forming the routing backbone.

The primary advantage of hierarchical routing is that it mimics the organization of most companies and therefore supports their traffic patterns well. Most network communication occurs within small company groups (domains). Because intradomain routers need to know only about other routers within their domain, their routing algorithms can be simplified, and, depending on the routing algorithm being used, routing update traffic can be reduced accordingly.

Link-State Versus Distance Vector

Link-state algorithms (also known as shortest path first algorithms) flood routing information to all nodes in the internetwork. Each router, however, sends only the portion of the routing table that describes the state of its own links. In link-state algorithms, each router builds a picture of the entire network in its routing tables. Distance vector algorithms (also known as Bellman-Ford algorithms) call for each router to send all or some portion of its routing table, but only to its neighbors. In essence, link-state algorithms send small updates everywhere, while distance vector algorithms send larger updates only to neighboring routers. Distance vector algorithms know only about their neighbors. Typically, this type of algorithm is used in conjunction with OSPF routing protocols.

How Routing Behaves Within the ASA

The ASA uses both routing table and XLATE tables for routing decisions. To handle destination IP translated traffic, that is, untranslated traffic, the ASA searches for existing XLATE, or static translation to select the egress interface.

This section includes the following topics:

- [Egress Interface Selection Process, page 21-4](#)
- [Next Hop Selection Process, page 21-4](#)

Egress Interface Selection Process

The selection process follows these steps:

1. If a destination IP translating XLATE already exists, the egress interface for the packet is determined from the XLATE table, but not from the routing table.
2. If a destination IP translating XLATE does not exist, but a matching static translation exists, then the egress interface is determined from the static route and an XLATE is created, and the routing table is not used.
3. If a destination IP translating XLATE does not exist and no matching static translation exists, the packet is not destination IP translated. The ASA processes this packet by looking up the route to select the egress interface, then source IP translation is performed (if necessary).

For regular dynamic outbound NAT, initial outgoing packets are routed using the route table and then creating the XLATE. Incoming return packets are forwarded using existing XLATE only. For static NAT, destination translated incoming packets are always forwarded using existing XLATE or static translation rules.

Next Hop Selection Process

After selecting the egress interface using any method described previously, an additional route lookup is performed to find out suitable next hop(s) that belong to a previously selected egress interface. If there are no routes in the routing table that explicitly belong to a selected interface, the packet is dropped with

a level 6 syslog message 110001 generated (no route to host), even if there is another route for a given destination network that belongs to a different egress interface. If the route that belongs to a selected egress interface is found, the packet is forwarded to the corresponding next hop.

Load sharing on the ASA is possible only for multiple next hops available using a single egress interface. Load sharing cannot share multiple egress interfaces.

If dynamic routing is in use on the ASA and the route table changes after XLATE creation (for example, route flap), then destination translated traffic is still forwarded using the old XLATE, not via the route table, until XLATE times out. It may be either forwarded to the wrong interface or dropped with a level 6 syslog message 110001 generated (no route to host), if the old route was removed from the old interface and attached to another one by the routing process.

The same problem may happen when there are no route flaps on the ASA itself, but some routing process is flapping around it, sending source-translated packets that belong to the same flow through the ASA using different interfaces. Destination-translated return packets may be forwarded back using the wrong egress interface.

This issue has a high probability in some security traffic configurations, where virtually any traffic may be either source-translated or destination-translated, depending on the direction of the initial packet in the flow. When this issue occurs after a route flap, it can be resolved manually by using the **clear xlate** command, or automatically resolved by an XLATE timeout. The XLATE timeout may be decreased if necessary. To ensure that this issue rarely occurs, make sure that there are no route flaps on the ASA and around it. That is, ensure that destination-translated packets that belong to the same flow are always forwarded the same way through the ASA.

Supported Internet Protocols for Routing

The ASA supports several Internet protocols for routing. Each protocol is briefly described in this section.

- Enhanced Interior Gateway Routing Protocol (EIGRP)

EIGRP provides compatibility and seamless interoperation with IGRP routers. An automatic-redistribution mechanism allows IGRP routes to be imported into Enhanced IGRP, and vice versa, so it is possible to add Enhanced IGRP gradually into an existing IGRP network.

For more information about configuring EIGRP, see the [“Configuring EIGRP” section on page 27-3](#).

- Open Shortest Path First (OSPF)

Open Shortest Path First (OSPF) is a routing protocol developed for Internet Protocol (IP) networks by the interior gateway protocol (IGP) working group of the Internet Engineering Task Force (IETF). OSPF uses a link-state algorithm to build and calculate the shortest path to all known destinations. Each router in an OSPF area includes an identical link-state database, which is a list of each of the router usable interfaces and reachable neighbors.

For more information about configuring OSPF, see the [“Configuring OSPF” section on page 24-3](#).

- Routing Information Protocol

The Routing Information Protocol (RIP) is a distance-vector protocol that uses hop count as its metric. RIP is widely used for routing traffic in the global Internet and is an interior gateway protocol (IGP), which means that it performs routing within a single autonomous system.

For more information about configuring RIP, see the [“Configuring RIP” section on page 25-4](#).

Information About the Routing Table

This section includes the following topics:

- [Displaying the Routing Table, page 21-6](#)
- [How the Routing Table Is Populated, page 21-6](#)
- [How Forwarding Decisions Are Made, page 21-8](#)
- [Dynamic Routing and Failover, page 21-9](#)

Displaying the Routing Table

To view the entries in the routing table, enter the following command:

```
hostname# show route
```

```
Codes: C - connected, S - static, I - IGRP, R - RIP, M - mobile, B - BGP
       D - EIGRP, EX - EIGRP external, O - OSPF, IA - OSPF inter area
       N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2
       E1 - OSPF external type 1, E2 - OSPF external type 2, E - EGP
       i - IS-IS, L1 - IS-IS level-1, L2 - IS-IS level-2, ia - IS-IS inter area
       * - candidate default, U - per-user static route, o - ODR
       P - periodic downloaded static route
```

```
Gateway of last resort is 10.86.194.1 to network 0.0.0.0
```

```
S    10.1.1.0 255.255.255.0 [3/0] via 10.86.194.1, outside
C    10.86.194.0 255.255.254.0 is directly connected, outside
S*   0.0.0.0 0.0.0.0 [1/0] via 10.86.194.1, outside
```

On the ASA 5505, the following route is also shown. It is the internal loopback interface, which is used by the VPN hardware client feature for individual user authentication.

```
C 127.1.0.0 255.255.0.0 is directly connected, _internal_loopback
```

How the Routing Table Is Populated

The ASA routing table can be populated by statically defined routes, directly connected routes, and routes discovered by the RIP, EIGRP, and OSPF routing protocols. Because the ASA can run multiple routing protocols in addition to having static and connected routes in the routing table, it is possible that the same route is discovered or entered in more than one manner. When two routes to the same destination are put into the routing table, the one that remains in the routing table is determined as follows:

- If the two routes have different network prefix lengths (network masks), then both routes are considered unique and are entered into the routing table. The packet forwarding logic then determines which of the two to use.

For example, if the RIP and OSPF processes discovered the following routes:

- RIP: 192.168.32.0/24
- OSPF: 192.168.32.0/19

Even though OSPF routes have the better administrative distance, both routes are installed in the routing table because each of these routes has a different prefix length (subnet mask). They are considered different destinations and the packet forwarding logic determines which route to use.

- If the ASA learns about multiple paths to the same destination from a single routing protocol, such as RIP, the route with the better metric (as determined by the routing protocol) is entered into the routing table.

Metrics are values associated with specific routes, ranking them from most preferred to least preferred. The parameters used to determine the metrics differ for different routing protocols. The path with the lowest metric is selected as the optimal path and installed in the routing table. If there are multiple paths to the same destination with equal metrics, load balancing is done on these equal cost paths.

- If the ASA learns about a destination from more than one routing protocol, the administrative distances of the routes are compared and the routes with lower administrative distance are entered into the routing table.

You can change the administrative distances for routes discovered by or redistributed into a routing protocol. If two routes from two different routing protocols have the same administrative distance, then the route with the lower *default* administrative distance is entered into the routing table. In the case of EIGRP and OSPF routes, if the EIGRP route and the OSPF route have the same administrative distance, then the EIGRP route is chosen by default.

Administrative distance is a route parameter that the ASA uses to select the best path when there are two or more different routes to the same destination from two different routing protocols. Because the routing protocols have metrics based on algorithms that are different from the other protocols, it is not always possible to determine the best path for two routes to the same destination that were generated by different routing protocols.

Each routing protocol is prioritized using an administrative distance value. [Table 21-1](#) shows the default administrative distance values for the routing protocols supported by the ASA.

Table 21-1 **Default Administrative Distance for Supported Routing Protocols**

Route Source	Default Administrative Distance
Connected interface	0
Static route	1
EIGRP Summary Route	5
Internal EIGRP	90
OSPF	110
RIP	120
EIGRP external route	170
Unknown	255

The smaller the administrative distance value, the more preference is given to the protocol. For example, if the ASA receives a route to a certain network from both an OSPF routing process (default administrative distance - 110) and a RIP routing process (default administrative distance - 120), the ASA chooses the OSPF route because OSPF has a higher preference. In this case, the router adds the OSPF version of the route to the routing table.

In this example, if the source of the OSPF-derived route was lost (for example, due to a power shutdown), the ASA would then use the RIP-derived route until the OSPF-derived route reappears.

The administrative distance is a local setting. For example, if you use the **distance-ospf** command to change the administrative distance of routes obtained through OSPF, that change would only affect the routing table for the ASA on which the command was entered. The administrative distance is not advertised in routing updates.

Administrative distance does not affect the routing process. The OSPF and RIP routing processes only advertise the routes that have been discovered by the routing process or redistributed into the routing process. For example, the RIP routing process advertises RIP routes, even if routes discovered by the OSPF routing process are used in the ASA routing table.

Backup Routes

A backup route is registered when the initial attempt to install the route in the routing table fails because another route was installed instead. If the route that was installed in the routing table fails, the routing table maintenance process calls each routing protocol process that has registered a backup route and requests them to reinstall the route in the routing table. If there are multiple protocols with registered backup routes for the failed route, the preferred route is chosen based on administrative distance.

Because of this process, you can create floating static routes that are installed in the routing table when the route discovered by a dynamic routing protocol fails. A floating static route is simply a static route configured with a greater administrative distance than the dynamic routing protocols running on the ASA. When the corresponding route discovered by a dynamic routing process fails, the static route is installed in the routing table.

How Forwarding Decisions Are Made

Forwarding decisions are made as follows:

- If the destination does not match an entry in the routing table, the packet is forwarded through the interface specified for the default route. If a default route has not been configured, the packet is discarded.
- If the destination matches a single entry in the routing table, the packet is forwarded through the interface associated with that route.
- If the destination matches more than one entry in the routing table, and the entries all have the same network prefix length, the packets for that destination are distributed among the interfaces associated with that route.
- If the destination matches more than one entry in the routing table, and the entries have different network prefix lengths, then the packet is forwarded out of the interface associated with the route that has the longer network prefix length.

For example, a packet destined for 192.168.32.1 arrives on an interface of an ASA with the following routes in the routing table:

```
hostname# show route
.....
R   192.168.32.0/24 [120/4] via 10.1.1.2
O   192.168.32.0/19 [110/229840] via 10.1.1.3
.....
```

In this case, a packet destined to 192.168.32.1 is directed toward 10.1.1.2, because 192.168.32.1 falls within the 192.168.32.0/24 network. It also falls within the other route in the routing table, but the 192.168.32.0/24 has the longest prefix within the routing table (24 bits versus 19 bits). Longer prefixes are always preferred over shorter ones when forwarding a packet.

Dynamic Routing and Failover

Because static routing systems cannot react to network changes, they generally are considered unsuitable for large, constantly changing networks. Most of the dominant routing algorithms are dynamic routing algorithms, which adjust to changing network circumstances by analyzing incoming routing update messages. If the message indicates that a network change has occurred, the routing software recalculates routes and sends out new routing update messages. These messages permeate the network, stimulating routers to rerun their algorithms and change their routing tables accordingly.

Dynamic routing algorithms can be supplemented with static routes where appropriate. A router of last resort (a router to which all unroutable packets are sent), for example, can be designated to act as a repository for all unroutable packets, ensuring that all messages are at least handled in some way.

Dynamic routes are synchronized on the standby unit when the routing table changes on the active unit, which means that all additions, deletions, or changes on the active unit are immediately propagated to the standby unit. If the standby unit becomes active after the primary unit has been active for a period of time, routes become synchronized as a part of the failover bulk synchronization process, so the routing table on the active/standby failover pair should appear the same.

For more information about static routes and how to configure them, see the [“Configuring Static and Default Routes”](#) section on page 22-2.

Information About IPv6 Support

Many, but not all, features on the ASA support IPv6 traffic. This section describes the commands and features that support IPv6 and includes the following topics:

- [Features That Support IPv6, page 21-9](#)
- [IPv6-Enabled Commands, page 21-10](#)
- [Entering IPv6 Addresses in Commands, page 21-11](#)

Features That Support IPv6

The following features support IPv6:



Note

For features that use the Modular Policy Framework, be sure to use the **match any** command to match IPv6 traffic; other **match** commands do not support IPv6.

- The following application inspections support IPv6 traffic:
 - FTP
 - HTTP
 - ICMP
 - SIP
 - SMTP
 - IPsec-pass-thru
- IPS

- NetFlow Secure Event Logging filtering
- Connection limits, timeouts, and TCP randomization
- TCP Normalization
- TCP state bypass
- Access group, using an IPv6 access list
- Static Routes
- VPN (all types)
- Failover
- Transparent firewall mode

IPv6-Enabled Commands

The following ASA commands can accept and display IPv6 addresses:

- **capture**
- **configure**
- **copy**
- **failover interface ip**
- **http**
- **name**
- **object-group**
- **ping**
- **show conn**
- **show local-host**
- **show tcpstat**
- **ssh**
- **telnet**
- **tftp-server**
- **who**
- **write**

The following commands were modified to work for IPv6:

- **debug**
- **fragment**
- **ip verify**
- **mtu**
- **icmp** (entered as **ipv6 icmp**)

Entering IPv6 Addresses in Commands

When entering IPv6 addresses in commands that support them, enter the IPv6 address using standard IPv6 notation, for example:

```
ping fe80::2e0:b6ff:fe01:3b7a.
```

The ASA correctly recognizes and processes the IPv6 address. However, you must enclose the IPv6 address in square brackets ([]) in the following situations:

- You need to specify a port number with the address, for example:

```
[fe80::2e0:b6ff:fe01:3b7a]:8080.
```

- The command uses a colon as a separator, such as the **write net** command and **config net** command, for example:

```
configure net [fe80::2e0:b6ff:fe01:3b7a]:/tftp/config/asaconfig.
```

Disabling Proxy ARPs

When a host sends IP traffic to another device on the same Ethernet network, the host needs to know the MAC address of the device. ARP is a Layer 2 protocol that resolves an IP address to a MAC address. A host sends an ARP request asking “Who is this IP address?” The device owning the IP address replies, “I own that IP address; here is my MAC address.”

Proxy ARP is used when a device responds to an ARP request with its own MAC address, even though the device does not own the IP address. The ASA uses proxy ARP when you configure NAT and specify a mapped address that is on the same network as the ASA interface. The only way traffic can reach the hosts is if the ASA uses proxy ARP to claim that the MAC address is assigned to destination mapped addresses.

Under rare circumstances, you might want to disable proxy ARP for NAT addresses.

If you have a VPN client address pool that overlaps with an existing network, the ASA by default sends proxy ARPs on all interfaces. If you have another interface that is on the same Layer 2 domain, it will see the ARP requests and will answer with the MAC address of its interface. The result of this is that the return traffic of the VPN clients towards the internal hosts will go to the wrong interface and will get dropped. In this case, you need to disable proxy ARPs for the interface on which you do not want proxy ARPs.

To disable proxy ARPs, enter the following command:

Command	Purpose
<code>sysopt noproxyarp interface</code>	Disables proxy ARPs.
Example: <code>hostname(config)# sysopt noproxyarp exampleinterface</code>	



CHAPTER 22

Configuring Static and Default Routes

This chapter describes how to configure static and default routes on the ASA and includes the following sections:

- [Information About Static and Default Routes, page 22-1](#)
- [Licensing Requirements for Static and Default Routes, page 22-2](#)
- [Guidelines and Limitations, page 22-2](#)
- [Configuring Static and Default Routes, page 22-2](#)
- [Monitoring a Static or Default Route, page 22-6](#)
- [Configuration Examples for Static or Default Routes, page 22-8](#)
- [Feature History for Static and Default Routes, page 22-8](#)

Information About Static and Default Routes

To route traffic to a nonconnected host or network, you must define a static route to the host or network or, at a minimum, a default route for any networks to which the ASA is not directly connected; for example, when there is a router between a network and the ASA.

Without a static or default route defined, traffic to nonconnected hosts or networks generates the following syslog message:

```
%ASA-6-110001: No route to dest_address from source_address
```

Multiple context mode does not support dynamic routing.

You might want to use static routes in single context mode in the following cases:

- Your networks use a different router discovery protocol from EIGRP, RIP, or OSPF.
- Your network is small and you can easily manage static routes.
- You do not want the traffic or CPU overhead associated with routing protocols.

The simplest option is to configure a default route to send all traffic to an upstream router, relying on the router to route the traffic for you. However, in some cases the default gateway might not be able to reach the destination network, so you must also configure more specific static routes. For example, if the default gateway is outside, then the default route cannot direct traffic to any inside networks that are not directly connected to the ASA.

In transparent firewall mode, for traffic that originates on the ASA and is destined for a nondirectly connected network, you need to configure either a default route or static routes so the ASA knows out of which interface to send traffic. Traffic that originates on the ASA might include communications to a

syslog server, Websense or N2H2 server, or AAA server. If you have servers that cannot all be reached through a single default route, then you must configure static routes. Additionally, the ASA supports up to three equal cost routes on the same interface for load balancing.

Licensing Requirements for Static and Default Routes

The following table shows the licensing requirements for this feature:

Model	License Requirement
All models	Base License.

Guidelines and Limitations

This section includes the guidelines and limitations for this feature.

Context Mode Guidelines

Supported in single and multiple context mode.

Firewall Mode Guidelines

Supported in routed and transparent firewall mode.

IPv6 Guidelines

Supports IPv6.

Failover Guidelines

Supports stateful failover of dynamic routing protocols.

Additional Guidelines

IPv6 static routes are not supported in transparent mode in ASDM.

Configuring Static and Default Routes

This section explains how to configure a static route and a static default route, and includes the following topics:

- [Configuring a Static Route, page 22-3](#)
- [Configuring a Default Static Route, page 22-4](#)
- [Configuring IPv6 Default and Static Routes, page 22-5](#)

Configuring a Static Route

Static routing algorithms are basically table mappings established by the network administrator before the beginning of routing. These mappings do not change unless the network administrator alters them. Algorithms that use static routes are simple to design and work well in environments where network traffic is relatively predictable and where network design is relatively simple. Because of this fact, static routing systems cannot react to network changes.

Static routes remain in the routing table even if the specified gateway becomes unavailable. If the specified gateway becomes unavailable, you need to remove the static route from the routing table manually. However, static routes are removed from the routing table if the specified interface goes down, and are reinstated when the interface comes back up.



Note

If you create a static route with an administrative distance greater than the administrative distance of the routing protocol running on the ASA, then a route to the specified destination discovered by the routing protocol takes precedence over the static route. The static route is used only if the dynamically discovered route is removed from the routing table.

You can define up to three equal cost routes to the same destination per interface. Equal-cost multi-path (ECMP) routing is not supported across multiple interfaces. With ECMP, the traffic is not necessarily divided evenly between the routes; traffic is distributed among the specified gateways based on an algorithm that hashes the source and destination IP addresses.

To configure a static route, see the following section:

- [Adding or Editing a Static Route, page 22-3](#)

Adding or Editing a Static Route

To add or edit a static route, enter the following command:

Command	Purpose
<pre>route <i>if_name</i> <i>dest_ip</i> <i>mask</i> <i>gateway_ip</i> [<i>distance</i>]</pre> <p>Example: hostname(config)# route outside 10.10.10.0 255.255.255.0 192.168.1.1 [1]</p>	<p>Enables you to add a static route.</p> <p>The <i>dest_ip</i> and <i>mask</i> arguments indicate the IP address for the destination network, and the <i>gateway_ip</i> argument is the address of the next-hop router. The addresses you specify for the static route are the addresses that are in the packet before entering the ASA and performing NAT.</p> <p>The <i>distance</i> argument is the administrative distance for the route. The default is 1 if you do not specify a value. Administrative distance is a parameter used to compare routes among different routing protocols. The default administrative distance for static routes is 1, giving it precedence over routes discovered by dynamic routing protocols but not directly connected routes.</p> <p>The default administrative distance for routes discovered by OSPF is 110. If a static route has the same administrative distance as a dynamic route, the static route takes precedence. Connected routes always take precedence over static or dynamically discovered routes.</p>

Examples

The following example shows static routes that are equal cost routes that direct traffic to three different gateways on the outside interface. The ASA distributes the traffic among the specified gateways.

```
hostname(config)# route outside 10.10.10.0 255.255.255.0 192.168.1.1
hostname(config)# route outside 10.10.10.0 255.255.255.0 192.168.1.2
hostname(config)# route outside 10.10.10.0 255.255.255.0 192.168.1.3
```

Configuring a Default Static Route

A default route identifies the gateway IP address to which the ASA sends all IP packets for which it does not have a learned or static route. A default static route is simply a static route with 0.0.0.0/0 as the destination IP address. Routes that identify a specific destination take precedence over the default route.



Note

In Versions 7.0(1) and later, if you have two default routes configured on different interfaces that have different metrics, the connection to the ASA that is made from the higher metric interface fails, but connections to the ASA from the lower metric interface succeed as expected.

You can define up to three equal cost default route entries per device. Defining more than one equal cost default route entry causes the traffic sent to the default route to be distributed among the specified gateways. When defining more than one default route, you must specify the same interface for each entry.

If you attempt to define more than three equal cost default routes or a default route with a different interface than a previously defined default route, you receive the following message:

```
"ERROR: Cannot add route entry, possible conflict with existing routes."
```

You can define a separate default route for tunneled traffic along with the standard default route. When you create a default route with the tunneled option, all traffic from a tunnel terminating on the ASA that cannot be routed using learned or static routes is sent to this route. For traffic emerging from a tunnel, this route overrides any other configured or learned default routes.

Limitations on Configuring a Default Static Route

The following restrictions apply to default routes with the tunneled option:

- Do not enable unicast RPF (**ip verify reverse-path** command) on the egress interface of a tunneled route, because this setting causes the session to fail.
- Do not enable TCP intercept on the egress interface of the tunneled route, because this setting causes the session to fail.
- Do not use the VoIP inspection engines (CTIQBE, H.323, GTP, MGCP, RTSP, SIP, SKINNY), the DNS inspect engine, or the DCE RPC inspection engine with tunneled routes, because these inspection engines ignore the tunneled route.
- You cannot define more than one default route with the tunneled option.
- ECMP for tunneled traffic is not supported.

To add or edit a tunneled default static route, enter the following command:

Command	Purpose
<pre>route if_name 0.0.0.0 0.0.0.0 gateway_ip [distance tunneled]</pre> <p>Example:</p> <pre>hostname(config)# route outside 0 0 192.168.2.4 tunneled</pre>	<p>Enables you to add a static route.</p> <p>The <i>dest_ip</i> and <i>mask</i> arguments indicate the IP address for the destination network and the <i>gateway_ip</i> argument is the address of the next hop router. The addresses you specify for the static route are the addresses that are in the packet before entering the ASA and performing NAT.</p> <p>The <i>distance</i> argument is the administrative distance for the route. The default is 1 if you do not specify a value. Administrative distance is a parameter used to compare routes among different routing protocols. The default administrative distance for static routes is 1, giving it precedence over routes discovered by dynamic routing protocols but not directly connect routes. The default administrative distance for routes discovered by OSPF is 110. If a static route has the same administrative distance as a dynamic route, the static routes take precedence. Connected routes always take precedence over static or dynamically discovered routes.</p>

**Tip**

You can enter 0 0 instead of 0.0.0.0 0.0.0.0 for the destination network address and mask, as shown in the following example:

```
hostname(config)# route outside 0 0 192.168.1 1
```

Configuring IPv6 Default and Static Routes

The ASA automatically routes IPv6 traffic between directly connected hosts if the interfaces to which the hosts are attached are enabled for IPv6 and the IPv6 ACLs allow the traffic.

To configure an IPv6 default route and static routes, perform the following steps:

Detailed Steps

	Command	Purpose
Step 1	<pre>ipv6 route if_name ::/0 next_hop_ipv6_addr</pre> <p>Example:</p> <pre>hostname(config)# ipv6 route inside 7fff::0/32 3FFE:1100:0:CC00::1</pre>	<p>Adds a default IPv6 route.</p> <p>The example routes packets for network 7fff::0/32 to a networking device on the inside interface at 3FFE:1100:0:CC00::1</p> <p>The address ::/0 is the IPv6 equivalent of any.</p>
Step 2	<pre>ipv6 route if_name destination next_hop_ipv6_addr [admin_distance]</pre> <p>Example:</p> <pre>hostname(config)# ipv6 route inside 7fff::0/32 3FFE:1100:0:CC00::1 [110]</pre>	<p>Adds an IPv6 static route to the IPv6 routing table.</p> <p>The example routes packets for network 7fff::0/32 to a networking device on the inside interface at 3FFE:1100:0:CC00::1, and with an administrative distance of 110.</p>

**Note**

The **ipv6 route** command works the same way as the **route** command, which is used to define IPv4 static routes.

Monitoring a Static or Default Route

One of the problems with static routes is that there is no inherent mechanism for determining if the route is up or down. They remain in the routing table even if the next hop gateway becomes unavailable. Static routes are only removed from the routing table if the associated interface on the ASA goes down.

The static route tracking feature provides a method for tracking the availability of a static route and installing a backup route if the primary route should fail. For example, you can define a default route to an ISP gateway and a backup default route to a secondary ISP in case the primary ISP becomes unavailable.

The ASA implements this feature by associating a static route with a monitoring target that you define, and monitors the target using ICMP echo requests. If an echo reply is not received within a specified time period, the object is considered down and the associated route is removed from the routing table. A previously configured backup route is used in place of the removed route.

When selecting a monitoring target, you need to make sure that it can respond to ICMP echo requests. The target can be any network object that you choose, but you should consider using the following:

- The ISP gateway (for dual ISP support) address
- The next hop gateway address (if you are concerned about the availability of the gateway)
- A server on the target network, such as a AAA server, that the ASA needs to communicate with
- A persistent network object on the destination network

**Note**

A desktop or notebook computer that may be shut down at night is not a good choice.

You can configure static route tracking for statically defined routes or default routes obtained through DHCP or PPPoE. You can only enable PPPoE clients on multiple interfaces with route tracking configured.

To configure static route tracking, perform the following steps:

Detailed Steps

	Command	Purpose
Step 1	<p>sla monitor <i>sla_id</i></p> <p>Example: hostname(config)# sla monitor <i>sla_id</i></p>	<p>Configures the tracked object monitoring parameters by defining the monitoring process.</p> <p>If you are configuring a new monitoring process, you enter sla monitor configuration mode.</p> <p>If you are changing the monitoring parameters for an unscheduled monitoring process that already has a type defined, you automatically enter sla protocol configuration mode.</p>
Step 2	<p>type echo protocol ipIcmpEcho <i>target_ip</i> interface <i>if_name</i></p> <p>Example: hostname(config-sla-monitor)# type echo protocol ipIcmpEcho <i>target_ip</i> interface <i>if_name</i></p>	<p>Specifies the monitoring protocol.</p> <p>If you are changing the monitoring parameters for an unscheduled monitoring process that already has a type defined, you automatically enter sla protocol configuration mode and cannot change this setting.</p> <p>The <i>target_ip</i> argument is the IP address of the network object whose availability the tracking process monitors. While this object is available, the tracking process route is installed in the routing table. When this object becomes unavailable, the tracking process removes the route and the backup route is used in its place.</p>
Step 3	<p>sla monitor schedule <i>sla_id</i> [life {forever <i>seconds</i>}] [start-time {<i>hh:mm</i> [:<i>ss</i>] [<i>month day</i> <i>day month</i>] <i>pending</i> <i>now</i> after <i>hh:mm:ss</i>}] [ageout <i>seconds</i>] [recurring]</p> <p>Example: hostname(config)# sla monitor schedule <i>sla_id</i> [life {<i>forever</i> <i>seconds</i>}] [start-time {<i>hh:mm:ss</i>] [<i>month day</i> <i>day month</i>] <i>pending</i> <i>now</i> after <i>hh:mm:ss</i>}] [ageout <i>seconds</i>] [recurring]</p>	<p>Schedules the monitoring process.</p> <p>Typically, you will use the sla monitor schedule <i>sla_id</i> life forever start-time now command for the monitoring schedule, and allow the monitoring configuration to determine how often the testing occurs.</p> <p>However, you can schedule this monitoring process to begin in the future and to only occur at specified times.</p>
Step 4	<p>track <i>track_id</i> rtr <i>sla_id</i> reachability</p> <p>Example: hostname(config)# track <i>track_id</i> rtr <i>sla_id</i> reachability</p>	<p>Associates a tracked static route with the SLA monitoring process.</p> <p>The <i>track_id</i> argument is a tracking number you assign with this command. The <i>sla_id</i> argument is the ID number of the SLA process.</p>
Step 5	<p>Do one of the following to define the static route to be installed in the routing table while the tracked object is reachable.</p> <p>These options allow you to track a static route or a default route obtained through DHCP or PPPOE.</p> <p>route <i>if_name</i> <i>dest_ip</i> <i>mask</i> <i>gateway_ip</i> [<i>admin_distance</i>] track <i>track_id</i></p> <p>Example: hostname(config)# route <i>if_name</i> <i>dest_ip</i> <i>mask</i> <i>gateway_ip</i> [<i>admin_distance</i>] track <i>track_id</i></p>	<p>Tracks a static route.</p> <p>You cannot use the tunneled option with the route command in static route tracking.</p>

Command	Purpose
Example: <pre>hostname(config)# interface phy_if hostname(config-if)# dhcp client route track track_id hostname(config-if)# ip address dhcp setroute hostname(config-if)# exit</pre>	Tracks a default route obtained through DHCP, Remember that you must use the setroute keyword with the ip address dhcp command to obtain the default route using DHCP.
Example: <pre>hostname(config)# interface phy_if hostname(config-if)# pppoe client route track track_id hostname(config-if)# ip address pppoe setroute hostname(config-if)# exit</pre>	Tracks a default route obtained through PPPoE. You must use the setroute keyword with the ip address pppoe command to obtain the default route using PPPoE.

Configuration Examples for Static or Default Routes

The following example shows how to create a static route that sends all traffic destined for 10.1.1.0/24 to the router 10.1.2.45, which is connected to the inside interface, defines three equal cost static routes that direct traffic to three different gateways on the outside interface, and adds a default route for tunneled traffic. The ASA then distributes the traffic among the specified gateways:

```
hostname(config)# route inside 10.1.1.0 255.255.255.0 10.1.2.45 1
hostname(config)# route outside 10.10.10.0 255.255.255.0 192.168.2.1
hostname(config)# route outside 10.10.10.0 255.255.255.0 192.168.2.2
hostname(config)# route outside 10.10.10.0 255.255.255.0 192.168.2.3
hostname(config)# route outside 0 0 192.168.2.4 tunneled
```

Unencrypted traffic received by the ASA for which there is no static or learned route is distributed among the gateways with the IP addresses 192.168.2.1, 192.168.2.2, and 192.168.2.3. Encrypted traffic received by the ASA for which there is no static or learned route is passed to the gateway with the IP address 192.168.2.4.

The following example creates a static route that sends all traffic destined for 10.1.1.0/24 to the router (10.1.2.45) connected to the inside interface:

```
hostname(config)# route inside 10.1.1.0 255.255.255.0 10.1.2.45 1
```

Feature History for Static and Default Routes

Table 22-1 lists each feature change and the platform release in which it was implemented.

Table 22-1 Feature History for Static and Default Routes

Feature Name	Platform Releases	Feature Information
Routing	7.0(1)	Static and default routing were introduced. We introduced the route command.



Defining Route Maps

This chapter describes route maps and includes the following sections:

- [Information About Route Maps, page 23-1](#)
- [Licensing Requirements for Route Maps, page 23-3](#)
- [Guidelines and Limitations, page 23-3](#)
- [Defining a Route Map, page 23-4](#)
- [Customizing a Route Map, page 23-4](#)
- [Configuration Example for Route Maps, page 23-6](#)
- [Feature History for Route Maps, page 23-6](#)

Information About Route Maps

Route maps are used when redistributing routes into an OSPF, RIP, or EIGRP routing process. They are also used when generating a default route into an OSPF routing process. A route map defines which of the routes from the specified routing protocol are allowed to be redistributed into the target routing process.

Route maps have many features in common with widely known ACLs. These are some of the traits common to both:

- They are an ordered sequence of individual statements, each has a permit or deny result. Evaluation of ACL or route maps consists of a list scan, in a predetermined order, and an evaluation of the criteria of each statement that matches. A list scan is aborted once the first statement match is found and an action associated with the statement match is performed.
- They are generic mechanisms—Criteria matches and match interpretation are dictated by the way that they are applied. The same route map applied to different tasks might be interpreted differently.

These are some of the differences between route maps and ACLs:

- Route maps frequently use ACLs as matching criteria.
- The main result from the evaluation of an access list is a yes or no answer—An ACL either permits or denies input data. Applied to redistribution, an ACL determines if a particular route can (route matches ACLs permit statement) or can not (matches deny statement) be redistributed. Typical route maps not only permit (some) redistributed routes but also modify information associated with the route, when it is redistributed into another protocol.
- Route maps are more flexible than ACLs and can verify routes based on criteria which ACLs can not verify. For example, a route map can verify if the type of route is internal.

- Each ACL ends with an implicit deny statement, by design convention; there is no similar convention for route maps. If the end of a route map is reached during matching attempts, the result depends on the specific application of the route map. Fortunately, route maps that are applied to redistribution behave the same way as ACLs: if the route does not match any clause in a route map then the route redistribution is denied, as if the route map contained deny statement at the end.

The dynamic protocol **redistribute** command allows you to apply a route map. In ASDM, this capability for redistribution can be found when you add or edit a new route map (see the “[Defining a Route Map](#)” section on page 23-4). Route maps are preferred if you intend to either modify route information during redistribution or if you need more powerful matching capability than an ACL can provide. If you simply need to selectively permit some routes based on their prefix or mask, we recommend that you use a route map to map to an ACL (or equivalent prefix list) directly in the **redistribute** command. If you use a route map to selectively permit some routes based on their prefix or mask, you typically use more configuration commands to achieve the same goal.


Note

You must use a standard ACL as the match criterion for your route map. Using an extended ACL will not work, and your routes will never be redistributed. We recommend that you number clauses in intervals of 10, to reserve numbering space in case you need to insert clauses in the future.

This section includes the following topics:

- [Permit and Deny Clauses, page 23-2](#)
- [Match and Set Clause Values, page 23-2](#)

Permit and Deny Clauses

Route maps can have permit and deny clauses. In the **route-map ospf-to-eigrp** command, there is one deny clause (with sequence number 10) and two permit clauses. The deny clause rejects route matches from redistribution. Therefore, the following rules apply:

- If you use an ACL in a route map using a permit clause, routes that are permitted by the ACL are redistributed.
- If you use an ACL in a route map deny clause, routes that are permitted by the ACL are not redistributed.
- If you use an ACL in a route map permit or deny clause, and the ACL denies a route, then the route map clause match is not found and the next route-map clause is evaluated.

Match and Set Clause Values

Each route map clause has two types of values:

- A match value selects routes to which this clause should be applied.
- A set value modifies information that will be redistributed into the target protocol.

For each route that is being redistributed, the router first evaluates the match criteria of a clause in the route map. If the match criteria succeed, then the route is redistributed or rejected as dictated by the permit or deny clause, and some of its attributes might be modified by the values set from the Set Value tab in ASDM or from the **set** commands. If the match criteria fail, then this clause is not applicable to the route, and the software proceeds to evaluate the route against the next clause in the route map.

Scanning of the route map continues until a clause is found whose **match** command(s), or Match Clause as set from the Match Clause tab in ASDM, match the route or until the end of the route map is reached.

A match or set value in each clause can be missed or repeated several times, if one of these conditions exists:

- If several **match** commands or Match Clause values in ASDM are present in a clause, all must succeed for a given route in order for that route to match the clause (in other words, the logical AND algorithm is applied for multiple match commands).
- If a **match** command or Match Clause value in ASDM refers to several objects in one command, either of them should match (the logical OR algorithm is applied). For example, in the **match ip address 101 121** command, a route is permitted if access list 101 or access list 121 permits it.
- If a **match** command or Match Clause value in ASDM is not present, all routes match the clause. In the previous example, all routes that reach clause 30 match; therefore, the end of the route map is never reached.
- If a **set** command, or Set Value in ASDM, is not present in a route map permit clause, then the route is redistributed without modification of its current attributes.

**Note**

Do not configure a **set** command in a route map deny clause because the deny clause prohibits route redistribution—there is no information to modify.

A route map clause without a **match** or **set** command, or Match or Set Value as set on the Match or Set Value tab in ASDM, performs an action. An empty permit clause allows a redistribution of the remaining routes without modification. An empty deny clause does not allow a redistribution of other routes (this is the default action if a route map is completely scanned, but no explicit match is found).

Licensing Requirements for Route Maps

The following table shows the licensing requirements for route maps:

Model	License Requirement
All models	Base License.

Guidelines and Limitations

This section includes the guidelines and limitations for this feature.

Context Mode Guidelines

Supported in single context mode.

Firewall Mode Guidelines

Supported only in routed firewall mode. Transparent firewall mode is not supported.

IPv6 Guidelines

Does not support IPv6.

Defining a Route Map

You must define a route map when specifying which of the routes from the specified routing protocol are allowed to be redistributed into the target routing process.

To define a route map, enter the following command:

Command	Purpose
route-map <i>name</i> { permit deny } [<i>sequence_number</i>] Example: hostname(config)# route-map <i>name</i> {permit} [12]	Creates the route map entry. Enters route-map configuration mode. Route map entries are read in order. You can identify the order using the <i>sequence_number</i> argument, or the ASA uses the order in which you add route map entries.

Customizing a Route Map

This section describes how to customize the route map and includes the following topics:

- [Defining a Route to Match a Specific Destination Address, page 23-4](#)
- [Configuring the Metric Values for a Route Action, page 23-5](#)

Defining a Route to Match a Specific Destination Address

To define a route to match a specified destination address, perform the following steps:

Detailed Steps

	Command	Purpose
Step 1	route-map <i>name</i> { permit deny } [<i>sequence_number</i>] Example: hostname(config)# route-map <i>name</i> {permit} [12]	Creates the route map entry. Enters route-map configuration mode. Route map entries are read in order. You can identify the order using the <i>sequence_number</i> option, or the ASA uses the order in which you add route map entries.
Step 2	Enter one of the following match commands to match routes to a specified destination address: match ip address <i>acl_id</i> [<i>acl_id</i>] [...] [<i>prefix-list</i>] Example: hostname(config-route-map)# match ip address <i>acl_id</i> [<i>acl_id</i>] [...] [<i>prefix-list</i>]	Matches any routes that have a destination network that matches a standard ACL or prefix list. If you specify more than one ACL, then the route can match any of the ACLs.

Command	Purpose
match metric <i>metric_value</i> Example: hostname(config-route-map)# match metric 200	Matches any routes that have a specified metric. The <i>metric_value</i> can range from 0 to 4294967295.
match ip next-hop <i>acl_id</i> [<i>acl_id</i>] [...]	Matches any routes that have a next hop router address that matches a standard ACL. If you specify more than one ACL, then the route can match any of the ACLs.
match interface <i>if_name</i> Example: hostname(config-route-map)# match interface <i>if_name</i>	Matches any routes with the specified next hop interface. If you specify more than one interface, then the route can match either interface.
match ip route-source <i>acl_id</i> [<i>acl_id</i>] [...]	Matches any routes that have been advertised by routers that match a standard ACL. If you specify more than one ACL, then the route can match any of the ACLs.
match route-type { internal external [type-1 type-2]}	Matches the route type.
Example: hostname(config-route-map)# match route-type internal type-1	

Configuring the Metric Values for a Route Action

If a route matches the **match** commands, then the following **set** commands determine the action to perform on the route before redistributing it.

To configure the metric value for a route action, perform the following steps:

Detailed Steps

	Command	Purpose
Step 1	route-map <i>name</i> { permit deny } [<i>sequence_number</i>] Example: hostname(config)# route-map <i>name</i> {permit} [12]	Creates the route map entry. Route map entries are read in order. You can identify the order using the <i>sequence_number</i> argument, or the ASA uses the order in which you add route map entries.
Step 2	To set a metric for the route map, enter one or more of the following set commands:	

Command	Purpose
set metric <i>metric_value</i> Example: hostname(config-route-map)# set metric 200	Sets the metric value. The <i>metric_value</i> argument can range from 0 to 294967295.
set metric-type { type-1 type-2 } Example: hostname(config-route-map)# set metric-type type-2	Sets the metric type. The <i>metric-type</i> argument can be type-1 or type-2.

Configuration Example for Route Maps

The following example shows how to redistribute routes with a hop count equal to 1 into OSPF.

The ASA redistributes these routes as external LSAs with a metric of 5 and a metric type of Type 1.

```
hostname(config)# route-map 1-to-2 permit
hostname(config-route-map)# match metric 1
hostname(config-route-map)# set metric 5
hostname(config-route-map)# set metric-type type-1
```

The following example shows how to redistribute the 10.1.1.0 static route into eigrp process 1 with the configured metric value:

```
hostname(config)# route outside 10.1.1.0 255.255.255.0 192.168.1.1
hostname(config-route-map)# access-list mymap2 line 1 permit 10.1.1.0 255.255.255.0
hostname(config-route-map)# route-map mymap2 permit 10
hostname(config-route-map)# match ip address mymap2
hostname(config-route-map)# router eigrp 1
hostname(config)# redistribute static metric 250 250 1 1 1 route-map mymap2
```

Feature History for Route Maps

Table 23-1 lists each feature change and the platform release in which it was implemented.

Table 23-1 Feature History for Route Maps

Feature Name	Platform Releases	Feature Information
Route maps	7.0(1)	We introduced this feature. We introduced the following command: route-map .
Enhanced support for static and dynamic route maps	8.0(2)	Enhanced support for dynamic and static route maps was added.
Support for stateful failover of dynamic routing protocols (EIGRP, OSPF, and RIP) and debugging of general routing-related operations	8.4(1)	We introduced the following commands: debug route , show debug route . We modified the following command: show route .



CHAPTER 24

Configuring OSPF

This chapter describes how to configure the ASA to route data, perform authentication, and redistribute routing information using the Open Shortest Path First (OSPF) routing protocol.

The chapter includes the following sections:

- [Information About OSPF, page 24-1](#)
- [Licensing Requirements for OSPF, page 24-2](#)
- [Guidelines and Limitations, page 24-3](#)
- [Configuring OSPF, page 24-3](#)
- [Customizing OSPF, page 24-4](#)
- [Restarting the OSPF Process, page 24-14](#)
- [Configuration Example for OSPF, page 24-14](#)
- [Monitoring OSPF, page 24-16](#)
- [Feature History for OSPF, page 24-17](#)

Information About OSPF

OSPF is an interior gateway routing protocol that uses link states rather than distance vectors for path selection. OSPF propagates link-state advertisements rather than routing table updates. Because only LSAs are exchanged instead of the entire routing tables, OSPF networks converge more quickly than RIP networks.

OSPF uses a link-state algorithm to build and calculate the shortest path to all known destinations. Each router in an OSPF area contains an identical link-state database, which is a list of each of the router usable interfaces and reachable neighbors.

The advantages of OSPF over RIP include the following:

- OSPF link-state database updates are sent less frequently than RIP updates, and the link-state database is updated instantly, rather than gradually, as stale information is timed out.
- Routing decisions are based on cost, which is an indication of the overhead required to send packets across a certain interface. The ASA calculates the cost of an interface based on link bandwidth rather than the number of hops to the destination. The cost can be configured to specify preferred paths.

The disadvantage of shortest path first algorithms is that they require a lot of CPU cycles and memory.

The ASA can run two processes of OSPF protocol simultaneously on different sets of interfaces. You might want to run two processes if you have interfaces that use the same IP addresses (NAT allows these interfaces to coexist, but OSPF does not allow overlapping addresses). Or you might want to run one process on the inside and another on the outside, and redistribute a subset of routes between the two processes. Similarly, you might need to segregate private addresses from public addresses.

You can redistribute routes into an OSPF routing process from another OSPF routing process, a RIP routing process, or from static and connected routes configured on OSPF-enabled interfaces.

The ASA supports the following OSPF features:

- Support of intra-area, interarea, and external (Type I and Type II) routes.
- Support of a virtual link.
- OSPF LSA flooding.
- Authentication to OSPF packets (both password and MD5 authentication).
- Support for configuring the ASA as a designated router or a designated backup router. The ASA also can be set up as an ABR.
- Support for stub areas and not-so-stubby areas.
- Area boundary router Type 3 LSA filtering.

OSPF supports MD5 and clear text neighbor authentication. Authentication should be used with all routing protocols when possible because route redistribution between OSPF and other protocols (like RIP) can potentially be used by attackers to subvert routing information.

If NAT is used, if OSPF is operating on public and private areas, and if address filtering is required, then you need to run two OSPF processes—one process for the public areas and one for the private areas.

A router that has interfaces in multiple areas is called an Area Border Router (ABR). A router that acts as a gateway to redistribute traffic between routers using OSPF and routers using other routing protocols is called an Autonomous System Boundary Router (ASBR).

An ABR uses LSAs to send information about available routes to other OSPF routers. Using ABR Type 3 LSA filtering, you can have separate private and public areas with the ASA acting as an ABR. Type 3 LSAs (interarea routes) can be filtered from one area to other, which allows you to use NAT and OSPF together without advertising private networks.


Note

Only Type 3 LSAs can be filtered. If you configure the ASA as an ASBR in a private network, it will send Type 5 LSAs describing private networks, which will get flooded to the entire AS, including public areas.

If NAT is employed but OSPF is only running in public areas, then routes to public networks can be redistributed inside the private network, either as default or Type 5 AS External LSAs. However, you need to configure static routes for the private networks protected by the ASA. Also, you should not mix public and private networks on the same ASA interface.

You can have two OSPF routing processes, one RIP routing process, and one EIGRP routing process running on the ASA at the same time.

Licensing Requirements for OSPF

The following table shows the licensing requirements for this feature:

Model	License Requirement
All models	Base License.

Guidelines and Limitations

This section includes the guidelines and limitations for this feature.

Context Mode Guidelines

Supported in single context mode.

Firewall Mode Guidelines

Supported in routed firewall mode only. Transparent firewall mode is not supported.

IPv6 Guidelines

Does not support IPv6.

Configuring OSPF

This section describes how to enable an OSPF process on the ASA.

After you enable OSPF, you need to define a route map. For more information, see the [“Defining a Route Map” section on page 23-4](#). Then you generate a default route. For more information, see the [“Configuring Static and Default Routes” section on page 22-2](#).

After you have defined a route map for the OSPF process, you can customize the OSPF process to suit your particular needs. To learn how to customize the OSPF process on the ASA, see the [“Customizing OSPF” section on page 24-4](#).

To enable OSPF, you need to create an OSPF routing process, specify the range of IP addresses associated with the routing process, then assign area IDs associated with that range of IP addresses.

You can enable up to two OSPF process instances. Each OSPF process has its own associated areas and networks.

To enable OSPF, perform the following steps:

Detailed Steps

	Command	Purpose
Step 1	<pre>router ospf process_id</pre> <p>Example: hostname(config)# router ospf 2 </p>	<p>Creates an OSPF routing process and enters router configuration mode for this OSPF process.</p> <p>The <i>process_id</i> argument is an internally used identifier for this routing process and can be any positive integer. This ID does not have to match the ID on any other device; it is for internal use only. You can use a maximum of two processes.</p> <p>If there is only one OSPF process enabled on the ASA, then that process is selected by default. You cannot change the OSPF process ID when editing an existing area.</p>
Step 2	<pre>network ip_address mask area area_id</pre> <p>Example: hostname(config)# router ospf 2 hostname(config-router)# network 10.0.0.0 255.0.0.0 area 0 </p>	<p>Defines the IP addresses on which OSPF runs and the area ID for that interface.</p> <p>When adding a new area, enter the area ID. You can specify the area ID as either a decimal number or an IP address. Valid decimal values range from 0-4294967295. You cannot change the area ID when editing an existing area.</p>

Customizing OSPF

This section explains how to customize the OSPF process and includes the following topics:

- [Redistributing Routes Into OSPF, page 24-4](#)
- [Configuring Route Summarization When Redistributing Routes Into OSPF, page 24-6](#)
- [Configuring Route Summarization Between OSPF Areas, page 24-7](#)
- [Configuring OSPF Interface Parameters, page 24-8](#)
- [Configuring OSPF Area Parameters, page 24-10](#)
- [Configuring OSPF NSSA, page 24-11](#)
- [Defining Static OSPF Neighbors, page 24-12](#)
- [Configuring Route Calculation Timers, page 24-13](#)
- [Logging Neighbors Going Up or Down, page 24-13](#)

Redistributing Routes Into OSPF

The ASA can control the redistribution of routes between OSPF routing processes.



Note

If you want to redistribute a route by defining which of the routes from the specified routing protocol are allowed to be redistributed into the target routing process, you must first generate a default route. See the “[Configuring Static and Default Routes](#)” section on page 22-2, and then define a route map according to the “[Defining a Route Map](#)” section on page 23-4.

To redistribute static, connected, RIP, or OSPF routes into an OSPF process, perform the following steps:

Detailed Steps

	Command	Purpose
Step 1	<pre>router ospf <i>process_id</i></pre> <p>Example: hostname(config)# router ospf 2</p>	<p>Creates an OSPF routing process and enters router configuration mode for the OSPF process that you want to redistribute.</p> <p>The <i>process_id</i> argument is an internally used identifier for this routing process and can be any positive integer. This ID does not have to match the ID on any other device; it is for internal use only. You can use a maximum of two processes.</p>
Step 2	<p>Do one of the following to redistribute the selected route type into the OSPF routing process:</p> <pre>redistribute connected [[metric <i>metric-value</i>] [metric-type {<i>type-1</i> <i>type-2</i>}] [tag <i>tag_value</i>] [subnets] [route-map <i>map_name</i>]</pre> <p>Example: hostname(config)# redistribute connected 5 type-1 route-map-practice</p> <pre>redistribute static [metric <i>metric-value</i>] [metric-type {<i>type-1</i> <i>type-2</i>}] [tag <i>tag_value</i>] [subnets] [route-map <i>map_name</i>]</pre> <p>Example: hostname(config)# redistribute static 5 type-1 route-map-practice</p> <pre>redistribute ospf <i>pid</i> [match {internal external [1 2] nssa-external [1 2]}] [metric <i>metric-value</i>] [metric-type {<i>type-1</i> <i>type-2</i>}] [tag <i>tag_value</i>] [subnets] [route-map <i>map_name</i>]</pre> <p>Example: hostname(config)# route-map 1-to-2 permit hostname(config-route-map)# match metric 1 hostname(config-route-map)# set metric 5 hostname(config-route-map)# set metric-type type-1 hostname(config-route-map)# router ospf 2 hostname(config-router)# redistribute ospf 1 route-map 1-to-2</p>	<p>Redistributes connected routes into the OSPF routing process.</p> <p>Redistributes static routes into the OSPF routing process.</p> <p>Allows you to redistribute routes from an OSPF routing process into another OSPF routing process.</p> <p>You can either use the match options in this command to match and set route properties, or you can use a route map. The subnets option does not have equivalents in the route-map command. If you use both a route map and match options in the redistribute command, then they must match.</p> <p>The example shows route redistribution from OSPF process 1 into OSPF process 2 by matching routes with a metric equal to 1. The ASA redistributes these routes as external LSAs with a metric of 5 and a metric type of Type 1.</p>

Command	Purpose
<pre>redistribute rip [metric <i>metric-value</i>] [metric-type {type-1 type-2}] [tag <i>tag_value</i>] [subnets] [route-map <i>map_name</i>]</pre> <p>Example:</p> <pre>hostname(config)# redistribute rip 5 hostname(config-route-map)# match metric 1 hostname(config-route-map)# set metric 5 hostname(config-route-map)# set metric-type type-1 hostname(config-router)# redistribute ospf 1 route-map 1-to-2</pre>	Allows you to redistribute routes from a RIP routing process into the OSPF routing process.
<pre>redistribute eigrp as-num [metric <i>metric-value</i>] [metric-type {type-1 type-2}] [tag <i>tag_value</i>] [subnets] [route-map <i>map_name</i>]</pre> <p>Example:</p> <pre>hostname(config)# redistribute eigrp 2 hostname(config-route-map)# match metric 1 hostname(config-route-map)# set metric 5 hostname(config-route-map)# set metric-type type-1 hostname(config-router)# redistribute ospf 1 route-map 1-to-2</pre>	Allows you to redistribute routes from an EIGRP routing process into the OSPF routing process.

Configuring Route Summarization When Redistributing Routes Into OSPF

When routes from other protocols are redistributed into OSPF, each route is advertised individually in an external LSA. However, you can configure the ASA to advertise a single route for all the redistributed routes that are included for a specified network address and mask. This configuration decreases the size of the OSPF link-state database.

Routes that match the specified IP Address mask pair can be suppressed. The tag value can be used as a match value for controlling redistribution through route maps.

To configure the software advertisement on one summary route for all redistributed routes included for a network address and mask, perform the following steps:

Detailed Steps

	Command	Purpose
Step 1	<pre>router ospf process_id</pre> <p>Example: hostname(config)# router ospf 1</p>	<p>Creates an OSPF routing process and enters router configuration mode for this OSPF process.</p> <p>The <i>process_id</i> argument is an internally used identifier for this routing process and can be any positive integer. This ID does not have to match the ID on any other device; it is for internal use only. You can use a maximum of two processes.</p>
Step 2	<pre>summary-address ip_address mask [not-advertise] [tag tag]</pre> <p>Example: hostname(config)# router ospf 1 hostname(config-router)# summary-address 10.1.0.0 255.255.0.0</p>	<p>Sets the summary address.</p> <p>In this example, the summary address 10.1.0.0 includes addresses 10.1.1.0, 10.1.2.0, 10.1.3.0, and so on. Only the 10.1.0.0 address is advertised in an external link-state advertisement.</p>

Configuring Route Summarization Between OSPF Areas

Route summarization is the consolidation of advertised addresses. This feature causes a single summary route to be advertised to other areas by an area boundary router. In OSPF, an area boundary router advertises networks in one area into another area. If the network numbers in an area are assigned in a way so that they are contiguous, you can configure the area boundary router to advertise a summary route that includes all the individual networks within the area that fall into the specified range.

To define an address range for route summarization, perform the following steps:

Detailed Steps

	Command	Purpose
Step 1	<pre>router ospf process_id</pre> <p>Example: hostname(config)# router ospf 1</p>	<p>Creates an OSPF routing process and enters router configuration mode for this OSPF process.</p> <p>The <i>process_id</i> argument is an internally used identifier for this routing process. It can be any positive integer. This ID does not have to match the ID on any other device; it is for internal use only. You can use a maximum of two processes.</p>
Step 2	<pre>area area-id range ip-address mask [advertise not-advertise]</pre> <p>Example: hostname(config)# router ospf 1 hostname(config-router)# area 17 range 12.1.0.0 255.255.0.0</p>	<p>Sets the address range.</p> <p>In this example, the address range is set between OSPF areas.</p>

Configuring OSPF Interface Parameters

You can change some interface-specific OSPF parameters, if necessary.

Prerequisites

You are not required to change any of these parameters, but the following interface parameters must be consistent across all routers in an attached network: **ospf hello-interval**, **ospf dead-interval**, and **ospf authentication-key**. If you configure any of these parameters, be sure that the configurations for all routers on your network have compatible values.

To configure OSPF interface parameters, perform the following steps:

Detailed Steps

	Command	Purpose
Step 1	<pre>router ospf process_id</pre> <p>Example: hostname(config)# router ospf 2</p>	<p>Creates an OSPF routing process and enters router configuration mode for the OSPF process that you want to redistribute.</p> <p>The <i>process_id</i> argument is an internally used identifier for this routing process and can be any positive integer. This ID does not have to match the ID on any other device; it is for internal use only. You can use a maximum of two processes.</p>
Step 2	<pre>network ip_address mask area area_id</pre> <p>Example: hostname(config)# router ospf 2 hostname(config-router)# network 10.0.0.0 255.0.0.0 area 0</p>	<p>Defines the IP addresses on which OSPF runs and the area ID for that interface.</p>
Step 3	<pre>hostname(config)# interface interface_name</pre> <p>Example: hostname(config)# interface my_interface</p>	<p>Allows you to enter interface configuration mode.</p>
Step 4	<p>Do one of the following to configure optional OSPF interface parameters:</p> <pre>ospf authentication [message-digest null]</pre> <p>Example: hostname(config-interface)# ospf authentication message-digest</p>	<p>Specifies the authentication type for an interface.</p>

Command	Purpose
<p>ospf authentication-key <i>key</i></p> <p>Example: <pre>hostname(config-interface)# ospf authentication-key cisco</pre></p>	<p>Allows you to assign a password to be used by neighboring OSPF routers on a network segment that is using the OSPF simple password authentication.</p> <p>The <i>key</i> argument can be any continuous string of characters up to 8 bytes in length.</p> <p>The password created by this command is used as a key that is inserted directly into the OSPF header when the ASA software originates routing protocol packets. A separate password can be assigned to each network on a per-interface basis. All neighboring routers on the same network must have the same password to be able to exchange OSPF information.</p>
<p>ospf cost <i>cost</i></p> <p>Example: <pre>hostname(config-interface)# ospf cost 20</pre></p>	<p>Allows you to explicitly specify the cost of sending a packet on an OSPF interface. The <i>cost</i> is an integer from 1 to 65535.</p> <p>In this example, the cost is set to 20.</p>
<p>ospf dead-interval <i>seconds</i></p> <p>Example: <pre>hostname(config-interface)# ospf dead-interval 40</pre></p>	<p>Allows you to set the number of seconds that a device must wait before it declares a neighbor OSPF router down because it has not received a hello packet. The value must be the same for all nodes on the network.</p> <p>In this example, the dead interval is set to 40.</p>
<p>ospf hello-interval <i>seconds</i></p> <p>Example: <pre>hostname(config-interface)# ospf hello-interval 10</pre></p>	<p>Allows you to specify the length of time between the hello packets that the ASA sends on an OSPF interface. The value must be the same for all nodes on the network.</p> <p>In this example, the hello interval is set to 10.</p>
<p>ospf message-digest-key <i>key_id md5 key</i></p> <p>Example: <pre>hostname(config-interface)# ospf message-digest-key 1 md5 cisco</pre></p>	<p>Enables OSPF MD5 authentication.</p> <p>The following argument values can be set:</p> <ul style="list-style-type: none"> <i>key_id</i>—An identifier in the range from 1 to 255. <i>key</i>—An alphanumeric password of up to 16 bytes. <p>Usually, one key per interface is used to generate authentication information when sending packets and to authenticate incoming packets. The same key identifier on the neighbor router must have the same key value.</p> <p>We recommend that you not keep more than one key per interface. Every time you add a new key, you should remove the old key to prevent the local system from continuing to communicate with a hostile system that knows the old key. Removing the old key also reduces overhead during rollover.</p>
<p>ospf priority <i>number_value</i></p> <p>Example: <pre>hostname(config-interface)# ospf priority 20</pre></p>	<p>Allows you to set the priority to help determine the OSPF designated router for a network.</p> <p>The <i>number_value</i> argument ranges from 0 to 255.</p> <p>In this example, the priority number value is set to 20.</p>

Command	Purpose
ospf retransmit-interval <i>seconds</i> Example: hostname(config-interface)# ospf retransmit-interval seconds	Allows you to specify the number of seconds between LSA retransmissions for adjacencies belonging to an OSPF interface. The value for <i>seconds</i> must be greater than the expected round-trip delay between any two routers on the attached network. The range is from 1 to 65535 seconds. The default value is 5 seconds. In this example, the retransmit-interval value is set to 15.
ospf transmit-delay <i>seconds</i> Example: hostname(config-interface)# ospf transmit-delay 5	Sets the estimated number of seconds required to send a link-state update packet on an OSPF interface. The <i>seconds</i> value ranges from 1 to 65535 seconds. The default value is 1 second. In this example, the transmit-delay is 5 seconds.
ospf network point-to-point non-broadcast Example: hostname(config-interface)# ospf network point-to-point non-broadcast	Specifies the interface as a point-to-point, nonbroadcast network. When you designate an interface as point-to-point, nonbroadcast, you must manually define the OSPF neighbor; dynamic neighbor discovery is not possible. See the “Defining Static OSPF Neighbors” section on page 24-12 for more information. Additionally, you can only define one OSPF neighbor on that interface.

Configuring OSPF Area Parameters

You can configure several OSPF area parameters. These area parameters (shown in the following task list) include setting authentication, defining stub areas, and assigning specific costs to the default summary route. Authentication provides password-based protection against unauthorized access to an area.

Stub areas are areas into which information on external routes is not sent. Instead, there is a default external route generated by the ABR into the stub area for destinations outside the autonomous system. To take advantage of the OSPF stub area support, default routing must be used in the stub area. To further reduce the number of LSAs sent into a stub area, you can use the **no-summary** keyword of the **area stub** command on the ABR to prevent it from sending a summary link advertisement (LSA Type 3) into the stub area.

To specify area parameters for your network, perform the following steps:

Detailed Steps

	Command	Purpose
Step 1	router ospf <i>process_id</i> Example: hostname(config)# router ospf 2	Creates an OSPF routing process and enters router configuration mode for the OSPF process that you want to redistribute. The <i>process_id</i> argument is an internally used identifier for this routing process and can be any positive integer. This ID does not have to match the ID on any other device; it is for internal use only. You can use a maximum of two processes.
Step 2	Do one of the following to configure optional OSPF area parameters:	

Command	Purpose
area <i>area-id</i> authentication Example: hostname(config-router)# area 0 authentication	Enables authentication for an OSPF area.
area <i>area-id</i> authentication message-digest Example: hostname(config-router)# area 0 authentication message-digest	Enables MD5 authentication for an OSPF area.

Configuring OSPF NSSA

The OSPF implementation of an NSSA is similar to an OSPF stub area. NSSA does not flood Type 5 external LSAs from the core into the area, but it can import autonomous system external routes in a limited way within the area.

NSSA imports Type 7 autonomous system external routes within an NSSA area by redistribution. These Type 7 LSAs are translated into Type 5 LSAs by NSSA ABRs, which are flooded throughout the whole routing domain. Summarization and filtering are supported during the translation.

You can simplify administration if you are an ISP or a network administrator that must connect a central site using OSPF to a remote site that is using a different routing protocol using NSSA.

Before the implementation of NSSA, the connection between the corporate site border router and the remote router could not be run as an OSPF stub area because routes for the remote site could not be redistributed into the stub area, and two routing protocols needed to be maintained. A simple protocol such as RIP was usually run and handled the redistribution. With NSSA, you can extend OSPF to cover the remote connection by defining the area between the corporate router and the remote router as an NSSA.

Before you use this feature, consider these guidelines:

- You can set a Type 7 default route that can be used to reach external destinations. When configured, the router generates a Type 7 default into the NSSA or the NSSA area boundary router.
- Every router within the same area must agree that the area is NSSA; otherwise, the routers will not be able to communicate.

To specify area parameters for your network to configure OSPF NSSA, perform the following steps:

Detailed Steps

	Command	Purpose
Step 1	router ospf <i>process_id</i> Example: hostname(config)# router ospf 2	Creates an OSPF routing process and enters router configuration mode for the OSPF process that you want to redistribute. The <i>process_id</i> argument is an internally used identifier for this routing process. It can be any positive integer. This ID does not have to match the ID on any other device; it is for internal use only. You can use a maximum of two processes.
Step 2	Do one of the following to configure optional OSPF NSSA parameters:	

Command	Purpose
area <i>area-id</i> nssa [no-redistribution] [default-information-originate] Example: hostname(config-router)# area 0 nssa	Defines an NSSA area.
summary-address <i>ip_address mask</i> [not-advertise] [tag tag] Example: hostname(config)# router ospf 1 hostname(config-router)# summary-address 10.1.0.0 255.255.0.0	Sets the summary address and helps reduce the size of the routing table. Using this command for OSPF causes an OSPF ASBR to advertise one external route as an aggregate for all redistributed routes that are covered by the address. In this example, the summary address 10.1.0.0 includes addresses 10.1.1.0, 10.1.2.0, 10.1.3.0, and so on. Only the 10.1.0.0 address is advertised in an external link-state advertisement.



Note OSPF does not support summary-address 0.0.0.0 0.0.0.0.

Defining Static OSPF Neighbors

You need to define static OSPF neighbors to advertise OSPF routes over a point-to-point, non-broadcast network. This feature lets you broadcast OSPF advertisements across an existing VPN connection without having to encapsulate the advertisements in a GRE tunnel.

Before you begin, you must create a static route to the OSPF neighbor. See [Chapter 22, “Configuring Static and Default Routes,”](#) for more information about creating static routes.

To define a static OSPF neighbor, perform the following steps:

Detailed Steps

	Command	Purpose
Step 1	router ospf <i>process_id</i> Example: hostname(config)# router ospf 2	Creates an OSPF routing process and enters router configuration mode for this OSPF process. The <i>process_id</i> argument is an internally used identifier for this routing process and can be any positive integer. This ID does not have to match the ID on any other device; it is for internal use only. You can use a maximum of two processes.
Step 2	neighbor <i>addr</i> [interface <i>if_name</i>] Example: hostname(config-router)# neighbor 255.255.0.0 [interface my_interface]	Defines the OSPF neighborhood. The <i>addr</i> argument is the IP address of the OSPF neighbor. The <i>if_name</i> argument is the interface used to communicate with the neighbor. If the OSPF neighbor is not on the same network as any of the directly connected interfaces, you must specify the interface.

Configuring Route Calculation Timers

You can configure the delay time between when OSPF receives a topology change and when it starts an SPF calculation. You also can configure the hold time between two consecutive SPF calculations.

To configure route calculation timers, perform the following steps:

Detailed Steps

	Command	Purpose
Step 1	<pre>router ospf process_id</pre> <p>Example: hostname(config)# router ospf 2</p>	<p>Creates an OSPF routing process and enters router configuration mode for this OSPF process.</p> <p>The <i>process_id</i> argument is an internally used identifier for this routing process and can be any positive integer. This ID does not have to match the ID on any other device; it is for internal use only. You can use a maximum of two processes.</p>
Step 2	<pre>timers spf spf-delay spf-holdtime</pre> <p>Example: hostname(config-router)# timers spf 10 120</p>	<p>Configures the route calculation times.</p> <p>The <i>spf-delay</i> argument is the delay time (in seconds) between when OSPF receives a topology change and when it starts an SPF calculation. It can be an integer from 0 to 65535. The default time is 5 seconds. A value of 0 means that there is no delay; that is, the SPF calculation is started immediately.</p> <p>The <i>spf-holdtime</i> argument is the minimum time (in seconds) between two consecutive SPF calculations. It can be an integer from 0 to 65535. The default time is 10 seconds. A value of 0 means that there is no delay; that is, two SPF calculations can be performed, one immediately after the other.</p>

Logging Neighbors Going Up or Down

By default, a syslog message is generated when an OSPF neighbor goes up or down.

Configure **log-adj-changes** router configuration command if you want to know about OSPF neighbors going up or down without turning on the **debug ospf adjacency** command. The **log-adj-changes** router configuration command provides a higher level view of the peer relationship with less output. Configure the **log-adj-changes detail** command if you want to see messages for each state change.

To log neighbors going up or down, perform the following steps:

Detailed Steps

	Command	Purpose
Step 1	<code>router ospf process_id</code> Example: hostname(config)# router ospf 2	Creates an OSPF routing process and enters router configuration mode for this OSPF process. The <i>process_id</i> argument is an internally used identifier for this routing process and can be any positive integer. This ID does not have to match the ID on any other device; it is for internal use only. You can use a maximum of two processes.
Step 2	<code>log-adj-changes [detail]</code> Example: hostname(config-router)# log-adj-changes [detail]	Configures logging for neighbors going up or down.

Restarting the OSPF Process

To remove the entire OSPF configuration that you have enabled, enter the following command:

Command	Purpose
<code>clear ospf pid {process redistribution counters [neighbor [neighbor-interface] [neighbor-id]]}</code> Example: hostname(config)# clear ospf	Removes the entire OSPF configuration that you have enabled. After the configuration is cleared, you must reconfigure OSPF using the router ospf command.

Configuration Example for OSPF

The following example shows how to enable and configure OSPF with various optional processes:

Step 1 To enable OSPF, enter the following commands:

```
hostname(config)# router ospf 2
hostname(config-router)# network 10.0.0.0 255.0.0.0 area 0
```

Step 2 (Optional) To redistribute routes from one OSPF process to another OSPF process, enter the following commands:

```
hostname(config)# route-map 1-to-2 permit
hostname(config-route-map)# match metric 1
hostname(config-route-map)# set metric 5
hostname(config-route-map)# set metric-type type-1
hostname(config-route-map)# router ospf 2
hostname(config-router)# redistribute ospf 1 route-map 1-to-2
```

Step 3 (Optional) To configure OSPF interface parameters, enter the following commands:

```
hostname(config)# router ospf 2
hostname(config-router)# network 10.0.0.0 255.0.0.0 area 0
hostname(config-router)# interface inside
hostname(config-interface)# ospf cost 20
hostname(config-interface)# ospf retransmit-interval 15
hostname(config-interface)# ospf transmit-delay 10
hostname(config-interface)# ospf priority 20
hostname(config-interface)# ospf hello-interval 10
hostname(config-interface)# ospf dead-interval 40
hostname(config-interface)# ospf authentication-key cisco
hostname(config-interface)# ospf message-digest-key 1 md5 cisco
hostname(config-interface)# ospf authentication message-digest
```

Step 4 (Optional) To configure OSPF area parameters, enter the following commands:

```
hostname(config)# router ospf 2
hostname(config-router)# area 0 authentication
hostname(config-router)# area 0 authentication message-digest
hostname(config-router)# area 17 stub
hostname(config-router)# area 17 default-cost 20
```

Step 5 (Optional) To configure the route calculation timers and show the log neighbor up and down messages, enter the following commands:

```
hostname(config-router)# timers spf 10 120
hostname(config-router)# log-adj-changes [detail]
```

Step 6 To restart the OSPF process, enter the following commands:

```
hostname(config)# clear ospf pid {process | redistribution | counters
[neighbor [neighbor-interface] [neighbor-id]]}
```

Step 7 (Optional) To show current OSPF configuration settings, enter the **show ospf** command.

The following is sample output from the **show ospf** command:

```
hostname(config)# show ospf

Routing Process "ospf 2" with ID 10.1.1.89.2 and Domain ID 0.0.0.2
Supports only single TOS(TOS0) routes
Supports opaque LSA
SPF schedule delay 5 secs, Hold time between two SPFs 10 secs
Minimum LSA interval 5 secs. Minimum LSA arrival 1 secs
Number of external LSA 5. Checksum Sum 0x 26da6
Number of opaque AS LSA 0. Checksum Sum 0x 0
Number of DCbitless external and opaque AS LSA 0
Number of DoNotAge external and opaque AS LSA 0
Number of areas in this router is 1. 1 normal 0 stub 0 nssa
External flood list length 0
  Area BACKBONE(0)
    Number of interfaces in this area is 1
    Area has no authentication
    SPF algorithm executed 2 times
    Area ranges are
    Number of LSA 5. Checksum Sum 0x 209a3
    Number of opaque link LSA 0. Checksum Sum 0x 0
    Number of DCbitless LSA 0
    Number of indication LSA 0
    Number of DoNotAge LSA 0
    Flood list length 0
```

Monitoring OSPF

You can display specific statistics such as the contents of IP routing tables, caches, and databases. You can also use the information provided to determine resource utilization and solve network problems. You can also display information about node reachability and discover the routing path that your device packets are taking through the network.

To monitor or display various OSPF routing statistics, enter one of the following commands:

Command	Purpose
<code>show ospf [process-id [area-id]]</code>	Displays general information about OSPF routing processes.
<code>show ospf border-routers</code>	Displays the internal OSPF routing table entries to the ABR and ASBR.
<code>show ospf [process-id [area-id]] database</code>	Displays lists of information related to the OSPF database for a specific router.
<code>show ospf flood-list if-name</code>	<p>Displays a list of LSAs waiting to be flooded over an interface (to observe OSPF packet pacing).</p> <p>OSPF update packets are automatically paced so they are not sent less than 33 milliseconds apart. Without pacing, some update packets could get lost in situations where the link is slow, a neighbor could not receive the updates quickly enough, or the router could run out of buffer space. For example, without pacing, packets might be dropped if either of the following topologies exist:</p> <ul style="list-style-type: none"> • A fast router is connected to a slower router over a point-to-point link. • During flooding, several neighbors send updates to a single router at the same time. <p>Pacing is also used between resends to increase efficiency and minimize lost retransmissions. You also can display the LSAs waiting to be sent out of an interface. Pacing enables OSPF update and retransmission packets to be sent more efficiently.</p> <p>There are no configuration tasks for this feature; it occurs automatically.</p>
<code>show ospf interface [if_name]</code>	Displays OSPF-related interface information.
<code>show ospf neighbor [interface-name] [neighbor-id] [detail]</code>	Displays OSPF neighbor information on a per-interface basis.
<code>show ospf request-list neighbor if_name</code>	Displays a list of all LSAs requested by a router.
<code>show ospf retransmission-list neighbor if_name</code>	Displays a list of all LSAs waiting to be resent.

Command	Purpose
<code>show ospf [process-id] summary-address</code>	Displays a list of all summary address redistribution information configured under an OSPF process.
<code>show ospf [process-id] virtual-links</code>	Displays OSPF-related virtual links information.

Feature History for OSPF

Table 24-1 lists each feature change and the platform release in which it was implemented.

Table 24-1 Feature History for Static and Default Routes

Feature Name	Platform Releases	Feature Information
OSPF support	7.0(1)	Support was added for route data, authentication, and redistribution and monitoring of routing information using the Open Shortest Path First (OSPF) routing protocol. We introduced the route ospf command.



CHAPTER 25

Configuring RIP

This chapter describes how to configure the ASA to route data, perform authentication, and redistribute routing information using the Routing Information Protocol (RIP).

This chapter includes the following sections:

- [Information About RIP, page 25-1](#)
- [Licensing Requirements for RIP, page 25-3](#)
- [Guidelines and Limitations, page 25-3](#)
- [Configuring RIP, page 25-4](#)
- [Customizing RIP, page 25-4](#)
- [Monitoring RIP, page 25-11](#)
- [Configuration Example for RIP, page 25-11](#)
- [Feature History for RIP, page 25-11](#)

Information About RIP

This section includes the following topics:

- [Routing Update Process, page 25-2](#)
- [RIP Routing Metric, page 25-2](#)
- [RIP Stability Features, page 25-2](#)
- [RIP Timers, page 25-2](#)

The Routing Information Protocol, or RIP, as it is more commonly called, is one of the most enduring of all routing protocols. RIP has four basic components: routing update process, RIP routing metrics, routing stability, and routing timers. Devices that support RIP send routing-update messages at regular intervals and when the network topology changes. These RIP packets include information about the networks that the devices can reach, as well as the number of routers or gateways that a packet must travel through to reach the destination address. RIP generates more traffic than OSPF, but is easier to configure.

RIP is a distance-vector routing protocol that uses hop count as the metric for path selection. When RIP is enabled on an interface, the interface exchanges RIP broadcasts with neighboring devices to dynamically learn about and advertise routes.

The ASA supports both RIP Version 1 and RIP Version 2. RIP Version 1 does not send the subnet mask with the routing update. RIP Version 2 sends the subnet mask with the routing update and supports variable-length subnet masks. Additionally, RIP Version 2 supports neighbor authentication when routing updates are exchanged. This authentication ensures that the ASA receives reliable routing information from a trusted source.

RIP has advantages over static routes because the initial configuration is simple, and you do not need to update the configuration when the topology changes. The disadvantage to RIP is that there is more network and processing overhead than in static routing.

Routing Update Process

RIP sends routing-update messages at regular intervals and when the network topology changes. When a router receives a routing update that includes changes to an entry, it updates its routing table to reflect the new route. The metric value for the path is increased by 1, and the sender is indicated as the next hop. RIP routers maintain only the best route (the route with the lowest metric value) to a destination. After updating its routing table, the router immediately begins transmitting routing updates to inform other network routers of the change. These updates are sent independently of the regularly scheduled updates that RIP routers send.

RIP Routing Metric

RIP uses a single routing metric (hop count) to measure the distance between the source and a destination network. Each hop in a path from source to destination is assigned a hop count value, which is typically 1. When a router receives a routing update that contains a new or changed destination network entry, the router adds 1 to the metric value indicated in the update and enters the network in the routing table. The IP address of the sender is used as the next hop.

RIP Stability Features

RIP prevents routing loops from continuing indefinitely by implementing a limit on the number of hops allowed in a path from the source to a destination. The maximum number of hops in a path is 15. If a router receives a routing update that contains a new or changed entry, and if increasing the metric value by 1 causes the metric to be infinity (that is, 16), the network destination is considered unreachable. The downside of this stability feature is that it limits the maximum diameter of a RIP network to less than 16 hops.

RIP includes a number of other stability features that are common to many routing protocols. These features are designed to provide stability despite potentially rapid changes in network topology. For example, RIP implements the split horizon and hold-down mechanisms to prevent incorrect routing information from being propagated.

RIP Timers

RIP uses numerous timers to regulate its performance. These include a routing-update timer, a route-timeout timer, and a route-flush timer. The routing-update timer clocks the interval between periodic routing updates. Generally, it is set to 30 seconds, with a small random amount of time added whenever the timer is reset. This is done to help prevent congestion, which could result from all routers

simultaneously attempting to update their neighbors. Each routing table entry has a route-timeout timer associated with it. When the route-timeout timer expires, the route is marked invalid but is retained in the table until the route-flush timer expires.

Licensing Requirements for RIP

The following table shows the licensing requirements for this feature:

Model	License Requirement
All models	Base License.

Guidelines and Limitations

This section includes the guidelines and limitations for this feature.

Context Mode Guidelines

Supported in single context mode only.

Firewall Mode Guidelines

Supported in routed and transparent firewall mode.

IPv6 Guidelines

Does not support IPv6.

Additional Guidelines

The following information applies to RIP Version 2 only:

- If using neighbor authentication, the authentication key and key ID must be the same on all neighbor devices that provide RIP Version 2 updates to the interface.
- With RIP Version 2, the ASA transmits and receives default route updates using the multicast address 224.0.0.9. In passive mode, it receives route updates at that address.
- When RIP Version 2 is configured on an interface, the multicast address 224.0.0.9 is registered on that interface. When a RIP Version 2 configuration is removed from an interface, that multicast address is unregistered.

Limitations

- The ASA cannot pass RIP updates between interfaces.
- RIP Version 1 does not support variable-length subnet masks.
- RIP has a maximum hop count of 15. A route with a hop count greater than 15 is considered unreachable.
- RIP convergence is relatively slow compared to other routing protocols.
- You can only enable a single RIP process on the ASA.

Configuring RIP

This section describes how to enable and restart the RIP process on the ASA.

After you have enabled RIP, see the [“Customizing RIP” section on page 25-4](#) to learn how to customize the RIP process on the ASA.



Note

If you want to redistribute a route by defining which of the routes from the specified routing protocol are allowed to be redistributed into the target routing process, you must first generate a default route. For information, see the [“Configuring a Default Static Route” section on page 22-4](#) and then define a route map. For information, see the [“Defining a Route Map” section on page 23-4](#).

Enabling RIP

You can only enable one RIP routing process on the ASA. After you enable the RIP routing process, you must define the interfaces that will participate in that routing process using the **network** command. By default, the ASA sends RIP Version 1 updates and accepts RIP Version 1 and Version 2 updates.

To enable the RIP routing process, enter the following command:

Command	Purpose
<code>router rip</code>	Starts the RIP routing process and places you in router configuration mode.
Example: <code>hostname(config)# router rip</code>	Use the no router rip command to remove the entire RIP configuration that you have enabled. After the configuration is cleared, you must reconfigure RIP using the router rip command.

Customizing RIP

This section describes how to configure RIP and includes the following topics:

- [Configuring the RIP Version, page 25-5](#)
- [Configuring Interfaces for RIP, page 25-6](#)
- [Configuring the RIP Send and Receive Version on an Interface, page 25-6](#)
- [Configuring Route Summarization, page 25-7](#)
- [Filtering Networks in RIP, page 25-8](#)
- [Redistributing Routes into the RIP Routing Process, page 25-8](#)
- [Enabling RIP Authentication, page 25-9](#)
- [Restarting the RIP Process, page 25-10](#)

Configuring the RIP Version

To specify the version of RIP used by the ASA, perform the following steps:

Detailed Steps

	Command	Purpose
Step 1	router rip Example: hostname(config)# router rip	Starts the RIP routing process and places you in router configuration mode.
Step 2	network network_address Example: hostname(config)# router rip hostname(config-router)# network 10.0.0.0	Specifies the interfaces that will participate in the RIP routing process. If an interface belongs to a network defined by this command, the interface will participate in the RIP routing process. If an interface does not belong to a network defined by this command, the interface will not send or receive RIP updates.
Step 3	Enter one of the following numbers to customize an interface to participate in RIP routing: version [1 2] Example: hostname(config-router)# version [1]	Specifies the version of RIP used by the ASA. You can override this setting on a per-interface basis. In this example, Version 1 is entered.

Configuring Interfaces for RIP

If you have an interface that you do not want to have participate in RIP routing, but that is attached to a network that you want advertised, you can configure the network (using the **network** command) that includes the network to which the interface is attached, and configure the passive interfaces (using the **passive-interface** command) to prevent that interface from using RIP. Additionally, you can specify the version of RIP that is used by the ASA for updates.

To configure interfaces for RIP, perform the following steps:

Detailed Steps

	Command	Purpose
Step 1	router rip Example: hostname(config)# router rip	Starts the RIP routing process and places you in router configuration mode.
Step 2	network network_address Example: hostname(config)# router rip hostname(config-router)# network 10.0.0.0	Specifies the interfaces that will participate in the RIP routing process. If an interface belongs to a network defined by this command, the interface will participate in the RIP routing process. If an interface does not belong to a network defined by this command, it will not send or receive RIP updates.
Step 3	passive-interface [default if_name] Example: hostname(config-router)# passive-interface [default]	Specifies an interface to operate in passive mode. Using the default keyword causes all interfaces to operate in passive mode. Specifying an interface name sets only that interface to passive mode. In passive mode, RIP routing updates are accepted by, but not sent out of, the specified interface. You can enter this command for each interface that you want to set to passive mode.

Configuring the RIP Send and Receive Version on an Interface

You can override the globally-set version of RIP that the ASA uses to send and receive RIP updates on a per-interface basis.

To configure the RIP version for sending and receiving updates, perform the following steps:

Detailed Steps

	Command	Purpose
Step 1	interface phy_if Example: hostname(config)# interface phy_if	Enters interface configuration mode for the interface that you are configuring.
Step 2	Do one of the following to send or receive RIP updates on a per-interface basis.	

Command	Purpose
rip send version {[1] [2]} Example: hostname(config-if)# rip send version 1	Specifies the version of RIP to use when sending RIP updates out of the interface. In this example, Version 1 is selected.
rip receive version {[1] [2]} Example: hostname(config-if)# rip receive version 2	Specifies the version of RIP advertisements permitted to be received by an interface. In this example, Version 2 is selected. RIP updates received on the interface that do not match the allowed version are dropped.

Configuring Route Summarization



Note

RIP Version 1 always uses automatic route summarization. You cannot disable this feature for RIP Version 1. RIP Version 2 uses automatic route summarization by default.

The RIP routing process summarizes on network number boundaries, which can cause routing problems if you have noncontiguous networks.

For example, if you have a router with the networks 192.168.1.0, 192.168.2.0, and 192.168.3.0 connected to it, and those networks all participate in RIP, the RIP routing process creates the summary address 192.168.0.0 for those routes. If an additional router is added to the network with the networks 192.168.10.0 and 192.168.11.0, and those networks participate in RIP, they will also be summarized as 192.168.0.0. To prevent the possibility of traffic being routed to the wrong location, you should disable automatic route summarization on the routers that are creating conflicting summary addresses.

Because RIP Version 1 always uses automatic route summarization, and RIP Version 2 always uses automatic route summarization by default, when configuring automatic route summarization, you only need to disable it.

To disable automatic route summarization, enter the following command:

Detailed Steps

	Command	Purpose
Step 1	router rip Example: hostname(config)# router rip	Enables the RIP routing process and places you in router configuration mode.
Step 2	no auto-summarize Example: hostname(config-router) :# no auto-summarize	Disables automatic route summarization.

Filtering Networks in RIP

To filter the networks received in updates, perform the following steps:



Note

Before you begin, you must create a standard access list that permits the networks that you want the RIP process to allow in the routing table and denies the networks that you want the RIP process to discard.

Detailed Steps

	Command	Purpose
Step 1	<code>router rip</code>	Enables the RIP routing process and places you in router configuration mode.
	Example: <code>hostname(config)# router rip</code>	
Step 2	<code>distribute-list acl in [interface if_name]</code> <code>distribute-list acl out [connected eigrp interface if_name ospf rip static]</code>	Filters the networks sent in updates. You can specify an interface to apply the filter to only those updates that are received or sent by that interface. You can enter this command for each interface to which you want to apply a filter. If you do not specify an interface name, the filter is applied to all RIP updates.
	Example: <code>hostname(config-router)# distribute-list acl2 in [interface interface1]</code> <code>hostname(config-router)# distribute-list acl3 out [connected]</code>	

Redistributing Routes into the RIP Routing Process

You can redistribute routes from the OSPF, EIGRP, static, and connected routing processes into the RIP routing process.



Note

Before you begin this procedure, you must create a route map to further define which routes from the specified routing protocol are redistributed in to the RIP routing process. See [Chapter 23, “Defining a Route Map,”](#) for more information about creating a route map.

To redistribute a route into the RIP routing process, enter one of the following commands:

Command	Purpose
<p>Choose one of the following commands to redistribute the selected route type into the RIP routing process. You must specify the RIP metric values in the redistribute command if you do not have a default-metric command in the RIP router configuration.</p> <pre>redistribute connected [metric <i>metric-value</i> transparent] [route-map <i>route-map-name</i>]</pre> <p>Example: hostname(config-router): # redistribute connected [metric <i>metric-value</i> transparent] [route-map <i>route-map-name</i>]</p>	Redistributes connected routes into the RIP routing process.
<pre>redistribute static [metric {<i>metric_value</i> transparent}] [route-map <i>map_name</i>]</pre> <p>Example: hostname(config-router):# redistribute static [metric {<i>metric_value</i> transparent}] [route-map <i>map_name</i>]</p>	Redistributes static routes into the EIGRP routing process.
<pre>redistribute ospf <i>pid</i> [match {internal external [1 2] nssa-external [1 2]}}] [metric {<i>metric_value</i> transparent}] [route-map <i>map_name</i>]</pre> <p>Example: hostname(config-router):# redistribute ospf <i>pid</i> [match {internal external [1 2] nssa-external [1 2]}}] [metric {<i>metric_value</i> transparent}] [route-map <i>map_name</i>]</p>	Redistributes routes from an OSPF routing process into the RIP routing process.
<pre>redistribute eigrp <i>as-num</i> [metric {<i>metric_value</i> transparent}] [route-map <i>map_name</i>]</pre> <p>Example: hostname(config-router):# redistribute eigrp <i>as-num</i> [metric {<i>metric_value</i> transparent}] [route-map <i>map_name</i>]</p>	Redistributes routes from an EIGRP routing process into the RIP routing process.

Enabling RIP Authentication



Note

The ASA supports RIP message authentication for RIP Version 2 messages.

RIP route authentication provides MD5 authentication of routing updates from the RIP routing protocol. The MD5 keyed digest in each RIP packet prevents the introduction of unauthorized or false routing messages from unapproved sources.

RIP route authentication is configured on a per-interface basis. All RIP neighbors on interfaces configured for RIP message authentication must be configured with the same authentication mode and key for adjacencies to be established.

**Note**

Before you can enable RIP route authentication, you must enable RIP.

To enable RIP authentication on an interface, perform the following steps:

Detailed Steps

	Command	Purpose
Step 1	<code>router rip as-num</code> Example: hostname(config)# router rip 2	Creates the RIP routing process and enters router configuration mode for this RIP process. The <i>as-num</i> argument is the autonomous system number of the RIP routing process.
Step 2	<code>interface phy_if</code> Example: hostname(config)# interface phy_if	Enters interface configuration mode for the interface on which you are configuring RIP message authentication.
Step 3	<code>rip authentication mode {text md5}</code> Example: hostname(config-if)# rip authentication mode md5	Sets the authentication mode. By default, text authentication is used. We recommend that you use MD5 authentication.
Step 4	<code>rip authentication key key key-id key-id</code> Example: hostname(config-if)# rip authentication key cisco key-id 200	Configures the authentication key used by the MD5 algorithm. The <i>key</i> argument can include up to 16 characters. The <i>key-id</i> argument is a number from 0 to 255.

Restarting the RIP Process

To remove the entire RIP configuration, enter the following command:

Command	Purpose
<code>clear rip pid {process redistribution counters [neighbor [neighbor-interface] [neighbor-id]]}</code> Example: hostname(config)# clear rip	Removes the entire RIP configuration that you have enabled. After the configuration is cleared, you must reconfigure RIP again using the router rip command.

Monitoring RIP

We recommend that you only use the **debug** commands to troubleshoot specific problems or during troubleshooting sessions with the Cisco TAC.

Debugging output is assigned high priority in the CPU process and can render the ASA unusable. It is best to use **debug** commands during periods of lower network traffic and fewer users. Debugging during these periods decreases the likelihood that increased **debug** command processing overhead will affect performance. For examples and descriptions of the command output, see the command reference.

To monitor or debug various RIP routing statistics, enter one of the following commands:

Command	Purpose
Monitoring RIP Routing	
<code>show rip database</code>	Display the contents of the RIP routing database.
<code>show running-config router rip</code>	Displays the RIP commands.
Debugging RIP	
<code>debug rip events</code>	Displays RIP processing events.
<code>debug rip database</code>	Displays RIP database events.

Configuration Example for RIP

The following example shows how to enable and configure RIP with various optional processes:

```
hostname(config)# router rip 2
hostname(config-router)# default-information originate
hostname(config-router)# version [1]
hostname(config-router)# network 225.25.25.225
hostname(config-router)# passive-interface [default]
hostname(config-router)# redistribute connected [metric bandwidth delay reliability
loading mtu] [route-map map_name]
```

Feature History for RIP

Table 25-1 lists each feature change and the platform release in which it was implemented.

Table 25-1 Feature History for RIP

Feature Name	Releases	Feature Information
RIP support	7.0(1)	Support was added for routing data, performing authentication, and redistributing and monitoring routing information using the Routing Information Protocol (RIP). We introduced the route rip command.



CHAPTER 26

Configuring Multicast Routing

This chapter describes how to configure the ASA to use the multicast routing protocol and includes the following sections:

- [Information About Multicast Routing, page 26-1](#)
- [Licensing Requirements for Multicast Routing, page 26-2](#)
- [Guidelines and Limitations, page 26-3](#)
- [Enabling Multicast Routing, page 26-3](#)
- [Customizing Multicast Routing, page 26-4](#)
- [Configuration Example for Multicast Routing, page 26-14](#)
- [Additional References, page 26-15](#)
- [Feature History for Multicast Routing, page 26-15](#)

Information About Multicast Routing

Multicast routing is a bandwidth-conserving technology that reduces traffic by simultaneously delivering a single stream of information to thousands of corporate recipients and homes. Applications that take advantage of multicast routing include videoconferencing, corporate communications, distance learning, and distribution of software, stock quotes, and news.

Multicast routing protocols deliver source traffic to multiple receivers without adding any additional burden on the source or the receivers while using the least network bandwidth of any competing technology. Multicast packets are replicated in the network by Cisco routers enabled with Protocol Independent Multicast (PIM) and other supporting multicast protocols resulting in the most efficient delivery of data to multiple receivers possible.

The ASA supports both stub multicast routing and PIM multicast routing. However, you cannot configure both concurrently on a single ASA.



Note

The UDP and non-UDP transports are both supported for multicast routing. However, the non-UDP transport has no FastPath optimization.

This section includes the following topics:

- [Stub Multicast Routing, page 26-2](#)
- [PIM Multicast Routing, page 26-2](#)

- [Multicast Group Concept, page 26-2](#)

Stub Multicast Routing

Stub multicast routing provides dynamic host registration and facilitates multicast routing. When configured for stub multicast routing, the ASA acts as an IGMP proxy agent. Instead of fully participating in multicast routing, the ASA forwards IGMP messages to an upstream multicast router, which sets up delivery of the multicast data. When configured for stub multicast routing, the ASA cannot be configured for PIM.

The ASA supports both PIM-SM and bidirectional PIM. PIM-SM is a multicast routing protocol that uses the underlying unicast routing information base or a separate multicast-capable routing information base. It builds unidirectional shared trees rooted at a single Rendezvous Point per multicast group and optionally creates shortest-path trees per multicast source.

PIM Multicast Routing

Bi-directional PIM is a variant of PIM-SM that builds bi-directional shared trees connecting multicast sources and receivers. Bi-directional trees are built using a DF election process operating on each link of the multicast topology. With the assistance of the DF, multicast data is forwarded from sources to the Rendezvous Point, and therefore along the shared tree to receivers, without requiring source-specific state. The DF election takes place during Rendezvous Point discovery and provides a default route to the Rendezvous Point.



Note

If the ASA is the PIM RP, use the untranslated outside address of the ASA as the RP address.

Multicast Group Concept

Multicast is based on the concept of a group. An arbitrary group of receivers expresses an interest in receiving a particular data stream. This group does not have any physical or geographical boundaries—the hosts can be located anywhere on the Internet. Hosts that are interested in receiving data flowing to a particular group must join the group using IGMP. Hosts must be a member of the group to receive the data stream.

Multicast Addresses

Multicast addresses specify an arbitrary group of IP hosts that have joined the group and want to receive traffic sent to this group.

Licensing Requirements for Multicast Routing

The following table shows the licensing requirements for this feature:

Model	License Requirement
All models	Base License.

Guidelines and Limitations

This section includes the guidelines and limitations for this feature.

Context Mode Guidelines

Supported in single context mode. In multiple context mode, unshared interfaces and shared interfaces are not supported.

Firewall Mode Guidelines

Supported only in routed firewall mode. Transparent firewall mode is not supported.

IPv6 Guidelines

Does not support IPv6.

Enabling Multicast Routing

Enabling multicast routing lets you enable multicast routing on the ASA. Enabling multicast routing enables IGMP and PIM on all interfaces by default. IGMP is used to learn whether members of a group are present on directly attached subnets. Hosts join multicast groups by sending IGMP report messages. PIM is used to maintain forwarding tables to forward multicast datagrams.



Note

Only the UDP transport layer is supported for multicast routing.

To enable multicast routing, enter the following command:

Command	Purpose
<code>multicast-routing</code>	Enables multicast routing.
Example: <code>hostname(config)# multicast-routing</code>	The number of entries in the multicast routing tables are limited by the amount of RAM on the ASA.

[Table 26-1](#) lists the maximum number of entries for specific multicast tables based on the amount of RAM on the ASA. Once these limits are reached, any new entries are discarded.

Table 26-1 *Entry Limits for Multicast Tables*

Table	16 MB	128 MB	128+ MB
MFIB	1000	3000	5000
IGMP Groups	1000	3000	5000
PIM Routes	3000	7000	12000

Customizing Multicast Routing

This section describes how to customize multicast routing and includes the following topics:

- [Configuring Stub Multicast Routing and Forwarding IGMP Messages, page 26-4](#)
- [Configuring a Static Multicast Route, page 26-4](#)
- [Configuring IGMP Features, page 26-5](#)
- [Configuring PIM Features, page 26-9](#)
- [Configuring a Bidirectional Neighbor Filter, page 26-13](#)
- [Configuring a Multicast Boundary, page 26-14](#)

Configuring Stub Multicast Routing and Forwarding IGMP Messages



Note

Stub multicast routing and PIM are not supported concurrently.

An ASA acting as the gateway to the stub area does not need to participate in PIM. Instead, you can configure it to act as an IGMP proxy agent and forward IGMP messages from hosts connected on one interface to an upstream multicast router on another interface. To configure the ASA as an IGMP proxy agent, forward the host join and leave messages from the stub area interface to an upstream interface.

To forward the host join and leave messages, enter the following command from the interface attached to the stub area:

Command	Purpose
<code>igmp forward interface <i>if_name</i></code>	Configures stub multicast routing and forwards IGMP messages.
Example: <pre>hostname(config-if)# igmp forward interface <i>interface1</i></pre>	

Configuring a Static Multicast Route

Configuring static multicast routes lets you separate multicast traffic from unicast traffic. For example, when a path between a source and destination does not support multicast routing, the solution is to configure two multicast devices with a GRE tunnel between them and to send the multicast packets over the tunnel.

When using PIM, the ASA expects to receive packets on the same interface where it sends unicast packets back to the source. In some cases, such as bypassing a route that does not support multicast routing, you may want unicast packets to take one path and multicast packets to take another.

Static multicast routes are not advertised or redistributed.

To configure a static multicast route or a static multicast route for a stub area, enter one of the following commands:

Command	Purpose
<pre>mroute <i>src_ip src_mask</i> {<i>input_if_name</i> <i>rpf_neighbor</i>} [<i>distance</i>]</pre> <p>Example: <pre>hostname(config)# mroute <i>src_ip src_mask</i> {<i>input_if_name</i> <i>rpf_neighbor</i>} [<i>distance</i>]</pre></p>	Configures a static multicast route.
<pre>mroute <i>src_ip src_mask input_if_name</i> [dense <i>output_if_name</i>] [<i>distance</i>]</pre> <p>Example: <pre>hostname(config)# mroute <i>src_ip src_mask</i> <i>input_if_name</i> [dense <i>output_if_name</i>] [<i>distance</i>]</pre></p>	Configures a static multicast route for a stub area. The dense <i>output_if_name</i> keyword and argument pair is only supported for stub multicast routing.

Configuring IGMP Features

IP hosts use the Internet Group Management Protocol (IGMP) to report their group memberships to directly connected multicast routers.

IGMP is used to dynamically register individual hosts in a multicast group on a particular LAN. Hosts identify group memberships by sending IGMP messages to their local multicast router. Under IGMP, routers listen to IGMP messages and periodically send out queries to discover which groups are active or inactive on a particular subnet.

IGMP uses group addresses (Class D IP address) as group identifiers. Host group address can be in the range of 224.0.0.0 to 239.255.255.255. The address 224.0.0.0 is never assigned to any group. The address 224.0.0.1 is assigned to all systems on a subnet. The address 224.0.0.2 is assigned to all routers on a subnet.

When you enable multicast routing on the ASA, IGMP Version 2 is automatically enabled on all interfaces.



Note

Only the **no igmp** command appears in the interface configuration when you use the **show run** command. If the **multicast-routing** command appears in the device configuration, then IGMP is automatically enabled on all interfaces.

This section describes how to configure optional IGMP setting on a per-interface basis and includes the following topics:

- [Disabling IGMP on an Interface, page 26-6](#)
- [Configuring IGMP Group Membership, page 26-6](#)
- [Configuring a Statically Joined IGMP Group, page 26-6](#)
- [Controlling Access to Multicast Groups, page 26-7](#)
- [Limiting the Number of IGMP States on an Interface, page 26-7](#)
- [Modifying the Query Messages to Multicast Groups, page 26-8](#)
- [Changing the IGMP Version, page 26-9](#)

Disabling IGMP on an Interface

You can disable IGMP on specific interfaces. This information is useful if you know that there are no multicast hosts on a specific interface and you want to prevent the ASA from sending host query messages on that interface.

To disable IGMP on an interface, enter the following command:

Command	Purpose
<code>no igmp</code>	Disables IGMP on an interface. To reenable IGMP on an interface, use the igmp command.
Example: <code>hostname(config-if)# no igmp</code>	



Note

Only the **no igmp** command appears in the interface configuration.

Configuring IGMP Group Membership

You can configure the ASA to be a member of a multicast group. Configuring the ASA to join a multicast group causes upstream routers to maintain multicast routing table information for that group and keep the paths for that group active.



Note

If you want to forward multicast packets for a specific group to an interface without the ASA accepting those packets as part of the group, see the [“Configuring a Statically Joined IGMP Group”](#) section on [page 26-6](#).

To have the ASA join a multicast group, enter the following command:

Command	Purpose
<code>igmp join-group group-address</code>	Configures the ASA to be a member of a multicast group. The <i>group-address</i> argument is the IP address of the group.
Example: <code>hostname(config-if)# igmp join-group mcast-group</code>	

Configuring a Statically Joined IGMP Group

Sometimes a group member cannot report its membership in the group because of some configuration, or there may be no members of a group on the network segment. However, you still want multicast traffic for that group to be sent to that network segment. You can have multicast traffic for that group sent to the segment by configuring a statically joined IGMP group.

Enter the **igmp static-group** command. The ASA does not accept the multicast packets, but instead forwards them to the specified interface.

To configure a statically joined multicast group on an interface, enter the following command:

Command	Purpose
igmp static-group Example: hostname(config-if)# igmp static-group <i>group-address</i>	Configures the ASA statically to join a multicast group on an interface. The <i>group-address</i> argument is the IP address of the group.

Controlling Access to Multicast Groups

To control the multicast groups that hosts on the ASA interface can join, perform the following steps:

Detailed Steps

	Command	Purpose
Step 1	Do one of the following to create a standard or extended access list:	
	access-list <i>name</i> standard [permit deny] <i>ip_addr mask</i> Example: hostname(config)# access-list <i>acl1</i> standard permit <i>192.52.662.25</i>	Creates a standard access list for the multicast traffic. You can create more than one entry for a single access list. You can use extended or standard access lists. The <i>ip_addr mask</i> argument is the IP address of the multicast group being permitted or denied.
	access-list <i>name</i> extended [permit deny] <i>protocol src_ip_addr src_mask dst_ip_addr</i> <i>dst_mask</i> Example: hostname(config)# access-list <i>acl2</i> extended permit <i>protocol src_ip_addr</i> <i>src_mask dst_ip_addr dst_mask</i>	Creates an extended access list. The <i>dst_ip_addr</i> argument is the IP address of the multicast group being permitted or denied.
Step 2	igmp access-group <i>acl</i> Example: hostname(config-if)# igmp access-group <i>acl</i>	Applies the access list to an interface. The <i>acl</i> argument is the name of a standard or extended IP access list.

Limiting the Number of IGMP States on an Interface

You can limit the number of IGMP states resulting from IGMP membership reports on a per-interface basis. Membership reports exceeding the configured limits are not entered in the IGMP cache, and traffic for the excess membership reports is not forwarded.

To limit the number of IGMP states on an interface, enter the following command:

Command	Purpose
igmp limit <i>number</i> Example: hostname(config-if)# igmp limit 50	Limits the number of IGMP states on an interface. Valid values range from 0 to 500, with 500 being the default value. Setting this value to 0 prevents learned groups from being added, but manually defined memberships (using the igmp join-group and igmp static-group commands) are still permitted. The no form of this command restores the default value.

Modifying the Query Messages to Multicast Groups



Note The **igmp query-timeout** and **igmp query-interval** commands require IGMP Version 2.

The ASA sends query messages to discover which multicast groups have members on the networks attached to the interfaces. Members respond with IGMP report messages indicating that they want to receive multicast packets for specific groups. Query messages are addressed to the all-systems multicast group, which has an address of 224.0.0.1, with a time-to-live value of 1.

These messages are sent periodically to refresh the membership information stored on the ASA. If the ASA discovers that there are no local members of a multicast group still attached to an interface, it stops forwarding multicast packet for that group to the attached network, and it sends a prune message back to the source of the packets.

By default, the PIM designated router on the subnet is responsible for sending the query messages. By default, they are sent once every 125 seconds.

When changing the query response time, by default, the maximum query response time advertised in IGMP queries is 10 seconds. If the ASA does not receive a response to a host query within this amount of time, it deletes the group.

To change the query interval, query response time, and query timeout value, perform the following steps:

Detailed Steps

Command	Purpose
Step 1 igmp query-interval <i>seconds</i> Example: hostname(config-if)# igmp query-interval 30	Sets the query interval time in seconds. Valid values range from 0 to 500; 125 is the default value. If the ASA does not hear a query message on an interface for the specified timeout value (by default, 255 seconds), then the ASA becomes the designated router and starts sending the query messages.

	Command	Purpose
Step 2	<code>igmp query-timeout seconds</code> Example: <code>hostname(config-if)# igmp query-timeout 30</code>	Changes the timeout value of the query. Valid values range from 0 to 500; 225 is the default value.
Step 3	<code>igmp query-max-response-time seconds</code> Example: <code>hostname(config-if)# igmp query-max-response-time 30</code>	Changes the maximum query response time.

Changing the IGMP Version

By default, the ASA runs IGMP Version 2, which enables several additional features such as the `igmp query-timeout` and `igmp query-interval` commands.

All multicast routers on a subnet must support the same version of IGMP. The ASA does not automatically detect Version 1 routers and switch to Version 1. However, a mix of IGMP Version 1 and 2 hosts on the subnet works; the ASA running IGMP Version 2 works correctly when IGMP Version 1 hosts are present.

To control which version of IGMP is running on an interface, enter the following command:

Command	Purpose
<code>igmp version {1 2}</code> Example: <code>hostname(config-if)# igmp version 2</code>	Controls the version of IGMP that you want to run on the interface.

Configuring PIM Features

Routers use PIM to maintain forwarding tables for forwarding multicast diagrams. When you enable multicast routing on the ASA, PIM and IGMP are automatically enabled on all interfaces.



Note

PIM is not supported with PAT. The PIM protocol does not use ports, and PAT only works with protocols that use ports.

This section describes how to configure optional PIM settings and includes the following topics:

- [Enabling and Disabling PIM on an Interface, page 26-10](#)
- [Configuring a Static Rendezvous Point Address, page 26-10](#)
- [Configuring the Designated Router Priority, page 26-11](#)
- [Configuring and Filtering PIM Register Messages, page 26-11](#)
- [Configuring PIM Message Intervals, page 26-12](#)
- [Filtering PIM Neighbors, page 26-12](#)

Enabling and Disabling PIM on an Interface

You can enable or disable PIM on specific interfaces. To enable or disable PIM on an interface, perform the following steps:

Detailed Steps

	Command	Purpose
Step 1	<code>pim</code>	Enables or reenables PIM on a specific interface.
	Example: <code>hostname(config-if)# pim</code>	
Step 2	<code>no pim</code>	Disables PIM on a specific interface.
	Example: <code>hostname(config-if)# no pim</code>	



Note Only the `no pim` command appears in the interface configuration.

Configuring a Static Rendezvous Point Address

All routers within a common PIM sparse mode or bidir domain require knowledge of the PIM RP address. The address is statically configured using the `pim rp-address` command.



Note The ASA does not support Auto-RP or PIM BSR. You must use the `pim rp-address` command to specify the RP address.

You can configure the ASA to serve as RP to more than one group. The group range specified in the access list determines the PIM RP group mapping. If an access list is not specified, then the RP for the group is applied to the entire multicast group range (224.0.0.0/4).

To configure the address of the PIM PR, enter the following command:

Command	Purpose
<code>pim rp-address ip_address [acl] [bidir]</code>	Enables or reenables PIM on a specific interface.
Example: <code>hostname(config)# pim rp-address 10.86.75.23 [acl1] [bidir]</code>	The <code>ip_address</code> argument is the unicast IP address of the router assigned to be a PIM RP. The <code>acl</code> argument is the name or number of a standard access list that defines with which multicast groups the RP should be used. Do not use a host ACL with this command. Excluding the <code>bidir</code> keyword causes the groups to operate in PIM sparse mode.

**Note**

The ASA always advertises the bidirectional capability in the PIM hello messages, regardless of the actual bidirectional configuration.

Configuring the Designated Router Priority

The DR is responsible for sending PIM register, join, and prune messages to the RP. When there is more than one multicast router on a network segment, selecting the DR is based on the DR priority. If multiple devices have the same DR priority, then the device with the highest IP address becomes the DR.

By default, the ASA has a DR priority of 1. To change this value, enter the following command:

Command	Purpose
<code>pim dr-priority num</code>	Changes the designated router priority. The <i>num</i> argument can be any number ranging from 1 to 4294967294.
Example: <code>hostname(config-if)# pim dr-priority 500</code>	

Configuring and Filtering PIM Register Messages

When the ASA is acting as an RP, you can restrict specific multicast sources from registering with it to prevent unauthorized sources from registering with the RP. The Request Filter pane lets you define the multicast sources from which the ASA will accept PIM register messages.

To filter PIM register messages, enter the following command:

Command	Purpose
<code>pim accept-register {list acl route-map map-name}</code>	Configures the ASA to filter PIM register messages. In the example, the ASA filters PIM register messages <i>acl1</i> and route map <i>map2</i> .
Example: <code>hostname(config)# pim accept-register {list acl1 route-map map2}</code>	

Configuring PIM Message Intervals

Router query messages are used to select the PIM DR. The PIM DR is responsible for sending router query messages. By default, router query messages are sent every 30 seconds. Additionally, every 60 seconds, the ASA sends PIM join or prune messages.

To change these intervals, perform the following steps:

Detailed Steps

	Command	Purpose
Step 1	<pre>pim hello-interval <i>seconds</i></pre> <p>Example: hostname(config-if)# pim hello-interval 60</p>	<p>Sends router query messages.</p> <p>Valid values for the <i>seconds</i> argument range from 1 to 3600 seconds.</p>
Step 2	<pre>pim join-prune-interval <i>seconds</i></pre> <p>Example: hostname(config-if)# pim join-prune-interval 60</p>	<p>Changes the amount of time (in seconds) that the ASA sends PIM join or prune messages.</p> <p>Valid values for the <i>seconds</i> argument range from 10 to 600 seconds.</p>

Filtering PIM Neighbors

You can define the routers that can become PIM neighbors. By filtering the routers that can become PIM neighbors, you can do the following:

- Prevent unauthorized routers from becoming PIM neighbors.
- Prevent attached stub routers from participating in PIM.

To define neighbors that can become a PIM neighbor, perform the following steps:

Detailed Steps

	Command	Purpose
Step 1	<pre>access-list <i>pim_nbr deny router-IP_addr PIM neighbor</i></pre> <p>Example: hostname(config)# access-list pim_nbr deny 10.1.1.1 255.255.255.255</p>	<p>Uses a standard access list to define the routers that you want to have participate in PIM.</p> <p>In the example, the following access list, when used with the pim neighbor-filter command, prevents the 10.1.1.1 router from becoming a PIM neighbor.</p>
Step 2	<pre>pim neighbor-filter <i>pim_nbr</i></pre> <p>Example: hostname(config)# interface GigabitEthernet0/3 hostname(config-if)# pim neighbor-filter pim_nbr</p>	<p>Filters neighbor routers.</p> <p>In the example, the 10.1.1.1 router is prevented from becoming a PIM neighbor on interface GigabitEthernet0/3.</p>

Configuring a Bidirectional Neighbor Filter

The Bidirectional Neighbor Filter pane shows the PIM bidirectional neighbor filters, if any, that are configured on the ASA. A PIM bidirectional neighbor filter is an ACL that defines the neighbor devices that can participate in the DF election. If a PIM bidirectional neighbor filter is not configured for an interface, then there are no restrictions. If a PIM bidirectional neighbor filter is configured, only those neighbors permitted by the ACL can participate in the DF election process.

When a PIM bidirectional neighbor filter configuration is applied to the ASA, an ACL appears in the running configuration with the name *interface-name_multicast*, in which the *interface-name* is the name of the interface to which the multicast boundary filter is applied. If an ACL with that name already exists, a number is appended to the name (for example, *inside_multicast_1*). This ACL defines which devices can become PIM neighbors of the ASA.

Bidirectional PIM allows multicast routers to keep reduced state information. All of the multicast routers in a segment must be bidirectionally enabled for *bidir* to elect a DF.

The PIM bidirectional neighbor filters enable the transition from a sparse-mode-only network to a *bidir* network by letting you specify the routers that should participate in the DF election, while still allowing all routers to participate in the sparse-mode domain. The *bidir*-enabled routers can elect a DF from among themselves, even when there are non-*bidir* routers on the segment. Multicast boundaries on the non-*bidir* routers prevent PIM messages and data from the *bidir* groups from leaking in or out of the *bidir* subset cloud.

When a PIM bidirectional neighbor filter is enabled, the routers that are permitted by the ACL are considered to be bidirectionally capable. Therefore, the following is true:

- If a permitted neighbor does not support *bidir*, then the DF election does not occur.
- If a denied neighbor supports *bidir*, then the DF election does not occur.
- If a denied neighbor does not support *bidir*, the DF election can occur.

To define the neighbors that can become a PIM bidirectional neighbor filter, perform the following steps:

Detailed Steps

	Command	Purpose
Step 1	<pre>access-list pim_nbr deny router-IP_addr PIM neighbor</pre> <p>Example: <pre>hostname(config)# access-list pim_nbr deny 10.1.1.1 255.255.255.255</pre></p>	<p>Uses a standard access list to define the routers that you want to have participate in PIM.</p> <p>In the example, the following access list, when used with the pim neighbor-filter command, prevents the 10.1.1.1 router from becoming a PIM neighbor.</p>
Step 2	<pre>pim bidirectional-neighbor-filter pim_nbr</pre> <p>Example: <pre>hostname(config)# interface GigabitEthernet0/3 hostname(config-if)# pim bidirectional neighbor-filter pim_nbr</pre></p>	<p>Filters neighbor routers.</p> <p>In the example, the 10.1.1.1 router is prevented from becoming a PIM bidirectional neighbor on interface GigabitEthernet0/3.</p>

Configuring a Multicast Boundary

Address scoping defines domain boundaries so that domains with RPs that have the same IP address do not leak into each other. Scoping is performed on the subnet boundaries within large domains and on the boundaries between the domain and the Internet.

You can set up an administratively scoped boundary on an interface for multicast group addresses by entering the **multicast boundary** command. IANA has designated the multicast address range from 239.0.0.0 to 239.255.255.255 as the administratively scoped addresses. This range of addresses can be reused in domains administered by different organizations. The addresses would be considered local, not globally unique.

A standard ACL defines the range of affected addresses. When a boundary is set up, no multicast data packets are allowed to flow across the boundary from either direction. The boundary allows the same multicast group address to be reused in different administrative domains.

You can configure, examine, and filter Auto-RP discovery and announcement messages at the administratively scoped boundary by entering the the **filter-autorp** keyword. Any Auto-RP group range announcements from the Auto-RP packets that are denied by the boundary ACL are removed. An Auto-RP group range announcement is permitted and passed by the boundary only if all addresses in the Auto-RP group range are permitted by the boundary ACL. If any address is not permitted, the entire group range is filtered and removed from the Auto-RP message before the Auto-RP message is forwarded.

To configure a multicast boundary, enter the following command:

Command	Purpose
<code>multicast boundary acl [filter-autorp]</code>	Configures a multicast boundary.
Example: <pre>hostname(config-if)# multicast boundary acl1 [filter-autorp]</pre>	

Configuration Example for Multicast Routing

The following example shows how to enable and configure multicast routing with various optional processes:

Step 1 Enable multicast routing:

```
hostname(config)# multicast-routing
```

Step 2 Configure a static multicast route:

```
hostname(config)# mroute src_ip src_mask {input_if_name | rpf_neighbor} [distance]
hostname(config)# exit
```

Step 3 Configure the ASA to be a member of a multicast group:

```
hostname(config)# interface
hostname(config-if)# igmp join-group group-address
```

Additional References

For additional information related to routing, see the following sections:

- [Related Documents, page 26-15](#)
- [RFCs, page 26-15](#)

Related Documents

Related Topic	Document Title
Technical details about the IGMP and multicast routing standards used for implementing the SMR feature	IETF draft-ietf-idmr-igmp-proxy-01.txt

RFCs

RFC	Title
RFC 2113	IP Router Alert Option
RFC 2236	IGMPv2
RFC 2362	PIM-SM
RFC 2588	IP Multicast and Firewalls

Feature History for Multicast Routing

Table 26-2 lists each feature change and the platform release in which it was implemented.

Table 26-2 Feature History for Multicast Routing

Feature Name	Platform Releases	Feature Information
Multicast routing support	7.0(1)	Support was added for multicast routing data, authentication, and redistribution and monitoring of routing information using the multicast routing protocol. We introduced the multicast-routing command.



CHAPTER 27

Configuring EIGRP

This chapter describes how to configure the ASA to route data, perform authentication, and redistribute routing information using the Enhanced Interior Gateway Routing Protocol (EIGRP).

This chapter includes the following sections:

- [Information About EIGRP, page 27-1](#)
- [Licensing Requirements for EIGRP, page 27-2](#)
- [Guidelines and Limitations, page 27-2](#)
- [Configuring EIGRP, page 27-3](#)
- [Customizing EIGRP, page 27-4](#)
- [Monitoring EIGRP, page 27-17](#)
- [Configuration Example for EIGRP, page 27-18](#)
- [Feature History for EIGRP, page 27-19](#)

Information About EIGRP

EIGRP is an enhanced version of IGRP developed by Cisco. Unlike IGRP and RIP, EIGRP does not send out periodic route updates. EIGRP updates are sent out only when the network topology changes. Key capabilities that distinguish EIGRP from other routing protocols include fast convergence, support for variable-length subnet mask, support for partial updates, and support for multiple network layer protocols.

A router running EIGRP stores all the neighbor routing tables so that it can quickly adapt to alternate routes. If no appropriate route exists, EIGRP queries its neighbors to discover an alternate route. These queries propagate until an alternate route is found. Its support for variable-length subnet masks permits routes to be automatically summarized on a network number boundary. In addition, EIGRP can be configured to summarize on any bit boundary at any interface. EIGRP does not make periodic updates. Instead, it sends partial updates only when the metric for a route changes. Propagation of partial updates is automatically bounded so that only those routers that need the information are updated. As a result of these two capabilities, EIGRP consumes significantly less bandwidth than IGRP.

Neighbor discovery is the process that the ASA uses to dynamically learn of other routers on directly attached networks. EIGRP routers send out multicast hello packets to announce their presence on the network. When the ASA receives a hello packet from a new neighbor, it sends its topology table to the neighbor with an initialization bit set. When the neighbor receives the topology update with the initialization bit set, the neighbor sends its topology table back to the ASA.

The hello packets are sent out as multicast messages. No response is expected to a hello message. The exception to this is for statically defined neighbors. If you use the **neighbor** command, or configure the Hello Interval in ASDM, to configure a neighbor, the hello messages sent to that neighbor are sent as unicast messages. Routing updates and acknowledgements are sent out as unicast messages.

Once this neighbor relationship is established, routing updates are not exchanged unless there is a change in the network topology. The neighbor relationship is maintained through the hello packets. Each hello packet received from a neighbor includes a hold time. This is the time in which the ASA can expect to receive a hello packet from that neighbor. If the ASA does not receive a hello packet from that neighbor within the hold time advertised by that neighbor, the ASA considers that neighbor to be unavailable.

The EIGRP protocol uses four key algorithm technologies, four key technologies, including neighbor discovery/recovery, Reliable Transport Protocol (RTP), and DUAL, which is important for route computations. DUAL saves all routes to a destination in the topology table, not just the least-cost route. The least-cost route is inserted into the routing table. The other routes remain in the topology table. If the main route fails, another route is chosen from the feasible successors. A successor is a neighboring router used for packet forwarding that has a least-cost path to a destination. The feasibility calculation guarantees that the path is not part of a routing loop.

If a feasible successor is not found in the topology table, a route recomputation must occur. During route recomputation, DUAL queries the EIGRP neighbors for a route, who in turn query their neighbors. Routers that do not have a feasible successor for the route return an unreachable message.

During route recomputation, DUAL marks the route as active. By default, the ASA waits for three minutes to receive a response from its neighbors. If the ASA does not receive a response from a neighbor, the route is marked as stuck-in-active. All routes in the topology table that point to the unresponsive neighbor as a feasibility successor are removed.



Note

EIGRP neighbor relationships are not supported through the IPsec tunnel without a GRE tunnel.

Licensing Requirements for EIGRP

The following table shows the licensing requirements for this feature:

Model	License Requirement
All models	Base License.

Guidelines and Limitations

This section includes the guidelines and limitations for this feature.

Context Mode Guidelines

Supported in single context mode.

Firewall Mode Guidelines

Supported only in routed firewall mode. Transparent firewall mode is not supported.

IPv6 Guidelines

Does not support IPv6.

Configuring EIGRP

This section describes how to enable the EIGRP process on your system. After you have enabled EIGRP, see the following sections to learn how to customize the EIGRP process on your system.

- [Enabling EIGRP, page 27-3](#)
- [Enabling EIGRP Stub Routing, page 27-3](#)

Enabling EIGRP

You can only enable one EIGRP routing process on the ASA.

To enable EIGRP, perform the following steps:

Detailed Steps

	Command	Purpose
Step 1	router eigrp <i>as-num</i>	Creates an EIGRP routing process and enters router configuration mode for this EIGRP process.
	Example: hostname(config)# router eigrp 2	The <i>as-num</i> argument is the autonomous system number of the EIGRP routing process.
Step 2	network <i>ip-addr</i> [<i>mask</i>]	Configures the interfaces and networks that participate in EIGRP routing. You can configure one or more network statements with this command.
	Example: hostname(config)# router eigrp 2 hostname(config-router)# network 10.0.0.0 255.0.0.0	Directly connected and static networks that fall within the defined network are advertised by the ASA. Additionally, only interfaces with an IP address that fall within the defined network participate in the EIGRP routing process. If you have an interface that you do not want to have participate in EIGRP routing, but that is attached to a network that you want advertised, see the “ Configuring Interfaces for EIGRP ” section on page 27-6 .

Enabling EIGRP Stub Routing

You can enable, and configure the ASA as an EIGRP stub router. Stub routing decreases memory and processing requirements on the ASA. As a stub router, the ASA does not need to maintain a complete EIGRP routing table because it forwards all nonlocal traffic to a distribution router. Generally, the distribution router need not send anything more than a default route to the stub router.

Only specified routes are propagated from the stub router to the distribution router. As a stub router, the ASA responds to all queries for summaries, connected routes, redistributed static routes, external routes, and internal routes with the message “inaccessible.” When the ASA is configured as a stub, it sends a special peer information packet to all neighboring routers to report its status as a stub router. Any

neighbor that receives a packet informing it of the stub status will not query the stub router for any routes, and a router that has a stub peer will not query that peer. The stub router depends on the distribution router to send the correct updates to all peers.

To enable the ASA as an EIGRP stub routing process, perform the following steps:

Detailed Steps

	Command	Purpose
Step 1	router eigrp <i>as-num</i> Example: hostname(config)# router eigrp 2	Creates an EIGRP routing process and enters router configuration mode for this EIGRP process. The <i>as-num</i> argument is the autonomous system number of the EIGRP routing process.
Step 2	network <i>ip-addr</i> [<i>mask</i>] Example: hostname(config)# router eigrp 2 hostname(config-router)# network 10.0.0.0 255.0.0.0	Configures the interfaces and networks that participate in EIGRP routing. You can configure one or more network statements with this command. Directly connected and static networks that fall within the defined network are advertised by the ASA. Additionally, only interfaces with an IP address that fall within the defined network participate in the EIGRP routing process. If you have an interface that you do not want to have participate in EIGRP routing, but that is attached to a network that you want advertised, see the section “ Configuring Passive Interfaces ” section on page 27-7.
Step 3	eigrp stub { receive-only [connected] [redistributed] [static] [summary]} Example: hostname(config)# router eigrp 2 hostname(config-router)# network 10.0.0.0 255.0.0.0 hostname(config-router)# eigrp stub { receive-only [connected] [redistributed] [static] [summary]}	Configures the stub routing process. You must specify which networks are advertised by the stub routing process to the distribution router. Static and connected networks are not automatically redistributed into the stub routing process.



Note

A stub routing process does not maintain a full topology table. At a minimum, stub routing needs a default route to a distribution router, which makes the routing decisions.

Customizing EIGRP

This section describes how to customize the EIGRP routing and includes the following topics:

- [Defining a Network for an EIGRP Routing Process, page 27-5](#)
- [Configuring Interfaces for EIGRP, page 27-6](#)
- [Configuring the Summary Aggregate Addresses on Interfaces, page 27-8](#)
- [Changing the Interface Delay Value, page 27-9](#)

- [Enabling EIGRP Authentication on an Interface, page 27-9](#)
- [Defining an EIGRP Neighbor, page 27-10](#)
- [Redistributing Routes Into EIGRP, page 27-11](#)
- [Filtering Networks in EIGRP, page 27-12](#)
- [Customizing the EIGRP Hello Interval and Hold Time, page 27-13](#)
- [Disabling Automatic Route Summarization, page 27-14](#)
- [Configuring Default Information in EIGRP, page 27-15](#)
- [Disabling EIGRP Split Horizon, page 27-16](#)
- [Restarting the EIGRP Process, page 27-17](#)

Defining a Network for an EIGRP Routing Process

The Network table lets you specify the networks used by the EIGRP routing process. For an interface to participate in EIGRP routing, it must fall within the range of addresses defined by the network entries. For directly connected and static networks to be advertised, they must also fall within the range of the network entries.

The Network table displays the networks configured for the EIGRP routing process. Each row of the table displays the network address and associated mask configured for the specified EIGRP routing process.

To add or define a network, perform the following steps:

Detailed Steps

	Command	Purpose
Step 1	router eigrp <i>as-num</i>	Creates an EIGRP routing process and enters router configuration mode for this EIGRP process.
	Example: hostname(config)# router eigrp 2	The <i>as-num</i> argument is the autonomous system number of the EIGRP routing process.
Step 2	network <i>ip-addr</i> [<i>mask</i>]	Configures the interfaces and networks that participate in EIGRP routing. You can configure one or more network statements with this command.
	Example: hostname(config)# router eigrp 2 hostname(config-router)# network 10.0.0.0 255.0.0.0	Directly connected and static networks that fall within the defined network are advertised by the ASA. Additionally, only interfaces with an IP address that fall within the defined network participate in the EIGRP routing process. If you have an interface that you do not want to have participate in EIGRP routing, but that is attached to a network that you want advertised, see the “Configuring Passive Interfaces” section on page 27-7 .

Configuring Interfaces for EIGRP

If you have an interface that you do not want to have participate in EIGRP routing, but that is attached to a network that you want advertised, you can configure a **network** command that includes the network to which the interface is attached, and use the **passive-interface** command to prevent that interface from sending or receiving EIGRP updates.

To configure interfaces for EIGRP, perform the following steps:

Detailed Steps

	Command	Purpose
Step 1	router eigrp <i>as-num</i>	Creates an EIGRP routing process and enters router configuration mode for this EIGRP process.
	Example: hostname(config)# router eigrp 2	The <i>as-num</i> argument is the autonomous system number of the EIGRP routing process.
Step 2	hostname(config-router)# network <i>ip-addr</i> [<i>mask</i>]	Configures the interfaces and networks that participate in EIGRP routing. You can configure one or more network statements with this command.
	Example: hostname(config)# router eigrp 2 hostname(config-router)# network 10.0.0.0 255.0.0.0	Directly connected and static networks that fall within the defined network are advertised by the ASA. Additionally, only interfaces with an IP address that fall within the defined network participate in the EIGRP routing process.
		If you have an interface that you do not want to have participate in EIGRP routing, but that is attached to a network that you want advertised, see the “Defining a Network for an EIGRP Routing Process” section on page 27-5.
Step 3	(Optional) Do one of the following to customize an interface to participate in EIGRP routing:	
	no default-information {in out WORD}	Allows you to control the sending or receiving of candidate default route information.
	Example: hostname(config)# router eigrp 2 hostname(config-router)# network 10.0.0.0 255.0.0.0 hostname(config-router)# no default-information {in out WORD}	Entering the no default-information in command causes the candidate default route bit to be blocked on received routes. Entering the no default-information out command disables the setting of the default route bit in advertised routes.
		See the “Configuring Default Information in EIGRP” section on page 27-15 for more information on this particular option.
	authentication mode eigrp <i>as-num</i> md5	Enables MD5 authentication of EIGRP packets.
	Example: hostname(config)# authentication mode eigrp 2 md5	The <i>as-num</i> argument is the autonomous system number of the EIGRP routing process configured on the ASA. If EIGRP is not enabled or if you enter the wrong number, the ASA returns the following error message: % System(100) specified does not exist
		See the “Enabling EIGRP Authentication on an Interface” section on page 27-9 for more information on this particular option.

Command	Purpose
<p>delay <i>value</i></p> <p>Example: hostname(config-if)# delay 200</p>	<p>The <i>value</i> argument entered is in tens of microseconds. To set the delay for 2000 microseconds, you enter a <i>value</i> of 200.</p> <p>To view the delay value assigned to an interface, use the show interface command.</p> <p>See the “Changing the Interface Delay Value” section on page 27-9 for more information on this particular option.</p>
<p>hello-interval eigrp <i>as-num seconds</i></p> <p>Example: hostname(config)# hello-interval eigrp 2 60</p>	<p>Allows you to change the hello interval. See the “Customizing the EIGRP Hello Interval and Hold Time” section on page 27-13 for more information on this particular option.</p>
<p>hold-time eigrp <i>as-num seconds</i></p> <p>Example: hostname(config)# hold-time eigrp 2 60</p>	<p>Allows you to change the hold time. See the “Customizing the EIGRP Hello Interval and Hold Time” section on page 27-13 for more information on this particular option.</p>

Configuring Passive Interfaces

You can configure one or more interfaces as passive interfaces. In EIGRP, a passive interface does not send or receive routing updates.

To configure passive interfaces, perform the following steps:

Detailed Steps

	Command	Purpose
Step 1	<p>router eigrp <i>as-num</i></p> <p>Example: hostname(config)# router eigrp 2</p>	<p>Creates an EIGRP routing process and enters router configuration mode for this EIGRP process.</p> <p>The <i>as-num</i> argument is the autonomous system number of the EIGRP routing process.</p>

	Command	Purpose
Step 2	<pre>hostname(config-router)# network ip-addr [mask]</pre> <p>Example:</p> <pre>hostname(config)# router eigrp 2 hostname(config-router)# network 10.0.0.0 255.0.0.0</pre>	<p>Configures the interfaces and networks that participate in EIGRP routing. You can configure one or more network statements with this command.</p> <p>Directly connected and static networks that fall within the defined network are advertised by the ASA. Additionally, only interfaces with an IP address that fall within the defined network participate in the EIGRP routing process.</p> <p>If you have an interface that you do not want to have participate in EIGRP routing, but that is attached to a network that you want advertised, see the “Defining a Network for an EIGRP Routing Process” section on page 27-5.</p>
Step 3	<pre>passive-interface {default if-name}</pre> <p>Example:</p> <pre>hostname(config)# router eigrp 2 hostname(config-router)# network 10.0.0.0 255.0.0.0 hostname(config-router)# passive-interface {default}</pre>	<p>Prevents an interface from sending or receiving EIGRP routing message.</p> <p>Using the default keyword disables EIGRP routing updates on all interfaces. Specifying an interface name, as defined by the nameif command, disables EIGRP routing updates on the specified interface. You can use multiple passive-interface commands in your EIGRP router configuration.</p>

Configuring the Summary Aggregate Addresses on Interfaces

You can configure a summary addresses on a per-interface basis. You need to manually define summary addresses if you want to create summary addresses that do not occur at a network number boundary or if you want to use summary addresses on an ASA with automatic route summarization disabled. If any more specific routes are in the routing table, EIGRP will advertise the summary address out the interface with a metric equal to the minimum of all more specific routes.

To create a summary address, perform the following steps:

Detailed Steps

	Command	Purpose
Step 1	<pre>interface phy_if</pre> <p>Example:</p> <pre>hostname(config)# interface phy_if</pre>	<p>Enters interface configuration mode for the interface on which you are changing the delay value used by EIGRP.</p>
Step 2	<pre>summary-address eigrp as-num address mask [distance]</pre> <p>Example:</p> <pre>hostname(config-if)# summary-address eigrp 2 address mask [20]</pre>	<p>Creates the summary address.</p> <p>By default, EIGRP summary addresses that you define have an administrative distance of 5. You can change this value by specifying the optional <i>distance</i> argument in the summary-address command.</p>

Changing the Interface Delay Value

The interface delay value is used in EIGRP distance calculations. You can modify this value on a per-interface basis.

To change the interface delay value, perform the following steps:

Detailed Steps

	Command	Purpose
Step 1	<code>interface phy_if</code>	Enters interface configuration mode for the interface on which you are changing the delay value used by EIGRP.
	Example: hostname(config)# <code>interface phy_if</code>	
Step 2	<code>delay value</code>	The <i>value</i> argument entered is in tens of microseconds. To set the delay for 2000 microseconds, you enter a <i>value</i> of 200.
	Example: hostname(config-if)# <code>delay 200</code>	To view the delay value assigned to an interface, use the show interface command.

Enabling EIGRP Authentication on an Interface

EIGRP route authentication provides MD5 authentication of routing updates from the EIGRP routing protocol. The MD5 keyed digest in each EIGRP packet prevents the introduction of unauthorized or false routing messages from unapproved sources.

EIGRP route authentication is configured on a per-interface basis. All EIGRP neighbors on interfaces configured for EIGRP message authentication must be configured with the same authentication mode and key for adjacencies to be established.



Note

Before you can enable EIGRP route authentication, you must enable EIGRP.

To enable EIGRP authentication on an interface, perform the following steps:

Detailed Steps

Step 1	<pre>router eigrp <i>as-num</i></pre> <p>Example: hostname(config)# router eigrp 2 </p>	<p>Creates an EIGRP routing process and enters router configuration mode for this EIGRP process.</p> <p>The <i>as-num</i> argument is the autonomous system number of the EIGRP routing process.</p>
Step 2	<pre>network <i>ip-addr</i> [<i>mask</i>]</pre> <p>Example: hostname(config)# router eigrp 2 hostname(config-router)# network 10.0.0.0 255.0.0.0 </p>	<p>Configures the interfaces and networks that participate in EIGRP routing. You can configure one or more network statements with this command.</p> <p>Directly connected and static networks that fall within the defined network are advertised by the ASA. Additionally, only interfaces with an IP address that falls within the defined network participate in the EIGRP routing process.</p> <p>If you have an interface that you do not want to have participate in EIGRP routing, but that is attached to a network that you want advertised, see the “Configuring EIGRP” section on page 27-3.</p>
Step 3	<pre>interface <i>phy_if</i></pre> <p>Example: hostname(config)# interface <i>phy_if</i> </p>	<p>Enters interface configuration mode for the interface on which you are configuring EIGRP message authentication.</p>
Step 4	<pre>authentication mode eigrp <i>as-num</i> md5</pre> <p>Example: hostname(config)# authentication mode eigrp 2 md5 </p>	<p>Enables MD5 authentication of EIGRP packets.</p> <p>The <i>as-num</i> argument is the autonomous system number of the EIGRP routing process configured on the ASA. If EIGRP is not enabled or if you enter the wrong number, the ASA returns the following error message:</p> <pre>% Asystem(100) specified does not exist</pre>
Step 5	<pre>authentication key eigrp <i>as-num</i> key <i>key-id</i></pre> <p>Example: hostname(config)# authentication key eigrp 2 cisco key-id 200 </p>	<p>Configures the key used by the MD5 algorithm.</p> <p>The <i>as-num</i> argument is the autonomous system number of the EIGRP routing process configured on the ASA. If EIGRP is not enabled or if you enter the wrong number, the ASA returns the following error message:</p> <pre>% Asystem(100) specified does not exist</pre> <p>The <i>key</i> argument can include up to 16 characters.</p> <p>The <i>key-id</i> argument is a number that can range from 0 to 255.</p>

Defining an EIGRP Neighbor

EIGRP hello packets are sent as multicast packets. If an EIGRP neighbor is located across a non broadcast network, such as a tunnel, you must manually define that neighbor. When you manually define an EIGRP neighbor, hello packets are sent to that neighbor as unicast messages.

To manually define an EIGRP neighbor, perform the following steps:

Detailed Steps

	Command	Purpose
Step 1	<code>router eigrp as-num</code> Example: hostname(config)# router eigrp 2	Creates an EIGRP routing process and enters router configuration mode for this EIGRP process. The <i>as-num</i> argument is the autonomous system number of the EIGRP routing process.
Step 2	<code>neighbor ip-addr interface if_name</code> Example: hostname(config)# router eigrp 2 hostname(config-router)# neighbor 10.0.0.0 interface interface1	Defines the static neighbor. The <i>ip-addr</i> argument is the IP address of the neighbor. The <i>if_name</i> argument is the name of the interface, as specified by the nameif command, through which that neighbor is available. You can define multiple neighbors for an EIGRP routing process.

Redistributing Routes Into EIGRP

You can redistribute routes discovered by RIP and OSPF into the EIGRP routing process. You can also redistribute static and connected routes into the EIGRP routing process. You do not need to redistribute connected routes if they fall within the range of a **network** statement in the EIGRP configuration.



Note

For RIP only: Before you begin this procedure, you must create a route-map to further define which routes from the specified routing protocol are redistributed in to the RIP routing process. See [Chapter 23, “Defining Route Maps,”](#) for more information about creating a route map.

To redistribute routes into the EIGRP routing process, perform the following steps:

Detailed Steps

	Command	Purpose
Step 1	<code>router eigrp as-num</code> Example: hostname(config)# router eigrp 2	Creates an EIGRP routing process and enters router configuration mode for this EIGRP process. The <i>as-num</i> argument is the autonomous system number of the EIGRP routing process.
Step 2	<code>default-metric bandwidth delay reliability loading mtu</code> Example: hostname(config)# router eigrp 2 hostname(config-router)# default-metric bandwidth delay reliability loading mtu	(Optional) Specifies the default metrics that should be applied to routes redistributed into the EIGRP routing process. If you do not specify a default metric in the EIGRP router configuration, you must specify the metric values in each redistribute command. If you specify the EIGRP metrics in the redistribute command and have the default-metric command in the EIGRP router configuration, the metrics in the redistribute command are used.
Step 3	Do one of the following to redistribute the selected route type into the EIGRP routing process. You must specify the EIGRP metric values in the redistribute command if you do not have a default-metric command in the EIGRP router configuration.	

Command	Purpose
<p>redistribute connected [metric <i>bandwidth delay reliability loading mtu</i>] [route-map <i>map_name</i>]</p> <p>Example: <pre>hostname(config-router): redistribute connected [metric bandwidth delay reliability loading mtu] [route-map map_name]</pre></p>	Redistributes connected routes into the EIGRP routing process.
<p>redistribute static [metric <i>bandwidth delay reliability loading mtu</i>] [route-map <i>map_name</i>]</p> <p>Example: <pre>hostname(config-router): redistribute static [metric bandwidth delay reliability loading mtu] [route-map map_name]</pre></p>	Redistributes static routes into the EIGRP routing process.
<p>redistribute ospf <i>pid</i> [match {internal external [1 2] nssa-external [1 2]}}] [metric <i>bandwidth delay reliability loading mtu</i>] [route-map <i>map_name</i>]</p> <p>Example: <pre>hostname(config-router): redistribute ospf pid [match {internal external [1 2] nssa-external [1 2]}}] [metric bandwidth delay reliability loading mtu] [route-map map_name]</pre></p>	Redistributes routes from an OSPF routing process into the EIGRP routing process.
<p>redistribute rip [metric <i>bandwidth delay reliability load mtu</i>] [route-map <i>map_name</i>]</p> <p>Example: <pre>(config-router): redistribute rip [metric bandwidth delay reliability load mtu] [route-map map_name]</pre></p>	Redistributes routes from a RIP routing process into the EIGRP routing process.

Filtering Networks in EIGRP



Note

Before you begin this process, you must create a standard access list that defines the routes that you want to advertise. That is, create a standard access list that defines the routes that you want to filter from sending or receiving updates.

To filter networks in EIGRP, perform the following steps:

Detailed Steps

	Command	Purpose
Step 1	<pre>router eigrp as-num</pre> <p>Example: hostname(config)# router eigrp 2</p>	<p>Creates an EIGRP routing process and enters router configuration mode for this EIGRP process.</p> <p>The <i>as-num</i> argument is the autonomous system number of the EIGRP routing process.</p>
Step 2	<pre>hostname(config-router)# network ip-addr [mask]</pre> <p>Example: hostname(config)# router eigrp 2 hostname(config-router)# network 10.0.0.0 255.0.0.0</p>	<p>Configures the interfaces and networks that participate in EIGRP routing. You can configure one or more network statements with this command.</p> <p>Directly connected and static networks that fall within the defined network are advertised by the ASA. Additionally, only interfaces with an IP address that fall within the defined network participate in the EIGRP routing process.</p> <p>If you have an interface that you do not want to have participate in EIGRP routing, but that is attached to a network that you want advertised, see the “Configuring Interfaces for EIGRP” section on page 27-6.</p>
Step 3	<p>Do one of the following to filter networks sent or received in EIGRP routing updates. You can enter multiple distribute-list commands in your EIGRP router configuration.</p> <pre>distribute-list acl out [connected ospf rip static interface if_name]</pre> <p>Example: hostname(config)# router eigrp 2 hostname(config-router)# network 10.0.0.0 255.0.0.0 hostname(config-router): distribute-list acl out [connected]</p> <pre>distribute-list acl in [interface if_name]</pre> <p>Example: hostname(config)# router eigrp 2 hostname(config-router)# network 10.0.0.0 255.0.0.0 hostname(config-router): distribute-list acl in [interface interface1]</p>	<p>Filters networks sent in EIGRP routing updates.</p> <p>You can specify an interface to apply the filter to only those updates that are sent by that specific interface.</p> <p>Filters networks received in EIGRP routing updates.</p> <p>You can specify an interface to apply the filter to only those updates that are received by that interface.</p>

Customizing the EIGRP Hello Interval and Hold Time

The ASA periodically sends hello packets to discover neighbors and to learn when neighbors become unreachable or inoperative. By default, hello packets are sent every 5 seconds.

The hello packet advertises the ASA hold time. The hold time indicates to EIGRP neighbors the length of time the neighbor should consider the ASA reachable. If the neighbor does not receive a hello packet within the advertised hold time, then the ASA is considered unreachable. By default, the advertised hold time is 15 seconds (three times the hello interval).

Both the hello interval and the advertised hold time are configured on a per-interface basis. We recommend setting the hold time to be at minimum three times the hello interval.

To configure the hello interval and advertised hold time, perform the following steps:

Detailed Steps

	Command	Purpose
Step 1	interface <i>phy_if</i> Example: hostname(config)# interface <i>phy_if</i>	Enters interface configuration mode for the interface on which you are configuring the hello interval or advertised hold time.
Step 2	hello-interval eigrp <i>as-num seconds</i> Example: hostname(config)# hello-interval eigrp 2 60	Changes the hello interval.
Step 3	hold-time eigrp <i>as-num seconds</i> Example: hostname(config)# hold-time eigrp 2 60	Changes the hold time.

Disabling Automatic Route Summarization

Automatic route summarization is enabled by default. The EIGRP routing process summarizes on network number boundaries. This can cause routing problems if you have noncontiguous networks.

For example, if you have a router with the networks 192.168.1.0, 192.168.2.0, and 192.168.3.0 connected to it, and those networks all participate in EIGRP, the EIGRP routing process creates the summary address 192.168.0.0 for those routes. If an additional router is added to the network with the networks 192.168.10.0 and 192.168.11.0, and those networks participate in EIGRP, they will also be summarized as 192.168.0.0. To prevent the possibility of traffic being routed to the wrong location, you should disable automatic route summarization on the routers creating the conflicting summary addresses.

To disable automatic route summarization, enter the following commands:

Detailed Steps

	Command	Purpose
Step 1	<code>router eigrp <i>as-num</i></code> Example: <code>hostname(config)# router eigrp 2</code>	Creates an EIGRP routing process and enters router configuration mode for this EIGRP process. The <i>as-num</i> argument is the autonomous system number of the EIGRP routing process.
Step 2	<code>no auto-summary</code> Example: <code>hostname(config-router)# no auto-summary</code>	You cannot configure this value. Automatic summary addresses have an administrative distance of 5.

Configuring Default Information in EIGRP

You can control the sending and receiving of default route information in EIGRP updates. By default, default routes are sent and accepted. Configuring the ASA to disallow default information to be received causes the candidate default route bit to be blocked on received routes. Configuring the ASA to disallow default information to be sent disables the setting of the default route bit in advertised routes.

To configure default routing information, perform the following steps:

Detailed Steps

	Command	Purpose
Step 1	<code>router eigrp <i>as-num</i></code> Example: <code>hostname(config)# router eigrp 2</code>	Creates an EIGRP routing process and enters router configuration mode for this EIGRP process. The <i>as-num</i> argument is the autonomous system number of the EIGRP routing process.

	Command	Purpose
Step 2	<pre>hostname(config-router)# network ip-addr [mask]</pre> <p>Example:</p> <pre>hostname(config)# router eigrp 2 hostname(config-router)# network 10.0.0.0 255.0.0.0</pre>	<p>Configures the interfaces and networks that participate in EIGRP routing. You can configure one or more network statements with this command.</p> <p>Directly connected and static networks that fall within the defined network are advertised by the ASA. Additionally, only interfaces with an IP address that fall within the defined network participate in the EIGRP routing process.</p> <p>If you have an interface that you do not want to have participate in EIGRP routing, but that is attached to a network that you want advertised, see the “Configuring Interfaces for EIGRP” section on page 27-6.</p>
Step 3	<pre>no default-information {in out WORD}</pre> <p>Example:</p> <pre>hostname(config)# router eigrp 2 hostname(config-router)# network 10.0.0.0 255.0.0.0 hostname(config-router)# no default-information {in out WORD}</pre>	<p>Controls the sending or receiving of candidate default route information.</p> <p>Entering the no default-information in command causes the candidate default route bit to be blocked on received routes.</p> <p>Entering the no default-information out command disables the setting of the default route bit in advertised routes.</p>

Disabling EIGRP Split Horizon

Split horizon controls the sending of EIGRP update and query packets. When split horizon is enabled on an interface, update and query packets are not sent for destinations for which this interface is the next hop. Controlling update and query packets in this manner reduces the possibility of routing loops.

By default, split horizon is enabled on all interfaces.

Split horizon blocks route information from being advertised by a router out of any interface from which that information originated. This behavior usually optimizes communications among multiple routing devices, particularly when links are broken. However, with nonbroadcast networks, there may be situations where this behavior is not desired. For these situations, including networks in which you have EIGRP configured, you may want to disable split horizon.

If you disable split horizon on an interface, you must disable it for all routers and access servers on that interface.

To disable EIGRP split horizon, perform the following steps:

Detailed Steps

	Command	Purpose
Step 1	interface <i>phy_if</i> Example: hostname(config)# interface <i>phy_if</i>	Enters interface configuration mode for the interface on which you are changing the delay value used by EIGRP.
Step 2	no split-horizon eigrp <i>as-number</i> Example: hostname(config-if)# no split-horizon eigrp 2	Disables the split horizon.

Restarting the EIGRP Process

To restart an EIGRP process or clear redistribution or counters, enter the following command:

Command	Purpose
clear eigrp pid {1-65535 neighbors topology events} Example: hostname(config)# clear eigrp pid 10 neighbors	Restarts an EIGRP process or clears redistribution or counters.

Monitoring EIGRP

You can use the following commands to monitor the EIGRP routing process. For examples and descriptions of the command output, see the command reference. Additionally, you can disable the logging of neighbor change messages and neighbor warning messages.

To monitor or disable various EIGRP routing statistics, enter one of the following commands:

Command	Purpose
Monitoring EIGRP Routing	
show eigrp [<i>as-number</i>] events [{ <i>start end</i> } <i>type</i>]	Displays the EIGRP event log.
show eigrp [<i>as-number</i>] neighbors [detail static] [<i>if-name</i>]	Displays the EIGRP neighbor table.
show eigrp [<i>as-number</i>] interfaces [<i>if-name</i>] [detail]	Displays the interfaces participating in EIGRP routing.
show eigrp [<i>as-number</i>] topology [<i>ip-addr</i>] [<i>mask</i>] active all-links pending summary zero-successors]	Displays the EIGRP topology table.

Command (continued)	Purpose (continued)
<code>show eigrp [as-number] traffic</code>	Displays EIGRP traffic statistics.
<code>router-id</code>	Displays the router-id for this EIGRP process.
Disabling EIGRP Logging Messages	
<code>no eigrp log-neighbor-changes</code>	Disables the logging of neighbor change messages. Enter this command in router configuration mode for the EIGRP routing process.
<code>no eigrp log-neighbor-warnings</code>	Disables the logging of neighbor warning messages.

**Note**

By default, neighbor change and neighbor warning messages are logged.

Configuration Example for EIGRP

The following example shows how to enable and configure EIGRP with various optional processes:

Step 1 To enable EIGRP, enter the following commands:

```
hostname(config)# router eigrp 2
hostname(config-router)# network 10.0.0.0 255.0.0.0
```

Step 2 To configure an interface from sending or receiving EIGRP routing messages, enter the following command:

```
hostname(config-router)# passive-interface {default}
```

Step 3 To define an EIGRP neighbor, enter the following command:

```
hostname(config-router)# neighbor 10.0.0.0 interface interface1
```

Step 4 To configure the interfaces and networks that participate in EIGRP routing, enter the following command:

```
hostname(config-router)# network 10.0.0.0 255.0.0.0
```

Step 5 To change the interface delay value used in EIGRP distance calculations, enter the following commands:

```
hostname(config-router)# exit
hostname(config)# interface phy_if
hostname(config-if)# delay 200
```

Feature History for EIGRP

Table 27-1 lists each feature change and the platform release in which it was implemented.

Table 27-1 Feature History for EIGRP

Feature Name	Platform Releases	Feature Information
EIGRP support	7.0(1)	Support was added for routing data, performing authentication, and redistributing and monitoring routing information using the Enhanced Interior Gateway Routing Protocol (EIGRP). We introduced the following command: route eigrp .



CHAPTER 28

Configuring IPv6 Neighbor Discovery

This chapter describes how to enable and configure IPv6 neighbor discovery on the ASA and includes the following sections:

- [Information About IPv6 Neighbor Discovery, page 28-1](#)
- [Licensing Requirements for IPv6 Neighbor Discovery, page 28-4](#)
- [Guidelines and Limitations, page 28-4](#)
- [Default Settings for IPv6 Neighbor Discovery, page 28-6](#)
- [Configuring the Neighbor Solicitation Message Interval, page 28-7](#)
- [Configuring the Neighbor Reachable Time, page 28-7](#)
- [Configuring the Router Advertisement Transmission Interval, page 28-8](#)
- [Configuring the Router Lifetime Value, page 28-8](#)
- [Configuring DAD Settings, page 28-9](#)
- [Configuring IPv6 Addresses on an Interface, page 28-9](#)
- [Suppressing Router Advertisement Messages, page 28-10](#)
- [Configuring the IPv6 Prefix, page 28-11](#)
- [Configuring a Static IPv6 Neighbor, page 28-12](#)
- [Monitoring IPv6 Neighbor Discovery, page 28-13](#)
- [Additional References, page 28-13](#)
- [Feature History for IPv6 Neighbor Discovery, page 28-14](#)

Information About IPv6 Neighbor Discovery

The IPv6 neighbor discovery process uses ICMPv6 messages and solicited-node multicast addresses to determine the link-layer address of a neighbor on the same network (local link), verify the readability of a neighbor, and keep track of neighboring routers.

Nodes (hosts) use neighbor discovery to determine the link-layer addresses for neighbors known to reside on attached links and to quickly purge cached values that become invalid. Hosts also use neighbor discovery to find neighboring routers that are willing to forward packets on their behalf. In addition, nodes use the protocol to actively keep track of which neighbors are reachable and which are not, and to detect changed link-layer addresses. When a router or the path to a router fails, a host actively searches for functioning alternates.

This section includes the following topics:

- [Neighbor Solicitation Messages, page 28-2](#)
- [Neighbor Reachable Time, page 28-3](#)
- [Router Advertisement Messages, page 28-3](#)
- [Static IPv6 Neighbors, page 28-4](#)


Neighbor Solicitation Messages

Neighbor solicitation messages (ICMPv6 Type 135) are sent on the local link by nodes attempting to discover the link-layer addresses of other nodes on the local link. The neighbor solicitation message is sent to the solicited-node multicast address. The source address in the neighbor solicitation message is the IPv6 address of the node sending the neighbor solicitation message. The neighbor solicitation message also includes the link-layer address of the source node.

After receiving a neighbor solicitation message, the destination node replies by sending a neighbor advertisement message (ICMPv6 Type 136) on the local link. The source address in the neighbor advertisement message is the IPv6 address of the node sending the neighbor advertisement message; the destination address is the IPv6 address of the node that sent the neighbor solicitation message. The data portion of the neighbor advertisement message includes the link-layer address of the node sending the neighbor advertisement message.

After the source node receives the neighbor advertisement, the source node and destination node can communicate. [Figure 28-1](#) shows the neighbor solicitation and response process.

Figure 28-1 IPv6 Neighbor Discovery—Neighbor Solicitation Message

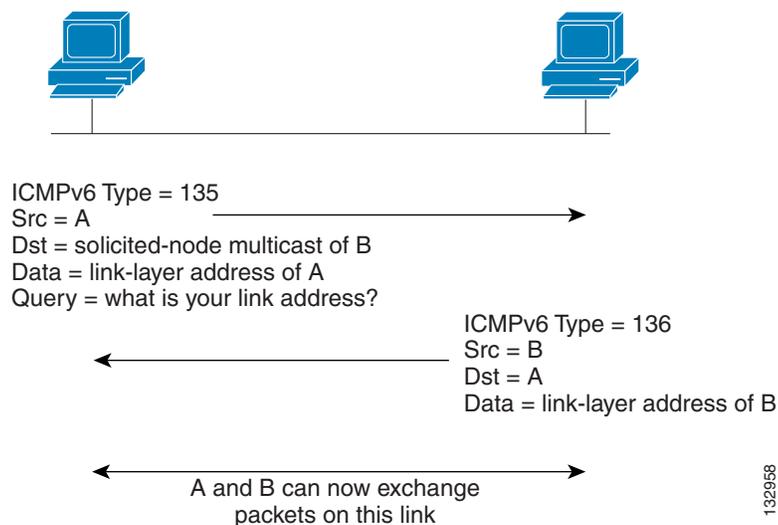

Neighbor solicitation messages are also used to verify the reachability of a neighbor after the link-layer address of a neighbor is identified. When a node wants to verify the reachability of a neighbor, the destination address in a neighbor solicitation message is the unicast address of the neighbor.

Neighbor advertisement messages are also sent when there is a change in the link-layer address of a node on a local link. When there is such a change, the destination address for the neighbor advertisement is the all-nodes multicast address.


Neighbor Reachable Time

The neighbor reachable time enables detecting unavailable neighbors. Shorter configured times enable detecting unavailable neighbors more quickly, however, shorter times consume more IPv6 network bandwidth and processing resources in all IPv6 network devices. Very short configured times are not recommended in normal IPv6 operation.

Router Advertisement Messages

An ASA can participate in router advertisements so that neighboring devices can dynamically learn a default router address. Router advertisement messages (ICMPv6 Type 134) are periodically sent out each IPv6 configured interface of the ASA. The router advertisement messages are sent to the all-nodes multicast address. Figure 28-2 shows the router advertisement messages that are sent from IPv6 configured interfaces on the ASA.

Figure 28-2 IPv6 Neighbor Discovery—Router Advertisement Message

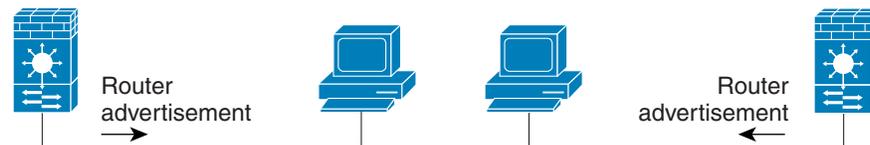

Router advertisement packet definitions:
 ICMPv6 Type = 134
 Src = router link-local address
 Dst = all-nodes multicast address
 Data = options, prefix, lifetime, autoconfig flag

132917

Router advertisement messages typically include the following information:

- One or more IPv6 prefix that nodes on the local link can use to automatically configure their IPv6 addresses.
- Lifetime information for each prefix included in the advertisement.
- Sets of flags that indicate the type of autoconfiguration (stateless or stateful) that can be completed.
- Default router information (whether the router sending the advertisement should be used as a default router and, if so, the amount of time (in seconds) the router should be used as a default router).
- Additional information for hosts, such as the hop limit and MTU a host should use in packets that it originates.
- The amount of time between neighbor solicitation message retransmissions on a given link.
- The amount of time a node considers a neighbor reachable.

Router advertisements are also sent in response to router solicitation messages (ICMPv6 Type 133). Router solicitation messages are sent by hosts at system startup so that the host can immediately autoconfigure without needing to wait for the next scheduled router advertisement message. Because router solicitation messages are usually sent by hosts at system startup, and the host does not have a configured unicast address, the source address in router solicitation messages is usually the unspecified IPv6 address (0:0:0:0:0:0:0:0). If the host has a configured unicast address, the unicast address of the interface sending the router solicitation message is used as the source address in the message. The

destination address in router solicitation messages is the all-routers multicast address with a scope of the link. When a router advertisement is sent in response to a router solicitation, the destination address in the router advertisement message is the unicast address of the source of the router solicitation message.

You can configure the following settings for router advertisement messages:

- The time interval between periodic router advertisement messages.
- The router lifetime value, which indicates the amount of time IPv6 nodes should consider the ASA to be the default router.
- The IPv6 network prefixes in use on the link.
- Whether or not an interface transmits router advertisement messages.

Unless otherwise noted, the router advertisement message settings are specific to an interface and are entered in interface configuration mode.

Static IPv6 Neighbors

You can manually define a neighbor in the IPv6 neighbor cache. If an entry for the specified IPv6 address already exists in the neighbor discovery cache—learned through the IPv6 neighbor discovery process—the entry is automatically converted to a static entry. Static entries in the IPv6 neighbor discovery cache are not modified by the neighbor discovery process.

Licensing Requirements for IPv6 Neighbor Discovery

The following table shows the licensing requirements for this feature:

Model	License Requirement
All models	Base License.

Guidelines and Limitations

This section includes the guidelines and limitations for this feature.

Context Mode Guidelines

Supported in single and multiple context mode.

Firewall Mode Guidelines

Supported in routed mode only. Transparent mode is not supported.

Additional Guidelines and Limitations

- The interval value is included in all IPv6 router advertisements that are sent out of this interface.

- The configured time enables detecting unavailable neighbors. Shorter configured times enable detecting unavailable neighbors more quickly; however, shorter times consume more IPv6 network bandwidth and processing resources in all IPv6 network devices. Very short configured times are not recommended in normal IPv6 operation.
- The interval between transmissions should be less than or equal to the IPv6 router advertisement lifetime if the ASA is configured as a default router by using the **ipv6 nd ra-lifetime** command. To prevent synchronization with other IPv6 nodes, randomly adjust the actual value used to within 20 percent of the specified value.
- The **ipv6 nd prefix** command allows control over the individual parameters per prefix, including whether or not the prefix should be advertised.
- By default, prefixes configured as addresses on an interface using the **ipv6 address** command are advertised in router advertisements. If you configure prefixes for advertisement using the **ipv6 nd prefix** command, then only these prefixes are advertised.
- The **default** keyword can be used to set default parameters for all prefixes.
- A date can be set to specify the expiration of a prefix. The valid and preferred lifetimes are counted down in real time. When the expiration date is reached, the prefix will no longer be advertised.
- When onlink is on (by default), the specified prefix is assigned to the link. Nodes sending traffic to such addresses that contain the specified prefix consider the destination to be locally reachable on the link.
- When autoconfig is on (by default), it indicates to hosts on the local link that the specified prefix can be used for IPv6 autoconfiguration.
- For stateless autoconfiguration to work correctly, the advertised prefix length in router advertisement messages must always be 64 bits.
- The router lifetime value is included in all IPv6 router advertisements sent out of the interface. The value indicates the usefulness of the ASA as a default router on this interface.
- Setting the value to a non-zero value indicates that the ASA should be considered a default router on this interface. The non-zero value for the router lifetime value should not be less than the router advertisement interval.

The following guidelines and limitations apply for configuring a static IPv6 neighbor:

- The **ipv6 neighbor** command is similar to the **arp** command. If an entry for the specified IPv6 address already exists in the neighbor discovery cache—learned through the IPv6 neighbor discovery process—the entry is automatically converted to a static entry. These entries are stored in the configuration when the copy command is used to store the configuration.
- Use the **show ipv6 neighbor** command to view static entries in the IPv6 neighbor discovery cache.
- The **clear ipv6 neighbor** command deletes all entries in the IPv6 neighbor discovery cache except static entries. The **no ipv6 neighbor** command deletes a specified static entry from the neighbor discovery cache; the command does not remove dynamic entries—entries learned from the IPv6 neighbor discovery process—from the cache. Disabling IPv6 on an interface by using the **no ipv6 enable** command deletes all IPv6 neighbor discovery cache entries configured for that interface except static entries (the state of the entry changes to INCOMPLETE).
- Static entries in the IPv6 neighbor discovery cache are not modified by the neighbor discovery process.
- The **clear ipv6 neighbor** command does not remove static entries from the IPv6 neighbor discovery cache; it only clears the dynamic entries.

- The ICMP syslogs generated are caused by a regular refresh of IPv6 neighbor entries. The ASA default timer for IPv6 neighbor entry is 30 seconds, so the ASA would generate ICMPv6 neighbor discovery and response packets about every 30 seconds. If the ASA has both failover LAN and state interfaces configured with IPv6 addresses, then every 30 seconds, ICMPv6 neighbor discovery and response packets will be generated by both ASAs for both configured and link-local IPv6 addresses. In addition, each packet will generate several syslogs (ICMP connection and local-host creation or teardown), so it may appear that constant ICMP syslogs are being generated. The refresh time for IPv6 neighbor entry is configurable on the regular data interface, but not configurable on the failover interface. However, the CPU impact for this ICMP neighbor discovery traffic is minimal.

Default Settings for IPv6 Neighbor Discovery

Table 28-1 lists the default settings for IPv6 neighbor discovery.

Table 28-1 Default IPv6 Neighbor Discovery Parameters

Parameters	Default
<i>value</i> for the neighbor solicitation transmission message interval	1000 seconds between neighbor solicitation transmissions.
<i>value</i> for the neighbor reachable time	The default is 0.
<i>value</i> for the router advertisement transmission interval	The default is 200 seconds.
<i>value</i> for the router lifetime	The default is 1800 seconds.
<i>value</i> for the number of consecutive neighbor solicitation messages sent during DAD	The default is one message.
prefix lifetime	The default lifetime is 2592000 seconds (30 days), and a preferred lifetime is 604800 seconds (7 days).
on-link flag	The flag is on by default, which means that the prefix is used on the advertising interface.
autoconfig flag	The flag is on by default, which means that the prefix is used for autoconfiguration.
static IPv6 neighbor	Static entries are not configured in the IPv6 neighbor discovery cache.

Configuring the Neighbor Solicitation Message Interval

To configure the interval between IPv6 neighbor solicitation retransmissions on an interface, enter the following command:

Command	Purpose
<code>ipv6 nd ns-interval value</code>	Sets the interval between IPv6 neighbor solicitation retransmissions on an interface.
Example: hostname (config-if)# ipv6 nd ns-interval 9000	Valid values for the value argument range from 1000 to 3600000 milliseconds. This information is also sent in router advertisement messages.

Examples

The following example configures an IPv6 neighbor solicitation transmission interval of 9000 milliseconds for GigabitEthernet 0/0:

```
hostname (config)# interface gigabitethernet 0/0
hostname (config-if)# ipv6 nd ns-interval 9000
```

Configuring the Neighbor Reachable Time

To configure the amount of time that a remote IPv6 node is considered reachable after a reachability confirmation event has occurred, enter the following command:

Command	Purpose
<code>ipv6 nd reachable-time value</code>	Sets the amount of time that a remote IPv6 node is reachable.
Example: hostname (config-if)# ipv6 nd reachable-time 1700000	Valid values for the <i>value</i> argument range from 0 to 3600000 milliseconds. When 0 is used for the value, the reachable time is sent as undetermined. It is up to the receiving devices to set and track the reachable time value.

Examples

The following example configures an IPv6 reachable time of 1700000 milliseconds for the selected interface, GigabitEthernet 0/0:

```
hostname (config)# interface gigabitethernet 0/0
hostname (config-if)# ipv6 nd reachable-time 1700000
```

Configuring the Router Advertisement Transmission Interval

To configure the interval between IPv6 router advertisement transmissions on an interface, enter the following command:

Command	Purpose
Command <code>ipv6 nd ra-interval [msec] value</code>	Sets the interval between IPv6 router advertisement transmissions. The optional msec keyword indicates that the value provided is in milliseconds. If this keyword is not present, the value provided is in seconds. Valid values for the <i>value</i> argument range from 3 to 1800 seconds or from 500 to 1800000 milliseconds if the msec keyword is provided. The interval between transmissions should be less than or equal to the IPv6 router advertisement lifetime if the ASA is configured as a default router. For more information, see the “Configuring the Router Lifetime Value” section on page 28-8 . To prevent synchronization with other IPv6 nodes, randomly adjust the actual value used to within 20 percent of the desired value.
Example: <pre>hostname (config-if)# ipv6 nd ra-interval 201</pre>	

Examples

The following example configures an IPv6 router advertisement interval of 201 seconds for the selected interface, GigabitEthernet 0/0:

```
hostname (config)# interface gigabitethernet 0/0
hostname (config-if)# ipv6 nd ra-interval 201
```

Configuring the Router Lifetime Value

To configure the router lifetime value in IPv6 router advertisements on an interface, enter the following command:

Command	Purpose
Command <code>ipv6 nd ra-lifetime [msec] value</code>	Specifies the length of time that nodes on the local link should consider the ASA as the default router on the link. The optional msec keyword indicates that the value provided is in milliseconds. If this keyword is not present, the value provided is in seconds. Valid values for the <i>value</i> argument range from 0 to 9000 seconds. Entering 0 indicates that the ASA should not be considered a default router on the selected interface.
Example: <pre>hostname (config-if)# ipv6 nd ra-lifetime 2000</pre>	

Examples

The following example configures an IPv6 router lifetime value of 2000 seconds for the selected interface, GigabitEthernet 0/0:

```
hostname (config)# interface gigabitethernet 0/0
hostname (config-if)# ipv6 nd ra-lifetime 2000
```

Configuring DAD Settings

To specify DAD settings on the interface, enter the following command:

Command	Purpose
<code>ipv6 nd dad attempts value</code>	Specifies the uniqueness of new unicast IPv6 addresses before they are assigned and ensures that duplicate IPv6 addresses are detected in the network on a link basis.
Example: hostname (config-if)# ipv6 nd dad attempts 20	Valid values for the <i>value</i> argument range from 0 to 600. A zero value disables DAD processing on the specified interface.

Examples

The following example configures a DAD attempt value of 20 for the selected interface, GigabitEthernet 0/0:

```
hostname (config)# interface gigabitethernet 0/0
hostname (config-if)# ipv6 nd dad attempts 20
```

Configuring IPv6 Addresses on an Interface

To configure IPv6 addresses on an interface, enter the following command:

Command	Purpose
<code>ipv6 address</code>	Specifies the IPv6 address for the selected interface.
Example: hostname (config-if)# ipv6 address fe80::20d:88ff:feee:6a82	

Examples

The following example configures a link-local IPv6 address for the selected interface, GigabitEthernet 0/0:

```
hostname (config)# interface gigabitethernet 0/0
hostname (config-if)# ipv6 address fe80::20d:88ff:feee:6a82
```

Suppressing Router Advertisement Messages

Router advertisement messages are automatically sent in response to router solicitation messages. You may want to disable these messages on any interface for which you do not want the ASA to supply the IPv6 prefix (for example, the outside interface).

To suppress the router lifetime value in IPv6 router advertisements on an interface, enter the following command:

Command	Purpose
ipv6 nd suppress-ra <i>seconds</i> Example: hostname (config-if)# ipv6 nd suppress-ra 2001:DB8::/32 1000 900	Suppresses the router lifetime value. The <i>seconds</i> argument specifies the validity of the ASA as a default router on this interface. Valid values range from 0 to 9000 seconds. A zero indicates that the ASA should not be considered a default router on the specified interface. Entering this command causes the ASA to appear as a regular IPv6 neighbor on the link and not as an IPv6 router.

Examples

The following example suppresses an IPv6 router advertisement transmission for the specified interface, which is GigabitEthernet 0/0:

```
hostname (config)# interface gigabitethernet 0/0
hostname (config-if)# ipv6 nd suppress-ra 2001:DB8::/32 1000 900
```

Configuring the IPv6 Prefix

To configure the which IPv6 prefixes are included in IPv6 router advertisements, enter the following command:

Command	Purpose
<pre> ipv6 nd prefix <i>ipv6-prefix/prefix-length</i> default [[<i>valid-lifetime</i> <i>preferred-lifetime</i>] [at <i>valid-date</i> <i>preferred-date</i>] infinite no-advertise off-link no-autoconfig] Example: hostname (config-if)# ipv6 nd prefix 2001:DB8::/32 1000 900 </pre>	<p>Configures which IPv6 prefixes are included in IPv6 router advertisements. The prefix advertisement can be used by neighboring devices to autoconfigure their interface addresses. Stateless autoconfiguration uses IPv6 prefixes provided in router advertisement messages to create the global unicast address from the link-local address.</p> <p>The at <i>valid-date preferred-date</i> syntax indicates the date and time at which the lifetime and preference expire. The prefix is valid until this specified date and time are reached. Dates are expressed in the form <i>date-valid-expire month-valid-expire hh:mm-valid-expire date-prefer-expire month-prefer-expire hh:mm-prefer-expire</i>.</p> <p>The default keyword indicates that default values are used.</p> <p>The optional infinite keyword specifies that the valid lifetime does not expire.</p> <p>The <i>ipv6-prefix</i> argument specifies the IPv6 network number to include in router advertisements. This argument must be in the form documented in RFC 2373 where the address is specified in hexadecimal using 16-bit values between colons.</p> <p>The optional no-advertise keyword indicates to hosts on the local link that the specified prefix is not to be used for IPv6 autoconfiguration.</p> <p>The optional no-autoconfig keyword indicates to hosts on the local link that the specified prefix cannot be used for IPv6 autoconfiguration.</p> <p>The optional off-link keyword indicates that the specified prefix is not used for on-link determination.</p> <p>The <i>preferred-lifetime</i> argument specifies the amount of time (in seconds) that the specified IPv6 prefix is advertised as being preferred. Valid values range from 0 to 4294967295 seconds. The maximum value represents infinity, which can also be specified with infinite. The default is 604800 (7 days).</p> <p>The <i>prefix-length</i> argument specifies the length of the IPv6 prefix. This value indicates how many of the high-order, contiguous bits of the address comprise the network portion of the prefix. The slash (/) must precede the prefix length.</p> <p>The <i>valid-lifetime</i> argument specifies the amount of time that the specified IPv6 prefix is advertised as being valid. Valid values range from 0 to 4294967295 seconds. The maximum value represents infinity, which can also be specified with infinite. The default is 2592000 (30 days).</p>

Examples

The following example includes the IPv6 prefix 2001:DB8::/32, with a valid lifetime of 1000 seconds and a preferred lifetime of 900 seconds, in router advertisements sent out on the specified interface, which is GigabitEthernet 0/0:

```
hostname (config)# interface gigabitethernet 0/0
hostname (config-if)# ipv6 nd prefix 2001:DB8::/32 1000 900
```

Configuring a Static IPv6 Neighbor

To configure a static entry in the IPv6 neighbor discovery cache, enter the following command:

Command	Purpose
<pre>ipv6 neighbor ipv6_address if_name mac_address</pre> <p>Example: hostname)config-if)# ipv6 neighbor 3001:1::45A inside 002.7D1A.9472 </p>	<p>Configures a static entry in the IPv6 neighbor discovery cache.</p> <p>The <i>ipv6_address</i> argument is the link-local IPv6 address of the neighbor, the <i>if_name</i> argument is the interface through which the neighbor is available, and the <i>mac_address</i> argument is the MAC address of the neighbor interface.</p>

Examples

The following example adds a static entry for an inside host with an IPv6 address of 3001:1::45A and a MAC address of 002.7D1a.9472 to the neighbor discovery cache:

```
hostname)config-if)# ipv6 neighbor 3001:1::45A inside 002.7D1A.9472
```

Monitoring IPv6 Neighbor Discovery

To monitor IPv6 neighbor discovery parameters, enter the following command:

Command	Purpose
<code>show ipv6 interface</code>	<p>Displays the usability status of interfaces configured for IPv6. Including the interface name, such as “outside” and displays the settings for the specified interface. Excludes the name from the command and displays the settings for all interfaces that have IPv6 enabled on them. Output for the command shows the following:</p> <ul style="list-style-type: none">• The name and status of the interface.• The link-local and global unicast addresses.• The multicast groups to which the interface belongs.• ICMP redirect and error message settings.• Neighbor discovery settings.• The actual time when the command is set to 0.• The neighbor discovery reachable time that is being used.

Additional References

For additional information related to implementing IPv6 prefixes, see the following topics:

- [Related Documents for IPv6 Prefixes, page 28-14](#)
- [RFCs for IPv6 Prefixes and Documentation, page 28-14](#)

Related Documents for IPv6 Prefixes

Related Topic	Document Title
ipv6 commands	<i>command reference</i>

RFCs for IPv6 Prefixes and Documentation

RFC	Title
RFC 2373 includes complete documentation to show how IPv6 network address numbers must be shown in router advertisements. The command argument <i>ipv6-prefix</i> indicates this network number, in which the address must be specified in hexadecimal format using 16-bit values between colons.	IP Version 6 Addressing Architecture
RFC 3849 specifies the requirements for using IPv6 address prefixes in documentation. The IPv6 unicast address prefix that has been reserved for use in documentation is 2001:DB8::/32.	IPv6 Address Prefix Reserved for Documentation

Feature History for IPv6 Neighbor Discovery

[Table 28-2](#) lists each feature change and the platform release in which it was implemented.

Table 28-2 Feature History for IPv6 Neighbor Discovery

Feature Name	Releases	Feature Information
IPv6 Neighbor Discovery	7.0(1)	We introduced this feature. We introduced the following commands: ipv6 nd ns-interval , ipv6 nd ra-lifetime , ipv6 nd suppress-ra , ipv6 neighbor , ipv6 nd prefix , ipv6 nd dad-attempts , ipv6 nd reachable-time , ipv6 address , ipv6 enforce-eui64 .



PART 7

Configuring Network Address Translation



CHAPTER 29

Information About NAT

This chapter provides an overview of how Network Address Translation (NAT) works on the ASA. This chapter includes the following sections:

- [Why Use NAT?, page 29-1](#)
- [NAT Terminology, page 29-2](#)
- [NAT Types, page 29-3](#)
- [NAT in Routed and Transparent Mode, page 29-12](#)
- [NAT for VPN, page 29-14](#)
- [How NAT is Implemented, page 29-16](#)
- [NAT Rule Order, page 29-20](#)
- [Routing NAT Packets, page 29-21](#)
- [DNS and NAT, page 29-24](#)
- [Where to Go Next, page 29-27](#)



Note

To start configuring NAT, see [Chapter 30, “Configuring Network Object NAT,”](#) or [Chapter 31, “Configuring Twice NAT.”](#)

Why Use NAT?

Each computer and device within an IP network is assigned a unique IP address that identifies the host. Because of a shortage of public IPv4 addresses, most of these IP addresses are private, not routable anywhere outside of the private company network. RFC 1918 defines the private IP addresses you can use internally that should not be advertised:

- 10.0.0.0 through 10.255.255.255
- 172.16.0.0 through 172.31.255.255
- 192.168.0.0 through 192.168.255.255

One of the main functions of NAT is to enable private IP networks to connect to the Internet. NAT replaces a private IP address with a public IP address, translating the private addresses in the internal private network into legal, routable addresses that can be used on the public Internet. In this way, NAT conserves public addresses because it can be configured to advertise at a minimum only one public address for the entire network to the outside world.

Other functions of NAT include:

- Security—Keeping internal IP addresses hidden discourages direct attacks.
- IP routing solutions—Overlapping IP addresses are not a problem when you use NAT.
- Flexibility—You can change internal IP addressing schemes without affecting the public addresses available externally; for example, for a server accessible to the Internet, you can maintain a fixed IP address for Internet use, but internally, you can change the server address.

**Note**

NAT is not required. If you do not configure NAT for a given set of traffic, that traffic will not be translated, but will have all of the security policies applied as normal.

NAT Terminology

This document uses the following terminology:

- Real address/host/network/interface—The real address is the address that is defined on the host, before it is translated. In a typical NAT scenario where you want to translate the inside network when it accesses the outside, the inside network would be the “real” network. Note that you can translate any network connected to the ASA, not just an inside network. Therefore if you configure NAT to translate outside addresses, “real” can refer to the outside network when it accesses the inside network.
- Mapped address/host/network/interface—The mapped address is the address that the real address is translated to. In a typical NAT scenario where you want to translate the inside network when it accesses the outside, the outside network would be the “mapped” network.
- Bidirectional initiation—Static NAT allows connections to be initiated *bidirectionally*, meaning both to the host and from the host.
- Source and destination NAT—For any given packet, both the source and destination IP addresses are compared to the NAT rules, and one or both can be translated/untranslated. For static NAT, the rule is bidirectional, so be aware that “source” and “destination” are used in commands and descriptions throughout this guide even though a given connection might originate at the “destination” address.

NAT Types

- [NAT Types Overview, page 29-3](#)
- [Static NAT, page 29-3](#)
- [Dynamic NAT, page 29-8](#)
- [Dynamic PAT, page 29-10](#)
- [Identity NAT, page 29-11](#)

NAT Types Overview

You can implement NAT using the following methods:

- **Static NAT**—A consistent mapping between a real and mapped IP address. Allows bidirectional traffic initiation. See the [“Static NAT” section on page 29-3](#).
- **Dynamic NAT**—A group of real IP addresses are mapped to a (usually smaller) group of mapped IP addresses, on a first come, first served basis. Only the real host can initiate traffic. See the [“Dynamic NAT” section on page 29-8](#).
- **Dynamic Port Address Translation (PAT)**—A group of real IP addresses are mapped to a single IP address using a unique source port of that IP address. See the [“Dynamic PAT” section on page 29-10](#).
- **Identity NAT**—A real address is statically translated to itself, essentially bypassing NAT. You might want to configure NAT this way when you want to translate a large group of addresses, but then want to exempt a smaller subset of addresses. See the [“Identity NAT” section on page 29-11](#).

Static NAT

This section describes static NAT and includes the following topics:


- [Information About Static NAT, page 29-3](#)
- [Information About Static NAT with Port Translation, page 29-4](#)
- [Information About One-to-Many Static NAT, page 29-6](#)
- [Information About Other Mapping Scenarios \(Not Recommended\), page 29-7](#)

Information About Static NAT

Static NAT creates a fixed translation of a real address to a mapped address. Because the mapped address is the same for each consecutive connection, static NAT allows bidirectional connection initiation, both to and from the host (if an access rule exists that allows it). With dynamic NAT and PAT, on the other hand, each host uses a different address or port for each subsequent translation, so bidirectional initiation is not supported.

Figure 29-1 shows a typical static NAT scenario. The translation is always active so both real and remote hosts can initiate connections.

Figure 29-1 Static NAT

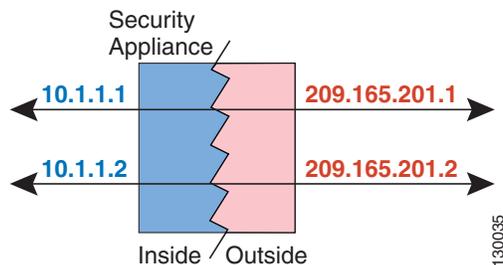

Information About Static NAT with Port Translation

Static NAT with port translation lets you specify a real and mapped protocol (TCP or UDP) and port. This section includes the following topics:


- [Information About Static NAT with Port Address Translation, page 29-4](#)
- [Static NAT with Identity Port Translation, page 29-5](#)
- [Static NAT with Port Translation for Non-Standard Ports, page 29-5](#)
- [Static Interface NAT with Port Translation, page 29-5](#)

Information About Static NAT with Port Address Translation

When you specify the port with static NAT, you can choose to map the port and/or the IP address to the same value or to a different value.

Figure 29-2 shows a typical static NAT with port translation scenario showing both a port that is mapped to itself and a port that is mapped to a different value; the IP address is mapped to a different value in both cases. The translation is always active so both translated and remote hosts can initiate connections.

Figure 29-2 Typical Static NAT with Port Translation Scenario

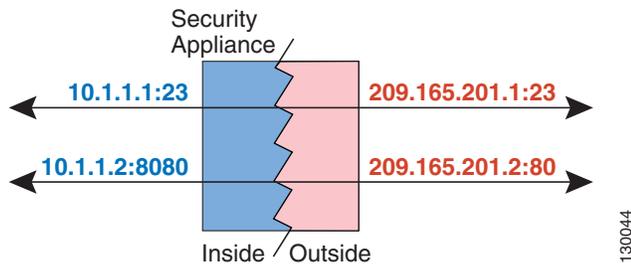


Note

For applications that require application inspection for secondary channels (for example, FTP and VoIP), the ASA automatically translates the secondary ports.

Static NAT with Identity Port Translation

The following static NAT with port translation example provides a single address for remote users to access FTP, HTTP, and SMTP. These servers are actually different devices on the real network, but for each server, you can specify static NAT with port translation rules that use the same mapped IP address, but different ports. (See [Figure 29-3](#). See the “[Single Address for FTP, HTTP, and SMTP \(Static NAT-with-Port-Translation\)](#)” section on page 30-18 for details on how to configure this example.)

Figure 29-3 Static NAT with Port Translation

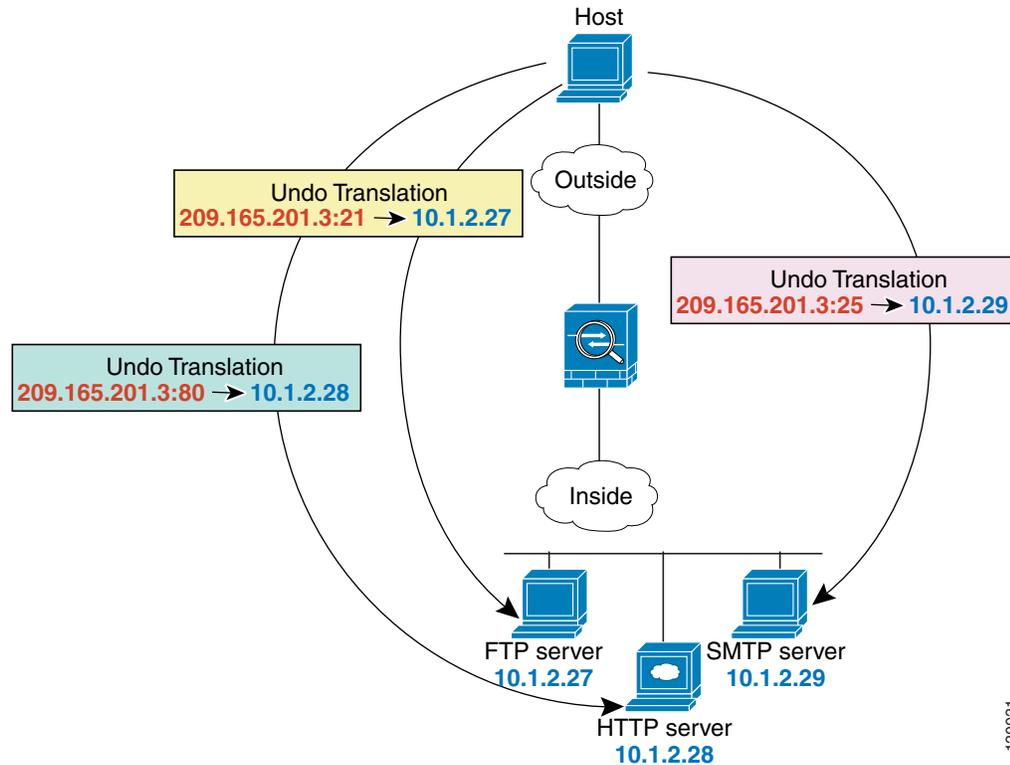

130031

Static NAT with Port Translation for Non-Standard Ports

You can also use static NAT with port translation to translate a well-known port to a non-standard port or vice versa. For example, if inside web servers use port 8080, you can allow outside users to connect to port 80, and then undo translation to the original port 8080. Similarly, to provide extra security, you can tell web users to connect to non-standard port 6785, and then undo translation to port 80.

Static Interface NAT with Port Translation


You can configure static NAT to map a real address to an interface address/port combination. For example, if you want to redirect Telnet access for the ASA outside interface to an inside host, then you can map the inside host IP address/port 23 to the ASA interface address/port 23. (Note that although Telnet to the ASA is not allowed to the lowest security interface, static NAT with interface port translation redirects the Telnet session instead of denying it).

Information About One-to-Many Static NAT

Typically, you configure static NAT with a one-to-one mapping. However, in some cases, you might want to configure a single real address to several mapped addresses (one-to-many). When you configure one-to-many static NAT, when the real host initiates traffic, it always uses the first mapped address. However, for traffic initiated to the host, you can initiate traffic to any of the mapped addresses, and they will be untranslated to the single real address.


Figure 29-4 shows a typical one-to-many static NAT scenario. Because initiation by the real host always uses the first mapped address, the translation of real host IP/1st mapped IP is technically the only bidirectional translation.

Figure 29-4 One-to-Many Static NAT

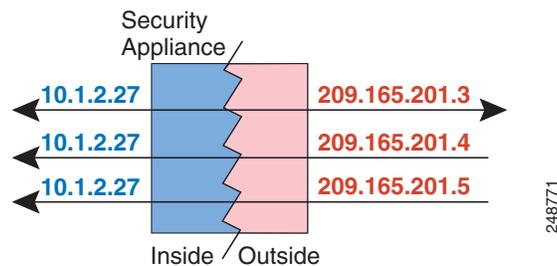

For example, you have a load balancer at 10.1.2.27. Depending on the URL requested, it redirects traffic to the correct web server (see Figure 29-5). (See the “[Inside Load Balancer with Multiple Mapped Addresses \(Static NAT, One-to-Many\)](#)” section on page 30-17 for details on how to configure this example.)

Figure 29-5 One-to-Many Static NAT

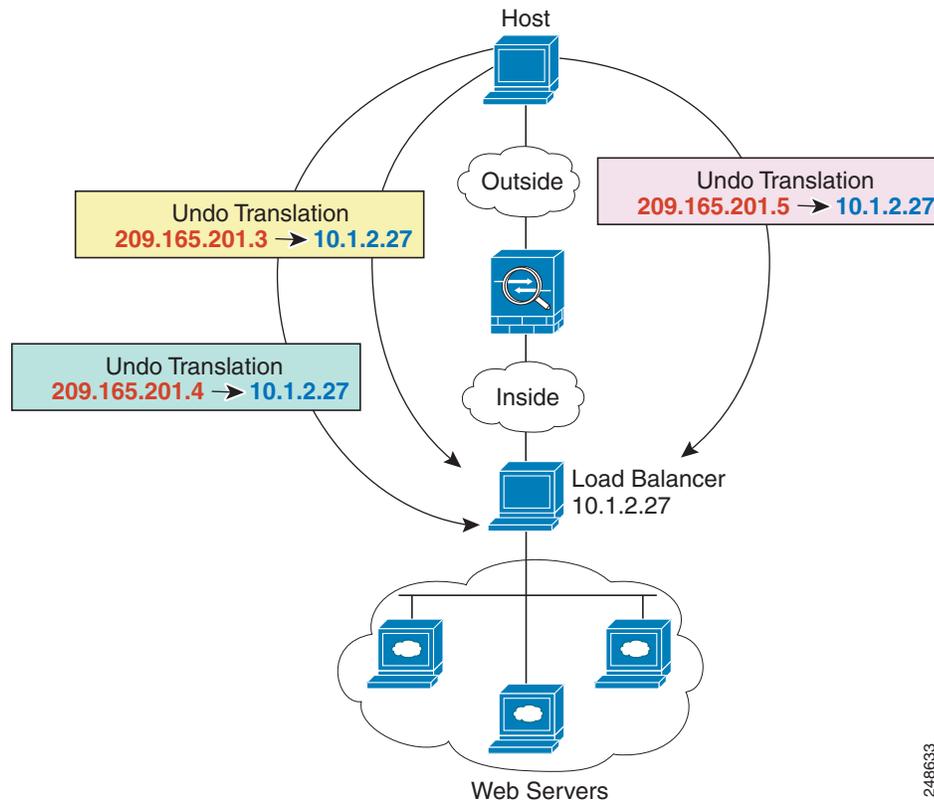

248633


Information About Other Mapping Scenarios (Not Recommended)

The ASA has the flexibility to allow any kind of static mapping scenario: one-to-one, one-to-many, but also few-to-many, many-to-few, and many-to-one mappings. We recommend using only one-to-one or one-to-many mappings. These other mapping options might result in unintended consequences.

Functionally, few-to-many is the same as one-to-many; but because the configuration is more complicated and the actual mappings may not be obvious at a glance, we recommend creating a one-to-many configuration for each real address that requires it. For example, for a few-to-many scenario, the few real addresses are mapped to the many mapped addresses in order (A to 1, B to 2, C to 3). When all real addresses are mapped, the next mapped address is mapped to the first real address, and so on until all mapped addresses are mapped (A to 4, B to 5, C to 6). This results in multiple mapped addresses for each real address. Just like a one-to-many configuration, only the first mappings are bidirectional; subsequent mappings allow traffic to be initiated *to* the real host, but all traffic *from* the real host uses only the first mapped address for the source.

Figure 29-6 shows a typical few-to-many static NAT scenario.

Figure 29-6 Few-to-Many Static NAT

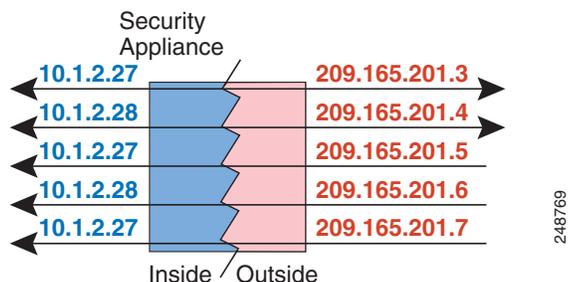

For a many-to-few or many-to-one configuration, where you have more real addresses than mapped addresses, you run out of mapped addresses before you run out of real addresses. Only the mappings between the lowest real IP addresses and the mapped pool result in bidirectional initiation. The remaining higher real addresses can initiate traffic, but traffic cannot be initiated to them (returning traffic for a connection is directed to the correct real address because of the unique 5-tuple (source IP, destination IP, source port, destination port, protocol) for the connection).




Note

Many-to-few or many-to-one NAT is not PAT. If two real hosts use the same source port number and go to the same outside server and the same TCP destination port, and both hosts are translated to the same IP address, then both connections will be reset because of an address conflict (the 5-tuple is not unique).

Figure 29-7 shows a typical many-to-few static NAT scenario.

Figure 29-7 Many-to-Few Static NAT

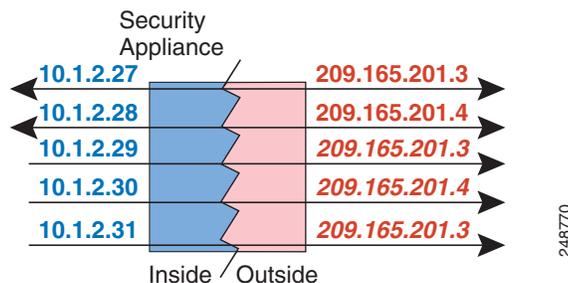

Instead of using a static rule this way, we suggest that you create a one-to-one rule for the traffic that needs bidirectional initiation, and then create a dynamic rule for the rest of your addresses.

Dynamic NAT

This section describes dynamic NAT and includes the following topics:

- [Information About Dynamic NAT, page 29-9](#)
- [Dynamic NAT Disadvantages and Advantages, page 29-10](#)

Information About Dynamic NAT

Dynamic NAT translates a group of real addresses to a pool of mapped addresses that are routable on the destination network. The mapped pool typically includes fewer addresses than the real group. When a host you want to translate accesses the destination network, the ASA assigns the host an IP address from the mapped pool. The translation is created only when the real host initiates the connection. The translation is in place only for the duration of the connection, and a given user does not keep the same IP address after the translation times out. Users on the destination network, therefore, cannot initiate a reliable connection to a host that uses dynamic NAT, even if the connection is allowed by an access rule.

Figure 29-8 shows a typical dynamic NAT scenario. Only real hosts can create a NAT session, and responding traffic is allowed back.

Figure 29-8 Dynamic NAT


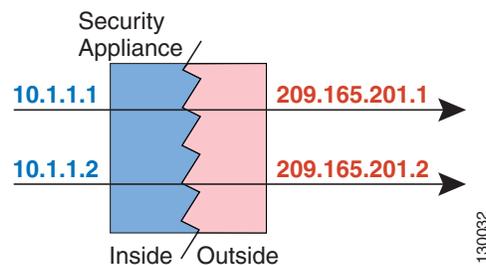


Figure 29-9 shows a remote host attempting to initiate a connection to a mapped address. This address is not currently in the translation table; therefore, the ASA drops the packet.

Figure 29-9 Remote Host Attempts to Initiate a Connection to a Mapped Address

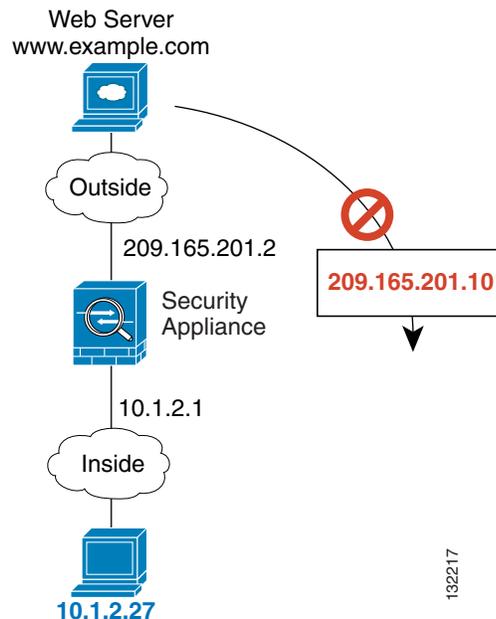

**Note**

For the duration of the translation, a remote host can initiate a connection to the translated host if an access rule allows it. Because the address is unpredictable, a connection to the host is unlikely. Nevertheless, in this case you can rely on the security of the access rule.

Dynamic NAT Disadvantages and Advantages

Dynamic NAT has these disadvantages:

- If the mapped pool has fewer addresses than the real group, you could run out of addresses if the amount of traffic is more than expected.

Use PAT or a PAT fallback method if this event occurs often because PAT provides over 64,000 translations using ports of a single address.

- You have to use a large number of routable addresses in the mapped pool, and routable addresses may not be available in large quantities.

The advantage of dynamic NAT is that some protocols cannot use PAT. PAT does not work with the following:

- IP protocols that do not have a port to overload, such as GRE version 0.
- Some multimedia applications that have a data stream on one port, the control path on another port, and are not open standard.

See the [“Default Settings” section on page 42-4](#) for more information about NAT and PAT support.

Dynamic PAT

This section describes dynamic PAT and includes the following topics:

- [Information About Dynamic PAT, page 29-10](#)
- [Dynamic PAT Disadvantages and Advantages, page 29-11](#)


Information About Dynamic PAT

Dynamic PAT translates multiple real addresses to a single mapped IP address by translating the real address and source port to the mapped address and a unique port. If available, the real source port number is used for the mapped port. However, if the real port is *not* available, by default the mapped ports are chosen from the same range of ports as the real port number: 0 to 511, 512 to 1023, and 1024 to 65535. Therefore, ports below 1024 have only a small PAT pool that can be used. (8.4(3) and later, not including 8.5(1) or 8.6(1)) If you have a lot of traffic that uses the lower port ranges, you can now specify a flat range of ports to be used instead of the three unequal-sized tiers.

Each connection requires a separate translation session because the source port differs for each connection. For example, 10.1.1.1:1025 requires a separate translation from 10.1.1.1:1026.

Figure 29-10 shows a typical dynamic PAT scenario. Only real hosts can create a NAT session, and responding traffic is allowed back. The mapped address is the same for each translation, but the port is dynamically assigned.

Figure 29-10 Dynamic PAT

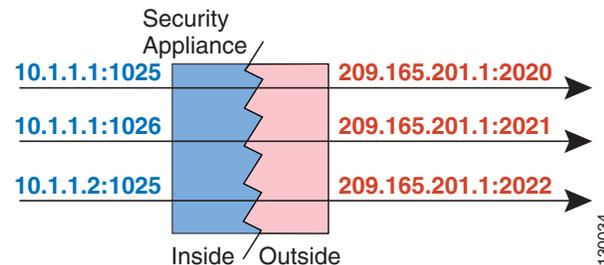

After the connection expires, the port translation also expires after 30 seconds of inactivity. The timeout is not configurable. Users on the destination network cannot reliably initiate a connection to a host that uses PAT (even if the connection is allowed by an access rule).



Note

For the duration of the translation, a remote host can initiate a connection to the translated host if an access rule allows it. Because the port address (both real and mapped) is unpredictable, a connection to the host is unlikely. Nevertheless, in this case you can rely on the security of the access rule.

Dynamic PAT Disadvantages and Advantages

Dynamic PAT lets you use a single mapped address, thus conserving routable addresses. You can even use the ASA interface IP address as the PAT address.

Dynamic PAT does not work with some multimedia applications that have a data stream that is different from the control path. See the “Default Settings” section on page 42-4 for more information about NAT and PAT support.


Dynamic PAT may also create a large number of connections appearing to come from a single IP address, and servers might interpret the traffic as a DoS attack. (8.4(2)/8.5(1) and later) You can configure a PAT pool of addresses and use a round-robin assignment of PAT addresses to mitigate this situation.

Identity NAT

You might have a NAT configuration in which you need to translate an IP address to itself. For example, if you create a broad rule that applies NAT to every network, but want to exclude one network from NAT, you can create a static NAT rule to translate an address to itself. Identity NAT is necessary for remote access VPN, where you need to exempt the client traffic from NAT.

Figure 29-11 shows a typical identity NAT scenario.

Figure 29-11 Identity NAT

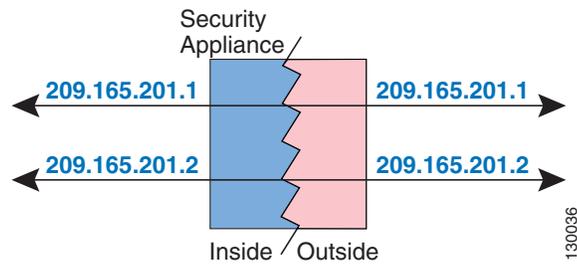

NAT in Routed and Transparent Mode


You can configure NAT in both routed and transparent firewall mode. This section describes typical usage for each firewall mode and includes the following topics:

- [NAT in Routed Mode, page 29-13](#)
- [NAT in Transparent Mode, page 29-13](#)

NAT in Routed Mode

Figure 29-12 shows a typical NAT example in routed mode, with a private network on the inside.

Figure 29-12 NAT Example: Routed Mode

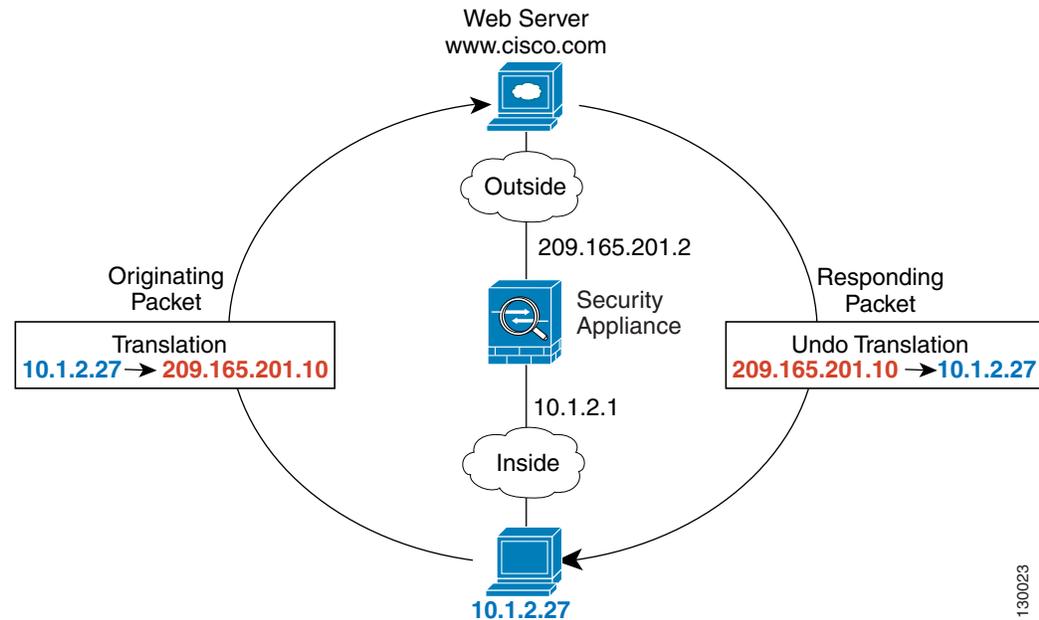

1. When the inside host at 10.1.2.27 sends a packet to a web server, the real source address of the packet, 10.1.2.27, is changed to a mapped address, 209.165.201.10.
2. When the server responds, it sends the response to the mapped address, 209.165.201.10, and the ASA receives the packet because the ASA performs proxy ARP to claim the packet.
3. The ASA then changes the translation of the mapped address, 209.165.201.10, back to the real address, 10.1.2.27, before sending it to the host.

NAT in Transparent Mode


Using NAT in transparent mode eliminates the need for the upstream or downstream routers to perform NAT for their networks.

NAT in transparent mode has the following requirements and limitations:

- Because the transparent firewall does not have any interface IP addresses, you cannot use interface PAT.
- ARP inspection is not supported. Moreover, if for some reason a host on one side of the ASA sends an ARP request to a host on the other side of the ASA, and the initiating host real address is mapped to a different address on the same subnet, then the real address remains visible in the ARP request.

Figure 29-13 shows a typical NAT scenario in transparent mode, with the same network on the inside and outside interfaces. The transparent firewall in this scenario is performing the NAT service so that the upstream router does not have to perform NAT.

Figure 29-13 NAT Example: Transparent Mode

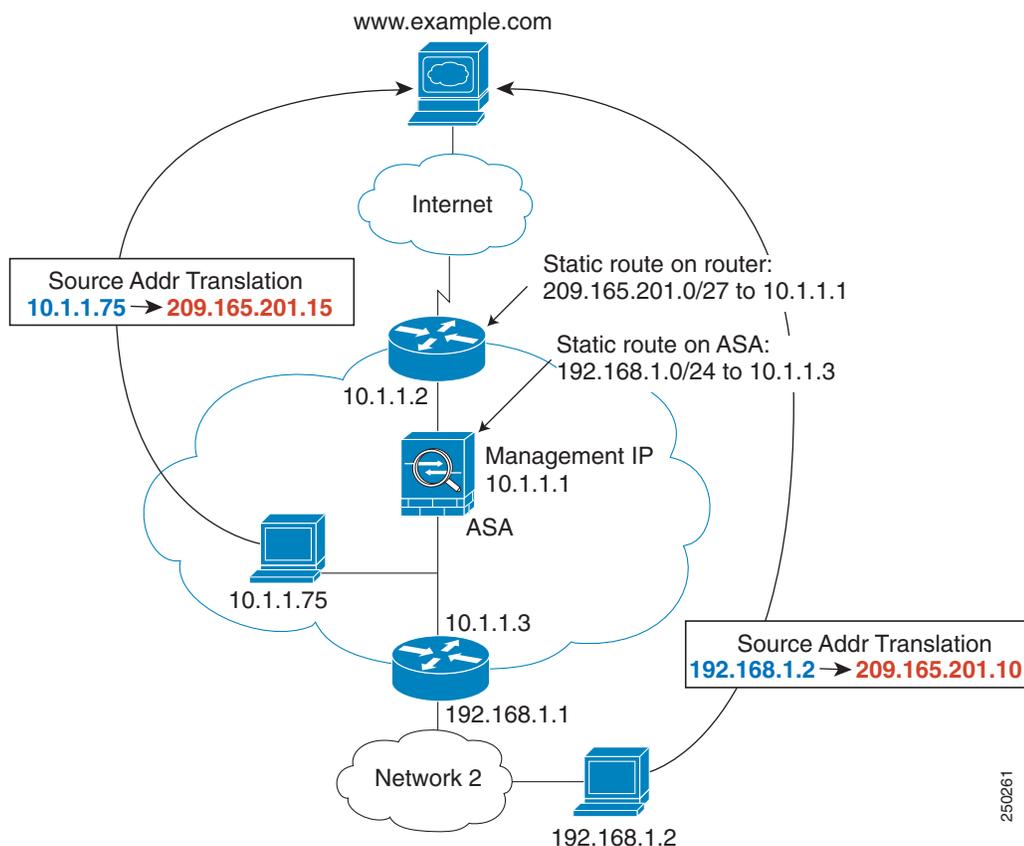

1. When the inside host at 10.1.1.75 sends a packet to a web server, the real source address of the packet, 10.1.1.75, is changed to a mapped address, 209.165.201.15.
2. When the server responds, it sends the response to the mapped address, 209.165.201.15, and the ASA receives the packet because the upstream router includes this mapped network in a static route directed to the ASA management IP address. See the [“Mapped Addresses and Routing”](#) section on page 29-22 for more information about required routes.
3. The ASA then undoes the translation of the mapped address, 209.165.201.15, back to the real address, 10.1.1.75. Because the real address is directly-connected, the ASA sends it directly to the host.
4. For host 192.168.1.2, the same process occurs, except for returning traffic, the ASA looks up the route in its routing table and sends the packet to the downstream router at 10.1.1.3 based on the ASA static route for 192.168.1.0/24. See the [“Transparent Mode Routing Requirements for Remote Networks”](#) section on page 29-24 for more information about required routes.

NAT for VPN

If you do not allow split-tunneling, then all VPN traffic, even traffic destined for the Internet, goes through the VPN tunnel. VPN traffic, after being decrypted by the ASA, is essentially the same as any other inside traffic: when an inside user needs to access the Internet, they need a public IP address provided by NAT.

Figure 29-14 shows a VPN client that wants to visit a website at www.example.com. In this example, an interface PAT rule on the outside interface matches the VPN-assigned address 10.1.1.10. With intra-interface communication enabled, traffic can exit the same interface it entered to reach www.example.com. A similar example without the need for hairpin networking includes an ASA for VPN termination, and a separate ASA with NAT as the Internet gateway.

Figure 29-14 Interface PAT for Internet-Bound VPN Traffic (Hairpin, Intra-Interface)


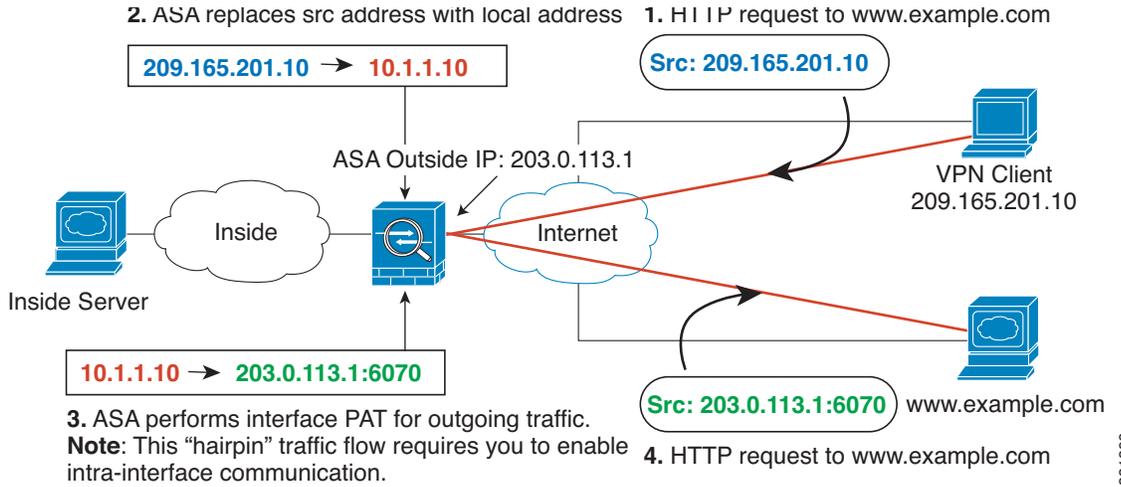


Figure 29-15 also shows an interface PAT rule for Internet-bound traffic. However, for any communication between VPN endpoints such as the ends of a site-to-site tunnel, you do not want to perform NAT. Therefore you also need to create an identity NAT rule (using twice NAT) for any traffic that goes to other inside networks connected by VPN.

Figure 29-15 Identity NAT to Allow Communication Between VPN Sites and Clients

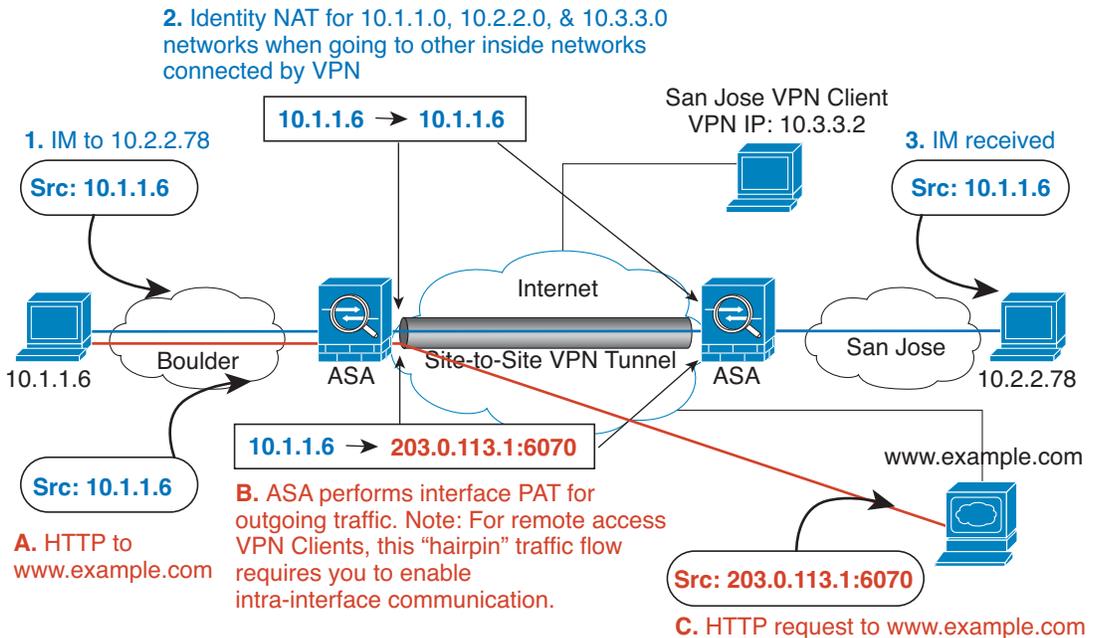

How NAT is Implemented

The ASA can implement address translation in two ways: *network object NAT* and *twice NAT*. This section includes the following topics:

- [Main Differences Between Network Object NAT and Twice NAT, page 29-16](#)
- [Information About Network Object NAT, page 29-17](#)
- [Information About Twice NAT, page 29-17](#)

Main Differences Between Network Object NAT and Twice NAT

The main differences between these two NAT types are:

- How you define the real address.
 - Network object NAT—You define NAT as a parameter for a network object. A network object names an IP host, range, or subnet so you can then use the object in configuration instead of the actual IP addresses. The network object IP address serves as the real address. This method lets you easily add NAT to network objects that might already be used in other parts of your configuration.
 - Twice NAT—You identify a network object or network object group for both the real and mapped addresses. In this case, NAT is not a parameter of the network object; the network object or group is a parameter of the NAT configuration. The ability to use a network object *group* for the real address means that twice NAT is more scalable.
- How source and destination NAT is implemented.
 - Network object NAT— Each rule can apply to either the source or destination of a packet. So two rules might be used, one for the source IP address, and one for the destination IP address. These two rules cannot be tied together to enforce a specific translation for a source/destination combination.
 - Twice NAT—A single rule translates both the source and destination. A matching packet only matches the one rule, and further rules are not checked. Even if you do not configure the optional destination address for twice NAT, a matching packet still only matches one twice NAT rule. The source and destination are tied together, so you can enforce different translations depending on the source/destination combination. For example, sourceA/destinationA can have a different translation than sourceA/destinationB.
- Order of NAT Rules.
 - Network object NAT—Automatically ordered in the NAT table.
 - Twice NAT—Manually ordered in the NAT table (before or after network object NAT rules).

See the “[NAT Rule Order](#)” section on [page 29-20](#) for more information.

We recommend using network object NAT unless you need the extra features that twice NAT provides. Network object NAT is easier to configure, and might be more reliable for applications such as Voice over IP (VoIP). (For VoIP, because twice NAT is applicable only between two objects, you might see a failure in the translation of indirect addresses that do not belong to either of the objects.)

Information About Network Object NAT

All NAT rules that are configured as a parameter of a network object are considered to be *network object NAT* rules. Network object NAT is a quick and easy way to configure NAT for a network object, which can be a single IP address, a range of addresses, or a subnet.

After you configure the network object, you can then identify the mapped address for that object, either as an inline address or as another network object or network object group.

When a packet enters the ASA, both the source and destination IP addresses are checked against the network object NAT rules. The source and destination address in the packet can be translated by separate rules if separate matches are made. These rules are not tied to each other; different combinations of rules can be used depending on the traffic.

Because the rules are never paired, you cannot specify that sourceA/destinationA should have a different translation than sourceA/destinationB. Use twice NAT for that kind of functionality (twice NAT lets you identify the source and destination address in a single rule).

To start configuring network object NAT, see [Chapter 30, “Configuring Network Object NAT.”](#)

Information About Twice NAT

Twice NAT lets you identify both the source and destination address in a single rule. Specifying both the source and destination addresses lets you specify that sourceA/destinationA can have a different translation than sourceA/destinationB.

The destination address is optional. If you specify the destination address, you can either map it to itself (identity NAT), or you can map it to a different address. The destination mapping is always a static mapping.

Twice NAT also lets you use service objects for static NAT with port translation; network object NAT only accepts inline definition.

To start configuring twice NAT, see [Chapter 31, “Configuring Twice NAT.”](#)

[Figure 29-16](#) shows a host on the 10.1.2.0/24 network accessing two different servers. When the host accesses the server at 209.165.201.11, the real address is translated to 209.165.202.129. When the host accesses the server at 209.165.200.225, the real address is translated to 209.165.202.130. (See the [“Single Address for FTP, HTTP, and SMTP \(Static NAT-with-Port-Translation\)”](#) section on page 30-18 for details on how to configure this example.)

Figure 29-16 Twice NAT with Different Destination Addresses


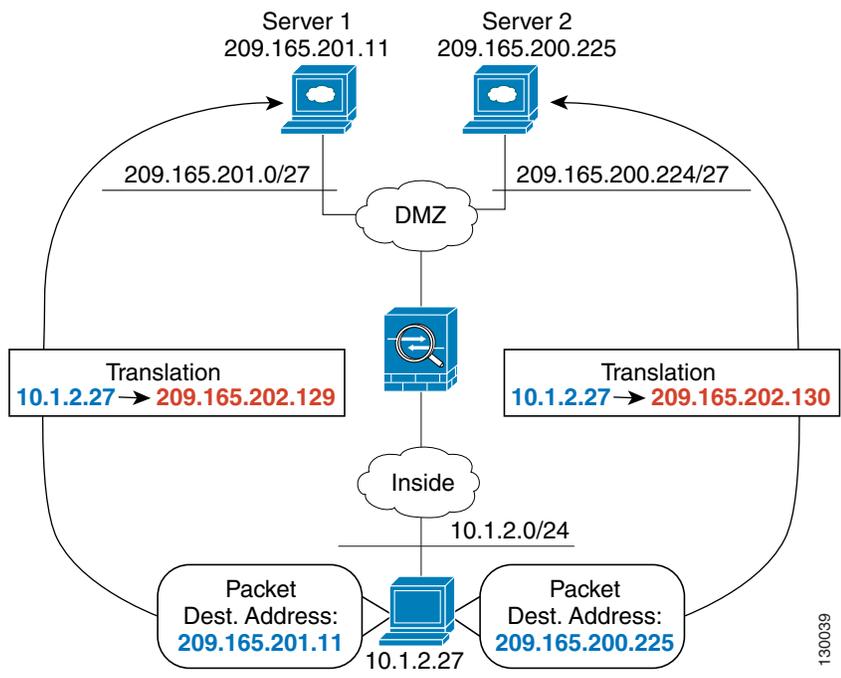


Figure 29-17 shows the use of source and destination ports. The host on the 10.1.2.0/24 network accesses a single host for both web services and Telnet services. When the host accesses the server for web services, the real address is translated to 209.165.202.129. When the host accesses the same server for Telnet services, the real address is translated to 209.165.202.130.

Figure 29-17 Twice NAT with Different Destination Ports

Figure 29-18 shows a remote host connecting to a mapped host. The mapped host has a twice static NAT translation that translates the real address only for traffic to and from the 209.165.201.0/27 network. A translation does not exist for the 209.165.200.224/27 network, so the translated host cannot connect to that network, nor can a host on that network connect to the translated host.

Figure 29-18 Twice Static NAT with Destination Address Translation

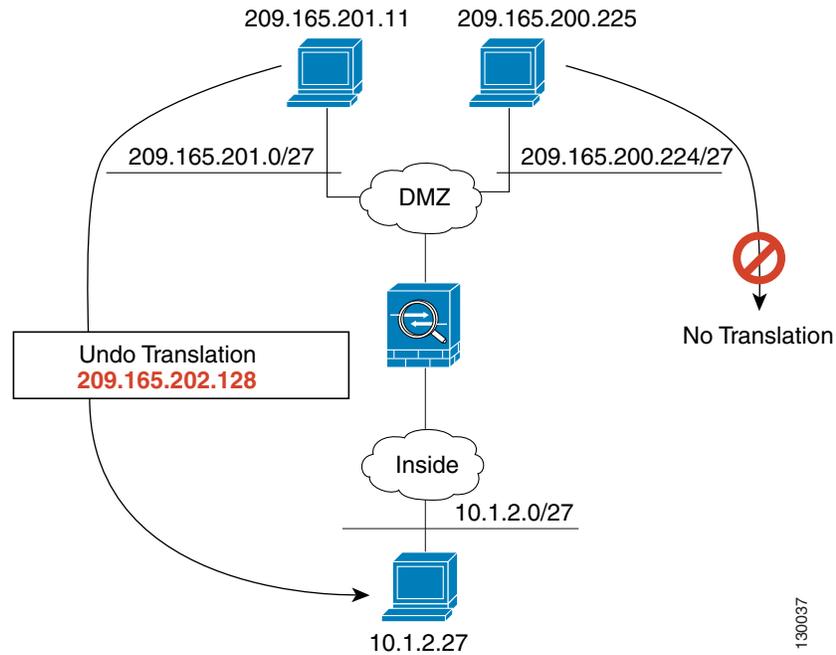

130037

NAT Rule Order

Network object NAT rules and twice NAT rules are stored in a single table that is divided into three sections. Section 1 rules are applied first, then section 2, and finally section 3. [Table 29-1](#) shows the order of rules within each section.

Table 29-1 NAT Rule Table

Table Section	Rule Type	Order of Rules within the Section
Section 1	Twice NAT	<p>Applied on a first match basis, in the order they appear in the configuration. By default, twice NAT rules are added to section 1.</p> <p>Note If you configure EasyVPN remote, the ASA dynamically adds invisible NAT rules to the end of this section. Be sure that you do not configure a twice NAT rule in this section that might match your VPN traffic, instead of matching the invisible rule. If VPN does not work due to NAT failure, consider adding twice NAT rules to section 3 instead.</p>
Section 2	Network object NAT	<p>Section 2 rules are applied in the following order, as automatically determined by the ASA:</p> <ol style="list-style-type: none"> 1. Static rules. 2. Dynamic rules. <p>Within each rule type, the following ordering guidelines are used:</p> <ol style="list-style-type: none"> a. Quantity of real IP addresses—From smallest to largest. For example, an object with one address will be assessed before an object with 10 addresses. b. For quantities that are the same, then the IP address number is used, from lowest to highest. For example, 10.1.1.0 is assessed before 11.1.1.0. c. If the same IP address is used, then the name of the network object is used, in alphabetical order. For example, abracadabra is assessed before catwoman.
Section 3	Twice NAT	<p>Section 3 rules are applied on a first match basis, in the order they appear in the configuration. You can specify whether to add a twice NAT rule to section 3 when you add the rule.</p>

For section 2 rules, for example, you have the following IP addresses defined within network objects:

```

192.168.1.0/24 (static)
192.168.1.0/24 (dynamic)
10.1.1.0/24 (static)
192.168.1.1/32 (static)
172.16.1.0/24 (dynamic) (object def)
172.16.1.0/24 (dynamic) (object abc)

```

The resultant ordering would be:

```

192.168.1.1/32 (static)
10.1.1.0/24 (static)
192.168.1.0/24 (static)
172.16.1.0/24 (dynamic) (object abc)
172.16.1.0/24 (dynamic) (object def)
192.168.1.0/24 (dynamic)


```

NAT Interfaces

You can configure a NAT rule to apply to any interface (in other words, all interfaces), or you can identify specific real and mapped interfaces. You can also specify any interface for the real address, and a specific interface for the mapped address, or vice versa.

For example, you might want to specify any interface for the real address and specify the outside interface for the mapped address if you use the same private addresses on multiple interfaces, and you want to translate them all to the same global pool when accessing the outside (Figure 29-19).

Figure 29-19 Specifying Any Interface

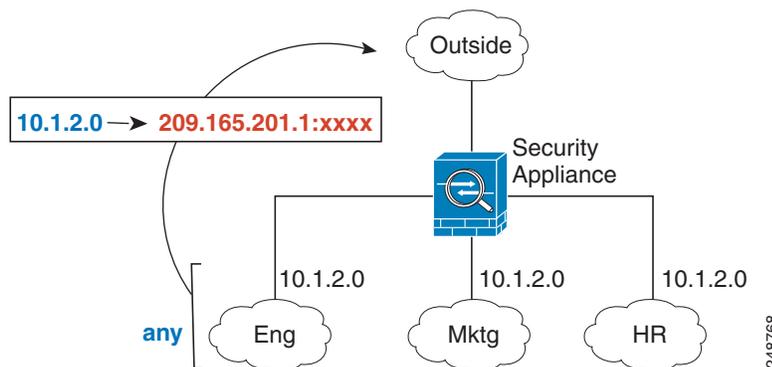

Note

For transparent mode, you must choose specific source and destination interfaces.

Routing NAT Packets

The ASA needs to be the destination for any packets sent to the mapped address. The ASA also needs to determine the egress interface for translated packets. This section describes how the ASA handles accepting and delivering packets with NAT, and includes the following topics:

- [Mapped Addresses and Routing, page 29-22](#)
- [Transparent Mode Routing Requirements for Remote Networks, page 29-24](#)
- [Determining the Egress Interface, page 29-24](#)

Mapped Addresses and Routing

When you translate the real address to a mapped address, the mapped address you choose determines how to configure routing, if necessary, for the mapped address.

See additional guidelines about mapped IP addresses in [Chapter 30, “Configuring Network Object NAT,”](#) and [Chapter 31, “Configuring Twice NAT.”](#)

See the following mapped address types:

- Addresses on the same network as the mapped interface.

If you use addresses on the same network as the mapped interface, the ASA uses proxy ARP to answer any ARP requests for the mapped addresses, thus intercepting traffic destined for a mapped address. This solution simplifies routing because the ASA does not have to be the gateway for any additional networks. This solution is ideal if the outside network contains an adequate number of free addresses, a consideration if you are using a 1:1 translation like dynamic NAT or static NAT. Dynamic PAT greatly extends the number of translations you can use with a small number of addresses, so even if the available addresses on the outside network is small, this method can be used. For PAT, you can even use the IP address of the mapped interface.



Note If you configure the mapped interface to be any interface, and you specify a mapped address on the same network as one of the mapped interfaces, then if an ARP request for that mapped address comes in on a *different* interface, then you need to manually configure an ARP entry for that network on the ingress interface, specifying its MAC address (see the **arp** command). Typically, if you specify any interface for the mapped interface, then you use a unique network for the mapped addresses, so this situation would not occur.

- Addresses on a unique network.

If you need more addresses than are available on the mapped interface network, you can identify addresses on a different subnet. The upstream router needs a static route for the mapped addresses that points to the ASA. Alternatively for routed mode, you can configure a static route on the ASA for the mapped addresses, and then redistribute the route using your routing protocol. For transparent mode, if the real host is directly-connected, configure the static route on the upstream router to point to the ASA: in 8.3, specify the global management IP address; in 8.4(1) and later, specify the bridge group IP address. For remote hosts in transparent mode, in the static route on the upstream router, you can alternatively specify the downstream router IP address.

- The same address as the real address (identity NAT).


(8.3(1), 8.3(2), and 8.4(1)) The default behavior for identity NAT has proxy ARP disabled. You cannot configure this setting.

(8.4(2) and later) The default behavior for identity NAT has proxy ARP enabled, matching other static NAT rules. You can disable proxy ARP if desired. **Note:** You can also disable proxy ARP for regular static NAT if desired, in which case you need to be sure to have proper routes on the upstream router.

Normally for identity NAT, proxy ARP is not required, and in some cases can cause connectivity issues. For example, if you configure a broad identity NAT rule for “any” IP address, then leaving proxy ARP enabled can cause problems for hosts on the network directly-connected to the mapped interface. In this case, when a host on the mapped network wants to communicate with another host on the same network, then the address in the ARP request matches the NAT rule (which matches “any” address). The ASA will then proxy ARP for the address, even though the packet is not actually destined for the ASA. (Note that this problem occurs even if you have a twice NAT rule; although


the NAT rule must match both the source and destination addresses, the proxy ARP decision is made only on the “source” address). If the ASA ARP response is received before the actual host ARP response, then traffic will be mistakenly sent to the ASA (see Figure 29-20).

Figure 29-20 Proxy ARP Problems with Identity NAT

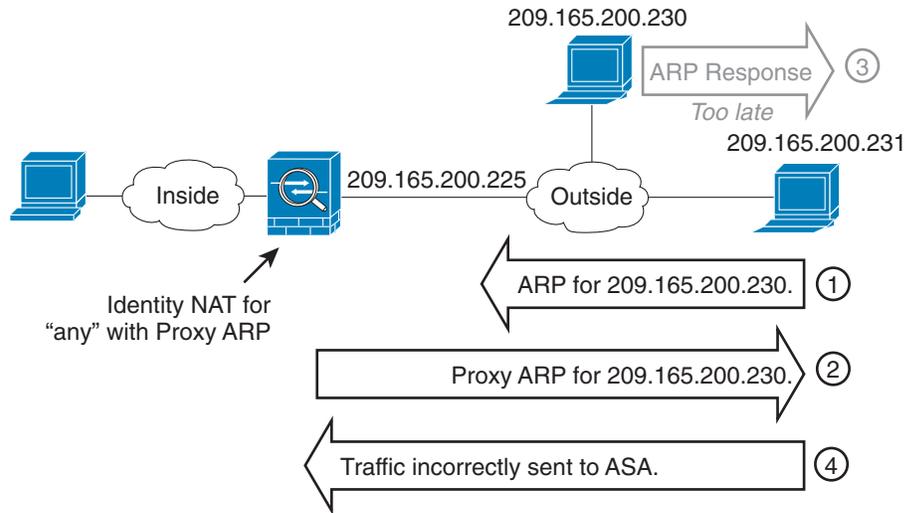

In rare cases, you need proxy ARP for identity NAT; for example for virtual Telnet. When using AAA for network access, a host needs to authenticate with the ASA using a service like Telnet before any other traffic can pass. You can configure a virtual Telnet server on the ASA to provide the necessary login. When accessing the virtual Telnet address from the outside, you must configure an identity NAT rule for the address specifically for the proxy ARP functionality. Due to internal processes for virtual Telnet, proxy ARP lets the ASA keep traffic destined for the virtual Telnet address rather than send the traffic out the source interface according to the NAT rule. (See Figure 29-21).

Figure 29-21 Proxy ARP and Virtual Telnet

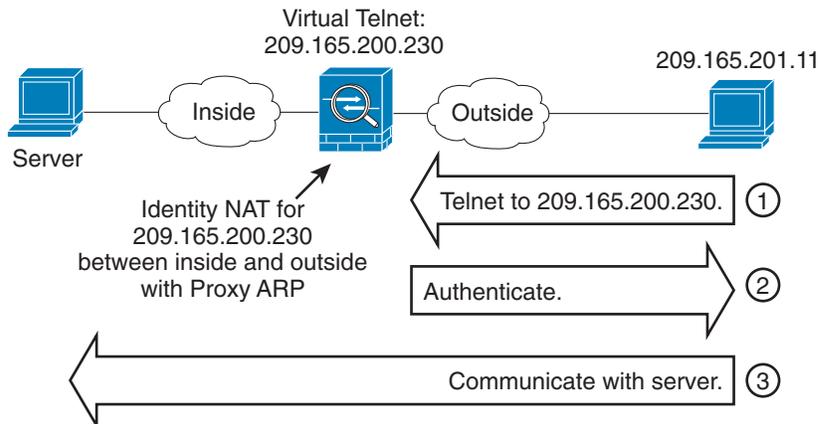

Transparent Mode Routing Requirements for Remote Networks

If the ASA performs NAT for a host that is not on the directly-connected network, then you need to configure a static route on the ASA for that network. You also need to have a static route for embedded IP addresses that are at least one hop away from the ASA (such as in VoIP or DNS traffic) when you have inspection and NAT enabled.

Determining the Egress Interface

In transparent mode, the ASA determines the egress interface for a NAT packet by using the NAT configuration; you must specify the source and destination interfaces as part of the NAT configuration.

In routed mode, the ASA determines the egress interface for a NAT packet in the following way:

- If you specify an optional interface, then the ASA uses the NAT configuration to determine the egress interface. (8.3(1) through 8.4(1)) The only exception is for identity NAT, which always uses a route lookup, regardless of the NAT configuration. (8.4(2) and later) For identity NAT, the default behavior is to use the NAT configuration, but you have the option to always use a route lookup instead.
- If you do not specify a specific interface, then the ASA uses a route lookup to determine the egress interface.

DNS and NAT

You might need to configure the ASA to modify DNS replies by replacing the address in the reply with an address that matches the NAT configuration. You can configure DNS modification when you configure each translation rule.

This feature rewrites the A record, or address record, in DNS replies that match a NAT rule. For DNS replies traversing from a mapped interface to any other interface, the A record is rewritten from the mapped value to the real value. Inversely, for DNS replies traversing from any interface to a mapped interface, the A record is rewritten from the real value to the mapped value.



Note

If you configure a twice NAT rule, you cannot configure DNS modification if you specify the source address as well as the destination address. These kinds of rules can potentially have a different translation for a single address when going to A vs. B. Therefore, the ASA cannot accurately match the IP address inside the DNS reply to the correct twice NAT rule; the DNS reply does not contain information about which source/destination address combination was in the packet that prompted the DNS request.

Figure 29-22 shows a DNS server that is accessible from the outside interface. A server, ftp.cisco.com, is on the inside interface. You configure the ASA to statically translate the ftp.cisco.com real address (10.1.3.14) to a mapped address (209.165.201.10) that is visible on the outside network. In this case, you want to enable DNS reply modification on this static rule so that inside users who have access to ftp.cisco.com using the real address receive the real address from the DNS server, and not the mapped address. When an inside host sends a DNS request for the address of ftp.cisco.com, the DNS server replies with the mapped address (209.165.201.10). The ASA refers to the static rule for the inside server

and translates the address inside the DNS reply to 10.1.3.14. If you do not enable DNS reply modification, then the inside host attempts to send traffic to 209.165.201.10 instead of accessing ftp.cisco.com directly.

Figure 29-22 DNS Reply Modification, DNS Server on Outside

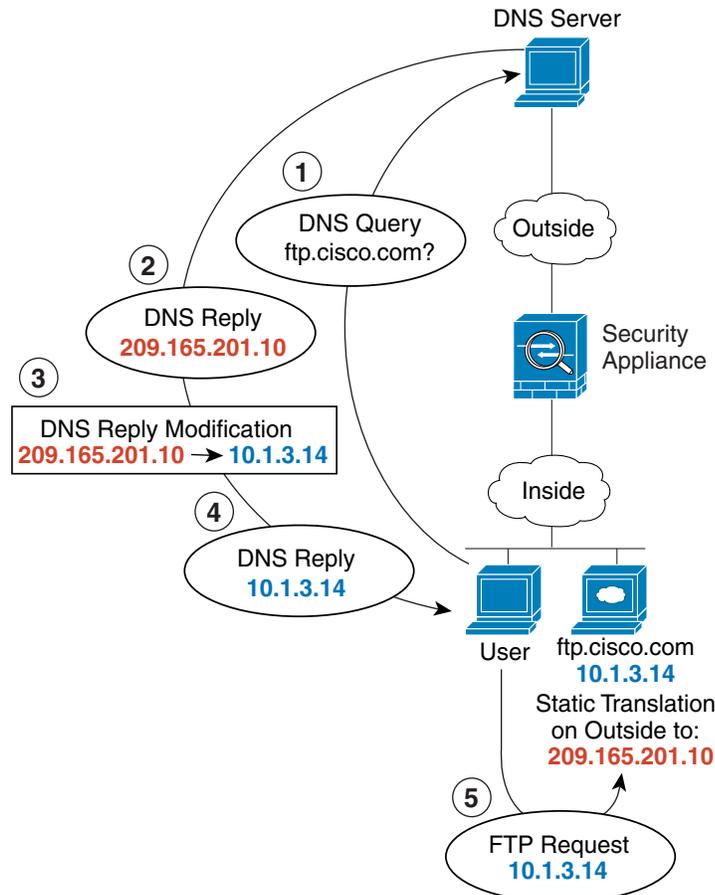


Figure 29-23 shows a user on the inside network requesting the IP address for ftp.cisco.com, which is on the DMZ network, from an outside DNS server. The DNS server replies with the mapped address (209.165.201.10) according to the static rule between outside and DMZ even though the user is not on the DMZ network. The ASA translates the address inside the DNS reply to 10.1.3.14. If the user needs to access ftp.cisco.com using the real address, then no further configuration is required. If there is also

a static rule between the inside and DMZ, then you also need to enable DNS reply modification on this rule. The DNS reply will then be modified two times. In this case, the ASA again translates the address inside the DNS reply to 192.168.1.10 according to the static rule between inside and DMZ.

Figure 29-23 DNS Reply Modification, DNS Server, Host, and Server on Separate Networks


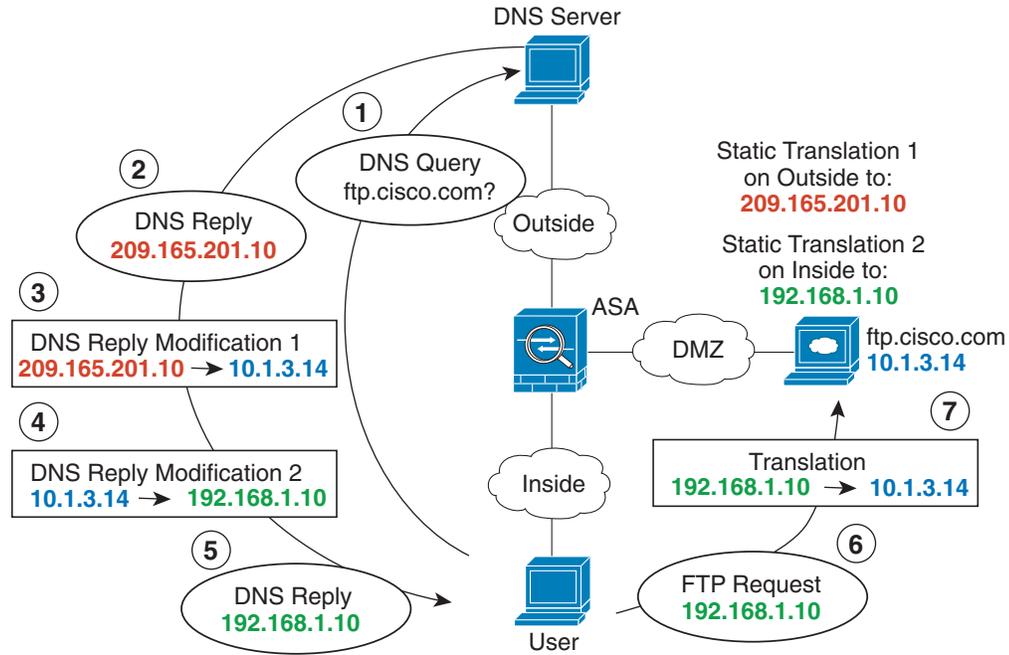


Figure 29-24 shows a web server and DNS server on the outside. The ASA has a static translation for the outside server. In this case, when an inside user requests the address for ftp.cisco.com from the DNS server, the DNS server responds with the real address, 209.165.201.10. Because you want inside users to use the mapped address for ftp.cisco.com (10.1.2.56) you need to configure DNS reply modification for the static translation.

Figure 29-24 DNS Reply Modification, DNS Server on Host Network

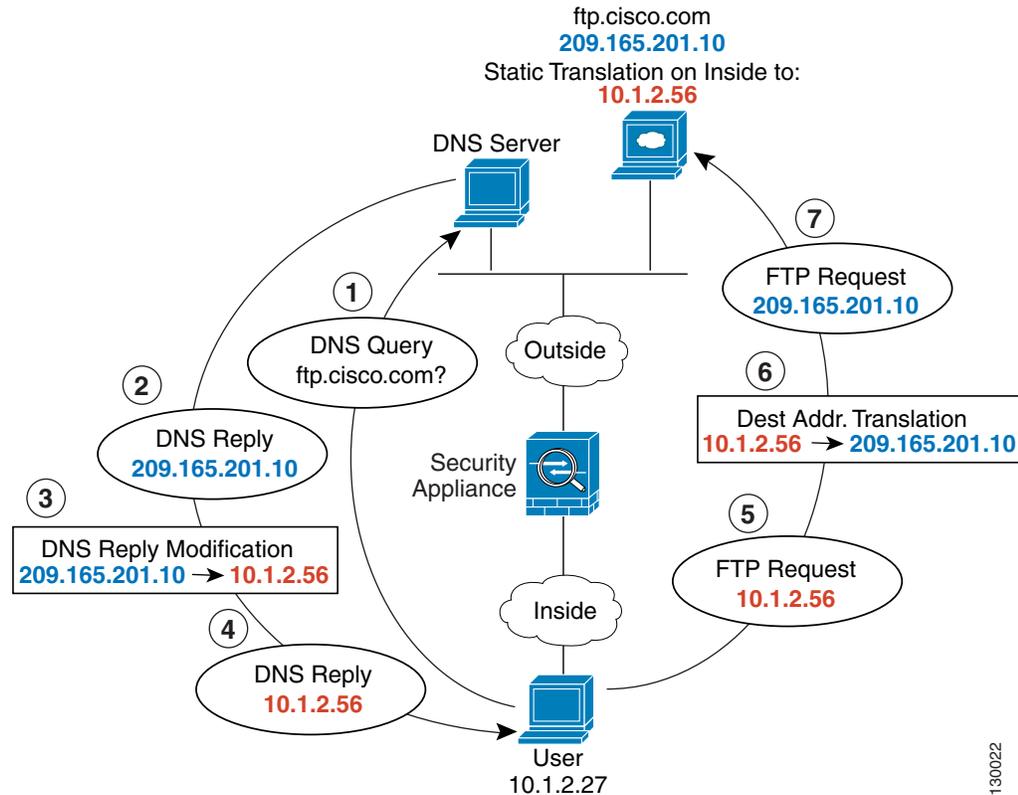

130022

Where to Go Next

To configure network object NAT, see [Chapter 30, “Configuring Network Object NAT.”](#)

To configure twice NAT, see [Chapter 31, “Configuring Twice NAT.”](#)



CHAPTER 30

Configuring Network Object NAT

All NAT rules that are configured as a parameter of a network object are considered to be *network object NAT* rules. Network object NAT is a quick and easy way to configure NAT for a single IP address, a range of addresses, or a subnet. After you configure the network object, you can then identify the mapped address for that object.

This chapter describes how to configure network object NAT, and it includes the following sections:

- [Information About Network Object NAT, page 30-1](#)
- [Licensing Requirements for Network Object NAT, page 30-2](#)
- [Prerequisites for Network Object NAT, page 30-2](#)
- [Guidelines and Limitations, page 30-2](#)
- [Default Settings, page 30-3](#)
- [Configuring Network Object NAT, page 30-3](#)
- [Monitoring Network Object NAT, page 30-14](#)
- [Configuration Examples for Network Object NAT, page 30-15](#)
- [Feature History for Network Object NAT, page 30-22](#)



Note

For detailed information about how NAT works, see [Chapter 29, “Information About NAT.”](#)

Information About Network Object NAT

When a packet enters the ASA, both the source and destination IP addresses are checked against the network object NAT rules. The source and destination address in the packet can be translated by separate rules if separate matches are made. These rules are not tied to each other; different combinations of rules can be used depending on the traffic.

Because the rules are never paired, you cannot specify that a source address should be translated to A when going to destination X, but be translated to B when going to destination Y. Use twice NAT for that kind of functionality (twice NAT lets you identify the source and destination address in a single rule).

For detailed information about the differences between twice NAT and network object NAT, see the [“How NAT is Implemented”](#) section on page 29-16.

Network object NAT rules are added to section 2 of the NAT rules table. For more information about NAT ordering, see the [“NAT Rule Order”](#) section on page 29-20.

Licensing Requirements for Network Object NAT

The following table shows the licensing requirements for this feature:

Model	License Requirement
All models	Base License.

Prerequisites for Network Object NAT

Depending on the configuration, you can configure the mapped address inline if desired or you can create a separate network object or network object group for the mapped address (the **object network** or **object-group network** command). Network object groups are particularly useful for creating a mapped address pool with discontinuous IP address ranges or multiple hosts or subnets. To create a network object or group, see the [“Configuring Objects and Groups” section on page 13-1](#).

For specific guidelines for objects and groups, see the configuration section for the NAT type you want to configure. See also the [“Guidelines and Limitations”](#) section.

Guidelines and Limitations

Context Mode Guidelines

Supported in single and multiple context mode.

Firewall Mode Guidelines

- Supported in routed and transparent firewall mode.
- In transparent mode, you must specify the real and mapped interfaces; you cannot use **any**.
- In transparent mode, you cannot configure interface PAT, because the transparent mode interfaces do not have IP addresses. You also cannot use the management IP address as a mapped address.

IPv6 Guidelines

Does not support IPv6.

Additional Guidelines

- You can only define a single NAT rule for a given object; if you want to configure multiple NAT rules for an object, you need to create multiple objects with different names that specify the same IP address, for example, **object network obj-10.10.10.1-01**, **object network obj-10.10.10.1-02**, and so on.

- If you change the NAT configuration, and you do not want to wait for existing translations to time out before the new NAT configuration is used, you can clear the translation table using the **clear xlate** command. However, clearing the translation table disconnects all current connections that use translations.



Note If you remove a dynamic NAT or PAT rule, and then add a new rule with mapped addresses that overlap the addresses in the removed rule, then the new rule will not be used until all connections associated with the removed rule time out or are cleared using the **clear xlate** command. This safeguard ensures that the same address is not assigned to multiple hosts.

- Objects and object groups used in NAT cannot be undefined; they must include IP addresses.
- You can use the same mapped object or group in multiple NAT rules.
- The mapped IP address pool cannot include:
 - The mapped interface IP address. If you specify **any** interface for the rule, then all interface IP addresses are disallowed. For interface PAT (routed mode only), use the **interface** keyword instead of the IP address.
 - (Transparent mode) The management IP address.
 - (Dynamic NAT) The standby interface IP address when VPN is enabled.
 - Existing VPN pool addresses.
- For application inspection limitations with NAT or PAT, see the [“Default Settings” section on page 42-4](#) in [Chapter 42, “Getting Started with Application Layer Protocol Inspection.”](#)

Default Settings

- (Routed mode) The default real and mapped interface is Any, which applies the rule to all interfaces.
- (8.3(1), 8.3(2), and 8.4(1)) The default behavior for identity NAT has proxy ARP disabled. You cannot configure this setting. (8.4(2) and later) The default behavior for identity NAT has proxy ARP enabled, matching other static NAT rules. You can disable proxy ARP if desired. See the [“Routing NAT Packets” section on page 29-21](#) for more information.
- If you specify an optional interface, then the ASA uses the NAT configuration to determine the egress interface. (8.3(1) through 8.4(1)) The only exception is for identity NAT, which always uses a route lookup, regardless of the NAT configuration. (8.4(2) and later) For identity NAT, the default behavior is to use the NAT configuration, but you have the option to always use a route lookup instead. See the [“Routing NAT Packets” section on page 29-21](#) for more information.

Configuring Network Object NAT

This section describes how to configure network object NAT and includes the following topics:

- [Configuring Dynamic NAT, page 30-4](#)
- [Configuring Dynamic PAT \(Hide\), page 30-6](#)
- [Configuring Static NAT or Static NAT-with-Port-Translation, page 30-10](#)
- [Configuring Identity NAT, page 30-12](#)

Configuring Dynamic NAT

This section describes how to configure network object NAT for dynamic NAT. For more information, see the [“Dynamic NAT” section on page 29-8](#).

Detailed Steps

	Command	Purpose
Step 1	<p>Network object:</p> <pre>object network obj_name range ip_address_1 ip_address_2</pre> <p>Network object group:</p> <pre>object-group network grp_name {network-object {object net_obj_name host ip_address} group-object grp_obj_name}</pre> <p>Example:</p> <pre>hostname(config)# object network TEST hostname(config-network-object)# range 10.1.1.1 10.1.1.70 hostname(config)# object network TEST2 hostname(config-network-object)# range 10.1.2.1 10.1.2.70 hostname(config-network-object)# object-group network MAPPED_IPS hostname(config-network)# network-object object TEST hostname(config-network)# network-object object TEST2 hostname(config-network)# network-object host 10.1.2.79</pre>	<p>To specify the mapped addresses (that you want to translate to), configure a network object or network object group. A network object group can contain objects and/or inline addresses.</p> <p>Note The object or group cannot contain a subnet.</p> <p>If a mapped network object contains both ranges and host IP addresses, then the ranges are used for dynamic NAT, and then the host IP addresses are used as a PAT fallback.</p> <p>See the “Guidelines and Limitations” section on page 30-2 for information about disallowed mapped IP addresses.</p> <p>For more information about configuring a network object or group, see the “Configuring Objects” section on page 13-3.</p>
Step 2	<pre>object network obj_name</pre> <p>Example:</p> <pre>hostname(config)# object network my-host-obj1</pre>	<p>Configures a network object for which you want to configure NAT, or enters object network configuration mode for an existing network object.</p>
Step 3	<pre>{host ip_address subnet subnet_address netmask range ip_address_1 ip_address_2}</pre> <p>Example:</p> <pre>hostname(config-network-object)# subnet 10.1.1.0 255.255.255.0</pre>	<p>If you are creating a new network object, defines the real IP address(es) that you want to translate.</p>

Command	Purpose
<p>Step 4</p> <pre>nat [(real_ifc,mapped_ifc)] dynamic mapped_obj [interface] [dns]</pre> <p>Example:</p> <pre>hostname(config-network-object)# nat (inside,outside) dynamic MAPPED_IPS interface</pre>	<p>Configures dynamic NAT for the object IP addresses.</p> <p>Note You can only define a single NAT rule for a given object. See the “Additional Guidelines” section on page 30-2.</p> <p>See the following guidelines:</p> <ul style="list-style-type: none"> • Interfaces—(Required for transparent mode) Specify the real and mapped interfaces. Be sure to include the parentheses in your command. In routed mode, if you do not specify the real and mapped interfaces, all interfaces are used; you can also specify the keyword any for one or both of the interfaces. • Mapped IP address—Specify the mapped IP address as: <ul style="list-style-type: none"> – An existing network object (see Step 1). – An existing network object group (see Step 1). • Interface PAT fallback—(Optional) The interface keyword enables interface PAT fallback. After the mapped IP addresses are used up, then the IP address of the mapped interface is used. For this option, you must configure a specific interface for the <i>mapped_ifc</i>. (You cannot specify interface in transparent mode). • DNS—(Optional) The dns keyword translates DNS replies. Be sure DNS inspection is enabled (it is enabled by default). See the “DNS and NAT” section on page 29-24 for more information.

Examples

The following example configures dynamic NAT that hides 192.168.2.0 network behind a range of outside addresses 10.2.2.1 through 10.2.2.10:

```
hostname(config)# object network my-range-obj
hostname(config-network-object)# range 10.2.2.1 10.2.2.10
hostname(config)# object network my-inside-net
hostname(config-network-object)# subnet 192.168.2.0 255.255.255.0
hostname(config-network-object)# nat (inside,outside) dynamic my-range-obj
```

The following example configures dynamic NAT with dynamic PAT backup. Hosts on inside network 10.76.11.0 are mapped first to the nat-range1 pool (10.10.10.10-10.10.10.20). After all addresses in the nat-range1 pool are allocated, dynamic PAT is performed using the pat-ip1 address (10.10.10.21). In the unlikely event that the PAT translations are also use up, dynamic PAT is performed using the outside interface address.

```
hostname(config)# object network nat-range1
hostname(config-network-object)# range 10.10.10.10 10.10.10.20

hostname(config-network-object)# object network pat-ip1
hostname(config-network-object)# host 10.10.10.21

hostname(config-network-object)# object-group network nat-pat-grp
hostname(config-network-object)# network-object object nat-range1
hostname(config-network-object)# network-object object pat-ip1

hostname(config-network-object)# object network my_net_obj5
hostname(config-network-object)# subnet 10.76.11.0 255.255.255.0
hostname(config-network-object)# nat (inside,outside) dynamic nat-pat-grp interface
```

Configuring Dynamic PAT (Hide)

This section describes how to configure network object NAT for dynamic PAT (hide). For more information, see the [“Dynamic PAT” section on page 29-10](#).

Guidelines

For a PAT pool:

- If available, the real source port number is used for the mapped port. However, if the real port is *not* available, by default the mapped ports are chosen from the same range of ports as the real port number: 0 to 511, 512 to 1023, and 1024 to 65535. Therefore, ports below 1024 have only a small PAT pool that can be used. (8.4(3) and later, not including 8.5(1) or 8.6(1)) If you have a lot of traffic that uses the lower port ranges, you can now specify a flat range of ports to be used instead of the three unequal-sized tiers: either 1024 to 65535, or 1 to 65535.
- (8.4(3) and later, not including 8.5(1) or 8.6(1)) If you use the same PAT pool object in two separate rules, then be sure to specify the same options for each rule. For example, if one rule specifies extended PAT and a flat range, then the other rule must also specify extended PAT and a flat range.

For extended PAT for a PAT pool (8.4(3) and later, not including 8.5(1) or 8.6(1)):

- Many application inspections do not support extended PAT. See the [“Default Settings” section on page 42-4 in Chapter 42, “Getting Started with Application Layer Protocol Inspection,”](#) for a complete list of unsupported inspections.
- If you enable extended PAT for a dynamic PAT rule, then you cannot also use an address in the PAT pool as the PAT address in a separate static NAT-with-port-translation rule. For example, if the PAT pool includes 10.1.1.1, then you cannot create a static NAT-with-port-translation rule using 10.1.1.1 as the PAT address.
- If you use a PAT pool and specify an interface for fallback, you cannot specify extended PAT.
- For VoIP deployments that use ICE or TURN, do not use extended PAT. ICE and TURN rely on the PAT binding to be the same for all destinations.

For round robin for a PAT pool:

- (8.4(3) and later, not including 8.5(1) or 8.6(1)) If a host has an existing connection, then subsequent connections from that host will use the same PAT IP address if ports are available. **Note:** This “stickiness” does not survive a failover. If the ASA fails over, then subsequent connections from a host may not use the initial IP address.
- (8.4(2), 8.5(1), and 8.6(1)) If a host has an existing connection, then subsequent connections from that host will likely use *different* PAT addresses for each connection because of the round robin allocation. In this case, you may have problems when accessing two websites that exchange information about the host, for example an e-commerce site and a payment site. When these sites see two different IP addresses for what is supposed to be a single host, the transaction may fail.
- Round robin, especially when combined with extended PAT, can consume a large amount of memory. Because NAT pools are created for every mapped protocol/IP address/port range, round robin results in a large number of concurrent NAT pools, which use memory. Extended PAT results in an even larger number of concurrent NAT pools.

Detailed Steps

	Command	Purpose
Step 1	<p>(Optional)</p> <p>Network object:</p> <pre>object network obj_name {host ip_address range ip_address_1 ip_address_2}</pre> <p>Network object group:</p> <pre>object-group network grp_name {network-object {object net_obj_name host ip_address} group-object grp_obj_name}</pre> <p>Example:</p> <pre>hostname(config)# object network PAT_POOL1 hostname(config-network-object)# range 10.5.1.80 10.7.1.80 hostname(config)# object network PAT_POOL2 hostname(config-network-object)# range 10.9.1.1 10.10.1.1 hostname(config)# object network PAT_IP hostname(config-network-object)# host 10.5.1.79 hostname(config-network-object)# object-group network PAT_POOLS hostname(config-network)# network-object object PAT_POOL1 hostname(config-network)# network-object object PAT_POOL2 hostname(config-network)# network-object object PAT_IP</pre>	<p>Specify the mapped address(es) (that you want to translate to). You can configure a single address or, for a PAT pool, multiple addresses. Configure a network object or network object group. A network object group can contain objects and/or inline addresses. Alternatively, you can skip this step if you want to enter a single IP address as an inline value for the nat command or if you want to use the interface address by specifying the interface keyword.</p> <p>For mapped addresses used as a PAT pool, all addresses in the object or group, including ranges, are used as PAT addresses.</p> <p>Note The object or group cannot contain a subnet.</p> <p>See the “Guidelines and Limitations” section on page 30-2 for information about disallowed mapped IP addresses.</p> <p>For more information about configuring a network object or group, see the “Configuring Objects” section on page 13-3.</p>
Step 2	<pre>object network obj_name</pre> <p>Example:</p> <pre>hostname(config)# object network my-host-obj1</pre>	<p>Configures a network object for which you want to configure NAT, or enters object network configuration mode for an existing network object.</p>
Step 3	<pre>{host ip_address subnet subnet_address netmask range ip_address_1 ip_address_2}</pre> <p>Example:</p> <pre>hostname(config-network-object)# range 10.1.1.1 10.1.1.90</pre>	<p>If you are creating a new network object, defines the real IP address(es) that you want to translate.</p>

Command	Purpose
<p>Step 4</p> <pre> nat [(<i>real_ifc</i>,<i>mapped_ifc</i>)] dynamic {<i>mapped_inline_host_ip</i> <i>mapped_obj</i> pat-pool <i>mapped_obj</i> [round-robin] [extended] [flat [include-reserve]] interface} [interface] [dns] </pre> <p>Example:</p> <pre> hostname(config-network-object)# nat (any,outside) dynamic interface </pre>	<p>Configures dynamic PAT for the object IP addresses. You can only define a single NAT rule for a given object. See the “Additional Guidelines” section on page 30-2.</p> <p>See the following guidelines:</p> <ul style="list-style-type: none"> • Interfaces—(Required for transparent mode) Specify the real and mapped interfaces. Be sure to include the parentheses in your command. In routed mode, if you do not specify the real and mapped interfaces, all interfaces are used; you can also specify the keyword any for one or both of the interfaces. • Mapped IP address—You can specify the mapped IP address as: <ul style="list-style-type: none"> – An inline host address. – An existing network object that is defined as a host address (see Step 1). – pat-pool—An existing network object or group that contains multiple addresses. – interface—(Routed mode only) The IP address of the mapped interface is used as the mapped address. For this option, you must configure a specific interface for the <i>mapped_ifc</i>. You must use this keyword when you want to use the interface IP address; you cannot enter it inline or as an object. • For a PAT pool, you can specify one or more of the following options: <ul style="list-style-type: none"> – Round robin—The round-robin keyword enables round-robin address allocation for a PAT pool. Without round robin, by default all ports for a PAT address will be allocated before the next PAT address is used. The round-robin method assigns an address/port from each PAT address in the pool before returning to use the first address again, and then the second address, and so on. <p>(continued)</p>

Command	Purpose
	<p>(continued)</p> <ul style="list-style-type: none"> - Extended PAT—(8.4(3) and later, not including 8.5(1) or 8.6(1)) The extended keyword enables extended PAT. Extended PAT uses 65535 ports per <i>service</i>, as opposed to per IP address, by including the destination address and port in the translation information. Normally, the destination port and address are not considered when creating PAT translations, so you are limited to 65535 ports per PAT address. For example, with extended PAT, you can create a translation of 10.1.1.1:1027 when going to 192.168.1.7:23 as well as a translation of 10.1.1.1:1027 when going to 192.168.1.7:80. - Flat range—(8.4(3) and later, not including 8.5(1) or 8.6(1)) The flat keyword enables use of the entire 1024 to 65535 port range when allocating ports. When choosing the mapped port number for a translation, the ASA uses the real source port number if it is available. However, without this option, if the real port is <i>not</i> available, by default the mapped ports are chosen from the same range of ports as the real port number: 1 to 511, 512 to 1023, and 1024 to 65535. To avoid running out of ports at the low ranges, configure this setting. To use the entire range of 1 to 65535, also specify the include-reserve keyword. • Interface PAT fallback—(Optional) The interface keyword enables interface PAT fallback when entered after a primary PAT address. After the primary PAT address(es) are used up, then the IP address of the mapped interface is used. For this option, you must configure a specific interface for the <i>mapped_ifc</i>. (You cannot specify interface in transparent mode). • DNS—(Optional) The dns keyword translates DNS replies. Be sure DNS inspection is enabled (it is enabled by default). See the “DNS and NAT” section on page 29-24 for more information.

Examples

The following example configures dynamic PAT that hides the 192.168.2.0 network behind address 10.2.2.2:

```
hostname(config)# object network my-inside-net
hostname(config-network-object)# subnet 192.168.2.0 255.255.255.0
hostname(config-network-object)# nat (inside,outside) dynamic 10.2.2.2
```

The following example configures dynamic PAT that hides the 192.168.2.0 network behind the outside interface address:

```
hostname(config)# object network my-inside-net
hostname(config-network-object)# subnet 192.168.2.0 255.255.255.0
hostname(config-network-object)# nat (inside,outside) dynamic interface
```

Configuring Static NAT or Static NAT-with-Port-Translation

This section describes how to configure a static NAT rule using network object NAT. For more information, see the [“Static NAT” section on page 29-3](#).

Detailed Steps

	Command	Purpose
Step 1	<p>(Optional)</p> <p>Network object:</p> <pre>object network obj_name {host ip_address subnet subnet_address netmask range ip_address_1 ip_address_2}</pre> <p>Network object group:</p> <pre>object-group network grp_name {network-object {object net_obj_name subnet_address netmask host ip_address} group-object grp_obj_name}</pre> <p>Example:</p> <pre>hostname(config)# object network MAPPED_IPS hostname(config-network-object)# subnet 10.1.1.0 255.255.255.0</pre>	<p>To specify the mapped addresses (that you want to translate to), configure a network object or network object group. A network object group can contain objects and/or inline addresses. Alternatively, you can skip this step if you want to enter the IP addresses as an inline value for the nat command or if you want to use the interface address (for static NAT-with-port-translation) by specifying the interface keyword.</p> <p>See the “Guidelines and Limitations” section on page 30-2 for information about disallowed mapped IP addresses.</p> <p>For more information about configuring a network object or group, see the “Configuring Objects” section on page 13-3.</p>
Step 2	<pre>object network obj_name</pre> <p>Example:</p> <pre>hostname(config)# object network my-host-obj1</pre>	<p>Configures a network object for which you want to configure NAT, or enters object network configuration mode for an existing network object.</p>
Step 3	<pre>{host ip_address subnet subnet_address netmask range ip_address_1 ip_address_2}</pre> <p>Example:</p> <pre>hostname(config-network-object)# subnet 10.2.1.0 255.255.255.0</pre>	<p>If you are creating a new network object, defines the real IP address(es) that you want to translate.</p>

Command	Purpose
<p>Step 4</p> <pre> nat [(<i>real_ifc</i>,<i>mapped_ifc</i>)] static {<i>mapped_inline_ip</i> <i>mapped_obj</i> interface} [dns service {tcp udp} <i>real_port</i> <i>mapped_port</i>] [no-proxy-arp] Example: hostname(config-network-object)# nat (inside,outside) static MAPPED_IPS service tcp 80 8080 </pre>	<p>Configures static NAT for the object IP addresses.</p> <p>Note You can only define a single NAT rule for a given object. See the “Additional Guidelines” section on page 30-2.</p> <p>See the following guidelines:</p> <ul style="list-style-type: none"> • Interfaces—(Required for transparent mode) Specify the real and mapped interfaces. Be sure to include the parentheses in your command. In routed mode, if you do not specify the real and mapped interfaces, all interfaces are used; you can also specify the keyword any for one or both of the interfaces. • Mapped IP Addresses—You can specify the mapped IP address as: <ul style="list-style-type: none"> – An inline IP address. The netmask or range for the mapped network is the same as that of the real network. For example, if the real network is a host, then this address will be a host address. In the case of a range, then the mapped addresses include the same number of addresses as the real range. For example, if the real address is defined as a range from 10.1.1.1 through 10.1.1.6, and you specify 172.20.1.1 as the mapped address, then the mapped range will include 172.20.1.1 through 172.20.1.6. – An existing network object or group (see Step 1). – interface—(Static NAT-with-port-translation only; routed mode) For this option, you must configure a specific interface for the <i>mapped_ifc</i>. Be sure to also configure the service keyword. <p>Typically, you configure the same number of mapped addresses as real addresses for a one-to-one mapping. You can, however, have a mismatched number of addresses. For more information, see the “Static NAT” section on page 29-3.</p> • DNS—(Optional) The dns keyword translates DNS replies. Be sure DNS inspection is enabled (it is enabled by default). See the “DNS and NAT” section on page 29-24 for more information. This option is not available if you specify the service keyword. • Port translation—(Static NAT-with-port-translation only) Specify tcp or udp and the real and mapped ports. You can enter either a port number or a well-known port name (such as ftp). • No Proxy ARP—(Optional) Specify no-proxy-arp to disable proxy ARP for incoming packets to the mapped IP addresses. See the “Mapped Addresses and Routing” section on page 29-22 for more information.

Examples

The following example configures static NAT for the real host 10.1.1.1 on the inside to 10.2.2.2 on the outside with DNS rewrite enabled.

```
hostname(config)# object network my-host-obj1
hostname(config-network-object)# host 10.1.1.1
hostname(config-network-object)# nat (inside,outside) static 10.2.2.2 dns
```

The following example configures static NAT for the real host 10.1.1.1 on the inside to 2.2.2.2 on the outside using a mapped object.

```
hostname(config)# object network my-mapped-obj
hostname(config-network-object)# host 10.2.2.2

hostname(config-network-object)# object network my-host-obj1
hostname(config-network-object)# host 10.1.1.1
hostname(config-network-object)# nat (inside,outside) static my-mapped-obj
```

The following example configures static NAT-with-port-translation for 10.1.1.1 at TCP port 21 to the outside interface at port 2121.

```
hostname(config)# object network my-ftp-server
hostname(config-network-object)# host 10.1.1.1
hostname(config-network-object)# nat (inside,outside) static interface service tcp 21 2121
```

Configuring Identity NAT

This section describes how to configure an identity NAT rule using network object NAT. For more information, see the [“Identity NAT” section on page 29-11](#).

Detailed Steps

	Command	Purpose
Step 1	(Optional) <pre>object network obj_name {host ip_address subnet subnet_address netmask range ip_address_1 ip_address_2}</pre> Example: <pre>hostname(config)# object network MAPPED_IPS hostname(config-network-object)# subnet 10.1.1.0 255.255.255.0</pre>	For the mapped addresses (which will be the same as the real addresses), configure a network object. Alternatively, you can skip this step if you want to enter the IP addresses as an inline value for the nat command. For more information about configuring a network object, see the “Configuring Objects” section on page 13-3 .
Step 2	<pre>object network obj_name</pre> Example: <pre>hostname(config)# object network my-host-obj1</pre>	Configures a network object for which you want to perform identity NAT, or enters object network configuration mode for an existing network object.

Command	Purpose
<p>Step 3</p> <pre>{host ip_address subnet subnet_address netmask range ip_address_1 ip_address_2}</pre> <p>Example:</p> <pre>hostname(config-network-object)# subnet 10.1.1.0 255.255.255.0</pre>	<p>If you are creating a new network object, defines the real IP address(es) to which you want to perform identity NAT. If you configured a network object for the mapped addresses in Step 1, then these addresses must match.</p>
<p>Step 4</p> <pre>nat [(real_ifc,mapped_ifc)] static {mapped_inline_ip mapped_obj} [no-proxy-arp] [route-lookup]</pre> <p>Example:</p> <pre>hostname(config-network-object)# nat (inside,outside) static MAPPED_IPS</pre>	<p>Configures identity NAT for the object IP addresses.</p> <p>Note You can only define a single NAT rule for a given object. See the “Additional Guidelines” section on page 30-2.</p> <p>See the following guidelines:</p> <ul style="list-style-type: none"> • Interfaces—(Required for transparent mode) Specify the real and mapped interfaces. Be sure to include the parentheses in your command. In routed mode, if you do not specify the real and mapped interfaces, all interfaces are used; you can also specify the keyword any for one or both of the interfaces. • Mapped IP addresses—Be sure to configure the same IP address for both the mapped and real address. Use one of the following: <ul style="list-style-type: none"> – Network object—Including the same IP address as the real object (see Step 1). – Inline IP address—The netmask or range for the mapped network is the same as that of the real network. For example, if the real network is a host, then this address will be a host address. In the case of a range, then the mapped addresses include the same number of addresses as the real range. For example, if the real address is defined as a range from 10.1.1.1 through 10.1.1.6, and you specify 10.1.1.1 as the mapped address, then the mapped range will include 10.1.1.1 through 10.1.1.6. • No Proxy ARP—Specify no-proxy-arp to disable proxy ARP for incoming packets to the mapped IP addresses. See the “Mapped Addresses and Routing” section on page 29-22 for more information. • Route lookup—(Routed mode only; interface(s) specified) Specify route-lookup to determine the egress interface using a route lookup instead of using the interface specified in the NAT command. See the “Determining the Egress Interface” section on page 29-24 for more information.

Example

The following example maps a host address to itself using an inline mapped address:

```
hostname(config)# object network my-host-obj1
hostname(config-network-object)# host 10.1.1.1
hostname(config-network-object)# nat (inside,outside) static 10.1.1.1
```

The following example maps a host address to itself using a network object:

```
hostname(config)# object network my-host-obj1-identity
hostname(config-network-object)# host 10.1.1.1

hostname(config-network-object)# object network my-host-obj1
hostname(config-network-object)# host 10.1.1.1
hostname(config-network-object)# nat (inside,outside) static my-host-obj1-identity
```

Monitoring Network Object NAT

To monitor object NAT, enter one of the following commands:

Command	Purpose
<code>show nat</code>	Shows NAT statistics, including hits for each NAT rule.
<code>show nat pool</code>	Shows NAT pool statistics, including the addresses and ports allocated, and how many times they were allocated.
<code>show running-config nat</code>	Shows the NAT configuration. Note You cannot view the NAT configuration using the <code>show running-config object</code> command. You cannot reference objects or object groups that have not yet been created in <code>nat</code> commands. To avoid forward or circular references in <code>show</code> command output, the <code>show running-config</code> command shows the <code>object</code> command two times: first, where the IP address(es) are defined; and later, where the <code>nat</code> command is defined. This command output guarantees that objects are defined first, then object groups, and finally NAT. For example: <pre>hostname# show running-config ... object network obj1 range 192.168.49.1 192.150.49.100 object network obj2 object 192.168.49.100 object network network-1 subnet <network-1> object network network-2 subnet <network-2> object-group network pool network-object object obj1 network-object object obj2 ... object network network-1 nat (inside,outside) dynamic pool object network network-2 nat (inside,outside) dynamic pool</pre>
<code>show xlate</code>	Shows current NAT session information.

Configuration Examples for Network Object NAT


This section includes the following configuration examples:

- [Providing Access to an Inside Web Server \(Static NAT\)](#), page 30-15
- [NAT for Inside Hosts \(Dynamic NAT\) and NAT for an Outside Web Server \(Static NAT\)](#), page 30-16
- [Inside Load Balancer with Multiple Mapped Addresses \(Static NAT, One-to-Many\)](#), page 30-17
- [Single Address for FTP, HTTP, and SMTP \(Static NAT-with-Port-Translation\)](#), page 30-18
- [DNS Server on Mapped Interface, Web Server on Real Interface \(Static NAT with DNS Modification\)](#), page 30-19
- [DNS Server and Web Server on Mapped Interface, Web Server is Translated \(Static NAT with DNS Modification\)](#), page 30-21

Providing Access to an Inside Web Server (Static NAT)

The following example performs static NAT for an inside web server. The real address is on a private network, so a public address is required. Static NAT is necessary so hosts can initiate traffic to the web server at a fixed address. (See [Figure 30-1](#)).

Figure 30-1 Static NAT for an Inside Web Server

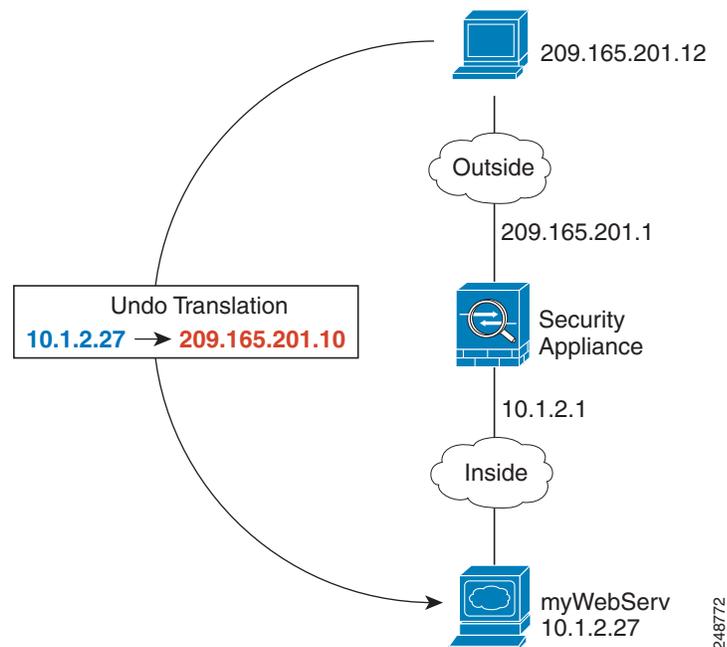

Step 1 Create a network object for the internal web server:

```
hostname(config)# object network myWebServ
```

Step 2 Define the web server address:

```
hostname(config-network-object)# host 10.1.2.27
```


Step 3 Configure static NAT for the object:

```
hostname(config-network-object)# nat (inside,outside) static 209.165.201.10
```

NAT for Inside Hosts (Dynamic NAT) and NAT for an Outside Web Server (Static NAT)

The following example configures dynamic NAT for inside users on a private network when they access the outside. Also, when inside users connect to an outside web server, that web server address is translated to an address that appears to be on the inside network. (See [Figure 30-2](#)).

Figure 30-2 Dynamic NAT for Inside, Static NAT for Outside Web Server

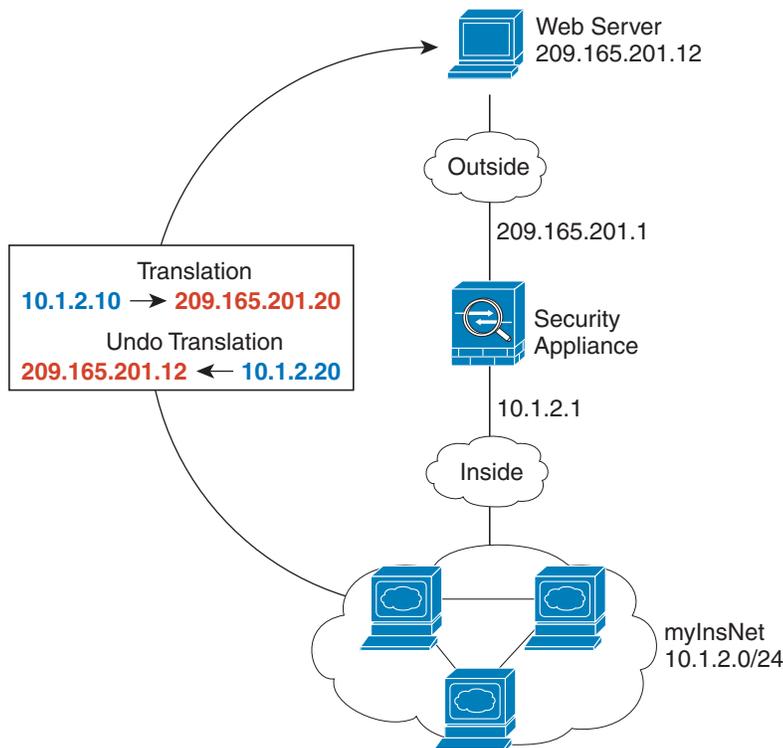

Step 1 Create a network object for the dynamic NAT pool to which you want to translate the inside addresses:

```
hostname(config)# object network myNatPool
hostname(config-network-object)# range 209.165.201.20 209.165.201.30
```

Step 2 Create a network object for the inside network:

```
hostname(config)# object network myInsNet
hostname(config-network-object)# subnet 10.1.2.0 255.255.255.0
```

Step 3 Enable dynamic NAT for the inside network:

```
hostname(config-network-object)# nat (inside,outside) dynamic myNatPool
```

Step 4 Create a network object for the outside web server:

```
hostname(config)# object network myWebServ
```

Step 5 Define the web server address:

```
hostname(config-network-object)# host 209.165.201.12
```


Step 6 Configure static NAT for the web server:

```
hostname(config-network-object)# nat (outside,inside) static 10.1.2.20
```

Inside Load Balancer with Multiple Mapped Addresses (Static NAT, One-to-Many)

The following example shows an inside load balancer that is translated to multiple IP addresses. When an outside host accesses one of the mapped IP addresses, it is untranslated to the single load balancer address. Depending on the URL requested, it redirects traffic to the correct web server. (See [Figure 30-3](#)).

Figure 30-3 Static NAT with One-to-Many for an Inside Load Balancer

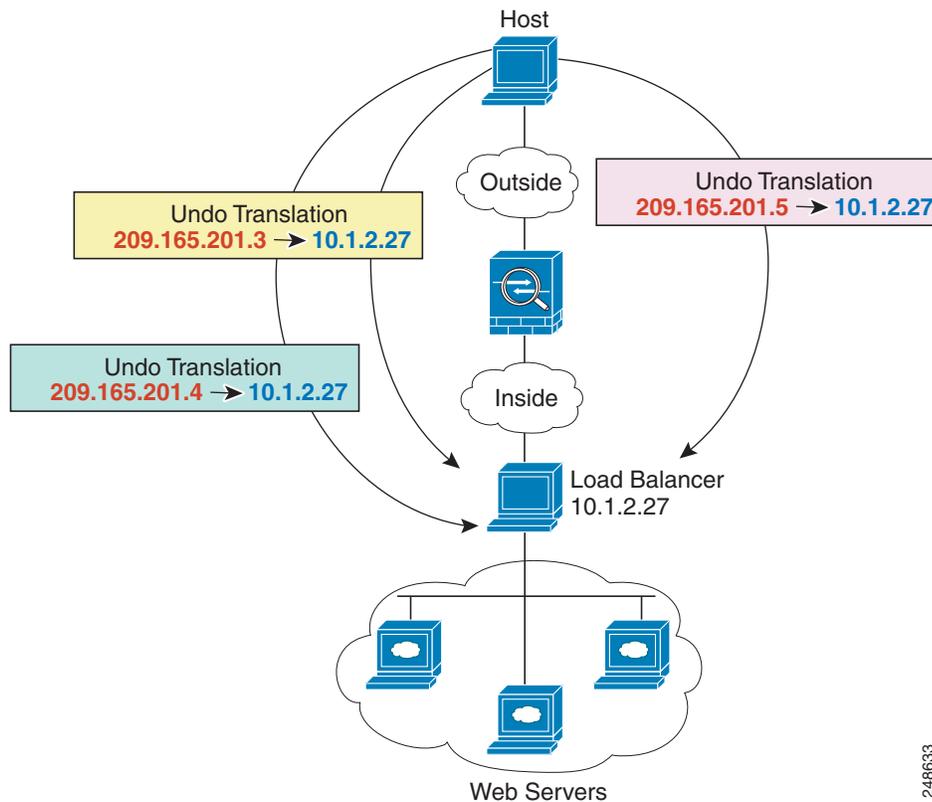

Step 1 Create a network object for the addresses to which you want to map the load balancer:

```
hostname(config)# object network myPublicIPs
hostname(config-network-object)# range 209.165.201.3 209.265.201.8
```

Step 2 Create a network object for the load balancer:

```
hostname(config)# object network myLBHost
```

Step 3 Define the load balancer address:

```
hostname(config-network-object)# host 10.1.2.27
```


Step 4 Configure static NAT for the load balancer:

```
hostname(config-network-object)# nat (inside,outside) static myPublicIPs
```

Single Address for FTP, HTTP, and SMTP (Static NAT-with-Port-Translation)

The following static NAT-with-port-translation example provides a single address for remote users to access FTP, HTTP, and SMTP. These servers are actually different devices on the real network, but for each server, you can specify static NAT-with-port-translation rules that use the same mapped IP address, but different ports. (See [Figure 30-4](#).)

Figure 30-4 Static NAT-with-Port-Translation

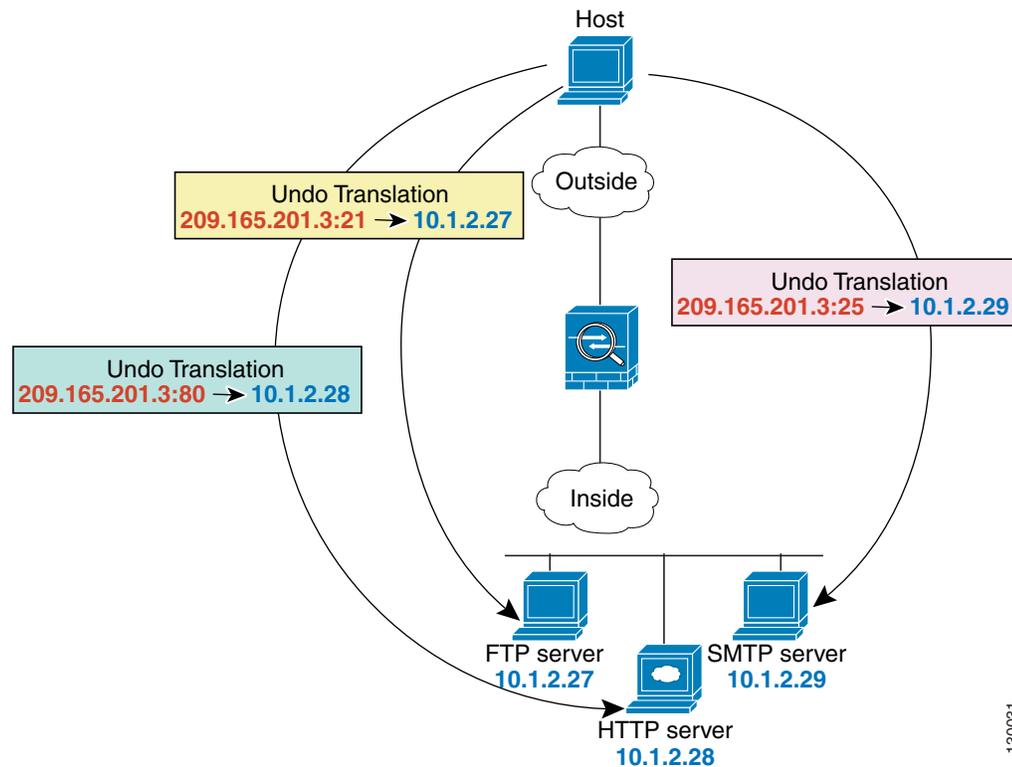

130031

Step 1 Create a network object for the FTP server address:

```
hostname(config)# object network FTP_SERVER
```

Step 2 Define the FTP server address, and configure static NAT with identity port translation for the FTP server:

```
hostname(config-network-object)# host 10.1.2.27
hostname(config-network-object)# nat (inside,outside) static 209.165.201.3 service tcp ftp
ftp
```

Step 3 Create a network object for the HTTP server address:

```
hostname(config)# object network HTTP_SERVER
```

Step 4 Define the HTTP server address, and configure static NAT with identity port translation for the HTTP server:

```
hostname(config-network-object)# host 10.1.2.28
hostname(config-network-object)# nat (inside,outside) static 209.165.201.3 service tcp
http http
```

Step 5 Create a network object for the SMTP server address:

```
hostname(config)# object network SMTP_SERVER
```

Step 6 Define the SMTP server address, and configure static NAT with identity port translation for the SMTP server:


```
hostname(config-network-object)# host 10.1.2.29
hostname(config-network-object)# nat (inside,outside) static 209.165.201.3 service tcp
smtp smtp
```

DNS Server on Mapped Interface, Web Server on Real Interface (Static NAT with DNS Modification)

For example, a DNS server is accessible from the outside interface. A server, ftp.cisco.com, is on the inside interface. You configure the ASA to statically translate the ftp.cisco.com real address (10.1.3.14) to a mapped address (209.165.201.10) that is visible on the outside network. (See [Figure 30-5](#).) In this case, you want to enable DNS reply modification on this static rule so that inside users who have access to ftp.cisco.com using the real address receive the real address from the DNS server, and not the mapped address.

When an inside host sends a DNS request for the address of ftp.cisco.com, the DNS server replies with the mapped address (209.165.201.10). The ASA refers to the static rule for the inside server and translates the address inside the DNS reply to 10.1.3.14. If you do not enable DNS reply modification, then the inside host attempts to send traffic to 209.165.201.10 instead of accessing ftp.cisco.com directly.

Figure 30-5 DNS Reply Modification

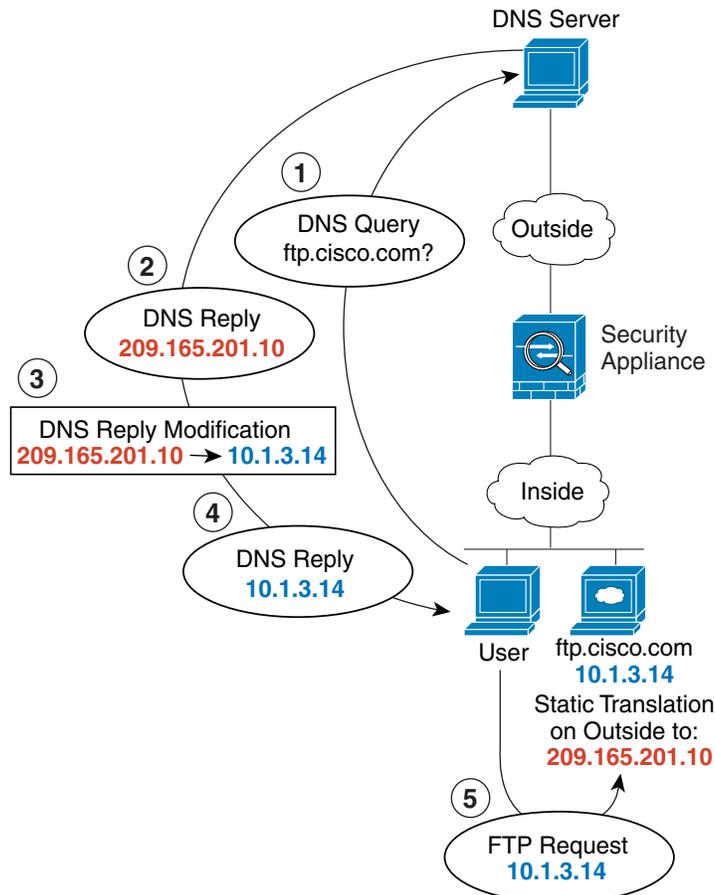

130021

Step 1 Create a network object for the FTP server address:

```
hostname(config)# object network FTP_SERVER
```


Step 2 Define the FTP server address, and configure static NAT with DNS modification:

```
hostname(config-network-object)# host 10.1.3.14
hostname(config-network-object)# nat (inside,outside) static 209.165.201.10 dns
```

DNS Server and Web Server on Mapped Interface, Web Server is Translated (Static NAT with DNS Modification)

Figure 30-6 shows a web server and DNS server on the outside. The ASA has a static translation for the outside server. In this case, when an inside user requests the address for ftp.cisco.com from the DNS server, the DNS server responds with the real address, 209.165.201.10. Because you want inside users to use the mapped address for ftp.cisco.com (10.1.2.56) you need to configure DNS reply modification for the static translation.

Figure 30-6 DNS Reply Modification Using Outside NAT

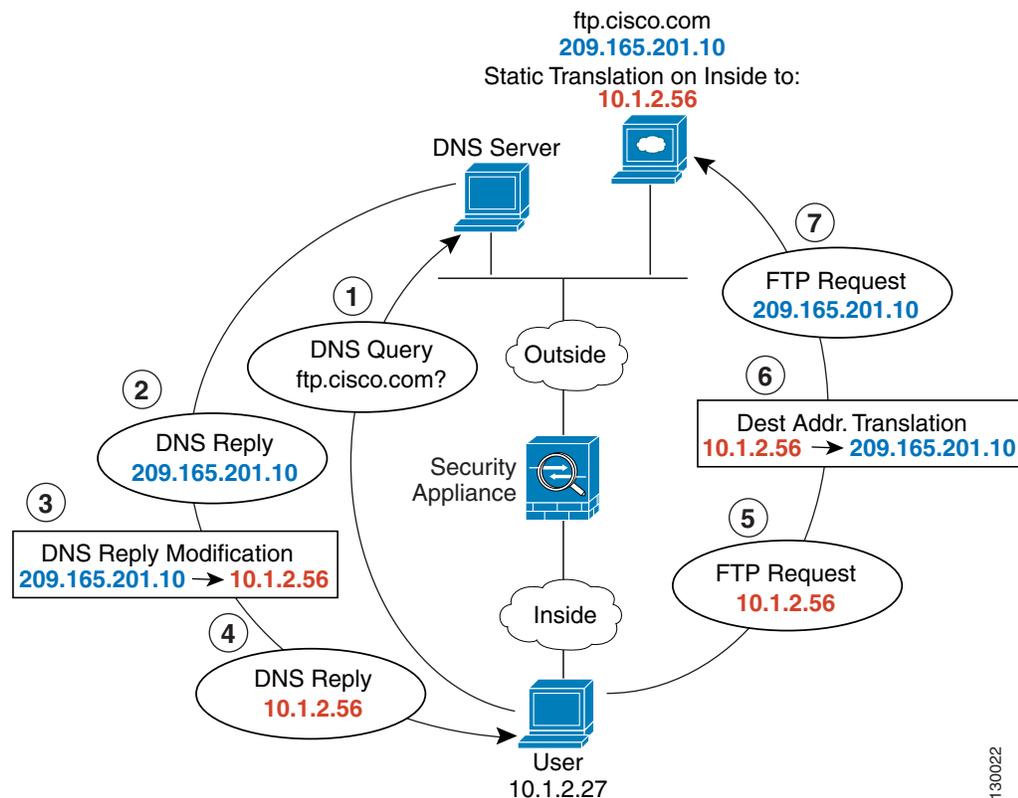

Step 1 Create a network object for the FTP server address:

```
hostname(config)# object network FTP_SERVER
```

Step 2 Define the FTP server address, and configure static NAT with DNS modification:

```
hostname(config-network-object)# host 209.165.201.10
hostname(config-network-object)# nat (outside,inside) static 10.1.2.56 dns
```

Feature History for Network Object NAT

Table 30-1 lists each feature change and the platform release in which it was implemented.

Table 30-1 Feature History for Network Object NAT

Feature Name	Platform Releases	Feature Information
Network Object NAT	8.3(1)	Configures NAT for a network object IP address(es). We introduced or modified the following commands: nat (object network configuration mode), show nat , show xlate , show nat pool .
Identity NAT configurable proxy ARP and route lookup	8.4(2)	In earlier releases for identity NAT, proxy ARP was disabled, and a route lookup was always used to determine the egress interface. You could not configure these settings. In 8.4(2) and later, the default behavior for identity NAT was changed to match the behavior of other static NAT configurations: proxy ARP is enabled, and the NAT configuration determines the egress interface (if specified) by default. You can leave these settings as is, or you can enable or disable them discretely. Note that you can now also disable proxy ARP for regular static NAT. When upgrading to 8.4(2) from 8.3(1), 8.3(2), and 8.4(1), all identity NAT configurations will now include the no-proxy-arp and route-lookup keywords, to maintain existing functionality. We modified the following commands: nat static [no-proxy-arp] [route-lookup].
PAT pool and round robin address assignment	8.4(2)	You can now specify a pool of PAT addresses instead of a single address. You can also optionally enable round-robin assignment of PAT addresses instead of first using all ports on a PAT address before using the next address in the pool. These features help prevent a large number of connections from a single PAT address from appearing to be part of a DoS attack and makes configuration of large numbers of PAT addresses easy. We modified the following commands: nat dynamic [pat-pool mapped_object] [round-robin].
Round robin PAT pool allocation uses the same IP address for existing hosts	8.4(3)	When using a PAT pool with round robin allocation, if a host has an existing connection, then subsequent connections from that host will use the same PAT IP address if ports are available. We did not modify any commands. <i>This feature is not available in 8.5(1) or 8.6(1).</i>

Table 30-1 Feature History for Network Object NAT (continued)

Feature Name	Platform Releases	Feature Information
Flat range of PAT ports for a PAT pool	8.4(3)	<p>If available, the real source port number is used for the mapped port. However, if the real port is <i>not</i> available, by default the mapped ports are chosen from the same range of ports as the real port number: 0 to 511, 512 to 1023, and 1024 to 65535. Therefore, ports below 1024 have only a small PAT pool.</p> <p>If you have a lot of traffic that uses the lower port ranges, when using a PAT pool, you can now specify a flat range of ports to be used instead of the three unequal-sized tiers: either 1024 to 65535, or 1 to 65535.</p> <p>We modified the following commands: nat dynamic [pat-pool mapped_object [flat [include-reserve]]].</p> <p><i>This feature is not available in 8.5(1) or 8.6(1).</i></p>

Table 30-1 Feature History for Network Object NAT (continued)

Feature Name	Platform Releases	Feature Information
Extended PAT for a PAT pool	8.4(3)	<p>Each PAT IP address allows up to 65535 ports. If 65535 ports do not provide enough translations, you can now enable extended PAT for a PAT pool. Extended PAT uses 65535 ports per <i>service</i>, as opposed to per IP address, by including the destination address and port in the translation information.</p> <p>We modified the following commands: nat dynamic [pat-pool mapped_object [extended]].</p> <p><i>This feature is not available in 8.5(1) or 8.6(1).</i></p>
Automatic NAT rules to translate a VPN peer's local IP address back to the peer's real IP address	8.4(3)	<p>In rare situations, you might want to use a VPN peer's real IP address on the inside network instead of an assigned local IP address. Normally with VPN, the peer is given an assigned local IP address to access the inside network. However, you might want to translate the local IP address back to the peer's real public IP address if, for example, your inside servers and network security is based on the peer's real IP address.</p> <p>You can enable this feature on one interface per tunnel group. Object NAT rules are dynamically added and deleted when the VPN session is established or disconnected. You can view the rules using the show nat command.</p> <p>Note Because of routing issues, we do not recommend using this feature unless you know you need this feature; contact Cisco TAC to confirm feature compatibility with your network. See the following limitations:</p> <ul style="list-style-type: none"> • Only supports Cisco IPsec and AnyConnect Client. • Return traffic to the public IP addresses must be routed back to the ASA so the NAT policy and VPN policy can be applied. • Does not support load-balancing (because of routing issues). • Does not support roaming (public IP changing). <p>We introduced the following command: nat-assigned-to-public-ip interface (tunnel-group general-attributes configuration mode).</p>



CHAPTER 31

Configuring Twice NAT

Twice NAT lets you identify both the source and destination address in a single rule. This chapter shows you how to configure twice NAT and includes the following sections:

- [Information About Twice NAT, page 31-1](#)
- [Licensing Requirements for Twice NAT, page 31-2](#)
- [Prerequisites for Twice NAT, page 31-2](#)
- [Guidelines and Limitations, page 31-2](#)
- [Default Settings, page 31-3](#)
- [Configuring Twice NAT, page 31-3](#)
- [Monitoring Twice NAT, page 31-24](#)
- [Configuration Examples for Twice NAT, page 31-24](#)
- [Feature History for Twice NAT, page 31-28](#)



Note

For detailed information about how NAT works, see [Chapter 29, “Information About NAT.”](#)

Information About Twice NAT

Twice NAT lets you identify both the source and destination address in a single rule. Specifying both the source and destination addresses lets you specify that a source address should be translated to A when going to destination X, but be translated to B when going to destination Y, for example.



Note

For static NAT, the rule is bidirectional, so be aware that “source” and “destination” are used in commands and descriptions throughout this guide even though a given connection might originate at the “destination” address. For example, if you configure static NAT with port address translation, and specify the source address as a Telnet server, and you want all traffic going to that Telnet server to have the port translated from 2323 to 23, then in the command, you must specify the *source* ports to be translated (real: 23, mapped: 2323). You specify the source ports because you specified the Telnet server address as the source address.

The destination address is optional. If you specify the destination address, you can either map it to itself (identity NAT), or you can map it to a different address. The destination mapping is always a static mapping.

Twice NAT also lets you use service objects for static NAT-with-port-translation; network object NAT only accepts inline definition.

For detailed information about the differences between twice NAT and network object NAT, see the [“How NAT is Implemented” section on page 29-16](#).

Twice NAT rules are added to section 1 of the NAT rules table, or if specified, section 3. For more information about NAT ordering, see the [“NAT Rule Order” section on page 29-20](#).

Licensing Requirements for Twice NAT

Model	License Requirement
All models	Base License.

Prerequisites for Twice NAT

- For both the real and mapped addresses, configure network objects or network object groups (the **object network** or **object-group network** command). Network object groups are particularly useful for creating a mapped address pool with discontinuous IP address ranges or multiple hosts or subnets. To create a network object or group, see the [“Configuring Objects and Groups” section on page 13-1](#).
- For static NAT-with-port-translation, configure TCP or UDP service objects (the **object service** command). To create a service object, see the [“Configuring a Service Object” section on page 13-4](#).

For specific guidelines for objects and groups, see the configuration section for the NAT type you want to configure. See also the [“Guidelines and Limitations” section](#).

Guidelines and Limitations

This section includes the guidelines and limitations for this feature.

Context Mode Guidelines

Supported in single and multiple context mode.

Firewall Mode Guidelines

- Supported in routed and transparent firewall mode.
- In transparent mode, you must specify the real and mapped interfaces; you cannot use **any**.
- In transparent mode, you cannot configure interface PAT, because the transparent mode interfaces do not have IP addresses. You also cannot use the management IP address as a mapped address.

IPv6 Guidelines

Does not support IPv6.

Additional Guidelines

- If you change the NAT configuration, and you do not want to wait for existing translations to time out before the new NAT information is used, you can clear the translation table using the **clear xlate** command. However, clearing the translation table disconnects all current connections that use translations.



Note If you remove a dynamic NAT or PAT rule, and then add a new rule with mapped addresses that overlap the addresses in the removed rule, then the new rule will not be used until all connections associated with the removed rule time out or are cleared using the **clear xlate** command. This safeguard ensures that the same address is not assigned to multiple hosts.

- Objects and object groups used in NAT cannot be undefined; they must include IP addresses.
- You can use the same objects in multiple rules.
- The mapped IP address pool cannot include:
 - The mapped interface IP address. If you specify **any** interface for the rule, then all interface IP addresses are disallowed. For interface PAT (routed mode only), use the **interface** keyword instead of the IP address.
 - (Transparent mode) The management IP address.
 - (Dynamic NAT) The standby interface IP address when VPN is enabled.
 - Existing VPN pool addresses.

Default Settings

- By default, the rule is added to the end of section 1 of the NAT table.
- (Routed mode) The default real and mapped interface is Any, which applies the rule to all interfaces.
- (8.3(1), 8.3(2), and 8.4(1)) The default behavior for identity NAT has proxy ARP disabled. You cannot configure this setting. (8.4(2) and later) The default behavior for identity NAT has proxy ARP enabled, matching other static NAT rules. You can disable proxy ARP if desired.
- If you specify an optional interface, then the ASA uses the NAT configuration to determine the egress interface. (8.3(1) through 8.4(1)) The only exception is for identity NAT, which always uses a route lookup, regardless of the NAT configuration. (8.4(2) and later) For identity NAT, the default behavior is to use the NAT configuration, but you have the option to always use a route lookup instead.

Configuring Twice NAT

This section describes how to configure twice NAT. This section includes the following topics:

- [Configuring Dynamic NAT, page 31-4](#)
- [Configuring Dynamic PAT \(Hide\), page 31-8](#)
- [Configuring Static NAT or Static NAT-with-Port-Translation, page 31-15](#)
- [Configuring Identity NAT, page 31-20](#)

Configuring Dynamic NAT

This section describes how to configure twice NAT for dynamic NAT. For more information, see the [“Dynamic NAT” section on page 29-8](#).

Detailed Steps

	Command	Purpose
Step 1	<p>Network object:</p> <pre>object network obj_name {host ip_address subnet subnet_address netmask range ip_address_1 ip_address_2}</pre> <p>Network object group:</p> <pre>object-group network grp_name {network-object {object net_obj_name subnet_address netmask host ip_address} group-object grp_obj_name}</pre> <p>Example:</p> <pre>hostname(config)# object network MyInsNet hostname(config-network-object)# subnet 10.1.1.0 255.255.255.0</pre>	<p>Configure the real source addresses.</p> <p>You can configure either a network object or a network object group. For more information, see the “Configuring Objects” section on page 13-3.</p> <p>If you want to translate all traffic, you can skip this step and specify the any keyword instead of creating an object or group.</p>
Step 2	<p>Network object:</p> <pre>object network obj_name range ip_address_1 ip_address_2</pre> <p>Network object group:</p> <pre>object-group network grp_name {network-object {object net_obj_name host ip_address} group-object grp_obj_name}</pre> <p>Example:</p> <pre>hostname(config)# object network NAT_POOL hostname(config-network-object)# range 209.165.201.10 209.165.201.20</pre>	<p>Configure the mapped source addresses.</p> <p>You can configure either a network object or a network object group.</p> <p>For dynamic NAT, you typically configure a larger group of addresses to be mapped to a smaller group. If a mapped network object contains both ranges and host IP addresses, then the ranges are used for dynamic NAT, and then the host IP addresses are used as a PAT fallback.</p> <p>Note The mapped object or group cannot contain a subnet.</p> <p>See the “Guidelines and Limitations” section on page 31-2 for information about disallowed mapped IP addresses.</p>

Command	Purpose
<p>Step 3 (Optional)</p> <p>Network object:</p> <pre>object network obj_name {host ip_address subnet subnet_address netmask range ip_address_1 ip_address_2}</pre> <p>Network object group:</p> <pre>object-group network grp_name {network-object {object net_obj_name subnet_address netmask host ip_address} group-object grp_obj_name}</pre> <p>Example:</p> <pre>hostname(config)# object network Server1 hostname(config-network-object)# host 209.165.201.8</pre>	<p>Configure the real destination addresses.</p> <p>You can configure either a network object or a network object group.</p> <p>Although the main feature of twice NAT is the inclusion of the destination IP address, the destination address is optional. If you do specify the destination address, you can configure static translation for that address or just use identity NAT for it. You might want to configure twice NAT without a destination address to take advantage of some of the other qualities of twice NAT, including the use of network object groups for real addresses, or manually ordering of rules. For more information, see the “Main Differences Between Network Object NAT and Twice NAT” section on page 29-16.</p>
<p>Step 4 (Optional)</p> <p>Network object:</p> <pre>object network obj_name {host ip_address subnet subnet_address netmask range ip_address_1 ip_address_2}</pre> <p>Network object group:</p> <pre>object-group network grp_name {network-object {object net_obj_name subnet_address netmask host ip_address} group-object grp_obj_name}</pre> <p>Example:</p> <pre>hostname(config)# object network Server1_mapped hostname(config-network-object)# host 10.1.1.67</pre>	<p>Configure the mapped destination addresses.</p> <p>The destination translation is always static. For identity NAT, you can skip this step and simply use the same object or group for both the real and mapped addresses.</p> <p>If you want to translate the destination address, you can configure either a network object or a network object group. The static mapping is typically one-to-one, so the real addresses have the same quantity as the mapped addresses. You can, however, have different quantities if desired. For more information, see the “Static NAT” section on page 29-3.</p> <p>For static interface NAT with port translation (routed mode only), you can skip this step and specify the interface keyword instead of a network object/group for the mapped address. For more information, see the “Static Interface NAT with Port Translation” section on page 29-5.</p>

Command	Purpose
<p>Step 5 (Optional)</p> <pre>object service obj_name service {tcp udp} destination operator port</pre> <p>Example:</p> <pre>hostname(config)# object service REAL_SVC hostname(config-service-object)# service tcp destination eq 80</pre> <pre>hostname(config)# object service MAPPED_SVC hostname(config-service-object)# service tcp destination eq 8080</pre>	<p>Configure service objects for:</p> <ul style="list-style-type: none"> • Destination real port • Destination mapped port <p>Dynamic NAT does not support port translation. However, because the <i>destination</i> translation is always static, you can perform port translation for the destination port. A service object can contain both a source and destination port, but only the destination port is used in this case. If you specify the source port, it will be ignored. NAT only supports TCP or UDP. When translating a port, be sure the protocols in the real and mapped service objects are identical (both TCP or both UDP). For identity NAT, you can use the same service object for both the real and mapped ports. The “not equal” (neq) operator is not supported.</p>

Command	Purpose
<p>Step 6</p> <pre> nat [(<i>real_ifc</i>,<i>mapped_ifc</i>)] [<i>line</i> {after-auto [<i>line</i>]}] source dynamic {<i>real_obj</i> any} {<i>mapped_obj</i> [interface]} [destination static {<i>mapped_obj</i> interface} <i>real_obj</i>] [service <i>mapped_dest_svc_obj</i> <i>real_dest_svc_obj</i>] [dns] [inactive] [description <i>desc</i>] </pre> <p>Example:</p> <pre> hostname(config)# nat (inside,outside) source dynamic MyInsNet NAT_POOL destination static Server1_mapped Server1 service MAPPED_SVC REAL_SVC </pre>	<p>Configure dynamic NAT. See the following guidelines:</p> <ul style="list-style-type: none"> • Interfaces—(Required for transparent mode) Specify the real and mapped interfaces. Be sure to include the parentheses in your command. In routed mode, if you do not specify the real and mapped interfaces, all interfaces are used; you can also specify the keyword any for one or both of the interfaces. • Section and Line—(Optional) By default, the NAT rule is added to the end of section 1 of the NAT table (see the “NAT Rule Order” section on page 29-20). If you want to add the rule into section 3 instead (after the network object NAT rules), then use the after-auto keyword. You can insert a rule anywhere in the applicable section using the <i>line</i> argument. • Source addresses: <ul style="list-style-type: none"> – Real—Specify a network object, group, or the any keyword (see Step 1). Use the any keyword if you want to translate all traffic from the real interface to the mapped interface. – Mapped—Specify a different network object or group (see Step 2). You can optionally configure the following fallback method: <p>Interface PAT fallback—(Routed mode only) The interface keyword enables interface PAT fallback. After the mapped IP addresses are used up, then the IP address of the mapped interface is used. For this option, you must configure a specific interface for the <i>mapped_ifc</i>.</p>

Command	Purpose
	<p>(Continued)</p> <ul style="list-style-type: none"> • Destination addresses (Optional): <ul style="list-style-type: none"> – Mapped—Specify a network object or group, or for static interface NAT with port translation only, specify the interface keyword (see Step 4). If you specify interface, be sure to also configure the service keyword. For this option, you must configure a specific interface for the <i>real_ifc</i>. See the “Static Interface NAT with Port Translation” section on page 29-5 for more information. – Real—Specify a network object or group (see Step 3). For identity NAT, simply use the same object or group for both the real and mapped addresses. • Destination port—(Optional) Specify the service keyword along with the mapped and real service objects (see Step 5). For identity port translation, simply use the same service object for both the real and mapped ports. • DNS—(Optional; for a source-only rule) The dns keyword translates DNS replies. Be sure DNS inspection is enabled (it is enabled by default). You cannot configure the dns keyword if you configure a destination address. See the “DNS and NAT” section on page 29-24 for more information. • Inactive—(Optional) To make this rule inactive without having to remove the command, use the inactive keyword. To reactivate it, reenter the whole command without the inactive keyword. • Description—(Optional) Provide a description up to 200 characters using the description keyword.

Configuring Dynamic PAT (Hide)

This section describes how to configure twice NAT for dynamic PAT (hide). For more information, see the “[Dynamic PAT](#)” section on page 29-10.

Guidelines

For a PAT pool:

- If available, the real source port number is used for the mapped port. However, if the real port is *not* available, by default the mapped ports are chosen from the same range of ports as the real port number: 0 to 511, 512 to 1023, and 1024 to 65535. Therefore, ports below 1024 have only a small PAT pool that can be used. (8.4(3) and later, not including 8.5(1) or 8.6(1)) If you have a lot of traffic that uses the lower port ranges, you can now specify a flat range of ports to be used instead of the three unequal-sized tiers: either 1024 to 65535, or 1 to 65535.
- (8.4(3) and later, not including 8.5(1) or 8.6(1)) If you use the same PAT pool object in two separate rules, then be sure to specify the same options for each rule. For example, if one rule specifies extended PAT and a flat range, then the other rule must also specify extended PAT and a flat range.

For extended PAT for a PAT pool (8.4(3) and later, not including 8.5(1) or 8.6(1)):

- Many application inspections do not support extended PAT. See the “Default Settings” section on page 42-4 in Chapter 42, “Getting Started with Application Layer Protocol Inspection,” for a complete list of unsupported inspections.
- If you enable extended PAT for a dynamic PAT rule, then you cannot also use an address in the PAT pool as the PAT address in a separate static NAT-with-port-translation rule. For example, if the PAT pool includes 10.1.1.1, then you cannot create a static NAT-with-port-translation rule using 10.1.1.1 as the PAT address.
- If you use a PAT pool and specify an interface for fallback, you cannot specify extended PAT.
- For VoIP deployments that use ICE or TURN, do not use extended PAT. ICE and TURN rely on the PAT binding to be the same for all destinations.

For round robin for a PAT pool:

- (8.4(3) and later, not including 8.5(1) or 8.6(1)) If a host has an existing connection, then subsequent connections from that host will use the same PAT IP address if ports are available. **Note:** This “stickiness” does not survive a failover. If the ASA fails over, then subsequent connections from a host may not use the initial IP address.
- (8.4(2), 8.5(1), and 8.6(1)) If a host has an existing connection, then subsequent connections from that host will likely use *different* PAT addresses for each connection because of the round robin allocation. In this case, you may have problems when accessing two websites that exchange information about the host, for example an e-commerce site and a payment site. When these sites see two different IP addresses for what is supposed to be a single host, the transaction may fail.
- Round robin, especially when combined with extended PAT, can consume a large amount of memory. Because NAT pools are created for every mapped protocol/IP address/port range, round robin results in a large number of concurrent NAT pools, which use memory. Extended PAT results in an even larger number of concurrent NAT pools.

Detailed Steps

	Command	Purpose
Step 1	<p>Network object:</p> <pre>object network obj_name {host ip_address subnet subnet_address netmask range ip_address_1 ip_address_2}</pre> <p>Network object group:</p> <pre>object-group network grp_name {network-object {object net_obj_name subnet_address netmask host ip_address} group-object grp_obj_name}</pre> <p>Example:</p> <pre>hostname(config)# object network MyInsNet hostname(config-network-object)# subnet 10.1.1.0 255.255.255.0</pre>	<p>Configure the real source addresses.</p> <p>You can configure either a network object or a network object group. For more information, see the “Configuring Objects” section on page 13-3.</p> <p>If you want to translate all traffic, you can skip this step and specify the any keyword instead of creating an object or group.</p>

Command	Purpose
<p>Step 2 Network object:</p> <pre>object network obj_name {host ip_address range ip_address_1 ip_address_2}</pre> <p>Network object group:</p> <pre>object-group network grp_name {network-object {object net_obj_name host ip_address} group-object grp_obj_name}</pre> <p>Example:</p> <pre>hostname(config)# object network PAT_POOL1 hostname(config-network-object)# range 10.5.1.80 10.7.1.80 hostname(config)# object network PAT_POOL2 hostname(config-network-object)# range 10.9.1.1 10.10.1.1 hostname(config)# object network PAT_IP hostname(config-network-object)# host 10.5.1.79 hostname(config-network-object)# object-group network PAT_POOLS hostname(config-network)# network-object object PAT_POOL1 hostname(config-network)# network-object object PAT_POOL2 hostname(config-network)# network-object object PAT_IP</pre>	<p>Specify the mapped address(es) (that you want to translate to). You can configure a single address or, for a PAT pool, multiple addresses. Configure a network object or network object group. A network object group can contain objects and/or inline addresses. Alternatively, you can skip this step if you want to enter a single IP address as an inline value for the nat command or if you want to use the interface address by specifying the interface keyword.</p> <p>For mapped addresses used as a PAT pool, all addresses in the object or group, including ranges, are used as PAT addresses.</p> <p>Note The object or group cannot contain a subnet.</p> <p>See the “Guidelines and Limitations” section on page 31-2 for information about disallowed mapped IP addresses.</p> <p>For more information about configuring a network object or group, see the “Configuring Objects” section on page 13-3.</p>
<p>Step 3 (Optional)</p> <p>Network object:</p> <pre>object network obj_name {host ip_address subnet subnet_address netmask range ip_address_1 ip_address_2}</pre> <p>Network object group:</p> <pre>object-group network grp_name {network-object {object net_obj_name subnet_address netmask host ip_address} group-object grp_obj_name}</pre> <p>Example:</p> <pre>hostname(config)# object network Server1 hostname(config-network-object)# host 209.165.201.8</pre>	<p>Configure the real destination addresses.</p> <p>You can configure either a network object or a network object group.</p> <p>Although the main feature of twice NAT is the inclusion of the destination IP address, the destination address is optional. If you do specify the destination address, you can configure static translation for that address or just use identity NAT for it. You might want to configure twice NAT without a destination address to take advantage of some of the other qualities of twice NAT, including the use of network object groups for real addresses, or manually ordering of rules. For more information, see the “Main Differences Between Network Object NAT and Twice NAT” section on page 29-16.</p>

Command	Purpose
<p>Step 4 (Optional)</p> <p>Network object:</p> <pre>object network obj_name {host ip_address subnet subnet_address netmask range ip_address_1 ip_address_2}</pre> <p>Network object group:</p> <pre>object-group network grp_name {network-object {object net_obj_name subnet_address netmask host ip_address} group-object grp_obj_name}</pre> <p>Example:</p> <pre>hostname(config)# object network Server1_mapped hostname(config-network-object)# host 10.1.1.67</pre>	<p>Configure the mapped destination addresses.</p> <p>The destination translation is always static. For identity NAT, you can skip this step and simply use the same object or group for both the real and mapped addresses.</p> <p>If you want to translate the destination address, you can configure either a network object or a network object group. The static mapping is typically one-to-one, so the real addresses have the same quantity as the mapped addresses. You can, however, have different quantities if desired. For more information, see the “Static NAT” section on page 29-3.</p> <p>For static interface NAT with port translation (routed mode only), you can skip this step and specify the interface keyword instead of a network object/group for the mapped address. For more information, see the “Static Interface NAT with Port Translation” section on page 29-5.</p>
<p>Step 5 (Optional)</p> <pre>object service obj_name service {tcp udp} destination operator port</pre> <p>Example:</p> <pre>hostname(config)# object service REAL_SVC hostname(config-service-object)# service tcp destination eq 80</pre> <pre>hostname(config)# object service MAPPED_SVC hostname(config-service-object)# service tcp destination eq 8080</pre>	<p>Configure service objects for:</p> <ul style="list-style-type: none"> • Destination real port • Destination mapped port <p>Dynamic PAT does not support additional port translation. However, because the <i>destination</i> translation is always static, you can perform port translation for the destination port. A service object can contain both a source and destination port, but only the destination port is used in this case. If you specify the source port, it will be ignored. NAT only supports TCP or UDP. When translating a port, be sure the protocols in the real and mapped service objects are identical (both TCP or both UDP). For identity NAT, you can use the same service object for both the real and mapped ports. The “not equal” (neq) operator is not supported.</p>

Command	Purpose
<p>Step 6</p> <pre> nat [(real_ifc,mapped_ifc)] [line {after-auto [line]}] source dynamic {real_obj any} {mapped_obj [interface] [pat-pool mapped_obj [round-robin] [extended] [flat [include-reserve]] [interface] interface} [destination static {mapped_obj interface} real_obj] [service mapped_dest_svc_obj real_dest_svc_obj] [dns] [inactive] [description desc] </pre> <p>Example:</p> <pre> hostname(config)# nat (inside,outside) source dynamic MyInsNet interface destination static Server1 Server1 description Interface PAT for inside addresses when going to server 1 </pre>	<p>Configures dynamic PAT (hide). See the following guidelines:</p> <ul style="list-style-type: none"> • Interfaces—(Required for transparent mode) Specify the real and mapped interfaces. Be sure to include the parentheses in your command. In routed mode, if you do not specify the real and mapped interfaces, all interfaces are used; you can also specify the keyword any for one or both of the interfaces. • Section and Line—(Optional) By default, the NAT rule is added to the end of section 1 of the NAT table (see the “NAT Rule Order” section on page 29-20). If you want to add the rule into section 3 instead (after the network object NAT rules), then use the after-auto keyword. You can insert a rule anywhere in the applicable section using the <i>line</i> argument. • Source addresses: <ul style="list-style-type: none"> - Real—Specify a network object, group, or the any keyword (see Step 1). Use the any keyword if you want to translate all traffic from the real interface to the mapped interface. - Mapped—Configure one of the following: <ul style="list-style-type: none"> - Network object—Specify a network object that contains a host address (see Step 2). - pat-pool—Specify the pat-pool keyword and a network object or group that contains multiple addresses (see Step 2). - interface—(Routed mode only) Specify the interface keyword alone to only use interface PAT. When specified with a PAT pool or network object, the interface keyword enables interface PAT fallback. After the PAT IP addresses are used up, then the IP address of the mapped interface is used. For this option, you must configure a specific interface for the <i>mapped_ifc</i>. <p>(continued)</p>

Command	Purpose
	<p>(continued)</p> <p>For a PAT pool, you can specify one or more of the following options:</p> <ul style="list-style-type: none"> -- Round robin—The round-robin keyword enables round-robin address allocation for a PAT pool. Without round robin, by default all ports for a PAT address will be allocated before the next PAT address is used. The round-robin method assigns an address/port from each PAT address in the pool before returning to use the first address again, and then the second address, and so on. -- Extended PAT—(8.4(3) and later, not including 8.5(1) or 8.6(1)) The extended keyword enables extended PAT. Extended PAT uses 65535 ports per <i>service</i>, as opposed to per IP address, by including the destination address and port in the translation information. Normally, the destination port and address are not considered when creating PAT translations, so you are limited to 65535 ports per PAT address. For example, with extended PAT, you can create a translation of 10.1.1.1:1027 when going to 192.168.1.7:23 as well as a translation of 10.1.1.1:1027 when going to 192.168.1.7:80. -- Flat range—(8.4(3) and later, not including 8.5(1) or 8.6(1)) The flat keyword enables use of the entire 1024 to 65535 port range when allocating ports. When choosing the mapped port number for a translation, the ASA uses the real source port number if it is available. However, without this option, if the real port is <i>not</i> available, by default the mapped ports are chosen from the same range of ports as the real port number: 1 to 511, 512 to 1023, and 1024 to 65535. To avoid running out of ports at the low ranges, configure this setting. To use the entire range of 1 to 65535, also specify the include-reserve keyword. <p>(continued)</p>

Command	Purpose
	<p>(continued)</p> <ul style="list-style-type: none"> • Destination addresses (Optional): <ul style="list-style-type: none"> – Mapped—Specify a network object or group, or for static interface NAT with port translation only (routed mode), specify the interface keyword (see Step 4). If you specify interface, be sure to also configure the service keyword. For this option, you must configure a specific interface for the <i>real_ifc</i>. See the “Static Interface NAT with Port Translation” section on page 29-5 for more information. – Real—Specify a network object or group (see Step 3). For identity NAT, simply use the same object or group for both the real and mapped addresses. • Destination port—(Optional) Specify the service keyword along with the real and mapped service objects (see Step 5). For identity port translation, simply use the same service object for both the real and mapped ports. • DNS—(Optional; for a source-only rule) The dns keyword translates DNS replies. Be sure DNS inspection is enabled (it is enabled by default). You cannot configure the dns keyword if you configure a destination address. See the “DNS and NAT” section on page 29-24 for more information. • Inactive—(Optional) To make this rule inactive without having to remove the command, use the inactive keyword. To reactivate it, reenter the whole command without the inactive keyword. • Description—(Optional) Provide a description up to 200 characters using the description keyword.

Configuring Static NAT or Static NAT-with-Port-Translation

This section describes how to configure a static NAT rule using twice NAT. For more information about static NAT, see the [“Static NAT” section on page 29-3](#).

Detailed Steps

	Command	Purpose
Step 1	<p>Network object:</p> <pre>object network obj_name {host ip_address subnet subnet_address netmask range ip_address_1 ip_address_2}</pre> <p>Network object group:</p> <pre>object-group network grp_name {network-object {object net_obj_name subnet_address netmask host ip_address} group-object grp_obj_name}</pre> <p>Example:</p> <pre>hostname(config)# object network MyInsNet hostname(config-network-object)# subnet 10.1.1.0 255.255.255.0</pre>	<p>Configure the real source addresses.</p> <p>You can configure either a network object or a network object group. For more information, see the “Configuring Objects” section on page 13-3.</p>
Step 2	<p>Network object:</p> <pre>object network obj_name {host ip_address subnet subnet_address netmask range ip_address_1 ip_address_2}</pre> <p>Network object group:</p> <pre>object-group network grp_name {network-object {object net_obj_name subnet_address netmask host ip_address} group-object grp_obj_name}</pre> <p>Example:</p> <pre>hostname(config)# object network MyInsNet_mapped hostname(config-network-object)# subnet 192.168.1.0 255.255.255.0</pre>	<p>Configure the mapped source addresses.</p> <p>You can configure either a network object or a network object group. For static NAT, the mapping is typically one-to-one, so the real addresses have the same quantity as the mapped addresses. You can, however, have different quantities if desired. For more information, see the “Static NAT” section on page 29-3.</p> <p>For static interface NAT with port translation (routed mode only), you can skip this step and specify the interface keyword instead of a network object/group for the mapped address. For more information, see the “Static Interface NAT with Port Translation” section on page 29-5.</p> <p>See the “Guidelines and Limitations” section on page 31-2 for information about disallowed mapped IP addresses.</p>

Command	Purpose
<p>Step 3 (Optional)</p> <p>Network object:</p> <pre>object network obj_name {host ip_address subnet subnet_address netmask range ip_address_1 ip_address_2}</pre> <p>Network object group:</p> <pre>object-group network grp_name {network-object {object net_obj_name subnet_address netmask host ip_address} group-object grp_obj_name}</pre> <p>Example:</p> <pre>hostname(config)# object network Server1 hostname(config-network-object)# host 209.165.201.8</pre>	<p>Configure the real destination addresses.</p> <p>You can configure either a network object or a network object group.</p> <p>Although the main feature of twice NAT is the inclusion of the destination IP address, the destination address is optional. If you do specify the destination address, you can configure static translation for that address or just use identity NAT for it. You might want to configure twice NAT without a destination address to take advantage of some of the other qualities of twice NAT, including the use of network object groups for real addresses, or manually ordering of rules. For more information, see the “Main Differences Between Network Object NAT and Twice NAT” section on page 29-16.</p>
<p>Step 4 (Optional)</p> <p>Network object:</p> <pre>object network obj_name {host ip_address subnet subnet_address netmask range ip_address_1 ip_address_2}</pre> <p>Network object group:</p> <pre>object-group network grp_name {network-object {object net_obj_name subnet_address netmask host ip_address} group-object grp_obj_name}</pre> <p>Example:</p> <pre>hostname(config)# object network Server1_mapped hostname(config-network-object)# host 10.1.1.67</pre>	<p>Configure the mapped destination addresses.</p> <p>The destination translation is always static. For identity NAT, you can skip this step and simply use the same object or group for both the real and mapped addresses.</p> <p>If you want to translate the destination address, you can configure either a network object or a network object group. The static mapping is typically one-to-one, so the real addresses have the same quantity as the mapped addresses. You can, however, have different quantities if desired. For more information, see the “Static NAT” section on page 29-3.</p> <p>For static interface NAT with port translation (routed mode only), you can skip this step and specify the interface keyword instead of a network object/group for the mapped address. For more information, see the “Static Interface NAT with Port Translation” section on page 29-5.</p>

Command	Purpose
<p>Step 5 (Optional)</p> <pre>object service obj_name service {tcp udp} [source operator port] [destination operator port]</pre> <p>Example:</p> <pre>hostname(config)# object service REAL_SRC_SVC hostname(config-service-object)# service tcp source eq 80</pre> <pre>hostname(config)# object service MAPPED_SRC_SVC hostname(config-service-object)# service tcp source eq 8080</pre>	<p>Configure service objects for:</p> <ul style="list-style-type: none"> • Source <i>or</i> destination real port • Source <i>or</i> destination mapped port <p>A service object can contain both a source and destination port; however, you should specify <i>either</i> the source <i>or</i> the destination port for both service objects. You should only specify <i>both</i> the source and destination ports if your application uses a fixed source port (such as some DNS servers); but fixed source ports are rare. NAT only supports TCP or UDP. When translating a port, be sure the protocols in the real and mapped service objects are identical (both TCP or both UDP). For identity NAT, you can use the same service object for both the real and mapped ports. The “not equal” (neq) operator is not supported.</p> <p>For example, if you want to translate the port for the source host, then configure the source service.</p>

Command	Purpose
<p>Step 6</p> <pre> nat [(<i>real_ifc</i>,<i>mapped_ifc</i>)] [<i>line</i> {after-object [<i>line</i>]}] source static <i>real_ob</i> [<i>mapped_obj</i> interface] [destination static {<i>mapped_obj</i> interface} <i>real_obj</i>] [service <i>real_src_mapped_dest_svc_obj</i> <i>mapped_src_real_dest_svc_obj</i>] [dns] [no-proxy-arp] [inactive] [description <i>desc</i>] </pre> <p>Example:</p> <pre> hostname(config)# nat (inside,dmz) source static MyInsNet MyInsNet_mapped destination static Server1 Server1 service REAL_SRC_SVC MAPPED_SRC_SVC </pre>	<p>Configures static NAT. See the following guidelines:</p> <ul style="list-style-type: none"> • Interfaces—(Required for transparent mode) Specify the real and mapped interfaces. Be sure to include the parentheses in your command. In routed mode, if you do not specify the real and mapped interfaces, all interfaces are used; you can also specify the keyword any for one or both of the interfaces. • Section and Line—(Optional) By default, the NAT rule is added to the end of section 1 of the NAT table. See the “NAT Rule Order” section on page 29-20 for more information about sections. If you want to add the rule into section 3 instead (after the network object NAT rules), then use the after-auto keyword. You can insert a rule anywhere in the applicable section using the <i>line</i> argument. • Source addresses: <ul style="list-style-type: none"> – Real—Specify a network object or group (see Step 1). – Mapped—Specify a different network object or group (see Step 2). For static interface NAT with port translation only, you can specify the interface keyword (routed mode only). If you specify interface, be sure to also configure the service keyword (in this case, the service objects should include only the source port). For this option, you must configure a specific interface for the <i>mapped_ifc</i>. See the “Static Interface NAT with Port Translation” section on page 29-5 for more information. • Destination addresses (Optional): <ul style="list-style-type: none"> – Mapped—Specify a network object or group, or for static interface NAT with port translation only, specify the interface keyword (see Step 4). If you specify interface, be sure to also configure the service keyword (in this case, the service objects should include only the destination port). For this option, you must configure a specific interface for the <i>real_ifc</i>. – Real—Specify a network object or group (see Step 3). For identity NAT, simply use the same object or group for both the real and mapped addresses.

Command	Purpose
	<p>(Continued)</p> <ul style="list-style-type: none"> • Ports—(Optional) Specify the service keyword along with the real and mapped service objects (see Step 5). For source port translation, the objects must specify the source service. The order of the service objects in the command for source port translation is service real_obj mapped_obj. For destination port translation, the objects must specify the destination service. The order of the service objects for destination port translation is service mapped_obj real_obj. In the rare case where you specify both the source and destination ports in the object, the first service object contains the real source port/mapped destination port; the second service object contains the mapped source port/real destination port. For identity port translation, simply use the same service object for both the real and mapped ports (source and/or destination ports, depending on your configuration). • DNS—(Optional; for a source-only rule) The dns keyword translates DNS replies. Be sure DNS inspection is enabled (it is enabled by default). You cannot configure the dns keyword if you configure a destination address. See the “DNS and NAT” section on page 29-24 for more information. • No Proxy ARP—(Optional) Specify no-proxy-arp to disable proxy ARP for incoming packets to the mapped IP addresses. See the “Mapped Addresses and Routing” section on page 29-22 for more information. • Inactive—(Optional) To make this rule inactive without having to remove the command, use the inactive keyword. To reactivate it, reenter the whole command without the inactive keyword. • Description—(Optional) Provide a description up to 200 characters using the description keyword.

Examples

The following example shows the use of static interface NAT with port translation. Hosts on the outside access an FTP server on the inside by connecting to the outside interface IP address with destination port 65000 through 65004. The traffic is untranslated to the internal FTP server at 192.168.10.100:6500 through :65004. Note that you specify the source port range in the service object (and not the destination port) because you want to translate the source address and port as identified in the command; the destination port is “any.” Because static NAT is bidirectional, “source” and “destination” refers primarily to the command keywords; the actual source and destination address and port in a packet depends on

which host sent the packet. In this example, connections are originated from outside to inside, so the “source” address and port of the FTP server is actually the destination address and port in the originating packet.

```
hostname(config)# object service FTP_PASV_PORT_RANGE
hostname(config-service-object)# service tcp source range 65000 65004
```

```
hostname(config)# object network HOST_FTP_SERVER
hostname(config-network-object)# host 192.168.10.100
```

```
hostname(config)# nat (inside,outside) source static HOST_FTP_SERVER interface service
FTP_PASV_PORT_RANGE FTP_PASV_PORT_RANGE
```

Configuring Identity NAT

This section describes how to configure an identity NAT rule using twice NAT. For more information about identity NAT, see the “Identity NAT” section on page 29-11.

Detailed Steps

	Command	Purpose
Step 1	<p>Network object:</p> <pre>object network obj_name {host ip_address subnet subnet_address netmask range ip_address_1 ip_address_2}</pre> <p>Network object group:</p> <pre>object-group network grp_name {network-object {object net_obj_name subnet_address netmask host ip_address} group-object grp_obj_name}</pre> <p>Example:</p> <pre>hostname(config)# object network MyInsNet hostname(config-network-object)# subnet 10.1.1.0 255.255.255.0</pre>	<p>Configure the real source addresses.</p> <p>You can configure either a network object or a network object group. For more information, see the “Configuring Objects” section on page 13-3.</p> <p>These are the addresses on which you want to perform identity NAT. If you want to perform identity NAT for all addresses, you can skip this step and instead use the keywords any any.</p>

Command	Purpose
<p>Step 2 (Optional)</p> <p>Network object:</p> <pre>object network obj_name {host ip_address subnet subnet_address netmask range ip_address_1 ip_address_2}</pre> <p>Network object group:</p> <pre>object-group network grp_name {network-object {object net_obj_name subnet_address netmask host ip_address} group-object grp_obj_name}</pre> <p>Example:</p> <pre>hostname(config)# object network Server1 hostname(config-network-object)# host 209.165.201.8</pre>	<p>Configure the real destination addresses.</p> <p>You can configure either a network object or a network object group.</p> <p>Although the main feature of twice NAT is the inclusion of the destination IP address, the destination address is optional. If you do specify the destination address, you can configure static translation for that address or just use identity NAT for it. You might want to configure twice NAT without a destination address to take advantage of some of the other qualities of twice NAT, including the use of network object groups for real addresses, or manually ordering of rules. For more information, see the “Main Differences Between Network Object NAT and Twice NAT” section on page 29-16.</p>
<p>Step 3 (Optional)</p> <p>Network object:</p> <pre>object network obj_name {host ip_address subnet subnet_address netmask range ip_address_1 ip_address_2}</pre> <p>Network object group:</p> <pre>object-group network grp_name {network-object {object net_obj_name subnet_address netmask host ip_address} group-object grp_obj_name}</pre> <p>Example:</p> <pre>hostname(config)# object network Server1_mapped hostname(config-network-object)# host 10.1.1.67</pre>	<p>Configure the mapped destination addresses.</p> <p>The destination translation is always static. For identity NAT, you can skip this step and simply use the same object or group for both the real and mapped addresses.</p> <p>If you want to translate the destination address, you can configure either a network object or a network object group. The static mapping is typically one-to-one, so the real addresses have the same quantity as the mapped addresses. You can, however, have different quantities if desired. For more information, see the “Static NAT” section on page 29-3.</p> <p>For static interface NAT with port translation (routed mode only), you can skip this step and specify the interface keyword instead of a network object/group for the mapped address. For more information, see the “Static Interface NAT with Port Translation” section on page 29-5.</p>

Command	Purpose
<p>Step 4 (Optional)</p> <pre>object service obj_name service {tcp udp} [source operator port] [destination operator port]</pre> <p>Example:</p> <pre>hostname(config)# object service REAL_SRC_SVC hostname(config-service-object)# service tcp source eq 80</pre> <pre>hostname(config)# object service MAPPED_SRC_SVC hostname(config-service-object)# service tcp source eq 8080</pre>	<p>Configure service objects for:</p> <ul style="list-style-type: none"> • Source <i>or</i> destination real port • Source <i>or</i> destination mapped port <p>A service object can contain both a source and destination port; however, you should specify <i>either</i> the source <i>or</i> the destination port for both service objects. You should only specify <i>both</i> the source and destination ports if your application uses a fixed source port (such as some DNS servers); but fixed source ports are rare. NAT only supports TCP or UDP. When translating a port, be sure the protocols in the real and mapped service objects are identical (both TCP or both UDP). For identity NAT, you can use the same service object for both the real and mapped ports. The “not equal” (neq) operator is not supported.</p> <p>For example, if you want to translate the port for the source host, then configure the source service.</p>

Command	Purpose
<p>Step 5</p> <pre> nat [(<i>real_ifc</i>,<i>mapped_ifc</i>)] [<i>line</i> {after-object [<i>line</i>]}] source static {<i>nw_obj nw_obj</i> any any} [destination static {<i>mapped_obj</i> interface } <i>real_obj</i>] [service <i>real_src mapped_dest_svc_obj</i> <i>mapped_src_real_dest_svc_obj</i>] [no-proxy-arp] [route-lookup] [inactive] [description <i>desc</i>] </pre> <p>Example:</p> <pre> hostname(config)# nat (inside,outside) source static MyInsNet MyInsNet destination static Server1 Server1 </pre>	<p>Configures identity NAT. See the following guidelines:</p> <ul style="list-style-type: none"> • Interfaces—(Required for transparent mode) Specify the real and mapped interfaces. Be sure to include the parentheses in your command. In routed mode, if you do not specify the real and mapped interfaces, all interfaces are used; you can also specify the keyword any for one or both of the interfaces. • Section and Line—(Optional) By default, the NAT rule is added to the end of section 1 of the NAT table. See the “NAT Rule Order” section on page 29-20 for more information about sections. If you want to add the rule into section 3 instead (after the network object NAT rules), then use the after-auto keyword. You can insert a rule anywhere in the applicable section using the <i>line</i> argument. • Source addresses—Specify a network object, group, or the any keyword for both the real and mapped addresses (see Step 1). • Destination addresses (Optional): <ul style="list-style-type: none"> – Mapped—Specify a network object or group, or for static mapped interface NAT with port translation only, specify the interface keyword (routed mode only) (see Step 3). If you specify interface, be sure to also configure the service keyword (in this case, the service objects should include only the destination port). For this option, you must configure a specific interface for the <i>real_ifc</i>. See the “Static Interface NAT with Port Translation” section on page 29-5 for more information. – Real—Specify a network object or group (see Step 2). For identity NAT, simply use the same object or group for both the real and mapped addresses. • Port—(Optional) Specify the service keyword along with the real and mapped service objects (see Step 4). For source port translation, the objects must specify the source service. The order of the service objects in the command for source port translation is service <i>real_obj mapped_obj</i>. For destination port translation, the objects must specify the destination service. The order of the service objects for destination port translation is service <i>mapped_obj real_obj</i>. In the rare case where you specify both the source and destination ports in the object, the first service object contains the real source port/mapped destination port; the second service object contains the mapped source port/real destination port. For identity port translation, simply use the same service object for both the real and mapped ports (source and/or destination ports, depending on your configuration).

Command	Purpose
	(Continued) <ul style="list-style-type: none"> • No Proxy ARP—(Optional) Specify no-proxy-arp to disable proxy ARP for incoming packets to the mapped IP addresses. See the “Mapped Addresses and Routing” section on page 29-22 for more information. • Route lookup—(Optional; routed mode only; interface(s) specified) Specify route-lookup to determine the egress interface using a route lookup instead of using the interface specified in the NAT command. See the “Determining the Egress Interface” section on page 29-24 for more information. • Inactive—(Optional) To make this rule inactive without having to remove the command, use the inactive keyword. To reactivate it, reenter the whole command without the inactive keyword. • Description—(Optional) Provide a description up to 200 characters using the description keyword.

Monitoring Twice NAT

To monitor twice NAT, enter one of the following commands:

Command	Purpose
<code>show nat</code>	Shows NAT statistics, including hits for each NAT rule.
<code>show nat pool</code>	Shows NAT pool statistics, including the addresses and ports allocated, and how many times they were allocated.
<code>show xlate</code>	Shows current NAT session information.


Configuration Examples for Twice NAT

This section includes the following configuration examples:

- [Different Translation Depending on the Destination \(Dynamic PAT\)](#), page 31-24
- [Different Translation Depending on the Destination Address and Port \(Dynamic PAT\)](#), page 31-26

Different Translation Depending on the Destination (Dynamic PAT)

Figure 31-1 shows a host on the 10.1.2.0/24 network accessing two different servers. When the host accesses the server at 209.165.201.11, the real address is translated to 209.165.202.129:port. When the host accesses the server at 209.165.200.225, the real address is translated to 209.165.202.130:port.

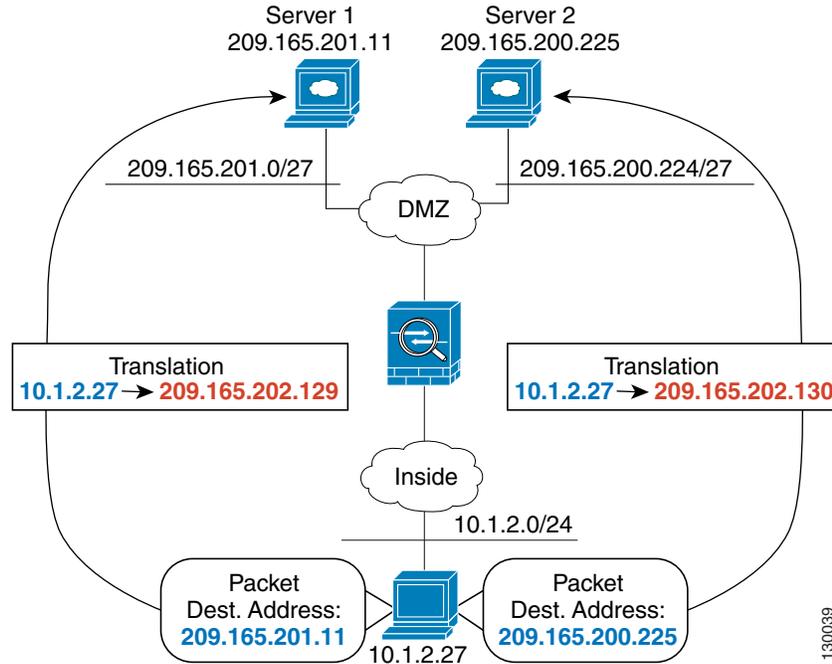Figure 31-1 Twice NAT with Different Destination Addresses

Step 1 Add a network object for the inside network:

```
hostname(config)# object network myInsideNetwork
hostname(config-network-object)# subnet 10.1.2.0 255.255.255.0
```

Step 2 Add a network object for the DMZ network 1:

```
hostname(config)# object network DMZnetwork1
hostname(config-network-object)# subnet 209.165.201.0 255.255.255.224
```

Step 3 Add a network object for the PAT address:

```
hostname(config)# object network PATaddress1
hostname(config-network-object)# host 209.165.202.129
```

Step 4 Configure the first twice NAT rule:

```
hostname(config)# nat (inside,dmz) source dynamic myInsideNetwork PATaddress1 destination
static DMZnetwork1 DMZnetwork1
```

Because you do not want to translate the destination address, you need to configure identity NAT for it by specifying the same address for the real and mapped destination addresses.

By default, the NAT rule is added to the end of section 1 of the NAT table, See the [“Configuring Dynamic PAT \(Hide\)” section on page 31-8](#) for more information about specifying the section and line number for the NAT rule.

Step 5 Add a network object for the DMZ network 2:

```
hostname(config)# object network DMZnetwork2
hostname(config-network-object)# subnet 209.165.200.224 255.255.255.224
```

Step 6 Add a network object for the PAT address:

```
hostname(config)# object network PATaddress2
```

```
hostname(config-network-object)# host 209.165.202.130
```


Step 7 Configure the second twice NAT rule:

```
hostname(config)# nat (inside,dmz) source dynamic myInsideNetwork PATaddress2 destination static DMZnetwork2 DMZnetwork2
```

Different Translation Depending on the Destination Address and Port (Dynamic PAT)

Figure 31-2 shows the use of source and destination ports. The host on the 10.1.2.0/24 network accesses a single host for both web services and Telnet services. When the host accesses the server for Telnet services, the real address is translated to 209.165.202.129:port. When the host accesses the same server for web services, the real address is translated to 209.165.202.130:port.

Figure 31-2 Twice NAT with Different Destination Ports

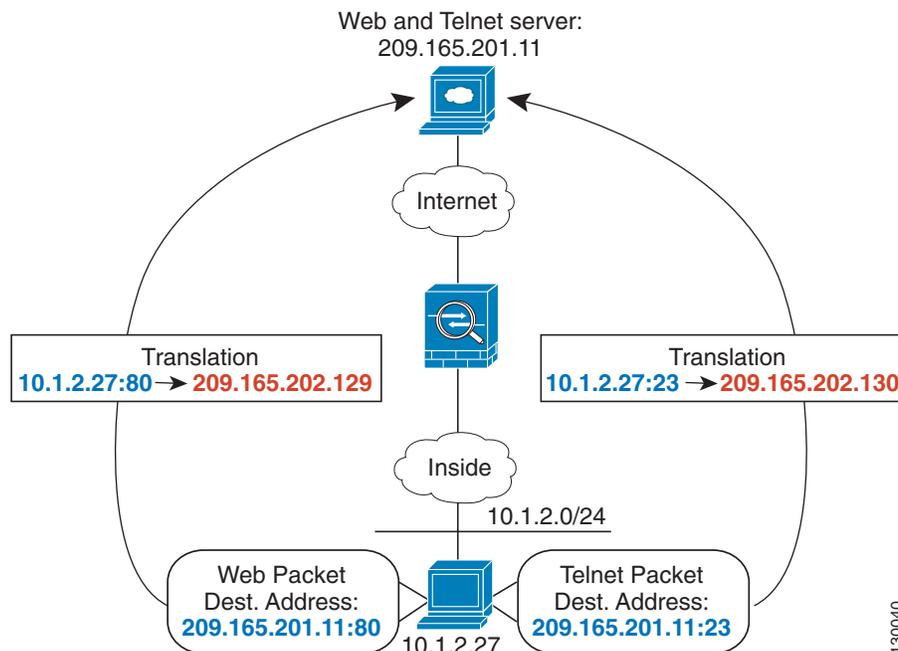

Step 1 Add a network object for the inside network:

```
hostname(config)# object network myInsideNetwork
hostname(config-network-object)# subnet 10.1.2.0 255.255.255.0
```

Step 2 Add a network object for the Telnet/Web server:

```
hostname(config)# object network TelnetWebServer
hostname(config-network-object)# host 209.165.201.11
```

Step 3 Add a network object for the PAT address when using Telnet:

```
hostname(config)# object network PATaddress1
```

```
hostname(config-network-object)# host 209.165.202.129
```

Step 4 Add a service object for Telnet:

```
hostname(config)# object service TelnetObj  
hostname(config-network-object)# service tcp destination eq telnet
```

Step 5 Configure the first twice NAT rule:

```
hostname(config)# nat (inside,outside) source dynamic myInsideNetwork PATaddress1  
destination static TelnetWebServer TelnetWebServer service TelnetObj TelnetObj
```

Because you do not want to translate the destination address or port, you need to configure identity NAT for them by specifying the same address for the real and mapped destination addresses, and the same port for the real and mapped service.

By default, the NAT rule is added to the end of section 1 of the NAT table, See the [“Configuring Dynamic PAT \(Hide\)” section on page 31-8](#) for more information about specifying the section and line number for the NAT rule.

Step 6 Add a network object for the PAT address when using HTTP:

```
hostname(config)# object network PATaddress2  
hostname(config-network-object)# host 209.165.202.130
```

Step 7 Add a service object for HTTP:

```
hostname(config)# object service HTTPObj  
hostname(config-network-object)# service tcp destination eq http
```

Step 8 Configure the second twice NAT rule:

```
hostname(config)# nat (inside,outside) source dynamic myInsideNetwork PATaddress2  
destination static TelnetWebServer TelnetWebServer service HTTPObj HTTPObj
```

Feature History for Twice NAT

Table 31-1 lists each feature change and the platform release in which it was implemented.

Table 31-1 Feature History for Twice NAT

Feature Name	Platform Releases	Feature Information
Twice NAT	8.3(1)	<p>Twice NAT lets you identify both the source and destination address in a single rule.</p> <p>We modified or introduced the following commands: nat, show nat, show xlate, show nat pool.</p>
Identity NAT configurable proxy ARP and route lookup	8.4(2)	<p>In earlier releases for identity NAT, proxy ARP was disabled, and a route lookup was always used to determine the egress interface. You could not configure these settings. In 8.4(2) and later, the default behavior for identity NAT was changed to match the behavior of other static NAT configurations: proxy ARP is enabled, and the NAT configuration determines the egress interface (if specified) by default. You can leave these settings as is, or you can enable or disable them discretely. Note that you can now also disable proxy ARP for regular static NAT.</p> <p>For pre-8.3 configurations, the migration of NAT exempt rules (the nat 0 access-list command) to 8.4(2) and later now includes the following keywords to disable proxy ARP and to use a route lookup: no-proxy-arp and route-lookup. The unidirectional keyword that was used for migrating to 8.3(2) and 8.4(1) is no longer used for migration. When upgrading to 8.4(2) from 8.3(1), 8.3(2), and 8.4(1), all identity NAT configurations will now include the no-proxy-arp and route-lookup keywords, to maintain existing functionality. The unidirectional keyword is removed.</p> <p>We modified the following commands: nat source static [no-proxy-arp] [route-lookup].</p>
PAT pool and round robin address assignment	8.4(2)	<p>You can now specify a pool of PAT addresses instead of a single address. You can also optionally enable round-robin assignment of PAT addresses instead of first using all ports on a PAT address before using the next address in the pool. These features help prevent a large number of connections from a single PAT address from appearing to be part of a DoS attack and makes configuration of large numbers of PAT addresses easy.</p> <p>We modified the following commands: nat source dynamic [pat-pool mapped_object [round-robin]].</p>

Table 31-1 Feature History for Twice NAT (continued)

Feature Name	Platform Releases	Feature Information
Round robin PAT pool allocation uses the same IP address for existing hosts	8.4(3)	<p>When using a PAT pool with round robin allocation, if a host has an existing connection, then subsequent connections from that host will use the same PAT IP address if ports are available.</p> <p>We did not modify any commands.</p> <p><i>This feature is not available in 8.5(1) or 8.6(1).</i></p>
Flat range of PAT ports for a PAT pool	8.4(3)	<p>If available, the real source port number is used for the mapped port. However, if the real port is <i>not</i> available, by default the mapped ports are chosen from the same range of ports as the real port number: 0 to 511, 512 to 1023, and 1024 to 65535. Therefore, ports below 1024 have only a small PAT pool.</p> <p>If you have a lot of traffic that uses the lower port ranges, when using a PAT pool, you can now specify a flat range of ports to be used instead of the three unequal-sized tiers: either 1024 to 65535, or 1 to 65535.</p> <p>We modified the following commands: nat source dynamic [pat-pool mapped_object [flat [include-reserve]]].</p> <p><i>This feature is not available in 8.5(1) or 8.6(1).</i></p>

Table 31-1 Feature History for Twice NAT (continued)

Feature Name	Platform Releases	Feature Information
Extended PAT for a PAT pool	8.4(3)	<p>Each PAT IP address allows up to 65535 ports. If 65535 ports do not provide enough translations, you can now enable extended PAT for a PAT pool. Extended PAT uses 65535 ports per <i>service</i>, as opposed to per IP address, by including the destination address and port in the translation information.</p> <p>We modified the following commands: nat source dynamic [pat-pool mapped_object [extended]].</p> <p><i>This feature is not available in 8.5(1) or 8.6(1).</i></p>
Automatic NAT rules to translate a VPN peer's local IP address back to the peer's real IP address	8.4(3)	<p>In rare situations, you might want to use a VPN peer's real IP address on the inside network instead of an assigned local IP address. Normally with VPN, the peer is given an assigned local IP address to access the inside network. However, you might want to translate the local IP address back to the peer's real public IP address if, for example, your inside servers and network security is based on the peer's real IP address.</p> <p>You can enable this feature on one interface per tunnel group. Object NAT rules are dynamically added and deleted when the VPN session is established or disconnected. You can view the rules using the show nat command.</p> <p>Note Because of routing issues, we do not recommend using this feature unless you know you need this feature; contact Cisco TAC to confirm feature compatibility with your network. See the following limitations:</p> <ul style="list-style-type: none"> • Only supports Cisco IPsec and AnyConnect Client. • Return traffic to the public IP addresses must be routed back to the ASA so the NAT policy and VPN policy can be applied. • Does not support load-balancing (because of routing issues). • Does not support roaming (public IP changing). <p>We introduced the following command: nat-assigned-to-public-ip interface (tunnel-group general-attributes configuration mode).</p>



PART 8

Configuring Service Policies Using the Modular Policy Framework



CHAPTER 32

Configuring a Service Policy Using the Modular Policy Framework

Service policies using Modular Policy Framework provide a consistent and flexible way to configure ASA features. For example, you can use a service policy to create a timeout configuration that is specific to a particular TCP application, as opposed to one that applies to all TCP applications. A service policy consists of multiple actions applied to an interface or applied globally.

This chapter includes the following sections:

- [Information About Service Policies, page 32-1](#)
- [Licensing Requirements for Service Policies, page 32-6](#)
- [Guidelines and Limitations, page 32-6](#)
- [Default Settings, page 32-7](#)
- [Task Flows for Configuring Service Policies, page 32-9](#)
- [Identifying Traffic \(Layer 3/4 Class Maps\), page 32-12](#)
- [Defining Actions \(Layer 3/4 Policy Map\), page 32-15](#)
- [Applying Actions to an Interface \(Service Policy\), page 32-17](#)
- [Monitoring Modular Policy Framework, page 32-18](#)
- [Configuration Examples for Modular Policy Framework, page 32-18](#)
- [Feature History for Service Policies, page 32-21](#)

Information About Service Policies

This section describes how service policies work and includes the following topics:

- [Supported Features for Through Traffic, page 32-2](#)
- [Supported Features for Management Traffic, page 32-2](#)
- [Feature Directionality, page 32-2](#)
- [Feature Matching Within a Service Policy, page 32-3](#)
- [Order in Which Multiple Feature Actions are Applied, page 32-4](#)
- [Incompatibility of Certain Feature Actions, page 32-5](#)
- [Feature Matching for Multiple Service Policies, page 32-6](#)

Supported Features for Through Traffic

Table 32-1 lists the features supported by Modular Policy Framework.

Table 32-1 *Modular Policy Framework*

Feature	See:
Application inspection (multiple types)	<ul style="list-style-type: none"> Chapter 42, “Getting Started with Application Layer Protocol Inspection.” Chapter 43, “Configuring Inspection of Basic Internet Protocols.” Chapter 44, “Configuring Inspection for Voice and Video Protocols.” Chapter 45, “Configuring Inspection of Database and Directory Protocols.” Chapter 46, “Configuring Inspection for Management Application Protocols.”
ASA CSC	Chapter 60, “Configuring the ASA CSC Module.”
ASA IPS	Chapter 58, “Configuring the ASA IPS Module.”
ASA CX	Chapter 59, “Configuring the ASA CX Module.”
NetFlow Secure Event Logging filtering	Chapter 78, “Configuring NetFlow Secure Event Logging (NSEL).”
QoS input and output policing	Chapter 54, “Configuring QoS.”
QoS standard priority queue	Chapter 54, “Configuring QoS.”
QoS traffic shaping, hierarchical priority queue	Chapter 54, “Configuring QoS.”
TCP and UDP connection limits and timeouts, and TCP sequence number randomization	Chapter 53, “Configuring Connection Settings.”
TCP normalization	Chapter 53, “Configuring Connection Settings.”
TCP state bypass	Chapter 53, “Configuring Connection Settings.”

Supported Features for Management Traffic

Modular Policy Framework supports the following features for management traffic:

- Application inspection for RADIUS accounting traffic—See Chapter 46, “Configuring Inspection for Management Application Protocols.”
- Connection limits—See Chapter 53, “Configuring Connection Settings.”

Feature Directionality

Actions are applied to traffic bidirectionally or unidirectionally depending on the feature. For features that are applied bidirectionally, all traffic that enters or exits the interface to which you apply the policy map is affected if the traffic matches the class map for both directions.

**Note**

When you use a global policy, all features are unidirectional; features that are normally bidirectional when applied to a single interface only apply to the ingress of each interface when applied globally. Because the policy is applied to all interfaces, the policy will be applied in both directions so bidirectionality in this case is redundant.

For features that are applied unidirectionally, for example QoS priority queue, only traffic that enters (or exits, depending on the feature) the interface to which you apply the policy map is affected. See [Table 32-2](#) for the directionality of each feature.

Table 32-2 Feature Directionality

Feature	Single Interface Direction	Global Direction
Application inspection (multiple types)	Bidirectional	Ingress
ASA CSC	Bidirectional	Ingress
ASA CX	Bidirectional	Ingress
ASA CX authentication proxy	Ingress	Ingress
ASA IPS	Bidirectional	Ingress
NetFlow Secure Event Logging filtering	N/A	Ingress
QoS input policing	Ingress	Ingress
QoS output policing	Egress	Egress
QoS standard priority queue	Egress	Egress
QoS traffic shaping, hierarchical priority queue	Egress	Egress
TCP and UDP connection limits and timeouts, and TCP sequence number randomization	Bidirectional	Ingress
TCP normalization	Bidirectional	Ingress
TCP state bypass	Bidirectional	Ingress

Feature Matching Within a Service Policy

See the following information for how a packet matches class maps in a policy map for a given interface:

1. A packet can match only one class map in the policy map for each feature type.
2. When the packet matches a class map for a feature type, the ASA does not attempt to match it to any subsequent class maps for that feature type.
3. If the packet matches a subsequent class map for a different feature type, however, then the ASA also applies the actions for the subsequent class map, if supported. See the [“Incompatibility of Certain Feature Actions” section on page 32-5](#) for more information about unsupported combinations.

**Note**

Application inspection includes multiple inspection types, and most are mutually exclusive. For inspections that can be combined, each inspection is considered to be a separate feature.

For example, if a packet matches a class map for connection limits, and also matches a class map for an application inspection, then both actions are applied.

If a packet matches a class map for HTTP inspection, but also matches another class map that includes HTTP inspection, then the second class map actions are not applied.

If a packet matches a class map for HTTP inspection, but also matches another class map that includes FTP inspection, then the second class map actions are not applied because HTTP and FTP inspections cannot be combined.

If a packet matches a class map for HTTP inspection, but also matches another class map that includes IPv6 inspection, then both actions are applied because the IPv6 inspection can be combined with any other type of inspection.

Order in Which Multiple Feature Actions are Applied

The order in which different types of actions in a policy map are performed is independent of the order in which the actions appear in the policy map.



Note

NetFlow Secure Event Logging filtering is order-independent.

Actions are performed in the following order:

1. QoS input policing
2. TCP normalization, TCP and UDP connection limits and timeouts, TCP sequence number randomization, and TCP state bypass.



Note

When a the ASA performs a proxy service (such as AAA or CSC) or it modifies the TCP payload (such as FTP inspection), the TCP normalizer acts in dual mode, where it is applied before and after the proxy or payload modifying service.

3. ASA CSC
4. Application inspections that can be combined with other inspections:
 - a. IPv6
 - b. IP options
 - c. WAAS
5. Application inspections that cannot be combined with other inspections. The remaining application inspections cannot be combined with other inspections. See the [“Incompatibility of Certain Feature Actions” section on page 32-5](#) for more information.
6. ASA IPS
7. ASA CX
8. QoS output policing
9. QoS standard priority queue
10. QoS traffic shaping, hierarchical priority queue

Incompatibility of Certain Feature Actions

Some features are not compatible with each other for the same traffic. The following list may not include all incompatibilities; for information about compatibility of each feature, see the chapter or section for your feature:

- You cannot configure QoS priority queueing and QoS policing for the same set of traffic.
- Most inspections should not be combined with another inspection, so the ASA only applies one inspection if you configure multiple inspections for the same traffic. The only exceptions are listed in the [“Order in Which Multiple Feature Actions are Applied”](#) section on page 32-4.
- You cannot configure traffic to be sent to multiple modules, such as the ASA CX and ASA IPS.
- HTTP inspection is not compatible with the ASA CX.



Note

The **match default-inspection-traffic** command, which is used in the default global policy, is a special CLI shortcut to match the default ports for all inspections. When used in a policy map, this class map ensures that the correct inspection is applied to each packet, based on the destination port of the traffic. For example, when UDP traffic for port 69 reaches the ASA, then the ASA applies the TFTP inspection; when TCP traffic for port 21 arrives, then the ASA applies the FTP inspection. So in this case only, you can configure multiple inspections for the same class map. Normally, the ASA does not use the port number to determine which inspection to apply, thus giving you the flexibility to apply inspections to non-standard ports, for example.

An example of a misconfiguration is if you configure multiple inspections in the same policy map and do not use the default-inspection-traffic shortcut. In [Example 32-1](#), traffic destined to port 21 is mistakenly configured for both FTP and HTTP inspection. In [Example 32-2](#), traffic destined to port 80 is mistakenly configured for both FTP and HTTP inspection. In both cases of misconfiguration examples, only the FTP inspection is applied, because FTP comes before HTTP in the order of inspections applied.

Example 32-1 Misconfiguration for FTP packets: HTTP Inspection Also Configured

```
class-map ftp
  match port tcp eq 21
class-map http
  match port tcp eq 21 [it should be 80]
policy-map test
  class ftp
    inspect ftp
  class http
    inspect http
```

Example 32-2 Misconfiguration for HTTP packets: FTP Inspection Also Configured

```
class-map ftp
  match port tcp eq 80 [it should be 21]
class-map http
  match port tcp eq 80
policy-map test
  class http
    inspect http
  class ftp
    inspect ftp
```

Feature Matching for Multiple Service Policies

For TCP and UDP traffic (and ICMP when you enable stateful ICMP inspection), service policies operate on traffic flows, and not just individual packets. If traffic is part of an existing connection that matches a feature in a policy on one interface, that traffic flow cannot also match the same feature in a policy on another interface; only the first policy is used.

For example, if HTTP traffic matches a policy on the inside interface to inspect HTTP traffic, and you have a separate policy on the outside interface for HTTP inspection, then that traffic is not also inspected on the egress of the outside interface. Similarly, the return traffic for that connection will not be inspected by the ingress policy of the outside interface, nor by the egress policy of the inside interface.

For traffic that is not treated as a flow, for example ICMP when you do not enable stateful ICMP inspection, returning traffic can match a different policy map on the returning interface. For example, if you configure IPS on the inside and outside interfaces, but the inside policy uses virtual sensor 1 while the outside policy uses virtual sensor 2, then a non-stateful Ping will match virtual sensor 1 outbound, but will match virtual sensor 2 inbound.

Licensing Requirements for Service Policies

Model	License Requirement
All models	Base License.

Specific features may have separate license requirements. See the feature chapter for more information.

Guidelines and Limitations

This section includes the guidelines and limitations for this feature.

Context Mode Guidelines

Supported in single and multiple context mode.

Firewall Mode Guidelines

Supported in routed and transparent firewall mode.

IPv6 Guidelines

Supports IPv6 for the following features:

- Application inspection for FTP, HTTP, ICMP, SIP, SMTP and IPsec-pass-thru, and IPv6.
- ASA IPS
- ASA CX
- NetFlow Secure Event Logging filtering
- TCP and UDP connection limits and timeouts, TCP sequence number randomization
- TCP normalization
- TCP state bypass

Class Map Guidelines

The maximum number of class maps of all types is 255 in single mode or per context in multiple mode. Class maps include the following types:

- Layer 3/4 class maps (for through traffic and management traffic).
- Inspection class maps
- Regular expression class maps
- **match** commands used directly underneath an inspection policy map

This limit also includes default class maps of all types, limiting user-configured class maps to approximately 235. See the [“Default Class Maps” section on page 32-8](#).

Policy Map Guidelines

See the following guidelines for using policy maps:

- You can only assign one policy map per interface. (However you can create up to 64 policy maps in the configuration.)
- You can apply the same policy map to multiple interfaces.
- You can identify up to 63 Layer 3/4 class maps in a Layer 3/4 policy map.
- For each class map, you can assign multiple actions from one or more feature types, if supported. See the [“Incompatibility of Certain Feature Actions” section on page 32-5](#).

Service Policy Guidelines

- Interface service policies take precedence over the global service policy for a given feature. For example, if you have a global policy with FTP inspection, and an interface policy with TCP normalization, then both FTP inspection and TCP normalization are applied to the interface. However, if you have a global policy with FTP inspection, and an interface policy with FTP inspection, then only the interface policy FTP inspection is applied to that interface.
- You can only apply one global policy. For example, you cannot create a global policy that includes feature set 1, and a separate global policy that includes feature set 2. All features must be included in a single policy.

Default Settings

The following topics describe the default settings for Modular Policy Framework:

- [Default Configuration, page 32-7](#)
- [Default Class Maps, page 32-8](#)

Default Configuration

By default, the configuration includes a policy that matches all default application inspection traffic and applies certain inspections to the traffic on all interfaces (a global policy). Not all inspections are enabled by default. You can only apply one global policy, so if you want to alter the global policy, you need to either edit the default policy or disable it and apply a new one. (An interface policy overrides the global policy for a particular feature.)

The default policy includes the following application inspections:

- DNS inspection for the maximum message length of 512 bytes
- FTP
- H323 (H225)
- H323 (RAS)
- RSH
- RTSP
- ESMTP
- SQLnet
- Skinny (SCCP)
- SunRPC
- XDMCP
- SIP
- NetBios
- TFTP
- IP Options

The default policy configuration includes the following commands:

```
class-map inspection_default
  match default-inspection-traffic
policy-map type inspect dns preset_dns_map
  parameters
    message-length maximum 512
policy-map global_policy
  class inspection_default
    inspect dns preset_dns_map
    inspect ftp
    inspect h323 h225
    inspect h323 ras
    inspect rsh
    inspect rtsp
    inspect esmtp
    inspect sqlnet
    inspect skinny
    inspect sunrpc
    inspect xdmcp
    inspect sip
    inspect netbios
    inspect tftp
    inspect ip-options
service-policy global_policy global
```



Note

See the [“Incompatibility of Certain Feature Actions”](#) section on page 32-5 for more information about the special **match default-inspection-traffic** command used in the default class map.

Default Class Maps

The configuration includes a default Layer 3/4 class map that the ASA uses in the default global policy called default-inspection-traffic; it matches the default inspection traffic. This class, which is used in the default global policy, is a special shortcut to match the default ports for all inspections. When used in a

policy, this class ensures that the correct inspection is applied to each packet, based on the destination port of the traffic. For example, when UDP traffic for port 69 reaches the ASA, then the ASA applies the TFTP inspection; when TCP traffic for port 21 arrives, then the ASA applies the FTP inspection. So in this case only, you can configure multiple inspections for the same class map. Normally, the ASA does not use the port number to determine which inspection to apply, thus giving you the flexibility to apply inspections to non-standard ports, for example.

```
class-map inspection_default
  match default-inspection-traffic
```

Another class map that exists in the default configuration is called class-default, and it matches all traffic. This class map appears at the end of all Layer 3/4 policy maps and essentially tells the ASA to not perform any actions on all other traffic. You can use the class-default class if desired, rather than making your own **match any** class map. In fact, some features are only available for class-default, such as QoS traffic shaping.

```
class-map class-default
  match any
```

Task Flows for Configuring Service Policies


This section includes the following topics:

- [Task Flow for Using the Modular Policy Framework, page 32-9](#)
- [Task Flow for Configuring Hierarchical Policy Maps for QoS Traffic Shaping, page 32-11](#)

Task Flow for Using the Modular Policy Framework


To configure Modular Policy Framework, perform the following steps:

- Step 1** Identify the traffic—Identify the traffic on which you want to perform Modular Policy Framework actions by creating Layer 3/4 class maps.
- For example, you might want to perform actions on all traffic that passes through the ASA; or you might only want to perform certain actions on traffic from 10.1.1.0/24 to any destination address.

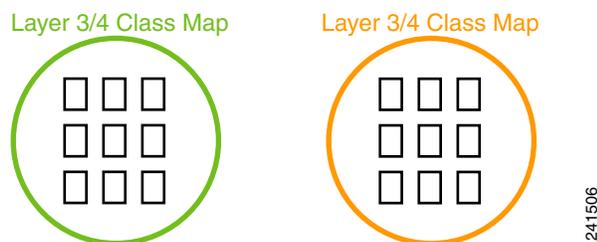

See the “[Identifying Traffic \(Layer 3/4 Class Maps\)](#)” section on page 32-12.


- Step 2** Perform additional actions on some inspection traffic—If one of the actions you want to perform is application inspection, and you want to perform additional actions on some inspection traffic, then create an inspection policy map. The inspection policy map identifies the traffic and specifies what to do with it.
- For example, you might want to drop all HTTP requests with a body length greater than 1000 bytes.

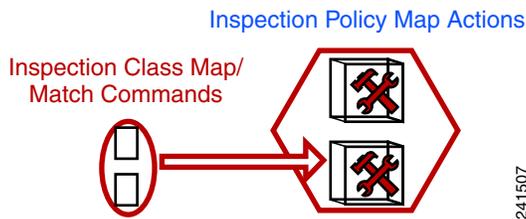

You can create a self-contained inspection policy map that identifies the traffic directly with **match** commands, or you can create an inspection class map for reuse or for more complicated matching. See the “[Defining Actions in an Inspection Policy Map](#)” section on page 33-2 and the “[Identifying Traffic in an Inspection Class Map](#)” section on page 33-6.


- Step 3** Create a regular expression—If you want to match text with a regular expression within inspected packets, you can create a regular expression or a group of regular expressions (a regular expression class map). Then, when you define the traffic to match for the inspection policy map, you can call on an existing regular expression.

For example, you might want to drop all HTTP requests with a URL including the text “example.com.”

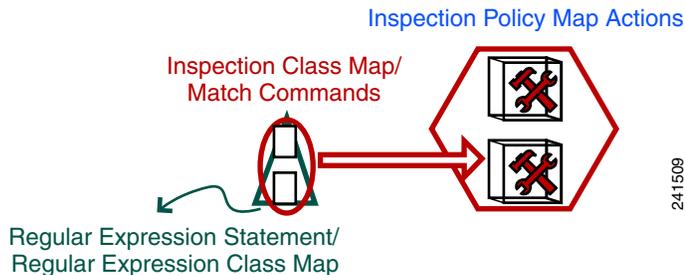

See the “[Creating a Regular Expression](#)” section on page 13-12 and the “[Creating a Regular Expression Class Map](#)” section on page 13-15.

- Step 4** Define the actions you want to perform and determine on which interfaces you want to apply the policy map—Define the actions you want to perform on each Layer 3/4 class map by creating a Layer 3/4 policy map. Then, determine on which interfaces you want to apply the policy map using a service policy.

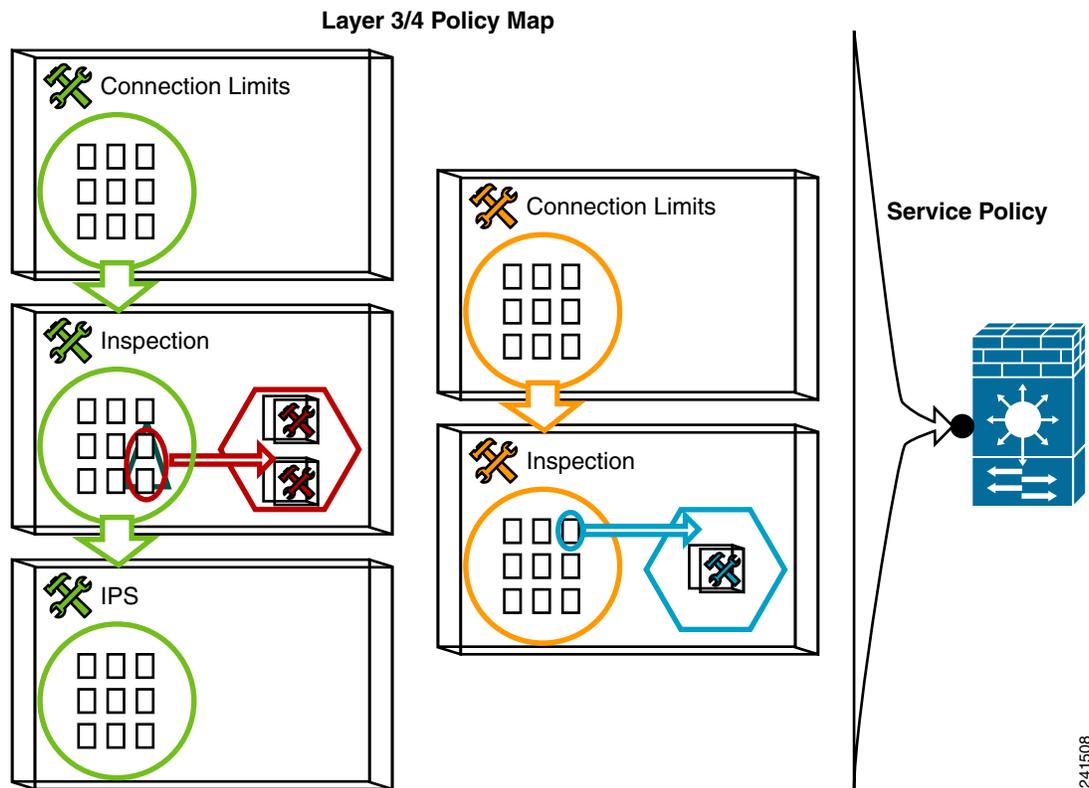

See the “[Defining Actions \(Layer 3/4 Policy Map\)](#)” section on page 32-15 and the “[Applying Actions to an Interface \(Service Policy\)](#)” section on page 32-17.

Task Flow for Configuring Hierarchical Policy Maps for QoS Traffic Shaping

If you enable QoS traffic shaping for a class map, then you can optionally enable priority queueing for a subset of shaped traffic. To do so, you need to create a policy map for the priority queueing, and then within the traffic shaping policy map, you can call the priority class map. Only the traffic shaping class map is applied to an interface.

See [Chapter 54, “Information About QoS,”](#) for more information about this feature.

Hierarchical policy maps are only supported for traffic shaping and priority queueing.

To implement a hierarchical policy map, perform the following steps:

- Step 1** Identify the prioritized traffic according to the “[Identifying Traffic \(Layer 3/4 Class Maps\)](#)” section on page 32-12.
You can create multiple class maps to be used in the hierarchical policy map.
- Step 2** Create a policy map according to the “[Defining Actions \(Layer 3/4 Policy Map\)](#)” section on page 32-15, and identify the sole action for each class map as **priority**.
- Step 3** Create a separate policy map according to the “[Defining Actions \(Layer 3/4 Policy Map\)](#)” section on page 32-15, and identify the **shape** action for the **class-default** class map.

Traffic shaping can only be applied to the **class-default** class map.

- Step 4** For the same class map, identify the priority policy map that you created in Step 2 using the **service-policy** *priority_policy_map* command.
- Step 5** Apply the shaping policy map to the interface according to “[Applying Actions to an Interface \(Service Policy\)](#)” section on page 32-17.

Identifying Traffic (Layer 3/4 Class Maps)

A Layer 3/4 class map identifies Layer 3 and 4 traffic to which you want to apply actions. You can create multiple Layer 3/4 class maps for each Layer 3/4 policy map.

This section includes the following topics:

- [Creating a Layer 3/4 Class Map for Through Traffic, page 32-12](#)
- [Creating a Layer 3/4 Class Map for Management Traffic, page 32-14](#)

Creating a Layer 3/4 Class Map for Through Traffic

A Layer 3/4 class map matches traffic based on protocols, ports, IP addresses and other Layer 3 or 4 attributes.

Detailed Steps

	Command	Purpose
Step 1	class-map <i>class_map_name</i> Example: hostname(config)# class-map all_udp	Creates a Layer 3/4 class map, where <i>class_map_name</i> is a string up to 40 characters in length. The name “class-default” is reserved. All types of class maps use the same name space, so you cannot reuse a name already used by another type of class map. The CLI enters class-map configuration mode.
Step 2	(Optional) description <i>string</i> Example: hostname(config-cmap)# description All UDP traffic	Adds a description to the class map.
Step 3	Match traffic using one of the following: match any Example: hostname(config-cmap)# match any	Unless otherwise specified, you can include only one match command in the class map. Matches all traffic.

Command	Purpose
<p>match access-list <i>access_list_name</i></p> <p>Example: <pre>hostname(config-cmap)# match access-list udp</pre></p>	<p>Matches traffic specified by an extended access list. If the ASA is operating in transparent firewall mode, you can use an EtherType access list.</p>
<p>match port {tcp udp} {eq <i>port_num</i> range <i>port_num port_num</i>}</p> <p>Example: <pre>hostname(config-cmap)# match tcp eq 80</pre></p>	<p>Matches TCP or UDP destination ports, either a single port or a contiguous range of ports.</p> <p>Tip For applications that use multiple, non-contiguous ports, use the match access-list command and define an ACE to match each port.</p>
<p>match default-inspection-traffic</p> <p>Example: <pre>hostname(config-cmap)# match default-inspection-traffic</pre></p>	<p>Matches default traffic for inspection: the default TCP and UDP ports used by all applications that the ASA can inspect.</p> <p>This command, which is used in the default global policy, is a special CLI shortcut that when used in a policy map, ensures that the correct inspection is applied to each packet, based on the destination port of the traffic. For example, when UDP traffic for port 69 reaches the ASA, then the ASA applies the TFTP inspection; when TCP traffic for port 21 arrives, then the ASA applies the FTP inspection. So in this case only, you can configure multiple inspections for the same class map (with the exception of WAAS inspection, which can be configured with other inspections. See the “Incompatibility of Certain Feature Actions” section on page 32-5 for more information about combining actions). Normally, the ASA does not use the port number to determine the inspection applied, thus giving you the flexibility to apply inspections to non-standard ports, for example.</p> <p>See the “Default Settings” section on page 42-4 for a list of default ports. Not all applications whose ports are included in the match default-inspection-traffic command are enabled by default in the policy map.</p> <p>You can specify a match access-list command along with the match default-inspection-traffic command to narrow the matched traffic. Because the match default-inspection-traffic command specifies the ports and protocols to match, any ports and protocols in the access list are ignored.</p> <p>Tip We suggest that you only inspect traffic on ports on which you expect application traffic; if you inspect all traffic, for example using match any, the ASA performance can be impacted.</p>
<p>match dscp <i>value1</i> [<i>value2</i>] [...] [<i>value8</i>]</p> <p>Example: <pre>hostname(config-cmap)# match dscp af43 cs1 ef</pre></p>	<p>Matches DSCP value in an IP header, up to eight DSCP values.</p>

Command	Purpose
match precedence <i>value1</i> [<i>value2</i>] [<i>value3</i>] [<i>value4</i>] Example: hostname(config-cmap)# match precedence 1 4	Matches up to four precedence values, represented by the TOS byte in the IP header, where <i>value1</i> through <i>value4</i> can be 0 to 7, corresponding to the possible precedences.
match rtp <i>starting_port range</i> Example: hostname(config-cmap)# match rtp 4004 100	Matches RTP traffic, where the <i>starting_port</i> specifies an even-numbered UDP destination port between 2000 and 65534. The <i>range</i> specifies the number of additional UDP ports to match above the <i>starting_port</i> , between 0 and 16383.
match tunnel-group <i>name</i> (Optional) match flow ip destination-address Example: hostname(config-cmap)# match tunnel-group group1 hostname(config-cmap)# match flow ip destination-address	Matches VPN tunnel group traffic to which you want to apply QoS. You can also specify one other match command to refine the traffic match. You can specify any of the preceding commands, except for the match any , match access-list , or match default-inspection-traffic commands. Or you can also enter the match flow ip destination-address command to match flows in the tunnel group going to each IP address.

Examples

The following is an example for the **class-map** command:

```
hostname(config)# access-list udp permit udp any any
hostname(config)# access-list tcp permit tcp any any
hostname(config)# access-list host_foo permit ip any 10.1.1.1 255.255.255.255

hostname(config)# class-map all_udp
hostname(config-cmap)# description "This class-map matches all UDP traffic"
hostname(config-cmap)# match access-list udp

hostname(config-cmap)# class-map all_tcp
hostname(config-cmap)# description "This class-map matches all TCP traffic"
hostname(config-cmap)# match access-list tcp

hostname(config-cmap)# class-map all_http
hostname(config-cmap)# description "This class-map matches all HTTP traffic"
hostname(config-cmap)# match port tcp eq http

hostname(config-cmap)# class-map to_server
hostname(config-cmap)# description "This class-map matches all traffic to server 10.1.1.1"
hostname(config-cmap)# match access-list host_foo
```

Creating a Layer 3/4 Class Map for Management Traffic

For management traffic to the ASA, you might want to perform actions specific to this kind of traffic. You can specify a management class map that can match an access list or TCP or UDP ports. The types of actions available for a management class map in the policy map are specialized for management traffic. See the [“Supported Features for Management Traffic”](#) section on page 32-2.

Detailed Steps

	Command	Purpose
Step 1	<p>class-map type management <i>class_map_name</i></p> <p>Example: hostname(config)# class-map type management all_mgmt</p>	Creates a management class map, where <i>class_map_name</i> is a string up to 40 characters in length. The name “class-default” is reserved. All types of class maps use the same name space, so you cannot reuse a name already used by another type of class map. The CLI enters class-map configuration mode.
Step 2	<p>(Optional)</p> <p>description <i>string</i></p> <p>Example: hostname(config-cmap)# description All management traffic</p>	Adds a description to the class map.
Step 3	Match traffic using one of the following:	Unless otherwise specified, you can include only one match command in the class map.
	<p>match access-list <i>access_list_name</i></p> <p>Example: hostname(config-cmap)# match access-list udp</p>	Matches traffic specified by an extended access list. If the ASA is operating in transparent firewall mode, you can use an EtherType access list.
	<p>match port {tcp udp} {eq <i>port_num</i> range <i>port_num port_num</i>}</p> <p>Example: hostname(config-cmap)# match tcp eq 80</p>	Matches TCP or UDP destination ports, either a single port or a contiguous range of ports. Tip For applications that use multiple, non-contiguous ports, use the match access-list command and define an ACE to match each port.

Defining Actions (Layer 3/4 Policy Map)

This section describes how to associate actions with Layer 3/4 class maps by creating a Layer 3/4 policy map.

Restrictions

The maximum number of policy maps is 64, but you can only apply one policy map per interface.

Detailed Steps

	Command	Purpose
Step 1	<code>policy-map <i>policy_map_name</i></code> Example: <code>hostname(config)# policy-map global_policy</code>	Adds the policy map. The <i>policy_map_name</i> argument is the name of the policy map up to 40 characters in length. All types of policy maps use the same name space, so you cannot reuse a name already used by another type of policy map. The CLI enters policy-map configuration mode.
Step 2	(Optional) <code>class <i>class_map_name</i></code> Example: <code>hostname(config-pmap)# description global_policy map</code>	Specifies a previously configured Layer 3/4 class map, where the <i>class_map_name</i> is the name of the class map. See the “Identifying Traffic (Layer 3/4 Class Maps)” section on page 32-12 to add a class map. Note If there is no match default-inspection-traffic command in a class map, then at most one inspect command is allowed to be configured under the class. For QoS, you can configure a hierarchical policy map for the traffic shaping and priority queue features. See the “Task Flow for Configuring Hierarchical Policy Maps for QoS Traffic Shaping” section on page 32-11 for more information.
Step 3	Specify one or more actions for this class map.	See the “Supported Features for Through Traffic” section on page 32-2.
Step 4	Repeat Step 2 and Step 3 for each class map you want to include in this policy map.	

Examples

The following is an example of a **policy-map** command for connection policy. It limits the number of connections allowed to the web server 10.1.1.1:

```
hostname(config)# access-list http-server permit tcp any host 10.1.1.1
hostname(config)# class-map http-server
hostname(config-cmap)# match access-list http-server

hostname(config)# policy-map global-policy
hostname(config-pmap)# description This policy map defines a policy concerning connection to http server.
hostname(config-pmap)# class http-server
hostname(config-pmap-c)# set connection conn-max 256
```

The following example shows how multi-match works in a policy map:

```
hostname(config)# class-map inspection_default
hostname(config-cmap)# match default-inspection-traffic
hostname(config)# class-map http_traffic
hostname(config-cmap)# match port tcp eq 80

hostname(config)# policy-map outside_policy
hostname(config-pmap)# class inspection_default
hostname(config-pmap-c)# inspect http http_map
hostname(config-pmap-c)# inspect sip
hostname(config-pmap)# class http_traffic
hostname(config-pmap-c)# set connection timeout idle 0:10:0
```

The following example shows how traffic matches the first available class map, and will not match any subsequent class maps that specify actions in the same feature domain:

```
hostname(config)# class-map telnet_traffic
hostname(config-cmap)# match port tcp eq 23
hostname(config)# class-map ftp_traffic
hostname(config-cmap)# match port tcp eq 21
hostname(config)# class-map tcp_traffic
hostname(config-cmap)# match port tcp range 1 65535
hostname(config)# class-map udp_traffic
hostname(config-cmap)# match port udp range 0 65535
hostname(config)# policy-map global_policy
hostname(config-pmap)# class telnet_traffic
hostname(config-pmap-c)# set connection timeout idle 0:0:0
hostname(config-pmap-c)# set connection conn-max 100
hostname(config-pmap)# class ftp_traffic
hostname(config-pmap-c)# set connection timeout idle 0:5:0
hostname(config-pmap-c)# set connection conn-max 50
hostname(config-pmap)# class tcp_traffic
hostname(config-pmap-c)# set connection timeout idle 2:0:0
hostname(config-pmap-c)# set connection conn-max 2000
```

When a Telnet connection is initiated, it matches **class telnet_traffic**. Similarly, if an FTP connection is initiated, it matches **class ftp_traffic**. For any TCP connection other than Telnet and FTP, it will match **class tcp_traffic**. Even though a Telnet or FTP connection can match **class tcp_traffic**, the ASA does not make this match because they previously matched other classes.

Applying Actions to an Interface (Service Policy)

To activate the Layer 3/4 policy map, create a service policy that applies it to one or more interfaces or that applies it globally to all interfaces.

Restrictions

You can only apply one global policy, so if you want to alter the global policy, you need to either edit the default policy or disable it and apply a new one. By default, the configuration includes a global policy that matches all default application inspection traffic and applies inspection to the traffic globally. The default service policy includes the following command:

```
service-policy global_policy global
```

Detailed Steps

Command	Purpose
service-policy <i>policy_map_name</i> interface <i>interface_name</i> Example: hostname(config)# service-policy inbound_policy interface outside	Creates a service policy by associating a policy map with an interface.
service-policy <i>policy_map_name</i> global Example: hostname(config)# service-policy inbound_policy global	Creates a service policy that applies to all interfaces that do not have a specific policy.

Examples

For example, the following command enables the inbound_policy policy map on the outside interface:

```
hostname(config)# service-policy inbound_policy interface outside
```

The following commands disable the default global policy, and enables a new one called new_global_policy on all other ASA interfaces:

```
hostname(config)# no service-policy global_policy global  

hostname(config)# service-policy new_global_policy global
```

Monitoring Modular Policy Framework

To monitor Modular Policy Framework, enter the following command:

Command	Purpose
show service-policy	Displays the service policy statistics.

Configuration Examples for Modular Policy Framework


This section includes several Modular Policy Framework examples and includes the following topics:

- [Applying Inspection and QoS Policing to HTTP Traffic, page 32-19](#)
- [Applying Inspection to HTTP Traffic Globally, page 32-19](#)
- [Applying Inspection and Connection Limits to HTTP Traffic to Specific Servers, page 32-20](#)
- [Applying Inspection to HTTP Traffic with NAT, page 32-21](#)

Applying Inspection and QoS Policing to HTTP Traffic

In this example (see [Figure 32-1](#)), any HTTP connection (TCP traffic on port 80) that enters or exits the ASA through the outside interface is classified for HTTP inspection. Any HTTP traffic that exits the outside interface is classified for policing.

Figure 32-1 HTTP Inspection and QoS Policing

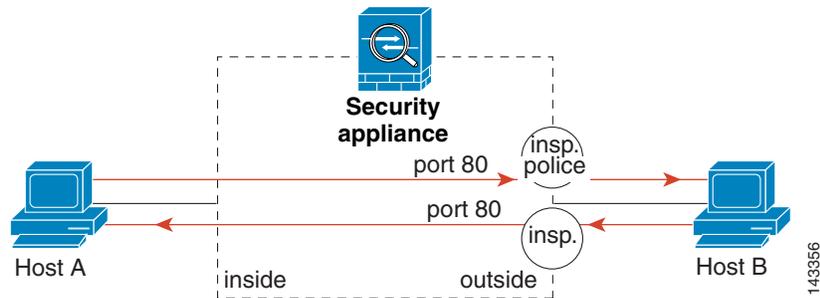

See the following commands for this example:


```
hostname(config)# class-map http_traffic
hostname(config-cmap)# match port tcp eq 80

hostname(config)# policy-map http_traffic_policy
hostname(config-pmap)# class http_traffic
hostname(config-pmap-c)# inspect http
hostname(config-pmap-c)# police output 250000
hostname(config)# service-policy http_traffic_policy interface outside
```

Applying Inspection to HTTP Traffic Globally

In this example (see [Figure 32-2](#)), any HTTP connection (TCP traffic on port 80) that enters the ASA through any interface is classified for HTTP inspection. Because the policy is a global policy, inspection occurs only as the traffic enters each interface.

Figure 32-2 Global HTTP Inspection

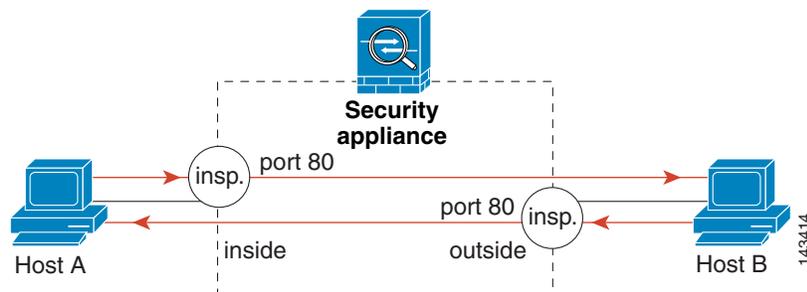

See the following commands for this example:

```
hostname(config)# class-map http_traffic
hostname(config-cmap)# match port tcp eq 80
```

```

hostname(config)# policy-map http_traffic_policy
hostname(config-pmap)# class http_traffic
hostname(config-pmap-c)# inspect http
hostname(config)# service-policy http_traffic_policy global


```

Applying Inspection and Connection Limits to HTTP Traffic to Specific Servers

In this example (see Figure 32-3), any HTTP connection destined for Server A (TCP traffic on port 80) that enters the ASA through the outside interface is classified for HTTP inspection and maximum connection limits. Connections initiated from Server A to Host A does not match the access list in the class map, so it is not affected.

Any HTTP connection destined for Server B that enters the ASA through the inside interface is classified for HTTP inspection. Connections initiated from Server B to Host B does not match the access list in the class map, so it is not affected.

Figure 32-3 HTTP Inspection and Connection Limits to Specific Servers

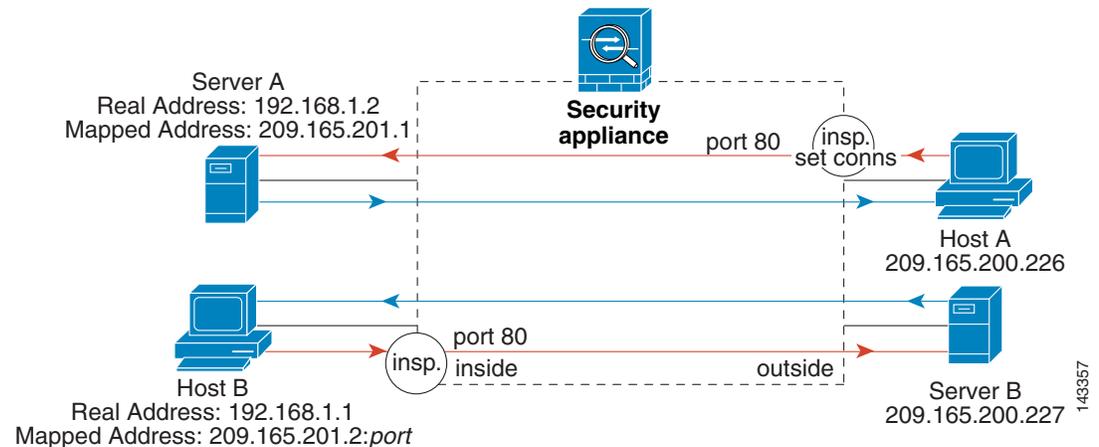

See the following commands for this example:

```

hostname(config)# object network obj-192.168.1.2
hostname(config-network-object)# host 192.168.1.2
hostname(config-network-object)# nat (inside,outside) static 209.165.201.1
hostname(config)# object network obj-192.168.1.0
hostname(config-network-object)# subnet 192.168.1.0 255.255.255.0
hostname(config-network-object)# nat (inside,outside) dynamic 209.165.201.2
hostname(config)# access-list serverA extended permit tcp any host 209.165.201.1 eq 80
hostname(config)# access-list ServerB extended permit tcp any host 209.165.200.227 eq 80

hostname(config)# class-map http_serverA
hostname(config-cmap)# match access-list serverA
hostname(config)# class-map http_serverB
hostname(config-cmap)# match access-list serverB

hostname(config)# policy-map policy_serverA
hostname(config-pmap)# class http_serverA
hostname(config-pmap-c)# inspect http
hostname(config-pmap-c)# set connection conn-max 100
hostname(config)# policy-map policy_serverB
hostname(config-pmap)# class http_serverB
hostname(config-pmap-c)# inspect http


```

```
hostname(config)# service-policy policy_serverB interface inside
hostname(config)# service-policy policy_serverA interface outside
```

Applying Inspection to HTTP Traffic with NAT

In this example, the Host on the inside network has two addresses: one is the real IP address 192.168.1.1, and the other is a mapped IP address used on the outside network, 209.165.200.225. Because the policy is applied to the inside interface, where the real address is used, then you must use the real IP address in the access list in the class map. If you applied it to the outside interface, you would use the mapped address.

Figure 32-4 HTTP Inspection with NAT

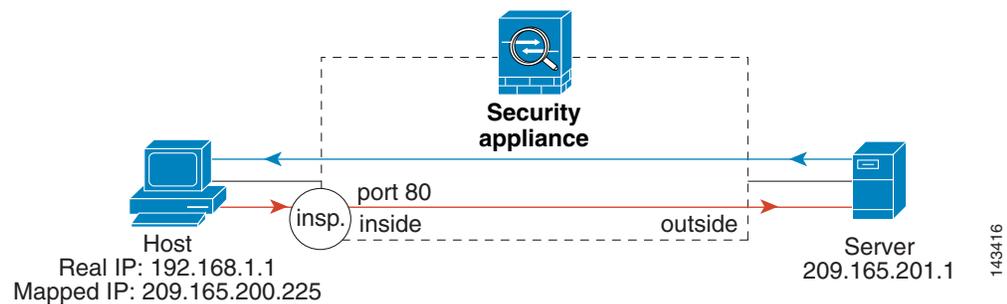

See the following commands for this example:

```
hostname(config)# static (inside,outside) 209.165.200.225 192.168.1.1
hostname(config)# access-list http_client extended permit tcp host 192.168.1.1 any eq 80

hostname(config)# class-map http_client
hostname(config-cmap)# match access-list http_client

hostname(config)# policy-map http_client
hostname(config-pmap)# class http_client
hostname(config-pmap-c)# inspect http

hostname(config)# service-policy http_client interface inside
```

Feature History for Service Policies

Table 32-3 lists the release history for this feature.

Table 32-3 Feature History for Service Policies

Feature Name	Releases	Feature Information
Modular Policy Framework	7.0(1)	Modular Policy Framework was introduced.
Management class map for use with RADIUS accounting traffic	7.2(1)	The management class map was introduced for use with RADIUS accounting traffic. The following commands were introduced: class-map type management , and inspect radius-accounting .

Table 32-3 Feature History for Service Policies (continued)

Feature Name	Releases	Feature Information
Inspection policy maps	7.2(1)	The inspection policy map was introduced. The following command was introduced: class-map type inspect .
Regular expressions and policy maps	7.2(1)	Regular expressions and policy maps were introduced to be used under inspection policy maps. The following commands were introduced: class-map type regex , regex , match regex .
Match any for inspection policy maps	8.0(2)	The match any keyword was introduced for use with inspection policy maps: traffic can match one or more criteria to match the class map. Formerly, only match all was available.
Maximum connections and embryonic connections for management traffic	8.0(2)	The set connection command is now available for a Layer 3/4 management class map, for to-the-security appliance management traffic. Only the conn-max and embryonic-conn-max keywords are available.



CHAPTER **33**

Configuring Special Actions for Application Inspections (Inspection Policy Map)

Modular Policy Framework lets you configure special actions for many application inspections. When you enable an inspection engine in the Layer 3/4 policy map, you can also optionally enable actions as defined in an *inspection policy map*. When the inspection policy map matches traffic within the Layer 3/4 class map for which you have defined an inspection action, then that subset of traffic will be acted upon as specified (for example, dropped or rate-limited).

This chapter includes the following sections:

- [Information About Inspection Policy Maps, page 33-1](#)
- [Guidelines and Limitations, page 33-2](#)
- [Default Inspection Policy Maps, page 33-2](#)
- [Defining Actions in an Inspection Policy Map, page 33-2](#)
- [Identifying Traffic in an Inspection Class Map, page 33-6](#)
- [Where to Go Next, page 33-7](#)

Information About Inspection Policy Maps

See the “[Configuring Application Layer Protocol Inspection](#)” section on page 42-6 for a list of applications that support inspection policy maps.

An inspection policy map consists of one or more of the following elements. The exact options available for an inspection policy map depends on the application.

- Traffic matching command—You can define a traffic matching command directly in the inspection policy map to match application traffic to criteria specific to the application, such as a URL string, for which you then enable actions.
 - Some traffic matching commands can specify regular expressions to match text inside a packet. Be sure to create and test the regular expressions before you configure the policy map, either singly or grouped together in a regular expression class map.
- Inspection class map—(Not available for all applications. See the CLI help for a list of supported applications.) An inspection class map includes traffic matching commands that match application traffic with criteria specific to the application, such as a URL string. You then identify the class map in the policy map and enable actions. The difference between creating a class map and defining the traffic match directly in the inspection policy map is that you can create more complex match criteria and you can reuse class maps.

- Some traffic matching commands can specify regular expressions to match text inside a packet. Be sure to create and test the regular expressions before you configure the policy map, either singly or grouped together in a regular expression class map.
- Parameters—Parameters affect the behavior of the inspection engine.

Guidelines and Limitations

- HTTP inspection policy maps—If you modify an in-use HTTP inspection policy map (**policy-map type inspect http**), you must remove and reapply the **inspect http map** action for the changes to take effect. For example, if you modify the “http-map” inspection policy map, you must remove and readd the **inspect http http-map** command from the layer 3/4 policy:

```
hostname(config)# policy-map test
hostname(config-pmap)# class http0
hostname(config-pmap-c)# no inspect http http-map
hostname(config-pmap-c)# inspect http http-map
```

- All inspection policy maps—If you want to exchange an in-use inspection policy map for a different map name, you must remove the **inspect protocol map** command, and readd it with the new map. For example:

```
hostname(config)# policy-map test
hostname(config-pmap)# class sip
hostname(config-pmap-c)# no inspect sip sip-map1
hostname(config-pmap-c)# inspect sip sip-map2
```

Default Inspection Policy Maps

The default inspection policy map configuration includes the following commands, which sets the maximum message length for DNS packets to be 512 bytes:

```
policy-map type inspect dns preset_dns_map
  parameters
    message-length maximum 512
```



Note

There are other default inspection policy maps such as **policy-map type inspect esmtp _default_esmtp_map**. These default policy maps are created implicitly by the command **inspect protocol**. For example, **inspect esmtp** implicitly uses the policy map “_default_esmtp_map.” All the default policy maps can be shown by using the **show running-config all policy-map** command.

Defining Actions in an Inspection Policy Map

When you enable an inspection engine in the Layer 3/4 policy map, you can also optionally enable actions as defined in an inspection policy map.

Restrictions

You can specify multiple **class** or **match** commands in the policy map.

If a packet matches multiple different **match** or **class** commands, then the order in which the ASA applies the actions is determined by internal ASA rules, and not by the order they are added to the policy map. The internal rules are determined by the application type and the logical progression of parsing a packet, and are not user-configurable. For example for HTTP traffic, parsing a Request Method field precedes parsing the Header Host Length field; an action for the Request Method field occurs before the action for the Header Host Length field. For example, the following match commands can be entered in any order, but the **match request method get** command is matched first.

```
match request header host length gt 100
  reset
match request method get
  log
```

If an action drops a packet, then no further actions are performed in the inspection policy map. For example, if the first action is to reset the connection, then it will never match any further **match** or **class** commands. If the first action is to log the packet, then a second action, such as resetting the connection, can occur. (You can configure both the **reset** (or **drop-connection**, and so on.) and the **log** action for the same **match** or **class** command, in which case the packet is logged before it is reset for a given match.)

If a packet matches multiple **match** or **class** commands that are the same, then they are matched in the order they appear in the policy map. For example, for a packet with the header length of 1001, it will match the first command below, and be logged, and then will match the second command and be reset. If you reverse the order of the two **match** commands, then the packet will be dropped and the connection reset before it can match the second **match** command; it will never be logged.

```
match request header length gt 100
  log
match request header length gt 1000
  reset
```

A class map is determined to be the same type as another class map or **match** command based on the lowest priority **match** command in the class map (the priority is based on the internal rules). If a class map has the same type of lowest priority **match** command as another class map, then the class maps are matched according to the order they are added to the policy map. If the lowest priority command for each class map is different, then the class map with the higher priority **match** command is matched first. For example, the following three class maps contain two types of **match** commands: **match request-cmd** (higher priority) and **match filename** (lower priority). The ftp3 class map includes both commands, but it is ranked according to the lowest priority command, **match filename**. The ftp1 class map includes the highest priority command, so it is matched first, regardless of the order in the policy map. The ftp3 class map is ranked as being of the same priority as the ftp2 class map, which also contains the **match filename** command. They are matched according to the order in the policy map: ftp3 and then ftp2.

```
class-map type inspect ftp match-all ftp1
  match request-cmd get
class-map type inspect ftp match-all ftp2
  match filename regex abc
class-map type inspect ftp match-all ftp3
  match request-cmd get
  match filename regex abc

policy-map type inspect ftp ftp
  class ftp3
    log
  class ftp2
    log
  class ftp1
    log
```

Detailed Steps

	Command	Purpose
Step 1	(Optional) Create an inspection class map.	See the “Identifying Traffic in an Inspection Class Map” section on page 33-6. Alternatively, you can identify the traffic directly within the policy map.
Step 2	<code>policy-map type inspect application policy_map_name</code> Example: hostname(config)# policy-map type inspect http http_policy	Creates the inspection policy map. See the “Configuring Application Layer Protocol Inspection” section on page 42-6 for a list of applications that support inspection policy maps. The <code>policy_map_name</code> argument is the name of the policy map up to 40 characters in length. All types of policy maps use the same name space, so you cannot reuse a name already used by another type of policy map. The CLI enters policy-map configuration mode.
Step 3	Specify the traffic on which you want to perform actions using one of the following methods: <code>class class_map_name</code> Example: hostname(config-pmap)# class http_traffic hostname(config-pmap-c)#	Specifies the inspection class map that you created in the “Identifying Traffic in an Inspection Class Map” section on page 33-6. Not all applications support inspection class maps.
	Specify traffic directly in the policy map using one of the match commands described for each application in the inspection chapter. Example: hostname(config-pmap)# match req-resp content-type mismatch hostname(config-pmap-c)#	If you use a match not command, then any traffic that matches the criterion in the match not command does not have the action applied.

Command	Purpose
<p>Step 4</p> <pre>{[drop [send-protocol-error] drop-connection [send-protocol-error] mask reset] [log] rate-limit message_rate}</pre> <p>Example: hostname(config-pmap-c) # drop-connection log</p>	<p>Specifies the action you want to perform on the matching traffic. Not all options are available for each application. Other actions specific to the application might also be available. See the appropriate inspection chapter for the exact options available.</p> <ul style="list-style-type: none"> • drop—Drops all packets that match. • send-protocol-error—Sends a protocol error message. • drop-connection—Drops the packet and closes the connection. • mask—Masks out the matching portion of the packet. • reset—Drops the packet, closes the connection, and sends a TCP reset to the server and/or client. • log—Sends a system log message. You can use log alone or with one of the other keywords. • rate-limit message_rate—Limits the rate of messages.
<p>Step 5</p> <p>parameters</p> <p>Example: hostname(config-pmap) # parameters hostname(config-pmap-p) #</p>	<p>Configures parameters that affect the inspection engine. The CLI enters parameters configuration mode. For the parameters available for each application, see the appropriate inspection chapter.</p>

Examples

The following is an example of an HTTP inspection policy map and the related class maps. This policy map is activated by the Layer 3/4 policy map, which is enabled by the service policy.

```
hostname(config)# regex url_example example\.com
hostname(config)# regex url_example2 example2\.com
hostname(config)# class-map type regex match-any URLs
hostname(config-cmap)# match regex url_example
hostname(config-cmap)# match regex url_example2

hostname(config-cmap)# class-map type inspect http match-all http-traffic
hostname(config-cmap)# match req-resp content-type mismatch
hostname(config-cmap)# match request body length gt 1000
hostname(config-cmap)# match not request uri regex class URLs

hostname(config-cmap)# policy-map type inspect http http-map1
hostname(config-pmap)# class http-traffic
hostname(config-pmap-c)# drop-connection log
hostname(config-pmap-c)# match req-resp content-type mismatch
hostname(config-pmap-c)# reset log
hostname(config-pmap-c)# parameters
hostname(config-pmap-p)# protocol-violation action log

hostname(config-pmap-p)# policy-map test
hostname(config-pmap)# class test (a Layer 3/4 class map not shown)
hostname(config-pmap-c)# inspect http http-map1

hostname(config-pmap-c)# service-policy test interface outside
```

Identifying Traffic in an Inspection Class Map

This type of class map allows you to match criteria that is specific to an application. For example, for DNS traffic, you can match the domain name in a DNS query.

A class map groups multiple traffic matches (in a match-all class map), or lets you match any of a list of matches (in a match-any class map). The difference between creating a class map and defining the traffic match directly in the inspection policy map is that the class map lets you group multiple match commands, and you can reuse class maps. For the traffic that you identify in this class map, you can specify actions such as dropping, resetting, and/or logging the connection in the inspection policy map. If you want to perform different actions on different types of traffic, you should identify the traffic directly in the policy map.

Restrictions

Not all applications support inspection class maps. See the CLI help for **class-map type inspect** for a list of supported applications.

Detailed Steps

	Command	Purpose
Step 1	(Optional) Create a regular expression.	See the “Creating a Regular Expression” section on page 13-12 and the “Creating a Regular Expression Class Map” section on page 13-15.
Step 2	<pre>class-map type inspect application [match-all match-any] class_map_name</pre> <p>Example:</p> <pre>hostname(config)# class-map type inspect http http_traffic hostname(config-cmap)#</pre>	<p>Creates an inspection class map, where the <i>application</i> is the application you want to inspect. For supported applications, see the CLI help for a list of supported applications or see Chapter 42, “Getting Started with Application Layer Protocol Inspection.”</p> <p>The <i>class_map_name</i> argument is the name of the class map up to 40 characters in length.</p> <p>The match-all keyword is the default, and specifies that traffic must match all criteria to match the class map.</p> <p>The match-any keyword specifies that the traffic matches the class map if it matches at least one of the criteria.</p> <p>The CLI enters class-map configuration mode, where you can enter one or more match commands.</p>

	Command	Purpose
Step 3	(Optional) <code>description string</code> Example: <code>hostname(config-cmap)# description All UDP traffic</code>	Adds a description to the class map.
Step 4	Define the traffic to include in the class by entering one or more match commands available for your application.	To specify traffic that should not match the class map, use the match not command. For example, if the match not command specifies the string “example.com,” then any traffic that includes “example.com” does not match the class map. To see the match commands available for each application, see the appropriate inspection chapter.

Examples

The following example creates an HTTP class map that must match all criteria:

```
hostname(config-cmap)# class-map type inspect http match-all http-traffic
hostname(config-cmap)# match req-resp content-type mismatch
hostname(config-cmap)# match request body length gt 1000
hostname(config-cmap)# match not request uri regex class URLs
```

The following example creates an HTTP class map that can match any of the criteria:

```
hostname(config-cmap)# class-map type inspect http match-any monitor-http
hostname(config-cmap)# match request method get
hostname(config-cmap)# match request method put
hostname(config-cmap)# match request method post
```

Where to Go Next

To use an inspection policy, see [Chapter 32, “Configuring a Service Policy Using the Modular Policy Framework.”](#)



PART 9

Configuring Access Control



CHAPTER 34

Configuring Access Rules

This chapter describes how to control network access through the ASA using access rules and includes the following sections:

- [Information About Access Rules, page 34-1](#)
- [Licensing Requirements for Access Rules, page 34-6](#)
- [Prerequisites, page 34-7](#)
- [Guidelines and Limitations, page 34-7](#)
- [Default Settings, page 34-7](#)
- [Configuring Access Rules, page 34-7](#)
- [Monitoring Access Rules, page 34-8](#)
- [Configuration Examples for Permitting or Denying Network Access, page 34-9](#)
- [Feature History for Access Rules, page 34-10](#)



Note

You use access rules to control network access in both routed and transparent firewall modes. In transparent mode, you can use both access rules (for Layer 3 traffic) and EtherType rules (for Layer 2 traffic).

To access the ASA interface for management access, you do not also need an access rule allowing the host IP address. You only need to configure management access according to [Chapter 37, “Configuring Management Access.”](#)

Information About Access Rules

You create an access rule by applying an extended or EtherType access list to an interface or globally for all interfaces. You can use access rules in routed and transparent firewall mode to control IP traffic. An access rule permits or denies traffic based on the protocol, a source and destination IP address or network, and optionally the source and destination ports.

For transparent mode only, an EtherType rule controls network access for non-IP traffic. An EtherType rule permits or denies traffic based on the EtherType.

This section includes the following topics:

- [General Information About Rules, page 34-2](#)
- [Information About Extended Access Rules, page 34-4](#)

- [Information About EtherType Rules, page 34-5](#)

General Information About Rules

This section describes information for both access rules and EtherType rules, and it includes the following topics:

- [Implicit Permits, page 34-2](#)
- [Information About Interface Access Rules and Global Access Rules, page 34-2](#)
- [Using Access Rules and EtherType Rules on the Same Interface, page 34-2](#)
- [Implicit Deny, page 34-3](#)
- [Inbound and Outbound Rules, page 34-3](#)

Implicit Permits

For routed mode, the following types of traffic are allowed through by default:

- IPv4 traffic from a higher security interface to a lower security interface.
- IPv6 traffic from a higher security interface to a lower security interface.

For transparent mode, the following types of traffic are allowed through by default:

- IPv4 traffic from a higher security interface to a lower security interface.
- IPv6 traffic from a higher security interface to a lower security interface.
- ARPs in both directions.



Note ARP traffic can be controlled by ARP inspection, but cannot be controlled by an access rule.

- BPDUs in both directions.

For other traffic, you need to use either an extended access rule (IPv4), an IPv6 access rule (IPv6), or an EtherType rule (non-IPv4/IPv6).

Information About Interface Access Rules and Global Access Rules

You can apply an access rule to a specific interface, or you can apply an access rule globally to all interfaces. You can configure global access rules in conjunction with interface access rules, in which case, the specific interface access rules are always processed before the general global access rules.



Note Global access rules apply only to inbound traffic. See the [“Inbound and Outbound Rules” section on page 34-3](#).

Using Access Rules and EtherType Rules on the Same Interface

You can apply one access rule and one EtherType rule to each direction of an interface.

Implicit Deny

Access lists have an implicit deny at the end of the list, so unless you explicitly permit it, traffic cannot pass. For example, if you want to allow all users to access a network through the ASA except for particular addresses, then you need to deny the particular addresses and then permit all others.

For EtherType access lists, the implicit deny at the end of the access list does not affect IP traffic or ARPs; for example, if you allow EtherType 8037, the implicit deny at the end of the access list does not now block any IP traffic that you previously allowed with an extended access list (or implicitly allowed from a high security interface to a low security interface). However, if you explicitly deny all traffic with an EtherType ACE, then IP and ARP traffic is denied.

If you configure a global access rule, then the implicit deny comes *after* the global rule is processed. See the following order of operations:

1. Interface access rule.
2. Global access rule.
3. Implicit deny.

Inbound and Outbound Rules

The ASA supports two types of access rules:


- Inbound—Inbound access rules apply to traffic as it enters an interface. Global access rules are always inbound.
- Outbound—Outbound access rules apply to traffic as it exits an interface.

**Note**

“Inbound” and “outbound” refer to the application of an access list on an interface, either to traffic entering the ASA on an interface or traffic exiting the ASA on an interface. These terms do not refer to the movement of traffic from a lower security interface to a higher security interface, commonly known as inbound, or from a higher to lower interface, commonly known as outbound.

An outbound access list is useful, for example, if you want to allow only certain hosts on the inside networks to access a web server on the outside network. Rather than creating multiple inbound access lists to restrict access, you can create a single outbound access list that allows only the specified hosts. (See [Figure 34-1](#).) The outbound access list prevents any other hosts from reaching the outside network.

Figure 34-1 Outbound Access List

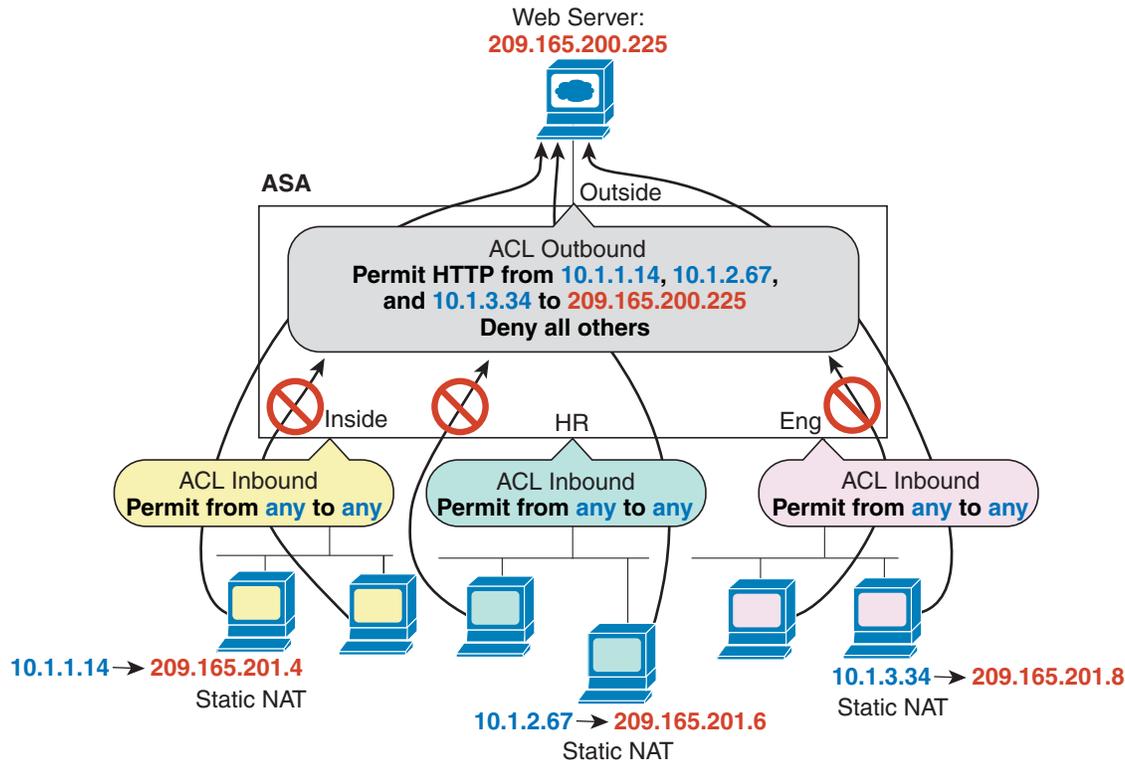

See the following commands for this example:

```
hostname(config)# access-list OUTSIDE extended permit tcp host 10.1.1.14
host 209.165.200.225 eq www
hostname(config)# access-list OUTSIDE extended permit tcp host 10.1.2.67
host 209.165.200.225 eq www
hostname(config)# access-list OUTSIDE extended permit tcp host 10.1.3.34
host 209.165.200.225 eq www
hostname(config)# access-group OUTSIDE out interface outside
```

Information About Extended Access Rules

This section describes information about extended access rules and includes the following topics:

- [Access Rules for Returning Traffic](#), page 34-4
- [Allowing Broadcast and Multicast Traffic through the Transparent Firewall Using Access Rules](#), page 34-5
- [Management Access Rules](#), page 34-5

Access Rules for Returning Traffic

For TCP and UDP connections for both routed and transparent mode, you do not need an access rule to allow returning traffic because the ASA allows all returning traffic for established, bidirectional connections.

For connectionless protocols such as ICMP, however, the ASA establishes unidirectional sessions, so you either need access rules to allow ICMP in both directions (by applying access lists to the source and destination interfaces), or you need to enable the ICMP inspection engine. The ICMP inspection engine treats ICMP sessions as bidirectional connections. To control ping, specify **echo-reply (0)** (ASA to host) or **echo (8)** (host to ASA).

Allowing Broadcast and Multicast Traffic through the Transparent Firewall Using Access Rules

In routed firewall mode, broadcast and multicast traffic is blocked even if you allow it in an access rule, including unsupported dynamic routing protocols and DHCP (unless you configure DHCP relay). Transparent firewall mode can allow any IP traffic through. This feature is especially useful in multiple context mode, which does not allow dynamic routing, for example.



Note

Because these special types of traffic are connectionless, you need to apply an extended access list to both interfaces, so returning traffic is allowed through.

Table 34-1 lists common traffic types that you can allow through the transparent firewall.

Table 34-1 Transparent Firewall Special Traffic

Traffic Type	Protocol or Port	Notes
DHCP	UDP ports 67 and 68	If you enable the DHCP server, then the ASA does not pass DHCP packets.
EIGRP	Protocol 88	—
OSPF	Protocol 89	—
Multicast streams	The UDP ports vary depending on the application.	Multicast streams are always destined to a Class D address (224.0.0.0 to 239.x.x.x).
RIP (v1 or v2)	UDP port 520	—

Management Access Rules

You can configure access rules that control management traffic destined to the ASA. Access control rules for to-the-box management traffic (defined by such commands as **http**, **ssh**, or **telnet**) have higher precedence than an management access rule applied with the **control-plane** option. Therefore, such permitted management traffic will be allowed to come in even if explicitly denied by the to-the-box access list.

Information About EtherType Rules

This section describes EtherType rules and includes the following topics:

- [Supported EtherTypes and Other Traffic, page 34-6](#)
- [Access Rules for Returning Traffic, page 34-6](#)
- [Allowing MPLS, page 34-6](#)

Supported EtherTypes and Other Traffic

An EtherType rule controls the following:

- EtherType identified by a 16-bit hexadecimal number, including common types IPX and MPLS unicast or multicast.
- Ethernet V2 frames.
- BPDUs, which are permitted by default. BPDUs are SNAP-encapsulated, and the ASA is designed to specifically handle BPDUs.
- Trunk port (Cisco proprietary) BPDUs. Trunk BPDUs have VLAN information inside the payload, so the ASA modifies the payload with the outgoing VLAN if you allow BPDUs.
- IS-IS (supported in Version 8.4(5) only).

The following types of traffic are not supported:

- 802.3-formatted frames—These frames are not handled by the rule because they use a length field as opposed to a type field.

Access Rules for Returning Traffic

Because EtherTypes are connectionless, you need to apply the rule to both interfaces if you want traffic to pass in both directions.

Allowing MPLS

If you allow MPLS, ensure that Label Distribution Protocol and Tag Distribution Protocol TCP connections are established through the ASA by configuring both MPLS routers connected to the ASA to use the IP address on the ASA interface as the router-id for LDP or TDP sessions. (LDP and TDP allow MPLS routers to negotiate the labels (addresses) used to forward packets.)

On Cisco IOS routers, enter the appropriate command for your protocol, LDP or TDP. The *interface* is the interface connected to the ASA.

```
hostname(config)# mpls ldp router-id interface force
```

Or

```
hostname(config)# tag-switching tdp router-id interface force
```

Licensing Requirements for Access Rules

The following table shows the licensing requirements for this feature:

Model	License Requirement
All models	Base License.

Prerequisites

Before you can create an access rule, create the access list. See [Chapter 15, “Adding an Extended Access List,”](#) and [Chapter 16, “Adding an EtherType Access List,”](#) for more information.

Guidelines and Limitations

This section includes the guidelines and limitations for this feature.

Context Mode Guidelines

Supported in single and multiple context mode.

Firewall Mode Guidelines

Supported in routed and transparent firewall modes.

IPv6 Guidelines

Supports IPv6.

Per-User Access List Guidelines

- If there is no per-user access list associated with a packet, the interface access rule is applied.
- The per-user access list uses the value in the **timeout uauth** command, but it can be overridden by the AAA per-user session timeout value.
- If traffic is denied because of a per-user access list, syslog message 109025 is logged. If traffic is permitted, no syslog message is generated. The **log** option in the per-user access list has no effect.

Default Settings

See the [“Implicit Permits”](#) section on page 34-2.

Configuring Access Rules

To apply an access rule, perform the following steps.

Detailed Steps

Command	Purpose
<pre>access-group access_list {{in out} interface interface_name [per-user-override control-plane] global}</pre> <p>Example:</p> <pre>hostname(config)# access-group acl_out in interface outside</pre>	<p>Binds an access list to an interface or applies it globally.</p> <p>Specify the extended, EtherType, or IPv6 access list name. You can configure one access-group command per access list type per interface. You cannot reference empty access lists or access lists that contain only a remark.</p> <p>For an interface-specific rule:</p> <ul style="list-style-type: none"> • The in keyword applies the access list to inbound traffic. The out keyword applies the access list to the outbound traffic. • Specify the interface name. • The per-user-override keyword (for inbound access lists only) allows dynamic user access lists that are downloaded for user authorization to override the access list assigned to the interface. For example, if the interface access list denies all traffic from 10.0.0.0, but the dynamic access list permits all traffic from 10.0.0.0, then the dynamic access list overrides the interface access list for that user. See the “Configuring RADIUS Authorization” section on page 38-14 for more information about per-user access lists. See also the “Per-User Access List Guidelines” section on page 34-7. • The control-plane keyword specifies if the rule is for to-the-box traffic. <p>For a global rule, specify the global keyword to apply the access list to the inbound direction of all interfaces.</p>

Examples

The following example shows how to use the **access-group** command:

```
hostname(config)# access-list acl_out permit tcp any host 209.165.201.3 eq 80
hostname(config)# access-group acl_out in interface outside
```

The **access-list** command lets any host access the global address using port 80. The **access-group** command specifies that the **access-list** command applies to traffic entering the outside interface.

Monitoring Access Rules

To monitor network access, enter the following command:

Command	Purpose
<code>show running-config access-group</code>	Displays the current access list bound to the interfaces.

Configuration Examples for Permitting or Denying Network Access

This section includes typical configuration examples for permitting or denying network access.

The following example illustrates the commands required to enable access to an inside web server with the IP address 209.165.201.12. (This IP address is the real address, not the visible on the outside interface after NAT.)

```
hostname(config)# access-list ACL_OUT extended permit tcp any host 209.165.201.12 eq www
hostname(config)# access-group ACL_OUT in interface outside
```

The following example allows all hosts to communicate between the **inside** and **hr** networks but only specific hosts to access the outside network:

```
hostname(config)# access-list ANY extended permit ip any any
hostname(config)# access-list OUT extended permit ip host 209.168.200.3 any
hostname(config)# access-list OUT extended permit ip host 209.168.200.4 any

hostname(config)# access-group ANY in interface inside
hostname(config)# access-group ANY in interface hr
hostname(config)# access-group OUT out interface outside
```

For example, the following sample access list allows common EtherTypes originating on the inside interface:

```
hostname(config)# access-list ETHER ethertype permit ipx
hostname(config)# access-list ETHER ethertype permit mpls-unicast
hostname(config)# access-group ETHER in interface inside
```

The following example allows some EtherTypes through the ASA, but it denies all others:

```
hostname(config)# access-list ETHER ethertype permit 0x1234
hostname(config)# access-list ETHER ethertype permit mpls-unicast
hostname(config)# access-group ETHER in interface inside
hostname(config)# access-group ETHER in interface outside
```

The following example denies traffic with EtherType 0x1256 but allows all others on both interfaces:

```
hostname(config)# access-list nonIP ethertype deny 1256
hostname(config)# access-list nonIP ethertype permit any
hostname(config)# access-group ETHER in interface inside
hostname(config)# access-group ETHER in interface outside
```

The following example uses object groups to permit specific traffic on the inside interface:

```
!
hostname (config)# object-group service myaclog
hostname (config-service)# service-object tcp source range 2000 3000
hostname (config-service)# service-object tcp source range 3000 3010 destination$
hostname (config-service)# service-object ipsec
hostname (config-service)# service-object udp destination range 1002 1006
hostname (config-service)# service-object icmp echo

hostname(config)# access-list outsideacl extended permit object-group myaclog interface
inside any
```

Feature History for Access Rules

Table 34-2 lists each feature change and the platform release in which it was implemented.

Table 34-2 Feature History for Access Rules

Feature Name	Platform Releases	Feature Information
Interface access rules	7.0(1)	Controlling network access through the ASA using access lists. We introduced the following command: access-group .
Global access rules	8.3(1)	Global access rules were introduced. We modified the following command: access-group .
Support for Identity Firewall	8.4(2)	You can now use identity firewall users and groups for the source and destination. You can use an identity firewall ACL with access rules, AAA rules, and for VPN authentication. We modified the following commands: access-list extended .
EtherType ACL support for IS-IS traffic (transparent firewall mode)	8.4(5)	In transparent firewall mode, the ASA can now pass IS-IS traffic using an EtherType ACL. We modified the following command: access-list ethertype {permit deny} is-is . <i>Not available in Version 8.5(1), 8.6(1), or 9.0(1).</i>



CHAPTER **35**

Configuring AAA Servers and the Local Database

This chapter describes support for authentication, authorization, and accounting (AAA, pronounced “triple A”), and how to configure AAA servers and the local database.

The chapter includes the following sections:

- [Information About AAA, page 35-1](#)
- [Licensing Requirements for AAA Servers, page 35-10](#)
- [Guidelines and Limitations, page 35-10](#)
- [Configuring AAA, page 35-10](#)
- [Monitoring AAA Servers, page 35-30](#)
- [Additional References, page 35-31](#)
- [Feature History for AAA Servers, page 35-31](#)

Information About AAA

AAA enables the ASA to determine who the user is (authentication), what the user can do (authorization), and what the user did (accounting).

AAA provides an extra level of protection and control for user access than using access lists alone. For example, you can create an access list allowing all outside users to access Telnet on a server on the DMZ network. If you want only some users to access the server and you might not always know IP addresses of these users, you can enable AAA to allow only authenticated and/or authorized users to connect through the ASA. (The Telnet server enforces authentication, too; the ASA prevents unauthorized users from attempting to access the server.)

You can use authentication alone or with authorization and accounting. Authorization always requires a user to be authenticated first. You can use accounting alone, or with authentication and authorization.

This section includes the following topics:

- [Information About Authentication, page 35-2](#)
- [Information About Authorization, page 35-2](#)
- [Information About Accounting, page 35-3](#)
- [Summary of Server Support, page 35-3](#)
- [RADIUS Server Support, page 35-4](#)
- [TACACS+ Server Support, page 35-5](#)

- [RSA/SDI Server Support, page 35-5](#)
- [NT Server Support, page 35-6](#)
- [Kerberos Server Support, page 35-6](#)
- [LDAP Server Support, page 35-6](#)
- [Local Database Support, Including as a Falback Method, page 35-8](#)
- [How Fallback Works with Multiple Servers in a Group, page 35-8](#)
- [Using Certificates and User Login Credentials, page 35-9](#)
- [Task Flow for Configuring AAA, page 35-11](#)

Information About Authentication

Authentication controls access by requiring valid user credentials, which are usually a username and password. You can configure the ASA to authenticate the following items:

- All administrative connections to the ASA, including the following sessions:
 - Telnet
 - SSH
 - Serial console
 - ASDM using HTTPS
 - VPN management access
- The **enable** command
- Network access
- VPN access

Information About Authorization

Authorization controls access *per user* after users are authenticated. You can configure the ASA to authorize the following items:

- Management commands
- Network access
- VPN access

Authorization controls the services and commands that are available to each authenticated user. If you did not enable authorization, authentication alone would provide the same access to services for all authenticated users.

If you need the control that authorization provides, you can configure a broad authentication rule, and then have a detailed authorization configuration. For example, you can authenticate inside users who try to access any server on the outside network and then limit the outside servers that a particular user can access using authorization.

The ASA caches the first 16 authorization requests per user, so if the user accesses the same services during the current authentication session, the ASA does not resend the request to the authorization server.

Information About Accounting

Accounting tracks traffic that passes through the ASA, enabling you to have a record of user activity. If you enable authentication for that traffic, you can account for traffic per user. If you do not authenticate the traffic, you can account for traffic per IP address. Accounting information includes session start and stop times, username, the number of bytes that pass through the ASA for the session, the service used, and the duration of each session.

Summary of Server Support

[Table 35-1](#) summarizes the support for each AAA service by each AAA server type, including the local database. For more information about support for a specific AAA server type, see the topics following the table.

Table 35-1 Summary of AAA Support

AAA Service	Database Type							
	Local	RADIUS	TACACS+	SDI (RSA)	NT	Kerberos	LDAP	HTTP Form
Authentication of...								
VPN users ¹	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes ²
Firewall sessions	Yes	Yes	Yes	Yes	Yes	Yes	Yes	No
Administrators	Yes	Yes	Yes	Yes ³	Yes	Yes	Yes	No
Authorization of...								
VPN users	Yes	Yes	No	No	No	No	Yes	No
Firewall sessions	No	Yes ⁴	Yes	No	No	No	No	No
Administrators	Yes ⁵	No	Yes	No	No	No	No	No
Accounting of...								
VPN connections	No	Yes	Yes	No	No	No	No	No
Firewall sessions	No	Yes	Yes	No	No	No	No	No
Administrators	No	Yes ⁶	Yes	No	No	No	No	No

1. For SSL VPN connections, either PAP or MS-CHAPv2 can be used.
2. HTTP Form protocol supports both authentication and single sign-on operations for clientless SSL VPN users sessions only.
3. RSA/SDI is supported for ASDM HTTP administrative access with ASA 5500 software version 8.2(1) or later.
4. For firewall sessions, RADIUS authorization is supported with user-specific access lists only, which are received or specified in a RADIUS authentication response.
5. Local command authorization is supported by privilege level only.
6. Command accounting is available for TACACS+ only.



Note

In addition to the native protocol authentication listed in [Table 35-1](#), the ASA supports proxying authentication. For example, the ASA can proxy to an RSA/SDI and/or LDAP server via a RADIUS server. Authentication via digital certificates and/or digital certificates with the AAA combinations listed in the table are also supported.

RADIUS Server Support

The ASA supports the following RFC-compliant RADIUS servers for AAA:

- Cisco Secure ACS 3.2, 4.0, 4.1, 4.2, and 5.x
- Cisco Identity Services Engine (ISE)
- RSA RADIUS in RSA Authentication Manager 5.2, 6.1, and 7.x
- Microsoft

Authentication Methods

The ASA supports the following authentication methods with RADIUS:

- PAP—For all connection types.
- CHAP and MS-CHAPv1—For L2TP-over-IPsec connections.
- MS-CHAPv2—For L2TP-over-IPsec connections, and for regular IPsec remote access connections when the password management feature is enabled. You can also use MS-CHAPv2 with clientless connections.
- Authentication Proxy modes—including RADIUS to Active Directory, RADIUS to RSA/SDI, RADIUS to Token-server, and RSA/SDI to RADIUS connections,



Note

To enable MS-CHAPv2 as the protocol used between the ASA and the RADIUS server for a VPN connection, password management must be enabled in the tunnel group general attributes. Enabling password management generates an MS-CHAPv2 authentication request from the ASA to the RADIUS server. See the description of the **password-management** command for details.

If you use double authentication and enable password management in the tunnel group, then the primary and secondary authentication requests include MS-CHAPv2 request attributes. If a RADIUS server does not support MS-CHAPv2, then you can configure that server to send a non-MS-CHAPv2 authentication request by using the **no mschapv2-capable** command.

Attribute Support

The ASA supports the following sets of RADIUS attributes:

- Authentication attributes defined in RFC 2138.
- Accounting attributes defined in RFC 2139.
- RADIUS attributes for tunneled protocol support, defined in RFC 2868.
- Cisco IOS Vendor-Specific Attributes (VSAs), identified by RADIUS vendor ID 9.
- Cisco VPN-related VSAs, identified by RADIUS vendor ID 3076.
- Microsoft VSAs, defined in RFC 2548.
- Cisco VSA (Cisco-Priv-Level), which provides a standard 0-15 numeric ranking of privileges, with 1 being the lowest level and 15 being the highest level. A zero level indicates no privileges. The first level (login) allows privileged EXEC access for the commands available at this level. The second level (enable) allows CLI configuration privileges.

- A list of attributes is available at the following URL:
http://www.cisco.com/en/US/docs/security/asa/asa84/configuration/guide/ref_extserver.html#wp1605508

RADIUS Authorization Functions

The ASA can use RADIUS servers for user authorization of VPN remote access and firewall cut-through-proxy sessions using dynamic access lists or access list names per user. To implement dynamic access lists, you must configure the RADIUS server to support it. When the user authenticates, the RADIUS server sends a downloadable access list or access list name to the ASA. Access to a given service is either permitted or denied by the access list. The ASA deletes the access list when the authentication session expires.

In addition to access lists, the ASA supports many other attributes for authorization and setting of permissions for VPN remote access and firewall cut-through proxy sessions. For a complete list of authorization attributes, see the following URL:
http://www.cisco.com/en/US/docs/security/asa/asa84/configuration/guide/ref_extserver.html#wp1605508

TACACS+ Server Support

The ASA supports TACACS+ authentication with ASCII, PAP, CHAP, and MS-CHAPv1.

RSA/SDI Server Support

The RSA SecureID servers are also known as SDI servers.

This section includes the following topics:

- [RSA/SDI Version Support, page 35-5](#)
- [Two-step Authentication Process, page 35-5](#)
- [RSA/SDI Primary and Replica Servers, page 35-6](#)

RSA/SDI Version Support

The ASA supports SDI Versions 5.x, 6.x, and 7.x. SDI uses the concepts of an SDI primary and SDI replica servers. Each primary and its replicas share a single node secret file. The node secret file has its name based on the hexadecimal value of the ACE or Server IP address, with .sdi appended.

A version 5.x, 6.x, or 7.x SDI server that you configure on the ASA can be either the primary or any one of the replicas. See the [“RSA/SDI Primary and Replica Servers” section on page 35-6](#) for information about how the SDI agent selects servers to authenticate users.

Two-step Authentication Process

SDI Versions 5.x, 6.x, or 7.x use a two-step process to prevent an intruder from capturing information from an RSA SecurID authentication request and using it to authenticate to another server. The agent first sends a lock request to the SecurID server before sending the user authentication request. The server

locks the username, preventing another (replica) server from accepting it. This action means that the same user cannot authenticate to two ASAs using the same authentication servers simultaneously. After a successful username lock, the ASA sends the passcode.

RSA/SDI Primary and Replica Servers

The ASA obtains the server list when the first user authenticates to the configured server, which can be either a primary or a replica. The ASA then assigns priorities to each of the servers on the list, and subsequent server selection is derived at random from those assigned priorities. The highest priority servers have a higher likelihood of being selected.

NT Server Support

The ASA supports Microsoft Windows server operating systems that support NTLM Version 1, collectively referred to as NT servers.

**Note**

NT servers have a maximum length of 14 characters for user passwords. Longer passwords are truncated, which is a limitation of NTLM Version 1.

Kerberos Server Support

The ASA supports 3DES, DES, and RC4 encryption types.

**Note**

The ASA does not support changing user passwords during tunnel negotiation. To avoid this situation happening inadvertently, disable password expiration on the Kerberos/Active Directory server for users connecting to the ASA.

For a simple Kerberos server configuration example, see [Example 35-2 on page 35-16](#).

LDAP Server Support

The ASA supports LDAP. This section includes the following topics:

- [Authentication with LDAP, page 35-6](#)
- [LDAP Server Types, page 35-7](#)

Authentication with LDAP

During authentication, the ASA acts as a client proxy to the LDAP server for the user, and authenticates to the LDAP server in either plain text or by using the SASL protocol. By default, the ASA passes authentication parameters, usually a username and password, to the LDAP server in plain text.

The ASA supports the following SASL mechanisms, listed in order of increasing strength:

- Digest-MD5—The ASA responds to the LDAP server with an MD5 value computed from the username and password.

- Kerberos—The ASA responds to the LDAP server by sending the username and realm using the GSSAPI Kerberos mechanism.

You can configure the ASA and LDAP server to support any combination of these SASL mechanisms. If you configure multiple mechanisms, the ASA retrieves the list of SASL mechanisms that are configured on the server and sets the authentication mechanism to the strongest mechanism configured on both the ASA and the server. For example, if both the LDAP server and the ASA support both mechanisms, the ASA selects Kerberos, the stronger of the mechanisms.

When user LDAP authentication has succeeded, the LDAP server returns the attributes for the authenticated user. For VPN authentication, these attributes generally include authorization data that is applied to the VPN session. Thus, using LDAP accomplishes authentication and authorization in a single step.

LDAP Server Types

The ASA supports LDAP version 3 and is compatible with the Sun Microsystems JAVA System Directory Server (formerly named the Sun ONE Directory Server), the Microsoft Active Directory, Novell, OpenLDAP, and other LDAPv3 directory servers.

By default, the ASA auto-detects whether it is connected to Microsoft Active Directory, Sun LDAP, Novell, OpenLDAP, or a generic LDAPv3 directory server. However, if auto-detection fails to determine the LDAP server type, and you know the server is either a Microsoft, Sun or generic LDAP server, you can manually configure the server type.

When configuring the server type, note the following guidelines:

- The DN configured on the ASA to access a Sun directory server must be able to access the default password policy on that server. We recommend using the directory administrator, or a user with directory administrator privileges, as the DN. Alternatively, you can place an ACL on the default password policy.
- You must configure LDAP over SSL to enable password management with Microsoft Active Directory and Sun servers.
- The ASA does not support password management with Novell, OpenLDAP, and other LDAPv3 directory servers.
- The ASA uses the Login Distinguished Name (DN) and Login Password to establish a trust relationship (bind) with an LDAP server. For more information, see the [“Binding the ASA to the LDAP Server”](#) section on page C-4.

HTTP Forms Authentication for Clientless SSL VPN

The ASA can use the HTTP Form protocol for both authentication and single sign-on (SSO) operations of Clientless SSL VPN user sessions only. For configuration information, see the [“Using Single Sign-on with Clientless SSL VPN”](#) section on page 74-13.

Local Database Support, Including as a Falback Method

The ASA maintains a local database that you can populate with user profiles.

The local database can act as a fallback method for several functions. This behavior is designed to help you prevent accidental lockout from the ASA.

For users who need fallback support, we recommend that their usernames and passwords in the local database match their usernames and passwords on the AAA servers. This practice provides transparent fallback support. Because the user cannot determine whether a AAA server or the local database is providing the service, using usernames and passwords on AAA servers that are different than the usernames and passwords in the local database means that the user cannot be certain which username and password should be given.

The local database supports the following fallback functions:

- Console and enable password authentication—If the servers in the group are all unavailable, the ASA uses the local database to authenticate administrative access, which can also include enable password authentication.
- Command authorization—If the TACACS+ servers in the group are all unavailable, the local database is used to authorize commands based on privilege levels.
- VPN authentication and authorization—VPN authentication and authorization are supported to enable remote access to the ASA if AAA servers that normally support these VPN services are unavailable. When a VPN client of an administrator specifies a tunnel group configured to fallback to the local database, the VPN tunnel can be established even if the AAA server group is unavailable, provided that the local database is configured with the necessary attributes.

How Fallback Works with Multiple Servers in a Group

If you configure multiple servers in a server group and you enable fallback to the local database for the server group, fallback occurs when no server in the group responds to the authentication request from the ASA. To illustrate, consider this scenario:

You configure an LDAP server group with two Active Directory servers, server 1 and server 2, in that order. When the remote user logs in, the ASA attempts to authenticate to server 1.

If server 1 responds with an authentication failure (such as *user not found*), the ASA does not attempt to authenticate to server 2.

If server 1 does not respond within the timeout period (or the number of authentication attempts exceeds the configured maximum), the ASA tries server 2.

If both servers in the group do not respond, and the ASA is configured to fall back to the local database, the ASA tries to authenticate to the local database.

Using Certificates and User Login Credentials

The following section describes the different methods of using certificates and user login credentials (username and password) for authentication and authorization. These methods apply to IPsec, AnyConnect, and Clientless SSL VPN.

In all cases, LDAP authorization does not use the password as a credential. RADIUS authorization uses either a common password for all users or the username as a password.

This section includes the following topics:

- [Using User Login Credentials, page 35-9](#)
- [Using Certificates, page 35-9](#)

Using User Login Credentials

The default method for authentication and authorization uses the user login credentials.

- Authentication
 - Enabled by the authentication server group setting in the tunnel group (also called ASDM Connection Profile)
 - Uses the username and password as credentials
- Authorization
 - Enabled by the authorization server group setting in the tunnel group (also called ASDM Connection Profile)
 - Uses the username as a credential

Using Certificates

If user digital certificates are configured, the ASA first validates the certificate. It does not, however, use any of the DNs from certificates as a username for the authentication.

If both authentication and authorization are enabled, the ASA uses the user login credentials for both user authentication and authorization.

- Authentication
 - Enabled by the authentication server group setting
 - Uses the username and password as credentials
- Authorization
 - Enabled by the authorization server group setting
 - Uses the username as a credential

If authentication is disabled and authorization is enabled, the ASA uses the primary DN field for authorization.

- Authentication
 - DISABLED (set to None) by the authentication server group setting
 - No credentials used
- Authorization
 - Enabled by the authorization server group setting

- Uses the username value of the certificate primary DN field as a credential

**Note**

If the primary DN field is not present in the certificate, the ASA uses the secondary DN field value as the username for the authorization request.

For example, consider a user certificate that includes the following Subject DN fields and values:

```
Cn=anyuser , OU=sales; O=XYZCorporation; L=boston; S=mass; C=us; ea=anyuser@example.com
```

If the Primary DN = EA (E-mail Address) and the Secondary DN = CN (Common Name), then the username used in the authorization request would be anyuser@example.com.

Licensing Requirements for AAA Servers

Model	License Requirement
All models	Base License.

Guidelines and Limitations

This section includes the guidelines and limitations for this feature.

Context Mode Guidelines

Supported in single and multiple context mode.

Firewall Mode Guidelines

Supported in routed and transparent firewall mode.

IPv6 Guidelines

Supports IPv6.

Additional Guidelines

The **username** command has two versions: one for 8.4(3) and earlier and one for 8.4(4.1) and later. See the command reference for more information.

Configuring AAA

This section includes the following topics:

- [Configuring AAA Server Groups, page 35-11](#)
- [Configuring Authorization with LDAP for VPN, page 35-16](#)
- [Configuring LDAP Attribute Maps, page 35-18](#)
- [Adding a User Account to the Local Database, page 35-20](#)

- [Managing User Passwords, page 35-25](#)
- [.Changing User Passwords, page 35-27](#)
- [Authenticating Users with a Public Key for SSH, page 35-28](#)
- [Differentiating User Roles Using AAA, page 35-28](#)

Task Flow for Configuring AAA

- Step 1** Do one or both of the following:
- Add a AAA server group. See the [“Configuring AAA Server Groups” section on page 35-11](#).
 - Add a user to the local database. See the [“Adding a User Account to the Local Database” section on page 35-20](#).
- Step 2** (Optional) Configure authorization from an LDAP server that is separate and distinct from the authentication mechanism. See the [“Configuring Authorization with LDAP for VPN” section on page 35-16](#).
- Step 3** For an LDAP server, configure LDAP attribute maps. See the [“Configuring LDAP Attribute Maps” section on page 35-18](#).
- Step 4** For an administrator, specify the password policy attributes for users. See the [“Managing User Passwords” section on page 35-25](#).
- Step 5** (Optional) Users can change their own passwords. See the [“.Changing User Passwords” section on page 35-27](#).
- Step 6** (Optional) Users can authenticate with a public key. See the [“Authenticating Users with a Public Key for SSH” section on page 35-28](#).
- Step 7** (Optional) Distinguish between administrative and remote-access users when they authenticate. See the [“Differentiating User Roles Using AAA” section on page 35-28](#).
-

Configuring AAA Server Groups

If you want to use an external AAA server for authentication, authorization, or accounting, you must first create at least one AAA server group per AAA protocol and add one or more servers to each group. You identify AAA server groups by name. Each server group is specific to one type of server: Kerberos, LDAP, NT, RADIUS, SDI, or TACACS+.

Guidelines

- You can have up to 100 server groups in single mode or 4 server groups per context in multiple mode.
- Each group can have up to 16 servers in single mode or 4 servers in multiple mode.
- When a user logs in, the servers are accessed one at a time, starting with the first server you specify in the configuration, until a server responds. If all servers in the group are unavailable, the ASA tries the local database if you configured it as a fallback method (management authentication and authorization only). If you do not have a fallback method, the ASA continues to try the AAA servers.

Detailed Steps

	Command	Purpose
Step 1	<pre> aaa-server <i>server_tag</i> protocol {kerberos ldap nt radius sdi tacacs+} Example: hostname(config)# aaa-server servergroup1 protocol ldap hostname(config-aaa-server-group)# hostname(config)# aaa-server servergroup1 protocol radius hostname(config-aaa-server-group)# interim-accounting-update hostname(config)# aaa-server servergroup1 protocol radius hostname(config-aaa-server-group)# ad-agent-mode </pre>	<p>Identifies the server group name and the protocol. For example, to use RADIUS to authenticate network access and TACACS+ to authenticate CLI access, you need to create at least two server groups, one for RADIUS servers and one for TACACS+ servers.</p> <p>You can have up to 100 server groups in single mode or 4 server groups per context in multiple mode. Each group can have up to 15 servers in single mode or 4 servers in multiple mode.</p> <p>When you enter the aaa-server protocol command, you enter aaa-server group configuration mode.</p> <p>The interim-accounting-update option enables multi-session accounting for clientless SSL and AnyConnect sessions. If you choose this option, interim accounting records are sent to the RADIUS server in addition to the start and stop records.</p> <p>Tip Choose this option if users have trouble completing a VPN connection using clean access SSO, which might occur when making clientless or AnyConnect connections directly to the ASA.</p> <p>The ad-agent-mode option specifies the shared secret between the ASA and the AD agent, and indicates that a RADIUS server group includes AD agents that are not full-function RADIUS servers. Only a RADIUS server group that has been configured using the ad-agent-mode option can be associated with user identity. As a result, the test aaa-server {authentication authorization} aaa-server-group command is not available when a RADIUS server group that is not configured using the ad-agent-mode option is specified.</p>

	Command	Purpose
Step 2	<p>merge-dacl {<i>before-avpair</i> <i>after-avpair</i>}</p> <p>Example: <pre>hostname(config)# aaa-server servergroup1 protocol radius hostname(config-aaa-server-group)# merge-dacl before-avpair</pre></p>	<p>Merges a downloadable ACL with the ACL received in the Cisco AV pair from a RADIUS packet. The default setting is no merge dacl, which specifies that downloadable ACLs will not be merged with Cisco AV pair ACLs. If both an AV pair and a downloadable ACL are received, the AV pair has priority and is used.</p> <p>The before-avpair option specifies that the downloadable ACL entries should be placed before the Cisco AV pair entries.</p> <p>The after-avpair option specifies that the downloadable ACL entries should be placed after the Cisco AV pair entries. This option applies only to VPN connections. For VPN users, ACLs can be in the form of Cisco AV pair ACLs, downloadable ACLs, and an ACL that is configured on the ASA. This option determines whether or not the downloadable ACL and the AV pair ACL are merged, and does not apply to any ACLs configured on the ASA.</p>
Step 3	<p>max-failed-attempts <i>number</i></p> <p>Example: <pre>hostname(config-aaa-server-group)# max-failed-attempts 2</pre></p>	<p>Specifies the maximum number of requests sent to a AAA server in the group before trying the next server. The <i>number</i> argument can range from 1 and 5. The default is 3.</p> <p>If you configured a fallback method using the local database (for management access only; see the “Configuring Local Command Authorization” section on page 37-23 and the “Configuring TACACS+ Command Authorization” section on page 37-29 to configure the fallback mechanism), and all the servers in the group fail to respond, then the group is considered to be unresponsive, and the fallback method is tried. The server group remains marked as unresponsive for a period of 10 minutes (by default), so that additional AAA requests within that period do not attempt to contact the server group, and the fallback method is used immediately. To change the unresponsive period from the default, see the reactivation-mode command in the next step.</p> <p>If you do not have a fallback method, the ASA continues to retry the servers in the group.</p>

	Command	Purpose
Step 4	<p>reactivation-mode {depletion [deadtime <i>minutes</i>] timed}</p> <p>Example: <pre>hostname(config-aaa-server-group)# reactivation-mode deadtime 20</pre></p>	<p>Specifies the method (reactivation policy) by which failed servers in a group are reactivated.</p> <p>The depletion keyword reactivates failed servers only after all of the servers in the group are inactive.</p> <p>The deadtime <i>minutes</i> keyword-argument pair specifies the amount of time in minutes, between 0 and 1440, that elapses between the disabling of the last server in the group and the subsequent reenabling of all servers. The default is 10 minutes.</p> <p>The timed keyword reactivates failed servers after 30 seconds of down time.</p>
Step 5	<p>accounting-mode simultaneous</p> <p>Example: <pre>hostname(config-aaa-server-group)# accounting-mode simultaneous</pre></p>	<p>Sends accounting messages to all servers in the group (RADIUS or TACACS+ only).</p> <p>To restore the default of sending messages only to the active server, enter the accounting-mode single command.</p>
Step 6	<p>aaa-server <i>server_group</i> [<i>interface_name</i>] host <i>server_ip</i></p> <p>Example: <pre>hostname(config)# aaa-server servergroup1 outside host 10.10.1.1</pre></p>	<p>Identifies the server and the AAA server group to which it belongs.</p> <p>When you enter the aaa-server host command, you enter aaa-server host configuration mode. As needed, use host configuration mode commands to further configure the AAA server.</p> <p>The commands in host configuration mode do not apply to all AAA server types. Table 35-2 lists the available commands, the server types to which they apply, and whether or not a new AAA server definition has a default value for that command. Where a command is applicable to the specified server type and no default value is provided (indicated by “—”), use the command to specify the value.</p>

Table 35-2 Host Mode Commands, Server Types, and Defaults

Command	Applicable AAA Server Types	Default Value	Description
accounting-port	RADIUS	1646	
acl-netmask-convert	RADIUS	standard	
authentication-port	RADIUS	1645	
kerberos-realm	Kerberos	—	
key	RADIUS	—	
	TACACS+	—	
ldap-attribute-map	LDAP	—	
ldap-base-dn	LDAP	—	
ldap-login-dn	LDAP	—	

Table 35-2 Host Mode Commands, Server Types, and Defaults (continued)

Command	Applicable AAA Server Types	Default Value	Description
ldap-login-password	LDAP	—	
ldap-naming-attribute	LDAP	—	
ldap-over-ssl	LDAP	636	If not set, the ASA uses sAMAccountName for LDAP requests. Whether using SASL or plain text, you can secure communications between the ASA and the LDAP server with SSL. If you do not configure SASL, we strongly recommend that you secure LDAP communications with SSL.
ldap-scope	LDAP	—	
mschapv2-capable	RADIUS	enabled	
nt-auth-domain-controller	NT	—	
radius-common-pw	RADIUS	—	
retry-interval	Kerberos	10 seconds	
	RADIUS	10 seconds	
	SDI	10 seconds	
sasl-mechanism	LDAP	—	
server-port	Kerberos	88	
	LDAP	389	
	NT	139	
	SDI	5500	
	TACACS+	49	
server-type	LDAP	auto-discovery	If auto-detection fails to determine the LDAP server type, and you know the server is either a Microsoft, Sun or generic LDAP server, you can manually configure the server type.
timeout	All	10 seconds	

Examples

[Example 35-1](#) shows how to add one TACACS+ group with one primary and one backup server, one RADIUS group with a single server, and an NT domain server.

Example 35-1 Multiple AAA Server Groups and Servers

```
hostname(config)# aaa-server AuthInbound protocol tacacs+
hostname(config-aaa-server-group)# max-failed-attempts 2
hostname(config-aaa-server-group)# reactivation-mode depletion deadtime 20
hostname(config-aaa-server-group)# exit
hostname(config)# aaa-server AuthInbound (inside) host 10.1.1.1
hostname(config-aaa-server-host)# key TACPlusUauthKey
hostname(config-aaa-server-host)# exit
hostname(config)# aaa-server AuthInbound (inside) host 10.1.1.2
hostname(config-aaa-server-host)# key TACPlusUauthKey2
hostname(config-aaa-server-host)# exit
```

```

hostname(config)# aaa-server AuthOutbound protocol radius
hostname(config-aaa-server-group)# exit
hostname(config)# aaa-server AuthOutbound (inside) host 10.1.1.3
hostname(config-aaa-server-host)# key RadUauthKey
hostname(config-aaa-server-host)# exit
hostname(config)# aaa-server NTAAuth protocol nt
hostname(config-aaa-server-group)# exit
hostname(config)# aaa-server NTAAuth (inside) host 10.1.1.4
hostname(config-aaa-server-host)# nt-auth-domain-controller primary1
hostname(config-aaa-server-host)# exit

```

[Example 35-2](#) shows how to configure a Kerberos AAA server group named `watchdogs`, add a AAA server to the group, and define the Kerberos realm for the server. Because [Example 35-2](#) does not define a retry interval or the port that the Kerberos server listens to, the ASA uses the default values for these two server-specific parameters. [Table 35-2](#) lists the default values for all AAA server host mode commands.

**Note**

Kerberos realm names use numbers and upper-case letters only. Although the ASA accepts lower-case letters for a realm name, it does not translate lower-case letters to upper-case letters. Be sure to use upper-case letters only.

Example 35-2 Kerberos Server Group and Server

```

hostname(config)# aaa-server watchdogs protocol kerberos
hostname(config-aaa-server-group)# aaa-server watchdogs host 192.168.3.4
hostname(config-aaa-server-host)# kerberos-realm EXAMPLE.COM
hostname(config-aaa-server-host)# exit
hostname(config)#

```

Configuring Authorization with LDAP for VPN

When user LDAP authentication for VPN access has succeeded, the ASA queries the LDAP server which returns LDAP attributes. These attributes generally include authorization data that applies to the VPN session. Thus, using LDAP accomplishes authentication and authorization in a single step.

There may be cases, however, where you require authorization from an LDAP directory server that is separate and distinct from the authentication mechanism. For example, if you use an SDI or certificate server for authentication, no authorization information is passed back. For user authorizations in this case, you can query an LDAP directory after successful authentication, accomplishing authentication and authorization in two steps.

To set up VPN user authorization using LDAP, perform the following steps.

Detailed Steps

	Command	Purpose
Step 1	aaa-server <i>server_group</i> protocol {kerberos ldap nt radius sdi tacacs+} Example: hostname(config)# aaa-server servergroup1 protocol ldap hostname(config-aaa-server-group)	Creates a AAA server group.
Step 2	tunnel-group <i>groupname</i> Example: hostname(config)# tunnel-group remotegrp	Creates an IPsec remote access tunnel group named remotegrp.
Step 3	tunnel-group <i>groupname</i> general-attributes Example: hostname(config)# tunnel-group remotegrp general-attributes	Associates the server group and the tunnel group.
Step 4	authorization-server-group <i>group-tag</i> Example: hostname(config-general)# authorization-server-group ldap_dir_1	Assigns a new tunnel group to a previously created AAA server group for authorization.

Examples

While there are other authorization-related commands and options available for specific requirements, the following example shows commands for enabling user authorization with LDAP. The example then creates an IPsec remote access tunnel group named remote-1, and assigns that new tunnel group to the previously created ldap_dir_1 AAA server group for authorization:

```
hostname(config)# tunnel-group remote-1 type ipsec-ra
hostname(config)# tunnel-group remote-1 general-attributes
hostname(config-general)# authorization-server-group ldap_dir_1
hostname(config-general)#
```

After you complete this configuration work, you can then configure additional LDAP authorization parameters such as a directory password, a starting point for searching a directory, and the scope of a directory search by entering the following commands:

```
hostname(config)# aaa-server ldap_dir_1 protocol ldap
hostname(config-aaa-server-group)# aaa-server ldap_dir_1 host 10.1.1.4
hostname(config-aaa-server-host)# ldap-login-dn obscurepassword
hostname(config-aaa-server-host)# ldap-base-dn starthere
hostname(config-aaa-server-host)# ldap-scope subtree
hostname(config-aaa-server-host)#
```

Configuring LDAP Attribute Maps

The ASA can use an LDAP directory for authenticating VPN remote access users or firewall network access/cut-thru-proxy sessions and/or for setting policy permissions (also called authorization attributes), such as ACLs, bookmark lists, DNS or WINS settings, session timers, and so on. That is, you can set the key attributes that exist in a local group policy externally through an LDAP server.

The authorization process is accomplished by means of LDAP attribute maps (similar to a RADIUS dictionary that defines vendor-specific attributes), which translate the native LDAP user attributes to Cisco ASA attribute names. You can then bind these attribute maps to LDAP servers or remove them, as needed. You can also show or clear attribute maps.

Guidelines

The `ldap-attribute-map` has a limitation with multi-valued attributes. For example, if a user is a memberOf of several AD groups and the `ldap` attribute map matches on more than one of them, the mapped value is chosen based on the alphabetization of the matched entries.

To use the attribute mapping features correctly, you need to understand Cisco LDAP attribute names and values, as well as the user-defined attribute names and values. For more information about LDAP attribute maps, see the [“Active Directory/LDAP VPN Remote Access Authorization Examples” section on page C-16](#).

The names of frequently mapped Cisco LDAP attributes and the type of user-defined attributes that they would commonly be mapped to include the following:

- IETF-Radius-Class (Group_Policy in ASA version 8.2 and later)—Sets the group policy based on the directory’s department or user group (for example, Microsoft Active Directory memberOf) attribute value. The group-policy attribute replaced the IETF-Radius-Class attribute with ASDM version 6.2/ASA version 8.2 or later.
- IETF-Radius-Filter-Id—An access control list or ACL applied to VPN clients, IPsec, and SSL.
- IETF-Radius-Framed-IP-Address—Assigns a static IP address assigned to a VPN remote access client, IPsec, and SSL.
- Banner1—Displays a text banner when the VPN remote access user logs in.
- Tunneling-Protocols—Allows or denies the VPN remote access session based on the access type.



Note A single `ldapattribute` map may contain one or many attributes. You can only assign one `ldap` attribute to a specific LDAP server.

To map LDAP features correctly, perform the following steps:

Detailed Steps

	Command	Purpose
Step 1	ldap attribute-map <i>map-name</i> Example: hostname(config)# ldap attribute-map att_map_1	Creates an unpopulated LDAP attribute map table.
Step 2	map-name <i>user-attribute-name</i> <i>Cisco-attribute-name</i> Example: hostname(config-ldap-attribute-map)# map-name department IETF-Radius-Class	Maps the user-defined attribute name department to the Cisco attribute.
Step 3	map-value <i>user-attribute-name</i> <i>Cisco-attribute-name</i> Example: hostname(config-ldap-attribute-map)# map-value department Engineering group1	Maps the user-defined map value department to the user-defined attribute value and the Cisco attribute value.
Step 4	aaa-server <i>server_group</i> [<i>interface_name</i>] host <i>server_ip</i> Example: hostname(config)# aaa-server ldap_dir_1 host 10.1.1.4	Identifies the server and the AAA server group to which it belongs.
Step 5	ldap-attribute-map <i>map-name</i> Example: hostname(config-aaa-server-host)# ldap-attribute-map att_map_1	Binds the attribute map to the LDAP server.

Examples

The following example shows how to limit management sessions to the ASA based on an LDAP attribute called `accessType`. The `accessType` attribute has three possible values:

- VPN
- admin
- helpdesk

The following example shows how each value is mapped to one of the valid IETF-Radius-Service-Type attributes that the ASA supports: remote-access (Service-Type 5) Outbound, admin (Service-Type 6) Administrative, and nas-prompt (Service-Type 7) NAS Prompt:

```
hostname(config)# ldap attribute-map MGMT
hostname(config-ldap-attribute-map)# map-name accessType IETF-Radius-Service-Type
hostname(config-ldap-attribute-map)# map-value accessType VPN 5
hostname(config-ldap-attribute-map)# map-value accessType admin 6
```

```
hostname(config-ldap-attribute-map) # map-value accessType helpdesk 7

hostname(config-ldap-attribute-map) # aaa-server LDAP protocol ldap
hostname(config-aaa-server-group) # aaa-server LDAP (inside) host 10.1.254.91
hostname(config-aaa-server-host) # ldap-base-dn CN=Users,DC=cisco,DC=local
hostname(config-aaa-server-host) # ldap-scope subtree
hostname(config-aaa-server-host) # ldap-login-password test
hostname(config-aaa-server-host) # ldap-login-dn
CN=Administrator,CN=Users,DC=cisco,DC=local
hostname(config-aaa-server-host) # server-type auto-detect
hostname(config-aaa-server-host) # ldap-attribute-map MGMT
```

The following example shows how to display the complete list of Cisco LDAP attribute names:

```
hostname(config) # ldap attribute-map att_map_1
hostname(config-ldap-attribute-map) # map-name att_map_1?

ldap mode commands/options:
cisco-attribute-names:
  Access-Hours
  Allow-Network-Extension-Mode
  Auth-Service-Type
  Authenticated-User-Idle-Timeout
  Authorization-Required
  Authorization-Type
  :
  :
  X509-Cert-Data
hostname(config-ldap-attribute-map) #
```

Adding a User Account to the Local Database

This section describes how to manage users in the local database and includes the following topics:

Guidelines

The local database is used for the following features:

- ASDM per-user access
- Console authentication
- Telnet and SSH authentication.
- **enable** command authentication

This setting is for CLI-access only and does not affect the ASDM login.

- Command authorization

If you turn on command authorization using the local database, then the ASA refers to the user privilege level to determine which commands are available. Otherwise, the privilege level is not generally used. By default, all commands are either privilege level 0 or level 15.

- Network access authentication
- VPN client authentication

For multiple context mode, you can configure usernames in the system execution space to provide individual logins at the CLI using the **login** command; however, you cannot configure any AAA rules that use the local database in the system execution space.

Limitations

You cannot use the local database for network access authorization.

To add a user to the local database, perform the following steps:

Detailed Steps

	Command	Purpose
Step 1	<p>username <i>username</i> {nopassword password <i>password</i> [mschap] } [privilege <i>priv_level</i>]</p> <p>Example: <pre>hostname(config)# username exampleuser1 privilege 1</pre></p>	<p>Creates the user account. The username <i>username</i> keyword is a string from 4 to 64 characters long.</p> <p>Note The ASA does not prohibit the creation of usernames that only differ by case with previously configured usernames. We do not recommend this practice if VPN users are authenticated using the local user database. Usernames such as “User1” and “user1” are still distinct for authentication purposes, but if a maximum simultaneous login limit has been configured, these users share the same session count. This makes it possible for “user1” to log off “User1” by establishing a tunnel that exceeds the simultaneous login limit.</p> <p>The password <i>password</i> argument is a string from 3 to 32 characters long. The mschap keyword specifies that the password is converted to Unicode and hashed using MD4 after you enter it. Use this keyword if users are authenticated using MS-CHAPv1 or MS-CHAPv2. The privilege <i>level</i> argument sets the privilege level, which ranges from 0 to 15. The default is 2. This privilege level is used with command authorization.</p> <p> Caution If you do not use command authorization (the aaa authorization console LOCAL command), then the default level 2 allows management access to privileged EXEC mode. To limit access to privileged EXEC mode, either set the privilege level to 0 or 1, or use the service-type command (see Step 5).</p> <p>The nopassword keyword creates a user account with no password.</p> <p>The encrypted and nt-encrypted keywords are typically for display only. When you define a password in the username command, the ASA encrypts it when it saves it to the configuration for security purposes. When you enter the show running-config command, the username command does not show the actual password; it shows the encrypted password followed by the encrypted or nt-encrypted keyword (when you specify mschap). For example, if you enter the password “test,” the show running-config output would appear as something similar to the following:</p> <pre>username user1 password DLaUiAX3l78qgoB5c7iVNw== nt-encrypted</pre> <p>The only time you would actually enter the encrypted or nt-encrypted keyword at the CLI is if you are cutting and pasting a configuration file for use in another ASA, and you are using the same password.</p>

	Command	Purpose
Step 2	<p>aaa authorization exec authentication-server</p> <p>Example: <pre>hostname(config)# aaa authorization exec authentication-server</pre></p>	<p>(Optional) Enforces user-specific access levels for users who authenticate for management access (see the aaa authentication console LOCAL command). This command enables management authorization for local, RADIUS, LDAP (mapped), and TACACS+ users.</p> <p>Use the aaa authorization exec LOCAL command to enable attributes to be taken from the local database. See the “Limiting User CLI and ASDM Access with Management Authorization” section on page 37-21 for information about configuring a user on a AAA server to accommodate management authorization.</p> <p>Note the following prerequisites for each user type:</p> <ul style="list-style-type: none"> • Configure local database users at a privilege level from 0 to 15 using the username command. Configure the level of access using the service-type command. • Configure RADIUS users with Cisco VSA CVPN3000-Privilege-Level with a value between 0 and 15. • Configure LDAP users with a privilege level between 0 and 15, and then map the LDAP attribute to Cisco VAS CVPN3000-Privilege-Level using the ldap map-attributes command. • See the privilege command for information about setting command privilege levels.
Step 3	<p>username username attributes</p> <p>Example: <pre>hostname(config)# username exampleuser1 attributes</pre></p>	<p>(Optional) Configures username attributes. The <i>username</i> argument is the username that you created in Step 1.</p>

	Command	Purpose
Step 4	<pre>service-type {admin nas-prompt remote-access}</pre> <p>Example:</p> <pre>hostname(config-username)# service-type admin</pre>	<p>(Optional) Configures the user level if you configured management authorization in Step 2. The admin keyword allows full access to any services specified by the aaa authentication console LOCAL commands. The admin keyword is the default.</p> <p>The nas-prompt keyword allows access to the CLI when you configure the aaa authentication {telnet ssh serial} console LOCAL command, but denies ASDM configuration access if you configure the aaa authentication http console LOCAL command. ASDM monitoring access is allowed. If you enable authentication with the aaa authentication enable console LOCAL command, the user cannot access privileged EXEC mode using the enable command (or the login command).</p> <p>The remote-access keyword denies management access. The user cannot use any services specified by the aaa authentication console LOCAL commands (excluding the serial keyword; serial access is allowed).</p> <p>(Optional) If you are using this username for VPN authentication, you can configure many VPN attributes for the user. For more information, see the “Configuring Attributes for Specific Users” section on page 67-79.</p>

Examples

The following example assigns a privilege level of 15 to the admin user account:

```
hostname(config)# username admin password password privilege 15
```

The following example creates a user account with no password:

```
hostname(config)# username user34 nopassword
```

The following example enables management authorization, creates a user account with a password, enters username attributes configuration mode, and specifies the **service-type** attribute:

```
hostname(config)# aaa authorization exec authentication-server
hostname(config)# username user1 password gOgeOus
hostname(config)# username user1 attributes
hostname(config-username)# service-type nas-prompt
```

Managing User Passwords

The ASA enables administrators with the necessary privileges to modify password policy for users in the current context.

User passwords have the following guidelines:

- A maximum lifetime of 0 to 65536 days.
- A minimum length of 3 to 64 characters.
- A minimum number of changed characters for updates of 0 to 64 characters.
- They may include lower case characters.

- They may include upper case characters.
- They may include numbers.
- They may include special characters.

To specify password policy for users, perform the following steps:

	Command	Purpose
Step 1	<p>password-policy lifetime <i>value</i></p> <p>Example: hostname (config)# password-policy lifetime 1000</p>	<p>Sets the password policy for the current context and the interval in days after which passwords expire. Valid values are between 0 and 65536 days. The default value is 0 days.</p>
Step 2	<p>password-policy minimum-changes <i>value</i></p> <p>Example: hostname(config)# password-policy minimum-changes 4</p>	<p>Sets the minimum number of characters that must be changed between new and old passwords. Valid values are between 0 and 64 characters. The default value is 0.</p> <p>New passwords must include a minimum of 4 character changes from the current password and are considered changed only if they do not appear anywhere in the current password.</p>
Step 3	<p>password-policy minimum-length <i>value</i></p> <p>Example: hostname(config)# password-policy minimum-length 8</p>	<p>Sets the minimum length of passwords. Valid values are between 3 and 64 characters. The recommended minimum password length is 8 characters.</p> <p>If the minimum length is less than the value of any of the other minimum values (lowercase, numeric, special, and uppercase), an error message appears and the minimum length is not changed.</p>
Step 4	<p>password-policy minimum-lowercase <i>value</i></p> <p>Example: hostname(config)# password-policy minimum-lowercase 6</p>	<p>Sets the minimum number of lower case characters that passwords may have. Valid values are between 0 and 64 characters. The default value is 0, which means there is no minimum.</p>
Step 5	<p>password-policy minimum-numeric <i>value</i></p> <p>Example: hostname(config)# password-policy minimum-numeric 1</p>	<p>Sets the minimum number of numeric characters that passwords may have. Valid values are between 0 and 64 characters. The default value is 0, which means there is no minimum.</p>
Step 6	<p>password-policy minimum-special <i>value</i></p> <p>Example: hostname(config)# password-policy minimum-special 2</p>	<p>Sets the minimum number of special characters that passwords may have. Valid values are between 0 and 64 characters. Special characters include the following: !, @, #, \$, %, ^, &, *, '(' and ')'. The default value is 0, which means there is no minimum.</p>

	Command	Purpose
Step 7	password-policy minimum-upper-case <i>value</i> Example: hostname(config)# password-policy minimum-upper-case 3	Sets the minimum number of upper case characters that passwords may have. Valid values are between 0 and 64 characters. The default value is 0, which means there is no minimum.
Step 8	password-policy authenticate enable Example: hostname(config)# password-policy authenticate enable	(Optional) Determines whether or not users are allowed to modify their own user account. If authentication is enabled, users cannot change their own password or delete their own account with the username command or with the clear configure username command.

Changing User Passwords

The ASA enables administrators with the necessary privileges to modify passwords for users in the current context. Users must authenticate with their current passwords before they are allowed to change passwords. However, authentication is not required when an administrator is changing a user password.

To enable users to change their own account passwords, enter the following command:

Command	Purpose
change-password [old-password <i>old-password</i> [new-password <i>new-password</i>]] Example: hostname# change-password old-password myoldpassword000 new password mynewpassword123	Enables users to change their own account passwords. The new-password <i>new-password</i> keyword-argument pair specifies the new password. The old-password <i>old-password</i> keyword-argument pair specifies the old password, which reauthenticates the user. If users omit the passwords, the ASA prompts them for input. When users enter the change-password command, they are asked to save their running configuration.

Authenticating Users with a Public Key for SSH

Users can authenticate with a public key for SSH. The public key can be hashed or not hashed.

To authenticate with a public key for SSH, enter the following command:

Command	Purpose
<pre>username {user} attributes ssh authentication publickey key [hashed]</pre> <p>Example:</p> <pre>hostname(config)# username anyuser ssh authentication publickey key [hashed]</pre>	<p>Enables public key authentication on a per-user basis. The value of the <i>key</i> argument can be one of the following:</p> <ul style="list-style-type: none"> When the <i>key</i> argument is supplied and the hashed tag is not specified, the value of the key must be a Base 64 encoded public key that is generated by SSH key generation software that can generate SSH-RSA raw keys (that is, with no certificates). After you submit the Base 64 encoded public key, that key is then hashed via SHA-256 and the corresponding 32-byte hash is used for all further comparisons. When the <i>key</i> argument is supplied and the hashed tag is specified, the value of the key must have been previously hashed with SHA-256 and be 32 bytes long, with each byte separated by a colon (for parsing purposes). <p>When you save the configuration, the hashed key value is saved to the configuration and used when the ASA is rebooted.</p>

Differentiating User Roles Using AAA

The ASA enables you to distinguish between administrative and remote-access users when they authenticate using RADIUS, LDAP, TACACS+, or the local user database. User role differentiation can prevent remote access VPN and network access users from establishing an administrative connection to the ASA.

To differentiate user roles, use the **service-type** attribute in username configuration mode. For RADIUS and LDAP (with the **ldap-attribute-map** command), you can use a Cisco Vendor-Specific Attribute (VSA), Cisco-Priv-Level, to assign a privilege level to an authenticated user.

This section includes the following topics:

- [Using Local Authentication, page 35-28](#)
- [Using RADIUS Authentication, page 35-29](#)
- [Using LDAP Authentication, page 35-29](#)
- [Using TACACS+ Authentication, page 35-30](#)

Using Local Authentication

Before you configure the **service-type** attribute and privilege level when using local authentication, you must create a user, assign a password, and assign a privilege level.

To do so, enter the following command:

```
hostname(config)# username admin password mysecret123 privilege 15
```

Where **mysecret123** is the stored password and 15 is the assigned privilege level, which indicates an admin user.

The available configuration options for the **service-type** attribute include the following:

- **admin**, in which users are allowed access to the configuration mode. This option also allows a user to connect via remote access.
- **nas-prompt**, in which users are allowed access to the EXEC mode.
- **remote-access**, in which users are allowed access to the network.

The following example designates a **service-type** of **admin** for a user named admin:

```
hostname(config)# username admin attributes
hostname(config-username)# service-type admin
```

The following example designates a **service-type** of **remote-access** for a user named ra-user:

```
hostname(config)# username ra-user attributes
hostname(config-username)# service-type remote-access
```

Using RADIUS Authentication

The RADIUS IETF **service-type** attribute, when sent in an access-accept message as the result of a RADIUS authentication and authorization request, is used to designate which type of service is granted to the authenticated user. The supported attribute values are the following: administrative(6), nas-prompt(7), Framed(2), and Login(1). For a list of supported RADIUS IETF VSAs used for authentication and authorization, see [Table C-8 on page C-36](#).

For more information about using RADIUS authentication, see “[Configuring an External RADIUS Server](#)” section on page C-27. For more information about configuring RADIUS authentication for Cisco Secure ACS, see the Cisco Secure ACS documentation on Cisco.com.

The RADIUS Cisco VSA **privilege-level** attribute (Vendor ID 3076, sub-ID 220), when sent in an access-accept message, is used to designate the level of privilege for the user. For a list of supported RADIUS VSAs used for authorization, see [Table C-7 on page C-28](#).

Using LDAP Authentication

When users are authenticated through LDAP, the native LDAP attributes and their values can be mapped to Cisco ASA attributes to provide specific authorization features. For the supported list of LDAP VSAs used for authorization, see [Table C-2 on page C-6](#).

You can use the LDAP attribute mapping feature for LDAP authorization. For examples of this feature, see the “[Understanding Policy Enforcement of Permissions and Attributes](#)” section on page C-1.

The following example shows how to define an LDAP attribute map. In this example, the security policy specifies that users being authenticated through LDAP map the user record fields or parameters title and company to the IETF-RADIUS service-type and privilege-level, respectively.

To define an LDAP attribute map, enter the following commands:

```
hostname(config)# ldap attribute-map admin-control
hostname(config-ldap-attribute-map)# map-name title IETF-RADIUS-Service-Type
hostname(config-ldap-attribute-map)# map-name company Privilege-Level
```

The following is sample output from the **ldap-attribute-map** command:

```
ldap attribute-map admin-control
```

```
map-name company Privilege-Level
map-name title IETF-Radius-Service-Type
```

To apply the LDAP attribute map to the LDAP AAA server, enter the following commands:

```
hostname(config)# aaa-server ldap-server (dmz1) host 10.20.30.1
hostname(config-aaa-server-host)# ldap-attribute-map admin-control
```

**Note**

When an authenticated user tries administrative access to the ASA through ASDM, SSH, or Telnet, but does not have the appropriate privilege level to do so, the ASA generates syslog message 113021. This message informs the user that the attempted login failed because of inappropriate administrative privileges.

Using TACACS+ Authentication

For information about how to configure TACACS+ authentication, see the [“RADIUS Accounting Disconnect Reason Codes”](#) section on page C-37.

Monitoring AAA Servers

To monitor AAA servers, enter one of the following commands:

Command	Purpose
<code>show aaa-server</code>	Shows the configured AAA server statistics. To clear the AAA server configuration, enter the clear aaa-server statistics command.
<code>show running-config aaa-server</code>	Shows the AAA server running configuration. To clear AAA server statistics, enter the clear configure aaa-server command.
<code>show running-config all ldap attribute-map</code>	Shows all LDAP attribute maps in the running configuration. To clear all LDAP attribute maps in the running configuration, use the clear configuration ldap attribute-map command.
<code>show running-config zonelabs-integrity</code>	Shows the Zone Labs Integrity server configuration. To clear the Zone Labs Integrity server configuration, use the clear configure zonelabs-integrity command.
<code>show ad-groups name [filter string]</code>	Applies only to AD servers using LDAP, and shows groups that are listed on an AD server.
<code>show running-config [all] password-policy</code>	Shows the password policy for the current context.

Additional References

For additional information related to implementing LDAP mapping, see the “RFCs” section on [page 35-31](#).

RFCs

RFC	Title
2138	<i>Remote Authentication Dial In User Service (RADIUS)</i>
2139	<i>RADIUS Accounting</i>
2548	<i>Microsoft Vendor-specific RADIUS Attributes</i>
2868	<i>RADIUS Attributes for Tunnel Protocol Support</i>

Feature History for AAA Servers

[Table 35-3](#) lists each feature change and the platform release in which it was implemented.

Table 35-3 Feature History for AAA Servers

Feature Name	Platform Releases	Feature Information
AAA Servers	7.0(1)	<p>AAA Servers describe support for AAA and how to configure AAA servers and the local database.</p> <p>We introduced the following commands:</p> <p>username, aaa authorization exec authentication-server, aaa authentication console LOCAL, aaa authorization exec LOCAL, service-type, ldap attribute-map, aaa-server protocol, aaa authentication {telnet ssh serial} console LOCAL, aaa authentication http console LOCAL, aaa authentication enable console LOCAL, max-failed-attempts, reactivation-mode, accounting-mode simultaneous, aaa-server host, authorization-server-group, tunnel-group, tunnel-group general-attributes, map-name, map-value, ldap-attribute-map, zonelabs-Integrity server-address, zonelabs-integrity port, zonelabs-integrity interface, zonelabs-integrity fail-timeout, zonelabs-integrity fail-close, zonelabs-integrity fail-open, zonelabs-integrity ssl-certificate-port, zonelabs-integrity ssl-client-authentication {enable disable}, client-firewall {opt req} zonelabs-integrity</p>
Key vendor-specific attributes (VSAs) sent in RADIUS access request and accounting request packets from the ASA	8.4(3)	<p>Four New VSAs—Tunnel Group Name (146) and Client Type (150) are sent in RADIUS access request packets from the ASA. Session Type (151) and Session Subtype (152) are sent in RADIUS accounting request packets from the ASA. All four attributes are sent for all accounting request packet types: Start, Interim-Update, and Stop. The RADIUS server (for example, ACS and ISE) can then enforce authorization and policy attributes or use them for accounting and billing purposes.</p>
Common Criteria certification and FIPS support for password policy, password change, and SSH public key authentication	8.4(4.1)	<p>We introduced or modified the following commands:</p> <p>password-policy lifetime, password-policy minimum changes, password-policy minimum-length, password-policy minimum-lowercase, password-policy minimum-uppercase, password-policy minimum-numeric, password-policy minimum-special, password-policy authenticate enable, username, username attributes, clear configure username, change-password, clear configure password-policy, show running-config password-policy, and username.</p>



CHAPTER **36**

Configuring the Identity Firewall

This chapter describes how to configure the ASA for the Identity Firewall. The chapter includes the following sections:

- [Information About the Identity Firewall, page 1](#)
- [Licensing for the Identity Firewall, page 8](#)
- [Guidelines and Limitations, page 8](#)
- [Prerequisites, page 9](#)
- [Configuring the Identity Firewall, page 10](#)
- [Monitoring the Identity Firewall, page 25](#)
- [Feature History for the Identity Firewall, page 28](#)

Information About the Identity Firewall

This section includes the following topics:

- [Overview of the Identity Firewall, page 1](#)
- [Architecture for Identity Firewall Deployments, page 2](#)
- [Features of the Identity Firewall, page 3](#)
- [Deployment Scenarios, page 4](#)
- [Cut-through Proxy and VPN Authentication, page 7](#)

Overview of the Identity Firewall

In an enterprise, users often need access to one or more server resources. Typically, a firewall is not aware of the users' identities and, therefore, cannot apply security policies based on identity. To configure per-user access policies, you must configure a user authentication proxy, which requires user interaction (a user name/password query).

The Identity Firewall in the ASA provides more granular access control based on users' identities. You can configure access rules and security policies based on user names and user groups name rather than through source IP addresses. The ASA applies the security policies based on an association of IP addresses to Windows Active Directory login information and reports events based on the mapped user names instead of network IP addresses.

The Identity Firewall integrates with Microsoft Active Directory in conjunction with an external Active Directory (AD) Agent that provides the actual identity mapping. The ASA uses Windows Active Directory as the source to retrieve the current user identity information for specific IP addresses and allows transparent authentication for Active Directory users.

Identity-based firewall services enhance the existing access control and security policy mechanisms by allowing users or groups to be specified in place of source IP addresses. Identity-based security policies can be interleaved without restriction between traditional IP address based rules.

The key benefits of the Identity Firewall include:

- Decoupling network topology from security policies
- Simplifying the creation of security policies
- Providing the ability to easily identify user activities on network resources
- Simplify user activity monitoring

Architecture for Identity Firewall Deployments

The Identity Firewall integrates with Window Active Directory in conjunction with an external Active Directory (AD) Agent that provides the actual identity mapping.

The identity firewall consists of three components:

- **ASA**
- **Microsoft Active Directory**

Though Active Directory is part of the Identity Firewall on the ASA, they are managed by Active Directory administrators. The reliability and accuracy of the data depends on data in Active Directory.

Supported versions include Windows Server 2003, Windows Server 2008, and Windows Server 2008 R2 servers.


- **Active Directory (AD) Agent**

The AD Agent runs on a Windows server. Supported Windows servers include Windows 2003, Windows 2008, and Windows 2008 R2.



Note Windows 2003 R2 is not supported for the AD Agent server.

Figure 36-1 Identity Firewall Components

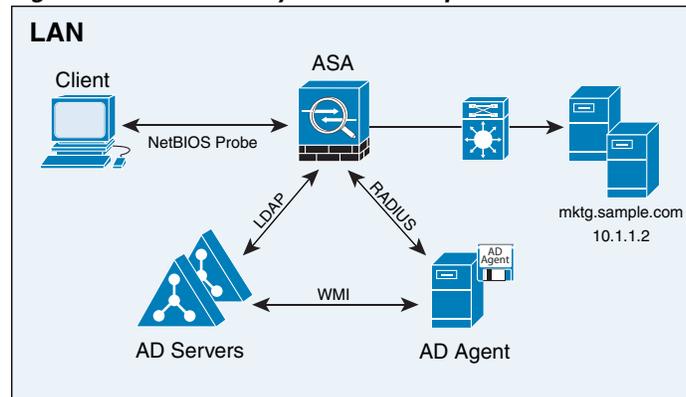

1	<p>On the ASA: Configure local user groups and Identity Firewall policies.</p>	4	<p>Client <-> ASA: The client logs onto the network through Microsoft Active Directory. The AD Server authenticates users and generates user logon security logs.</p> <p>Alternatively, the client can log onto the network through a cut-through proxy or by using VPN.</p>
2	<p>ASA <-> AD Server: The ASA sends an LDAP query for the Active Directory groups configured on the AD Server.</p> <p>The ASA consolidates local and Active Directory groups and applies access rules and MPF security policies based on user identity.</p>	5	<p>ASA <-> Client: Based on the policies configured on the ASA, it grants or denies access to the client.</p> <p>If configured, the ASA probes the NetBIOS of the client to pass inactive and no-response users.</p>
3	<p>ASA <-> AD Agent: Depending on the Identity Firewall configuration, the ASA downloads the IP-user database or sends a RADIUS request to the AD Agent querying the user's IP address.</p> <p>The ASA forwards the new mappings learned from web authentication and VPN sessions to the AD Agent.</p>	6	<p>AD Agent <-> AD Server: Periodically or on-demand, the AD Agent monitors the AD Server security event log file via WMI for client login and logoff events.</p> <p>The AD Agent maintains a cache of user ID and IP address mappings, and notifies the ASA of changes.</p> <p>The AD Agent sends logs to a syslog server.</p>

Features of the Identity Firewall

The Identity Firewall has the following key features.

Flexibility

- The ASA can retrieve user identity and IP address mappings from the AD Agent by querying the AD Agent for each new IP address or by maintaining a local copy of the entire user identity and IP address database.
- Supports host group, subnet, or IP address for the destination of a user identity policy.
- Supports a fully qualified domain name (FQDN) for the source and destination of a user identity policy.

- Supports the combination of 5-tuple policies with ID-based policies. The identity-based feature works in tandem with existing 5-tuple solution.
- Supports usage with IPS and Application Inspection policies.
- Retrieves user identity information from remote access VPN, AnyConnect VPN, L2TP VPN and cut-through proxy. All retrieved users are populated to all ASA devices connected to the AD Agent.

Scalability

- Each AD Agent supports 100 ASA devices. Multiple ASA devices are able to communicate with a single AD Agent to provide scalability in larger network deployments.
- Supports 30 Active Directory servers provided the IP address is unique among all domains.
- Each user identity in a domain can have up to 8 IP addresses.
- Supports up to 64,000 user identity-IP address mappings in active ASA policies for ASA 5500 Series models. This limit controls the maximum users who have policies applied. The total users are the aggregated users configured on all different contexts.
- Supports up to 1024 user identity-IP address mappings in active ASA policies for the ASA 5505.
- Supports up to 256 user groups in active ASA policies.
- A single rule can contain one or more user groups or users.
- Supports multiple domains.

Availability

- The ASA retrieves group information from Active Directory and falls back to web authentication for IP addresses that the AD Agent cannot map a source IP address to a user identity.
- The AD Agent continues to function when any of the Active Directory servers or the ASA are not responding.
- Supports configuring a primary AD Agent and a secondary AD Agent on the ASA. If the primary AD Agent stops responding, the ASA can switch to the secondary AD Agent.
- If the AD Agent is unavailable, the ASA can fall back to existing identity sources such as cut through proxy and VPN authentication.
- The AD Agent runs a watchdog process that automatically restarts its services when they are down.
- Allows a distributed IP address/user mapping database among ASA devices.


Deployment Scenarios

You can deploy the components of the Identity Firewall in the following ways depending on your environmental requirement.

As shown in [Figure 36-2](#), you can deploy the components of the Identity Firewall to allow for redundancy. Scenario 1 shows a simple installation without component redundancy.


Scenario 2 also shows a simple installation without redundancy. However, in that deployment scenario, the Active Directory server and AD Agent are co-located on one Windows server.

Figure 36-2 Deployment Scenario without Redundancy
No Redundancy

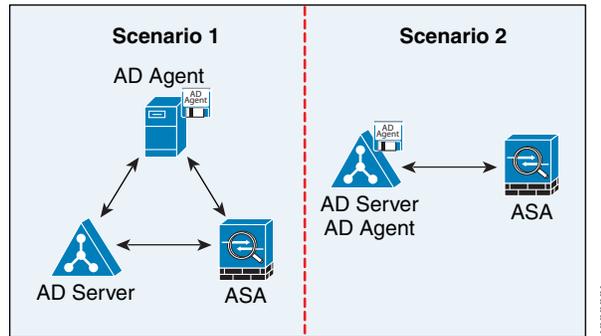

As shown in [Figure 36-3](#), you can deploy the Identity Firewall components to support redundancy. Scenario 1 shows a deployment with multiple Active Directory servers and a single AD Agent installed on a separate Windows server. Scenario 2 shows a deployment with multiple Active Directory servers and multiple AD Agents installed on separate Windows servers.

Figure 36-3 Deployment Scenario with Redundant Components
Redundant

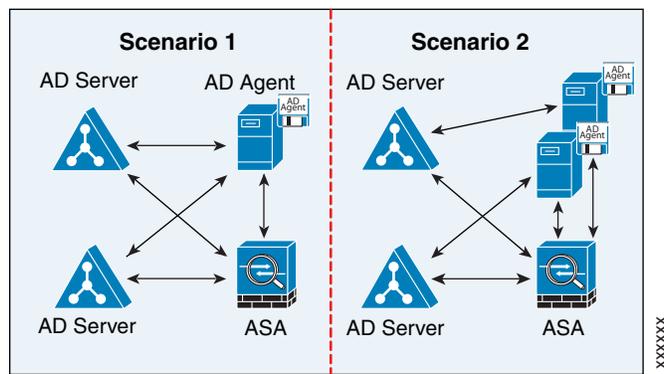

As shown in [Figure 36-4](#), all Identity Firewall components—Active Directory server, the AD Agent, and the clients—are installed and communicate on the LAN.

Figure 36-4 LAN-based Deployment

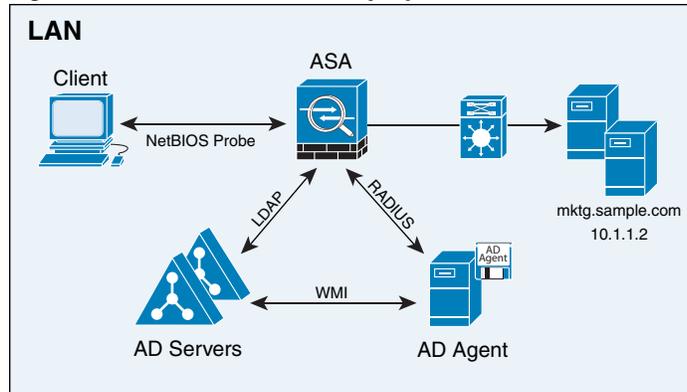


Figure 36-5 shows a WAN-based deployment to support a remote site. The Active Directory server and the AD Agent are installed on the main site LAN. The clients are located at a remote site and connect to the Identity Firewall components over a WAN.

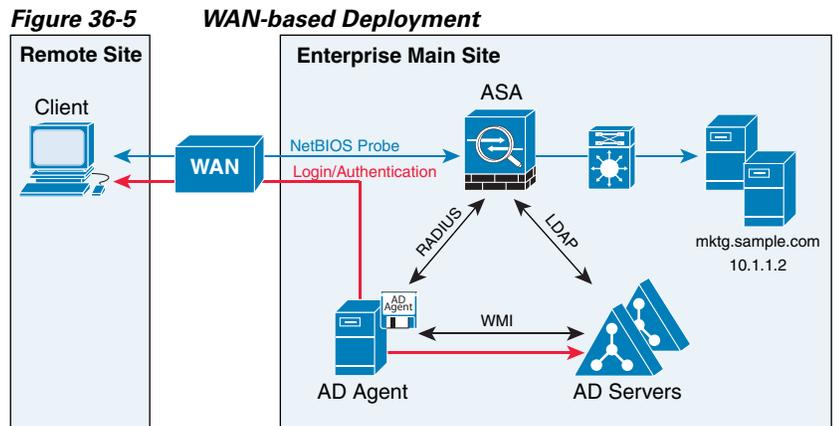


Figure 36-6 also shows a WAN-based deployment to support a remote site. The Active Directory server is installed on the main site LAN. However, the AD Agent is installed and accessed by the clients at the remote site. The remote clients connect to the Active Directory servers at the main site over a WAN.


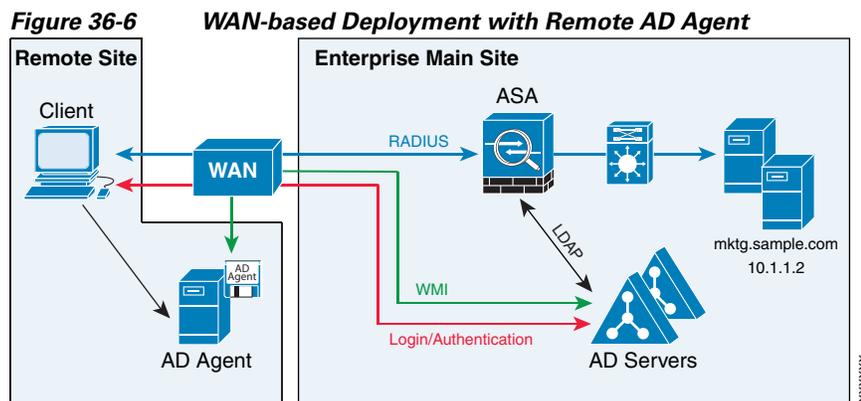


Figure 36-7 shows an expanded remote site installation. An AD Agent and Active Directory servers are installed at the remote site. The clients access these components locally when logging into network resources located at the main site. The remote Active Directory server must synchronize its data with the central Active Directory servers located at the main site.

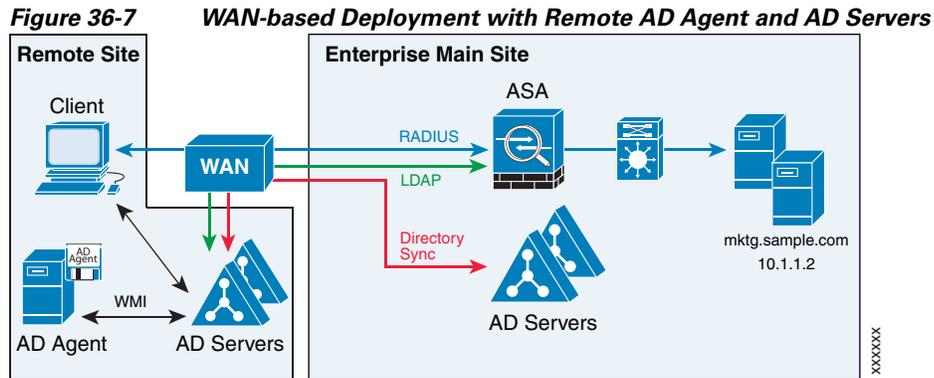


Cut-through Proxy and VPN Authentication

In an enterprise, some users log onto the network by using other authentication mechanisms, such as authenticating with a web portal (cut-through proxy) or by using a VPN. For example, users with a Macintosh and Linux client might log in a web portal (cut-through proxy) or by using a VPN. Therefore, you must configure the Identity Firewall to allow these types of authentication in connection with identity-based access policies.

Figure 36-8 shows a deployment to support a cut-through proxy authentication captive portal. Active Directory servers and the AD Agent are installed on the main site LAN. However, the Identity Firewall is configured to support authentication of clients that are not part of the Active Directory domain.

Figure 36-8 Deployment Supporting Cut-through Proxy Authentication

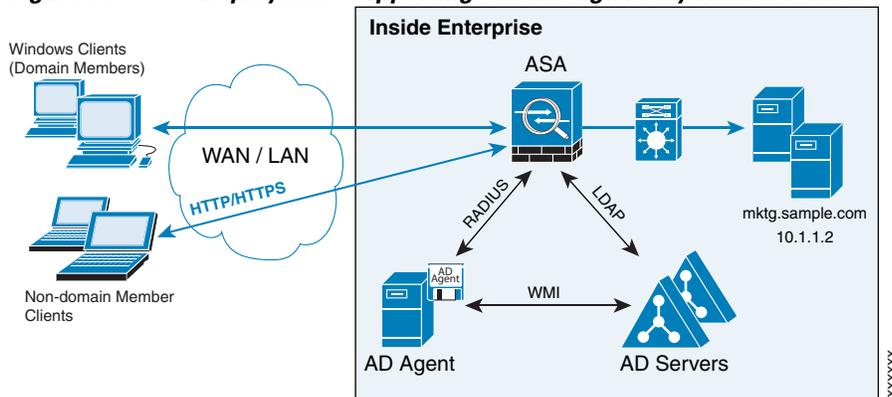

The ASA designates users logging in through a web portal (cut-through proxy) as belonging to the Active Directory domain with which they authenticated.

The ASA designates users logging in through a VPN as belonging to the LOCAL domain unless the VPN is authenticated by LDAP with Active Directory, then the Identity Firewall can associate the users with their Active Directory domain.

The ASA reports users logging in through VPN authentication or a web portal (cut-through proxy) to the AD Agent, which distributes the user information to all registered ASA devices. Specifically, the user identity-IP address mappings of authenticated users are forwarded to all ASA contexts that contain the input interface where packets are received and authenticated.

See [Configuring Cut-through Proxy Authentication, page 22](#).

Licensing for the Identity Firewall

The following table shows the licensing requirements for this feature:

Model	License Requirement
All models	Base License.

Guidelines and Limitations

This section includes the guidelines and limitations for this feature.

Context Mode Guidelines

Supported in single and multiple context mode.

Firewall Mode Guidelines

Supported in routed and transparent firewall modes.

Failover Guidelines

The Identity Firewall supports user identity-IP address mappings and AD Agent status replication from active to standby when stateful failover is enabled. However, only user identity-IP address mappings, AD Agent status, and domain status are replicated. User and user group records are not replicated to the standby ASA.

When failover is configured, the standby ASA must also be configured to connect to the AD Agent directly to retrieve user groups. The standby ASA does not send NetBIOS packets to clients even when the NetBIOS probing options are configured for the Identity Firewall.

When a client is determined as inactive by the active ASA, the information is propagated to the standby ASA. User statistics are not propagated to the standby ASA.

When you have failover configured, you must configure the AD Agent to communicate with both the active and standby ASA devices. See the *Installation and Setup Guide for the Active Directory Agent* for the steps to configure the ASA on the AD Agent server.

IPv6 Guidelines

- Supports IPv6.
 - The AD Agent supports endpoints with IPv6 addresses. It can receive IPv6 addresses in log events, maintain them in its cache, and send them through RADIUS messages.
- NetBIOS over IPv6 is not supported
- Cut through proxy over IPv6 is not supported.

Additional Guidelines and Limitations

- A full URL as a destination address is not supported.
- For NetBIOS probing to function, the network between the ASA, AD Agent, and clients must support UDP-encapsulated NetBIOS traffic.

- MAC address checking by the Identity Firewall does not work when intervening routers are present. Users logged onto clients that are behind the same router have the same MAC addresses. With this implementation, all the packets from the same router are able to pass the check, because the ASA is unable to ascertain to the actual MAC addresses behind the router.
- The following ASA features do not support using the identity-based object and FQDN:
 - route-map
 - Crypto map
 - WCCP
 - NAT
 - group-policy (except VPN filter)
 - DAP

See [Configuring Identity-based Access Rules](#), page 20.

Prerequisites

Before configuring the Identity Firewall in the ASA, you must meet the prerequisites for the AD Agent and Microsoft Active Directory.

AD Agent

The AD Agent must be installed on a Windows server that is accessible to the ASA. Additionally, you must configure the AD Agent to obtain information from the Active Directory servers. Configure the AD Agent to communicate with the ASA.

Supported Windows servers include Windows 2003, Windows 2008, and Windows 2008 R2.



Note Windows 2003 R2 is not supported for the AD Agent server.

For the steps to install and configure the AD Agent, see the *Installation and Setup Guide for the Active Directory Agent*.

Before configuring the AD Agent in the ASA, obtain the secret key value that the AD Agent and the ASA use to communicate. This value must match on both the AD Agent and the ASA.

Microsoft Active Directory

Microsoft Active Directory must be installed on a Windows server and accessible by the ASA. Supported versions include Windows 2003, 2008, and 2008 R2 servers.

Before configuring the Active Directory server on the ASA, create a user account in Active Directory for the ASA.

Additionally, the ASA sends encrypted log in information to the Active Directory server by using SSL enabled over LDAP. SSL must be enabled on the Active Directory server. See the documentation for Microsoft Active Directory for the steps to enable SSL for Active Directory.

**Note**

Before running the AD Agent Installer, you must install the following patches on every Microsoft Active Directory server that the AD Agent monitors. These patches are required even when the AD Agent is installed directly on the domain controller server. See the *README First for the Cisco Active Directory Agent*.

Configuring the Identity Firewall

This section contains the following topics:

- [Task Flow for Configuring the Identity Firewall, page 10](#)
- [Configuring the Active Directory Domain, page 11](#)
- [Configuring Active Directory Agents, page 13](#)
- [Configuring Identity Options, page 14](#)
- [Configuring Identity-based Access Rules, page 20](#)
- [Configuring Cut-through Proxy Authentication, page 22](#)
- [Configuring VPN Authentication, page 24](#)

Task Flow for Configuring the Identity Firewall

Prerequisite

Before configuring the Identity Firewall in the ASA, you must meet the prerequisites for the AD Agent and Microsoft Active Directory. See [Prerequisites, page 9](#) for information.

Task Flow in the ASA

To configure the Identity Firewall, perform the following tasks:

-
- Step 1** Configure the Active Directory domain in the ASA.
See [Configuring the Active Directory Domain, page 11](#).
See also [Deployment Scenarios, page 4](#) for the ways in which you can deploy the Active Directory servers to meet your environment requirements.
- Step 2** Configure the AD Agent in ASA.
See [Configuring Active Directory Agents, page 13](#).
See also [Deployment Scenarios, page 4](#) for the ways in which you can deploy the AD Agents to meet your environment requirements.
- Step 3** Configure Identity Options.
See [Configuring Identity Options, page 14](#).
- Step 4** Configure Identity-based Access Rules in the ASA.
After AD domain and AD-Agent are configured, identity-based rules can be specified to enforce identity-based rules. See [Configuring Identity-based Access Rules, page 20](#).
- Step 5** Configure the cut-through proxy.

See [Configuring Cut-through Proxy Authentication, page 22](#).

Step 6 Configure VPN authentication.

See [Configuring VPN Authentication, page 24](#).

Configuring the Active Directory Domain

Active Directory domain configuration on the ASA is required for the ASA to download Active Directory groups and accept user identities from specific domains when receiving IP-user mapping from the AD Agent.

Prerequisites

- Active Directory server IP address
- Distinguished Name for LDAP base dn
- Distinguished Name and password for the Active Directory user that the Identity Firewall uses to connect to the Active Directory domain controller

To configure the Active Directory domain, perform the following steps:

	Command	Purpose
Step 1	hostname(config)# aaa-server <i>server-tag</i> protocol ldap Example: hostname(config)# aaa-server adserver protocol ldap	Creates the AAA server group and configures AAA server parameters for the Active Directory server.
Step 2	hostname(config-aaa-server-group)# aaa-server <i>server-tag</i> [(<i>interface-name</i>)] host { <i>server-ip</i> <i>name</i> } [<i>key</i>] [timeout <i>seconds</i>] Example: hostname(config-aaa-server-group)# aaa-server adserver (mgmt) host 172.168.224.6	For the Active Directory server, configures the AAA server as part of a AAA server group and the AAA server parameters that are host-specific.
Step 3	hostname(config-aaa-server-host)# ldap-base-dn <i>string</i> Example: hostname(config-aaa-server-host)# ldap-base-dn DC=SAMPLE,DC=com	Specifies the location in the LDAP hierarchy where the server should begin searching when it receives an authorization request. Specifying the ldap-base-dn command is optional. If you do not specify this command, the ASA retrieves the defaultNamingContext from Active Directory and uses it as the base DN.
Step 4	hostname(config-aaa-server-host)# ldap-scope subtree	Specifies the extent of the search in the LDAP hierarchy that the server should make when it receives an authorization request.
Step 5	hostname(config-aaa-server-host)# ldap-login-password <i>string</i> Example: hostname(config-aaa-server-host)# ldap-login-password obscurepassword	Specifies the login password for the LDAP server.

	Command	Purpose
Step 6	<pre>hostname(config-aaa-server-host)# ldap-login-dn string Example: hostname(config-aaa-server-host)#ldap-login-dn SAMPLE\user1</pre>	<p>Specifies the name of the directory object that the system should bind this as. The ASA identifies itself for authenticated binding by attaching a Login DN field to the user authentication request. The Login DN field describes the authentication characteristics of the ASA.</p> <p>Where <i>string</i> is a case-sensitive string of up to 128 characters that specifies the name of the directory object in the LDAP hierarchy. Spaces are not permitted in the string, but other special characters are allowed.</p> <p>You can specify the traditional or simplified format. The traditional ldap-login-dn in format includes: CN=username,OU=Employees,OU=Sample Users,DC=sample,DC=com is accepted also.</p>
Step 7	<pre>hostname(config-aaa-server-host)# server-type microsoft</pre>	Configures the LDAP server model for the Microsoft Active Directory server.
Step 8	<pre>hostname(config-aaa-server-host)# ldap-group-base-dn string Example: hostname(config-aaa-server-host)# ldap-group-base-dn OU=Sample Groups,DC=SAMPLE,DC=com</pre>	<p>Specifies location of the Active Directory groups configuration in the Active Directory domain controller. If not specified, the value in ldap-base-dn is used.</p> <p>Specifying the ldap-group-base-dn command is optional.</p>
Step 9	<pre>hostname(config-aaa-server-host)# ldap-over-ssl enable</pre>	<p>Allows the ASA to access the Active Directory domain controller over SSL. To support LDAP over SSL, Active Directory server needs to be configured to have this support.</p> <p>By default, Active Directory does not have SSL configured. If SSL is not configured on on Active Directory, you do not need to configure it on the ASA for the Identity Firewall.</p>
Step 10	<pre>hostname(config-aaa-server-host)# server-port port-number Examples: hostname(config-aaa-server-host)# server-port 389 hostname(config-aaa-server-host)# server-port 636</pre>	By default, if ldap-over-ssl is not enabled, the default server-port is 389; if ldap-over-ssl is enabled, the default server-port is 636.
Step 11	<pre>hostname(config-aaa-server-host)# group-search-timeout seconds Examples: hostname(config-aaa-server-host)# group-search-timeout 300</pre>	Sets the amount of time before LDAP queries time out.

What to Do Next

Configure AD Agents. See [Configuring Active Directory Agents, page 13](#).

Configuring Active Directory Agents

Periodically or on-demand, the AD Agent monitors the Active Directory server security event log file via WMI for user login and logoff events. The AD Agent maintains a cache of user ID and IP address mappings, and notifies the ASA of changes.

Configure the primary and secondary AD Agents for the AD Agent Server Group. When the ASA detects that the primary AD Agent is not responding and a secondary agent is specified, the ASA switches to secondary AD Agent. The Active Directory server for the AD agent uses RADIUS as the communication protocol; therefore, you should specify a key attribute for the shared secret between ASA and AD Agent.

Requirement

- AD agent IP address
- Shared secret between ASA and AD agent

To configure the AD Agents, perform the following steps:

	Command	Purpose
Step 1	hostname(config)# aaa-server <i>server-tag</i> protocol radius Example: hostname(config)# aaa-server adagent protocol radius	Creates the AAA server group and configures AAA server parameters for the AD Agent.
Step 1	hostname(config)# ad-agent-mode	Enables the AD Agent mode.
Step 2	hostname(config-aaa-server-group)# aaa-server <i>server-tag</i> [(<i>interface-name</i>)] host { <i>server-ip</i> <i>name</i> } [<i>key</i>] [<i>timeout seconds</i>] Example: hostname(config-aaa-server-group)# aaa-server adagent (inside) host 192.168.1.101	For the AD Agent, configures the AAA server as part of a AAA server group and the AAA server parameters that are host-specific.
Step 3	hostname(config-aaa-server-host)# key <i>key</i> Example: hostname(config-aaa-server-host)# key mysecret	Specifies the server secret value used to authenticate the ASA to the AD Agent server.
Step 4	hostname(config-aaa-server-host)# user-identity ad-agent aaa-server <i>aaa_server_group_tag</i> Examples: hostname(config-aaa-server-hostkey)# user-identity ad-agent aaa-server adagent	Defines the server group of the AD Agent. The first server defined in <i>aaa_server_group_tag</i> variable is the primary AD Agent and the second server defined is the secondary AD Agent. The Identity Firewall supports defining only two AD-Agent hosts. When ASA detects the primary AD Agent is down and a secondary agent is specified, it switches to secondary AD Agent. The aaa-server for the AD agent uses RADIUS as the communication protocol, and should specify key attribute for the shared secret between ASA and AD Agent.
Step 5	hostname(config-aaa-server-host)# test aaa-server ad-agent	Tests the communication between the ASA and the AD Agent server.

What to Do Next

Configure access rules for the Identity Firewall. See [Configuring Identity-based Access Rules, page 20](#).

Configuring Identity Options

Perform this procedure to add or edit the Identity Firewall feature; select the Enable check box to enable the feature. By default, the Identity Firewall feature is disabled.

Prerequisites

Before configuring the identify options for the Identity Firewall, you must you must meet the prerequisites for the AD Agent and Microsoft Active Directory. See [Prerequisites, page 9](#) the requirements for the AD Agent and Microsoft Active Directory installation.

To configure the Identity Options for the Identity Firewall, perform the following steps:

	Command	Purpose
Step 1	<code>hostname(config)# user-identity enable</code>	Enables the Identity Firewall feature.
Step 2	<pre>hostname(config)# user-identity default-domain domain_NetBIOS_name Example: hostname(config)# user-identity default-domain SAMPLE</pre>	<p>Specifies the default domain for the Identity Firewall.</p> <p>For <i>domain_NetBIOS_name</i>, enter a name up to 32 characters consisting of [a-z], [A-Z], [0-9], [!@#%\$%^&()-_+=[]{};,.] except '.' and '' at the first character. If the domain name contains a space, enclose the entire name in quotation marks. The domain name is not case sensitive.</p> <p>The default domain is used for all users and user groups when a domain has not been explicitly configured for those users or groups. When a default domain is not specified, the default domain for users and groups is LOCAL. For multiple context modes, you can set a default domain name for each context, as well as within the system execution space.</p> <p>Note The default domain name you specify must match the NetBIOS domain name configured on the Active Directory domain controller. If the domain name does not match, the AD Agent will incorrectly associate the user identity-IP address mappings with the domain name you enter when configuring the ASA. To view the NetBIOS domain name, open the Active Directory user event security log in any text editor.</p> <p>The Identity Firewall uses the LOCAL domain for all locally defined user groups or locally defined users. Users logging in through a web portal (cut-through proxy) are designated as belonging to the Active Directory domain with which they authenticated. Users logging in through a VPN are designated as belonging to the LOCAL domain unless the VPN is authenticated by LDAP with Active Directory, then the Identity Firewall can associate the users with their Active Directory domain.</p>
Step 3	<pre>hostname(config)# user-identity domain domain_nickname aaa-server aaa_server_group_tag Example: hostname(config)# user-identity domain SAMPLE aaa-server ds</pre>	<p>Associates the LDAP parameters defined for the AAA server for importing user group queries with the domain name.</p> <p>For <i>domain_nickname</i>, enter a name up to 32 characters consisting of [a-z], [A-Z], [0-9], [!@#%\$%^&()-_+=[]{};,.] except '.' and '' at the first character. If the domain name contains a space, you must enclose that space character in quotation marks. The domain name is not case sensitive.</p>

	Command	Purpose
Step 4	<pre>hostname(config)# user-identity logout-probe netbios local-system probe-time minutes <i>minutes</i> retry-interval seconds <i>seconds</i> retry-count <i>times</i> [user-not-needed match-any exact-match] Example: hostname(config)# user-identity logout-probe netbios local-system probe-time minutes 10 retry-interval seconds 10 retry-count 2 user-not-needed</pre>	<p>Enables NetBIOS probing. Enabling this option configures how often the ASA probes the user client IP address to determine whether the client is still active. By default, NetBIOS probing is disabled.</p> <p>To minimize the NetBIOS packets, the ASA only sends a NetBIOS probe to a client when the user has been idle for more than the specified number of minutes.</p> <p>Set the NetBIOS probe timer from 1 to 65535 minutes and the retry interval from 1 to 256 retries. Specify the number of times to retry the probe:</p> <ul style="list-style-type: none"> • match-any—As long as the NetBIOS response from the client contains the user name of the user assigned to the IP address, the user identity is be considered valid. Specifying this option requires that the client enabled the Messenger service and configured a WINS server. • exact-match—The user name of the user assigned to the IP address must be the only one in the NetBIOS response. Otherwise, the user identity of that IP address is considered invalid. Specifying this option requires that the client enabled the Messenger service and configured a WINS server. • user-not-needed—As long as the ASA received a NetBIOS response from the client the user identity is considered valid. <p>The Identity Firewall only performs NetBIOS probing for those users identities that are in the active state and exist in at least one security policy. The ASA does not perform NetBIOS probing for clients where the users logged in through cut-through proxy or by using VPN.</p>

	Command	Purpose
Step 5	<pre>hostname(config)# user-identity inactive-user-timer minutes minutes Example: hostname(config)# user-identity inactive-user-timer minutes 120</pre>	<p>Specifies the amount of time before a user is considered idle, meaning the ASA has not received traffic from the user's IP address for specified amount of time.</p> <p>When the timer expires, the user's IP address is marked as inactive and removed from the local cached user identity-IP address mappings database and the ASA no longer notifies the AD Agent about that IP address removal. Existing traffic is still allowed to pass. When this command is specified, the ASA runs an inactive timer even when the NetBIOS Logout Probe is configured.</p> <p>By default, the idle timeout is set to 60 minutes.</p> <p>Note The Idle Timeout option does not apply to VPN or cut through proxy users.</p>
Step 6	<pre>hostname(config)# user-identity poll-import-user-group-timer hours hours Example: hostname(config)# user-identity poll-import-user-group-timer hours 1</pre>	<p>Specifies the amount of time before the ASA queries the Active Directory server for user group information.</p> <p>If a user is added to or deleted from to an Active Directory group, the ASA received the updated user group after import group timer runs.</p> <p>By default, the poll-import-user-group-timer is 8 hours.</p> <p>To immediately update user group information, enter the following command:</p> <p>user-identity update import-user</p> <p>See the CLI configuration guide</p>
Step 7	<pre>hostname(config)# user-identity action netbios-response-fail remove-user-ip</pre>	<p>Specifies the action when a client does not respond to a NetBIOS probe. For example, the network connection might be blocked to that client or the client is not active.</p> <p>When the user-identity action remove-user-ip is configured, the ASA removed the user identity-IP address mapping for that client.</p> <p>By default, this command is disabled.</p>

	Command	Purpose
Step 8	<pre>hostname(config)# user-identity action domain-controller-down domain_nickname disable-user-identity-rule</pre> <p>Example:</p> <pre>hostname(config)# user-identity action domain-controller-down SAMPLE disable-user-identity-rule</pre>	<p>Specifies the action when the domain is down because Active Directory domain controller is not responding.</p> <p>When the domain is down and the disable-user-identity-rule keyword is configured, the ASA disables the user identity-IP address mappings for that domain. Additionally, the status of all user IP addresses in that domain are marked as disabled in the output displayed by the show user-identity user command.</p> <p>By default, this command is disabled.</p>
Step 9	<pre>hostname(config)# user-identity user-not-found enable</pre>	<p>Enables user-not-found tracking. Only the last 1024 IP addresses tracked.</p> <p>By default, this command is disabled.</p>
Step 10	<pre>hostname(config)# user-identity action ad-agent-down disable-user-identity-rule</pre>	<p>Specifies the action when the AD Agent is not responding.</p> <p>When the AD Agent is down and the user-identity action ad-agent-down is configured, the ASA disables the user identity rules associated with the users in that domain. Additionally, the status of all user IP addresses in that domain are marked as disabled in the output displayed by the show user-identity user command.</p> <p>By default, this command is disabled.</p>
Step 11	<pre>hostname(config)# user-identity action mac-address-mismatch remove-user-ip</pre>	<p>Specifies the action when a user's MAC address is found to be inconsistent with the ASA device IP address currently mapped to that MAC address.</p> <p>When the user-identity action mac-address-mismatch command is configured, the ASA removes the user identity-IP address mapping for that client.</p> <p>By default, the ASA uses the remove-user-ip keyword when this command is specified.</p>

	Command	Purpose
Step 12	<pre>hostname(config)# user-identity ad-agent active-user-database {on-demand full-download} Example: hostname(config)# user-identity ad-agent active-user-database full-download</pre>	<p>Defines how the ASA retrieves the user identity-IP address mapping information from the AD Agent:</p> <ul style="list-style-type: none"> • full-download—Specifies that the ASA send a request to the AD Agent to download the entire IP-user mapping table when the ASA starts and then to receive incremental IP-user mapping when users log in and log out. • on-demand—Specifies that the ASA retrieve the user mapping information of an IP address from the AD Agent when the ASA receives a packet that requires a new connection and the user of its source IP address is not in the user-identity database. <p>By default, the ASA 5505, uses the on-demand option. The other ASA platforms use the full-download option.</p> <p>Full downloads are event driven, meaning that subsequent requests to download the database, send just the updates to the user identity-IP address mapping database.</p> <p>When the ASA registers a change request with the AD Agent, the AD Agent sends a new event to the ASA.</p>
Step 13	<pre>hostname(config)# user-identity ad-agent hello-timer seconds seconds retry-times number Example: hostname(config)# user-identity ad-agent hello-timer seconds 20 retry-times 3</pre>	<p>Defines the hello timer between the ASA and the AD Agent.</p> <p>The hello timer between the ASA and the AD Agent defines how frequently the ASA exchanges hello packets. The ASA uses the hello packet to obtain ASA replication status (in-sync or out-of-sync) and domain status (up or down). If the ASA does not receive a response from the AD Agent, it resends a hello packet after the specified interval.</p> <p>By default, the hello timer is set to 30 seconds and 5 retries.</p>
Step 14	<pre>hostname(config)# user-identity ad-agent aaa-server aaa_server_group_tag Example: hostname(config)# user-identity ad-agent aaa-server adagent</pre>	<p>Defines the server group of the AD Agent.</p> <p>For <i>aaa_server_group_tag</i>, enter the value defined by the aaa-server command.</p>

What to Do Next

Configure the Active Directory domain and server groups. See [Configuring the Active Directory Domain, page 11](#).

Configure AD Agents. See [Configuring Active Directory Agents, page 13](#).

Configuring Identity-based Access Rules

An access rule permits or denies traffic based on the protocol, a source and destination IP address or network, and the source and destination ports. For information about access rules, see in [Chapter 34, “Configuring Access Rules.”](#)

The Identity Firewall feature adds the ability to permit or deny traffic based on a users’ identities or based on a user group. You configure access rules and security policies based on user names and user groups name in addition to source IP addresses. The ASA applies the security policies based on an association of IP addresses to Windows Active Directory login information and reports events based on the mapped user names instead of network IP addresses.

Users can be local, remote (via VPN), wired or wireless. Server resources can include server IP address, server DNS name, or domain.

Identity-based access rules follow the same general format that standard IP-address-based rules follow: action, protocol, source, destination, and optional source service when the protocol for the rule is TCP or UDP. In addition, they include specifying user and user group objects before traditional IP-address-based objects—any, network object/network group, interface, host, IP address, and network mask.

You can create access rules that solely contain identity-based objects (users and user groups) or combine identity-based objects with traditional IP-address-based objects. You can create an access rule that includes a source user or source user group from a qualifying IP-address-based source. For example, you could create an access rule for `sample_user1 11.0.0.0 255.0.0.0`, meaning the user could have any IP address on subnet 11.0.0.0/8.

You can create an access rule with FQDN in the source and the destination.

The destination portion of an identity-based access rule follows the same format and guidelines as traditional IP-address-based access rules.

Guidelines and Limitations

- Supports up to 64,000 user identity-IP address mappings in active ASA policies for ASA 5500 Series models.
This limit controls the maximum users who have policies applied. The total users are the aggregated users configured on all different contexts.
- Supports up to 1024 user identity-IP address mappings in active ASA policies for the ASA 5505.
This limit controls the maximum users who have policies applied. The total users are the aggregated users configured on all different contexts.
- Supports up to 256 user groups in active ASA security policies.
- A single rule can contain one or more user groups or users.

Prerequisites

After AD domain and AD-Agent are configured, Identity-based rules can be specified to enforce identity-based rules.

To configure identity-based access rules, perform the following steps:

	Command	Purpose
Step 1	<pre>hostname(config)# object-group user <i>user_group_name</i></pre> <p>Examples:</p> <pre>hostname(config)# object-group user users1</pre>	<p>Defines object groups that you can use to control access with the Identity Firewall. You can use the object group as part of an access group or service policy.</p>
Step 2	<pre>hostname(config-user-object-group)# user <i>domain_NetBIOS_name\user_name</i></pre> <p>Examples:</p> <pre>hostname(config-user-object-group)# user SAMPLE\users1</pre>	<p>Specifies the user to add to the access rule.</p> <p>The <i>user_name</i> can contain any character including [a-z], [A-Z], [0-9], [!@#%&^&()-_{ } .]. If <i>domain_NetBIOS_name\user_name</i> contains a space, you must enclose the domain name and user name in quotation marks.</p> <p>The <i>user_name</i> can be part of the LOCAL domain or a user imported by the ASA from Active Directory domain.</p> <p>If the <i>domain_NetBIOS_name</i> is associated with a AAA server, the <i>user_name</i> must be the Active Directory sAMAccountName, which is unique, instead of the common name (cn), which might not be unique.</p> <p>The <i>domain_NetBIOS_name</i> can be LOCAL or the actual domain name as specified in user-identity domain domain_NetBIOS_name aaa-server aaa_server_group_tag command.</p>
Step 3	<pre>hostname(config-user-object-group)# user-group <i>domain_NetBIOS_name\user_group_name</i></pre> <p>Examples:</p> <pre>hostname(config-user-object-group)# user-group SAMPLE\group.marketing</pre>	<p>Specifies a user group to add to the access rule.</p> <p>The <i>group_name</i> can contain any character including [a-z], [A-Z], [0-9], [!@#%&^&()-_{ } .]. If <i>domain_NetBIOS_name\group_name</i> contains a space, you must enclose the domain name and user name in quotation marks.</p> <p>Specifying the <i>domain_NetBIOS_name</i> for user-group has the same requirements as specifying it for user.</p> <p>The ASA imports the nested user groups from in Active Directory when the access rule is used in an access group or service policy.</p>
Step 4	<pre>hostname(config-user-object-group)# exit</pre>	<p>Exit from the configure user object group mode to the global configuration mode.</p>

	Command	Purpose
Step 5	<pre>hostname(config)# access-list <i>access_list_name</i> {deny permit} <i>protocol</i> [{user-group [<i>domain_name</i>\\<i>user_group_name</i> user {[<i>domain_name</i>\\<i>user_name</i> any none} object-group-user <i>object_group_user_name</i>}] {any host <i>sip</i> <i>sip smask</i> interface <i>name</i> object <i>src_object_name</i> object-group <i>network_object_group_name</i>> [eq <i>port</i> ...] {object-group-user <i>dst_object_group_name</i> object <i>dst_object_name</i> host <i>dst_host_name</i> <i>ip_address</i>} [object-group <i>service_object_name</i> eq <i>port</i> ...]</pre> <p>Examples:</p> <pre>hostname(config)# access-list identity-list1 permit ip user SAMPLE\user1 any any hostname(config)# access-list aclname extended permit ip user-group SAMPLE\group.marketing any any hostname(config)# access-list aclname extended permit ip object-group-user asausers any any</pre>	<p>Creates an access control entry that controls access using user identity or group identity.</p> <p>You can specify [<i>domain_nickname</i>>\]<i>user_name</i> and [<i>domain_nickname</i>>\]<i>user_group_name</i> directly without specifying them in an object-group first.</p> <p>See the access-list extended command in the <i>Cisco ASA 5500 Series Command Reference</i> for a complete description of the command syntax.</p> <p>The keywords user-group any and user-group none can be specified to support cut-through proxy authentication. See Configuring Cut-through Proxy Authentication, page 22.</p>
Step 6	<pre>hostname(config)# access-group <i>access-list</i> global</pre> <p>Examples:</p> <pre>hostname(config)# access-group aclname global</pre>	<p>Applies a single set of global rules to all interfaces with the single command.</p>

Configuring Cut-through Proxy Authentication

In an enterprise, some users log onto the network by using other authentication mechanisms, such as authenticating with a web portal (cut-through proxy) or by using a VPN. For example, users with a Macintosh and Linux client might log in a web portal (cut-through proxy) or by using a VPN. Therefore, you must configure the Identity Firewall to allow these types of authentication in connection with identity-based access policies.

The ASA designates users logging in through a web portal (cut-through proxy) as belonging to the Active Directory domain with which they authenticated. The ASA designates users logging in through a VPN as belonging to the LOCAL domain unless the VPN is authenticated by LDAP with Active Directory, then the Identity Firewall can associate the users with their Active Directory domain. The ASA reports users logging in through VPN authentication or a web portal (cut-through proxy) to the AD Agent, which distributes the user information to all registered ASA devices.

Users can log in by using HTTP/HTTPS, FTP, Telnet, or SSH. When users log in with these authentication methods, the following guidelines apply:

- For HTTP/HTTPS traffic, an authentication window appears for unauthenticated users.
- For Telnet and FTP traffic, users must log in through the cut-through proxy and again to Telnet and FTP server.
- A user can specify an Active Directory domain while providing login credentials (in the format *domain\username*). The ASA automatically selects the associated AAA server group for the specified domain.
- If a user specifies an Active Directory domain while providing login credentials (in the format *domain\username*), the ASA parses the domain and uses it to select an authentication server from the AAA servers configured for the Identity Firewall. Only the *username* is passed to the AAA server.

- If the backslash (\) delimiter is not found in the log in credentials, the ASA does not parse a domain and authentication is conducted with the AAA server that corresponds to default domain configured for the Identity Firewall.
- If a default domain or a server group is not configured for that default domain, the ASA rejects the authentication.
- If the domain is not specified, the ASA selects the AAA server group for the default domain that is configured for the Identity Firewall.

Detailed Steps

To configure the cut-through proxy for the Identity Firewall, perform the following steps:

	Command	Purpose
Step 1	<pre>hostname(config)# access-list access_list_name extended permit tcp any user_ip_address 255.255.255.255 eq http hostname(config)# access-list access_list_name extended permit tcp any user_ip_address 255.255.255.255 eq https Examples: hostname(config)# access-list listenerAuth extended permit tcp any any</pre>	Creates an access list that permits traffic from the users client that uses the HTTP or HTTPS protocol.
Step 2	<pre>hostname(config)# aaa authentication listener http inside port port Examples: hostname(config)# aaa authentication listener http inside port 8888</pre>	Enables HTTP(S) listening ports to authenticate the user.
Step 3	<pre>hostname(config)# access-list access_list_name {deny permit} protocol [{user-group [domain_name\\]user_group_name user {[domain_name\\]user_name any none} object-group-user object_group_user_name}] {any host sip sip smask interface name object src_object_name object-group network_object_group_name> [eq port ...] {object-group-user dst_object_group_name object dst_object_name host dst_host_name ip_address} [object-group service_object_name eq port ...] Examples: hostname(config)# access-list 100 ex deny ip user CISCO\abc any any hostname(config)# access-list 100 ex permit ip user NONE any any</pre>	<p>Creates an access control entry that controls access using user identity or group identity.</p> <p>See the access-list extended command in the <i>Cisco ASA 5500 Series Command Reference</i> for a complete description of the command syntax.</p> <p>The keywords user-group any and user-group none can be specified to support cut-through proxy authentication.</p> <ul style="list-style-type: none"> • any—The access list matches any IP addresses that has already been associated with any users. • none—The access list matches any IP addresses that has not been associated with any IP address.
Step 4	<pre>hostname(config)# aaa authenticate match access_list_name inside user-identity Examples: aaa authenticate match listenerAuth inside user-identity</pre>	Enables authentication for connections through the ASA and matches it to the Identity Firewall feature.

Examples

Example 1

This example shows a typical cut-through proxy configuration to allow a user to log in through the ASA. In this example, the following conditions apply:

- The ASA IP address is 172.1.1.118.
- The Active Directory domain controller has the IP address 71.1.2.93.
- The end user client has the IP address 172.1.1.118 and uses HTTPS to log in through a web portal.
- The user is authenticated by the Active Directory domain controller via LDAP.
- The ASA uses the inside interface to connect to the Active Directory domain controller on the corporate network.

```

hostname(config)# access-list AUTH extended permit tcp any 172.1.1.118 255.255.255.255 eq http
hostname(config)# access-list AUTH extended permit tcp any 172.1.1.118 255.255.255.255 eq https
hostname(config)# aaa-server LDAP protocol ldap
hostname(config-aaa-server-group)# aaa-server LDAP (inside) host 171.1.2.93
hostname(config-aaa-server-host)# ldap-base-dn DC=cisco,DC=com
hostname(config-aaa-server-host)# ldap-group-base-dn DC=cisco,DC=com
hostname(config-aaa-server-host)# ldap-scope subtree
hostname(config-aaa-server-host)# ldap-login-dn cn=kao,OU=Employees,OU=Cisco Users,DC=cisco,DC=com
hostname(config-aaa-server-host)# ldap-login-password *****
hostname(config-aaa-server-host)# ldap-over-ssl enable
hostname(config-aaa-server-host)# server-type microsoft
hostname(config-aaa-server-host)# aaa authentication match AUTH inside LDAP
hostname(config)#
hostname(config)# http server enable
hostname(config)# http 0.0.0.0 0.0.0.0 inside
hostname(config)#
hostname(config)# auth-prompt prompt Enter Your Authentication
hostname(config)# auth-prompt accept You are Good
hostname(config)# auth-prompt reject Goodbye

```

Example 2

```

hostname(config)# access-list listenerAuth extended permit tcp any any
hostname(config)# aaa authentication match listenerAuth inside ldap
hostname(config)# aaa authentication listener http inside port 8888
hostname(config)# access-list 100 ex permit ip user SAMPLE\user1 any any
hostname(config)# access-list 100 ex deny ip user SAMPLE\user2 any any
hostname(config)# access-list 100 ex permit ip user NONE any any
hostname(config)# access-list 100 ex deny any any
hostname(config)# access-group 100 in interface inside
hostname(config)# aaa authenticate match 200 inside user-identity

```

In this example, the following guidelines apply:

- In **access-list** commands, “permit user NONE” rules should be written before the “access-list 100 ex deny any any” to allow unauthenticated incoming users trigger AAA Cut-Through Proxy.
- In **auth access-list** command, “permit user NONE” rules guarantee only unauthenticated trigger Cut-Through Proxy. Ideally they should be the last lines.

Configuring VPN Authentication

In an enterprise, some traffic might need to bypass the Identity Firewall.

The ASA reports users logging in through VPN authentication or a web portal (cut-through proxy) to the AD Agent, which distributes the user information to all registered ASA devices. Specifically, the IP-user mapping of authenticated users is forwarded to all ASA contexts that contain the input interface where HTTP/HTTPS packets are received and authenticated. The ASA designates users logging in through a VPN as belonging the LOCAL domain.

There are two different ways to apply IDFW rules on VPN users.

- Apply VPN-Filter with bypassing access-list check disabled
- Apply VPN-Filter with bypassing access-list check enabled

Configuration Example -- VPN with IDFW Rule -1

By default, "sysopt connection permit-vpn" is enabled and VPN traffic is exempted from access-list check. In order to apply regular interface based ACL rules for VPN traffic, VPN traffic access-list bypassing needs to be disabled.

In this example, if the user logs in from outside interface, the IDFW rules will control what network resource he can access. All VPN users are stored under domain LOCAL. Therefore, it is only meaningful to apply the rules over LOCAL users or object-group containing LOCAL users.

```
! Apply VPN-Filter with bypassing access-list check disabled
no sysopt connection permit-vpn
access-list v1 extended deny ip user LOCAL\idfw any 10.0.0.0 255.255.255.0
access-list v1 extended permit ip user LOCAL\idfw any 20.0.0.0 255.255.255.0
access-group v1 in interface outside      >> Control VPN user based on regular IDFW ACLs
```

Configuration Example VPN with IDFW Rule -2

By default, "sysopt connection permit-vpn" is enabled, with VPN traffic access bypassing enabled. VPN-filter can be used to apply the IDFW rules on the VPN traffic. VPN-filter with IDFW rules can be defined in CLI username and group-policy.

In the example, when user idfw logs in, he is able to access to network resources in 10.0.0.0/24 subnet. However, when user user1 logs in, his access to network resources in 10.0.0.0/24 subnet will be denied. Note that all VPN users will be stored under domain LOCAL. Therefore, it is only meaningful to apply the rules over LOCAL users or object-group containing LOCAL users.

Note: IDFW rules can only be applied to vpn-filter under group-policy and are not available in all the other group-policy features.

```
! Apply VPN-Filter with bypassing access-list check enabled
sysopt connection permit-vpn
access-list v1 extended permit ip user LOCAL\idfw any 10.0.0.0 255.255.255.0
access-list v2 extended deny ip user LOCAL\user1 any 10.0.0.0 255.255.255.0
username user1 password QkBIYVi6IFLEsYv encrypted privilege 0 username user1 attributes
    vpn-group-policy group1 vpn-filter value v2      >> Per user VPN-filter control
username idfw password eEm2dmjMaopcGozT encrypted
username idfw attributes
    vpn-group-policy testgroup vpn-filter value v1

sysopt connection permit-vpn
access-list v1 extended permit ip user LOCAL\idfw any 10.0.0.0 255.255.255.0 access-list
v1 extended deny ip user LOCAL\user1 any 10.0.0.0 255.255.255.0 group-policy group1
internal
group-policy group1 attributes      >> Per group VPN-filter control

    vpn-filter value v1
    vpn-tunnel-protocol ikev1 l2tp-ipsec ssl-client ssl-clientless
```

Monitoring the Identity Firewall

This section contains the following topics:

- [Monitoring AD Agents, page 26](#)
- [Monitoring Groups, page 26](#)

- [Monitoring Memory Usage for the Identity Firewall, page 26](#)
- [Monitoring Users for the Identity Firewall, page 27](#)

Monitoring AD Agents

You can monitor the AD Agent component of the Identity Firewall.

Use the following options of the **show user-identity** command to obtain troubleshooting information for the AD Agent:

- **show user-identity ad-agent**
- **show user-identity ad-agent statistics**

These commands display the following information about the primary and secondary AD Agents:

- Status of the AD Agents
- Status of the domains
- Statistics for the AD Agents

Monitoring Groups

You can monitor the user groups configured for the Identity Firewall.

Use the **show user-identity group** command to obtain troubleshooting information for the user groups configured for the Identity Firewall:

displays the list of user groups in the following format:

domain\group_name

Monitoring Memory Usage for the Identity Firewall

You can monitor the memory usage that the Identity Firewall consumes on the ASA.

Use the **show user-identity memory** command to obtain troubleshooting information for the Identity Firewall:

The command displays the memory usage in bytes of various modules in the Identity Firewall:

- Users
- Groups
- User Stats
- LDAP

The ASA sends an LDAP query for the Active Directory groups configured on the Active Directory server. The Active Directory server authenticates users and generates user logon security logs.

- AD Agent
- Miscellaneous
- Total Memory Usage

**Note**

How you configure the Identity Firewall to retrieve user information from the AD Agent impacts the amount of memory used by the feature. You specify whether the ASA uses **on demand** retrieval or **full download** retrieval. Selecting **On Demand** has the benefit of using less memory as only users of received packets are queried and stored. See [Configuring Identity Options, page 14](#) for a description of these options.

Monitoring Users for the Identity Firewall

You can display information about all users contained in the IP-user mapping database used by the Identity Firewall.

Use the following options of the **show user-identity** command to obtain troubleshooting information for the AD Agent:

- **show user-identity user all list**
- **show user-identity user active user *domain\user-name* list detail**

These commands display the following information for users:

```
domain\user_name   Active Connections      Minutes Idle
```

The default domain name can be the real domain name, a special reserved word, or LOCAL. The Identity Firewall uses the LOCAL domain name for all locally defined user groups or locally defined users (users who log in and authenticate by using a VPN or web portal). When default domain is not specified, the default domain is LOCAL.

The idle time is stored on a per user basis instead of per the IP address of a user.

**Note**

The first three tabs in the

If the commands **user-identity action domain-controller-down *domain_name* disable-user-identity-rule** is configured and the specified domain is down, or if **user-identity action ad-agent-down disable-user-identity-rule** is configured and AD Agent is down, all the logged on users have the status disabled.

Feature History for the Identity Firewall

Table 36-1 lists the release history for this feature.

Table 36-1 Feature History for the Identity Firewall

Feature Name	Releases	Feature Information
Identity Firewall	8.4(2)	<p>The Identity Firewall feature was introduced.</p> <p>We introduced or modified the following commands: user-identity enable, user-identity default-domain, user-identity domain, user-identity logout-probe, user-identity inactive-user-timer, user-identity poll-import-user-group-timer, user-identity action netbios-response-fail, user-identity user-not-found, user-identity action ad-agent-down, user-identity action mac-address-mismatch, user-identity action domain-controller-down, user-identity ad-agent active-user-database, user-identity ad-agent hello-timer, user-identity ad-agent aaa-server, user-identity update import-user, user-identity static user, dns domain-lookup, dns poll-timer, dns expire-entry-timer, object-group user, show user-identity, show dns, clear configure user-identity, clear dns, debug user-identity.</p>



CHAPTER 37

Configuring Management Access

This chapter describes how to access the ASA for system management through Telnet, SSH, and HTTPS (using ASDM), how to authenticate and authorize users, how to create login banners, and how to customize CLI parameters.

This chapter includes the following sections:

- [Configuring ASA Access for ASDM, Telnet, or SSH, page 37-1](#)
- [Configuring CLI Parameters, page 37-6](#)
- [Configuring ICMP Access, page 37-10](#)
- [Configuring Management Access Over a VPN Tunnel, page 37-12](#)
- [Configuring AAA for System Administrators, page 37-13](#)
- [Feature History for Management Access, page 37-33](#)



Note

To access the ASA interface for management access, you do not also need an access list allowing the host IP address. You only need to configure management access according to the sections in this chapter.

Configuring ASA Access for ASDM, Telnet, or SSH

This section describes how to allow clients to access the ASA using ASDM, Telnet, or SSH and includes the following topics:

- [Licensing Requirements for ASA Access for ASDM, Telnet, or SSH, page 37-2](#)
- [Guidelines and Limitations, page 37-2](#)
- [Configuring Telnet Access, page 37-3](#)
- [Using a Telnet Client, page 37-4](#)
- [Configuring SSH Access, page 37-4](#)
- [Using an SSH Client, page 37-5](#)
- [Configuring HTTPS Access for ASDM, page 37-6](#)

Licensing Requirements for ASA Access for ASDM, Telnet, or SSH

The following table shows the licensing requirements for this feature:

Model	License Requirement
All models	Base License.

Guidelines and Limitations

This section includes the guidelines and limitations for this feature.

Context Mode Guidelines

Supported in single and multiple context mode.

Firewall Mode Guidelines

Supported in routed and transparent firewall mode.

IPv6 Guidelines

Supports IPv6.

Additional Guidelines

- You cannot use Telnet to the lowest security interface unless you use Telnet inside a VPN tunnel.
- Management access to an interface other than the one from which you entered the ASA is not supported. For example, if your management host is located on the outside interface, you can only initiate a management connection directly to the outside interface. The only exception to this rule is through a VPN connection. See the [“Configuring Management Access Over a VPN Tunnel” section on page 37-12](#).
- The ASA allows:
 - A maximum of 5 concurrent Telnet connections per context, if available, with a maximum of 100 connections divided among all contexts.
 - A maximum of 5 concurrent SSH connections per context, if available, with a maximum of 100 connections divided among all contexts.
 - A maximum of 5 concurrent ASDM instances per context, if available, with a maximum of 32 ASDM instances among all contexts.
- The ASA supports the SSH remote shell functionality provided in SSH Versions 1 and 2 and supports DES and 3DES ciphers.
- XML management over SSL and SSH is not supported.
- (8.4 and later) The SSH default username is no longer supported. You can no longer connect to the ASA using SSH with the **pix** or **asa** username and the login password. To use SSH, you must configure AAA authentication using the **aaa authentication ssh console LOCAL** command; then define a local user by entering the **username** command. If you want to use a AAA server for authentication instead of the local database, we recommend also configuring local authentication as a backup method.

Configuring Telnet Access

To identify the client IP addresses allowed to connect to the ASA using Telnet, perform the following steps.

Detailed Steps

	Command	Purpose
Step 1	<pre>telnet source_IP_address mask source_interface</pre> <p>Example: <pre>hostname(config)# telnet 192.168.1.2 255.255.255.255 inside</pre></p>	<p>For each address or subnet, identifies the IP addresses from which the ASA accepts connections.</p> <p>If there is only one interface, you can configure Telnet to access that interface as long as the interface has a security level of 100.</p>
Step 2	<pre>telnet timeout minutes</pre> <p>Example: <pre>hostname(config)# telnet timeout 30</pre></p>	<p>Sets the duration for how long a Telnet session can be idle before the ASA disconnects the session.</p> <p>Set the timeout from 1 to 1440 minutes. The default is 5 minutes. The default duration is too short in most cases and should be increased until all pre-production testing and troubleshooting have been completed.</p>

Examples

The following example shows how to let a host on the inside interface with an address of 192.168.1.2 access the ASA:

```
hostname(config)# telnet 192.168.1.2 255.255.255.255 inside
```

The following example shows how to allow all users on the 192.168.3.0 network to access the ASA on the inside interface:

```
hostname(config)# telnet 192.168.3.0 255.255.255.0 inside
```

Using a Telnet Client

To gain access to the ASA CLI using Telnet, enter the login password set by the **password** command. If you configure Telnet authentication (see the [“Configuring Authentication for CLI and ASDM Access” section on page 37-19](#)), then enter the username and password defined by the AAA server or local database.

Configuring SSH Access

To identify the client IP addresses and define a user allowed to connect to the ASA using SSH, perform the following steps.

Detailed Steps

	Command	Purpose
Step 1	crypto key generate rsa modulus <i>modulus_size</i> Example: hostname(config)# crypto key generate rsa modulus 1024	Generates an RSA key pair, which is required for SSH. The modulus value (in bits) is 512, 768, 1024, or 2048. The larger the key modulus size you specify, the longer it takes to generate an RSA key pair. We recommend a value of 1024.
Step 2	write memory Example: hostname(config)# write memory	Saves the RSA keys to persistent flash memory.
Step 3	aaa authentication ssh console LOCAL	Enables local authentication for SSH access. You can alternatively configure authentication using a AAA server. See the “Configuring Authentication for CLI and ASDM Access” section on page 37-19 for more information.
Step 4	username <i>username</i> password <i>password</i>	Creates a user in the local database that can be used for SSH access.
Step 5	ssh <i>source_IP_address mask</i> <i>source_interface</i> Example: hostname(config)# ssh 192.168.3.0 255.255.255.0 inside	For each address or subnet, identifies the IP addresses from which the ASA accepts connections, and the interface on which you can SSH. Unlike Telnet, you can SSH on the lowest security level interface.
Step 6	(Optional) ssh timeout <i>minutes</i> Example: hostname(config)# ssh timeout 30	Sets the duration for how long an SSH session can be idle before the ASA disconnects the session. Set the timeout from 1 to 60 minutes. The default is 5 minutes. The default duration is too short in most cases, and should be increased until all pre-production testing and troubleshooting have been completed.

	Command	Purpose
Step 7	(Optional) <code>ssh version version_number</code> Example: hostname(config)# ssh version 2	Limits access to SSH version 1 or 2. By default, SSH allows both versions 1 and 2.
Step 8	<code>ssh key-exchange {dh-group1 dhgroup14}</code> Example: hostname(config)# ssh key-exchange dh-group14	Specifies that either the Diffie-Hellman Group 1 or Diffie-Hellman Group 14 follows and should be used for key exchange. Diffie-Hellman Group 1 is the default if no value is specified.

Examples

The following example shows how to generate RSA keys and let a host on the inside interface with an address of 192.168.1.2 access the ASA:

```
hostname(config)# crypto key generate rsa modulus 1024
hostname(config)# write memory
hostname(config)# aaa authentication ssh console LOCAL
WARNING: local database is empty! Use 'username' command to define local users.
hostname(config)# username exampleuser1 password examplepassword1
hostname(config)# ssh 192.168.1.2 255.255.255.255 inside
hostname(config)# ssh timeout 30
```

The following example shows how to allow all users on the 192.168.3.0 network to access the ASA on the inside interface:

```
hostname(config)# ssh 192.168.3.0 255.255.255.0 inside
```

Using an SSH Client

In the SSH client on your management host, enter the username and password that you configured in the “Configuring SSH Access” section on page 37-4. When starting an SSH session, a dot (.) displays on the ASA console before the following SSH user authentication prompt appears:

```
hostname(config)# .
```

The display of the dot does not affect the functionality of SSH. The dot appears at the console when generating a server key or decrypting a message using private keys during SSH key exchange before user authentication occurs. These tasks can take up to two minutes or longer. The dot is a progress indicator that verifies that the ASA is busy and has not hung.



Note

If more than one SSH configuration session exists and the configuration operation is carried through any file operations (such as copy, tftp, config net, context mode config file), even if it is a single CLI, it will be blocked with the response "Command Ignored, configuration in progress...". If the CLI is directly entered through a command prompt, it is not blocked.

Configuring HTTPS Access for ASDM

To use ASDM, you need to enable the HTTPS server, and allow HTTPS connections to the ASA. HTTPS access is enabled as part of the factory default configuration or when you use the **setup** command. This section describes how to manually configure ASDM access.

To configure HTTPS access for ASDM, perform the following steps:

Detailed Steps

	Command	Purpose
Step 1	<pre>http source_IP_address mask source_interface</pre> <p>Example: hostname(config)# http 192.168.1.2 255.255.255.255 inside </p>	For each address or subnet, identifies the IP addresses from which the ASA accepts HTTPS connections.
Step 2	<pre>http server enable [port]</pre> <p>Example: hostname(config)# http server enable 443 </p>	<p>Enables the HTTPS server.</p> <p>By default, the <i>port</i> is 443. If you change the port number, be sure to include it in the ASDM access URL. For example, if you change the port number to 444, enter the following:</p> <p>https://10.1.1.1:444</p>

Examples

The following example shows how to enable the HTTPS server and let a host on the inside interface with an address of 192.168.1.2 access ASDM:

```
hostname(config)# http server enable
hostname(config)# http 192.168.1.2 255.255.255.255 inside
```

The following example shows how to allow all users on the 192.168.3.0 network to access ASDM on the inside interface:

```
hostname(config)# http 192.168.3.0 255.255.255.0 inside
```

Configuring CLI Parameters

This section includes the following topics:

- [Licensing Requirements for CLI Parameters, page 37-7](#)
- [Guidelines and Limitations, page 37-7](#)
- [Configuring a Login Banner, page 37-7](#)
- [Customizing a CLI Prompt, page 37-8](#)
- [Changing the Console Timeout, page 37-9](#)

Licensing Requirements for CLI Parameters

The following table shows the licensing requirements for this feature:

Model	License Requirement
All models	Base License.

Guidelines and Limitations

This section includes the guidelines and limitations for this feature.

Context Mode Guidelines

Supported in single and multiple context mode.

Firewall Mode Guidelines

Supported in routed and transparent firewall mode.

Configuring a Login Banner

You can configure a message to display when a user connects to the ASA, before a user logs in, or before a user enters privileged EXEC mode.

Restrictions

After a banner is added, Telnet or SSH sessions to ASA may close if:

- There is not enough system memory available to process the banner message(s).
- A TCP write error occurs when trying to display banner message(s).

Guidelines

- From a security perspective, it is important that your banner discourage unauthorized access. Do not use the words “welcome” or “please,” as they appear to invite intruders in. The following banner sets the correct tone for unauthorized access:

```
You have logged in to a secure device. If you are not authorized to access this device, log out immediately or risk possible criminal consequences.
```

- See RFC 2196 for guidelines about banner messages.

To configure a login banner, perform the following steps:

Detailed Steps

Command	Purpose
banner { exec login motd } <i>text</i> Example: <pre>hostname(config)# banner motd Welcome to \$(hostname).</pre>	<p>Adds a banner to display at one of three times: when a user first connects (message-of-the-day (motd)), when a user logs in (login), and when a user accesses privileged EXEC mode (exec). When a user connects to the ASA, the message-of-the-day banner appears first, followed by the login banner and prompts. After the user successfully logs in to the ASA, the exec banner appears.</p> <p>To add more than one line, precede each line by the banner command.</p> <p>For the banner text:</p> <ul style="list-style-type: none"> • Spaces are allowed, but tabs cannot be entered using the CLI. • There are no limits for banner length other than those for RAM and flash memory. • You can dynamically add the hostname or domain name of the ASA by including the strings \$(hostname) and \$(domain). • If you configure a banner in the system configuration, you can use that banner text within a context by using the \$(system) string in the context configuration.

Examples

The following example shows how to add a message-of-the-day banner:

```
hostname(config)# banner motd Welcome to $(hostname).
hostname(config)# banner motd Contact me at admin@example.com for any
hostname(config)# banner motd issues.
```

Customizing a CLI Prompt

The CLI Prompt pane lets you customize the prompt used during CLI sessions. By default, the prompt shows the hostname of the ASA. In multiple context mode, the prompt also displays the context name. You can display the following items in the CLI prompt:

context	(Multiple mode only) Displays the name of the current context.
domain	Displays the domain name.
hostname	Displays the hostname.

priority	Displays the failover priority as pri (primary) or sec (secondary).
state	Displays the traffic-passing state of the unit. The following values appear for the state: <ul style="list-style-type: none"> act—Failover is enabled, and the unit is actively passing traffic. stby— Failover is enabled, and the unit is not passing traffic and is in a standby, failed, or another nonactive state. actNoFailover—Failover is not enabled, and the unit is actively passing traffic. stbyNoFailover—Failover is not enabled, and the unit is not passing traffic. This condition might occur when there is an interface failure above the threshold on the standby unit.

Detailed Steps

To customize the CLI prompt, enter the following command:

Command	Purpose
<code>prompt {[hostname] [context] [domain] [slot] [state] [priority]}</code>	Customizes the CLI prompt.
Example: <code>hostname(config)# firewall transparent</code>	

Changing the Console Timeout

The console timeout sets how long a connection can remain in privileged EXEC mode or configuration mode; when the timeout is reached, the session drops into user EXEC mode. By default, the session does not time out. This setting does not affect how long you can remain connected to the console port, which never times out.

To change the console timeout, enter the following command:

Command	Purpose
<code>console timeout <i>number</i></code>	Specifies the idle time in minutes (0 through 60) after which the privileged session ends. The default timeout is 0, which means the session does not time out.
Example: <code>hostname(config)# console timeout 0</code>	

Model	License Requirement
All models	Base License.

Configuring ICMP Access

By default, you can send ICMP packets to any ASA interface using either IPv4 or IPv6. This section tells how to limit ICMP management access to the ASA. You can protect the ASA from attacks by limiting the addresses of hosts and networks that are allowed to have ICMP access to the ASA.



Note

For allowing ICMP traffic through the ASA, see [Chapter 34, “Configuring Access Rules.”](#)

This section includes the following topics:

- [Information About ICMP Access, page 37-10](#)
- [Licensing Requirements for ICMP Access, page 37-10](#)
- [Guidelines and Limitations, page 37-10](#)
- [Default Settings, page 37-11](#)
- [Configuring ICMP Access, page 37-11](#)

Information About ICMP Access

ICMP in IPv6 functions the same as ICMP in IPv4. ICMPv6 generates error messages, such as ICMP destination unreachable messages and informational messages like ICMP echo request and reply messages. Additionally ICMP packets in IPv6 are used in the IPv6 neighbor discovery process and path MTU discovery.

We recommend that you always grant permission for the ICMP unreachable message type (type 3). Denying ICMP unreachable messages disables ICMP path MTU discovery, which can halt IPsec and PPTP traffic. See RFC 1195 and RFC 1435 for details about path MTU discovery.

If you configure ICMP rules, then the ASA uses a first match to the ICMP traffic followed by an implicit deny all entry. That is, if the first matched entry is a permit entry, the ICMP packet continues to be processed. If the first matched entry is a deny entry or an entry is not matched, the ASA discards the ICMP packet and generates a syslog message. An exception is when an ICMP rule is not configured; in that case, a permit statement is assumed.

Licensing Requirements for ICMP Access

The following table shows the licensing requirements for this feature:

Model	License Requirement
All models	Base License.

Guidelines and Limitations

This section includes the guidelines and limitations for this feature.

Context Mode Guidelines

Supported in single and multiple context mode.

Firewall Mode Guidelines

Supported in routed and transparent firewall mode.

IPv6 Guidelines

Supports IPv6.

Additional Guidelines

- The ASA does not respond to ICMP echo requests directed to a broadcast address.
- The ASA only responds to ICMP traffic sent to the interface that traffic comes in on; you cannot send ICMP traffic through an interface to a far interface.

Default Settings

By default, you can send ICMP packets to any ASA interface using either IPv4 or IPv6.

Configuring ICMP Access

To configure ICMP access rules, enter one of the following commands:

Detailed Steps

Command	Purpose
(For IPv4) <pre>icmp {permit deny} {host ip_address ip_address mask any} [icmp_type] interface_name</pre> Example: <pre>hostname(config)# icmp deny host 10.1.1.15 inside</pre>	Creates an IPv4 ICMP access rule. If you do not specify an <i>icmp_type</i> , all types are identified. You can enter the number or the name. To control ping, specify echo-reply (0) (ASA-to-host) or echo (8) (host-to-ASA). See the “ ICMP Types ” section on page B-15 for a list of ICMP types.
(For IPv6) <pre>ipv6 icmp {permit deny} {ipv6-prefix/prefix-length any host ipv6-address} [icmp-type] interface_name</pre> Example: <pre>hostname(config)# icmp permit host fe80::20d:88ff:feee:6a82 outside</pre>	Creates an IPv6 ICMP access rule. If you do not specify an <i>icmp_type</i> , all types are identified. You can enter the number or the name. To control ping, specify echo-reply (0) (ASA-to-host) or echo (8) (host-to-ASA). See the “ ICMP Types ” section on page B-15 for a list of ICMP types.

Examples

The following example shows how to allow all hosts except the one at 10.1.1.15 to use ICMP to the inside interface:

```
hostname(config)# icmp deny host 10.1.1.15 inside
hostname(config)# icmp permit any inside
```

The following example shows how to allow the host at 10.1.1.15 to use only ping to the inside interface, enter the following command:

```
hostname(config)# icmp permit host 10.1.1.15 inside
```

The following example shows how to deny all ping requests and permit all packet-too-big messages (to support path MTU discovery) at the outside interface:

```
hostname(config)# ipv6 icmp deny any echo-reply outside
hostname(config)# ipv6 icmp permit any packet-too-big outside
```

The following example shows how to permit host 2000:0:0:4::2 or hosts on prefix 2001::/64 to ping the outside interface:

```
hostname(config)# ipv6 icmp permit host 2000:0:0:4::2 echo-reply outside
hostname(config)# ipv6 icmp permit 2001::/64 echo-reply outside
hostname(config)# ipv6 icmp permit any packet-too-big outside
```

Configuring Management Access Over a VPN Tunnel

If your VPN tunnel terminates on one interface, but you want to manage the ASA by accessing a different interface, you can identify that interface as a management-access interface. For example, if you enter the ASA from the outside interface, this feature lets you connect to the inside interface using ASDM, SSH, Telnet, or SNMP; or you can ping the inside interface when entering from the outside interface. Management access is available via the following VPN tunnel types: IPsec clients, IPsec site-to-site, and the AnyConnect SSL VPN client.

This section includes the following topics:

- [Licensing Requirements for a Management Interface, page 37-12](#)
- [Guidelines and Limitations, page 37-12](#)
- [Configuring a Management Interface, page 37-13](#)

Licensing Requirements for a Management Interface

The following table shows the licensing requirements for this feature:

Model	License Requirement
All models	Base License.

Guidelines and Limitations

This section includes the guidelines and limitations for this feature.

Context Mode Guidelines

Supported in single mode.

Firewall Mode Guidelines

Supported in routed mode.

IPv6 Guidelines

Supports IPv6.

Additional Guidelines

You can define only one management access interface.

Configuring a Management Interface

To configure the management interface, enter the following command:

Command	Purpose
<code>management access management_interface</code>	The <i>management_interface</i> specifies the name of the management interface that you want to access when entering the ASA from another interface.
Example: <code>hostname(config)# management access inside</code>	

Configuring AAA for System Administrators

This section describes how to enable authentication and command authorization for system administrators. Before you configure AAA for system administrators, first configure the local database or AAA server according to procedures listed in [Chapter 35, “Configuring AAA Servers and the Local Database.”](#)

This section includes the following topics:

- [Information About AAA for System Administrators, page 37-14](#)
- [Licensing Requirements for AAA for System Administrators, page 37-17](#)
- [Prerequisites, page 37-17](#)
- [Guidelines and Limitations, page 37-18](#)
- [Default Settings, page 37-18](#)
- [Configuring Authentication for CLI and ASDM Access, page 37-19](#)
- [Configuring Authentication to Access Privileged EXEC Mode \(the enable Command\), page 37-19](#)
- [Limiting User CLI and ASDM Access with Management Authorization, page 37-21](#)
- [Configuring Command Authorization, page 37-22](#)
- [Configuring Management Access Accounting, page 37-30](#)
- [Viewing the Currently Logged-In User, page 37-30](#)
- [Recovering from a Lockout, page 37-31](#)
- [Setting a Management Session Quota, page 37-32](#)

Information About AAA for System Administrators

This section describes AAA for system administrators and includes the following topics:

- [Information About Management Authentication, page 37-14](#)
- [Information About Command Authorization, page 37-14](#)

Information About Management Authentication

This section describes authentication for management access and includes the following topics:

- [Comparing CLI Access with and without Authentication, page 37-14](#)
- [Comparing ASDM Access with and without Authentication, page 37-14](#)

Comparing CLI Access with and without Authentication

How you log into the ASA depends on whether or not you enable authentication:

- If you do not enable any authentication for Telnet, you do not enter a username; you enter the login password (set with the **password** command). For SSH, you enter the username and the login password. You access user EXEC mode.
- If you enable Telnet or SSH authentication according to this section, you enter the username and password as defined on the AAA server or local user database. You access user EXEC mode.

To enter privileged EXEC mode after logging in, enter the **enable** command. How **enable** works depends on whether you enable authentication:

- If you do not configure enable authentication, enter the system enable password when you enter the **enable** command (set by the **enable password** command). However, if you do not use enable authentication, after you enter the **enable** command, you are no longer logged in as a particular user. To maintain your username, use enable authentication.
- If you configure enable authentication (see the [Configuring Authentication to Access Privileged EXEC Mode \(the enable Command\), page 37-19](#)), the ASA prompts you for your username and password again. This feature is particularly useful when you perform command authorization, in which usernames are important in determining the commands that a user can enter.

For enable authentication using the local database, you can use the **login** command instead of the **enable** command. **login** maintains the username but requires no configuration to turn on authentication. See the [“Authenticating Users with the login Command” section on page 37-20](#) for more information.

Comparing ASDM Access with and without Authentication

By default, you can log into ASDM with a blank username and the enable password set by the **enable password** command. Note that if you enter a username and password at the login screen (instead of leaving the username blank), ASDM checks the local database for a match.

If you configure HTTP authentication, you can no longer use ASDM with a blank username and the enable password.

Information About Command Authorization

This section describes command authorization and includes the following topics:

- [Supported Command Authorization Methods, page 37-15](#)

- [About Preserving User Credentials, page 37-15](#)
- [Security Contexts and Command Authorization, page 37-16](#)

Supported Command Authorization Methods

You can use one of two command authorization methods:

- Local privilege levels—Configure the command privilege levels on the ASA. When a local, RADIUS, or LDAP (if you map LDAP attributes to RADIUS attributes) user authenticates for CLI access, the ASA places that user in the privilege level that is defined by the local database, RADIUS, or LDAP server. The user can access commands at the assigned privilege level and below. Note that all users access user EXEC mode when they first log in (commands at level 0 or 1). The user needs to authenticate again with the **enable** command to access privileged EXEC mode (commands at level 2 or higher), or they can log in with the **login** command (local database only).



Note You can use local command authorization without any users in the local database and without CLI or **enable** authentication. Instead, when you enter the **enable** command, you enter the system enable password, and the ASA places you in level 15. You can then create enable passwords for every level, so that when you enter **enable n** (2 to 15), the ASA places you in level *n*. These levels are not used unless you enable local command authorization (see the [“Configuring Local Command Authorization”](#) section on page 37-23). (See the command reference for more information about the **enable** command.)

- TACACS+ server privilege levels—On the TACACS+ server, configure the commands that a user or group can use after authenticating for CLI access. Every command that a user enters at the CLI is validated with the TACACS+ server.

About Preserving User Credentials

When a user logs into the ASA, that user is required to provide a username and password for authentication. The ASA retains these session credentials in case further authentication is needed later in the session.

When the following configurations are in place, a user needs only to authenticate with the local server for login. Subsequent serial authorization uses the saved credentials. The user is also prompted for the privilege level 15 password. When exiting privileged mode, the user is authenticated again. User credentials are not retained in privileged mode.

- The local server is configured to authenticate user access.
- Privilege level 15 command access is configured to require a password.
- The user account is configured for serial-only authorization (no access to console or ASDM).
- The user account is configured for privilege level 15 command access.

The following table shows how credentials are used in this case by the ASA.

Credentials required	Username and Password Authentication	Serial Authorization	Privileged Mode Command Authorization	Privileged Mode Exit Authorization
Username	Yes	No	No	Yes

Credentials required	Username and Password Authentication	Serial Authorization	Privileged Mode Command Authorization	Privileged Mode Exit Authorization
Password	Yes	No	No	Yes
Privileged Mode Password	No	No	Yes	No

Security Contexts and Command Authorization

The following are important points to consider when implementing command authorization with multiple security contexts:

- AAA settings are discrete per context, not shared among contexts.

When configuring command authorization, you must configure each security context separately. This configuration provides you the opportunity to enforce different command authorizations for different security contexts.

When switching between security contexts, administrators should be aware that the commands permitted for the username specified when they login may be different in the new context session or that command authorization may not be configured at all in the new context. Failure to understand that command authorizations may differ between security contexts could confuse an administrator. This behavior is further complicated by the next point.

- New context sessions started with the **changeto** command always use the default enable_15 username as the administrator identity, regardless of which username was used in the previous context session. This behavior can lead to confusion if command authorization is not configured for the enable_15 user or if authorizations are different for the enable_15 user than for the user in the previous context session.

This behavior also affects command accounting, which is useful only if you can accurately associate each command that is issued with a particular administrator. Because all administrators with permission to use the **changeto** command can use the enable_15 username in other contexts, command accounting records may not readily identify who was logged in as the enable_15 username. If you use different accounting servers for each context, tracking who was using the enable_15 username requires correlating the data from several servers.

When configuring command authorization, consider the following:

- An administrator with permission to use the **changeto** command effectively has permission to use all commands permitted to the enable_15 user in each of the other contexts.
- If you intend to authorize commands differently per context, ensure that in each context the enable_15 username is denied use of commands that are also denied to administrators who are permitted use of the **changeto** command.

When switching between security contexts, administrators can exit privileged EXEC mode and enter the **enable** command again to use the username that they need.



Note

The system execution space does not support AAA commands; therefore, command authorization is not available in the system execution space.

Licensing Requirements for AAA for System Administrators

The following table shows the licensing requirements for this feature:

Model	License Requirement
All models	Base License.

Prerequisites

Depending on the feature, you can use the following:

- AAA server—See the [“Configuring AAA Server Groups”](#) section on page 35-11.
- Local Database—See the [“Adding a User Account to the Local Database”](#) section on page 35-20.

Prerequisites for Management Authentication

Before the ASA can authenticate a Telnet, SSH, or HTTP user, you must identify the IP addresses that are allowed to communicate with the ASA. For more information, see the [“Configuring ASA Access for ASDM, Telnet, or SSH”](#) section on page 37-1.

Prerequisites for Local Command Authorization

- Configure **enable** authentication. (See the [“Configuring Authentication for CLI and ASDM Access”](#) section on page 37-19.) **enable** authentication is essential for maintaining the username after the user accesses the **enable** command.

Alternatively, you can use the **login** command (which is the same as the **enable** command with authentication; for the local database only), which requires no configuration. We do not recommend this option because it is not as secure as **enable** authentication.

You can also use CLI authentication, but it is not required.

- See the following prerequisites for each user type:
 - Local database users—Configure each user in the local database at a privilege level from 0 to 15.
 - RADIUS users—Configure the user with Cisco VSA CVPN3000-Privilege-Level with a value between 0 and 15.
 - LDAP users—Configure the user with a privilege level between 0 and 15, and then map the LDAP attribute to Cisco VSA CVPN3000-Privilege-Level according to the [“Configuring LDAP Attribute Maps”](#) section on page 35-18.

Prerequisites for TACACS+ Command Authorization

- Configure CLI authentication (see the [“Configuring Authentication for CLI and ASDM Access”](#) section on page 37-19).
- Configure **enable** authentication (see the [“Configuring Authentication to Access Privileged EXEC Mode \(the enable Command\)”](#) section on page 37-19).

Prerequisites for Management Accounting

- Configure CLI authentication (see the [“Configuring Authentication for CLI and ASDM Access”](#) section on page 37-19).

- Configure **enable** authentication (see the [“Configuring Authentication to Access Privileged EXEC Mode \(the enable Command\)”](#) section on page 37-19).

Guidelines and Limitations

This section includes the guidelines and limitations for this feature.

Context Mode Guidelines

Supported in single and multiple context mode.

Firewall Mode Guidelines

Supported in routed and transparent firewall mode.

IPv6 Guidelines

Supports IPv6.

Default Settings

By default, the following commands are assigned to privilege level 0. All other commands are assigned to privilege level 15.

- **show checksum**
- **show curpriv**
- **enable**
- **help**
- **show history**
- **login**
- **logout**
- **pager**
- **show pager**
- **clear pager**
- **quit**
- **show version**

If you move any configure mode commands to a lower level than 15, be sure to move the **configure** command to that level as well, otherwise, the user will not be able to enter configuration mode.

To view all privilege levels, see the [“Viewing Local Command Privilege Levels”](#) section on page 37-26.

Configuring Authentication for CLI and ASDM Access

To configure management authentication, enter the following command:

Command	Purpose
<pre>aaa authentication {telnet ssh http serial} console {LOCAL server_group [LOCAL]}</pre> <p>Example: hostname(config)# aaa authentication telnet console LOCAL</p>	<p>Authenticates users for management access. The telnet keyword controls Telnet access.</p> <p>The ssh keyword controls SSH access. The SSH default usernames asa and pix are no longer supported.</p> <p>The http keyword controls ASDM access.</p> <p>The serial keyword controls console port access.</p> <p>HTTP management authentication does not support the SDI protocol for a AAA server group.</p> <p>If you use a AAA server group for authentication, you can configure the ASA to use the local database as a fallback method if the AAA server is unavailable. Specify the server group name followed by LOCAL (LOCAL is case sensitive). We recommend that you use the same username and password in the local database as the AAA server, because the ASA prompt does not give any indication which method is being used.</p> <p>You can alternatively use the local database as your primary method of authentication (with no fallback) by entering LOCAL alone.</p>

Configuring Authentication to Access Privileged EXEC Mode (the enable Command)

You can configure the ASA to authenticate users with a AAA server or the local database when they enter the **enable** command. Alternatively, users are automatically authenticated with the local database when they enter the **login** command, which also accesses privileged EXEC mode depending on the user level in the local database.

This section includes the following topics:

- [Configuring Authentication for the enable Command, page 37-20](#)
- [Authenticating Users with the login Command, page 37-20](#)

Configuring Authentication for the enable Command

You can configure the ASA to authenticate users when they enter the **enable** command. See the [“Comparing CLI Access with and without Authentication”](#) section on page 37-14 for more information.

To authenticate users who enter the **enable** command, enter the following command.

Command	Purpose
<pre>aaa authentication enable console {LOCAL server_group [LOCAL]}</pre> <p>Example: <pre>hostname(config)# aaa authentication enable console LOCAL</pre></p>	<p>Authenticates users who enter the enable command. The user is prompted for the username and password.</p> <p>If you use a AAA server group for authentication, you can configure the ASA to use the local database as a fallback method if the AAA server is unavailable. Specify the server group name followed by LOCAL (LOCAL is case sensitive). We recommend that you use the same username and password in the local database as the AAA server, because the ASA prompt does not give any indication of which method is being used.</p> <p>You can alternatively use the local database as your primary method of authentication (with no fallback) by entering LOCAL alone.</p>

Authenticating Users with the login Command

From user EXEC mode, you can log in as any username in the local database using the **login** command.

This feature allows users to log in with their own username and password to access privileged EXEC mode, so you do not have to provide the system enable password to everyone. To allow users to access privileged EXEC mode (and all commands) when they log in, set the user privilege level to 2 (the default) through 15. If you configure local command authorization, then the user can only enter commands assigned to that privilege level or lower. See the [“Configuring Local Command Authorization”](#) section on page 37-23 for more information.



Caution

If you add users to the local database who can gain access to the CLI and whom you do not want to enter privileged EXEC mode, you should configure command authorization. Without command authorization, users can access privileged EXEC mode (and all commands) at the CLI using their own password if their privilege level is 2 or greater (2 is the default). Alternatively, you can use a AAA server for authentication, or you can set all local users to level 1 so you can control who can use the system enable password to access privileged EXEC mode.

To log in as a user from the local database, enter the following command:

Command	Purpose
<pre>login</pre> <p>Example: <pre>hostname# login</pre></p>	<p>Logs in as a user from the local database. The ASA prompts for your username and password. After you enter your password, the ASA places you in the privilege level that the local database specifies.</p>

Limiting User CLI and ASDM Access with Management Authorization

If you configure CLI or **enable** authentication, you can limit a local user, RADIUS, TACACS+, or LDAP user (if you map LDAP attributes to RADIUS attributes) from accessing the CLI, ASDM, or the **enable** command.



Note

Serial access is not included in management authorization, so if you configure the **aaa authentication serial console** command, then any user who authenticates can access the console port.

To limit user CLI and ASDM access, perform the following steps:

Detailed Steps

	Command	Purpose
Step 1	aaa authorization exec authentication-server Example: hostname(config)# aaa authorization exec authentication-server	Enables management authorization for local, RADIUS, LDAP (mapped), and TACACS+ users. Also enables support of administrative user privilege levels from RADIUS, which can be used in conjunction with local command privilege levels for command authorization. See the “Configuring Local Command Authorization” section on page 37-23 for more information. Use the aaa authorization exec LOCAL command to enable attributes to be taken from the local database.

Command	Purpose
Step 2	To configure the user for management authorization, see the following requirements for each AAA server type or local user:
	<ul style="list-style-type: none"> • RADIUS or LDAP (mapped) users—Use the IETF RADIUS numeric Service-Type attribute, which maps to one of the following values: <ul style="list-style-type: none"> – Service-Type 6 (Administrative)—Allows full access to any services specified by the aaa authentication console commands. – Service-Type 7 (NAS prompt)—Allows access to the CLI when you configure the aaa authentication {telnet ssh} console command, but denies ASDM configuration access if you configure the aaa authentication http console command. ASDM monitoring access is allowed. If you configure enable authentication with the aaa authentication enable console command, the user cannot access privileged EXEC mode using the enable command. – Service-Type 5 (Outbound)—Denies management access. The user cannot use any services specified by the aaa authentication console commands (excluding the serial keyword; serial access is allowed). Remote access (IPsec and SSL) users can still authenticate and terminate their remote access sessions. <p>Configure Cisco VSA CVPN3000-Privilege-Level with a value between 0 and 15. and then map the LDAP attributes to Cisco VAS CVPN3000-Privilege-Level using the ldap map-attributes command. For more information, see the “Configuring LDAP Attribute Maps” section on page 35-18.</p> <ul style="list-style-type: none"> • TACACS+ users—Authorization is requested with “service=shell,” and the server responds with PASS or FAIL. <ul style="list-style-type: none"> – PASS, privilege level 1—Allows access to ASDM, with limited read-only access to the configuration and monitoring sections, and access for show commands that are privilege level 1 only. – PASS, privilege level 2 and higher—Allows access to the CLI when you configure the aaa authentication {telnet ssh} console command, but denies ASDM configuration access if you configure the aaa authentication http console command. ASDM monitoring access is allowed. If you configure enable authentication with the aaa authentication enable console command, the user cannot access privileged EXEC mode using the enable command. You are not allowed to access privileged EXEC mode using the enable command if your enable privilege level is set to 14 or less. – FAIL—Denies management access. You cannot use any services specified by the aaa authentication console commands (excluding the serial keyword; serial access is allowed). • Local users—Sets the service-type command. By default, the service-type is admin, which allows full access to any services specified by the aaa authentication console command. Uses the username command to configure local database users at a privilege level from 0 to 15. For more information, see the “Adding a User Account to the Local Database” section on page 35-20.

Configuring Command Authorization

If you want to control access to commands, the ASA lets you configure command authorization, where you can determine which commands that are available to a user. By default when you log in, you can access user EXEC mode, which offers only minimal commands. When you enter the **enable** command (or the **login** command when you use the local database), you can access privileged EXEC mode and advanced commands, including configuration commands.

You can use one of two command authorization methods:

- Local privilege levels
- TACACS+ server privilege levels

For more information about command authorization, see the [“Information About Command Authorization” section on page 37-14](#).

This section includes the following topics:

- [Configuring Local Command Authorization, page 37-23](#)
- [Viewing Local Command Privilege Levels, page 37-26](#)
- [Configuring Commands on the TACACS+ Server, page 37-26](#)
- [Configuring TACACS+ Command Authorization, page 37-29](#)

Configuring Local Command Authorization

Local command authorization lets you assign commands to one of 16 privilege levels (0 to 15). By default, each command is assigned either to privilege level 0 or 15. You can define each user to be at a specific privilege level, and each user can enter any command at the assigned privilege level or below. The ASA supports user privilege levels defined in the local database, a RADIUS server, or an LDAP server (if you map LDAP attributes to RADIUS attributes. See the [“Configuring LDAP Attribute Maps” section on page 35-18](#).)

To configure local command authorization, perform the following steps:

Detailed Steps

Command	Purpose
<p>Step 1</p> <pre>privilege [show clear cmd] level level [mode {enable cmd}] command command</pre> <p>Example: hostname(config)# privilege show level 5 command filter</p>	<p>Assigns a command to a privilege level.</p> <p>Repeat this command for each command that you want to reassign.</p> <p>The options in this command are the following:</p> <ul style="list-style-type: none"> • show clear cmd—These optional keywords let you set the privilege only for the show, clear, or configure form of the command. The configure form of the command is typically the form that causes a configuration change, either as the unmodified command (without the show or clear prefix) or as the no form. If you do not use one of these keywords, all forms of the command are affected. • level level—A level between 0 and 15. • mode {enable configure}—If a command can be entered in user EXEC or privileged EXEC mode as well as configuration mode, and the command performs different actions in each mode, you can set the privilege level for these modes separately: <ul style="list-style-type: none"> – enable—Specifies both user EXEC mode and privileged EXEC mode. – configure—Specifies configuration mode, accessed using the configure terminal command. • command command—The command you are configuring. You can only configure the privilege level of the <i>main</i> command. For example, you can configure the level of all aaa commands, but not the level of the aaa authentication command and the aaa authorization command separately.
<p>Step 2</p> <pre>aaa authorization exec authentication-server</pre> <p>Example: hostname(config)# aaa authorization exec authentication-server</p>	<p>Supports administrative user privilege levels from RADIUS.</p> <p>Enforces user-specific access levels for users who authenticate for management access (see the aaa authentication console LOCAL command).</p> <p>Without this command, the ASA only supports privilege levels for local database users and defaults all other types of users to level 15.</p> <p>This command also enables management authorization for local, RADIUS, LDAP (mapped), and TACACS+ users.</p> <p>Use the aaa authorization exec LOCAL command to enable attributes to be taken from the local database. See the “Limiting User CLI and ASDM Access with Management Authorization” section on page 37-21 for information about configuring a user on a AAA server to accommodate management authorization.</p>

Command	Purpose
<p>Step 3</p> <pre>aaa authorization command LOCAL</pre> <p>Example: hostname(config)# aaa authorization command LOCAL </p>	<p>Enables the use of local command privilege levels, which can be checked with the privilege level of users in the local database, RADIUS server, or LDAP server (with mapped attributes).</p> <p>When you set command privilege levels, command authorization does not occur unless you configure command authorization with this command.</p>

Examples

The **filter** command has the following forms:

- **filter** (represented by the **configure** option)
- **show running-config filter**
- **clear configure filter**

You can set the privilege level separately for each form, or set the same privilege level for all forms by omitting this option. The following example shows how to set each form separately:

```
hostname(config)# privilege show level 5 command filter
hostname(config)# privilege clear level 10 command filter
hostname(config)# privilege cmd level 10 command filter
```

Alternatively, the following example shows how to set all filter commands to the same level:

```
hostname(config)# privilege level 5 command filter
```

The **show privilege** command separates the forms in the display.

The following example shows the use of the **mode** keyword. The **enable** command must be entered from user EXEC mode, while the **enable password** command, which is accessible in configuration mode, requires the highest privilege level:

```
hostname(config)# privilege cmd level 0 mode enable command enable
hostname(config)# privilege cmd level 15 mode cmd command enable
hostname(config)# privilege show level 15 mode cmd command enable
```

The following example shows an additional command, the **configure** command, which uses the **mode** keyword:

```
hostname(config)# privilege show level 5 mode cmd command configure
hostname(config)# privilege clear level 15 mode cmd command configure
hostname(config)# privilege cmd level 15 mode cmd command configure
hostname(config)# privilege cmd level 15 mode enable command configure
```



Note

This last line is for the **configure terminal** command.

Viewing Local Command Privilege Levels

The following commands let you view privilege levels for commands.

Command	Purpose
<code>show running-config all privilege all</code>	Shows all commands.
<code>show running-config privilege level <i>level</i></code>	Shows commands for a specific level. The <i>level</i> is an integer between 0 and 15.
<code>show running-config privilege command <i>command</i></code>	Shows the level of a specific command.

Examples

For the `show running-config all privilege all` command, the ASA displays the current assignment of each CLI command to a privilege level. The following is sample output from this command:

```
hostname(config)# show running-config all privilege all
privilege show level 15 command aaa
privilege clear level 15 command aaa
privilege configure level 15 command aaa
privilege show level 15 command aaa-server
privilege clear level 15 command aaa-server
privilege configure level 15 command aaa-server
privilege show level 15 command access-group
privilege clear level 15 command access-group
privilege configure level 15 command access-group
privilege show level 15 command access-list
privilege clear level 15 command access-list
privilege configure level 15 command access-list
privilege show level 15 command activation-key
privilege configure level 15 command activation-key
....
```

The following example displays the command assignments for privilege level 10:

```
hostname(config)# show running-config privilege level 10
privilege show level 10 command aaa
```

The following example displays the command assignments for the `access-list` command:

```
hostname(config)# show running-config privilege command access-list
privilege show level 15 command access-list
privilege clear level 15 command access-list
privilege configure level 15 command access-list
```

Configuring Commands on the TACACS+ Server

You can configure commands on a Cisco Secure Access Control Server (ACS) TACACS+ server as a shared profile component, for a group, or for individual users. For third-party TACACS+ servers, see your server documentation for more information about command authorization support.

See the following guidelines for configuring commands in Cisco Secure ACS Version 3.1; many of these guidelines also apply to third-party servers:

- The ASA sends the commands to be authorized as shell commands, so configure the commands on the TACACS+ server as shell commands.



Note Cisco Secure ACS might include a command type called “pix-shell.” Do not use this type for ASA command authorization.

- The first word of the command is considered to be the main command. All additional words are considered to be arguments, which need to be preceded by **permit** or **deny**.

For example, to allow the **show running-configuration aaa-server** command, add **show running-configuration** to the command field, and type **permit aaa-server** in the arguments field.

- You can permit all arguments of a command that you do not explicitly deny by checking the **Permit Unmatched Args** check box.

For example, you can configure just the **show** command, and then all the **show** commands are allowed. We recommend using this method so that you do not have to anticipate every variant of a command, including abbreviations and **?**, which shows CLI usage (see [Figure 37-1](#)).

Figure 37-1 *Permitting All Related Commands*

- For commands that are a single word, you *must* permit unmatched arguments, even if there are no arguments for the command, for example **enable** or **help** (see [Figure 37-2](#)).

Figure 37-2 *Permitting Single Word Commands*

- To disallow some arguments, enter the arguments preceded by **deny**.

For example, to allow **enable**, but not **enable password**, enter **enable** in the commands field, and **deny password** in the arguments field. Be sure to check the **Permit Unmatched Args** check box so that **enable** alone is still allowed (see [Figure 37-3](#)).

Figure 37-3 Disallowing Arguments

The screenshot shows a configuration window with two text input fields. The left field, labeled 'commands', contains the text 'enable'. The right field, labeled 'arguments', contains the text 'deny password'. Above the right field is a checked checkbox labeled 'Permit Unmatched Args'. Below the fields are two buttons: 'Add Command' and 'Remove Command'. A vertical label '114410' is on the right side of the window.

- When you abbreviate a command at the command line, the ASA expands the prefix and main command to the full text, but it sends additional arguments to the TACACS+ server as you enter them.

For example, if you enter **sh log**, then the ASA sends the entire command to the TACACS+ server, **show logging**. However, if you enter **sh log mess**, then the ASA sends **show logging mess** to the TACACS+ server, and not the expanded command **show logging message**. You can configure multiple spellings of the same argument to anticipate abbreviations (see [Figure 37-4](#)).

Figure 37-4 Specifying Abbreviations

The screenshot shows a configuration window with two text input fields. The left field, labeled 'commands', contains the text 'show'. The right field, labeled 'arguments', contains three lines of text: 'permit logging', 'permit logging message', and 'permit logging mess'. Above the right field is an unchecked checkbox labeled 'Permit Unmatched Args'. Below the fields are two buttons: 'Add Command' and 'Remove Command'. A vertical label '114414' is on the right side of the window.

- We recommend that you allow the following basic commands for all users:
 - **show checksum**
 - **show curpriv**
 - **enable**
 - **help**
 - **show history**

- login
- logout
- pager
- show pager
- clear pager
- quit
- show version

Configuring TACACS+ Command Authorization

If you enable TACACS+ command authorization, and a user enters a command at the CLI, the ASA sends the command and username to the TACACS+ server to determine if the command is authorized.

Before you enable TACACS+ command authorization, be sure that you are logged into the ASA as a user that is defined on the TACACS+ server, and that you have the necessary command authorization to continue configuring the ASA. For example, you should log in as an admin user with all commands authorized. Otherwise, you could become unintentionally locked out.

Do not save your configuration until you are sure that it works the way you want. If you get locked out because of a mistake, you can usually recover access by restarting the ASA. If you still get locked out, see the [“Recovering from a Lockout”](#) section on page 37-31.

Be sure that your TACACS+ system is completely stable and reliable. The necessary level of reliability typically requires that you have a fully redundant TACACS+ server system and fully redundant connectivity to the ASA. For example, in your TACACS+ server pool, include one server connected to interface 1, and another to interface 2. You can also configure local command authorization as a fallback method if the TACACS+ server is unavailable. In this case, you need to configure local users and command privilege levels according to procedures listed in the [“Configuring Command Authorization”](#) section on page 37-22.

To configure TACACS+ command authorization, enter the following command:

Detailed Steps

Command	Purpose
<pre>aaa authorization command tacacs+_server_group [LOCAL]</pre> <p>Example: hostname(config)# aaa authorization command group_1 LOCAL</p>	<p>Performs command authorization using a TACACS+ server.</p> <p>You can configure the ASA to use the local database as a fallback method if the TACACS+ server is unavailable. To enable fallback, specify the server group name followed by LOCAL (LOCAL is case sensitive). We recommend that you use the same username and password in the local database as the TACACS+ server because the ASA prompt does not give any indication which method is being used. Be sure to configure users in the local database (see the “Adding a User Account to the Local Database” section on page 35-20) and command privilege levels (see the “Configuring Local Command Authorization” section on page 37-23).</p>

Configuring Management Access Accounting

You can send accounting messages to the TACACS+ accounting server when you enter any command other than **show** commands at the CLI. You can configure accounting when users log in, when they enter the **enable** command, or when they issue commands.

For command accounting, you can only use TACACS+ servers.

To configure management access and enable command accounting, perform the following steps:

Detailed Steps

	Command	Purpose
Step 1	<pre>aaa accounting {serial telnet ssh enable} console server-tag</pre> <p>Example: hostname(config)# aaa accounting telnet console group_1</p>	<p>Enables support for AAA accounting for administrative access. Valid server group protocols are RADIUS and TACACS+.</p>
Step 2	<pre>aaa accounting command [privilege level] server-tag</pre> <p>Example: hostname(config)# aaa accounting command privilege 15 group_1</p>	<p>Enables command accounting. Only TACACS+ servers support command accounting.</p> <p>Where privilege level is the minimum privilege level and <i>server-tag</i> is the name of the TACACS+ server group to which the ASA should send command accounting messages.</p>

Viewing the Currently Logged-In User

To view the current logged-in user, enter the following command:

```
hostname# show curpriv
```

The following is sample output from the **show curpriv** command:

```
hostname# show curpriv
Username: admin
Current privilege level: 15
Current Mode/s: P_PRIV
```

Table 37-1 describes the **show curpriv** command output.

Table 37-1 *show curpriv* Command Output Description

Field	Description
Username	Username. If you are logged in as the default user, the name is enable_1 (user EXEC) or enable_15 (privileged EXEC).

Table 37-1 *show curpriv Command Output Description (continued)*

Field	Description
Current privilege level	Levels range from 0 to 15. Unless you configure local command authorization and assign commands to intermediate privilege levels, levels 0 and 15 are the only levels that are used.
Current Mode/s	The available access modes are the following: <ul style="list-style-type: none"> • P_UNPR—User EXEC mode (levels 0 and 1) • P_PRIV—Privileged EXEC mode (levels 2 to 15) • P_CONF—Configuration mode

Recovering from a Lockout

In some circumstances, when you turn on command authorization or CLI authentication, you can be locked out of the ASA CLI. You can usually recover access by restarting the ASA. However, if you already saved your configuration, you might be locked out. [Table 37-2](#) lists the common lockout conditions and how you might recover from them.

Table 37-2 *CLI Authentication and Command Authorization Lockout Scenarios*

Feature	Lockout Condition	Description	Workaround: Single Mode	Workaround: Multiple Mode
Local CLI authentication	No users in the local database	If you have no users in the local database, you cannot log in, and you cannot add any users.	Log in and reset the passwords and aaa commands.	Session into the ASA from the switch. From the system execution space, you can change to the context and add a user.
TACACS+ command authorization TACACS+ CLI authentication RADIUS CLI authentication	Server down or unreachable and you do not have the fallback method configured	If the server is unreachable, then you cannot log in or enter any commands.	<ol style="list-style-type: none"> 1. Log in and reset the passwords and AAA commands. 2. Configure the local database as a fallback method so you do not get locked out when the server is down. 	<ol style="list-style-type: none"> 1. If the server is unreachable because the network configuration is incorrect on the ASA, session into the ASA from the switch. From the system execution space, you can change to the context and reconfigure your network settings. 2. Configure the local database as a fallback method so you do not get locked out when the server is down.

Table 37-2 CLI Authentication and Command Authorization Lockout Scenarios (continued)

Feature	Lockout Condition	Description	Workaround: Single Mode	Workaround: Multiple Mode
TACACS+ command authorization	You are logged in as a user without enough privileges or as a user that does not exist	You enable command authorization, but then find that the user cannot enter any more commands.	Fix the TACACS+ server user account. If you do not have access to the TACACS+ server and you need to configure the ASA immediately, then log into the maintenance partition and reset the passwords and aaa commands.	Session into the ASA from the switch. From the system execution space, you can change to the context and complete the configuration changes. You can also disable command authorization until you fix the TACACS+ configuration.
Local command authorization	You are logged in as a user without enough privileges	You enable command authorization, but then find that the user cannot enter any more commands.	Log in and reset the passwords and aaa commands.	Session into the ASA from the switch. From the system execution space, you can change to the context and change the user level.

Setting a Management Session Quota

An administrator can establish a maximum number of simultaneous management sessions. If the maximum is reached, no additional sessions are allowed and a syslog message is generated. To prevent a system lockout, the management session quota mechanism cannot block a console session.

To set a management session maximum, enter the following command:

Command	Purpose
<code>quota management-session <i>number</i></code>	Sets the maximum number of simultaneous ASDM, SSH, and Telnet sessions that are allowed on the ASA. The no form of this command sets the quota value to 0, which means that there is no session limit.
Example: <code>hostname(config)# quota management-session 1000</code>	

Feature History for Management Access

Table 37-3 lists each feature change and the platform release in which it was implemented.

Table 37-3 Feature History for Management Access

Feature Name	Platform Releases	Feature Information
Management Access	7.0(1)	<p>We introduced this feature.</p> <p>We introduced the following commands:</p> <p>show running-config all privilege all, show running-config privilege level, show running-config privilege command, telnet, telnet timeout, ssh, ssh timeout, , http, http server enable, asdm image disk, banner, console timeout, icmp, ipv6 icmp, management access, aaa authentication console, aaa authentication enable console, aaa authentication telnet ssh console, service-type, login, privilege, aaa authentication exec authentication-server, aaa authentication command LOCAL,aaa accounting serial telnet ssh enable console, show curpriv, aaa accounting command privilege</p>
Increased SSH security; the SSH default username is no longer supported.	8.4(2)	<p>Starting in 8.4(2), you can no longer connect to the ASA using SSH with the <code>pix</code> or <code>asa</code> username and the login password. To use SSH, you must configure AAA authentication using the aaa authentication ssh console LOCAL command (CLI) or Configuration > Device Management > Users/AAA > AAA Access > Authentication (ASDM); then define a local user by entering the username command (CLI) or choosing Configuration > Device Management > Users/AAA > User Accounts (ASDM). If you want to use a AAA server for authentication instead of the local database, we recommend also configuring local authentication as a backup method.</p>
Common Criteria certification and FIPS support for maximum number of management sessions allowed and Diffie-Hellman Key Exchange Group 14 support for SSH.	8.4(4.1)	<p>The maximum number of simultaneous ASDM, SSH, and Telnet sessions allowed was added. Support for Diffie-Hellman Key Exchange Group 14 for SSH was added.</p> <p>We introduced or modified the following commands: quota management-session, show running-config quota management-session, show quota management-session, ssh.</p>



CHAPTER 38

Configuring AAA Rules for Network Access

This chapter describes how to enable AAA (pronounced “triple A”) for network access.

For information about AAA for management access, see the [“Configuring AAA for System Administrators”](#) section on page 37-13.

This chapter includes the following sections:

- [AAA Performance](#), page 38-1
- [Licensing Requirements for AAA Rules](#), page 38-1
- [Guidelines and Limitations](#), page 38-2
- [Configuring Authentication for Network Access](#), page 38-2
- [Configuring Authorization for Network Access](#), page 38-11
- [Configuring Accounting for Network Access](#), page 38-18
- [Using MAC Addresses to Exempt Traffic from Authentication and Authorization](#), page 38-20
- [Feature History for AAA Rules](#), page 38-21

AAA Performance

The ASA uses “cut-through proxy” to significantly improve performance compared to a traditional proxy server. The performance of a traditional proxy server suffers because it analyzes every packet at the application layer of the OSI model. The ASA cut-through proxy challenges a user initially at the application layer and then authenticates with standard AAA servers or the local database. After the ASA authenticates the user, it shifts the session flow, and all traffic flows directly and quickly between the source and destination while maintaining session state information.

Licensing Requirements for AAA Rules

The following table shows the licensing requirements for this feature:

Model	License Requirement
All models	Base License.

Guidelines and Limitations

This section includes the guidelines and limitations for this feature.

Context Mode Guidelines

Supported in single and multiple context mode.

Firewall Mode Guidelines

Supported in routed and transparent firewall mode.

IPv6 Guidelines

Supports IPv6.

Configuring Authentication for Network Access

This section includes the following topics:

- [Information About Authentication, page 38-2](#)
- [Configuring Network Access Authentication, page 38-4](#)
- [Enabling Secure Authentication of Web Clients, page 38-6](#)
- [Authenticating Directly with the ASA, page 38-7](#)

Information About Authentication

The ASA lets you configure network access authentication using AAA servers. This section includes the following topics:

- [One-Time Authentication, page 38-2](#)
- [Applications Required to Receive an Authentication Challenge, page 38-2](#)
- [ASA Authentication Prompts, page 38-3](#)
- [Static PAT and HTTP, page 38-4](#)

One-Time Authentication

A user at a given IP address only needs to authenticate one time for all rules and types, until the authentication session expires. (See the **timeout uauth** command in the command reference for timeout values.) For example, if you configure the ASA to authenticate Telnet and FTP, and a user first successfully authenticates for Telnet, then as long as the authentication session exists, the user does not also have to authenticate for FTP.

Applications Required to Receive an Authentication Challenge

Although you can configure the ASA to require authentication for network access to any protocol or service, users can authenticate directly with HTTP, HTTPS, Telnet, or FTP only. A user must first authenticate with one of these services before the ASA allows other traffic requiring authentication.

The authentication ports that the ASA supports for AAA are fixed as follows:

- Port 21 for FTP
- Port 23 for Telnet
- Port 80 for HTTP
- Port 443 for HTTPS

ASA Authentication Prompts

For Telnet and FTP, the ASA generates an authentication prompt.

For HTTP, the ASA uses basic HTTP authentication by default, and provides an authentication prompt. You can optionally configure the ASA to redirect users to an internal web page where they can enter their username and password (configured with the **aaa authentication listener** command).

For HTTPS, the ASA generates a custom login screen. You can optionally configure the ASA to redirect users to an internal web page where they can enter their username and password (configured with the **aaa authentication listener** command).

Redirection is an improvement over the basic method because it provides an improved user experience when authenticating, and an identical user experience for HTTP and HTTPS in both Easy VPN and firewall modes. It also supports authenticating directly with the ASA.

You might want to continue to use basic HTTP authentication for the following reasons:

- You do not want the ASA to open listening ports.
- You use NAT on a router and you do not want to create a translation rule for the web page served by the ASA.
- Basic HTTP authentication might work better with your network.

For example non-browser applications, as when a URL is embedded in e-mail, might be more compatible with basic authentication.

After you authenticate correctly, the ASA redirects you to your original destination. If the destination server also has its own authentication, the user enters another username and password. If you use basic HTTP authentication and need to enter another username and password for the destination server, then you need to configure the **virtual http** command.



Note

If you use HTTP authentication, by default the username and password are sent from the client to the ASA in clear text; in addition, the username and password are sent on to the destination web server as well. See the [“Enabling Secure Authentication of Web Clients” section on page 38-6](#) for information to secure your credentials.

For FTP, a user has the option of entering the ASA username followed by an at sign (@) and then the FTP username (name1@name2). For the password, the user enters the ASA password followed by an at sign (@) and then the FTP password (password1@password2). For example, enter the following text:

```
name> name1@name2
password> password1@password2
```

This feature is useful when you have cascaded firewalls that require multiple logins. You can separate several names and passwords by multiple at signs (@).

Static PAT and HTTP

For HTTP authentication, the ASA checks real ports when static PAT is configured. If it detects traffic destined for real port 80, regardless of the mapped port, the ASA intercepts the HTTP connection and enforces authentication.

For example, assume that outside TCP port 889 is translated to port 80 and that any relevant access lists permit the traffic:

```
object network obj-192.168.123.10-01
  host 192.168.123.10
  nat (inside,outside) static 10.48.66.155 service tcp 80 889
```

Then when users try to access 10.48.66.155 on port 889, the ASA intercepts the traffic and enforces HTTP authentication. Users see the HTTP authentication page in their web browsers before the ASA allows HTTP connection to complete.

If the local port is different than port 80, as in the following example:

```
object network obj-192.168.123.10-02
  host 192.168.123.10
  nat (inside,outside) static 10.48.66.155 service tcp 111 889
```

Then users do not see the authentication page. Instead, the ASA sends an error message to the web browser indicating that the user must be authenticated before using the requested service.

Configuring Network Access Authentication

To configure network access authentication, perform the following steps:

	Command	Purpose
Step 1	aaa-server Example: hostname(config)# aaa-server AuthOutbound protocol tacacs+	Identifies your AAA servers. If you have already identified them, continue to the next step. For more information about identifying AAA servers, see the “Configuring AAA Server Groups” section on page 35-11.
Step 2	access-list Example: hostname(config)# access-list MAIL_AUTH extended permit tcp any any eq smtp	Creates an access list that identifies the source addresses and destination addresses of traffic you want to authenticate. For details, see Chapter 15, “Adding an Extended Access List.” The permit ACEs mark matching traffic for authentication, while deny entries exclude matching traffic from authentication. Be sure to include the destination ports for either HTTP, HTTPS, Telnet, or FTP in the access list, because the user must authenticate with one of these services before other services are allowed through the ASA.

	Command	Purpose
Step 3	<p>aaa authentication match <i>acl_name interface_name server_group</i></p> <p>Example: <pre>hostname(config)# aaa authentication match MAIL_AUTH inside AuthOutbound</pre></p>	<p>Configures authentication.</p> <p>The <i>acl_name</i> argument is the name of the access list that you created in Step 2. The <i>interface_name</i> argument is the name of the interface specified with the nameif command. The <i>server_group</i> argument is the AAA server group that you created in Step 1.</p> <p>Note You can alternatively use the aaa authentication include command (which identifies traffic within the command). However, you cannot use both methods in the same configuration. See the command reference for more information.</p>
Step 4	<p>aaa authentication listener http[s] <i>interface_name [port portnum] redirect</i></p> <p>Example: <pre>hostname(config)# aaa authentication listener http inside redirect</pre></p>	<p>(Optional) Enables the redirection method of authentication for HTTP or HTTPS connections.</p> <p>The <i>interface_name</i> argument is the interface on which you want to enable listening ports. The port portnum argument specifies the port number on which the ASA listens; the defaults are 80 (HTTP) and 443 (HTTPS).</p> <p>You can use any port number and retain the same functionality, but be sure your direct authentication users know the port number; redirected traffic is sent to the correct port number automatically, but direct authenticators must specify the port number manually.</p> <p>Enter this command separately for HTTP and for HTTPS.</p>
Step 5	<p>aaa local authentication attempts max-fail <i>number</i></p> <p>Example: <pre>hostname(config)# aaa local authentication attempts max-fail 7</pre></p>	<p>(Optional) Uses the local database for network access authentication and limits the number of consecutive failed login attempts that the ASA allows any given user account (with the exception of users with a privilege level of 15. This feature does not affect level 15 users). The <i>number</i> argument value is between 1 and 16.</p> <p>Tip To clear the lockout status of a specific user or all users, use the clear aaa local user lockout command.</p>

Examples

The following example authenticates all inside HTTP traffic and SMTP traffic:

```
hostname(config)# aaa-server AuthOutbound protocol tacacs+
hostname(config-aaa-server-group)# exit
hostname(config)# aaa-server AuthOutbound (inside) host 10.1.1.1
hostname(config-aaa-server-host)# key TACPlusUauthKey
hostname(config-aaa-server-host)# exit
hostname(config)# access-list MAIL_AUTH extended permit tcp any any eq smtp
hostname(config)# access-list MAIL_AUTH extended permit tcp any any eq www
hostname(config)# aaa authentication match MAIL_AUTH inside AuthOutbound
```

```
hostname(config)# aaa authentication listener http inside redirect
```

The following example authenticates Telnet traffic from the outside interface to a particular server (209.165.201.5):

```
hostname(config)# aaa-server AuthInbound protocol tacacs+
hostname(config-aaa-server-group)# exit
hostname(config)# aaa-server AuthInbound (inside) host 10.1.1.1
hostname(config-aaa-server-host)# key TACPlusUauthKey
hostname(config-aaa-server-host)# exit
hostname(config)# access-list TELNET_AUTH extended permit tcp any host 209.165.201.5 eq
telnet
hostname(config)# aaa authentication match TELNET_AUTH outside AuthInbound
```

For more information about authentication, see the [“Information About Authentication”](#) section on page 38-2.

Enabling Secure Authentication of Web Clients

If you use HTTP authentication, by default the username and password are sent from the client to the ASA in clear text; in addition, the username and password are sent to the destination web server as well.

The ASA provides the following methods for securing HTTP authentication:

- Enable the redirection method of authentication for HTTP—Use the **aaa authentication listener** command with the **redirect** keyword. This method prevents the authentication credentials from continuing to the destination server. See the [“ASA Authentication Prompts”](#) section on page 38-3 for more information about the redirection method compared to the basic method.
- Enable virtual HTTP—Use the **virtual http** command to authenticate separately with the ASA and with the HTTP server. Even if the HTTP server does not need a second authentication, this command achieves the effect of stripping the basic authentication credentials from the HTTP GET request. See the [“Authenticating HTTP\(S\) Connections with a Virtual Server”](#) section on page 38-8 for more information.

Enable the exchange of usernames and passwords between a web client and the ASA with HTTPS—Use the **aaa authentication secure-http-client** command to enable the exchange of usernames and passwords between a web client and the ASA with HTTPS. This is the only method that protects credentials between the client and the ASA, as well as between the ASA and the destination server. You can use this method alone, or in conjunction with either of the other methods so you can maximize your security.

After enabling this feature, when a user requires authentication when using HTTP, the ASA redirects the HTTP user to an HTTPS prompt. After you authenticate correctly, the ASA redirects you to the original HTTP URL.

Secured, web-client authentication has the following limitations:

- A maximum of 16 concurrent HTTPS authentication sessions are allowed. If all 16 HTTPS authentication processes are running, a new connection requiring authentication will not succeed.
- When **uauth timeout 0** is configured (the **uauth timeout** is set to 0), HTTPS authentication might not work. If a browser initiates multiple TCP connections to load a web page after HTTPS authentication, the first connection is let through, but the subsequent connections trigger authentication. As a result, users are continuously presented with an authentication page, even if the correct username and password are entered each time. To work around this, set the **uauth**

timeout to 1 second with the **timeout uauth 0:0:1** command. However, this workaround opens a 1-second window of opportunity that might allow unauthenticated users to go through the firewall if they are coming from the same source IP address.

Because HTTPS authentication occurs on the SSL port 443, users must not configure an **access-list** command statement to block traffic from the HTTP client to the HTTP server on port 443. Furthermore, if static PAT is configured for web traffic on port 80, it must also be configured for the SSL port.

- In the following example, the first set of commands configures static PAT for web traffic, and the second set of commands must be added to support the HTTPS authentication configuration:

```
object network obj-10.130.16.10-01
  host 10.130.16.10
  nat (inside,outside) static 10.132.16.200 service tcp 80 80
object network obj-10.130.16.10-02
  host 10.130.16.10
  nat (inside,outside) static 10.132.16.200 service tcp 443 443
```

Authenticating Directly with the ASA

If you do not want to allow HTTP, HTTPS, Telnet, or FTP through the ASA but want to authenticate other types of traffic, you can authenticate with the ASA directly using HTTP, HTTPS, or Telnet.

This section includes the following topics:

- [Authenticating HTTP\(S\) Connections with a Virtual Server, page 38-8](#)
- [Authenticating Telnet Connections with a Virtual Server, page 38-9](#)

Authenticating HTTP(S) Connections with a Virtual Server

If you enabled the redirection method of HTTP and HTTPS authentication in the “[Configuring Network Access Authentication](#)” section on page 38-4, then you have also automatically enabled direct authentication.

When you use HTTP authentication on the ASA (see the “[Configuring Network Access Authentication](#)” section on page 38-4), the ASA uses basic HTTP authentication by default.

To continue to use basic HTTP authentication, and to enable direct authentication for HTTP and HTTPS, enter the following command:

Command	Purpose
<pre>aaa authentication listener http[s] interface_name [port portnum] redirect</pre> <p>Example:</p> <pre>hostname(config)# aaa authentication listener http inside redirect</pre>	<p>(Optional) Enables the redirection method of authentication for HTTP or HTTPS connections.</p> <p>The <i>interface_name</i> argument is the interface on which you want to enable listening ports. The port portnum argument specifies the port number on which the ASA listens; the defaults are 80 (HTTP) and 443 (HTTPS).</p> <p>You can use any port number and retain the same functionality, but be sure your direct authentication users know the port number; redirected traffic is sent to the correct port number automatically, but direct authenticators must specify the port number manually.</p> <p>Enter this command separately for HTTP and for HTTPS.</p>

If the destination HTTP server requires authentication in addition to the ASA, then to authenticate separately with the ASA (via a AAA server) and with the HTTP server, enter the following command:

Command	Purpose
<p>virtual http</p> <p>Example: hostname(config)# virtual http</p>	<p>Redirects all HTTP connections that require AAA authentication to the virtual HTTP server on the ASA. The ASA prompts for the AAA server username and password. After the AAA server authenticates the user, the ASA redirects the HTTP connection back to the original server, but it does not include the AAA server username and password. Because the username and password are not included in the HTTP packet, the HTTP server prompts the user separately for the HTTP server username and password.</p> <p>For inbound users (from lower security to higher security), you must also include the virtual HTTP address as a destination interface in the access list applied to the source interface. In addition, you must add a static NAT command for the virtual HTTP IP address, even if NAT is not required. An identity NAT command is typically used (where you translate the address to itself).</p> <p>For outbound users, there is an explicit permit for traffic, but if you apply an access list to an inside interface, be sure to allow access to the virtual HTTP address. A static statement is not required.</p> <p>Note Do not set the timeout uauth command duration to 0 seconds when using the virtual http command, because this setting prevents HTTP connections to the actual web server.</p> <p>You can authenticate directly with the ASA at the following URLs when you enable AAA for the interface:</p> <pre>http://interface_ip[:port]/netaccess/connstatus.html https://interface_ip[:port]/netaccess/connstatus.html</pre> <p>Without virtual HTTP, the same username and password that you used to authenticate with the ASA are sent to the HTTP server; you are not prompted separately for the HTTP server username and password. Assuming the username and password are not the same for the AAA and HTTP servers, then the HTTP authentication fails.</p>

Authenticating Telnet Connections with a Virtual Server

Although you can configure network access authentication for any protocol or service (see the **aaa authentication match** or **aaa authentication include** command), you can authenticate directly with HTTP, Telnet, or FTP only. A user must first authenticate with one of these services before other traffic that requires authentication is allowed through. If you do not want to allow HTTP, Telnet, or FTP traffic through the ASA, but want to authenticate other types of traffic, you can configure virtual Telnet; the user Telnets to a given IP address configured on the ASA, and the ASA issues a Telnet prompt.

To configure a virtual Telnet server, enter the following command:

Command	Purpose
<p><code>virtual telnet ip_address</code></p> <p>Example:</p> <pre>hostname(config)# virtual telnet 209.165.202.129</pre>	<p>Configures a virtual Telnet server.</p> <p>The <i>ip_address</i> argument sets the IP address for the virtual Telnet server. Make sure this address is an unused address that is routed to the ASA.</p> <p>You must configure authentication for Telnet access to the virtual Telnet address as well as the other services that you want to authenticate using the authentication match or aaa authentication include command.</p> <p>When an unauthenticated user connects to the virtual Telnet IP address, the user is challenged for a username and password, and then authenticated by the AAA server. Once authenticated, the user sees the message “Authentication Successful.” Then, the user can successfully access other services that require authentication.</p> <p>For inbound users (from lower security to higher security), you must also include the virtual Telnet address as a destination interface in the access list applied to the source interface. In addition, you must add a static NAT command for the virtual Telnet IP address, even if NAT is not required. An identity NAT command is typically used (where you translate the address to itself).</p> <p>For outbound users, there is an explicit permit for traffic, but if you apply an access list to an inside interface, be sure to allow access to the virtual Telnet address. A static statement is not required.</p> <p>To log out from the ASA, reconnect to the virtual Telnet IP address; you are then prompted to log out.</p>

Examples

The following example shows how to enable virtual Telnet together with AAA authentication for other services:

```
hostname(config)# virtual telnet 209.165.202.129
hostname(config)# access-list ACL-IN extended permit tcp any host 209.165.200.225 eq smtp
hostname(config)# access-list ACL-IN remark This is the SMTP server on the inside
hostname(config)# access-list ACL-IN extended permit tcp any host 209.165.202.129 eq
telnet
hostname(config)# access-list ACL-IN remark This is the virtual Telnet address
hostname(config)# access-group ACL-IN in interface outside
hostname(config)# network object obj-209.165.202.129-01
hostname(config-network-object)# host 209.165.202.129
hostname(config-network-object)# nat (inside,outside) static 209.165.202.129
hostname(config)# access-list AUTH extended permit tcp any host 209.165.200.225 eq smtp
hostname(config)# access-list AUTH remark This is the SMTP server on the inside
hostname(config)# access-list AUTH extended permit tcp any host 209.165.202.129 eq telnet
hostname(config)# access-list AUTH remark This is the virtual Telnet address
hostname(config)# aaa authentication match AUTH outside tacacs+
```

Configuring Authorization for Network Access

After a user authenticates for a given connection, the ASA can use authorization to further control traffic from the user.

This section includes the following topics:

- [Configuring TACACS+ Authorization, page 38-11](#)
- [Configuring RADIUS Authorization, page 38-14](#)

Configuring TACACS+ Authorization

You can configure the ASA to perform network access authorization with TACACS+. You identify the traffic to be authorized by specifying access lists that authorization rules must match. Alternatively, you can identify the traffic directly in authorization rules themselves.



Using access lists to identify traffic to be authorized can greatly reduced the number of authorization commands that you must enter. This is because each authorization rule that you enter can specify only one source and destination subnet and service, whereas an access list can include many entries.

Authentication and authorization statements are independent; however, any unauthenticated traffic matched by an authorization rule will be denied. For authorization to succeed:

1. A user must first authenticate with the ASA.

Because a user at a given IP address only needs to authenticate one time for all rules and types, if the authentication session has not expired, authorization can occur even if the traffic is not matched by an authentication rule.

2. After a user authenticates, the ASA checks the authorization rules for matching traffic.
3. If the traffic matches the authorization rule, the ASA sends the username to the TACACS+ server.
4. The TACACS+ server responds to the ASA with a permit or a deny for that traffic, based on the user profile.
5. The ASA enforces the authorization rule in the response.

See the documentation for your TACACS+ server for information about configuring network access authorizations for a user.

To configure TACACS+ authorization, perform the following steps:

	Command	Purpose
Step 1	<p>aaa-server</p> <p>Example: <pre>hostname(config)# aaa-server AuthOutbound protocol tacacs+</pre></p>	<p>Identifies your AAA servers. If you have already identified them, continue to the next step. For more information about identifying AAA servers, see the “Configuring AAA Server Groups” section on page 35-11.</p>
Step 2	<p>access-list</p> <p>Example: <pre>hostname(config)# access-list MAIL_AUTH extended permit tcp any any eq smtp</pre></p>	<p>Creates an access list that identifies the source addresses and destination addresses of traffic you want to authenticate. For details, see Chapter 15, “Adding an Extended Access List.”</p> <p>The permit ACEs mark matching traffic for authentication, while deny entries exclude matching traffic from authentication. Be sure to include the destination ports for either HTTP, HTTPS, Telnet, or FTP in the access list, because the user must authenticate with one of these services before other services are allowed through the ASA.</p>
Step 3	<p>aaa authentication match <i>acl_name interface_name server_group</i></p> <p>Example: <pre>hostname(config)# aaa authentication match MAIL_AUTH inside AuthOutbound</pre></p>	<p>Configures authentication. The <i>acl_name</i> argument is the name of the access list that you created in Step 2., The <i>interface_name</i> argument is the name of the interface specified with the nameif command, and the <i>server_group</i> argument is the AAA server group that you created in Step 1.</p> <p>Note You can alternatively use the aaa authentication include command (which identifies traffic within the command). However, you cannot use both methods in the same configuration. See the command reference for more information.</p>
Step 4	<p>aaa authentication listener http[s] <i>interface_name</i> [port <i>portnum</i>] redirect</p> <p>Example: <pre>hostname(config)# aaa authentication listener http inside redirect</pre></p>	<p>(Optional) Enables the redirection method of authentication for HTTP or HTTPS connections.</p> <p>The <i>interface_name</i> argument is the interface on which you want to enable listening ports. The port portnum argument specifies the port number on which the ASA listens; the defaults are 80 (HTTP) and 443 (HTTPS).</p> <p>You can use any port number and retain the same functionality, but be sure your direct authentication users know the port number; redirected traffic is sent to the correct port number automatically, but direct authenticators must specify the port number manually.</p> <p>Enter this command separately for HTTP and for HTTPS.</p>

	Command	Purpose
Step 5	<p>aaa local authentication attempts max-fail <i>number</i></p> <p>Example: <pre>hostname(config)# aaa local authentication attempts max-fail 7</pre></p>	<p>(Optional) Uses the local database for network access authentication and limits the number of consecutive failed login attempts that the ASA allows any given user account (with the exception of users with a privilege level of 15. This feature does not affect level 15 users). The <i>number</i> argument value is between 1 and 16.</p> <p>Tip To clear the lockout status of a specific user or all users, use the clear aaa local user lockout command.</p>
Step 6	<p>access-list</p> <p>Example: <pre>hostname(config)# access-list TELNET_AUTH extended permit tcp any any eq telnet</pre></p>	<p>Create an access list that identifies the source addresses and destination addresses of traffic that you want to authorize. For instructions, see Chapter 15, “Adding an Extended Access List.”</p> <p>The permit ACEs mark matching traffic for authorization, while deny entries exclude matching traffic from authorization. The access list that you use for authorization matching should include rules that are equal to or a subset of the rules in the access list used for authentication matching.</p> <p>Note If you have configured authentication and want to authorize all the traffic being authenticated, you can use the same access list that you created for use with the aaa authentication match command.</p>
Step 7	<p>aaa authorization match <i>acl_name interface_name server_group</i></p> <p>Example: <pre>hostname(config)# aaa authentication match TELNET_AUTH inside AuthOutbound</pre></p>	<p>Enables authorization.</p> <p>The <i>acl_name</i> argument is the name of the access list you created in Step 6, the <i>interface_name</i> argument is the name of the interface as specified with the nameif command or by default, and the <i>server_group</i> argument is the AAA server group that you created when you enabled authentication.</p> <p>Note Alternatively, you can use the aaa authorization include command (which identifies traffic within the command) but you cannot use both methods in the same configuration. See the command reference for more information.</p>

Examples

The following example authenticates and authorizes inside Telnet traffic. Telnet traffic to servers other than 209.165.201.5 can be authenticated alone, but traffic to 209.165.201.5 requires authorization.

```
hostname(config)# access-list TELNET_AUTH extended permit tcp any any eq telnet
hostname(config)# access-list SERVER_AUTH extended permit tcp any host 209.165.201.5 eq telnet
hostname(config)# aaa-server AuthOutbound protocol tacacs+
hostname(config-aaa-server-group)# exit
hostname(config)# aaa-server AuthOutbound (inside) host 10.1.1.1
```

```
hostname(config-aaa-server-host)# key TACPlusUauthKey
hostname(config-aaa-server-host)# exit
hostname(config)# aaa authentication match TELNET_AUTH inside AuthOutbound
hostname(config)# aaa authorization match SERVER_AUTH inside AuthOutbound
```

Configuring RADIUS Authorization

When authentication succeeds, the RADIUS protocol returns user authorizations in the access-accept message sent by a RADIUS server. For more information about configuring authentication, see the “[Configuring Network Access Authentication](#)” section on page 38-4.

When you configure the ASA to authenticate users for network access, you are also implicitly enabling RADIUS authorizations; therefore, this section contains no information about configuring RADIUS authorization on the ASA. It does provide information about how the ASA handles access list information received from RADIUS servers.

You can configure a RADIUS server to download an access list to the ASA or an access list name at the time of authentication. The user is authorized to do only what is permitted in the user-specific access list.



Note

If you have used the **access-group** command to apply access lists to interfaces, be aware of the following effects of the **per-user-override** keyword on authorization by user-specific access lists:

- Without the **per-user-override** keyword, traffic for a user session must be permitted by both the interface access list and the user-specific access list.
- With the **per-user-override** keyword, the user-specific access list determines what is permitted.

For more information, see the **access-group** command entry in the command reference.

This section includes the following topics:

- [Configuring a RADIUS Server to Send Downloadable Access Control Lists, page 38-14](#)
- [Configuring a RADIUS Server to Download Per-User Access Control List Names, page 38-18](#)

Configuring a RADIUS Server to Send Downloadable Access Control Lists

This section describes how to configure Cisco Secure ACS or a third-party RADIUS server and includes the following topics:

- [About the Downloadable Access List Feature and Cisco Secure ACS, page 38-14](#)
- [Configuring Cisco Secure ACS for Downloadable Access Lists, page 38-16](#)
- [Configuring Any RADIUS Server for Downloadable Access Lists, page 38-17](#)
- [Converting Wildcard Netmask Expressions in Downloadable Access Lists, page 38-18](#)

About the Downloadable Access List Feature and Cisco Secure ACS

Downloadable access lists is the most scalable means of using Cisco Secure ACS to provide the appropriate access lists for each user. It provides the following capabilities:

- Unlimited access list size—Downloadable access lists are sent using as many RADIUS packets as required to transport the full access list from Cisco Secure ACS to the ASA.

- Simplified and centralized management of access lists—Downloadable access lists enable you to write a set of access lists once and apply it to many user or group profiles and distribute it to many ASAs.

This approach is most useful when you have very large access list sets that you want to apply to more than one Cisco Secure ACS user or group; however, its ability to simplify Cisco Secure ACS user and group management makes it useful for access lists of any size.

The ASA receives downloadable access lists from Cisco Secure ACS using the following process:

1. The ASA sends a RADIUS authentication request packet for the user session.
2. If Cisco Secure ACS successfully authenticates the user, Cisco Secure ACS returns a RADIUS access-accept message that includes the internal name of the applicable downloadable access list. The Cisco IOS `cisco-av-pair` RADIUS VSA (vendor 9, attribute 1) includes the following attribute-value pair to identify the downloadable access list set:

```
ACS: CiscoSecure-Defined-ACL=acl-set-name
```

where *acl-set-name* is the internal name of the downloadable access list, which is a combination of the name assigned to the access list by the Cisco Secure ACS administrator and the date and time that the access list was last modified.

3. The ASA examines the name of the downloadable access list and determines if it has previously received the named downloadable access list.
 - If the ASA has previously received the named downloadable access list, communication with Cisco Secure ACS is complete and the ASA applies the access list to the user session. Because the name of the downloadable access list includes the date and time that it was last modified, matching the name sent by Cisco Secure ACS to the name of an access list previously downloaded means that the ASA has the most recent version of the downloadable access list.
 - If the ASA has not previously received the named downloadable access list, it may have an out-of-date version of the access list or it may not have downloaded any version of the access list. In either case, the ASA issues a RADIUS authentication request using the downloadable access list name as the username in the RADIUS request and a null password attribute. In a `cisco-av-pair` RADIUS VSA, the request also includes the following attribute-value pairs:

```
AAA:service=ip-admission
AAA:event=acl-download
```

In addition, the ASA signs the request with the Message-Authenticator attribute (IETF RADIUS attribute 80).

4. After receipt of a RADIUS authentication request that has a username attribute that includes the name of a downloadable access list, Cisco Secure ACS authenticates the request by checking the Message-Authenticator attribute. If the Message-Authenticator attribute is missing or incorrect, Cisco Secure ACS ignores the request. The presence of the Message-Authenticator attribute prevents malicious use of a downloadable access list name to gain unauthorized network access. The Message-Authenticator attribute and its use are defined in RFC 2869, RADIUS Extensions, available at <http://www.ietf.org>.
5. If the access list required is less than approximately 4 KB in length, Cisco Secure ACS responds with an access-accept message that includes the access list. The largest access list that can fit in a single access-accept message is slightly less than 4 KB, because part of the message must be other required attributes.

Cisco Secure ACS sends the downloadable access list in a `cisco-av-pair` RADIUS VSA. The access list is formatted as a series of attribute-value pairs that each include an ACE and are numbered serially:

```
ip:inac1#1=ACE-1
```

```
ip:inacl#2=ACE-2
.
.
ip:inacl#n=ACE-n
```

The following example is of an attribute-value pair:

```
ip:inacl#1=permit tcp 10.1.0.0 255.0.0.0 10.0.0.0 255.0.0.0
```

- If the access list required is more than approximately 4 KB in length, Cisco Secure ACS responds with an access-challenge message that includes a portion of the access list, formatted as described previously, and a State attribute (IETF RADIUS attribute 24), which includes control data used by Cisco Secure ACS to track the progress of the download. Cisco Secure ACS fits as many complete attribute-value pairs into the cisco-av-pair RADIUS VSA as it can without exceeding the maximum RADIUS message size.

The ASA stores the portion of the access list received and responds with another access-request message that includes the same attributes as the first request for the downloadable access list, plus a copy of the State attribute received in the access-challenge message.

This process repeats until Cisco Secure ACS sends the last of the access list in an access-accept message.

Configuring Cisco Secure ACS for Downloadable Access Lists

You can configure downloadable access lists on Cisco Secure ACS as a shared profile component and then assign the access list to a group or to an individual user.

The access list definition consists of one or more ASA commands that are similar to the extended **access-list** command (see command reference), except without the following prefix:

```
access-list acl_name extended
```

The following example is a downloadable access list definition on Cisco Secure ACS version 3.3:

```
+-----+
| Shared profile Components
|
|     Downloadable IP ACLs Content
|
| Name:    acs_ten_acl
|
|     ACL Definitions
|
| permit tcp any host 10.0.0.254
| permit udp any host 10.0.0.254
| permit icmp any host 10.0.0.254
| permit tcp any host 10.0.0.253
| permit udp any host 10.0.0.253
| permit icmp any host 10.0.0.253
| permit tcp any host 10.0.0.252
| permit udp any host 10.0.0.252
| permit icmp any host 10.0.0.252
| permit ip any any
+-----+
```

For more information about creating downloadable access lists and associating them with users, see the user guide for your version of Cisco Secure ACS.

On the ASA, the downloaded access list has the following name:

```
#ACSACL#-ip-acl_name-number
```

The *acl_name* argument is the name that is defined on Cisco Secure ACS (*acs_ten_acl* in the preceding example), and *number* is a unique version ID generated by Cisco Secure ACS.

The downloaded access list on the ASA consists of the following lines:

```
access-list #ACSACL#-ip-asa-acs_ten_acl-3b5385f7 permit tcp any host 10.0.0.254
access-list #ACSACL#-ip-asa-acs_ten_acl-3b5385f7 permit udp any host 10.0.0.254
access-list #ACSACL#-ip-asa-acs_ten_acl-3b5385f7 permit icmp any host 10.0.0.254
access-list #ACSACL#-ip-asa-acs_ten_acl-3b5385f7 permit tcp any host 10.0.0.253
access-list #ACSACL#-ip-asa-acs_ten_acl-3b5385f7 permit udp any host 10.0.0.253
access-list #ACSACL#-ip-asa-acs_ten_acl-3b5385f7 permit icmp any host 10.0.0.253
access-list #ACSACL#-ip-asa-acs_ten_acl-3b5385f7 permit tcp any host 10.0.0.252
access-list #ACSACL#-ip-asa-acs_ten_acl-3b5385f7 permit udp any host 10.0.0.252
access-list #ACSACL#-ip-asa-acs_ten_acl-3b5385f7 permit icmp any host 10.0.0.252
access-list #ACSACL#-ip-asa-acs_ten_acl-3b5385f7 permit ip any any
```

Configuring Any RADIUS Server for Downloadable Access Lists

You can configure any RADIUS server that supports Cisco IOS RADIUS VSAs to send user-specific access lists to the ASA in a Cisco IOS RADIUS cisco-av-pair VSA (vendor 9, attribute 1).

In the cisco-av-pair VSA, configure one or more ACEs that are similar to the **access-list extended** command (see command reference), except that you replace the following command prefix:

```
access-list acl_name extended
```

with the following text:

```
ip:inacl#nnn=
```

The *nnn* argument is a number in the range from 0 to 999999999 that identifies the order of the command statement to be configured on the ASA. If this parameter is omitted, the sequence value is 0, and the order of the ACEs inside the cisco-av-pair RADIUS VSA is used.

The following example is an access list definition as it should be configured for a cisco-av-pair VSA on a RADIUS server:

```
ip:inacl#1=permit tcp 10.1.0.0 255.0.0.0 10.0.0.0 255.0.0.0
ip:inacl#99=deny tcp any any
ip:inacl#2=permit udp 10.1.0.0 255.0.0.0 10.0.0.0 255.0.0.0
ip:inacl#100=deny udp any any
ip:inacl#3=permit icmp 10.1.0.0 255.0.0.0 10.0.0.0 255.0.0.0
```

For information about making unique per user the access lists that are sent in the cisco-av-pair attribute, see the documentation for your RADIUS server.

On the ASA, the downloaded access list name has the following format:

```
AAA-user-username
```

The *username* argument is the name of the user that is being authenticated.

The downloaded access list on the ASA consists of the following lines. Notice the order based on the numbers identified on the RADIUS server.

```
access-list AAA-user-bcham34-79AD4A08 permit tcp 10.1.0.0 255.0.0.0 10.0.0.0 255.0.0.0
access-list AAA-user-bcham34-79AD4A08 permit udp 10.1.0.0 255.0.0.0 10.0.0.0 255.0.0.0
access-list AAA-user-bcham34-79AD4A08 permit icmp 10.1.0.0 255.0.0.0 10.0.0.0 255.0.0.0
access-list AAA-user-bcham34-79AD4A08 deny tcp any any
access-list AAA-user-bcham34-79AD4A08 deny udp any any
```

Downloaded access lists have two spaces between the word “access-list” and the name. These spaces serve to differentiate a downloaded access list from a local access list. In this example, “79AD4A08” is a hash value generated by the ASA to help determine when access list definitions have changed on the RADIUS server.

Converting Wildcard Netmask Expressions in Downloadable Access Lists

If a RADIUS server provides downloadable access lists to Cisco VPN 3000 series concentrators as well as to the ASA, you may need the ASA to convert wildcard netmask expressions to standard netmask expressions. This is because Cisco VPN 3000 series concentrators support wildcard netmask expressions, but the ASA only supports standard netmask expressions. Configuring the ASA to convert wildcard netmask expressions helps minimize the effects of these differences on how you configure downloadable access lists on your RADIUS servers. Translation of wildcard netmask expressions means that downloadable access lists written for Cisco VPN 3000 series concentrators can be used by the ASA without altering the configuration of the downloadable access lists on the RADIUS server.

You configure access list netmask conversion on a per-server basis using the **acl-netmask-convert** command, available in the `aaa-server` configuration mode. For more information about configuring a RADIUS server, see the “[Configuring AAA Server Groups](#)” section on page 35-11. For more information about the **acl-netmask-convert** command, see the command reference.

Configuring a RADIUS Server to Download Per-User Access Control List Names

To download a name for an access list that you already created on the ASA from the RADIUS server when a user authenticates, configure the IETF RADIUS filter-id attribute (attribute number 11) as follows:

```
filter-id=acl_name
```

**Note**

In Cisco Secure ACS, the values for filter-id attributes are specified in boxes in the HTML interface, omitting **filter-id=** and entering only *acl_name*.

For information about making the filter-id attribute value unique per user, see the documentation for your RADIUS server.

To create an access list on the ASA, see [Chapter 15, “Adding an Extended Access List.”](#)

Configuring Accounting for Network Access

The ASA can send accounting information to a RADIUS or TACACS+ server about any TCP or UDP traffic that passes through the ASA. If that traffic is also authenticated, then the AAA server can maintain accounting information by username. If the traffic is not authenticated, the AAA server can maintain accounting information by IP address. Accounting information includes session start and stop times, username, the number of bytes that pass through the ASA for the session, the service used, and the duration of each session.

To configure accounting, perform the following steps:

	Command	Purpose
Step 1	<p>access-list</p> <p>Example: hostname(config)# access-list TELNET_AUTH extended permit tcp any any eq telnet</p>	<p>If you want the ASA to provide accounting data per user, you must enable authentication. For more information, see the “Configuring Network Access Authentication” section on page 38-4. If you want the ASA to provide accounting data per IP address, enabling authentication is not necessary.</p> <p>Creates an access list that identifies the source addresses and destination addresses of traffic for which you want accounting data. For instructions, see Chapter 15, “Adding an Extended Access List.”</p> <p>The permit ACEs mark matching traffic for accounting, while deny entries exclude matching traffic from accounting.</p> <p>Note If you have configured authentication and want accounting data for all the traffic being authenticated, you can use the same access list that you created for use with the aaa authentication match command.</p>
Step 2	<p>aaa accounting match <i>acl_name interface_name server_group</i></p> <p>Example: hostname(config)# aaa accounting match SERVER_AUTH inside AuthOutbound</p>	<p>Enables accounting.</p> <p>The <i>acl_name</i> argument is the access list name set in the access-list command.</p> <p>The <i>interface_name</i> argument is the interface name set in the nameif command.</p> <p>The <i>server_group</i> argument is the server group name set in the aaa-server command.</p> <p>Note Alternatively, you can use the aaa accounting include command (which identifies traffic within the command), but you cannot use both methods in the same configuration. See the command reference for more information.</p>

Examples

The following example authenticates, authorizes, and accounts for inside Telnet traffic. Telnet traffic to servers other than 209.165.201.5 can be authenticated alone, but traffic to 209.165.201.5 requires authorization and accounting.

```
hostname(config)# aaa-server AuthOutbound protocol tacacs+
hostname(config-aaa-server-group)# exit
hostname(config)# aaa-server AuthOutbound (inside) host 10.1.1.1
hostname(config-aaa-server-host)# key TACPlusUauthKey
hostname(config-aaa-server-host)# exit
hostname(config)# access-list TELNET_AUTH extended permit tcp any any eq telnet
hostname(config)# access-list SERVER_AUTH extended permit tcp any host 209.165.201.5 eq telnet
hostname(config)# aaa authentication match TELNET_AUTH inside AuthOutbound
hostname(config)# aaa authorization match SERVER_AUTH inside AuthOutbound
hostname(config)# aaa accounting match SERVER_AUTH inside AuthOutbound
```

Using MAC Addresses to Exempt Traffic from Authentication and Authorization

The ASA can exempt from authentication and authorization any traffic from specific MAC addresses. For example, if the ASA authenticates TCP traffic originating on a particular network, but you want to allow unauthenticated TCP connections from a specific server, you would use a MAC exempt rule to exempt from authentication and authorization any traffic from the server specified by the rule.

This feature is particularly useful to exempt devices such as IP phones that cannot respond to authentication prompts.

To use MAC addresses to exempt traffic from authentication and authorization, perform the following steps:

	Command	Purpose
Step 1	<p>mac-list <i>id</i> {deny permit} <i>mac macmask</i></p> <p>Example: <pre>hostname(config)# mac-list abc permit 00a0.c95d.0282 ffff.ffff.ffff</pre></p>	<p>Configures a MAC list.</p> <p>The <i>id</i> argument is the hexadecimal number that you assign to the MAC list. To group a set of MAC addresses, enter the mac-list command as many times as needed with the same ID value. Because you can only use one MAC list for AAA exemption, be sure that your MAC list includes all the MAC addresses that you want to exempt. You can create multiple MAC lists, but you can only use one at a time.</p> <p>The order of entries matters, because the packet uses the first entry it matches, instead of a best match scenario. If you have a permit entry, and you want to deny an address that is allowed by the permit entry, be sure to enter the deny entry before the permit entry.</p> <p>The <i>mac</i> argument specifies the source MAC address in 12-digit hexadecimal form; that is, <i>nnnn.nnnn.nnnn</i>.</p> <p>The <i>macmask</i> argument specifies the portion of the MAC address that should be used for matching. For example, <i>ffff.ffff.ffff</i> matches the MAC address exactly. <i>ffff.ffff.0000</i> matches only the first 8 digits.</p>
Step 2	<p>aaa mac-exempt match <i>id</i></p> <p>Example: <pre>hostname(config)# aaa mac-exempt match 1</pre></p>	<p>Exempts traffic for the MAC addresses specified in a particular MAC list.</p> <p>The <i>id</i> argument is the string identifying the MAC list that includes the MAC addresses whose traffic is to be exempt from authentication and authorization.</p> <p>You can only enter one instance of the aaa mac-exempt match command.</p>

Examples

The following example bypasses authentication for a single MAC address:

```
hostname(config)# mac-list abc permit 00a0.c95d.0282 ffff.ffff.ffff
hostname(config)# aaa mac-exempt match abc
```

The following example bypasses authentication for all Cisco IP Phones, which have the hardware ID 0003.E3:

```
hostname(config)# mac-list acd permit 0003.E300.0000 FFFF.FF00.0000
hostname(config)# aaa mac-exempt match acd
```

The following example bypasses authentication for a group of MAC addresses except for 00a0.c95d.02b2. Enter the **deny** statement before the **permit** statement, because 00a0.c95d.02b2 matches the **permit** statement as well, and if it is first, the **deny** statement will never be matched.

```
hostname(config)# mac-list 1 deny 00a0.c95d.0282 ffff.ffff.ffff
hostname(config)# mac-list 1 permit 00a0.c95d.0000 ffff.ffff.0000
hostname(config)# aaa mac-exempt match 1
```

Feature History for AAA Rules

Table 38-1 lists each feature change and the platform release in which it was implemented.

Table 38-1 Feature History for AAA Rules

Feature Name	Platform Releases	Feature Information
AAA Rules	7.0(1)	<p>AAA Rules describe how to enable AAA for network access.</p> <p>We introduced the following commands:</p> <p>aaa authentication match, aaa authentication include exclude, aaa authentication listener http[s], aaa local authentication attempts max-fail, virtual http, virtual telnet, aaa authentication secure-http-client, aaa authorization match, aaa accounting match, aaa mac-exempt match.</p>



CHAPTER 39

Configuring Filtering Services

This chapter describes how to use filtering services to provide greater control over traffic passing through the ASA and includes the following sections:

- [Information About Web Traffic Filtering, page 39-1](#)
- [Configuring ActiveX Filtering, page 39-2](#)
- [Configuring Java Applet Filtering, page 39-4](#)
- [Filtering URLs and FTP Requests with an External Server, page 39-6](#)
- [Monitoring Filtering Statistics, page 39-15](#)

Information About Web Traffic Filtering

You can use web traffic filtering in two distinct ways:

- Filtering ActiveX objects or Java applets
- Filtering with an external filtering server

Instead of blocking access altogether, you can remove specific undesirable objects from web traffic, such as ActiveX objects or Java applets, that may pose a security threat in certain situations.

You can use web traffic filtering to direct specific traffic to an external filtering server, such as Secure Computing SmartFilter (formerly N2H2) or the Websense filtering server. You can enable long URL, HTTPS, and FTP filtering using either Websense or Secure Computing SmartFilter for web traffic filtering. Filtering servers can block traffic to specific sites or types of sites, as specified by the security policy.



Note

URL caching will only work if the version of the URL server software from the URL server vendor supports it.

Because web traffic filtering is CPU-intensive, using an external filtering server ensures that the throughput of other traffic is not affected. However, depending on the speed of your network and the capacity of your web traffic filtering server, the time required for the initial connection may be noticeably slower when filtering traffic with an external filtering server.

Configuring ActiveX Filtering

This section includes the following topics:

- [Information About ActiveX Filtering, page 39-2](#)
- [Licensing Requirements for ActiveX Filtering, page 39-2](#)
- [Guidelines and Limitations for ActiveX Filtering, page 39-3](#)
- [Configuring ActiveX Filtering, page 39-3](#)
- [Configuration Examples for ActiveX Filtering, page 39-3](#)
- [Feature History for ActiveX Filtering, page 39-4](#)

Information About ActiveX Filtering

ActiveX objects may pose security risks because they can contain code intended to attack hosts and servers on a protected network. You can disable ActiveX objects with ActiveX filtering.

ActiveX controls, formerly known as OLE or OCX controls, are components that you can insert in a web page or another application. These controls include custom forms, calendars, or any of the extensive third-party forms for gathering or displaying information. As a technology, ActiveX creates many potential problems for network clients including causing workstations to fail, introducing network security problems, or being used to attack servers.

The **filteractivex** command blocks the HTML **object** commands by commenting them out within the HTML web page. ActiveX filtering of HTML files is performed by selectively replacing the `<APPLET>` and `</APPLET>`, and `<OBJECT CLASSID>` and `</OBJECT>` tags with comments. Filtering of nested tags is supported by converting top-level tags to comments.



Caution

The **filteractivex** command also blocks any Java applets, image files, or multimedia objects that are embedded in object tags.

If the `<object>` or `</object>` HTML tags split across network packets or if the code in the tags is longer than the number of bytes in the MTU, the ASA cannot block the tag.

ActiveX blocking does not occur when users access an IP address referenced by the **alias** command or for clientless SSL VPN traffic.

Licensing Requirements for ActiveX Filtering

The following table shows the licensing requirements for this feature:

Model	License Requirement
All models	Base License.

Guidelines and Limitations for ActiveX Filtering

This section includes the guidelines and limitations for this feature.

Context Mode Guidelines

Supported in single and multiple context mode.

Firewall Mode Guidelines

Supported in routed and transparent firewall mode.

IPv6 Guidelines

Does not support IPv6.

Configuring ActiveX Filtering

To remove ActiveX objects in HTTP traffic that is passing through the ASA, enter the following command:

Command	Purpose
<pre>filter activex port[-port] local_ip local_mask foreign_ip foreign_mask</pre> <p>Example: hostname# filter activex 80 0 0 0 0</p>	<p>Removes ActiveX objects. To use this command, replace <i>port[-port]</i> with the TCP port to which filtering is applied. Typically, this is port 80, but other values are accepted. The http or url literal can be used for port 80. You can specify a range of ports by using a hyphen between the starting port number and the ending port number. The local IP address and mask identify one or more internal hosts that are the source of the traffic to be filtered. The foreign address and mask specify the external destination of the traffic to be filtered.</p>

Configuration Examples for ActiveX Filtering

You can set either address to **0.0.0.0** (or in shortened form, **0**) to specify all hosts. You can use **0.0.0.0** for either mask (or in shortened form, **0**) to specify all masks. This command specifies that the ActiveX object blocking applies to HTTP traffic on port 80 from any local host and for connections to any foreign host.

The following example shows how to configure ActiveX filtering to block all outbound connections:

```
hostname(config)# filter activex 80 0 0 0 0
```

The following example shows how to remove ActiveX filtering:

```
hostname(config)# no filter activex 80 0 0 0 0
```

Feature History for ActiveX Filtering

Table 39-1 lists the release history for ActiveX Filtering. ASDM is backwards-compatible with multiple platform releases, so the specific ASDM release in which support was added is not listed.

Table 39-1 Feature History for ActiveX Filtering

Feature Name	Platform Releases	Feature Information
ActiveX filtering	7.0(1)	Filters specific undesirable objects from HTTP traffic, such as ActiveX objects, which may pose a security threat in certain situations.

Configuring Java Applet Filtering

This section includes the following topics:

- [Information About Java Applet Filtering](#), page 39-4
- [Licensing Requirements for Java Applet Filtering](#), page 39-4
- [Guidelines and Limitations for Java Applet Filtering](#), page 39-5
- [Configuring Java Applet Filtering](#), page 39-5
- [Configuration Examples for Java Applet Filtering](#), page 39-5
- [Feature History for Java Applet Filtering](#), page 39-6

Information About Java Applet Filtering

Java applets may pose security risks because they can contain code intended to attack hosts and servers on a protected network. You can remove Java applets with the **filter java** command.



Note

Use the **filter activex** command to remove Java applets that are embedded in <object> tags.

The **filter java** command filters out Java applets that return to the ASA from an outbound connection. You still receive the HTML page, but the web page source for the applet is commented out so that the applet cannot execute. The **filter java** command does not filter clientless SSL VPN traffic.

Licensing Requirements for Java Applet Filtering

The following table shows the licensing requirements for Java applet filtering:

Table 39-2 Licensing Requirements

Model	License Requirement
All models	Base License.

Guidelines and Limitations for Java Applet Filtering

This section includes the guidelines and limitations for this feature.

Context Mode Guidelines

Supported in single and multiple context mode.

Firewall Mode Guidelines

Supported in routed and transparent firewall mode.

IPv6 Guidelines

Does not support IPv6.

Configuring Java Applet Filtering

To apply filtering to remove Java applets from HTTP traffic passing through the ASA, enter the following command:

Command	Purpose
<pre>filter java <i>port[-port] local_ip</i> <i>local_mask foreign_ip foreign_mask</i></pre> <p>Example: <pre>hostname# filter java 80 0 0 0 0</pre></p>	<p>Removes Java applets in HTTP traffic passing through the ASA.</p> <p>To use this command, replace <i>port[-port]</i> with the TCP port to which filtering is applied. Typically, this is port 80, but other values are accepted. The http or url literal can be used for port 80. You can specify a range of ports by using a hyphen between the starting port number and the ending port number.</p> <p>The local IP address and mask identify one or more internal hosts that are the source of the traffic to be filtered. The foreign address and mask specify the external destination of the traffic to be filtered.</p> <p>You can set either address to 0.0.0.0 (or in shortened form, 0) to specify all hosts. You can use 0.0.0.0 for either mask (or in shortened form, 0) to specify all hosts.</p> <p>You can set either address to 0.0.0.0 (or in shortened form, 0) to specify all hosts. You can use 0.0.0.0 for either mask (or in shortened form, 0) to specify all hosts.</p>

Configuration Examples for Java Applet Filtering

The following example specifies that Java applets are blocked on all outbound connections:

```
hostname(config)# filter java 80 0 0 0 0
```

This command specifies that the Java applet blocking applies to web traffic on port 80 from any local host and for connections to any foreign host.

The following example blocks downloading of Java applets to a host on a protected network:

```
hostname(config)# filter java http 192.168.3.3 255.255.255.255 0 0
```

This command prevents host 192.168.3.3 from downloading Java applets.

The following example removes the configuration for downloading Java applets to a host on a protected network:

```
hostname(config)# no filter java http 192.168.3.3 255.255.255.255 0 0
```

This command allows host 192.168.3.3 to download Java applets.

Feature History for Java Applet Filtering

Table 39-1 lists the release history for Java applet filtering. ASDM is backwards-compatible with multiple platform releases, so the specific ASDM release in which support was added is not listed.

Table 39-3 Feature History for Java Applet Filtering

Feature Name	Platform Releases	Feature Information
Java applet filtering	7.0(1)	Filters specific undesirable objects from HTTP traffic, such as Java applets, which may pose a security threat in certain situations.

Filtering URLs and FTP Requests with an External Server

This section describes how to filter URLs and FTP requests with an external server and includes the following topics:

- [Information About URL Filtering, page 39-6](#)
- [Licensing Requirements for URL Filtering, page 39-7](#)
- [Guidelines and Limitations for URL Filtering, page 39-7](#)
- [Identifying the Filtering Server, page 39-8](#)
- [Configuring Additional URL Filtering Settings, page 39-10](#)
- [Feature History for URL Filtering, page 39-17](#)

Information About URL Filtering

You can apply filtering to connection requests originating from a more secure network to a less secure network. Although you can use ACLs to prevent outbound access to specific content servers, managing usage this way is difficult because of the size and dynamic nature of the Internet. You can simplify configuration and improve ASA performance by using a separate server running one of the following Internet filtering products:

- Websense Enterprise for filtering HTTP, HTTPS, and FTP.
- McAfee SmartFilter (formerly N2H2) for filtering HTTP, HTTPS, FTP, and long URL filtering.

In long URLs, the URL in the Referer field might contain a “host:” text string, which could cause the HTTP GET header to be incorrectly parsed as containing the HTTP Host parameter. The ASA, however, correctly parses the Referer field even when it contains a “host:” text string and forwards the header to the McAfee SmartFilter server with the correct Referer URL.

**Note**

URL caching will only work if the version of the URL server software from the URL server vendor supports it.

Although ASA performance is less affected when using an external server, you might notice longer access times to websites or FTP servers when the filtering server is remote from the ASA.

When filtering is enabled and a request for content is directed through the ASA, the request is sent to the content server and to the filtering server at the same time. If the filtering server allows the connection, the ASA forwards the response from the content server to the originating client. If the filtering server denies the connection, the ASA drops the response and sends a message or return code indicating that the connection was not successful.

If user authentication is enabled on the ASA, then the ASA also sends the username to the filtering server. The filtering server can use user-specific filtering settings or provide enhanced reporting about usage.

Licensing Requirements for URL Filtering

The following table shows the licensing requirements for URL filtering:

Table 39-4 *Licensing Requirements*

Model	License Requirement
All models	Base License.

Guidelines and Limitations for URL Filtering

This section includes the guidelines and limitations for this feature.

Context Mode Guidelines

Supported in single and multiple context mode.

Firewall Mode Guidelines

Supported in routed and transparent firewall mode.

IPv6 Guidelines

Does not support IPv6.

Identifying the Filtering Server

You can identify up to four filtering servers per context. The ASA uses the servers in order until a server responds. In single mode, a maximum of 16 of the same type of filtering servers are allowed. You can only configure a single type of server (Websense or Secure Computing SmartFilter) in your configuration.


Note

You must add the filtering server before you can configure filtering for HTTP or HTTPS with the **filter** command. If you remove the filtering servers from the configuration, then all **filter** commands are also removed.

To specify the external filtering server, enter the following command:

	Command	Purpose
	Choose from the following options:	

	Command	Purpose
	<p>For Websense:</p> <pre>hostname(config)# url-server (if_name) host local_ip [timeout seconds] [protocol TCP UDP version [1 4] [connections num_conns]]</pre> <p>Example:</p> <pre>hostname(config)# url-server (perimeter) host 10.0.1.1 protocol TCP version 4</pre>	<p>Identifies the address of the filtering server. <i>if_name</i> is the name of the ASA interface connected to the filtering server (the default is inside). For the vendor {<i>secure-computing</i> <i>n2h2</i>} option, use <i>secure-computing</i> as the vendor string; however, <i>n2h2</i> is acceptable for backward compatibility. When the configuration entries are generated, <i>secure-computing</i> is saved as the vendor string. The host local_ip option is the IP address of the URL filtering server. The port number option is the Secure Computing SmartFilter server port number of the filtering server; the ASA also listens for UDP replies on this port.</p> <p>Note The default port is 4005, which is used by the Secure Computing SmartFilter server to communicate to the ASA via TCP or UDP. For information about changing the default port, see the <i>Filtering by N2H2 Administrator's Guide</i>.</p> <p>The timeout seconds option is the number of seconds that the ASA should keep trying to connect to the filtering server. The connections number option is the number of tries to make a connection between the host and server.</p> <p>The example identifies a Websense filtering server with the IP address 10.0.1.1 on a perimeter interface of the ASA. Version 4, which is enabled in this example, is recommended by Websense because it supports caching.</p>
	<p>For Secure Computing SmartFilter (formerly N2H2):</p> <pre>hostname(config)# url-server (if_name) vendor {secure-computing n2h2} host local_ip [port number] [timeout seconds] [protocol {TCP [connections number]} UDP]</pre> <p>Example:</p> <pre>hostname(config)# url-server (perimeter) vendor n2h2 host 10.0.1.1 hostname(config)# url-server (perimeter) vendor n2h2 host 10.0.1.2</pre>	<p>The example identifies redundant Secure Computing SmartFilter servers that are both on a perimeter interface of the ASA.</p>

Configuring Additional URL Filtering Settings

After you have accessed a website, the filtering server can allow the ASA to cache the server address for a certain period of time, as long as each website hosted at the address is in a category that is permitted at all times. When you access the server again, or if another user accesses the server, the ASA does not need to consult the filtering server again to obtain the server address.



Note Requests for cached IP addresses are not passed to the filtering server and are not logged. As a result, this activity does not appear in any reports.

This section describes how to configure additional URL filtering settings and includes the following topics:

- [Buffering the Content Server Response, page 39-10](#)
- [Caching Server Addresses, page 39-11](#)
- [Filtering HTTP URLs, page 39-11](#)
- [Filtering HTTPS URLs, page 39-13](#)
- [Filtering FTP Requests, page 39-14](#)

Buffering the Content Server Response

When you issue a request to connect to a content server, the ASA sends the request to the content server and to the filtering server at the same time. If the filtering server does not respond before the content server, the server response is dropped. This behavior delays the web server response for the web client, because the web client must reissue the request.

By enabling the HTTP response buffer, replies from web content servers are buffered, and the responses are forwarded to the requesting client if the filtering server allows the connection. This behavior prevents the delay that might otherwise occur.

To configure buffering for responses to HTTP or FTP requests, enter the following command:

	Command	Purpose
Step 1	<pre>url-block block block-buffer-limit</pre> <p>Example: hostname# url-block 3000</p>	<p>Enables buffering of responses for HTTP or FTP requests that are pending a response from the filtering server.</p> <p>Replaces <i>block-buffer</i> with the maximum number of HTTP responses that can be buffered while awaiting responses from the URL server.</p> <p> Note Buffering of URLs longer than 3072 bytes is not supported.</p>
Step 2	<pre>url-block mempool-size memory-pool-size</pre> <p>Example: hostname# url-block mempool-size 5000</p>	<p>Configures the maximum memory available for buffering pending URLs (and for buffering long URLs).</p> <p>Replaces <i>memory-pool-size</i> with a value from 2 to 10240 for a maximum memory allocation of 2 KB to 10 MB.</p>

Caching Server Addresses

After you access a website, the filtering server can allow the ASA to cache the server address for a certain period of time, as long as each website hosted at the address is in a category that is permitted at all times. When you access the server again, or if another user accesses the server, the ASA does not need to consult the filtering server again.



Note

Requests for cached IP addresses are not passed to the filtering server and are not logged. As a result, this activity does not appear in any reports. You can accumulate Websense run logs before using the **url-cache** command.

To improve throughput, enter the following command:

Command	Purpose
<pre>url-cache dst src_dst size</pre> <p>Example: hostname## url-cache src_dst 100</p>	<p>Replaces <i>size</i> with a value for the cache size within the range from 1 to 128 (KB).</p> <p>Uses the dst keyword to cache entries based on the URL destination address. Choose this option if all users share the same URL filtering policy on the Websense server.</p> <p>Uses the src_dst keyword to cache entries based on both the source address initiating the URL request as well as the URL destination address. Choose this option if users do not share the same URL filtering policy on the Websense server.</p>

Filtering HTTP URLs

This section describes how to configure HTTP filtering with an external filtering server and includes the following topics:

- [Enabling HTTP Filtering, page 39-12](#)
- [Enabling Filtering of Long HTTP URLs, page 39-12](#)
- [Truncating Long HTTP URLs, page 39-13](#)
- [Exempting Traffic from Filtering, page 39-13](#)

Enabling HTTP Filtering

You must identify and enable the URL filtering server before enabling HTTP filtering. When the filtering server approves an HTTP connection request, the ASA allows the reply from the web server to reach the originating client. If the filtering server denies the request, the ASA redirects you to a block page, indicating that access was denied.

To enable HTTP filtering, enter the following command:

Command	Purpose
<pre>filter url [http port[-port] local_ip local_mask foreign_ip foreign_mask] [allow] [proxy-block]</pre> <p>Example: hostname# filter url http 80 allow proxy-block</p>	<p>Replaces <i>port[-port]</i> with one or more port numbers if a different port than the default port for HTTP (80) is used.</p> <p>Replaces <i>local_ip</i> and <i>local_mask</i> with the IP address and subnet mask of a user or subnetwork making requests.</p> <p>Replaces <i>foreign_ip</i> and <i>foreign_mask</i> with the IP address and subnet mask of a server or subnetwork responding to requests.</p> <p>The allow option causes the ASA to forward HTTP traffic without filtering when the primary filtering server is unavailable. Use the proxy-block command to drop all requests to proxy servers.</p>

Enabling Filtering of Long HTTP URLs

By default, the ASA considers an HTTP URL to be a long URL if it is greater than 1159 characters. You can increase the maximum length allowed.

To configure the maximum size of a single URL, enter the following command:

Command	Purpose
<pre>url-block url-size long-url-size</pre> <p>Example: hostname# url-block url-size 3</p>	<p>Replaces the <i>long-url-size</i> with the maximum size in KB for each long URL being buffered. For Websense servers, this is a value from 2 to 4 for a maximum URL size from 2 KB to 4 KB; for Secure Computing SmartFilter servers, this is a value between 2 and 3 for a maximum URL size from 2 KB to 3 KB. The default value is 2.</p>

Truncating Long HTTP URLs

By default, if a URL exceeds the maximum permitted size, then it is dropped. To avoid this occurrence, truncate a long URL by entering the following command:

Command	Purpose
<pre>filter url [longurl-truncate longurl-deny cgi-truncate]</pre> <p>Example: hostname# filter url longurl-truncate</p>	<p>The longurl-truncate option causes the ASA to send only the hostname or IP address portion of the URL for evaluation to the filtering server when the URL is longer than the maximum length permitted. Use the longurl-deny option to deny outbound URL traffic if the URL is longer than the maximum permitted.</p> <p>Use the cgi-truncate option to truncate CGI URLs to include only the CGI script location and the script name without any parameters. Many long HTTP requests are CGI requests. If the parameters list is very long, waiting and sending the complete CGI request, including the parameter list, can use up memory resources and affect ASA performance.</p>

Exempting Traffic from Filtering

To exempt traffic from filtering, enter following command:

Command	Purpose
<pre>filter url except source_ip source_mask dest_ip dest_mask</pre> <p>Example: hostname(config)# filter url http 0 0 0 0 hostname(config)# filter url except 10.0.2.54 255.255.255.255 0 0</p>	<p>Exempts specific traffic from filtering.</p> <p>The example shows how to cause all HTTP requests to be forwarded to the filtering server, except for those from 10.0.2.54.</p>

Filtering HTTPS URLs

You must identify and enable the URL filtering server before enabling HTTPS filtering.



Note

Websense and Secure Computing Smartfilter currently support HTTPS; older versions of the Secure Computing SmartFilter (formerly N2H2) do not support HTTPS filtering.

Because HTTPS content is encrypted, the ASA sends the URL lookup without directory and filename information. When the filtering server approves an HTTPS connection request, the ASA allows the completion of SSL connection negotiation and allows the reply from the web server to reach the originating client. If the filtering server denies the request, the ASA prevents the completion of SSL connection negotiation. The browser displays an error message, such as “The Page or the content cannot be displayed.”



Note

The ASA does not provide an authentication prompt for HTTPS, so you must authenticate with the ASA using HTTP or FTP before accessing HTTPS servers.

To enable HTTPS filtering, enter the following command:

Command	Purpose
<pre>filter https port[-port] localIP local_mask foreign_IP foreign_mask [allow]</pre> <p>Example: hostname# filter https 443 0 0 0 0 0 0 0 0 allow</p>	<p>Enables HTTPS filtering.</p> <p>Replaces <i>port[-port]</i> with a range of port numbers if a different port than the default port for HTTPS (443) is used.</p> <p>Replaces <i>local_ip</i> and <i>local_mask</i> with the IP address and subnet mask of a user or subnetwork making requests.</p> <p>Replaces <i>foreign_ip</i> and <i>foreign_mask</i> with the IP address and subnet mask of a server or subnetwork responding to requests.</p> <p>The allow option causes the ASA to forward HTTPS traffic without filtering when the primary filtering server is unavailable.</p>

Filtering FTP Requests

You must identify and enable the URL filtering server before enabling FTP filtering.



Note

Websense and Secure Computing Smartfilter currently support FTP; older versions of Secure Computing SmartFilter (formerly known as N2H2) did not support FTP filtering.

When the filtering server approves an FTP connection request, the ASA allows the successful FTP return code to reach the originating client. For example, a successful return code is “250: CWD command successful.” If the filtering server denies the request, the FTP return code is changed to show that the connection was denied. For example, the ASA changes code 250 to “550 Requested file is prohibited by URL filtering policy.”

To enable FTP filtering, enter the following command:

Command	Purpose
<pre>filter ftp port[-port] localIP local_mask foreign_IP foreign_mask [allow] [interact-block]</pre> <p>Example: hostname# filter ftp 21 0 0 0 0 0 0 0 0 allow</p>	<p>Enables FTP filtering.</p> <p>Replaces <i>port[-port]</i> with a range of port numbers if a different port than the default port for FTP (21) is used.</p> <p>Replaces <i>local_ip</i> and <i>local_mask</i> with the IP address and subnet mask of a user or subnetwork making requests.</p> <p>Replaces <i>foreign_ip</i> and <i>foreign_mask</i> with the IP address and subnet mask of a server or subnetwork responding to requests.</p> <p>The allow option causes the ASA to forward HTTPS traffic without filtering when the primary filtering server is unavailable.</p> <p>Use the interact-block option to prevent interactive FTP sessions that do not provide the entire directory path. An interactive FTP client allows you to change directories without typing the entire path. For example, you might enter cd ./files instead of cd /public/files.</p>

Monitoring Filtering Statistics

To monitor filtering statistics, enter one of the following commands:

Command	Purpose
show url-server	Shows information about the URL filtering server.
show url-server statistics	Shows URL filtering statistics.
show url-block	Shows the number of packets held in the url-block buffer and the number (if any) dropped because of exceeding the buffer limit or retransmission.
show url-block block statistics	Shows the URL block statistics.
show url-cache stats	Shows the URL cache statistics.
show perfmon	Shows URL filtering performance statistics, along with other performance statistics.
show filter	Shows the filtering configuration.

Examples

The following is sample output from the **show url-server** command:

```
hostname# show url-server
url-server (outside) vendor n2h2 host 128.107.254.202 port 4005 timeout 5 protocol TCP
```

The following is sample output from the **show url-server statistics** command:

```
hostname# show url-server statistics

Global Statistics:
-----
URLs total/allowed/denied          13/3/10
URLs allowed by cache/server        0/3
URLs denied by cache/server         0/10
HTTPSs total/allowed/denied        138/137/1
HTTPSs allowed by cache/server      0/137
HTTPSs denied by cache/server       0/1
FTPs total/allowed/denied           0/0/0
FTPs allowed by cache/server         0/0
FTPs denied by cache/server         0/0
Requests dropped                     0
Server timeouts/retries              0/0
Processed rate average 60s/300s     0/0 requests/second
Denied rate average 60s/300s        0/0 requests/second
Dropped rate average 60s/300s       0/0 requests/second

Server Statistics:
-----
10.125.76.20                        UP
  Vendor                             websense
  Port                               15868
  Requests total/allowed/denied      151/140/11
  Server timeouts/retries            0/0
  Responses received                 151
  Response time average 60s/300s     0/0

URL Packets Sent and Received Stats:
-----
Message                               Sent      Received
```

```

STATUS_REQUEST          1609    1601
LOOKUP_REQUEST          1526    1526
LOG_REQUEST              0        NA

```

Errors:

```

RFC noncompliant GET method    0
URL buffer update failure      0

```

The following is sample output from the **show url-block** command:

```

hostname# show url-block
url-block url-mempool 128
url-block url-size 4
url-block block 128

```

The following is sample output from the **show url-block block statistics** command:

```

hostname# show url-block block statistics

URL Pending Packet Buffer Stats with max block 128
-----
Cumulative number of packets held:          896
Maximum number of packets held (per URL):   3
Current number of packets held (global):    38
Packets dropped due to
    exceeding url-block buffer limit:       7546
    HTTP server retransmission:            10
Number of packets released back to client:  0

```

The following is sample output from the **show url-cache stats** command:

```

hostname# show url-cache stats
URL Filter Cache Stats
-----
Size :      128KB
Entries :   1724
In Use :    456
Lookups :   45
Hits :      8

```

This shows how the cache is used.

The following is sample output from the **show perfmon** command:

```

hostname# show perfmon
PERFMON STATS:      Current      Average
Xlates              0/s        0/s
Connections         0/s        2/s
TCP Conns           0/s        2/s
UDP Conns           0/s        0/s
URL Access          0/s        2/s
URL Server Req      0/s        3/s
TCP Fixup           0/s        0/s
TCPIntercept        0/s        0/s
HTTP Fixup          0/s        3/s
FTP Fixup           0/s        0/s
AAA Authen          0/s        0/s
AAA Author          0/s        0/s
AAA Account         0/s        0/s

```

The following is sample output from the **show filter** command:

```

hostname# show filter
filter url http 0.0.0.0 0.0.0.0 0.0.0.0 0.0.0.0

```

Feature History for URL Filtering

Table 39-5 lists the release history for URL filtering. ASDM is backwards-compatible with multiple platform releases, so the specific ASDM release in which support was added is not listed.

Table 39-5 Feature History for URL Filtering

Feature Name	Platform Releases	Feature Information
URL filtering	7.0(1)	Filters URLs based on an established set of filtering criteria.



CHAPTER 40

Configuring Web Cache Services Using WCCP

This chapter describes how to configure web caching services using WCCP, and includes the following sections:

- [Information About WCCP, page 40-1](#)
- [Guidelines and Limitations, page 40-1](#)
- [Licensing Requirements for WCCP, page 40-2](#)
- [Enabling WCCP Redirection, page 40-3](#)
- [WCCP Monitoring Commands, page 40-4](#)
- [Feature History for WCCP, page 40-4](#)

Information About WCCP

The purpose of web caching is to reduce latency and network traffic. Previously-accessed web pages are stored in a cache buffer, so if users need the page again, they can retrieve it from the cache instead of the web server.

WCCP specifies interactions between the ASA and external web caches. The feature transparently redirects selected types of traffic to a group of web cache engines to optimize resource usage and lower response times. The ASA only supports WCCP Version 2.

Using an ASA as an intermediary eliminates the need for a separate router to do the WCCP redirection, because the ASA redirects requests to cache engines. When the ASA determines that a packet needs redirection, it skips TCP state tracking, TCP sequence number randomization, and NAT on these traffic flows.

Guidelines and Limitations

The following WCCPv2 features are supported for the ASA:

- Redirection of multiple TCP and UDP port-destined traffic.
- Authentication for cache engines in a service group.
- Multiple cache engines in a service group.
- GRE encapsulation.

The following WCCPv2 features are not supported for the ASA:

- Multiple routers in a service group.
- Multicast WCCP.
- The Layer 2 redirect method.
- WCCP source address spoofing.
- WAAS devices.

WCCP Interaction With Other Features

In the ASA implementation of WCCP, the protocol interacts with other configurable features according to the following:

- Cut-through proxy will not work in combination with WCCP.
- An ingress access list entry always takes higher priority over WCCP. For example, if an access list does not permit a client to communicate with a server, then traffic is not redirected to a cache engine. Both ingress interface access lists and egress interface access lists are applied.
- TCP intercept, authorization, URL filtering, inspect engines, and IPS features are not applied to a redirected flow of traffic.
- When a cache engine cannot service a request and a packet is returned, or when a cache miss happens on a cache engine and it requests data from a web server, then the contents of the traffic flow is subject to all the other configured features of the ASA.
- If you have two WCCP services and they use two different redirection ACLs that overlap and match the same packets (with a deny or a permit action), the packets behave according to the first service-group found and installed rules. The packets are not passed through all service-groups.

Failover Guidelines

Supports Active/Active and Active/Standby failover. WCCP redirect tables are not replicated to standby units. After a failover, packets are not redirected until the tables are rebuilt. Sessions redirected before failover are probably reset by the web server.

Firewall Mode Guidelines

Supported in routed and transparent firewall modes.

Context Mode Guidelines

Supported in single mode and multiple context mode.

Additional Guidelines

The ASA selects the highest IP address configured on any interface as the WCCP router ID. This address is used to establish a GRE tunnel with the cache engine.

Licensing Requirements for WCCP

Table 40-1 shows the licensing requirements for WCCP.

Table 40-1 Licensing Requirements

Model	License Requirement
All models	Base License.

Enabling WCCP Redirection



Note

The ASA selects the highest IP address configured on any interface as the WCCP router ID. This address is used to establish a GRE tunnel with the cache engine.

WCCP redirection is supported only on the ingress of an interface. The only topology that the ASA supports is when client and cache engine are behind the same interface of the ASA and the cache engine can directly communicate with the client, without going through the ASA.

The following configuration tasks assume you have already installed and configured the cache engines that you want to include in your network.

To configure WCCP redirection, perform the following steps:

	Command	Purpose
Step 1	<pre>wccp {web-cache service_number} [redirect-list access_list] [group-list access_list] [password password]</pre> <p>Example: hostname (config)# wccp web-cache</p>	<p>Enables a WCCP service group and identifies the service to be redirected. (Optional) Also defines which cache engines can participate in the service group, and what traffic should be redirected to the cache engine.</p> <p>The standard service is web-cache, which intercepts TCP port 80 (HTTP) traffic and redirects that traffic to the cache engines, but you can identify a service number (if desired) between 0 and 254. For example, to transparently redirect native FTP traffic to a cache engine, use WCCP service 60. You can enter this command multiple times for each service group that you want to enable.</p> <p>The redirect-list <i>access_list</i> argument controls traffic that is redirected to this service group.</p> <p>The group-list <i>access_list</i> argument determines which web cache IP addresses are allowed to participate in the service group.</p> <p>The password <i>password</i> argument specifies MD5 authentication for messages that are received from the service group. Messages that are not accepted by the authentication are discarded.</p>
Step 2	<pre>wccp interface interface_name {web-cache service_number} redirect in</pre> <p>Example: hostname (config)# wccp interface inside web-cache redirect in</p>	<p>Identifies an interface and enables WCCP redirection on the interface.</p> <p>The standard service is web-cache, which intercepts TCP port 80 (HTTP) traffic and redirects that traffic to the cache engines, but you can identify a service number (if desired) between 0 and 254. For example, to transparently redirect native FTP traffic to a cache engine, use WCCP service 60. You can enter this command multiple times for each service group that you want to enable.</p>

Examples

For example, to enable the standard web-cache service and redirect HTTP traffic that enters the inside interface to a web cache, enter the following commands:

```
hostname (config)# wccp web-cache
hostname (config)# wccp interface inside web-cache redirect in
```

WCCP Monitoring Commands

To monitor WCCP, enter one of the following commands:

Command	Purpose
<code>show running-config wccp</code>	Shows the current WCCP configuration.
<code>show running-config wccp interface</code>	Shows the current WCCP interfaces status.

Feature History for WCCP

Table 40-2 lists the release history for this feature.

Table 40-2 Feature History for WCCP

Feature Name	Releases	Feature Information
WCCP	7.2(1)	WCCP specifies interactions between the ASA and external web caches. We introduced the following commands: wccp and wccp interface



CHAPTER 41

Configuring Digital Certificates

This chapter describes how to configure digital certificates and includes the following sections:

- [Information About Digital Certificates, page 41-1](#)
- [Licensing Requirements for Digital Certificates, page 41-7](#)
- [Prerequisites for Local Certificates, page 41-7](#)
- [Guidelines and Limitations, page 41-8](#)
- [Configuring Digital Certificates, page 41-9](#)
- [Monitoring Digital Certificates, page 41-41](#)
- [Feature History for Certificate Management, page 41-43](#)

Information About Digital Certificates

CAs are responsible for managing certificate requests and issuing digital certificates. A digital certificate includes information that identifies a user or device, such as a name, serial number, company, department, or IP address. A digital certificate also includes a copy of the public key for the user or device. A CA can be a trusted third party, such as VeriSign, or a private (in-house) CA that you establish within your organization.



Tip

For an example of a scenario that includes certificate configuration and load balancing, see the following URL: <https://supportforums.cisco.com/docs/DOC-5964>.

This section includes the following topics:

- [Public Key Cryptography, page 41-2](#)
- [Certificate Scalability, page 41-2](#)
- [Key Pairs, page 41-2](#)
- [Trustpoints, page 41-3](#)
- [Revocation Checking, page 41-4](#)
- [The Local CA, page 41-6](#)

Public Key Cryptography

Digital signatures, enabled by public key cryptography, provide a way to authenticate devices and users. In public key cryptography, such as the RSA encryption system, each user has a key pair containing both a public and a private key. The keys act as complements, and anything encrypted with one of the keys can be decrypted with the other.

In simple terms, a signature is formed when data is encrypted with a private key. The signature is attached to the data and sent to the receiver. The receiver applies the public key of the sender to the data. If the signature sent with the data matches the result of applying the public key to the data, the validity of the message is established.

This process relies on the receiver having a copy of the public key of the sender and a high degree of certainty that this key belongs to the sender, not to someone pretending to be the sender.

Obtaining the public key of a sender is normally handled externally or through an operation performed at installation. For example, most web browsers are configured with the root certificates of several CAs by default. For VPN, the IKE protocol, a component of IPsec, can use digital signatures to authenticate peer devices before setting up security associations.

Certificate Scalability

Without digital certificates, you must manually configure each IPsec peer for each peer with which it communicates; as a result, each new peer that you add to a network would require a configuration change on each peer with which it needs to communicate securely.

When you use digital certificates, each peer is enrolled with a CA. When two peers try to communicate, they exchange certificates and digitally sign data to authenticate each other. When a new peer is added to the network, you enroll that peer with a CA and none of the other peers need modification. When the new peer attempts an IPsec connection, certificates are automatically exchanged and the peer can be authenticated.

With a CA, a peer authenticates itself to the remote peer by sending a certificate to the remote peer and performing some public key cryptography. Each peer sends its unique certificate, which was issued by the CA. This process works because each certificate encapsulates the public key for the associated peer, each certificate is authenticated by the CA, and all participating peers recognize the CA as an authenticating authority. The process is called IKE with an RSA signature.

The peer can continue sending its certificate for multiple IPsec sessions, and to multiple IPsec peers, until the certificate expires. When its certificate expires, the peer administrator must obtain a new one from the CA.

CAs can also revoke certificates for peers that no longer participate in IPsec. Revoked certificates are not recognized as valid by other peers. Revoked certificates are listed in a CRL, which each peer may check before accepting a certificate from another peer.

Some CAs have an RA as part of their implementation. An RA is a server that acts as a proxy for the CA, so that CA functions can continue when the CA is unavailable.

Key Pairs

Key pairs are RSA keys, which have the following characteristics:

- RSA keys can be used for SSH or SSL.
- SCEP enrollment supports the certification of RSA keys.

- For the purposes of generating keys, the maximum key modulus for RSA keys is 2048 bits. The default size is 1024. Many SSL connections using identity certificates with RSA key pairs that exceed 1024 bits can cause a high CPU usage on the ASA and rejected clientless logins.
- For signature operations, the supported maximum key size is 4096 bits.
- You can generate a general purpose RSA key pair, used for both signing and encryption, or you can generate separate RSA key pairs for each purpose. Separate signing and encryption keys help to reduce exposure of the keys, because SSL uses a key for encryption but not signing. However, IKE uses a key for signing but not encryption. By using separate keys for each, exposure of the keys is minimized.

Trustpoints

Trustpoints let you manage and track CAs and certificates. A trustpoint is a representation of a CA or identity pair. A trustpoint includes the identity of the CA, CA-specific configuration parameters, and an association with one, enrolled identity certificate.

After you have defined a trustpoint, you can reference it by name in commands requiring that you specify a CA. You can configure many trustpoints.



Note

If an ASA has multiple trustpoints that share the same CA, only one of these trustpoints sharing the CA can be used to validate user certificates. To control which trustpoint sharing a CA is used for validation of user certificates issued by that CA, use the **support-user-cert-validation** command.

For automatic enrollment, a trustpoint must be configured with an enrollment URL, and the CA that the trustpoint represents must be available on the network and must support SCEP.

You can export and import the keypair and issued certificates associated with a trustpoint in PKCS12 format. This format is useful to manually duplicate a trustpoint configuration on a different ASA.

Certificate Enrollment

The ASA needs a CA certificate for each trustpoint and one or two certificates for itself, depending upon the configuration of the keys used by the trustpoint. If the trustpoint uses separate RSA keys for signing and encryption, the ASA needs two certificates, one for each purpose. In other key configurations, only one certificate is needed.

The ASA supports automatic enrollment with SCEP and with manual enrollment, which lets you paste a base-64-encoded certificate directly into the terminal. For site-to-site VPNs, you must enroll each ASA. For remote access VPNs, you must enroll each ASA and each remote access VPN client.

Proxy for SCEP Requests

The ASA can proxy SCEP requests between AnyConnect and a third-party CA. The CA only needs to be accessible to the ASA if it is acting as the proxy. For the ASA to provide this service, the user must authenticate using any of the methods supported by AAA before the ASA sends an enrollment request. You can also use host scan and dynamic access policies to enforce rules of eligibility to enroll.

The ASA supports this feature only with an AnyConnect SSL or IKEv2 VPN session. It supports all SCEP-compliant CAs, including IOS CS, Windows Server 2003 CA, and Windows Server 2008 CA.

Clientless (browser-based) access does not support SCEP proxy, although WebLaunch—clientless-initiated AnyConnect—does support it.

The ASA does not support polling for certificates.

The ASA supports load balancing for this feature.

Revocation Checking

When a certificate is issued, it is valid for a fixed period of time. Sometimes a CA revokes a certificate before this time period expires; for example, because of security concerns or a change of name or association. CAs periodically issue a signed list of revoked certificates. Enabling revocation checking forces the ASA to check that the CA has not revoked a certificate each time that it uses the certificate for authentication.

When you enable revocation checking, the ASA checks certificate revocation status during the PKI certificate validation process, which can use either CRL checking, OCSP, or both. OCSP is only used when the first method returns an error (for example, indicating that the server is unavailable).

With CRL checking, the ASA retrieves, parses, and caches CRLs, which provide a complete list of revoked (and unrevoked) certificates with their certificate serial numbers. The ASA evaluates certificates according to CRLs, also called authority revocation lists, from the identity certificate up the chain of subordinate certificate authorities.

OCSP offers a more scalable method of checking revocation status in that it localizes certificate status through a validation authority, which it queries for status of a specific certificate.

Supported CA Servers

The ASA supports the following CA servers:

Cisco IOS CS, ASA Local CA, and third-party X.509 compliant CA vendors including, but not limited to:

- Baltimore Technologies
- Entrust
- Digicert
- Geotrust
- GoDaddy
- iPlanet/Netscape
- Microsoft Certificate Services
- RSA Keon
- Thawte
- VeriSign

CRLs

CRLs provide the ASA with one way of determining whether a certificate that is within its valid time range has been revoked by the issuing CA. CRL configuration is part of configuration of a trustpoint.

You can configure the ASA to make CRL checks mandatory when authenticating a certificate by using the **revocation-check crl** command. You can also make the CRL check optional by using the **revocation-check crl none** command, which allows the certificate authentication to succeed when the CA is unavailable to provide updated CRL data.

The ASA can retrieve CRLs from CAs using HTTP, SCEP, or LDAP. CRLs retrieved for each trustpoint are cached for a configurable amount of time for each trustpoint.

When the ASA has cached a CRL for longer than the amount of time it is configured to cache CRLs, the ASA considers the CRL too old to be reliable, or “stale.” The ASA tries to retrieve a newer version of the CRL the next time that a certificate authentication requires a check of the stale CRL.

The ASA caches CRLs for an amount of time determined by the following two factors:

- The number of minutes specified with the **cache-time** command. The default value is 60 minutes.
- The NextUpdate field in the CRLs retrieved, which may be absent from CRLs. You control whether the ASA requires and uses the NextUpdate field with the **enforcenextupdate** command.

The ASA uses these two factors in the following ways:

- If the NextUpdate field is not required, the ASA marks CRLs as stale after the length of time defined by the **cache-time** command.
- If the NextUpdate field is required, the ASA marks CRLs as stale at the sooner of the two times specified by the **cache-time** command and the NextUpdate field. For example, if the **cache-time** command is set to 100 minutes and the NextUpdate field specifies that the next update is 70 minutes away, the ASA marks CRLs as stale in 70 minutes.

If the ASA has insufficient memory to store all CRLs cached for a given trustpoint, it deletes the least recently used CRL to make room for a newly retrieved CRL.

OCSP

OCSP provides the ASA with a way of determining whether a certificate that is within its valid time range has been revoked by the issuing CA. OCSP configuration is part of trustpoint configuration.

OCSP localizes certificate status on a validation authority (an OCSP server, also called the *responder*) which the ASA queries for the status of a specific certificate. This method provides better scalability and more up-to-date revocation status than does CRL checking, and helps organizations with large PKI installations deploy and expand secure networks.



Note

The ASA allows a five-second time skew for OCSP responses.

You can configure the ASA to make OCSP checks mandatory when authenticating a certificate by using the **revocation-check oosp** command. You can also make the OCSP check optional by using the **revocation-check oosp none** command, which allows the certificate authentication to succeed when the validation authority is unavailable to provide updated OCSP data.

OCSP provides three ways to define the OCSP server URL. The ASA uses these servers in the following order:

1. The OCSP URL defined in a match certificate override rule by using the **match certificate** command).
2. The OCSP URL configured by using the **oosp url** command.
3. The AIA field of the client certificate.



Note

To configure a trustpoint to validate a self-signed OCSP responder certificate, you import the self-signed responder certificate into its own trustpoint as a trusted CA certificate. Then you configure the **match certificate** command in the client certificate validating trustpoint to use the trustpoint that includes the self-signed OCSP responder certificate to validate the responder certificate. Use the same procedure for

configuring validating responder certificates external to the validation path of the client certificate.

The OCSP server (responder) certificate usually signs the OCSP response. After receiving the response, the ASA tries to verify the responder certificate. The CA normally sets the lifetime of the OCSP responder certificate to a relatively short period to minimize the chance of being compromised. The CA usually also includes an `ocsp-no-check` extension in the responder certificate, which indicates that this certificate does not need revocation status checking. However, if this extension is not present, the ASA tries to check revocation status using the same method specified in the trustpoint. If the responder certificate is not verifiable, revocation checks fail. To avoid this possibility, use the **revocation-check none** command to configure the responder certificate validating trustpoint, and use the **revocation-check oosp** command to configure the client certificate.

The Local CA

The local CA performs the following tasks:

- Integrates basic certificate authority operation on the ASA.
- Deploys certificates.
- Provides secure revocation checking of issued certificates.
- Provides a certificate authority on the ASA for use with browser-based and client-based SSL VPN connections.
- Provides trusted digital certificates to users, without the need to rely on external certificate authorization.
- Provides a secure, in-house authority for certificate authentication and offers straightforward user enrollment by means of a website login.

Storage for Local CA Files

The ASA accesses and implements user information, issued certificates, and revocation lists using a local CA database. This database resides in local flash memory by default, or can be configured to reside on an external file system that is mounted and accessible to the ASA.


No limits exist on the number of users that can be stored in the local CA user database; however, if flash memory storage issues arise, syslogs are generated to alert the administrator to take action, and the local CA could be disabled until the storage issues are resolved. Flash memory can store a database with 3500 users or less; however, a database of more than 3500 users requires external storage.

The Local CA Server

After you configure a local CA server on the ASA, users can enroll for a certificate by logging into a website and entering a username and a one-time password that is provided by the local CA administrator to validate their eligibility for enrollment.

As shown in [Figure 41-1](#), the local CA server resides on the ASA and handles enrollment requests from website users and CRL inquiries coming from other certificate validating devices and ASAs. Local CA database and configuration files are maintained either on the ASA flash memory (default storage) or on a separate storage device.

Figure 41-1 The Local CA

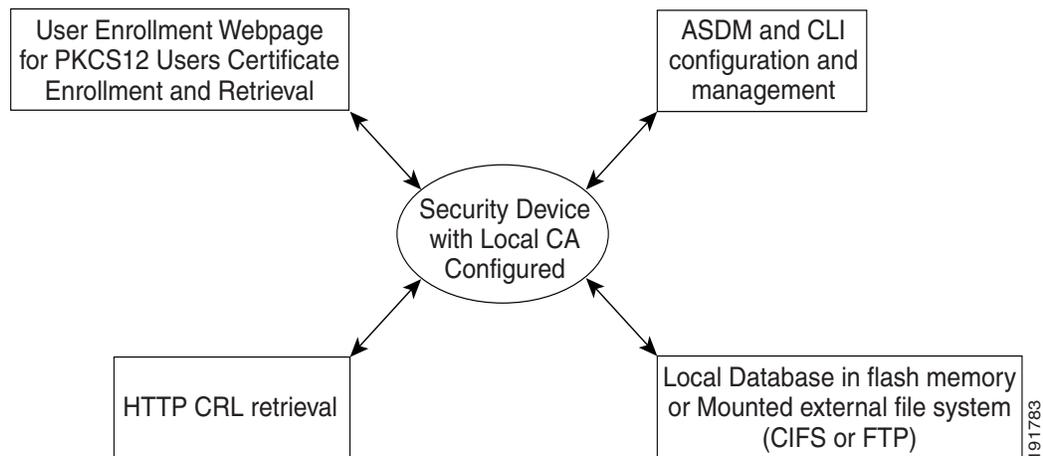

Licensing Requirements for Digital Certificates

The following table shows the licensing requirements for this feature:

Model	License Requirement
All models	Base License.

Prerequisites for Local Certificates

Local certificates have the following prerequisites:

- Make sure that the ASA is configured correctly to support certificates. An incorrectly configured ASA can cause enrollment to fail or request a certificate that includes inaccurate information.
- Make sure that the hostname and domain name of the ASA are configured correctly. To view the currently configured hostname and domain name, enter the **show running-config** command. For information about configuring the hostname and domain name, see the “[Configuring the Hostname, Domain Name, and Passwords](#)” section on page 10-1.
- Make sure that the ASA clock is set accurately before configuring the CA. Certificates have a date and time that they become valid and expire. When the ASA enrolls with a CA and obtains a certificate, the ASA checks that the current time is within the valid range for the certificate. If it is outside that range, enrollment fails.

Prerequisites for SCEP Proxy Support

Configuring the ASA as a proxy to submit requests for third-party certificates has the following requirements:

- AnyConnect Secure Mobility Client 3.0 or later must be running at the endpoint.
- The authentication method, configured in the connection profile for your group policy, must be set to use both AAA and certificate authentication.

- An SSL port must be open for IKEv2 VPN connections.
- The CA must be in auto-grant mode.

Guidelines and Limitations

This section includes the guidelines and limitations for this feature.

Context Mode Guidelines

- Supported in single and multiple context mode for a local CA.
- Supported in single context mode only for third-party CAs.

Firewall Mode Guidelines

Supported in routed and transparent firewall mode.

Failover Guidelines

- Does not support replicating sessions in Stateful Failover.
- Does not support Active/Active or Active/Standby failover.

IPv6 Guidelines

Supports IPv6.

Additional Guidelines

- For ASAs that are configured as CA servers or clients, limit the validity period of the certificate to less than the recommended end date of 03:14:08 UTC, January 19, 2038. This guideline also applies to imported certificates from third-party vendors.
- You cannot configure the local CA when failover is enabled. You can only configure the local CA server for standalone ASAs without failover. For more information, see CSCty43366.
- When a certificate enrollment is completed, the ASA stores a PKCS12 file containing the user's keypair and certificate chain, which requires about 2 KB of flash memory or disk space per enrollment. The actual amount of disk space depends on the configured RSA key size and certificate fields. Keep this guideline in mind when adding a large number of pending certificate enrollments on an ASA with a limited amount of available flash memory, because these PKCS12 files are stored in flash memory for the duration of the configured enrollment retrieval timeout.
- The **lifetime ca-certificate** command takes effect when the local CA server certificate is first generated (that is, when you initially configure the local CA server and issue the **no shutdown** command). When the CA certificate expires, the configured lifetime value is used to generate the new CA certificate. You cannot change the lifetime value for existing CA certificates.
- You should configure the ASA to use an identity certificate to protect ASDM traffic and HTTPS traffic to the management interface. Identity certificates that are automatically generated with SCEP are regenerated after each reboot, so make sure that you manually install your own identity certificates. For an example of this procedure that applies only to SSL, see the following URL: http://www.cisco.com/en/US/products/ps6120/products_configuration_example09186a00809fcf91.shtml.
- The ASA and the AnyConnect clients can only validate certificates in which the X520Serialnumber field (the serial number in the Subject Name) is in PrintableString format. If the serial number format uses encoding such as UTF8, the certificate authorization will fail.

Configuring Digital Certificates

This section describes how to configure local CA certificates. Make sure that you follow the sequence of tasks listed to correctly configure this type of digital certificate. This section includes the following topics:

- [Configuring Key Pairs, page 41-9](#)
- [Removing Key Pairs, page 41-10](#)
- [Configuring Trustpoints, page 41-10](#)
- [Configuring CRLs for a Trustpoint, page 41-13](#)
- [Exporting a Trustpoint Configuration, page 41-15](#)
- [Importing a Trustpoint Configuration, page 41-16](#)
- [Configuring CA Certificate Map Rules, page 41-17](#)
- [Obtaining Certificates Manually, page 41-18](#)
- [Obtaining Certificates Automatically with SCEP, page 41-20](#)
- [Configuring Proxy Support for SCEP Requests, page 41-21](#)
- [Enabling the Local CA Server, page 41-22](#)
- [Configuring the Local CA Server, page 41-23](#)
- [Customizing the Local CA Server, page 41-25](#)
- [Debugging the Local CA Server, page 41-26](#)
- [Disabling the Local CA Server, page 41-26](#)
- [Deleting the Local CA Server, page 41-26](#)
- [Configuring Local CA Certificate Characteristics, page 41-27](#)

Configuring Key Pairs

To generate key pairs, perform the following steps:

	Command	Purpose
Step 1	crypto key generate rsa Example: hostname/contexta(config)# crypto key generate rsa	Generates one, general-purpose RSA key pair. The default key modulus is 1024. To specify other modulus sizes, use the modulus keyword. Note Many SSL connections using identity certificates with RSA key pairs that exceed 1024 bits can cause high CPU usage on the ASA and rejected clientless logins.
Step 2	crypto key generate rsa label key-pair-label Example: hostname/contexta(config)# crypto key generate rsa label exchange	(Optional) Assigns a label to each key pair. The label is referenced by the trustpoint that uses the key pair. If you do not assign a label, the key pair is automatically labeled, <i>Default-RSA-Key</i> .

	Command	Purpose
Step 3	show crypto key <i>name of key</i> Example: hostname/contexta(config)# show crypto key examplekey	Verifies key pairs that you have generated.
Step 4	write memory Example: hostname(config)# write memory	Saves the key pair that you have generated.

Removing Key Pairs

To remove key pairs, perform the following steps:

Command	Purpose
crypto key zeroize rsa Example: hostname(config)# crypto key zeroize rsa	Removes key pairs.

Examples

The following example shows how to remove key pairs:

```
hostname(config)# crypto key zeroize rsa
WARNING: All RSA keys will be removed.
WARNING: All device certs issued using these keys will also be removed.

Do you really want to remove these keys? [yes/no] y
```

Configuring Trustpoints

To configure a trustpoint, perform the following steps:

	Command	Purpose
Step 1	crypto ca trustpoint <i>trustpoint-name</i> Example: hostname/contexta(config)# crypto ca trustpoint Main	Creates a trustpoint that corresponds to the CA from which the ASA needs to receive a certificate. Enters the crypto ca trustpoint configuration mode, which controls CA-specific trustpoint parameters that you may configure starting in Step 3.
Step 2	Choose one of the following options:	

	Command	Purpose
	enrollment url url Example: hostname/contexta(config-ca-trustpoint)# enrollment url http://10.29.67.142:80/certsrv/mscep/mscep.dll	Requests automatic enrollment using SCEP with the specified trustpoint and configures the enrollment URL.
	enrollment terminal Example: hostname/contexta(config-ca-trustpoint)# enrollment terminal	Requests manual enrollment with the specified trustpoint by pasting the certificate received from the CA into the terminal.
Step 3	revocation-check crl none revocation-check crl revocation-check none Example: hostname/contexta(config-ca-trustpoint)# revocation-check crl none hostname/contexta(config-ca-trustpoint)# revocation-check crl hostname/contexta(config-ca-trustpoint)# revocation-check none	Specifies the available CRL configuration options. Note To enable either required or optional CRL checking, make sure that you configure the trustpoint for CRL management after obtaining certificates.
Step 4	crl configure Example: hostname/contexta(config-ca-trustpoint)# crl configure	Enters crl configuration mode.
Step 5	email address Example: hostname/contexta(config-ca-trustpoint)# email example.com	During enrollment, asks the CA to include the specified e-mail address in the Subject Alternative Name extension of the certificate.
Step 6	enrollment retry period Example: hostname/contexta(config-ca-trustpoint)# enrollment retry period 5	(Optional) Specifies a retry period in minutes, and applies only to SCEP enrollment.
Step 7	enrollment retry count Example: hostname/contexta(config-ca-trustpoint)# enrollment retry period 2	(Optional) Specifies a maximum number of permitted retries, and applies only to SCEP enrollment.
Step 8	fqdn fqdn Example: hostname/contexta(config-ca-trustpoint)# fqdn example.com	During enrollment, asks the CA to include the specified fully qualified domain name in the Subject Alternative Name extension of the certificate.

	Command	Purpose
Step 9	<p>ip-address <i>ip-address</i></p> <p>Example: hostname/contexta(config-ca-trustpoint)# ip-address 10.10.100.1</p>	During enrollment, asks the CA to include the IP address of the ASA in the certificate.
Step 10	<p>keypair <i>name</i></p> <p>Example: hostname/contexta(config-ca-trustpoint)# keypair exchange</p>	Specifies the key pair whose public key is to be certified.
Step 11	<p>match certificate map-name override ocsp</p> <p>Example: hostname/contexta(config-ca-trustpoint)# match certificate examplemap override ocsp</p>	Configures OCSP URL overrides and trustpoints to use for validating OCSP responder certificates.
Step 12	<p>ocsp disable-nonce</p> <p>Example: hostname/contexta(config-ca-trustpoint)# ocsp disable-nonce</p>	Disables the nonce extension on an OCSP request. The nonce extension cryptographically binds requests with responses to avoid replay attacks.
Step 13	<p>ocsp url</p> <p>Example: hostname/contexta(config-ca-trustpoint)# ocsp url</p>	Configures an OCSP server for the ASA to use to check all certificates associated with a trustpoint rather than the server specified in the AIA extension of the client certificate.
Step 14	<p>password <i>string</i></p> <p>Example: hostname/contexta(config-ca-trustpoint)# password mypassword</p>	Specifies a challenge phrase that is registered with the CA during enrollment. The CA usually uses this phrase to authenticate a subsequent revocation request.
Step 15	<p>revocation check</p> <p>Example: hostname/contexta(config-ca-trustpoint)# revocation check</p>	Sets one or more methods for revocation checking: CRL, OCSP, and none.
Step 16	<p>subject-name <i>X.500 name</i></p> <p>Example: hostname/contexta(config-ca-trustpoint)# myname X.500 exemplename</p>	During enrollment, asks the CA to include the specified subject DN in the certificate. If a DN string includes a comma, enclose the value string within double quotes (for example, O="Company, Inc.>").

	Command	Purpose
Step 17	serial-number Example: hostname/contexta(config-ca-trustpoint)# serial number JMX1213L2A7	During enrollment, asks the CA to include the ASA serial number in the certificate.
Step 18	write memory Example: hostname/contexta(config)# write memory	Saves the running configuration.

Configuring CRLs for a Trustpoint

To use mandatory or optional CRL checking during certificate authentication, you must configure CRLs for each trustpoint. To configure CRLs for a trustpoint, perform the following steps:

	Command	Purpose
Step 1	crypto ca trustpoint trustpoint-name Example: hostname (config)# crypto ca trustpoint Main	Enters crypto ca trustpoint configuration mode for the trustpoint whose CRL configuration you want to modify. Note Make sure that you have enabled CRLs before entering this command. In addition, the CRL must be available for authentication to succeed.
Step 2	crl configure Example: hostname (config-ca-trustpoint)# crl configure	Enters crl configuration mode for the current trustpoint. Tip To set all CRL configuration parameters to default values, use the default command. At any time during CRL configuration, reenter this command to restart the procedure.
Step 3	Do one of the following:	
	policy cdp Example: hostname (config-ca-crl)# policy cdp	Configures retrieval policy. CRLs are retrieved only from the CRL distribution points specified in authenticated certificates. Note SCEP retrieval is not supported by distribution points specified in certificates. To continue, go to Step 5.
	policy static Example: hostname (config-ca-crl)# policy static	Configures retrieval policy. CRLs are retrieved only from URLs that you configure. To continue, go to Step 4.

	Command	Purpose
	<p>policy both</p> <p>Example: hostname (config-ca-crl)# policy both</p>	<p>Configures retrieval policy. CRLs are retrieved from CRL distribution points specified in authenticated certificates and from URLs that you configure.</p> <p>To continue, go to Step 4.</p>
Step 4	<p>url n url</p> <p>Example: hostname (config-ca-crl)# url 2 http://www.example.com</p>	<p>If you used the keywords static or both when you configured the CRL policy, you must configure URLs for CRL retrieval. You can enter up to five URLs, ranked 1 through 5. The <i>n</i> is the rank assigned to the URL. To remove a URL, use the no url n command.</p>
Step 5	<p>protocol http ldap scep</p> <p>Example: hostname (config-ca-crl)# protocol http</p>	<p>Configures the retrieval method. Specifies HTTP, LDAP, or SCEP as the CRL retrieval method.</p>
Step 6	<p>cache-time refresh-time</p> <p>Example: hostname (config-ca-crl)# cache-time 420</p>	<p>Configures how long the ASA caches CRLs for the current trustpoint. <i>refresh-time</i> is the number of minutes that the ASA waits before considering a CRL stale.</p>
Step 7	<p>Do one of the following:</p>	
	<p>enforcenextupdate</p> <p>Example: hostname (config-ca-crl)# enforcenextupdate</p>	<p>Requires the NextUpdate field in CRLs. This is the default setting.</p>
	<p>no enforcenextupdate</p> <p>Example: hostname (config-ca-crl)# no enforcenextupdate</p>	<p>Allows the NextUpdate field to be absent in CRLs.</p>
Step 8	<p>ldap-defaults server</p> <p>Example: hostname (config-ca-crl)# ldap-defaults ldap1</p>	<p>Identifies the LDAP server to the ASA if LDAP is specified as the retrieval protocol. You can specify the server by DNS hostname or by IP address. You can also provide a port number if the server listens for LDAP queries on a port other than the default of 389.</p> <p>Note If you use a hostname instead of an IP address to specify the LDAP server, make sure that you have configured the ASA to use DNS.</p>
Step 9	<p>ldap-dn admin-DN password</p> <p>Example: hostname (config-ca-crl)# ldap-dn cn=admin,ou=devtest,o=engineering c001RunZ</p>	<p>Allows CRL retrieval if the LDAP server requires credentials.</p>

	Command	Purpose
Step 10	<code>crypto ca crl request trustpoint</code> Example: hostname (config-ca-crl)# <code>crypto ca crl request Main</code>	Retrieves the current CRL from the CA represented by the specified trustpoint and tests the CRL configuration for the current trustpoint.
Step 11	<code>write memory</code> Example: hostname (config)# <code>write memory</code>	Saves the running configuration.

Exporting a Trustpoint Configuration

To export a trustpoint configuration, enter the following command:

Command	Purpose
<code>crypto ca export trustpoint</code> Example: hostname(config)# <code>crypto ca export Main</code>	Exports a trustpoint configuration with all associated keys and certificates in PKCS12 format. The ASA displays the PKCS12 data in the terminal. You can copy the data. The trustpoint data is password protected; however, if you save the trustpoint data in a file, make sure that the file is in a secure location.

Examples

The following example exports PKCS12 data for the trustpoint Main with the passphrase Wh0zits:

```
hostname (config)# crypto ca export Main pkcs12 Wh0zits
```

```
Exported pkcs12 follows:
```

```
[ PKCS12 data omitted ]
```

```
---End - This line not part of the pkcs12---
```

Importing a Trustpoint Configuration

To import a trustpoint configuration, enter the following command:

Command	Purpose
crypto ca import trustpoint pkcs12 Example: hostname(config)# crypto ca import Main pkcs12	Imports keypairs and issued certificates that are associated with a trustpoint configuration. The ASA prompts you to paste the text into the terminal in base 64 format. The key pair imported with the trustpoint is assigned a label that matches the name of the trustpoint that you create. Note If an ASA has trustpoints that share the same CA, you can use only one of the trustpoints that share the CA to validate user certificates. To control which trustpoint that shares a CA is used for validation of user certificates issued by that CA, use the support-user-cert-validation keyword.

Examples

The following example manually imports PKCS12 data to the trustpoint Main with the passphrase Wh0zits:

```
hostname (config)# crypto ca import Main pkcs12 Wh0zits
```

Enter the base 64 encoded pkcs12.

End with a blank line or the word "quit" on a line by itself:

```
[ PKCS12 data omitted ]
```

```
quit
```

```
INFO: Import PKCS12 operation completed successfully
```

The following example manually imports a certificate for the trustpoint Main:

```
hostname (config)# crypto ca import Main certificate
```

```
% The fully-qualified domain name in the certificate will be:
```

```
securityappliance.example.com
```

Enter the base 64 encoded certificate.

End with a blank line or the word "quit" on a line by itself

```
[ certificate data omitted ]
```

```
quit
```

```
INFO: Certificate successfully imported
```

Configuring CA Certificate Map Rules

You can configure rules based on the Issuer and Subject fields of a certificate. Using the rules you create, you can map IPsec peer certificates to tunnel groups with the **tunnel-group-map** command. The ASA supports one CA certificate map, which can include many rules.

To configure a CA certificate map rule, perform the following steps:

	Command	Purpose
Step 1	crypto ca certificate map <i>sequence-number</i> Example: hostname(config)# crypto ca certificate map 1	Enters CA certificate map configuration mode for the rule you want to configure and specifies the rule index number.
Step 2	issuer-name <i>DN-string</i> Example: hostname(config-ca-cert-map)# issuer-name cn=asa.example.com	Specifies the distinguished name of all issued certificates, which is also the subject-name DN of the self-signed CA certificate. Use commas to separate attribute-value pairs. Insert quotation marks around any value that includes a comma. An issuer-name must be less than 500 alphanumeric characters. The default issuer-name is <i>cn=hostame.domain-name</i> .
Step 3	subject-name attr <i>tag eq co ne nc string</i> Example: hostname(config-ca-cert-map)# subject-name attr cn eq mycert	Specifies tests that the ASA can apply to values found in the Subject field of certificates. The tests can apply to specific attributes or to the entire field. You can configure many tests per rule, and all the tests you specify with these commands must be true for a rule to match a certificate. The following are valid operators: <ul style="list-style-type: none"> • eq—The field or attribute must be identical to the value given. • ne—The field or attribute cannot be identical to the value given. • co—Part or all of the field or attribute must match the value given. • nc—No part of the field or attribute can match the value given.
Step 4	write memory Example: hostname (config)# write memory	Saves the running configuration.

Obtaining Certificates Manually

To obtain certificates manually, perform the following steps:

	Command	Purpose
Step 1	<pre>crypto ca authenticate trustpoint</pre> <p>Example:</p> <pre>hostname(config)# crypto ca authenticate Main Enter the base 64 encoded CA certificate. End with a blank line or the word "quit" on a line by itself MIIDRTCCAu+gAwIBAgIQKVCqP/KW74VP0NZzL+JbRTANBgkqhkiG 9w0BAQUFADCB [certificate data omitted] /7QEM8izy0EOTSErKu7Ng76jwf5e4qtkQ== quit</pre> <pre>INFO: Certificate has the following attributes: Fingerprint: 24b81433 409b3fd5 e5431699 8d490d34 Do you accept this certificate? [yes/no]: y Trustpoint CA certificate accepted.</pre> <pre>% Certificate successfully imported</pre>	<p>Imports the CA certificate for the configured trustpoint.</p> <p>Note This step assumes that you have already obtained a base-64 encoded CA certificate from the CA represented by the trustpoint.</p> <p>Whether a trustpoint requires that you manually obtain certificates is determined by the use of the enrollment terminal command when you configure the trustpoint. For more information, see the “Configuring Trustpoints” section on page 41-10.</p>
Step 2	<pre>crypto ca enroll trustpoint</pre> <p>Example:</p> <pre>hostname(config)# crypto ca enroll Main % Start certificate enrollment .. % The fully-qualified domain name in the certificate will be: securityappliance.example.com % Include the device serial number in the subject name? [yes/no]: n Display Certificate Request to terminal? [yes/no]: y Certificate Request follows: MIIBoDCCAQkCAQAwIzEhMB8GCSqGSIb3DQEJAhYSRmVyYWxQaXgu Y2lzY28uY29t [certificate request data omitted] jF4waw68eOxQxVmdgMWEQ+RbIOYmvt8g6hnBTrd0GdqjVLT ---End - This line not part of the certificate request---</pre> <pre>Redisplay enrollment request? [yes/no]: n</pre>	<p>Enrolls the ASA with the trustpoint. Generates a certificate for signing data and depending on the type of keys that you have configured, for encrypting data.</p> <p>If you use separate RSA keys for signing and encryption, the crypto ca enroll command displays two certificate requests, one for each key. If you use general-purpose RSA keys for both signing and encryption, the crypto ca enroll command displays one certificate request.</p> <p>To complete enrollment, obtain a certificate for all certificate requests generated by the crypto ca enroll command from the CA represented by the applicable trustpoint. Make sure that the certificate is in base-64 format.</p>

	Command	Purpose
Step 3	<p>crypto ca import trustpoint certificate</p> <p>Example: hostname (config)# crypto ca import Main certificate % The fully-qualified domain name in the certificate will be: securityappliance.example.com</p> <p>Enter the base 64 encoded certificate. End with a blank line or the word "quit" on a line by itself [certificate data omitted] quit INFO: Certificate successfully imported</p>	Imports each certificate you receive from the CA. Requests that you paste the certificate to the terminal in base-64 format.
Step 4	<p>show crypto ca server certificate</p> <p>Example: hostname(config)# show crypto ca server certificate Main</p>	Verifies that the enrollment process was successful by displaying certificate details issued for the ASA and the CA certificate for the trustpoint.
Step 5	<p>write memory</p> <p>Example: hostname(config)# write memory</p>	Saves the running configuration. Repeat these steps for each trustpoint that you configure for manual enrollment.

Obtaining Certificates Automatically with SCEP

To obtain certificates automatically using SCEP, perform the following steps:

	Command	Purpose
Step 1	<p><code>crypto ca authenticate trustpoint</code></p> <p>Example: <pre>hostname/contexta(config)# crypto ca authenticate Main</pre></p>	<p>Obtains the CA certificate for the configured trustpoint.</p> <p>Note This step assumes that you have already obtained a base-64 encoded CA certificate from the CA represented by the trustpoint.</p> <p>When you configure the trustpoint, use of the enrollment url command determines whether or not you must obtain certificates automatically via SCEP. For more information, see the “Configuring Trustpoints” section on page 41-10.</p>
Step 2	<p><code>crypto ca enroll trustpoint</code></p> <p>Example: <pre>hostname/contexta(config)# crypto ca enroll Main</pre></p>	<p>Enrolls the ASA with the trustpoint. Retrieves a certificate for signing data and depending on the type of keys that you have configured, for encrypting data. Before entering this command, contact the CA administrator, who may need to authenticate the enrollment request manually before the CA grants certificates.</p> <p>If the ASA does not receive a certificate from the CA within one minute (the default) of sending a certificate request, it resends the certificate request. The ASA continues sending a certificate request each minute until a certificate is received.</p> <p>If the fully qualified domain name configured for the trustpoint is not identical to the fully qualified domain name of the ASA, including the case of the characters, a warning appears. To resolve this issue, exit the enrollment process, make any necessary corrections, and reenter the crypto ca enroll command.</p> <p>Note If the ASA reboots after you have issued the crypto ca enroll command but before you have received the certificate, reenter the crypto ca enroll command and notify the CA administrator.</p>

	Command	Purpose
Step 3	<pre>show crypto ca server certificate</pre> <p>Example: hostname/contexta(config)# show crypto ca server certificate Main</p>	Verifies that the enrollment process was successful by displaying certificate details issued for the ASA and the CA certificate for the trustpoint.
Step 4	<pre>write memory</pre> <p>Example: hostname/contexta(config)# write memory</p>	Saves the running configuration.

Configuring Proxy Support for SCEP Requests

To configure the ASA to authenticate remote access endpoints using third-party CAs, perform the following steps:

	Command	Purpose
Step 1	<pre>crypto ikev2 enable outside client-services port portnumber</pre> <p>Example: hostname(config-tunnel-ipsec)# crypto ikev2 enable outside client-services</p>	<p>Enables client services.</p> <p>Note Needed only if you support IKEv2.</p> <p>Enter this command in tunnel-group ipsec-attributes configuration mode.</p> <p>The default port number is 443.</p>
Step 2	<pre>scep-enrollment enable</pre> <p>Example: hostname(config-tunnel-general)# scep-enrollment enable INFO: 'authentication aaa certificate' must be configured to complete setup of this option.</p>	<p>Enables SCEP enrollment for the tunnel group.</p> <p>Enter this command in tunnel-group general-attributes configuration mode.</p>
Step 3	<pre>scep-forwarding-url value URL</pre> <p>Example: hostname(config-group-policy)# scep-forwarding-url value http://ca.example.com:80/</p>	<p>Enrolls the SCEP CA for the group policy.</p> <p>Enter this command once per group policy to support a third-party digital certificate. Enter the command in group-policy general-attributes configuration mode.</p> <p><i>URL</i> is the SCEP URL on the CA.</p>
Step 4	<pre>secondary-pre-fill-username clientless hide use-common-password password</pre> <p>Example: hostname(config)# tunnel-group remotegrp webvpn-attributes hostname(config-tunnel-webvpn)# secondary-pre-fill-username clientless hide use-common-password secret</p>	<p>Supplies a common, secondary password when a certificate is unavailable for WebLaunch support of the SCEP proxy.</p> <p>You must use the hide keyword to support the SCEP proxy.</p> <p>For example, a certificate is not available to an endpoint requesting one. Once the endpoint has the certificate, AnyConnect disconnects, then reconnects to the ASA to qualify for a DAP policy that provides access to internal network resources.</p>

	Command	Purpose
Step 5	<pre>secondary-pre-fill-username ssl-client hide use-common-password password</pre> <p>Example:</p> <pre>hostname(config-tunnel-webvpn)# secondary-pre-fill-username ssl-client hide use-common-password secret</pre>	<p>Hides the secondary prefill username for AnyConnect VPN sessions.</p> <p>Despite the ssl-client keyword inherited from earlier releases, use this command to support AnyConnect sessions that use either IKEv2 or SSL.</p> <p>You must use the hide keyword to support the SCEP proxy.</p>
Step 6	<pre>secondary-username-from-certificate {use-entire-name use-script {primary_attr [secondary_attr]}} [no-certificate-fallback cisco-secure-desktop machine-unique-id]</pre> <p>Example:</p> <pre>hostname(config-tunnel-webvpn)# secondary-username-from-certificate CN no-certificate-fallback cisco-secure-desktop machine-unique-id</pre>	<p>Supplies the username when a certificate is unavailable.</p>

Enabling the Local CA Server

Before enabling the local CA server, you must first create a passphrase of at least seven characters to encode and archive a PKCS12 file that includes the local CA certificate and keypair to be generated. The passphrase unlocks the PKCS12 archive if the CA certificate or keypair is lost.

To enable the local CA server, perform the following steps:

	Command	Purpose
Step 1	<pre>crypto ca server</pre> <p>Example:</p> <pre>hostname (config)# crypto ca server</pre>	<p>Enters local ca server configuration mode. Allows you to configure and manage a local CA.</p>
Step 2	<pre>no shutdown</pre> <p>Example:</p> <pre>hostname (config-ca-server)# no shutdown</pre>	<p>Enables the local CA server. Generates the local CA server certificate, keypair and necessary database files, and archives the local CA server certificate and keypair to storage in a PKCS12 file. Requires an 8-65 alphanumeric character password. After initial startup, you can disable the local CA without being prompted for the passphrase.</p> <p>Note After you enable the local CA server, save the configuration to make sure that the local CA certificate and keypair are not lost after a reboot occurs.</p>

Examples

The following example enables the local CA server:

```
hostname (config)# crypto ca server
```

```

hostname (config-ca-server)# no shutdown

% Some server settings cannot be changed after CA certificate generation.
% Please enter a passphrase to protect the private key
% or type Return to exit

Password: caserver

Re-enter password: caserver

Keypair generation process begin. Please wait...
```

The following is sample output that shows local CA server configuration and status:

```

Certificate Server LOCAL-CA-SERVER:
  Status: enabled
  State: enabled
  Server's configuration is locked (enter "shutdown" to unlock it)
  Issuer name: CN=wz5520-1-16
  CA certificate fingerprint/thumbprint: (MD5)
    76dd1439 ac94fdbc 74a0a89f cb815acc
  CA certificate fingerprint/thumbprint: (SHA1)
    58754ffd 9f19f9fd b13b4b02 15b3e4be b70b5a83
  Last certificate issued serial number: 0x6
  CA certificate expiration timer: 14:25:11 UTC Jan 16 2008
  CRL NextUpdate timer: 16:09:55 UTC Jan 24 2007
  Current primary storage dir: flash:
```

Configuring the Local CA Server

To configure the local CA server, perform the following steps:

	Command	Purpose
Step 1	crypto ca server Example: hostname (config)# crypto ca server	Enters local CA server configuration mode. Generates the local CA.
Step 2	smtp from-address e-mail_address Example: hostname (config-ca-server) # smtp from-address SecurityAdmin@hostcorp.com	Specifies the SMTP from-address, a valid e-mail address that the local CA uses as a from address when sending e-mail messages that deliver OTPs for an enrollment invitation to users.

	Command	Purpose
Step 3	<p>subject-name-default dn</p> <p>Example: hostname (config-ca-server)# subject-name-default cn=engineer, o=asc systems, c="US"</p>	<p>(Optional) Specifies the subject-name DN that is appended to each username on issued certificates.</p> <p>The subject-name DN and the username combine to form the DN in all user certificates that are issued by the local CA server. If you do not specify a subject-name DN, you must specify the exact subject name DN to be included in a user certificate each time that you add a user to the user database.</p> <p>Note Make sure that you review all optional parameters carefully before you enable the configured local CA, because you cannot change issuer-name and keysize server values after you enable the local CA for the first time.</p>
Step 4	<p>no shutdown</p> <p>Example: hostname (config-ca-server)# no shutdown</p>	<p>Creates the self-signed certificate and associates it with the local CA on the ASA. The self-signed certificate key usage extension has key encryption, key signature, CRL signing, and certificate signing capabilities.</p> <p>Note After the self-signed local CA certificate has been generated, to change any characteristics, you must delete the existing local CA server and completely recreate it.</p> <p>The local CA server keeps track of user certificates, so the administrator can revoke or restore privileges as needed.</p>

Examples

The following example shows how to configure and enable the local CA server using the predefined default values for all required parameters:

```
hostname (config)# crypto ca server
hostname (config-ca-server) # smtp from-address SecurityAdmin@hostcorp.com
hostname (config-ca-server) # subject-name-default cn=engineer, o=asc Systems, c=US
hostname (config-ca-server) # no shutdown
```

Customizing the Local CA Server

To configure a customized local CA server, perform the following steps:

	Command	Purpose
Step 1	crypto ca server Example: hostname (config)# crypto ca server	Enters local CA server configuration mode. Allows you to configure and manage a local CA.
Step 2	issuer-name <i>DN-string</i> Example: hostname (config-ca-server)# issuer-name cn=xx5520,cn=30.132.0.25,ou=DevTest,ou=QA,o=ASC Systems	Specifies parameters that do not have default values.
Step 3	smtp subject <i>subject-line</i> Example: hostname (config-ca-server) # smtp subject Priority E-Mail: Enclosed Confidential Information is Required for Enrollment	Customizes the text that appears in the subject field of all e-mail messages sent from the local CA server
Step 4	smtp from-address <i>e-mail_address</i> Example: hostname (config-ca-server) # smtp from-address SecurityAdmin@hostcorp.com	Specifies the e-mail address that is to be used as the From: field of all e-mail messages that are generated by the local CA server.
Step 5	subject-name-default <i>dn</i> Example: hostname (config-ca-server) # subject-name default cn=engineer, o=ASC Systems, c=US	<p>Specifies an optional subject-name DN to be appended to a username on issued certificates. The default subject-name DN becomes part of the username in all user certificates issued by the local CA server.</p> <p>The allowed DN attribute keywords are as follows:</p> <ul style="list-style-type: none"> • C = Country • CN = Common Name • EA = E-mail Address • L = Locality • O = Organization Name • OU = Organization Unit • ST = State/Province • SN = Surname • ST = State/Province <p>Note If you do not specify a subject-name-default to serve as a standard subject-name default, you must specify a DN each time that you add a user.</p>

Debugging the Local CA Server

To debug the newly configured local CA server, perform the following steps:

	Command	Purpose
Step 1	crypto ca server Example: hostname (config)# crypto ca server	Enters local ca server configuration mode. Allows you to configure and manage a local CA.
Step 2	debug crypto ca server Example: hostname (config-ca-server)# debug crypto ca server	Displays debugging messages when you configure and enable the local CA server. Performs level 1 debugging functions; levels 1-255 are available. Note Debugging commands might slow down traffic on busy networks. Levels 5 and higher are reserved for raw data dumps and should be avoided during normal debugging because of excessive output.

Disabling the Local CA Server

To disable the local CA server, perform the following steps:

	Command	Purpose
Step 1	crypto ca server Example: hostname (config)# crypto ca server	Enters local ca server configuration mode. Allows you to configure and manage a local CA.
Step 2	shutdown Example: hostname (config-ca-server)# shutdown INFO: Local CA Server has been shutdown.	Disables the local CA server. Disables website enrollment and allows you to modify the local CA server configuration. Stores the current configuration and associated files. After initial startup, you can reenables the local CA without being prompted for the passphrase.

Deleting the Local CA Server

To delete an existing local CA server (either enabled or disabled), enter one of the following commands:

Command	Purpose
Do one of the following:	

Command	Purpose
no crypto ca server Example: hostname (config)# no crypto ca server	Removes an existing local CA server (either enabled or disabled). Note Deleting the local CA server removes the configuration from the ASA. After the configuration has been deleted, it is unrecoverable. Make sure that you also delete the associated local CA server database and configuration files (that is, all files with the wildcard name, LOCAL-CA-SERVER.*).
clear configure crypto ca server Example: hostname (config)# clear config crypto ca server	

Configuring Local CA Certificate Characteristics

You can configure the following characteristics of local CA certificates:

- The name of the certificate issuer as it appears on all user certificates.
- The lifetime of the local CA certificates (server and user) and the CRL.
- The length of the public and private keypairs associated with local CA and user certificates.

This section includes the following topics:

- [Configuring the Issuer Name, page 41-28](#)
- [Configuring the CA Certificate Lifetime, page 41-28](#)
- [Configuring the User Certificate Lifetime, page 41-29](#)
- [Configuring the CRL Lifetime, page 41-30](#)
- [Configuring the Server Keysize, page 41-30](#)
- [Setting Up External Local CA File Storage, page 41-31](#)
- [Downloading CRLs, page 41-33](#)
- [Storing CRLs, page 41-34](#)
- [Setting Up Enrollment Parameters, page 41-35](#)
- [Adding and Enrolling Users, page 41-36](#)
- [Renewing Users, page 41-38](#)
- [Restoring Users, page 41-39](#)
- [Removing Users, page 41-39](#)
- [Revoking Certificates, page 41-40](#)
- [Maintaining the Local CA Certificate Database, page 41-40](#)
- [Rolling Over Local CA Certificates, page 41-40](#)
- [Archiving the Local CA Server Certificate and Keypair, page 41-41](#)

Configuring the Issuer Name

To configure the certificate issuer name, perform the following steps:

	Command	Purpose
Step 1	<pre>crypto ca server</pre> <p>Example: hostname (config)# crypto ca server</p>	Enters local CA server configuration mode. Allows you to configure and manage a local CA.
Step 2	<pre>issuer-name DN-string</pre> <p>Example: hostname (config-ca-server)# issuer-name CN=xx5520,CN=30.132.0.25,ou=DevTest,ou=QA,O=ABC Systems</p>	<p>Specifies the local CA certificate subject name. The configured certificate issuer name is both the subject name and issuer name of the self-signed local CA certificate, as well as the issuer name in all issued client certificates and in the issued CRL. The default issuer name in the local CA is in the format, <i>hostname.domainname</i>.</p> <p>Note You cannot change the issuer name value after the local CA is first enabled.</p>

Configuring the CA Certificate Lifetime

To configure the local CA server certificate lifetime, perform the following steps:

	Command	Purpose
Step 1	<pre>crypto ca server</pre> <p>Example: hostname (config)# crypto ca server</p>	Enters local CA server configuration mode. Allows you to configure and manage a local CA.

	Command	Purpose
Step 2	<p>lifetime ca-certificate time</p> <p>Example: hostname (config-ca-server)# lifetime ca-certificate 365</p>	<p>Determines the expiration date included in the certificate. The default lifetime of a local CA certificate is three years.</p> <p>Make sure that you limit the validity period of the certificate to less than the recommended end date of 03:14:08 UTC, January 19, 2038.</p>
Step 3	<p>no lifetime ca-certificate</p> <p>Example: hostname (config-ca-server)# no lifetime ca-certificate</p>	<p>(Optional) Resets the local CA certificate lifetime to the default value of three years.</p> <p>The local CA server automatically generates a replacement CA certificate 30 days before it expires, which allows the replacement certificate to be exported and imported onto any other devices for certificate validation of user certificates that have been issued by the local CA certificate after the current local CA certificate has expired. The following preexpiration syslog message is generated:</p> <pre>%ASA-1-717049: Local CA Server certificate is due to expire in days days and a replacement certificate is available for export.</pre> <p>Note When notified of this automatic rollover, the administrator must make sure that the new local CA certificate is imported onto all required devices before it expires.</p>

Configuring the User Certificate Lifetime

To configure the user certificate lifetime, perform the following steps:

	Command	Purpose
Step 1	<p>crypto ca server</p> <p>Example: hostname (config)# crypto ca server</p>	<p>Enters local CA server configuration mode. Allows you to configure and manage a local CA.</p>
Step 2	<p>lifetime certificate time</p> <p>Example: hostname (config-ca-server)# lifetime certificate 60</p>	<p>Sets the length of time that you want user certificates to remain valid.</p> <p>Note Before a user certificate expires, the local CA server automatically initiates certificate renewal processing by granting enrollment privileges to the user several days ahead of the certificate expiration date, setting renewal reminders, and delivering an e-mail message that includes the enrollment username and OTP for certificate renewal. Make sure that you limit the validity period of the certificate to less than the recommended end date of 03:14:08 UTC, January 19, 2038.</p>

Configuring the CRL Lifetime

To configure the CRL lifetime, perform the following steps:

	Command	Purpose
Step 1	<pre>crypto ca server</pre> <p>Example: hostname (config)# crypto ca server</p>	Enters local CA server configuration mode. Allows you to configure and manage a local CA.
Step 2	<pre>lifetime crl time</pre> <p>Example: hostname (config-ca-server)# lifetime crl 10</p>	<p>Sets the length of time that you want the CRL to remain valid.</p> <p>The local CA updates and reissues the CRL each time that a user certificate is revoked or unrevoked, but if no revocation changes occur, the CRL is reissued automatically once each CRL lifetime. If you do not specify a CRL lifetime, the default time period is six hours.</p>
Step 3	<pre>crypto ca server crl issue</pre> <p>Example: hostname(config)# crypto ca server crl issue A new CRL has been issued.</p>	<p>Forces the issuance of a CRL at any time, which immediately updates and regenerates a current CRL to overwrite the existing CRL.</p> <p>Note Do not use this command unless the CRL file has been removed in error or has been corrupted and must be regenerated.</p>

Configuring the Server Keysize

To configure the server keysize, perform the following steps:

	Command	Purpose
Step 1	<pre>crypto ca server</pre> <p>Example: hostname (config)# crypto ca server</p>	Enters local CA server configuration mode. Allows you to configure and manage a local CA.
Step 2	<pre>keysize server</pre> <p>Example: hostname (config-ca-server)# keysize server 2048</p>	<p>Specifies the size of the public and private keys generated at user-certificate enrollment. The keypair size options are 512, 768, 1024, 2048 bits, and the default value is 1024 bits.</p> <p>Note After you have enabled the local CA, you cannot change the local CA keysize, because all issued certificates would be invalidated. To change the local CA keysize, you must delete the current local CA and reconfigure a new one.</p>

Examples

The following is sample output that shows two user certificates in the database.

```

Username: emily1
Renewal allowed until: Not Allowed
Number of times user notified: 0
PKCS12 file stored until: 12:45:52 UTC Fri Jan 4 2017
Certificates Issued:
serial:    0x71
issued:   12:45:52 UTC Thu Jan 3 2008
expired:  12:17:37 UTC Sun Dec 31 2017
status:   Not Revoked
Username: fred1
Renewal allowed until: Not Allowed
Number of times user notified: 0
PKCS12 file stored until: 12:27:59 UTC Fri Jan 4 2008
Certificates Issued:
serial:    0x2
issued:   12:27:59 UTC Thu Jan 3 2008
expired:  12:17:37 UTC Sun Dec 31 2017
status:   Not Revoked
<--- More --->

```

Setting Up External Local CA File Storage

You can store the local CA server configuration, users, issued certificates, and CRLs in the local CA server database either in flash memory or in an external local CA file system. To configure external local CA file storage, perform the following steps:

	Command	Purpose
Step 1	mount <i>name</i> type Example: hostname (config)# mount mydata type cifs	Accesses configuration mode for the specific file system type.
Step 2	mount <i>name</i> type cifs Example: hostname (config-mount-cifs)# mount mydata type cifs server 99.1.1.99 share myshare domain example.com username user6 password ***** status enable	Mounts a CIFS file system. Note Only the user who mounts a file system can unmount it with the no mount command.

	Command	Purpose
Step 3	<p>crypto ca server</p> <p>Example: hostname (config)# crypto ca server</p>	Enters local CA server configuration mode. Allows you to configure and manage a local CA.
Step 4	<p>database path mount-name directory-path</p> <p>Example: hostname (config-ca-server)# database path mydata:newuser</p>	<p>Specifies the location of <i>mydata</i>, the premounted CIFS file system to be used for the local CA server database. Establishes a path to the server and then specifies the local CA file or folder name to use for storage and retrieval. To return local CA file storage to the ASA flash memory, use the no database path command.</p> <p>Note To secure stored local CA files on an external server requires a premounted file system of file type CIFS or FTP that is username-protected and password-protected.</p>
Step 5	<p>write memory</p> <p>Example: hostname (config)# write memory</p>	<p>Saves the running configuration.</p> <p>For external local CA file storage, each time that you save the ASA configuration, user information is saved from the ASA to the premounted file system and file location, <i>mydata:newuser</i>.</p> <p>For flash memory storage, user information is saved automatically to the default location for the start-up configuration.</p>

Examples

The following example shows the list of local CA files that appear in flash memory or in external storage:

```
hostname (config-ca-server)# dir LOCAL* //
Directory of disk0:/LOCAL*

 75   -rwx  32           13:07:49 Jan 20 2007  LOCAL-CA-SERVER.ser
 77   -rwx 229           13:07:49 Jan 20 2007  LOCAL-CA-SERVER.cdb
 69   -rwx   0           01:09:28 Jan 20 2007  LOCAL-CA-SERVER.udb
 81   -rwx 232           19:09:10 Jan 20 2007  LOCAL-CA-SERVER.cr1
 72   -rwx 1603          01:09:28 Jan 20 2007  LOCAL-CA-SERVER.p12

127119360 bytes total (79693824 bytes free)
```

Downloading CRLs

To make the CRL available for HTTP download on a given interface or port, perform the following steps:

	Command	Purpose
Step 1	crypto ca server Example: hostname (config)# crypto ca server	Enters local ca server configuration mode. Allows you to configure and manage a local CA.
Step 2	publish-crl interface interface port portnumber Example: hostname (config-ca-server)# publish-crl outside 70	<p>Opens a port on an interface to make the CRL accessible from that interface. The specified interface and port are used to listen for incoming requests for the CRL. The interface and optional port selections are as follows:</p> <ul style="list-style-type: none"> • inside—Name of interface/GigabitEthernet0/1 • management—Name of interface/Management0/0 • outside—Name of interface/GigabitEthernet0/0 • Port numbers can range from 1-65535. TCP port 80 is the HTTP default port number. <p>Note If you do not specify this command, the CRL is not accessible from the CDP location, because this command is required to open an interface to download the CRL file.</p> <p>The CDP URL can be configured to use the IP address of an interface, and the path of the CDP URL and the filename can also be configured (for example, <code>http://10.10.10.100/user8/my_crl_file</code>).</p> <p>In this case, only the interface with that IP address configured listens for CRL requests, and when a request comes in, the ASA matches the path, <code>/user8/my_crl_file</code> to the configured CDP URL. When the path matches, the ASA returns the stored CRL file.</p> <p>Note The protocol must be HTTP, so the prefix displayed is <code>http://</code>.</p>

Storing CRLs

To establish a specific location for the automatically generated CRL of the local CA, perform the following steps:

	Command	Purpose
Step 1	<pre>crypto ca server</pre> <p>Example: hostname (config)# crypto ca server</p>	<p>Enters local ca server configuration mode. Allows you to configure and manage a local CA.</p>
Step 2	<pre>cdp-url url</pre> <p>Example: hostname(config-ca-server)# cdp-url http://172.16.1.1/pathname/myca.crl</p>	<p>Specifies the CDP to be included in all issued certificates. If you do not configure a specific location for the CDP, the default URL location is <code>http://hostname.domain/+CSCOCA+/asa_ca.crl</code>.</p> <p>The local CA updates and reissues the CRL each time a user certificate is revoked or unrevoked. If no revocation changes occur, the CRL is reissued once each CRL lifetime.</p> <p>If this command is set to serve the CRL directly from the local CA ASA, see the “Downloading CRLs” section on page 41-33 for instructions about opening a port on an interface to make the CRL accessible from that interface.</p> <p>The CRL exists for other devices to validate the revocation of certificates issued by the local CA. In addition, the local CA tracks all issued certificates and status within its own certificate database. Revocation checking is performed when a validating party needs to validate a user certificate by retrieving the revocation status from an external server, which might be the CA that issued the certificate or a server designated by the CA.</p>

Setting Up Enrollment Parameters

To set up enrollment parameters, perform the following steps:

	Command	Purpose
Step 1	crypto ca server Example: hostname (config)# crypto ca server	Enters local ca server configuration mode. Allows you to configure and manage a local CA.
Step 2	otp expiration timeout Example: hostname(config-ca-server)# otp expiration 24	Specifies the number of hours that an issued OTP for the local CA enrollment page is valid. The default expiration time is 72 hours. Note The user OTP to enroll for a certificate on the enrollment website is also used as the password to unlock the PKCS12 file that includes the issued certificate and keypair for the specified user.
Step 3	enrollment-retrieval timeout Example: hostname(config-ca-server)# enrollment-retrieval 120	Specifies the number of hours an already-enrolled user can retrieve a PKCS12 enrollment file. This time period begins when the user is successfully enrolled. The default retrieval period is 24 hours. Valid values for the retrieval period range from 1 to 720 hours. The enrollment retrieval period is independent of the OTP expiration period. After the enrollment retrieval time expires, the user certificate and keypair are no longer available. The only way a user may receive a certificate is for the administrator to reinitialize certificate enrollment and allow a user to log in again.

Adding and Enrolling Users

To add a user who is eligible for enrollment in the local CA database, perform the following steps:

	Command	Purpose
Step 1	<pre>crypto ca server user-db add username [dn dn] [email emailaddress]</pre> <p>Example:</p> <pre>hostname (config-ca-server)# crypto ca server user-db add user1 dn user1@example.com, Engineer, Example Company, US, email user1@example.com</pre>	<p>Adds a new user to the local CA database. Options are as follows:</p> <ul style="list-style-type: none"> • <i>username</i>—A string of 4-64 characters, which is the simple username for the user being added. The username can be an e-mail address, which then is used to contact the user as necessary for enrollment invitations. • <i>dn</i>—The distinguished name, a global, authoritative name of an entry in the OSI Directory (X.500) (for example, cn=user1@example.com, cn=Engineer, o=Example Company, c=US). • <i>e-mail-address</i>—The e-mail address of the new user to which OTPs and notices are to be sent.
Step 2	<pre>crypto ca server user-db allow user</pre> <p>Example:</p> <pre>hostname (config-ca-server)# crypto ca server user-db allow user6</pre>	<p>Provides user privileges to a newly added user.</p>
Step 3	<pre>crypto ca server user-db email-otp username</pre> <p>Example:</p> <pre>hostname (config-ca-server)# crypto ca server user-db email-otp exampleuser1</pre>	<p>Notifies a user in the local CA database to enroll and download a user certificate, which automatically e-mails the OTP to that user.</p> <p>Note When an administrator wants to notify a user through e-mail, the administrator must specify the e-mail address in the username field or in the e-mail field when adding that user.</p>

	Command	Purpose
Step 4	<pre>crypto ca server user-db show-otp</pre> <p>Example: <pre>hostname (config-ca-server)# crypto ca server user-db show-otp</pre></p>	Shows the issued OTP.
Step 5	<pre>otp expiration timeout</pre> <p>Example: <pre>hostname (config-ca-server)# otp expiration 24</pre></p>	<p>Sets the enrollment time limit in hours. The default expiration time is 72 hours. The otp expiration command defines the amount of time that the OTP is valid for user enrollment. This time period begins when the user is allowed to enroll.</p> <p>After a user enrolls successfully within the time limit and with the correct OTP, the local CA server creates a PKCS12 file, which includes a keypair for the user and a user certificate that is based on the public key from the keypair generated and the subject-name DN specified when the user is added. The PKCS12 file contents are protected by a passphrase, the OTP. The OTP can be handled manually, or the local CA can e-mail this file to the user to download after the administrator allows enrollment.</p> <p>The PKCS12 file is saved to temporary storage with the name, <i>username.p12</i>. With the PKCS12 file in storage, the user can return within the enrollment-retrieval time period to download the PKCS12 file as many times as needed. When the time period expires, the PKCS12 file is removed from storage automatically and is no longer available to download.</p> <p>Note If the enrollment period expires before the user retrieves the PKCS12 file that includes the user certificate, enrollment is not permitted.</p>

Renewing Users

To specify the timing of renewal notices, perform the following steps:

	Command	Purpose
Step 1	<pre>crypto ca server</pre> <p>Example: hostname (config)# crypto ca server</p>	Enters local CA server configuration mode. Allows you to configure and manage a local CA.
Step 2	<pre>renewal-reminder time</pre> <p>Example: hostname (config-ca-server)# renewal-reminder 7</p>	<p>Specifies the number of days (1-90) before the local CA certificate expires that an initial reminder to reenroll is sent to certificate owners. If a certificate expires, it becomes invalid.</p> <p>Renewal notices and the times they are e-mailed to users are variable, and can be configured by the administrator during local CA server configuration.</p> <p>Three reminders are sent. An e-mail is automatically sent to the certificate owner for each of the three reminders, provided an e-mail address is specified in the user database. If no e-mail address exists for the user, a syslog message alerts you of the renewal requirement.</p> <p>The ASA automatically grants certificate renewal privileges to any user who holds a valid certificate that is about to expire, as long as the user still exists in the user database. Therefore, if an administrator does not want to allow a user to renew automatically, the administrator must remove the user from the database before the renewal time period.</p>

Restoring Users

To restore a user and a previously revoked certificate that was issued by the local CA server, perform the following steps:

	Command	Purpose
Step 1	crypto ca server Example: hostname (config)# crypto ca server	Enters local ca server configuration mode. Allows you to configure and manage a local CA.
Step 2	crypto ca server unrevoke cert-serial-no Example: hostname (config)# crypto ca server unrevoke 782ea09f	Restores a user and unrevokes a previously revoked certificate that was issued by the local CA server. The local CA maintains a current CRL with serial numbers of all revoked user certificates. This list is available to external devices and can be retrieved directly from the local CA if it is configured to do so with the cdp-url command and the publish-crl command. When you revoke (or unrevoke) any current certificate by certificate serial number, the CRL automatically reflects these changes.

Removing Users

To delete a user from the user database by username, perform the following steps:

	Command	Purpose
Step 1	crypto ca server Example: hostname (config)# crypto ca server	Enters local ca server configuration mode. Allows you to configure and manage a local CA.
Step 2	crypto ca server user-db remove username Example: hostname (config)# crypto ca server user-db remove user1	Removes a user from the user database and allows revocation of any valid certificates that were issued to that user.

Revoking Certificates

To revoke a user certificate, perform the following steps:

	Command	Purpose
Step 1	<pre>crypto ca server</pre> <p>Example: hostname (config)# crypto ca server</p>	Enters local ca server configuration mode. Allows you to configure and manage a local CA.
Step 2	<pre>crypto ca server revoke cert-serial-no</pre> <p>Example: hostname (config-ca-server)# crypto ca server revoke 782ea09f</p>	Enters the certificate serial number in hexadecimal format. Marks the certificate as revoked in the certificate database on the local CA server and in the CRL, which is automatically reissued. <p>Note The password is also required if the certificate for the ASA needs to be revoked, so make sure that you record it and store it in a safe place.</p>

Maintaining the Local CA Certificate Database

To maintain the local CA certificate database, make sure that you save the certificate database file, LOCAL-CA-SERVER.cdb, with the **write memory** command each time that a change to the database occurs. The local CA certificate database includes the following files:

- The LOCAL-CA-SERVER.p12 file is the archive of the local CA certificate and keypair that is generated when the local CA server is initially enabled.
- The LOCAL-CA-SERVER.crl file is the actual CRL.
- The LOCAL-CA-SERVER.ser file keeps track of the issued certificate serial numbers.

Rolling Over Local CA Certificates

Thirty days before the local CA certificate expires, a rollover replacement certificate is generated, and a syslog message informs the administrator that it is time for local CA rollover. The new local CA certificate must be imported onto all necessary devices before the current certificate expires. If the administrator does not respond by installing the rollover certificate as the new local CA certificate, validations may fail.

The local CA certificate rolls over automatically after expiration using the same keypair. The rollover certificate is available for export in base 64 format.

Examples

The following example shows a base 64 encoded local CA certificate:

```
MIIXlwIBAzCCF1EGCSqGSIb3DQEHAaCCF0IEghe+MIIXOjCCFzYGCsGSIb3DQEHBqCCFycwghc jAgEAMIIXHAYJKo
ZlIhvcNAQcBMBsGCiqGSIb3DQEAMwDQIQIjph4SxJJoyTgCAQGAghbw3v4bFy+GGG2dJnB4OLphsUM+IG3SDoiDwZG9
n1SvtMieoxd7Hxknxbum06JDrujWktHBIqkrm+td34qlNE1iGeP2YC94/NQ2z+4kS+uZzwcRh11KEZTS1E4L0fSaC3
uMTxJq2NUHYWmoc8pi4CIeLj3h7VVMY6qbx2AC8I+q57+QG5vG515Hi5imwtYfaWwPEdPQxaWZPrzoG1J8BFqdPa1j
BGhAzzuSmElm3j/2dQ3Atro1G9nIsRHgV39fcBgwz4fEabHG7/Vanb+fj81d5n1oiJjDYYbP86tVbZ2yOVZR6aKFVI
0b2AfCr6Pbwfc9U8Z/aF3BCyM2sN2xPJrXva94CaYrQyotZdAkSYA5KWSyEcgdqmuBeGDKOncTknfgY0XM+fG5rb3
qAXy1GkjyFI5Bm9Do6RUR0oG1DSrQrKeq/hj...
```

END OF CERTIFICATE

Archiving the Local CA Server Certificate and Keypair

To archive the local CA server certificate and keypair, enter the following command:

Command	Purpose
copy Example: hostname# copy LOCAL-CA-SERVER_0001.p12 tftp://10.1.1.22/user6/	Copies the local CA server certificate and keypair and all files from the ASA using either FTP or TFTP. Note Make sure that you back up all local CA files as often as possible.

Monitoring Digital Certificates

To display certificate configuration and database information, enter one or more of the following commands:

Command	Purpose
show crypto ca server	Shows local CA configuration and status.
show crypto ca server cert-db	Shows user certificates issued by the local CA.
show crypto ca server certificate	Shows local CA certificates on the console in base 64 format and the rollover certificate when available, including the rollover certificate thumbprint for verification of the new certificate during import onto other devices.
show crypto ca server crl	Shows CRLs.
show crypto ca server user-db	Shows users and their status, which can be used with the following qualifiers to reduce the number of displayed records: <ul style="list-style-type: none"> • allowed. Shows only users currently allowed to enroll. • enrolled. Shows only users that are enrolled and hold a valid certificate • expired. Shows only users holding expired certificates. • on-hold. Lists only users without a certificate and not currently allowed to enroll.
show crypto ca server user-db allowed	Shows users who are eligible to enroll.
show crypto ca server user-db enrolled	Shows enrolled users with valid certificates.
show crypto ca server user-db expired	Shows users with expired certificates.
show crypto ca server user-db on-hold	Shows users without certificates who are not allowed to enroll.
show crypto key <i>name of key</i>	Shows key pairs that you have generated.
show running-config	Shows local CA certificate map rules.

Examples

The following example shows an RSA general-purpose key:

```
hostname/contexta(config)# show crypto key mypubkey
Key pair was generated at: 16:39:47 central Feb 10 2010
Key name: <Default-RSA-Key>
Usage: General Purpose Key
Modulus Size (bits): 1024
Key Data:

30819f30 0d06092a 864886f7 0d010101 05000381 8d003081 89028181 00ea51b7
0781848f 78bccac2 4a1b5b8d 2f3e30b4 4cae9f86 f4485207 159108c9 f5e49103
9eeb0f5d 45fd1811 3b4aafce 292b3b64 b4124a6f 7a777b08 75b88df1 8092a9f8
5508e9e5 2c271245 7fd1c0c3 3aaf1e04 c7c4efa4 600f4c4a 6afe56ad c1d2c01c
e08407dd 45d9e36e 8cc0bfef 14f9e6ac eca141e4 276d7358 f7f50d13 79020301 0001
Key pair was generated at: 16:34:54 central Feb 10 2010
```

The following example shows the local CA CRL:

```
hostname (config)# show crypto ca server crl
Certificate Revocation List:
  Issuer: cn=xx5520-1-3-2007-1
  This Update: 13:32:53 UTC Jan 4 2010
  Next Update: 13:32:53 UTC Feb 3 2010
  Number of CRL entries: 2
  CRL size: 270 bytes
Revoked Certificates:
  Serial Number: 0x6f
  Revocation Date: 12:30:01 UTC Jan 4 2010
  Serial Number: 0x47
  Revocation Date: 13:32:48 UTC Jan 4 2010
```

The following example shows one user on-hold:

```
hostname (config)# show crypto ca server user-db on-hold
username: wilma101
email: <None>
dn: <None>
allowed: <not allowed>
notified: 0
hostname (config)#
```

The following example shows output of the **show running-config** command, in which local CA certificate map rules appear:

```
crypto ca certificate map 1
  issuer-name co asc
  subject-name attr ou eq Engineering
```

Feature History for Certificate Management

Table 41-1 lists each feature change and the platform release in which it was implemented.

Table 41-1 Feature History for Certificate Management

Feature Name	Platform Releases	Feature Information
Certificate management	7.0(1)	Digital certificates (including CA certificates, identity certificates, and code signer certificates) provide digital identification for authentication. A digital certificate includes information that identifies a device or user, such as the name, serial number, company, department, or IP address. CAs are trusted authorities that “sign” certificates to verify their authenticity, thereby guaranteeing the identity of the device or user. CAs issue digital certificates in the context of a PKI, which uses public-key or private-key encryption to ensure security.
Certificate management	7.2(1)	We introduced the following commands: issuer-name <i>DN-string</i>, revocation-check crl none, revocation-check crl, revocation-check none We deprecated the following commands: crl {required optional nocheck} .

Table 41-1 Feature History for Certificate Management (continued)

Feature Name	Platform Releases	Feature Information
Certificate management	8.0(2)	<p>We introduced the following commands:</p> <p>cdp-url, crypto ca server, crypto ca server crl issue, crypto ca server revoke <i>cert-serial-no</i>, crypto ca server unrevoke <i>cert-serial-no</i>, crypto ca server user-db add <i>user [dn dn] [email e-mail-address]</i>, crypto ca server user-db allow {<i>username</i> all-unenrolled all-certholders} [display-otp] [email-otp] [replace-otp], crypto ca server user-db email-otp {<i>username</i> all-unenrolled all-certholders}, crypto ca server user-db remove <i>username</i>, crypto ca server user-db show-otp {<i>username</i> all-certholders all-unenrolled}, crypto ca server user-db write, [no] database path <i>mount-name directory-path</i>, debug crypto ca server [<i>level</i>], lifetime {ca-certificate certificate crl} <i>time</i>, no shutdown, otp expiration <i>timeout</i>, renewal-reminder <i>time</i>, show crypto ca server, show crypto ca server cert-db [user <i>username</i> allowed enrolled expired on-hold] [serial <i>certificate-serial-number</i>], show crypto ca server certificate, show crypto ca server crl, show crypto ca server user-db [expired allowed on-hold enrolled], show crypto key <i>name of key</i>, show running-config, shutdown.</p>
SCEP proxy	8.4(1)	<p>We introduced this feature, which provides secure deployment of device certificates from third-party CAs.</p> <p>We introduced the following commands:</p> <p>crypto ikev2 enable outside client-services port <i>portnumber</i>, scep-enrollment enable, scep-forwarding-url value <i>URL</i>, secondary-pre-fill-username clientless hide use-common-password <i>password</i>, secondary-pre-fill-username ssl-client hide use-common-password <i>password</i>, secondary-username-from-certificate {use-entire-name use-script {<i>primary_attr</i> [<i>secondary_attr</i>]}} [no-certificate-fallback cisco-secure-desktop machine-unique-id].</p>



PART 10

Configuring Application Inspection



CHAPTER 42

Getting Started with Application Layer Protocol Inspection

This chapter describes how to configure application layer protocol inspection. Inspection engines are required for services that embed IP addressing information in the user data packet or that open secondary channels on dynamically assigned ports. These protocols require the ASA to do a deep packet inspection instead of passing the packet through the fast path (see the [“Stateful Inspection Overview” section on page 1-27](#) for more information about the fast path). As a result, inspection engines can affect overall throughput. Several common inspection engines are enabled on the ASA by default, but you might need to enable others depending on your network.

This chapter includes the following sections:

- [Information about Application Layer Protocol Inspection, page 42-1](#)
- [Guidelines and Limitations, page 42-3](#)
- [Default Settings, page 42-4](#)
- [Configuring Application Layer Protocol Inspection, page 42-6](#)

Information about Application Layer Protocol Inspection


This section includes the following topics:

- [How Inspection Engines Work, page 42-1](#)
- [When to Use Application Protocol Inspection, page 42-2](#)

How Inspection Engines Work

As illustrated in [Figure 42-1](#), the ASA uses three databases for its basic operation:

- Access lists—Used for authentication and authorization of connections based on specific networks, hosts, and services (TCP/UDP port numbers).
- Inspections—Contains a static, predefined set of application-level inspection functions.
- Connections (XLATE and CONN tables)—Maintains state and other information about each established connection. This information is used by the Adaptive Security Algorithm and cut-through proxy to efficiently forward traffic within established sessions.

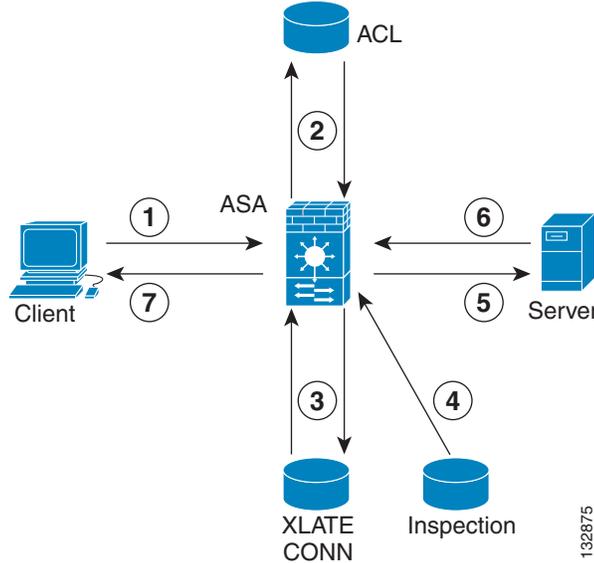Figure 42-1 How Inspection Engines Work

In [Figure 42-1](#), operations are numbered in the order they occur, and are described as follows:

1. A TCP SYN packet arrives at the ASA to establish a new connection.
2. The ASA checks the access list database to determine if the connection is permitted.
3. The ASA creates a new entry in the connection database (XLATE and CONN tables).
4. The ASA checks the Inspections database to determine if the connection requires application-level inspection.
5. After the application inspection engine completes any required operations for the packet, the ASA forwards the packet to the destination system.
6. The destination system responds to the initial request.
7. The ASA receives the reply packet, looks up the connection in the connection database, and forwards the packet because it belongs to an established session.

The default configuration of the ASA includes a set of application inspection entries that associate supported protocols with specific TCP or UDP port numbers and that identify any special handling required.

When to Use Application Protocol Inspection

When a user establishes a connection, the ASA checks the packet against access lists, creates an address translation, and creates an entry for the session in the fast path, so that further packets can bypass time-consuming checks. However, the fast path relies on predictable port numbers and does not perform address translations inside a packet.

Many protocols open secondary TCP or UDP ports. The initial session on a well-known port is used to negotiate dynamically assigned port numbers.

Other applications embed an IP address in the packet that needs to match the source address that is normally translated when it goes through the ASA.

If you use applications like these, then you need to enable application inspection.

When you enable application inspection for a service that embeds IP addresses, the ASA translates embedded addresses and updates any checksum or other fields that are affected by the translation.

When you enable application inspection for a service that uses dynamically assigned ports, the ASA monitors sessions to identify the dynamic port assignments, and permits data exchange on these ports for the duration of the specific session.

Guidelines and Limitations

This section includes the guidelines and limitations for this feature.

Context Mode Guidelines

Supported in single and multiple context mode.

Firewall Mode Guidelines

Supported in routed and transparent firewall mode.

Failover Guidelines

State information for multimedia sessions that require inspection are not passed over the state link for stateful failover. The exception is GTP, which is replicated over the state link.

IPv6 Guidelines

Supports IPv6 for the following inspections:

- FTP
- HTTP
- ICMP
- SIP
- SMTP
- IPsec pass-through

Additional Guidelines and Limitations

Some inspection engines do not support PAT, NAT, outside NAT, or NAT between same security interfaces. See [“Default Settings”](#) for more information about NAT support.

For all the application inspections, the adaptive security appliance limits the number of simultaneous, active data connections to 200 connections. For example, if an FTP client opens multiple secondary connections, the FTP inspection engine allows only 200 active connections and the 201 connection is dropped and the adaptive security appliance generates a system error message.

Inspected protocols are subject to advanced TCP-state tracking, and the TCP state of these connections is not automatically replicated. While these connections are replicated to the standby unit, there is a best-effort attempt to re-establish a TCP state.

Inspection Reset Behavior

When you configure an inspection engine to use a reset action and a packet triggers a reset, the ASA sends a TCP reset under the following conditions:

- The ASA sends a TCP reset to the inside host when the **service resetoutbound** command is enabled. (The **service resetoutbound** command is disabled by default.)

- The ASA sends a TCP reset to the outside host when the **service resetinbound** command is enabled. (The **service resetinbound** command is disabled by default.)

For more information, see the **service** command in the ASA command reference.

This behavior ensures that a reset action will reset the connections on the ASA and on inside servers; therefore countering denial of service attacks. For outside hosts, the ASA does not send a reset by default and information is not revealed through a TCP reset.

Default Settings

By default, the configuration includes a policy that matches all default application inspection traffic and applies inspection to the traffic on all interfaces (a global policy). Default application inspection traffic includes traffic to the default ports for each protocol. You can only apply one global policy, so if you want to alter the global policy, for example, to apply inspection to non-standard ports, or to add inspections that are not enabled by default, you need to either edit the default policy or disable it and apply a new one.

Table 42-1 lists all inspections supported, the default ports used in the default class map, and the inspection engines that are on by default, shown in bold. This table also notes any NAT limitations.

Table 42-1 Supported Application Inspection Engines

Application ¹	Default Port	NAT Limitations	Standards ²	Comments
CTIQBE	TCP/2748	No extended PAT.	—	—
DCERPC	TCP/135	—	—	—
DNS over UDP	UDP/53	No NAT support is available for name resolution through WINS.	RFC 1123	No PTR records are changed.
FTP	TCP/21	—	RFC 959	—
GTP	UDP/3386 UDP/2123	No extended PAT.	—	Requires a special license.
H.323 H.225 and RAS	TCP/1720 UDP/1718 UDP (RAS) 1718-1719	No NAT on same security interfaces. No static PAT. No extended PAT.	ITU-T H.323, H.245, H225.0, Q.931, Q.932	—
HTTP	TCP/80	—	RFC 2616	Beware of MTU limitations stripping ActiveX and Java. If the MTU is too small to allow the Java or ActiveX tag to be included in one packet, stripping may not occur.
ICMP	—	—	—	All ICMP traffic is matched in the default class map.
ICMP ERROR	—	—	—	All ICMP traffic is matched in the default class map.
ILS (LDAP)	TCP/389	No extended PAT.	—	—
Instant Messaging (IM)	Varies by client	No extended PAT.	RFC 3860	—

Table 42-1 Supported Application Inspection Engines (continued)

Application ¹	Default Port	NAT Limitations	Standards ²	Comments
IP Options	—	—	RFC 791, RFC 2113	All IP Options traffic is matched in the default class map.
MGCP	UDP/2427, 2727	No extended PAT.	RFC 2705bis-05	—
MMP	TCP 5443	No extended PAT.	—	—
NetBIOS Name Server over IP	UDP/137, 138 (Source ports)	No extended PAT.	—	NetBIOS is supported by performing NAT of the packets for NBNS UDP port 137 and NBDS UDP port 138.
PPTP	TCP/1723	—	RFC 2637	—
RADIUS Accounting	1646	—	RFC 2865	—
RSH	TCP/514	No PAT	Berkeley UNIX	—
RTSP	TCP/554	No extended PAT. No outside NAT.	RFC 2326, 2327, 1889	No handling for HTTP cloaking.
SIP	TCP/5060 UDP/5060	No outside NAT. No NAT on same security interfaces. No extended PAT.	RFC 2543	—
SKINNY (SCCP)	TCP/2000	No outside NAT. No NAT on same security interfaces. No extended PAT.	—	Does not handle TFTP uploaded Cisco IP Phone configurations under certain circumstances.
SMTP and ESMTP	TCP/25	—	RFC 821, 1123	—
SNMP	UDP/161, 162	No NAT or PAT.	RFC 1155, 1157, 1212, 1213, 1215	v.2 RFC 1902-1908; v.3 RFC 2570-2580.
SQL*Net	TCP/1521	No extended PAT.	—	v.1 and v.2.
Sun RPC over UDP and TCP	UDP/111	No extended PAT.	—	The default rule includes UDP port 111; if you want to enable Sun RPC inspection for TCP port 111, you need to create a new rule that matches TCP port 111 and performs Sun RPC inspection.
TFTP	UDP/69	—	RFC 1350	Payload IP addresses are not translated.
WAAS	—	No extended PAT.	—	—
XDCMP	UDP/177	No extended PAT.	—	—

1. Inspection engines that are enabled by default for the default port are in bold.

2. The ASA is in compliance with these standards, but it does not enforce compliance on packets being inspected. For example, FTP commands are supposed to be in a particular order, but the ASA does not enforce the order.

The default policy configuration includes the following commands:

```

class-map inspection_default
  match default-inspection-traffic
policy-map type inspect dns preset_dns_map
  parameters
    message-length maximum 512
policy-map global_policy
  class inspection_default
    inspect dns preset_dns_map
    inspect ftp
    inspect h323 h225
    inspect h323 ras
    inspect rsh
    inspect rtsp
    inspect esmtp
    inspect sqlnet
    inspect skinny
    inspect sunrpc
    inspect xdmcp
    inspect sip
    inspect netbios
    inspect tftp
service-policy global_policy global

```

Configuring Application Layer Protocol Inspection

This feature uses Modular Policy Framework to create a service policy. Service policies provide a consistent and flexible way to configure ASA features. For example, you can use a service policy to create a timeout configuration that is specific to a particular TCP application, as opposed to one that applies to all TCP applications. See [Chapter 32, “Configuring a Service Policy Using the Modular Policy Framework,”](#) for more information. For some applications, you can perform special actions when you enable inspection. See [Chapter 32, “Configuring a Service Policy Using the Modular Policy Framework,”](#) for more information.

Inspection is enabled by default for some applications. See the [“Default Settings”](#) section for more information. Use this section to modify your inspection policy.

Detailed Steps

-
- Step 1** To identify the traffic to which you want to apply inspections, add either a Layer 3/4 class map for through traffic or a Layer 3/4 class map for management traffic. See the [“Creating a Layer 3/4 Class Map for Through Traffic”](#) section on page 32-12 and [“Creating a Layer 3/4 Class Map for Management Traffic”](#) section on page 32-14 for detailed information. The management Layer 3/4 class map can be used only with the RADIUS accounting inspection.

The default Layer 3/4 class map for through traffic is called “inspection_default.” It matches traffic using a special **match** command, **match default-inspection-traffic**, to match the default ports for each application protocol. This traffic class (along with **match any**, which is not typically used for inspection) matches both IPv4 and IPv6 traffic for inspections that support IPv6. See the [“Guidelines and Limitations”](#) section on page 42-3 for a list of IPv6-enabled inspections.

You can specify a **match access-list** command along with the **match default-inspection-traffic** command to narrow the matched traffic to specific IP addresses. Because the **match default-inspection-traffic** command specifies the ports to match, any ports in the access list are ignored.

**Tip**

We suggest that you only inspect traffic on ports on which you expect application traffic; if you inspect all traffic, for example using **match any**, the ASA performance can be impacted.

If you want to match non-standard ports, then create a new class map for the non-standard ports. See the “[Default Settings](#)” section on page 42-4 for the standard ports for each inspection engine. You can combine multiple class maps in the same policy if desired, so you can create one class map to match certain traffic, and another to match different traffic. However, if traffic matches a class map that contains an inspection command, and then matches another class map that also has an inspection command, only the first matching class is used. For example, SNMP matches the `inspection_default` class. To enable SNMP inspection, enable SNMP inspection for the default class in [Step 5](#). Do not add another class that matches SNMP.

For example, to limit inspection to traffic from 10.1.1.0 to 192.168.1.0 using the default class map, enter the following commands:

```
hostname(config)# access-list inspect extended permit ip 10.1.1.0 255.255.255.0
192.168.1.0 255.255.255.0
hostname(config)# class-map inspection_default
hostname(config-cmap)# match access-list inspect
```

View the entire class map using the following command:

```
hostname(config-cmap)# show running-config class-map inspection_default
!
class-map inspection_default
  match default-inspection-traffic
  match access-list inspect
!
```

To inspect FTP traffic on port 21 as well as 1056 (a non-standard port), create an access list that specifies the ports, and assign it to a new class map:

```
hostname(config)# access-list ftp_inspect extended permit tcp any any eq 21
hostname(config)# access-list ftp_inspect extended permit tcp any any eq 1056
hostname(config)# class-map new_inspection
hostname(config-cmap)# match access-list ftp_inspect
```

Step 2 (Optional) Some inspection engines let you control additional parameters when you apply the inspection to the traffic. See the following sections to configure an inspection policy map for your application:

- DCERPC—See the “[Configuring a DCERPC Inspection Policy Map for Additional Inspection Control](#)” section on page 46-2
- DNS—See the “[Configuring a DNS Inspection Policy Map for Additional Inspection Control](#)” section on page 43-7
- ESMTP—See the “[Configuring an ESMTP Inspection Policy Map for Additional Inspection Control](#)” section on page 43-32
- FTP—See the “[Configuring an FTP Inspection Policy Map for Additional Inspection Control](#)” section on page 43-12.
- GTP—See the “[Configuring a GTP Inspection Policy Map for Additional Inspection Control](#)” section on page 46-4.
- H323—See the “[Configuring an H.323 Inspection Policy Map for Additional Inspection Control](#)” section on page 44-6
- HTTP—See the “[Configuring an HTTP Inspection Policy Map for Additional Inspection Control](#)” section on page 43-17.

- Instant Messaging—See the “Configuring an Instant Messaging Inspection Policy Map for Additional Inspection Control” section on page 43-21
- IP Options—See the “Configuring an IP Options Inspection Policy Map for Additional Inspection Control” section on page 43-25
- MGCP—See the “Configuring an MGCP Inspection Policy Map for Additional Inspection Control” section on page 44-13.
- NetBIOS—See the “Configuring a NetBIOS Inspection Policy Map for Additional Inspection Control” section on page 43-29
- RADIUS Accounting—See the “Configuring a RADIUS Inspection Policy Map for Additional Inspection Control” section on page 46-10
- RTSP—See the “Configuring an RTSP Inspection Policy Map for Additional Inspection Control” section on page 44-16
- SIP—See the “Configuring a SIP Inspection Policy Map for Additional Inspection Control” section on page 44-20
- Skinny—See the “Configuring a Skinny (SCCP) Inspection Policy Map for Additional Inspection Control” section on page 44-26
- SNMP—See the “Configuring an SNMP Inspection Policy Map for Additional Inspection Control” section on page 46-11.

Step 3 To add or edit a Layer 3/4 policy map that sets the actions to take with the class map traffic, enter the following command:

```
hostname(config)# policy-map name
hostname(config-pmap)#
```

The default policy map is called “global_policy.” This policy map includes the default inspections listed in the “Default Settings” section on page 42-4. If you want to modify the default policy (for example, to add or delete an inspection, or to identify an additional class map for your actions), then enter **global_policy** as the name.

Step 4 To identify the class map from [Step 1](#) to which you want to assign an action, enter the following command:

```
hostname(config-pmap)# class class_map_name
hostname(config-pmap-c)#
```

If you are editing the default policy map, it includes the `inspection_default` class map. You can edit the actions for this class by entering **inspection_default** as the name. To add an additional class map to this policy map, identify a different name. You can combine multiple class maps in the same policy if desired, so you can create one class map to match certain traffic, and another to match different traffic. However, if traffic matches a class map that contains an inspection command, and then matches another class map that also has an inspection command, only the first matching class is used. For example, SNMP matches the `inspection_default` class map. To enable SNMP inspection, enable SNMP inspection for the default class in [Step 5](#). Do not add another class that matches SNMP.

Step 5 Enable application inspection by entering the following command:

```
hostname(config-pmap-c)# inspect protocol
```

The *protocol* is one of the following values:

Table 42-2 Protocol Keywords

Keywords	Notes
ctiqbe	—
dcerpc [<i>map_name</i>]	If you added a DCERPC inspection policy map according to “ Configuring a DCERPC Inspection Policy Map for Additional Inspection Control ” section on page 46-2, identify the map name in this command.
dns [<i>map_name</i>] [dynamic-filter-snoop]	If you added a DNS inspection policy map according to “ Configuring a DNS Inspection Policy Map for Additional Inspection Control ” section on page 43-7, identify the map name in this command. The default DNS inspection policy map name is “preset_dns_map.” The default inspection policy map sets the maximum DNS packet length to 512 bytes. To enable DNS snooping for the Botnet Traffic Filter, enter the dynamic-filter-snoop keyword. See the “ Enabling DNS Snooping ” section on page 55-10 for more information.
esmtip [<i>map_name</i>]	If you added an ESMTP inspection policy map according to “ Configuring an ESMTP Inspection Policy Map for Additional Inspection Control ” section on page 43-32, identify the map name in this command.
ftp [strict [<i>map_name</i>]]	Use the strict keyword to increase the security of protected networks by preventing web browsers from sending embedded commands in FTP requests. See the “ Using the strict Option ” section on page 43-11 for more information. If you added an FTP inspection policy map according to “ Configuring an FTP Inspection Policy Map for Additional Inspection Control ” section on page 43-12, identify the map name in this command.
gtp [<i>map_name</i>]	If you added a GTP inspection policy map according to the “ Configuring a GTP Inspection Policy Map for Additional Inspection Control ” section on page 46-4, identify the map name in this command.
h323 h225 [<i>map_name</i>]	If you added an H323 inspection policy map according to “ Configuring an H.323 Inspection Policy Map for Additional Inspection Control ” section on page 44-6, identify the map name in this command.
h323 ras [<i>map_name</i>]	If you added an H323 inspection policy map according to “ Configuring an H.323 Inspection Policy Map for Additional Inspection Control ” section on page 44-6, identify the map name in this command.
http [<i>map_name</i>]	If you added an HTTP inspection policy map according to the “ Configuring an HTTP Inspection Policy Map for Additional Inspection Control ” section on page 43-17, identify the map name in this command.
icmp	—

Table 42-2 Protocol Keywords

Keywords	Notes
icmp error	—
ils	—
im [<i>map_name</i>]	If you added an Instant Messaging inspection policy map according to “ Configuring an Instant Messaging Inspection Policy Map for Additional Inspection Control ” section on page 43-21, identify the map name in this command.
ip-options [<i>map_name</i>]	If you added an IP Options inspection policy map according to “ Configuring an IP Options Inspection Policy Map for Additional Inspection Control ” section on page 43-25, identify the map name in this command.
mgcp [<i>map_name</i>]	If you added an MGCP inspection policy map according to “ Configuring an MGCP Inspection Policy Map for Additional Inspection Control ” section on page 44-13, identify the map name in this command.
netbios [<i>map_name</i>]	If you added a NetBIOS inspection policy map according to “ Configuring a NetBIOS Inspection Policy Map for Additional Inspection Control ” section on page 43-29, identify the map name in this command.
pptp	—
radius-accounting [<i>map_name</i>]	The radius-accounting keyword is only available for a management class map. See the “ Creating a Layer 3/4 Class Map for Management Traffic ” section on page 32-14 for more information about creating a management class map. If you added a RADIUS accounting inspection policy map according to “ Configuring a RADIUS Inspection Policy Map for Additional Inspection Control ” section on page 46-10, identify the map name in this command.
rsh	—
rtsp [<i>map_name</i>]	If you added a RTSP inspection policy map according to “ Configuring an RTSP Inspection Policy Map for Additional Inspection Control ” section on page 44-16, identify the map name in this command.
sip [<i>map_name</i>]	If you added a SIP inspection policy map according to “ Configuring a SIP Inspection Policy Map for Additional Inspection Control ” section on page 44-20, identify the map name in this command.
skinny [<i>map_name</i>]	If you added a Skinny inspection policy map according to “ Configuring a Skinny (SCCP) Inspection Policy Map for Additional Inspection Control ” section on page 44-26, identify the map name in this command.
snmp [<i>map_name</i>]	If you added an SNMP inspection policy map according to “ Configuring an SNMP Inspection Policy Map for Additional Inspection Control ” section on page 46-11, identify the map name in this command.

Table 42-2 Protocol Keywords

Keywords	Notes
sqlnet	—
sunrpc	The default class map includes UDP port 111; if you want to enable Sun RPC inspection for TCP port 111, you need to create a new class map that matches TCP port 111, add the class to the policy, and then apply the inspect sunrpc command to that class.
tftp	—
waas	—
xdmcp	—

Step 6 To activate the policy map on one or more interfaces, enter the following command:

```
hostname(config)# service-policy polycymap_name {global | interface interface_name}
```

Where **global** applies the policy map to all interfaces, and **interface** applies the policy to one interface. By default, the default policy map, “global_policy,” is applied globally. Only one global policy is allowed. You can override the global policy on an interface by applying a service policy to that interface. You can only apply one policy map to each interface.



CHAPTER 43

Configuring Inspection of Basic Internet Protocols

This chapter describes how to configure application layer protocol inspection. Inspection engines are required for services that embed IP addressing information in the user data packet or that open secondary channels on dynamically assigned ports. These protocols require the ASA to do a deep packet inspection instead of passing the packet through the fast path. As a result, inspection engines can affect overall throughput.

Several common inspection engines are enabled on the ASA by default, but you might need to enable others depending on your network.

This chapter includes the following sections:

- [DNS Inspection, page 43-1](#)
- [FTP Inspection, page 43-11](#)
- [HTTP Inspection, page 43-16](#)
- [ICMP Inspection, page 43-20](#)
- [ICMP Error Inspection, page 43-21](#)
- [Instant Messaging Inspection, page 43-21](#)
- [IP Options Inspection, page 43-24](#)
- [IPsec Pass Through Inspection, page 43-26](#)
- [IPv6 Inspection, page 43-27](#)
- [NetBIOS Inspection, page 43-28](#)
- [PPTP Inspection, page 43-30](#)
- [SMTP and Extended SMTP Inspection, page 43-31](#)
- [TFTP Inspection, page 43-34](#)

DNS Inspection

This section describes DNS application inspection. This section includes the following topics:

- [How DNS Application Inspection Works, page 43-2](#)
- [How DNS Rewrite Works, page 43-2](#)
- [Configuring DNS Rewrite, page 43-3](#)

- [Configuring a DNS Inspection Policy Map for Additional Inspection Control, page 43-7](#)
- [Verifying and Monitoring DNS Inspection, page 43-10](#)

How DNS Application Inspection Works

The ASA tears down the DNS session associated with a DNS query as soon as the DNS reply is forwarded by the ASA. The ASA also monitors the message exchange to ensure that the ID of the DNS reply matches the ID of the DNS query.

When DNS inspection is enabled, which is the default, the ASA performs the following additional tasks:

- Translates the DNS record based on the configuration completed using the **alias**, **static** and **nat** commands (DNS Rewrite). Translation only applies to the A-record in the DNS reply; therefore, DNS Rewrite does not affect reverse lookups, which request the PTR record.



Note DNS Rewrite is not applicable for PAT because multiple PAT rules are applicable for each A-record and the PAT rule to use is ambiguous.

- Enforces the maximum DNS message length (the default is 512 bytes and the maximum length is 65535 bytes). The ASA performs reassembly as needed to verify that the packet length is less than the maximum length configured. The ASA drops the packet if it exceeds the maximum length.



Note If you enter the **inspect dns** command without the **maximum-length** option, DNS packet size is not checked

- Enforces a domain-name length of 255 bytes and a label length of 63 bytes.
- Verifies the integrity of the domain-name referred to by the pointer if compression pointers are encountered in the DNS message.
- Checks to see if a compression pointer loop exists.

A single connection is created for multiple DNS sessions, as long as they are between the same two hosts, and the sessions have the same 5-tuple (source/destination IP address, source/destination port, and protocol). DNS identification is tracked by *app_id*, and the idle timer for each *app_id* runs independently.

Because the *app_id* expires independently, a legitimate DNS response can only pass through the ASA within a limited period of time and there is no resource build-up. However, if you enter the **show conn** command, you will see the idle timer of a DNS connection being reset by a new DNS session. This is due to the nature of the shared DNS connection and is by design.

How DNS Rewrite Works

When DNS inspection is enabled, DNS rewrite provides full support for NAT of DNS messages originating from any interface.

If a client on an inside network requests DNS resolution of an inside address from a DNS server on an outside interface, the DNS A-record is translated correctly. If the DNS inspection engine is disabled, the A-record is not translated.

As long as DNS inspection remains enabled, you can configure DNS rewrite using the **alias**, **static**, or **nat** commands.

For details about the configuration required see the “[Configuring DNS Rewrite](#)” section on page 43-3.


DNS Rewrite performs two functions:

- Translating a public address (the routable or “mapped” address) in a DNS reply to a private address (the “real” address) when the DNS client is on a private interface.
- Translating a private address to a public address when the DNS client is on the public interface.

In [Figure 43-1](#), the DNS server resides on the external (ISP) network. The real address of the server (192.168.100.1) has been mapped using the **static** command to the ISP-assigned address (209.165.200.5). When a web client on the inside interface attempts to access the web server with the URL `http://server.example.com`, the host running the web client sends a DNS request to the DNS server to resolve the IP address of the web server. The ASA translates the non-routable source address in the IP header and forwards the request to the ISP network on its outside interface. When the DNS reply is returned, the ASA applies address translation not only to the destination address, but also to the embedded IP address of the web server, which is contained in the A-record in the DNS reply. As a result, the web client on the inside network gets the correct address for connecting to the web server on the inside network.

For configuration instructions for scenarios similar to this one, see the “[Configuring DNS Rewrite with Two NAT Zones](#)” section on page 43-4.

Figure 43-1 Translating the Address in a DNS Reply (DNS Rewrite)

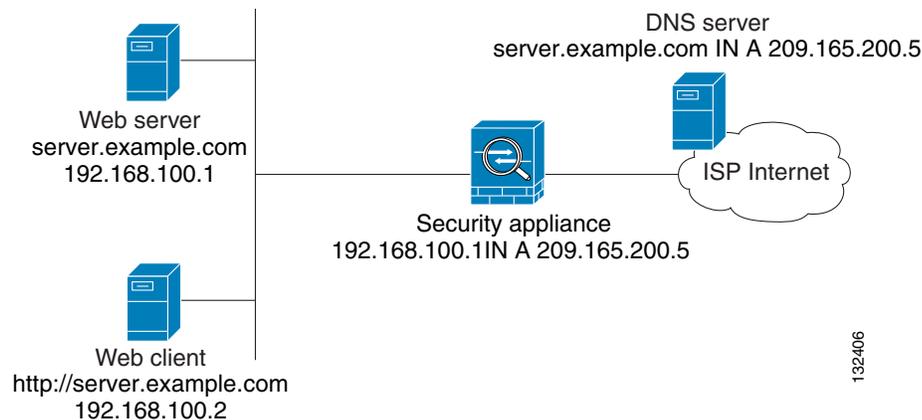

DNS rewrite also works if the client making the DNS request is on a DMZ network and the DNS server is on an inside interface. For an illustration and configuration instructions for this scenario, see the “[Overview of DNS Rewrite with Three NAT Zones](#)” section on page 43-4.

Configuring DNS Rewrite

You configure DNS rewrite using the NAT configuration.

This section includes the following topics:

- [Configuring DNS Rewrite with Two NAT Zones](#), page 43-4
- [Overview of DNS Rewrite with Three NAT Zones](#), page 43-4
- [Configuring DNS Rewrite with Three NAT Zones](#), page 43-6

Configuring DNS Rewrite with Two NAT Zones

To implement a DNS Rewrite scenario similar to the one shown in [Figure 43-1](#), perform the following steps:

-
- Step 1** Create a static translation for the web server using the `dns` option. See [Chapter 30, “Configuring Network Object NAT.”](#)
- Step 2** Create an access list that permits traffic to the port that the web server listens to for HTTP requests.
- ```
hostname(config)# access-list acl-name extended permit tcp any host mapped-address eq port
```
- where the arguments are as follows:
- acl-name*—The name you give the access list.
- mapped-address*—The translated IP address of the web server.
- port*—The TCP port that the web server listens to for HTTP requests.
- Step 3** Apply the access list created in [Step 2](#) to the mapped interface. To do so, use the `access-group` command, as follows:
- ```
hostname(config)# access-group acl-name in interface mapped_ifc
```
- Step 4** If DNS inspection is disabled or if you want to change the maximum DNS packet length, configure DNS inspection. DNS application inspection is enabled by default with a maximum DNS packet length of 512 bytes. For configuration instructions, see the [“Configuring a DNS Inspection Policy Map for Additional Inspection Control”](#) section on page 43-7.
- Step 5** On the public DNS server, add an A-record for the web server, such as:
- ```
domain-qualified-hostname. IN A mapped-address
```

where *domain-qualified-hostname* is the hostname with a domain suffix, as in `server.example.com`. The period after the hostname is important. *mapped-address* is the translated IP address of the web server.

---

The following example configures the ASA for the scenario shown in [Figure 43-1](#). It assumes DNS inspection is already enabled.


```
hostname(config)# object network obj-192.168.100.1-01
hostname(config-network-object)# host 192.168.100.1
hostname(config-network-object)# nat (inside,outside) static 209.165.200.225 dns
hostname(config)# access-list 101 permit tcp any host 209.165.200.225 eq www
hostname(config)# access-group 101 in interface outside
```

This configuration requires the following A-record on the DNS server:

```
server.example.com. IN A 209.165.200.225
```

## Overview of DNS Rewrite with Three NAT Zones

[Figure 43-2](#) provides a more complex scenario to illustrate how DNS inspection allows NAT to operate transparently with a DNS server with minimal configuration. For configuration instructions for scenarios like this one, see the [“Configuring DNS Rewrite with Three NAT Zones”](#) section on page 43-6.

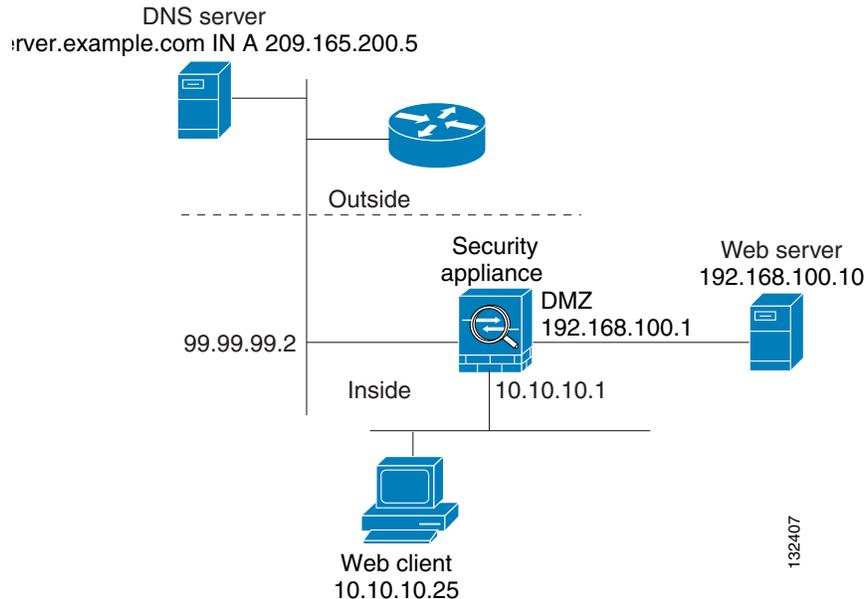**Figure 43-2 DNS Rewrite with Three NAT Zones**

In [Figure 43-2](#), a web server, server.example.com, has the real address 192.168.100.10 on the DMZ interface of the ASA. A web client with the IP address 10.10.10.25 is on the inside interface and a public DNS server is on the outside interface. The site NAT policies are as follows:

- The outside DNS server holds the authoritative address record for server.example.com.
- Hosts on the outside network can contact the web server with the domain name server.example.com through the outside DNS server or with the IP address 209.165.200.5.
- Clients on the inside network can access the web server with the domain name server.example.com through the outside DNS server or with the IP address 192.168.100.10.

When a host or client on any interface accesses the DMZ web server, it queries the public DNS server for the A-record of server.example.com. The DNS server returns the A-record showing that server.example.com binds to address 209.165.200.5.

When a web client on the *outside* network attempts to access `http://server.example.com`, the sequence of events is as follows:

1. The host running the web client sends the DNS server a request for the IP address of server.example.com.
2. The DNS server responds with the IP address 209.165.200.225 in the reply.
3. The web client sends its HTTP request to 209.165.200.225.
4. The packet from the outside host reaches the ASA at the outside interface.
5. The static rule translates the address 209.165.200.225 to 192.168.100.10 and the ASA directs the packet to the web server on the DMZ.

When a web client on the *inside* network attempts to access `http://server.example.com`, the sequence of events is as follows:

1. The host running the web client sends the DNS server a request for the IP address of server.example.com.
2. The DNS server responds with the IP address 209.165.200.225 in the reply.

3. The ASA receives the DNS reply and submits it to the DNS application inspection engine.
4. The DNS application inspection engine does the following:

- a. Searches for any NAT rule to undo the translation of the embedded A-record address “[outside]:209.165.200.5”. In this example, it finds the following static configuration:

```
object network obj-192.168.100.10-01
 host 192.168.100.10
 nat (dmz,outside) static 209.165.200.5 dns
```

- b. Uses the static rule to rewrite the A-record as follows because the **dns** option is included:

```
[outside]:209.165.200.225 --> [dmz]:192.168.100.10
```




---

**Note** If the **dns** option were not included with the **nat** command, DNS Rewrite would not be performed and other processing for the packet continues.

---

- c. Searches for any NAT to translate the web server address, [dmz]:192.168.100.10, when communicating with the inside web client.

No NAT rule is applicable, so application inspection completes.

If a NAT rule (nat or static) were applicable, the **dns** option must also be specified. If the **dns** option were not specified, the A-record rewrite in step **b** would be reverted and other processing for the packet continues.

5. The ASA sends the HTTP request to server.example.com on the DMZ interface.

## Configuring DNS Rewrite with Three NAT Zones

To enable the NAT policies for the scenario in [Figure 43-2](#), perform the following steps:

- Step 1** Create a static translation for the web server on the DMZ network using the **dns** option. See [Chapter 30, “Configuring Network Object NAT.”](#)
- Step 2** Create an access list that permits traffic to the port that the web server listens to for HTTP requests.
 

```
hostname(config)# access-list acl-name extended permit tcp any host mapped-address eq port
```

 where the arguments are as follows:
  - acl-name*—The name you give the access list.
  - mapped-address*—The translated IP address of the web server.
  - port*—The TCP port that the web server listens to for HTTP requests.
- Step 3** Apply the access list created in [Step 2](#) to the outside interface. To do so, use the **access-group** command, as follows:
 

```
hostname(config)# access-group acl-name in interface outside
```
- Step 4** If DNS inspection is disabled or if you want to change the maximum DNS packet length, configure DNS inspection. DNS application inspection is enabled by default with a maximum DNS packet length of 512 bytes. For configuration instructions, see the [“Configuring a DNS Inspection Policy Map for Additional Inspection Control”](#) section on page 43-7.
- Step 5** On the public DNS server, add an A-record for the web server, such as:
 

```
domain-qualified-hostname. IN A mapped-address
```

where *domain-qualified-hostname* is the hostname with a domain suffix, as in server.example.com. The period after the hostname is important. *mapped-address* is the translated IP address of the web server.

The following example configures the ASA for the scenario shown in [Figure 43-2](#). It assumes DNS inspection is already enabled.

```
hostname(config)# object network obj-192.168.100.10-01
hostname(config-network-object)# host 192.168.100.10
hostname(config-network-object)# nat (dmz,outside) static 209.165.200.225 dns
hostname(config)# access-list 101 permit tcp any host 209.165.200.225 eq www
hostname(config)# access-group 101 in interface outside
```

This configuration requires the following A-record on the DNS server:

```
server.example.com. IN A 209.165.200.225
```

## Configuring a DNS Inspection Policy Map for Additional Inspection Control

DNS application inspection supports DNS message controls that provide protection against DNS spoofing and cache poisoning. User configurable rules allow filtering based on DNS header, domain name, resource record type and class. Zone transfer can be restricted between servers with this function, for example.

The Recursion Desired and Recursion Available flags in the DNS header can be masked to protect a public server from attack if that server only supports a particular internal zone. In addition, DNS randomization can be enabled to avoid spoofing and cache poisoning of servers that either do not support randomization, or utilize a weak pseudo random number generator. Limiting the domain names that can be queried also restricts the domain names which can be queried, which protects the public server further.

A configurable DNS mismatch alert can be used as notification if an excessive number of mismatching DNS responses are received, which could indicate a cache poisoning attack. In addition, a configurable check to enforce a Transaction Signature be attached to all DNS messages is also supported.

To specify actions when a message violates a parameter, create a DNS inspection policy map. You can then apply the inspection policy map when you enable DNS inspection.

To create a DNS inspection policy map, perform the following steps:

- 
- Step 1** (Optional) Add one or more regular expressions for use in traffic matching commands according to the [“Creating a Regular Expression”](#) section on page 13-12. See the types of text you can match in the **match** commands described in [Step 3](#).
  - Step 2** (Optional) Create one or more regular expression class maps to group regular expressions according to the [“Creating a Regular Expression Class Map”](#) section on page 13-15.
  - Step 3** (Optional) Create a DNS inspection class map by performing the following steps.

A class map groups multiple traffic matches. Traffic must match *all* of the **match** commands to match the class map. You can alternatively identify **match** commands directly in the policy map. The difference between creating a class map and defining the traffic match directly in the inspection policy map is that the class map lets you create more complex match criteria, and you can reuse class maps.

To specify traffic that should not match the class map, use the **match not** command. For example, if the **match not** command specifies the string “example.com,” then any traffic that includes “example.com” does not match the class map.

For the traffic that you identify in this class map, you can specify actions such as drop, drop-connection, reset, mask, set the rate limit, and/or log the connection in the inspection policy map.

If you want to perform different actions for each **match** command, you should identify the traffic directly in the policy map.

- a. Create the class map by entering the following command:

```
hostname(config)# class-map type inspect dns [match-all | match-any] class_map_name
hostname(config-cmap)#
```

Where *class\_map\_name* is the name of the class map. The **match-all** keyword is the default, and specifies that traffic must match all criteria to match the class map. The **match-any** keyword specifies that the traffic matches the class map if it matches at least one of the criteria. The CLI enters class-map configuration mode, where you can enter one or more **match** commands.

- b. (Optional) To add a description to the class map, enter the following command:

```
hostname(config-cmap)# description string
```

- c. (Optional) To match a specific flag that is set in the DNS header, enter the following command:

```
hostname(config-cmap)# match [not] header-flag [eq] {f_well_known | f_value}
```

Where the *f\_well\_known* argument is the DNS flag bit. The *f\_value* argument is the 16-bit value in hex. The **eq** keyword specifies an exact match.

- d. (Optional) To match a DNS type, including Query type and RR type, enter the following command:

```
hostname(config-cmap)# match [not] dns-type {eq t_well_known | t_val} {range t_val1
t_val2}
```

Where the *t\_well\_known* argument is the DNS flag bit. The *t\_val* arguments are arbitrary values in the DNS type field (0-65535). The **range** keyword specifies a range and the **eq** keyword specifies an exact match.

- e. (Optional) To match a DNS class, enter the following command:

```
hostname(config-cmap)# match [not] dns-class {eq c_well_known | c_val} {range c_val1
c_val2}
```

Where the *c\_well\_known* argument is the DNS class. The *c\_val* arguments are arbitrary values in the DNS class field. The **range** keyword specifies a range and the **eq** keyword specifies an exact match.

- f. (Optional) To match a DNS question or resource record, enter the following command:

```
hostname(config-cmap)# match {question | {resource-record answer | authority | any}}
```

Where the **question** keyword specifies the question portion of a DNS message. The **resource-record** keyword specifies the resource record portion of a DNS message. The **answer** keyword specifies the Answer RR section. The **authority** keyword specifies the Authority RR section. The **additional** keyword specifies the Additional RR section.

- g. (Optional) To match a DNS message domain name list, enter the following command:

```
hostname(config-cmap)# match [not] domain-name {regex regex_id | regex class class_id}
```

The **regex** *regex\_name* argument is the regular expression you created in [Step 1](#). The **class** *regex\_class\_name* is the regular expression class map you created in [Step 2](#).

- Step 4** Create a DNS inspection policy map, enter the following command:

```
hostname(config)# policy-map type inspect dns policy_map_name
hostname(config-pmap)#
```

Where the *policy\_map\_name* is the name of the policy map. The CLI enters policy-map configuration mode.

**Step 5** (Optional) To add a description to the policy map, enter the following command:

```
hostname(config-pmap)# description string
```

**Step 6** To apply actions to matching traffic, perform the following steps.

a. Specify the traffic on which you want to perform actions using one of the following methods:

- Specify the DNS class map that you created in [Step 3](#) by entering the following command:

```
hostname(config-pmap)# class class_map_name
hostname(config-pmap-c)#
```

- Specify traffic directly in the policy map using one of the **match** commands described in [Step 3](#). If you use a **match not** command, then any traffic that does not match the criterion in the **match not** command has the action applied.

b. Specify the action you want to perform on the matching traffic by entering the following command:

```
hostname(config-pmap-c)# {[drop [send-protocol-error] |
drop-connection [send-protocol-error] | mask | reset] [log] | rate-limit message_rate}
```

Not all options are available for each **match** or **class** command. See the CLI help or the command reference for the exact options available.

The **drop** keyword drops all packets that match.

The **send-protocol-error** keyword sends a protocol error message.

The **drop-connection** keyword drops the packet and closes the connection.

The **mask** keyword masks out the matching portion of the packet.

The **reset** keyword drops the packet, closes the connection, and sends a TCP reset to the server and/or client.

The **log** keyword, which you can use alone or with one of the other keywords, sends a system log message.

The **rate-limit** *message\_rate* argument limits the rate of messages.

You can specify multiple **class** or **match** commands in the policy map. For information about the order of **class** and **match** commands, see the “[Defining Actions in an Inspection Policy Map](#)” section on [page 33-2](#).

**Step 7** To configure parameters that affect the inspection engine, perform the following steps:

a. To enter parameters configuration mode, enter the following command:

```
hostname(config-pmap)# parameters
hostname(config-pmap-p)#
```

b. To randomize the DNS identifier for a DNS query, enter the following command:

```
hostname(config-pmap-p)# id-randomization
```

c. To enable logging for excessive DNS ID mismatches, enter the following command:

```
hostname(config-pmap-p)# id-mismatch [count number duration seconds] action log
```

Where the **count** *string* argument specifies the maximum number of mismatch instances before a system message log is sent. The **duration** *seconds* specifies the period, in seconds, to monitor.

d. To require a TSIG resource record to be present, enter the following command:

```
hostname(config-pmap-p)# tsig enforced action {drop [log] | [log]}
```

Where the **count string** argument specifies the maximum number of mismatch instances before a system message log is sent. The **duration seconds** specifies the period, in seconds, to monitor.

The following example shows a how to define a DNS inspection policy map.

```
hostname(config)# regex domain_example "example\.com"
hostname(config)# regex domain_foo "foo\.com"

hostname(config)# ! define the domain names that the server serves
hostname(config)# class-map type inspect regex match-any my_domains
hostname(config-cmap)# match regex domain_example
hostname(config-cmap)# match regex domain_foo

hostname(config)# ! Define a DNS map for query only
hostname(config)# class-map type inspect dns match-all pub_server_map
hostname(config-cmap)# match not header-flag QR
hostname(config-cmap)# match question
hostname(config-cmap)# match not domain-name regex class my_domains

hostname(config)# policy-map type inspect dns serv_prot
hostname(config-pmap)# class pub_server_map
hostname(config-pmap-c)# drop log
hostname(config-pmap-c)# match header-flag RD
hostname(config-pmap-c)# mask log

hostname(config)# class-map dns_serv_map
hostname(config-cmap)# match default-inspection-traffic

hostname(config)# policy-map pub_policy
hostname(config-pmap)# class dns_serv_map
hostname(config-pmap-c)# inspect dns serv_prot

hostname(config)# service-policy pub_policy interface dmz
```

## Verifying and Monitoring DNS Inspection

To view information about the current DNS connections, enter the following command:

```
hostname# show conn
```

For connections using a DNS server, the source port of the connection may be replaced by the IP address of DNS server in the show conn command output.

A single connection is created for multiple DNS sessions, as long as they are between the same two hosts, and the sessions have the same 5-tuple (source/destination IP address, source/destination port, and protocol). DNS identification is tracked by app\_id, and the idle timer for each app\_id runs independently.

Because the app\_id expires independently, a legitimate DNS response can only pass through the security appliance within a limited period of time and there is no resource build-up. However, when you enter the **show conn** command, you see the idle timer of a DNS connection being reset by a new DNS session. This is due to the nature of the shared DNS connection and is by design.

To display the statistics for DNS application inspection, enter the **show service-policy** command. The following is sample output from the **show service-policy** command:

```
hostname# show service-policy
Interface outside:
```

```
Service-policy: sample_policy
Class-map: dns_port
Inspect: dns maximum-length 1500, packet 0, drop 0, reset-drop 0
```

## FTP Inspection

This section describes the FTP inspection engine. This section includes the following topics:

- [FTP Inspection Overview, page 43-11](#)
- [Using the strict Option, page 43-11](#)
- [Configuring an FTP Inspection Policy Map for Additional Inspection Control, page 43-12](#)
- [Verifying and Monitoring FTP Inspection, page 43-16](#)

## FTP Inspection Overview

The FTP application inspection inspects the FTP sessions and performs four tasks:

- Prepares dynamic secondary data connection
- Tracks the FTP command-response sequence
- Generates an audit trail
- Translates the embedded IP address

FTP application inspection prepares secondary channels for FTP data transfer. Ports for these channels are negotiated through PORT or PASV commands. The channels are allocated in response to a file upload, a file download, or a directory listing event.

**Note**

If you disable FTP inspection engines with the **no inspect ftp** command, outbound users can start connections only in passive mode, and all inbound FTP is disabled.

## Using the strict Option

Using the **strict** option with the **inspect ftp** command increases the security of protected networks by preventing web browsers from sending embedded commands in FTP requests.

**Note**

To specify FTP commands that are not permitted to pass through the ASA, create an FTP map according to the [“Configuring an FTP Inspection Policy Map for Additional Inspection Control”](#) section on page 43-12.

After you enable the **strict** option on an interface, FTP inspection enforces the following behavior:

- An FTP command must be acknowledged before the ASA allows a new command.
- The ASA drops connections that send embedded commands.
- The 227 and PORT commands are checked to ensure they do not appear in an error string.

**Caution**

Using the **strict** option may cause the failure of FTP clients that are not strictly compliant with FTP RFCs.

If the **strict** option is enabled, each FTP command and response sequence is tracked for the following anomalous activity:

- Truncated command—Number of commas in the PORT and PASV reply command is checked to see if it is five. If it is not five, then the PORT command is assumed to be truncated and the TCP connection is closed.
- Incorrect command—Checks the FTP command to see if it ends with <CR><LF> characters, as required by the RFC. If it does not, the connection is closed.
- Size of RETR and STOR commands—These are checked against a fixed constant. If the size is greater, then an error message is logged and the connection is closed.
- Command spoofing—The PORT command should always be sent from the client. The TCP connection is denied if a PORT command is sent from the server.
- Reply spoofing—PASV reply command (227) should always be sent from the server. The TCP connection is denied if a PASV reply command is sent from the client. This prevents the security hole when the user executes “227 xxxxx a1, a2, a3, a4, p1, p2.”
- TCP stream editing—The ASA closes the connection if it detects TCP stream editing.
- Invalid port negotiation—The negotiated dynamic port value is checked to see if it is less than 1024. As port numbers in the range from 1 to 1024 are reserved for well-known connections, if the negotiated port falls in this range, then the TCP connection is freed.
- Command pipelining—The number of characters present after the port numbers in the PORT and PASV reply command is cross checked with a constant value of 8. If it is more than 8, then the TCP connection is closed.
- The ASA replaces the FTP server response to the SYST command with a series of Xs. to prevent the server from revealing its system type to FTP clients. To override this default behavior, use the **no mask-syst-reply** command in the FTP map.

## Configuring an FTP Inspection Policy Map for Additional Inspection Control

FTP command filtering and security checks are provided using strict FTP inspection for improved security and control. Protocol conformance includes packet length checks, delimiters and packet format checks, command terminator checks, and command validation.

Blocking FTP based on user values is also supported so that it is possible for FTP sites to post files for download, but restrict access to certain users. You can block FTP connections based on file type, server name, and other attributes. System message logs are generated if an FTP connection is denied after inspection.

If you want FTP inspection to allow FTP servers to reveal their system type to FTP clients, and limit the allowed FTP commands, then create and configure an FTP map. You can then apply the FTP map when you enable FTP inspection.

To create an FTP map, perform the following steps:

- Step 1** (Optional) Add one or more regular expressions for use in traffic matching commands according to the “[Creating a Regular Expression](#)” section on page 13-12. See the types of text you can match in the **match** commands described in [Step 3](#).

**Step 2** (Optional) Create one or more regular expression class maps to group regular expressions according to the “[Creating a Regular Expression Class Map](#)” section on page 13-15.

**Step 3** (Optional) Create an FTP inspection class map by performing the following steps.

A class map groups multiple traffic matches. Traffic must match *all* of the **match** commands to match the class map. You can alternatively identify **match** commands directly in the policy map. The difference between creating a class map and defining the traffic match directly in the inspection policy map is that the class map lets you create more complex match criteria, and you can reuse class maps.

To specify traffic that should not match the class map, use the **match not** command. For example, if the **match not** command specifies the string “example.com,” then any traffic that includes “example.com” does not match the class map.

For the traffic that you identify in this class map, you can specify actions such as drop, drop-connection, reset, mask, set the rate limit, and/or log the connection in the inspection policy map.

If you want to perform different actions for each **match** command, you should identify the traffic directly in the policy map.

- a. Create the class map by entering the following command:

```
hostname(config)# class-map type inspect ftp [match-all | match-any] class_map_name
hostname(config-cmap)#
```

Where *class\_map\_name* is the name of the class map. The **match-all** keyword is the default, and specifies that traffic must match all criteria to match the class map. The **match-any** keyword specifies that the traffic matches the class map if it matches at least one of the criteria. The CLI enters class-map configuration mode, where you can enter one or more **match** commands.

- b. (Optional) To add a description to the class map, enter the following command:

```
hostname(config-cmap)# description string
```

- c. (Optional) To match a filename for FTP transfer, enter the following command:

```
hostname(config-cmap)# match [not] filename regex [regex_name |
class regex_class_name]
```

Where the *regex\_name* is the regular expression you created in [Step 1](#). The **class** *regex\_class\_name* is the regular expression class map you created in [Step 2](#).

- d. (Optional) To match a file type for FTP transfer, enter the following command:

```
hostname(config-cmap)# match [not] filetype regex [regex_name |
class regex_class_name]
```

Where the *regex\_name* is the regular expression you created in [Step 1](#). The **class** *regex\_class\_name* is the regular expression class map you created in [Step 2](#).

- e. (Optional) To disallow specific FTP commands, use the following command:

```
hostname(config-cmap)# match [not] request-command ftp_command [ftp_command...]
```

Where *ftp\_command* with one or more FTP commands that you want to restrict. See [Table 43-1](#) for a list of the FTP commands that you can restrict.

Table 43-1 FTP Map request-command deny Options

| request-command deny Option | Purpose                                                                                               |
|-----------------------------|-------------------------------------------------------------------------------------------------------|
| <b>appe</b>                 | Disallows the command that appends to a file.                                                         |
| <b>cdup</b>                 | Disallows the command that changes to the parent directory of the current working directory.          |
| <b>dele</b>                 | Disallows the command that deletes a file on the server.                                              |
| <b>get</b>                  | Disallows the client command for retrieving a file from the server.                                   |
| <b>help</b>                 | Disallows the command that provides help information.                                                 |
| <b>mkd</b>                  | Disallows the command that makes a directory on the server.                                           |
| <b>put</b>                  | Disallows the client command for sending a file to the server.                                        |
| <b>rmd</b>                  | Disallows the command that deletes a directory on the server.                                         |
| <b>rnfr</b>                 | Disallows the command that specifies rename-from filename.                                            |
| <b>rnto</b>                 | Disallows the command that specifies rename-to filename.                                              |
| <b>site</b>                 | Disallows the command that are specific to the server system. Usually used for remote administration. |
| <b>stou</b>                 | Disallows the command that stores a file using a unique file name.                                    |

- f. (Optional) To match an FTP server, enter the following command:

```
hostname(config-cmap)# match [not] server regex [regex_name | class regex_class_name]
```

Where the *regex\_name* is the regular expression you created in [Step 1](#). The **class** *regex\_class\_name* is the regular expression class map you created in [Step 2](#).

- g. (Optional) To match an FTP username, enter the following command:

```
hostname(config-cmap)# match [not] username regex [regex_name | class regex_class_name]
```

Where the *regex\_name* is the regular expression you created in [Step 1](#). The **class** *regex\_class\_name* is the regular expression class map you created in [Step 2](#).

- h. (Optional) To match active FTP traffic commands PORT and EPRT, enter the following command:

```
hostname(config-cmap)# match [not] active-ftp
```

- i. (Optional) To match passive FTP traffic commands PASV and EPSV, enter the following command:

```
hostname(config-cmap)# match [not] passive-ftp
```

- Step 4** Create an FTP inspection policy map, enter the following command:

```
hostname(config)# policy-map type inspect ftp policy_map_name
hostname(config-pmap)#
```

Where the *policy\_map\_name* is the name of the policy map. The CLI enters policy-map configuration mode.

- Step 5** (Optional) To add a description to the policy map, enter the following command:

```
hostname(config-pmap)# description string
```

- Step 6** To apply actions to matching traffic, perform the following steps.

- a. Specify the traffic on which you want to perform actions using one of the following methods:

- Specify the FTP class map that you created in [Step 3](#) by entering the following command:

```
hostname(config-pmap)# class class_map_name
hostname(config-pmap-c)#
```

- Specify traffic directly in the policy map using one of the **match** commands described in [Step 3](#). If you use a **match not** command, then any traffic that does not match the criterion in the **match not** command has the action applied.

- Specify the action you want to perform on the matching traffic by entering the following command:

```
hostname(config-pmap-c)# {[drop [send-protocol-error] |
drop-connection [send-protocol-error] | mask | reset] [log] | rate-limit message_rate}
```

Not all options are available for each **match** or **class** command. See the CLI help or the command reference for the exact options available.

The **drop** keyword drops all packets that match.

The **send-protocol-error** keyword sends a protocol error message.

The **drop-connection** keyword drops the packet and closes the connection.

The **mask** keyword masks out the matching portion of the packet.

The **reset** keyword drops the packet, closes the connection, and sends a TCP reset to the server and/or client.

The **log** keyword, which you can use alone or with one of the other keywords, sends a system log message.

The **rate-limit message\_rate** argument limits the rate of messages.

You can specify multiple **class** or **match** commands in the policy map. For information about the order of **class** and **match** commands, see the “[Defining Actions in an Inspection Policy Map](#)” section on [page 33-2](#).

- Step 7** To configure parameters that affect the inspection engine, perform the following steps:

- To enter parameters configuration mode, enter the following command:

```
hostname(config-pmap)# parameters
hostname(config-pmap-p)#
```

- To mask the greeting banner from the FTP server, enter the following command:

```
hostname(config-pmap-p)# mask-banner
```

- To mask the reply to **syst** command, enter the following command:

```
hostname(config-pmap-p)# mask-syst-reply
```

Before submitting a username and password, all FTP users are presented with a greeting banner. By default, this banner includes version information useful to hackers trying to identify weaknesses in a system. The following example shows how to mask this banner:

```
hostname(config)# policy-map type inspect ftp mymap
hostname(config-pmap)# parameters
hostname(config-pmap-p)# mask-banner

hostname(config)# class-map match-all ftp-traffic
hostname(config-cmap)# match port tcp eq ftp

hostname(config)# policy-map ftp-policy
```

```
hostname(config-pmap)# class ftp-traffic
hostname(config-pmap-c)# inspect ftp strict mymap

hostname(config)# service-policy ftp-policy interface inside
```

## Verifying and Monitoring FTP Inspection

FTP application inspection generates the following log messages:

- An Audit record 303002 is generated for each file that is retrieved or uploaded.
- The FTP command is checked to see if it is RETR or STOR and the retrieve and store commands are logged.
- The username is obtained by looking up a table providing the IP address.
- The username, source IP address, destination IP address, NAT address, and the file operation are logged.
- Audit record 201005 is generated if the secondary dynamic channel preparation failed due to memory shortage.

In conjunction with NAT, the FTP application inspection translates the IP address within the application payload. This is described in detail in RFC 959.

## HTTP Inspection

This section describes the HTTP inspection engine. This section includes the following topics:

- [HTTP Inspection Overview, page 43-16](#)
- [Configuring an HTTP Inspection Policy Map for Additional Inspection Control, page 43-17](#)

## HTTP Inspection Overview

Use the HTTP inspection engine to protect against specific attacks and other threats that are associated with HTTP traffic. HTTP inspection performs several functions:

- Enhanced HTTP inspection
- URL screening through N2H2 or Websense  
See [Information About URL Filtering, page 39-6](#) for information.
- Java and ActiveX filtering

The latter two features are configured in conjunction with the **filter** command. For more information about filtering, see [Chapter 39, “Configuring Filtering Services.”](#)

The enhanced HTTP inspection feature, which is also known as an application firewall and is available when you configure an HTTP map (see [“Configuring an HTTP Inspection Policy Map for Additional Inspection Control”](#)), can help prevent attackers from using HTTP messages for circumventing network security policy. It verifies the following for all HTTP messages:

- Conformance to RFC 2616
- Use of RFC-defined methods only.
- Compliance with the additional criteria.

## Configuring an HTTP Inspection Policy Map for Additional Inspection Control

To specify actions when a message violates a parameter, create an HTTP inspection policy map. You can then apply the inspection policy map when you enable HTTP inspection.



### Note

When you enable HTTP inspection with an inspection policy map, strict HTTP inspection with the action reset and log is enabled by default. You can change the actions performed in response to inspection failure, but you cannot disable strict inspection as long as the inspection policy map remains enabled.

To create an HTTP inspection policy map, perform the following steps:

**Step 1** (Optional) Add one or more regular expressions for use in traffic matching commands according to the “[Creating a Regular Expression](#)” section on page 13-12. See the types of text you can match in the **match** commands described in [Step 3](#).

**Step 2** (Optional) Create one or more regular expression class maps to group regular expressions according to the “[Creating a Regular Expression Class Map](#)” section on page 13-15.

**Step 3** (Optional) Create an HTTP inspection class map by performing the following steps.

A class map groups multiple traffic matches. Traffic must match *all* of the **match** commands to match the class map. You can alternatively identify **match** commands directly in the policy map. The difference between creating a class map and defining the traffic match directly in the inspection policy map is that the class map lets you create more complex match criteria, and you can reuse class maps.

To specify traffic that should not match the class map, use the **match not** command. For example, if the **match not** command specifies the string “example.com,” then any traffic that includes “example.com” does not match the class map.

For the traffic that you identify in this class map, you can specify actions such as drop, drop-connection, reset, mask, set the rate limit, and/or log the connection in the inspection policy map.

If you want to perform different actions for each **match** command, you should identify the traffic directly in the policy map.

- a. Create the class map by entering the following command:

```
hostname(config)# class-map type inspect http [match-all | match-any] class_map_name
hostname(config-cmap)#
```

Where *class\_map\_name* is the name of the class map. The **match-all** keyword is the default, and specifies that traffic must match all criteria to match the class map. The **match-any** keyword specifies that the traffic matches the class map if it matches at least one of the criteria. The CLI enters class-map configuration mode, where you can enter one or more **match** commands.

- b. (Optional) To add a description to the class map, enter the following command:

```
hostname(config-cmap)# description string
```

- c. (Optional) To match traffic with a content-type field in the HTTP response that does not match the accept field in the corresponding HTTP request message, enter the following command:

```
hostname(config-cmap)# match [not] req-resp content-type mismatch
```

- d. (Optional) To match text found in the HTTP request message arguments, enter the following command:

```
hostname(config-cmap)# match [not] request args regex [regex_name | class
regex_class_name]
```

Where the *regex\_name* is the regular expression you created in [Step 1](#). The **class** *regex\_class\_name* is the regular expression class map you created in [Step 2](#).

- e. (Optional) To match text found in the HTTP request message body or to match traffic that exceeds the maximum HTTP request message body length, enter the following command:

```
hostname(config-cmap)# match [not] request body {regex [regex_name | class
regex_class_name] | length gt max_bytes}
```

Where the **regex** *regex\_name* argument is the regular expression you created in [Step 1](#). The **class** *regex\_class\_name* is the regular expression class map you created in [Step 2](#). The **length gt** *max\_bytes* is the maximum message body length in bytes.

- f. (Optional) To match text found in the HTTP request message header, or to restrict the count or length of the header, enter the following command:

```
hostname(config-cmap)# match [not] request header {[field]
[regex [regex_name | class regex_class_name]] |
[length gt max_length_bytes | count gt max_count_bytes]}
```

Where the *field* is the predefined message header keyword. The **regex** *regex\_name* argument is the regular expression you created in [Step 1](#). The **class** *regex\_class\_name* is the regular expression class map you created in [Step 2](#). The **length gt** *max\_bytes* is the maximum message body length in bytes. The **count gt** *max\_count* is the maximum number of header fields.

- g. (Optional) To match text found in the HTTP request message method, enter the following command:

```
hostname(config-cmap)# match [not] request method {[method] |
[regex [regex_name | class regex_class_name]]}
```

Where the *method* is the predefined message method keyword. The **regex** *regex\_name* argument is the regular expression you created in [Step 1](#). The **class** *regex\_class\_name* is the regular expression class map you created in [Step 2](#).

- h. (Optional) To match text found in the HTTP request message URI, enter the following command:

```
hostname(config-cmap)# match [not] request uri {regex [regex_name | class
regex_class_name] | length gt max_bytes}
```

Where the **regex** *regex\_name* argument is the regular expression you created in [Step 1](#). The **class** *regex\_class\_name* is the regular expression class map you created in [Step 2](#). The **length gt** *max\_bytes* is the maximum message body length in bytes.

- i. (Optional) To match text found in the HTTP response message body, or to comment out Java applet and Active X object tags in order to filter them, enter the following command:

```
hostname(config-cmap)# match [not] response body {[active-x] | [java-applet] |
[regex [regex_name | class regex_class_name]] | length gt max_bytes}
```

Where the **regex** *regex\_name* argument is the regular expression you created in [Step 1](#). The **class** *regex\_class\_name* is the regular expression class map you created in [Step 2](#). The **length gt** *max\_bytes* is the maximum message body length in bytes.

- j. (Optional) To match text found in the HTTP response message header, or to restrict the count or length of the header, enter the following command:

```
hostname(config-cmap)# match [not] response header {[field]
[regex [regex_name | class regex_class_name]] |
[length gt max_length_bytes | count gt max_count]}
```

Where the *field* is the predefined message header keyword. The **regex** *regex\_name* argument is the regular expression you created in [Step 1](#). The **class** *regex\_class\_name* is the regular expression class map you created in [Step 2](#). The **length gt** *max\_bytes* is the maximum message body length in bytes. The **count gt** *max\_count* is the maximum number of header fields.

- k. (Optional) To match text found in the HTTP response message status line, enter the following command:

```
hostname(config-cmap)# match [not] response status-line {regex [regex_name] | class
regex_class_name}
```

Where the **regex** *regex\_name* argument is the regular expression you created in [Step 1](#). The **class** *regex\_class\_name* is the regular expression class map you created in [Step 2](#).

- Step 4** Create an HTTP inspection policy map, enter the following command:

```
hostname(config)# policy-map type inspect http policy_map_name
hostname(config-pmap)#
```

Where the *policy\_map\_name* is the name of the policy map. The CLI enters policy-map configuration mode.

- Step 5** (Optional) To add a description to the policy map, enter the following command:

```
hostname(config-pmap)# description string
```

- Step 6** To apply actions to matching traffic, perform the following steps.

- a. Specify the traffic on which you want to perform actions using one of the following methods:

- Specify the HTTP class map that you created in [Step 3](#) by entering the following command:

```
hostname(config-pmap)# class class_map_name
hostname(config-pmap-c)#
```

- Specify traffic directly in the policy map using one of the **match** commands described in [Step 3](#). If you use a **match not** command, then any traffic that does not match the criterion in the **match not** command has the action applied.

- b. Specify the action you want to perform on the matching traffic by entering the following command:

```
hostname(config-pmap-c)# {[drop [send-protocol-error] |
drop-connection [send-protocol-error] | mask | reset] [log] | rate-limit message_rate}
```

Not all options are available for each **match** or **class** command. See the CLI help or the command reference for the exact options available.

The **drop** keyword drops all packets that match.

The **send-protocol-error** keyword sends a protocol error message.

The **drop-connection** keyword drops the packet and closes the connection.

The **mask** keyword masks out the matching portion of the packet.

The **reset** keyword drops the packet, closes the connection, and sends a TCP reset to the server and/or client.

The **log** keyword, which you can use alone or with one of the other keywords, sends a system log message.

The **rate-limit** *message\_rate* argument limits the rate of messages.

You can specify multiple **class** or **match** commands in the policy map. For information about the order of **class** and **match** commands, see the “[Defining Actions in an Inspection Policy Map](#)” section on [page 33-2](#).

**Step 7** To configure parameters that affect the inspection engine, perform the following steps:

- a. To enter parameters configuration mode, enter the following command:

```
hostname(config-pmap)# parameters
hostname(config-pmap-p)#
```

- b. To check for HTTP protocol violations, enter the following command:

```
hostname(config-pmap-p)# protocol-violation [action [drop-connection / reset / log]]
```

Where the **drop-connection** action closes the connection. The **reset** action closes the connection and sends a TCP reset to the client. The **log** action sends a system log message when this policy map matches traffic.

- c. To substitute a string for the server header field, enter the following command:

```
hostname(config-pmap-p)# spoofer-server string
```

Where the *string* argument is the string to substitute for the server header field. Note: WebVPN streams are not subject to the **spoofer-server** command.

---

The following example shows how to define an HTTP inspection policy map that will allow and log any HTTP connection that attempts to access "www.xyz.com/\*.asp" or "www.xyz[0-9][0-9].com" with methods "GET" or "PUT." All other URL/Method combinations will be silently allowed.

```
hostname(config)# regex url1 "www\.xyz\.com/.*\.asp"
hostname(config)# regex url2 "www\.xyz[0-9][0-9]\.com"
hostname(config)# regex get "GET"
hostname(config)# regex put "PUT"

hostname(config)# class-map type regex match-any url_to_log
hostname(config-cmap)# match regex url1
hostname(config-cmap)# match regex url2
hostname(config-cmap)# exit

hostname(config)# class-map type regex match-any methods_to_log
hostname(config-cmap)# match regex get
hostname(config-cmap)# match regex put
hostname(config-cmap)# exit

hostname(config)# class-map type inspect http http_url_policy
hostname(config-cmap)# match request uri regex class url_to_log
hostname(config-cmap)# match request method regex class methods_to_log
hostname(config-cmap)# exit

hostname(config)# policy-map type inspect http http_policy
hostname(config-pmap)# class http_url_policy
hostname(config-pmap-c)# log
```

## ICMP Inspection

The ICMP inspection engine allows ICMP traffic to have a "session" so it can be inspected like TCP and UDP traffic. Without the ICMP inspection engine, we recommend that you do not allow ICMP through the ASA in an access list. Without stateful inspection, ICMP can be used to attack your network. The ICMP inspection engine ensures that there is only one response for each request, and that the sequence number is correct.

## ICMP Error Inspection

When this feature is enabled, the ASA creates translation sessions for intermediate hops that send ICMP error messages, based on the NAT configuration. The ASA overwrites the packet with the translated IP addresses.

When disabled, the ASA does not create translation sessions for intermediate nodes that generate ICMP error messages. ICMP error messages generated by the intermediate nodes between the inside host and the ASA reach the outside host without consuming any additional NAT resource. This is undesirable when an outside host uses the traceroute command to trace the hops to the destination on the inside of the ASA. When the ASA does not translate the intermediate hops, all the intermediate hops appear with the mapped destination IP address.

The ICMP payload is scanned to retrieve the five-tuple from the original packet. Using the retrieved five-tuple, a lookup is performed to determine the original address of the client. The ICMP error inspection engine makes the following changes to the ICMP packet:

- In the IP Header, the mapped IP is changed to the real IP (Destination Address) and the IP checksum is modified.
- In the ICMP Header, the ICMP checksum is modified due to the changes in the ICMP packet.
- In the Payload, the following changes are made:
  - Original packet mapped IP is changed to the real IP
  - Original packet mapped port is changed to the real Port
  - Original packet IP checksum is recalculated

## Instant Messaging Inspection

This section describes the IM inspection engine. This section includes the following topics:

- [IM Inspection Overview, page 43-21](#)
- [Configuring an Instant Messaging Inspection Policy Map for Additional Inspection Control, page 43-21](#)

### IM Inspection Overview

The IM inspect engine lets you apply fine grained controls on the IM application to control the network usage and stop leakage of confidential data, propagation of worms, and other threats to the corporate network.

### Configuring an Instant Messaging Inspection Policy Map for Additional Inspection Control

To specify actions when a message violates a parameter, create an IM inspection policy map. You can then apply the inspection policy map when you enable IM inspection.

To create an IM inspection policy map, perform the following steps:

**Step 1** (Optional) Add one or more regular expressions for use in traffic matching commands according to the “[Creating a Regular Expression](#)” section on page 13-12. See the types of text you can match in the **match** commands described in [Step 3](#).

**Step 2** (Optional) Create one or more regular expression class maps to group regular expressions according to the “[Creating a Regular Expression Class Map](#)” section on page 13-15.s

**Step 3** (Optional) Create an IM inspection class map by performing the following steps.

A class map groups multiple traffic matches. Traffic must match *all* of the **match** commands to match the class map. You can alternatively identify **match** commands directly in the policy map. The difference between creating a class map and defining the traffic match directly in the inspection policy map is that the class map lets you create more complex match criteria, and you can reuse class maps.

To specify traffic that should not match the class map, use the **match not** command. For example, if the **match not** command specifies the string “example.com,” then any traffic that includes “example.com” does not match the class map.

For the traffic that you identify in this class map, you can specify actions such as drop-connection, reset, and/or log the connection in the inspection policy map.

If you want to perform different actions for each **match** command, you should identify the traffic directly in the policy map.

- a. Create the class map by entering the following command:

```
hostname(config)# class-map type inspect im [match-all | match-any] class_map_name
hostname(config-cmap)#
```

Where *the class\_map\_name* is the name of the class map. The **match-all** keyword is the default, and specifies that traffic must match all criteria to match the class map. The **match-any** keyword specifies that the traffic matches the class map if it matches at least one of the criteria. The CLI enters class-map configuration mode, where you can enter one or more **match** commands.

- b. (Optional) To add a description to the class map, enter the following command:

```
hostname(config-cmap)# description string
```

Where *the string* is the description of the class map (up to 200 characters).

- c. (Optional) To match traffic of a specific IM protocol, such as Yahoo or MSN, enter the following command:

```
hostname(config-cmap)# match [not] protocol {im-yahoo | im-msn}
```

- d. (Optional) To match a specific IM service, such as chat, file-transfer, webcam, voice-chat, conference, or games, enter the following command:

```
hostname(config-cmap)# match [not] service {chat | file-transfer | webcam | voice-chat
| conference | games}
```

- e. (Optional) To match the source login name of the IM message, enter the following command:

```
hostname(config-cmap)# match [not] login-name regex {class class_name | regex_name}
```

Where the **regex regex\_name** argument is the regular expression you created in [Step 1](#). The **class regex\_class\_name** is the regular expression class map you created in [Step 2](#).

- f. (Optional) To match the destination login name of the IM message, enter the following command:

```
hostname(config-cmap)# match [not] peer-login-name regex {class class_name |
regex_name}
```

Where the **regex** *regex\_name* argument is the regular expression you created in [Step 1](#). The **class** *regex\_class\_name* is the regular expression class map you created in [Step 2](#).

- g. (Optional) To match the source IP address of the IM message, enter the following command:

```
hostname(config-cmap)# match [not] ip-address ip_address ip_address_mask
```

Where the *ip\_address* and the *ip\_address\_mask* is the IP address and netmask of the message source.

- h. (Optional) To match the destination IP address of the IM message, enter the following command:

```
hostname(config-cmap)# match [not] peer-ip-address ip_address ip_address_mask
```

Where the *ip\_address* and the *ip\_address\_mask* is the IP address and netmask of the message destination.

- i. (Optional) To match the version of the IM message, enter the following command:

```
hostname(config-cmap)# match [not] version regex {class class_name | regex_name}
```

Where the **regex** *regex\_name* argument is the regular expression you created in [Step 1](#). The **class** *regex\_class\_name* is the regular expression class map you created in [Step 2](#).

- j. (Optional) To match the filename of the IM message, enter the following command:

```
hostname(config-cmap)# match [not] filename regex {class class_name | regex_name}
```

Where the **regex** *regex\_name* argument is the regular expression you created in [Step 1](#). The **class** *regex\_class\_name* is the regular expression class map you created in [Step 2](#).




---

**Note** Not supported using MSN IM protocol.

---

- Step 4** Create an IM inspection policy map, enter the following command:

```
hostname(config)# policy-map type inspect im policy_map_name
hostname(config-pmap)#
```

Where the *policy\_map\_name* is the name of the policy map. The CLI enters policy-map configuration mode.

- Step 5** (Optional) To add a description to the policy map, enter the following command:

```
hostname(config-pmap)# description string
```

- Step 6** Specify the traffic on which you want to perform actions using one of the following methods:

- Specify the IM class map that you created in [Step 3](#) by entering the following command:

```
hostname(config-pmap)# class class_map_name
hostname(config-pmap-c)#
```

- Specify traffic directly in the policy map using one of the **match** commands described in [Step 3](#). If you use a **match not** command, then any traffic that does not match the criterion in the **match not** command has the action applied.

You can specify multiple **class** or **match** commands in the policy map. For information about the order of **class** and **match** commands, see the “[Defining Actions in an Inspection Policy Map](#)” section on [page 33-2](#).

- Step 7** Specify the action you want to perform on the matching traffic by entering the following command:

```
hostname(config-pmap-c)# {drop-connection | reset | log}
```

Where the **drop-connection** action closes the connection. The **reset** action closes the connection and sends a TCP reset to the client. The **log** action sends a system log message when this policy map matches traffic.

The following example shows how to define an IM inspection policy map.

```
hostname(config)# regex loginname1 "ying@yahoo.com"
hostname(config)# regex loginname2 "Kevin@yahoo.com"
hostname(config)# regex loginname3 "rahul@yahoo.com"
hostname(config)# regex loginname4 "darshant@yahoo.com"
hostname(config)# regex yahoo_version_regex "1\\.0"
hostname(config)# regex gif_files "\.gif"
hostname(config)# regex exe_files "\.exe"

hostname(config)# class-map type regex match-any yahoo_src_login_name_regex
hostname(config-cmap)# match regex loginname1
hostname(config-cmap)# match regex loginname2

hostname(config)# class-map type regex match-any yahoo_dst_login_name_regex
hostname(config-cmap)# match regex loginname3
hostname(config-cmap)# match regex loginname4

hostname(config)# class-map type inspect im match-any yahoo_file_block_list
hostname(config-cmap)# match filename regex gif_files
hostname(config-cmap)# match filename regex exe_files

hostname(config)# class-map type inspect im match-all yahoo_im_policy
hostname(config-cmap)# match login-name regex class yahoo_src_login_name_regex
hostname(config-cmap)# match peer-login-name regex class yahoo_dst_login_name_regex

hostname(config)# class-map type inspect im match-all yahoo_im_policy2
hostname(config-cmap)# match version regex yahoo_version_regex

hostname(config)# class-map im_inspect_class_map
hostname(config-cmap)# match default-inspection-traffic

hostname(config)# policy-map type inspect im im_policy_all
hostname(config-pmap)# class yahoo_file_block_list
hostname(config-pmap-c)# match service file-transfer
hostname(config-pmap)# class yahoo_im_policy
hostname(config-pmap-c)# drop-connection
hostname(config-pmap)# class yahoo_im_policy2
hostname(config-pmap-c)# reset
hostname(config)# policy-map global_policy_name
hostname(config-pmap)# class im_inspect_class_map
hostname(config-pmap-c)# inspect im im_policy_all
```

## IP Options Inspection

This section describes the IP Options inspection engine. This section includes the following topics:

- [IP Options Inspection Overview, page 43-25](#)
- [Configuring an IP Options Inspection Policy Map for Additional Inspection Control, page 43-25](#)

## IP Options Inspection Overview

Each IP packet contains an IP header with the Options field. The Options field, commonly referred to as IP Options, provide for control functions that are required in some situations but unnecessary for most common communications. In particular, IP Options include provisions for time stamps, security, and special routing. Use of IP Options is optional, and the field can contain zero, one, or more options.

You can configure IP Options inspection to control which IP packets with specific IP options are allowed through the ASA. Configuring this inspection instructs the ASA to allow a packet to pass or to clear the specified IP options and then allow the packet to pass.

IP Options inspection can check for the following three IP options in a packet:

- End of Options List (EOOL) or IP Option 0—This option, which contains just a single zero byte, appears at the end of all options to mark the end of a list of options. This might not coincide with the end of the header according to the header length.
- No Operation (NOP) or IP Option 1—The Options field in the IP header can contain zero, one, or more options, which makes the total length of the field variable. However, the IP header must be a multiple of 32 bits. If the number of bits of all options is not a multiple of 32 bits, the NOP option is used as “internal padding” to align the options on a 32-bit boundary.
- Router Alert (RTRALT) or IP Option 20—This option notifies transit routers to inspect the contents of the packet even when the packet is not destined for that router. This inspection is valuable when implementing RSVP and similar protocols require relatively complex processing from the routers along the packets delivery path.

**Note**

IP Options inspection is included by default in the global inspection policy. Therefore, the ASA allows RSVP traffic that contains packets with the Router Alert option (option 20) when the ASA is in routed mode.

Dropping RSVP packets containing the Router Alert option can cause problems in VoIP implementations.

When you configure the ASA to clear the Router Alert option from IP headers, the IP header changes in the following ways:

- The Options field is padded so that the field ends on a 32 bit boundary.
- Internet header length (IHL) changes.
- The total length of the packet changes.
- The checksum is recomputed.

If an IP header contains additional options other than EOOL, NOP, or RTRALT, regardless of whether the ASA is configured to allow these options, the ASA will drop the packet.

## Configuring an IP Options Inspection Policy Map for Additional Inspection Control

**Step 1** To create an IP Options inspection policy map, enter the following command:

```
hostname(config)# policy-map type inspect ip-options policy_map_name
hostname(config-pmap)#
```

Where the *policy\_map\_name* is the name of the policy map. The CLI enters policy-map configuration mode.

**Step 2** (Optional) To add a description to the policy map, enter the following command:

```
hostname(config-pmap)# description string
```

**Step 3** To configure parameters that affect the inspection engine, perform the following steps:

**a.** To enter parameters configuration mode, enter the following command:

```
hostname(config-pmap)# parameters
hostname(config-pmap-p)#
```

**b.** To allow or clear packets with the End of Options List (EOOL) option, enter the following command:

```
hostname(config-pmap-p)# eoool action {allow | clear}
```

This option, which contains just a single zero byte, appears at the end of all options to mark the end of a list of options. This might not coincide with the end of the header according to the header length.

**c.** To allow or clear packets with the No Operation (NOP) option, enter the following command:

```
hostname(config-pmap-p)# nop action {allow | clear}
```

The Options field in the IP header can contain zero, one, or more options, which makes the total length of the field variable. However, the IP header must be a multiple of 32 bits. If the number of bits of all options is not a multiple of 32 bits, the NOP option is used as “internal padding” to align the options on a 32-bit boundary.

**d.** To allow or clear packets with the Router Alert (RTRALT) option, enter the following command:

```
hostname(config-pmap-p)# router-alert action {allow | clear}
```

This option notifies transit routers to inspect the contents of the packet even when the packet is not destined for that router. This inspection is valuable when implementing RSVP and similar protocols require relatively complex processing from the routers along the packets delivery path.




---

**Note** Enter the **clear** command to clear the IP option from the packet before allowing the packet through the ASA.

---

## IPsec Pass Through Inspection

This section describes the IPsec Pass Through inspection engine. This section includes the following topics:

- [IPsec Pass Through Inspection Overview, page 43-27](#)
- [“Example for Defining an IPsec Pass Through Parameter Map” section on page 43-27](#)

## IPsec Pass Through Inspection Overview

Internet Protocol Security (IPsec) is a protocol suite for securing IP communications by authenticating and encrypting each IP packet of a data stream. IPsec also includes protocols for establishing mutual authentication between agents at the beginning of the session and negotiation of cryptographic keys to be used during the session. IPsec can be used to protect data flows between a pair of hosts (for example, computer users or servers), between a pair of security gateways (such as routers or firewalls), or between a security gateway and a host.

IPsec Pass Through application inspection provides convenient traversal of ESP (IP protocol 50) and AH (IP protocol 51) traffic associated with an IKE UDP port 500 connection. It avoids lengthy access list configuration to permit ESP and AH traffic and also provides security using timeout and max connections.

Specify IPsec Pass Through inspection parameters to identify a specific map to use for defining the parameters for the inspection. Configure a policy map for Specify IPsec Pass Through inspection to access the parameters configuration, which lets you specify the restrictions for ESP or AH traffic. You can set the per client max connections and the idle timeout in parameters configuration.

NAT and non-NAT traffic is permitted. However, PAT is not supported.

## Example for Defining an IPsec Pass Through Parameter Map

The following example shows how to use access lists to identify IKE traffic, define an IPsec Pass Through parameter map, define a policy, and apply the policy to the outside interface:

```
hostname(config)# access-list ipsecpassthruacl permit udp any any eq 500
hostname(config)# class-map ipsecpassthru-traffic
hostname(config-cmap)# match access-list ipsecpassthruacl
hostname(config)# policy-map type inspect ipsec-pass-thru iptmap
hostname(config-pmap)# parameters
hostname(config-pmap-p)# esp per-client-max 10 timeout 0:11:00
hostname(config-pmap-p)# ah per-client-max 5 timeout 0:06:00
hostname(config)# policy-map inspection_policy
hostname(config-pmap)# class ipsecpassthru-traffic
hostname(config-pmap-c)# inspect ipsec-pass-thru iptmap
hostname(config)# service-policy inspection_policy interface outside
```

## IPv6 Inspection

You can configure IPv6 Inspection by using MPF rules to selectively block IPv6 traffic based on the extension header. IPv6 packets are subjected to an early security check. The ASA always passes hop-by-hop and destination option types of extension headers while blocking router header and no next header.

You can enable default IPv6 inspection or define IPv6 inspection. By defining an MPF policy map for IPv6 inspection you can configure the ASA to selectively drop IPv6 packets based on following types of extension headers found anywhere in the IPv6 packet:

- Hop-by-Hop Options
- Routing (Type 0)
- Fragment
- Destination Options

- Authentication
- Encapsulating Security Payload

In addition, default IPv6 inspection checks conformance to RFC 2460 for type and order of extension headers in IPv6 packets:

- IPv6 header
- Hop-by-Hop Options header (0)
- Destination Options header (60)
- Routing header (43)
- Fragment header (44)
- Authentication (51)
- Encapsulating Security Payload header(50)
- Destination Options header (60)
- No Next Header (59)

When a policy map is not configured for IPv6 inspection or a configured policy map is not associated with an interface, the ASA drops packets with any mobility type and a routing-type IPv6 extension header that arrive at the interface.

When an IPv6 inspection policy map is created, the ASA automatically generates a configuration to drop packets that match header routing-type in the range 0-255.

## Configuring an IPv6 Inspection Policy Map

You can configure a policy map for IPv6 inspection to handle IPv6 extension headers. The IPv6 policy map is applied to each classified IPv6 packet on the specified direction. Currently, only incoming IPv6 traffic is inspected.

---

## NetBIOS Inspection

This section describes the IM inspection engine. This section includes the following topics:

- [NetBIOS Inspection Overview, page 43-28](#)
- [Configuring a NetBIOS Inspection Policy Map for Additional Inspection Control, page 43-29](#)

## NetBIOS Inspection Overview

NetBIOS inspection is enabled by default. The NetBios inspection engine translates IP addresses in the NetBios name service (NBNS) packets according to the ASA NAT configuration.

## Configuring a NetBIOS Inspection Policy Map for Additional Inspection Control

To specify actions when a message violates a parameter, create a NETBIOS inspection policy map. You can then apply the inspection policy map when you enable NETBIOS inspection.

To create a NETBIOS inspection policy map, perform the following steps:

**Step 1** (Optional) Add one or more regular expressions for use in traffic matching commands according to the “[Creating a Regular Expression](#)” section on page 13-12. See the types of text you can match in the **match** commands described in [Step 3](#).

**Step 2** (Optional) Create one or more regular expression class maps to group regular expressions according to the “[Creating a Regular Expression Class Map](#)” section on page 13-15.

**Step 3** Create a NetBIOS inspection policy map, enter the following command:

```
hostname(config)# policy-map type inspect netbios policy_map_name
hostname(config-pmap)#
```

Where the *policy\_map\_name* is the name of the policy map. The CLI enters policy-map configuration mode.

**Step 4** (Optional) To add a description to the policy map, enter the following command:

```
hostname(config-pmap)# description string
```

**Step 5** To apply actions to matching traffic, perform the following steps.

a. Specify the traffic on which you want to perform actions using one of the following methods:

- Specify the NetBIOS class map that you created in [Step 3](#) by entering the following command:

```
hostname(config-pmap)# class class_map_name
hostname(config-pmap-c)#
```

- Specify traffic directly in the policy map using one of the **match** commands described in [Step 3](#). If you use a **match not** command, then any traffic that does not match the criterion in the **match not** command has the action applied.

b. Specify the action you want to perform on the matching traffic by entering the following command:

```
hostname(config-pmap-c)# {[drop [send-protocol-error] |
drop-connection [send-protocol-error] | mask | reset] [log] | rate-limit message_rate}
```

Not all options are available for each **match** or **class** command. See the CLI help or the command reference for the exact options available.

The **drop** keyword drops all packets that match.

The **send-protocol-error** keyword sends a protocol error message.

The **drop-connection** keyword drops the packet and closes the connection.

The **mask** keyword masks out the matching portion of the packet.

The **reset** keyword drops the packet, closes the connection, and sends a TCP reset to the server and/or client.

The **log** keyword, which you can use alone or with one of the other keywords, sends a system log message.

The **rate-limit** *message\_rate* argument limits the rate of messages.

You can specify multiple **class** or **match** commands in the policy map. For information about the order of **class** and **match** commands, see the “[Defining Actions in an Inspection Policy Map](#)” section on page 33-2.

**Step 6** To configure parameters that affect the inspection engine, perform the following steps:

- a. To enter parameters configuration mode, enter the following command:

```
hostname(config-pmap)# parameters
hostname(config-pmap-p)#
```

- b. To check for NETBIOS protocol violations, enter the following command:

```
hostname(config-pmap-p)# protocol-violation [action [drop-connection / reset / log]]
```

Where the **drop-connection** action closes the connection. The **reset** action closes the connection and sends a TCP reset to the client. The **log** action sends a system log message when this policy map matches traffic.

The following example shows how to define a NETBIOS inspection policy map.

```
hostname(config)# policy-map type inspect netbios netbios_map
hostname(config-pmap)# protocol-violation drop log

hostname(config)# policy-map netbios_policy
hostname(config-pmap)# class inspection_default
hostname(config-pmap-c)# inspect netbios netbios_map
```

## PPTP Inspection

PPTP is a protocol for tunneling PPP traffic. A PPTP session is composed of one TCP channel and usually two PPTP GRE tunnels. The TCP channel is the control channel used for negotiating and managing the PPTP GRE tunnels. The GRE tunnels carries PPP sessions between the two hosts.

When enabled, PPTP application inspection inspects PPTP protocol packets and dynamically creates the GRE connections and xlates necessary to permit PPTP traffic. Only Version 1, as defined in RFC 2637, is supported.

PAT is only performed for the modified version of GRE [RFC 2637] when negotiated over the PPTP TCP control channel. Port Address Translation is *not* performed for the unmodified version of GRE [RFC 1701, RFC 1702].

Specifically, the ASA inspects the PPTP version announcements and the outgoing call request/response sequence. Only PPTP Version 1, as defined in RFC 2637, is inspected. Further inspection on the TCP control channel is disabled if the version announced by either side is not Version 1. In addition, the outgoing-call request and reply sequence are tracked. Connections and xlates are dynamic allocated as necessary to permit subsequent secondary GRE data traffic.

The PPTP inspection engine must be enabled for PPTP traffic to be translated by PAT. Additionally, PAT is only performed for a modified version of GRE (RFC2637) and only if it is negotiated over the PPTP TCP control channel. PAT is not performed for the unmodified version of GRE (RFC 1701 and RFC 1702).

As described in RFC 2637, the PPTP protocol is mainly used for the tunneling of PPP sessions initiated from a modem bank PAC (PPTP Access Concentrator) to the headend PNS (PPTP Network Server).

When used this way, the PAC is the remote client and the PNS is the server.

However, when used for VPN by Windows, the interaction is inverted. The PNS is a remote single-user PC that initiates connection to the head-end PAC to gain access to a central network.

## SMTP and Extended SMTP Inspection

This section describes the IM inspection engine. This section includes the following topics:

- [SMTP and ESMTP Inspection Overview, page 43-31](#)
- [Configuring an ESMTP Inspection Policy Map for Additional Inspection Control, page 43-32](#)

### SMTP and ESMTP Inspection Overview

ESMTP application inspection provides improved protection against SMTP-based attacks by restricting the types of SMTP commands that can pass through the ASA and by adding monitoring capabilities.

ESMTP is an enhancement to the SMTP protocol and is similar in most respects to SMTP. For convenience, the term SMTP is used in this document to refer to both SMTP and ESMTP. The application inspection process for extended SMTP is similar to SMTP application inspection and includes support for SMTP sessions. Most commands used in an extended SMTP session are the same as those used in an SMTP session but an ESMTP session is considerably faster and offers more options related to reliability and security, such as delivery status notification.

Extended SMTP application inspection adds support for these extended SMTP commands, including AUTH, EHLO, ETRN, HELP, SAML, SEND, SOML, STARTTLS, and VRFY. Along with the support for seven RFC 821 commands (DATA, HELO, MAIL, NOOP, QUIT, RCPT, RSET), the ASA supports a total of fifteen SMTP commands.

Other extended SMTP commands, such as ATRN, ONEX, VERB, CHUNKING, and private extensions are not supported. Unsupported commands are translated into Xs, which are rejected by the internal server. This results in a message such as “500 Command unknown: 'XXX'.” Incomplete commands are discarded.

The ESMTP inspection engine changes the characters in the server SMTP banner to asterisks except for the “2”, “0”, “0” characters. Carriage return (CR) and linefeed (LF) characters are ignored.

With SMTP inspection enabled, a Telnet session used for interactive SMTP may hang if the following rules are not observed: SMTP commands must be at least four characters in length; must be terminated with carriage return and line feed; and must wait for a response before issuing the next reply.

An SMTP server responds to client requests with numeric reply codes and optional human-readable strings. SMTP application inspection controls and reduces the commands that the user can use as well as the messages that the server returns. SMTP inspection performs three primary tasks:

- Restricts SMTP requests to seven basic SMTP commands and eight extended commands.
- Monitors the SMTP command-response sequence.
- Generates an audit trail—Audit record 108002 is generated when invalid character embedded in the mail address is replaced. For more information, see RFC 821.

SMTP inspection monitors the command and response sequence for the following anomalous signatures:

- Truncated commands.
- Incorrect command termination (not terminated with <CR><LR>).

- The MAIL and RCPT commands specify who are the sender and the receiver of the mail. Mail addresses are scanned for strange characters. The pipeline character (|) is deleted (changed to a blank space) and “<” ,”>” are only allowed if they are used to define a mail address (“>” must be preceded by “<”).
- Unexpected transition by the SMTP server.
- For unknown commands, the ASA changes all the characters in the packet to X. In this case, the server generates an error code to the client. Because of the change in the packed, the TCP checksum has to be recalculated or adjusted.
- TCP stream editing.
- Command pipelining.

## Configuring an ESMTP Inspection Policy Map for Additional Inspection Control

ESMTP inspection detects attacks, including spam, phishing, malformed message attacks, buffer overflow/underflow attacks. It also provides support for application security and protocol conformance, which enforce the sanity of the ESMTP messages as well as detect several attacks, block senders/receivers, and block mail relay.

To specify actions when a message violates a parameter, create an ESMTP inspection policy map. You can then apply the inspection policy map when you enable ESMTP inspection.

To create an ESMTP inspection policy map, perform the following steps:

---

**Step 1** (Optional) Add one or more regular expressions for use in traffic matching commands according to the “[Creating a Regular Expression](#)” section on page 13-12. See the types of text you can match in the **match** commands described in [Step 3](#).

**Step 2** (Optional) Create one or more regular expression class maps to group regular expressions according to the “[Creating a Regular Expression Class Map](#)” section on page 13-15.

**Step 3** Create an ESMTP inspection policy map, enter the following command:

```
hostname(config)# policy-map type inspect esmtp policy_map_name
hostname(config-pmap)#
```

Where the *policy\_map\_name* is the name of the policy map. The CLI enters policy-map configuration mode.

**Step 4** (Optional) To add a description to the policy map, enter the following command:

```
hostname(config-pmap)# description string
```

**Step 5** To apply actions to matching traffic, perform the following steps.

a. Specify the traffic on which you want to perform actions using one of the following methods:

- Specify the ESMTP class map that you created in [Step 3](#) by entering the following command:

```
hostname(config-pmap)# class class_map_name
hostname(config-pmap-c)#
```

- Specify traffic directly in the policy map using one of the **match** commands described in [Step 3](#). If you use a **match not** command, then any traffic that does not match the criterion in the **match not** command has the action applied.

b. Specify the action you want to perform on the matching traffic by entering the following command:

```
hostname(config-pmap-c)# {[drop [send-protocol-error] |
drop-connection [send-protocol-error] | mask | reset] [log] | rate-limit message_rate}
```

Not all options are available for each **match** or **class** command. See the CLI help or the command reference for the exact options available.

The **drop** keyword drops all packets that match.

The **send-protocol-error** keyword sends a protocol error message.

The **drop-connection** keyword drops the packet and closes the connection.

The **mask** keyword masks out the matching portion of the packet.

The **reset** keyword drops the packet, closes the connection, and sends a TCP reset to the server and/or client.

The **log** keyword, which you can use alone or with one of the other keywords, sends a system log message.

The **rate-limit message\_rate** argument limits the rate of messages.

You can specify multiple **class** or **match** commands in the policy map. For information about the order of **class** and **match** commands, see the “[Defining Actions in an Inspection Policy Map](#)” section on page 33-2.

**Step 6** To configure parameters that affect the inspection engine, perform the following steps:

- a. To enter parameters configuration mode, enter the following command:

```
hostname(config-pmap)# parameters
hostname(config-pmap-p)#
```

- b. To configure a local domain name, enter the following command:

```
hostname(config-pmap-p)# mail-relay domain-name action [drop-connection / log]
```

Where the **drop-connection** action closes the connection. The **log** action sends a system log message when this policy map matches traffic.

- c. To enforce banner obfuscation, enter the following command:

```
hostname(config-pmap-p)# mask-banner
```

The following example shows how to define an ESMTP inspection policy map.

```
hostname(config)# regex user1 "user1@cisco.com"
hostname(config)# regex user2 "user2@cisco.com"
hostname(config)# regex user3 "user3@cisco.com"
hostname(config)# class-map type regex senders_black_list
hostname(config-cmap)# description "Regular expressions to filter out undesired senders"
hostname(config-cmap)# match regex user1
hostname(config-cmap)# match regex user2
hostname(config-cmap)# match regex user3

hostname(config)# policy-map type inspect esmtp advanced_esmtp_map
hostname(config-pmap)# match sender-address regex class senders_black_list
hostname(config-pmap-c)# drop-connection log

hostname(config)# policy-map outside_policy
hostname(config-pmap)# class inspection_default
hostname(config-pmap-c)# inspect esmtp advanced_esmtp_map

hostname(config)# service-policy outside_policy interface outside
```

## TFTP Inspection

TFTP inspection is enabled by default.

TFTP, described in RFC 1350, is a simple protocol to read and write files between a TFTP server and client.

The ASA inspects TFTP traffic and dynamically creates connections and translations, if necessary, to permit file transfer between a TFTP client and server. Specifically, the inspection engine inspects TFTP read request (RRQ), write request (WRQ), and error notification (ERROR).

A dynamic secondary channel and a PAT translation, if necessary, are allocated on a reception of a valid read (RRQ) or write (WRQ) request. This secondary channel is subsequently used by TFTP for file transfer or error notification.

Only the TFTP server can initiate traffic over the secondary channel, and at most one incomplete secondary channel can exist between the TFTP client and server. An error notification from the server closes the secondary channel.

TFTP inspection must be enabled if static PAT is used to redirect TFTP traffic.



## CHAPTER 44

# Configuring Inspection for Voice and Video Protocols

---

This chapter describes how to configure application layer protocol inspection. Inspection engines are required for services that embed IP addressing information in the user data packet or that open secondary channels on dynamically assigned ports. These protocols require the ASA to do a deep packet inspection instead of passing the packet through the fast path. As a result, inspection engines can affect overall throughput.

Several common inspection engines are enabled on the ASA by default, but you might need to enable others depending on your network.

This chapter includes the following sections:

- [CTIQBE Inspection, page 44-1](#)
- [H.323 Inspection, page 44-3](#)
- [MGCP Inspection, page 44-11](#)
- [RTSP Inspection, page 44-15](#)
- [SIP Inspection, page 44-19](#)
- [Skinny \(SCCP\) Inspection, page 44-25](#)

## CTIQBE Inspection

This section describes CTIQBE application inspection. This section includes the following topics:

- [CTIQBE Inspection Overview, page 44-1](#)
- [Limitations and Restrictions, page 44-2](#)
- [Verifying and Monitoring CTIQBE Inspection, page 44-2](#)

## CTIQBE Inspection Overview

CTIQBE protocol inspection supports NAT, PAT, and bidirectional NAT. This enables Cisco IP SoftPhone and other Cisco TAPI/JTAPI applications to work successfully with Cisco CallManager for call setup across the ASA.

TAPI and JTAPI are used by many Cisco VoIP applications. CTIQBE is used by Cisco TSP to communicate with Cisco CallManager.

## Limitations and Restrictions

The following summarizes limitations that apply when using CTIQBE application inspection:

- CTIQBE application inspection does not support configurations with the **alias** command.
- Stateful failover of CTIQBE calls is not supported.
- Entering the **debug ctiqbe** command may delay message transmission, which may have a performance impact in a real-time environment. When you enable this debugging or logging and Cisco IP SoftPhone seems unable to complete call setup through the ASA, increase the timeout values in the Cisco TSP settings on the system running Cisco IP SoftPhone.

The following summarizes special considerations when using CTIQBE application inspection in specific scenarios:

- If two Cisco IP SoftPhones are registered with different Cisco CallManagers, which are connected to different interfaces of the ASA, calls between these two phones fails.
- When Cisco CallManager is located on the higher security interface compared to Cisco IP SoftPhones, if NAT or outside NAT is required for the Cisco CallManager IP address, the mapping must be static as Cisco IP SoftPhone requires the Cisco CallManager IP address to be specified explicitly in its Cisco TSP configuration on the PC.
- When using PAT or Outside PAT, if the Cisco CallManager IP address is to be translated, its TCP port 2748 must be statically mapped to the same port of the PAT (interface) address for Cisco IP SoftPhone registrations to succeed. The CTIQBE listening port (TCP 2748) is fixed and is not user-configurable on Cisco CallManager, Cisco IP SoftPhone, or Cisco TSP.

## Verifying and Monitoring CTIQBE Inspection

The **show ctiqbe** command displays information regarding the CTIQBE sessions established across the ASA. It shows information about the media connections allocated by the CTIQBE inspection engine.

The following is sample output from the **show ctiqbe** command under the following conditions. There is only one active CTIQBE session setup across the ASA. It is established between an internal CTI device (for example, a Cisco IP SoftPhone) at local address 10.0.0.99 and an external Cisco CallManager at 172.29.1.77, where TCP port 2748 is the Cisco CallManager. The heartbeat interval for the session is 120 seconds.

```
hostname# # show ctiqbe

Total: 1

1 LOCAL FOREIGN STATE HEARTBEAT

1 10.0.0.99/1117 172.29.1.77/2748 1 120

RTP/RTCP: PAT xlates: mapped to 172.29.1.99(1028 - 1029)

MEDIA: Device ID 27 Call ID 0
 Foreign 172.29.1.99 (1028 - 1029)
 Local 172.29.1.88 (26822 - 26823)

```

The CTI device has already registered with the CallManager. The device internal address and RTP listening port is PATed to 172.29.1.99 UDP port 1028. Its RTCP listening port is PATed to UDP 1029.

The line beginning with `RTP/RTCP: PAT xlates:` appears only if an internal CTI device has registered with an external CallManager and the CTI device address and ports are PATed to that external interface. This line does not appear if the CallManager is located on an internal interface, or if the internal CTI device address and ports are translated to the same external interface that is used by the CallManager.

The output indicates a call has been established between this CTI device and another phone at 172.29.1.88. The RTP and RTCP listening ports of the other phone are UDP 26822 and 26823. The other phone locates on the same interface as the CallManager because the ASA does not maintain a CTIQBE session record associated with the second phone and CallManager. The active call leg on the CTI device side can be identified with Device ID 27 and Call ID 0.

The following is sample output from the `show xlate debug` command for these CTIBQE connections:

```
hostname# show xlate debug
3 in use, 3 most used
Flags: D - DNS, d - dump, I - identity, i - inside, n - no random,
 r - portmap, s - static
TCP PAT from inside:10.0.0.99/1117 to outside:172.29.1.99/1025 flags ri idle 0:00:22
timeout 0:00:30
UDP PAT from inside:10.0.0.99/16908 to outside:172.29.1.99/1028 flags ri idle 0:00:00
timeout 0:04:10
UDP PAT from inside:10.0.0.99/16909 to outside:172.29.1.99/1029 flags ri idle 0:00:23
timeout 0:04:10
```

The `show conn state ctiqbe` command displays the status of CTIQBE connections. In the output, the media connections allocated by the CTIQBE inspection engine are denoted by a 'C' flag. The following is sample output from the `show conn state ctiqbe` command:

```
hostname# show conn state ctiqbe
1 in use, 10 most used
hostname# show conn state ctiqbe detail
1 in use, 10 most used
Flags: A - awaiting inside ACK to SYN, a - awaiting outside ACK to SYN,
 B - initial SYN from outside, C - CTIQBE media, D - DNS, d - dump,
 E - outside back connection, F - outside FIN, f - inside FIN,
 G - group, g - MGCP, H - H.323, h - H.225.0, I - inbound data,
 i - incomplete, J - GTP, j - GTP data, k - Skinny media,
 M - SMTP data, m - SIP media, O - outbound data, P - inside back connection,
 q - SQL*Net data, R - outside acknowledged FIN,
 R - UDP RPC, r - inside acknowledged FIN, S - awaiting inside SYN,
 s - awaiting outside SYN, T - SIP, t - SIP transient, U - up
```

## H.323 Inspection

This section describes the H.323 application inspection. This section includes the following topics:

- [H.323 Inspection Overview, page 44-4](#)
- [How H.323 Works, page 44-4](#)
- [H.239 Support in H.245 Messages, page 44-5](#)
- [Limitations and Restrictions, page 44-5](#)
- [Configuring an H.323 Inspection Policy Map for Additional Inspection Control, page 44-6](#)
- [Configuring H.323 and H.225 Timeout Values, page 44-9](#)
- [Verifying and Monitoring H.323 Inspection, page 44-9](#)

## H.323 Inspection Overview

H.323 inspection provides support for H.323 compliant applications such as Cisco CallManager and VocalTec Gatekeeper. H.323 is a suite of protocols defined by the International Telecommunication Union for multimedia conferences over LANs. The ASA supports H.323 through Version 6, including H.323 v3 feature Multiple Calls on One Call Signaling Channel.

With H.323 inspection enabled, the ASA supports multiple calls on the same call signaling channel, a feature introduced with H.323 Version 3. This feature reduces call setup time and reduces the use of ports on the ASA.

The two major functions of H.323 inspection are as follows:

- NAT the necessary embedded IPv4 addresses in the H.225 and H.245 messages. Because H.323 messages are encoded in PER encoding format, the ASA uses an ASN.1 decoder to decode the H.323 messages.
- Dynamically allocate the negotiated H.245 and RTP/RTCP connections.

## How H.323 Works

The H.323 collection of protocols collectively may use up to two TCP connection and four to eight UDP connections. FastConnect uses only one TCP connection, and RAS uses a single UDP connection for registration, admissions, and status.

An H.323 client can initially establish a TCP connection to an H.323 server using TCP port 1720 to request Q.931 call setup. As part of the call setup process, the H.323 terminal supplies a port number to the client to use for an H.245 TCP connection. In environments where H.323 gatekeeper is in use, the initial packet is transmitted using UDP.

H.323 inspection monitors the Q.931 TCP connection to determine the H.245 port number. If the H.323 terminals are not using FastConnect, the ASA dynamically allocates the H.245 connection based on the inspection of the H.225 messages.

**Note**

---

The H.225 connection can also be dynamically allocated when using RAS.

---

Within each H.245 message, the H.323 endpoints exchange port numbers that are used for subsequent UDP data streams. H.323 inspection inspects the H.245 messages to identify these ports and dynamically creates connections for the media exchange. RTP uses the negotiated port number, while RTCP uses the next higher port number.

The H.323 control channel handles H.225 and H.245 and H.323 RAS. H.323 inspection uses the following ports.

- 1718—Gate Keeper Discovery UDP port
- 1719—RAS UDP port
- 1720—TCP Control Port

You must permit traffic for the well-known H.323 port 1719 for RAS signaling. Additionally, you must permit traffic for the well-known H.323 port 1720 for the H.225 call signaling; however, the H.245 signaling ports are negotiated between the endpoints in the H.225 signaling. When an H.323 gatekeeper is used, the ASA opens an H.225 connection based on inspection of the ACF and RCF nmessages.

After inspecting the H.225 messages, the ASA opens the H.245 channel and then inspects traffic sent over the H.245 channel as well. All H.245 messages passing through the ASA undergo H.245 application inspection, which translates embedded IP addresses and opens the media channels negotiated in H.245 messages.

The H.323 ITU standard requires that a TPKT header, defining the length of the message, precede the H.225 and H.245, before being passed on to the reliable connection. Because the TPKT header does not necessarily need to be sent in the same TCP packet as H.225 and H.245 messages, the ASA must remember the TPKT length to process and decode the messages properly. For each connection, the ASA keeps a record that contains the TPKT length for the next expected message.

If the ASA needs to perform NAT on IP addresses in messages, it changes the checksum, the UUIE length, and the TPKT, if it is included in the TCP packet with the H.225 message. If the TPKT is sent in a separate TCP packet, the ASA proxy ACKs that TPKT and appends a new TPKT to the H.245 message with the new length.

**Note**

The ASA does not support TCP options in the Proxy ACK for the TPKT.

Each UDP connection with a packet going through H.323 inspection is marked as an H.323 connection and times out with the H.323 timeout as configured with the **timeout** command.

**Note**

You can enable call setup between H.323 endpoints when the Gatekeeper is inside the network. The ASA includes options to open pinholes for calls based on the RegistrationRequest/RegistrationConfirm (RRQ/RCF) messages. Because these RRQ/RCF messages are sent to and from the Gatekeeper, the calling endpoint's IP address is unknown and the ASA opens a pinhole through source IP address/port 0/0. By default, this option is disabled. To enable call setup between H.323 endpoint, enter the **ras-rcf-pinholes enable** command during parameter configuration mode while creating an H.323 Inspection policy map. See [Configuring an H.323 Inspection Policy Map for Additional Inspection Control](#), page 44-6.

## H.239 Support in H.245 Messages

The ASA sits between two H.323 endpoints. When the two H.323 endpoints set up a telepresence session so that the endpoints can send and receive a data presentation, such as spreadsheet data, the ASA ensure successful H.239 negotiation between the endpoints.

H.239 is a standar that provides the ability for H.300 series endpoints to open an additional video channel in a single call. In a call, an endpoint (such as a video phone), sends a channel for video and a channel for data presentation. The H.239 negotiation occurs on the H.245 channel.

The ASA opens pinholes for the additional media channel and the media control channel. The endpoints use open logical channel message (OLC) to signal a new channel creation. The message extension is part of H.245 version 13.

The decoding and encoding of of the telepresence session is enabled by default. H.239 encoding and decoding is preformed by ASN.1 coder.

## Limitations and Restrictions

The following are some of the known issues and limitations when using H.323 application inspection:

- Static PAT may not properly translate IP addresses embedded in optional fields within H.323 messages. If you experience this kind of problem, do not use static PAT with H.323.
- H.323 application inspection is not supported with NAT between same-security-level interfaces.
- When a NetMeeting client registers with an H.323 gatekeeper and tries to call an H.323 gateway that is also registered with the H.323 gatekeeper, the connection is established but no voice is heard in either direction. This problem is unrelated to the ASA.
- If you configure a network static address where the network static address is the same as a third-party netmask and address, then any outbound H.323 connection fails.

## Configuring an H.323 Inspection Policy Map for Additional Inspection Control

To specify actions when a message violates a parameter, create an H.323 inspection policy map. You can then apply the inspection policy map when you enable H.323 inspection.

To create an H.323 inspection policy map, perform the following steps:

- 
- Step 1** (Optional) Add one or more regular expressions for use in traffic matching commands according to the “[Creating a Regular Expression](#)” section on page 13-12. See the types of text you can match in the **match** commands described in [Step 3](#).
- Step 2** (Optional) Create one or more regular expression class maps to group regular expressions according to the “[Creating a Regular Expression Class Map](#)” section on page 13-15.s
- Step 3** (Optional) Create an H.323 inspection class map by performing the following steps.

A class map groups multiple traffic matches. Traffic must match *all* of the **match** commands to match the class map. You can alternatively identify **match** commands directly in the policy map. The difference between creating a class map and defining the traffic match directly in the inspection policy map is that the class map lets you create more complex match criteria, and you can reuse class maps.

To specify traffic that should not match the class map, use the **match not** command. For example, if the **match not** command specifies the string “example.com,” then any traffic that includes “example.com” does not match the class map.

For the traffic that you identify in this class map, you can specify actions such as drop-connection, reset, and/or log the connection in the inspection policy map.

If you want to perform different actions for each **match** command, you should identify the traffic directly in the policy map.

- a. Create the class map by entering the following command:

```
hostname(config)# class-map type inspect h323 [match-all | match-any] class_map_name
hostname(config-cmap)#
```

Where *the class\_map\_name* is the name of the class map. The **match-all** keyword is the default, and specifies that traffic must match all criteria to match the class map. The **match-any** keyword specifies that the traffic matches the class map if it matches at least one of the criteria. The CLI enters class-map configuration mode, where you can enter one or more **match** commands.

- b. (Optional) To add a description to the class map, enter the following command:

```
hostname(config-cmap)# description string
```

Where *string* is the description of the class map (up to 200 characters).

- c. (Optional) To match a called party, enter the following command:

```
hostname(config-cmap)# match [not] called-party regex {class class_name | regex_name}
```

Where the **regex** *regex\_name* argument is the regular expression you created in [Step 1](#). The **class** *regex\_class\_name* is the regular expression class map you created in [Step 2](#).

- d. (Optional) To match a media type, enter the following command:

```
hostname(config-cmap)# match [not] media-type {audio | data | video}
```

- Step 4** Create an H.323 inspection policy map, enter the following command:

```
hostname(config)# policy-map type inspect h323 policy_map_name
hostname(config-pmap)#
```

Where the *policy\_map\_name* is the name of the policy map. The CLI enters policy-map configuration mode.

- Step 5** (Optional) To add a description to the policy map, enter the following command:

```
hostname(config-pmap)# description string
```

- Step 6** To apply actions to matching traffic, perform the following steps.

- a. Specify the traffic on which you want to perform actions using one of the following methods:

- Specify the H.323 class map that you created in [Step 3](#) by entering the following command:

```
hostname(config-pmap)# class class_map_name
hostname(config-pmap-c)#
```

- Specify traffic directly in the policy map using one of the **match** commands described in [Step 3](#). If you use a **match not** command, then any traffic that does not match the criterion in the **match not** command has the action applied.

- b. Specify the action you want to perform on the matching traffic by entering the following command:

```
hostname(config-pmap-c)# {[drop [send-protocol-error] |
drop-connection [send-protocol-error] | mask | reset] [log] | rate-limit message_rate}
```

Not all options are available for each **match** or **class** command. See the CLI help or the command reference for the exact options available.

The **drop** keyword drops all packets that match.

The **send-protocol-error** keyword sends a protocol error message.

The **drop-connection** keyword drops the packet and closes the connection.

The **mask** keyword masks out the matching portion of the packet.

The **reset** keyword drops the packet, closes the connection, and sends a TCP reset to the server and/or client.

The **log** keyword, which you can use alone or with one of the other keywords, sends a system log message.

The **rate-limit** *message\_rate* argument limits the rate of messages.

You can specify multiple **class** or **match** commands in the policy map. For information about the order of **class** and **match** commands, see the “[Defining Actions in an Inspection Policy Map](#)” section on [page 33-2](#).

- Step 7** To configure parameters that affect the inspection engine, perform the following steps:

- a. To enter parameters configuration mode, enter the following command:

```
hostname(config-pmap)# parameters
hostname(config-pmap-p)#
```

- b. To enable call setup between H.323 Endpoints, enter the following command:

```
hostname(config)# ras-rcf-pinholes enable
```

You can enable call setup between H.323 endpoints when the Gatekeeper is inside the network. The ASA includes options to open pinholes for calls based on the RegistrationRequest/RegistrationConfirm (RRQ/RCF) messages. Because these RRQ/RCF messages are sent to and from the Gatekeeper, the calling endpoint's IP address is unknown and the ASA opens a pinhole through source IP address/port 0/0. By default, this option is disabled.

- c. To define the H.323 call duration limit, enter the following command:

```
hostname(config-pmap-p)# call-duration-limit time
```

Where *time* is the call duration limit in seconds. Range is from 0:0:0 to 1163:0:0. A value of 0 means never timeout.

- d. To enforce call party number used in call setup, enter the following command:

```
hostname(config-pmap-p)# call-party-number
```

- e. To enforce H.245 tunnel blocking, enter the following command:

```
hostname(config-pmap-p)# h245-tunnel-block action {drop-connection | log}
```

- f. To define an hsi group and enter hsi group configuration mode, enter the following command:

```
hostname(config-pmap-p)# hsi-group id
```

Where *id* is the hsi group ID. Range is from 0 to 2147483647.

To add an hsi to the hsi group, enter the following command in hsi group configuration mode:

```
hostname(config-h225-map-hsi-grp)# hsi ip_address
```

Where *ip\_address* is the host to add. A maximum of five hosts per hsi group are allowed.

To add an endpoint to the hsi group, enter the following command in hsi group configuration mode:

```
hostname(config-h225-map-hsi-grp)# endpoint ip_address if_name
```

Where *ip\_address* is the endpoint to add and *if\_name* is the interface through which the endpoint is connected to the security appliance. A maximum of ten endpoints per hsi group are allowed.

- g. To check RTP packets flowing on the pinholes for protocol conformance, enter the following command:

```
hostname(config-pmap-p)# rtp-conformance [enforce-payloadtype]
```

Where the **enforce-payloadtype** keyword enforces the payload type to be audio or video based on the signaling exchange.

- h. To enable state checking validation, enter the following command:

```
hostname(config-pmap-p)# state-checking {h225 | ras}
```

---

The following example shows how to configure phone number filtering:

```
hostname(config)# regex caller 1 "5551234567"
hostname(config)# regex caller 2 "5552345678"
hostname(config)# regex caller 3 "5553456789"

hostname(config)# class-map type inspect h323 match-all h323_traffic
```

```
hostname(config-pmap-c)# match called-party regex caller1
hostname(config-pmap-c)# match calling-party regex caller2

hostname(config)# policy-map type inspect h323 h323_map
hostname(config-pmap)# parameters
hostname(config-pmap-p)# class h323_traffic
hostname(config-pmap-c)# drop
```

## Configuring H.323 and H.225 Timeout Values

To configure the idle time after which an H.225 signalling connection is closed, use the **timeout h225** command. The default for H.225 timeout is one hour.

To configure the idle time after which an H.323 control connection is closed, use the **timeout h323** command. The default is five minutes.

## Verifying and Monitoring H.323 Inspection

This section describes how to display information about H.323 sessions. This section includes the following topics:

- [Monitoring H.225 Sessions, page 44-9](#)
- [Monitoring H.245 Sessions, page 44-10](#)
- [Monitoring H.323 RAS Sessions, page 44-10](#)

### Monitoring H.225 Sessions

The **show h225** command displays information for H.225 sessions established across the ASA. Along with the **debug h323 h225 event**, **debug h323 h245 event**, and **show local-host** commands, this command is used for troubleshooting H.323 inspection engine issues.

Before entering the **show h225**, **show h245**, or **show h323-ras** commands, we recommend that you configure the **pager** command. If there are a lot of session records and the **pager** command is not configured, it may take a while for the **show** command output to reach its end. If there is an abnormally large number of connections, check that the sessions are timing out based on the default timeout values or the values set by you. If they are not, then there is a problem that needs to be investigated.

The following is sample output from the **show h225** command:

```
hostname# show h225
Total H.323 Calls: 1
1 Concurrent Call(s) for
 Local: 10.130.56.3/1040 Foreign: 172.30.254.203/1720
 1. CRV 9861
 Local: 10.130.56.3/1040 Foreign: 172.30.254.203/1720
0 Concurrent Call(s) for
 Local: 10.130.56.4/1050 Foreign: 172.30.254.205/1720
```

This output indicates that there is currently 1 active H.323 call going through the ASA between the local endpoint 10.130.56.3 and foreign host 172.30.254.203, and for these particular endpoints, there is 1 concurrent call between them, with a CRV for that call of 9861.

For the local endpoint 10.130.56.4 and foreign host 172.30.254.205, there are 0 concurrent calls. This means that there is no active call between the endpoints even though the H.225 session still exists. This could happen if, at the time of the **show h225** command, the call has already ended but the H.225 session has not yet been deleted. Alternately, it could mean that the two endpoints still have a TCP connection opened between them because they set “maintainConnection” to TRUE, so the session is kept open until they set it to FALSE again, or until the session times out based on the H.225 timeout value in your configuration.

## Monitoring H.245 Sessions

The **show h245** command displays information for H.245 sessions established across the ASA by endpoints using slow start. Slow start is when the two endpoints of a call open another TCP control channel for H.245. Fast start is where the H.245 messages are exchanged as part of the H.225 messages on the H.225 control channel.) Along with the **debug h323 h245 event**, **debug h323 h225 event**, and **show local-host** commands, this command is used for troubleshooting H.323 inspection engine issues.

The following is sample output from the **show h245** command:

```
hostname# show h245
Total: 1
 LOCAL TPKT FOREIGN TPKT
1 10.130.56.3/1041 0 172.30.254.203/1245 0
 MEDIA: LCN 258 Foreign 172.30.254.203 RTP 49608 RTCP 49609
 Local 10.130.56.3 RTP 49608 RTCP 49609
 MEDIA: LCN 259 Foreign 172.30.254.203 RTP 49606 RTCP 49607
 Local 10.130.56.3 RTP 49606 RTCP 49607
```

There is currently one H.245 control session active across the ASA. The local endpoint is 10.130.56.3, and we are expecting the next packet from this endpoint to have a TPKT header because the TPKT value is 0. The TKTP header is a 4-byte header preceding each H.225/H.245 message. It gives the length of the message, including the 4-byte header. The foreign host endpoint is 172.30.254.203, and we are expecting the next packet from this endpoint to have a TPKT header because the TPKT value is 0.

The media negotiated between these endpoints have an LCN of 258 with the foreign RTP IP address/port pair of 172.30.254.203/49608 and an RTCP IP address/port of 172.30.254.203/49609 with a local RTP IP address/port pair of 10.130.56.3/49608 and an RTCP port of 49609.

The second LCN of 259 has a foreign RTP IP address/port pair of 172.30.254.203/49606 and an RTCP IP address/port pair of 172.30.254.203/49607 with a local RTP IP address/port pair of 10.130.56.3/49606 and RTCP port of 49607.

## Monitoring H.323 RAS Sessions

The **show h323-ras** command displays information for H.323 RAS sessions established across the ASA between a gatekeeper and its H.323 endpoint. Along with the **debug h323 ras event** and **show local-host** commands, this command is used for troubleshooting H.323 RAS inspection engine issues.

The **show h323-ras** command displays connection information for troubleshooting H.323 inspection engine issues. The following is sample output from the **show h323-ras** command:

```
hostname# show h323-ras
Total: 1
 GK Caller
 172.30.254.214 10.130.56.14
```

This output shows that there is one active registration between the gatekeeper 172.30.254.214 and its client 10.130.56.14.

# MGCP Inspection

This section describes MGCP application inspection. This section includes the following topics:

- [MGCP Inspection Overview, page 44-11](#)
- [Configuring an MGCP Inspection Policy Map for Additional Inspection Control, page 44-13](#)
- [Configuring MGCP Timeout Values, page 44-14](#)
- [Verifying and Monitoring MGCP Inspection, page 44-14](#)

## MGCP Inspection Overview

MGCP is a master/slave protocol used to control media gateways from external call control elements called media gateway controllers or call agents. A media gateway is typically a network element that provides conversion between the audio signals carried on telephone circuits and data packets carried over the Internet or over other packet networks. Using NAT and PAT with MGCP lets you support a large number of devices on an internal network with a limited set of external (global) addresses. Examples of media gateways are:

- Trunking gateways, that interface between the telephone network and a Voice over IP network. Such gateways typically manage a large number of digital circuits.
- Residential gateways, that provide a traditional analog (RJ11) interface to a Voice over IP network. Examples of residential gateways include cable modem/cable set-top boxes, xDSL devices, broad-band wireless devices.
- Business gateways, that provide a traditional digital PBX interface or an integrated soft PBX interface to a Voice over IP network.

**Note**


---

To avoid policy failure when upgrading from ASA version 7.1, all layer 7 and layer 3 policies must have distinct names. For instance, a previously configured policy map with the same name as a previously configured MGCP map must be changed before the upgrade.

---

MGCP messages are transmitted over UDP. A response is sent back to the source address (IP address and UDP port number) of the command, but the response may not arrive from the same address as the command was sent to. This can happen when multiple call agents are being used in a failover configuration and the call agent that received the command has passed control to a backup call agent, which then sends the response. [Figure 44-1](#) illustrates how NAT can be used with MGCP.

Figure 44-1 Using NAT with MGCP

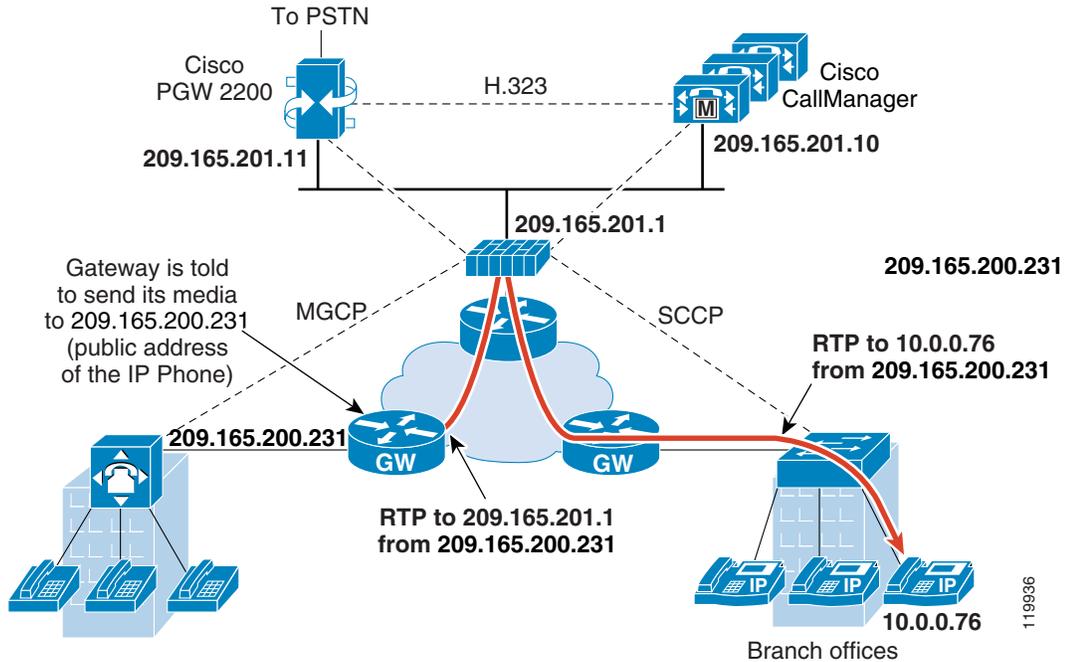

MGCP endpoints are physical or virtual sources and destinations for data. Media gateways contain endpoints on which the call agent can create, modify and delete connections to establish and control media sessions with other multimedia endpoints. Also, the call agent can instruct the endpoints to detect certain events and generate signals. The endpoints automatically communicate changes in service state to the call agent.

MGCP transactions are composed of a command and a mandatory response. There are eight types of commands:

- CreateConnection
- ModifyConnection
- DeleteConnection
- NotificationRequest
- Notify
- AuditEndpoint
- AuditConnection
- RestartInProgress

The first four commands are sent by the call agent to the gateway. The Notify command is sent by the gateway to the call agent. The gateway may also send a DeleteConnection. The registration of the MGCP gateway with the call agent is achieved by the RestartInProgress command. The AuditEndpoint and the AuditConnection commands are sent by the call agent to the gateway.

All commands are composed of a Command header, optionally followed by a session description. All responses are composed of a Response header, optionally followed by a session description.

- The port on which the gateway receives commands from the call agent. Gateways usually listen to UDP port 2427.

- The port on which the call agent receives commands from the gateway. Call agents usually listen to UDP port 2727.

**Note**

MGCP inspection does not support the use of different IP addresses for MGCP signaling and RTP data. A common and recommended practice is to send RTP data from a resilient IP address, such as a loopback or virtual IP address; however, the ASA requires the RTP data to come from the same address as MGCP signalling.

## Configuring an MGCP Inspection Policy Map for Additional Inspection Control

If the network has multiple call agents and gateways for which the ASA has to open pinholes, create an MGCP map. You can then apply the MGCP map when you enable MGCP inspection.

To create an MGCP map, perform the following steps:

- Step 1** To create an MGCP inspection policy map, enter the following command:

```
hostname(config)# policy-map type inspect mgcp map_name
hostname(config-pmap)#
```

Where the *policy\_map\_name* is the name of the policy map. The CLI enters policy-map configuration mode.

- Step 2** (Optional) To add a description to the policy map, enter the following command:

```
hostname(config-pmap)# description string
```

- Step 3** To configure parameters that affect the inspection engine, perform the following steps:

- a. To enter parameters configuration mode, enter the following command:

```
hostname(config-pmap)# parameters
hostname(config-pmap-p)#
```

- b. To configure the call agents, enter the following command for each call agent:

```
hostname(config-pmap-p)# call-agent ip_address group_id
```

Use the **call-agent** command to specify a group of call agents that can manage one or more gateways. The call agent group information is used to open connections for the call agents in the group (other than the one a gateway sends a command to) so that any of the call agents can send the response. Call agents with the same *group\_id* belong to the same group. A call agent may belong to more than one group. The *group\_id* option is a number from 0 to 4294967295. The *ip\_address* option specifies the IP address of the call agent.

**Note**

MGCP call agents send AUEP messages to determine if MGCP end points are present. This establishes a flow through the ASA and allows MGCP end points to register with the call agent.

- c. To configure the gateways, enter the following command for each gateway:

```
hostname(config-pmap-p)# gateway ip_address group_id
```

Use the **gateway** command to specify which group of call agents are managing a particular gateway. The IP address of the gateway is specified with the *ip\_address* option. The *group\_id* option is a number from 0 to 4294967295 that must correspond with the *group\_id* of the call agents that are managing the gateway. A gateway may only belong to one group.

- d. If you want to change the maximum number of commands allowed in the MGCP command queue, enter the following command:

```
hostname(config-pmap-p)# command-queue command_limit
```

The following example shows how to define an MGCP map:

```
hostname(config)# policy-map type inspect mgcp sample_map
hostname(config-pmap)# parameters
hostname(config-pmap-p)# call-agent 10.10.11.5 101
hostname(config-pmap-p)# call-agent 10.10.11.6 101
hostname(config-pmap-p)# call-agent 10.10.11.7 102
hostname(config-pmap-p)# call-agent 10.10.11.8 102
hostname(config-pmap-p)# gateway 10.10.10.115 101
hostname(config-pmap-p)# gateway 10.10.10.116 102
hostname(config-pmap-p)# gateway 10.10.10.117 102
hostname(config-pmap-p)# command-queue 150
```

## Configuring MGCP Timeout Values

The **timeout mgcp command** lets you set the interval for inactivity after which an MGCP media connection is closed. The default is 5 minutes.

The **timeout mgcp-pat** command lets you set the timeout for PAT xlates. Because MGCP does not have a keepalive mechanism, if you use non-Cisco MGCP gateways (call agents), the PAT xlates are torn down after the default timeout interval, which is 30 seconds.

## Verifying and Monitoring MGCP Inspection

The **show mgcp commands** command lists the number of MGCP commands in the command queue. The **show mgcp sessions** command lists the number of existing MGCP sessions. The **detail** option includes additional information about each command (or session) in the output. The following is sample output from the **show mgcp commands** command:

```
hostname# show mgcp commands
1 in use, 1 most used, 200 maximum allowed
CRCX, gateway IP: host-pc-2, transaction ID: 2052, idle: 0:00:07
```

The following is sample output from the **show mgcp detail** command.

```
hostname# show mgcp commands detail
1 in use, 1 most used, 200 maximum allowed
CRCX, idle: 0:00:10
 Gateway IP host-pc-2
 Transaction ID 2052
 Endpoint name aaln/1
 Call ID 9876543210abcdef
 Connection ID
 Media IP 192.168.5.7
 Media port 6058
```

The following is sample output from the **show mgcp sessions** command.

```
hostname# show mgcp sessions
1 in use, 1 most used
Gateway IP host-pc-2, connection ID 6789af54c9, active 0:00:11
```

The following is sample output from the `show mgcp sessions detail` command.

```
hostname# show mgcp sessions detail
1 in use, 1 most used
Session active 0:00:14
 Gateway IP host-pc-2
 Call ID 9876543210abcdef
 Connection ID 6789af54c9
 Endpoint name aaln/1
 Media lcl port 6166
 Media rmt IP 192.168.5.7
 Media rmt port 6058
```

## RTSP Inspection

This section describes RTSP application inspection. This section includes the following topics:

- [RTSP Inspection Overview, page 44-15](#)
- [Using RealPlayer, page 44-16](#)
- [Restrictions and Limitations, page 44-16](#)
- [Configuring an RTSP Inspection Policy Map for Additional Inspection Control, page 44-16](#)

## RTSP Inspection Overview

The RTSP inspection engine lets the ASA pass RTSP packets. RTSP is used by RealAudio, RealNetworks, Apple QuickTime 4, RealPlayer, and Cisco IP/TV connections.



### Note

---

For Cisco IP/TV, use RTSP TCP port 554 and TCP 8554.

---

RTSP applications use the well-known port 554 with TCP (rarely UDP) as a control channel. The ASA only supports TCP, in conformity with RFC 2326. This TCP control channel is used to negotiate the data channels that is used to transmit audio/video traffic, depending on the transport mode that is configured on the client.

The supported RDT transports are: rtp/avp, rtp/avp/udp, x-real-rdt, x-real-rdt/udp, and x-pn-tng/udp.

The ASA parses Setup response messages with a status code of 200. If the response message is travelling inbound, the server is outside relative to the ASA and dynamic channels need to be opened for connections coming inbound from the server. If the response message is outbound, then the ASA does not need to open dynamic channels.

Because RFC 2326 does not require that the client and server ports must be in the SETUP response message, the ASA keeps state and remembers the client ports in the SETUP message. QuickTime places the client ports in the SETUP message and then the server responds with only the server ports.

RTSP inspection does not support PAT or dual-NAT. Also, the ASA cannot recognize HTTP cloaking where RTSP messages are hidden in the HTTP messages.

## Using RealPlayer

When using RealPlayer, it is important to properly configure transport mode. For the ASA, add an **access-list** command from the server to the client or vice versa. For RealPlayer, change transport mode by clicking **Options>Preferences>Transport>RTSP Settings**.

If using TCP mode on the RealPlayer, select the **Use TCP to Connect to Server** and **Attempt to use TCP for all content** check boxes. On the ASA, there is no need to configure the inspection engine.

If using UDP mode on the RealPlayer, select the **Use TCP to Connect to Server** and **Attempt to use UDP for static content** check boxes, and for live content not available via Multicast. On the ASA, add an **inspect rtsp port** command.

## Restrictions and Limitations

The following restrictions apply to the RSTP inspection.

- The ASA does not support multicast RTSP or RTSP messages over UDP.
- The ASA does not have the ability to recognize HTTP cloaking where RTSP messages are hidden in the HTTP messages.
- The ASA cannot perform NAT on RTSP messages because the embedded IP addresses are contained in the SDP files as part of HTTP or RTSP messages. Packets could be fragmented and ASA cannot perform NAT on fragmented packets.
- With Cisco IP/TV, the number of translates the ASA performs on the SDP part of the message is proportional to the number of program listings in the Content Manager (each program listing can have at least six embedded IP addresses).
- You can configure NAT for Apple QuickTime 4 or RealPlayer. Cisco IP/TV only works with NAT if the Viewer and Content Manager are on the outside network and the server is on the inside network.

## Configuring an RTSP Inspection Policy Map for Additional Inspection Control

To specify actions when a message violates a parameter, create an RTSP inspection policy map. You can then apply the inspection policy map when you enable RTSP inspection.

To create an RTSP inspection policy map, perform the following steps:

- 
- Step 1** (Optional) Add one or more regular expressions for use in traffic matching commands according to the [“Configuring Regular Expressions”](#) section on page 13-12. See the types of text you can match in the **match** commands described in [Step 3](#).
  - Step 2** (Optional) Create one or more regular expression class maps to group regular expressions according to the [“Creating a Regular Expression Class Map”](#) section on page 13-15.
  - Step 3** (Optional) Create an RTSP inspection class map by performing the following steps.

A class map groups multiple traffic matches. Traffic must match *all* of the **match** commands to match the class map. You can alternatively identify **match** commands directly in the policy map. The difference between creating a class map and defining the traffic match directly in the inspection policy map is that the class map lets you create more complex match criteria, and you can reuse class maps.

To specify traffic that should not match the class map, use the **match not** command. For example, if the **match not** command specifies the string “example.com,” then any traffic that includes “example.com” does not match the class map.

For the traffic that you identify in this class map, you can specify actions such as drop-connection and/or log the connection in the inspection policy map.

If you want to perform different actions for each **match** command, you should identify the traffic directly in the policy map.

- a. Create the class map by entering the following command:

```
hostname(config)# class-map type inspect rtsp [match-all | match-any] class_map_name
hostname(config-cmap)#
```

Where *class\_map\_name* is the name of the class map. The **match-all** keyword is the default, and specifies that traffic must match all criteria to match the class map. The **match-any** keyword specifies that the traffic matches the class map if it matches at least one of the criteria. The CLI enters class-map configuration mode, where you can enter one or more **match** commands.

- b. (Optional) To add a description to the class map, enter the following command:

```
hostname(config-cmap)# description string
```

- c. (Optional) To match an RTSP request method, enter the following command:

```
hostname(config-cmap)# match [not] request-method method
```

Where *method* is the type of method to match (announce, describe, get\_parameter, options, pause, play, record, redirect, setup, set\_parameter, teardown).

- d. (Optional) To match URL filtering, enter the following command:

```
hostname(config-cmap)# match [not] url-filter regex {class class_name | regex_name}
```

Where the **regex** *regex\_name* argument is the regular expression you created in [Step 1](#). The **class** *regex\_class\_name* is the regular expression class map you created in [Step 2](#).

- Step 4** To create an RTSP inspection policy map, enter the following command:

```
hostname(config)# policy-map type inspect rtsp policy_map_name
hostname(config-pmap)#
```

Where the *policy\_map\_name* is the name of the policy map. The CLI enters policy-map configuration mode.

- Step 5** (Optional) To add a description to the policy map, enter the following command:

```
hostname(config-pmap)# description string
```

- Step 6** To apply actions to matching traffic, perform the following steps.

- a. Specify the traffic on which you want to perform actions using one of the following methods:

- Specify the RTSP class map that you created in [Step 3](#) by entering the following command:

```
hostname(config-pmap)# class class_map_name
hostname(config-pmap-c)#
```

- Specify traffic directly in the policy map using one of the **match** commands described in [Step 3](#). If you use a **match not** command, then any traffic that does not match the criterion in the **match not** command has the action applied.

- b. Specify the action you want to perform on the matching traffic by entering the following command:

```
hostname(config-pmap-c)# {[drop [send-protocol-error] |
drop-connection [send-protocol-error] | mask | reset] [log] | rate-limit message_rate}
```

Not all options are available for each **match** or **class** command. See the CLI help or the command reference for the exact options available.

The **drop** keyword drops all packets that match.

The **send-protocol-error** keyword sends a protocol error message.

The **drop-connection** keyword drops the packet and closes the connection.

The **mask** keyword masks out the matching portion of the packet.

The **reset** keyword drops the packet, closes the connection, and sends a TCP reset to the server and/or client.

The **log** keyword, which you can use alone or with one of the other keywords, sends a system log message.

The **rate-limit** *message\_rate* argument limits the rate of messages.

You can specify multiple **class** or **match** commands in the policy map. For information about the order of **class** and **match** commands, see the “[Defining Actions in an Inspection Policy Map](#)” section on page 33-2.

**Step 7** To configure parameters that affect the inspection engine, perform the following steps:

- a. To enter parameters configuration mode, enter the following command:

```
hostname(config-pmap)# parameters
hostname(config-pmap-p)#
```

- b. To restrict usage on reserve port for media negotiation, enter the following command:

```
hostname(config-pmap-p)# reserve-port-protect
```

- c. To set the limit on the URL length allowed in the message, enter the following command:

```
hostname(config-pmap-p)# url-length-limit length
```

Where the *length* argument specifies the URL length in bytes (0 to 6000).

The following example shows a how to define an RTSP inspection policy map.

```
hostname(config)# regex badurl1 www.url1.com/rtsp.avi
hostname(config)# regex badurl2 www.url2.com/rtsp.rm
hostname(config)# regex badurl3 www.url3.com/rtsp.asp

hostname(config)# class-map type regex match-any badurl-list
hostname(config-cmap)# match regex badurl1
hostname(config-cmap)# match regex badurl2
hostname(config-cmap)# match regex badurl3

hostname(config)# policy-map type inspect rtsp rtsp-filter-map
hostname(config-pmap)# match url-filter regex class badurl-list
hostname(config-pmap-p)# drop-connection

hostname(config)# class-map rtsp-traffic-class
hostname(config-cmap)# match default-inspection-traffic

hostname(config)# policy-map rtsp-traffic-policy
hostname(config-pmap)# class rtsp-traffic-class
hostname(config-pmap-c)# inspect rtsp rtsp-filter-map

hostname(config)# service-policy rtsp-traffic-policy global
```

# SIP Inspection

This section describes SIP application inspection. This section includes the following topics:

- [SIP Inspection Overview, page 44-19](#)
- [SIP Instant Messaging, page 44-19](#)
- [Configuring a SIP Inspection Policy Map for Additional Inspection Control, page 44-20](#)
- [Configuring SIP Timeout Values, page 44-24](#)
- [Verifying and Monitoring SIP Inspection, page 44-24](#)

## SIP Inspection Overview

SIP, as defined by the IETF, enables call handling sessions, particularly two-party audio conferences, or “calls.” SIP works with SDP for call signalling. SDP specifies the ports for the media stream. Using SIP, the ASA can support any SIP VoIP gateways and VoIP proxy servers. SIP and SDP are defined in the following RFCs:

- SIP: Session Initiation Protocol, RFC 3261
- SDP: Session Description Protocol, RFC 2327

To support SIP calls through the ASA, signaling messages for the media connection addresses, media ports, and embryonic connections for the media must be inspected, because while the signaling is sent over a well-known destination port (UDP/TCP 5060), the media streams are dynamically allocated. Also, SIP embeds IP addresses in the user-data portion of the IP packet. SIP inspection applies NAT for these embedded IP addresses.

The following limitations and restrictions apply when using PAT with SIP:

- If a remote endpoint tries to register with a SIP proxy on a network protected by the ASA, the registration fails under very specific conditions, as follows:
  - PAT is configured for the remote endpoint.
  - The SIP registrar server is on the outside network.
  - The port is missing in the contact field in the REGISTER message sent by the endpoint to the proxy server.
  - Configuring static PAT is not supported with SIP inspection. If static PAT is configured for the Cisco Unified Communications Manager, SIP inspection cannot rewrite the SIP packet. Configure one-to-one static NAT for the Cisco Unified Communications Manager.
- If a SIP device transmits a packet in which the SDP portion has an IP address in the owner/creator field (o=) that is different than the IP address in the connection field (c=), the IP address in the o= field may not be properly translated. This is due to a limitation in the SIP protocol, which does not provide a port value in the o= field.

## SIP Instant Messaging

Instant Messaging refers to the transfer of messages between users in near real-time. SIP supports the Chat feature on Windows XP using Windows Messenger RTC Client version 4.7.0105 only. The MESSAGE/INFO methods and 202 Accept response are used to support IM as defined in the following RFCs:

- Session Initiation Protocol (SIP)-Specific Event Notification, RFC 3265
- Session Initiation Protocol (SIP) Extension for Instant Messaging, RFC 3428

MESSAGE/INFO requests can come in at any time after registration/subscription. For example, two users can be online at any time, but not chat for hours. Therefore, the SIP inspection engine opens pinholes that time out according to the configured SIP timeout value. This value must be configured at least five minutes longer than the subscription duration. The subscription duration is defined in the Contact Expires value and is typically 30 minutes.

Because MESSAGE/INFO requests are typically sent using a dynamically allocated port other than port 5060, they are required to go through the SIP inspection engine.

**Note**

Only the Chat feature is currently supported. Whiteboard, File Transfer, and Application Sharing are not supported. RTC Client 5.0 is not supported.

SIP inspection translates the SIP text-based messages, recalculates the content length for the SDP portion of the message, and recalculates the packet length and checksum. It dynamically opens media connections for ports specified in the SDP portion of the SIP message as address/ports on which the endpoint should listen.

SIP inspection has a database with indices CALL\_ID/FROM/TO from the SIP payload. These indices identify the call, the source, and the destination. This database contains the media addresses and media ports found in the SDP media information fields and the media type. There can be multiple media addresses and ports for a session. The ASA opens RTP/RTCP connections between the two endpoints using these media addresses/ports.

The well-known port 5060 must be used on the initial call setup (INVITE) message; however, subsequent messages may not have this port number. The SIP inspection engine opens signaling connection pinholes, and marks these connections as SIP connections. This is done for the messages to reach the SIP application and be translated.

As a call is set up, the SIP session is in the “transient” state until the media address and media port is received from the called endpoint in a Response message indicating the RTP port the called endpoint listens on. If there is a failure to receive the response messages within one minute, the signaling connection is torn down.

Once the final handshake is made, the call state is moved to active and the signaling connection remains until a BYE message is received.

If an inside endpoint initiates a call to an outside endpoint, a media hole is opened to the outside interface to allow RTP/RTCP UDP packets to flow to the inside endpoint media address and media port specified in the INVITE message from the inside endpoint. Unsolicited RTP/RTCP UDP packets to an inside interface does not traverse the ASA, unless the ASA configuration specifically allows it.

## Configuring a SIP Inspection Policy Map for Additional Inspection Control

To specify actions when a message violates a parameter, create a SIP inspection policy map. You can then apply the inspection policy map when you enable SIP inspection.

To create a SIP inspection policy map, perform the following steps:

- Step 1** (Optional) Add one or more regular expressions for use in traffic matching commands according to the “[Configuring Regular Expressions](#)” section on page 13-12. See the types of text you can match in the **match** commands described in [Step 3](#).

**Step 2** (Optional) Create one or more regular expression class maps to group regular expressions according to the “[Creating a Regular Expression Class Map](#)” section on page 13-15.s

**Step 3** (Optional) Create a SIP inspection class map by performing the following steps.

A class map groups multiple traffic matches. Traffic must match *all* of the **match** commands to match the class map. You can alternatively identify **match** commands directly in the policy map. The difference between creating a class map and defining the traffic match directly in the inspection policy map is that the class map lets you create more complex match criteria, and you can reuse class maps.

To specify traffic that should not match the class map, use the **match not** command. For example, if the **match not** command specifies the string “example.com,” then any traffic that includes “example.com” does not match the class map.

For the traffic that you identify in this class map, you can specify actions such as drop-connection, reset, and/or log the connection in the inspection policy map.

If you want to perform different actions for each **match** command, you should identify the traffic directly in the policy map.

- a. Create the class map by entering the following command:

```
hostname(config)# class-map type inspect sip [match-all | match-any] class_map_name
hostname(config-cmap)#
```

Where *the class\_map\_name* is the name of the class map. The match-all keyword is the default, and specifies that traffic must match all criteria to match the class map. The match-any keyword specifies that the traffic matches the class map if it matches at least one. The CLI enters class-map configuration mode, where you can enter one or more **match** commands.

- b. (Optional) To add a description to the class map, enter the following command:

```
hostname(config-cmap)# description string
```

Where *string* is the description of the class map (up to 200 characters).

- c. (Optional) To match a called party, as specified in the To header, enter the following command:

```
hostname(config-cmap)# match [not] called-party regex {class class_name | regex_name}
```

Where the **regex** *regex\_name* argument is the regular expression you created in [Step 1](#). The **class** *regex\_class\_name* is the regular expression class map you created in [Step 2](#).

- d. (Optional) To match a calling party, as specified in the From header, enter the following command:

```
hostname(config-cmap)# match [not] calling-party regex {class class_name | regex_name}
```

Where the **regex** *regex\_name* argument is the regular expression you created in [Step 1](#). The **class** *regex\_class\_name* is the regular expression class map you created in [Step 2](#).

- e. (Optional) To match a content length in the SIP header, enter the following command:

```
hostname(config-cmap)# match [not] content length gt length
```

Where *length* is the number of bytes the content length is greater than. 0 to 65536.

- f. (Optional) To match an SDP content type or regular expression, enter the following command:

```
hostname(config-cmap)# match [not] content type {sdp | regex {class class_name | regex_name}}
```

Where the **regex** *regex\_name* argument is the regular expression you created in [Step 1](#). The **class** *regex\_class\_name* is the regular expression class map you created in [Step 2](#).

- g. (Optional) To match a SIP IM subscriber, enter the following command:

```
hostname(config-cmap)# match [not] im-subscriber regex {class class_name | regex_name}
```

Where the **regex** *regex\_name* argument is the regular expression you created in [Step 1](#). The **class** *regex\_class\_name* is the regular expression class map you created in [Step 2](#).

- h. (Optional) To match a SIP via header, enter the following command:

```
hostname(config-cmap)# match [not] message-path regex {class class_name | regex_name}
```

Where the **regex** *regex\_name* argument is the regular expression you created in [Step 1](#). The **class** *regex\_class\_name* is the regular expression class map you created in [Step 2](#).

- i. (Optional) To match a SIP request method, enter the following command:

```
hostname(config-cmap)# match [not] request-method method
```

Where *method* is the type of method to match (ack, bye, cancel, info, invite, message, notify, options, prack, refer, register, subscribe, unknown, update).

- j. (Optional) To match the requester of a third-party registration, enter the following command:

```
hostname(config-cmap)# match [not] third-party-registration regex {class class_name | regex_name}
```

Where the **regex** *regex\_name* argument is the regular expression you created in [Step 1](#). The **class** *regex\_class\_name* is the regular expression class map you created in [Step 2](#).

- k. (Optional) To match an URI in the SIP headers, enter the following command:

```
hostname(config-cmap)# match [not] uri {sip | tel} length gt length
```

Where *length* is the number of bytes the URI is greater than. 0 to 65536.

- Step 4** Create a SIP inspection policy map, enter the following command:

```
hostname(config)# policy-map type inspect sip policy_map_name
hostname(config-pmap)#
```

Where the *policy\_map\_name* is the name of the policy map. The CLI enters policy-map configuration mode.

- Step 5** (Optional) To add a description to the policy map, enter the following command:

```
hostname(config-pmap)# description string
```

- Step 6** To apply actions to matching traffic, perform the following steps.

- a. Specify the traffic on which you want to perform actions using one of the following methods:

- Specify the SIP class map that you created in [Step 3](#) by entering the following command:

```
hostname(config-pmap)# class class_map_name
hostname(config-pmap-c)#
```

- Specify traffic directly in the policy map using one of the **match** commands described in [Step 3](#). If you use a **match not** command, then any traffic that does not match the criterion in the **match not** command has the action applied.

- b. Specify the action you want to perform on the matching traffic by entering the following command:

```
hostname(config-pmap-c)# {[drop [send-protocol-error] |
drop-connection [send-protocol-error] | mask | reset] [log] | rate-limit message_rate}
```

Not all options are available for each **match** or **class** command. See the CLI help or the command reference for the exact options available.

The **drop** keyword drops all packets that match.

The **send-protocol-error** keyword sends a protocol error message.

The **drop-connection** keyword drops the packet and closes the connection.

The **mask** keyword masks out the matching portion of the packet.

The **reset** keyword drops the packet, closes the connection, and sends a TCP reset to the server and/or client.

The **log** keyword, which you can use alone or with one of the other keywords, sends a system log message.

The **rate-limit** *message\_rate* argument limits the rate of messages.

You can specify multiple **class** or **match** commands in the policy map. For information about the order of **class** and **match** commands, see the “[Defining Actions in an Inspection Policy Map](#)” section on page 33-2.

**Step 7** To configure parameters that affect the inspection engine, perform the following steps:

- a. To enter parameters configuration mode, enter the following command:

```
hostname(config-pmap) # parameters
hostname(config-pmap-p) #
```

- b. To enable or disable instant messaging, enter the following command:

```
hostname(config-pmap-p) # im
```

- c. To enable or disable IP address privacy, enter the following command:

```
hostname(config-pmap-p) # ip-address-privacy
```

- d. To enable check on Max-forwards header field being 0 (which cannot be 0 before reaching the destination), enter the following command:

```
hostname(config-pmap-p) # max-forwards-validation action {drop | drop-connection | reset | log} [log]
```

- e. To enable check on RTP packets flowing on the pinholes for protocol conformance, enter the following command:

```
hostname(config-pmap-p) # rtp-conformance [enforce-payloadtype]
```

Where the **enforce-payloadtype** keyword enforces the payload type to be audio or video based on the signaling exchange.

- f. To identify the Server and User-Agent header fields, which expose the software version of either a server or an endpoint, enter the following command:

```
hostname(config-pmap-p) # software-version action {mask | log} [log]
```

Where the **mask** keyword masks the software version in the SIP messages.

- g. To enable state checking validation, enter the following command:

```
hostname(config-pmap-p) # state-checking action {drop | drop-connection | reset | log} [log]
```

- h. To enable strict verification of the header fields in the SIP messages according to RFC 3261, enter the following command:

```
hostname(config-pmap-p) # strict-header-validation action {drop | drop-connection | reset | log} [log]
```

- i. To allow non SIP traffic using the well-known SIP signaling port, enter the following command:

```
hostname(config-pmap-p) # traffic-non-sip
```

- j. To identify the non-SIP URIs present in the Alert-Info and Call-Info header fields, enter the following command:

```
hostname(config-pmap-p)# uri-non-sip action {mask | log} [log]
```

The following example shows how to disable instant messaging over SIP:

```
hostname(config)# policy-map type inspect sip mymap
hostname(config-pmap)# parameters
hostname(config-pmap-p)# no im

hostname(config)# policy-map global_policy
hostname(config-pmap)# class inspection_default
hostname(config-pmap-c)# inspect sip mymap

hostname(config)# service-policy global_policy global
```

## Configuring SIP Timeout Values

The media connections are torn down within two minutes after the connection becomes idle. This is, however, a configurable timeout and can be set for a shorter or longer period of time. To configure the timeout for the SIP control connection, enter the following command:

```
hostname(config)# timeout sip hh:mm:ss
```

This command configures the idle timeout after which a SIP control connection is closed.

To configure the timeout for the SIP media connection, enter the following command:

```
hostname(config)# timeout sip_media hh:mm:ss
```

This command configures the idle timeout after which a SIP media connection is closed.

## Verifying and Monitoring SIP Inspection

The **show sip** command assists in troubleshooting SIP inspection engine issues and is described with the **inspect protocol sip udp 5060** command. The **show timeout sip** command displays the timeout value of the designated protocol.

The **show sip** command displays information for SIP sessions established across the ASA. Along with the **debug sip** and **show local-host** commands, this command is used for troubleshooting SIP inspection engine issues.



### Note

We recommend that you configure the **pager** command before entering the **show sip** command. If there are a lot of SIP session records and the **pager** command is not configured, it takes a while for the **show sip** command output to reach its end.

The following is sample output from the **show sip** command:

```
hostname# show sip
Total: 2
call-id c3943000-960ca-2e43-228f@10.130.56.44
 state Call init, idle 0:00:01
call-id c3943000-860ca-7e1f-11f7@10.130.56.45
```

```
state Active, idle 0:00:06
```

This sample shows two active SIP sessions on the ASA (as shown in the Total field). Each call-id represents a call.

The first session, with the call-id c3943000-960ca-2e43-228f@10.130.56.44, is in the state Call Init, which means the session is still in call setup. Call setup is not complete until a final response to the call has been received. For instance, the caller has already sent the INVITE, and maybe received a 100 Response, but has not yet seen the 200 OK, so the call setup is not complete yet. Any non-1xx response message is considered a final response. This session has been idle for 1 second.

The second session is in the state Active, in which call setup is complete and the endpoints are exchanging media. This session has been idle for 6 seconds.

## Skinny (SCCP) Inspection

This section describes SCCP application inspection. This section includes the following topics:

- [SCCP Inspection Overview, page 44-25](#)
- [Supporting Cisco IP Phones, page 44-26](#)
- [Restrictions and Limitations, page 44-26](#)
- [Configuring a Skinny \(SCCP\) Inspection Policy Map for Additional Inspection Control, page 44-26](#)
- [Verifying and Monitoring SIP Inspection, page 44-24](#)

## SCCP Inspection Overview



### Note

For specific information about setting up the Phone Proxy on the ASA, which is part of the Cisco Unified Communications architecture and supports IP phone deployment, see [Chapter 48, “Configuring the Cisco Phone Proxy.”](#)

Skinny (SCCP) is a simplified protocol used in VoIP networks. Cisco IP Phones using SCCP can coexist in an H.323 environment. When used with Cisco CallManager, the SCCP client can interoperate with H.323 compliant terminals.

The ASA supports PAT and NAT for SCCP. PAT is necessary if you have more IP phones than global IP addresses for the IP phones to use. By supporting NAT and PAT of SCCP Signaling packets, Skinny application inspection ensures that all SCCP signalling and media packets can traverse the ASA.

Normal traffic between Cisco CallManager and Cisco IP Phones uses SCCP and is handled by SCCP inspection without any special configuration. The ASA also supports DHCP options 150 and 66, which it accomplishes by sending the location of a TFTP server to Cisco IP Phones and other DHCP clients. Cisco IP Phones might also include DHCP option 3 in their requests, which sets the default route. For more information, see the [“Using Cisco IP Phones with a DHCP Server” section on page 11-6.](#)



### Note

The ASA supports inspection of traffic from Cisco IP Phones running SCCP protocol version 19 and earlier.

## Supporting Cisco IP Phones

**Note**

For specific information about setting up the Phone Proxy on the ASA, which is part of the Cisco Unified Communications architecture and supports IP phone deployment, see [Chapter 48, “Configuring the Cisco Phone Proxy.”](#)

In topologies where Cisco CallManager is located on the higher security interface with respect to the Cisco IP Phones, if NAT is required for the Cisco CallManager IP address, the mapping must be **static** as a Cisco IP Phone requires the Cisco CallManager IP address to be specified explicitly in its configuration. An static identity entry allows the Cisco CallManager on the higher security interface to accept registrations from the Cisco IP Phones.

Cisco IP Phones require access to a TFTP server to download the configuration information they need to connect to the Cisco CallManager server.

When the Cisco IP Phones are on a lower security interface compared to the TFTP server, you must use an access list to connect to the protected TFTP server on UDP port 69. While you do need a static entry for the TFTP server, this does not have to be an identity static entry. When using NAT, an identity static entry maps to the same IP address. When using PAT, it maps to the same IP address and port.

When the Cisco IP Phones are on a *higher* security interface compared to the TFTP server and Cisco CallManager, no access list or static entry is required to allow the Cisco IP Phones to initiate the connection.

## Restrictions and Limitations

The following are limitations that apply to the current version of PAT and NAT support for SCCP:

- PAT does not work with configurations containing the **alias** command.
- Outside NAT or PAT is *not* supported.

If the address of an internal Cisco CallManager is configured for NAT or PAT to a different IP address or port, registrations for external Cisco IP Phones fail because the ASA currently does not support NAT or PAT for the file content transferred over TFTP. Although the ASA supports NAT of TFTP messages and opens a pinhole for the TFTP file, the ASA cannot translate the Cisco CallManager IP address and port embedded in the Cisco IP Phone configuration files that are transferred by TFTP during phone registration.

**Note**

The ASA supports stateful failover of SCCP calls except for calls that are in the middle of call setup.

## Configuring a Skinny (SCCP) Inspection Policy Map for Additional Inspection Control

To specify actions when a message violates a parameter, create an SCCP inspection policy map. You can then apply the inspection policy map when you enable SCCP inspection.

To create an SCCP inspection policy map, perform the following steps:

**Step 1** (Optional) Add one or more regular expressions for use in traffic matching commands according to the “[Configuring Regular Expressions](#)” section on page 13-12. See the types of text you can match in the **match** commands described in [Step 3](#).

**Step 2** (Optional) Create one or more regular expression class maps to group regular expressions according to the “[Creating a Regular Expression Class Map](#)” section on page 13-15.

**Step 3** Create an SCCP inspection policy map, enter the following command:

```
hostname(config)# policy-map type inspect skinny policy_map_name
hostname(config-pmap)#
```

Where the *policy\_map\_name* is the name of the policy map. The CLI enters policy-map configuration mode.

**Step 4** (Optional) To add a description to the policy map, enter the following command:

```
hostname(config-pmap)# description string
```

**Step 5** To apply actions to matching traffic, perform the following steps.

a. Specify the traffic on which you want to perform actions using one of the following methods:

- Specify the SCCP class map that you created in [Step 3](#) by entering the following command:

```
hostname(config-pmap)# class class_map_name
hostname(config-pmap-c)#
```

- Specify traffic directly in the policy map using one of the **match** commands described in [Step 3](#). If you use a **match not** command, then any traffic that does not match the criterion in the **match not** command has the action applied.

b. Specify the action you want to perform on the matching traffic by entering the following command:

```
hostname(config-pmap-c)# {[drop [send-protocol-error] |
drop-connection [send-protocol-error] | mask | reset] [log] | rate-limit message_rate}
```

Not all options are available for each **match** or **class** command. See the CLI help or the command reference for the exact options available.

The **drop** keyword drops all packets that match.

The **send-protocol-error** keyword sends a protocol error message.

The **drop-connection** keyword drops the packet and closes the connection.

The **mask** keyword masks out the matching portion of the packet.

The **reset** keyword drops the packet, closes the connection, and sends a TCP reset to the server and/or client.

The **log** keyword, which you can use alone or with one of the other keywords, sends a system log message.

The **rate-limit** *message\_rate* argument limits the rate of messages.

**Step 6** You can specify multiple **class** or **match** commands in the policy map. For information about the order of **class** and **match** commands, see the “[Defining Actions in an Inspection Policy Map](#)” section on page 33-2. To configure parameters that affect the inspection engine, perform the following steps:

a. To enter parameters configuration mode, enter the following command:

```
hostname(config-pmap)# parameters
hostname(config-pmap-p)#
```

- b. To enforce registration before calls can be placed, enter the following command:

```
hostname(config-pmap-p)# enforce-registration
```

- c. To set the maximum SCCP station message ID allowed, enter the following command:

```
hostname(config-pmap-p)# message-ID max hex_value
```

Where the *hex\_value* argument is the station message ID in hex.

- d. To check RTP packets flowing on the pinholes for protocol conformance, enter the following command:

```
hostname(config-pmap-p)# rtp-conformance [enforce-payloadtype]
```

Where the **enforce-payloadtype** keyword enforces the payload type to be audio or video based on the signaling exchange.

- e. To set the maximum and minimum SCCP prefix length value allowed, enter the following command:

```
hostname(config-pmap-p)# sccp-prefix-len {max | min} value_length
```

Where the *value\_length* argument is a maximum or minimum value.

- f. To configure the timeout value for signaling and media connections, enter the following command:

```
hostname(config-pmap-p)# timeout
```

The following example shows how to define an SCCP inspection policy map.

```
hostname(config)# policy-map type inspect skinny skinny-map
hostname(config-pmap)# parameters
hostname(config-pmap-p)# enforce-registration
hostname(config-pmap-p)# match message-id range 200 300
hostname(config-pmap-p)# drop log
hostname(config)# class-map inspection_default
hostname(config-cmap)# match default-inspection-traffic
hostname(config)# policy-map global_policy
hostname(config-pmap)# class inspection_default
hostname(config-pmap-c)# inspect skinny skinny-map
hostname(config)# service-policy global_policy global
```

## Verifying and Monitoring SCCP Inspection

The **show skinny** command assists in troubleshooting SCCP (Skinny) inspection engine issues. The following is sample output from the **show skinny** command under the following conditions. There are two active Skinny sessions set up across the ASA. The first one is established between an internal Cisco IP Phone at local address 10.0.0.11 and an external Cisco CallManager at 172.18.1.33. TCP port 2000 is the CallManager. The second one is established between another internal Cisco IP Phone at local address 10.0.0.22 and the same Cisco CallManager.

```
hostname# show skinny

LOCAL FOREIGN STATE

1 10.0.0.11/52238 172.18.1.33/2000 1
 MEDIA 10.0.0.11/22948 172.18.1.22/20798
2 10.0.0.22/52232 172.18.1.33/2000 1
 MEDIA 10.0.0.22/20798 172.18.1.11/22948
```

The output indicates that a call has been established between two internal Cisco IP Phones. The RTP listening ports of the first and second phones are UDP 22948 and 20798 respectively.

The following is sample output from the **show xlate debug** command for these Skinny connections:

```
hostname# show xlate debug
2 in use, 2 most used
Flags: D - DNS, d - dump, I - identity, i - inside, n - no random,
 r - portmap, s - static
NAT from inside:10.0.0.11 to outside:172.18.1.11 flags si idle 0:00:16 timeout 0:05:00
NAT from inside:10.0.0.22 to outside:172.18.1.22 flags si idle 0:00:14 timeout 0:05:00
```





## CHAPTER 45

# Configuring Inspection of Database and Directory Protocols

---

This chapter describes how to configure application layer protocol inspection. Inspection engines are required for services that embed IP addressing information in the user data packet or that open secondary channels on dynamically assigned ports. These protocols require the ASA to do a deep packet inspection instead of passing the packet through the fast path. As a result, inspection engines can affect overall throughput.

Several common inspection engines are enabled on the ASA by default, but you might need to enable others depending on your network.

This chapter includes the following sections:

- [ILS Inspection, page 45-1](#)
- [SQL\\*Net Inspection, page 45-2](#)
- [Sun RPC Inspection, page 45-3](#)

## ILS Inspection

The ILS inspection engine provides NAT support for Microsoft NetMeeting, SiteServer, and Active Directory products that use LDAP to exchange directory information with an ILS server.

The ASA supports NAT for ILS, which is used to register and locate endpoints in the ILS or SiteServer Directory. PAT cannot be supported because only IP addresses are stored by an LDAP database.

For search responses, when the LDAP server is located outside, NAT should be considered to allow internal peers to communicate locally while registered to external LDAP servers. For such search responses, xlates are searched first, and then DNAT entries to obtain the correct address. If both of these searches fail, then the address is not changed. For sites using NAT 0 (no NAT) and not expecting DNAT interaction, we recommend that the inspection engine be turned off to provide better performance.

Additional configuration may be necessary when the ILS server is located inside the ASA border. This would require a hole for outside clients to access the LDAP server on the specified port, typically TCP 389.

Because ILS traffic only occurs on the secondary UDP channel, the TCP connection is disconnected after the TCP inactivity interval. By default, this interval is 60 minutes and can be adjusted using the **timeout** command.

ILS/LDAP follows a client/server model with sessions handled over a single TCP connection. Depending on the client's actions, several of these sessions may be created.

During connection negotiation time, a BIND PDU is sent from the client to the server. Once a successful BIND RESPONSE from the server is received, other operational messages may be exchanged (such as ADD, DEL, SEARCH, or MODIFY) to perform operations on the ILS Directory. The ADD REQUEST and SEARCH RESPONSE PDUs may contain IP addresses of NetMeeting peers, used by H.323 (SETUP and CONNECT messages) to establish the NetMeeting sessions. Microsoft NetMeeting v2.X and v3.X provides ILS support.

The ILS inspection performs the following operations:

- Decodes the LDAP REQUEST/RESPONSE PDUs using the BER decode functions
- Parses the LDAP packet
- Extracts IP addresses
- Translates IP addresses as necessary
- Encodes the PDU with translated addresses using BER encode functions
- Copies the newly encoded PDU back to the TCP packet
- Performs incremental TCP checksum and sequence number adjustment

ILS inspection has the following limitations:

- Referral requests and responses are not supported
- Users in multiple directories are not unified
- Single users having multiple identities in multiple directories cannot be recognized by NAT



**Note**

Because H225 call signalling traffic only occurs on the secondary UDP channel, the TCP connection is disconnected after the interval specified by the TCP **timeout** command. By default, this interval is set at 60 minutes.

## SQL\*Net Inspection

SQL\*Net inspection is enabled by default.

The SQL\*Net protocol consists of different packet types that the ASA handles to make the data stream appear consistent to the Oracle applications on either side of the ASA.

The default port assignment for SQL\*Net is 1521. This is the value used by Oracle for SQL\*Net, but this value does not agree with IANA port assignments for Structured Query Language (SQL). Use the **class-map** command to apply SQL\*Net inspection to a range of port numbers.



**Note**

Disable SQL\*Net inspection when SQL data transfer occurs on the same port as the SQL control TCP port 1521. The security appliance acts as a proxy when SQL\*Net inspection is enabled and reduces the client window size from 65000 to about 16000 causing data transfer issues.

The ASA translates all addresses and looks in the packets for all embedded ports to open for SQL\*Net Version 1.

For SQL\*Net Version 2, all DATA or REDIRECT packets that immediately follow REDIRECT packets with a zero data length will be fixed up.

The packets that need fix-up contain embedded host/port addresses in the following format:

```
(ADDRESS=(PROTOCOL=tcP) (DEV=6) (HOST=a.b.c.d) (PORT=a))
```

SQL\*Net Version 2 TNSFrame types (Connect, Accept, Refuse, Resend, and Marker) will not be scanned for addresses to NAT nor will inspection open dynamic connections for any embedded ports in the packet.

SQL\*Net Version 2 TNSFrames, Redirect, and Data packets will be scanned for ports to open and addresses to NAT, if preceded by a REDIRECT TNSFrame type with a zero data length for the payload. When the Redirect message with data length zero passes through the ASA, a flag will be set in the connection data structure to expect the Data or Redirect message that follows to be translated and ports to be dynamically opened. If one of the TNS frames in the preceding paragraph arrive after the Redirect message, the flag will be reset.

The SQL\*Net inspection engine will recalculate the checksum, change IP, TCP lengths, and readjust Sequence Numbers and Acknowledgment Numbers using the delta of the length of the new and old message.

SQL\*Net Version 1 is assumed for all other cases. TNSFrame types (Connect, Accept, Refuse, Resend, Marker, Redirect, and Data) and all packets will be scanned for ports and addresses. Addresses will be translated and port connections will be opened.

## Sun RPC Inspection

This section describes Sun RPC application inspection. This section includes the following topics:

- [Sun RPC Inspection Overview, page 45-3](#)
- [Managing Sun RPC Services, page 45-4](#)
- [Verifying and Monitoring Sun RPC Inspection, page 45-4](#)

## Sun RPC Inspection Overview

The Sun RPC inspection engine enables or disables application inspection for the Sun RPC protocol. Sun RPC is used by NFS and NIS. Sun RPC services can run on any port. When a client attempts to access an Sun RPC service on a server, it must learn the port that service is running on. It does this by querying the port mapper process, usually rpcbind, on the well-known port of 111.

The client sends the Sun RPC program number of the service and the port mapper process responds with the port number of the service. The client sends its Sun RPC queries to the server, specifying the port identified by the port mapper process. When the server replies, the ASA intercepts this packet and opens both embryonic TCP and UDP connections on that port.

When you configure dynamic access lists on the ASA, they are supported on the ingress direction only and the ASA drops egress traffic destined to dynamic ports. Therefore, Sun RPC inspection implements a pinhole mechanism to support egress traffic. Sun RPC inspection uses this pinhole mechanism to support outbound dynamic access lists.

To view the dynamic access lists configured for the ASA, use the **show asp table classify domain permit** command. For information about the **show asp table classify domain permit** command, see the CLI configuration guide.



### Note

Sun RPC inspection has the limitation that NAT or PAT of Sun RPC payload information is not supported.

## Managing Sun RPC Services

Use the Sun RPC services table to control Sun RPC traffic through the ASA based on established Sun RPC sessions. To create entries in the Sun RPC services table, use the **sunrpc-server** command in global configuration mode:

```
hostname(config)# sunrpc-server interface_name ip_address mask service service_type
protocol {tcp | udp} port[-port] timeout hh:mm:ss
```

You can use this command to specify the timeout after which the pinhole that was opened by Sun RPC application inspection will be closed. For example, to create a timeout of 30 minutes to the Sun RPC server with the IP address 192.168.100.2, enter the following command:

```
hostname(config)# sunrpc-server inside 192.168.100.2 255.255.255.255 service 100003
protocol tcp 111 timeout 00:30:00
```

This command specifies that the pinhole that was opened by Sun RPC application inspection will be closed after 30 minutes. In this example, the Sun RPC server is on the inside interface using TCP port 111. You can also specify UDP, a different port number, or a range of ports. To specify a range of ports, separate the starting and ending port numbers in the range with a hyphen (for example, 111-113).

The service type identifies the mapping between a specific service type and the port number used for the service. To determine the service type, which in this example is 100003, use the **sunrpcinfo** command at the UNIX or Linux command line on the Sun RPC server machine.

To clear the Sun RPC configuration, enter the following command.

```
hostname(config)# clear configure sunrpc-server
```

This removes the configuration performed using the **sunrpc-server** command. The **sunrpc-server** command allows pinholes to be created with a specified timeout.

To clear the active Sun RPC services, enter the following command:

```
hostname(config)# clear sunrpc-server active
```

This clears the pinholes that are opened by Sun RPC application inspection for specific services, such as NFS or NIS.

## Verifying and Monitoring Sun RPC Inspection

The sample output in this section is for a Sun RPC server with an IP address of 192.168.100.2 on the inside interface and a Sun RPC client with an IP address of 209.168.200.5 on the outside interface.

To view information about the current Sun RPC connections, enter the **show conn** command. The following is sample output from the **show conn** command:

```
hostname# show conn
15 in use, 21 most used
UDP out 209.165.200.5:800 in 192.168.100.2:2049 idle 0:00:04 flags -
UDP out 209.165.200.5:714 in 192.168.100.2:111 idle 0:00:04 flags -
UDP out 209.165.200.5:712 in 192.168.100.2:647 idle 0:00:05 flags -
UDP out 192.168.100.2:0 in 209.165.200.5:714 idle 0:00:05 flags i
hostname(config)#
```

To display the information about the Sun RPC service table configuration, enter the **show running-config sunrpc-server** command. The following is sample output from the **show running-config sunrpc-server** command:

```
hostname(config)# show running-config sunrpc-server
```

```
sunrpc-server inside 192.168.100.2 255.255.255.255 service 100003 protocol UDP port 111
timeout 0:30:00
sunrpc-server inside 192.168.100.2 255.255.255.255 service 100005 protocol UDP port 111
timeout 0:30:00
```

This output shows that a timeout interval of 30 minutes is configured on UDP port 111 for the Sun RPC server with the IP address 192.168.100.2 on the inside interface.

To display the pinholes open for Sun RPC services, enter the **show sunrpc-server active** command. The following is sample output from **show sunrpc-server active** command:

```
hostname# show sunrpc-server active
LOCAL FOREIGN SERVICE TIMEOUT

1 209.165.200.5/0 192.168.100.2/2049 100003 0:30:00
2 209.165.200.5/0 192.168.100.2/2049 100003 0:30:00
3 209.165.200.5/0 192.168.100.2/647 100005 0:30:00
4 209.165.200.5/0 192.168.100.2/650 100005 0:30:00
```

The entry in the LOCAL column shows the IP address of the client or server on the inside interface, while the value in the FOREIGN column shows the IP address of the client or server on the outside interface.

To view information about the Sun RPC services running on a Sun RPC server, enter the **rpcinfo -p** command from the Linux or UNIX server command line. The following is sample output from the **rpcinfo -p** command:

```
sunrpcserver:~ # rpcinfo -p
program vers proto port
100000 2 tcp 111 portmapper
100000 2 udp 111 portmapper
100024 1 udp 632 status
100024 1 tcp 635 status
100003 2 udp 2049 nfs
100003 3 udp 2049 nfs
100003 2 tcp 2049 nfs
100003 3 tcp 2049 nfs
100021 1 udp 32771 nlockmgr
100021 3 udp 32771 nlockmgr
100021 4 udp 32771 nlockmgr
100021 1 tcp 32852 nlockmgr
100021 3 tcp 32852 nlockmgr
100021 4 tcp 32852 nlockmgr
100005 1 udp 647 mountd
100005 1 tcp 650 mountd
100005 2 udp 647 mountd
100005 2 tcp 650 mountd
100005 3 udp 647 mountd
100005 3 tcp 650 mountd
```

In this output, port 647 corresponds to the mountd daemon running over UDP. The mountd process would more commonly be using port 32780. The mountd process running over TCP uses port 650 in this example.





## CHAPTER 46

# Configuring Inspection for Management Application Protocols

---

This chapter describes how to configure application layer protocol inspection. Inspection engines are required for services that embed IP addressing information in the user data packet or that open secondary channels on dynamically assigned ports. These protocols require the ASA to do a deep packet inspection instead of passing the packet through the fast path. As a result, inspection engines can affect overall throughput.

Several common inspection engines are enabled on the ASA by default, but you might need to enable others depending on your network.

This chapter includes the following sections:

- [DCERPC Inspection, page 46-1](#)
- [GTP Inspection, page 46-3](#)
- [RADIUS Accounting Inspection, page 46-9](#)
- [RSH Inspection, page 46-11](#)
- [SNMP Inspection, page 46-11](#)
- [XDMCP Inspection, page 46-12](#)

## DCERPC Inspection

This section describes the DCERPC inspection engine. This section includes the following topics:

- [DCERPC Overview, page 46-1](#)
- [Configuring a DCERPC Inspection Policy Map for Additional Inspection Control, page 46-2](#)

## DCERPC Overview

DCERPC is a protocol widely used by Microsoft distributed client and server applications that allows software clients to execute programs on a server remotely.

This typically involves a client querying a server called the Endpoint Mapper listening on a well known port number for the dynamically allocated network information of a required service. The client then sets up a secondary connection to the server instance providing the service. The security appliance allows the appropriate port number and network address and also applies NAT, if needed, for the secondary connection.

DCERPC inspect maps inspect for native TCP communication between the EPM and client on well known TCP port 135. Map and lookup operations of the EPM are supported for clients. Client and server can be located in any security zone. The embedded server IP address and Port number are received from the applicable EPM response messages. Since a client may attempt multiple connections to the server port returned by EPM, multiple use of pinholes are allowed, which have user configurable timeouts.

**Note**

DCERPC inspection only supports communication between the EPM and clients to open pinholes through the ASA. Clients using RPC communication that does not use the EPM is not supported with DCERPC inspection.

## Configuring a DCERPC Inspection Policy Map for Additional Inspection Control

To specify additional DCERPC inspection parameters, create a DCERPC inspection policy map. You can then apply the inspection policy map when you enable DCERPC inspection.

To create a DCERPC inspection policy map, perform the following steps:

**Step 1** Create a DCERPC inspection policy map, enter the following command:

```
hostname(config)# policy-map type inspect dcerpc policy_map_name
hostname(config-pmap)#
```

Where the *policy\_map\_name* is the name of the policy map. The CLI enters policy-map configuration mode.

**Step 2** (Optional) To add a description to the policy map, enter the following command:

```
hostname(config-pmap)# description string
```

**Step 3** To configure parameters that affect the inspection engine, perform the following steps:

a. To enter parameters configuration mode, enter the following command:

```
hostname(config-pmap)# parameters
hostname(config-pmap-p)#
```

b. To configure the timeout for DCERPC pinholes and override the global system pinhole timeout of two minutes, enter the following command:

```
hostname(config-pmap-p)# timeout pinhole hh:mm:ss
```

Where the *hh:mm:ss* argument is the timeout for pinhole connections. Value is between 0:0:1 and 1193:0:0.

c. To configure options for the endpoint mapper traffic, enter the following command:

```
hostname(config-pmap-p)# endpoint-mapper [epm-service-only] [lookup-operation]
[timeout hh:mm:ss]
```

Where the *hh:mm:ss* argument is the timeout for pinholes generated from the lookup operation. If no timeout is configured for the lookup operation, the timeout pinhole command or the default is used. The **epm-service-only** keyword enforces endpoint mapper service during binding so that only its service traffic is processed. The **lookup-operation** keyword enables the lookup operation of the endpoint mapper service.

The following example shows how to define a DCERPC inspection policy map with the timeout configured for DCERPC pinholes.

```
hostname(config)# policy-map type inspect dcerpc dcerpc_map
hostname(config-pmap)# timeout pinhole 0:10:00

hostname(config)# class-map dcerpc
hostname(config-cmap)# match port tcp eq 135

hostname(config)# policy-map global-policy
hostname(config-pmap)# class dcerpc
hostname(config-pmap-c)# inspect dcerpc dcerpc-map

hostname(config)# service-policy global-policy global
```

## GTP Inspection

This section describes the GTP inspection engine. This section includes the following topics:

- [GTP Inspection Overview, page 46-3](#)
- [Configuring a GTP Inspection Policy Map for Additional Inspection Control, page 46-4](#)
- [Verifying and Monitoring GTP Inspection, page 46-8](#)

**Note**

---


GTP inspection requires a special license. If you enter GTP-related commands on a ASA without the required license, the ASA displays an error message.

---

## GTP Inspection Overview

GPRS provides uninterrupted connectivity for mobile subscribers between GSM networks and corporate networks or the Internet. The GGSN is the interface between the GPRS wireless data network and other networks. The SGSN performs mobility, data session management, and data compression (See [Figure 46-1](#)).

Figure 46-1 GPRS Tunneling Protocol

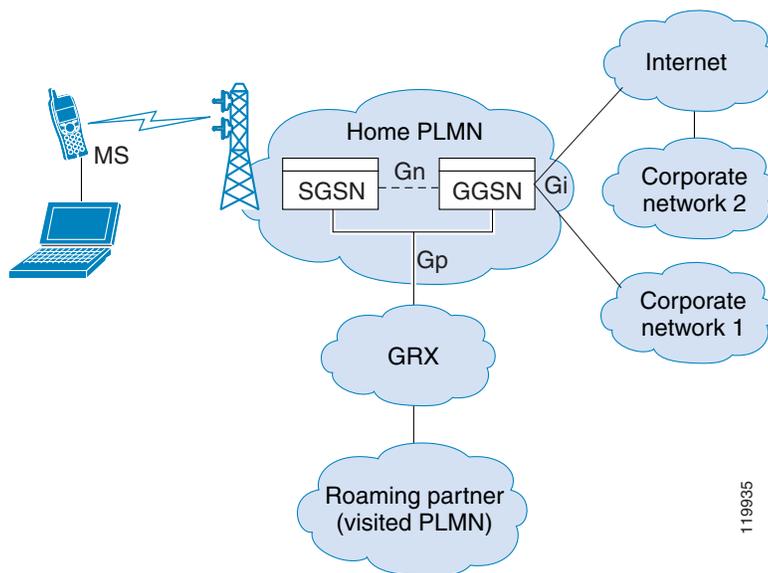

The UMTS is the commercial convergence of fixed-line telephony, mobile, Internet and computer technology. UTRAN is the networking protocol used for implementing wireless networks in this system. GTP allows multi-protocol packets to be tunneled through a UMTS/GPRS backbone between a GGSN, an SGSN and the UTRAN.

GTP does not include any inherent security or encryption of user data, but using GTP with the ASA helps protect your network against these risks.

The SGSN is logically connected to a GGSN using GTP. GTP allows multiprotocol packets to be tunneled through the GPRS backbone between GSNs. GTP provides a tunnel control and management protocol that allows the SGSN to provide GPRS network access for a mobile station by creating, modifying, and deleting tunnels. GTP uses a tunneling mechanism to provide a service for carrying user data packets.

**Note**

When using GTP with failover, if a GTP connection is established and the active unit fails before data is transmitted over the tunnel, the GTP data connection (with a “j” flag set) is not replicated to the standby unit. This occurs because the active unit does not replicate embryonic connections to the standby unit.

## Configuring a GTP Inspection Policy Map for Additional Inspection Control

If you want to enforce additional parameters on GTP traffic, create and configure a GTP map. If you do not specify a map with the **inspect gtp** command, the ASA uses the default GTP map, which is preconfigured with the following default values:

- **request-queue 200**
- **timeout gsn 0:30:00**
- **timeout pdp-context 0:30:00**
- **timeout request 0:01:00**

- **timeout signaling 0:30:00**
- **timeout tunnel 0:01:00**
- **tunnel-limit 500**

To create and configure a GTP map, perform the following steps. You can then apply the GTP map when you enable GTP inspection according to the “[Configuring Application Layer Protocol Inspection](#)” section on page 42-6.

**Step 1** Create a GTP inspection policy map, enter the following command:

```
hostname(config)# policy-map type inspect gtp policy_map_name
hostname(config-pmap)#
```

Where the *policy\_map\_name* is the name of the policy map. The CLI enters policy-map configuration mode.

**Step 2** (Optional) To add a description to the policy map, enter the following command:

```
hostname(config-pmap)# description string
```

**Step 3** To match an Access Point name, enter the following command:

```
hostname(config-pmap)# match [not] apn regex [regex_name | class regex_class_name]
```

**Step 4** To match a message ID, enter the following command:

```
hostname(config-pmap)# match [not] message id [message_id | range lower_range upper_range]
```

Where the *message\_id* is an alphanumeric identifier between 1 and 255. The *lower\_range* is lower range of message IDs. The *upper\_range* is the upper range of message IDs.

**Step 5** To match a message length, enter the following command:

```
hostname(config-pmap)# match [not] message length min min_length max max_length
```

Where the *min\_length* and *max\_length* are both between 1 and 65536. The length specified by this command is the sum of the GTP header and the rest of the message, which is the payload of the UDP packet.

**Step 6** To match the version, enter the following command:

```
hostname(config-pmap)# match [not] version [version_id | range lower_range upper_range]
```

Where the *version\_id* is between 0 and 255. The *lower\_range* is lower range of versions. The *upper\_range* is the upper range of versions.

**Step 7** To configure parameters that affect the inspection engine, perform the following steps:

- To enter parameters configuration mode, enter the following command:

```
hostname(config-pmap)# parameters
hostname(config-pmap-p)#
```

The **mnc** *network\_code* argument is a two or three-digit value identifying the network code.

By default, the security appliance does not check for valid MCC/MNC combinations. This command is used for IMSI Prefix filtering. The MCC and MNC in the IMSI of the received packet is compared with the MCC/MNC configured with this command and is dropped if it does not match.

This command must be used to enable IMSI Prefix filtering. You can configure multiple instances to specify permitted MCC and MNC combinations. By default, the ASA does not check the validity of MNC and MCC combinations, so you must verify the validity of the combinations configured. To find more information about MCC and MNC codes, see the ITU E.212 recommendation, *Identification Plan for Land Mobile Stations*.

- b. To allow invalid GTP packets or packets that otherwise would fail parsing and be dropped, enter the following command:

```
hostname(config-pmap-p)# permit errors
```

By default, all invalid packets or packets that failed, during parsing, are dropped.

- c. To enable support for GSN pooling, use the **permit response** command.

If the ASA performs GTP inspection, by default the ASA drops GTP responses from GSNs that were not specified in the GTP request. This situation occurs when you use load-balancing among a pool of GSNs to provide efficiency and scalability of GPRS.

You can enable support for GSN pooling by using the **permit response** command. This command configures the ASA to allow responses from any of a designated set of GSNs, regardless of the GSN to which a GTP request was sent. You identify the pool of load-balancing GSNs as a network object. Likewise, you identify the SGSN as a network object. If the GSN responding belongs to the same object group as the GSN that the GTP request was sent to and if the SGSN is in a object group that the responding GSN is permitted to send a GTP response to, the ASA permits the response.

- d. To create an object to represent the pool of load-balancing GSNs, perform the following steps:

Use the **object-group** command to define a new network object group representing the pool of load-balancing GSNs.

```
hostname(config)# object-group network GSN-pool-name
hostname(config-network)#
```

For example, the following command creates an object group named gsnpool32:

```
hostname(config)# object-group network gsnpool32
hostname(config-network)#
```

- e. Use the **network-object** command to specify the load-balancing GSNs. You can do so with one **network-object** command per GSN, using the **host** keyword. You can also using **network-object** command to identify whole networks containing GSNs that perform load balancing.

```
hostname(config-network)# network-object host IP-address
```

For example, the following commands create three network objects representing individual hosts:

```
hostname(config-network)# network-object host 192.168.100.1
hostname(config-network)# network-object host 192.168.100.2
hostname(config-network)# network-object host 192.168.100.3
hostname(config-network)#
```

- f. To create an object to represent the SGSN that the load-balancing GSNs are permitted to respond to, perform the following steps:

- a. Use the **object-group** command to define a new network object group that will represent the SGSN that sends GTP requests to the GSN pool.

```
hostname(config)# object-group network SGSN-name
hostname(config-network)#
```

For example, the following command creates an object group named sgsn32:

```
hostname(config)# object-group network sgsn32
```

```
hostname(config-network)#
```

- b. Use the **network-object** command with the **host** keyword to identify the SGSN.

```
hostname(config-network)# network-object host IP-address
```

For example, the following command creates a network objects representing the SGSN:

```
hostname(config-network)# network-object host 192.168.50.100
hostname(config-network)#
```

- g. To allow GTP responses from any GSN in the network object representing the GSN pool, defined in c., d, to the network object representing the SGSN, defined in c., f., enter the following commands:

```
hostname(config)# gtp-map map_name
hostname(config-gtp-map)# permit response to-object-group SGSN-name from-object-group
GSN-pool-name
```

For example, the following command permits GTP responses from any host in the object group named gsnpool32 to the host in the object group named sgsn32:

```
hostname(config-gtp-map)# permit response to-object-group sgsn32 from-object-group
gsnpool32
```

The following example shows how to support GSN pooling by defining network objects for the GSN pool and the SGSN. An entire Class C network is defined as the GSN pool but you can identify multiple individual IP addresses, one per **network-object** command, instead of identifying whole networks. The example then modifies a GTP map to permit responses from the GSN pool to the SGSN.

```
hostname(config)# object-group network gsnpool32
hostname(config-network)# network-object 192.168.100.0 255.255.255.0
hostname(config)# object-group network sgsn32
hostname(config-network)# network-object host 192.168.50.100
hostname(config)# gtp-map gtp-policy
hostname(config-gtp-map)# permit response to-object-group sgsn32 from-object-group
gsnpool32
```

- h. To specify the maximum number of GTP requests that will be queued waiting for a response, enter the following command:

```
hostname(config-gtp-map)# request-queue max_requests
```

where the *max\_requests* argument sets the maximum number of GTP requests that will be queued waiting for a response, from 1 to 4294967295. The default is 200.

When the limit has been reached and a new request arrives, the request that has been in the queue for the longest time is removed. The Error Indication, the Version Not Supported and the SGSN Context Acknowledge messages are not considered as requests and do not enter the request queue to wait for a response.

- i. To change the inactivity timers for a GTP session, enter the following command:

```
hostname(config-gtp-map)# timeout {gsn | pdp-context | request | signaling | tunnel}
hh:mm:ss
```

Enter this command separately for each timeout.

The **gsn** keyword specifies the period of inactivity after which a GSN will be removed.

The **pdp-context** keyword specifies the maximum period of time allowed before beginning to receive the PDP context.

The **request** keyword specifies the maximum period of time allowed before beginning to receive the GTP message.

The **signaling** keyword specifies the period of inactivity after which the GTP signaling will be removed.

The **tunnel** keyword specifies the period of inactivity after which the GTP tunnel will be torn down.

The *hh:mm:ss* argument is the timeout where *hh* specifies the hour, *mm* specifies the minutes, and *ss* specifies the seconds. The value **0** means never tear down.

- j. To specify the maximum number of GTP tunnels allowed to be active on the ASA, enter the following command:

```
hostname(config-gtp-map)# tunnel-limit max_tunnels
```

where the *max\_tunnels* argument is the maximum number of tunnels allowed, from 1 to 4294967295. The default is 500.

New requests will be dropped once the number of tunnels specified by this command is reached.

The following example shows how to limit the number of tunnels in the network:

```
hostname(config)# policy-map type inspect gtp gmap
hostname(config-pmap)# parameters
hostname(config-pmap-p)# tunnel-limit 3000

hostname(config)# policy-map global_policy
hostname(config-pmap)# class inspection_default
hostname(config-pmap-c)# inspect gtp gmap

hostname(config)# service-policy global_policy global
```

## Verifying and Monitoring GTP Inspection

To display GTP configuration, enter the **show service-policy inspect gtp** command in privileged EXEC mode. For the detailed syntax for this command, see the command page in the command reference.

Use the **show service-policy inspect gtp statistics** command to show the statistics for GTP inspection. The following is sample output from the **show service-policy inspect gtp statistics** command:

```
hostname# show service-policy inspect gtp statistics
GPRS GTP Statistics:
 version_not_support 0 msg_too_short 0
 unknown_msg 0 unexpected_sig_msg 0
 unexpected_data_msg 0 ie_duplicated 0
 mandatory_ie_missing 0 mandatory_ie_incorrect 0
 optional_ie_incorrect 0 ie_unknown 0
 ie_out_of_order 0 ie_unexpected 0
 total_forwarded 0 total_dropped 0
 signalling_msg_dropped 0 data_msg_dropped 0
 signalling_msg_forwarded 0 data_msg_forwarded 0
 total_created_pdp 0 total_deleted_pdp 0
 total_created_pdpmbc 0 total_deleted_pdpmbc 0
 pdp_non_existent 0
```

You can use the vertical bar (|) to filter the display. Type **?|** for more display filtering options.

The following is sample GSN output from the **show service-policy inspect gtp statistics gsn** command:

```

hostname# show service-policy inspect gtp statistics gsn 9.9.9.9
1 in use, 1 most used, timeout 0:00:00

GTP GSN Statistics for 9.9.9.9, Idle 0:00:00, restart counter 0
Tunnels Active 0Tunnels Created 0
Tunnels Destroyed 0
Total Messages Received 2
Signaling Messages Data Messages
total received 2 0
dropped 0 0
forwarded 2 0

```

Use the **show service-policy inspect gtp pdp-context** command to display PDP context-related information. The following is sample output from the **show service-policy inspect gtp pdp-context** command:

```

hostname# show service-policy inspect gtp pdp-context detail
1 in use, 1 most used, timeout 0:00:00

Version TID MS Addr SGSN Addr Idle APN
v1 1234567890123425 10.0.1.1 10.0.0.2 0:00:13 gprs.cisco.com

user_name (IMSI): 214365870921435 MS address: 1.1.1.1
primary pdp: Y nsapi: 2
sgsn_addr_signal: 10.0.0.2 sgsn_addr_data: 10.0.0.2
ggsn_addr_signal: 10.1.1.1 ggsn_addr_data: 10.1.1.1
sgsn control teid: 0x000001d1 sgsn data teid: 0x000001d3
ggsn control teid: 0x6306ffa0 ggsn data teid: 0x6305f9fc
seq_tpdu_up: 0 seq_tpdu_down: 0
signal_sequence: 0
upstream_signal_flow: 0 upstream_data_flow: 0
downstream_signal_flow: 0 downstream_data_flow: 0
RAupdate_flow: 0

```

The PDP context is identified by the tunnel ID, which is a combination of the values for IMSI and NSAPI. A GTP tunnel is defined by two associated PDP contexts in different GSN nodes and is identified with a Tunnel ID. A GTP tunnel is necessary to forward packets between an external packet data network and a MS user.

You can use the vertical bar (|) to filter the display, as in the following example:

```
hostname# show service-policy gtp statistics | grep gsn
```

## RADIUS Accounting Inspection

This section describes the IM inspection engine. This section includes the following topics:

- [RADIUS Accounting Inspection Overview, page 46-9](#)
- [Configuring a RADIUS Inspection Policy Map for Additional Inspection Control, page 46-10](#)

## RADIUS Accounting Inspection Overview

One of the well known problems is the over-billing attack in GPRS networks. The over-billing attack can cause consumers anger and frustration by being billed for services that they have not used. In this case, a malicious attacker sets up a connection to a server and obtains an IP address from the SGSN. When the attacker ends the call, the malicious server will still send packets to it, which gets dropped by

the GGSN, but the connection from the server remains active. The IP address assigned to the malicious attacker gets released and reassigned to a legitimate user who will then get billed for services that the attacker will use.

RADIUS accounting inspection prevents this type of attack by ensuring the traffic seen by the GGSN is legitimate. With the RADIUS accounting feature properly configured, the security appliance tears down a connection based on matching the Framed IP attribute in the Radius Accounting Request Start message with the Radius Accounting Request Stop message. When the Stop message is seen with the matching IP address in the Framed IP attribute, the security appliance looks for all connections with the source matching the IP address.

You have the option to configure a secret pre-shared key with the RADIUS server so the security appliance can validate the message. If the shared secret is not configured, the security appliance does not need to validate the source of the message and will only check that the source IP address is one of the configured addresses allowed to send the RADIUS messages.

**Note**

When using RADIUS accounting inspection with GPRS enabled, the ASA checks for the 3GPP-Session-Stop-Indicator in the Accounting Request STOP messages to properly handle secondary PDP contexts. Specifically, the ASA requires that the Accounting Request STOP messages include the 3GPP-SGSN-Address attribute before it will terminate the user sessions and all associated connections. Some third-party GGSNs might not send this attribute by default.

## Configuring a RADIUS Inspection Policy Map for Additional Inspection Control

In order to use this feature, the **radius-accounting-map** will need to be specified in the **policy-map type management** and then applied to the service-policy using the new **control-plane** keyword to specify that this traffic is for to-the-box inspection.

The following example shows the complete set of commands in context to properly configure this feature:

**Step 1** Configure the class map and the port:

```
class-map type management c1
 match port udp eq 1888
```

**Step 2** Create the policy map, and configure the parameters for RADIUS accounting inspection using the parameter command to access the proper mode to configure the attributes, host, and key.

```
policy-map type inspect radius-accounting radius_accounting_map
 parameters
 host 10.1.1.1 inside key 123456789
 send response
 enable gprs
 validate-attribute 22
```

**Step 3** Configure the service policy and control-plane keywords.

```
policy-map type management global_policy
 class c1
 inspect radius-accounting radius_accounting_map

service-policy global_policy control-plane abc global
```

# RSH Inspection

RSH inspection is enabled by default. The RSH protocol uses a TCP connection from the RSH client to the RSH server on TCP port 514. The client and server negotiate the TCP port number where the client listens for the STDERR output stream. RSH inspection supports NAT of the negotiated port number if necessary.

# SNMP Inspection

This section describes the IM inspection engine. This section includes the following topics:

- [SNMP Inspection Overview, page 46-11](#)
- [Configuring an SNMP Inspection Policy Map for Additional Inspection Control, page 46-11](#)

## SNMP Inspection Overview

SNMP application inspection lets you restrict SNMP traffic to a specific version of SNMP. Earlier versions of SNMP are less secure; therefore, denying certain SNMP versions may be required by your security policy. The ASA can deny SNMP versions 1, 2, 2c, or 3. You control the versions permitted by creating an SNMP map.

You then apply the SNMP map when you enable SNMP inspection according to the [“Configuring Application Layer Protocol Inspection”](#) section on page 42-6.

## Configuring an SNMP Inspection Policy Map for Additional Inspection Control

To create an SNMP inspection policy map, perform the following steps:

---

**Step 1** To create an SNMP map, enter the following command:

```
hostname(config)# snmp-map map_name
hostname(config-snmp-map)#
```

where *map\_name* is the name of the SNMP map. The CLI enters SNMP map configuration mode.

**Step 2** To specify the versions of SNMP to deny, enter the following command for each version:

```
hostname(config-snmp-map)# deny version version
hostname(config-snmp-map)#
```

where *version* is 1, 2, 2c, or 3.

---

The following example denies SNMP Versions 1 and 2:

```
hostname(config)# snmp-map sample_map
hostname(config-snmp-map)# deny version 1
hostname(config-snmp-map)# deny version 2
```

## XDMCP Inspection

XDMCP inspection is enabled by default; however, the XDMCP inspection engine is dependent upon proper configuration of the **established** command.

XDMCP is a protocol that uses UDP port 177 to negotiate X sessions, which use TCP when established.

For successful negotiation and start of an XWindows session, the ASA must allow the TCP back connection from the Xhosted computer. To permit the back connection, use the **established** command on the ASA. Once XDMCP negotiates the port to send the display, The **established** command is consulted to verify if this back connection should be permitted.

During the XWindows session, the manager talks to the display Xserver on the well-known port 6000 + *n*. Each display has a separate connection to the Xserver, as a result of the following terminal setting.

```
setenv DISPLAY Xserver:n
```

where *n* is the display number.

When XDMCP is used, the display is negotiated using IP addresses, which the ASA can NAT if needed. XDCMP inspection does not support PAT.































## **PART 11**

# **Configuring Unified Communications**





## CHAPTER 47

# Information About Cisco Unified Communications Proxy Features

---

This chapter describes how to configure the adaptive security appliance for Cisco Unified Communications Proxy features.

This chapter includes the following sections:

- [Information About the Adaptive Security Appliance in Cisco Unified Communications, page 47-1](#)
- [TLS Proxy Applications in Cisco Unified Communications, page 47-3](#)
- [Licensing for Cisco Unified Communications Proxy Features, page 47-4](#)

## Information About the Adaptive Security Appliance in Cisco Unified Communications

This section describes the Cisco UC Proxy features on the Cisco ASA 5500 series appliances. The purpose of a proxy is to terminate and reoriginate connections between a client and server. The proxy delivers a range of security functions such as traffic inspection, protocol conformance, and policy control to ensure security for the internal network. An increasingly popular function of a proxy is to terminate encrypted connections in order to apply security policies while maintaining confidentiality of connections. The Cisco ASA 5500 Series appliances are a strategic platform to provide proxy functions for unified communications deployments.

The Cisco UC Proxy includes the following solutions:

### **Phone Proxy: Secure remote access for Cisco encrypted endpoints, and VLAN traversal for Cisco softphones**

The phone proxy feature enables termination of Cisco SRTP/TLS-encrypted endpoints for secure remote access. The phone proxy allows large scale deployments of secure phones without a large scale VPN remote access hardware deployment. End-user infrastructure is limited to just the IP endpoint, without VPN tunnels or hardware.

The Cisco adaptive security appliance phone proxy is the replacement product for the Cisco Unified Phone Proxy. Additionally, the phone proxy can be deployed for voice/data VLAN traversal for softphone applications. Cisco IP Communicator (CIPC) traffic (both media and signaling) can be proxied through the ASA, thus traversing calls securely between voice and data VLANs.

For information about the differences between the TLS proxy and phone proxy, go to the following URL for Unified Communications content, including TLS Proxy vs. Phone Proxy white paper:

<http://www.cisco.com/go/secureuc>

**TLS Proxy: Decryption and inspection of Cisco Unified Communications encrypted signaling**

End-to-end encryption often leaves network security appliances “blind” to media and signaling traffic, which can compromise access control and threat prevention security functions. This lack of visibility can result in a lack of interoperability between the firewall functions and the encrypted voice, leaving businesses unable to satisfy both of their key security requirements.

The ASA is able to intercept and decrypt encrypted signaling from Cisco encrypted endpoints to the Cisco Unified Communications Manager (Cisco UCM), and apply the required threat protection and access control. It can also ensure confidentiality by re-encrypting the traffic onto the Cisco UCM servers.

Typically, the ASA TLS Proxy functionality is deployed in campus unified communications network. This solution is ideal for deployments that utilize end to end encryption and firewalls to protect Unified Communications Manager servers.

**Mobility Proxy: Secure connectivity between Cisco Unified Mobility Advantage server and Cisco Unified Mobile Communicator clients**

Cisco Unified Mobility solutions include the Cisco Unified Mobile Communicator (Cisco UMC), an easy-to-use software application for mobile handsets that extends enterprise communications applications and services to mobile phones and the Cisco Unified Mobility Advantage (Cisco UMA) server. The Cisco Unified Mobility solution streamlines the communication experience, enabling single number reach and integration of mobile endpoints into the Unified Communications infrastructure.

The security appliance acts as a proxy, terminating and reoriginating the TLS signaling between the Cisco UMC and Cisco UMA. As part of the proxy security functionality, inspection is enabled for the Cisco UMA Mobile Multiplexing Protocol (MMP), the protocol between Cisco UMC and Cisco UMA.

**Presence Federation Proxy: Secure connectivity between Cisco Unified Presence servers and Cisco/Microsoft Presence servers**

Cisco Unified Presence solution collects information about the availability and status of users, such as whether they are using communication devices, such as IP phones at particular times. It also collects information regarding their communications capabilities, such as whether web collaboration or video conferencing is enabled. Using user information captured by Cisco Unified Presence, applications such as Cisco Unified Personal Communicator and Cisco UCM can improve productivity by helping users connect with colleagues more efficiently through determining the most effective way for collaborative communication.

Using the ASA as a secure presence federation proxy, businesses can securely connect their Cisco Unified Presence (Cisco UP) servers to other Cisco or Microsoft Presence servers, enabling intra-enterprise communications. The security appliance terminates the TLS connectivity between the servers, and can inspect and apply policies for the SIP communications between the servers.

**Cisco Intercompany Media Engine Proxy: Secure connectivity between Cisco UCM servers in different enterprises for IP Phone traffic**

As more unified communications are deployed within enterprises, cases where business-to-business calls utilize unified communications on both sides with the Public Switched Network (PSTN) in the middle become increasingly common. All outside calls go over circuits to telephone providers and from there are delivered to all external destinations.

The Cisco Intercompany Media Engine gradually creates dynamic, encrypted VoIP connections between businesses, so that a collection of enterprises that work together end up looking like one giant business with secure VoIP interconnections between them.

There are three components to a Cisco Intercompany Media Engine deployment within an enterprise: a Cisco Intercompany Media Engine server, a call agent (the Cisco Unified Communications Manager) and an ASA running the Cisco Intercompany Media Engine Proxy.

The ASA provides perimeter security by encrypting signaling connections between enterprises and preventing unauthorized calls. An ASA running the Cisco Intercompany Media Engine Proxy can either be deployed as an Internet firewall or be designated as a Cisco Intercompany Media Engine Proxy and placed in the DMZ, off the path of the regular Internet traffic.

## TLS Proxy Applications in Cisco Unified Communications

Table 47-1 shows the Cisco Unified Communications applications that utilize the TLS proxy on the ASA.

**Table 47-1** *TLS Proxy Applications and the Security Appliance*

| Application               | TLS Client             | TLS Server             | Client Authentication | Security Appliance Server Role                               | Security Appliance Client Role                                                                          |
|---------------------------|------------------------|------------------------|-----------------------|--------------------------------------------------------------|---------------------------------------------------------------------------------------------------------|
| Phone Proxy and TLS Proxy | IP phone               | Cisco UCM              | Yes                   | Proxy certificate, self-signed or by internal CA             | Local dynamic certificate signed by the ASA CA (might not need certificate for phone proxy application) |
| Mobility Proxy            | Cisco UMC              | Cisco UMA              | No                    | Using the Cisco UMA private key or certificate impersonation | Any static configured certificate                                                                       |
| Presence Federation Proxy | Cisco UP or MS LCS/OCS | Cisco UP or MS LCS/OCS | Yes                   | Proxy certificate, self-signed or by internal CA             | Using the Cisco UP private key or certificate impersonation                                             |

The ASA supports TLS proxy for various voice applications. For the phone proxy, the TLS proxy running on the ASA has the following key features:

- The ASA forces remote IP phones connecting to the phone proxy through the Internet to be in secured mode even when the Cisco UCM cluster is in non-secure mode.
- The TLS proxy is implemented on the ASA to intercept the TLS signaling from IP phones.
- The TLS proxy decrypts the packets, sends packets to the inspection engine for NAT rewrite and protocol conformance, optionally encrypts packets, and sends them to Cisco UCM or sends them in clear text if the IP phone is configured to be in nonsecure mode on the Cisco UCM.
- The ASA acts as a media terminator as needed and translates between SRTP and RTP media streams.
- The TLS proxy is a transparent proxy that works based on establishing trusted relationship between the TLS client, the proxy (the ASA), and the TLS server.

For the Cisco Unified Mobility solution, the TLS client is a Cisco UMA client and the TLS server is a Cisco UMA server. The ASA is between a Cisco UMA client and a Cisco UMA server. The mobility proxy (implemented as a TLS proxy) for Cisco Unified Mobility allows the use of an imported PKCS-12 certificate for server proxy during the handshake with the client. Cisco UMA clients are not required to present a certificate (no client authentication) during the handshake.

For the Cisco Unified Presence solution, the ASA acts as a TLS proxy between the Cisco UP server and the foreign server. This allows the ASA to proxy TLS messages on behalf of the server that initiates the TLS connection, and route the proxied TLS messages to the client. The ASA stores certificate trustpoints for the server and the client, and presents these certificates on establishment of the TLS session.

## Licensing for Cisco Unified Communications Proxy Features

The Cisco Unified Communications proxy features supported by the ASA require a Unified Communications Proxy license:

- Phone proxy
- TLS proxy for encrypted voice inspection
- Presence federation proxy
- Intercompany media engine proxy


**Note**

In Version 8.2(2) and later, the Mobility Advantage proxy no longer requires a Unified Communications Proxy license.

The following table shows the Unified Communications Proxy license details by platform for the phone proxy, TLS proxy for encrypted voice inspection, and presence federation proxy:


**Note**

This feature is not available on No Payload Encryption models.

| Model    | License Requirement <sup>1</sup>                                                                                                           |
|----------|--------------------------------------------------------------------------------------------------------------------------------------------|
| ASA 5505 | Base License and Security Plus License: 2 sessions.<br><i>Optional license: 24 sessions.</i>                                               |
| ASA 5510 | Base License and Security Plus License: 2 sessions.<br><i>Optional licenses: 24, 50, or 100 sessions.</i>                                  |
| ASA 5520 | Base License: 2 sessions.<br><i>Optional licenses: 24, 50, 100, 250, 500, 750, or 1000 sessions.</i>                                       |
| ASA 5540 | Base License: 2 sessions.<br><i>Optional licenses: 24, 50, 100, 250, 500, 750, 1000, or 2000 sessions.</i>                                 |
| ASA 5550 | Base License: 2 sessions.<br><i>Optional licenses: 24, 50, 100, 250, 500, 750, 1000, 2000, or 3000 sessions.</i>                           |
| ASA 5580 | Base License: 2 sessions.<br><i>Optional licenses: 24, 50, 100, 250, 500, 750, 1000, 2000, 3000, 5000, or 10,000 sessions.<sup>2</sup></i> |

| Model                               | License Requirement <sup>1</sup>                                                                                                           |
|-------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------|
| ASA 5512-X                          | Base License: 2 sessions.<br><i>Optional licenses: 24, 50, 100, 250, or 500 sessions.</i>                                                  |
| ASA 5515-X                          | Base License: 2 sessions.<br><i>Optional licenses: 24, 50, 100, 250, or 500 sessions.</i>                                                  |
| ASA 5525-X                          | Base License: 2 sessions.<br><i>Optional licenses: 24, 50, 100, 250, 500, 750, or 1000 sessions.</i>                                       |
| ASA 5545-X                          | Base License: 2 sessions.<br><i>Optional licenses: 24, 50, 100, 250, 500, 750, 1000, or 2000 sessions.</i>                                 |
| ASA 5555-X                          | Base License: 2 sessions.<br><i>Optional licenses: 24, 50, 100, 250, 500, 750, 1000, 2000, or 3000 sessions.</i>                           |
| ASA 5585-X with SSP-10              | Base License: 2 sessions.<br><i>Optional licenses: 24, 50, 100, 250, 500, 750, 1000, 2000, or 3000 sessions.</i>                           |
| ASA 5585-X with SSP-20, -40, or -60 | Base License: 2 sessions.<br><i>Optional licenses: 24, 50, 100, 250, 500, 750, 1000, 2000, 3000, 5000, or 10,000 sessions.<sup>2</sup></i> |

- The following applications use TLS proxy sessions for their connections. Each TLS proxy session used by these applications (and only these applications) is counted against the UC license limit:
  - Phone Proxy
  - Presence Federation Proxy
  - Encrypted Voice Inspection

Other applications that use TLS proxy sessions do not count towards the UC limit, for example, Mobility Advantage Proxy (which does not require a license) and IME (which requires a separate IME license).

Some UC applications might use multiple sessions for a connection. For example, if you configure a phone with a primary and backup Cisco Unified Communications Manager, there are 2 TLS proxy connections, so 2 UC Proxy sessions are used.

You independently set the TLS proxy limit using the **tls-proxy maximum-sessions** command. To view the limits of your model, enter the **tls-proxy maximum-sessions ?** command. When you apply a UC license that is higher than the default TLS proxy limit, the ASA automatically sets the TLS proxy limit to match the UC limit. The TLS proxy limit takes precedence over the UC license limit; if you set the TLS proxy limit to be less than the UC license, then you cannot use all of the sessions in your UC license.

**Note:** For license part numbers ending in “K8” (for example, licenses under 250 users), TLS proxy sessions are limited to 1000. For license part numbers ending in “K9” (for example, licenses 250 users or larger), the TLS proxy limit depends on the configuration, up to the model limit. K8 and K9 refer to whether the license is restricted for export: K8 is unrestricted, and K9 is restricted.

**Note:** If you clear the configuration (using the **clear configure all** command, for example), then the TLS proxy limit is set to the default for your model; if this default is lower than the UC license limit, then you see an error message to use the **tls-proxy maximum-sessions** command to raise the limit again. If you use failover and enter the **write standby** command on the primary unit to force a configuration synchronization, the **clear configure all** command is generated on the secondary unit automatically, so you may see the warning message on the secondary unit. Because the configuration synchronization restores the TLS proxy limit set on the primary unit, you can ignore the warning.

You might also use SRTP encryption sessions for your connections:

- For K8 licenses, SRTP sessions are limited to 250.
- For K9 licenses, there is not limit.

**Note:** Only calls that require encryption/decryption for media are counted towards the SRTP limit; if passthrough is set for the call, even if both legs are SRTP, they do not count towards the limit.

- With the 10,000-session UC license, the total combined sessions can be 10,000, but the maximum number of Phone Proxy sessions is 5000.

Table 47-2 shows the default and maximum TLS session details by platform.

**Table 47-2** Default and Maximum TLS Sessions on the Security Appliance

| Security Appliance Platform | Default TLS Sessions | Maximum TLS Sessions |
|-----------------------------|----------------------|----------------------|
| ASA 5505                    | 10                   | 80                   |
| ASA 5510                    | 100                  | 200                  |
| ASA 5520                    | 300                  | 1200                 |
| ASA 5540                    | 1000                 | 4500                 |
| ASA 5550                    | 2000                 | 4500                 |
| ASA 5580                    | 4000                 | 13,000               |

The following table shows the Unified Communications Proxy license details by platform for intercompany media engine proxy:

**Note**

This feature is not available on No Payload Encryption models.

| Model            | License Requirement                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| All other models | <p>Intercompany Media Engine license.</p> <p>When you enable the Intercompany Media Engine (IME) license, you can use TLS proxy sessions up to the configured TLS proxy limit. If you also have a Unified Communications (UC) license installed that is higher than the default TLS proxy limit, then the ASA sets the limit to be the UC license limit plus an additional number of sessions depending on your model. You can manually configure the TLS proxy limit using the <b>tls-proxy maximum-sessions</b> command. To view the limits of your model, enter the <b>tls-proxy maximum-sessions ?</b> command. If you also install the UC license, then the TLS proxy sessions available for UC are also available for IME sessions. For example, if the configured limit is 1000 TLS proxy sessions, and you purchase a 750-session UC license, then the first 250 IME sessions do not affect the sessions available for UC. If you need more than 250 sessions for IME, then the remaining 750 sessions of the platform limit are used on a first-come, first-served basis by UC and IME.</p> <ul style="list-style-type: none"> <li>• For a license part number ending in “K8”, TLS proxy sessions are limited to 1000.</li> <li>• For a license part number ending in “K9”, the TLS proxy limit depends on your configuration and the platform model.</li> </ul> <p><b>Note</b> K8 and K9 refer to whether the license is restricted for export: K8 is unrestricted, and K9 is restricted.</p> <p>You might also use SRTP encryption sessions for your connections:</p> <ul style="list-style-type: none"> <li>• For a K8 license, SRTP sessions are limited to 250.</li> <li>• For a K9 license, there is no limit.</li> </ul> <p><b>Note</b> Only calls that require encryption/decryption for media are counted toward the SRTP limit; if passthrough is set for the call, even if both legs are SRTP, they do not count toward the limit.</p> |

**Note**

For more information about licensing, see [Chapter 3, “Managing Feature Licenses.”](#)





## CHAPTER 48

# Configuring the Cisco Phone Proxy

---

This chapter describes how to configure the adaptive security appliance for Cisco Phone Proxy feature.

This chapter includes the following sections:

- [Information About the Cisco Phone Proxy, page 48-1](#)
- [Licensing Requirements for the Phone Proxy, page 48-4](#)
- [Prerequisites for the Phone Proxy, page 48-6](#)
- [Phone Proxy Guidelines and Limitations, page 48-12](#)
- [Configuring the Phone Proxy, page 48-14](#)
- [Troubleshooting the Phone Proxy, page 48-27](#)
- [Configuration Examples for the Phone Proxy, page 48-43](#)
- [Feature History for the Phone Proxy, page 48-53](#)


## Information About the Cisco Phone Proxy

The Cisco Phone Proxy on the ASA bridges IP telephony between the corporate IP telephony network and the Internet in a secure manner by forcing data from remote phones on an untrusted network to be encrypted.

## Phone Proxy Functionality

Telecommuters can connect their IP phones to the corporate IP telephony network over the Internet securely via the phone proxy without the need to connect over a VPN tunnel as illustrated by [Figure 48-1](#).

Figure 48-1 Phone Proxy Secure Deployment

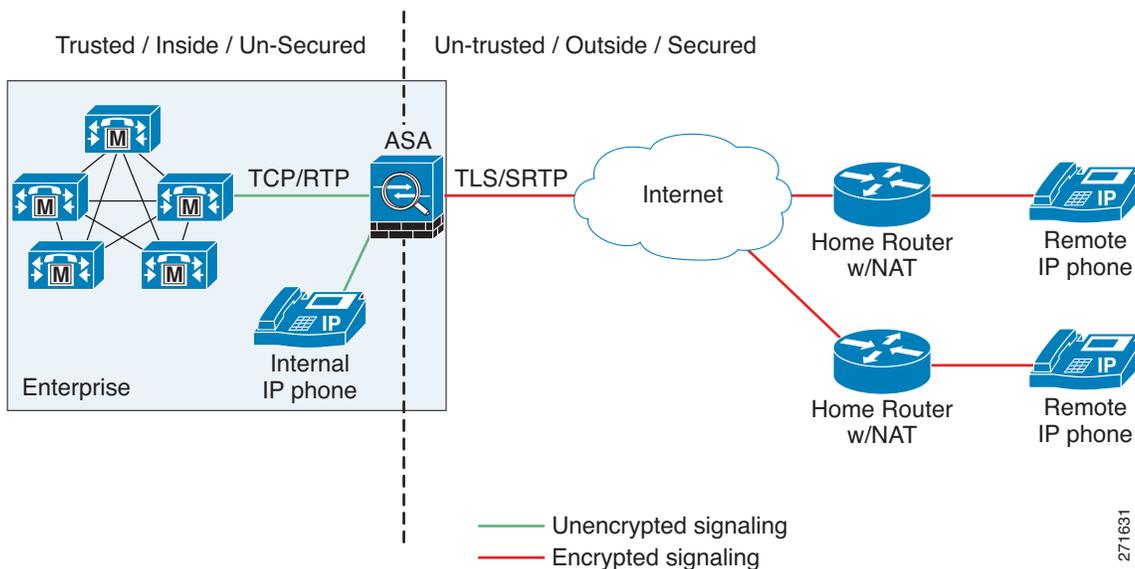

The phone proxy supports a Cisco UCM cluster in mixed mode or nonsecure mode. Regardless of the cluster mode, the remote phones that are capable of encryption are always forced to be in encrypted mode. TLS (signaling) and SRTP (media) are always terminated on the ASA. The ASA can also perform NAT, open pinholes for the media, and apply inspection policies for the SCCP and SIP protocols. In a nonsecure cluster mode or a mixed mode where the phones are configured as nonsecure, the phone proxy behaves in the following ways:

- The TLS connections from the phones are terminated on the ASA and a TCP connection is initiated to the Cisco UCM.
- SRTP sent from external IP phones to the internal network IP phone via the ASA is converted to RTP.

In a mixed mode cluster where the internal IP phones are configured as authenticated, the TLS connection is not converted to TCP to the Cisco UCM but the SRTP is converted to RTP.

In a mixed mode cluster where the internal IP phone is configured as encrypted, the TLS connection remains a TLS connection to the Cisco UCM and the SRTP from the remote phone remains SRTP to the internal IP phone.

Since the main purpose of the phone proxy is to make the phone behave securely while making calls to a nonsecure cluster, the phone proxy performs the following major functions:

- Creates the certificate trust list (CTL) file, which is used to perform certificate based authentication with remote phones.
- Modifies the IP phone configuration file when it is requested via TFTP, changes security fields from nonsecure to secure, and signs all files sent to the phone. These modifications secure remote phones by forcing the phones to perform encrypted signaling and media.
- Terminates TLS signaling from the phone and initiates TCP or TLS to Cisco UCM
- Inserts itself into the media path by modifying the Skinny and SIP signaling messages.
- Terminates SRTP and initiates RTP/SRTP to the called party.

271631

**Note**

As an alternative to authenticating remote IP phones through the TLS handshake, you can configure authentication via LSC provisioning. With LSC provisioning you create a password for each remote IP phone user and each user enters the password on the remote IP phones to retrieve the LSC.

Because using LSC provisioning to authenticate remote IP phones requires the IP phones first register in nonsecure mode, Cisco recommends LSC provisioning be done inside the corporate network before giving the IP phones to end-users. Otherwise, having the IP phones register in nonsecure mode requires the Administrator to open the nonsecure signaling port for SIP and SCCP on the ASA.

See “[Example 5: LSC Provisioning in Mixed-mode Cisco UCM cluster; Cisco UCM and TFTP Server on Publisher, page 48-49](#)”. See also the Cisco Unified Communications Manager Security Guide for information on Using the Certificate Authority Proxy Function (CAPF) to install a locally significant certificate (LSC).

## Supported Cisco UCM and IP Phones for the Phone Proxy

### Cisco Unified Communications Manager

The following release of the Cisco Unified Communications Manager are supported with the phone proxy:

- Cisco Unified CallManager Version 4.x
- Cisco Unified CallManager Version 5.0
- Cisco Unified CallManager Version 5.1
- Cisco Unified Communications Manager 6.1
- Cisco Unified Communications Manager 7.0

### Cisco Unified IP Phones

The phone proxy supports these IP phone features:

- Enterprise features like conference calls on remote phones connected through the phone proxy
- XML services

The following IP phones in the Cisco Unified IP Phones 7900 Series are supported with the phone proxy:

- Cisco Unified IP Phone 7975
- Cisco Unified IP Phone 7971
- Cisco Unified IP Phone 7970
- Cisco Unified IP Phone 7965
- Cisco Unified IP Phone 7962
- Cisco Unified IP Phone 7961
- Cisco Unified IP Phone 7961G-GE
- Cisco Unified IP Phone 7960 (SCCP protocol support only)
- Cisco Unified IP Phone 7945
- Cisco Unified IP Phone 7942
- Cisco Unified IP Phone 7941

- Cisco Unified IP Phone 7941G-GE
- Cisco Unified IP Phone 7940 (SCCP protocol support only)
- Cisco Unified Wireless IP Phone 7921
- Cisco Unified Wireless IP Phone 7925



**Note** To support Cisco Unified Wireless IP Phone 7925, you must also configure MIC or LSC on the IP phone so that it properly works with the phone proxy.

- CIPC for softphones ( CIPC versions with Authenticated mode only)



**Note** The Cisco IP Communicator is supported with the phone proxy VLAN Traversal in authenticated TLS mode. We do not recommend it for remote access because SRTP/TLS is not supported currently on the Cisco IP Communicator.



**Note** The ASA supports inspection of traffic from Cisco IP Phones running SCCP protocol version 19 and earlier.

## Licensing Requirements for the Phone Proxy

The Cisco Phone Proxy feature supported by the ASA require a Unified Communications Proxy license. The following table shows the Unified Communications Proxy license details by platform:



**Note** This feature is not available on No Payload Encryption models.

| Model    | License Requirement <sup>1</sup>                                                                                                           |
|----------|--------------------------------------------------------------------------------------------------------------------------------------------|
| ASA 5505 | Base License and Security Plus License: 2 sessions.<br><i>Optional license: 24 sessions.</i>                                               |
| ASA 5510 | Base License and Security Plus License: 2 sessions.<br><i>Optional licenses: 24, 50, or 100 sessions.</i>                                  |
| ASA 5520 | Base License: 2 sessions.<br><i>Optional licenses: 24, 50, 100, 250, 500, 750, or 1000 sessions.</i>                                       |
| ASA 5540 | Base License: 2 sessions.<br><i>Optional licenses: 24, 50, 100, 250, 500, 750, 1000, or 2000 sessions.</i>                                 |
| ASA 5550 | Base License: 2 sessions.<br><i>Optional licenses: 24, 50, 100, 250, 500, 750, 1000, 2000, or 3000 sessions.</i>                           |
| ASA 5580 | Base License: 2 sessions.<br><i>Optional licenses: 24, 50, 100, 250, 500, 750, 1000, 2000, 3000, 5000, or 10,000 sessions.<sup>2</sup></i> |

| Model                               | License Requirement <sup>1</sup>                                                                                                           |
|-------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------|
| ASA 5512-X                          | Base License: 2 sessions.<br><i>Optional licenses: 24, 50, 100, 250, or 500 sessions.</i>                                                  |
| ASA 5515-X                          | Base License: 2 sessions.<br><i>Optional licenses: 24, 50, 100, 250, or 500 sessions.</i>                                                  |
| ASA 5525-X                          | Base License: 2 sessions.<br><i>Optional licenses: 24, 50, 100, 250, 500, 750, or 1000 sessions.</i>                                       |
| ASA 5545-X                          | Base License: 2 sessions.<br><i>Optional licenses: 24, 50, 100, 250, 500, 750, 1000, or 2000 sessions.</i>                                 |
| ASA 5555-X                          | Base License: 2 sessions.<br><i>Optional licenses: 24, 50, 100, 250, 500, 750, 1000, 2000, or 3000 sessions.</i>                           |
| ASA 5585-X with SSP-10              | Base License: 2 sessions.<br><i>Optional licenses: 24, 50, 100, 250, 500, 750, 1000, 2000, or 3000 sessions.</i>                           |
| ASA 5585-X with SSP-20, -40, or -60 | Base License: 2 sessions.<br><i>Optional licenses: 24, 50, 100, 250, 500, 750, 1000, 2000, 3000, 5000, or 10,000 sessions.<sup>2</sup></i> |

- The following applications use TLS proxy sessions for their connections. Each TLS proxy session used by these applications (and only these applications) is counted against the UC license limit:
  - Phone Proxy
  - Presence Federation Proxy
  - Encrypted Voice Inspection

Other applications that use TLS proxy sessions do not count towards the UC limit, for example, Mobility Advantage Proxy (which does not require a license) and IME (which requires a separate IME license).

Some UC applications might use multiple sessions for a connection. For example, if you configure a phone with a primary and backup Cisco Unified Communications Manager, there are 2 TLS proxy connections, so 2 UC Proxy sessions are used.

You independently set the TLS proxy limit using the **tls-proxy maximum-sessions** command. To view the limits of your model, enter the **tls-proxy maximum-sessions ?** command. When you apply a UC license that is higher than the default TLS proxy limit, the ASA automatically sets the TLS proxy limit to match the UC limit. The TLS proxy limit takes precedence over the UC license limit; if you set the TLS proxy limit to be less than the UC license, then you cannot use all of the sessions in your UC license.

**Note:** For license part numbers ending in “K8” (for example, licenses under 250 users), TLS proxy sessions are limited to 1000. For license part numbers ending in “K9” (for example, licenses 250 users or larger), the TLS proxy limit depends on the configuration, up to the model limit. K8 and K9 refer to whether the license is restricted for export: K8 is unrestricted, and K9 is restricted.

**Note:** If you clear the configuration (using the **clear configure all** command, for example), then the TLS proxy limit is set to the default for your model; if this default is lower than the UC license limit, then you see an error message to use the **tls-proxy maximum-sessions** command to raise the limit again. If you use failover and enter the **write standby** command on the primary unit to force a configuration synchronization, the **clear configure all** command is generated on the secondary unit automatically, so you may see the warning message on the secondary unit. Because the configuration synchronization restores the TLS proxy limit set on the primary unit, you can ignore the warning.

You might also use SRTP encryption sessions for your connections:

- For K8 licenses, SRTP sessions are limited to 250.
- For K9 licenses, there is not limit.

**Note:** Only calls that require encryption/decryption for media are counted towards the SRTP limit; if passthrough is set for the call, even if both legs are SRTP, they do not count towards the limit.

- With the 10,000-session UC license, the total combined sessions can be 10,000, but the maximum number of Phone Proxy sessions is 5000.

For more information about licensing, see [Chapter 3, “Managing Feature Licenses.”](#)

# Prerequisites for the Phone Proxy

This section contains the following topics:

- [Media Termination Instance Prerequisites, page 48-6](#)
- [Certificates from the Cisco UCM, page 48-7](#)
- [DNS Lookup Prerequisites, page 48-7](#)
- [Cisco Unified Communications Manager Prerequisites, page 48-7](#)
- [Access List Rules, page 48-7](#)
- [NAT and PAT Prerequisites, page 48-8](#)
- [Prerequisites for IP Phones on Multiple Interfaces, page 48-9](#)
- [7960 and 7940 IP Phones Support, page 48-9](#)
- [Cisco IP Communicator Prerequisites, page 48-10](#)
- [Prerequisites for Rate Limiting TFTP Requests, page 48-11](#)
- [About ICMP Traffic Destined for the Media Termination Address, page 48-11](#)
- [End-User Phone Provisioning, page 48-12](#)

## Media Termination Instance Prerequisites

The ASA must have a media termination instance that meets the following criteria:

- You must configure one media termination for each phone proxy on the ASA. Multiple media termination instances on the ASA are not supported.
- For the media termination instance, you can configure a global media-termination address for all interfaces or configure a media-termination address for different interfaces. However, you cannot use a global media-termination address and media-termination addresses configured for each interface at the same time.
- If you configure a media termination address for multiple interfaces, you must configure an address on each interface that the ASA uses when communicating with IP phones.

For example, if you had three interfaces on the ASA (one internal interface and two external interfaces) and only one of the external interfaces were used to communicate with IP phones, you would configure two media termination addresses: one on the internal interface and one on the external interface that communicated with the IP phones.

- Only one media-termination address can be configured per interface.
- The IP addresses are publicly routable addresses that are unused IP addresses within the address range on that interface.
- The IP address on an interface cannot be the same address as that interface on the ASA.
- The IP addresses cannot overlap with existing static NAT pools or NAT rules.
- The IP addresses cannot be the same as the Cisco UCM or TFTP server IP address.
- For IP phones behind a router or gateway, you must also meet this prerequisite. On the router or gateway, add routes to the media termination address on the ASA interface that the IP phones communicate with so that the phone can reach the media termination address.

## Certificates from the Cisco UCM

Import the following certificates which are stored on the Cisco UCM. These certificates are required by the ASA for the phone proxy.

- Cisco\_Manufacturing\_CA
- CAP-RTP-001
- CAP-RTP-002
- CAPF certificate (Optional)

If LSC provisioning is required or you have LSC enabled IP phones, you must import the CAPF certificate from the Cisco UCM. If the Cisco UCM has more than one CAPF certificate, you must import all of them to the ASA.

**Note**

You can configure LSC provisioning for additional end-user authentication. See the Cisco Unified Communications Manager configuration guide for information.

See [Importing Certificates from the Cisco UCM, page 48-15](#). For example, the CA Manufacturer certificate is required by the phone proxy to validate the IP phone certificate.

## DNS Lookup Prerequisites

- If you have an fully qualified domain name (FQDN) configured for the Cisco UCM rather than an IP address, you must configure and enable DNS lookup on the ASA. For information about the **dns domain-lookup** command and how to use it to configure DNS lookup, see command reference.
- After configuring the DNS lookup, make sure that the ASA can ping the Cisco UCM with the configured FQDN.
- You must configure DNS lookup when you have a CAPF service enabled and the Cisco UCM is not running on the Publisher but the Publisher is configured with a FQDN instead of an IP address.

## Cisco Unified Communications Manager Prerequisites

- The TFTP server must reside on the same interface as the Cisco UCM.
- The Cisco UCM can be on a private network on the inside but you need to have a static mapping for the Cisco UCM on the ASA to a public routable address.
- If NAT is required for Cisco UCM, it must be configured on the ASA, not on the existing firewall.

## Access List Rules

If the phone proxy is deployed behind an existing firewall, access-list rules to permit signaling, TFTP requests, and media traffic to the phone proxy must be configured.

If NAT is configured for the TFTP server or Cisco UCMs, the translated “global” address must be used in the access lists.

[Table 48-1](#) lists the ports that are required to be configured on the existing firewall:

**Table 48-1 Port Configuration Requirements**

| Address                     | Port       | Protocol | Description                             |
|-----------------------------|------------|----------|-----------------------------------------|
| Media Termination           | 1024-65535 | UDP      | Allow incoming SRTP                     |
| TFTP Server                 | 69         | UDP      | Allow incoming TFTP                     |
| Cisco UCM                   | 2443       | TCP      | Allow incoming secure SCCP              |
| Cisco UCM                   | 5061       | TCP      | Allow incoming secure SIP               |
| CAPF Service (on Cisco UCM) | 3804       | TCP      | Allow CAPF service for LSC provisioning |

**Note**

All these ports are configurable on the Cisco UCM, except for TFTP. These are the default values and should be modified if they are modified on the Cisco UCM. For example, 3804 is the default port for the CAPF Service. This default value should be modified if it is modified on the Cisco UCM.

## NAT and PAT Prerequisites

### NAT Prerequisites

- If NAT is configured for the TFTP server, the NAT configuration must be configured prior to configuring the **tftp-server** command under the phone proxy.
- If NAT is configured for the TFTP server or Cisco UCMs, the translated “global” address must be used in the access lists.

### PAT Prerequisites

- When the Skinny inspection global port is configured to use a non-default port, then you must configure the nonsecure port as the `global_sccp_port+443`.

Therefore, if `global_sccp_port` is 7000, then the global secure SCCP port is 7443. Reconfiguring the port might be necessary when the phone proxy deployment has more than one Cisco UCM and they must share the interface IP address or a global IP address.

```
/* use the default ports for the first CUCM */
object network obj-10.0.0.1-01
 host 10.0.0.1
 nat (inside,outside) static interface service tcp 2000 2000
object network obj-10.0.0.1-02
 host 10.0.0.1
 nat (inside,outside) static interface service tcp 2443 2443
/* use non-default ports for the 2nd CUCM */
object network obj-10.0.0.2-01
 host 10.0.0.2
 nat (inside,outside) static interface service tcp 2000 7000
object network obj-10.0.0.2-02
 host 10.0.0.2
 nat (inside,outside) static interface service tcp 2443 7443
```



**Note** Both PAT configurations—for the nonsecure and secure ports—must be configured.

- When the IP phones must contact the CAPF on the Cisco UCM and the Cisco UCM is configured with static PAT (LCS provisioning is required), you must configure static PAT for the default CAPF port 3804.

## Prerequisites for IP Phones on Multiple Interfaces

When IP phones reside on multiple interfaces, the phone proxy configuration must have the correct IP address set for the Cisco UCM in the CTL file.

See the following example topology for information about how to correctly set the IP address:

```
phones --- (dmz)-----|
 |----- ASA PP --- (outside Internet) --- phones
phones --- (inside)--|
```

In this example topology, the following IP address are set:

- Cisco UCM on the inside interface is set to 10.0.0.5
- The DMZ network is 192.168.1.0/24
- The inside network is 10.0.0.0/24

The Cisco UCM is mapped with different global IP addresses from DMZ > outside and inside interfaces > outside interface.

In the CTL file, the Cisco UCM must have two entries because of the two different IP addresses. For example, if the static statements for the Cisco UCM are as follows:

```
object network obj-10.0.0.5-01
 host 10.0.0.5
 nat (inside,outside) static 209.165.202.129
object network obj-10.0.0.5-02
 host 10.0.0.5
 nat (inside,dmz) static 198.168.1.2
```

There must be two CTL file record entries for the Cisco UCM:

```
record-entry cucm trustpoint cucm_in_to_out address 209.165.202.129
record-entry cucm trustpoint cucm_in_to_dmz address 192.168.1.2
```

## 7960 and 7940 IP Phones Support

- An LSC must be installed on these IP phones because they do not come pre installed with a MIC. Install the LSC on each phone before using them with the phone proxy to avoid opening the nonsecure SCCP port for the IP phones to register in nonsecure mode with the Cisco UCM.

See the following document for the steps to install an LSC on IP phones:

[http://www.cisco.com/en/US/docs/voice\\_ip\\_comm/cucm/security/7\\_0\\_1/secugd/secucapf.html#wp1093518](http://www.cisco.com/en/US/docs/voice_ip_comm/cucm/security/7_0_1/secugd/secucapf.html#wp1093518)



**Note** If an IP phone already has an LSC installed on it from a different Cisco UCM cluster, delete the LSC from the different cluster and install an LSC from the current Cisco UCM cluster.




---

**Note** You can configure LSC provisioning for additional end-user authentication. See the Cisco Unified Communications Manager configuration guide for information.

---

- The CAPF certificate must be imported onto the ASA.
- The CTL file created on the ASA must be created with a CAPF record-entry.
- The phone must be configured to use only the SCCP protocol because the SIP protocol does not support encryption on these IP phones.
- If LSC provisioning is done via the phone proxy, you must add an ACL to allow the IP phones to register with the Cisco UCM on the nonsecure port 2000.

## Cisco IP Communicator Prerequisites

To configure Cisco IP Communicator (CIPC) with the phone proxy, you must meet the following prerequisites:

- Include the **cipc security-mode authenticated** command under the **phone-proxy** command when configuring the phone proxy instance.
- Create an ACL to allow CIPC to register with the Cisco UCM in nonsecure mode.
- Configure null-sha1 as one of the SSL encryption ciphers.

Current versions of Cisco IP Communicator (CIPC) support authenticated mode and perform TLS signaling but not voice encryption. Therefore, you must include the following command when configuring the phone proxy instance:

### **cipc security-mode authenticated**

Because CIPC requires an LSC to perform the TLS handshake, CIPC needs to register with the Cisco UCM in nonsecure mode using cleartext signaling. To allow the CIPC to register, create an ACL that allows the CIPC to connect to the Cisco UCM on the nonsecure SIP/SCCP signalling ports (5060/2000).




---

**Note** You can configure LSC provisioning for additional end-user authentication. See the Cisco Unified Communications Manager configuration guide for information.

---

CIPC uses a different cipher when doing the TLS handshake and requires the null-sha1 cipher and SSL encryption be configured. To add the null-sha1 cipher, use the show run all ssl command to see the output for the ssl encryption command and add null-sha1 to the end of the SSL encryption list.




---

**Note** When used with CIPC, the phone proxy does not support end-users resetting their device name in CIPC (Preferences > Network tab > Use this Device Name field) or Administrators resetting the device name in Cisco Unified CM Administration console (Device menu > Phone Configuration > Device Name field). To function with the phone proxy, the CIPC configuration file must be in the format: SEP<mac\_address>.cnf.xml. If the device name does not follow this format (SEP<mac\_address>), CIPC cannot retrieve its configuration file from Cisco UMC via the phone proxy and CIPC will not function.

---

## Prerequisites for Rate Limiting TFTP Requests

In a remote access scenario, we recommend that you configure rate limiting of TFTP requests because any IP phone connecting through the Internet is allowed to send TFTP requests to the TFTP server.

To configure rate limiting of TFTP requests, configure the **police** command in the Modular Policy Framework. See the command reference for information about using the **police** command.

Policing is a way of ensuring that no traffic exceeds the maximum rate (in bits/second) that you configure, thus ensuring that no one traffic flow can take over the entire resource. When traffic exceeds the maximum rate, the ASA drops the excess traffic. Policing also sets the largest single burst of traffic allowed.

### Rate Limiting Configuration Example

The following example describes how you configure rate limiting for TFTP requests by using the **police** command and the Modular Policy Framework.

Begin by determining the conformance rate that is required for the phone proxy. To determine the conformance rate, use the following formula:

$$X * Y * 8$$

Where

X = requests per second

Y = size of each packet, which includes the L2, L3, and L4 plus the payload

Therefore, if a rate of 300 TFTP requests/second is required, then the conformance rate would be calculated as follows:

$$300 \text{ requests/second} * 80 \text{ bytes} * 8 = 192000$$

The example configuration below shows how the calculated conformance rate is used with the **police** command:

```
access-list tftp extended permit udp any host 192.168.0.1 eq tftp

class-map tftpclass
 match access-list tftp

policy-map tftpmap
 class tftpclass
 police output 192000

service-policy tftpmap interface inside
```

### About ICMP Traffic Destined for the Media Termination Address

To control which hosts can ping the media termination address, use the **icmp** command and apply the access rule to the outside interface on the ASA.

Any rules for ICMP access applied to the outside interface apply to traffic destined for the media termination address.

For example, use the following command to deny ICMP pings from any host destined for the media termination address:

```
icmp deny any outside
```

## End-User Phone Provisioning

The phone proxy is a transparent proxy with respect to the TFTP and signaling transactions. If NAT is not configured for the Cisco UCM TFTP server, then the IP phones need to be configured with the Cisco UCM cluster TFTP server address.

If NAT is configured for the Cisco UCM TFTP server, then the Cisco UCM TFTP server global address is configured as the TFTP server address on the IP phones.

## Ways to Deploy IP Phones to End Users

In both options, deploying a remote IP phone behind a commercial Cable/DSL router with NAT capabilities is supported.

### Option 1 (Recommended)

Stage the IP phones at corporate headquarters before sending them to the end users:

- The phones register inside the network. IT ensures there are no issues with the phone configurations, image downloads, and registration.
- If Cisco UCM cluster was in mixed mode, the CTL file should be erased before sending the phone to the end user.

Advantages of this option are:

- Easier to troubleshoot and isolate problems with the network or phone proxy because you know whether the phone is registered and working with the Cisco UCM.
- Better user experience because the phone does not have to download firmware from over a broadband connection, which can be slow and require the user to wait for a longer time.

### Option 2

Send the IP phone to the end user. When using option 2, the user must be provided instructions to change the settings on phones with the appropriate Cisco UCM and TFTP server IP address.



#### Note

As an alternative to authenticating remote IP phones through the TLS handshake, you can configure authentication via LSC provisioning. With LSC provisioning you create a password for each remote IP phone user and each user enters the password on the remote IP phones to retrieve the LSC.

Because using LSC provisioning to authenticate remote IP phones requires the IP phones first register in nonsecure mode, Cisco recommends LSC provisioning be done inside the corporate network before giving the IP phones to end-users. Otherwise, having the IP phones register in nonsecure mode requires the Administrator to open the nonsecure signaling port for SIP and SCCP on the ASA.

See [“Example 5: LSC Provisioning in Mixed-mode Cisco UCM cluster; Cisco UCM and TFTP Server on Publisher, page 48-49”](#). See also the Cisco Unified Communications Manager Security Guide for information on Using the Certificate Authority Proxy Function (CAPF) to install a locally significant certificate (LSC).

## Phone Proxy Guidelines and Limitations

This section includes the following topics:

- [General Guidelines and Limitations, page 48-13](#)
- [Media Termination Address Guidelines and Limitations, page 48-14](#)

## General Guidelines and Limitations

The phone proxy has the following general limitations:

- Only one phone proxy instance can be configured on the ASA by using the **phone-proxy** command. See the command reference for information about the **phone-proxy** command. See also [Creating the Phone Proxy Instance, page 48-23](#).
- The phone proxy only supports one Cisco UCM cluster. See [Creating the CTL File, page 48-18](#) for the steps to configure the Cisco UCM cluster for the phone proxy.
- The phone proxy is not supported when the ASA is running in transparent mode or multiple context mode.
- When a remote IP phone calls an invalid internal or external extension, the phone proxy does not support playing the annunciator message from the Cisco UCM. Instead, the remote IP phone plays a fast busy signal instead of the annunciator message "Your call cannot be completed ..." However, when an internal IP phone dials in invalid extension, the annunciator messages plays "Your call cannot be completed ..."
- Packets from phones connecting to the phone proxy over a VPN tunnel are not inspected by the ASA inspection engines.
- The phone proxy does not support IP phones sending Real-Time Control Protocol (RTCP) packets through the ASA. Disable RTCP packets in the Cisco Unified CM Administration console from the Phone Configuration page. See your Cisco Unified Communications Manager (CallManager) documentation for information about setting this configuration option.
- When used with CIPC, the phone proxy does not support end-users resetting their device name in CIPC (Preferences > Network tab > Use this Device Name field) or Administrators resetting the device name in Cisco Unified CM Administration console (Device menu > Phone Configuration > Device Name field). To function with the phone proxy, the CIPC configuration file must be in the format: SEP<mac\_address>.cnf.xml. If the device name does not follow this format (SEP<mac\_address>), CIPC cannot retrieve its configuration file from Cisco UMC via the phone proxy and CIPC will not function.
- The phone proxy does not support IP phones sending SCCP video messages using Cisco VT Advantage because SCCP video messages do not support SRTP keys.
- For mixed-mode clusters, the phone proxy does not support the Cisco Unified Call Manager using TFTP to send encrypted configuration files to IP phones through the ASA.
- Multiple IP phones behind one NAT device must be configured to use the same security mode.

When the phone proxy is configured for a mixed-mode cluster and multiple IP phones are behind one NAT device and registering through the phone proxy, all the SIP and SCCP IP phones must be configured as authenticated or encrypted, or all as non-secure on the Unified Call Manager.

For example, if there are four IP phones behind one NAT device where two IP phones are configured using SIP and two IP phones are configured using SCCP, the following configurations on the Unified Call Manager are acceptable:

- Two SIP IP phones: one IP phone in authenticated mode and one in encrypted mode, both in authenticated mode, or both in encrypted mode

Two SCCP IP phones: one IP phone in authenticated mode and one in encrypted mode, both in authenticated mode, or both in encrypted mode

- Two SIP IP phones: both in non-secure mode  
Two SCCP IP phones: one IP phone in authenticated mode and one in encrypted mode, both in authenticated mode, both in encrypted mode
- Two SIP IP phones: one IP phone in authenticated mode and one in encrypted mode, both in authenticated mode, both in encrypted mode  
Two SCCP IP phones: both in non-secure mode

This limitation results from the way the application-redirect rules (rules that convert TLS to TCP) are created for the IP phones.

## Media Termination Address Guidelines and Limitations

The phone proxy has the following limitations relating to configuring the media-termination address:

- When configuring the media-termination address, the phone proxy does not support having internal IP phones (IP phones on the inside network) being on a different network interface from the Cisco UCM unless the IP phones are forced to use the non-secure Security mode.

When internal IP phones are on a different network interface than the Cisco UCM, the IP phones signalling sessions still go through ASA; however, the IP phone traffic does not go through the phone proxy. Therefore, Cisco recommends that you deploy internal IP phones on the same network interface as the Cisco UCM.

If the Cisco UCM and the internal IP phones must be on different network interfaces, you must add routes for the internal IP phones to access the network interface of the media-termination address where Cisco UCM resides.

When the phone proxy is configured to use a global media-termination address, all IP phones see the same global address, which is a public routable address.

- If you decide to configure a media-termination address on interfaces (rather than using a global interface), you must configure a media-termination address on at least two interfaces (the inside and an outside interface) before applying the phone-proxy service policy. Otherwise, you will receive an error message when enabling the Phone Proxy with SIP and Skinny Inspection.
- The phone proxy can use only one type of media termination instance at a time; for example, you can configure a global media-termination address for all interfaces or configure a media-termination address for different interfaces. However, you cannot use a global media-termination address and media-termination addresses configured for each interface at the same time.

## Configuring the Phone Proxy

This section includes the following topics:

- [Task Flow for Configuring the Phone Proxy in a Non-secure Cisco UCM Cluster, page 48-15](#)
- [Importing Certificates from the Cisco UCM, page 48-15](#)
- [Task Flow for Configuring the Phone Proxy in a Mixed-mode Cisco UCM Cluster, page 48-17](#)
- [Creating Trustpoints and Generating Certificates, page 48-17](#)
- [Creating the CTL File, page 48-18](#)
- [Using an Existing CTL File, page 48-20](#)
- [Creating the TLS Proxy Instance for a Non-secure Cisco UCM Cluster, page 48-20](#)

- [Creating the TLS Proxy for a Mixed-mode Cisco UCM Cluster, page 48-21](#)
- [Creating the Media Termination Instance, page 48-22](#)
- [Creating the Phone Proxy Instance, page 48-23](#)
- [Enabling the Phone Proxy with SIP and Skinny Inspection, page 48-25](#)
- [Configuring Linksys Routers with UDP Port Forwarding for the Phone Proxy, page 48-26](#)

## Task Flow for Configuring the Phone Proxy in a Non-secure Cisco UCM Cluster

Follow these tasks to configure the phone proxy in a Non-secure Cisco UCM Cluster:

- 
- Step 1** Create trustpoints and generate certificates for each entity in the network (Cisco UCM, Cisco UCM and TFTP, TFTP server, CAPF) that the IP phone must trust. The certificates are used in creating the CTL file. See [Creating Trustpoints and Generating Certificates, page 48-17](#).



**Note** Before you create the trustpoints and generate certificates, you must have imported the required certificates, which are stored on the Cisco UCM. See [Certificates from the Cisco UCM, page 48-7](#) and [Importing Certificates from the Cisco UCM, page 48-15](#)

---

- Step 2** Create the CTL file for the phone proxy. See [Creating the CTL File, page 48-18](#).
- Step 3** Create the TLS proxy instance. See [Creating the TLS Proxy Instance for a Non-secure Cisco UCM Cluster, page 48-20](#).
- Step 4** Create the media termination instance for the phone proxy. See [Creating the Media Termination Instance, page 48-22](#).
- Step 5** Create the phone proxy instance. See [Creating the Phone Proxy Instance, page 48-23](#).
- Step 6** Enable the phone proxy y with SIP and Skinny inspection. See [Enabling the Phone Proxy with SIP and Skinny Inspection, page 48-25](#).
- 

## Importing Certificates from the Cisco UCM

For the TLS proxy used by the phone proxy to complete the TLS handshake successfully, it needs to verify the certificates from the IP phone (and the Cisco UCM if doing TLS with Cisco UCM). To validate the IP phone certificate, we need the CA Manufacturer certificate which is stored on the Cisco UCM. Follow these steps to import the CA Manufacturer certificate to the ASA.

- 
- Step 1** Go to the Cisco UCM Operating System Administration web page.
- Step 2** Choose **Security > Certificate Management**.



**Note** Earlier versions of Cisco UCM have a different UI and way to locate the certificates. For example, in Cisco UCM version 4.x, certificates are located in the directory `C:\Program Files\Cisco\Certificates`. See your Cisco Unified Communications Manager (CallManager) documentation for information about locating certificates.

---

- Step 3** Click Find and it will display all the certificates.
- Step 4** Find the filename `Cisco_Manufacturing_CA`. This is the certificate need to verify the IP phone certificate. Click the .PEM file `Cisco_Manufacturing_CA.pem`. This will show you the certificate information and a dialog box that has the option to download the certificate.



**Note** If the certificate list contains more than one certificate with the filename `Cisco_Manufacturing_CA`, make you select the certificate `Cisco_Manufacturing_CA.pem`—the one with the .pem file extension.

- Step 5** Click Download and save the file as a text file.
- Step 6** On the ASA, create a trustpoint for the Cisco Manufacturing CA and enroll via terminal by entering the following commands. Enroll via terminal because you will paste the certificate you downloaded in [Step 4](#).

```
hostname(config)# crypto ca trustpoint trustpoint_name
hostname(config-ca-trustpoint)# enrollment terminal
```

- Step 7** Authenticate the trustpoint by entering the following command:

```
hostname(config)# crypto ca authenticate trustpoint
```

- Step 8** You are prompted to “Enter the base 64 encoded CA Certificate.” Copy the .PEM file you downloaded in [Step 4](#) and paste it at the command line. The file is already in base-64 encoding so no conversion is required. If the certificate is OK, you are prompted to accept it: “Do you accept this certificate? [yes/no].” Enter **yes**.



**Note** When you copy the certificate, make sure that you also copy also the lines with BEGIN and END.



**Tip** If the certificate is not ok, use the **debug crypto ca** command to show debug messages for PKI activity (used with CAs).

- Step 9** Repeat the [Step 1](#) through [Step 8](#) for the next certificate. [Table 48-2](#) shows the certificates that are required by the ASA.

**Table 48-2** Certificates Required by the Security Appliance for the Phone Proxy

| Certificate Name       | Required for...                                                                           |
|------------------------|-------------------------------------------------------------------------------------------|
| CallManager            | Authenticating the Cisco UCM during TLS handshake; only required for mixed-mode clusters. |
| Cisco_Manufacturing_CA | Authenticating IP phones with a Manufacturer Installed Certificate (MIC).                 |
| CAP-RTP-001            | Authenticating IP phones with a MIC.                                                      |
| CAP-RTP-002            | Authenticating IP phones with a MIC.                                                      |
| CAPF                   | Authenticating IP phones with an LSC.                                                     |

## Task Flow for Configuring the Phone Proxy in a Mixed-mode Cisco UCM Cluster

**Note**

For mixed-mode clusters, the phone proxy does not support the Cisco Unified Call Manager using TFTP to send encrypted configuration files to IP phones through the ASA.

Follow these tasks to configure the phone proxy in a Non-secure Cisco UCM Cluster:

- Step 1** Create trustpoints and generate certificates for each entity in the network (Cisco UCM, Cisco UCM and TFTP, TFTP server, CAPF) that the IP phone must trust. The certificates are used in creating the CTL file. See [Creating Trustpoints and Generating Certificates, page 48-17](#).

**Note**

Before you create the trustpoints and generate certificates, you must have imported the required certificates, which are stored on the Cisco UCM. See [Certificates from the Cisco UCM, page 48-7](#) and [Importing Certificates from the Cisco UCM, page 48-15](#)

- Step 2** Create the CTL file for the phone proxy. See [Creating the CTL File, page 48-18](#).

**Note**

When the phone proxy is being configured to run in mixed-mode clusters, you have the following option to use an existing CTL file to install the trustpoints. See [Using an Existing CTL File, page 48-20](#).

- Step 3** Create the TLS proxy instance. See [Creating the TLS Proxy for a Mixed-mode Cisco UCM Cluster, page 48-21](#).

- Step 4** Create the media termination instance for the phone proxy. See [Creating the Media Termination Instance, page 48-22](#).

- Step 5** Create the phone proxy instance. See [Creating the Phone Proxy Instance, page 48-23](#).

- Step 6** While configuring the phone proxy instance (in the Phone Proxy Configuration mode), enter the following command to configure the mode of the cluster to be mixed mode because the default is nonsecure:

```
hostname(config-phone-proxy)# cluster-mode mixed
```

- Step 7** Enable the phone proxy y with SIP and Skinny inspection. See [Enabling the Phone Proxy with SIP and Skinny Inspection, page 48-25](#).

## Creating Trustpoints and Generating Certificates

Create trustpoints and generate certificates for each entity in the network (Cisco UCM, Cisco UCM and TFTP, TFTP server, CAPF) that the IP phone must trust. The certificates are used in creating the CTL file.

You need to create trustpoints for each Cisco UCM (primary and secondary if a secondary Cisco UCM is used) and TFTP server in the network. The trustpoints need to be in the CTL file for the phones to trust the Cisco UCM.

**Prerequisites**

Import the required certificates, which are stored on the Cisco UCM. See [Certificates from the Cisco UCM, page 48-7](#) and [Importing Certificates from the Cisco UCM, page 48-15](#).

|               | Command                                                                                                                                                                      | Purpose                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|---------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Step 1</b> | hostname(config)# <b>crypto key generate rsa label</b><br><i>key-pair-label modulus size</i><br><b>Example:</b><br>crypto key generate rsa label cucmtftp_kp modulus<br>1024 | Creates a keypair that can be used for the trustpoints.                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Step 2</b> | hostname(config)# <b>crypto ca trustpoint</b><br><i>trustpoint_name</i><br><b>Example:</b><br>crypto ca trustpoint cucm_tftp_server                                          | Creates the trustpoints for each entity in the network (primary Cisco UCM, secondary Cisco UCM, and TFTP server).<br><br><b>Note</b> You are only required to create a separate trustpoint for the TFTP server when the TFTP server resides on a different server from the Cisco UCM. See <a href="#">Example 3: Mixed-mode Cisco UCM cluster, Cisco UCM and TFTP Server on Different Servers, page 48-46</a> for an example of this configuration. |
| <b>Step 3</b> | hostname(config-ca-trustpoint)# <b>enrollment self</b>                                                                                                                       | Generates a self-signed certificate.                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Step 4</b> | hostname(config-ca-trustpoint)# <b>keypair</b> <i>keyname</i><br><b>Example:</b><br>keypair cucmtftp_kp                                                                      | Specifies the keypair whose public key is being certified.                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Step 5</b> | hostname(config-ca-trustpoint)# <b>exit</b>                                                                                                                                  | Exits from the Configure Trustpoint mode.                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Step 6</b> | hostname(config)# <b>crypto ca enroll</b> <i>trustpoint</i><br><b>Example:</b><br>crypto ca enroll cucm_tftp_server                                                          | Requests the certificate from the CA server and causes the ASA to generate the certificate.<br><br>When prompted to include the device serial number in the subject name, type <b>Y</b> to include the serial number or type <b>N</b> to exclude it.<br><br>When prompted to generate the self-signed certificate, type <b>Y</b> .                                                                                                                  |

**What to Do Next**

Once you have created the trustpoints and generated the certificates, create the CTL file for the phone proxy. See [Creating the CTL File, page 48-18](#).

If you are configuring the phone proxy in a mixed-mode cluster, you can use an existing CTL file. See [Using an Existing CTL File, page 48-20](#).

## Creating the CTL File

Create the CTL file that will be presented to the IP phones during the TFTP requests.

**Prerequisites**

If you are using domain names for your Cisco UCM and TFTP server, you must configure DNS lookup on the ASA. Add an entry for each of the outside interfaces on the ASA into your DNS server, if such entries are not already present. Each ASA outside IP address should have a DNS entry associated with it for lookups. These DNS entries must also be enabled for Reverse Lookup.

Enable DNS lookups on your ASA with the **dns domain-lookup** *interface\_name* command (where the *interface\_name* specifies the interface that has a route to your DNS server). Additionally, define your DNS server IP address on the ASA; for example: `dns name-server 10.2.3.4` (IP address of your DNS server).



**Note** You can enter the **dns domain-lookup** command multiple times to enable DNS lookup on multiple interfaces. If you enter multiple commands, the ASA tries each interface in the order it appears in the configuration until it receives a response.

See the command reference for information about the **dns domain-lookup** command.

|               | Command                                                                                                                                                                                                                 | Purpose                                                                                                                                                                                                  |
|---------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Step 1</b> | hostname(config)# <b>ctl-file</b> <i>ctl_name</i><br><b>Example:</b><br>ctl-file myctl                                                                                                                                  | Creates the CTL file instance.                                                                                                                                                                           |
| <b>Step 2</b> | hostname(config-ctl-file)# <b>record-entry tftp trustpoint</b> <i>trustpoint_name</i> <b>address</b> <i>TFTP_IP_address</i><br><b>Example:</b><br>record-entry cucm-tftp trustpoint cucm_tftp_server address 10.10.0.26 | Creates the record entry for the TFTP server.<br><b>Note</b> Use the global or mapped IP address of the TFTP server or Cisco UCM if NAT is configured.                                                   |
| <b>Step 3</b> | hostname(config-ctl-file)# <b>record-entry cucm trustpoint</b> <i>trustpoint_name</i> <b>address</b> <i>IP_address</i><br><b>Example:</b><br>record-entry cucm trustpoint cucm_server address 10.10.0.26                | Creates the record entry for the each Cisco UCM (primary and secondary).<br><b>Note</b> Use the global or mapped IP address of the Cisco UCM.                                                            |
| <b>Step 4</b> | hostname(config-ctl-file)# <b>record-entry capf trustpoint</b> <i>trust_point</i> <b>address</b><br><b>Example:</b><br>record-entry capf trustpoint capf address 10.10.0.26                                             | Creates the record entry for CAPF.<br><b>Note</b> You only enter this command when LSC provisioning is required or you have LSC enabled IP phones.                                                       |
| <b>Step 5</b> | hostname(config-ctl-file)# <b>no shutdown</b>                                                                                                                                                                           | Creates the CTL file.<br>When the file is created, it creates an internal trustpoint used by the phone proxy to sign the TFTP files. The trustpoint is named <b>_internal_PP_ctl-instance_filename</b> . |
| <b>Step 6</b> | hostname(config)# <b>copy running-configuration startup-configuration</b>                                                                                                                                               | Saves the certificate configuration to Flash memory.                                                                                                                                                     |

**What to Do Next**

Once you have configured the CTL file for the phone proxy, create the TLS proxy instance. See [Creating the TLS Proxy Instance for a Non-secure Cisco UCM Cluster, page 48-20](#) to add the TLS proxy when configuring the phone proxy in a non-secure mode or see [Creating the TLS Proxy for a Mixed-mode Cisco UCM Cluster, page 48-21](#) if the phone proxy is running in a mixed-mode cluster.

## Using an Existing CTL File



### Note

Only when the phone proxy is running in mixed-mode clusters, you have the option to use an existing CTL file to install trustpoints.

If you have an existing CTL file that contains the correct IP addresses of the entities (namely, the IP address that the IP phones use for the Cisco UCM or TFTP servers), you can use it to create a new CTL file thereby using the existing CTL file to install the trustpoints for each entity in the network (Cisco UCM, Cisco UCM and TFTP, TFTP server, CAPF) that the IP phones must trust.

### Prerequisites

If a CTL file exists for the cluster, copy the CTL file to Flash memory. When you copy the CTL file to Flash memory, rename the file and do not name the file `CTLfile.tlv`.

If you are using domain names for your Cisco UCM and TFTP server, you must configure DNS lookup on the ASA. See the prerequisites for [Creating the CTL File, page 48-18](#).

|               | Command                                                                                                                                                             | Purpose                                                                                                                                                                                                                                               |
|---------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Step 1</b> | hostname(config)# <b>ctl-file</b> <i>ctl_name</i><br><b>Example:</b><br>ctl-file myctl                                                                              | Creates the CTL file instance.                                                                                                                                                                                                                        |
| <b>Step 2</b> | hostname(config-ctl-file)# <b>cluster-ctl-file</b> <i>filename_path</i><br><b>Example:</b><br>hostname(config-ctl-file)# cluster-ctl-file<br>disk0:/old_ctlfile.tlv | Uses the trustpoints that are already in the existing CTL file stored in Flash memory.<br><br>Where the existing CTL file was saved to Flash memory with a filename other than <code>CTLfile.tlv</code> ; for example, <code>old_ctlfile.tlv</code> . |

### What to Do Next

When using an existing CTL file to configure the phone proxy, you can add additional entries to the file as necessary. See [Creating the CTL File, page 48-18](#).

Once you have configured the CTL file for the phone proxy, create the TLS proxy instance. See [Creating the TLS Proxy Instance for a Non-secure Cisco UCM Cluster, page 48-20](#) to add the TLS proxy when configuring the phone proxy in a non-secure mode or see [Creating the TLS Proxy for a Mixed-mode Cisco UCM Cluster, page 48-21](#) if the phone proxy is running in a mixed-mode cluster.

## Creating the TLS Proxy Instance for a Non-secure Cisco UCM Cluster

Create the TLS proxy instance to handle the encrypted signaling.

|               | Command                                                                                                                                                | Purpose                                                                                                                   |
|---------------|--------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------|
| <b>Step 1</b> | hostname(config)# <b>tls-proxy</b> <i>proxy_name</i><br><b>Example:</b><br>tls-proxy mytls                                                             | Creates the TLS proxy instance.                                                                                           |
| <b>Step 2</b> | hostname(config-tlsp)# <b>server trust-point</b> <i>_internal_PP_ctl-instance_filename</i><br><b>Example:</b><br>server trust-point _internal_PP_myctl | Configures the server trustpoint and references the internal trustpoint named <i>_internal_PP_ctl-instance_filename</i> . |

**What to Do Next**

Once you have created the TLS proxy instance, create the phone proxy instance. See [Creating the Phone Proxy Instance](#), page 48-23.

**Creating the TLS Proxy for a Mixed-mode Cisco UCM Cluster**

For mixed mode clusters, there might be IP phones that are already configured as encrypted so it requires TLS to the Cisco UCM. You must configure the LDC issuer for the TLS proxy.

|               | Command                                                                                                                                                                                                                                                                                          | Purpose                                                                                                                                                                                                                                                                                                                                                                     |
|---------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Step 1</b> | hostname(config)# <b>crypto key generate rsa label</b><br><i>key-pair-label</i> <b>modulus</b> <i>size</i><br><b>Examples:</b><br>hostname(config)# crypto key generate rsa label<br>ldc_signer_key modulus 1024<br>hostname(config)# crypto key generate rsa label<br>phone_common modulus 1024 | Creates the necessary RSA key pairs.<br><br>Where the <i>key-pair-label</i> is the LDC signer key and the key for the IP phones.                                                                                                                                                                                                                                            |
| <b>Step 2</b> | hostname(config)# <b>crypto ca trustpoint</b><br><i>trustpoint_name</i><br><b>Example:</b><br>hostname(config)# crypto ca trustpoint ldc_server                                                                                                                                                  | Creates an internal local CA to sign the LDC for Cisco IP phones.<br><br>Where the <i>trustpoint_name</i> is for the LDC.                                                                                                                                                                                                                                                   |
| <b>Step 3</b> | hostname(config-ca-trustpoint)# <b>enrollment self</b>                                                                                                                                                                                                                                           | Generates a self-signed certificate.                                                                                                                                                                                                                                                                                                                                        |
| <b>Step 4</b> | hostname(config-ca-trustpoint)# <b>proxy-ldc-issuer</b>                                                                                                                                                                                                                                          | Defines the local CA role for the trustpoint to issue dynamic certificates for the TLS proxy.                                                                                                                                                                                                                                                                               |
| <b>Step 5</b> | hostname(config-ca-trustpoint)# <b>fqdn</b> <i>fqdn</i><br><b>Example:</b><br>hostname(config-ca-trustpoint)# fqdn<br>my_ldc_ca.example.com                                                                                                                                                      | Includes the indicated FQDN in the Subject Alternative Name extension of the certificate during enrollment.<br><br>Where the <i>fqdn</i> is for the LDC.                                                                                                                                                                                                                    |
| <b>Step 6</b> | hostname(config-ca-trustpoint)# <b>subject-name</b><br><i>X.500_name</i><br><b>Example:</b><br>hostname(config-ca-trustpoint)# subject-name<br>cn=FW_LDC_SIGNER_172_23_45_200                                                                                                                    | Includes the indicated subject DN in the certificate during enrollment<br><br>Where the <i>X.500_name</i> is for the LDC.<br><br>Use commas to separate attribute-value pairs. Insert quotation marks around any value that contains commas or spaces.<br><br>For example:<br><br>cn=crl,ou=certs,o="cisco systems, inc.",c=US<br><br>The maximum length is 500 characters. |
| <b>Step 7</b> | hostname(config-ca-trustpoint)# <b>keypair</b> <i>keypair</i><br><b>Example:</b><br>hostname(config-ca-trustpoint)# keypair<br>ldc_signer_key                                                                                                                                                    | Specifies the key pair whose public key is to be certified.<br><br>Where the <i>keypair</i> is for the LDC.                                                                                                                                                                                                                                                                 |
| <b>Step 8</b> | hostname(config)# <b>crypto ca enroll</b> <i>ldc_server</i><br><b>Example:</b><br>hostname(config)# crypto ca enroll ldc_server                                                                                                                                                                  | Starts the enrollment process with the CA.                                                                                                                                                                                                                                                                                                                                  |
| <b>Step 9</b> | hostname(config)# <b>tls-proxy</b> <i>proxy_name</i><br><b>Example:</b><br>tls-proxy mytls                                                                                                                                                                                                       | Creates the TLS proxy instance.                                                                                                                                                                                                                                                                                                                                             |

|         | Command                                                                                                                                                                              | Purpose                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|---------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Step 10 | hostname(config-tlsp)# <b>server trust-point</b> <i>_internal_PP_ctl-instance_filename</i><br><b>Example:</b><br>hostname(config-tlsp)# server trust-point <i>_internal_PP_myctl</i> | Configures the server trustpoint and references the internal trustpoint named <i>_internal_PP_ctl-instance_filename</i> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| Step 11 | hostname(config-tlsp)# <b>client ldc issuer</b> <i>ca_tp_name</i><br><b>Example:</b><br>client ldc issuer ldc_server                                                                 | Specifies the local CA trustpoint to issue client dynamic certificates.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| Step 12 | hostname(config-tlsp)# <b>client ldc keypair</b> <i>key_label</i><br><b>Example:</b><br>hostname(config-tlsp)# client ldc keypair <i>phone_common</i>                                | Specifies the RSA keypair to be used by client dynamic certificates.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| Step 13 | hostname(config-tlsp)# <b>client cipher-suite</b> <i>cipher-suite</i><br><b>Example:</b><br>hostname(config-tlsp)# client cipher-suite <i>aes128-sha1 aes256-sha1</i>                | Specifies the cipher suite.<br>Options include des-sha1, 3des-sha1, aes128-sha1, aes256-sha1, or null-sha1.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| Step 14 |                                                                                                                                                                                      | Exports the local CA certificate and installs it as a trusted certificate on the Cisco Unified Communications Manager server by performing one of the following actions.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| •       | hostname(config)# <b>crypto ca export trustpoint identity-certificate</b><br><b>Example:</b><br>hostname(config)# crypto ca export ldc_server identity-certificate                   | Exports the certificate if a trustpoint with proxy-ldc-issuer is used as the signer of the dynamic certificates.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| •       | hostname(config)# <b>show crypto ca server certificates</b>                                                                                                                          | Exports the certificate for the embedded local CA server LOCAL-CA-SERVER.<br>After exporting the certificate, you must save the output to a file and import it on the Cisco Unified Communications Manager. You can use the Display Certificates function in the Cisco Unified Communications Manager software to verify the installed certificate.<br>For information about performing these procedures, see the following URLs:<br><a href="http://www.cisco.com/en/US/docs/voice_ip_comm/cucm/cucos/5_0_4/iptpch6.html#wp1040848">http://www.cisco.com/en/US/docs/voice_ip_comm/cucm/cucos/5_0_4/iptpch6.html#wp1040848</a><br><a href="http://www.cisco.com/en/US/docs/voice_ip_comm/cucm/cucos/5_0_4/iptpch6.html#wp1040354">http://www.cisco.com/en/US/docs/voice_ip_comm/cucm/cucos/5_0_4/iptpch6.html#wp1040354</a> |

### What To Do Next

Once you have created the TLS proxy instance and installed the certificate on the Cisco Unified Communications Manager, create the phone proxy instance. See [Creating the Phone Proxy Instance](#), page 48-23.

## Creating the Media Termination Instance

Create the media termination instance that you will use in the phone proxy.

The media termination address you configure must meet the requirements as described in [Media Termination Instance Prerequisites](#), page 48-6.

|        | Command                                                                                                                                                                                                                                                                                                                 | Purpose                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|--------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Step 1 | <pre>hostname(config)# <b>media-termination</b> <i>instance_name</i></pre> <p><b>Example:</b></p> <pre>hostname(config)# <b>media-termination</b> <i>mediaterm1</i></pre>                                                                                                                                               | Creates the media termination instance that you attach to the phone proxy.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| Step 2 | <pre>hostname(config-media-termination)# <b>address</b><br/><i>ip_address</i> [<b>interface</b> <i>intf_name</i>]</pre> <p><b>Examples:</b></p> <pre>hostname(config-media-termination)# address<br/>192.0.2.25 interface inside<br/>hostname(config-media-termination)# address<br/>10.10.0.25 interface outside</pre> | <p>Configures the media-termination address used by the media termination instance. The phone proxy uses this address for SRTP and RTP.</p> <p>For the media termination instance, you can configure a global media-termination address for all interfaces or configure a media-termination address for different interfaces. However, you cannot use a global media-termination address and media-termination addresses configured for each interface at the same time.</p> <p>If you configure a media termination address for multiple interfaces, you must configure an address on each interface that the ASA uses when communicating with IP phones.</p> <p>The IP addresses are publicly routable addresses that are unused IP addresses within the address range on that interface.</p> <p>See <a href="#">Media Termination Instance Prerequisites</a>, page 48-6 for the complete list of prerequisites that you must follow when creating the media termination instance and configuring the media termination addresses.</p> |
| Step 3 | <p>(Optional)</p> <pre>hostname(config-media-termination)# <b>rtp-min-port</b><br/><i>port1</i> <b>rtp-max-port</b> <i>port2</i></pre> <p><b>Example:</b></p> <pre>hostname(config-media-termination)# rtp-min-port<br/>2001 rtp-maxport 32770</pre>                                                                    | <p>Specifies the minimum and maximum values for the RTP port range for the media termination instance.</p> <p>Where <i>port1</i> and <i>port2</i> can be a value from 1024 to 65535.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |

### What To Do Next

Once you have created the media termination instance, create the phone proxy instance. See [Creating the Phone Proxy Instance](#), page 48-23.

## Creating the Phone Proxy Instance

Create the phone proxy instance.

### Prerequisites

You must have already created the CTL file and TLS proxy instance for the phone proxy.

See [Creating the CTL File](#), page 48-18 and [Creating the TLS Proxy Instance for a Non-secure Cisco UCM Cluster](#), page 48-20

|               | Command                                                                                                                                                                                                                      | Purpose                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|---------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Step 1</b> | <pre>hostname(config)# <b>phone-proxy</b> <i>phone_proxy_name</i></pre> <p><b>Example:</b></p> <pre>hostname(config)# phone-proxy myphoneproxy</pre>                                                                         | <p>Creates the phone proxy instance.</p> <p>Only one phone proxy instance can be configured on the security appliance.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Step 2</b> | <pre>hostname(config-phone-proxy)# <b>media-termination</b> <i>instance_name</i></pre> <p><b>Examples:</b></p> <pre>hostname(config-phone-proxy)# media-termination my_mt</pre>                                              | <p>Specifies the media termination instance used by the phone proxy for SRTP and RTP.</p> <p><b>Note</b> You must create the media termination instance before you specify it in the phone proxy instance.</p> <p>See <a href="#">Creating the Media Termination Instance</a>, page 48-22 for the steps to create the media termination instance.</p>                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Step 3</b> | <pre>hostname(config-phone-proxy)# <b>tftp-server</b> <i>address ip_address interface interface</i></pre> <p><b>Example:</b></p> <pre>hostname(config-phone-proxy)# tftp-server address 192.0.2.101 interface inside</pre>   | <p>Creates the TFTP server using the actual internal address and specify the interface on which the TFTP server resides.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Step 4</b> | <pre>hostame(config-phone-proxy)# <b>tls-proxy</b> <i>proxy_name</i></pre> <p><b>Example:</b></p> <pre>hostame(config-phone-proxy)# tls-proxy mytls</pre>                                                                    | <p>Configures the TLS proxy instance that you have already created.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Step 5</b> | <pre>hostname(config-phone-proxy)# <b>ctl-file</b> <i>ctl_name</i></pre> <p><b>Example:</b></p> <pre>hostame(config-phone-proxy)# ctl-file myctl</pre>                                                                       | <p>Configures the CTL file instance that you have already created,</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Step 6</b> | <pre>hostname(config-phone-proxy)# <b>proxy-server</b> <i>address ip_address [listen_port] interface ifc</i></pre> <p><b>Example:</b></p> <pre>hostname(config-phone-proxy)# proxy-server 192.168.1.2 interface inside</pre> | <p>(Optional) If the operational environment has an external HTTP proxy to which the IP phones direct all HTTP request, configures a proxy server.</p> <p>You can configure only one proxy server while the phone proxy is in use.</p> <p>By default, the Phone URL Parameters configured under the Enterprise Parameters use an FQDN in the URLs. The parameters might need to be changed to use an IP address if the DNS lookup for the HTTP proxy does not resolve the FQDNs.</p> <p><b>Note</b> If the IP phones have already downloaded their configuration files after you have configured the proxy server, you must restart the IP phones so that they get the configuration file with the proxy server address in the file.</p> |

|               | Command                                                                | Purpose                                                                                                                                                                                                                                                                                                                                 |
|---------------|------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Step 7</b> | hostname(config-phone-proxy) # <b>cipc security-mode authenticated</b> | (Optional) Forces Cisco IP Communicator (CIPC) softphones to operate in authenticated mode when CIPC softphones are deployed in a voice and data VLAN scenario.<br><br>See <a href="#">Cisco IP Communicator Prerequisites, page 48-10</a> for all requirements for using the phone proxy with CIPC.                                    |
| <b>Step 8</b> | hostname(config-phone-proxy) # <b>no disable service-settings</b>      | (Optional) Preserve the settings configured on the Cisco UCM for each IP phone configured.<br><br>By default, the following settings are disabled on the IP phones: <ul style="list-style-type: none"> <li>• PC Port</li> <li>• Gratuitous ARP</li> <li>• Voice VLAN access</li> <li>• Web Access</li> <li>• Span to PC Port</li> </ul> |

#### What to Do Next

Once you have created the phone proxy instance, configuring SIP and Skinny for the phone proxy. See [Enabling the Phone Proxy with SIP and Skinny Inspection, page 48-25](#).

## Enabling the Phone Proxy with SIP and Skinny Inspection

Enables the phone proxy instance that you created to inspect SIP and Skinny protocol traffic.

#### Prerequisites

You must have already created the phone proxy instance. See [Creating the Phone Proxy Instance, page 48-23](#).

|               | Command                                                                                            | Purpose                                                                                                                                                                                                                                                     |
|---------------|----------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Step 1</b> | hostname(config) # <b>class-map</b> <i>class_map_name</i><br><b>Example:</b><br>class-map sec_sccp | Configures the secure Skinny class of traffic to inspect. Traffic between the Cisco Unified Communications Manager and Cisco IP Phones uses SCCP and is handled by SCCP inspection.<br><br>Where <i>class_map_name</i> is the name of the Skinny class map. |
| <b>Step 2</b> | hostname(config-cmap) # <b>match port tcp eq 2443</b>                                              | Matches the TCP port 2443 to which you want to apply actions for secure Skinny inspection.                                                                                                                                                                  |
| <b>Step 3</b> | hostname(config-cmap) # <b>exit</b>                                                                | Exits from the Class Map configuration mode.                                                                                                                                                                                                                |

|         | Command                                                                                                                                                        | Purpose                                                                                                                                                           |
|---------|----------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Step 4  | hostname(config)# <b>class-map</b> <i>class_map_name</i><br><b>Example:</b><br>class-map sec_sip                                                               | Configures the secure SIP class of traffic to inspect.<br>Where <i>class_map_name</i> is the name of the SIP class map.                                           |
| Step 5  | hostname(config-cmap)# <b>match port tcp eq 5061</b>                                                                                                           | Matches the TCP port 5061 to which you want to apply actions for secure SIP inspection                                                                            |
| Step 6  | hostname(config-cmap)# <b>exit</b>                                                                                                                             | Exits from the Class Map configuration mode.                                                                                                                      |
| Step 7  | hostname(config)# <b>policy-map</b> <i>name</i><br><b>Example:</b><br>policy-map pp_policy                                                                     | Configure the policy map and attach the action to the class of traffic.                                                                                           |
| Step 8  | hostname(config-pmap)# <b>class</b> <i>classmap-name</i><br><b>Example:</b><br>class sec_sccp                                                                  | Assigns a class map to the policy map so that you can assign actions to the class map traffic.<br>Where <i>classmap_name</i> is the name of the Skinny class map. |
| Step 9  | hostname(config-pmap-c)# <b>inspect skinny phone-proxy</b> <i>pp_name</i><br><b>Example:</b><br>inspect skinny phone-proxy mypp                                | Enables SCCP (Skinny) application inspection and enables the phone proxy for the specified inspection session.                                                    |
| Step 10 | hostname(config-pmap)# <b>class</b> <i>classmap-name</i><br><b>Example:</b><br>class sec_sip                                                                   | Assigns a class map to the policy map so that you can assign actions to the class map traffic.<br>Where <i>classmap_name</i> is the name of the SIP class map.    |
| Step 11 | hostname(config-pmap-c)# <b>inspect sip phone-proxy</b> <i>pp_name</i><br><b>Example:</b><br>inspect sip phone-proxy mypp                                      | Enables SIP application inspection and enables the phone proxy for the specified inspection session.                                                              |
| Step 12 | hostname(config-pmap-c)# <b>exit</b>                                                                                                                           | Exits from Policy Map configuration mode.                                                                                                                         |
| Step 13 | hostname(config)# <b>service-policy</b> <i>polycymap_name</i><br><b>interface</b> <i>intf</i><br><b>Example:</b><br>service-policy pp_policy interface outside | Enables the service policy on the outside interface.                                                                                                              |

## Configuring Linksys Routers with UDP Port Forwarding for the Phone Proxy

When IP phones are behind a NAT-capable router, the router can be configured to forward the UDP ports to the IP address of the IP phone. Specifically, configure the router for UDP port forwarding when an IP phone is failing during TFTP requests and the failure is due to the router dropping incoming TFTP data packets. Configure the router to enable UDP port forwarding on port 69 to the IP phone.

As an alternative of explicit UDP forwarding, some Cable/DSL routers require you to designate the IP phone as a DMZ host. For Cable/DSL routers, this host is a special host that receives all incoming connections from the public network.

When configuring the phone proxy, there is no functional difference between an IP phone that has UDP ports explicitly forwarded or an IP phone designated as a DMZ host. The choice is entirely dependent upon the capabilities and preference of the end user.

## Configuring Your Router

Your firewall/router needs to be configured to forward a range of UDP ports to the IP phone. This will allow the IP phone to receive audio when you make/receive calls.



### Note

Different Cable/DSL routers have different procedures for this configuration. Furthermore most NAT-capable routers will only allow a given port range to be forwarded to a single IP address

The configuration of each brand/model of firewall/router is different, but the task is the same. For specific instructions for your brand and model of router, please contact the manufacturer's website.

### Linksys Routers

- Step 1** From your web browser, connect to the router administrative web page. For Linksys, this is typically something like `http://192.168.1.1`.
- Step 2** Click Applications & Gaming or the Port Forwarding tab (whichever is present on your router).
- Step 3** Locate the table containing the port forwarding data and add an entry containing the following values:

**Table 48-3** Port Forwarding Values to Add to Router

| Application | Start | End   | Protocol | IP Address       | Enabled |
|-------------|-------|-------|----------|------------------|---------|
| IP phone    | 1024  | 65535 | UDP      | Phone IP address | Checked |
| TFTP        | 69    | 69    | UDP      | Phone IP address | Checked |

- Step 4** Click Save Settings. Port forwarding is configured.

## Troubleshooting the Phone Proxy

This section includes the following topics:

- [Debugging Information from the Security Appliance, page 48-27](#)
- [Debugging Information from IP Phones, page 48-31](#)
- [IP Phone Registration Failure, page 48-32](#)
- [Media Termination Address Errors, page 48-40](#)
- [Audio Problems with IP Phones, page 48-41](#)
- [Saving SAST Keys, page 48-41](#)

## Debugging Information from the Security Appliance

This section describes how to use the **debug**, **capture**, and **show** commands to obtain debugging information for the phone proxy. See the command reference for detailed information about the syntax for these commands.

[Table 48-4](#) lists the **debug** commands to use with the phone proxy.

**Table 48-4 Security Appliance Debug Commands to Use with the Phone Proxy**

| To                                                                                                                      | Use the Command                                      | Notes                                                                                                                                                                                                           |
|-------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| To show error and event messages for TLS proxy inspection.                                                              | <b>debug inspect tls-proxy [events   errors]</b>     | Use this command when your IP phone has successfully downloaded all TFTP files but is failing to complete the TLS handshake with the TLS proxy configured for the phone proxy.                                  |
| To show error and event messages of media sessions for SIP and Skinny inspections related to the phone proxy.           | <b>debug phone-proxy media [events   errors]</b>     | Use this command in conjunction with the <b>debug sip</b> command and the <b>debug skinny</b> command if your IP phone is experiencing call failures or audio problems.                                         |
| To show error and event messages of signaling sessions for SIP and Skinny inspections related to the phone proxy.       | <b>debug phone-proxy signaling [events   errors]</b> | Use this command in conjunction with the <b>debug sip</b> command and the <b>debug skinny</b> command if your IP phone is failing to register with the Cisco UCM or if you are experiencing call failure.       |
| To show error and event messages of TFTP inspection, including creation of the CTL file and configuration file parsing. | <b>debug phone-proxy tftp [events   errors]</b>      |                                                                                                                                                                                                                 |
| To show debug messages for SIP application inspection.                                                                  | <b>debug sip</b>                                     | Use this command when your IP phones are experiencing connection problems; for example, you can connect within the network but cannot make calls off the network. In the output, check for 4XX or 5XX messages. |
| To show debug messages for SCCP (Skinny) application inspection.                                                        | <b>debug skinny</b>                                  | Use this command when your IP phones are experiencing connection problems; for example, you can connect within the network but cannot make calls off the network. In the output, check for 4XX or 5XX messages. |

[Table 48-5](#) lists the capture commands to use with the phone proxy. Use the **capture** command on the appropriate interfaces (IP phones and Cisco UCM) to enable packet capture capabilities for packet sniffing and network fault isolation.

**Table 48-5 Security Appliance Capture Commands to Use with the Phone Proxy**

| To                                                                                                                                  | Use the Command                                                                                                                                                        | Notes                                                                                                                                                                                                                                                                                                                                                                                                                         |
|-------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| To capture packets on the ASA interfaces.                                                                                           | <b>capture</b> <i>capture_name</i> <b>interface</b> <i>interface_name</i>                                                                                              | Use this command if you are experiencing any problems that might require looking into the packets.<br><br>For example, if there is a TFTP failure and the output from the <b>debug</b> command does not indicate the problem clearly, run the <b>capture</b> command on the interface on which the IP phone resides and the interface on which the TFTP server resides to see the transaction and where the problem could be. |
| To capture data from the TLS proxy when there is a non-secure IP phone connecting to the phone proxy on the inside interface.       | <b>capture</b> <i>capture_name</i> <b>packet-length</b> <i>bytes</i> <b>interface</b> <b>inside</b> <b>buffer</b> <i>buf_size</i>                                      |                                                                                                                                                                                                                                                                                                                                                                                                                               |
| To capture encrypted data from the TLS proxy when there are secure IP phones connecting to the phone proxy on the inside interface. | <b>capture</b> <i>capture_name</i> <b>type</b> <b>tls-proxy</b> <b>buffer</b> <i>buf_size</i> <b>packet-length</b> <i>bytes</i> <b>interface</b> <b>inside</b>         |                                                                                                                                                                                                                                                                                                                                                                                                                               |
| To capture encrypted inbound and outbound data from the TLS proxy on one or more interfaces.                                        | <b>capture</b> <i>capture_name</i> <b>type</b> <b>tls-proxy</b> <b>buffer</b> <i>buf_size</i> <b>packet-length</b> <i>bytes</i> <b>interface</b> <i>interface_name</i> | If signaling fails, you might require capturing decrypted packets to see the contents of the SIP and SCCP signaling message. Use the <b>type</b> <b>tls-proxy</b> option in the <b>capture</b> command.                                                                                                                                                                                                                       |

Table 48-6 lists the **show** commands to use with the phone proxy.

**Table 48-6 Security Appliance Show Commands to Use with the Phone Proxy**

| To                                                                                                       | Use the Command                                             | Notes                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|----------------------------------------------------------------------------------------------------------|-------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| To show the packets or connections dropped by the accelerated security path.                             | <b>show asp drop</b>                                        | Use this command to troubleshoot audio quality issues with the IP phones or other traffic issues with the phone proxy. In addition to running this command, get call status from the phone to check for any dropped packets or jitter. See <a href="#">Debugging Information from IP Phones, page 48-31</a> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| To show the classifier contents of the accelerated security path for the specific classifier domain.     | <b>show asp table classify domain</b><br><i>domain_name</i> | If the IP phones are not downloading TFTP files, use this command to check that the classification rule for the domain <code>inspect-phone-proxy</code> is set for hosts to the configured TFTP server under the phone proxy instance.<br><br>If the IP phones are failing to register, use this command to make sure there is a classification rule for the domain <code>app-redirect</code> set for the IP phones that cannot register.                                                                                                                                                                                                                                                                                                                                                                |
| To show the connections that are to the ASA or from the ASA, in addition to through-traffic connections. | <b>show conn all</b>                                        | If you are experiencing problems with audio, use this command to make sure that there are connections opened from the IP phone to the media termination address.<br><br><b>Note</b> Use the <b>show conn</b> command with following options to display TFTP connections that have replicated (unused) connections:<br><br><pre>hostname# show conn   include p</pre> <p>The output for the TFTP connections should have a “p” flag at the end:</p> <pre>UDP out 64.169.58.181:9014 in 192.168.200.101:39420 idle 0:01:51 bytes 522 flags p</pre> <p>Using this command shows that the phone proxy has connections that are going through “inspect-phone-proxy”, which inspects TFTP connections. Using this command verifies that the TFTP requests are being inspected because the p flag is there.</p> |

**Table 48-6** Security Appliance Show Commands to Use with the Phone Proxy

| To                                                                      | Use the Command                            | Notes                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|-------------------------------------------------------------------------|--------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| To show the logs in the buffer and logging settings.                    | <b>show logging</b>                        | <p>Before entering the <b>show logging</b> command, enable the <b>logging buffered</b> command so that the <b>show logging command</b> displays the current message buffer and the current settings.</p> <p>Use this command to determine if the phone proxy and IP phones are successfully completing the TLS handshake.</p> <p><b>Note</b> Using the <b>show logging</b> command is useful for troubleshooting many problems where packets might be denied or there are translation failures.</p> |
| To show the corresponding media sessions stored by the phone proxy.     | <b>show phone-proxy media-sessions</b>     | Use this command to display output from successful calls. Additionally, use this command to troubleshoot problems with IP phone audio, such as one-way audio.                                                                                                                                                                                                                                                                                                                                       |
| To show the IP phones capable of Secure mode stored in the database.    | <b>show phone-proxy secure-phones</b>      | For any problems, make sure there is an entry for the IP phone in this output and that the port for this IP phone is non-zero, which indicates that it has successfully registered with the Cisco UCM.                                                                                                                                                                                                                                                                                              |
| To show the corresponding signaling sessions stored by the phone proxy. | <b>show phone-proxy signaling-sessions</b> | Use this command to troubleshoot media or signaling failure.                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| To show the configured service policies.                                | <b>show service-policy</b>                 | Use this command to show statistics for the service policy.                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| To show active TLS proxy sessions related to the phone proxy.           | <b>show tls-proxy sessions</b>             | If the IP phone has failed to register, use this command to see if the IP phone has successfully completed the handshake with the TLS proxy configured for the phone proxy.                                                                                                                                                                                                                                                                                                                         |

## Debugging Information from IP Phones

On the IP phone, perform the following actions:

- Check the Status messages on the IP phone by selecting the **Settings** button > Status > Status Messages and selecting the status item that you want to view.
- Collect the call-statistics data from the IP phone by selecting the **Settings** button > Status > Call Statistic. Data like the following displays:

```

RxType: G.729 TxType: G.729
RxSize: 20 ms TxSize: 20 ms
RxCnt: 0 TxCnt: 014174
AvgJtr: 10 MaxJtr: 59
RxDisc: 0000 RxLost: 014001

```

- Check the Security settings on the IP phone by selecting the **Settings** button > Security Configuration. Settings for web access, Security mode, MIC, LSC, CTL file, trust list, and CAPF appear. Under Security mode, make sure the IP phone is set to Encrypted.
- Check the IP phone to determine which certificates are installed on the phone by selecting the **Settings** button > Security Configuration > Trust List. In the trustlist, verify the following:
  - Make sure that there is an entry for each entity that the IP phone will need to contact. If there is a primary and backup Cisco UCM, the trustlist should contain entries for each Cisco UCM.
  - If the IP phone needs an LSC, the record entry should contain a CAPF entry.
  - Make sure that the IP addresses listed for each entry are the mapped IP addresses of the entities that the IP phone can reach.
- Open a web browser and access the IP phone console logs at the URL `http://IP_phone_IP_address`. The device information appears in the page. In the Device Logs section in the left pane, click Console Logs.

## IP Phone Registration Failure

The following errors can make IP phones unable to register with the phone proxy:

- [TFTP Auth Error Displays on IP Phone Console, page 48-32](#)
- [Configuration File Parsing Error, page 48-33](#)
- [Configuration File Parsing Error: Unable to Get DNS Response, page 48-33](#)
- [Non-configuration File Parsing Error, page 48-34](#)
- [Cisco UCM Does Not Respond to TFTP Request for Configuration File, page 48-34](#)
- [IP Phone Does Not Respond After the Security Appliance Sends TFTP Data, page 48-35](#)
- [IP Phone Requesting Unsigned File Error, page 48-36](#)
- [IP Phone Unable to Download CTL File, page 48-36](#)
- [IP Phone Registration Failure from Signaling Connections, page 48-37](#)
- [SSL Handshake Failure, page 48-39](#)
- [Certificate Validation Errors, page 48-40](#)

## TFTP Auth Error Displays on IP Phone Console

**Problem** The IP phone displays the following Status message:

```
TFTP Auth Error
```

**Solution** This Status message can indicate a problem with the IP phone CTL file.

To correct problems with the IP phone CTL file, perform the following:

- 
- Step 1** From the IP phone, select the **Setting** button > Security Configuration > Trust List. Verify that each entity in the network—Primary Cisco UCM, Secondary Cisco UCM, TFTP server—has its own entry in the trustlist and that each entity IP address is reachable by the IP phone.

- Step 2** From the ASA, verify that the CTL file for the phone proxy contains one record entry for each entity in the network—Primary Cisco UCM, Secondary Cisco UCM, TFTP server—by entering the following command:

```
hostname# show running-config all ctl-file [ctl_name]
```

Each of these record entries creates one entry on the IP phone trustlist. The phone proxy creates one entry internally with the function CUCM+TFTP.

- Step 3** In the CTL file, verify that each IP address is the global or mapped IP address of the entity. If the IP phones are on multiple interfaces, additional addressing requirements apply. See [Prerequisites for IP Phones on Multiple Interfaces, page 48-9](#).

## Configuration File Parsing Error

**Problem** When the ASA receives the configuration file from the Cisco UCM and tries to parse it, the following error appears in the debug output (**debug phone-proxy tftp errors**):

```
PP: 192.168.10.5/49357 requesting SEP00010002003.cnf.xml.sgn
PP: opened 0x193166
.....
PP: Beginning of element tag is missing, got !
PP: error parsing config file
PP: Error modifying config file, dropping packet
```

**Solution** Perform the following actions to troubleshoot this problem:

- Step 1** Enter the following URL in a web browser to obtain the IP phone configuration file from the Cisco Unified CM Administration console:
- ```
http://<cucm_ip>:6970/<config_file_name>
```
- For example, if the Cisco UCM IP address is 128.106.254.2 and the IP phone configuration file name is SEP000100020003.cnf.xml, enter:
- ```
http://128.106.254.2:6970/SEP000100020003.cnf.xml
```
- Step 2** Save this file, open a case with TAC and send them this file and the output from running the **debug phone-proxy tftp** command on the ASA.

## Configuration File Parsing Error: Unable to Get DNS Response

**Problem** When the ASA receives the configuration file from the Cisco UCM and tries to parse it, the following error appears in the debug output (**debug phone-proxy tftp errors**):

```
PP: 192.168.10.5/49357 requesting SEP00010002003.cnf.xml.sgn
PP: opened 0x193166
.....
PP: Callback required for parsing config file
PP: Unable to get dns response for id 7
PP: Callback, error modifying config file
```

The error indicates that the Cisco UCM is configured as an FQDN and the phone proxy is trying to do a DNS lookup but failed to get a response.

**Solution**

- 
- Step 1** Verify that DNS lookup is configured on the ASA.
  - Step 2** If DNS lookup is configured, determine whether you can ping the FQDN for the Cisco UCM from the ASA.
  - Step 3** If ASA cannot ping the Cisco UCM FQDN, check to see if there is a problem with the DNS server.
  - Step 4** Additionally, use the **name** command to associate a name with an IP address with the FQDN. See the command reference for information about using the **name** command.
- 

**Non-configuration File Parsing Error**

**Problem** The ASA receives a file other than an IP phone configuration file from the Cisco UCM and attempts to parse it. The following error appears in the debug output (**debug phone-proxy tftp**):

```
PP: 192.168.10.5/49357 requesting SK72f64050-7ad5-4b47-9bfa-5e9ad9cd4aa9.xml.sgn
PP: opened 0x193166
.....
PP: Beginning of element tag is missing, got !
PP: error parsing config file
PP: Error modifying config file, dropping packet
```

**Solution** The phone proxy should parse only the IP phone configuration file. When the phone proxy TFTP state gets out of state, the phone proxy cannot detect when it is attempting to parse a file other than the IP phone configuration file and the error above appears in the ASA output from the **debug phone-proxy tftp** command.

Perform the following actions to troubleshoot this problem:

- 
- Step 1** Reboot the IP phone.
  - Step 2** On the ASA, enter the following command to obtain the error information from the first TFTP request to the point where the first error occurred.  
  
hostname# **debug phone-proxy tftp**
  - Step 3** Capture the packets from the IP phone to the ASA. Make sure to capture the packets on the interface facing the IP phone and the interface facing the Cisco UCM. See [Debugging Information from the Security Appliance, page 48-27](#).
  - Step 4** Save this troubleshooting data, open a case with TAC and give them this information.
- 

**Cisco UCM Does Not Respond to TFTP Request for Configuration File**

**Problem** When the ASA forwards the TFTP request to the Cisco UCM for the IP phone configuration file, the Cisco UCM does not respond and the following errors appear in the debug output (**debug phone-proxy tftp**):

```
PP: 192.168.10.5/49355 requesting SEP001562106AF3.cnf.xml.sgn
PP: opened 0x17ccde
PP: 192.168.10.5/49355 requesting SEP001562106AF3.cnf.xml.sgn
```

```

PP: Client outside:192.168.10.5/49355 retransmitting request for Config file
SEP001562106AF3.cnf.xml.sgn
PP: opened 0x17ccde
PP: 192.168.10.5/49355 requesting SEP001562106AF3.cnf.xml.sgn
PP: Client outside:192.168.10.5/49355 retransmitting request for Config file
SEP001562106AF3.cnf.xml.sgn
PP: opened 0x17ccde
PP: 192.168.10.5/49355 requesting SEP001562106AF3.cnf.xml.sgn
PP: Client outside:192.168.10.5/49355 retransmitting request for Config file
SEP001562106AF3.cnf.xml.sgn
PP: opened 0x17ccde

```

**Solution** Perform the following actions to troubleshoot this problem:

- 
- Step 1** Determine why the Cisco UCM is not responding to the TFTP request by performing the following troubleshooting actions:
- Use the Cisco UCM to ping the ASA inside interface when PAT is configured for the outside interface so that the IP phone IP address is uses NAT for the ASA inside interface IP address.
  - Use the Cisco UCM to ping the IP phone IP address when NAT and PAT are not configured.
- Step 2** Verify that the ASA is forwarding the TFTP request. Capture the packets on the interface between the ASA and Cisco UCM. See [Debugging Information from the Security Appliance, page 48-27](#).
- 

## IP Phone Does Not Respond After the Security Appliance Sends TFTP Data

**Problem** When the ASA receives a TFTP request from the IP phone for the CTL file and forwards the data to the IP phone, the phone might not see the data and the TFTP transaction fails.

The following errors appear in the debug output (**debug phone-proxy tftp**):

```

PP: Client outside:68.207.118.9/33606 retransmitting request for CTL file
CTLSEP001DA2B78E91.tlv
PP: opened 0x214b27a
PP: Data Block 1 forwarded from 168.215.146.220/20168 to 68.207.118.9/33606 ingress ifc
outside
PP: 68.207.118.9/33606 requesting CTLSEP001DA2B78E91.tlv
PP: Client outside:68.207.118.9/33606 retransmitting request for CTL file
CTLSEP001DA2B78E91.tlv
PP: 68.207.118.9/33606 requesting CTLSEP001DA2B78E91.tlv
PP: Client outside:68.207.118.9/33606 retransmitting request for CTL file
CTLSEP001DA2B78E91.tlv

```

**Solution** Perform the following actions to determine why the IP phone is not responding and to troubleshoot the problem:

- 
- Step 1** Verify that the ASA is forwarding the TFTP request by entering the following command to capture the packets on the interface between the ASA and the IP phone:
- ```
hostname# capture out interface outside
```
- See the command reference for more information about using the **capture** command.
- Step 2** If the IP phone is behind a router, the router might be dropping the data. Make sure UDP port forwarding is enabled on the router.

- Step 3** If the router is a Linksys router, see [Configuring Linksys Routers with UDP Port Forwarding for the Phone Proxy](#), page 48-26 for information on the configuration requirements.
-

IP Phone Requesting Unsigned File Error

Problem The IP phone should always request a signed file. Therefore, the TFTP file being requested always has the .SGN extension.

When the IP phone does not request a signed file, the following error appears in the debug output (**debug phone-proxy tftp errors**):

```
Error: phone requesting for unsigned config file
```

Solution Most likely, this error occurs because the IP phone has not successfully installed the CTL file from the ASA.

Determine whether the IP phone has successfully downloaded and installed the CTL file from the ASA by checking the Status messages on the IP phone. See [Debugging Information from IP Phones](#), page 48-31 for information.

IP Phone Unable to Download CTL File

Problem The IP phone Status message indicates it cannot download its CTL file and the IP phone cannot be converted to Secure (encrypted) mode.

Solution If the IP phone did not have an existing CTL file, check the Status messages by selecting the **Settings** button > Status > Status Messages. If the list contains a Status message indicating the IP phone encountered a CTL File Auth error, obtain the IP phone console logs, open a TAC case, and send them the logs.

Solution This error can appear in the IP phone Status messages when the IP phone already has an existing CTL file.

-
- Step 1** Check the IP phone to see if a CTL file already exists on it. This can occur if the IP phone previously registered with a mixed mode cluster Cisco UCM. On the IP phone, select the **Settings** button > Security Configuration > CTL file.
- Step 2** Erase the existing CTL file by selecting the **Settings** button > Security Configuration > CTL file > Select. Press **# on the keypad and select Erase.
-

Solution Problems downloading the CTL file might be caused by issues with media termination. Enter the following command to determine if the media-termination address in the phone proxy configuration is set correctly:

```
hostname(config)# show running-config all phone-proxy
!
phone-proxy mypp
  media-termination address 10.10.0.25
  cipc security-mode authenticated
  cluster-mode mixed
  disable service-settings
  timeout secure-phones 0:05:00
hostname(config)#
```

Make sure that each media-termination instance is created correctly and that the address or addresses are set correctly. The ASA must meet specific criteria for media termination. See [Media Termination Instance Prerequisites, page 48-6](#) for the complete list of prerequisites that you must follow when creating the media termination instance and configuring the media termination addresses.

IP Phone Registration Failure from Signaling Connections

Problem The IP phone is unable to complete the TLS handshake with the phone proxy and download its files using TFTP.

Solution

-
- Step 1** Determine if the TLS handshake is occurring between the phone proxy and the IP phone, perform the following:
- Enable logging with the following command:


```
hostname(config)# logging buffered debugging
```
 - To check the output from the syslogs captured by the **logging buffered** command, enter the following command:


```
hostname# show logging
```

The syslogs will contain information showing when the IP phone is attempting the TLS handshake, which happens after the IP phone downloads its configuration file.
- Step 2** Determine if the TLS proxy is configured correctly for the phone proxy:
- Display all currently running TLS proxy configurations by entering the following command:


```
hostname# show running-config tls-proxy
tls-proxy proxy
server trust-point _internal_PP_<ctl_file_instance_name>
client ldc issuer ldc_signer
client ldc key-pair phone_common
no client cipher-suite
hostname#
```
 - Verify that the output contains the **server trust-point** command under the **tls-proxy** command (as shown in substep a.).

If you are missing the **server trust-point** command, modify the TLS proxy in the phone proxy configuration.

See Step 3 in the [“Task Flow for Configuring the Phone Proxy in a Non-secure Cisco UCM Cluster”](#) section on page 48-15, or Step 3 in the [“Task Flow for Configuring the Phone Proxy in a Mixed-mode Cisco UCM Cluster”](#) section on page 48-17.

Having this command missing from the TLS proxy configuration for the phone proxy will cause TLS handshake failure.
- Step 3** Verify that all required certificates are imported into the ASA so that the TLS handshake will succeed.
- Determine which certificates are installed on the ASA by entering the following command:


```
hostname# show running-config crypto
```

Additionally, determine which certificates are installed on the IP phones. See [Debugging Information from IP Phones, page 48-31](#) for information about checking the IP phone to determine if it has MIC installed on it.

- b. Verify that the list of installed certificates contains all required certificates for the phone proxy. See [Table 48-2, Certificates Required by the Security Appliance for the Phone Proxy](#), for information.
- c. Import any missing certificates onto the ASA. See also [Importing Certificates from the Cisco UCM, page 48-15](#).

Step 4 If the steps above fail to resolve the issue, perform the following actions to obtain additional troubleshooting information for Cisco Support.

- a. Enter the following commands to capture additional debugging information for the phone proxy:

```
hostname# debug inspect tls-proxy error
hostname# show running-config ssl
hostname(config) show tls-proxy tls_name session host host_addr detail
```

- b. Enable the **capture** command on the inside and outside interfaces (IP phones and Cisco UCM) to enable packet capture capabilities for packet sniffing and network fault isolation. See the command reference for information.

Problem The TLS handshake succeeds, but signaling connections are failing.

Solution Perform the following actions:

- Check to see if SIP and Skinny signaling is successful by using the following commands:
 - **debug sip**
 - **debug skinny**
- If the TLS handshake is failing and you receive the following syslog, the SSL encryption method might not be set correctly:

```
%ASA-6-725001: Starting SSL handshake with client dmz:171.169.0.2/53097 for TLSv1
session.
%ASA-7-725010: Device supports the following 1 cipher(s).
%ASA-7-725011: Cipher[1] : RC4-SHA
%ASA-7-725008: SSL client dmz:171.169.0.2/53097 proposes the following 2 cipher(s).
%ASA-7-725011: Cipher[1] : AES256-SHA
%ASA-7-725011: Cipher[2] : AES128-SHA
%ASA-7-725014: SSL lib error. Function: SSL3_GET_CLIENT_HELLO Reason: no shared cipher
%ASA-6-725006: Device failed SSL handshake with dmz client:171.169.0.2/53097
```

Set the correct ciphers by completing the following procedure:

Step 1 To see the ciphers being used by the phone proxy, enter the following command:

```
hostname# show run all ssl
```

Step 2 To add the required ciphers, enter the following command:

```
hostname(config)# ssl encryption
```

The default is to have all algorithms available in the following order:

```
[3des-sha1] [des-sha1] [rc4-md5] [possibly others]
```

See the command reference for more information about setting ciphers with the **ssl encryption** command.

SSL Handshake Failure

Problem The phone proxy is not functioning. Initial troubleshooting uncovered the following errors in the ASA syslogs:

```
%ASA-7-725014: SSL lib error. Function: SSL3_READ_BYTES Reason: ssl handshake failure
%ASA-7-725014: SSL lib error. Function: SSL3_GET_CLIENT_CERTIFICATE Reason: no certificate returned
%ASA-6-725006: Device failed SSL handshake with outside client:72.146.123.158/30519
%ASA-3-717009: Certificate validation failed. No suitable trustpoints found to validate certificate serial number: 62D06172000000143FCC, subject name: cn=CP-7962G-SEP002155554502,ou=EVVBU,o=Cisco Systems Inc.
%ASA-3-717027: Certificate chain failed validation. No suitable trustpoint was found to validate chain.
```

Solution

Verify that all required certificates are imported into the ASA so that the TLS handshake will succeed.

Step 1 Determine which certificates are installed on the ASA by entering the following command:

```
hostname# show running-config crypto
```

Additionally, determine which certificates are installed on the IP phones. See [Debugging Information from IP Phones, page 48-31](#) for information about checking the IP phone to determine if it has MIC installed on it.

Step 2 Verify that the list of installed certificates contains all required certificates for the phone proxy.

See [Table 48-2, Certificates Required by the Security Appliance for the Phone Proxy](#), for information.

Step 3 Import any missing certificates onto the ASA. See also [Importing Certificates from the Cisco UCM, page 48-15](#).

Problem The phone proxy is not functioning. Initial troubleshooting uncovered the following errors in the ASA syslogs:

```
%ASA-6-725001: Starting SSL handshake with client dmz:171.169.0.2/53097 for TLSv1 session.
%ASA-7-725010: Device supports the following 1 cipher(s).
%ASA-7-725011: Cipher[1] : RC4-SHA
%ASA-7-725008: SSL client dmz:171.169.0.2/53097 proposes the following 2 cipher(s).
%ASA-7-725011: Cipher[1] : AES256-SHA
%ASA-7-725011: Cipher[2] : AES128-SHA
%ASA-7-725014: SSL lib error. Function: SSL3_GET_CLIENT_HELLO Reason: no shared cipher
%ASA-6-725006: Device failed SSL handshake with dmz client:171.169.0.2/53097
```

Solution the SSL encryption method might not be set correctly. Set the correct ciphers by completing the following procedure:

Step 1 To see the ciphers being used by the phone proxy, enter the following command:

```
hostname# show run all ssl
```

Step 2 To add the required ciphers, enter the following command:

```
hostname(config)# ssl encryption
```

The default is to have all algorithms available in the following order:

[3des-sha1] [des-sha1] [rc4-md5] [possibly others]

See the command reference for more information about setting ciphers with the **ssl encryption** command.

Certificate Validation Errors

Problem Errors in the ASA log indicate that certificate validation errors occurred.

Entering the **show logging asdm** command, displayed the following errors:

```
3|Jun 19 2008 17:23:54|717009: Certificate validation failed. No suitable trustpoints
found to validate
certificate serial number: 348FD2760000000E6E27, subject name:
cn=CP-7961G-SEP001819A89CC3,ou=EVVBU,o=Cisco Systems Inc.
```

Solution

In order for the phone proxy to authenticate the MIC provided by the IP phone, it needs the Cisco Manufacturing CA (MIC) certificate imported into the ASA.

Verify that all required certificates are imported into the ASA so that the TLS handshake will succeed.

Step 1 Determine which certificates are installed on the ASA by entering the following command:

```
hostname# show running-config crypto
```

Additionally, determine which certificates are installed on the IP phones. The certificate information is shown under the Security Configuration menu. See [Debugging Information from IP Phones, page 48-31](#) for information about checking the IP phone to determine if it has the MIC installed on it.

Step 2 Verify that the list of installed certificates contains all required certificates for the phone proxy.

See [Table 48-2, Certificates Required by the Security Appliance for the Phone Proxy](#), for information.

Step 3 Import any missing certificates onto the ASA. See also [Importing Certificates from the Cisco UCM, page 48-15](#).

Media Termination Address Errors

Problem Entering the **media-termination address** command displays the following errors:

```
hostname(config-phone-proxy)# media-termination address ip_address
ERROR: Failed to apply IP address to interface Virtual254, as the network overlaps with
interface GigabitEthernet0/0. Two interfaces cannot be in the same subnet.
ERROR: Failed to set IP address for the Virtual interface
ERROR: Could not bring up Phone proxy media termination interface
ERROR: Failed to find the HWIDB for the Virtual interface
```

Solution Enter the following command to determine if the media-termination address in the phone proxy configuration is set correctly:

```
hostname(config)# show running-config all phone-proxy
asa2(config)# show running-config all phone-proxy
!
```

```

phone-proxy mypp
  media-termination address 10.10.0.25
  cipc security-mode authenticated
  cluster-mode mixed
  disable service-settings
  timeout secure-phones 0:05:00
hostname(config)#

```

Make sure that each media-termination instance is created correctly and that the address or addresses are set correctly. The ASA must meet specific criteria for media termination. See [Media Termination Instance Prerequisites, page 48-6](#) for the complete list of prerequisites that you must follow when creating the media termination instance and configuring the media termination addresses.

Audio Problems with IP Phones

The following audio errors can occur when the IP phones connecting through the phone proxy.

Media Failure for a Voice Call

Problem The call signaling completes but there is one way audio or no audio.

Solution

- Problems with one way or no audio might be caused by issues with media termination. Enter the following command to determine if the media-termination address in the phone proxy configuration is set correctly:

```

hostname(config)# show running-config all phone-proxy
asa2(config)# show running-config all phone-proxy
!
phone-proxy mypp
  media-termination address 10.10.0.25
  cipc security-mode authenticated
  cluster-mode mixed
  disable service-settings
  timeout secure-phones 0:05:00
hostname(config)#

```

- Make sure that each media-termination instance is created correctly and that the address or addresses are set correctly. The ASA must meet specific criteria for media termination. See [Media Termination Instance Prerequisites, page 48-6](#) for the complete list of prerequisites that you must follow when creating the media termination instance and configuring the media termination addresses.
- If each media-termination address meets the requirements, determine whether the IP addresses are reachable by all IP phones.
- If each IP address is set correctly and reachable by all IP phones, check the call statistics on an IP phone (see [Debugging Information from IP Phones, page 48-31](#)) and determine if there are Rcvr packets and Sender packets on the IP phone, or if there are any Rcvr Lost or Discarded packets.

Saving SAST Keys

Site Administrator Security Token (SAST) keys on the ASA can be saved in the event a recovery is required due to hardware failure and a replacement is required. The following steps shows how to recover the SAST keys and use them on the new hardware.

The SAST keys can be seen via the **show crypto key mypubkey rsa** command. The SAST keys are associated with a trustpoint that is labeled **_internal_ctl-file_name_SAST_X** where *ctl-file-name* is the name of the CTL file instance that was configured, and *X* is an integer from 0 to *N-1* where *N* is the number of SASTs configured for the CTL file (the default is 2).

Step 1 On the ASA, export all the SAST keys in PKCS-12 format by using the **crypto ca export** command:

```
hostname(config)# crypto ca export _internal_ctl-file_name_SAST_X pkcs12 passphrase
```

```
hostname(config)# Exported pkcs12 follows:
MIIGZwIBAzCCBiEGCSqGSIB3DQEHAaCCBhIEggYOMIIGCjCCBgYGCSqGSIB3DQEH
```

[snip]

```
MIIGZwIBAzCCBiEGCSqGSIB3DQEHAaCCBhIEggYOMIIGCjCCBgYGCSqGSIB3DQEH
---End - This line not part of the pkcs12---
```

```
hostname(config)# crypto ca export _internal_ctl-file_name_SAST_X pkcs12 passphrase
```

```
hostname(config)# Exported pkcs12 follows:
MIIGZwIBAzCCBiEGCSqGSIB3DQEHAaCCBhIEggYOMIIGCjCCBgYGCSqGSIB3DQEH
```

[snip]

```
mGF/hfDDNAICBAA=
```

```
---End - This line not part of the pkcs12---
```

```
hostname(config)#
```



Note Save this output somewhere secure.

Step 2 Import the SAST keys to a new ASA.

a. To import the SAST key, enter the following command:

```
hostname(config)# crypto ca import trustpoint pkcs12 passphrase
```

Where *trustpoint* is **_internal_ctl-file_name_SAST_X** and *ctl-file-name* is the name of the CTL file instance that was configured, and *X* is an integer from 0 to 4 depending on what you exported from the ASA.

b. Using the PKCS-12 output you saved in [Step 1](#), enter the following command and paste the output when prompted:

```
hostname(config)# crypto ca import _internal_ctl-file_name_SAST_X pkcs12 passphrase
```

```
hostname(config)# Enter the base 64 encoded pkcs12.
hostname(config)# End with the word "quit" on a line by itself:
MIIGZwIBAzCCBiEGCSqGSIB3DQEHAaCCBhIEggYOMIIGCjCCBgYGCSqGSIB3DQEH
```

[snip]

```
muMiZ6eClQICBAA=
hostname(config)# quit
INFO: Import PKCS12 operation completed successfully
hostname(config)# crypto ca import _internal_ctl-file_name_SAST_X pkcs12 passphrase
```

```
hostname(config)# Enter the base 64 encoded pkcs12.
hostname(config)# End with the word "quit" on a line by itself:
MIIGZwIBAzCCBiEGCSqGSIB3DQEHAaCCBhIEggYOMIIGCjCCBgYGCSqGSIB3DQEH
```

[snip]

```
mGF/hfDDNAICBAA=  
hostname(config)# quit  
INFO: Import PKCS12 operation completed successfully  
hostname(config)#
```

- Step 3** Create the CTL file instance on the new ASA using the same name as the one used in the SAST trustpoints created in [Step 2](#) by entering the following commands. Create trustpoints for each Cisco UMC (primary and secondary).

```
hostname(config)# ctl-file ctl_name  
hostname(config-ctl-file)# record-entry ucm trustpoint trust_point address address  
hostname(config-ctl-file)# record-entry capf trustpoint trust_point address address  
hostname(config-ctl-file)# no shutdown
```

Configuration Examples for the Phone Proxy


This section includes the following topics:

- [Example 1: Nonsecure Cisco UCM cluster, Cisco UCM and TFTP Server on Publisher, page 48-43](#)
- [Example 2: Mixed-mode Cisco UCM cluster, Cisco UCM and TFTP Server on Publisher, page 48-45](#)
- [Example 3: Mixed-mode Cisco UCM cluster, Cisco UCM and TFTP Server on Different Servers, page 48-46](#)
- [Example 4: Mixed-mode Cisco UCM cluster, Primary Cisco UCM, Secondary and TFTP Server on Different Servers, page 48-47](#)
- [Example 5: LSC Provisioning in Mixed-mode Cisco UCM cluster; Cisco UCM and TFTP Server on Publisher, page 48-49](#)
- [Example 6: VLAN Transversal, page 48-51](#)

Example 1: Nonsecure Cisco UCM cluster, Cisco UCM and TFTP Server on Publisher

[Figure 48-2](#) shows an example of the configuration for a non-secure Cisco UCM cluster using the following topology.

Figure 48-2 Nonsecure Cisco UCM cluster, Cisco UCM and TFTP Server on Publisher

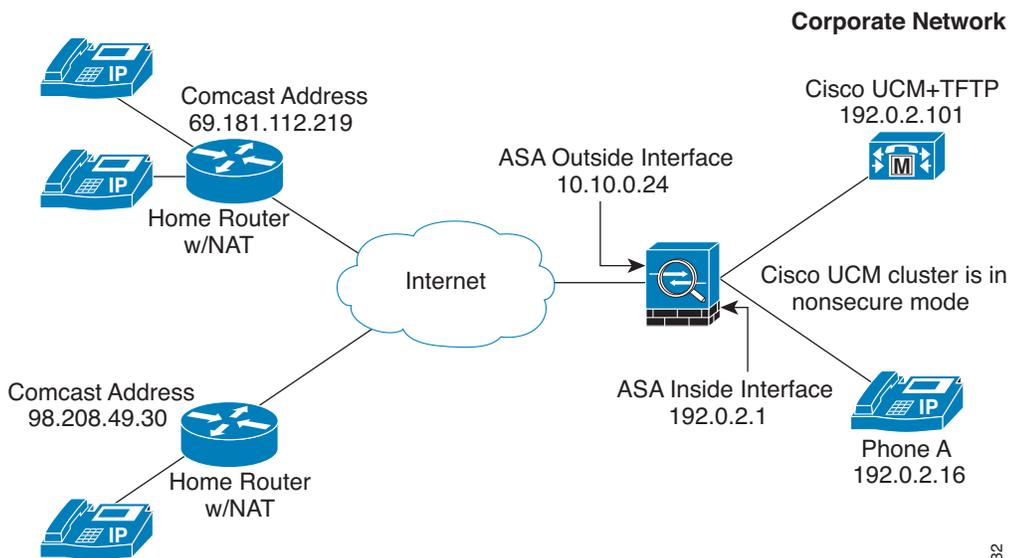

271632

```


object network obj-192.0.2.101
  host 192.0.2.101
  nat (inside,outside) static 10.10.0.26
access-list pp extended permit udp any host 10.10.0.26 eq 69
access-group pp in interface outside
crypto key generate rsa label cucmtftp_kp modulus 1024
crypto ca trustpoint cucm_tftp_server
  enrollment self
  keypair cucmtftp_kp
crypto ca enroll cucm_tftp_server
ctl-file myctl
  record-entry cucm-tftp trustpoint cucm_tftp_server address 10.10.0.26
  no shutdown
tls-proxy mytls
  server trust-point _internal_PP_myctl
media-termination my_mediaterm
  address 192.0.2.25 interface inside
  address 10.10.0.25 interface outside
phone-proxy mypp
  media-termination my_mediaterm
  tftp-server address 192.0.2.101 interface inside
  tls-proxy mytls
  ctl-file myctl
class-map sec_sccp
  match port tcp 2443
class-map sec_sip
  match port tcp eq 5061
policy-map pp_policy
  class sec_sccp
    inspect skinny phone-proxy mypp
  class sec_sip
    inspect sip phone-proxy mypp
service-policy pp_policy interface outside

```

Example 2: Mixed-mode Cisco UCM cluster, Cisco UCM and TFTP Server on Publisher

Figure 48-3 shows an example of the configuration for a mixed-mode Cisco UCM cluster using the following topology.

Figure 48-3 Mixed-mode Cisco UCM cluster, Cisco UCM and TFTP Server on Publisher

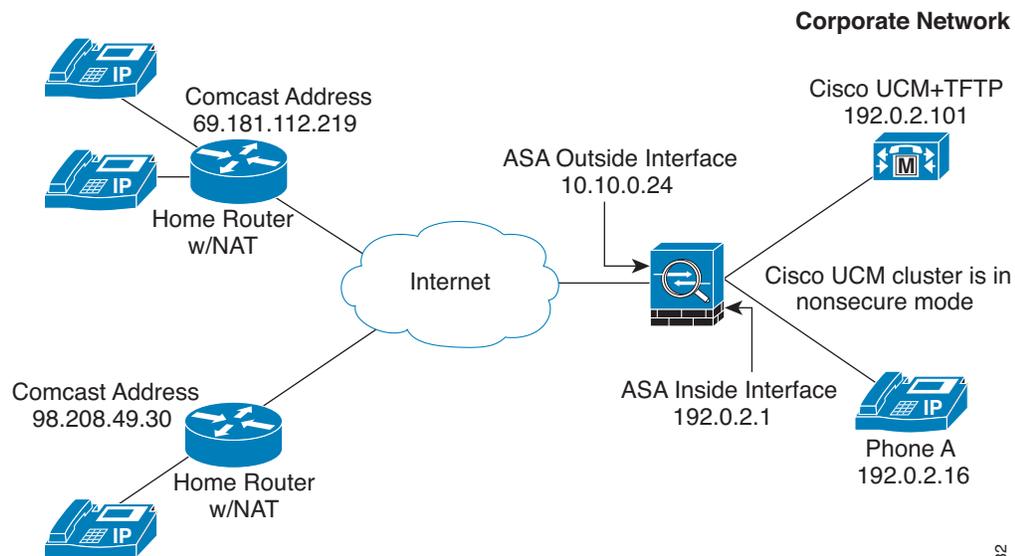

271632

```

object network obj-192.0.2.101
  host 192.0.2.101
  nat (inside,outside) static 10.10.0.26
access-list pp extended permit udp any host 10.10.0.26 eq 69
access-group pp in interface outside
crypto key generate rsa label cucmtftp_kp modulus 1024
crypto ca trustpoint cucm_tftp_server
  enrollment self
  keypair cucmtftp_kp
crypto ca enroll cucm_tftp_server
ctl-file myctl
  record-entry cucm-tftp trustpoint cucm_tftp_server address 10.10.0.26
  no shutdown
crypto key generate rsa label ldc_signer_key modulus 1024
crypto key generate rsa label phone_common modulus 1024
crypto ca trustpoint ldc_server
  enrollment self
  proxy_ldc_issuer
  fqdn my-ldc-ca.exmaple.com
  subject-name cn=FW_LDC_SIGNER_172_23_45_200
  keypair ldc_signer_key
  crypto ca enroll ldc_server
tls-proxy my_proxy
  server trust-point _internal_PP_myctl
  client ldc issuer ldc_server
  client ldc keypair phone_common
  client cipher-suite aes128-sha1 aes256-sha1
media-termination my_mediaterm
  address 192.0.2.25 interface inside

```

```

address 10.10.0.25 interface outside
phone-proxy mypp
  media-termination my_mediaterm
  tftp-server address 192.0.2.101 interface inside
  tls-proxy mytls
  ctl-file myctl
  cluster-mode mixed
class-map sec_sccp
  match port tcp 2443
class-map sec_sip
  match port tcp eq 5061
policy-map pp_policy
  class sec_sccp
    inspect skinny phone-proxy mypp
  class sec_sip
    inspect sip phone-proxy mypp
service-policy pp_policy interface outside


```

Example 3: Mixed-mode Cisco UCM cluster, Cisco UCM and TFTP Server on Different Servers

Figure 48-4 shows an example of the configuration for a mixed-mode Cisco UCM cluster using the following topology where the TFTP server resides on a different server from the Cisco UCM.

In this sample, the static interface PAT for the TFTP server is configured to appear like the ASA's outside interface IP address.

Figure 48-4 Mixed-mode Cisco UCM cluster, Cisco UCM and TFTP Server on Different Servers

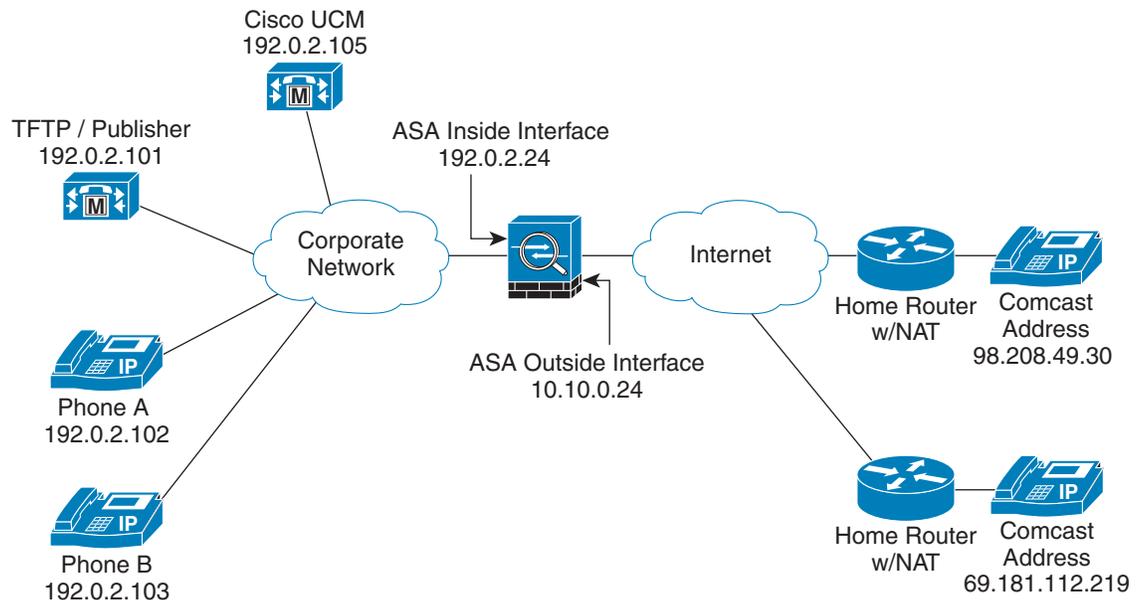

```

object network obj-192.0.2.105
  host 192.0.2.105
  nat (inside,outside) static 10.10.0.26
object network obj-192.0.2.101

```

271634

```

host 192.0.2.101
  nat (inside,outside) static interface udp 69 69
access-list pp extended permit udp any host 10.10.0.24 eq 69
access-group pp in interface outside
crypto key generate rsa label cucm_kp modulus 1024
crypto ca trustpoint cucm
  enrollment self
  keypair cucm_kp
crypto ca enroll cucm
crypto key generate rsa label tftp_kp modulus 1024
crypto ca trustpoint tftp_server
  enrollment self
  keypair tftp_kp
crypto ca enroll tftp_server
ctl-file myctl
  record-entry cucm trustpoint cucm_server address 10.10.0.26
  no shutdown
crypto key generate rsa label ldc_signer_key modulus 1024
crypto key generate rsa label phone_common modulus 1024
crypto ca trustpoint ldc_server
  enrollment self
  proxy_ldc_issuer
  fqdn my-ldc-ca.exmaple.com
  subject-name cn=FW_LDC_SIGNER_172_23_45_200
  keypair ldc_signer_key
  crypto ca enroll ldc_server
tls-proxy my_proxy
  server trust-point _internal_PP_myctl
  client ldc issuer ldc_server
  client ldc keypair phone_common
  client cipher-suite aes128-sha1 aes256-sha1
media-termination my_mediaterm
  address 192.0.2.25 interface inside
  address 10.10.0.25 interface outside
phone-proxy mypp
  media-termination my_mediaterm
  tftp-server address 192.0.2.101 interface inside
  tls-proxy mytls
  ctl-file myctl
  cluster-mode mixed
class-map sec_sccp
  match port tcp 2443
class-map sec_sip
  match port tcp eq 5061
policy-map pp_policy
  class sec_sccp
    inspect skinny phone-proxy mypp
  class sec_sip
    inspect sip phone-proxy mypp
service-policy pp_policy interface outside


```

Example 4: Mixed-mode Cisco UCM cluster, Primary Cisco UCM, Secondary and TFTP Server on Different Servers

Figure 48-5 shows an example of the configuration for a mixed-mode Cisco UCM cluster using the following topology where the TFTP server resides on a different server from the primary and secondary Cisco UCMs.

In this sample, the static interface PAT for the TFTP server is configured to appear like the ASA's outside interface IP address.

Figure 48-5 *Mixed-mode Cisco UCM cluster, Primary Cisco UCM, Secondary Cisco UCM, and TFTP Server on Different Servers*

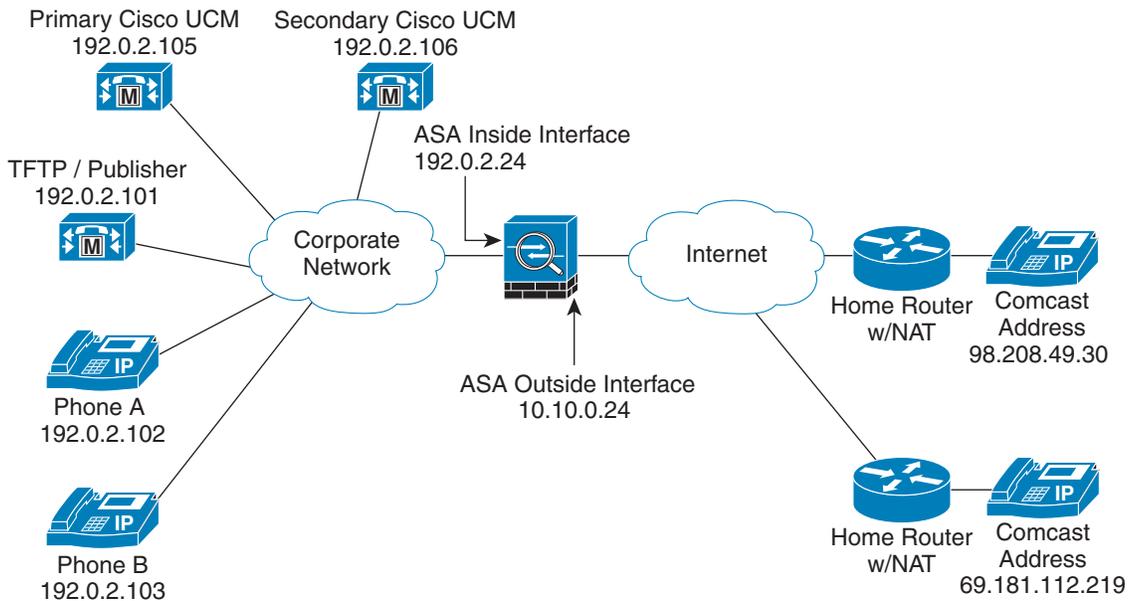

271635

```

object network obj-192.0.2.105
  host 192.0.2.105
  nat (inside,outside) static 10.10.0.27
object network obj-192.0.2.101
  host 192.0.2.101
  nat (inside,outside) static interface udp 69 69
object network obj-192.0.2.106
  host 192.0.2.106
  nat (inside,outside) static 10.10.0.26
access-list pp extended permit udp any host 10.10.0.24 eq 69
access-group pp in interface outside
crypto key generate rsa label cluster_kp modulus 1024
crypto ca trustpoint pri_cucm
  enrollment self
  keypair cluster_kp
crypto ca enroll pri_cucm
crypto ca trustpoint sec_cucm
  enrollment self
  serial-number
  keypair cluster_kp
crypto ca enroll sec_cucm
crypto ca trustpoint tftp_server
  enrollment self
  fqdn my_tftp.example.com
  keypair cluster_kp
crypto ca enroll tftp_server
ctl-file myctl
  record-entry tftp trustpoint tftp_server address 10.10.0.24
  record-entry cucm trustpoint pri_cucm_server address 10.10.0.27
  record-entry cucm trustpoint sec_cucm_server address 10.10.0.2
  no shutdown
crypto key generate rsa label ldc_signer_key modulus 1024
crypto key generate rsa label phone_common modulus 1024

```

```

crypto ca trustpoint ldc_server
  enrollment self
  proxy_ldc_issuer
  fqdn my-ldc-ca.exmaple.com
  subject-name cn=FW_LDC_SIGNER_172_23_45_200
  keypair ldc_signer_key
  crypto ca enroll ldc_server
tls-proxy my_proxy
  server trust-point _internal_PP_myctl
  client ldc issuer ldc_server
  client ldc keypair phone_common
  client cipher-suite aes128-sha1 aes256-sha1
media-termination my_mediaterm
  address 192.0.2.25 interface inside
  address 10.10.0.25 interface outside
phone-proxy mypp
  media-termination my_mediaterm
  tftp-server address 192.0.2.101 interface inside
  tls-proxy mytls
  ctl-file myctl
  cluster-mode mixed
class-map sec_sccp
  match port tcp 2443
class-map sec_sip
  match port tcp eq 5061
policy-map pp_policy
  class sec_sccp
    inspect skinny phone-proxy mypp
  class sec_sip
    inspect sip phone-proxy mypp
service-policy pp_policy interface outside

```

Example 5: LSC Provisioning in Mixed-mode Cisco UCM cluster; Cisco UCM and TFTP Server on Publisher

Figure 48-6 shows an example of the configuration for a mixed-mode Cisco UCM cluster where LSC provisioning is required using the following topology.




Note

Doing LSC provisioning for remote IP phones is not recommended because it requires that the IP phones first register and they have to register in nonsecure mode. Having the IP phones register in nonsecure mode requires the Administrator to open the nonsecure signaling port for SIP and SCCP on the ASA. If possible, LSC provisioning should be done inside the corporate network before giving the IP phones to the end-users.

In this sample, you create an access list to allow the IP phones to contact the TFTP server and to allow the IP phones to register in nonsecure mode by opening the nonsecure port for SIP and SCCP as well as the CAPF port for LSC provisioning.

Additionally, you create the CAPF trustpoint by copying and pasting the CAPF certificate from the Cisco UCM Certificate Management software.

Figure 48-6 LSC Provisioning in Mixed-mode Cisco UCM cluster; Cisco UCM and TFTP Server on Publisher

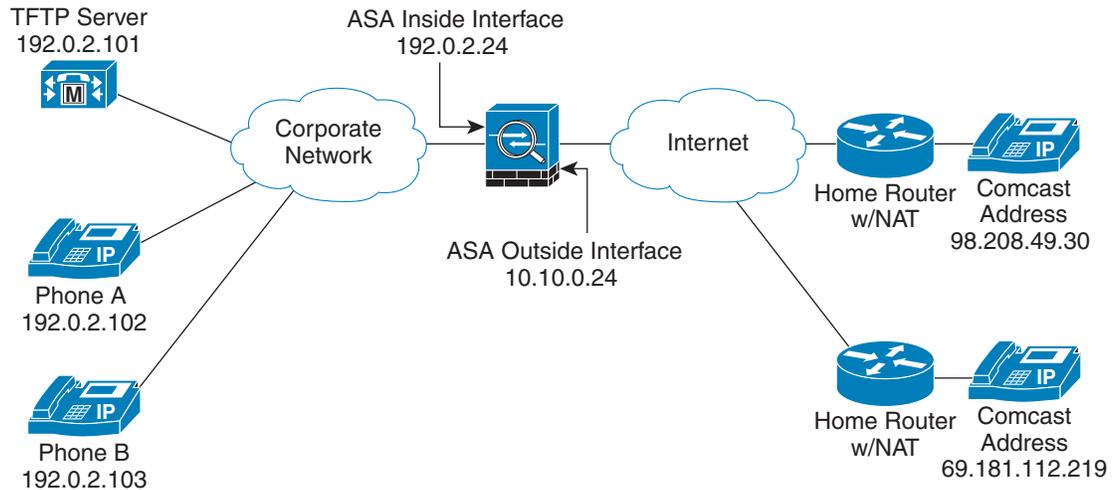

271633

```

object network obj-192.0.2.105
  host 192.0.2.105
  nat (inside,outside) static 10.10.0.26
object network obj-192.0.2.101
  host 192.0.2.101
  nat (inside,outside) static interface udp 69 69
access-list pp extended permit udp any host 10.10.0.24 eq 69
access-list pp extended permit tcp any host 10.10.0.26 eq 2000
access-list pp extended permit tcp any host 10.10.0.26 eq 5060
access-list pp extended permit tcp any host 10.10.0.26 eq 3804
access-group pp in interface outside
crypto key generate rsa label cluster_kp modulus 1024
crypto ca trustpoint cucm
  enrollment self
  keypair cluster_kp
crypto ca enroll cucm
crypto ca trustpoint tftp_server
  enrollment self
  serial-number
  keypair cluster_kp
crypto ca enroll tftp_server
crypto ca trustpoint capf
  enroll terminal
crypto ca authenticate capf
ctl-file myctl
  record-entry cucm trustpoint cucm_server address 10.10.0.26
  record-entry capf trustpoint capf address 10.10.0.26
  no shutdown
crypto key generate rsa label ldc_signer_key modulus 1024
crypto key generate rsa label phone_common modulus 1024
crypto ca trustpoint ldc_server
  enrollment self
  proxy_ldc_issuer
  fqdn my-ldc-ca.exmaple.com
  subject-name cn=FW_LDC_SIGNER_172_23_45_200
  keypair ldc_signer_key
  crypto ca enroll ldc_server
tls-proxy my_proxy

```

```
server trust-point _internal_PP_myctl
client ldc issuer ldc_server
client ldc keypair phone_common
client cipher-suite aes128-sha1 aes256-sha1
media-termination my_mediaterm
address 192.0.2.25 interface inside
address 10.10.0.25 interface outside
phone-proxy mypp
media-termination my_mediaterm
tftp-server address 192.0.2.101 interface inside
tls-proxy mytls
ctl-file myctl
cluster-mode mixed
class-map sec_sccp
match port tcp 2443
class-map sec_sip
match port tcp eq 5061
policy-map pp_policy
class sec_sccp
inspect skinny phone-proxy mypp
class sec_sip
inspect sip phone-proxy mypp
service-policy pp_policy interface outside
```

Example 6: VLAN Transversal

Figure 48-7 shows an example of the configuration to force Cisco IP Communicator (CIPC) softphones to operate in authenticated mode when CIPC softphones are deployed in a voice and data VLAN scenario. VLAN transversal is required between CIPC softphones on the data VLAN and hard phones on the voice VLAN.

In this sample, the Cisco UCM cluster mode is nonsecure.

In this sample, you create an access list to allow the IP phones to contact the TFTP server and to allow the IP phones to register in nonsecure mode by opening the nonsecure port for SIP and SCCP as well as the CAPF port for LSC provisioning.

In this sample, you configure NAT for the CIPC by using PAT so that each CIPC is mapped to an IP address space in the Voice VLAN.


Additionally, you create the CAPF trustpoint by copying and pasting the CAPF certificate from the Cisco UCM Certificate Management software.



Note

Cisco IP Communicator supports authenticated mode only and does not support encrypted mode; therefore, there is no encrypted voice traffic (SRTP) flowing from the CIPC softphones.

Figure 48-7 VLAN Transversal Between CIPC Softphones on the Data VLAN and Hard Phones on the Voice VLAN

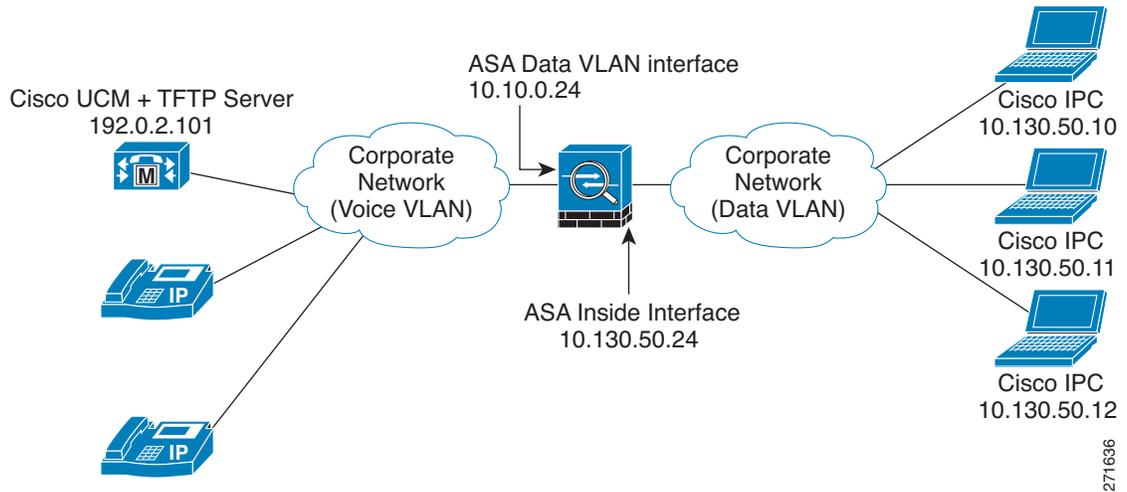

```

object network obj-10.130.50.0
  subnet 10.130.50.0 255.255.255.0
  nat (data,voice) dynamic 192.0.2.10
object network obj-10.130.50.5
  host 10.130.50.5
  nat (data,voice) static 192.0.2.101
access-list pp extended permit udp any host 10.130.50.5 eq 69
access-list pp extended permit tcp any host 10.130.50.5 eq 2000
access-list pp extended permit tcp any host 10.130.50.5 eq 5060
access-list pp extended permit tcp any host 10.130.50.5 eq 3804
access-group pp in interface data
crypto ca generate rsa label cucmtftp_kp modulus 1024
crypto ca trustpoint cucm_tftp_server
  enrollment self
  keypair cucmtftp_kp
crypto ca enroll cucm_tftp_server
crypto ca trustpoint capf
  enrollment terminal
crypto ca authenticate capf
ctl-file myctl
  record-entry cucm-tftp trustpoint cucm_tftp_server address 10.130.50.5
  record-entry capf trustpoint capf address 10.130.50.5
  no shutdown
tls-proxy mytls
  server trust-point _internal_PP_myctl
media-termination my_mediaterm
  address 10.130.50.2
phone-proxy mypp
  media-termination my_mediaterm
  tftp-server address 10.10.0.20 interface inside
  tls-proxy mytls
  ctl-file myctl
  cipc security-mode authenticated
class-map sec_sccp
  match port tcp eq 2443
class-map sec_sip
  match port tcp eq 5061
policy-map pp_policy
  class sec_sccp
    inspect skinny phone-proxy mypp

```

271636

```

class sec_sip
  inspect sip phone-proxy mypp
service-policy pp_policy interface data

```

Feature History for the Phone Proxy

Table 48-7 lists the release history for this feature.

Table 48-7 Feature History for Cisco Phone Proxy

Feature Name	Releases	Feature Information
Cisco Phone Proxy	8.0(4)	<p>The phone proxy feature was introduced. The following new commands were introduced.</p> <p>cipc security-mode authenticated, clear configure ctl, clear configure phone-proxy, cluster-ctl-file, cluster-mode nonsecure, ctl-file (global), ctl-file (phone proxy), debug phone proxy, disable service-settings, media-termination address, phone-proxy, proxy-server, record-entry, sast, show phone-proxy, show running-config ctl, show running-config phone-proxy, timeout secure-phones, tftp-server address.</p>
NAT for the media termination address	8.1(2)	<p>The media-termination address command was changed to allow for NAT:</p> <p>[no] media-termination address ip_address interface intf_name</p> <p>Where the interface <i>inft_name</i> keyword was added.</p> <p>The rtp-min-port and rtp-max-ports keywords were removed from the command syntax and included as a separate command:</p> <p>rtp-min-port port1 rtp-max-port port2</p>



CHAPTER 49

Configuring the TLS Proxy for Encrypted Voice Inspection

This chapter describes how to configure the adaptive security appliance for the TLS Proxy for Encrypted Voice Inspection feature.

This chapter includes the following sections:

- [Information about the TLS Proxy for Encrypted Voice Inspection, page 49-1](#)
- [Licensing for the TLS Proxy, page 49-5](#)
- [Prerequisites for the TLS Proxy for Encrypted Voice Inspection, page 49-7](#)
- [Configuring the TLS Proxy for Encrypted Voice Inspection, page 49-7](#)
- [Monitoring the TLS Proxy, page 49-15](#)
- [Feature History for the TLS Proxy for Encrypted Voice Inspection, page 49-17](#)

Information about the TLS Proxy for Encrypted Voice Inspection


End-to-end encryption often leaves network security appliances “blind” to media and signaling traffic, which can compromise access control and threat prevention security functions. This lack of visibility can result in a lack of interoperability between the firewall functions and the encrypted voice, leaving businesses unable to satisfy both of their key security requirements.

The ASA is able to intercept and decrypt encrypted signaling from Cisco encrypted endpoints to the Cisco Unified Communications Manager (Cisco UCM), and apply the required threat protection and access control. It can also ensure confidentiality by re-encrypting the traffic onto the Cisco UCM servers.

Typically, the ASA TLS Proxy functionality is deployed in campus unified communications network. This solution is ideal for deployments that utilize end to end encryption and firewalls to protect Unified Communications Manager servers.

The security appliance in [Figure 49-1](#) serves as a proxy for both client and server, with Cisco IP Phone and Cisco UCM interaction.

Figure 49-1 TLS Proxy Flow

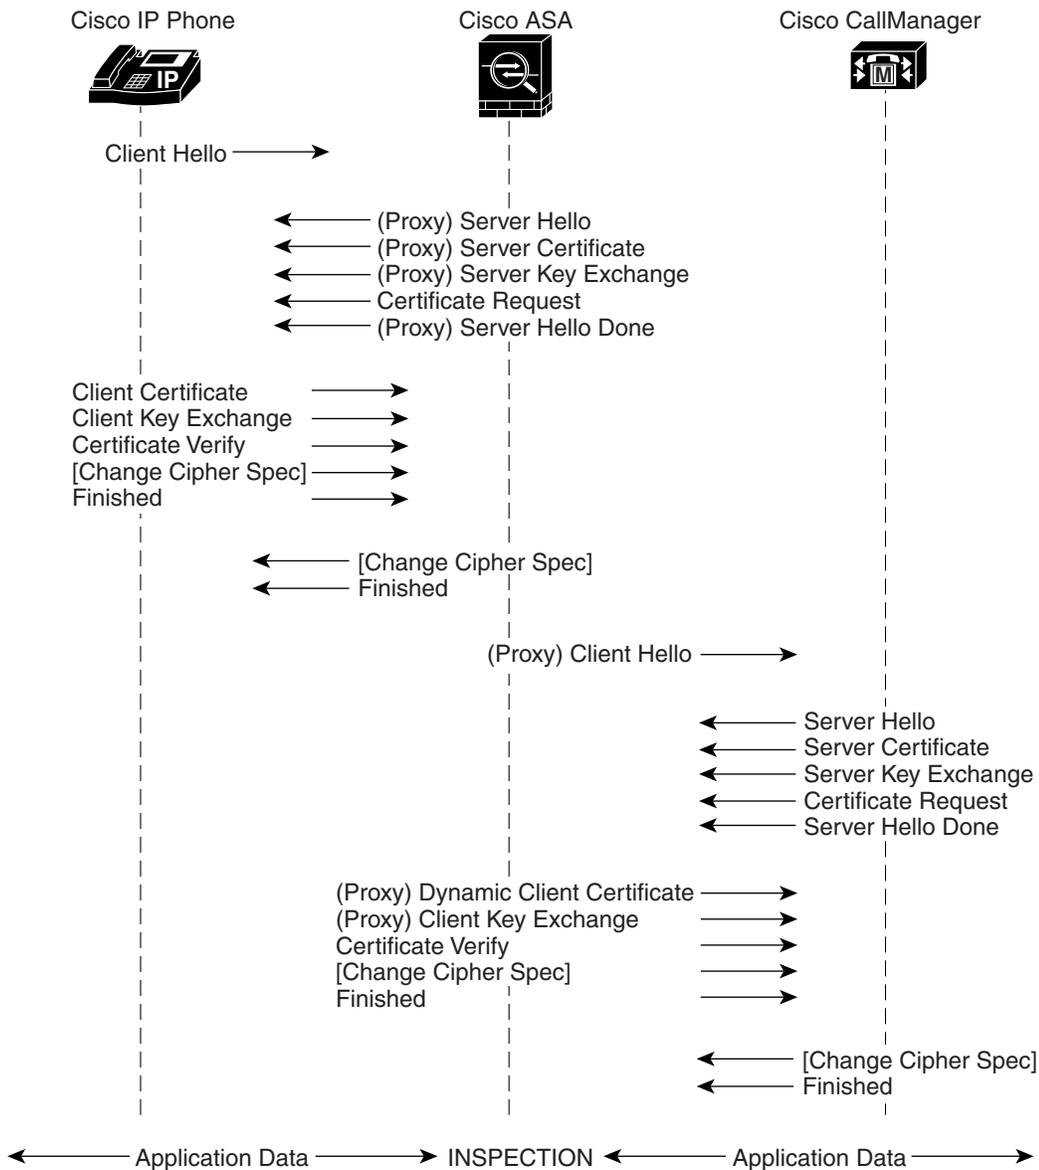

182831

Decryption and Inspection of Unified Communications Encrypted Signaling

With encrypted voice inspection, the security appliance decrypts, inspects and modifies (as needed, for example, performing NAT fixup), and re-encrypts voice signaling traffic while all of the existing VoIP inspection functions for Skinny and SIP protocols are preserved. Once voice signaling is decrypted, the plaintext signaling message is passed to the existing inspection engines.

The security appliance acts as a TLS proxy between the Cisco IP Phone and Cisco UCM. The proxy is transparent for the voice calls between the phone and the Cisco UCM. Cisco IP Phones download a Certificate Trust List from the Cisco UCM before registration which contains identities (certificates) of the devices that the phone should trust, such as TFTP servers and Cisco UCM servers. To support server

proxy, the CTL file must contain the certificate that the security appliance creates for the Cisco UCMs. To proxy calls on behalf of the Cisco IP Phone, the security appliance presents a certificate that the Cisco UCM can verify, which is a Local Dynamic Certificate for the phone, issued by the certificate authority on the security appliance.

TLS proxy is supported by the Cisco Unified CallManager Release 5.1 and later. You should be familiar with the security features of the Cisco UCM. For background and detailed description of Cisco UCM security, see the Cisco Unified CallManager document:


http://www.cisco.com/univercd/cc/td/doc/product/voice/c_callmg/5_0/sec_vir/ae/sec504/index.htm

TLS proxy applies to the encryption layer and must be configured with an application layer protocol inspection. You should be familiar with the inspection features on the ASA, especially Skinny and SIP inspection.

CTL Client Overview

The CTL Client application supplied by Cisco Unified CallManager Release 5.1 and later supports a TLS proxy server (firewall) in the CTL file. [Figure 49-2](#) through [Figure 49-5](#) illustrate the TLS proxy features supported in the CTL Client.

Figure 49-2 CTL Client TLS Proxy Features — Add Firewall

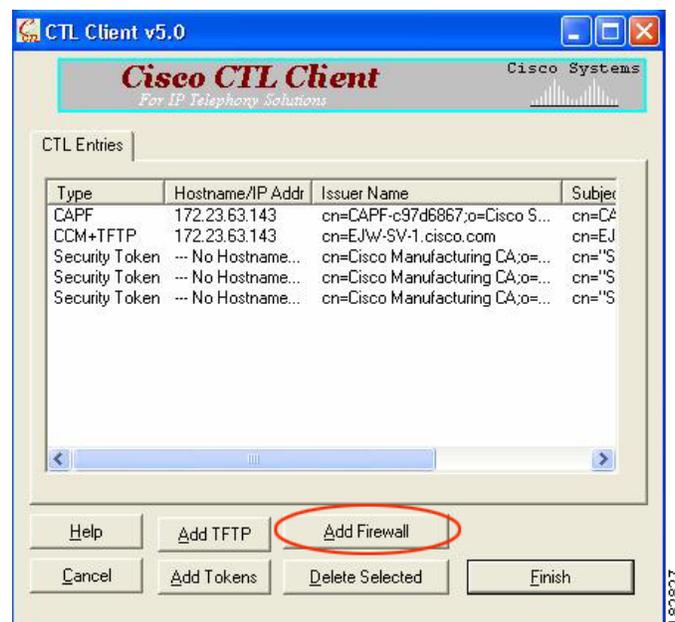

[Figure 49-2](#) shows support for adding a CTL entry consisting of the security appliance as the TLS proxy.

Figure 49-3 CTL Client TLS Proxy Features – ASA IP Address or Domain Name

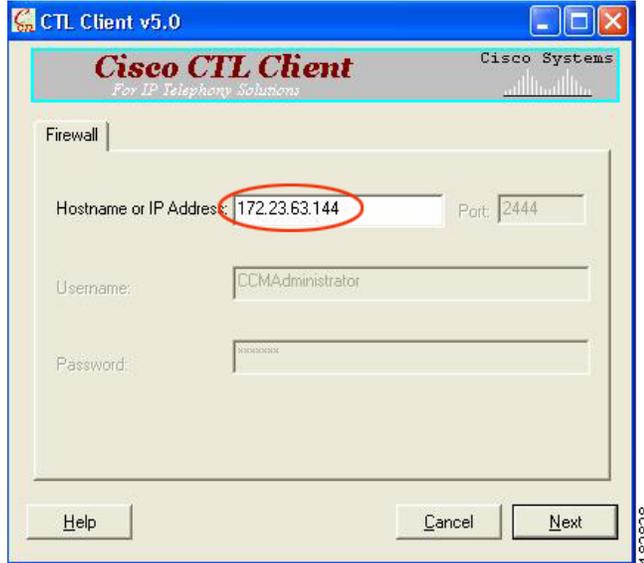


Figure 49-3 shows support for entering the security appliance IP address or domain name in the CTL Client.

Figure 49-4 CTL Client TLS Proxy Features – CTL Entry for ASA


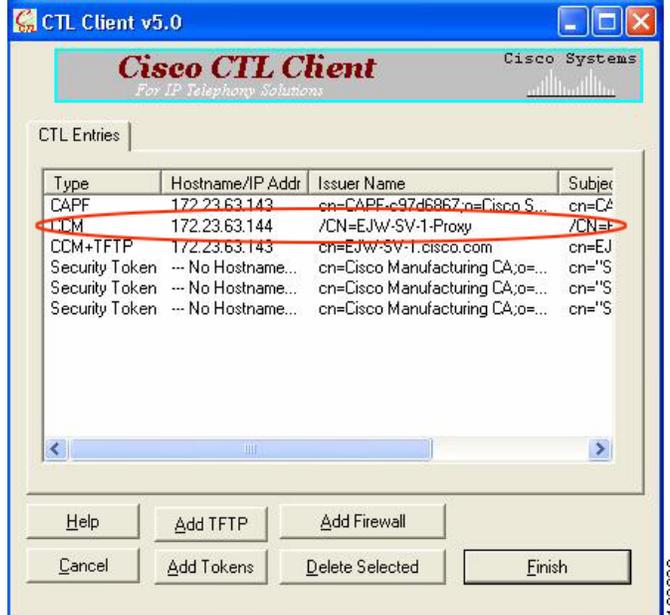


Figure 49-4 shows that the CTL entry for the security appliance as the TLS proxy has been added. The CTL entry is added after the CTL Client connects to the CTL Provider service on the security appliance and retrieves the proxy certificate.

Figure 49-5 CTL Client TLS Proxy Features — CTL File Installed on the ASA

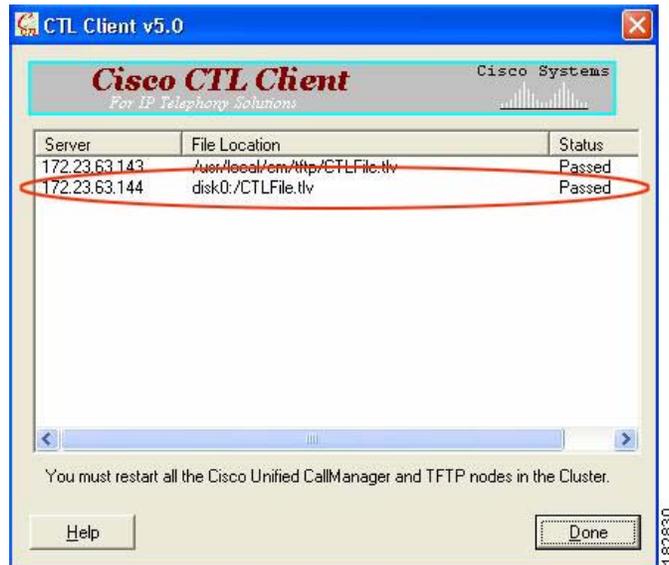

The security appliance does not store the raw CTL file in the flash, rather, it parses the CTL file and installs appropriate trustpoints. Figure 49-5 indicates the installation was successful.

Licensing for the TLS Proxy

The TLS proxy for encrypted voice inspection feature supported by the ASA require a Unified Communications Proxy license.

The following table shows the Unified Communications Proxy license details by platform:



Note

This feature is not available on No Payload Encryption models.

Model	License Requirement ¹
ASA 5505	Base License and Security Plus License: 2 sessions. <i>Optional license: 24 sessions.</i>
ASA 5510	Base License and Security Plus License: 2 sessions. <i>Optional licenses: 24, 50, or 100 sessions.</i>
ASA 5520	Base License: 2 sessions. <i>Optional licenses: 24, 50, 100, 250, 500, 750, or 1000 sessions.</i>
ASA 5540	Base License: 2 sessions. <i>Optional licenses: 24, 50, 100, 250, 500, 750, 1000, or 2000 sessions.</i>
ASA 5550	Base License: 2 sessions. <i>Optional licenses: 24, 50, 100, 250, 500, 750, 1000, 2000, or 3000 sessions.</i>

Model	License Requirement ¹
ASA 5580	Base License: 2 sessions. <i>Optional licenses: 24, 50, 100, 250, 500, 750, 1000, 2000, 3000, 5000, or 10,000 sessions.</i> ²
ASA 5512-X	Base License: 2 sessions. <i>Optional licenses: 24, 50, 100, 250, or 500 sessions.</i>
ASA 5515-X	Base License: 2 sessions. <i>Optional licenses: 24, 50, 100, 250, or 500 sessions.</i>
ASA 5525-X	Base License: 2 sessions. <i>Optional licenses: 24, 50, 100, 250, 500, 750, or 1000 sessions.</i>
ASA 5545-X	Base License: 2 sessions. <i>Optional licenses: 24, 50, 100, 250, 500, 750, 1000, or 2000 sessions.</i>
ASA 5555-X	Base License: 2 sessions. <i>Optional licenses: 24, 50, 100, 250, 500, 750, 1000, 2000, or 3000 sessions.</i>
ASA 5585-X with SSP-10	Base License: 2 sessions. <i>Optional licenses: 24, 50, 100, 250, 500, 750, 1000, 2000, or 3000 sessions.</i>
ASA 5585-X with SSP-20, -40, or -60	Base License: 2 sessions. <i>Optional licenses: 24, 50, 100, 250, 500, 750, 1000, 2000, 3000, 5000, or 10,000 sessions.</i> ²

- The following applications use TLS proxy sessions for their connections. Each TLS proxy session used by these applications (and only these applications) is counted against the UC license limit:
 - Phone Proxy
 - Presence Federation Proxy
 - Encrypted Voice Inspection

Other applications that use TLS proxy sessions do not count towards the UC limit, for example, Mobility Advantage Proxy (which does not require a license) and IME (which requires a separate IME license).

Some UC applications might use multiple sessions for a connection. For example, if you configure a phone with a primary and backup Cisco Unified Communications Manager, there are 2 TLS proxy connections, so 2 UC Proxy sessions are used.

You independently set the TLS proxy limit using the **tls-proxy maximum-sessions** command. To view the limits of your model, enter the **tls-proxy maximum-sessions ?** command. When you apply a UC license that is higher than the default TLS proxy limit, the ASA automatically sets the TLS proxy limit to match the UC limit. The TLS proxy limit takes precedence over the UC license limit; if you set the TLS proxy limit to be less than the UC license, then you cannot use all of the sessions in your UC license.

Note: For license part numbers ending in “K8” (for example, licenses under 250 users), TLS proxy sessions are limited to 1000. For license part numbers ending in “K9” (for example, licenses 250 users or larger), the TLS proxy limit depends on the configuration, up to the model limit. K8 and K9 refer to whether the license is restricted for export: K8 is unrestricted, and K9 is restricted.

Note: If you clear the configuration (using the **clear configure all** command, for example), then the TLS proxy limit is set to the default for your model; if this default is lower than the UC license limit, then you see an error message to use the **tls-proxy maximum-sessions** command to raise the limit again. If you use failover and enter the **write standby** command on the primary unit to force a configuration synchronization, the **clear configure all** command is generated on the secondary unit automatically, so you may see the warning message on the secondary unit. Because the configuration synchronization restores the TLS proxy limit set on the primary unit, you can ignore the warning.

You might also use SRTP encryption sessions for your connections:

- For K8 licenses, SRTP sessions are limited to 250.
- For K9 licenses, there is not limit.

Note: Only calls that require encryption/decryption for media are counted towards the SRTP limit; if passthrough is set for the call, even if both legs are SRTP, they do not count towards the limit.

- With the 10,000-session UC license, the total combined sessions can be 10,000, but the maximum number of Phone Proxy sessions is 5000.

Table 49-1 shows the default and maximum TLS session details by platform.

Table 49-1 Default and Maximum TLS Sessions on the Security Appliance

Security Appliance Platform	Default TLS Sessions	Maximum TLS Sessions
ASA 5505	10	80
ASA 5510	100	200
ASA 5520	300	1200
ASA 5540	1000	4500
ASA 5550	2000	4500
ASA 5580	4000	13,000

For more information about licensing, see [Chapter 3, “Managing Feature Licenses.”](#)

Prerequisites for the TLS Proxy for Encrypted Voice Inspection

Before configuring TLS proxy, the following prerequisites are required:

- You must set clock on the security appliance before configuring TLS proxy. To set the clock manually and display clock, use the **clock set** and **show clock** commands. We recommend that the security appliance use the same NTP server as the Cisco Unified CallManager cluster. TLS handshake may fail due to certificate validation failure if clock is out of sync between the security appliance and the Cisco Unified CallManager server.
- 3DES-AES license is needed to interoperate with the Cisco Unified CallManager. AES is the default cipher used by the Cisco Unified CallManager and Cisco IP Phone.
- Import the following certificates which are stored on the Cisco UCM. These certificates are required by the ASA for the phone proxy.
 - Cisco_Manufacturing_CA
 - CAP-RTP-001
 - CAP-RTP-002
 - CAPF certificate (Optional)

If LSC provisioning is required or you have LSC enabled IP phones, you must import the CAPF certificate from the Cisco UCM. If the Cisco UCM has more than one CAPF certificate, you must import all of them to the ASA.

See [Chapter 48, “Configuring the Cisco Phone Proxy.”](#) For example, the CA Manufacturer certificate is required by the phone proxy to validate the IP phone certificate.

Configuring the TLS Proxy for Encrypted Voice Inspection

This section includes the following topics:

- [Task flow for Configuring the TLS Proxy for Encrypted Voice Inspection, page 49-8](#)
- [Creating Trustpoints and Generating Certificates, page 49-9](#)
- [Creating an Internal CA, page 49-10](#)

- [Creating a CTL Provider Instance, page 49-11](#)
- [Creating the TLS Proxy Instance, page 49-12](#)
- [Enabling the TLS Proxy Instance for Skinny or SIP Inspection, page 49-13](#)

Task flow for Configuring the TLS Proxy for Encrypted Voice Inspection

To configure the security appliance for TLS proxy, perform the following steps:

- Step 1** (Optional) Set the maximum number of TLS proxy sessions to be supported by the security appliance using the following command, for example:

```
hostname(config)# tls-proxy maximum-sessions 1200
```



Note The **tls-proxy maximum-sessions** command controls the memory size reserved for cryptographic applications such as TLS proxy. Crypto memory is reserved at the time of system boot. You may need to reboot the security appliance for the configuration to take effect if the configured maximum sessions number is greater than the currently reserved.

- Step 2** Create trustpoints and generate certificates for the TLS Proxy for Encrypted Voice Inspection. See [Creating Trustpoints and Generating Certificates, page 49-9](#).
- Step 3** Create the internal CA to sign the LDC for Cisco IP Phones. See [Creating an Internal CA, page 49-10](#).
- Step 4** Create the CTL provider instance. See [Creating a CTL Provider Instance, page 49-11](#).
- Step 5** Create the TLS proxy instance. See [Creating the TLS Proxy Instance, page 49-12](#).
- Step 6** Enable the TLS proxy y with SIP and Skinny inspection. See [Enabling the TLS Proxy Instance for Skinny or SIP Inspection, page 49-13](#).
- Step 7** Export the local CA certificate (ldc_server) and install it as a trusted certificate on the Cisco UCM server.

- a. Use the following command to export the certificate if a trust-point with **proxy-ldc-issuer** is used as the signer of the dynamic certificates, for example:

```
hostname(config)# crypto ca export ldc_server identity-certificate
```

- b. For the embedded local CA server LOCAL-CA-SERVER, use the following command to export its certificate, for example:

```
hostname(config)# show crypto ca server certificate
```

Save the output to a file and import the certificate on the Cisco UCM. For more information, see the Cisco Unified CallManager document:

http://www.cisco.com/univercd/cc/td/doc/product/voice/c_callmg/5_0/iptp_adm/504/iptpch6.htm#wp1040848

After this step, you may use the Display Certificates function on the Cisco Unified CallManager GUI to verify the installed certificate:

http://www.cisco.com/univercd/cc/td/doc/product/voice/c_callmg/5_0/iptp_adm/504/iptpch6.htm#wp1040354

- Step 8** Run the CTL Client application to add the server proxy certificate (ccm_proxy) to the CTL file and install the CTL file on the security appliance. See the Cisco Unified CallManager document for information on how to configure and use CTL Client:

http://www.cisco.com/univercd/cc/td/doc/product/voice/c_callmg/5_1/nci/p08/secuauth.htm



Note You will need the CTL Client that is released with Cisco Unified CallManager Release 5.1 to interoperate with the security appliance. See the “[CTL Client Overview](#)” section on page 49-3 for more information regarding TLS proxy support.

Creating Trustpoints and Generating Certificates

The Cisco UCM proxy certificate could be self-signed or issued by a third-party CA. The certificate is exported to the CTL client.

Prerequisites

Import the required certificates, which are stored on the Cisco UCM. See the “[Certificates from the Cisco UCM](#)” section on page 48-7 and the “[Importing Certificates from the Cisco UCM](#)” section on page 48-15.

	Command	Purpose
Step 1	<pre>hostname(config)# crypto key generate rsa label key-pair-label modulus size</pre> <p>Examples:</p> <pre>hostname(config)# crypto key generate rsa label ccm_proxy_key modulus 1024 hostname(config)# crypto key generate rsa label ldc_signer_key modulus 1024 hostname(config)# crypto key generate rsa label phone_common modulus 1024</pre>	<p>Creates the RSA keypair that can be used for the trustpoints.</p> <p>The keypair is used by the self-signed certificate presented to the local domain containing the Cisco UP (proxy for the remote entity).</p> <p>Note We recommend that you create a different key pair for each role.</p>
Step 2	<pre>hostname(config)# crypto ca trustpoint trustpoint_name</pre> <p>Example:</p> <pre>hostname(config)# ! for self-signed CCM proxy certificate hostname(config)# crypto ca trustpoint ccm_proxy</pre>	<p>Enters the trustpoint configuration mode for the specified trustpoint so that you can create the trustpoint for the Cisco UMA server.</p> <p>A trustpoint represents a CA identity and possibly a device identity, based on a certificate issued by the CA.</p>
Step 3	<pre>hostname(config-ca-trustpoint)# enrollment self</pre>	Generates a self-signed certificate.
Step 4	<pre>hostname(config-ca-trustpoint)# fqdn none</pre>	Specifies not to include a fully qualified domain name (FQDN) in the Subject Alternative Name extension of the certificate during enrollment.

	Command	Purpose
Step 5	<pre>hostname(config-ca-trustpoint)# subject-name X.500_name Example: hostname(config-ca-trustpoint)# subject-name cn=EJW-SV-1-Proxy</pre>	<p>Includes the indicated subject DN in the certificate during enrollment</p> <p>Cisco IP Phones require certain fields from the X.509v3 certificate to be present to validate the certificate via consulting the CTL file. Consequently, the subject-name entry must be configured for a proxy certificate trustpoint. The subject name must be composed of the ordered concatenation of the CN, OU and O fields. The CN field is mandatory; the others are optional.</p> <p> Note Each of the concatenated fields (when present) are separated by a semicolon, yielding one of the following forms: CN=xxx;OU=yyy;O=zzz CN=xxx;OU=yyy CN=xxx;O=zzz CN=xxx</p>
Step 6	<pre>hostname(config-ca-trustpoint)# keypair keyname Example: hostname(config-ca-trustpoint)# keypair ccm_proxy_key</pre>	Specifies the key pair whose public key is to be certified.
Step 7	<pre>hostname(config-ca-trustpoint)# exit</pre>	Exits from the CA Trustpoint configuration mode.
Step 8	<pre>hostname(config)# crypto ca enroll trustpoint Example: hostname(config)# crypto ca enroll ccm_proxy</pre>	Starts the enrollment process with the CA and specifies the name of the trustpoint to enroll with.

What to Do Next

Once you have created the trustpoints and generated the certificates, create the internal CA to sign the LDC for Cisco IP Phones. See [Creating an Internal CA, page 49-10](#).

Creating an Internal CA

Create an internal local CA to sign the LDC for Cisco IP Phones.

This local CA is created as a regular self-signed trustpoint with **proxy-ldc-issuer** enabled. You can use the embedded local CA LOCAL-CA-SERVER on the ASA to issue the LDC.

	Command	Purpose
Step 1	<pre>hostname(config)# crypto ca trustpoint trustpoint_name Example: hostname(config)# ! for the internal local LDC issuer hostname(config)# crypto ca trustpoint ldc_server</pre>	Enters the trustpoint configuration mode for the specified trustpoint so that you can create the trustpoint for the LDC issuer.
Step 2	<pre>hostname(config-ca-trustpoint)# enrollment self</pre>	Generates a self-signed certificate.

	Command	Purpose
Step 3	hostname(config-ca-trustpoint)# proxy-ldc-issuer	Issues TLS proxy local dynamic certificates. The proxy-ldc-issuer command grants a crypto trustpoint the role as local CA to issue the LDC and can be accessed from crypto ca trustpoint configuration mode. The proxy-ldc-issuer command defines the local CA role for the trustpoint to issue dynamic certificates for TLS proxy. This command can only be configured under a trustpoint with "enrollment self."
Step 4	hostname(config-ca-trustpoint)# fqdn fqdn Example: hostname(config-ca-trustpoint)# fqdn my-ldc-ca.example.com	Includes the indicated FQDN in the Subject Alternative Name extension of the certificate during enrollment.
Step 5	hostname(config-ca-trustpoint)# subject-name X.500_name Example: hostname(config-ca-trustpoint)# subject-name cn=FW_LDC_SIGNER_172_23_45_200	Includes the indicated subject DN in the certificate during enrollment
Step 6	hostname(config-ca-trustpoint)# keypair keyname Example: hostname(config-ca-trustpoint)# keypair ldc_signer_key	Specifies the key pair whose public key is to be certified.
Step 7	hostname(config-ca-trustpoint)# exit	Exits from the CA Trustpoint configuration mode.
Step 8	hostname(config)# crypto ca enroll trustpoint Example: hostname(config)# crypto ca enroll ldc_server	Starts the enrollment process with the CA and specifies the name of the trustpoint to enroll with.

What to Do Next

Once you have created the internal CA, create the CTL provider instance. See [Creating a CTL Provider Instance](#), page 49-11.

Creating a CTL Provider Instance

Create a CTL Provider instance in preparation for a connection from the CTL Client.

The default port number listened by the CTL Provider is TCP 2444, which is the default CTL port on the Cisco UCM. Use the **service port** command to change the port number if a different port is used by the Cisco UCM cluster.

	Command	Purpose
Step 1	hostname(config)# ctl-provider <i>ctl_name</i> Example: hostname(config)# ctl-provider my_ctl	Enters the CTL provider configuration mode so that you can create the Certificate Trust List provider instance.
Step 2	hostname(config-ctl-provider)# client interface <i>if_name</i> <i>ipv4_addr</i> Example: hostname(config-ctl-provider)# client interface inside address 172.23.45.1	Specifies clients allowed to connect to the Certificate Trust List provider. Where interface <i>if_name</i> specifies the interface allowed to connect and <i>ipv4_addr</i> specifies the IP address of the client. More than one command may be issued to define multiple clients.
Step 3	hostname(config-ctl-provider)# client username <i>user_name</i> password <i>password</i> encrypted Example: hostname(config-ctl-provider)# client username CCMAdministrator password XXXXXX encrypted	Specifies the username and password for client authentication. The username and password must match the username and password for Cisco UCM administration.
Step 4	hostname(config-ctl-provider)# export certificate <i>trustpoint_name</i> Example: hostname(config-ctl-provider)# export certificate	Specifies the certificate to be exported to the client. The certificate will be added to the Certificate Trust List file composed by the CTL client. The trustpoint name in the export command is the proxy certificate for the Cisco UCM server.
Step 5	hostname(config-ctl-provider)# ctl install	Enables the CTL provider to parse the CTL file from the CTL client and install trustpoints for entries from the CTL file. Trustpoints installed by this command have names prefixed with "_internal_CTL_<ctl_name>."

What to Do Next

Once you have created the CTL provider instance, create the TLS proxy instance. See [Creating the TLS Proxy Instance](#), page 49-12.

Creating the TLS Proxy Instance

Create the TLS proxy instance to handle the encrypted signaling.

	Command	Purpose
Step 1	hostname(config)# tls-proxy <i>proxy_name</i> Example: hostname(config)# tls-proxy my_proxy	Creates the TLS proxy instance.
Step 2	hostname(config-tlsp)# server trust-point <i>proxy_trustpoint</i> Example: hostname(config-tlsp)# server trust-point ccm_proxy	Specifies the proxy trustpoint certificate to present during TLS handshake. The server command configures the proxy parameters for the original TLS server. In other words, the parameters for the ASA to act as the server during a TLS handshake, or facing the original TLS client.
Step 3	hostname(config-tlsp)# client ldc issuer <i>ca_tp_name</i> Example: hostname(config-tlsp)# client ldc issuer ldc_server	Sets the local dynamic certificate issuer. The local CA to issue client dynamic certificates is defined by the crypto ca trustpoint command and the trustpoint must have proxy-ldc-issuer configured, or the default local CA server (LOCAL-CA-SERVER). Where ldc issuer ca_tp_name specifies the local CA trustpoint to issue client dynamic certificates.
Step 4	hostname(config-tlsp)# client ldc key-pair <i>key_label</i> Example: hostname(config-tlsp)# client ldc key-pair phone_common	Sets the keypair. The keypair value must have been generated with the crypto key generate command.
Step 5	hostname(config-tlsp)# client cipher-suite <i>cipher_suite</i> Example: hostname(config-tlsp)# client cipher-suite aes128-sha1 aes256-sha1	Sets the user-defined cipher suite. For client proxy (the proxy acts as a TLS client to the server), the user-defined cipher suite replaces the default cipher suite, or the one defined by the ssl encryption command. You can use this command to achieve difference ciphers between the two TLS sessions. You should use AES ciphers with the CallManager server.

What to Do Next

Once you have created TLS proxy instance, enable the TLS proxy instance for Skinny and SIP inspection. See [Enabling the TLS Proxy Instance for Skinny or SIP Inspection](#), page 49-13.

Enabling the TLS Proxy Instance for Skinny or SIP Inspection

Enable TLS proxy for the Cisco IP Phones and Cisco UCMs in Skinny or SIP inspection. The following procedure shows how to enable the TLS proxy instance for Skinny inspection.

	Command	Purpose
Step 1	hostname(config)# class-map <i>class_map_name</i> Example: hostname(config)# class-map sec_skinny	Configures the secure Skinny class of traffic to inspect. Where <i>class_map_name</i> is the name of the Skinny class map.
Step 2	hostname(config-cmap)# match port tcp eq 2443	Matches the TCP port 2443 to which you want to apply actions for secure Skinny inspection
Step 3	hostname(config-cmap)# exit	
Step 4	hostname(config)# policy-map type inspect skinny <i>policy_map_name</i> Example: hostname(config)# policy-map type inspect skinny skinny_inspect	Defines special actions for Skinny inspection application traffic.
Step 5	hostname(config-pmap)# parameters hostname(config-pmap-p)# ! Skinny inspection parameters	Specifies the parameters for Skinny inspection. Parameters affect the behavior of the inspection engine. The commands available in parameters configuration mode depend on the application.
Step 6	hostname(config-pmap-p)# exit	Exits from Policy Map configuration mode.
Step 7	hostname(config)# policy-map <i>name</i> Example: hostname(config)# policy-map global_policy	Configure the policy map and attach the action to the class of traffic.
Step 8	hostname(config-pmap)# class inspection_default	Specifies the default class map. The configuration includes a default Layer 3/4 class map that the ASA uses in the default global policy. It is called inspection_default and matches the default inspection traffic,
Step 9	hostname(config-pmap-c)# inspect skinny <i>skinny_map</i> Example: hostname(config-pmap-c)# inspect skinny skinny_inspect	Enables SCCP (Skinny) application inspection.
Step 10	hostname(config-pmap)# class <i>classmap_name</i> Example: hostname(config-pmap)# class sec_skinny	Assigns a class map to the policy map where you can assign actions to the class map traffic.
Step 11	hostname(config-pmap-c)# inspect skinny <i>skinny_map</i> tls-proxy <i>proxy_name</i> Example: hostname(config-pmap-c)# inspect skinny skinny_inspect tls-proxy my_proxy	Enables TLS proxy for the specified inspection session.
Step 12	hostname(config-pmap-c)# exit	Exits from the Policy Map configuration mode.
Step 13	hostname(config)# service-policy <i>polycymap_name</i> global Example: hostname(config)# service-policy global_policy global	Enables the service policy on all interfaces.

Monitoring the TLS Proxy

You can enable TLS proxy debug flags along with SSL syslogs to debug TLS proxy connection problems. For example, using the following commands to enable TLS proxy-related debug and syslog output only:

```
hostname(config)# debug inspect tls-proxy events
hostname(config)# debug inspect tls-proxy errors
hostname(config)# logging enable
hostname(config)# logging timestamp
hostname(config)# logging list loglist message 711001
hostname(config)# logging list loglist message 725001-725014
hostname(config)# logging list loglist message 717001-717038
hostname(config)# logging buffer-size 1000000
hostname(config)# logging buffered loglist
hostname(config)# logging debug-trace
```

The following is sample output reflecting a successful TLS proxy session setup for a SIP phone:

```
hostname(config)# show log

Apr 17 2007 23:13:47: %ASA-6-725001: Starting SSL handshake with client
outside:133.9.0.218/49159 for TLSv1 session.
Apr 17 2007 23:13:47: %ASA-7-711001: TLSP cbad5120: Set up proxy for Client
outside:133.9.0.218/49159 <-> Server inside:195.168.2.201/5061
Apr 17 2007 23:13:47: %ASA-7-711001: TLSP cbad5120: Using trust point 'local_ccm' with the
Client, RT proxy cbae1538
Apr 17 2007 23:13:47: %ASA-7-711001: TLSP cbad5120: Waiting for SSL handshake from Client
outside:133.9.0.218/49159.
Apr 17 2007 23:13:47: %ASA-7-725010: Device supports the following 4 cipher(s).
Apr 17 2007 23:13:47: %ASA-7-725011: Cipher[1] : RC4-SHA
Apr 17 2007 23:13:47: %ASA-7-725011: Cipher[2] : AES128-SHA
Apr 17 2007 23:13:47: %ASA-7-725011: Cipher[3] : AES256-SHA
Apr 17 2007 23:13:47: %ASA-7-725011: Cipher[4] : DES-CBC3-SHA
Apr 17 2007 23:13:47: %ASA-7-725008: SSL client outside:133.9.0.218/49159 proposes the
following 2 cipher(s).
Apr 17 2007 23:13:47: %ASA-7-725011: Cipher[1] : AES256-SHA
Apr 17 2007 23:13:47: %ASA-7-725011: Cipher[2] : AES128-SHA
Apr 17 2007 23:13:47: %ASA-7-725012: Device chooses cipher : AES128-SHA for the SSL
session with client outside:133.9.0.218/49159
Apr 17 2007 23:13:47: %ASA-7-725014: SSL lib error. Function: SSL23_READ Reason: ssl
handshake failure
Apr 17 2007 23:13:47: %ASA-7-717025: Validating certificate chain containing 1
certificate(s).
Apr 17 2007 23:13:47: %ASA-7-717029: Identified client certificate within certificate
chain. serial number: 01, subject name: cn=SEP0017593F50A8.
Apr 17 2007 23:13:47: %ASA-7-717030: Found a suitable trustpoint
_internal_ejw-sv-2_cn=CAPF-08a91c01 to validate certificate.
Apr 17 2007 23:13:47: %ASA-6-717022: Certificate was successfully validated. serial
number: 01, subject name: cn=SEP0017593F50A8.
Apr 17 2007 23:13:47: %ASA-6-717028: Certificate chain was successfully validated with
warning, revocation status was not checked.
Apr 17 2007 23:13:47: %ASA-6-725002: Device completed SSL handshake with client
outside:133.9.0.218/49159
Apr 17 2007 23:13:47: %ASA-6-725001: Starting SSL handshake with server
inside:195.168.2.201/5061 for TLSv1 session.
Apr 17 2007 23:13:47: %ASA-7-725009: Device proposes the following 2 cipher(s) to server
inside:195.168.2.201/5061
Apr 17 2007 23:13:47: %ASA-7-725011: Cipher[1] : AES128-SHA
Apr 17 2007 23:13:47: %ASA-7-725011: Cipher[2] : AES256-SHA
Apr 17 2007 23:13:47: %ASA-7-711001: TLSP cbad5120: Generating LDC for client
'cn=SEP0017593F50A8', key-pair 'phone_common', issuer 'LOCAL-CA-SERVER', RT proxy cbae1538
Apr 17 2007 23:13:47: %ASA-7-711001: TLSP cbad5120: Started SSL handshake with Server
```

```

Apr 17 2007 23:13:47: %ASA-7-711001: TLSP cbad5120: Data channel ready for the Client
Apr 17 2007 23:13:47: %ASA-7-725013: SSL Server inside:195.168.2.201/5061 choose cipher :
AES128-SHA
Apr 17 2007 23:13:47: %ASA-7-717025: Validating certificate chain containing 1
certificate(s).
Apr 17 2007 23:13:47: %ASA-7-717029: Identified client certificate within certificate
chain. serial number: 76022D3D9314743A, subject name: cn=EJW-SV-2.inside.com.
Apr 17 2007 23:13:47: %ASA-6-717022: Certificate was successfully validated. Certificate
is resident and trusted, serial number: 76022D3D9314743A, subject name:
cn=EJW-SV-2.inside.com.
Apr 17 2007 23:13:47: %ASA-6-717028: Certificate chain was successfully validated with
revocation status check.
Apr 17 2007 23:13:47: %ASA-6-725002: Device completed SSL handshake with server
inside:195.168.2.201/5061
Apr 17 2007 23:13:47: %ASA-7-711001: TLSP cbad5120: Data channel ready for the Server

```

Use the **show tls-proxy** commands with different options to check the active TLS proxy sessions. The following are some sample outputs:

```

hostname(config-tlsp)# show tls-proxy
Maximum number of sessions: 1200

TLS-Proxy 'sip_proxy': ref_cnt 1, seq# 3
  Server proxy:
    Trust-point: local_ccm
  Client proxy:
    Local dynamic certificate issuer: LOCAL-CA-SERVER
    Local dynamic certificate key-pair: phone_common
    Cipher suite: aes128-sha1 aes256-sha1
  Run-time proxies:
    Proxy 0xcbae1538: Class-map: sip_ssl, Inspect: sip
    Active sess 1, most sess 3, byte 3456043

TLS-Proxy 'proxy': ref_cnt 1, seq# 1
  Server proxy:
    Trust-point: local_ccm
  Client proxy:
    Local dynamic certificate issuer: ldc_signer
    Local dynamic certificate key-pair: phone_common
    Cipher-suite: <unconfigured>
  Run-time proxies:
    Proxy 0xcbadf720: Class-map: skinny_ssl, Inspect: skinny
    Active sess 1, most sess 1, byte 42916

hostname(config-tlsp)# show tls-proxy session count
2 in use, 4 most used

hostname(config-tlsp)# show tls-proxy session
2 in use, 4 most used
outside 133.9.0.211:50437 inside 195.168.2.200:2443 P:0xcbadf720(proxy) S:0xcbc48a08 byte
42940
outside 133.9.0.218:49159 inside 195.168.2.201:5061 P:0xcbae1538(sip_proxy) S:0xcbad5120
byte 8786

hostname(config-tlsp)# show tls-proxy session detail
2 in use, 4 most used
outside 133.9.0.211:50437 inside 195.168.2.200:2443 P:0xcbadf720(proxy) S:0xcbc48a08 byte
42940
  Client: State SSLOK Cipher AES128-SHA Ch 0xca55e498 TxQSize 0 LastTxLeft 0 Flags 0x1
  Server: State SSLOK Cipher AES128-SHA Ch 0xca55e478 TxQSize 0 LastTxLeft 0 Flags 0x9
Local Dynamic Certificate
Status: Available
Certificate Serial Number: 29
Certificate Usage: General Purpose

```

```

Public Key Type: RSA (1024 bits)
Issuer Name:
  cn=TLS-Proxy-Signer
Subject Name:
  cn=SEP0002B9EB0AAD
  o=Cisco Systems Inc
  c=US
Validity Date:
  start date: 09:25:41 PDT Apr 16 2007
  end date: 09:25:41 PDT Apr 15 2008
Associated Trustpoints:

outside 133.9.0.218:49159 inside 195.168.2.201:5061 P:0xcbae1538(sip_proxy) S:0xcbad5120
byte 8786
Client: State SSLOK Cipher AES128-SHA Ch 0xca55e398 TxQSize 0 LastTxLeft 0 Flags 0x1
Server: State SSLOK Cipher AES128-SHA Ch 0xca55e378 TxQSize 0 LastTxLeft 0 Flags 0x9
Local Dynamic Certificate
Status: Available
Certificate Serial Number: 2b
Certificate Usage: General Purpose
Public Key Type: RSA (1024 bits)
Issuer Name:
  cn=F1-ASA.default.domain.invalid
Subject Name:
  cn=SEP0017593F50A8
Validity Date:
  start date: 23:13:47 PDT Apr 16 2007
  end date: 23:13:47 PDT Apr 15 2008
Associated Trustpoints:

```

Feature History for the TLS Proxy for Encrypted Voice Inspection

[Table 49-2](#) lists the release history for this feature.

Table 49-2 Feature History for Cisco Phone Proxy

Feature Name	Releases	Feature Information
TLS Proxy	8.0(2)	The TLS proxy feature was introduced.



CHAPTER 50

Configuring Cisco Mobility Advantage

This chapter describes how to configure the adaptive security appliance for Cisco Unified Communications Mobility Advantage Proxy features.

This chapter includes the following sections:

- [Information about the Cisco Mobility Advantage Proxy Feature, page 50-1](#)
- [Licensing for the Cisco Mobility Advantage Proxy Feature, page 50-6](#)
- [Configuring Cisco Mobility Advantage, page 50-6](#)
- [Monitoring for Cisco Mobility Advantage, page 50-10](#)
- [Configuration Examples for Cisco Mobility Advantage, page 50-11](#)
- [Feature History for Cisco Mobility Advantage, page 50-14](#)

Information about the Cisco Mobility Advantage Proxy Feature

This section contains the following topics:

- [Cisco Mobility Advantage Proxy Functionality, page 50-1](#)
- [Mobility Advantage Proxy Deployment Scenarios, page 50-2](#)
- [Trust Relationships for Cisco UMA Deployments, page 50-5](#)


Cisco Mobility Advantage Proxy Functionality

To support Cisco UMA for the Cisco Mobility Advantage solution, the mobility advantage proxy (implemented as a TLS proxy) includes the following functionality:

- The ability to allow no client authentication during the handshake with clients.
- Allowing an imported PKCS-12 certificate to server as a proxy certificate.

The ASA includes an inspection engine to validate the Cisco UMA Mobile Multiplexing Protocol (MMP).

MMP is a data transport protocol for transmitting data entities between Cisco UMA clients and servers. As shown in [Figure 50-1](#), MMP must be run on top of a connection-oriented protocol (the underlying transport) and is intended to be run on top of a secure transport protocol such as TLS. The Orative Markup Language (OML) protocol is intended to be run on top of MMP for the purposes of data synchronization, as well as the HTTP protocol for uploading and downloading large files.

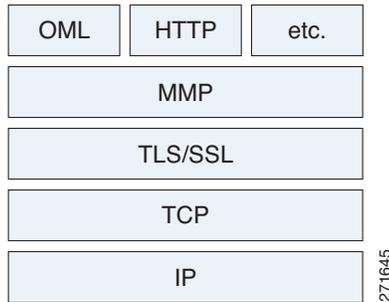Figure 50-1 MMP Stack

The TCP/TLS default port is 5443. There are no embedded NAT or secondary connections.

Cisco UMA client and server communications can be proxied via TLS, which decrypts the data, passes it to the inspect MMP module, and re-encrypt the data before forwarding it to the endpoint. The inspect MMP module verifies the integrity of the MMP headers and passes the OML/HTTP to an appropriate handler. The ASA takes the following actions on the MMP headers and data:

- Verifies that client MMP headers are well-formed. Upon detection of a malformed header, the TCP session is terminated.
- Verifies that client to server MMP header lengths are not exceeded. If an MMP header length is exceeded (4096), then the TCP session is terminated.
- Verifies that client to server MMP content lengths are not exceeded. If an entity content length is exceeded (4096), the TCP session is terminated.

**Note**

4096 is the value currently used in MMP implementations.

Because MMP headers and entities can be split across packets, the ASA buffers data to ensure consistent inspection. The SAPI (stream API) handles data buffering for pending inspection opportunities. MMP header text is treated as case insensitive and a space is present between header text and values. Reclaiming of MMP state is performed by monitoring the state of the TCP connection.

Mobility Advantage Proxy Deployment Scenarios

[Figure 50-2](#) and [Figure 50-3](#) show the two deployment scenarios for the TLS proxy used by the Cisco Mobility Advantage solution. In scenario 1 (the recommended deployment architecture), the ASA functions as both the firewall and TLS proxy. In scenario 2, the ASA functions as the TLS proxy only and works with an existing firewall. In both scenarios, the clients connect from the Internet.


In the scenario 1 deployment, the ASA is between a Cisco UMA client and a Cisco UMA server. The Cisco UMA client is an executable that is downloaded to each smartphone. The Cisco UMA client applications establishes a data connection, which is a TLS connection, to the corporate Cisco UMA server. The ASA intercepts the connections and inspects the data that the client sends to the Cisco UMA server.

**Note**

The TLS proxy for the Cisco Mobility Advantage solution does not support client authentication because the Cisco UMA client cannot present a certificate. The following commands can be used to disable authentication during the TLS handshake.

```
hostname(config)# tls-proxy my_proxy
hostname(config-tlsp)# no server authenticate-client
```

Figure 50-2 Security Appliance as Firewall with Mobility Advantage Proxy and MMP Inspection

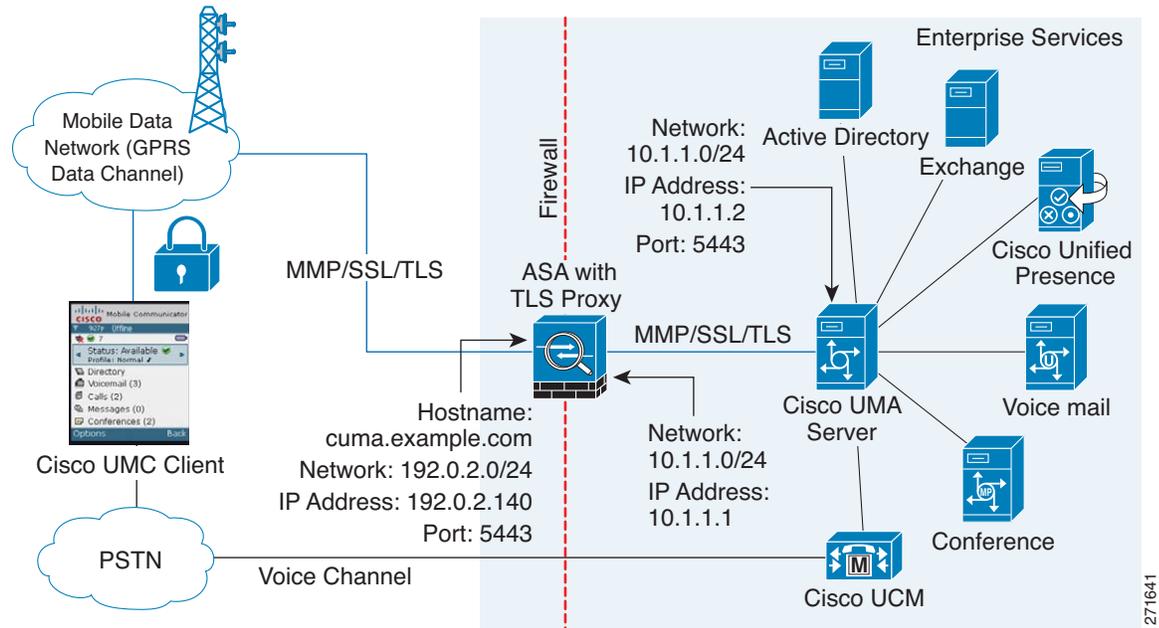

In [Figure 50-2](#), the ASA performs static NAT by translating the Cisco UMA server 10.1.1.2 IP address to 192.0.2.140.

[Figure 50-3](#) shows deployment scenario 2, where the ASA functions as the TLS proxy only and does not function as the corporate firewall. In this scenario, the ASA and the corporate firewall are performing NAT. The corporate firewall will not be able to predict which client from the Internet needs to connect to the corporate Cisco UMA server. Therefore, to support this deployment, you can take the following actions:

- Set up a NAT rule for inbound traffic that translates the destination IP address 192.0.2.41 to 172.16.27.41.
- Set up an interface PAT rule for inbound traffic translating the source IP address of every packet so that the corporate firewall does not need to open up a wildcard pinhole. The Cisco UMA server receives packets with the source IP address 192.0.12.183.


```
hostname(config)# object network obj-0.0.0.0-01
hostname(config-network-object)# subnet 0.0.0.0 0.0.0.0
hostname(config-network-object)# nat (outside,inside) dynamic 192.0.2.183
```

See [Chapter 30](#), “Configuring Network Object NAT” and [Chapter 31](#), “Configuring Twice NAT” for information.

**Note**

This interface PAT rule converges the Cisco UMA client IP addresses on the outside interface of the ASA into a single IP address on the inside interface by using different source ports. Performing this action is often referred to as “outside PAT”. “Outside PAT” is not recommended when TLS proxy for Cisco Mobility Advantage is enabled on the same interface of the ASA with phone proxy, Cisco Unified Presence, or any other features involving application inspection. “Outside PAT” is not supported completely by application inspection when embedded address translation is needed.

Figure 50-3 Cisco UMC/Cisco UMA Architecture – Scenario 2: Security Appliance as Mobility Advantage Proxy Only

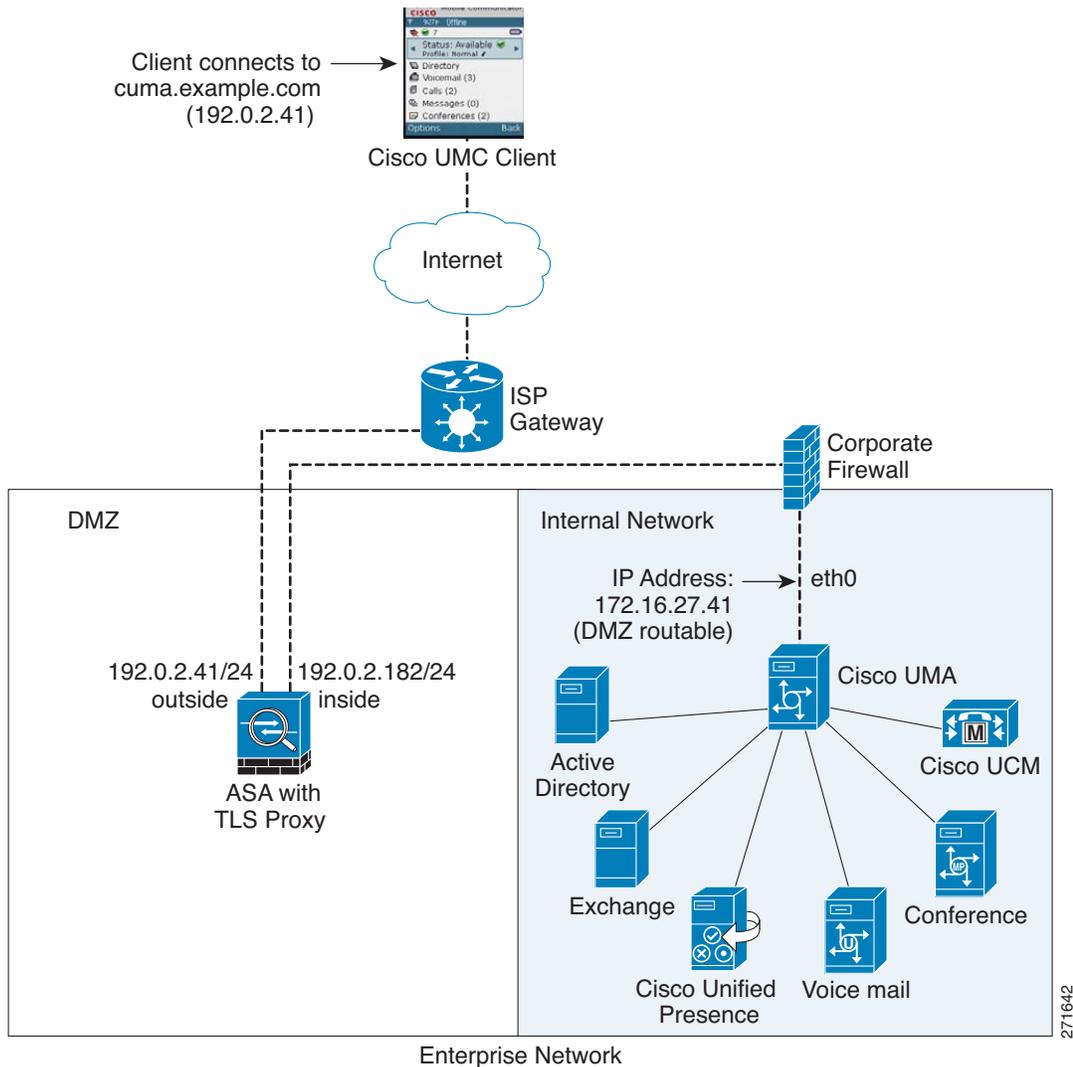

Mobility Advantage Proxy Using NAT/PAT

In both scenarios (Figure 50-2 and Figure 50-3), NAT can be used to hide the private address of the Cisco UMA servers.

In scenario 2 (Figure 50-3), PAT can be used to converge all client traffic into one source IP, so that the firewall does not have to open up a wildcard pinhole for inbound traffic.

```
hostname(config)# access-list cumc extended permit tcp any host 172.16.27.41 eq 5443
```

versus

```
hostname(config)# access-list cumc extended permit tcp host 192.0.2.183 host 172.16.27.41 eq 5443
```

Trust Relationships for Cisco UMA Deployments

To establish a trust relationship between the Cisco UMC client and the ASA, the ASA uses the Cisco UMA server certificate and keypair or the ASA obtains a certificate with the Cisco UMA server FQDN (certificate impersonation). Between the ASA and the Cisco UMA server, the ASA and Cisco UMA server use self-signed certificates or certificates issued by a local certificate authority.

Figure 50-4 shows how you can import the Cisco UMA server certificate onto the ASA. When the Cisco UMA server has already enrolled with a third-party CA, you can import the certificate with the private key onto the ASA. Then, the ASA has the full credentials of the Cisco UMA server. When a Cisco UMA client connects to the Cisco UMA server, the ASA intercepts the handshake and uses the Cisco UMA server certificate to perform the handshake with the client. The ASA also performs a handshake with the server.

Figure 50-4 How the Security Appliance Represents Cisco UMA – Private Key Sharing


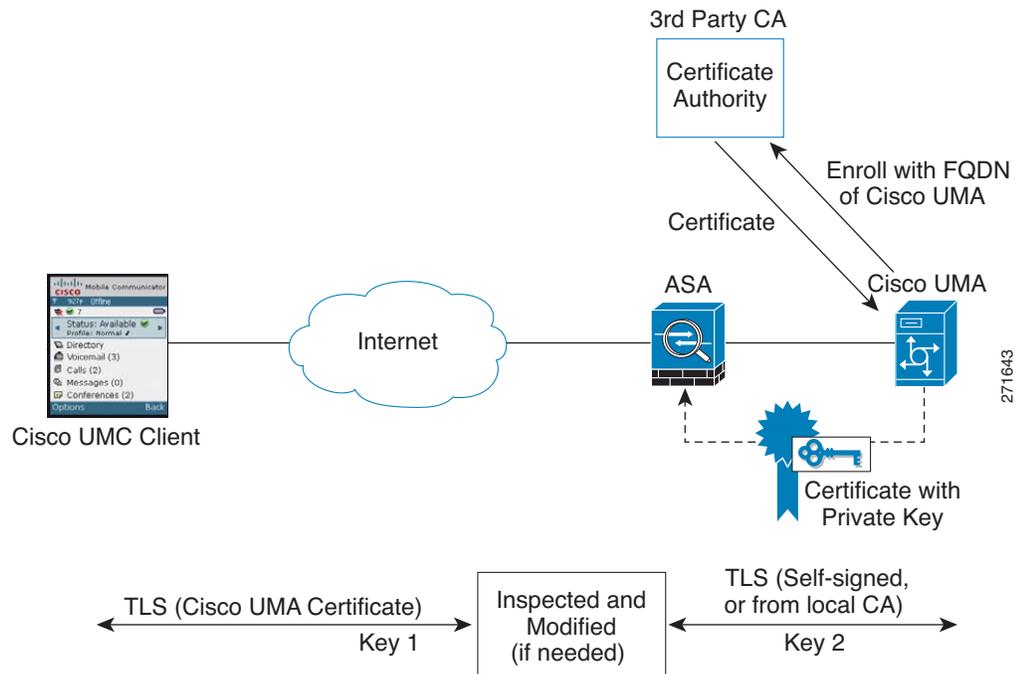


Figure 50-5 shows another way to establish the trust relationship. Figure 50-5 shows a green field deployment, because each component of the deployment has been newly installed. The ASA enrolls with the third-party CA by using the Cisco UMA server FQDN as if the ASA is the Cisco UMA server. When the Cisco UMA client connects to the ASA, the ASA presents the certificate that has the Cisco UMA server FQDN. The Cisco UMA client believes it is communicating to with the Cisco UMA server.

Figure 50-5 How the Security Appliance Represents Cisco UMA – Certificate Impersonation

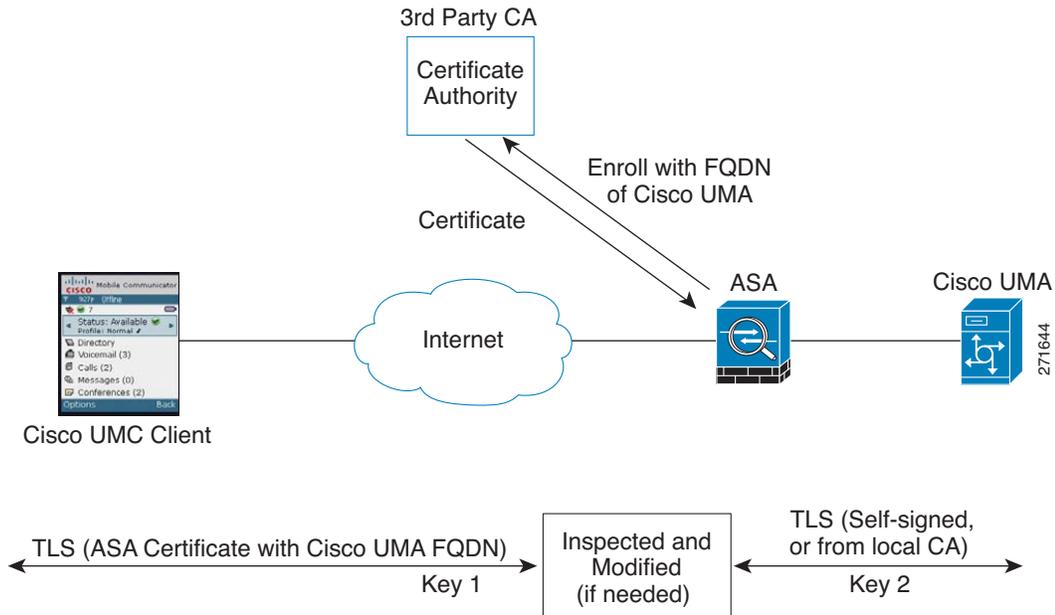

A trusted relationship between the ASA and the Cisco UMA server can be established with self-signed certificates. The ASA's identity certificate is exported, and then uploaded on the Cisco UMA server truststore. The Cisco UMA server certificate is downloaded, and then uploaded on the ASA truststore by creating a trustpoint and using the **crypto ca authenticate** command.

Licensing for the Cisco Mobility Advantage Proxy Feature

The Cisco Unified Communications proxy features (Cisco Phone Proxy, TLS proxy for encrypted voice inspection, and the Cisco Presence Federation Proxy) supported by the ASA require a Unified Communications Proxy license. However, in Version 8.2(2) and later, the Mobility Advantage proxy no longer requires a Unified Communications Proxy license.

The following table shows the licensing requirements for the Mobility Advantage proxy:

Model	License Requirement
All models	Base License.

For more information about licensing, see [Chapter 3, "Managing Feature Licenses."](#)

Configuring Cisco Mobility Advantage

This section includes the following topics:

- [Task Flow for Configuring Cisco Mobility Advantage, page 50-7](#)
- [Installing the Cisco UMA Server Certificate, page 50-7](#)
- [Creating the TLS Proxy Instance, page 50-8](#)

- [Enabling the TLS Proxy for MMP Inspection, page 50-9](#)

Task Flow for Configuring Cisco Mobility Advantage

To configure for the ASA to perform TLS proxy and MMP inspection as shown in [Figure 50-2](#) and [Figure 50-3](#), perform the following tasks.

It is assumed that self-signed certificates are used between the ASA and the Cisco UMA server.

Prerequisites

Export the Cisco UMA server certificate and keypair in PKCS-12 format so that you can import it onto the ASA. The certificate will be used during the handshake with the Cisco UMA clients.

-
- Step 1** Create the static NAT for the Cisco UMA server by entering the following commands:
- ```
hostname(config)# object network name
hostname(config-network-object)# host real_ip
hostname(config-network-object)# nat (real_ifc,mapped_ifc) static mapped_ip
```
- Step 2** Import the Cisco UMA server certificate onto the ASA by entering the following commands:
- ```
hostname(config)# crypto ca import trustpoint pkcs12 passphrase
[paste base 64 encoded pkcs12]
hostname(config)# quit
```
- Step 3** Install the Cisco UMA server certificate on the ASA. See [Installing the Cisco UMA Server Certificate, page 50-7](#).
- Step 4** Create the TLS proxy instance for the Cisco UMA clients connecting to the Cisco UMA server. See [Creating the TLS Proxy Instance, page 50-8](#).
- Step 5** Enable the TLS proxy for MMP inspection. See [Enabling the TLS Proxy for MMP Inspection, page 50-9](#).
-

Installing the Cisco UMA Server Certificate

Install the Cisco UMA server self-signed certificate in the ASA truststore. This task is necessary for the ASA to authenticate the Cisco UMA server during the handshake between the ASA proxy and Cisco UMA server.

Prerequisites

Export the Cisco UMA server certificate and keypair in PKCS-12 format so that you can import it onto the ASA.

	Command	Purpose
Step 1	<pre>hostname(config)# crypto ca trustpoint trustpoint_name Example: hostname(config)# crypto ca trustpoint cuma_server</pre>	<p>Enters the trustpoint configuration mode for the specified trustpoint so that you can create the trustpoint for the Cisco UMA server.</p> <p>A trustpoint represents a CA identity and possibly a device identity, based on a certificate issued by the CA.</p>
Step 2	<pre>hostname(config-ca-trustpoint)# enrollment terminal</pre>	<p>Specifies cut and paste enrollment with this trustpoint (also known as manual enrollment).</p>
Step 3	<pre>hostname(config-ca-trustpoint)# exit</pre>	<p>Exits from the CA Trustpoint configuration mode.</p>
Step 4	<pre>hostname(config)# crypto ca authenticate trustpoint Example: hostname(config)# crypto ca authenticate cuma_server Enter the base 64 encoded CA certificate. End with a blank line or the word "quit" on a line by itself [certificate data omitted] Certificate has the following attributes: Fingerprint: 21B598D5 4A81F3E5 0B24D12E 3F89C2E4 % Do you accept this certificate? [yes/no]: yes Trustpoint CA certificate accepted. % Certificate successfully imported hostname(config)#</pre>	<p>Installs and authenticates the CA certificates associated with a trustpoint created for the Cisco UMA server.</p> <p>Where <i>trustpoint</i> specifies the trustpoint from which to obtain the CA certificate. Maximum name length is 128 characters.</p> <p>The ASA prompts you to paste the base-64 formatted CA certificate onto the terminal.</p>

What to Do Next

Once you have created the trustpoints and installed the Cisco UMA certificate on the ASA, create the TLS proxy instance. See [Creating the TLS Proxy Instance, page 50-8](#).

Creating the TLS Proxy Instance

Create a TLS proxy instance for the Cisco UMA clients connecting to the Cisco UMA server.

Prerequisites

Before you can create the TLS proxy instance, you must have installed the Cisco UMA server self-signed certificate in the ASA truststore.

	Command	Purpose
Step 1	<pre>hostname(config)# tls-proxy proxy_name Example: tls-proxy cuma_tlsproxy</pre>	<p>Creates the TLS proxy instance.</p>
Step 2	<pre>hostname(config-tlsp)# server trust-point proxy_name Example: hostname(config-tlsp)# server trust-point cuma_proxy</pre>	<p>Specifies the proxy trustpoint certificate presented during TLS handshake.</p> <p>The certificate must be owned by the ASA (identity certificate).</p>

	Command	Purpose
Step 3	hostname(config-tlsp) # client trust-point <i>proxy_name</i> Example: hostname(config-tlsp) # client trust-point cuma_proxy	Specifies the trustpoint and associated certificate that the ASA uses in the TLS handshake when the ASA assumes the role of the TLS client. The certificate must be owned by the ASA (identity certificate).
Step 4	hostname(config-tlsp) # no server authenticate-client	Disables client authentication. Disabling TLS client authentication is required when the ASA must interoperate with a Cisco UMA client or clients such as a Web browser that are incapable of sending a client certificate.
Step 5	hostname(config-tlsp) # client cipher-suite <i>cipher_suite</i> Example: hostname(config-tlsp) # client cipher-suite aes128-sha1 aes256-sha1	Specifies cipher suite configuration. For client proxy (the proxy acts as a TLS client to the server), the user-defined cipher suite replaces the default cipher suite.

What to Do Next

Once you have created the TLS proxy instance, enable it for MMP inspection. See [Enabling the TLS Proxy for MMP Inspection, page 50-9](#).

Enabling the TLS Proxy for MMP Inspection

Cisco UMA client and server communications can be proxied via TLS, which decrypts the data, passes it to the inspect MMP module, and re-encrypt the data before forwarding it to the endpoint. The inspect MMP module verifies the integrity of the MMP headers and passes the OML/HTTP to an appropriate handler.

	Command	Purpose
Step 1	hostname(config) # class-map <i>class_map_name</i> Example: hostname(config) # class-map cuma_tlspoxy	Configures the class of traffic to inspect. Traffic between the Cisco UMA server and client uses MMP and is handled by MMP inspection. Where <i>class_map_name</i> is the name of the MMP class map.
Step 2	hostname(config-cmap) # match port tcp eq <i>port</i> Example: hostname(config-cmap) # match port tcp eq 5443	Matches the TCP port to which you want to apply actions for MMP inspection. The TCP/TLS default port for MMP inspection is 5443.
Step 3	hostname(config-cmap) # exit	Exits from the Class Map configuration mode.
Step 4	hostname(config) # policy-map <i>name</i> Example: hostname(config) # policy-map global_policy	Configures the policy map and attaches the action to the class of traffic.
Step 5	hostname(config-pmap) # class <i>classmap_name</i> Example: hostname(config-pmap) # class cuma_proxy	Assigns a class map to the policy map so that you can assign actions to the class map traffic. Where <i>classmap_name</i> is the name of the Skinny class map.

	Command	Purpose
Step 6	hostname(config-pmap)# inspect mmp tls-proxy <i>proxy_name</i> Example: hostname(config-pmap)# inspect mmp tls-proxy cuma_proxy	Enables SCCP (Skinny) application inspection and enables the phone proxy for the specified inspection session.
Step 7	hostname(config-pmap)# exit	Exits from the Policy Map configuration mode.
Step 8	hostname(config)# service-policy <i>policy_map_name</i> global Example: service-policy global_policy global	Enables the service policy on all interfaces.

Monitoring for Cisco Mobility Advantage

Mobility advantage proxy can be debugged the same way as IP Telephony. You can enable TLS proxy debug flags along with SSL syslogs to debug TLS proxy connection problems.

For example, using the following commands to enable TLS proxy-related debugging and syslog output only:

```
hostname# debug inspect tls-proxy events
hostname# debug inspect tls-proxy errors
hostname# config terminal
hostname(config)# logging enable
hostname(config)# logging timestamp
hostname(config)# logging list loglist message 711001
hostname(config)# logging list loglist message 725001-725014
hostname(config)# logging list loglist message 717001-717038
hostname(config)# logging buffer-size 1000000
hostname(config)# logging buffered loglist
hostname(config)# logging debug-trace
```

For information about TLS proxy debugging techniques and sample output, see the [Monitoring the TLS Proxy, page 49-15](#).

Enable the **debug mmp** command for MMP inspection engine debugging:

```
MMP:: received 60 bytes from outside:1.1.1.1/2000 to inside:2.2.2.2/5443
MMP:: version OLWP-2.0
MMP:: forward 60/60 bytes from outside:1.1.1.1/2000 to inside:2.2.2.2/5443
MMP:: received 100 bytes from inside:2.2.2.2/5443 to outside:1.1.1.1/2000
MMP:: session-id: ABCD_1234
MMP:: status: 201
MMP:: forward 100/100 bytes from inside:2.2.2.2/5443 to outside 1.1.1.1/2000
MMP:: received 80 bytes from outside:1.1.1.1/2000 to inside:2.2.2.2/5443
MMP:: content-type: http/1.1
MMP:: content-length: 40
```

You can also capture the raw and decrypted data by the TLS proxy by entering the following commands:

```
hostname# capture mycap interface outside (capturing raw packets)
hostname# capture mycap-dec type tls-proxy interface outside (capturing decrypted data)
hostname# show capture capture_name
hostname# copy /pcap capture:capture_name tftp://tftp_location
```

Configuration Examples for Cisco Mobility Advantage

- [Example 1: Cisco UMC/Cisco UMA Architecture – Security Appliance as Firewall with TLS Proxy and MMP Inspection, page 50-11](#)
- [Example 2: Cisco UMC/Cisco UMA Architecture – Security Appliance as TLS Proxy Only, page 50-12](#)

This section describes sample configurations that apply to two deployment scenarios for the TLS proxy used by the Cisco Mobility Advantage solution—scenario 1 where the ASA functions as both the firewall and TLS proxy and scenario 2 where the ASA functions as the TLS proxy only. In both scenarios, the clients connect from the Internet.


In the samples, you export the Cisco UMA server certificate and key-pair in PKCS-12 format and import it to the ASA. The certificate will be used during handshake with the Cisco UMA clients.

Installing the Cisco UMA server self-signed certificate in the ASA truststore is necessary for the ASA to authenticate the Cisco UMA server during handshake between the ASA proxy and Cisco UMA server. You create a TLS proxy instance for the Cisco UMA clients connecting to the Cisco UMA server. Lastly, you must enable TLS proxy for MMP inspection.

Example 1: Cisco UMC/Cisco UMA Architecture – Security Appliance as Firewall with TLS Proxy and MMP Inspection

As shown in [Figure 50-6](#) (scenario 1—the recommended architecture), the ASA functions as both the firewall and TLS proxy. In the scenario 1 deployment, the ASA is between a Cisco UMA client and a Cisco UMA server. In this scenario, the ASA performs static NAT by translating the Cisco UMA server 10.1.1.2 IP address to 192.0.2.140.

Figure 50-6 Cisco UMC/Cisco UMA Architecture – Scenario 1: Security Appliance as Firewall with TLS Proxy and MMP Inspection

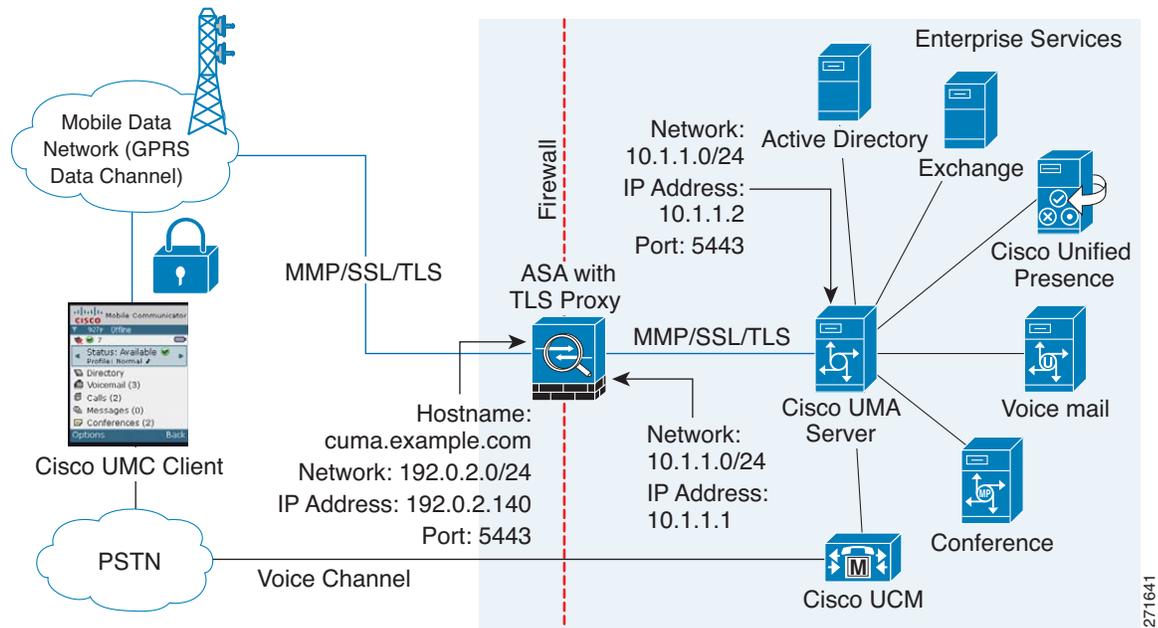

```

object network obj-10.1.1.2-01
  host 10.1.1.2
  nat (inside,outside) static 192.0.2.140
crypto ca import cuma_proxy pkcs12 sample_passphrase
  <cut-paste base 64 encoded pkcs12 here>
  quit
! for CUMA server's self-signed certificate
crypto ca trustpoint cuma_server
  enrollment terminal
crypto ca authenticate cuma_server
Enter the base 64 encoded CA certificate.
End with a blank line or the word "quit" on a line by itself
MIIDRTCCAu+gAwIBAgIQKvcqP/KW74VP0NZzL+JbRTANBgkqhkiG9w0BAQUFADCB
  [ certificate data omitted ]
/7QEM8izy0EOTSErKu7Nd76jwf5e4qttkQ==
quit
tls-proxy cuma_proxy
  server trust-point cuma_proxy
  no server authenticate-client
  client cipher-suite aes128-sha1 aes256-sha1
class-map cuma_proxy
  match port tcp eq 5443
policy-map global_policy
  class cuma_proxy
    inspect mmp tls-proxy cuma_proxy
service-policy global_policy global

```

Example 2: Cisco UMC/Cisco UMA Architecture – Security Appliance as TLS Proxy Only

As shown in [Figure 50-7](#) (scenario 2), the ASA functions as the TLS proxy only and works with an existing firewall. The ASA and the corporate firewall are performing NAT. The corporate firewall will not be able to predict which client from the Internet needs to connect to the corporate Cisco UMA server. Therefore, to support this deployment, you can take the following actions:


- Set up a NAT rule for inbound traffic that translates the destination IP address 192.0.2.41 to 172.16.27.41.
- Set up an interface PAT rule for inbound traffic translating the source IP address of every packet so that the corporate firewall does not need to open up a wildcard pinhole. The Cisco UMA server receives packets with the source IP address 192.0.2.183.

```

hostname(config)# object network obj-0.0.0.0-01
hostname(config-network-object)# subnet 0.0.0.0 0.0.0.0
hostname(config-network-object)# nat (outside,inside) dynamic 192.0.2.183

```

Figure 50-7 Cisco UMC/Cisco UMA Architecture – Scenario 2: Security Appliance as TLS Proxy Only

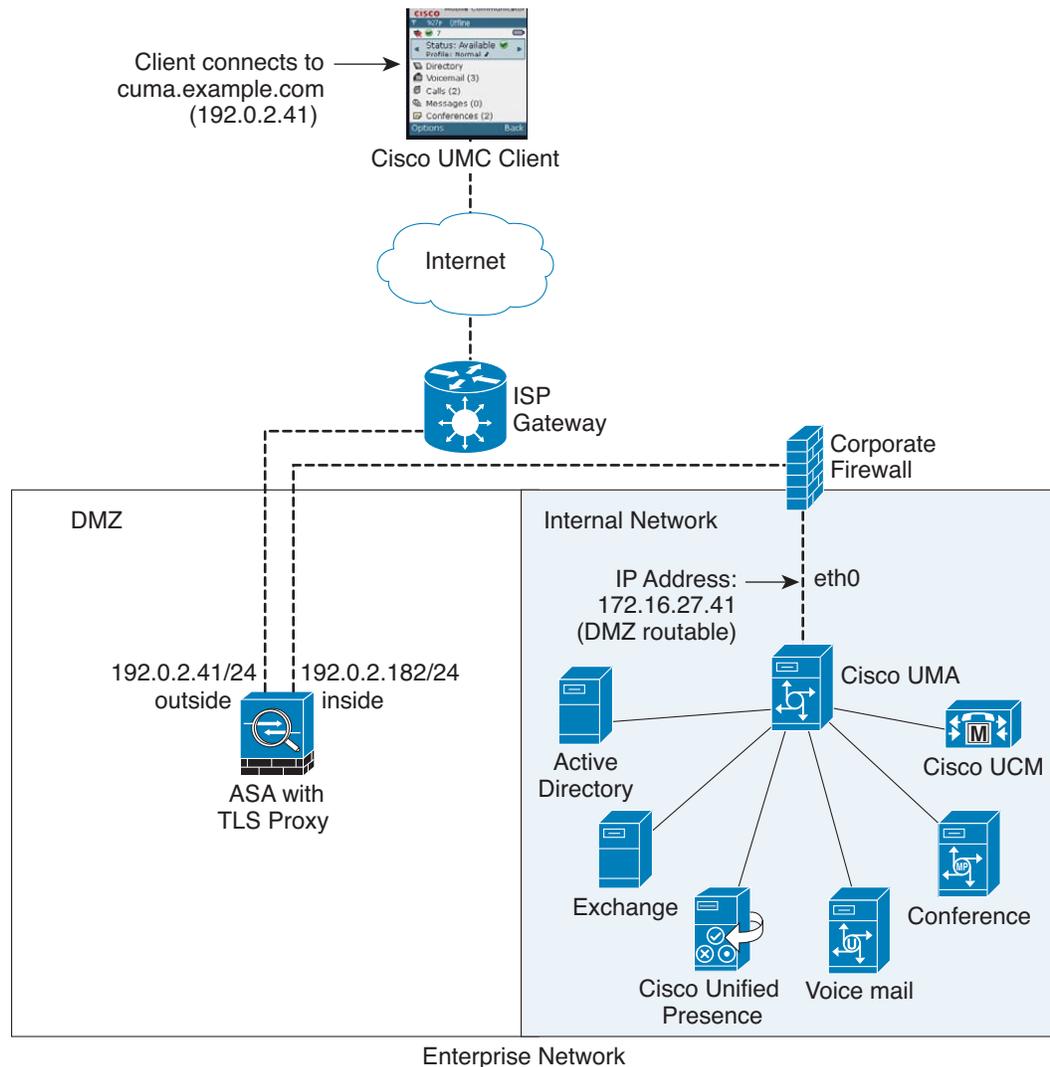

```

object network obj-172.16.27.41-01
  host 172.16.27.41
  nat (inside,outside) static 192.0.2.140
object network obj-0.0.0.0-01
  subnet 0.0.0.0 0.0.0.0
  nat (outside,inside) dynamic 192.0.2.183
crypto ca import cuma_proxy pkcs12 sample_passphrase
<cut-paste base 64 encoded pkcs12 here>
quit
! for CUMA server's self-signed certificate
crypto ca trustpoint cuma_server
  enrollment terminal
crypto ca authenticate cuma_server
Enter the base 64 encoded CA certificate.
End with a blank line or the word "quit" on a line by itself
MIIDRTCCAu+gAwIBAgIQKVCqP/KW74VP0NZzL+JbRTANBgkqhkiG9w0BAQUFADCB
[ certificate data omitted ]
/7QEM8izy0EOTSErKu7Nd76jwf5e4qttkQ==
quit

```

```

tls-proxy cuma_proxy
  server trust-point cuma_proxy
  no server authenticate-client
  client cipher-suite aes128-sha1 aes256-sha1
class-map cuma_proxy
  match port tcp eq 5443
policy-map global_policy
  class cuma_proxy
    inspect mmp tls-proxy cuma_proxy
service-policy global_policy global

```

Feature History for Cisco Mobility Advantage

Table 50-1 lists the release history for this feature.

Table 50-1 Feature History for Cisco Phone Proxy

Feature Name	Releases	Feature Information
Cisco Mobility Advantage Proxy	8.0(4)	The Cisco Mobility Advantage Proxy feature was introduced.
Cisco Mobility Advantage Proxy	8.3(1)	The Unified Communications Wizard was added to ASDM. By using the wizard, you can configure the Cisco Mobility Advantage Proxy.



CHAPTER 51

Configuring Cisco Unified Presence

This chapter describes how to configure the adaptive security appliance for Cisco Unified Presence.

This chapter includes the following sections:

- [Information About Cisco Unified Presence, page 51-1](#)
- [Licensing for Cisco Unified Presence, page 51-7](#)
- [Configuring Cisco Unified Presence Proxy for SIP Federation, page 51-8](#)
- [Monitoring Cisco Unified Presence, page 51-14](#)
- [Configuration Example for Cisco Unified Presence, page 51-14](#)
- [Feature History for Cisco Unified Presence, page 51-20](#)

Information About Cisco Unified Presence

This section includes the following topics:

- [Architecture for Cisco Unified Presence for SIP Federation Deployments, page 51-1](#)
- [Trust Relationship in the Presence Federation, page 51-4](#)
- [Security Certificate Exchange Between Cisco UP and the Security Appliance, page 51-5](#)
- [XMPP Federation Deployments, page 51-5](#)
- [Configuration Requirements for XMPP Federation, page 51-6](#)


Architecture for Cisco Unified Presence for SIP Federation Deployments

[Figure 51-1](#) depicts a Cisco Unified Presence/LCS Federation scenario with the ASA as the presence federation proxy (implemented as a TLS proxy). The two entities with a TLS connection are the “Routing Proxy” (a dedicated Cisco UP) in Enterprise X and the Microsoft Access Proxy in Enterprise Y. However, the deployment is not limited to this scenario. Any Cisco UP or Cisco UP cluster could be deployed on the left side of the ASA; the remote entity could be any server (an LCS, an OCS, or another Cisco UP).

The following architecture is generic for two servers using SIP (or other ASA inspected protocols) with a TLS connection.

Entity X: Cisco UP/Routing Proxy in Enterprise X

Entity Y: Microsoft Access Proxy/Edge server for LCS/OCS in Enterprise Y

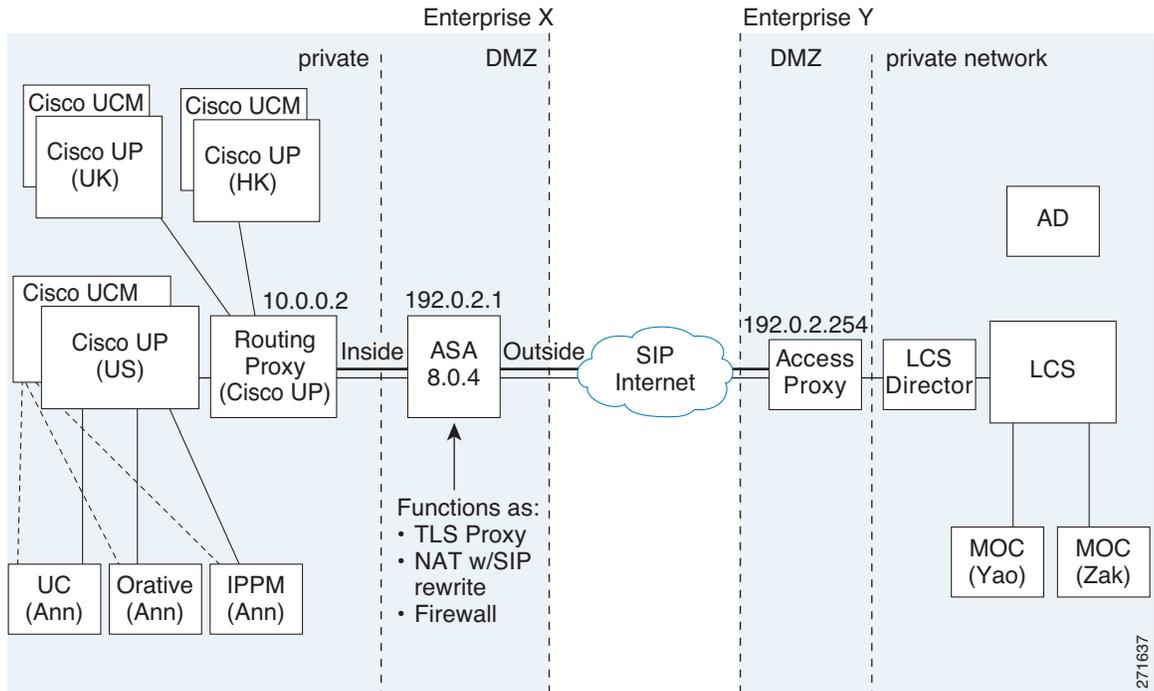Figure 51-1 Typical Cisco Unified Presence/LCS Federation Scenario

In the above architecture, the ASA functions as a firewall, NAT, and TLS proxy, which is the recommended architecture. However, the ASA can also function as NAT and the TLS proxy alone, working with an existing firewall.

Either server can initiate the TLS handshake (unlike IP Telephony or Cisco Unified Mobility, where only the clients initiate the TLS handshake). There are bi-directional TLS proxy rules and configuration. Each enterprise can have an ASA as the TLS proxy.

In [Figure 51-1](#), NAT or PAT can be used to hide the private address of Entity X. In this situation, static NAT or PAT must be configured for foreign server (Entity Y) initiated connections or the TLS handshake (inbound). Typically, the public port should be 5061. The following static PAT command is required for the Cisco UP that accepts inbound connections:

```
hostname(config)# object network obj-10.0.0.2-01
hostname(config-network-object)# host 10.0.0.2
hostname(config-network-object)# nat (inside,outside) static 192.0.2.1 service tcp 5061
5061
```

The following static PAT must be configured for each Cisco UP that could initiate a connection (by sending SIP SUBSCRIBE) to the foreign server.

For Cisco UP with the address 10.0.0.2, enter the following command:

```
hostname(config)# object network obj-10.0.0.2-02
hostname(config-network-object)# host 10.0.0.2
hostname(config-network-object)# nat (inside,outside) static 192.0.2.1 service tcp 5062
5062
hostname(config)# object network obj-10.0.0.2-03
hostname(config-network-object)# host 10.0.0.2
hostname(config-network-object)# nat (inside,outside) static 192.0.2.1 service udp 5070
5070
hostname(config)# object network obj-10.0.0.2-04
hostname(config-network-object)# host 10.0.0.2
```

```
hostname(config-network-object)# nat (inside,outside) static 192.0.2.1 service tcp 5060
5060
```

For another Cisco UP with the address 10.0.0.3, you must use a different set of PAT ports, such as 45062 or 45070:


```
hostname(config)# object network obj-10.0.0.3-01
hostname(config-network-object)# host 10.0.0.3
hostname(config-network-object)# nat (inside,outside) static 192.0.2.1 service tcp 5061
45061
hostname(config)# object network obj-10.0.0.3-02
hostname(config-network-object)# host 10.0.0.3
hostname(config-network-object)# nat (inside,outside) static 192.0.2.1 service tcp 5062
45062
hostname(config)# object network obj-10.0.0.3-03
hostname(config-network-object)# host 10.0.0.3
hostname(config-network-object)# nat (inside,outside) static 192.0.2.1 service udp 5070
5070
hostname(config)# object network obj-10.0.0.2-03
hostname(config-network-object)# host 10.0.0.2
hostname(config-network-object)# nat (inside,outside) static 192.0.2.1 service tcp 5070
45070
hostname(config)# object network obj-10.0.0.3-04
hostname(config-network-object)# host 10.0.0.3
hostname(config-network-object)# nat (inside,outside) static 192.0.2.1 service tcp 5060
45060
```

Dynamic NAT or PAT can be used for the rest of the outbound connections or the TLS handshake. The ASA SIP inspection engine takes care of the necessary translation (fixup).

```
hostname(config)# object network obj-0.0.0.0-01
hostname(config-network-object)# subnet 0.0.0.0 0.0.0.0
hostname(config-network-object)# nat (inside,outside) dynamic 192.0.2.1
```

Figure 51-2 illustrates an abstracted scenario with Entity X connected to Entity Y through the presence federation proxy on the ASA. The proxy is in the same administrative domain as Entity X. Entity Y could have another ASA as the proxy but this is omitted for simplicity.

Figure 51-2 Abstracted Presence Federation Proxy Scenario between Two Server Entities

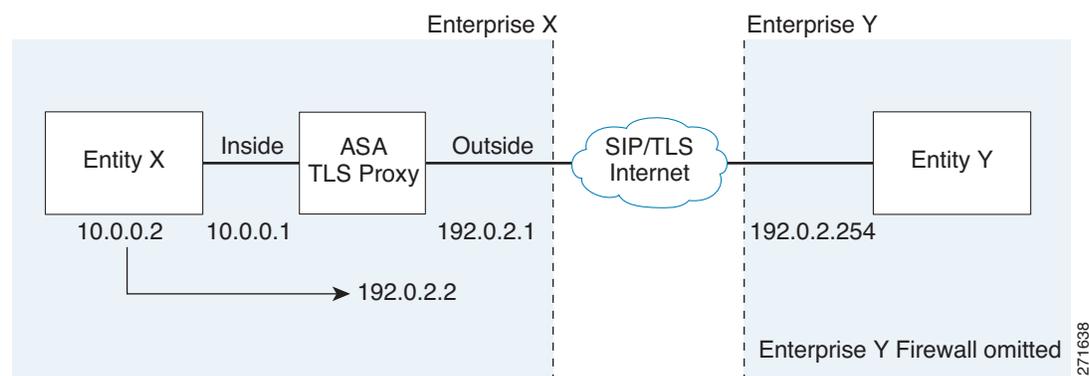

For the Entity X domain name to be resolved correctly when the ASA holds its credential, the ASA could be configured to perform NAT for Entity X, and the domain name is resolved as the Entity X public address for which the ASA provides proxy service.

For further information about configuring Cisco Unified Presence Federation for SIP Federation, see the Integration Guide for Configuring Cisco Unified Presence for Interdomain Federation.:

http://www.cisco.com/en/US/products/ps6837/products_installation_and_configuration_guides_list.html

Trust Relationship in the Presence Federation

Within an enterprise, setting up a trust relationship is achievable by using self-signed certificates or you can set it up on an internal CA.


Establishing a trust relationship cross enterprises or across administrative domains is key for federation. Cross enterprises you must use a trusted third-party CA (such as, VeriSign). The ASA obtains a certificate with the FQDN of the Cisco UP (certificate impersonation).

For the TLS handshake, the two entities could validate the peer certificate via a certificate chain to trusted third-party certificate authorities. Both entities enroll with the CAs. The ASA as the TLS proxy must be trusted by both entities. The ASA is always associated with one of the enterprises. Within that enterprise (Enterprise X in Figure 51-1), the entity and the ASA could authenticate each other via a local CA, or by using self-signed certificates.

To establish a trusted relationship between the ASA and the remote entity (Entity Y), the ASA can enroll with the CA on behalf of Entity X (Cisco UP). In the enrollment request, the Entity X identity (domain name) is used.

Figure 51-3 shows the way to establish the trust relationship. The ASA enrolls with the third party CA by using the Cisco UP FQDN as if the ASA is the Cisco UP.

Figure 51-3 How the Security Appliance Represents Cisco Unified Presence – Certificate Impersonate

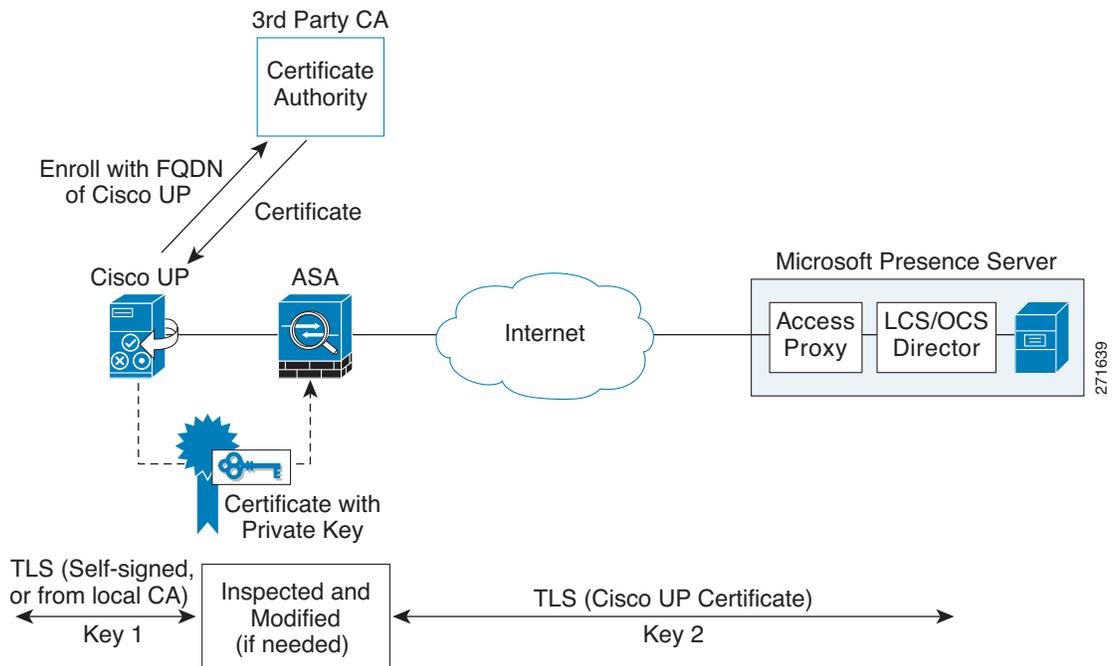

Security Certificate Exchange Between Cisco UP and the Security Appliance


You need to generate the keypair for the certificate (such as `cup_proxy_key`) used by the ASA, and configure a trustpoint to identify the self-signed certificate sent by the ASA to Cisco UP (such as `cup_proxy`) in the TLS handshake.

For the ASA to trust the Cisco UP certificate, you need to create a trustpoint to identify the certificate from the Cisco UP (such as `cert_from_cup`), and specify the enrollment type as terminal to indicate that you will paste the certificate received from the Cisco UP into the terminal.

XMPP Federation Deployments

Figure 51-4 provides an example of an XMPP federated network between Cisco Unified Presence enterprise deployment and an IBM Sametime enterprise deployment. TLS is optional for XMPP federation. ASA acts only as a firewall for XMPP federation; it does not provide TLS proxy functionality or PAT for XMPP federation.

Figure 51-4 Basic XMPP Federated Network between Cisco Unified Presence and IBM Sametime

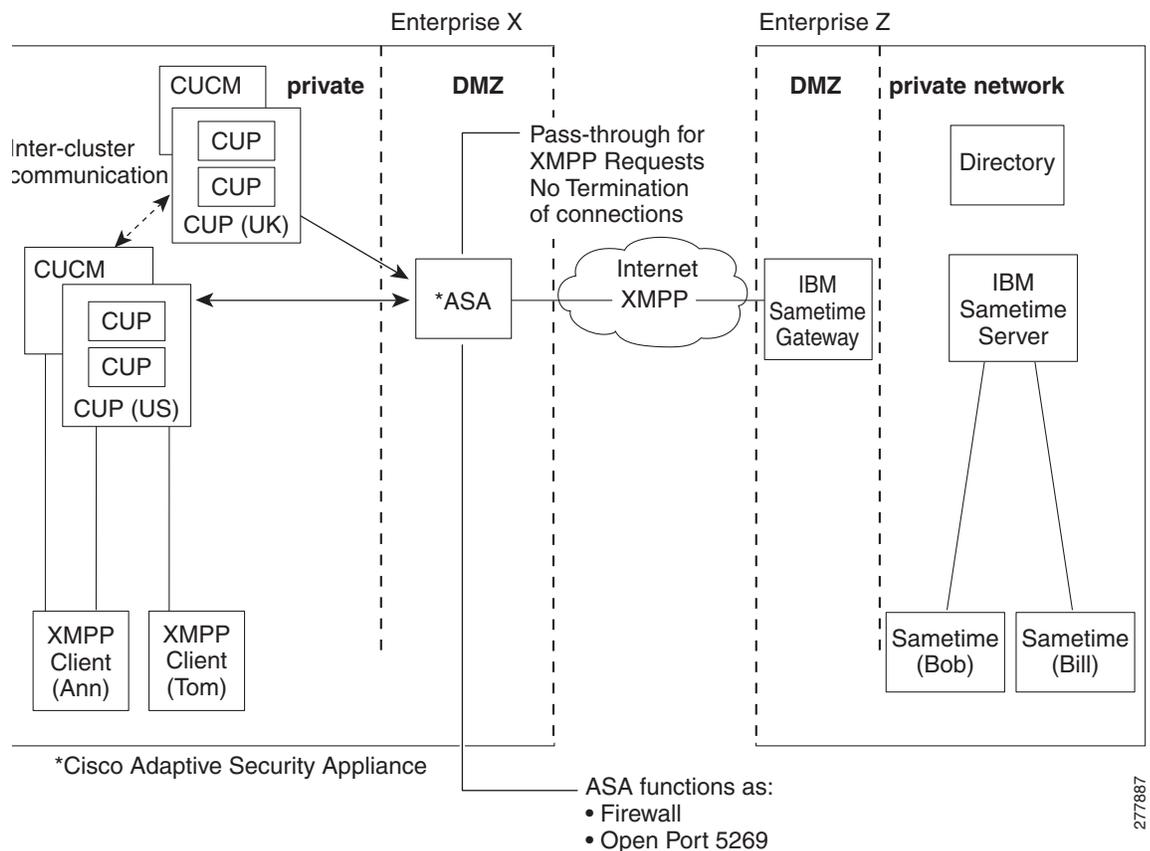

There are two DNS servers within the internal Cisco Unified Presence enterprise deployment. One DNS server hosts the Cisco Unified Presence private address. The other DNS server hosts the Cisco Unified Presence public address and a DNS SRV records for SIP federation (`_sipfederationtls`), and XMPP federation (`_xmpp-server`) with Cisco Unified Presence. The DNS server that hosts the Cisco Unified Presence public address is located in the local DMZ.

For further information about configuring Cisco Unified Presence Federation for XMPP Federation, see the *Integration Guide for Configuring Cisco Unified Presence Release 8.0 for Interdomain Federation*:

http://www.cisco.com/en/US/products/ps6837/products_installation_and_configuration_guides_list.html

Configuration Requirements for XMPP Federation

For XMPP Federation, ASA acts as a firewall only. You must open port 5269 for both incoming and outgoing XMPP federated traffic on ASA.

These are sample access lists to open port 5269 on ASA.

Allow traffic from any address to any address on port 5269:

```
access-list ALLOW-ALL extended permit tcp any any eq 5269
```

Allow traffic from any address to any single node on port 5269:

```
access-list ALLOW-ALL extended permit tcp any host <private cup IP address> eq 5269
```

If you do not configure the access list above, and you publish additional XMPP federation nodes in DNS, you must configure access to each of these nodes, for example:

```
object network obj_host_<private cup ip address>
#host <private cup ip address>
object network obj_host_<private cup2 ip address>
#host <private cup2 ip address>
object network obj_host_<public cup ip address>
#host <public cup ip address>
....
```

Configure the following NAT commands:

```
nat (inside,outside) source static obj_host_<private cup1 IP> obj_host_<public cup IP>
service
obj_udp_source_eq_5269 obj_udp_source_eq_5269
nat (inside,outside) source static obj_host_<private cup1 IP> obj_host_<public cup IP>
service
obj_tcp_source_eq_5269 obj_tcp_source_eq_5269
```

If you publish a single public IP address in DNS, and use arbitrary ports, configure the following:

(This example is for two additional XMPP federation nodes)

```
nat (inside,outside) source static obj_host_<private cup2 ip> obj_host_<public cup IP>
service
obj_udp_source_eq_5269 obj_udp_source_eq_25269
nat (inside,outside) source static obj_host_<private cup2 ip> obj_host_<public cup IP>
service
obj_tcp_source_eq_5269 obj_tcp_source_eq_25269

nat (inside,outside) source static obj_host_<private cup3 ip> obj_host_<public cup IP>
service
obj_udp_source_eq_5269 obj_udp_source_eq_35269
nat (inside,outside) source static obj_host_<private cup3 ip> obj_host_<public cup IP>
service
obj_tcp_source_eq_5269 obj_tcp_source_eq_35269
```

If you publish multiple public IP addresses in DNS all using port 5269, configure the following:

(This example is for two additional XMPP federation nodes)

```

nat (inside,outside) source static obj_host_<private cup2 ip> obj_host_<public cup2 IP>
service
obj_udp_source_eq_5269 obj_udp_source_eq_5269
nat (inside,outside) source static obj_host_<private cup2 ip> obj_host_<public cup2 IP>
service
obj_tcp_source_eq_5269 obj_tcp_source_eq_5269

nat (inside,outside) source static obj_host_<private cup3 ip> obj_host_<public cup3 IP>
service
obj_udp_source_eq_5269 obj_udp_source_eq_5269
nat (inside,outside) source static obj_host_<private cup3 ip> obj_host_<public cup IP>
service
obj_tcp_source_eq_5269 obj_tcp_source_eq_5269

```

Licensing for Cisco Unified Presence

The Cisco Unified Presence feature supported by the ASA require a Unified Communications Proxy license.

The following table shows the Unified Communications Proxy license details by platform:



Note

This feature is not available on No Payload Encryption models.

Model	License Requirement ¹
ASA 5505	Base License and Security Plus License: 2 sessions. <i>Optional license: 24 sessions.</i>
ASA 5510	Base License and Security Plus License: 2 sessions. <i>Optional licenses: 24, 50, or 100 sessions.</i>
ASA 5520	Base License: 2 sessions. <i>Optional licenses: 24, 50, 100, 250, 500, 750, or 1000 sessions.</i>
ASA 5540	Base License: 2 sessions. <i>Optional licenses: 24, 50, 100, 250, 500, 750, 1000, or 2000 sessions.</i>
ASA 5550	Base License: 2 sessions. <i>Optional licenses: 24, 50, 100, 250, 500, 750, 1000, 2000, or 3000 sessions.</i>
ASA 5580	Base License: 2 sessions. <i>Optional licenses: 24, 50, 100, 250, 500, 750, 1000, 2000, 3000, 5000, or 10,000 sessions.²</i>
ASA 5512-X	Base License: 2 sessions. <i>Optional licenses: 24, 50, 100, 250, or 500 sessions.</i>
ASA 5515-X	Base License: 2 sessions. <i>Optional licenses: 24, 50, 100, 250, or 500 sessions.</i>
ASA 5525-X	Base License: 2 sessions. <i>Optional licenses: 24, 50, 100, 250, 500, 750, or 1000 sessions.</i>

Model	License Requirement ¹
ASA 5545-X	Base License: 2 sessions. <i>Optional licenses: 24, 50, 100, 250, 500, 750, 1000, or 2000 sessions.</i>
ASA 5555-X	Base License: 2 sessions. <i>Optional licenses: 24, 50, 100, 250, 500, 750, 1000, 2000, or 3000 sessions.</i>
ASA 5585-X with SSP-10	Base License: 2 sessions. <i>Optional licenses: 24, 50, 100, 250, 500, 750, 1000, 2000, or 3000 sessions.</i>
ASA 5585-X with SSP-20, -40, or -60	Base License: 2 sessions. <i>Optional licenses: 24, 50, 100, 250, 500, 750, 1000, 2000, 3000, 5000, or 10,000 sessions.²</i>

- The following applications use TLS proxy sessions for their connections. Each TLS proxy session used by these applications (and only these applications) is counted against the UC license limit:
 - Phone Proxy
 - Presence Federation Proxy
 - Encrypted Voice Inspection

Other applications that use TLS proxy sessions do not count towards the UC limit, for example, Mobility Advantage Proxy (which does not require a license) and IME (which requires a separate IME license).

Some UC applications might use multiple sessions for a connection. For example, if you configure a phone with a primary and backup Cisco Unified Communications Manager, there are 2 TLS proxy connections, so 2 UC Proxy sessions are used.

You independently set the TLS proxy limit using the **tls-proxy maximum-sessions** command. To view the limits of your model, enter the **tls-proxy maximum-sessions ?** command. When you apply a UC license that is higher than the default TLS proxy limit, the ASA automatically sets the TLS proxy limit to match the UC limit. The TLS proxy limit takes precedence over the UC license limit; if you set the TLS proxy limit to be less than the UC license, then you cannot use all of the sessions in your UC license.

Note: For license part numbers ending in “K8” (for example, licenses under 250 users), TLS proxy sessions are limited to 1000. For license part numbers ending in “K9” (for example, licenses 250 users or larger), the TLS proxy limit depends on the configuration, up to the model limit. K8 and K9 refer to whether the license is restricted for export: K8 is unrestricted, and K9 is restricted.

Note: If you clear the configuration (using the **clear configure all** command, for example), then the TLS proxy limit is set to the default for your model; if this default is lower than the UC license limit, then you see an error message to use the **tls-proxy maximum-sessions** command to raise the limit again. If you use failover and enter the **write standby** command on the primary unit to force a configuration synchronization, the **clear configure all** command is generated on the secondary unit automatically, so you may see the warning message on the secondary unit. Because the configuration synchronization restores the TLS proxy limit set on the primary unit, you can ignore the warning.

You might also use SRTP encryption sessions for your connections:

- For K8 licenses, SRTP sessions are limited to 250.
- For K9 licenses, there is not limit.

Note: Only calls that require encryption/decryption for media are counted towards the SRTP limit; if passthrough is set for the call, even if both legs are SRTP, they do not count towards the limit.

- With the 10,000-session UC license, the total combined sessions can be 10,000, but the maximum number of Phone Proxy sessions is 5000.

For more information about licensing, see [Chapter 3, “Managing Feature Licenses.”](#)

Configuring Cisco Unified Presence Proxy for SIP Federation

This section contains the following topics:

- [Task Flow for Configuring Cisco Unified Presence Federation Proxy for SIP Federation, page 51-9](#)
- [Creating Trustpoints and Generating Certificates, page 51-9](#)
- [Installing Certificates, page 51-10](#)

- [Creating the TLS Proxy Instance, page 51-12](#)
- [Enabling the TLS Proxy for SIP Inspection, page 51-13](#)

Task Flow for Configuring Cisco Unified Presence Federation Proxy for SIP Federation

To configure a Cisco Unified Presence/LCS Federation scenario with the ASA as the TLS proxy where there is a single Cisco UP that is in the local domain and self-signed certificates are used between the Cisco UP and the ASA (like the scenario shown in [Figure 51-1](#)), perform the following tasks.

Step 1 Create the following static NAT for the local domain containing the Cisco UP.

For the inbound connection to the local domain containing the Cisco UP, create static PAT by entering the following command:

```
hostname(config)# object network name
hostname(config-network-object)# host real_ip
hostname(config-network-object)# nat (real_ifc,mapped_ifc) static mapped_ip service {tcp |
udp} real_port mapped_port
```



Note For each Cisco UP that could initiate a connection (by sending SIP SUBSCRIBE) to the foreign server, you must also configure static PAT by using a different set of PAT ports.

For outbound connections or the TLS handshake, use dynamic NAT or PAT. The ASA SIP inspection engine takes care of the necessary translation (fixup).

```
hostname(config)# object network name
hostname(config-network-object)# subnet real_ip netmask
hostname(config-network-object)# nat (real_ifc,mapped_ifc) dynamic mapped_ip
```

For information about configuring NAT and PAT for the Cisco Presence Federation proxy, see [Chapter 30, “Configuring Network Object NAT”](#) and [Chapter 31, “Configuring Twice NAT”](#).

- Step 2** Create the necessary RSA keypairs and proxy certificate, which is a self-signed certificate, for the remote entity. See [Creating Trustpoints and Generating Certificates, page 51-9](#).
- Step 3** Install the certificates. See [Installing Certificates, page 51-10](#).
- Step 4** Create the TLS proxy instance for the Cisco UP clients connecting to the Cisco UP server. See [Creating the TLS Proxy Instance, page 51-12](#).
- Step 5** Enable the TLS proxy for SIP inspection. See [Enabling the TLS Proxy for SIP Inspection, page 51-13](#).
-

Creating Trustpoints and Generating Certificates

You need to generate the keypair for the certificate (such as `cup_proxy_key`) used by the ASA, and configure a trustpoint to identify the self-signed certificate sent by the ASA to Cisco UP (such as `cup_proxy`) in the TLS handshake.

	Command	Purpose
Step 1	hostname(config)# crypto key generate rsa label <i>key-pair-label modulus size</i> Example: crypto key generate rsa label ent_y_proxy_key modulus 1024 INFO: The name for the keys will be: ent_y_proxy_key Keypair generation process begin. Please wait... hostname(config)#	Creates the RSA keypair that can be used for the trustpoints. The keypair is used by the self-signed certificate presented to the local domain containing the Cisco UP (proxy for the remote entity).
Step 2	hostname(config)# crypto ca trustpoint <i>trustpoint_name</i> Example: hostname(config)# crypto ca trustpoint ent_y_proxy	Enters the trustpoint configuration mode for the specified trustpoint so that you can create the trustpoint for the remote entity. A trustpoint represents a CA identity and possibly a device identity, based on a certificate issued by the CA.
Step 3	hostname(config-ca-trustpoint)# enrollment self	Generates a self-signed certificate.
Step 4	hostname(config-ca-trustpoint)# fqdn none	Specifies not to include a fully qualified domain name (FQDN) in the Subject Alternative Name extension of the certificate during enrollment.
Step 5	hostname(config-ca-trustpoint)# subject-name <i>X.500_name</i> Example: hostname(config-ca-trustpoint)# subject-name cn=Ent-Y-Proxy	Includes the indicated subject DN in the certificate during enrollment
Step 6	hostname(config-ca-trustpoint)# keypair <i>keyname</i> Example: hostname(config-ca-trustpoint)# keypair ent_y_proxy_key	Specifies the key pair whose public key is to be certified.
Step 7	hostname(config-ca-trustpoint)# exit	Exits from the CA Trustpoint configuration mode.
Step 8	hostname(config)# crypto ca enroll <i>trustpoint</i> Example: hostname(config)# crypto ca enroll ent_y_proxy	Starts the enrollment process with the CA and specifies the name of the trustpoint to enroll with.

What to Do Next

Install the certificate on the local entity truststore. You could also enroll the certificate with a local CA trusted by the local entity. See the “[Installing Certificates](#)” section on page 51-10.

Installing Certificates

Export the self-signed certificate for the ASA created in the “[Creating Trustpoints and Generating Certificates](#)” section on page 51-9 and install it as a trusted certificate on the local entity. This task is necessary for local entity to authenticate the ASA.

Prerequisites

To create a proxy certificate on the ASA that is trusted by the remote entity, obtain a certificate from a trusted CA. For information about obtaining a certificate from a trusted CA, see the “[Configuring Digital Certificates](#)” section on page 41-9.

	Command	Purpose
Step 1	hostname(config)# crypto ca export trustpoint identity-certificate Example: hostname(config)# crypto ca export ent_y_proxy identity-certificate	Export the ASA self-signed (identity) certificate.
Step 2	hostname(config)# crypto ca trustpoint trustpoint_name Example: hostname(config)# crypto ca trustpoint ent_x_cert ! for Entity X's self-signed certificate	Enters the trustpoint configuration mode for the specified trustpoint so that you can create the trustpoint for the local entity. A trustpoint represents a CA identity and possibly a device identity, based on a certificate issued by the CA.
Step 3	hostname(config-ca-trustpoint)# enrollment terminal	Specifies cut and paste enrollment with this trustpoint (also known as manual enrollment). If the local entity uses a self-signed certificate, the self-signed certificate must be installed; if the local entity uses a CA-issued certificate, the CA certificate needs to be installed. This configuration shows the commands for using a self-signed certificate.
Step 4	hostname(config-ca-trustpoint)# exit	Exits from the CA Trustpoint configuration mode.
Step 5	hostname(config)# crypto ca authenticate trustpoint Example: hostname(config)# crypto ca authenticate ent_x_cert Enter the base 64 encoded CA certificate. End with a blank line or the word "quit" on a line by itself [certificate data omitted] Certificate has the following attributes: Fingerprint: 21B598D5 4A81F3E5 0B24D12E 3F89C2E4 % Do you accept this certificate? [yes/no]: yes Trustpoint CA certificate accepted. % Certificate successfully imported	Installs and authenticates the CA certificates associated with a trustpoint created for the local entity. Where <i>trustpoint</i> specifies the trustpoint from which to obtain the CA certificate. Maximum name length is 128 characters. The ASA prompts you to paste the base-64 formatted CA certificate onto the terminal.
Step 6	hostname(config)# crypto ca trustpoint trustpoint_name Example: hostname(config)# crypto ca trustpoint ent_y_ca ! for Entity Y's CA certificate	Install the CA certificate that signs the remote entity certificate on the ASA by entering the following commands. This step is necessary for the ASA to authenticate the remote entity.
Step 7	hostname(config-ca-trustpoint)# enrollment terminal	Specifies cut and paste enrollment with this trustpoint (also known as manual enrollment).
Step 8	hostname(config-ca-trustpoint)# exit	Exits from the CA Trustpoint configuration mode.
Step 9	hostname(config)# crypto ca authenticate trustpoint Example: hostname(config)# crypto ca authenticate ent_y_ca Enter the base 64 encoded CA certificate. End with a blank line or the word "quit" on a line by itself MIIDRTCCAu+gAwIBAgIQKVcqp/KW74VP0NZzL+JbRTANBgkqhkiG9w0BAQUFADCB [certificate data omitted] /7QEM8izy0EOTSErKu7Nd76jwf5e4qttkQ==	Installs and authenticates the CA certificates associated with a trustpoint created for the local entity. The ASA prompts you to paste the base-64 formatted CA certificate onto the terminal.

What to Do Next

Once you have created the trustpoints and installed the certificates for the local and remote entities on the ASA, create the TLS proxy instance. See [Creating the TLS Proxy Instance](#), page 51-12.

Creating the TLS Proxy Instance

Because either server can initiate the TLS handshake (unlike IP Telephony or Cisco Unified Mobility, where only the clients initiate the TLS handshake), you must configure by-directional TLS proxy rules. Each enterprise can have an ASA as the TLS proxy.

Create TLS proxy instances for the local and remote entity initiated connections respectively. The entity that initiates the TLS connection is in the role of “TLS client”. Because the TLS proxy has a strict definition of “client” and “server” proxy, two TLS proxy instances must be defined if either of the entities could initiate the connection.

	Command	Purpose
Step 1	! Local entity to remote entity hostname(config)# tls-proxy proxy_name Example: hostname(config)# tls-proxy ent_x_to_y	Creates the TLS proxy instance.
Step 2	hostname(config-tlsp)# server trust-point proxy_name Example: hostname(config-tlsp)# server trust-point ent_y_proxy	Specifies the proxy trustpoint certificate presented during TLS handshake. The certificate must be owned by the ASA (identity certificate). Where the <i>proxy_name</i> for the server trust-point command is the remote entity proxy name.
Step 3	hostname(config-tlsp)# client trust-point proxy_trustpoint Example: hostname(config-tlsp)# client trust-point ent_x_proxy	Specifies the trustpoint and associated certificate that the ASA uses in the TLS handshake when the ASA assumes the role of the TLS client. The certificate must be owned by the ASA (identity certificate). Where the <i>proxy_trustpoint</i> for the client trust-point command is the local entity proxy.
Step 4	hostname(config-tlsp)# client cipher-suite cipher_suite Example: hostname(config-tlsp)# client cipher-suite aes128-sha1 aes256-sha1 3des-sha1 null-sha1	Specifies cipher suite configuration. For client proxy (the proxy acts as a TLS client to the server), the user-defined cipher suite replaces the default cipher suite.
Step 5	! Remote entity to local entity hostname(config)# tls-proxy proxy_name Example: tls-proxy ent_y_to_x	Creates the TLS proxy instance.
Step 6	hostname(config-tlsp)# server trust-point proxy_name Example: hostname(config-tlsp)# server trust-point ent_x_proxy	Specifies the proxy trustpoint certificate presented during TLS handshake. Where the <i>proxy_name</i> for the server trust-point command is the local entity proxy name

	Command	Purpose
Step 7	hostname(config-tlsp)# client trust-point <i>proxy_trustpoint</i> Example: hostname(config-tlsp)# client trust-point ent_y_proxy	Specifies the trustpoint and associated certificate that the ASA uses in the TLS handshake when the ASA assumes the role of the TLS client. Where the <i>proxy_trustpoint</i> for the client trust-point command is the remote entity proxy.
Step 8	hostname(config-tlsp)# client cipher-suite <i>cipher_suite</i> Example: hostname(config-tlsp)# client cipher-suite aes128-sha1 aes256-sha1 3des-sha1 null-sha1	Specifies cipher suite configuration.

What to Do Next

Once you have created the TLS proxy instance, enable it for SIP inspection. See [Enabling the TLS Proxy for SIP Inspection](#), page 51-13.

Enabling the TLS Proxy for SIP Inspection

Enable the TLS proxy for SIP inspection and define policies for both entities that could initiate the connection.

	Command	Purpose
Step 1	hostname(config)# access-list id extended permit tcp host src_ip host dest_ip eq port Examples: access-list ent_x_to_y extended permit tcp host 10.0.0.2 host 192.0.2.254 eq 5061 access-list ent_y_to_x extended permit tcp host 192.0.2.254 host 192.0.2.1 eq 5061	Adds an Access Control Entry. The access list is used to specify the class of traffic to inspect.
Step 2	hostname(config)# class-map class_map_name Example: hostname(config)# class-map ent_x_to_y	Configures the secure SIP class of traffic to inspect. Where <i>class_map_name</i> is the name of the SIP class map.
Step 3	hostname(config-cmap)# match access-list <i>access_list_name</i> Example: hostname(config-cmap)# match access-list ent_x_to_y	Identifies the traffic to inspect.
Step 4	hostname(config-cmap)# exit	Exits from Class Map configuration mode.
Step 5	hostname(config)# policy-map type inspect sip <i>policy_map_name</i> Example: hostname(config)# policy-map type inspect sip sip_inspect	Defines special actions for SIP inspection application traffic.
Step 6	hostname(config-pmap)# parameters ! SIP inspection parameters	Specifies the parameters for SIP inspection. Parameters affect the behavior of the inspection engine. The commands available in parameters configuration mode depend on the application.
Step 7	hostname(config-pmap)# exit	Exits from Policy Map configuration mode.

	Command	Purpose
Step 8	hostname(config)# policy-map name Example: hostname(config)# policy-map global_policy	Configure the policy map and attach the action to the class of traffic.
Step 9	hostname(config-pmap)# class classmap_name Example: hostname(config-pmap)# class ent_x_to_y	Assigns a class map to the policy map so that you can assign actions to the class map traffic. Where <i>classmap_name</i> is the name of the SIP class map.
Step 10	hostname(config-pmap)# inspect sip sip_map tls-proxy proxy_name hostname(config-pmap)# inspect sip sip_inspect tls-proxy ent_x_to_y	Enables TLS proxy for the specified SIP inspection session.
Step 11	hostname(config-pmap)# exit	Exits from Policy Map configuration mode.
Step 12	hostname(config)# service-policy policy_map_name global Example: hostname(config)# service-policy global_policy global	Enables the service policy for SIP inspection for all interfaces. Where name for the policy-map command is the name of the global policy map.

Monitoring Cisco Unified Presence

Debugging is similar to debugging TLS proxy for IP Telephony. You can enable TLS proxy debug flags along with SSL syslogs to debug TLS proxy connection problems.

For example, use the following commands to enable TLS proxy-related debug and syslog output only:

```
hostname(config)# debug inspect tls-proxy events
hostname(config)# debug inspect tls-proxy errors
hostname(config)# logging enable
hostname(config)# logging timestamp
hostname(config)# logging list loglist message 711001
hostname(config)# logging list loglist message 725001-725014
hostname(config)# logging list loglist message 717001-717038
hostname(config)# logging buffer-size 1000000
hostname(config)# logging buffered loglist
hostname(config)# logging debug-trace
```

For information about TLS proxy debugging techniques and sample output, see [Monitoring the TLS Proxy, page 49-15](#).

Enable the **debug sip** command for SIP inspection engine debugging. See the command reference.

Additionally, you can capture the raw and decrypted data by the TLS proxy by entering the following commands:

```
hostname# capture mycap interface outside (capturing raw packets)
hostname# capture mycap-dec type tls-proxy interface outside (capturing decrypted data)
hostname# show capture capture_name
hostname# copy /pcap capture:capture_name tftp://tftp_location
```

Configuration Example for Cisco Unified Presence

This section contains the following topics:

- [Example Configuration for SIP Federation Deployments, page 51-15](#)

- [Example Access List Configuration for XMPP Federation, page 51-17](#)
- [Example NAT Configuration for XMPP Federation, page 51-18](#)

Example Configuration for SIP Federation Deployments

The following sample illustrates the necessary configuration for the ASA to perform TLS proxy for Cisco Unified Presence as shown in [Figure 51-5](#). It is assumed that a single Cisco UP (Entity X) is in the local domain and self-signed certificates are used between Entity X and the ASA.

For each Cisco UP that could initiate a connection (by sending SIP SUBSCRIBE) to the foreign server, you must also configure static PAT and if you have another Cisco UP with the address (10.0.0.3 in this sample), it must use a different set of PAT ports (such as 45062 or 45070). Dynamic NAT or PAT can be used for outbound connections or TLS handshake. The ASA SIP inspection engine takes care of the necessary translation (fixup).

When you create the necessary RSA key pairs, a key pair is used by the self-signed certificate presented to Entity X (proxy for Entity Y). When you create a proxy certificate for Entity Y, the certificate is installed on the Entity X truststore. It could also be enrolled with a local CA trusted by Entity X.

Exporting the ASA self-signed certificate (ent_y_proxy) and installing it as a trusted certificate on Entity X is necessary for Entity X to authenticate the ASA. Exporting the Entity X certificate and installing it on the ASA is needed for the ASA to authenticate Entity X during handshake with X. If Entity X uses a self-signed certificate, the self-signed certificate must be installed; if Entity X uses a CA issued the certificate, the CA's certificated needs to be installed.


For about obtaining a certificate from a trusted CA, see the [“Configuring Digital Certificates” section on page 41-9](#).

Installing the CA certificate that signs the Entity Y certificate on the ASA is necessary for the ASA to authenticate Entity Y.

When creating TLS proxy instances for Entity X and Entity Y, the entity that initiates the TLS connection is in the role of “TLS client”. Because the TLS proxy has strict definition of “client” and “server” proxy, two TLS proxy instances must be defined if either of the entities could initiate the connection.

When enabling the TLS proxy for SIP inspection, policies must be defined for both entities that could initiate the connection.

Figure 51-5 Typical Cisco Unified Presence/LCS Federation Scenario

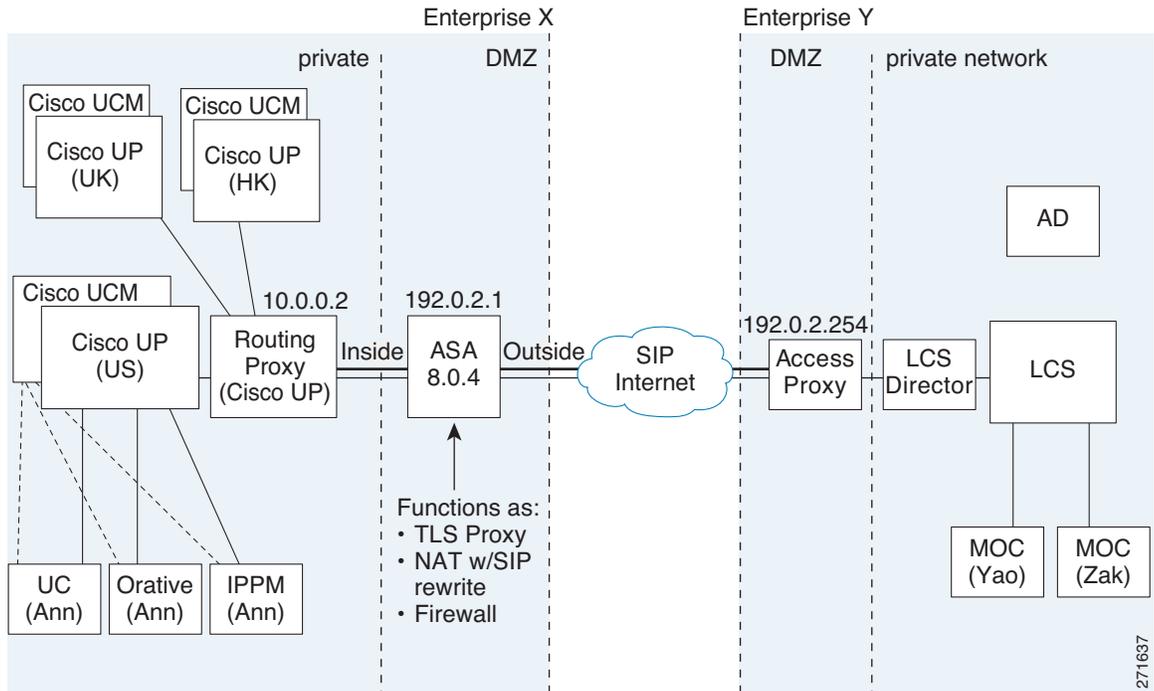

```

object network obj-10.0.0.2-01
  host 10.0.0.2
  nat (inside,outside) static 192.0.2.1 service tcp 5061 5061
object network obj-10.0.0.2-02
  host 10.0.0.2
  nat (inside,outside) static 192.0.2.1 service tcp 5062 5062
object network obj-10.0.0.2-03
  host 10.0.0.2
  nat (inside,outside) static 192.0.2.1 service udp 5070 5070
object network obj-10.0.0.3-01
  host 10.0.0.3
  nat (inside,outside) static 192.0.2.1 service tcp 5062 45062
object network obj-10.0.0.3-02
  host 10.0.0.3
  nat (inside,outside) static 192.0.2.1 service udp 5070 45070
object network obj-0.0.0.0-01
  subnet 0.0.0.0 0.0.0.0
  nat (inside,outside) dynamic 192.0.2.1
crypto key generate rsa label ent_y_proxy_key modulus 1024
! for self-signed Entity Y proxy certificate
crypto ca trustpoint ent_y_proxy
  enrollment self
  fqdn none
  subject-name cn=Ent-Y-Proxy
  keypair ent_y_proxy_key
crypto ca enroll ent_y_proxy
crypto ca export ent_y_proxy identity-certificate
! for Entity X's self-signed certificate
crypto ca trustpoint ent_x_cert
  enrollment terminal
crypto ca authenticate ent_x_cert
Enter the base 64 encoded CA certificate.
End with a blank line or the word "quit" on a line by itself
[ certificate data omitted ]

```

```

quit
! for Entity Y's CA certificate
crypto ca trustpoint ent_y_ca
  enrollment terminal
crypto ca authenticate ent_y_ca
Enter the base 64 encoded CA certificate.
End with a blank line or the word "quit" on a line by itself
MIIDRTCCAu+gAwIBAgIQKVCqP/KW74VP0NZzL+JbRTANBgkqhkiG9w0BAQUFADCB
  [ certificate data omitted ]
/7QEM8izy0EOTSErKu7Nd76jwf5e4qttkQ==
quit
! Entity X to Entity Y
tls-proxy ent_x_to_y
  server trust-point ent_y_proxy
  client trust-point ent_x_proxy
  client cipher-suite aes128-sha1 aes256-sha1 3des-sha1 null-sha1
! Entity Y to Entity X
tls-proxy ent_y_to_x
  server trust-point ent_x_proxy
  client trust-point ent_y_proxy
  client cipher-suite aes128-sha1 aes256-sha1 3des-sha1 null-sha1
access-list ent_x_to_y extended permit tcp host 10.0.0.2 host 192.0.2.254 eq 5061
access-list ent_y_to_x extended permit tcp host 192.0.2.254 host 192.0.2.1 eq 5061
class-map ent_x_to_y
  match access-list ent_x_to_y
class-map ent_y_to_x
  match access-list ent_y_to_x
policy-map type inspect sip sip_inspect
  parameters
    ! SIP inspection parameters
policy-map global_policy
  class ent_x_to_y
    inspect sip sip_inspect tls-proxy ent_x_to_y
  class ent_y_to_x
    inspect sip sip_inspect tls-proxy ent_y_to_x
service-policy global_policy global

```

Example Access List Configuration for XMPP Federation

Example 1: This example access list configuration allows from any address to any address on port 5269:

```
access-list ALLOW-ALL extended permit tcp any any eq 5269
```

Example 2: This example access list configuration allows from any address to any single XMPP federation node on port 5269. The following values are used in this example:

- Private XMPP federation Cisco Unified Presence Release 8.0 IP address = 1.1.1.1
- XMPP federation listening port = 5269

```
access-list ALLOW-ALL extended permit tcp any host 1.1.1.1 eq 5269
```

Example 3: This example access list configuration allows from any address to specific XMPP federation nodes published in DNS.



Note

The public addresses are published in DNS, but the private addresses are configured in the access-list command.

The following values are used in this sample configuration:

- Private XMPP federation Cisco Unified Presence Release 8.0 IP address = 1.1.1.1
- Private second Cisco Unified Presence Release 8.0 IP address = 2.2.2.2
- Private third Cisco Unified Presence Release 7.x IP address = 3.3.3.3
- XMPP federation listening port = 5269

```
access-list ALLOW-ALL extended permit tcp any host 1.1.1.1 eq 5269
access-list ALLOW-ALL extended permit tcp any host 2.2.2.2 eq 5269
access-list ALLOW-ALL extended permit tcp any host 3.3.3.3 eq 5269
```

Example 4: This example access list configuration allows only from a specific federated domain interface to specific XMPP federation nodes published in DNS.



Note

The public addresses are published in DNS, but the private addresses are configured in the access-list command.

The following values are used in this sample configuration:

- Private XMPP federation Cisco Unified Presence Release 8.0 IP address = 1.1.1.1
- Private second Cisco Unified Presence Release 8.0 IP address = 2.2.2.2
- Private third Cisco Unified Presence Release 7.x IP address = 3.3.3.3
- XMPP federation listening port = 5269
- External interface of the foreign XMPP enterprise = 100.100.100.100

```
access-list ALLOW-ALL extended permit tcp host 100.100.100.100 host 1.1.1.1 eq 5269
access-list ALLOW-ALL extended permit tcp host 100.100.100.100 host 2.2.2.2 eq 5269
access-list ALLOW-ALL extended permit tcp host 100.100.100.100 host 3.3.3.3 eq 5269
```

Example NAT Configuration for XMPP Federation

Example 1: Single node with XMPP federation enabled

The following values are used in this sample configuration:

- Public Cisco Unified Presence IP address = 10.10.10.10
- Private XMPP federation Cisco Unified Presence Release 8.0 IP address = 1.1.1.1
- XMPP federation listening port = 5269

```
nat (inside,outside) source static obj_host_1.1.1.1 obj_host_10.10.10.10 service
obj_udp_source_eq_5269 obj_udp_source_eq_5269
nat (inside,outside) source static obj_host_1.1.1.1 obj_host_10.10.10.10 service
obj_tcp_source_eq_5269 obj_tcp_source_eq_5269
```

Example 2: Multiple nodes with XMPP federation, each with a public IP address in DNS

The following values are used in this sample configuration:

- Public Cisco Unified Presence IP addresses = 10.10.10.10, 20.20.20.20, 30.30.30.30
- Private XMPP federation Cisco Unified Presence Release 8.0 IP address = 1.1.1.1
- Private second Cisco Unified Presence Release 8.0 IP address = 2.2.2.2

- Private third Cisco Unified Presence Release 7.x IP address = 3.3.3.3
- XMPP federation listening port = 5269

```

nat (inside,outside) source static obj_host_1.1.1.1 obj_host_10.10.10.10 service
obj_udp_source_eq_5269 obj_udp_source_eq_5269
nat (inside,outside) source static obj_host_1.1.1.1 obj_host_10.10.10.10 service
obj_tcp_source_eq_5269 obj_tcp_source_eq_5269

nat (inside,outside) source static obj_host_2.2.2.2 obj_host_20.20.20.20 service
obj_udp_source_eq_5269 obj_udp_source_eq_5269
nat (inside,outside) source static obj_host_2.2.2.2 obj_host_20.20.20.20 service
obj_tcp_source_eq_5269 obj_tcp_source_eq_5269

nat (inside,outside) source static obj_host_3.3.3.3 obj_host_30.30.30.30 service
obj_udp_source_eq_5269 obj_udp_source_eq_5269
nat (inside,outside) source static obj_host_3.3.3.3 obj_host_30.30.30.30 service
obj_tcp_source_eq_5269 obj_tcp_source_eq_5269

```

Example 3: Multiple nodes with XMPP federation, but a single public IP address in DNS with arbitrary ports published in DNS (PAT).

The following values are used in this sample configuration:

- Public Cisco Unified Presence IP Address = 10.10.10.10
- Private XMPP federation Cisco Unified Presence Release 8.0 IP address = 1.1.1.1, port 5269
- Private second Cisco Unified Presence Release 8.0 IP address = 2.2.2.2, arbitrary port 25269
- Private third Cisco Unified Presence Release 7.x IP address = 3.3.3.3, arbitrary port 35269

```

nat (inside,outside) source static obj_host_1.1.1.1 obj_host_10.10.10.10 service
obj_udp_source_eq_5269 obj_udp_source_eq_5269
nat (inside,outside) source static obj_host_1.1.1.1 obj_host_10.10.10.10 service
obj_tcp_source_eq_5269 obj_tcp_source_eq_5269

nat (inside,outside) source static obj_host_2.2.2.2 obj_host_10.10.10.10 service
obj_udp_source_eq_5269 obj_udp_source_eq_25269
nat (inside,outside) source static obj_host_2.2.2.2 obj_host_10.10.10.10 service
obj_tcp_source_eq_5269 obj_tcp_source_eq_25269

nat (inside,outside) source static obj_host_3.3.3.3 obj_host_10.10.10.10 service
obj_udp_source_eq_5269 obj_udp_source_eq_35269
nat (inside,outside) source static obj_host_3.3.3.3 obj_host_10.10.10.10 service
obj_tcp_source_eq_5269 obj_tcp_source_eq_35269

```

Feature History for Cisco Unified Presence

Table 51-1 lists the release history for this feature.

Table 51-1 Feature History for Cisco Unified Presence

Feature Name	Releases	Feature Information
Cisco Presence Federation Proxy	8.0(4)	The Cisco Unified Presence proxy feature was introduced.
Cisco Presence Federation Proxy	8.3(1)	The Unified Communications Wizard was added to ASDM. By using the wizard, you can configure the Cisco Presence Federation Proxy. Support for XMPP Federation was introduced.



CHAPTER 52

Configuring Cisco Intercompany Media Engine Proxy

This chapter describes how to configure the adaptive security appliance for Cisco Intercompany Media Engine Proxy.

This chapter includes the following sections:

- [Information About Cisco Intercompany Media Engine Proxy, page 52-1](#)
- [Licensing for Cisco Intercompany Media Engine, page 52-8](#)
- [Guidelines and Limitations, page 52-9](#)
- [Configuring Cisco Intercompany Media Engine Proxy, page 52-11](#)
- [Troubleshooting Cisco Intercompany Media Engine Proxy, page 52-34](#)
- [Feature History for Cisco Intercompany Media Engine Proxy, page 52-37](#)

Information About Cisco Intercompany Media Engine Proxy

This section includes the following topics:

- [Features of Cisco Intercompany Media Engine Proxy, page 52-1](#)
- [How the UC-IME Works with the PSTN and the Internet, page 52-2](#)
- [Tickets and Passwords, page 52-3](#)
- [Call Fallback to the PSTN, page 52-5](#)
- [Architecture and Deployment Scenarios for Cisco Intercompany Media Engine, page 52-5](#)

Features of Cisco Intercompany Media Engine Proxy

Cisco Intercompany Media Engine enables companies to interconnect on-demand, over the Internet with advanced features made available by VoIP technologies. Cisco Intercompany Media Engine allows for business-to-business federation between Cisco Unified Communications Manager clusters in different enterprises by utilizing peer-to-peer, security, and SIP protocols to create dynamic SIP trunks between businesses. A collection of enterprises work together to end up looking like one large business with inter-cluster trunks between them.

The adaptive security appliance applies its existing TLS proxy, SIP Application Layer Gateway (ALG), and SIP verification features to the functioning of Cisco Intercompany Media Engine.

Cisco Intercompany Media Engine has the following key features:

- Works with existing phone numbers: Cisco Intercompany Media Engine works with the phone numbers an enterprise currently has and does not require an enterprise to learn new numbers or change providers to use Cisco Intercompany Media Engine.
- Works with existing IP phones: Cisco Intercompany Media Engine works with the existing IP phones within an enterprise. However, the feature set in business-to-business calls is limited to the capabilities of the IP phones.
- Does not require purchasing new services: Cisco Intercompany Media Engine does not require any new services from any service providers. Customers continue to use the PSTN connectivity they have and the Internet connectivity they have today. Cisco Intercompany Media Engine gradually moves calls off the PSTN and onto the Internet.
- Provides a full Cisco Unified Communications experience: Because Cisco Intercompany Media Engine creates inter-cluster SIP trunks between enterprises, any Unified Communication features that work over the SIP trunk and only require a SIP trunk work with the Cisco Intercompany Media Engine, thus providing a Unified Communication experience across enterprises.
- Works on the Internet: Cisco Intercompany Media Engine was designed to work on the Internet. It can also work on managed extranets.
- Provides worldwide reach: Cisco Intercompany Media Engine can connect to any enterprise anywhere in the world, as long as the enterprise is running Cisco Intercompany Media Engine technology. There are no regional limitations. This is because Cisco Intercompany Media Engine utilizes two networks that both have worldwide reach—the Internet and the PSTN.
- Allows for unlimited scale: Cisco Intercompany Media Engine can work with any number of enterprises.
- Is self-learning: The system is primarily self-learning. Customers do not have to enter information about other businesses: no phone prefixes, no IP address, no ports, no domain names, nor certificates. Customers need to configure information about their own networks, and provide policy information if they want to limit the scope of Cisco Intercompany Media Engine.
- Is secure: Cisco Intercompany Media Engine is secure, utilizing a large number of different technologies to accomplish this security.
- Includes anti-spam: Cisco Intercompany Media Engine prevents people from setting up software on the Internet that spams enterprises with phone calls. It provides an extremely high barrier to entry.
- Provides for QoS management: Cisco Intercompany Media Engine provides features that help customers manage the QoS on the Internet, such as the ability to monitor QoS of the RTP traffic in real-time and fallback to PSTN automatically if problems arise.


How the UC-IME Works with the PSTN and the Internet

The Cisco Intercompany Media Engine utilizes two networks that both have worldwide reach—the Internet and the PSTN. Customers continue to use the PSTN connectivity they have. The Cisco Intercompany Media Engine gradually moves calls off the PSTN and onto the Internet. However, if QoS problems arise, the Cisco Intercompany Media Engine Proxy monitors QoS of the RTP traffic in real-time and fallbacks to PSTN automatically.

The Cisco Intercompany Media Engine uses information from PSTN calls to validate that the terminating side owns the number that the originated side had called. After the PSTN call terminates, the enterprises involved in the call send information about the call to their Cisco IME server. The Cisco IME server on the originating side validates the call. [Figure 52-1](#) shows the initial call flow through the PSTN.

On successful verification, the terminating side creates a ticket that grants permission to the call originator to make a Cisco IME call to a specific number. See [Tickets and Passwords, page 52-3](#) for information.

Figure 52-1 Interaction of the UC-IME Proxy with the PSTN

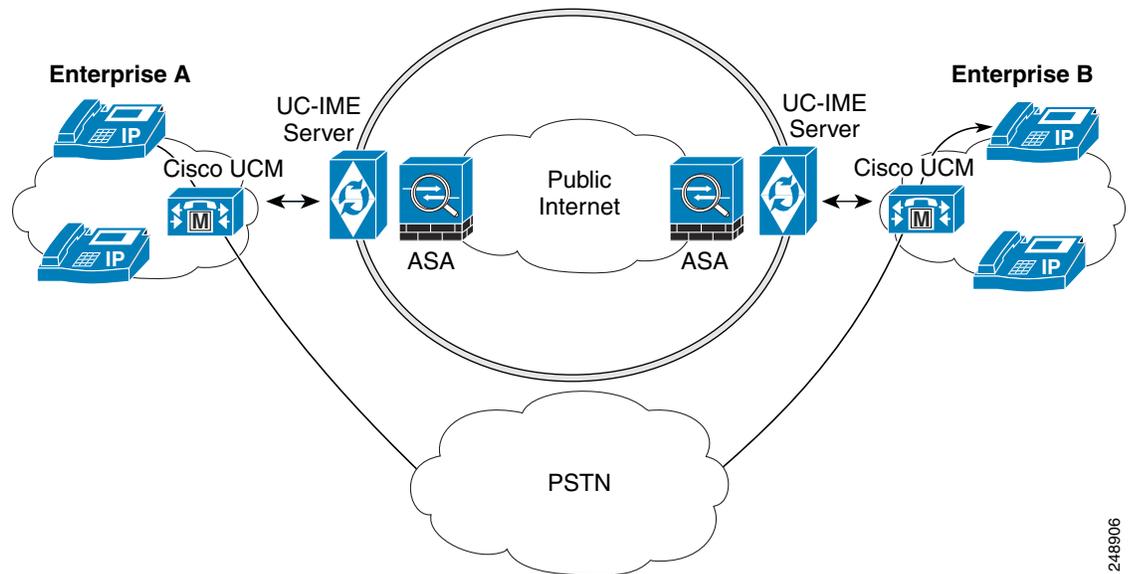

248906

Tickets and Passwords

Cisco Intercompany Media Engine utilizes tickets and passwords to provide enterprise verification. Verification through the creation of tickets ensures an enterprise is not subject to denial-of-service (DOS) attacks from the Internet or endless VoIP spam calls. Ticket verification prevents spam and DOS attacks because it introduces a cost to the VoIP caller; namely, the cost of a PSTN call. A malicious user cannot set up just an open source asterisk PBX on the Internet and begin launching SIP calls into an enterprise running Cisco Intercompany Media Engine. Having the Cisco Intercompany Media Engine Proxy verify tickets allows incoming calls from a particular enterprise to a particular number only when that particular enterprise has previously called that phone number on the PSTN.

To send a spam VoIP call to every phone within an enterprise, an organization would have to purchase the Cisco Intercompany Media Engine and Cisco Unified Communications Manager and have called each phone number within the enterprise over the PSTN and completed each call successfully. Only then can it launch a VoIP call to each number.


The Cisco Intercompany Media Engine server creates tickets and the ASA validates them. The ASA and Cisco Intercompany Media Engine server share a password that is configured so that the ASA detects the ticket was created by a trusted Cisco Intercompany Media Engine server. The ticket contains information that indicates that the enterprise is authorized to call specific phone numbers at the target enterprise. See [Figure 52-2](#) for the ticket verification process and how it operates between the originating and terminating-call enterprises.



Note

Because the initial calls are over the PSTN, they are subject to any national regulations regarding telemarketing calling. For example, within the United States, they would be subject to the national do-not-call registry.

Figure 52-2 Ticket Verification Process with Cisco Intercompany Media Engine

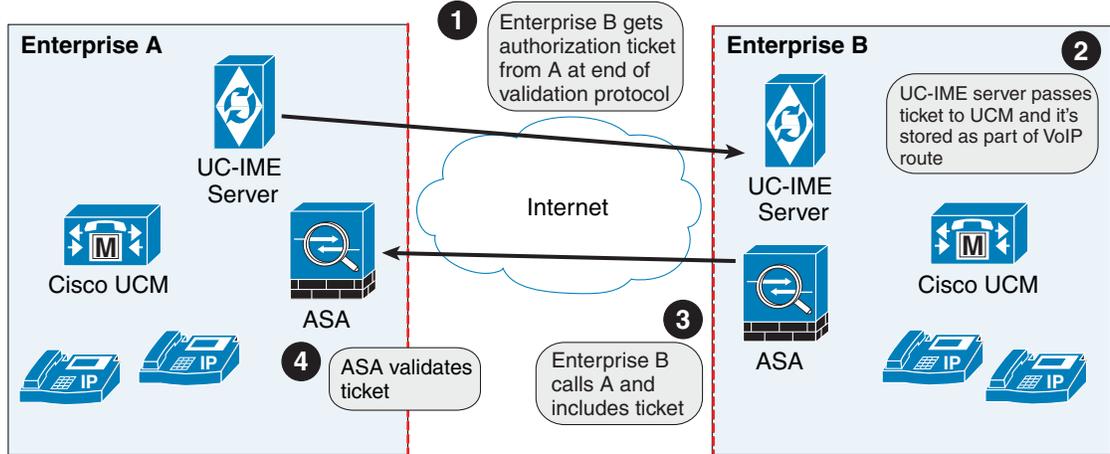

248761

As illustrated in [Figure 52-2](#), Enterprise B makes a PSTN call to Enterprise A. That call completes successfully. Later, Enterprise B's Cisco Intercompany Media Engine server initiates validation procedures with Enterprise A. These validation procedures succeed. During the validation handshake, Enterprise B sends Enterprise A its domain name. Enterprise A verifies that this domain name is not on the blacklisted set of domains. Assuming it is not, Enterprise A creates a ticket.

Subsequently, someone in Enterprise B calls that number again. That call setup message from Enterprise B to Enterprise A includes the ticket in the X-Cisco-UC-IME-Ticket header field in the SIP INVITE message. This message arrives at the Enterprise A ASA. The ASA verifies the signature and computes several checks on the ticket to make sure it is valid. If the ticket is valid, the ASA forwards the request to Cisco UCM (including the ticket). Because the ASA drops requests that lack a valid ticket, unauthorized calls are never received by Cisco UCM.

The ticket password is a 128-bit random key, which can be thought of as a shared password between the adaptive security appliance and the Cisco Intercompany Media Engine server. This password is generated by the Cisco Intercompany Media Engine server and is used by a Cisco Intercompany Media Engine SIP trunk to generate a ticket to allow a call to be made between Cisco Intercompany Media Engine SIP trunks. A ticket is a signed object that contains a number of fields that grant permission to the calling domain to make a Cisco Intercompany Media Engine call to a specific number. The ticket is signed by the ticket password.

The Cisco Intercompany Media Engine also requires that you configure an epoch for the password. The epoch contains an integer that updates each time that the password is changed. When the proxy is configured the first time and a password entered for the first time, enter 1 for the epoch integer. Each time you change the password, increment the epoch to indicate the new password. You must increment the epoch value each time you change the password.

Typically, you increment the epoch sequentially; however, the ASA allows you to choose any value when you update the epoch. If you change the epoch value, the tickets in use at remote enterprises become invalid. The incoming calls from the remote enterprises fallback to the PSTN until the terminating enterprise reissues tickets with the new epoch value and password.

The epoch and password that you configure on the ASA must match the epoch and password configured on the Cisco Intercompany Media Engine server. If you change the password or epoch on the ASA, you must update them on the Cisco Intercompany Media Engine server. See the Cisco Intercompany Media Engine server documentation for information.

Call Fallback to the PSTN

Cisco Intercompany Media Engine provides features that manage the QoS on the Internet, such as the ability to monitor QoS of the RTP traffic in real-time and fallback to PSTN automatically if problems arise. Call fallback from Internet VoIP calls to the public switched telephone network (PSTN) can occur for two reasons: changes in connection quality and signal failure for the Cisco Intercompany Media Engine.

Internet connections can vary wildly in their quality and vary over time. Therefore, even if a call is sent over VoIP because the quality of the connection was good, the connection quality might worsen mid-call. To ensure an overall good experience for the end user, Cisco Intercompany Media Engine attempts to perform a mid-call fallback.

Performing a mid-call fallback requires the adaptive security appliance to monitor the RTP packets coming from the Internet and send information into an RTP Monitoring Algorithm (RMA) API, which will indicate to the adaptive security appliance whether fallback is required. If fallback is required, the adaptive security appliance sends a REFER message to Cisco UCM to tell it that it needs to fallback the call to PSTN.

The TLS signaling connections from the Cisco UCM are terminated on the adaptive security appliance and a TCP or TLS connection is initiated to the Cisco UCM. SRTP (media) sent from external IP phones to the internal network IP phone via the adaptive security appliance is converted to RTP. The adaptive security appliance inserts itself into the media path by modifying the SIP signaling messages that are sent over the SIP trunk between Cisco UCMs. TLS (signaling) and SRTP are always terminated on the adaptive security appliance.

If signaling problems occur, the call falls back to the PSTN; however, the Cisco UCM initiates the PSTN fallback and the adaptive security appliance does not send REFER message.

Architecture and Deployment Scenarios for Cisco Intercompany Media Engine

This section includes the following topics:

- [Architecture, page 52-5](#)
- [Basic Deployment, page 52-6](#)
- [Off Path Deployment, page 52-7](#)

Architecture


Within the enterprise, Cisco Intercompany Media Engine is deployed with the following components for the following purposes:

- The adaptive security appliance—Enabled with the Cisco Intercompany Media Engine Proxy, provides perimeter security functions and inspects SIP signaling between SIP trunks.
- Cisco Intercompany Media Engine (UC-IME) server— Located in the DMZ, provides an automated provisioning service by learning new VoIP routes to particular phone numbers, and recording those routes in Cisco UCM. The Cisco Intercompany Media Engine server does not perform call control.
- Cisco Unified Communications Manager (Cisco UCM)—Responsible for call control and processing. Cisco UCM connects to the Cisco Intercompany Media Engine server by using the Access Protocol to publish and exchange updates. The architecture can consist of a single Cisco UCM or a Cisco UCM cluster within the enterprise.

- Cisco Intercompany Media Engine (UC-IME) Bootstrap server—Provides a certificate required admission onto the public peer-to-peer network for Cisco Intercompany Media Engine.

Figure 52-3 illustrates the components of the Cisco Intercompany Media Engine in a basic deployment.

Figure 52-3 Cisco Intercompany Media Engine Architecture in a Basic Deployment

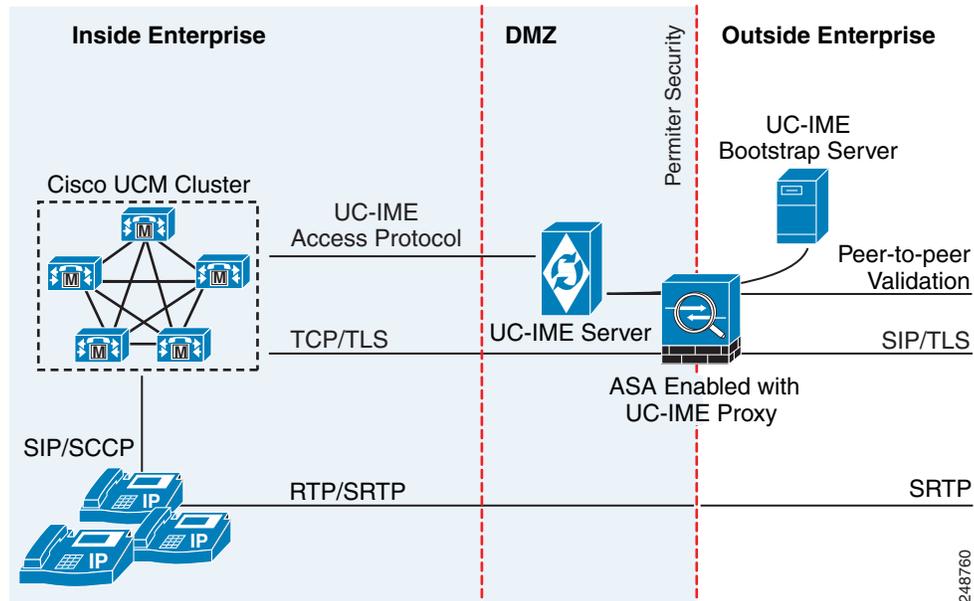


Basic Deployment

In a basic deployment, the Cisco Intercompany Media Engine Proxy sits in-line with the Internet firewall such that all Internet traffic traverses the adaptive security appliance. In this deployment, a single Cisco UCM or a Cisco UCM cluster is centrally deployed within the enterprise, along with a Cisco Intercompany Media Engine server (and perhaps a backup).

As shown in Figure 52-4, the adaptive security appliance sits on the edge of the enterprise and inspects SIP signaling by creating dynamic SIP trunks between enterprises.

Figure 52-4 Basic Deployment Scenario

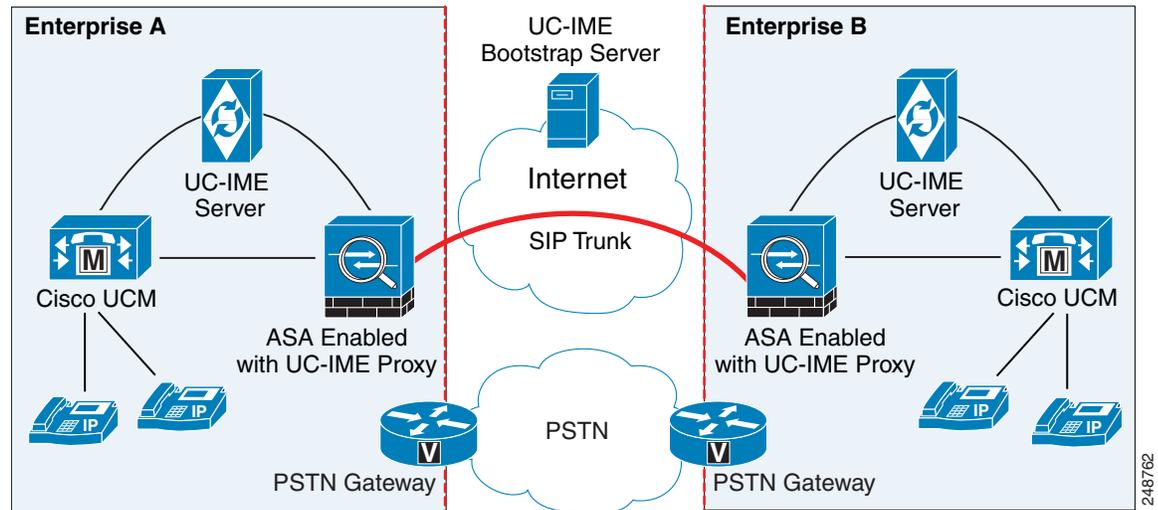

2-48762

Off Path Deployment


In an off path deployment, inbound and outbound Cisco Intercompany Media Engine calls pass through an adaptive security appliance enabled with the Cisco Intercompany Media Engine Proxy. The adaptive security appliance is located in the DMZ and is configured to support only the Cisco Intercompany Media Engine traffic (SIP signaling and RTP traffic). Normal Internet facing traffic does not flow through this adaptive security appliance.

For all inbound calls, the signaling is directed to the adaptive security appliance because destined Cisco UCMs are configured with the global IP address on the adaptive security appliance. For outbound calls, the called party could be any IP address on the Internet; therefore, the adaptive security appliance is configured with a mapping service that dynamically provides an internal IP address on the adaptive security appliance for each global IP address of the called party on the Internet.

Cisco UCM sends all outbound calls directly to the mapped internal IP address on the adaptive security appliance instead of the global IP address of the called party on the Internet. The adaptive security appliance then forwards the calls to the global IP address of the called party.

Figure 52-5 illustrates the architecture of the Cisco Intercompany Media Engine in an off path deployment.

Figure 52-5 Off Path Deployment of the Adaptive Security Appliance

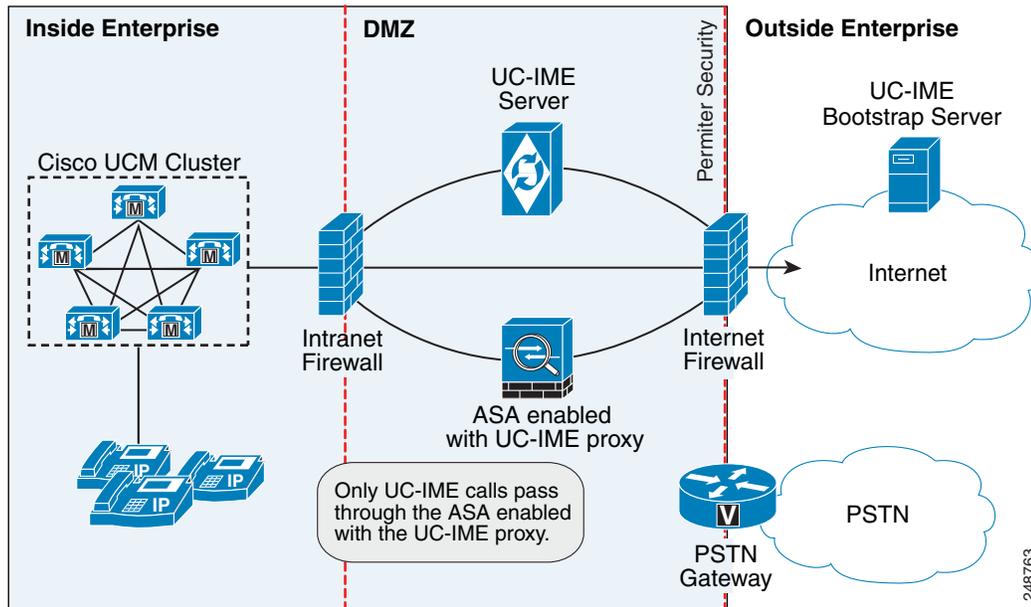

Licensing for Cisco Intercompany Media Engine

The Cisco Intercompany Media Engine feature supported by the ASA require a Unified Communications Proxy license.

The following table shows the details of the Unified Communications Proxy license:



Note

This feature is not available on No Payload Encryption models.

Model	License Requirement
All other models	<p>Intercompany Media Engine license.</p> <p>When you enable the Intercompany Media Engine (IME) license, you can use TLS proxy sessions up to the configured TLS proxy limit. If you also have a Unified Communications (UC) license installed that is higher than the default TLS proxy limit, then the ASA sets the limit to be the UC license limit plus an additional number of sessions depending on your model. You can manually configure the TLS proxy limit using the tls-proxy maximum-sessions command. To view the limits of your model, enter the tls-proxy maximum-sessions ? command. If you also install the UC license, then the TLS proxy sessions available for UC are also available for IME sessions. For example, if the configured limit is 1000 TLS proxy sessions, and you purchase a 750-session UC license, then the first 250 IME sessions do not affect the sessions available for UC. If you need more than 250 sessions for IME, then the remaining 750 sessions of the platform limit are used on a first-come, first-served basis by UC and IME.</p> <ul style="list-style-type: none"> • For a license part number ending in “K8”, TLS proxy sessions are limited to 1000. • For a license part number ending in “K9”, the TLS proxy limit depends on your configuration and the platform model. <p>Note K8 and K9 refer to whether the license is restricted for export: K8 is unrestricted, and K9 is restricted.</p> <p>You might also use SRTP encryption sessions for your connections:</p> <ul style="list-style-type: none"> • For a K8 license, SRTP sessions are limited to 250. • For a K9 license, there is no limit. <p>Note Only calls that require encryption/decryption for media are counted toward the SRTP limit; if passthrough is set for the call, even if both legs are SRTP, they do not count toward the limit.</p>

For more information about licensing, see [Chapter 3, “Managing Feature Licenses.”](#)

Guidelines and Limitations

Context Mode Guidelines

Supported in single context mode only.

Firewall Mode Guidelines

Supported in routed firewall mode only.

IPv6 Guidelines

Does not support IPv6 addresses.

Additional Guidelines and Limitations

Cisco Intercompany Media Engine has the following limitations:

- Fax is not supported. Fax capability needs to be disabled on the SIP trunk.
- Stateful failover of Cisco Unified Intercompany Media Engine is not supported. During failover, existing calls traversing the Cisco Intercompany Media Engine Proxy disconnect; however, new calls successfully traverse the proxy after the failover completes.

- Having Cisco UCMs on more than one of the ASA interfaces is not supported with the Cisco Intercompany Media Engine Proxy. Having the Cisco UCMs on one trusted interface is especially necessary in an off path deployment because the ASA requires that you specify the listening interface for the mapping service and the Cisco UCMs must be connected on one trusted interface.
- Multipart MIME is not supported.
- Only existing SIP features and messages are supported.
- H.264 is not supported.
- RTCP is not supported. The ASA drops any RTCP traffic sent from the inside interface to the outside interface. The ASA does not convert RTCP traffic from the inside interface into SRTP traffic.
- The Cisco Intercompany Media Engine Proxy configured on the ASA creates a dynamic SIP trunk for each connection to a remote enterprise. However, you cannot configure a unique subject name for each SIP trunk. The Cisco Intercompany Media Engine Proxy can have only one subject name configured for the proxy.

Additionally, the subject DN you configure for the Cisco Intercompany Media Engine Proxy match the domain name that has been set for the local Cisco UCM.

- If a service policy rule for the Cisco Intercompany Media Engine Proxy is removed (by using the `no service policy` command) and reconfigured, the first call traversing the ASA will fail. The call fails over to the PSTN because the Cisco UCM does not know the connections are cleared and tries to use the recently cleared IME SIP trunk for the signaling.

To resolve this issue, you must additionally enter the **clear connection all** command and restart the ASA. If the failure is due to failover, the connections from the primary ASA are not synchronized to the standby ASA.

- After the **clear connection all** command is issued on an ASA enabled with a UC-IME Proxy and the IME call fails over to the PSTN, the next IME call between an originating and terminating SCCP IP phone completes but does not have audio and is dropped after the signaling session is established.

An IME call between SCCP IP phones use the IME SIP trunk in both directions. Namely, the signaling from the calling to called party uses the IME SIP trunk. Then, the called party uses the reverse IME SIP trunk for the return signaling and media exchange. However, this connection is already cleared on the ASA, which causes the IME call to fail.

The next IME call (the third call after the **clear connection all** command is issued), will be completely successful.



Note This limitation does not apply when the originating and terminating IP phones are configured with SIP.

- The ASA must be licensed and configured with enough TLS proxy sessions to handle the IME call volume. See [Licensing for Cisco Intercompany Media Engine](#) for information about the licensing requirements for TLS proxy sessions.

This limitation occurs because an IME call cannot fall back to the PSTN when there are not enough TLS proxy sessions left to complete the IME call. An IME call between two SCCP IP phones requires the ASA to use two TLS proxy sessions to successfully complete the TLS handshake.

Assume for example, the ASA is configured to have a maximum of 100 TLS proxy sessions and IME calls between SCCP IP phones establish 101 TLS proxy sessions. In this example, the next IME call is initiated successfully by the originating SCCP IP phone but fails after the call is accepted by the terminating SCCP IP phone. The terminating IP phone rings and on answering the call, the call hangs due to an incomplete TLS handshake. The call does not fall back to the PSTN.

Configuring Cisco Intercompany Media Engine Proxy


This section contains the following topics:

- [Task Flow for Configuring Cisco Intercompany Media Engine](#), page 52-11
- [Configuring NAT for Cisco Intercompany Media Engine Proxy](#), page 52-12
- [Configuring PAT for the Cisco UCM Server](#), page 52-14
- [Creating Access Lists for Cisco Intercompany Media Engine Proxy](#), page 52-16
- [Creating the Media Termination Instance](#), page 52-17
- [Creating the Cisco Intercompany Media Engine Proxy](#), page 52-18
- [Creating Trustpoints and Generating Certificates](#), page 52-21
- [Creating the TLS Proxy](#), page 52-24
- [Enabling SIP Inspection for the Cisco Intercompany Media Engine Proxy](#), page 52-25
- [\(Optional\) Configuring TLS within the Local Enterprise](#), page 52-27
- [\(Optional\) Configuring Off Path Signaling](#), page 52-30

Task Flow for Configuring Cisco Intercompany Media Engine

Figure 52-6 provides an example for a basic deployment of the Cisco Intercompany Media Engine. The following tasks include command line examples based on Figure 52-6.

Figure 52-6 Example for Basic (in-line) Deployment Tasks

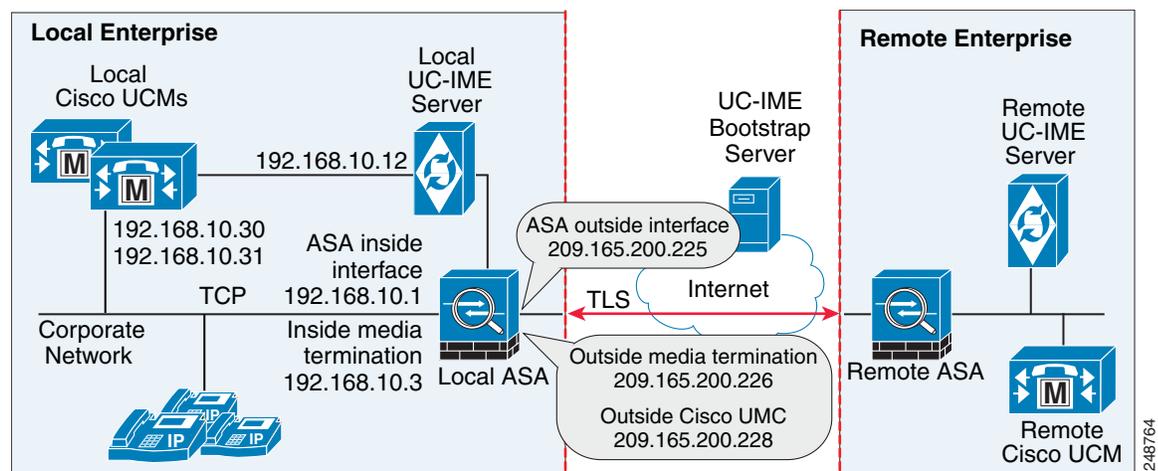

Note

Step 1 through Step 8 apply to both basic (in-line) and off path deployments and Step 9 applies only to off path deployment.

To configure a Cisco Intercompany Media Engine for a basic deployment, perform the following tasks.

- Step 1** Configure static NAT for Cisco UCM. See [Configuring NAT for Cisco Intercompany Media Engine Proxy](#), page 52-12.

Or

Configure PAT for the UCM server. See [Configuring PAT for the Cisco UCM Server, page 52-14](#).

- Step 2** Create access lists for Cisco Intercompany Media Engine Proxy. See [Creating Access Lists for Cisco Intercompany Media Engine Proxy, page 52-16](#).
- Step 3** Create the media termination address instance for Cisco Intercompany Media Engine Proxy. See [Creating the Media Termination Instance, page 52-17](#).
- Step 4** Create the Cisco Intercompany Media Engine Proxy. See [Creating the Cisco Intercompany Media Engine Proxy, page 52-18](#).
- Step 5** Create trustpoints and generate certificates for the Cisco Intercompany Media Engine Proxy. See [Creating Trustpoints and Generating Certificates, page 52-21](#).
- Step 6** Create the TLS proxy. See [Creating the TLS Proxy, page 52-24](#).
- Step 7** Configure SIP inspection for the Cisco Intercompany Media Engine Proxy. See [Enabling SIP Inspection for the Cisco Intercompany Media Engine Proxy, page 52-25](#).
- Step 8** (Optional) Configure TLS within the enterprise. See [\(Optional\) Configuring TLS within the Local Enterprise, page 52-27](#).
- Step 9** (Optional) Configure off path signaling. See [\(Optional\) Configuring Off Path Signaling, page 52-30](#).



Note You only perform [Step 9](#) when you are configuring the Cisco Intercompany Media Engine Proxy in an off path deployment.


Configuring NAT for Cisco Intercompany Media Engine Proxy

To configure auto NAT, you first configure an object; then use the **nat** command in the object configuration mode.

The example command lines in this task are based on a basic (in-line) deployment. See [Figure 52-6 on page 52-11](#) for an illustration explaining the example command lines in this task.

Alternatively, you can configure PAT for the Cisco Intercompany Media Engine Proxy. See [Configuring PAT for the Cisco UCM Server, page 52-14](#).

Figure 52-7 Example for Configuring NAT for a Deployment

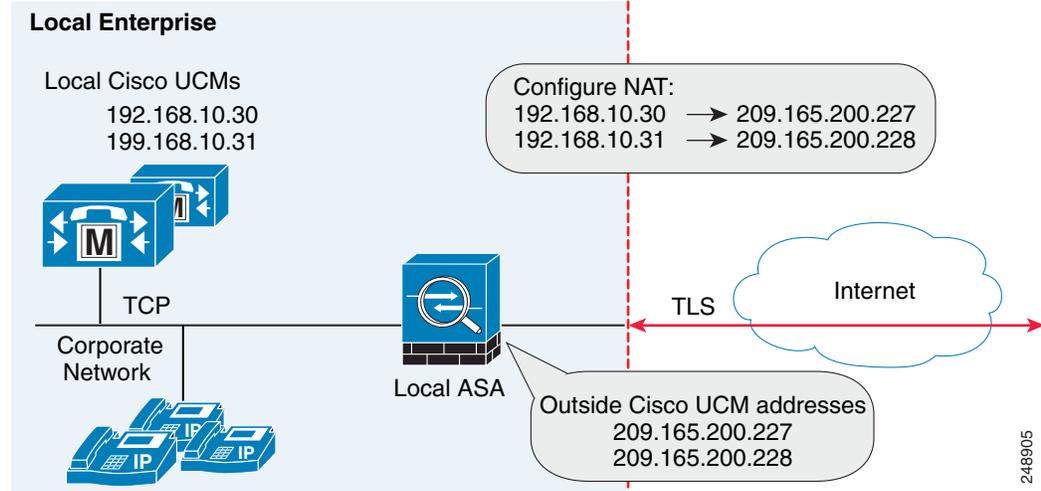

To configure auto NAT rules for the Cisco UCM server, perform the following steps:

	Command	Purpose
Step 1	hostname(config)# object network <i>name</i> Examples: hostname(config)# object network ucm_real_192.168.10.30 hostname(config)# object network ucm_real_192.168.10.31	Configures a network object for the real address of Cisco UCM that you want to translate.
Step 2	hostname(config-network-object)# host <i>ip_address</i> Examples: hostname(config-network-object)# host 192.168.10.30 hostname(config-network-object)# host 192.168.10.31	Specifies the real IP address of the Cisco UCM host for the network object.
Step 3	(Optional) hostname(config-network-object)# description <i>string</i> Example: hostname(config-network-object)# description "Cisco UCM Real Address"	Provides a description of the network object.
Step 4	hostname(config-network-object)# exit	Exits from the objects configuration mode.
Step 5	hostname(config)# object network <i>name</i> Example: hostname(config)# object network ucm_map_209.165.200.228	Configures a network object for the mapped address of the Cisco UCM.
Step 6	hostname(config-network-object)# host <i>ip_address</i> Example: hostname(config-network-object)# host 209.165.200.228	Specifies the mapped IP address of the Cisco UCM host for the network object.
Step 7	(Optional) hostname(config-network-object)# description <i>string</i> Example: hostname(config-network-object)# description "Cisco UCM Mapped Address"	Provides a description of the network object.

	Command	Purpose
Step 8	<code>hostname(config-network-object)# exit</code>	Exits from the objects configuration mode.
Step 9	<pre>hostname(config)# nat (inside,outside) source static real_obj mapped_obj Examples: hostname(config)# nat (inside,outside) source static ucm_real_192.168.10.30 ucm_209.165.200.228 hostname(config)# nat (inside,outside) source static ucm_real_192.168.10.31 ucm_209.165.200.228</pre>	<p>Specifies the address translation on the network objects created in this procedure.</p> <p>Where <i>real_obj</i> is the <i>name</i> that you created in Step 1 in this task.</p> <p>Where <i>mapped_obj</i> is the <i>name</i> that you created in Step 5 in this task.</p>


What to Do Next

Create the access lists for the Cisco Intercompany Media Engine Proxy. See [Creating Access Lists for Cisco Intercompany Media Engine Proxy](#), page 52-16.

Configuring PAT for the Cisco UCM Server

Perform this task as an alternative to configuring NAT for the Cisco Intercompany Media Engine Proxy.

Figure 52-8 Example for Configuring PAT for a Deployment

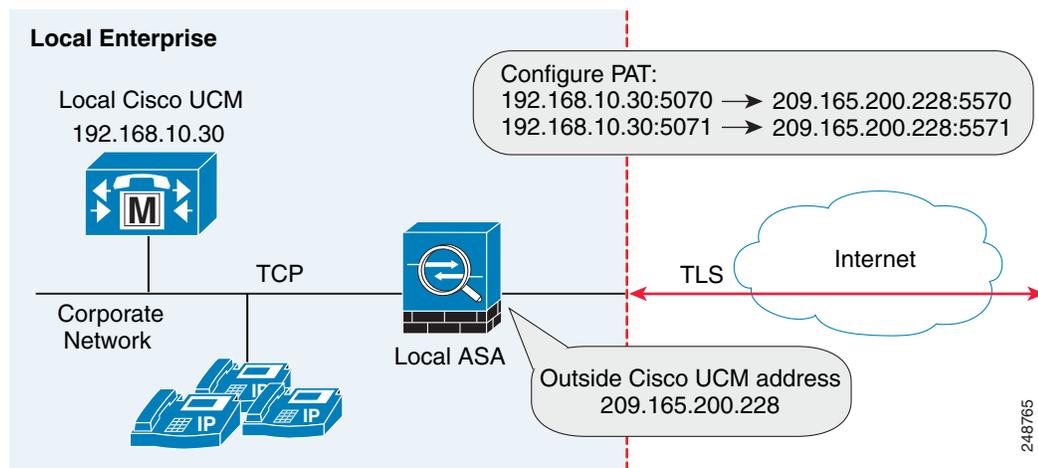

Note

You only perform this step when NAT is not configured for the Cisco UCM server.

To configure PAT for the Cisco UCM server, perform the following steps:

	Command	Purpose
Step 1	hostname(config)# object network name Examples: hostname(config)# object network ucm-pat-209.165.200.228	Configures a network object for the outside IP address of Cisco UCM that you want to translate.
Step 2	hostname(config-network-object)# host ip_address Example: hostname(config-network-object)# host 209.165.200.228	Specifies the real IP address of the Cisco UCM host for the network object.
Step 3	hostname(config-network-object)# exit	Exits from the objects configuration mode.
Step 4	hostname(config)# object service name Examples: hostname(config)# object service tcp_5070 hostname(config)# object service tcp_5071	Creates a service object for the outside Cisco Intercompany Media Engine port.
Step 5	hostname(config-service-object)# tcp source eq port Examples: hostname(config-service-object)# tcp source eq 5070 hostname(config-service-object)# tcp source eq 5071	Specifies the port number.
Step 6	hostname(config-service-object)# exit	Exits from the objects configuration mode.
Step 7	hostname(config)# object network name Examples: hostname(config)# object network ucm-real-192.168.10.30 hostname(config)# object network ucm-real-192.168.10.31	Configures a network object to represent the real IP address of Cisco UCM.
Step 8	hostname(config-network-object)# host ip_address Examples: hostname(config-network-object)# host 192.168.10.30 hostname(config-network-object)# host 192.168.10.31	Specifies the real IP address of the Cisco UCM host for the network object.
Step 9	hostname(config-network-object)# exit	Exits from the objects configuration mode.
Step 10	hostname(config)# object service name Examples: hostname(config)# object service tcp_5570 hostname(config)# object service tcp_5571	Creates a service objects for Cisco UCM SIP port.
Step 11	hostname(config-service-object)# tcp source eq port Example: hostname(config-service-object)# tcp source eq 5570 hostname(config-service-object)# tcp source eq 5571	Specifies the port number.
Step 12	hostname(config-service-object)# exit	Exits from the objects configuration mode.
Step 13	hostname(config)# nat (inside,outside) source static <i>real_obj mapped_obj service real_port mapped_port</i> Examples: hostname(config)# nat (inside,outside) source static ucm-real-192.168.10.30 ucm-pat-209.165.200.228 service tcp_5070 tcp_5570 hostname(config)# nat (inside,outside) source static ucm-real-192.168.10.31 ucm-pat-128.106.254.5 service tcp_5071 tcp_5571	Creates a static mapping for Cisco UCM. <i>Where real_obj is the name that you created in Step 1 in this task.</i> <i>Where mapped_obj is the name that you created in Step 7 in this task.</i> <i>Where real_port is the name that you created in Step 4 in this task.</i> <i>Where mapped_obj is the name that you created in Step 10 in this task.</i>

Creating Access Lists for Cisco Intercompany Media Engine Proxy

To configure access lists for the Cisco Intercompany Media Engine Proxy to reach the Cisco UCM server, perform the following steps.

The example command lines in this task are based on a basic (in-line) deployment. See [Figure 52-6 on page 52-11](#) for an illustration explaining the example command lines in this task.

	Command	Purpose
Step 1	<pre>hostname(config)# access-list id extended permit tcp any host ip_address eq port Example: hostname(config)# access-list incoming extended permit tcp any host 192.168.10.30 eq 5070</pre>	<p>Adds an Access Control Entry (ACE). An access list is made up of one or more ACEs with the same access list ID. This ACE provides access control by allowing incoming access for Cisco Intercompany Media Engine connections on the specified port.</p> <p>In the <i>ip_address</i> argument, provide the real IP address of Cisco UCM.</p>
Step 2	<pre>hostname(config)# access-group access-list in interface interface_name Example: hostname(config)# access-group incoming in interface outside</pre>	<p>Binds the access list to an interface.</p>
Step 3	<pre>hostname(config)# access-list id extended permit tcp any host ip_address eq port Example: hostname(config)# access-list ime-inbound-sip extended permit tcp any host 192.168.10.30 eq 5070</pre>	<p>Adds an ACE. This ACE allows the ASA to allow inbound SIP traffic for Cisco Intercompany Media Engine. This entry is used to classify traffic for the class and policy map.</p> <p>Note The port that you configure here must match the trunk settings configured on Cisco UCM. See the Cisco Unified Communications Manager documentation for information about this configuration setting.</p>
Step 4	<pre>hostname(config)# access-list id extended permit tcp ip_address mask any range range Example: hostname(config)# access-list ime-outbound-sip extended permit tcp 192.168.10.30 255.255.255.255 any range 5000 6000</pre>	<p>Adds an ACE. This ACE allows the ASA to allow outbound SIP traffic for Cisco Intercompany Media Engine (in the example, any TCP traffic with source as 192.168.10.30 and destination port range between 5000 and 6000). This entry is used to classify traffic for the class and policy map.</p> <p>Note Ensure that TCP traffic between Cisco UCM and the Cisco Intercompany Media Engine server does not use this port range (if that connection goes through the ASA).</p>
Step 5	<pre>hostname(config)# access-list id permit tcp any host ip_address eq 6084 Example: hostname(config)# access-list ime-traffic permit tcp any host 192.168.10.12 eq 6084</pre>	<p>Adds an ACE. This ACE allows the ASA to allow traffic from the Cisco Intercompany Media Engine server to remote Cisco Intercompany Media Engine servers.</p>
Step 6	<pre>hostname(config)# access-list id permit tcp any host ip_address eq 8470 Example: hostname(config)# access-list ime-bootstrap-traffic permit tcp any host 192.168.10.12 eq 8470</pre>	<p>Adds an ACE. This ACE allows the ASA to allow traffic from the Cisco Intercompany Media Engine server to the Bootstrap server for the Cisco Intercompany Media Engine.</p>

What to Do Next

Create the media termination instance on the ASA for the Cisco Intercompany Media Engine Proxy. See [Creating the Media Termination Instance](#), page 52-17.

Creating the Media Termination Instance

Guidelines

The media termination address you configure must meet these requirements:

- If you decide to configure a media-termination address on interfaces (rather than using a global interface), you must configure a media-termination address on at least two interfaces (the inside and an outside interface) before applying the service policy for the Cisco Intercompany Media Engine Proxy. Otherwise, you will receive an error message when enabling the proxy with SIP inspection.



Note Cisco recommends that you configure the media-termination address for the Cisco Intercompany Media Engine Proxy on interfaces rather than configuring a global media-termination address.

- The Cisco Intercompany Media Engine Proxy can use only one type of media termination instance at a time; for example, you can configure a global media-termination address for all interfaces or configure a media-termination address for different interfaces. However, you cannot use a global media-termination address and media-termination addresses configured for each interface at the same time.

Note If you change any Cisco Intercompany Media Engine Proxy settings after you create the media-termination address for the proxy, you must reconfigure the media-termination address by using the **no media-termination** command, and then reconfiguring it as described in this procedure.

Procedure

Create the media termination instance to use with the Cisco Intercompany Media Engine Proxy.

The example command lines in this task are based on a basic (in-line) deployment. See [Figure 52-6 on page 52-11](#) for an illustration explaining the example command lines in this task.

To create the media termination instance for the Cisco Intercompany Media Engine Proxy, perform the following steps:

	Command	Purpose
Step 1	hostname(config)# media-termination <i>instance_name</i> Example: hostname(config)# media-termination <i>uc-ime-media-term</i>	Creates the media termination instance that you attach to the Cisco Intercompany Media Engine Proxy.
Step 2	hostname(config-media-termination)# address <i>ip_address interface intf_name</i> Examples: hostname(config-media-termination)# address 209.165.200.228 interface outside	Configures the media-termination address used by the outside interface of the ASA. The outside IP address must be a publicly routable address that is an unused IP address within the address range on that interface. See Creating the Cisco Intercompany Media Engine Proxy, page 52-18 for information about the UC-IME proxy settings. See CLI configuration guide for information about the no service-policy command.
Step 3	hostname(config-media-termination)# address <i>ip_address interface intf_name</i> Examples: hostname(config-media-termination)# address 192.168.10.3 interface inside	Configures a media termination address used by the inside interface of the ASA. Note The IP address must be an unused IP address within the same subnet on that interface.
Step 4	(Optional) hostname(config-media-termination)# rtp-min-port <i>port1 rtp-maxport port2</i> Examples: hostname(config-media-termination)# rtp-min-port 1000 rtp-maxport 2000	Configures the rtp-min-port and rtp-max-port limits for the Cisco Intercompany Media Engine Proxy. Configure the RTP port range for the media termination point when you need to scale the number of calls that the Cisco Intercompany Media Engine supports. Where <i>port1</i> specifies the minimum value for the RTP port range for the media termination point, where port1 can be a value from 1024 to 65535. By default, the value for <i>port1</i> is 16384. Where <i>port2</i> specifies the maximum value for the RTP port range for the media termination point, where port2 can be a value from 1024 to 65535. By default, the value for <i>port2</i> is 32767.

What To Do Next

Once you have created the media termination instance, create the Cisco Intercompany Media Engine Proxy. See [Creating the Cisco Intercompany Media Engine Proxy, page 52-18](#).

Creating the Cisco Intercompany Media Engine Proxy

To create the Cisco Intercompany Media Engine Proxy, perform the following steps.

The example command lines in this task are based on a basic (in-line) deployment. See [Figure 52-6 on page 52-11](#) for an illustration explaining the example command lines in this task.

Note You cannot change any of the configuration settings for the Cisco Intercompany Media Engine Proxy described in this procedure when the proxy is enabled for SIP inspection. Remove the Cisco Intercompany Media Engine Proxy from SIP inspection before changing any of the settings described in this procedure.

	Command	Purpose
Step 1	<pre>hostname(config)# uc-ime uc_ime_name</pre> <p>Example:</p> <pre>hostname(config)# uc-ime local-ent-ime</pre>	<p>Configures the Cisco Intercompany Media Engine Proxy.</p> <p>Where <i>uc_ime_name</i> is the name of the Cisco Intercompany Media Engine Proxy. The name is limited to 64 characters.</p> <p>Only one Cisco Intercompany Media Engine Proxy can be configured on the ASA.</p>
Step 2	<pre>hostname(config-uc-ime)# media-termination mta_instance_name</pre> <p>Example:</p> <pre>hostname(config-uc-ime)# media-termination ime-media-term</pre>	<p>Specifies the media termination instance used by the Cisco Intercompany Media Engine Proxy.</p> <p>Note You must create the media termination instance before you specify it in the Cisco Intercompany Media Engine Proxy.</p> <p>Where <i>mta_instance_name</i> is the <i>instance_name</i> that you created in Step 1 of Creating the Media Termination Instance.</p> <p>See Creating the Media Termination Instance, page 52-17 for the steps to create the media termination instance.</p>
Step 3	<pre>hostname(config-uc-ime)# ucm address ip_address</pre> <p>trunk-security-mode [nonsecure secure]</p> <p>Example:</p> <pre>hostname(config-uc-ime)# ucm address 192.168.10.30</pre> <pre>trunk-security-mode non-secure</pre>	<p>Specifies the Cisco UCM server in the enterprise. You must specify the real IP address of the Cisco UCM server. Do not specify a mapped IP address for the server.</p> <p>Note You must include an entry for each Cisco UCM in the cluster with Cisco Intercompany Media Engine that has a SIP trunk enabled.</p> <p>Where the nonsecure and secure options specify the security mode of the Cisco UCM or cluster of Cisco UCMs.</p> <p>Note Specifying secure for Cisco UCM or Cisco UCM cluster indicates that Cisco UCM or Cisco UCM cluster is initiating TLS; therefore, you must configure TLS for components. See (Optional) Configuring TLS within the Local Enterprise, page 52-27.</p> <p>You can specify the secure option in this task or you can update it later while configuring TLS for the enterprise. See Step 11 in (Optional) Configuring TLS within the Local Enterprise, page 52-27.</p>

	Command	Purpose
Step 4	<pre>hostname(config-uc-ime)# ticket epoch <i>n</i> password <i>password</i> Example: hostname(config-uc-ime)# ticket epoch 1 password password1234</pre>	<p>Configures the ticket epoch and password for Cisco Intercompany Media Engine.</p> <p>Where <i>n</i> is an integer from 1-255. The epoch contains an integer that updates each time that the password is changed. When the proxy is configured the first time and a password entered for the first time, enter 1 for the epoch integer. Each time you change the password, increment the epoch to indicate the new password. You must increment the epoch value each time you change the password.</p> <p>Typically, you increment the epoch sequentially; however, the ASA allows you to choose any value when you update the epoch.</p> <p>If you change the epoch value, the current password is invalidated and you must enter a new password.</p> <p>Where <i>password</i> contains a minimum of 10 and a maximum of 64 printable character from the US-ASCII character set. The allowed characters include 0x21 to 0x73 inclusive, and exclude the space character.</p> <p>We recommend a password of at least 20 characters. Only one password can be configured at a time.</p> <p>The ticket password is stored onto flash. The output of the show running-config uc-ime command displays ***** instead of the password string.</p> <p>Note The epoch and password that you configure on the ASA must match the epoch and password configured on the Cisco Intercompany Media Engine server. See the Cisco Intercompany Media Engine server documentation for information.</p>

	Command	Purpose
Step 5	(Optional) <pre>hostname(config-uc-ime)# fallback monitoring timer timer_millisecond hold-down timer timer_sec</pre> Examples: <pre>hostname(config-uc-ime)# fallback monitoring timer 120 hostname(config-uc-ime)# fallback hold-down timer 30</pre>	<p>Specifies the fallback timers for Cisco Intercompany Media Engine.</p> <p>Specifying monitoring timer sets the time between which the ASA samples the RTP packets received from the Internet. The ASA uses the data sample to determine if fallback to the PSTN is needed for a call.</p> <p>Where <i>timer_millisecond</i> specifies the length of the monitoring timer. By default, the length is 100 milliseconds for the monitoring timer and the allowed range is 10-600 ms.</p> <p>Specifying hold-down timer sets the amount of time that ASA waits before notifying Cisco UCM whether to fall back to PSTN.</p> <p>Where <i>timer_sec</i> specifies the length of the hold-down timer. By default, the length is 20 seconds for the hold-down timer and the allowed range is 10-360 seconds.</p> <p>If you do not use this command to specify fallback timers, the ASA uses the default settings for the fallback timers.</p>
Step 6	(Optional) <pre>hostname(config-uc-ime)# fallback sensitivity-file file_name</pre> Example: <pre>hostname(config-uc-ime)# fallback sensitivity-file ime-fallback-sensitivity.fbs</pre>	<p>Specifies the file to use for mid-call PSTN fallback.</p> <p>Where <i>file_name</i> must be the name of a file on disk that includes the .fbs file extension.</p> <p>The fallback file is used to determine whether the QoS of the call is poor enough for the Cisco Intercompany Media Engine to move the call to the PSTN.</p>

What to Do Next

Install the certificate on the local entity truststore. You could also enroll the certificate with a local CA trusted by the local entity.

Creating Trustpoints and Generating Certificates

You need to generate the keypair for the certificate used by the ASA, and configure a trustpoint to identify the certificate sent by the ASA in the TLS handshake.

The example command lines in this task are based on a basic (in-line) deployment. See [Figure 52-6 on page 52-11](#) for an illustration explaining the example command lines in this task.



Note

This task instructs you on how to create trustpoints for the local enterprise and the remote enterprise and how to exchange certificates between these two enterprises. This task does not provide steps for creating trustpoints and exchanging certificates between the local Cisco UCM and the local ASA. However, if you require additional security within the local enterprise, you must perform the optional task ([Optional](#))

[Configuring TLS within the Local Enterprise, page 52-27](#). Performing that task allows for secure TLS connections between the local Cisco UCM and the local ASA. The instructions in that task describe how to create trustpoints between the local Cisco UCM and the local ASA.

Prerequisites for Installing Certificates

To create a proxy certificate on the ASA that is trusted by the remote entity, obtain a certificate from a trusted CA or export it from the remote enterprise ASA.

To export the certificate from the remote enterprise, you enter the following command on the remote ASA:

```
hostname(config)# crypto ca export trustpoint identity-certificate
```

The ASA prompts displays the certificate in the terminal screen. Copy the certificate from the terminal screen. You will need the certificate text in [Step 5](#) of this task.

Procedure

To create the trustpoints and generate certificates, perform the following steps:

	Command	Purpose
Step 1	<pre>hostname(config)# crypto key generate rsa label key-pair-label modulus size</pre> <p>Example:</p> <pre>hostname(config)# crypto key generate rsa label local-ent-key modulus 2048</pre>	<p>On the local ASA, creates the RSA keypair that can be used for the trustpoints. This is the keypair and trustpoint for the local entities signed certificate.</p> <p>The modulus key size that you select depends on the level of security that you want to configure and on any limitations imposed by the CA from which you are obtaining the certificate. The larger the number that you select, the higher the security level will be for the certificate. Most CAs recommend 2048 for the key modulus size; however,</p> <p>Note GoDaddy requires a key modulus size of 2048.</p>
Step 2	<pre>hostname(config)# crypto ca trustpoint trustpoint_name</pre> <p>Example:</p> <pre>hostname(config)# crypto ca trustpoint local_ent</pre>	<p>Enters the trustpoint configuration mode for the specified trustpoint so that you can create the trustpoint for the local entity.</p> <p>A trustpoint represents a CA identity and possibly a device identity, based on a certificate issued by the CA. Maximum name length is 128 characters.</p>
Step 3	<pre>hostname(config-ca-trustpoint)# subject-name X.500_name</pre> <p>Example:</p> <pre>hostname(config-ca-trustpoint)# subject-name cn=Ent-local-domain-name**</pre>	<p>Includes the indicated subject DN in the certificate during enrollment.</p> <p>Note The domain name that you enter here must match the domain name that has been set for the local Cisco UCM. For information about how to configure the domain name for Cisco UCM, see the Cisco Unified Communications Manager documentation for information.</p>

	Command	Purpose
Step 4	hostname(config-ca-trustpoint)# keypair <i>keyname</i> Example: hostname(config-ca-trustpoint)# keypair local-ent-key	Specifies the key pair whose public key is to be certified.
Step 5	hostname(config-ca-trustpoint)# enroll terminal	Specifies that you will use the “copy and paste” method of enrollment with this trustpoint (also known as manual enrollment).
Step 6	hostname(config-ca-trustpoint)# exit	Exits from the CA Trustpoint configuration mode.
Step 7	hostname(config)# crypto ca enroll <i>trustpoint</i> Example: hostname(config)# crypto ca enroll remote-ent % % Start certificate enrollment ... % The subject name in the certificate will be: % cn=enterpriseA % The fully-qualified domain name in the certificate will @ be: ciscoasa % Include the device serial number in the subject name? [yes/no]: no Display Certificate Request to terminal? [yes/no]: yes	Starts the enrollment process with the CA. Where <i>trustpoint</i> is the same as the value you entered for <i>trustpoint_name</i> in Step 2 . When the trustpoint is configured for manual enrollment (enroll terminal command), the ASA writes a base-64-encoded PKCS10 certification request to the console and then displays the CLI prompt. Copy the text from the prompt. Submit the certificate request to the CA, for example, by pasting the text displayed at the prompt into the certificate signing request enrollment page on the CA website. When the CA returns the signed identity certificate, proceed to Step 8 in this procedure.
Step 8	hostname(config)# crypto ca import <i>trustpoint</i> certificate Example: hostname(config)# crypto ca import remote-ent certificate	Imports the signed certificate received from the CA in response to a manual enrollment request. Where <i>trustpoint</i> specifies the trustpoint you created in Step 2 . The ASA prompts you to paste the base-64 formatted signed certificate onto the terminal.
Step 9	hostname(config)# crypto ca authenticate <i>trustpoint</i> Example: hostname(config)# crypto ca authenticate remote-ent	Authenticates the third-party identity certificate received from the CA. The identity certificate is associated with a trustpoint created for the remote enterprise. The ASA prompts you to paste the base-64 formatted identity certificate from the CA onto the terminal.

What to Do Next

Create the TLS proxy for the Cisco Intercompany Media Engine. See the “[Creating the TLS Proxy](#)” section on page 52-24.

Creating the TLS Proxy

Because either enterprise, namely the local or remote Cisco UCM servers, can initiate the TLS handshake (unlike IP Telephony or Cisco Mobility Advantage, where only the clients initiate the TLS handshake), you must configure by-directional TLS proxy rules. Each enterprise can have an ASA as the TLS proxy.

Create TLS proxy instances for the local and remote entity initiated connections respectively. The entity that initiates the TLS connection is in the role of “TLS client.” Because the TLS proxy has a strict definition of “client” and “server” proxy, two TLS proxy instances must be defined if either of the entities could initiate the connection.

The example command lines in this task are based on a basic (in-line) deployment. See [Figure 52-6 on page 52-11](#) for an illustration explaining the example command lines in this task.

To create the TLS proxy, perform the following steps:

	Command	Purpose
Step 1	hostname(config)# tls-proxy proxy_name Example: hostname(config)# tls-proxy local_to_remote-ent	Creates the TLS proxy for the outbound connections.
Step 2	hostname(config-tlsp)# client trust-point proxy_trustpoint Example: hostname(config-tlsp)# client trust-point local-ent	For outbound connections, specifies the trustpoint and associated certificate that the adaptive security appliance uses in the TLS handshake when the adaptive security appliance assumes the role of the TLS client. The certificate must be owned by the adaptive security appliance (identity certificate). Where <i>proxy_trustpoint</i> specifies the trustpoint defined by the crypto ca trustpoint command in Step 2 in “ Creating Trustpoints and Generating Certificates ” section on page 52-21.
Step 3	hostname(config-tlsp)# client cipher-suite cipher_suite Example: hostname(config-tlsp)# client cipher-suite aes128-sha1 aes256-sha1 3des-sha1 null-sha1	For outbound connections, controls the TLS handshake parameter for the cipher suite. Where <i>cipher_suite</i> includes des-sha1, 3des-sha1, aes128-sha1, aes256-sha1, or null-sha1. For client proxy (the proxy acts as a TLS client to the server), the user-defined cipher suite replaces the default cipher suite, or the one defined by the ssl encryption command. Use this command to achieve difference ciphers between the two TLS sessions. You should use AES ciphers with the Cisco UCM server.
Step 4	hostname(config-tlsp)# exit	Exits from the TLS proxy configuration mode.
Step 5	hostname(config)# tls-proxy proxy_name Example: hostname(config)# tls-proxy remote_to_local-ent	Create the TLS proxy for inbound connections.

	Command	Purpose
Step 6	<pre>hostname(config-tlsp)# server trust-point proxy_trustpoint</pre> <p>Example:</p> <pre>hostname(config-tlsp)# server trust-point local-ent</pre>	<p>For inbound connections, specifies the proxy trustpoint certificate presented during TLS handshake. The certificate must be owned by the adaptive security appliance (identity certificate).</p> <p>Where <i>proxy_trustpoint</i> specifies the trustpoint defined by the crypto ca trustpoint command in Step 2 in “Creating Trustpoints and Generating Certificates” section on page 52-21.</p> <p>Because the TLS proxy has strict definition of client proxy and server proxy, two TLS proxy instances must be defined if either of the entities could initiate the connection.</p>
Step 7	<pre>hostname(config-tlsp)# client cipher-suite cipher_suite</pre> <p>Example:</p> <pre>hostname(config-tlsp)# client cipher-suite aes128-sha1 aes256-sha1 3des-sha1 null-sha1</pre>	<p>For inbound connections, controls the TLS handshake parameter for the cipher suite.</p> <p>Where <i>cipher_suite</i> includes des-sha1, 3des-sha1, aes128-sha1, aes256-sha1, or null-sha1.</p>
Step 8	<pre>hostname(config-tlsp)# exit</pre>	Exits from the TSL proxy configuration mode.
Step 9	<pre>hostname(config)# ssl encryption 3des-sha1 aes128-sha1 [algorithms]</pre>	<p>Specifies the encryption algorithms that the SSL/TLS protocol uses. Specifying the 3des-sha1 and aes128-sha1 is required. Specifying other algorithms is optional.</p> <p>Note The Cisco Intercompany Media Engine Proxy requires that you use strong encryption. You must specify this command when the proxy is licensed using a K9 license.</p>

What to Do Next

Once you have created the TLS proxy, enable it for SIP inspection.

Enabling SIP Inspection for the Cisco Intercompany Media Engine Proxy

Enable the TLS proxy for SIP inspection and define policies for both entities that could initiate the connection.

The example command lines in this task are based on a basic (in-line) deployment. See [Figure 52-6 on page 52-11](#) for an illustration explaining the example command lines in this task.

**Note**

If you want to change any Cisco Intercompany Media Engine Proxy settings after you enable SIP inspection, you must enter the **no service-policy** command, and then reconfigure the service policy as described in this procedure. Removing and reconfiguring the service policy does not affect existing calls; however, the first call traversing the Cisco Intercompany Media Engine Proxy will fail. Enter the **clear connection** command and restart the ASA.

To enable SIP inspection for the Cisco Intercompany Media Engine Proxy, perform the following steps:

	Command	Purpose
Step 1	hostname(config)# class-map <i>class_map_name</i> Examples: hostname(config)# class-map ime-inbound-sip	Defines a class for the inbound Cisco Intercompany Media Engine SIP traffic.
Step 2	hostname(config-cmap)# match access-list <i>access_list_name</i> Examples: hostname(config-cmap)# match access-list ime-inbound-sip	Identifies the SIP traffic to inspect. Where the <i>access_list_name</i> is the access list you created in Step 3, page 52-16 of the task Creating Access Lists for Cisco Intercompany Media Engine Proxy .
Step 3	hostname(config-cmap)# exit	Exits from the class map configuration mode.
Step 4	hostname(config)# class-map <i>class_map_name</i> Examples: hostname(config)# class-map ime-outbound-sip	Defines a class for the outbound SIP traffic from Cisco Intercompany Media Engine.
Step 5	hostname(config)# match access-list <i>access_list_name</i> Examples: hostname(config-cmap)# match access-list ime-outbound-sip	Identifies which outbound SIP traffic to inspect. Where the <i>access_list_name</i> is the access list you created in Step 4, page 52-16 of the task Creating Access Lists for Cisco Intercompany Media Engine Proxy .
Step 6	hostname(config-cmap)# exit	Exits from the class map configuration mode.
Step 7	hostname(config)# policy-map <i>name</i> Examples: hostname(config)# policy-map ime-policy	Defines the policy map to which to attach the actions for the class of traffic.
Step 8	hostname(config-pmap)# class <i>classmap_name</i> Examples: hostname(config-pmap)# class ime-outbound-sip	Assigns a class map to the policy map so that you can assign actions to the class map traffic. Where <i>classmap_name</i> is the name of the SIP class map that you created in Step 1 in this task.
Step 9	hostname(config-pmap-c)# inspect sip [<i>sip_map</i>] tls-proxy <i>proxy_name</i> uc-ime <i>uc_ime_map</i> Examples: hostname(config-pmap-c)# inspect sip tls-proxy local_to_remote-ent uc-ime local-ent-ime	Enables the TLS proxy and Cisco Intercompany Media Engine Proxy for the specified SIP inspection session.
Step 10	hostname(config-cmap-c)# exit	Exits from the policy map class configuration mode.
Step 11	hostname(config-pmap)# class <i>class_map_name</i> Examples: hostname(config-pmap)# class ime-inbound-sip	Assigns a class map to the policy map so that you can assign actions to the class map traffic. Where <i>classmap_name</i> is the name of the SIP class map that you created in Step 4 in this task.
Step 12	hostname(config-pmap-c)# inspect sip [<i>sip_map</i>] tls-proxy <i>proxy_name</i> uc-ime <i>uc_ime_map</i> Examples: hostname(config-pmap-c)# inspect sip tls-proxy remote-to-local-ent uc-ime local-ent-ime	Enables the TLS proxy and Cisco Intercompany Media Engine Proxy for the specified SIP inspection session.
Step 13	hostname(config-pmap-c)# exit	Exits from the policy map class configuration mode.

	Command	Purpose
Step 14	<code>hostname(config-pmap)# exit</code>	Exits from the policy map configuration mode.
Step 15	<pre>hostname(config)# service-policy <i>polycymap_name</i> global Examples: hostname(config)# service-policy ime-policy global</pre>	<p>Enables the service policy for SIP inspection for all interfaces.</p> <p>Where <i>polycymap_name</i> is the name of the policy map you created in Step 7 of this task.</p> <p>See Creating the Cisco Intercompany Media Engine Proxy, page 52-18 for information about the UC-IME proxy settings. See CLI configuration guide for information about the no service-policy command.</p>

What to Do Next

Once you have enabled the TLS proxy for SIP inspection, if necessary, configure TLS within the enterprise. See [\(Optional\) Configuring TLS within the Local Enterprise, page 52-27](#).

(Optional) Configuring TLS within the Local Enterprise

This task is not required if TCP is allowable within the inside network.

TLS within the enterprise refers to the security status of the Cisco Intercompany Media Engine trunk as seen by the ASA.

**Note**

If the transport security for the Cisco Intercompany Media Engine trunk changes on Cisco UCM, it must be changed on the ASA as well. A mismatch will result in call failure. The ASA does not support SRTP with non-secure IME trunks. The ASA assumes SRTP is allowed with secure trunks. So 'SRTP Allowed' must be checked for IME trunks if TLS is used. The ASA supports SRTP fallback to RTP for secure IME trunk calls.

Prerequisites

On the local Cisco UCM, download the Cisco UCM certificate. See the Cisco Unified Communications Manager documentation for information. You will need this certificate when performing [Step 6](#) of this procedure.

Procedure

To configure TLS within the local enterprise, perform the following steps on the local ASA:

	Commands	Purpose
Step 1	<pre>hostname(config)# crypto key generate rsa label key-pair-label hostname(config)# crypto ca trustpoint trustpoint_name hostname(config-ca-trustpoint)# enroll self hostname(config-ca-trustpoint)# keypair keyname hostname(config-ca-trustpoint)# subject-name x.500_name Example: hostname(config)# crypto key generate rsa label local-ent-key hostname(config)# crypto ca trustpoint local-asa hostname(config-ca-trustpoint)# enroll self hostname(config-ca-trustpoint)# keypair key-local-asa hostname(config-ca-trustpoint)# subject-name cn=Ent-local-domain-name**, o="Example Corp"</pre>	<p>Creates an RSA key and trustpoint for the self-signed certificate.</p> <p>Where <i>key-pair-label</i> is the RSA key for the local ASA.</p> <p>Where <i>trustpoint_name</i> is the trustpoint for the local ASA.</p> <p>Where <i>keyname</i> is key pair for the local ASA.</p> <p>Where <i>x.500_name</i> includes the X.500 distinguished name of the local ASA; for example, <i>cn=Ent-local-domain-name**</i>.</p> <p>Note The domain name that you enter here must match the domain name that has been set for the local Cisco UCM. For information about how to configure the domain name for Cisco UCM, see the Cisco Unified Communications Manager documentation for information.</p>
Step 2	<pre>hostname(config-ca-trustpoint)# exit</pre>	Exits from Trustpoint Configuration mode.
Step 3	<pre>hostname(config)# crypto ca export trustpoint identity-certificate Example: hostname(config)# crypto ca export local-asa identity-certificate</pre>	<p>Exports the certificate you created in Step 1. The certificate contents appear on the terminal screen.</p> <p>Copy the certificate from the terminal screen. This certificate enables Cisco UCM to validate the certificate that the ASA sends in the TLS handshake.</p> <p>On the local Cisco UCM, upload the certificate into the Cisco UCM trust store. See the Cisco Unified Communications Manager documentation for information.</p> <p>Note The subject name you enter while uploading the certificate to the local Cisco UCM is compared with the X.509 Subject Name field entered on the SIP Trunk Security Profile on Cisco UCM. For example, “Ent-local-domain-name” was entered in Step 1 of this task; therefore, “Ent-local-domain-name” should be entered in the Cisco UCM configuration.</p>
Step 4	<pre>hostname(config)# crypto ca trustpoint trustpoint_name hostname(config-ca-trustpoint)# enroll terminal Example: hostname(config)# crypto ca trustpoint local-ent-ucm hostname(config-ca-trustpoint)# enroll terminal</pre>	<p>Creates a trustpoint for local Cisco UCM.</p> <p>Where <i>trustpoint_name</i> is the trustpoint for the local Cisco UCM.</p>
Step 5	<pre>hostname(config-ca-trustpoint)# exit</pre>	Exits from Trustpoint Configuration mode.

	Commands	Purpose
Step 6	<pre>hostname(config)# crypto ca authenticate trustpoint Example: hostname(config)# crypto ca authenticate local-ent-ucm</pre>	<p>Imports the certificate from local Cisco UCM.</p> <p>Where <i>trustpoint</i> is the trustpoint for the local Cisco UCM.</p> <p>Paste the certificate downloaded from the local Cisco UCM. This certificate enables the ASA to validate the certificate that Cisco UCM sends in the TLS handshake.</p>
Step 7	<pre>hostname(config)# tls-proxy proxy_name hostname(config-tlsp)# server trust-point proxy_trustpoint hostname(config-tlsp)# client trust-point proxy_trustpoint hostname(config-tlsp)# client cipher-suite aes128-sha1 aes256-sha1 3des-sha1 null-sha1 Example: hostname(config)# tls-proxy local_to_remote-ent hostname(config-tlsp)# server trust-point local-ent-ucm hostname(config-tlsp)# client trust-point local-ent hostname(config-tlsp)# client cipher-suite aes128-sha1 aes256-sha1 3des-sha1 null-sha1</pre>	<p>Updates the TLS proxy for outbound connections.</p> <p>Where <i>proxy_name</i> is the name you entered in Step 1 of the task Creating the TLS Proxy.</p> <p>Where <i>proxy_trustpoint</i> for the server trust-point command is the name you entered in Step 4 of this procedure.</p> <p>Where <i>proxy_trustpoint</i> for the client trust-point command is the name you entered in Step 2 of the task Creating Trustpoints and Generating Certificates.</p> <p>Note In this step, you are creating different trustpoints for the client and the server.</p>
Step 8	<pre>hostname(config-tlsp)# exit</pre>	Exits from TLS Proxy Configuration mode.
Step 9	<pre>hostname(config)# tls-proxy proxy_name hostname(config-tlsp)# server trust-point proxy_trustpoint hostname(config-tlsp)# client trust-point proxy_trustpoint hostname(config-tlsp)# client cipher-suite aes128-sha1 aes256-sha1 3des-sha1 null-sha1 Example: hostname(config)# tls-proxy remote_to_local-ent hostname(config-tlsp)# server trust-point local-ent hostname(config-tlsp)# client trust-point local-ent-ucm hostname(config-tlsp)# client cipher-suite aes128-sha1 aes256-sha1 3des-sha1 null-sha1</pre>	<p>Updates the TLS proxy for inbound connections.</p> <p>Where <i>proxy_name</i> is the name you entered in Step 5 of the task Creating the TLS Proxy.</p> <p>Where <i>proxy_trustpoint</i> for the server trust-point command is the name you entered in Step 2 of the task Creating Trustpoints and Generating Certificates.</p> <p>Where <i>proxy_trustpoint</i> for the client trust-point command is the name you entered in Step 4 of this procedure.</p>
Step 10	<pre>hostname(config-tlsp)# exit</pre>	Exits from TLS Proxy Configuration mode.
Step 11	<pre>hostname(config)# uc-ime uc_ime_name hostname(config-uc-ime)# ucm address ip_address trunk-security-mode secure Example: hostname(config)# uc-ime local-ent-ime hostname(config-uc-ime)# ucm address 192.168.10.30 trunk-security-mode secure</pre>	<p>Updates the Cisco Intercompany Media Engine Proxy for trunk-security-mode.</p> <p>Where <i>uc_ime_name</i> is the name you entered in Step 1 of the task Creating the Cisco Intercompany Media Engine Proxy.</p> <p>Only perform this step if you entered nonsecure in Step 3 of the task Creating the Cisco Intercompany Media Engine Proxy.</p>

What to Do Next

Once you have configured the TLS within the enterprise, if necessary, configure off path signaling for an off path deployment. See [\(Optional\) Configuring Off Path Signaling](#), page 52-30.


(Optional) Configuring Off Path Signaling

Perform this task only when you are configuring the Cisco Intercompany Media Engine Proxy as part of an off path deployment. You might choose to have an off path deployment when you want to use the Cisco Intercompany Media Engine but do not want to replace your existing Internet firewall with an ASA enabled with the Cisco Intercompany Media Engine Proxy.

In an off path deployment, the existing firewall that you have deployed in your environment is not capable of transmitting Cisco Intercompany Media Engine traffic.

Off path signaling requires that outside IP addresses translate to an inside IP address. The inside interface address can be used for this mapping service configuration. For the Cisco Intercompany Media Engine Proxy, the ASA creates dynamic mappings for external addresses to the internal IP address; therefore, using the dynamic NAT configuration on outbound calls, Cisco UCM sends SIP traffic to this internal IP address, and the ASA uses that mapping to determine the real destination on inbound calls. The static NAT or PAT mapping is used for inbound calls in an off path configuration.

Figure 52-9 Example for Configuring Off Path Signaling in an Off Path Deployment

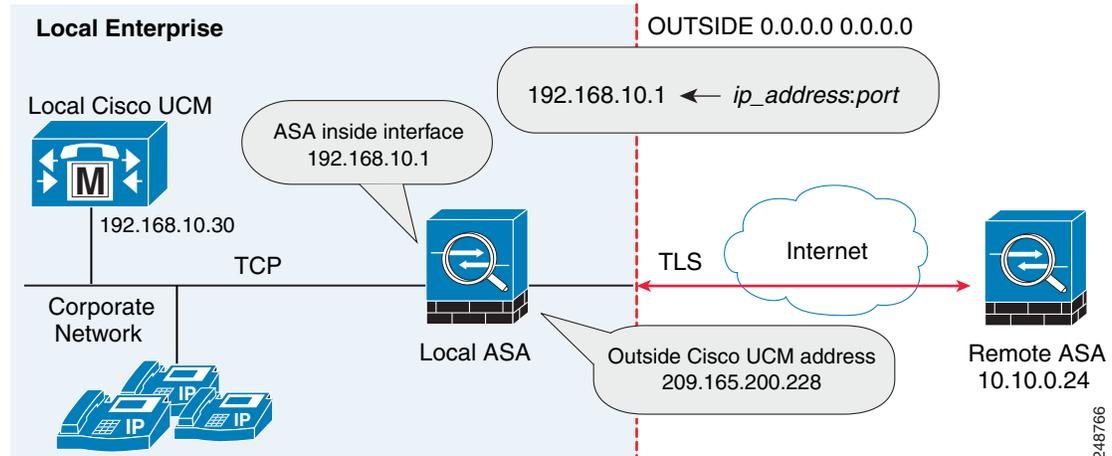

After you configure off path signaling, the ASA mapping service listens on interface “inside” for requests. When it receives a request, it creates a dynamic mapping for the “outside” as the destination interface.

To configure off path signaling for the Cisco Intercompany Media Engine Proxy, perform the following steps:

	Command	Purpose
Step 1	hostname(config)# object network <i>name</i> Example: hostname(config)# object network outside-any	For the off path ASA, creates a network object to represent all outside addresses.
Step 2	hostname(config-network-object)# subnet <i>ip_address</i> Example: hostname(config-network-object)# subnet 0.0.0.0 0.0.0.0	Specifies the IP address of the subnet.
Step 3	hostname(config-network-object)# nat (outside,inside) dynamic interface <i>inside</i>	Creates a mapping for the Cisco UCM of remote enterprises.
Step 4	hostname(config-network-object)# exit	Exits from the objects configuration mode.

	Command	Purpose
Step 5	<pre>hostname(config)# uc-ime uc_ime_name</pre> <p>Example:</p> <pre>hostname(config)# uc-ime local-ent-ime</pre>	<p>Specifies the Cisco Intercompany Media Engine Proxy that you created in the task Creating the Cisco Intercompany Media Engine Proxy, page 52-18.</p> <p>Where <i>uc_ime_name</i> is the name you specified in Step 1 of Creating the Cisco Intercompany Media Engine Proxy, page 52-18.</p>
Step 6	<pre>hostname(config)# mapping-service</pre> <pre>listening-interface interface_name [listening-port port] uc-ime-interface uc-ime-interface_name</pre> <p>Example:</p> <pre>hostname(config-uc-ime)# mapping-service</pre> <pre>listening-interface inside listening-port 8060</pre> <pre>uc-ime-interface outside</pre>	<p>For the off path ASA, adds the mapping service to the Cisco Intercompany Media Engine Proxy.</p> <p>Specifies the interface and listening port for the ASA mapping service.</p> <p>You can only configure one mapping server for the Cisco Intercompany Media Engine Proxy.</p> <p>Where <i>interface_name</i> is the name of the interface on which the ASA listens for the mapping requests.</p> <p>Where port is the TCP port on which the ASA listens for the mapping requests. The port number must be between 1024 and 65535 to avoid conflicts with other services on the device, such as Telnet or SSH. By default, the port number is TCP 8060.</p> <p>Where <i>uc-ime-interface_name</i> is the name of the interface that connects to the remote Cisco UCM.</p>

This section contains the following sections:

- [Configuring the Cisco UC-IMC Proxy by using the UC-IME Proxy Pane](#), page 52-31
- [Configuring the Cisco UC-IMC Proxy by using the Unified Communications Wizard](#), page 52-33

Configuring the Cisco UC-IMC Proxy by using the UC-IME Proxy Pane

Use the Configure Cisco Intercompany Media Engine (UC-IME) proxy pane to add or edit a Cisco Intercompany Media Engine Proxy instance.



Note

The Cisco Intercompany Media Engine Proxy does not appear as an option under the Unified Communications section of the navigation pane unless the license required for this proxy is installed on the ASA.

Use this pane to create the proxy instance; however, for the UC-IME proxy to be fully functionally, you must complete additional tasks, such as create the required NAT statements, access lists, and MTA, set up the certificates, create the TLS Proxy, and enable SIP inspection.

Depending on whether the UC-IME proxy is deployed off path or in-line of Internet traffic, you must create the appropriate network objects with embedded NAT/PAT statements for the Cisco UCMs.

This pane is available from the Configuration > Firewall > Unified Communications > UC-IME Proxy.

Step 1 Open the Configuration > Firewall > Unified Communications > UC-IME Proxy pane.

- Step 2** Check the Enable Cisco UC-IME proxy check box to enable the feature.
- Step 3** In the Unified CM Servers area, enter an IP address or hostname for the Cisco Unified Communications Manager (Cisco UCM) or click the ellipsis to open a dialog and browse for an IP address or hostname.
- Step 4** In the Trunk Security Mode field, click a security option. Specifying **secure** for Cisco UCM or Cisco UCM cluster indicates that Cisco UCM or Cisco UCM cluster is initiating TLS.
- Step 5** Click **Add** to add the Cisco UCM for the Cisco Intercompany Media Engine Proxy. You must include an entry for each Cisco UCM in the cluster with Cisco Intercompany Media Engine that has a SIP trunk enabled.
- Step 6** In the Ticket Epoch field, enter an integer from 1-255.

The epoch contains an integer that updates each time that the password is changed. When the proxy is configured the first time and a password entered for the first time, enter 1 for the epoch integer. Each time you change the password, increment the epoch to indicate the new password. You must increment the epoch value each time you change the password.

Typically, you increment the epoch sequentially; however, the ASA allows you to choose any value when you update the epoch.

If you change the epoch value, the current password is invalidated and you must enter a new password.



Note The epoch and password that you configure in this step on the ASA must match the epoch and password that you configure on the Cisco Intercompany Media Engine server. See the Cisco Intercompany Media Engine server documentation for information.

- Step 7** In the Ticket Password field, enter a minimum of 10 printable character from the US-ASCII character set. The allowed characters include 0x21 to 0x73 inclusive, and exclude the space character. The ticket password can be up to 64 characters. Confirm the password you entered. Only one password can be configured at a time.
- Step 8** Check the Apply MTA to UC-IME Link proxy check box to associate the media termination address with the Cisco Intercompany Media Engine Proxy.



Note You must create the media termination instance before you associate it with the Cisco Intercompany Media Engine Proxy. If necessary, click the Configure MTA button to configure a media termination address instance.

- Step 9** If the Cisco Intercompany Media Engine Proxy is being configured as part of off path deployment, check the Enable off path address mapping service checkbox and configure the off path deployment settings:
- a. From the Listening Interface field, select an ASA interface. This is the interface on which the ASA listens for the mapping requests.
 - b. In the Port field, enter a number between 1024 and 65535 as the TCP port on which the ASA listens for the mapping requests. The port number must be 1024 or higher to avoid conflicts with other services on the device, such as Telnet or SSH. By default, the port number is TCP 8060.
 - c. From the UC-IME Interface field, select an interface from the list. This is the interface that the ASA uses to connect to the remote Cisco UCM.

**Note**

In an off path deployment any existing ASA that you have deployed in your environment are not capable of transmitting Cisco Intercompany Media Engine traffic. Off-path signaling requires that outside addresses are translated (using NAT) to an inside IP address. The inside interface address can be used for this mapping service configuration. For the Cisco Intercompany Media Engine Proxy, the ASA creates dynamic mappings for external addresses to the internal IP address.

- Step 10** In the Fallback area, configure the fallback timer for the Cisco Intercompany Media Engine by specifying the following settings:
- In the Fallback Sensitivity File field, enter the path to a file in flash memory that the ASA uses for mid-call PSTN fallback. The file name that you enter must be the name of a file on disk that includes the .fbs file extension. Alternatively, click the Browse Flash button to locate and select the file from flash memory.
 - In the Call Quality Evaluation Interval field, enter a number between 10-600 (in milliseconds). This number controls the frequency at which the ASA samples the RTP packets received from the Internet. The ASA uses the data sample to determine if fallback to the PSTN is needed for a call. By default, the length is 100 milliseconds for the timer.
 - In the Notification Interval field, enter a number between 10-360 (in seconds). This number controls the amount of time that the ASA waits before notifying Cisco UCM whether to fall back to PSTN. By default, the length is 20 seconds for this timer.

**Note**

When you change the fallback timer for the Cisco Intercompany Media Engine Proxy, ASDM automatically removes the proxy from SIP inspection and then reapplies SIP inspection when the proxy is re-enabled.

- Step 11** Click Apply to save the configuration changes for the Cisco Intercompany Media Engine Proxy.

Configuring the Cisco UC-IMC Proxy by using the Unified Communications Wizard

To configure the Cisco Intercompany Media Engine Proxy by using ASDM, choose Wizards > Unified Communications Wizard from the menu. The Unified Communications Wizard opens. From the first page, select the Cisco Intercompany Media Engine Proxy option under the Business-to-Business section.

The wizard automatically creates the necessary TLS proxy, then guides you through creating the Intercompany Media Engine proxy, importing and installing the required certificates, and finally enables the SIP inspection for the Intercompany Media Engine traffic automatically.

The wizard guides you through these steps to create the Cisco Intercompany Media Engine Proxy:

- Step 1** Select the Intercompany Media Engine Proxy option.
- Step 2** Select the topology of the Cisco Intercompany Media Engine Proxy, namely whether the ASA is an edge firewall with all Internet traffic flowing through it or whether the ASA is off the path of the main Internet traffic (referred to as an off path deployment).
- Step 3** Specify private network settings such as the Cisco UCM IP addresses and the ticket settings.

- Step 4** Specify the public network settings.
- Step 5** Specify the media termination address settings of Cisco UCM.
- Step 6** Configure the local-side certificate management, namely the certificates that are exchanged between the local Cisco Unified Communications Manager servers and the ASA. The identity certificate that the wizard generates in this step needs to be installed on each Cisco Unified Communications Manager (UCM) server in the cluster with the proxy and each identity certificate from the Cisco UCMs need to be installed on the ASA. The certificates are used by the ASA and the Cisco UCMs to authenticate each other, respectively, during TLS handshakes. The wizard only supports self-signed certificates for this step.
- Step 7** Configure the remote-side certificate management, namely the certificates that are exchanged between the remote server and the ASA. In this step, the wizard generates a certificate signing request (CSR). After successfully generating the identity certificate request for the proxy, the wizard prompts you to save the file.

You must send the CSR text file to a certificate authority (CA), for example, by pasting the text file into the CSR enrollment page on the CA website. When the CA returns the Identity Certificate, you must install it on the ASA. This certificate is presented to remote servers so that they can authenticate the ASA as a trusted server.

Finally, this step of the wizard assists you in installing the root certificates of the CA from the remote servers so that the ASA can determine that the remote servers are trusted.

The wizard completes by displaying a summary of the configuration created for Cisco Intercompany Media Engine. See the Unified Communications Wizard section in this documentation for more information.

Troubleshooting Cisco Intercompany Media Engine Proxy

This section describes how to certain options of the **show uc-ime** command to obtain troubleshooting information for the Cisco Intercompany Media Engine Proxy. See the command reference for detailed information about the syntax for these commands.

show uc-ime signaling-sessions

Displays the corresponding SIP signaling sessions stored by the Cisco Intercompany Media Engine Proxy. Use this command to troubleshoot media or signaling failure. The command also displays the fallback parameters extracted from the SIP message headers, whether RTP monitoring is enabled or disabled, and whether SRTP keys are set.

Through the use of the Cisco Intercompany Media Engine Proxy, not only signaling but also media is secured for communication. It provides signaling encryption and SRTP/RTP conversion with SRTP enforced on the Internet side. The Cisco Intercompany Media Engine Proxy inserts itself into the media path by modifying the SIP signaling messages from Cisco UCMs. The Cisco Intercompany Media Engine Proxy sits on the edge of the enterprise and inspects SIP signaling between SIP trunks created between enterprises. It terminates TLS signaling from the Internet and initiates TCP or TLS to the local Cisco UCM.

```
hostname# show uc-ime signaling-sessions
 1 in use, 3 most used
inside 192.168.10.30:39608 outside 10.194.108.118:5070
  Local Media (audio) conn: 10.194.108.119/29824 to 10.194.108.109/21558
```

```

Local SRTP key set : Remote SRTP key set
Remote Media (audio) conn: 192.168.10.51/19520 to 192.168.10.3/30930
Call-ID: ab6d7980-a7d11b08-50-1e0aa8c0@192.168.10.30
FB Sensitivity: 3
Session ID: 2948-32325449-0@81a985c9-f3a1-55a0-3b19-96549a027259
SIP Trunk URI: 81a985c9-f3a1-55a0-3b19-9654@UCM-30;maddr=192.168.10.30
Codec-name: G722
Payload type: 9

```



Note If calls are not going through the Cisco Intercompany Media Engine, you can also use the **show tls-proxy session** command to troubleshoot the success of the TLS handshake between the components in the Cisco Intercompany Media Engine system. See the command reference for information about this command.

show uc-ime signaling-sessions statistics

Displays statistical information about corresponding signaling sessions stored by Cisco Intercompany Media Engine Proxy. Failure of signaling sessions in the Cisco Intercompany Media Engine can occur for different call-related reasons; such as failure of ticket verification or domain name verification, or offering RTP over the Internet.

```

hostname# show uc-ime signaling-sessions statistics
10 in use, 20 most used
15 terminated
Ticket integrity check failed: 2
Ticket decode failed: 1
Ticket epoch mismatch: 1
Ticket DID mismatch: 0
Ticket timestamp invalid: 4
Ticket domain check failed: 2
Ticket not found: 0
Route domain name check failed: 1
RTP over UC-IME: 2

```



Note

Call-related failures, for example, can be due to the service policy rule being reconfigured or the primary ASA operating in failover mode. If a service policy rule for the Cisco Intercompany Media Engine Proxy is removed (by using the **no service policy** command) and reconfigured, the first call traversing the ASA will fail. To resolve this issue, you must additionally enter the **clear connection** command and restart the ASA. If the failure is due to failover, the connections from the primary ASA are not synchronized to the standby ASA.

show uc-ime media-sessions detail

Displays the details about all active media sessions (calls) stored for the Cisco Intercompany Media Engine Proxy. Use this command to display output from successful calls. Additionally, use this command to troubleshoot problems with IP phone audio, such as one-way audio. If no calls are currently up, this output will be blank.

```

hostname(config)# show uc-ime media-sessions detail
2 in use, 5 most used
Media-session: 10.194.108.109/21558 :: client ip 192.168.10.51/19520
Call ID: ab6d7980-a7d11b08-50-1e0aa8c0@192.168.10.30
Session ID: 2948-32325449-0@81a985c9-f3a1-55a0-3b19-96549a027259
Lcl SRTP conn 10.194.108.109/21558 to 10.194.108.119/29824 tx_pkts 20203 rx_pkts 20200
refcnt 3 : created by Inspect SIP, passthrough not set
RTP monitoring is enabled
Failover_state : 0

```

```

Sum_all_packets           : 20196
Codec_payload_format     : 9
RTP_ptime_ms            : 20
Max_RBLR_pct_x100       : 0
Max_ITE_count_in_8_sec  : 0
Max_BLS_ms              : 0
Max_PDV_usec            : 1000
Min_PDV_usec            : 0
Mov_avg_PDV_usec        : 109
Total_ITE_count          : 0
Total_sec_count          : 403
Concealed_sec_count     : 0
Severely_concealed_sec_count : 0
Max_call_interval_ms    : 118
Total_SequenceNumber_Resets : 0
Media-session: 192.168.10.3/30930 :: client ip 10.194.108.119/29824
Call ID: N/A
Lcl RTP conn 192.168.10.3/30930 to 192.168.10.51/19520 tx_pkts 20201 rx_pkts 20203

```

show uc-ime fallback-notification statistics

Displays statistics about the PSTN fallback notifications to the Cisco UMC. Even if a call is sent over VoIP because the quality of the connection was good, the connection quality might worsen mid-call. To ensure an overall good experience for the end user, Cisco Intercompany Media Engine attempts to perform a mid-call fallback. Performing a mid-call fallback requires the adaptive security appliance to monitor the RTP packets coming from the Internet. If fallback is required, the adaptive security appliance sends a REFER message to Cisco UCM to tell it that it needs to fallback the call to PSTN.

Cisco Intercompany Media Engine uses a configurable hold-down timer to set the amount of time that adaptive security appliance waits before notifying Cisco UCM whether to fall back to PSTN.

```

hostname# show uc-ime fallback-notification statistics
UCM address: 172.23.32.37
Total Notifications Sent: 10

```

show uc-ime mapping-service-sessions

When the Cisco Intercompany Media Engine Proxy is configured for an off path deployment, displays mapping-service requests and replies between the proxy and the local Cisco UMC. A TCP port on the ASA is configured to listen for mapping requests.

The port number must be 1024 or higher to avoid conflicts with other services on the device, such as Telnet or SSH. By default, the port number is TCP 8060.

```

Hostname# show uc-b2blink mapping-service-sessions
Total active sessions: 2
Session client (IP:Port)      Idle time
192.168.1.10:2001            0:01:01
192.168.1.20:3001            0:10:20

```

show uc-ime mapping-service-sessions statistics

Displays statistical information about the Cisco Intercompany Media Engine Proxy mapping service used in off path signaling.

```

Hostname# show uc-ime mapping-service-sessions statistics
Total active sessions: 2
Session client      Total      Responses  Failed    Pending    Idle
(IP:Port)          requests  sent       requests  responses  time
192.168.1.10:2001  10       9          1         0          0:01:01
192.168.1.20:3001  19       19         0         0          0:10:20

```

Feature History for Cisco Intercompany Media Engine Proxy

Table 52-1 lists the release history for this feature.

Table 52-1 Feature History for Cisco Phone Proxy

Feature Name	Releases	Feature Information
Cisco Intercompany Media Engine Proxy	8.3(1)	<p>The Cisco Intercompany Media Engine Proxy was introduced.</p> <p>The following commands were added to the CLI to support configuration of this new feature.</p> <p>[no] uc-ime <i>uc_ime_name</i></p> <p>[no] fallback hold-down monitoring timer <i>value</i></p> <p>[no] fallback sensitivity-file <i>filename</i></p> <p>[no] mapping-service listening-interface <i>ifc_name</i> [listening-port <i>port</i>] uc-ime-interface <i>b2b-ifc</i></p> <p>[no] ticket epoch <i>epoch</i> password <i>pwd</i></p> <p>[no] ucm address <i>ip_addr</i> trunk-security-mode nonsecure secure</p> <p>clear configure uc-ime [<i>uc_ime_name</i>]</p> <p>[no] debug uc-ime [mapping-service media notification rma signaling] [errors events]</p> <p>show uc-ime</p> <p>show running-config [all] uc-ime [<i>uc_ime_map</i>]</p> <p>The following command was updated by adding options for the UC-IME proxy.</p> <p>inspect sip uc-ime <i>uc-ime-name</i> tls-proxy <i>tls-proxy-name</i></p>



PART 12

Configuring Connection Settings and QoS



CHAPTER **53**

Configuring Connection Settings

This chapter describes how to configure connection settings for connections that go through the ASA, or for management connections, that go to the ASA. Connection settings include:

- Maximum connections (TCP and UDP connections, embryonic connections, per-client connections)
- Connection timeouts
- Dead connection detection
- TCP sequence randomization
- TCP normalization customization
- TCP state bypass
- Global timeouts

This chapter includes the following sections:

- [Information About Connection Settings, page 53-1](#)
- [Licensing Requirements for Connection Settings, page 53-4](#)
- [Guidelines and Limitations, page 53-5](#)
- [Default Settings, page 53-5](#)
- [Configuring Connection Settings, page 53-6](#)
- [Monitoring Connection Settings, page 53-14](#)
- [Configuration Examples for Connection Settings, page 53-14](#)
- [Feature History for Connection Settings, page 53-16](#)

Information About Connection Settings

This section describes why you might want to limit connections and includes the following topics:

- [TCP Intercept and Limiting Embryonic Connections, page 53-2](#)
- [Disabling TCP Intercept for Management Packets for Clientless SSL Compatibility, page 53-2](#)
- [Dead Connection Detection \(DCD\), page 53-2](#)
- [TCP Sequence Randomization, page 53-3](#)
- [TCP Normalization, page 53-3](#)
- [TCP State Bypass, page 53-3](#)

TCP Intercept and Limiting Embryonic Connections

Limiting the number of embryonic connections protects you from a DoS attack. The ASA uses the per-client limits and the embryonic connection limit to trigger TCP Intercept, which protects inside systems from a DoS attack perpetrated by flooding an interface with TCP SYN packets. An embryonic connection is a connection request that has not finished the necessary handshake between source and destination. TCP Intercept uses the SYN cookies algorithm to prevent TCP SYN-flooding attacks. A SYN-flooding attack consists of a series of SYN packets usually originating from spoofed IP addresses. The constant flood of SYN packets keeps the server SYN queue full, which prevents it from servicing connection requests. When the embryonic connection threshold of a connection is crossed, the ASA acts as a proxy for the server and generates a SYN-ACK response to the client SYN request. When the ASA receives an ACK back from the client, it can then authenticate the client and allow the connection to the server.

**Note**

When you use TCP SYN cookie protection to protect servers from SYN attacks, you must set the embryonic connection limit lower than the TCP SYN backlog queue on the server that you want to protect. Otherwise, valid clients can no longer access the server during a SYN attack.

To view TCP Intercept statistics, including the top 10 servers under attack, see [Chapter 56, “Configuring Threat Detection.”](#)

Disabling TCP Intercept for Management Packets for Clientless SSL Compatibility

By default, TCP management connections have TCP Intercept always enabled. When TCP Intercept is enabled, it intercepts the 3-way TCP connection establishment handshake packets and thus deprives the ASA from processing the packets for clientless SSL. Clientless SSL requires the ability to process the 3-way handshake packets to provide selective ACK and other TCP options for clientless SSL connections. To disable TCP Intercept for management traffic, you can set the embryonic connection limit; only after the embryonic connection limit is reached is TCP Intercept enabled.

Dead Connection Detection (DCD)

DCD detects a dead connection and allows it to expire, without expiring connections that can still handle traffic. You configure DCD when you want idle, but valid connections to persist.

When you enable DCD, idle timeout behavior changes. With idle timeout, DCD probes are sent to each of the two end-hosts to determine the validity of the connection. If an end-host fails to respond after probes are sent at the configured intervals, the connection is freed, and reset values, if configured, are sent to each of the end-hosts. If both end-hosts respond that the connection is valid, the activity timeout is updated to the current time and the idle timeout is rescheduled accordingly.

Enabling DCD changes the behavior of idle-timeout handling in the TCP normalizer. DCD probing resets the idle timeout on the connections seen in the **show conn** command. To determine when a connection that has exceeded the configured timeout value in the timeout command but is kept alive due to DCD probing, the **show service-policy** command includes counters to show the amount of activity from DCD.

TCP Sequence Randomization

Each TCP connection has two ISNs: one generated by the client and one generated by the server. The ASA randomizes the ISN of the TCP SYN passing in both the inbound and outbound directions.

Randomizing the ISN of the protected host prevents an attacker from predicting the next ISN for a new connection and potentially hijacking the new session.

TCP initial sequence number randomization can be disabled if required. For example:

- If another in-line firewall is also randomizing the initial sequence numbers, there is no need for both firewalls to be performing this action, even though this action does not affect the traffic.
- If you use eBGP multi-hop through the ASA, and the eBGP peers are using MD5. Randomization breaks the MD5 checksum.
- You use a WAAS device that requires the ASA not to randomize the sequence numbers of connections.

TCP Normalization

The TCP normalization feature identifies abnormal packets that the ASA can act on when they are detected; for example, the ASA can allow, drop, or clear the packets. TCP normalization helps protect the ASA from attacks. TCP normalization is always enabled, but you can customize how some features behave.

The TCP normalizer includes non-configurable actions and configurable actions. Typically, non-configurable actions that drop or clear connections apply to packets that are always bad. Configurable actions (as detailed in [“Customizing the TCP Normalizer with a TCP Map”](#) section on page 53-6) might need to be customized depending on your network needs.

See the following guidelines for TCP normalization:

- The normalizer does not protect from SYN floods. The ASA includes SYN flood protection in other ways.
- The normalizer always sees the SYN packet as the first packet in a flow unless the ASA is in loose mode due to failover.

TCP State Bypass


By default, all traffic that goes through the ASA is inspected using the Adaptive Security Algorithm and is either allowed through or dropped based on the security policy. The ASA maximizes the firewall performance by checking the state of each packet (is this a new connection or an established

connection?) and assigning it to either the session management path (a new connection SYN packet), the fast path (an established connection), or the control plane path (advanced inspection). See the “[Stateful Inspection Overview](#)” section on page 1-27 for more detailed information about the stateful firewall.

TCP packets that match existing connections in the fast path can pass through the ASA without rechecking every aspect of the security policy. This feature maximizes performance. However, the method of establishing the session in the fast path using the SYN packet, and the checks that occur in the fast path (such as TCP sequence number), can stand in the way of asymmetrical routing solutions: both the outbound and inbound flow of a connection must pass through the same ASA.

For example, a new connection goes to ASA 1. The SYN packet goes through the session management path, and an entry for the connection is added to the fast path table. If subsequent packets of this connection go through ASA 1, then the packets will match the entry in the fast path, and are passed through. But if subsequent packets go to ASA 2, where there was not a SYN packet that went through the session management path, then there is no entry in the fast path for the connection, and the packets are dropped. [Figure 53-1](#) shows an asymmetric routing example where the outbound traffic goes through a different ASA than the inbound traffic:

Figure 53-1 Asymmetric Routing

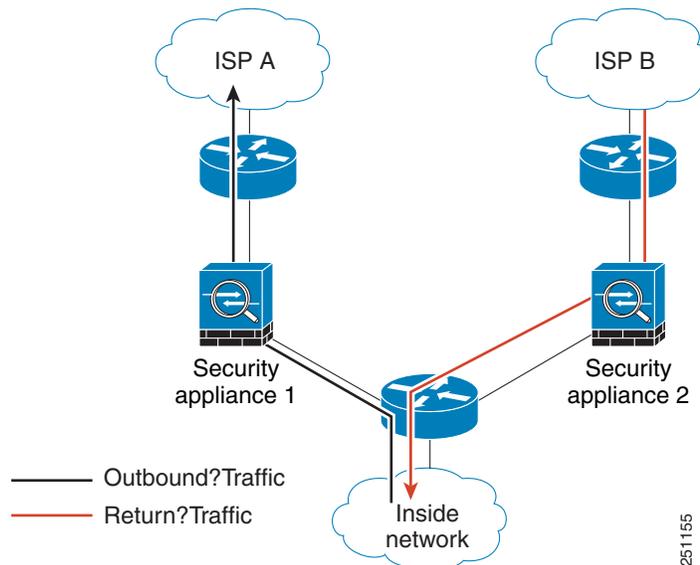

If you have asymmetric routing configured on upstream routers, and traffic alternates between two ASAs, then you can configure TCP state bypass for specific traffic. TCP state bypass alters the way sessions are established in the fast path and disables the fast path checks. This feature treats TCP traffic much as it treats a UDP connection: when a non-SYN packet matching the specified networks enters the ASA, and there is not an fast path entry, then the packet goes through the session management path to establish the connection in the fast path. Once in the fast path, the traffic bypasses the fast path checks.

Licensing Requirements for Connection Settings

Model	License Requirement
All models	Base License.

Guidelines and Limitations

This section includes the following guidelines and limitations:

- [TCP State Bypass Guidelines and Limitations, page 53-5](#)

TCP State Bypass Guidelines and Limitations

Context Mode Guidelines

Supported in single and multiple context mode.

Firewall Mode Guidelines

Supported in routed and transparent mode.

Failover Guidelines

Failover is supported.

Unsupported Features

The following features are not supported when you use TCP state bypass:

- Application inspection—Application inspection requires both inbound and outbound traffic to go through the same ASA, so application inspection is not supported with TCP state bypass.
- AAA authenticated sessions—When a user authenticates with one ASA, traffic returning via the other ASA will be denied because the user did not authenticate with that ASA.
- TCP Intercept, maximum embryonic connection limit, TCP sequence number randomization—The ASA does not keep track of the state of the connection, so these features are not applied.
- TCP normalization—The TCP normalizer is disabled.
- SSM and SSC functionality—You cannot use TCP state bypass and any application running on an SSM or SSC, such as IPS or CSC.

NAT Guidelines

Because the translation session is established separately for each ASA, be sure to configure static NAT on both ASAs for TCP state bypass traffic; if you use dynamic NAT, the address chosen for the session on ASA 1 will differ from the address chosen for the session on ASA 2.

Default Settings

TCP State Bypass

TCP state bypass is disabled by default.

TCP Normalizer

The default configuration includes the following settings:

```
no check-retransmission
no checksum-verification
```

```

exceed-mss allow
queue-limit 0 timeout 4
reserved-bits allow
syn-data allow
synack-data drop
invalid-ack drop
seq-past-window drop
tcp-options range 6 7 clear
tcp-options range 9 255 clear
tcp-options selective-ack allow
tcp-options timestamp allow
tcp-options window-scale allow
ttl-evasion-protection
urgent-flag clear
window-variation allow-connection

```

Configuring Connection Settings

This section includes the following topics:

- [Customizing the TCP Normalizer with a TCP Map, page 53-6](#)
- [Configuring Connection Settings, page 53-10](#)

Task Flow For Configuring Configuration Settings (Except Global Timeouts)

-
- Step 1** For TCP normalization customization, create a TCP map according to the [“Customizing the TCP Normalizer with a TCP Map”](#) section on page 53-6.
- Step 2** For all connection settings except for global timeouts, configure a service policy according to [Chapter 32, “Configuring a Service Policy Using the Modular Policy Framework.”](#)
- Step 3** Configure connection settings according to the [“Configuring Connection Settings”](#) section on page 53-10.
-

Customizing the TCP Normalizer with a TCP Map

To customize the TCP normalizer, first define the settings using a TCP map.

Detailed Steps

-
- Step 1** To specify the TCP normalization criteria that you want to look for, create a TCP map by entering the following command:
- ```
hostname(config)# tcp-map tcp-map-name
```
- For each TCP map, you can customize one or more settings.
- Step 2** (Optional) Configure the TCP map criteria by entering one or more of the following commands (see [Table 53-1](#)). If you want to customize some settings, then the defaults are used for any commands you do not enter.

Table 53-1 tcp-map Commands

| Command                           | Notes                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|-----------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>check-retransmission</b>       | Prevents inconsistent TCP retransmissions.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>checksum-verification</b>      | Verifies the checksum.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>exceed-mss {allow   drop}</b>  | <p>Sets the action for packets whose data length exceeds the TCP maximum segment size.</p> <p>(Default) The <b>allow</b> keyword allows packets whose data length exceeds the TCP maximum segment size.</p> <p>The <b>drop</b> keyword drops packets whose data length exceeds the TCP maximum segment size.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>invalid-ack {allow   drop}</b> | <p>Sets the action for packets with an invalid ACK. You might see invalid ACKs in the following instances:</p> <ul style="list-style-type: none"> <li>• In the TCP connection SYN-ACK-received status, if the ACK number of a received TCP packet is not exactly same as the sequence number of the next TCP packet sending out, it is an invalid ACK.</li> <li>• Whenever the ACK number of a received TCP packet is greater than the sequence number of the next TCP packet sending out, it is an invalid ACK.</li> </ul> <p>The <b>allow</b> keyword allows packets with an invalid ACK.</p> <p>(Default) The <b>drop</b> keyword drops packets with an invalid ACK.</p> <p><b>Note</b> TCP packets with an invalid ACK are automatically allowed for WAAS connections.</p> |

Table 53-1 *tcp-map Commands (continued)*

| Command                                                                | Notes                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>queue-limit</b> <i>pkt_num</i><br>[ <b>timeout</b> <i>seconds</i> ] | <p>Sets the maximum number of out-of-order packets that can be buffered and put in order for a TCP connection, between 1 and 250 packets. The default is 0, which means this setting is disabled and the default system queue limit is used depending on the type of traffic:</p> <ul style="list-style-type: none"> <li>• Connections for application inspection (the <b>inspect</b> command), IPS (the <b>ips</b> command), and TCP check-retransmission (the TCP map <b>check-retransmission</b> command) have a queue limit of 3 packets. If the ASA receives a TCP packet with a different window size, then the queue limit is dynamically changed to match the advertised setting.</li> <li>• For other TCP connections, out-of-order packets are passed through untouched.</li> </ul> <p>If you set the <b>queue-limit</b> command to be 1 or above, then the number of out-of-order packets allowed for all TCP traffic matches this setting. For example, for application inspection, IPS, and TCP check-retransmission traffic, any advertised settings from TCP packets are ignored in favor of the <b>queue-limit</b> setting. For other TCP traffic, out-of-order packets are now buffered and put in order instead of passed through untouched.</p> <p>The <b>timeout</b> <i>seconds</i> argument sets the maximum amount of time that out-of-order packets can remain in the buffer, between 1 and 20 seconds; if they are not put in order and passed on within the timeout period, then they are dropped. The default is 4 seconds. You cannot change the timeout for any traffic if the <i>pkt_num</i> argument is set to 0; you need to set the limit to be 1 or above for the <b>timeout</b> keyword to take effect.</p> |
| <b>reserved-bits</b> { <b>allow</b>   <b>clear</b>   <b>drop</b> }     | <p>Sets the action for reserved bits in the TCP header.</p> <p>(Default) The <b>allow</b> keyword allows packets with the reserved bits in the TCP header.</p> <p>The <b>clear</b> keyword clears the reserved bits in the TCP header and allows the packet.</p> <p>The <b>drop</b> keyword drops the packet with the reserved bits in the TCP header.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>seq-past-window</b> { <b>allow</b>   <b>drop</b> }                  | <p>Sets the action for packets that have past-window sequence numbers, namely the sequence number of a received TCP packet is greater than the right edge of the TCP receiving window.</p> <p>The <b>allow</b> keyword allows packets that have past-window sequence numbers. This action is only allowed if the <b>queue-limit</b> command is set to 0 (disabled).</p> <p>(Default) The <b>drop</b> keyword drops packets that have past-window sequence numbers.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |

Table 53-1 tcp-map Commands (continued)

| Command                                                                                                                                                                                                                       | Notes                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>synack-data</b> { <b>allow</b>   <b>drop</b> }                                                                                                                                                                             | Sets the action for TCP SYNACK packets that contain data.<br>The <b>allow</b> keyword allows TCP SYNACK packets that contain data.<br>(Default) The <b>drop</b> keyword drops TCP SYNACK packets that contain data.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>syn-data</b> { <b>allow</b>   <b>drop</b> }                                                                                                                                                                                | Sets the action for SYN packets with data.<br>(Default) The <b>allow</b> keyword allows SYN packets with data.<br>The <b>drop</b> keyword drops SYN packets with data.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>tcp-options</b> { <b>selective-ack</b>   <b>timestamp</b>   <b>window-scale</b> }<br>{ <b>allow</b>   <b>clear</b> }<br>Or<br><b>tcp-options range</b> <i>lower upper</i><br>{ <b>allow</b>   <b>clear</b>   <b>drop</b> } | Sets the action for packets with TCP options, including the selective-ack, timestamp, or window-scale TCP options.<br>(Default) The <b>allow</b> keyword allows packets with the specified option.<br>(Default for <b>range</b> ) The <b>clear</b> keyword clears the option and allows the packet.<br>The <b>drop</b> keyword drops the packet with the specified option.<br>The <b>selective-ack</b> keyword sets the action for the SACK option.<br>The <b>timestamp</b> keyword sets the action for the timestamp option. Clearing the timestamp option disables PAWS and RTT.<br>The <b>window-scale</b> keyword sets the action for the window scale mechanism option.<br>The <b>range</b> keyword specifies a range of options. The <i>lower</i> argument sets the lower end of the range as 6, 7, or 9 through 255.<br>The <i>upper</i> argument sets the upper end of the range as 6, 7, or 9 through 255. |
| <b>ttl-evasion-protection</b>                                                                                                                                                                                                 | Enables the TTL evasion protection. Do not disable this command if you want to prevent attacks that attempt to evade security policy.<br>For example, an attacker can send a packet that passes policy with a very short TTL. When the TTL goes to zero, a router between the ASA and the endpoint drops the packet. It is at this point that the attacker can send a malicious packet with a long TTL that appears to the ASA to be a retransmission and is passed. To the endpoint host, however, it is the first packet that has been received by the attacker. In this case, an attacker is able to succeed without security preventing the attack.                                                                                                                                                                                                                                                             |

Table 53-1 *tcp-map Commands (continued)*

| Command                                                | Notes                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|--------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>urgent-flag</b> { <b>allow</b>   <b>clear</b> }     | <p>Sets the action for packets with the URG flag. The URG flag is used to indicate that the packet contains information that is of higher priority than other data within the stream. The TCP RFC is vague about the exact interpretation of the URG flag, therefore end systems handle urgent offsets in different ways, which may make the end system vulnerable to attacks.</p> <p>The <b>allow</b> keyword allows packets with the URG flag.</p> <p>(Default) The <b>clear</b> keyword clears the URG flag and allows the packet.</p>                      |
| <b>window-variation</b> { <b>allow</b>   <b>drop</b> } | <p>Sets the action for a connection that has changed its window size unexpectedly. The window size mechanism allows TCP to advertise a large window and to subsequently advertise a much smaller window without having accepted too much data. From the TCP specification, “shrinking the window” is strongly discouraged. When this condition is detected, the connection can be dropped.</p> <p>(Default) The <b>allow</b> keyword allows connections with a window variation.</p> <p>The <b>drop</b> keyword drops connections with a window variation.</p> |

## Configuring Connection Settings

To set connection settings, perform the following steps.

### Guidelines and Limitations

Depending on the number of CPU cores on your ASA model, the maximum concurrent and embryonic connections may exceed the configured numbers due to the way each core manages connections. In the worst case scenario, the ASA allows up to  $n-1$  extra connections and embryonic connections, where  $n$  is the number of cores. For example, if your model has 4 cores, if you configure 6 concurrent connections and 4 embryonic connections, you could have an additional 3 of each type. To determine the number of cores for your model, enter the **show cpu core** command.

## Detailed Steps

|        | Command                                                                                                 | Purpose                                                                                                                                                  |
|--------|---------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------|
| Step 1 | <b>class-map</b> <i>name</i><br><br><b>Example:</b><br>hostname(config)# class-map bypass_traffic       | Creates a class map to identify the traffic for which you want to disable stateful firewall inspection.                                                  |
| Step 2 | <b>match</b> <i>parameter</i><br><br><b>Example:</b><br>hostname(config-cmap)# match access-list bypass | Specifies the traffic in the class map. See the <a href="#">“Identifying Traffic (Layer 3/4 Class Maps)”</a> section on page 32-12 for more information. |
| Step 3 | <b>policy-map</b> <i>name</i><br><br><b>Example:</b><br>hostname(config)# policy-map tcp_bypass_policy  | Adds or edits a policy map that sets the actions to take with the class map traffic.                                                                     |
| Step 4 | <b>class</b> <i>name</i><br><br><b>Example:</b><br>hostname(config-pmap)# class bypass_traffic          | Identifies the class map created in <a href="#">Step 1</a>                                                                                               |
| Step 5 | Do one or more of the following:                                                                        |                                                                                                                                                          |

| Command                                                                                                                                                     | Purpose                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <pre>set connection {[conn-max n] [embryonic-conn-max n] [per-client-embryonic-max n] [per-client-max n] [random-sequence-number {enable   disable}]}</pre> | <p>Sets maximum connection limits or whether TCP sequence randomization is enabled.</p> <p>The <b>conn-max</b> <i>n</i> argument sets the maximum number of simultaneous TCP and/or UDP connections that are allowed, between 0 and 2000000. The default is 0, which allows unlimited connections.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <p><b>Example:</b></p> <pre>hostname(config-pmap-c)# set connection conn-max 256 random-sequence-number disable</pre>                                       | <p>If two servers are configured to allow simultaneous TCP and/or UDP connections, the connection limit is applied to each configured server separately.</p> <p>When configured under a class, this argument restricts the maximum number of simultaneous connections that are allowed for the entire class. In this case, one attack host can consume all the connections and leave none of the rest of the hosts matched in the access list under the class.</p> <p>The <b>embryonic-conn-max</b> <i>n</i> argument sets the maximum number of simultaneous embryonic connections allowed, between 0 and 2000000. The default is 0, which allows unlimited connections.</p> <p>The <b>per-client-embryonic-max</b> <i>n</i> argument sets the maximum number of simultaneous embryonic connections allowed per client, between 0 and 2000000. The default is 0, which allows unlimited connections.</p> <p>The <b>per-client-max</b> <i>n</i> argument sets the maximum number of simultaneous connections allowed per client, between 0 and 2000000. The default is 0, which allows unlimited connections. When configured under a class, this argument restricts the maximum number of simultaneous connections that are allowed for each host that is matched through an access list under the class.</p> <p>The <b>random-sequence-number</b> {<b>enable</b>   <b>disable</b>} keyword enables or disables TCP sequence number randomization. See the <a href="#">“TCP Sequence Randomization”</a> section on page 53-3 section for more information.</p> <p>You can enter this command all on one line (in any order), or you can enter each attribute as a separate command. The ASA combines the command into one line in the running configuration.</p> |
| <p> <b>Note</b></p>                                                      | <p>For management traffic, you can only set the <b>conn-max</b> and <b>embryonic-conn-max</b> keywords.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |

| Command                                                                                                                                                                                                                                                                   | Purpose                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <pre>set connection timeout {[embryonic hh:mm:ss] {idle hh:mm:ss [reset]] [half-closed hh:mm:ss] [dcd hh:mm:ss [max_retries]]}</pre> <p><b>Example:</b></p> <pre>hostname(config-pmap-c)# set connection timeout idle 2:0:0 embryonic 0:40:0 half-closed 0:20:0 dcd</pre> | <p>Sets connection timeouts.</p> <p>The <b>embryonic</b> <i>hh:mm:ss</i> keyword sets the timeout period until a TCP embryonic (half-open) connection is closed, between 0:0:5 and 1193:0:0. The default is 0:0:30. You can also set this value to 0, which means the connection never times out.</p> <p>The <b>idle</b> <i>hh:mm:ss</i> keyword sets the idle timeout for all protocols between 0:0:1 and 1193:0:0. The default is 1:0:0. You can also set this value to 0, which means the connection never times out. For TCP traffic, the <b>reset</b> keyword sends a reset to TCP endpoints when the connection times out.</p> <p>The <b>half-closed</b> <i>hh:mm:ss</i> keyword sets the idle timeout between 0:5:0 and 1193:0:0. The default is 0:10:0. Half-closed connections are not affected by DCD. Also, the ASA does not send a reset when taking down half-closed connections.</p> <p>The <b>dcd</b> keyword enables DCD. DCD detects a dead connection and allows it to expire, without expiring connections that can still handle traffic. You configure DCD when you want idle, but valid connections to persist. After a TCP connection times out, the ASA sends DCD probes to the end hosts to determine the validity of the connection. If one of the end hosts fails to respond after the maximum retries are exhausted, the ASA frees the connection. If both end hosts respond that the connection is valid, the ASA updates the activity timeout to the current time and reschedules the idle timeout accordingly. The <i>retry-interval</i> sets the time duration in <i>hh:mm:ss</i> format to wait after each unresponsive DCD probe before sending another probe, between 0:0:1 and 24:0:0. The default is 0:0:15. The <i>max-retries</i> sets the number of consecutive failed retries for DCD before declaring the connection as dead. The minimum value is 1 and the maximum value is 255. The default is 5.</p> <p>The default <b>tcp</b> idle timeout is 1 hour.</p> <p>The default <b>udp</b> idle timeout is 2 minutes.</p> <p>The default <b>icmp</b> idle timeout is 2 seconds.</p> <p>The default <b>esp</b> and <b>ha</b> idle timeout is 30 seconds.</p> <p>For all other protocols, the default idle timeout is 2 minutes.</p> <p>To never time out, enter 0:0:0.</p> <p>You can enter this command all on one line (in any order), or you can enter each attribute as a separate command. The command is combined onto one line in the running configuration.</p> <p> <b>Note</b> This command is not available for management traffic.</p> |

| Command                                                                                                                                                                                  | Purpose                                                                                                                                                                                                                                                                                                                                                          |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <pre>set connection advanced-options tcp-map-name</pre> <p><b>Example:</b><br/>hostname(config-pmap-c)# set connection advanced-options tcp_map1 </p>                                    | Customizes the TCP normalizer. See the “ <a href="#">Customizing the TCP Normalizer with a TCP Map</a> ” section on page 53-6 to create a TCP map.                                                                                                                                                                                                               |
| <pre>set connection advanced-options tcp-state-bypass</pre> <p><b>Example:</b><br/>hostname(config-pmap-c)# set connection advanced-options tcp-state-bypass </p>                        | Enables TCP state bypass.                                                                                                                                                                                                                                                                                                                                        |
| <p><b>Step 6</b></p> <pre>service-policy policymap_name {global   interface interface_name}</pre> <p><b>Example:</b><br/>hostname(config)# service-policy tcp_bypass_policy outside </p> | Activates the policy map on one or more interfaces. <b>global</b> applies the policy map to all interfaces, and <b>interface</b> applies the policy to one interface. Only one global policy is allowed. You can override the global policy on an interface by applying a service policy to that interface. You can only apply one policy map to each interface. |

## Monitoring Connection Settings

This section includes the following topics:

- [Monitoring TCP State Bypass, page 53-14](#)

## Monitoring TCP State Bypass

To monitor TCP state bypass, perform one of the following tasks:

| Command                | Purpose                                                                                                               |
|------------------------|-----------------------------------------------------------------------------------------------------------------------|
| <code>show conn</code> | If you use the <b>show conn</b> command, the display for connections that use TCP state bypass includes the flag “b.” |

## Configuration Examples for Connection Settings

This section includes the following topics:

- [Configuration Examples for Connection Limits and Timeouts, page 53-15](#)
- [Configuration Examples for TCP State Bypass, page 53-15](#)
- [Configuration Examples for TCP Normalization, page 53-15](#)

## Configuration Examples for Connection Limits and Timeouts

The following example sets the connection limits and timeouts for all traffic:

```
hostname(config)# class-map CONNS
hostname(config-cmap)# match any
hostname(config-cmap)# policy-map CONNS
hostname(config-pmap)# class CONNS
hostname(config-pmap-c)# set connection conn-max 1000 embryonic-conn-max 3000
hostname(config-pmap-c)# set connection timeout idle 2:0:0 embryonic 0:40:0 half-closed
0:20:0 dcd
hostname(config-pmap-c)# service-policy CONNS interface outside
```

You can enter **set connection** commands with multiple parameters or you can enter each parameter as a separate command. The ASA combines the commands into one line in the running configuration. For example, if you entered the following two commands in class configuration mode:

```
hostname(config-pmap-c)# set connection conn-max 600
hostname(config-pmap-c)# set connection embryonic-conn-max 50
```

the output of the **show running-config policy-map** command would display the result of the two commands in a single, combined command:

```
set connection conn-max 600 embryonic-conn-max 50
```

## Configuration Examples for TCP State Bypass

The following is a sample configuration for TCP state bypass:

```
hostname(config)# access-list tcp_bypass extended permit tcp 10.1.1.0 255.255.255.224 any

hostname(config)# class-map tcp_bypass
hostname(config-cmap)# description "TCP traffic that bypasses stateful firewall"
hostname(config-cmap)# match access-list tcp_bypass

hostname(config-cmap)# policy-map tcp_bypass_policy
hostname(config-pmap)# class tcp_bypass
hostname(config-pmap-c)# set connection advanced-options tcp-state-bypass

hostname(config-pmap-c)# service-policy tcp_bypass_policy outside

hostname(config-pmap-c)# static (inside,outside) 209.165.200.224 10.1.1.0 netmask
255.255.255.224
```

## Configuration Examples for TCP Normalization

For example, to allow urgent flag and urgent offset packets for all traffic sent to the range of TCP ports between the well known FTP data port and the Telnet port, enter the following commands:

```
hostname(config)# tcp-map tmap
hostname(config-tcp-map)# urgent-flag allow
hostname(config-tcp-map)# class-map urg-class
hostname(config-cmap)# match port tcp range ftp-data telnet
hostname(config-cmap)# policy-map pmap
hostname(config-pmap)# class urg-class
hostname(config-pmap-c)# set connection advanced-options tmap
hostname(config-pmap-c)# service-policy pmap global
```

# Feature History for Connection Settings

Table 53-2 lists each feature change and the platform release in which it was implemented.

**Table 53-2** Feature History for Connection Settings

| Feature Name                                                 | Platform Releases | Feature Information                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|--------------------------------------------------------------|-------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| TCP state bypass                                             | 8.2(1)            | This feature was introduced. The following command was introduced: <b>set connection advanced-options tcp-state-bypass</b> .                                                                                                                                                                                                                                                                                                                                                                           |
| Connection timeout for all protocols                         | 8.2(2)            | The idle timeout was changed to apply to all protocols, not just TCP.<br><br>The following command was modified: <b>set connection timeout</b>                                                                                                                                                                                                                                                                                                                                                         |
| Timeout for connections using a backup static route          | 8.2(5)/8.4(2)     | When multiple static routes exist to a network with different metrics, the ASA uses the one with the best metric at the time of connection creation. If a better route becomes available, then this timeout lets connections be closed so a connection can be reestablished to use the better route. The default is 0 (the connection never times out). To take advantage of this feature, change the timeout to a new value.<br><br>We modified the following command: <b>timeout floating-conn</b> . |
| Configurable timeout for PAT xlate                           | 8.4(3)            | When a PAT xlate times out (by default after 30 seconds), and the ASA reuses the port for a new translation, some upstream routers might reject the new connection because the previous connection might still be open on the upstream device. The PAT xlate timeout is now configurable, to a value between 30 seconds and 5 minutes.<br><br>We introduced the following command: <b>timeout pat-xlate</b> .<br><i>This feature is not available in 8.5(1) or 8.6(1).</i>                             |
| Increased maximum connection limits for service policy rules | 8.4(5)            | The maximum number of connections for service policy rules was increased from 65535 to 2000000.<br><br>We modified the following commands: <b>set connection conn-max</b> , <b>set connection embryonic-conn-max</b> , <b>set connection per-client-embryonic-max</b> , <b>set connection per-client-max</b> .<br><br><i>This feature is not available in 8.5(1) or 8.6(1).</i>                                                                                                                        |



## CHAPTER 54

# Configuring QoS

---

Have you ever participated in a long-distance phone call that involved a satellite connection? The conversation might be interrupted with brief, but perceptible, gaps at odd intervals. Those gaps are the time, called the latency, between the arrival of packets being transmitted over the network. Some network traffic, such as voice and video, cannot tolerate long latency times. Quality of service (QoS) is a feature that lets you give priority to critical traffic, prevent bandwidth hogging, and manage network bottlenecks to prevent packet drops.

This chapter describes how to apply QoS policies and includes the following sections:

- [Information About QoS, page 54-1](#)
- [Licensing Requirements for QoS, page 54-5](#)
- [Guidelines and Limitations, page 54-5](#)
- [Configuring QoS, page 54-6](#)
- [Monitoring QoS, page 54-15](#)
- [Feature History for QoS, page 54-18](#)

## Information About QoS

You should consider that in an ever-changing network environment, QoS is not a one-time deployment, but an ongoing, essential part of network design.

This section describes the QoS features supported by the ASA and includes the following topics:

- [Supported QoS Features, page 54-2](#)
- [What is a Token Bucket?, page 54-2](#)
- [Information About Policing, page 54-3](#)
- [Information About Priority Queuing, page 54-3](#)
- [Information About Traffic Shaping, page 54-4](#)
- [How QoS Features Interact, page 54-4](#)
- [DSCP and DiffServ Preservation, page 54-5](#)

## Supported QoS Features

The ASA supports the following QoS features:

- Policing—To prevent individual flows from hogging the network bandwidth, you can limit the maximum bandwidth used per flow. See the “[Information About Policing](#)” section on page 54-3 for more information.
- Priority queuing—For critical traffic that cannot tolerate latency, such as Voice over IP (VoIP), you can identify traffic for Low Latency Queuing (LLQ) so that it is always transmitted ahead of other traffic. See the “[Information About Priority Queuing](#)” section on page 54-3 for more information.
- Traffic shaping—If you have a device that transmits packets at a high speed, such as a ASA with Fast Ethernet, and it is connected to a low speed device such as a cable modem, then the cable modem is a bottleneck at which packets are frequently dropped. To manage networks with differing line speeds, you can configure the ASA to transmit packets at a fixed slower rate. See the “[Information About Traffic Shaping](#)” section on page 54-4 for more information.

## What is a Token Bucket?

A token bucket is used to manage a device that regulates the data in a flow. For example, the regulator might be a traffic policer or a traffic shaper. A token bucket itself has no discard or priority policy. Rather, a token bucket discards tokens and leaves to the flow the problem of managing its transmission queue if the flow overdrives the regulator.

A token bucket is a formal definition of a rate of transfer. It has three components: a burst size, an average rate, and a time interval. Although the average rate is generally represented as bits per second, any two values may be derived from the third by the relation shown as follows:

$$\text{average rate} = \text{burst size} / \text{time interval}$$

Here are some definitions of these terms:

- Average rate—Also called the committed information rate (CIR), it specifies how much data can be sent or forwarded per unit time on average.
- Burst size—Also called the Committed Burst (Bc) size, it specifies in bits or bytes per burst how much traffic can be sent within a given unit of time to not create scheduling concerns. (For traffic shaping, it specifies bits per burst; for policing, it specifies bytes per burst.)
- Time interval—Also called the measurement interval, it specifies the time quantum in seconds per burst.

In the token bucket metaphor, tokens are put into the bucket at a certain rate. The bucket itself has a specified capacity. If the bucket fills to capacity, newly arriving tokens are discarded. Each token is permission for the source to send a certain number of bits into the network. To send a packet, the regulator must remove from the bucket a number of tokens equal in representation to the packet size.

If not enough tokens are in the bucket to send a packet, the packet either waits until the bucket has enough tokens (in the case of traffic shaping) or the packet is discarded or marked down (in the case of policing). If the bucket is already full of tokens, incoming tokens overflow and are not available to future packets. Thus, at any time, the largest burst a source can send into the network is roughly proportional to the size of the bucket.

Note that the token bucket mechanism used for traffic shaping has both a token bucket and a data buffer, or queue; if it did not have a data buffer, it would be a policer. For traffic shaping, packets that arrive that cannot be sent immediately are delayed in the data buffer.

For traffic shaping, a token bucket permits burstiness but bounds it. It guarantees that the burstiness is bounded so that the flow will never send faster than the token bucket capacity, divided by the time interval, plus the established rate at which tokens are placed in the token bucket. See the following formula:

$$(\text{token bucket capacity in bits} / \text{time interval in seconds}) + \text{established rate in bps} = \text{maximum flow speed in bps}$$

This method of bounding burstiness also guarantees that the long-term transmission rate will not exceed the established rate at which tokens are placed in the bucket.

## Information About Policing

Policing is a way of ensuring that no traffic exceeds the maximum rate (in bits/second) that you configure, thus ensuring that no one traffic flow or class can take over the entire resource. When traffic exceeds the maximum rate, the ASA drops the excess traffic. Policing also sets the largest single burst of traffic allowed.

## Information About Priority Queuing

LLQ priority queuing lets you prioritize certain traffic flows (such as latency-sensitive traffic like voice and video) ahead of other traffic.

The ASA supports two types of priority queuing:

- Standard priority queuing—Standard priority queuing uses an LLQ priority queue on an interface (see the [“Configuring the Standard Priority Queue for an Interface”](#) section on page 54-7), while all other traffic goes into the “best effort” queue. Because queues are not of infinite size, they can fill and overflow. When a queue is full, any additional packets cannot get into the queue and are dropped. This is called *tail drop*. To avoid having the queue fill up, you can increase the queue buffer size. You can also fine-tune the maximum number of packets allowed into the transmit queue. These options let you control the latency and robustness of the priority queuing. Packets in the LLQ queue are always transmitted before packets in the best effort queue.
- Hierarchical priority queuing—Hierarchical priority queuing is used on interfaces on which you enable a traffic shaping queue. A subset of the shaped traffic can be prioritized. The standard priority queue is not used. See the following guidelines about hierarchical priority queuing:
  - Priority packets are always queued at the head of the shape queue so they are always transmitted ahead of other non-priority queued packets.
  - Priority packets are never dropped from the shape queue unless the sustained rate of priority traffic exceeds the shape rate.
  - For IPsec-encrypted packets, you can only match traffic based on the DSCP or precedence setting.
  - IPsec-over-TCP is not supported for priority traffic classification.

## Information About Traffic Shaping

Traffic shaping is used to match device and link speeds, thereby controlling packet loss, variable delay, and link saturation, which can cause jitter and delay.

**Note**

Traffic shaping is not supported on multi-processor models, such as the ASA 5580 or ASA 5585-X.

- Traffic shaping must be applied to all outgoing traffic on a physical interface or in the case of the ASA 5505, on a VLAN. You cannot configure traffic shaping for specific types of traffic.
- Traffic shaping is implemented when packets are ready to be transmitted on an interface, so the rate calculation is performed based on the actual size of a packet to be transmitted, including all the possible overhead such as the IPsec header and L2 header.
- The shaped traffic includes both through-the-box and from-the-box traffic.
- The shape rate calculation is based on the standard token bucket algorithm. The token bucket size is twice the Burst Size value. See the [“What is a Token Bucket?”](#) section on page 54-2.
- When bursty traffic exceeds the specified shape rate, packets are queued and transmitted later. Following are some characteristics regarding the shape queue (for information about hierarchical priority queuing, see the [“Information About Priority Queuing”](#) section on page 54-3):
  - The queue size is calculated based on the shape rate. The queue can hold the equivalent of 200-milliseconds worth of shape rate traffic, assuming a 1500-byte packet. The minimum queue size is 64.
  - When the queue limit is reached, packets are tail-dropped.
  - Certain critical keep-alive packets such as OSPF Hello packets are never dropped.
  - The time interval is derived by  $time\_interval = burst\_size / average\_rate$ . The larger the time interval is, the burstier the shaped traffic might be, and the longer the link might be idle. The effect can be best understood using the following exaggerated example:

Average Rate = 1000000

Burst Size = 1000000

In the above example, the time interval is 1 second, which means, 1 Mbps of traffic can be bursted out within the first 10 milliseconds of the 1-second interval on a 100 Mbps FE link and leave the remaining 990 milliseconds idle without being able to send any packets until the next time interval. So if there is delay-sensitive traffic such as voice traffic, the Burst Size should be reduced compared to the average rate so the time interval is reduced.

## How QoS Features Interact

You can configure each of the QoS features alone if desired for the ASA. Often, though, you configure multiple QoS features on the ASA so you can prioritize some traffic, for example, and prevent other traffic from causing bandwidth problems.

See the following supported feature combinations per interface:

- Standard priority queuing (for specific traffic) + Policing (for the rest of the traffic).

You cannot configure priority queuing and policing for the same set of traffic.

- Traffic shaping (for all traffic on an interface) + Hierarchical priority queuing (for a subset of traffic).

You cannot configure traffic shaping and standard priority queuing for the same interface; only hierarchical priority queuing is allowed. For example, if you configure standard priority queuing for the global policy, and then configure traffic shaping for a specific interface, the feature you configured last is rejected because the global policy overlaps the interface policy.

Typically, if you enable traffic shaping, you do not also enable policing for the same traffic, although the ASA does not restrict you from configuring this.

## DSCP and DiffServ Preservation

- DSCP markings are preserved on all traffic passing through the ASA.
- The ASA does not locally mark/remark any classified traffic, but it honors the Expedited Forwarding (EF) DSCP bits of every packet to determine if it requires “priority” handling and will direct those packets to the LLQ.
- DiffServ marking is preserved on packets when they traverse the service provider backbone so that QoS can be applied in transit (QoS tunnel pre-classification).

## Licensing Requirements for QoS

The following table shows the licensing requirements for this feature:

| Model      | License Requirement |
|------------|---------------------|
| All models | Base License.       |

## Guidelines and Limitations

This section includes the guidelines and limitations for this feature.

### Context Mode Guidelines

Supported in single context mode only. Does not support multiple context mode.

### Firewall Mode Guidelines

Supported in routed firewall mode only. Does not support transparent firewall mode.

### IPv6 Guidelines

Does not support IPv6.

### Model Guidelines

- (Multi-processor models, such as the ASA 5500-X, ASA 5580, ASA 5585-X, and ASASM) Traffic shaping is not supported.
- (ASA 5580) You cannot create a standard priority queue for a Ten Gigabit Ethernet interface. **Note:** For the ASA 5585-X, standard priority queuing is supported on a Ten Gigabit Interface.

- (ASA 5512-X through ASA 5555-X) Priority queuing is not supported on the Management 0/0 interface.

**Additional Guidelines and Limitations**

- For traffic shaping, you can only use the **class-default** class map, which is automatically created by the ASA, and which matches all traffic.
- For priority traffic, you cannot use the **class-default** class map.
- For hierarchical priority queuing, for encrypted VPN traffic, you can only match traffic based on the DSCP or precedence setting; you cannot match a tunnel group.
- For hierarchical priority queuing, IPsec-over-TCP traffic is not supported.
- You cannot configure traffic shaping and standard priority queuing for the same interface; only hierarchical priority queuing is allowed.
- For standard priority queuing, the queue must be configured for a physical interface or, for the ASA 5505, a VLAN.

## Configuring QoS

This section includes the following topics:

- [Determining the Queue and TX Ring Limits for a Standard Priority Queue, page 54-6](#)
- [Configuring the Standard Priority Queue for an Interface, page 54-7](#)
- [Configuring a Service Rule for Standard Priority Queuing and Policing, page 54-9](#)
- [Configuring a Service Rule for Traffic Shaping and Hierarchical Priority Queuing, page 54-12](#)

## Determining the Queue and TX Ring Limits for a Standard Priority Queue

To determine the priority queue and TX ring limits, use the worksheets below.

Table 54-1 shows how to calculate the priority queue size. Because queues are not of infinite size, they can fill and overflow. When a queue is full, any additional packets cannot get into the queue and are dropped (called *tail drop*). To avoid having the queue fill up, you can adjust the queue buffer size according to the “Configuring the Standard Priority Queue for an Interface” section on page 54-7.

**Table 54-1 Queue Limit Worksheet**

|               |                                                                                                                                                                                                          |
|---------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Step 1</b> | $\frac{\text{Outbound bandwidth (Mbps or Kbps)}^1}{\text{Mbps}} \times 125 = \text{\# of bytes/ms}$ $\frac{\text{Outbound bandwidth (Mbps or Kbps)}^1}{\text{Kbps}} \times .125 = \text{\# of bytes/ms}$ |
| <b>Step 2</b> | $\frac{\text{\# of bytes/ms from Step 1}}{\text{Average packet size (bytes)}^2} \times \text{Delay (ms)}^3 = \text{Queue limit (\# of packets)}$                                                         |

1. For example, DSL might have an uplink speed of 768 Kbps. Check with your provider.
2. Determine this value from a codec or sampling size. For example, for VoIP over VPN, you might use 160 bytes. We recommend 256 bytes if you do not know what size to use.
3. The delay depends on your application. For example, the recommended maximum delay for VoIP is 200 ms. We recommend 500 ms if you do not know what delay to use.

Table 54-2 shows how to calculate the TX ring limit. This limit determines the maximum number of packets allowed into the Ethernet transmit driver before the driver pushes back to the queues on the interface to let them buffer packets until the congestion clears. This setting guarantees that the hardware-based transmitting ring imposes a limited amount of extra latency for a high-priority packet.

**Table 54-2 TX Ring Limit Worksheet**

|               |                                                      |   |                                                |   |                                     |
|---------------|------------------------------------------------------|---|------------------------------------------------|---|-------------------------------------|
| <b>Step 1</b> | _____ Mbps                                           | x | <b>125</b>                                     | = | _____                               |
|               | <i>Outbound bandwidth (Mbps or Kbps)<sup>1</sup></i> |   |                                                |   | <i># of bytes/ms</i>                |
|               | _____ Kbps                                           | x | <b>0.125</b>                                   | = | _____                               |
|               |                                                      |   |                                                |   | <i># of bytes/ms</i>                |
| <b>Step 2</b> | _____                                                | ÷ | _____                                          | x | _____                               |
|               | <i># of bytes/ms from Step 1</i>                     |   | <i>Maximum packet size (bytes)<sup>2</sup></i> |   | <i>Delay (ms)<sup>3</sup></i>       |
|               |                                                      |   |                                                | = | _____                               |
|               |                                                      |   |                                                |   | <i>TX ring limit (# of packets)</i> |

1. For example, DSL might have an uplink speed of 768 Kbps. Check with your provider.
2. Typically, the maximum size is 1538 bytes, or 1542 bytes for tagged Ethernet. If you allow jumbo frames (if supported for your platform), then the packet size might be larger.
3. The delay depends on your application. For example, to control jitter for VoIP, you should use 20 ms.

## Configuring the Standard Priority Queue for an Interface

If you enable standard priority queuing for traffic on a physical interface, then you need to also create the priority queue on each interface. Each physical interface uses two queues: one for priority traffic, and the other for all other traffic. For the other traffic, you can optionally configure policing.



### Note

The standard priority queue is not required for hierarchical priority queuing with traffic shaping; see the “[Information About Priority Queuing](#)” section on page 54-3 for more information.

### Restrictions

- (ASASM) The ASASM does not support priority queuing.
- (ASA 5580) You cannot create a standard priority queue for a Ten Gigabit Ethernet interface. **Note:** For the ASA 5585-X, standard priority queuing is supported on a Ten Gigabit Ethernet interface.
- (ASA 5512-X through ASA 5555-X) Priority queuing is not supported on the Management 0/0 interface.

## Detailed Steps

|        | Command                                                                                                                     | Purpose                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|--------|-----------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Step 1 | <b>priority-queue</b> <i>interface_name</i><br><br><b>Example:</b><br>hostname(config)# priority-queue inside               | Create the priority queue, where the <i>interface_name</i> argument specifies the physical interface name on which you want to enable the priority queue, or for the ASA 5505 or ASASM, the VLAN interface name.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| Step 2 | <b>queue-limit</b> <i>number_of_packets</i><br><br><b>Example:</b><br>hostname(config-priority-queue)#<br>queue-limit 260   | Changes the size of the priority queues. The default queue limit is 1024 packets. Because queues are not of infinite size, they can fill and overflow. When a queue is full, any additional packets cannot get into the queue and are dropped (called <i>tail drop</i> ). To avoid having the queue fill up, you can use the <b>queue-limit</b> command to increase the queue buffer size.<br><br>The upper limit of the range of values for the <b>queue-limit</b> command is determined dynamically at run time. To view this limit, enter <b>queue-limit ?</b> on the command line. The key determinants are the memory needed to support the queues and the memory available on the device.<br><br>The <b>queue-limit</b> that you specify affects both the higher priority low-latency queue and the best effort queue.                                                                                    |
| Step 3 | <b>tx-ring-limit</b> <i>number_of_packets</i><br><br><b>Example:</b><br>hostname(config-priority-queue)#<br>tx-ring-limit 3 | Specifies the depth of the priority queues. The default tx-ring-limit is 128 packets. This command sets the maximum number of low-latency or normal priority packets allowed into the Ethernet transmit driver before the driver pushes back to the queues on the interface to let them buffer packets until the congestion clears. This setting guarantees that the hardware-based transmit ring imposes a limited amount of extra latency for a high-priority packet.<br><br>The upper limit of the range of values for the <b>tx-ring-limit</b> command is determined dynamically at run time. To view this limit, enter <b>tx-ring-limit ?</b> on the command line. The key determinants are the memory needed to support the queues and the memory available on the device.<br><br>The <b>tx-ring-limit</b> that you specify affects both the higher priority low-latency queue and the best-effort queue. |

## Examples

The following example establishes a priority queue on interface “outside” (the GigabitEthernet0/1 interface), with the default queue-limit and tx-ring-limit:

```
hostname(config)# priority-queue outside
```

The following example establishes a priority queue on the interface “outside” (the GigabitEthernet0/1 interface), sets the queue-limit to 260 packets, and sets the tx-ring-limit to 3:

```
hostname(config)# priority-queue outside
hostname(config-priority-queue)# queue-limit 260
hostname(config-priority-queue)# tx-ring-limit 3
```

## Configuring a Service Rule for Standard Priority Queuing and Policing

You can configure standard priority queuing and policing for different class maps within the same policy map. See the [“How QoS Features Interact”](#) section on page 54-4 for information about valid QoS configurations.

To create a policy map, perform the following steps.

### Restrictions

- You cannot use the **class-default** class map for priority traffic.
- You cannot configure traffic shaping and standard priority queuing for the same interface; only hierarchical priority queuing is allowed.
- (ASASM) The ASASM only supports policing.

### Guidelines

- For priority traffic, identify only latency-sensitive traffic.
- For policing traffic, you can choose to police all other traffic, or you can limit the traffic to certain types.

### Detailed Steps

|        | Command                                                                                                            | Purpose                                                                                                                                                  |
|--------|--------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------|
| Step 1 | <code>class-map policing_map_name</code><br><br><b>Example:</b><br>hostname(config)# class-map<br>policing_traffic | For policing traffic, creates a class map to identify the traffic for which you want to perform policing.                                                |
| Step 2 | <code>match parameter</code><br><br><b>Example:</b><br>hostname(config-cmap)# match access-list<br>policing        | Specifies the traffic in the class map. See the <a href="#">“Identifying Traffic (Layer 3/4 Class Maps)”</a> section on page 32-12 for more information. |
| Step 3 | <code>class-map priority_map_name</code><br><br><b>Example:</b><br>hostname(config)# class-map<br>priority_traffic | For priority traffic, creates a class map to identify the traffic for which you want to perform priority queuing.                                        |
| Step 4 | <code>match parameter</code><br><br><b>Example:</b><br>hostname(config-cmap)# match access-list<br>priority        | Specifies the traffic in the class map. See the <a href="#">“Identifying Traffic (Layer 3/4 Class Maps)”</a> section on page 32-12 for more information. |
| Step 5 | <code>policy-map name</code><br><br><b>Example:</b><br>hostname(config)# policy-map QoS_policy                     | Adds or edits a policy map.                                                                                                                              |

|         | Command                                                                                                                                                                                                                                                                                                 | Purpose                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|---------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Step 6  | <p><b>class</b> <i>policing_map_name</i></p> <p><b>Example:</b><br/> <pre>hostname(config-pmap)# class policing_class</pre></p>                                                                                                                                                                         | Identifies the class map you created for policed traffic in <a href="#">Step 1</a> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| Step 7  | <p><b>police</b> {<b>output</b>   <b>input</b>} <i>conform-rate</i> [<i>conform-burst</i>] [<b>conform-action</b> [<b>drop</b>   <b>transmit</b>]] [<b>exceed-action</b> [<b>drop</b>   <b>transmit</b>]]</p> <p><b>Example:</b><br/> <pre>hostname(config-pmap-c)# police output 56000 10500</pre></p> | <p>Configures policing for the class. See the following options:</p> <ul style="list-style-type: none"> <li>• <i>conform-burst argument</i>—Specifies the maximum number of instantaneous bytes allowed in a sustained burst before throttling to the conforming rate value, between 1000 and 512000000 bytes.</li> <li>• <b>conform-action</b>—Sets the action to take when the rate is less than the <i>conform_burst</i> value.</li> <li>• <i>conform-rate</i>—Sets the rate limit for this traffic flow; between 8000 and 2000000000 bits per second.]</li> <li>• <b>drop</b>—Drops the packet.</li> <li>• <b>exceed-action</b>—Sets the action to take when the rate is between the <i>conform-rate</i> value and the <i>conform-burst</i> value.</li> <li>• <b>input</b>—Enables policing of traffic flowing in the input direction.</li> <li>• <b>output</b>—Enables policing of traffic flowing in the output direction.</li> <li>• <b>transmit</b>—Transmits the packet.</li> </ul> |
| Step 8  | <p><b>class</b> <i>priority_map_name</i></p> <p><b>Example:</b><br/> <pre>hostname(config-pmap)# class priority_class</pre></p>                                                                                                                                                                         | Identifies the class map you created for prioritized traffic in <a href="#">Step 3</a> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| Step 9  | <p><b>priority</b></p> <p><b>Example:</b><br/> <pre>hostname(config-pmap-c)# priority</pre></p>                                                                                                                                                                                                         | Configures priority queuing for the class.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| Step 10 | <p><b>service-policy</b> <i>polycymap_name</i> {<b>global</b>   <b>interface</b> <i>interface_name</i>}</p> <p><b>Example:</b><br/> <pre>hostname(config)# service-policy QoS_policy interface inside</pre></p>                                                                                         | Activates the policy map on one or more interfaces. <b>global</b> applies the policy map to all interfaces, and <b>interface</b> applies the policy to one interface. Only one global policy is allowed. You can override the global policy on an interface by applying a service policy to that interface. You can only apply one policy map to each interface.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |

## Examples

### Example 54-1 Class Map Examples for VPN Traffic

In the following example, the **class-map** command classifies all non-tunneled TCP traffic, using an access list named `tcp_traffic`:

```
hostname(config)# access-list tcp_traffic permit tcp any any
```

```
hostname(config)# class-map tcp_traffic
hostname(config-cmap)# match access-list tcp_traffic
```

In the following example, other, more specific match criteria are used for classifying traffic for specific, security-related tunnel groups. These specific match criteria stipulate that a match on tunnel-group (in this case, the previously-defined Tunnel-Group-1) is required as the first match characteristic to classify traffic for a specific tunnel, and it allows for an additional match line to classify the traffic (IP differential services code point, expedited forwarding).

```
hostname(config)# class-map TG1-voice
hostname(config-cmap)# match tunnel-group tunnel-grp1
hostname(config-cmap)# match dscp ef
```

In the following example, the **class-map** command classifies both tunneled and non-tunneled traffic according to the traffic type:

```
hostname(config)# access-list tunneled extended permit ip 10.10.34.0 255.255.255.0
192.168.10.0 255.255.255.0
hostname(config)# access-list non-tunneled extended permit tcp any any
hostname(config)# tunnel-group tunnel-grp1 type IPsec_L2L

hostname(config)# class-map browse
hostname(config-cmap)# description "This class-map matches all non-tunneled tcp traffic."
hostname(config-cmap)# match access-list non-tunneled

hostname(config-cmap)# class-map TG1-voice
hostname(config-cmap)# description "This class-map matches all dscp ef traffic for
tunnel-grp 1."
hostname(config-cmap)# match dscp ef
hostname(config-cmap)# match tunnel-group tunnel-grp1

hostname(config-cmap)# class-map TG1-BestEffort
hostname(config-cmap)# description "This class-map matches all best-effort traffic for
tunnel-grp1."
hostname(config-cmap)# match tunnel-group tunnel-grp1
hostname(config-cmap)# match flow ip destination-address
```

The following example shows a way of policing a flow within a tunnel, provided the classed traffic is not specified as a tunnel, but does go *through* the tunnel. In this example, 192.168.10.10 is the address of the host machine on the private side of the remote tunnel, and the access list is named “host-over-l2l”. By creating a class-map (named “host-specific”), you can then police the “host-specific” class before the LAN-to-LAN connection polices the tunnel. In this example, the “host-specific” traffic is rate-limited before the tunnel, then the tunnel is rate-limited:

```
hostname(config)# access-list host-over-l2l extended permit ip any host 192.168.10.10
hostname(config)# class-map host-specific
hostname(config-cmap)# match access-list host-over-l2l
```

The following example builds on the configuration developed in the previous section. As in the previous example, there are two named class-maps: tcp\_traffic and TG1-voice.

```
hostname(config)# class-map TG1-best-effort
hostname(config-cmap)# match tunnel-group Tunnel-Group-1
hostname(config-cmap)# match flow ip destination-address
```

Adding a third class map provides a basis for defining a tunneled and non-tunneled QoS policy, as follows, which creates a simple QoS policy for tunneled and non-tunneled traffic, assigning packets of the class TG1-voice to the low latency queue and setting rate limits on the tcp\_traffic and TG1-best-effort traffic flows.

### Example 54-2 Priority and Policing Example

In this example, the maximum rate for traffic of the tcp\_traffic class is 56,000 bits/second and a maximum burst size of 10,500 bytes per second. For the TG1-BestEffort class, the maximum rate is 200,000 bits/second, with a maximum burst of 37,500 bytes/second. Traffic in the TG1-voice class has no policed maximum speed or burst rate because it belongs to a priority class.

```
hostname(config)# access-list tcp_traffic permit tcp any any
hostname(config)# class-map tcp_traffic
hostname(config-cmap)# match access-list tcp_traffic

hostname(config)# class-map TG1-voice
hostname(config-cmap)# match tunnel-group tunnel-grp1
hostname(config-cmap)# match dscp ef

hostname(config-cmap)# class-map TG1-BestEffort
hostname(config-cmap)# match tunnel-group tunnel-grp1
hostname(config-cmap)# match flow ip destination-address

hostname(config)# policy-map qos
hostname(config-pmap)# class tcp_traffic
hostname(config-pmap-c)# police output 56000 10500

hostname(config-pmap-c)# class TG1-voice
hostname(config-pmap-c)# priority

hostname(config-pmap-c)# class TG1-best-effort
hostname(config-pmap-c)# police output 200000 37500

hostname(config-pmap-c)# class class-default
hostname(config-pmap-c)# police output 1000000 37500

hostname(config-pmap-c)# service-policy qos global
```

## Configuring a Service Rule for Traffic Shaping and Hierarchical Priority Queuing

You can configure traffic shaping for all traffic on an interface, and optionally hierarchical priority queuing for a subset of latency-sensitive traffic.

This section includes the following topics:

- [\(Optional\) Configuring the Hierarchical Priority Queuing Policy, page 54-12](#)
- [Configuring the Service Rule, page 54-13](#)

### (Optional) Configuring the Hierarchical Priority Queuing Policy

You can optionally configure priority queuing for a subset of latency-sensitive traffic.

#### Guidelines

- One side-effect of priority queuing is packet re-ordering. For IPsec packets, out-of-order packets that are not within the anti-replay window generate warning syslog messages. These warnings are false alarms in the case of priority queuing. You can configure the IPsec anti-replay window size to avoid possible false alarms. See the **crypto ipsec security-association replay** command in the command reference. For hierarchical priority queuing, you do not need to create a priority queue on an interface.

## Restrictions

- For hierarchical priority queuing, for encrypted VPN traffic, you can only match traffic based on the DSCP or precedence setting; you cannot match a tunnel group.
- For hierarchical priority queuing, IPsec-over-TCP traffic is not supported.

## Detailed Steps

|        | Command                                                                                                                  | Purpose                                                                                                                                                                                                                                                                                  |
|--------|--------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Step 1 | <b>class-map</b> <i>priority_map_name</i><br><br><b>Example:</b><br>hostname(config)# class-map<br>priority_traffic      | For hierarchical priority queuing, creates a class map to identify the traffic for which you want to perform priority queuing.                                                                                                                                                           |
| Step 2 | <b>match</b> <i>parameter</i><br><br><b>Example:</b><br>hostname(config-cmap)# match access-list<br>priority             | Specifies the traffic in the class map. See the <a href="#">“Identifying Traffic (Layer 3/4 Class Maps)”</a> section on page 32-12 for more information. For encrypted VPN traffic, you can only match traffic based on the DSCP or precedence setting; you cannot match a tunnel group. |
| Step 3 | <b>policy-map</b> <i>priority_map_name</i><br><br><b>Example:</b><br>hostname(config)# policy-map<br>priority-sub-policy | Creates a policy map.                                                                                                                                                                                                                                                                    |
| Step 4 | <b>class</b> <i>priority_map_name</i><br><br><b>Example:</b><br>hostname(config-pmap)# class<br>priority-sub-map         | Specifies the class map you created in <a href="#">Step 1</a> .                                                                                                                                                                                                                          |
| Step 5 | <b>priority</b><br><br><b>Example:</b><br>hostname(config-pmap-c)# priority                                              | Applies the priority queuing action to a class map.<br><br><b>Note</b> This policy has not yet been activated. You must activate it as part of the shaping policy. See the <a href="#">“Configuring the Service Rule”</a> section on page 54-13.                                         |

## Configuring the Service Rule

To configure traffic shaping and optional hierarchical priority queuing, perform the following steps.

### Restrictions

- Traffic shaping is not supported on the multi-processor models.
- For traffic shaping, you can only use the **class-default** class map, which is automatically created by the ASA, and which matches all traffic.
- You cannot configure traffic shaping and standard priority queuing for the same interface; only hierarchical priority queuing is allowed. See the [“How QoS Features Interact”](#) section on page 54-4 for information about valid QoS configurations.
- You cannot configure traffic shaping in the global policy.

## Detailed Steps

|        | Command                                                                                                                                                                           | Purpose                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|--------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Step 1 | <b>policy-map</b> <i>name</i><br><br><b>Example:</b><br>hostname(config)# policy-map shape_policy                                                                                 | Adds or edits a policy map. This policy map must be different from the hierarchical priority-queuing map.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| Step 2 | <b>class class-default</b><br><br><b>Example:</b><br>hostname(config-pmap)# class class-default                                                                                   | Identifies all traffic for traffic shaping; you can only use the <b>class-default</b> class map, which is defined as <b>match any</b> , because the ASA requires all traffic to be matched for traffic shaping.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| Step 3 | <b>shape average rate</b> [ <i>burst_size</i> ]<br><br><b>Example:</b><br>hostname(config-pmap-c)# shape average<br>70000 4000                                                    | Enables traffic shaping, where the <b>average rate</b> argument sets the average rate of traffic in bits per second over a given fixed time period, between 64000 and 154400000. Specify a value that is a multiple of 8000. See the <a href="#">“Information About Traffic Shaping” section on page 54-4</a> for more information about how the time period is calculated.<br><br>The <i>burst_size</i> argument sets the average burst size in bits that can be transmitted over a given fixed time period, between 2048 and 154400000. Specify a value that is a multiple of 128. If you do not specify the <i>burst_size</i> , the default value is equivalent to 4-milliseconds of traffic at the specified average rate. For example, if the average rate is 1000000 bits per second, 4 ms worth = $1000000 * 4/1000 = 4000$ . |
| Step 4 | (Optional)<br><br><b>service-policy</b> <i>priority_policy_map_name</i><br><br><b>Example:</b><br>hostname(config-pmap-c)# <b>service-policy</b><br><b>priority-sub-policy</b>    | Configures hierarchical priority queuing, where the <i>priority_policy_map_name</i> is the policy map you created for prioritized traffic in the <a href="#">“(Optional) Configuring the Hierarchical Priority Queuing Policy” section on page 54-12</a> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| Step 5 | <b>service-policy</b> <i>polycymap_name</i> <b>interface</b><br><i>interface_name</i><br><br><b>Example:</b><br>hostname(config)# service-policy<br>shape-policy interface inside | Activates the shaping policy map on an interface.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |

## Examples

The following example enables traffic shaping on the outside interface, and limits traffic to 2 Mbps; priority queuing is enabled for VoIP traffic that is tagged with DSCP EF and AF13 and for IKE traffic:

```
hostname(config)# access-list ike permit udp any any eq 500
hostname(config)# class-map ike
hostname(config-cmap)# match access-list ike

hostname(config-cmap)# class-map voice_traffic
hostname(config-cmap)# match dscp EF AF13

hostname(config-cmap)# policy-map qos_class_policy
```

```
hostname(config-pmap) # class voice_traffic
hostname(config-pmap-c) # priority
hostname(config-pmap-c) # class ike
hostname(config-pmap-c) # priority

hostname(config-pmap-c) # policy-map qos_outside_policy
hostname(config-pmap) # class class-default
hostname(config-pmap-c) # shape average 2000000 16000
hostname(config-pmap-c) # service-policy qos_class_policy

hostname(config-pmap-c) # service-policy qos_outside_policy interface outside
```

## Monitoring QoS

This section includes the following topics:

- [Viewing QoS Police Statistics, page 54-15](#)
- [Viewing QoS Standard Priority Statistics, page 54-16](#)
- [Viewing QoS Shaping Statistics, page 54-16](#)
- [Viewing QoS Standard Priority Queue Statistics, page 54-17](#)

## Viewing QoS Police Statistics

To view the QoS statistics for traffic policing, use the **show service-policy** command with the **police** keyword:

```
hostname# show service-policy police
```

The following is sample output for the **show service-policy police** command:

```
hostname# show service-policy police

Global policy:
 Service-policy: global_fw_policy

Interface outside:
 Service-policy: qos
 Class-map: browse
 police Interface outside:
 cir 56000 bps, bc 10500 bytes
 conformed 10065 packets, 12621510 bytes; actions: transmit
 exceeded 499 packets, 625146 bytes; actions: drop
 conformed 5600 bps, exceed 5016 bps
 Class-map: cmap2
 police Interface outside:
 cir 200000 bps, bc 37500 bytes
 conformed 17179 packets, 20614800 bytes; actions: transmit
 exceeded 617 packets, 770718 bytes; actions: drop
 conformed 198785 bps, exceed 2303 bps
```

## Viewing QoS Standard Priority Statistics

To view statistics for service policies implementing the **priority** command, use the **show service-policy** command with the **priority** keyword:

```
hostname# show service-policy priority
```

The following is sample output for the **show service-policy priority** command:

```
hostname# show service-policy priority
Global policy:
 Service-policy: global_fw_policy
Interface outside:
 Service-policy: qos
 Class-map: TG1-voice
 Priority:
 Interface outside: aggregate drop 0, aggregate transmit 9383
```



### Note

“Aggregate drop” denotes the aggregated drop in this interface; “aggregate transmit” denotes the aggregated number of transmitted packets in this interface.

## Viewing QoS Shaping Statistics

To view statistics for service policies implementing the **shape** command, use the **show service-policy** command with the **shape** keyword:

```
hostname# show service-policy shape
```

The following is sample output for the **show service-policy shape** command:

```
hostname# show service-policy shape
Interface outside
 Service-policy: shape
 Class-map: class-default

 Queueing
 queue limit 64 packets
 (queue depth/total drops/no-buffer drops) 0/0/0
 (pkts output/bytes output) 0/0

 shape (average) cir 2000000, bc 8000, be 8000
```

The following is sample output of the **show service policy shape** command, which includes service policies that include the **shape** command and the **service-policy** command that calls the hierarchical priority policy and the related statistics:

```
hostname# show service-policy shape

Interface outside:
 Service-policy: shape
 Class-map: class-default

 Queueing
 queue limit 64 packets
 (queue depth/total drops/no-buffer drops) 0/0/0
 (pkts output/bytes output) 0/0

 shape (average) cir 2000000, bc 16000, be 16000
```

```
Service-policy: voip
Class-map: voip

 Queueing
 queue limit 64 packets
 (queue depth/total drops/no-buffer drops) 0/0/0
 (pkts output/bytes output) 0/0
Class-map: class-default

 queue limit 64 packets
 (queue depth/total drops/no-buffer drops) 0/0/0
 (pkts output/bytes output) 0/0
```

## Viewing QoS Standard Priority Queue Statistics

To display the priority-queue statistics for an interface, use the **show priority-queue statistics** command in privileged EXEC mode. The results show the statistics for both the best-effort (BE) queue and the low-latency queue (LLQ). The following example shows the use of the **show priority-queue statistics** command for the interface named test, and the command output.

```
hostname# show priority-queue statistics test
```

```
Priority-Queue Statistics interface test
```

```
Queue Type = BE
Packets Dropped = 0
Packets Transmit = 0
Packets Enqueued = 0
Current Q Length = 0
Max Q Length = 0
```

```
Queue Type = LLQ
Packets Dropped = 0
Packets Transmit = 0
Packets Enqueued = 0
Current Q Length = 0
Max Q Length = 0
hostname#
```

In this statistical report, the meaning of the line items is as follows:

- “Packets Dropped” denotes the overall number of packets that have been dropped in this queue.
- “Packets Transmit” denotes the overall number of packets that have been transmitted in this queue.
- “Packets Enqueued” denotes the overall number of packets that have been queued in this queue.
- “Current Q Length” denotes the current depth of this queue.
- “Max Q Length” denotes the maximum depth that ever occurred in this queue.

# Feature History for QoS

Table 54-3 lists each feature change and the platform release in which it was implemented.

**Table 54-3** Feature History for QoS

| Feature Name                                                                 | Platform Releases | Feature Information                                                                                                                                                                                                                                                                                                                                                                                   |
|------------------------------------------------------------------------------|-------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Priority queuing and policing                                                | 7.0(1)            | We introduced QoS priority queuing and policing.<br>We introduced the following commands: <b>priority-queue</b> , <b>queue-limit</b> , <b>tx-ring-limit</b> , <b>priority</b> , <b>police</b> , <b>show priority-queue statistics</b> , <b>show service-policy police</b> , <b>show service-policy priority</b> , <b>show running-config priority-queue</b> , <b>clear configure priority-queue</b> . |
| Shaping and hierarchical priority queuing                                    | 7.2(4)/8.0(4)     | We introduced QoS shaping and hierarchical priority queuing.<br>We introduced the following commands: <b>shape</b> , <b>show service-policy shape</b> .                                                                                                                                                                                                                                               |
| Ten Gigabit Ethernet support for a standard priority queue on the ASA 5585-X | 8.2(3)/8.4(1)     | We added support for a standard priority queue on Ten Gigabit Ethernet interfaces for the ASA 5585-X.                                                                                                                                                                                                                                                                                                 |



## **PART 13**

# **Configuring Advanced Network Protection**





## CHAPTER 55

# Configuring the Botnet Traffic Filter

---

Malware is malicious software that is installed on an unknowing host. Malware that attempts network activity such as sending private data (passwords, credit card numbers, key strokes, or proprietary data) can be detected by the Botnet Traffic Filter when the malware starts a connection to a known bad IP address. The Botnet Traffic Filter checks incoming and outgoing connections against a dynamic database of known bad domain names and IP addresses (the *blacklist*), and then logs or blocks any suspicious activity.

You can also supplement the Cisco dynamic database with blacklisted addresses of your choosing by adding them to a static blacklist; if the dynamic database includes blacklisted addresses that you think should not be blacklisted, you can manually enter them into a static *whitelist*. Whitelisted addresses still generate syslog messages, but because you are only targeting blacklist syslog messages, they are informational.



### Note

---

If you do not want to use the Cisco dynamic database at all, because of internal requirements, you can use the static blacklist alone if you can identify all the malware sites that you want to target.

---

This chapter describes how to configure the Botnet Traffic Filter and includes the following sections:

- [Information About the Botnet Traffic Filter, page 55-1](#)
- [Licensing Requirements for the Botnet Traffic Filter, page 55-6](#)
- [Guidelines and Limitations, page 55-6](#)
- [Default Settings, page 55-6](#)
- [Configuring the Botnet Traffic Filter, page 55-6](#)
- [Monitoring the Botnet Traffic Filter, page 55-17](#)
- [Configuration Examples for the Botnet Traffic Filter, page 55-19](#)
- [Where to Go Next, page 55-21](#)
- [Feature History for the Botnet Traffic Filter, page 55-22](#)

## Information About the Botnet Traffic Filter

This section includes information about the Botnet Traffic Filter and includes the following topics:

- [Botnet Traffic Filter Address Types, page 55-2](#)
- [Botnet Traffic Filter Actions for Known Addresses, page 55-2](#)

- [Botnet Traffic Filter Databases, page 55-2](#)
- [How the Botnet Traffic Filter Works, page 55-5](#)

## Botnet Traffic Filter Address Types

Addresses monitored by the Botnet Traffic Filter include:

- **Known malware addresses**—These addresses are on the blacklist identified by the dynamic database and the static blacklist.
- **Known allowed addresses**—These addresses are on the whitelist. The whitelist is useful when an address is blacklisted by the dynamic database and also identified by the static whitelist.
- **Ambiguous addresses**—These addresses are associated with multiple domain names, but not all of these domain names are on the blacklist. These addresses are on the *greylist*.
- **Unlisted addresses**—These addresses are unknown, and not included on any list.

## Botnet Traffic Filter Actions for Known Addresses

You can configure the Botnet Traffic Filter to log suspicious activity, and you can optionally configure it to block suspicious traffic automatically.

Unlisted addresses do not generate any syslog messages, but addresses on the blacklist, whitelist, and greylist generate syslog messages differentiated by type. See the [“Botnet Traffic Filter Syslog Messaging” section on page 55-17](#) for more information.

## Botnet Traffic Filter Databases

The Botnet Traffic Filter uses two databases for known addresses. You can use both databases together, or you can disable use of the dynamic database and use the static database alone. This section includes the following topics:

- [Information About the Dynamic Database, page 55-2](#)
- [Information About the Static Database, page 55-3](#)
- [Information About the DNS Reverse Lookup Cache and DNS Host Cache, page 55-4](#)

### Information About the Dynamic Database

The Botnet Traffic Filter can receive periodic updates for the dynamic database from the Cisco update server. This database lists thousands of known bad domain names and IP addresses.

#### How the ASA Uses the Dynamic Database

The ASA uses the dynamic database as follows:

1. When the domain name in a DNS reply matches a name in the dynamic database, the Botnet Traffic Filter adds the name and IP address to the *DNS reverse lookup cache*.
2. When the infected host starts a connection to the IP address of the malware site, then the ASA sends a syslog message informing you of the suspicious activity and optionally drops the traffic if you configured the ASA to do so.

3. In some cases, the IP address itself is supplied in the dynamic database, and the Botnet Traffic Filter logs or drops any traffic to that IP address without having to inspect DNS requests.

## Database Files

The database files are stored in running memory; they are not stored in flash memory. If you need to delete the database, use the **dynamic-filter database purge** command instead. Be sure to first disable use of the database by entering the **no dynamic-filter use-database** command.



### Note

To use the database, be sure to configure a domain name server for the ASA so that it can access the URL.

To use the domain names in the dynamic database, you need to enable DNS packet inspection with Botnet Traffic Filter snooping; the ASA looks inside the DNS packets for the domain name and associated IP address.

## Database Traffic Types

The dynamic database includes the following types of addresses:

- Ads—Advertising networks that deliver banner ads, interstitials, rich media ads, pop-ups, and pop-unders for websites, spyware and adware. Some of these networks send ad-oriented HTML emails and email verification services.
- Data Tracking—Sources associated with companies and websites that offer data tracking and metrics services to websites and other online entities. Some of these also run small advertising networks.
- Spyware—Sources that distribute spyware, adware, greyware, and other potentially unwanted advertising software. Some of these also run exploits to install such software.
- Malware (higher threat level)—Sources that use various exploits to deliver adware, spyware and other malware to victim computers. Some of these are associated with rogue online vendors and distributors of dialers which deceptively call premium-rate phone numbers.
- Malware (lower threat level)—Sources that deliver deceptive or malicious anti-spyware, anti-malware, registry cleaning, and system cleaning software.
- Adult—Sources associated with adult networks/services offering web hosting for adult content, advertising, content aggregation, registration and billing, and age verification. These may be tied to distribution of adware, spyware, and dialers.
- Bot and Threat Networks—Rogue systems that control infected computers. They are either systems hosted on threat networks or systems that are part of the botnet itself."
- (Conficker) Bot and Threat Networks—Command-and-control servers or botnet-masters of conficker botnets.
- (ZeusBotnet) Bot and Threat Networks—Command-and-control servers or botnet-masters of Zeus botnets.

## Information About the Static Database

You can manually enter domain names or IP addresses (host or subnet) that you want to tag as bad names in a blacklist. Static blacklist entries are always designated with a Very High threat level. You can also enter names or IP addresses in a whitelist, so that names or addresses that appear on both the *dynamic*

blacklist and the whitelist are identified only as whitelist addresses in syslog messages and reports. Note that you see syslog messages for whitelisted addresses even if the address is not also in the dynamic blacklist.

When you add a domain name to the static database, the ASA waits 1 minute, and then sends a DNS request for that domain name and adds the domain name/IP address pairing to the *DNS host cache*. (This action is a background process, and does not affect your ability to continue configuring the ASA). We recommend also enabling DNS packet inspection with Botnet Traffic Filter snooping. The ASA uses Botnet Traffic Filter snooping instead of the regular DNS lookup to resolve static blacklist domain names in the following circumstances:

- The ASA DNS server is unavailable.
- A connection is initiated during the 1 minute waiting period before the ASA sends the regular DNS request.

If DNS snooping is used, when an infected host sends a DNS request for a name on the static database, the ASA looks inside the DNS packets for the domain name and associated IP address and adds the name and IP address to the DNS reverse lookup cache.

If you do not enable Botnet Traffic Filter snooping, and one of the above circumstances occurs, then that traffic will not be monitored by the Botnet Traffic Filter.

## Information About the DNS Reverse Lookup Cache and DNS Host Cache

When you use the dynamic database with DNS snooping, entries are added to the DNS reverse lookup cache. If you use the static database, entries are added to the DNS host cache (see the [“Information About the Static Database”](#) section on page 55-3 about using the static database with DNS snooping and the DNS reverse lookup cache).

Entries in the DNS reverse lookup cache and the DNS host cache have a time to live (TTL) value provided by the DNS server. The largest TTL value allowed is 1 day (24 hours); if the DNS server provides a larger TTL, it is truncated to 1 day maximum.

For the DNS reverse lookup cache, after an entry times out, the ASA renews the entry when an infected host initiates a connection to a known address, and DNS snooping occurs.

For the DNS host cache, after an entry times out, the ASA periodically requests a refresh for the entry.

For the DNS host cache, the maximum number of blacklist entries and whitelist entries is 1000 each.

[Table 55-1](#) lists the maximum number of entries in the DNS reverse lookup cache per model.


**Table 55-1** DNS Reverse Lookup Cache Entries per Model

| ASA Model | Maximum Entries |
|-----------|-----------------|
| ASA 5505  | 5000            |
| ASA 5510  | 10,000          |
| ASA 5520  | 20,000          |
| ASA 5540  | 40,000          |
| ASA 5550  | 40,000          |
| ASA 5580  | 100,000         |

# How the Botnet Traffic Filter Works

Figure 55-1 shows how the Botnet Traffic Filter works with the dynamic database plus DNS inspection with Botnet Traffic Filter snooping.


**Figure 55-1** How the Botnet Traffic Filter Works with the Dynamic Database

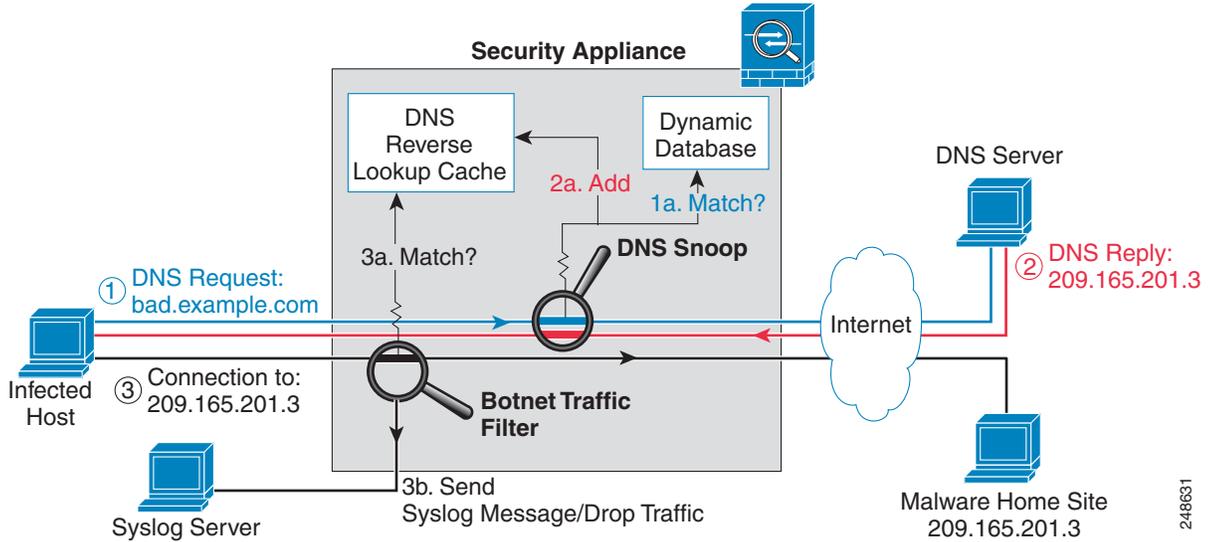

248631

Figure 55-2 shows how the Botnet Traffic Filter works with the static database.

**Figure 55-2** How the Botnet Traffic Filter Works with the Static Database

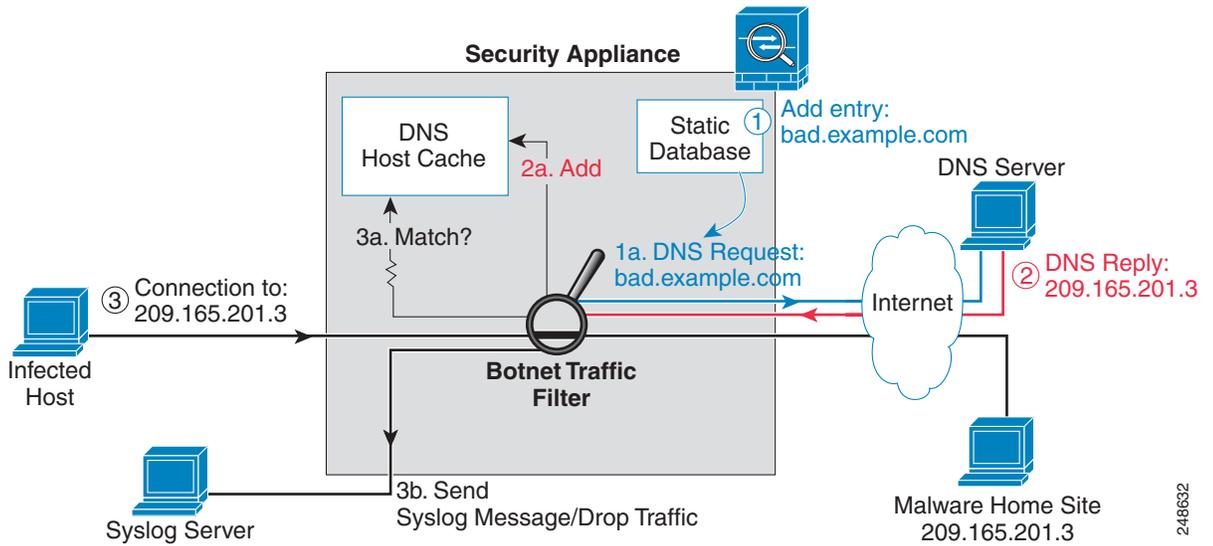

248632

# Licensing Requirements for the Botnet Traffic Filter

The following table shows the licensing requirements for this feature:

| Model      | License Requirement                                                                                                                                                                                          |
|------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| All models | <p>You need the following licenses:</p> <ul style="list-style-type: none"> <li>• Botnet Traffic Filter License.</li> <li>• Strong Encryption (3DES/AES) License to download the dynamic database.</li> </ul> |

## Guidelines and Limitations

This section includes the guidelines and limitations for this feature.

### Context Mode Guidelines

Supported in single and multiple context mode.

### Firewall Mode Guidelines

Supported in routed and transparent firewall mode.

### Failover Guidelines

Does not support replication of the DNS reverse lookup cache, DNS host cache, or the dynamic database in Stateful Failover.

### IPv6 Guidelines

Does not support IPv6.

### Additional Guidelines and Limitations

- TCP DNS traffic is not supported.
- You can add up to 1000 blacklist entries and 1000 whitelist entries in the static database.

## Default Settings

By default, the Botnet Traffic Filter is disabled, as is use of the dynamic database.

For DNS inspection, which is enabled by default, Botnet Traffic Filter snooping is disabled by default.

## Configuring the Botnet Traffic Filter

This section includes the following topics:

- [Task Flow for Configuring the Botnet Traffic Filter, page 55-7](#)
- [Configuring the Dynamic Database, page 55-7](#)

- [Enabling DNS Snooping, page 55-10](#)
- [Adding Entries to the Static Database, page 55-9](#)
- [Enabling Traffic Classification and Actions for the Botnet Traffic Filter, page 55-12](#)
- [Blocking Botnet Traffic Manually, page 55-15](#)
- [Searching the Dynamic Database, page 55-16](#)

## Task Flow for Configuring the Botnet Traffic Filter

To configure the Botnet Traffic Filter, perform the following steps:

- 
- Step 1** Enable use of the dynamic database. See the [“Configuring the Dynamic Database” section on page 55-7](#). This procedure enables database updates from the Cisco update server, and also enables use of the downloaded dynamic database by the ASA. Disallowing use of the downloaded database is useful in multiple context mode so you can configure use of the database on a per-context basis.
- Step 2** (Optional) Add static entries to the database. See the [“Adding Entries to the Static Database” section on page 55-9](#). This procedure lets you augment the dynamic database with domain names or IP addresses that you want to blacklist or whitelist. You might want to use the static database instead of the dynamic database if you do not want to download the dynamic database over the Internet.
- Step 3** Enable DNS snooping. See the [“Enabling DNS Snooping” section on page 55-10](#). This procedure enables inspection of DNS packets, compares the domain name with those in the dynamic database or the static database (when a DNS server for the ASA is unavailable), and adds the name and IP address to the DNS reverse lookup cache. This cache is then used by the Botnet Traffic Filter when connections are made to the suspicious address.
- Step 4** Enable traffic classification and actions for the Botnet Traffic Filter. See the [“Enabling Traffic Classification and Actions for the Botnet Traffic Filter” section on page 55-12](#). This procedure enables the Botnet Traffic Filter, which compares the source and destination IP address in each initial connection packet to the IP addresses in the dynamic database, static database, DNS reverse lookup cache, and DNS host cache, and sends a syslog message or drops any matching traffic.
- Step 5** (Optional) Block traffic manually based on syslog message information. See the [“Blocking Botnet Traffic Manually” section on page 55-15](#). If you choose not to block malware traffic automatically, you can block traffic manually by configuring an access list to deny traffic, or by using the **shun** command to block all traffic to and from a host.
- 

## Configuring the Dynamic Database

This procedure enables database updates, and also enables use of the downloaded dynamic database by the ASA. Disabling use of the downloaded database is useful in multiple context mode so you can configure use of the database on a per-context basis.

By default, downloading and using the dynamic database is disabled.

## Prerequisites

Enable ASA use of a DNS server according to the [“Configuring the DNS Server”](#) section on page 10-11.

## Detailed Steps

|        | Command                                                                                                                                            | Purpose                                                                                                                                                                                                                                                                                                                                                                              |
|--------|----------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Step 1 | <b>dynamic-filter updater-client enable</b><br><br><b>Example:</b><br>hostname(config)# dynamic-filter<br>updater-client enable                    | Enables downloading of the dynamic database from the Cisco update server. In multiple context mode, enter this command in the system execution space. If you do not have a database already installed on the ASA, it downloads the database after approximately 2 minutes. The update server determines how often the ASA polls the server for future updates, typically every hour. |
| Step 2 | (Multiple context mode only)<br><b>changeto context context_name</b><br><br><b>Example:</b><br>hostname# changeto context admin<br>hostname/admin# | Changes to the context so that you can configure use of the database on a per-context basis.                                                                                                                                                                                                                                                                                         |
| Step 3 | <b>dynamic-filter use-database</b><br><br><b>Example:</b><br>hostname(config)# dynamic-filter<br>use-database                                      | Enables use of the dynamic database. In multiple context mode, enter this command in the context execution space.                                                                                                                                                                                                                                                                    |

## Examples

The following multiple mode example enables downloading of the dynamic database, and enables use of the database in context1 and context2:

```
hostname(config)# dynamic-filter updater-client enable
hostname(config)# changeto context context1
hostname/context1(config)# dynamic-filter use-database
hostname/context1(config)# changeto context context2
hostname/context2(config)# dynamic-filter use-database
```

The following single mode example enables downloading of the dynamic database, and enables use of the database:

```
hostname(config)# dynamic-filter updater-client enable
hostname(config)# dynamic-filter use-database
```

## What to Do Next

See the [“Adding Entries to the Static Database”](#) section on page 55-9.

## Adding Entries to the Static Database

The static database lets you augment the dynamic database with domain names or IP addresses that you want to blacklist or whitelist. Static blacklist entries are always designated with a Very High threat level. See the [“Information About the Static Database”](#) section on page 55-3 for more information.

### Prerequisites

- In multiple context mode, perform this procedure in the context execution space.
- Enable ASA use of a DNS server according to the [“Configuring the DNS Server”](#) section on page 10-11.

### Detailed Steps

|        | Command                                                                        | Purpose                                                                                                                                                        |
|--------|--------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Step 1 | <code>dynamic-filter blacklist</code>                                          | Edits the Botnet Traffic Filter blacklist.                                                                                                                     |
|        | <b>Example:</b><br>hostname(config)# dynamic-filter blacklist                  |                                                                                                                                                                |
| Step 2 | Enter one or both of the following:                                            |                                                                                                                                                                |
|        | <code>name domain_name</code>                                                  | Adds a name to the blacklist. You can enter this command multiple times for multiple entries. You can add up to 1000 blacklist entries.                        |
|        | <b>Example:</b><br>hostname(config-l1ist)# name bad.example.com                |                                                                                                                                                                |
|        | <code>address ip_address mask</code>                                           | Adds an IP address to the blacklist. You can enter this command multiple times for multiple entries. The <i>mask</i> can be for a single host or for a subnet. |
|        | <b>Example:</b><br>hostname(config-l1ist)# address 10.1.1.1<br>255.255.255.255 |                                                                                                                                                                |
| Step 3 | <code>dynamic-filter whitelist</code>                                          | Edits the Botnet Traffic Filter whitelist.                                                                                                                     |
|        | <b>Example:</b><br>hostname(config)# dynamic-filter whitelist                  |                                                                                                                                                                |
| Step 4 | Enter one or both of the following:                                            |                                                                                                                                                                |

| Command                                                                                                                     | Purpose                                                                                                                                                        |
|-----------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>name</b> <i>domain_name</i><br><br><b>Example:</b><br>hostname(config-l1ist)# name good.example.com                      | Adds a name to the whitelist. You can enter this command multiple times for multiple entries. You can add up to 1000 whitelist entries.                        |
| <b>address</b> <i>ip_address mask</i><br><br><b>Example:</b><br>hostname(config-l1ist)# address 10.1.1.2<br>255.255.255.255 | Adds an IP address to the whitelist. You can enter this command multiple times for multiple entries. The <i>mask</i> can be for a single host or for a subnet. |

## Examples

The following example creates entries for the blacklist and whitelist:

```
hostname(config)# dynamic-filter blacklist
hostname(config-l1ist)# name bad1.example.com
hostname(config-l1ist)# name bad2.example.com
hostname(config-l1ist)# address 10.1.1.1 255.255.255.0
hostname(config-l1ist)# dynamic-filter whitelist
hostname(config-l1ist)# name good.example.com
hostname(config-l1ist)# name great.example.com
hostname(config-l1ist)# name awesome.example.com
hostname(config-l1ist)# address 10.1.1.2 255.255.255.255
```

## What to Do Next

See the [“Enabling DNS Snooping”](#) section on page 55-10.

## Enabling DNS Snooping

This procedure enables inspection of DNS packets and enables Botnet Traffic Filter snooping, which compares the domain name with those on the dynamic database or static database, and adds the name and IP address to the Botnet Traffic Filter DNS reverse lookup cache. This cache is then used by the Botnet Traffic Filter when connections are made to the suspicious address.

The following procedure creates an interface-specific service policy for DNS inspection. See the [“DNS Inspection”](#) section on page 43-1 and [Chapter 32, “Configuring a Service Policy Using the Modular Policy Framework,”](#) for detailed information about configuring advanced DNS inspection options using the Modular Policy Framework.

## Prerequisites

In multiple context mode, perform this procedure in the context execution space.

## Restrictions

TCP DNS traffic is not supported.

## Default DNS Inspection Configuration and Recommended Configuration

The default configuration for DNS inspection inspects all UDP DNS traffic on all interfaces, and does not have DNS snooping enabled.

We suggest that you enable DNS snooping only on interfaces where external DNS requests are going. Enabling DNS snooping on all UDP DNS traffic, including that going to an internal DNS server, creates unnecessary load on the ASA.

For example, if the DNS server is on the outside interface, you should enable DNS inspection with snooping for all UDP DNS traffic on the outside interface. See the “[Examples](#)” section for the recommended commands for this configuration.

### Detailed Steps

|        | Command                                                                                                             | Purpose                                                                                                                                                                                                                                                                                                               |
|--------|---------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Step 1 | <b>class-map</b> <i>name</i><br><br><b>Example:</b><br>hostname(config)# class-map<br>dynamic-filter_snoop_class    | Creates a class map to identify the traffic for which you want to inspect DNS.                                                                                                                                                                                                                                        |
| Step 2 | <b>match</b> <i>parameters</i><br><br><b>Example:</b><br>hostname(config-cmap)# match port udp eq<br>domain         | Specifies traffic for the class map. See the “ <a href="#">Identifying Traffic (Layer 3/4 Class Maps)</a> ” section on page 32-12 for more information about available parameters. For example, you can specify an access list for DNS traffic to and from certain addresses, or you can specify all UDP DNS traffic. |
| Step 3 | <b>policy-map</b> <i>name</i><br><br><b>Example:</b><br>hostname(config)# policy-map<br>dynamic-filter_snoop_policy | Adds or edits a policy map so you can set the actions to take with the class map traffic.                                                                                                                                                                                                                             |
| Step 4 | <b>class</b> <i>name</i><br><br><b>Example:</b><br>hostname(config-pmap)# class<br>dynamic-filter_snoop_class       | Identifies the class map you created in <a href="#">Step 1</a> .                                                                                                                                                                                                                                                      |

|        | Command                                                                                                                                                                            | Purpose                                                                                                                                                                                                                                                                                                             |
|--------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Step 5 | <pre>inspect dns [map_name] dynamic-filter-snoop</pre> <p><b>Example:</b></p> <pre>hostname(config-pmap-c)# inspect dns preset_dns_map dynamic-filter-snoop</pre>                  | Enables DNS inspection with Botnet Traffic Filter snooping. To use the default DNS inspection policy map for the <i>map_name</i> , specify <b>preset_dns_map</b> for the map name. See the “ <a href="#">DNS Inspection</a> ” section on page 43-1 for more information about creating a DNS inspection policy map. |
| Step 6 | <pre>service-policy policymap_name interface interface_name</pre> <p><b>Example:</b></p> <pre>hostname(config)# service-policy dynamic-filter_snoop_policy interface outside</pre> | Activates the policy map on an interface. The interface-specific policy overrides the global policy. You can only apply one policy map to each interface.                                                                                                                                                           |

## Examples

The following recommended configuration creates a class map for all UDP DNS traffic, enables DNS inspection and Botnet Traffic Filter snooping with the default DNS inspection policy map, and applies it to the outside interface:

```
hostname(config)# class-map dynamic-filter_snoop_class
hostname(config-cmap)# match port udp eq domain
hostname(config-cmap)# policy-map dynamic-filter_snoop_policy
hostname(config-pmap)# class dynamic-filter_snoop_class
hostname(config-pmap-c)# inspect dns preset_dns_map dynamic-filter-snoop
hostname(config-pmap-c)# service-policy dynamic-filter_snoop_policy interface outside
```

## What to Do Next

See the “[Enabling Traffic Classification and Actions for the Botnet Traffic Filter](#)” section on page 55-12.

# Enabling Traffic Classification and Actions for the Botnet Traffic Filter

This procedure enables the Botnet Traffic Filter. The Botnet Traffic Filter compares the source and destination IP address in each initial connection packet to the following:

- Dynamic database IP addresses
- Static database IP addresses
- DNS reverse lookup cache (for dynamic database domain names)
- DNS host cache (for static database domain names)

When an address matches, the ASA sends a syslog message. The only additional action currently available is to drop the connection.

## Prerequisites

In multiple context mode, perform this procedure in the context execution space.

## Recommended Configuration

Although DNS snooping is not required, we recommend configuring DNS snooping for maximum use of the Botnet Traffic Filter (see the “[Enabling DNS Snooping](#)” section on page 55-10). Without DNS snooping for the dynamic database, the Botnet Traffic Filter uses only the static database entries, plus any IP addresses in the dynamic database; domain names in the dynamic database are not used.

We recommend enabling the Botnet Traffic Filter on all traffic on the Internet-facing interface, and enabling dropping of traffic with a severity of moderate and higher. See the “[Examples](#)” section for the recommended commands used for this configuration.

## Detailed Steps

|        | Command                                                                                                                                                                                                                                                                                                                                                                                             | Purpose                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|--------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Step 1 | <p>(Optional)</p> <pre>access-list access_list_name extended {deny   permit} protocol source_address mask [operator port] dest_address mask [operator port]</pre> <p><b>Example:</b></p> <pre>hostname(config)# access-list dynamic-filter_acl extended permit tcp any any eq 80 hostname(config)# access-list dynamic-filter_acl_subset extended permit tcp 10.1.1.0 255.255.255.0 any eq 80</pre> | <p>Identifies the traffic that you want to monitor or drop. If you do not create an access list for monitoring, by default you monitor all traffic. You can optionally use an access list to identify a subset of monitored traffic that you want to drop; be sure the access list is a subset of the monitoring access list. See <a href="#">Chapter 15, “Adding an Extended Access List,”</a> for more information about creating an access list.</p>                                                                                                                                                                                                                                            |
| Step 2 | <pre>dynamic-filter enable [interface name] [classify-list access_list]</pre> <p><b>Example:</b></p> <pre>hostname(config)# dynamic-filter enable interface outside classify-list dynamic-filter_acl</pre>                                                                                                                                                                                          | <p>Enables the Botnet Traffic Filter; without any options, this command monitors all traffic.</p> <p>We recommend enabling the Botnet Traffic Filter on all traffic on the Internet-facing interface using the <b>interface</b> keyword.</p> <p>You can optionally limit monitoring to specific traffic by using the <b>classify-list</b> keyword with an access list.</p> <p>You can enter this command one time for each interface and one time for the global policy (where you do not specify the <b>interface</b> keyword). Each interface and global command can have an optional <b>classify-list</b> keyword. Any interface-specific commands take precedence over the global command.</p> |

| Command                                                                                                                                                                                                                                                                                                                                                                | Purpose                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p><b>Step 3</b> (Optional)</p> <pre>dynamic-filter drop blacklist [interface name] [action-classify-list subset_access_list] [threat-level {eq level   range min max}]</pre> <p><b>Example:</b></p> <pre>hostname(config)# dynamic-filter drop blacklist interface outside action-classify-list dynamic-filter_acl_subset threat-level range moderate very-high</pre> | <p>Automatically drops malware traffic. To manually drop traffic, see the “<a href="#">Blocking Botnet Traffic Manually</a>” section on page 55-15.</p> <p>Be sure to first configure a <b>dynamic-filter enable</b> command to monitor any traffic you also want to drop.</p> <p>You can set an interface policy using the <b>interface</b> keyword, or a global policy (where you do not specify the <b>interface</b> keyword). Any interface-specific commands take precedence over the global command. You can enter this command multiple times for each interface and global policy.</p> <p>The <b>action-classify-list</b> keyword limits the traffic dropped to a subset of monitored traffic. The dropped traffic must always be equal to or a subset of the monitored traffic. For example, if you specify an access list for the <b>dynamic-filter enable</b> command, and you specify the <b>action-classify-list</b> for this command, then it must be a subset of the <b>dynamic-filter enable</b> access list.</p> <p>Make sure you do not specify overlapping traffic in multiple commands for a given interface/global policy. Because you cannot control the exact order that commands are matched, overlapping traffic means you do not know which command will be matched. For example, do not specify both a command that matches all traffic (without the <b>action-classify-list</b> keyword) as well as a command with the <b>action-classify-list</b> keyword for a given interface. In this case, the traffic might never match the command with the <b>action-classify-list</b> keyword. Similarly, if you specify multiple commands with the <b>action-classify-list</b> keyword, make sure each access list is unique, and that the networks do not overlap.</p> <p>You can additionally limit the traffic dropped by setting the threat level. If you do not explicitly set a threat level, the level used is <b>threat-level range moderate very-high</b>.</p> <p><b>Note</b> We highly recommend using the default setting unless you have strong reasons for changing the setting.</p> <p>The <i>level</i> and <i>min</i> and <i>max</i> options are:</p> <ul style="list-style-type: none"> <li>• <b>very-low</b></li> <li>• <b>low</b></li> <li>• <b>moderate</b></li> <li>• <b>high</b></li> <li>• <b>very-high</b></li> </ul> <p><b>Note</b> Static blacklist entries are always designated with a Very High threat level.</p> |

|        | Command                                                                                                                                                 | Purpose                                                                                                                                                                                                                                                                                                                                                                  |
|--------|---------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Step 4 | (Optional)<br><code>dynamic-filter ambiguous-is-black</code><br><br><b>Example:</b><br><code>hostname(config)# dynamic-filter ambiguous-is-black</code> | If you configured the <b>dynamic-filter drop blacklist</b> command, then this command treats greylisted traffic as blacklisted traffic for dropping purposes. If you do not enable this command, greylisted traffic will not be dropped. See the “ <a href="#">Botnet Traffic Filter Address Types</a> ” section on page 55-2 for more information about the greylister. |

## Examples

The following recommended configuration monitors all traffic on the outside interface and drops all traffic at a threat level of moderate or higher:

```
hostname(config)# dynamic-filter enable interface outside
hostname(config)# dynamic-filter drop blacklist interface outside
```

If you decide not to monitor all traffic, you can limit the traffic using an access list. The following example monitors only port 80 traffic on the outside interface, and drops traffic threat level very-high only:

```
hostname(config)# access-list dynamic-filter_acl extended permit tcp any any eq 80
hostname(config)# dynamic-filter enable interface outside classify-list dynamic-filter_acl
hostname(config)# dynamic-filter drop blacklist interface outside threat-level eq
very-high
```

## Blocking Botnet Traffic Manually

If you choose not to block malware traffic automatically (see the “[Enabling Traffic Classification and Actions for the Botnet Traffic Filter](#)” section on page 55-12), you can block traffic manually by configuring an access list to deny traffic, or by using the **shun** command tool to block all traffic to and from a host.

For example, you receive the following syslog message:

```
ASA-4-338002: Dynamic Filter permitted black listed TCP traffic from inside:10.1.1.45/6798
(209.165.201.1/7890) to outside:209.165.202.129/80 (209.165.202.129/80), destination
209.165.202.129 resolved from dynamic list: bad.example.com
```

You can then perform one of the following actions:

- Create an access list to deny traffic.

For example, using the syslog message above, you might want to deny traffic from the infected host at 10.1.1.45 to the malware site at 209.165.202.129. Or, if there are many connections to different blacklisted addresses, you can create an access list to deny all traffic from 10.1.1.45 until you resolve the infection on the host computer. For example, the following commands deny all traffic from 10.1.1.5 to 209.165.202.129, but permits all other traffic on the inside interface:

```
hostname(config)# access-list BLOCK_OUT extended deny ip host 10.1.1.45 host
209.165.202.129
hostname(config)# access-list BLOCK_OUT extended permit ip any any
hostname(config)# access-group BLOCK_OUT in interface inside
```

See [Chapter 15, “Adding an Extended Access List,”](#) for more information about creating an access list, and see [Chapter 34, “Configuring Access Rules,”](#) for information about applying the access list to the interface.



**Note** Access lists block all future connections. To block the current connection, if it is still active, enter the **clear conn** command. For example, to clear only the connection listed in the syslog message, enter the **clear conn address 10.1.1.45 address 209.165.202.129** command. See the command reference for more information.

- Shun the infected host.

Shunning blocks all connections from the host, so you should use an access list if you want to block connections to certain destination addresses and ports. To shun a host, enter the following command. To drop the current connection as well as blocking all future connections, enter the destination address, source port, destination port, and optional protocol.

```
hostname(config)# shun src_ip [dst_ip src_port dest_port [protocol]]
```

For example, to block future connections from 10.1.1.45, and also drop the current connection to the malware site in the syslog message, enter:

```
hostname(config)# shun 10.1.1.45 209.165.202.129 6798 80
```

See [“Blocking Unwanted Connections”](#) section on page 57-2 for more information about shunning.

After you resolve the infection, be sure to remove the access list or the shun. To remove the shun, enter **no shun src\_ip**.

## Searching the Dynamic Database

If you want to check if a domain name or IP address is included in the dynamic database, you can search the database for a string.

### Detailed Steps

| Command                                                                                                           | Purpose                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|-------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <pre>dynamic-filter database find string</pre> <p><b>Example:</b><br/>hostname# dynamic-filter database find </p> | <p>Searches the dynamic database for a domain name or IP address. The <i>string</i> can be the complete domain name or IP address, or you can enter part of the name or address, with a minimum search string of 3 characters. If there are multiple matches, the first two matches are shown. To refine your search for a more specific match, enter a longer string.</p> <p><b>Note</b> Regular expressions are not supported for the database search.</p> |

### Examples

The following example searches on the string “example.com”, and finds 1 match:

```
hostname# dynamic-filter database find bad.example.com

bad.example.com
Found 1 matches
```

The following example searches on the string “bad”, and finds more than 2 matches:

```
hostname# dynamic-filter database find bad

bad.example.com
bad.example.net
Found more than 2 matches, enter a more specific string to find an exact
match
```

## Monitoring the Botnet Traffic Filter

Whenever a known address is classified by the Botnet Traffic Filter, then a syslog message is generated. You can also monitor Botnet Traffic Filter statistics and other parameters by entering commands on the ASA. This section includes the following topics:

- [Botnet Traffic Filter Syslog Messaging, page 55-17](#)
- [Botnet Traffic Filter Commands, page 55-17](#)

### Botnet Traffic Filter Syslog Messaging

The Botnet Traffic Filter generates detailed syslog messages numbered 338*nnn*. Messages differentiate between incoming and outgoing connections, blacklist, whitelist, or greylist addresses, and many other variables. (The greylist includes addresses that are associated with multiple domain names, but not all of these domain names are on the blacklist.)

See the syslog message guide for detailed information about syslog messages.

### Botnet Traffic Filter Commands

To monitor the Botnet Traffic Filter, enter one of the following commands:

| Command                                                                                       | Purpose                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|-----------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>show dynamic-filter statistics [interface name] [detail]</code>                         | Shows how many connections were classified as whitelist, blacklist, and greylist connections, and how many connections were dropped. (The greylist includes addresses that are associated with multiple domain names, but not all of these domain names are on the blacklist.) The <b>detail</b> keyword shows how many packets at each threat level were classified or dropped.<br><br>To clear the statistics, enter the <b>clear dynamic-filter statistics [interface name]</b> command. |
| <code>show dynamic-filter reports top [malware-sites   malware-ports   infected-hosts]</code> | Generates reports of the top 10 malware sites, ports, and infected hosts monitored. The top 10 malware-sites report includes the number of connections dropped, and the threat level and category of each site. This report is a snapshot of the data, and may not match the top 10 items since the statistics started to be collected.<br><br>To clear the report data, enter the <b>clear dynamic-filter reports top</b> command.                                                         |

| Command                                                                                                                                                                                                                  | Purpose                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>show dynamic-filter reports infected-hosts</code><br>{ <code>max-connections</code>   <code>latest-active</code>  <br><code>highest-threat</code>   <code>subnet ip_address netmask</code><br>  <code>all</code> } | Generates reports about infected hosts. These reports contain detailed history about infected hosts, showing the correlation between infected hosts, visited malware sites, and malware ports. The <b>max-connections</b> keyword shows the 20 infected hosts with the most number of connections. The <b>latest-active</b> keyword shows the 20 hosts with the most recent activity. The <b>highest-threat</b> keyword shows the 20 hosts that connected to the malware sites with the highest threat level. The <b>subnet</b> keyword shows up to 20 hosts within the specified subnet. The <b>all</b> keyword shows all buffered infected-hosts information. This display might include thousands of entries. You might want to use ASDM to generate a PDF file instead of using the CLI.<br><br>To clear the report data, enter the <b>clear dynamic-filter reports infected-hosts</b> command. |
| <code>show dynamic-filter updater-client</code>                                                                                                                                                                          | Shows information about the updater server, including the server IP address, the next time the ASA will connect with the server, and the database version last installed.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <code>show dynamic-filter dns-snoop [detail]</code>                                                                                                                                                                      | Shows the Botnet Traffic Filter DNS snooping summary, or with the <b>detail</b> keyword, the actual IP addresses and names. All inspected DNS data is included in this output, and not just matching names in the blacklist. DNS data from static entries are not included.<br><br>To clear the DNS snooping data, enter the <b>clear dynamic-filter dns-snoop</b> command.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <code>show dynamic-filter data</code>                                                                                                                                                                                    | Shows information about the dynamic database, including when the dynamic database was last downloaded, the version of the database, how many entries the database contains, and 10 sample entries.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <code>show asp table dynamic-filter [hits]</code>                                                                                                                                                                        | Shows the Botnet Traffic Filter rules that are installed in the accelerated security path.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |

## Examples

The following is sample output from the **show dynamic-filter statistics** command:

```
hostname# show dynamic-filter statistics
Enabled on interface outside
 Total conns classified 11, ingress 11, egress 0
 Total whitelist classified 0, ingress 0, egress 0
 Total greylist classified 0, dropped 0, ingress 0, egress 0
 Total blacklist classified 11, dropped 5, ingress 11, egress 0
Enabled on interface inside
 Total conns classified 1182, ingress 1182, egress 0
 Total whitelist classified 3, ingress 3, egress 0
 Total greylist classified 0, dropped 0, ingress 0, egress 0
 Total blacklist classified 1179, dropped 1000, ingress 1179, egress 0
```

The following is sample output from the **show dynamic-filter reports top malware-sites** command:

```
hostname# show dynamic-filter reports top malware-sites
Site Connections logged dropped Threat Level Category

bad1.example.com (10.67.22.34) 11 0 2 Botnet
bad2.example.com (209.165.200.225) 8 8 3 Virus
bad1.cisco.example(10.131.36.158) 6 6 3 Virus
bad2.cisco.example(209.165.201.1) 2 2 3 Trojan
```

```
horrible.example.net(10.232.224.2) 2 2 3 Botnet
nono.example.org(209.165.202.130) 1 1 3 Virus
```

Last clearing of the top sites report: at 13:41:06 UTC Jul 15 2009

The following is sample output from the **show dynamic-filter reports top malware-ports** command:

```
hostname# show dynamic-filter reports top malware-ports
Port Connections logged

tcp 1000 617
tcp 2001 472
tcp 23 22
tcp 1001 19
udp 2000 17
udp 2001 17
tcp 8080 9
tcp 80 3
tcp >8192 2
```

Last clearing of the top sites report: at 13:41:06 UTC Jul 15 2009

The following is sample output from the **show dynamic-filter reports top infected-hosts** command:

```
hostname# show dynamic-filter reports top infected-hosts
Host Connections logged

10.10.10.51(inside) 1190
10.12.10.10(inside) 10
10.10.11.10(inside) 5
```

Last clearing of the top infected-hosts report: at 13:41:06 UTC Jul 15 2009

## Configuration Examples for the Botnet Traffic Filter

This section includes the recommended configuration for single and multiple context mode, as well as other possible configurations. This section includes the following topics:

- [Recommended Configuration Example, page 55-19](#)
- [Other Configuration Examples, page 55-20](#)

### Recommended Configuration Example

The following recommended example configuration for single context mode enables downloading of the dynamic database, and enables use of the database. It creates a class map for all UDP DNS traffic, enables DNS inspection and Botnet Traffic Filter snooping with the default DNS inspection policy map, and applies it to the outside interface, the Internet-facing interface.

#### **Example 55-1 Single Mode Botnet Traffic Filter Recommended Example**

```
hostname(config)# dynamic-filter updater-client enable
hostname(config)# dynamic-filter use-database
hostname(config)# class-map dynamic-filter_snoop_class
hostname(config-cmap)# match port udp eq domain
hostname(config-cmap)# policy-map dynamic-filter_snoop_policy
hostname(config-pmap)# class dynamic-filter_snoop_class
```

```
hostname(config-pmap-c)# inspect dns preset_dns_map dynamic-filter-snoop
hostname(config-pmap-c)# service-policy dynamic-filter_snoop_policy interface outside
hostname(config)# dynamic-filter enable interface outside
hostname(config)# dynamic-filter drop blacklist interface outside
```

The following recommended example configuration for multiple context mode enables the Botnet Traffic Filter for two contexts:

### **Example 55-2 Multiple Mode Botnet Traffic Filter Recommended Example**

```
hostname(config)# dynamic-filter updater-client enable

hostname(config)# changeto context context1

hostname/context1(config)# dynamic-filter use-database
hostname/context1(config)# class-map dynamic-filter_snoop_class
hostname/context1(config-cmap)# match port udp eq domain
hostname/context1(config-cmap)# policy-map dynamic-filter_snoop_policy
hostname/context1(config-pmap)# class dynamic-filter_snoop_class
hostname/context1(config-pmap-c)# inspect dns preset_dns_map dynamic-filter-snoop
hostname/context1(config-pmap-c)# service-policy dynamic-filter_snoop_policy interface
outside
hostname/context1(config)# dynamic-filter enable interface outside
hostname/context1(config)# dynamic-filter drop blacklist interface outside

hostname/context1(config)# changeto context context2

hostname/context2(config)# dynamic-filter use-database
hostname/context2(config)# class-map dynamic-filter_snoop_class
hostname/context2(config-cmap)# match port udp eq domain
hostname/context2(config-cmap)# policy-map dynamic-filter_snoop_policy
hostname/context2(config-pmap)# class dynamic-filter_snoop_class
hostname/context2(config-pmap-c)# inspect dns preset_dns_map dynamic-filter-snoop
hostname/context2(config-pmap-c)# service-policy dynamic-filter_snoop_policy interface
outside
hostname/context2(config)# dynamic-filter enable interface outside
hostname/context2(config)# dynamic-filter drop blacklist interface outside
```

## Other Configuration Examples

The following sample configuration adds static entries to the blacklist and to the whitelist. Then, it monitors all port 80 traffic on the outside interface, and drops blacklisted traffic. It also treats greylist addresses as blacklisted addresses.

```
hostname(config)# dynamic-filter updater-client enable

hostname(config)# changeto context context1

hostname/context1(config)# dynamic-filter use-database
hostname/context1(config)# class-map dynamic-filter_snoop_class
hostname/context1(config-cmap)# match port udp eq domain
hostname/context1(config-cmap)# policy-map dynamic-filter_snoop_policy
hostname/context1(config-pmap)# class dynamic-filter_snoop_class
hostname/context1(config-pmap-c)# inspect dns preset_dns_map dynamic-filter-snoop
hostname/context1(config-pmap-c)# service-policy dynamic-filter_snoop_policy interface
outside
hostname/context1(config-pmap-c)# dynamic-filter blacklist
hostname/context1(config-l1ist)# name bad1.example.com
hostname/context1(config-l1ist)# name bad2.example.com
```

```
hostname/context1(config-l1ist)# address 10.1.1.1 255.255.255.0
hostname/context1(config-l1ist)# dynamic-filter whitelist
hostname/context1(config-l1ist)# name good.example.com
hostname/context1(config-l1ist)# name great.example.com
hostname/context1(config-l1ist)# name awesome.example.com
hostname/context1(config-l1ist)# address 10.1.1.2 255.255.255.255
hostname/context1(config-l1ist)# access-list dynamic-filter_acl extended permit tcp any
any eq 80
hostname/context1(config)# dynamic-filter enable interface outside classify-list
dynamic-filter_acl
hostname/context1(config)# dynamic-filter drop blacklist interface outside
hostname/context1(config)# dynamic-filter ambiguous-is-black

hostname/context1(config)# changeto context context2

hostname/context2(config)# dynamic-filter use-database
hostname/context2(config)# class-map dynamic-filter_snoop_class
hostname/context2(config-cmap)# match port udp eq domain
hostname/context2(config-cmap)# policy-map dynamic-filter_snoop_policy
hostname/context2(config-pmap)# class dynamic-filter_snoop_class
hostname/context2(config-pmap-c)# inspect dns preset_dns_map dynamic-filter-snoop
hostname/context2(config-pmap-c)# service-policy dynamic-filter_snoop_policy interface
outside
hostname/context2(config-pmap-c)# dynamic-filter blacklist
hostname/context2(config-l1ist)# name bad1.example.com
hostname/context2(config-l1ist)# name bad2.example.com
hostname/context2(config-l1ist)# address 10.1.1.1 255.255.255.0
hostname/context2(config-l1ist)# dynamic-filter whitelist
hostname/context2(config-l1ist)# name good.example.com
hostname/context2(config-l1ist)# name great.example.com
hostname/context2(config-l1ist)# name awesome.example.com
hostname/context2(config-l1ist)# address 10.1.1.2 255.255.255.255
hostname/context2(config-l1ist)# access-list dynamic-filter_acl extended permit tcp any
any eq 80
hostname/context2(config)# dynamic-filter enable interface outside classify-list
dynamic-filter_acl
hostname/context2(config)# dynamic-filter drop blacklist interface outside
hostname/context2(config)# dynamic-filter ambiguous-is-black
```

## Where to Go Next

- To configure the syslog server, see [Chapter 77, “Configuring Logging.”](#)
- To configure an access list to block traffic, see [Chapter 15, “Adding an Extended Access List,”](#) and also see [Chapter 34, “Configuring Access Rules,”](#) for information about applying the access list to the interface.
- To shun connections, see the “[Blocking Unwanted Connections](#)” section on page 57-2.

# Feature History for the Botnet Traffic Filter

Table 55-2 lists each feature change and the platform release in which it was implemented.

**Table 55-2** Feature History for the Botnet Traffic Filter

| Feature Name                                                           | Platform Releases | Feature Information                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|------------------------------------------------------------------------|-------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Botnet Traffic Filter                                                  | 8.2(1)            | This feature was introduced.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| Automatic blocking, and blacklist category and threat level reporting. | 8.2(2)            | <p>The Botnet Traffic Filter now supports automatic blocking of blacklisted traffic based on the threat level. You can also view the category and threat level of malware sites in statistics and reports.</p> <p>The 1 hour timeout for reports for top hosts was removed; there is now no timeout.</p> <p>The following commands were introduced or modified:<br/> <b>dynamic-filter ambiguous-is-black</b>, <b>dynamic-filter drop blacklist</b>, <b>show dynamic-filter statistics</b>, <b>show dynamic-filter reports infected-hosts</b>, and <b>show dynamic-filter reports top</b>.</p> |



## CHAPTER 56

# Configuring Threat Detection

---

This chapter describes how to configure threat detection statistics and scanning threat detection and includes the following sections:

- [Information About Threat Detection, page 56-1](#)
- [Licensing Requirements for Threat Detection, page 56-1](#)
- [Configuring Basic Threat Detection Statistics, page 56-2](#)
- [Configuring Advanced Threat Detection Statistics, page 56-6](#)
- [Configuring Scanning Threat Detection, page 56-15](#)
- [Configuration Examples for Threat Detection, page 56-19](#)

## Information About Threat Detection

The threat detection feature consists of the following elements:

- Different levels of statistics gathering for various threats.

Threat detection statistics can help you manage threats to your ASA; for example, if you enable scanning threat detection, then viewing statistics can help you analyze the threat. You can configure two types of threat detection statistics:

- Basic threat detection statistics—Includes information about attack activity for the system as a whole. Basic threat detection statistics are enabled by default and have no performance impact.
  - Advanced threat detection statistics—Tracks activity at an object level, so the ASA can report activity for individual hosts, ports, protocols, or access lists. Advanced threat detection statistics can have a major performance impact, depending on the statistics gathered, so only the access list statistics are enabled by default.
- Scanning threat detection, which determines when a host is performing a scan.

You can optionally shun any hosts determined to be a scanning threat.

## Licensing Requirements for Threat Detection

The following table shows the licensing requirements for this feature:

| Model      | License Requirement |
|------------|---------------------|
| All models | Base License.       |

## Configuring Basic Threat Detection Statistics

Basic threat detection statistics include activity that might be related to an attack, such as a DoS attack.

This section includes the following topics:

- [Information About Basic Threat Detection Statistics, page 56-2](#)
- [Guidelines and Limitations, page 56-3](#)
- [Default Settings, page 56-3](#)
- [Configuring Basic Threat Detection Statistics, page 56-4](#)
- [Monitoring Basic Threat Detection Statistics, page 56-5](#)
- [Feature History for Basic Threat Detection Statistics, page 56-6](#)

## Information About Basic Threat Detection Statistics

Using basic threat detection statistics, the ASA monitors the rate of dropped packets and security events due to the following reasons:

- Denial by access lists
- Bad packet format (such as invalid-ip-header or invalid-tcp-hdr-length)
- Connection limits exceeded (both system-wide resource limits, and limits set in the configuration)
- DoS attack detected (such as an invalid SPI, Stateful Firewall check failure)
- Basic firewall checks failed (This option is a combined rate that includes all firewall-related packet drops in this bulleted list. It does not include non-firewall-related drops such as interface overload, packets failed at application inspection, and scanning attack detected.)
- Suspicious ICMP packets detected
- Packets failed application inspection
- Interface overload
- Scanning attack detected (This option monitors scanning attacks; for example, the first TCP packet is not a SYN packet, or the TCP connection failed the 3-way handshake. Full scanning threat detection (see the [“Configuring Scanning Threat Detection” section on page 56-15](#)) takes this scanning attack rate information and acts on it by classifying hosts as attackers and automatically shunning them, for example.)
- Incomplete session detection such as TCP SYN attack detected or no data UDP session attack detected

When the ASA detects a threat, it immediately sends a system log message (733100). The ASA tracks two types of rates: the average event rate over an interval, and the burst event rate over a shorter burst interval. The burst rate interval is 1/30th of the average rate interval or 10 seconds, whichever is higher.

For each received event, the ASA checks the average and burst rate limits; if both rates are exceeded, then the ASA sends two separate system messages, with a maximum of one message for each rate type per burst period.

Basic threat detection affects performance only when there are drops or potential threats; even in this scenario, the performance impact is insignificant.

## Guidelines and Limitations

This section includes the guidelines and limitations for this feature:

### Security Context Guidelines

Supported in single mode only. Multiple mode is not supported.

### Firewall Mode Guidelines

Supported in routed and transparent firewall mode.

### Types of Traffic Monitored

Only through-the-box traffic is monitored; to-the-box traffic is not included in threat detection.

## Default Settings

Basic threat detection statistics are enabled by default.

[Table 56-1](#) lists the default settings. You can view all these default settings using the **show running-config all threat-detection** command.

**Table 56-1 Basic Threat Detection Default Settings**

| Packet Drop Reason                                                                                                                                                                     | Trigger Settings                         |                                                |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------|------------------------------------------------|
|                                                                                                                                                                                        | Average Rate                             | Burst Rate                                     |
| <ul style="list-style-type: none"> <li>• DoS attack detected</li> <li>• Bad packet format</li> <li>• Connection limits exceeded</li> <li>• Suspicious ICMP packets detected</li> </ul> | 100 drops/sec over the last 600 seconds. | 400 drops/sec over the last 20 second period.  |
|                                                                                                                                                                                        | 80 drops/sec over the last 3600 seconds. | 320 drops/sec over the last 120 second period. |
| Scanning attack detected                                                                                                                                                               | 5 drops/sec over the last 600 seconds.   | 10 drops/sec over the last 20 second period.   |
|                                                                                                                                                                                        | 4 drops/sec over the last 3600 seconds.  | 8 drops/sec over the last 120 second period.   |
| Incomplete session detected such as TCP SYN attack detected or no data UDP session attack detected (combined)                                                                          | 100 drops/sec over the last 600 seconds. | 200 drops/sec over the last 20 second period.  |
|                                                                                                                                                                                        | 80 drops/sec over the last 3600 seconds. | 160 drops/sec over the last 120 second period. |

Table 56-1 Basic Threat Detection Default Settings (continued)

| Packet Drop Reason                                                                                                            | Trigger Settings                           |                                                 |
|-------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------|-------------------------------------------------|
|                                                                                                                               | Average Rate                               | Burst Rate                                      |
| Denial by access lists                                                                                                        | 400 drops/sec over the last 600 seconds.   | 800 drops/sec over the last 20 second period.   |
|                                                                                                                               | 320 drops/sec over the last 3600 seconds.  | 640 drops/sec over the last 120 second period.  |
| <ul style="list-style-type: none"> <li>Basic firewall checks failed</li> <li>Packets failed application inspection</li> </ul> | 400 drops/sec over the last 600 seconds.   | 1600 drops/sec over the last 20 second period.  |
|                                                                                                                               | 320 drops/sec over the last 3600 seconds.  | 1280 drops/sec over the last 120 second period. |
| Interface overload                                                                                                            | 2000 drops/sec over the last 600 seconds.  | 8000 drops/sec over the last 20 second period.  |
|                                                                                                                               | 1600 drops/sec over the last 3600 seconds. | 6400 drops/sec over the last 120 second period. |

## Configuring Basic Threat Detection Statistics

This section describes how to configure basic threat detection statistics, including enabling or disabling it and changing the default limits.

### Detailed Steps

|        | Command                                                                                                                                                                                                                                                                                                                                                                                    | Purpose                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|--------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Step 1 | <code>threat-detection basic-threat</code>                                                                                                                                                                                                                                                                                                                                                 | Enables basic threat detection statistics (if you previously disabled it). Basic threat detection is enabled by default.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|        | <p><b>Example:</b></p> <pre>hostname(config)# threat-detection basic-threat</pre>                                                                                                                                                                                                                                                                                                          |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| Step 2 | <pre>threat-detection rate {acl-drop   bad-packet-drop   conn-limit-drop   dos-drop   fw-drop   icmp-drop   inspect-drop   interface-drop   scanning-threat   syn-attack} rate-interval rate_interval average-rate av_rate burst-rate burst_rate</pre> <p><b>Example:</b></p> <pre>hostname(config)# threat-detection rate dos-drop rate-interval 600 average-rate 60 burst-rate 100</pre> | <p>(Optional) Changes the default settings for one or more type of event.</p> <p>For a description of each event type, see the <a href="#">“Information About Basic Threat Detection Statistics”</a> section on page 56-2.</p> <p>When you use this command with the <b>scanning-threat</b> keyword, it is also used in the scanning threat detection feature (see the <a href="#">“Configuring Scanning Threat Detection”</a> section). If you do not configure basic threat detection, you can still use this command with the <b>scanning-threat</b> keyword to configure the rate limits for scanning threat detection.</p> <p>You can configure up to three different rate intervals for each event type.</p> |

## Monitoring Basic Threat Detection Statistics

To monitor basic threat detection statistics, perform one of the following tasks:

| Command                                                                                                                                                                                                                                                                                                      | Purpose                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <pre>show threat-detection rate [<b>min-display-rate</b> <i>min_display_rate</i>] [<b>acl-drop</b>   <b>bad-packet-drop</b>   <b>conn-limit-drop</b>   <b>dos-drop</b>   <b>fw-drop</b>   <b>icmp-drop</b>   <b>inspect-drop</b>   <b>interface-drop</b>   <b>scanning-threat</b>   <b>syn-attack</b>]</pre> | <p>Displays basic threat detection statistics.</p> <p>where the <b>min-display-rate</b> <i>min_display_rate</i> argument limits the display to statistics that exceed the minimum display rate in events per second. You can set the <i>min_display_rate</i> between 0 and 2147483647.</p> <p>For a description of each event type, see the <a href="#">“Information About Basic Threat Detection Statistics”</a> section on page 56-2.</p> <p>The output shows the average rate in events/sec over two fixed time periods: the last 10 minutes and the last 1 hour. It also shows: the current burst rate in events/sec over the last completed burst interval, which is 1/30th of the average rate interval or 10 seconds, whichever is larger; the number of times the rates were exceeded (triggered); and the total number of events over the time periods.</p> <p>The ASA stores the count at the end of each burst period, for a total of 30 completed burst intervals. The unfinished burst interval presently occurring is not included in the average rate. For example, if the average rate interval is 20 minutes, then the burst interval is 20 seconds. If the last burst interval was from 3:00:00 to 3:00:20, and you use the <b>show</b> command at 3:00:25, then the last 5 seconds are not included in the output.</p> <p>The only exception to this rule is if the number of events in the unfinished burst interval already exceeds the number of events in the oldest burst interval (#1 of 30) when calculating the total events. In that case, the ASA calculates the total events as the last 29 complete intervals, plus the events so far in the unfinished burst interval. This exception lets you monitor a large increase in events in real time.</p> |
| <pre>clear threat-detection rate</pre>                                                                                                                                                                                                                                                                       | <p>Clears basic threat statistics.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |

### Examples

The following is sample output from the **show threat-detection rate** command:

```
hostname# show threat-detection rate
```

|                   | Average (eps) | Current (eps) | Trigger | Total events |
|-------------------|---------------|---------------|---------|--------------|
| 10-min ACL drop:  | 0             | 0             | 0       | 16           |
| 1-hour ACL drop:  | 0             | 0             | 0       | 112          |
| 1-hour SYN attck: | 5             | 0             | 2       | 21438        |
| 10-min Scanning:  | 0             | 0             | 29      | 193          |
| 1-hour Scanning:  | 106           | 0             | 10      | 384776       |
| 1-hour Bad pkts:  | 76            | 0             | 2       | 274690       |
| 10-min Firewall:  | 0             | 0             | 3       | 22           |
| 1-hour Firewall:  | 76            | 0             | 2       | 274844       |
| 10-min DoS attck: | 0             | 0             | 0       | 6            |
| 1-hour DoS attck: | 0             | 0             | 0       | 42           |
| 10-min Interface: | 0             | 0             | 0       | 204          |
| 1-hour Interface: | 88            | 0             | 0       | 318225       |

## Feature History for Basic Threat Detection Statistics

Table 56-2 lists each feature change and the platform release in which it was implemented.

**Table 56-2** Feature History for Basic Threat Detection Statistics

| Feature Name                                               | Platform Releases | Feature Information                                                                                                                                                                                                                               |
|------------------------------------------------------------|-------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Basic threat detection statistics                          | 8.0(2)            | Basic threat detection statistics was introduced.<br>The following commands were introduced:<br><b>threat-detection basic-threat</b> , <b>threat-detection rate</b> ,<br><b>show threat-detection rate</b> , <b>clear threat-detection rate</b> . |
| Burst rate interval changed to 1/30th of the average rate. | 8.2(1)            | In earlier releases, the burst rate interval was 1/60th of the average rate. To maximize memory usage, the sampling interval was reduced to 30 times during the average rate.                                                                     |
| Improved memory usage                                      | 8.3(1)            | The memory usage for threat detection was improved.                                                                                                                                                                                               |

## Configuring Advanced Threat Detection Statistics

You can configure the ASA to collect extensive statistics. This section includes the following topics:

- [Information About Advanced Threat Detection Statistics, page 56-6](#)
- [Guidelines and Limitations, page 56-6](#)
- [Default Settings, page 56-7](#)
- [Configuring Advanced Threat Detection Statistics, page 56-7](#)
- [Monitoring Advanced Threat Detection Statistics, page 56-9](#)
- [Feature History for Advanced Threat Detection Statistics, page 56-14](#)

## Information About Advanced Threat Detection Statistics

Advanced threat detection statistics show both allowed and dropped traffic rates for individual objects such as hosts, ports, protocols, or access lists.



### Caution

Enabling advanced statistics can affect the ASA performance, depending on the type of statistics enabled. The **threat-detection statistics host** command affects performance in a significant way; if you have a high traffic load, you might consider enabling this type of statistics temporarily. The **threat-detection statistics port** command, however, has modest impact.

## Guidelines and Limitations

This section includes the guidelines and limitations for this feature:

**Security Context Guidelines**

Only TCP Intercept statistics are available in multiple mode.

**Firewall Mode Guidelines**

Supported in routed and transparent firewall mode.

**Types of Traffic Monitored**

Only through-the-box traffic is monitored; to-the-box traffic is not included in threat detection.

## Default Settings

By default, statistics for access lists are enabled.

## Configuring Advanced Threat Detection Statistics

By default, statistics for access lists are enabled. To enable other statistics, perform the following steps.

### Detailed Steps

|        | Command                                                                                                                            | Purpose                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|--------|------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Step 1 | <b>threat-detection statistics</b><br><br><b>Example:</b><br>hostname(config)# threat-detection statistics                         | (Optional) Enables <i>all</i> statistics.<br><br>To enable only certain statistics, enter this command for each statistic type (shown in this table), and do not also enter the command without any options. You can enter <b>threat-detection statistics</b> (without any options) and then customize certain statistics by entering the command with statistics-specific options (for example, <b>threat-detection statistics host number-of-rate 2</b> ). If you enter <b>threat-detection statistics</b> (without any options) and then enter a command for specific statistics, but without any statistic-specific options, then that command has no effect because it is already enabled.<br><br>If you enter the <b>no</b> form of this command, it removes all <b>threat-detection statistics</b> commands, including the <b>threat-detection statistics access-list</b> command, which is enabled by default. |
| Step 2 | <b>threat-detection statistics access-list</b><br><br><b>Example:</b><br>hostname(config)# threat-detection statistics access-list | (Optional) Enables statistics for access lists (if they were disabled previously). Statistics for access lists are enabled by default. Access list statistics are only displayed using the <b>show threat-detection top access-list</b> command. This command is enabled by default.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |

|        | Command                                                                                                                                                                        | Purpose                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|--------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Step 3 | <pre>threat-detection statistics host [number-of-rate {1   2   3}]</pre> <p><b>Example:</b></p> <pre>hostname(config)# threat-detection statistics host number-of-rate 2</pre> | <p>(Optional) Enables statistics for hosts.</p> <p>The <b>number-of-rate</b> keyword sets the number of rate intervals maintained for host statistics. The default number of rate intervals is <b>1</b>, which keeps the memory usage low. To view more rate intervals, set the value to <b>2</b> or <b>3</b>. For example, if you set the value to <b>3</b>, then you view data for the last 1 hour, 8 hours, and 24 hours. If you set this keyword to <b>1</b> (the default), then only the shortest rate interval statistics are maintained. If you set the value to <b>2</b>, then the two shortest intervals are maintained.</p> <p>The host statistics accumulate for as long as the host is active and in the scanning threat host database. The host is deleted from the database (and the statistics cleared) after 10 minutes of inactivity.</p> |
| Step 4 | <pre>threat-detection statistics port [number-of-rate {1   2   3}]</pre> <p><b>Example:</b></p> <pre>hostname(config)# threat-detection statistics port number-of-rate 2</pre> | <p>(Optional) Enables statistics for TCP and UDP ports.</p> <p>The <b>number-of-rate</b> keyword sets the number of rate intervals maintained for port statistics. The default number of rate intervals is <b>1</b>, which keeps the memory usage low. To view more rate intervals, set the value to <b>2</b> or <b>3</b>. For example, if you set the value to <b>3</b>, then you view data for the last 1 hour, 8 hours, and 24 hours. If you set this keyword to <b>1</b> (the default), then only the shortest rate interval statistics are maintained. If you set the value to <b>2</b>, then the two shortest intervals are maintained.</p>                                                                                                                                                                                                          |

| Command                                                                                                                                                                                                                                                                                                      | Purpose                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p><b>Step 5</b></p> <pre>threat-detection statistics protocol [number-of-rate {1   2   3}]</pre> <p><b>Example:</b></p> <pre>hostname(config)# threat-detection statistics protocol number-of-rate 3</pre>                                                                                                  | <p>(Optional) Enables statistics for non-TCP/UDP IP protocols.</p> <p>The <b>number-of-rate</b> keyword sets the number of rate intervals maintained for protocol statistics. The default number of rate intervals is <b>1</b>, which keeps the memory usage low. To view more rate intervals, set the value to <b>2</b> or <b>3</b>. For example, if you set the value to <b>3</b>, then you view data for the last 1 hour, 8 hours, and 24 hours. If you set this keyword to <b>1</b> (the default), then only the shortest rate interval statistics are maintained. If you set the value to <b>2</b>, then the two shortest intervals are maintained.</p>                                                                                                                                                                                                                                                                             |
| <p><b>Step 6</b></p> <pre>threat-detection statistics tcp-intercept [rate-interval minutes] [burst-rate attacks_per_sec] [average-rate attacks_per_sec]</pre> <p><b>Example:</b></p> <pre>hostname(config)# threat-detection statistics tcp-intercept rate-interval 60 burst-rate 800 average-rate 600</pre> | <p>(Optional) Enables statistics for attacks intercepted by TCP Intercept (see the <a href="#">Chapter 53, “Configuring Connection Settings,”</a> to enable TCP Intercept).</p> <p>The <b>rate-interval</b> keyword sets the size of the history monitoring window, between 1 and 1440 minutes. The default is 30 minutes. During this interval, the ASA samples the number of attacks 30 times.</p> <p>The <b>burst-rate</b> keyword sets the threshold for syslog message generation, between 25 and 2147483647. The default is 400 per second. When the burst rate is exceeded, syslog message 733104 is generated.</p> <p>The <b>average-rate</b> keyword sets the average rate threshold for syslog message generation, between 25 and 2147483647. The default is 200 per second. When the average rate is exceeded, syslog message 733105 is generated.</p> <p><b>Note</b> This command is available in multiple context mode.</p> |

## Monitoring Advanced Threat Detection Statistics

The display output shows the following:

- The average rate in events/sec over fixed time periods.
- The current burst rate in events/sec over the last completed burst interval, which is 1/30th of the average rate interval or 10 seconds, whichever is larger
- The number of times the rates were exceeded (for dropped traffic statistics only)
- The total number of events over the fixed time periods.

The ASA stores the count at the end of each burst period, for a total of 30 completed burst intervals. The unfinished burst interval presently occurring is not included in the average rate. For example, if the average rate interval is 20 minutes, then the burst interval is 20 seconds. If the last burst interval was from 3:00:00 to 3:00:20, and you use the **show** command at 3:00:25, then the last 5 seconds are not included in the output.

The only exception to this rule is if the number of events in the unfinished burst interval already exceeds the number of events in the oldest burst interval (#1 of 30) when calculating the total events. In that case, the ASA calculates the total events as the last 29 complete intervals, plus the events so far in the unfinished burst interval. This exception lets you monitor a large increase in events in real time.

To monitor advanced threat detection statistics, perform one of the following tasks:

| Command                                                                                                                                                                                                                                                                 | Purpose                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <pre>show threat-detection statistics [<b>min-display-rate</b> <i>min_display_rate</i>] <b>top</b> [[<b>access-list</b>   <b>host</b>   <b>port-protocol</b>] [<b>rate-1</b>   <b>rate-2</b>   <b>rate-3</b>]   <b>tcp-intercept</b> [<b>all</b>] <b>detail</b>]]</pre> | <p>Displays the top 10 statistics.</p> <p>The <b>min-display-rate</b> <i>min_display_rate</i> argument limits the display to statistics that exceed the minimum display rate in events per second. You can set the <i>min_display_rate</i> between 0 and 2147483647.</p> <p>If you do not enter any options, the top 10 statistics are shown for all categories.</p> <p>To view the top 10 ACEs that match packets, including both permit and deny ACEs, use the <b>access-list</b> keyword. Permitted and denied traffic are not differentiated in this display. If you enable basic threat detection using the <b>threat-detection basic-threat</b> command, you can track access list denials using the <b>show threat-detection rate acl-drop</b> command.</p> <p>To view only host statistics, use the <b>host</b> keyword. <b>Note:</b> Due to the threat detection algorithm, an interface used as a combination failover and state link could appear in the top 10 hosts; this is expected behavior, and you can ignore this IP address in the display.</p> <p>To view statistics for ports and protocols, use the <b>port-protocol</b> keyword. The <b>port-protocol</b> keyword shows statistics for both ports and protocols (both must be enabled for the display), and shows the combined statistics of TCP/UDP port and IP protocol types. TCP (protocol 6) and UDP (protocol 17) are not included in the display for IP protocols; TCP and UDP ports are, however, included in the display for ports. If you only enable statistics for one of these types, port or protocol, then you will only view the enabled statistics.</p> <p>To view TCP Intercept statistics, use the <b>tcp-intercept</b> keyword. The display includes the top 10 protected servers under attack. The <b>all</b> keyword shows the history data of all the traced servers. The <b>detail</b> keyword shows history sampling data. The ASA samples the number of attacks 30 times during the rate interval, so for the default 30 minute period, statistics are collected every 60 seconds.</p> <p>The <b>rate-1</b> keyword shows the statistics for the smallest fixed rate intervals available in the display; <b>rate-2</b> shows the next largest rate interval; and <b>rate-3</b>, if you have three intervals defined, shows the largest rate interval. For example, the display shows statistics for the last 1 hour, 8 hours, and 24 hours. If you set the <b>rate-1</b> keyword, the ASA shows only the 1 hour time interval.</p> |
| <pre>show threat-detection statistics [<b>min-display-rate</b> <i>min_display_rate</i>] <b>host</b> [<i>ip_address</i> [<i>mask</i>]]</pre>                                                                                                                             | <p>Displays statistics for all hosts or for a specific host or subnet.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <pre>show threat-detection statistics [<b>min-display-rate</b> <i>min_display_rate</i>] <b>port</b> [<i>start_port</i>[-<i>end_port</i>]]</pre>                                                                                                                         | <p>Displays statistics for all ports or for a specific port or range of ports.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |

| Command                                                                                                                                                                                                                                               | Purpose                                                                                                                                                 |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------|
| <pre>show threat-detection statistics [<i>min-display-rate</i> <i>min_display_rate</i>] protocol [<i>protocol_number</i>   ah   eigrp   esp   gre   icmp   igmp   igrp   ip   ipinip   ipsec   nos   ospf   pcp   pim   pptp   snp   tcp   udp]</pre> | <p>Displays statistics for all IP protocols or for a specific protocol.</p> <p>The <i>protocol_number</i> argument is an integer between 0 and 255.</p> |
| <pre>show threat-detection memory</pre>                                                                                                                                                                                                               | <p>Displays how much memory is used by advanced threat detection statistics.</p>                                                                        |

## Examples

The following is sample output from the **show threat-detection statistics host** command:

```
hostname# show threat-detection statistics host

 Average(eps) Current(eps) Trigger Total events
Host:10.0.0.1: tot-ses:289235 act-ses:22571 fw-drop:0 insp-drop:0 null-ses:21438 bad-acc:0
 1-hour Sent byte: 2938 0 0 10580308
 8-hour Sent byte: 367 0 0 10580308
 24-hour Sent byte: 122 0 0 10580308
 1-hour Sent pkts: 28 0 0 104043
 8-hour Sent pkts: 3 0 0 104043
 24-hour Sent pkts: 1 0 0 104043
 20-min Sent drop: 9 0 1 10851
 1-hour Sent drop: 3 0 1 10851
 1-hour Recv byte: 2697 0 0 9712670
 8-hour Recv byte: 337 0 0 9712670
 24-hour Recv byte: 112 0 0 9712670
 1-hour Recv pkts: 29 0 0 104846
 8-hour Recv pkts: 3 0 0 104846
 24-hour Recv pkts: 1 0 0 104846
 20-min Recv drop: 42 0 3 50567
 1-hour Recv drop: 14 0 1 50567
Host:10.0.0.0: tot-ses:1 act-ses:0 fw-drop:0 insp-drop:0 null-ses:0 bad-acc:0
 1-hour Sent byte: 0 0 0 614
 8-hour Sent byte: 0 0 0 614
 24-hour Sent byte: 0 0 0 614
 1-hour Sent pkts: 0 0 0 6
 8-hour Sent pkts: 0 0 0 6
 24-hour Sent pkts: 0 0 0 6
 20-min Sent drop: 0 0 0 4
 1-hour Sent drop: 0 0 0 4
 1-hour Recv byte: 0 0 0 706
 8-hour Recv byte: 0 0 0 706
 24-hour Recv byte: 0 0 0 706
 1-hour Recv pkts: 0 0 0 7
```

Table 56-3 shows each field description.

**Table 56-3** *show threat-detection statistics host* Command Fields

| Field   | Description                                                                          |
|---------|--------------------------------------------------------------------------------------|
| Host    | Shows the host IP address.                                                           |
| tot-ses | Shows the total number of sessions for this host since it was added to the database. |
| act-ses | Shows the total number of active sessions that the host is currently involved in.    |

**Table 56-3** *show threat-detection statistics host Command Fields (continued)*

| Field        | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|--------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| fw-drop      | Shows the number of firewall drops. Firewall drops is a combined rate that includes all firewall-related packet drops tracked in basic threat detection, including access list denials, bad packets, exceeded connection limits, DoS attack packets, suspicious ICMP packets, TCP SYN attack packets, and no data UDP attack packets. It does not include non-firewall-related drops such as interface overload, packets failed at application inspection, and scanning attack detected.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| insp-drop    | Shows the number of packets dropped because they failed application inspection.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| null-ses     | Shows the number of null sessions, which are TCP SYN sessions that did not complete within the 3-second timeout, and UDP sessions that did not have any data sent by its server 3 seconds after the session starts.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| bad-acc      | Shows the number of bad access attempts to host ports that are in a closed state. When a port is determined to be in a null session (see the null-ses field description), the port state of the host is set to HOST_PORT_CLOSE. Any client accessing the port of the host is immediately classified as a bad access without the need to wait for a timeout.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| Average(eps) | Shows the average rate in events/sec over each time period.<br><br>The ASA stores the count at the end of each burst period, for a total of 30 completed burst intervals. The unfinished burst interval presently occurring is not included in the average rate. For example, if the average rate interval is 20 minutes, then the burst interval is 20 seconds. If the last burst interval was from 3:00:00 to 3:00:20, and you use the <b>show</b> command at 3:00:25, then the last 5 seconds are not included in the output.<br><br>The only exception to this rule is if the number of events in the unfinished burst interval already exceeds the number of events in the oldest burst interval (#1 of 30) when calculating the total events. In that case, the ASA calculates the total events as the last 29 complete intervals, plus the events so far in the unfinished burst interval. This exception lets you monitor a large increase in events in real time. |
| Current(eps) | Shows the current burst rate in events/sec over the last completed burst interval, which is 1/30th of the average rate interval or 10 seconds, whichever is larger. For the example specified in the Average(eps) description, the current rate is the rate from 3:19:30 to 3:20:00                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| Trigger      | Shows the number of times the dropped packet rate limits were exceeded. For valid traffic identified in the sent and received bytes and packets rows, this value is always 0, because there are no rate limits to trigger for valid traffic.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| Total events | Shows the total number of events over each rate interval. The unfinished burst interval presently occurring is not included in the total events. The only exception to this rule is if the number of events in the unfinished burst interval already exceeds the number of events in the oldest burst interval (#1 of 30) when calculating the total events. In that case, the ASA calculates the total events as the last 29 complete intervals, plus the events so far in the unfinished burst interval. This exception lets you monitor a large increase in events in real time.                                                                                                                                                                                                                                                                                                                                                                                        |

**Table 56-3** *show threat-detection statistics host Command Fields (continued)*

| Field                               | Description                                                                                                     |
|-------------------------------------|-----------------------------------------------------------------------------------------------------------------|
| 20-min, 1-hour, 8-hour, and 24-hour | Shows statistics for these fixed rate intervals.                                                                |
| Sent byte                           | Shows the number of successful bytes sent from the host.                                                        |
| Sent pkts                           | Shows the number of successful packets sent from the host.                                                      |
| Sent drop                           | Shows the number of packets sent from the host that were dropped because they were part of a scanning attack.   |
| Recv byte                           | Shows the number of successful bytes received by the host.                                                      |
| Recv pkts                           | Shows the number of successful packets received by the host.                                                    |
| Recv drop                           | Shows the number of packets received by the host that were dropped because they were part of a scanning attack. |

## Feature History for Advanced Threat Detection Statistics

Table 56-4 lists each feature change and the platform release in which it was implemented.

**Table 56-4** *Feature History for Advanced Threat Detection Statistics*

| Feature Name                                               | Platform Releases | Feature Information                                                                                                                                                                                                                                        |
|------------------------------------------------------------|-------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Advanced threat detection statistics                       | 8.0(2)            | Advanced threat detection statistics was introduced.<br>The following commands were introduced: <b>threat-detection statistics</b> , <b>show threat-detection statistics</b> .                                                                             |
| TCP Intercept statistics                                   | 8.0(4)/8.1(2)     | TCP Intercept statistics were introduced.<br>The following commands were modified or introduced: <b>threat-detection statistics tcp-intercept</b> , <b>show threat-detection statistics top tcp-intercept</b> , <b>clear threat-detection statistics</b> . |
| Customize host statistics rate intervals                   | 8.1(2)            | You can now customize the number of rate intervals for which statistics are collected. The default number of rates was changed from 3 to 1.<br>The following command was modified: <b>threat-detection statistics host number-of-rates</b> .               |
| Burst rate interval changed to 1/30th of the average rate. | 8.2(1)            | In earlier releases, the burst rate interval was 1/60th of the average rate. To maximize memory usage, the sampling interval was reduced to 30 times during the average rate.                                                                              |

Table 56-4 Feature History for Advanced Threat Detection Statistics (continued)

| Feature Name                                          | Platform Releases | Feature Information                                                                                                                                                                                                                                                                                              |
|-------------------------------------------------------|-------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Customize port and protocol statistics rate intervals | 8.3(1)            | You can now customize the number of rate intervals for which statistics are collected. The default number of rates was changed from 3 to 1.<br><br>The following commands were modified: <b>threat-detection statistics port number-of-rates</b> , <b>threat-detection statistics protocol number-of-rates</b> . |
| Improved memory usage                                 | 8.3(1)            | The memory usage for threat detection was improved.<br><br>The following command was introduced: <b>show threat-detection memory</b> .                                                                                                                                                                           |

## Configuring Scanning Threat Detection

This section includes the following topics:

- [Information About Scanning Threat Detection, page 56-15](#)
- [Guidelines and Limitations, page 56-16](#)
- [Default Settings, page 56-16](#)
- [Configuring Scanning Threat Detection, page 56-17](#)
- [Monitoring Shunned Hosts, Attackers, and Targets, page 56-17](#)

## Information About Scanning Threat Detection

A typical scanning attack consists of a host that tests the accessibility of every IP address in a subnet (by scanning through many hosts in the subnet or sweeping through many ports in a host or subnet). The scanning threat detection feature determines when a host is performing a scan. Unlike IPS scan detection that is based on traffic signatures, the ASA scanning threat detection feature maintains an extensive database that contains host statistics that can be analyzed for scanning activity.

The host database tracks suspicious activity such as connections with no return activity, access of closed service ports, vulnerable TCP behaviors such as non-random IPID, and many more behaviors.

If the scanning threat rate is exceeded, then the ASA sends a syslog message (733101), and optionally shuns the attacker. The ASA tracks two types of rates: the average event rate over an interval, and the burst event rate over a shorter burst interval. The burst event rate is 1/30th of the average rate interval or 10 seconds, whichever is higher. For each event detected that is considered to be part of a scanning attack, the ASA checks the average and burst rate limits. If either rate is exceeded for traffic sent from a host, then that host is considered to be an attacker. If either rate is exceeded for traffic received by a host, then that host is considered to be a target.



### Caution

The scanning threat detection feature can affect the ASA performance and memory significantly while it creates and gathers host- and subnet-based data structure and information.

## Guidelines and Limitations

This section includes the guidelines and limitations for this feature:

### Security Context Guidelines

Supported in single mode only. Multiple mode is not supported.

### Firewall Mode Guidelines

Supported in routed and transparent firewall mode.

### Types of Traffic Monitored

- Only through-the-box traffic is monitored; to-the-box traffic is not included in threat detection.
- Traffic that is denied by an access list does not trigger scanning threat detection; only traffic that is allowed through the ASA and that creates a flow is affected by scanning threat detection.

## Default Settings

Table 56-5 lists the default rate limits for scanning threat detection.

**Table 56-5** Default Rate Limits for Scanning Threat Detection

| Average Rate                            | Burst Rate                                    |
|-----------------------------------------|-----------------------------------------------|
| 5 drops/sec over the last 600 seconds.  | 10 drops/sec over the last 20 second period.  |
| 5 drops/sec over the last 3600 seconds. | 10 drops/sec over the last 120 second period. |

The burst rate is calculated as the average rate every  $N$  seconds, where  $N$  is the burst rate interval. The burst rate interval is 1/30th of the rate interval or 10 seconds, whichever is larger.

## Configuring Scanning Threat Detection

### Detailed Steps

|        | Command                                                                                                                                                                                                                                                                                                                                                                                | Purpose                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|--------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Step 1 | <pre>threat-detection scanning-threat [shun [except {ip-address ip_address mask   object-group network_object_group_id}]]</pre> <p><b>Example:</b></p> <pre>hostname(config)# threat-detection scanning-threat shun except ip-address 10.1.1.0 255.255.255.0</pre>                                                                                                                     | Enables scanning threat detection. By default, the system log message 733101 is generated when a host is identified as an attacker. Enter this command multiple times to identify multiple IP addresses or network object groups to exempt from shunning.                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| Step 2 | <pre>threat-detection scanning-threat shun duration seconds</pre> <p><b>Example:</b></p> <pre>hostname(config)# threat-detection scanning-threat shun duration 2000</pre>                                                                                                                                                                                                              | (Optional) Sets the duration of the shun for attacking hosts.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| Step 3 | <pre>threat-detection rate scanning-threat rate-interval rate_interval average-rate av_rate burst-rate burst_rate</pre> <p><b>Example:</b></p> <pre>hostname(config)# threat-detection rate scanning-threat rate-interval 1200 average-rate 10 burst-rate 20</pre> <pre>hostname(config)# threat-detection rate scanning-threat rate-interval 2400 average-rate 10 burst-rate 20</pre> | (Optional) Changes the default event limit for when the ASA identifies a host as an attacker or as a target. If you already configured this command as part of the basic threat detection configuration (see the <a href="#">“Configuring Basic Threat Detection Statistics”</a> section on page 56-2), then those settings are shared with the scanning threat detection feature; you cannot configure separate rates for basic and scanning threat detection. If you do not set the rates using this command, the default values are used for both the scanning threat detection feature and the basic threat detection feature. You can configure up to three different rate intervals, by entering separate commands. |

## Monitoring Shunned Hosts, Attackers, and Targets

To monitor shunned hosts and attackers and targets, perform one of the following tasks:

| Command                                 | Purpose                                        |
|-----------------------------------------|------------------------------------------------|
| <code>show threat-detection shun</code> | Displays the hosts that are currently shunned. |

| Command                                                                | Purpose                                                                                                                                                                                                                      |
|------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>clear threat-detection shun [ip_address [mask]]</code>           | Releases a host from being shunned. If you do not specify an IP address, all hosts are cleared from the shun list.                                                                                                           |
| <code>show threat-detection scanning-threat [attacker   target]</code> | Displays hosts that the ASA decides are attackers (including hosts on the shun list), and displays the hosts that are the target of an attack. If you do not enter an option, both attackers and target hosts are displayed. |

## Examples

The following is sample output from the `show threat-detection shun` command:

```
hostname# show threat-detection shun
Shunned Host List:
10.1.1.6
192.168.6.7
```

To release the host at 10.1.1.6, enter the following command:

```
hostname# clear threat-detection shun 10.1.1.6
```

The following is sample output from the `show threat-detection scanning-threat attacker` command:

```
hostname# show threat-detection scanning-threat attacker
10.1.2.3
10.8.3.6
209.165.200.225
```

## Feature History for Scanning Threat Detection

Table 56-6 lists each feature change and the platform release in which it was implemented.

**Table 56-6** Feature History for Scanning Threat Detection

| Feature Name              | Platform Releases | Feature Information                                                                                                                                                                                                                                                                                   |
|---------------------------|-------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Scanning threat detection | 8.0(2)            | Scanning threat detection was introduced.<br>The following commands were introduced: <b>threat-detection scanning-threat</b> , <b>threat-detection rate scanning-threat</b> , <b>show threat-detection scanning-threat</b> , <b>show threat-detection shun</b> , <b>clear threat-detection shun</b> . |
| Shun duration             | 8.0(4)/8.1(2)     | You can now set the shun duration,<br>The following command was introduced: <b>threat-detection scanning-threat shun duration</b> .                                                                                                                                                                   |

**Table 56-6** Feature History for Scanning Threat Detection (continued)

| Feature Name                                               | Platform Releases | Feature Information                                                                                                                                                           |
|------------------------------------------------------------|-------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Burst rate interval changed to 1/30th of the average rate. | 8.2(1)            | In earlier releases, the burst rate interval was 1/60th of the average rate. To maximize memory usage, the sampling interval was reduced to 30 times during the average rate. |
| Improved memory usage                                      | 8.3(1)            | The memory usage for threat detection was improved.                                                                                                                           |

## Configuration Examples for Threat Detection

The following example configures basic threat detection statistics, and changes the DoS attack rate settings. All advanced threat detection statistics are enabled, with the host statistics number of rate intervals lowered to 2. The TCP Intercept rate interval is also customized. Scanning threat detection is enabled with automatic shunning for all addresses except 10.1.1.0/24. The scanning threat rate intervals are customized.

```

threat-detection basic-threat
threat-detection rate dos-drop rate-interval 600 average-rate 60 burst-rate 100
threat-detection statistics
threat-detection statistics host number-of-rate 2
threat-detection statistics tcp-intercept rate-interval 60 burst-rate 800 average-rate 600
threat-detection scanning-threat shun except ip-address 10.1.1.0 255.255.255.0
threat-detection rate scanning-threat rate-interval 1200 average-rate 10 burst-rate 20

threat-detection rate scanning-threat rate-interval 2400 average-rate 10 burst-rate 20

```





## CHAPTER 57

# Using Protection Tools

---

This chapter describes some of the many tools available to protect your network and includes the following sections:

- [Preventing IP Spoofing, page 57-1](#)
- [Configuring the Fragment Size, page 57-2](#)
- [Blocking Unwanted Connections, page 57-2](#)
- [Configuring IP Audit for Basic IPS Support, page 57-3](#)

## Preventing IP Spoofing

This section lets you enable Unicast Reverse Path Forwarding on an interface. Unicast RPF guards against IP spoofing (a packet uses an incorrect source IP address to obscure its true source) by ensuring that all packets have a source IP address that matches the correct source interface according to the routing table.

Normally, the ASA only looks at the destination address when determining where to forward the packet. Unicast RPF instructs the ASA to also look at the source address; this is why it is called Reverse Path Forwarding. For any traffic that you want to allow through the ASA, the ASA routing table must include a route back to the source address. See RFC 2267 for more information.

For outside traffic, for example, the ASA can use the default route to satisfy the Unicast RPF protection. If traffic enters from an outside interface, and the source address is not known to the routing table, the ASA uses the default route to correctly identify the outside interface as the source interface.

If traffic enters the outside interface from an address that is known to the routing table, but is associated with the inside interface, then the ASA drops the packet. Similarly, if traffic enters the inside interface from an unknown source address, the ASA drops the packet because the matching route (the default route) indicates the outside interface.

Unicast RPF is implemented as follows:

- ICMP packets have no session, so each packet is checked.
- UDP and TCP have sessions, so the initial packet requires a reverse route lookup. Subsequent packets arriving during the session are checked using an existing state maintained as part of the session. Non-initial packets are checked to ensure they arrived on the same interface used by the initial packet.

To enable Unicast RPF, enter the following command:

```
hostname(config)# ip verify reverse-path interface interface_name
```

## Configuring the Fragment Size

By default, the ASA allows up to 24 fragments per IP packet, and up to 200 fragments awaiting reassembly. You might need to let fragments on your network if you have an application that routinely fragments packets, such as NFS over UDP. However, if you do not have an application that fragments traffic, we recommend that you do not allow fragments through the ASA. Fragmented packets are often used as DoS attacks.

To set disallow fragments, enter the following command:

```
hostname(config)# fragment chain 1 [interface_name]
```

Enter an interface name if you want to prevent fragmentation on a specific interface. By default, this command applies to all interfaces.

## Blocking Unwanted Connections

If you know that a host is attempting to attack your network (for example, syslog messages show an attack), then you can block (or shun) connections based on the source IP address. All existing connections and new connections are blocked until you remove the shun.



### Note

If you have an IPS that monitors traffic, such as an AIP SSM, then the IPS can shun connections automatically.

To shun a connection manually, perform the following steps:

**Step 1** If necessary, view information about the connection by entering the following command:

```
hostname# show conn
```

The ASA shows information about each connection, such as the following:

```
TCP out 64.101.68.161:4300 in 10.86.194.60:23 idle 0:00:00 bytes 1297 flags UIO
```

**Step 2** To shun connections from the source IP address, enter the following command:

```
hostname(config)# shun src_ip [dst_ip src_port dest_port [protocol]] [vlan vlan_id]
```

If you enter only the source IP address, then all *future* connections are shunned; existing connections remain active.

To drop an existing connection, as well as blocking future connections from the source IP address, enter the destination IP address, source and destination ports, and the protocol. By default, the protocol is 0 for IP. Note that specifying the additional parameters is a convenient way to also drop a specific current connection; the shun, however, remains in place for all future connections from the source IP address, regardless of destination parameters.

For multiple context mode, you can enter this command in the admin context, and by specifying a VLAN ID that is assigned to an interface in other contexts, you can shun the connection in other contexts.

**Step 3** To remove the shun, enter the following command:

```
hostname(config)# no shun src_ip [vlan vlan_id]
```

# Configuring IP Audit for Basic IPS Support

The IP audit feature provides basic IPS support for the ASA that does not have an AIP SSM. It supports a basic list of signatures, and you can configure the ASA to perform one or more actions on traffic that matches a signature.

This section includes the following topics:

- [Configuring IP Audit, page 57-3](#)
- [IP Audit Signature List, page 57-4](#)

## Configuring IP Audit

To enable IP audit, perform the following steps:

---

**Step 1** To define an IP audit policy for informational signatures, enter the following command:

```
hostname(config)# ip audit name name info [action [alarm] [drop] [reset]]
```

Where **alarm** generates a system message showing that a packet matched a signature, **drop** drops the packet, and **reset** drops the packet and closes the connection. If you do not define an action, then the default action is to generate an alarm.

**Step 2** To define an IP audit policy for attack signatures, enter the following command:

```
hostname(config)# ip audit name name attack [action [alarm] [drop] [reset]]
```

Where **alarm** generates a system message showing that a packet matched a signature, **drop** drops the packet, and **reset** drops the packet and closes the connection. If you do not define an action, then the default action is to generate an alarm.

**Step 3** To assign the policy to an interface, enter the following command:

```
ip audit interface interface_name policy_name
```

**Step 4** To disable signatures, or for more information about signatures, see the **ip audit signature** command in the command reference.

---

-

## IP Audit Signature List

Table 57-1 lists supported signatures and system message numbers.

**Table 57-1** Signature IDs and System Message Numbers

| Signature ID | Message Number | Signature Title                | Signature Type | Description                                                                                                                                                                                                                           |
|--------------|----------------|--------------------------------|----------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1000         | 400000         | IP options-Bad Option List     | Informational  | Triggers on receipt of an IP datagram where the list of IP options in the IP datagram header is incomplete or malformed. The IP options list contains one or more options that perform various network management or debugging tasks. |
| 1001         | 400001         | IP options-Record Packet Route | Informational  | Triggers on receipt of an IP datagram where the IP option list for the datagram includes option 7 (Record Packet Route).                                                                                                              |
| 1002         | 400002         | IP options-Timestamp           | Informational  | Triggers on receipt of an IP datagram where the IP option list for the datagram includes option 4 (Timestamp).                                                                                                                        |
| 1003         | 400003         | IP options-Security            | Informational  | Triggers on receipt of an IP datagram where the IP option list for the datagram includes option 2 (Security options).                                                                                                                 |
| 1004         | 400004         | IP options-Loose Source Route  | Informational  | Triggers on receipt of an IP datagram where the IP option list for the datagram includes option 3 (Loose Source Route).                                                                                                               |
| 1005         | 400005         | IP options-SATNET ID           | Informational  | Triggers on receipt of an IP datagram where the IP option list for the datagram includes option 8 (SATNET stream identifier).                                                                                                         |
| 1006         | 400006         | IP options-Strict Source Route | Informational  | Triggers on receipt of an IP datagram in which the IP option list for the datagram includes option 2 (Strict Source Routing).                                                                                                         |
| 1100         | 400007         | IP Fragment Attack             | Attack         | Triggers when any IP datagram is received with an offset value less than 5 but greater than 0 indicated in the offset field.                                                                                                          |
| 1102         | 400008         | IP Impossible Packet           | Attack         | Triggers when an IP packet arrives with source equal to destination address. This signature will catch the so-called Land Attack.                                                                                                     |

**Table 57-1** Signature IDs and System Message Numbers (continued)

| Signature ID | Message Number | Signature Title                     | Signature Type | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|--------------|----------------|-------------------------------------|----------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1103         | 400009         | IP Overlapping Fragments (Teardrop) | Attack         | Triggers when two fragments contained within the same IP datagram have offsets that indicate that they share positioning within the datagram. This could mean that fragment A is being completely overwritten by fragment B, or that fragment A is partially being overwritten by fragment B. Some operating systems do not properly handle fragments that overlap in this manner and may throw exceptions or behave in other undesirable ways upon receipt of overlapping fragments, which is how the Teardrop attack works to create a DoS. |
| 2000         | 400010         | ICMP Echo Reply                     | Informational  | Triggers when a IP datagram is received with the protocol field of the IP header set to 1 (ICMP) and the type field in the ICMP header set to 0 (Echo Reply).                                                                                                                                                                                                                                                                                                                                                                                 |
| 2001         | 400011         | ICMP Host Unreachable               | Informational  | Triggers when an IP datagram is received with the protocol field of the IP header set to 1 (ICMP) and the type field in the ICMP header set to 3 (Host Unreachable).                                                                                                                                                                                                                                                                                                                                                                          |
| 2002         | 400012         | ICMP Source Quench                  | Informational  | Triggers when an IP datagram is received with the protocol field of the IP header set to 1 (ICMP) and the type field in the ICMP header set to 4 (Source Quench).                                                                                                                                                                                                                                                                                                                                                                             |
| 2003         | 400013         | ICMP Redirect                       | Informational  | Triggers when a IP datagram is received with the protocol field of the IP header set to 1 (ICMP) and the type field in the ICMP header set to 5 (Redirect).                                                                                                                                                                                                                                                                                                                                                                                   |
| 2004         | 400014         | ICMP Echo Request                   | Informational  | Triggers when a IP datagram is received with the protocol field of the IP header set to 1 (ICMP) and the type field in the ICMP header set to 8 (Echo Request).                                                                                                                                                                                                                                                                                                                                                                               |
| 2005         | 400015         | ICMP Time Exceeded for a Datagram   | Informational  | Triggers when a IP datagram is received with the protocol field of the IP header set to 1 (ICMP) and the type field in the ICMP header set to 11 (Time Exceeded for a Datagram).                                                                                                                                                                                                                                                                                                                                                              |
| 2006         | 400016         | ICMP Parameter Problem on Datagram  | Informational  | Triggers when a IP datagram is received with the protocol field of the IP header set to 1 (ICMP) and the type field in the ICMP header set to 12 (Parameter Problem on Datagram).                                                                                                                                                                                                                                                                                                                                                             |
| 2007         | 400017         | ICMP Timestamp Request              | Informational  | Triggers when a IP datagram is received with the protocol field of the IP header set to 1 (ICMP) and the type field in the ICMP header set to 13 (Timestamp Request).                                                                                                                                                                                                                                                                                                                                                                         |

Table 57-1 Signature IDs and System Message Numbers (continued)

| Signature ID | Message Number | Signature Title           | Signature Type | Description                                                                                                                                                                                                                                                                                                                                                                                                     |
|--------------|----------------|---------------------------|----------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 2008         | 400018         | ICMP Timestamp Reply      | Informational  | Triggers when a IP datagram is received with the protocol field of the IP header set to 1 (ICMP) and the type field in the ICMP header set to 14 (Timestamp Reply).                                                                                                                                                                                                                                             |
| 2009         | 400019         | ICMP Information Request  | Informational  | Triggers when a IP datagram is received with the protocol field of the IP header set to 1 (ICMP) and the type field in the ICMP header set to 15 (Information Request).                                                                                                                                                                                                                                         |
| 2010         | 400020         | ICMP Information Reply    | Informational  | Triggers when a IP datagram is received with the protocol field of the IP header set to 1 (ICMP) and the type field in the ICMP header set to 16 (ICMP Information Reply).                                                                                                                                                                                                                                      |
| 2011         | 400021         | ICMP Address Mask Request | Informational  | Triggers when a IP datagram is received with the protocol field of the IP header set to 1 (ICMP) and the type field in the ICMP header set to 17 (Address Mask Request).                                                                                                                                                                                                                                        |
| 2012         | 400022         | ICMP Address Mask Reply   | Informational  | Triggers when a IP datagram is received with the protocol field of the IP header set to 1 (ICMP) and the type field in the ICMP header set to 18 (Address Mask Reply).                                                                                                                                                                                                                                          |
| 2150         | 400023         | Fragmented ICMP Traffic   | Attack         | Triggers when a IP datagram is received with the protocol field of the IP header set to 1 (ICMP) and either the more fragments flag is set to 1 (ICMP) or there is an offset indicated in the offset field.                                                                                                                                                                                                     |
| 2151         | 400024         | Large ICMP Traffic        | Attack         | Triggers when a IP datagram is received with the protocol field of the IP header set to 1 (ICMP) and the IP length > 1024.                                                                                                                                                                                                                                                                                      |
| 2154         | 400025         | Ping of Death Attack      | Attack         | Triggers when a IP datagram is received with the protocol field of the IP header set to 1 (ICMP), the Last Fragment bit is set, and $(IP\ offset * 8) + (IP\ data\ length) > 65535$ that is to say, the IP offset (which represents the starting position of this fragment in the original packet, and which is in 8 byte units) plus the rest of the packet is greater than the maximum size for an IP packet. |
| 3040         | 400026         | TCP NULL flags            | Attack         | Triggers when a single TCP packet with none of the SYN, FIN, ACK, or RST flags set has been sent to a specific host.                                                                                                                                                                                                                                                                                            |
| 3041         | 400027         | TCP SYN+FIN flags         | Attack         | Triggers when a single TCP packet with the SYN and FIN flags are set and is sent to a specific host.                                                                                                                                                                                                                                                                                                            |

|      |        |                                |               |                                                                                                                                   |
|------|--------|--------------------------------|---------------|-----------------------------------------------------------------------------------------------------------------------------------|
| 1002 | 400002 | IP options-Timestamp           | Informational | Triggers on receipt of an IP datagram where the IP option list for the datagram includes option 4 (Timestamp).                    |
| 1003 | 400003 | IP options-Security            | Informational | Triggers on receipt of an IP datagram where the IP option list for the datagram includes option 2 (Security options).             |
| 1004 | 400004 | IP options-Loose Source Route  | Informational | Triggers on receipt of an IP datagram where the IP option list for the datagram includes option 3 (Loose Source Route).           |
| 1005 | 400005 | IP options-SATNET ID           | Informational | Triggers on receipt of an IP datagram where the IP option list for the datagram includes option 8 (SATNET stream identifier).     |
| 1006 | 400006 | IP options-Strict Source Route | Informational | Triggers on receipt of an IP datagram in which the IP option list for the datagram includes option 2 (Strict Source Routing).     |
| 1100 | 400007 | IP Fragment Attack             | Attack        | Triggers when any IP datagram is received with an offset value less than 5 but greater than 0 indicated in the offset field.      |
| 1102 | 400008 | IP Impossible Packet           | Attack        | Triggers when an IP packet arrives with source equal to destination address. This signature will catch the so-called Land Attack. |

| 2002                                                                   | 400012         | ICMP Source Quench                 | Informational  | Triggers when an IP datagram is received with the protocol field of the IP header set to 1 (ICMP) and the type field in the ICMP header set to 4 (Source Quench).                 |
|------------------------------------------------------------------------|----------------|------------------------------------|----------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 2003                                                                   | 400013         | ICMP Redirect                      | Informational  | Triggers when a IP datagram is received with the protocol field of the IP header set to 1 (ICMP) and the type field in the ICMP header set to 5 (Redirect).                       |
| 2004                                                                   | 400014         | ICMP Echo Request                  | Informational  | Triggers when a IP datagram is received with the protocol field of the IP header set to 1 (ICMP) and the type field in the ICMP header set to 8 (Echo Request).                   |
| 2005                                                                   | 400015         | ICMP Time Exceeded for a Datagram  | Informational  | Triggers when a IP datagram is received with the protocol field of the IP header set to 1 (ICMP) and the type field in the ICMP header set to 11 (Time Exceeded for a Datagram).  |
| 2006                                                                   | 400016         | ICMP Parameter Problem on Datagram | Informational  | Triggers when a IP datagram is received with the protocol field of the IP header set to 1 (ICMP) and the type field in the ICMP header set to 12 (Parameter Problem on Datagram). |
| <b>Table 57-1 Signature IDs and System Message Numbers (continued)</b> |                |                                    |                |                                                                                                                                                                                   |
| 2007                                                                   | 400017         | ICMP Timestamp Request             | Informational  | Triggers when a IP datagram is received with the protocol field of the IP header set to 1 (ICMP) and the type field in the ICMP header set to 13 (Timestamp Request).             |
| Signature ID                                                           | Message Number | Signature Title                    | Signature Type | Description                                                                                                                                                                       |

|      |        |                         |        |                                                                                                                                                                                                                                                                                                                                                                                                            |
|------|--------|-------------------------|--------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 2150 | 400023 | Fragmented ICMP Traffic | Attack | Triggers when a IP datagram is received with the protocol field of the IP header set to 1 (ICMP) and either the more fragments flag is set to 1 (ICMP) or there is an offset indicated in the offset field.                                                                                                                                                                                                |
| 2151 | 400024 | Large ICMP Traffic      | Attack | Triggers when a IP datagram is received with the protocol field of the IP header set to 1 (ICMP) and the IP length > 1024.                                                                                                                                                                                                                                                                                 |
| 2154 | 400025 | Ping of Death Attack    | Attack | Triggers when a IP datagram is received with the protocol field of the IP header set to 1 (ICMP), the Last Fragment bit is set, and (IP offset * 8) + (IP data length) > 65535 that is to say, the IP offset (which represents the starting position of this fragment in the original packet, and which is in 8 byte units) plus the rest of the packet is greater than the maximum size for an IP packet. |
| 3040 | 400026 | TCP NULL flags          | Attack | Triggers when a single TCP packet with none of the SYN, FIN, ACK, or RST flags set has been sent to a specific host.                                                                                                                                                                                                                                                                                       |
| 3041 | 400027 | TCP SYN+FIN flags       | Attack | Triggers when a single TCP packet with the SYN and FIN flags are set and is sent to a specific host.                                                                                                                                                                                                                                                                                                       |

**Table 57-1** Signature IDs and System Message Numbers (continued)

| Signature ID | Message Number | Signature Title | Signature Type | Description |
|--------------|----------------|-----------------|----------------|-------------|
|--------------|----------------|-----------------|----------------|-------------|

Table 57-1 Signature IDs and System Message Numbers (continued)

| Signature ID | Message Number | Signature Title                                 | Signature Type | Description                                                                                     |
|--------------|----------------|-------------------------------------------------|----------------|-------------------------------------------------------------------------------------------------|
| 6051         | 400035         | DNS Zone Transfer                               | Informational  | Triggers on normal DNS zone transfers, in which the source port is 53.                          |
| 6052         | 400036         | DNS Zone Transfer from High Port                | Informational  | Triggers on an illegitimate DNS zone transfer, in which the source port is not equal to 53.     |
| 6053         | 400037         | DNS Request for All Records                     | Informational  | Triggers on a DNS request for all records.                                                      |
| 6100         | 400038         | RPC Port Registration                           | Informational  | Triggers when attempts are made to register new RPC services on a target host.                  |
| 6101         | 400039         | RPC Port Unregistration                         | Informational  | Triggers when attempts are made to unregister existing RPC services on a target host.           |
| 6102         | 400040         | RPC Dump                                        | Informational  | Triggers when an RPC dump request is issued to a target host.                                   |
| 6103         | 400041         | Proxied RPC Request                             | Attack         | Triggers when a proxied RPC request is sent to the portmapper of a target host.                 |
| 6150         | 400042         | ypserv (YP server daemon) Portmap Request       | Informational  | Triggers when a request is made to the portmapper for the YP server daemon (ypserv) port.       |
| 6151         | 400043         | ypbind (YP bind daemon) Portmap Request         | Informational  | Triggers when a request is made to the portmapper for the YP bind daemon (ypbind) port.         |
| 6152         | 400044         | yppasswdd (YP password daemon) Portmap Request  | Informational  | Triggers when a request is made to the portmapper for the YP password daemon (yppasswdd) port.  |
| 6153         | 400045         | ypupdated (YP update daemon) Portmap Request    | Informational  | Triggers when a request is made to the portmapper for the YP update daemon (ypupdated) port.    |
| 6154         | 400046         | ypxfrd (YP transfer daemon) Portmap Request     | Informational  | Triggers when a request is made to the portmapper for the YP transfer daemon (ypxfrd) port.     |
| 6155         | 400047         | mountd (mount daemon) Portmap Request           | Informational  | Triggers when a request is made to the portmapper for the mount daemon (mountd) port.           |
| 6175         | 400048         | rexed (remote execution daemon) Portmap Request | Informational  | Triggers when a request is made to the portmapper for the remote execution daemon (rexed) port. |

**Table 57-1** Signature IDs and System Message Numbers (continued)

| <b>Signature ID</b> | <b>Message Number</b> | <b>Signature Title</b>                 | <b>Signature Type</b> | <b>Description</b>                                                                                                                                                                                                          |
|---------------------|-----------------------|----------------------------------------|-----------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 6180                | 400049                | rexd (remote execution daemon) Attempt | Informational         | Triggers when a call to the rexd program is made. The remote execution daemon is the server responsible for remote program execution. This may be indicative of an attempt to gain unauthorized access to system resources. |
| 6190                | 400050                | statd Buffer Overflow                  | Attack                | Triggers when a large statd request is sent. This could be an attempt to overflow a buffer and gain access to system resources.                                                                                             |





## **PART 14**

### **Configuring Modules**





## CHAPTER 58

# Configuring the ASA IPS Module

---

This chapter describes how to configure the ASA IPS module. The ASA IPS module might be a physical module or a software module, depending on your ASA model. For a list of supported ASA IPS modules per ASA model, see the *Cisco ASA Compatibility Matrix*:

<http://www.cisco.com/en/US/docs/security/asa/compatibility/asamatrx.html>

This chapter includes the following sections:

- [Information About the ASA IPS module, page 58-1](#)
- [Licensing Requirements for the ASA IPS module, page 58-5](#)
- [Guidelines and Limitations, page 58-5](#)
- [Default Settings, page 58-6](#)
- [Configuring the ASA IPS module, page 58-6](#)
- [Monitoring the ASA IPS module, page 58-20](#)
- [Troubleshooting the ASA IPS module, page 58-21](#)
- [Configuration Examples for the ASA IPS module, page 58-25](#)
- [Feature History for the ASA IPS module, page 58-25](#)

## Information About the ASA IPS module

The ASA IPS module runs advanced IPS software that provides proactive, full-featured intrusion prevention services to stop malicious traffic, including worms and network viruses, before they can affect your network. This section includes the following topics:

- [How the ASA IPS module Works with the ASA, page 58-2](#)
- [Operating Modes, page 58-2](#)
- [Using Virtual Sensors \(ASA 5510 and Higher\), page 58-3](#)
- [Information About Management Access, page 58-4](#)

## How the ASA IPS module Works with the ASA


The ASA IPS module runs a separate application from the ASA. The ASA IPS module might include an external management interface so you can connect to the ASA IPS module directly; if it does not have a management interface, you can connect to the ASA IPS module through the ASA interface. Any other interfaces on the ASA IPS module, if available for your model, are used for ASA traffic only.

Traffic goes through the firewall checks before being forwarded to the ASA IPS module. When you identify traffic for IPS inspection on the ASA, traffic flows through the ASA and the ASA IPS module as follows. **Note:** This example is for “inline mode.” See the “[Operating Modes](#)” section on page 58-2 for information about “promiscuous mode,” where the ASA only sends a copy of the traffic to the ASA IPS module.

1. Traffic enters the ASA.
2. Incoming VPN traffic is decrypted.
3. Firewall policies are applied.
4. Traffic is sent to the ASA IPS module.
5. The ASA IPS module applies its security policy to the traffic, and takes appropriate actions.
6. Valid traffic is sent back to the ASA; the ASA IPS module might block some traffic according to its security policy, and that traffic is not passed on.
7. Outgoing VPN traffic is encrypted.
8. Traffic exits the ASA.

Figure 58-1 shows the traffic flow when running the ASA IPS module in inline mode. In this example, the ASA IPS module automatically blocks traffic that it identified as an attack. All other traffic is forwarded through the ASA.

**Figure 58-1** ASA IPS module Traffic Flow in the ASA: Inline Mode

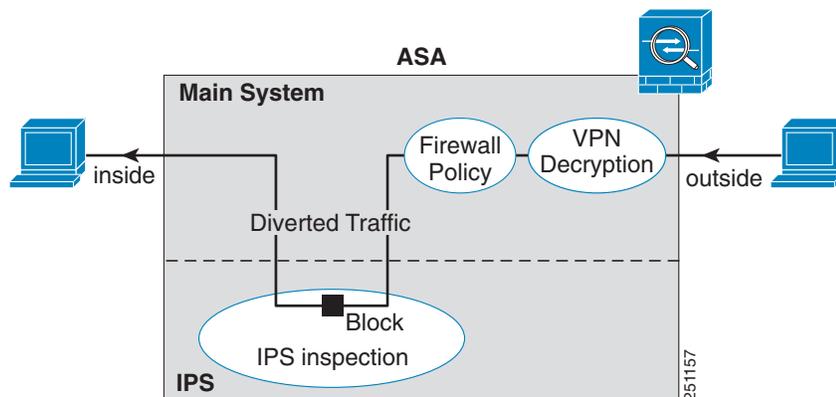

## Operating Modes


You can send traffic to the ASA IPS module using one of the following modes:

- **Inline mode**—This mode places the ASA IPS module directly in the traffic flow (see Figure 58-1). No traffic that you identified for IPS inspection can continue through the ASA without first passing through, and being inspected by, the ASA IPS module. This mode is the most secure because every

packet that you identify for inspection is analyzed before being allowed through. Also, the ASA IPS module can implement a blocking policy on a packet-by-packet basis. This mode, however, can affect throughput.

- Promiscuous mode—This mode sends a duplicate stream of traffic to the ASA IPS module. This mode is less secure, but has little impact on traffic throughput. Unlike inline mode, in promiscuous mode the ASA IPS module can only block traffic by instructing the ASA to shun the traffic or by resetting a connection on the ASA. Also, while the ASA IPS module is analyzing the traffic, a small amount of traffic might pass through the ASA before the ASA IPS module can shun it. [Figure 58-2](#) shows the ASA IPS module in promiscuous mode. In this example, the ASA IPS module sends a shun message to the ASA for traffic it identified as a threat.

**Figure 58-2** ASA IPS module Traffic Flow in the ASA: Promiscuous Mode

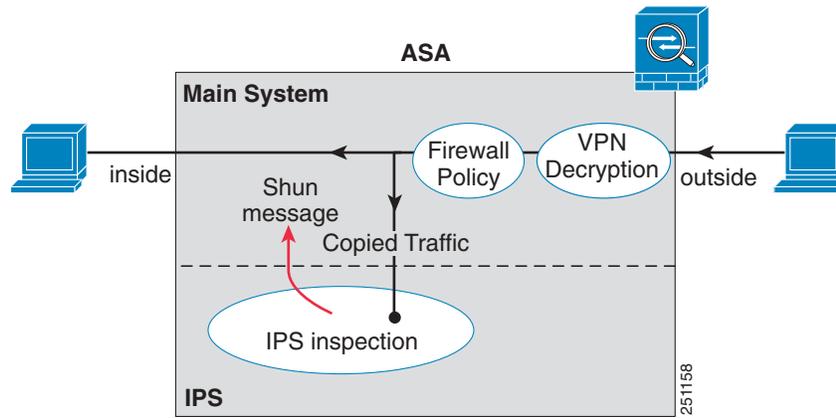

## Using Virtual Sensors (ASA 5510 and Higher)

The ASA IPS module running IPS software Version 6.0 and later can run multiple virtual sensors, which means you can configure multiple security policies on the ASA IPS module. You can assign each ASA security context or single mode ASA to one or more virtual sensors, or you can assign multiple security contexts to the same virtual sensor. See the IPS documentation for more information about virtual sensors, including the maximum number of sensors supported.

[Figure 58-3](#) shows one security context paired with one virtual sensor (in inline mode), while two security contexts share the same virtual sensor.

**Figure 58-3 Security Contexts and Virtual Sensors**


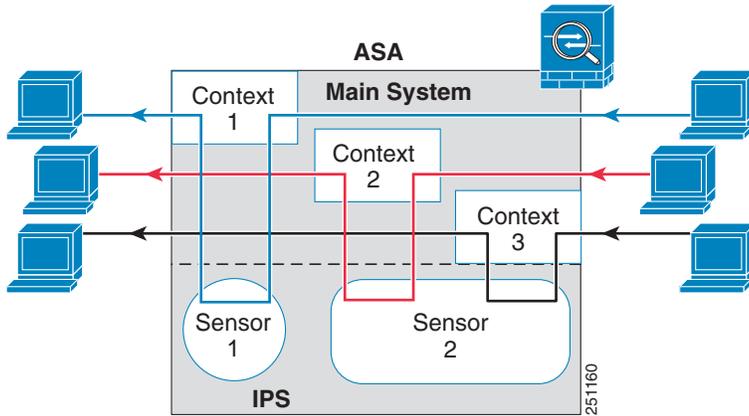


Figure 58-4 shows a single mode ASA paired with multiple virtual sensors (in inline mode); each defined traffic flow goes to a different sensor.

**Figure 58-4 Single Mode ASA with Multiple Virtual Sensors**

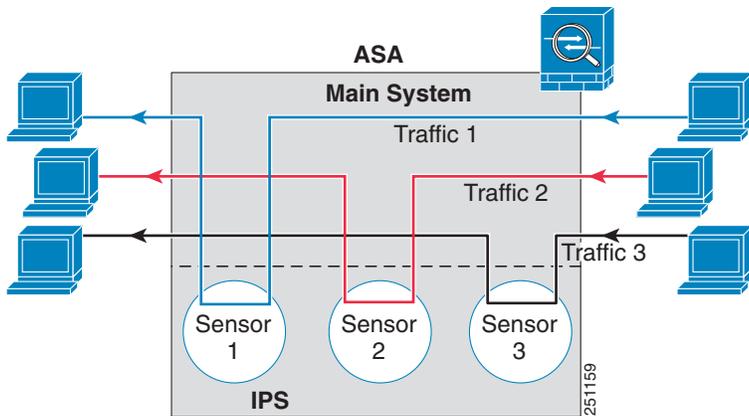

## Information About Management Access

You can manage the IPS application using the following methods:

- Sessioning to the module from the ASA—If you have CLI access to the ASA, then you can session to the module and access the module CLI. See the [“Sessioning to the Module from the ASA”](#) section on page 58-9.
- Connecting to the IPS management interface using ASDM or SSH—After you launch ASDM on the ASA, ASDM connects to the module management interface to configure the IPS application. For SSH, you can access the module CLI directly on the module management interface. (Telnet access requires additional configuration in the module application). The module management interface can also be used for sending syslog messages or allowing updates for the module application, such as signature database updates. See the [“Connecting Management Interface Cables”](#) section on page 58-7.

See the following information about the management interface:

- ASA 5510, ASA 5520, ASA 5540, ASA 5580, ASA 5585-X—The IPS management interface is a separate external Gigabit Ethernet interface. If you cannot use the default address (see the [“Default Settings” section on page 58-6](#)), you can change the interface IP address and other network parameters. See the [“Configuring Basic IPS Module Network Settings” section on page 58-10](#). The IPS management IP address can be on the same network as the ASA (connected through a switch), or on a different network (through a router). If you use a different network, be sure to set the IPS gateway as appropriate.
- ASA 5512-X, ASA 5515-X, ASA 5525-X, ASA 5545-X, ASA 5555-X—These models run the ASA IPS module as a software module. The IPS management interface shares the Management 0/0 interface with the ASA. Separate MAC addresses and IP addresses are supported for the ASA and ASA IPS module. You must perform configuration of the IPS IP address within the IPS operating system (using the CLI or ASDM). However, physical characteristics (such as enabling the interface) are configured on the ASA. You can change the interface IP address and other network parameters. You should set the default gateway to be an upstream router instead of the ASA management interface. Because the ASA management interface does not allow through-traffic, traffic destined to another network is not allowed through the ASA. See the [“Configuring Basic IPS Module Network Settings” section on page 58-10](#).
- ASA 5505—You can use an ASA VLAN to allow access to an internal management IP address over the backplane. See the [“\(ASA 5505\) Configuring Basic Network Settings” section on page 58-11](#) to change the network settings.

## Licensing Requirements for the ASA IPS module

The following table shows the licensing requirements for this feature:

| Model                                                                  | License Requirement              |
|------------------------------------------------------------------------|----------------------------------|
| ASA 5512-X,<br>ASA 5515-X,<br>ASA 5525-X,<br>ASA 5545-X,<br>ASA 5555-X | IPS Module License. <sup>1</sup> |
| All other models                                                       | Base License.                    |

1. For failover pairs, both units require the IPS module license.

The ASA IPS module requires a separate Cisco Services for IPS license in order to support signature updates. All other updates are available without a license.

## Guidelines and Limitations

This section includes the guidelines and limitations for this feature.

### Context Mode Guidelines

The ASA 5505 does not support multiple context mode, so multiple context features, such as virtual sensors, are not supported on the AIP SSC.

**Firewall Mode Guidelines**

Supported in routed and transparent firewall mode.

**Model Guidelines**

- See the *Cisco ASA Compatibility Matrix* for information about which models support which modules:  
<http://www.cisco.com/en/US/docs/security/asa/compatibility/asamatrix.html>
- The ASA 5505 does not support multiple context mode, so multiple context features, such as virtual sensors, are not supported on the AIP SSC.
- The ASA IPS module for the ASA 5510 and higher supports higher performance requirements, while the ASA IPS module for the ASA 5505 is designed for a small office installation. The following features are not supported for the ASA 5505:
  - Virtual sensors
  - Anomaly detection
  - Unretirement of default retired signatures

**Additional Guidelines**

You cannot change the software type installed on the module; if you purchase an ASA IPS module, you cannot later install other software on it.

## Default Settings

Table 58-1 lists the default settings for the ASA IPS module.

**Table 58-1**      *Default Network Parameters*

| Parameters                       | Default                                                |
|----------------------------------|--------------------------------------------------------|
| Management VLAN (ASA 5505 only)  | VLAN 1                                                 |
| Management IP address            | 192.168.1.2/24                                         |
| Management hosts (ASA 5505 only) | 192.168.1.5 through 192.168.1.254                      |
| Gateway                          | 192.168.1.1/24 (the default ASA management IP address) |
| Username                         | cisco                                                  |
| Password                         | cisco                                                  |

**Note**

The default management IP address on the ASA is 192.168.1.1/24.

## Configuring the ASA IPS module

This section describes how to configure the ASA IPS module and includes the following topics:

- [Task Flow for the ASA IPS Module, page 58-7](#)
- [Connecting Management Interface Cables, page 58-7](#)

- [Configuring Basic IPS Module Network Settings](#), page 58-10
- [\(ASA 5512-X through ASA 5555-X\) Installing the Software Module](#), page 58-14
- [Configuring the Security Policy on the ASA IPS module](#), page 58-14
- [Assigning Virtual Sensors to a Security Context \(ASA 5510 and Higher\)](#), page 58-15
- [Diverting Traffic to the ASA IPS module](#), page 58-17

## Task Flow for the ASA IPS Module

Configuring the ASA IPS module is a process that includes configuration of the IPS security policy on the ASA IPS module and then configuration of the ASA to send traffic to the ASA IPS module. To configure the ASA IPS module, perform the following steps:

- 
- Step 1** Cable the ASA and IPS management interfaces. See the [“Connecting Management Interface Cables” section on page 58-7](#).
- Step 2** Depending on your ASA model:
- (ASA 5510 and higher) Configure basic network settings for the IPS module. See the [“\(ASA 5510 and Higher\) Configuring Basic Network Settings” section on page 58-10](#).
  - (ASA 5505) Configure the management VLAN and IP address for the IPS module. See the [“\(ASA 5505\) Configuring Basic Network Settings” section on page 58-11](#).
- Step 3** (ASA 5512-X through ASA 5555-X; may be required) Install the software module. See the [“\(ASA 5512-X through ASA 5555-X\) Installing the Software Module” section on page 58-14](#).
- Step 4** On the module, configure the inspection and protection policy, which determines how to inspect traffic and what to do when an intrusion is detected. See the [“Configuring the Security Policy on the ASA IPS module” section on page 58-14](#).
- Step 5** (ASA 5510 and higher, optional) On the ASA in multiple context mode, specify which IPS virtual sensors are available for each context (if you configured virtual sensors). See the [“Assigning Virtual Sensors to a Security Context \(ASA 5510 and Higher\)” section on page 58-15](#).
- Step 6** On the ASA, identify traffic to divert to the ASA IPS module. See the [“Diverting Traffic to the ASA IPS module” section on page 58-17](#).
- 

## Connecting Management Interface Cables

Connect the management PC to the ASA management interface and the ASA IPS module management interface.


### Guidelines

- Your cabling might differ depending on your network.
- See the [“Information About Management Access” section on page 58-4](#).


## Detailed Steps

**ASA 5505**

The ASA 5505 does not have a dedicated management interface. You must use an ASA VLAN to access an internal management IP address over the backplane. For a factory default configuration, connect the management PC to one of the following ports: Ethernet 0/1 through 0/7, which are assigned to VLAN 1.

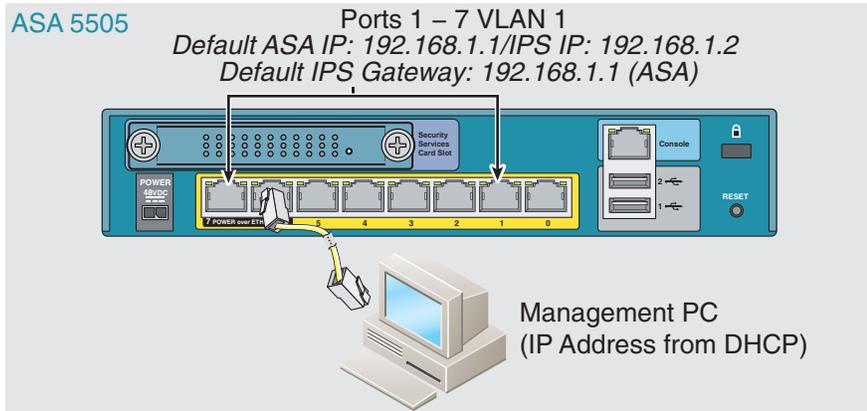**ASA 5512-X through ASA 5555-X (Software Module)**


These models run the ASA IPS module as a software module, and the IPS management interface shares the Management 0/0 interface with the ASA.

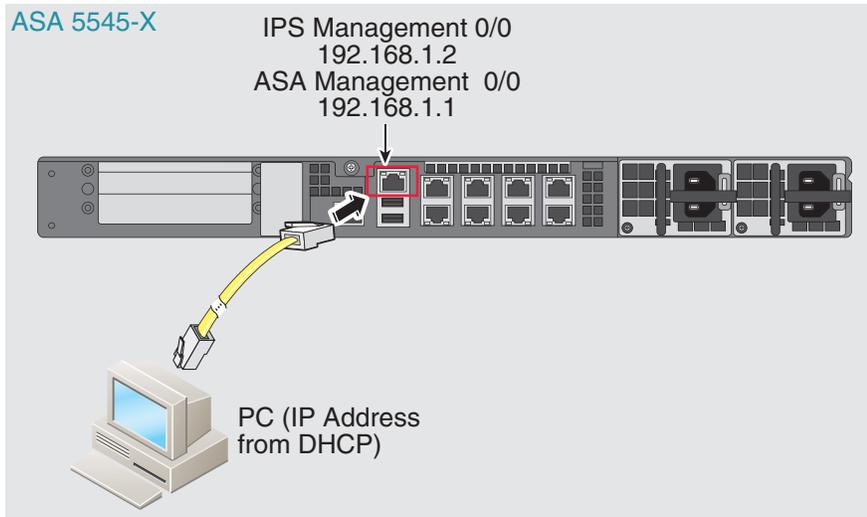

381181

**ASA 5510, ASA 5520, ASA 5540, ASA 5580, ASA 5585-X (Physical Module)**

Connect to the ASA Management 0/0 interface and the IPS Management 1/0 interface.

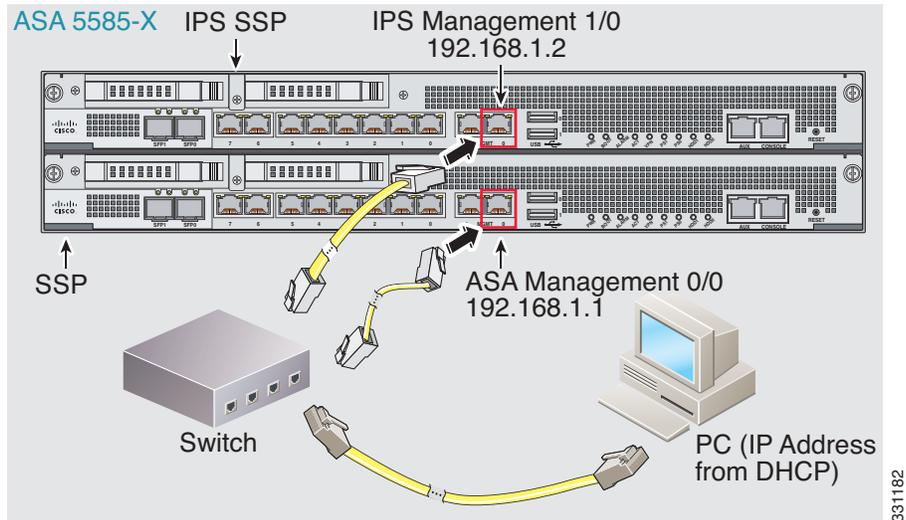**What to Do Next**

- (ASA 5510 and higher) Configure basic network settings. See the “(ASA 5510 and Higher) Configuring Basic Network Settings” section on page 58-10.
- (ASA 5505) Configure management interface settings. See the “(ASA 5505) Configuring Basic Network Settings” section on page 58-11.

**Sessioning to the Module from the ASA**

To access the IPS module CLI from the ASA, you can session from the ASA. For software modules, you can either session to the module (using Telnet) or create a virtual console session. A console session might be useful if the control plane is down and you cannot establish a Telnet session.

## Detailed Steps

| Command                                                                                                                                                                                                                                                                                                                                                                                                      | Purpose                                                                                                                                                                                                                                                                                                                                                                        |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>Telnet session.</p> <p>For a physical module (for example, the ASA 5585-X):</p> <pre>session 1</pre> <p>For a software module (for example, the ASA 5545-X):</p> <pre>session ips</pre> <p><b>Example:</b></p> <pre>hostname# session 1</pre> <p>Opening command session with slot 1.<br/>Connected to slot 1. Escape character sequence is 'CTRL-^X'.</p> <pre>sensor login: cisco Password: cisco</pre> | <p>Accesses the module using Telnet. You are prompted for the username and password. The default username is <b>cisco</b>, and the default password is <b>cisco</b>.</p> <p><b>Note</b> The first time you log in to the module, you are prompted to change the default password. Passwords must be at least eight characters long and cannot be a word in the dictionary.</p> |
| <p>Console session (software module only).</p> <pre>session ips console</pre> <p><b>Example:</b></p> <pre>hostname# session ips console</pre> <p>Establishing console session with slot 1<br/>Opening console session with module ips.<br/>Connected to module ips. Escape character sequence is 'CTRL-SHIFT-6 then x'.</p> <pre>sensor login: cisco Password: cisco</pre>                                   | <p>Accesses the module console. You are prompted for the username and password. The default username is <b>cisco</b>, and the default password is <b>cisco</b>.</p>                                                                                                                                                                                                            |

## Configuring Basic IPS Module Network Settings

- [\(ASA 5510 and Higher\) Configuring Basic Network Settings, page 58-10](#)
- [\(ASA 5505\) Configuring Basic Network Settings, page 58-11](#)

### (ASA 5510 and Higher) Configuring Basic Network Settings

Session to the module from the ASA and configure basic settings using the **setup** command.



**Note**

(ASA 5512-X through ASA 5555-X) If you cannot session to the module, then the IPS module is not running. See the “(ASA 5512-X through ASA 5555-X) Installing the Software Module” section on [page 58-14](#), and then repeat this procedure after you install the module.

## Detailed Steps

|        | Command                                                                                                                  | Purpose                                                                                                      |
|--------|--------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------|
| Step 1 | Session to the IPS module according to the <a href="#">“Sessioning to the Module from the ASA”</a> section on page 58-9. |                                                                                                              |
| Step 2 | <b>setup</b><br><br><b>Example:</b><br>sensor# setup                                                                     | Runs the setup utility for initial configuration of the ASA IPS module. You are prompted for basic settings. |

## (ASA 5505) Configuring Basic Network Settings

An ASA IPS module on the ASA 5505 does not have any external interfaces. You can configure a VLAN to allow access to an internal IPS management IP address over the backplane. By default, VLAN 1 is enabled for IPS management. You can only assign one VLAN as the management VLAN. This section describes how to change the management VLAN and IP address if you do not want to use the default. It also describes how to change the allowed hosts and gateway. See the [“Default Settings”](#) section on page 58-6 for more information about defaults.



### Note

Perform this configuration on the ASA 5505, not on the ASA IPS module.

## Prerequisites

When you change the IPS VLAN and management address from the default, be sure to also configure the matching ASA VLAN and switch port(s) according to the procedures listed in [Chapter 7, “Starting Interface Configuration \(ASA 5505\).”](#) You must define and configure the VLAN for the ASA so the IPS management interface is accessible on the network.

## Restrictions

Do not configure NAT for the management address if you intend to access it using ASDM. For initial setup with ASDM, you need to access the real address. After initial setup (where you set the password on the ASA IPS module), you can configure NAT and supply ASDM with the translated address for accessing the ASA IPS module.

## Detailed Steps

|        | Command                                                                                                              | Purpose                                                                                                         |
|--------|----------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------|
| Step 1 | <code>interface vlan <i>number</i></code><br><br><b>Example:</b><br><code>hostname(config)# interface vlan 1</code>  | Specifies the current management VLAN for which you want to disable IPS management. By default, this is VLAN 1. |
| Step 2 | <code>no allow-ssc-mgmt</code><br><br><b>Example:</b><br><code>hostname(config-if)# no allow-ssc-mgmt</code>         | Disables IPS management for the old VLAN so that you can enable it for a different VLAN.                        |
| Step 3 | <code>interface vlan <i>number</i></code><br><br><b>Example:</b><br><code>hostname(config)# interface vlan 20</code> | Specifies the VLAN you want to use as the new IPS management VLAN.                                              |
| Step 4 | <code>allow-ssc-mgmt</code><br><br><b>Example:</b><br><code>hostname(config-if)# allow-ssc-mgmt</code>               | Sets this interface as the IPS management interface.                                                            |

| Command                                                                                                                                                                            | Purpose                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p><b>Step 5</b></p> <pre>hw-module module 1 ip ip_address netmask gateway</pre> <p><b>Example:</b></p> <pre>hostname# hw-module module 1 ip 10.1.1.2 255.255.255.0 10.1.1.1</pre> | <p>Configures the management IP address for the ASA IPS module. Make sure this address is on the same subnet as the ASA VLAN IP address. For example, if you assigned 10.1.1.1 to the VLAN for the ASA, then assign another address on that network, such as 10.1.1.2, for the IPS management address.</p> <p>If the management station is on a directly-connected ASA network, then set the gateway to be the ASA IP address assigned to the IPS management VLAN. In the above example, set the gateway to 10.1.1.1. If the management station is on a remote network, then set the gateway to be the address of an upstream router on the IPS management VLAN.</p> <p><b>Note</b> These settings are written to the IPS application configuration, not the ASA configuration. You can view these settings from the ASA using the <b>show module details</b> command.</p> <p>You can alternatively use the IPS application <b>setup</b> command to configure this setting from the IPS CLI.</p> |
| <p><b>Step 6</b></p> <pre>hw-module module 1 allow-ip ip_address netmask</pre> <p><b>Example:</b></p> <pre>hostname# hw-module module 1 allow-ip 10.1.1.30 255.255.255.0</pre>     | <p>Sets the hosts that are allowed to access the management IP address.</p> <p><b>Note</b> These settings are written to the IPS application configuration, not the ASA configuration. You can view these settings from the ASA using the <b>show module details</b> command.</p> <p>You can alternatively use the IPS application <b>setup</b> command to configure this setting from the IPS CLI.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |

## Examples

The following example configures VLAN 20 as the IPS management VLAN. This VLAN is restricted to management traffic only. Only the host at 10.1.1.30 can access the IPS management IP address. VLAN 20 is assigned to switch port Ethernet 0/0. When you connect to ASDM on ASA interface 10.1.1.1, ASDM then accesses the IPS on 10.1.1.2.

```
hostname(config)# interface vlan 1
hostname(config-if)# no allow-ssc-mgmt

hostname(config-if)# interface vlan 20
hostname(config-if)# nameif inside
hostname(config-if)# ip address 10.1.1.1 255.255.255.0
hostname(config-if)# security-level 100
hostname(config-if)# allow-ssc-mgmt
hostname(config-if)# no shutdown
hostname(config-if)# management-only

hostname(config-if)# hw-module module 1 ip 10.1.1.2 255.255.255.0 10.1.1.1
hostname(config)# hw-module module 1 allow-ip 10.1.1.30 255.255.255.255

hostname(config)# interface ethernet 0/0
hostname(config-if)# switchport access vlan 20
hostname(config-if)# no shutdown
```

## (ASA 5512-X through ASA 5555-X) Installing the Software Module

Your ASA typically ships with IPS module software present on Disk0. If the module is not running, however, you need to install the module.

### Detailed Steps

**Step 1** To view the IPS module software filename in flash memory, enter:

```
hostname# dir disk0:
```

For example, look for a filename like IPS-SSP\_5512-K9-sys-1.1-a-7.1-4-E4.aip. Note the filename; you will need this filename later in the procedure.

**Step 2** If you need to copy a new image to disk0, download the image from Cisco.com to a TFTP server, and then enter:

```
hostname# copy tftp://server/file_path disk0:/file_path
```

For other server types, see the “[Downloading a File to a Specific Location](#)” section on page 81-3.

**Step 3** To identify the IPS module software location in disk0, enter the following command:

```
hostname# sw-module module ips recover configure image disk0:file_path
```

For example, using the filename in the example in Step 1, enter:

```
hostname# sw-module module ips recover configure image
disk0:IPS-SSP_5512-K9-sys-1.1-a-7.1-4-E4.aip
```

**Step 4** To install and load the IPS module software, enter the following command:

```
hostname# sw-module module ips recover boot
```

**Step 5** To check the progress of the image transfer and module restart process, enter the following command:

```
hostname# show module ips details
```

The Status field in the output indicates the operational status of the module. A module operating normally shows a status of “Up.” While the ASA transfers an application image to the module, the Status field in the output reads “Recover.” When the ASA completes the image transfer and restarts the module, the newly transferred image is running.

## Configuring the Security Policy on the ASA IPS module

This section describes how to configure the ASA IPS module application.

### Detailed Steps

**Step 1** Access the ASA IPS module CLI using one of the following methods:

- Session from the ASA to the ASA IPS module. See the “[Sessioning to the Module from the ASA](#)” section on page 58-9.

- Connect to the IPS management interface using SSH. If you did not change it, the default management IP address is 192.168.1.2. The default username is **cisco**, and the default password is **cisco**. See the “[Information About Management Access](#)” section on page 58-4 for more information about the management interface.

**Step 2** Configure the IPS security policy according to the IPS documentation.

To access all documents related to IPS, go to:

[http://www.cisco.com/en/US/products/hw/vpndevc/ps4077/products\\_documentation\\_roadmaps\\_list.html](http://www.cisco.com/en/US/products/hw/vpndevc/ps4077/products_documentation_roadmaps_list.html)

**Step 3** (ASA 5510 and higher) If you configure virtual sensors, you identify one of the sensors as the default. If the ASA does not specify a virtual sensor name in its configuration, the default sensor is used.

**Step 4** When you are done configuring the ASA IPS module, exit the IPS software by entering the following command:

```
sensor# exit
```

If you sessioned to the ASA IPS module from the ASA, you return to the ASA prompt.

---

### What to Do Next

- For the ASA in multiple context mode, see the “[Assigning Virtual Sensors to a Security Context \(ASA 5510 and Higher\)](#)” section on page 58-15.
- For the ASA in single context mode, see the “[Diverting Traffic to the ASA IPS module](#)” section on page 58-17.

## Assigning Virtual Sensors to a Security Context (ASA 5510 and Higher)

If the ASA is in multiple context mode, then you can assign one or more IPS virtual sensors to each context. Then, when you configure the context to send traffic to the ASA IPS module, you can specify a sensor that is assigned to the context; you cannot specify a sensor that you did not assign to the context. If you do not assign any sensors to a context, then the default sensor configured on the ASA IPS module is used. You can assign the same sensor to multiple contexts.



### Note

You do not need to be in multiple context mode to use virtual sensors; you can be in single mode and use different sensors for different traffic flows.

---

### Prerequisites

For more information about configuring contexts, see the “[Configuring Multiple Contexts](#)” section on page 5-14.

## Detailed Steps

|        | Command                                                                                                                                                                       | Purpose                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|--------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Step 1 | <p><b>context</b> <i>name</i></p> <p><b>Example:</b><br/> <pre>hostname(config)# context admin hostname(config-ctx)#</pre></p>                                                | Identifies the context you want to configure. Enter this command in the system execution space.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| Step 2 | <p><b>allocate-ips</b> <i>sensor_name</i> [<i>mapped_name</i>] [<b>default</b>]</p> <p><b>Example:</b><br/> <pre>hostname(config-ctx)# allocate-ips sensor1 highsec</pre></p> | <p>Enter this command for each sensor you want to assign to the context.</p> <p>The <i>sensor_name</i> argument is the sensor name configured on the ASA IPS module. To view the sensors that are configured on the ASA IPS module, enter <b>allocate-ips ?</b>. All available sensors are listed. You can also enter the <b>show ips</b> command. In the system execution space, the <b>show ips</b> command lists all available sensors; if you enter it in the context, it shows the sensors you already assigned to the context. If you specify a sensor name that does not yet exist on the ASA IPS module, you get an error, but the <b>allocate-ips</b> command is entered as is. Until you create a sensor of that name on the ASA IPS module, the context assumes the sensor is down.</p> <p>Use the <i>mapped_name</i> argument as an alias for the sensor name that can be used within the context instead of the actual sensor name. If you do not specify a mapped name, the sensor name is used within the context. For security purposes, you might not want the context administrator to know which sensors are being used by the context. Or you might want to genericize the context configuration. For example, if you want all contexts to use sensors called “sensor1” and “sensor2,” then you can map the “highsec” and “lowsec” sensors to sensor1 and sensor2 in context A, but map the “medsec” and “lowsec” sensors to sensor1 and sensor2 in context B.</p> <p>The <b>default</b> keyword sets one sensor per context as the default sensor; if the context configuration does not specify a sensor name, the context uses this default sensor. You can only configure one default sensor per context. If you want to change the default sensor, enter the <b>no allocate-ips sensor_name</b> command to remove the current default sensor before you allocate a new default sensor. If you do not specify a sensor as the default, and the context configuration does not include a sensor name, then traffic uses the default sensor as specified on the ASA IPS module.</p> |
| Step 3 | <p><b>changeto context</b> <i>context_name</i></p> <p><b>Example:</b><br/> <pre>hostname# changeto context customer1 hostname/customer1#</pre></p>                            | Changes to the context so you can configure the IPS security policy as described in <a href="#">“Diverting Traffic to the ASA IPS module” section on page 58-17</a> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |

## Examples

The following example assigns sensor1 and sensor2 to context A, and sensor1 and sensor3 to context B. Both contexts map the sensor names to “ips1” and “ips2.” In context A, sensor1 is set as the default sensor, but in context B, no default is set so the default that is configured on the ASA IPS module is used.

```
hostname(config-ctx)# context A
hostname(config-ctx)# allocate-interface gigabitethernet0/0.100 int1
hostname(config-ctx)# allocate-interface gigabitethernet0/0.102 int2
hostname(config-ctx)# allocate-interface gigabitethernet0/0.110-gigabitethernet0/0.115
int3-int8
hostname(config-ctx)# allocate-ips sensor1 ips1 default
hostname(config-ctx)# allocate-ips sensor2 ips2
hostname(config-ctx)# config-url ftp://user1:passw0rd@10.1.1.1/configlets/test.cfg
hostname(config-ctx)# member gold

hostname(config-ctx)# context sample
hostname(config-ctx)# allocate-interface gigabitethernet0/1.200 int1
hostname(config-ctx)# allocate-interface gigabitethernet0/1.212 int2
hostname(config-ctx)# allocate-interface gigabitethernet0/1.230-gigabitethernet0/1.235
int3-int8
hostname(config-ctx)# allocate-ips sensor1 ips1
hostname(config-ctx)# allocate-ips sensor3 ips2
hostname(config-ctx)# config-url ftp://user1:passw0rd@10.1.1.1/configlets/sample.cfg
hostname(config-ctx)# member silver

hostname(config-ctx)# changeto context A
...
```

## What to Do Next

Change to each context to configure the IPS security policy as described in [“Diverting Traffic to the ASA IPS module”](#) section on page 58-17.

## Diverting Traffic to the ASA IPS module

This section identifies traffic to divert from the ASA to the ASA IPS module.

### Prerequisites

In multiple context mode, perform these steps in each context execution space. To change to a context, enter the **changeto context *context\_name*** command.

## Detailed Steps

|        | Command                                                                                                      | Purpose                                                                                                                                                                                                                                     |
|--------|--------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Step 1 | <b>class-map</b> <i>name</i><br><br><b>Example:</b><br>hostname(config)# class-map ips_class                 | Creates a class map to identify the traffic for which you want to send to the ASA IPS module.<br><br>If you want to send multiple traffic classes to the ASA IPS module, you can create multiple class maps for use in the security policy. |
| Step 2 | <b>match</b> <i>parameter</i><br><br><b>Example:</b><br>hostname(config-cmap)# match access-list ips_traffic | Specifies the traffic in the class map. See the <a href="#">“Identifying Traffic (Layer 3/4 Class Maps)”</a> section on page 32-12 for more information.                                                                                    |
| Step 3 | <b>policy-map</b> <i>name</i><br><br><b>Example:</b><br>hostname(config)# policy-map ips_policy              | Adds or edits a policy map that sets the actions to take with the class map traffic.                                                                                                                                                        |
| Step 4 | <b>class</b> <i>name</i><br><br><b>Example:</b><br>hostname(config-pmap)# class ips_class                    | Identifies the class map you created in <a href="#">Step 1</a> .                                                                                                                                                                            |

| Command                                                                                                                                                                                                             | Purpose                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p><b>Step 5</b></p> <pre>ips {inline   promiscuous} {fail-close   fail-open} [sensor {sensor_name   mapped_name}]</pre> <p><b>Example:</b><br/> <pre>hostname(config-pmap-c)# ips promiscuous fail-close</pre></p> | <p>Specifies that the traffic should be sent to the ASA IPS module.</p> <p>The <b>inline</b> and <b>promiscuous</b> keywords control the operating mode of the ASA IPS module. See the <a href="#">“Operating Modes” section on page 58-2</a> for more details.</p> <p>The <b>fail-close</b> keyword sets the ASA to block all traffic if the ASA IPS module is unavailable.</p> <p>The <b>fail-open</b> keyword sets the ASA to allow all traffic through, uninspected, if the ASA IPS module is unavailable.</p> <p>(ASA 5510 and higher) If you use virtual sensors, you can specify a sensor name using the <b>sensor</b> <i>sensor_name</i> argument. To see available sensor names, enter the <b>ips {inline   promiscuous} {fail-close   fail-open} sensor ?</b> command. Available sensors are listed. You can also use the <b>show ips</b> command. If you use multiple context mode on the ASA, you can only specify sensors that you assigned to the context (see the <a href="#">“Assigning Virtual Sensors to a Security Context (ASA 5510 and Higher)” section on page 58-15</a>). Use the <i>mapped_name</i> if configured in the context. If you do not specify a sensor name, then the traffic uses the default sensor. In multiple context mode, you can specify a default sensor for the context. In single mode or if you do not specify a default sensor in multiple mode, the traffic uses the default sensor that is set on the ASA IPS module. If you enter a name that does not yet exist on the ASA IPS module, you get an error, and the command is rejected.</p> |
| <p><b>Step 6</b></p> <p>(Optional)</p> <pre>class name2</pre> <p><b>Example:</b><br/> <pre>hostname(config-pmap)# class ips_class2</pre></p>                                                                        | <p>If you created multiple class maps for IPS traffic, you can specify another class for the policy.</p> <p>See the <a href="#">“Feature Matching Within a Service Policy” section on page 32-3</a> for detailed information about how the order of classes matters within a policy map. Traffic cannot match more than one class map for the same action type; so if you want network A to go to sensorA, but want all other traffic to go to sensorB, then you need to enter the <b>class</b> command for network A before you enter the <b>class</b> command for all traffic; otherwise all traffic (including network A) will match the first <b>class</b> command, and will be sent to sensorB.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |

|        | Command                                                                                                                                                                                                        | Purpose                                                                                                                                                                                                                                                                                                                                                          |
|--------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Step 7 | (Optional)<br><br><pre>ips {inline   promiscuous} {fail-close   fail-open} [sensor {sensor_name   mapped_name}]</pre><br><br><b>Example:</b><br><pre>hostname(config-pmap-c)# ips promiscuous fail-close</pre> | Specifies that the second class of traffic should be sent to the ASA IPS module.<br><br>Add as many classes as desired by repeating these steps.                                                                                                                                                                                                                 |
| Step 8 | <pre>service-policy <i>policymap_name</i> {global   interface <i>interface_name</i>}</pre><br><br><b>Example:</b><br><pre>hostname(config)# service-policy tcp_bypass_policy outside</pre>                     | Activates the policy map on one or more interfaces. <b>global</b> applies the policy map to all interfaces, and <b>interface</b> applies the policy to one interface. Only one global policy is allowed. You can override the global policy on an interface by applying a service policy to that interface. You can only apply one policy map to each interface. |

## Monitoring the ASA IPS module

To check the status of a module, enter one of the following commands:

| Command                                    | Purpose                                                                                                                                               |
|--------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>show module</code>                   | Displays the status.                                                                                                                                  |
| <code>show module {1   ips} details</code> | Displays additional status information. Specify <b>1</b> for a physical module and <b>ips</b> for a software module.                                  |
| <code>show module {1   ips} recover</code> | Displays the network parameters for transferring an image to the module. Specify <b>1</b> for a physical module and <b>ips</b> for a software module. |

### Examples

The following is sample output from the **show module details** command, which provides additional information for an ASA with an SSC installed:

```
hostname# show module 1 details
Getting details from the Service Module, please wait...
ASA 5500 Series Security Services Card-5
Hardware version: 0.1
Serial Number: JAB11370240
Firmware version: 1.0(14)3
Software version: 6.2(1)E2
MAC Address Range: 001d.45c2.e832 to 001d.45c2.e832
App. Name: IPS
App. Status: Up
App. Status Desc: Not Applicable
App. Version: 6.2(1)E2
Data plane Status: Up
Status: Up
Mgmt IP Addr: 209.165.201.29
Mgmt Network Mask: 255.255.224.0
Mgmt Gateway: 209.165.201.30
Mgmt Access List: 209.165.201.31/32
```

```
209.165.202.158/32
209.165.200.254/24
Mgmt Vlan: 20
```

## Troubleshooting the ASA IPS module

This section includes procedures that help you recover or troubleshoot the module and includes the following topics:

- [Installing an Image on the Module, page 58-21](#)
- [Uninstalling a Software Module Image, page 58-23](#)
- [Resetting the Password, page 58-23](#)
- [Reloading or Resetting the Module, page 58-24](#)
- [Shutting Down the Module, page 58-24](#)

### Installing an Image on the Module

If the module suffers a failure, and the module application image cannot run, you can reinstall a new image on the module from a TFTP server (for a physical module), or from the local disk (software module).

**Note**

---

Do not use the **upgrade** command within the module software to install the image.

---

#### Prerequisites

- Physical module—Be sure the TFTP server that you specify can transfer files up to 60 MB in size.

**Note**

---

This process can take approximately 15 minutes to complete, depending on your network and the size of the image.

---

- Software module—Copy the image to the ASA internal flash (disk0) before completing this procedure.

**Note**

---

Before you download the IPS software to disk0, make sure at least 50% of the flash memory is free. When you install IPS, IPS reserves 50% of the internal flash memory for its file system.

---

## Detailed Steps

|               | Command                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        | Purpose                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|---------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Step 1</b> | <p>For a physical module (for example, the ASA 5585-X):</p> <pre>hw-module module 1 recover configure</pre> <p>For a software module (for example, the ASA 5545-X):</p> <pre>sw-module module ips recover configure image disk0:file_path</pre> <p><b>Example:</b></p> <pre>hostname# hw-module module 1 recover configure Image URL [tftp://127.0.0.1/myimage]: tftp://10.1.1.1/ids-newimg Port IP Address [127.0.0.2]: 10.1.2.10 Port Mask [255.255.255.254]: 255.255.255.0 Gateway IP Address [1.1.2.10]: 10.1.2.254 VLAN ID [0]: 100</pre> | <p>Specifies the location of the new image.</p> <p>For a physical module—This command prompts you for the URL for the TFTP server, the management interface IP address and netmask, gateway address, and VLAN ID (ASA 5505 only). These network parameters are configured in ROMMON; the network parameters you configured in the module application configuration are not available to ROMMON, so you must set them separately here.</p> <p>For a software module—Specify the location of the image on the local disk.</p> <p>You can view the recovery configuration using the <b>show module {1   ips} recover</b> command.</p> <p>In multiple context mode, enter this command in the system execution space.</p> |
| <b>Step 2</b> | <p>For a physical module:</p> <pre>hw-module module 1 recover boot</pre> <p>For a software module:</p> <pre>sw-module module ips recover boot</pre> <p><b>Example:</b></p> <pre>hostname# hw-module module 1 recover boot</pre>                                                                                                                                                                                                                                                                                                                | <p>Installs and loads the IPS module software.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Step 3</b> | <p>For a physical module:</p> <pre>show module 1 details</pre> <p>For a software module:</p> <pre>show module ips details</pre> <p><b>Example:</b></p> <pre>hostname# show module 1 details</pre>                                                                                                                                                                                                                                                                                                                                              | <p>Checks the progress of the image transfer and module restart process.</p> <p>The Status field in the output indicates the operational status of the module. A module operating normally shows a status of “Up.” While the ASA transfers an application image to the module, the Status field in the output reads “Recover.” When the ASA completes the image transfer and restarts the module, the newly transferred image is running.</p>                                                                                                                                                                                                                                                                         |

## Uninstalling a Software Module Image

To uninstall a software module image and associated configuration, perform the following steps.

### Detailed Steps

| Command                                                                                                                                                                                                                                                                                                                            | Purpose                                                                        |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------|
| <pre>sw-module module ips uninstall</pre> <p><b>Example:</b><br/> hostname# sw-module module ips uninstall<br/> Module ips will be uninstalled. This will completely remove the disk image associated with the sw-module including any configuration that existed within it.</p> <pre>Uninstall module &lt;id&gt;? [confirm]</pre> | Permanently uninstalls the software module image and associated configuration. |

## Resetting the Password

You can reset the module password to the default. The default password is **cisco**. After resetting the password, you should change it to a unique value using the module application.

Resetting the module password causes the module to reboot. Services are not available while the module is rebooting.

To reset the module password to the default of cisco, perform the following steps.

### Detailed Steps

| Command                                                                                                                                                                                                                                                                                     | Purpose                                      |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------|
| <p>For a physical module (for example, the ASA 5585-X):</p> <pre>hw-module module 1 password-reset</pre> <p>For a software module (for example, the ASA 5545-X):</p> <pre>sw-module module ips password-reset</pre> <p><b>Example:</b><br/> hostname# hw-module module 1 password-reset</p> | Resets the module password to <b>cisco</b> . |

## Reloading or Resetting the Module

To reload or reset the module, enter one of the following commands at the ASA CLI.

### Detailed Steps

| Command                                                                                                                                                                                                                                                             | Purpose                                        |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------|
| For a physical module (for example, the ASA 5585-X):<br><pre>hw-module module 1 reload</pre><br>For a software module (for example, the ASA 5545-X):<br><pre>sw-module module ips reload</pre><br><b>Example:</b><br><pre>hostname# hw-module module 1 reload</pre> | Reloads the module software.                   |
| For a physical module:<br><pre>hw-module module 1 reset</pre><br>For a software module:<br><pre>sw-module module ips reset</pre><br><b>Example:</b><br><pre>hostname# hw-module module 1 reset</pre>                                                                | Performs a reset, and then reloads the module. |

## Shutting Down the Module

If you restart the ASA, the module is not automatically restarted. To shut down the module, perform the following steps at the ASA CLI.

### Detailed Steps

| Command                                                                                                                                                                                                                                                                   | Purpose                |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------|
| For a physical module (for example, the ASA 5585-X):<br><pre>hw-module module 1 shutdown</pre><br>For a software module (for example, the ASA 5545-X):<br><pre>sw-module module ips shutdown</pre><br><b>Example:</b><br><pre>hostname# hw-module module 1 shutdown</pre> | Shuts down the module. |

## Configuration Examples for the ASA IPS module

The following example diverts all IP traffic to the ASA IPS module in promiscuous mode, and blocks all IP traffic if the ASA IPS module card fails for any reason:

```
hostname(config)# access-list IPS permit ip any any
hostname(config)# class-map my-ips-class
hostname(config-cmap)# match access-list IPS
hostname(config-cmap)# policy-map my-ips-policy
hostname(config-pmap)# class my-ips-class
hostname(config-pmap-c)# ips promiscuous fail-close
hostname(config-pmap-c)# service-policy my-ips-policy global
```

The following example diverts all IP traffic destined for the 10.1.1.0 network and the 10.2.1.0 network to the AIP SSM in inline mode, and allows all traffic through if the AIP SSM fails for any reason. For the my-ips-class traffic, sensor1 is used; for the my-ips-class2 traffic, sensor2 is used.

```
hostname(config)# access-list my-ips-acl1 permit ip any 10.1.1.0 255.255.255.0
hostname(config)# access-list my-ips-acl2 permit ip any 10.2.1.0 255.255.255.0
hostname(config)# class-map my-ips-class
hostname(config-cmap)# match access-list my-ips-acl1
hostname(config)# class-map my-ips-class2
hostname(config-cmap)# match access-list my-ips-acl2
hostname(config-cmap)# policy-map my-ips-policy
hostname(config-pmap)# class my-ips-class
hostname(config-pmap-c)# ips inline fail-open sensor sensor1
hostname(config-pmap)# class my-ips-class2
hostname(config-pmap-c)# ips inline fail-open sensor sensor2
hostname(config-pmap-c)# service-policy my-ips-policy interface outside
```

## Feature History for the ASA IPS module

Table 58-2 lists each feature change and the platform release in which it was implemented.

**Table 58-2** Feature History for the ASA IPS module

| Feature Name                          | Platform Releases | Feature Information                                                                                                                                                                           |
|---------------------------------------|-------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| AIP SSM                               | 7.0(1)            | We introduced support for the AIP SSM for the ASA 5510, 5520, and 5540.<br><br>The following command was introduced: <b>ips</b> .                                                             |
| Virtual sensors (ASA 5510 and higher) | 8.0(2)            | Virtual sensor support was introduced. Virtual sensors let you configure multiple security policies on the ASA IPS module.<br><br>The following command was introduced: <b>allocate-ips</b> . |

Table 58-2 Feature History for the ASA IPS module (continued)

| Feature Name                                                         | Platform Releases | Feature Information                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|----------------------------------------------------------------------|-------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| AIP SSC for the ASA 5505                                             | 8.2(1)            | We introduced support for the AIP SSC for the ASA 5505. The following commands were introduced: <b>allow-ssc-mgmt</b> , <b>hw-module module ip</b> , and <b>hw-module module allow-ip</b> .                                                                                                                                                                                                                                                                                                                                                                                |
| Support for the ASA IPS SSP-10, -20, -40, and -60 for the ASA 5585-X | 8.2(5)/<br>8.4(2) | We introduced support for the ASA IPS SSP-10, -20, -40, and -60 for the ASA 5585-X. You can only install the ASA IPS SSP with a matching-level SSP; for example, SSP-10 and ASA IPS SSP-10.<br><br><b>Note</b> The ASA 5585-X is not supported in Version 8.3.                                                                                                                                                                                                                                                                                                             |
| Support for Dual SSPs for SSP-40 and SSP-60                          | 8.4(2)            | For SSP-40 and SSP-60, you can use two SSPs of the same level in the same chassis. Mixed-level SSPs are not supported (for example, an SSP-40 with an SSP-60 is not supported). Each SSP acts as an independent device, with separate configurations and management. You can use the two SSPs as a failover pair if desired.<br><br><b>Note</b> When using two SSPs in the chassis, VPN is not supported; note, however, that VPN has not been disabled.<br><br>We modified the following commands: <b>show module</b> , <b>show inventory</b> , <b>show environment</b> . |
| Support for the ASA IPS SSP for the ASA 5512-X through ASA 5555-X    | 8.6(1)            | We introduced support for the ASA IPS SSP software module for the ASA 5512-X, ASA 5515-X, ASA 5525-X, ASA 5545-X, and ASA 5555-X.<br><br>We introduced or modified the following commands: <b>session</b> , <b>show module</b> , <b>sw-module</b> .                                                                                                                                                                                                                                                                                                                        |



## CHAPTER 59

# Configuring the ASA CX Module

---

This chapter describes how to configure the ASA CX module that runs on the ASA. This chapter includes the following sections:

- [Information About the ASA CX Module, page 59-1](#)
- [Licensing Requirements for the ASA CX Module, page 59-4](#)
- [Guidelines and Limitations, page 59-4](#)
- [Default Settings, page 59-5](#)
- [Configuring the ASA CX Module, page 59-5](#)
- [Monitoring the ASA CX Module, page 59-12](#)
- [Troubleshooting the ASA CX Module, page 59-17](#)
- [Configuration Examples for the ASA CX Module, page 59-21](#)
- [Feature History for the ASA CX Module, page 59-22](#)

## Information About the ASA CX Module

The ASA CX module lets you enforce security based on the complete context of a situation. This context includes the identity of the user (who), the application or website that the user is trying to access (what), the origin of the access attempt (where), the time of the attempted access (when), and the properties of the device used for the access (how). With the ASA CX module, you can extract the full context of a flow and enforce granular policies such as permitting access to Facebook but denying access to games on Facebook or permitting finance employees access to a sensitive enterprise database but denying the same to other employees.

This section includes the following topics:

- [How the ASA CX Module Works with the ASA, page 59-2](#)
- [Information About ASA CX Management, page 59-2](#)
- [Information About Authentication Proxy, page 59-3](#)
- [Information About VPN and the ASA CX Module, page 59-4](#)
- [Compatibility with ASA Features, page 59-4](#)

## How the ASA CX Module Works with the ASA


The ASA CX module runs a separate application from the ASA. The ASA CX module includes external management interface(s) so you can connect to the ASA CX module directly. Any data interfaces on the ASA CX module are used for ASA traffic only.

Traffic goes through the firewall checks before being forwarded to the ASA CX module. When you identify traffic for ASA CX inspection on the ASA, traffic flows through the ASA and the ASA CX module as follows:

1. Traffic enters the ASA.
2. Incoming VPN traffic is decrypted.
3. Firewall policies are applied.
4. Traffic is sent to the ASA CX module.
5. The ASA CX module applies its security policy to the traffic, and takes appropriate actions.
6. Valid traffic is sent back to the ASA; the ASA CX module might block some traffic according to its security policy, and that traffic is not passed on.
7. Outgoing VPN traffic is encrypted.
8. Traffic exits the ASA.

Figure 59-1 shows the traffic flow when using the ASA CX module. In this example, the ASA CX module automatically blocks traffic that is not allowed for a certain application. All other traffic is forwarded through the ASA.

**Figure 59-1** ASA CX Module Traffic Flow in the ASA

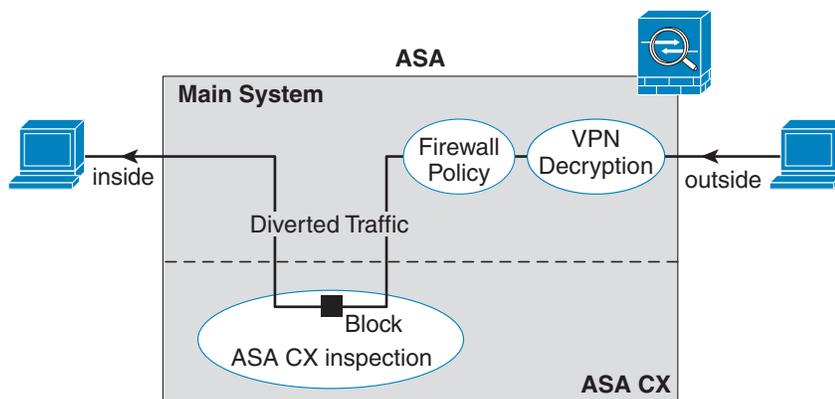

### Note

If you have a connection between hosts on two ASA interfaces, and the ASA CX service policy is only configured for one of the interfaces, then all traffic between these hosts is sent to the ASA CX module, including traffic originating on the non-ASA CX interface (the feature is bidirectional). However, the ASA only performs the authentication proxy on the interface to which the service policy is applied, because this feature is ingress-only.

## Information About ASA CX Management

- [Initial Configuration, page 59-3](#)

- [Policy Configuration and Management, page 59-3](#)

## Initial Configuration

For initial configuration, you must use the CLI on the ASA CX module to run the **setup** command and configure other optional settings.

To access the CLI, you can use the following methods:

- ASA CX console port.
- ASA CX Management 1/0 interface using SSH—You can connect to the default IP address (192.168.8.8.), or you can use ASDM to change the management IP address and then connect using SSH.

**Note**

You cannot access the ASA CX module CLI over the ASA backplane using the **session** command.

## Policy Configuration and Management

After you perform initial configuration, configure the ASA CX policy using Cisco Prime Security Manager (PRSM). Then configure the ASA policy for sending traffic to the ASA CX module using ASDM or the ASA CLI.

**Note**

When using PRSM in multiple device mode, you can configure the ASA policy for sending traffic to the ASA CX module within PRSM, instead of using ASDM or the ASA CLI. Using PRSM lets you consolidate management to a single management system. However, PRSM has some limitations when configuring the ASA service policy; see the ASA CX user guide for more information.

## Information About Authentication Proxy

When the ASA CX needs to authenticate an HTTP user (to take advantage of identity policies), you must configure the ASA to act as an authentication proxy: the ASA CX module redirects authentication requests to the ASA interface IP address/proxy port. By default, the port is 885 (user configurable). Configure this feature as part of the service policy to divert traffic from the ASA to the ASA CX module. If you do not enable the authentication proxy, only passive authentication is available.

**Note**

If you have a connection between hosts on two ASA interfaces, and the ASA CX service policy is only configured for one of the interfaces, then all traffic between these hosts is sent to the ASA CX module, including traffic originating on the non-ASA CX interface (the feature is bidirectional). However, the ASA only performs the authentication proxy on the interface to which the service policy is applied, because this feature is ingress-only.

## Information About VPN and the ASA CX Module

The ASA includes VPN client and user authentication metadata when forwarding traffic to the ASA CX module, which allows the ASA CX module to include this information as part of its policy lookup criteria. The VPN metadata is sent only at VPN tunnel establishment time along with a type-length-value (TLV) containing the session ID. The ASA CX module caches the VPN metadata for each session. Each tunneled connection sends the session ID so the ASA CX module can look up that session's metadata.

## Compatibility with ASA Features

The ASA includes many advanced application inspection features, including HTTP inspection. However, the ASA CX module provides more advanced HTTP inspection than the ASA provides, as well as additional features for other applications, including monitoring and controlling application usage.

To take full advantage of the ASA CX module features, see the following guidelines for traffic that you send to the ASA CX module:

- Do not configure ASA inspection on HTTP traffic.
- Other application inspections on the ASA are compatible with the ASA CX module, including the default inspections.
- Do not enable the Mobile User Security (MUS) server; it is not compatible with the ASA CX module.
- If you enable failover, when the ASA fails over, any existing ASA CX flows are transferred to the new ASA, but the traffic is allowed through the ASA without being acted upon by the ASA CX module. Only new flows received by the new ASA are acted upon by the ASA CX module.

## Licensing Requirements for the ASA CX Module

The following table shows the licensing requirements for this feature:

| Model      | License Requirement |
|------------|---------------------|
| All models | Base License.       |

The ASA CX module and PRSM require additional licenses. See the ASA CX documentation for more information.

## Guidelines and Limitations

This section includes the guidelines and limitations for this feature.

### Context Mode Guidelines

Supported in single context mode only. Does not support multiple context mode.

### Firewall Mode Guidelines

Supported in routed and transparent firewall mode.

**Failover Guidelines**

Does not support failover directly; when the ASA fails over, any existing ASA CX flows are transferred to the new ASA, but the traffic is allowed through the ASA without being inspected by the ASA CX.

**IPv6 Guidelines**

Supports IPv6.

**Model Guidelines**

Supported only on the ASA 5585-X. See the *Cisco ASA Compatibility Matrix* for more information:

<http://www.cisco.com/en/US/docs/security/asa/compatibility/asamatrx.html>

**Additional Guidelines and Limitations**

- See the “Compatibility with ASA Features” section on page 59-4.
- You cannot change the software type installed on the module; if you purchase an ASA CX module, you cannot later install other software on it.

## Default Settings

Table 59-1 lists the default settings for the ASA CX module.

**Table 59-1**      **Default Network Parameters**

| Parameters                | Default        |
|---------------------------|----------------|
| Management 1/0 IP address | 192.168.8.8/24 |
| Gateway                   | 192.168.8.1/24 |
| SSH Username              | admin          |
| Password                  | Admin123       |

## Configuring the ASA CX Module

This section describes how to configure the ASA CX module and includes the following topics:

- [Task Flow for the ASA CX Module, page 59-6](#)
- [Connecting Management Interface Cables, page 59-6](#)
- [Configuring the ASA CX Management IP Address, page 59-7](#)
- [Configuring Basic ASA CX Settings at the ASA CX CLI, page 59-7](#)
- [Configuring the Security Policy on the ASA CX Module Using PRSM, page 59-9](#)
- [Redirecting Traffic to the ASA CX Module, page 59-11](#)

## Task Flow for the ASA CX Module

Configuring the ASA CX module is a process that includes configuration of the ASA CX security policy on the ASA CX module and then configuration of the ASA to send traffic to the ASA CX module. To configure the ASA CX module, perform the following steps:

- 
- Step 1** Cable the ASA and ASA CX management interfaces and optionally, the console interface. See the [“Connecting Management Interface Cables” section on page 59-6](#).
  - Step 2** (Optional) On the ASA, configure the ASA CX module management IP address for initial SSH access. See the [“Configuring the ASA CX Management IP Address” section on page 59-7](#).
  - Step 3** On the ASA CX module, configure basic settings. See the [“Configuring Basic ASA CX Settings at the ASA CX CLI” section on page 59-7](#).
  - Step 4** On the ASA CX module, configure the security policy using PRSM. See the [“Configuring the Security Policy on the ASA CX Module Using PRSM” section on page 59-9](#).
  - Step 5** (Optional) On the ASA, configure the authentication proxy port. See the [“\(Optional\) Configuring the Authentication Proxy Port” section on page 59-10](#).
  - Step 6** On the ASA, identify traffic to divert to the ASA CX module. See the [“Redirecting Traffic to the ASA CX Module” section on page 59-11](#).



---

**Note** When using PRSM in multiple device mode, you can configure the ASA policy for sending traffic to the ASA CX module within PRSM, instead of using ASDM or the ASA CLI. However, PRSM has some limitations when configuring the ASA service policy; see the ASA CX user guide for more information.

---

## Connecting Management Interface Cables


Connect the management PC to the ASA and the ASA CX module management interfaces, as well as to the ASA CX console port.

### Guidelines

For initial setup, you can connect with SSH to the ASA CX Management 1/0 interface using the default IP address (192.168.8.8/24). If you cannot use the default IP address, you can either use the console port or use ASDM to change the management IP address so you can use SSH.

### Detailed Steps

Connect to the ASA Management 0/0 interface and the ASA CX Management 1/0 interface.

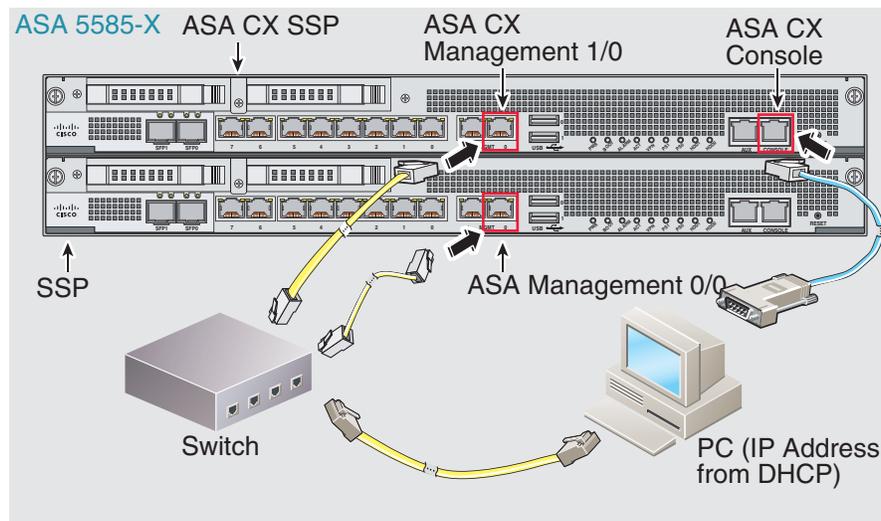

333469

### What to Do Next

- (Optional) Configure the ASA CX management IP address. See the “[Configuring the ASA CX Management IP Address](#)” section on page 59-7.
- Configure basic ASA CX settings. See the “[Configuring Basic ASA CX Settings at the ASA CX CLI](#)” section on page 59-7.

## Configuring the ASA CX Management IP Address

If you cannot use the default management IP address (192.168.8.8), then you can set the management IP address from the ASA. After you set the management IP address, you can access the ASA CX module using SSH to perform initial setup.

### Detailed Steps

| Command                                                                                                                                                      | Purpose                                                   |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------|
| <pre>session 1 do setup host ip ip_address/mask,gateway_ip</pre> <p><b>Example:</b></p> <pre>hostname# session 1 do setup host ip 10.1.1.2/24,10.1.1.1</pre> | Sets the ASA CX management IP address, mask, and gateway. |

## Configuring Basic ASA CX Settings at the ASA CX CLI

You must configure basic network settings and other parameters on the ASA CX module before you can configure your security policy.

## Detailed Steps

- Step 1** Connect to the ASA CX CLI:
- Using SSH to the ASA CX Management 1/0 interface—Log in with the username **admin** and the password **Admin123**. You will change the password as part of this procedure.
  - Using the ASA CX console port.

- Step 2** Enter the following command:

```
asacx> setup
```

### Example:

```
asacx> setup
Welcome to Cisco Prime Security Manager Setup
[hit Ctrl-C to abort]
Default values are inside []
```

You are prompted through the setup wizard. The following example shows a typical path through the wizard; if you enter **Y** instead of **N** at a prompt, you will be able to configure some additional settings. This example shows how to configure both IPv4 and IPv6 static addresses. You can configure IPv6 stateless auto configuration by answering **N** when asked if you want to configure a static IPv6 address.

```
Enter a hostname [asacx]: asa-cx-host
Do you want to configure IPv4 address on management interface?(y/n) [Y]: Y
Do you want to enable DHCP for IPv4 address assignment on management interface?(y/n) [N]: N
Enter an IPv4 address [192.168.8.8]: 10.89.31.65
Enter the netmask [255.255.255.0]: 255.255.255.0
Enter the gateway [192.168.8.1]: 10.89.31.1
Do you want to configure static IPv6 address on management interface?(y/n) [N]: Y
Enter an IPv6 address: 2001:DB8:0:CD30::1234/64
Enter the gateway: 2001:DB8:0:CD30::1
Enter the primary DNS server IP address []: 10.89.47.11
Do you want to configure Secondary DNS Server? (y/n) [N]: N
Do you want to configure Local Domain Name? (y/n) [N] Y
Enter the local domain name: example.com
Do you want to configure Search domains? (y/n) [N] Y
Enter the comma separated list for search domains: example.com
Do you want to enable the NTP service?(y/n) [N]: Y
Enter the NTP servers separated by commas: 1.ntp.example.com, 2.ntp.example.com
```

- Step 3** After you complete the final prompt, you are presented with a summary of the settings. Look over the summary to verify that the values are correct, and enter **Y** to apply your changed configuration. Enter **N** to cancel your changes.

### Example:

```
Apply the changes?(y,n) [Y]: Y
Configuration saved successfully!
Applying...
Done.
Generating self-signed certificate, the web server will be restarted after that
...
Done.
Press ENTER to continue...
asacx>
```



---

**Note** If you change the host name, the prompt does not show the new name until you log out and log back in.

---

**Step 4** If you do not use NTP, configure the time settings. The default time zone is the UTC time zone. Use the **show time** command to see the current settings. You can use the following commands to change time settings:

```
asacx> config timezone
asacx> config time
```

**Step 5** Change the admin password by entering the following command:

```
asacx> config passwd
```

**Example:**

```
asacx> config passwd
The password must be at least 8 characters long and must contain
at least one uppercase letter (A-Z), at least one lowercase letter
(a-z) and at least one digit (0-9).
Enter password: Farscape1
Confirm password: Farscape1
SUCCESS: Password changed for user admin
```

**Step 6** Enter the **exit** command to log out.

---

## Configuring the Security Policy on the ASA CX Module Using PRSM

This section describes how to launch PRSM to configure the ASA CX module application. For details on using PRSM to configure your ASA CX security policy, see the ASA CX user guide.

### Detailed Steps

You can launch PRSM from your web browser, or you can launch it from ASDM.

- Launch PRSM from a web browser by enter the following URL:

```
https://ASA_CX_management_IP
```

Where the ASA CX management IP address is the one you set in the [“Configuring Basic ASA CX Settings at the ASA CX CLI”](#) section on page 59-7.

- Launch PRSM from ASDM by choosing **Home > ASA CX Status**, and clicking the **Connect to the ASA CX application** link.

The screenshot shows the ASA CX Status page with two main sections: Device Information and Interface Status. Both sections were last updated at 10:56:39 AM.

| Device Information |                                  | Interface Status                |                        |
|--------------------|----------------------------------|---------------------------------|------------------------|
| Model:             | ASA5585-SSP-CX10                 | Application Name:               | ASA CX Security Module |
| Hardware Version:  | 1.3                              | Application Status:             | Up                     |
| Serial Number:     | JAF1543CGRB                      | Application Status Description: | Normal Operation       |
| Firmware Version:  | 2.0(13)0                         | Application Version:            | 0.6.1                  |
| Software Version:  | 0.6.1                            | Data plane Status:              | Up                     |
| MAC Address Range: | 70ca.9bf0.1ca0 to 70ca.9bf0.1cab | Status:                         | Up                     |

Connect to the ASA CX application: <https://10.89.147.153:443>

## What to Do Next

- (Optional) Configure the authentication proxy port. See the “(Optional) Configuring the Authentication Proxy Port” section on page 59-10.
- Divert traffic to the ASA CX module. See the “Redirecting Traffic to the ASA CX Module” section on page 59-11.

## (Optional) Configuring the Authentication Proxy Port

The default authentication proxy port is 885. To change the authentication proxy port, perform the following steps. For more information about the authentication proxy, see the “Information About Authentication Proxy” section on page 59-3.



### Note

You can also set the port as part of the ASDM startup wizard. See the “Configuring Basic ASA CX Settings at the ASA CX CLI” section on page 59-7.

## Detailed Steps

| Command                                                                     | Purpose                                                                   |
|-----------------------------------------------------------------------------|---------------------------------------------------------------------------|
| <code>cxsc auth-proxy port port</code>                                      | Sets the authentication proxy port greater than 1024. The default is 885. |
| <b>Example:</b><br><code>hostname(config)# cxsc auth-proxy port 5000</code> |                                                                           |

## Redirecting Traffic to the ASA CX Module

This section identifies traffic to redirect from the ASA to the ASA CX module. Configure this policy on the ASA.



### Note

When using PRSM in multiple device mode, you can configure the ASA policy for sending traffic to the ASA CX module within PRSM, instead of using ASDM or the ASA CLI. However, PRSM has some limitations when configuring the ASA service policy; see the ASA CX user guide for more information.

### Prerequisites

If you enable the authentication proxy on the ASA using this procedure, be sure to also configure a directory realm for authentication on the ASA CX module. See the ASA CX user guide for more information.

### Detailed Steps

|        | Command                                                                                                                                                  | Purpose                                                                                                                                                                                                                                                                                                                                                                                                                          |
|--------|----------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Step 1 | <b>class-map</b> <i>name</i><br><br><b>Example:</b><br>hostname(config)# class-map cx_class                                                              | Creates a class map to identify the traffic for which you want to send to the ASA CX module.<br><br>If you want to send multiple traffic classes to the ASA CX module, you can create multiple class maps for use in the security policy.                                                                                                                                                                                        |
| Step 2 | <b>match</b> <i>parameter</i><br><br><b>Example:</b><br>hostname(config-cmap)# match access-list cx_traffic                                              | Specifies the traffic in the class map. See the “ <a href="#">Identifying Traffic (Layer 3/4 Class Maps)</a> ” section on page 32-12 for more information.                                                                                                                                                                                                                                                                       |
| Step 3 | <b>policy-map</b> <i>name</i><br><br><b>Example:</b><br>hostname(config)# policy-map cx_policy                                                           | Adds or edits a policy map that sets the actions to take with the class map traffic.                                                                                                                                                                                                                                                                                                                                             |
| Step 4 | <b>class</b> <i>name</i><br><br><b>Example:</b><br>hostname(config-pmap)# class cx_class                                                                 | Identifies the class map you created in <a href="#">Step 1</a> .                                                                                                                                                                                                                                                                                                                                                                 |
| Step 5 | <b>cxsc</b> { <b>fail-close</b>   <b>fail-open</b> } [ <b>auth-proxy</b> ]<br><br><b>Example:</b><br>hostname(config-pmap-c)# cxsc fail-close auth-proxy | Specifies that the traffic should be sent to the ASA CX module.<br><br>The <b>fail-close</b> keyword sets the ASA to block all traffic if the ASA CX module is unavailable.<br><br>The <b>fail-open</b> keyword sets the ASA to allow all traffic through, uninspected, if the ASA CX module is unavailable.<br><br>The <b>auth-proxy</b> keyword enables the authentication proxy, which is required for active authentication. |

|        | Command                                                                                                                                                                                | Purpose                                                                                                                                                                                                                                                                                                                                                                           |
|--------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Step 6 | (Optional)<br><code>class name2</code><br><br><b>Example:</b><br><code>hostname(config-pmap)# class cx_class2</code>                                                                   | If you created multiple class maps for ASA CX traffic, you can specify another class for the policy.<br><br>See the “ <a href="#">Feature Matching Within a Service Policy</a> ” section on <a href="#">page 32-3</a> for detailed information about how the order of classes matters within a policy map. Traffic cannot match more than one class map for the same action type. |
| Step 7 | (Optional)<br><code>cxsc {fail-close   fail-open} [auth-proxy]</code><br><br><b>Example:</b><br><code>hostname(config-pmap-c)# cxsc fail-close<br/>auth-proxy</code>                   | Specifies that the second class of traffic should be sent to the ASA CX module.<br><br>Add as many classes as desired by repeating these steps.                                                                                                                                                                                                                                   |
| Step 8 | <code>service-policy policymap_name {global   interface interface_name}</code><br><br><b>Example:</b><br><code>hostname(config)# service-policy cx_policy<br/>interface outside</code> | Activates the policy map on one or more interfaces. <b>global</b> applies the policy map to all interfaces, and <b>interface</b> applies the policy to one interface. Only one global policy is allowed. You can override the global policy on an interface by applying a service policy to that interface. You can only apply one policy map to each interface.                  |

## Monitoring the ASA CX Module

- [Showing Module Status, page 59-12](#)
- [Showing Module Statistics, page 59-13](#)
- [Monitoring Module Connections, page 59-14](#)
- [Capturing Module Traffic, page 59-17](#)
- [Debugging the Module, page 59-19](#)



### Note

For ASA CX-related syslog messages, see the syslog message guide. ASA CX syslog messages start with message number 429001.

## Showing Module Status

To check the status of a module, enter one of the following commands:

| Command                            | Purpose                                 |
|------------------------------------|-----------------------------------------|
| <code>show module</code>           | Displays the status.                    |
| <code>show module 1 details</code> | Displays additional status information. |

## Examples

The following is sample output from the **show module** command for an ASA with an ASA CX SSP installed:

```
hostname# show module
Mod Card Type Model Serial No.

 0 ASA 5585-X Security Services Processor-10 wi ASA5585-SSP-10 JAF1507AMKE
 1 ASA 5585-X CX Security Services Processor-10 ASA5585-SSP-CX10 JAF1510BLSA

Mod MAC Address Range Hw Version Fw Version Sw Version

 0 5475.d05b.1100 to 5475.d05b.110b 1.0 2.0(7)0 100.7(6)78
 1 5475.d05b.2450 to 5475.d05b.245b 1.0 2.0(13)0 0.6.1

Mod SSM Application Name Status SSM Application Version

 1 ASA CX Security Module Up 0.6.1

Mod Status Data Plane Status Compatibility

 0 Up Sys Not Applicable
 1 Up Up
```

## Showing Module Statistics

To show module statistics, enter the following command:

| Command                               | Purpose                                                       |
|---------------------------------------|---------------------------------------------------------------|
| <code>show service-policy cxsc</code> | Displays the ASA CX statistics and status per service policy. |

## Examples

The following is sample output from the **show service-policy** command showing the ASA CX policy and the current statistics as well as the module status when the authentication proxy is disabled:

```
hostname# show service-policy cxsc
Global policy:
 Service-policy: global_policy
 Class-map: bypass
 CXSC: card status Up, mode fail-open, auth-proxy disabled
 packet input 2626422041, packet output 2626877967, drop 0, reset-drop 0, proxied 0
```

The following is sample output from the **show service-policy** command showing the ASA CX policy and the current statistics as well as the module status when the authentication proxy is enabled; in this case, the proxied counters also increment:

```
hostname# show service-policy cxsc
Global policy:
 Service-policy: pmap
 Class-map: class-default
 Default Queueing Set connection policy: random-sequence-number disable
 drop 0
 CXSC: card status Up, mode fail-open, auth-proxy enabled
 packet input 7724, packet output 7701, drop 0, reset-drop 0, proxied 10
```

## Monitoring Module Connections

To show connections through the ASA CX module, enter the one of the following commands:

| Command                                                     | Purpose                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|-------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>show asp table classify domain cxsc</code>            | Shows the NP rules created to send traffic to the ASA CX module.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <code>show asp table classify domain cxsc-auth-proxy</code> | Shows the NP rules created for the authentication proxy for the ASA CX module.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <code>show asp drop</code>                                  | <p>Shows dropped packets. The following drop types are used:</p> <p>Frame Drops:</p> <ul style="list-style-type: none"> <li>• <code>cxsc-bad-tlv-received</code>—This occurs when ASA receives a packet from CXSC without a Policy ID TLV. This TLV must be present in non-control packets if it does not have the Standby Active bit set in the actions field.</li> <li>• <code>cxsc-request</code>—The frame was requested to be dropped by CXSC due a policy on CXSC whereby CXSC would set the actions to Deny Source, Deny Destination, or Deny Pkt.</li> <li>• <code>cxsc-fail-close</code>—The packet is dropped because the card is not up and the policy configured was 'fail-close' (rather than 'fail-open' which allows packets through even if the card was down).</li> <li>• <code>cxsc-fail</code>—The CXSC configuration was removed for an existing flow and we are not able to process it through CXSC it will be dropped. This should be very unlikely.</li> <li>• <code>cxsc-malformed-packet</code>—The packet from CXSC contains an invalid header. For instance, the header length may not be correct.</li> </ul> <p>Flow Drops:</p> <ul style="list-style-type: none"> <li>• <code>cxsc-request</code>—The CXSC requested to terminate the flow. The actions bit 0 is set.</li> <li>• <code>reset-by-cxsc</code>—The CXSC requested to terminate and reset the flow. The actions bit 1 is set.</li> <li>• <code>cxsc-fail-close</code>—The flow was terminated because the card is down and the configured policy was 'fail-close'.</li> </ul> |
| <code>show asp event dp-cp cxsc-msg</code>                  | This output shows how many ASA CX module messages are on the dp-cp queue. Currently, only VPN queries from the ASA CX module are sent to dp-cp.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <code>show conn</code>                                      | This command already shows if a connection is being forwarded to an module by displaying the 'X - inspected by service module' flag. Connections being forwarded to the ASA CX module will also display the 'X' flag.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |

### Examples

The following is sample output from the `show asp table classify domain cxsc` command:

```
hostname# show asp table classify domain cxsc
Input Table
```

```

in id=0x7ffedb4acf40, priority=50, domain=cxsc, deny=false
 hits=15485658, user_data=0x7ffedb4ac840, cs_id=0x0, use_real_addr, flags=0x0,
protocol=0
 src ip/id=0.0.0.0, mask=0.0.0.0, port=0
 dst ip/id=0.0.0.0, mask=0.0.0.0, port=0, dscp=0x0
 input_ifc=outside, output_ifc=any
in id=0x7ffedb4ad4a0, priority=50, domain=cxsc, deny=false
 hits=992053, user_data=0x7ffedb4ac840, cs_id=0x0, use_real_addr, flags=0x0, protocol=0
 src ip/id=0.0.0.0, mask=0.0.0.0, port=0
 dst ip/id=0.0.0.0, mask=0.0.0.0, port=0, dscp=0x0
 input_ifc=inside, output_ifc=any
in id=0x7ffedb4ada00, priority=50, domain=cxsc, deny=false
 hits=0, user_data=0x7ffedb4ac840, cs_id=0x0, use_real_addr, flags=0x0, protocol=0
 src ip/id=0.0.0.0, mask=0.0.0.0, port=0
 dst ip/id=0.0.0.0, mask=0.0.0.0, port=0, dscp=0x0
 input_ifc=m, output_ifc=any

```

Output Table:

L2 - Output Table:

L2 - Input Table:

Last clearing of hits counters: Never

The following is sample output from the **show asp table classify domain cxsc-auth-proxy** command. For the first rule in the output below, the destination “port=2000” is the auth-proxy port configured by the **cxsc auth-proxy port 2000** command, and the destination “ip/id=192.168.0.100” is the ASA interface IP address.

```

hostname# show asp table classify domain cxsc-auth-proxy
Input Table
in id=0x7ffed86cc470, priority=121, domain=cxsc-auth-proxy, deny=false
 hits=0, user_data=0x7ffed86ca220, cs_id=0x0, flags=0x0, protocol=6
 src ip/id=0.0.0.0, mask=0.0.0.0, port=0
 dst ip/id=192.168.0.100, mask=255.255.255.255, port=2000, dscp=0x0
 input_ifc=inside, output_ifc=identity
in id=0x7ffed86cce20, priority=121, domain=cxsc-auth-proxy, deny=false
 hits=0, user_data=0x7ffed86ca220, cs_id=0x0, flags=0x0, protocol=6
 src ip/id=0.0.0.0, mask=0.0.0.0, port=0
 dst ip/id=2.2.2.2, mask=255.255.255.255, port=2000, dscp=0x0
 input_ifc=new2, output_ifc=identity
in id=0x7ffed86cd7d0, priority=121, domain=cxsc-auth-proxy, deny=false
 hits=0, user_data=0x7ffed86ca220, cs_id=0x0, flags=0x0, protocol=6
 src ip/id=0.0.0.0, mask=0.0.0.0, port=0
 dst ip/id=172.23.58.52, mask=255.255.255.255, port=2000, dscp=0x0
 input_ifc=mgmt, output_ifc=identity
in id=0x7ffed86caa80, priority=121, domain=cxsc-auth-proxy, deny=false
 hits=0, user_data=0x7ffed86ca220, cs_id=0x0, flags=0x0, protocol=6
 src ip/id=0.0.0.0, mask=0.0.0.0, port=0
 dst ip/id=192.168.5.172, mask=255.255.255.255, port=2000, dscp=0x0
 input_ifc=outside, output_ifc=identity
in id=0x7ffed86cb3c0, priority=121, domain=cxsc-auth-proxy, deny=false
 hits=0, user_data=0x7ffed86ca220, cs_id=0x0, flags=0x0, protocol=6
 src ip/id>::/0, port=0
 dst ip/id=fe80::5675:d0ff:fe5b:1102/128, port=2000
 input_ifc=outside, output_ifc=identity
in id=0x7ffed742be10, priority=121, domain=cxsc-auth-proxy, deny=false
 hits=0, user_data=0x7ffed86ca220, cs_id=0x0, flags=0x0, protocol=6
 src ip/id>::/0, port=0
 dst ip/id=1:1:1:1::10/128, port=2000
 input_ifc=outside, output_ifc=identity

```

Output Table:

L2 - Output Table:

L2 - Input Table:

Last clearing of hits counters: Never

The following is sample output from the **show asp drop** command. This output is just an example and lists all the possible reasons for a dropped frame or flow from the ASA CX module:

```
hostname# show asp drop
Frame drop:
 CXSC Module received packet with bad TLV's (cxsc-bad-tlv-received) 2
 CXSC Module requested drop (cxsc-request) 1
 CXSC card is down (cxsc-fail-close) 1
 CXSC config removed for flow (cxsc-fail) 3
 CXSC Module received malformed packet (cxsc-malformed-packet) 1

Last clearing: 18:12:58 UTC May 11 2012 by enable_15

Flow drop:
 Flow terminated by CXSC (cxsc-request) 2
 Flow reset by CXSC (reset-by-cxsc) 1
 CXSC fail-close (cxsc-fail-close) 1

Last clearing: 18:12:58 UTC May 11 2012 by enable_15
```

The following is sample output from the **show asp event dp-cp cxsc-msg** command:

```
hostname# show asp event dp-cp cxsc-msg
DP-CP EVENT QUEUE QUEUE-LEN HIGH-WATER
Punt Event Queue 0 5
Identity-Traffic Event Queue 0 0
General Event Queue 0 4
Syslog Event Queue 4 90
Non-Blocking Event Queue 0 2
Midpath High Event Queue 0 53
Midpath Norm Event Queue 8074 8288
SRTP Event Queue 0 0
HA Event Queue 0 0
Threat-Detection Event Queue 0 3
ARP Event Queue 0 2048
IDFW Event Queue 0 0
CXSC Event Queue 0 1
EVENT-TYPE ALLOC ALLOC-FAIL ENQUEUED ENQ-FAIL RETIRED 15SEC-RATE
cxsc-msg 1 0 1 0 1 0
```

The following is sample output from the **show conn detail** command:

```
hostname# show conn detail
0 in use, 105 most used
Flags: A - awaiting inside ACK to SYN, a - awaiting outside ACK to SYN,
 B - initial SYN from outside, b - TCP state-bypass or nailed, C - CTIQBE media,
 D - DNS, d - dump, E - outside back connection, F - outside FIN, f - inside FIN,
 G - group, g - MGCP, H - H.323, h - H.225.0, I - inbound data,
 i - incomplete, J - GTP, j - GTP data, K - GTP t3-response
 k - Skinny media, M - SMTP data, m - SIP media, n - GUP
 O - outbound data, P - inside back connection, p - Phone-proxy TFTP connection,
 q - SQL*Net data, R - outside acknowledged FIN,
 R - UDP SUNRPC, r - inside acknowledged FIN, S - awaiting inside SYN,
 s - awaiting outside SYN, T - SIP, t - SIP transient, U - up,
 V - VPN orphan, W - WAAS,
 X - inspected by service module
```

```
TCP outside 208.80.152.2:80 inside 192.168.1.20:59928, idle 0:00:10, bytes 79174, flags
XUIO
```

## Capturing Module Traffic

To configure and view packet captures for the ASA CX module, enter one of the following commands:

| Command                                           | Purpose                                                              |
|---------------------------------------------------|----------------------------------------------------------------------|
| <code>capture name interface asa_dataplane</code> | Captures packets between ASA CX module and the ASA on the backplane. |
| <code>copy capture</code>                         | Copies the capture file to a server.                                 |
| <code>show capture</code>                         | Shows the capture at the ASA console.                                |



**Note** Captured packets contain an additional AFBP header that your PCAP viewer might not understand; be sure to use the appropriate plugin to view these packets.

## Troubleshooting the ASA CX Module

- [General Recovery Procedures, page 59-17](#)
- [Debugging the Module, page 59-19](#)
- [Problems with the Authentication Proxy, page 59-20](#)

## General Recovery Procedures

This section includes procedures that help you recover or troubleshoot the module and includes the following topics:

- [Resetting the Password, page 59-17](#)
- [Reloading or Resetting the Module, page 59-18](#)
- [Shutting Down the Module, page 59-19](#)



**Note** You can install or upgrade your image from within the ASA CX module. See the ASA CX module documentaiton for more information.

## Resetting the Password

You can reset the module password to the default. For the user **admin**, the default password is **Admin123**. After resetting the password, you should change it to a unique value using the module application.

Resetting the module password causes the module to reboot. Services are not available while the module is rebooting.

To reset the module password to the default of Admin123, perform the following steps.

### Detailed Steps

| Command                                                                     | Purpose                                                               |
|-----------------------------------------------------------------------------|-----------------------------------------------------------------------|
| <code>hw-module module 1 password-reset</code>                              | Resets the module password to <b>Admin123</b> for user <b>admin</b> . |
| <b>Example:</b><br><code>hostname# hw-module module 1 password-reset</code> |                                                                       |



### Reloading or Resetting the Module

To reload or reset the module, enter one of the following commands at the ASA CLI.

### Detailed Steps

| Command                                                             | Purpose                                        |
|---------------------------------------------------------------------|------------------------------------------------|
| <code>hw-module module 1 reload</code>                              | Reloads the module software.                   |
| <b>Example:</b><br><code>hostname# hw-module module 1 reload</code> |                                                |
| <code>hw-module module 1 reset</code>                               | Performs a reset, and then reloads the module. |
| <b>Example:</b><br><code>hostname# hw-module module 1 reset</code>  |                                                |

## Shutting Down the Module

If you restart the ASA, the module is not automatically restarted. To shut down the module, perform the following steps at the ASA CLI.

### Detailed Steps

| Command                                                               | Purpose                |
|-----------------------------------------------------------------------|------------------------|
| <code>hw-module module 1 shutdown</code>                              | Shuts down the module. |
| <b>Example:</b><br><code>hostname# hw-module module 1 shutdown</code> |                        |

## Debugging the Module

To enable ASA CX debugging, enter the following command:

| Command                                           | Purpose                                           |
|---------------------------------------------------|---------------------------------------------------|
| <code>debug cxsc [error   event   message]</code> | Enables debugs at error, event, or message level. |

When you enable the authentication proxy, the ASA generates a debug message when it sends an authentication proxy TLV to the ASA CX module, giving details of IP and port:

```
DP CXSC Event: Sent Auth proxy tlv for adding Auth Proxy on interface: inside4.
DP CXSC Event: Sent Auth proxy tlv for adding Auth Proxy on interface: cx_inside.
DP CXSC Event: Sent Auth proxy tlv for adding Auth Proxy on interface: cx_outside.
```

When the interface IP address is changed, auth-proxy tlv updates are sent to CXSC:

```
DP CXSC Event: Sent Auth proxy tlv for removing Auth Proxy for interface inside.
DP CXSC Event: Sent Auth proxy tlv for adding Auth Proxy on interface: inside.
```

When a flow is freed on the ASA, the ASA CX module is notified so it can clean up the flow:

```
DP CXSC Msg: Notifying CXSC that flow (handle:275233990) is being freed for
192.168.18.5:2213 -> 10.166.255.18:80.
```

When the ASA CX module sends a redirect to a client to authenticate, and that redirect is sent to the ASA, the ASA sends it to the ASA CX module. In this example, 192.168.18.3 is the interface address and port 8888 is the authentication proxy port reserved on that interface for the authentication proxy feature:

```
DP CXSC Msg: rcvd authentication proxy data from 192.168.18.5:2214 -> 192.168.18.3:8888,
forwarding to cx
```

When a VPN connection is established on the ASA, and the ASA sends connection information to the ASA CX module:

```
CXSC Event: Dumping attributes from the vpn session record
CXSC Event: tunnel->Protocol: 17
CXSC Event: tunnel->ClientVendor: SSL VPN Client
```

```

CXSC Event: tunnel->ClientVersion: Cisco AnyConnect VPN Agent for Windows 2.4.1012
CXSC Event: Sending VPN RA session data to CXSC
CXSC Event: sess index: 0x3000
CXSC Event: sess type id: 3
CXSC Event: username: devuser
CXSC Event: domain: CN=Users,DC=test,DC=priv
CXSC Event: directory type: 1
CXSC Event: login time: 1337124762
CXSC Event: nac result: 0
CXSC Event: posture token:
CXSC Event: public IP: 172.23.34.108
CXSC Event: assigned IP: 192.168.17.200
CXSC Event: client OS id: 1
CXSC Event: client OS:
CXSC Event: client type: Cisco AnyConnect VPN Agent for Windows 2.4.1012
CXSC Event: anyconnect data: , len: 0

```

## Problems with the Authentication Proxy

If you are having a problem using the authentication proxy feature, follow these steps to troubleshoot your configuration and connections:

1. Check your configurations.
  - On the ASA, check the output of the **show asp table classify domain cxsc-auth-proxy** command and make sure there are rules installed and that they are correct.
  - In PRSM, ensure the directory realm is created with the correct credentials and test the connection to make sure you can reach the authentication server; also ensure that a policy object or objects are configured for authentication.
2. Check the output of the **show service-policy cxsc** command to see if any packets were proxied.
3. Perform a packet capture on the backplane, and check to see if traffic is being redirected on the correct configured port. See the [“Capturing Module Traffic” section on page 59-17](#). You can check the configured port using the **show running-config cxsc** command or the **show asp table classify domain cxsc-auth-proxy** command.



### Note

If you have a connection between hosts on two ASA interfaces, and the ASA CX service policy is only configured for one of the interfaces, then all traffic between these hosts is sent to the ASA CX module, including traffic originating on the non-ASA CX interface (the feature is bidirectional). However, the ASA only performs the authentication proxy on the interface to which the service policy is applied, because this feature is ingress-only.

### Example 59-1 Make sure port 2000 is used consistently:

1. Check the authentication proxy port:

```

hostname# show running-config cxsc
cxsc auth-proxy port 2000

```

2. Check the authentication proxy rules:

```

hostname# show asp table classify domain cxsc-auth-proxy

Input Table
in id=0x7ffed86cc470, priority=121, domain=cxsc-auth-proxy, deny=false
hits=0, user_data=0x7ffed86ca220, cs_id=0x0, flags=0x0, protocol=6

```

```
src ip/id=0.0.0.0, mask=0.0.0.0, port=0
dst ip/id=192.168.0.100, mask=255.255.255.255, port=2000, dscp=0x0
input_ifc=inside, output_ifc=identity
```

3. In the packet captures, the redirect request should be going to destination port 2000.

## Configuration Examples for the ASA CX Module

The following example diverts all HTTP traffic to the ASA CX module, and blocks all HTTP traffic if the ASA CX module card fails for any reason:

```
hostname(config)# access-list ASACX permit tcp any any eq port 80
hostname(config)# class-map my-cx-class
hostname(config-cmap)# match access-list ASACX
hostname(config-cmap)# policy-map my-cx-policy
hostname(config-pmap)# class my-cx-class
hostname(config-pmap-c)# cxsc fail-close auth-proxy
hostname(config-pmap-c)# service-policy my-cx-policy global
```

The following example diverts all IP traffic destined for the 10.1.1.0 network and the 10.2.1.0 network to the ASA CX module, and allows all traffic through if the ASA CX module fails for any reason.

```
hostname(config)# access-list my-cx-acl1 permit ip any 10.1.1.0 255.255.255.0
hostname(config)# access-list my-cx-acl2 permit ip any 10.2.1.0 255.255.255.0
hostname(config)# class-map my-cx-class
hostname(config-cmap)# match access-list my-cx-acl1
hostname(config-cmap)# class-map my-cx-class2
hostname(config-cmap)# match access-list my-cx-acl2
hostname(config-cmap)# policy-map my-cx-policy
hostname(config-pmap)# class my-cx-class
hostname(config-pmap-c)# cxsc fail-open auth-proxy
hostname(config-pmap-c)# class my-cx-class2
hostname(config-pmap-c)# cxsc fail-open auth-proxy
hostname(config-pmap-c)# service-policy my-cx-policy interface outside
```

# Feature History for the ASA CX Module

Table 59-2 lists each feature change and the platform release in which it was implemented.

**Table 59-2** Feature History for the ASA CX Module

| Feature Name                          | Platform Releases | Feature Information                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|---------------------------------------|-------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ASA 5585-X support for the ASA CX SSP | 8.4(4.1)          | <p>ASA CX module lets you enforce security based on the complete context of a situation. This context includes the identity of the user (who), the application or website that the user is trying to access (what), the origin of the access attempt (where), the time of the attempted access (when), and the properties of the device used for the access (how). With the ASA CX module, you can extract the full context of a flow and enforce granular policies such as permitting access to Facebook but denying access to games on Facebook or permitting finance employees access to a sensitive enterprise database but denying the same to other employees.</p> <p>We introduced or modified the following commands:<br/> <b>capture, cxsc, cxsc auth-proxy, debug cxsc, hw-module module password-reset, hw-module module reload, hw-module module reset, hw-module module shutdown, session do setup host ip, session do get-config, session do password-reset, show asp table classify domain cxsc, show asp table classify domain cxsc-auth-proxy, show capture, show conn, show module, show service-policy.</b></p> <p><i>This feature is not available in Version 8.6(1).</i></p> |



## CHAPTER 60

# Configuring the ASA CSC Module

---

This chapter describes how to configure the Content Security and Control (CSC) application that is installed in a CSC SSM in the ASA.

This chapter includes the following sections:

- [Information About the CSC SSM, page 60-1](#)
- [Licensing Requirements for the CSC SSM, page 60-5](#)
- [Prerequisites for the CSC SSM, page 60-5](#)
- [Guidelines and Limitations, page 60-6](#)
- [Default Settings, page 60-6](#)
- [Configuring the CSC SSM, page 60-7](#)
- [Monitoring the CSC SSM, page 60-13](#)
- [Troubleshooting the CSC Module, page 60-14](#)
- [Configuration Examples for the CSC SSM, page 60-16](#)
- [Where to Go Next, page 60-18](#)
- [Additional References, page 60-18](#)
- [Feature History for the CSC SSM, page 60-18](#)

## Information About the CSC SSM

Some ASA models support the CSC SSM, which runs Content Security and Control software. The CSC SSM provides protection against viruses, spyware, spam, and other unwanted traffic by scanning the FTP, HTTP/HTTPS, POP3, and SMTP packets that you configure the ASA to send to it.

For more information about the CSC SSM, see the following URL:


<http://www.cisco.com/en/US/products/ps6823/index.html>

Figure 60-1 shows the flow of traffic through an ASA that has the following:

- A CSC SSM installed and configured.
- A service policy that determines what traffic is diverted to the CSC SSM for scanning.

In this example, the client could be a network user who is accessing a website, downloading files from an FTP server, or retrieving mail from a POP3 server. SMTP scans differ in that you should configure the ASA to scan traffic sent from the outside to SMTP servers protected by the ASA.

Figure 60-1 Flow of Scanned Traffic with the CSC SSM

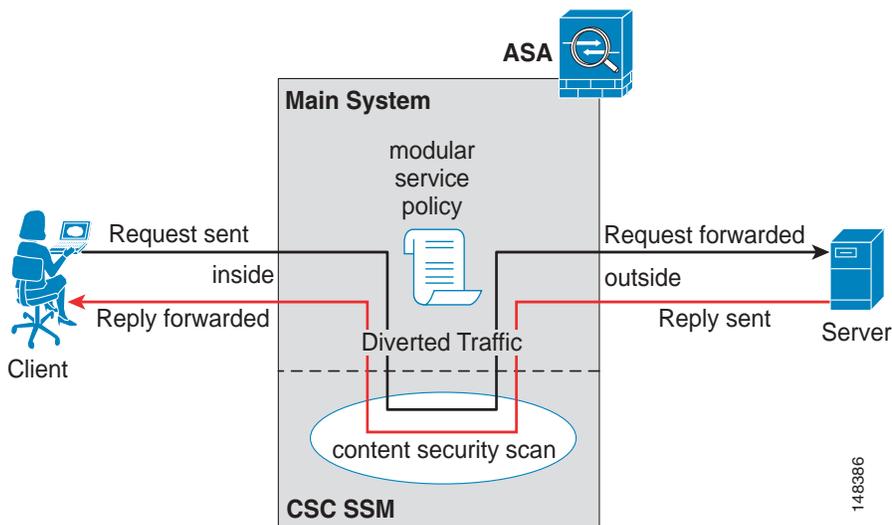

You use ASDM for system setup and monitoring of the CSC SSM. For advanced configuration of content security policies in the CSC SSM software, you access the web-based GUI for the CSC SSM by clicking links within ASDM. The CSC SSM GUI appears in a separate web browser window. To access the CSC SSM, you must enter the CSC SSM password. To use the CSC SSM GUI, see the *Cisco Content Security and Control (CSC) SSM Administrator Guide*.




**Note**

ASDM and the CSC SSM maintain separate passwords. You can configure their passwords to be identical; however, changing one of these two passwords does not affect the other password.

The connection between the host running ASDM and the ASA is made through a management port on the ASA. The connection to the CSC SSM GUI is made through the SSM management port. Because these two connections are required to manage the CSC SSM, any host running ASDM must be able to reach the IP address of both the ASA management port and the SSM management port.

Figure 60-2 shows an ASA with a CSC SSM that is connected to a dedicated management network. While use of a dedicated management network is not required, we recommend it. In this configuration, the following items are of particular interest:

- An HTTP proxy server is connected to the inside network and to the management network. This HTTP proxy server enables the CSC SSM to contact the Trend Micro Systems update server.
- The management port of the ASA is connected to the management network. To allow management of the ASA and the CSC SSM, hosts running ASDM must be connected to the management network.
- The management network includes an SMTP server for e-mail notifications for the CSC SSM and a syslog server to which the CSC SSM can send syslog messages.

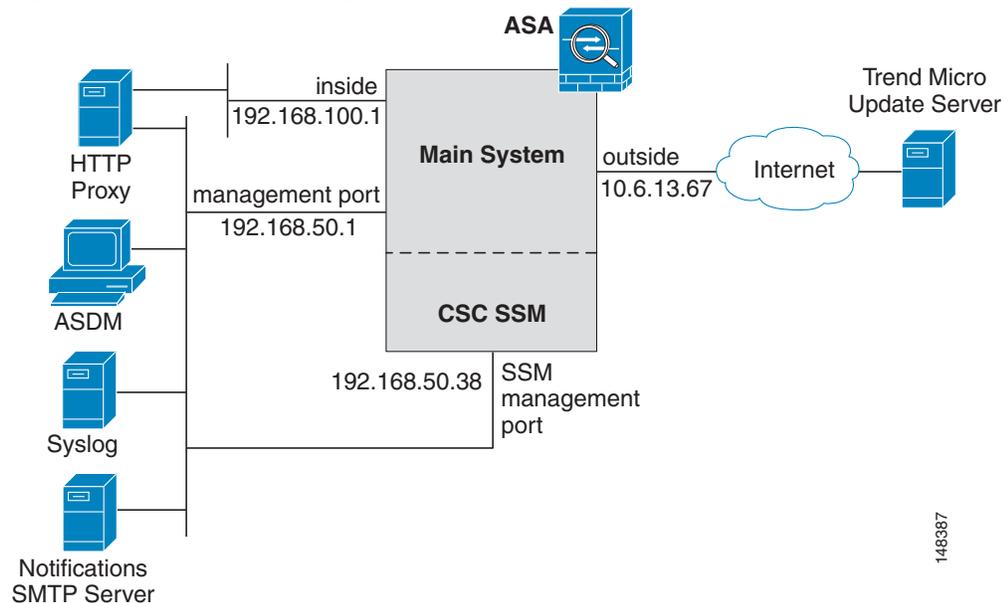**Figure 60-2** CSC SSM Deployment with a Management Network

148387

## Determining What Traffic to Scan

The CSC SSM can scan FTP, HTTP/HTTPS, POP3, and SMTP traffic only when the destination port of the packet requesting the connection is the well-known port for the specified protocol. The CSC SSM can scan only the following connections:

- FTP connections opened to TCP port 21.
- HTTP connections opened to TCP port 80.
- HTTPS connections opened to TCP port 443.
- POP3 connections opened to TCP port 110.
- SMTP connections opened to TCP port 25.

You can choose to scan traffic for all of these protocols or any combination of them. For example, if you do not allow network users to receive POP3 e-mail, do not configure the ASA to divert POP3 traffic to the CSC SSM. Instead, block this traffic.

To maximize performance of the ASA and the CSC SSM, divert only the traffic to the CSC SSM that you want the CSC SSM to scan. Diverting traffic that you do not want scanned, such as traffic between a trusted source and destination, can adversely affect network performance.




### Note

When traffic is first classified for CSC inspection, it is flow-based. If traffic is part of a pre-existing connection, the traffic goes directly to the service policy set for that connection.

You can apply service policies that include CSC scanning globally or to specific interfaces; therefore, you can choose to enable CSC scans globally or for specific interfaces.

Based on the configuration shown in Figure 60-3, configure the ASA to divert to the CSC SSM only requests from clients on the inside network for HTTP, FTP, and POP3 connections to the outside network, and incoming SMTP connections from outside hosts to the mail server on the DMZ network. Exclude from scanning HTTP requests from the inside network to the web server on the DMZ network.

**Figure 60-3 Common Network Configuration for CSC SSM Scanning**

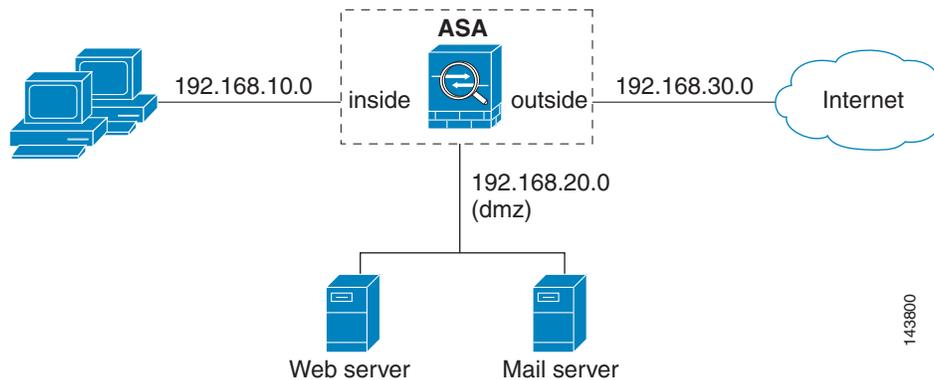

There are many ways you could configure the ASA to identify the traffic that you want to scan. One approach is to define two service policies: one on the inside interface and the other on the outside interface, each with access lists that match traffic to be scanned.

Figure 60-4 shows service policy rules that select only the traffic that the ASA should scan.

**Figure 60-4 Optimized Traffic Selection for CSC Scans**

| Configuration > Firewall > Service Policy Rules |               |                                     |       |                 |                 |              |                |                      |
|-------------------------------------------------|---------------|-------------------------------------|-------|-----------------|-----------------|--------------|----------------|----------------------|
| Traffic Classification                          |               |                                     |       |                 |                 |              |                |                      |
| #                                               | Name          | Enabled                             | Match | Source          | Destination     | Service      | Time           | Rule Actions         |
| Interface: inside, Policy: inside-policy        |               |                                     |       |                 |                 |              |                |                      |
| 1                                               | inside-class1 | <input checked="" type="checkbox"/> |       | 192.168.10.0/24 | 192.168.20.0/24 | TCP www/tcp  | -- Not Appl... | csc , permit traffic |
| 1                                               | inside-class  | <input checked="" type="checkbox"/> |       | 192.168.10.0/24 | any             | TCP ftp/tcp  | -- Not Appl... | csc , permit traffic |
| 2                                               |               | <input checked="" type="checkbox"/> |       | 192.168.10.0/24 | any             | TCP www/tcp  | -- Not Appl... |                      |
| 3                                               |               | <input checked="" type="checkbox"/> |       | 192.168.10.0/24 | any             | TCP pop3/tcp | -- Not Appl... |                      |
| Interface: outside, Policy: outside-policy      |               |                                     |       |                 |                 |              |                |                      |
| 1                                               | outside-class | <input checked="" type="checkbox"/> |       | any             | 192.168.20.0/24 | TCP smtp/tcp | -- Not Appl... | csc , permit traffic |

In the inside-policy, the first class, inside-class1, ensures that the ASA does not scan HTTP traffic between the inside network and the DMZ network. The Match column indicates this setting by displaying the “Do not match” icon. This setting does not mean the ASA blocks traffic sent from the 192.168.10.0 network to TCP port 80 on the 192.168.20.0 network. Instead, this setting exempts the traffic from being matched by the service policy applied to the inside interface, which prevents the ASA from sending the traffic to the CSC SSM.

The second class of the inside-policy, inside-class matches FTP, HTTP, and POP3 traffic between the inside network and any destination. HTTP connections to the DMZ network are exempted because of the inside-class1 setting. As previously mentioned, policies that apply CSC scanning to a specific interface affect both incoming and outgoing traffic, but by specifying 192.168.10.0 as the source network, inside-class1 matches only connections initiated by the hosts on the inside network.

In the outside-policy, outside-class matches SMTP traffic from any outside source to the DMZ network. This setting protects the SMTP server and inside users who download e-mail from the SMTP server on the DMZ network, without having to scan connections from SMTP clients to the server.

If the web server on the DMZ network receives files uploaded by HTTP from external hosts, you can add a rule to the outside policy that matches HTTP traffic from any source to the DMZ network. Because the policy is applied to the outside interface, the rule would only match connections from HTTP clients outside the ASA.

## Licensing Requirements for the CSC SSM

| Model            | License Requirement                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ASA 5510         | <ul style="list-style-type: none"> <li>Base License—Supports SMTP virus scanning, POP3 virus scanning and content filtering, web mail virus scanning, HTTP file blocking, FTP virus scanning and file blocking, logging, and automatic updates. Supports two contexts.<br/><i>Optional licenses: 5 contexts.</i></li> <li>Security Plus License—Supports the Base license features, plus SMTP anti-spam, SMTP content filtering, POP3 anti-spam, URL blocking, and URL filtering. Supports two contexts.<br/><i>Optional license: 5 contexts.</i></li> </ul> |
| ASA 5520         | Base License—Supports all features. Supports two contexts.<br><i>Optional licenses: 5, 10, or 20 contexts.</i>                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| ASA 5540         | Base License—Supports all features. Supports two contexts.<br><i>Optional licenses: 5, 10, 20, or 50 contexts.</i>                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| All other models | No support.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |

## Prerequisites for the CSC SSM

The CSC SSM has the following prerequisites:

- A CSC SSM card must be installed in the ASA.
- A Product Authorization Key (PAK) for use in registering the CSC SSM.
- Activation keys that you receive by e-mail after you register the CSC SSM.
- The management port of the CSC SSM must be connected to your network to allow management and automatic updates of the CSC SSM software.
- The CSC SSM management port IP address must be accessible by the hosts used to run ASDM.
- You must obtain the following information to use in configuring the CSC SSM:
  - The CSC SSM management port IP address, netmask, and gateway IP address.
  - DNS server IP address.
  - HTTP proxy server IP address (needed only if your security policies require the use of a proxy server for HTTP access to the Internet).

- Domain name and hostname for the CSC SSM.
- An e-mail address and an SMTP server IP address and port number for e-mail notifications.
- E-mail address(es) for product license renewal notifications.
- IP addresses of hosts or networks that are allowed to manage the CSC SSM. The IP addresses for the CSC SSM management port and the ASA management interface can be in different subnets.
- Password for the CSC SSM.

## Guidelines and Limitations

This section includes the guidelines and limitations for this feature.

### Context Mode Guidelines

Supported in single and multiple context modes.

### Firewall Mode Guidelines

Supported in routed and transparent firewall modes.

### Failover Guidelines

Does not support sessions in Stateful Failover. The CSC SSM does not maintain connection information, and therefore cannot provide the failover unit with the required information. The connections that a CSC SSM is scanning are dropped when the ASA in which the CSC SSM is installed fails. When the standby ASA becomes active, it forwards the scanned traffic to the CSC SSM and the connections are reset.

### IPv6 Guidelines

Does not support IPv6.

### Model Guidelines

Supported on the ASA 5510, ASA 5520, and ASA 5540 only.

### Additional Guidelines

You cannot change the software type installed on the module; if you purchase a CSC module, you cannot later install IPS software on it.

## Default Settings

Table 60-1 lists the default settings for the CSC SSM.

**Table 60-1** Default CSC SSM Parameters

| Parameter                                                       | Default |
|-----------------------------------------------------------------|---------|
| FTP inspection on the ASA                                       | Enabled |
| All features included in the license(s) that you have purchased | Enabled |

# Configuring the CSC SSM

This section describes how to configure the CSC SSM and includes the following topics:

- [Before Configuring the CSC SSM, page 60-7](#)
- [Connecting to the CSC SSM, page 60-8](#)
- [Diverting Traffic to the CSC SSM, page 60-10](#)

## Before Configuring the CSC SSM

Before configuring the ASA and the CSC SSM, perform the following steps:

- 
- Step 1** If the CSC SSM did not come preinstalled in a Cisco ASA, install it and connect a network cable to the management port of the SSM. For assistance with installation and connecting the SSM, see the *Cisco ASA 5500 Series Adaptive Security Appliance Getting Started Guide*.
- The management port of the CSC SSM must be connected to your network to allow management of and automatic updates to the CSC SSM software. Additionally, the CSC SSM uses the management port for e-mail notifications and syslog messages.
- Step 2** You should have received a Product Authorization Key (PAK) with the CSC SSM. Use the PAK to register the CSC SSM at the following URL.
- <http://www.cisco.com/go/license>
- After you register, you receive activation keys by e-mail. The activation keys are required before you can complete [Step 6](#).
- Step 3** Obtain the following information for use in [Step 6](#):
- Activation keys
  - CSC SSM management port IP address, netmask, and gateway IP address
  - DNS server IP address
  - HTTP proxy server IP address (needed only if your security policies require the use of a proxy server for HTTP access to the Internet)
  - Domain name and hostname for the CSC SSM
  - An e-mail address, and SMTP server IP address and port number for e-mail notifications
  - E-mail address(es) for product license renewal notifications
  - IP addresses of hosts or networks that are allowed to manage the CSC SSM
  - Password for the CSC SSM
- Step 4** In a web browser, access ASDM for the ASA in which the CSC SSM is installed.
- 
-  **Note** If you are accessing ASDM for the first time, see the [“Additional References” section on page 60-18](#).
- 
- For more information about enabling ASDM access, see the [“Configuring ASA Access for ASDM, Telnet, or SSH” section on page 37-1](#).
- Step 5** Verify time settings on the ASA. Time setting accuracy is important for logging of security events and for automatic updates of CSC SSM software. Do one of the following:

- If you manually control time settings, verify the clock settings, including time zone. Choose **Configuration > Properties > Device Administration > Clock**.
- If you are using NTP, verify the NTP configuration. Choose **Configuration > Properties > Device Administration > NTP**.

**Step 6** Open ASDM.

**Step 7** Connect to and log in to the CSC SSM. For instructions, see the [“Connecting to the CSC SSM” section on page 60-8](#).

**Step 8** Configure service policies to divert traffic that you want scanned to the CSC SSM. For instructions, see the [“Diverting Traffic to the CSC SSM” section on page 60-10](#).

**Step 9** Run the CSC Setup Wizard.

- To access the CSC Setup Wizard, choose **Configuration > Trend Micro Content Security > CSC Setup > Wizard Setup > Launch Setup Wizard**.
- If you are rerunning the CSC Setup Wizard, perform the same step listed in the previous bullet.

The CSC Setup Wizard appears.

**Step 10** Complete the CSC Setup Wizard.




---

**Note** If you create a global service policy to divert traffic for CSC scans, all traffic (inbound and outbound) for the supported protocols is scanned. To maximize performance of the ASA and the CSC SSM, scan traffic only from untrusted sources.

---

**Step 11** To reduce the load on the CSC SSM, configure the service policy rules that send packets to the CSC SSM to support only HTTP/HTTPS, SMTP, POP3, or FTP traffic.

**Step 12** (Optional) Review the default content security policies in the CSC SSM GUI, which are suitable for most implementations. You review the content security policies by viewing the enabled features in the CSC SSM GUI. For the availability of features, see the [“Licensing Requirements for the CSC SSM” section on page 60-5](#). For the default settings, see the [“Default Settings” section on page 60-6](#).

---

## What to Do Next

See the [“Connecting to the CSC SSM” section on page 60-8](#).

## Connecting to the CSC SSM

With each session you start in ASDM, the first time you access features related to the CSC SSM, you must specify the management IP address and provide the password for the CSC SSM. After you successfully connect to the CSC SSM, you are not prompted again for the management IP address and password. If you start a new ASDM session, the connection to the CSC SSM is reset and you must specify the IP address and the CSC SSM password again. The connection to the CSC SSM is also reset if you change the time zone on the ASA.




---

**Note** The CSC SSM has a password that is maintained separately from the ASDM password. You can configure the two passwords to be identical, but changing the CSC SSM password does not affect the ASDM password.

---

To connect to the CSC SSM, perform the following steps:

- 
- Step 1** In the ASDM main application window, click the **Content Security** tab.
- Step 2** In the Connecting to CSC dialog box, click one of the following radio buttons:
- To connect to the IP address of the management port on the SSM, click **Management IP Address**. ASDM automatically detects the IP address for the SSM in the ASA. If this detection fails, you can specify the management IP address manually.
  - To connect to an alternate IP address or hostname on the SSM, click **Other IP Address or Hostname**.
- Step 3** Enter the port number in the Port field, and then click **Continue**.
- Step 4** In the CSC Password field, type your CSC password, and then click **OK**.



---

**Note** If you have not completed the CSC Setup Wizard (choose **Configuration > Trend Micro Content Security > CSC Setup > Wizard Setup**), complete the configuration in the CSC Setup Wizard, which includes changing the default password, “cisco.”

For ten minutes after you have entered the password, you do not need to reenter the CSC SSM password to access other parts of the CSC SSM GUI.

---

- Step 5** To access the CSC SSM GUI, choose **Configuration > Trend Micro Content Security**, and then click one of the following tabs: **Web**, **Mail**, **File Transfer**, or **Updates**.
-

## What to Do Next

See the [“Diverting Traffic to the CSC SSM”](#) section on page 60-10.

## Diverting Traffic to the CSC SSM

You use Modular Policy Framework commands to configure the ASA to divert traffic to the CSC SSM.

### Prerequisites

Before configuring the ASA to divert traffic to the CSC SSM, see [Chapter 32, “Configuring a Service Policy Using the Modular Policy Framework,”](#) which introduces Modular Policy Framework concepts and common commands.

To configure the ASA to divert traffic to the CSC SSM, perform the following steps:

### Detailed Steps

|        | Command                                                                                                               | Purpose                                                                                                                                                                                                                                                                                                                                                                           |
|--------|-----------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Step 1 | <p><b>access-list extended</b></p> <p><b>Example:</b><br/>hostname(config)# access-list extended</p>                  | Creates an access list that matches the traffic you want scanned by the CSC SSM. Create as many ACEs as are needed to match all the traffic. For example, to specify FTP, HTTP/HTTPS, POP3, and SMTP traffic, you need four ACEs. For guidance on identifying the traffic that you want to scan, see the <a href="#">“Determining What Traffic to Scan”</a> section on page 60-3. |
| Step 2 | <p><b>class-map class_map_name</b></p> <p><b>Example:</b><br/>hostname(config)# class-map class_map_name</p>          | Creates a class map to identify the traffic that should be diverted to the CSC SSM. The <i>class_map_name</i> argument is the name of the traffic class. When you enter the <b>class-map</b> command, the CLI enters class map configuration mode.                                                                                                                                |
| Step 3 | <p><b>match access-list acl-name</b></p> <p><b>Example:</b><br/>hostname(config-cmap)# match access-list acl-name</p> | Identifies the traffic to be scanned with the access list that you created in Step 1. The <i>acl-name</i> argument is the name of the access list.                                                                                                                                                                                                                                |
| Step 4 | <p><b>policy-map policy_map_name</b></p> <p><b>Example:</b><br/>hostname(config-cmap)# policy-map policy_map_name</p> | Creates a policy map or modify an existing policy map that you want to use to send traffic to the CSC SSM. The <i>policy_map_name</i> argument is the name of the policy map. When you enter the <b>policy-map</b> command, the CLI enters policy map configuration mode.                                                                                                         |
| Step 5 | <p><b>class class_map_name</b></p> <p><b>Example:</b><br/>hostname(config-pmap)# class class_map_name</p>             | Specifies the class map, created in Step 2, that identifies the traffic to be scanned. The <i>class_map_name</i> argument is the name of the class map that you created in Step 2. The CLI enters the policy map class configuration mode.                                                                                                                                        |

| Command                                                                                                                                                                  | Purpose                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Step 6</b><br><code>set connection per-client-max <i>n</i></code><br><br><b>Example:</b><br><code>hostname(config-pmap-c)# set connection<br/>per-client-max 5</code> | Lets you configure limits to thwart DoS attacks. The <b>per-client-max</b> parameter limits the maximum number of connections that individual clients can open. If a client uses more network resources simultaneously than is desired, you can enforce a per-client limit for simultaneous connections that the ASA diverts to the CSC SSM. The <i>n</i> argument is the maximum number of simultaneous connections that the ASA allows per client. This command prevents a single client from abusing the services of the CSC SSM or any server protected by the SSM, including prevention of attempts at DoS attacks on HTTP/HTTPS, FTP, POP3, or SMTP servers that the CSC SSM protects. |

| Command                                                                                                                                                                                                                | Purpose                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p><b>Step 7</b></p> <pre>csc {fail-close   fail-open}</pre> <p><b>Example:</b><br/> hostname(config-pmap-c)# csc {fail-close   fail-open}</p>                                                                         | <p>Enables traffic scanning with the CSC SSM and assigns the traffic identified by the class map as traffic to be sent to the CSC SSM. Must be part of a service policy, which can be applied globally or to specific interfaces. Ensures that all unencrypted connections through the ASA are scanned by the CSC SSM; however, this setting may mean that traffic from trusted sources is needlessly scanned. If enabled in interface-specific service policies, this command is bi-directional. Bi-directionality means that when the ASA opens a new connection, if this command is active on either the inbound or the outbound interface of the connection and the class map for the policy identifies traffic for scanning, the ASA diverts this traffic to the CSC SSM. However, bi-directionality also means that if you divert any of the supported traffic types that cross a given interface to the CSC SSM, it is probably performing unnecessary scans on traffic from your trusted inside networks. Therefore, to further limit the traffic selected by the class maps of CSC SSM service policies, we recommend using access lists that match the following:</p> <ul style="list-style-type: none"> <li>• HTTP/HTTPS connections to outside networks.</li> <li>• FTP connections from clients inside the ASA to servers outside the ASA.</li> <li>• POP3 connections from clients inside the ASA to servers outside the ASA.</li> <li>• Incoming SMTP connections destined to inside mail servers.</li> </ul> <p>The <b>fail-close</b> and <b>fail-open</b> keywords control how the ASA handles traffic when the CSC SSM is unavailable. For more information about the operating modes and failure behavior, see the <a href="#">“Guidelines and Limitations” section on page 60-6</a>.</p> |
| <p><b>Step 8</b></p> <pre>service-policy policy_map_name [global   interface interface_ID]</pre> <p><b>Example:</b><br/> hostname(config-pmap-c)# service-policy policy_map_name [global   interface interface_ID]</p> | <p>Applies the policy map globally or to a specific interface. The <i>policy_map_name</i> argument is the policy map that you configured in Step 4. To apply the policy map to traffic on all the interfaces, use the <b>global</b> keyword. To apply the policy map to traffic on a specific interface, use the <b>interface interface_ID</b> keyword and argument pair, where <i>interface_ID</i> is the name assigned to the interface with the <b>nameif</b> command. Only one global policy is allowed. You can override the global policy on an interface by applying a service policy to that interface. You can only apply one policy map to each interface.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |

## What to Do Next

See the “Monitoring the CSC SSM” section on page 60-13.

# Monitoring the CSC SSM

To check the status of a module, enter one of the following commands:

| Command                            | Purpose                                                                  |
|------------------------------------|--------------------------------------------------------------------------|
| <code>show module</code>           | Displays the status.                                                     |
| <code>show module 1 details</code> | Displays additional status information.                                  |
| <code>show module 1 recover</code> | Displays the network parameters for transferring an image to the module. |

## Examples

The following is sample output from the `show module` command for an ASA with a CSC SSM installed:

```
hostname# show module
Mod Card Type Model Serial No.

 0 ASA 5520 Adaptive Security Appliance ASA5520 JMX1241L05S
 1 ASA 5500 Series Content Security Services Mo ASA-SSM-CSC-10 AF1234BQQL

Mod SSM Application Name Status SSM Application Version

 1 CSC SSM Down 6.2.1599.0
```

The following is sample output from the `show module details` command, which provides additional information about an ASA with a CSC SSM installed:

```
hostname# show module 1 details
Getting details from the Service Module, please wait...
ASA 5500 Series Security Services Module-20
Model: ASA-SSM-20
Hardware version: 1.0
Serial Number: JAF10333331
Firmware version: 1.0(10)0
Software version: Trend Micro InterScan Security Module Version 6.2
App. name: Trend Micro InterScan Security Module
App. version: Version 6.2
Data plane Status: Up
Status: Up
HTTP Service: Up
Mail Service: Up
FTP Service: Up
Activated: Yes
Mgmt IP addr: 209.165.200.225
Mgmt web port: 8443
```

The following is sample output from the `show module recover` command, which includes recovery details for an ASA with a CSC SSM installed:

```
hostname# show module 1 recover
Module 1 recover parameters. . .
Boot Recovery Image: Yes
Image URL: tftp://10.21.18.1/ids-oldimg
Port IP Address: 209.165.200.230
```

Port Mask: 255.255.224.0  
Gateway IP Address: 209.165.200.254

## Troubleshooting the CSC Module

This section includes procedures that help you recover or troubleshoot the module and includes the following topics:

- [Installing an Image on the Module, page 60-14](#)
- [Resetting the Password, page 60-15](#)
- [Reloading or Resetting the Module, page 60-16](#)
- [Shutting Down the Module, page 60-16](#)

**Note**

---

This section covers all ASA module types; follow the steps appropriate for your module.

---

### Installing an Image on the Module

If the module suffers a failure, and the module application image cannot run, you can reinstall a new image on the module from a TFTP server.

**Note**

---

Do not use the **upgrade** command within the module software to install the image.

---

### Prerequisites

Be sure the TFTP server that you specify can transfer files up to 60 MB in size.

**Note**

---

This process can take approximately 15 minutes to complete, depending on your network and the size of the image.

---

## Detailed Steps

|        | Command                                                                                                                                                                                                                                                                                                                                       | Purpose                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|--------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Step 1 | <b>hw-module module 1 recover configure</b><br><br><b>Example:</b><br><pre>hostname# hw-module module 1 recover configure Image URL [tftp://127.0.0.1/myimage]: tftp://10.1.1.1/ids-newimg Port IP Address [127.0.0.2]: 10.1.2.10 Port Mask [255.255.255.254]: 255.255.255.0 Gateway IP Address [1.1.2.10]: 10.1.2.254 VLAN ID [0]: 100</pre> | <p>Specifies the location of the new image. This command prompts you for the URL for the TFTP server, the management interface IP address and netmask, gateway address, and VLAN ID (ASA 5505 only). These network parameters are configured in ROMMON; the network parameters you configured in the module application configuration are not available to ROMMON, so you must set them separately here.</p> <p>You can view the recovery configuration using the <b>show module 1 recover</b> command.</p> <p>In multiple context mode, enter this command in the system execution space.</p> |
| Step 2 | <b>hw-module module 1 recover boot</b><br><br><b>Example:</b><br><pre>hostname# hw-module module 1 recover boot</pre>                                                                                                                                                                                                                         | <p>Transfers the image from the TFTP server to the module and restarts the module.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| Step 3 | <b>show module 1 details</b><br><br><b>Example:</b><br><pre>hostname# show module 1 details</pre>                                                                                                                                                                                                                                             | <p>Checks the progress of the image transfer and module restart process.</p> <p>The Status field in the output indicates the operational status of the module. A module operating normally shows a status of “Up.” While the ASA transfers an application image to the module, the Status field in the output reads “Recover.” When the ASA completes the image transfer and restarts the module, the newly transferred image is running.</p>                                                                                                                                                  |

## Resetting the Password

You can reset the module password to the default. The default password is **cisco**. After resetting the password, you should change it to a unique value using the module application.

Resetting the module password causes the module to reboot. Services are not available while the module is rebooting.

To reset the module password to the default of cisco, perform the following steps.

## Detailed Steps

| Command                                                                                                                   | Purpose                                            |
|---------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------|
| <b>hw-module module 1 password-reset</b><br><br><b>Example:</b><br><pre>hostname# hw-module module 1 password-reset</pre> | <p>Resets the module password to <b>cisco</b>.</p> |

## Reloading or Resetting the Module

To reload or reset the module, enter one of the following commands at the ASA CLI.

### Detailed Steps

| Command                                                                                        | Purpose                                        |
|------------------------------------------------------------------------------------------------|------------------------------------------------|
| <b>hw-module module 1 reload</b><br><br><b>Example:</b><br>hostname# hw-module module 1 reload | Reloads the module software.                   |
| <b>hw-module module 1 reset</b><br><br><b>Example:</b><br>hostname# hw-module module 1 reset   | Performs a reset, and then reloads the module. |

## Shutting Down the Module

If you restart the ASA, the module is not automatically restarted. To shut down the module, perform the following steps at the ASA CLI.

### Detailed Steps

| Command                                                                                            | Purpose                |
|----------------------------------------------------------------------------------------------------|------------------------|
| <b>hw-module module 1 shutdown</b><br><br><b>Example:</b><br>hostname# hw-module module 1 shutdown | Shuts down the module. |

## Configuration Examples for the CSC SSM

To identify the traffic that you want to scan, you can configure the ASA in different ways. One approach is to define two service policies, one on the inside interface and one on the outside interface, each with an access list that matches traffic to be scanned. The following example is based on the network shown in [Figure 60-3](#) and shows the creation of two service policies for a common CSC SSM scanning scenario:

- The first policy, `csc_out_policy`, is applied to the inside interface and uses the `csc_out` access list to ensure that all outbound requests for FTP and POP3 are scanned. The `csc_out` access list also ensures that HTTP connections from inside to networks on the outside interface are scanned, but it includes a deny ACE to exclude HTTP connections from inside to servers on the DMZ network.

- The second policy, `csc_in_policy`, is applied to the outside interface and uses the `csc_in` access list to ensure that requests for SMTP and HTTP originating on the outside interface and destined for the DMZ network are scanned by the CSC SSM. Scanning HTTP requests protects the web server from HTTP file uploads.

```

hostname(config)# access-list csc_out permit tcp 192.168.10.0 255.255.255.0 any eq 21
hostname(config)# access-list csc_out deny tcp 192.168.10.0 255.255.255.0 192.168.20.0
255.255.255.0 eq 80
hostname(config)# access-list csc_out permit tcp 192.168.10.0 255.255.255.0 any eq 80
hostname(config)# access-list csc_out permit tcp 192.168.10.0 255.255.255.0 any eq 110

hostname(config)# class-map csc_outbound_class
hostname(config-cmap)# match access-list csc_out

hostname(config-cmap)# policy-map csc_out_policy
hostname(config-pmap)# class csc_outbound_class
hostname(config-pmap-c)# csc fail-close

hostname(config-pmap-c)# service-policy csc_out_policy interface inside

hostname(config)# access-list csc_in permit tcp any 192.168.20.0 255.255.255.0 eq 25
hostname(config)# access-list csc_in permit tcp any 192.168.20.0 255.255.255.0 eq 80

hostname(config)# class-map csc_inbound_class
hostname(config-cmap)# match access-list csc_in

hostname(config-cmap)# policy-map csc_in_policy
hostname(config-pmap)# class csc_inbound_class
hostname(config-pmap-c)# csc fail-close

hostname(config-pmap-c)# service-policy csc_in_policy interface outside

```

The following example shows how to use an access list to exempt the traffic from being matched by the policy map and prevent the ASA from sending traffic to the CSC SSM:

```

hostname(config)# access-list csc_out permit tcp 192.168.10.0 255.255.255.0 any eq 21
hostname(config)# access-list csc_out deny tcp 192.168.10.0 255.255.255.0 192.168.20.0
255.255.255.0 eq 80
hostname(config)# access-list csc_out permit tcp 192.168.10.0 255.255.255.0 any eq 80
hostname(config)# access-list csc_out permit tcp 192.168.10.0 255.255.255.0 any eq 110

```

The following example shows how to add an ACE to the `csc_out` access list to exclude HTTP connections between the trusted external web server and inside hosts from being scanned by the CSC SSM:

```

hostname(config)# access-list csc_out deny tcp 192.168.10.0 255.255.255.0 209.165.201.7
255.255.255.255 eq 80

```

The following example shows how to use the access list on the service policy applied to the outside interface:

```

hostname(config)# access-list csc_in permit tcp any 192.168.20.0 255.255.255.0 eq 25

```

The following example shows how to add an ACE to the `csc_in` access list to use the CSC SSM to protect the web server on a DMZ network from infected files uploaded by HTTP from external hosts:

```

hostname(config)# access-list csc_in permit tcp any 192.168.20.0 255.255.255.0 eq 80

```

## Where to Go Next

For instructions about how to use the CSC SSM GUI, see the *Cisco Content Security and Control (CSC) SSM Administrator Guide*.

## Additional References

For additional information related to implementing the CSC SSM, see the following documents:

| Related Topic                                                                                                                                                                                                                                                     | Document Title                                                                                                                                        |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------|
| Assistance with SSM hardware installation and connection to the ASA.                                                                                                                                                                                              | hardware guide                                                                                                                                        |
| Accessing ASDM for the first time and assistance with the Startup Wizard.                                                                                                                                                                                         | <i>Cisco ASA 5500 Series Adaptive Security Appliance Getting Started Guide</i>                                                                        |
| Instructions on use of the CSC SSM GUI. Additional licensing requirements of specific windows available in the CSC SSM GUI. Reviewing the default content security policies in the CSC SSM GUI before modifying them or entering advanced configuration settings. | <i>Cisco Content Security and Control (CSC) SSM Administrator Guide</i>                                                                               |
| Technical Documentation, Marketing, and Support-related information.                                                                                                                                                                                              | See the following URL:<br><a href="http://www.cisco.com/en/US/products/ps6823/index.html">http://www.cisco.com/en/US/products/ps6823/index.html</a> . |

## Feature History for the CSC SSM

Table 60-2 lists each feature change and the platform release in which it was implemented.

**Table 60-2** Feature History for the CSC SSM

| Feature Name      | Platform Releases | Feature Information                                                                                                                                                                                                                                                                                                                                                       |
|-------------------|-------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| CSC SSM           | 7.0(1)            | The CSC SSM runs Content Security and Control software, which provides protection against viruses, spyware, spam, and other unwanted traffic.<br><br>We introduced the following commands: <b>csc {fail-close   fail-open}</b> , <b>hw-module module 1 [recover   reload   reset   shutdown]</b> , <b>session</b> , <b>show module [all   slot [details   recover]]</b> . |
| Password reset    | 7.2(2)            | We introduced the following command: <b>hw-module module password-reset</b> .                                                                                                                                                                                                                                                                                             |
| CSC SSM           | 8.1(1) and 8.1(2) | This feature is not supported on the ASA 5580.                                                                                                                                                                                                                                                                                                                            |
| CSC syslog format | 8.3(1)            | CSC syslog format is consistent with the ASA syslog format. Syslog message explanations have been added to the <i>Cisco Content Security and Control (CSC) SSM Administrator Guide</i> . All syslog messages include predefined syslog priorities and cannot be configured through the CSC SSM GUI.                                                                       |



## **PART 15**

### **Configuring High Availability**





# CHAPTER 61

## Information About High Availability

---

This chapter provides an overview of the failover features that enable you to achieve high availability on the Cisco 5500 series ASAs. For information about configuring high availability, see [Chapter 63, “Configuring Active/Active Failover”](#) or [Chapter 62, “Configuring Active/Standby Failover.”](#)

This chapter includes the following sections:

- [Introduction to Failover and High Availability, page 61-1](#)
- [Failover System Requirements, page 61-2](#)
- [Failover and Stateful Failover Links, page 61-3](#)
- [Active/Active and Active/Standby Failover, page 61-8](#)
- [Stateless \(Regular\) and Stateful Failover, page 61-9](#)
- [Transparent Firewall Mode Requirements, page 61-11](#)
- [Auto Update Server Support in Failover Configurations, page 61-12](#)
- [Failover Health Monitoring, page 61-14](#)
- [Failover Times, page 61-16](#)
- [Failover Messages, page 61-16](#)

## Introduction to Failover and High Availability

Configuring high availability requires two identical ASAs connected to each other through a dedicated failover link and, optionally, a Stateful Failover link. The health of the active interfaces and units is monitored to determine if specific failover conditions are met. If those conditions are met, failover occurs.

The ASA supports two failover configurations, Active/Active failover and Active/Standby failover. Each failover configuration has its own method for determining and performing failover.

With Active/Active failover, both units can pass network traffic. This also lets you configure traffic sharing on your network. Active/Active failover is available only on units running in multiple context mode.

With Active/Standby failover, only one unit passes traffic while the other unit waits in a standby state. Active/Standby failover is available on units running in either single or multiple context mode.

Both failover configurations support stateful or stateless (regular) failover.

**Note**

When the security appliance is configured for Active/Active Stateful Failover, you cannot enable IPsec or SSL VPN. Therefore, these features are unavailable. VPN failover is available for Active/Standby failover configurations only.

## Failover System Requirements

This section describes the hardware, software, and license requirements for ASAs in a failover configuration.

This section includes the following topics:

- [Hardware Requirements, page 61-2](#)
- [Software Requirements, page 61-2](#)
- [License Requirements, page 61-2](#)

## Hardware Requirements

The two units in a failover configuration must be the same model, have the same number and types of interfaces, the same SSMs installed (if any), and the same RAM installed.

If you are using units with different flash memory sizes in your failover configuration, make sure the unit with the smaller flash memory has enough space to accommodate the software image files and the configuration files. If it does not, configuration synchronization from the unit with the larger flash memory to the unit with the smaller flash memory will fail.

## Software Requirements

The two units in a failover configuration must be in the same operating modes (routed or transparent, single or multiple context). They must have the same major (first number) and minor (second number) software version. However, you can use different versions of the software during an upgrade process; for example, you can upgrade one unit from Version 8.3(1) to Version 8.3(2) and have failover remain active. We recommend upgrading both units to the same version to ensure long-term compatibility.

See the [“Performing Zero Downtime Upgrades for Failover Pairs”](#) section on page 81-6 for more information about upgrading the software on a failover pair.

## License Requirements

The two units in a failover configuration do not need to have identical licenses; the licenses combine to make a failover cluster license. See the [“Failover Licenses \(8.3\(1\) and Later\)”](#) section on page 3-28 for more information.

# Failover and Stateful Failover Links

This section describes the failover and the Stateful Failover links, which are dedicated connections between the two units in a failover configuration. This section includes the following topics:

- [Failover Link, page 61-3](#)
- [Stateful Failover Link, page 61-4](#)
- [Avoiding Interrupted Failover Links, page 61-5](#)

## Failover Link

The two units in a failover pair constantly communicate over a failover link to determine the operating status of each unit. The following information is communicated over the failover link:

- The unit state (active or standby)
- Hello messages (keep-alives)
- Network link status
- MAC address exchange
- Configuration replication and synchronization



### Caution

All information sent over the failover and Stateful Failover links is sent in clear text unless you secure the communication with a failover key. If the ASA is used to terminate VPN tunnels, this information includes any usernames, passwords and preshared keys used for establishing the tunnels. Transmitting this sensitive data in clear text could pose a significant security risk. We recommend securing the failover communication with a failover key if you are using the ASA to terminate VPN tunnels.

You can use any unused interface on the device as the failover link; however, you cannot specify an interface that is currently configured with a name. The failover link interface is not configured as a normal networking interface; it exists for failover communication only. This interface should only be used for the failover link (and optionally for the Stateful Failover link).

Connect the failover link in one of the following two ways:

- Using a switch, with no other device on the same network segment (broadcast domain or VLAN) as the failover interfaces of the ASA.
- Using a crossover Ethernet cable to connect the appliances directly, without the need for an external switch.



### Note

When you use a crossover cable for the failover link, if the interface fails, the link is brought down on both peers. This condition may hamper troubleshooting efforts because you cannot easily determine which interface failed and caused the link to come down.



### Note

The ASA supports Auto-MDI/MDIX on its copper Ethernet ports, so you can either use a crossover cable or a straight-through cable. If you use a straight-through cable, the interface automatically detects the cable and swaps one of the transmit/receive pairs to MDIX.

Although you can configure failover and failover state links on a port channel link, this port channel cannot be shared with other firewall traffic.

## Stateful Failover Link

To use Stateful Failover, you must configure a Stateful Failover link to pass all state information. You have three options for configuring a Stateful Failover link:

- You can use a dedicated Ethernet interface for the Stateful Failover link.
- You can share the failover link.
- You can share a regular data interface, such as the inside interface. However, this option is not recommended.

Connect a dedicated state link in one of the following two ways:

- Using a switch, with no other device on the same network segment (broadcast domain or VLAN) as the failover interfaces of the ASA.
- Using a crossover Ethernet cable to connect the appliances directly, without the need for an external switch.



### Note

When you use a crossover cable for the state link, if the interface fails, the link is brought down on both peers. This condition may hamper troubleshooting efforts because you cannot easily determine which interface failed and caused the link to come down.

The ASA supports Auto-MDI/MDIX on its copper Ethernet ports, so you can either use a crossover cable or a straight-through cable. If you use a straight-through cable, the interface automatically detects the cable and swaps one of the transmit/receive pairs to MDIX.

Enable the PortFast option on Cisco switch ports that connect directly to the ASA.

If you use a data interface as the Stateful Failover link, you receive the following warning when you specify that interface as the Stateful Failover link:

```
***** WARNING ***** WARNING ***** WARNING ***** WARNING *****
Sharing Stateful failover interface with regular data interface is not
a recommended configuration due to performance and security concerns.
***** WARNING ***** WARNING ***** WARNING ***** WARNING *****
```

Sharing a data interface with the Stateful Failover interface can leave you vulnerable to replay attacks. Additionally, large amounts of Stateful Failover traffic may be sent on the interface, causing performance problems on that network segment.



### Note

Using a data interface as the Stateful Failover interface is supported in single context, routed mode only.

In multiple context mode, the Stateful Failover link resides in the system context. This interface and the failover interface are the only interfaces in the system context. All other interfaces are allocated to and configured from within security contexts.



### Note

The IP address and MAC address for the Stateful Failover link does not change at failover unless the Stateful Failover link is configured on a regular data interface.

**Caution**

All information sent over the failover and Stateful Failover links is sent in clear text unless you secure the communication with a failover key. If the ASA is used to terminate VPN tunnels, this information includes any usernames, passwords, and preshared keys used for establishing the tunnels. Transmitting this sensitive data in clear text could pose a significant security risk. We recommend securing the failover communication with a failover key if you are using the ASA to terminate VPN tunnels.

## Failover Interface Speed for Stateful Links

If you use the failover link as the Stateful Failover link, you should use the fastest Ethernet interface available. If you experience performance problems on that interface, consider dedicating a separate interface for the Stateful Failover interface.

Use the following failover interface speed guidelines for the ASAs:

- Cisco ASA 5510
  - Stateful link speed can be 100 Mbps, even though the data interface can operate at 1 Gigabit due to the CPU speed limitation.
- Cisco ASA 5520/5540/5550
  - Stateful link speed should match the fastest data link.
- Cisco ASA 5580/5585
  - Use only non-management 1 Gigabit ports for the stateful link because management ports have lower performance and cannot meet the performance requirement for Stateful Failover.

For optimum performance when using long distance failover, the latency for the failover link should be less than 10 milliseconds and no more than 250 milliseconds. If latency is more than 10 milliseconds, some performance degradation occurs due to retransmission of failover messages.

The ASA supports sharing of failover heartbeat and stateful link, but we recommend using a separate heartbeat link on systems with high Stateful Failover traffic.

## Avoiding Interrupted Failover Links

Because the uses failover interfaces to transport messages between primary and secondary units, if a failover interface is down (that is, the physical link is down or the switch used to connect the interface is down), then the ASA failover operation is affected until the health of the failover interface is restored.

In the event that all communication is cut off between the units in a failover pair, both units go into the active state, which is expected behavior. When communication is restored and the two active units resume communication through the failover link or through any monitored interface, the primary unit remains active, and the secondary unit immediately returns to the standby state. This relationship is established regardless of the health of the primary unit.


Because of this behavior, stateful flows that were passed properly by the secondary active unit during the network split are now interrupted. To avoid this interruption, failover links and data interfaces should travel through different paths to decrease the chance that all links fail at the same time. In the event that only one failover link is down, the ASA takes a sample of the interface health, exchanges this information with its peer through the data interface, and performs a switchover if the active unit has a greater number of down interfaces. Subsequently, the failover operation is suspended until the health of the failover link is restored.

Depending upon their network topologies, several primary/secondary failure scenarios exist in ASA failover pairs, as shown in the following scenarios.


### Scenario 1—Not Recommended

If a single switch or a set of switches are used to connect both failover and data interfaces between two ASAs, then when a switch or inter-switch-link is down, both ASAs become active. Therefore, the following two connection methods shown in [Figure 61-1](#) and [Figure 61-2](#) are NOT recommended.

**Figure 61-1** Connecting with a Single Switch—Not Recommended




**Figure 61-2** Connecting with a Double Switch—Not Recommended

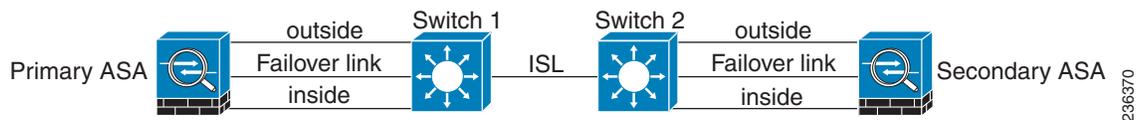


### Scenario 2—Recommended

To make the ASA failover pair resistant to failover interface failure, we recommend that failover interfaces NOT use the same switch as the data interfaces, as shown in the preceding connections. Instead, use a different switch or use a direct cable to connect two ASA failover interfaces, as shown in [Figure 61-3](#) and [Figure 61-4](#).

**Figure 61-3** Connecting with a Different Switch

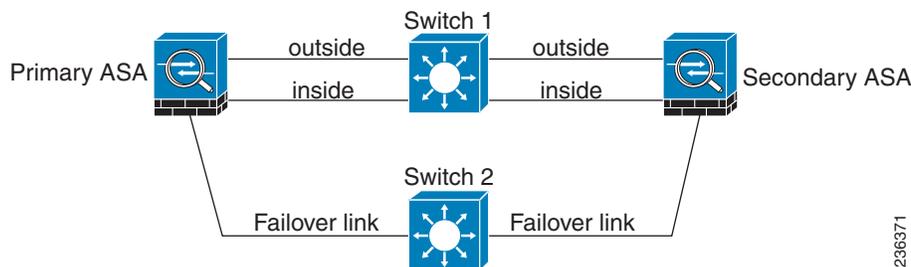


**Figure 61-4** Connecting with a Cable

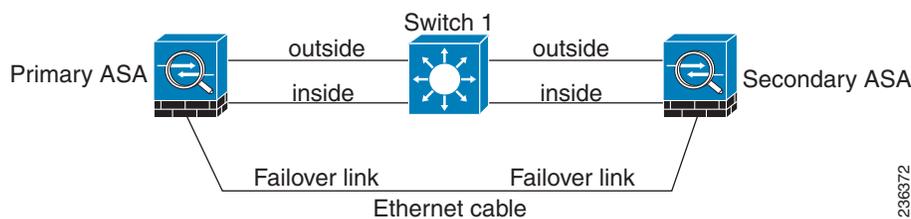

**Scenario 3—Recommended**

If the ASA data interfaces are connected to more than one set of switches, then a failover interface can be connected to one of the switches, preferably the switch on the secure side of network, as shown in Figure 61-5.

**Figure 61-5 Connecting with a Secure Switch**

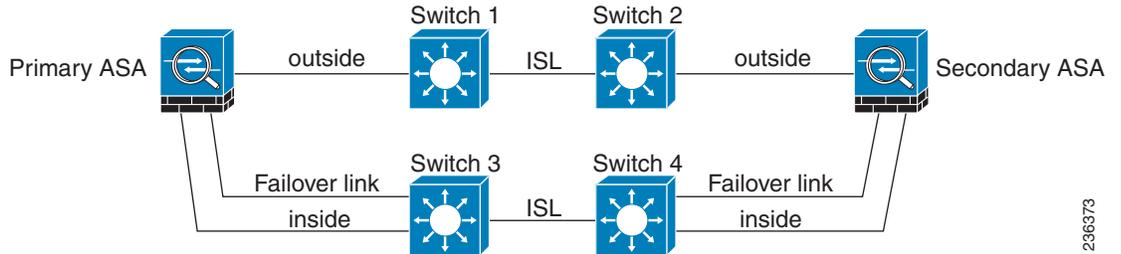


236373

**Scenario 4—Recommended**


The most reliable failover configurations use a redundant interface on the failover interface, as shown in Figure 61-6 and Figure 61-7.

**Figure 61-6 Connecting with Redundant Interfaces**

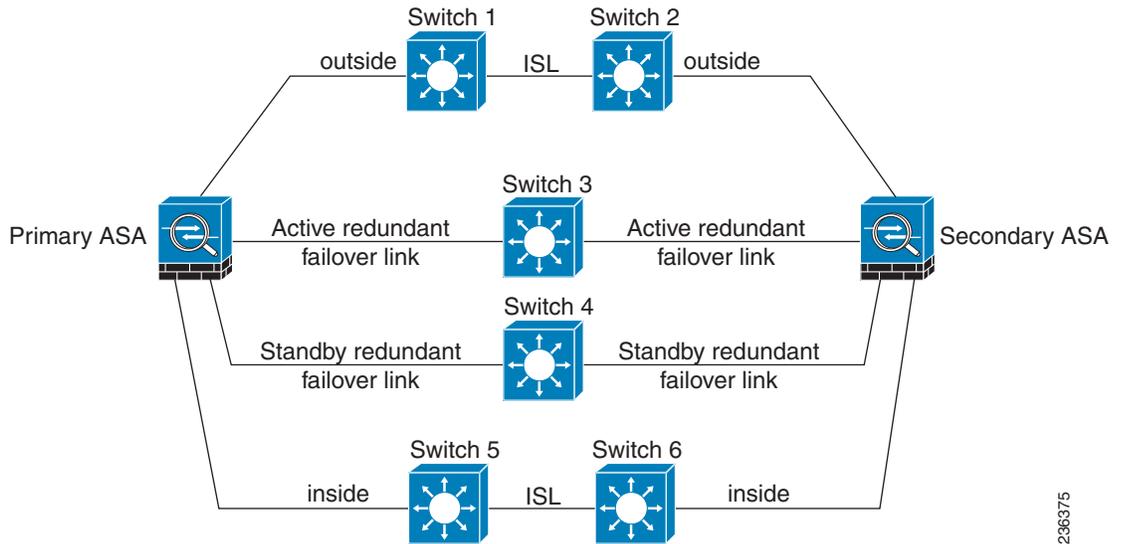

296375

Figure 61-7 Connecting with Inter-switch Links

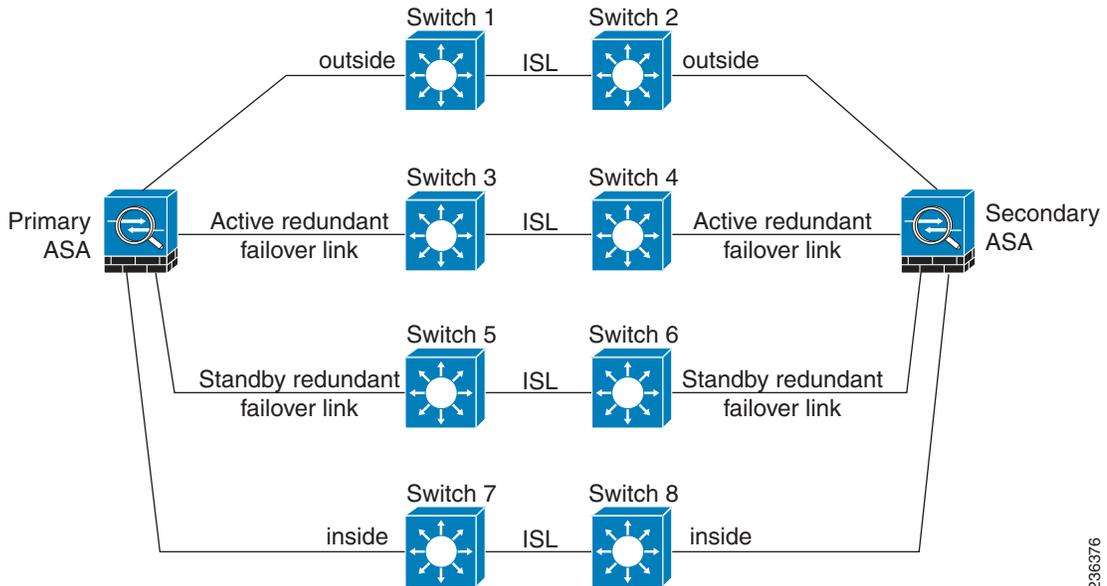

236376

## Active/Active and Active/Standby Failover

Two types of failover configurations are supported by the ASA: Active/Standby and Active/Active.

In Active/Standby failover, one unit is the active unit. It passes traffic. The standby unit does not actively pass traffic. When a failover occurs, the active unit fails over to the standby unit, which then becomes active. You can use Active/Standby failover for ASAs in single or multiple context mode, although it is most commonly used for ASAs in single context mode.

Active/Active failover is only available to ASAs in multiple context mode. In an Active/Active failover configuration, both ASAs can pass network traffic. In Active/Active failover, you divide the security contexts on the ASA into *failover groups*. A failover group is simply a logical group of one or more security contexts. Each group is assigned to be active on a specific ASA in the failover pair. When a failover occurs, it occurs at the failover group level.

For more detailed information about each type of failover, refer the following information:

- [Chapter 62, “Configuring Active/Standby Failover”](#)
- [Chapter 63, “Configuring Active/Active Failover”](#)

## Determining Which Type of Failover to Use

The type of failover you choose depends upon your ASA configuration and how you plan to use the ASAs.

If you are running the ASA in single mode, then you can use only Active/Standby failover. Active/Active failover is only available to ASAs running in multiple context mode.

**Note**

The ASA 5505 does not support multiple context mode or Active/Active failover.

VPN is not supported in multiple context mode or Active/Active failover.

If you are running the ASA in multiple context mode, then you can configure either Active/Active failover or Active/Standby failover.

- To allow both members of the failover pair to share the traffic, use Active/Active failover. Do not exceed 50% load on each device.
- If you do not want to share the traffic in this way, use Active/Standby or Active/Active failover.

Table 61-1 provides a comparison of some of the features supported by each type of failover configuration.

**Table 61-1 Failover Configuration Feature Support**

| Feature                                | Active/Active | Active/Standby |
|----------------------------------------|---------------|----------------|
| Single Context Mode                    | No            | Yes            |
| Multiple Context Mode                  | Yes           | Yes            |
| Traffic Sharing Network Configurations | Yes           | No             |
| Unit Failover                          | Yes           | Yes            |
| Failover of Groups of Contexts         | Yes           | No             |
| Failover of Individual Contexts        | No            | No             |

## Stateless (Regular) and Stateful Failover

The ASA supports two types of failover, regular and stateful. This section includes the following topics:

- [Stateless \(Regular\) Failover, page 61-9](#)
- [Stateful Failover, page 61-10](#)

### Stateless (Regular) Failover

When a failover occurs, all active connections are dropped. Clients need to reestablish connections when the new active unit takes over.

**Note**

In Version 8.0 and later, some configuration elements for clientless SSL VPN (such as bookmarks and customization) use the VPN failover subsystem, which is part of Stateful Failover. You must use Stateful Failover to synchronize these elements between the members of the failover pair. Stateless (regular) failover is not recommended for clientless SSL VPN.

## Stateful Failover

When Stateful Failover is enabled, the active unit continually passes per-connection state information to the standby unit. After a failover occurs, the same connection information is available at the new active unit. Supported end-user applications are not required to reconnect to keep the same communication session.

In Version 8.4 and later, Stateful Failover participates in dynamic routing protocols, like OSPF and EIGRP, so routes that are learned through dynamic routing protocols on the active unit are maintained in a Routing Information Base (RIB) table on the standby unit. Upon a failover event, packets travel normally with minimal disruption to traffic because the Active secondary ASA initially has rules that mirror the primary ASA. Immediately after failover, the re-convergence timer starts on the newly Active unit. Then the epoch number for the RIB table increments. During re-convergence, OSPF and EIGRP routes become updated with a new epoch number. Once the timer is expired, stale route entries (determined by the epoch number) are removed from the table. The RIB then contains the newest routing protocol forwarding information on the newly Active unit.

[Table 61-2](#) list the state information that is and is not passed to the standby unit when Stateful Failover is enabled.

**Table 61-2 State Information**

| State Information Passed to Standby Unit                             | State Information Not Passed to Standby Unit                                                                                                                                                                                                                                                              |
|----------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| NAT translation table                                                | The HTTP connection table (unless HTTP replication is enabled).                                                                                                                                                                                                                                           |
| TCP connection states                                                | The user authentication (uauth) table.<br>Inspected protocols are subject to advanced TCP-state tracking, and the TCP state of these connections is not automatically replicated. While these connections are replicated to the standby unit, there is a best-effort attempt to re-establish a TCP state. |
| UDP connection states                                                | DHCP server address leases.                                                                                                                                                                                                                                                                               |
| The ARP table                                                        | State information for modules.                                                                                                                                                                                                                                                                            |
| The Layer 2 bridge table (when running in transparent firewall mode) | Stateful Failover for phone proxy. When the active unit goes down, the call fails, media stops flowing, and the phone should unregister from the failed unit and reregister with the active unit. The call must be re-established.                                                                        |
| The HTTP connection states (if HTTP replication is enabled)          | —                                                                                                                                                                                                                                                                                                         |
| The ISAKMP and IPsec SA table                                        | —                                                                                                                                                                                                                                                                                                         |
| GTP PDP connection database                                          | —                                                                                                                                                                                                                                                                                                         |
| SIP signalling sessions                                              | —                                                                                                                                                                                                                                                                                                         |
| ICMP connection state                                                | By default, the ASA does not replicate the ICMP connection state in failover. ICMP connection replication is enabled only if the respective interface is assigned to an asymmetric routing group.                                                                                                         |

The following clientless SSL VPN features are not supported with Stateful Failover:

- Smart Tunnels
- Port Forwarding
- Plugins
- Java Applets
- IPv6 clientless or Anyconnect sessions
- Citrix authentication (Citrix users must reauthenticate after failover)



#### Note

If failover occurs during an active Cisco IP SoftPhone session, the call remains active because the call session state information is replicated to the standby unit. When the call is terminated, the IP SoftPhone client loses connection with the Cisco CallManager. This occurs because there is no session information for the CTIQBE hangup message on the standby unit. When the IP SoftPhone client does not receive a response back from the Call Manager within a certain time period, it considers the CallManager unreachable and unregisters itself.

For VPN failover, VPN end-users should not have to reauthenticate or reconnect the VPN session in the event of a failover. However, applications operating over the VPN connection could lose packets during the failover process and not recover from the packet loss.

## Transparent Firewall Mode Requirements

When the active unit fails over to the standby unit, the connected switch port running Spanning Tree Protocol (STP) can go into a blocking state for 30 to 50 seconds when it senses the topology change. To avoid traffic loss while the port is in a blocking state, you can configure one of the following workarounds depending on the switch port mode:

- Access mode—Enable the STP PortFast feature on the switch:

```
interface interface_id
spanning-tree portfast
```

The PortFast feature immediately transitions the port into STP forwarding mode upon linkup. The port still participates in STP. So if the port is to be a part of the loop, the port eventually transitions into STP blocking mode.

- Trunk mode—Block BPDUs on the ASA on both the inside and outside interfaces:

```
access-list id ethertype deny bpd
access-group id in interface inside_name
access-group id in interface outside_name
```

Blocking BPDUs disables STP on the switch. Be sure not to have any loops involving the ASA in your network layout.

If neither of the above options are possible, then you can use one of the following less desirable workarounds that impacts failover functionality or STP stability:

- Disable failover interface monitoring.
- Increase failover interface holdtime to a high value that will allow STP to converge before the ASAs fail over.
- Decrease STP timers to allow STP to converge faster than the failover interface holdtime.

# Auto Update Server Support in Failover Configurations

You can use the Auto Update Server to deploy software images and configuration files to ASAs in an Active/Standby failover configuration. To enable Auto Update on an Active/Standby failover configuration, enter the Auto Update Server configuration on the primary unit in the failover pair. See the [“Configuring Auto Update Support” section on page 81-16](#), for more information.

The following restrictions and behaviors apply to Auto Update Server support in failover configurations:

- Only single mode, Active/Standby configurations are supported.
- When loading a new platform software image, the failover pair stops passing traffic.
- When using LAN-based failover, new configurations must not change the failover link configuration. If they do, communication between the units will fail.
- Only the primary unit will perform the call home to the Auto Update Server. The primary unit must be in the active state to call home. If it is not, the ASA automatically fails over to the primary unit.
- Only the primary unit downloads the software image or configuration file. The software image or configuration is then copied to the secondary unit.
- The interface MAC address and hardware-serial ID is from the primary unit.
- The configuration file stored on the Auto Update Server or HTTP server is for the primary unit only.

## Auto Update Process Overview

The following is an overview of the Auto Update process in failover configurations. This process assumes that failover is enabled and operational. The Auto Update process cannot occur if the units are synchronizing configurations, if the standby unit is in the failed state for any reason other than SSM card failure, or if the failover link is down.

1. Both units exchange the platform and ASDM software checksum and version information.
2. The primary unit contacts the Auto Update Server. If the primary unit is not in the active state, the ASA first fails over to the primary unit and then contacts the Auto Update Server.
3. The Auto Update Server replies with software checksum and URL information.
4. If the primary unit determines that the platform image file needs to be updated for either the active or standby unit, the following occurs:
  - a. The primary unit retrieves the appropriate files from the HTTP server using the URL from the Auto Update Server.
  - b. The primary unit copies the image to the standby unit and then updates the image on itself.
  - c. If both units have new image, the secondary (standby) unit is reloaded first.
    - If hitless upgrade can be performed when secondary unit boots, then the secondary unit becomes the active unit and the primary unit reloads. The primary unit becomes the active unit when it has finished loading.
    - If hitless upgrade cannot be performed when the standby unit boots, then both units reload at the same time.
  - d. If only the secondary (standby) unit has new image, then only the secondary unit reloads. The primary unit waits until the secondary unit finishes reloading.
  - e. If only the primary (active) unit has new image, the secondary unit becomes the active unit, and the primary unit reloads.

- f. The update process starts again at Step 1.
5. If the ASA determines that the ASDM file needs to be updated for either the primary or secondary unit, the following occurs:
  - a. The primary unit retrieves the ASDM image file from the HTTP server using the URL provided by the Auto Update Server.
  - b. The primary unit copies the ASDM image to the standby unit, if needed.
  - c. The primary unit updates the ASDM image on itself.
  - d. The update process starts again at Step 1.
6. If the primary unit determines that the configuration needs to be updated, the following occurs:
  - a. The primary unit retrieves the configuration file from the using the specified URL.
  - b. The new configuration replaces the old configuration on both units simultaneously.
  - c. The update process begins again at Step 1.
7. If the checksums match for all image and configuration files, no updates are required. The process ends until the next poll time.

## Monitoring the Auto Update Process

You can use the **debug auto-update client** or **debug fover cmd-exe** commands to display the actions performed during the Auto Update process. The following is sample output from the **debug auto-update client** command.

```
Auto-update client: Sent DeviceDetails to /cgi-bin/dda.pl of server 192.168.0.21
Auto-update client: Processing UpdateInfo from server 192.168.0.21
 Component: asdm, URL: http://192.168.0.21/asdm.bint, checksum:
0x94bced0261cc992ae710faf8d244cf32
 Component: config, URL: http://192.168.0.21/config-rms.xml, checksum:
0x67358553572688a805a155af312f6898
 Component: image, URL: http://192.168.0.21/cdisk73.bin, checksum:
0x6d091b43ce96243e29a62f2330139419
Auto-update client: need to update img, act: yes, stby yes
name
ciscoasa(config)# Auto-update client: update img on stby unit...
auto-update: Fover copyfile, seq = 4 type = 1, pseq = 1, len = 1024
auto-update: Fover copyfile, seq = 4 type = 1, pseq = 501, len = 1024
auto-update: Fover copyfile, seq = 4 type = 1, pseq = 1001, len = 1024
auto-update: Fover copyfile, seq = 4 type = 1, pseq = 1501, len = 1024
auto-update: Fover copyfile, seq = 4 type = 1, pseq = 2001, len = 1024
auto-update: Fover copyfile, seq = 4 type = 1, pseq = 2501, len = 1024
auto-update: Fover copyfile, seq = 4 type = 1, pseq = 3001, len = 1024
auto-update: Fover copyfile, seq = 4 type = 1, pseq = 3501, len = 1024
auto-update: Fover copyfile, seq = 4 type = 1, pseq = 4001, len = 1024
auto-update: Fover copyfile, seq = 4 type = 1, pseq = 4501, len = 1024
auto-update: Fover copyfile, seq = 4 type = 1, pseq = 5001, len = 1024
auto-update: Fover copyfile, seq = 4 type = 1, pseq = 5501, len = 1024
auto-update: Fover copyfile, seq = 4 type = 1, pseq = 6001, len = 1024
auto-update: Fover copyfile, seq = 4 type = 1, pseq = 6501, len = 1024
auto-update: Fover copyfile, seq = 4 type = 1, pseq = 7001, len = 1024
auto-update: Fover copyfile, seq = 4 type = 1, pseq = 7501, len = 1024
auto-update: Fover copyfile, seq = 4 type = 1, pseq = 8001, len = 1024
auto-update: Fover copyfile, seq = 4 type = 1, pseq = 8501, len = 1024
auto-update: Fover copyfile, seq = 4 type = 1, pseq = 9001, len = 1024
auto-update: Fover file copy waiting at clock tick 6129280
fover_parse: Rcvd file copy ack, ret = 0, seq = 4
auto-update: Fover filecopy returns value: 0 at clock tick 6150260, upd time 145980 msecs
```

```

Auto-update client: update img on active unit...
fover_parse: Rcvd image info from mate
auto-update: HA safe reload: reload active waiting with mate state: 20
auto-update: HA safe reload: reload active waiting with mate state: 20
auto-update: HA safe reload: reload active waiting with mate state: 20
auto-update: HA safe reload: reload active waiting with mate state: 20
auto-update: HA safe reload: reload active waiting with mate state: 20
auto-update: HA safe reload: reload active waiting with mate state: 20
auto-update: HA safe reload: reload active waiting with mate state: 20
auto-update: HA safe reload: reload active waiting with mate state: 20
auto-update: HA safe reload: reload active waiting with mate state: 20
auto-update: HA safe reload: reload active waiting with mate state: 20
auto-update: HA safe reload: reload active waiting with mate state: 20
auto-update: HA safe reload: reload active waiting with mate state: 20
auto-update: HA safe reload: reload active waiting with mate state: 20
auto-update: HA safe reload: reload active waiting with mate state: 20
auto-update: HA safe reload: reload active waiting with mate state: 20
auto-update: HA safe reload: reload active waiting with mate state: 20
auto-update: HA safe reload: reload active waiting with mate state: 20
auto-update: HA safe reload: reload active waiting with mate state: 20
auto-update: HA safe reload: reload active waiting with mate state: 20
Beginning configuration replication: Sending to mate.
auto-update: HA safe reload: reload active waiting with mate state: 50
auto-update: HA safe reload: reload active waiting with mate state: 50

auto-update: HA safe reload: reload active waiting with mate state: 80
 Sauto-update: HA safe reload: reload active unit at clock tick: 6266860
Auto-update client: Succeeded: Image, version: 0x6d091b43ce96243e29a62f2330139419

```

The following system log message is generated if the Auto Update process fails:

```
%ASA4-612002: Auto Update failed: file version: version reason: reason
```

The *file* is “image”, “asdm”, or “configuration”, depending on which update failed. The *version* is the version number of the update. And the *reason* is the reason the update failed.

## Failover Health Monitoring

The ASA monitors each unit for overall health and for interface health. See the following sections for more information about how the ASA performs tests to determine the state of each unit:

- [Unit Health Monitoring, page 61-14](#)
- [Interface Monitoring, page 61-15](#)

## Unit Health Monitoring

The ASA determines the health of the other unit by monitoring the failover link. When a unit does not receive three consecutive hello messages on the failover link, the unit sends interface hello messages on each interface, including the failover interface, to validate whether or not the peer interface is responsive. The action that the ASA takes depends upon the response from the other unit. See the following possible actions:

- If the ASA receives a response on the failover interface, then it does not fail over.
- If the ASA does not receive a response on the failover link, but it does receive a response on another interface, then the unit does not failover. The failover link is marked as failed. You should restore the failover link as soon as possible because the unit cannot fail over to the standby while the failover link is down.
- If the ASA does not receive a response on any interface, then the standby unit switches to active mode and classifies the other unit as failed.

You can configure the frequency of the hello messages and the hold time before failover occurs. A faster poll time and shorter hold time speed the detection of unit failures and make failover occur more quickly, but it can also cause “false” failures due to network congestion delaying the keepalive packets.

## Interface Monitoring

You can monitor up to 250 interfaces divided between all contexts. You should monitor important interfaces. For example, you might configure one context to monitor a shared interface. (Because the interface is shared, all contexts benefit from the monitoring.)

When a unit does not receive hello messages on a monitored interface for half of the configured hold time, it runs the following tests:

1. **Link Up/Down test**—A test of the interface status. If the Link Up/Down test indicates that the interface is operational, then the ASA performs network tests. The purpose of these tests is to generate network traffic to determine which (if either) unit has failed. At the start of each test, each unit clears its received packet count for its interfaces. At the conclusion of each test, each unit looks to see if it has received any traffic. If it has, the interface is considered operational. If one unit receives traffic for a test and the other unit does not, the unit that received no traffic is considered failed. If neither unit has received traffic, then the next test is used.
2. **Network Activity test**—A received network activity test. The unit counts all received packets for up to 5 seconds. If any packets are received at any time during this interval, the interface is considered operational and testing stops. If no traffic is received, the ARP test begins.
3. **ARP test**—A reading of the unit ARP cache for the 2 most recently acquired entries. One at a time, the unit sends ARP requests to these machines, attempting to stimulate network traffic. After each request, the unit counts all received traffic for up to 5 seconds. If traffic is received, the interface is considered operational. If no traffic is received, an ARP request is sent to the next machine. If at the end of the list no traffic has been received, the ping test begins.
4. **Broadcast Ping test**—A ping test that consists of sending out a broadcast ping request. The unit then counts all received packets for up to 5 seconds. If any packets are received at any time during this interval, the interface is considered operational and testing stops.

If an interface has IPv4 and IPv6 addresses configured on it, the ASA uses the IPv4 addresses to perform the health monitoring.

If an interface has only IPv6 addresses configured on it, then the ASA uses IPv6 neighbor discovery instead of ARP to perform the health monitoring tests. For the broadcast ping test, the ASA uses the IPv6 all nodes address (FE02::1).

If all network tests fail for an interface, but this interface on the other unit continues to successfully pass traffic, then the interface is considered to be failed. If the threshold for failed interfaces is met, then a failover occurs. If the other unit interface also fails all the network tests, then both interfaces go into the “Unknown” state and do not count towards the failover limit.

An interface becomes operational again if it receives any traffic. A failed ASA returns to standby mode if the interface failure threshold is no longer met.



### Note

If a failed unit does not recover and you believe it should not be failed, you can reset the state by entering the **failover reset** command. If the failover condition persists, however, the unit will fail again.

# Failover Times

Table 61-3 shows the minimum, default, and maximum failover times.

**Table 61-3** Cisco ASA 5500 Series ASA Failover Times

| Failover Condition                                                         | Minimum          | Default    | Maximum    |
|----------------------------------------------------------------------------|------------------|------------|------------|
| Active unit loses power or stops normal operation.                         | 800 milliseconds | 15 seconds | 45 seconds |
| Active unit main board interface link down.                                | 500 milliseconds | 5 seconds  | 15 seconds |
| Active unit 4GE module interface link down.                                | 2 seconds        | 5 seconds  | 15 seconds |
| Active unit IPS or CSC module fails.                                       | 2 seconds        | 2 seconds  | 2 seconds  |
| Active unit interface up, but connection problem causes interface testing. | 5 seconds        | 25 seconds | 75 seconds |

## Failover Messages

When a failover occurs, both ASAs send out system messages. This section includes the following topics:

- [Failover System Messages, page 61-16](#)
- [Debug Messages, page 61-16](#)
- [SNMP, page 61-17](#)

## Failover System Messages

The ASA issues a number of system messages related to failover at priority level 2, which indicates a critical condition. To view these messages, see the *syslog message guide*. To enable logging, see [Chapter 77, “Configuring Logging.”](#)



### Note

During switchover, failover logically shuts down and then bring up interfaces, generating syslog messages 411001 and 411002. This is normal activity.

## Debug Messages

To see debug messages, enter the **debug fover** command. See the command reference for more information.



### Note

Because debugging output is assigned high priority in the CPU process, it can drastically affect system performance. For this reason, use the **debug fover** commands only to troubleshoot specific problems or during troubleshooting sessions with Cisco TAC.

## SNMP

To receive SNMP syslog traps for failover, configure the SNMP agent to send SNMP traps to SNMP management stations, define a syslog host, and compile the Cisco syslog MIB into your SNMP management station. See [Chapter 79, “Configuring SNMP”](#) for more information.





## Configuring Active/Standby Failover

---

This chapter describes how to configure Active/Standby failover and includes the following sections:

- [Information About Active/Standby Failover, page 62-1](#)
- [Licensing Requirements for Active/Standby Failover, page 62-6](#)
- [Prerequisites for Active/Standby Failover, page 62-6](#)
- [Guidelines and Limitations, page 62-6](#)
- [Configuring Active/Standby Failover, page 62-7](#)
- [Controlling Failover, page 62-16](#)
- [Monitoring Active/Standby Failover, page 62-18](#)
- [Feature History for Active/Standby Failover, page 62-18](#)

### Information About Active/Standby Failover

This section describes Active/Standby failover and includes the following topics:

- [Active/Standby Failover Overview, page 62-1](#)
- [Primary/Secondary Status and Active/Standby Status, page 62-2](#)
- [Device Initialization and Configuration Synchronization, page 62-2](#)
- [Command Replication, page 62-3](#)
- [Failover Triggers, page 62-4](#)
- [Failover Actions, page 62-4](#)

### Active/Standby Failover Overview

Active/Standby failover enables you to use a standby ASA to take over the functionality of a failed unit. When the active unit fails, it changes to the standby state while the standby unit changes to the active state. The unit that becomes active assumes the IP addresses (or, for transparent firewall, the management IP address) and MAC addresses of the failed unit and begins passing traffic. The unit that is now in standby state takes over the standby IP addresses and MAC addresses. Because network devices see no change in the MAC to IP address pairing, no ARP entries change or time out anywhere on the network.

**Note**

For multiple context mode, the ASA can fail over the entire unit (including all contexts) but cannot fail over individual contexts separately.

## Primary/Secondary Status and Active/Standby Status

The main differences between the two units in a failover pair are related to which unit is active and which unit is standby, namely which IP addresses to use and which unit actively passes traffic.

However, a few differences exist between the units based on which unit is primary (as specified in the configuration) and which unit is secondary:

- The primary unit always becomes the active unit if both units start up at the same time (and are of equal operational health).
- The primary unit MAC addresses are always coupled with the active IP addresses. The exception to this rule occurs when the secondary unit is active and cannot obtain the primary unit MAC addresses over the failover link. In this case, the secondary unit MAC addresses are used.

## Device Initialization and Configuration Synchronization

Configuration synchronization occurs when one or both devices in the failover pair boot. Configurations are always synchronized from the active unit to the standby unit. When the standby unit completes its initial startup, it clears its running configuration (except for the failover commands needed to communicate with the active unit), and the active unit sends its entire configuration to the standby unit.

The active unit is determined by the following:

- If a unit boots and detects a peer already running as active, it becomes the standby unit.
- If a unit boots and does not detect a peer, it becomes the active unit.
- If both units boot simultaneously, then the primary unit becomes the active unit, and the secondary unit becomes the standby unit.

**Note**

If the secondary unit boots without detecting the primary unit, it becomes the active unit. It uses its own MAC addresses for the active IP addresses. However, when the primary unit becomes available, the secondary unit changes the MAC addresses to those of the primary unit, which can cause an interruption in your network traffic. To avoid this, configure the failover pair with virtual MAC addresses. See the [“Configuring Virtual MAC Addresses”](#) section on page 62-15 for more information.

When the replication starts, the ASA console on the active unit displays the message “Beginning configuration replication: Sending to mate,” and when it is complete, the ASA displays the message “End Configuration Replication to mate.” During replication, commands entered on the active unit may not replicate properly to the standby unit, and commands entered on the standby unit may be overwritten by the configuration being replicated from the active unit. Avoid entering commands on either unit in the failover pair during the configuration replication process. Depending upon the size of the configuration, replication can take from a few seconds to several minutes.

**Note**

The **crypto ca server** command and related sub commands are not synchronized to the failover peer.

On the standby unit, the configuration exists only in running memory. To save the configuration to flash memory after synchronization, do the following:

- For single context mode, enter the **write memory** command on the active unit. The command is replicated to the standby unit, which proceeds to write its configuration to flash memory.
- For multiple context mode, enter the **write memory all** command on the active unit from the system execution space. The command is replicated to the standby unit, which proceeds to write its configuration to flash memory. Using the **all** keyword with this command causes the system and all context configurations to be saved.

**Note**

Startup configurations saved on external servers are accessible from either unit over the network and do not need to be saved separately for each unit. Alternatively, you can copy the contexts on disk from the active unit to an external server, and then copy them to disk on the standby unit, where they become available when the unit reloads.

## Command Replication

Command replication always flows from the active unit to the standby unit. As commands are entered on the active unit, they are sent across the failover link to the standby unit. You do not have to save the active configuration to flash memory to replicate the commands.

Table 62-1 lists the commands that are and are not replicated to the standby unit.

**Table 62-1** Command Replication

| Command Replicated to the Standby Unit                                                             | Commands Not Replicated to the Standby Unit                                               |
|----------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------|
| All configuration commands except for <b>mode</b> , <b>firewall</b> , and <b>failover lan unit</b> | All forms of the <b>copy</b> command except for <b>copy running-config startup-config</b> |
| <b>copy running-config startup-config</b>                                                          | all forms of the <b>write</b> command except for <b>write memory</b>                      |
| <b>delete</b>                                                                                      | <b>crypto ca server</b> and associated sub commands                                       |
| <b>mkdir</b>                                                                                       | <b>debug</b>                                                                              |
| <b>rename</b>                                                                                      | <b>failover lan unit</b>                                                                  |
| <b>rmdir</b>                                                                                       | <b>firewall</b>                                                                           |
| <b>write memory</b>                                                                                | <b>mode</b>                                                                               |
| —                                                                                                  | <b>show</b>                                                                               |
| —                                                                                                  | <b>terminal pager</b> and <b>pager</b>                                                    |

**Note**

Changes made on the standby unit are not replicated to the active unit. If you enter a command on the standby unit, the ASA displays the message **\*\*\*\* WARNING \*\*\*\* Configuration Replication is NOT performed from Standby unit to Active unit. Configurations are no longer synchronized.** This message appears even when you enter many commands that do not affect the configuration.

If you enter the **write standby** command on the active unit, the standby unit clears its running configuration (except for the failover commands used to communicate with the active unit), and the active unit sends its entire configuration to the standby unit.

For multiple context mode, when you enter the **write standby** command in the system execution space, all contexts are replicated. If you enter the **write standby** command within a context, the command replicates only the context configuration.

Replicated commands are stored in the running configuration.

**Note**

Standby Failover does not replicate the following files and configuration components:

- AnyConnect images
- CSD images
- ASA images
- AnyConnect profiles
- Local Certificate Authorities (CAs)
- ASDM images

To save the replicated commands to the flash memory on the standby unit, standby unit, do the following:

- For single context mode, enter the **copy running-config startup-config** command on the active unit. The command is replicated to the standby unit, which proceeds to write its configuration to flash memory.
- For multiple context mode, enter the **copy running-config startup-config** command on the active unit from the system execution space and within each context on disk. The command is replicated to the standby unit, which proceeds to write its configuration to flash memory. Contexts with startup configurations on external servers are accessible from either unit over the network and do not need to be saved separately for each unit. Alternatively, you can copy the contexts on disk from the active unit to an external server, and then copy them to disk on the standby unit.

## Failover Triggers

The unit can fail if one of the following events occurs:

- The unit has a hardware failure or a power failure.
- The unit has a software failure.
- Too many monitored interfaces fail.
- You force a failover. (See the [“Forcing Failover”](#) section on page 62-16.)

## Failover Actions

In Active/Standby failover, failover occurs on a unit basis. Even on systems running in multiple context mode, you cannot fail over individual or groups of contexts.

Table 62-2 shows the failover action for each failure event. For each failure event, the table shows the failover policy (failover or no failover), the action taken by the active unit, the action taken by the standby unit, and any special notes about the failover condition and actions.

**Table 62-2** Failover Behavior

| Failure Event                                     | Policy      | Active Action                     | Standby Action                         | Notes                                                                                                                                                |
|---------------------------------------------------|-------------|-----------------------------------|----------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------|
| Active unit failed (power or hardware)            | Failover    | n/a                               | Become active<br>Mark active as failed | No hello messages are received on any monitored interface or the failover link.                                                                      |
| Formerly active unit recovers                     | No failover | Become standby                    | No action                              | None.                                                                                                                                                |
| Standby unit failed (power or hardware)           | No failover | Mark standby as failed            | n/a                                    | When the standby unit is marked as failed, then the active unit does not attempt to fail over, even if the interface failure threshold is surpassed. |
| Failover link failed during operation             | No failover | Mark failover interface as failed | Mark failover interface as failed      | You should restore the failover link as soon as possible because the unit cannot fail over to the standby unit while the failover link is down.      |
| Failover link failed at startup                   | No failover | Mark failover interface as failed | Become active                          | If the failover link is down at startup, both units become active.                                                                                   |
| Stateful Failover link failed                     | No failover | No action                         | No action                              | State information becomes out of date, and sessions are terminated if a failover occurs.                                                             |
| Interface failure on active unit above threshold  | Failover    | Mark active as failed             | Become active                          | None.                                                                                                                                                |
| Interface failure on standby unit above threshold | No failover | No action                         | Mark standby as failed                 | When the standby unit is marked as failed, then the active unit does not attempt to fail over even if the interface failure threshold is surpassed.  |

## Optional Active/Standby Failover Settings

You can configure the following Active/Standby failover options when you initially configuring failover or after failover has been configured:

- HTTP replication with Stateful Failover—Allows connections to be included in the state information replication.
- Interface monitoring—Allows you to monitor up to 250 interfaces on a unit and control which interfaces affect your failover.
- Interface health monitoring—Enables the ASA to detect and respond to interface failures more quickly.
- Failover criteria setup—Allows you to specify a specific number of interfaces or a percentage of monitored interfaces that must fail before failover occurs.
- Virtual MAC address configuration—Ensures that the secondary unit uses the correct MAC addresses when it is the active unit, even if it comes online before the primary unit.

## Licensing Requirements for Active/Standby Failover

The following table shows the licensing requirements for this feature:

| Model                | License Requirement                                          |
|----------------------|--------------------------------------------------------------|
| ASA 5505             | Security Plus License. (Stateful failover is not supported). |
| ASA 5510, ASA 5512-X | Security Plus License.                                       |
| All other models     | Base License.                                                |

## Prerequisites for Active/Standby Failover

Active/Standby failover has the following prerequisites:

- Both units must be identical ASAs that are connected to each other through a dedicated failover link and, optionally, a Stateful Failover link.
- Both units must have the same software configuration and the proper license.
- Both units must be in the same mode (single or multiple, transparent or routed).

## Guidelines and Limitations

This section includes the guidelines and limitations for this feature.

### Context Mode Guidelines

- Supported in single and multiple context mode.
- For multiple context mode, perform all steps in the system execution space unless otherwise noted.

**Firewall Mode Guidelines**

- Supported in transparent and routed firewall mode.

**IPv6 Guidelines**

- IPv6 failover is supported.

**Model Guidelines**

- Stateful failover is not supported on the ASA 5505.

**Additional Guidelines and Limitations**

Configuring port security on the switch(es) connected to an ASA failover pair can cause communication problems when a failover event occurs. This is because if a secure MAC address configured or learned on one secure port moves to another secure port, a violation is flagged by the switch port security feature.

ASA failover replication fails if you try to make a configuration change in two or more contexts at the same time. The workaround is to make configuration changes on each unit sequentially.

The following guidelines and limitations apply for Active/Standby failover:

- To receive packets from both units in a failover pair, standby IP addresses need to be configured on all interfaces.
- The standby IP addresses are used on the ASA that is currently the standby unit, and they must be in the same subnet as the active IP address on the corresponding interface on the active unit.
- If you change the console terminal pager settings on the active unit in a failover pair, the active console terminal pager settings change, but the standby unit settings do not. A default configuration issued on the active unit does affect behavior on the standby unit.
- When you enable interface monitoring, you can monitor up to 250 interfaces on a unit.
- By default, the ASA does not replicate HTTP session information when Stateful Failover is enabled. Because HTTP sessions are typically short-lived, and because HTTP clients typically retry failed connection attempts, not replicating HTTP sessions increases system performance without causing serious data or connection loss. The **failover replication http** command enables the stateful replication of HTTP sessions in a Stateful Failover environment, but it could have a negative impact upon system performance.
- AnyConnect images must be the same on both ASAs in a failover pair. If the failover pair has mismatched images when a hitless upgrade is performed, then the WebVPN connection terminates in the final reboot step of the upgrade process, the database shows an orphaned session, and the IP pool shows that the IP address assigned to the client is “in use.”

## Configuring Active/Standby Failover

This section describes how to configure Active/Standby failover. This section includes the following topics:

- [Task Flow for Configuring Active/Standby Failover, page 62-8](#)
- [Configuring the Primary Unit, page 62-8](#)
- [Configuring the Secondary Unit, page 62-11](#)
- [Configuring Optional Active/Standby Failover Settings, page 62-12](#)

## Task Flow for Configuring Active/Standby Failover

To configure Active/Standby failover, perform the following steps:

- 
- Step 1** Configure the primary unit, as shown in the [“Configuring the Primary Unit”](#) section on page 62-8.
  - Step 2** Configure the secondary unit, as shown in the [“Configuring the Secondary Unit”](#) section on page 62-11.
  - Step 3** (Optional) Configure optional Active/Standby failover settings, as shown in the [“Configuring Optional Active/Standby Failover Settings”](#) section on page 62-12.
- 

## Configuring the Primary Unit

Follow the steps in this section to configure the primary unit in a LAN-based, Active/Standby failover configuration. These steps provide the minimum configuration needed to enable failover on the primary unit.

### Restrictions

Do not configure an IP address in interface configuration mode for the Stateful Failover link if you are going to use a dedicated Stateful Failover interface. You use the **failover interface ip** command to configure a dedicated Stateful Failover interface in a later step.

### Prerequisites

- Configure standby addresses for all IP addresses according to [Chapter 8, “Completing Interface Configuration \(Routed Mode\),”](#) or [Chapter 9, “Completing Interface Configuration \(Transparent Mode\).”](#)
- For multiple context mode, complete this procedure in the system execution space. To change from the context to the system execution space, enter the **changeto system** command.

## Detailed Steps

|        | Command                                                                                                                                                                                                                                                                                                                                                                                                                                                | Purpose                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|--------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Step 1 | <code>failover lan unit primary</code>                                                                                                                                                                                                                                                                                                                                                                                                                 | Designates the unit as the primary unit.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| Step 2 | <p><code>failover lan interface <i>if_name</i><br/><i>interface_id</i></code></p> <p><b>Example:</b><br/> <pre>hostname(config)# failover lan interface folink GigabitEthernet0/3</pre></p>                                                                                                                                                                                                                                                            | <p>Specifies the interface to be used as the failover interface. This interface should not be used for any other purpose (except, optionally, the Stateful Failover link).</p> <p>The <i>if_name</i> argument assigns a name to the interface specified by the <i>interface_id</i> argument.</p> <p>The interface ID can be a physical interface or a redundant interface. On the ASA 5505, the <i>interface_id</i> specifies a VLAN.</p> <p><b>Note</b> Although you can use an EtherChannel as a failover or state link, to prevent out-of-order packets, only one interface in the EtherChannel is used. If that interface fails, then the next interface in the EtherChannel is used. You cannot alter the EtherChannel configuration while it is in use as a failover link. To alter the configuration, you need to either shut down the EtherChannel while you make changes, or temporarily disable failover; either action prevents failover from occurring for the duration.</p> |
| Step 3 | <p><code>failover interface ip <i>if_name</i> [<i>ip_address</i><br/><i>mask</i> <b>standby</b> <i>ip_address</i>  <br/><i>ipv6_address/prefix</i> <b>standby</b> <i>ipv6_address</i>]</code></p> <p><b>Example:</b><br/> <pre>hostname(config)# failover interface ip folink 172.27.48.1 255.255.255.0 standby 172.27.48.2</pre> <pre>hostname(config)# failover interface ip folink 2001:a0a:b00::a0a:b70/64 standby 2001:a0a:b00::a0a:b71</pre></p> | <p>Assigns the active and standby IP addresses to the failover link. You can assign either an IPv4 or an IPv6 address to the interface. You cannot assign both types of addresses to the failover link.</p> <p>The standby IP address must be in the same subnet as the active IP address. You do not need to identify the standby address subnet mask.</p> <p>The failover link IP address and MAC address do not change at failover. The active IP address for the failover link always stays with the primary unit, while the standby IP address stays with the secondary unit.</p>                                                                                                                                                                                                                                                                                                                                                                                                   |
| Step 4 | <p><code>interface <i>interface_id</i></code></p> <p><code>no shutdown</code></p> <p><b>Example:</b><br/> <pre>hostname(config)# interface vlan100 hostname(config-if)# no shutdown</pre></p>                                                                                                                                                                                                                                                          | Enables the interface.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |

| Command                                                                                                                                                                                                                                                                                                                                                                                          | Purpose                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p><b>Step 5</b></p> <pre>failover link if_name interface_id</pre> <p><b>Example:</b></p> <pre>hostname(config)# failover link statelink GigabitEthernet0/2</pre>                                                                                                                                                                                                                                | <p>(Optional) Specifies the interface to be used as the Stateful Failover link. This interface should not be used for any other purpose (except, optionally, the failover link).</p> <p><b>Note</b> If the Stateful Failover link uses the failover link or a data interface, then you only need to supply the <i>if_name</i> argument.</p> <p>The <i>if_name</i> argument assigns a logical name to the interface specified by the <i>interface_id</i> argument. The <i>interface_id</i> argument can be the physical port name, such as Ethernet1, or a previously created subinterface, such as Ethernet0/2.3. This interface can be a physical interface or a redundant interface.</p> <p><b>Note</b> Although you can use an EtherChannel as a failover or state link, to prevent out-of-order packets, only one interface in the EtherChannel is used. If that interface fails, then the next interface in the EtherChannel is used. You cannot alter the EtherChannel configuration while it is in use as a failover link. To alter the configuration, you need to either shut down the EtherChannel while you make changes, or temporarily disable failover; either action prevents failover from occurring for the duration.</p> |
| <p><b>Step 6</b></p> <pre>failover interface ip if_name [ip_address mask standby ip_address   ipv6_address/prefix standby ipv6_address]</pre> <p><b>Example:</b></p> <pre>hostname(config)# failover interface ip folink 172.27.48.1 255.255.255.0 standby 172.27.48.2</pre> <pre>hostname(config)# failover interface ip statelink 2001:a1a:b00::a0a:a70/64 standby 2001:a1a:b00::a0a:a71</pre> | <p>(Optional) Assigns an active and standby IP address to the Stateful Failover link. You can assign either an IPv4 or an IPv6 address to the interface. You cannot assign both types of addresses to the Stateful Failover link.</p> <p><b>Note</b> If the stateful Failover link uses the failover link or data interface, skip this step. You have already defined the active and standby IP addresses for the interface.</p> <p>The standby IP address must be in the same subnet as the active IP address. You do not need to identify the standby address subnet mask.</p> <p>The Stateful Failover link IP address and MAC address do not change at failover unless it uses a data interface. The active IP address always stays with the primary unit, while the standby IP address stays with the secondary unit.</p>                                                                                                                                                                                                                                                                                                                                                                                                            |
| <p><b>Step 7</b></p> <pre>interface interface_id no shutdown</pre> <p><b>Example:</b></p> <pre>hostname(config)# interface vlan100 hostname(config-if)# no shutdown</pre>                                                                                                                                                                                                                        | <p>(Optional) Enables the interface.</p> <p>If the Stateful Failover link uses the failover link or a data interface, skip this step. You have already enabled the interface.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |

|        | Command                                                                                                                  | Purpose                                         |
|--------|--------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------|
| Step 8 | <b>failover</b><br><br><b>Example:</b><br>hostname(config)# failover                                                     | Enables failover.                               |
| Step 9 | <b>copy running-config startup-config</b><br><br><b>Example:</b><br>hostname(config)# copy running-config startup-config | Saves the system configuration to flash memory. |

## Configuring the Secondary Unit

The only configuration required on the secondary unit is for the failover interface. The secondary unit requires these commands to communicate initially with the primary unit. After the primary unit sends its configuration to the secondary unit, the only permanent difference between the two configurations is the **failover lan unit** command, which identifies each unit as primary or secondary.

### Prerequisites

When configuring LAN-based failover, you must bootstrap the secondary device to recognize the failover link before the secondary device can obtain the running configuration from the primary device.

### Detailed Steps

To configure the secondary unit, perform the following steps:

|        | Command                                                                                                                                                                                                                                                                                                                                                                                                                  | Purpose                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|--------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Step 1 | <b>failover lan interface</b> <i>if_name</i><br><i>interface_id</i><br><br><b>Example:</b><br>hostname(config)# failover lan interface folink vlan100                                                                                                                                                                                                                                                                    | Specifies the interface to be used as the failover interface. (Use the same settings that you used for the primary unit.)<br><br>The <i>if_name</i> argument assigns a name to the interface specified by the <i>interface_id</i> argument.<br><br>The interface ID can be a physical interface or a redundant interface. EtherChannel interfaces are not supported.                                                                                                                                                                                                                                        |
| Step 2 | <b>failover interface ip</b> <i>if_name</i> [ <i>ip_address</i><br><i>mask</i> <b>standby</b> <i>ip_address</i>  <br><i>ipv6_address/prefix</i> <b>standby</b> <i>ipv6_address</i> ]<br><br><b>Example:</b><br>hostname(config)# failover interface ip folink 172.27.48.1 255.255.255.0 standby 172.27.48.2<br><br>hostname(config)# failover interface ip folink 2001:a0a:b00::a0a:b70/64 standby 2001:a0a:b00::a0a:b71 | Assigns the active and standby IP addresses to the failover link. You can assign either an IPv4 or an IPv6 address to the interface. You cannot assign both types of addresses to the failover link.<br><br>To receive packets from both units in a failover pair, standby IP addresses need to be configured on all interfaces.<br><br><br><b>Note</b> Enter this command exactly as you entered it on the primary unit when you configured the failover interface on the primary unit (including the same IP address). |

|        | Command                                                                                                                                                   | Purpose                                                                                                                                                                                                                                                                                                                  |
|--------|-----------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Step 3 | <pre>interface interface_id no shutdown</pre> <p><b>Example:</b><br/> <pre>hostname(config)# interface vlan100 hostname(config-if)# no shutdown</pre></p> | Enables the interface.                                                                                                                                                                                                                                                                                                   |
| Step 4 | <pre>failover lan unit secondary</pre> <p><b>Example:</b><br/> <pre>hostname(config)# failover lan unit secondary</pre></p>                               | (Optional) Designates this unit as the secondary unit:<br><br><b>Note</b> This step is optional because, by default, units are designated as secondary unless previously configured.                                                    |
| Step 5 | <pre>failover</pre> <p><b>Example:</b><br/> <pre>hostname(config)# failover</pre></p>                                                                     | Enables failover.<br><br>After you enable failover, the active unit sends the configuration in running memory to the standby unit. As the configuration synchronizes, the messages “Beginning configuration replication: Sending to mate” and “End Configuration Replication to mate” appear on the active unit console. |
| Step 6 | <pre>copy running-config startup-config</pre> <p><b>Example:</b><br/> <pre>hostname(config)# copy running-config startup-config</pre></p>                 | Saves the configuration to flash memory.<br><br>Enter the command after the running configuration has completed replication.                                                                                                                                                                                             |

## Configuring Optional Active/Standby Failover Settings

This section includes the following topics:

- [Enabling HTTP Replication with Stateful Failover, page 62-13](#)
- [Disabling and Enabling Interface Monitoring, page 62-13](#)
- [Configuring Failover Criteria, page 62-14](#)
- [Configuring the Unit and Interface Health Poll Times, page 62-14](#)
- [Configuring Virtual MAC Addresses, page 62-15](#)

You can configure the optional Active/Standby failover settings when initially configuring the primary unit in a failover pair (see [Configuring the Primary Unit, page 62-8](#)) or on the active unit in the failover pair after the initial configuration.

## Enabling HTTP Replication with Stateful Failover

To allow HTTP connections to be included in the state information replication, you need to enable HTTP replication. Because HTTP connections are typically short-lived, and because THTTP clients typically retry failed connection attempts, HTTP connections are not automatically included in the replicated state information.

To enable HTTP state replication when Stateful Failover is enabled, enter the following command in global configuration mode:

| Command                                                                      | Purpose                         |
|------------------------------------------------------------------------------|---------------------------------|
| <code>failover replication http</code>                                       | Enables HTTP state replication. |
| <b>Example:</b><br><code>hostname (config)# failover replication http</code> |                                 |

## Disabling and Enabling Interface Monitoring

You can control which interfaces affect your failover policy by disabling the monitoring of specific interfaces and enabling the monitoring of others. This feature enables you to exclude interfaces attached to less critical networks from affecting your failover policy.

You can monitor up to 250 interfaces on a unit. By default, monitoring physical interfaces is enabled and monitoring subinterfaces is disabled.

Hello messages are exchanged during every interface poll frequency time period between the ASA failover pair. The failover interface poll time is 3 to 15 seconds. For example, if the poll time is set to 5 seconds, testing begins on an interface if 5 consecutive hellos are not heard on that interface (25 seconds).

Monitored failover interfaces can have the following status:

- Unknown—Initial status. This status can also mean the status cannot be determined.
- Normal—The interface is receiving traffic.
- Testing—Hello messages are not heard on the interface for five poll times.
- Link Down—The interface or VLAN is administratively down.
- No Link—The physical link for the interface is down.
- Failed—No traffic is received on the interface, yet traffic is heard on the peer interface.

To enable or disable health monitoring for specific interfaces on units in single configuration mode, enter one of the following commands. Alternately, for units in multiple configuration mode, you must enter the commands within each security context.

---

Do one of the following:

---

|                                                                                                                        |                                              |
|------------------------------------------------------------------------------------------------------------------------|----------------------------------------------|
| <b>no monitor-interface</b> <i>if_name</i><br><br><b>Example:</b><br>hostname(config)# no monitor-interface<br>lanlink | Disables health monitoring for an interface. |
| <b>monitor-interface</b> <i>if_name</i><br><br><b>Example:</b><br>hostname(config)# monitor-interface<br>lanlink       | Enables health monitoring for an interface.  |

## Configuring Failover Criteria

You can specify a specific number of interface or a percentage of monitored interfaces that must fail before failover occurs. By default, a single interface failure causes failover.

To change the default failover criteria, enter the following command in global configuration mode:

| Command                                                                                                                       | Purpose                                                                                                                                                                                                                                       |
|-------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>failover interface-policy</b> <i>num</i> [%]<br><br><b>Example:</b><br>hostname (config)# failover<br>interface-policy 20% | Changes the default failover criteria.<br><br>When specifying a specific number of interfaces, the <i>num</i> argument can be from 1 to 250.<br><br>When specifying a percentage of interfaces, the <i>num</i> argument can be from 1 to 100. |

## Configuring the Unit and Interface Health Poll Times

The ASA sends hello packets out of each data interface to monitor interface health. The appliance sends hello messages across the failover link to monitor unit health. If the ASA does not receive a hello packet from the corresponding interface on the peer unit for over half of the hold time, then the additional interface testing begins. If a hello packet or a successful test result is not received within the specified hold time, the interface is marked as failed. Failover occurs if the number of failed interfaces meets the failover criteria.

Decreasing the poll and hold times enables the ASA to detect and respond to interface failures more quickly but may consume more system resources. Increasing the poll and hold times prevents the ASA from failing over on networks with higher latency.

| Command                                                                                                                                                                           | Purpose                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <pre>failover polltime interface [msec] time [holdtime time]</pre> <p><b>Example:</b></p> <pre>hostname (config): failover polltime interface msec 500 holdtime 5</pre>           | <p>Changes the interface poll and hold times.</p> <p>Valid values for poll time are from 1 to 15 seconds or, if the optional <b>msec</b> keyword is used, from 500 to 999 milliseconds. The hold time determines how long it takes from the time a hello packet is missed to when the interface is marked as failed. Valid values for the hold time are from 5 to 75 seconds. You cannot enter a hold time that is less than 5 times the poll time.</p> <p>If the interface link is down, interface testing is not conducted and the standby unit could become active in just one interface polling period if the number of failed interfaces meets or exceeds the configured failover criteria.</p>                                                                                                                                   |
| <pre>failover polltime [unit] [msec] poll_time [holdtime [msec] time]</pre> <p><b>Example:</b></p> <pre>hostname(config)# failover polltime unit msec 200 holdtime msec 800</pre> | <p>Changes the unit poll and hold times.</p> <p>You cannot enter a holdtime value that is less than 3 times the unit poll time. With a faster poll time, the ASA can detect failure and trigger failover faster. However, faster detection can cause unnecessary switchovers when the network is temporarily congested.</p> <p>If a unit does not hear hello packet on the failover communication interface for one polling period, additional testing occurs through the remaining interfaces. If there is still no response from the peer unit during the hold time, the unit is considered failed and, if the failed unit is the active unit, the standby unit takes over as the active unit.</p> <p>You can include both <b>failover polltime [unit]</b> and <b>failover polltime interface</b> commands in the configuration.</p> |

## Configuring Virtual MAC Addresses

In Active/Standby failover, the MAC addresses for the primary unit are always associated with the active IP addresses. If the secondary unit boots first and becomes active, it uses the burned-in MAC address for its interfaces. When the primary unit comes online, the secondary unit obtains the MAC addresses from the primary unit. The change can disrupt network traffic.

You can configure virtual MAC addresses for each interface to ensure that the secondary unit uses the correct MAC addresses when it is the active unit, even if it comes online before the primary unit. If you do not specify virtual MAC addresses the failover pair uses the burned-in NIC addresses as the MAC addresses.



### Note

You cannot configure a virtual MAC address for the failover or Stateful Failover links. The MAC and IP addresses for those links do not change during failover.

To configure the virtual MAC addresses for an interface, enter the following command on the active unit:

| Command                                                                                                                                                                                    | Purpose                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p><b>failover mac address</b> <i>phy_if active_mac standby_mac</i></p> <p><b>Example:</b><br/> hostname (config): failover mac address<br/> Ethernet0/2 00a0.c969.87c8 00a0.c918.95d8</p> | <p>Configures the virtual MAC address for an interface.</p> <p>The <i>phy_if</i> argument is the physical name of the interface, such as Ethernet1. The <i>active_mac</i> and <i>standby_mac</i> arguments are MAC addresses in H.H.H format, where H is a 16-bit hexadecimal digit. For example, the MAC address 00-0C-F1-42-4C-DE would be entered as 000C.F142.4CDE.</p> <p>The <i>active_mac</i> address is associated with the active IP address for the interface, and the <i>standby_mac</i> is associated with the standby IP address for the interface.</p> <p>There are multiple ways to configure virtual MAC addresses on the ASA. When more than one method has been used to configure virtual MAC addresses, the ASA uses the following order of preference to determine which virtual MAC address is assigned to an interface:</p> <ol style="list-style-type: none"> <li>1. The <b>mac-address</b> command (in interface configuration mode) address.</li> <li>2. The <b>mac-address auto</b> command generated address.</li> <li>3. The <b>failover mac address</b> command address.</li> <li>4. The burned-in MAC address.</li> </ol> <p>Use the <b>show interface</b> command to display the MAC address used by an interface.</p> |

## Controlling Failover

This sections describes how to control and monitor failover. This section includes the following topics:

- [Forcing Failover, page 62-16](#)
- [Disabling Failover, page 62-17](#)
- [Restoring a Failed Unit, page 62-17](#)

## Forcing Failover

To force the standby unit to become active, enter one of the following commands:

| Command                                                                                          | Purpose                                                                                                                 |
|--------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------|
| <p><b>failover active</b></p> <p><b>Example:</b><br/> hostname# <b>failover active</b></p>       | <p>Forces a failover when entered on the standby unit in a failover pair. The standby unit becomes the active unit.</p> |
| <p><b>no failover active</b></p> <p><b>Example:</b><br/> hostname# <b>no failover active</b></p> | <p>Forces a failover when entered on the active unit in a failover pair. The active unit becomes the standby unit.</p>  |

## Disabling Failover

To disable failover, enter the following command:

| Command                                                                                | Purpose                                                                                                                                                                                                                                                                                                                                                                                      |
|----------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <pre>no failover</pre> <p><b>Example:</b><br/>hostname(config)# <b>no failover</b></p> | Disables failover. Disabling failover on an Active/Standby pair causes the active and standby state of each unit to be maintained until you restart. For example, the standby unit remains in standby mode so that both units do not start passing traffic. To make the standby unit active (even with failover disabled), see the <a href="#">“Forcing Failover”</a> section on page 62-16. |

## Restoring a Failed Unit

To restore a failed unit to an unfailed state, enter the following command:

| Command                                                                                      | Purpose                                                                                                                                                                                                                        |
|----------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <pre>failover reset</pre> <p><b>Example:</b><br/>hostname(config)# <b>failover reset</b></p> | Restores a failed unit to an unfailed state. Restoring a failed unit to an unfailed state does not automatically make it active; restored units remain in the standby state until made active by failover (forced or natural). |

## Testing the Failover Functionality

To test failover functionality, perform the following steps:

- 
- Step 1** Test that your active unit is passing traffic as expected by using FTP (for example) to send a file between hosts on different interfaces.
  - Step 2** Force a failover by entering the following command on the active unit:  
hostname(config)# **no failover active**
  - Step 3** Use FTP to send another file between the same two hosts.
  - Step 4** If the test was not successful, enter the **show failover** command to check the failover status.
  - Step 5** When you are finished, you can restore the unit to active status by enter the following command on the newly active unit:  
hostname(config)# **no failover active**
- 



### Note

When an ASA interface goes down, for failover it is still considered to be a unit issue. If the ASA detects that an interface is down, failover occurs immediately, without waiting for the interface holdtime. The interface holdtime is only useful when the ASA considers its status to be OK, although it is not receiving hello packets from the peer. To simulate interface holdtime, shut down the VLAN on the switch to prevent peers from receiving hello packets from each other.

# Monitoring Active/Standby Failover


**Note**

After a failover event you should either re-launch ASDM or switch to another device in the Devices pane and then come back to the original ASA to continue monitoring the device. This action is necessary because the monitoring connection does not become re-established when ASDM is disconnected from and then reconnected to the device.

To monitor Active/Standby failover, enter one of the following commands:

| Command                                   | Purpose                                                      |
|-------------------------------------------|--------------------------------------------------------------|
| <code>show failover</code>                | Displays information about the failover state of the unit.   |
| <code>show monitor-interface</code>       | Displays information about the monitored interface.          |
| <code>show running-config failover</code> | Displays the failover commands in the running configuration. |

For more information about the output of the monitoring commands, refer to the *Cisco ASA 5500 Series Command Reference*.

## Feature History for Active/Standby Failover

[Table 62-3](#) lists each feature change and the platform release in which it was implemented.

**Table 62-3** Feature History for Optional Active/Standby Failover Settings

| Feature Name                     | Releases | Feature Information                                                                                                                             |
|----------------------------------|----------|-------------------------------------------------------------------------------------------------------------------------------------------------|
| This feature was introduced.     | 7.0      | This feature was introduced.                                                                                                                    |
| IPv6 support for failover added. | 8.2(2)   | We modified the following commands: <b>failover interface ip</b> , <b>show failover</b> , <b>ipv6 address</b> , <b>show monitor-interface</b> . |



## Configuring Active/Active Failover

---

This chapter describes how to configure Active/Active failover and includes the following sections:

- [Information About Active/Active Failover, page 63-1](#)
- [Licensing Requirements for Active/Active Failover, page 63-6](#)
- [Prerequisites for Active/Active Failover, page 63-7](#)
- [Guidelines and Limitations, page 63-7](#)
- [Configuring Active/Active Failover, page 63-8](#)
- [Remote Command Execution, page 63-21](#)
- [Monitoring Active/Active Failover, page 63-25](#)
- [Feature History for Active/Active Failover, page 63-25](#)

### Information About Active/Active Failover

This section describes Active/Active failover. This section includes the following topics:

- [Active/Active Failover Overview, page 63-1](#)
- [Primary/Secondary Status and Active/Standby Status, page 63-2](#)
- [Device Initialization and Configuration Synchronization, page 63-3](#)
- [Command Replication, page 63-3](#)
- [Failover Triggers, page 63-4](#)
- [Failover Actions, page 63-5](#)

### Active/Active Failover Overview

Active/Active failover is only available to ASAs in multiple context mode. In an Active/Active failover configuration, both ASAs can pass network traffic.

In Active/Active failover, you divide the security contexts on the ASA into *failover groups*. A failover group is simply a logical group of one or more security contexts. You can create a maximum of two failover groups. The admin context is always a member of failover group 1. Any unassigned security contexts are also members of failover group 1 by default.

The failover group forms the base unit for failover in Active/Active failover. Interface failure monitoring, failover, and active/standby status are all attributes of a failover group rather than the unit. When an active failover group fails, it changes to the standby state while the standby failover group becomes active. The interfaces in the failover group that becomes active assume the MAC and IP addresses of the interfaces in the failover group that failed. The interfaces in the failover group that is now in the standby state take over the standby MAC and IP addresses.

**Note**

A failover group failing on a unit does not mean that the unit has failed. The unit may still have another failover group passing traffic on it.

When creating the failover groups, you should create them on the unit that will have failover group 1 in the active state.

**Note**

Active/Active failover generates virtual MAC addresses for the interfaces in each failover group. If you have more than one Active/Active failover pair on the same network, it is possible to have the same default virtual MAC addresses assigned to the interfaces on one pair as are assigned to the interfaces of the other pairs because of the way the default virtual MAC addresses are determined. To avoid having duplicate MAC addresses on your network, make sure you assign each physical interface a virtual active and standby MAC address.

## Primary/Secondary Status and Active/Standby Status

As in Active/Standby failover, one unit in an Active/Active failover pair is designated the primary unit, and the other unit the secondary unit. Unlike Active/Standby failover, this designation does not indicate which unit becomes active when both units start simultaneously. Instead, the primary/secondary designation does two things:

- Determines which unit provides the running configuration to the pair when they boot simultaneously.
- Determines on which unit each failover group appears in the active state when the units boot simultaneously. Each failover group in the configuration is configured with a primary or secondary unit preference. You can configure both failover groups be in the active state on a single unit in the pair, with the other unit containing the failover groups in the standby state. However, a more typical configuration is to assign each failover group a different role preference to make each one active on a different unit, distributing the traffic across the devices.

**Note**

The ASA also provides load balancing, which is different from failover. Both failover and load balancing can exist on the same configuration. For information about load balancing, see the [“Configuring Load Balancing”](#) section on page 66-11.

Which unit each failover group becomes active on is determined as follows:

- When a unit boots while the peer unit is not available, both failover groups become active on the unit.
- When a unit boots while the peer unit is active (with both failover groups in the active state), the failover groups remain in the active state on the active unit regardless of the primary or secondary preference of the failover group until one of the following occurs:
  - A failover occurs.

- You manually force a failover.
- You configured preemption for the failover group, which causes the failover group to automatically become active on the preferred unit when the unit becomes available.
- When both units boot at the same time, each failover group becomes active on its preferred unit after the configurations have been synchronized.

## Device Initialization and Configuration Synchronization

Configuration synchronization occurs when one or both units in a failover pair boot. The configurations are synchronized as follows:

- When a unit boots while the peer unit is active (with both failover groups active on it), the booting unit contacts the active unit to obtain the running configuration regardless of the primary or secondary designation of the booting unit.
- When both units boot simultaneously, the secondary unit obtains the running configuration from the primary unit.

When the replication starts, the ASA console on the unit sending the configuration displays the message “Beginning configuration replication: Sending to mate,” and when it is complete, the ASA displays the message “End Configuration Replication to mate.” During replication, commands entered on the unit sending the configuration may not replicate properly to the peer unit, and commands entered on the unit receiving the configuration may be overwritten by the configuration being received. Avoid entering commands on either unit in the failover pair during the configuration replication process. Depending upon the size of the configuration, replication can take from a few seconds to several minutes.

On the unit receiving the configuration, the configuration exists only in running memory. To save the configuration to flash memory after synchronization enter the **write memory all** command in the system execution space on the unit that has failover group 1 in the active state. The command is replicated to the peer unit, which proceeds to write its configuration to flash memory. Using the **all** keyword with this command causes the system and all context configurations to be saved.



### Note

Startup configurations saved on external servers are accessible from either unit over the network and do not need to be saved separately for each unit. Alternatively, you can copy the contexts configuration files from the disk on the primary unit to an external server, and then copy them to disk on the secondary unit, where they become available when the unit reloads.

## Command Replication

After both units are running, commands are replicated from one unit to the other as follows:

- Commands entered within a security context are replicated from the unit on which the security context appears in the active state to the peer unit.



### Note

A context is considered in the active state on a unit if the failover group to which it belongs is in the active state on that unit.

- Commands entered in the system execution space are replicated from the unit on which failover group 1 is in the active state to the unit on which failover group 1 is in the standby state.

- Commands entered in the admin context are replicated from the unit on which failover group 1 is in the active state to the unit on which failover group 1 is in the standby state.

Failure to enter the commands on the appropriate unit for command replication to occur causes the configurations to be out of synchronization. Those changes may be lost the next time the initial configuration synchronization occurs.

Table 63-1 lists the commands that are and are not replicated to the standby unit.

**Table 63-1** Command Replication

| Commands Replicated to the Standby Unit                                                            | Commands Not Replicated to the Standby Unit                                               |
|----------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------|
| All configuration commands except for <b>mode</b> , <b>firewall</b> , and <b>failover lan unit</b> | All forms of the <b>copy</b> command except for <b>copy running-config startup-config</b> |
| <b>copy running-config startup-config</b>                                                          | All forms of the <b>write</b> command except for <b>write memory</b>                      |
| <b>delete</b>                                                                                      | <b>debug</b>                                                                              |
| <b>mkdir</b>                                                                                       | <b>failover lan unit</b>                                                                  |
| <b>rename</b>                                                                                      | <b>firewall</b>                                                                           |
| <b>rmdir</b>                                                                                       | <b>mode</b>                                                                               |
| <b>write memory</b>                                                                                | <b>show</b>                                                                               |

You can use the **write standby** command to resynchronize configurations that have become out of sync. For Active/Active failover, the **write standby** command behaves as follows:

- If you enter the **write standby** command in the system execution space, the system configuration and the configurations for all security contexts on the ASA are written to the peer unit. This includes configuration information for security contexts that are in the standby state. You must enter the command in the system execution space on the unit that has failover group 1 in the active state.



**Note** If there are security contexts in the active state on the peer unit, the **write standby** command causes active connections through those contexts to be terminated. Use the **failover active** command on the unit providing the configuration to make sure all contexts are active on that unit before entering the **write standby** command.

- If you enter the **write standby** command in a security context, only the configuration for the security context is written to the peer unit. You must enter the command in the security context on the unit where the security context appears in the active state.

Replicated commands are not saved to the flash memory when replicated to the peer unit. They are added to the running configuration. To save replicated commands to flash memory on both units, use the **write memory** or **copy running-config startup-config** command on the unit that you made the changes on. The command is replicated to the peer unit and cause the configuration to be saved to flash memory on the peer unit.

## Failover Triggers

In Active/Active failover, failover can be triggered at the unit level if one of the following events occurs:

- The unit has a hardware failure.

- The unit has a power failure.
- The unit has a software failure.
- You force a failover. (See [Forcing Failover, page 63-23](#).)

Failover is triggered at the failover group level when one of the following events occurs:

- Too many monitored interfaces in the group fail.
- You force a failover. (See [Forcing Failover, page 63-23](#).)

You configure the failover threshold for each failover group by specifying the number or percentage of interfaces within the failover group that must fail before the group fails. Because a failover group can contain multiple contexts, and each context can contain multiple interfaces, it is possible for all interfaces in a single context to fail without causing the associated failover group to fail.

See the “[Failover Health Monitoring](#)” section on [page 61-14](#) for more information about interface and unit monitoring.

## Failover Actions

In an Active/Active failover configuration, failover occurs on a failover group basis, not a system basis. For example, if you designate both failover groups as active on the primary unit, and failover group 1 fails, then failover group 2 remains active on the primary unit while failover group 1 becomes active on the secondary unit.



### Note

When configuring Active/Active failover, make sure that the combined traffic for both units is within the capacity of each unit.

[Table 63-2](#) shows the failover action for each failure event. For each failure event, the policy (whether or not failover occurs), actions for the active failover group, and actions for the standby failover group are given.

**Table 63-2** Failover Behavior for Active/Active Failover

| Failure Event                                               | Policy      | Active Group Action              | Standby Group Action                   | Notes                                                                                                                                                               |
|-------------------------------------------------------------|-------------|----------------------------------|----------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| A unit experiences a power or software failure              | Failover    | Become standby<br>Mark as failed | Become active<br>Mark active as failed | When a unit in a failover pair fails, any active failover groups on that unit are marked as failed and become active on the peer unit.                              |
| Interface failure on active failover group above threshold  | Failover    | Mark active group as failed      | Become active                          | None.                                                                                                                                                               |
| Interface failure on standby failover group above threshold | No failover | No action                        | Mark standby group as failed           | When the standby failover group is marked as failed, the active failover group does not attempt to fail over, even if the interface failure threshold is surpassed. |
| Formerly active failover group recovers                     | No failover | No action                        | No action                              | Unless failover group preemption is configured, the failover groups remain active on their current unit.                                                            |

**Table 63-2** Failover Behavior for Active/Active Failover (continued)

| Failure Event                         | Policy      | Active Group Action | Standby Group Action | Notes                                                                                                                                                                                             |
|---------------------------------------|-------------|---------------------|----------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Failover link failed at startup       | No failover | Become active       | Become active        | If the failover link is down at startup, both failover groups on both units become active.                                                                                                        |
| Stateful Failover link failed         | No failover | No action           | No action            | State information becomes out of date, and sessions are terminated if a failover occurs.                                                                                                          |
| Failover link failed during operation | No failover | n/a                 | n/a                  | Each unit marks the failover interface as failed. You should restore the failover link as soon as possible because the unit cannot fail over to the standby unit while the failover link is down. |

## Optional Active/Active Failover Settings

You can configure the following Active/Standby failover options when you initially configuring failover or after failover has been configured:

- Failover Group Preemption—Assigns a primary or secondary priority to a failover group to specify on which unit in the failover group becomes active when both units boot simultaneously.
- HTTP replication with Stateful Failover—Allows connections to be included in the state information replication.
- Interface monitoring—Allows you to monitor up to 250 interfaces on a unit and control which interfaces affect your failover.
- Interface health monitoring—Enables the security appliance to detect and respond to interface failures more quickly.
- Failover criteria setup—Allows you to specify a specific number of interfaces or a percentage of monitored interfaces that must fail before failover occurs.
- Virtual MAC address configuration—Ensures that the secondary unit uses the correct MAC addresses when it is the active unit, even if it comes online before the primary unit.

## Licensing Requirements for Active/Active Failover

The following table shows the licensing requirements for this feature:

| Model                   | License Requirement    |
|-------------------------|------------------------|
| ASA 5505                | No support.            |
| ASA 5510,<br>ASA 5512-X | Security Plus License. |
| All other models        | Base License.          |

# Prerequisites for Active/Active Failover

In Active/Active failover, both units must have the following:

- The same hardware model.
- The same number of interfaces.
- The same types of interfaces.
- The same software version, with the same major (first number) and minor (second number) version numbers. However you can use different versions of the software during an upgrade process; for example you can upgrade one unit from Version 7.0(1) to Version 7.9(2) and have failover remain active. We recommend upgrading both units to the same version to ensure long-term compatibility.
- The same software configuration.
- The same mode (multiple context mode).
- The proper license.

## Guidelines and Limitations

This section includes the guidelines and limitations for this feature.

### Context Mode Guidelines

Supported in multiple context mode only.

### Firewall Mode Guidelines

Supported in routed and transparent firewall mode.

### IPv6 Guidelines

IPv6 failover is supported.

### Model Guidelines

Active/Active failover is not available on the Cisco ASA 5505.

### Additional Guidelines and Limitations

No two interfaces in the same context should be configured in the same ASR group.

ASA failover replication fails if you try to make a configuration change on two or more contexts at the same time. The workaround is to make configuration changes on each unit sequentially.

The following features are not supported for Active/Active failover:

- To receive packets from both units in a failover pair, standby IP addresses need to be configured on all interfaces.
- The standby IP address is used on the security appliance that is currently the standby unit, and it must be in the same subnet as the active IP address.
- You can define a maximum number of two failover groups.
- Failover groups can only be added to the system context of devices that are configured for multiple context mode.
- You can create and remove failover groups only when failover is disabled.

- Entering the **failover group** command puts you in the failover group command mode. The **primary**, **secondary**, **preempt**, **replication http**, **interface-policy**, **mac address**, and **polltime interface** commands are available in the failover group configuration mode. Use the **exit** command to return to global configuration mode.
- The **failover polltime interface**, **failover interface-policy**, **failover replication http**, and **failover mac address** commands have no effect on Active/Active failover configurations. They are overridden by the following failover group configuration mode commands: **polltime interface**, **interface-policy**, **replication http**, and **mac address**.
- When removing failover groups, you must remove failover group 1 last. Failover group 1 always contains the admin context. Any context not assigned to a failover group defaults to failover group 1. You cannot remove a failover group that has contexts explicitly assigned to it.
- VPN failover is unavailable. (It is available in Active/Standby failover configurations only.)

## Configuring Active/Active Failover

This section describes how to configure Active/Active failover using an Ethernet failover link. When configuring LAN-based failover, you must bootstrap the secondary device to recognize the failover link before the secondary device can obtain the running configuration from the primary device.

This section includes the following topics:

- [Task Flow for Configuring Active/Active Failover, page 63-8](#)
- [Configuring the Primary Failover Unit, page 63-8](#)
- [Configuring the Secondary Failover Unit, page 63-11](#)

## Task Flow for Configuring Active/Active Failover

To configure Active/Active Failover, perform the following steps:

- 
- |               |                                                                                                                                                                                  |
|---------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Step 1</b> | Configure the primary unit, as shown in the <a href="#">“Configuring the Primary Failover Unit”</a> section on <a href="#">page 63-8</a> .                                       |
| <b>Step 2</b> | Configure the secondary unit, as shown in the <a href="#">“Configuring the Secondary Failover Unit”</a> section on <a href="#">page 63-11</a> .                                  |
| <b>Step 3</b> | (Optional) Configure optional Active/Active failover settings, as shown in the <a href="#">“Optional Active/Active Failover Settings”</a> section on <a href="#">page 63-6</a> . |
- 

## Configuring the Primary Failover Unit

Follow the steps in this section to configure the primary unit in an Active/Active failover configuration. These steps provide the minimum configuration needed to enable failover on the primary unit.

## Restrictions

Do not configure an IP address for the Stateful Failover link if you are going to use a dedicated Stateful Failover interface. You use the **failover interface ip** command to configure a dedicated Stateful Failover interface in a later step.

## Prerequisites

- Configure standby addresses for all IP addresses according to [Chapter 8, “Completing Interface Configuration \(Routed Mode\)”](#) or [Chapter 9, “Completing Interface Configuration \(Transparent Mode\)”](#).
- Complete this procedure in the system execution space. To change from the context to the system execution space, enter the **changeto system** command.

## Detailed Steps

|        | Command                                                                                                                                                                                                                                                                                                                                                              | Purpose                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|--------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Step 1 | <b>failover lan unit primary</b>                                                                                                                                                                                                                                                                                                                                     | Designates the unit as the primary unit.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| Step 2 | <b>failover lan interface if_name phy_if</b><br><br><b>Example:</b><br>hostname(config)# failover lan interface<br>folink GigabitEthernet0/3                                                                                                                                                                                                                         | Specifies the interface to be used as the failover interface.<br><br>The <i>if_name</i> argument assigns a name to the interface specified by the <i>phy_if</i> argument.<br><br>The <i>phy_if</i> argument can be the physical port name, such as Ethernet1, or a previously created subinterface, such as Ethernet0/2.3. This interface should not be used for any other purpose (except, optionally, the Stateful Failover link).                                                                                                                                                                                                                                                      |
| Step 3 | <b>failover interface ip if_name [ip_address mask standby ip_address   ipv6_address/prefix standby ipv6_address]</b><br><br><b>Example:</b><br>hostname(config)# failover interface ip<br>folink 172.27.48.1 255.255.255.0 standby<br>172.27.48.2<br><br>hostname(config)# failover interface ip<br>folink 2001:a0a:b00::a0a:b70/64 standby<br>2001:a0a:b00::a0a:b71 | Assigns the active and standby IP addresses to the failover link. You can assign either an IPv4 or an IPv6 address to the interface. You cannot assign both types of addresses to the failover link.<br><br>The standby IP address must be in the same subnet as the active IP address. You do not need to identify the standby address subnet mask.<br><br>The failover link IP address and MAC address do not change at failover. The active IP address for the failover link always stays with the primary unit, while the standby IP address stays with the secondary unit.                                                                                                           |
| Step 4 | <b>failover link if_name phy_if</b><br><br><b>Example:</b><br>hostname(config)# failover link folink<br>GigabitEthernet0/2                                                                                                                                                                                                                                           | (Optional) Specifies the interface to be used as the Stateful Failover link.<br><br><br><b>Note</b> If the Stateful Failover link uses the failover link or a data interface, then you only need to supply the <i>if_name</i> argument.<br><br>The <i>if_name</i> argument assigns a logical name to the interface specified by the <i>phy_if</i> argument. The <i>phy_if</i> argument can be the physical port name, such as Ethernet1, or a previously created subinterface, such as Ethernet0/2.3. This interface should not be used for any other purpose (except, optionally, the failover link). |

|        | Command                                                                                                                                                                                                                                                                                                                                                                     | Purpose                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|--------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Step 5 | <pre>failover interface ip if_name [ip_address mask standby ip_address   ipv6_address/prefix standby ipv6_address]</pre> <p><b>Example:</b></p> <pre>hostname(config)# failover interface ip folink 172.27.48.1 255.255.255.0 standby 172.27.48.2</pre> <pre>hostname(config)# failover interface ip statelink 2001:a1a:b00::a0a:a70/64 standby 2001:a1a:b00::a0a:a71</pre> | <p>(Optional) Assigns an active and standby IP address to the Stateful Failover link. You can assign either an IPv4 or an IPv6 address to the interface. You cannot assign both types of addresses to the Stateful Failover link.</p> <p> <b>Note</b> If the Stateful Failover link uses the failover link or data interface, skip this step. You have already defined the active and standby IP addresses for the interface.</p> <hr/> <p>The standby IP address must be in the same subnet as the active IP address. You do not need to identify the standby address subnet mask.</p> <p>The Stateful Failover link IP address and MAC address do not change at failover unless it uses a data interface. The active IP address always stays with the primary unit, while the standby IP address stays with the secondary unit.</p> |
| Step 6 | <pre>interface phy_if</pre> <pre>no shutdown</pre> <p><b>Example:</b></p> <pre>hostname(config)# interface GigabitEthernet 0/3 hostname(config-if)# no shutdown</pre>                                                                                                                                                                                                       | <p>Enables the interface.</p> <p> <b>Note</b> If the Stateful Failover link uses the failover link or regular data interface, skip this step. You have already enabled the interface.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| Step 7 | <pre>failover group {1   2} primary   secondary</pre> <p><b>Example:</b></p> <pre>hostname(config)# failover group 1 hostname(config-fover-group)# primary hostname(config-fover-group)# exit hostname(config)# failover group 2 hostname(config-fover-group)# secondary hostname(config-fover-group)# exit</pre>                                                           | <p>Configures the failover groups.</p> <p>You can have only two failover groups. The <b>failover group</b> command creates the specified failover group if it does not exist and enters the failover group configuration mode.</p> <p>For each failover group, specify whether the failover group has primary or secondary preference using the <b>primary</b> or <b>secondary</b> commands. You can assign the same preference to both failover groups. For traffic sharing configurations, you should assign each failover group a different unit preference.</p> <p>The <b>exit</b> command restores global configuration mode.</p> <p>The example assigns failover group 1 as the primary preference and failover group 2 as the secondary preference.</p>                                                                                                                                                         |
| Step 8 | <pre>context name</pre> <pre>join-failover-group {1   2}</pre> <p><b>Example:</b></p> <pre>hostname(config)# context Eng hostname(config-context)# join-failover-group 1 hostname(config-context) exit</pre>                                                                                                                                                                | <p>Assigns each user context to a failover group (in context configuration mode).</p> <p>Any unassigned contexts are automatically assigned to failover group 1. The admin context is always a member of failover group 1.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |

|         | Command                                                                                                                  | Purpose                                         |
|---------|--------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------|
| Step 9  | <b>failover</b><br><br><b>Example:</b><br>hostname(config)# failover                                                     | Enables failover.                               |
| Step 10 | <b>copy running-config startup-config</b><br><br><b>Example:</b><br>hostname(config)# copy running-config startup-config | Saves the system configuration to flash memory. |

## Configuring the Secondary Failover Unit

Follow the steps in this section to configure the secondary unit in an Active/Active failover configuration. These steps provide the minimum configuration needed to enable failover on the secondary unit.

### Detailed Steps

To configure the secondary failover unit, perform the following steps:

|        | Command                                                                                                                                                                                                                                                                                                                                                                                                            | Purpose                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|--------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Step 1 | <b>failover lan interface</b> <i>if_name</i> <i>phy_if</i><br><br><b>Example:</b><br>hostname(config)# failover lan interface folink GigabitEthernet0/3                                                                                                                                                                                                                                                            | Specifies the interface to be used as the failover interface.<br><br>The <i>if_name</i> argument assigns a name to the interface specified by the <i>phy_if</i> argument.<br><br>The <i>phy_if</i> argument can be the physical port name, such as Ethernet1, or a previously created subinterface, such as Ethernet0/2.3. This interface should not be used for any other purpose (except, optionally, the Stateful Failover link).                                                                                                                                            |
| Step 2 | <b>failover interface ip</b> <i>if_name</i> [ <i>ip_address</i> <i>mask</i> <b>standby</b> <i>ip_address</i>   <i>ipv6_address/prefix</i> <b>standby</b> <i>ipv6_address</i> ]<br><br><b>Example:</b><br>hostname(config)# failover interface ip folink 172.27.48.1 255.255.255.0 standby 172.27.48.2<br><br>hostname(config)# failover interface ip folink 2001:a0a:b00::a0a:b70/64 standby 2001:a0a:b00::a0a:b71 | Assigns the active and standby IP addresses to the failover link. You can assign either an IPv4 or an IPv6 address to the interface. You cannot assign both types of addresses to the failover link.<br><br>The standby IP address must be in the same subnet as the active IP address. You do not need to identify the standby address subnet mask.<br><br>The failover link IP address and MAC address do not change at failover. The active IP address for the failover link always stays with the primary unit, while the standby IP address stays with the secondary unit. |
| Step 3 | <b>interface</b> <i>phy_if</i><br><br><b>no shutdown</b><br><br><b>Example:</b><br>hostname(config-if)# interface GigabitEthernet0/3                                                                                                                                                                                                                                                                               | Enables the interface.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |

|        | Command                                                                                                                                     | Purpose                                                                                                                                                                                                                                                                                                                                                          |
|--------|---------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Step 4 | <code>failover lan unit secondary</code><br><br><b>Example:</b><br><code>hostname(config)# failover lan unit secondary</code>               | (Optional) Designates this unit as the secondary unit:<br><br><br><b>Note</b> This step is optional because, by default, units are designated as secondary unless previously configured.                                                                                        |
| Step 5 | <code>failover</code><br><br><b>Example:</b><br><code>hostname(config)# failover</code>                                                     | Enables failover.<br><br>After you enable failover, the active unit sends the configuration in running memory to the standby unit. As the configuration synchronizes, the messages “Beginning configuration replication: Sending to mate” and “End Configuration Replication to mate” appear on the active unit console.                                         |
| Step 6 | <code>copy running-config startup-config</code><br><br><b>Example:</b><br><code>hostname(config)# copy running-config startup-config</code> | Saves the configuration to flash memory.<br><br>Enter the command after the running configuration has completed replication.                                                                                                                                                                                                                                     |
| Step 7 | <code>no failover active group group_id</code><br><br><b>Example:</b><br><code>hostname(config)# no failover active group 1</code>          | If necessary, force any failover group that is active on the primary to the active state on the secondary unit. To force a failover group to become active on the secondary unit, enter this command in the system execution space on the primary unit.<br><br>The <i>group_id</i> argument specifies the group you want to become active on the secondary unit. |

## Configuring Optional Active/Active Failover Settings

The following optional Active/Active failover settings can be configured when you are initially configuring failover or after you have already established failover. Unless otherwise noted, the commands should be entered on the unit that has failover group 1 in the active state.

This section includes the following topics:

- [Configuring Failover Group Preemption, page 63-12](#)
- [Enabling HTTP Replication with Stateful Failover, page 63-14](#)
- [Disabling and Enabling Interface Monitoring, page 63-14](#)
- [Configuring Interface Health Monitoring, page 63-15](#)
- [Configuring Failover Criteria, page 63-16](#)
- [Configuring Virtual MAC Addresses, page 63-16](#)
- [Configuring Support for Asymmetrically Routed Packets, page 63-18](#)

## Configuring Failover Group Preemption

Assigning a primary or secondary priority to a failover group specifies which unit the failover group becomes active on when both units boot simultaneously. However, if one unit boots before the other, then both failover groups become active on that unit. When the other unit comes online, any failover groups that have the unit as a priority do not become active on that unit unless manually forced over, unless a

failover occurs, or unless the failover group is configured with the **preempt** command. The **preempt** command causes a failover group to become active on the designated unit automatically when that unit becomes available.

To configure preemption for the specified failover group, enter the following commands:

|        | Command                                                       | Purpose                                                                                                                                                                                                                                                         |
|--------|---------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Step 1 | <b>failover group</b> {1   2}                                 | Specifies the failover group.                                                                                                                                                                                                                                   |
|        | <b>Example:</b><br>hostname(config)# failover group 1         |                                                                                                                                                                                                                                                                 |
| Step 2 | <b>preempt</b> [delay]                                        | Causes the failover group to become active on the designated unit.                                                                                                                                                                                              |
|        | <b>Example:</b><br>hostname(config-fover-group)# preempt 1200 | You can enter an optional <i>delay</i> value, which specifies the number of seconds the failover group remains active on the current unit before automatically becoming active on the designated unit. Valid values are from 1 to 1200.                         |
|        |                                                               | <br><b>Note</b> If Stateful Failover is enabled, the preemption is delayed until the connections are replicated from the unit on which the failover group is currently active. |

### Example

The following example configures failover group 1 with the primary unit as the higher priority and failover group 2 with the secondary unit as the higher priority. Both failover groups are configured with the **preempt** command with a wait time of 100 seconds, so the groups will automatically become active on their preferred unit 100 seconds after the units become available.

```
hostname(config)# failover group 1
hostname(config-fover-group)# primary
hostname(config-fover-group)# preempt 100
hostname(config-fover-group)# exit
hostname(config)# failover group 2
hostname(config-fover-group)# secondary
hostname(config-fover-group)# preempt 100
hostname(config-fover-group)# mac-address e1 0000.a000.a011 0000.a000.a012
hostname(config-fover-group)# exit
hostname(config)#
```

## Enabling HTTP Replication with Stateful Failover

To allow HTTP connections to be included in the state information, you need to enable HTTP replication. Because HTTP connections are typically short-lived, and because HTTP clients typically retry failed connection attempts, HTTP connections are not automatically included in the replicated state information.

You can use the **replication http** command to cause a failover group to replicate HTTP state information when Stateful Failover is enabled.

|        | Command                                                           | Purpose                                                                                                                                                                                                                                     |
|--------|-------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Step 1 | <b>failover group</b> {1   2}                                     | Specifies the failover group.                                                                                                                                                                                                               |
|        | <b>Example:</b><br>hostname(config)# failover group 1             |                                                                                                                                                                                                                                             |
| Step 2 | <b>replication http</b>                                           | Enables HTTP state replication for the specified failover group.                                                                                                                                                                            |
|        | <b>Example:</b><br>hostname(config-fover-group)# replication http | This command affects only the failover group in which it was configured. To enable HTTP state replication for both failover groups you must enter this command in each group. This command should be entered in the system execution space. |

### Example

The following example shows a possible configuration for a failover group:

```
hostname(config)# failover group 1
hostname(config-fover-group)# primary
hostname(config-fover-group)# preempt 100
hostname(config-fover-group)# replication http
hostname(config-fover-group)# exit
```

## Disabling and Enabling Interface Monitoring

You can control which interfaces affect your failover policy by disabling the monitoring of specific interfaces and enabling the monitoring of others. This feature enables you to exclude interfaces attached to less critical networks from affecting your failover policy.

You can monitor up to 250 interfaces on a unit. By default, monitoring physical interfaces is enabled and monitoring subinterfaces is disabled.

Hello messages are exchanged during every interface poll frequency time period between the security appliance failover pair. The failover interface poll time is 3 to 15 seconds. For example, if the poll time is set to 5 seconds, testing begins on an interface if 5 consecutive hellos are not heard on that interface (25 seconds).

Monitored failover interfaces can have the following status:

- Unknown—Initial status. This status can also mean the status cannot be determined.
- Normal—The interface is receiving traffic.
- Testing—Hello messages are not heard on the interface for five poll times.
- Link Down—The interface or VLAN is administratively down.
- No Link—The physical link for the interface is down.

- Failed—No traffic is received on the interface, yet traffic is heard on the peer interface.

In Active/Active failover, this command is only valid within a context.

To enable or disable interface monitoring for specific interfaces, enter one of the following commands:

Do one of the following:

**no monitor-interface** *if\_name*

Disables health monitoring for an interface.

**Example:**

```
hostname/context (config)#
no monitor-interface 1
```

**monitor-interface** *if\_name*

Enables health monitoring for an interface.

**Example:**

```
hostname/context (config)#
monitor-interface 1
```

### Example

The following example enables monitoring on an interface named “inside”:

```
hostname(config)# monitor-interface inside
hostname(config)#
```

## Configuring Interface Health Monitoring

The ASA sends hello packets out of each data interface to monitor interface health. If the ASA does not receive a hello packet from the corresponding interface on the peer unit for over half of the hold time, then the additional interface testing begins. If a hello packet or a successful test result is not received within the specified hold time, the interface is marked as failed. Failover occurs if the number of failed interfaces meets the failover criteria.

Decreasing the poll and hold times enables the ASA to detect and respond to interface failures more quickly but may consume more system resources.

To change the default interface poll time, perform the following steps:

|        | Command                                                                     | Purpose                                                                                                                                                                                                                                                                                                                                                                                            |
|--------|-----------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Step 1 | <b>failover group</b> {1   2}                                               | Specifies the failover group.                                                                                                                                                                                                                                                                                                                                                                      |
|        | <b>Example:</b><br>hostname(config)# failover group 1                       |                                                                                                                                                                                                                                                                                                                                                                                                    |
| Step 2 | <b>polltime interface</b> <i>seconds</i>                                    | Specifies the data interface poll and hold times in the Active/Active failover configuration.                                                                                                                                                                                                                                                                                                      |
|        | <b>Example:</b><br>hostname(config-fover-group)# polltime interface seconds | Valid values for the poll time are from 1 to 15 seconds or, if the optional <b>msec</b> keyword is used, from 500 to 999 milliseconds. The hold time determines how long it takes from the time a hello packet is missed to when the interface is marked as failed. Valid values for the hold time are from 5 to 75 seconds. You cannot enter a hold time that is less than 5 times the poll time. |

## Example

The following partial example shows a possible configuration for a failover group. The interface poll time is set to 500 milliseconds and the hold time to 5 seconds for data interfaces in failover group 1.

```
hostname(config)# failover group 1
hostname(config-fover-group)# primary
hostname(config-fover-group)# preempt 100
hostname(config-fover-group)# polltime interface msec 500 holdtime 5
hostname(config-fover-group)# exit
hostname(config)#
```

## Configuring Failover Criteria

By default, if a single interface fails, failover occurs. You can specify a specific number of interfaces or a percentage of monitored interfaces that must fail before a failover occurs. The failover criteria is specified on a failover group basis.

To change the default failover criteria for the specified failover group, perform the following steps:

|        | Command                                                                  | Purpose                                                                                                                                                                                  |
|--------|--------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Step 1 | <b>failover group</b> {1   2}                                            | Specifies the failover group.                                                                                                                                                            |
|        | <b>Example:</b><br>hostname(config)# failover group 1                    |                                                                                                                                                                                          |
| Step 2 | <b>interface-policy</b> num[%]                                           | Specifies the policy for failover when monitoring detects an interface failure.                                                                                                          |
|        | <b>Example:</b><br>hostname(config-fover-group)#<br>interface-policy 225 | When specifying a specific number of interfaces, the <i>num</i> argument can be from 1 to 250. When specifying a percentage of interfaces, the <i>num</i> argument can be from 1 to 100. |

The following partial example shows a possible configuration for a failover group:

```
hostname(config)# failover group 1
hostname(config-fover-group)# primary
hostname(config-fover-group)# preempt 100
hostname(config-fover-group)# interface-policy 25%
hostname(config-fover-group)# exit
hostname(config)#
```

## Configuring Virtual MAC Addresses

Active/Active failover uses virtual MAC addresses on all interfaces. If you do not specify the virtual MAC addresses, then they are computed as follows:

- Active unit default MAC address: 00a0.c9*physical\_port\_number.failover\_group\_id*01
- Standby unit default MAC address: 00a0.c9*physical\_port\_number.failover\_group\_id*02

**Note**

If you have more than one Active/Active failover pair on the same network, it is possible to have the same default virtual MAC addresses assigned to the interfaces on one pair as are assigned to the interfaces of the other pairs because of the way the default virtual MAC addresses are determined. To avoid having duplicate MAC addresses on your network, make sure you assign each physical interface a virtual active and standby MAC address for all failover groups.

There are multiple ways to configure virtual MAC addresses on the ASA. When more than one method has been used to configure virtual MAC addresses, the ASA uses the following order of preference to determine which virtual MAC address is assigned to an interface:

1. The **mac-address** command (in interface configuration mode) address
2. The **mac-address auto** command generate address
3. The **failover mac address** command or **mac address** command (in failover group configuration mode) address (used in the following procedure)
4. The automatically generated failover MAC address

Use the **show interface** command to display the MAC address used by an interface.

To configure specific active and standby MAC addresses for an interface, perform the following steps.

**Detailed Steps**

|        | Command                                                                                                             | Purpose                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|--------|---------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Step 1 | <b>failover group</b> {1   2}                                                                                       | Specifies the failover group.                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|        | <b>Example:</b><br>hostname(config)# failover group 1                                                               |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| Step 2 | <b>mac address</b> <i>phy_if active_mac standby_mac</i>                                                             | Specifies the virtual MAC addresses for the active and standby units.                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|        | <b>Example:</b><br>hostname(config-fover-group)# mac address<br>gigabitethernet1/0 0000.a000.a011<br>0000.a000.a012 | The <i>phy_if</i> argument is the physical name of the interface, such as GigabitEthernet1/0. The <i>active_mac</i> and <i>standby_mac</i> arguments are MAC addresses in H.H.H format, where H is a 16-bit hexadecimal digit. For example, the MAC address 00-0C-F1-42-4C-DE would be entered as 000C.F142.4CDE.<br><br>The <i>active_mac</i> address is associated with the active IP address for the interface, and the <i>standby_mac</i> is associated with the standby IP address for the interface. |

**Example**

The following partial example shows a possible configuration for a failover group:

```
hostname(config)# failover group 1
hostname(config-fover-group)# primary
hostname(config-fover-group)# preempt 100
hostname(config-fover-group)# exit
hostname(config)# failover group 2
hostname(config-fover-group)# secondary
hostname(config-fover-group)# preempt 100
hostname(config-fover-group)# mac address gigabitethernet1/0 0000.a000.a011 0000.a000.a012
hostname(config-fover-group)# exit
```

```
hostname(config)#
```

## Configuring Support for Asymmetrically Routed Packets

When running in Active/Active failover, a unit may receive a return packet for a connection that originated through its peer unit. Because the ASA that receives the packet does not have any connection information for the packet, the packet is dropped. This most commonly occurs when the two ASAs in an Active/Active failover pair are connected to different service providers and the outbound connection does not use a NAT address.

You can prevent the return packets from being dropped using the **asr-group** command on interfaces where this is likely to occur. When an interface configured with the **asr-group** command receives a packet for which it has no session information, it checks the session information for the other interfaces that are in the same group. If it does not find a match, the packet is dropped. If it finds a match, then one of the following actions occurs:

- If the incoming traffic originated on a peer unit, some or all of the layer 2 header is rewritten and the packet is redirected to the other unit. This redirection continues as long as the session is active.
- If the incoming traffic originated on a different interface on the same unit, some or all of the layer 2 header is rewritten and the packet is reinjected into the stream.



### Note

Using the **asr-group** command to configure asymmetric routing support is more secure than using the **static** command with the **nailed** option.

The **asr-group** command does not provide asymmetric routing; it restores asymmetrically routed packets to the correct interface.

## Prerequisites

You must have the following configured for asymmetric routing support to function properly:

- Active/Active Failover
- Stateful Failover—Passes state information for sessions on interfaces in the active failover group to the standby failover group.
- Replication HTTP—HTTP session state information is not passed to the standby failover group, and therefore is not present on the standby interface. For the ASA to be able to re-route asymmetrically routed HTTP packets, you need to replicate the HTTP state information.

You can configure the **asr-group** command on an interface without having failover configured, but it does not have any effect until Stateful Failover is enabled.

## Detailed Steps

To configure support for asymmetrically routed packets, perform the following steps:

- Step 1** Configure Active/Active Stateful Failover for the failover pair. See the [“Configuring Active/Active Failover”](#) section on page 63-8.
- Step 2** For each interface that you want to participate in asymmetric routing support, enter the following command. You must enter the command on the unit where the context is in the active state so that the command is replicated to the standby failover group. For more information about command replication, see [Command Replication](#), page 63-3.


```
hostname/ctx(config)# interface phy_if
hostname/ctx(config-if)# asr-group num
```

Valid values for *num* range from 1 to 32. You need to enter the command for each interface that participates in the asymmetric routing group. You can view the number of ASR packets transmitted, received, or dropped by an interface using the **show interface detail** command. You can have more than one ASR group configured on the ASA, but only one per interface. Only members of the same ASR group are checked for session information.

## Example

Figure 63-1 shows an example of using the **asr-group** command for asymmetric routing support.

**Figure 63-1 ASR Example**

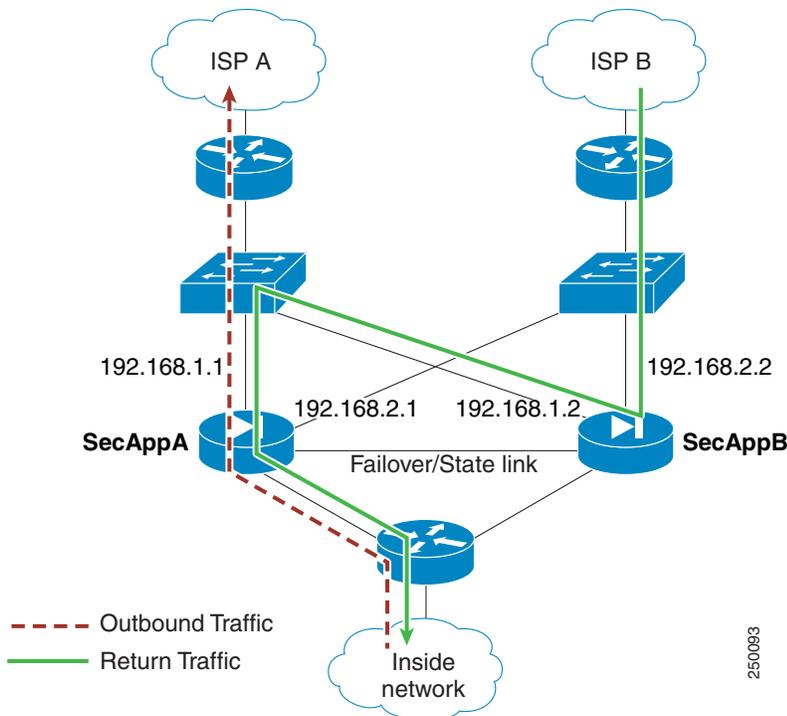

The two units have the following configuration (configurations show only the relevant commands). The device labeled SecAppA in the diagram is the primary unit in the failover pair.

### Example 63-1 Primary Unit System Configuration

```
hostname primary
interface GigabitEthernet0/1
description LAN/STATE Failover Interface
interface GigabitEthernet0/2
no shutdown
interface GigabitEthernet0/3
no shutdown
interface GigabitEthernet0/4
no shutdown
```

```

interface GigabitEthernet0/5
no shutdown
failover
failover lan unit primary
failover lan interface folink GigabitEthernet0/1
failover link folink
failover interface ip folink 10.0.4.1 255.255.255.0 standby 10.0.4.11
failover group 1
primary
failover group 2
secondary
admin-context admin
context admin
description admin
allocate-interface GigabitEthernet0/2
allocate-interface GigabitEthernet0/3
config-url flash:/admin.cfg
join-failover-group 1
context ctx1
description context 1
allocate-interface GigabitEthernet0/4
allocate-interface GigabitEthernet0/5
config-url flash:/ctx1.cfg
join-failover-group 2

```

### Example 63-2 admin Context Configuration

```

hostname SecAppA
interface GigabitEthernet0/2
nameif outsideISP-A
security-level 0
ip address 192.168.1.1 255.255.255.0 standby 192.168.1.2
asr-group 1
interface GigabitEthernet0/3
nameif inside
security-level 100
ip address 10.1.0.1 255.255.255.0 standby 10.1.0.11
monitor-interface outside

```

### Example 63-3 ctx1 Context Configuration

```

hostname SecAppB
interface GigabitEthernet0/4
nameif outsideISP-B
security-level 0
ip address 192.168.2.2 255.255.255.0 standby 192.168.2.1
asr-group 1
interface GigabitEthernet0/5
nameif inside
security-level 100
ip address 10.2.20.1 255.255.255.0 standby 10.2.20.11

```

Figure 63-1 shows the ASR support working as follows:

1. An outbound session passes through ASA SecAppA. It exits interface outsideISP-A (192.168.1.1).
2. Because of asymmetric routing configured somewhere upstream, the return traffic comes back through the interface outsideISP-B (192.168.2.2) on ASA SecAppB.

3. Normally the return traffic would be dropped because there is no session information for the traffic on interface 192.168.2.2. However, the interface is configured with the command **asr-group 1**. The unit looks for the session on any other interface configured with the same ASR group ID.
4. The session information is found on interface outsideISP-A (192.168.1.2), which is in the standby state on the unit SecAppB. Stateful Failover replicated the session information from SecAppA to SecAppB.
5. Instead of being dropped, the layer 2 header is rewritten with information for interface 192.168.1.1 and the traffic is redirected out of the interface 192.168.1.2, where it can then return through the interface on the unit from which it originated (192.168.1.1 on SecAppA). This forwarding continues as needed until the session ends.

## Remote Command Execution

Remote command execution lets you send commands entered at the command line to a specific failover peer.

Because configuration commands are replicated from the active unit or context to the standby unit or context, you can use the **failover exec** command to enter configuration commands on the correct unit, no matter which unit you are logged in to. For example, if you are logged in to the standby unit, you can use the **failover exec active** command to send configuration changes to the active unit. Those changes are then replicated to the standby unit. Do not use the **failover exec** command to send configuration commands to the standby unit or context; those configuration changes are not replicated to the active unit and the two configurations will no longer be synchronized.

Output from configuration, exec, and **show** commands is displayed in the current terminal session, so you can use the **failover exec** command to issue **show** commands on a peer unit and view the results in the current terminal.

You must have sufficient privileges to execute a command on the local unit to execute the command on the peer unit.

To send a command to a failover peer, perform the following steps:

---

**Step 1** If you are in multiple context mode, use the **changeto** command to change to the context you want to configure. You cannot change contexts on the failover peer with the **failover exec** command.

If you are in single context mode, skip to the next step.

**Step 2** Use the following command to send commands to the specified failover unit:

```
hostname(config)# failover exec {active | mate | standby}
```

Use the **active** or **standby** keyword to cause the command to be executed on the specified unit, even if that unit is the current unit. Use the **mate** keyword to cause the command to be executed on the failover peer.

Commands that cause a command mode change do not change the prompt for the current session. You must use the **show failover exec** command to display the command mode the command is executed in. See [Changing Command Modes](#), page 63-22, for more information.

---

## Changing Command Modes

The **failover exec** command maintains a command mode state that is separate from the command mode of your terminal session. By default, the **failover exec** command mode starts in global configuration mode for the specified device. You can change that command mode by sending the appropriate command (such as the **interface** command) using the **failover exec** command. The session prompt does not change when you change mode using **failover exec**.

For example, if you are logged in to global configuration mode of the active unit of a failover pair, and you use the **failover exec active** command to change to interface configuration mode, the terminal prompt remains in global configuration mode, but commands entered using **failover exec** are entered in interface configuration mode.

The following examples shows the difference between the terminal session mode and the **failover exec** command mode. In the example, the administrator changes the **failover exec** mode on the active unit to interface configuration mode for the interface GigabitEthernet0/1. After that, all commands entered using **failover exec active** are sent to interface configuration mode for interface GigabitEthernet0/1. The administrator then uses **failover exec active** to assign an IP address to that interface. Although the prompt indicates global configuration mode, the **failover exec active** mode is in interface configuration mode.

```
hostname(config)# failover exec active interface GigabitEthernet0/1
hostname(config)# failover exec active ip address 192.168.1.1 255.255.255.0 standby
192.168.1.2
hostname(config)# router rip
hostname(config-router)#
```

Changing commands modes for your current session to the device does not affect the command mode used by the **failover exec** command. For example, if you are in interface configuration mode on the active unit, and you have not changed the **failover exec** command mode, the following command would be executed in global configuration mode. The result would be that your session to the device remains in interface configuration mode, while commands entered using **failover exec active** are sent to router configuration mode for the specified routing process.

```
hostname(config-if)# failover exec active router ospf 100
hostname(config-if)#
```

Use the **show failover exec** command to display the command mode on the specified device in which commands sent with the **failover exec** command are executed. The **show failover exec** command takes the same keywords as the **failover exec** command: **active**, **mate**, or **standby**. The **failover exec** mode for each device is tracked separately.

For example, the following is sample output from the **show failover exec** command entered on the standby unit:

```
hostname(config)# failover exec active interface GigabitEthernet0/1
hostname(config)# sh failover exec active
Active unit Failover EXEC is at interface sub-command mode

hostname(config)# sh failover exec standby
Standby unit Failover EXEC is at config mode

hostname(config)# sh failover exec mate
Active unit Failover EXEC is at interface sub-command mode
```

## Security Considerations

The **failover exec** command uses the failover link to send commands to and receive the output of the command execution from the peer unit. You should use the **failover key** command to encrypt the failover link to prevent eavesdropping or man-in-the-middle attacks.

## Limitations of Remote Command Execution

When you use remote commands you face the following limitations:

- If you upgrade one unit using the zero-downtime upgrade procedure and not the other, both units must be running software that supports the **failover exec** command for the command to work.
- Command completion and context help is not available for the commands in the *cmd\_string* argument.
- In multiple context mode, you can only send commands to the peer context on the peer unit. To send commands to a different context, you must first change to that context on the unit to which you are logged in.
- You cannot use the following commands with the **failover exec** command:
  - **changeto**
  - **debug (undebg)**
- If the standby unit is in the failed state, it can still receive commands from the **failover exec** command if the failure is due to a service card failure; otherwise, the remote command execution will fail.
- You cannot use the **failover exec** command to switch from privileged EXEC mode to global configuration mode on the failover peer. For example, if the current unit is in privileged EXEC mode, and you enter **failover exec mate configure terminal**, the **show failover exec mate** output will show that the failover exec session is in global configuration mode. However, entering configuration commands for the peer unit using **failover exec** will fail until you enter global configuration mode on the current unit.
- You cannot enter recursive failover exec commands, such as **failover exec mate failover exec mate** command.
- Commands that require user input or confirmation must use the **/nonconfirm** option.

## Controlling Failover

This sections describes how to control and monitor failover. This section includes the following topics:

- [Forcing Failover, page 63-23](#)
- [Disabling Failover, page 63-24](#)
- [Restoring a Failed Unit or Failover Group, page 63-24](#)

## Forcing Failover

Enter the following command in the system execution space of the unit where the failover group is in the standby state:

```
hostname# failover active group group_id
```

Or, enter the following command in the system execution space of the unit where the failover group is in the active state:

```
hostname# no failover active group group_id
```

Entering the following command in the system execution space causes all failover groups to become active:

```
hostname# failover active
```

## Disabling Failover

Disabling failover on an Active/Active failover pair causes the failover groups to remain in the active state on whichever unit they are active, no matter which unit they are configured to prefer. Enter the **no failover** command in the system execution space.

To disable failover, enter the following command:

```
hostname(config)# no failover
```

## Restoring a Failed Unit or Failover Group

Restoring a failed unit or failover group moves the unit or failover group from the failed state to the standby state; it does not automatically make the failover group or unit active. Restored units or groups remain in the standby state until made active by failover (forced or natural). An exception is a failover group configured with failover preemption. If previously active, a failover group becomes active if it is configured with preemption and if the unit on which it failed is the preferred unit.

To restore a failed unit to an unfailed state, enter the following command:

```
hostname(config)# failover reset
```

To restore a failed Active/Active failover group to an unfailed state, enter the following command:

```
hostname(config)# failover reset group group_id
```

## Testing the Failover Functionality

To test failover functionality, perform the following steps:

- 
- Step 1** Test that your active unit or failover group is passing traffic as expected by using FTP (for example) to send a file between hosts on different interfaces.
  - Step 2** Force a failover to the standby unit by entering the following command on the unit where the failover group containing the interface connecting your hosts is active:
 

```
hostname(config)# no failover active group group_id
```
  - Step 3** Use FTP to send another file between the same two hosts.
  - Step 4** If the test was not successful, enter the **show failover** command to check the failover status.

- Step 5** When you are finished, you can restore the unit or failover group to active status by enter the following command on the unit where the failover group containing the interface connecting your hosts is active:

```
hostname(config)# failover active group group_id
```

## Monitoring Active/Active Failover

To monitor Active/Active Failover, perform one of the following tasks. Commands are entered in the system execution space unless otherwise noted.

| Command                                   | Purpose                                                                                                                                                                                         |
|-------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>show failover</code>                | Displays information about the failover state of the unit.                                                                                                                                      |
| <code>show failover group</code>          | Displays information about the failover state of the failover group. The information displayed is similar to that of the <code>show failover</code> command but limited to the specified group. |
| <code>show monitor-interface</code>       | Displays information about the monitored interface. Enter this command within a security context.                                                                                               |
| <code>show running-config failover</code> | Displays the failover commands in the running configuration.                                                                                                                                    |

For more information about the output of the monitoring commands, see the *Cisco ASA 5500 Series Command Reference*.

## Feature History for Active/Active Failover

[Table 63-3](#) lists each feature change and the platform release in which it was implemented.

**Table 63-3** Feature History for Active/Active Failover

| Feature Name             | Releases | Feature Information                                                                                                                             |
|--------------------------|----------|-------------------------------------------------------------------------------------------------------------------------------------------------|
| Active/Active failover   | 7.0      | In an Active/Active failover configuration, both ASAs can pass network traffic.<br>We introduced this feature and the relevant commands.        |
| IPv6 Support in failover | 8.2(2)   | We modified the following commands: <b>failover interface ip</b> , <b>show failover</b> , <b>ipv6 address</b> , <b>show monitor-interface</b> . |





## **PART 16**

### **Configuring VPN**





## CHAPTER 64

# Configuring IPsec and ISAKMP

---

This chapter describes how to configure Internet Protocol Security (IPsec) and the Internet Security Association and Key Management Protocol (ISAKMP) standards to build Virtual Private Networks (VPNs). It includes the following sections:

- [Information About Tunneling, IPsec, and ISAKMP, page 64-1](#)
- [Licensing Requirements for Remote Access IPsec VPNs, page 64-3](#)
- [Guidelines and Limitations, page 64-8](#)
- [Configuring ISAKMP, page 64-8](#)
- [Configuring Certificate Group Matching for IKEv1, page 64-17](#)
- [Configuring IPsec, page 64-19](#)
- [Clearing Security Associations, page 64-34](#)
- [Clearing Crypto Map Configurations, page 64-35](#)
- [Supporting the Nokia VPN Client, page 64-35](#)

## Information About Tunneling, IPsec, and ISAKMP

Tunneling makes it possible to use a public TCP/IP network, such as the Internet, to create secure connections between remote users and a private corporate network. Each secure connection is called a tunnel.

The ASA uses the ISAKMP and IPsec tunneling standards to build and manage tunnels. ISAKMP and IPsec accomplish the following:

- Negotiate tunnel parameters
- Establish tunnels
- Authenticate users and data
- Manage security keys
- Encrypt and decrypt data
- Manage data transfer across the tunnel
- Manage data transfer inbound and outbound as a tunnel endpoint or router

The ASA functions as a bidirectional tunnel endpoint. It can receive plain packets from the private network, encapsulate them, create a tunnel, and send them to the other end of the tunnel where they are unencapsulated and sent to their final destination. It can also receive encapsulated packets from the public network, unencapsulate them, and send them to their final destination on the private network.

## IPsec Overview

The ASA uses IPsec for LAN-to-LAN VPN connections and provides the option of using IPsec for client-to-LAN VPN connections. In IPsec terminology, a *peer* is a remote-access client or another secure gateway. For both connection types, the ASA supports only Cisco peers. Because we adhere to VPN industry standards, ASAs can work with other vendors' peers; however, we do not support them.

During tunnel establishment, the two peers negotiate security associations that govern authentication, encryption, encapsulation, and key management. These negotiations involve two phases: first, to establish the tunnel (the IKE SA) and second, to govern traffic within the tunnel (the IPsec SA).

A LAN-to-LAN VPN connects networks in different geographic locations. In IPsec LAN-to-LAN connections, the ASA can function as initiator or responder. In IPsec client-to-LAN connections, the ASA functions only as responder. Initiators propose SAs; responders accept, reject, or make counter-proposals—all in accordance with configured SA parameters. To establish a connection, both entities must agree on the SAs.

**Note**

When the ASA is configured for IPsec VPN, you cannot enable security contexts (also called firewall multimode) or Active/Active stateful failover. Therefore, these features are unavailable.

## ISAKMP and IKE Overview

ISAKMP is the negotiation protocol that lets two hosts agree on how to build an IPsec security association (SA). It provides a common framework for agreeing on the format of SA attributes. This security association includes negotiating with the peer about the SA and modifying or deleting the SA. ISAKMP separates negotiation into two phases: Phase 1 and Phase 2. Phase 1 creates the first tunnel, which protects later ISAKMP negotiation messages. Phase 2 creates the tunnel that protects data.

IKE uses ISAKMP to set up the SA for IPsec to use. IKE creates the cryptographic keys used to authenticate peers.

The ASA supports IKEv1 for connections from the legacy Cisco VPN client, and IKEv2 for the AnyConnect VPN client.

To set the terms of the ISAKMP negotiations, you create an IKE policy, which includes the following:

- The authentication type required of the IKEv1 peer, either RSA signature using certificates or preshared key (PSK).
- An encryption method to protect the data and ensure privacy.
- A Hashed Message Authentication Codes (HMAC) method to ensure the identity of the sender, and to ensure that the message has not been modified in transit.
- A Diffie-Hellman group to determine the strength of the encryption-key-determination algorithm. The ASA uses this algorithm to derive the encryption and hash keys.
- For IKEv2, a separate pseudo-random function (PRF) used as the algorithm to derive keying material and hashing operations required for the IKEv2 tunnel encryption and so on.
- A limit to the time the ASA uses an encryption key before replacing it.

With IKEv1 policies, you set one value for each parameter. For IKEv2, you can configure multiple encryption and authentication types, and multiple integrity algorithms for a single policy. The ASA orders the settings from the most secure to the least secure and negotiates with the peer using that order. This ordering allows you to potentially send a single proposal to convey all the allowed transforms instead of sending each allowed combination as with IKEv1.

## Licensing Requirements for Remote Access IPsec VPNs

The following table shows the licensing requirements for this feature:



**Note**

This feature is not available on No Payload Encryption models.

| Model    | License Requirement <sup>1</sup>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|----------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ASA 5505 | <ul style="list-style-type: none"> <li>• IPsec remote access VPN using IKEv2 (use one of the following):               <ul style="list-style-type: none"> <li>– AnyConnect Premium license:                   <ul style="list-style-type: none"> <li>Base license and Security Plus license: 2 sessions.</li> <li><i>Optional permanent or time-based licenses: 10 or 25 sessions.</i></li> <li><i>Shared licenses are not supported.</i><sup>2</sup></li> </ul> </li> <li>– AnyConnect Essentials license<sup>3</sup>: 25 sessions.</li> </ul> </li> <li>• IPsec remote access VPN using IKEv1 and IPsec site-to-site VPN using IKEv1 or IKEv2:               <ul style="list-style-type: none"> <li>– Base license: 10 sessions.</li> <li>– Security Plus license: 25 sessions.</li> </ul> </li> </ul>                                                                                                   |
| ASA 5510 | <ul style="list-style-type: none"> <li>• IPsec remote access VPN using IKEv2 (use one of the following):               <ul style="list-style-type: none"> <li>– AnyConnect Premium license:                   <ul style="list-style-type: none"> <li>Base and Security Plus license: 2 sessions.</li> <li><i>Optional permanent or time-based licenses: 10, 25, 50, 100, or 250 sessions.</i></li> <li><i>Optional Shared licenses<sup>2</sup>: Participant or Server. For the Server license, 500-50,000 in increments of 500 and 50,000-545,000 in increments of 1000.</i></li> </ul> </li> <li>– AnyConnect Essentials license<sup>3</sup>: 250 sessions.</li> </ul> </li> <li>• IPsec remote access VPN using IKEv1 and IPsec site-to-site VPN using IKEv1 or IKEv2:               <ul style="list-style-type: none"> <li>Base license and Security Plus license: 250 sessions.</li> </ul> </li> </ul> |

| Model    | License Requirement <sup>1</sup>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|----------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ASA 5520 | <ul style="list-style-type: none"> <li>• IPsec remote access VPN using IKEv2 (use one of the following):               <ul style="list-style-type: none"> <li>– AnyConnect Premium license:<br/>Base license: 2 sessions.<br/><i>Optional permanent or time-based licenses: 10, 25, 50, 100, 250, 500, or 750 sessions.</i><br/><i>Optional Shared licenses<sup>2</sup>: Participant or Server. For the Server license, 500-50,000 in increments of 500 and 50,000-545,000 in increments of 1000.</i></li> <li>– AnyConnect Essentials license<sup>3</sup>: 750 sessions.</li> </ul> </li> <li>• IPsec remote access VPN using IKEv1 and IPsec site-to-site VPN using IKEv1 or IKEv2:<br/>Base license: 750 sessions.</li> </ul>                     |
| ASA 5540 | <ul style="list-style-type: none"> <li>• IPsec remote access VPN using IKEv2 (use one of the following):               <ul style="list-style-type: none"> <li>– AnyConnect Premium license:<br/>Base license: 2 sessions.<br/><i>Optional permanent or time-based licenses: 10, 25, 50, 100, 250, 500, 750, 1000, or 2500 sessions.</i><br/><i>Optional Shared licenses<sup>2</sup>: Participant or Server. For the Server license, 500-50,000 in increments of 500 and 50,000-545,000 in increments of 1000.</i></li> <li>– AnyConnect Essentials license<sup>3</sup>: 2500 sessions.</li> </ul> </li> <li>• IPsec remote access VPN using IKEv1 and IPsec site-to-site VPN using IKEv1 or IKEv2:<br/>Base license: 2500 sessions.</li> </ul>       |
| ASA 5550 | <ul style="list-style-type: none"> <li>• IPsec remote access VPN using IKEv2 (use one of the following):               <ul style="list-style-type: none"> <li>– AnyConnect Premium license:<br/>Base license: 2 sessions.<br/><i>Optional permanent or time-based licenses: 10, 25, 50, 100, 250, 500, 750, 1000, 2500, or 5000 sessions.</i><br/><i>Optional Shared licenses<sup>2</sup>: Participant or Server. For the Server license, 500-50,000 in increments of 500 and 50,000-545,000 in increments of 1000.</i></li> <li>– AnyConnect Essentials license<sup>3</sup>: 5000 sessions.</li> </ul> </li> <li>• IPsec remote access VPN using IKEv1 and IPsec site-to-site VPN using IKEv1 or IKEv2:<br/>Base license: 5000 sessions.</li> </ul> |

| Model      | License Requirement <sup>1</sup>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ASA 5580   | <ul style="list-style-type: none"> <li>• IPsec remote access VPN using IKEv2 (use one of the following):               <ul style="list-style-type: none"> <li>– AnyConnect Premium license:<br/>Base license: 2 sessions.<br/><i>Optional permanent or time-based licenses: 10, 25, 50, 100, 250, 500, 750, 1000, 2500, 5000, or 10000 sessions.</i></li> <li>– AnyConnect Essentials license<sup>3</sup>: 10000 sessions.</li> </ul> </li> <li>• IPsec remote access VPN using IKEv1 and IPsec site-to-site VPN using IKEv1 or IKEv2:<br/>Base license: 10000 sessions.</li> </ul> |
| ASA 5512-X | <ul style="list-style-type: none"> <li>• IPsec remote access VPN using IKEv2 (use one of the following):               <ul style="list-style-type: none"> <li>– AnyConnect Premium license:<br/>Base license: 2 sessions.<br/><i>Optional permanent or time-based licenses: 10, 25, 50, 100, or 250 sessions.</i></li> <li>– AnyConnect Essentials license<sup>3</sup>: 250 sessions.</li> </ul> </li> <li>• IPsec remote access VPN using IKEv1 and IPsec site-to-site VPN using IKEv1 or IKEv2:<br/>Base license: 250 sessions.</li> </ul>                                        |
| ASA 5515-X | <ul style="list-style-type: none"> <li>• IPsec remote access VPN using IKEv2 (use one of the following):               <ul style="list-style-type: none"> <li>– AnyConnect Premium license:<br/>Base license: 2 sessions.<br/><i>Optional permanent or time-based licenses: 10, 25, 50, 100, or 250 sessions.</i></li> <li>– AnyConnect Essentials license<sup>3</sup>: 250 sessions.</li> </ul> </li> <li>• IPsec remote access VPN using IKEv1 and IPsec site-to-site VPN using IKEv1 or IKEv2:<br/>Base license: 250 sessions.</li> </ul>                                        |
| ASA 5525-X | <ul style="list-style-type: none"> <li>• IPsec remote access VPN using IKEv2 (use one of the following):               <ul style="list-style-type: none"> <li>– AnyConnect Premium license:<br/>Base license: 2 sessions.<br/><i>Optional permanent or time-based licenses: 10, 25, 50, 100, 250, 500, or 750 sessions.</i></li> <li>– AnyConnect Essentials license<sup>3</sup>: 750 sessions.</li> </ul> </li> <li>• IPsec remote access VPN using IKEv1 and IPsec site-to-site VPN using IKEv1 or IKEv2:<br/>Base license: 750 sessions.</li> </ul>                              |

| Model      | License Requirement <sup>1</sup>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ASA 5545-X | <ul style="list-style-type: none"> <li>• IPsec remote access VPN using IKEv2 (use one of the following):               <ul style="list-style-type: none"> <li>– AnyConnect Premium license:<br/>Base license: 2 sessions.<br/><i>Optional permanent or time-based licenses: 10, 25, 50, 100, 250, 500, 750, 1000, or 2500 sessions.</i></li> <li>– AnyConnect Essentials license<sup>3</sup>: 2500 sessions.</li> </ul> </li> <li>• IPsec remote access VPN using IKEv1 and IPsec site-to-site VPN using IKEv1 or IKEv2:<br/>Base license: 2500 sessions.</li> </ul>       |
| ASA 5555-X | <ul style="list-style-type: none"> <li>• IPsec remote access VPN using IKEv2 (use one of the following):               <ul style="list-style-type: none"> <li>– AnyConnect Premium license:<br/>Base license: 2 sessions.<br/><i>Optional permanent or time-based licenses: 10, 25, 50, 100, 250, 500, 750, 1000, 2500, or 5000 sessions.</i></li> <li>– AnyConnect Essentials license<sup>3</sup>: 5000 sessions.</li> </ul> </li> <li>• IPsec remote access VPN using IKEv1 and IPsec site-to-site VPN using IKEv1 or IKEv2:<br/>Base license: 5000 sessions.</li> </ul> |

| Model                                | License Requirement <sup>1</sup>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|--------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ASA 5585-X with SSP-10               | <ul style="list-style-type: none"> <li>• IPsec remote access VPN using IKEv2 (use one of the following):               <ul style="list-style-type: none"> <li>– AnyConnect Premium license:<br/>Base license: 2 sessions.<br/><i>Optional permanent or time-based licenses: 10, 25, 50, 100, 250, 500, 750, 1000, 2500, or 5000 sessions.</i></li> <li>– AnyConnect Essentials license<sup>3</sup>: 5000 sessions.</li> </ul> </li> <li>• IPsec remote access VPN using IKEv1 and IPsec site-to-site VPN using IKEv1 or IKEv2:<br/>Base license: 5000 sessions.</li> </ul>          |
| ASA 5585-X with SSP-20, -40, and -60 | <ul style="list-style-type: none"> <li>• IPsec remote access VPN using IKEv2 (use one of the following):               <ul style="list-style-type: none"> <li>– AnyConnect Premium license:<br/>Base license: 2 sessions.<br/><i>Optional permanent or time-based licenses: 10, 25, 50, 100, 250, 500, 750, 1000, 2500, 5000, or 10000 sessions.</i></li> <li>– AnyConnect Essentials license<sup>3</sup>: 10000 sessions.</li> </ul> </li> <li>• IPsec remote access VPN using IKEv1 and IPsec site-to-site VPN using IKEv1 or IKEv2:<br/>Base license: 10000 sessions.</li> </ul> |

1. The maximum combined VPN sessions of *all* types cannot exceed the maximum sessions shown in this table. For the ASA 5505, the maximum combined sessions is 10 for the Base license, and 25 for the Security Plus license.
2. A shared license lets the ASA act as a shared license server for multiple client ASAs. The shared license pool is large, but the maximum number of sessions used by each individual ASA cannot exceed the maximum number listed for permanent licenses.
3. The AnyConnect Essentials license enables AnyConnect VPN client access to the ASA. This license does not support browser-based SSL VPN access or Cisco Secure Desktop. For these features, activate an AnyConnect Premium license instead of the AnyConnect Essentials license.

**Note:** With the AnyConnect Essentials license, VPN users can use a Web browser to log in, and download and start (WebLaunch) the AnyConnect client.

The AnyConnect client software offers the same set of client features, whether it is enabled by this license or an AnyConnect Premium SSL VPN Edition license.

The AnyConnect Essentials license cannot be active at the same time as the following licenses on a given ASA: AnyConnect Premium license (all types) or the Advanced Endpoint Assessment license. You can, however, run AnyConnect Essentials and AnyConnect Premium licenses on different ASAs in the same network.

By default, the ASA uses the AnyConnect Essentials license, but you can disable it to use other licenses by using the **no anyconnect-essentials** command.

For a detailed list of the features supported by the AnyConnect Essentials license and AnyConnect Premium license, see *AnyConnect Secure Mobility Client Features, Licenses, and OSs*:

[http://www.cisco.com/en/US/products/ps10884/products\\_feature\\_guides\\_list.html](http://www.cisco.com/en/US/products/ps10884/products_feature_guides_list.html)

# Guidelines and Limitations

This section includes the guidelines and limitations for this feature.

## Context Mode Guidelines

Supported in single context mode only. Does not support multiple context mode.

## Firewall Mode Guidelines

Supported in routed firewall mode only. Does not support transparent firewall mode.

## Failover Guidelines

IPsec VPN sessions are replicated in Active/Standby failover configurations only. Active/Active failover configurations are not supported.

## IPv6 Guidelines

Does not support IPv6.

# Configuring ISAKMP

This section describes the Internet Security Association and Key Management Protocol (ISAKMP) and the Internet Key Exchange (IKE) protocol.

This section includes the following topics:

- [Configuring IKEv1 and IKEv2 Policies, page 64-9](#)
- [Enabling IKE on the Outside Interface, page 64-13](#)
- [Disabling IKEv1 Aggressive Mode, page 64-13](#)
- [Determining an ID Method for IKEv1 and IKEv2 ISAKMP Peers, page 64-13](#)
- [Enabling IPsec over NAT-T, page 64-14](#)
- [Enabling IPsec with IKEv1 over TCP, page 64-15](#)
- [Waiting for Active Sessions to Terminate Before Rebooting, page 64-16](#)
- [Alerting Peers Before Disconnecting, page 64-16](#)

## Configuring IKEv1 and IKEv2 Policies

To create an IKE policy, enter the **crypto ikev1 | ikev2 policy** command from global configuration mode. The prompt displays IKE policy configuration mode. For example:

```
hostname(config)# crypto ikev1 policy 1
hostname(config-ikev1-policy)#
```

After creating the policy, you can specify the settings for the policy.

[Table 64-1](#) and [Table 64-2](#) provide information about the IKEv1 and IKEv2 policy keywords and their values.

**Table 64-1** IKEv1 Policy Keywords for CLI Commands

| Command               | Keyword                                        | Meaning                                                                   | Description                                                                                                                                                                                                                         |
|-----------------------|------------------------------------------------|---------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>authentication</b> | <b>rsa-sig</b>                                 | A digital certificate with keys generated by the RSA signatures algorithm | Specifies the authentication method the ASA uses to establish the identity of each IPsec peer.                                                                                                                                      |
|                       | <b>crack</b>                                   | Challenge/Response for Authenticated Cryptographic Keys                   | CRACK provides strong mutual authentication when the client authenticates using a legacy method such as RADIUS, and the server uses public key authentication.                                                                      |
|                       | <b>pre-share</b><br>(default)                  | Preshared keys                                                            | Preshared keys do not scale well with a growing network but are easier to set up in a small network.                                                                                                                                |
| <b>encryption</b>     | <b>des</b>                                     | 56-bit DES-CBC                                                            | Specifies the symmetric encryption algorithm that protects data transmitted between two IPsec peers. The default is 168-bit Triple DES.                                                                                             |
|                       | <b>3des</b> (default)                          | 168-bit Triple DES                                                        |                                                                                                                                                                                                                                     |
|                       | <b>aes</b><br><b>aes-192</b><br><b>aes-256</b> |                                                                           | The Advanced Encryption Standard supports key lengths of 128, 192, 256 bits.                                                                                                                                                        |
| <b>hash</b>           | <b>sha</b> (default)                           | SHA-1 (HMAC variant)                                                      | Specifies the hash algorithm used to ensure data integrity. It ensures that a packet comes from where it says it comes from and that it has not been modified in transit.                                                           |
|                       | <b>md5</b>                                     | MD5 (HMAC variant)                                                        | The default is SHA-1. MD5 has a smaller digest and is considered to be slightly faster than SHA-1. A successful (but extremely difficult) attack against MD5 has occurred; however, the HMAC variant IKE uses prevents this attack. |

**Table 64-1** IKEv1 Policy Keywords for CLI Commands (continued)

| Command         | Keyword                               | Meaning                      | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|-----------------|---------------------------------------|------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>group</b>    | <b>1</b>                              | Group 1 (768-bit)            | Specifies the Diffie-Hellman group identifier, which the two IPsec peers use to derive a shared secret without transmitting it to each other.<br><br>The lower the Diffie-Hellman group number, the less CPU time it requires to execute. The higher the Diffie-Hellman group number, the greater the security.<br><br>Cisco VPN Client Version 3.x or higher requires a minimum of Group 2. (If you configure DH Group 1, the Cisco VPN Client cannot connect.)<br><br>AES support is available on security appliances licensed for VPN-3DES only. To support the large key sizes required by AES, ISAKMP negotiation should use Diffie-Hellman (DH) Group 5. |
|                 | <b>2</b> (default)                    | Group 2 (1024-bit)           |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|                 | <b>5</b>                              | Group 5 (1536-bit)           |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>lifetime</b> | integer value<br>(86400 =<br>default) | 120 to 2147483647<br>seconds | Specifies the SA lifetime. The default is 86,400 seconds or 24 hours. As a general rule, a shorter lifetime provides more secure ISAKMP negotiations (up to a point). However, with shorter lifetimes, the ASA sets up future IPsec SAs more quickly.                                                                                                                                                                                                                                                                                                                                                                                                          |

**Table 64-2** IKEv2 Policy Keywords for CLI Commands

| Command           | Keyword                          | Meaning               | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|-------------------|----------------------------------|-----------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>integrity</b>  | <b>sha</b> (default)             | SHA-1 (HMAC variant)  | Specifies the hash algorithm used to ensure data integrity. It ensures that a packet comes from where it says it comes from and that it has not been modified in transit.<br><br>The default is SHA-1. MD5 has a smaller digest and is considered to be slightly faster than SHA-1. A successful (but extremely difficult) attack against MD5 has occurred; however, the HMAC variant IKE user prevents this attack.<br><br>Specifies the Secure Hash Algorithm SHA 2 with the 256-bit digest.<br><br>Specifies the Secure Hash Algorithm SHA 2 with the 384-bit digest.<br><br>Specifies the Secure Hash Algorithm SHA 2 with the 512-bit digest. |
|                   | <b>md5</b>                       | MD5 (HMAC variant)    |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|                   | <b>sha256</b>                    | SHA 2, 256-bit digest |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|                   | <b>sha384</b>                    | SHA 2, 384-bit digest |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|                   | <b>sha512</b>                    | SHA 2, 512-bit digest |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>encryption</b> | <b>des</b>                       | 56-bit DES-CBC        | Specifies the symmetric encryption algorithm that protects data transmitted between two IPsec peers. The default is 168-bit Triple DES.<br><br>The Advanced Encryption Standard supports key lengths of 128, 192, 256 bits.                                                                                                                                                                                                                                                                                                                                                                                                                        |
|                   | <b>3des</b> (default)            | 168-bit Triple DES    |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|                   | <b>aes</b>                       |                       |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|                   | <b>aes-192</b><br><b>aes-256</b> |                       |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |

Table 64-2 IKEv2 Policy Keywords for CLI Commands (continued)

| Command         | Keyword                            | Meaning                   | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|-----------------|------------------------------------|---------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>prf</b>      | <b>sha</b> (default)               | SHA-1 (HMAC variant)      | Specifies the pseudo random function (PRF)—the algorithm used to generate keying material.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|                 | <b>md5</b>                         | MD5 (HMAC variant)        | The default is SHA-1. MD5 has a smaller digest and is considered to be slightly faster than SHA-1. A successful (but extremely difficult) attack against MD5 has occurred; however, the HMAC variant IKE uses prevents this attack.                                                                                                                                                                                                                                                                                                                                                                                            |
|                 | <b>sha256</b>                      | SHA 2, 256-bit digest     | Specifies the Secure Hash Algorithm SHA 2 with the 256-bit digest.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|                 | <b>sha384</b>                      | SHA 2, 384-bit digest     | Specifies the Secure Hash Algorithm SHA 2 with the 384-bit digest.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|                 | <b>sha512</b>                      | SHA 2, 512-bit digest     | Specifies the Secure Hash Algorithm SHA 2 with the 512-bit digest.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>group</b>    | <b>1</b>                           | Group 1 (768-bit)         | Specifies the Diffie-Hellman group identifier, which the two IPsec peers use to derive a shared secret without transmitting it to each other.<br><br>The lower the Diffie-Hellman group number, the less CPU time it requires to execute. The higher the Diffie-Hellman group number, the greater the security.<br><br>The AnyConnect client supports DH group 1, 2, and 5 in non-FIPS mode, and groups 2 and only in FIPS mode.<br><br>AES support is available on security appliances licensed for VPN-3DES only. To support the large key sizes required by AES, ISAKMP negotiation should use Diffie-Hellman (DH) Group 5. |
|                 | <b>2</b> (default)                 | Group 2 (1024-bit)        |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|                 | <b>5</b>                           | Group 5 (1536-bit)        |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>lifetime</b> | integer value<br>(86400 = default) | 120 to 2147483647 seconds | Specifies the SA lifetime. The default is 86,400 seconds or 24 hours. As a general rule, a shorter lifetime provides more secure ISAKMP negotiations (up to a point). However, with shorter lifetimes, the ASA sets up future IPsec SAs more quickly.                                                                                                                                                                                                                                                                                                                                                                          |

IKEv1 and IKEv2 each support a maximum of 20 IKE policies, each with a different set of values. Assign a unique priority to each policy that you create. The lower the priority number, the higher the priority.

When IKE negotiations begin, the peer that initiates the negotiation sends all of its policies to the remote peer, and the remote peer tries to find a match. The remote peer checks all of the peer's policies against each of its configured policies in priority order (highest priority first) until it discovers a match.

A match exists when both policies from the two peers contain the same encryption, hash, authentication, and Diffie-Hellman parameter values. For IKEv1, the remote peer policy must also specify a lifetime less than or equal to the lifetime in the policy the initiator sent. If the lifetimes are not identical, the ASA uses the shorter lifetime. For IKEv2 the lifetime is not negotiated but managed locally between each peer, making it possible to configure lifetime independently on each peer. If no acceptable match exists, IKE refuses negotiation and the SA is not established.

There is an implicit trade-off between security and performance when you choose a specific value for each parameter. The level of security the default values provide is adequate for the security requirements of most organizations. If you are interoperating with a peer that supports only one of the values for a parameter, your choice is limited to that value.

**Note**

New ASA configurations do not have a default IKEv1 or IKEv2 policy.

To configure IKE policies, in global configuration mode, use the **crypto ikev1 | ikev2 policy** command to enter IKE policy configuration mode:

```
crypto ikev1 | ikev2 policy priority
```

You must include the priority in each of the ISAKMP commands. The priority number uniquely identifies the policy and determines the priority of the policy in IKE negotiations.

To enable and configure IKE, complete the following steps, using the IKEv1 examples as a guide:

**Note**

If you do not specify a value for a given policy parameter, the default value applies.

**Step 1** Enter IKEv1 policy configuration mode:

```
hostname(config)# crypto ikev1 policy 1
hostname(config-ikev1-policy)#
```

**Step 2** Specify the encryption algorithm. The default is Triple DES. This example sets encryption to DES.

```
encryption [aes | aes-192 | aes-256 | des | 3des]
```

For example:

```
hostname(config-ikev1-policy)# encryption des
```

**Step 3** Specify the hash algorithm. The default is SHA-1. This example configures MD5.

```
hash [md5 | sha]
```

For example:

```
hostname(config-ikev1-policy)# hash md5
```

**Step 4** Specify the authentication method. The default is preshared keys. This example configures RSA signatures.

```
authentication [pre-share | crack | rsa-sig]
```

For example:

```
hostname(config-ikev1-policy)# authentication rsa-sig
```

**Step 5** Specify the Diffie-Hellman group identifier. The default is Group 2. This example configures Group 5.

```
group [1 | 2 | 5]
```

For example:

```
hostname(config-ikev1-policy)# group 5
```

**Step 6** Specify the SA lifetime. This examples sets a lifetime of 4 hours (14400 seconds). The default is 86400 seconds (24 hours).

```
lifetime seconds
```

For example:

```
hostname(config-ikev1-policy)# lifetime 14400
```

---

## Enabling IKE on the Outside Interface

You must enable IKE on the interface that terminates the VPN tunnel. Typically this is the outside, or public interface. To enable IKEv1 or IKEv2, use the **crypto ikev1 | ikev2 enable** command from global configuration mode:

```
crypto ikev1 | ikev2 enable interface-name
```

For example:

```
hostname(config)# crypto ikev1 enable outside
```

## Disabling IKEv1 Aggressive Mode

Phase 1 IKEv1 negotiations can use either main mode or aggressive mode. Both provide the same services, but aggressive mode requires only two exchanges between the peers totaling three messages, rather than three exchanges totaling six messages. Aggressive mode is faster, but does not provide identity protection for the communicating parties. Therefore, the peers must exchange identification information before establishing a secure SA. Aggressive mode is enabled by default.

- Main mode is slower, using more exchanges, but it protects the identities of the communicating peers.
- Aggressive mode is faster, but does not protect the identities of the peers.

To disable aggressive mode, enter the following command:

```
crypto ikev1 am-disable
```

For example:

```
hostname(config)# crypto ikev1 am-disable
```

If you have disabled aggressive mode, and want to revert to back to it, use the **no** form of the command. For example:

```
hostname(config)# no crypto ikev1 am-disable
```



### Note

Disabling aggressive mode prevents Cisco VPN clients from using preshared key authentication to establish tunnels to the ASA. However, they may use certificate-based authentication (that is, ASA or RSA) to establish tunnels.

---

## Determining an ID Method for IKEv1 and IKEv2 ISAKMP Peers

During ISAKMP Phase I negotiations, either IKEv1 or IKEv2, the peers must identify themselves to each other. You can choose the identification method from the following options:

|                  |                                                                                                                                                                                                        |
|------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Address</b>   | Uses the IP addresses of the hosts exchanging ISAKMP identity information.                                                                                                                             |
| <b>Automatic</b> | Determines ISAKMP negotiation by connection type: <ul style="list-style-type: none"> <li>• IP address for preshared key.</li> <li>• Cert Distinguished Name for certificate authentication.</li> </ul> |
| <b>Hostname</b>  | Uses the fully qualified domain name of the hosts exchanging ISAKMP identity information (default). This name comprises the hostname and the domain name.                                              |
| <b>Key ID</b>    | Uses the string the remote peer uses to look up the preshared key.                                                                                                                                     |

The ASA uses the Phase I ID to send to the peer. This is true for all VPN scenarios except LAN-to-LAN IKEv1 connections in main mode that authenticate with preshared keys.

The default setting is auto.

To change the peer identification method, enter the following command:

```
crypto isakmp identity {address | hostname | key-id id-string | auto}
```

For example, the following command sets the peer identification method to hostname:

```
hostname(config)# crypto isakmp identity hostname
```

## Enabling IPsec over NAT-T

NAT-T lets IPsec peers establish a connection through a NAT device. It does this by encapsulating IPsec traffic in UDP datagrams, using port 4500, which provides NAT devices with port information. NAT-T auto-detects any NAT devices and only encapsulates IPsec traffic when necessary. This feature is disabled by default.



### Note

Due to a limitation of the AnyConnect client, you must enable NAT-T for the AnyConnect client to successfully connect using IKEv2. This requirement applies even if the client is not behind a NAT-T device.

With the exception of the home zone on the Cisco ASA 5505, the ASA can simultaneously support standard IPsec, IPsec over TCP, NAT-T, and IPsec over UDP, depending on the client with which it is exchanging data.

The following breakdown shows the connections with each option enabled:

| Options  | Enabled Feature                              | Client Position                | Feature Used               |
|----------|----------------------------------------------|--------------------------------|----------------------------|
| Option 1 | If NAT-T is enabled                          | and client is behind NAT, then | NAT-T is used              |
|          |                                              | and no NAT exists, then        | Native IPsec (ESP) is used |
| Option 2 | If IPsec over UDP is enabled                 | and client is behind NAT, then | IPsec over UDP is used     |
|          |                                              | and no NAT exists, then        | IPsec over UDP is used     |
| Option 3 | If both NAT-T and IPsec over UDP are enabled | and client is behind NAT, then | NAT-T is used              |
|          |                                              | and no NAT exists, then        | IPsec over UDP is used     |



### Note

When IPsec over TCP is enabled, it takes precedence over all other connection methods.

When you enable NAT-T, the ASA automatically opens port 4500 on all IPsec-enabled interfaces.

The ASA supports multiple IPsec peers behind a single NAT/PAT device operating in one of the following networks, but not both:

- LAN-to-LAN
- Remote access

In a mixed environment, the remote access tunnels fail the negotiation because all peers appear to be coming from the same public IP address, address of the NAT device. Also, remote access tunnels fail in a mixed environment because they often use the same name as the LAN-to-LAN tunnel group (that is, the IP address of the NAT device). This match can cause negotiation failures among multiple peers in a mixed LAN-to-LAN and remote access network of peers behind the NAT device.

## Using NAT-T

To use NAT-T, you must perform the following tasks:

---

**Step 1** Enter the following command to enable IPsec over NAT-T globally on the ASA:

```
crypto isakmp nat-traversal natkeepalive
```

The range for the *natkeepalive* argument is 10 to 3600 seconds. The default is 20 seconds.

For example, enter the following command to enable NAT-T and set the keepalive value to one hour.

```
hostname(config)# crypto isakmp nat-traversal 3600
```

**Step 2** Select the before-encryption option for the IPsec fragmentation policy by entering this command:

```
hostname(config)# crypto ipsec fragmentation before-encryption
```

This option lets traffic travel across NAT devices that do not support IP fragmentation. It does not impede the operation of NAT devices that do support IP fragmentation.

---

## Enabling IPsec with IKEv1 over TCP

IPsec/IKEv1 over TCP enables a Cisco VPN client to operate in an environment in which standard ESP or IKEv1 cannot function or can function only with modification to existing firewall rules. IPsec over TCP encapsulates both the IKEv1 and IPsec protocols within a TCP-like packet and enables secure tunneling through both NAT and PAT devices and firewalls. This feature is disabled by default.



### Note

This feature does not work with proxy-based firewalls.

---

IPsec over TCP works with remote access clients. You enable it globally, and it works on all IKEv1-enabled interfaces. It is a client to the ASA feature only. It does not work for LAN-to-LAN connections.

The ASA can simultaneously support standard IPsec, IPsec over TCP, NAT-Traversal, and IPsec over UDP, depending on the client with which it is exchanging data. IPsec over TCP, if enabled, takes precedence over all other connection methods.

The VPN 3002 hardware client, which supports one tunnel at a time, can connect using standard IPsec, IPsec over TCP, NAT-Traversal, or IPsec over UDP.

You enable IPsec over TCP on both the ASA and the client to which it connects.

You can enable IPsec over TCP for up to 10 ports that you specify. If you enter a well-known port, for example port 80 (HTTP) or port 443 (HTTPS), the system displays a warning that the protocol associated with that port no longer works on the public interface. The consequence is that you can no longer use a browser to manage the ASA through the public interface. To solve this problem, reconfigure the HTTP/HTTPS management to different ports.

The default port is 10000.

You must configure TCP port(s) on the client as well as on the ASA. The client configuration must include at least one of the ports you set for the ASA.

To enable IPsec over TCP for IKEv1 globally on the ASA, enter the following command:

```
crypto ikev1 ipsec-over-tcp [port port 1...port0]
```

This example enables IPsec over TCP on port 45:

```
hostname(config)# crypto ikev1 ipsec-over-tcp port 45
```

## Waiting for Active Sessions to Terminate Before Rebooting

You can schedule an ASA reboot to occur only when all active sessions have terminated voluntarily. This feature is disabled by default.

To enable waiting for all active sessions to voluntarily terminate before the ASA reboots, enter the following command:

```
crypto isakmp reload-wait
```

For example:

```
hostname(config)# crypto isakmp reload-wait
```

Use the **reload** command to reboot the ASA. If you set the **reload-wait** command, you can use the **reload quick** command to override the **reload-wait** setting. The **reload** and **reload-wait** commands are available in privileged EXEC mode; neither includes the **isakmp** prefix.

## Alerting Peers Before Disconnecting

Remote access or LAN-to-LAN sessions can drop for several reasons, such as an ASA shutdown or reboot, session idle timeout, maximum connection time exceeded, or administrator cut-off.

The ASA can notify qualified peers (in LAN-to-LAN configurations), Cisco VPN clients, and VPN 3002 hardware clients of sessions that are about to be disconnected. The peer or client receiving the alert decodes the reason and displays it in the event log or in a pop-up pane. This feature is disabled by default.

Qualified clients and peers include the following:

- Security appliances with Alerts enabled
- Cisco VPN clients running version 4.0 or later software (no configuration required)
- VPN 3002 hardware clients running version 4.0 or later software, with Alerts enabled
- VPN 3000 series concentrators running version 4.0 or later software with Alerts enabled

To enable disconnect notification to IPsec peers, enter the **crypto isakmp disconnect-notify** command.

For example:

```
hostname(config)# crypto isakmp disconnect-notify
```

## Configuring Certificate Group Matching for IKEv1

Tunnel groups define user connection terms and permissions. Certificate group matching lets you match a user to a tunnel group using either the Subject DN or Issuer DN of the user certificate.



### Note

Certificate group matching applies to IKEv1 and IKEv2 LAN-to-LAN connections only. IKEv2 remote access connections support the pull-down group selection configured in the webvpn-attributes of the tunnel-group and webvpn configuration mode for certificate-group-map, and so on.

To match users to tunnel groups based on these fields of the certificate, you must first create rules that define a matching criteria, and then associate each rule with the desired tunnel group.

To create a certificate map, **use the `crypto ca certificate map` command**. To define a tunnel group, use the **`tunnel-group` command**.

You must also configure a certificate group matching policy, specifying to match the group from the rules, or from the organizational unit (OU) field, or to use a default group for all certificate users. You can use any or all of these methods.

The following sections provide more information:

- [Creating a Certificate Group Matching Rule and Policy, page 64-17](#)
- [Using the Tunnel-group-map default-group Command, page 64-19](#)

## Creating a Certificate Group Matching Rule and Policy

To configure the policy and rules by which certificate-based ISAKMP sessions map to tunnel groups, and to associate the certificate map entries with tunnel groups, enter the **`tunnel-group-map` command** in global configuration mode.

The syntax follows:

```
tunnel-group-map enable {rules | ou | ike-id | peer ip}
```

```
tunnel-group-map [rule-index] enable policy
```

|                   |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|-------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>policy</i>     | <p>Specifies the policy for deriving the tunnel group name from the certificate. <i>Policy</i> can be one of the following:</p> <p><i>ike-id</i>—Indicates that if a tunnel group is not determined based on a rule lookup or taken from the OU, then the certificate-based ISAKMP sessions are mapped to a tunnel group based on the content of the phase1 ISAKMP ID.</p> <p><i>ou</i>—Indicates that if a tunnel-group is not determined based on a rule lookup, then use the value of the OU in the subject distinguished name (DN).</p> <p><i>peer-ip</i>—Indicates that if a tunnel group is not determined based on a rule lookup or taken from the <i>OU</i> or <i>ike-id</i> methods, then use the peer IP address.</p> <p><i>rules</i>—Indicates that the certificate-based ISAKMP sessions are mapped to a tunnel group based on the certificate map associations configured by this command.</p> |
| <i>rule index</i> | (Optional) Refers to parameters specified by the <b>crypto ca certificate map</b> command. The values are 1 to 65535.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |

Be aware of the following:

- You can invoke this command multiple times as long as each invocation is unique and you do not reference a map index more than once.
- Rules cannot be longer than 255 characters.
- You can assign multiple rules to the same group. To do that, you add the rule priority and group first. Then you define as many criteria statements as you need for each group. When multiple rules are assigned to the same group, a match results for the first rule that tests true.
- By creating a single rule, you can require all criteria to match before assigning a user to a specific tunnel group. Requiring all criteria to match is equivalent to a logical AND operation. Alternatively, create one rule for each criterion if you want to require that only one match before assigning a user to a specific tunnel group. Requiring only one criterion to match is equivalent to a logical OR operation.

The following example enables mapping of certificate-based ISAKMP sessions to a tunnel group based on the content of the phase1 ISAKMP ID:

```
hostname(config)# tunnel-group-map enable ike-id
hostname(config)#
```

The following example enables mapping of certificate-based ISAKMP sessions to a tunnel group based on the IP address of the peer:

```
hostname(config)# tunnel-group-map enable peer-ip
hostname(config)#
```

The following example enables mapping of certificate-based ISAKMP sessions based on the organizational unit (OU) in the subject distinguished name (DN):

```
hostname(config)# tunnel-group-map enable ou
hostname(config)#
```

The following example enables mapping of certificate-based ISAKMP sessions based on established rules:

```
hostname(config)# tunnel-group-map enable rules
hostname(config)#
```

## Using the Tunnel-group-map default-group Command

This command specifies a default tunnel group to use when the configuration does not specify a tunnel group.

The syntax is **tunnel-group-map** [*rule-index*] **default-group** *tunnel-group-name* where *rule-index* is the priority for the rule, and *tunnel-group name* must be for a tunnel group that already exists.

## Configuring IPsec

This section provides background information about IPsec and describes the procedures required to configure the ASA when using IPsec to implement a VPN. It contains the following topics:

- [Understanding IPsec Tunnels, page 64-19](#)
- [Understanding IKEv1 Transform Sets and IKEv2 Proposals, page 64-19](#)
- [Defining Crypto Maps, page 64-20](#)
- [Applying Crypto Maps to Interfaces, page 64-26](#)
- [Using Interface Access Lists, page 64-26](#)
- [Changing IPsec SA Lifetimes, page 64-29](#)
- [Creating a Basic IPsec Configuration, page 64-29](#)
- [Using Dynamic Crypto Maps, page 64-31](#)
- [Providing Site-to-Site Redundancy, page 64-34](#)
- [Viewing an IPsec Configuration, page 64-34](#)

## Understanding IPsec Tunnels

IPsec tunnels are sets of SAs that the ASA establishes between peers. The SAs specify the protocols and algorithms to apply to sensitive data and also specify the keying material that the peers use. IPsec SAs control the actual transmission of user traffic. SAs are unidirectional, but are generally established in pairs (inbound and outbound).

The peers negotiate the settings to use for each SA. Each SA consists of the following:

- IKEv1 transform sets or IKEv2 proposals
- Crypto maps
- Access lists
- Tunnel groups
- Prefragmentation policies

## Understanding IKEv1 Transform Sets and IKEv2 Proposals

An IKEv1 transform set or an IKEv2 proposal is a combination of security protocols and algorithms that define how the ASA protects data. During IPsec SA negotiations, the peers must identify a transform set or proposal that is the same at both peers. The ASA then applies the matching transform set or proposal to create an SA that protects data flows in the access list for that crypto map.

With IKEv1 transform sets, you set one value for each parameter. For IKEv2 proposals, you can configure multiple encryption and authentication types and multiple integrity algorithms for a single proposal. The ASA orders the settings from the most secure to the least secure and negotiates with the peer using that order. This allows you to potentially send a single proposal to convey all the allowed combinations instead of the need to send each allowed combination individually as with IKEv1.

The ASA tears down the tunnel if you change the definition of the transform set or proposal used to create its SA. See “[Clearing Security Associations](#)” for further information.

**Note**

If you clear or delete the only element in a transform set or proposal, the ASA automatically removes the crypto map references to it.

## Defining Crypto Maps

*Crypto maps* define the IPsec policy to be negotiated in the IPsec SA. They include the following:

- Access list to identify the packets that the IPsec connection permits and protects.
- Peer identification.
- Local address for the IPsec traffic. (See “[Applying Crypto Maps to Interfaces](#)” for more details.)
- Up to 11 IKEv1 transform sets or IKEv2 proposals, with which to attempt to match the peer security settings.

A *crypto map set* consists of one or more crypto maps that have the same map name. You create a crypto map set when you create its first crypto map. The following command syntax creates or adds to a crypto map:

```
crypto map map-name seq-num match address access-list-name
```

You can continue to enter this command to add crypto maps to the crypto map set. In the following example, *mymap* is the name of the crypto map set to which you might want to add crypto maps:

```
crypto map mymap 10 match address 101
```

The sequence number (*seq-num*) shown in the syntax above distinguishes one crypto map from another one with the same name. The sequence number assigned to a crypto map also determines its priority among the other crypto maps within a crypto map set. The lower the sequence number, the higher the priority. After you assign a crypto map set to an interface, the ASA evaluates all IP traffic passing through the interface against the crypto maps in the set, beginning with the crypto map with the lowest sequence number.

The ACL assigned to a crypto map consists of all of the ACEs that have the same access list name, as shown in the following command syntax:

```
access-list access-list-name {deny | permit} ip source source-netmask destination
destination-netmask
```

Each ACL consists of one or more ACEs that have the same access list name. You create an ACL when you create its first ACE. The following command syntax creates or adds to an ACL:

```
access-list access-list-name {deny | permit} ip source source-netmask destination
destination-netmask
```

In the following example, the ASA applies the IPsec protections assigned to the crypto map to all traffic flowing from the 10.0.0.0 subnet to the 10.1.1.0 subnet:

```
access-list 101 permit ip 10.0.0.0 255.255.255.0 10.1.1.0 255.255.255.0
```

The crypto map that matches the packet determines the security settings used in the SA negotiations. If the local ASA initiates the negotiation, it uses the policy specified in the static crypto map to create the offer to send to the specified peer. If the peer initiates the negotiation, the ASA attempts to match the policy to a static crypto map, and if that fails, then it attempts to match any dynamic crypto maps in the crypto map set, to decide whether to accept or reject the peer offer.

For two peers to succeed in establishing an SA, they must have at least one compatible crypto map. To be compatible, a crypto map must meet the following criteria:

- The crypto map must contain compatible crypto ACLs (for example, mirror image ACLs). If the responding peer uses dynamic crypto maps, so the ASA also must contain compatible crypto ACLs as a requirement to apply IPsec.
- Each crypto map identifies the other peer (unless the responding peer uses dynamic crypto maps).
- The crypto maps have at least one transform set or proposal in common.

You can apply only one crypto map set to a single interface. Create more than one crypto map for a particular interface on the ASA if any of the following conditions exist:

- You want specific peers to handle different data flows.
- You want different IPsec security to apply to different types of traffic.

For example, create a crypto map and assign an ACL to identify traffic between two subnets and assign one IKEv1 transform set or IKEv2 proposal. Create another crypto map with a different ACL to identify traffic between another two subnets and apply a transform set or proposal with different VPN parameters.

If you create more than one crypto map for an interface, specify a sequence number (seq-num) for each map entry to determine its priority within the crypto map set.

Each ACE contains a permit or deny statement. [Table 64-3](#) explains the special meanings of permit and deny ACEs in ACLs applied to crypto maps.

**Table 64-3** *Special Meanings of Permit and Deny in Crypto Access Lists Applied to Outbound Traffic*

| <b>Result of Crypto Map Evaluation</b>                     | <b>Response</b>                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Match criterion in an ACE containing a permit statement    | Halt further evaluation of the packet against the remaining ACEs in the crypto map set, and evaluate the packet security settings against those in the IKEv1 transform sets or IKEv2 proposals assigned to the crypto map. After matching the security settings to those in a transform set or proposal, the ASA applies the associated IPsec settings. Typically for outbound traffic, this means that it decrypts, authenticates, and routes the packet. |
| Match criterion in an ACE containing a deny statement      | Interrupt further evaluation of the packet against the remaining ACEs in the crypto map under evaluation, and resume evaluation against the ACEs in the next crypto map, as determined by the next seq-num assigned to it.                                                                                                                                                                                                                                 |
| Fail to match all tested permit ACEs in the crypto map set | Route the packet without encrypting it.                                                                                                                                                                                                                                                                                                                                                                                                                    |

ACEs containing deny statements filter out outbound traffic that does not require IPsec protection (for example, routing protocol traffic). Therefore, insert initial deny statements to filter outbound traffic that should not be evaluated against permit statements in a crypto access list.

For an inbound, encrypted packet, the security appliance uses the source address and ESP SPI to determine the decryption parameters. After the security appliance decrypts the packet, it compares the inner header of the decrypted packet to the permit ACEs in the ACL associated with the packet SA. If the inner header fails to match the proxy, the security appliance drops the packet. If the inner header matches the proxy, the security appliance routes the packet.


When comparing the inner header of an inbound packet that was not encrypted, the security appliance ignores all deny rules because they would prevent the establishment of a Phase 2 SA.

**Note**

To route inbound, unencrypted traffic as clear text, insert deny ACEs before permit ACEs.

Figure 64-1 shows an example LAN-to-LAN network of ASAs.

**Figure 64-1** Effect of Permit and Deny ACEs on Traffic (Conceptual Addresses)

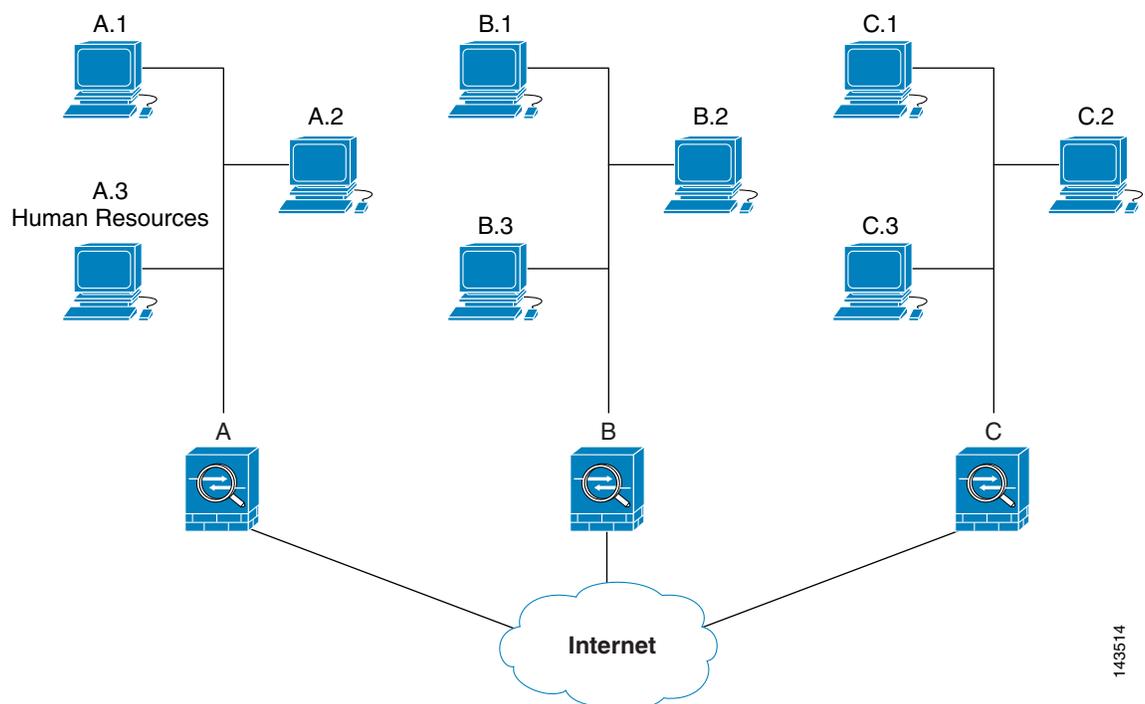

143514

The simple address notation shown in this figure and used in the following explanation is an abstraction. An example with real IP addresses follows the explanation.

The objective in configuring Security Appliances A, B, and C in this example LAN-to-LAN network is to permit tunneling of all traffic originating from one of the hosts shown in Figure 64-1 and destined for one of the other hosts. However, because traffic from Host A.3 contains sensitive data from the Human Resources department, it requires strong encryption and more frequent rekeying than the other traffic. So you will want to assign a special transform set for traffic from Host A.3.

To configure Security Appliance A for outbound traffic, you create two crypto maps, one for traffic from Host A.3 and the other for traffic from the other hosts in Network A, as shown in the following example:

```

Crypto Map Seq_No_1
 deny packets from A.3 to B
 deny packets from A.3 to C
 permit packets from A to B
 permit packets from A to C
Crypto Map Seq_No_2
 permit packets from A.3 to B
 permit packets from A.3 to C

```


After creating the ACLs, you assign a transform set to each crypto map to apply the required IPsec to each matching packet.

Cascading ACLs involves the insertion of deny ACEs to bypass evaluation against an ACL and resume evaluation against a subsequent ACL in the crypto map set. Because you can associate each crypto map with different IPsec settings, you can use deny ACEs to exclude special traffic from further evaluation in the corresponding crypto map, and match the special traffic to permit statements in another crypto map to provide or require different security. The sequence number assigned to the crypto ACL determines its position in the evaluation sequence within the crypto map set.

Figure 64-2 shows the cascading ACLs created from the conceptual ACEs above. The meaning of each symbol in the figure follows.

|                                                                                     |                                                                                                                                                                                                                                         |
|-------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|    | Crypto map within a crypto map set.                                                                                                                                                                                                     |
|    | (Gap in a straight line) Exit from a crypto map when a packet matches an ACE.                                                                                                                                                           |
|  | Packet that fits the description of one ACE. Each size ball represents a different packet matching the respective ACE in the figure. The differences in size merely represent differences in the source and destination of each packet. |
|  | Redirection to the next crypto map in the crypto map set.                                                                                                                                                                               |
|  | Response when a packet either matches an ACE or fails to match all of the permit ACEs in a crypto map set.                                                                                                                              |

Figure 64-2 Cascading ACLs in a Crypto Map Set

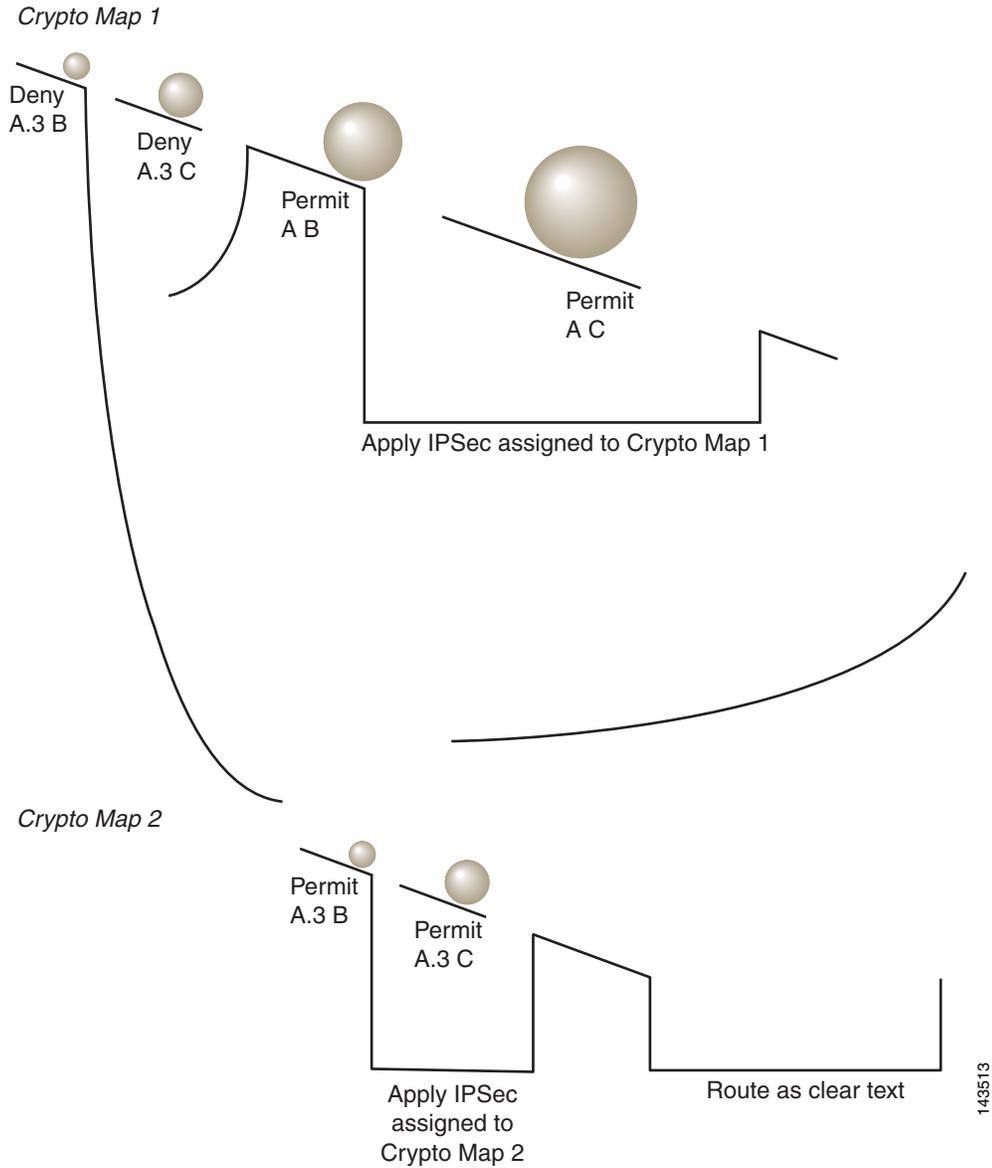

Security Appliance A evaluates a packet originating from Host A.3 until it matches a permit ACE and attempts to assign the IPsec security associated with the crypto map. Whenever the packet matches a deny ACE, the ASA ignores the remaining ACEs in the crypto map and resumes evaluation against the next crypto map, as determined by the sequence number assigned to it. So in the example, if Security Appliance A receives a packet from Host A.3, it matches the packet to a deny ACE in the first crypto map and resumes evaluation of the packet against the next crypto map. When it matches the packet to the permit ACE in that crypto map, it applies the associated IPsec security (strong encryption and frequent rekeying).

To complete the security appliance configuration in the example network, we assign mirror crypto maps to Security Appliances B and C. However, because security appliances ignore deny ACEs when evaluating inbound, encrypted traffic, we can omit the mirror equivalents of the deny A.3 B and deny A.3 C ACEs, and therefore omit the mirror equivalents of Crypto Map 2. So the configuration of cascading ACLs in Security Appliances B and C is unnecessary.


Table 64-4 shows the ACLs assigned to the crypto maps configured for all three ASAs in Figure 64-1.

**Table 64-4 Example Permit and Deny Statements (Conceptual)**

| Security Appliance A    |              | Security Appliance B    |             | Security Appliance C    |             |
|-------------------------|--------------|-------------------------|-------------|-------------------------|-------------|
| Crypto Map Sequence No. | ACE Pattern  | Crypto Map Sequence No. | ACE Pattern | Crypto Map Sequence No. | ACE Pattern |
| 1                       | deny A.3 B   | 1                       | permit B A  | 1                       | permit C A  |
|                         | deny A.3 C   |                         |             |                         |             |
|                         | permit A B   |                         | permit B C  |                         | permit C B  |
|                         | permit A C   |                         |             |                         |             |
| 2                       | permit A.3 B |                         |             |                         |             |
|                         | permit A.3 C |                         |             |                         |             |

Figure 64-3 maps the conceptual addresses shown in Figure 64-1 to real IP addresses.

**Figure 64-3 Effect of Permit and Deny ACEs on Traffic (Real Addresses)**

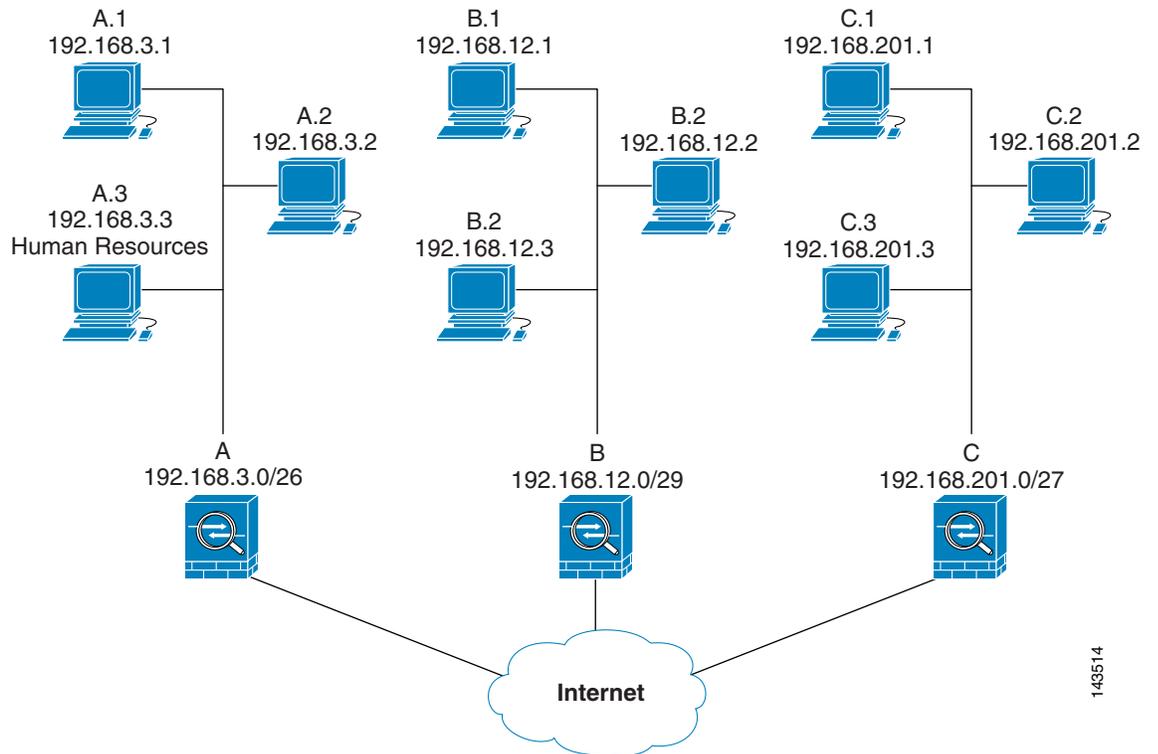

The tables that follow combine the IP addresses shown in [Figure 64-3](#) to the concepts shown in [Table 64-4](#). The real ACEs shown in these tables ensure that all IPsec packets under evaluation within this network receive the proper IPsec settings.

**Table 64-5 Example Permit and Deny Statements for Security Appliance A**

| Security Appliance | Crypto Map Sequence No. | ACE Pattern  | Real ACEs                                                         |
|--------------------|-------------------------|--------------|-------------------------------------------------------------------|
| A                  | 1                       | deny A.3 B   | deny 192.168.3.3 255.255.255.192 192.168.12.0 255.255.255.248     |
|                    |                         | deny A.3 C   | deny 192.168.3.3 255.255.255.192 192.168.201.0 255.255.255.224    |
|                    |                         | permit A B   | permit 192.168.3.0 255.255.255.192 192.168.12.0 255.255.255.248   |
|                    |                         | permit A C   | permit 192.168.3.0 255.255.255.192 192.168.201.0 255.255.255.224  |
|                    | 2                       | permit A.3 B | permit 192.168.3.3 255.255.255.192 192.168.12.0 255.255.255.248   |
|                    |                         | permit A.3 C | permit 192.168.3.3 255.255.255.192 192.168.201.0 255.255.255.224  |
| B                  | None needed             | permit B A   | permit 192.168.12.0 255.255.255.248 192.168.3.0 255.255.255.192   |
|                    |                         | permit B C   | permit 192.168.12.0 255.255.255.248 192.168.201.0 255.255.255.224 |
| C                  | None needed             | permit C A   | permit 192.168.201.0 255.255.255.224 192.168.3.0 255.255.255.192  |
|                    |                         | permit C B   | permit 192.168.201.0 255.255.255.224 192.168.12.0 255.255.255.248 |

You can apply the same reasoning shown in the example network to use cascading ACLs to assign different security settings to different hosts or subnets protected by a Cisco ASA.



**Note**

By default, the ASA does not support IPsec traffic destined for the same interface from which it enters. Names for this type of traffic include U-turn, hub-and-spoke, and hairpinning. However, you can configure IPsec to support U-turn traffic by inserting an ACE to permit traffic to and from the network. For example, to support U-turn traffic on Security Appliance B, add a conceptual “permit B B” ACE to ACL1. The actual ACE would be as follows:

```
permit 192.168.12.0 255.255.255.248 192.168.12.0 255.255.255.248
```

## Applying Crypto Maps to Interfaces

You must assign a crypto map set to each interface through which IPsec traffic flows. The ASA supports IPsec on all interfaces. Assigning the crypto map set to an interface instructs the ASA to evaluate all the traffic against the crypto map set and to use the specified policy during connection or SA negotiation.

Assigning a crypto map to an interface also initializes run-time data structures, such as the SA database and the security policy database. Reassigning a modified crypto map to the interface resynchronizes the run-time data structures with the crypto map configuration. Also, adding new peers through the use of new sequence numbers and reassigning the crypto map does not tear down existing connections.

## Using Interface Access Lists

By default, the ASA lets IPsec packets bypass interface ACLs. If you want to apply interface access lists to IPsec traffic, use the **no** form of the **sysopt connection permit-vpn** command.

The crypto map access list bound to the outgoing interface either permits or denies IPsec packets through the VPN tunnel. IPsec authenticates and deciphers packets that arrive from an IPsec tunnel, and subjects them to evaluation against the ACL associated with the tunnel.

Access lists define which IP traffic to protect. For example, you can create access lists to protect all IP traffic between two subnets or two hosts. (These access lists are similar to access lists used with the **access-group** command. However, with the **access-group** command, the access list determines which traffic to forward or block at an interface.)

Before the assignment to crypto maps, the access lists are not specific to IPsec. Each crypto map references the access lists and determines the IPsec properties to apply to a packet if it matches a permit in one of the access lists.

Access lists assigned to IPsec crypto maps have four primary functions:


- Select outbound traffic to be protected by IPsec (permit = protect).
- Trigger an ISAKMP negotiation for data travelling without an established SA.
- Process inbound traffic to filter out and discard traffic that should have been protected by IPsec.
- Determine whether to accept requests for IPsec SAs when processing IKE negotiation from the peer. (Negotiation applies only to **ipsec-isakmp crypto map** entries.) The peer must permit a data flow associated with an **ipsec-isakmp crypto map** command entry to ensure acceptance during negotiation.

Regardless of whether the traffic is inbound or outbound, the ASA evaluates traffic against the access lists assigned to an interface. You assign IPsec to an interface as follows:

- 
- Step 1** Create the access lists to be used for IPsec.
  - Step 2** Map the lists to one or more crypto maps, using the same crypto map name.
  - Step 3** Map the IKEv1 transform sets or IKEv2 proposals to the crypto maps to apply IPsec to the data flows.
  - Step 4** Apply the crypto maps collectively as a crypto map set by assigning the crypto map name they share to the interface.
- 

In [Figure 64-4](#), IPsec protection applies to traffic between Host 10.0.0.1 and Host 10.2.2.2 as the data exits the outside interface on Security Appliance A toward Host 10.2.2.2.

Figure 64-4 How Crypto Access Lists Apply to IPsec

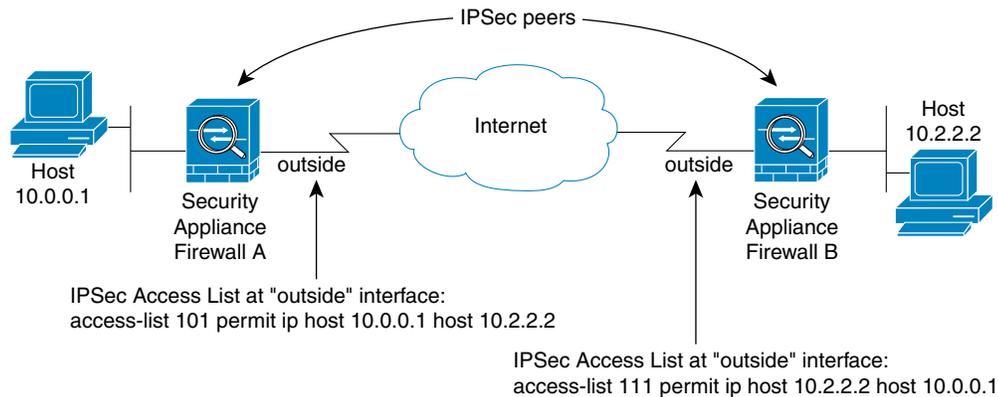

Traffic exchanged between hosts 10.0.0.1 and 10.2.2.2 is protected between Security Appliance Firewall A "outside" and Security Appliance Firewall B "outside"

92616

Security Appliance A evaluates traffic from Host 10.0.0.1 to Host 10.2.2.2, as follows:

- source = host 10.0.0.1
- dest = host 10.2.2.2

Security Appliance A also evaluates traffic from Host 10.2.2.2 to Host 10.0.0.1, as follows:

- source = host 10.2.2.2
- dest = host 10.0.0.1

The first permit statement that matches the packet under evaluation determines the scope of the IPsec SA.

**Note**

If you delete the only element in an access list, the ASA also removes the associated crypto map.

If you modify an access list currently referenced by one or more crypto maps, use the **crypto map interface** command to reinitialize the run-time SA database. See the **crypto map** command for more information.

We recommend that for every crypto access list specified for a static crypto map that you define at the local peer, you define a "mirror image" crypto access list at the remote peer. The crypto maps should also support common transforms and refer to the other system as a peer. This ensures correct processing of IPsec by both peers.

**Note**

Every static crypto map must define an access list and an IPsec peer. If either is missing, the crypto map is incomplete and the ASA drops any traffic that it has not already matched to an earlier, complete crypto map. Use the **show conf** command to ensure that every crypto map is complete. To fix an incomplete crypto map, remove the crypto map, add the missing entries, and reapply it.

We discourage the use of the **any** keyword to specify source or destination addresses in crypto access lists because they cause problems. We strongly discourage the **permit any any** command statement because it does the following:

- Protects all outbound traffic, including all protected traffic sent to the peer specified in the corresponding crypto map.

- Requires protection for all inbound traffic.

In this scenario, the ASA silently drops all inbound packets that lack IPsec protection.

Be sure that you define which packets to protect. If you use the **any** keyword in a **permit** statement, preface it with a series of **deny** statements to filter out traffic that would otherwise fall within that **permit** statement that you do not want to protect.

**Note**

Decrypted through traffic is permitted from the client despite having an access group on the outside interface, which calls a `deny ip any any` access-list, while `no sysopt connection permit-vpn` is configured.

Users who want to control access to the protected network via site-to-site or remote access VPN using the `no sysopt permit` command in conjunction with an access control list (ACL) on the outside interface are not successful.

In this situation, when management-access inside is enabled, the ACL is not applied, and users can still connect using SSH to the security appliance. Traffic to hosts on the inside network are blocked correctly by the ACL, but cannot block decrypted through traffic to the inside interface.

The `ssh` and `http` commands are of a higher priority than the ACLs. In other words, to deny SSH, Telnet, or ICMP traffic to the device from the VPN session, use `ssh`, `telnet` and `icmp` commands, which deny the IP local pool should be added.

## Changing IPsec SA Lifetimes

You can change the global lifetime values that the ASA uses when negotiating new IPsec SAs. You can override these global lifetime values for a particular crypto map.

IPsec SAs use a derived, shared, secret key. The key is an integral part of the SA; the keys time out together to require the key to refresh. Each SA has two lifetimes: timed and traffic-volume. An SA expires after the respective lifetime and negotiations begin for a new one. The default lifetimes are 28,800 seconds (eight hours) and 4,608,000 kilobytes (10 megabytes per second for one hour).

If you change a global lifetime, the ASA drops the tunnel. It uses the new value in the negotiation of subsequently established SAs.

When a crypto map does not have configured lifetime values and the ASA requests a new SA, it inserts the global lifetime values used in the existing SA into the request sent to the peer. When a peer receives a negotiation request, it uses the smaller of either the lifetime value the peer proposes or the locally configured lifetime value as the lifetime of the new SA.

The peers negotiate a new SA before crossing the lifetime threshold of the existing SA to ensure that a new SA is ready when the existing one expires. The peers negotiate a new SA when about 5 to 15 percent of the lifetime of the existing SA remains.

## Creating a Basic IPsec Configuration

You can create basic IPsec configurations with static or dynamic crypto maps.

To create a basic IPsec configuration using a static crypto map, perform the following steps:

---

**Step 1** To create an access list to define the traffic to protect, enter the following command:

```
access-list access-list-name {deny | permit} ip source source-netmask destination destination-netmask
```

For example:

```
hostname(config)# access-list 101 permit ip 10.0.0.0 255.255.255.0 10.1.1.0 255.255.255.0
```

In this example, the **permit** keyword causes all traffic that matches the specified conditions to be protected by crypto.

- Step 2** To configure an IKEv1 transform set that defines how to protect the traffic, enter the following command:

```
crypto ipsec ikev1 transform-set transform-set-name encryption [authentication]
```

For example:

```
hostname(config)# crypto ipsec ikev1 transform-set myset1 esp-des esp-sha-hmac
hostname(config)# crypto ipsec ikev1 transform-set myset2 esp-3des esp-sha-hmac
hostname(config)# crypto ipsec ikev1 transform-set aes_set esp-md5-hmac esp-aes-256
```

In this example, myset1 and myset2 and aes\_set are the names of the transform sets.

To configure an IKEv2 proposal that also defines how to protect the traffic, enter the **crypto ipsec ikev2 ipsec-proposal** command to create the proposal and enter the ipsec proposal configuration mode where you can specify multiple encryption and integrity types for the proposal:

```
crypto ipsec ikev2 ipsec-proposal [proposal tag]
```

For example:

```
hostname(config)# crypto ipsec ikev2 ipsec-proposal secure
```

In this example, secure is the name of the proposal. Enter a protocol and encryption types:

```
hostname(config-ipsec-proposal)# protocol esp encryption 3des aes des
```

- Step 3** To create a crypto map, perform the following steps:

- a. Assign an access list to a crypto map:

```
crypto map map-name seq-num match address access-list-name
```

In the following example, mymap is the name of the crypto map set. The map set sequence number 10, which is used to rank multiple entries within one crypto map set. The lower the sequence number, the higher the priority.

```
crypto map mymap 10 match address 101
```

In this example, the access list named 101 is assigned to crypto map mymap.

- b. Specify the peer to which the IPsec-protected traffic can be forwarded:

```
crypto map map-name seq-num set peer ip-address
```

For example:

```
crypto map mymap 10 set peer 192.168.1.100
```

The ASA sets up an SA with the peer assigned the IP address 192.168.1.100. Specify multiple peers by repeating this command.

- c. Specify which IKEv1 transform sets or IKEv2 proposals are allowed for this crypto map. List multiple transform sets or proposals in order of priority (highest priority first). You can specify up to 11 transform sets or proposals in a crypto map using either of these two commands:

```
crypto map map-name seq-num set ikev1 transform-set transform-set-name1
[transform-set-name2, ...transform-set-name11]
```

```
crypto map map-name seq-num set ikev2 ipsec-proposal proposal-name1
[proposal-name2, ... proposal-name11]
```

For example (for IKEv1):

```
crypto map mymap 10 set ikev1 transform-set myset1 myset2
```

In this example, when traffic matches access list 101, the SA can use either myset1 (first priority) or myset2 (second priority) depending on which transform set matches the transform set of the peer.

- d. (Optional) Specify an SA lifetime for the crypto map if you want to override the global lifetime.

```
crypto map map-name seq-num set security-association lifetime {seconds seconds |
kilobytes kilobytes}
```

For example:

```
crypto map mymap 10 set security-association lifetime seconds 2700
```

This example shortens the timed lifetime for the crypto map mymap 10 to 2700 seconds (45 minutes). The traffic volume lifetime is not changed.

- e. (Optional) Specify that IPsec require perfect forward secrecy when requesting new SA for this crypto map, or require PFS in requests received from the peer:

```
crypto map map-name seq-num set pfs [group1 | group2 | group5]
```

For example:

```
crypto map mymap 10 set pfs group2
```

This example requires PFS when negotiating a new SA for the crypto map mymap 10. The ASA uses the 1024-bit Diffie-Hellman prime modulus group in the new SA.

- Step 4** Apply a crypto map set to an interface for evaluating IPsec traffic:

```
crypto map map-name interface interface-name
```

For example:

```
crypto map mymap interface outside
```

In this example, the ASA evaluates the traffic going through the outside interface against the crypto map mymap to determine whether it needs to be protected.

## Using Dynamic Crypto Maps

A dynamic crypto map is a crypto map without all of the parameters configured. It acts as a policy template where the missing parameters are later dynamically learned, as the result of an IPsec negotiation, to match the peer requirements. The ASA applies a dynamic crypto map to let a peer negotiate a tunnel if its IP address is not already identified in a static crypto map. This occurs with the following types of peers:

- Peers with dynamically assigned public IP addresses.

Both LAN-to-LAN and remote access peers can use DHCP to obtain a public IP address. The ASA uses this address only to initiate the tunnel.

- Peers with dynamically assigned private IP addresses.

Peers requesting remote access tunnels typically have private IP addresses assigned by the headend. Generally, LAN-to-LAN tunnels have a predetermined set of private networks that are used to configure static maps and therefore used to establish IPsec SAs.

As an administrator configuring static crypto maps, you might not know the IP addresses that are dynamically assigned (via DHCP or some other method), and you might not know the private IP addresses of other clients, regardless of how they were assigned. VPN clients typically do not have static IP addresses; they require a dynamic crypto map to allow IPsec negotiation to occur. For example, the headend assigns the IP address to a Cisco VPN client during IKE negotiation, which the client then uses to negotiate IPsec SAs.

**Note**

A dynamic crypto map requires only the **transform-set** parameter.

Dynamic crypto maps can ease IPsec configuration, and we recommend them for use in networks where the peers are not always predetermined. Use dynamic crypto maps for Cisco VPN clients (such as mobile users) and routers that obtain dynamically assigned IP addresses.

**Tip**

Use care when using the **any** keyword in **permit** entries in dynamic crypto maps. If the traffic covered by such a **permit** entry could include multicast or broadcast traffic, insert **deny** entries for the appropriate address range into the access list. Remember to insert **deny** entries for network and subnet broadcast traffic, and for any other traffic that IPsec should not protect.

Dynamic crypto maps work only to negotiate SAs with remote peers that initiate the connection. The ASA cannot use dynamic crypto maps to initiate connections to a remote peer. With a dynamic crypto map, if outbound traffic matches a permit entry in an access list and the corresponding SA does not yet exist, the ASA drops the traffic.

A crypto map set may include a dynamic crypto map. Dynamic crypto map sets should be the lowest priority crypto maps in the crypto map set (that is, they should have the highest sequence numbers) so that the ASA evaluates other crypto maps first. It examines the dynamic crypto map set only when the other (static) map entries do not match.

Similar to static crypto map sets, a dynamic crypto map set consists of all of the dynamic crypto maps with the same dynamic-map-name. The dynamic-seq-num differentiates the dynamic crypto maps in a set. If you configure a dynamic crypto map, insert a permit ACL to identify the data flow of the IPsec peer for the crypto access list. Otherwise the ASA accepts any data flow identity the peer proposes.

**Caution**

Do not assign module default routes for traffic to be tunneled to a ASA interface configured with a dynamic crypto map set. To identify the traffic that should be tunneled, add the ACLs to the dynamic crypto map. Use care to identify the proper address pools when configuring the ACLs associated with remote access tunnels. Use Reverse Route Injection to install routes only after the tunnel is up.

The procedure for using a dynamic crypto map entry is the same as the basic configuration described in “[Creating a Basic IPsec Configuration](#),” except that instead of creating a static crypto map, you create a dynamic crypto map entry. You can also combine static and dynamic map entries within a single crypto map set.

Create a crypto dynamic map entry as follows:

- 
- Step 1** (Optional) Assign an access list to a dynamic crypto map:

```
crypto dynamic-map dynamic-map-name dynamic-seq-num match address access-list-name
```

This determines which traffic should be protected and not protected.

For example:

```
crypto dynamic-map dyn1 10 match address 101
```

In this example, access list 101 is assigned to dynamic crypto map dyn1. The map sequence number is 10.

- Step 2** Specify which IKEv1 transform sets or IKEv2 proposals are allowed for this dynamic crypto map. List multiple transform sets or proposals in order of priority (highest priority first) using the command for IKEv1 transform sets or IKEv2 proposals:

```
crypto dynamic-map dynamic-map-name dynamic-seq-num set ikev1 transform-set
transform-set-name1, [transform-set-name2, ...transform-set-name9]
```

```
crypto dynamic-map dynamic-map-name dynamic-seq-num set ikev2 ipsec-proposal
proposal-name1
[proposal-name2, ... proposal-name11]
```

For example (for IKEv1):

```
crypto dynamic-map dyn 10 set ikev1 transform-set myset1 myset2
```

In this example, when traffic matches access list 101, the SA can use either myset1 (first priority) or myset2 (second priority), depending on which transform set matches the transform sets of the peer.

- Step 3** (Optional) Specify the SA lifetime for the crypto dynamic map entry if you want to override the global lifetime value:

```
crypto dynamic-map dynamic-map-name dynamic-seq-num set security-association lifetime
{seconds seconds | kilobytes kilobytes}
```

For example:

```
crypto dynamic-map dyn1 10 set security-association lifetime seconds 2700
```

This example shortens the timed lifetime for dynamic crypto map dyn1 10 to 2700 seconds (45 minutes). The time volume lifetime is not changed.

- Step 4** (Optional) Specify that IPsec ask for PFS when requesting new SAs for this dynamic crypto map, or should demand PFS in requests received from the peer:

```
crypto dynamic-map dynamic-map-name dynamic-seq-num set pfs [group1 | group2 | group5 |
group7]
```

For example:

```
crypto dynamic-map dyn1 10 set pfs group5
```

- Step 5** Add the dynamic crypto map set into a static crypto map set.

Be sure to set the crypto maps referencing dynamic maps to be the lowest priority entries (highest sequence numbers) in a crypto map set.

```
crypto map map-name seq-num ipsec-isakmp dynamic dynamic-map-name
```

For example:

```
crypto map mymap 200 ipsec-isakmp dynamic dyn1
```

## Providing Site-to-Site Redundancy

You can define multiple IKEv1 peers by using crypto maps to provide redundancy. This configuration is useful for site-to-site VPNs. This feature is not supported with IKEv2.

If one peer fails, the ASA establishes a tunnel to the next peer associated with the crypto map. It sends data to the peer that it has successfully negotiated with, and that peer becomes the active peer. The active peer is the peer that the ASA keeps trying first for follow-on negotiations until a negotiation fails. At that point the ASA goes on to the next peer. The ASA cycles back to the first peer when all peers associated with the crypto map have failed.

## Viewing an IPsec Configuration

Table 64-6 lists commands that you can enter to view information about your IPsec configuration.

**Table 64-6** Commands to View IPsec Configuration Information

| Command                                             | Purpose                                                                                                  |
|-----------------------------------------------------|----------------------------------------------------------------------------------------------------------|
| <code>show running-configuration crypto</code>      | Displays the entire crypto configuration, including IPsec, crypto maps, dynamic crypto maps, and ISAKMP. |
| <code>show running-config crypto ipsec</code>       | Displays the complete IPsec configuration.                                                               |
| <code>show running-config crypto isakmp</code>      | Displays the complete ISAKMP configuration.                                                              |
| <code>show running-config crypto map</code>         | Displays the complete crypto map configuration.                                                          |
| <code>show running-config crypto dynamic-map</code> | Displays the dynamic crypto map configuration.                                                           |
| <code>show all crypto map</code>                    | Displays all of the configuration parameters, including those with default values.                       |

## Clearing Security Associations

Certain configuration changes take effect only during the negotiation of subsequent SAs. If you want the new settings to take effect immediately, clear the existing SAs to reestablish them with the changed configuration. If the ASA is actively processing IPsec traffic, clear only the portion of the SA database that the configuration changes affect. Reserve clearing the full SA database for large-scale changes, or when the ASA is processing a small amount of IPsec traffic.

Table 64-7 lists commands you can enter to clear and reinitialize IPsec SAs.

**Table 64-7** Commands to Clear and Reinitialize IPsec SAs

| Command                                           | Purpose                                                                                                |
|---------------------------------------------------|--------------------------------------------------------------------------------------------------------|
| <code>clear configure crypto</code>               | Removes an entire crypto configuration, including IPsec, crypto maps, dynamic crypto maps, and ISAKMP. |
| <code>clear configure crypto ca trustpoint</code> | Removes all trustpoints.                                                                               |
| <code>clear configure crypto dynamic-map</code>   | Removes all dynamic crypto maps. Includes keywords that let you remove specific dynamic crypto maps.   |

**Table 64-7** *Commands to Clear and Reinitialize IPsec SAs (continued)*

| Command                                     | Purpose                                                                              |
|---------------------------------------------|--------------------------------------------------------------------------------------|
| <b>clear configure crypto map</b>           | Removes all crypto maps. Includes keywords that let you remove specific crypto maps. |
| <b>clear configure crypto isakmp</b>        | Removes the entire ISAKMP configuration.                                             |
| <b>clear configure crypto isakmp policy</b> | Removes all ISAKMP policies or a specific policy.                                    |
| <b>clear crypto isakmp sa</b>               | Removes the entire ISAKMP SA database.                                               |

## Clearing Crypto Map Configurations

The **clear configure crypto** command includes arguments that let you remove elements of the crypto configuration, including IPsec, crypto maps, dynamic crypto maps, CA trustpoints, all certificates, certificate map configurations, and ISAKMP.

Be aware that if you enter the **clear configure crypto** command without arguments, you remove the entire crypto configuration, including all certificates.


For more information, see the **clear configure crypto** command in the command reference.

## Supporting the Nokia VPN Client

The ASA supports connections from Nokia VPN clients on Nokia 92xx Communicator series phones using the Challenge/Response for Authenticated Cryptographic Keys (CRACK) protocol. CRACK is ideal for mobile IPsec-enabled clients that use legacy authentication techniques instead of digital certificates. It provides mutual authentication when the client uses a legacy-based secret-key authentication technique such as RADIUS and the gateway uses public-key authentication.

The Nokia back-end services must be in place to support both Nokia clients and the CRACK protocol. This requirement includes the Nokia Security Services Manager (NSSM) and Nokia databases as shown in [Figure 64-5](#).

Figure 64-5 Nokia 92xx Communicator Service Requirement

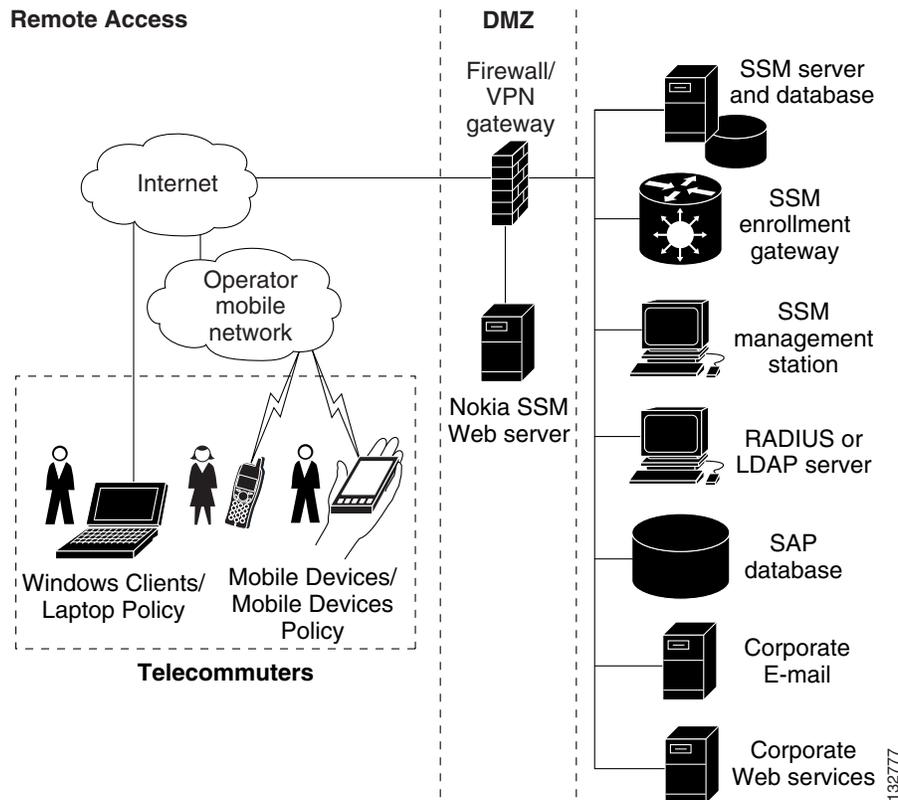

To support the Nokia VPN client, perform the following step on the ASA:

- Enable CRACK authentication using the **crypto isakmp policy priority authentication** command with the **crack** keyword in global configuration mode. For example:

```
hostname(config)# crypto isakmp policy 2
hostname(config-isakmp-policy)# authentication crack
```

If you are using digital certificates for client authentication, perform the following additional steps:

- Step 1** Configure the trustpoint and remove the requirement for a fully qualified domain name. The trustpoint might be NSSM or some other CA. In this example, the trustpoint is named CompanyVPNCA:

```
hostname(config)# crypto ca trustpoint CompanyVPNCA
hostname(config-ca-trustpoint)# fqdn none
```

- Step 2** To configure the identity of the ISAKMP peer, perform one of the following steps:

- Use the **crypto isakmp identity** command with the **hostname** keyword. For example:

```
hostname(config)# crypto isakmp identity hostname
```

- Use the **crypto isakmp identity** command with the **auto** keyword to configure the identity to be automatically determined from the connection type. For example:

```
hostname(config)# crypto isakmp identity auto
```



**Note** If you use the **crypto isakmp identity auto** command, you must be sure that the DN attribute order in the client certificate is CN, OU, O, C, St, L.

To learn more about the Nokia services required to support the CRACK protocol on Nokia clients, and to ensure they are installed and configured properly, contact your local Nokia representative.





# CHAPTER 65

## Configuring L2TP over IPsec

---

This chapter describes how to configure L2TP over IPsec/IKEv1 on the ASA. This chapter includes the following topics:

- [Information About L2TP over IPsec/IKEv1, page 65-1](#)
- [Licensing Requirements for L2TP over IPsec, page 65-3](#)
- [Guidelines and Limitations, page 65-7](#)
- [Configuring L2TP over IPsec, page 65-8](#)
- [Feature History for L2TP over IPsec, page 65-18](#)

### Information About L2TP over IPsec/IKEv1

Layer 2 Tunneling Protocol (L2TP) is a VPN tunneling protocol that allows remote clients to use the public IP network to securely communicate with private corporate network servers. L2TP uses PPP over UDP (port 1701) to tunnel the data.

L2TP protocol is based on the client/server model. The function is divided between the L2TP Network Server (LNS), and the L2TP Access Concentrator (LAC). The LNS typically runs on a network gateway such as a router, while the LAC can be a dial-up Network Access Server (NAS) or an endpoint device with a bundled L2TP client such as Microsoft Windows, Apple iPhone, or Android.

The primary benefit of configuring L2TP with IPsec/IKEv1 in a remote access scenario is that remote users can access a VPN over a public IP network without a gateway or a dedicated line, which enables remote access from virtually anyplace with POTS. An additional benefit is that no additional client software, such as Cisco VPN client software, is required.



**Note**

---

L2TP over IPsec supports only IKEv1. IKEv2 is not supported.

---

The configuration of L2TP with IPsec/IKEv1 supports certificates using the preshared keys or RSA signature methods, and the use of dynamic (as opposed to static) crypto maps. This summary of tasks assumes completion of IKEv1, as well as pre-shared keys or RSA signature configuration. See [Chapter 41, “Configuring Digital Certificates,”](#) for the steps to configure preshared keys, RSA, and dynamic crypto maps.



**Note**

---

L2TP with IPsec on the ASA allows the LNS to interoperate with native VPN clients integrated in such operating systems as Windows, MAC OS X, Android, and Cisco IOS. Only L2TP with IPsec is supported, native L2TP itself is not supported on ASA.

---

The minimum IPsec security association lifetime supported by the Windows client is 300 seconds. If the lifetime on the ASA is set to less than 300 seconds, the Windows client ignores it and replaces it with a 300 second lifetime.

## IPsec Transport and Tunnel Modes


By default, the ASA uses IPsec tunnel mode—the entire original IP datagram is encrypted, and it becomes the payload in a new IP packet. This mode allows a network device, such as a router, to act as an IPsec proxy. That is, the router performs encryption on behalf of the hosts. The source router encrypts packets and forwards them along the IPsec tunnel. The destination router decrypts the original IP datagram and forwards it on to the destination system. The major advantage of tunnel mode is that the end systems do not need to be modified to receive the benefits of IPsec. Tunnel mode also protects against traffic analysis; with tunnel mode, an attacker can only determine the tunnel endpoints and not the true source and destination of the tunneled packets, even if they are the same as the tunnel endpoints.

However, the Windows L2TP/IPsec client uses IPsec transport mode—only the IP payload is encrypted, and the original IP headers are left intact. This mode has the advantages of adding only a few bytes to each packet and allowing devices on the public network to see the final source and destination of the packet. [Figure 65-1](#) illustrates the differences between IPsec tunnel and transport modes.

In order for Windows L2TP and IPsec clients to connect to the ASA, you must configure IPsec transport mode for a transform set using the **crypto ipsec transform-set trans\_name mode transport** command. This command is used in the configuration procedure.

With this transport capability, you can enable special processing (for example, QoS) on the intermediate network based on the information in the IP header. However, the Layer 4 header is encrypted, which limits the examination of the packet. Unfortunately, if the IP header is transmitted in clear text, transport mode allows an attacker to perform some traffic analysis.

**Figure 65-1** IPsec in Tunnel and Transport Modes

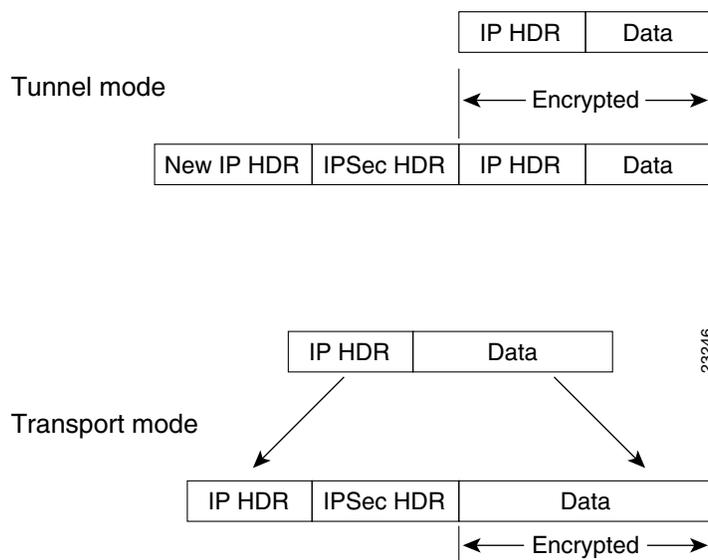

# Licensing Requirements for L2TP over IPsec

The following table shows the licensing requirements for this feature:



**Note**

This feature is not available on No Payload Encryption models.

| Model    | License Requirement <sup>1</sup>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|----------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ASA 5505 | <ul style="list-style-type: none"> <li>• IPsec remote access VPN using IKEv2 (use one of the following):               <ul style="list-style-type: none"> <li>– AnyConnect Premium license:<br/>Base license and Security Plus license: 2 sessions.<br/><i>Optional permanent or time-based licenses: 10 or 25 sessions.</i><br/><i>Shared licenses are not supported.</i><sup>2</sup></li> <li>– AnyConnect Essentials license<sup>3</sup>: 25 sessions.</li> </ul> </li> <li>• IPsec remote access VPN using IKEv1 and IPsec site-to-site VPN using IKEv1 or IKEv2:               <ul style="list-style-type: none"> <li>– Base license: 10 sessions.</li> <li>– Security Plus license: 25 sessions.</li> </ul> </li> </ul>                                      |
| ASA 5510 | <ul style="list-style-type: none"> <li>• IPsec remote access VPN using IKEv2 (use one of the following):               <ul style="list-style-type: none"> <li>– AnyConnect Premium license:<br/>Base and Security Plus license: 2 sessions.<br/><i>Optional permanent or time-based licenses: 10, 25, 50, 100, or 250 sessions.</i><br/><i>Optional Shared licenses<sup>2</sup>: Participant or Server. For the Server license, 500-50,000 in increments of 500 and 50,000-545,000 in increments of 1000.</i></li> <li>– AnyConnect Essentials license<sup>3</sup>: 250 sessions.</li> </ul> </li> <li>• IPsec remote access VPN using IKEv1 and IPsec site-to-site VPN using IKEv1 or IKEv2:<br/>Base license and Security Plus license: 250 sessions.</li> </ul> |
| ASA 5520 | <ul style="list-style-type: none"> <li>• IPsec remote access VPN using IKEv2 (use one of the following):               <ul style="list-style-type: none"> <li>– AnyConnect Premium license:<br/>Base license: 2 sessions.<br/><i>Optional permanent or time-based licenses: 10, 25, 50, 100, 250, 500, or 750 sessions.</i><br/><i>Optional Shared licenses<sup>2</sup>: Participant or Server. For the Server license, 500-50,000 in increments of 500 and 50,000-545,000 in increments of 1000.</i></li> <li>– AnyConnect Essentials license<sup>3</sup>: 750 sessions.</li> </ul> </li> <li>• IPsec remote access VPN using IKEv1 and IPsec site-to-site VPN using IKEv1 or IKEv2:<br/>Base license: 750 sessions.</li> </ul>                                   |

| Model    | License Requirement <sup>1</sup>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ASA 5540 | <ul style="list-style-type: none"> <li>• IPsec remote access VPN using IKEv2 (use one of the following):               <ul style="list-style-type: none"> <li>– AnyConnect Premium license:<br/>Base license: 2 sessions.<br/><i>Optional permanent or time-based licenses: 10, 25, 50, 100, 250, 500, 750, 1000, or 2500 sessions.</i></li> <li>– AnyConnect Essentials license<sup>3</sup>: 2500 sessions.</li> </ul> </li> <li>• IPsec remote access VPN using IKEv1 and IPsec site-to-site VPN using IKEv1 or IKEv2:<br/>Base license: 2500 sessions.</li> </ul>                |
| ASA 5550 | <ul style="list-style-type: none"> <li>• IPsec remote access VPN using IKEv2 (use one of the following):               <ul style="list-style-type: none"> <li>– AnyConnect Premium license:<br/>Base license: 2 sessions.<br/><i>Optional permanent or time-based licenses: 10, 25, 50, 100, 250, 500, 750, 1000, 2500, or 5000 sessions.</i></li> <li>– AnyConnect Essentials license<sup>3</sup>: 5000 sessions.</li> </ul> </li> <li>• IPsec remote access VPN using IKEv1 and IPsec site-to-site VPN using IKEv1 or IKEv2:<br/>Base license: 5000 sessions.</li> </ul>          |
| ASA 5580 | <ul style="list-style-type: none"> <li>• IPsec remote access VPN using IKEv2 (use one of the following):               <ul style="list-style-type: none"> <li>– AnyConnect Premium license:<br/>Base license: 2 sessions.<br/><i>Optional permanent or time-based licenses: 10, 25, 50, 100, 250, 500, 750, 1000, 2500, 5000, or 10000 sessions.</i></li> <li>– AnyConnect Essentials license<sup>3</sup>: 10000 sessions.</li> </ul> </li> <li>• IPsec remote access VPN using IKEv1 and IPsec site-to-site VPN using IKEv1 or IKEv2:<br/>Base license: 10000 sessions.</li> </ul> |

| Model      | License Requirement <sup>1</sup>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ASA 5512-X | <ul style="list-style-type: none"> <li>• IPsec remote access VPN using IKEv2 (use one of the following):               <ul style="list-style-type: none"> <li>– AnyConnect Premium license:<br/>Base license: 2 sessions.<br/><i>Optional permanent or time-based licenses: 10, 25, 50, 100, or 250 sessions.</i></li> <li><i>Optional Shared licenses<sup>2</sup>: Participant or Server. For the Server license, 500-50,000 in increments of 500 and 50,000-545,000 in increments of 1000.</i></li> <li>– AnyConnect Essentials license<sup>3</sup>: 250 sessions.</li> </ul> </li> <li>• IPsec remote access VPN using IKEv1 and IPsec site-to-site VPN using IKEv1 or IKEv2:<br/>Base license: 250 sessions.</li> </ul>                         |
| ASA 5515-X | <ul style="list-style-type: none"> <li>• IPsec remote access VPN using IKEv2 (use one of the following):               <ul style="list-style-type: none"> <li>– AnyConnect Premium license:<br/>Base license: 2 sessions.<br/><i>Optional permanent or time-based licenses: 10, 25, 50, 100, or 250 sessions.</i></li> <li><i>Optional Shared licenses<sup>2</sup>: Participant or Server. For the Server license, 500-50,000 in increments of 500 and 50,000-545,000 in increments of 1000.</i></li> <li>– AnyConnect Essentials license<sup>3</sup>: 250 sessions.</li> </ul> </li> <li>• IPsec remote access VPN using IKEv1 and IPsec site-to-site VPN using IKEv1 or IKEv2:<br/>Base license: 250 sessions.</li> </ul>                         |
| ASA 5525-X | <ul style="list-style-type: none"> <li>• IPsec remote access VPN using IKEv2 (use one of the following):               <ul style="list-style-type: none"> <li>– AnyConnect Premium license:<br/>Base license: 2 sessions.<br/><i>Optional permanent or time-based licenses: 10, 25, 50, 100, 250, 500, or 750 sessions.</i></li> <li><i>Optional Shared licenses<sup>2</sup>: Participant or Server. For the Server license, 500-50,000 in increments of 500 and 50,000-545,000 in increments of 1000.</i></li> <li>– AnyConnect Essentials license<sup>3</sup>: 750 sessions.</li> </ul> </li> <li>• IPsec remote access VPN using IKEv1 and IPsec site-to-site VPN using IKEv1 or IKEv2:<br/>Base license: 750 sessions.</li> </ul>               |
| ASA 5545-X | <ul style="list-style-type: none"> <li>• IPsec remote access VPN using IKEv2 (use one of the following):               <ul style="list-style-type: none"> <li>– AnyConnect Premium license:<br/>Base license: 2 sessions.<br/><i>Optional permanent or time-based licenses: 10, 25, 50, 100, 250, 500, 750, 1000, or 2500 sessions.</i></li> <li><i>Optional Shared licenses<sup>2</sup>: Participant or Server. For the Server license, 500-50,000 in increments of 500 and 50,000-545,000 in increments of 1000.</i></li> <li>– AnyConnect Essentials license<sup>3</sup>: 2500 sessions.</li> </ul> </li> <li>• IPsec remote access VPN using IKEv1 and IPsec site-to-site VPN using IKEv1 or IKEv2:<br/>Base license: 2500 sessions.</li> </ul> |

| Model                                | License Requirement <sup>1</sup>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|--------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ASA 5555-X                           | <ul style="list-style-type: none"> <li>• IPsec remote access VPN using IKEv2 (use one of the following):               <ul style="list-style-type: none"> <li>– AnyConnect Premium license:<br/>Base license: 2 sessions.<br/><i>Optional permanent or time-based licenses: 10, 25, 50, 100, 250, 500, 750, 1000, 2500, or 5000 sessions.</i></li> <li>– AnyConnect Essentials license<sup>3</sup>: 5000 sessions.</li> </ul> </li> <li>• IPsec remote access VPN using IKEv1 and IPsec site-to-site VPN using IKEv1 or IKEv2:<br/>Base license: 5000 sessions.</li> </ul>          |
| ASA 5585-X with SSP-10               | <ul style="list-style-type: none"> <li>• IPsec remote access VPN using IKEv2 (use one of the following):               <ul style="list-style-type: none"> <li>– AnyConnect Premium license:<br/>Base license: 2 sessions.<br/><i>Optional permanent or time-based licenses: 10, 25, 50, 100, 250, 500, 750, 1000, 2500, or 5000 sessions.</i></li> <li>– AnyConnect Essentials license<sup>3</sup>: 5000 sessions.</li> </ul> </li> <li>• IPsec remote access VPN using IKEv1 and IPsec site-to-site VPN using IKEv1 or IKEv2:<br/>Base license: 5000 sessions.</li> </ul>          |
| ASA 5585-X with SSP-20, -40, and -60 | <ul style="list-style-type: none"> <li>• IPsec remote access VPN using IKEv2 (use one of the following):               <ul style="list-style-type: none"> <li>– AnyConnect Premium license:<br/>Base license: 2 sessions.<br/><i>Optional permanent or time-based licenses: 10, 25, 50, 100, 250, 500, 750, 1000, 2500, 5000, or 10000 sessions.</i></li> <li>– AnyConnect Essentials license<sup>3</sup>: 10000 sessions.</li> </ul> </li> <li>• IPsec remote access VPN using IKEv1 and IPsec site-to-site VPN using IKEv1 or IKEv2:<br/>Base license: 10000 sessions.</li> </ul> |

1. The maximum combined VPN sessions of *all* types cannot exceed the maximum sessions shown in this table. For the ASA 5505, the maximum combined sessions is 10 for the Base license, and 25 for the Security Plus license.
2. A shared license lets the ASA act as a shared license server for multiple client ASAs. The shared license pool is large, but the maximum number of sessions used by each individual ASA cannot exceed the maximum number listed for permanent licenses.

3. The AnyConnect Essentials license enables AnyConnect VPN client access to the ASA. This license does not support browser-based SSL VPN access or Cisco Secure Desktop. For these features, activate an AnyConnect Premium license instead of the AnyConnect Essentials license.

**Note:** With the AnyConnect Essentials license, VPN users can use a Web browser to log in, and download and start (WebLaunch) the AnyConnect client.

The AnyConnect client software offers the same set of client features, whether it is enabled by this license or an AnyConnect Premium SSL VPN Edition license.

The AnyConnect Essentials license cannot be active at the same time as the following licenses on a given ASA: AnyConnect Premium license (all types) or the Advanced Endpoint Assessment license. You can, however, run AnyConnect Essentials and AnyConnect Premium licenses on different ASAs in the same network.

By default, the ASA uses the AnyConnect Essentials license, but you can disable it to use other licenses by using the **no anyconnect-essentials** command.

For a detailed list of the features supported by the AnyConnect Essentials license and AnyConnect Premium license, see *AnyConnect Secure Mobility Client Features, Licenses, and OSs*:

[http://www.cisco.com/en/US/products/ps10884/products\\_feature\\_guides\\_list.html](http://www.cisco.com/en/US/products/ps10884/products_feature_guides_list.html)

## Prerequisites for Configuring L2TP over IPsec

Configuring L2TP over IPsec has the following prerequisites:

- You can configure the default group policy (DfltGrpPolicy) or a user-defined group policy for L2TP/IPsec connections. In either case, the group policy must be configured to use the L2TP/IPsec tunneling protocol. If the L2TP/IPsec tunneling protocol is not configured for your user-defined group policy, configure the DfltGrpPolicy for the L2TP/IPsec tunneling protocol and allow your user-defined group policy to inherit this attribute.
- You need to configure the default connection profile (tunnel group), DefaultRAGroup, if you are performing “pre-shared key” authentication. If you are performing certificate-based authentication, you can use a user-defined connection profile that can be chosen based on certificate identifiers.
- IP connectivity needs to be established between the peers. To test connectivity, try to ping the IP address of the ASA from your endpoint and try to ping the IP address of your endpoint from the ASA.
- Make sure that UDP port 1701 is not blocked anywhere along the path of the connection.
- If a Windows 7 endpoint device authenticates using a certificate that specifies a SHA signature type, the signature type must match that of the ASA, either SHA1 or SHA2.

## Guidelines and Limitations

This section includes the guidelines and limitations for this feature.

### Context Mode Guidelines

Supported in single context mode. Multiple context mode is not supported.

### Firewall Mode Guidelines

Supported only in routed firewall mode. Transparent mode is not supported.

### Failover Guidelines

L2TP over IPsec sessions are not supported by stateful failover.

**IPv6 Guidelines**

There is no native IPv6 tunnel setup support for L2TP over IPsec.

**Authentication Guidelines**

The ASA only supports the PPP authentications PAP and Microsoft CHAP, Versions 1 and 2, on the local database. EAP and CHAP are performed by proxy authentication servers. Therefore, if a remote user belongs to a tunnel group configured with the **authentication eap-proxy** or **authentication chap** commands, and the ASA is configured to use the local database, that user will not be able to connect.

**Supported PPP Authentication Types**

L2TP over IPsec connections on the ASA support only the PPP authentication types shown in [Table 65-1](#).

**Table 65-1 AAA Server Support and PPP Authentication Types**

| AAA Server Type | Supported PPP Authentication Types       |
|-----------------|------------------------------------------|
| LOCAL           | PAP, MSCHAPv1, MSCHAPv2                  |
| RADIUS          | PAP, CHAP, MSCHAPv1, MSCHAPv2, EAP-Proxy |
| TACACS+         | PAP, CHAP, MSCHAPv1                      |
| LDAP            | PAP                                      |
| NT              | PAP                                      |
| Kerberos        | PAP                                      |
| SDI             | SDI                                      |

**Table 65-1 PPP Authentication Type Characteristics**

| Keyword                                | Authentication Type                                     | Characteristics                                                                                                                                                                                             |
|----------------------------------------|---------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>chap</b>                            | CHAP                                                    | In response to the server challenge, the client returns the encrypted [challenge plus password] with a cleartext username. This protocol is more secure than the PAP, but it does not encrypt data.         |
| <b>eap-proxy</b>                       | EAP                                                     | Enables EAP which permits the security appliance to proxy the PPP authentication process to an external RADIUS authentication server.                                                                       |
| <b>ms-chap-v1</b><br><b>ms-chap-v2</b> | Microsoft CHAP, Version 1<br>Microsoft CHAP, Version, 2 | Similar to CHAP but more secure in that the server stores and compares only encrypted passwords rather than cleartext passwords as in CHAP. This protocol also generates a key for data encryption by MPPE. |
| <b>pap</b>                             | PAP                                                     | Passes cleartext username and password during authentication and is not secure.                                                                                                                             |

## Configuring L2TP over IPsec

This section provides the required ASA IKEv1 (ISAKMP) policy settings that allow native VPN clients, integrated with the operating system on an endpoint, to make a VPN connection to the ASA using L2TP over IPsec protocol.

- IKEv1 phase 1—3DES encryption with SHA1 hash method.
- IPsec phase 2—3DES or AES encryption with MD5 or SHA hash method.
- PPP Authentication—PAP, MS-CHAPv1, or MSCHAPv2 (preferred).
- Pre-shared key (only for iPhone).

### Detailed CLI Configuration Steps

|        | Command                                                                                                                                                                                                                                 | Purpose                                                                                                                   |
|--------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------|
| Step 1 | <pre>crypto ipsec transform-set transform_name ESP_Encryption_Type ESP_Authentication_Type</pre> <p><b>Example:</b></p> <pre>hostname(config)# crypto ipsec transform-set my-transform-set esp-des esp-sha-hmac</pre>                   | Creates a transform set with a specific ESP encryption type and authentication type.                                      |
| Step 2 | <pre>crypto ipsec transform-set trans_name mode transport</pre> <p><b>Example:</b></p> <pre>hostname(config)# crypto ipsec transform-set my-transform-set mode transport</pre>                                                          | Instructs IPsec to use transport mode rather than tunnel mode.                                                            |
| Step 3 | <pre>vpn-tunnel-protocol tunneling_protocol</pre> <p><b>Example:</b></p> <pre>hostname(config)# group-policy DfltGrpPolicy attributes hostname(config-group-policy)# vpn-tunnel-protocol l2tp-ipsec</pre>                               | Specifies L2TP/IPsec as the vpn tunneling protocol.                                                                       |
| Step 4 | <pre>dns value [none   IP_primary [IP_secondary]]</pre> <p><b>Example:</b></p> <pre>hostname(config)# group-policy DfltGrpPolicy attributes hostname(config-group-policy)# dns value 209.165.201.1 209.165.201.2</pre>                  | (Optional) Instructs the adaptive security appliance to send DNS server IP addresses to the client for the group policy.  |
| Step 5 | <pre>wins-server value [none   IP_primary [IP_secondary]]</pre> <p><b>Example:</b></p> <pre>hostname(config)# group-policy DfltGrpPolicy attributes hostname (config-group-policy)# wins-server value 209.165.201.3 209.165.201.4</pre> | (Optional) Instructs the adaptive security appliance to send WINS server IP addresses to the client for the group policy. |
| Step 6 | <pre>tunnel-group name type remote-access</pre> <p><b>Example:</b></p> <pre>hostname(config)# tunnel-group sales-tunnel type remote-access</pre>                                                                                        | Creates a connection profile (tunnel group).                                                                              |

|                | <b>Command</b>                                                                                                                                                                                                                                        | <b>Purpose</b>                                                                                                                                                                                                                                                                   |
|----------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Step 7</b>  | <p><b>default-group-policy</b> <i>name</i></p> <p><b>Example:</b><br/> <pre>hostname(config)# tunnel-group DefaultRAGroup general-attributes hostname(config-tunnel-general)# default-group-policy DfltGrpPolicy</pre></p>                            | Links the name of a group policy to the connection profile (tunnel group).                                                                                                                                                                                                       |
| <b>Step 8</b>  | <p><b>ip local pool</b> <i>pool_name starting_address-ending_address mask subnet_mask</i></p> <p><b>Example:</b><br/> <pre>hostname(config)# ip local pool sales_addresses 10.4.5.10-10.4.5.20 mask 255.255.255.0</pre></p>                           | (Optional) Creates an IP address pool.                                                                                                                                                                                                                                           |
| <b>Step 9</b>  | <p><b>address-pool</b> <i>pool_name</i></p> <p><b>Example:</b><br/> <pre>hostname(config)# tunnel-group DefaultRAGroup general-attributes hostname(config-tunnel-general)# address-pool sales_addresses</pre></p>                                     | (Optional) Associates the pool of IP addresses with the connection profile (tunnel group).                                                                                                                                                                                       |
| <b>Step 10</b> | <p><b>authentication-server-group</b> <i>server_group</i></p> <p><b>Example:</b><br/> <pre>hostname(config)# tunnel-group DefaultRAGroup general-attributes hostname(config-tunnel-general)# authentication-server-group sales_server LOCAL</pre></p> | Specifies a method to authenticate users attempting L2TP over IPsec connections, for the connection profile (tunnel group). If you are not using the ASA to perform local authentication, and you want to fallback to local authentication, add LOCAL to the end of the command. |
| <b>Step 11</b> | <p><b>authentication</b> <i>auth_type</i></p> <p><b>Example:</b><br/> <pre>hostname(config)# tunnel-group name ppp-attributes hostname(config-ppp)# authentication ms-chap-v1</pre></p>                                                               | Specifies the PPP authentication protocol for the tunnel group. See <a href="#">Table 65-1</a> for the types of PPP authentication and their characteristics.                                                                                                                    |
| <b>Step 12</b> | <p><b>tunnel-group</b> <i>tunnel group name ipsec-attributes</i></p> <p><b>Example:</b><br/> <pre>hostname(config)# tunnel-group DefaultRAGroup ipsec-attributes hostname(config-tunnel-ipsec)# pre-shared-key cisco123</pre></p>                     | Sets the pre-shared key for your connection profile (tunnel group).                                                                                                                                                                                                              |
| <b>Step 13</b> | <p><b>accounting-server-group</b> <i>aaa_server_group</i></p> <p><b>Example:</b><br/> <pre>hostname(config)# tunnel-group sales_tunnel general-attributes hostname(config-tunnel-general)# accounting-server-group sales_aaa_server</pre></p>         | (Optional) Generates a AAA accounting start and stop record for an L2TP session for the connection profile (tunnel group).                                                                                                                                                       |

|         | Command                                                                                                                                                                                                                               | Purpose                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|---------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Step 14 | <pre>l2tp tunnel hello seconds</pre> <p><b>Example:</b><br/>hostname(config)# l2tp tunnel hello 100 </p>                                                                                                                              | Configures the interval (in seconds) between hello messages. The range is 10 through 300 seconds. The default is 60 seconds.                                                                                                                                                                                                                                                                                                                                                                                     |
| Step 15 | <pre>crypto isakmp nat-traversal seconds</pre> <p><b>Example:</b><br/>hostname(config)# crypto isakmp enable<br/>hostname(config)# crypto isakmp nat-traversal 1500 </p>                                                              | <p>(Optional) Enables NAT traversal so that ESP packets can pass through one or more NAT devices.</p> <p>If you expect multiple L2TP clients behind a NAT device to attempt L2TP over IPsec connections to the adaptive security appliance, you must enable NAT traversal.</p> <p>To enable NAT traversal globally, check that ISAKMP is enabled (you can enable it with the <b>crypto isakmp enable</b> command) in global configuration mode, and then use the <b>crypto isakmp nat-traversal</b> command.</p> |
| Step 16 | <pre>strip-group<br/>strip-realm</pre> <p><b>Example:</b><br/>hostname(config)# tunnel-group DefaultRAGroup general-attributes<br/>hostname(config-tunnel-general)# strip-group<br/>hostname(config-tunnel-general)# strip-realm </p> | (Optional) Configures tunnel group switching. The goal of tunnel group switching is to give users a better chance at establishing a VPN connection when they authenticate using a proxy authentication server. Tunnel group is synonymous with connection profile.                                                                                                                                                                                                                                               |
| Step 17 | <pre>username name password password mschap</pre> <p><b>Example:</b><br/>hostname(config)# username jdoe password j!doe1 mschap </p>                                                                                                  | <p>This example shows creating a user with the username <code>jdoe</code>, the password <code>j!doe1</code>. The <code>mschap</code> option specifies that the password is converted to Unicode and hashed using MD4 after you enter it.</p> <p>This step is needed only if you are using a local user database.</p>                                                                                                                                                                                             |
| Step 18 | <pre>crypto isakmp policy priority</pre> <p><b>Example:</b><br/>hostname(config)# crypto isakmp policy 5 </p>                                                                                                                         | <p>The <code>crypto isakmp policy</code> command creates the IKE Policy for Phase 1 and assigns it a number. There are several different configurable parameters of the IKE policy that you can configure.</p> <p>The <code>isakmp policy</code> is needed so the ASA can complete the IKE negotiation.</p> <p>See the <a href="#">“Creating IKE Policies to Respond to Windows 7 Proposals”</a> section on page 65-12 for configuration examples for Windows 7 native VPN clients.</p>                          |

## Creating IKE Policies to Respond to Windows 7 Proposals

Windows 7 L2TP/IPsec clients send several IKE policy proposals to establish a VPN connection with the ASA. Define one of the following IKE policies to facilitate connections from Windows 7 VPN native clients.

|        | Command                                                                                                                                                    | Purpose                                                                                                                                                                                                           |
|--------|------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Step 1 | <a href="#">Detailed CLI Configuration Steps, page 65-9</a>                                                                                                | Follow the <a href="#">Detailed CLI Configuration Steps</a> procedure through step <a href="#">Step 18</a> . Add the additional steps in this table to configure the IKE policy for Windows 7 native VPN clients. |
| Step 1 | <code>show run crypto isakmp</code><br><br><b>Example:</b><br>hostname(config)# show run crypto isakmp                                                     | Displays the attributes and the number of any existing IKE policies.                                                                                                                                              |
| Step 2 | <code>crypto isakmp policy number</code><br><br><b>Example:</b><br>hostname(config)# crypto isakmp policy <i>number</i><br>hostname(config-isakmp-policy)# | Allows you to configure an IKE policy. The number argument specifies the number of the IKE policy you are configuring. This number was listed in the output of the <code>show run crypto isakmp</code> command.   |
| Step 3 | <code>authentication</code><br><br><b>Example:</b><br>hostname(config-isakmp-policy)# authentication pre-share                                             | Sets the authentication method the ASA uses to establish the identity of each IPsec peer to use preshared keys.                                                                                                   |
| Step 4 | <code>encryption type</code><br><br><b>Example:</b><br>hostname(config-isakmp-policy)# encryption {3des aes aes-256}                                       | Choose a symmetric encryption method that protects data transmitted between two IPsec peers. For Windows 7 choose either <b>3des</b> , <b>aes</b> , for 128-bit AES, or <b>aes-256</b> .                          |
| Step 5 | <code>hash</code><br><br><b>Example:</b><br>hostname(config-isakmp-policy)# hash sha                                                                       | Choose the hash algorithm that ensures data integrity. For Windows 7, specify <b>sha</b> for the SHA-1 algorithm.                                                                                                 |
| Step 6 | <code>group</code><br><br><b>Example:</b><br>hostname(config-isakmp-policy)# group 5                                                                       | Choose the Diffie-Hellman group identifier. For Windows 7, specify 5 for the 1536-bit Diffie-Hellman group.                                                                                                       |
| Step 7 | <code>lifetime</code><br><br><b>Example:</b><br>hostname(config-isakmp-policy)# lifetime 86400                                                             | Specify the SA lifetime in seconds. For Windows 7, specify 86400 seconds to represent 24 hours.                                                                                                                   |

## Detailed CLI Configuration Steps

|        | Command                                                                                                                                                                                                                                 | Purpose                                                                                                                   |
|--------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------|
| Step 1 | <pre>crypto ipsec ike_version transform-set transform_name ESP_Encryption_Type ESP_Authentication_Type</pre> <p><b>Example:</b></p> <pre>crypto ipsec ikev1 transform-set my-transform-set-ikev1 esp-des esp-sha-hmac</pre>             | Creates a transform set with a specific ESP encryption type and authentication type.                                      |
| Step 2 | <pre>crypto ipsec ike_version transform-set trans_name mode transport</pre> <p><b>Example:</b></p> <pre>crypto ipsec ikev1 transform-set my-transform-set-ikev1 mode transport</pre>                                                    | Instructs IPsec to use transport mode rather than tunnel mode.                                                            |
| Step 3 | <pre>vpn-tunnel-protocol tunneling_protocol</pre> <p><b>Example:</b></p> <pre>hostname(config)# group-policy DfltGrpPolicy attributes hostname(config-group-policy)# vpn-tunnel-protocol l2tp-ipsec</pre>                               | Specifies L2TP/IPsec as the vpn tunneling protocol.                                                                       |
| Step 4 | <pre>dns value [none   IP_primary [IP_secondary]]</pre> <p><b>Example:</b></p> <pre>hostname(config)# group-policy DfltGrpPolicy attributes hostname(config-group-policy)# dns value 209.165.201.1 209.165.201.2</pre>                  | (Optional) Instructs the adaptive security appliance to send DNS server IP addresses to the client for the group policy.  |
| Step 5 | <pre>wins-server value [none   IP_primary [IP_secondary]]</pre> <p><b>Example:</b></p> <pre>hostname(config)# group-policy DfltGrpPolicy attributes hostname (config-group-policy)# wins-server value 209.165.201.3 209.165.201.4</pre> | (Optional) Instructs the adaptive security appliance to send WINS server IP addresses to the client for the group policy. |
| Step 6 | <pre>ip local pool pool_name starting_address-ending_address mask subnet_mask</pre> <p><b>Example:</b></p> <pre>hostname(config)# ip local pool sales_addresses 10.4.5.10-10.4.5.20 mask 255.255.255.0</pre>                            | (Optional) Creates an IP address pool.                                                                                    |
| Step 7 | <pre>address-pool pool_name</pre> <p><b>Example:</b></p> <pre>hostname(config)# tunnel-group DefaultRAGroup general-attributes hostname(config-tunnel-general)# address-pool sales_addresses</pre>                                      | (Optional) Associates the pool of IP addresses with the connection profile (tunnel group).                                |

|         | Command                                                                                                                                                                                                                                                              | Purpose                                                                                                                                                                                                                                                                          |
|---------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Step 8  | <p><b>tunnel-group</b> <i>name</i> <b>type</b> <b>remote-access</b></p> <p><b>Example:</b><br/> <pre>hostname(config)# tunnel-group sales-tunnel type remote-access</pre></p>                                                                                        | Creates a connection profile (tunnel group).                                                                                                                                                                                                                                     |
| Step 9  | <p><b>default-group-policy</b> <i>name</i></p> <p><b>Example:</b><br/> <pre>hostname(config)# tunnel-group DefaultRAGroup general-attributes hostname(config-tunnel-general)# default-group-policy DfltGrpPolicy</pre></p>                                           | Links the name of a group policy to the connection profile (tunnel group).                                                                                                                                                                                                       |
| Step 10 | <p><b>authentication-server-group</b> <i>server_group</i> [<i>local</i>]</p> <p><b>Example:</b><br/> <pre>hostname(config)# tunnel-group DefaultRAGroup general-attributes hostname(config-tunnel-general)# authentication-server-group sales_server LOCAL</pre></p> | Specifies a method to authenticate users attempting L2TP over IPsec connections, for the connection profile (tunnel group). If you are not using the ASA to perform local authentication, and you want to fallback to local authentication, add LOCAL to the end of the command. |
| Step 11 | <p><b>authentication</b> <i>auth_type</i></p> <p><b>Example:</b><br/> <pre>hostname(config)# tunnel-group name ppp-attributes hostname(config-ppp)# authentication ms-chap-v1</pre></p>                                                                              | Specifies the PPP authentication protocol for the tunnel group. See <a href="#">Table 65-1</a> for the types of PPP authentication and their characteristics.                                                                                                                    |
| Step 12 | <p><b>tunnel-group</b> <i>tunnel_group_name</i> <b>ipsec-attributes</b></p> <p><b>Example:</b><br/> <pre>hostname(config)# tunnel-group DefaultRAGroup ipsec-attributes hostname(config-tunnel-ipsec)# ikev1 pre-shared-key cisco123</pre></p>                       | Sets the pre-shared key for your connection profile (tunnel group).                                                                                                                                                                                                              |
| Step 13 | <p><b>accounting-server-group</b> <i>aaa_server_group</i></p> <p><b>Example:</b><br/> <pre>hostname(config)# tunnel-group sales_tunnel general-attributes hostname(config-tunnel-general)# accounting-server-group sales_aaa_server</pre></p>                        | (Optional) Generates a AAA accounting start and stop record for an L2TP session for the connection profile (tunnel group).                                                                                                                                                       |
| Step 14 | <p><b>l2tp tunnel hello</b> <i>seconds</i></p> <p><b>Example:</b><br/> <pre>hostname(config)# l2tp tunnel hello 100</pre></p>                                                                                                                                        | Configures the interval (in seconds) between hello messages. The range is 10 through 300 seconds. The default interval is 60 seconds.                                                                                                                                            |

|         | Command                                                                                                                                                                                                                               | Purpose                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|---------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Step 15 | <pre>crypto isakmp nat-traversal seconds</pre> <p><b>Example:</b><br/> <pre>hostname(config)# crypto isakmp enable hostname(config)# crypto isakmp nat-traversal 1500</pre></p>                                                       | <p>(Optional) Enables NAT traversal so that ESP packets can pass through one or more NAT devices.</p> <p>If you expect multiple L2TP clients behind a NAT device to attempt L2TP over IPsec connections to the adaptive security appliance, you must enable NAT traversal.</p> <p>To enable NAT traversal globally, check that ISAKMP is enabled (you can enable it with the <b>crypto isakmp enable</b> command) in global configuration mode, and then use the <b>crypto isakmp nat-traversal</b> command.</p>                                                           |
| Step 16 | <pre>strip-group strip-realm</pre> <p><b>Example:</b><br/> <pre>hostname(config)# tunnel-group DefaultRAGroup general-attributes  hostname(config-tunnel-general)# strip-group hostname(config-tunnel-general)# strip-realm</pre></p> | <p>(Optional) Configures tunnel group switching. The goal of tunnel group switching is to give users a better chance at establishing a VPN connection when they authenticate using a proxy authentication server. Tunnel group is synonymous with connection profile.</p>                                                                                                                                                                                                                                                                                                  |
| Step 17 | <pre>username name password password mschap</pre> <p><b>Example:</b><br/> <pre>asa2(config)# username jdoe password j!doe1 mschap</pre></p>                                                                                           | <p>This example shows creating a user with the username <code>jdoe</code>, the password <code>j!doe1</code>. The <code>mschap</code> option specifies that the password is converted to Unicode and hashed using MD4 after you enter it.</p> <p>This step is needed only if you are using a local user database.</p>                                                                                                                                                                                                                                                       |
| Step 18 | <pre>crypto ikev1 policy priority group Diffie-Hellman Group</pre> <p><b>Example:</b><br/> <pre>hostname(config)# crypto ikev1 policy 5 hostname(config-ikev1-policy)# group 5</pre></p>                                              | <p>The <code>crypto isakmp policy</code> command creates the IKE Policy for Phase 1 and assigns it a number. There are several different configurable parameters of the IKE policy that you can configure.</p> <p>You can also specify a Diffie-Hellman Group for the policy.</p> <p>The <code>isakmp policy</code> is needed so the ASA can complete the IKE negotiation.</p> <p>See the <a href="#">“Creating IKE Policies to Respond to Windows 7 Proposals”</a> section on <a href="#">page 65-16</a> for configuration examples for Windows 7 native VPN clients.</p> |

## Creating IKE Policies to Respond to Windows 7 Proposals

Windows 7 L2TP/IPsec clients send several IKE policy proposals to establish a VPN connection with the ASA. Define one of the following IKE policies to facilitate connections from Windows 7 VPN native clients.

|        | Command                                                                                                                                          | Purpose                                                                                                                                                                                                           |
|--------|--------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Step 1 | <a href="#">Detailed CLI Configuration Steps, page 65-13</a>                                                                                     | Follow the <a href="#">Detailed CLI Configuration Steps</a> procedure through step <a href="#">Step 18</a> . Add the additional steps in this table to configure the IKE policy for Windows 7 native VPN clients. |
| Step 1 | <code>show run crypto ikev1</code><br><br><b>Example:</b><br>hostname(config)# show run crypto ikev1                                             | Displays the attributes and the number of any existing IKE policies.                                                                                                                                              |
| Step 2 | <code>crypto ikev1 policy number</code><br><br><b>Example:</b><br>hostname(config)# crypto ikev1 policy number<br>hostname(config-ikev1-policy)# | Allows you to configure an IKE policy. The number argument specifies the number of the IKE policy you are configuring. This number was listed in the output of the <code>show run crypto ikev1</code> command.    |
| Step 3 | <code>authentication</code><br><br><b>Example:</b><br>hostname(config-ikev1-policy)# authentication pre-share                                    | Sets the authentication method the ASA uses to establish the identity of each IPsec peer to use preshared keys.                                                                                                   |
| Step 4 | <code>encryption type</code><br><br><b>Example:</b><br>hostname(config-ikev1-policy)# encryption {3des aes aes-256}                              | Choose a symmetric encryption method that protects data transmitted between two IPsec peers. For Windows 7 choose either <b>3des</b> , <b>aes</b> , for 128-bit AES, or <b>aes-256</b> .                          |
| Step 5 | <code>hash</code><br><br><b>Example:</b><br>hostname(config-ikev1-policy)# hash sha                                                              | Choose the hash algorithm that ensures data integrity. For Windows 7, specify <b>sha</b> for the SHA-1 algorithm.                                                                                                 |
| Step 6 | <code>group</code><br><br><b>Example:</b><br>hostname(config-ikev1-policy)# group 5                                                              | Choose the Diffie-Hellman group identifier. You can specify 5 for aes, aes-256, or 3des encryption types. You can specify 2 only for 3des encryption types.                                                       |
| Step 7 | <code>lifetime</code><br><br><b>Example:</b><br>hostname(config-ikev1-policy)# lifetime 86400                                                    | Specify the SA lifetime in seconds. For Windows 7, specify 86400 seconds to represent 24 hours.                                                                                                                   |

## Configuration Example for L2TP over IPsec Using ASA 8.2.5

The following example shows configuration file commands that ensure ASA compatibility with a native VPN client on any operating system:

```
ip local pool sales_addresses 209.165.202.129-209.165.202.158
group-policy sales_policy internal
group-policy sales_policy attributes
 wins-server value 209.165.201.3 209.165.201.4
 dns-server value 209.165.201.1 209.165.201.2
 vpn-tunnel-protocol l2tp-ipsec
tunnel-group DefaultRAGroup general-attributes
 default-group-policy sales_policy
 address-pool sales_addresses
tunnel-group DefaultRAGroup ipsec-attributes
 pre-shared-key *
tunnel-group DefaultRAGroup ppp-attributes
 no authentication pap
 authentication chap
 authentication ms-chap-v1
 authentication ms-chap-v2
crypto ipsec transform-set trans esp-3des esp-sha-hmac
crypto ipsec transform-set trans mode transport
crypto dynamic-map dyno 10 set transform-set set trans
crypto map vpn 20 ipsec-isakmp dynamic dyno
crypto map vpn interface outside
crypto isakmp enable outside
crypto isakmp policy 10
 authentication pre-share
 encryption 3des
 hash sha
 group 2
 lifetime 86400
```

## Configuration Example for L2TP over IPsec Using ASA 8.4.1 and later

The following example shows configuration file commands that ensure ASA compatibility with a native VPN client on any operating system:

```
ip local pool sales_addresses 209.165.202.129-209.165.202.158
group-policy sales_policy internal
group-policy sales_policy attributes
 wins-server value 209.165.201.3 209.165.201.4
 dns-server value 209.165.201.1 209.165.201.2
 vpn-tunnel-protocol l2tp-ipsec
tunnel-group DefaultRAGroup general-attributes
 default-group-policy sales_policy
 address-pool sales_addresses
tunnel-group DefaultRAGroup ipsec-attributes
 pre-shared-key *
tunnel-group DefaultRAGroup ppp-attributes
 no authentication pap
 authentication chap
 authentication ms-chap-v1
 authentication ms-chap-v2
crypto ipsec ikev1 transform-set my-transform-set-ikev1 esp-des esp-sha-hmac
crypto ipsec ikev1 transform-set my-transform-set-ikev1 mode transport
crypto dynamic-map dyno 10 set ikev1 transform-set trans
crypto map vpn 20 ipsec-isakmp dynamic dyno
```

```

crypto map vpn interface outside
crypto ikev1 enable outside
crypto ikev1 policy 10
 authentication pre-share
 encryption 3des
 hash sha
 group 2
 lifetime 86400

```

## Feature History for L2TP over IPsec

Table 65-2 lists the release history for this feature.

**Table 65-2** Feature History for L2TP over IPsec

| Feature Name    | Releases | Feature Information                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|-----------------|----------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| L2TP over IPsec | 7.2(1)   | <p>L2TP over IPsec provides the capability to deploy and administer an L2TP VPN solution alongside the IPsec VPN and firewall services in a single platform.</p> <p>The primary benefit of configuring L2TP over IPsec in a remote access scenario is that remote users can access a VPN over a public IP network without a gateway or a dedicated line, which enables remote access from virtually anywhere with POTS. An additional benefit is that the only client requirement for VPN access is the use of Windows with Microsoft Dial-Up Networking (DUN). No additional client software, such as Cisco VPN client software, is required.</p> <p>The following commands were introduced or modified: <b>authentication eap-proxy, authentication ms-chap-v1, authentication ms-chap-v2, authentication pap, l2tp tunnel hello, vpn-tunnel-protocol l2tp-ipsec.</b></p> |



## Setting General VPN Parameters

---

The ASA implementation of virtual private networking includes useful features that do not fit neatly into categories. This chapter describes some of these features. It includes the following sections:

- [Configuring VPNs in Single, Routed Mode, page 66-1](#)
- [Configuring IPsec to Bypass ACLs, page 66-1](#)
- [Permitting Intra-Interface Traffic \(Hairpinning\), page 66-2](#)
- [Setting Maximum Active IPsec or SSL VPN Sessions, page 66-3](#)
- [Using Client Update to Ensure Acceptable IPsec Client Revision Levels, page 66-4](#)
- [Understanding Load Balancing, page 66-6](#)
- [Configuring Load Balancing, page 66-11](#)
- [Configuring VPN Session Limits, page 66-16](#)



**Note**

---

SSL VPN in this chapter refers to the SSL VPN client (AnyConnect 2.x or its predecessor, SVC 1.x), unless clientless (browser-based) SSL VPN is specified.

---

## Configuring VPNs in Single, Routed Mode

VPNs work only in single, routed mode. VPN functionality is unavailable in configurations that include either security contexts, also referred to as multimode firewall, or Active/Active stateful failover.

The exception to this caveat is that you can configure and use one connection for administrative purposes to (not through) the ASA in transparent mode.

## Configuring IPsec to Bypass ACLs

To permit any packets that come from an IPsec tunnel without checking ACLs for the source and destination interfaces, enter the **sysopt connection permit-vpn** command in global configuration mode.

You might want to bypass interface ACLs for IPsec traffic if you use a separate VPN concentrator behind the ASA and want to maximize the ASA performance. Typically, you create an ACL that permits IPsec packets by using the **access-list** command and apply it to the source interface. Using an ACL is more secure because you can specify the exact traffic you want to allow through the ASA.

The syntax is **sysopt connection permit-vpn**. The command has no keywords or arguments.

The following example enables IPsec traffic through the ASA without checking ACLs:

```
hostname(config)# sysopt connection permit-vpn
```

**Note**

Decrypted through-traffic is permitted from the client despite having an access group on the outside interface, which calls a **deny ip any any** access list, while **no sysopt connection permit-vpn** is configured.

Users who want to control access to the protected network via site-to-site or remote access VPN using the **no sysopt permit-vpn** command in conjunction with an access control list (ACL) on the outside interface are not successful.

In this situation, when management-access inside is enabled, the ACL is not applied, and users can still connect to the ASA using SSH. Traffic to hosts on the inside network is blocked correctly by the ACL, but decrypted through-traffic to the inside interface is not blocked.

The **ssh** and **http** commands are of a higher priority than the ACLs. In other words, to deny SSH, Telnet, or ICMP traffic to the box from the VPN session, use **ssh**, **telnet** and **icmp** commands.


## Permitting Intra-Interface Traffic (Hairpinning)

The ASA includes a feature that lets a VPN client send IPsec-protected traffic to another VPN user by allowing such traffic in and out of the same interface. Also called “hairpinning”, this feature can be thought of as VPN spokes (clients) connecting through a VPN hub (ASA).

In another application, hairpinning can redirect incoming VPN traffic back out through the same interface as unencrypted traffic. This would be useful, for example, to a VPN client that does not have split tunneling but needs to both access a VPN and browse the web.

Figure 66-1 shows VPN Client 1 sending secure IPsec traffic to VPN Client 2 while also sending unencrypted traffic to a public web server.

**Figure 66-1** VPN Client Using Intra-Interface Feature for Hairpinning

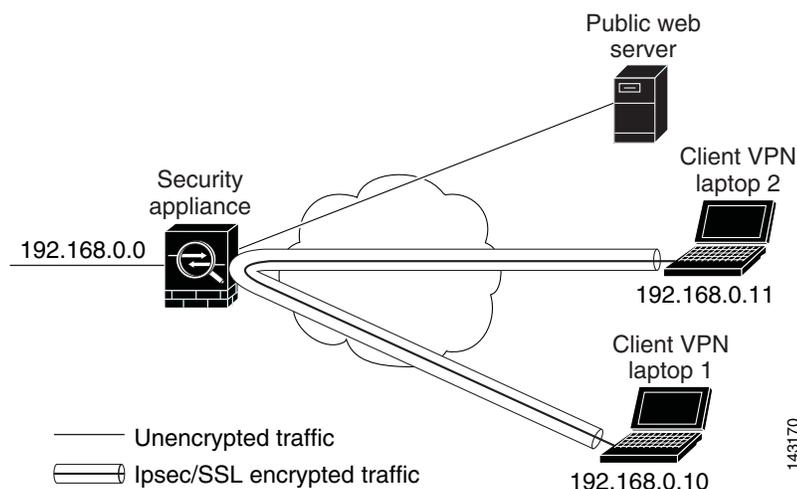

To configure this feature, use the **same-security-traffic** command in global configuration mode with its **intra-interface** argument.

The command syntax is **same-security-traffic permit {inter-interface | intra-interface}**.

The following example shows how to enable intra-interface traffic:

```
hostname(config)# same-security-traffic permit intra-interface
hostname(config)#
```



#### Note

You use the **same-security-traffic** command, but with the **inter-interface** argument, to permit communication between interfaces that have the same security level. This feature is not specific to IPsec connections. For more information, see the “Configuring Interface Parameters” chapter of this guide.

To use hairpinning, you must apply the proper NAT rules to the ASA interface, as discussed in the following section.

## NAT Considerations for Intra-Interface Traffic

For the ASA to send unencrypted traffic back out through the interface, you must enable NAT for the interface so that publicly routable addresses replace your private IP addresses (unless you already use public IP addresses in your local IP address pool). The following example applies an interface PAT rule to traffic sourced from the client IP pool:

```
hostname(config)# ip local pool clientpool 192.168.0.10-192.168.0.100
hostname(config)# object network vpn_nat
hostname(config-network-object)# subnet 192.168.0.0 255.255.255.0
hostname(config-network-object)# nat (outside,outside) interface
```

When the ASA sends encrypted VPN traffic back out this same interface, however, NAT is optional. The VPN-to-VPN hairpinning works with or without NAT. To apply NAT to all outgoing traffic, implement only the commands above. To exempt the VPN-to-VPN traffic from NAT, add commands (to the example above) that implement NAT exemption for VPN-to-VPN traffic, such as:

```
hostname(config)# nat (outside,outside) source static vpn_nat vpn_nat destination static
vpn_nat vpn_nat
```

For more information on NAT rules, see the “Applying NAT” chapter of this guide.

## Setting Maximum Active IPsec or SSL VPN Sessions

To limit VPN sessions to a lower value than the ASA allows, enter the **vpn-sessiondb** command in global configuration mode:

```
vpn-sessiondb {max-anyconnect-premium-or-essentials-limit <number> |
max-other-vpn-limit <number>}
```

The **max-anyconnect-premium-or-essentials-limit** keyword specifies the maximum number of AnyConnect sessions, from 1 to the maximum sessions allowed by the license.

The **max-other-vpn-limit** keyword specifies the maximum number of VPN sessions other than AnyConnect client sessions, from 1 to the maximum sessions allowed by the license. This includes the Cisco VPN client (IPsec IKEv1), Lan-to-Lan VPN, and clientless SSL VPN sessions.

This limit affects the calculated load percentage for VPN Load Balancing.

The following example shows how to set a maximum Anyconnect VPN session limit of 450:

```
hostname(config)# vpn-sessiondb max-anyconnect-premium-or-essentials-limit 450
hostname(config)#
```

## Using Client Update to Ensure Acceptable IPsec Client Revision Levels



### Note

The information in this section applies to IPsec connections only.

The client update feature lets administrators at a central location automatically notify VPN client users that it is time to update the VPN client software and the VPN 3002 hardware client image.

Remote users might be using outdated VPN software or hardware client versions. You can use the **client-update** command at any time to enable updating client revisions; specify the types and revision numbers of clients to which the update applies; provide a URL or IP address from which to get the update; and, in the case of Windows clients, optionally notify users that they should update their VPN client version. For Windows clients, you can provide a mechanism for users to accomplish that update. For VPN 3002 hardware client users, the update occurs automatically, with no notification. This command applies only to the IPsec remote-access tunnel-group type.

To perform a client update, enter the **client-update** command in either general configuration mode or tunnel-group ipsec-attributes configuration mode. If the client is already running a software version on the list of revision numbers, it does not need to update its software. If the client is not running a software version on the list, it should update. The following procedure explains how to perform a client update:

**Step 1** In global configuration mode, enable client update by entering this command:

```
hostname(config)# client-update enable
hostname(config)#
```

**Step 2** In global configuration mode, specify the parameters for the client update that you want to apply to all clients of a particular type. That is, specify the type of client, the URL or IP address from which to get the updated image, and the acceptable revision number or numbers for that client. You can specify up to four revision numbers, separated by commas.

If the user's client revision number matches one of the specified revision numbers, there is no need to update the client. This command specifies the client update values for all clients of the specified type across the entire ASA.

Use this syntax:

```
hostname(config)# client-update type type url url-string rev-nums rev-numbers
hostname(config)#
```

The available client types are **win9X** (includes Windows 95, Windows 98 and Windows ME platforms), **winnt** (includes Windows NT 4.0, Windows 2000 and Windows XP platforms), **windows** (includes all Windows based platforms), and **vpn3002** (VPN 3002 hardware client).

If the client is already running a software version on the list of revision numbers, it does not need to update its software. If the client is not running a software version on the list, it should update. You can specify up to three of these client update entries. The keyword **windows** covers all of the allowable Windows platforms. If you specify **windows**, do not specify the individual Windows client types.

**Note**

For all Windows clients, you must use the protocol `http://` or `https://` as the prefix for the URL. For the VPN 3002 hardware client, you must specify protocol `tftp://` instead.

The following example configures client update parameters for the remote access tunnel group. It designates the revision number 4.6.1 and the URL for retrieving the update, which is `https://support/updates`.

```
hostname(config)# client-update type windows url https://support/updates/ rev-nums 4.6.1
hostname(config)#
```

Alternatively, you can configure client update just for individual tunnel groups, rather than for all clients of a particular type. (See Step 3.)

VPN 3002 clients update without user intervention and users receive no notification message. The following example applies only to VPN 3002 hardware clients. Entered in tunnel-group ipsec-attributes configuration mode the command it configures client update parameters for the IPsec remote access tunnel group **salesgrp**. This example designates the revision number, 4.7 and uses the TFTP protocol for retrieving the updated software from the site with the IP address 192.168.1.1:

```
hostname(config)# tunnel-group salesgrp type ipsec-ra
hostname(config)# tunnel-group salesgrp ipsec-attributes
hostname(config-tunnel-ipsec)# client-update type vpn3002 url tftp:192.168.1.1 rev-nums 4.7
hostname(config-tunnel-ipsec)#
```

**Note**

You can have the browser automatically start an application by including the application name at the end of the URL; for example: `https://support/updates/vpnclient.exe`.

**Step 3** Define a set of client-update parameters for a particular ipsec-ra tunnel group.

In tunnel-group ipsec-attributes mode, specify the tunnel group name and its type, the URL or IP address from which to get the updated image, and a revision number. If the user's client's revision number matches one of the specified revision numbers, there is no need to update the client, for example, for a Windows client enter this command:

```
hostname(config)# tunnel-group remotegrp type ipsec-ra
hostname(config)# tunnel-group remotegrp ipsec-attributes
hostname(config-tunnel-ipsec)# client-update type windows url https://support/updates/ rev-nums 4.6.1
hostname(config-tunnel-ipsec)#
```

**Step 4** (Optional) Send a notice to active users with outdated Windows clients that their client needs updating. For these users, a pop-up window appears, offering them the opportunity to launch a browser and download the updated software from the site that you specified in the URL. The only part of this message that you can configure is the URL. (See Step 2 or 3.) Users who are not active get a notification message the next time they log on. You can send this notice to all active clients on all tunnel groups, or you can send it to clients on a particular tunnel group. For example, to notify all active clients on all tunnel groups, enter the following command in privileged EXEC mode:

```
hostname# client-update all
hostname#
```

If the user's client's revision number matches one of the specified revision numbers, there is no need to update the client, and no notification message is sent to the user. VPN 3002 clients update without user intervention and users receive no notification message.

**Note**

If you specify the client-update type as **windows** (specifying all Windows-based platforms) and later want to enter a client-update type of **win9x** or **winnt** for the same entity, you must first remove the windows client type with the **no** form of the command, then use new client-update commands to specify the new client types.

## Understanding Load Balancing

If you have a remote-access configuration in which you are using two or more ASAs or VPN Concentrators connected on the same network, you can configure these devices to share their session load. This feature is called *load balancing*. To implement load balancing, you group together logically two or more devices on the same private LAN-to-LAN network, private subnet, and public subnet into a *virtual cluster*.

All devices in the virtual cluster carry session loads. Load balancing directs session traffic to the least-loaded device in the cluster, which distributes the load among all devices. It makes efficient use of system resources and provides increased performance and high availability.

One device in the virtual cluster, the *virtual cluster master*, directs incoming traffic to the other devices, called *backup devices*. The virtual cluster master monitors all devices in the cluster, keeps track of how busy each is, and distributes the session load accordingly. The role of virtual cluster master is not tied to a physical device; it can shift among devices. For example, if the current virtual cluster master fails, one of the backup devices in the cluster takes over that role and immediately becomes the new virtual cluster master.

The virtual cluster appears to outside clients as a single *virtual cluster IP address*. This IP address is not tied to a specific physical device. This address belongs to the current virtual cluster master, which makes it virtual. A VPN client attempting to establish a connection connects first to this virtual cluster IP address. The virtual cluster master then sends back to the client the public IP address of the least-loaded available host in the cluster. In a second transaction (transparent to the user), the client connects directly to that host. In this way, the virtual cluster master directs traffic evenly and efficiently across resources.

**Note**

All clients other than the Cisco VPN client or the Cisco 3002 hardware client should connect directly to the ASA as usual; they do not use the virtual cluster IP address.

If a machine in the cluster fails, the terminated sessions can immediately reconnect to the virtual cluster IP address. The virtual cluster master then directs these connections to another active device in the cluster. If the virtual cluster master itself fails, a backup device in the cluster immediately and automatically takes over as the new virtual session master. Even if several devices in the cluster fail, users can continue to connect to the cluster as long as any one device in the cluster is up and available.

## Comparing Load Balancing to Failover

Both load balancing and failover are high-availability features, but they function differently and have different requirements. In some circumstances you can use both load balancing and failover. The following sections describe the differences between these features.

### Load Balancing

Load balancing is a mechanism for equitably distributing remote-access VPN traffic among the devices in a virtual cluster. It is based on simple distribution of traffic without taking into account throughput or other factors. A load-balancing cluster consists of two or more devices, one is the virtual master, and the other devices are the backup. These devices do not need to be of the exact same type, or have identical software versions or configurations.

All active devices in a virtual cluster carry session loads. Load balancing directs traffic to the least-loaded device in the cluster, distributing the load among all devices. It makes efficient use of system resources and provides increased performance and high availability.

### Failover

A failover configuration requires two identical ASAs connected to each other through a dedicated failover link and, optionally, a stateful failover link. The health of the active interfaces and units is monitored to determine when specific failover conditions are met. If those conditions occur, failover occurs. Failover supports both VPN and firewall configurations.

The ASA supports two failover configurations: Active/Active failover and Active/Standby failover. VPN connections run only in Active/Standby, single routed mode. Active/Active failover requires a multicontext mode, so does not support VPN connections.

With Active/Active failover, both units can pass network traffic. This is not true load balancing, although it might appear to have the same effect. When failover occurs, the remaining active unit takes over passing the combined traffic, based on the configured parameters. Therefore, when configuring Active/Active failover, you must make sure that the combined traffic for both units is within the capacity of each unit.

With Active/Standby failover, only one unit passes traffic, while the other unit waits in a standby state and does not pass traffic. Active/Standby failover lets you use a second ASA to take over the functions of a failed unit. When the active unit fails, it changes to the standby state, while the standby unit changes to the active state. The unit that becomes active assumes the IP addresses (or, for transparent firewall, the management IP address) and MAC addresses of the failed unit and begins passing traffic. The unit that is now in standby state takes over the standby IP addresses of the active unit. If an active unit fails, the standby takes over without any interruption to the client VPN tunnel.

## Implementing Load Balancing

Enabling load balancing involves:

- Configuring the load-balancing cluster by establishing a common virtual cluster IP address, UDP port (if necessary), and IPsec shared secret for the cluster. You configure these values identically for every device in the cluster.
- Configuring the participating device by enabling load balancing on the device and defining device-specific properties. These values vary from device to device.

**Note**

VPN load balancing requires an active 3DES/AES license. The ASA checks for the existence of this crypto license before enabling load balancing. If it does not detect an active 3DES or AES license, the ASA prevents the enabling of load balancing and also prevents internal configuration of 3DES by the load balancing system unless the license permits this usage.

## Prerequisites

Load balancing is disabled by default. You must explicitly enable load balancing.

You must have first configured the public (outside) and private (inside) interfaces and also have previously configured the interface to which the virtual cluster IP address refers. You can use the **interface** and **nameif** commands to configure different names for these interfaces. Subsequent references in this section use the names outside and inside.

All devices that participate in a cluster must share the same cluster-specific values: IP address, encryption settings, encryption key, and port.

## Eligible Platforms

A load-balancing cluster can include ASA models ASA 5510 (with a Plus license) and Model 5520 and above. You can also include Cisco VPN 3000 series concentrators in the cluster. While mixed configurations are possible, administration is generally simpler if the cluster is homogeneous.

## Eligible Clients

Load balancing is effective only on remote sessions initiated with the following clients:

- Cisco AnyConnect VPN client (Release 2.0 and later)
- Cisco VPN Client (Release 3.0 and later)
- Cisco ASA 5505 ASA (when acting as an Easy VPN client)
- Cisco VPN 3002 hardware client (Release 3.5 or later)
- Cisco PIX 501/506E when acting as an Easy VPN client
- Cisco IOS EZVPN client devices supporting IKE-redirect (IOS 831/871)
- Clientless SSL VPN (not a client)

Load balancing works with IPsec clients and SSL VPN client and clientless sessions. All other VPN connection types (L2TP, PPTP, L2TP/IPsec), including LAN-to-LAN, can connect to an ASA on which load balancing is enabled, but they cannot participate in load balancing.

## VPN Load-Balancing Algorithm

The master device maintains a sorted list of backup cluster members in ascending IP address order. The load of each backup cluster member is computed as an integer percentage (the number of active sessions). AnyConnect inactive sessions do not count towards the SSL VPN load for load balancing. The

master device redirects the IPsec and SSL VPN tunnel to the device with the lowest load until it is 1% higher than the rest. When all backup cluster members are 1% higher than the master, the master device redirects to itself.

For example, if you have one master and two backup cluster members, the following cycle applies:



---

**Note** All nodes start with 0%, and all percentages are rounded half-up.

---

1. The master device takes the connection if all members have a load at 1% higher than the master.
2. If the master does not take the connection, the session is taken by whichever backup device has the least load percentage.
3. If all members have the same percentage load, the backup device with the least number of sessions gets the session.
4. If all members have the same percentage load and the same number of sessions, the device with the least IP addresses gets the session.

## VPN Load-Balancing Cluster Configurations

A load-balancing cluster can consist of ASAs of the same release, of mixed releases, as well as VPN 3000 concentrators, or a mixture of these, subject to the following restrictions:

- Load-balancing clusters that consist of same release ASAs or all VPN 3000 concentrators can run load balancing for a mixture of IPsec, AnyConnect, and clientless SSL VPN sessions.
- Load-balancing clusters that consist of both same release ASAs and VPN 3000 concentrators can run load balancing for a mixture of IPsec, AnyConnect, and clientless SSL VPN client and clientless sessions.
- Load-balancing clusters that include mixed release ASAs or same release ASAs and VPN 3000 concentrators or both can support only IPsec sessions. In such a configuration, however, the ASAs might not reach their full IPsec capacity. [Scenario 1: Mixed Cluster with No SSL VPN Connections](#), illustrates this situation.

Since Release 7.1(1), IPsec and SSL VPN sessions count or weigh equally in determining the load that each device in the cluster carries. This is a change from the load-balancing calculation for the ASA Release 7.0(x) software and the VPN 3000 concentrator. Both platforms use a weighting algorithm that on some hardware platforms calculates the SSL VPN session load differently from the IPsec session load.

The virtual master of the cluster assigns session requests to the members of the cluster. The ASA regards all sessions, SSL VPN or IPsec, as equal and assigns them accordingly. You can configure the number of IPsec and SSL VPN sessions to allow up to the maximum allowed by your configuration and license. See [Configuring VPN Session Limits](#) for a description of how to set these limits.

We have tested up to ten nodes in a load-balancing cluster. Larger clusters might work, but we do not officially support such topologies.

## Some Typical Mixed Cluster Scenarios

If you have a mixed configuration—that is, if your load-balancing cluster includes devices running a mixture of ASA software releases or at least one ASA running ASA Release 7.1(1) or later and a VPN 3000 concentrator—the difference in weighting algorithms becomes an issue if the initial cluster master fails and another device takes over as master.

The following scenarios illustrate the use of VPN load balancing in clusters consisting of a mixture of ASAs running ASA Release 7.1(1) and ASA Release 7.0(x) software, as well as VPN 3000 series concentrators.

### Scenario 1: Mixed Cluster with No SSL VPN Connections

In this scenario, the cluster consists of a mixture of ASAs and VPN 3000 concentrators. Some of the ASA cluster peers are running ASA Release 7.0(x), and some are running Release 7.1(1). The pre-7.1(1) and VPN 3000 peers do not have any SSL VPN connections, and the 7.1(1) cluster peers have only the base SSL VPN license, which allows two SSL VPN sessions, but there are no SSL VPN connections. In this case, all the connections are IPsec, and load balancing works fine.

The two SSL VPN licenses have a very small effect on the user's taking advantage of the maximum IPsec session limit, and then only when a VPN 3000 concentrator is the cluster master. In general, the smaller the number of SSL VPN licenses is on a ASA in a mixed cluster, the smaller the effect on the ASA 7.1(1) device being able to reach its IPsec session limit in a scenario where there are only IPsec sessions.

### Scenario 2: Mixed Cluster Handling SSL VPN Connections

Suppose, for example, an ASA running ASA Release 7.1(1) software is the initial cluster master and then that device fails. Another device in the cluster takes over automatically as master and applies its own load-balancing algorithm to determine processor loads within the cluster. A cluster master running ASA Release 7.1(1) software cannot weight session loads in any way other than what that software provides. Therefore, it cannot assign a combination of IPsec and SSL VPN session loads properly to ASA devices running earlier versions nor to VPN 3000 concentrators. Conversely, a VPN 3000 concentrator acting as the cluster master cannot assign loads properly to an ASA Release 7.1(1) ASA. The following scenario illustrates this dilemma.

This scenario is similar to the previous one, in that the cluster consists of a mixture of ASAs and VPN 3000 concentrators. Some of the ASA cluster peers are running ASA Release 7.0(x) and some are running Release 7.1(1). In this case, however, the cluster is handling SSL VPN connections as well as IPsec connections.

If a device that is running software earlier than ASA Release 7.1(1) is the cluster master, the master applies the protocol and logic in effect prior to Release 7.1(1). That is, sessions might be directed to load-balancing peers that have exceeded their session limit. In that case, the user is denied access.

If the cluster master is a device running ASA Release 7.0(x) software, the old session-weighting algorithm applies only to the pre-7.1(1) peers in the cluster. No one should be denied access in this case. Because the pre-7.1(1) peers use the session-weighting algorithm, they are more lightly loaded.

An issue arises, however, because you cannot guarantee that the 7.1(1) peer is always the cluster master. If the cluster master fails, another peer assumes the role of master. The new master might be any of the eligible peers. Because of the unpredictability of the results, we recommend that you avoid configuring this type of cluster.

# Configuring Load Balancing

To use load balancing, configure the following elements for each device that participates in the cluster:

- Public and private interfaces
- VPN load-balancing cluster attributes



## Note

All participants in the cluster must have an identical cluster configuration, except for the device priority within the cluster.



## Note

The Local CA feature is not supported if you use Active/Active stateful failover or VPN load-balancing. The Local CA cannot be subordinate to another CA; it can act only as the Root CA.

## Configuring the Public and Private Interfaces for Load Balancing

To configure the public (outside) and private (inside) interfaces for the load-balancing cluster devices, do the following steps:

- Step 1** Configure the public interface on the ASA by entering the **interface** command with the **lbpublic** keyword in vpn-load-balancing configuration mode. This command specifies the name or IP address of the public interface for load balancing for this device:

```
hostname(config)# vpn load-balancing
hostname(config-load-balancing)# interface lbpublic outside
hostname(config-load-balancing)#
```

- Step 2** Configure the private interface on the ASA by entering the **interface** command with the **lbprivate** keyword in vpn-load-balancing configuration mode. This command specifies the name or IP address of the private interface for load balancing for this device:

```
hostname(config-load-balancing)# interface lbprivate inside
hostname(config-load-balancing)#
```

- Step 3** Set the priority to assign to this device within the cluster. The range is from 1 to 10. The priority indicates the likelihood of this device becoming the virtual cluster master, either at startup or when an existing master fails. The higher you set the priority (for example, 10), the more likely it is that this device becomes the virtual cluster master.

```
hostname(config-load-balancing)# priority number
hostname(config-load-balancing)#
```

For example, to assign this device a priority of 6 within the cluster, enter the following command:

```
hostname(config-load-balancing)# priority 6
hostname(config-load-balancing)#
```

- Step 4** If you want to apply network address translation for this device, enter the **nat** command with the NAT assigned address for the device:

```
hostname(config-load-balancing)# nat ip_address
hostname(config-load-balancing)#
```

For example, to assign this device a NAT address of 192.168.30.3, enter the following command:

```
hostname(config-load-balancing)# nat 192.168.30.3
hostname(config-load-balancing)#
```

---

## Configuring the Load Balancing Cluster Attributes

To configure the load-balancing cluster attributes for each device in the cluster, do the following steps:

- Step 1** Set up VPN load balancing by entering the **vpn load-balancing** command in global configuration mode:

```
hostname(config)# vpn load-balancing
hostname(config-load-balancing)#
```

This enters vpn-load-balancing configuration mode, in which you can configure the remaining load-balancing attributes.

- Step 2** Configure the IP address of the cluster to which this device belongs. This command specifies the single IP address that represents the entire virtual cluster. Choose an IP address that is within the public subnet address range shared by all the ASAs in the virtual cluster.

```
hostname(config-load-balancing)# cluster ip address ip_address
hostname(config-load-balancing)#
```

For example, to set the cluster IP address to 192.168.10.10, enter the following command:

```
hostname(config-load-balancing)# cluster ip address 192.168.10.10
hostname(config-load-balancing)#
```

- Step 3** Configure the cluster port. This command specifies the UDP port for the virtual cluster in which this device is participating. The default value is 9023. If another application is using this port, enter the UDP destination port number that you want to use for load balancing.

```
hostname(config-load-balancing)# cluster port port_number
hostname(config-load-balancing)#
```

For example, to set the cluster port to 4444, enter the following command:

```
hostname(config-load-balancing)# cluster port 4444
hostname(config-load-balancing)#
```

- Step 4** (Optional) Enable IPsec encryption for the cluster. The default is no encryption. This command enables or disables IPsec encryption. If you configure this check attribute, you must first specify and verify a shared secret. The ASAs in the virtual cluster communicate via LAN-to-LAN tunnels using IPsec. To ensure that all load-balancing information communicated between the devices is encrypted, enable this attribute.

```
hostname(config-load-balancing)# cluster encryption
hostname(config-load-balancing)#
```

**Note**

When using encryption, you must have previously configured the load-balancing inside interface. If that interface is not enabled on the load-balancing inside interface, you get an error message when you try to configure cluster encryption.

If the load-balancing inside interface was enabled when you configured cluster encryption, but was disabled before you configured the participation of the device in the virtual cluster, you get an error message when you enter the **participate** command (or, in ASDM, check the **Participate in Load Balancing Cluster** check box), and encryption is not enabled for the cluster.

To use cluster encryption, you must enable ISAKMP on the inside interface, using the **crypto isakmp enable** command with the inside interface specified.

- Step 5** If you enable cluster encryption, you must also specify the IPsec shared secret by entering the **cluster key** command. This command specifies the shared secret between IPsec peers when you have enabled IPsec encryption. The value you enter in the box appears as consecutive asterisk characters

```
hostname(config-load-balancing) # cluster key shared_secret
hostname(config-load-balancing) #
```

For example, to set the shared secret to 123456789, enter the following command:

```
hostname(config-load-balancing) # cluster key 123456789
hostname(config-load-balancing) #
```

- Step 6** Enable this device's participation in the cluster by entering the **participate** command:

```
hostname(config-load-balancing) # participate
hostname(config-load-balancing) #
```

## Enabling Redirection Using a Fully Qualified Domain Name

To enable or disable redirection using a fully qualified domain name in vpn load-balancing mode, use the **redirect-fqdn enable** command in global configuration mode. This behavior is disabled by default.

By default, the ASA sends only IP addresses in load-balancing redirection to a client. If certificates are in use that are based on DNS names, the certificates will be invalid when redirected to a backup device.

As a VPN cluster master, this ASA can send a fully qualified domain name (FQDN), using reverse DNS lookup, of a cluster device (another ASA in the cluster) instead of its outside IP address when redirecting VPN client connections to that cluster device.

All of the outside and inside network interfaces on the load-balancing devices in a cluster must be on the same IP network.

To do VPN load balancing for SSL or IPsec/IKEv2 connections using FQDNs rather than IP addresses, perform the following configuration steps:

- Step 1** Enable the use of FQDNs for load balancing with the **redirect-fqdn enable** command:

```
redirect-fqdn {enable | disable}
no redirect-fqdn {enable | disable}
```

For example:

```
hostname(config)# vpn load-balancing
hostname(config-load-balancing)# redirect-fqdn enable
hostname(config-load-balancing)#
```

- Step 2** Add an entry for each of your ASA outside interfaces into your DNS server if such entries are not already present. Each ASA outside IP address should have a DNS entry associated with it for lookups. These DNS entries must also be enabled for reverse lookup.
- Step 3** Enable DNS lookups on your ASA with the **dns domain-lookup inside** command or whichever interface has a route to your DNS server.
- Step 4** Define your DNS server IP address on the ASA; for example: **dns name-server 10.2.3.4** (IP address of your DNS server).

The following is an example of a VPN load balancing command sequence that includes an interface command that enables redirection for a fully qualified domain name, specifies the public interface of the cluster as **test** and the private interface of the cluster as **foo**:

```
hostname(config)# interface GigabitEthernet 0/1
hostname(config-if)# ip address 209.165.202.159 255.255.255.0
hostname(config)# nameif test
hostname(config)# interface GigabitEthernet 0/2
hostname(config-if)# ip address 209.165.201.30 255.255.255.0
hostname(config)# nameif foo
hostname(config)# vpn load-balancing
hostname(config-load-balancing)# nat 192.168.10.10
hostname(config-load-balancing)# priority 9
hostname(config-load-balancing)# interface lbpublic test
hostname(config-load-balancing)# interface lbprivate foo
hostname(config-load-balancing)# cluster ip address 209.165.202.224
hostname(config-load-balancing)# cluster key 123456789
hostname(config-load-balancing)# cluster encryption
hostname(config-load-balancing)# cluster port 9023
hostname(config-load-balancing)# redirect-fqdn enable
hostname(config-load-balancing)# participate
```

## Frequently Asked Questions About Load Balancing

### IP Address Pool Exhaustion

**Q:** Does the ASA consider IP address pool exhaustion as part of its VPN load-balancing method?

**A:** No. If the remote access VPN session is directed to a device that has exhausted its IP address pools, the session does not establish. The load-balancing algorithm is based on load, and is computed as an integer percentage (number of active and maximum sessions) that each backup cluster member supplies.

### Unique IP Address Pools

**Q:** To implement VPN load balancing, must the IP address pools for AnyConnect clients or IPsec clients on different ASAs be unique?

**A:** Yes. IP address pools must be unique for each device.

## Using Load Balancing and Failover on the Same Device

**Q:** Can a single device use both load balancing and failover?

**A:** Yes. In this configuration, the client connects to the IP address of the cluster and is redirected to the least-loaded ASA in the cluster. If that device fails, the standby unit takes over immediately, and there is no impact to the VPN tunnel.

## Load Balancing on Multiple Interfaces

**Q:** If we enable SSL VPN on multiple interfaces, is it possible to implement load balancing for both of the interfaces?

**A:** You can define only one interface to participate in the cluster as the public interface. The idea is to balance the CPU loads. Multiple interfaces converge on the same CPU, so the concept of load balancing on multiple interfaces has no meaning.

## Maximum Simultaneous Sessions for Load Balancing Clusters

**Q:** Consider a deployment of two ASA 5520s, each with a 100-user SSL VPN license. In a load-balancing cluster, does the maximum total number of users allow 200 simultaneous sessions, or only 100? If we add a third device later with a 100-user license, can we now support 300 simultaneous sessions?

**A:** With VPN load balancing, all devices are active, so the maximum number of sessions that your cluster can support is the total of the number of sessions for each of the devices in the cluster, in this case 300.

## Viewing Load Balancing

The load-balancing cluster master receives a periodic message from each ASA in the cluster with the number of active AnyConnect and clientless sessions, as well as the maximum allowed sessions based on the configured or license limits. If an ASA in the cluster shows 100 percent full capacity, the cluster master cannot redirect more connections to it. Although the ASA may show as full, some users may be in inactive/wait-to-resume state, wasting the licenses. As a workaround, each ASA provides the total number of sessions minus the sessions in inactive state, instead of the total number of sessions. (Refer to the **show vpn-sessiondb summary** command in the command reference. In other words, the inactive sessions are not reported to the cluster master. Even if the ASA is full (with some inactive sessions), the cluster master still redirects connections to it if necessary. When the ASA receives the new connection, the session that has been inactive the longest is logged off, allowing new connections to take its license.

The following example shows 100 SSL sessions (active only) and a 2 percent SSL load. These numbers do not include the inactive sessions. In other words, inactive sessions do not count towards the load for load balancing.

```
hostname# show vpn load-balancing
 Status : enabled
 Role : Master
 Failover : Active
 Encryption : enabled
 Cluster IP : 192.168.1.100
 Peers : 1
```

|              |        |     |          | Load % |     |       |     |
|--------------|--------|-----|----------|--------|-----|-------|-----|
| Sessions     |        |     |          |        |     |       |     |
| Public IP    | Role   | Pri | Model    | IPsec  | SSL | IPsec | SSL |
| 192.168.1.9  | Master | 7   | ASA-5540 | 4      | 2   | 216   | 100 |
| 192.168.1.19 | Backup | 9   | ASA-5520 | 0      | 0   | 0     | 0   |

## Configuring VPN Session Limits

You can run as many IPsec and SSL VPN sessions as your platform and ASA license supports. To view the licensing information including maximum sessions for your ASA, enter the **show version** command in global configuration mode. The following example shows the command and the licensing information from the output of this command:

```
hostname(config)# show version
```

```
Cisco Adaptive Security Appliance Software Version 8.4(1)
Device Manager Version 6.4(1)
```

```
Compiled on Sun 02-Jan-11 03:45 by builders
System image file is "disk0:/cdisk.bin"
Config file at boot was "startup-config"
asa4 up 9 days 3 hours
```

```
Hardware: ASA5510, 256 MB RAM, CPU Pentium 4 Celeron 1600 MHz
Internal ATA Compact Flash, 256MB
BIOS Flash M50FW080 @ 0xffff00000, 1024KB
```

```
Encryption hardware device : Cisco ASA-55x0 on-board accelerator (revision 0x0)
 Boot microcode : CN1000-MC-BOOT-2.00
 SSL/IKE microcode : CNLite-MC-SSLm-PLUS-2.03
 IPsec microcode : CNLite-MC-IPSECm-MAIN-2.06
 Number of accelerators: 1
```

```
0: Ext: Ethernet0/0 : address is 001e.f75e.8b84, irq 9
1: Ext: Ethernet0/1 : address is 001e.f75e.8b85, irq 9
2: Ext: Ethernet0/2 : address is 001e.f75e.8b86, irq 9
3: Ext: Ethernet0/3 : address is 001e.f75e.8b87, irq 9
4: Ext: Management0/0 : address is 001e.f75e.8b83, irq 11
5: Int: Internal-Data0/0 : address is 0000.0001.0002, irq 11
6: Int: Internal-Contro0/0 : address is 0000.0001.0001, irq 5
```

```
Licensed features for this platform:
```

```
Maximum Physical Interfaces : Unlimited perpetual
Maximum VLANs : 100 perpetual
Inside Hosts : Unlimited perpetual
Failover : Active/Active perpetual
VPN-DES : Enabled perpetual
```

```

VPN-3DES-AES : Enabled perpetual
Security Contexts : 2 perpetual
GTP/GPRS : Disabled perpetual
AnyConnect Premium Peers : 250 perpetual
AnyConnect Essentials : Disabled perpetual
Other VPN Peers : 250 perpetual
Total VPN Peers : 250 perpetual
Shared License : Disabled perpetual
AnyConnect for Mobile : Disabled perpetual
AnyConnect for Cisco VPN Phone : Disabled perpetual
Advanced Endpoint Assessment : Enabled perpetual
UC Phone Proxy Sessions : 2 perpetual
Total UC Proxy Sessions : 2 perpetual
Botnet Traffic Filter : Disabled perpetual
Intercompany Media Engine : Disabled perpetual

```

This platform has an ASA 5510 Security Plus license.

```
hostname#
```

To limit AnyConnect VPN sessions (either IPsec/IKEv1 or SSL) to a lower value than the ASA allows, use the **vpn-sessiondb max-anyconnect-premium-or-essentials-limit** command in global configuration mode. To remove the session limit, use the **no** version of this command.

For example, if the ASA license allows 500 SSL VPN sessions, and you want to limit the number of AnyConnect VPN sessions to 250, enter the following command:

```
hostname(config)# vpn-sessiondb max-anyconnect-premium-or-essentials-limit 250
hostname(config)#
```

To remove the session limit, use the **no** version of this command:

```
hostname(config)# no vpn-sessiondb max-anyconnect-premium-or-essentials-limit 250
hostname(config)#
```

To limit Cisco VPN client (IPsec IKEv1), Lan-to-Lan VPN, and clientless SSL VPN sessions to a lower value than the ASA allows, enter the **vpn-sessiondb max-other-vpn-limit** command in global configuration mode:

For example, if the ASA license allows 750 IPsec sessions, and you want to limit the number of IPsec sessions to 500, enter the following command:

```
hostname(config)# vpn-sessiondb max-other-vpn-limit 500
hostname(config)#
```

To remove the session limit, use the **no** version of this command:

```
hostname(config)# no vpn-sessiondb max-other-vpn-limit 500
hostname(config)#
```

For a complete description of the features available with each license, see the document Managing Feature Licenses for Cisco ASA 5500 Version 8.4 at this URL:

[http://www.cisco.com/en/US/docs/security/asa/asa84/license\\_standalone/license\\_management/license.html](http://www.cisco.com/en/US/docs/security/asa/asa84/license_standalone/license_management/license.html)





# CHAPTER 67

## Configuring Connection Profiles, Group Policies, and Users

---

This chapter describes how to configure VPN connection profiles (formerly called “tunnel groups”), group policies, and users. This chapter includes the following sections.

- [Overview of Connection Profiles, Group Policies, and Users, page 67-1](#)
- [Configuring Connection Profiles, page 67-6](#)
- [Group Policies, page 67-36](#)
- [Configuring User Attributes, page 67-79](#)

In summary, you first configure connection profiles to set the values for the connection. Then you configure group policies. These set values for users in the aggregate. Then you configure users, which can inherit values from groups and configure certain values on an individual user basis. This chapter describes how and why to configure these entities.

### Overview of Connection Profiles, Group Policies, and Users

Groups and users are core concepts in managing the security of virtual private networks (VPNs) and in configuring the ASA. They specify attributes that determine user access to and use of the VPN. A *group* is a collection of users treated as a single entity. *Users* get their attributes from *group policies*. A *connection profile* identifies the group policy for a specific connection. If you do not assign a particular group policy to a user, the default group policy for the connection applies.



#### Note

---

You configure connection profiles using **tunnel-group** commands. In this chapter, the terms “connection profile” and “tunnel group” are often used interchangeably.

---

Connection profiles and group policies simplify system management. To streamline the configuration task, the ASA provides a default LAN-to-LAN connection profile, a default remote access connection profile, a default connection profile for SSL/IKEv2 VPN, and a default group policy (DfltGrpPolicy). The default connection profiles and group policy provide settings that are likely to be common for many users. As you add users, you can specify that they “inherit” parameters from a group policy. Thus you can quickly configure VPN access for large numbers of users.

If you decide to grant identical rights to all VPN users, then you do not need to configure specific connection profiles or group policies, but VPNs seldom work that way. For example, you might allow a finance group to access one part of a private network, a customer support group to access another part,

and an MIS group to access other parts. In addition, you might allow specific users within MIS to access systems that other MIS users cannot access. Connection profiles and group policies provide the flexibility to do so securely.

**Note**

The ASA also includes the concept of object groups, which are a superset of network lists. Object groups let you define VPN access to ports as well as networks. Object groups relate to ACLs rather than to group policies and connection profiles. For more information about using object groups, see [Chapter 13, “Configuring Objects.”](#)

The security appliance can apply attribute values from a variety of sources. It applies them according to the following hierarchy:

1. Dynamic Access Policy (DAP) record
2. Username
3. Group policy
4. Group policy for the connection profile
5. Default group policy

Therefore, DAP values for an attribute have a higher priority than those configured for a user, group policy, or connection profile.

When you enable or disable an attribute for a DAP record, the ASA applies that value and enforces it. For example, when you disable HTTP proxy in `dap webvpn` mode, the security appliance looks no further for a value. When you instead use the **no** value for the **http-proxy** command, the attribute is not present in the DAP record, so the security appliance moves down to the AAA attribute in the username, and if necessary, the group policy to find a value to apply. The ASA clientless SSL VPN configuration supports only one `http-proxy` and one `https-proxy` command each. We recommend that you use ASDM to configure DAP.

## Connection Profiles

A connection profile consists of a set of records that determines tunnel connection policies. These records identify the servers to which the tunnel user is authenticated, as well as the accounting servers, if any, to which connection information is sent. They also identify a default group policy for the connection, and they contain protocol-specific connection parameters. Connection profiles include a small number of attributes that pertain to creating the tunnel itself. Connection profiles include a pointer to a group policy that defines user-oriented attributes.

The ASA provides the following default connection profiles: `DefaultL2Lgroup` for LAN-to-LAN connections, `DefaultRAGroup` for remote access connections, and `DefaultWEBVPNGroup` for SSL VPN (browser-based) connections. You can modify these default connection profiles, but you cannot delete them. You can also create one or more connection profiles specific to your environment. Connection profiles are local to the ASA and are not configurable on external servers.

Connection profiles specify the following attributes:

- [General Connection Profile Connection Parameters, page 67-3](#)
- [IPsec Tunnel-Group Connection Parameters, page 67-4](#)
- [Connection Profile Connection Parameters for SSL VPN Sessions, page 67-5](#)

## General Connection Profile Connection Parameters

General parameters are common to all VPN connections. The general parameters include the following:

- Connection profile name—You specify a connection-profile name when you add or edit a connection profile. The following considerations apply:
  - For clients that use preshared keys to authenticate, the connection profile name is the same as the group name that a client passes to the ASA.
  - Clients that use certificates to authenticate pass this name as part of the certificate, and the ASA extracts the name from the certificate.
- Connection type—Connection types include IKEv1 remote-access, IPsec Lan-to-LAN, and Anyconnect (SSL/IKEv2). A connection profile can have only one connection type.
- Authentication, Authorization, and Accounting servers—These parameters identify the server groups or lists that the ASA uses for the following purposes:
  - Authenticating users
  - Obtaining information about services users are authorized to access
  - Storing accounting records

A server group can consist of one or more servers.

- Default group policy for the connection—A group policy is a set of user-oriented attributes. The default group policy is the group policy whose attributes the ASA uses as defaults when authenticating or authorizing a tunnel user.
- Client address assignment method—This method includes values for one or more DHCP servers or address pools that the ASA assigns to clients.
- Override account disabled—This parameter lets you override the “account-disabled” indicator received from a AAA server.
- Password management—This parameter lets you warn a user that the current password is due to expire in a specified number of days (the default is 14 days), then offer the user the opportunity to change the password.
- Strip group and strip realm—These parameters direct the way the ASA processes the usernames it receives. They apply only to usernames received in the form user@realm. A realm is an administrative domain appended to a username with the @ delimiter (user@abc).

When you specify the **strip-group** command, the ASA selects the connection profile for user connections by obtaining the group name from the username presented by the VPN client. The ASA then sends only the user part of the username for authorization/authentication. Otherwise (if disabled), the ASA sends the entire username, including the realm.

Strip-realm processing removes the realm from the username when sending the username to the authentication or authorization server. If the command is enabled, the ASA sends only the user part of the username authorization/authentication. Otherwise, the ASA sends the entire username.

- Authorization required—This parameter lets you require authorization before a user can connect, or turn off that requirement.
- Authorization DN attributes—This parameter specifies which Distinguished Name attributes to use when performing authorization.

## IPsec Tunnel-Group Connection Parameters

IPsec parameters include the following:

- A client authentication method: preshared keys, certificates, or both.
  - For IKE connections based on preshared keys, this is the alphanumeric key itself (up to 128 characters long), associated with the connection policy.
  - Peer-ID validation requirement—This parameter specifies whether to require validating the identity of the peer using the peer’s certificate.
  - If you specify certificates or both for the authentication method, the end user must provide a valid certificate in order to authenticate.

- An extended hybrid authentication method: XAUTH and hybrid XAUTH.

You use **isakmp ikev1-user-authentication** command to implement hybrid XAUTH authentication when you need to use digital certificates for ASA authentication and a different, legacy method for remote VPN user authentication, such as RADIUS, TACACS+ or SecurID.

- ISAKMP (IKE) keepalive settings. This feature lets the ASA monitor the continued presence of a remote peer and report its own presence to that peer. If the peer becomes unresponsive, the ASA removes the connection. Enabling IKE keepalives prevents hung connections when the IKE peer loses connectivity.

There are various forms of IKE keepalives. For this feature to work, both the ASA and its remote peer must support a common form. This feature works with the following peers:

- Cisco AnyConnect VPN Client
- Cisco VPN Client (Release 3.0 and above)
- Cisco VPN 3000 Client (Release 2.x)
- Cisco VPN 3002 Hardware Client
- Cisco VPN 3000 Series Concentrators
- Cisco IOS software
- Cisco Secure PIX Firewall

Non-Cisco VPN clients do not support IKE keepalives.

If you are configuring a group of mixed peers, and some of those peers support IKE keepalives and others do not, enable IKE keepalives for the entire group. The feature does not affect the peers that do not support it.

If you disable IKE keepalives, connections with unresponsive peers remain active until they time out, so we recommend that you keep your idle timeout short. To change your idle timeout, see [“Configuring Group Policies” section on page 67-39](#).



### Note

To reduce connectivity costs, disable IKE keepalives if this group includes any clients connecting via ISDN lines. ISDN connections normally disconnect if idle, but the IKE keepalive mechanism prevents connections from idling and therefore from disconnecting.

If you do disable IKE keepalives, the client disconnects only when either its IKE or IPsec keys expire. Failed traffic does not disconnect the tunnel with the Peer Timeout Profile values as it does when IKE keepalives are enabled.

**Note**

If you have a LAN-to-LAN configuration using IKE main mode, make sure that the two peers have the same IKE keepalive configuration. Both peers must have IKE keepalives enabled or both peers must have it disabled.

- If you configure authentication using digital certificates, you can specify whether to send the entire certificate chain (which sends the peer the identity certificate and all issuing certificates) or just the issuing certificates (including the root certificate and any subordinate CA certificates).
- You can notify users who are using outdated versions of Windows client software that they need to update their client, and you can provide a mechanism for them to get the updated client version. For VPN 3002 hardware client users, you can trigger an automatic update. You can configure and change the client-update, either for all connection profiles or for particular connection profiles.
- If you configure authentication using digital certificates, you can specify the name of the trustpoint that identifies the certificate to send to the IKE peer.

## Connection Profile Connection Parameters for SSL VPN Sessions

Table 67-1 provides a list of connection profile attributes that are specific to SSL VPN (AnyConnect client and clientless) connections. In addition to these attributes, you configure general connection profile attributes common to all VPN connections. For step-by-step information about configuring connection profiles, see [Configuring Connection Profiles for Clientless SSL VPN Sessions, page 67-20](#).

**Note**

In earlier releases, “connection profiles” were known as “tunnel groups.” You configure a connection profile with tunnel-group commands. This chapter often uses these terms interchangeably.

**Table 67-1** Connection Profile Attributes for SSL VPN

| Command                      | Function                                                                                                                                                                                                                                        |
|------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>authentication</b>        | Sets the authentication method, AAA or certificate.                                                                                                                                                                                             |
| <b>customization</b>         | Identifies the name of a previously defined customization to apply. Customizations determine the appearance of the windows that the user sees upon login. You configure the customization parameters as part of configuring clientless SSL VPN. |
| <b>nbns-server</b>           | Identifies the name of the NetBIOS Name Service server (nbns-server) to use for CIFS name resolution.                                                                                                                                           |
| <b>group-alias</b>           | Specifies one or more alternate names by which the server can refer to a connection profile. At login, the user selects the group name from a dropdown menu.                                                                                    |
| <b>group-url</b>             | Identifies one or more group URLs. If you configure this attribute, users coming in on a specified URL need not select a group at login.                                                                                                        |
| <b>dns-group</b>             | Identifies the DNS server group that specifies the DNS server name, domain name, name server, number of retries, and timeout values for a DNS server to use for a connection profile.                                                           |
| <b>hic-fail-group-policy</b> | Specifies a VPN feature policy if you use the Cisco Secure Desktop Manager to set the Group-Based Policy attribute to “Use Failure Group-Policy” or “Use Success Group-Policy, if criteria match.”                                              |

**Table 67-1 Connection Profile Attributes for SSL VPN**

| Command               | Function                                                                                                                               |
|-----------------------|----------------------------------------------------------------------------------------------------------------------------------------|
| override-svc-download | Overrides downloading the group-policy or username attributes configured for downloading the AnyConnect VPN client to the remote user. |
| radius-reject-message | Enables the display of the RADIUS reject message on the login screen when authentication is rejected.                                  |

## Configuring Connection Profiles

The following sections describe the contents and configuration of connection profiles:

- [Maximum Connection Profiles, page 67-6](#)
- [Default IPsec Remote Access Connection Profile Configuration, page 67-7](#)
- [Specifying a Name and Type for the Remote Access Connection Profile, page 67-8](#)
- [Configuring Remote-Access Connection Profiles, page 67-7](#)
- [Configuring LAN-to-LAN Connection Profiles, page 67-17](#)
- [Configuring Connection Profiles for Clientless SSL VPN Sessions, page 67-20](#)
- [Customizing Login Windows for Users of Clientless SSL VPN sessions, page 67-27](#)
- [Configuring the Connection Profile for RADIUS/SDI Message Support for the AnyConnect Client, page 67-34](#)

You can modify the default connection profiles, and you can configure a new connection profile as any of the three tunnel-group types. If you don't explicitly configure an attribute in a connection profile, that attribute gets its value from the default connection profile. The default connection-profile type is remote access. The subsequent parameters depend upon your choice of tunnel type. To see the current configured and default configuration of all your connection profiles, including the default connection profile, enter the **show running-config all tunnel-group** command.

## Maximum Connection Profiles

The maximum number of connection profiles (tunnel groups) that an ASA can support is a function of the maximum number of concurrent VPN sessions for the platform + 5. For example, an ASA5505 can support a maximum of 25 concurrent VPN sessions allowing for 30 tunnel groups (25+5). Attempting to add an additional tunnel group beyond the limit results in the following message: "ERROR: The limit of 30 configured tunnel groups has been reached"

Table [Table 67-2](#) specifies the maximum VPN sessions and connection profiles for each ASA platform.

**Table 67-2 Maximum VPN Sessions and Connection Profiles Per ASA Platform**

|                             | 5505 Base/<br>Security Plus | 5510/Base/<br>Security Plus | 5520 | 5540 | 5550 | 5580-20 | 5580-40 |
|-----------------------------|-----------------------------|-----------------------------|------|------|------|---------|---------|
| Maximum VPN Sessions        | 10/25                       | 250                         | 750  | 5000 | 5000 | 10,000  | 10,000  |
| Maximum Connection Profiles | 15/30                       | 255                         | 755  | 5005 | 5005 | 10,005  | 10,005  |

## Default IPsec Remote Access Connection Profile Configuration

The contents of the default remote-access connection profile are as follows:

```
tunnel-group DefaultRAGroup type remote-access
tunnel-group DefaultRAGroup general-attributes
no address-pool
no ipv6-address-pool
authentication-server-group LOCAL
accounting-server-group RADIUS
default-group-policy DfltGrpPolicy
no dhcp-server
no strip-realm
no password-management
no override-account-disable
no strip-group
no authorization-required
authorization-dn-attributes CN OU
tunnel-group DefaultRAGroup webvpn-attributes
hic-fail-group-policy DfltGrpPolicy
customization DfltCustomization
authentication aaa
no override-svc-download
no radius-reject-message
dns-group DefaultDNS
tunnel-group DefaultRAGroup ipsec-attributes
no pre-shared-key
peer-id-validate req
no chain
no trust-point
isakmp keepalive threshold 1500 retry 2
no radius-sdi-xauth
isakmp ikev1-user-authentication xauth
tunnel-group DefaultRAGroup ppp-attributes
no authentication pap
authentication chap
authentication ms-chap-v1
no authentication ms-chap-v2
no authentication eap-proxy
```

## Configuring IPsec Tunnel-Group General Attributes

The general attributes are common across more than one tunnel-group type. IPsec remote access and clientless SSL VPN tunnels share most of the same general attributes. IPsec LAN-to-LAN tunnels use a subset. Refer to the command reference for complete descriptions of all commands. The following sections describe, in order, how to configure remote-access and LAN-to-LAN connection profiles.

## Configuring Remote-Access Connection Profiles

Use an remote-access connection profile when setting up a connection between the following remote clients and a central-site ASA:

- Legacy Cisco VPN Client (connecting with IPsec/IKEv1)
- AnyConnect Secure Mobility Client (connecting with SSL or IPsec/IKEv2)
- Clientless SSL VPN (browser-based connecting with SSL)

- Cisco ASA5500 Easy VPN hardware client (connecting with IPsec/IKEv1)
- Cisco VPM 3002 hardware client (connecting with IPsec/IKEv1)

We also provide a default group policy named *DfltGrpPolicy*.

To configure an remote-access connection profile, first configure the tunnel-group general attributes, then the remote-access attributes. See the following sections:

- [Specifying a Name and Type for the Remote Access Connection Profile, page 67-8.](#)
- [Configuring Remote-Access Connection Profile General Attributes, page 67-8.](#)
- [Configuring Double Authentication, page 67-12](#)
- [Configuring Remote-Access Connection Profile IPsec IKEv1 Attributes, page 67-13.](#)
- [Configuring IPsec Remote-Access Connection Profile PPP Attributes, page 67-15](#)

## Specifying a Name and Type for the Remote Access Connection Profile

Create the connection profile, specifying its name and type, by entering the **tunnel-group** command. For an remote-access tunnel, the type is **remote-access**:

```
hostname(config)# tunnel-group tunnel_group_name type remote-access
hostname(config)#
```

For example, to create an remote-access connection profile named TunnelGroup1, enter the following command:

```
hostname(config)# tunnel-group TunnelGroup1 type remote-access
hostname(config)#
```

## Configuring Remote-Access Connection Profile General Attributes

To configure or change the connection profile general attributes, specify the parameters in the following steps.

- Step 1** To configure the general attributes, enter the **tunnel-group general-attributes** command, which enters tunnel-group general-attributes configuration mode. The prompt changes to indicate the change in mode.

```
hostname(config)# tunnel-group tunnel_group_name general-attributes
hostname(config-tunnel-general)#
```

- Step 2** Specify the name of the authentication-server group, if any, to use. If you want to use the LOCAL database for authentication if the specified server group fails, append the keyword **LOCAL**:

```
hostname(config-tunnel-general)# authentication-server-group [(interface_name)] groupname
[LOCAL]
hostname(config-tunnel-general)#
```

The name of the authentication server group can be up to 16 characters long.

You can optionally configure interface-specific authentication by including the name of an interface after the group name. The interface name, which specifies where the tunnel terminates, must be enclosed in parentheses. The following command configures interface-specific authentication for the interface named test using the server named servergroup1 for authentication:

```
hostname(config-tunnel-general)# authentication-server-group (test) servergroup1
hostname(config-tunnel-general)#
```

- Step 3** Specify the name of the authorization-server group, if any, to use. When you configure this value, users must exist in the authorization database to connect:

```
hostname(config-tunnel-general)# authorization-server-group groupname
hostname(config-tunnel-general)#
```

The name of the authorization server group can be up to 16 characters long. For example, the following command specifies the use of the authorization-server group FinGroup:

```
hostname(config-tunnel-general)# authorization-server-group FinGroup
hostname(config-tunnel-general)#
```

- Step 4** Specify the name of the accounting-server group, if any, to use:

```
hostname(config-tunnel-general)# accounting-server-group groupname
hostname(config-tunnel-general)#
```

The name of the accounting server group can be up to 16 characters long. For example, the following command specifies the use of the accounting-server group named comptroller:

```
hostname(config-tunnel-general)# accounting-server-group comptroller
hostname(config-tunnel-general)#
```

- Step 5** Specify the name of the default group policy:

```
hostname(config-tunnel-general)# default-group-policy policyname
hostname(config-tunnel-general)#
```

The name of the group policy can be up to 64 characters long. The following example sets DfltGrpPolicy as the name of the default group policy:

```
hostname(config-tunnel-general)# default-group-policy DfltGrpPolicy
hostname(config-tunnel-general)#
```

- Step 6** Specify the names or IP addresses of the DHCP server (up to 10 servers), and the names of the DHCP address pools (up to 6 pools). The defaults are no DHCP server and no address pool. The **dhcp-server** command will allow you to configure the security appliance to send additional options to the specified DHCP servers when it is trying to get IP addresses for VPN clients. See the **dhcp-server** command in the *Cisco Security Appliance Command Reference* guide for more information.

```
hostname(config-tunnel-general)# dhcp-server server1 [...server10]
hostname(config-tunnel-general)# address-pool [(interface name)] address_pool1
[...address_pool6]
hostname(config-tunnel-general)#
```




---

**Note** If you specify an interface name, you must enclosed it within parentheses.

---

You configure address pools with the **ip local pool** command in global configuration mode.

- Step 7** Specify the name of the NAC authentication server group, if you are using Network Admission Control, to identify the group of authentication servers to be used for Network Admission Control posture validation. Configure at least one Access Control Server to support NAC. Use the **aaa-server** command to name the ACS group. Then use the **nac-authentication-server-group** command, using the same name for the server group.

The following example identifies acs-group1 as the authentication server group to be used for NAC posture validation:

```
hostname(config-group-policy)# nac-authentication-server-group acs-group1
hostname(config-group-policy)
```

The following example inherits the authentication server group from the default remote access group.

```
hostname(config-group-policy)# no nac-authentication-server-group
hostname(config-group-policy)
```




---

**Note** NAC requires a Cisco Trust Agent on the remote host.

---

- Step 8** Specify whether to strip the group or the realm from the username before passing it on to the AAA server. The default is not to strip either the group name or the realm.

```
hostname(config-tunnel-general)# strip-group
hostname(config-tunnel-general)# strip-realm
hostname(config-tunnel-general)#
```

A realm is an administrative domain. If you strip the realm, the ASA uses the username and the group (if present) authentication. If you strip the group, the ASA uses the username and the realm (if present) for authentication. Enter the **strip-realm** command to remove the realm qualifier, and use the **strip-group** command to remove the group qualifier from the username during authentication. If you remove both qualifiers, authentication is based on the *username* alone. Otherwise, authentication is based on the full *username@realm* or *username<delimiter> group* string. You must specify **strip-realm** if your server is unable to parse delimiters.

- Step 9** Optionally, if your server is a RADIUS, RADIUS with NT, or LDAP server, you can enable password management.




---

**Note** If you are using an LDAP directory server for authentication, password management is supported with the Sun Microsystems JAVA System Directory Server (formerly named the Sun ONE Directory Server) and the Microsoft Active Directory.

Sun—The DN configured on the ASA to access a Sun directory server must be able to access the default password policy on that server. We recommend using the directory administrator, or a user with directory administrator privileges, as the DN. Alternatively, you can place an ACI on the default password policy.

Microsoft—You must configure LDAP over SSL to enable password management with Microsoft Active Directory.

See the [“Configuring Authorization with LDAP for VPN”](#) section on page 35-16 for more information.

---

This feature, which is disabled by default, warns a user when the current password is about to expire. The default is to begin warning the user 14 days before expiration:

```
hostname(config-tunnel-general)# password-management
hostname(config-tunnel-general)#
```

If the server is an LDAP server, you can specify the number of days (0 through 180) before expiration to begin warning the user about the pending expiration:

```
hostname(config-tunnel-general)# password-management [password-expire in days n]
hostname(config-tunnel-general)#
```




---

**Note** The **password-management** command, entered in tunnel-group general-attributes configuration mode replaces the deprecated **radius-with-expiry** command that was formerly entered in tunnel-group ipsec-attributes mode.

---

When you configure the **password-management** command, the ASA notifies the remote user at login that the user's current password is about to expire or has expired. The ASA then offers the user the opportunity to change the password. If the current password has not yet expired, the user can still log in using that password. The ASA ignores this command if RADIUS or LDAP authentication has not been configured.

Note that this does not change the number of days before the password expires, but rather, the number of days ahead of expiration that the ASA starts warning the user that the password is about to expire.

If you do specify the **password-expire-in-days** keyword, you must also specify the number of days.

Specifying this command with the number of days set to 0 disables this command. The ASA does not notify the user of the pending expiration, but the user can change the password after it expires.

See [Configuring Microsoft Active Directory Settings for Password Management, page 67-28](#) for more information.




---

**Note** The ASA, releases 7.1 and later, generally supports password management for the AnyConnect VPN Client, the Cisco IPsec VPN Client, the SSL VPN full-tunneling client, and Clientless connections when authenticating with LDAP or with any RADIUS connection that supports MS-CHAPv2. Password management is *not* supported for any of these connection types for Kerberos/AD (Windows password) or NT 4.0 Domain.

Some RADIUS servers that support MS-CHAP do not currently support MS-CHAPv2. The **password-management** command requires MS-CHAPv2, so please check with your vendor.

The RADIUS server (for example, Cisco ACS) could proxy the authentication request to another authentication server. However, from the ASA perspective, it is talking only to a RADIUS server.

For LDAP, the method to change a password is proprietary for the different LDAP servers on the market. Currently, the ASA implements the proprietary password management logic only for Microsoft Active Directory and Sun LDAP servers. Native LDAP requires an SSL connection. You must enable LDAP over SSL before attempting to do password management for LDAP. By default, LDAP uses port 636.

---

**Step 10** Optionally, configure the ability to override an account-disabled indicator from a AAA server, by entering the **override-account-disable** command:

```
hostname(config-tunnel-general)# override-account-disable
hostname(config-tunnel-general)#
```




---

**Note** Allowing override-account-disable is a potential security risk.

---

**Step 11** Specify the attribute or attributes to use in deriving a name for an authorization query from a certificate. This attribute specifies what part of the subject DN field to use as the username for authorization:

```
hostname(config-tunnel-general)# authorization-dn-attributes {primary-attribute
[secondary-attribute] | use-entire-name}
```

For example, the following command specifies the use of the CN attribute as the username for authorization:

```
hostname(config-tunnel-general)# authorization-dn-attributes CN
hostname(config-tunnel-general)#
```

The authorization-dn-attributes are **C** (Country), **CN** (Common Name), **DNQ** (DN qualifier), **EA** (E-mail Address), **GENQ** (Generational qualifier), **GN** (Given Name), **I** (Initials), **L** (Locality), **N** (Name), **O** (Organization), **OU** (Organizational Unit), **SER** (Serial Number), **SN** (Surname), **SP** (State/Province), **T** (Title), **UID** (User ID), and **UPN** (User Principal Name).

- Step 12** Specify whether to require a successful authorization before allowing a user to connect. The default is not to require authorization.

```
hostname(config-tunnel-general)# authorization-required
hostname(config-tunnel-general)#
```

## Configuring Double Authentication

Double authentication is an optional feature that requires a user to enter an additional authentication credential, such as a second username and password, on the login screen. Specify the following commands to configure double authentication.

- Step 1** Specify the secondary authentication server group. This command specifies the AAA server group to use as the secondary AAA server.



**Note**

This command applies only to AnyConnect client VPN connections.

The secondary server group cannot specify an SDI server group. By default, no secondary authentication is required.

```
hostname(config-tunnel-general)# secondary-authentication-server-group [interface_name]
{none | LOCAL | groupname [LOCAL]} [use-primary-name]
```

If you use the none keyword, no secondary authentication is required. The *groupname* value specifies the AAA server group name. Local specifies the use of the internal server database, and when used with the groupname value, LOCAL specifies fallback. For example, to set the primary authentication server group to sdi\_group and the secondary authentication server group to ldap\_server, enter the following commands:

```
hostname(config-tunnel-general)# authentication-server-group
hostname(config-tunnel-general)# secondary-authentication-server-group
```



**Note**

If you specify the **use-primary-name** keyword, then the login dialog requests only one username. In addition, if the usernames are extracted from a digital certificate, only the primary username is used for authentication.

- Step 2** If obtaining the secondary username from a certificate, specify the secondary-username-from-certificate command:

```
hostname(config-tunnel-general)# secondary-username-from-certificate C | CN | ... |
use-script
```

The values for the DN fields to extract from the certificate for use as a secondary username are the same as for the primary **username-from-certificate** command. Alternatively, you can specify the use-script keyword, which directs the ASA to use a script file generated by ASDM.

For example, to specify the Common Name as the primary username field and Organizational Unit as the secondary username field, enter the following commands:

```
hostname(config-tunnel-general)# tunnel-group test1 general-attributes
hostname(config-tunnel-general)# username-from-certificate cn
hostname(config-tunnel-general)# secondary-username-from-certificate ou
```

- Step 3** Specify the **secondary-pre-fill-username** command in tunnel-group webvpn-attributes mode to enable extracting a secondary username from a client certificate for use in authentication. Use the keywords to specify whether this command applies to a clientless connection or an SSL VPN (AnyConnect) client connection and whether you want to hide the extracted username from the end user. This feature is disabled by default. Clientless and SSL-client options can both exist at the same time, but you must configure them in separate commands.

```
hostname(config-tunnel-general)# secondary-pre-fill-username-from-certificate {clientless
| ssl-client} [hide]
```

For example, to specify the use of pre-fill-username for both the primary and secondary authentication for a connection, enter the following commands:

```
hostname(config-tunnel-general)# tunnel-group test1 general-attributes
hostname(config-tunnel-general)# pre-fill-username ssl-client
hostname(config-tunnel-general)# secondary-pre-fill-username ssl-client
```

- Step 4** Specify which authentication server to use to obtain the authorization attributes to apply to the connection. The primary authentication server is the default selection. This command is meaningful only for double authentication.

```
hostname(config-tunnel-general)# authentication-attr-from-server {primary | secondary}
```

For example, to specify the use of the secondary authentication server, enter the following commands:

```
hostname(config-tunnel-general)# tunnel-group test1 general-attributes
hostname(config-tunnel-general)# authentication-attr-from-server secondary
```

- Step 5** Specify which authentication username, primary or secondary, to associate with the session. The default value is primary. With double authentication enabled, it is possible that two distinct usernames are authenticated for the session. The administrator must designate one of the authenticated usernames as the session username. The session username is the username provided for accounting, session database, syslogs, and debug output.

```
hostname(config-tunnel-general)# authenticated-session-username {primary | secondary}
```

For example, to specify that the authentication username associated with the session must come from the secondary authentication server, enter the following commands:

```
hostname(config-tunnel-general)# tunnel-group test1 general-attributes
hostname(config-tunnel-general)# authenticated-session-username secondary
```

## Configuring Remote-Access Connection Profile IPsec IKEv1 Attributes

To configure the IPsec IKEv1 attributes for a remote-access connection profile, do the following steps. The following description assumes that you have already created the remote-access connection profile. Remote-access connection profiles have more attributes than LAN-to-LAN connection profiles:

- Step 1** To specify the IPsec attributes of an remote-access tunnel-group, enter tunnel-group ipsec-attributes mode by entering the following command. The prompt changes to indicate the mode change:

```
hostname(config)# tunnel-group tunnel-group-name ipsec-attributes
hostname(config-tunnel-ipsec)#
```

This command enters tunnel-group ipsec-attributes configuration mode, in which you configure the remote-access tunnel-group IPsec attributes.

For example, the following command designates that the tunnel-group ipsec-attributes mode commands that follow pertain to the connection profile named TG1. Notice that the prompt changes to indicate that you are now in tunnel-group ipsec-attributes mode:

```
hostname(config)# tunnel-group TG1 type remote-access
hostname(config)# tunnel-group TG1 ipsec-attributes
hostname(config-tunnel-ipsec)#
```

- Step 2** Specify the preshared key to support IKEv1 connections based on preshared keys. For example, the following command specifies the preshared key *xyzx* to support IKEv1 connections for an IPsec IKEv1 remote access connection profile:

```
hostname(config-tunnel-ipsec)# ikev1 pre-shared-key xyzx
hostname(config-tunnel-ipsec)#
```

- Step 3** Specify whether to validate the identity of the peer using the peer's certificate:

```
hostname(config-tunnel-ipsec)# peer-id-validate option
hostname(config-tunnel-ipsec)#
```

The available options are **req** (required), **cert** (if supported by certificate), and **nocheck** (do not check). The default is **req**.

For example, the following command specifies that peer-id validation is required:

```
hostname(config-tunnel-ipsec)# peer-id-validate req
hostname(config-tunnel-ipsec)#
```

- Step 4** Specify whether to enable sending of a certificate chain. The following command includes the root certificate and any subordinate CA certificates in the transmission:

```
hostname(config-tunnel-ipsec)# chain
hostname(config-tunnel-ipsec)#
```

This attribute applies to all IPsec tunnel-group types.

- Step 5** Specify the name of a trustpoint that identifies the certificate to be sent to the IKE peer:

```
hostname(config-tunnel-ipsec)# ikev1 trust-point trust-point-name
hostname(config-tunnel-ipsec)#
```

The following command specifies *mytrustpoint* as the name of the certificate to be sent to the IKE peer:

```
hostname(config-ipsec)# ikev1 trust-point mytrustpoint
```

- Step 6** Specify the ISAKMP keepalive threshold and the number of retries allowed.

```
hostname(config-tunnel-ipsec)# isakmp keepalive threshold <number> retry <number>
hostname(config-tunnel-ipsec)#
```

The **threshold** parameter specifies the number of seconds (10 through 3600) that the peer is allowed to idle before beginning keepalive monitoring. The **retry** parameter is the interval (2 through 10 seconds) between retries after a keepalive response has not been received. IKE keepalives are enabled by default. To disable IKE keepalives, enter the **no** form of the **isakmp** command:

For example, the following command sets the IKE keepalive threshold value to 15 seconds and sets the retry interval to 10 seconds:

```
hostname(config-tunnel-ipsec)# isakmp keepalive threshold 15 retry 10
hostname(config-tunnel-ipsec)#
```

The default value for the **threshold** parameter is 300 for remote-access and 10 for LAN-to-LAN, and the default value for the retry parameter is 2.

To specify that the central site (“head end”) should never initiate ISAKMP monitoring, enter the following command:

```
hostname(config-tunnel-ipsec)# isakmp keepalive threshold infinite
hostname(config-tunnel-ipsec)#
```

**Step 7** Specify the ISAKMP hybrid authentication method, XAUTH or hybrid XAUTH.

You use **isakmp ikev1-user-authentication** command to implement hybrid XAUTH authentication when you need to use digital certificates for ASA authentication and a different, legacy method for remote VPN user authentication, such as RADIUS, TACACS+ or SecurID. Hybrid XAUTH breaks phase 1 of IKE down into the following two steps, together called hybrid authentication:

- a. The ASA authenticates to the remote VPN user with standard public key techniques. This establishes an IKE security association that is unidirectionally authenticated.
- b. An XAUTH exchange then authenticates the remote VPN user. This extended authentication can use one of the supported legacy authentication methods.



**Note** Before the authentication type can be set to hybrid, you must configure the authentication server, create a preshared key, and configure a trustpoint.

You can use the **isakmp ikev1-user-authentication** command with the optional **interface** parameter to specify a particular interface. When you omit the **interface** parameter, the command applies to all the interfaces and serves as a back-up when the per-interface command is not specified. When there are two **isakmp ikev1-user-authentication** commands specified for a connection profile, and one uses the **interface** parameter and one does not, the one specifying the interface takes precedence for that particular interface.

For example, the following commands enable hybrid XAUTH on the inside interface for a connection profile called example-group:

```
hostname(config)# tunnel-group example-group type remote-access
hostname(config)# tunnel-group example-group ipsec-attributes
hostname(config-tunnel-ipsec)# isakmp ikev1-user-authentication (inside) hybrid
hostname(config-tunnel-ipsec)#
```

## Configuring IPsec Remote-Access Connection Profile PPP Attributes

To configure the Point-to-Point Protocol attributes for a remote-access connection profile, do the following steps. PPP attributes apply *only* to IPsec remote-access connection profiles. The following description assumes that you have already created the IPsec remote-access connection profile.

**Step 1** Enter tunnel-group ppp-attributes configuration mode, in which you configure the remote-access tunnel-group PPP attributes, by entering the following command. The prompt changes to indicate the mode change:

```
hostname(config)# tunnel-group tunnel-group-name type remote-access
hostname(config)# tunnel-group tunnel-group-name ppp-attributes
hostname(config-tunnel-ppp)#
```

For example, the following command designates that the tunnel-group ppp-attributes mode commands that follow pertain to the connection profile named TG1. Notice that the prompt changes to indicate that you are now in tunnel-group ppp-attributes mode:

```
hostname(config)# tunnel-group TG1 type remote-access
hostname(config)# tunnel-group TG1 ppp-attributes
hostname(config-tunnel-ppp)#
```

**Step 2** Specify whether to enable authentication using specific protocols for the PPP connection. The protocol value can be:

- pap—Enables the use of Password Authentication Protocol for the PPP connection.
- chap—Enables the use of Challenge Handshake Authentication Protocol for the PPP connection.
- ms-chap-v1 or ms-chap-v2—Enables the use of Microsoft Challenge Handshake Authentication Protocol, version 1 or version 2 for the PPP connection.
- eap—Enables the use of Extensible Authentication protocol for the PPP connection.

CHAP and MSCHAPv1 are enabled by default.

The syntax of this command is:

```
hostname(config-tunnel-ppp)# authentication protocol
hostname(config-tunnel-ppp)#
```

To disable authentication for a specific protocol, use the **no** form of the command:

```
hostname(config-tunnel-ppp)# no authentication protocol
hostname(config-tunnel-ppp)#
```

For example, the following command enables the use of the PAP protocol for a PPP connection.

```
hostname(config-tunnel-ppp)# authentication pap
hostname(config-tunnel-ppp)#
```

The following command enables the use of the MS-CHAP, version 2 protocol for a PPP connection:

```
hostname(config-tunnel-ppp)# authentication ms-chap-v2
hostname(config-tunnel-ppp)#
```

The following command enables the use of the EAP-PROXY protocol for a PPP connection:

```
hostname(config-tunnel-ppp)# authentication pap
hostname(config-tunnel-ppp)#
```

The following command disables the use of the MS-CHAP, version 1 protocol for a PPP connection:

```
hostname(config-tunnel-ppp)# no authentication ms-chap-v1
hostname(config-tunnel-ppp)#
```

## Configuring LAN-to-LAN Connection Profiles

An IPsec LAN-to-LAN VPN connection profile applies only to LAN-to-LAN IPsec client connections. While many of the parameters that you configure are the same as for IPsec remote-access connection profiles, LAN-to-LAN tunnels have fewer parameters. The following sections show you how to configure a LAN-to-LAN connection profile:

- [Specifying a Name and Type for a LAN-to-LAN Connection Profile, page 67-17](#)
- [Configuring LAN-to-LAN Connection Profile General Attributes, page 67-17](#)
- [Configuring LAN-to-LAN IPsec IKEv1 Attributes, page 67-18](#)

### Default LAN-to-LAN Connection Profile Configuration

The contents of the default LAN-to-LAN connection profile are as follows:

```
tunnel-group DefaultL2LGroup type ipsec-l2l
tunnel-group DefaultL2LGroup general-attributes
 no accounting-server-group
 default-group-policy DfltGrpPolicy
tunnel-group DefaultL2LGroup ipsec-attributes
 no ikev1 pre-shared-key
 peer-id-validate req
 no chain
 no ikev1 trust-point
 isakmp keepalive threshold 10 retry 2
```

LAN-to-LAN connection profiles have fewer parameters than remote-access connection profiles, and most of these are the same for both groups. For your convenience in configuring the connection, they are listed separately here. Any parameters that you do not explicitly configure inherit their values from the default connection profile.

### Specifying a Name and Type for a LAN-to-LAN Connection Profile

To specify a name and a type for a connection profile, enter the **tunnel-group** command, as follows:

```
hostname(config)# tunnel-group tunnel_group_name type tunnel_type
```

For a LAN-to-LAN tunnel, the type is **ipsec-l2l**.; for example, to create the LAN-to-LAN connection profile named docs, enter the following command:

```
hostname(config)# tunnel-group docs type ipsec-l2l
hostname(config)#
```

### Configuring LAN-to-LAN Connection Profile General Attributes

To configure the connection profile general attributes, do the following steps:

- Step 1** Enter tunnel-group general-attributes mode by specifying the general-attributes keyword:

```
hostname(config)# tunnel-group tunnel-group-name general-attributes
hostname(config-tunnel-general)#
```

The prompt changes to indicate that you are now in config-general mode, in which you configure the tunnel-group general attributes.

For example, for the connection profile named docs, enter the following command:

```
hostname(config)# tunnel-group_docs general-attributes
hostname(config-tunnel-general)#
```

**Step 2** Specify the name of the accounting-server group, if any, to use:

```
hostname(config-tunnel-general)# accounting-server-group groupname
hostname(config-tunnel-general)#
```

For example, the following command specifies the use of the accounting-server group acctgserv1:

```
hostname(config-tunnel-general)# accounting-server-group acctgserv1
hostname(config-tunnel-general)#
```

**Step 3** Specify the name of the default group policy:

```
hostname(config-tunnel-general)# default-group-policy polycname
hostname(config-tunnel-general)#
```

For example, the following command specifies that the name of the default group policy is MyPolicy:

```
hostname(config-tunnel-general)# default-group-policy MyPolicy
hostname(config-tunnel-general)#
```

## Configuring LAN-to-LAN IPsec IKEv1 Attributes

To configure the IPsec IKEv1 attributes, do the following steps:

**Step 1** To configure the tunnel-group IPsec IKEv1 attributes, enter tunnel-group ipsec-attributes configuration mode by entering the tunnel-group command with the IPsec-attributes keyword.

```
hostname(config)# tunnel-group tunnel-group-name ipsec-attributes
hostname(config-tunnel-ipsec)#
```

For example, the following command enters config-ipsec mode so you can configure the parameters for the connection profile named TG1:

```
hostname(config)# tunnel-group TG1 ipsec-attributes
hostname(config-tunnel-ipsec)#
```

The prompt changes to indicate that you are now in tunnel-group ipsec-attributes configuration mode.

**Step 2** Specify the preshared key to support IKEv1 connections based on preshared keys.

```
hostname(config-tunnel-ipsec)# ikev1 pre-shared-key key
hostname(config-tunnel-ipsec)#
```

For example, the following command specifies the preshared key XYZX to support IKEv1 connections for an LAN-to-LAN connection profile:

```
hostname(config-tunnel-ipsec)# ikev1 pre-shared-key xyzx
hostname(config-tunnel-general)#
```

**Step 3** Specify whether to validate the identity of the peer using the peer's certificate:

```
hostname(config-tunnel-ipsec)# peer-id-validate option
hostname(config-tunnel-ipsec)#
```

The available options are **req** (required), **cert** (if supported by certificate), and **nocheck** (do not check). The default is **req**. For example, the following command sets the peer-id-validate option to **nocheck**:

```
hostname(config-tunnel-ipsec)# peer-id-validate nocheck
hostname(config-tunnel-ipsec)#
```

- Step 4** Specify whether to enable sending of a certificate chain. This action includes the root certificate and any subordinate CA certificates in the transmission:

```
hostname(config-tunnel-ipsec)# chain
hostname(config-tunnel-ipsec)#
```

You can apply this attribute to all tunnel-group types.

- Step 5** Specify the name of a trustpoint that identifies the certificate to be sent to the IKE peer:

```
hostname(config-tunnel-ipsec)# trust-point trust-point-name
hostname(config-tunnel-ipsec)#
```

For example, the following command sets the trustpoint name to mytrustpoint:

```
hostname(config-tunnel-ipsec)# trust-point mytrustpoint
hostname(config-tunnel-ipsec)#
```

You can apply this attribute to all tunnel-group types.

- Step 6** Specify the ISAKMP (IKE) keepalive threshold and the number of retries allowed. The **threshold** parameter specifies the number of seconds (10 through 3600) that the peer is allowed to idle before beginning keepalive monitoring. The **retry** parameter is the interval (2 through 10 seconds) between retries after a keepalive response has not been received. IKE keepalives are enabled by default. To disable ISAKMP keepalives, enter **isakmp keepalive disable**.

For example, the following command sets the ISAKMP keepalive threshold to 15 seconds and sets the retry interval to 10 seconds:

```
hostname(config-tunnel-ipsec)# isakmp keepalive threshold 15 retry 10
hostname(config-tunnel-ipsec)#
```

The default value for the **threshold** parameter for LAN-to-LAN is 10, and the default value for the retry parameter is 2.

To specify that the central site (“head end”) should never initiate ISAKMP monitoring, enter the following command:

```
hostname(config-tunnel-ipsec)# isakmp keepalive threshold infinite
hostname(config-tunnel-ipsec)#
```

- Step 7** Specify the ISAKMP hybrid authentication method, XAUTH or hybrid XAUTH.

You use **isakmp ikev1-user-authentication** command to implement hybrid XAUTH authentication when you need to use digital certificates for ASA authentication and a different, legacy method for remote VPN user authentication, such as RADIUS, TACACS+ or SecurID. Hybrid XAUTH breaks phase 1 of IKE down into the following two steps, together called hybrid authentication:

- a. The ASA authenticates to the remote VPN user with standard public key techniques. This establishes an IKE security association that is unidirectionally authenticated.
- b. An XAUTH exchange then authenticates the remote VPN user. This extended authentication can use one of the supported legacy authentication methods.



**Note** Before the authentication type can be set to hybrid, you must configure the authentication server, create a preshared key, and configure a trustpoint.

For example, the following commands enable hybrid XAUTH for a connection profile called example-group:

```
hostname(config)# tunnel-group example-group type remote-access
hostname(config)# tunnel-group example-group ipsec-attributes
hostname(config-tunnel-ipsec)# isakmp ikev1-user-authentication hybrid
hostname(config-tunnel-ipsec)#
```

## Configuring Connection Profiles for Clientless SSL VPN Sessions

The tunnel-group general attributes for clientless SSL VPN connection profiles are the same as those for IPsec remote-access connection profiles, except that the tunnel-group type is webvpn and the **strip-group** and **strip-realm** commands do not apply. You define the attribute specific to clientless SSL VPN separately. The following sections describe how to configure clientless SSL VPN connection profiles:

- [Configuring General Tunnel-Group Attributes for Clientless SSL VPN Sessions, page 67-20](#)
- [Configuring Tunnel-Group Attributes for Clientless SSL VPN Sessions, page 67-23](#)

## Configuring General Tunnel-Group Attributes for Clientless SSL VPN Sessions

To configure or change the connection profile general attributes, specify the parameters in the following steps.

- Step 1** To configure the general attributes, enter **tunnel-group general-attributes** command, which enters tunnel-group general-attributes configuration mode. Note that the prompt changes:

```
hostname(config)# tunnel-group tunnel_group_name general-attributes
hostname(config-tunnel-general)#
```

To configure the general attributes for TunnelGroup3, created in the previous section, enter the following command:

```
hostname(config)# tunnel-group TunnelGroup3 general-attributes
hostname(config-tunnel-general)#
```

- Step 2** Specify the name of the authentication-server group, if any, to use. If you want to use the LOCAL database for authentication if the specified server group fails, append the keyword LOCAL:

```
hostname(config-tunnel-general)# authentication-server-group groupname [LOCAL]
hostname(config-tunnel-general)#
```

For example, to configure the authentication server group named test, and to provide fallback to the LOCAL server if the authentication server group fails, enter the following command:

```
hostname(config-tunnel-general)# authentication-server-group test LOCAL
hostname(config-tunnel-general)#
```

The authentication-server-group name identifies a previously configured authentication server or group of servers. Use the **aaa-server** command to configure authentication servers. The maximum length of the group tag is 16 characters.

You can also configure interface-specific authentication by including the name of an interface in parentheses before the group name. The following interfaces are available by default:

- inside—Name of interface GigabitEthernet0/1
- outside— Name of interface GigabitEthernet0/0

Other interfaces you have configured (using the **interface** command) are also available. The following command configures interface-specific authentication for the interface named outside using the server servergroup1 for authentication:

```
hostname(config-tunnel-general) # authentication-server-group (outside) servergroup1
hostname(config-tunnel-general) #
```

**Step 3** Optionally, specify the name of the authorization-server group, if any, to use. If you are not using authorization, go to Step 6. When you configure this value, users must exist in the authorization database to connect:

```
hostname(config-tunnel-general) # authorization-server-group groupname
hostname(config-tunnel-general) #
```

Use the **aaa-server** command to configure authorization servers. The maximum length of the group tag is 16 characters.

For example, the following command specifies the use of the authorization-server group FinGroup:

```
hostname(config-tunnel-general) # authorization-server-group FinGroup
hostname(config-tunnel-general) #
```

**Step 4** Specify whether to require a successful authorization before allowing a user to connect. The default is not to require authorization.

```
hostname(config-tunnel-general) # authorization-required
hostname(config-tunnel-general) #
```

**Step 5** Specify the attribute or attributes to use in deriving a name for an authorization query from a certificate. This attribute specifies what part of the subject DN field to use as the username for authorization:

```
hostname(config-tunnel-general) # authorization-dn-attributes {primary-attribute
[secondary-attribute] | use-entire-name}
```

For example, the following command specifies the use of the CN attribute as the username for authorization:

```
hostname(config-tunnel-general) # authorization-dn-attributes CN
hostname(config-tunnel-general) #
```

The authorization-dn-attributes are **C** (Country), **CN** (Common Name), **DNQ** (DN qualifier), **EA** (E-mail Address), **GENQ** (Generational qualifier), **GN** (Given Name), **I** (Initials), **L** (Locality), **N** (Name), **O** (Organization), **OU** (Organizational Unit), **SER** (Serial Number), **SN** (Surname), **SP** (State/Province), **T** (Title), **UID** (User ID), and **UPN** (User Principal Name).

**Step 6** Optionally, specify the name of the accounting-server group, if any, to use. If you are not using accounting, go to Step 7. Use the **aaa-server** command to configure accounting servers. The maximum length of the group tag is 16 characters.:

```
hostname(config-tunnel-general) # accounting-server-group groupname
hostname(config-tunnel-general) #
```

For example, the following command specifies the use of the accounting-server group comptroller:

```
hostname(config-tunnel-general)# accounting-server-group comptroller
hostname(config-tunnel-general)#
```

**Step 7** Optionally, specify the name of the default group policy. The default value is DfltGrpPolicy:

```
hostname(config-tunnel-general)# default-group-policy policyname
hostname(config-tunnel-general)#
```

The following example sets MyDfltGrpPolicy as the name of the default group policy:

```
hostname(config-tunnel-general)# default-group-policy MyDfltGrpPolicy
hostname(config-tunnel-general)#
```

**Step 8** Optionally, specify the name or IP address of the DHCP server (up to 10 servers), and the names of the DHCP address pools (up to 6 pools). Separate the list items with spaces. The defaults are no DHCP server and no address pool.

```
hostname(config-tunnel-general)# dhcp-server server1 [...server10]
hostname(config-tunnel-general)# address-pool [(interface name)] address_pool1
[...address_pool6]
hostname(config-tunnel-general)#
```




---

**Note** The interface name must be enclosed in parentheses.

---

You configure address pools with the **ip local pool** command in global configuration mode. See [Chapter 68, “Configuring IP Addresses for VPNs”](#) for information about configuring address pools.

**Step 9** Optionally, if your server is a RADIUS, RADIUS with NT, or LDAP server, you can enable password management.



**Note**

---

If you are using an LDAP directory server for authentication, password management is supported with the Sun Microsystems JAVA System Directory Server (formerly named the Sun ONE Directory Server) and the Microsoft Active Directory.

- Sun—The DN configured on the ASA to access a Sun directory server must be able to access the default password policy on that server. We recommend using the directory administrator, or a user with directory administrator privileges, as the DN. Alternatively, you can place an ACI on the default password policy.
- Microsoft—You must configure LDAP over SSL to enable password management with Microsoft Active Directory.

See the [“Configuring Authorization with LDAP for VPN”](#) section on page 35-16 for more information.

---

This feature, which is enabled by default, warns a user when the current password is about to expire. The default is to begin warning the user 14 days before expiration:

```
hostname(config-tunnel-general)# password-management
hostname(config-tunnel-general)#
```

If the server is an LDAP server, you can specify the number of days (0 through 180) before expiration to begin warning the user about the pending expiration:

```
hostname(config-tunnel-general)# password-management [password-expire in days n]
hostname(config-tunnel-general)#
```



**Note** The **password-management** command, entered in tunnel-group general-attributes configuration mode replaces the deprecated **radius-with-expiry** command that was formerly entered in tunnel-group ipsec-attributes mode.

When you configure this command, the ASA notifies the remote user at login that the user's current password is about to expire or has expired. The ASA then offers the user the opportunity to change the password. If the current password has not yet expired, the user can still log in using that password. The ASA ignores this command if RADIUS or LDAP authentication has not been configured.

Note that this does not change the number of days before the password expires, but rather, the number of days ahead of expiration that the ASA starts warning the user that the password is about to expire.

If you do specify the **password-expire-in-days** keyword, you must also specify the number of days.

See [Configuring Microsoft Active Directory Settings for Password Management, page 67-28](#) for more information.

- Step 10** Specifying this command with the number of days set to 0 disables this command. The ASA does not notify the user of the pending expiration, but the user can change the password after it expires. Optionally, configure the ability to override an account-disabled indicator from the AAA server, by entering the **override-account-disable** command:

```
hostname(config-tunnel-general)# override-account-disable
hostname(config-tunnel-general)#
```



**Note** Allowing override account-disabled is a potential security risk.

## Configuring Tunnel-Group Attributes for Clientless SSL VPN Sessions

To configure the parameters specific to a clientless SSL VPN connection profile, follow the steps in this section. Clientless SSL VPN was formerly known as WebVPN, and you configure these attributes in tunnel-group webvpn-attributes mode.

- Step 1** To specify the attributes of a clientless SSL VPN tunnel-group, enter tunnel-group webvpn-attributes mode by entering the following command. The prompt changes to indicate the mode change:

```
hostname(config)# tunnel-group tunnel-group-name webvpn-attributes
hostname(config-tunnel-ipsec)#
```

For example, to specify the webvpn-attributes for the clientless SSL VPN tunnel-group named sales, enter the following command:

```
hostname(config)# tunnel-group sales webvpn-attributes
hostname(config-tunnel-webvpn)#
```

- Step 2** To specify the authentication method to use: AAA, digital certificates, or both, enter the **authentication** command. You can specify either aaa or certificate or both, in any order.

```
hostname(config-tunnel-webvpn)# authentication authentication_method
hostname(config-tunnel-webvpn)#
```

For example, The following command allows both AAA and certificate authentication:

```
hostname(config-tunnel-webvpn)# authentication aaa certificate
```

```
hostname(config-tunnel-webvpn)#
```

### Applying Customization

Customizations determine the appearance of the windows that the user sees upon login. You configure the customization parameters as part of configuring clientless SSL VPN.

To apply a previously defined web-page customization to change the look-and-feel of the web page that the user sees at login, enter the customization command in username webvpn configuration mode:

```
hostname(config-username-webvpn)# customization {none | value customization_name}
hostname(config-username-webvpn)#
```

For example, to use the customization named blueborder, enter the following command:

```
hostname(config-username-webvpn)# customization value blueborder
hostname(config-username-webvpn)#
```

You configure the customization itself by entering the **customization** command in webvpn mode.

The following example shows a command sequence that first establishes a customization named “123” that defines a password prompt. The example then defines a clientless SSL VPN tunnel-group named “test” and uses the **customization** command to specify the use of the customization named “123”:

```
hostname(config)# webvpn
hostname(config-webvpn)# customization 123
hostname(config-webvpn-custom)# password-prompt Enter password
hostname(config-webvpn)# exit
hostname(config)# tunnel-group test type webvpn
hostname(config)# tunnel-group test webvpn-attributes
hostname(config-tunnel-webvpn)# customization value 123
hostname(config-tunnel-webvpn)#
```

- Step 3** The ASA queries NetBIOS name servers to map NetBIOS names to IP addresses. Clientless SSL VPN requires NetBIOS to access or share files on remote systems. Clientless SSL VPN uses NetBIOS and the CIFS protocol to access or share files on remote systems. When you attempt a file-sharing connection to a Windows computer by using its computer name, the file server you specify corresponds to a specific NetBIOS name that identifies a resource on the network.

To make the NBNS function operational, you must configure at least one NetBIOS server (host). You can configure up to three NBNS servers for redundancy. The ASA uses the first server on the list for NetBIOS/CIFS name resolution. If the query fails, it uses the next server.

To specify the name of the NBNS (NetBIOS Name Service) server to use for CIFS name resolution, use the **nbns-server** command. You can enter up to three server entries. The first server you configure is the primary server, and the others are backups, for redundancy. You can also specify whether this is a master browser (rather than just a WINS server), the timeout interval, and the number of retries. A WINS server or a master browser is typically on the same network as the ASA, or reachable from that network. You must specify the timeout interval before the number of retries:

```
hostname(config-tunnel-webvpn)# nbns-server {host-name | IP_address} [master]
[timeout seconds] [retry number]
hostname(config-tunnel-webvpn)#
```

For example, to configure the server named nbnsprimary as the primary server and the server 192.168.2.2 as the secondary server, each allowing three retries and having a 5-second timeout, enter the following command:

```
hostname(config)# name 192.168.2.1 nbnsprimary
hostname(config-tunnel-webvpn)# nbns-server nbnsprimary master timeout 5 retry 3
hostname(config-tunnel-webvpn)# nbns-server 192.168.2.2 timeout 5 retry 3
hostname(config-tunnel-webvpn)#
```

The timeout interval can range from 1 through 30 seconds (default 2), and the number of retries can be in the range 0 through 10 (default 2).

The **nbns-server** command in tunnel-group webvpn-attributes configuration mode replaces the deprecated **nbns-server** command in webvpn configuration mode.

- Step 4** To specify alternative names for the group, use the **group-alias** command. Specifying the group alias creates one or more alternate names by which the user can refer to a tunnel-group. The group alias that you specify here appears in the drop-down list on the user's login page. Each group can have multiple aliases or no alias, each specified in separate commands. This feature is useful when the same group is known by several common names, such as "Devtest" and "QA".

For each group alias, enter a **group-alias** command. Each alias is enabled by default. You can optionally explicitly enable or disable each alias:

```
hostname(config-tunnel-webvpn)# group-alias alias [enable | disable]
hostname(config-tunnel-webvpn)#
```

For example, to enable the aliases QA and Devtest for a tunnel-group named QA, enter the following commands:

```
hostname(config-tunnel-webvpn)# group-alias QA enable
hostname(config-tunnel-webvpn)# group-alias Devtest enable
hostname(config-tunnel-webvpn)#
```



**Note**

The webvpn tunnel-group-list must be enabled for the (dropdown) group list to appear.

- Step 5** To specify incoming URLs or IP addresses for the group, use the **group-url** command. Specifying a group URL or IP address eliminates the need for the user to select a group at login. When a user logs in, the ASA looks for the user's incoming URL or address in the tunnel-group-policy table. If it finds the URL or address and if group-url is enabled in the connection profile, then the ASA automatically selects the associated connection profile and presents the user with only the username and password fields in the login window. This simplifies the user interface and has the added advantage of never exposing the list of groups to the user. The login window that the user sees uses the customizations configured for that connection profile.

If the URL or address is disabled and group-alias is configured, then the dropdown list of groups is also displayed, and the user must make a selection.

You can configure multiple URLs or addresses (or none) for a group. Each URL or address can be enabled or disabled individually. You must use a separate **group-url** command for each URL or address specified. You must specify the entire URL or address, including either the http or https protocol.

You cannot associate the same URL or address with multiple groups. The ASA verifies the uniqueness of the URL or address before accepting the URL or address for a connection profile.

For each group URL or address, enter a **group-url** command. You can optionally explicitly enable (the default) or disable each URL or alias:

```
hostname(config-tunnel-webvpn)# group-url url [enable | disable]
hostname(config-tunnel-webvpn)#
```

For example, to enable the group URLs http://www.cisco.com and http://192.168.10.10 for the tunnel-group named RadiusServer, enter the following commands:

```
hostname(config)# tunnel-group RadiusServer type webvpn
hostname(config)# tunnel-group RadiusServer general-attributes
hostname(config-tunnel-general)# authentication server-group RADIUS
hostname(config-tunnel-general)# accounting-server-group RADIUS
```

```
hostname(config-tunnel-general)# tunnel-group RadiusServer webvpn-attributes
hostname(config-tunnel-webvpn)# group-alias "Cisco Remote Access" enable
hostname(config-tunnel-webvpn)# group-url http://www.cisco.com enable
hostname(config-tunnel-webvpn)# group-url http://192.168.10.10 enable
hostname(config-tunnel-webvpn)#
```

For a more extensive example, see [Customizing Login Windows for Users of Clientless SSL VPN sessions](#), page 67-27.

- Step 6** To exempt certain users from running Cisco Secure Desktop on a per connection profile basis if they enter one of the group-urls, enter the following command:

```
hostname(config-tunnel-webvpn)# without-csd
hostname(config-tunnel-webvpn)#
```



**Note** Entering this command prevents the detection of endpoint conditions for these sessions, so you may need to adjust the dynamic access policy (DAP) configuration.

- Step 7** To specify the DNS server group to use for a connection profile for clientless SSL VPN sessions, use the **dns-group** command. The group you specify must be one you already configured in global configuration mode (using the **dns server-group** and **name-server** commands).

By default, the connection profile uses the DNS server group *DefaultDNS*. However, this group must be configured before the security appliance can resolve DNS requests.

The following example configures a new DNS server group named *corp\_dns* and specifies that server group for the connection profile *telecommuters*:

```
hostname(config)# dns server-group corp_dns
hostname(config-dns-server-group)# domain-name cisco.com
hostname(config-dns-server-group)# name-server 209.165.200.224

hostname(config)# tunnel-group telecommuters webvpn-attributes
hostname(config-tunnel-webvpn)# dns-group corp_dns
hostname(config-tunnel-webvpn)#
```

- Step 8** (Optional) To enable extracting a username from a client certificate for use in authentication and authorization, use the **pre-fill-username** command in tunnel-group webvpn-attributes mode. There is no default value.

```
hostname(config)# pre-fill-username {ssl-client | clientless}
```

The **pre-fill-username** command enables the use of a username extracted from the certificate field specified in the **username-from-certificate** command (in tunnel-group general-attributes mode) as the username for username/password authentication and authorization. To use this pre-fill username from certificate feature, you must configure both commands.



**Note** In Release 8.0.4, the username is not pre-filled; instead, any data sent in the username field is ignored.

The following example, entered in global configuration mode, creates an IPsec remote access tunnel group named *remotegrp*, enables getting the username from a certificate, and specifies that the name for an authentication or authorization query for an SSL VPN client must be derived from a digital certificate:

```
hostname(config)# tunnel-group remotegrp type ipsec_ra
hostname(config)# tunnel-group remotegrp general-attributes
hostname(config-tunnel-general)# username-from-certificate CN OU
hostname(config)# tunnel-group remotegrp webvpn-attributes
hostname(config-tunnel-webvpn)# pre-fill-username ssl-client
```

```
hostname(config-tunnel-webvpn)#
```

- Step 9** (Optional) To specify whether to override the group policy or username attributes configuration for downloading an AnyConnect or SSL VPN client, use the `override-svc-download` command. This feature is disabled by default.

The security appliance allows clientless or AnyConnect client connections for remote users based on whether clientless and/or SSL VPN is enabled in the group policy or username attributes with the `vpn-tunnel-protocol` command. The `anyconnect ask` command further modifies the client user experience by prompting the user to download the client or return to the WebVPN home page.

However, you might want clientless users logging in under specific tunnel groups to not experience delays waiting for the download prompt to expire before being presented with the clientless SSL VPN home page. You can prevent delays for these users at the connection profile level with the `override-svc-download` command. This command causes users logging through a connection profile to be immediately presented with the clientless SSL VPN home page regardless of the `vpn-tunnel-protocol` or `anyconnect ask` command settings.

In the following example, the you enter tunnel-group webvpn attributes configuration mode for the connection profile *engineering* and enable the connection profile to override the group policy and username attribute settings for client download prompts:

```
hostname(config)# tunnel-group engineering webvpn-attributes
hostname(config-tunnel-webvpn)# override-svc-download
```

- Step 10** (Optional) To enable the display of a RADIUS reject message on the login screen when authentication is rejected, use the `radius-eject-message` command:

The following example enables the display of a RADIUS rejection message for the connection profile named *engineering*:

```
hostname(config)# tunnel-group engineering webvpn-attributes
hostname(config-tunnel-webvpn)# radius-reject-message
```

## Customizing Login Windows for Users of Clientless SSL VPN sessions

You can set up different login windows for different groups by using a combination of customization profiles and connection profiles. For example, assuming that you had created a customization profile called *salesgui*, you can create a connection profile for clientless SSL VPN sessions called *sales* that uses that customization profile, as the following example shows:

- Step 1** In webvpn mode, define a customization for clientless SSL VPN access, in this case named *salesgui* and change the default logo to *mycompanylogo.gif*. You must have previously loaded *mycompanylogo.gif* onto the flash memory of the ASA and saved the configuration. See “[Chapter 74, “Configuring Clientless SSL VPN”](#)” for details.

```
hostname# webvpn
hostname(config-webvpn)# customization value salesgui
hostname(config-webvpn-custom)# logo file disk0:\mycompanylogo.gif
hostname(config-webvpn-custom)#
```

- Step 2** In global configuration mode, set up a username and associate with it the customization for clientless SSL VPN that you’ve just defined:

```
hostname# username seller attributes
hostname(config-username)# webvpn
```

```
hostname(config-username-webvpn)# customization value salesgui
hostname(config-username-webvpn)# exit
hostname(config-username)# exit
hostname#
```

**Step 3** In global configuration mode, create a tunnel-group for clientless SSL VPN sessions named sales:

```
hostname# tunnel-group sales type webvpn
hostname(config-tunnel-webvpn)#
```

**Step 4** Specify that you want to use the salesgui customization for this connection profile:

```
hostname# tunnel-group sales webvpn-attributes
hostname(config-tunnel-webvpn)# customization salesgui
```

**Step 5** Set the group URL to the address that the user enters into the browser to log in to the ASA; for example, if the ASA has the IP address 192.168.3.3, set the group URL to https://192.168.3.3:

```
hostname(config-tunnel-webvpn)# group-url https://192.168.3.3.
hostname(config-tunnel-webvpn)#
```

If a port number is required for a successful login, include the port number, preceded by a colon. The ASA maps this URL to the sales connection profile and applies the salesgui customization profile to the login screen that the user sees upon logging in to https://192.168.3.3.

## Configuring Microsoft Active Directory Settings for Password Management



### Note

If you are using an LDAP directory server for authentication, password management is supported with the Sun Microsystems JAVA System Directory Server (formerly named the Sun ONE Directory Server) and the Microsoft Active Directory.

- Sun—The DN configured on the ASA to access a Sun directory server must be able to access the default password policy on that server. We recommend using the directory administrator, or a user with directory administrator privileges, as the DN. Alternatively, you can place an ACI on the default password policy.
- Microsoft—You must configure LDAP over SSL to enable password management with Microsoft Active Directory.

See the “[Configuring Authorization with LDAP for VPN](#)” section on page 35-16 for more information.

To use password management with Microsoft Active Directory, you must set certain Active Directory parameters as well as configuring password management on the ASA. This section describes the Active Directory settings associated with various password management actions. These descriptions assume that you have also enabled password management on the ASA and configured the corresponding password management attributes. The specific steps in the following sections refer to Active Directory terminology under Windows 2000.

- [Using Active Directory to Force the User to Change Password at Next Logon](#), page 67-29.
- [Using Active Directory to Specify Maximum Password Age](#), page 67-30.
- [Using Active Directory to Override an Account Disabled AAA Indicator](#), page 67-31
- [Using Active Directory to Enforce Password Complexity](#), page 67-33.


The following sections assume that you are using an LDAP directory server for authentication.

## Using Active Directory to Force the User to Change Password at Next Logon

To force a user to change the user password at the next logon, specify the **password-management** command in tunnel-group general-attributes configuration mode on the ASA and do the following steps under Active Directory:


- Step 1** Select to Start > Programs > Administrative Tools > Active Directory Users and Computers (Figure 67-1).

**Figure 67-1** Active Directory—Administrative Tools Menu

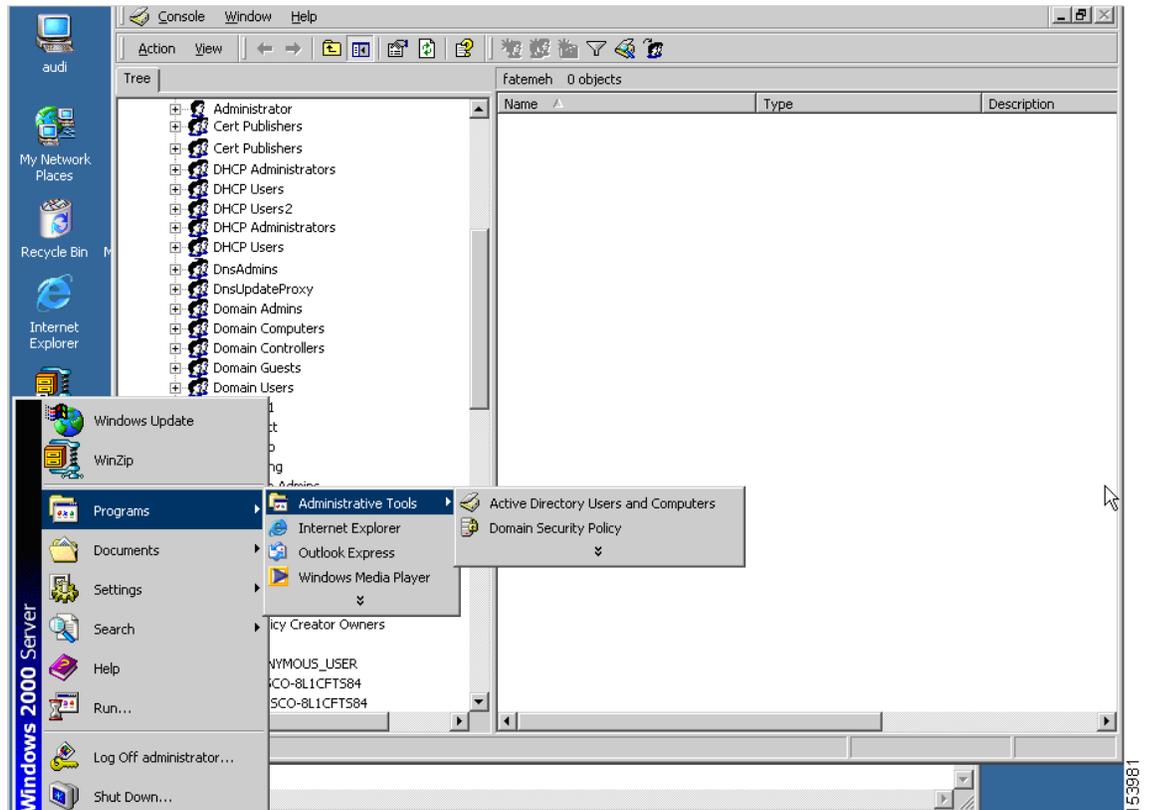

- Step 2** Right-click Username > Properties > Account.
- Step 3** Check the check box for User must change password at next logon (Figure 67-2).

Figure 67-2 Active Directory—User Must Change Password at Next Logon

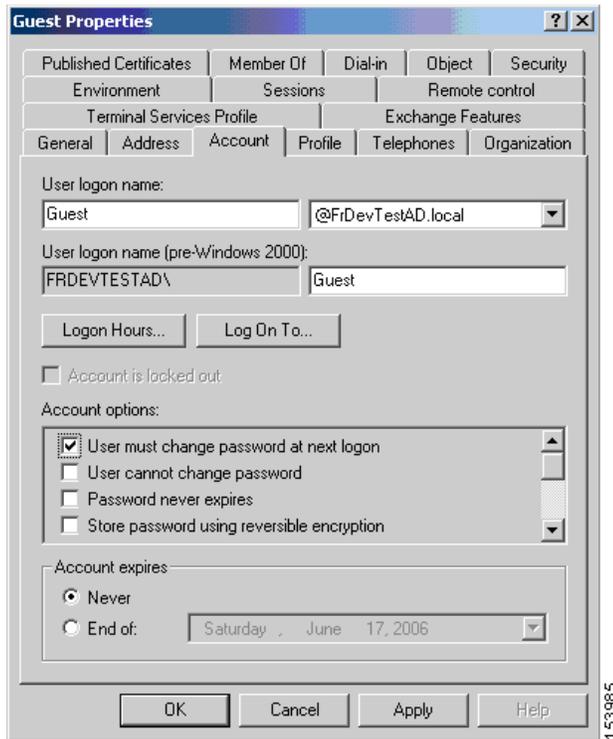


The next time this user logs on, the ASA displays the following prompt: “New password required. Password change required. You must enter a new password with a minimum length  $n$  to continue.” You can set the minimum required password length,  $n$ , as part of the Active Directory configuration at Start > Programs > Administrative Tools > Domain Security Policy > Windows Settings > Security Settings > Account Policies > Password Policy. Select Minimum password length.

## Using Active Directory to Specify Maximum Password Age

To enhance security, you can specify that passwords expire after a certain number of days. To specify a maximum password age for a user password, specify the **password-management** command in tunnel-group general-attributes configuration mode on the ASA and do the following steps under Active Directory:

- Step 1** Select Start > Programs > Administrative Tools > Domain Security Policy > Windows Settings > Security Settings > Account Policies > Password Policy.
- Step 2** Double-click Maximum password age. This opens the Security Policy Setting dialog box.
- Step 3** Check the Define this policy setting check box and specify the maximum password age, in days, that you want to allow.

Figure 67-3 Active Directory—Maximum Password Age

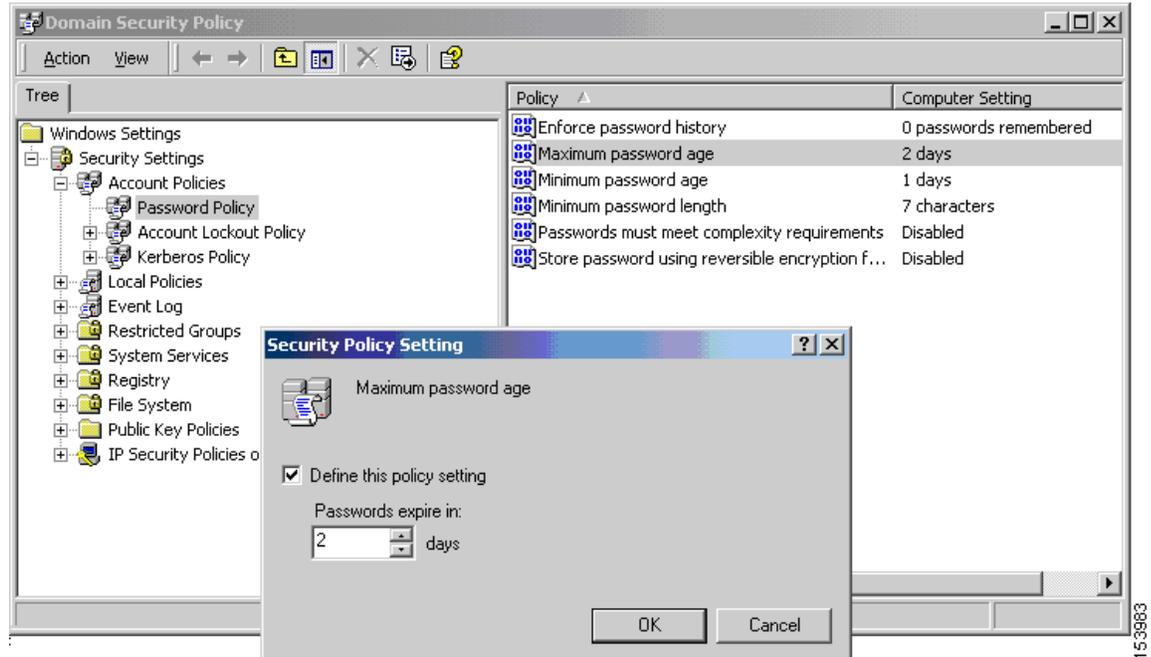

**Note** The `radius-with-expiry` command, formerly configured as part of tunnel-group remote-access configuration to perform the password age function, is deprecated. The `password-management` command, entered in tunnel-group general-attributes mode, replaces it.

## Using Active Directory to Override an Account Disabled AAA Indicator


To override an account-disabled indication from a AAA server, specify the `override-account-disable` command in tunnel-group general-attributes configuration mode on the ASA and do the following steps under Active Directory:



**Note** Allowing override account-disabled is a potential security risk.

- Step 1** Select Start > Programs > Administrative Tools > Active Directory Users and Computers.
- Step 2** Right-click Username > Properties > Account and select Disable Account from the menu.

Figure 67-4 Active Directory—Override Account Disabled

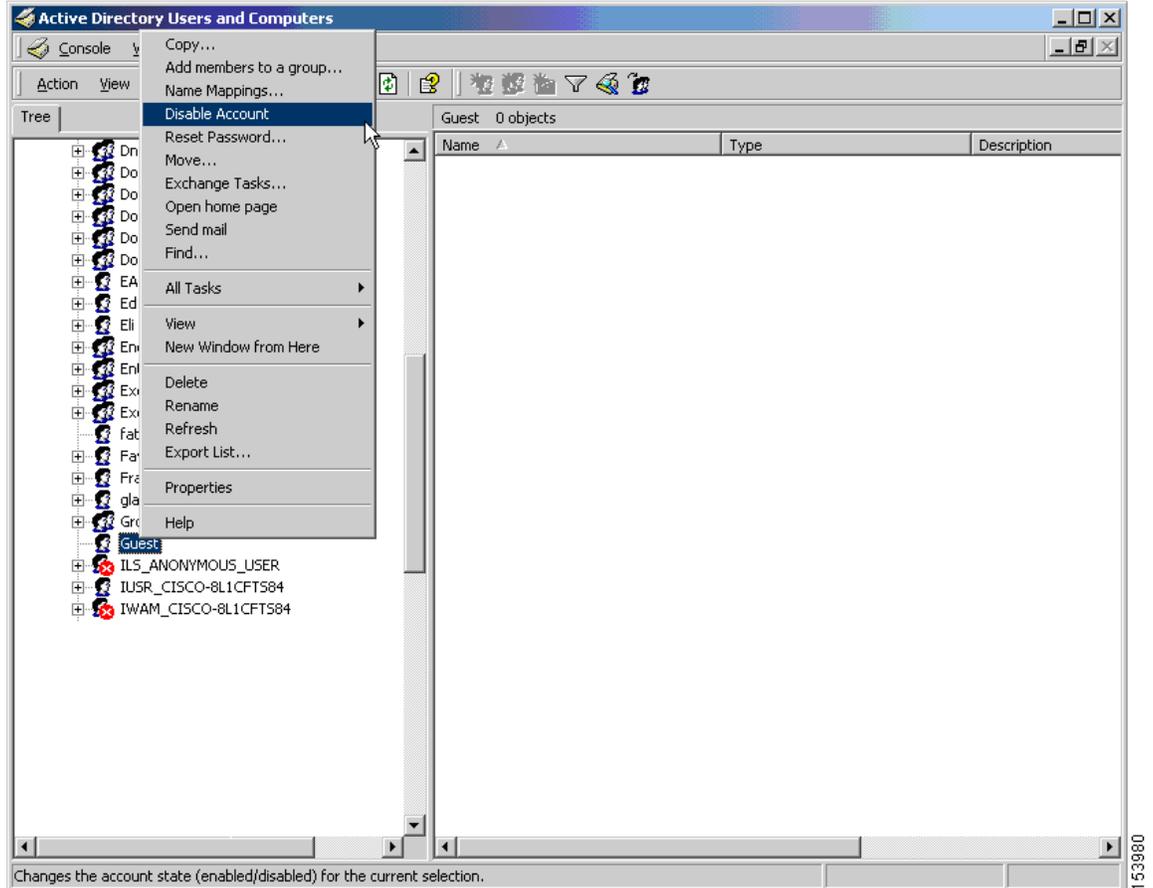


The user should be able to log on successfully, even though a AAA server provides an account-disabled indicator.

## Using Active Directory to Enforce Minimum Password Length

To enforce a minimum length for passwords, specify the **password-management** command in tunnel-group general-attributes configuration mode on the ASA and do the following steps under Active Directory:

- Step 1** Select Start > Programs > Administrative Tools > Domain Security Policy.
- Step 2** Select Windows Settings > Security Settings > Account Policies > Password Policy.
- Step 3** Double-click Minimum Password Length. This opens the Security Policy Setting dialog box.
- Step 4** Check the Define this policy setting check box and specify the minimum number of characters that the password must contain.

Figure 67-5 Active Directory—Minimum Password Length

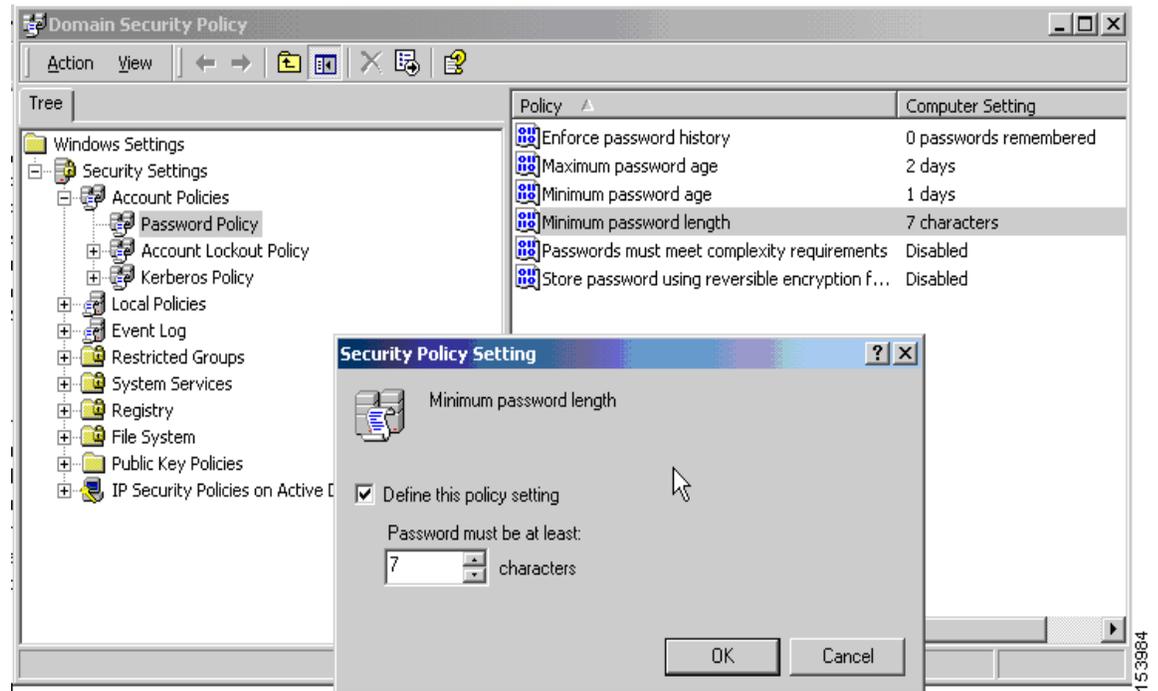


## Using Active Directory to Enforce Password Complexity

To enforce complex passwords—for example, to require that a password contain upper- and lowercase letters, numbers, and special characters—specify the **password-management** command in tunnel-group general-attributes configuration mode on the ASA and do the following steps under Active Directory:

- Step 1** Select Start > Programs > Administrative Tools > Domain Security Policy. Select Windows Settings > Security Settings > Account Policies > Password Policy.
- Step 2** Double-click Password must meet complexity requirements to open the Security Policy Setting dialog box.
- Step 3** Check the Define this policy setting check box and select Enable.

Figure 67-6 Active Directory—Enforce Password Complexity

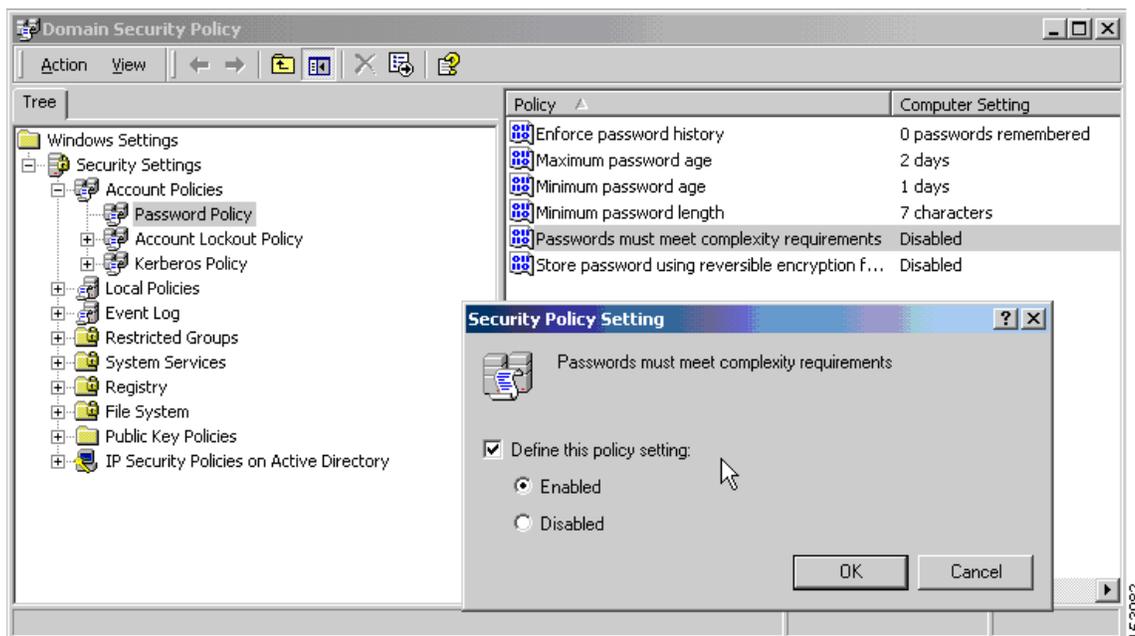

Enforcing password complexity takes effect only when the user changes passwords; for example, when you have configured Enforce password change at next login or Password expires in  $n$  days. At login, the user receives a prompt to enter a new password, and the system will accept only a complex password.

## Configuring the Connection Profile for RADIUS/SDI Message Support for the AnyConnect Client

This section describes procedures to ensure that the AnyConnect VPN client using RSA SecureID Software tokens can properly respond to user prompts delivered to the client through a RADIUS server proxying to an SDI server(s). This section contains the following topics:

- [AnyConnect Client and RADIUS/SDI Server Interaction](#)
- [Configuring the Security Appliance to Support RADIUS/SDI Messages](#)



### Note

If you have configured the double-authentication feature, SDI authentication is supported only on the primary authentication server.

## AnyConnect Client and RADIUS/SDI Server Interaction

When a remote user connects to the ASA with the AnyConnect VPN client and attempts to authenticate using an RSA SecurID token, the ASA communicates with the RADIUS server, which in turn, communicates with the SDI server about the authentication.

During authentication, the RADIUS server presents access challenge messages to the ASA. Within these challenge messages are reply messages containing text from the SDI server. The message text is different when the ASA is communicating directly with an SDI server than when communicating through the RADIUS proxy. Therefore, in order to appear as a native SDI server to the AnyConnect client, the ASA must interpret the messages from the RADIUS server.

Also, because the SDI messages are configurable on the SDI server, the message text on the ASA must match (in whole or in part) the message text on the SDI server. Otherwise, the prompts displayed to the remote client user may not be appropriate for the action required during authentication. The AnyConnect client may fail to respond and authentication may fail.

The following section describes how to configure the ASA to ensure successful authentication between the client and the SDI server:

## Configuring the Security Appliance to Support RADIUS/SDI Messages

The following section describes the steps to configure the ASA to interpret SDI-specific RADIUS reply messages and prompt the AnyConnect user for the appropriate action:

- Step 1** Configure a connection profile (tunnel group) to forward RADIUS reply messages in a manner that simulates direct communication with an SDI server using the **proxy-auth sdi** command from tunnel-group webvpn configuration mode. Users authenticating to the SDI server must connect over this connection profile.

For example:

```
hostname(config)# tunnel-group sales webvpn attributes
hostname(tunnel-group-webvpn)# proxy-auth sdi
```

- Step 2** Configure the RADIUS reply message text on the ASA to match (in whole or in part) the message text sent by the RADIUS server with the **proxy-auth\_map sdi** command from tunnel-group webvpn configuration mode.

The default message text used by the ASA is the default message text used by Cisco Secure Access Control Server (ACS). If you are using Cisco Secure ACS, and it is using the default message text, you do not need to configure the message text on the ASA. Otherwise, use the **proxy-auth\_map sdi** command to ensure the message text matches.

[Table 67-3](#) shows the message code, the default RADIUS reply message text, and the function of each message. Because the security appliance searches for strings in the order that they appear in the table, you must ensure that the string you use for the message text is not a subset of another string.

For example, “new PIN” is a subset of the default message text for both new-pin-sup and next-ccode-and-reauth. If you configure new-pin-sup as “new PIN”, when the security appliance receives “new PIN with the next card code” from the RADIUS server, it will match the text to the new-pin-sup code instead of the next-ccode-and-reauth code.

**Table 67-3 SDI Op-codes, Default Message Text, and Message Function**

| Message Code | Default RADIUS Reply Message Text | Function                                                                           |
|--------------|-----------------------------------|------------------------------------------------------------------------------------|
| next-code    | Enter Next PASSCODE               | Indicates the user must enter the NEXT tokencode without the PIN.                  |
| new-pin-sup  | Please remember your new PIN      | Indicates the new system PIN has been supplied and displays that PIN for the user. |

| Message Code          | Default RADIUS Reply Message Text  | Function                                                                                                                                          |
|-----------------------|------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------|
| new-pin-meth          | Do you want to enter your own pin  | Requests from the user which new PIN method to use to create a new PIN.                                                                           |
| new-pin-req           | Enter your new Alpha-Numerical PIN | Indicates a user-generated PIN and requests that the user enter the PIN.                                                                          |
| new-pin-reenter       | Reenter PIN:                       | Used internally by the ASA for user-supplied PIN confirmation. The client confirms the PIN without prompting the user.                            |
| new-pin-sys-ok        | New PIN Accepted                   | Indicates the user-supplied PIN was accepted.                                                                                                     |
| next-ccode-and-reauth | new PIN with the next card code    | Follows a PIN operation and indicates the user must wait for the next tokencode and to enter both the new PIN and next tokencode to authenticate. |
| ready-for-sys-pin     | ACCEPT A SYSTEM GENERATED PIN      | Used internally by the ASA to indicate the user is ready for the system-generated PIN.                                                            |

The following example enters `aaa-server-host` mode and changes the text for the RADIUS reply message `new-pin-sup`:

```
hostname(config)# aaa-server radius_sales host 10.10.10.1
hostname(config-aaa-server-host)# proxy-auth_map sdi new-pin-sup "This is your new PIN"
```

## Group Policies

This section describes group policies and how to configure them. It includes the following sections:

- [Default Group Policy, page 67-37](#)
- [Configuring Group Policies, page 67-39](#)

A group policy is a set of user-oriented attribute/value pairs for IPsec connections that are stored either internally (locally) on the device or externally on a RADIUS server. The connection profile uses a group policy that sets terms for user connections after the tunnel is established. Group policies let you apply whole sets of attributes to a user or a group of users, rather than having to specify each attribute individually for each user.

Enter the **group-policy** commands in global configuration mode to assign a group policy to users or to modify a group policy for specific users.

The ASA includes a default group policy. In addition to the default group policy, which you can modify but not delete, you can create one or more group policies specific to your environment.

You can configure internal and external group policies. Internal groups are configured on the ASA's internal database. External groups are configured on an external authentication server, such as RADIUS. Group policies include the following attributes:

- Identity
- Server definitions
- Client firewall settings
- Tunneling protocols
- IPsec settings

- Hardware client settings
- Filters
- Client configuration settings
- Connection settings

## Default Group Policy

The ASA supplies a default group policy. You can modify this default group policy, but you cannot delete it. A default group policy, named `DfltGrpPolicy`, always exists on the ASA, but this default group policy does not take effect unless you configure the ASA to use it. When you configure other group policies, any attribute that you do not explicitly specify takes its value from the default group policy. To view the default group policy, enter the following command:

```
hostname(config)# show running-config all group-policy DfltGrpPolicy
hostname(config)#
```

To configure the default group policy, enter the following command:

```
hostname(config)# group-policy DfltGrpPolicy internal
hostname(config)#
```



### Note

The default group policy is always internal. Despite the fact that the command syntax is `hostname(config)# group-policy DfltGrpPolicy {internal | external}`, you cannot change its type to external.

To change any of the attributes of the default group policy, use the **group-policy attributes** command to enter attributes mode, then specify the commands to change whatever attributes that you want to modify:

```
hostname(config)# group-policy DfltGrpPolicy attributes
```



### Note

The attributes mode applies only to internal group policies.

The default group policy, `DfltGrpPolicy`, that the ASA provides is as follows:

```
show run all group-policy DfltGrpPolicy
group-policy DfltGrpPolicy internal
group-policy DfltGrpPolicy attributes
 banner none
 wins-server none
 dns-server none
 dhcp-network-scope none
 vpn-access-hours none
 vpn-simultaneous-logins 3
 vpn-idle-timeout 30
 vpn-session-timeout none
 vpn-filter none
 ipv6-vpn-filter none
 vpn-tunnel-protocol ikev1 ikev2 l2tp-ipsec ssl-clientless
 password-storage disable
 ip-comp disable
 re-xauth disable
 group-lock none
```

```

pfs disable
ipsec-udp disable
ipsec-udp-port 10000
split-tunnel-policy tunnelall
split-tunnel-network-list none
default-domain none
split-dns none
intercept-dhcp 255.255.255.255 disable
secure-unit-authentication disable
user-authentication disable
user-authentication-idle-timeout 30
ip-phone-bypass disable
leap-bypass disable
nem disable
backup-servers keep-client-config
msie-proxy server none
msie-proxy method no-modify
msie-proxy except-list none
msie-proxy local-bypass disable
msie-proxy pac-url none
msie-proxy lockdown enable
vlan none
nac-settings none
address-pools none
ipv6-address-pools none
smartcard-removal-disconnect enable
scep-forwarding-url none
client-firewall none
client-access-rule none
webvpn
url-list none
filter none
homepage none
html-content-filter none
port-forward name Application Access
port-forward disable
http-proxy disable
sso-server none
anyconnect ssl dtls enable
anyconnect mtu 1406
anyconnect firewall-rule client-interface private none
anyconnect firewall-rule client-interface public none
anyconnect keep-installer installed
anyconnect ssl keepalive 20
anyconnect ssl rekey time none
anyconnect ssl rekey method none
anyconnect dpd-interval client 30
anyconnect dpd-interval gateway 300
anyconnect ssl compression none
anyconnect modules none
anyconnect profiles none
anyconnect ask none
customization none
keep-alive-ignore 4
http-comp gzip
download-max-size 2147483647
upload-max-size 2147483647
post-max-size 2147483647
user-storage none
storage-objects value cookies,credentials
storage-key none
hidden-shares none
smart-tunnel disable
activex-relay enable

```

```

unix-auth-uid 65534
unix-auth-gid 65534
file-entry enable
file-browsing enable
url-entry enable
deny-message value Login was successful, but because certain criteria
have not been met or due to some specific group policy, you do not have
permission to use any of the VPN features.
Contact your IT administrator for more information
smart-tunnel auto-signon disable
anyconnect ssl df-bit-ignore disable
anyconnect routing-filtering-ignore disable
smart-tunnel tunnel-policy tunnelall
always-on-vpn profile-setting

```

You can modify the default group policy, and you can also create one or more group policies specific to your environment.

## Configuring Group Policies

A group policy can apply to any kind of tunnel. In each case, if you do not explicitly define a parameter, the group takes the value from the default group policy. To configure a group policy, follow the steps in the subsequent sections.

### Configuring an External Group Policy

External group policies take their attribute values from the external server that you specify. For an external group policy, you must identify the AAA server group that the ASA can query for attributes and specify the password to use when retrieving attributes from the external AAA server group. If you are using an external authentication server, and if your external group-policy attributes exist in the same RADIUS server as the users that you plan to authenticate, you have to make sure that there is no name duplication between them.



#### Note

External group names on the ASA refer to user names on the RADIUS server. In other words, if you configure external group X on the ASA, the RADIUS server sees the query as an authentication request for user X. So external groups are really just user accounts on the RADIUS server that have special meaning to the ASA. If your external group attributes exist in the same RADIUS server as the users that you plan to authenticate, there must be no name duplication between them

The ASA supports user authorization on an external LDAP or RADIUS server. Before you configure the ASA to use an external server, you must configure the server with the correct ASA authorization attributes and, from a subset of these attributes, assign specific permissions to individual users. Follow the instructions in [Appendix C, “Configuring an External Server for Authorization and Authentication”](#) to configure your external server.

To configure an external group policy, do the following steps specify a name and type for the group policy, along with the server-group name and a password:

```

hostname(config)# group-policy group_policy_name type server-group server_group_name
password server_password
hostname(config)#

```



#### Note

For an external group policy, RADIUS is the only supported AAA server type.

For example, the following command creates an external group policy named ExtGroup that gets its attributes from an external RADIUS server named ExtRAD and specifies that the password to use when retrieving the attributes is newpassword:

```
hostname(config)# group-policy ExtGroup external server-group ExtRAD password newpassword
hostname(config)#
```

**Note**

You can configure several vendor-specific attributes (VSAs), as described in [Appendix C, “Configuring an External Server for Authorization and Authentication”](#). If a RADIUS server is configured to return the Class attribute (#25), the ASA uses that attribute to authenticate the Group Name. On the RADIUS server, the attribute must be formatted as: `OU=groupname;` where *groupname* is identical to the Group Name configured on the ASA—for example, `OU=Finance`.

## Configuring an Internal Group Policy

To configure an internal group policy, specify a name and type for the group policy:

```
hostname(config)# group-policy group_policy_name type
hostname(config)#
```

For example, the following command creates the internal group policy named GroupPolicy1:

```
hostname(config)# group-policy GroupPolicy1 internal
hostname(config)#
```

The default type is **internal**.

You can initialize the attributes of an internal group policy to the values of a preexisting group policy by appending the keyword **from** and specifying the name of the existing policy:

```
hostname(config)# group-policy group_policy_name internal from group_policy_name
hostname(config-group-policy)#
hostname(config-group-policy)#
```

## Configuring Group Policy Attributes

For internal group policies, you can specify particular attribute values. To begin, enter group-policy attributes mode, by entering the **group-policy attributes** command in global configuration mode.

```
hostname(config)# group-policy name attributes
hostname(config-group-policy)#
```

The prompt changes to indicate the mode change. The group-policy-attributes mode lets you configure attribute-value pairs for a specified group policy. In group-policy-attributes mode, explicitly configure the attribute-value pairs that you do not want to inherit from the default group. The commands to do this are described in the following sections.

## Configuring WINS and DNS Servers

You can specify primary and secondary WINS servers and DNS servers. The default value in each case is none. To specify these servers, do the following steps:

**Step 1** Specify the primary and secondary WINS servers:

```
hostname(config-group-policy)# wins-server value {ip_address [ip_address] | none}
```

```
hostname(config-group-policy)#
```

The first IP address specified is that of the primary WINS server. The second (optional) IP address is that of the secondary WINS server. Specifying the **none** keyword instead of an IP address sets WINS servers to a null value, which allows no WINS servers and prevents inheriting a value from a default or specified group policy.

Every time that you enter the **wins-server** command, you overwrite the existing setting. For example, if you configure WINS server x.x.x.x and then configure WINS server y.y.y.y, the second command overwrites the first, and y.y.y.y becomes the sole WINS server. The same is true for multiple servers. To add a WINS server rather than overwrite previously configured servers, include the IP addresses of all WINS servers when you enter this command.

The following example shows how to configure WINS servers with the IP addresses 10.10.10.15 and 10.10.10.30 for the group policy named FirstGroup:

```
hostname(config)# group-policy FirstGroup attributes
hostname(config-group-policy)# wins-server value 10.10.10.15 10.10.10.30
hostname(config-group-policy)#
```

**Step 2** Specify the primary and secondary DNS servers:

```
hostname(config-group-policy)# dns-server value {ip_address [ip_address] | none}
hostname(config-group-policy)#
```

The first IP address specified is that of the primary DNS server. The second (optional) IP address is that of the secondary DNS server. Specifying the **none** keyword instead of an IP address sets DNS servers to a null value, which allows no DNS servers and prevents inheriting a value from a default or specified group policy.

Every time that you enter the **dns-server** command you overwrite the existing setting. For example, if you configure DNS server x.x.x.x and then configure DNS server y.y.y.y, the second command overwrites the first, and y.y.y.y becomes the sole DNS server. The same is true for multiple servers. To add a DNS server rather than overwrite previously configured servers, include the IP addresses of all DNS servers when you enter this command.

The following example shows how to configure DNS servers with the IP addresses 10.10.10.15, and 10.10.10.30 for the group policy named FirstGroup:

```
hostname(config)# group-policy FirstGroup attributes
hostname(config-group-policy)# dns-server value 10.10.10.15 10.10.10.30
hostname(config-group-policy)#
```

**Step 3** Configure the DHCP network scope:

```
hostname(config-group-policy)# dhcp-network-scope {ip_address | none}
hostname(config-group-policy)#
```

DHCP scope specifies the range of IP addresses (that is, a subnet) that the ASA DHCP server should use to assign addresses to users of this group policy.

The following example shows how to set an IP subnet of 10.10.85.0 (specifying the address range of 10.10.85.0 through 10.10.85.255) for the group policy named First Group:

```
hostname(config)# group-policy FirstGroup attributes
hostname(config-group-policy)# dhcp-network-scope 10.10.85.0
```

## Configuring VPN-Specific Attributes

Follow the steps in this section to set the VPN attribute values. The VPN attributes control the access hours, the number of simultaneous logins allowed, the timeouts, the egress VLAN or ACL to apply to VPN sessions, and the tunnel protocol:

- Step 1** Set the VPN access hours. To do this, you associate a group policy with a configured time-range policy, using the **vpn-access-hours** command in group-policy configuration mode.

```
hostname(config-group-policy)# vpn-access-hours value {time-range | none}
```

A group policy can inherit a time-range value from a default or specified group policy. To prevent this inheritance, enter the **none** keyword instead of the name of a time-range in this command. This keyword sets VPN access hours to a null value, which allows no time-range policy.

The **time-range** variable is the name of a set of access hours defined in global configuration mode using the **time-range** command. The following example shows how to associate the group policy named FirstGroup with a time-range policy called 824:

```
hostname(config)# group-policy FirstGroup attributes
hostname(config-group-policy)# vpn-access-hours value 824
```

- Step 2** Specify the number of simultaneous logins allowed for any user, using the **vpn-simultaneous-logins** command in group-policy configuration mode.

```
hostname(config-group-policy)# vpn-simultaneous-logins integer
```

The default value is 3. The range is an integer in the range 0 through 2147483647. A group policy can inherit this value from another group policy. Enter 0 to disable login and prevent user access. The following example shows how to allow a maximum of 4 simultaneous logins for the group policy named FirstGroup:

```
hostname(config)# group-policy FirstGroup attributes
hostname(config-group-policy)# vpn-simultaneous-logins 4
hostname(config-group-policy)#
```



### Note

While the maximum limit for the number of simultaneous logins is very large, allowing several simultaneous logins could compromise security and affect performance.

Stale AnyConnect, IPsec Client, or Clientless sessions (sessions that are terminated abnormally) might remain in the session database, even though a “new” session has been established with the same username.

If the value of **vpn-simultaneous-logins** is 1, and the same user logs in again after an abnormal termination, then the stale session is removed from the database and the new session is established. If, however, the existing session is still an active connection and the same user logs in again, perhaps from another PC, the first session is logged off and removed from the database, and the new session is established.

If the number of simultaneous logins is a value greater than 1, then, when you have reached that maximum number and try to log in again, the session with the longest idle time is logged off. If all current sessions have been idle an equally long time, then the oldest session is logged off. This action frees up a session and allows the new login.

- Step 3** Configure the user timeout period by entering the **vpn-idle-timeout** command in group-policy configuration mode or in username configuration mode:

```
hostname(config-group-policy)# vpn-idle-timeout {minutes | none}
```

```
hostname(config-group-policy)#
```

AnyConnect (SSL IPsec/IKEv2): Use the global WebVPN default-idle-timeout value (seconds) from the command: **hostname(config-webvpn)# default-idle-timeout**

The range for this value in the WebVPN **default-idle-timeout** command is 60-86400 seconds; the default Global WebVPN Idle timeout in seconds -- default is 1800 seconds (30 min).

**Note** A non-zero idle timeout value is required by ASA for all AnyConnect connections.

For a WebVPN user, the **default-idle-timeout** value is enforced only if **vpn-idle-timeout none** is set in the group policy/username attribute.

Site-to-Site (IKEv1, IKEv2) and IKEv1 remote-access: Disable timeout and allow for an unlimited idle period. The following example shows how to set a VPN idle timeout of 15 minutes for the group policy named FirstGroup:

```
hostname(config)# group-policy FirstGroup attributes
hostname(config-group-policy)# vpn-idle-timeout 15
hostname(config-group-policy)#
```

- Step 4** Configure the time at which an idle-timeout alert message is displayed to the user using the **vpn-idle-timeout alert-interval {minutes | none}** command. This alert message tells users how many minutes left they have until their VPN session is disconnected due to inactivity.

The following example shows how to set **vpn-idle-timeout alert-interval** so that users will be notified 20 minutes before their VPN session is disconnected due to inactivity. You can specify a range of 1-30 minutes.

```
hostname(config-webvpn)# vpn-idle-timeout alert-interval 20
```

The **none** parameter of the command indicates that users will not receive an alert.

The **no** form of the command: **no vpn-idle-timeout alert-interval**

indicates that the VPN idle timeout alert-interval attribute will be inherited from the Default Group Policy.

- Step 5** Configure a maximum amount of time for VPN connections, using the **vpn-session-timeout** command in group-policy configuration mode or in username configuration mode.

```
hostname(config-group-policy)# vpn-session-timeout {minutes | none}
hostname(config-group-policy)#
```

The minimum time is 1 minute, and the maximum time is 35791394 minutes. There is no default value. At the end of this period of time, the ASA terminates the connection.

A group policy can inherit this value from another group policy. To prevent inheriting a value, enter the **none** keyword instead of specifying a number of minutes with this command. Specifying the **none** keyword permits an unlimited session timeout period and sets session timeout with a null value, which disallows a session timeout.

The following example shows how to set a VPN session timeout of 180 minutes for the group policy named FirstGroup:

```
hostname(config)# group-policy FirstGroup attributes
hostname(config-group-policy)# vpn-session-timeout 180
hostname(config-group-policy)#
```

- Step 6** Configure the time at which a session-timeout alert message is displayed to the user using the **vpn-session-timeout alert-interval {minutes | none}** command. This alert message tells users how many minutes left they have until their VPN session is automatically disconnected.

The following example shows how to set the `vpn-session-timeout alert-interval` so that users will be notified 20 minutes before their VPN session is disconnected. You can specify a range of 1-30 minutes.

```
hostname(config-webvpn)# vpn-session-timeout alert-interval 20
```

The `none` parameter of the command indicates that users will not receive an alert.

The `no` form of the command: **no vpn-session-timeout alert-interval**

indicates that the VPN session timeout alert-interval attribute will be inherited from the Default Group Policy.

**Step 7** Choose one of the following options to specify an egress VLAN (also called “VLAN mapping”) for remote access or specify an ACL to filter the traffic:

- Enter the following command in group-policy configuration mode to specify the egress VLAN for remote access VPN sessions assigned to this group policy or to a group policy that inherits this group policy:

```
hostname(config-group-policy)# [no] vlan {vlan_id | none}
```

**no vlan** removes the `vlan_id` from the group policy. The group policy inherits the `vlan` value from the default group policy.

**vlan none** removes the `vlan_id` from the group policy and disables VLAN mapping for this group policy. The group policy does not inherit the `vlan` value from the default group policy.

`vlan_id` in the command **vlan vlan\_id** is the number of the VLAN, in decimal format, to assign to remote access VPN sessions that use this group policy. The VLAN must be configured on this ASA per the instructions in the [“Configuring VLAN Subinterfaces and 802.1Q Trunking”](#) section on page 6-30.

**none** disables the assignment of a VLAN to the remote access VPN sessions that match this group policy.




---

**Note** The egress VLAN feature works for HTTP connections, but not for FTP and CIFS.

---

- Specify the name of the ACL to apply to VPN session, using the **vpn-filter** command in group policy mode. (You can also configure this attribute in username mode, in which case the value configured under username supersedes the group-policy value.)

```
hostname(config-group-policy)# vpn-filter {value ACL name | none}
hostname(config-group-policy)#
```

You configure ACLs to permit or deny various types of traffic for this group policy. You then enter the **vpn-filter** command to apply those ACLs.

To remove the ACL, including a null value created by entering the **vpn-filter none** command, enter the **no** form of this command. The **no** option allows inheritance of a value from another group policy.

A group policy can inherit this value from another group policy. To prevent inheriting a value, enter the **none** keyword instead of specifying an ACL name. The **none** keyword indicates that there is no access list and sets a null value, thereby disallowing an access list.

The following example shows how to set a filter that invokes an access list named `acl_vpn` for the group policy named `FirstGroup`:

```
hostname(config)# group-policy FirstGroup attributes
hostname(config-group-policy)# vpn-filter acl_vpn
hostname(config-group-policy)#
```

A **vpn-filter** command is applied to post-decrypted traffic after it exits a tunnel and pre-encrypted traffic before it enters a tunnel. An ACL that is used for a vpn-filter should NOT also be used for an interface access-group. When a **vpn-filter** command is applied to a group policy that governs Remote Access VPN client connections, the ACL should be configured with the client assigned IP addresses in the **src\_ip** position of the ACL and the local network in the **dest\_ip** position of the ACL.

When a **vpn-filter** command is applied to a group-policy that governs a LAN to LAN VPN connection, the ACL should be configured with the remote network in the **src\_ip** position of the ACL and the local network in the **dest\_ip** position of the ACL.

Caution should be used when constructing the ACLs for use with the vpn-filter feature. The ACLs are constructed with the post-decrypted traffic in mind. However, ACLs are also applied to the traffic in the opposite direction. For this pre-encrypted traffic that is destined for the tunnel, the ACLs are constructed with the **src\_ip** and **dest\_ip** positions swapped.

In the following example, the vpn-filter is used with a Remote Access VPN client. This example assumes that the client assigned IP address is 10.10.10.1/24 and the local network is 192.168.1.0/24.

The following ACE will allow the Remote Access VPN client to telnet to the local network:

```
hostname(config-group-policy)# access-list vpnfilt-ra permit 10.10.10.1 255.255.255.255
192.168.1.0 255.255.255.0 eq 23
```

The following ACE will allow the local network to telnet to the Remote Access client:

```
hostname(config-group-policy)# access-list vpnfilt-ra permit 10.10.10.1 255.255.255.255 eq
23 192.168.1.0 255.255.255.0
```



**Note**

Note: The ACE access-list vpnfilt-ra permit 10.10.10.1 255.255.255.255 192.168.1.0 255.255.255.0 eq 23 will allow the local network to initiate a connection to the Remote Access client on any TCP port if it uses a source port of 23. The ACE access-list vpnfilt-ra permit 10.10.10.1 255.255.255.255 eq 23 192.168.1.0 255.255.255.0 will allow the Remote Access client to initiate a connection to the local network on any TCP port if it uses a source port of 23.

In the next example, the vpn-filter is used with a LAN to LAN VPN connection. This example assumes that the remote network is 10.0.0.0/24 and the local network is 192.168.1.0/24.

The following ACE will allow remote network to telnet to the local network:

```
hostname(config-group-policy)# access-list vpnfilt-121 permit 10.0.0.0 255.255.255.0
192.168.1.0 255.255.255.0 eq 23
```

The following ACE will allow the local network to telnet to the remote network:

```
hostname(config-group-policy)# access-list vpnfilt-121 permit 10.0.0.0 255.255.255.0 eq 23
192.168.1.0 255.255.255.0
```



**Note**

Note: The ACE access-list vpnfilt-121 permit 10.0.0.0 255.255.255.0 192.168.1.0 255.255.255.0 eq 23 will allow the local network to initiate a connection to the remote network on any TCP port if it uses a source port of 23. The ACE access-list vpnfilt-121 permit 10.0.0.0 255.255.255.0 eq 23 192.168.1.0 255.255.255.0 will allow the remote network to initiate a connection to the local network on any TCP port if it uses a source port of 23.

**Step 8** Specify the VPN tunnel type for this group policy.

```
vpn-tunnel-protocol {ikev1 | ikev2 | l2tp-ipsec | ssl-client | ssl-clientless }
```

The default is IPsec. To remove the attribute from the running configuration, enter the **no** form of this command.

The parameter values for this command follow:

- **ikev1**—Negotiates an IPsec IKEv1 tunnel between two peers (the Cisco VPN Client or another secure gateway). Creates security associations that govern authentication, encryption, encapsulation, and key management.
- **ikev2**—Negotiates an IPsec IKEv2 tunnel between two peers (the AnyConnect Secure Mobility Client or another secure gateway). Creates security associations that govern authentication, encryption, encapsulation, and key management.
- **l2tp-ipsec**—Negotiates an IPsec tunnel for an L2TP connection
- **ssl-client**—Negotiates an SSL tunnel using TLS or DTLS with the AnyConnect Secure Mobility Client.
- **ssl-clientless**—Provides VPN services to remote users via an HTTPS-enabled web browser, and does not require a client.

Enter this command to configure one or more tunneling modes. You must configure at least one tunneling mode for users to connect over a VPN tunnel.

The following example shows how to configure the IPsec IKEv1 tunneling mode for the group policy named FirstGroup:

```
hostname(config)# group-policy FirstGroup attributes
hostname(config-group-policy)# vpn-tunnel-protocol ikev1
hostname(config-group-policy)#
```

## Configuring Security Attributes

The attributes in this section specify certain security settings for the group:

- Step 1** Specify whether to let users store their login passwords on the client system, using the **password-storage** command with the **enable** keyword in group-policy configuration mode. To disable password storage, use the **password-storage** command with the **disable** keyword.

```
hostname(config-group-policy)# password-storage {enable | disable}
hostname(config-group-policy)#
```

For security reasons, password storage is disabled by default. Enable password storage only on systems that you know to be in secure sites.

To remove the password-storage attribute from the running configuration, enter the **no** form of this command:

```
hostname(config-group-policy)# no password-storage
hostname(config-group-policy)#
```

Specifying the **no** form enables inheritance of a value for password-storage from another group policy.

This command does not apply to interactive hardware client authentication or individual user authentication for hardware clients.

The following example shows how to enable password storage for the group policy named FirstGroup:

```
hostname(config)# group-policy FirstGroup attributes
hostname(config-group-policy)# password-storage enable
hostname(config-group-policy)#
```

**Step 2** Specify whether to enable IP compression, which is disabled by default.



**Note** IP compression is not supported for IPsec IKEv2 connections.

```
hostname(config-group-policy)# ip-comp {enable | disable}
hostname(config-group-policy)#
```

To enable LZS IP compression, enter the **ip-comp** command with the **enable** keyword in group-policy configuration mode. To disable IP compression, enter the **ip-comp** command with the **disable** keyword.

To remove the **ip-comp** attribute from the running configuration, enter the **no** form of this command. This enables inheritance of a value from another group policy.

```
hostname(config-group-policy)# no ip-comp
hostname(config-group-policy)#
```

Enabling data compression might speed up data transmission rates for remote dial-in users connecting with modems.



**Caution**

Data compression increases the memory requirement and CPU usage for each user session and consequently decreases the overall throughput of the ASA. For this reason, we recommend that you enable data compression only for remote users connecting with a modem. Design a group policy specific to modem users, and enable compression only for them.

**Step 3** Specify whether to require that users reauthenticate on IKE re-key by using the **re-xauth** command with the **enable** keyword in group-policy configuration mode.



**Note** IKE re-key is not supported for IKEv2 connections.

If you enable reauthentication on IKE re-key, the ASA prompts the user to enter a username and password during initial Phase 1 IKE negotiation and also prompts for user authentication whenever an IKE re-key occurs. Reauthentication provides additional security.

If the configured re-key interval is very short, users might find the repeated authorization requests inconvenient. To avoid repeated authorization requests, disable reauthentication. To check the configured re-key interval, in monitoring mode, enter the **show crypto ipsec sa** command to view the security association lifetime in seconds and lifetime in kilobytes of data. To disable user reauthentication on IKE re-key, enter the **disable** keyword. Reauthentication on IKE re-key is disabled by default.

```
hostname(config-group-policy)# re-xauth {enable | disable}
hostname(config-group-policy)#
```

To enable inheritance of a value for reauthentication on IKE re-key from another group policy, remove the re-xauth attribute from the running configuration by entering the **no** form of this command.

```
hostname(config-group-policy)# no re-xauth
hostname(config-group-policy)#
```



**Note** Reauthentication fails if there is no user at the other end of the connection.

**Step 4** Specify whether to restrict remote users to access only through the connection profile, using the **group-lock** command in group-policy configuration mode.

```
hostname(config-group-policy)# group-lock {value tunnel-grp-name | none}
hostname(config-group-policy)# no group-lock
hostname(config-group-policy)#
```

The *tunnel-grp-name* variable specifies the name of an existing connection profile that the ASA requires for the user to connect. Group-lock restricts users by checking if the group configured in the VPN client is the same as the connection profile to which the user is assigned. If it is not, the ASA prevents the user from connecting. If you do not configure group-lock, the ASA authenticates users without regard to the assigned group. Group locking is disabled by default.

To remove the **group-lock** attribute from the running configuration, enter the **no** form of this command. This option allows inheritance of a value from another group policy.

To disable group-lock, enter the **group-lock** command with the **none** keyword. The none keyword sets group-lock to a null value, thereby allowing no group-lock restriction. It also prevents inheriting a group-lock value from a default or specified group policy.

- Step 5** Specify whether to enable perfect forward secrecy. In IPsec negotiations, perfect forward secrecy ensures that each new cryptographic key is unrelated to any previous key. A group policy can inherit a value for perfect forward secrecy from another group policy. Perfect forward secrecy is disabled by default. To enable perfect forward secrecy, use the **pfs** command with the **enable** keyword in group-policy configuration mode.

```
hostname(config-group-policy)# pfs {enable | disable}
hostname(config-group-policy)#
```

To disable perfect forward secrecy, enter the **pfs** command with the **disable** keyword.

To remove the perfect forward secrecy attribute from the running configuration and prevent inheriting a value, enter the **no** form of this command.

```
hostname(config-group-policy)# no pfs
hostname(config-group-policy)#
```

## Configuring the Banner Message

Specify the banner, or welcome message, if any, that you want to display. The default is no banner. The message that you specify is displayed on remote clients when they connect. To specify a banner, enter the **banner** command in group-policy configuration mode. The banner text can be up to 510 characters long. Enter the “\n” sequence to insert a carriage return.



### Note

A carriage-return/line-feed included in the banner counts as two characters.

To delete a banner, enter the **no** form of this command. Be aware that using the **no** version of the command deletes all banners for the group policy.

A group policy can inherit this value from another group policy. To prevent inheriting a value, enter the **none** keyword instead of specifying a value for the banner string, as follows:

```
hostname(config-group-policy)# banner {value banner_string | none}
```

The following example shows how to create a banner for the group policy named FirstGroup:

```
hostname(config)# group-policy FirstGroup attributes
hostname(config-group-policy)# banner value Welcome to Cisco Systems 7.0.
```

## Configuring IPsec-UDP Attributes for IKEv1

IPsec over UDP, sometimes called IPsec through NAT, lets a Cisco VPN client or hardware client connect via UDP to a ASA that is running NAT. It is disabled by default. IPsec over UDP is proprietary; it applies only to remote-access connections, and it requires mode configuration. The ASA exchanges configuration parameters with the client while negotiating SAs. Using IPsec over UDP may slightly degrade system performance.

To enable IPsec over UDP, configure the **ipsec-udp** command with the **enable** keyword in group-policy configuration mode, as follows:

```
hostname(config-group-policy)# ipsec-udp {enable | disable}
hostname(config-group-policy)# no ipsec-udp
```

To use IPsec over UDP, you must also configure the **ipsec-udp-port** command, as described below.

To disable IPsec over UDP, enter the **disable** keyword. To remove the IPsec over UDP attribute from the running configuration, enter the **no** form of this command. This enables inheritance of a value for IPsec over UDP from another group policy.

The Cisco VPN client must also be configured to use IPsec over UDP (it is configured to use it by default). The VPN 3002 requires no configuration to use IPsec over UDP.

The following example shows how to set IPsec over UDP for the group policy named FirstGroup:

```
hostname(config)# group-policy FirstGroup attributes
hostname(config-group-policy)# ipsec-udp enable
```

If you enabled IPsec over UDP, you must also configure the **ipsec-udp-port** command in group-policy configuration mode. This command sets a UDP port number for IPsec over UDP. In IPsec negotiations, the ASA listens on the configured port and forwards UDP traffic for that port even if other filter rules drop UDP traffic. The port numbers can range from 4001 through 49151. The default port value is 10000.

To disable the UDP port, enter the **no** form of this command. This enables inheritance of a value for the IPsec over UDP port from another group policy.

```
hostname(config-group-policy)# ipsec-udp-port port
```

The following example shows how to set an IPsec UDP port to port 4025 for the group policy named FirstGroup:

```
hostname(config)# group-policy FirstGroup attributes
hostname(config-group-policy)# ipsec-udp-port 4025
```

## Configuring Split-Tunneling Attributes

Split tunneling lets a remote-access client conditionally direct packets over a VPN tunnel in encrypted form or to a network interface in clear text form. With split tunneling enabled, packets not bound for destinations on the other side of the tunnel do not have to be encrypted, sent across the tunnel, decrypted, and then routed to a final destination. The **split-tunnel-policy** command applies this split tunneling policy to a specific network.



### Note

The ASA does not currently support split tunneling for IPv6 traffic. The ASA tunnels all IPv6 traffic through the VPN connection, even when it has no IPv6 configuration.

## Differences in Client Split Tunneling Behavior for Traffic within the Subnet

The AnyConnect client and the legacy Cisco VPN client (the IPsec/IKEv1 client) behave differently when passing traffic to sites within the same subnet as the IP address assigned by the ASA. With AnyConnect, the client passes traffic to all sites specified in the split tunneling policy you configured, and to all sites that fall within the same subnet as the IP address assigned by the ASA. For example, if the IP address assigned by the ASA is 10.1.1.1 with a mask of 255.0.0.0, the endpoint device passes all traffic destined to 10.0.0.0/8, regardless of the split tunneling policy.

By contrast, the legacy Cisco VPN client only passes traffic to addresses specified by the split-tunneling policy, regardless of the subnet assigned to the client.

Therefore, use a netmask for the assigned IP address that properly references the expected local subnet.

## Setting the Split-Tunneling Policy

Set the rules for tunneling traffic by specifying the split-tunneling policy:

```
hostname(config-group-policy)# split-tunnel-policy {tunnelall | tunnelspecified | excludespecified}
hostname(config-group-policy)# no split-tunnel-policy
```

The default is to tunnel all traffic. To set a split tunneling policy, enter the **split-tunnel-policy** command in group-policy configuration mode. To remove the **split-tunnel-policy** attribute from the running configuration, enter the **no** form of this command. This enables inheritance of a value for split tunneling from another group policy.

The **excludespecified** keyword defines a list of networks to which traffic goes in the clear. This feature is useful for remote users who want to access devices on their local network, such as printers, while they are connected to the corporate network through a tunnel. This option applies only to the Cisco VPN client.

The **tunnelall** keyword specifies that no traffic goes in the clear or to any other destination than the ASA. This, in effect, disables split tunneling. Remote users reach Internet networks through the corporate network and do not have access to local networks. This is the default option.

The **tunnelspecified** keyword tunnels all traffic from or to the specified networks. This option enables split tunneling. It lets you create a network list of addresses to tunnel. Data to all other addresses travels in the clear and is routed by the remote user's Internet service provider.



### Note

---

Split tunneling is primarily a traffic management feature, not a security feature. For optimum security, we recommend that you do not enable split tunneling.

---

The following example shows how to set a split tunneling policy of tunneling only specified networks for the group policy named FirstGroup:

```
hostname(config)# group-policy FirstGroup attributes
hostname(config-group-policy)# split-tunnel-policy tunnelspecified
```

## Creating a Network List for Split-Tunneling

Create a network list for split tunneling using the **split-tunnel-network-list** command in group-policy configuration mode.

```
hostname(config-group-policy)# split-tunnel-network-list {value access-list_name | none}
hostname(config-group-policy)# no split-tunnel-network-list value [access-list_name]
```

Split tunneling network lists distinguish networks that require traffic to travel across the tunnel from those that do not require tunneling. The ASA makes split tunneling decisions on the basis of a network list, which is an ACL that consists of a list of addresses on the private network.

If you use extended ACLs, the source network determines the split-tunneling network. The destination network is ignored. In addition, because *any* is not an actual IP address or network address, do not use the term for the source in the ACL.

The **value** *access-list name* parameter identifies an access list that enumerates the networks to tunnel or not tunnel.

The **none** keyword indicates that there is no network list for split tunneling; the ASA tunnels all traffic. Specifying the **none** keyword sets a split tunneling network list with a null value, thereby disallowing split tunneling. It also prevents inheriting a default split tunneling network list from a default or specified group policy.

To delete a network list, enter the **no** form of this command. To delete all split tunneling network lists, enter the **no split-tunnel-network-list** command without arguments. This command deletes all configured network lists, including a null list if you created one by entering the **none** keyword.

When there are no split tunneling network lists, users inherit any network lists that exist in the default or specified group policy. To prevent users from inheriting such network lists, enter the **split-tunnel-network-list none** command.

The following example shows how to set a network list called FirstList for the group policy named FirstGroup:

```
hostname(config)# group-policy FirstGroup attributes
hostname(config-group-policy)# split-tunnel-network-list FirstList
```

## Configuring Domain Attributes for Tunneling

You can specify a default domain name for tunneled packets or a list of domains to be resolved through the split tunnel. The following sections describe how to set these domains.

### Defining a Default Domain Name for Tunneled Packets

The ASA passes the default domain name to the IPsec client to append to DNS queries that omit the domain field. When there are no default domain names, users inherit the default domain name in the default group policy. To specify the default domain name for users of the group policy, enter the **default-domain** command in group-policy configuration mode. To delete a domain name, enter the **no** form of this command.

```
hostname(config-group-policy)# default-domain {value domain-name | none}
hostname(config-group-policy)# no default-domain [domain-name]
```

The **value** *domain-name* parameter identifies the default domain name for the group. To specify that there is no default domain name, enter the **none** keyword. This command sets a default domain name with a null value, which disallows a default domain name and prevents inheriting a default domain name from a default or specified group policy.

To delete all default domain names, enter the **no default-domain** command without arguments. This command deletes all configured default domain names, including a null list if you created one by entering the **default-domain** command with the **none** keyword. The **no** form allows inheriting a domain name.

The following example shows how to set a default domain name of FirstDomain for the group policy named FirstGroup:

```
hostname(config)# group-policy FirstGroup attributes
hostname(config-group-policy)# default-domain value FirstDomain
```

## Defining a List of Domains for Split Tunneling

Enter a list of domains to be resolved through the split tunnel. Enter the **split-dns** command in group-policy configuration mode. To delete a list, enter the **no** form of this command.

When there are no split tunneling domain lists, users inherit any that exist in the default group policy. To prevent users from inheriting such split tunneling domain lists, enter the **split-dns** command with the **none** keyword.

To delete all split tunneling domain lists, enter the **no split-dns** command without arguments. This deletes all configured split tunneling domain lists, including a null list created by issuing the **split-dns** command with the **none** keyword.

The parameter **value domain-name** provides a domain name that the ASA resolves through the split tunnel. The **none** keyword indicates that there is no split DNS list. It also sets a split DNS list with a null value, thereby disallowing a split DNS list, and prevents inheriting a split DNS list from a default or specified group policy. The syntax of the command is as follows:

```
hostname(config-group-policy)# split-dns {value domain-name1 [domain-name2...
domain-nameN] | none}
hostname(config-group-policy)# no split-dns [domain-name domain-name2 domain-nameN]
```

Enter a single space to separate each entry in the list of domains. There is no limit on the number of entries, but the entire string can be no longer than 255 characters. You can use only alphanumeric characters, hyphens (-), and periods (.). If the default domain name is to be resolved through the tunnel, you must explicitly include that name in this list.

The following example shows how to configure the domains Domain1, Domain2, Domain3, and Domain4 to be resolved through split tunneling for the group policy named FirstGroup:

```
hostname(config)# group-policy FirstGroup attributes
hostname(config-group-policy)# split-dns value Domain1 Domain2 Domain3 Domain4
```

## Configuring DHCP Intercept

A Microsoft XP anomaly results in the corruption of domain names if split tunnel options exceed 255 bytes. To avoid this problem, the ASA limits the number of routes it sends to 27 to 40 routes, with the number of routes dependent on the classes of the routes.

DHCP Intercept lets Microsoft Windows XP clients use split-tunneling with the ASA. The ASA replies directly to the Microsoft Windows XP client DHCP Inform message, providing that client with the subnet mask, domain name, and classless static routes for the tunnel IP address. For Windows clients prior to Windows XP, DHCP Intercept provides the domain name and subnet mask. This is useful in environments in which using a DHCP server is not advantageous.

The **intercept-dhcp** command enables or disables DHCP intercept. The syntax of this command is as follows:

**[no] intercept-dhcp**

```
hostname(config-group-policy)# intercept-dhcp netmask {enable | disable}
hostname(config-group-policy)#
```

The *netmask* variable provides the subnet mask for the tunnel IP address. The **no** version of the command removes the DHCP intercept from the configuration.

The following example shows how to set DHCP Intercepts for the group policy named FirstGroup:

```
hostname(config)# group-policy FirstGroup attributes
hostname(config-group-policy)# intercept-dhcp enable
```

## Configuring Attributes for VPN Hardware Clients

The commands in this section enable or disable secure unit authentication and user authentication, and set a user authentication timeout value for VPN hardware clients. They also let you allow Cisco IP phones and LEAP packets to bypass individual user authentication and allow hardware clients using Network Extension Mode to connect.

### Configuring Secure Unit Authentication

Secure unit authentication provides additional security by requiring VPN hardware clients to authenticate with a username and password each time that the client initiates a tunnel. With this feature enabled, the hardware client does not have a saved username and password. Secure unit authentication is disabled by default.



#### Note

With this feature enabled, to bring up a VPN tunnel, a user must be present to enter the username and password.

Secure unit authentication requires that you have an authentication server group configured for the connection profile the hardware client(s) use. If you require secure unit authentication on the primary ASA, be sure to configure it on any backup servers as well.

Specify whether to enable secure unit authentication by entering the **secure-unit-authentication** command with the **enable** keyword in group-policy configuration mode.

```
hostname(config-group-policy)# secure-unit-authentication {enable | disable}
hostname(config-group-policy)# no secure-unit-authentication
```

To disable secure unit authentication, enter the **disable** keyword. To remove the secure unit authentication attribute from the running configuration, enter the **no** form of this command. This option allows inheritance of a value for secure unit authentication from another group policy.

The following example shows how to enable secure unit authentication for the group policy named FirstGroup:

```
hostname(config)# group-policy FirstGroup attributes
hostname(config-group-policy)# secure-unit-authentication enable
```

### Configuring User Authentication

User authentication is disabled by default. When enabled, user authentication requires that individual users behind a hardware client authenticate to gain access to the network across the tunnel. Individual users authenticate according to the order of authentication servers that you configure.

Specify whether to enable user authentication by entering the **user-authentication** command with the **enable** keyword in group-policy configuration mode.

```
hostname(config-group-policy)# user-authentication {enable | disable}
hostname(config-group-policy)# no user-authentication
```

To disable user authentication, enter the **disable** keyword. To remove the user authentication attribute from the running configuration, enter the **no** form of this command. This option allows inheritance of a value for user authentication from another group policy.

If you require user authentication on the primary ASA, be sure to configure it on any backup servers as well.

The following example shows how to enable user authentication for the group policy named FirstGroup:

```
hostname(config)# group-policy FirstGroup attributes
hostname(config-group-policy)# user-authentication enable
```

## Configuring an Idle Timeout

Set an idle timeout for individual users behind hardware clients by entering the **user-authentication-idle-timeout** command in group-policy configuration mode. If there is no communication activity by a user behind a hardware client in the idle timeout period, the ASA terminates the client's access:

```
hostname(config-group-policy)# user-authentication-idle-timeout {minutes | none}
hostname(config-group-policy)# no user-authentication-idle-timeout
```



### Note

This timer terminates only the client's access through the VPN tunnel, not the VPN tunnel itself.

The idle timeout indicated in response to the **show uauth** command is always the idle timeout value of the user who authenticated the tunnel on the Cisco Easy VPN remote device.

The *minutes* parameter specifies the number of minutes in the idle timeout period. The minimum is 1 minute, the default is 30 minutes, and the maximum is 35791394 minutes.

To delete the idle timeout value, enter the **no** form of this command. This option allows inheritance of an idle timeout value from another group policy.

To prevent inheriting an idle timeout value, enter the **user-authentication-idle-timeout** command with the **none** keyword. This command sets the idle timeout with a null value, which disallows an idle timeout and prevents inheriting an user authentication idle timeout value from a default or specified group policy.

The following example shows how to set an idle timeout value of 45 minutes for the group policy named FirstGroup:

```
hostname(config)# group-policy FirstGroup attributes
hostname(config-group-policy)# user-authentication-idle-timeout 45
```

## Configuring IP Phone Bypass

You can allow Cisco IP phones to bypass individual user authentication behind a hardware client. To enable IP Phone Bypass, enter the **ip-phone-bypass** command with the **enable** keyword in group-policy configuration mode. IP Phone Bypass lets IP phones behind hardware clients connect without undergoing user authentication processes. IP Phone Bypass is disabled by default. If enabled, secure unit authentication remains in effect.

To disable IP Phone Bypass, enter the **disable** keyword. To remove the IP phone Bypass attribute from the running configuration, enter the **no** form of this command. This option allows inheritance of a value for IP Phone Bypass from another group policy:

```
hostname(config-group-policy)# ip-phone-bypass {enable | disable}
hostname(config-group-policy)# no ip-phone-bypass
```



**Note** You must configure `mac-exempt` to exempt the clients from authentication. Refer to the “[Configuring Device Pass-Through](#)” section on page 71-8 for more information.

## Configuring LEAP Bypass

When LEAP Bypass is enabled, LEAP packets from wireless devices behind a VPN 3002 hardware client travel across a VPN tunnel prior to user authentication. This action lets workstations using Cisco wireless access point devices establish LEAP authentication and then authenticate again per user authentication. LEAP Bypass is disabled by default.

To allow LEAP packets from Cisco wireless access points to bypass individual users authentication, enter the **leap-bypass** command with the **enable** keyword in group-policy configuration mode. To disable LEAP Bypass, enter the **disable** keyword. To remove the LEAP Bypass attribute from the running configuration, enter the **no** form of this command. This option allows inheritance of a value for LEAP Bypass from another group policy:

```
hostname(config-group-policy)# leap-bypass {enable | disable}
hostname(config-group-policy)# no leap-bypass
```



**Note** IEEE 802.1X is a standard for authentication on wired and wireless networks. It provides wireless LANs with strong mutual authentication between clients and authentication servers, which can provide dynamic per-user, per session wireless encryption privacy (WEP) keys, removing administrative burdens and security issues that are present with static WEP keys.

Cisco Systems has developed an 802.1X wireless authentication type called Cisco LEAP. LEAP (Lightweight Extensible Authentication Protocol) implements mutual authentication between a wireless client on one side of a connection and a RADIUS server on the other side. The credentials used for authentication, including a password, are always encrypted before they are transmitted over the wireless medium.

Cisco LEAP authenticates wireless clients to RADIUS servers. It does not include RADIUS accounting services.

This feature does not work as intended if you enable interactive hardware client authentication.



**Caution** There might be security risks to your network in allowing any unauthenticated traffic to traverse the tunnel.

The following example shows how to set LEAP Bypass for the group policy named FirstGroup:

```
hostname(config)# group-policy FirstGroup attributes
hostname(config-group-policy)# leap-bypass enable
```

## Enabling Network Extension Mode

Network extension mode lets hardware clients present a single, routable network to the remote private network over the VPN tunnel. IPsec encapsulates all traffic from the private network behind the hardware client to networks behind the ASA. PAT does not apply. Therefore, devices behind the ASA

have direct access to devices on the private network behind the hardware client over the tunnel, and only over the tunnel, and vice versa. The hardware client must initiate the tunnel, but after the tunnel is up, either side can initiate data exchange.

Enable network extension mode for hardware clients by entering the **nem** command with the **enable** keyword in group-policy configuration mode:

```
hostname(config-group-policy)# nem {enable | disable}
hostname(config-group-policy)# no nem
```

To disable NEM, enter the **disable** keyword. To remove the NEM attribute from the running configuration, enter the **no** form of this command. This option allows inheritance of a value from another group policy.

The following example shows how to set NEM for the group policy named FirstGroup:

```
hostname(config)# group-policy FirstGroup attributes
hostname(config-group-policy)# nem enable
```

## Configuring Backup Server Attributes

Configure backup servers if you plan on using them. IPsec backup servers let a VPN client connect to the central site when the primary ASA is unavailable. When you configure backup servers, the ASA pushes the server list to the client as the IPsec tunnel is established. Backup servers do not exist until you configure them, either on the client or on the primary ASA.

Configure backup servers either on the client or on the primary ASA. If you configure backup servers on the ASA, it pushes the backup server policy to the clients in the group, replacing the backup server list on the client if one is configured.



### Note

If you are using hostnames, it is wise to have backup DNS and WINS servers on a separate network from that of the primary DNS and WINS servers. Otherwise, if clients behind a hardware client obtain DNS and WINS information from the hardware client via DHCP, and the connection to the primary server is lost, and the backup servers have different DNS and WINS information, clients cannot be updated until the DHCP lease expires. In addition, if you use hostnames and the DNS server is unavailable, significant delays can occur.

To configure backup servers, enter the **backup-servers** command in group-policy configuration mode:

```
hostname(config-group-policy)# backup-servers {server1 server2... server10 |
clear-client-config | keep-client-config}
```

To remove a backup server, enter the **no** form of this command with the backup server specified. To remove the backup-servers attribute from the running configuration and enable inheritance of a value for backup-servers from another group policy, enter the **no** form of this command without arguments.

```
hostname(config-group-policy)# no backup-servers [server1 server2... server10 |
clear-client-config | keep-client-config]
```

The **clear-client-config** keyword specifies that the client uses no backup servers. The ASA pushes a null server list.

The **keep-client-config** keyword specifies that the ASA sends no backup server information to the client. The client uses its own backup server list, if configured. This is the default.

The *server1 server 2.... server10* parameter list is a space-delimited, priority-ordered list of servers for the VPN client to use when the primary ASA is unavailable. This list identifies servers by IP address or hostname. The list can be 500 characters long, and it can contain up to 10 entries.

The following example shows how to configure backup servers with IP addresses 10.10.10.1 and 192.168.10.14, for the group policy named FirstGroup:

```
hostname(config)# group-policy FirstGroup attributes
hostname(config-group-policy)# backup-servers 10.10.10.1 192.168.10.14
```

## Configuring Browser Client Parameters

The following commands configure the proxy server parameters for a client.

- Step 1** Configure a browser proxy server and port for a client device by entering the **msie-proxy server** command in group-policy configuration mode:

```
hostname(config-group-policy)# msie-proxy server {value server[:port] | none}
hostname(config-group-policy)#
```

The default value is **none**. To remove the attribute from the configuration, use the **no** form of the command.

```
hostname(config-group-policy)# no msie-proxy server
hostname(config-group-policy)#
```

The line containing the proxy server IP address or hostname and the port number must be less than 100 characters long.

The following example shows how to configure the IP address 192.168.10.1 as a Microsoft Internet Explorer proxy server, using port 880, for the group policy named FirstGroup:

```
hostname(config)# group-policy FirstGroup attributes
hostname(config-group-policy)# msie-proxy server value 192.168.21.1:880
hostname(config-group-policy)#
```

- Step 2** Configure the browser proxy actions (“methods”) for a client device by entering the **msie-proxy method** command in group-policy configuration mode.

```
hostname(config-group-policy)# msie-proxy method [auto-detect | no-modify | no-proxy |
use-server]
hostname(config-group-policy)#
```

The default value is **use-server**. To remove the attribute from the configuration, use the **no** form of the command.

```
hostname(config-group-policy)# no msie-proxy method [auto-detect | no-modify | no-proxy |
use-server]
hostname(config-group-policy)#
```

The available methods are as follows:

- **auto-detect**—Enables the use of automatic proxy server detection in the browser for the client device.
- **no-modify**—Leaves the HTTP browser proxy server setting in the browser unchanged for this client device.
- **no-proxy**—Disables the HTTP proxy setting in the browser for the client device.
- **use-server**—Sets the HTTP proxy server setting in the browser to use the value configured in the **msie-proxy server** command.

The line containing the proxy server IP address or hostname and the port number must be less than 100 characters long.

The following example shows how to configure auto-detect as the browser proxy setting for the group policy named FirstGroup:

```
hostname(config)# group-policy FirstGroup attributes
hostname(config-group-policy)# msie-proxy method auto-detect
hostname(config-group-policy)#
```

The following example configures the proxy setting for the group policy named FirstGroup to use the server QAsrvr, port 1001 as the server for the client device:

```
hostname(config)# group-policy FirstGroup attributes
hostname(config-group-policy)# msie-proxy server QAsrvr:port 1001
hostname(config-group-policy)# msie-proxy method use-server
hostname(config-group-policy)#
```

**Step 3** Configure browser proxy exception list settings for a local bypass on the client device by entering the **msie-proxy except-list** command in group-policy configuration mode. These addresses are not accessed by a proxy server. This list corresponds to the Exceptions box in the Proxy Settings dialog box.

```
hostname(config-group-policy)# msie-proxy except-list {value server[:port] | none}
hostname(config-group-policy)#
```

To remove the attribute from the configuration, use the **no** form of the command.

```
hostname(config-group-policy)# no msie-proxy except-list
hostname(config-group-policy)#
```

- **value server:port**—Specifies the IP address or name of an MSIE server and port that is applied for this client device. The port number is optional.
- **none**—Indicates that there is no IP address/hostname or port and prevents inheriting an exception list.

By default, msie-proxy except-list is disabled.

The line containing the proxy server IP address or hostname and the port number must be less than 100 characters long.

The following example shows how to set a browser proxy exception list, consisting of the server at IP address 192.168.20.1, using port 880, for the group policy named FirstGroup:

```
hostname(config)# group-policy FirstGroup attributes
hostname(config-group-policy)# msie-proxy except-list value 192.168.20.1:880
hostname(config-group-policy)#
```

**Step 4** Enable or disable browser proxy local-bypass settings for a client device by entering the **msie-proxy local-bypass** command in group-policy configuration mode.

```
hostname(config-group-policy)# msie-proxy local-bypass {enable | disable}
hostname(config-group-policy)#
```

To remove the attribute from the configuration, use the **no** form of the command.

```
hostname(config-group-policy)# no msie-proxy local-bypass {enable | disable}
hostname(config-group-policy)#
```

By default, msie-proxy local-bypass is disabled.

The following example shows how to enable browser proxy local-bypass for the group policy named FirstGroup:

```
hostname(config)# group-policy FirstGroup attributes
hostname(config-group-policy)# msie-proxy local-bypass enable
hostname(config-group-policy)#
```

## Configuring Network Admission Control Parameters

The group-policy NAC commands in this section all have default values. Unless you have a good reason for changing them, accept the default values for these parameters.

The security appliance uses Extensible Authentication Protocol (EAP) over UDP (EAPoUDP) messaging to validate the posture of remote hosts. Posture validation involves the checking of a remote host for compliancy with safety requirements before the assignment of a network access policy. An Access Control Server must be configured for Network Admission Control before you configure NAC on the security appliance.

The Access Control Server downloads the posture token, an informational text string configurable on the ACS, to the security appliance to aid in system monitoring, reporting, debugging, and logging. A typical posture token is Healthy, Checkup, Quarantine, Infected, or Unknown. Following posture validation or clientless authentication, the ACS downloads the access policy for the session to the security appliance.

The following parameters let you configure Network Admission Control settings for the default group policy or an alternative group policy.

**Step 1** (*Optional*) Configure the status query timer period. The security appliance starts the status query timer after each successful posture validation and status query response. The expiration of this timer triggers a query for changes in the host posture, referred to as a status query. Enter the number of seconds in the range 30 through 1800. The default setting is 300.

To specify the interval between each successful posture validation in a Network Admission Control session and the next query for changes in the host posture, use the **nac-sq-period** command in group-policy configuration mode:

```
hostname(config-group-policy)# nac-sq-period seconds
hostname(config-group-policy)#
```

To inherit the value of the status query timer from the default group policy, access the alternative group policy from which to inherit it, then use the **no** form of this command:

```
hostname(config-group-policy)# no nac-sq-period [seconds]
hostname(config-group-policy)#
```

The following example changes the value of the status query timer to 1800 seconds:

```
hostname(config-group-policy)# nac-sq-period 1800
hostname(config-group-policy)
```

The following example inherits the value of the status query timer from the default group policy:

```
hostname(config-group-policy)# no nac-sq-period
hostname(config-group-policy)#
```

**Step 2** (*Optional*) Configure the NAC revalidation period. The security appliance starts the revalidation timer after each successful posture validation. The expiration of this timer triggers the next unconditional posture validation. The security appliance maintains posture validation during revalidation. The default group policy becomes effective if the Access Control Server is unavailable during posture validation or revalidation. Enter the interval in seconds between each successful posture validation. The range is 300 through 86400. The default setting is 36000.

To specify the interval between each successful posture validation in a Network Admission Control session, use the **nac-reval-period** command in group-policy configuration mode:

```
hostname(config-group-policy) # nac-reval-period seconds
hostname(config-group-policy) #
```

To inherit the value of the Revalidation Timer from the default group policy, access the alternative group policy from which to inherit it, then use the **no** form of this command:

```
hostname(config-group-policy) # no nac-reval-period [seconds]
hostname(config-group-policy) #
```

The following example changes the revalidation timer to 86400 seconds:

```
hostname(config-group-policy) # nac-reval-period 86400
hostname(config-group-policy)
```

The following example inherits the value of the revalidation timer from the default group policy:

```
hostname(config-group-policy) # no nac-reval-period
hostname(config-group-policy) #
```

**Step 3** (*Optional*) Configure the default ACL for NAC. The security appliance applies the security policy associated with the selected ACL if posture validation fails. Specify **none** or an extended ACL. The default setting is **none**. If the setting is **none** and posture validation fails, the security appliance applies the default group policy.

To specify the ACL to be used as the default ACL for Network Admission Control sessions that fail posture validation, use the **nac-default-acl** command in group-policy configuration mode:

```
hostname(config-group-policy) # nac-default-acl {acl-name | none}
hostname(config-group-policy) #
```

To inherit the ACL from the default group policy, access the alternative group policy from which to inherit it, then use the **no** form of this command:

```
hostname(config-group-policy) # no nac-default-acl [acl-name | none]
hostname(config-group-policy) #
```

The elements of this command are as follows:

- *acl-name*—Specifies the name of the posture validation server group, as configured on the ASA using the **aaa-server host** command. The name must match the server-tag variable specified in that command.
- **none**—Disables inheritance of the ACL from the default group policy and does not apply an ACL to NAC sessions that fail posture validation.

Because NAC is disabled by default, VPN traffic traversing the ASA is not subject to the NAC Default ACL until NAC is enabled.

The following example identifies **acl-1** as the ACL to be applied when posture validation fails:

```
hostname(config-group-policy) # nac-default-acl acl-1
hostname(config-group-policy)
```

The following example inherits the ACL from the default group policy:

```
hostname(config-group-policy) # no nac-default-acl
hostname(config-group-policy)
```

The following example disables inheritance of the ACL from the default group policy and does not apply an ACL to NAC sessions that fail posture validation:

```
hostname(config-group-policy) # nac-default-acl none
hostname(config-group-policy) #
```

**Step 4** Configure NAC exemptions for VPN. By default, the exemption list is empty. The default value of the filter attribute is **none**. Enter the **vpn-nac-exempt** once for each operating system (and ACL) to be matched to exempt remote hosts from posture validation.

To add an entry to the list of remote computer types that are exempt from posture validation, use the **vpn-nac-exempt** command in group-policy configuration mode.

```
hostname(config-group-policy)# vpn-nac-exempt os "os name" [filter {acl-name | none}]
[disable]
hostname(config-group-policy)#
```

To disable inheritance and specify that all hosts are subject to posture validation, use the **none** keyword immediately following **vpn-nac-exempt**.

```
hostname(config-group-policy)# vpn-nac-exempt none
hostname(config-group-policy)#
```

To remove an entry from the exemption list, use the **no** form of this command and name the operating system (and ACL) in the entry to be removed.

```
hostname(config-group-policy)# no vpn-nac-exempt [os "os name"] [filter {acl-name | none}]
[disable]
hostname(config-group-policy)#
```

To remove all entries from the exemption list associated with this group policy and inherit the list from the default group policy, use the **no** form of this command without specifying additional keywords.

```
hostname(config-group-policy)# no vpn-nac-exempt
hostname(config-group-policy)#
```

The syntax elements for these commands are as follows:

- *acl-name*—Name of the ACL present in the ASA configuration.
- **disable**—Disables the entry in the exemption list without removing it from the list.
- **filter**—(Optional) filter to apply an ACL to filter the traffic if the computer matches the *os name*.
- **none**—When entered immediately after **vpn-nac-exempt**, this keyword disables inheritance and specifies that all hosts will be subject to posture validation. When entered immediately after **filter**, this keyword indicates that the entry does not specify an ACL.
- **OS**—Exempts an operating system from posture validation.
- *os name*—Operating system name. Quotation marks are required only if the name includes a space (for example, "Windows XP").

The following example adds all hosts running Windows XP to the list of computers that are exempt from posture validation:

```
hostname(config-group-policy)# vpn-nac-exempt os "Windows XP"
hostname(config-group-policy)
```

The following example exempts all hosts running Windows 98 that match an ACE in the ACL named *acl-1*:

```
hostname(config-group-policy)# vpn-nac-exempt os "Windows 98" filter acl-1
hostname(config-group-policy)
```

The following example adds the same entry to the exemption list, but disables it:

```
hostname(config-group-policy)# vpn-nac-exempt os "Windows 98" filter acl-1 disable
hostname(config-group-policy)
```

The following example removes the same entry from the exemption list, regardless of whether it is disabled:

```
hostname(config-group-policy)# no vpn-nac-exempt os "Windows 98" filter acl-1
hostname(config-group-policy)
```

The following example disables inheritance and specifies that all hosts will be subject to posture validation:

```
hostname(config-group-policy)# no vpn-nac-exempt none
hostname(config-group-policy)
```

The following example removes all entries from the exemption list:

```
hostname(config-group-policy)# no vpn-nac-exempt
hostname(config-group-policy)
```

**Step 5** Enable or disable Network Admission Control by entering the following command:

```
hostname(config-group-policy)# nac {enable | disable}
hostname(config-group-policy)#
```

To inherit the NAC setting from the default group policy, access the alternative group policy from which to inherit it, then use the **no** form of this command:

```
hostname(config-group-policy)# no nac [enable | disable]
hostname(config-group-policy)#
```

By default, NAC is disabled. Enabling NAC requires posture validation for remote access. If the remote computer passes the validation checks, the ACS server downloads the access policy for the ASA to enforce. NAC is disabled by default.

An Access Control Server must be present on the network.

The following example enables NAC for the group policy:

```
hostname(config-group-policy)# nac enable
hostname(config-group-policy)#
```

## Configuring Address Pools

Configure a list of address pools for allocating addresses to remote clients by entering the **address-pools** command in group-policy attributes configuration mode:

```
hostname(config-group-policy)# address-pools value address_pool1 [...address_pool6]
hostname(config-group-policy)#
```

The address-pools settings in this command override the local pool settings in the group. You can specify a list of up to six local address pools to use for local address allocation.

The order in which you specify the pools is significant. The ASA allocates addresses from these pools in the order in which the pools appear in this command.

To remove the attribute from the group policy and enable inheritance from other sources of group policy, use the **no** form of this command:

```
hostname(config-group-policy)# no address-pools value address_pool1 [...address_pool6]
hostname(config-group-policy)#
```

The command **address-pools none** disables this attribute from being inherited from other sources of policy, such as the DefaultGrpPolicy:

```
hostname(config-group-policy)# address-pools none
hostname(config-group-policy)#
```

The command **no address pools none** removes the **address-pools none** command from the configuration, restoring the default value, which is to allow inheritance.

```
hostname(config-group-policy)# no address-pools none
hostname(config-group-policy)#
```

The syntax elements of this command are as follows:

- *address\_pool*—Specifies the name of the address pool configured with the **ip local pool** command. You can specify up to 6 local address pools.
- **none**—Specifies that no address pools are configured and disables inheritance from other sources of group policy.
- **value**—Specifies a list of up to 6 address pools from which to assign addresses.

The following example entered in config-general configuration mode, configures pool 1 and pool20 as lists of address pools to use for allocating addresses to remote clients for GroupPolicy1:

```
hostname(config)# ip local pool pool 192.168.10.1-192.168.10.100 mask 255.255.0.0
hostname(config)# ip local pool pool20 192.168.20.1-192.168.20.200 mask 255.255.0.0
hostname(config)# group-policy GroupPolicy1 attributes
hostname(config-group-policy)# address-pools value pool1 pool20
hostname(config-group-policy)#
```

## Configuring Firewall Policies

A *firewall* isolates and protects a computer from the Internet by inspecting each inbound and outbound individual packet of data to determine whether to allow or drop it. Firewalls provide extra security if remote users in a group have split tunneling configured. In this case, the firewall protects the user's PC, and thereby the corporate network, from intrusions by way of the Internet or the user's local LAN. Remote users connecting to the ASA with the VPN client can choose the appropriate firewall option.

Set personal firewall policies that the ASA pushes to the VPN client during IKE tunnel negotiation by using the **client-firewall** command in group-policy configuration mode. To delete a firewall policy, enter the **no** form of this command.

To delete all firewall policies, enter the **no client-firewall** command without arguments. This command deletes all configured firewall policies, including a null policy if you created one by entering the **client-firewall** command with the **none** keyword.

When there are no firewall policies, users inherit any that exist in the default or other group policy. To prevent users from inheriting such firewall policies, enter the **client-firewall** command with the **none** keyword.

The Add or Edit Group Policy window, Client Firewall tab, lets you configure firewall settings for VPN clients for the group policy being added or modified.



### Note

Only VPN clients running Microsoft Windows can use these firewall features. They are currently not available to hardware clients or other (non-Windows) software clients.

In the first scenario, a remote user has a personal firewall installed on the PC. The VPN client enforces firewall policy defined on the local firewall, and it monitors that firewall to make sure it is running. If the firewall stops running, the VPN client drops the connection to the ASA. (This firewall enforcement

mechanism is called *Are You There (AYT)*, because the VPN client monitors the firewall by sending it periodic “are you there?” messages; if no reply comes, the VPN client knows the firewall is down and terminates its connection to the ASA.) The network administrator might configure these PC firewalls originally, but with this approach, each user can customize his or her own configuration.

In the second scenario, you might prefer to enforce a centralized firewall policy for personal firewalls on VPN client PCs. A common example would be to block Internet traffic to remote PCs in a group using split tunneling. This approach protects the PCs, and therefore the central site, from intrusions from the Internet while tunnels are established. This firewall scenario is called *push policy* or *Central Protection Policy (CPP)*. On the ASA, you create a set of traffic management rules to enforce on the VPN client, associate those rules with a filter, and designate that filter as the firewall policy. The ASA pushes this policy down to the VPN client. The VPN client then in turn passes the policy to the local firewall, which enforces it.

## Supporting a Zone Labs Integrity Server

This section introduces the Zone Labs Integrity server, also called the Check Point Integrity server, and presents an example procedure for configuring the ASA to support the Zone Labs Integrity server. The Integrity server is a central management station for configuring and enforcing security policies on remote PCs. If a remote PC does not conform to the security policy dictated by the Integrity server, it is not granted access to the private network protected by the Integrity server and ASA.

This section includes the following topics:

- [Overview of the Integrity Server and ASA Interaction, page 67-64](#)
- [Configuring Integrity Server Support, page 67-65](#)

## Overview of the Integrity Server and ASA Interaction

The VPN client software and the Integrity client software are co-resident on a remote PC. The following steps summarize the actions of the remote PC, ASA, and Integrity server in the establishment of a session between the PC and the enterprise private network:

1. The VPN client software (residing on the same remote PC as the Integrity client software) connects to the ASA and tells the ASA what type of firewall client it is.
2. After the ASA approves the client firewall type, the ASA passes Integrity server address information back to the Integrity client.
3. With the ASA acting as a proxy, the Integrity client establishes a restricted connection with the Integrity server. A restricted connection is only between the Integrity client and the Integrity server.
4. The Integrity server determines if the Integrity client is in compliance with the mandated security policies. If the Integrity client is in compliance with security policies, the Integrity server instructs the ASA to open the connection and provide the Integrity client with connection details.
5. On the remote PC, the VPN client passes connection details to the Integrity client and signals that policy enforcement should begin immediately and the Integrity client can enter the private network.
6. After the VPN connection is established, the Integrity server continues to monitor the state of the Integrity client using client heartbeat messages.

**Note**

The current release of the ASA supports one Integrity server at a time, even though the user interfaces support the configuration of up to five Integrity servers. If the active Integrity server fails, configure another one on the ASA and then reestablish the VPN client session.

## Configuring Integrity Server Support

This section describes an example procedure for configuring the ASA to support the Zone Labs Integrity servers. The procedure involves configuring address, port, connection fail timeout and fail states, and SSL certificate parameters.

To configure the Integrity server, perform the following steps:

|               | Command                                                                                                                                                                  | Purpose                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|---------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Step 1</b> | <p><b>zonelabs-integrity server-address</b> <i>{hostname1   ip-address1}</i></p> <p><b>Example:</b><br/>hostname(config)# zonelabs-integrity server-address 10.0.0.5</p> | Configures an Integrity server using the IP address 10.0.0.5.                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Step 2</b> | <p><b>zonelabs-integrity port</b> <i>port-number</i></p> <p><b>Example:</b><br/>hostname(config)# zonelabs-integrity port 300</p>                                        | Specifies port 300 (the default port is 5054).                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Step 3</b> | <p><b>zonelabs-integrity interface</b> <i>interface</i></p> <p><b>Example:</b><br/>hostname(config)# zonelabs-integrity interface inside</p>                             | Specifies the inside interface for communications with the Integrity server.                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Step 4</b> | <p><b>zonelabs-integrity fail-timeout</b> <i>timeout</i></p> <p><b>Example:</b><br/>hostname(config)# zonelabs-integrity fail-timeout 12</p>                             | <p>Ensures that the ASA waits 12 seconds for a response from either the active or standby Integrity servers before declaring the Integrity server as failed and closing the VPN client connections.</p> <p><b>Note</b> If the connection between the ASA and the Integrity server fails, the VPN client connections remain open by default so that the enterprise VPN is not disrupted by the failure of an Integrity server. However, you may want to close the VPN connections if the Zone Labs Integrity server fails.</p> |
| <b>Step 5</b> | <p><b>zonelabs-integrity fail-close</b></p> <p><b>Example:</b><br/>hostname(config)# zonelabs-integrity fail-close</p>                                                   | Configures the ASA so that connections to VPN clients close when the connection between the ASA and the Zone Labs Integrity server fails.                                                                                                                                                                                                                                                                                                                                                                                     |

|               | Command                                                                                                                                                                   | Purpose                                                                                                                                            |
|---------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Step 6</b> | <b>zonelabs-integrity fail-open</b><br><br><b>Example:</b><br>hostname(config)# zonelabs-integrity fail-open                                                              | Returns the configured VPN client connection fail state to the default and ensures that the client connections remain open.                        |
| <b>Step 7</b> | <b>zonelabs-integrity ssl-certificate-port</b><br><i>cert-port-number</i><br><br><b>Example:</b><br>hostname(config)# zonelabs-integrity<br>ssl-certificate-port 300      | Specifies that the Integrity server connects to port 300 (the default is port 80) on the ASA to request the server SSL certificate.                |
| <b>Step 8</b> | <b>zonelabs-integrity ssl-client-authentication {enable   disable}</b><br><br><b>Example:</b><br>hostname(config)# zonelabs-integrity<br>ssl-client-authentication enable | While the server SSL certificate is always authenticated, also specifies that the client SSL certificate of the Integrity server be authenticated. |

To set the firewall client type to the Zone Labs Integrity type, enter the following command:

| Command                                                                                                                                     | Purpose                                                                                                                                                                                                                                                                              |
|---------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>client-firewall {opt   req} zonelabs-integrity</b><br><br><b>Example:</b><br>hostname(config)# client-firewall req<br>zonelabs-integrity | For more information, see the <a href="#">“Configuring Firewall Policies”</a> section on page 67-63. The command arguments that specify firewall policies are not used when the firewall type is <b>zonelabs-integrity</b> , because the Integrity server determines these policies. |

## Setting Client Firewall Parameters

Enter the following commands to set the appropriate client firewall parameters. You can configure only one instance of each command. [Table 67-4](#) lists the syntax elements of these commands. For more information, see the [“Configuring Firewall Policies”](#) section on page 67-63.

### Cisco Integrated Firewall

```
hostname(config-group-policy)# client-firewall {opt | req} cisco-integrated acl-in ACL
acl-out ACL
```

### Cisco Security Agent

```
hostname(config-group-policy)# client-firewall {opt | req} cisco-security-agent
```

### No Firewall

```
hostname(config-group-policy)# client-firewall none
```

## Custom Firewall

```
hostname(config-group-policy)# client-firewall {opt | req} custom vendor-id num product-id
num policy {AYT | CPP acl-in ACL acl-out ACL} [description string]
```

## Zone Labs Firewalls



### Note

```
hostname(config-group-policy)# client-firewall {opt | req} zonelabs-integrity
```

When the firewall type is **zonelabs-integrity**, do not include arguments. The Zone Labs Integrity Server determines the policies.

```
hostname(config-group-policy)# client-firewall {opt | req} zonelabs-zonealarm policy {AYT
| CPP acl-in ACL acl-out ACL}
```

```
hostname(config-group-policy)# client-firewall {opt | req} zonelabs-zonealarmorpro policy
{AYT | CPP acl-in ACL acl-out ACL}
```

```
client-firewall {opt | req} zonelabs-zonealarmpro policy {AYT | CPP acl-in ACL acl-out
ACL}
```

## Sygate Personal Firewalls

```
hostname(config-group-policy)# client-firewall {opt | req} sygate-personal
```

```
hostname(config-group-policy)# client-firewall {opt | req} sygate-personal-pro
```

```
hostname(config-group-policy)# client-firewall {opt | req} sygate-security-agent
```

## Network Ice, Black Ice Firewall:

```
hostname(config-group-policy)# client-firewall {opt | req} networkice-blackice
```

**Table 67-4** *client-firewall* Command Keywords and Variables

| Parameter                        | Description                                                                                                                                                                                                                 |
|----------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>acl-in</b> <i>ACL</i>         | Provides the policy the client uses for inbound traffic.                                                                                                                                                                    |
| <b>acl-out</b> <i>ACL</i>        | Provides the policy the client uses for outbound traffic.                                                                                                                                                                   |
| <b>AYT</b>                       | Specifies that the client PC firewall application controls the firewall policy. The ASA checks to make sure that the firewall is running. It asks, "Are You There?" If there is no response, the ASA tears down the tunnel. |
| <b>cisco-integrated</b>          | Specifies Cisco Integrated firewall type.                                                                                                                                                                                   |
| <b>cisco-security-agent</b>      | Specifies Cisco Intrusion Prevention Security Agent firewall type.                                                                                                                                                          |
| <b>CPP</b>                       | Specifies Policy Pushed as source of the VPN client firewall policy.                                                                                                                                                        |
| <b>custom</b>                    | Specifies Custom firewall type.                                                                                                                                                                                             |
| <b>description</b> <i>string</i> | Describes the firewall.                                                                                                                                                                                                     |
| <b>networkice-blackice</b>       | Specifies Network ICE Black ICE firewall type.                                                                                                                                                                              |

**Table 67-4** *client-firewall Command Keywords and Variables*

|                                       |                                                                                                                                                                                                                     |
|---------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>none</b>                           | Indicates that there is no client firewall policy. Sets a firewall policy with a null value, thereby disallowing a firewall policy. Prevents inheriting a firewall policy from a default or specified group policy. |
| <b>opt</b>                            | Indicates an optional firewall type.                                                                                                                                                                                |
| <b>product-id</b>                     | Identifies the firewall product.                                                                                                                                                                                    |
| <b>req</b>                            | Indicates a required firewall type.                                                                                                                                                                                 |
| <b>sygate-personal</b>                | Specifies the Sygate Personal firewall type.                                                                                                                                                                        |
| <b>sygate-personal-pro</b>            | Specifies Sygate Personal Pro firewall type.                                                                                                                                                                        |
| <b>sygate-security-agent</b>          | Specifies Sygate Security Agent firewall type.                                                                                                                                                                      |
| <b>vendor-id</b>                      | Identifies the firewall vendor.                                                                                                                                                                                     |
| <b>zonelabs-integrity</b>             | Specifies Zone Labs Integrity Server firewall type.                                                                                                                                                                 |
| <b>zonelabs-zonealarm</b>             | Specifies Zone Labs Zone Alarm firewall type.                                                                                                                                                                       |
| <b>zonelabs-zonealarmorpro policy</b> | Specifies Zone Labs Zone Alarm or Pro firewall type.                                                                                                                                                                |
| <b>zonelabs-zonealarmpro policy</b>   | Specifies Zone Labs Zone Alarm Pro firewall type.                                                                                                                                                                   |

The following example shows how to set a client firewall policy that requires Cisco Intrusion Prevention Security Agent for the group policy named FirstGroup:

```
hostname(config)# group-policy FirstGroup attributes
hostname(config-group-policy)# client-firewall req cisco-security-agent
hostname(config-group-policy)#
```

## Configuring Client Access Rules

Configure rules that limit the remote access client types and versions that can connect via IPsec through the ASA by using the **client-access-rule** command in group-policy configuration mode. Construct rules according to these guidelines:

- If you do not define any rules, the ASA permits all connection types.
- When a client matches none of the rules, the ASA denies the connection. If you define a deny rule, you must also define at least one permit rule; otherwise, the ASA denies all connections.
- For both software and hardware clients, type and version must exactly match their appearance in the **show vpn-sessiondb remote** display.
- The \* character is a wildcard, which you can enter multiple times in each rule. For example, **client-access rule 3 deny type \* version 3.\*** creates a priority 3 client access rule that denies all client types running release versions 3.x software.
- You can construct a maximum of 25 rules per group policy.
- There is a limit of 255 characters for an entire set of rules.
- You can enter n/a for clients that do not send client type and/or version.

To delete a rule, enter the **no** form of this command. This command is equivalent to the following command:

```
hostname(config-group-policy)# client-access-rule 1 deny type "Cisco VPN Client" version 4.0
```

To delete all rules, enter the **no client-access-rule** command without arguments. This deletes all configured rules, including a null rule if you created one by issuing the **client-access-rule** command with the **none** keyword.

By default, there are no access rules. When there are no client access rules, users inherit any rules that exist in the default group policy.

To prevent users from inheriting client access rules, enter the **client-access-rule** command with the **none** keyword. The result of this command is that all client types and versions can connect.

```
hostname(config-group-policy)# client-access rule priority {permit | deny} type type
version {version | none}
```

```
hostname(config-group-policy)# no client-access rule [priority {permit | deny} type type
version version]
```

Table 67-5 explains the meaning of the keywords and parameters in these commands.

**Table 67-5** *client-access rule* Command Keywords and Variables

| Parameter                     | Description                                                                                                                                                                                                                                                               |
|-------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>deny</b>                   | Denies connections for devices of a particular type and/or version.                                                                                                                                                                                                       |
| <b>none</b>                   | Allows no client access rules. Sets client-access-rule to a null value, thereby allowing no restriction. Prevents inheriting a value from a default or specified group policy.                                                                                            |
| <b>permit</b>                 | Permits connections for devices of a particular type and/or version.                                                                                                                                                                                                      |
| <i>priority</i>               | Determines the priority of the rule. The rule with the lowest integer has the highest priority. Therefore, the rule with the lowest integer that matches a client type and/or version is the rule that applies. If a lower priority rule contradicts, the ASA ignores it. |
| <b>type</b> <i>type</i>       | Identifies device types via free-form strings, for example VPN 3002. A string must match exactly its appearance in the <b>show vpn-sessiondb remote</b> display, except that you can enter the * character as a wildcard.                                                 |
| <b>version</b> <i>version</i> | Identifies the device version via free-form strings, for example 7.0. A string must match exactly its appearance in the <b>show vpn-sessiondb remote</b> display, except that you can enter the * character as a wildcard.                                                |

The following example shows how to create client access rules for the group policy named FirstGroup. These rules permit Cisco VPN clients running software version 4.x, while denying all Windows NT clients:

```
hostname(config)# group-policy FirstGroup attributes
hostname(config-group-policy)# client-access-rule 1 deny type WinNT version *
hostname(config-group-policy)# client-access-rule 2 permit "Cisco VPN Client" version 4.*
```



**Note** The “type” field is a free-form string that allows any value, but that value must match the fixed value that the client sends to the ASA at connect time.

## Configuring Group-Policy Attributes for Clientless SSL VPN Sessions

Clientless SSL VPN lets users establish a secure, remote-access VPN tunnel to the ASA using a web browser. There is no need for either a software or hardware client. Clientless SSL VPN provides easy access to a broad range of web resources and web-enabled applications from almost any computer that can reach HTTPS Internet sites. Clientless SSL VPN uses SSL and its successor, TLS1, to provide a secure connection between remote users and specific, supported internal resources that you configure at a central site. The ASA recognizes connections that need to be proxied, and the HTTP server interacts with the authentication subsystem to authenticate users. By default, clientless SSL VPN is disabled.

You can customize a configuration of clientless SSL VPN for specific internal group policies.



### Note

The `webvpn` mode that you enter from global configuration mode lets you configure global settings for clientless SSL VPN sessions. The `webvpn` mode described in this section, which you enter from group-policy configuration mode, lets you customize a configuration of group policies specifically for clientless SSL VPN sessions.

In group-policy `webvpn` configuration mode, you can specify whether to inherit or customize the following parameters, each of which is described in the subsequent sections:

- customizations
- `html-content-filter`
- `homepage`
- `filter`
- `url-list`
- `port-forward`
- `port-forward-name`
- `sso server` (single-signon server)
- `auto-signon`
- `deny message`
- AnyConnect Secure Mobility Client
- `keep-alive ignore`
- `HTTP compression`

In many instances, you define the `webvpn` attributes as part of configuring clientless SSL VPN, then you apply those definitions to specific groups when you configure the group-policy `webvpn` attributes. Enter group-policy `webvpn` configuration mode by using the `webvpn` command in group-policy configuration mode. `Webvpn` commands for group policies define access to files, URLs and TCP applications over clientless SSL VPN sessions. They also identify ACLs and types of traffic to filter. Clientless SSL VPN is disabled by default. See the description of [Chapter 74, “Configuring Clientless SSL VPN”](#) for more information about configuring the attributes for clientless SSL VPN sessions.

To remove all commands entered in group-policy `webvpn` configuration mode, enter the `no` form of this command. These `webvpn` commands apply to the username or group policy from which you configure them.

```
hostname(config-group-policy)# webvpn
hostname(config-group-policy)# no webvpn
```

The following example shows how to enter group-policy webvpn configuration mode for the group policy named FirstGroup:

```
hostname(config)# group-policy FirstGroup attributes
hostname(config-group-policy)# webvpn
hostname(config-group-webvpn)#
```

## Applying Customization

Customizations determine the appearance of the windows that the user sees upon login. You configure the customization parameters as part of configuring clientless SSL VPN. To apply a previously defined web-page customization to change the look-and-feel of the web page that the user sees at login, enter the customization command in group-policy webvpn configuration mode:

```
hostname(config-group-webvpn)# customization customization_name
hostname(config-group-webvpn)#
```

For example, to use the customization named blueborder, enter the following command:

```
hostname(config-group-webvpn)# customization blueborder
hostname(config-group-webvpn)#
```

You configure the customization itself by entering the **customization** command in webvpn mode.

The following example shows a command sequence that first establishes a customization named 123 that defines a password prompt. The example then defines a group policy named testpolicy and uses the **customization** command to specify the use of the customization named 123 for clientless SSL VPN sessions:

```
hostname(config)# webvpn
hostname(config-webvpn)# customization 123
hostname(config-webvpn-custom)# password-prompt Enter password
hostname(config-webvpn)# exit
hostname(config)# group-policy testpolicy nopassword
hostname(config)# group-policy testpolicy attributes
hostname(config-group-policy)# webvpn
hostname(config-group-webvpn)# customization value 123
hostname(config-group-webvpn)#
```

## Specifying a “Deny” Message

You can specify the message delivered to a remote user who logs into a clientless SSL VPN session successfully, but has no VPN privileges, by entering the **deny-message** command in group-policy webvpn configuration mode:

```
hostname(config-group-webvpn)# deny-message value "message"
hostname(config-group-webvpn)# no deny-message value "message"
hostname(config-group-webvpn)# deny-message none
```

The **no deny-message value** command removes the message string, so that the remote user does not receive a message.

The **no deny-message none** command removes the attribute from the connection profile policy configuration. The policy inherits the attribute value.

The message can be up to 491 alphanumeric characters long, including special characters, spaces, and punctuation, but not counting the enclosing quotation marks. The text appears on the remote user's browser upon login. When typing the string in the **deny-message value** command, continue typing even if the command wraps.

The default deny message is: “Login was successful, but because certain criteria have not been met or due to some specific group policy, you do not have permission to use any of the VPN features. Contact your IT administrator for more information.”

The first command in the following example creates an internal group policy named group2. The subsequent commands modify the attributes, including the webvpn deny message associated with that policy.

```
hostname(config)# group-policy group2 internal
hostname(config)# group-policy group2 attributes
hostname(config-group)# webvpn
hostname(config-group-webvpn)# deny-message value "Your login credentials are OK. However,
you have not been granted rights to use the VPN features. Contact your administrator for
more information."
hostname(config-group-webvpn)
```

### Configuring Group-Policy Filter Attributes for Clientless SSL VPN Sessions

Specify whether to filter Java, ActiveX, images, scripts, and cookies from clientless SSL VPN sessions for this group policy by using the **html-content-filter** command in webvpn mode. HTML filtering is disabled by default.

To remove a content filter, enter the **no** form of this command. To remove all content filters, including a null value created by issuing the **html-content-filter** command with the **none** keyword, enter the **no** form of this command without arguments. The **no** option allows inheritance of a value from another group policy. To prevent inheriting an html content filter, enter the **html-content-filter** command with the **none** keyword.

Using the command a second time overrides the previous setting.

```
hostname(config-group-webvpn)# html-content-filter {java | images | scripts | cookies |
none}

hostname(config-group-webvpn)# no html-content-filter [java | images | scripts | cookies |
none]
```

Table 67-6 describes the meaning of the keywords used in this command.

**Table 67-6** filter Command Keywords

| Keyword        | Meaning                                                                                                                       |
|----------------|-------------------------------------------------------------------------------------------------------------------------------|
| <b>cookies</b> | Removes cookies from images, providing limited ad filtering and privacy.                                                      |
| <b>images</b>  | Removes references to images (removes <IMG> tags).                                                                            |
| <b>java</b>    | Removes references to Java and ActiveX (removes <EMBED>, <APPLET>, and <OBJECT> tags).                                        |
| <b>none</b>    | Indicates that there is no filtering. Sets a null value, thereby disallowing filtering. Prevents inheriting filtering values. |
| <b>scripts</b> | Removes references to scripting (removes <SCRIPT> tags).                                                                      |

The following example shows how to set filtering of JAVA and ActiveX, cookies, and images for the group policy named FirstGroup:

```
hostname(config)# group-policy FirstGroup attributes
hostname(config-group-policy)# webvpn
hostname(config-group-webvpn)# html-content-filter java cookies images
hostname(config-group-webvpn)#
```

## Specifying the User Home Page

Specify a URL for the web page that displays when a user in this group logs in by using the **homepage** command in group-policy webvpn configuration mode. There is no default home page.

To remove a configured home page, including a null value created by issuing the **homepage none** command, enter the **no** form of this command. The **no** option allows inheritance of a value from another group policy. To prevent inheriting a home page, enter the **homepage none** command.

The **none** keyword indicates that there is no home page for clientless SSL VPN sessions. It sets a null value, thereby disallowing a home page and prevents inheriting an home page.

The *url-string* variable following the keyword **value** provides a URL for the home page. The string must begin with either `http://` or `https://`.

```
hostname(config-group-webvpn)# homepage {value url-string | none}
hostname(config-group-webvpn)# no homepage
hostname(config-group-webvpn)#
```

## Configuring Auto-Signon

The **auto-signon** command is a single sign-on method for users of clientless SSL VPN sessions. It passes the login credentials (username and password) to internal servers for authentication using NTLM authentication, basic authentication, or both. Multiple auto-signon commands can be entered and are processed according to the input order (early commands take precedence).

You can use the auto-signon feature in three modes: webvpn configuration, webvpn group configuration, or webvpn username configuration mode. The typical precedence behavior applies where username supersedes group, and group supersedes global. The mode you choose depends upon the desired scope of authentication.

To disable auto-signon for a particular user to a particular server, use the **no** form of the command with the original specification of IP block or URI. To disable authentication to all servers, use the **no** form without arguments. The **no** option allows inheritance of a value from the group policy.

The following example, entered in group-policy webvpn configuration mode, configures auto-signon for the user named anyuser, using basic authentication, to servers with IP addresses ranging from 10.1.1.0 to 10.1.1.255:

The following example commands configure auto-signon for users of clientless SSL VPN sessions, using either basic or NTLM authentication, to servers defined by the URI mask `https://*.example.com/*`:

```
hostname(config)# group-policy ExamplePolicy attributes
hostname(config-group-policy)# webvpn
hostname(config-group-webvpn)# auto-signon allow uri https://*.example.com/* auth-type all
hostname(config-group-webvpn)#
```

The following example commands configure auto-signon for users of clientless SSL VPN sessions, using either basic or NTLM authentication, to the server with the IP address 10.1.1.0, using subnet mask 255.255.255.0:

```
hostname(config)# group-policy ExamplePolicy attributes
hostname(config-group-policy)# webvpn
hostname(config-group-webvpn)# auto-signon allow ip 10.1.1.0 255.255.255.0 auth-type all
hostname(config-group-webvpn)#
```

## Specifying the Access List for Clientless SSL VPN Sessions

Specify the name of the access list to use for clientless SSL VPN sessions for this group policy or username by using the **filter** command in webvpn mode. Clientless SSL VPN access lists do not apply until you enter the **filter** command to specify them.

To remove the access list, including a null value created by issuing the **filter none** command, enter the **no** form of this command. The **no** option allows inheritance of a value from another group policy. To prevent inheriting filter values, enter the **filter value none** command.

Access lists for clientless SSL VPN sessions do not apply until you enter the **filter** command to specify them.

You configure ACLs to permit or deny various types of traffic for this group policy. You then enter the **filter** command to apply those ACLs for clientless SSL VPN traffic.

```
hostname(config-group-webvpn) # filter {value ACLname | none}
hostname(config-group-webvpn) # no filter
```

The **none** keyword indicates that there is no **webvpntype** access list. It sets a null value, thereby disallowing an access list and prevents inheriting an access list from another group policy.

The *ACLname* string following the keyword **value** provides the name of the previously configured access list.



### Note

---

Clientless SSL VPN sessions do not use ACLs defined in the **vpn-filter** command.

---

The following example shows how to set a filter that invokes an access list named *acl\_in* for the group policy named FirstGroup:

```
hostname(config) # group-policy FirstGroup attributes
hostname(config-group-policy) # webvpn
hostname(config-group-webvpn) # filter acl_in
hostname(config-group-webvpn) #
```

## Applying a URL List

You can specify a list of URLs to appear on the clientless SSL VPN home page for a group policy. First, you must create one or more named lists by entering the **url-list** command in global configuration mode. To apply a list of servers and URLs for clientless SSL VPN sessions to a particular group policy, allowing access to the URLs in a list for a specific group policy, use the name of the list or lists you create there with the **url-list** command in group-policy webvpn configuration mode. There is no default URL list.

To remove a list, including a null value created by using the **url-list none** command, use the **no** form of this command. The **no** option allows inheritance of a value from another group policy. To prevent inheriting a URL list, use the **url-list none** command. Using the command a second time overrides the previous setting:

```
hostname(config-group-webvpn) # url-list {value name | none} [index]
hostname(config-group-webvpn) # no url-list
```

Table 67-7 shows the **url-list** command parameters and their meanings.

**Table 67-7** *url-list Command Keywords and Variables*

| Parameter    | Meaning                                          |
|--------------|--------------------------------------------------|
| <i>index</i> | Indicates the display priority on the home page. |

**Table 67-7** *url-list Command Keywords and Variables*

|                          |                                                                                                                                                     |
|--------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>none</b>              | Sets a null value for url lists. Prevents inheriting a list from a default or specified group policy.                                               |
| <b>value</b> <i>name</i> | Specifies the name of a previously configured list of urls. To configure such a list, use the <b>url-list</b> command in global configuration mode. |

The following example sets a URL list called FirstGroupURLs for the group policy named FirstGroup and specifies that this should be the first URL list displayed on the homepage:

```
hostname(config)# group-policy FirstGroup attributes
hostname(config-group-policy)# webvpn
hostname(config-group-webvpn)# url-list value FirstGroupURLs 1
hostname(config-group-webvpn)#
```

### Enabling ActiveX Relay for a Group Policy

ActiveX Relay lets a user who has established a Clientless SSL VPN session use the browser to launch Microsoft Office applications. The applications use the session to download and upload Microsoft Office documents. The ActiveX relay remains in force until the Clientless SSL VPN session closes.

To enable or disable ActiveX controls on Clientless SSL VPN sessions, enter the following command in group-policy webvpn configuration mode:

```
activex-relay {enable | disable}
```

To inherit the **activex-relay** command from the default group policy, enter the following command:

```
no activex-relay
```

The following commands enable ActiveX controls on clientless SSL VPN sessions associated with a given group policy:

```
hostname(config-group-policy)# webvpn
hostname(config-group-webvpn)# activex-relay enable
hostname(config-group-webvpn)
```

### Enabling Application Access on Clientless SSL VPN Sessions for a Group Policy

To enable application access for this group policy, enter the **port-forward** command in group-policy webvpn configuration mode. Port forwarding is disabled by default.

Before you can enter the **port-forward** command in group-policy webvpn configuration mode to enable application access, you must define a list of applications that you want users to be able to use in a clientless SSL VPN session. Enter the **port-forward** command in global configuration mode to define this list.

To remove the port forwarding attribute from the group-policy configuration, including a null value created by issuing the **port-forward none** command, enter the **no** form of this command. The **no** option allows inheritance of a list from another group policy. To prevent inheriting a port forwarding list, enter the **port-forward** command with the **none** keyword. The **none** keyword indicates that there is no filtering. It sets a null value, thereby disallowing a filtering, and prevents inheriting filtering values.

The syntax of the command is as follows:

```
hostname(config-group-webvpn)# port-forward {value listname | none}
hostname(config-group-webvpn)# no port-forward
```

The *listname* string following the keyword **value** identifies the list of applications users of clientless SSL VPN sessions can access. Enter the port-forward command in webvpn configuration mode to define the list.

Using the command a second time overrides the previous setting.

The following example shows how to set a port-forwarding list called *ports1* for the internal group policy named FirstGroup:

```
hostname(config)# group-policy FirstGroup internal attributes
hostname(config-group-policy)# webvpn
hostname(config-group-webvpn)# port-forward value ports1
hostname(config-group-webvpn)#
```

### Configuring the Port-Forwarding Display Name

Configure the display name that identifies TCP port forwarding to end users for a particular user or group policy by using the **port-forward-name** command in group-policy webvpn configuration mode. To delete the display name, including a null value created by using the **port-forward-name none** command, enter the **no** form of the command. The **no** option restores the default name, Application Access. To prevent a display name, enter the **port-forward none** command. The syntax of the command is as follows:

```
hostname(config-group-webvpn)# port-forward-name {value name | none}
hostname(config-group-webvpn)# no port-forward-name
```

The following example shows how to set the name, Remote Access TCP Applications, for the internal group policy named *FirstGroup*:

```
hostname(config)# group-policy FirstGroup internal attributes
hostname(config-group-policy)# webvpn
hostname(config-group-webvpn)# port-forward-name value Remote Access TCP Applications
hostname(config-group-webvpn)#
```

### Configuring the Maximum Object Size to Ignore for Updating the Session Timer

Network devices exchange short keepalive messages to ensure that the virtual circuit between them is still active. The length of these messages can vary. The **keep-alive-ignore** command lets you tell the ASA to consider all messages that are less than or equal to the specified size as keepalive messages and not as traffic when updating the session timer. The range is 0 through 900 KB. The default is 4 KB.

To specify the upper limit of the HTTP/HTTPS traffic, per transaction, to ignore, use the **keep-alive-ignore** command in group-policy attributes webvpn configuration mode:

```
hostname(config-group-webvpn)# keep-alive-ignore size
hostname(config-group-webvpn)#
```

The **no** form of the command removes this specification from the configuration:

```
hostname(config-group-webvpn)# no keep-alive-ignore
hostname(config-group-webvpn)#
```

The following example sets the maximum size of objects to ignore as 5 KB:

```
hostname(config-group-webvpn)# keep-alive-ignore 5
hostname(config-group-webvpn)#
```

### Specifying HTTP Compression

Enable compression of http data over a clientless SSL VPN session for a specific group or user by entering the **http-comp** command in the group policy webvpn mode.

```
hostname(config-group-webvpn)# http-comp {gzip | none}
hostname(config-group-webvpn)#
```

To remove the command from the configuration and cause the value to be inherited, use the **no** form of the command:

```
hostname(config-group-webvpn)# no http-comp {gzip | none}
hostname(config-group-webvpn)#
```

The syntax of this command is as follows:

- **gzip**—Specifies compression is enabled for the group or user. This is the default value.
- **none**—Specifies compression is disabled for the group or user.

For clientless SSL VPN sessions, the **compression** command configured from global configuration mode overrides the **http-comp** command configured in group policy and username webvpn modes.

In the following example, compression is disabled for the group-policy sales:

```
hostname(config)# group-policy sales attributes
hostname(config-group-policy)# webvpn
hostname(config-group-webvpn)# http-comp none
hostname(config-group-webvpn)#
```

## Specifying the SSO Server

Single sign-on support, available only for clientless SSL VPN sessions, lets users access different secure services on different servers without reentering a username and password more than once. The **sso-server value** command, when entered in group-policy-webvpn mode, lets you assign an SSO server to a group policy.

To assign an SSO server to a group policy, use the **sso-server value** command in group-policy-webvpn configuration mode. This command requires that your configuration include CA SiteMinder command.

```
hostname(config-group-webvpn)# sso-server value server_name
hostname(config-group-webvpn)#
```

To remove the assignment and use the default policy, use the **no** form of this command. To prevent inheriting the default policy, use the **sso-server none** command.

```
hostname(config-group-webvpn)# sso-server {value server_name | none}
hostname(config-group-webvpn)# [no] sso-server value server_name
```

The default policy assigned to the SSO server is DfltGrpPolicy.

The following example creates the group policy “my-sso-grp-pol” and assigns it to the SSO server named “example”:

```
hostname(config)# group-policy my-sso-grp-pol internal
hostname(config)# group-policy my-sso-grp-pol attributes
hostname(config-group-policy)# webvpn
hostname(config-group-webvpn)# sso-server value example
hostname(config-group-webvpn)#
```

## Configuring Group-Policy Attributes for AnyConnect Secure Mobility Client Connections

After enabling AnyConnect client connections as described in [Chapter 75, “Configuring AnyConnect VPN Client Connections”](#), you can enable or require AnyConnect features for a group policy. Follow these steps in group-policy webvpn configuration mode:

**Step 1** Enter group policy webvpn configuration mode. For example:

```
hostname(config)# group-policy sales attributes
hostname(config-group-policy)# webvpn
```

**Step 2** To disable the permanent installation of the AnyConnect client on the endpoint computer, use the **anyconnect keep-installer** command with the **none** keyword. For example:

```
hostname(config-group-webvpn)# anyconnect keep-installer none
hostname(config-group-webvpn)#
```

The default is that permanent installation of the client is enabled. The client remains installed on the endpoint at the end of the AnyConnect session.

**Step 3** To enable compression of HTTP data over an AnyConnect SSL connection for the group policy, enter the **anyconnect ssl compression** command. By default, compression is set to **none** (disabled). To enable compression, use the **deflate** keyword. For example:

```
hostname(config-group-webvpn)# anyconnect compression deflate
hostname(config-group-webvpn)#
```

**Step 4** To enable dead peer detection (DPD) on the ASA and to set the frequency with which either the AnyConnect client or the ASA performs DPD, use the **anyconnect dpd-interval** command:

```
anyconnect dpd-interval {[gateway {seconds | none}] | [client {seconds | none}]}
```

By default, both the ASA and the AnyConnect client perform DPD every 30 seconds.

The gateway refers to the ASA. You can specify the frequency with which the ASA performs the DPD test as a range of from 30 to 3600 seconds (1 hour). Specifying **none** disables the DPD testing that the ASA performs. A value of 300 is recommended.

The client refers to the AnyConnect client. You can specify the frequency with which the client performs the DPD test as a range of from 30 to 3600 seconds (1 hour). Specifying **none** disables the DPD testing that the client performs. A value of 30 is recommended.

The following example configures the DPD frequency performed by the ASA (gateway) to 300 seconds, and the DPD frequency performed by the client to 30 seconds:

```
hostname(config-group-webvpn)# anyconnect dpd-interval gateway 300
hostname(config-group-webvpn)# anyconnect dpd-interval client 30
hostname(config-group-webvpn)#
```

**Step 5** You can ensure that an AnyConnect connection through a proxy, firewall, or NAT device remains open, even if the device limits the time that the connection can be idle by adjusting the frequency of keepalive messages using the **anyconnect ssl keepalive** command:

```
anyconnect ssl keepalive {none | seconds}
```

Adjusting keepalives also ensures the AnyConnect client does not disconnect and reconnect when the remote user is not actively running a socket-based application, such as Microsoft Outlook or Microsoft Internet Explorer.

The following example configures the security appliance to enable the AnyConnect client to send keepalive messages, with a frequency of 300 seconds (5 minutes):

```
hostname(config-group-webvpn)# anyconnect ssl keepalive 300
hostname(config-group-webvpn)#
```

**Step 6** To enable the AnyConnect client to perform a re-key on an SSL session, use the **anyconnect ssl rekey** command:

```
anyconnect ssl rekey {method {ssl | new-tunnel} | time minutes | none}}
```

By default, re-key is disabled.

Specifying the method as `new-tunnel` specifies that the AnyConnect client establishes a new tunnel during SSL re-key. Specifying the method as `none` disables re-key. Specifying the method as `ssl` specifies that SSL renegotiation takes place during re-key. Instead of specifying the method, you can specify the time; that is, the number of minutes from the start of the session until the re-key takes place, from 1 through 10080 (1 week).

The following example configures the AnyConnect client to renegotiate with SSL during re-key and configures the re-key to occur 30 minutes after the session begins:

```
hostname(config-group-webvpn)# anyconnect ssl rekey method ssl
hostname(config-group-webvpn)# anyconnect ssl rekey time 30
hostname(config-group-webvpn)#
```

## Configuring User Attributes

This section describes user attributes and how to configure them. It includes the following sections:

- [Viewing the Username Configuration, page 67-79](#)
- [Configuring Attributes for Specific Users, page 67-79](#)

By default, users inherit all user attributes from the assigned group policy. The ASA also lets you assign individual attributes at the user level, overriding values in the group policy that applies to that user. For example, you can specify a group policy giving all users access during business hours, but give a specific user 24-hour access.

## Viewing the Username Configuration

To display the configuration for all usernames, including default values inherited from the group policy, enter the `all` keyword with the `show running-config username` command, as follows:

```
hostname# show running-config all username
hostname#
```

This displays the encrypted password and the privilege level for all users, or, if you supply a username, for that specific user. If you omit the `all` keyword, only explicitly configured values appear in this list. The following example displays the output of this command for the user named `testuser`:

```
hostname# show running-config all username testuser
username testuser password 12RsxXQnphyr/I9Z encrypted privilege 15
```

## Configuring Attributes for Specific Users

To configure specific users, you assign a password (or no password) and attributes to a user using the `username` command, which enters username mode. Any attributes that you do not specify are inherited from the group policy.

The internal user authentication database consists of the users entered with the **username** command. The **login** command uses this database for authentication. To add a user to the ASA database, enter the **username** command in global configuration mode. To remove a user, use the **no** version of this command with the username you want to remove. To remove all usernames, use the **clear configure username** command without appending a username.

## Setting a User Password and Privilege Level

Enter the **username** command to assign a password and a privilege level for a user. You can enter the **nopassword** keyword to specify that this user does not require a password. If you do specify a password, you can specify whether that password is stored in an encrypted form.

The optional **privilege** keyword lets you set a privilege level for this user. Privilege levels range from 0 (the lowest) through 15. System administrators generally have the highest privilege level. The default level is 2.

```
hostname(config)# username name {nopassword | password password [encrypted]} [privilege
priv_level]
```

```
hostname(config)# no username [name]
```

Table 67-8 describes the meaning of the keywords and variables used in this command.

**Table 67-8** *username* Command Keywords and Variables

| Keyword/Variable                   | Meaning                                                                                                                                                                                                                                         |
|------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>encrypted</b>                   | Indicates that the password is encrypted.                                                                                                                                                                                                       |
| <i>name</i>                        | Provides the name of the user.                                                                                                                                                                                                                  |
| <b>nopassword</b>                  | Indicates that this user needs no password.                                                                                                                                                                                                     |
| <b>password</b> <i>password</i>    | Indicates that this user has a password, and provides the password.                                                                                                                                                                             |
| <b>privilege</b> <i>priv_level</i> | Sets a privilege level for this user. The range is from 0 to 15, with lower numbers having less ability to use commands and administer the ASA. The default privilege level is 2. The typical privilege level for a system administrator is 15. |

By default, VPN users that you add with this command have no attributes or group policy association. You must explicitly configure all values.

The following example shows how to configure a user named anyuser with an encrypted password of pw\_12345678 and a privilege level of 12:

```
hostname(config)# username anyuser password pw_12345678 encrypted privilege 12
hostname(config)#
```

## Configuring User Attributes

After configuring the user's password (if any) and privilege level, you set the other attributes. These can be in any order. To remove any attribute-value pair, enter the **no** form of the command.

Enter username mode by entering the **username** command with the **attributes** keyword:

```
hostname(config)# username name attributes
hostname(config-username)#
```

The prompt changes to indicate the new mode. You can now configure the attributes.

## Configuring VPN User Attributes

The VPN user attributes set values specific to VPN connections, as described in the following sections.

### Configuring Inheritance

You can let users inherit from the group policy the values of attributes that you have not configured at the username level. To specify the name of the group policy from which this user inherits attributes, enter the **vpn-group-policy** command. By default, VPN users have no group-policy association:

```
hostname(config-username)# vpn-group-policy group-policy-name
hostname(config-username)# no vpn-group-policy group-policy-name
```

For an attribute that is available in username mode, you can override the value of an attribute in a group policy for a particular user by configuring it in username mode.

The following example shows how to configure a user named anyuser to use attributes from the group policy named FirstGroup:

```
hostname(config)# username anyuser attributes
hostname(config-username)# vpn-group-policy FirstGroup
hostname(config-username)#
```

### Configuring Access Hours

Associate the hours that this user is allowed to access the system by specifying the name of a configured time-range policy:

To remove the attribute from the running configuration, enter the **no** form of this command. This option allows inheritance of a time-range value from another group policy. To prevent inheriting a value, enter the **vpn-access-hours none** command. The default is unrestricted access.

```
hostname(config-username)# vpn-access-hours value {time-range | none}
hostname(config-username)# vpn-access-hours value none
hostname(config)#
```

The following example shows how to associate the user named anyuser with a time-range policy called 824:

```
hostname(config)# username anyuser attributes
hostname(config-username)# vpn-access-hours 824
hostname(config-username)#
```

### Configuring Maximum Simultaneous Logins

Specify the maximum number of simultaneous logins allowed for this user. The range is 0 through 2147483647. The default is 3 simultaneous logins. To remove the attribute from the running configuration, enter the **no** form of this command. Enter 0 to disable login and prevent user access.

```
hostname(config-username)# vpn-simultaneous-logins integer
hostname(config-username)# no vpn-simultaneous-logins
hostname(config-username)# vpn-session-timeout alert-interval none
```



#### Note

While the maximum limit for the number of simultaneous logins is very large, allowing several could compromise security and affect performance.

The following example shows how to allow a maximum of 4 simultaneous logins for the user named anyuser:

```
hostname(config)# username anyuser attributes
hostname(config-username)# vpn-simultaneous-logins 4
hostname(config-username)#
```

### Configuring the Idle Timeout

Specify the idle timeout period in minutes, or enter **none** to disable the idle timeout. If there is no communication activity on the connection in this period, the ASA terminates the connection. You can optionally set the alert interval, or leave the default of one minute.

The range is 1 through 35791394 minutes. The default is 30 minutes. To allow an unlimited timeout period, and thus prevent inheriting a timeout value, enter the **vpn-idle-timeout** command with the **none** keyword. To remove the attribute from the running configuration, enter the **no** form of this command.

```
hostname(config-username)# vpn-idle-timeout {minutes | none} alert-interval {minutes}
hostname(config-username)# no vpn-idle-timeout alert-interval
hostname(config-username)# vpn-idle-timeout alert-interval none
```

The following example shows how to set a VPN idle timeout of 15 minutes and alert interval of 3 minutes for the user named anyuser:

```
hostname(config)# username anyuser attributes
hostname(config-username)# vpn-idle-timeout 30 alert-interval 3
hostname(config-username)#
```

### Configuring the Maximum Connect Time

Specify the maximum user connection time in minutes, or enter **none** to allow unlimited connection time and prevent inheriting a value for this attribute. At the end of this period of time, the ASA terminates the connection. You can optionally set the alert interval, or leave the default of one minute.

The range is 1 through 35791394 minutes. There is no default timeout. To allow an unlimited timeout period, and thus prevent inheriting a timeout value, enter the **vpn-session-timeout** command with the **none** keyword. To remove the attribute from the running configuration, enter the **no** form of this command.

```
hostname(config-username)# vpn-session-timeout {minutes | none} alert-interval {minutes}
hostname(config-username)# no vpn-session-timeout alert-interval
hostname(config-username)#
```

The following example shows how to set a VPN session timeout of 180 minutes for the user named anyuser:

```
hostname(config)# username anyuser attributes
hostname(config-username)# vpn-session-timeout 180 alert-interval {minutes}
hostname(config-username)#
```

### Applying an ACL Filter

Specify the name of a previously-configured, user-specific ACL to use as a filter for VPN connections. To disallow an access list and prevent inheriting an access list from the group policy, enter the **vpn-filter** command with the **none** keyword. To remove the ACL, including a null value created by issuing the **vpn-filter none** command, enter the **no** form of this command. The **no** option allows inheritance of a value from the group policy. There are no default behaviors or values for this command.

You configure ACLs to permit or deny various types of traffic for this user. You then use the **vpn-filter** command to apply those ACLs.

```
hostname(config-username)# vpn-filter {value ACL_name | none}
hostname(config-username)# no vpn-filter
hostname(config-username)#
```

**Note**


---

Clientless SSL VPN does not use ACLs defined in the **vpn-filter** command.

---

The following example shows how to set a filter that invokes an access list named `acl_vpn` for the user named `anyuser`:

```
hostname(config)# username anyuser attributes
hostname(config-username)# vpn-filter value acl_vpn
hostname(config-username)#
```

### Specifying the IP Address and Netmask

Specify the IP address and netmask to assign to a particular user. To remove the IP address, enter the **no** form of this command.

```
hostname(config-username)# vpn-framed-ip-address {ip_address}
hostname(config-username)# no vpn-framed-ip-address
hostname(config-username)
```

The following example shows how to set an IP address of 10.92.166.7 for a user named `anyuser`:

```
hostname(config)# username anyuser attributes
hostname(config-username)# vpn-framed-ip-address 10.92.166.7
hostname(config-username)
```

Specify the network mask to use with the IP address specified in the previous step. If you used the **no vpn-framed-ip-address** command, do not specify a network mask. To remove the subnet mask, enter the **no** form of this command. There is no default behavior or value.

```
hostname(config-username)# vpn-framed-ip-netmask {netmask}
hostname(config-username)# no vpn-framed-ip-netmask
hostname(config-username)
```

The following example shows how to set a subnet mask of 255.255.255.254 for a user named `anyuser`:

```
hostname(config)# username anyuser attributes
hostname(config-username)# vpn-framed-ip-netmask 255.255.255.254
hostname(config-username)
```

### Specifying the Tunnel Protocol

Specify the VPN tunnel types (IPsec or clientless SSL VPN) that this user can use. The default is taken from the default group policy, the default for which is IPsec. To remove the attribute from the running configuration, enter the **no** form of this command.

```
hostname(config-username)# vpn-tunnel-protocol {webvpn | IPsec}
hostname(config-username)# no vpn-tunnel-protocol [webvpn | IPsec]
hostname(config-username)
```

The parameter values for this command are as follows:

- **IPsec**—Negotiates an IPsec tunnel between two peers (a remote access client or another secure gateway). Creates security associations that govern authentication, encryption, encapsulation, and key management.
- **webvpn**—Provides clientless SSL VPN access to remote users via an HTTPS-enabled web browser, and does not require a client

Enter this command to configure one or more tunneling modes. You must configure at least one tunneling mode for users to connect over a VPN tunnel.

The following example shows how to configure clientless SSL VPN and IPsec tunneling modes for the user named anyuser:

```
hostname(config)# username anyuser attributes
hostname(config-username)# vpn-tunnel-protocol webvpn
hostname(config-username)# vpn-tunnel-protocol IPsec
hostname(config-username)
```

## Restricting Remote User Access

Configure the **group-lock** attribute with the **value** keyword to restrict remote users to access only through the specified, preexisting connection profile. Group-lock restricts users by checking whether the group configured in the VPN client is the same as the connection profile to which the user is assigned. If it is not, the ASA prevents the user from connecting. If you do not configure group-lock, the ASA authenticates users without regard to the assigned group.

To remove the **group-lock** attribute from the running configuration, enter the **no** form of this command. This option allows inheritance of a value from the group policy. To disable group-lock, and to prevent inheriting a group-lock value from a default or specified group policy, enter the **group-lock** command with the **none** keyword.

```
hostname(config-username)# group-lock {value tunnel-grp-name | none}
hostname(config-username)# no group-lock
hostname(config-username)
```

The following example shows how to set group lock for the user named anyuser:

```
hostname(config)# username anyuser attributes
hostname(config-username)# group-lock value tunnel-group-name
hostname(config-username)
```

## Enabling Password Storage for Software Client Users

Specify whether to let users store their login passwords on the client system. Password storage is disabled by default. Enable password storage only on systems that you know to be in secure sites. To disable password storage, enter the **password-storage** command with the **disable** keyword. To remove the password-storage attribute from the running configuration, enter the **no** form of this command. This enables inheritance of a value for password-storage from the group policy.

```
hostname(config-username)# password-storage {enable | disable}
hostname(config-username)# no password-storage
hostname(config-username)
```

This command has no bearing on interactive hardware client authentication or individual user authentication for hardware clients.

The following example shows how to enable password storage for the user named anyuser:

```
hostname(config)# username anyuser attributes
hostname(config-username)# password-storage enable
hostname(config-username)
```

## Configuring Clientless SSL VPN Access for Specific Users

The following sections describe how to customize a configuration for specific users of clientless SSL VPN sessions. Enter username webvpn configuration mode by using the **webvpn** command in username configuration mode. Clientless SSL VPN lets users establish a secure, remote-access VPN tunnel to the ASA using a web browser. There is no need for either a software or hardware client. Clientless SSL VPN provides easy access to a broad range of web resources and web-enabled applications from almost any computer that can reach HTTPS Internet sites. Clientless SSL VPN uses SSL and its successor, TLS1, to provide a secure connection between remote users and specific, supported internal resources that you configure at a central site. The ASA recognizes connections that need to be proxied, and the HTTP server interacts with the authentication subsystem to authenticate users.

The username webvpn configuration mode commands define access to files, URLs and TCP applications over clientless SSL VPN sessions. They also identify ACLs and types of traffic to filter. Clientless SSL VPN is disabled by default. These **webvpn** commands apply only to the username from which you configure them. Notice that the prompt changes, indicating that you are now in username webvpn configuration mode.

```
hostname(config-username)# webvpn
hostname(config-username-webvpn)#
```

To remove all commands entered in username webvpn configuration mode, use the **no** form of this command:

```
hostname(config-username)# no webvpn
hostname(config-username)#
```

You do not need to configure clientless SSL VPN to use e-mail proxies.



### Note

The webvpn mode that you enter from global configuration mode lets you configure global settings for clientless SSL VPN sessions. The username webvpn configuration mode described in this section, which you enter from username mode, lets you customize the configuration of specific users specifically for clientless SSL VPN sessions.

In username webvpn configuration mode, you can customize the following parameters, each of which is described in the subsequent steps:

- customizations
- deny message
- html-content-filter
- homepage
- filter
- url-list
- port-forward
- port-forward-name
- sso server (single-signon server)
- auto-signon

- AnyConnect Secure Mobility Client
- keep-alive ignore
- HTTP compression

The following example shows how to enter username webvpn configuration mode for the username anyuser attributes:

```
hostname(config)# username anyuser attributes
hostname(config-username)# webvpn
hostname(config-username-webvpn)#
```

## Specifying the Content/Objects to Filter from the HTML

To filter Java, ActiveX, images, scripts, and cookies for clientless SSL VPN sessions for this user, enter the **html-content-filter** command in username webvpn configuration mode. To remove a content filter, enter the **no** form of this command. To remove all content filters, including a null value created by issuing the **html-content-filter none** command, enter the **no** form of this command without arguments. The **no** option allows inheritance of a value from the group policy. To prevent inheriting an HTML content filter, enter the **html-content-filter none** command. HTML filtering is disabled by default.

Using the command a second time overrides the previous setting.

```
hostname(config-username-webvpn)# html-content-filter {java | images | scripts | cookies | none}

hostname(config-username-webvpn)# no html-content-filter [java | images | scripts | cookies | none]
```

The keywords used in this command are as follows:

- **cookies**—Removes cookies from images, providing limited ad filtering and privacy.
- **images**—Removes references to images (removes <IMG> tags).
- **java**—Removes references to Java and ActiveX (removes <EMBED>, <APPLET>, and <OBJECT> tags).
- **none**—Indicates that there is no filtering. Sets a null value, thereby disallowing filtering. Prevents inheriting filtering values.
- **scripts**—Removes references to scripting (removes <SCRIPT> tags).

The following example shows how to set filtering of JAVA and ActiveX, cookies, and images for the user named anyuser:

```
hostname(config)# username anyuser attributes
hostname(config-username)# webvpn
hostname(config-username-webvpn)# html-content-filter java cookies images
hostname(config-username-webvpn)#
```

## Specifying the User Home Page

To specify a URL for the web page that displays when this user logs into clientless SSL VPN session, enter the **homepage** command in username webvpn configuration mode. To remove a configured home page, including a null value created by issuing the **homepage none** command, enter the **no** form of this command. The **no** option allows inheritance of a value from the group policy. To prevent inheriting a home page, enter the **homepage none** command.

The **none** keyword indicates that there is no clientless SSL VPN home page. It sets a null value, thereby disallowing a home page and prevents inheriting a home page.

The *url-string* variable following the keyword **value** provides a URL for the home page. The string must begin with either `http://` or `https://`.

There is no default home page.

```
hostname(config-username-webvpn) # homepage {value url-string | none}
hostname(config-username-webvpn) # no homepage
hostname(config-username-webvpn) #
```

The following example shows how to specify `www.example.com` as the home page for the user named `anyuser`:

```
hostname(config) # username anyuser attributes
hostname(config-username) # webvpn
hostname(config-username-webvpn) # homepage value www.example.com
hostname(config-username-webvpn) #
```

## Applying Customization

Customizations determine the appearance of the windows that the user sees upon login. You configure the customization parameters as part of configuring clientless SSL VPN. To apply a previously defined web-page customization to change the look-and-feel of the web page that the user sees at login, enter the customization command in username webvpn configuration mode:

```
hostname(config-username-webvpn) # customization {none | value customization_name}
hostname(config-username-webvpn) #
```

For example, to use the customization named `blueborder`, enter the following command:

```
hostname(config-username-webvpn) # customization value blueborder
hostname(config-username-webvpn) #
```

You configure the customization itself by entering the **customization** command in webvpn mode.

The following example shows a command sequence that first establishes a customization named `123` that defines a password prompt. The example then defines a tunnel-group named `test` and uses the **customization** command to specify the use of the customization named `123`:

```
hostname(config) # webvpn
hostname(config-webvpn) # customization 123
hostname(config-webvpn-custom) # password-prompt Enter password
hostname(config-webvpn) # exit
hostname(config) # username testuser nopassword
hostname(config) # username testuser attributes
hostname(config-username-webvpn) # webvpn
hostname(config-username-webvpn) # customization value 123
hostname(config-username-webvpn) #
```

## Specifying a “Deny” Message

You can specify the message delivered to a remote user who logs into clientless SSL VPN session successfully, but has no VPN privileges by entering the **deny-message** command in username webvpn configuration mode:

```
hostname(config-username-webvpn) # deny-message value "message"
hostname(config-username-webvpn) # no deny-message value "message"
hostname(config-username-webvpn) # deny-message none
```

The **no deny-message value** command removes the message string, so that the remote user does not receive a message.

The **no deny-message none** command removes the attribute from the connection profile policy configuration. The policy inherits the attribute value.

The message can be up to 491 alphanumeric characters long, including special characters, spaces, and punctuation, but not counting the enclosing quotation marks. The text appears on the remote user's browser upon login. When typing the string in the **deny-message value** command, continue typing even if the command wraps.

The default deny message is: "Login was successful, but because certain criteria have not been met or due to some specific group policy, you do not have permission to use any of the VPN features. Contact your IT administrator for more information."

The first command in the following example enters username mode and configures the attributes for the user named anyuser. The subsequent commands enter username webvpn configuration mode and modify the deny message associated with that user.

```
hostname(config)# username anyuser attributes
hostname(config-username)# webvpn
hostname(config-username-webvpn)# deny-message value "Your login credentials are OK.
However, you have not been granted rights to use the VPN features. Contact your
administrator for more information."
hostname(config-username-webvpn)
```

## Specifying the Access List for Clientless SSL VPN Sessions

To specify the name of the access list to use for clientless SSL VPN sessions for this user, enter the **filter** command in username webvpn configuration mode. To remove the access list, including a null value created by issuing the **filter none** command, enter the **no** form of this command. The **no** option allows inheritance of a value from the group policy. To prevent inheriting filter values, enter the **filter value none** command.

Clientless SSL VPN access lists do not apply until you enter the **filter** command to specify them.

You configure ACLs to permit or deny various types of traffic for this user. You then enter the **filter** command to apply those ACLs for clientless SSL VPN traffic.

```
hostname(config-username-webvpn)# filter {value ACLname | none}
hostname(config-username-webvpn)# no filter
hostname(config-username-webvpn)#
```

The **none** keyword indicates that there is no **webvpntype** access list. It sets a null value, thereby disallowing an access list and prevents inheriting an access list from another group policy.

The *ACLname* string following the keyword **value** provides the name of the previously configured access list.



### Note

Clientless SSL VPN does not use ACLs defined in the **vpn-filter** command.

The following example shows how to set a filter that invokes an access list named *acl\_in* for the user named anyuser:

```
hostname(config)# username anyuser attributes
hostname(config-username)# webvpn
hostname(config-username-webvpn)# filter acl_in
hostname(config-username-webvpn)#
```

## Applying a URL List

You can specify a list of URLs to appear on the home page for a user who has established a clientless SSL VPN session. First, you must create one or more named lists by entering the **url-list** command in global configuration mode. To apply a list of servers and URLs to a particular user of clientless SSL VPN, enter the **url-list** command in username webvpn configuration mode.

To remove a list, including a null value created by using the **url-list none** command, enter the **no** form of this command. The **no** option allows inheritance of a value from the group policy. To prevent inheriting a url list, enter the **url-list none** command.

```
hostname(config-username-webvpn)# url-list {listname displayname url | none}
hostname(config-username-webvpn)# no url-list
```

The keywords and variables used in this command are as follows:

- *displayname*—Specifies a name for the URL. This name appears on the portal page in the clientless SSL VPN session.
- *listname*—Identifies a name by which to group URLs.
- **none**—Indicates that there is no list of URLs. Sets a null value, thereby disallowing a URL list. Prevents inheriting URL list values.
- *url*—Specifies a URL that users of clientless SSL VPN can access.

There is no default URL list.

Using the command a second time overrides the previous setting.

The following example shows how to set a URL list called AnyuserURLs for the user named anyuser:

```
hostname(config)# username anyuser attributes
hostname(config-username)# webvpn
hostname(config-username-webvpn)# url-list value AnyuserURLs
hostname(config-username-webvpn)#
```

## Enabling ActiveX Relay for a User

ActiveX Relay lets a user who has established a Clientless SSL VPN session use the browser to launch Microsoft Office applications. The applications use the session to download and upload Microsoft Office documents. The ActiveX relay remains in force until the Clientless SSL VPN session closes.

To enable or disable ActiveX controls on Clientless SSL VPN sessions, enter the following command in username webvpn configuration mode:

```
activex-relay {enable | disable}
```

To inherit the **activex-relay** command from the group policy, enter the following command:

```
no activex-relay
```

The following commands enable ActiveX controls on Clientless SSL VPN sessions associated with a given username:

```
hostname(config-username-policy)# webvpn
hostname(config-username-webvpn)# activex-relay enable
hostname(config-username-webvpn)
```

## Enabling Application Access for Clientless SSL VPN Sessions

To enable application access for this user, enter the **port-forward** command in username webvpn configuration mode. Port forwarding is disabled by default.

To remove the port forwarding attribute from the configuration, including a null value created by issuing the **port-forward none** command, enter the **no** form of this command. The **no** option allows inheritance of a list from the group policy. To disallow filtering and prevent inheriting a port forwarding list, enter the **port-forward** command with the **none** keyword.

```
hostname(config-username-webvpn)# port-forward {value listname | none}
hostname(config-username-webvpn)# no port-forward
hostname(config-username-webvpn)#
```

The *listname* string following the keyword **value** identifies the list of applications users of clientless SSL VPN can access. Enter the **port-forward** command in configuration mode to define the list.

Using the command a second time overrides the previous setting.

Before you can enter the **port-forward** command in username webvpn configuration mode to enable application access, you must define a list of applications that you want users to be able to use in a clientless SSL VPN session. Enter the **port-forward** command in global configuration mode to define this list.

The following example shows how to configure a portforwarding list called ports1:

```
hostname(config-group-policy)# webvpn
hostname(config-username-webvpn)# port-forward value ports1
hostname(config-username-webvpn)#
```

### Configuring the Port-Forwarding Display Name

Configure the display name that identifies TCP port forwarding to end users for a particular user by using the **port-forward-name** command in username webvpn configuration mode. To delete the display name, including a null value created by using the **port-forward-name none** command, enter the **no** form of the command. The **no** option restores the default name, Application Access. To prevent a display name, enter the **port-forward none** command.

```
hostname(config-username-webvpn)# port-forward-name {value name | none}
hostname(config-username-webvpn)# no port-forward-name
```

The following example shows how to configure the port-forward name test:

```
hostname(config-group-policy)# webvpn
hostname(config-username-webvpn)# port-forward-name value test
hostname(config-username-webvpn)#
```

### Configuring the Maximum Object Size to Ignore for Updating the Session Timer

Network devices exchange short keepalive messages to ensure that the virtual circuit between them is still active. The length of these messages can vary. The **keep-alive-ignore** command lets you tell the ASA to consider all messages that are less than or equal to the specified size as keepalive messages and not as traffic when updating the session timer. The range is 0 through 900 KB. The default is 4 KB.

To specify the upper limit of the HTTP/HTTPS traffic, per transaction, to ignore, use the **keep-alive-ignore** command in group-policy attributes webvpn configuration mode:

```
hostname(config-group-webvpn)# keep-alive-ignore size
hostname(config-group-webvpn)#
```

The **no** form of the command removes this specification from the configuration:

```
hostname(config-group-webvpn)# no keep-alive-ignore
hostname(config-group-webvpn)#
```

The following example sets the maximum size of objects to ignore as 5 KB:

```
hostname(config-group-webvpn) # keep-alive-ignore 5
hostname(config-group-webvpn) #
```

## Configuring Auto-Signon

To automatically submit the login credentials of a particular user of clientless SSL VPN to internal servers using NTLM, basic HTTP authentication or both, use the **auto-signon** command in username webvpn configuration mode.

The **auto-signon** command is a single sign-on method for users of clientless SSL VPN sessions. It passes the login credentials (username and password) to internal servers for authentication using NTLM authentication, basic authentication, or both. Multiple auto-signon commands can be entered and are processed according to the input order (early commands take precedence).

You can use the auto-signon feature in three modes: webvpn configuration, webvpn group configuration, or webvpn username configuration mode. The typical precedence behavior applies where username supersedes group, and group supersedes global. The mode you choose will depend upon the desired scope of authentication.

To disable auto-signon for a particular user to a particular server, use the **no** form of the command with the original specification of IP block or URI. To disable authentication to all servers, use the **no** form without arguments. The **no** option allows inheritance of a value from the group policy.

The following example commands configure auto-signon for a user of clientless SSL VPN named anyuser, using either basic or NTLM authentication, to servers defined by the URI mask `https://*.example.com/*`:

```
hostname(config) # username anyuser attributes
hostname(config-username) # webvpn
hostname(config-username-webvpn) # auto-signon allow uri https://*.example.com/* auth-type
all
```

The following example commands configure auto-signon for a user of clientless SSL VPN named anyuser, using either basic or NTLM authentication, to the server with the IP address `10.1.1.0`, using subnet mask `255.255.255.0`:

```
hostname(config) # username anyuser attributes
hostname(config-username) # webvpn
hostname(config-username-webvpn) # auto-signon allow ip 10.1.1.0 255.255.255.0 auth-type
all
hostname(config-username-webvpn) #
```

## Specifying HTTP Compression

Enable compression of http data over a clientless SSL VPN session for a specific user by entering the **http-comp** command in the username webvpn configuration mode.

```
hostname(config-username-webvpn) # http-comp {gzip | none}
hostname(config-username-webvpn) #
```

To remove the command from the configuration and cause the value to be inherited, use the **no** form of the command:

```
hostname(config-username-webvpn) # no http-comp {gzip | none}
hostname(config-username-webvpn) #
```

The syntax of this command is as follows:

- **gzip**—Specifies compression is enabled for the group or user. This is the default value.

- **none**—Specifies compression is disabled for the group or user.

For clientless SSL VPN session, the **compression** command configured from global configuration mode overrides the **http-comp** command configured in group policy and username webvpn modes.

In the following example, compression is disabled for the username testuser:

```
hostname(config)# username testuser internal
hostname(config)# username testuser attributes
hostname(config-username)# webvpn
hostname(config-username-webvpn)# http-comp none
hostname(config-username-webvpn)#
```

## Specifying the SSO Server

Single sign-on support, available only for clientless SSL VPN sessions, lets users access different secure services on different servers without reentering a username and password more than once. The **sso-server value** command, when entered in username-webvpn mode, lets you assign an SSO server to a user.

To assign an SSO server to a user, use the **sso-server value** command in username-webvpn configuration mode. This command requires that your configuration include CA SiteMinder command.

```
hostname(config-username-webvpn)# sso-server value server_name
hostname(config-username-webvpn)#
```

To remove the assignment and use the default policy, use the **no** form of this command. To prevent inheriting the default policy, use the **sso-server none** command.

```
hostname(config-username-webvpn)# sso-server {value server_name | none}
hostname(config-username-webvpn)# [no] sso-server value server_name
```

The default policy assigned to the SSO server is DfltGrpPolicy.

The following example assigns the SSO server named example to the user named anyuser:

```
hostname(config)# username anyuser attributes
hostname(config-username)# webvpn
hostname(config-username-webvpn)# sso-server value example
hostname(config-username-webvpn)#
```

---



## Configuring IP Addresses for VPNs

---

This chapter describes IP address assignment methods.

IP addresses make internetwork connections possible. They are like telephone numbers: both the sender and receiver must have an assigned number to connect. But with VPNs, there are actually two sets of addresses: the first set connects client and server on the public network. Once that connection is made, the second set connects client and server through the VPN tunnel.

In ASA address management, we are dealing with the second set of IP addresses: those private IP addresses that connect a client with a resource on the private network, through the tunnel, and let the client function as if it were directly connected to the private network. Furthermore, we are dealing only with the private IP addresses that get assigned to clients. The IP addresses assigned to other resources on your private network are part of your network administration responsibilities, not part of VPN management. Therefore, when we discuss IP addresses here, we mean those IP addresses available in your private network addressing scheme that let the client function as a tunnel endpoint.

This chapter includes the following sections:

- [Configuring an IP Address Assignment Method, page 68-1](#)
- [Configuring Local IP Address Pools, page 68-2](#)
- [Configuring AAA Addressing, page 68-2](#)
- [Configuring DHCP Addressing, page 68-3](#)

### Configuring an IP Address Assignment Method

The ASA can use one or more of the following methods for assigning IP addresses to remote access clients. If you configure more than one address assignment method, the ASA searches each of the options until it finds an IP address. By default, all methods are enabled. To view the current configuration, enter the **show running-config all vpn-addr-assign** command.

- **aaa**—Retrieves addresses from an external authentication server on a per-user basis. If you are using an authentication server that has IP addresses configured, we recommend using this method.
- **dhcp**—Obtains IP addresses from a DHCP server. If you want to use DHCP, you must configure a DHCP server. You must also define the range of IP addresses that the DHCP server can use.
- **local**—Use an internal address pool. Internally configured address pools are the easiest method of address pool assignment to configure. If you choose local, you must also use the **ip-local-pool** command to define the range of IP addresses to use.

To specify a method for assigning IP addresses to remote access clients, enter the **vpn-addr-assign** command in global configuration mode. The syntax is **vpn-addr-assign {aaa | dhcp | local}**.

## Configuring Local IP Address Pools

To configure IP address pools to use for VPN remote access tunnels, enter the **ip local pool** command in global configuration mode. To delete address pools, enter the **no** form of this command.

The ASA uses address pools based on the tunnel group for the connection. If you configure more than one address pool for a tunnel group, the ASA uses them in the order in which they are configured.

If you assign addresses from a non-local subnet, we suggest that you add pools that fall on subnet boundaries to make adding routes for these networks easier.

A summary of the configuration of local address pools follows:

```
hostname(config)# vpn-addr-assign local
hostname(config)# ip local pool firstpool 10.20.30.40-10.20.30.50 mask 255.255.255.0
hostname(config)
```

- 
- Step 1** To configure IP address pools as the address assignment method, enter the **vpn-addr-assign** command with the **local** argument:

```
hostname(config)# vpn-addr-assign local
hostname(config)#
```

- Step 2** To configure an address pool, enter the **ip local pool** command. **The syntax is ip local pool poolname first-address—last-address mask mask.**

The following example configures an IP address pool named firstpool. The starting address is 10.20.30.40 and the ending address is 10.20.30.50. The network mask is 255.255.255.0.

```
hostname(config)# ip local pool firstpool 10.20.30.40-10.20.30.50 mask 255.255.255.0
hostname(config)
```

---

## Configuring AAA Addressing

To use a AAA server to assign addresses for VPN remote access clients, you must first configure a AAA server or server group. See the **aaa-server protocol** command in the command reference and the [“Configuring AAA Server Groups”](#) section on page 35-11.

In addition, the user must match a tunnel group configured for RADIUS authentication.

The following examples illustrate how to define a AAA server group called RAD2 for the tunnel group named firstgroup. It includes one more step than is necessary, in that previously you might have named the tunnel group and defined the tunnel group type. This step appears in the following example as a reminder that you have no access to subsequent tunnel-group commands until you set these values.

An overview of the configuration that these examples create follows:

```
hostname(config)# vpn-addr-assign aaa
hostname(config)# tunnel-group firstgroup type ipsec-ra
hostname(config)# tunnel-group firstgroup general-attributes
hostname(config-general)# authentication-server-group RAD2
```

To configure AAA for IP addressing, perform the following steps:

- 
- Step 1** To configure AAA as the address assignment method, enter the **vpn-addr-assign** command with the **aaa** argument:

```
hostname(config)# vpn-addr-assign aaa
hostname(config)#
```

- Step 2** To establish the tunnel group called firstgroup as a remote access or LAN-to-LAN tunnel group, enter the **tunnel-group** command with the **type** keyword. The following example configures a remote access tunnel group.

```
hostname(config)# tunnel-group firstgroup type ipsec-ra
hostname(config)#
```

- Step 3** To enter general-attributes configuration mode, which lets you define a AAA server group for the tunnel group called firstgroup, enter the **tunnel-group** command with the **general-attributes** argument.

```
hostname(config)# tunnel-group firstgroup general-attributes
hostname(config-general)#
```

- Step 4** To specify the AAA server group to use for authentication, enter the **authentication-server-group** command.

```
hostname(config-general)# authentication-server-group RAD2
hostname(config-general)#
```

This command has more arguments that this example includes. For more information, see the command reference.

## Configuring DHCP Addressing

To use DHCP to assign addresses for VPN clients, you must first configure a DHCP server and the range of IP addresses that the DHCP server can use. Then you define the DHCP server on a tunnel group basis. Optionally, you can also define a DHCP network scope in the group policy associated with the tunnel group or username. This is either an IP network number or IP Address that identifies to the DHCP server which pool of IP addresses to use.

The following examples define the DHCP server at IP address 172.33.44.19 for the tunnel group named firstgroup. They also define a DHCP network scope of 192.86.0.0 for the group policy called remotegroup. (The group policy called remotegroup is associated with the tunnel group called firstgroup). If you do not define a network scope, the DHCP server assigns IP addresses in the order of the address pools configured. It goes through the pools until it identifies an unassigned address.

The following configuration includes more steps than are necessary, in that previously you might have named and defined the tunnel group type as remote access, and named and identified the group policy as internal or external. These steps appear in the following examples as a reminder that you have no access to subsequent tunnel-group and group-policy commands until you set these values.

A summary of the configuration that these examples create follows:

```
hostname(config)# vpn-addr-assign dhcp
hostname(config)# tunnel-group firstgroup type ipsec-ra
hostname(config)# tunnel-group firstgroup general-attributes
hostname(config-general)# dhcp-server 172.33.44.19
hostname(config-general)# exit
hostname(config)# group-policy remotegroup internal
hostname(config)# group-policy remotegroup attributes
hostname(config-group-policy)# dhcp-network-scope 192.86.0.0
```

To define a DHCP server for IP addressing, perform the following steps.

- Step 1** To configure DHCP as the address assignment method, enter the **vpn-addr-assign** command with the **dhcp** argument:
- ```
hostname(config)# vpn-addr-assign dhcp
hostname(config)#
```
- Step 2** To establish the tunnel group called firstgroup as a remote access or LAN-to-LAN tunnel group, enter the **tunnel-group** command with the **type** keyword. The following example configures a remote access tunnel group.
- ```
hostname(config)# tunnel-group firstgroup type ipsec-ra
hostname(config)#
```
- Step 3** To enter general-attributes configuration mode, which lets you configure a DHCP server, enter the **tunnel-group** command with the **general-attributes** argument.
- ```
hostname(config)# tunnel-group firstgroup general-attributes
hostname(config)#
```
- Step 4** To define the DHCP server, enter the **dhcp-server** command. This command will allow you to configure the ASA to send additional options to the specified DHCP servers when it is trying to get IP addresses for VPN clients. See the **dhcp-server** command in the *Cisco Security Appliance Command Reference* guide for more information. The following example configures a DHCP server at IP address 172.33.44.19.
- ```
hostname(config-general)# dhcp-server 172.33.44.19
hostname(config-general)#
```
- Step 5** Exit tunnel-group mode.
- ```
hostname(config-general)# exit
hostname(config)#
```
- Step 6** To define the group policy called remotegroup as an internally or externally configured group, enter the **group-policy** command with the **internal** or **external** argument. The following example configures an internal group.
- ```
hostname(config)# group-policy remotegroup internal
hostname(config)#
```
- Step 7** (Optional) To enter group-policy attributes configuration mode, which lets you configure a subnetwork of IP addresses for the DHCP server to use, enter the **group-policy** command with the **attributes** keyword.
- ```
hostname(config)# group-policy remotegroup attributes
hostname(config-group-policy)#
```
- Step 8** (Optional) To specify the range of IP addresses the DHCP server should use to assign addresses to users of the group policy called remotegroup, enter the **dhcp-network-scope** command. The following example configures at network scope of 192.86.0.0.



Note The **dhcp-network-scope** must be a routable IP address and not the subset of the DHCP pool. The DHCP server determines which subnet this IP address belongs to and assigns an IP address from that pool. Cisco recommends that you use an interface of the ASA as a **dhcp-network-scope** for routing reasons. You can use any IP address as the **dhcp-network-scope**, but it may require that static routes be added to the network.

```
hostname(config-group-policy)# dhcp-network-scope 192.86.0.0
hostname(config-group-policy)#
```





CHAPTER 69

Configuring Remote Access IPsec VPNs

This chapter describes how to configure Remote Access IPsec VPNs and includes the following sections:

- [Information About Remote Access IPsec VPNs, page 69-1](#)
- [Licensing Requirements for Remote Access IPsec VPNs, page 69-2](#)
- [Guidelines and Limitations, page 69-7](#)
- [Configuring Remote Access IPsec VPNs, page 69-7](#)
- [Configuration Examples for Remote Access IPsec VPNs, page 69-14](#)
- [Feature History for Remote Access VPNs, page 69-15](#)

Information About Remote Access IPsec VPNs

Remote access VPNs allow users to connect to a central site through a secure connection over a TCP/IP network such as the Internet. The Internet Security Association and Key Management Protocol, also called IKE, is the negotiation protocol that lets the IPsec client on the remote PC and the ASA agree on how to build an IPsec Security Association. Each ISAKMP negotiation is divided into two sections called Phase1 and Phase2.

Phase 1 creates the first tunnel to protect later ISAKMP negotiation messages. Phase 2 creates the tunnel that protects data travelling across the secure connection.

To set the terms of the ISAKMP negotiations, you create an ISAKMP policy. It includes the following:

- An authentication method, to ensure the identity of the peers.
- An encryption method, to protect the data and ensure privacy.
- A Hashed Message Authentication Codes (HMAC) method to ensure the identity of the sender and to ensure that the message has not been modified in transit.
- A Diffie-Hellman group to set the size of the encryption key.
- A time limit for how long the ASA uses an encryption key before replacing it.

A transform set combines an encryption method and an authentication method. During the IPsec security association negotiation with ISAKMP, the peers agree to use a particular transform set to protect a particular data flow. The transform set must be the same for both peers.

A transform set protects the data flows for the access list specified in the associated crypto map entry. You can create transform sets in the ASA configuration, and then specify a maximum of 11 of them in a crypto map or dynamic crypto map entry. For more overview information, including a table that lists valid encryption and authentication methods, see the “[Creating an IKEv1 Transform Set](#)” section on page 73-5 in Chapter 73, “[Configuring LAN-to-LAN IPsec VPNs](#)” of this guide.

Licensing Requirements for Remote Access IPsec VPNs

The following table shows the licensing requirements for this feature:



Note

This feature is not available on No Payload Encryption models.

Model	License Requirement ¹
ASA 5505	<ul style="list-style-type: none"> • IPsec remote access VPN using IKEv2 (use one of the following): <ul style="list-style-type: none"> – AnyConnect Premium license: Base license and Security Plus license: 2 sessions. <i>Optional permanent or time-based licenses: 10 or 25 sessions.</i> <i>Shared licenses are not supported.</i>² – AnyConnect Essentials license³: 25 sessions. • IPsec remote access VPN using IKEv1 and IPsec site-to-site VPN using IKEv1 or IKEv2: <ul style="list-style-type: none"> – Base license: 10 sessions. – Security Plus license: 25 sessions.
ASA 5510	<ul style="list-style-type: none"> • IPsec remote access VPN using IKEv2 (use one of the following): <ul style="list-style-type: none"> – AnyConnect Premium license: Base and Security Plus license: 2 sessions. <i>Optional permanent or time-based licenses: 10, 25, 50, 100, or 250 sessions.</i> <i>Optional Shared licenses²: Participant or Server. For the Server license, 500-50,000 in increments of 500 and 50,000-545,000 in increments of 1000.</i> – AnyConnect Essentials license³: 250 sessions. • IPsec remote access VPN using IKEv1 and IPsec site-to-site VPN using IKEv1 or IKEv2: Base license and Security Plus license: 250 sessions.

Model	License Requirement ¹
ASA 5520	<ul style="list-style-type: none"> • IPsec remote access VPN using IKEv2 (use one of the following): <ul style="list-style-type: none"> – AnyConnect Premium license: Base license: 2 sessions. <i>Optional permanent or time-based licenses: 10, 25, 50, 100, 250, 500, or 750 sessions.</i> – AnyConnect Essentials license³: 750 sessions. • IPsec remote access VPN using IKEv1 and IPsec site-to-site VPN using IKEv1 or IKEv2: Base license: 750 sessions.
ASA 5540	<ul style="list-style-type: none"> • IPsec remote access VPN using IKEv2 (use one of the following): <ul style="list-style-type: none"> – AnyConnect Premium license: Base license: 2 sessions. <i>Optional permanent or time-based licenses: 10, 25, 50, 100, 250, 500, 750, 1000, or 2500 sessions.</i> – AnyConnect Essentials license³: 2500 sessions. • IPsec remote access VPN using IKEv1 and IPsec site-to-site VPN using IKEv1 or IKEv2: Base license: 2500 sessions.
ASA 5550	<ul style="list-style-type: none"> • IPsec remote access VPN using IKEv2 (use one of the following): <ul style="list-style-type: none"> – AnyConnect Premium license: Base license: 2 sessions. <i>Optional permanent or time-based licenses: 10, 25, 50, 100, 250, 500, 750, 1000, 2500, or 5000 sessions.</i> – AnyConnect Essentials license³: 5000 sessions. • IPsec remote access VPN using IKEv1 and IPsec site-to-site VPN using IKEv1 or IKEv2: Base license: 5000 sessions.

Model	License Requirement ¹
ASA 5580	<ul style="list-style-type: none"> • IPsec remote access VPN using IKEv2 (use one of the following): <ul style="list-style-type: none"> – AnyConnect Premium license: Base license: 2 sessions. <i>Optional permanent or time-based licenses: 10, 25, 50, 100, 250, 500, 750, 1000, 2500, 5000, or 10000 sessions.</i> – AnyConnect Essentials license³: 10000 sessions. • IPsec remote access VPN using IKEv1 and IPsec site-to-site VPN using IKEv1 or IKEv2: Base license: 10000 sessions.
ASA 5512-X	<ul style="list-style-type: none"> • IPsec remote access VPN using IKEv2 (use one of the following): <ul style="list-style-type: none"> – AnyConnect Premium license: Base license: 2 sessions. <i>Optional permanent or time-based licenses: 10, 25, 50, 100, or 250 sessions.</i> – AnyConnect Essentials license³: 250 sessions. • IPsec remote access VPN using IKEv1 and IPsec site-to-site VPN using IKEv1 or IKEv2: Base license: 250 sessions.
ASA 5515-X	<ul style="list-style-type: none"> • IPsec remote access VPN using IKEv2 (use one of the following): <ul style="list-style-type: none"> – AnyConnect Premium license: Base license: 2 sessions. <i>Optional permanent or time-based licenses: 10, 25, 50, 100, or 250 sessions.</i> – AnyConnect Essentials license³: 250 sessions. • IPsec remote access VPN using IKEv1 and IPsec site-to-site VPN using IKEv1 or IKEv2: Base license: 250 sessions.
ASA 5525-X	<ul style="list-style-type: none"> • IPsec remote access VPN using IKEv2 (use one of the following): <ul style="list-style-type: none"> – AnyConnect Premium license: Base license: 2 sessions. <i>Optional permanent or time-based licenses: 10, 25, 50, 100, 250, 500, or 750 sessions.</i> – AnyConnect Essentials license³: 750 sessions. • IPsec remote access VPN using IKEv1 and IPsec site-to-site VPN using IKEv1 or IKEv2: Base license: 750 sessions.

Model	License Requirement ¹
ASA 5545-X	<ul style="list-style-type: none"> • IPsec remote access VPN using IKEv2 (use one of the following): <ul style="list-style-type: none"> – AnyConnect Premium license: Base license: 2 sessions. <i>Optional permanent or time-based licenses: 10, 25, 50, 100, 250, 500, 750, 1000, or 2500 sessions.</i> – AnyConnect Essentials license³: 2500 sessions. • IPsec remote access VPN using IKEv1 and IPsec site-to-site VPN using IKEv1 or IKEv2: Base license: 2500 sessions.
ASA 5555-X	<ul style="list-style-type: none"> • IPsec remote access VPN using IKEv2 (use one of the following): <ul style="list-style-type: none"> – AnyConnect Premium license: Base license: 2 sessions. <i>Optional permanent or time-based licenses: 10, 25, 50, 100, 250, 500, 750, 1000, 2500, or 5000 sessions.</i> – AnyConnect Essentials license³: 5000 sessions. • IPsec remote access VPN using IKEv1 and IPsec site-to-site VPN using IKEv1 or IKEv2: Base license: 5000 sessions.

Model	License Requirement ¹
ASA 5585-X with SSP-10	<ul style="list-style-type: none"> • IPsec remote access VPN using IKEv2 (use one of the following): <ul style="list-style-type: none"> – AnyConnect Premium license: Base license: 2 sessions. <i>Optional permanent or time-based licenses: 10, 25, 50, 100, 250, 500, 750, 1000, 2500, or 5000 sessions.</i> – AnyConnect Essentials license³: 5000 sessions. • IPsec remote access VPN using IKEv1 and IPsec site-to-site VPN using IKEv1 or IKEv2: Base license: 5000 sessions.
ASA 5585-X with SSP-20, -40, and -60	<ul style="list-style-type: none"> • IPsec remote access VPN using IKEv2 (use one of the following): <ul style="list-style-type: none"> – AnyConnect Premium license: Base license: 2 sessions. <i>Optional permanent or time-based licenses: 10, 25, 50, 100, 250, 500, 750, 1000, 2500, 5000, or 10000 sessions.</i> – AnyConnect Essentials license³: 10000 sessions. • IPsec remote access VPN using IKEv1 and IPsec site-to-site VPN using IKEv1 or IKEv2: Base license: 10000 sessions.

1. The maximum combined VPN sessions of *all* types cannot exceed the maximum sessions shown in this table. For the ASA 5505, the maximum combined sessions is 10 for the Base license, and 25 for the Security Plus license.
2. A shared license lets the ASA act as a shared license server for multiple client ASAs. The shared license pool is large, but the maximum number of sessions used by each individual ASA cannot exceed the maximum number listed for permanent licenses.
3. The AnyConnect Essentials license enables AnyConnect VPN client access to the ASA. This license does not support browser-based SSL VPN access or Cisco Secure Desktop. For these features, activate an AnyConnect Premium license instead of the AnyConnect Essentials license.

Note: With the AnyConnect Essentials license, VPN users can use a Web browser to log in, and download and start (WebLaunch) the AnyConnect client.

The AnyConnect client software offers the same set of client features, whether it is enabled by this license or an AnyConnect Premium SSL VPN Edition license.

The AnyConnect Essentials license cannot be active at the same time as the following licenses on a given ASA: AnyConnect Premium license (all types) or the Advanced Endpoint Assessment license. You can, however, run AnyConnect Essentials and AnyConnect Premium licenses on different ASAs in the same network.

By default, the ASA uses the AnyConnect Essentials license, but you can disable it to use other licenses by using the **no anyconnect-essentials** command.

For a detailed list of the features supported by the AnyConnect Essentials license and AnyConnect Premium license, see *AnyConnect Secure Mobility Client Features, Licenses, and OSs*:

http://www.cisco.com/en/US/products/ps10884/products_feature_guides_list.html

Guidelines and Limitations

This section includes the guidelines and limitations for this feature.

Context Mode Guidelines

Supported in single context mode only. Does not support multiple context mode.

Firewall Mode Guidelines

Not supported in routed or transparent firewall mode.

Failover Guidelines

IPsec VPN sessions are replicated in Active/Standby failover configurations only. Active/Active failover configurations are not supported.

IPv6 Guidelines

Does not support IPv6.

Configuring Remote Access IPsec VPNs

This section describes how to configure remote access VPNs and includes the following topics:

- [Configuring Interfaces, page 69-7](#)
- [Configuring ISAKMP Policy and Enabling ISAKMP on the Outside Interface, page 69-8](#)
- [Configuring an Address Pool, page 69-9](#)
- [Adding a User, page 69-10](#)
- [Creating an IKEv1 Transform Set or IKEv2 Proposal, page 69-10](#)
- [Defining a Tunnel Group, page 69-11](#)
- [Creating a Dynamic Crypto Map, page 69-12](#)
- [Creating a Crypto Map Entry to Use the Dynamic Crypto Map, page 69-13](#)
- [Saving the Security Appliance Configuration, page 69-14](#)

Configuring Interfaces

An ASA has at least two interfaces, referred to here as outside and inside. Typically, the outside interface is connected to the public Internet, while the inside interface is connected to a private network and is protected from public access.

To begin, configure and enable two interfaces on the ASA. Then assign a name, IP address and subnet mask. Optionally, configure its security level, speed and duplex operation on the security appliance.

To configure interfaces, perform the following steps, using the command syntax in the examples:

Detailed Steps

	Command	Purpose
Step 1	interface { <i>interface</i> } Example: hostname(config)# interface ethernet0 hostname(config-if)#	Enters interface configuration mode from global configuration mode.
Step 1	ip address <i>ip_address</i> [<i>mask</i>] [standby <i>ip_address</i>] Example: hostname(config)# interface ethernet0 hostname(config-if)# hostname(config-if)# ip address 10.10.4.200 255.255.0.0	Sets the IP address and subnet mask for the interface.
Step 2	nameif <i>name</i> Example: hostname(config-if)# nameif outside hostname(config-if)#	Specifies a name for the interface (maximum of 48 characters). You cannot change this name after you set it.
Step 3	shutdown Example: hostname(config-if)# no shutdown hostname(config-if)#	Enables the interface. By default, interfaces are disabled.

Configuring ISAKMP Policy and Enabling ISAKMP on the Outside Interface

This section describes the procedure to configure an ISAKMP policy on the outside interface and how to enable the policy.

Detailed Steps

Perform the following steps and use the command syntax in the following examples as a guide.

	Command	Purpose
Step 1	crypto ikev1 policy <i>priority</i> authentication { <i>crack</i> <i>pre-share</i> <i>rsa-sig</i> } Example: hostname(config)# crypto ikev1 policy 1 authentication pre-share hostname(config)#	Specifies the authentication method and the set of parameters to use during IKEv1 negotiation. <i>Priority</i> uniquely identifies the Internet Key Exchange (IKE) policy and assigns a priority to the policy. Use an integer from 1 to 65,534, with 1 being the highest priority and 65,534 the lowest. In this example and the steps that follow, we set the priority to 1.
Step 2	crypto ikev1 policy <i>priority</i> encryption { <i>aes</i> <i>aes-192</i> <i>aes-256</i> <i>des</i> <i>3des</i> } Example: hostname(config)# crypto ikev1 policy 1 encryption 3des hostname(config)#	Specifies the encryption method to use within an IKE policy.

	Command	Purpose
Step 3	<pre>crypto ikev1 policy priority hash {md5 sha}</pre> <p>Example: hostname(config)# crypto ikev1 policy 1 hash sha hostname(config)#</p>	Specifies the hash algorithm for an IKE policy (also called the HMAC variant).
Step 4	<pre>crypto ikev1 policy priority group {1 2 5}</pre> <p>Example: hostname(config)# crypto ikev1 policy 1 group 2 hostname(config)#</p>	Specifies the Diffie-Hellman group for the IKE policy—the crypto protocol that allows the IPsec client and the ASA to establish a shared secret key.
Step 5	<pre>crypto ikev1 policy priority lifetime {seconds}</pre> <p>Example: hostname(config)# crypto ikev1 policy 1 lifetime 43200 hostname(config)#</p>	Specifies the encryption key lifetime—the number of seconds each security association should exist before expiring. The range for a finite lifetime is 120 to 2147483647 seconds. Use 0 seconds for an infinite lifetime.
Step 6	<pre>crypto ikev1 enable interface-name</pre> <p>Example: hostname(config)# crypto ikev1 enable outside hostname(config)#</p>	Enables ISAKMP on the interface named <i>outside</i> .
Step 7	<pre>write memory</pre> <p>Example: hostname(config-if)# write memory Building configuration... Cryptochecksum: 0f80bf71 1623a231 63f27ccf 8700ca6d 11679 bytes copied in 3.390 secs (3893 bytes/sec) [OK] hostname(config-if)#</p>	Saves the changes to the configuration.

Configuring an Address Pool

The ASA requires a method for assigning IP addresses to users. This section uses address pools as an example. Use the command syntax in the following examples as a guide.

Command	Purpose
<pre>ip local pool poolname first-address-last-address [mask mask]</pre> <p>Example:</p> <pre>hostname(config)# ip local pool testpool 192.168.0.10-192.168.0.15 hostname(config)#</pre>	<p>Creates an address pool with a range of IP addresses, from which the ASA assigns addresses to the clients.</p> <p>The address mask is optional. However, You must supply the mask value when the IP addresses assigned to VPN clients belong to a non-standard network and the data could be routed incorrectly if you use the default mask. A typical example is when the IP local pool contains 10.10.10.0/255.255.255.0 addresses, since this is a Class A network by default. This could cause routing issues when the VPN client needs to access different subnets within the 10 network over different interfaces.</p>

Adding a User

This section shows how to configure usernames and passwords. Use the command syntax in the following examples as a guide.

Command	Purpose
<pre>username name {nopassword password password [mschap encrypted nt-encrypted]} [privilege priv_level]</pre> <p>Example:</p> <pre>hostname(config)# username testuser password 12345678 hostname(config)#</pre>	<p>Creates a user, password, and privilege level.</p>

Creating an IKEv1 Transform Set or IKEv2 Proposal

This section shows how to configure a transform set (IKEv1) or proposal (IKEv2), which combines an encryption method and an authentication method.

Use the command syntax in the following examples as a guide.

Command	Purpose
<p>To configure an IKEv1 transform set:</p> <pre>crypto ipsec ikev1 transform-set transform-set-name encryption-method [authentication]</pre> <p>Example:</p> <pre>hostname(config)# crypto ipsec transform set FirstSet esp-3des esp-md5-hmac hostname(config)#</pre>	<p>Configures an IKEv1 transform set that specifies the IPsec IKEv1 encryption and hash algorithms to be used to ensure data integrity.</p> <p>Use one of the following values for <i>encryption</i>:</p> <ul style="list-style-type: none"> • esp-aes to use AES with a 128-bit key. • esp-aes-192 to use AES with a 192-bit key. • esp-aes-256 to use AES with a 256-bit key. • esp-des to use 56-bit DES-CBC. • esp-3des to use triple DES algorithm. • esp-null to not use encryption. <p>Use one of the following values for <i>authentication</i>:</p> <ul style="list-style-type: none"> • esp-md5-hmac to use the MD5/HMAC-128 as the hash algorithm. • esp-sha-hmac to use the SHA/HMAC-160 as the hash algorithm. • esp-none to not use HMAC authentication.
<p>To configure an IKEv2 proposal:</p> <pre>crypto ipsec ikev2 ipsec-proposal proposal_name</pre> <p>Then:</p> <pre>protocol {esp} {encryption {des 3des aes aes-192 aes-256 null} integrity {md5 sha-1}}</pre> <p>Example:</p> <pre>hostname(config)# crypto ipsec ikev2 ipsec-proposal secure_proposal hostname(config-ipsec-proposal)# protocol esp encryption des integrity md5</pre>	<p>Configures an IKEv2 proposal set that specifies the IPsec IKEv2 protocol, encryption, and integrity algorithms to be used.</p> <p>esp specifies the Encapsulating Security Payload (ESP) IPsec protocol (currently the only supported protocol for IPsec).</p> <p>Use one of the following values for <i>encryption</i>:</p> <ul style="list-style-type: none"> • des to use 56-bit DES-CBC encryption for ESP. • 3des (default) to use the triple DES encryption algorithm for ESP. • aes to use AES with a 128-bit key encryption for ESP. • aes-192 to use AES with a 192-bit key encryption for ESP. • aes-256 to use AES with a 256-bit key encryption for ESP. • null to not use encryption for ESP. <p>Use one of the following values for <i>integrity</i>:</p> <ul style="list-style-type: none"> • md5 specifies the md5 algorithm for the ESP integrity protection. • sha-1 (default) specifies the Secure Hash Algorithm (SHA) SHA-1, defined in the U.S. Federal Information Processing Standard (FIPS), for ESP integrity protection.

Defining a Tunnel Group

This section describes how to configure a tunnel group, which is a set of records that contain tunnel connection policies. You configure a tunnel group to identify AAA servers, specify connection parameters, and define a default group policy. The ASA stores tunnel groups internally.

There are two default tunnel groups in the ASA system: DefaultRAGroup, which is the default remote-access tunnel group, and DefaultL2Lgroup, which is the default LAN-to-LAN tunnel group. You can change them but not delete them. The ASA uses these groups to configure default tunnel parameters for remote access and LAN-to-LAN tunnel groups when there is no specific tunnel group identified during tunnel negotiation.

Use the command syntax in the following examples as a guide.

Detailed Steps

	Command	Purpose
Step 1	tunnel-group <i>name</i> type <i>type</i> Example: hostname(config)# tunnel-group testgroup type ipsec-ra hostname(config)#	Creates an IPsec remote access tunnel-group (also called connection profile).
Step 2	tunnel-group <i>name</i> general-attributes Example: hostname(config)# tunnel-group testgroup general-attributes hostname(config-tunnel-general)#	Enters tunnel group general attributes mode where you can enter an authentication method.
Step 3	address-pool [(<i>interface name</i>)] address_pool1 [... <i>address_pool6</i>] Example: hostname(config-general)# address-pool testpool	Specifies an address pool to use for the tunnel group.
Step 4	tunnel-group <i>name</i> ipsec-attributes Example: hostname(config)# tunnel-group testgroup ipsec-attributes hostname(config-tunnel-ipsec)#	Enters tunnel group ipsec attributes mode where you can enter IPsec-specific attributes for IKEv1 connections.
Step 5	ikev1 pre-shared-key <i>key</i> Example: hostname(config-tunnel-ipsec)# pre-shared-key 44kkaol59636jnfxf	(Optional) Configures a pre-shared key (IKEv1 only). The key can be an alphanumeric string from 1-128 characters. The keys for the adaptive security appliance and the client must be identical. If a Cisco VPN Client with a different preshared key size tries to connect, the client logs an error message indicating it failed to authenticate the peer. Note Configure AAA authentication for IKEv2 using certificates in the tunnel group webvpn-attributes.

Creating a Dynamic Crypto Map

This section describes how to configure dynamic crypto maps, which define a policy template where all the parameters do not have to be configured. These dynamic crypto maps let the ASA receive connections from peers that have unknown IP addresses. Remote access clients fall in this category.

Dynamic crypto map entries identify the transform set for the connection. You also enable reverse routing, which lets the ASA learn routing information for connected clients, and advertise it via RIP or OSPF.

Use the command syntax in the following examples as a guide.

Detailed Steps

	Command	Purpose
Step 1	<p>For IKEv1, use this command:</p> <pre>crypto dynamic-map <i>dynamic-map-name</i> <i>seq-num</i> set ikev1 transform-set <i>transform-set-name</i></pre> <p>Example: hostname(config)# crypto dynamic-map dyn1 1 set ikev1 transform-set FirstSet hostname(config)#</p> <p>For IKEv2, use this command:</p> <pre>crypto dynamic-map <i>dynamic-map-name</i> <i>seq-num</i> set ikev2 ipsec-proposal <i>proposal-name</i></pre> <p>Example: hostname(config)# crypto dynamic-map dyn1 1 set ikev2 ipsec-proposal FirstSet hostname(config)#</p>	Creates a dynamic crypto map and specifies an IKEv1 transform set or IKEv2 proposal for the map.
Step 2	<pre>crypto dynamic-map <i>dynamic-map-name</i> <i>dynamic-seq-num</i> set reverse-route</pre> <p>Example: hostname(config)# crypto dynamic-map dyn1 1 set reverse route hostname(config)#</p>	(Optional) Enables Reverse Route Injection for any connection based on this crypto map entry.

Creating a Crypto Map Entry to Use the Dynamic Crypto Map

This section describes how to create a crypto map entry that lets the ASA use the dynamic crypto map to set the parameters of IPsec security associations.

In the following examples for this command, the name of the crypto map is *mymap*, the sequence number is 1, and the name of the dynamic crypto map is *dyn1*, which you created in the previous section, “[Creating a Dynamic Crypto Map](#).”

Use the command syntax in the following examples as a guide.

Detailed Steps

	Command	Purpose
Step 1	<pre>crypto map <i>map-name</i> <i>seq-num</i> ipsec-isakmp dynamic <i>dynamic-map-name</i></pre> <p>Example: hostname(config)# crypto map mymap 1 ipsec-isakmp dynamic dyn1 hostname(config)#</p>	Creates a crypto map entry that uses a dynamic crypto map.
Step 2	<pre>crypto map <i>map-name</i> interface <i>interface-name</i></pre> <p>Example: hostname(config)# crypto map mymap interface outside hostname(config)#</p>	Applies the crypto map to the outside interface.

Saving the Security Appliance Configuration

After performing the preceding configuration tasks, be sure to save your configuration changes as shown in this example:

Command	Purpose
<pre>write memory</pre> <p>Example: hostname(config-if)# write memory Building configuration... Cryptochecksum: 0f80bf71 1623a231 63f27ccf 8700ca6d</p> <p>11679 bytes copied in 3.390 secs (3893 bytes/sec) [OK] hostname(config-if)#</p>	Saves the changes to the configuration.

Configuration Examples for Remote Access IPsec VPNs

The following example shows how to configure a remote access IPsec/IKEv1 VPN:

```
hostname(config)# interface ethernet0
hostname(config-if)# ip address 10.10.4.200 255.255.0.0
hostname(config-if)# nameif outside
hostname(config-if)# no shutdown
hostname(config)# crypto ikev1 policy 1
hostname(config-ikev1-policy)# authentication pre-share
hostname(config-ikev1-policy)# encryption 3des
hostname(config-ikev1-policy)# hash sha
hostname(config-ikev1-policy)# group 2
hostname(config-ikev1-policy)# lifetime 43200
hostname(config)# crypto ikev1 enable outside
hostname(config)# ip local pool testpool 192.168.0.10-192.168.0.15
hostname(config)# username testuser password 12345678
```

```

hostname(config)# crypto ipsec ikev1 transform-set FirstSet esp-3des esp-md5-hmac
hostname(config)# tunnel-group testgroup type remote-access
hostname(config)# tunnel-group testgroup general-attributes
hostname(config-general)# address-pool testpool
hostname(config)# tunnel-group testgroup ipsec-attributes
hostname(config-ipsec)# ikev1 pre-shared-key 44kkaol59636jnfjx
hostname(config)# crypto dynamic-map dyn1 1 set ikev1 transform-set FirstSet
hostname(config)# crypto dynamic-map dyn1 1 set reverse-route
hostname(config)# crypto map mymap 1 ipsec-isakmp dynamic dyn1
hostname(config)# crypto map mymap interface outside
hostname(config)# write memory

```

The following example shows how to configure a remote access IPsec/IKEv2 VPN:

```

hostname(config)# interface ethernet0
hostname(config-if)# ip address 10.10.4.200 255.255.0.0
hostname(config-if)# nameif outside
hostname(config-if)# no shutdown
hostname(config)# crypto ikev2 policy 1
hostname(config-ikev2-policy)# group 2
hostname(config-ikev2-policy)# integrity sha
hostname(config-ikev2-policy)# lifetime 43200
hostname(config-ikev2-policy)# prf sha
hostname(config)# crypto ikev2 outside
hostname(config)# ip local pool testpool 192.168.0.10-192.168.0.15
hostname(config)# username testuser password 12345678
hostname(config)# crypto ipsec ikev2 ipsec-proposal FirstSet
hostname(config-ipsec-proposal)# protocol esp encryption 3des aes
hostname(config)# tunnel-group testgroup type remote-access
hostname(config)# tunnel-group testgroup general-attributes
hostname(config-general)# address-pool testpool
hostname(config)# tunnel-group testgroup webvpn-attributes
hostname(config-webvpn)# authentication aaa certificate
hostname(config)# crypto dynamic-map dyn1 1 set ikev2 ipsec-proposal FirstSet
hostname(config)# crypto dynamic-map dyn1 1 set reverse-route
hostname(config)# crypto map mymap 1 ipsec-isakmp dynamic dyn1
hostname(config)# crypto map mymap interface outside
hostname(config)# write memory

```

Feature History for Remote Access VPNs

Table 69-1 lists the release history for this feature.

Table 69-1 Feature History for Feature-1

Feature Name	Releases	Feature Information
Remote access VPNs for IPsec IKEv1 and SSL.	7.0	Remote access VPNs allow users to connect to a central site through a secure connection over a TCP/IP network such as the Internet.
Remote access VPNs for IPsec IKEv2	8.4(1)	Added IPsec IKEv2 support for the AnyConnect Secure Mobility Client.



CHAPTER 70

Configuring Network Admission Control

This chapter includes the following sections:

- [Information about Network Admission Control, page 70-1](#)
- [Licensing Requirements, page 70-2](#)
- [Prerequisites for NAC, page 70-4](#)
- [Guidelines and Limitations, page 70-4](#)
- [Viewing the NAC Policies on the Security Appliance, page 70-5](#)
- [Adding, Accessing, or Removing a NAC Policy, page 70-7](#)
- [Configuring a NAC Policy, page 70-8](#)
- [Assigning a NAC Policy to a Group Policy, page 70-13](#)
- [Changing Global NAC Framework Settings, page 70-13](#)

Information about Network Admission Control

Network Admission Control protects the enterprise network from intrusion and infection from worms, viruses, and rogue applications by performing endpoint compliancy and vulnerability checks as a condition for production access to the network. We refer to these checks as *posture validation*. You can configure posture validation to ensure that the anti-virus files, personal firewall rules, or intrusion protection software on a host with an IPsec or WebVPN session are up-to-date before providing access to vulnerable hosts on the intranet. Posture validation can include the verification that the applications running on the remote hosts are updated with the latest patches. NAC occurs only after user authentication and the setup of the tunnel. NAC is especially useful for protecting the enterprise network from hosts that are not subject to automatic network policy enforcement, such as home PCs.

The establishment of a tunnel between the endpoint and the ASA triggers posture validation.

You can configure the ASA to pass the IP address of the client to an optional audit server if the client does not respond to a posture validation request. The audit server, such as a Trend server, uses the host IP address to challenge the host directly to assess its health. For example, it may challenge the host to determine whether its virus checking software is active and up-to-date. After the audit server completes its interaction with the remote host, it passes a token to the posture validation server, indicating the health of the remote host.

Following successful posture validation or the reception of a token indicating the remote host is healthy, the posture validation server sends a network access policy to the ASA for application to the traffic on the tunnel.

In a *NAC Framework* configuration involving the ASA, only a Cisco Trust Agent running on the client can fulfill the role of posture agent, and only a Cisco Access Control Server (ACS) can fulfill the role of posture validation server. The ACS uses dynamic ACLs to determine the access policy for each client.

As a RADIUS server, the ACS can authenticate the login credentials required to establish a tunnel, in addition to fulfilling its role as posture validation server.

**Note**

Only a NAC Framework policy configured on the ASA supports the use of an audit server.

In its role as posture validation server, the ACS uses access control lists. If posture validation succeeds and the ACS specifies a redirect URL as part of the access policy it sends to the ASA, the ASA redirects all HTTP and HTTPS requests from the remote host to the redirect URL. Once the posture validation server uploads an access policy to the ASA, all of the associated traffic must pass both the Security Appliance and the ACS (or vice versa) to reach its destination.

The establishment of a tunnel between an IPsec or WebVPN client and the ASA triggers posture validation if a NAC Framework policy is assigned to the group policy. The NAC Framework policy can, however, identify operating systems that are exempt from posture validation and specify an optional ACL to filter such traffic.

Licensing Requirements

The following table shows the licensing requirements for this feature:

**Note**

This feature is not available on No Payload Encryption models.

Model	License Requirement ^{1,2}
ASA 5505	AnyConnect Premium license: <ul style="list-style-type: none"> • Base License or Security Plus license: 2 sessions. • <i>Optional permanent or time-based licenses: 10 or 25 sessions.</i> • <i>Shared licenses are not supported.</i>³
ASA 5510	AnyConnect Premium license: <ul style="list-style-type: none"> • Base and Security Plus License: 2 sessions. • <i>Optional permanent or time-based licenses: 10, 25, 50, 100, or 250 sessions.</i> • <i>Optional Shared licenses³: Participant or Server. For the Server license, 500-50,000 in increments of 500 and 50,000-545,000 in increments of 1000.</i>
ASA 5520	AnyConnect Premium license: <ul style="list-style-type: none"> • Base License: 2 sessions. • <i>Optional permanent or time-based licenses: 10, 25, 50, 100, 250, 500, or 750 sessions.</i> • <i>Optional Shared licenses³: Participant or Server. For the Server license, 500-50,000 in increments of 500 and 50,000-545,000 in increments of 1000.</i>

Model	License Requirement ^{1,2}
ASA 5540	AnyConnect Premium license: <ul style="list-style-type: none"> • Base License: 2 sessions. • <i>Optional permanent or time-based licenses: 10, 25, 50, 100, 250, 500, 750, 1000, or 2500 sessions.</i> • <i>Optional Shared licenses³: Participant or Server. For the Server license, 500-50,000 in increments of 500 and 50,000-545,000 in increments of 1000.</i>
ASA 5550	AnyConnect Premium license: <ul style="list-style-type: none"> • Base License: 2 sessions. • <i>Optional permanent or time-based licenses: 10, 25, 50, 100, 250, 500, 750, 1000, 2500, or 5000 sessions.</i> • <i>Optional Shared licenses³: Participant or Server. For the Server license, 500-50,000 in increments of 500 and 50,000-545,000 in increments of 1000.</i>
ASA 5580	AnyConnect Premium license: <ul style="list-style-type: none"> • Base License: 2 sessions. • <i>Optional permanent or time-based licenses: 10, 25, 50, 100, 250, 500, 750, 1000, 2500, 5000, or 10000 sessions.</i> • <i>Optional Shared licenses³: Participant or Server. For the Server license, 500-50,000 in increments of 500 and 50,000-545,000 in increments of 1000.</i>
ASA 5512-X	AnyConnect Premium license: <ul style="list-style-type: none"> • Base License: 2 sessions. • <i>Optional permanent or time-based licenses: 10, 25, 50, 100, or 250 sessions.</i> • <i>Optional Shared licenses³: Participant or Server. For the Server license, 500-50,000 in increments of 500 and 50,000-545,000 in increments of 1000.</i>
ASA 5515-X	AnyConnect Premium license: <ul style="list-style-type: none"> • Base License: 2 sessions. • <i>Optional permanent or time-based licenses: 10, 25, 50, 100, or 250 sessions.</i> • <i>Optional Shared licenses³: Participant or Server. For the Server license, 500-50,000 in increments of 500 and 50,000-545,000 in increments of 1000.</i>
ASA 5525-X	AnyConnect Premium license: <ul style="list-style-type: none"> • Base License: 2 sessions. • <i>Optional permanent or time-based licenses: 10, 25, 50, 100, 250, 500, or 750 sessions.</i> • <i>Optional Shared licenses³: Participant or Server. For the Server license, 500-50,000 in increments of 500 and 50,000-545,000 in increments of 1000.</i>
ASA 5545-X	AnyConnect Premium license: <ul style="list-style-type: none"> • Base License: 2 sessions. • <i>Optional permanent or time-based licenses: 10, 25, 50, 100, 250, 500, 750, 1000, or 2500 sessions.</i> • <i>Optional Shared licenses³: Participant or Server. For the Server license, 500-50,000 in increments of 500 and 50,000-545,000 in increments of 1000.</i>

Model	License Requirement ^{1,2}
ASA 5555-X	AnyConnect Premium license: <ul style="list-style-type: none"> • Base License: 2 sessions. • <i>Optional permanent or time-based licenses: 10, 25, 50, 100, 250, 500, 750, 1000, 2500, or 5000 sessions.</i> • <i>Optional Shared licenses³: Participant or Server. For the Server license, 500-50,000 in increments of 500 and 50,000-545,000 in increments of 1000.</i>
ASA 5585-X with SSP-10	AnyConnect Premium license: <ul style="list-style-type: none"> • Base License: 2 sessions. • <i>Optional permanent or time-based licenses: 10, 25, 50, 100, 250, 500, 750, 1000, 2500, or 5000 sessions.</i> • <i>Optional Shared licenses³: Participant or Server. For the Server license, 500-50,000 in increments of 500 and 50,000-545,000 in increments of 1000.</i>
ASA 5585-X with SSP-20, -40, and -60	AnyConnect Premium license: <ul style="list-style-type: none"> • Base License: 2 sessions. • <i>Optional permanent or time-based licenses: 10, 25, 50, 100, 250, 500, 750, 1000, 2500, 5000, or 10000 sessions.</i> • <i>Optional Shared licenses³: Participant or Server. For the Server license, 500-50,000 in increments of 500 and 50,000-545,000 in increments of 1000.</i>

1. If you start a clientless SSL VPN session and then start an AnyConnect client session from the portal, 1 session is used in total. However, if you start the AnyConnect client first (from a standalone client, for example) and then log into the clientless SSL VPN portal, then 2 sessions are used.
2. The maximum combined VPN sessions of *all* types cannot exceed the maximum sessions shown in this table.
3. A shared license lets the ASA act as a shared license server for multiple client ASAs. The shared license pool is large, but the maximum number of sessions used by each individual ASA cannot exceed the maximum number listed for permanent licenses.

Prerequisites for NAC

When configured to support NAC, the ASA functions as a client of a Cisco Secure Access Control Server, requiring that you install a minimum of one Access Control Server on the network to provide NAC authentication services.

Guidelines and Limitations

Following the configuration of one or more Access Control Servers on the network, you must use the **aaa-server** command to name the Access Control Server group. Then follow the instructions in the [“Configuring a NAC Policy” procedure on page 70-8](#).

ASA support for NAC Framework is limited to remote access IPsec and WebVPN client sessions. The NAC Framework configuration supports only single mode.

NAC on the ASA does not support Layer 3 (non-VPN) traffic and IPv6 traffic.

Viewing the NAC Policies on the Security Appliance

Before configuring the NAC policies to be assigned to group policies, we recommend that you view any that may already be set up on the ASA. Because the default configuration does not contain NAC policies, entering this command is a useful way to determine whether anyone has added any. If you, you may decide that policies already configured are suitable and disregard the section on configuring a NAC policy.

Detailed Steps.

	Command	Purpose
Step 1	<p>show running-config nac-policy</p> <p>Example:</p> <pre>hostname# show running-config nac-policy nac-policy nacframework1 nac-framework default-acl acl-1 reval-period 36000 sq-period 300 exempt-list os "Windows XP" filter acl-2 hostname#</pre>	<p>Views any NAC policies that are already set up on the ASA.</p> <p>Shows the configuration of a NAC policy named nac-framework1</p>
Step 2	<ul style="list-style-type: none"> • default-acl—NAC default ACL applied before posture validation. Following posture validation, the security appliance replaces the default ACL with the one obtained from the Access Control Server for the remote host. The ASA retains the default ACL if posture validation fails. • reval-period—Number of seconds between each successful posture validation in a NAC Framework session. • sq-period—Number of seconds between each successful posture validation in a NAC Framework session and the next query for changes in the host posture. • exempt-list—Operating system names that are exempt from posture validation. Also shows an optional ACL to filter the traffic if the remote computer's operating system matches the name. • authentication-server-group—Name of the of authentication server group to be used for NAC posture validation. 	Shows the nac-framework attributes.

	Command	Purpose
Step 3	<pre>show nac-policy</pre> <p>Example:</p> <pre>asa2(config)# show nac-policy nac-policy framework1 nac-framework applied session count = 0 applied group-policy count = 2 group-policy list: GroupPolicy2 GroupPolicy1 nac-policy framework2 nac-framework is not in use. asa2(config)#</pre>	<p>Displays the assignment of NAC policies to group policies.</p> <p>Shows which NAC policies are unassigned and the usage count for each NAC policy.</p>
Step 4	<ul style="list-style-type: none"> • applied session count—Cumulative number of VPN sessions to which this ASA applied the NAC policy. • applied group-policy count—Cumulative number of group policies to which this ASA applied the NAC policy. • group-policy list—List of group policies to which this NAC policy is assigned. In this case, the usage of a group policy does not determine whether it appears in this list; if the NAC policy is assigned to a group policy in the running configuration, then the group policy appears in this list. 	<p>Explains the fields in the show nac-policy command.</p> <p>Note When a policy is not assigned to any group policies, “is not in use” displays next to the policy type.</p>

Refer to the following sections to create a NAC policy or modify one that is already present.

Adding, Accessing, or Removing a NAC Policy

Enter the following command to add or modify a NAC policy:

Detailed Steps

	Command	Purpose
Step 1	<code>global</code>	Switches to global configuration mode.
Step 2	<code>nac-policy nac-policy-name nac-framework</code> Example: <code>hostname(config)# nac-policy nac-framework1 nac-framework hostname(config-nac-policy-nac-framework)</code>	<p>Adds or modifies a NAC policy.</p> <p><i>nac-policy-name</i> is the name of a new NAC policy or one that is already present. The name is a string of up to 64 characters.</p> <p>nac-framework specifies that a NAC Framework configuration will provide a network access policy for remote hosts. A Cisco Access Control Server must be present on the network to provide NAC Framework services for the ASA. When you specify this type, the prompt indicates you are in <code>nac-policy-nac-framework</code> configuration mode. This mode lets you configure the NAC Framework policy.</p> <p>Note You can create more than one NAC Framework policy, but you can assign no more than one to a group policy.</p> <p>Creates and accesses a NAC framework policy named <code>nac-framework1</code>.</p>
Step 3	(Optional) <code>[no] nac-policy nac-policy-name nac-framework</code>	Removes a NAC policy from the configuration. You must specify both the name and type of the policy.
Step 4	(Optional) <code>clear configure nac-policy</code>	Removes all NAC policies from the configuration except for those that are assigned to group policies.
Step 5	<code>show running-config nac-policy</code>	Displays the name and configuration of each NAC policy already present on the security appliance.

Configuring a NAC Policy

After you use the `nac-policy` command to name a NAC Framework policy, use the following sections to assign values to its attributes before you assign it to a group policy.

Specifying the Access Control Server Group

You must configure at least one Cisco Access Control Server to support NAC.

Detailed Steps

	Command	Purpose
Step 1	<code>aaa-server host</code>	Names the Access Control Server group even if the group contains only one server.
Step 2	(Optional) <code>show running-config aaa-server</code> Example: hostname(config)# <code>show running-config aaa-server</code> aaa-server acs-group1 protocol radius aaa-server acs-group1 (outside) host 192.168.22.44 key secret radius-common-pw secret hostname(config)#	Displays the AAA server configuration.
Step 3	<code>nac-policy-nac-framework</code>	Switches to <code>nac-policy-nac-framework</code> configuration mode.
Step 4	<code>authentication-server-group server-group</code> Example: hostname(config-nac-policy-nac-framework)# <code>authentication-server-group acs-group1</code> hostname(config-nac-policy-nac-framework)	Specifies the group used for NAC posture validation. <i>server-group</i> must match the server-tag variable specified in the <code>aaa-server host</code> command. It is optional if you are using the no version of the command. Specifies <code>acs-group1</code> as the authentication server group used for NAC posture validation.
Step 5	(Optional) <code>[no] authentication-server-group server-group</code>	Removes the command from the NAC policy.

Setting the Query-for-Posture-Changes Timer

After each successful posture validation, the ASA starts a status query timer. The expiration of this timer triggers a query to the remote host for changes in posture since the last posture validation. A response indicating no change resets the status query timer. A response indicating a change in posture triggers an unconditional posture revalidation. The ASA maintains the current access policy during revalidation.

By default, the interval between each successful posture validation and the status query, and each subsequent status query, is 300 seconds (5 minutes). Follow these steps to change the status query interval:

Detailed Steps

	Command	Purpose
Step 1	<code>nac-policy-nac-framework</code>	Switches to <code>nac-policy-nac-framework</code> configuration mode.
Step 2	<code>sq-period seconds</code> Example: <code>hostname(config-group-policy) # sq-period 1800</code> <code>hostname(config-group-policy)</code>	Changes the status query interval. <i>seconds</i> must be in the range 30 to 1800 seconds (5 to 30 minutes). Changes the query timer to 1800 seconds.
Step 3	(Optional) <code>[no] sq-period seconds</code>	Turns off the status query timer.
Step 4	<code>show running-config nac-policy</code>	Displays a 0 next to the <code>sq-period</code> attribute, meaning the timer is turned off.

Setting the Revalidation Timer

After each successful posture validation, the ASA starts a revalidation timer. The expiration of this timer triggers the next unconditional posture validation. The ASA maintains the current access policy during revalidation.

By default, the interval between each successful posture validation is 36000 seconds (10 hours). To change it, enter the following command in `nac-policy-nac-framework` configuration mode:

Detailed Steps

	Command	Purpose
Step 1	<code>nac-policy-nac-framework</code>	Switches to <code>nac-policy-nac-framework</code> .
Step 2	<code>reval-period seconds</code> Example: <code>hostname(config-nac-policy-nac-framework) # reval-period 86400</code> <code>hostname(config-nac-policy-nac-framework)</code>	Changes the interval between each successful posture validation. <i>seconds</i> must be in the range is 300 to 86400 seconds (5 minutes to 24 hours).
Step 3	(Optional) <code>[no] reval-period seconds</code>	Turns off the status query timer.
Step 4	<code>show running-config nac-policy</code>	Displays a 0 next to the <code>sq-period</code> attribute, which means the timer is turned off.

Configuring the Default ACL for NAC

Each group policy points to a default ACL to be applied to hosts that match the policy and are eligible for NAC. The ASA applies the NAC default ACL before posture validation. Following posture validation, the ASA replaces the default ACL with the one obtained from the Access Control Server for the remote host. The ASA retains the default ACL if posture validation fails.

The ASA also applies the NAC default ACL if clientless authentication is enabled (which is the default setting).

Detailed Steps

	Command	Purpose
Step 1	<code>nac-policy-nac-framework</code>	Switches to <code>nac-policy-nac-framework</code> configuration mode.
Step 2	<code>default-acl acl-name</code> Example: <code>hostname(config-nac-policy-nac-framework)#</code> <code>default-acl ac1-2</code> <code>hostname(config-nac-policy-nac-framework)</code>	Specifies which ACL to use as the default ACL for NAC sessions. <i>acl-name</i> is the name of the access control list to be applied to the session. Identifies <code>ac1-2</code> as which ACL to apply before posture validation succeeds.
Step 3	(Optional) <code>[no] default-acl acl-name</code>	Removes the command from the NAC framework policy. Specifying the <i>acl-name</i> is optional.

Configuring Exemptions from NAC

The ASA configuration stores a list of exemptions from NAC posture validation. You can specify the operating systems that are exempt. If you specify an ACL, the client running the operating system specified is exempt from posture validation and the client traffic is subject to the ACL.

To add an entry to the list of remote computer types that are exempt from NAC posture validation, enter the following command in `nac-policy-nac-framework` configuration mode:

Detailed Steps

	Command	Purpose
Step 1	<code>nac-policy-nac-framework</code>	Switches to <code>nac-policy-nac-framework</code> configuration mode.
Step 2	<pre>exempt-list os "os-name" [disable filter acl-name [disable]</pre> <p>Example:</p> <pre>hostname(config-group-policy) # exempt-list os "Windows XP" hostname(config-group-policy) hostname(config-nac-policy-nac-framework) # exempt-list os "Windows XP" filter acl-2 hostname(config-nac-policy-nac-framework) hostname(config-nac-policy-nac-framework) # no exempt-list os "Windows XP" filter acl-2 hostname(config-nac-policy-nac-framework)</pre>	<p>Adds an entry to the list of remote computer types that are exempt from NAC posture validation.</p> <ul style="list-style-type: none"> • <code>os-name</code> is the operating system name. Use quotation marks if the name includes a space (for example, "Windows XP"). • filter applies an ACL to filter the traffic if the computer's operating system matches the <code>os name</code>. The filter/acl-name pair is optional. • disable performs one of two functions, as follows: <ul style="list-style-type: none"> – If you enter it after the "os-name," the ASA ignores the exemption, and applies NAC posture validation to the remote hosts that are running that operating system. – If you enter it after the <code>acl-name</code>, ASA exempts the operating system, but does not apply the ACL to the associated traffic. • <code>acl-name</code> is the name of the ACL present in the ASA configuration. When specified, it must follow the filter keyword. <p>Adds all hosts running Windows XP to the list of computers that are exempt from posture validation.</p> <p>Exempts all hosts running Windows XP and applies the ACL <code>acl-2</code> to traffic from those hosts</p> <p>Removes the same entry from the exemption list.</p>
Step 3	<p>(Optional)</p> <pre>[no] exempt-list os "os-name" [disable filter acl-name [disable]]</pre> <p>Example:</p> <pre>hostname(config-nac-policy-nac-framework) # no exempt-list hostname(config-nac-policy-nac-framework)</pre>	<p>Removes all exemptions from the NAC framework policy. Specifying an entry when issuing the no form of the command removes the entry from the exemption list.</p> <p>Removes all entries from the exemption list.</p>

**Note**

When the command specifies an operating system, it does not overwrite the previously added entry to the exception list; enter the command once for each operating system and ACL you want to exempt.

Assigning a NAC Policy to a Group Policy

Upon completion of each tunnel setup, the ASA applies the NAC policy, if it is assigned to the group policy, to the session. By default, the `nac-settings` command is not present in the configuration of each group policy. The ASA automatically enables NAC for a group policy when you assign a NAC policy to it.

Detailed Steps

	Command	Purpose
Step 1	<code>group-policy</code>	Switches to group-policy configuration mode.
Step 2	<code>nac-settings { value <i>nac-policy-name</i> none }</code> Example: <code>hostname(config-group-policy)# nac-settings value framework1</code> <code>hostname(config-group-policy)</code>	Assigns a NAC policy to a group policy. <ul style="list-style-type: none"> • <code>nac-settings none</code> removes the <code>nac-policy-name</code> from the group policy and disables the use of a NAC policy for this group policy. The group policy does not inherit the <code>nac-settings</code> value from the default group policy. • <code>nac-settings value</code> assigns the NAC policy you name to the group policy. Assigns the NAC policy named <code>framework1</code> to the group policy.
Step 3	(Optional) <code>[no] nac-settings { value <i>nac-policy-name</i> none }</code>	Removes the <code>nac-policy-name</code> from the group policy. The group policy inherits the <code>nac-settings</code> value from the default group policy.
Step 4	(Optional) <code>show running-config nac-policy</code>	Displays the name and configuration of each NAC policy

Changing Global NAC Framework Settings

The ASA provides default settings for a NAC Framework configuration. Use the instructions in this section to adjust these settings for adherence to the policies in force in your network.

Changing Clientless Authentication Settings

NAC Framework support for clientless authentication is configurable. It applies to hosts that do not have a Cisco Trust Agent to fulfill the role of posture agent. The ASA applies the default access policy, sends the EAP over UDP request for posture validation, and the request times out. If the ASA is not configured to request a policy for clientless hosts from the Access Control Server, it retains the default access policy already in use for the clientless host. If the ASA is configured to request a policy for clientless hosts from the Access Control Server, it does so and the Access Control Server downloads the access policy to be enforced by the ASA.

Enabling and Disabling Clientless Authentication

Clientless authentication is enabled by default. The default configuration contains the **euo allow clientless** configuration.

Restrictions

The **euo** commands apply *only* to NAC Framework sessions.

Detailed Steps

Follow these steps to enable clientless authentication for a NAC Framework configuration:

	Command	Purpose
Step 1	<code>global</code>	Switches to global configuration mode.
Step 2	<code>euo allow {audit clientless none}</code> Example: <code>hostname(config)# euo allow audit</code> <code>hostname(config)#</code>	Enables clientless authentication for a NAC framework configuration. <ul style="list-style-type: none"> • audit uses an audit server to perform clientless authentication. • clientless uses a Cisco Access Control Server to perform clientless authentication. • none disables clientless authentication. Shows how to configure the ASA to use an audit server to perform clientless authentication.
Step 3	<code>[no] euo allow {audit clientless none}</code> Example: <code>hostname(config)# no euo allow audit</code> <code>hostname(config)#</code>	Removes the command from the configuration. Disables the use of an audit server.

Changing the Login Credentials Used for Clientless Authentication

When clientless authentication is enabled, and the ASA fails to receive a response to a validation request from the remote host, it sends a clientless authentication request on behalf of the remote host to the Access Control Server. The request includes the login credentials that match those configured for clientless authentication on the Access Control Server. The default username and password for clientless authentication on the ASA matches the default username and password on the Access Control Server; the default username and password are both “clientless.”

Prerequisites

If you change these values on the Access Control Server, you must also do so on the ASA.

Detailed Steps

Enter the following to change the username used for clientless authentication:

	Command	Purpose
Step 1	<code>global</code>	Switches to global configuration mode.
Step 2	<p><code>eu clientless username <i>username</i></code></p> <p>Example: <code>hostname(config)# eu clientless username sherlock</code> <code>hostname(config)# eu clientless password 221B-baker</code> <code>hostname(config)#</code></p>	<p>Changes the username used for clientless authentication.</p> <p><i>username</i> must match the username configured on the Access Control Server to support clientless hosts. Enter 1 to 64 ASCII characters, excluding leading and trailing spaces, pound signs (#), question marks (?), quotation marks ("), asterisks (*), and angle brackets (< and >).</p> <p>Changes the username and password for clientless authentication to <i>sherlock</i> and <i>221B-baker</i> respectively. You can specify only the username, only the password, or both.</p>
Step 3	<code>eu clientless password <i>password</i></code>	<p>Changes the password used for clientless authentication.</p> <p><i>password</i> must match the password configured on the Access Control Server to support clientless hosts. Enter 4 – 32 ASCII characters.</p>
Step 4	<p>(Optional)</p> <p><code>no eu clientless username</code></p> <p>Example: <code>hostname(config)# no eu clientless username</code> <code>hostname(config)#</code></p>	Changes the username to its default value.
Step 5	<p>(Optional)</p> <p><code>no eu clientless password</code></p> <p>Example: <code>hostname(config)# no eu clientless password</code> <code>hostname(config)#</code></p>	Changes the password to its default value.

Changing NAC Framework Session Attributes

The ASA provides default settings for the attributes that specify communications between the ASA and the remote host. These attributes specify the port no. to communicate with posture agents on remote hosts and the expiration counters that impose limits on the communications with the posture agents. These attributes, the default settings, and the commands you can enter to change them are as follows:

Detailed Steps

	Command	Purpose
Step 1	<code>global</code>	Switches to global configuration mode.
Step 2	<p><code>euo port port_number</code></p> <p>Example: <code>hostname(config)# euo port 62445</code> <code>hostname(config)#</code></p>	<p>The default port number is 21862. This command changes the port number (on the client endpoint) used for EAP over UDP communication with posture agents.</p> <p><i>port_number</i> must match the port number configured on the CTA. Enter a value in the range 1024 to 65535.</p> <p>Changes the port number for EAP over UDP communication to 62445.</p>
Step 3	<p>(Optional)</p> <p><code>no euo port</code></p> <p>Example: <code>hostname(config)# no euo port</code> <code>hostname(config)#</code></p>	Changes the port number to its default value.
Step 4	<p><code>euo timeout retransmit seconds</code></p> <p>Example: <code>hostname(config)# euo timeout retransmit 6</code> <code>hostname(config)#</code></p>	<p>Changes the retransmission retry timer. When the ASA sends an EAP over UDP message to the remote host, it waits for a response. If it fails to receive a response within <i>n</i> seconds, it resends the EAP over UDP message. By default, the retransmission timer is 3 seconds.</p> <p><i>seconds</i> is a value in the range 1 to 60.</p> <p>Changes the retransmission timer to 6 seconds.</p>
Step 5	<p>(Optional)</p> <p><code>no euo timeout retransmit</code></p> <p>Example: <code>hostname(config)# no euo timeout retransmit</code> <code>hostname(config)#</code></p>	Changes the retransmission retry timer to its default value.
Step 6	<p><code>euo max-retry retries</code></p> <p>Example: <code>hostname(config)# euo max-retry 1</code> <code>hostname(config)#</code></p>	<p>Changes retransmission retries. When the ASA sends an EAP over UDP message to the remote host, it waits for a response. If it fails to receive a response, it resends the EAP over UDP message. By default, it retries up to 3 times.</p> <p><i>retries</i> is a value in the range 1 to 3.</p> <p>Limits the number of EAP over UDP retransmissions to 1.</p>

	Command	Purpose
Step 7	(Optional) <code>no eou max-retry</code> Example: <code>hostname(config)# no eou max-retry</code> <code>hostname(config)#</code>	Changes the maximum number of retransmission retries to its default value.
Step 8	<code>eou timeout hold-period seconds</code> Example: <code>hostname(config)# eou timeout hold-period 120</code> <code>hostname(config)#</code>	Changes the session reinitialization timer. When the retransmission retry counter matches the max-retry value, the ASA terminates the EAP over UDP session with the remote host and starts the hold timer. When the hold timer equals <i>n</i> seconds, the ASA establishes a new EAP over UDP session with the remote host. By default, the maximum number of seconds to wait before establishing a new session is 180 seconds. <i>seconds</i> is a value in the range 60 to 86400. Changes the wait period before initiating a new EAP over UDP association to 120 seconds
Step 9	(Optional) <code>no eou timeout hold-period</code> Example: <code>hostname(config)# no eou timeout hold-period</code> <code>hostname(config)#</code>	Changes the session reinitialization to its default value.



CHAPTER 71

Configuring Easy VPN Services on the ASA 5505

This chapter describes how to configure the ASA 5505 as an Easy VPN hardware client. This chapter assumes you have configured the switch ports and VLAN interfaces of the ASA 5505 (see [Chapter 7, “Starting Interface Configuration \(ASA 5505\)”](#)).



Note

The Easy VPN hardware client configuration specifies the IP address of its primary and secondary (backup) Easy VPN servers. Any ASA, including another ASA 5505 configured as a headend, a VPN 3000 Series Concentrator, an IOS-based router, or a firewall can act as an Easy VPN server. An ASA 5505 cannot, however function as both a client and a server simultaneously. To configure an ASA 5505 as a server, see the [“Specifying the Client/Server Role of the Cisco ASA 5505”](#) section on page 71-1. Then configure the ASA 5505 as you would any other ASA, beginning with the [“Getting Started”](#) section on page 2-1 of this guide.

This chapter includes the following sections:

- [Specifying the Client/Server Role of the Cisco ASA 5505, page 71-1](#)
- [Specifying the Primary and Secondary Servers, page 71-2](#)
- [Specifying the Mode, page 71-3](#)
- [Configuring Automatic Xauth Authentication, page 71-4](#)
- [Configuring IPsec Over TCP, page 71-4](#)
- [Comparing Tunneling Options, page 71-5](#)
- [Specifying the Tunnel Group or Trustpoint, page 71-6](#)
- [Configuring Split Tunneling, page 71-8](#)
- [Configuring Device Pass-Through, page 71-8](#)
- [Configuring Remote Management, page 71-9](#)
- [Guidelines for Configuring the Easy VPN Server, page 71-10](#)

Specifying the Client/Server Role of the Cisco ASA 5505

The Cisco ASA 5505 can function as a Cisco Easy VPN hardware client (also called “Easy VPN Remote”) or as a server (also called a “headend”), but not both at the same time. It does not have a default role. Use one of the following commands in global configuration mode to specify its role:

- `vpnclient enable` to specify the role of the ASA 5505 as an Easy VPN Remote

- **no vpnclient enable** to specify the role of the ASA 5505 as server

The following example shows how to specify the ASA 5505 as an Easy VPN hardware client:

```
hostname(config)# vpnclient enable
hostname(config)#
```

The CLI responds with an error message indicating that you must remove certain data elements if you switch from server to hardware client, depending on whether the elements are present in the configuration. [Table 71-1](#) lists the data elements that are permitted in both client and server configurations, and not permitted in client configurations.

Table 71-1 Configuration Privileges and Restrictions on the ASA 5505

Permitted in Both Client and Server Configurations	Not Permitted in Client Configurations
crypto ca trustpoints	tunnel-groups
digital certificates	isakmp policies
group-policies	crypto maps
crypto dynamic-maps	
crypto ipsec transform-sets	
crypto ipsec security-association lifetime	
crypto ipsec fragmentation before-encryption	
crypto ipsec df-bit copy-df	

An ASA 5505 configured as an Easy VPN hardware client retains the commands listed in the first column within its configuration, however, some have no function in the client role.

The following example shows how to specify the ASA 5505 as an Easy VPN server:

```
hostname(config)# no vpnclient enable
hostname(config)#
```

After entering the no version of this command, configure the ASA 5505 as you would any other ASA, beginning with [“Getting Started” section on page 2-1](#) of this guide.

Specifying the Primary and Secondary Servers

Before establishing a connection with an Easy VPN hardware client, you must specify the IP address of an Easy VPN server to which it will connect. Any ASA can act as an Easy VPN server, including another ASA 5505 configured as a headend, a VPN 3000 Series Concentrator, an IOS-based router, or a firewall.

The ASA 5505 Client always tries to set up the tunnel to the headend primary VPN server. If unable to set up the tunnel to the primary server, it tries the connection to the secondary_1 VPN server, and then sequentially down the list of VPN servers at 8 second intervals. If the setup tunnel to the secondary_1 server fails, the primary comes online during this time, and the ASA proceeds to set up the tunnel to the secondary_2 VPN server.

Use the **vpnclient server** command in global configuration mode, as follows:

```
[no] vpnclient server ip_primary [ip_secondary_1...ip_secondary_10]
```

no removes the command from the running configuration.

ip_primary_address is the IP address or DNS name of the primary Easy VPN server.

ip_secondary_address_n (Optional) is a list of the IP addresses or DNS names of up to ten backup Easy VPN servers. Use a space to separate the items in the list.

For example, enter the following command to configure a VPN client to use Easy VPN Server 10.10.10.15 as the primary server, and 10.10.10.30 and 192.168.10.45 as alternate servers:

```
hostname(config)# vpnclient server 10.10.10.15 10.10.10.30 192.168.10.10
hostname(config)#
```

Specifying the Mode

The Easy VPN Client supports one of two modes of operation: Client Mode or Network Extension Mode (NEM). The mode of operation determines whether the inside hosts relative to the Easy VPN Client are accessible from the Enterprise network over the tunnel. Specifying a mode of operation is mandatory before making a connection because Easy VPN Client does not have a default mode.

Client mode, also called Port Address Translation (PAT) mode, isolates the IP addresses of all devices on the Easy VPN Client private network from those on the enterprise network. The Easy VPN Client performs PAT for all VPN traffic for its inside hosts. IP address management is neither required for the Easy VPN Client inside interface or the inside hosts.

NEM makes the inside interface and all inside hosts routeable across the enterprise network over the tunnel. Hosts on the inside network obtain their IP addresses from an accessible subnet (statically or via DHCP) pre-configured with static IP addresses. PAT does not apply to VPN traffic in NEM. This mode does not require a VPN configuration for each client. The Cisco ASA 5505 configured for NEM mode supports automatic tunnel initiation. The configuration must store the group name, user name, and password. Automatic tunnel initiation is disabled if secure unit authentication is enabled.



Note

If the Easy VPN hardware client is using NEM and has connections to secondary servers, use the **crypto map set reverse-route** command on each headend device to configure dynamic announcements of the remote network using Reverse Route Injection (RRI).

To specify the mode for Easy VPN Clients, enter the following command in configuration mode:

```
[no] vpnclient mode { client-mode | network-extension-mode }
```

no removes the command from the running configuration.

NEM with Multiple Interfaces

If you have an ASA 5505 security appliance (version 7.2 (3) and higher) configured as an Easy VPN Client in Network Extension Mode with multiple interfaces configured, the security appliance builds a tunnel for locally encrypted traffic only from the interface with the highest security level.

For example, consider the following configuration:

```
vlan1 security level 100 nameif inside
vlan2 security level 0 nameif outside
vlan12 security level 75 nameif work
```

In this scenario, the security appliance builds the tunnel only for vlan1, the interface with the highest security level. If you want to encrypt traffic from vlan12, you must change the security level of interface vlan1 to a lower value than that of vlan 12.

Configuring Automatic Xauth Authentication

The ASA 5505 configured as an Easy VPN hardware client automatically authenticates when it connects to the Easy VPN server if all of the following conditions are true:

- Secure unit authentication is disabled on the server.
- The server requests IKE Extended Authenticate (Xauth) credentials.

Xauth provides the capability of authenticating a user within IKE using TACACS+ or RADIUS. Xauth authenticates a user (in this case, the Easy VPN hardware client) using RADIUS or any of the other supported user authentication protocols.

- The client configuration contains an Xauth username and password.

Enter the following command in global configuration mode to configure the Xauth username and password:

```
vpnclient username xauth_username password xauth_password
```

You can use up to 64 characters for each.

For example, enter the following command to configure the Easy VPN hardware client to use the XAUTH username testuser and password ppurkm1:

```
hostname(config)# vpnclient username testuser password ppurkm1
hostname(config)#
```

To remove the username and password from the running configuration, enter the following command:

```
no vpnclient username
```

For example:

```
hostname(config)# no vpnclient username
hostname(config)#
```

Configuring IPsec Over TCP

By default, the Easy VPN hardware client and server encapsulate IPsec in User Datagram Protocol (UDP) packets. Some environments, such as those with certain firewall rules, or NAT and PAT devices, prohibit UDP. To use standard Encapsulating Security Protocol (ESP, Protocol 50) or Internet Key Exchange (IKE, UDP 500) in such environments, you must configure the client and the server to encapsulate IPsec within TCP packets to enable secure tunneling. If your environment allows UDP, however, configuring IPsec over TCP adds unnecessary overhead.

To configure the Easy VPN hardware client to use TCP-encapsulated IPsec, enter the following command in global configuration mode:

```
vpnclient ipsec-over-tcp [port tcp_port]
```

The Easy VPN hardware client uses port 10000 if the command does not specify a port number.

If you configure an ASA 5505 to use TCP-encapsulated IPsec, enter the following command to let it send large packets over the outside interface:

```
hostname(config)# crypto ipsec df-bit clear-df outside  
hostname(config)#
```

This command clears the Don't Fragment (DF) bit from the encapsulated header. A DF bit is a bit within the IP header that determines whether the packet can be fragmented. This command lets the Easy VPN hardware client send packets that are larger than the MTU size.

The following example shows how to configure the Easy VPN hardware client to use TCP-encapsulated IPsec, using the default port 10000, and to let it send large packets over the outside interface:

```
hostname(config)# vpnclient ipsec-over-tcp  
hostname(config)# crypto ipsec df-bit clear-df outside  
hostname(config)#
```

The next example shows how to configure the Easy VPN hardware client to use TCP-encapsulated IPsec, using the port 10501, and to let it send large packets over the outside interface:

```
hostname(config)# vpnclient ipsec-over-tcp port 10501  
hostname(config)# crypto ipsec df-bit clear-df outside  
hostname(config)#
```

To remove the attribute from the running configuration, use the **no** form of this command, as follows:

```
no vpnclient ipsec-over-tcp
```

For example:

```
hostname(config)# no vpnclient ipsec-over-tcp  
hostname(config)#
```

Comparing Tunneling Options

The tunnel types the Cisco ASA 5505 configured as an Easy VPN hardware client sets up depends on a combination of the following factors:

- Use of the **split-tunnel-network-list** and the **split-tunnel-policy** commands on the headend to permit, restrict, or prohibit split tunneling. (See the [Creating a Network List for Split-Tunneling, page 67-50](#) and “[Setting the Split-Tunneling Policy](#)” section on page 67-50, respectively.)

Split tunneling determines the networks for which the remote-access client encrypts and sends data through the secured VPN tunnel, and determines which traffic it sends to the Internet in the clear.

- Use of the **vpnclient management** command to specify one of the following automatic tunnel initiation options:
 - **tunnel** to limit administrative access to the client side by specific hosts or networks on the corporate side and use IPsec to add a layer of encryption to the management sessions over the HTTPS or SSH encryption that is already present.
 - **clear** to permit administrative access using the HTTPS or SSH encryption used by the management session.
 - **no** to prohibit management access


**Caution**

Cisco does not support the use of the `vpnclient management` command if a NAT device is present between the client and the Internet.

- Use of the **`vpnclient mode`** command to specify one of the following modes of operation:
 - **client** to use Port Address Translation (PAT) mode to isolate the addresses of the inside hosts, relative to the client, from the enterprise network.
 - **network-extension-mode** to make those addresses accessible from the enterprise network.

Figure 71-1 shows the types of tunnels that the Easy VPN client initiates, based on the combination of the commands you enter.

Figure 71-1 Easy VPN Hardware Client Tunneling Options for the Cisco ASA 5505

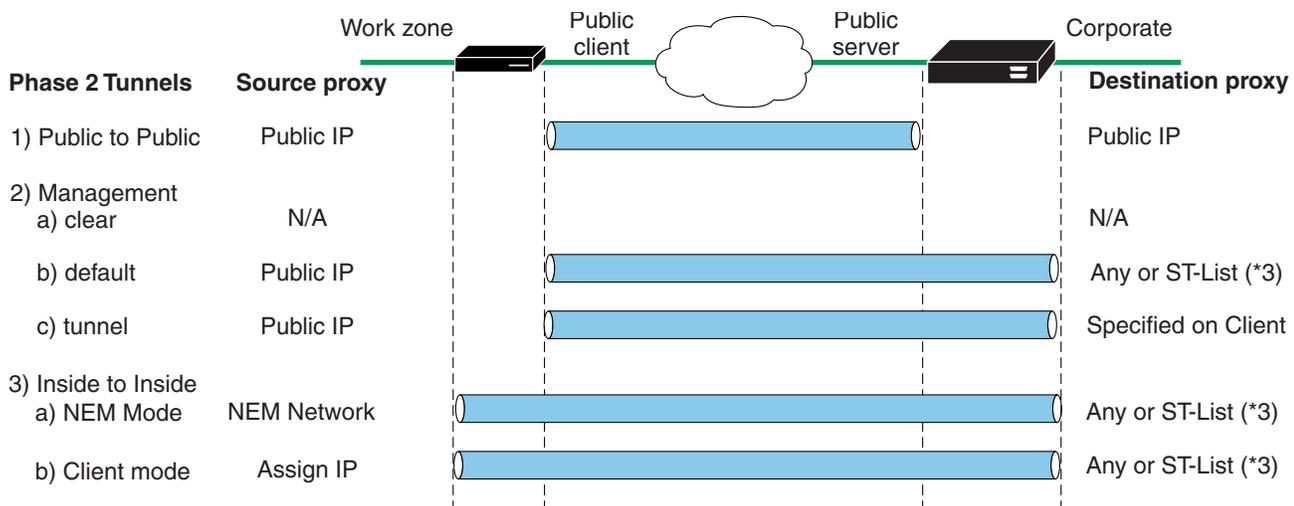

Configuration factors:

1. Certs or Preshare Keys (Phase 1- main mode or aggressive mode)
2. Mode: Client or NEM
3. All-or-nothing or Split-tunneling
4. Management Tunnels
5. IUA to VPN3000 or ASA headend

* Only for ASA or VPN3000 Headends

153780

The term “All-Or-Nothing” refers to the presence or absence of an access list for split tunneling. The access list (“ST-list”) distinguishes networks that require tunneling from those that do not.

Specifying the Tunnel Group or Trustpoint

When configuring the Cisco ASA 5505 as an Easy VPN hardware client, you can specify a tunnel group or trustpoint configured on the Easy VPN server, depending on the Easy VPN server configuration. See the section that names the option you want to use:

- [Specifying the Tunnel Group](#)
- [Specifying the Trustpoint](#)

Specifying the Tunnel Group

Enter the following command in global configuration mode to specify the name of the VPN tunnel group and password for the Easy VPN client connection to the server:

```
vpnclient vpngroup group_name password presared_key
```

group_name is the name of the VPN tunnel group configured on the Easy VPN server. You must configure this tunnel group on the server before establishing a connection.

presared_key is the IKE pre-shared key used for authentication on the Easy VPN server.

For example, enter the following command to identify the VPN tunnel group named TestGroup1 and the IKE preshared key my_key123.

```
hostname(config)# vpnclient vpngroup TestGroup1 password my_key123  
hostname(config)#
```

To remove the attribute from the running configuration, enter the following command:

```
no vpnclient vpngroup
```

If the configuration of the ASA 5505 running as an Easy VPN client does not specify a tunnel group, the client attempts to use an RSA certificate.

For example:

```
hostname(config)# no vpnclient vpngroup  
hostname(config)#
```

Specifying the Trustpoint

A trustpoint represents a CA identity, and possibly a device identity, based on a certificate the CA issues. These parameters specify how the ASA obtains its certificate from the CA and define the authentication policies for user certificates issued by the CA.

First define the trustpoint using the **crypto ca trustpoint** command, as described in [“Configuring Trustpoints” section on page 41-10](#). Then enter the following command in global configuration mode to name the trustpoint identifying the RSA certificate to use for authentication:

```
vpnclient trustpoint trustpoint_name [chain]
```

trustpoint_name names the trustpoint identifying the RSA certificate to use for authentication.

(Optional) **chain** sends the entire certificate chain.

For example, enter the following command to specify the identity certificate named central and send the entire certificate chain:

```
hostname(config)# crypto ca trustpoint central  
hostname(config)# vpnclient trustpoint central chain  
hostname(config)#
```

To remove the attribute from the running configuration, enter the following command:

```
no vpnclient trustpoint
```

For example:

```
hostname(config)# no vpnclient trustpoint
hostname(config)#
```

Configuring Split Tunneling

Split tunneling lets a remote-access IPsec client conditionally direct packets over an IPsec tunnel in encrypted form or to a network interface in clear text form.

The Easy VPN server pushes the split tunneling attributes from the group policy to the Easy VPN Client for use only in the work zone. See [Configuring Split-Tunneling Attributes, page 67-49](#) to configure split tunneling on the Cisco ASA 5505.

Enter the following command in global configuration mode to enable the automatic initiation of IPsec tunnels when NEM and split tunneling are configured:

```
[no] vpnclient nem-st-autoconnect
```

no removes the command from the running configuration.

For example:

```
hostname(config)# vpnclient nem-st-autoconnect
hostname(config)#
```

Configuring Device Pass-Through

Devices such as Cisco IP phones, wireless access points, and printers are incapable of performing authentication. Enter the following command in global configuration mode to exempt such devices from authentication, thereby providing network access to them, if individual user authentication is enabled:

```
[no] vpnclient mac-exempt mac_addr_1 mac_mask_1 [mac_addr_2 mac_mask_2...mac_addr_n
mac_mask_n]
```

no removes the command from the running configuration.

mac_addr is the MAC address, in dotted hexadecimal notation, of the device to bypass individual user authentication.

mac_mask is the network mask for the corresponding MAC address. A MAC mask of ffff.ff00.0000 matches all devices made by the same manufacturer. A MAC mask of ffff.ffff.ffff matches a single device.



Note The mac-exempt list cannot exceed 15.

Only the first six characters of the specific MAC address are required if you use the MAC mask ffff.ff00.0000 to specify all devices by the same manufacturer. For example, Cisco IP phones have the Manufacturer ID 00036b, so the following command exempts any Cisco IP phone, including Cisco IP phones, you might add in the future:

```
hostname(config)# vpnclient mac-exempt 0003.6b00.0000 ffff.ff00.0000
hostname(config)#
```

The next example provides greater security but less flexibility because it exempts one specific Cisco IP phone:

```
hostname(config)# vpnclient mac-exempt 0003.6b54.b213 ffff.ffff.ffff
hostname(config)#
```



Note Make sure you have Individual User Authentication and User Bypass configured on the headend device. For example, if you have the ASA as the headend, configure the following under group policy:

```
hostname(config-group-policy)#user-authentication enable
hostname(config-group-policy)#ip-phone-bypass enable
```

Configuring Remote Management

The Cisco ASA 5505, operating as an Easy VPN hardware client, supports management access using SSH or HTTPS, with or without a second layer of additional encryption. You can configure the Cisco ASA 5505 to require IPsec encryption within the SSH or HTTPS encryption.

Use the **vpnclient management clear** command in global configuration mode to use normal routing to provide management access from the corporate network to the outside interface of the ASA 5505 (no tunneling management packets).



Caution Do not configure a management tunnel on a Cisco ASA 5505 configured as an Easy VPN hardware client if a NAT device is operating between the Easy VPN hardware client and the Internet. In that configuration, use the **vpnclient management clear** command.

Use the **vpnclient management tunnel** command in global configuration mode if you want to automate the creation of IPsec tunnels to provide management access from the corporate network to the outside interface of the ASA 5505. The Easy VPN hardware client and server create the tunnels automatically after the execution of the **vpnclient server** command. The syntax of the **vpnclient management tunnel** command follows:

```
vpnclient management tunnel ip_addr_1 ip_mask_1 [ip_addr_2 ip_mask_2...ip_addr_n ip_mask_n]
```



Note Regardless of your configuration, DHCP requests (including renew messages) should not flow over IPsec tunnels. Even with a **vpnclient management tunnel**, DHCP traffic is prohibited.

For example, enter the following command to automate the creation of an IPsec tunnel to provide management access to the host with IP address 192.168.10.10:

```
hostname(config)# vpnclient management tunnel 192.198.10.10 255.255.255.0
hostname(config)#
```

The **no** form of this command sets up IPsec for management tunnels in accordance with the **split-tunnel-policy** and **split-tunnel-network-list** commands.

```
no vpnclient management
```

For example:

```
hostname(config)# no vpnclient management
hostname(config)#
```

Guidelines for Configuring the Easy VPN Server

The following sections address the Easy VPN hardware client considerations that apply to the Easy VPN server:

- [Group Policy and User Attributes Pushed to the Client](#)
- [Authentication Options](#)

Group Policy and User Attributes Pushed to the Client

Upon tunnel establishment, the Easy VPN server pushes the values of the group policy or user attributes stored in its configuration to the Easy VPN hardware client. Therefore, to change certain attributes pushed to the Easy VPN hardware client, you must modify them on the ASAs configured as the primary and secondary Easy VPN servers. This section identifies the group policy and user attributes pushed to the Easy VPN hardware client.



Note

This section serves only as a reference. For complete instructions on configuring group policies and users, see [Configuring Connection Profiles, Group Policies, and Users, page 67-1](#).

Use [Table 71-2](#) as a guide for determining which commands to enter to modify the group policy or user attributes.

Table 71-2 *Group Policy and User Attributes Pushed to the Cisco ASA 5505 Configured as an EasyVPN Hardware Client*

Command	Description
backup-servers	Sets up backup servers on the client in case the primary server fails to respond.
banner	Sends a banner to the client after establishing a tunnel.
client-access-rule	Applies access rules.
client-firewall	Sets up the firewall parameters on the VPN client.
default-domain	Sends a domain name to the client.
dns-server	Specifies the IP address of the primary and secondary DNS servers, or prohibits the use of DNS servers.
dhcp-network-scope	Specifies the IP subnetwork to which the DHCP server assigns address to users within this group.
group-lock	Specifies a tunnel group to ensure that users connect to that group.
ipsec-udp	Uses UDP encapsulation for the IPsec tunnels.
ipsec-udp-port	Specifies the port number for IPsec over UDP.
nem	Enables or disables network extension mode.
password-storage	Lets the VPN user save a password in the user profile.

Table 71-2 Group Policy and User Attributes Pushed to the Cisco ASA 5505 Configured as an EasyVPN Hardware Client (continued)

Command	Description
pfs	Commands the VPN client to use perfect forward secrecy.
re-xauth	Requires XAUTH authentication when IKE rekeys. Note: Disable re-xauth if secure unit authentication is enabled.
secure-unit-authentication	Enables interactive authentication for VPN hardware clients.
split-dns	Pushes a list of domains for name resolution.
split-tunnel-network-list	Specifies one of the following: <ul style="list-style-type: none"> No access list exists for split tunneling. All traffic travels across the tunnel. Identifies the access list the security appliance uses to distinguish networks that require tunneling and those that do not. Split tunneling lets a remote-access IPsec client conditionally direct packets over an IPsec tunnel in encrypted form, or to a network interface in cleartext form. With split-tunneling enabled, packets not bound for destinations on the other side of the IPsec tunnel do not have to be encrypted, sent across the tunnel, decrypted, and then routed to a final destination.
split-tunnel-policy	Lets a remote-access IPsec client conditionally direct packets over an IPsec tunnel in encrypted form, or to a network interface in cleartext form. Options include the following: <ul style="list-style-type: none"> split-tunnel-policy—Indicates that you are setting rules for tunneling traffic. excludespecified—Defines a list of networks to which traffic goes in the clear. tunnelall—Specifies that no traffic goes in the clear or to any other destination than the Easy VPN server. Remote users reach Internet networks through the corporate network and do not have access to local networks. tunnelspecified—Tunnels all traffic from or to the specified networks. This option enables split tunneling. It lets you create a network list of addresses to tunnel. Data to all other addresses travels in the clear, and is routed by the remote user's internet service provider.
user-authentication	Enables individual user authentication for hardware-based VPN clients.
vpn-access-hours	Restricts VPN access hours.
vpn-filter	Applies a filter to VPN traffic.
vpn-idle-timeout	Specifies the number of minutes a session can be idle before it times out.
vpn-session-timeout	Specifies the maximum number of minutes for VPN connections.
vpn-simultaneous-logins	Specifies the maximum number of simultaneous logins.
vpn-tunnel-protocol	Specifies the permitted tunneling protocols.
wins-server	Specifies the IP address of the primary and secondary WINS servers, or prohibits the use of WINS servers.

**Note**

IPsec NAT-T connections are the only IPsec connection types supported on the home VLAN of a Cisco ASA 5505. IPsec over TCP and native IPsec connections are not supported.

Authentication Options

The ASA 5505 supports the following authentication mechanisms, which it obtains from the group policy stored on the Easy VPN Server. The following list identifies the authentication options supported by the Easy VPN hardware client, however, you must configure them on the Easy VPN server:

- Secure unit authentication (SUA, also called Interactive unit authentication)

Ignores the **vpnclient username** Xauth command (described in “[Configuring Automatic Xauth Authentication](#)” section on page 71-4) and requires the user to authenticate the ASA 5505 by entering a password. By default, SUA is disabled. You can use the **secure-unit-authentication enable** command in group-policy configuration mode to enable SUA. See [Configuring Secure Unit Authentication](#), page 67-53.

- Individual user authentication

Requires users behind the ASA 5505 to authenticate before granting them access to the enterprise VPN network. By default, IUA is disabled. To enable the IUA, use the **user-authentication enable** command in group-policy configuration mode. See [Configuring User Authentication](#), page 67-53.

The security appliance works correctly from behind a NAT device, and if the ASA5505 is configured in NAT mode, the provisioned IP (to which the clients all PAT) is injected into the routing table on the central-site device.

**Caution**

Do not configure IUA on a Cisco ASA 5505 configured as an Easy VPN server if a NAT device is operating between the server and the Easy VPN hardware client.

Use the **user-authentication-idle-timeout** command to set or remove the idle timeout period after which the Easy VPN Server terminates the client’s access. See [Configuring an Idle Timeout](#), page 67-54.

- Authentication by HTTP redirection

The Cisco Easy VPN server intercepts HTTP traffic and redirects the user to a login page if one of the following is true:

- SUA or the username and password are not configured on the Easy VPN hardware client.
- IAU is enabled.

HTTP redirection is automatic and does not require configuration on the Easy VPN Server.

- Preshared keys, digital certificates, tokens and no authentication

The ASA 5505 supports preshared keys, token-based (e.g., SDI one-time passwords), and “no user authentication” for user authentication. **NOTE:** The Cisco Easy VPN server can use the digital certificate as part of user authorization. See [Chapter 64, “Configuring IPsec and ISAKMP”](#) for instructions.



CHAPTER 72

Configuring the PPPoE Client

This section describes how to configure the PPPoE client provided with the ASA. It includes the following topics:

- [PPPoE Client Overview, page 72-1](#)
- [Configuring the PPPoE Client Username and Password, page 72-2](#)
- [Enabling PPPoE, page 72-3](#)
- [Using PPPoE with a Fixed IP Address, page 72-3](#)
- [Monitoring and Debugging the PPPoE Client, page 72-4](#)
- [Using Related Commands, page 72-5](#)

PPPoE Client Overview

PPPoE combines two widely accepted standards, Ethernet and PPP, to provide an authenticated method of assigning IP addresses to client systems. PPPoE clients are typically personal computers connected to an ISP over a remote broadband connection, such as DSL or cable service. ISPs deploy PPPoE because it supports high-speed broadband access using their existing remote access infrastructure and because it is easier for customers to use.

PPPoE provides a standard method of employing the authentication methods of the Point-to-Point Protocol (PPP) over an Ethernet network. When used by ISPs, PPPoE allows authenticated assignment of IP addresses. In this type of implementation, the PPPoE client and server are interconnected by Layer 2 bridging protocols running over a DSL or other broadband connection.

PPPoE is composed of two main phases:

- **Active Discovery Phase**—In this phase, the PPPoE client locates a PPPoE server, called an access concentrator. During this phase, a Session ID is assigned and the PPPoE layer is established.
- **PPP Session Phase**—In this phase, PPP options are negotiated and authentication is performed. Once the link setup is completed, PPPoE functions as a Layer 2 encapsulation method, allowing data to be transferred over the PPP link within PPPoE headers.

At system initialization, the PPPoE client establishes a session with the access concentrator by exchanging a series of packets. Once the session is established, a PPP link is set up, which includes authentication using Password Authentication protocol (PAP). Once the PPP session is established, each packet is encapsulated in the PPPoE and PPP headers.

**Note**

PPPoE is not supported when failover is configured on the ASA, or in multiple context or transparent mode. PPPoE is only supported in single, routed mode, without failover.

Configuring the PPPoE Client Username and Password

To configure the username and password used to authenticate the ASA to the access concentrator, use the **vpdn** command. To use the **vpdn** command, you first define a VPDN group and then create individual users within the group.

To configure a PPPoE username and password, perform the following steps:

Step 1 Define the VPDN group to be used for PPPoE using the following command:

```
hostname(config)# vpdn group group_name request dialout pppoe
```

In this command, replace *group_name* with a descriptive name for the group, such as “pppoe-sbc.”

Step 2 If your ISP requires authentication, select an authentication protocol by entering the following command:

```
hostname(config)# vpdn group group_name ppp authentication {chap | mschap | pap}
```

Replace *group_name* with the same group name you defined in the previous step. Enter the appropriate keyword for the type of authentication used by your ISP:

- CHAP—Challenge Handshake Authentication Protocol
- MS-CHAP—Microsoft Challenge Handshake Authentication Protocol Version 1
- PAP—Password Authentication Protocol

**Note**

When using CHAP or MS-CHAP, the username may be referred to as the remote system name, while the password may be referred to as the CHAP secret.

Step 3 Associate the username assigned by your ISP to the VPDN group by entering the following command:

```
hostname(config)# vpdn group group_name localname username
```

Replace *group_name* with the VPDN group name and *username* with the username assigned by your ISP.

Step 4 Create a username and password pair for the PPPoE connection by entering the following command:

```
hostname(config)# vpdn username username password password [store-local]
```

Replace *username* with the username and *password* with the password assigned by your ISP.

**Note**

The **store-local** option stores the username and password in a special location of NVRAM on the ASA. If an Auto Update Server sends a **clear config** command to the ASA and the connection is then interrupted, the ASA can read the username and password from NVRAM and re-authenticate to the Access Concentrator.

Enabling PPPoE


Note

You must complete the configuration using the **vpdn** command, described in “[Configuring the PPPoE Client Username and Password](#),” before enabling PPPoE.

The PPPoE client functionality is turned off by default. To enable PPPoE, perform the following steps:

- Step 1** Enable the PPPoE client by entering the following command from interface configuration mode:

```
hostname(config-if)# ip address pppoe [setroute]
```

The **setroute** option sets the default routes when the PPPoE client has not yet established a connection. When using the **setroute** option, you cannot have a statically defined route in the configuration.

PPPoE is not supported in conjunction with DHCP because with PPPoE the IP address is assigned by PPP. The **setroute** option causes a default route to be created if no default route exists. The default router is the address of the access concentrator. The maximum transmission unit (MTU) size is automatically set to 1492 bytes, which is the correct value to allow PPPoE transmission within an Ethernet frame.

Reenter this command to reset the DHCP lease and request a new lease.


Note

If PPPoE is enabled on two interfaces (such as a primary and backup interface), and you do not configure dual ISP support (see the “[Monitoring a Static or Default Route](#)” section on [page 22-6](#)), then the ASA can only send traffic through the first interface to acquire an IP address.

For example:

```
hostname(config)# interface gigabitethernet 0/0
hostname(config-if)# ip address pppoe
```

- Step 2** Specify a VPDN group for the PPPoE client to use with the following command from interface configuration mode (optional):

```
hostname(config-if)# pppoe client vpdn group grpname
```

grpname is the name of a VPDN group.


Note

If you have multiple VPDN groups configured, and you do not specify a group with the **pppoe client vpdn group** command, the ASA may randomly choose a VPDN group. To avoid this, specify a VPDN group.

Using PPPoE with a Fixed IP Address

You can also enable PPPoE by manually entering the IP address, using the ip address command from interface configuration mode in the following format:

```
hostname(config-if)# ip address ipaddress mask pppoe
```

This command causes the ASA to use the specified address instead of negotiating with the PPPoE server to assign an address dynamically. Replace *ipaddress* and *mask* with the IP address and subnet mask assigned to your ASA.

For example:

```
hostname(config-if)# ip address outside 201.n.n.n 255.255.255.0 pppoe
```


Note

The **setroute** option is an option of the **ip address** command that you can use to allow the access concentrator to set the default routes when the PPPoE client has not yet established a connection. When using the **setroute** option, you cannot have a statically defined route in the configuration.

Monitoring and Debugging the PPPoE Client

Use the following command to display the current PPPoE client configuration information:

```
hostname# show ip address outside pppoe
```

Use the following command to enable or disable debugging for the PPPoE client:

```
hostname# [no] debug pppoe {event | error | packet}
```

The following summarizes the function of each keyword:

- **event**—Displays protocol event information
- **error**—Displays error messages
- **packet**—Displays packet information

Use the following command to view the status of PPPoE sessions:

```
hostname# show vpdn session [l2tp | pppoe] [id sess_id | packets | state | window]
```

The following example shows a sample of information provided by this command:

```
hostname# show vpdn

Tunnel id 0, 1 active sessions
  time since change 65862 secs
  Remote Internet Address 10.0.0.1
  Local Internet Address 199.99.99.3
  6 packets sent, 6 received, 84 bytes sent, 0 received
Remote Internet Address is 10.0.0.1
  Session state is SESSION_UP
  Time since event change 65865 secs, interface outside
  PPP interface id is 1
  6 packets sent, 6 received, 84 bytes sent, 0 received
hostname#
hostname# show vpdn session
PPPoE Session Information (Total tunnels=1 sessions=1)
Remote Internet Address is 10.0.0.1
  Session state is SESSION_UP
  Time since event change 65887 secs, interface outside
  PPP interface id is 1
  6 packets sent, 6 received, 84 bytes sent, 0 received
hostname#
hostname# show vpdn tunnel
PPPoE Tunnel Information (Total tunnels=1 sessions=1)
Tunnel id 0, 1 active sessions
  time since change 65901 secs
  Remote Internet Address 10.0.0.1
```

```
Local Internet Address 199.99.99.3
 6 packets sent, 6 received, 84 bytes sent, 0 received
hostname#
```

Clearing the Configuration

To remove all **vpdn group** commands from the configuration, use the **clear configure vpdn group** command in global configuration mode:

```
hostname(config)# clear configure vpdn group
```

To remove all **vpdn username** commands, use the **clear configure vpdn username** command:

```
hostname(config)# clear configure vpdn username
```

Entering either of these commands has no affect upon active PPPoE connections.

Using Related Commands

Use the following command to cause the DHCP server to use the WINS and DNS addresses provided by the access concentrator as part of the PPP/IPCP negotiations:

```
hostname(config)# dhcpd auto_config [client_ifx_name]
```

This command is only required if the service provider provides this information as described in RFC 1877. The *client_ifx_name* parameter identifies the interface supported by the DHCP **auto_config** option. At this time, this keyword is not required because the PPPoE client is only supported on a single outside interface.



CHAPTER 73

Configuring LAN-to-LAN IPsec VPNs

A LAN-to-LAN VPN connects networks in different geographic locations.

The ASA supports LAN-to-LAN VPN connections to Cisco or third-party peers when the two peers have IPv4 inside and outside networks (IPv4 addresses on the inside and outside interfaces).

For LAN-to-LAN connections using mixed IPv4 and IPv6 addressing, or all IPv6 addressing, the security appliance supports VPN tunnels if both peers are Cisco ASA 5500 series security appliances, and if both inside networks have matching addressing schemes (both IPv4 or both IPv6).

Specifically, the following topologies are supported when both peers are Cisco ASA 5500 series ASAs:

- The ASAs have IPv4 inside networks and the outside network is IPv6 (IPv4 addresses on the inside interfaces and IPv6 addresses on the outside interfaces).
- The ASAs have IPv6 inside networks and the outside network is IPv4 (IPv6 addresses on the inside interface and IPv4 addresses on the outside interfaces).
- The ASAs have IPv6 inside networks and the outside network is IPv6 (IPv6 addresses on the inside and outside interfaces).



Note

The ASA supports LAN-to-LAN IPsec connections with Cisco peers, and with third-party peers that comply with all relevant standards.

This chapter describes how to build a LAN-to-LAN VPN connection. It includes the following sections:

- [Summary of the Configuration, page 73-1](#)
- [Configuring Interfaces, page 73-2](#)
- [Configuring ISAKMP Policy and Enabling ISAKMP on the Outside Interface, page 73-3](#)
- [Creating an IKEv1 Transform Set, page 73-5](#)
- [Creating an IKEv2 Proposal, page 73-6](#)
- [Configuring an ACL, page 73-7](#)
- [Defining a Tunnel Group, page 73-7](#)
- [Creating a Crypto Map and Applying It To an Interface, page 73-9](#)

Summary of the Configuration

This section provides a summary of the example LAN-to-LAN configuration this chapter describes. Later sections provide step-by-step instructions.

```

hostname(config)# interface ethernet0/0
hostname(config-if)# ip address 10.10.4.100 255.255.0.0
hostname(config-if)# nameif outside
hostname(config-if)# no shutdown
hostname(config)# crypto ikev1 policy 1
hostname(config-ikev1-policy)# authentication pre-share
hostname(config-ikev1-policy)# encryption 3des
hostname(config-ikev1-policy)# hash sha
hostname(config-ikev1-policy)# group 2
hostname(config-ikev1-policy)# lifetime 43200
hostname(config)# crypto ikev1 enable outside
hostname(config)# crypto ikev2 policy 1
hostname(config-ikev2-policy)# encryption 3des
hostname(config-ikev2-policy)# group 2
hostname(config-ikev2-policy)# prf sha
hostname(config-ikev2-policy)# lifetime 43200
hostname(config)# crypto ikev2 enable outside
hostname(config)# crypto ipsec ikev1 transform-set FirstSet esp-3des esp-md5-hmac
hostname(config)# crypto ipsec ikev2 ipsec-proposal secure
hostname(config-ipsec-proposal)# protocol esp encryption 3des aes des
hostname(config-ipsec-proposal)# protocol esp integrity sha-1
hostname(config)# access-list 121_list extended permit ip 192.168.0.0 255.255.0.0
150.150.0.0 255.255.0.0
hostname(config)# tunnel-group 10.10.4.108 type ipsec-l2l
hostname(config)# tunnel-group 10.10.4.108 ipsec-attributes
hostname(config-tunnel-ipsec)# ikev1 pre-shared-key 44kkaol59636jnf
hostname(config)# crypto map abcmap 1 match address 121_list
hostname(config)# crypto map abcmap 1 set peer 10.10.4.108
hostname(config)# crypto map abcmap 1 set ikev1 transform-set FirstSet
hostname(config)# crypto map abcmap 1 set ikev2 ipsec-proposal secure
hostname(config)# crypto map abcmap interface outside
hostname(config)# write memory

```

Configuring Interfaces

An ASA has at least two interfaces, referred to here as outside and inside. Typically, the outside interface is connected to the public Internet, while the inside interface is connected to a private network and is protected from public access.

To begin, configure and enable two interfaces on the ASA. Then, assign a name, IP address and subnet mask. Optionally, configure its security level, speed, and duplex operation on the security appliance.

To configure interfaces, perform the following steps, using the command syntax in the examples:

-
- Step 1** To enter Interface configuration mode, in global configuration mode enter the **interface** command with the default name of the interface to configure. In the following example the interface is ethernet0.

```

hostname(config)# interface ethernet0/0
hostname(config-if)#

```

- Step 2** To set the IP address and subnet mask for the interface, enter the **ip address** command. In the following example the IP address is 10.10.4.100 and the subnet mask is 255.255.0.0.

```

hostname(config-if)# ip address 10.10.4.100 255.255.0.0
hostname(config-if)#

```

- Step 3** To name the interface, enter the **nameif** command, maximum of 48 characters. You cannot change this name after you set it. In the following example the name of the ethernet0 interface is outside.

```

hostname(config-if)# nameif outside

```

```
hostname(config-if)##
```

- Step 4** To enable the interface, enter the **no** version of the **shutdown** command. By default, interfaces are disabled.

```
hostname(config-if)# no shutdown  
hostname(config-if)#
```

- Step 5** To save your changes, enter the **write memory** command.

```
hostname(config-if)# write memory  
hostname(config-if)#
```

- Step 6** To configure a second interface, use the same procedure.
-

Configuring ISAKMP Policy and Enabling ISAKMP on the Outside Interface

ISAKMP is the negotiation protocol that lets two hosts agree on how to build an IPsec security association (SA). It provides a common framework for agreeing on the format of SA attributes. This includes negotiating with the peer about the SA, and modifying or deleting the SA. ISAKMP separates negotiation into two phases: Phase 1 and Phase 2. Phase 1 creates the first tunnel, which protects later ISAKMP negotiation messages. Phase 2 creates the tunnel that protects data.

IKE uses ISAKMP to setup the SA for IPsec to use. IKE creates the cryptographic keys used to authenticate peers.

The ASA supports IKEv1 for connections from the legacy Cisco VPN client, and IKEv2 for the AnyConnect VPN client.

To set the terms of the ISAKMP negotiations, you create an IKE policy, which includes the following:

- The authentication type required of the IKEv1 peer, either RSA signature using certificates or preshared key (PSK).
- An encryption method, to protect the data and ensure privacy.
- A Hashed Message Authentication Codes (HMAC) method to ensure the identity of the sender, and to ensure that the message has not been modified in transit.
- A Diffie-Hellman group to determine the strength of the encryption-key-determination algorithm. The ASA uses this algorithm to derive the encryption and hash keys.
- For IKEv2, a separate pseudo-random function (PRF) used as the algorithm to derive keying material and hashing operations required for the IKEv2 tunnel encryption, etc.
- A limit to the time the ASA uses an encryption key before replacing it.

With IKEv1 policies, for each parameter, you set one value. For IKEv2, you can configure multiple encryption and authentication types, and multiple integrity algorithms for a single policy. The ASA orders the settings from the most secure to the least secure and negotiates with the peer using that order. This allows you to potentially send a single proposal to convey all the allowed transforms instead of the need to send each allowed combination as with IKEv1.

The following sections provide procedures for creating IKEv1 and IKEv2 policies and enabling them on an interface:

- [Configuring ISAKMP Policies for IKEv1 Connections, page 73-4](#)

- [Configuring ISAKMP Policies for IKEv2 Connections, page 73-4](#)

Configuring ISAKMP Policies for IKEv1 Connections

To configure ISAKMP policies for IKEv1 connections, use the **crypto ikev1 policy** command to enter IKEv1 policy configuration mode where you can configure the IKEv1 parameters:

```
crypto ikev1 policy priority
```

Perform the following steps and use the command syntax in the following examples as a guide.

Step 1 Enter IPsec IKEv1 policy configuration mode. For example:

```
hostname(config)# crypto ikev1 policy 1
hostname(config-ikev1-policy)#
```

Step 2 Set the authentication method. The following example configures a preshared key:

```
hostname(config-ikev1-policy)# authentication pre-share
hostname(config-ikev1-policy)#
```

Step 3 Set the encryption method. The following example configures 3DES:

```
hostname(config-ikev1-policy)# encryption 3des
hostname(config-ikev1-policy)#
```

Step 4 Set the HMAC method. The following example configures SHA-1:

```
hostname(config-ikev1-policy)# hash sha
hostname(config-ikev1-policy)#
```

Step 5 Set the Diffie-Hellman group. The following example configures Group 2:

```
hostname(config-ikev1-policy)# group 2
hostname(config-ikev1-policy)#
```

Step 6 Set the encryption key lifetime. The following example configures 43,200 seconds (12 hours):

```
hostname(config-ikev1-policy)# lifetime 43200
hostname(config-ikev1-policy)#
```

Step 7 Enable IKEv1 on the interface named outside:

```
hostname(config)# crypto ikev1 enable outside
hostname(config)#
```

Step 8 To save your changes, enter the **write memory** command:

```
hostname(config)# write memory
hostname(config)#
```

Configuring ISAKMP Policies for IKEv2 Connections

To configure ISAKMP policies for IKEv2 connections, use the **crypto ikev2 policy** command to enter IKEv2 policy configuration mode where you can configure the IKEv2 parameters:

```
crypto ikev2 policy priority
```

Perform the following steps and use the command syntax in the following examples as a guide:

Step 1 Enter IPsec IKEv2 policy configuration mode. For example:

```
hostname(config)# crypto ikev2 policy 1
hostname(config-ikev2-policy)#
```

Step 2 Set the encryption method. The following example configures 3DES:

```
hostname(config-ikev2-policy)# encryption 3des
hostname(config-ikev2-policy)#
```

Step 3 Set the Diffie-Hellman group. The following example configures Group 2:

```
hostname(config-ikev2-policy)# group 2
hostname(config-ikev2-policy)#
```

Step 4 Set the pseudo-random function (PRF) used as the algorithm to derive keying material and hashing operations required for the IKEv2 tunnel encryption. The following example configures SHA-1 (an HMAC variant):

```
hostname(config-ikev2-policy)# prf sha
hostname(config-ikev2-policy)#
```

Step 5 Set the encryption key lifetime. The following example configures 43,200 seconds (12 hours):

```
hostname(config-ikev2-policy)# lifetime 43200
hostname(config-ikev2-policy)#
```

Step 6 Enable IKEv2 on the interface named outside:

```
hostname(config)# crypto ikev2 enable outside
hostname(config)#
```

Step 7 To save your changes, enter the **write memory** command:

```
hostname(config)# write memory
hostname(config)#
```

Creating an IKEv1 Transform Set

An IKEv1 transform set combines an encryption method and an authentication method. During the IPsec security association negotiation with ISAKMP, the peers agree to use a particular transform set to protect a particular data flow. The transform set must be the same for both peers.

A transform set protects the data flows for the access list specified in the associated crypto map entry. You can create transform sets in the ASA configuration, and then specify a maximum of 11 of them in a crypto map or dynamic crypto map entry.

Table 73-1 lists valid encryption and authentication methods.

Table 73-1 Valid Encryption and Authentication Methods

Valid Encryption Methods	Valid Authentication Methods
esp-des	esp-md5-hmac
esp-3des (default)	esp-sha-hmac (default)
esp-aes (128-bit encryption)	
esp-aes-192	

Table 73-1 Valid Encryption and Authentication Methods

Valid Encryption Methods	Valid Authentication Methods
esp-aes-256	
esp-null	

Tunnel Mode is the usual way to implement IPsec between two ASAs that are connected over an untrusted network, such as the public Internet. Tunnel mode is the default and requires no configuration.

To configure a transform set, perform the following steps:

- Step 1** In global configuration mode enter the **crypto ipsec ikev1 transform-set** command. The following example configures a transform set with the name FirstSet, esp-3des encryption, and esp-md5-hmac authentication. The syntax is as follows:

crypto ipsec ikev1 transform-set *transform-set-name encryption-method authentication-method*

```
hostname(config)# crypto ipsec transform-set FirstSet esp-3des esp-md5-hmac
hostname(config)#
```

- Step 2** Save your changes.

```
hostname(config)# write memory
hostname(config)#
```

Creating an IKEv2 Proposal

For IKEv2, you can configure multiple encryption and authentication types, and multiple integrity algorithms for a single policy. The ASA orders the settings from the most secure to the least secure and negotiates with the peer using that order. This allows you to potentially send a single proposal to convey all the allowed transforms instead of the need to send each allowed combination as with IKEv1.

[Table 73-1](#) lists valid IKEv2 encryption and authentication methods.

Table 73-2 Valid IKEv2 Encryption and Integrity Methods

Valid Encryption Methods	Valid Integrity Methods
des	sha (default)
3des (default)	md5
aes	
aes-192	
aes-256	

To configure an IKEv2 proposal, perform the following steps:

- Step 1** In global configuration mode, use the **crypto ipsec ikev2 ipsec-proposal** command to enter ipsec proposal configuration mode where you can specify multiple encryption and integrity types for the proposal. In this example, *secure* is the name of the proposal:

```
hostname(config)# crypto ipsec ikev2 ipsec-proposal secure
```

```
hostname(config-ipsec-proposal)#
```

Step 2 Then enter a protocol and encryption types. ESP is the only supported protocol. For example:

```
hostname(config-ipsec-proposal)# protocol esp encryption 3des aes des
hostname(config-ipsec-proposal)#
```

Step 3 Enter an integrity type. For example:

```
hostname(config-ipsec-proposal)# protocol esp integrity sha-1
hostname(config-ipsec-proposal)#
```

Step 4 Save your changes.

Configuring an ACL

The adaptive security appliance uses access control lists to control network access. By default, the adaptive security appliance denies all traffic. You need to configure an ACL that permits traffic. For more information, see [Chapter 14, “Information About Access Lists.”](#)

The ACLs that you configure for this LAN-to-LAN VPN control connections are based on the source and translated destination IP addresses. Configure ACLs that mirror each other on both sides of the connection.

An ACL for VPN traffic uses the translated address. For more information, see the [“IP Addresses Used for Access Lists When You Use NAT”](#) section on page 14-3.

To configure an ACL, perform the following steps:

Step 1 Enter the **access-list extended** command. The following example configures an ACL named `l2l_list` that lets traffic from IP addresses in the 192.168.0.0 network travel to the 150.150.0.0 network. The syntax is **access-list listname extended permit ip source-ipaddress source-netmask destination-ipaddress destination-netmask**.

```
hostname(config)# access-list l2l_list extended permit ip 192.168.0.0 255.255.0.0
150.150.0.0 255.255.0.0
hostname(config)#
```

Step 2 Configure an ACL for the ASA on the other side of the connection that mirrors the ACL above. In the following example the prompt for the peer is `hostname2`.

```
hostname2(config)# access-list l2l_list extended permit ip 150.150.0.0 255.255.0.0
192.168.0.0 255.255.0.0
hostname2(config)#
```



Note

For more information on configuring an ACL with a `vpn-filter`, see [“Configuring VPN-Specific Attributes”](#) section on page 67-42.

Defining a Tunnel Group

A tunnel group is a set of records that contain tunnel connection policies. You configure a tunnel group to identify AAA servers, specify connection parameters, and define a default group policy. The ASA stores tunnel groups internally.

There are two default tunnel groups in the ASA: DefaultRAGroup, which is the default IPsec remote-access tunnel group, and DefaultL2Lgroup, which is the default IPsec LAN-to-LAN tunnel group. You can modify them but not delete them.

You can also create one or more new tunnel groups to suit your environment. The ASA uses these groups to configure default tunnel parameters for remote access and LAN-to-LAN tunnel groups when there is no specific tunnel group identified during tunnel negotiation.

To establish a basic LAN-to-LAN connection, you must set two attributes for a tunnel group:

- Set the connection type to IPsec LAN-to-LAN.
- Configure an authentication method for the IP, in the following example, preshared key for IKEv1 and IKEv2.

**Note**

To use VPNs, including tunnel groups, the ASA must be in single-routed mode. The commands to configure tunnel-group parameters do not appear in any other mode.

Step 1

To set the connection type to IPsec LAN-to-LAN, enter the **tunnel-group** command. The syntax is **tunnel-group name type type**, where *name* is the name you assign to the tunnel group, and *type* is the type of tunnel. The tunnel types as you enter them in the CLI are:

- **remote-access** (IPsec, SSL, and clientless SSL remote access)
- **ipsec-l2l** (IPsec LAN to LAN)

In the following example the name of the tunnel group is the IP address of the LAN-to-LAN peer, 10.10.4.108.

```
hostname(config)# tunnel-group 10.10.4.108 type ipsec-l2l
hostname(config)#
```

**Note**

LAN-to-LAN tunnel groups that have names that are not an IP address can be used only if the tunnel authentication method is Digital Certificates and/or the peer is configured to use Aggressive Mode.

Step 2

To set the authentication method to preshared key, enter the ipsec-attributes mode and then enter the **pre-shared-key** command to create the preshared key. You need to use the same preshared key on both ASAs for this LAN-to-LAN connection.

The key is an alphanumeric string of 1-128 characters.

In the following example the IKEv1 preshared key is 44kkaol59636jnfx:

```
hostname(config)# tunnel-group 10.10.4.108 ipsec-attributes
hostname(config-tunnel-ipsec)# pre-shared-key 44kkaol59636jnfx
```

In the next example, the IKEv2 preshared key is configured also as 44kkaol59636jnfx:

```
hostname(config-tunnel-ipsec)# ikev2 local-authentication pre-shared-key 44kkaol59636jnfx
```

Step 3

Save your changes.

```
hostname(config)# write memory
hostname(config)#
```

Creating a Crypto Map and Applying It To an Interface

Crypto map entries pull together the various elements of IPsec security associations, including the following:

- Which traffic IPsec should protect, which you define in an access list.
- Where to send IPsec-protected traffic, by identifying the peer.
- What IPsec security applies to this traffic, which a transform set specifies.
- The local address for IPsec traffic, which you identify by applying the crypto map to an interface.

For IPsec to succeed, both peers must have crypto map entries with compatible configurations. For two crypto map entries to be compatible, they must, at a minimum, meet the following criteria:

- The crypto map entries must contain compatible crypto access lists (for example, mirror image access lists). If the responding peer uses dynamic crypto maps, the entries in the ASA crypto access list must be “permitted” by the peer’s crypto access list.
- The crypto map entries each must identify the other peer (unless the responding peer is using a dynamic crypto map).
- The crypto map entries must have at least one transform set in common.

If you create more than one crypto map entry for a given interface, use the sequence number (seq-num) of each entry to rank it: the lower the seq-num, the higher the priority. At the interface that has the crypto map set, the ASA evaluates traffic against the entries of higher priority maps first.

Create multiple crypto map entries for a given interface if either of the following conditions exist:

- Different peers handle different data flows.
- You want to apply different IPsec security to different types of traffic (to the same or separate peers), for example, if you want traffic between one set of subnets to be authenticated, and traffic between another set of subnets to be both authenticated and encrypted. In this case, define the different types of traffic in two separate access lists, and create a separate crypto map entry for each crypto access list.

To create a crypto map and apply it to the outside interface in global configuration mode, enter several of the **crypto map** commands. These commands use a variety of arguments, but the syntax for all of them begin with **crypto map map-name-seq-num**. In the following example the map-name is `abcmap`, the sequence number is 1.

Enter these commands in global configuration mode:

Step 1 To assign an access list to a crypto map entry, enter the **crypto map match address** command.

The syntax is **crypto map map-name seq-num match address aclname**. In the following example the map name is `abcmap`, the sequence number is 1, and the access list name is `121_list`.

```
hostname(config)# crypto map abcmap 1 match address 121_list
hostname(config)#
```

Step 2 To identify the peer (s) for the IPsec connection, enter the **crypto map set peer** command.

The syntax is **crypto map map-name seq-num set peer {ip_address1 | hostname1} [... ip_address10 | hostname10]**. In the following example the peer name is 10.10.4.108.

```
hostname(config)# crypto map abcmap 1 set peer 10.10.4.108
hostname(config)#
```

- Step 3** To specify an IKEv1 transform set for a crypto map entry, enter the **crypto map ikev1 set transform-set** command.

The syntax is **crypto map map-name seq-num ikev1 set transform-set transform-set-name**.
In the following example the transform set name is *FirstSet*.

```
hostname(config)# crypto map abcmap 1 set transform-set FirstSet
hostname(config)#
```

- Step 4** To specify an IKEv2 proposal for a crypto map entry, enter the **crypto map ikev2 set ipsec-proposal** command:

The syntax is **crypto map map-name seq-num set ikev2 ipsec-proposal proposal-name**.
In the following example the proposal name is *secure*.

```
hostname(config)# crypto map abcmap 1 set ikev2 ipsec-proposal secure
hostname(config)#
```

Applying Crypto Maps to Interfaces

You must apply a crypto map set to each interface through which IPsec traffic travels. The ASA supports IPsec on all interfaces. Applying the crypto map set to an interface instructs the ASA to evaluate all interface traffic against the crypto map set and to use the specified policy during connection or security association negotiations.

Binding a crypto map to an interface also initializes the runtime data structures, such as the security association database and the security policy database. When you later modify a crypto map in any way, the ASA automatically applies the changes to the running configuration. It drops any existing connections and reestablishes them after applying the new crypto map.

- Step 1** To apply the configured crypto map to the outside interface, enter the **crypto map interface** command. The syntax is **crypto map map-name interface interface-name**.

```
hostname(config)# crypto map abcmap interface outside
hostname(config)#
```

- Step 2** Save your changes.

```
hostname(config)# write memory
hostname(config)#
```



CHAPTER 74

Configuring Clientless SSL VPN

This chapter describes how to configure clientless SSL VPN and includes the following sections:

- [Information About Clientless SSL VPN, page 74-1](#)
- [Licensing Requirements, page 74-2](#)
- [Prerequisites for Clientless SSL VPN, page 74-4](#)
- [Guidelines and Limitations, page 74-4](#)
- [Configuring Application Helper, page 74-11](#)
- [Using Single Sign-on with Clientless SSL VPN, page 74-13](#)
- [Encoding, page 74-29](#)
- [Configuring Connection Profile Attributes for Clientless SSL VPN, page 74-32](#)
- [Understanding How KCD Works, page 74-42](#)
- [Configuring Application Access, page 74-48](#)
- [Configuring Port Forwarding, page 74-64](#)
- [Application Access User Notes, page 74-71](#)
- [Configuring File Access, page 74-74](#)
- [Ensuring Clock Accuracy for SharePoint Access, page 74-78](#)
- [Using Clientless SSL VPN with PDAs, page 74-78](#)
- [Using E-Mail over Clientless SSL VPN, page 74-79](#)
- [Configuring Portal Access Rules, page 74-80](#)
- [Clientless SSL VPN End User Setup, page 74-87](#)
- [Configuring Browser Access to Client-Server Plug-ins, page 74-102](#)
- [Changing a Group Policy or User Attributes to Use the Customization Object, page 74-120](#)
-

Information About Clientless SSL VPN



Note

When the ASA is configured for clientless SSL VPN, you cannot enable security contexts (also called firewall multimode) or Active/Active stateful failover. Therefore, these features become unavailable.

Clientless SSL VPN lets users establish a secure, remote-access VPN tunnel to an ASA using a web browser. Users do not need a software or hardware client.

Clientless SSL VPN provides secure and easy access to a broad range of web resources and both web-enabled and legacy applications from almost any computer that can reach HTTP Internet sites. They include:

- Internal websites
- Web-enabled applications
- NT/Active Directory file shares
- E-mail proxies, including POP3S, IMAP4S, and SMTPS
- Microsoft Outlook Web Access Exchange Server 2000, 2003, and 2007
- Microsoft Web App to Exchange Server 2010 in 8.4(2) and later.
- Application Access (that is, smart tunnel or port forwarding access to other TCP-based applications)

Clientless SSL VPN uses Secure Sockets Layer Protocol and its successor, Transport Layer Security (SSL/TLS1) to provide the secure connection between remote users and specific, supported internal resources that you configure at a central site. The ASA recognizes connections that need to be proxied, and the HTTP server interacts with the authentication subsystem to authenticate users.

The network administrator provides access to resources by users of clientless SSL VPN sessions on a group basis. Users have no direct access to resources on the internal network.

Licensing Requirements

The following table shows the licensing requirements for this feature:



Note

This feature is not available on No Payload Encryption models.

Model	License Requirement ^{1,2}
ASA 5505	AnyConnect Premium license: <ul style="list-style-type: none"> • Base License or Security Plus license: 2 sessions. • <i>Optional permanent or time-based licenses: 10 or 25 sessions.</i> • <i>Shared licenses are not supported.</i>³
ASA 5510	AnyConnect Premium license: <ul style="list-style-type: none"> • Base and Security Plus License: 2 sessions. • <i>Optional permanent or time-based licenses: 10, 25, 50, 100, or 250 sessions.</i> • <i>Optional Shared licenses³: Participant or Server. For the Server license, 500-50,000 in increments of 500 and 50,000-545,000 in increments of 1000.</i>
ASA 5520	AnyConnect Premium license: <ul style="list-style-type: none"> • Base License: 2 sessions. • <i>Optional permanent or time-based licenses: 10, 25, 50, 100, 250, 500, or 750 sessions.</i> • <i>Optional Shared licenses³: Participant or Server. For the Server license, 500-50,000 in increments of 500 and 50,000-545,000 in increments of 1000.</i>

Model	License Requirement ^{1,2}
ASA 5540	AnyConnect Premium license: <ul style="list-style-type: none"> • Base License: 2 sessions. • <i>Optional permanent or time-based licenses: 10, 25, 50, 100, 250, 500, 750, 1000, or 2500 sessions.</i> • <i>Optional Shared licenses³: Participant or Server. For the Server license, 500-50,000 in increments of 500 and 50,000-545,000 in increments of 1000.</i>
ASA 5550	AnyConnect Premium license: <ul style="list-style-type: none"> • Base License: 2 sessions. • <i>Optional permanent or time-based licenses: 10, 25, 50, 100, 250, 500, 750, 1000, 2500, or 5000 sessions.</i> • <i>Optional Shared licenses³: Participant or Server. For the Server license, 500-50,000 in increments of 500 and 50,000-545,000 in increments of 1000.</i>
ASA 5580	AnyConnect Premium license: <ul style="list-style-type: none"> • Base License: 2 sessions. • <i>Optional permanent or time-based licenses: 10, 25, 50, 100, 250, 500, 750, 1000, 2500, 5000, or 10000 sessions.</i> • <i>Optional Shared licenses³: Participant or Server. For the Server license, 500-50,000 in increments of 500 and 50,000-545,000 in increments of 1000.</i>
ASA 5512-X	AnyConnect Premium license: <ul style="list-style-type: none"> • Base License: 2 sessions. • <i>Optional permanent or time-based licenses: 10, 25, 50, 100, or 250 sessions.</i> • <i>Optional Shared licenses³: Participant or Server. For the Server license, 500-50,000 in increments of 500 and 50,000-545,000 in increments of 1000.</i>
ASA 5515-X	AnyConnect Premium license: <ul style="list-style-type: none"> • Base License: 2 sessions. • <i>Optional permanent or time-based licenses: 10, 25, 50, 100, or 250 sessions.</i> • <i>Optional Shared licenses³: Participant or Server. For the Server license, 500-50,000 in increments of 500 and 50,000-545,000 in increments of 1000.</i>
ASA 5525-X	AnyConnect Premium license: <ul style="list-style-type: none"> • Base License: 2 sessions. • <i>Optional permanent or time-based licenses: 10, 25, 50, 100, 250, 500, or 750 sessions.</i> • <i>Optional Shared licenses³: Participant or Server. For the Server license, 500-50,000 in increments of 500 and 50,000-545,000 in increments of 1000.</i>
ASA 5545-X	AnyConnect Premium license: <ul style="list-style-type: none"> • Base License: 2 sessions. • <i>Optional permanent or time-based licenses: 10, 25, 50, 100, 250, 500, 750, 1000, or 2500 sessions.</i> • <i>Optional Shared licenses³: Participant or Server. For the Server license, 500-50,000 in increments of 500 and 50,000-545,000 in increments of 1000.</i>

Model	License Requirement ^{1,2}
ASA 5555-X	AnyConnect Premium license: <ul style="list-style-type: none"> • Base License: 2 sessions. • <i>Optional permanent or time-based licenses: 10, 25, 50, 100, 250, 500, 750, 1000, 2500, or 5000 sessions.</i> • <i>Optional Shared licenses³: Participant or Server. For the Server license, 500-50,000 in increments of 500 and 50,000-545,000 in increments of 1000.</i>
ASA 5585-X with SSP-10	AnyConnect Premium license: <ul style="list-style-type: none"> • Base License: 2 sessions. • <i>Optional permanent or time-based licenses: 10, 25, 50, 100, 250, 500, 750, 1000, 2500, or 5000 sessions.</i> • <i>Optional Shared licenses³: Participant or Server. For the Server license, 500-50,000 in increments of 500 and 50,000-545,000 in increments of 1000.</i>
ASA 5585-X with SSP-20, -40, and -60	AnyConnect Premium license: <ul style="list-style-type: none"> • Base License: 2 sessions. • <i>Optional permanent or time-based licenses: 10, 25, 50, 100, 250, 500, 750, 1000, 2500, 5000, or 10000 sessions.</i> • <i>Optional Shared licenses³: Participant or Server. For the Server license, 500-50,000 in increments of 500 and 50,000-545,000 in increments of 1000.</i>

1. If you start a clientless SSL VPN session and then start an AnyConnect client session from the portal, 1 session is used in total. However, if you start the AnyConnect client first (from a standalone client, for example) and then log into the clientless SSL VPN portal, then 2 sessions are used.
2. The maximum combined VPN sessions of *all* types cannot exceed the maximum sessions shown in this table.
3. A shared license lets the ASA act as a shared license server for multiple client ASAs. The shared license pool is large, but the maximum number of sessions used by each individual ASA cannot exceed the maximum number listed for permanent licenses.

Prerequisites for Clientless SSL VPN

See the [Supported VPN Platforms, Cisco ASA 5500 Series](#) for the platforms and browsers supported by ASA Release 8.4.

Guidelines and Limitations

This section includes the guidelines and limitations of this feature.

ActiveX pages require that you enable ActiveX Relay or enter **activex-relay** on the associated group policy. If you do so or assign a smart tunnel list to the policy, and the browser proxy exception list on the endpoint specifies a proxy, the user must add a “shutdown.webvpn.relay.” entry to that list.

The ASA supports clientless access to Lotus iNotes 8.5.

The ASA does not support clientless access to Windows Shares (CIFS) Web Folders from Windows 7, Vista, Internet Explorer 8, Mac OS, and Linux. Windows XP SP2 requires a [Microsoft hotfix](#) to support Web Folders.

The ASA does not support the following features for clientless SSL VPN connections:

- DSA certificates. The ASA does support RSA certificates.
- Remote HTTPS certificates.
- Requirements of some domain-based security products. Because the ASA encodes the URL, requests actually originate from the ASA, which in some cases do not satisfy the requirements of domain-based security products.
- Inspection features under the Modular Policy Framework, inspecting configuration control.
- Functionality the filter configuration commands provide, including the **vpn-filter** command.
- VPN connections from hosts with IPv6 addresses. Hosts must use IPv4 addresses to establish clientless SSL VPN or AnyConnect sessions. However, beginning with ASA 8.0(2), users can use these sessions to access internal IPv6-enabled resources.
- NAT, reducing the need for globally unique IP addresses.
- PAT, permitting multiple outbound sessions appear to originate from a single IP address.
- QoS, rate limiting using the **police** command and **priority-queue** command.
- Connection limits, checking either via the static or the Modular Policy Framework **set connection** command.
- The **established** command, allowing return connections from a lower security host to a higher security host if there is already an established connection from the higher level host to the lower level host.
- Single sign-on application integration (such as SiteMinder) because smart tunnel effectively creates a tunnel between the client and the server, and these applications interfere with ASA working as expected.

Observing Clientless SSL VPN Security Precautions

Clientless SSL VPN connections on the ASA differ from remote access IPsec connections, particularly with respect to how they interact with SSL-enabled servers, and precautions to follow to reduce security risks.

In a clientless SSL VPN connection, the ASA acts as a proxy between the end user web browser and target web servers. When a user connects to an SSL-enabled web server, the ASA establishes a secure connection and validates the server SSL certificate. The browser never receives the presented certificate, so it cannot examine and validate the certificate.

The current implementation of clientless SSL VPN on the ASA does not permit communication with sites that present expired certificates. Nor does the ASA perform trusted CA certificate validation to those SSL-enabled sites. Therefore, users do not benefit from certificate validation of pages delivered from an SSL-enabled web server before they use a web-enabled service.


Restrictions

By default, the ASA permits all portal traffic to all web resources (e.g., HTTPS, CIFS, RDP, and plug-ins). The ASA clientless service rewrites each URL to one that is meaningful only to itself; the user cannot use the rewritten URL displayed on the page accessed to confirm that they are on the site they requested. To avoid placing users at risk, assign a web ACL to the policies configured for clientless access – group-policies, dynamic access policies, or both – to control traffic flows from the portal. For example, without such an ACL, users could receive an authentication request from an outside fraudulent banking or commerce site. Also, we recommend disabling URL Entry on these policies to prevent user confusion over what is accessible.

Figure 74-1 Example URL Typed by User



Figure 74-2 Same URL Rewritten by Security Appliance and displayed on the Browser Window

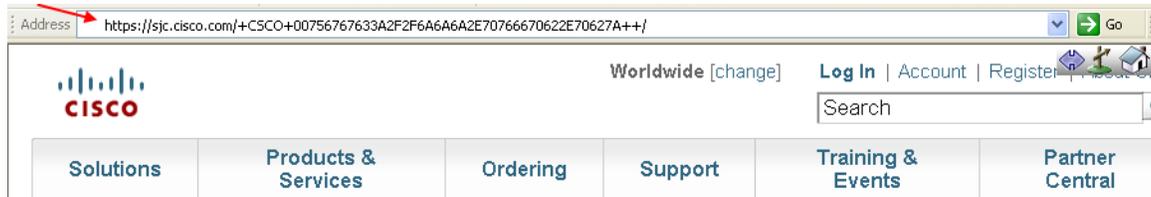

Disabling URL on the Portal Page

The portal page is the page that opens when the user establishes a browser-based connection. Follow these steps to disable the URL entry on the portal page.

Prerequisites

- Configure a group policy for all users who need clientless SSL VPN access, and enable clientless SSL VPN only for that group policy.
- Create a web ACL to either permit access only to specific targets within the private network, permit access only to the private network, deny Internet access, or permit access only to reputable sites.
- Assign the web ACL to any policies (group policies, dynamic access policies, or both) that you have configured for clientless access.

Detailed Steps

	Command	Purpose
Step 1	webvpn	Switches to group policy webvpn configuration mode.
Step 2	url-entry disable	Disables URL entry.

Using SSL to Access the Central Site

Clientless SSL VPN uses SSL and its successor, TLS1 to provide a secure connection between remote users and specific, supported internal resources at a central site. This section includes the following topics:

- [Using HTTPS for Clientless SSL VPN Sessions, page 74-7](#)

- [Configuring Clientless SSL VPN and ASDM Ports, page 74-7](#)
- [Configuring Support for Proxy Servers, page 74-8](#)
- [Configuring SSL/TLS Encryption Protocols, page 74-10](#)

Using HTTPS for Clientless SSL VPN Sessions

To permit clientless SSL VPN sessions on an interface, perform the following steps:

Prerequisites

In a web browser, users enter the ASA IP address in the format `https:// address` where *address* is the IP address or DNS hostname of the ASA interface.

Restrictions

- You must enable clientless SSL VPN sessions on the ASA interface that users connect to.
- You must use HTTPS to access the ASA or load balancing cluster.

	Command	Purpose
Step 1	<code>webvpn</code>	Switches to webvpn configuration mode.
Step 2	<p><code>enable</code> (with the name of interface you want to use for clientless SSL VPN sessions)</p> <p>Example: <code>hostname(config)# webvpn</code> <code>hostname(config-webvpn)# enable outside</code></p>	Enables clientless SSL VPN sessions on the interface called outside.

Configuring Clientless SSL VPN and ASDM Ports

Beginning with Version 8.0(2), the ASA supports both clientless SSL VPN sessions and ASDM administrative sessions simultaneously on Port 443 of the outside interface. You do, however, have the option to configure these applications on different interfaces.

	Command	Purpose
Step 1	<code>webvpn</code>	Switches to webvpn configuration mode.
Step 2	<code>port port_number</code> Example: <pre>hostname(config)# http server enable hostname(config)# http 192.168.3.0 255.255.255.0 outside hostname(config)# webvpn hostname(config-webvpn)# port 444 hostname(config-webvpn)# enable outside</pre>	Changes the SSL listening port for clientless SSL VPN. Enables clientless SSL VPN on port 444 of the outside interface. With this configuration, remote users initiating clientless SSL VPN sessions enter <code>https://<outside_ip>:444</code> in the browser.
Step 3	<code>port</code> argument of <code>http server enable</code> Example: <pre>hostname(config)# http server enable 444 hostname(config)# http 192.168.3.0 255.255.255.0 outside hostname(config)# webvpn hostname(config-webvpn)# enable outside</pre>	(Privileged exec mode) Changes the listening port for ASDM. Specifies that HTTPS ASDM sessions use port 444 on the outside interface. Clientless SSL VPN is also enabled on the outside interface and uses the default port (443). With this configuration, remote users initiate ASDM sessions by entering <code>https://<outside_ip>:444</code>

Configuring Support for Proxy Servers

The ASA can terminate HTTPS connections and forward HTTP and HTTPS requests to proxy servers. These servers act as intermediaries between users and the Internet. Requiring Internet access via a server that the organization controls provides another opportunity for filtering to assure secure Internet access and administrative control.

When configuring support for HTTP and HTTPS proxy services, you can assign preset credentials to send with each request for basic authentication. You can also specify URLs to exclude from HTTP and HTTPS requests.

Restrictions

You can specify a proxy autoconfiguration (PAC) file to download from an HTTP proxy server, however, you may not use proxy authentication when specifying the PAC file.

	Command	Purpose
Step 1	<code>webvpn</code>	Switches to webvpn configuration mode.
Step 2	<code>http-proxy</code> and <code>https-proxy</code>	Configures the ASA to use an external proxy server to handle HTTP and HTTPS requests. Note Proxy NTLM authentication is not supported in <code>http-proxy</code> . Only proxy without authentication and basic authentication are supported.
Step 3	<code>http-proxy host [port] [exclude url] [username username {password password}]</code>	

	Command	Purpose
Step 4	<code>https-proxy host [port] [exclude url] [username username {password password}]</code>	
Step 5	<code>http-proxy pac url</code>	
Step 6	(Optional) <code>exclude</code>	Excludes URLs from those that can be sent to the proxy server.
Step 7	<code>host</code>	Provides the hostname or IP address for the external proxy server.
Step 8	<code>pac</code>	Proxy autoconfiguration file downloaded to the browser that uses a JavaScript function to identify a proxy for each URL.
Step 9	(Optional, and only available if you specify a username) <code>password</code>	Accompanies each proxy request with a password to provide basic, proxy authentication.
Step 10	<code>password</code>	Sent to the proxy server with each HTTP or HTTPS request.
Step 11	(Optional) <code>port</code>	Provides the port number used by the proxy server. The default HTTP port is 80. The default HTTPS port is 443. The ASA uses each of these ports if you do not specify an alternative value. The range is 1-65535.
Step 12	<code>url</code>	If you entered <code>exclude</code> , enter a URL or a comma-delimited list of several URLs to exclude from those that can be sent to the proxy server. The string does not have a character limit, but the entire command cannot exceed 512 characters. You can specify literal URLs or use the following wildcards: <ul style="list-style-type: none"> – * to match any string, including slashes (/) and periods (.). You must accompany this wildcard with an alphanumeric string. – ? to match any single character, including slashes and periods. – [x-y] to match any single character in the range of x and y, where x represents one character and y represents another character in the ANSI character set. – [!x-y] to match any single character that is not in the range.
Step 13	If you entered <code>http-proxy pac</code> , follow it with <code>http://</code> and type the URL of the proxy autoconfiguration file. (If you omit the <code>http://</code> portion, the CLI ignores the command.)	
Step 14	(Optional) <code>username</code>	Accompanies each HTTP proxy request with a username for basic, proxy authentication. Only the <code>https-proxy host</code> command supports this keyword.
Step 15	<code>username</code>	Sent to the proxy server with each HTTP or HTTPS request.

	Command	Purpose
Step 16	Example: <pre>hostname(config-webvpn)# http-proxy 209.165.201.1 user jsmith password mysecretdonttell hostname(config-webvpn)</pre>	Shows how to configure use of an HTTP proxy server with an IP address of 209.165.201.1 using the default port, sending a username and password with each HTTP request.
Step 17	Example: <pre>hostname(config-webvpn)# http-proxy 209.165.201.1 exclude www.example.com username jsmith password mysecretdonttell hostname(config-webvpn)</pre>	Shows the same command, except when the ASA receives the specific URL www.example.com in an HTTP request, it resolves the request instead of passing it on to the proxy server.
Step 18	Example: <pre>hostname(config-webvpn)# http-proxy pac http://www.example.com/pac hostname(config-webvpn)</pre>	Shows how to specify a URL to serve a proxy autoconfiguration file to the browser.

The ASA clientless SSL VPN configuration supports only one **http-proxy** and one **http-proxy** command each. For example, if one instance of the **http-proxy** command is already present in the running configuration and you enter another, the CLI overwrites the previous instance.

**Note**

Proxy NTLM authentication is not supported in **http-proxy**. Only proxy without authentication and basic authentication are supported.

Configuring SSL/TLS Encryption Protocols

Prerequisites

TCP Port Forwarding requires Sun Microsystems Java Runtime Environment (JRE) version 1.4.x and 1.5.x. Port forwarding does not work when a user of clientless SSL VPN connects with some SSL versions, as follows:

- Negotiate SSLv3—Java downloads
- Negotiate SSLv3/TLSv1—Java downloads
- Negotiate TLSv1—Java does NOT download
- TLSv1 Only—Java does NOT download
- SSLv3Only—Java does NOT download

Restrictions

When you set SSL/TLS encryption protocols, be aware of the following:

- Make sure that the ASA and the browser you use allow the same SSL/TLS encryption protocols.
- If you configure e-mail proxy, do not set the ASA SSL version to TLSv1 Only. Microsoft Outlook and Microsoft Outlook Express do not support TLS.

Prerequisites

Browser cookies are required for the proper operation of clientless SSL VPN.

- (Optional) Click **Find** to search for a web ACL. Start typing in the field, and the tool searches the beginning characters of every field for a match. You can use wild cards to expand your search. For example, typing *sal* in the Find field matches a web ACL named sales but not a customization object named wholesalers. If you type **sal* in the Find field, the search finds the first instance of either sales or wholesalers in the table.

Use the up and down arrows to skip up or down to the next string match. Check the **Match Case** checkbox to make your search case sensitive.

- (Optional) Highlight a web ACL and click **Assign** to assign the selected web ACL to one or more VPN group policies, dynamic access policies, or user policies.
-

Authenticating with Digital Certificates

SSL uses digital certificates for authentication. The ASA creates a self-signed SSL server certificate when it boots; or you can install in the ASA an SSL certificate that has been issued in a PKI context. For HTTPS, this certificate must then be installed on the client. You need to install the certificate from a given ASA only once.

Restrictions

- Application Access does not work for users of clientless SSL VPN who authenticate using digital certificates. JRE does not have the ability to access the web browser keystore. Therefore JAVA cannot use a certificate that the browser uses to authenticate a user, so it cannot start.
- E-mail clients such as MS Outlook, MS Outlook Express, and Eudora lack the ability to access the certificate store.

For more information on authentication and authorization using digital certificates, see the [“Using Certificates and User Login Credentials” section on page 35-9](#).

Enabling Cookies on Browsers for Clientless SSL VPN

When cookies are disabled on the web browser, the links from the web portal home page open a new window prompting the user to log in once more.

Configuring Application Helper

Clientless SSL VPN includes an Application Profile Customization Framework option that lets the ASA handle non-standard applications and web resources so they display correctly over a clientless SSL VPN connection. An APCF profile contains a script that specifies when (pre, post), where (header, body, request, response), and what data to transform for a particular application. The script is in XML and uses sed (stream editor) syntax to transform strings/text.

You can configure multiple APCF profiles on an ASA to run in parallel. Within an APCF profile script, multiple APCF rules can apply. In this case, the ASA processes the oldest rule first, based on configuration history, the next oldest rule next, and so forth.

Managing Passwords

Optionally, you can configure the ASA to warn end users when their passwords are about to expire.

The ASA supports password management for the RADIUS and LDAP protocols. It supports the “password-expire-in-days” option for LDAP only.

You can configure password management for IPsec remote access and SSL VPN tunnel-groups.

When you configure password management, the ASA notifies the remote user at login that the user’s current password is about to expire or has expired. The ASA then offers the user the opportunity to change the password. If the current password has not yet expired, the user can still log in using that password.

This command is valid for AAA servers that support such notification.

The ASA, releases 7.1 and later, generally supports password management for the following connection types when authenticating with LDAP or with any RADIUS configuration that supports MS-CHAPv2:

- AnyConnect VPN Client
- IPsec VPN Client
- Clientless SSL VPN

The RADIUS server (for example, Cisco ACS) could proxy the authentication request to another authentication server. However, from the ASA perspective, it is talking only to a RADIUS server.

Prerequisites

- Native LDAP requires an SSL connection. You must enable LDAP over SSL before attempting to do password management for LDAP. By default, LDAP uses port 636.
- If you are using an LDAP directory server for authentication, password management is supported with the Sun Microsystems JAVA System Directory Server (formerly named the Sun ONE Directory Server) and the Microsoft Active Directory.

Sun—The DN configured on the ASA to access a Sun directory server must be able to access the default password policy on that server. We recommend using the directory administrator, or a user with directory administrator privileges, as the DN. Alternatively, you can place an ACI on the default password policy.

Microsoft—You must configure LDAP over SSL to enable password management with Microsoft Active Directory.

Restrictions

- Some RADIUS servers that support MSCHAP currently do not support MSCHAPv2. This command requires MSCHAPv2 so check with your vendor.
- Password management is *not* supported for any of these connection types for Kerberos/Active Directory (Windows password) or NT 4.0 Domain.
- For LDAP, the method to change a password is proprietary for the different LDAP servers on the market. Currently, the ASA implements the proprietary password management logic only for Microsoft Active Directory and Sun LDAP servers.
- The ASA ignores this command if RADIUS or LDAP authentication has not been configured.

Detailed Steps


Note

This command does not change the number of days before the password expires, but rather, the number of days ahead of expiration that the ASA starts warning the user that the password is about to expire.

	Command	Purpose
Step 1	<code>tunnel-group general-attributes</code>	Switches to general-attributes mode.
Step 2	<code>password-management</code>	Notifies remote users that their password is about to expire.
Step 3	<code>password-expire-in-days</code>	Specifies when the password expires.
Step 4	Enter number of days Example: <code>hostname(config)# tunnel-group testgroup type webvpn</code> <code>hostname(config)# tunnel-group testgroup</code> <code>general-attributes</code> <code>hostname(config-general)# password-management</code> <code>password-expire-in-days 90</code>	If you specify the keyword, you must also specify the number of days. If you set the number of days to 0, this command is disabled. Note The ASA does not notify the user of the pending expiration, but the user can change the password after it expires. Sets the days before password expiration to begin warning the user of the pending expiration to 90 for the connection profile “testgroup.”

Using Single Sign-on with Clientless SSL VPN

Single sign-on support lets users of clientless SSL VPN enter a username and password only once to access multiple protected services and web servers. In general, the SSO mechanism either starts as part of the AAA process or just after successful user authentication to a AAA server. The clientless SSL VPN server running on the ASA acts as a proxy for the user to the authenticating server. When a user logs in, the clientless SSL VPN server sends an SSO authentication request, including username and password, to the authenticating server using HTTPS. If the server approves the authentication request, it returns an SSO authentication cookie to the clientless SSL VPN server. The ASA keeps this cookie on behalf of the user and uses it to authenticate the user to secure websites within the domain protected by the SSO server.

This section describes the three SSO authentication methods supported by clientless SSL VPN: HTTP Basic and NTLMv1 (NT LAN Manager) authentication, the Computer Associates eTrust SiteMinder SSO server (formerly Netegrity SiteMinder), and Version 1.1 of Security Assertion Markup Language (SAML), the POST-type SSO server authentication.

This section includes:

- [Configuring SSO with HTTP Basic or NTLM Authentication, page 74-14](#)
- [Configuring SSO Authentication Using SiteMinder, page 74-15](#)
- [Configuring SSO Authentication Using SAML Browser Post Profile, page 74-17](#)
- [Configuring SSO with the HTTP Form Protocol, page 74-20](#)

Configuring SSO with HTTP Basic or NTLM Authentication

This section describes single sign-on with HTTP Basic or NTLM authentication. You can configure the ASA to implement SSO using either or both of these methods. The **auto-signon** command configures the ASA to automatically pass clientless SSL VPN user login credentials (username and password) on to internal servers. You can enter multiple **auto-signon** commands. The ASA processes them according to the input order (early commands take precedence). You specify the servers to receive the login credentials using either IP address and IP mask, or URI mask.

Use the **auto-signon** command in any of three modes: webvpn configuration, webvpn group-policy mode, or webvpn username mode. Username supersedes group, and group supersedes global. The mode you choose depends upon scope of authentication you want:

Mode	Scope
webvpn configuration	All clientless SSL VPN users globally.
webvpn group-policy configuration	A subset of clientless SSL VPN users defined by a group policy.
webvpn username configuration	An individual user of clientless SSL VPN.

Detailed Steps

The following example commands present various possible combinations of modes and arguments.

	Command	Purpose
Step 1	Example: <pre>hostname(config)# webvpn hostname(config-webvpn)# auto-signon allow ip 10.1.1.1 255.255.255.0 auth-type ntlm</pre>	Configures auto-signon for all users of clientless SSL VPN to servers with IP addresses ranging from 10.1.1.0 to 10.1.1.255 using NTLM authentication.
Step 2	Example: <pre>hostname(config)# webvpn hostname(config-webvpn)# auto-signon allow uri https://*.example.com/* auth-type basic</pre>	Configures auto-signon for all users of clientless SSL VPN, using basic HTTP authentication, to servers defined by the URI mask https://*.example.com/.
Step 3	Example: <pre>hostname(config)# group-policy ExamplePolicy attributes hostname(config-group-policy)# webvpn hostname(config-group-policy-webvpn)# auto-signon allow uri https://*.example.com/* auth-type all</pre>	Configures auto-signon for clientless SSL VPN sessions associated with the ExamplePolicy group policy, using either basic or NTLM authentication, to servers defined by the URI mask.
Step 4	Example: <pre>hostname(config)# username Anyuser attributes hostname(config-username)# webvpn hostname(config-username-webvpn)# auto-signon allow ip 10.1.1.1 255.255.255.0 auth-type basic</pre>	Configures auto-signon for a user named Anyuser to servers with IP addresses ranging from 10.1.1.0 to 10.1.1.255 using HTTP Basic authentication.
Step 5	Example: <pre>(config-webvpn)# smart-tunnel auto-signon <host-list> [use-domain] [realm <realm string>] [port <port num>] [host <host mask> ip <address> <subnet mask>]</pre>	Configures auto-signon with a specific port and realm for authentication.

Configuring SSO Authentication Using SiteMinder

This section describes configuring the ASA to support SSO with SiteMinder. You would typically choose to implement SSO with SiteMinder if your website security infrastructure already incorporates SiteMinder. With this method, SSO authentication is separate from AAA and happens once the AAA process completes.

Prerequisites

- Specifying the SSO server.
- Specifying the URL of the SSO server to which the ASA makes SSO authentication requests.
- Specifying a secret key to secure the communication between the ASA and the SSO server. This key is similar to a password: you create it, save it, and enter it on both the ASA and the SiteMinder Policy Server using the Cisco Java plug-in authentication scheme.

Optionally, you can do the following configuration tasks in addition to the required tasks:

- Configuring the authentication request timeout.
- Configuring the number of authentication request retries.

Restrictions

If you want to configure SSO for a user or group for clientless SSL VPN access, you must first configure a AAA server, such as a RADIUS or LDAP server. You can then set up SSO support for clientless SSL VPN.

Detailed Steps

This section presents specific steps for configuring the ASA to support SSO authentication with CA SiteMinder. To configure SSO with SiteMinder, perform the following steps:

	Command	Purpose
Step 1	<code>webvpn</code>	Switches to webvpn configuration mode.
Step 2	<code>sso-server</code> with the <code>type</code> option Example: hostname(config)# <code>webvpn</code> hostname(config-webvpn)# <code>sso-server Example type siteminder</code> hostname(config-webvpn-sso-siteminder)#	Creates an SSO server. Creates an SSO server named Example of type siteminder.
Step 3	<code>config-webvpn-sso-siteminder</code>	Switches to site minder configuration mode.
Step 4	<code>web-agent-url</code> Example: hostname(config-webvpn-sso-siteminder)# <code>web-agent-url http://www.Example.com/webvpn</code> hostname(config-webvpn-sso-siteminder)#	Specifies the authentication URL of the SSO server. Sends authentication requests to the URL <code>http://www.Example.com/webvpn</code> .

	Command	Purpose
Step 5	<p>policy-server-secret</p> <p>Example: hostname(config-webvpn-ss0-siteminder)# policy-server-secret AtaL8rD8! hostname(config-webvpn-ss0-siteminder)#</p>	<p>Specifies a secret key to secure the authentication communication between the ASA and SiteMinder.</p> <p>Creates a secret key AtaL8rD8!. You can create a key of any length using any regular or shifted alphanumeric character, but you must enter the same key on both the ASA and the SSO server.</p>
Step 6	<p>request-timeout</p> <p>Example: hostname(config-webvpn-ss0-siteminder)# request-timeout 8 hostname(config-webvpn-ss0-siteminder)#</p>	<p>Configures the number of seconds before a failed SSO authentication attempt times out. The default number of seconds is 5, and the possible range is 1 to 30.</p> <p>Changes the number of seconds before a request times out to 8.</p>
Step 7	<p>max-retry-attempts</p> <p>Example: hostname(config-webvpn-ss0-siteminder)# max-retry-attempts 4 hostname(config-webvpn-ss0-siteminder)#</p>	<p>Configures the number of times the ASA retries a failed SSO authentication attempt before the authentication times out. The default is 3 retry attempts, and the possible range is 1 to 5 attempts.</p> <p>Configures the number of retries to 4.</p>
Step 8	<p>username-webvpn group-policy-webvpn</p>	<p>If specifying authentication for a user. If specifying authentication for a group.</p>
Step 9	<p>sso-server value</p> <p>Example: hostname(config)# username Anyuser attributes hostname(config-username)# webvpn hostname(config-username-webvpn)# sso-server value Example hostname(config-username-webvpn)#</p>	<p>Specifies the SSO authentication for either a group or a user.</p> <p>Assigns the SSO server named Example to the user named Anyuser.</p>
Step 10	<p>test sso-server</p> <p>Example: hostname# test sso-server Example username Anyuser INFO: Attempting authentication request to sso-server Example for user Anyuser INFO: STATUS: Success hostname#</p>	<p>Tests the SSO server configuration.</p> <p>Tests the SSO server named Example using the username Anyuser.</p>

Adding the Cisco Authentication Scheme to SiteMinder

In addition to configuring the ASA for SSO with SiteMinder, you must also configure your CA SiteMinder Policy Server with the Cisco authentication scheme, a Java plug-in you download from the Cisco web site.

Prerequisites

Configuring the SiteMinder Policy Server requires experience with SiteMinder.

Detailed Steps

This section presents general tasks, not a complete procedure. To configure the Cisco authentication scheme on your SiteMinder Policy Server, perform the following steps:


-
- Step 1** With the SiteMinder Administration utility, create a custom authentication scheme, being sure to use the following specific arguments:
- In the Library field, enter **smjavaapi**.
 - In the Secret field, enter the same secret configured on the ASA.
You configure the secret on the ASA using the **policy-server-secret** command at the command line interface.
 - In the Parameter field, enter **CiscoAuthApi**.
- Step 2** Using your Cisco.com login, download the file **cisco_vpn_auth.jar** from <http://www.cisco.com/cisco/software/navigator.html> and copy it to the default library directory for the SiteMinder server. This .jar file is also available on the Cisco ASA CD.
-

Configuring SSO Authentication Using SAML Browser Post Profile

This section describes configuring the ASA to support Security Assertion Markup Language (SAML), Version 1.1 POST profile Single Sign-On (SSO) for authorized users.

After a session is initiated, the ASA authenticates the user against a configured AAA method. Next, the ASA (the asserting party) generates an assertion to the relying party, the consumer URL service provided by the SAML server. If the SAML exchange succeeds, the user is allowed access to the protected resource. [Figure 74-3](#) shows the communication flow:

Figure 74-3 SAML Communication Flow

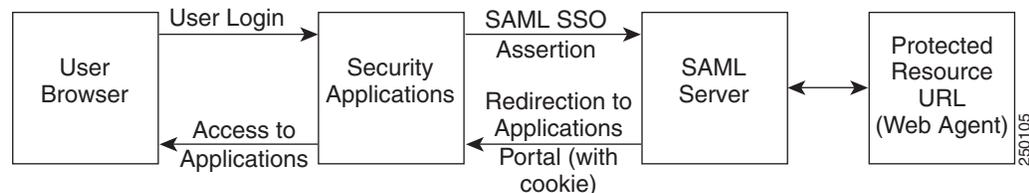

Prerequisites

To configure SSO with an SAML Browser Post Profile, you must perform the following tasks:

- Specify the SSO server with the **sso-server** command.
- Specify the URL of the SSO server for authentication requests (the **assertion-consumer-url** command)
- Specify the ASA hostname as the component issuing the authentication request (the **issuer** command)
- Specify the trustpoint certificates use for signing SAML Post Profile assertions (the **trustpoint** command)

Optionally, in addition to these required tasks, you can do the following configuration tasks:

- Configure the authentication request timeout (the **request-timeout** command)
- Configure the number of authentication request retries (the **max-retry-attempts** command)

Restrictions

- SAML SSO is supported only for clientless SSL VPN sessions.
- The ASA currently supports only the Browser Post Profile type of SAML SSO Server.
- The SAML Browser Artifact method of exchanging assertions is not supported.

Detailed Steps

This section presents specific steps for configuring the ASA to support SSO authentication with SAML Post Profile. To configure SSO with SAML-V1.1-POST, perform the following steps:

	Command	Purpose
Step 1	<code>webvpn</code>	Switches to webvpn configuration mode.
Step 2	<code>sso-server</code> with the <code>type</code> option Example: <pre>hostname(config)# webvpn hostname(config-webvpn)# sso-server sample type SAML-V1.1-post hostname(config-webvpn-sso-saml)#</pre>	Creates an SSO server. Creates an SSO server named Sample of type SAML-V1.1-POST.
Step 3	<code>sso saml</code>	Switches to webvpn-sso-saml configuration mode.
Step 4	<code>assertion-consumer-url</code> Example: <pre>hostname(config-webvpn-sso-saml)# assertion-consumer-url http://www.sample.com/webvpn hostname(config-webvpn-sso-saml)#</pre>	Specifies the authentication URL of the SSO server. Sends authentication requests to the URL <code>http://www.Example.com/webvpn</code> .
Step 5	a unique string Example: <pre>hostname(config-webvpn-sso-saml)# issuer myasa hostname(config-webvpn-sso-saml)#</pre>	Identifies the ASA itself when it generates assertions. Typically, this issuer name is the hostname for the ASA.
Step 6	<code>trust-point</code> <pre>hostname(config-webvpn-sso-saml)# trust-point mytrustpoint</pre>	Specifies the identification certificate for signing the assertion.
Step 7	(Optional) <code>request-timeout</code> Example: <pre>hostname(config-webvpn-sso-saml)# request-timeout 8 hostname(config-webvpn-sso-saml)#</pre>	Configures the number of seconds before a failed SSO authentication attempt times out. Sets the number of seconds before a request times out to 8. The default number of seconds is 5, and the possible range is 1 to 30 seconds.

	Command	Purpose
Step 8	(Optional) <code>max-retry-attempts</code> Example: <code>hostname(config-webvpn-sso-saml)# max-retry-attempts 4</code> <code>hostname(config-webvpn-sso-saml)#</code>	Configures the number of times the ASA retries a failed SSO authentication attempt before the authentication times out. Sets the number of retries to 4. The default is 3 retry attempts, and the possible range is 1 to 5 attempts.
Step 9	<code>webvpn</code>	Switches to webvpn configuration mode.
Step 10	<code>group-policy-webvpn</code> <code>username-webvpn</code>	If assigning an SSO server to a group policy. If assigning an SSO server to a user policy.
Step 11	<code>sso-server value</code> Example: <code>hostname(config)# username Anyuser attributes</code> <code>hostname(config-username)# webvpn</code> <code>hostname(config-username-webvpn)# sso-server value sample</code> <code>hostname(config-username-webvpn)#</code>	Specifies SSO authentication for either a group or a user. Assigns the SSO server named Example to the user named Anyuser.
Step 12	<code>test sso-server</code> Example: <code>hostname# test sso-server Example username Anyuser</code> INFO: Attempting authentication request to sso-server sample for user Anyuser INFO: STATUS: Success	(Privileged exec mode) Tests the SSO server configuration. Tests the SSO server Example using the username Anyuser.

Configuring the SAML POST SSO Server

Use the SAML server documentation provided by the server software vendor to configure the SAML server in Relying Party mode. The following steps list the specific parameters required to configure the SAML Server for Browser Post Profile:

Detailed Steps

-
- Step 1** Configure the SAML server parameters to represent the asserting party (the ASA):
- Recipient consumer URL (same as the assertion consumer URL configured on the ASA)
 - Issuer ID, a string, usually the hostname of appliance
 - Profile type -Browser Post Profile
- Step 2** Configure certificates.
- Step 3** Specify that asserting party assertions must be signed.
- Step 4** Select how the SAML server identifies the user:
- Subject Name Type is DN

- Subject Name format is uid=<user>
-

Configuring SSO with the HTTP Form Protocol

This section describes using the HTTP Form protocol for SSO. HTTP Form protocol is an approach to SSO authentication that can also qualify as a AAA method. It provides a secure method for exchanging authentication information between users of clientless SSL VPN and authenticating web servers. You can use it in conjunction with other AAA servers such as RADIUS or LDAP servers. **Prerequisites**

To configure SSO with the HTTP protocol correctly, you must have a thorough working knowledge of authentication and HTTP protocol exchanges.

Restrictions

As a common protocol, it is applicable only when the following conditions are met for the web server application used for authentication:


- The web form must not have dynamic parameters that are relevant for authentication (such as parameters set by JavaScript or unique for each request).
- The authentication cookie must be set for successful request and not set for unauthorized logons. In this case, ASA cannot distinguish successful from failed authentication.

Detailed Steps

The ASA again serves as a proxy for users of clientless SSL VPN to an authenticating web server but, in this case, it uses HTTP Form protocol and the POST method for requests. You must configure the ASA to send and receive form data. [Figure 74-4](#) illustrates the following SSO authentication steps:

-
- Step 1** A user of clientless SSL VPN first enters a username and password to log into the clientless SSL VPN server on the ASA.
 - Step 2** The clientless SSL VPN server acts as a proxy for the user and forwards the form data (username and password) to an authenticating web server using a POST authentication request.
 - Step 3** If the authenticating web server approves the user data, it returns an authentication cookie to the clientless SSL VPN server where it is stored on behalf of the user.
 - Step 4** The clientless SSL VPN server establishes a tunnel to the user.
 - Step 5** The user can now access other websites within the protected SSO environment without reentering a username and password.

Figure 74-4 SSO Authentication Using HTTP Forms

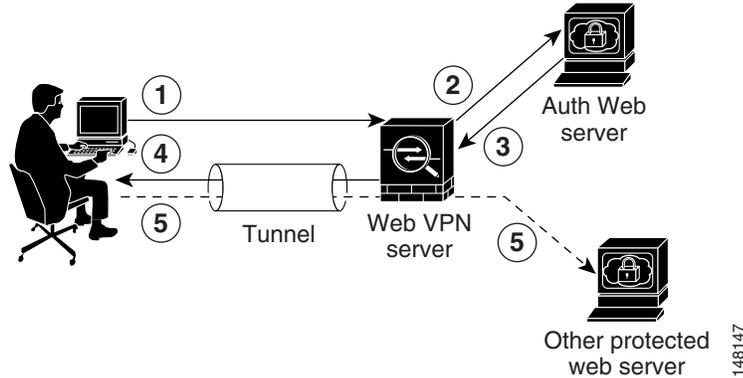

While you would expect to configure form parameters that let the ASA include POST data such as the username and password, you initially might not be aware of additional hidden parameters that the web server requires. Some authentication applications expect hidden data which is neither visible to nor entered by the user. You can, however, discover hidden parameters the authenticating web server expects by making a direct authentication request to the web server from your browser without the ASA in the middle acting as a proxy. Analyzing the web server response using an HTTP header analyzer reveals hidden parameters in a format similar to the following:

```
<param name>=<URL encoded value>&<param name>=<URL encoded>
```

Some hidden parameters are mandatory and some are optional. If the web server requires data for a hidden parameter, it rejects any authentication POST request that omits that data. Because a header analyzer does not tell you if a hidden parameter is mandatory or not, we recommend that you include all hidden parameters until you determine which are mandatory.

To configure SSO with the HTTP Form protocol, you must perform the following:

- Configure the uniform resource identifier on the authenticating web server to receive and process the form data (**action-uri**).
- Configure the username parameter (**user-parameter**).
- Configure the user password parameter (**password-parameter**).

You might also need to do the following tasks depending upon the requirements of authenticating web server:

- Configure a starting URL if the authenticating web server requires a pre-login cookie exchange (**start-url**).
- Configure any hidden authentication parameters required by the authenticating web server (**hidden-parameter**).
- Configure the name of an authentication cookie set by the authenticating web server (**auth-cookie-name**).

	Command	Purpose
Step 1	<code>aaa-server-host</code>	Switches to the <code>aaa-server-host</code> configuration mode.
Step 2	<p>start-url</p> <p>Example: <code>hostname(config)# aaa-server testgrp1 protocol http-form</code> <code>hostname(config)# aaa-server testgrp1 host 10.0.0.2</code> <code>hostname(config-aaa-server-host)# start-url http://example.com/east/Area.do?Page-Grp1</code> <code>hostname(config-aaa-server-host)#</code></p>	<p>If the authenticating web server requires it, specifies the URL from which to retrieve a pre-login cookie from the authenticating web server.</p> <p>Specifies the authenticating web server URL <code>http://example.com/east/Area.do?Page-Grp1</code> in the <code>testgrp1</code> server group with an IP address of <code>10.0.0.2</code>.</p>
Step 3	<p>action-uri</p> <p>Example: <code>http://www.example.com/auth/index.html/appdir/authc/forms/MCOlogin.fcc?TYPE=33554433&REALMOID=06-000a1311-a828-1185-ab41-8333b16a0008&GUID=&SMAUTHREASON=0&METHOD=GET&SMAGENTNAME=\$SM\$5FZmjnk3DRNwNjk2KcqVCFbIrNT9%2bJ0H0KPshFtg6rB1UV2PxxHqLw%3d%3d&TARGET=https%3A%2F%2Fauth.example.com</code> To specify this action URI, enter the following commands: <code>hostname(config-aaa-server-host)# action-uri http://www.example.com/auth/index.html/appdir/authc/forms/MCOlogin.fcc?TYPE=33554433&REALMOID=06-000a1311-a828-1185-ab41-8333b16a0008&GUID=&SMAUTHREASON=0&METHOD=GET&SMAGENTNAME=\$SM\$5FZmjnk3DRNwNjk2KcqVCFbIrNT9%2bJ0H0KPshFtg6rB1UV2PxxHqLw%3d%3d&TARGET=https%3A%2F%2Fauth.example.com</code> <code>hostname(config-aaa-server-host)#</code></p>	<p>Specifies a URI for an authentication program on the authenticating web server.</p> <p>A URI can be entered on multiple, sequential lines. The maximum number of characters per line is 255. The maximum number of characters for a complete URI is 2048.</p> <p>You must include the hostname and protocol in the action URI. In this example, these appear at the start of the URI in <code>http://www.example.com</code>.</p>
Step 4	<p>user-parameter</p> <p>Example: <code>hostname(config-aaa-server-host)# user-parameter userid</code> <code>hostname(config-aaa-server-host)#</code></p>	<p>Configures a username parameter for the HTTP POST request.</p> <p>Configures the username parameter <code>userid</code>.</p>
Step 5	<p>password-parameter</p> <p>Example: <code>hostname(config-aaa-server-host)# password-parameter user_password</code> <code>hostname(config-aaa-server-host)#</code></p>	<p>Configures a user password parameter for the HTTP POST request.</p> <p>Configures a user password parameter named <code>user_password</code>.</p>

	Command	Purpose
Step 6	<p>hidden-parameter</p> <p>Example: SMENC=ISO-8859-1&SMLOCALE=US-EN&target=https%3A%2F%2Fwww.example.com%2Ffemco%2Fappdir%2Farearoot.do%3FEMCOPageCode%3DENG&smauthreason=0</p> <p>To specify this hidden parameter, enter the following commands: hostname(config)# aaa-server testgrp1 host example.com hostname(config-aaa-server-host)# hidden-parameter SMENC=ISO-8859-1&SMLOCALE=US-EN&targe hostname(config-aaa-server-host)# hidden-parameter t=https%3A%2F%2Fwww.example.com%2Femc hostname(config-aaa-server-host)# hidden-parameter o%2Fappdir%2Farearoot.do%3FEMCOPageCo hostname(config-aaa-server-host)# hidden-parameter de%3DENG&smauthreason=0 hostname(config-aaa-server-host)#</p>	<p>Specifies hidden parameters for exchange with the authenticating web server.</p> <p>Shows an example hidden parameter excerpted from a POST request. This hidden parameter includes four form entries and their values, separated by &. The four entries and their values are:</p> <ul style="list-style-type: none"> • SMENC with a value of ISO-8859-1. • SMLOCALE with a value of US-EN. • target with a value of https%3A%2F%2Fwww.example.com%2Femco%2Fappdir%2Farearoot.do. • %3FEMCOPageCode%3DENG. • smauthreason with a value of 0.
Step 7	<p>(Optional)</p> <p>auth-cookie-name</p> <p>Example: hostname(config-aaa-server-host)# auth-cookie-name SsoAuthCookie hostname(config-aaa-server-host)#</p>	<p>Specifies the name for the authentication cookie.</p> <p>Specifies the authentication cookie name of SsoAuthCookie.</p>
Step 8	<p>tunnel-group general-attributes</p>	<p>Switches to tunnel-group general-attributes configuration mode.</p>
Step 9	<p>authentication-server-group</p> <p>Example: hostname(config)# tunnel-group testgroup general-attributes hostname(config-tunnel-general)#authentication-server-group testgrp1</p>	<p>Configures a tunnel-group to use the SSO server configured in the previous steps.</p> <p>Configures the tunnel-group named /testgroup/ to use the SSO server(s) named /testgrp1/".</p>
Step 10	<p>aaa-server-host</p>	<p>Switches to aaa-server-host configuration mode.</p>

	Command	Purpose
Step 11	<p>hidden-parameter</p> <p>Example: SMENC=ISO-8859-1&SMLOCALE=US-EN&target=https%3A%2F%2Fwww.example.com%2Femco%2Fappdir%2FAreaRoot.do%3FEMCOPageCode%3DENG&smauthreason=0</p> <p>To specify this hidden parameter, enter the following commands: hostname(config)# aaa-server testgrp1 host example.com hostname(config-aaa-server-host)# hidden-parameter SMENC=ISO-8859-1&SMLOCALE=US-EN&targ hostname(config-aaa-server-host)# hidden-parameter t=https%3A%2F%2Fwww.example.com%2Femc hostname(config-aaa-server-host)# hidden-parameter o%2Fappdir%2FAreaRoot.do%3FEMCOPageCo hostname(config-aaa-server-host)# hidden-parameter de%3DENG&smauthreason=0 hostname(config-aaa-server-host)#</p>	<p>Specifies hidden parameters for exchange with the authenticating web server.</p> <p>Shows an example hidden parameter excerpted from a POST request. This hidden parameter includes four form entries and their values, separated by &. The four entries and their values are:</p> <ul style="list-style-type: none"> • SMENC with a value of ISO-8859-1. • SMLOCALE with a value of US-EN. • target with a value of https%3A%2F%2Fwww.example.com%2Femco%2Fappdir%2FAreaRoot.do. • %3FEMCOPageCode%3DENG. • smauthreason with a value of 0.
Step 12	<p>(Optional)</p> <p>auth-cookie-name</p> <p>Example: hostname(config-aaa-server-host)# auth-cookie-name SsoAuthCookie hostname(config-aaa-server-host)#</p>	<p>Specifies the name for the authentication cookie.</p> <p>Specifies the authentication cookie name of SsoAuthCookie.</p>
Step 13	tunnel-group general-attributes	Switches to tunnel-group general-attributes mode.
Step 14	<p>authentication-server-group</p> <p>Example: hostname(config)# tunnel-group testgroup general-attributes hostname(config-tunnel-general)#authentication-server-group testgrp1</p>	<p>Configures a tunnel-group to use the SSO server configured in the previous steps.</p> <p>Configures the tunnel-group named /testgroup/ to use the SSO server(s) named /testgrp1/".</p>

Gathering HTTP Form Data

This section presents the steps for discovering and gathering necessary HTTP Form data. If you do not know what parameters the authenticating web server requires, you can gather parameter data by analyzing an authentication exchange using the following steps:

Prerequisites

These steps require a browser and an HTTP header analyzer.

Detailed Steps

- Step 1** Start your browser and HTTP header analyzer, and connect directly to the web server login page without going through the ASA.
- Step 2** After the web server login page has loaded in your browser, examine the login sequence to determine if a cookie is being set during the exchange. If the web server has loaded a cookie with the login page, configure this login page URL as the *start-URL*.
- Step 3** Enter the username and password to log in to the web server, and press **Enter**. This action generates the authentication POST request that you examine using the HTTP header analyzer.



An example POST request—with host HTTP header and body—follows:

```
POST
/emco/myemco/authc/forms/MCOlogin.fcc?TYPE=33554433&REALMOID=06-000430e1-7443-125c-ac05
-83846dc90034&GUID=&SMAUTHREASON=0&METHOD=GET&SMAGENTNAME=$SM$5FZmjnk3DRNwNjk2KcqVCFbIr
NT9%2bJ0H0KPshFtg6rB1UV2PxxkHqLw%3d%3d&TARGET=https%3A%2F%2Fwww.example.com%2Femco%2Fmye
mco%2FHHTTP/1.1
Host: www.example.com
(BODY)
SMENC=ISO-8859-1&SMLOCALE=US-EN&USERID=Anyuser&USER_PASSWORD=XXXXXX&target=https%3A%2F%
2Fwww.example.com%2Femco%2Fmyemco%2F&smauthreason=0
```

- Step 4** Examine the POST request and copy the protocol, host, and the complete URL to configure the action-uri parameter.
- Step 5** Examine the POST request body and copy the following:
- Username parameter. In the preceding example, this parameter is *USERID*, not the value *anyuser*.
 - Password parameter. In the preceding example, this parameter is *USER_PASSWORD*.
 - Hidden parameter. This parameter is everything in the POST body except the username and password parameters. In the preceding example, the hidden parameter is:
SMENC=ISO-8859-1&SMLOCALE=US-EN&target=https%3A%2F%2Fwww.example.com%2Femco%2Fmyemco%2F&smauthreason=0

[Figure 74-5](#) highlights the action URI, hidden, username and password parameters within sample output from an HTTP analyzer. This is only an example; output varies widely across different websites.

Figure 74-5 Action-uri, hidden, username and password parameters

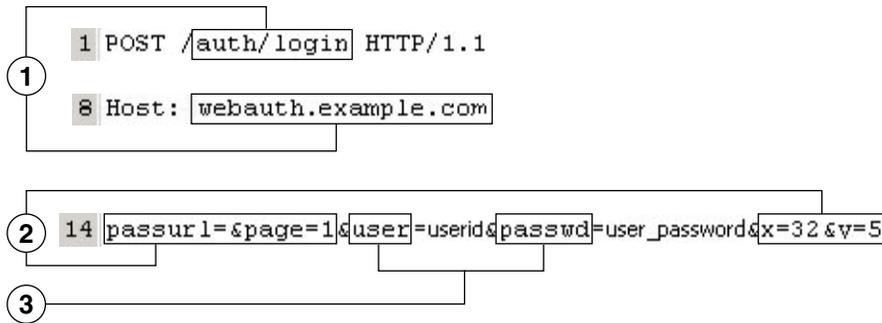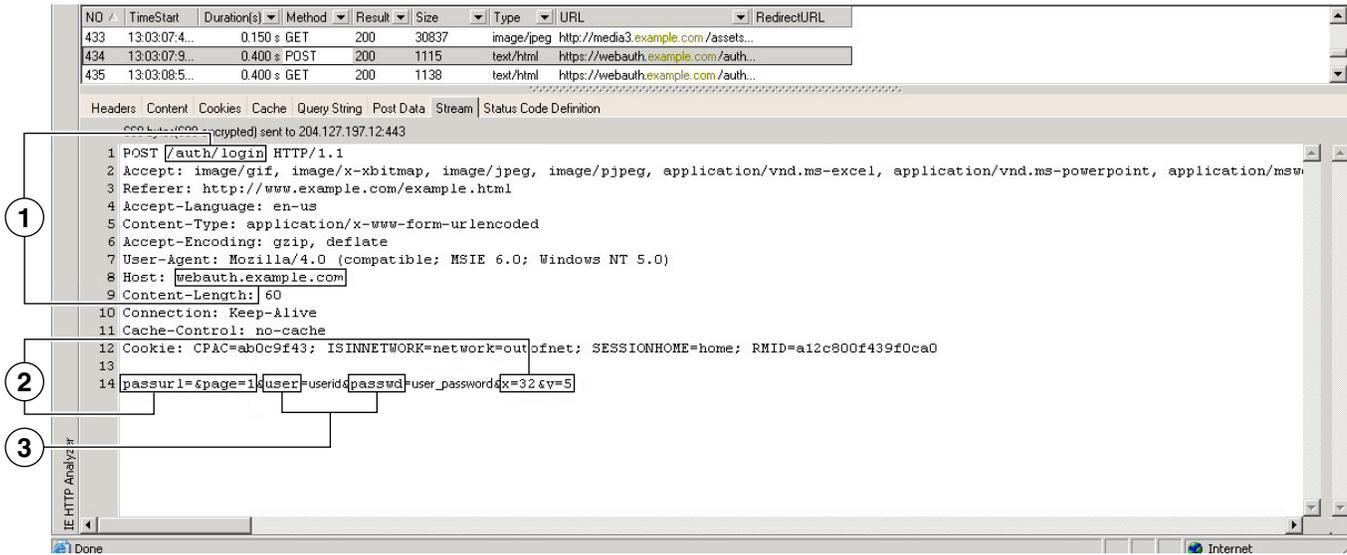

1	Action URI parameter
2	Hidden parameters
3	Username and password parameters

Step 6 If you successfully log in to the web server, examine the server response with the HTTP header analyzer to locate the name of the session cookie set by the server in your browser. This is the **auth-cookie-name** parameter.

In the following server response header, the name of the session cookie is SMSESSION. You just need the name, not the value.

Set-Cookie:

```
SMSESSION=yN4Yp5hHVNDgs4FT8dn7+Rwev41hsE49X1Kc+1twie0ggnjbhktkUnR8XWP3hvdH6PZP
bHIHtWLDKTA8ngDB/1bYTjIxrbdx8WPWwaG3CvVa3adOxHFR8yjD55GevK3ZF4ujgU1lh0fta0dSS
OSepWvnsCb7IFxCw+MGiw0o88uHa2t4l+SillqfJvcpuXfiIAO06D/gtDF40w5YKHEL2KhDEvv+yQ
zxwfEz2c17Ef5iMr8LgGcDK7qvMcvrgUqx68JQOK2+RSwtHQ15bCZmsDU5vQVCvSQWC8OMHNGwpS25
3XwRLvd/h6S/tM0k98QMv+i3N8oOdj1v7f1BqecH7+kVrU01F6oFzr0zM1kMyLr5Hh1VDh7B0k9wp0
dUFZiAzaF43jupD5f6CEkuLeudYw1xgNzsr8eqtPK6t1gFJyOn0s7QdNQ7q9knsPJsekRAH9hrLBhW
BLTU/3B1QS94wEGD2YTuiW36TiP14hYwO1CAYRj2/by3+1YzVu7EmzMQ+UefYxh4cF2gYD8RZL2Rwm
P9JV5148I3XBFPNUw/3V5jf7nRuLr/CdfK3008+Pa3V6/nNhokErSgyxjzMd88DVzM41LxxaUDhbcn
koHT9ImzBvKzJX0J+o7FoUDFOxEdIqlAN4GNqk49cpi2sXDbIarALp6B13+tbB4M1HGH+0CPscZXqo
i/kon9YmGauHyRs+0m6wthdlAmCnvlJCDfDoXtn8DpabgiW6VDTrvl3SGPyQtUv7Wdahug5SxbUzjY
2JxQnrUtWb977NCzYu2sOtN+dsEReWJ6ueyJBbMzKyzUB4L3i5uSYN50B4PcV1w5kDRKa5p3N0NfQ6
RM6dfipMEJw0Ny1sZ7ohz3fbvQ/YZ71w/k7ods/8Vbar15ivkE8dSczuf/AInHtCzuQ6wApzEp9CUo
G8/dapWriHjNoi411JOGCst33wEhxFxcWy2UWxs4EZSjS15GyBnefSQTPVfma5dc/emWor9vWrr0HnT
QaHP5rg5dTNqunkDEDMIHfBeP3F90cZeJvZihM6igis6P/CEJAjE;Domain=.example.com;Path=
/
```

Figure 74-6 shows an example of authorization cookies in HTTP analyzer output. This is only an example; output varies widely across different websites.

Figure 74-6 Authorization cookies in sample HTTP analyzer output

Request Headers	Value	Response Headers	Value
(Request-Line)	GET /auth/login HTTP/1.1	(Status-Line)	HTTP/1.1 200 OK
Accept	image/gif, image/x-bitmap, image/jpeg, image/pipe, application/vnd.ms-excel, application/vnd.ms-powerpoint, application/msword, application/x-shockwave-flash, */*	Server	Netscape-Enterprise/5.0
Accept-Language	en-us	Date	Thu, 15 Dec 2005 21:11:08 GMT
Accept-Encoding	gzip, deflate	Content-length	136
User-Agent	Mozilla/4.0 (compatible; MSIE 6.0; Windows NT 5.0)	Content-type	text/html
Host	webauth.example.com	Set-cookie	AUTH=; path=/; domain=.example.com; expires=Wed, 01-Jan-1997 00:00:00 GMT;
Connection	Keep-Alive	Set-cookie	SAUTH=; path=/; domain=.example.com; expires=Wed, 01-Jan-1997 00:00:00 GMT; secure
Cookie	ISINNETWORK=network=oufnetnet; RMID=a12c800f4390ca0; RMFD=011EmxmD204fYRID104Uq; CPAC=d2dba143; SESSIONHOME=home; SAUTH=wk9g1HKNAhNK7hmDZ56xeTutTAuTHZ+E AUTH=sC205Dwig6pXc00dhJ0oHheTutTAuTHZRfud;	Set-cookie	SAUTH=prYu7mxsYfFOe5s8lg7yHP/LRkCzmDtaG06J0ir6wLQmJuaeZ3CsG+bolcyNAY0tQyNkzplL path=/; domain=.example.com; secure
		Set-cookie	AUTH=TzBlA/nAhl+8GBnRMB7yXSHP/LRkCzmDffBtzZDrc4kxk4Eh2DEpi+efoFyE4CITRLHN/cJ86BYCoiak path=/; domain=.example.com
		Connection	close

1 AUTH=; path=/; domain=.example.com; expires=Wed, 01-Jan-1997 00:00:00 GMT;
SAUTH=; path=/; domain=.example.com; expires=Wed, 01-Jan-1997 00:00:00 GMT; secure

1 Authorization cookies

Step 1 In some cases, the server may set the same cookie regardless of whether the authentication was successful or not, and such a cookie is unacceptable for SSO purposes. To confirm that the cookies are different, repeat [Step 1](#) through [Step 6](#) using invalid login credentials and then compare the “failure” cookie with the “success” cookie.

You now have the necessary parameter data to configure the ASA for SSO with HTTP Form protocol.

Configuring SSO for Plug-ins

Plug-ins support single sign-on (SSO). They use the same credentials (username and password) entered to authenticate the clientless SSL VPN session. Because the plug-ins do not support macro substitution, you do not have the option to perform SSO on different fields, such as the internal domain password or the attribute on a RADIUS or LDAP server.

To configure SSO support for a plug-in, you install the plug-in and add a bookmark entry to display a link to the server, specifying SSO support using the `cisco_sso=1` parameter. The following examples show plug-in bookmarks enabled for SSO:

```
ssh://ssh-server/?cisco_sso=1
rdp://rdp-server/?Parameter1=value&Parameter2=value&cisco_sso=1
```

Configuring SSO with Macro Substitution

This section describes using macro substitution for SSO. Configuring SSO with macro substitution allows for you to inject certain variables into bookmarks to substitute for dynamic values.



Note

Smart tunnel bookmarks support auto-signon but not variable substitution. For example, a SharePoint bookmark configured for smart tunnel uses the same username and password credentials to log into the application as the credentials used to log into clientless SSL VPN. You can use variable substitutions and auto signon simultaneously or separately.

You can now use bookmarks with macro substitutions for auto sign-on on some web pages. The former POST plug-in approach was created so that administrators could specify a POST bookmark with sign-on macros and receive a kick-off page to load prior to posting the POST request. This POST plug-in approach eliminated those requests that required the presence of cookies or other header items. Now an administrator determines the pre-load page and URL, which specifies where you want the post login request sent. A pre-load page enables an endpoint browser to fetch certain information that is sent along to the webserver or web application rather than just using a POST request with credentials.

The following variables (or macros) allow for substitutions in bookmarks and forms-based HTTP POST operations:

- `CSCO_WEBVPN_USERNAME` — user login ID
- `CSCO_WEBVPN_PASSWORD` — user login password
- `CSCO_WEBVPN_INTERNAL_PASSWORD` — user internal (or domain) password. This cached credential is not authenticated against a AAA server. When you enter this value, the security appliance uses it as the password for auto signon, instead of the password/primary password value.



Note

You cannot use any of these three variables in GET-based http(s) bookmarks. Only POST-based http(s) and cifs bookmarks can use these variables.

- `CSCO_WEBVPN_CONNECTION_PROFILE` —user login group drop-down (connection profile alias)
- `CSCO_WEBVPN_MACRO1` — set with the RADIUS-LDAP Vendor Specific Attribute (VSA). If you are mapping from LDAP with an `ldap-attribute-map` command, use the `WebVPN-Macro-Substitution-Value1` Cisco attribute for this macro. See the Active Directory `ldap-attribute-mapping` examples at http://www.cisco.com/en/US/docs/security/asa/asa83/configuration/guide/ref_extserver.html#wp1572118.

The CSCO_WEBVPN_MACRO1 macro substitution with RADIUS is performed by VSA#223 (see Table 74-1).

Table 74-1 VSA#223

WebVPN-Macro-Value1	Y	223	String	Single	Unbounded
WebVPN-Macro-Value2	Y	224	String	Single	Unbounded

A value such as `www.cisco.com/email` dynamically populates a bookmark on the Clientless SSL VPN portal, such as `https://CSCO_WEBVPN_MACRO1` or `https://CSCO_WEBVPN_MACRO2` for the particular DAP or group policy.

- CSCO_WEBVPN_MACRO2 —set with RADIUS-LDAP Vendor Specific Attribute (VSA). If you are mapping from LDAP with an `ldap-attribute-map` command, use the `WebVPN-Macro-Substitution-Value2` Cisco attribute for this macro. See the Active Directory `ldap-attribute-mapping` examples at http://www.cisco.com/en/US/docs/security/asa/asa83/configuration/guide/ref_extserver.html#wp1572118.

The CSCO_WEBVPN_MACRO2 macro substitution with RADIUS is performed by VSA#224 (see Table 74-1).

Each time clientless SSL VPN recognizes one of these six strings in an end-user request (in the form of a bookmark or Post Form), it replaces the string with the user-specified value and then passes the request to a remote server.

If the lookup of the username and password fails on the ASA, an empty string is substituted, and the behavior converts back as if no auto sign-in is available.

Encoding

This pane lets you view or specify the character encoding for clientless SSL VPN portal pages.

Character encoding, also called “character coding” and “a character set,” is the pairing of raw data (such as 0s and 1s) with characters to represent the data. The language determines the character encoding method to use. Some languages use a single method, while others do not. Usually, the geographic region determines the default encoding method used by the browser, but the remote user can change it. The browser can also detect the encoding specified on the page, and render the document accordingly.

The encoding attribute lets you specify the value of the character-encoding method used on the portal page to ensure that the browser renders it properly, regardless of the region in which the user is using the browser, and regardless of any changes made to the browser.

By default, the ASA applies the “Global Encoding Type” to pages from Common Internet File System servers. The mapping of CIFS servers to their appropriate character encoding, globally with the “Global Encoding Type” attribute, and individually with the file-encoding exceptions displayed in the table, provides for the accurate handling and display of CIFS pages when the proper rendering of filenames or directory paths, as well as pages, is an issue.

Detailed Steps

- Step 1** Global Encoding Type determines the character encoding that all clientless SSL VPN portal pages inherit except for those from the CIFS servers listed in the table. You can type the string or choose one of the options from the drop-down list, which contains the most common values, as follows:

- big5
- gb2312
- ibm-850
- iso-8859-1
- shift_jis



Note If you are using Japanese Shift_jis Character encoding, click **Do not specify** in the Font Family area of the associated Select Page Font pane to remove the font family.

- unicode
- windows-1252
- none



Note If you click **none** or specify a value that the browser on the clientless SSL VPN session does not support, it uses its own default encoding.

You can type a string consisting of up to 40 characters, and equal to one of the valid character sets identified in <http://www.iana.org/assignments/character-sets>. You can use either the name or the alias of a character set listed on that page. The string is case-insensitive. The command interpreter converts upper-case to lower-case when you save the ASA configuration.

Step 2 Enter the name or IP address of a CIFS server for which the encoding requirement differs from the “Global Encoding Type” attribute setting. The ASA retains the case you specify, although it ignores the case when matching the name to a server.

Step 3 Choose the character encoding that the CIFS server should provide for clientless SSL VPN portal pages. You can type the string, or choose one from the drop-down list, which contains only the most common values, as follows:

- big5
- gb2312
- ibm-850
- iso-8859-1
- shift_jis



Note If you are using Japanese Shift_jis Character encoding, click **Do not specify** in the Font Family area of the associated Select Page Font pane to remove the font family.

- unicode
- windows-1252
- none

If you click **none** or specify a value that the browser on the clientless SSL VPN session does not support, it uses its own default encoding.

You can type a string consisting of up to 40 characters, and equal to one of the valid character sets identified in <http://www.iana.org/assignments/character-sets>. You can use either the name or the alias of a character set listed on that page. The string is case-insensitive. The command interpreter converts upper-case to lower-case when you save the ASA configuration.

**Note**

Authenticating with Digital Certificates

Clientless SSL VPN users that authenticate using digital certificates do not use global authentication and authorization settings. Instead, they use an authorization server to authenticate once the certificate validation occurs. For more information on authentication and authorization using digital certificates, see the “[Using Certificates and User Login Credentials](#)” section on page 35-9.

Creating and Applying Clientless SSL VPN Policies for Accessing Resources

Creating and applying policies for clientless SSL VPN that govern access to resources at the central site includes the following task:

- [Assigning Users to Group Policies](#)

[Chapter 67, “Configuring Connection Profiles, Group Policies, and Users”](#) includes step-by-step instructions for all of these tasks.

Assigning Users to Group Policies

Assigning users to group policies simplifies the configuration by letting you apply policies to many users. You can use an internal authentication server on the ASA or an external RADIUS or LDAP server to assign users to group policies. See [Chapter 67, “Configuring Connection Profiles, Group Policies, and Users”](#) for a thorough explanation of ways to simplify configuration with group policies.

Using the Security Appliance Authentication Server

You can configure users to authenticate to the ASA internal authentication server, and assign these users to a group policy on the ASA.

Using a RADIUS Server

Using a RADIUS server to authenticate users, assign users to group policies by following these steps:

- Step 1** Authenticate the user with RADIUS and use the Class attribute to assign that user to a particular group policy.
- Step 2** Set the class attribute to the group policy name in the format OU=group_name

For example, to assign a clientless SSL VPN user to the SSL_VPN group, set the RADIUS Class Attribute to a value of *OU=SSL_VPN*; (Do not omit the semicolon.)

Using an LDAP Server

Using an LDAP server to authenticate users, assign users to group policies by following these steps:

- Step 1** Authenticate the user with LDAP and use the Group Policy attribute to assign that user to a particular group policy.
- Step 2** Set the Group Policy attribute to the group policy name in one of these formats:
- <group policy name>
 - OU=<group policy name>
 - OU=<group policy name>;

For example, to assign a clientless SSL VPN user to the SSL_VPN group, set the LDAP Group Policy Attribute to a value of *SSL_VPN*, *OU=SSL_VPN*, or *OU=SSL_VPN*;;

Configuring Connection Profile Attributes for Clientless SSL VPN

[Table 74-2](#) provides a list of connection profile attributes that are specific to clientless SSL VPN. In addition to these attributes, you configure general connection profile attributes common to all VPN connections. For step-by-step information on configuring connection profiles, see [Chapter 67](#), “Configuring Connection Profiles, Group Policies, and Users.”



Note

In earlier releases, “connection profiles” were known as “tunnel groups.” You configure a connection profile with tunnel-group commands. This chapter often uses these terms interchangeably.

Table 74-2 Connection Profile Attributes for Clientless SSL VPN

Command	Function
authentication	Sets the authentication method.
customization	Identifies the name of a previously defined customization to apply.
nbns-server	Identifies the name of the NetBIOS Name Service server (nbns-server) to use for CIFS name resolution.
group-alias	Specifies the alternate names by which the server can refer to a connection profile.
group-url	Identifies one or more group URLs. If you configure this attribute, users coming in on a specified URL need not select a group at login.

Table 74-2 Connection Profile Attributes for Clientless SSL VPN

Command	Function
<code>dns-group</code>	Identifies the DNS server group that specifies the DNS server name, domain name, name server, number of retries, and timeout values .
<code>hic-fail-group-policy</code>	Specifies a VPN feature policy if you use the Cisco Secure Desktop Manager to set the Group-Based Policy attribute to “Use Failure Group-Policy” or “Use Success Group-Policy, if criteria match.”
<code>override-svc-download</code>	Overrides downloading the group-policy or username attributes configured for downloading the AnyConnect VPN client to the remote user.
<code>radius-reject-message</code>	Enables the display of the RADIUS reject message on the login screen when authentication is rejected.

Configuring Group Policy and User Attributes for Clientless SSL VPN

Table 74-3 provides a list of group policy and user attributes for clientless SSL VPN. For step-by-step instructions on configuring group policy and user attributes, see “[Configuring Group Policies](#)” and “[Configuring Attributes for Specific Users](#)” or in [Chapter 67](#), “[Configuring Connection Profiles, Group Policies, and Users](#).”

Table 74-3 Group Policy and User Attributes for Clientless SSL VPN

Command	Function
<code>activex-relay</code>	Lets a user who has established a clientless SSL VPN session use the browser to launch Microsoft Office applications. The applications use the session to download and upload Microsoft Office documents. The ActiveX relay remains in force until the clientless SSL VPN session closes.
<code>auto-signon</code>	Sets values for auto signon, which requires only that the user enter username and password credentials only once for a clientless SSL VPN connection.
<code>customization</code>	Assigns a customization object to a group-policy or user.
<code>deny-message</code>	Specifies the message delivered to a remote user who logs into clientless SSL VPN successfully, but has no VPN privileges.
<code>file-browsing</code>	Enables CIFS file browsing for file servers and shares. Browsing requires NBNS (Master Browser or WINS).
<code>file-entry</code>	Allows users to enter file server names to access.
<code>filter</code>	Sets the name of the webtype access list.
<code>hidden-shares</code>	Controls the visibility of hidden shares for CIFS files.
<code>homepage</code>	Sets the URL of the web page that displays upon login.
<code>html-content-filter</code>	Configures the content and objects to filter from the HTML for this group policy.
<code>http-comp</code>	Configures compression.

Table 74-3 Group Policy and User Attributes for Clientless SSL VPN

Command	Function
<code>http-proxy</code>	Configures the ASA to use an external proxy server to handle HTTP requests. Note Proxy NTLM authentication is not supported in <code>http-proxy</code> . Only proxy without authentication and basic authentication are supported.
<code>keep-alive-ignore</code>	Sets the maximum object size to ignore for updating the session timer.
<code>port-forward</code>	Applies a list of clientless SSL VPN TCP ports to forward. The user interface displays the applications on this list.
<code>post-max-size</code>	Sets the maximum object size to post.
<code>smart-tunnel</code>	Configures a list of programs to use smart tunnel.
<code>sso-server</code>	Sets the name of the SSO server.
<code>storage-objects</code>	Configures storage objects for the data stored between sessions.
<code>svc</code>	Configures SSL VPN Client attributes.
<code>unix-auth-gid</code>	Sets the UNIX group ID.
<code>unix-auth-uid</code>	Sets the UNIX user ID.
<code>upload-max-size</code>	Sets the maximum object size to upload.
<code>url-entry</code>	Controls the ability of the user to enter any HTTP/HTTP URL.
<code>url-list</code>	Applies a list of servers and URLs that clientless SSL VPN portal page displays for end user access.
<code>user-storage</code>	Configures a location for storing user data between sessions.

Configuring Browser Access to Plug-ins

The following sections describe the integration of browser plug-ins for clientless SSL VPN browser access:

- [Preparing the Security Appliance for a Plug-in, page 74-36](#)
- [Installing Plug-ins Redistributed By Cisco, page 74-36](#)
- [Providing Access to Third-Party Plug-ins, page 74-38](#)
- [Providing Access to a Citrix Java Presentation Server, page 74-40](#)

A browser plug-in is a separate program that a web browser invokes to perform a dedicated function, such as connect a client to a server within the browser window. The ASA lets you import plug-ins for download to remote browsers in clientless SSL VPN sessions. Of course, Cisco tests the plug-ins it redistributes, and in some cases, tests the connectivity of plug-ins we cannot redistribute. However, we do not recommend importing plug-ins that support streaming media at this time.



Note Per the GNU General Public License (GPL), Cisco redistributes plug-ins without having made any changes to them. Per the GPL, Cisco cannot directly enhance these plug-ins.

The ASA does the following when you install a plug-in onto the flash device:

- (Cisco-distributed plug-ins only) Unpacks the jar file specified in the *URL*.
- Writes the file to the `cscs-config/97/plugin` directory on the ASA file system.

- Populates the drop-down menu next to the URL attributes in ASDM.
- Enables the plug-in for all future clientless SSL VPN sessions, and adds a main menu option and an option to the drop-down menu next to the Address field of the portal page.

Table 74-4 shows the changes to the main menu and address field of the portal page when you add the plug-ins described in the following sections.

Table 74-4 Effects of Plug-ins on the Clientless SSL VPN Portal Page

Plug-in	Main Menu Option Added to Portal Page	Address Field Option Added to Portal Page
ica	Citrix Client	ica://
rdp	Terminal Servers	rdp://
rdp2	Terminal Servers Vista	rdp2://
ssh,telnet	SSH	ssh://
	Telnet	telnet://
vnc	VNC Client	vnc://

When the user in a clientless SSL VPN session clicks the associated menu option on the portal page, the portal page displays a window to the interface and displays a help pane. The user can select the protocol displayed in the drop-down menu and enter the URL in the Address field to establish a connection.

Some Java plug-ins may report a status of connected or online even when a session to the destination service is not set up. The open-source plug-in reports the status, not the ASA.

The plug-ins support single sign-on (SSO). Refer to the [“Configuring SSO with the HTTP Form Protocol” section on page 74-20](#) for implementation details.

The minimum access rights required for remote use belong to the guest privilege mode.

Prerequisites

- Clientless SSL VPN must be enabled on the ASA to provide remote access to the plug-ins.
- To configure SSO support for a plug-in, you install the plug-in, add a bookmark entry to display a link to the server, and specify SSO support when adding the bookmark.
- The minimum access rights required for remote use belong to the guest privilege mode.
- Plug-ins require ActiveX or Sun JRE 5, Update 1.4 or later (JRE 6 or later recommended) to be enabled on the browser. An ActiveX version of the RDP plug-in is unavailable for 64-bit browsers.

Restrictions

- The plug-ins do not work if the security appliance configures the clientless session to use a proxy server.



Note The remote desktop protocol plug-in does not support load balancing with a session broker. Because of the way the protocol handles the redirect from the session broker, the connection fails. If a session broker is not used, the plug-in works.

- The plug-ins support single sign-on (SSO). They use the *same* credentials entered to open the clientless SSL VPN session. Because the plug-ins do not support macro substitution, you do not have the options to perform SSO on different fields such as the internal domain password or on an attribute on a RADIUS or LDAP server.
- A stateful failover does not retain sessions established using plug-ins. Users must reconnect following a failover.
- If you use stateless failover instead of stateful failover, clientless features such as bookmarks, customization, and dynamic access-policies are not synchronized between the failover ASA pairs. In the event of a failover, these features do not work.

Preparing the Security Appliance for a Plug-in

Before installing a plug-in, prepare the ASA as follows:

Prerequisites

Make sure clientless SSL VPN (“webvpn”) is enabled on an ASA interface.

Restrictions

Do not specify an IP address as the common name (CN) for the SSL certificate. The remote user attempts to use the FQDN to communicate with the ASA. The remote PC must be able to use DNS or an entry in the System32\drivers\etc\hosts file to resolve the FQDN.

Detailed Steps

	Command	Purpose
Step 1	<code>show running-config</code>	Shows whether webvpn is enabled on the ASA.
Step 2	Install an SSL certificate onto the ASA interface	Provides a fully-qualified domain name (FQDN) for remote user connection.

Go to the section that identifies the type of plug-in you want to provide for clientless SSL VPN access.

- [Installing Plug-ins Redistributed By Cisco, page 74-36](#)
- [Providing Access to Third-Party Plug-ins, page 74-38](#)

Installing Plug-ins Redistributed By Cisco

Cisco redistributes the following open-source, Java-based components to be accessed as plug-ins for web browsers in clientless SSL VPN sessions.

Prerequisites

- Make sure clientless SSL VPN (“webvpn”) is enabled on an interface on the ASA. To do so, enter the **show running-config** command.

- Create a temporary directory named “plugins” on a local TFTP or FTP server (for example, with the hostname “local_tftp_server”), and download the plug-ins from the Cisco web site to the “plugins” directory.

Restrictions

Table 74-5 Plug-ins Redistributed by Cisco

Cisco Download Link	Protocol	Description	Source of Redistributed Plug-in *
rdp-plugin.090915.jar	RDP	Accesses Microsoft Terminal Services hosted by Windows Vista and Windows 2003 R2. Supports Remote Desktop ActiveX Control. We recommend using this plug-in that supports both RDP and RDP2. Only versions up to 5.2 of the RDP and RDP2 protocols are supported. Version 5.2 and later are not supported.	Cisco redistributes this plug-in without any changes to it per GNU General Public License. The original source of the redistributed plug-in is http://properjavardp.sourceforge.net/
rdp2-plugin.090211.jar	RDP2	Accesses Microsoft Terminal Services hosted by Windows Vista and Windows 2003 R2. Supports Remote Desktop ActiveX Control. Note This legacy plug-in supports only RDP2.	Cisco redistributes this plug-in without any changes to it per the GNU General Public License. The original source of the redistributed plug-in is http://properjavardp.sourceforge.net/
rdp-plugin.080506.jar	RDP	Accesses Microsoft Terminal Services hosted by Windows 2003 R1. Supports Remote Desktop ActiveX Control. Note This legacy plug-in supports only RDP.	Cisco redistributes this plug-in without any changes to it per the GNU General Public License. The source of the redistributed plug-in is http://properjavardp.sourceforge.net/
ssh-plugin.080430.jar	SSH	The Secure Shell-Telnet plug-in lets the remote user establish a Secure Shell (v1 or v2) or Telnet connection to a remote computer. Note Because keyboard-interactive authentication is not supported by JavaSSH, it cannot be supported with SSH plugin. (Keyboard interactive is a generic authentication method used to implement different authentication mechanisms.)	Cisco redistributes this plug-in without any changes to it per the GNU General Public License. The web site containing the source of the redistributed plug-in is http://javassh.org/
vnc-plugin.080130.jar	VNC	The Virtual Network Computing plug-in lets the remote user use a monitor, keyboard, and mouse to view and control a computer with remote desktop sharing (also known as VNC server or service) turned on. This version changes the default color of the text and contains updated French and Japanese help files.	Cisco redistributes this plug-in without any changes to it per the GNU General Public License. The web site containing the source of the redistributed plug-in is http://www.tightvnc.com/

* Consult the plug-in documentation for information on deployment configuration and restrictions.

These plug-ins are available on the [Cisco Adaptive Security Appliance Software Download](#) site.

Detailed Steps

Follow these steps to provide clientless SSL VPN browser access to a plug-in redistributed by Cisco.



Note

The ASA does not retain the **import webvpn plug-in protocol** command in the configuration. Instead, it loads the contents of the `cisco-config/97/plugin` directory automatically. A secondary ASA obtains the plug-ins from the primary ASA.

	Command	Purpose
Step 1	<pre>import webvpn plug-in protocol [rdp rdp2 ssh,telnet vnc] URL</pre> <p>Example:</p> <pre>hostname# import webvpn plug-in protocol ssh,telnet tftp://local_tftp_server/plugins/ssh-plugin.jar</pre> <pre>Accessing tftp://local_tftp_server/plugins/ssh-plugin.jar...!! !! Writing file disk0:/cisco_config/97/plugin/ssh... !! !!!!!!!!!! 238510 bytes copied in 3.650 secs (79503 bytes/sec)</pre>	<p>Installs the plug-in onto the flash device of the ASA. <i>protocol</i> is one of the following values: ssh,telnet provides plug-in access to <i>both</i> Secure Shell and Telnet services.</p> <p>Note Do not enter this command once for SSH and once for Telnet. When typing the <code>ssh,telnet</code> string, do not insert a space.</p> <p><i>URL</i> is the remote path to the plug-in .jar file. Enter the host name or address of the TFTP or FTP server and the path to the plug-in.</p>
Step 2	<p>(Optional)</p> <pre>revert webvpn plug-in protocol protocol</pre> <p>Example:</p> <pre>hostname# revert webvpn plug-in protocol rdp</pre>	<p>Disables and removes clientless SSL VPN support for a plug-in, as well as removing it from the flash drive of the ASA.</p>

Providing Access to Third-Party Plug-ins

The open framework of the security appliance lets you add plug-ins to support third-party Java client/server applications. The POST plug-in was developed to solve some key single sign-on (SSO) and homepage requirements for certain applications like Citrix Web Interface. This clientless SSL VPN plug-in as the following key capabilities:

- The option to display the homepage for a Web application (such as Citrix) in the right frame, as part of the default clientless portal, or as the only frame in the page (completely hiding anything that is part of the Cisco portal).
- The option for SSO on the homepage or with an application using WebVPN variables (also known as macros) (and therefore HTTP-POST parameters).
- The option to preload a page before issuing a POST request. This option becomes necessary when a logon page for an application sets some cookies.

Restrictions

- Cisco does not provide direct support for or recommend any particular plug-ins that are not redistributed by Cisco. As a provider of clientless SSL VPN services, you are responsible for reviewing and complying with any license agreements required for the use of plug-ins.
- It is strictly an HTML/JavaScript code and not a JAVA plug-in. It contains no client components.
- No support on Firefox. It is supported only on Internet Explorer and Mac Safari.
- Does not support URLs with queries such as `http://example.com/names?Login`. The `?` character is not supported.
- A POST plug-in adds approximately a 10-second delay to make sure an intermediate page is fully loaded with all objects for an application. This delay is beneficial for an application such as Citrix where an intermediate page performs client detection functions.

Configuring and Applying the POST URL

POST plug-ins are configured with the customization object. For example, to make a Citrix portal as the homepage after Clientless SSL VPN login, follow these steps:

Detailed Steps

- Step 1** Add the POST URL of the Citrix server to the customization object in the Custom Intranet Web Page URL field (see [Figure 74-7](#)).

For example, if the Citrix server URL is

`http://mycitrix-server.abcd.com/Citrix/AccessPlatform/auth/login.aspx`, adding the POST URL, it becomes

`post://mycitrix-server.abcd.com/Citrix/AccessPlatform/auth/login.aspx?LoginType=Explicit&user=CS_CO_WEBVPN_USERNAME&password=CSCO_WEBVPN_PASSWORD&cisco_preload=http://mycitrix-server.abcd.com&cisco_ispopup=yes`.

Figure 74-7 SSL VPN Customization Editor Window



207177

- Step 2** Apply the customization object to the group or user.

For additional information on configuring SSO and the required parameters, refer to the SSL VPN deployment guide (http://www.cisco.com/en/US/docs/security/asa/asa80/asdm60/ssl_vpn_deployment_guide/deploy.html#wp1002989).

Providing Access to a Citrix Java Presentation Server

As an example of how to provide clientless SSL VPN browser access to third-party plug-ins, this section describes how to add clientless SSL VPN support for the Citrix Presentation Server Client.

With a Citrix plug-in installed on the ASA, clientless SSL VPN users can use a connection to the ASA to access Citrix MetaFrame services.

A stateful failover does not retain sessions established using the Citrix plug-in. Citrix users must reauthenticate after failover.

To provide access to the Citrix plug-in, follow the procedures in the following sections.

- [Preparing the Citrix MetaFrame Server for Clientless SSL VPN Access](#)
- [Creating and Installing the Citrix Plug-in](#)

Preparing the Citrix MetaFrame Server for Clientless SSL VPN Access

The ASA performs the connectivity functions of the Citrix secure gateway when the Citrix client connects to the Citrix MetaFrame Server. Therefore, you must configure the Citrix Web Interface software to operate in a mode that does not use the (Citrix) “secure gateway.” Otherwise, the Citrix client cannot connect to the Citrix MetaFrame Server.



Note

If you are not already providing support for a plug-in, you must follow the instructions in the “[Preparing the Security Appliance for a Plug-in](#)” section on page 74-36 before using this section.

Creating and Installing the Citrix Plug-in

To create and install the Citrix plug-in, perform the following steps:

Detailed Steps

-
- Step 1** Download the [ica-plugin.zip](#) file from the Cisco Software Download web site. This file contains files that Cisco customized for use with the Citrix plug-in.
 - Step 2** Download the [Citrix Java client](#) from the Citrix site.
 - Step 3** Extract the following files from the Citrix Java client, then add them to the ica-plugin.zip file:
 - JICA-configN.jar
 - JICAEngN.jar
 You can use WinZip to perform this step.
 - Step 4** Ensure the EULA included with the Citrix Java client grants you the rights and permissions to deploy the client on your web servers.

- Step 5** Open a CLI session with the ASA and install the plug-in by entering the following command in privileged EXEC mode:

```
import webvpn plug-in protocol ica URL
```

URL is the host name or IP address and path to the ica-plugin.zip file.



Note After you import the plug-in, remote users can choose **ica** and enter `host/?DesiredColor=4&DesiredHRes=1024&DesiredVRes=768` into the Address field of the portal page to access Citrix services. We recommend that you add a bookmark to make it easy for users to connect. Adding a bookmark is required if you want to provide SSO support for Citrix sessions.

- Step 6** Establish an SSL VPN clientless session and click the bookmark or enter the URL for the Citrix server. Use the [Client for Java Administrator's Guide](#) as needed.

Viewing the Plug-ins Installed on the Security Appliance

Detailed Steps

	Command	Purpose
Step 1	<pre>show import webvpn plug</pre> <p>Example:</p> <pre>hostname# show import webvpn plug ssh rdp vnc ica</pre>	Lists the Java-based client applications available to users of clientless SSL VPN.
Step 2	<pre>show import webvpn plug detail</pre> <p>Example:</p> <pre>hostname show import webvpn plug post GXN2BIGGOAOkBMibDQsMu2GWZ3Q= Tues, 29 Apr 2008 19:57:03 GMT rdp fHeyReIOUwDCgAL9HdTs PnjdBoo= Tues, 15 Sep 2009 23:23:56 GMT rdp2 shw8c22T2SsILLk6zyCd6H6VOz8= Wed, 11 Feb 2009 21:17:54 GMT</pre>	Includes hash and date of the plug-in.

Why a Microsoft Kerberos Constrained Delegation Solution

Many organizations want to authenticate their Clientless VPN users and extend their authentication credentials seamlessly to web-based resources using authentication methods beyond what the ASA SSO feature can offer today. With the growing demand to authenticate remote access users with Smart Cards

and One-time Passwords (OTP), the SSO feature falls short in meeting that demand, because it only forwards conventional user credentials, such as static username and password, to clientless web-based resources when authentication is required.

For example, neither certificate- or OTP-based authentication methods encompass a conventional username and password necessary for the ASA to seamlessly perform SSO access to web-based resources. When authenticating with a certificate, a username and password is not required for the ASA to extend to web-based resources, making it an unsupported authentication method for SSO. On the other hand, OTP does include a static username; however, the password is dynamic and will subsequently change throughout the VPN session. In general, Web-based resources are configured to accept static usernames and passwords, thus also making OTP an unsupported authentication method for SSO.

Microsoft's Kerberos Constrained Delegation (KCD), a new feature introduced in software release 8.4 of the ASA, provides access to Kerberos-protected Web applications in the private network. With this benefit, you can seamlessly extend certificate- and OTP-based authentication methods to web applications. Thus, with SSO and KCD working together although independently, many organizations can now authenticate their clientless VPN users and extend their authentication credentials seamlessly to web applications using all authentication methods supported by the ASA.

Requirements

In order for the **kcd-server** command to function, the ASA must establish a trust relationship between the *source* domain (the domain where the ASA resides) and the *target* or *resource* domain (the domain where the web services reside). The ASA, using its unique format, crosses the certification path from the source to the destination domain and acquires the necessary tickets on behalf of the remote access user to access the services.

This crossing of the certificate path is called cross-realm authentication. During each phase of cross-realm authentication, the ASA relies on the credentials at a particular domain and the trust relationship with the subsequent domain.

Understanding How KCD Works

Kerberos relies on a trusted third party to validate the digital identity of entities in a network. These entities (such as users, host machines, and services running on hosts) are called principals and must be present in the same domain. Instead of secret keys, Kerberos uses tickets to authenticate a client to a server. The ticket is derived from the secret key and consists of the client's identity, an encrypted session key, and flags. Each ticket is issued by the key distribution center and has a set lifetime.

The Kerberos security system is a network authentication protocol used to authenticate entities (users, computers, or applications) and protect network transmissions by scrambling the data so that only the device that the information was intended for can decrypt it. You can configure KCD to provide Clientless SSL VPN (also known as WebVPN) users with SSO access to any web services protected by Kerberos. Examples of such web services or applications include Outlook Web Access (OWA), Sharepoint, and Internet Information Server (IIS).

Two extensions to the Kerberos protocol were implemented: *protocol transition* and *constrained delegation*. These extensions allow the Clientless or WebVPN remote access users to access Kerberos authenticated applications in the private network.

The *protocol transition* provides you with increased flexibility and security by supporting different authentication mechanisms at the user authentication level and by switching to the Kerberos protocol for security features (such as mutual authentication and constrained delegation) in subsequent application layers. *Constrained delegation* provides a way for domain administrators to specify and enforce

application trust boundaries by limiting where application services can act on a user's behalf. This flexibility improves application security designs by reducing the chance of compromise by an untrusted service.


For more information on constrained delegation, see RFC 1510 via the IETF website (<http://www.ietf.org>).

Authentication Flow with KCD

Figure 74-8 depicts the packet and process flow a user will experience directly and indirectly when accessing resources trusted for delegation via the clientless portal. This process assumes that the following tasks have been completed:

- Configured KCD on ASA
- Joined the Windows Active Directory and ensured services are trusted for delegation
- Delegated ASA as a member of the Windows Active Directory domain

Figure 74-8 KCD Process

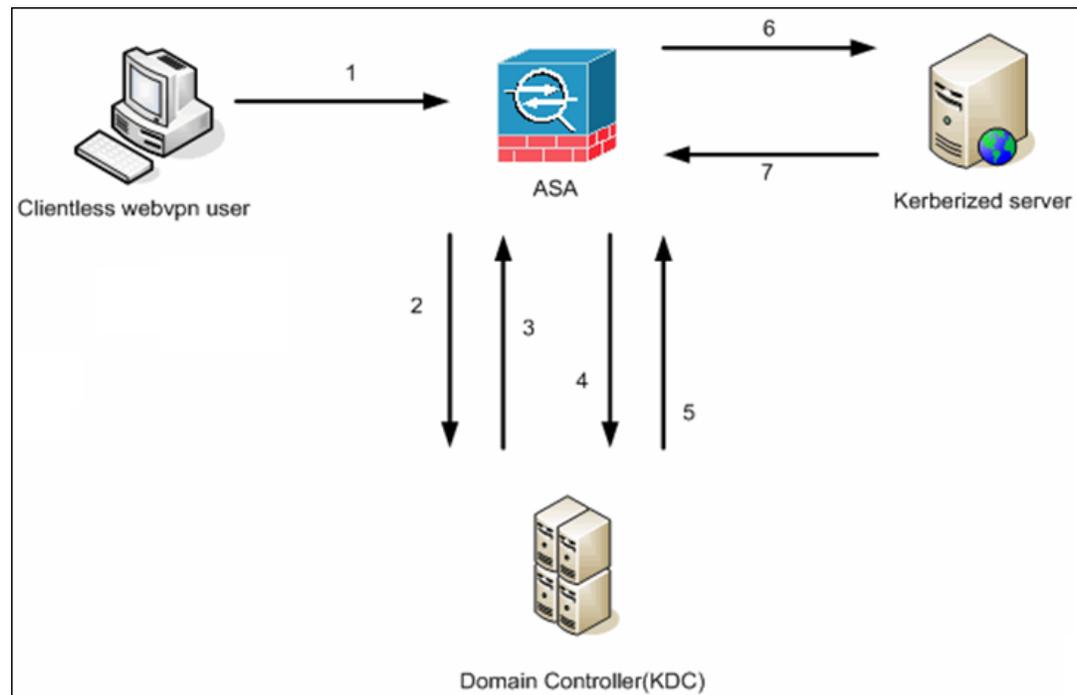

Note

A clientless user session is authenticated by the ASA using the authentication mechanism configured for the user. (In the case of Smartcard credentials, ASA performs LDAP authorization with the userPrincipalName from the digital certificate against the Windows Active Directory).

1. After successful authentication, the user logs in to the ASA clientless portal page. The user accesses a Web service by entering a URL in the portal page or by clicking on the bookmark. If the Web service requires authentication, the server challenges ASA for credentials and sends a list of authentication methods supported by the server.



Note KCD for Clientless SSL VPN is supported for all authentication methods (RADIUS, RSA/SDI, LDAP, digital certificates, and so on). Refer to the AAA Support table at http://www.cisco.com/en/US/partner/docs/security/asa/asa84/configuration/guide/access_aa.html#wp1069492.

2. Based on the HTTP headers in the challenge, ASA determines whether the server requires Kerberos authentication. (This is part of the SPNEGO mechanism.) If connecting to a backend server requires Kerberos authentication, the ASA requests a service ticket for itself on behalf of the user from the key distribution center.
3. The key distribution center returns the requested tickets to the ASA. Even though these tickets are passed to the ASA, they contain the user's authorization data. ASA requests a service ticket from the KDC for the specific service that the user wants to access.



Note Steps 1 to 3 comprise protocol transition. After these steps, any user who authenticates to ASA using a non-Kerberos authentication protocol is transparently authenticated to the key distribution center using Kerberos.

4. ASA requests a service ticket from the key distribution center for the specific service that the user wants to access.
5. The key distribution center returns a service ticket for the specific service to the ASA.
6. ASA uses the service ticket to request access to the web service.
7. The Web server authenticates the Kerberos service ticket and grants access to the service. The appropriate error message is displayed and requires acknowledgement if there is an authentication failure. If the Kerberos authentication fails, the expected behavior is to fall back to basic authentication.

Before Configuring KCD

To configure the ASA for cross-realm authentication, you must use the following commands:

	Command	Purpose
Step 1	<pre>ntp hostname Example: hostname(config)# config t -----Create an alias for the Domain Controller----- hostname(config)# name 10.1.1.10 DC ----Configure the Name server-----</pre>	<p>Joins the Active Directory domain.</p> <p>Shows a 10.1.1.10 domain controller (which is reachable inside the interface) with a domain name of private.net and a service account on the domain controller using dcuser as the username and dcuser123! as the password.</p>
Step 2	<pre>dns domain-lookup dns server-group Example: hostname(config)# ntp server DC ----Enable a DNS lookup by configuring the DNS server and Domain name ----- hostname(config)# dns domain-lookup inside hostname(config)# dns server-group DefaultDNS hostname(config-dns-server-group)# name-server DC hostname(config-dns-server-group)# domain-name private.net ----Configure the AAA server group with Server and Realm----- hostname(config)# aaa-server KerberosGroup protocol Kerberos hostname(config-asa-server-group)# aaa-server KerberosGroup (inside) host DC hostname(config-asa-server-group)# Kerberos-realm PRIVATE.NET ----Configure the Domain Join----- hostname(config)# webvpn hostname(config-webvpn)# kcd-server KerberosGroup username dcuser password dcuser123! hostname(config)#</pre>	<p>Performs a lookup.</p> <p>Shows a domain name of private.net and a service account on the domain controller using dcuser as the username and dcuser123! as the password.</p>

Configuring KCD

To have the ASA join a Windows Active Directory domain and return a success or failure status, follow these commands:

Detailed Steps

	Command	Purpose
Step 1	<code>webvpn</code>	Switches to webvpn configuration mode.
Step 2	<code>kcd-server</code>	
Step 3	<code>kcd-server aaa-server-group</code> Example: ASA(config)# aaa-server KG protocol kerberos ASA(config)# aaa-server KG (inside) host DC ASA(config-aaa-server-host_# kerberos-realm test.edu ASA(webvpn-config)# kcd-server KG username user1 password abc123 ASA(webvpn-config)# no kcd-server	Specifies the domain controller name and realm. The AAA server group must be a Kerberos type. Shows sample output.
Step 4	(Optional) <code>no kcd-server</code>	Removes the specified behavior for the ASA.
Step 5	(Optional) <code>kcd-server reset</code>	Resets to the internal state.
Step 6	<code>kcd domain-join username <user> password <pass></code> user—Does not correspond to a specific administrative user but simply a user with service-level privileges to add a device on the Windows domain controller. pass—The password does not correspond to a specific password but simply a user with service-level password privileges to add a device on the Windows domain controller.	Checks for the presence of a kcd-server and starts the domain join process. The Active Directory username and password are used only in exec-mode and are not saved in the configuration. Note Administrative privileges are required for initial join. A user with service-level privileges on the domain controller will not get access.
Step 7	<code>kcd domain-leave</code>	Verifies if the kcd-server command has a valid domain join status and then initiates a domain leave.

Showing KCD Status Information

To display the domain controller information and the domain join status, follow these commands:

	Command	Purpose
Step 1	<code>webvpn</code>	Switches to webvpn configuration mode.
Step 2	<code>show webvpn kcd</code> Example: ASA# show webvpn kcd KCD-Server Name: DC User : user1 Password : **** KCD State : Joined	Displays the domain controller information and the domain join status. Shows sample output returned from this command.

Showing Cached Kerberos Tickets

To display all Kerberos tickets cached on the ASA, enter the following commands:

	Command	Function
Step 1	<code>webvpn</code>	Switches to webvpn configuration mode.
Step 2	<code>show aaa kerberos</code>	Displays all Kerberos tickets cached on the ASA.
Step 3	<p><code>show aaa kerberos [username user host ip hostname]</code></p> <ul style="list-style-type: none"> • <code>user</code>—Used to view the Kerberos tickets of a specific user • <code>hostname</code>—Used to view the Kerberos tickets issued for a specific host <p>Example:</p> <pre>ASA# show aaa kerberos Default Principal Valid Starting Expires Service Principal asa@BXB.COM 06/29/10 18:33:00 06/30/10 18:33:00 krbtgt/BXB.COM@BXB.COM kcduser@BXB.COM 06/29/10 17:33:00 06/30/10 17:33:00 asa\$/BXB.COM@BXB.COM kcduser@BXB.COM 06/29/10 17:33:00 06/30/10 17:33:00 http/owa.bxb.com@BXB.COM ASA# show aaa kerberos username kcduser Default Principal Valid Starting Expires Service Principal kcduser@BXB.COM 06/29/10 17:33:00 06/30/10 17:33:00 asa\$/BXB.COM@BXB.COM kcduser@BXB.COM 06/29/10 17:33:00 06/30/10 17:33:00 http/owa.bxb.com@BXB.COM ASA# show aaa kerberos host owa.bxb.com Default Principal Valid Starting Expires Service Principal kcduser@BXB.COM 06/29/1006/30/10 17:33:00 http/owa.bxb.com@BXB.COM ASA# show aaa kerberos username kcduser Default Principal Valid Starting Expires Service Principal kcduser@BXB.COM 06/29/10 17:33:00 06/30/10 17:33:00 asa\$/BXB.COM@BXB.COM kcduser@BXB.COM 06/29/10 17:33:00 06/30/10 17:33:00 http/owa.bxb.com@BXB.COM ASA# show aaa kerberos host owa.bxb.com Default Principal Valid Starting Expires Service Principal kcduser@BXB.COM 06/29/10 17:33:00 06/30/10 17:33:00 http/owa.bxb.com@BXB.COM</pre>	Shows sample output returned from this command.

Clearing Cached Kerberos Tickets

To clear all Kerberos ticket information on the ASA, follow these commands:

	Command	Purpose
Step 1	<code>webvpn</code>	Switches to webvpn configuration mode.
Step 2	<code>clear aaa kerberos</code>	Clears all Kerberos ticket information on the ASA.
Step 3	<code>clear aaa kerberos [username <i>user</i> host <i>ip</i> <i>hostname</i>]</code> <ul style="list-style-type: none"> • <i>user</i>—Used to clear the Kerberos tickets of a specific user • <i>hostname</i>—Used to clear the Kerberos tickets of a specific host 	



Note

Configuring Application Access

The following sections describe how to enable smart tunnel access and port forwarding on clientless SSL VPN sessions, specify the applications to be provided with such access, and provide notes on using it:

- [Logging Off Smart Tunnel](#)[Configuring Smart Tunnel Access](#)

Logging Off Smart Tunnel **Configuring Smart Tunnel Access**

A smart tunnel list identifies one or more applications eligible for smart tunnel access and the endpoint operating system associated with the list. Because each group policy or local user policy supports one smart tunnel list, you must group the nonbrowser-based applications to be supported into a smart tunnel list. Without writing a script or uploading anything, an administrator can specify which homepage in the group policy to connect with via smart tunnel (with the homepage use-smart-tunnel CLI command or on the GUI). Following the configuration of a list, you can assign it to one or more group policies or local user policies. If the administrator has it configured as such, you can browse the internet directly while accessing company internal resources via smart tunnel.

The following sections describe smart tunnels and how to configure them:

- [About Smart Tunnels](#)
- [Why Smart Tunnels?](#)
- [Adding Applications to Be Eligible for Smart Tunnel Access](#)
- [Adding Applications to Be Eligible for Smart Tunnel Access](#)
- [Assigning a Smart Tunnel List](#)
- [Configuring and Applying a Smart Tunnel Tunnel Policy](#)
- [Specifying Servers for Smart Tunnel Auto Sign-on](#)
- [Adding or Editing a Smart Tunnel Auto Sign-on Server Entry](#)

- [Enabling and Disabling Smart Tunnel Access](#)

About Smart Tunnels

A smart tunnel is a connection between a TCP-based application and a private site, using a clientless (browser-based) SSL VPN session with the security appliance as the pathway, and the ASA as a proxy server. You can identify applications to which you want to grant smart tunnel access, and specify the local path to each application. For applications running on Microsoft Windows, you can also require a match of the SHA-1 hash of the checksum as a condition for granting smart tunnel access.

Lotus SameTime and Microsoft Outlook are examples of applications to which you might want to grant smart tunnel access.

Configuring smart tunnels requires one of the following procedures, depending on whether the application is a client or is a web-enabled application:

- Create one or more smart tunnel lists of the client applications, then assign the list to the group policies or local user policies for whom you want to provide smart tunnel access.
- Create one or more bookmark list entries that specify the URLs of the web-enabled applications eligible for smart tunnel access, then assign the list to the group policies or local user policies for whom you want to provide smart tunnel access.

You can also list web-enabled applications for which to automate the submission of login credentials in smart tunnel connections over clientless SSL VPN sessions.

Why Smart Tunnels?

Smart tunnel access lets a client TCP-based application use a browser-based VPN connection to access a service. It offers the following advantages to users, compared to plug-ins and the legacy technology, port forwarding:

- Smart tunnel offers better performance than plug-ins.
- Unlike port forwarding, smart tunnel simplifies the user experience by not requiring the user connection of the local application to the local port.
- Unlike port forwarding, smart tunnel does not require users to have administrator privileges.

The advantage of a plug-in is that it does not require the client application to be installed on the remote computer.

Prerequisites

See the [Supported VPN Platforms, Cisco ASA 5500 Series](#) for the platforms and browsers supported by ASA Release 8.4 smart tunnels.

The following requirements apply to smart tunnel access on Windows:

- ActiveX or Sun JRE 5, Update 1.5 or later (JRE 6 or later recommended) on Windows must be enabled on the browser.

ActiveX pages require that you enter the **activex-relay** command on the associated group policy. If you do so or assign a smart tunnel list to the policy, and the browser proxy exception list on the endpoint specifies a proxy, the user must add a “shutdown.webvpn.relay.” entry to this list.



Note Browser-based VPN access does not support Windows Shares (CIFS) Web Folders on Windows 7, Vista, Internet Explorer 8, Mac OS, and Linux. Windows XP SP2 requires a [Microsoft hotfix](#) to support Web Folders.

- Only Winsock 2, TCP-based applications are eligible for smart tunnel access.
- Smart tunnel supports Mac OS running on an Intel processor only.
- Java Web Start must be enabled on the browser.

Restrictions

- For users of Microsoft Windows Vista who use smart tunnel or port forwarding, we recommend that you add the URL of the ASA to the Trusted Site zone. To access the Trusted Site zone, they must start Internet Explorer and choose the **Tools > Internet Options > Security** tab. Vista users can also disable Protected Mode to facilitate smart tunnel access; however, we recommend against this method because it increases vulnerability to attack.
- Smart tunnel supports only proxies placed between computers running Microsoft Windows and the security appliance. Smart tunnel uses the Internet Explorer configuration (that is, the one intended for system-wide use in Windows). If the remote computer requires a proxy server to reach the ASA, the URL of the terminating end of the connection must be in the list of URLs excluded from proxy services. If the proxy configuration specifies that traffic destined for the ASA goes through a proxy, all smart tunnel traffic goes through the proxy.
- In an HTTP-based remote access scenario, sometimes a subnet does not provide user access to the VPN gateway. In this case, a proxy placed in front of the ASA to route traffic between the web and the end user's location provides web access. However, only VPN users can configure proxies placed in front of the ASA. When doing so, they must make sure these proxies support the CONNECT method. For proxies that require authentication, smart tunnel supports only the basic digest authentication type.
- When smart tunnel starts, the ASA by default passes all browser traffic through the VPN session if the browser process is the same. The ASA also does this if a tunnel-all policy applies. If the user starts another instance of the browser process, it passes all traffic through the VPN session. If the browser process is the same and the security appliance does not provide access to a URL, the user cannot open it. As a workaround, assign a tunnel policy that is not tunnel-all.
- A stateful failover does not retain smart tunnel connections. Users must reconnect following a failover.
- If it takes too long for smart tunnel to load, perform the following:
 - Clear the SSL state (with Internet Explorer, go to **Tools > Internet Options > Content**).
 - Disable the **Check for server certificate revocation** check box (with Internet Explorer, go to **Tools > Internet Options > Advanced > Security**).
 - Delete cookies (with Internet Explorer, go to **Tools > Internet Options > General**).
- The Mac version of smart tunnel does not support POST bookmarks, form-based auto sign-on, or POST macro substitution.
- Only applications started from the portal page can establish smart tunnel connections. This requirement includes smart tunnel support for Firefox. Using Firefox to start another instance of Firefox during the first use of a smart tunnel requires the user profile named cisco_st. If this user profile is not present, the session prompts the user to create one.

- In a Mac OS, applications using TCP that are dynamically linked to the SSL library can work over a smart tunnel.
- Smart tunnel does not support the following on Mac OS:
 - Proxy services.
 - Auto sign-on.
 - Applications that use two-level name spaces.
 - Console-based applications, such as Telnet, SSH, and cURL.
 - Applications using `dlopen` or `dlsym` to locate `libsocket` calls.
 - Statically linked applications to locate `libsocket` calls.
- For Windows, if you want to add smart tunnel access to an application started from the command prompt, you must specify “`cmd.exe`” in the Process Name of one entry in the smart tunnel list, and specify the path to the application itself in another entry, because “`cmd.exe`” is the parent of the application.
- Mac OS requires the full path to the process and is case-sensitive. To avoid specifying a path for each username, insert a tilde (~) before the partial path (e.g., `~/bin/vnc`).
- Smart Tunnel and Secure Desktop (Vault) Interoperability

Cisco supports smart tunneling inside a Secure Desktop (Vault) environment on all operating systems that support Vault. We also support smart tunneling of desktop applications and browser-based applications.

ASA 8.3 or later is required to perform smart tunneling from an endpoint using IE8 or a 64-bit Windows operating system.

To implement smart tunneling with IE8, from within a Secure Desktop (Vault), the endpoint must be connected to a secure gateway running ASA 8.3 or later; in addition, the endpoint must have Cisco Secure Desktop 3.5 or later installed.

Smart tunneling is not intended to restrict network access to only internal resources.

Adding Applications to Be Eligible for Smart Tunnel Access

The clientless SSL VPN configuration of each ASA supports *smart tunnel lists*, each of which identifies one or more applications eligible for smart tunnel access. Because each group policy or username supports only one smart tunnel list, you must group each set of applications to be supported into a smart tunnel list.

To add an entry to a list of applications that can use a clientless SSL VPN session to connect to private sites, enter the following commands:

	Command	Purpose
Step 1	<code>webvpn</code>	Switches to webvpn configuration mode.
Step 2	<code>smart-tunnel list list application path [platform OS] [hash]</code>	<p>Adds an entry to a list of applications that can use a clientless SSL VPN session to connect to private sites.</p> <ul style="list-style-type: none"> • <i>platform</i> is windows or mac to indicate the host OS of the application. The default value is <i>platform windows</i>. • <i>hash</i> (Optional) To obtain this value, enter the checksum of the application (that is, the checksum of the executable file) into a utility that calculates a hash using the SHA-1 algorithm. One example of such a utility is the Microsoft File Checksum Integrity Verifier (FCIV), which is available at http://support.microsoft.com/kb/841290/. After installing FCIV, place a temporary copy of the application to be hashed on a path that contains no spaces (for example, c:/fciv.exe), then enter fciv.exe -sha1 application at the command line (for example, fciv.exe -sha1 c:\msimn.exe) to display the SHA-1 hash. <p>The SHA-1 hash is always 40 hexadecimal characters.</p> <p>Before authorizing an application for smart tunnel access, clientless SSL VPN calculates the hash of the application matching the <i>path</i>. It qualifies the application for smart tunnel access if the result matches the value of <i>hash</i>.</p>
Step 3	(Optional) <code>no smart-tunnel list list application</code>	Removes an application from a list, specifying both the list and the name of the application.

	Command	Purpose
Step 4	(Optional) <pre>no smart-tunnel list list</pre>	<p>Removes an entire list of applications from the ASA configuration.</p> <ul style="list-style-type: none"> • <i>list</i> is the name for a list of applications or programs. Use quotation marks around the name if it includes a space. The CLI creates the list if it is not present in the configuration. Otherwise, it adds the entry to the list. • <i>application</i> is a string that serves as a unique index to each entry in the smart tunnel list. It typically names the application to be granted smart tunnel access. To support multiple versions of an application for which you choose to specify different paths or hash values, you can use this attribute to differentiate entries, specifying the OS, and name and version of the application supported by each list entry. The string can be up to 64 characters. To change an entry already present in a smart tunnel list, enter the name of the entry to be changed. • <i>path</i> is the filename and extension of the application; or a path to the application, including its filename and extension. The string can be up to 128 characters. <p>Windows requires an exact match of this value to the right side of the application path on the remote host to qualify the application for smart tunnel access. If you specify only the filename for Windows, SSL VPN does not enforce a location restriction on the remote host to qualify the application for smart tunnel access.</p> <p>If you specify a path and the user installed the application in another location, that application does not qualify. The application can reside on any path as long as the right side of the string matches the value you enter.</p>

	Command	Purpose
Step 5	<p>smart-tunnel list entering the same <i>list</i> string but specifying the unique <i>application</i> string and <i>path</i> value in each command</p> <p>OR</p> <p>smart-tunnel list entering the same <i>list</i> string but specifying the unique <i>application</i> string and a unique <i>hash</i> value</p>	<p>Enter once for each path to authorize an application for smart tunnel access when it is present on one of several paths on the remote host.</p> <p>Note A sudden problem with smart tunnel access may be an indication that a <i>Process Name</i> value is not up-to-date with an application upgrade. For example, the default path to an application sometimes changes following the acquisition of the company that produces the application and the next application upgrade.</p> <p>Enter once for each version when multiple versions of an application exist. Entering a hash provides a reasonable assurance that SSL VPN does not qualify an illegitimate file that matches the string you specified in the <i>path</i>.</p> <p>Note You must maintain the smart tunnel list in the future if you enter <i>hash</i> values and you want to support future versions or patches of an application with smart tunnel access. A sudden problem with smart tunnel access may be an indication that the application list containing <i>hash</i> values is not up-to-date with an application upgrade. You can avoid this problem by not entering a <i>hash</i>.</p>

	Command	Purpose
Step 6	<p>Example:</p> <pre>smart-tunnel list apps LotusSametime connect.exe smart-tunnel list apps lotusnotes notes.exe smart-tunnel list apps lotusnlnotes nlnotes.exe smart-tunnel list apps lotusntaskldr ntaskldr.exe smart-tunnel list apps lotusnfileret nfileret.exe smart-tunnel list apps CommandPrompt cmd.exe hostname(config-webvpn)# smart-tunnel list apps1 Outlook2010 outlook.exe smart-tunnel list apps OutlookExpress msimn.exe smart-tunnel list apps OutlookExpress "\Program Files\Outlook Express\msimn.exe" smart-tunnel list apps OutlookExpress msimn.exe 4739647b255d3ea865554e27c3f96b9476e75061 smart-tunnel list apps Safari "/Applications/Safari" platform mac smart-tunnel list apps Terminal terminal platform mac smart-tunnel list apps Terminal "terminal open -a MacTelnet" platform mac smart-tunnel list apps vnc "~/bin/vnc" platform mac</pre>	<p>((Windows) Adds Lotus SameTime to a smart tunnel list named apps.</p> <p>((Windows) Adds the Lotus 6.0 thick client with Domino Server 6.5.5.</p> <p>((Windows) Adds the command prompt to a smart tunnel list named apps.</p> <p>Note This action provide smart tunnel access to a Microsoft Windows application started from the command prompt. You must also add the application itself to the list.</p> <p>((Windows) Adds Microsoft Outlook 2010 to a smart tunnel list named apps1: Adds Windows Outlook Express.</p> <p>((Windows) Add Windows Outlook Express, permitting smart tunnel support for it only if its path on the remote host matches the string.</p> <p>((Windows) Add Windows Outlook Express, permitting smart tunnel support for it only if its hash matches the string.</p> <p>((Mac) Add Safari, permitting smart tunnel support for it only if its path on the remote host matches the string.</p> <p>((Mac) Add smart tunnel support for a new Terminal window.</p> <p>((Mac) Add smart tunnel support for an application started from a Mac Terminal window. All words after Terminal inside the quotation marks enter the command line.</p> <p>((Mac) Add smart tunnel support for VNC, regardless of the user path to the VNC executable file.</p>
Step 7	<p>(Optional)</p> <pre>show running-config webvpn</pre>	Shows the smart tunnel list entries in the SSL VPN configuration.

Assigning a Smart Tunnel List

For each group policy and username, you can configure clientless SSL VPN to do one of the following:

- Start smart tunnel access automatically upon user login.
- Enable smart tunnel access upon user login, but require the user to start it manually, using the **Application Access > Start Smart Tunnels** button on the clientless SSL VPN Portal Page.

Restrictions

These options are mutually exclusive for each group policy and username. Use only one.

The following smart tunnel commands are available to each group policy and username. The configuration of each group policy and username supports only one of these commands at a time, so when you enter one, the ASA replaces the one present in the configuration of the group policy or username in question with the new one, or in the case of the last command, simply removes the smart-tunnel command already present in the group policy or username.

Detailed Steps

	Command	Purpose
Step 1	<pre>smart-tunnel auto-start list</pre> <p>OR</p> <pre>smart-tunnel enable list</pre> <p>OR</p> <pre>smart-tunnel disable</pre> <p>OR</p> <pre>no smart-tunnel [auto-start list enable list disable]</pre>	<p>Starts smart tunnel access automatically upon user login.</p> <p>Enables smart tunnel access upon user login, but requires the user to start smart tunnel access manually, using the Application Access > Start Smart Tunnels button on the clientless SSL VPN portal page.</p> <p>Prevents smart tunnel access.</p> <p>Removes a smart-tunnel command from the group policy or username configuration, which then inherits the [no] smart-tunnel command from the default group-policy. The keywords following the no smart-tunnel command are optional, however, they restrict the removal to the named smart-tunnel command.</p>
Step 2	Refer to section that addresses the option you want to use.	

Configuring and Applying Smart Tunnel Policy

The smart tunnel policy requires a per group policy/username configuration. Each group policy/username references a globally configured list of networks. When the smart tunnel is turned on, you can allow traffic outside of the tunnel with the use of 2 CLIs: one configures the network (a set of hosts), and the other uses the specified smart-tunnel network to enforce a policy on a user. The following commands create a list of hosts to use for configuring smart tunnel policies:

Detailed Steps

	Command	Purpose
Step 1	<code>webvpn</code>	Switches to webvpn configuration mode.
Step 2	<code>[no] smart-tunnel network <network name> ip <ip> <netmask></code>	Creates a list of hosts to use for configuring smart tunnel policies. <i><network name></i> is the name to apply to the tunnel policy. <i><ip></i> is the IP address of the network. <i><netmask></i> is the netmask of the network.
Step 3	<code>[no] smart-tunnel network <network name> host <host mask></code>	Establishes the hostname mask, such as *.cisco.com.
Step 4	<code>[no] smart-tunnel tunnel-policy ((excludespecified tunnelspecified) <network name> tunnelall)</code> OR <code>[no] smart-tunnel tunnel-policy ((excludespecified tunnelspecified) <network name> tunnelall)</code>	Applies smart tunnel policies to a particular group or user policy. <i><network name></i> is a list of networks to be tunneled. <i><tunnelall></i> makes everything tunneled (encrypted). <i>tunnelspecified</i> tunnels only networks specified by network name. <i>excludespecified</i> tunnels only networks that are outside of the networks specified by network name.

Configuring and Applying a Smart Tunnel Tunnel Policy

Like the split tunnel configuration in SSL VPN client, the smart tunnel tunnel policy is a per group-policy/username configuration. Each group policy/username references a globally configured list of networks:

Detailed Steps

	Command	Purpose
Step 1	<code>webvpn</code>	Switches to webvpn configuration mode.
Step 2	<code>config-group-webvpn</code>	Switches to config-group-webvpn configuration mode.
Step 3	<code>[no] smart-tunnel tunnel-policy ((excludespecified tunnelspecified) <network name> tunnelall)</code> OR <code>[no] smart-tunnel tunnel-policy ((excludespecified tunnelspecified) <network name> tunnelall)</code>	References a globally configured list of networks. <i><network name></i> is a list of networks to be tunneled. <i><tunnelall></i> makes everything tunneled (encrypted). <i>tunnelspecified</i> tunnels only networks specified by network name. <i>excludespecified</i> tunnels only networks that are outside of the networks specified by network name.

	Command	Purpose
Step 4	<pre> ciscoasa(config-webvpn)# [no] smart-tunnel network <network name> ip <ip> <netmask> ciscoasa(config-webvpn)# [no] smart-tunnel network <network name> host <host mask> <network name>Name of network to apply to tunnel policy <ip address>IP address of a network <netmask>Netmask of a network <host mask>Hostname mask, such as *.cisco.com Example: ciscoasa(config-webvpn)# smart-tunnel network inventory ip 10.5.2.2 ciscoasa(config-webvpn)# smart-tunnel network inventory host www.example.com ciscoasa(config-group-webvpn) # smart-tunnel tunnel-policy tunnelspecified inventory (Optional) ciscoasa(config-group-webvpn) # homepage value http://www.example.com ciscoasa(config-group-webvpn) # homepage use-smart-tunnel (Optional) ciscoasa(config-webvpn) # smart-tunnel notification-icon </pre>	<p>Applies a tunnel policy to a group-policy/user policy. One command specifies host and the other specifies network IPs; use only one.</p> <p>Smart tunnel tunnel policy configuration is a good option when a vendor wants to provide a partner with clientless access to an internal inventory server page upon login without going through the clientless portal first. Creates a tunnel policy that contains only one host (assuming the inventory pages are hosted at www.example.com (10.5.2.2), and you want to configure both IP address and name for the hosts.</p> <p>Applies the tunnel-specified tunnel policy to the partner's group policy.</p> <p>Specifies the group policy home page and enables smart tunnel on it.</p> <p>By default, configuration of a smart tunnel application is not necessary because all processes initiated by the browser with smart tunnel enabled have access to the tunnel. However, because no portal is visible, you may want to enable the logout notification icon.</p>

Specifying Servers for Smart Tunnel Auto Sign-on

The Add Smart Tunnel Auto Sign-on Server List dialog box lets you add one or more lists of servers for which to automate the submission of login credentials during smart tunnel setup. The Edit Smart Tunnel Auto-signon Server List dialog box lets you modify the contents of these lists. This feature is available for Internet Explorer and Firefox.

To create a list of servers for which to automate the submission of credentials in smart tunnel connections, enter the following commands:

Detailed Steps

	Command	Purpose
Step 1	<code>webvpn</code>	Switches to webvpn configuration mode.
Step 2	<code>smart-tunnel auto-signon list [use-domain] {ip ip-address [netmask] host hostname-mask}</code>	Use for each server you want to add to the server list <ul style="list-style-type: none"> <code>list</code>—names the list of remote servers. Use quotation marks around the name if it includes a space. The string can be up to 64 characters. The ASA creates the list if it is not already present in the configuration. Otherwise, it adds the entry to the list. Assign a name that will help you to distinguish. <code>use-domain</code> (optional)—Adds the Windows domain to the username if authentication requires it. If you enter this keyword, be sure to specify the domain name when assigning the smart tunnel list to one or more group policies, or usernames. <code>ip</code>—Specifies the server by its IP address and netmask. <code>ip-address[netmask]</code>—Identifies the sub-network of hosts to auto-authenticate to. <code>host</code>—Specifies the server by its host name or wildcard mask. Using this option protects the configuration from dynamic changes to IP addresses. <code>hostname-mask</code>—Specifies which host name or wildcard mask to auto-authenticate to.
Step 3	(Optional) <code>[no] smart-tunnel auto-signon list [use-domain] {ip ip-address [netmask] host hostname-mask}</code>	Removes an entry from the list of servers, specifying both the list and IP address or hostname as it appears in the ASA configuration.
Step 4	<code>show running-config webvpn smart-tunnel</code>	Displays the smart tunnel auto sign-on list entries.
Step 5	<code>config-webvpn</code>	Switches to config-webvpn configuration mode.
Step 6	<code>smart-tunnel auto-signon HR use-domain ip 192.32.22.56 255.255.255.0</code>	Adds all hosts in the subnet and adds the Windows domain to the username if authentication requires it.
Step 7	(Optional) <code>no smart-tunnel auto-signon HR use-domain ip 192.32.22.56 255.255.255.0</code>	Removes that entry from the list and the list named HR if the entry removed is the only entry in the list.
Step 8	<code>no smart-tunnel auto-signon HR</code>	Removes the entire list from the ASA configuration.
Step 9	<code>smart-tunnel auto-signon intranet host *.exampledomain.com</code>	Adds all hosts in the domain to the smart tunnel auto sign-on list named intranet.
Step 10	<code>no smart-tunnel auto-signon intranet host *.exampledomain.com</code>	Removes that entry from the list.

Following the configuration of the smart tunnel auto sign-on server list, you must assign it to a group policy or a local user policy for it to become active, as described in the next section.

Adding or Editing a Smart Tunnel Auto Sign-on Server Entry

This section describes how to list the servers for which to provide auto sign-on in smart tunnel connections and assign the lists to group policies or usernames.

Prerequisites

You must use the **smart-tunnel auto-signon list** command to create a list of servers first. You can assign only one list to a group policy or username.

Restrictions

- The smart-tunnel auto sign-on feature supports only applications communicating HTTP and HTTPS using the Microsoft WININET library. For example, Microsoft Internet Explorer uses the WININET dynamic linked library to communicate with web servers.
- Firefox requires the administrator to specify hosts using an exact host name or IP address (instead of a host mask with wild cards, a subnet using IP addresses, or a netmask). For example, within Firefox, you cannot enter *.cisco.com and expect auto sign-on to host email.cisco.com.

Detailed Steps

To enable smart tunnel auto sign-on in clientless (browser-based) SSL VPN sessions, use the following commands:

	Command	Purpose
Step 1	<code>webvpn</code>	Switches to webvpn configuration mode.
Step 2	<code>group-policy webvpn</code>	Switches to group-policy webvpn configuration mode.
	OR <code>username webvpn</code>	Switches to username webvpn configuration mode.
Step 3	<code>smart-tunnel auto-signon enable</code>	Enables smart tunnel auto sign-on clientless SSL VPN sessions.

	Command	Purpose
Step 4	(Optional) <pre>[no] smart-tunnel auto-signon enable list [domain domain] [host host name] [realm realm string] [port port number]</pre>	<p>Disables smart tunnel auto sign-on clientless SSL VPN session, removes it from the group policy or username, and uses the default.</p> <ul style="list-style-type: none"> • <i>list</i>—The name of a smart tunnel auto sign-on list already present in the ASA webvpn configuration. • (Optional) <i>domain domain</i>—The name of the domain to be added to the username during authentication. If you enter a domain, enter the use-domain keyword in the list entries. • <i>host</i>—Specifies the server by its host name or wildcard mask. Using this option protects the configuration from dynamic changes to IP addresses. • <i>port</i>—Specifies which port performs auto sign-on. For Firefox, if no port number is specified, auto sign is performed on HTTP and HTTPS, accessed by the default port numbers 80 and 443 respectively. • <i>realm</i>—Configures a realm for the authentication. Realm is associated with the protected area of the website and is passed back to the browser either in the authentication prompt or in the HTTP headers during authentication. Once auto-sign is configured and a realm string is specified, users can configure the realm string on a web application (such as Outlook Web Access) and access web applications without signing on.
Step 5	<pre>show running-config webvpn smart-tunnel</pre>	Views the smart tunnel auto sign-on list entries in the SSL VPN configuration.
Step 6	<pre>smart-tunnel auto-signon enable HR</pre>	Enables the smart tunnel auto sign-on list named HR.
Step 7	<pre>smart-tunnel auto-signon enable HR domain CISCO</pre>	Enables the smart tunnel auto sign-on list named HR and adds the domain named CISCO to the username during authentication.
Step 8	(Optional) <pre>no smart-tunnel auto-signon enable HR</pre>	Removes the smart tunnel auto sign-on list named HR from the group policy and inherits the smart tunnel auto sign-on list command from the default group policy.

Automating Smart Tunnel Access

To start smart tunnel access automatically upon user login, enter the following commands:

Requirements

For Mac OS X, you must click the link for the application in the portal's Application Access panel, with or without auto-start configured.

Detailed Steps

	Command	Purpose
Step 1	<code>webvpn</code>	Switches to webvpn configuration mode.
Step 2	<code>group-policy webvpn</code>	Switches to group-policy webvpn configuration mode.
	OR <code>username webvpn</code>	Switches to username webvpn configuration mode.
Step 3	<code>smart-tunnel auto-start list</code>	Starts smart tunnel access automatically upon user login. <i>list</i> is the name of the smart tunnel list already present.
	Example: <code>hostname(config-group-policy) # webvpn</code> <code>hostname(config-group-webvpn) # smart-tunnel auto-start apps1</code>	Assigns the smart tunnel list named <code>apps1</code> to the group policy.
Step 4	<code>show running-config webvpn</code>	Views the smart tunnel list entries in the SSL VPN configuration.
Step 5	(Optional) <code>no smart-tunnel</code>	Removes the smart-tunnel command from the group policy or username and reverts to the default.

Enabling and Disabling Smart Tunnel Access

By default, smart tunnels are disabled.

Detailed Steps

	Command	Purpose
Step 1	<code>webvpn</code>	Switches to webvpn configuration mode.
Step 2	<code>group-policy webvpn</code>	Switches to group-policy webvpn configuration mode.
	OR <code>username webvpn</code>	Switches to username webvpn configuration mode.
Step 3	<code>smart-tunnel [enable list disable]</code>	Enables smart tunnel access. <i>list</i> is the name of the smart tunnel list already present. You do not have to start smart tunnel access manually if you entered smart-tunnel auto-start list from the previous table.
	Example: <code>hostname(config-group-policy) # webvpn</code> <code>hostname(config-group-webvpn) # smart-tunnel enable apps1</code>	Assigns the smart tunnel list named <code>apps1</code> to the group policy.

	Command	Purpose
Step 4	<code>show running-config webvpn</code>	Shows the smart tunnel list entries in the SSL VPN configuration.
Step 5	(Optional) <code>no smart-tunnel</code>	Removes the smart-tunnel command from the group policy or local user policy and reverts to the default group-policy.
Step 6	(Optional) <code>smart-tunnel disable</code>	Disables smart tunnel access.

Logging Off Smart Tunnel

This section describes how to ensure that the smart tunnel is properly logged off. Smart tunnel can be logged off when all browser windows have been closed, or you can right click the notification icon and confirm log out.



Note

We strongly recommend the use of the logout button on the portal. This method pertains to clientless SSL VPNs and logs off regardless of whether smart tunnel is used or not. The notification icon should be used only when using standalone applications without the browser.

When Its Parent Process Terminates

This practice requires the closing of all browsers to signify log off. The smart tunnel lifetime is now tied to the starting process lifetime. For example, if you started a smart tunnel from Internet Explorer, the smart tunnel is turned off when no iexplore.exe is running. Smart tunnel can determine that the VPN session has ended even if the user closed all browsers without logging out.



Note

In some cases, a lingering browser process is unintentional and is strictly a result of an error. Also, when a Secure Desktop is used, the browser process can run in another desktop even if the user closed all browsers within the secure desktop. Therefore, smart tunnel declares all browser instances gone when no more visible windows exist in the current desktop.

Detailed Steps

	Command	Purpose
Step 1	<code>[no] smart-tunnel notification-icon</code>	<p>Allows administrators to turn on the notification icon on a global basis. This command configures log out properties and controls whether the user is presented with a logout icon for logging out, as opposed to having logout triggered by closing browser windows. This command also controls logging off when a parent process terminates, which is automatically turned on or off when the notification icon is turned on or off.</p> <p><i>notification-icon</i> is the keyword that specifies when to use the icon for logout.</p> <p>Note The <i>no</i> version of this CLI is the default, in which case, closing all browser windows logs off the SSL VPN session.</p> <p>Note Portal logout still takes effect and is not impacted.</p>
Step 2	<code>*.webvpn.</code>	When using a proxy and adding to the proxy list exception, it ensures that smart tunnel is properly closed when you log off, regardless of icon usage or not.

With A Notification Icon

You may also choose to disable logging off when a parent process terminates so that a session survives if you close a browser. For this practice, you use a notification icon in the system tray to log out. The icon remains until the next connection is tried. You may have to wait for the session status to update in the system tray.



Note This icon is an alternative way to log out of SSL VPN. It is not an indicator of VPN session status.

Configuring Port Forwarding

The following sections describe port forwarding and how to configure it:

- [Information About Port Forwarding, page 74-65](#)
- [Configuring DNS for Port Forwarding](#)
- [Adding Applications to Be Eligible for Port Forwarding](#)[Assigning a Port Forwarding List](#)
- [Automating Port Forwarding](#)

Information About Port Forwarding

Port forwarding lets users access TCP-based applications over a clientless SSL VPN connection. Such applications include the following:

- Lotus Notes
- Microsoft Outlook
- Microsoft Outlook Express
- Perforce
- Sametime
- Secure FTP (FTP over SSH)
- SSH
- TELNET
- Windows Terminal Service
- XDDTS

Other TCP-based applications may also work, but we have not tested them. Protocols that use UDP do not work.

Port forwarding is the legacy technology for supporting TCP-based applications over a clientless SSL VPN connection. You may choose to use port forwarding because you have built earlier configurations that support this technology.

Consider the following alternatives to port forwarding:

- Smart tunnel access offers the following advantages to users:
 - Smart tunnel offers better performance than plug-ins.
 - Unlike port forwarding, smart tunnel simplifies the user experience by not requiring the user connection of the local application to the local port.
 - Unlike port forwarding, smart tunnel does not require users to have administrator privileges.
- Unlike port forwarding and smart tunnel access, a plug-in does not require the client application to be installed on the remote computer.

When configuring port forwarding on the ASA, you specify the port the application uses. When configuring smart tunnel access, you specify the name of the executable file or its path.

Prerequisites

- The remote host must be running a 32-bit version of one of the following:
 - Microsoft Windows Vista, Windows XP SP2 or SP3; or Windows 2000 SP4.
 - Apple Mac OS X 10.4 or 10.5 with Safari 2.0.4(419.3).
 - Fedora Core 4
- The remote host must also be running Sun JRE 1.5 or later.
- Browser-based users of Safari on Mac OS X 10.5.3 must identify a client certificate for use with the URL of the ASA, once with the trailing slash and once without it, because of the way Safari interprets URLs. For example,
 - `https://example.com/`
 - `https://example.com`

For details, go to the [Safari, Mac OS X 10.5.3: Changes in client certificate authentication](#).

- Users of Microsoft Windows Vista who use port forwarding or smart tunnels must add the URL of the ASA to the Trusted Site zone. To access the Trusted Site zone, they must start Internet Explorer and choose the **Tools > Internet Options > Security** tab. Vista users can also disable Protected Mode to facilitate smart tunnel access; however, we recommend against this method because it increases the computer's vulnerability to attack.
- Make sure Sun Microsystems Java Runtime Environment (JRE) 1.5.x or later is installed on the remote computers to support port forwarding (application access) and digital certificates. If JRE 1.4.x is running and the user authenticates with a digital certificate, the application fails to start because JRE cannot access the web browser certificate store.

Restrictions

- Port forwarding supports only TCP applications that use static TCP ports. Applications that use dynamic ports or multiple TCP ports are not supported. For example, SecureFTP, which uses port 22, works over clientless SSL VPN port forwarding, but standard FTP, which uses ports 20 and 21, does not.
- Port forwarding does not support protocols that use UDP.
- Port forwarding does not support Microsoft Outlook Exchange (MAPI) proxy. However, you can configure smart tunnel support for Microsoft Office Outlook in conjunction with Microsoft Outlook Exchange Server.
- A stateful failover does not retain sessions established using Application Access (either port forwarding or smart tunnel access). Users must reconnect following a failover.
- Port forwarding does not support connections to personal digital assistants.
- Because port forwarding requires downloading the Java applet and configuring the local client, and because doing so requires administrator permissions on the local system, it is unlikely that users will be able to use applications when they connect from public remote systems.

The Java applet displays in its own window on the end user HTML interface. It shows the contents of the list of forwarded ports available to the user, as well as which ports are active, and amount of traffic in bytes sent and received.

- The port forwarding applet displays the local port and the remote port as the same when the local IP address 127.0.0.1 is being used and cannot be updated by the clientless SSL VPN connection from the ASA. As a result, the ASA creates new IP addresses 127.0.0.2, 127.0.0.3, and so on for local proxy IDs. Because you can modify the hosts file and use different loopbacks, the remote port is used as the local port in the applet. To connect, you can use Telnet with the host name, without specifying the port. The correct local IP addresses are available in the local hosts file.

Configuring DNS for Port Forwarding

Port Forwarding forwards the domain name of the remote server or its IP address to the ASA for resolution and connection. In other words, the port forwarding applet accepts a request from the application and forwards it to the ASA. The ASA makes the appropriate DNS queries and establishes the connection on behalf of the port forwarding applet. The port forwarding applet only makes DNS queries to the ASA. It updates the host file so that when a port forwarding application attempts a DNS query, the query redirects to a loopback address. Configure the ASA to accept the DNS requests from the port forwarding applet as follows:

	Command	Purpose
Step 1	<code>dns server-group</code> Example: hostname(config)# <code>dns server-group example.com</code> hostname(config-dns-server-group)# <code>domain-name example.com</code> hostname(config-dns-server-group)# <code>name-server 192.168.10.10</code>	Enters the dns server-group mode. Configures a DNS server group named example.com.
Step 2	<code>domain-name</code>	Specifies the domain name. The default setting of domain-name is DefaultDNS.
Step 3	<code>name-server</code>	Resolves the domain name to an IP address.
Step 4	<code>webvpn</code>	Switches to webvpn configuration mode.
Step 5	<code>tunnel-group webvpn</code>	Switches to tunnel-group webvpn configuration mode.
Step 6	(Required only if you are using a domain name other than the default one [DefaultDNS]) <code>dns-group</code> Example: asa2(config-dns-server-group)# <code>exit</code> asa2(config)# <code>tunnel-group DefaultWEBVPNGroup webvpn-attributes</code> asa2(config-tunnel-webvpn)# <code>dns-group example.com</code>	Specifies the domain name the tunnel groups will use. By default, the security appliance assigns the Default WEBVPNGroup as the default tunnel group for clientless connections. Follow this instruction if the ASA uses that tunnel group to assign settings to the clientless connections. Otherwise, follow this step for each tunnel configured for clientless connections.

Adding Applications to Be Eligible for Port Forwarding

The clientless SSL VPN configuration of each ASA supports *port forwarding lists*, each of which specifies local and remote ports used by the applications for which you want to provide access. Because each group policy or username supports only one port forwarding list, you must group each set of applications to be supported into a list. To display the port forwarding list entries already present in the ASA configuration, enter the following commands:

Detailed Steps

	Command	Purpose
Step 1	<code>show run webvpn port-forward</code>	Displays the port forwarding list entries already present in the ASA configuration.
Step 2	<code>webvpn</code>	Switches to webvpn configuration mode.

Following the configuration of a port forwarding list, assign the list to group policies or usernames, as described in the next section.

- Step 7** (Optional) Highlight a port forwarding list and click **Assign** to assign the selected list to one or more group policies, dynamic access policies, or user policies.

Assigning a Port Forwarding List

You can add or edit a named list of TCP applications to associate with users or group policies for access over clientless SSL VPN connections. For each group policy and username, you can configure clientless SSL VPN to do one of the following:

- Start port forwarding access automatically upon user login.



Note

These options are mutually exclusive for each group policy and username. Use only one.

Prerequisites

Before initiating the **port-forward enable list_name** command, the user is required to start port forwarding manually, using the **Application Access > Start Applications** button on the clientless SSL VPN portal page.

Detailed Steps

These commands are available to each group policy and username. The configuration of each group policy and username supports only one of these commands at a time, so when you enter one, the ASA replaces the one present in the configuration of the group policy or username in question with the new one, or in the case of the last command, simply removes the **port-forward** command from the group policy or username configuration.

	Command	Purpose
Step 1	<code>port-forward auto-start list_name</code>	Starts port forwarding automatically upon user login.
	OR	
	<code>port-forward enable list_name</code>	Enables port forwarding upon user login.
	OR	
	<code>port-forward disable</code>	Prevents port forwarding.
	OR	
	<code>no port-forward [auto-start list_name enable list_name disable]</code>	Removes a port-forward command from the group policy or username configuration, which then inherits the [no] port-forward command from the default group-policy. The keywords following the no port-forward command are optional, however, they restrict the removal to the named port-forward command.

For details, go to the section that addresses the option you want to use.

Automating Port Forwarding

To start port forwarding automatically upon user login, enter the following commands:

Detailed Steps

	Command	Purpose
Step 1	<code>webvpn</code>	Switches to webvpn configuration mode.
Step 2	<code>group-policy webvpn</code> <code>username webvpn</code>	Switches to group-policy webvpn configuration mode. Switches to username webvpn configuration mode.
Step 3	<code>port-forward auto-start list_name</code> Example: <code>hostname(config-group-policy) # webvpn</code> <code>hostname(config-group-webvpn) # port-forward</code> <code>auto-start apps1</code>	Starts port forwarding automatically upon user login. <i>list_name</i> names the port forwarding list already present in the ASA webvpn configuration. You cannot assign more than one port forwarding list to a group policy or username. Assigns the port forwarding list named <code>apps1</code> to the group policy.
Step 4	<code>show run webvpn port-forward</code>	Displays the port forwarding list entries present in the ASA configuration.
Step 5	(Optional) <code>no port-forward</code>	Removes the port-forward command from the group policy or username and reverts to the default.

Enabling and Disabling Port Forwarding

By default, port forwarding is disabled.

Detailed Steps

	Command	Purpose
Step 1	<pre>port-forward [enable list_name / disable]</pre> <p>Example:</p> <pre>hostname(config-group-policy)# webvpn hostname(config-group-webvpn)# port-forward enable apps1</pre>	<p>Enables port forwarding. You do not have to start port forwarding manually if you entered port-forward auto-start list_name from the previous table.</p> <p><i>list_name</i> is the name of the port forwarding list already present in the ASA webvpn configuration. You cannot assign more than one port forwarding list to a group policy or username.</p> <p>Assigns the port forwarding list named apps1 to the group policy.</p>
Step 2	<pre>show running-config port-forward</pre>	Views the port forwarding list entries.
Step 3	<p>(Optional)</p> <pre>no port-forward</pre>	Removes the port-forward command from the group policy or username and reverts to the default.
Step 4	<p>(Optional)</p> <pre>port-forward disable</pre>	Disables port forwarding.

- Assign—Highlight an SSO server and click this button to assign the selected server to one or more VPN group policies or user policies.

Application Access User Notes

The following sections provide information about using application access:

- [Using Application Access on Vista](#)
- [Closing Application Access to Prevent hosts File Errors](#)
- [Recovering from hosts File Errors When Using Application Access](#)

Using Application Access on Vista

Users of Microsoft Windows Vista who use smart tunnels or port forwarding must add the URL of the ASA to the Trusted Site zone. To access the Trusted Site zone, they must start Internet Explorer and choose the **Tools > Internet Options > Security** tab. Vista users can also disable Protected Mode to facilitate smart tunnel access; however, we recommend against this method because it increases the computer's vulnerability to attack.

Closing Application Access to Prevent hosts File Errors

To prevent hosts file errors that can interfere with Application Access, close the Application Access window properly when you finish using Application Access. To do so, click the close icon.

Recovering from hosts File Errors When Using Application Access

The following errors can occur if you do not close the Application Access window properly:

- The next time you try to start Application Access, it might be disabled; you receive a Backup HOSTS File Found error message.
- The applications themselves might be disabled or might malfunction, even when you are running them locally.

These errors can result from terminating the Application Access window in any improper way. For example:

- Your browser crashes while you are using Application Access.
- A power outage or system shutdown occurs while you are using Application Access.
- You minimize the Application Access window while you are working, then shut down your computer with the window active (but minimized).

This section includes the following topics:

- [Understanding the hosts File](#)
- [Stopping Application Access Improperly](#)
- [Reconfiguring a Host's File Automatically Using Clientless SSL VPN](#)
- [Reconfiguring hosts File Manually](#)

Understanding the hosts File

The hosts file on your local system maps IP addresses to host names. When you start Application Access, clientless SSL VPN modifies the hosts file, adding clientless SSL VPN-specific entries. Stopping Application Access by properly closing the Application Access window returns the file to its original state.

Before invoking Application Access...	hosts file is in original state.
When Application Access starts....	<ul style="list-style-type: none"> • Clientless SSL VPN copies the hosts file to hosts.webvpn, thus creating a backup. • Clientless SSL VPN then edits the hosts file, inserting clientless SSL VPN-specific information.
When Application Access stops...	<ul style="list-style-type: none"> • Clientless SSL VPN copies the backup file to the hosts file, thus restoring the hosts file to its original state. • Clientless SSL VPN deletes hosts.webvpn.
After finishing Application Access...	hosts file is in original state.



Note

Microsoft anti-spyware software blocks changes that the port forwarding Java applet makes to the hosts file. See www.microsoft.com for information on how to allow hosts file changes when using anti-spyware software.

Stopping Application Access Improperly

When Application Access terminates abnormally, the `hosts` file remains in a clientless SSL VPN-customized state. Clientless SSL VPN checks the state the next time you start Application Access by searching for a `hosts.webvpn` file. If it finds one, a `Backup HOSTS File Found` error message appears, and Application Access is temporarily disabled.

Once you shut down Application Access improperly, you leave your remote access client/server applications in limbo. If you try to start these applications without using clientless SSL VPN, they might malfunction. You might find that hosts that you normally connect to are unavailable. This situation could commonly occur if you run applications remotely from home, fail to quit the Application Access window before shutting down the computer, then try to run the applications later from the office.

Reconfiguring a Host's File Automatically Using Clientless SSL VPN

If you are able to connect to your remote access server, follow these steps to reconfigure the host's file and re-enable both Application Access and the applications.

Detailed Steps

-
- Step 1** Start clientless SSL VPN and log in. The home page opens.
- Step 2** Click the **Applications Access** link. A `Backup HOSTS File Found` message appears.
- Step 3** Choose one of the following options:
- **Restore from backup**—Clientless SSL VPN forces a proper shutdown. It copies the `hosts.webvpn` backup file to the `hosts` file, restoring it to its original state, then deletes `hosts.webvpn`. You then have to restart Application Access.
 - **Do nothing**—Application Access does not start. The remote access home page reappears.
 - **Delete backup**—Clientless SSL VPN deletes the `hosts.webvpn` file, leaving the `hosts` file in its clientless SSL VPN-customized state. The original `hosts` file settings are lost. Application Access then starts, using the clientless SSL VPN-customized `hosts` file as the new original. Choose this option only if you are unconcerned about losing `hosts` file settings. If you or a program you use might have edited the `hosts` file after Application Access has shut down improperly, choose one of the other options, or edit the `hosts` file manually. (See “[Reconfiguring hosts File Manually](#).”)
-

Reconfiguring hosts File Manually

If you are not able to connect to your remote access server from your current location, or if you have customized the `hosts` file and do not want to lose your edits, follow these steps to reconfigure the `hosts` file and reenable both Application Access and the applications.

Detailed Steps

-
- Step 1** Locate and edit your `hosts` file. The most common location is `c:\windows\system32\drivers\etc\hosts`.
- Step 2** Check to see if any lines contain the string: `# added by WebVpnPortForward`
If any lines contain this string, your `hosts` file is clientless SSL VPN-customized. If your `hosts` file is clientless SSL VPN-customized, it looks similar to the following example:
- ```
server1 # added by WebVpnPortForward
```

```

server1.example.com invalid.cisco.com # added by WebVpnPortForward
server2 # added by WebVpnPortForward
server2.example.com invalid.cisco.com # added by WebVpnPortForward
server3 # added by WebVpnPortForward
server3.example.com invalid.cisco.com # added by WebVpnPortForward

Copyright (c) 1993-1999 Microsoft Corp.
#
This is a sample HOSTS file used by Microsoft TCP/IP for Windows.
#
This file contains the mappings of IP addresses to host names. Each
entry should be kept on an individual line. The IP address should
be placed in the first column followed by the corresponding host name.
The IP address and the host name should be separated by at least one
space.
#
Additionally, comments (such as these) may be inserted on individual
lines or following the machine name denoted by a '#' symbol.
#
For example:
#
102.54.94.97 cisco.example.com # source server
38.25.63.10 x.example.com # x client host

123.0.0.1 localhost

```

- Step 3** Delete the lines that contain the string: # added by WebVpnPortForward
- Step 4** Save and close the file.
- Step 5** Start clientless SSL VPN and log in.  
The home page appears.
- Step 6** Click the **Application Access** link.  
The Application Access window appears. Application Access is now enabled.
- 

## Configuring File Access

Clientless SSL VPN serves remote users with HTTPS portal pages that interface with proxy CIFS and/or FTP clients running on the ASA. Using either CIFS or FTP, clientless SSL VPN provides users with network access to the files on the network, to the extent that the users meet user authentication requirements and the file properties do not restrict access. The CIFS and FTP clients are transparent; the portal pages delivered by clientless SSL VPN provide the appearance of direct access to the file systems.

When a user requests a list of files, clientless SSL VPN queries the server designated as the master browser for the IP address of the server containing the list. The ASA gets the list and delivers it to the remote user on a portal page.

Clientless SSL VPN lets the user invoke the following CIFS and FTP functions, depending on user authentication requirements and file properties:

- Navigate and list domains and workgroups, servers within a domain or workgroup, shares within a server, and files within a share or directory
- Create directories
- Download, upload, rename, move, and delete files

The ASA uses a master browser, WINS server, or DNS server, typically on the same network as the ASA or reachable from that network, to query the network for a list of servers when the remote user clicks **Browse Networks** in the menu of the portal page or on the toolbar displayed during the clientless SSL VPN session.

The master browser or DNS server provides the CIFS/FTP client on the ASA with a list of the resources on the network, which clientless SSL VPN serves to the remote user.

**Note**

Before configuring file access, you must configure the shares on the servers for user access.

## CIFS File Access Requirement and Limitation

To access `\\server\share\subfolder\personal` folder, the user must have list permission for all points above `personal` folder.

Clientless SSL VPN does not support the Copy and Paste buttons displayed on the CIFS browser. Users must click **Download** to copy files from CIFS directories to the local desktop.

The CIFS browse server feature does not support double-byte character share names (share names exceeding 13 characters in length). This only affects the list of folders displayed, and does not affect user access to the folder. As a workaround, you can pre-configure the bookmark(s) for the CIFS folder(s) that use double-byte share names, or the user can enter the URL or bookmark of the folder in the format `cifs://server/<long-folder-name>`. For example:

```
cifs://server/Do you remember?
cifs://server/Do%20you%20remember%3F
```

## Adding Support for File Access

Configure file access as follows:

**Note**

The first procedure describes how to specify the master browser and WINS servers. As an alternative, you can use ASDM to configure URL lists and entries that provide access to file shares.

Adding a share in ASDM does not require a master browser or a WINS server. However, it does not provide support for the Browse Networks link. You can use a hostname or an IP address to refer to ServerA when entering this command. If you use a hostname, the ASA requires a DNS server to resolve it to an IP address.

### Detailed Steps

|        | Command                          | Purpose                                             |
|--------|----------------------------------|-----------------------------------------------------|
| Step 1 | <code>webvpn</code>              | Switches to webvpn configuration mode.              |
| Step 2 | <code>tunnel-group webvpn</code> | Switches to tunnel-group webvpn configuration mode. |

|        | Command                                                                                                                                                                                                                                                                                                               | Purpose                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|--------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Step 3 | <p><code>nbns-server {IPaddress   hostname} [master] [timeout timeout] [retry retries]</code></p> <p><b>Example:</b></p> <pre>hostname(config-tunnel-webvpn)# nbns-server 192.168.1.20 master hostname(config-tunnel-webvpn)# nbns-server 192.168.1.41 hostname(config-tunnel-webvpn)# nbns-server 192.168.1.47</pre> | <p>Browses a network or domain for each NetBIOS Name Server (NBNS).</p> <ul style="list-style-type: none"> <li>• <b>master</b> is the computer designated as the master browser. The master browser maintains the list of computers and shared resources. Any NBNS server you identify with this command without entering the master portion of the command must be a Windows Internet Naming Server (WINS). Specify the master browser first, then specify the WINS servers. You can specify up to three servers, including the master browser, for a connection profile.</li> <li>• <i>retries</i> is the number of times to retry queries to the NBNS server. The ASA recycles through the list of servers this number of times before sending an error message. The default value is 2; the range is 1 through 10.</li> <li>• <i>timeout</i> is the number of seconds the ASA waits before sending the query again, to the same server if it is the only one, or another server if there are more than one. The default timeout is 2 seconds; the range is 1 to 30 seconds.</li> </ul> |
| Step 4 | <p><code>show tunnel-group webvpn-attributes</code></p>                                                                                                                                                                                                                                                               | <p>Displays the NBNS servers already present in the connection profile configuration.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |

|        | Command                                                                                                                                                                                                                                                                     | Purpose                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|--------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Step 5 | (Optional)<br><code>character-encoding charset</code><br><br><b>Example:</b><br><pre>hostname(config-webvpn)# character-encoding shift_jis hostname(config-webvpn)# customization DfltCustomization hostname(config-webvpn-custom)# page style background-color:white</pre> | <p>Specifies the character set to encode in clientless SSL VPN portal pages delivered to remote users. By default, the encoding type set on the remote browser determines the character set for clientless SSL VPN portal pages, so you need to set the character encoding only if it is necessary to ensure proper encoding on the browser.</p> <p><i>Charset</i> is a string consisting of up to 40 characters, and equal to one of the valid character sets identified in <a href="http://www.iana.org/assignments/character-sets">http://www.iana.org/assignments/character-sets</a>. You can use either the name or the alias of a character set listed on that page. Examples include iso-8859-1, shift_jis, and ibm850.</p> <p><b>Note</b> The character-encoding and file-encoding values do not exclude the font family to be used by the browser. You need to complement the setting of one these values with the <b>page style</b> command in webvpn customization command mode to replace the font family if you are using Japanese Shift_JIS character encoding, as shown in the following example, or enter the <b>no page style</b> command in webvpn customization command mode to remove the font family.</p> <p>Sets the character-encoding attribute to support Japanese Shift_JIS characters, removes the font family, and retains the default background color.</p> |
| Step 6 | (Optional)<br><code>file-encoding {server-name   server-ip-address} charset</code><br><br><b>Example:</b><br><pre>hostname(config-webvpn)# file-encoding 10.86.5.174 cp860</pre>                                                                                            | <p>Specifies the encoding for clientless SSL VPN portal pages from specific CIFS servers. Thus, you can use different file-encoding values for CIFS servers that require different character encodings.</p> <p>Sets the file-encoding attribute of the CIFS server 10.86.5.174 to support IBM860 (alias “CP860”) characters/.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |

For a complete description of these commands, see the *Cisco Security Appliance Command Reference*.

## Ensuring Clock Accuracy for SharePoint Access

The clientless SSL VPN server on the ASA uses cookies to interact with applications such as Microsoft Word on the endpoint. The cookie expiration time set by the ASA can cause Word to malfunction when accessing documents on a SharePoint server if the time on the ASA is incorrect. To prevent this malfunction, set the ASA clock properly. We recommend configuring the ASA to dynamically synchronize the time with an NTP server. For instructions, see “[Setting the Date and Time](#).”

## Using Clientless SSL VPN with PDAs

You can access clientless SSL VPN from your Pocket PC or other certified personal digital assistant device. Neither the ASA administrator nor the clientless SSL VPN user need do anything special to use clientless SSL VPN with a certified PDA.

Cisco has certified the following PDA platform:

HP iPaq H4150  
Pocket PC 2003  
Windows CE 4.20.0, build 14053  
Pocket Internet Explorer (PIE)  
ROM version 1.10.03ENG  
ROM Date: 7/16/2004

Some differences in the PDA version of clientless SSL VPN exist:

- A banner web page replaces the popup clientless SSL VPN window.
- An icon bar replaces the standard clientless SSL VPN floating toolbar. This bar displays the Go, Home and Logout buttons.
- The Show Toolbar icon is not included on the main clientless SSL VPN portal page.
- Upon clientless SSL VPN logout, a warning message provides instructions for closing the PIE browser properly. If you do not follow these instructions and you close the browser window in the common way, PIE does not disconnect from clientless SSL VPN or any secure website that uses HTTPS.

### Restrictions

- Clientless SSL VPN supports OWA 2000 and OWA 2003 Basic Authentication. If Basic Authentication is not configured on an OWA server and a clientless SSL VPN user attempts to access that server, access is denied.
- Unsupported clientless SSL VPN features:
  - Application Access and other Java-dependent features.
  - HTTP proxy.
  - The Citrix Metaframe feature (if the PDA does not have the corresponding Citrix ICA client software).

# Using E-Mail over Clientless SSL VPN

Clientless SSL VPN supports several ways to access e-mail. This section includes the following methods:

- [Configuring E-mail Proxies](#)
- [Configuring Web E-mail: MS Outlook Web App](#)

## Configuring E-mail Proxies

Clientless SSL VPN supports IMAP4S, POP3S, and SMTPS e-mail proxies. The following attributes apply globally to e-mail proxy users.

### Restrictions

E-mail clients such as MS Outlook, MS Outlook Express, and Eudora lack the ability to access the certificate store.

### Detailed Steps

|               | Command                     | Purpose                                                                                                                                                                                                                                      |
|---------------|-----------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Step 1</b> | accounting-server-group     | Specifies the previously configured accounting servers to use with e-mail proxy.                                                                                                                                                             |
| <b>Step 2</b> | authentication              | Specifies the authentication method(s) for e-mail proxy users. The default values are as follows: <ul style="list-style-type: none"> <li>• IMAP4S: Mailhost (required)</li> <li>• POP3S Mailhost (required)</li> <li>• SMTPS: AAA</li> </ul> |
| <b>Step 3</b> | authentication-server-group | Specifies the previously configured authentication servers to use with e-mail proxy. The default is LOCAL.                                                                                                                                   |
| <b>Step 4</b> | authorization-server-group  | Specifies the previously configured authorization servers to use with clientless SSL VPN.                                                                                                                                                    |
| <b>Step 5</b> | authorization-required      | Requires users to authorize successfully to connect. The default is Disabled.                                                                                                                                                                |
| <b>Step 6</b> | authorization-dn-attributes | Identifies the DN of the peer certificate to use as a username for authorization. The defaults are as follows: <ul style="list-style-type: none"> <li>• Primary attribute: CN</li> <li>• Secondary attribute: OU</li> </ul>                  |
| <b>Step 7</b> | default-group-policy        | Specifies the name of the group policy to use. The default is DfltGrpPolicy.                                                                                                                                                                 |
| <b>Step 8</b> | enable                      | Enables e-mail proxy on the specified interface. The default is disabled.                                                                                                                                                                    |

|         | Command          | Purpose                                                                                                                                                                                      |
|---------|------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Step 9  | name-separator   | Defines the separator between the e-mail and VPN usernames and passwords. The default is colon (:).                                                                                          |
| Step 10 | outstanding      | Configures the maximum number of outstanding non-authenticated sessions. The default is 20.                                                                                                  |
| Step 11 | port             | Sets the port the e-mail proxy listens to. The default is as follows: <ul style="list-style-type: none"> <li>• IMAP4S:993</li> <li>• POP3S: 995</li> <li>• SMTPS: 988<sup>1</sup></li> </ul> |
| Step 12 | server           | Specifies the default e-mail server.                                                                                                                                                         |
| Step 13 | server-separator | Defines the separator between the e-mail and server names. The default is @.                                                                                                                 |

<sup>1</sup> With the Eudora e-mail client, SMTPS works only on port 465, even though the default port for SMTPS connections is 988.

## Configuring Web E-mail: MS Outlook Web App

The ASA supports Microsoft Outlook Web App to Exchange Server 2010 and Microsoft Outlook Web Access to Exchange Server 2007, 2003, and 2000. OWA requires that users perform the following steps:

### Detailed Steps

- 
- Step 1** Enter the URL of the e-mail service into the address field or click an associated bookmark in the clientless SSL VPN session.
  - Step 2** When prompted, enter the e-mail server username in the format *domain\username*.
  - Step 3** Enter the e-mail password.
- 

## Configuring Portal Access Rules

This enhancement allows customers to configure a global clientless SSL VPN access policy to permit or deny clientless SSL VPN sessions based on the data present in the HTTP header. If the ASA denies a clientless SSL VPN session, it returns an error code to the endpoint immediately.

The ASA evaluates this access policy before the endpoint authenticates to the ASA. As a result, in the case of a denial, fewer ASA processing resources are consumed by additional connection attempts from the endpoint.

### Prerequisites

Log on to the ASA and enter global configuration mode. In global configuration mode, the ASA displays this prompt:

```
hostname(config)#
```

## Detailed Steps

|        | Command                                                                                                                                                                                                                                                                                                                                               | Purpose                                                                                                                                                                                                                                                                        |
|--------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Step 1 | <code>webvpn</code><br><br><b>Example:</b><br><code>hostname(config)# webvpn</code>                                                                                                                                                                                                                                                                   | Enter webvpn configuration mode.                                                                                                                                                                                                                                               |
| Step 2 | <code>portal-access-rule priority [{permit   deny [code code]}] {any   user-agent match string}</code><br><br><b>Example:</b><br><code>hostname(config-webvpn)# portal-access-rule 1 deny code 403 user-agent match *Thunderbird*</code><br><br><code>hostname(config-webvpn)# portal-access-rule 1 deny code 403 user-agent match "*my agent"</code> | Permit or deny the creation of a clientless SSL VPN session based on an HTTP header code or a string in the HTTP header.<br><br>The second example shows the proper syntax for specifying a string with a space. Surround the string with wildcards (*) and then quotes (" "). |

## Optimizing Clientless SSL VPN Performance

The ASA provides several ways to optimize clientless SSL VPN performance and functionality. Performance improvements include caching and compressing web objects. Functionality tuning includes setting limits on content transformation and proxy-bypass. APCF provides an additional method of tuning content transformation. The following sections explain these features:

- [Configuring Caching](#)
- [Configuring Content Transformation](#)

### Configuring Caching

Caching enhances clientless SSL VPN performance. It stores frequently reused objects in the system cache, which reduces the need to perform repeated rewriting and compressing of content. It reduces traffic between clientless SSL VPN and the remote servers, with the result that many applications run much more efficiently.

By default, caching is enabled. You can customize the way caching works for your environment by using the caching commands in cache mode.

## Detailed Steps

|        | Command              | Purpose                                                                                                    |
|--------|----------------------|------------------------------------------------------------------------------------------------------------|
| Step 1 | webvpn               | Switches to webvpn configuration mode.                                                                     |
| Step 2 | disable              | Disables caching.                                                                                          |
| Step 3 | expiry-time          | Configures an expiration time for caching objects.                                                         |
| Step 4 | lmfactor             | Configures terms for revalidating cached objects.                                                          |
| Step 5 | max-object-size      | Sets a maximum size for objects to cache.                                                                  |
| Step 6 | min-object-size      | Sets a minimum size for objects to cache.                                                                  |
| Step 7 | cache-static-content | Caches all cacheable web objects, content not subject to rewriting. Examples include images and PDF files. |

## Configuring Content Transformation

By default, the ASA processes all clientless SSL VPN traffic through a content transformation/rewriting engine that includes advanced elements such as JavaScript and Java to proxy HTTP traffic that may have different semantics and access control rules depending on whether the user is accessing an application within or independently of an SSL VPN device.

Some web resources require highly individualized treatment. The following sections describe functionality that provides such treatment:

- [Configuring a Certificate for Signing Rewritten Java Content](#)
- [Disabling Content Rewrite](#)
- [Using Proxy Bypass](#)
- [Configuring Application Profile Customization Framework](#)

Subject to the requirements of your organization and the web content involved, you might use one of these features.

### Configuring a Certificate for Signing Rewritten Java Content

Java objects which have been transformed by clientless SSL VPN can subsequently be signed using a PKCS12 digital certificate associated with a trustpoint.

## Detailed Steps

|        | Command                                                                                                                                                                                                                                                                                                                                                                                                              | Purpose                                                                                                                               |
|--------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------|
| Step 1 | <code>crypto ca import</code>                                                                                                                                                                                                                                                                                                                                                                                        | Imports a certificate.                                                                                                                |
| Step 2 | <p><code>ava-trustpoint</code></p> <p><b>Example:</b><br/> <pre>hostname(config)# <b>crypto ca import mytrustpoint</b> <b>pkcs12 mypassphrase</b> Enter the base 64 encoded PKCS12. End with the word "quit" on a line by itself. [ PKCS12 data omitted ] quit INFO: Import PKCS12 operation completed successfully. hostname(config)# <b>webvpn</b> hostname(config)# <b>java-trustpoint mytrustpoint</b></pre></p> | <p>Employs a certificate.</p> <p>Shows the creation of a trustpoint named mytrustpoint and its assignment to signing Java objects</p> |

## Disabling Content Rewrite

You might not want some applications and web resources, for example, public websites, to go through the ASA. The ASA therefore lets you create rewrite rules that let users browse certain sites and applications without going through the ASA. This is similar to split-tunneling in an IPsec VPN connection.

|        | Command              | Purpose                                                                                                                                                                                                                        |
|--------|----------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Step 1 | <code>webvpn</code>  | Switches to webvpn configuration mode.                                                                                                                                                                                         |
| Step 2 | <code>rewrite</code> | Specifies applications and resources to access outside a clientless SSLN VPN tunnel. You can use this command multiple times.                                                                                                  |
| Step 3 | <code>disable</code> | Used in combination with the rewrite command. The order number of rules is important because the security appliance searches rewrite rules by order number, starting with the lowest, and applies the first rule that matches. |

## Using Proxy Bypass

You can configure the ASA to use proxy bypass when applications and web resources work better with the special content rewriting this feature provides. Proxy bypass is an alternative method of content rewriting that makes minimal changes to the original content. It is often useful with custom web applications.

You can use this command multiple times. The order in which you configure entries is unimportant. The interface and path mask or interface and port uniquely identify a proxy bypass rule.

If you configure proxy bypass using ports rather than path masks, depending on your network configuration, you might need to change your firewall configuration to allow these ports access to the ASA. Use path masks to avoid this restriction. Be aware, however, that path masks can change, so you might need to use multiple pathmask statements to exhaust the possibilities.

A path is everything in a URL after the .com or .org or other types of domain name. For example, in the URL `www.example.com/hrbenefits`, `hrbenefits` is the path. Similarly, for the URL `www.example.com/hrinsurance`, `hrinsurance` is the path. If you want to use proxy bypass for all hr sites, you can avoid using the command multiple times by using the \* wildcard as follows: `/hr*`.

### Detailed Steps

|        | Command                   | Purpose                                |
|--------|---------------------------|----------------------------------------|
| Step 1 | <code>webvpn</code>       | Switches to webvpn configuration mode. |
| Step 2 | <code>proxy-bypass</code> | Configures proxy bypass.               |

## Configuring Application Profile Customization Framework

An APCF profile for clientless SSL VPN lets the ASA handle non-standard applications and web resources so that they display correctly over a clientless SSL VPN connection. An APCF profile contains a script that specifies when (pre, post), where (header, body, request, response), and what data to transform for a particular application. The script is in XML and uses sed (stream editor) syntax for string/text transformation. Multiple APCF profiles can run in parallel on an ASA. Within an APCF profile script, multiple APCF rules can apply. In this case, the ASA processes the oldest rule first (based on configuration history), then the next oldest rule, and so forth.

You can store APCF profiles on the ASA flash memory, or on an HTTP, HTTPS, or TFTP server.

### Restrictions

We recommend that you configure an APCF profile only with the assistance of Cisco personnel.

### Detailed Steps

|        | Command                                                                                                                                                                                                                              | Purpose                                                                                                                                                                                                                                                                                                                                                               |
|--------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Step 1 | <code>webvpn</code>                                                                                                                                                                                                                  | Switches to webvpn configuration mode.                                                                                                                                                                                                                                                                                                                                |
| Step 2 | <p><code>apcf</code></p> <p><b>Example:</b></p> <pre>hostname(config)# webvpn hostname(config-webvpn)# apcf flash:/apcf/apcf1.xml  hostname(config)# webvpn hostname(config-webvpn)# apcf https://myserver:1440/apcf/apcf2.xml</pre> | <p>Identifies and locates an APCF profile that you want to load on the ASA.</p> <p>Shows how to enable an APCF profile named <code>apcf1.xml</code>, located on flash memory.</p> <p>Shows how to enable an APCF profile named <code>apcf2.xml</code>, located on an https server called <code>myserver</code>, port 1440 with the path being <code>/apcf</code>.</p> |

## APCF Syntax

APCF profiles use XML format, and sed script syntax, with the XML tags in [Table 74-7](#).

### Guidelines

Misuse of an APCF profile can result in reduced performance and undesired rendering of content. In most cases, Cisco Engineering supplies APCF profiles to solve specific application rendering issues.

**Table 74-7**      **APCF XML Tags**

| Tag                                                                                                                                                                                                                                                                                                      | Use                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <APCF>...</APCF>                                                                                                                                                                                                                                                                                         | The mandatory root element that opens any APCF XML file.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <version>1.0</version>                                                                                                                                                                                                                                                                                   | The mandatory tag that specifies the APCF implementation version. Currently the only version is 1.0.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <application>...</application>                                                                                                                                                                                                                                                                           | The mandatory tag that wraps the body of the XML description.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <id> text </id>                                                                                                                                                                                                                                                                                          | The mandatory tag that describes this particular APCF functionality.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <apcf-entities>...</apcf-entities>                                                                                                                                                                                                                                                                       | The mandatory tag that wraps a single or multiple APCF entities.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <js-object>...</js-object><br><html-object>...</html-object><br><process-request-header>...</process-request-header><br><process-response-header>...</process-response-header><br><preprocess-response-body>...</preprocess-response-body><br><postprocess-response-body>...</postprocess-response-body> | One of these tags specifies type of content or the stage at which the APCF processing should take place.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <conditions>... </conditions>                                                                                                                                                                                                                                                                            | A child element of the pre/post-process tags that specifies criteria for processing such as:<br>http-version (such as 1.1, 1.0, 0.9)<br>http-method (get, put, post, webdav)<br>http-scheme (http, https, other)<br>server-regexp regular expression containing ("a".."z"   "A".."Z"   "0".."9"   ".-_*[]?")<br>server-fnmatch (regular expression containing ("a".."z"   "A".."Z"   "0".."9"   ".-_*[]?+()\{\},"),<br>user-agent-regexp<br>user-agent-fnmatch<br>request-uri-regexp<br>request-uri-fnmatch<br><br>If more than one of condition tags is present, the ASA performs a logical AND for all tags. |

Table 74-7 Apcf XML Tags (continued)

| Tag                                                        | Use                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>&lt;action&gt; ... &lt;/action&gt;</code>            | Wraps one or more actions to perform on the content under specified conditions; you can use the following tags to define these actions (shown below): <code>&lt;do&gt;</code> , <code>&lt;sed-script&gt;</code> , <code>&lt;rewrite-header&gt;</code> , <code>&lt;add-header&gt;</code> , <code>&lt;delete-header&gt;</code> .                                                                                                                                                                                                                                                       |
| <code>&lt;do&gt;...&lt;/do&gt;</code>                      | Child element of the action tag used to define one of the following actions:<br><code>&lt;no-rewrite/&gt;</code> —Do not mangle the content received from the remote server.<br><code>&lt;no-toolbar/&gt;</code> —Do not insert the toolbar.<br><code>&lt;no-gzip/&gt;</code> —Do not compress the content.<br><code>&lt;force-cache/&gt;</code> —Preserve the original caching instructions.<br><code>&lt;force-no-cache/&gt;</code> —Make object non-cacheable.<br><code>&lt;downgrade-http-version-on-backend&gt;</code> —Use HTTP/1.0 when sending the request to remote server. |
| <code>&lt;sed-script&gt; TEXT &lt;/sed-script&gt;</code>   | Child element of the action tag used to change the content of text-based objects. The Text must be a valid Sed script. The <code>&lt;sed-script&gt;</code> applies to the <code>&lt;conditions&gt;</code> tag defined before it.                                                                                                                                                                                                                                                                                                                                                     |
| <code>&lt;rewrite-header&gt;&lt;/rewrite-header&gt;</code> | Child element of the action tag. Changes the value of the HTTP header specified in the child element <code>&lt;header&gt;</code> tag shown below.                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <code>&lt;add-header&gt;&lt;/add-header&gt;</code>         | Child element of the action tag used to add a new HTTP header specified in the child element <code>&lt;header&gt;</code> tag shown below.                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <code>&lt;delete-header&gt;&lt;/delete-header&gt;</code>   | Child element of the action tag used to delete the specified HTTP header specified by the child element <code>&lt;header&gt;</code> tag shown below.                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <code>&lt;header&gt;&lt;/header&gt;</code>                 | Specifies the name HTTP header to be rewritten, added, or deleted. For example, the following tag changes the value of the HTTP header named Connection:<br><pre>&lt;rewrite-header&gt; &lt;header&gt;Connection&lt;/header&gt; &lt;value&gt;close&lt;/value&gt; &lt;/rewrite-header&gt;</pre>                                                                                                                                                                                                                                                                                       |

## Configuration Examples for Apcf

### Example:

```
<Apcf>
<version>1.0</version>
<application>
 <id>Do not compress content from example.com</id>
<apcf-entities>
```

```

 <process-request-header>
 <conditions>
 <server-fnmatch>*.example.com</server-fnmatch>
 </conditions>
 <action>
 <do><no-gzip/></do>
 </action>
 </process-request-header>
 </apcf-entities>
</application>
</APCF>

```

**Example:**

```

<APCF>
<version>1.0</version>
<application>
 <id>Change MIME type for all .xyz objects</id>
 <apcf-entities>
 <process-response-header>
 <conditions>
 <request-uri-fnmatch>*.xyz</request-uri-fnmatch>
 </conditions>
 <action>
 <rewrite-header>
 <header>Content-Type</header>
 <value>text/html</value>
 </rewrite-header>
 </action>
 </process-response-header>
 </apcf-entities>
</application>
</APCF>

```

## Clientless SSL VPN End User Setup

This section is for the system administrator who sets up clientless SSL VPN for end users. It describes how to customize the end-user interface.


This section summarizes configuration requirements and tasks for a remote system. It specifies information to communicate to users to get them started using clientless SSL VPN. It includes the following topics:

- [Defining the End User Interface](#)
- [Customizing Clientless SSL VPN Pages, page 74-90](#)
- [Customizing Help, page 74-106](#)
- [Requiring Usernames and Passwords](#)
- [Communicating Security Tips](#)
- [Configuring Remote Systems to Use Clientless SSL VPN Features](#)
- [Translating the Language of User Messages](#)

## Defining the End User Interface

The clientless SSL VPN end user interface consists of a series of HTML panels. A user logs on to clientless SSL VPN by entering the IP address of an ASA interface in the format `https://address`. The first panel that displays is the login screen (Figure 74-9).

**Figure 74-9** Clientless SSL VPN Login Screen

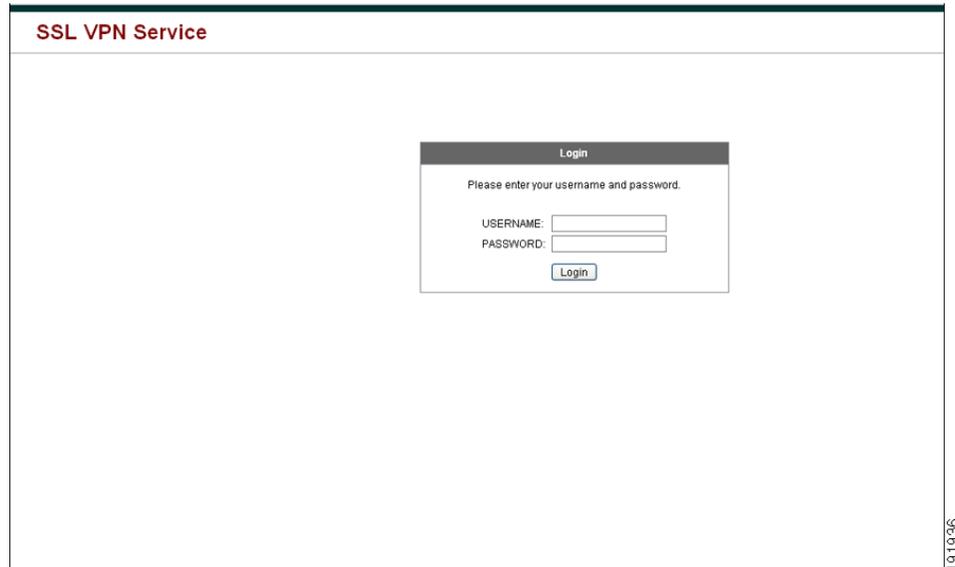

## Viewing the Clientless SSL VPN Home Page


After the user logs in, the portal page opens.

The home page displays all of the clientless SSL VPN features you have configured, and its appearance reflects the logo, text, and colors you have selected. This sample home page includes all available clientless SSL VPN features with the exception of identifying specific file shares. It lets users browse the network, enter URLs, access specific websites, and use Application Access (port forwarding and smart tunnels) to access TCP applications.

## Viewing the Clientless SSL VPN Application Access Panel

To start port forwarding or smart tunnels, a user clicks the **Go** button in the Application Access box. The Application Access window opens (Figure 74-10).

**Figure 74-10** Clientless SSL VPN Application Access Window

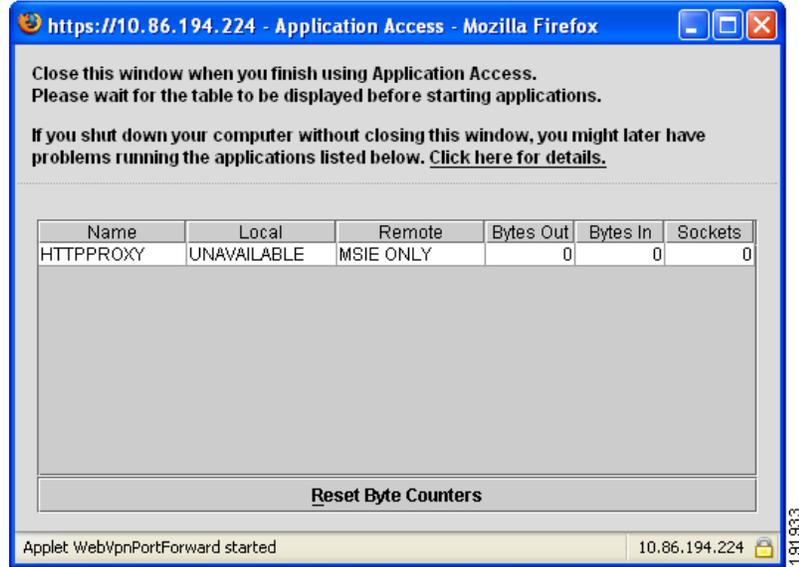

This window displays the TCP applications configured for this clientless SSL VPN connection. To use an application with this panel open, the user starts the application in the normal way.




**Note**

A stateful failover does not retain sessions established using Application Access. Users must reconnect following a failover.

## Viewing the Floating Toolbar

The floating toolbar shown in [Figure 74-11](#) represents the current clientless SSL VPN session.

**Figure 74-11** Clientless SSL VPN Floating Toolbar

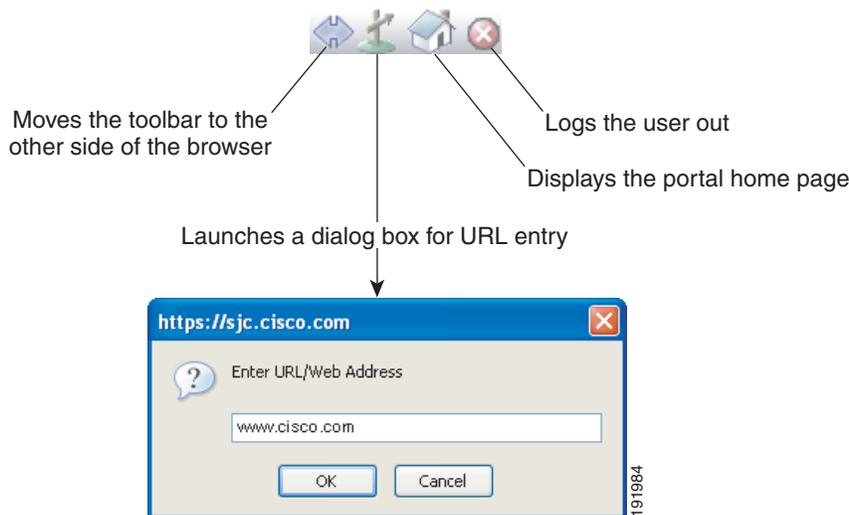

Be aware of the following characteristics of the floating toolbar:

- The toolbar lets you enter URLs, browse file locations, and choose preconfigured web connections without interfering with the main browser window.
- If you configure your browser to block popups, the floating toolbar cannot display.
- If you close the toolbar, the ASA prompts you to confirm that you want to end the clientless SSL VPN session.

See [Table 74-10 on page 74-109](#) for detailed information about using clientless SSL VPN.

## Customizing Clientless SSL VPN Pages

You can change the appearance of the portal pages displayed to clientless SSL VPN users. This includes the Login page displayed to users when they connect to the security appliance, the Home page displayed to users after the security appliance authenticates them, the Application Access window displayed when users launch an application, and the Logout page displayed when users log out of clientless SSL VPN sessions.

After you customize the portal pages, you can save your customization and apply it to a specific connection profile, group policy, or user. The changes do not take effect until you reload the ASA, or you disable and then enable clientless SSL.

You can create and save many customization objects, enabling the security appliance to change the appearance of portal pages for individual users or groups of users.

This section includes the following topics:

- [Information About Customization, page 74-90](#)
- [Exporting a Customization Template, page 74-91](#)
- [Editing the Customization Template, page 74-91](#)
- [Importing a Customization Object, page 74-97](#)
- [Applying Customizations to Connection Profiles, Group Policies and Users, page 74-97](#)
- [Login Screen Advanced Customization, page 74-99](#)

## Information About Customization

The ASA uses customization objects to define the appearance of user screens. A customization object is compiled from an XML file which contains XML tags for all the customizable screen items displayed to remote users. The ASA software contains a customization template that you can export to a remote PC. You can edit this template and import the template back into the ASA as a new customization object.

When you export a customization object, an XML file containing XML tags is created at the URL you specify. The XML file created by the customization object named *Template* contains empty XML tags, and provides the basis for creating new customization objects. This object cannot be changed or deleted from cache memory but can be exported, edited, and imported back into the ASA as a new customization object.

### Customization Objects, Connection Profiles, and Group Policies

Initially, when a user first connects, the default customization object (named *DfltCustomization*) identified in the connection profile (tunnel group) determines how the logon screen appears. If the connection profile list is enabled, and the user selects a different group which has its own customization, the screen changes to reflect the customization object for that new group.

After the remote user is authenticated, the screen appearance is determined by whether a customization object that has been assigned to the group policy.

## Exporting a Customization Template

When you export a customization object, an XML file is created at the URL you specify. The customization template (named *Template*) contains empty XML tags and provides the basis for creating new customization objects. This object cannot be changed or deleted from cache memory but can be exported, edited, and imported back into the ASA as a new customization object.

### Detailed Steps

	Command	Purpose
Step 1	<code>export webvpn customization</code>	Exports a customization object and allows you to make changes to the XML tags.
Step 2	<b>import webvpn customization</b>  <b>Example:</b> <pre>hostname# export webvpn customization DfltCustomization tftp://209.165.200.225/dflt_custom !!!!!!!!!!!!!!!!!!!!INFO: Customization object 'DfltCustomization' was exported to tftp://10.86.240.197/dflt_custom hostname#</pre>	Imports the file as a new object.  Exports the default customization object (DfltCustomization) and creates the XML file named <i>dflt_custom</i> .

## Editing the Customization Template

This section shows the contents of the customization template and has convenient figures to help you quickly choose the correct XML tag and make changes that affect the screens.

You can use a text editor or an XML editor to edit the XML file. The following example shows the XML tags of the customization template. Some redundant tags have been removed for easier viewing:

### Example:

```
<custom>
 <localization>
 <languages>en, ja, zh, ru, ua</languages>
 <default-language>en</default-language>
 </localization>
 <auth-page>
 <window>
 <title-text l10n="yes"><![CDATA[SSL VPN Service]]></title-text>
 </window>
 <full-customization>
 <mode>disable</mode>
```

```

 <url></url>
 </full-customization>
</language-selector>
 <mode>disable</mode>
 <title l10n="yes">Language:</title>
 <language>
 <code>en</code>
 <text>English</text>
 </language>
 <language>
 <code>zh</code>
 <text>ä¸ä¸­æ (Chinese)</text>
 </language>
 <language>
 <code>ja</code>
 <text>æ­æ­æ­ (Japanese)</text>
 </language>
 <language>
 <code>ru</code>
 <text>Ð¸ÑÑÑÑÐ¸Ð¸ (Russian)</text>
 </language>
 <language>
 <code>ua</code>
 <text>Ð¸ÑÑÑÑÐ¸Ð¸ (Ukrainian)</text>
 </language>
</language-selector>
<logon-form>
 <title-text l10n="yes"><![CDATA[Login]]></title-text>
 <title-background-color><![CDATA[#666666]]></title-background-color>
 <title-font-color><![CDATA[#ffffff]]></title-font-color>
 <message-text l10n="yes"><![CDATA[Please enter your username and
password.]]></message-text>
 <username-prompt-text l10n="yes"><![CDATA[USERNAME:]]></username-prompt-text>
 <password-prompt-text l10n="yes"><![CDATA[PASSWORD:]]></password-prompt-text>
 <internal-password-prompt-text l10n="yes">Internal
Password:</internal-password-prompt-text>
 <internal-password-first>no</internal-password-first>
 <group-prompt-text l10n="yes"><![CDATA[GROUP:]]></group-prompt-text>
 <submit-button-text l10n="yes"><![CDATA[Login]]></submit-button-text>
 <title-font-color><![CDATA[#ffffff]]></title-font-color>
 <title-background-color><![CDATA[#666666]]></title-background-color>
 <font-color>#000000</font-color>
 <background-color>#ffffff</background-color>
 <border-color>#858A91</border-color>
</logon-form>
<logout-form>
 <title-text l10n="yes"><![CDATA[Logout]]></title-text>
 <message-text l10n="yes"><![CDATA[Goodbye.

For your own security, please:

Clear the browser's cache

Delete any downloaded files

Close the browser's window]]></message-text>
 <login-button-text l10n="yes">Logon</login-button-text>
 <hide-login-button>no</hide-login-button>
 <title-background-color><![CDATA[#666666]]></title-background-color>
 <title-font-color><![CDATA[#ffffff]]></title-font-color>
 <title-font-color><![CDATA[#ffffff]]></title-font-color>
 <title-background-color><![CDATA[#666666]]></title-background-color>
 <font-color>#000000</font-color>
 <background-color>#ffffff</background-color>

```

```

 <border-color>#858A91</border-color>
</logout-form>
<title-panel>
 <mode>enable</mode>
 <text l10n="yes"><![CDATA[SSL VPN Service]]></text>
 <logo-url l10n="yes">/+CSCOU+/cisco_logo.gif</logo-url>
 <gradient>yes</gradient>
 <style></style>
 <background-color><![CDATA[#ffffff]]></background-color>
 <font-size><![CDATA[larger]]></font-size>
 <font-color><![CDATA[#800000]]></font-color>
 <font-weight><![CDATA[bold]]></font-weight>
</title-panel>
<info-panel>
 <mode>disable</mode>
 <image-url l10n="yes">/+CSCOU+/clear.gif</image-url>
 <image-position>above</image-position>
 <text l10n="yes"></text>
</info-panel>
<copyright-panel>
 <mode>disable</mode>
 <text l10n="yes"></text>
</copyright-panel>
</auth-page>
<portal>
 <title-panel>
 <mode>enable</mode>
 <text l10n="yes"><![CDATA[SSL VPN Service]]></text>
 <logo-url l10n="yes">/+CSCOU+/cisco_logo.gif</logo-url>
 <gradient>yes</gradient>
 <style></style>
 <background-color><![CDATA[#ffffff]]></background-color>
 <font-size><![CDATA[larger]]></font-size>
 <font-color><![CDATA[#800000]]></font-color>
 <font-weight><![CDATA[bold]]></font-weight>
 </title-panel>
 <browse-network-title l10n="yes">Browse Entire Network</browse-network-title>
 <access-network-title l10n="yes">Start AnyConnect</access-network-title>
 <application>
 <mode>enable</mode>
 <id>home</id>
 <tab-title l10n="yes">Home</tab-title>
 <order>1</order>
 </application>
 <application>
 <mode>enable</mode>
 <id>web-access</id>
 <tab-title l10n="yes"><![CDATA[Web Applications]]></tab-title>
 <url-list-title l10n="yes"><![CDATA[Web Bookmarks]]></url-list-title>
 <order>2</order>
 </application>
 <application>
 <mode>enable</mode>
 <id>file-access</id>
 <tab-title l10n="yes"><![CDATA[Browse Networks]]></tab-title>
 <url-list-title l10n="yes"><![CDATA[File Folder Bookmarks]]></url-list-title>
 <order>3</order>
 </application>
 <application>
 <mode>enable</mode>
 <id>app-access</id>
 <tab-title l10n="yes"><![CDATA[Application Access]]></tab-title>
 <order>4</order>
 </application>

```

```

<application>
 <mode>enable</mode>
 <id>net-access</id>
 <tab-title l10n="yes">AnyConnect</tab-title>
 <order>4</order>
</application>
<application>
 <mode>enable</mode>
 <id>help</id>
 <tab-title l10n="yes">Help</tab-title>
 <order>1000000</order>
</application>
<toolbar>
 <mode>enable</mode>
 <logout-prompt-text l10n="yes">Logout</logout-prompt-text>
 <prompt-box-title l10n="yes">Address</prompt-box-title>
 <browse-button-text l10n="yes">Browse</browse-button-text>
</toolbar>
<column>
 <width>100%</width>
 <order>1</order>
</column>
<pane>
 <type>TEXT</type>
 <mode>disable</mode>
 <title></title>
 <text></text>
 <notitle></notitle>
 <column></column>
 <row></row>
 <height></height>
</pane>
<pane>
 <type>IMAGE</type>
 <mode>disable</mode>
 <title></title>
 <url l10n="yes"></url>
 <notitle></notitle>
 <column></column>
 <row></row>
 <height></height>
</pane>
<pane>
 <type>HTML</type>
 <mode>disable</mode>
 <title></title>
 <url l10n="yes"></url>
 <notitle></notitle>
 <column></column>
 <row></row>
 <height></height>
</pane>
<pane>
 <type>RSS</type>
 <mode>disable</mode>
 <title></title>
 <url l10n="yes"></url>
 <notitle></notitle>
 <column></column>
 <row></row>
 <height></height>
</pane>
<url-lists>
 <mode>group</mode>

```

```

</url-lists>
<home-page>
 <mode>standard</mode>
 <url></url>
</home-page>
</portal>
</custom>

```

Figure 74-12 shows the Logon page and its customizing XML tags. All these tags are nested within the higher-level tag <auth-page>.

Figure 74-12 Logon Page and Associated XML Tags

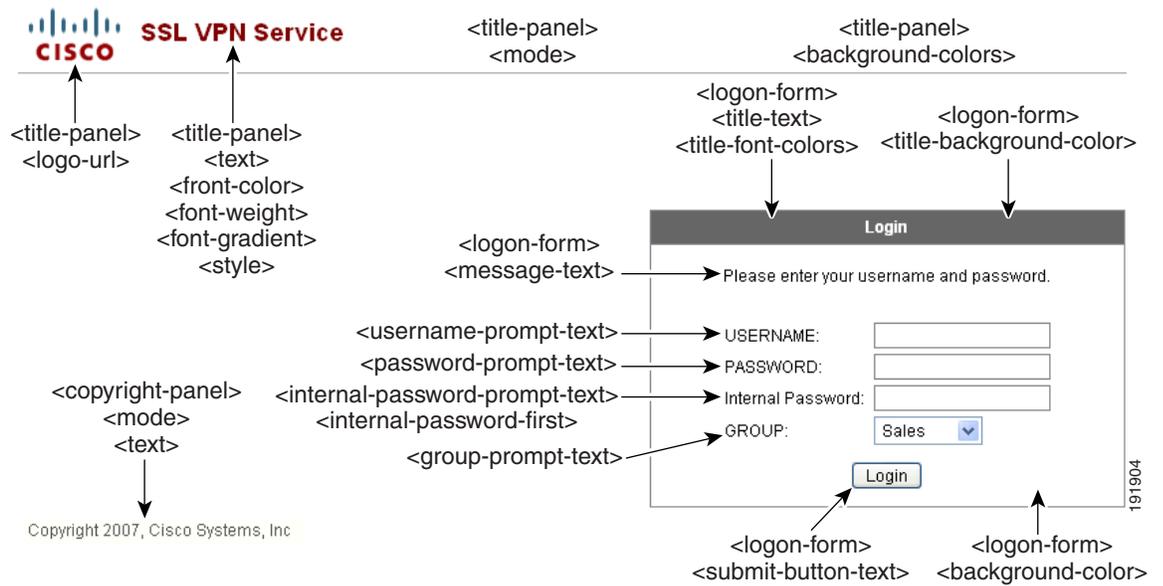


Figure 74-13 shows the Language Selector drop-down list that is available on the Logon page, and the XML tags for customizing this feature. All these tags are nested within the higher-level <auth-page> tag.

Figure 74-13 Language Selector on Logon Screen and Associated XML Tags


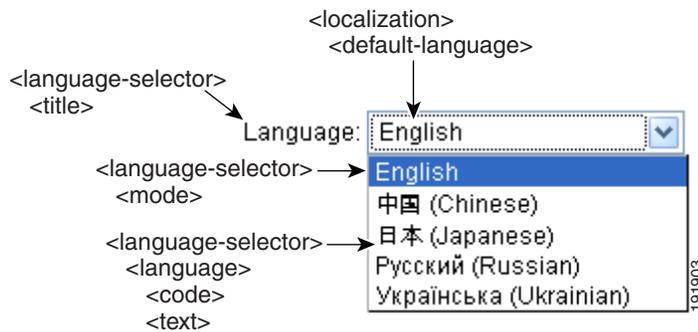


Figure 74-14 shows the Information Panel that is available on the Logon page, and the XML tags for customizing this feature. This information can appear to the left or right of the login box. These tags are nested within the higher-level <auth-page> tag.


Figure 74-14 Information Panel on Logon Screen and Associated XML Tags

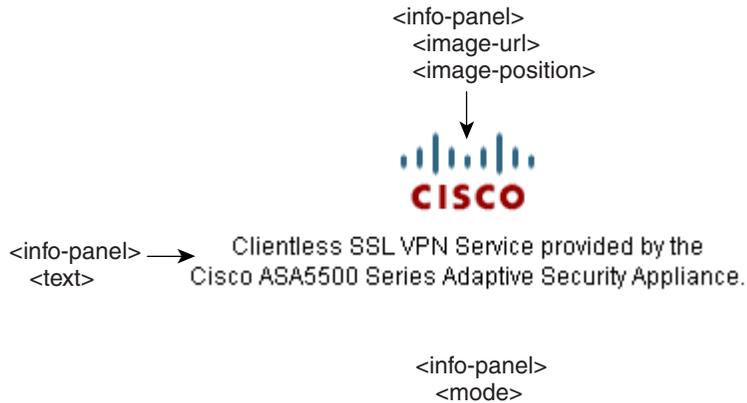

191905

Figure 74-15 shows the Portal page and the XML tags for customizing this feature. These tags are nested within the higher-level <auth-page> tag.

Figure 74-15 Portal Page and Associated XML Tags

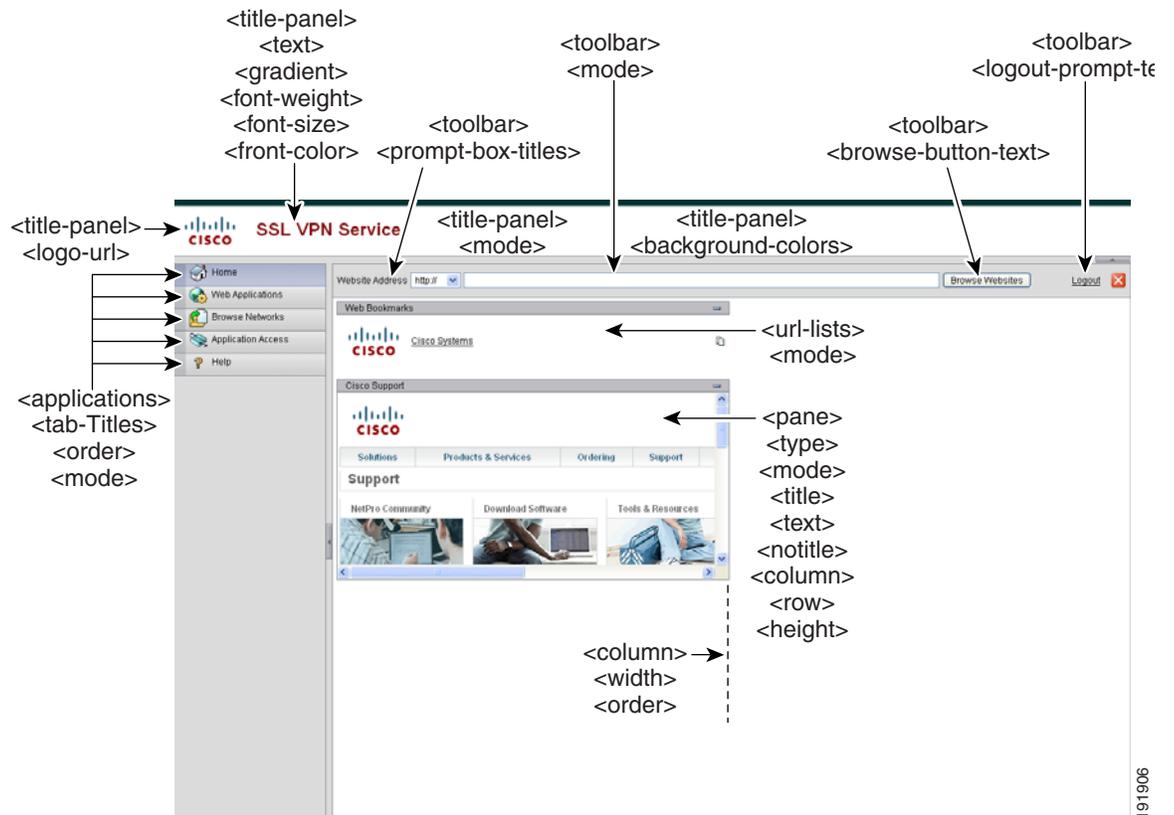

191906

## Importing a Customization Object

After you edit and save the XML file, import it into cache memory of the ASA using the following commands:

### Detailed Steps

	Command	Purpose
Step 1	<pre>import webvpn customization</pre> <p><b>Example:</b></p> <pre>hostname# import webvpn customization custom1 tftp://209.165.201.22/customization /General.xml Accessing tftp://209.165.201.22/customization/General.xml...!! !!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!! !!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!! Writing file disk0:/cisco_config/97/custom1... !!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!! !!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!! 329994 bytes copied in 5.350 secs (65998 bytes/sec)</pre>	<p>Imports an XML file into cache memory of the ASA. When you import the customization object, the ASA checks the XML code for validity. If the code is valid, the ASA stores the object in a hidden location in cache memory.</p> <p>Imports the customization object <i>General.xml</i> from the URL 209.165.201.22/customization and names it <i>custom1</i>.</p>

## Applying Customizations to Connection Profiles, Group Policies and Users

After you create a customization, you can apply the customization to a connection profile (tunnel group), a group, or a user, with the **customization** command. The options displayed with this command are different depending on the mode you are in.



**Note**

After you customize the portal pages, the changes do not take effect until you reload the ASA, or you disable and then enable clientless SSL.

For more information about configuring connection profiles, group policies, and users, see [Chapter 67, “Configuring Connection Profiles, Group Policies, and Users.”](#)

## Detailed Steps

	Command	Purpose
Step 1	<code>webvpn</code>	Switches to webvpn configuration mode.
Step 2	<pre>tunnel-group webvpn OR group-policy webvpn OR username webvpn</pre>	<p>Switches to tunnel-group webvpn configuration mode.</p> <p>Switches to group-policy webvpn configuration.</p> <p>Switches to username webvpn configuration.</p>
Step 3	<p><code>customization name</code></p> <p><b>Example:</b>  <pre>hostname(config)# tunnel-group cisco_telecommuters webvpn-attributes hostname(tunnel-group-webvpn)# customization cisco</pre> OR <pre>customization {none   value name}</pre></p> <p><b>Example:</b>  <pre>hostname(config)# group-policy cisco_sales attributes hostname(config-group-policy)# webvpn hostname(config-username-webvpn)# customization value ? config-username-webvpn mode commands/options: Available configured customization profiles:   DfltCustomization   cisco hostname(config-group-webvpn)# customization value cisco</pre></p> <p><b>Example:</b>  <pre>hostname(config)# username cisco_employee attributes hostname(config-username)# webvpn hostname(config-username-webvpn)# customization value cisco</pre></p>	<p>Applies a customization to a connection profile. name is the name of a customization to apply to the connection profile.</p> <p>Enters tunnel-group webvpn configuration mode and enables the customization <i>cisco</i> for the connection profile <i>cisco_telecommutes</i>.</p> <p>Applies a customization to a group or use. The following options are included:</p> <ul style="list-style-type: none"> <li>• <b>none</b> disables the customization for the group or user, prevents the value from being inherited, and displays the default clientless SSL VPN pages.</li> <li>• <b>value name</b> is the name of a cu</li> </ul> <p>Enters group policy webvpn configuration mode, queries the security appliance for a list of customizations, and enables the customization <i>cisco</i> for the group policy <i>cisco_sales</i>.</p> <p>Enters username webvpn configuration mode and enables the customization <i>cisco</i> for the user <i>cisco_employee</i>.</p>

	Command	Purpose
<b>Step 4</b>	(Optional) [no] customization name  OR [no] customization {none   value name}	Removes the command from the configuration and removes a customization from the connection profile.  Removes the command from the configuration and reverts to the default.
<b>Step 5</b>	<b>customization</b> command followed by a question mark (?)	Shows a list of existing customizations.

## Login Screen Advanced Customization


If you prefer to use your own, custom login screen, rather than changing specific screen elements of the login screen we provide, you can perform this advanced customization using the *Full Customization* feature.

With Full Customization, you provide the HTML for your own login screen, and you insert Cisco HTML code that calls functions on the ASA that create the Login form and the Language Selector drop-down list.

This section describes the modifications you need to make to your HTML code and the tasks required to configure the ASA to use your code.

[Figure 74-16](#) shows the standard Cisco login screen that displays to clientless SSL VPN users. The Login form is displayed by a function called by the HTML code.


**Figure 74-16** Standard Cisco Login Page

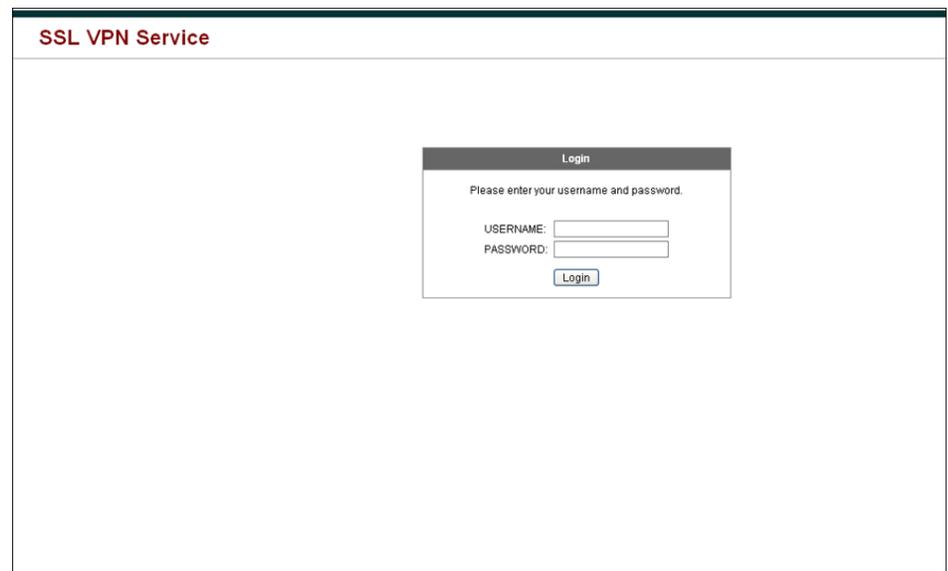

[Figure 74-17](#) shows the Language Selector drop-down list. This feature is an option for clientless SSL VPN users and is also called by a function in the HTML code of the login screen.

**Figure 74-17** Language Selector Drop-down List

Figure 74-18 shows a simple example of a custom login screen enabled by the Full Customization feature.

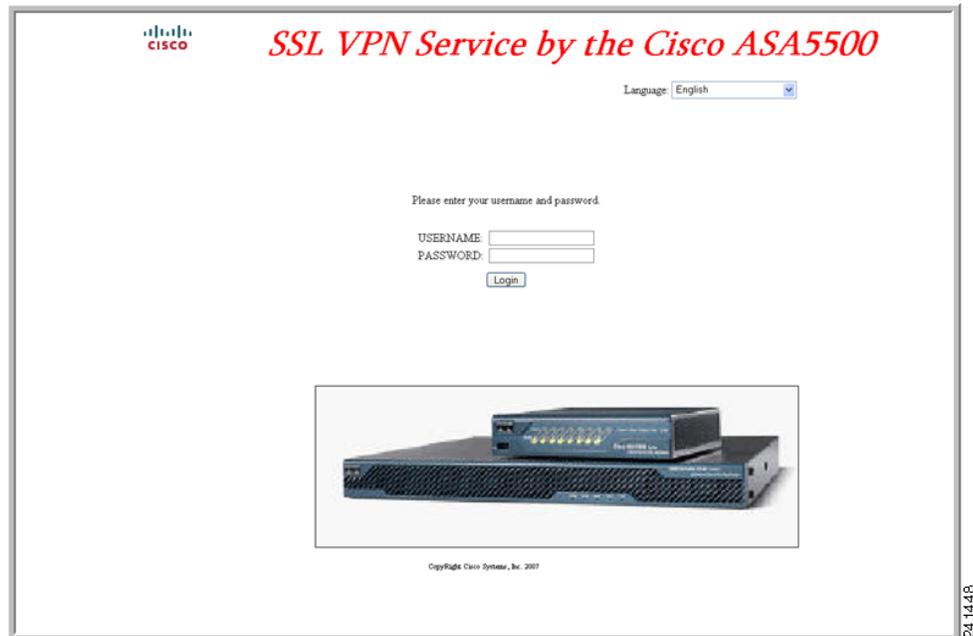**Figure 74-18** Example of Full Customization of Login Screens

The following HTML code is used as an example and is the code that displays:

**Example:**

```
<head>
<meta http-equiv="Content-Type" content="text/html; charset=windows-1252">
<title>New Page 3</title>
<base target="_self">
</head>

<p align="center">
<font face="Snap
ITC" size="6" color="#FF00FF">
```

```

 <i> SSL VPN Service by the Cisco
ASA5500</i></p>

<body onload="cscs_ShowLoginForm('lform');cscs_ShowLanguageSelector('selector')">

<table>

<tr><td colspan=3 height=20 align=right><div id="selector" style="width:
300px"></div></td></tr>
<tr><td></td><td></td><td></td></tr>
<tr>
<td height="379"></td>
<td height="379"></td>
<td align=middle valign=middle>
<div id=lform >
<p> </p>
<p> </p>
<p> </p>
<p>Loading...</p>
</div>
</td>
</tr>
<tr>
<td width="251"></td>
<td width="1"></td>
<td align=right valign=right width="800">

</td></tr>

</table>

```

The indented code injects the Login form and the Language Selector on the screen. The function `cscs_ShowLoginForm('lform')` injects the logon form. `cscs_ShowLanguageSelector('selector')` injects the Language Selector.

## Modifying Your HTML File

Follow these steps to modify your HTML file:

### Detailed Steps

- 
- Step 1** Name your file **logon.inc**. When you import the file, the ASA recognizes this filename as the logon screen.
- Step 2** Modify the paths of images used by the file to include `/+CSCOU+/. Files that are displayed to remote users before authentication must reside in a specific area of the ASA cache memory represented by the path /+CSCOU+/. Therefore, the source for each image in the file must include this path. For example:`

```
src="/+CSCOU+/asa5520.gif"
```

- Step 3** Insert the special HTML code below. This code contains the Cisco functions, described earlier, that inject the login form and language selector onto the screen.

```

<body onload="cscs_ShowLoginForm('lform');cscs_ShowLanguageSelector('selector')">

<table>

```

```

<tr><td colspan=3 height=20 align=right><div id="selector" style="width:
300px"></div></td></tr>
<tr><td></td><td></td><td></td></tr>
<tr>
<td height="379"></td>
<td height="379"></td>
<td align=middle valign=middle>
<div id=lform >
<p> </p>
<p> </p>
<p> </p>
<p>Loading...</p>
</div>
</td>
</tr>
<tr>
<td width="251"></td>
<td width="1"></td>
<td align=right valign=right width="800">

</td></tr>

</table>

```

**Step 4** (Optional) Click **Find** to search for a customization object. Start typing in the field, and the tool searches the beginning characters of every field for a match. You can use wild cards to expand your search. For example, typing *sal* in the Find field matches a customization object named sales but not a customization object named wholesalers. If you type *\*sal* in the Find field, the search finds the first instance of either sales or wholesalers in the table.

Use the up and down arrows to skip up or down to the next string match. Check the **Match Case** checkbox to make your search case sensitive.

**Step 5** Specify when the onscreen keyboard shows on portal pages. The choices are as follows:

- Do not show OnScreen Keyboard
- Show only for the login page
- Show for all portal pages requiring authentication

**Step 6** (Optional) Highlight a customization object and click **Assign** to assign the selected object to one or more group policies, connection profiles, or LOCAL users.

---

•

## Configuring Browser Access to Client-Server Plug-ins

The Client-Server Plug-in table displays the plug-ins the ASA makes available to browsers in clientless SSL VPN sessions.

To add, change, or remove a plug-in, do one of the following:

- To add a plug-in, click **Import**. The Import Plug-ins dialog box opens.
- To remove a plug-in, choose it and click **Delete**.

The following sections describe the integration of browser plug-ins for Clientless SSL VPN browser access:

- [About Installing Browser Plug-ins](#)
- [Preparing the Security Appliance for a Plug-in](#)
- [Installing Plug-ins Redistributed By Cisco](#)

## About Installing Browser Plug-ins

A browser plug-in is a separate program that a web browser invokes to perform a dedicated function, such as connect a client to a server within the browser window. The ASA lets you import plug-ins for download to remote browsers in clientless SSL VPN sessions. Of course, Cisco tests the plug-ins it redistributes, and in some cases, tests the connectivity of plug-ins we cannot redistribute. However, we do not recommend importing plug-ins that support streaming media at this time.

The ASA does the following when you install a plug-in onto the flash device:

- (Cisco-distributed plug-ins only) Unpacks the jar file specified in the *URL*.
- Writes the file to the `cisco-config/97/plugin` directory on the ASA file system.
- Populates the drop-down menu next to the URL attributes in ASDM.
- Enables the plug-in for all future clientless SSL VPN sessions, and adds a main menu option and an option to the drop-down menu next to the Address field of the portal page.

[Table 74-8](#) shows the changes to the main menu and address field of the portal page when you add the plug-ins described in the following sections.

**Table 74-8** *Effects of Plug-ins on the Clientless SSL VPN Portal Page*

Plug-in	Main Menu Option Added to Portal Page	Address Field Option Added to Portal Page
ica	Citrix Client	citrix://
rdp	Terminal Servers	rdp://
rdp2	Terminal Servers Vista	rdp2://
ssh,telnet	SSH	ssh://
	Telnet	telnet://
vnc	VNC Client	vnc://



**Note**

A secondary ASA obtains the plug-ins from the primary ASA.

When the user in a clientless SSL VPN session clicks the associated menu option on the portal page, the portal page displays a window to the interface and displays a help pane. The user can select the protocol displayed in the drop-down menu and enter the URL in the Address field to establish a connection.



**Note**

Some Java plug-ins may report a status of connected or online even when a session to the destination service is not set up. The open-source plug-in reports the status, not the ASA.

Before installing the first plug-in, you must follow the instructions in the next section.

## Prerequisites

- The plug-ins do not work if the security appliance configures the clientless session to use a proxy server.




---

**Note** The remote desktop protocol plug-in does not support load balancing with a session broker. Because of the way the protocol handles the redirect from the session broker, the connection fails. If a session broker is not used, the plug-in works.

---

- The plug-ins support single sign-on (SSO). They use the *same* credentials entered to open the clientless SSL VPN session. Because the plug-ins do not support macro substitution, you do not have the options to perform SSO on different fields such as the internal domain password or on an attribute on a RADIUS or LDAP server.
- To configure SSO support for a plug-in, you install the plug-in, add a bookmark entry to display a link to the server, and specify SSO support when adding the bookmark.
- The minimum access rights required for remote use belong to the guest privilege mode.

## Requirements

- Per the GNU General Public License (GPL), Cisco redistributes plug-ins without having made any changes to them. Per the GPL, Cisco cannot directly enhance these plug-ins.
- Clientless SSL VPN must be enabled on the ASA to provide remote access to the plug-ins.
- A stateful failover does not retain sessions established using plug-ins. Users must reconnect following a failover.
- Plug-ins require ActiveX or Sun JRE 5, Update 1.4 or later (JRE 6 or later recommended) to be enabled on the browser. An ActiveX version of the RDP plug-in is unavailable for 64-bit browsers.

## RDP Plug-in ActiveX Debug Quick Reference

To set up and use an RDP plug-in, you must add a new environment variable. For the process of adding a new environment variable, use the following steps:

- 
- Step 1** Right-click **My Computer** to access the System Properties and choose the **Advanced** tab.
  - Step 2** On the Advanced tab, choose the environment variables button.
  - Step 3** In the new user variable dialog box, enter the RF\_DEBUG variable.
  - Step 4** Verify the new Environment Variable in the user variables section.
  - Step 5** If you used the client computer with versions of WebVPN before version 8.3, you must remove the old Cisco Portforwarder Control. Go to the C:/WINDOWS/Downloaded Program Files directory, right-click portforwarder control, and choose **Remove**.
  - Step 6** Clear all of the Internet Explorer browser cache.
  - Step 7** Launch your WebVPN session and establish an RDP session with the RDP ActiveX Plug-in.
- You can now observe events in the Windows Application Event viewer.
-

## Preparing the Security Appliance for a Plug-in

Before installing a plug-in, prepare the ASA by performing the following steps:

- Step 1** Make sure clientless SSL VPN (“webvpn”) is enabled on an ASA interface.
- Step 2** Install an SSL certificate onto the ASA interface to which remote users use a fully-qualified domain name (FQDN) to connect.



**Note** Do not specify an IP address as the common name (CN) for the SSL certificate. The remote user attempts to use the FQDN to communicate with the ASA. The remote PC must be able to use DNS or an entry in the System32\drivers\etc\hosts file to resolve the FQDN.

## Configuring the ASA to Use the New HTML File

Follow these steps to configure the ASA to use the new HTML file you just customized in the previous steps.

### Detailed Steps

	Command	Purpose
<b>Step 1</b>	<pre>import webvpn webcontent</pre> <p><b>Example:</b></p> <pre>hostname# import webvpn webcontent /+CSCOU+/login.inc tftp://209.165.200.225/login.inc !!!!* Web resource `+CSCOU+/login.inc' was successfully initialized hostname#</pre>	Imports the file and images as Web Content.
<b>Step 2</b>	<pre>export webvpn customization</pre> <p><b>Example:</b></p> <pre>hostname2# export webvpn customization template tftp://209.165.200.225/sales_vpn_login !!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!! %INFO: Customization object 'Template' was exported to tftp://10.21.50.120/sales _vpn_login</pre>	Exports a customization template.
<b>Step 3</b>	<p>Change the full customization mode tag in the file to enable</p> <p><b>Example:</b></p> <pre>&lt;full-customization&gt;   &lt;mode&gt;enable&lt;/mode&gt;   &lt;url&gt;/+CSCOU+/login.inc&lt;/url&gt; &lt;/full-customization&gt;</pre>	Supplies the URL of the login file stored in the ASA memory.

	Command	Purpose
Step 4	Import the file as a new customization object  <b>Example:</b> <pre>hostname# import webvpn customization sales_vpn_login tftp://10.21.50.120/sales_vpn_login\$ !!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!! %INFO: customization object 'sales_vpn_login' was successfully imported</pre>	
Step 5	Apply the customization object to a Connection Profile (tunnel group)  <b>Example:</b> <pre>hostname(config)# tunnel-group Sales webvpn-attributes hostname(config-tunnel-webvpn)#customization sales_vpn_login</pre>	

## Customizing Help

The ASA displays help content on the application panels during clientless SSL VPN sessions. You can customize the help files provided by Cisco or create help files in other languages. You then import them to flash memory for display during subsequent clientless sessions. You can also retrieve previously imported help content files, modify them, and reimport them to flash memory.

Each clientless application panel displays its own help file content using a predetermined filename. The prospective location of each is in the `/+CSCOE+/help/language/` URL within flash memory of the ASA. [Table 74-9](#) shows the details about each of the help files you can maintain for clientless SSL VPN sessions.

**Table 74-9 Clientless SSL VPN Application Help Files**

Application Type	Panel	URL of Help File in Flash Memory of the Security Appliance	Help File Provided By Cisco in English?
Standard	Application Access	<code>/+CSCOE+/help/language/app-access-hlp.inc</code>	Yes
Standard	Browse Networks	<code>/+CSCOE+/help/language/file-access-hlp.inc</code>	Yes
Standard	AnyConnect Client	<code>/+CSCOE+/help/language/net-access-hlp.inc</code>	Yes
Standard	Web Access	<code>/+CSCOE+/help/language/web-access-hlp.inc</code>	Yes
Plug-in	MetaFrame Access	<code>/+CSCOE+/help/language/ica-hlp.inc</code>	No
Plug-in	Terminal Servers	<code>/+CSCOE+/help/language/rdp-hlp.inc</code>	Yes
Plug-in	Telnet/SSH Servers	<code>/+CSCOE+/help/language/ssh,telnet-hlp.inc</code>	Yes
Plug-in	VNC Connections	<code>/+CSCOE+/help/language/vnc-hlp.inc</code>	Yes

*language* is the abbreviation of the language rendered by the browser. This field is *not* used for file translation; it indicates the language used in the file. To specify a particular language code, copy the language abbreviation from the list of languages rendered by your browser. For example, a dialog window displays the languages and associated language codes when you use one of the following procedures:

- Open Internet Explorer and choose **Tools > Internet Options > Languages > Add**.
- Open Mozilla Firefox and choose **Tools > Options > Advanced > General**, click **Choose** next to Languages, and click **Select a language to add**.

The following sections describe how to customize the help content visible on clientless sessions:

- [Customizing a Help File Provided By Cisco, page 74-107](#)
- [Creating Help Files for Languages Not Provided by Cisco, page 74-108](#)
- [Importing a Help File to Flash Memory, page 74-108](#)
- [Exporting a Previously Imported Help File from Flash Memory, page 74-108](#)

## Customizing a Help File Provided By Cisco

To customize a help file provided by Cisco, you need to get a copy of the file from the flash memory card first. Get the copy and customize it as follows:

### Detailed Steps

- 
- Step 1** Use your browser to establish a clientless SSL VPN session with the ASA.
- Step 2** Display the help file by appending the string in “URL of Help File in Flash Memory of the Security Appliance” in [Table 74-9](#), to the address of the ASA, then press Enter.



**Note** Enter **en** in place of *language* to get the help file in English.

---

The following example address displays the English version of the Terminal Servers help:

**https://address\_of\_security\_appliance/+CSCOE+/help/en/rdp-hlp.inc**

- Step 3** Choose **File > Save (Page) As**.



**Note** Do not change the contents of the File name box.

---

- Step 4** Change the Save as type option to **Web Page, HTML only** and click **Save**.

- Step 5** Use your preferred HTML editor to modify the file.



**Note** You can use most HTML tags, but do *not* use tags that define the document and its structure (e.g., do not use `<html>`, `<title>`, `<body>`, `<head>`, `<h1>`, `<h2>`, etc. You can use character tags, such as the `<b>` tag, and the `<p>`, `<ol>`, `<ul>`, and `<li>` tags to structure content.

---

- Step 6** Save the file as HTML only, using the original filename and extension.

- Step 7** Make sure the filename matches the one in [Table 74-9](#), and that it does not have an extra filename extension.

See “[Importing a Help File to Flash Memory](#)” to import the modified file for display in clientless SSL VPN sessions.

## Creating Help Files for Languages Not Provided by Cisco

Use HTML to create help files in other languages.

We recommend creating a separate folder for each language you want to support.

Save the file as HTML only. Use the filename following the last slash in “URL of Help File in Flash Memory of the Security Appliance” in [Table 74-9](#).

See the next section to import the files for display in clientless SSL VPN sessions.

### Restrictions

You can use most HTML tags, but do *not* use tags that define the document and its structure (e.g., do not use <html>, <title>, <body>, <head>, <h1>, <h2>, etc. You can use character tags, such as the <b> tag, and the <p>, <ol>, <ul>, and <li> tags to structure content.

## Importing a Help File to Flash Memory

To import a help content file to flash memory for display in clientless SSL VPN sessions, follow these steps:

### Detailed Steps

	Command	Purpose
Step 1	<pre>import webvpn webcontent destination_url source_url</pre> <p><b>Example:</b></p> <pre>hostname# import webvpn webcontent /+CSCOE+/help/en/app-access-hlp.inc tftp://209.165.200.225/app-access-hlp.inc</pre>	<p>Imports a help content file to flash memory for display in clientless SSL VPN sessions.</p> <ul style="list-style-type: none"> <li>• <i>destination_url</i> is the string in the URL of Help File in Flash Memory of the Security Appliance column of <a href="#">Table 74-9 Clientless SSL VPN Application Help Files</a>.</li> <li>• <i>source_url</i> is the URL of the file to import. Valid prefixes are ftp://, http://, and tftp://.</li> </ul> <p>Copies the help file <i>app-access-hlp.inc</i> to flash memory from the TFTP server at 209.165.200.225. The URL includes the abbreviation <i>en</i> for the English language.</p>

## Exporting a Previously Imported Help File from Flash Memory

To retrieve a previously imported help content file for subsequent edits, follow these steps:

## Detailed Steps

	Command	Purpose
Step 1	<pre>export webvpn webcontent source_url destination_url</pre> <p><b>Example:</b>  <pre>hostname# export webvpn webcontent /+CSCOE+/help/en/file-access-hlp.inc tftp://209.165.200.225/file-access-hlp.inc</pre></p>	<p>Retrieves a previously imported help content file for subsequent edits.</p> <ul style="list-style-type: none"> <li><i>source_url</i> is the string in “URL of Help File in Flash Memory of the Security Appliance” in <a href="#">Table 74-9</a>.</li> <li><i>destination_url</i> is <b>the target URL</b>. Valid prefixes are ftp:// and tftp://. The maximum number of characters is 255.</li> </ul> <p>Copies the English language help file <i>file-access-hlp.inc</i> displayed on the Browser Networks panel to TFTP Server 209.165.200.225.</p>

## Requiring Usernames and Passwords

Depending on your network, during a remote session users might have to log in to any or all of the following: the computer itself, an Internet service provider, clientless SSL VPN, mail or file servers, or corporate applications. Users might have to authenticate in many different contexts, requiring different information, such as a unique username, password, or PIN.

[Table 74-10](#) lists the type of usernames and passwords that clientless SSL VPN users might need to know.

**Table 74-10** Usernames and Passwords to Give to Users of Clientless SSL VPN Sessions

Login Username/ Password Type	Purpose	Entered When
Computer	Access the computer	Starting the computer
Internet Service Provider	Access the Internet	Connecting to an Internet service provider
Clientless SSL VPN	Access remote network	Starting clientless SSL VPN
File Server	Access remote file server	Using the clientless SSL VPN file browsing feature to access a remote file server
Corporate Application Login	Access firewall-protected internal server	Using the clientless SSL VPN web browsing feature to access an internal protected website
Mail Server	Access remote mail server via clientless SSL VPN	Sending or receiving e-mail messages

## Communicating Security Tips

Advise users to always click the logout icon on the toolbar to close the clientless SSL VPN session. (Closing the browser window does not close the session.)

Clientless SSL VPN ensures the security of data transmission between the remote PC or workstation and the ASA on the corporate network. Advise users that using clientless SSL VPN does not ensure that communication with every site is secure. If a user then accesses a non-HTTPS web resource (located on the Internet or on the internal network), the communication from the corporate ASA to the destination web server is not private because it is not encrypted.

"[Observing Clientless SSL VPN Security Precautions](#)" on page 5 addresses an additional tip to communicate with users, depending on the steps you follow within that section.

## Configuring Remote Systems to Use Clientless SSL VPN Features

This section describes how to set up remote systems to use clientless SSL VPN and includes the following topics:

- [Starting Clientless SSL VPN](#), page 74-110
- [Using the Clientless SSL VPN Floating Toolbar](#), page 74-111
- [Browsing the Web](#), page 74-111
- [Browsing the Network \(File Management\)](#), page 74-112
- [Using Port Forwarding](#), page 74-112
- [Using E-mail Via Port Forwarding](#), page 74-113
- [Using E-mail Via Web Access](#), page 74-114
- [Using E-mail Via E-mail Proxy](#), page 74-114
- [Using Smart Tunnel](#), page 74-114

You may configure user accounts differently and different clientless SSL VPN features can be available to each user.

## Starting Clientless SSL VPN

You can connect to the internet using any supported connection including:

- home DSL, cable, or dial-ups
- public kiosks
- hotel hook-ups
- airport wireless nodes
- internet cafes

**Note**

See the [Cisco ASA 5500 Series VPN Compatibility Reference](#) for the list of web browsers supported by clientless SSL VPN.

### Prerequisites

- Cookies must be enabled on the browser in order to access applications via port forwarding.

- You must have a URL for clientless SSL VPN. The URL must be an https address in the following form: `https://address`, where *address* is the IP address or DNS hostname of an interface of the ASA (or load balancing cluster) on which SSL VPN is enabled. For example, `https://cisco.example.com`.
- You must have a clientless SSL VPN username and password.

### Restrictions

- Clientless SSL VPN supports local printing, but it does not support printing through the VPN to a printer on the corporate network.

## Using the Clientless SSL VPN Floating Toolbar

A floating toolbar is available to simplify the use of clientless SSL VPN. The toolbar lets you enter URLs, browse file locations, and choose preconfigured web connections without interfering with the main browser window.

The floating toolbar represents the current clientless SSL VPN session. If you click the **Close** button, the ASA prompts you to confirm that you want to close the clientless SSL VPN session.



**Tip** To paste text into a text field, use Ctrl-V. (Right-clicking is disabled on the toolbar displayed during the clientless SSL VPN session.)

### Restrictions

If you configure your browser to block popups, the floating toolbar cannot display.

## Browsing the Web

Using clientless SSL VPN does not ensure that communication with every site is secure. See [Communicating Security Tips](#).

The look and feel of web browsing with clientless SSL VPN might be different from what users are accustomed to. For example:

- The title bar for clientless SSL VPN appears above each web page.
- You access websites by:
  - Entering the URL in the **Enter Web Address** field on the clientless SSL VPN Home page
  - Clicking on a preconfigured website link on the clientless SSL VPN Home page
  - Clicking a link on a webpage accessed via one of the previous two methods

Also, depending on how you configured a particular account, it might be that:

- Some websites are blocked
- Only the websites that appear as links on the clientless SSL VPN Home page are available

### Prerequisites

- You need the username and password for protected websites.

## Restrictions

Also, depending on how you configured a particular account, it might be that:

- Some websites are blocked
- Only the websites that appear as links on the clientless SSL VPN Home page are available

## Browsing the Network (File Management)

Users might not be familiar with how to locate their files through your organization network.



### Note

Do not interrupt the **Copy File to Server** command or navigate to a different screen while the copying is in progress. Interrupting the operation can cause an incomplete file to be saved on the server.

## Prerequisites

- You must configure file permissions for shared remote access.
- You must have the server names and passwords for protected file servers.
- You must have the domain, workgroup, and server names where folders and files reside.

## Restrictions

Only shared folders and files are accessible via clientless SSL VPN.

## Using Port Forwarding



### Note

Users should always close the Application Access window when they finish using applications by clicking the **Close** icon. Failure to quit the window properly can cause Application Access or the applications themselves to be disabled. See [Recovering from hosts File Errors When Using Application Access](#) for details.

## Prerequisites

- On Macintosh OS X, only the Safari browser supports this feature.
- You must have client applications installed.
- You must have Cookies enabled on the browser.
- You must have administrator access on the PC if you use DNS names to specify servers, because modifying the hosts file requires it.
- You must have Sun Microsystems Java Runtime Environment (JRE) version 1.4.x and 1.5.x installed.

If JRE is not installed, a pop-up window displays, directing users to a site where it is available. On rare occasions, the port forwarding applet fails with JAVA exception errors. If this happens, do the following:

- a. Clear the browser cache and close the browser.

- b. Verify that no JAVA icons are in the computer task bar.
  - c. Close all instances of JAVA.
  - d. Establish a clientless SSL VPN session and launch the port forwarding JAVA applet.
- You must have Javascript enabled on the browser. By default, it is enabled.
  - If necessary, you must configure client applications.

**Note**

---

The Microsoft Outlook client does not require this configuration step. All non-Windows client applications require configuration. To determine if configuration is necessary for a Windows application, check the value of the Remote Server field. If the Remote Server field contains the server hostname, you do not need to configure the client application. If the Remote Server field contains an IP address, you must configure the client application.

---

## Restrictions

Because this feature requires installing Sun Microsystems Java™ Runtime Environment and configuring the local clients, and because doing so requires administrator permissions on the local system or full control of C:\windows\System32\drivers\etc, it is unlikely that users will be able to use applications when they connect from public remote systems.

## Detailed Steps

To configure the client application, use the server's locally mapped IP address and port number. To find this information:

1. Start a clientless SSL VPN session and click the **Application Access** link on the Home page. The Application Access window appears.
2. In the Name column, find the name of the server you want to use, then identify its corresponding client IP address and port number (in the Local column).
3. Use this IP address and port number to configure the client application. Configuration steps vary for each client application.

**Note**

---

Clicking a URL (such as one in an -e-mail message) in an application running over a clientless SSL VPN session does not open the site over that session. To open a site over the session, paste the URL into the Enter Clientless SSL VPN (URL) Address field.

---

## Using E-mail Via Port Forwarding

To use e-mail, start Application Access from the clientless SSL VPN home page. The mail client is then available for use.

**Note**

---

If you are using an IMAP client and you lose your mail server connection or are unable to make a new connection, close the IMAP application and restart clientless SSL VPN.

---

## Prerequisites

You must fulfill requirements for application access and other mail clients.

## Restrictions

We have tested Microsoft Outlook Express versions 5.5 and 6.0.

Clientless SSL VPN should support other SMTPS, POP3S, or IMAP4S e-mail programs via port forwarding, such as Lotus Notes and Eudora, but we have not verified them.

## Using E-mail Via Web Access

The following e-mail applications are supported:

- Microsoft Outlook Web App to Exchange Server 2010.  
OWA requires Internet Explorer 7 or later, or Firefox 3.01 or later.
- Microsoft Outlook Web Access to Exchange Server 2007, 2003, and 2000.  
For best results, use OWA on Internet Explorer 6.x or later, or Firefox 3.x.
- Lotus iNotes

## Prerequisites

You must have the web-based e-mail product installed.

## Restrictions

Other web-based e-mail applications should also work, but we have not verified them.

## Using E-mail Via E-mail Proxy

The following legacy e-mail applications are supported:

- Microsoft Outlook 2000 and 2002
- Microsoft Outlook Express 5.5 and 6.0

See the instructions and examples for your mail application in [Using E-Mail over Clientless SSL VPN](#).

## Prerequisites

- You must have the SSL-enabled mail application installed.
- Do not set the ASA SSL version to TLSv1 Only. Outlook and Outlook Express do not support TLS.
- You must have your mail application properly configured.

## Restrictions

- Other SSL-enabled clients should also work, but we have not verified them.

## Using Smart Tunnel

JAVA is not automatically downloaded for you as in port forwarder.

Administration privileges are not required.

## Prerequisites

- Smart tunnel requires either ActiveX or JRE on Windows and Java Web Start on Mac OS.
- You must enable cookies on the browser. (By default, they are enabled.)
- You must install Sun Microsystems Java Runtime Environment (JRE) version 1.4.x and 1.5.x.
- You must enable Javascript on the browser. (By default, it is enabled.)

## Restrictions

- Mac OS does not support a front-side proxy.
- Supports only the operating systems and browsers specified in [“Logging Off Smart TunnelConfiguring Smart Tunnel Access”](#) section on page 74-48.
- Only TCP socket-based applications are supported.

# Translating the Language of User Messages

The ASA provides language translation for the portal and screens displayed to users that initiate browser-based, clientless SSL VPN connections, as well as the interface displayed to Cisco AnyConnect VPN Client users.

This section describes how to configure the ASA to translate these user messages and includes the following sections:

- [Understanding Language Translation, page 74-115](#)
- [Creating Translation Tables, page 74-116](#)
- [Referencing the Language in a Customization Object, page 74-118](#)
- [Changing a Group Policy or User Attributes to Use the Customization Object, page 74-120](#)

## Understanding Language Translation

Functional areas and their messages that are visible to remote users are organized into translation domains. [Table 74-11](#) shows the translation domains and the functional areas translated.

**Table 74-11 Translation Domains and Functional Areas Affected**

Translation Domain	Functional Areas Translated
<b>AnyConnect</b>	<i>Messages displayed on the user interface of the Cisco AnyConnect VPN Client.</i>
CSD	Messages for Cisco Secure Desktop.
<b>customization</b>	<i>Messages on the logon and logout pages, portal page, and all the messages customizable by the user.</i>
banners	Banners displayed to remote users and messages when VPN access is denied.
<b>PortForwarder</b>	Messages displayed to Port Forwarding users.
<b>url-list</b>	Text that user specifies for URL bookmarks on the portal page.
<b>webvpn</b>	All the layer 7, AAA and portal messages that are not customizable.
<b>plugin-ica</b>	Messages for the Citrix plug-in.

**Table 74-11 Translation Domains and Functional Areas Affected (continued)**

Translation Domain	Functional Areas Translated
<b>plugin-rdp</b>	Messages for the Remote Desktop Protocol plug-in.
<b>plugin-telnet,ssh</b>	Messages for the Telnet and SSH plug-in.
<b>plugin-vnc</b>	Messages for the VNC plug-in.

The software image package for the ASA includes a translation table template for each domain that is part of the standard functionality. The templates for plug-ins are included with the plug-ins and define their own translation domains.

You can export the template for a translation domain, which creates an XML file of the template at the URL you provide. The message fields in this file are empty. You can edit the messages and import the template to create a new translation table object that resides in flash memory.

You can also export an existing translation table. The XML file created displays the messages you edited previously. Reimporting this XML file with the same language name creates a new version of the translation table object, overwriting previous messages.

Some templates are static, but some change based on the configuration of the ASA. Because you can customize the *logon and logout pages, portal page, and URL bookmarks for clientless users*, the ASA generates the **customization** and **url-list** translation domain templates dynamically, and the template automatically reflects your changes to these functional areas.

After creating translation tables, they are available to customization objects that you create and apply to group policies or user attributes. With the exception of the AnyConnect translation domain, a translation table has no affect, and messages are not translated on user screens until you create a customization object, identify a translation table to use in that object, and specify that customization for the group policy or user. Changes to the translation table for the AnyConnect domain are immediately visible to AnyConnect client users.

## Creating Translation Tables

The following procedure describes how to create translation tables:

## Detailed Steps

	Command	Purpose
Step 1	<p><b>export webvpn translation-table</b></p> <p><b>Example:</b>  hostname# <b>show import webvpn translation-table</b>  Translation Tables' Templates:  customization  AnyConnect  CSD  PortForwarder  url-list  webvpn  Citrix-plugin  RPC-plugin  Telnet-SSH-plugin  VNC-plugin</p> <p>Translation Tables:</p> <p><b>Example:</b>  hostname# <b>export webvpn translation-table</b>  <b>customization template tftp://209.165.200.225/portal</b></p>	<p>Exports a translation table template to a computer.</p> <p>Shows available translation table templates and tables.</p> <p>Exports the translation table template for the customization domain, which affects messages displayed for users in clientless SSL VPN sessions. The filename of the XML file created is <i>portal</i> (user-specified) and contains empty message fields.</p>

	Command	Purpose
Step 2	<p>Edit the translation table XML file</p> <p><b>Example:</b></p> <pre># Copyright (C) 2006 by Cisco Systems, Inc. # #, fuzzy msgid "" msgstr "" "Project-Id-Version: ASA\n" "Report-Msgid-Bugs-To: vkamyshe@cisco.com\n" "POT-Creation-Date: 2007-03-12 18:57 GMT\n" "PO-Revision-Date: YEAR-MO-DA HO:MI+ZONE\n" &gt;Last-Translator: FULL NAME &lt;EMAIL@ADDRESS&gt;\n" "Language-Team: LANGUAGE &lt;LL@li.org&gt;\n" "MIME-Version: 1.0\n" "Content-Type: text/plain; charset=UTF-8\n" "Content-Transfer-Encoding: 8bit\n"  #: DfltCustomization:24 DfltCustomization:64 msgid "Clientless SSL VPN Service" msgstr ""</pre>	<p>Shows a portion of the template that was exported as <i>portal</i>. The end of this output includes a message ID field (<i>msgid</i>) and a message string field (<i>msgstr</i>) for the message SSL VPN, which is displayed on the portal page when a user establishes a clientless SSL VPN session. The complete template contains many pairs of message fields.</p>
Step 3	<p><b>import webvpn translation-table</b></p> <p><b>Example:</b></p> <pre>hostname# import webvpn translation-table customization language es-us tftp://209.165.200.225/portal hostname# !!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!! hostname# show import webvpn translation-table Translation Tables' Templates: AnyConnect PortForwarder csd customization keepout url-list webvpn Citrix-plugin RPC-plugin Telnet-SSH-plugin VNC-plugin  Translation Tables: es-us customization</pre>	<p>Imports the translation table.</p> <p>Import the XML file. <i>es-us</i> is the abbreviation for Spanish spoken in the United States.</p>

If you import a translation table for the AnyConnect domain, your changes are effective immediately. If you import a translation table for any other domain, you must create a customization object, identify the translation table to use in that object, and specify that customization object for the group policy or user.

## Referencing the Language in a Customization Object

This section describes how to export the customization template, edit it, and import it as a customization object so that you can refer to it.

## Prerequisites

For the customization object to call these translation tables correctly, the tables must have been previously imported using the same names. These names must be compatible with language options of the browser.

## Detailed Steps

	Command	Function
Step 1	<p><code>export webvpn customization template</code></p> <p><b>Example:</b>  <code>hostname# export webvpn customization template</code>  <code>tftp://209.165.200.225/sales</code></p>	<p>Exports a customization template to a URL where you can edit it.</p> <p>Exports the template and creates the copy <i>sales</i> at the URL specified.</p>
Step 2	<p>Edit the customization template and reference the previously-imported translation table</p> <p><b>Example:</b></p> <pre>&lt;localization&gt;   &lt;languages&gt;en, ja, zh, ru, ua&lt;/languages&gt;   &lt;default-language&gt;en&lt;/default-language&gt; &lt;/localization&gt;</pre> <p><b>Example:</b></p> <pre>&lt;auth-page&gt;   ....   &lt;language-selector&gt;     &lt;mode&gt;enable&lt;/mode&gt;     &lt;title l10n="yes"&gt;Language:&lt;/title&gt;     &lt;language&gt;       &lt;code&gt;en&lt;/code&gt;       &lt;text&gt;English&lt;/text&gt;     &lt;/language&gt;     &lt;language&gt;       &lt;code&gt;es-us&lt;/code&gt;       &lt;text&gt;Spanish&lt;/text&gt;     &lt;/language&gt;   &lt;/language-selector&gt;</pre>	<p>Two areas of XML code in the customization template pertain to translation tables.</p> <p>Specifies the translation table to use.</p> <ul style="list-style-type: none"> <li>The <code>&lt;languages&gt;</code> tag in the XML code is followed by the names of the translation tables. In this example, they are en, ja, zh, ru, and ua.</li> <li>The <code>&lt;default-language&gt;</code> tag specifies the language that the remote user first encounters when connecting to the ASA. In the example code above, the language is English.</li> </ul> <p><b>Note</b> Figure 74-19 shows the Language Selector that displays on the logon page. The Language Selector gives the remote user establishing an SSL VPN connection the ability to choose a language.</p> <p>Affects the display of the Language Selector and includes the <code>&lt;language-selector&gt;</code> tag and the associated <code>&lt;language&gt;</code> tags that enable and customize the Language Selector:</p> <ul style="list-style-type: none"> <li>The <code>&lt;language-selector&gt;</code> group of tags includes the <code>&lt;mode&gt;</code> tag that enables and disables the displaying of the Language Selector and the <code>&lt;title&gt;</code> tag that specifies the title of the drop-down box listing the languages.</li> <li>The <code>&lt;language&gt;</code> group of tags includes the <code>&lt;code&gt;</code> and <code>&lt;text&gt;</code> tags that map the language name displayed in the Language Selector drop-down box to a specific translation table.</li> </ul>
Step 3	Save the file after making your changes.	

	Command	Function
Step 4	<pre>import webvpn customization</pre> <p><b>Example:</b>  hostname# <code>import webvpn customization sales</code>  <code>tftp://209.165.200.225/sales</code>  hostname# !!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!</p>	Imports the customization template as a new object.
Step 5	<pre>show import webvpn customization</pre> <p><b>Example:</b>  hostname# <code>import webvpn customization sales</code>  <code>tftp://209.165.200.225/sales</code>  hostname# !!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!</p>	Shows the new customization object <i>sales</i> .

Figure 74-19 Language Selector



## Changing a Group Policy or User Attributes to Use the Customization Object

This section describes how to activate your changes for specific groups or users.

### Detailed Steps

	Command	Purpose
Step 1	<code>webvpn</code>	Switches to webvpn configuration mode.

	Command	Purpose
Step 2	<code>group-policy webvpn</code>	Switches to group-policy webvpn configuration mode.
Step 3	<p><code>customization</code></p> <p><b>Example:</b>  <code>hostname(config)# group-policy sales attributes</code>  <code>hostname(config-group-policy)# webvpn</code>  <code>hostname(config-group-webvpn)# customization value sales</code></p>	<p>Enables the customization object.</p> <p>Shows the customization object <i>sales</i> enabled in the group policy <i>sales</i>.</p>

- 
- Step 8 (Optional) Highlight a bookmark and click **Assign** to assign the selected bookmark to one or more group policies, dynamic access policies, or LOCAL users.

## Capturing Data

The CLI **capture** command lets you log information about websites that do not display properly over a clientless SSL VPN session. This data can help your Cisco customer support engineer troubleshoot problems. The following sections describe how to capture and view clientless SSL VPN session data:

- [Creating a Capture File, page 74-121](#)
- [Using a Browser to Display Capture Data, page 74-122](#)

### Prerequisites

- Enabling clientless SSL VPN capture affects the performance of the security appliance. Be sure to disable the capture after you generate the capture files needed for troubleshooting.

## Creating a Capture File

Perform the following steps to capture data about a clientless SSL VPN session to a file.

## Detailed Steps

	Command	Purpose
Step 1	<pre>capture capture_name type webvpn user webvpn_username</pre> <p><b>Example:</b></p> <pre>hostname# capture hr type webvpn user user2 WebVPN capture started.   capture name    hr   user name       user2 hostname# no capture hr</pre>	<p>Starts the capture utility for clientless SSL VPN.</p> <ul style="list-style-type: none"> <li><i>capture_name</i> is a name you assign to the capture, which is also prepended to the name of the capture files.</li> <li><i>webvpn_user</i> is the username to match for capture.</li> </ul> <p>Creates a capture named hr, which captures traffic for user2 to a file.</p>
Step 2	<p>(Optional)</p> <pre>no capture capture_name</pre>	<p>Stops the capture utility from capturing packets after a user has logged in and began a clientless SSL VPN session. The capture utility creates a <i>capture_name.zip</i> file, which is encrypted with the password <b>koleso</b>.</p>
Step 3	Send the .zip file to Cisco Systems or attach it to a Cisco TAC service request.	
Step 4	Unzip the contents of the file using the <i>koleso</i> password.	

## Using a Browser to Display Capture Data

Perform the following steps to capture data about a clientless SSL VPN session and view it in a browser.

## Detailed Steps

	Command	Purpose
Step 1	<code>capture capture_name type webvpn user webvpn_username</code>	Starts the capture utility for clientless SSL VPN. <ul style="list-style-type: none"> <li><code>capture_name</code> is a name you assign to the capture, which is also prepended to the name of the capture files.</li> <li><code>webvpn_user</code> is the username to match for capture.</li> </ul>
Step 2	(Optional) <code>no capture capture_name</code>	Stops the capture utility from capturing packets after a user has logged in and began a clientless SSL VPN session.
Step 3	Open a browser and enter the following:  <code>https://asdm_enabled_interface_of_the_security_appliance:port/admin/capture/capture_name/pcap</code>  <b>Example:</b> <code>https://192.0.2.1:60000/admin/capture/hr/pcap</code>	Displays the capture named hr in a sniffer format.
Step 4	Repeat Step 2.	





## CHAPTER 75

# Configuring AnyConnect VPN Client Connections

---

This section describes how to configure AnyConnect VPN Client Connections and covers the following topics:

- [Information About AnyConnect VPN Client Connections, page 75-1](#)
- [Licensing Requirements for AnyConnect Connections, page 75-2](#)
- [Guidelines and Limitations, page 75-5](#)
- [Configuring AnyConnect Connections, page 75-5](#)
- [Configuring Advanced AnyConnect Features, page 75-14](#)
- [Configuration Examples for Enabling AnyConnect Connections, page 75-21](#)
- [Feature History for AnyConnect Connections, page 75-21](#)

## Information About AnyConnect VPN Client Connections

The Cisco AnyConnect Secure Mobility Client provides secure SSL and IPsec/IKEv2 connections to the ASA for remote users. Without a previously-installed client, remote users enter the IP address in their browser of an interface configured to accept SSL or IPsec/IKEv2 VPN connections. Unless the ASA is configured to redirect http:// requests to https://, users must enter the URL in the form https://<address>.

After entering the URL, the browser connects to that interface and displays the login screen. If the user satisfies the login and authentication, and the ASA identifies the user as requiring the client, it downloads the client that matches the operating system of the remote computer. After downloading, the client installs and configures itself, establishes a secure SSL or IPsec/IKEv2 connection and either remains or uninstalls itself (depending on the configuration) when the connection terminates.

In the case of a previously installed client, when the user authenticates, the ASA examines the revision of the client, and upgrades the client as necessary.

When the client negotiates an SSL VPN connection with the ASA, it connects using Transport Layer Security (TLS), and optionally, Datagram Transport Layer Security (DTLS). DTLS avoids latency and bandwidth problems associated with some SSL connections and improves the performance of real-time applications that are sensitive to packet delays.

The AnyConnect client can be downloaded from the ASA, or it can be installed manually on the remote PC by the system administrator. For more information about installing the client manually, see the *Cisco AnyConnect VPN Client Administrator Guide*.

The ASA downloads the client based on the group policy or username attributes of the user establishing the connection. You can configure the ASA to automatically download the client, or you can configure it to prompt the remote user about whether to download the client. In the latter case, if the user does not respond, you can configure the ASA to either download the client after a timeout period or present the login page.

## Licensing Requirements for AnyConnect Connections

The following table shows the licensing requirements for this feature:



**Note**

This feature is not available on No Payload Encryption models.

Model	License Requirement <sup>1,2</sup>
ASA 5505	Use one of the following: <ul style="list-style-type: none"> <li>• AnyConnect Premium license:               <ul style="list-style-type: none"> <li>– Base license or Security Plus license: 2 sessions.</li> <li>– <i>Optional permanent or time-based licenses: 10 or 25 sessions.</i></li> <li>– <i>Shared licenses are not supported.</i><sup>3</sup></li> </ul> </li> <li>• AnyConnect Essentials license<sup>4</sup>: 25 sessions.</li> </ul>
ASA 5510	Use one of the following: <ul style="list-style-type: none"> <li>• AnyConnect Premium license:               <ul style="list-style-type: none"> <li>– Base and Security Plus license: 2 sessions.</li> <li>– <i>Optional permanent or time-based licenses: 10, 25, 50, 100, or 250 sessions.</i></li> <li>– <i>Optional Shared licenses<sup>3</sup>: Participant or Server. For the Server license, 500-50,000 in increments of 500 and 50,000-545,000 in increments of 1000.</i></li> </ul> </li> <li>• AnyConnect Essentials license<sup>4</sup>: 250 sessions.</li> </ul>
ASA 5520	Use one of the following: <ul style="list-style-type: none"> <li>• AnyConnect Premium license:               <ul style="list-style-type: none"> <li>– Base license: 2 sessions.</li> <li>– <i>Optional permanent or time-based licenses: 10, 25, 50, 100, 250, 500, or 750 sessions.</i></li> <li>– <i>Optional Shared licenses<sup>3</sup>: Participant or Server. For the Server license, 500-50,000 in increments of 500 and 50,000-545,000 in increments of 1000.</i></li> </ul> </li> <li>• AnyConnect Essentials license<sup>4</sup>: 750 sessions.</li> </ul>

Model	License Requirement <sup>1,2</sup>
ASA 5540	Use one of the following: <ul style="list-style-type: none"> <li>• AnyConnect Premium license:               <ul style="list-style-type: none"> <li>– Base license: 2 sessions.</li> <li>– <i>Optional permanent or time-based licenses: 10, 25, 50, 100, 250, 500, 750, 1000, or 2500 sessions.</i></li> <li>– <i>Optional Shared licenses<sup>3</sup>: Participant or Server. For the Server license, 500-50,000 in increments of 500 and 50,000-545,000 in increments of 1000.</i></li> </ul> </li> <li>• AnyConnect Essentials license<sup>4</sup>: 2500 sessions.</li> </ul>
ASA 5550	Use one of the following: <ul style="list-style-type: none"> <li>• AnyConnect Premium license:               <ul style="list-style-type: none"> <li>– Base license: 2 sessions.</li> <li>– <i>Optional permanent or time-based licenses: 10, 25, 50, 100, 250, 500, 750, 1000, 2500, or 5000 sessions.</i></li> <li>– <i>Optional Shared licenses<sup>3</sup>: Participant or Server. For the Server license, 500-50,000 in increments of 500 and 50,000-545,000 in increments of 1000.</i></li> </ul> </li> <li>• AnyConnect Essentials license<sup>4</sup>: 5000 sessions.</li> </ul>
ASA 5580	Use one of the following: <ul style="list-style-type: none"> <li>• AnyConnect Premium license:               <ul style="list-style-type: none"> <li>– Base license: 2 sessions.</li> <li>– <i>Optional permanent or time-based licenses: 10, 25, 50, 100, 250, 500, 750, 1000, 2500, 5000, or 10000 sessions.</i></li> <li>– <i>Optional Shared licenses<sup>3</sup>: Participant or Server. For the Server license, 500-50,000 in increments of 500 and 50,000-545,000 in increments of 1000.</i></li> </ul> </li> <li>• AnyConnect Essentials license<sup>4</sup>: 10000 sessions.</li> </ul>
ASA 5512-X	Use one of the following: <ul style="list-style-type: none"> <li>• AnyConnect Premium license:               <ul style="list-style-type: none"> <li>– Base license: 2 sessions.</li> <li>– <i>Optional permanent or time-based licenses: 10, 25, 50, 100, or 250 sessions.</i></li> <li>– <i>Optional Shared licenses<sup>3</sup>: Participant or Server. For the Server license, 500-50,000 in increments of 500 and 50,000-545,000 in increments of 1000.</i></li> </ul> </li> <li>• AnyConnect Essentials license<sup>4</sup>: 250 sessions.</li> </ul>
ASA 5515-X	Use one of the following: <ul style="list-style-type: none"> <li>• AnyConnect Premium license:               <ul style="list-style-type: none"> <li>– Base license: 2 sessions.</li> <li>– <i>Optional permanent or time-based licenses: 10, 25, 50, 100, or 250 sessions.</i></li> <li>– <i>Optional Shared licenses<sup>3</sup>: Participant or Server. For the Server license, 500-50,000 in increments of 500 and 50,000-545,000 in increments of 1000.</i></li> </ul> </li> <li>• AnyConnect Essentials license<sup>4</sup>: 250 sessions.</li> </ul>

Model	License Requirement <sup>1,2</sup>
ASA 5525-X	Use one of the following: <ul style="list-style-type: none"> <li>• AnyConnect Premium license:               <ul style="list-style-type: none"> <li>– Base license: 2 sessions.</li> <li>– <i>Optional permanent or time-based licenses: 10, 25, 50, 100, 250, 500, or 750 sessions.</i></li> <li>– <i>Optional Shared licenses<sup>3</sup>: Participant or Server. For the Server license, 500-50,000 in increments of 500 and 50,000-545,000 in increments of 1000.</i></li> </ul> </li> <li>• AnyConnect Essentials license<sup>4</sup>: 750 sessions.</li> </ul>
ASA 5545-X	Use one of the following: <ul style="list-style-type: none"> <li>• AnyConnect Premium license:               <ul style="list-style-type: none"> <li>– Base license: 2 sessions.</li> <li>– <i>Optional permanent or time-based licenses: 10, 25, 50, 100, 250, 500, 750, 1000, or 2500 sessions.</i></li> <li>– <i>Optional Shared licenses<sup>3</sup>: Participant or Server. For the Server license, 500-50,000 in increments of 500 and 50,000-545,000 in increments of 1000.</i></li> </ul> </li> <li>• AnyConnect Essentials license<sup>4</sup>: 2500 sessions.</li> </ul>
ASA 5555-X	Use one of the following: <ul style="list-style-type: none"> <li>• AnyConnect Premium license:               <ul style="list-style-type: none"> <li>– Base license: 2 sessions.</li> <li>– <i>Optional permanent or time-based licenses: 10, 25, 50, 100, 250, 500, 750, 1000, 2500, or 5000 sessions.</i></li> <li>– <i>Optional Shared licenses<sup>3</sup>: Participant or Server. For the Server license, 500-50,000 in increments of 500 and 50,000-545,000 in increments of 1000.</i></li> </ul> </li> <li>• AnyConnect Essentials license<sup>4</sup>: 5000 sessions.</li> </ul>
ASA 5585-X with SSP-10	Use one of the following: <ul style="list-style-type: none"> <li>• AnyConnect Premium license:               <ul style="list-style-type: none"> <li>– Base license: 2 sessions.</li> <li>– <i>Optional permanent or time-based licenses: 10, 25, 50, 100, 250, 500, 750, 1000, 2500, or 5000 sessions.</i></li> <li>– <i>Optional Shared licenses<sup>3</sup>: Participant or Server. For the Server license, 500-50,000 in increments of 500 and 50,000-545,000 in increments of 1000.</i></li> </ul> </li> <li>• AnyConnect Essentials license<sup>4</sup>: 5000 sessions.</li> </ul>
ASA 5585-X with SSP-20, -40, and -60	Use one of the following: <ul style="list-style-type: none"> <li>• AnyConnect Premium license:               <ul style="list-style-type: none"> <li>– Base license: 2 sessions.</li> <li>– <i>Optional permanent or time-based licenses: 10, 25, 50, 100, 250, 500, 750, 1000, 2500, 5000, or 10000 sessions.</i></li> <li>– <i>Optional Shared licenses<sup>3</sup>: Participant or Server. For the Server license, 500-50,000 in increments of 500 and 50,000-545,000 in increments of 1000.</i></li> </ul> </li> <li>• AnyConnect Essentials license<sup>4</sup>: 10000 sessions.</li> </ul>

1. If you start a clientless SSL VPN session and then start an AnyConnect client session from the portal, 1 session is used in total. However, if you start the AnyConnect client first (from a standalone client, for example) and then log into the clientless SSL VPN portal, then 2 sessions are used.
2. The maximum combined VPN sessions of *all* types cannot exceed the maximum sessions shown in this table. For the ASA 5505, the maximum combined sessions is 10 for the Base license, and 25 for the Security Plus license.
3. A shared license lets the ASA act as a shared license server for multiple client ASAs. The shared license pool is large, but the maximum number of sessions used by each individual ASA cannot exceed the maximum number listed for permanent licenses.
4. The AnyConnect Essentials license enables AnyConnect VPN client access to the ASA. This license does not support browser-based SSL VPN access or Cisco Secure Desktop. For these features, activate an AnyConnect Premium license instead of the AnyConnect Essentials license.

**Note:** With the AnyConnect Essentials license, VPN users can use a Web browser to log in, and download and start (WebLaunch) the AnyConnect client.

The AnyConnect client software offers the same set of client features, whether it is enabled by this license or an AnyConnect Premium SSL VPN Edition license.

The AnyConnect Essentials license cannot be active at the same time as the following licenses on a given ASA: AnyConnect Premium license (all types) or the Advanced Endpoint Assessment license. You can, however, run AnyConnect Essentials and AnyConnect Premium licenses on different ASAs in the same network.

By default, the ASA uses the AnyConnect Essentials license, but you can disable it to use other licenses by using the **no anyconnect-essentials** command.

For a detailed list of the features supported by the AnyConnect Essentials license and AnyConnect Premium license, see *AnyConnect Secure Mobility Client Features, Licenses, and OSs*:

[http://www.cisco.com/en/US/products/ps10884/products\\_feature\\_guides\\_list.html](http://www.cisco.com/en/US/products/ps10884/products_feature_guides_list.html)

## Guidelines and Limitations

This section includes the guidelines and limitations for this feature.

### Remote PC System Requirements

For the requirements of endpoint computers running the AnyConnect Secure Mobility Client, see the release notes for the AnyConnect client version you are deploying with the ASA.

### Remote HTTPS Certificates Limitation

The ASA does not verify remote HTTPS certificates.

## Configuring AnyConnect Connections

This section describes prerequisites, restrictions, and detailed tasks to configure the ASA to accept AnyConnect VPN client connections, and includes the following topics:

- [Configuring the ASA to Web-Deploy the Client, page 75-6](#)
- [Enabling Permanent Client Installation, page 75-7](#)
- [Configuring DTLS, page 75-8](#)
- [Prompting Remote Users, page 75-8](#)

- [Enabling AnyConnect Client Profile Downloads, page 75-10](#)
- [Enabling Additional AnyConnect Client Features, page 75-11](#)
- [Enabling Start Before Logon, page 75-11](#)
- [Translating Languages for AnyConnect User Messages, page 75-12](#)
- [Configuring Advanced AnyConnect Features, page 75-14](#)
- [Updating AnyConnect Client Images, page 75-18](#)
- [Enabling IPv6 VPN Access, page 75-18](#)

## Configuring the ASA to Web-Deploy the Client

The section describes the steps to configure the ASA to web-deploy the AnyConnect client.

### Prerequisites

Copy the client image package to the ASA using TFTP or another method.

### Detailed Steps

	Command	Purpose
Step 1	<pre>anyconnect image filename order</pre> <p><b>Example:</b></p> <pre>hostname(config-webvpn)#anyconnect image anyconnect-win-2.3.0254-k9.pkg 1 hostname(config-webvpn)#anyconnect image anyconnect-macosx-i386-2.3.0254-k9.pkg 2 hostname(config-webvpn)#anyconnect image anyconnect-linux-2.3.0254-k9.pkg 3</pre>	<p>Identifies a file on flash as an AnyConnect client package file.</p> <p>The ASA expands the file in cache memory for downloading to remote PCs. If you have multiple clients, assign an order to the client images with the order argument.</p> <p>The ASA downloads portions of each client in the order you specify until it matches the operating system of the remote PC. Therefore, assign the lowest number to the image used by the most commonly-encountered operating system.</p> <p><b>Note</b> You must issue the <b>anyconnect enable</b> command after configuring the AnyConnect images with the <b>anyconnect image xyz</b> command. If you do not enable the <b>anyconnect enable</b> command, AnyConnect will not operate as expected, and <b>show webvpn anyconnect</b> considers the SSL VPN client as not enabled rather than listing the installed AnyConnect packages.</p>
Step 2	<pre>enable interface</pre> <p><b>Example:</b></p> <pre>hostname(config)# webvpn hostname(config-webvpn)# enable outside</pre>	<p>Enables SSL on an interface for clientless or AnyConnect SSL connections.</p>
Step 3	<pre>anyconnect enable</pre>	<p>Without issuing this command, AnyConnect does not function as expected, and a <b>show webvpn anyconnect</b> command returns that the “SSL VPN is not enabled,” instead of listing the installed AnyConnect packages.</p>

	Command	Purpose
Step 4	<pre>ip local pool poolname startaddr-endaddr mask mask</pre> <p><b>Example:</b>  <pre>hostname(config)# ip local pool vpn_users 209.165.200.225-209.165.200.254 mask 255.255.255.224</pre></p>	(Optional) Creates an address pool. You can use another method of address assignment, such as DHCP and/or user-assigned addressing.
Step 5	<pre>address-pool poolname</pre> <p><b>Example:</b>  <pre>hostname(config)# tunnel-group telecommuters general-attributes hostname(config-tunnel-general)# address-pool vpn_users</pre></p>	Assigns an address pool to a tunnel group.
Step 6	<pre>default-group-policy name</pre> <p><b>Example:</b>  <pre>hostname(config-tunnel-general)# default-group-policy sales</pre></p>	Assigns a default group policy to the tunnel group.
Step 7	<pre>group-alias name enable</pre> <p><b>Example:</b>  <pre>hostname(config)# tunnel-group telecommuters webvpn-attributes hostname(config-tunnel-webvpn)# group-alias sales_department enable</pre></p>	Enables the display of the tunnel-group list on the clientless portal and AnyConnect GUI login page. The list of aliases is defined by the <i>group-alias name enable</i> command.
Step 8	<pre>tunnel-group-list enable</pre> <p><b>Example:</b>  <pre>hostname(config)# webvpn hostname(config-webvpn)# tunnel-group-list enable</pre></p>	Specifies the AnyConnect client as a permitted VPN tunneling protocol for the group or user.
Step 9	<pre>vpn-tunnel-protocol</pre> <p><b>Example:</b>  <pre>hostname(config)# group-policy sales attributes hostname(config-group-policy)# webvpn hostname(config-group-webvpn)# vpn-tunnel-protocol</pre></p>	Specifies SSL as a permitted VPN tunneling protocol for the group or user. You can also specify additional protocols. For more information, see the <b>vpn-tunnel-protocol</b> command in the <i>Cisco ASA 5500 Series Command Reference</i> .  For more information about assigning users to group policies, see Chapter 6, Configuring Connection Profiles, Group Policies, and Users.

## Enabling Permanent Client Installation

Enabling permanent client installation disables the automatic uninstalling feature of the client. The client remains installed on the remote computer for subsequent connections, reducing the connection time for the remote user.



### Note

AnyConnect versions 3.0 and later do not support permanent client installation. The CLI is still available to support older versions of AnyConnect.

To enable permanent client installation for a specific group or user, use the **anyconnect keep-installer** command from group-policy or username webvpn modes:

**anyconnect keep-installer installer**

The default is that permanent installation of the client is enabled. The client remains on the remote computer at the end of the session. The following example configures the existing group-policy *sales* to remove the client on the remote computer at the end of the session:

```
hostname(config)# group-policy sales attributes
hostname(config-group-policy)# webvpn
hostname(config-group-policy)# anyconnect keep-installer installed none
```

## Configuring DTLS

Datagram Transport Layer Security (DTLS) allows the AnyConnect client establishing an SSL VPN connection to use two simultaneous tunnels—an SSL tunnel and a DTLS tunnel. Using DTLS avoids latency and bandwidth problems associated with SSL connections and improves the performance of real-time applications that are sensitive to packet delays.

By default, DTLS is enabled when SSL VPN access is enabled on an interface. If you disable DTLS, SSL VPN connections connect with an SSL VPN tunnel only.

**Note**

In order for DTLS to fall back to a TLS connection, Dead Peer Detection (DPD) must be enabled. If you do not enable DPD, and the DTLS connection experiences a problem, the connection terminates instead of falling back to TLS. For more information on enabling DPD, see [Enabling and Adjusting Dead Peer Detection, page 75-15](#)

You can disable DTLS for all AnyConnect client users with the **enable** command **tls-only** option in webvpn configuration mode:

```
enable <interface> tls-only
```

For example:

```
hostname(config-webvpn)# enable outside tls-only
```

By default, DTLS is enabled for specific groups or users with the **anyconnect ssl dtls** command in group policy webvpn or username webvpn configuration mode:

```
[no] anyconnect ssl dtls enable
```

If you need to disable DTLS, use the **no** form of the command. For example:

```
hostname(config)# group-policy sales attributes
hostname(config-group-policy)# webvpn
hostname(config-group-webvpn)# no anyconnect ssl dtls enable
```

## Prompting Remote Users

You can enable the ASA to prompt remote SSL VPN client users to download the client with the **anyconnect ask** command from group policy webvpn or username webvpn configuration modes:

```
[no] anyconnect ask {none | enable [default {webvpn | } timeout value]}
```

**anyconnect enable** prompts the remote user to download the client or go to the clientless portal page and waits indefinitely for user response.

**anyconnect ask enable default** immediately downloads the client.


**anyconnect ask enable default webvpn** immediately goes to the portal page.

**anyconnect ask enable default timeout value** prompts the remote user to download the client or go to the clientless portal page and waits the duration of *value* before taking the default action—downloading the client.

**anyconnect ask enable default clientless timeout value** prompts the remote user to download the client or go to the clientless portal page, and waits the duration of *value* before taking the default action—displaying the clientless portal page.

Figure 75-1 shows the prompt displayed to remote users when either **default anyconnect timeout value** or **default webvpn timeout value** is configured:

**Figure 75-1** Prompt Displayed to Remote Users for SSL VPN Client Download

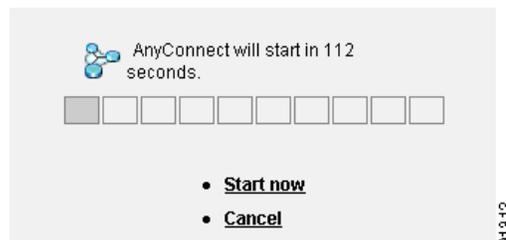

The following example configures the ASA to prompt the user to download the client or go to the clientless portal page and wait *10 seconds for a response* before downloading the client:

```
hostname(config-group-webvpn)# anyconnect ask enable default anyconnect timeout 10
```

## Enabling AnyConnect Client Profile Downloads

You enable Cisco AnyConnect Secure Mobility client features in the AnyConnect profiles—XML files that contain configuration settings for the core client with its VPN functionality and for the optional client modules Network Access Manager (NAM), posture, telemetry, and Web Security. The ASA deploys the profiles during AnyConnect installation and updates. Users cannot manage or modify profiles.

### Profile Editor in ASDM

You can configure a profile using the AnyConnect profile editor, a convenient GUI-based configuration tool launched from ASDM. The AnyConnect software package for Windows, version 2.5 and later, includes the editor, which activates when you load the AnyConnect package on the ASA and specify it as an AnyConnect client image.

### Standalone Profile Editor

We also provide a standalone version of the profile editor for Windows that you can use as an alternative to the profile editor integrated with ASDM. If you are predeploying the client, you can use the standalone profile editor to create profiles for the VPN service and other modules that you deploy to computers using your software management system. For more information about using the profile editor, see the [Cisco AnyConnect Secure Mobility Client Administrator Guide](#).



#### Note

The AnyConnect client protocol defaults to SSL. To enable IPsec IKEv2, you must configure the IKEv2 settings on the ASA and also configure IKEv2 as the primary protocol in the client profile. The IKEv2-enabled profile must be deployed to the endpoint computer, otherwise the client attempts to connect using SSL. For more information, see the [Cisco AnyConnect Secure Mobility Client Administrator Guide](#).

Follow these steps to edit a profile and enable the ASA to download it to remote clients:

- Step 1** Use the profile editor from ASDM or the standalone profile editor to create a profile. For more information, see the [Cisco AnyConnect Secure Mobility Client Administrator Guide](#).
- Step 2** Load the profile file into flash memory on the ASA using tftp or another method.
- Step 3** Use the **anyconnect profiles** command from webvpn configuration mode to identify the file as a client profile to load into cache memory.

The following example specifies the files *sales\_hosts.xml* and *engineering\_hosts.xml* as profiles:

```
asa1(config-webvpn)# anyconnect profiles sales disk0:/sales_hosts.xml
asa1(config-webvpn)# anyconnect profiles engineering disk0:/engineering_hosts.xml
```

The profiles are now available to group policies.

You can view the profiles loaded in cache memory using the **dir cache:stc/profiles** command:

```
hostname(config-webvpn)# dir cache:/stc/profiles

Directory of cache:stc/profiles/

0 ---- 774 11:54:41 Nov 22 2006 engineering.xml
0 ---- 774 11:54:29 Nov 22 2006 sales.xml

2428928 bytes total (18219008 bytes free)
hostname(config-webvpn)#
```

- Step 4** Enter group policy webvpn configuration mode and specify a client profile for a group policy with the **anyconnect profiles** command:

You can enter the **anyconnect profiles value** command followed by a question mark (?) to view the available profiles. For example:

```
asa1(config-group-webvpn)# anyconnect profiles value ?

config-group-webvpn mode commands/options:
Available configured profile packages:
 engineering
 sales
```

The next example configures the group policy to use the profile *sales* with the client profile type *vpn*:

```
asa1(config-group-webvpn)# anyconnect profiles value sales type vpn
asa1(config-group-webvpn)#
```

## Enabling Additional AnyConnect Client Features

To minimize download time, the client only requests downloads (from the ASA) of the core modules that it needs. As additional features become available for the AnyConnect client, you need to update the remote clients in order for them to use the features.

To enable new features, you must specify the new module names using the **anyconnect modules** command from group policy webvpn or username webvpn configuration mode:

```
[no] anyconnect modules {none | value string}
```

*Separate multiple strings with commas.*

For a list of values to enter for each client feature, see the release notes for the Cisco AnyConnect VPN Client.

## Enabling Start Before Logon

Start Before Logon (SBL) allows login scripts, password caching, drive mapping, and more, for the AnyConnect client installed on a Windows PC. For SBL, you must enable the ASA to download the module which enables graphical identification and authentication (GINA) for the AnyConnect client. The following procedure shows how to enable SBL:

- Step 1** Enable the ASA to download the GINA module for VPN connection to specific groups or users using the **anyconnect modules vpngina** command from group policy webvpn or username webvpn configuration modes.
- In the following example, the user enters group-policy attributes mode for the group policy *telecommuters*, enters webvpn configuration mode for the group policy, and specifies the string *vpngina*:
- ```
hostname(config)# group-policy telecommuters attributes
hostname(config-group-policy)# webvpn
hostname(config-group-webvpn)#anyconnect modules value vpngina
```
- Step 2** Retrieve a copy of the client profiles file (AnyConnectProfile.tmpl).
- Step 3** Edit the profiles file to specify that SBL is enabled. The example below shows the relevant portion of the profiles file (AnyConnectProfile.tmpl) for Windows:

```
<Configuration>
  <ClientInitialization>
```

```
<UseStartBeforeLogon>>false</UseStartBeforeLogon>
</ClientInitialization>
```

The `<UseStartBeforeLogon>` tag determines whether the client uses SBL. To turn SBL on, replace *false* with *true*. The example below shows the tag with SBL turned on:

```
<ClientInitialization>
  <UseStartBeforeLogon>true</UseStartBeforeLogon>
</ClientInitialization>
```

- Step 4** Save the changes to `AnyConnectProfile.tmpl` and update the profile file for the group or user on the ASA using the `profile` command from `webvpn` configuration mode. For example:

```
asa1(config-webvpn)#anyconnect profiles sales disk0:/sales_hosts.xml
```

Translating Languages for AnyConnect User Messages

The ASA provides language translation for the portal and screens displayed to users that initiate browser-based, Clientless SSL VPN connections, as well as the interface displayed to Cisco AnyConnect VPN Client users.

This section describes how to configure the ASA to translate these user messages and includes the following sections:

- [Understanding Language Translation, page 75-12](#)
- [Creating Translation Tables, page 75-12](#)

Understanding Language Translation

Functional areas and their messages that are visible to remote users are organized into translation domains. *All messages displayed on the user interface of the Cisco AnyConnect VPN Client are located in the AnyConnect domain.*

The software image package for the ASA includes a translation table template for the AnyConnect domain. You can export the template, which creates an XML file of the template at the URL you provide. The message fields in this file are empty. You can edit the messages and import the template to create a new translation table object that resides in flash memory.

You can also export an existing translation table. The XML file created displays the messages you edited previously. Reimporting this XML file with the same language name creates a new version of the translation table object, overwriting previous messages. Changes to the translation table for the AnyConnect domain are immediately visible to AnyConnect client users.

Creating Translation Tables

The following procedure describes how to create translation tables for the AnyConnect domain:

- Step 1** Export a translation table template to a computer with the `export webvpn translation-table` command from privileged EXEC mode.

In the following example, the `show webvpn translation-table` command shows available translation table templates and tables.

```
hostname# show import webvpn translation-table
Translation Tables' Templates:
```

```

customization
AnyConnect
CSD
PortForwarder
url-list
webvpn
Citrix-plugin
RPC-plugin
Telnet-SSH-plugin
VNC-plugin

```

Translation Tables:

Then the user exports the translation table for the AnyConnect translation domain. The filename of the XML file created is named *client* and contains empty message fields:

```

hostname# export webvpn translation-table AnyConnect template
tftp://209.165.200.225/client

```

In the next example, the user exports a translation table named *zh*, which was previously imported from a template. *zh* is the abbreviation by Microsoft Internet Explorer for the Chinese language.

```

hostname# export webvpn translation-table customization language zh
tftp://209.165.200.225/chinese_client

```

- Step 2** Edit the Translation Table XML file. The following example shows a portion of the AnyConnect template. The end of this output includes a message ID field (*msgid*) and a message string field (*msgstr*) for the message *Connected*, which is displayed on the AnyConnect client GUI when the client establishes a VPN connection. The complete template contains many pairs of message fields:

```

# SOME DESCRIPTIVE TITLE.
# Copyright (C) YEAR THE PACKAGE'S COPYRIGHT HOLDER
# This file is distributed under the same license as the PACKAGE package.
# FIRST AUTHOR <EMAIL@ADDRESS>, YEAR.
#
#, fuzzy
msgid ""
msgstr ""
"Project-Id-Version: PACKAGE VERSION\n"
"Report-Msgid-Bugs-To: \n"
"POT-Creation-Date: 2006-11-01 16:39-0700\n"
"PO-Revision-Date: YEAR-MO-DA HO:MI+ZONE\n"
"Last-Translator: FULL NAME <EMAIL@ADDRESS>\n"
"Language-Team: LANGUAGE <LL@li.org>\n"
"MIME-Version: 1.0\n"
"Content-Type: text/plain; charset=CHARSET\n"
"Content-Transfer-Encoding: 8bit\n"

#: C:\cygwin\home\<user>\cvc\main\Api\AgentIfc.cpp:23
#: C:\cygwin\home\<user>\cvc\main\Api\check\AgentIfc.cpp:22
#: C:\cygwin\home\<user>\cvc\main\Api\save\AgentIfc.cpp:23
#: C:\cygwin\home\<user>\cvc\main\Api\save\AgentIfc.cpp~:20
#: C:\cygwin\home\<user>\cvc\main\Api\save\older\AgentIfc.cpp:22
msgid "Connected"
msgstr ""

```

The *msgid* contains the default translation. The *msgstr* that follows *msgid* provides the translation. To create a translation, enter the translated text between the quotes of the *msgstr* string. For example, to translate the message “Connected” with a Spanish translation, insert the Spanish text between the quotes:

```

msgid "Connected"
msgstr "Conectado"

```

Be sure to save the file.

- Step 3** Import the translation table using the **import webvpn translation-table** command from privileged EXEC mode. Be sure to specify the name of the new translation table with the abbreviation for the language that is compatible with the browser.

In the following example, the XML file is imported *es-us*—the abbreviation used by Microsoft Internet Explorer for Spanish spoken in the United States.

```
hostname# import webvpn translation-table AnyConnect language es-us
tftp://209.165.200.225/client
hostname# !!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!
hostname# show import webvpn translation-table
Translation Tables' Templates:
AnyConnect
PortForwarder
csd
customization
keepout
url-list
webvpn
Citrix-plugin
RPC-plugin
Telnet-SSH-plugin
VNC-plugin

Translation Tables:
es-us AnyConnect
```

Configuring Advanced AnyConnect Features

The following section describes advanced features that fine-tune AnyConnect SSL VPN connections, and includes the following sections:

- [Enabling Rekey, page 75-14](#)
- [Enabling and Adjusting Dead Peer Detection, page 75-15](#)
- [Enabling Keepalive, page 75-16](#)
- [Using Compression, page 75-16](#)
- [Adjusting MTU Size, page 75-17](#)
- [Configuring Session Timeouts, page 75-17](#)

Enabling Rekey

When the ASA and the AnyConnect client perform a rekey on an SSL VPN connection, they renegotiate the crypto keys and initialization vectors, increasing the security of the connection.

To enable the client to perform a rekey on an SSL VPN connection for a specific group or user, use the **anyconnect ssl rekey** command from group-policy or username webvpn modes.

```
[no]anyconnect ssl rekey {method {new-tunnel | none | ssl} | time minutes}
```

method new-tunnel specifies that the client establishes a new tunnel during rekey.

method ssl specifies that the client establishes a new tunnel during rekey.

method none disables rekey.



Note Configuring the rekey method as **ssl** or **new-tunnel** specifies that the client establishes a new tunnel during rekey instead of the SSL renegotiation taking place during the rekey. See the [Cisco ASA 5500 Series Command Reference, 8.4](#) for a history of the **anyconnect ssl rekey** command.

time minutes specifies the number of minutes from the start of the session, or from the last rekey, until the rekey takes place, from 1 to 10080 (1 week).

In the following example, the client is configured to renegotiate with SSL during rekey, which takes place 30 minutes after the session begins, for the existing group-policy *sales*:

```
hostname(config)# group-policy sales attributes
hostname(config-group-policy)# webvpn
hostname(config-group-webvpn)# anyconnect ssl rekey method ssl
hostname(config-group-webvpn)# anyconnect ssl rekey time 30
```

Enabling and Adjusting Dead Peer Detection

Dead Peer Detection (DPD) ensures that the ASA (gateway) or the client can quickly detect a condition where the peer is not responding, and the connection has failed.

To enable DPD on the ASA or client for a specific group or user, and to set the frequency with which either the ASA or client performs DPD, use the **anyconnect dpd-interval** command from group-policy or username webvpn mode:

```
anyconnect dpd-interval {[gateway {seconds | none}] | [client {seconds | none}]}
```

Where:

gateway seconds enables DPD performed by the ASA (gateway) and specifies the frequency, from 5 to 3600 seconds, with which the ASA (gateway) performs DPD.

gateway none disables DPD performed by the ASA.

client seconds enable DPD performed by the client, and specifies the frequency, from 5 to 3600 seconds, with which the client performs DPD.

client none disables DPD performed by the client.

To remove the **anyconnect dpd-interval** command from the configuration, use the **no** form of the command:

```
no anyconnect dpd-interval {[gateway {seconds | none}] | [client {seconds | none}]}
```



Note If you enable DTLS, enable Dead Peer Detection (DPD) also. DPD enables a failed DTLS connection to fallback to TLS. Otherwise, the connection terminates.

The following example sets the frequency of DPD performed by the ASA to 30 seconds, and the frequency of DPD performed by the client set to 10 seconds for the existing group-policy *sales*:

```
hostname(config)# group-policy sales attributes
hostname(config-group-policy)# webvpn
hostname(config-group-webvpn)# anyconnect dpd-interval gateway 30
hostname(config-group-webvpn)# anyconnect dpd-interval client 10
```

Enabling Keepalive

You can adjust the frequency of keepalive messages to ensure that an SSL VPN connection through a proxy, firewall, or NAT device remains open, even if the device limits the time that the connection can be idle. Adjusting the frequency also ensures that the client does not disconnect and reconnect when the remote user is not actively running a socket-based application, such as Microsoft Outlook or Microsoft Internet Explorer.



Note Keepalives are enabled by default. If you disable keepalives, in the event of a failover event, SSL VPN client sessions are not carried over to the standby device.

To set the frequency of keepalive messages, use the **keepalive** command from group-policy webvpn or username webvpn configuration mode:

```
[no] anyconnect keepalive {none | seconds}
```

none disables client keepalive messages.

seconds enables the client to send keepalive messages, and specifies the frequency of the messages in the range of 15 to 600 seconds.

The default is keepalive messages are enabled.

Use the **no** form of the command to remove the command from the configuration and cause the value to be inherited:

In the following example, the ASA is configured to enable the client to send keepalive messages with a frequency of 300 seconds (5 minutes), for the existing group-policy *sales*:

```
hostname(config)# group-policy sales attributes
hostname(config-group-policy)# webvpn
hostname(config-group-webvpn)#anyconnect keepalive 300
```

Using Compression

Compression increases the communications performance between the ASA and the client by reducing the size of the packets being transferred for low-bandwidth connections. By default, compression for all SSL VPN connections is enabled on the ASA, both at the global level and for specific groups or users.



Note When implementing compression on broadband connections, you must carefully consider the fact that compression relies on loss-less connectivity. This is the main reason that it is not enabled by default on broadband connections.

Compression must be turned-on globally using the **anyconnect ssl compression** command from global configuration mode, and then it can be set for specific groups or users with the **anyconnect ssl compression** command in group-policy and username webvpn modes.

Changing Compression Globally

To change the global compression settings, use the **anyconnect ssl compression** command from global configuration mode:

```
compression
no compression
```

To remove the command from the configuration, use the **no** form of the command.

In the following example, compression is disabled for all SSL VPN connections globally:

```
hostname(config)# no compression
```

Changing Compression for Groups and Users

To change compression for a specific group or user, use the **anyconnect ssl compression** command in the `group-policy` and `username webvpn` modes:

```
compression {deflate | none}
```

```
no anyconnect ssl compression {deflate | none}
```

By default, for groups and users, SSL compression is set to *deflate* (enabled).

To remove the **anyconnect ssl compression** command from the configuration and cause the value to be inherited from the global setting, use the **no** form of the command:

In the following example, compression is disabled for the group-policy `sales`:

```
hostname(config)# group-policy sales attributes
hostname(config-group-policy)# webvpn
hostname(config-group-webvpn)#anyconnect ssl compression none
```

Adjusting MTU Size

You can adjust the MTU size (from 256 to 1406 bytes) for SSL VPN connections established by the client with the **anyconnect mtu** command from group policy `webvpn` or `username webvpn` configuration mode:

```
[no]anyconnect mtu size
```

This command affects only the AnyConnect client. The legacy Cisco SSL VPN Client () is not capable of adjusting to different MTU sizes.

The default for this command in the default group policy is **no anyconnect mtu**. The MTU size is adjusted automatically based on the MTU of the interface that the connection uses, minus the IP/UDP/DTLS overhead.

This command affects client connections established in SSL and those established in SSL with DTLS.

The following example configures the MTU size to 1200 bytes for the group policy `telecommuters`:

```
hostname(config)# group-policy telecommuters attributes
hostname(config-group-policy)# webvpn
hostname(config-group-webvpn)#anyconnect mtu 1200
```

Configuring Session Timeouts

You can limit how long the ASA keeps an AnyConnect VPN connection available to the user even with no activity. If a VPN session goes idle, you can terminate the connection. Terminating the AnyConnect connection requires the user to re-authenticate their endpoint to the secure gateway and create a new VPN connection.

The following configuration parameters terminate the VPN session based on a simple timeout:

- `default-idle-timeout` - Terminates any user's session when the session is inactive for the specified time. The default is 1800 seconds (30 minutes).
- `vpn-idle-timeout` - Terminates any user's session when the session is inactive for the specified time. For SSL-VPN only, if `vpn-idle-timeout` is not configured, then `default-idle-timeout` is used.

The following example shows how set a `vpn-idle-timeout` of 10 minutes, and to decrease the `default-idle-timeout` to 1200 seconds (20 minutes):

```
hostname(config)# group-policy telecommuters attributes
hostname(config-group-policy)# webvpn
hostname(config-group-webvpn)# vpn-idle-timeout 10
hostname(config-group-webvpn)# default-idle-timeout 1200
```

Updating AnyConnect Client Images

You can update the client images on the ASA at any time using the following procedure:

-
- Step 1** Copy the new client images to the ASA using the **copy** command from privileged EXEC mode, or using another method.
- Step 2** If the new client image files have the same filenames as the files already loaded, reenter the **anyconnect image** command that is in the configuration. If the new filenames are different, uninstall the old files using the **noanyconnect image** command. Then use the **anyconnect image** command to assign an order to the images and cause the ASA to load the new images.

Enabling IPv6 VPN Access

If you want to configure IPv6 access, you must use the command-line interface to configure IPv6; ASDM does not support IPv6.



Note

The ASA does not support IPv6 over IPsec IKEv2 VPN sessions.

You enable IPv6 access using the **ipv6 enable** command as part of enabling SSL VPN connections. The following is an example for an IPv6 connection that enables IPv6 on the outside interface:

```
hostname(config)# interface GigabitEthernet0/0
hostname(config-if)# ipv6 enable
```

To enable IPv6 SSL VPN, do the following general actions:

1. Enable IPv6 on the outside interface.
2. Enable IPv6 and an IPv6 address on the inside interface.
3. Configure an IPv6 address local pool for client assigned IP Addresses.
4. Configure an IPv6 tunnel default gateway.

To implement this procedure, do the following steps:

-
- Step 1** Configure Interfaces:

```
interface GigabitEthernet0/0
  nameif outside
  security-level 0
  ip address 192.168.0.1 255.255.255.0
  ipv6 enable ; Needed for IPv6.
!
interface GigabitEthernet0/1
  nameif inside
  security-level 100
  ip address 10.10.0.1 255.255.0.0
  ipv6 address 2001:DB8::1/32 ; Needed for IPv6.
  ipv6 enable ; Needed for IPv6.
```

Step 2 Configure an 'ipv6 local pool' (used for IPv6 address assignment):

```
ipv6 local pool ipv6pool 2001:DB8:1:1::5/32 100 ; Use your IPv6 prefix here
```



Note You still need to configure an IPv4 address pool when using IPv6 (using the ip local pool command)

Step 3 Add the ipv6 address pool to your tunnel group policy (or group-policy):

```
tunnel-group YourTunGrp1 general-attributes ipv6-address-pool ipv6pool
```



Note Again, you must also configure an IPv4 address pool here as well (using the 'address-pool' command).

Step 4 Configure an IPv6 tunnel default gateway:

```
ipv6 route inside ::/0 X:X:X:X::X tunneled
```

Monitoring AnyConnect Connections

To view information about active sessions use the **show vpn-sessiondb**:

Command	Purpose
show vpn-sessiondb	Displays information about active sessions.
vpn-sessiondb logoff	Logs off VPN sessions.

Examples

The Inactivity field shows the elapsed time since an AnyConnect session lost connectivity. If the session is active, 00:00m:00s appears in this field.

```
hostname# show vpn-sessiondb
```

```
Session Type: SSL VPN Client
```

```
Username      : lee
Index         : 1
Protocol      : SSL VPN Client
Hashing       : SHA1
TCP Dst Port  : 443
Bytes Tx      : 20178
Pkts Tx       : 27
Client Ver    : Cisco STC 1.1.0.117
Client Type   : Internet Explorer
Group         : DfltGrpPolicy
Login Time    : 14:32:03 UTC Wed Mar 20 2007
Duration      : 0h:00m:04s
Inactivity    : 0h:00m:04s
IP Addr       : 209.165.200.232
Encryption    : 3DES
Auth Mode     : userPassword
TCP Src Port  : 54230
Bytes Rx      : 8662
Pkts Rx       : 19
```

```

Filter Name :

hostname# vpn-sessiondb logoff
INFO: Number of sessions of type "" logged off : 1

hostname# vpn-sessiondb logoff name tester
Do you want to logoff the VPN session(s)? [confirm]
INFO: Number of sessions with name "tester" logged off : 1

```

Logging Off AnyConnect VPN Sessions

To log off all VPN sessions, use the **vpn-sessiondb logoff** command in global configuration mode:

vpn-sessiondb logoff

The following example logs off all VPN sessions:

```

hostname# vpn-sessiondb logoff
INFO: Number of sessions of type "" logged off : 1

```

You can log off individual sessions using either the name argument or the index argument:

vpn-session-db logoff name *name*

vpn-session-db logoff index *index*

The sessions that have been inactive the longest time are marked as idle (and are automatically logged off) so that license capacity is not reached and new users can log in. If the session resumes at a later time, it is removed from the inactive list.

You can find both the username and the index number (established by the order of the client images) in the output of the **show vpn-sessiondb anyconnect** command. The following examples shows the username *lee* and index number *1*.

```

hostname# show vpn-sessiondb anyconnect

Session Type: AnyConnect

Username      : lee                      Index      : 1
Assigned IP   : 192.168.246.1          Public IP  : 10.139.1.2
Protocol      : AnyConnect-Parent SSL-Tunnel DTLS-Tunnel
License       : AnyConnect Premium
Encryption    : RC4 AES128              Hashing    : SHA1
Bytes Tx      : 11079                  Bytes Rx   : 4942
Group Policy  : EngPolicy              Tunnel Group : EngGroup
Login Time    : 15:25:13 EST Fri Jan 28 2011
Duration     : 0h:00m:15s
Inactivity    : 0h:00m:00s
NAC Result    : Unknown
VLAN Mapping  : N/A                    VLAN       : none

```

The following example terminates the session using the **name** option of the **vpn-session-db logoff** command:

```

hostname# vpn-sessiondb logoff name lee
Do you want to logoff the VPN session(s)? [confirm]
INFO: Number of sessions with name "lee" logged off : 1

hostname#

```

Configuration Examples for Enabling AnyConnect Connections

The following example shows how to configure L2TP over IPsec:

```
ip local pool sales_addresses 209.165.202.129-209.165.202.158
aaa-server sales_server protocol radius
crypto ipsec transform-set sales_l2tp_transform esp-3des esp-sha-hmac
crypto ipsec transform-set sales_l2tp_transform mode transport
crypto ipsec security-association lifetime seconds 28800
crypto ipsec security-association lifetime kilobytes 4608000
l2tp tunnel hello 100

group-policy sales_policy internal
group-policy sales_policy attributes
 wins-server value 209.165.201.3 209.165.201.4
 dns-server value 209.165.201.1 209.165.201.2
 vpn-tunnel-protocol l2tp-ipsec
tunnel-group sales_tunnel type remote-access
tunnel-group sales_tunnel general-attributes
 address-pool sales_addresses
 authentication-server-group none
 accounting-server-group sales_server
 default-group-policy sales_policy
tunnel-group sales_tunnel ppp-attributes
 authentication pap
```

Feature History for AnyConnect Connections

Table 75-1 lists the release history for this feature.

Table 75-1 Feature History for AnyConnect Connections

Feature Name	Releases	Feature Information
AnyConnect Connections	7.2(1)	The following commands were introduced or modified: authentication eap-proxy , authentication ms-chap-v1 , authentication ms-chap-v2 , authentication pap , l2tp tunnel hello , vpn-tunnel-protocol l2tp-ipsec .
IPsec IKEv2	8.4(1)	IKEv2 was added to support IPsec IKEv2 connections for AnyConnect and LAN-to-LAN.



CHAPTER 76

Configuring AnyConnect Host Scan

The AnyConnect Posture Module provides the AnyConnect Secure Mobility Client the ability to identify the operating system, anti-virus, anti-spyware, and firewall software installed on the host. The Host Scan application gathers this information.

Using the secure desktop manager tool in the Adaptive Security Device Manager (ASDM), you can create a prelogin policy which evaluates the operating system, anti-virus, anti-spyware, and firewall software Host Scan identifies. Based on the result of the prelogin policy's evaluation, you can control which hosts are allowed to create a remote access connection to the security appliance.

The Host Scan support chart contains the product name and version information for the anti-virus, anti-spyware, and firewall applications you use in your prelogin policies. We deliver Host Scan and the Host Scan support chart, as well as other components, in the Host Scan package.

Starting with AnyConnect Secure Mobility Client, release 3.0, Host Scan is available separately from CSD. This means you can deploy Host Scan functionality without having to install CSD and you will be able to update your Host Scan support charts by upgrading the latest Host Scan package.

Posture assessment and the AnyConnect telemetry module require Host Scan to be installed on the host.

This chapter contains the following sections:

- [Host Scan Dependencies and System Requirements, page 76-1](#)
- [Host Scan Packaging, page 76-2](#)
- [Installing and Enabling Host Scan on the ASA, page 76-3](#)
- [Other Important Documentation Addressing Host Scan, page 76-7](#)

Host Scan Dependencies and System Requirements

Dependencies

The AnyConnect Secure Mobility Client with the posture module requires these minimum ASA components:

- ASA 8.4
- ASDM 6.4

These AnyConnect features require that you install the posture module.

- SCEP authentication

- AnyConnect Telemetry Module

System Requirements

The posture module can be installed on any of these platforms:

- Windows XP (x86 and x86 running on x64)
- Windows Vista (x86 and x86 running on x64)
- Windows 7 (x86 and x86 running on x64)
- Mac OS X 10.5,10.6 (32-bit and 32-bit running on 64-bit)
- Linux (32-bit and 32-bit running on 64-bit)
- Windows Mobile

Licensing

These are the AnyConnect licensing requirements for the posture module:

- AnyConnect Premium for basic Host Scan.
- Advanced Endpoint Assessment license is required for
 - Remediation
 - Mobile Device Management

Host Scan Packaging

You can load the Host Scan package on to the ASA in one of these ways:

- You can upload it as a standalone package: **hostscan-version.pkg**
- You can upload it by uploading an AnyConnect Secure Mobility package: **anyconnect-NGC-win-version-k9.pkg**
- You can upload it by uploading a Cisco Secure Desktop package: **csd_version-k9.pkg**

Table 76-1 Host Scan Packages You Load to the ASA

File	Description
hostscan-version.pkg	This file contains the Host Scan software as well as the Host Scan library and support charts.
anyconnect-NGC-win-version-k9.pkg	This package contains all the Cisco AnyConnect Secure Mobility Client features including the hostscan-version.pkg file.
csd_version-k9.pkg	This file contains all Cisco Secure Desktop features including Host Scan software as well as the Host Scan library and support charts. This method requires a separate license for Cisco Secure Desktop.

Installing and Enabling Host Scan on the ASA

These tasks describe installing and enabling Host Scan on the ASA:

- [Installing or Upgrading Host Scan](#)
- [Enabling or Disabling a Host Scan](#)
- [Viewing the Host Scan Version Enabled on the ASA](#)
- [Uninstalling Host Scan](#)
- [Assigning AnyConnect Feature Modules to Group Policies](#)

Installing or Upgrading Host Scan

Use this procedure to install or upgrade the Host Scan package and enable it using the command line interface for the ASA.

Prerequisites

- Log on to the ASA and enter global configuration mode. In global configuration mode, the ASA displays this prompt: `hostname(config)#`
- Upload the `hostscan_version-k9.pkg` file or `anyconnect-NGC-win-version-k9.pkg` file to the ASA.

Detailed Steps

	Command	Purpose
Step 1	<code>webvpn</code> Example: <code>hostname(config)# webvpn</code>	Enter webvpn configuration mode.
Step 2	<code>csd hostscan image path</code> Example: <code>ASAName(webvpn)#csd hostscan image disk0:/hostscan-3.6.0-k9.pkg</code> <code>ASAName(webvpn)#csd hostscan image disk0:/anyconnect-NGC-win-3.0.0327-k9.pkg</code>	Specify the path to the package you want to designate as the Host Scan image. You can specify a standalone Host Scan package or an AnyConnect Secure Mobility Client package as the Host Scan package. Note For all operating systems, Windows, Linux, and Mac OS X, customers need to upload the <code>anyconnect-NGC-win-version-k9.pkg</code> file in order for the endpoints to install Host Scan.
Step 3	<code>csd enable</code> Example: <code>ASAName(webvpn)#csd enable</code>	Enables the Host Scan image you designated in the previous step.
Step 4	<code>write memory</code> Example: <code>hostname(webvpn)# write memory</code>	Saves the running configuration to flash. After successfully saving the new configuration to flash memory, you receive the message [OK].

Enabling or Disabling a Host Scan

These commands enable or disable an installed Host Scan image using the command line interface of the ASA.

Prerequisites

Log on to the ASA and enter global configuration mode. In global configuration mode, the ASA displays this prompt: `hostname(config)#`

Detailed Steps for Enabling Host Scan

	Command	Purpose
Step 1	<code>webvpn</code> Example: <code>hostname(config)# webvpn</code>	Enter webvpn configuration mode.
Step 2	<code>csd enable</code> Example: <code>hostname(config)# csd enable</code>	Enables the standalone Host Scan image or the Host Scan image in the AnyConnect Secure Mobility Client package if they have not been uninstalled from your ASA. If neither of those types of packages is installed and a CSD package is installed, this enables the Host Scan function in the CSD package.

Detailed Steps for Disabling Host Scan

	Command	Purpose
Step 1	<code>webvpn</code> Example: <code>hostname(config)# webvpn</code>	Enter webvpn configuration mode.
Step 2	<code>no csd enable</code> Example: <code>hostname(config)# no csd enable</code>	Disables Host Scan for all installed Host Scan packages. Note Before you uninstall the enabled Host Scan image, you must first disable Host Scan using this command.

Viewing the Host Scan Version Enabled on the ASA

Use this procedure to determine the enabled Host Scan version using ASA's command line interface.

Prerequisites

Log on to the ASA and enter privileged exec mode. In privileged exec mode, the ASA displays this prompt: **hostname#**

Command	Purpose
<code>show webvpn csd hostscan</code>	Show the version of Host Scan enabled on the ASA.
Example: <code>hostname# show webvpn csd hostscan</code>	

Uninstalling Host Scan

Uninstalling Host Scan package removes it from view on the ASDM interface and prevents the ASA from deploying it even if Host Scan or CSD is enabled. Uninstalling Host Scan does not delete the Host Scan package from the flash drive.

Prerequisites

Log on to the ASA and enter global configuration mode. In global configuration mode, the ASA displays this prompt: **hostname(config)#**.

Detailed Steps

	Command	Purpose
Step 1	<code>webvpn</code> Example: <code>hostname(config)# webvpn</code>	Enter webvpn configuration mode.
Step 2	<code>no csd enable</code> Example: <code>ASAName(webvpn) #no csd enable</code>	Disables the Host Scan image you want to uninstall.
Step 3	<code>no csd hostscan image path</code> Example: <code>hostname(webvpn) #no csd hostscan image disk0:/hostscan-3.6.0-k9.pkg hostname(webvpn) #no csd hostscan image disk0:/anyconnect-NGC-win-3.0.0327-k9.pkg</code>	Specifies the path to the Host Scan image you want to uninstall. A standalone Host Scan package or an AnyConnect Secure Mobility Client package may have been designated as the Host Scan package.

	Command	Purpose
Step 4	<code>write memory</code>	Saves the running configuration to flash.
	Example: <code>hostname(webvpn)# write memory</code>	After successfully saving the new configuration to flash memory, you receive the message [OK].

Assigning AnyConnect Feature Modules to Group Policies

This procedure associates AnyConnect feature modules with a group policy. When VPN users connect to the ASA, the ASA downloads and installs these AnyConnect feature modules to their endpoint computer.

Prerequisites

Log on to the ASA and enter global configuration mode. In global configuration mode, the ASA displays this prompt: `hostname(config)#`

Detailed Steps

	Command	Purpose
Step 1	<code>group-policy name internal</code>	Adds an internal group policy for Network Client Access
	Example: <code>hostname(config)# group-policy PostureModuleGroup internal</code>	
Step 2	<code>group-policy name attributes</code>	Edits the new group policy. After entering the command, you receive the prompt for group policy configuration mode, <code>hostname(config-group-policy)#</code> .
	Example: <code>hostname(config)# group-policy PostureModuleGroup attributes</code>	
Step 3	<code>webvpn</code>	Enters group policy webvpn configuration mode. After you enter the command, the ASA returns this prompt: <code>hostname(config-group-policy)#</code>
	Example: <code>hostname(config-group-policy)# webvpn</code>	

Command	Purpose																
<p>Step 4</p> <pre>hostname(config-group-webvpn)# anyconnect modules value AnyConnect Module Name</pre> <p>Example:</p> <pre>hostname(config-group-webvpn)# anyconnect modules value websecurity,telemetry,posture</pre>	<p>Configures the group policy to download AnyConnect feature modules for all users in the group. The value of the anyconnect module command can contain one or more of the following values. When specifying more than one module, separate the values with a comma.</p> <table border="0"> <tr> <td>value</td> <td>AnyConnect Module Name</td> </tr> <tr> <td>dart</td> <td>AnyConnect DART (Diagnostics and Reporting Tool)</td> </tr> <tr> <td>nam</td> <td>AnyConnect Network Access Manager</td> </tr> <tr> <td>vpngina</td> <td>AnyConnect SBL (Start Before Logon)</td> </tr> <tr> <td>websecurity</td> <td>AnyConnect Web Security Module</td> </tr> <tr> <td>telemetry</td> <td>AnyConnect Telemetry Module</td> </tr> <tr> <td>posture</td> <td>AnyConnect Posture Module</td> </tr> <tr> <td>none</td> <td>Used by itself to remove all AnyConnect modules from the group policy.</td> </tr> </table> <p>To remove one of the modules, re-send the command specifying only the module values you want to keep. For example, this command removes the websecurity module:</p> <pre>hostname(config-group-webvpn)# anyconnect modules value telemetry,posture</pre>	value	AnyConnect Module Name	dart	AnyConnect DART (Diagnostics and Reporting Tool)	nam	AnyConnect Network Access Manager	vpngina	AnyConnect SBL (Start Before Logon)	websecurity	AnyConnect Web Security Module	telemetry	AnyConnect Telemetry Module	posture	AnyConnect Posture Module	none	Used by itself to remove all AnyConnect modules from the group policy.
value	AnyConnect Module Name																
dart	AnyConnect DART (Diagnostics and Reporting Tool)																
nam	AnyConnect Network Access Manager																
vpngina	AnyConnect SBL (Start Before Logon)																
websecurity	AnyConnect Web Security Module																
telemetry	AnyConnect Telemetry Module																
posture	AnyConnect Posture Module																
none	Used by itself to remove all AnyConnect modules from the group policy.																
<p>Step 5</p> <pre>write memory</pre> <p>Example:</p> <pre>hostname(config-group-webvpn)# write memory</pre>	<p>Saves the running configuration to flash.</p> <p>After successfully saving the new configuration to flash memory, you receive the message [OK] and the ASA returns you to this prompt:</p> <pre>hostname(config-group-webvpn)#</pre>																

Other Important Documentation Addressing Host Scan

Once Host Scan gathers the posture credentials from the endpoint computer, you will need to understand subjects like, configuring prelogin policies, configuring dynamic access policies, and using Lua expressions to make use of the information.

These topics are covered in detail in these documents:

- [Cisco Secure Desktop Configuration Guides](#)
- [Cisco Adaptive Security Device Manager Configuration Guides](#)

See also the *Cisco AnyConnect Secure Mobility Client Administrator Guide, Release 3.0* for more information about how Host Scan works with AnyConnect clients.



PART 17

Configuring Logging, SNMP, and Smart Call Home



CHAPTER 77

Configuring Logging

This chapter describes how to configure and manage logs for the ASA and includes the following sections:

- [Information About Logging, page 77-1](#)
- [Licensing Requirements for Logging, page 77-5](#)
- [Prerequisites for Logging, page 77-5](#)
- [Guidelines and Limitations, page 77-5](#)
- [Configuring Logging, page 77-6](#)
- [Monitoring the Logs, page 77-19](#)
- [Configuration Examples for Logging, page 77-20](#)
- [Feature History for Logging, page 77-20](#)

Information About Logging

System logging is a method of collecting messages from devices to a server running a syslog daemon. Logging to a central syslog server helps in aggregation of logs and alerts. Cisco devices can send their log messages to a UNIX-style syslog service. A syslog service accepts messages and stores them in files, or prints them according to a simple configuration file. This form of logging provides protected long-term storage for logs. Logs are useful both in routine troubleshooting and in incident handling.

The ASA system logs provide you with information for monitoring and troubleshooting the ASA. With the logging feature, you can do the following:

- Specify which syslog messages should be logged.
- Disable or change the severity level of a syslog message.
- Specify one or more locations where syslog messages should be sent, including an internal buffer, one or more syslog servers, ASDM, an SNMP management station, specified e-mail addresses, or to Telnet and SSH sessions.
- Configure and manage syslog messages in groups, such as by severity level or class of message.
- Specify whether or not a rate-limit is applied to syslog generation.
- Specify what happens to the contents of the internal log buffer when it becomes full: overwrite the buffer, send the buffer contents to an FTP server, or save the contents to internal flash memory.
- Filter syslog messages by locations, severity level, class, or a custom message list.

This section includes the following topics:

- [Logging in Multiple Context Mode, page 77-2](#)
- [Analyzing Syslog Messages, page 77-2](#)
- [Syslog Message Format, page 77-3](#)
- [Severity Levels, page 77-3](#)
- [Message Classes and Range of Syslog IDs, page 77-4](#)
- [Filtering Syslog Messages, page 77-4](#)
- [Using Custom Message Lists, page 77-4](#)

Logging in Multiple Context Mode

Each security context includes its own logging configuration and generates its own messages. If you log in to the system or admin context, and then change to another context, messages you view in your session are only those messages that are related to the current context.

Syslog messages that are generated in the system execution space, including failover messages, are viewed in the admin context along with messages generated in the admin context. You cannot configure logging or view any logging information in the system execution space.

You can configure the ASA to include the context name with each message, which helps you differentiate context messages that are sent to a single syslog server. This feature also helps you to determine which messages are from the admin context and which are from the system; messages that originate in the system execution space use a device ID of **system**, and messages that originate in the admin context use the name of the admin context as the device ID.

Analyzing Syslog Messages

The following are some examples of the type of information you can obtain from a review of various syslog messages:

- Connections that are allowed by ASA security policies. These messages help you spot holes that remain open in your security policies.
- Connections that are denied by ASA security policies. These messages show what types of activity are being directed toward your secured inside network.
- Using the ACE deny rate logging feature shows attacks that are occurring on your ASA.
- IDS activity messages can show attacks that have occurred.
- User authentication and command usage provide an audit trail of security policy changes.
- Bandwidth usage messages show each connection that was built and torn down as well as the duration and traffic volume used.
- Protocol usage messages show the protocols and port numbers used for each connection.
- Address translation audit trail messages record NAT or PAT connections being built or torn down, which are useful if you receive a report of malicious activity coming from inside your network to the outside world.

Syslog Message Format

Syslog messages begin with a percent sign (%) and are structured as follows:

```
%ASA Level Message_number: Message_text
```

Field descriptions are as follows:

ASA	The syslog message facility code for messages that are generated by the ASA. This value is always ASA.
Level	1 through 7. The level reflects the severity of the condition described by the syslog message—the lower the number, the more severe the condition. See Table 77-1 for more information.
Message_number	A unique six-digit number that identifies the syslog message.
Message_text	A text string that describes the condition. This portion of the syslog message sometimes includes IP addresses, port numbers, or usernames.

Severity Levels

[Table 77-1](#) lists the syslog message severity levels. You can assign custom colors to each of the severity levels to make it easier to distinguish them in the ASDM log viewers. To configure syslog message color settings, either choose the **Tools > Preferences > Syslog** tab or, in the log viewer itself, click **Color Settings** on the toolbar.

Table 77-1 Syslog Message Severity Levels

Level Number	Severity Level	Description
0	emergencies	System is unusable.
1	alert	Immediate action is needed.
2	critical	Critical conditions.
3	error	Error conditions.
4	warning	Warning conditions.
5	notification	Normal but significant conditions.
6	informational	Informational messages only.
7	debugging	Debugging messages only.



Note

The ASA does not generate syslog messages with a severity level of zero (emergencies). This level is provided in the **logging** command for compatibility with the UNIX syslog feature but is not used by the ASA.

Message Classes and Range of Syslog IDs

For a list of syslog message classes and the ranges of syslog message IDs that are associated with each class, see the syslog message guide.

Filtering Syslog Messages

You can filter generated syslog messages so that only certain syslog messages are sent to a particular output destination. For example, you could configure the ASA to send all syslog messages to one output destination and to send a subset of those syslog messages to a different output destination.

Specifically, you can configure the ASA so that syslog messages are directed to an output destination according to the following criteria:

- Syslog message ID number
- Syslog message severity level
- Syslog message class (equivalent to a functional area of the ASA)

You customize these criteria by creating a message list that you can specify when you set the output destination. Alternatively, you can configure the ASA to send a particular message class to each type of output destination independently of the message list.

You can use syslog message classes in two ways:

- Specify an output location for an entire category of syslog messages using the **logging class** command.
- Create a message list that specifies the message class using the **logging list** command.

The syslog message class provides a method of categorizing syslog messages by type, equivalent to a feature or function of the ASA. For example, the `vpnc` class denotes the VPN client.

All syslog messages in a particular class share the same initial three digits in their syslog message ID numbers. For example, all syslog message IDs that begin with the digits 611 are associated with the `vpnc` (VPN client) class. Syslog messages associated with the VPN client feature range from 611101 to 611323.

In addition, most of the ISAKMP syslog messages have a common set of prepended objects to help identify the tunnel. These objects precede the descriptive text of a syslog message when available. If the object is not known at the time that the syslog message is generated, the specific *heading = value* combination does not appear.

The objects are prefixed as follows:

Group = *groupname*, Username = *user*, IP = *IP_address*

Where the group is the tunnel-group, the username is the username from the local database or AAA server, and the IP address is the public IP address of the remote access client or L2L peer.

Using Custom Message Lists

Creating a custom message list is a flexible way to exercise control over which syslog messages are sent to which output destination. In a custom syslog message list, you specify groups of syslog messages using any or all of the following criteria: severity level, message IDs, ranges of syslog message IDs, or message class.

For example, you can use message lists to do the following:

- Select syslog messages with the severity levels of 1 and 2 and send them to one or more e-mail addresses.
- Select all syslog messages associated with a message class (such as ha) and save them to the internal buffer.

A message list can include multiple criteria for selecting messages. However, you must add each message selection criterion with a new command entry. It is possible to create a message list that includes overlapping message selection criteria. If two criteria in a message list select the same message, the message is logged only once.

Licensing Requirements for Logging

The following table shows the licensing requirements for this feature:

Model	License Requirement
All models	Base License.

Prerequisites for Logging

Logging has the following prerequisites:

- The syslog server must run a server program called syslogd. Windows (except for Windows 95 and Windows 98) provides a syslog server as part of its operating system. For Windows 95 and Windows 98, you must obtain a syslogd server from another vendor.
- To view logs generated by the ASA, you must specify a logging output destination. If you enable logging without specifying a logging output destination, the ASA generates messages but does not save them to a location from which you can view them. You must specify each different logging output destination separately. For example, to designate more than one syslog server as an output destination, enter a new command for each syslog server.

Guidelines and Limitations

This section includes the guidelines and limitations for this feature.

Context Mode Guidelines

Supported in single and multiple context modes.

Firewall Mode Guidelines

Supported in routed and transparent firewall modes.

IPv6 Guidelines

Does not support IPv6.

Additional Guidelines

- Sending syslogs over TCP is not supported on a standby ASA.

- The ASA supports the configuration of 16 syslog servers with the **logging host** command in single context mode. In multiple context mode, the limitation is 4 servers per context.

Configuring Logging

This section describes how to configure logging and includes the following topics:

- [Enabling Logging, page 77-6](#)
- [Configuring an Output Destination, page 77-6](#)



Note

The minimum configuration depends on what you want to do and what your requirements are for handling syslog messages in the ASA.

Enabling Logging

To enable logging, enter the following command:

Command	Purpose
<code>logging enable</code>	Enables logging. To disable logging, enter the no logging enable command.
Example: <code>hostname(config)# logging enable</code>	

What to Do Next

See the “[Configuring an Output Destination](#)” section on page 77-6.

Configuring an Output Destination

To optimize syslog message usage for troubleshooting and performance monitoring, we recommend that you specify one or more locations where syslog messages should be sent, including an internal log buffer, one or more external syslog servers, ASDM, an SNMP management station, the console port, specified e-mail addresses, or Telnet and SSH sessions.

This section includes the following topics:

- [Sending Syslog Messages to an External Syslog Server, page 77-8](#)
- [Sending Syslog Messages to the Internal Log Buffer, page 77-9](#)
- [Sending Syslog Messages to an E-mail Address, page 77-10](#)
- [Sending Syslog Messages to ASDM, page 77-11](#)
- [Sending Syslog Messages to the Console Port, page 77-11](#)
- [Sending Syslog Messages to an SNMP Server, page 77-11](#)
- [Sending Syslog Messages to a Telnet or SSH Session, page 77-12](#)
- [Creating a Custom Event List, page 77-13](#)

- [Generating Syslog Messages in EMBLEM Format to a Syslog Server, page 77-14](#)
- [Generating Syslog Messages in EMBLEM Format to Other Output Destinations, page 77-14](#)
- [Changing the Amount of Internal Flash Memory Available for Logs, page 77-15](#)
- [Configuring the Logging Queue, page 77-15](#)
- [Sending All Syslog Messages in a Class to a Specified Output Destination, page 77-16](#)
- [Enabling Secure Logging, page 77-16](#)
- [Including the Device ID in Non-EMBLEM Format Syslog Messages, page 77-17](#)
- [Including the Date and Time in Syslog Messages, page 77-18](#)
- [Disabling a Syslog Message, page 77-18](#)
- [Changing the Severity Level of a Syslog Message, page 77-18](#)
- [Limiting the Rate of Syslog Message Generation, page 77-19](#)

Sending Syslog Messages to an External Syslog Server

You can archive messages according to the available disk space on the external syslog server, and manipulate logging data after it is saved. For example, you could specify actions to be executed when certain types of syslog messages are logged, extract data from the log and save the records to another file for reporting, or track statistics using a site-specific script.

To send syslog messages to an external syslog server, perform the following steps:

	Command	Purpose
Step 1	<pre>logging host interface_name syslog_ip [tcp[/port] udp[/port] [format emblem]]</pre> <p>Example:</p> <pre>hostname(config)# logging host dmz1 192.168.1.5 udp 1026 format emblem</pre>	<p>Configures the ASA to send messages to a syslog server.</p> <p>The format emblem keyword enables EMBLEM format logging for the syslog server with UDP only. The <i>interface_name</i> argument specifies the interface through which you access the syslog server. The <i>syslog_ip</i> argument specifies the IP address of the syslog server. The tcp[/port] or udp[/port] keyword and argument pair specify that the ASA and ASASM should use TCP or UDP to send syslog messages to the syslog server.</p> <p>You can configure the ASA to send data to a syslog server using either UDP or TCP, but not both. The default protocol is UDP if you do not specify a protocol.</p> <p>If you specify TCP, the ASA discover when the syslog server fails and as a security protection, new connections through the ASA are blocked. To allow new connections regardless of connectivity to a TCP syslog server, see Step 3. If you specify UDP, the ASA continue to allow new connections whether or not the syslog server is operational. Valid port values for either protocol are 1025 through 65535. The default UDP port is 514. The default TCP port is 1470.</p>
Step 2	<pre>logging trap {severity_level message_list}</pre> <p>Example:</p> <pre>hostname(config)# logging trap errors</pre>	<p>Specifies which syslog messages should be sent to the syslog server. You can specify the severity level number (1 through 7) or name. For example, if you set the severity level to 3, then the ASA send syslog messages for severity levels 3, 2, and 1. You can specify a custom message list that identifies the syslog messages to send to the syslog server.</p>
Step 3	<pre>logging permit-hostdown</pre> <p>Example:</p> <pre>hostname(config)# logging permit-hostdown</pre>	<p>(Optional) Disables the feature to block new connections when a TCP-connected syslog server is down. If the ASA is configured to send syslog messages to a TCP-based syslog server, and if either the syslog server is down or the log queue is full, then new connections are blocked. New connections are allowed again after the syslog server is back up and the log queue is no longer full. For more information about the log queue, see the “Configuring the Logging Queue” section on page 77-15.</p>
Step 4	<pre>logging facility number</pre> <p>Example:</p> <pre>hostname(config)# logging facility 21</pre>	<p>(Optional) Sets the logging facility to a value other than 20, which is what most UNIX systems expect.</p>

Sending Syslog Messages to the Internal Log Buffer

To send syslog messages to the internal log buffer, perform the following steps:

	Command	Purpose
Step 1	<p>logging buffered {severity_level message_list}</p> <p>Example: hostname(config)# logging buffered critical hostname(config)# logging buffered level 2 hostname(config)# logging buffered notif-list</p>	Specifies which syslog messages should be sent to the internal log buffer, which serves as a temporary storage location. New messages are appended to the end of the list. When the buffer is full, that is, when the buffer wraps, old messages are overwritten as new messages are generated, unless you configure the ASA to save the full buffer to another location. To empty the internal log buffer, enter the clear logging buffer command.
Step 2	<p>logging buffer-size bytes</p> <p>Example: hostname(config)# logging buffer-size 16384</p>	Changes the size of the internal log buffer. The buffer size is 4 KB.
Step 3	Choose one of the following options:	
	<p>logging flash-bufferwrap</p> <p>Example: hostname(config)# logging flash-bufferwrap</p>	<p>When saving the buffer content to another location, the ASA create log files with names that use the following time-stamp format:</p> <p><i>LOG-YYYY-MM-DD-HHMMSS.TXT</i></p> <p>where <i>YYYY</i> is the year, <i>MM</i> is the month, <i>DD</i> is the day of the month, and <i>HHMMSS</i> is the time in hours, minutes, and seconds.</p> <p>The ASA continues to save new messages to the internal log buffer and saves the full log buffer content to the internal flash memory.</p>
	<p>logging ftp-bufferwrap</p> <p>Example: hostname(config)# logging ftp-bufferwrap</p>	<p>When saving the buffer content to another location, the ASA creates log files with names that use the following time-stamp format:</p> <p><i>LOG-YYYY-MM-DD-HHMMSS.TXT</i></p> <p>where <i>YYYY</i> is the year, <i>MM</i> is the month, <i>DD</i> is the day of the month, and <i>HHMMSS</i> is the time in hours, minutes, and seconds.</p> <p>The ASA continues saving new messages to the internal log buffer and saves the full log buffer content to an FTP server.</p>

Command	Purpose
logging ftp-server <i>server path username password</i> Example: <pre>hostname(config)# logging ftp-server 10.1.1.1 /syslogs logsupervisor 1luvMy10gs</pre>	Identifies the FTP server on which you want to store log buffer content. The <i>server</i> argument specifies the IP address of the external FTP server. The <i>path</i> argument specifies the directory path on the FTP server where the log buffer data is to be saved. This path is relative to the FTP root directory. The <i>username</i> argument specifies a username that is valid for logging into the FTP server. The <i>password</i> argument indicates the password for the username specified.
logging saveolog [<i>savefile</i>] Example: <pre>hostname(config)# logging saveolog latest-logfile.txt</pre>	Saves the current log buffer content to the internal flash memory.

Sending Syslog Messages to an E-mail Address

To send syslog messages to an e-mail address, perform the following steps:

	Command	Purpose
Step 1	logging mail { <i>severity_level</i> <i>message_list</i> } Example: <pre>hostname(config)# logging mail high-priority</pre>	Specifies which syslog messages should be sent to an e-mail address. When sent by e-mail, the device name appears in the subject line of the e-mail message and the syslog message appears in the body of the e-mail message. For this reason, we recommend configuring this option to notify administrators of syslog messages with high severity levels, such as critical, alert, and emergency.
Step 2	logging from-address <i>email_address</i> Example: <pre>hostname(config)# logging from-address xxx-001@example.com</pre>	Specifies the source e-mail address to be used when sending syslog messages to an e-mail address.
Step 3	logging recipient-address <i>e-mail_address</i> [<i>severity_level</i>] Example: <pre>hostname(config)# logging recipient-address admin@example.com</pre>	Specifies the recipient e-mail address to be used when sending syslog messages to an e-mail address.
Step 4	smtp-server <i>ip_address</i> Example: <pre>hostname(config)# smtp-server 10.1.1.1</pre>	Specifies the SMTP server to be used when sending syslog messages to an e-mail address.

Sending Syslog Messages to ASDM

To send syslog messages to ASDM, perform the following steps:

	Command	Purpose
Step 1	<pre>logging asdm {severity_level message_list}</pre> <p>Example: hostname(config)# logging asdm 2</p>	Specifies which syslog messages should be sent to ASDM. The ASA sets aside a buffer area for syslog messages waiting to be sent to ASDM and saves messages in the buffer as they occur. The ASDM log buffer is a different buffer than the internal log buffer. When the ASDM log buffer is full, the ASA deletes the oldest syslog message to make room in the buffer for new ones. Deletion of the oldest syslog message to make room for new ones is the default setting in ASDM. To control the number of syslog messages retained in the ASDM log buffer, you can change the size of the buffer.
Step 2	<pre>logging asdm-buffer-size num_of_msgs</pre> <p>Example: hostname(config)# logging asdm-buffer-size 200</p>	Specifies the number of syslog messages to be retained in the ASDM log buffer. To empty the current content of the ASDM log buffer, enter the clear logging asdm command.

Sending Syslog Messages to the Console Port

To send syslog messages to the console port, enter the following command:

Command	Purpose
<pre>logging console {severity_level message_list}</pre> <p>Example: hostname(config)# logging console errors</p>	Specifies which syslog messages should be sent to the console port.

Sending Syslog Messages to an SNMP Server

To enable logging to an SNMP server, enter the following command:

Command	Purpose
<pre>logging history [logging_list level]</pre> <p>Example: hostname(config)# logging history errors</p>	Enables SNMP logging and specifies which messages are to be sent to SNMP servers. To disable SNMP logging, enter the no logging history command.

Sending Syslog Messages to a Telnet or SSH Session

To send syslog messages to a Telnet or SSH session, perform the following steps:

	Command	Purpose
Step 1	logging monitor { <i>severity_level</i> <i>message_list</i> } Example: hostname(config)# logging monitor 6	Specifies which syslog messages should be sent to a Telnet or SSH session.
Step 2	terminal monitor Example: hostname(config)# terminal monitor	Enables logging to the current session only. If you log out and then log in again, you need to reenter this command. To disable logging to the current session, enter the terminal no monitor command.

Creating a Custom Event List

To create a custom event list, perform the following steps:

Command	Purpose
<p>Step 1</p> <pre>logging list name {level level [class message_class] message start_id[-end_id]}</pre> <p>Example:</p> <pre>hostname(config)# logging list notif-list level 3</pre>	<p>Specifies criteria for selecting messages to be saved in the internal log buffer. For example, if you set the severity level to 3, then the ASA sends syslog messages for severity levels 3, 2, and 1.</p> <p>The <i>name</i> argument specifies the name of the list. The level <i>level</i> keyword and argument pair specify the severity level. The class <i>message_class</i> keyword and argument pair specify a particular message class. The message <i>start_id[-end_id]</i> keyword and argument pair specify an individual syslog message number or a range of numbers.</p> <p>Note Do not use the names of severity levels as the name of a syslog message list. Prohibited names include emergencies, alert, critical, error, warning, notification, informational, and debugging. Similarly, do not use the first three characters of these words at the beginning of an event list name. For example, do not use an event list name that starts with the characters err.</p>
<p>Step 2</p> <pre>logging list name {level level [class message_class] message start_id[-end_id]}</pre> <p>Example:</p> <pre>hostname(config)# logging list notif-list message 104024-105999</pre> <pre>hostname(config)# logging list notif-list level critical</pre> <pre>hostname(config)# logging list notif-list level warning class ha</pre>	<p>(Optional) Adds more criteria for message selection to the list. Enter the same command as in the previous step, specifying the name of the existing message list and the additional criterion. Enter a new command for each criterion that you want to add to the list. For example, you can specify criteria for syslog messages to be included in the list as the following:</p> <ul style="list-style-type: none"> • Syslog message IDs that fall into the range of 104024 to 105999. • All syslog messages with the critical severity level or higher (emergency, alert, or critical). • All ha class syslog messages with the warning severity level or higher (emergency, alert, critical, error, or warning). <p>Note A syslog message is logged if it satisfies any of these conditions. If a syslog message satisfies more than one of the conditions, the message is logged only once.</p>

Generating Syslog Messages in EMBLEM Format to a Syslog Server

To generate syslog messages in EMBLEM format to a syslog server, enter the following command:

Command	Purpose
<pre>logging host interface_name ip_address {tcp[/port] udp[/port]} [format emblem]</pre> <p>Example: <pre>hostname(config)# logging host interface_1 127.0.0.1 udp format emblem</pre></p>	<p>Sends syslog messages in EMBLEM format to a syslog server over UDP using port 514.</p> <p>The format emblem keyword enables EMBLEM format logging for the syslog server (UDP only). The <i>interface_name</i> argument specifies the interface through which you access the syslog server. The <i>ip_address</i> argument specifies the IP address of the syslog server. The tcp[/port] or udp[/port] keyword and argument pair specify that the ASA should use TCP or UDP to send syslog messages to the syslog server.</p> <p>You can configure the ASA to send data to a syslog server using either UDP or TCP, but not both. The default protocol is UDP if you do not specify a protocol.</p> <p>You can use multiple logging host commands to specify additional servers that would all receive syslog messages. If you configure two or more logging servers, make sure that you limit the logging severity level to warnings for all logging servers.</p> <p>If you specify TCP, the ASA discovers when the syslog server fails and as a security protection, new connections through the ASA are blocked. If you specify UDP, the ASA continues to allow new connections whether or not the syslog server is operational. Valid port values for either protocol are 1025 through 65535. The default UDP port is 514. The default TCP port is 1470.</p> <p>Note Sending syslogs over TCP is not supported on a standby ASA.</p>

Generating Syslog Messages in EMBLEM Format to Other Output Destinations

To generate syslog messages in EMBLEM format to other output destinations, enter the following command:

Command	Purpose
<pre>logging emblem</pre> <p>Example: <pre>hostname(config)# logging emblem</pre></p>	<p>Sends syslog messages in EMBLEM format to output destinations other than a syslog server, such as Telnet or SSH sessions.</p>

Changing the Amount of Internal Flash Memory Available for Logs

To change the amount of internal flash memory available for logs, perform the following steps:

	Command	Purpose
Step 1	logging flash-maximum-allocation <i>kbytes</i> Example: hostname(config)# logging flash-maximum-allocation 1200	<p>Specifies the maximum amount of internal flash memory available for saving log files. By default, the ASA can use up to 1 MB of internal flash memory for log data. The minimum amount of internal flash memory that must be free for the ASA to save log data is 3 MB.</p> <p>If a log file being saved to internal flash memory would cause the amount of free internal flash memory to fall below the configured minimum limit, the ASA deletes the oldest log files to ensure that the minimum amount of memory remains free after saving the new log file. If there are no files to delete or if, after all old files have been deleted, free memory is still below the limit, the ASA fails to save the new log file.</p>
Step 2	logging flash-minimum-free <i>kbytes</i> Example: hostname(config)# logging flash-minimum-free 4000	<p>Specifies the minimum amount of internal flash memory that must be free for the ASA to save a log file.</p>

Configuring the Logging Queue

To configure the logging queue, enter the following command:

Command	Purpose
logging queue <i>message_count</i> Example: hostname(config)# logging queue 300	<p>Specifies the number of syslog messages that the ASA can hold in its queue before sending them to the configured output destination. The ASA has a fixed number of blocks in memory that can be allocated for buffering syslog messages while they are waiting to be sent to the configured output destination. The number of blocks required depends on the length of the syslog message queue and the number of syslog servers specified. The default queue size is 512 syslog messages. The queue size is limited only by block memory availability. Valid values are from 0 to 8192 messages, depending on the platform. If the logging queue is set to zero, the queue is the maximum configurable size (8192 messages), depending on the platform. The maximum queue size by platform is as follows:</p> <ul style="list-style-type: none"> • ASA-5505—1024 • ASA-5510—2048 • On all other platforms—8192

Sending All Syslog Messages in a Class to a Specified Output Destination

To send all syslog messages in a class to a specified output destination, enter the following command:

Command	Purpose
<pre>logging class message_class {buffered console history mail monitor trap} [severity_level]</pre> <p>Example: hostname(config)# logging class ha buffered alerts</p>	<p>Overrides the configuration in the specified output destination command. For example, if you specify that messages at severity level 7 should go to the internal log buffer and that ha class messages at severity level 3 should go to the internal log buffer, then the latter configuration takes precedence. The buffered, history, mail, monitor, and trap keywords specify the output destination to which syslog messages in this class should be sent. The history keyword enables SNMP logging. The monitor keyword enables Telnet and SSH logging. The trap keyword enables syslog server logging. Select one destination per command line entry. To specify that a class should go to more than one destination, enter a new command for each output destination.</p>

Enabling Secure Logging

To enable secure logging, enter the following command:

Command	Purpose
<pre>logging host interface_name syslog_ip [tcp/port udp/port] [format emblem] [secure]</pre> <p>Example: hostname(config)# logging host inside 10.0.0.1 TCP/1500 secure</p>	<p>Enables secure logging.</p> <p>The <i>interface_name</i> argument specifies the interface on which the syslog server resides. The <i>syslog_ip</i> argument specifies the IP address of the syslog server. The <i>port</i> argument specifies the port (TCP or UDP) that the syslog server listens to for syslog messages. The tcp keyword specifies that the ASA should use TCP to send syslog messages to the syslog server. The udp keyword specifies that the ASA should use UDP to send syslog messages to the syslog server. The format emblem keyword enables EMBLEM format logging for the syslog server. The secure keyword specifies that the connection to the remote logging host should use SSL/TLS for TCP only.</p> <p>Note Secure logging does not support UDP; an error occurs if you try to use this protocol.</p>

Including the Device ID in Non-EMBLEM Format Syslog Messages

To include the device ID in non-EMBLEM format syslog messages, enter the following command:

Command	Purpose
<p>logging device-id [context-name hostname ipaddress interface_name string text]</p> <p>Example:</p> <pre>hostname(config)# logging device-id hostname</pre> <pre>hostname(config)# logging device-id context-name</pre>	<p>Configures the ASA to include a device ID in non-EMBLEM-format syslog messages. You can specify only one type of device ID for syslog messages. The context-name keyword indicates that the name of the current context should be used as the device ID (applies to multiple context mode only). If you enable the logging device ID for the admin context in multiple context mode, messages that originate in the system execution space use a device ID of system, and messages that originate in the admin context use the name of the admin context as the device ID.</p> <p>The hostname keyword specifies that the hostname of the ASA should be used as the device ID. The ipaddress interface_name keyword and argument pair specify that the interface IP address specified as <i>interface_name</i> should be used as the device ID. If you use the ipaddress keyword, the device ID becomes the specified ASA interface IP address, regardless of the interface from which the syslog message is sent. This keyword provides a single, consistent device ID for all syslog messages that are sent from the device. The string text keyword and argument pair specify that the text string should be used as the device ID. The string can include as many as 16 characters. You cannot use blank spaces or any of the following characters:</p> <ul style="list-style-type: none"> • & (ampersand) • ‘ (single quote) • “ (double quote) • < (less than) • > (greater than) • ? (question mark) <p>Note If enabled, the device ID does not appear in EMBLEM-formatted syslog messages nor in SNMP traps.</p>

Including the Date and Time in Syslog Messages

To include the date and time in syslog messages, enter the following command:

Command	Purpose
logging timestamp hostname(config)# logging timestamp Example: hostname(config)# logging timestamp LOG-2008-10-24-081856.TXT	Specifies that syslog messages should include the date and time that they were generated. To remove the date and time from syslog messages, enter the no logging timestamp command.

Disabling a Syslog Message

To disable a specified syslog message, enter the following command:

Command	Purpose
no logging message <i>message_number</i> Example: hostname(config)# no logging message 113019	Prevents the ASA from generating a particular syslog message. To reenble a disabled syslog message, enter the logging message <i>message_number</i> command (for example, logging message 113019). To reenble logging of all disabled syslog messages, enter the clear config logging disabled command.

Changing the Severity Level of a Syslog Message

To change the severity level of a syslog message, enter the following command:

Command	Purpose
logging message <i>message_ID</i> level <i>severity_level</i> Example: hostname(config)# logging message 113019 level 5	Specifies the severity level of a syslog message. To reset the severity level of a syslog message to its setting, enter the no logging message <i>message_ID</i> level <i>current_severity_level</i> command (for example, no logging message 113019 level 5). To reset the severity level of all modified syslog messages to their settings, enter the clear configure logging level command.

Limiting the Rate of Syslog Message Generation

To limit the rate of syslog message generation, enter the following command:

Command	Purpose
<pre>logging rate-limit {unlimited {num [interval]}}</pre> <pre>message syslog_id level severity_level</pre> <p>Example:</p> <pre>hostname(config)# logging rate-limit 1000 600 level 6</pre>	<p>Applies a specified severity level (1 through 7) to a set of messages or to an individual message (not the destination) within a specified time period. Rate limits affect the volume of messages being sent to all configured destinations. To reset the logging rate limit to the default value, enter the clear running-config logging rate-limit command. To reset the logging rate limit, enter the clear configure logging rate-limit command.</p>

Monitoring the Logs

To monitor the logs and assist in monitoring the system performance, enter one of the following commands:

Command	Purpose
<code>show logging</code>	Shows syslog messages, including the severity level. Note The maximum number of syslog messages that are available to view is 1000, which is the default setting. The maximum number of syslog messages that are available to view is 2000.
<code>show logging message</code>	Shows a list of syslog messages with modified severity levels and disabled syslog messages.
<code>show logging message message_ID</code>	Shows the severity level of a specific syslog message.
<code>show logging queue</code>	Shows the logging queue and queue statistics.
<code>show logging rate-limit</code>	Shows the disallowed syslog messages.
<code>show running-config logging rate-limit</code>	Shows the current logging rate-limit setting.

Examples

The following example shows the logging information that displays for the **show logging** command:

```
hostname(config)# show logging
Syslog logging: enabled
  Facility: 16
  Timestamp logging: disabled
  Standby logging: disabled
  Deny Conn when Queue Full: disabled
  Console logging: disabled
  Monitor logging: disabled
  Buffer logging: disabled
  Trap logging: level errors, facility 16, 3607 messages logged
  Logging to infrastructure 10.1.2.3
```

```

History logging: disabled
Device ID: 'inside' interface IP address "10.1.1.1"
Mail logging: disabled
ASDM logging: disabled

```

Configuration Examples for Logging

The following examples show how to control both whether a syslog message is enabled and the severity level of the specified syslog message:

```

hostname(config)# show logging message 403503
syslog 403503: -level errors (enabled)

hostname(config)# logging message 403503 level 1
hostname(config)# show logging message 403503
syslog 403503: -level errors, current-level alerts (enabled)

hostname(config)# no logging message 403503
hostname(config)# show logging message 403503
syslog 403503: -level errors, current-level alerts (disabled)

hostname(config)# logging message 403503
hostname(config)# show logging message 403503
syslog 403503: -level errors, current-level alerts (enabled)

hostname(config)# no logging message 403503 level 3
hostname(config)# show logging message 403503
syslog 403503: -level errors (enabled)

```

Feature History for Logging

[Table 77-2](#) lists each feature change and the platform release in which it was implemented.

Table 77-2 Feature History for Logging

Feature Name	Platform Releases	Feature Information
Logging	7.0(1)	Provides ASA network logging information through various output destinations, and includes the option to view and save log files.
Rate limit	7.0(4)	Limits the rate at which syslog messages are generated. We introduced the following command: logging rate-limit .
Logging list	7.2(1)	Creates a logging list to use in other commands to specify messages by various criteria (logging level, event class, and message IDs). We introduced the following command: logging list .

Table 77-2 Feature History for Logging (continued)

Feature Name	Platform Releases	Feature Information
Secure logging	8.0(2)	Specifies that the connection to the remote logging host should use SSL/TLS. This option is valid only if the protocol selected is TCP. We modified the following command: logging host .
Logging class	8.0(4), 8.1(1)	Added support for the ipaa event class of logging messages. We modified the following command: logging class .
Logging class and saved logging buffers	8.2(1)	Added support for the dap event class of logging messages. We modified the following command: logging class . Added support to clear the saved logging buffers (ASDM, internal, FTP, and flash). We introduced the following command: clear logging queue bufferwrap .
Password encryption	8.3(1)	Added support for password encryption. We modified the following command: logging ftp server .
Enhanced logging and connection blocking	8.3(2)	When you configure a syslog server to use TCP, and the syslog server is unavailable, the ASA blocks new connections that generate syslog messages until the server becomes available again (for example, VPN, firewall, and cut-through-proxy connections). This feature has been enhanced to also block new connections when the logging queue on the ASA is full; connections resume when the logging queue is cleared. This feature was added for compliance with Common Criteria EAL4+. Unless required, we recommended allowing connections when syslog messages cannot be sent or received. To allow connections, continue to use the logging permit-hostdown command. We modified the following command: show logging . We introduced the following syslog messages: 414005, 414006, 414007, and 414008.



CHAPTER 78

Configuring NetFlow Secure Event Logging (NSEL)

This chapter describes how to configure NSEL, a security logging mechanism that is built on NetFlow Version 9 technology, and how to handle events and syslog messages through NSEL.

This chapter includes the following sections:

- [Information About NSEL, page 78-1](#)
- [Licensing Requirements for NSEL, page 78-3](#)
- [Prerequisites for NSEL, page 78-3](#)
- [Guidelines and Limitations, page 78-4](#)
- [Configuring NSEL, page 78-4](#)
- [Monitoring NSEL, page 78-10](#)
- [Configuration Examples for NSEL, page 78-12](#)
- [Where to Go Next, page 78-13](#)
- [Additional References, page 78-13](#)
- [Feature History for NSEL, page 78-14](#)

Information About NSEL

The ASA and ASASM support NetFlow Version 9 services. For more information about NetFlow services, see the [“RFCs” section on page 78-14](#).

The ASA and ASASM implementations of NSEL provide a stateful, IP flow tracking method that exports records that indicate significant events in a flow. In stateful flow tracking, tracked flows go through a series of state changes. NSEL events are used to export data about flow status and are triggered by the event that caused the state change.

The significant events that are tracked include flow-create, flow-teardown, flow-denied (excluding those flows that are denied by EtherType ACLs), and flow-update. In addition, the ASA and ASASM implementation of NSEL generates periodic NSEL events and flow-update events to provide periodic byte counters over the duration of the flow. These events are usually time-driven, which makes them more in line with traditional Netflow; however, these events may also be triggered by state changes in the flow.

Each NSEL record has an event ID and an extended event ID field, which describes the flow event.

The ASA and ASASM implementations of NSEL provide the following major functions:

- Tracks flow-create, flow-teardown, and flow-denied events, and generates appropriate NSEL data records.
- Triggers flow-update events and generates appropriate NSEL data records.
- Defines and exports templates that describe the progression of a flow. Templates describe the format of the data records that are exported through NetFlow. Each event has several record formats or templates associated with it.
- Tracks configured NSEL collectors and delivers templates and data records to these configured NSEL collectors through NetFlow over UDP only.
- Sends template information periodically to NSEL collectors. Collectors receive template definitions, normally before receiving flow records.
- Filters NSEL events based on the traffic and event type through Modular Policy Framework, then sends records to different collectors. Traffic is matched based on the order in which classes are configured. After a match is found, no other classes are checked. The supported event types are flow-create, flow-denied, flow-teardown, flow-update, and all. Records can be sent to different collectors. For example, with two collectors, you can do the following:
 - Log all flow-denied events that match access list 1 to collector 1.
 - Log all flow-create events to collector 1.
 - Log all flow-teardown events to collector 2.
 - Log all flow-update events to collector 1.
- Delays the export of flow-create events.

Using NSEL and Syslog Messages

Table 78-1 lists the syslog messages that have an equivalent NSEL event, event ID, and extended event ID. The extended event ID provides more detail about the event (for example, which ACL—ingress or egress—has denied a flow).



Note

Enabling NetFlow to export flow information makes the syslog messages that are listed in Table 78-1 redundant. In the interest of performance, we recommend that you disable redundant syslog messages, because the same information is exported through NetFlow. You can enable or disable individual syslog messages by following the procedure in the “Disabling and Reenabling NetFlow-related Syslog Messages” section on page 78-9.

Table 78-1 Syslog Messages and Equivalent NSEL Events

Syslog Message	Description	NSEL Event ID	NSEL Extended Event ID
106100	Generated whenever an ACL is encountered.	1—Flow was created (if the ACL allowed the flow). 3—Flow was denied (if the ACL denied the flow).	0—If the ACL allowed the flow. 1001—Flow was denied by the ingress ACL. 1002—Flow was denied by the egress ACL.
106015	A TCP flow was denied because the first packet was not a SYN packet.	3—Flow was denied.	1004—Flow was denied because the first packet was not a TCP SYN packet.

Table 78-1 Syslog Messages and Equivalent NSEL Events (continued)

Syslog Message	Description	NSEL Event ID	NSEL Extended Event ID
106023	When a flow was denied by an ACL attached to an interface through the access-group command.	3—Flow was denied.	1001—Flow was denied by the ingress ACL. 1002—Flow was denied by the egress ACL.
302013, 302015, 302017, 302020	TCP, UDP, GRE, and ICMP connection creation.	1—Flow was created.	0—Ignore.
302014, 302016, 302018, 302021	TCP, UDP, GRE, and ICMP connection teardown.	2—Flow was deleted.	0—Ignore. > 2000—Flow was torn down.
313001	An ICMP packet to the device was denied.	3—Flow was denied.	1003—To-the-box flow was denied because of configuration.
313008	An ICMP v6 packet to the device was denied.	3—Flow was denied.	1003—To-the-box flow was denied because of configuration.
710003	An attempt to connect to the device interface was denied.	3—Flow was denied.	1003—To-the-box flow was denied because of configuration.

**Note**

When NSEL and syslog messages are both enabled, there is no guarantee of chronological ordering between the two logging types.

Licensing Requirements for NSEL

Model	License Requirement
All models	Base License.

Prerequisites for NSEL

NSEL has the following prerequisites:

- IP address and hostname assignments must be unique throughout the NetFlow configuration.
- You must have at least one configured collector before you can use NSEL.
- You must configure NSEL collectors before you can configure filters via Modular Policy Framework.

Guidelines and Limitations

This section includes the guidelines and limitations for this feature.

Context Mode Guidelines

Supported in single and multiple context mode.

Firewall Mode Guidelines

Supported in routed and transparent firewall mode.

IPv6 Guidelines

Supports IPv6 for the **class-map**, **match any** and **class-default** commands. The **match access-list** commands only support IPv4 access lists.

Additional Guidelines and Limitations

- If you have previously configured flow-export actions using the **flow-export enable** command, and you upgrade to a later version, then your configuration is automatically converted to the new Modular Policy Framework **flow-export event-type** command, which is described under the **policy-map** command.
- Flow-export actions are not supported in interface-based policies. You can configure flow-export actions in a class-map only with the **match access-list**, **match any**, or **class-default** commands. You can only apply flow-export actions in a global service policy.
- To view bandwidth usage for NetFlow records (not available in real-time), you must use the threat detection feature.

Configuring NSEL

This section describes how to configure NSEL and includes the following topics:

- [Configuring NSEL Collectors, page 78-5](#)
- [Configuring Flow-Export Actions Through Modular Policy Framework, page 78-5](#)
- [Configuring Template Timeout Intervals, page 78-7](#)
- [Changing the Time Interval for Sending Flow-Update Events to a Collector, page 78-8](#)
- [Disabling and Reenabling NetFlow-related Syslog Messages, page 78-9](#)
- [Clearing Runtime Counters, page 78-10](#)

Configuring NSEL Collectors

To configure NSEL collectors, enter the following command:

Command	Purpose
<p>flow-export destination <i>interface-name</i> <i>ipv4-address hostname udp-port</i></p> <p>Example: hostname (config)# flow-export destination inside 209.165.200.225 2002</p>	<p>Adds, edits, or deletes an NSEL collector to which NetFlow packets are sent. The destination keyword indicates that a NSEL collector is being configured. The <i>interface-name</i> argument is the name of the ASA and ASA Services Module interface through which the collector is reached. The <i>ipv4-address</i> argument is the IP address of the machine running the collector application. The <i>hostname</i> argument is the destination IP address or name of the collector. The <i>udp-port</i> argument is the UDP port number to which NetFlow packets are sent. You can configure a maximum of five collectors. After a collector is configured, template records are automatically sent to all configured NSEL collectors.</p> <p>Note Make sure that collector applications use the Event Time field to correlate events.</p>

What to Do Next

See the [“Configuring Flow-Export Actions Through Modular Policy Framework”](#) section on page 78-5.

Configuring Flow-Export Actions Through Modular Policy Framework

To export NSEL events by defining all classes with flow-export actions, perform the following steps:

	Command	Purpose
Step 1	<p>class-map <i>flow_export_class</i></p> <p>Example: hostname (config-pmap)# class-map flow_export_class</p>	<p>Defines the class map that identifies traffic for which NSEL events need to be exported. The <i>flow_export_class</i> argument is the name of the class map.</p>
Step 2	<p>Choose one of the following options:</p> <p>match access-list <i>flow_export_acl</i></p> <p>Example: hostname (config-cmap)# match access-list flow_export_acl</p> <p>match any</p> <p>Example: hostname (config-cmap)# match any</p>	<p>Configures the access list to match specific traffic. The <i>flow_export_acl</i> argument is the name of the access list.</p> <p>Matches any traffic.</p>

	Command	Purpose
Step 3	<p>policy-map <i>flow_export_policy</i></p> <p>Example: hostname(config)# policy-map flow_export_policy</p>	<p>Defines the policy map to apply flow-export actions to the defined classes. The <i>flow_export_policy</i> argument is the name of the policy map.</p> <p>If you create a new policy map and apply it globally according to Step 6, the remaining inspection policies are deactivated.</p> <p>Alternatively, to insert a NetFlow class in the existing policy, enter the class flow_export_class command after the policy-map global_policy command.</p> <p>For more information about creating or modifying the Modular Policy Framework, see Chapter 32, “Configuring a Service Policy Using the Modular Policy Framework.”</p>
Step 4	<p>class <i>flow_export_class</i></p> <p>Example: hostname (config-pmap)# class flow_export_class</p>	<p>Defines the class to apply flow-export actions. The <i>flow_export_class</i> argument is the name of the class.</p>
Step 5	<p>flow-export event-type <i>event-type</i> destination <i>flow_export_host1</i> [<i>flow_export_host2</i>]</p> <p>Example: hostname (config-pmap-c)# flow-export event-type all destination 209.165.200.230</p>	<p>Configures a flow-export action. The event_type keyword is the name of the supported event being filtered. The <i>flow_export_host</i> argument is the IP address of a host. The destination keyword is the IP address of the configured collector.</p>
Step 6	<p>service-policy <i>flow_export_policy</i> global</p> <p>Example: hostname (config)# service-policy flow_export_policy global</p>	<p>Adds or edits the service policy globally. The <i>flow_export_policy</i> argument is the name of the policy map.</p>

What to Do Next

See the “[Configuring Template Timeout Intervals](#)” section on page 78-7.

Configuring Template Timeout Intervals

To configure template timeout intervals, enter the following command:

Command	Purpose
<pre>flow-export template timeout-rate <i>minutes</i></pre> <p>Example: hostname (config)# flow-export template timeout-rate 15</p>	Specifies the interval at which template records are sent to all configured output destinations. The template keyword indicates the template-specific configurations. The timeout-rate keyword specifies the time before templates are resent. The <i>minutes</i> argument specifies the time interval in minutes at which the templates are resent. The default value is 30 minutes.

What to Do Next

See the [“Changing the Time Interval for Sending Flow-Update Events to a Collector”](#) section on page 78-8.

Changing the Time Interval for Sending Flow-Update Events to a Collector

To change the time interval at which periodic flow-update events are to be sent to a collector, enter the following command:

Command	Purpose
<p>flow-export active refresh-interval <i>value</i></p> <p>Example: hostname (config)# flow-export active refresh-interval 30</p>	<p>Configures NetFlow parameters for active connections. The <i>value</i> argument specifies the time interval between flow-update events in minutes. Valid values are from 1 - 60 minutes. The default value is 1 minute.</p> <p>If you have already configured the flow-export delay flow-create command, and you then configure the flow-export active refresh-interval command with an interval value that is not at least 5 seconds more than the delay value, the following warning message appears at the console:</p> <pre>WARNING: The current delay flow-create value configuration may cause flow-update events to appear before flow-creation events.</pre> <p>If you have already configured the flow-export active refresh-interval command, and you then configure the flow-export delay flow-create command with a delayvalue that is not at least 5 seconds less than the interval value, the following warning message appears at the console:</p> <pre>WARNING: The current delay flow-create value configuration may cause flow-update events to appear before flow-creation events.</pre>

What to Do Next

See the [“Delaying Flow-Create Events”](#) section on page 78-9.

Delaying Flow-Create Events

To delay the sending of flow-create events, enter the following command:

Command	Purpose
flow-export delay flow-create <i>seconds</i> Example: hostname (config)# flow-export delay flow-create 10	Delays the sending of a flow-create event by the specified number of seconds. The <i>seconds</i> argument indicates the amount of time allowed for the delay in seconds. If this command is not configured, there is no delay, and the flow-create event is exported as soon as the flow is created. If the flow is torn down before the configured delay, the flow-create event is not sent; an extended flow teardown event is sent instead.

What to Do Next

See the [“Disabling and Reenabling NetFlow-related Syslog Messages”](#) section on page 78-9.

Disabling and Reenabling NetFlow-related Syslog Messages

To disable and reenablenet NetFlow-related syslog messages, perform the following steps:

	Command	Purpose
Step 1	logging flow-export-syslogs disable Example: hostname(config)# logging flow-export-syslogs disable	Disables syslog messages that have become redundant because of NSEL. Note Although you execute this command in global configuration mode, it is not stored in the configuration. Only the no logging message xxxxxx commands are stored in the configuration.
Step 2	logging message xxxxxx Example: hostname(config)# logging message 302013	Reenables syslog messages individually, where <i>xxxxxx</i> is the specified syslog message that you want to reenablenet.
Step 3	logging flow-export-syslogs enable Example: hostname(config)# logging flow-export-syslogs enable	Reenables all NSEL events at the same time.

What to Do Next

See the [“Clearing Runtime Counters”](#) section on page 78-10.

Clearing Runtime Counters

To reset runtime counters, enter the following command:

Command	Purpose
<code>clear flow-export counters</code>	Resets all runtime counters for NSEL to zero.
Example: <code>hostname# clear flow-export counters</code>	

What to Do Next

See the [“Monitoring NSEL”](#) section on page 78-10.

Monitoring NSEL

You can use syslog messages to help troubleshoot errors or monitor system usage and performance. You can view real-time syslog messages that have been saved in the log buffer in a separate window, which include an explanation of the message, details about the message, and recommended actions to take, if necessary, to resolve an error. For more information, see the [“Using NSEL and Syslog Messages”](#) section on page 78-2.

NSEL Monitoring Commands

To monitor NSEL, enter one of the following commands:

Command	Purpose
<code>show flow-export counters</code>	Shows runtime counters, including statistical data and error data, for NSEL.
<code>show logging flow-export-syslogs</code>	Lists all syslog messages that are captured by NSEL events.
<code>show running-config flow-export</code>	Shows the currently configured NetFlow commands.
<code>show running-config logging</code>	Shows disabled syslog messages, which are redundant syslog messages, because they export the same information through NetFlow.

Examples

The following example shows how to display flow-export counters:

```
hostname (config)# show flow-export counters
```

```
destination: inside 209.165.200.225 2055
```

```
Statistics:
  packets sent           250
Errors:
  block allocation errors 0
  invalid interface      0
  template send failure  0
  no route to collector  0
```

The following example shows how to display the flow-export active configuration:

```
hostname (config)# show running-config flow-export active
flow-export active refresh-interval 2
```

The following example shows how to display the flow-export delay configuration:

```
hostname (config)# show running-config flow-export delay
flow-export delay flow-create 30
```

The following example shows how to display the flow-export destination configurations:

```
hostname (config)# show running-config flow-export destination
flow-export destination inside 192.68.10.70 9996
```

The following example shows how to display the flow-export template configuration:

```
hostname (config)# show running-config flow-export template
flow-export template timeout-rate 1
```

The following example shows how to display flow-export syslog messages:

```
hostname# show logging flow-export-syslogs
```

Syslog ID	Type	Status
302013	Flow Created	Enabled
302015	Flow Created	Enabled
302017	Flow Created	Enabled
302020	Flow Created	Enabled
302014	Flow Deleted	Enabled
302016	Flow Deleted	Enabled
302018	Flow Deleted	Enabled
302021	Flow Deleted	Enabled
106015	Flow Denied	Enabled
106023	Flow Denied	Enabled
313001	Flow Denied	Enabled
313008	Flow Denied	Enabled
710003	Flow Denied	Enabled
106100	Flow Created/Denied	Enabled

The following example shows how to display current syslog message settings:

```
hostname (config)# show running-config logging
```

```
no logging message 313008
no logging message 313001
```

Configuration Examples for NSEL

The following examples show how to filter NSEL events, with the specified collectors already configured:

- **flow-export destination inside 209.165.200.2055**
- **flow-export destination outside 209.165.201.29 2055**
- **flow-export destination outside 209.165.201.27 2055**

Log all events between hosts 209.165.200.224 and hosts 209.165.201.224 to 209.165.200.230, and log all other events to 209.165.201.29:

```
hostname (config)# access-list flow_export_acl permit ip host 209.165.200.224 host
209.165.201.224
hostname (config)# class-map flow_export_class
hostname (config-cmap)# match access-list flow_export_acl
hostname (config)# policy-map flow_export_policy
hostname (config-pmap)# class flow_export_class
hostname (config-pmap-c)# flow-export event-type all destination 209.165.200.230
hostname (config-pmap)# class class-default
hostname (config-pmap-c)# flow-export event-type all destination 209.165.201.29
hostname (config)# service-policy flow_export_policy global
```

Log flow-create events to 209.165.200.230, flow-teardown events to 209.165.201.29, flow-denied events to 209.165.201.27, and flow-update events to 209.165.200.230:

```
hostname (config)# policy-map flow_export_policy
hostname (config-pmap)# class class-default
hostname (config-pmap-c)# flow-export event-type flow-creation destination 209.165.200.230
hostname (config-pmap-c)# flow-export event-type flow-teardown destination 209.165.201.29
hostname (config-pmap-c)# flow-export event-type flow-denied destination 209.165.201.27
hostname (config-pmap-c)# flow-export event-type flow-update destination 209.165.200.230
hostname (config)# service-policy flow_export_policy global
```

Log flow-create events between hosts 209.165.200.224 and 209.165.200.230 to 209.165.201.29, and log all flow-denied events to 209.165.201.27:

```
hostname (config)# access-list flow_export_acl permit ip host 209.165.200.224 host
209.165.200.230
hostname (config)# class-map flow_export_class
hostname (config)# match access-list flow_export_acl
hostname (config)# policy-map flow_export_policy
hostname (config-pmap)# class flow_export_class
hostname (config-pmap-c)# flow-export event-type flow-creation destination 209.165.200.29
hostname (config-pmap-c)# flow-export event-type flow-denied destination 209.165.201.27
hostname (config-pmap)# class class-default
hostname (config-pmap-c)# flow-export event-type flow-denied destination 209.165.201.27
hostname (config)# service-policy flow_export_policy global
```



Note

You must enter the following command:

```
hostname (config-pmap-c)# flow-export event-type flow-denied destination 209.165.201.27
```

for *flow_export_acl*, because traffic is not checked after the first match, and you must explicitly define the action to log flow-denied events that match *flow_export_acl*.

Log all traffic except traffic between hosts 209.165.201.27 and 209.165.201.50 to 209.165.201.27:

```
hostname (config)# access-list flow_export_acl deny ip host 209.165.201.30 host
209.165.201.50
```

```
hostname (config)# access-list flow_export_acl permit ip any any
hostname (config)# class-map flow_export_class
hostname (config-cmap)# match access-list flow_export_acl
hostname (config)# policy-map flow_export_policy
hostname (config-pmap)# class flow_export_class
hostname (config-pmap-c)# flow-export event-type all destination 209.165.201.27
hostname (config)# service-policy flow_export_policy global
```

Where to Go Next

To configure the syslog server, see [Chapter 77, “Configuring Logging.”](#)

Additional References

For additional information related to implementing NSEL, see the following sections:

- [Related Documents, page 78-14](#)
- [RFCs, page 78-14](#)

Related Documents

Related Topic	Document Title
Using NSEL and Syslog Messages, page 78-2	<i>syslog message guide</i>
Information about the implementation of NSEL on the ASA and ASASM	<i>Cisco ASA 5500 Series Implementation Note for NetFlow Collectors</i> See the following article at https://supportforums.cisco.com/docs/DOC-6113 .
Configuring NetFlow on the ASA and ASASM using ASDM	See the following article at https://supportforums.cisco.com/docs/DOC-6114 .

RFCs

RFC	Title
3954	Cisco Systems NetFlow Services Export Version 9

Feature History for NSEL

[Table 78-2](#) lists each feature change and the platform release in which it was implemented..

Table 78-2 Feature History for NSEL

Feature Name	Platform Releases	Feature Information
NetFlow	8.1(1)	<p>The NetFlow feature enhances the ASA logging capabilities by logging flow-based events through the NetFlow protocol. NetFlow Version 9 services are used to export information about the progression of a flow from start to finish. The NetFlow implementation exports records that indicate significant events in the life of a flow. This implementation is different from traditional NetFlow, which exports data about flows at regular intervals. The NetFlow module also exports records about flows that are denied by access lists. You can configure an ASA 5580 to send the following events using NetFlow: flow create, flow teardown, and flow denied (only flows denied by ACLs are reported).</p> <p>We introduced the following commands: clear flow-export counters, flow-export enable, flow-export destination, flow-export template timeout-rate, logging flow-export syslogs enable, logging flow-export syslogs disable, show flow-export counters, show logging flow-export-syslogs.</p>
NetFlow Filtering	8.1(2)	<p>You can filter NetFlow events based on traffic and event type, then send records to different collectors. For example, you can log all flow-create events to one collector, and log flow-denied events to a different collector.</p> <p>We modified the following commands: class, class-map, flow-export event-type destination, match access-list, policy-map, service-policy.</p> <p>For short-lived flows, NetFlow collectors benefit from processing a single event instead of two events: flow create and flow teardown. You can configure a delay before sending the flow-create event. If the flow is torn down before the timer expires, only the flow teardown event is sent. The teardown event includes all information regarding the flow; no loss of information occurs.</p> <p>We introduced the following command: flow-export delay flow-create.</p>
NSEL	8.2(1)	The NetFlow feature has been ported to all available models of the ASA.
NSEL	8.4(5)	<p>Flow-update events have been introduced to provide periodic byte counters for flow traffic. You can change the time interval at which flow-update events are sent to the NetFlow collector. You can filter to which collectors flow-update records will be sent.</p> <p>We introduced the following command: flow-export active refresh-interval.</p> <p>We modified the following command: flow-export event-type.</p>



CHAPTER 79

Configuring SNMP

This chapter describes how to configure SNMP to monitor the ASA and includes the following sections:

- [Information About SNMP, page 79-1](#)
- [Licensing Requirements for SNMP, page 79-17](#)
- [Prerequisites for SNMP, page 79-17](#)
- [Guidelines and Limitations, page 79-17](#)
- [Configuring SNMP, page 79-18](#)
- [Troubleshooting Tips, page 79-24](#)
- [Monitoring SNMP, page 79-26](#)
- [Configuration Examples for SNMP, page 79-28](#)
- [Where to Go Next, page 79-29](#)
- [Additional References, page 79-29](#)
- [Feature History for SNMP, page 79-31](#)

Information About SNMP

SNMP is an application-layer protocol that facilitates the exchange of management information between network devices and is part of the TCP/IP protocol suite. This section describes SNMP and includes the following topics:

- [Information About SNMP Terminology, page 79-2](#)
- [Information About MIBs and Traps, page 79-2](#)
- [SNMP Object Identifiers, page 79-3](#)
- [SNMP Physical Vendor Type Values, page 79-5](#)
- [Supported Tables in MIBs, page 79-11](#)
- [Supported Traps \(Notifications\), page 79-12](#)
- [SNMP Version 3, page 79-15](#)

The ASA provides support for network monitoring using SNMP Versions 1, 2c, and 3, and supports the use of all three versions simultaneously. The SNMP agent running on the ASA interface lets you monitor the ASA and through network management systems (NMSs), such as HP OpenView. The ASA supports SNMP read-only access through issuance of a GET request. SNMP write access is not allowed, so you cannot make changes with SNMP. In addition, the SNMP SET request is not supported.

You can configure the ASA to send traps, which are unsolicited messages from the managed device to the management station for certain events (event notifications) to an NMS, or you can use the NMS to browse the MIBs on the ASA. MIBs are a collection of definitions, and the ASA maintains a database of values for each definition. Browsing a MIB means issuing a series of GET-NEXT or GET-BULK requests of the MIB tree from the NMS to determine values.

The ASA has an SNMP agent that notifies designated management stations if events occur that are predefined to require a notification, for example, when a link in the network goes up or down. The notification it sends includes an SNMP OID, which identifies itself to the management stations. The ASASNMP agent also replies when a management station asks for information.

Information About SNMP Terminology

Table 79-1 lists the terms that are commonly used when working with SNMP:

Table 79-1 SNMP Terminology

Term	Description
Agent	The SNMP server running on the ASA. The SNMP agent has the following features: <ul style="list-style-type: none"> • Responds to requests for information and actions from the network management station. • Controls access to its Management Information Base, the collection of objects that the SNMP manager can view or change. • Does not allow set operations.
Browsing	Monitoring the health of a device from the network management station by polling required information from the SNMP agent on the device. This activity may include issuing a series of GET-NEXT or GET-BULK requests of the MIB tree from the network management station to determine values.
Management Information Bases (MIBs)	Standardized data structures for collecting information about packets, connections, buffers, failovers, and so on. MIBs are defined by the product, protocols, and hardware standards used by most network devices. SNMP network management stations can browse MIBs and request specific data or events be sent as they occur.
Network management stations (NMSs)	The PCs or workstations set up to monitor SNMP events and manage devices, such as the ASA.
Object identifier (OID)	The system that identifies a device to its NMS and indicates to users the source of information monitored and displayed.
Trap	Predefined events that generate a message from the SNMP agent to the NMS. Events include alarm conditions such as linkup, linkdown, coldstart, warmstart, authentication, or syslog messages.

Information About MIBs and Traps

MIBs are either standard or enterprise-specific. Standard MIBs are created by the IETF and documented in various RFCs. A trap reports significant events occurring on a network device, most often errors or failures. SNMP traps are defined in either standard or enterprise-specific MIBs. Standard traps are created by the IETF and documented in various RFCs. SNMP traps are compiled into the ASA software.

If needed, you can also download RFCs, standard MIBs, and standard traps from the following locations:

<http://www.ietf.org/>

<ftp://ftp-sj.cisco.com/pub/mibs>

Download a complete list of Cisco MIBs, traps, and OIDs from the following location:

<http://www.cisco.com/public/sw-center/netmgmt/cmtk/mibs.shtml>

In addition, download Cisco OIDs by FTP from the following location:

<ftp://ftp.cisco.com/pub/mibs/oid/oid.tar.gz>



Note

In software versions 7.2(1), 8.0(2), and later, the interface information accessed through SNMP refreshes about every 5 seconds. As a result, we recommend that you wait for at least 5 seconds between consecutive polls.

SNMP Object Identifiers

Each Cisco system-level product has an SNMP object identifier (OID) for use as a MIB-II sysObjectID. The CISCO-PRODUCTS-MIB includes the OIDs that can be reported in the sysObjectID object in the SNMPv2-MIB. You can use this value to identify the model type. [Table 79-2](#) lists the sysObjectID OIDs for ASA models.

Table 79-2 *SNMP Object Identifiers*

Product Identifier	sysObjectID	Model Number
ASA 5505	ciscoASA5505 (ciscoProducts 745)	Cisco ASA 5505
ASA 5510	ciscoASA5510 (ciscoProducts 669)	Cisco ASA 5510
ASA 5510	ciscoASA5510sc (ciscoProducts 773)	Cisco ASA 5510 security context
ASA 5510	ciscoASA5510sy (ciscoProducts 774)	Cisco ASA 5510 system context
ASA 5520	ciscoASA5520 (ciscoProducts 670)	Cisco ASA 5520
ASA 5520	ciscoASA5520sc (ciscoProducts 671)	Cisco ASA 5520 security context
ASA 5520	ciscoASA5520sy (ciscoProducts 764)	Cisco ASA 5520 system context
ASA 5540	ciscoASA5540 (ciscoProducts 672)	Cisco ASA 5540
ASA 5540	ciscoASA5540sc (ciscoProducts 673)	Cisco ASA 5540 security context
ASA 5540	ciscoASA5540sy (ciscoProducts 765)	Cisco ASA 5540 system context
ASA 5550	ciscoASA5550 (ciscoProducts 753)	Cisco ASA 5550
ASA 5550	ciscoASA5550sc (ciscoProducts 763)	Cisco ASA 5550 security context
ASA 5550	ciscoASA 5550sy (ciscoProducts 766)	Cisco ASA 5550 system context
ASA5580	ciscoASA5580 (ciscoProducts 914)	Cisco ASA 5580
ASA5580	ciscoASA5580 (ciscoProducts 915)	Cisco ASA 5580 security context
ASA5580	ciscoASA5580 (ciscoProducts 916)	Cisco ASA 5580 system context
ASA5585-SSP10	ciscoASA5585Ssp10 (ciscoProducts 1194)	ASA 5585-X SSP-10
ASA5585-SSP20	ciscoASA5585Ssp20 (ciscoProducts 1195)	ASA 5585-X SSP-20
ASA5585-SSP40	ciscoASA5585Ssp40 (ciscoProducts 1196)	ASA 5585-X SSP-40
ASA5585-SSP60	ciscoASA5585Ssp60 (ciscoProducts 1197)	ASA 5585-X SSP-60
ASA5585-SSP10	ciscoASA5585Ssp10sc (ciscoProducts 1198)	ASA 5585-X SSP-10 security context

Table 79-2 SNMP Object Identifiers (continued)

ASA5585-SSP20	ciscoASA5585Ssp20sc (ciscoProducts 1199)	ASA 5585-X SSP-20 security context
ASA5585-SSP40	ciscoASA5585Ssp40sc (ciscoProducts 1200)	ASA 5585-X SSP-40 security context
ASA5585-SSP60	ciscoASA5585Ssp60sc (ciscoProducts 1201)	ASA 5585-X SSP-60 security context
ASA5585-SSP10	ciscoASA5585Ssp10sy (ciscoProducts 1202)	ASA 5585-X SSP-10 system context
ASA5585-SSP20	ciscoASA5585Ssp20sy (ciscoProducts 1203)	ASA 5585-X SSP-20 system context
ASA5585-SSP40	ciscoASA5585Ssp40sy (ciscoProducts 1204)	ASA 5585-X SSP-40 system context
ASA5585-SSP60	ciscoASA5585Ssp60sy (ciscoProducts 1205)	ASA 5585-X SSP-60 system context
ASA Services Module for Catalyst switches	ciscoAsaSm1 (ciscoProducts 1277)	Adaptive Security Appliance (ASA) Services Module for Catalyst switches
ASA Services Module for Catalyst switches security context	ciscoAsaSm1sc (ciscoProducts 1275)	Adaptive Security Appliance (ASA) Services Module for Catalyst switches security context
ASA Services Module for Catalyst switches security context with No Payload Encryption	ciscoAsaSm1K7sc (ciscoProducts 1334)	Adaptive Security Appliance (ASA) Services Module for Catalyst switches security context with No Payload Encryption
ASA Services Module for Catalyst switches system context	ciscoAsaSm1sy (ciscoProducts 1276)	Adaptive Security Appliance (ASA) Services Module for Catalyst switches system context
ASA Services Module for Catalyst switches system context with No Payload Encryption	ciscoAsaSm1K7sy (ciscoProducts 1335)	Adaptive Security Appliance (ASA) Services Module for Catalyst switches system context with No Payload Encryption
ASA Services Module for Catalyst switches system context with No Payload Encryption	ciscoAsaSm1K7 (ciscoProducts 1336)	Adaptive Security Appliance (ASA) Services Module for Catalyst switches with No Payload Encryption
ASA 5512	ciscoASA5512 (ciscoProducts 1407)	ASA 5512 Adaptive Security Appliance
ASA 5525	ciscoASA5525 (ciscoProducts 1408)	ASA 5525 Adaptive Security Appliance
ASA 5545	ciscoASA5545 (ciscoProducts 1409)	ASA 5545 Adaptive Security Appliance
ASA 5555	ciscoASA5555 (ciscoProducts 1410)	ASA 5555 Adaptive Security Appliance
ASA 5512 Security Context	ciscoASA5512sc (ciscoProducts 1411)	ASA 5512 Adaptive Security Appliance Security Context
ASA 5525 Security Context	ciscoASA5525sc (ciscoProducts 1412)	ASA 5525 Adaptive Security Appliance Security Context
ASA 5545 Security Context	ciscoASA5545sc (ciscoProducts 1413)	ASA 5545 Adaptive Security Appliance Security Context
ASA 5555 Security Context	ciscoASA5555sc (ciscoProducts 1414)	ASA 5555 Adaptive Security Appliance Security Context
ASA 5512 System Context	ciscoASA5512sy (ciscoProducts 1415)	ASA 5512 Adaptive Security Appliance System Context
ASA 5515 System Context	ciscoASA5515sy (ciscoProducts 1416)	ASA 5515 Adaptive Security Appliance System Context

Table 79-2 *SNMP Object Identifiers (continued)*

ASA 5525 System Context	ciscoASA5525sy (ciscoProducts1417)	ASA 5525 Adaptive Security Appliance System Context
ASA 5545 System Context	ciscoASA5545sy (ciscoProducts 1418)	ASA 5545 Adaptive Security Appliance System Context
ASA 5555 System Context	ciscoASA5555sy (ciscoProducts 1419)	ASA 5555 Adaptive Security Appliance System Context
ASA 5515 Security Context	ciscoASA5515sc (ciscoProducts 1420)	ASA 5515 Adaptive Security Appliance System Context
ASA 5515	ciscoASA5515 (ciscoProducts 1421)	ASA 5515 Adaptive Security Appliance

SNMP Physical Vendor Type Values

Each Cisco chassis or standalone system has a unique type number for SNMP use. The entPhysicalVendorType OIDs are defined in the CISCO-ENTITY-VENDORTYPE-OID-MIB. This value is returned in the entPhysicalVendorType object from the ASA SNMP agent. You can use this value to identify the type of component (module, power supply, fan, sensors, CPU, and so on). [Table 79-3](#) lists the physical vendor type values for the ASA models.

Table 79-3 *SNMP Physical Vendor Type Values*

Item	entPhysicalVendorType OID Description
ASA Services Module for Catalyst switches	cevCat6kWsSvcAsaSm1 (cevModuleCat6000Type 169)
ASA Services Module for Catalyst switches with No Payload Encryption	cevCat6kWsSvcAsaSm1K7 (cevModuleCat6000Type 186)
ASA 5505 chassis	cevChassisASA5505 (cevChassis 560)
ASA 5510 chassis	cevChassisASA5510 (cevChassis 447)
Cisco Adaptive Security Appliance (ASA) 5512 Adaptive Security Appliance	cevChassisASA5512 (cevChassis 1113)
Cisco Adaptive Security Appliance (ASA) 5512 Adaptive Security Appliance with No Payload Encryption	cevChassisASA5512K7 (cevChassis 1108)
Cisco Adaptive Security Appliance (ASA) 5515 Adaptive Security Appliance	cevChassisASA5515 (cevChassis 1114)
Cisco Adaptive Security Appliance (ASA) 5515 Adaptive Security Appliance with No Payload Encryption	cevChassisASA5515K7 (cevChassis 1109)
ASA 5520 chassis	cevChassisASA5520 (cevChassis 448)
Cisco Adaptive Security Appliance (ASA) 5525 Adaptive Security Appliance	cevChassisASA5525 (cevChassis 1115)
Cisco Adaptive Security Appliance (ASA) 5525 Adaptive Security Appliance with No Payload Encryption	cevChassisASA5525K7 (cevChassis 1110)
ASA 5540 chassis	cevChassisASA5540 (cevChassis 449)

Table 79-3 *SNMP Physical Vendor Type Values (continued)*

Cisco Adaptive Security Appliance (ASA) 5545 Adaptive Security Appliance	cevChassisASA5545 (cevChassis 1116)
Cisco Adaptive Security Appliance (ASA) 5545 Adaptive Security Appliance with No Payload Encryption	cevChassisASA5545K7 (cevChassis 1111)
ASA 5550 chassis	cevChassisASA5550 (cevChassis 564)
Cisco Adaptive Security Appliance (ASA) 5555 Adaptive Security Appliance	cevChassisASA5555 (cevChassis 1117)
Cisco Adaptive Security Appliance (ASA) 5555 Adaptive Security Appliance with No Payload Encryption	cevChassisASA5555K7 (cevChassis 1112)
ASA 5580 chassis	cevChassisASA5580 (cevChassis 704)
Central Processing Unit for Cisco Adaptive Security Appliance 5512	cevCpuAsa5512 (cevModuleCpuType 229)
Central Processing Unit for Cisco Adaptive Security Appliance 5512 with no Payload Encryption	cevCpuAsa5512K7 (cevModuleCpuType 224)
Central Processing Unit for Cisco Adaptive Security Appliance 5515	cevCpuAsa5515 (cevModuleCpuType 230)
Central Processing Unit for Cisco Adaptive Security Appliance 5515 with no Payload Encryption	cevCpuAsa5515K7 (cevModuleCpuType 225)
Central Processing Unit for Cisco Adaptive Security Appliance 5525	cevCpuAsa5525 (cevModuleCpuType 231)
Central Processing Unit for Cisco Adaptive Security Appliance 5525 with no Payload Encryption	cevCpuAsa5525K7 (cevModuleCpuType 226)
Central Processing Unit for Cisco Adaptive Security Appliance 5545	cevCpuAsa5545 (cevModuleCpuType 232)
Central Processing Unit for Cisco Adaptive Security Appliance 5545 with no Payload Encryption	cevCpuAsa5545K7 (cevModuleCpuType 227)
Central Processing Unit for Cisco Adaptive Security Appliance 5555	cevCpuAsa5555 (cevModuleCpuType 233)
Central Processing Unit for Cisco Adaptive Security Appliance 5555 with no Payload Encryption	cevCpuAsa5555K7 (cevModuleCpuType 228)
CPU for ASA 5580	cevCpuAsa5580 (cevModuleType 200)
CPU for ASA 5585 SSP-10	cevCpuAsa5585Ssp10 (cevModuleCpuType 204)
CPU for ASA 5585 SSP-10 No Payload Encryption	cevCpuAsa5585Ssp10K7 (cevModuleCpuType 205)
CPU for ASA 5585 SSP-20	cevCpuAsa5585Ssp20 (cevModuleCpuType 206)
CPU for ASA 5585 SSP-20 No Payload Encryption	cevCpuAsa5585Ssp20K7 (cevModuleCpuType 207)
CPU for ASA 5585 SSP-40	cevCpuAsa5585Ssp40 (cevModuleCpuType 208)
CPU for ASA 5585 SSP-40 No Payload Encryption	cevCpuAsa5585Ssp40K7 (cevModuleCpuType 209)
CPU for ASA 5585 SSP-60	cevCpuAsa5585Ssp60 (cevModuleCpuType 210)
CPU for ASA 5585 SSP-60 No Payload Encryption	cevCpuAsa5585Ssp60K (cevModuleCpuType 211)

Table 79-3 *SNMP Physical Vendor Type Values (continued)*

CPU for Cisco ASA Services Module for Catalyst switches	cevCpuAsaSm1 (cevModuleCpuType 222)
CPU for Cisco ASA Services Module with No Payload Encryption for Catalyst switches	cevCpuAsaSm1K7 (cevModuleCpuType 223)
Chassis Cooling Fan in Adapative Security Appliance 5512	cevFanASA5512ChassisFan (cevFan 163)
Chassis Cooling Fan in Adapative Security Appliance 5512 with No Payload Encryption	cevFanASA5512K7ChassisFan (cevFan 172)
Chassis Cooling Fan in Adapative Security Appliance 5515	cevFanASA5515ChassisFan (cevFan 164)
Chassis Cooling Fan in Adapative Security Appliance 5515 with No Payload Encryption	cevFanASA5515K7ChassisFan (cevFan 171)
Chassis Cooling Fan in Adapative Security Appliance 5525	cevFanASA5525ChassisFan (cevFan 165)
Chassis Cooling Fan in Adapative Security Appliance 5525 with No Payload Encryption	cevFanASA5525K7ChassisFan (cevFan 170)
Chassis Cooling Fan in Adapative Security Appliance 5545	cevFanASA5545ChassisFan (cevFan 166)
Chassis Cooling Fan in Adapative Security Appliance 5545 with No Payload Encryption	cevFanASA5545K7ChassisFan (cevFan 169)
Power Supply Fan in Adapative Security Appliance 5545 with No Payload Encryption	cevFanASA5545K7PSFan (cevFan 161)
Power Supply Fan in Adapative Security Appliance 5545	cevFanASA5545PSFan (cevFan 159)
Chassis Cooling Fan in Adapative Security Appliance 5555	cevFanASA5555ChassisFan (cevFan 167)
Chassis Cooling Fan in Adapative Security Appliance 5555 with No Payload Encryption	cevFanASA5555K7ChassisFan (cevFan 168)
Power Supply Fan in Adapative Security Appliance 5555	cevFanASA5555PSFan (cevFan 160)
Power Supply Fan in Adapative Security Appliance 5555 with No Payload Encryption	cevFanASA5555PSFanK7 (cevFan 162)
Fan type for ASA 5580	cevFanASA5580Fan (cevFan 138)
Power supply fan for ASA 5585-X	cevFanASA5585PSFan (cevFan 146)
ASA 5580 4-port GE copper interface card	cevModuleASA5580Pm4xlgeCu (cevModuleASA5580Type 1)
10-Gigabit Ethernet interface	cevPort10GigEthernet (cevPort 315)
Gigabit Ethernet port	cevPortGe (cevPort 109)
Power Supply unit in Adapative Security Appliance 5545	cevPowerSupplyASA5545PSInput (cevPowerSupply 323)
Presence Sensor for Power Supply input in Adaptive Security Appliance 5545	cevPowerSupplyASA5545PSPresence (cevPowerSupply 321)

Table 79-3 *SNMP Physical Vendor Type Values (continued)*

Power Supply unit in Adaptive Security Appliance 5555	cevPowerSupplyASA5555PSInput (cevPowerSupply 324)
Presence Sensor for Power Supply input in Adaptive Security Appliance 5555	cevPowerSupplyASA5555PSPresence (cevPowerSupply 322)
Power supply input for ASA 5580	cevPowerSupplyASA5580PSInput (cevPowerSupply 292)
Power supply input for ASA 5585	cevPowerSupplyASA5585PSInput (cevPowerSupply 304)
Cisco Adaptive Security Appliance (ASA) 5512 Chassis Fan sensor	cevSensorASA5512ChassisFanSensor (cevSensor 120)
Chassis Ambient Temperature Sensor for Cisco Adaptive Security Appliance 5512	cevSensorASA5512ChassisTemp (cevSensor 107)
Central Processing Unit Temperature Sensor for Cisco Adaptive Security Appliance 5512	cevSensorASA5512CPUtemp (cevSensor 96)
Cisco Adaptive Security Appliance (ASA) 5512 with No Payload Encryption Chassis Fan sensor	cevSensorASA5512K7ChassisFanSensor (cevSensor 125)
Central Processing Unit Temperature Sensor for Cisco Adaptive Security Appliance 5512 with No Payload Encryption	cevSensorASA5512K7CPUtemp (cevSensor 102)
Sensor for Chassis Cooling Fan in Adaptive Security Appliance 5512 with No Payload Encryption	cevSensorASA5512K7PSFanSensor (cevSensor 116)
Sensor for Chassis Cooling Fan in Adaptive Security Appliance 5512	cevSensorASA5512PSFanSensor (cevSensor 119)
Cisco Adaptive Security Appliance (ASA) 5515 Chassis Fan sensor	cevSensorASA5515ChassisFanSensor (cevSensor 121)
Chassis Ambient Temperature Sensor for Cisco Adaptive Security Appliance 5515	cevSensorASA5515ChassisTemp (cevSensor 98)
Central Processing Unit Temperature Sensor for Cisco Adaptive Security Appliance 5515	cevSensorASA5515CPUtemp (cevSensor 97)
Cisco Adaptive Security Appliance (ASA) 5515 with No Payload Encryption Chassis Fan sensor	cevSensorASA5515K7ChassisFanSensor (cevSensor 126)
Central Processing Unit Temperature Sensor for Cisco Adaptive Security Appliance 5515 with No Payload Encryption	cevSensorASA5515K7CPUtemp (cevSensor 103)
Sensor for Chassis Cooling Fan in Adaptive Security Appliance 5515 with No Payload Encryption	cevSensorASA5515K7PSFanSensor (cevSensor 115)
Sensor for Chassis Cooling Fan in Adaptive Security Appliance 5515	cevSensorASA5515PSFanSensor (cevSensor 118)
Cisco Adaptive Security Appliance (ASA) 5525 Chassis Fan sensor	cevSensorASA5525ChassisFanSensor (cevSensor 122)
Chassis Ambient Temperature Sensor for Cisco Adaptive Security Appliance 5525	cevSensorASA5525ChassisTemp (cevSensor 108)
Central Processing Unit Temperature Sensor for Cisco Adaptive Security Appliance 5525	cevSensorASA5525CPUtemp (cevSensor 99)

Table 79-3 *SNMP Physical Vendor Type Values (continued)*

Cisco Adaptive Security Appliance (ASA) 5525 with No Payload Encryption Chassis Fan sensor	cevSensorASA5525K7ChassisFanSensor (cevSensor 127)
Central Processing Unit Temperature Sensor for Cisco Adaptive Security Appliance 5525 with No Payload Encryption	cevSensorASA5525K7CPUTemp (cevSensor 104)
Sensor for Chassis Cooling Fan in Adaptive Security Appliance 5525 with No Payload Encryption	cevSensorASA5525K7PSFanSensor (cevSensor 114)
Sensor for Chassis Cooling Fan in Adaptive Security Appliance 5525	cevSensorASA5525PSFanSensor (cevSensor 117)
Cisco Adaptive Security Appliance (ASA) 5545 Chassis Fan sensor	cevSensorASA5545ChassisFanSensor (cevSensor 123)
Chassis Ambient Temperature Sensor for Cisco Adaptive Security Appliance 5545	cevSensorASA5545ChassisTemp (cevSensor 109)
Central Processing Unit Temperature Sensor for Cisco Adaptive Security Appliance 5545	cevSensorASA5545CPUTemp (cevSensor 100)
Cisco Adaptive Security Appliance (ASA) 5545 with No Payload Encryption Chassis Fan sensor	cevSensorASA5545K7ChassisFanSensor (cevSensor 128)
Chassis Ambient Temperature Sensor for Cisco Adaptive Security Appliance 5545 with No Payload Encryption	cevSensorASA5545K7ChassisTemp (cevSensor 90)
Central Processing Unit Temperature Sensor for Cisco Adaptive Security Appliance 5545 with No Payload Encryption	cevSensorASA5545K7CPUTemp (cevSensor 105)
Sensor for Chassis Cooling Fan in Adaptive Security Appliance 5545 with No Payload Encryption	cevSensorASA5545K7PSFanSensor (cevSensor 113)
Presence Sensor for Power Supply input in Adaptive Security Appliance 5545 with No Payload Encryption	cevSensorASA5545K7PSPresence (cevSensor 87)
Temperature Sensor for Power Supply Fan in Adaptive Security Appliance 5545 with No Payload Encryption	cevSensorASA5545K7PSTempSensor (cevSensor 94)
Sensor for Power Supply Fan in Adaptive Security Appliance 5545 with No Payload Encryption	cevSensorASA5545PSFanSensor (cevSensor 89)
Presence Sensor for Power Supply input in Adaptive Security Appliance 5545	cevSensorASA5545PSPresence (cevSensor 130)
Presence Sensor for Power Supply input in Adaptive Security Appliance 5555	cevSensorASA5545PSPresence (cevSensor 131)
Temperature Sensor for Power Supply Fan in Adaptive Security Appliance 5545	cevSensorASA5545PSTempSensor (cevSensor 92)
Cisco Adaptive Security Appliance (ASA) 5555 Chassis Fan sensor	cevSensorASA5555ChassisFanSensor (cevSensor 124)
Chassis Ambient Temperature Sensor for Cisco Adaptive Security Appliance 5555	cevSensorASA5555ChassisTemp (cevSensor 110)
Central Processing Unit Temperature Sensor for Cisco Adaptive Security Appliance 5555	cevSensorASA5555CPUTemp (cevSensor 101)

Table 79-3 *SNMP Physical Vendor Type Values (continued)*

Cisco Adaptive Security Appliance (ASA) 5555 with No Payload Encryption Chassis Fan sensor	cevSensorASA5555K7ChassisFanSensor (cevSensor 129)
Chassis Ambient Temperature Sensor for Cisco Adaptive Security Appliance 5555 with No Payload Encryption	cevSensorASA5555K7ChassisTemp (cevSensor 111)
Central Processing Unit Temperature Sensor for Cisco Adaptive Security Appliance 5555 with No Payload Encryption	cevSensorASA5555K7CPUTemp (cevSensor 106)
Sensor for Chassis Cooling Fan in Adaptive Security Appliance 5555 with No Payload Encryption	cevSensorASA5555K7PSFanSensor (cevSensor 112)
Presence Sensor for Power Supply input in Adaptive Security Appliance 5555 with No Payload Encryption	cevSensorASA5555K7PSPresence (cevSensor 88)
Temperature Sensor for Power Supply Fan in Adaptive Security Appliance 5555 with No Payload Encryption	cevSensorASA5555K7PSTempSensor (cevSensor 95)
Sensor for Power Supply Fan in Adaptive Security Appliance 5555	cevSensorASA5555PSFanSensor (cevSensor 91)
Temperature Sensor for Power Supply Fan in Adaptive Security Appliance 5555	cevSensorASA5555PSTempSensor (cevSensor 93)
Sensor type for ASA 5580	cevSensorASA5580FanSensor (cevSensor 76)
Sensor for power supply input for ASA 5580	cevSensorASA5580PSInput (cevSensor 74)
Sensor for power supply fan for ASA 5585-X	cevSensorASA5585PSFanSensor (cevSensor 86)
Sensor for power supply input for ASA 5585-X	cevSensorASA5585PSInput (cevSensor 85)
CPU temperature sensor for ASA 5585 SSP-10	cevSensorASA5585SSp10CPUTemp (cevSensor 77)
CPU temperature sensor for ASA 5585 SSP-10 No Payload Encryption	cevSensorASA5585SSp10K7CPUTemp (cevSensor 78)
CPU temperature sensor for ASA 5585 SSP-20	cevSensorASA5585SSp20CPUTemp (cevSensor 79)
CPU temperature sensor for ASA 5585 SSP-20 No Payload Encryption	cevSensorASA5585SSp20K7CPUTemp (cevSensor 80)
CPU temperature sensor for ASA 5585 SSP-40	cevSensorASA5585SSp40CPUTemp (cevSensor 81)
CPU temperature sensor for ASA 5585 SSP-40 No Payload Encryption	cevSensorASA5585SSp40K7CPUTemp (cevSensor 82)
CPU temperature sensor for ASA 5585 SSP-60	cevSensorASA5585SSp60CPUTemp (cevSensor 83)
CPU temperature sensor for ASA 5585 SSP-60 No Payload Encryption	cevSensorASA5585SSp60K7CPUTemp (cevSensor 84)

Supported Tables in MIBs

Table 79-4 lists the supported tables and objects for the specified MIBs.

Table 79-4 Supported Tables and Objects in MIBs

MIB Name	Supported Tables and Objects
CISCO-ENHANCED-MEMPOOL-MIB	cempMemPoolTable, cempMemPoolIndex, cempMemPoolType, cempMemPoolName, cempMemPoolAlternate, cempMemPoolValid, cempMemPoolUsed, cempMemPoolFree, cempMemPoolUsedOvrflw, cempMemPoolHCUsed, cempMemPoolFreeOvrflw, cempMemPoolHCFree
CISCO-ENTITY-SENSOR-EXT-MIB Note Not supported on the ASA Services Module.	ceSensorExtThresholdTable
CISCO-L4L7MODULE-RESOURCE-LIMIT-MIB	ciscoL4L7ResourceLimitTable
DISMAN-EVENT-MIB	mteTriggerTable, mteTriggerThresholdTable, mteObjectsTable, mteEventTable, mteEventNotificationTable
DISMAN-EXPRESSION-MIB Note Not supported on the ASA Services Module.	expExpressionTable, expObjectTable, expValueTable
ENTITY-SENSOR-MIB Note Not supported on the ASA Services Module.	entPhySensorTable
NAT-MIB	natAddrMapTable, natAddrMapIndex, natAddrMapName, natAddrMapGlobalAddrType, natAddrMapGlobalAddrFrom, natAddrMapGlobalAddrTo, natAddrMapGlobalPortFrom, natAddrMapGlobalPortTo, natAddrMapProtocol, natAddrMapAddrUsed, natAddrMapRowStatus, cnatAddrBindNumberOfEntries, cnatAddrBindSessionCount

Supported Traps (Notifications)

Table 79-5 lists the supported traps (notifications) and their associated MIBs.

Table 79-5 Supported Traps (Notifications)

Trap and MIB Name	Varbind List	Description
authenticationFailure (SNMPv2-MIB)	—	For SNMP Version 1 or 2, the community string provided in the SNMP request is incorrect. For SNMP Version 3, a report PDU is generated instead of a trap if the auth or priv passwords or usernames are incorrect. The snmp-server enable traps snmp authentication command is used to enable and disable transmission of these traps.
cefcFRUInserted (CISCO-ENTITY-FRU-CONTROL-MIB)	—	The snmp-server enable traps entity fru-insert command is used to enable this notification.
cefcFRURemoved (CISCO-ENTITY-FRU-CONTROL-MIB)	—	The snmp-server enable traps entity fru-remove command is used to enable this notification.

Table 79-5 Supported Traps (Notifications) (continued)

<p>ceSensorExtThresholdNotification (CISCO-ENTITY-SENSOR-EXT-MIB)</p> <p>Note Not supported on the ASA Services Module.</p>	<p>ceSensorExtThresholdValue, entPhySensorValue, entPhySensorType, entPhysicalName</p>	<p>The snmp-server enable traps entity [power-supply-failure fan-failure cpu-temperature] command is used to enable transmission of the entity threshold notifications. This notification is sent for a power supply failure. The objects sent identify the fan and CPU temperature.</p> <p>The snmp-server enable traps entity fan-failure command is used to enable transmission of the fan failure trap.</p> <p>The snmp-server enable traps entity power-supply-failure command is used to enable transmission of the power supply failure trap.</p> <p>The snmp-server enable traps entity chassis-fan-failure command is used to enable transmission of the chassis fan failure trap.</p> <p>The snmp-server enable traps entity cpu-temperature command is used to enable transmission of the high CPU temperature trap.</p> <p>The snmp-server enable traps entity power-supply-presence command is used to enable transmission of the power supply presence failure trap.</p> <p>The snmp-server enable traps entity power-supply-temperature command is used to enable transmission of the power supply temperature threshold trap.</p> <p>The snmp-server enable traps entity chassis-temperature command is used to enable transmission of the chassis ambient temperature trap.</p>
<p>cipSecTunnelStart (CISCO-IPSEC-FLOW-MONITOR-MIB)</p>	<p>cipSecTunLifeTime, cipSecTunLifeSize</p>	<p>The snmp-server enable traps ipsec start command is used to enable transmission of this trap.</p>
<p>cipSecTunnelStop (CISCO-IPSEC-FLOW-MONITOR-MIB)</p>	<p>cipSecTunActiveTime</p>	<p>The snmp-server enable traps ipsec stop command is used to enable transmission of this trap.</p>
<p>ciscoRasTooManySessions (CISCO-REMOTE-ACCESS-MONITOR-MIB)</p>	<p>crasNumSessions, crasNumUsers, crasMaxSessionsSupportable, crasMaxUsersSupportable, crasThrMaxSessions</p>	<p>The snmp-server enable traps remote-access session-threshold-exceeded command is used to enable transmission of these traps.</p>

Table 79-5 Supported Traps (Notifications) (continued)

clogMessageGenerated (CISCO-SYSLOG-MIB)	clogHistFacility, clogHistSeverity, clogHistMsgName, clogHistMsgText, clogHistTimestamp	Syslog messages are generated. The value of the clogMaxSeverity object is used to decide which syslog messages are sent as traps. The snmp-server enable traps syslog command is used to enable and disable transmission of these traps.
clrResourceLimitReached (CISCO-L4L7MODULE-RESOURCE-LIMIT-MIB)	clrResourceLimitValueType, clrResourceLimitMax, clogOriginIDType, clogOriginID	The snmp-server enable traps connection-limit-reached command is used to enable transmission of the connection-limit-reached notification. The clogOriginID object includes the context name from which the trap originated.
coldStart (SNMPv2-MIB)	—	The SNMP agent has started. The snmp-server enable traps snmp coldstart command is used to enable and disable transmission of these traps.
cpmCPURisingThreshold (CISCO-PROCESS-MIB)	cpmCPURisingThresholdValue, cpmCPUTotalMonIntervalValue, cpmCPUInterruptMonIntervalValue, cpmCPURisingThresholdPeriod, cpmProcessTimeCreated, cpmProcExtUtil5SecRev	The snmp-server enable traps cpu threshold rising command is used to enable transmission of the cpu threshold rising notification. The cpmCPURisingThresholdPeriod object is sent with the other objects.
entConfigChange (ENTITY-MIB)	—	The snmp-server enable traps entity config-change fru-insert fru-remove command is used to enable this notification. Note This notification is only sent in multimode when a security context is created or removed.
linkDown (IF-MIB)	ifIndex, ifAdminStatus, ifOperStatus	The linkdown trap for interfaces. The snmp-server enable traps snmp linkdown command is used to enable and disable transmission of these traps.
linkUp (IF-MIB)	ifIndex, ifAdminStatus, ifOperStatus	The linkup trap for interfaces. The snmp-server enable traps snmp linkup command is used to enable and disable transmission of these traps.

Table 79-5 Supported Traps (Notifications) (continued)

mteTriggerFired (DISMAN-EVENT-MIB)	mteHotTrigger, mteHotTargetName, mteHotContextName, mteHotOID, mteHotValue, cempMemPoolName, cempMemPoolHCUsed	The snmp-server enable traps memory-threshold command is used to enable the memory threshold notification. The mteHotOID is set to cempMemPoolHCUsed. The cempMemPoolName and cempMemPoolHCUsed objects are sent with the other objects.
mteTriggerFired (DISMAN-EVENT-MIB) Note Not supported on the ASA Services Module.	mteHotTrigger, mteHotTargetName, mteHotContextName, mteHotOID, mteHotValue, ifHCInOctets, ifHCOutOctets, ifHighSpeed, entPhysicalName	The snmp-server enable traps interface-threshold command is used to enable the interface threshold notification. The entPhysicalName objects are sent with the other objects.
natPacketDiscard (NAT-MIB)	ifIndex	The snmp-server enable traps nat packet-discard command is used to enable the NAT packet discard notification. This notification is rate limited for 5 minutes and is generated when IP packets are discarded by NAT because mapping space is not available. The ifIndex gives the ID of the mapped interface.
warmStart (SNMPv2-MIB)	—	The snmp-server enable traps snmp warmstart command is used to enable and disable transmission of these traps.

SNMP Version 3

This section describes SNMP Version 3 and includes the following topics:

- [SNMP Version 3 Overview, page 79-15](#)
- [Security Models, page 79-16](#)
- [SNMP Groups, page 79-16](#)
- [SNMP Users, page 79-16](#)
- [SNMP Hosts, page 79-16](#)
- [Implementation Differences Between the ASA, ASA Services Module, and the Cisco IOS Software, page 79-16](#)

SNMP Version 3 Overview

SNMP Version 3 provides security enhancements that are not available in SNMP Version 1 or SNMP Version 2c. SNMP Versions 1 and 2c transmit data between the SNMP server and SNMP agent in clear text. SNMP Version 3 adds authentication and privacy options to secure protocol operations. In addition, this version controls access to the SNMP agent and MIB objects through the User-based Security Model

(USM) and View-based Access Control Model (VACM). The ASA also support the creation of SNMP groups and users, as well as hosts, which is required to enable transport authentication and encryption for secure SNMP communications.

Security Models

For configuration purposes, the authentication and privacy options are grouped together into security models. Security models apply to users and groups, which are divided into the following three types:

- NoAuthPriv—No Authentication and No Privacy, which means that no security is applied to messages.
- AuthNoPriv—Authentication but No Privacy, which means that messages are authenticated.
- AuthPriv—Authentication and Privacy, which means that messages are authenticated and encrypted.

SNMP Groups

An SNMP group is an access control policy to which users can be added. Each SNMP group is configured with a security model, and is associated with an SNMP view. A user within an SNMP group must match the security model of the SNMP group. These parameters specify what type of authentication and privacy a user within an SNMP group uses. Each SNMP group name and security model pair must be unique.

SNMP Users

SNMP users have a specified username, a group to which the user belongs, authentication password, encryption password, and authentication and encryption algorithms to use. The authentication algorithm options are MD5 and SHA. The encryption algorithm options are DES, 3DES, and AES (which is available in 128, 192, and 256 versions). When you create a user, you must associate it with an SNMP group. The user then inherits the security model of the group.

SNMP Hosts

An SNMP host is an IP address to which SNMP notifications and traps are sent. To configure SNMP Version 3 hosts, along with the target IP address, you must configure a username, because traps are only sent to a configured user. SNMP target IP addresses and target parameter names must be unique on the ASA. Each SNMP host can have only one username associated with it. To receive SNMP traps, after you have added the **snmp-server host** command, make sure that you configure the user credentials on the NMS to match the credentials for the ASA.

Implementation Differences Between the ASA, ASA Services Module, and the Cisco IOS Software

The SNMP Version 3 implementation in the ASA and ASASM differs from the SNMP Version 3 implementation in the Cisco IOS software in the following ways:

- The local-engine and remote-engine IDs are not configurable. The local engine ID is generated when the ASA starts or when a context is created.
- No support exists for view-based access control, which results in unrestricted MIB browsing.
- Support is restricted to the following MIBs: USM, VACM, FRAMEWORK, and TARGET.
- You must create users and groups with the correct security model.

- You must remove users, groups, and hosts in the correct sequence.
- Use of the **snmp-server host** command creates an ASA rule to allow incoming SNMP traffic.

Licensing Requirements for SNMP

The following table shows the licensing requirements for this feature:

License Requirement

Base License: Base (DES).

Optional license: Strong (3DES, AES)

Prerequisites for SNMP

SNMP has the following prerequisite:

You must have Cisco Works for Windows or another SNMP MIB-II compliant browser to receive SNMP traps or browse a MIB.

Guidelines and Limitations

This section includes the guidelines and limitations for this feature.

Context Mode Guidelines

Supported in single and multiple context mode.

Firewall Mode Guidelines

Supported in routed and transparent firewall mode.

Failover Guidelines

- Supported in SNMP Version 3.
- The SNMP client in each ASA shares engine data with its peer. Engine data includes the engineID, engineBoots, and engineTime objects of the SNMP-FRAMEWORK-MIB. Engine data is written as a binary file to `flash:/snmp/contextname`.

IPv6 Guidelines

Does not support IPv6.

Additional Guidelines

- Does not support view-based access control, but the VACM MIB is available for browsing to determine default view settings.
- The ENTITY-MIB is not available in the non-admin context. Use the IF-MIB instead to perform queries in the non-admin context.

- Does not support SNMP Version 3 for the AIP SSM or AIP SSC.
- Does not support SNMP debugging.
- Does not support retrieval of ARP information.
- Does not support SNMP SET commands.
- When using NET-SNMP Version 5.4.2.1, only supports the encryption algorithm version of AES128. Does not support the encryption algorithm versions of AES256 or AES192.
- Changes to the existing configuration are rejected if the result places the SNMP feature in an inconsistent state.
- For SNMP Version 3, configuration must occur in the following order: group, user, host.
- Before a group is deleted, you must ensure that all users associated with that group are deleted.
- Before a user is deleted, you must ensure that no hosts are configured that are associated with that username.
- If users have been configured to belong to a particular group with a certain security model, and if the security level of that group is changed, you must do the following in this sequence:
 - Remove the users from that group.
 - Change the group security level.
 - Add users that belong to the new group.
- The creation of custom views to restrict user access to a subset of MIB objects is not supported.
- All requests and traps are available in the default Read/Notify View only.
- The connection-limit-reached trap is generated in the admin context. To generate this trap, you must have at least one snmp-server host configured in the user context in which the connection limit has been reached.
- The value returned for ifNumber will be larger than the number of interfaces that you can query through SNMP, because ifNumber includes hidden internal interfaces that are not viewable.
- You cannot query for the chassis temperature for the ASA 5585 SSP-40 (NPE).

Configuring SNMP

This section describes how to configure SNMP and includes the following topics:

- [Enabling SNMP, page 79-18](#)
- [Configuring SNMP Traps, page 79-20](#)
- [Configuring a CPU Usage Threshold, page 79-21](#)
- [Configuring a Physical Interface Threshold, page 79-21](#)
- [Using SNMP Version 1 or 2c, page 79-22](#)
- [Using SNMP Version 3, page 79-23](#)

Enabling SNMP

The SNMP agent that runs on the ASA performs two functions:

- Replies to SNMP requests from NMSs.

- Sends traps (event notifications) to NMSs.

To enable the SNMP agent and identify an NMS that can connect to the SNMP server, enter the following command:

Command	Purpose
snmp-server enable Example: hostname(config)# snmp-server enable	Ensures that the SNMP server on the ASA is enabled. By default, the SNMP server is enabled.

What to Do Next

See the “Configuring SNMP Traps” section on page 79-20.

Configuring SNMP Traps

To designate which traps that the SNMP agent generates and how they are collected and sent to NMSs, enter the following command:

Command	Purpose
<pre>snmp-server enable traps [all syslog snmp [authentication linkup linkdown coldstart warmstart] entity [config-change fru-insert fru-remove fan-failure cpu-temperature chassis-fan- failure power-supply-failure] chassis-temperature power-supply-presence power-supply-temperature] ikev2 [start stop] ipsec [start stop] remote-access [session-threshold-exceeded] connection-limit-reached cpu threshold rising interface-threshold memory-threshold nat [packet-discard]</pre>	<p>Sends individual traps, sets of traps, or all traps to the NMS. Enables syslog messages to be sent as traps to the NMS. The default configuration has all SNMP standard traps enabled, as shown in the example. To disable these traps, use the no snmp-server enable traps snmp command. If you enter this command and do not specify a trap type, the default is the syslog trap. By default, the syslog trap is enabled. The default SNMP traps continue to be enabled with the syslog trap. You need to configure both the logging history command and the snmp-server enable traps syslog command to generate traps from the syslog MIB. To restore the default enabling of SNMP traps, use the clear configure snmp-server command. All other traps are disabled by default.</p> <p>Keywords available in the admin context only:</p> <ul style="list-style-type: none"> • connection-limit-reached • entity • memory-threshold <p>Traps generated through the admin context only for physically connected interfaces in the system context:</p> <ul style="list-style-type: none"> • interface-threshold <p>All other traps are available in the admin and user contexts in single mode. In multi-mode, the fan-failure trap, the power-supply-failure trap, and the cpu-temperature trap are generated only from the admin context, and not the user contexts (applies only to the ASA 5512-X, 5515-X, 5525-X, 5545-X, and 5555-X).</p> <p>If the CPU usage is greater than the configured threshold value for the configured monitoring period, the cpu threshold rising trap is generated.</p> <p>When the used system context memory reaches 80 percent of the total system memory, the memory-threshold trap is generated from the admin context. For all other user contexts, this trap is generated when the used memory reaches 80 percent of the total system memory in that particular context.</p> <p>Note SNMP does not monitor voltage sensors.</p>
<p>Example:</p> <pre>hostname(config)# snmp-server enable traps snmp authentication linkup linkdown coldstart warmstart</pre>	
<p>Note The interface-threshold trap is not supported on the ASASM.</p>	

What to Do Next

See the [“Configuring a CPU Usage Threshold”](#) section on page 79-21.

Configuring a CPU Usage Threshold

To configure the CPU usage threshold, enter the following command:

Command	Purpose
<pre>snmp cpu threshold rising threshold_value monitoring_period</pre> <p>Example: hostname(config)# snmp cpu threshold rising 75% 30 minutes</p>	<p>Configures the threshold value for a high CPU threshold and the threshold monitoring period. To clear the threshold value and monitoring period of the CPU utilization, use the no form of this command. If the snmp cpu threshold rising command is not configured, the default for the high threshold level is over 70 percent, and the default for the critical threshold level is over 95 percent. The default monitoring period is set to 1 minute.</p> <p>You cannot configure the critical CPU threshold level, which is maintained at a constant 95 percent. Valid threshold values for a high CPU threshold range from 10 to 94 percent. Valid values for the monitoring period range from 1 to 60 minutes.</p>

What to Do Next

See the [“Configuring a Physical Interface Threshold”](#) section on page 79-21.

Configuring a Physical Interface Threshold

To configure the physical interface threshold, enter the following command:

Command	Purpose
<pre>snmp interface threshold threshold_value</pre> <p>Example: hostname(config)# snmp interface threshold 75%</p> <p>Note Not supported on the ASA Services Module.</p>	<p>Configures the threshold value for an SNMP physical interface. To clear the threshold value for an SNMP physical interface, use the no form of this command. The threshold value is defined as a percentage of interface bandwidth utilization. Valid threshold values range from 30 to 99 percent. The default value is 70 percent.</p> <p>The snmp interface threshold command is available only in the admin context.</p> <p>Note Physical interface usage is monitored in single mode and multimode, and traps for physical interfaces in the system context are sent through the admin context. Only physical interfaces are used to compute threshold usage.</p>

What to Do Next

Choose one of the following:

- See the [“Using SNMP Version 1 or 2c”](#) section on page 79-22.
- See the [“Using SNMP Version 3”](#) section on page 79-23.

Using SNMP Version 1 or 2c

To configure parameters for SNMP Version 1 or 2c, perform the following steps:

Detailed Steps

	Command	Purpose
Step 1	<pre>snmp-server host interface) hostname ip_address} [trap poll] [community community-string] [version {1 2c username}] [udp-port port]</pre> <p>Example:</p> <pre>hostname(config)# snmp-server host mgmt 10.7.14.90 version 2</pre> <pre>hostname(config)# snmp-server host corp 172.18.154.159 community public</pre>	<p>Specifies the recipient of an SNMP notification, indicates the interface from which traps are sent, and identifies the name and IP address of the NMS or SNMP manager that can connect to the ASA. The trap keyword limits the NMS to receiving traps only. The poll keyword limits the NMS to sending requests (polling) only. By default, SNMP traps are enabled. By default, the UDP port is 162. The community string is a shared secret key between the ASA and the NMS. The key is a case-sensitive value up to 32 alphanumeric characters. Spaces are not permitted. The default community-string is public. The ASA uses this key to determine whether the incoming SNMP request is valid. For example, you could designate a site with a community string and then configure the ASA and the management station with the same string. The ASA uses the specified string and does not respond to requests with an invalid community string. For more information about SNMP hosts, see the “SNMP Hosts” section on page 79-16.</p> <p>Note To receive traps, after you have added the snmp-server host command, make sure that you configure the user on the NMS with the same credentials as the credentials configured on the ASA.</p>
Step 2	<pre>snmp-server community community-string</pre> <p>Example:</p> <pre>hostname(config)# snmp-server community onceuponatime</pre>	<p>Sets the community string, which is for use <i>only</i> with SNMP Version 1 or 2c.</p>
Step 3	<pre>snmp-server [contact location] text</pre> <p>Example:</p> <pre>hostname(config)# snmp-server location building 42</pre> <pre>hostname(config)# snmp-server contact EmployeeA</pre>	<p>Sets the SNMP server location or contact information.</p>

What to Do Next

See the “Monitoring SNMP” section on page 79-26.

Using SNMP Version 3

To configure parameters for SNMP Version 3, perform the following steps:

Detailed Steps

	Command	Purpose
Step 1	<pre>snmp-server group group-name v3 [auth noauth priv]</pre> <p>Example:</p> <pre>hostname(config)# snmp-server group testgroup1 v3 auth</pre>	<p>Specifies a new SNMP group, which is for use <i>only</i> with SNMP Version 3. When a community string is configured, two additional groups with the name that matches the community string are autogenerated: one for the Version 1 security model and one for the Version 2 security model. For more information about security models, see the “Security Models” section on page 79-16. The auth keyword enables packet authentication. The noauth keyword indicates no packet authentication or encryption is being used. The priv keyword enables packet encryption and authentication. No default values exist for the auth or priv keywords.</p>
Step 2	<pre>snmp-server user username group-name {v3 [encrypted]} [auth {md5 sha}] auth-password [priv {des 3des aes} [128 192 256] priv-password</pre> <p>Example:</p> <pre>hostname(config)# snmp-server user testuser1 testgroup1 v3 auth md5 testpassword aes 128 mypassword</pre> <pre>hostname(config)# snmp-server user testuser1 public v3 encrypted auth md5 00:11:22:33:44:55:66:77:88:99:AA: BB:CC:DD:EE:FF</pre>	<p>Configures a new user for an SNMP group, which is for use only with SNMP Version 3. The <i>username</i> argument is the name of the user on the host that belongs to the SNMP agent. The <i>group-name</i> argument is the name of the group to which the user belongs. The v3 keyword specifies that the SNMP Version 3 security model should be used and enables the use of the encrypted, priv, and the auth keywords. The encrypted keyword specifies the password in encrypted format. Encrypted passwords must be in hexadecimal format. The auth keyword specifies which authentication level (md5 or sha) should be used. The priv keyword specifies the encryption level. No default values for the auth or priv keywords, or default passwords exist. For the encryption algorithm, you can specify either the des, 3des, or aes keyword. You can also specify which version of the AES encryption algorithm to use: 128, 192, or 256. The <i>auth-password</i> argument specifies the authentication user password. The <i>priv-password</i> argument specifies the encryption user password.</p> <p>Note If you forget a password, you cannot recover it and you must reconfigure the user. You can specify a plain-text password or a localized digest. The localized digest must match the authentication algorithm selected for the user, which can be either MD5 or SHA. When the user configuration is displayed on the console or is written to a file (for example, the startup-configuration file), the localized authentication and privacy digests are always displayed instead of a plain-text password (see the second example). The minimum length for a password is 1 alphanumeric character; however, we recommend that you use at least 8 alphanumeric characters for security.</p>

Command	Purpose
<p>Step 3</p> <pre>snmp-server host interface {hostname ip_address} [trap poll] [community community-string] [version {1 2c 3 username}] [udp-port port]</pre> <p>Example:</p> <pre>hostname(config)# snmp-server host mgmt 10.7.14.90 version 3 testuser1</pre> <pre>hostname(config)# snmp-server host mgmt 10.7.26.5 version 3 testuser2</pre>	<p>Specifies the recipient of an SNMP notification. Indicates the interface from which traps are sent. Identifies the name and IP address of the NMS or SNMP manager that can connect to the ASA. The trap keyword limits the NMS to receiving traps only. The poll keyword limits the NMS to sending requests (polling) only. By default, SNMP traps are enabled. By default, the UDP port is 162. The community string is a shared secret key between the ASA and the NMS. The key is a case-sensitive value up to 32 alphanumeric characters. Spaces are not permitted. The default community-string is public. The ASA uses this key to determine whether the incoming SNMP request is valid. For example, you could designate a site with a community string and then configure the ASA and the NMS with the same string. The ASA uses the specified string and does not respond to requests with an invalid community string. For more information about SNMP hosts, see the “SNMP Hosts” section on page 79-16.</p> <p>Note When SNMP Version 3 hosts are configured on the ASA, a user must be associated with that host. To receive traps, after you have added the snmp-server host command, make sure that you configure the user on the NMS with the same credentials as the credentials configured on the ASA.</p>
<p>Step 4</p> <pre>snmp-server [contact location] text</pre> <p>Example:</p> <pre>hostname(config)# snmp-server location building 42</pre> <pre>hostname(config)# snmp-server contact EmployeeA</pre>	<p>Sets the SNMP server location or contact information.</p>

What to Do Next

See the “Monitoring SNMP” section on page 79-26.

Troubleshooting Tips

To ensure that the SNMP process that receives incoming packets from the NMS is running, enter the following command:

```
hostname(config)# show process | grep snmp
```

To capture syslog messages from SNMP and have them appear on the ASA or ASASM console, enter the following commands:

```
hostname(config)# logging list snmp message 212001-212015
hostname(config)# logging console snmp
```

To make sure that the SNMP process is sending and receiving packets, enter the following commands:

```
hostname(config)# clear snmp-server statistics
hostname(config)# show snmp-server statistics
```

The output is based on the SNMP group of the SNMPv2-MIB.

To make sure that SNMP packets are going through the ASA or ASASM and to the SNMP process, enter the following commands:

```
hostname(config)# clear asp drop
hostname(config)# show asp drop
```

If the NMS cannot request objects successfully or is not handing incoming traps from the ASA or ASASM correctly, use a packet capture to isolate the problem, by entering the following commands:

```
hostname (config)# access-list snmp permit udp any eq snmptrap any
hostname (config)# access-list snmp permit udp any any eq snmp
hostname (config)# capture snmp type raw-data access-list snmp interface mgmt
hostname (config)# copy /pcap capture:snmp tftp://192.0.2.5/exampledir/snmp.pcap
```

If the ASA or ASASM is not performing as expected, obtain information about network topology and traffic by doing the following:

- For the NMS configuration, obtain the following information:
 - Number of timeouts
 - Retry count
 - Engine ID caching
 - Username and password used
- Run the following commands:
 - **show block**
 - **show interface**
 - **show process**
 - **show cpu**

If a fatal error occurs, to help in reproducing the error, send a traceback file and the output of the **show tech-support** command to Cisco TAC.

If SNMP traffic is not being allowed through the ASA or ASASM interfaces, you might also need to permit ICMP traffic from the remote SNMP server using the **icmp permit** command.

For the ASA 5580, differences may appear in the physical interface statistics output and the logical interface statistics output between the **show interface** command and the **show traffic** command.

Interface Types and Examples

The interface types that produce SNMP traffic statistics include the following:

- Logical—Statistics collected by the software driver, which are a subset of physical statistics.
- Physical—Statistics collected by the hardware driver. Each physical named interface has a set of logical and physical statistics associated with it. Each physical interface may have more than one VLAN interface associated with it. VLAN interfaces only have logical statistics.



Note For a physical interface that has multiple VLAN interfaces associated with it, be aware that SNMP counters for ifInOctets and ifOutOctets OIDs match the aggregate traffic counters for that physical interface.

- VLAN-only—SNMP uses logical statistics for ifInOctets and ifOutOctets.

The examples in [Table 79-6](#) show the differences in SNMP traffic statistics. Example 1 shows the difference in physical and logical output statistics for the **show interface** command and the **show traffic** command. Example 2 shows output statistics for a VLAN-only interface for the **show interface** command and the **show traffic** command. The example shows that the statistics are close to the output that appears for the **show traffic** command.

Table 79-6 *SNMP Traffic Statistics for Physical and VLAN Interfaces*

Example 1	Example 2
<pre> hostname# show interface GigabitEthernet3/2 interface GigabitEthernet3/2 description fullt-mgmt nameif mgmt security-level 10 ip address 10.7.14.201 255.255.255.0 management-only hostname# show traffic (Condensed output) Physical Statistics GigabitEthernet3/2: received (in 121.760 secs) 36 packets 3428 bytes 0 pkts/sec 28 bytes/sec Logical Statistics mgmt: received (in 117.780 secs) 36 packets 2780 bytes 0 pkts/sec 23 bytes/sec The following examples show the SNMP output statistics for the management interface and the physical interface. The ifInOctets value is close to the physical statistics output that appears in the show traffic command output but not to the logical statistics output. ifIndex of the mgmt interface: IF-MIB::ifDescr.6 = Adaptive Security Appliance 'mgmt' interface ifInOctets that corresponds to the physical interface statistics: IF-MIB::ifInOctets.6 = Counter32:3246 </pre>	<pre> hostname# show interface GigabitEthernet0/0.100 interface GigabitEthernet0/0.100 vlan 100 nameif inside security-level 100 ip address 10.7.1.101 255.255.255.0 standby 10.7.1.102 hostname# show traffic inside received (in 9921.450 secs) 1977 packets 126528 bytes 0 pkts/sec 12 bytes/sec transmitted (in 9921.450 secs) 1978 packets 126556 bytes 0 pkts/sec 12 bytes/sec ifIndex of VLAN inside: IF-MIB::ifDescr.9 = Adaptive Security Appliance 'inside' interface IF-MIB::ifInOctets.9 = Counter32: 126318 </pre>

Monitoring SNMP

NMSs are the PCs or workstations that you set up to monitor SNMP events and manage devices, such as the ASA. You can monitor the health of a device from an NMS by polling required information from the SNMP agent that has been set up on the device. Predefined events from the SNMP agent to the NMS generate syslog messages. This section includes the following topics:

- [SNMP Syslog Messaging, page 79-27](#)
- [SNMP Monitoring, page 79-27](#)

SNMP Syslog Messaging

SNMP generates detailed syslog messages that are numbered 212 nnn . Syslog messages indicate the status of SNMP requests, SNMP traps, SNMP channels, and SNMP responses from the ASA to a specified host on a specified interface.

For detailed information about syslog messages, see syslog message guide.



Note

SNMP polling fails if SNMP syslog messages exceed a high rate (approximately 4000 per second).

SNMP Monitoring

To monitor SNMP, enter one of the following commands:

Command	Purpose
<code>show running-config [default] snmp-server</code>	Shows all SNMP server configuration information.
<code>show running-config snmp-server group</code>	Shows SNMP group configuration settings.
<code>show running-config snmp-server host</code>	Shows configuration settings used by SNMP to control messages and notifications sent to remote hosts.
<code>show running-config snmp-server user</code>	Shows SNMP user-based configuration settings.
<code>show snmp-server engineid</code>	Shows the ID of the SNMP engine configured.
<code>show snmp-server group</code>	Shows the names of configured SNMP groups. Note If the community string has already been configured, two extra groups appear by default in the output. This behavior is normal.
<code>show snmp-server statistics</code>	Shows the configured characteristics of the SNMP server. To reset all SNMP counters to zero, use the <code>clear snmp-server statistics</code> command.
<code>show snmp-server user</code>	Shows the configured characteristics of users.

Examples

The following example shows how to display SNMP server statistics:

```
hostname(config)# show snmp-server statistics
0 SNMP packets input
  0 Bad SNMP version errors
  0 Unknown community name
  0 Illegal operation for community name supplied
  0 Encoding errors
  0 Number of requested variables
  0 Number of altered variables
  0 Get-request PDUs
  0 Get-next PDUs
```

```

0 Get-bulk PDUs
0 Set-request PDUs (Not supported)
0 SNMP packets output
0 Too big errors (Maximum packet size 512)
0 No such name errors
0 Bad values errors
0 General errors
0 Response PDUs
0 Trap PDUs

```

The following example shows how to display the SNMP server running configuration:

```

hostname(config)# show running-config snmp-server
no snmp-server location
no snmp-server contact
snmp-server enable traps snmp authentication linkup linkdown coldstart

```

Configuration Examples for SNMP

This section includes the following topics:

- [Configuration Example for SNMP Versions 1 and 2c, page 79-28](#)
- [Configuration Example for SNMP Version 3, page 79-28](#)

Configuration Example for SNMP Versions 1 and 2c

The following example shows how the ASA can receive SNMP requests from host 192.0.2.5 on the inside interface but does not send any SNMP syslog requests to any host:

```

hostname(config)# snmp-server host 192.0.2.5
hostname(config)# snmp-server location building 42
hostname(config)# snmp-server contact EmployeeA
hostname(config)# snmp-server community ohwhatakeyisthee

```

Configuration Example for SNMP Version 3

The following example shows how the ASA can receive SNMP requests using the SNMP Version 3 security model, which requires that the configuration follow this specific order: group, followed by user, followed by host:

```

hostname(config)# snmp-server group v3 vpn-group priv
hostname(config)# snmp-server user admin vpn group v3 auth sha letmein priv 3des cisco123
hostname(config)# snmp-server host mgmt 10.0.0.1 version 3 priv admin

```

Where to Go Next

To configure the syslog server, see [Chapter 77, “Configuring Logging.”](#)

Additional References

For additional information related to implementing SNMP, see the following sections:

- [RFCs for SNMP Version 3, page 79-29](#)
- [MIBs, page 79-29](#)
- [Application Services and Third-Party Tools, page 79-31](#)

RFCs for SNMP Version 3

RFC	Title
3410	<i>Introduction and Applicability Statements for Internet Standard Management Framework</i>
3411	<i>An Architecture for Describing SNMP Management Frameworks</i>
3412	<i>Message Processing and Dispatching for the Simple Network Management Protocol (SNMP)</i>
3413	<i>Simple Network Management Protocol (SNMP) Applications</i>
3414	<i>User-based Security Model (USM) for Version 3 of the Simple Network Management Protocol (SNMP)</i>
3826	<i>The Advanced Encryption Standard (AES) Cipher Algorithm in the SNMP User-based Security Model</i>

MIBs

For a list of supported MIBs and traps for the ASA by release, see the following URL:

<http://www.cisco.com/public/sw-center/netmgmt/cmtk/mibs.shtml>

Not all OIDs in MIBs are supported. To obtain a list of the supported SNMP MIBs and OIDs for a specific ASA, enter the following command:

```
hostname(config)# show snmp-server oidlist
```



Note

Although the **oidlist** keyword does not appear in the options list for the **show snmp-server** command help, it is available. However, this command is for Cisco TAC use only. Contact the Cisco TAC before using this command.

The following is sample output from the **show snmp-server oidlist** command:

```
hostname(config)# show snmp-server oidlist
[0] 1.3.6.1.2.1.1.1. sysDescr
[1] 1.3.6.1.2.1.1.2. sysObjectID
[2] 1.3.6.1.2.1.1.3. sysUpTime
[3] 1.3.6.1.2.1.1.4. sysContact
[4] 1.3.6.1.2.1.1.5. sysName
[5] 1.3.6.1.2.1.1.6. sysLocation
```

[6]	1.3.6.1.2.1.1.7.	sysServices
[7]	1.3.6.1.2.1.2.1.	ifNumber
[8]	1.3.6.1.2.1.2.2.1.1.	ifIndex
[9]	1.3.6.1.2.1.2.2.1.2.	ifDescr
[10]	1.3.6.1.2.1.2.2.1.3.	ifType
[11]	1.3.6.1.2.1.2.2.1.4.	ifMtu
[12]	1.3.6.1.2.1.2.2.1.5.	ifSpeed
[13]	1.3.6.1.2.1.2.2.1.6.	ifPhysAddress
[14]	1.3.6.1.2.1.2.2.1.7.	ifAdminStatus
[15]	1.3.6.1.2.1.2.2.1.8.	ifOperStatus
[16]	1.3.6.1.2.1.2.2.1.9.	ifLastChange
[17]	1.3.6.1.2.1.2.2.1.10.	ifInOctets
[18]	1.3.6.1.2.1.2.2.1.11.	ifInUcastPkts
[19]	1.3.6.1.2.1.2.2.1.12.	ifInNUcastPkts
[20]	1.3.6.1.2.1.2.2.1.13.	ifInDiscards
[21]	1.3.6.1.2.1.2.2.1.14.	ifInErrors
[22]	1.3.6.1.2.1.2.2.1.16.	ifOutOctets
[23]	1.3.6.1.2.1.2.2.1.17.	ifOutUcastPkts
[24]	1.3.6.1.2.1.2.2.1.18.	ifOutNUcastPkts
[25]	1.3.6.1.2.1.2.2.1.19.	ifOutDiscards
[26]	1.3.6.1.2.1.2.2.1.20.	ifOutErrors
[27]	1.3.6.1.2.1.2.2.1.21.	ifOutQLen
[28]	1.3.6.1.2.1.2.2.1.22.	ifSpecific
[29]	1.3.6.1.2.1.4.1.	ipForwarding
[30]	1.3.6.1.2.1.4.20.1.1.	ipAdEntAddr
[31]	1.3.6.1.2.1.4.20.1.2.	ipAdEntIfIndex
[32]	1.3.6.1.2.1.4.20.1.3.	ipAdEntNetMask
[33]	1.3.6.1.2.1.4.20.1.4.	ipAdEntBcastAddr
[34]	1.3.6.1.2.1.4.20.1.5.	ipAdEntReasmMaxSize
[35]	1.3.6.1.2.1.11.1.	snmpInPkts
[36]	1.3.6.1.2.1.11.2.	snmpOutPkts
[37]	1.3.6.1.2.1.11.3.	snmpInBadVersions
[38]	1.3.6.1.2.1.11.4.	snmpInBadCommunityNames
[39]	1.3.6.1.2.1.11.5.	snmpInBadCommunityUses
[40]	1.3.6.1.2.1.11.6.	snmpInASNParseErrs
[41]	1.3.6.1.2.1.11.8.	snmpInTooBig
[42]	1.3.6.1.2.1.11.9.	snmpInNoSuchNames
[43]	1.3.6.1.2.1.11.10.	snmpInBadValues
[44]	1.3.6.1.2.1.11.11.	snmpInReadOnly
[45]	1.3.6.1.2.1.11.12.	snmpInGenErrs
[46]	1.3.6.1.2.1.11.13.	snmpInTotalReqVars
[47]	1.3.6.1.2.1.11.14.	snmpInTotalSetVars
[48]	1.3.6.1.2.1.11.15.	snmpInGetRequests
[49]	1.3.6.1.2.1.11.16.	snmpInGetNexts
[50]	1.3.6.1.2.1.11.17.	snmpInSetRequests
[51]	1.3.6.1.2.1.11.18.	snmpInGetResponses
[52]	1.3.6.1.2.1.11.19.	snmpInTraps
[53]	1.3.6.1.2.1.11.20.	snmpOutTooBig
[54]	1.3.6.1.2.1.11.21.	snmpOutNoSuchNames
[55]	1.3.6.1.2.1.11.22.	snmpOutBadValues
[56]	1.3.6.1.2.1.11.24.	snmpOutGenErrs
[57]	1.3.6.1.2.1.11.25.	snmpOutGetRequests
[58]	1.3.6.1.2.1.11.26.	snmpOutGetNexts
[59]	1.3.6.1.2.1.11.27.	snmpOutSetRequests
[60]	1.3.6.1.2.1.11.28.	snmpOutGetResponses
[61]	1.3.6.1.2.1.11.29.	snmpOutTraps
[62]	1.3.6.1.2.1.11.30.	snmpEnableAuthenTraps
[63]	1.3.6.1.2.1.11.31.	snmpSilentDrops
[64]	1.3.6.1.2.1.11.32.	snmpProxyDrops
[65]	1.3.6.1.2.1.31.1.1.1.1.	ifName
[66]	1.3.6.1.2.1.31.1.1.1.2.	ifInMulticastPkts
[67]	1.3.6.1.2.1.31.1.1.1.3.	ifInBroadcastPkts
[68]	1.3.6.1.2.1.31.1.1.1.4.	ifOutMulticastPkts
[69]	1.3.6.1.2.1.31.1.1.1.5.	ifOutBroadcastPkts

```
[70]      1.3.6.1.2.1.31.1.1.1.6. ifHCInOctets
--More--
```

Application Services and Third-Party Tools

For information about SNMP support, see the following URL:

http://www.cisco.com/en/US/tech/tk648/tk362/tk605/tsd_technology_support_sub-protocol_home.html

For information about using third-party tools to walk SNMP Version 3 MIBs, see the following URL:

http://www.cisco.com/en/US/docs/security/asa/asa83/snmp/snmpv3_tools.html

Feature History for SNMP

Table 79-7 lists each feature change and the platform release in which it was implemented.

Table 79-7 Feature History for SNMP

Feature Name	Platform Releases	Feature Information
SNMP Versions 1 and 2c	7.0(1)	Provides ASA network monitoring and event information by transmitting data between the SNMP server and SNMP agent through the clear text community string.
SNMP Version 3	8.2(1)	Provides 3DES or AES encryption and support for SNMP Version 3, the most secure form of the supported security models. This version allows you to configure users, groups, and hosts, as well as authentication characteristics by using the USM. In addition, this version allows access control to the agent and MIB objects and includes additional MIB support. We introduced or modified the following commands: show snmp-server engineid , show snmp-server group , show snmp-server user , snmp-server group , snmp-server user , snmp-server host .
Password encryption	8.3(1)	Supports password encryption. We modified the following commands: snmp-server community , snmp-server host .

Table 79-7 Feature History for SNMP (continued)

Feature Name	Platform Releases	Feature Information
SNMP traps and MIBs	8.4(1)	<p>Supports the following additional keywords: connection-limit-reached, cpu threshold rising, entity cpu-temperature, entity fan-failure, entity power-supply, ikev2 stop start, interface-threshold, memory-threshold, nat packet-discard, warmstart.</p> <p>The entPhysicalTable reports entries for sensors, fans, power supplies, and related components.</p> <p>Supports the following additional MIBs: CISCO-ENTITY-SENSOR-EXT-MIB, CISCO-ENTITY-FRU-CONTROL-MIB, CISCO-PROCESS-MIB, CISCO-ENHANCED-MEMPOOL-MIB, CISCO-L4L7MODULE-RESOURCE-LIMIT-MIB, DISMAN-EVENT-MIB, DISMAN-EXPRESSION-MIB, ENTITY-SENSOR-MIB, NAT-MIB.</p> <p>Supports the following additional traps: ceSensorExtThresholdNotification, clrResourceLimitReached, cpmCPURisingThreshold, mteTriggerFired, natPacketDiscard, warmStart.</p> <p>We introduced or modified the following commands: snmp cpu threshold rising, snmp interface threshold, snmp-server enable traps.</p>
IF-MIB ifAlias OID support	8.2(5)/8.4(2)	The ASA now supports the ifAlias OID. When you browse the IF-MIB, the ifAlias OID will be set to the value that has been set for the interface description.
SNMP traps	8.6(1)	<p>Supports the following additional keywords for the ASA 5512-X, 5515-X, 5525-X, 5545-X, and 5555-X: entity power-supply-presence, entity power-supply-failure, entity chassis-temperature, entity chassis-fan-failure, entity power-supply-temperature.</p> <p>We modified the following command: snmp-server enable traps.</p>
NAT MIB	8.4(5)	Added the cnatAddrBindNumberOfEntries and cnatAddrBindSessionCount OIDs to support the xlate_count and max_xlate_count entries, which are the equivalent to allowing polling using the show xlate count command.



CHAPTER 80

Configuring Anonymous Reporting and Smart Call Home

The Smart Call Home feature provides personalized, e-mail-based and web-based notification to customers about critical events involving their individual systems, often before customers know that a critical event has occurred.

The Anonymous Reporting feature is a subfeature of the Smart Call Home feature and allows Cisco to anonymously receive minimal error and health information from the device.



Note

You might have received a popup dialog that invites you to do the following:

- Enable Anonymous Reporting to help improve the ASA platform.
- Register for Smart Home Notifications to receive personalized, proactive assistance from Cisco.

For information about the dialog, see the [“Anonymous Reporting and Smart Call Home Prompt”](#) section on page 80-3.

This chapter describes how to use and configure Anonymous Reporting and Smart Call Home, and it includes the following sections:

- [Information About Anonymous Reporting and Smart Call Home](#), page 80-1
- [Licensing Requirements for Anonymous Reporting and Smart Call Home](#), page 80-4
- [Prerequisites for Smart Call Home and Anonymous Reporting](#), page 80-5
- [Guidelines and Limitations](#), page 80-5
- [Configuring Anonymous Reporting and Smart Call Home](#), page 80-6
- [Monitoring Smart Call Home](#), page 80-19
- [Configuration Example for Smart Call Home](#), page 80-19
- [Feature History for Anonymous Reporting and Smart Call Home](#), page 80-20

Information About Anonymous Reporting and Smart Call Home

This section includes the following topics:

- [Information About Anonymous Reporting](#), page 80-2
- [Information About Smart Call Home](#), page 80-4

Information About Anonymous Reporting

Customers can help to improve the ASA platform by enabling Anonymous Reporting, which allows Cisco to securely receive minimal error and health information from the device. If you enable the feature, your customer identity will remain anonymous, and no identifying information will be sent.

Enabling Anonymous Reporting creates a trust point and installs a certificate. A CA certificate is required for your ASA to validate the server certificate present on the Smart Call Home web server and to form the HTTPS session so that your ASA can send messages securely. Cisco imports a certificate that is predefined in the software. If you decide to enable Anonymous Reporting, a certificate is installed on the ASA with a hardcoded trust point name: `_SmartCallHome_ServerCA`. When you enable Anonymous Reporting, this trust point is created, the appropriate certificate is installed, and you receive a message about this action. The certificate then shows up in your configuration.

If the appropriate certificate already exists in your configuration when you enable Anonymous Reporting, no trust point is created, and no certificate is installed.



Note

When you enable Anonymous Reporting you acknowledge your consent to transfer the specified data to Cisco or to vendors operating on Cisco's behalf (including countries outside of the U.S.). Cisco maintains the privacy of all customers. For information about Cisco's treatment of personal information, see the Cisco Privacy Statement at the following URL:
<http://www.cisco.com/web/siteassets/legal/privacy.html>

What is Sent to Cisco?

Messages are sent to Cisco once a month and whenever the ASA reloads. These messages are categorized by alert groups, which are predefined subsets of Smart Call Home alerts that are supported on the ASA: configuration alerts, inventory alerts, and crash information alerts.

Inventory alerts consist of output from the following commands:

- **show version**—Displays the ASA software version, hardware configuration, license key, and related uptime data for the device.
- **show environment**—Shows system environment information for ASA system components, such as hardware operational status for the chassis, drivers, fans, and power supplies, as well as temperature status, voltage, and CPU usage.
- **show inventory**—Retrieves and displays inventory information about each Cisco product that is installed in the networking device. Each product is identified by unique device information, called the UDI, which is a combination of three separate data elements: the product identifier (PID), the version identifier (VID), and the serial number (SN).
- **show failover state**—Displays the failover state of both units in a failover pair. The information displayed includes the primary or secondary status of the unit, the Active/Standby status of the unit, and the last reported reason for failover.
- **show module**—Shows information about any modules installed on the ASAs, for example, information about an AIP SSC installed on the ASA 5505 or information about an SSP installed on the ASA 5585-X, and information about an IPS SSP installed on an ASA 5585-X.

Configuration alerts consist of output from the following commands:

- **show context**—Shows allocated interfaces and the configuration file URL, the number of contexts configured, or, if you enable AR in the system execution space, from a list of all contexts.

- **show call-home registered-module status**—Displays the registered module status. If you use system configuration mode, the command displays system module status based on the entire device, not per context.

Upon a system crash, modified information from the following command is sent:

- **show crashinfo** (truncated)—Upon an unexpected software reload, the device sends a modified crash information file with only the traceback section of the file included, so only function calls, register values, and stack dumps are reported to Cisco.

For more information about ASA commands, see the Cisco ASA 5500 Series Command Reference document.

DNS Requirement

A DNS server must be configured properly for your ASA to reach the Cisco Smart Call Home server and send messages to Cisco. Because it is possible that your ASA resides in a private network and does not have access to the public network, Cisco verifies your DNS configuration and then configures it for you, if necessary, by doing the following:

1. Performing a DNS lookup for all DNS servers configured.
2. Getting the DNS server from the DHCP server by sending DHCPINFORM messages on the highest security-level interface.
3. Using the Cisco DNS servers for lookup.
4. Randomly using a static IP addresses for tools.cisco.com.

The above tasks are performed without changing the current configuration. (For example, the DNS server learned from DHCP will not be added to the configuration.)

If there is no DNS server configured, and your ASA cannot reach the Cisco Smart Call Home Server, Cisco generates a syslog message with the “warning” severity for every Smart Call Home message sent to remind you to configure DNS properly.

For information about system log messages, see the *Cisco ASA 5500 Series System Log Messages*.

Anonymous Reporting and Smart Call Home Prompt

When you enter configuration mode you receive a prompt that invites you to enable the Anonymous Reporting and Smart Call Home features if the following criteria are met:

At the prompt you may choose [Y]es, [N]o, [A]sk later. If you choose [A]sk later, then you are reminded again in seven days or when the ASA reloads. If you continue to choose [A]sk later, the ASA prompts two more times at seven-day intervals before it assumes a [N]o response and does not ask again.

At the ASDM prompt you can select from the following options:

Anonymous—Enables Anonymous Reporting.

Registered (enter an e-mail address)—Enables Smart Call Home and registers your ASA with Cisco TAC.

Do not enable Smart Call Home—Does not enable Smart Call Home and does not ask again.

Remind Me Later—Defers the decision. You are reminded again in seven days or whenever the ASA reloads. The ASA prompts two more times at seven-day intervals before it assumes a “Do not enable Smart Call Home response” and does not ask again.

If you did not receive the prompt, you may enable Anonymous Reporting or Smart Call Home by performing the steps in the [“Configuring Anonymous Reporting” section on page 80-6](#) or the [“Configuring Smart Call Home” section on page 80-7](#).

Information About Smart Call Home

When fully configured, Smart Call Home detects issues at your site and reports them back to Cisco or through other user-defined channels (such as e-mail or directly to you), often before you know that these issues exist. Depending upon the seriousness of these problems, Cisco responds to customers regarding their system configuration issues, product end-of-life announcements, security advisory issues, and so on.

In this manner, Smart Call Home offers proactive diagnostics and real-time alerts on the ASA and provides high network availability and increased operational efficiency through proactive and quick issue resolution by doing the following:

- Identifying issues quickly with continuous monitoring, real-time proactive alerts, and detailed diagnostics.
- Making you aware of potential problems through Smart Call Home notifications, in which a service request has been opened, with all diagnostic data attached.
- Resolving critical problems faster with direct, automatic access to experts in Cisco TAC.

Smart Call Home offers increased operational efficiency by providing you with the ability to do the following:

- Use staff resources more efficiently by reducing troubleshooting time.
- Generate service requests to Cisco TAC automatically, routed to the appropriate support team, which provides detailed diagnostic information that speeds problem resolution.

The Smart Call Home Portal offers quick, web-based access to required information that provides you with the ability to do the following:

- Review all Smart Call Home messages, diagnostics, and recommendations in one place.
- Check service request status quickly.
- View the most up-to-date inventory and configuration information for all Smart Call Home-enabled devices.

Licensing Requirements for Anonymous Reporting and Smart Call Home

The following table shows the licensing requirements for Anonymous Reporting and Smart Call Home:

Model	License Requirement
All models	Base License.

Prerequisites for Smart Call Home and Anonymous Reporting

Smart Call Home and Anonymous Reporting have the following prerequisites:

- DNS must be configured. (See the “DNS Requirement” section on page 80-3 and see the “Configuring the DNS Server” section on page 10-11.)

Guidelines and Limitations

Firewall Mode Guidelines

Supported in routed and transparent firewall modes.

Context Mode Guidelines

Supported in single mode and multiple context mode.

IPv6 Guidelines

Supports IPv6.

Additional Guidelines for Anonymous Reporting

- If an Anonymous Reporting message cannot be sent on the first try, the ASA retries two more times before dropping the message.
- Anonymous Reporting can coexist with other Smart Call Home configurations without changing the existing configuration. For example, if Smart Call Home is off before enabling Anonymous Reporting, it remains off, even after enabling Anonymous Reporting.
- Output from the **show running-config all** command shows details about the Anonymous Reporting user profile.
- If Anonymous Reporting is enabled, you cannot remove the trust point, and when Anonymous Reporting is disabled, the trust point remains. If Anonymous Reporting is disabled, users can remove the trustpoint, but disabling Anonymous Reporting will not cause the trustpoint to be removed.

Additional Guidelines for Smart Call Home

- In multiple context mode, the **snapshots** command is divided into two commands: one to obtain information from the system context and one to obtain information from the regular context.
- The Smart Call Home back-end server can accept messages in XML format only.

Configuring Anonymous Reporting and Smart Call Home

While Anonymous Reporting is a subfeature of the Smart Call Home feature and allows Cisco to anonymously receive minimal error and health information from the device, the Smart Call Home feature is more robust and allows for customized support of your system health, allowing Cisco TAC to monitor your devices and open a case when there is an issue, often before you know the issue occurred.

Generally speaking, you can have both features configured on your system at the same time, yet configuring the robust Smart Call Home feature provides the same functionality as Anonymous reporting, plus personalized service.

This section includes the following topics:

- [Configuring Anonymous Reporting, page 80-6](#)
- [Configuring Smart Call Home, page 80-7](#)

Configuring Anonymous Reporting

To configure Anonymous Reporting and securely provide minimal error and health information to Cisco, perform the following steps:

Detailed Steps

	Command	Purpose
Step 1	<code>call-home reporting anonymous</code> Example: hostname(config)# call-home reporting anonymous	Enables the Anonymous Reporting feature and creates a new anonymous profile. Entering this command creates a trust point and installs a certificate that is used to verify the identity of the Cisco web server.
Step 2	<code>call-home test reporting anonymous</code> Example: hostname(config)# call-home test reporting anonymous	(Optional) Tests that the Anonymous Reporting feature is fully enabled. Also ensures that you have connectivity to the server and that your system is able to send messages. A success or error message returns test results.

Configuring Smart Call Home

This section describes how to configure the Smart Call Home feature.

This section includes the following topics:

- [Enabling Smart Call Home, page 80-7](#)
- [Declaring and Authenticating a CA Trust Point, page 80-8](#)
- [Configuring DNS, page 80-8](#)
- [Subscribing to Alert Groups, page 80-9](#)
- [Testing Call Home Communications, page 80-11](#)
- [Optional Configuration Procedures, page 80-13](#)

Enabling Smart Call Home

This section contains information about performing basic setup for the Smart Call Home feature.

To enable Smart Call Home and activate your call-home profile, perform this task:

Step 1	service call-home Example: hostname(config)# service call-home	Enables the smart call home service.
Step 2	call-home Example: hostname(config)# call-home	Enters call-home configuration mode.
Step 3	contact-email-addr email Example: hostname(cfg-call-home)# contact-email-addr username@example.com	Configures the mandatory contact address. The address should be the Cisco.com ID account associated with the device.
Step 4	profile profile-name Example: hostname(cfg-call-home)# profile CiscoTAC-1	Enables the profile. The default profile name is CiscoTAC-1.
Step 5	active Example: hostname(cfg-call-home-profile)# active	Activates the call home profile. To disable this profile, enter the no active command.
Step 6	destination transport-method http Example: hostname(cfg-call-home-profile)# destination transport-method http	Configures the destination transport method for the smart call-home message receiver. The default destination transport method is e-mail. To configure e-mail see the “Sending the Output of a Command” section on page 80-12.

Declaring and Authenticating a CA Trust Point

If Smart Call Home is configured to send messages to a web server through HTTPS, you need to configure the ASA to trust the certificate of the web server or the certificate of the Certificate Authority (CA) that issued the certificate. The Cisco Smart Call Home Production server certificate is issued by Verisign. The Cisco Smart Call Home Staging server certificate is issued by Digital Signature Trust Co.

Detailed Steps

To declare and authenticate the Cisco server security certificate and establish communication with the Cisco HTTPS server for Smart Call Home service, perform this task:

<p>Step 1 <code>crypto ca trustpoint trustpoint-name</code></p> <p>Example: hostname(config)# <code>crypto ca trustpoint cisco</code></p>	<p>Configures a trustpoint and prepares for certificate enrollment.</p> <p>Note If you use HTTP as the transport method, you must install a security certificate through a trustpoint, which is required for HTTPS. Find the specific certificate to install at the following URL:</p> <p>http://www.cisco.com/en/US/docs/switches/lan/smart_call_home/SCH31_Ch6.html#wp1035380</p>
<p>Step 2 <code>enroll terminal</code></p> <p>Example: hostname(ca-trustpoint)# <code>enroll terminal</code></p>	<p>Specifies a manual cut-and-paste method of certificate enrollment.</p>
<p>Step 3 <code>exit</code></p> <p>hostname(ca-trustpoint)# <code>exit</code></p>	<p>Exits CA trustpoint configuration mode and returns to global configuration mode.</p>
<p>Step 4 <code>crypto ca authenticate trustpoint</code></p> <p>Example: hostname(ca-trustpoint)# <code>crypto ca authenticate cisco</code></p>	<p>Authenticates the named CA. The CA name should match the trust point name specified in the crypto ca trustpoint command. At the prompt, paste the security certificate text.</p>
<p>Step 5 <code>quit</code></p> <p>Example: hostname(ca-trustpoint)# <code>quit</code></p> <p>%Do you accept this certificate [yes/no]:</p> <p>yes</p>	<p>Specifies the end of the security certificate text and confirms acceptance of the entered security certificate.</p>

Configuring DNS

You must configure DNS so that the HTTPS URLs in the Smart Call Home profile can successfully resolve.

To configure DNS, perform the following tasks:

Step 1	<pre>dns domain-lookup name</pre> <p>Example: hostname(config)# dns domain-lookup corp </p>	Enables DNS lookup on a specific interface.
Step 2	<pre>dns server-group group name</pre> <p>Example: hostname(config)# DNS server-group DefaultDNS </p>	<p>Enters the server group submode to configure the parameters for that server group.</p> <p>We suggest that you use the default server group name: DefaultDNS.</p>
Step 3	<pre>name-server name</pre> <p>Example: hostname(config-dns-server-group)# name-server 192.168.1.1 </p>	Specifies the IP address of the DNS server.
Step 4	<p>(Optional)</p> <pre>domain-name name</pre> <p>Example: hostname(config-dns-server-group)# domain name domainexample </p>	Specifies the domain name.

Subscribing to Alert Groups

An alert group is a predefined subset of the Smart Call Home alerts that are supported on the ASA. Different types of Smart Call Home alerts are grouped into different alert groups depending upon their type.

This section includes the following alert group topics:

- [Configuring Periodic Notification, page 80-9](#)
- [Information about the Message Severity Threshold, page 80-9](#)
- [Configuring Alert Group Subscription, page 80-10](#)

Configuring Periodic Notification

When you subscribe a destination profile to either the Configuration or the Inventory alert group, you can choose to receive the alert group messages asynchronously or periodically at a specified time. The sending period can be one of the following:

- Daily—Specify the time of the day to send, using an hour:minute format *hh:mm*, with a 24-hour clock (for example, 14:30).
- Weekly—Specify the day of the week and time of day in the format *day hh:mm*, where the day of the week is spelled out (for example, monday).
- Monthly—Specify the numeric date, from 1 to 31, and the time of day, in the format *date hh:mm*.

Information about the Message Severity Threshold

When you subscribe a destination profile to certain alert groups, you can set a threshold for sending alert group messages based upon the message level severity. (See [Table 80-1](#)). Any message with a value lower than the destination profile's specified threshold is not sent to the destination.

Table 80-1 Severity and Syslog Level Mapping

Level	Keyword	Equivalent Syslog Level	Description
9	catastrophic	N/A	Network-wide catastrophic failure.
8	disaster	N/A	Significant network impact.
7	fatal	Emergency (0)	System is unusable.
6	critical	Alert (1)	Critical conditions, immediate attention needed.
5	major	Critical (2)	Major conditions.
4	minor	Error (3)	Minor conditions.
3	warning	Warning (4)	Warning conditions
2	notification	Notice (5)	Basic notification and informational messages. Possibly independently insignificant.
1	normal	Information (6)	Normal event signifying return to normal state.
0	debugging	Debug (7)	Debugging messages (default setting).

Configuring Alert Group Subscription

To subscribe a destination profile to an alert group, perform this task:

Detailed Steps

	Command	Purpose
Step 1	<code>call-home</code> Example: <code>hostname(config) # call-home</code>	Enters call-home configuration mode.
Step 2	<code>alert-group {all configuration diagnostic environment inventory syslog}</code> Example: <code>ciscoasa(cfg-call-home)# alert-group all</code>	Enables the specified Smart Call Home group. Use the keyword all to enable all alert groups. By default, all alert groups are enabled.
Step 3	<code>profile profile-name</code> Example: <code>hostname(cfg-call-home)# profile profile1</code>	Enters the profile configuration submode for the specified destination profile.
Step 4	<code>subscribe-to-alert-group configuration [periodic {daily hh:mm monthly date hh:mm weekly day hh:mm}]</code> Example: <code>hostname(cfg-call-home-profile)# subscribe-to-alert-group configuration periodic weekly Wednesday 23:30</code>	Subscribes this destination profile to the configuration alert group. The configuration alert group can be configured for periodic notification, as described in the “Subscribing to Alert Groups” section on page 80-9 . To subscribe to all available alert groups, use the subscribe-to-alert-group all command.

	Command	Purpose
Step 5	<pre>subscribe-to-alert-group environment [severity {catastrophic disaster emergencies alert critical errors warnings notifications informational debugging}] Example: hostname(cfg-call-home-profile)# subscribe-to-alert-group examplealertgroupname severity critical</pre>	Subscribes to group events with the specified severity level. The alert group can be configured to filter messages based on severity, as described in Table 80-1 .
Step 6	<pre>subscribe-to-alert-group syslog [severity {catastrophic disaster fatal critical major minor warning notification normal debugging} [pattern string]] Example: hostname(cfg-call-home-profile)# subscribe-to-alert-group syslog severity notification pattern UPDOWN</pre>	Subscribes to syslog events with a severity level or message ID. The syslog alert group can be configured to filter messages based on severity, as described in Table 80-1 .
Step 7	<pre>subscribe-to-alert-group inventory [periodic {daily hh:mm monthly date hh:mm weekly day hh:mm}] Example: hostname(cfg-call-home-profile)# subscribe-to-alert-group inventory periodic daily 06:30</pre>	Subscribes to inventory events. The configuration alert group can be configured for periodic notification, as described in the “ Subscribing to Alert Groups ” section on page 80-9.
Step 8	<pre>subscribe-to-alert-group telemetry periodic {hourly daily monthly day weekly day [hh:mm]} Example: hostname(cfg-call-home-profile)# subscribe-to-alert-group monthly 15</pre>	Subscribes to telemetry periodic events. The configuration alert group can be configured for periodic notification, as described in the “ Subscribing to Alert Groups ” section on page 80-9.
Step 9	<pre>subscribe-to-alert-group snapshot periodic {interval minutes hourly daily monthly day_of_month weekly day_of_week [hh:mm]} Example: hostname(cfg-call-home-profile)# subscribe-to-alert-group snapshot periodic interval weekly wednesday 23:15</pre>	Subscribes to snapshot periodic events. The configuration alert group can be configured for periodic notification, as described in the “ Subscribing to Alert Groups ” section on page 80-9.

Testing Call Home Communications

You can test Smart Call Home communications by sending messages manually using two command types. To send a user-defined Smart Call Home test message, use the **call-home test** command. To send a specific alert group message, use the **call-home send** command.

These sections describe Smart Call Home communication:

- [Sending a Smart Call Home Test Message Manually, page 80-12](#)
- [Sending a Smart Call Home Alert Group Message Manually, page 80-12](#)
- [Sending the Output of a Command, page 80-12](#)

Sending a Smart Call Home Test Message Manually

To manually send a Smart Call Home test message, perform this task:

Command	Purpose
call-home test [<i>test-message</i>] profile <i>profile-name</i> Example: hostname# call-home test [testing123] profile profile1	Sends a test message using a profile configuration.

Sending a Smart Call Home Alert Group Message Manually

To manually trigger a Call Home alert group message, perform this task:

Step 1 call-home send alert-group { inventory configuration snapshot telemetry } [profile <i>profile-name</i>] Example: hostname# call-home send alert-group inventory	Sends an inventory alert group message to one destination profile, if specified. If no profile is specified, sends messages to all profiles that are subscribed to the inventory or configuration group.
--	--

Sending the Output of a Command

You can use the **call-home send** command to execute a CLI command and e-mail the command output to Cisco or to an e-mail address that you specify.

When sending the output of a command, the following guidelines apply:

- The specified CLI command can be any run command, including commands for all modules.
- If you specify an e-mail address, the command output is sent to that address. If no e-mail address is specified, the output is sent to Cisco TAC. The e-mail is sent in log text format with the service number, if specified, in the subject line.
- The service number is required only if no e-mail address is specified or if a Cisco TAC e-mail address is specified.

To execute a CLI command and e-mail the command output, perform this task:

Command	Purpose
call-home send <i>cli command</i> [email <i>email</i>] Example: hostname# call-home send cli command email username@example.com	Sends command output to an e-mail address.

Optional Configuration Procedures

This section includes the following topics:

- [Configuring Smart Call Home Customer Contact Information, page 80-13](#)
- [Configuring the Mail Server, page 80-15](#)
- [Configuring Call Home Traffic Rate Limiting, page 80-15](#)
- [Destination Profile Management, page 80-16](#)

Configuring Smart Call Home Customer Contact Information

Obtain the following customer contact information to configure this task:

- E-mail address (required)
- Phone number (optional)
- Street address (optional)
- Contract ID (optional)
- Customer name (optional)
- Customer ID (optional)
- Site ID (optional)

To configure customer contact information, perform this task:

	Command	Purpose
Step 1	call-home Example: hostname(config)# call-home	Enters call home configuration mode.
Step 2	contact-email-addr <i>email-address</i> Example: ciscoasa(cfg-call-home)# contact-email-addr username@example.com	Configures the mandatory customer contact e-mail address (if you have not already done so). The <i>email-address</i> should be the Cisco.com ID account that is associated with the device.
Step 3	(Optional) phone-number <i>phone-number-string</i> Example: ciscoasa(cfg-call-home)# phone-number 8005551122	Specifies a customer phone number.
Step 4	(Optional) street-address <i>street-address</i> Example: ciscoasa(cfg-call-home)# street-address "1234 Any Street, Any city, Any state, 12345"	Specifies the customer address, which is a free-format string that can be up to 255 characters long.

	Command	Purpose
Step 5	(Optional) contact-name <i>contact name</i> Example: ciscoasa(cfg-call-home)# contact-name contactname1234	Specifies the customer name, which can be up to 128 characters long.
Step 6	(Optional) customer-id customer-id-string Example: ciscoasa(cfg-call-home)# customer-id customer1234	Specifies the customer ID, which can be up to 64 characters long.
Step 7	(Optional) site-id site-id-string Example: ciscoasa(cfg-call-home)# site-id site1234	Specifies a customer site ID.
Step 8	(Optional) contract-id <i>contract-id-string</i> Example: ciscoasa(cfg-call-home)# contract-id contract1234	Specifies the customer contract identification, which can be up to 128 characters long.

This example shows the configuration of contact information:

```
hostname# configure terminal
hostname(config)# call-home
ciscoasa(cfg-call-home)# contact-email-addr username@example.com
ciscoasa(cfg-call-home)# phone-number 8005551122
ciscoasa(cfg-call-home)# street-address "1234 Any Street, Any city, Any state, 12345"
ciscoasa(cfg-call-home)# contact-name contactname1234
ciscoasa(cfg-call-home)# customer-id customer1234
ciscoasa(cfg-call-home)# site-id site1234
ciscoasa(cfg-call-home)# contract-id contract1234
```

Configuring the Mail Server

We recommend that you use HTTPS for message transport, as it is the most secure. However, you can configure an e-mail destination for Smart Call Home and then configure the mail server to use the e-mail message transport.

To configure the mail server, perform this task:

	Command	Purpose
Step 1	call-home Example: hostname(config)# call-home	Enters call home configuration mode.
Step 2	mail-server ip-address name priority 1-100 all Example: ciscoasa(cfg-call-home)# mail-server 10.10.1.1 smtp.example.com priority 1	Specifies the SMTP mail server. Customers can specify up to five mail servers. At least one mail server is required for using e-mail transport for Smart Call Home messages. The lower the number, the higher the priority of the mail server. The ip-address option can be an IPv4 or IPv6 mail server address.

This example shows the configuration of a primary mail server (named "smtp.example.com") and a secondary mail server at IP address 10.10.1.1:

```
hostname# configure terminal
hostname(config)# call-home
ciscoasa(cfg-call-home)# mail-server smtp.example.com priority 1
ciscoasa(cfg-call-home)# mail-server 10.10.1.1 priority 2
ciscoasa(cfg-call-home)# exit
hostname(config)#
```

Configuring Call Home Traffic Rate Limiting

You can configure this optional setting to specify the number of messages that Smart Call Home sends per minute.

To configure Smart Call Home traffic rate limiting, perform this task:

	Command	Purpose
Step 1	call-home Example: hostname(config)# call-home	Enters call home configuration mode.
Step 2	rate-limit msg-count Example: ciscoasa(cfg-call-home)# rate-limit 5	Specifies the number of messages that Smart Call Home can send per minute. The default value is 10 messages per minute.

This example shows how to configure Smart Call Home traffic rate limiting:

```
hostname# configure terminal
hostname(config)# call-home
ciscoasa(cfg-call-home)# rate-limit 5
```

Destination Profile Management

These sections describe destination profile management:

- [Configuring a Destination Profile, page 80-16](#)
- [Activating and Deactivating a Destination Profile, page 80-17](#)
- [Copying a Destination Profile, page 80-18](#)
- [Renaming a Destination Profile, page 80-18](#)

Configuring a Destination Profile

To configure a destination profile for e-mail or for HTTP, perform this task:

Step 1	<pre>call-home</pre> <p>Example: hostname(config)# call-home</p>	Enters call home configuration mode.
Step 2	<pre>profile profile-name</pre> <p>Example: hostname(cfg-call-home)# profile newprofile</p>	Enters the profile configuration mode for the specified destination profile. If the specified destination profile does not exist, it is created.
Step 3	<pre>destination {email address http url} message-size-limit size preferred-msg-format {long-text short-text xml} transport-method {email http}}</pre> <p>Example: hostname(cfg-call-home-profile)# destination address email username@example.com</p> <pre>hostname(cfg-call-home-profile)# destination preferred-msg-format long-text</pre>	<p>Configures the destination, message size, message format, and transport method for the smart call-home message receiver. The default message format is XML, and the default enabled transport method is e-mail. The e-mail-address is the e-mail address of the smart call-home receiver, which can be up to 100 characters long. By default, the maximum URL size is 5 MB.</p> <p>Use the short-text format to send and read a message on a mobile device, and use the long text format to send and read a message on a computer.</p> <p>If the message receiver is the Smart Call Home back-end server, ensure that the preferred-msg-format is XML, as the back-end server can accept messages in XML format only.</p>

Activating and Deactivating a Destination Profile

Smart Call Home destination profiles are automatically activated when you create them. If you do not want to use a profile right away, you can deactivate the profile.

To activate or deactivate a destination profile, perform this task:

	Command	Purpose
Step 1	call-home Example: hostname(config)# call-home	Enters call home configuration mode.
Step 2	profile profile-name Example: hostname(cfg-call-home)# profile newprofile	Enters the profile configuration mode. Creates, edits, or deletes a profile, which can be up to 20 characters long.
Step 3	active Example: ciscoasa(cfg-call-home-profile)# active	Enables or disables a profile. By default, a new profile is enabled when it is created.
Step 4	no active Example: ciscoasa(cfg-call-home-profile)# no active	Disables the destination profile.

This example shows how to activate a destination profile:

```
hostname# configure terminal
hostname(config)# call-home
ciscoasa(cfg-call-home)# profile newprofile
ciscoasa(cfg-call-home-profile)# active
ciscoasa(cfg-call-home)# end
```

This example shows how to deactivate a destination profile:

```
hostname# configure terminal
hostname(config)# call-home
ciscoasa(cfg-call-home)# profile newprofile
ciscoasa(cfg-call-home-profile)# no active
ciscoasa(cfg-call-home)# end
```

Copying a Destination Profile

To create a new destination profile by copying an existing profile, perform this task:

	Command	Purpose
Step 1	call-home Example: hostname(config)# call-home	Enters call home configuration mode.
Step 2	profile <i>profilename</i> Example: ciscoasa(cfg-call-home)# profile newprofile	Specifies the profile to copy.
Step 3	copy profile <i>src-profile-name dest-profile-name</i> Example: ciscoasa(cfg-call-home)# copy profile profile1 profile2	Copies the content of an existing profile (src-profile-name, which can be up to 23 characters long) to a new profile (dest-profile-name, which can be up to 23 characters long).

This example shows how to copy an existing profile:

```
hostname# configure terminal
hostname(config)# call-home
ciscoasa(cfg-call-home)# profile newprofile
ciscoasa(cfg-call-home-profile)# copy profile profile1 profile2
```

Renaming a Destination Profile

To change the name of an existing profile, perform this task:

	Command	Purpose
Step 1	call-home Example: hostname(config)# call-home	Enters call home configuration mode.
Step 2	profile <i>profilename</i> Example: ciscoasa(cfg-call-home)# profile newprofile	Specifies the profile to rename.
Step 3	rename profile <i>src-profile-name dest-profile-name</i> Example: ciscoasa(cfg-call-home)# rename profile profile1 profile2	Changes the name of an existing profile, the src-profile-name (an existing profile name can be up to 23 characters long), and the dest-profile-name (a new profile name can be up to 23 characters long).

This example shows how to rename an existing profile:

```
hostname# configure terminal
hostname(config)# call-home
ciscoasa(cfg-call-home)# profile newprofile
```

```
ciscoasa (cfg-call-home-profile) # rename profile profile1 profile2
```

Monitoring Smart Call Home

To monitor the Smart Call Home feature, enter one of the following commands:

Command	Purpose
show call-home detail	Shows the current Smart Call Home detail configuration.
show call-home mail-server status	Shows the current mail server status.
show call-home profile { <i>profile name</i> all }	Shows the configuration of Smart Call Home profiles.
show call-home registered-module status [all]	Shows the registered module status.
show call-home statistics	Shows call-home detail status.
show call-home	Shows the current Smart Call Home configuration.
show running-config call-home	Shows the current Smart Call Home running configuration.
show smart-call-home alert-group	Shows the current status of Smart Call Home alert groups.

Configuration Example for Smart Call Home

The following example shows how to configure the Smart Call Home feature:

```
hostname (config) # service call-home
hostname (config) # call-home
hostname (cfg-call-home) # contact-email-addr customer@mail.server
hostname (cfg-call-home) # profile CiscoTAC-1
hostname (cfg-call-home-profile) # destination address http
https://example.cisco.com/its/service/example/services/ExampleService
hostname (cfg-call-home-profile) # destination address email callhome@example.com
hostname (cfg-call-home-profile) # destination transport-method http
hostname (cfg-call-home-profile) # subscribe-to-alert-group inventory periodic monthly
hostname (cfg-call-home-profile) # subscribe-to-alert-group configuration periodic monthly
hostname (cfg-call-home-profile) # subscribe-to-alert-group environment
hostname (cfg-call-home-profile) # subscribe-to-alert-group diagnostic
hostname (cfg-call-home-profile) # subscribe-to-alert-group telemetry periodic daily
```

Feature History for Anonymous Reporting and Smart Call Home

Table 80-2 lists each feature change and the platform release in which it was implemented. ASDM is backwards-compatible with multiple platform releases, so the specific ASDM release in which support was added is not listed.

Table 80-2 Feature History for Anonymous Reporting and Smart Call Home

Feature Name	Platform Releases	Feature Information
Smart Call Home	8.2(2)	<p>The Smart Call Home feature offers proactive diagnostics and real-time alerts on the ASA, and provides higher network availability and increased operational efficiency.</p> <p>We introduced or modified the following commands:</p> <p>active (call home), call-home, call-home send alert-group, call-home test, contact-email-addr, customer-id (call home), destination (call home), profile, rename profile, service call-home, show call-home, show call-home detail, show smart-call-home alert-group, show call-home profile, show call-home statistics, show call-home mail-server status, show running-config call-home, show call-home registered-module status all, site-id, street-address, subscribe-to-alert-group all, subscribe-to-alert-group configuration, subscribe-to-alert-group diagnostic, subscribe-to-alert-group environment, subscribe-to-alert-group inventory, subscribe-to-alert-group syslog.</p>
Anonymous Reporting	8.2(5)/8.4(2)	<p>Customers can help to improve the ASA platform by enabling Anonymous Reporting, which allows Cisco to securely receive minimal error and health information from a device.</p> <p>We introduced the following commands: call-home reporting anonymous, call-home test reporting anonymous.</p>



PART 18

System Administration



CHAPTER 81

Managing Software and Configurations

This chapter describes how to manage the ASA software and configurations and includes the following sections:

- [Managing the Flash File System, page 81-1](#)
- [Downloading Software or Configuration Files to Flash Memory, page 81-2](#)
- [Configuring the Application Image and ASDM Image to Boot, page 81-4](#)
- [Configuring the File to Boot as the Startup Configuration, page 81-5](#)
- [Deleting Files from a USB Drive on the ASA 5500-X Series, page 81-5](#)
- [Performing Zero Downtime Upgrades for Failover Pairs, page 81-6](#)
- [Backing Up Configuration Files or Other Files, page 81-8](#)
- [Configuring Auto Update Support, page 81-16](#)
- [Downgrading Your Software, page 81-19](#)

Managing the Flash File System

This section includes the following topics:

- [Viewing Files in Flash Memory, page 81-1](#)
- [Deleting Files from Flash Memory, page 81-2](#)

Viewing Files in Flash Memory

You can view files in flash memory and see information about files as follows:

- To view files in flash memory, enter the following command:

```
hostname# dir [disk0: | disk1:]
```

Enter **disk0:** for the internal flash memory. The **disk1:** keyword represents the external flash memory. The internal flash memory is the default.

For example:

```
hostname# dir
```

```
Directory of disk0:/  
500  -rw-  4958208  22:56:20 Nov 29 2004  cdisk.bin
```

```
2513  -rw-  4634      19:32:48 Sep 17 2004  first-backup
2788  -rw-  21601      20:51:46 Nov 23 2004  backup.cfg
2927  -rw-  8670632    20:42:48 Dec 08 2004  asdmfile.bin
```

- To view extended information about a specific file, enter the following command:

```
hostname# show file information [path:]filename
```

The default path is the root directory of the internal flash memory (disk0:/).

For example:

```
hostname# show file information cdisk.bin

disk0:/cdisk.bin:
  type is image (XXX) []
  file size is 4976640 bytes version 7.0(1)
```

The file size listed is for example only.

Deleting Files from Flash Memory

You can remove files from flash memory that you no longer need. To delete a file from flash memory, enter the following command:

```
hostname# delete disk0: filename
```

By default, the file is deleted from the current working directory if you do not specify a path. You may use wildcards when deleting files. You are prompted with the filename to delete, and then you must confirm the deletion.

Downloading Software or Configuration Files to Flash Memory

You can download application images, ASDM images, configuration files, and other files to the internal flash memory or, for the ASA, to the external flash memory from a TFTP, FTP, SMB, HTTP, or HTTPS server.



Note

For the IPS SSP software module, before you download the IPS software to disk0, make sure at least 50% of the flash memory is free. When you install IPS, IPS reserves 50% of the internal flash memory for its file system.



Note

You cannot have two files with the same name but with different letter case in the same directory in flash memory. For example, if you attempt to download the file, Config.cfg, to a location that contains the file, config.cfg, you receive the following error message:

```
%Error opening disk0:/Config.cfg (File exists).
```

This section includes the following topics:

- [Downloading a File to a Specific Location, page 81-3](#)
- [Downloading a File to the Startup or Running Configuration, page 81-3](#)

Downloading a File to a Specific Location

This section describes how to download the application image, ASDM software, a configuration file, or any other file that needs to be downloaded to flash memory. To download a file to the running or startup configuration, see the “[Downloading a File to the Startup or Running Configuration](#)” section on page 81-3.

For information about installing the Cisco SSL VPN client, see the *Cisco AnyConnect VPN Client Administrator Guide*. For information about installing Cisco Secure Desktop on the ASA, see the *Cisco Secure Desktop Configuration Guide for Cisco ASA 5500 Series Administrators*.

To configure the ASA to use a specific application image or ASDM image if you have more than one installed, or have installed them in external flash memory, see the “[Configuring the Application Image and ASDM Image to Boot](#)” section on page 81-4.

To configure the ASA to use a specific configuration as the startup configuration, see the “[Configuring the File to Boot as the Startup Configuration](#)” section on page 81-5.

For multiple context mode, you must be in the system execution space.

To download a file to flash memory, see the following commands for each download server type:

- To copy from a TFTP server, enter the following command:

```
hostname# copy tftp://server[/path]/filename {disk0:/ | disk1:/}[/path/]filename
```

- To copy from an FTP server, enter the following command:

```
hostname# copy ftp://[user[:password]@]server[/path]/filename {disk0:/ | disk1:/}[/path/]filename
```

- To copy from an HTTP or HTTPS server, enter the following command:

```
hostname# copy http[s]://[user[:password]@]server[:port]/[/path]/filename {disk0:/ | disk1:/}[/path/]filename
```

- To copy from an SMB server, enter the following command:

```
hostname# copy smb://[user[:password]@]server[/path]/filename {disk0:/ | disk1:/}[/path/]filename
```

- To use secure copy, first enable secure shell (SSH), and then enter the following command:

```
hostname# ssh scopy enable
```

From a Linux client, enter the following command:

```
scp -v -pw password filename username@asa_address
```

The **-v** is for verbose, and if **-pw** is not specified, you will be prompted for a password.

Downloading a File to the Startup or Running Configuration

You can download a text file to the running or startup configuration from a TFTP, FTP, SMB, or HTTP(S) server, or from the flash memory.

To copy a file to the startup configuration or running configuration, enter one of the following commands for the appropriate download server:

**Note**

When you copy a configuration to the running configuration, you merge the two configurations. A merge adds any new commands from the new configuration to the running configuration. If the configurations are the same, no changes occur. If commands conflict or if commands affect the running of the context, then the effect of the merge depends on the command. You might get errors, or you might have unexpected results.

- To copy from a TFTP server, enter the following command:

```
hostname# copy tftp://server[/path]/filename {startup-config | running-config}
```

- To copy from an FTP server, enter the following command:

```
hostname# copy ftp://[user[:password]@]server[/path]/filename {startup-config | running-config}
```

- To copy from an HTTP or HTTPS server, enter the following command:

```
hostname# copy http[s]://[user[:password]@]server[:port][/path]/filename {startup-config | running-config}
```

- To copy from an SMB server, enter the following command:

```
hostname# copy smb://[user[:password]@]server[/path]/filename {startup-config | running-config}
```

- To copy from flash memory, enter the following command:

```
hostname# copy {disk0:/ | disk1:/}[path]/filename {startup-config | running-config}
```

For example, to copy the configuration from a TFTP server, enter the following command:

```
hostname# copy tftp://209.165.200.226/configs/startup.cfg startup-config
```

To copy the configuration from an FTP server, enter the following command:

```
hostname# copy ftp://admin:letmein@209.165.200.227/configs/startup.cfg startup-config
```

To copy the configuration from an HTTP server, enter the following command:

```
hostname# copy http://209.165.200.228/configs/startup.cfg startup-config
```

Configuring the Application Image and ASDM Image to Boot

By default, the ASA boots the first application image that it finds in internal flash memory. It also boots the first ASDM image it finds in internal flash memory, or if one does not exist in this location, then in external flash memory. If you have more than one image, you should specify the image that you want to boot. For the ASDM image, if you do not specify the image to boot, even if you have only one image installed, then the ASA inserts the **asdm image** command into the running configuration. To avoid problems with Auto Update (if configured), and to avoid the image search at each startup, you should specify the ASDM image that you want to boot in the startup configuration.

To configure the application image to boot, enter the following command:

```
hostname(config)# boot system url
```

where *url* can be one of the following:

- `{disk0:/ | disk1:/}[path]/filename`

- `tftp://[user[:password]@]server[:port]/[path/]filename`



Note The TFTP option is only supported for the ASA.

You can enter up to four **boot system** command entries to specify different images to boot from in order; the ASA boots the first image it finds. Only one **boot system tftp** command can be configured, and it must be the first one configured.



Note If the ASA is stuck in a cycle of constant booting, you can reboot the ASA into ROMMON mode. For more information about the ROMMON mode, see the [“Using the ROM Monitor to Load a Software Image” section on page 82-11](#).

To configure the ASDM image to boot, enter the following command:

```
hostname(config)# asdm image {disk0:/ | disk1:/} [path/] filename
```

Configuring the File to Boot as the Startup Configuration

By default, the ASA boots from a startup configuration that is a hidden file. You can alternatively set any configuration to be the startup configuration by entering the following command:

```
hostname(config)# boot config {disk0:/ | disk1:/} [path/] filename
```

Deleting Files from a USB Drive on the ASA 5500-X Series

When you delete a file from a USB drive (accessed as `disk1:`, for example), then the USB is moved to the other slot (from bottom to top, or top to bottom), and the file reappears. With this type of online insertion removal, to make sure that the file is actually deleted and no longer appears when you enter the **show disk1:** command, enter the following command:

```
hostname# eject disk1:
```

Performing Zero Downtime Upgrades for Failover Pairs

The two units in a failover configuration should have the same major (first number) and minor (second number) software version. However, you do not need to maintain version parity on the units during the upgrade process; you can have different versions on the software running on each unit and still maintain failover support. To ensure long-term compatibility and stability, we recommend upgrading both units to the same version as soon as possible.

Table 81-1 shows the supported scenarios for performing zero-downtime upgrades on a failover pair.

Table 81-1 Zero-Downtime Upgrade Support

Type of Upgrade	Support
Maintenance Release	You can upgrade from any maintenance release to any other maintenance release within a minor release. For example, you can upgrade from 7.0(1) to 7.0(4) without first installing the maintenance releases in between.
Minor Release	You can upgrade from a minor release to the next minor release. You cannot skip a minor release. For example, you can upgrade from 7.0(1) to 7.1(1). Upgrading from 7.0(1) directly to 7.2(1) is not supported for zero-downtime upgrades; you must first upgrade to 7.1(1).
Major Release	You can upgrade from the last minor release of the previous version to the next major release. For example, you can upgrade from 7.2(1) to 8.0(1), assuming that 7.2(1) is the last minor version in the 7.x release series.
	 <p>Note Zero downtime upgrades are possible, even when feature configuration is migrated, for example, from 8.2.x to 8.3.x.</p>

For more details about upgrading the software on a failover pair, see the following topics:

- [Upgrading an Active/Standby Failover Configuration, page 81-6](#)
- [Upgrading an Active/Active Failover Configuration, page 81-7](#)

Upgrading an Active/Standby Failover Configuration

To upgrade two units in an Active/Standby failover configuration, perform the following steps:

-
- Step 1** Download the new software to both units, and specify the new image to load with the **boot system** command (see the “Configuring the Application Image and ASDM Image to Boot” section on page 81-4).
- Step 2** Reload the standby unit to boot the new image by entering the following command on the active unit:
- ```
active# failover reload-standby
```
- Step 3** When the standby unit has finished reloading, and is in the Standby Ready state, force the active unit to fail over to the standby unit by entering the following command on the active unit.



---

**Note** Use the **show failover** command to verify that the standby unit is in the Standby Ready state.

---

```
active# no failover active
```

**Step 4** Reload the former active unit (now the new standby unit) by entering the following command:

```
newstandby# reload
```

**Step 5** When the new standby unit has finished reloading and is in the Standby Ready state, return the original active unit to active status by entering the following command:

```
newstandby# failover active
```

---

## Upgrading an Active/Active Failover Configuration

To upgrade two units in an Active/Active failover configuration, perform the following steps:

- 
- Step 1** Download the new software to both units, and specify the new image to load with the **boot system** command (see the “[Configuring the Application Image and ASDM Image to Boot](#)” section on [page 81-4](#)).
- Step 2** Make both failover groups active on the primary unit by entering the following command in the system execution space of the primary unit:
- ```
primary# failover active
```
- Step 3** Reload the secondary unit to boot the new image by entering the following command in the system execution space of the primary unit:
- ```
primary# failover reload-standby
```
- Step 4** When the secondary unit has finished reloading, and both failover groups are in the Standby Ready state on that unit, make both failover groups active on the secondary unit by using the following command in the system execution space of the primary unit:



---

**Note** Use the **show failover** command to verify that both failover groups are in the Standby Ready state on the secondary unit.

---

```
primary# no failover active
```

**Step 5** Make sure that both failover groups are in the Standby Ready state on the primary unit, and then reload the primary unit using the following command:

```
primary# reload
```

**Step 6** If the failover groups are configured with the **preempt** command, they automatically become active on their designated unit after the preempt delay has passed. If the failover groups are not configured with the **preempt** command, you can return them to active status on their designated units using the **failover active group** command.

---

# Backing Up Configuration Files or Other Files

This section includes the following topics:

- [Backing up the Single Mode Configuration or Multiple Mode System Configuration, page 81-8](#)
- [Backing Up a Context Configuration or Other File in Flash Memory, page 81-8](#)
- [Backing Up a Context Configuration within a Context, page 81-9](#)
- [Copying the Configuration from the Terminal Display, page 81-9](#)
- [Backing Up Additional Files Using the Export and Import Commands, page 81-9](#)
- [Using a Script to Back Up and Restore Files, page 81-10](#)

## Backing up the Single Mode Configuration or Multiple Mode System Configuration

In single context mode or from the system configuration in multiple mode, you can copy the startup configuration or running configuration to an external server or to the local flash memory as follows:

- To copy to a TFTP server, enter the following command:

```
hostname# copy {startup-config | running-config} tftp://server[/path]/filename
```

- To copy to a FTP server, enter the following command:

```
hostname# copy {startup-config | running-config}
ftp://[user[:password]@]server[/path]/filename
```

- To copy to local flash memory, enter the following command:

```
hostname# copy {startup-config | running-config} {flash:/ | disk0:/ |
disk1:/}[path/]filename
```



**Note** Be sure that the destination directory exists. If it does not exist, first create the directory using the **mkdir** command.

## Backing Up a Context Configuration or Other File in Flash Memory

Copy context configurations or other files that are on the local flash memory by entering one of the following commands in the system execution space:

- To copy to a TFTP server, enter the following command:

```
hostname# copy disk{0 | 1}:[path/]filename tftp://server[/path]/filename
```

- To copy to a FTP server, enter the following command:

```
hostname# copy disk{0 | 1}:[path/]filename
ftp://[user[:password]@]server[/path]/filename
```

- To copy to an SMB file-system, enter the following command:

```
hostname# copy disk{0 | 1}:[path/]filename
smb://[user[:password]@]server[/path]/filename
```

- To copy from the ASA using HTTPS, enter the following URL in your browser:

```
https://ASA_IP/disk{0 | 1}/filename
```

- To copy to local flash memory, enter the following command:

```
hostname# copy disk{0 | 1}:[path/]filename disk{0 | 1}:[path/]newfilename
```

**Note**

Be sure that the destination directory exists. If it does not exist, first create the directory using the **mkdir** command.

## Backing Up a Context Configuration within a Context

In multiple context mode, from within a context, you can perform the following backups:

- To copy the running configuration to the startup configuration server (connected to the admin context), enter the following command:

```
hostname/contexta# copy running-config startup-config
```

- To copy the running configuration to a TFTP server connected to the context network, enter the following command:

```
hostname/contexta# copy running-config tftp:/server[/path]/filename
```

## Copying the Configuration from the Terminal Display

To print the configuration to the terminal, enter the following command:

```
hostname# show running-config
```

Copy the output from this command, and then paste the configuration into a text file.

## Backing Up Additional Files Using the Export and Import Commands

Additional files essential to your configuration might include the following:

- Files that you import using the **import webvpn** command. Currently, these files include customizations, URL lists, web content, plug-ins, and language translations.
- DAP policies (dap.xml).
- CSD configurations (data.xml).
- Digital keys and certificates.
- Local CA user database and certificate status files.

The CLI lets you back up and restore individual elements of your configuration using the **export** and **import** commands.

To back up these files, for example, those files that you imported with the **import webvpn** command or certificates, perform the following steps:

---

**Step 1** Run the applicable **show** command(s) as follows:

```
hostname # show import webvpn plug-in
ica
rdp
ssh, telnet
vnc
```

**Step 2** Run the **export** command for the file that you want to back up (in this example, the rdp file):

```
hostname # export webvpn plug-in protocol rdp tftp://tftpserver/backupfilename
```

## Using a Script to Back Up and Restore Files

You can use a script to back up and restore the configuration files on your ASA, including all extensions that you import via the **import webvpn** CLI, the CSD configuration XML files, and the DAP configuration XML file. For security reasons, we do not recommend that you perform automated backups of digital keys and certificates or the local CA key.

This section provides instructions for doing so and includes a sample script that you can use as is or modify as your environment requires. The sample script is specific to a Linux system. To use it for a Microsoft Windows system, you need to modify it using the logic of the sample.



### Note

The existing CLI lets you back up and restore individual files using the **copy**, **export**, and **import** commands. It does not, however, have a facility that lets you back up all ASA configuration files in one operation. Running the script facilitates the use of multiple CLIs.

This section includes the following topics:

- [Prerequisites, page 81-10](#)
- [Running the Script, page 81-10](#)
- [Sample Script, page 81-11](#)

## Prerequisites

To use a script to back up and restore an ASA configuration, first perform the following tasks:

- Install Perl with an Expect module.
- Install an SSH client that can reach the ASA.
- Install a TFTP server to send files from the ASA to the backup site.

Another option is to use a commercially available tool. You can put the logic of this script into such a tool.

## Running the Script

To run a backup-and-restore script, perform the following steps:

- Step 1** Download or cut-and-paste the script file to any location on your system.
- Step 2** At the command line, enter **Perl** *scriptname*, where *scriptname* is the name of the script file.
- Step 3** Press **Enter**.

- Step 4** The system prompts you for values for each option. Alternatively, you can enter values for the options when you enter the **Perl scriptname** command before you press **Enter**. Either way, the script requires that you enter a value for each option.
- Step 5** The script starts running, printing out the commands that it issues, which provides you with a record of the CLIs. You can use these CLIs for a later restore, which is particularly useful if you want to restore only one or two files.

## Sample Script

```
#!/usr/bin/perl
#Function: Backup/restore configuration/extensions to/from a TFTP server.
#Description: The objective of this script is to show how to back up
configurations/extensions before the backup/restore command is developed.
It currently backs up the running configuration, all extensions imported via "import
webvpn" command, the CSD configuration XML file, and the DAP configuration XML file.
#Requirements: Perl with Expect, SSH to the ASA, and a TFTP server.
#Usage: backupasa -option option_value
-h: ASA hostname or IP address
-u: User name to log in via SSH
-w: Password to log in via SSH
-e: The Enable password on the security appliance
-p: Global configuration mode prompt
-s: Host name or IP address of the TFTP server to store the configurations
-r: Restore with an argument that specifies the file name. This file is produced
during backup.
#If you don't enter an option, the script will prompt for it prior to backup.
#
#Make sure that you can SSH to the ASA.

use Expect;
use Getopt::Std;

#global variables
%options=();
$restore = 0; #does backup by default
$restore_file = '';
$asa = '';
$storage = '';
$user = '';
$password = '';
$enable = '';
$prompt = '';
$date = `date +%F`;
chop($date);
my $exp = new Expect();

getopts("h:u:p:w:e:s:r:", \%options);
do process_options();

do login($exp);
do enable($exp);
if ($restore) {
 do restore($exp, $restore_file);
}
else {
 $restore_file = "$prompt-restore-$date.cli";
 open(OUT, ">$restore_file") or die "Can't open $restore_file\n";
 do running_config($exp);
 do lang_trans($exp);
}
```

```

do customization($exp);
do plugin($exp);
do url_list($exp);
do webcontent($exp);
do dap($exp);
do csd($exp);
close(OUT);
}
do finish($exp);

sub enable {
 $obj = shift;
 $obj->send("enable\n");
 unless ($obj->expect(15, 'Password:')) {
 print "timed out waiting for Password:\n";
 }
 $obj->send("$enable\n");
 unless ($obj->expect(15, "$prompt#")) {
 print "timed out waiting for $prompt#\n";
 }
}

sub lang_trans {
 $obj = shift;
 $obj->clear_accum();
 $obj->send("show import webvpn translation-table\n");
 $obj->expect(15, "$prompt#");
 $output = $obj->before();
 @items = split(/\n+/, $output);

 for (@items) {
 s/^\s+//;
 s/\s+$//;
 next if /show import/ or /Translation Tables/;
 next unless (/^\.+\.+$/);
 ($lang, $transtable) = split(/\s+/, $_);
 $cli = "export webvpn translation-table $transtable language $lang
$storage/$prompt-$date-$transtable-$lang.po";
 $ocli = $cli;
 $ocli =~ s/^export/import/;
 print "$cli\n";
 print OUT "$ocli\n";
 $obj->send("$cli\n");
 $obj->expect(15, "$prompt#");
 }
}

sub running_config {
 $obj = shift;
 $obj->clear_accum();
 $cli = "copy /noconfirm running-config $storage/$prompt-$date.cfg";
 print "$cli\n";
 $obj->send("$cli\n");
 $obj->expect(15, "$prompt#");
}

sub customization {
 $obj = shift;
 $obj->clear_accum();
 $obj->send("show import webvpn customization\n");
 $obj->expect(15, "$prompt#");
 $output = $obj->before();
 @items = split(/\n+/, $output);
}

```

```

for (@items) {
 chop;
 next if /^Template/ or /show import/ or /\s*$/;
 $cli = "export webvpn customization $_ $storage/$prompt-$date-cust-$_.xml";
 $ocli = $cli;
 $ocli =~ s/^export/import/;
 print "$cli\n";
 print OUT "$ocli\n";
 $obj->send("$cli\n");
 $obj->expect(15, "$prompt#");
}
}

sub plugin {
 $obj = shift;
 $obj->clear_accum();
 $obj->send("show import webvpn plug-in\n");
 $obj->expect(15, "$prompt#");
 $output = $obj->before();
 @items = split(/\n+/, $output);

 for (@items) {
 chop;
 next if /^Template/ or /show import/ or /\s*$/;
 $cli = "export webvpn plug-in protocol $_ $storage/$prompt-$date-plugin-$_.jar";
 $ocli = $cli;
 $ocli =~ s/^export/import/;
 print "$cli\n";
 print OUT "$ocli\n";
 $obj->send("$cli\n");
 $obj->expect(15, "$prompt#");
 }
}

sub url_list {
 $obj = shift;
 $obj->clear_accum();
 $obj->send("show import webvpn url-list\n");
 $obj->expect(15, "$prompt#");
 $output = $obj->before();
 @items = split(/\n+/, $output);

 for (@items) {
 chop;
 next if /^Template/ or /show import/ or /\s*$/ or /No bookmarks/;
 $cli="export webvpn url-list $_ $storage/$prompt-$date-urllist-$_.xml";
 $ocli = $cli;
 $ocli =~ s/^export/import/;
 print "$cli\n";
 print OUT "$ocli\n";
 $obj->send("$cli\n");
 $obj->expect(15, "$prompt#");
 }
}

sub dap {
 $obj = shift;
 $obj->clear_accum();
 $obj->send("dir dap.xml\n");
 $obj->expect(15, "$prompt#");

 $output = $obj->before();
 return 0 if($output =~ /Error/);
}

```

```

$cli="copy /noconfirm dap.xml $storage/$prompt-$date-dap.xml";
$ocli="copy /noconfirm $storage/$prompt-$date-dap.xml disk0:/dap.xml";
print "$cli\n";
print OUT "$ocli\n";
$obj->send("$cli\n");
$obj->expect(15, "$prompt#");
}

sub csd {
 $obj = shift;
 $obj->clear_accum();
 $obj->send("dir sdesktop\n");
 $obj->expect(15, "$prompt#");

 $output = $obj->before();
 return 0 if($output =~ /Error/);

 $cli="copy /noconfirm sdesktop/data.xml $storage/$prompt-$date-data.xml";
 $ocli="copy /noconfirm $storage/$prompt-$date-data.xml disk0:/sdesktop/data.xml";
 print "$cli\n";
 print OUT "$ocli\n";
 $obj->send("$cli\n");
 $obj->expect(15, "$prompt#");
}

sub webcontent {
 $obj = shift;
 $obj->clear_accum();
 $obj->send("show import webvpn webcontent\n");
 $obj->expect(15, "$prompt#");
 $output = $obj->before();
 @items = split(/\n+/, $output);

 for (@items) {
 s/^\s+//;
 s/\s+$//;
 next if /show import/ or /No custom/;
 next unless (/^.\s+.$/);
 ($url, $type) = split(/\s+/, $_);
 $turl = $url;
 $turl =~ s/\/\+//;
 $turl =~ s/\/+\/-//;
 $cli = "export webvpn webcontent $url $storage/$prompt-$date-$turl";
 $ocli = $cli;
 $ocli =~ s/^export/import/;
 print "$cli\n";
 print OUT "$ocli\n";
 $obj->send("$cli\n");
 $obj->expect(15, "$prompt#");
 }
}

sub login {
 $obj = shift;
 $obj->raw_pty(1);
 $obj->log_stdout(0); #turn off console logging.
 $obj->spawn("/usr/bin/ssh $user@$asa") or die "can't spawn ssh\n";
 unless ($obj->expect(15, "password:")) {
 die "timeout waiting for password:\n";
 }

 $obj->send("$password\n");
}

```

```
 unless ($obj->expect(15, "$prompt>")) {
 die "timeout waiting for $prompt>\n";
 }
 }

sub finish {
 $obj = shift;
 $obj->hard_close();
 print "\n\n";
}

sub restore {
 $obj = shift;
 my $file = shift;
 my $output;
 open(IN,$file) or die "can't open $file\n";
 while (<IN>) {
 $obj->send("$_");
 $obj->expect(15, "$prompt#");
 $output = $obj->before();
 print "$output\n";
 }
 close(IN);
}

sub process_options {
 if (defined($options{s})) {
 $tstr= $options{s};
 $storage = "tftp://$tstr";
 }
 else {
 print "Enter TFTP host name or IP address:";
 chop($tstr=<>);
 $storage = "tftp://$tstr";
 }
 if (defined($options{h})) {
 $asa = $options{h};
 }
 else {
 print "Enter ASA host name or IP address:";
 chop($asa=<>);
 }

 if (defined ($options{u})) {
 $user= $options{u};
 }
 else {
 print "Enter user name:";
 chop($user=<>);
 }

 if (defined ($options{w})) {
 $password= $options{w};
 }
 else {
 print "Enter password:";
 chop($password=<>);
 }
 if (defined ($options{p})) {
 $prompt= $options{p};
 }
 else {
 print "Enter ASA prompt:";
 }
}
```

```

 chop($prompt=<>);
 }
 if (defined ($options{e})) {
 $enable = $options{e};
 }
 else {
 print "Enter enable password:";
 chop($enable=<>);
 }

 if (defined ($options{r})) {
 $restore = 1;
 $restore_file = $options{r};
 }
}

```

## Configuring Auto Update Support

Auto Update is a protocol specification that allows an Auto Update Server to download configurations and software images to many ASAs and can provide basic monitoring of the ASAs from a central location.

The ASA can be configured as either a client or a server. As an Auto Update client, it periodically polls the Auto Update Server for updates to software images and configuration files. As an Auto Update Server, it issues updates for ASAs configured as Auto Update clients.



### Note

Auto Update is supported in single context mode only.

This section includes the following topics:

- [Configuring Communication with an Auto Update Server, page 81-16](#)
- [Configuring Client Updates as an Auto Update Server, page 81-18](#)
- [Viewing Auto Update Status, page 81-19](#)

## Configuring Communication with an Auto Update Server

To configure the ASA as an Auto Update client, perform the following steps:

**Step 1** To specify the URL of the Auto Update Server, enter the following command:

```
hostname(config)# auto-update server url [source interface] [verify-certificate]
```

where *url* has the following syntax:

```
http[s]://[user:password@]server_ip[:port]/pathname
```

SSL is used when **https** is specified. The *user* and *password* arguments of the URL are used for basic authentication when logging in to the server. If you use the **write terminal**, **show configuration** or **show tech-support** commands to view the configuration, the user and password are replaced with '\*\*\*\*\*'.

The default port is 80 for HTTP and 443 for HTTPS.

The **source interface** keyword and argument specify which interface to use when sending requests to the Auto Update Server. If you specify the same interface specified by the **management-access** command, the Auto Update requests travel over the same IPsec VPN tunnel used for management access.

The **verify-certificate** keyword verifies the certificate returned by the Auto Update Server.

- Step 2** (Optional) To identify the device ID to send when communicating with the Auto Update Server, enter the following command:

```
hostname(config)# auto-update device-id {hardware-serial | hostname | ipaddress [if-name] | mac-address [if-name] | string text}
```

The identifier used is determined by specifying one of the following parameters:

- The *hardware-serial* argument specifies the ASA serial number.
- The *hostname* argument specifies the ASA hostname.
- The **ipaddress** keyword specifies the IP address of the specified interface. If the interface name is not specified, it uses the IP address of the interface used to communicate with the Auto Update Server.
- The **mac-address** keyword specifies the MAC address of the specified interface. If the interface name is not specified, it uses the MAC address of the interface used to communicate with the Auto Update Server.
- The **string** keyword specifies the specified text identifier, which cannot include white space or the characters ‘, “, , >, & and ?.

- Step 3** (Optional) To specify how often to poll the Auto Update Server for configuration or image updates, enter the following command:

```
hostname(config)# auto-update poll-period poll-period [retry-count [retry-period]]
```

The *poll-period* argument specifies how often (in minutes) to check for an update. The default is 720 minutes (12 hours).

The *retry-count* argument specifies how many times to try reconnecting to the server if the first attempt fails. The default is zero.

The *retry-period* argument specifies how long to wait (in minutes) between retries. The default is five minutes.

- Step 4** (Optional) To schedule a specific time for the ASA to poll the Auto Update Server, enter the following command:

```
hostname(config)# auto-update poll-at days-of-the-week time [randomize minutes] [retry-count [retry-period]]
```

The *days-of-the-week* argument is any single day or combination of days: Monday, Tuesday, Wednesday, Thursday, Friday, Saturday, and Sunday. Other possible values are *daily* (Monday through Sunday), *weekdays* (Monday through Friday), and *weekends* (Saturday and Sunday).

The *time* argument specifies the time in the format HH:MM at which to start the poll. For example, 8:00 is 8:00 a.m. and 20:00 is 8:00 p.m.

The **randomize minutes** keyword and argument specify the period to randomize the poll time following the specified start time. The range is from 1 to 1439 minutes.

The *retry\_count* argument specifies how many times to try reconnecting to the Auto Update Server if the first attempt fails. The default is zero.

The *retry\_period* argument specifies how long to wait between connection attempts. The default is five minutes. The range is from 1 to 35791 minutes.

- Step 5** (Optional) If the Auto Update Server has not been contacted for a certain period of time, entering the following command causes it to stop passing traffic:

```
hostname(config)# auto-update timeout period
```

The *period* argument specifies the timeout period in minutes between 1 and 35791. The default is to never time out (zero minutes). To restore the default, enter the **no** form of this command.

Use the **auto-update timeout** command to be sure that the ASA has the most recent image and configuration. This condition is reported with system log message 201008.

In the following example, an ASA is configured to poll an Auto Update Server with the IP address 209.165.200.224, at port number 1742, from the outside interface, with certificate verification.

The ASA is also configured to use the hostname as the device ID and to poll an Auto Update Server every Friday and Saturday night at a random time between 10:00 p.m. and 11:00 p.m. On a failed polling attempt, the ASA will try to reconnect to the Auto Update Server ten times, and will wait three minutes between attempts at reconnecting, as shown in the following example:

```
hostname(config)# auto-update server
https://jcrichon:farscape@209.165.200.224:1742/management source outside
verify-certificate
hostname (config)# auto-update device-id hostname
hostname (config)# auto-update poll-at Friday Saturday 22:00 randomize 60 2 10
```

## Configuring Client Updates as an Auto Update Server

Entering the **client-update** command enables updates for ASAs configured as Auto Update clients and lets you specify the type of software component (ASDM or boot image), the type or family of ASA, revision numbers to which the update applies, and a URL or IP address from which to obtain the update.

To configure the ASA as an Auto Update Server, perform the following steps:

- Step 1** To enable client update, enter the following command:

```
hostname(config)# client-update enable
```

- Step 2** Configure the following parameters for the **client-update** command that you want to apply to the ASAs:

```
client-update {component {asdm | image} | device-id dev_string |
family family_name | type type} url url-string rev-nums rev-nums}
```

The **component** {asdm | image} parameter specifies the software component, either ASDM or the boot image of the ASA.

The **device-id** *dev\_string* parameter specifies a unique string that the Auto Update client uses to identify itself. The maximum length is 63 characters.

The **family** *family\_name* parameter specifies the family name that the Auto Update client uses to identify itself. It can be asa, pix, or a text string with a maximum length of seven characters.

The **rev-nums** *rev-nums* parameter specifies the software or firmware images for this client. Enter up to four, in any order, separated by commas.

The **type** *type* parameter specifies the type of clients to notify of a client update. Because this command is also used to update Windows clients, the list of clients includes several Windows operating systems. The ASAs in the list may include the following:

- asa5505: Cisco 5505 ASA

- asa5510: Cisco 5510 ASA
- asa5520: Cisco 5520 ASA
- asa5540: Cisco 5540 ASA

The **url** *url-string* parameter specifies the URL for the software/firmware image. This URL must point to a file appropriate for this client. For all Auto Update clients, you must use the protocol “http://” or “https://” as the prefix for the URL.

Configure the parameters for the client update that you want to apply to all ASAs of a particular type. That is, specify the type of ASA and the URL or IP address from which to get the updated image. In addition, you must specify a revision number. If the revision number of the remote ASA matches one of the specified revision numbers, there is no need to update the client, and the update is ignored.

To configure a client update for Cisco 5520 ASAs, enter the following command:

```
hostname(config)# client-update type asa5520 component asdm url
http://192.168.1.114/aus/asdm601.bin rev-nums 8.0(1)
```

---

## Viewing Auto Update Status

To view the Auto Update status, enter the following command:

```
hostname(config)# show auto-update
```

The following is sample output from the **show auto-update** command:

```
hostname(config)# show auto-update

Server: https://*****@209.165.200.224:1742/management.cgi?1276
Certificate will be verified
Poll period: 720 minutes, retry count: 2, retry period: 5 minutes
Timeout: none
Device ID: host name [corporate]
Next poll in 4.93 minutes
Last poll: 11:36:46 PST Tue Nov 13 2004
Last PDM update: 23:36:46 PST Tue Nov 12 2004
```

## Downgrading Your Software

When you upgrade to Version 8.3, your configuration is migrated. The old configuration is automatically stored in flash memory. For example, when you upgrade from Version 8.2(1) to 8.3(1), the old 8.2(1) configuration is stored in flash memory in a file called 8\_2\_1\_0\_startup\_cfg.sav.



### Note

You must manually restore the old configuration before downgrading.

---

This section describes how to downgrade and includes the following topics:

- [Information About Activation Key Compatibility, page 81-20](#)
- [Performing the Downgrade, page 81-20](#)

## Information About Activation Key Compatibility

Your activation key remains compatible if you upgrade to the latest version from any previous version. However, you might have issues if you want to maintain downgrade capability:

- Downgrading to Version 8.1 or earlier versions—After you upgrade, if you activate additional feature licenses that were introduced *before 8.2*, the activation key continues to be compatible with earlier versions if you downgrade. However if you activate feature licenses that were introduced in Version 8.2 or later versions, the activation key is not backward compatible. If you have an incompatible license key, see the following guidelines:
  - If you previously entered an activation key in an earlier version, the ASA uses that key (without any of the new licenses you activated in Version 8.2 or later versions).
  - If you have a new system and do not have an earlier activation key, you need to request a new activation key compatible with the earlier version.
- Downgrading to Version 8.2 or earlier versions—Version 8.3 introduced more robust time-based key usage as well as failover license changes:
  - If you have more than one time-based activation key active, when you downgrade, only the most recently activated time-based key can be active. Any other keys are made inactive.
  - If you have mismatched licenses on a failover pair, downgrading will disable failover. Even if the keys are matching, the license used will no longer be a combined license.

## Performing the Downgrade

To downgrade from Version 8.3, perform the following steps:

### Detailed Steps

**Step 1** Enter the following command:

```
hostname(config)# downgrade [/noconfirm] old_image_url old_config_url [activation-key
old_key]
```

Where the **/noconfirm** option downgrades without prompting. The *image\_url* is the path to the old image on disk0, disk1, tftp, ftp, or smb. The *old\_config\_url* is the path to the saved, premigration configuration (by default, this configuration was saved on disk0). If you need to revert to a pre-8.3 activation key, you can enter the old activation key.

This command is a shortcut for completing the following functions:

1. Clearing the boot image configuration (**clear configure boot**).
2. Setting the boot image to be the old image (**boot system**).
3. (Optional) Entering a new activation key (**activation-key**).
4. Saving the running configuration to startup (**write memory**). This action sets the BOOT environment variable to the old image, so when you reload, the old image is loaded.
5. Copying the old configuration to the startup configuration (**copy *old\_config\_url* startup-config**).
6. Reloading (**reload**).

For example:

```
hostname(config)# downgrade /noconfirm disk0:/asa821-k8.bin disk0:/8_2_1_0_startup_cfg.sav
```







# CHAPTER 82

## Troubleshooting

---

This chapter describes how to troubleshoot the ASA and includes the following sections:

- [Testing Your Configuration, page 82-1](#)
- [Reloading the ASA, page 82-8](#)
- [Performing Password Recovery, page 82-8](#)
- [Using the ROM Monitor to Load a Software Image, page 82-11](#)
- [Erasing the Flash File System, page 82-12](#)
- [Other Troubleshooting Tools, page 82-13](#)
- [Common Problems, page 82-14](#)

## Testing Your Configuration

This section describes how to test connectivity for the single mode ASA or for each security context, how to ping the ASA interfaces, and how to allow hosts on one interface to ping through to hosts on another interface.

We recommend that you only enable pinging and debugging messages during troubleshooting. When you are done testing the ASA, follow the steps in the [“Disabling the Test Configuration”](#) section on [page 82-7](#).

This section includes the following topics:

- [Enabling ICMP Debugging Messages and Syslog Messages, page 82-2](#)
- [Pinging ASA Interfaces, page 82-3](#)
- [Passing Traffic Through the ASA, page 82-5](#)
- [Disabling the Test Configuration, page 82-7](#)
- [Determining Packet Routing with Traceroute, page 82-7](#)
- [Tracing Packets with Packet Tracer, page 82-7](#)
- [Handling TCP Packet Loss, page 82-8](#)

## Enabling ICMP Debugging Messages and Syslog Messages

Debugging messages and syslog messages can help you troubleshoot why your pings are not successful. The ASA only shows ICMP debugging messages for pings to the ASA interfaces, and not for pings through the ASA to other hosts. To enable debugging and syslog messages, perform the following steps:

|        | Command                                                                                              | Purpose                                                                                                                                                                                                                                                                                                                           |
|--------|------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Step 1 | <code>debug icmp trace</code><br><br><b>Example:</b><br>hostname(config)# debug icmp trace           | Shows ICMP packet information for pings to the ASA interfaces.                                                                                                                                                                                                                                                                    |
| Step 2 | <code>logging monitor debug</code><br><br><b>Example:</b><br>hostname(config)# logging monitor debug | Sets syslog messages to be sent to Telnet or SSH sessions.<br><br> <b>Note</b> You can alternately use the <b>logging buffer debug</b> command to send log messages to a buffer, and then view them later using the <b>show logging</b> command. |
| Step 3 | <code>terminal monitor</code><br><br><b>Example:</b><br>hostname(config)# terminal monitor           | Sends the syslog messages to a Telnet or SSH session.                                                                                                                                                                                                                                                                             |
| Step 4 | <code>logging on</code><br><br><b>Example:</b><br>hostname(config)# logging on                       | Enables syslog message generation.                                                                                                                                                                                                                                                                                                |

To enable ICMP inspection to the default global policy, perform the following steps:

|        | Command                                                                                                    | Purpose                                                                                        |
|--------|------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------|
| Step 1 | <code>policy-map name</code><br><br><b>Example:</b><br>hostname(config)# policy-map global_policy          | Configures the policy map and attach the action to the class of traffic.                       |
| Step 2 | <code>class classmap_name</code><br><br><b>Example:</b><br>hostname(config-pmap)# class inspection_default | Assigns a class map to the policy map so that you can assign actions to the class map traffic. |
| Step 3 | <code>inspect icmp</code><br><br><b>Example:</b><br>hostname(config)# inspect icmp                         | Enables ICMP inspection.                                                                       |

## Examples

The following example shows a successful ping from an external host (209.165.201.2) to the ASA outside interface (209.165.201.1):

```
hostname(config)# debug icmp trace
Inbound ICMP echo reply (len 32 id 1 seq 256) 209.165.201.1 > 209.165.201.2
Outbound ICMP echo request (len 32 id 1 seq 512) 209.165.201.2 > 209.165.201.1
Inbound ICMP echo reply (len 32 id 1 seq 512) 209.165.201.1 > 209.165.201.2
Outbound ICMP echo request (len 32 id 1 seq 768) 209.165.201.2 > 209.165.201.1
Inbound ICMP echo reply (len 32 id 1 seq 768) 209.165.201.1 > 209.165.201.2
Outbound ICMP echo request (len 32 id 1 seq 1024) 209.165.201.2 > 209.165.201.1
Inbound ICMP echo reply (len 32 id 1 seq 1024) 209.165.201.1 > 209.165.201.2
```

The output shows the ICMP packet length (32 bytes), the ICMP packet identifier (1), and the ICMP sequence number (the ICMP sequence number starts at 0, and is incremented each time that a request is sent).

## Pinging ASA Interfaces

To test whether the ASA interfaces are up and running and that the ASA and connected routers are operating correctly, you can ping the ASA interfaces. To ping the ASA interfaces, perform the following steps:


- Step 1** Draw a diagram of your single-mode ASA or security context that shows the interface names, security levels, and IP addresses.



**Note** Although this procedure uses IP addresses, the **ping** command also supports DNS names and names that are assigned to a local IP address with the **name** command.


The diagram should also include any directly connected routers and a host on the other side of the router from which you will ping the ASA. You will use this information in this procedure and in the procedure in the “[Passing Traffic Through the ASA](#)” section on page 82-5. (See [Figure 82-1](#).)

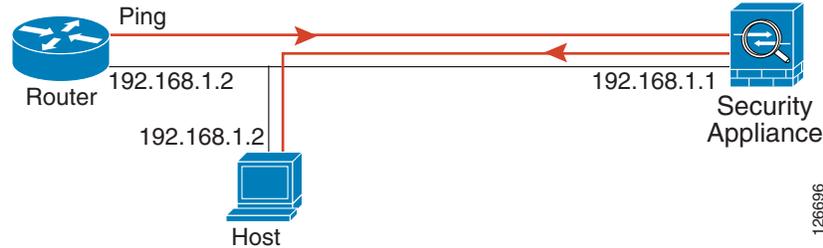

**Figure 82-3 Ping Failure Because of IP Addressing Problems**

- Step 3** Ping each ASA interface from a remote host. For transparent mode, ping the management IP address. This test checks whether the directly connected router can route the packet between the host and the ASA, and whether the ASA can correctly route the packet back to the host.

A ping might fail if the ASA does not have a return route to the host through the intermediate router (see [Figure 82-4](#)). In this case, the debugging messages show that the ping was successful, but syslog message 110001 appears, indicating a routing failure.

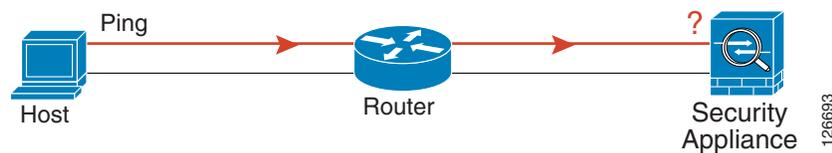**Figure 82-4 Ping Failure Because the Security Appliance has No Return Route**

## Passing Traffic Through the ASA

After you successfully ping the ASA interfaces, make sure that traffic can pass successfully through the ASA. For routed mode, this test shows that NAT is operating correctly, if configured. For transparent mode, which does not use NAT, this test confirms that the ASA is operating correctly. If the ping fails in transparent mode, contact the Cisco TAC.

To ping between hosts on different interfaces, perform the following steps:

|        | Command                                                                                                                                                    | Purpose                                                                                                                                                                                                                                                          |
|--------|------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Step 1 | <code>access-list ICMPACL extended permit icmp any any</code><br><br><b>Example:</b><br>hostname(config)# access-list ICMPACL extended permit icmp any any | Adds an access list to allow ICMP traffic from any source host.<br><br><b>Note</b> By default, when hosts access a lower security interface, all traffic is allowed through. However, to access a higher security interface, you need the preceding access list. |
| Step 2 | <code>access-group ICMPACL in interface interface_name</code><br><br><b>Example:</b><br>hostname(config)# access-group ICMPACL in interface inside         | Assigns the access list to each source interface. Repeat this command for each source interface.                                                                                                                                                                 |

|        |                                                                                                                                                                                                                                                                                                                                                                                                                                                     |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|--------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Step 3 | <pre>class-map ICMP-CLASS match access-list ICMPACL policy-map ICMP-POLICY class ICMP-CLASS inspect icmp service-policy ICMP-POLICY global</pre> <p><b>Example:</b></p> <pre>hostname(config)# class-map ICMP-CLASS hostname(config-cmap)# match access-list ICMPACL hostname(config)# policy-map ICMP-POLICY hostname(config-pmap)# class ICMP-CLASS hostname(config-pmap)# inspect icmp hostname(config)# service-policy ICMP-POLICY global</pre> | <p>Enables the ICMP inspection engine and ensures that ICMP responses may return to the source host.</p> <p>For a host to access a lower security interface, you must enable ICMP inspection. However, to access a higher security interface, you must enable ICMP inspection and the preceding access list.</p> <p> <b>Note</b> Alternatively, you can also apply the ICMP access list to the destination interface to allow ICMP traffic back through the ASA.</p>                                                                                                                                                                                                                                                                                                                                                                                                    |
| Step 4 | <p><b>logging on</b></p> <p><b>Example:</b></p> <pre>hostname(config)# logging on</pre>                                                                                                                                                                                                                                                                                                                                                             | <p>Enables syslog message generation.</p> <p>If the ping succeeds, a syslog message appears to confirm the address translation for routed mode (305009 or 305011) and that an ICMP connection was established (302020). You can also enter either the <b>show xlate</b> or <b>show conns</b> command to view this information.</p> <p>If the ping fails for transparent mode, contact Cisco TAC.</p> <p>For routed mode, the ping might fail because NAT is not configured correctly (see <a href="#">Figure 82-5</a>). In this case, a syslog message appears, showing that the NAT failed (305005 or 305006). If the ping is from an outside host to an inside host, and you do not have a static translation, the following syslog message appears:</p> <pre>%ASA-3-106010: deny inbound icmp.</pre> <p><b>Note</b> The ASA only shows ICMP debugging messages for pings to the ASA interfaces, and not for pings through the ASA to other hosts.</p> |

**Figure 82-5 Ping Failure Because the ASA is Not Translating Addresses**



## Disabling the Test Configuration

After you complete your testing, disable the test configuration that allows ICMP to and through the ASA and that prints debugging messages. If you leave this configuration in place, it can pose a serious security risk. Debugging messages also slow the ASA performance.

To disable the test configuration, perform the following steps:

|        | Command                                                                                                                | Purpose                                                                                |
|--------|------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------|
| Step 1 | <b>no debug icmp trace</b><br><br><b>Example:</b><br>hostname (config)# no debug<br>icmp trace                         | Disables ICMP debugging messages.                                                      |
| Step 2 | <b>no logging on</b><br><br><b>Example:</b><br>hostname (config)# no<br>logging on                                     | Disables logging.                                                                      |
| Step 3 | <b>no access-list ICMPACL</b><br><br><b>Example:</b><br>hostname (config)# no<br>access-list ICMPACL                   | Removes the ICMPACL access list, and deletes the related <b>access-group</b> commands. |
| Step 4 | <b>no service-policy<br/>ICMP-POLICY</b><br><br><b>Example:</b><br>hostname (config)# no<br>service-policy ICMP-POLICY | (Optional) Disables the ICMP inspection engine.                                        |

## Determining Packet Routing with Traceroute

You can trace the route of a packet using the traceroute feature, which is accessed with the **traceroute** command. A traceroute works by sending UDP packets to a destination on an invalid port. Because the port is not valid, the routers along the way to the destination respond with an ICMP Time Exceeded Message, and report that error to the ASA.

## Tracing Packets with Packet Tracer

The packet tracer tool provides packet tracing for packet sniffing and network fault isolation, as well as detailed information about the packets and how they are processed by the ASA. If a configuration command did not cause the packet to drop, the packet tracer tool provides information about the cause in an easily readable manner.

In addition, you can trace the lifespan of a packet through the ASA to see whether the packet is operating correctly with the packet tracer tool. This tool enables you to do the following:

- Debug all packet drops in a production network.
- Verify the configuration is working as intended.
- Show all rules applicable to a packet, along with the CLI commands that caused the rule addition.
- Show a time line of packet changes in a data path.
- Inject tracer packets into the data path.
- Search for an IPv4 or IPv6 address based on the user identity and the FQDN.

To trace packets, enter the following command:

| Command                                                                                                                                                                                                                                                                                                                                                                                                      | Purpose                                                                                                                                                                                                                                   |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <pre>packet-tracer input [ifc_name] [icmp [sip   user username   fqdn fqdn-string] type code ident [dip   fqdn fqdn-string]]   [tcp [sip   user username   fqdn fqdn-string] sport [dip   fqdn fqdn-string] dport]   [udp [sip   user username   fqdn fqdn- string] sport [dip   fqdn fqdn-string] dport]   [rawip [sip   user username   fqdn fqdn-string] [dip   fqdn fqdn-string]] [detailed] [xml]</pre> | <p>Provides detailed information about the packets and how they are processed by the ASA. The example shows how to enable packet tracing from inside host 10.2.25.3 to external host 209.165.202.158, including detailed information.</p> |
| <p><b>Example:</b></p> <pre>hostname# packet-tracer input inside tcp 10.2.25.3 www 209.165.202.158 aol detailed</pre>                                                                                                                                                                                                                                                                                        |                                                                                                                                                                                                                                           |

## Handling TCP Packet Loss

To troubleshoot TCP packet loss, see the [“Customizing the TCP Normalizer with a TCP Map”](#) section on page 53-6 for more information.

## Reloading the ASA

To reload the ASA, enter the following command:

| Command                                                     | Purpose                                                                                   |
|-------------------------------------------------------------|-------------------------------------------------------------------------------------------|
| <pre>reload</pre>                                           | <p>Restarts the ASA.</p>                                                                  |
| <p><b>Example:</b></p> <pre>hostname (config)# reload</pre> | <p><b>Note</b> In multiple mode, you can only reload from the system execution space.</p> |

## Performing Password Recovery

This section describes how to recover passwords if you have forgotten them or you are locked out because of AAA settings, and how to disable password recovery for extra security. This section includes the following topics:

- [Recovering Passwords for the ASA, page 82-9](#)

- [Disabling Password Recovery, page 82-10](#)
- [Resetting the Password on the SSM Hardware Module, page 82-11](#)

## Recovering Passwords for the ASA

To recover passwords for the ASA, perform the following steps:

**Step 1** Connect to the ASA console port according to the instructions in [“Accessing the Appliance Command-Line Interface” section on page 2-1](#).

**Step 2** Power off the ASA, and then power it on.

**Step 3** After startup, press the **Escape** key when you are prompted to enter ROMMON mode.

**Step 4** To update the configuration register value, enter the following command:

```
rommon #1> confreg 0x41
Update Config Register (0x41) in NVRAM...
```

**Step 5** To set the ASA to ignore the startup configuration, enter the following command:

```
rommon #1> confreg
```

The ASA displays the current configuration register value, and asks whether you want to change it:

```
Current Configuration Register: 0x00000041
Configuration Summary:
 boot default image from Flash
 ignore system configuration
```

```
Do you wish to change this configuration? y/n [n]: y
```

**Step 6** Record the current configuration register value, so you can restore it later.

**Step 7** At the prompt, enter **Y** to change the value.

The ASA prompts you for new values.

**Step 8** Accept the default values for all settings. At the prompt, enter **Y**.

**Step 9** Reload the ASA by entering the following command:

```
rommon #2> boot
Launching BootLoader...
Boot configuration file contains 1 entry.

Loading disk0:/asa800-226-k8.bin... Booting...Loading...
```

The ASA loads the default configuration instead of the startup configuration.

**Step 10** Access the privileged EXEC mode by entering the following command:

```
hostname# enable
```

**Step 11** When prompted for the password, press **Enter**.

The password is blank.

**Step 12** Load the startup configuration by entering the following command:

```
hostname# copy startup-config running-config
```

**Step 13** Access the global configuration mode by entering the following command:

```
hostname# configure terminal
```

**Step 14** Change the passwords, as required, in the default configuration by entering the following commands:

```
hostname(config)# password password
hostname(config)# enable password password
hostname(config)# username name password password
```

**Step 15** Load the default configuration by entering the following command:

```
hostname(config)# no config-register
```

The default configuration register value is 0x1. For more information about the configuration register, see the command reference.

**Step 16** Save the new passwords to the startup configuration by entering the following command:

```
hostname(config)# copy running-config startup-config
```

## Disabling Password Recovery

To disable password recovery to ensure that unauthorized users cannot use the password recovery mechanism to compromise the ASA, enter the following command:

| Command                                                            | Purpose                     |
|--------------------------------------------------------------------|-----------------------------|
| <code>no service password-recovery</code>                          | Disables password recovery. |
| <b>Example:</b><br>hostname (config)# no service password-recovery |                             |

On the ASA, the **no service password-recovery** command prevents you from entering ROMMON mode with the configuration intact. When you enter ROMMON mode, the ASA prompts you to erase all Flash file systems. You cannot enter ROMMON mode without first performing this erasure. If you choose not to erase the Flash file system, the ASA reloads. Because password recovery depends on using ROMMON mode and maintaining the existing configuration, this erasure prevents you from recovering a password. However, disabling password recovery prevents unauthorized users from viewing the configuration or inserting different passwords. In this case, to restore the system to an operating state, load a new image and a backup configuration file, if available.

The **service password-recovery** command appears in the configuration file for information only. When you enter the command at the CLI prompt, the setting is saved in NVRAM. The only way to change the setting is to enter the command at the CLI prompt. Loading a new configuration with a different version of the command does not change the setting. If you disable password recovery when the ASA is configured to ignore the startup configuration at startup (in preparation for password recovery), then the ASA changes the setting to load the startup configuration as usual. If you use failover, and the standby unit is configured to ignore the startup configuration, then the same change is made to the configuration register when the **no service password recovery** command replicates to the standby unit.

## Resetting the Password on the SSM Hardware Module

To reset the password to the default of “cisco” on the SSM hardware module, enter the following command:



**Note**

Make sure that the SSM hardware module is in the Up state and supports password reset.

| Command                                                                                                      | Purpose                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|--------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <pre>hw-module module 1 password-reset Reset the password on module in slot 1? [confirm] y hostname# y</pre> | <p>Where <i>1</i> is the specified slot number on the SSM hardware module.</p> <p> <b>Note</b> On the AIP SSM, entering this command reboots the hardware module. The module is offline until the rebooting is finished. Enter the <b>show module</b> command to monitor the module status. The AIP SSM supports this command in version 6.0 and later.</p> <p>On the CSC SSM, entering this command resets web services on the hardware module after the password has been reset. You may lose connection to ASDM or be logged out of the hardware module. The CSC SSM supports this command in the most recent version of 6.3, dated January 2010, and later releases.</p> |

## Using the ROM Monitor to Load a Software Image

To load a software image to an ASA from the ROM monitor mode using TFTP, perform the following steps:

- Step 1** Connect to the ASA console port according to the instructions in the [“Accessing the Appliance Command-Line Interface”](#) section on page 2-1.
- Step 2** Power off the ASA, then power it on.
- Step 3** During startup, press the **Escape** key when you are prompted to enter ROMMON mode.
- Step 4** In ROMMON mode, define the interface settings to the ASA, including the IP address, TFTP server address, gateway address, software image file, and port, as follows:

```
rommon #1> ADDRESS=10.132.44.177
rommon #2> SERVER=10.129.0.30
rommon #3> GATEWAY=10.132.44.1
rommon #4> IMAGE=f1/asa840-232-k8.bin
rommon #5> PORT=Ethernet0/0
Ethernet0/0
Link is UP
MAC Address: 0012.d949.15b8
```



**Note**

Be sure that the connection to the network already exists.

- Step 5** To validate your settings, enter the **set** command.

```
rommon #6> set
ROMMON Variable Settings:
```

```

ADDRESS=10.132.44.177
SERVER=10.129.0.30
GATEWAY=10.132.44.1
PORT=Ethernet0/0
VLAN=untagged
IMAGE=f1/asa840-232-k8.bin
CONFIG=
LINKTIMEOUT=20
PKTTIMEOUT=4
RETRY=20

```

**Step 6** Ping the TFTP server by entering the **ping server** command.

```

rommon #7> ping server
Sending 20, 100-byte ICMP Echoes to server 10.129.0.30, timeout is 4 seconds:

Success rate is 100 percent (20/20)

```

**Step 7** Load the software image by entering the **tftp** command.

```

rommon #8> tftp
ROMMON Variable Settings:
 ADDRESS=10.132.44.177
 SERVER=10.129.0.30
 GATEWAY=10.132.44.1
 PORT=Ethernet0/0
 VLAN=untagged
 IMAGE=f1/asa840-232-k8.bin
 CONFIG=
 LINKTIMEOUT=20
 PKTTIMEOUT=4
 RETRY=20

tftp f1/asa840-232-k8.bin@10.129.0.30 via 10.132.44.1

Received 14450688 bytes

Launching TFTP Image...
Cisco ASA Security Appliance admin loader (3.0) #0: Mon Mar 5 16:00:07 MST 2011

Loading...

```

After the software image is successfully loaded, the ASA automatically exits ROMMON mode.

**Step 8** To verify that the correct software image has been loaded into the ASA, check the version by entering the following command:

```
hostname# show version
```

## Erasing the Flash File System

To erase the flash file system, perform the following steps:

- Step 1** Connect to the ASA console port according to the instructions in [“Accessing the Appliance Command-Line Interface”](#) section on page 2-1.
- Step 2** Power off the ASA, then power it on.
- Step 3** During startup, press the **Escape** key when you are prompted to enter ROMMON mode.

- Step 4** Enter the **erase** command, which overwrites all files and erases the file system, including hidden system files.

```
rommon #1> erase [disk0: | disk1: | flash:]
```

---

## Other Troubleshooting Tools

The ASA provides other troubleshooting tools that you can use. This section includes the following topics:

- [Viewing Debugging Messages, page 82-13](#)
- [Capturing Packets, page 82-14](#)
- [Viewing the Crash Dump, page 82-14](#)
- [Coredump, page 82-14](#)
- [Monitoring Per-Process CPU Usage, page 82-14](#)

## Viewing Debugging Messages

Because debugging output is assigned high priority in the CPU process, it can render the system unusable. For this reason, use **debug** commands only to troubleshoot specific problems or during troubleshooting sessions with Cisco TAC. Moreover, it is best to use **debug** commands during periods

of less network traffic and fewer users. Debugging during these periods decreases the likelihood that increased **debug** command processing overhead will affect system use. To enable debugging messages, see the **debug** commands in the *command reference*.

## Capturing Packets

Capturing packets is sometimes useful when troubleshooting connectivity problems or monitoring suspicious activity. We recommend that you contact the Cisco TAC if you want to use the packet capture feature. See the **capture** command in the *command reference*.

## Viewing the Crash Dump

If the ASA crashes, you can view the crash dump information. We recommend contacting Cisco TAC if you want to interpret the crash dump. See the **show crashdump** command in the *command reference*.

## Coredump

A coredump is a snapshot of the running program when the program has terminated abnormally, or crashed. Coredumps are used to diagnose or debug errors and save a crash for future off-site analysis. Cisco TAC may request that users enable the coredump feature to troubleshoot application or system crashes on the ASA. See the **coredump** command in the *command reference*.

## Monitoring Per-Process CPU Usage

You can monitor the processes that run on the CPU. You can obtain information about the percentage of CPU that is used by a certain process. CPU usage statistics are sorted in descending order to display the highest consumer at the top. Also included is information about the load on the CPU per process, at 5 seconds, 1 minute, and 5 minutes before the log time. This information is updated automatically every 5 seconds to provide real-time statistics. You can use the **show process cpu-usage sorted** command to find a breakdown of the process-related load-to-CPU that is consumed by any configured contexts.

## Common Problems

This section describes common problems with the ASA, and how you might resolve them.

**Symptom** The context configuration was not saved, and was lost when you reloaded.

**Possible Cause** You did not save each context within the context execution space. If you are configuring contexts at the command line, you did not save the current context before you changed to the next context.

**Recommended Action** Save each context within the context execution space using the **copy start run** command. Load the startup configuration as your active configuration. Then change the password and then enter the **copy run start** command. You cannot save contexts from the system execution space.

**Symptom** You cannot make a Telnet or SSH connection to the ASA interface.

**Possible Cause** You did not enable Telnet or SSH to the ASA.

**Recommended Action** Enable Telnet or SSH to the ASA according to the instructions in the [“Configuring ASA Access for ASDM, Telnet, or SSH”](#) section on page 37-1.

**Symptom** You cannot ping the ASA interface.

**Possible Cause** You disabled ICMP to the ASA.

**Recommended Action** Enable ICMP to the ASA for your IP address using the **icmp** command.

**Symptom** You cannot ping through the ASA, although the access list allows it.

**Possible Cause** You did not enable the ICMP inspection engine or apply access lists on both the ingress and egress interfaces.

**Recommended Action** Because ICMP is a connectionless protocol, the ASA does not automatically allow returning traffic through. In addition to an access list on the ingress interface, you either need to apply an access list to the egress interface to allow replying traffic, or enable the ICMP inspection engine, which treats ICMP connections as stateful connections.

**Symptom** Traffic does not pass between two interfaces on the same security level.

**Possible Cause** You did not enable the feature that allows traffic to pass between interfaces at the same security level.

**Recommended Action** Enable this feature according to the instructions in the [“Allowing Same Security Level Communication”](#) section on page 8-15.

**Symptom** IPsec tunnels do not duplicate during a failover to the standby device.

**Possible Cause** The switch port that the ASA is plugged into is set to 10/100 instead of 1000.

**Recommended Action** Set the switch port that the ASA is plugged into to 1000.





## **PART 19**

### **Reference**





## Using the Command-Line Interface

---

This appendix describes how to use the CLI on the ASA and includes the following sections:

- [Firewall Mode and Security Context Mode, page A-1](#)
- [Command Modes and Prompts, page A-2](#)
- [Syntax Formatting, page A-3](#)
- [Abbreviating Commands, page A-3](#)
- [Command-Line Editing, page A-3](#)
- [Command Completion, page A-4](#)
- [Command Help, page A-4](#)
- [Filtering show Command Output, page A-4](#)
- [Command Output Paging, page A-5](#)
- [Adding Comments, page A-5](#)
- [Text Configuration Files, page A-5](#)
- [Supported Character Sets, page A-8](#)

**Note**

The CLI uses similar syntax and other conventions to the Cisco IOS CLI, but the ASA operating system is not a version of Cisco IOS software. Do not assume that a Cisco IOS CLI command works with or has the same function on the ASA.

---

## Firewall Mode and Security Context Mode

The ASA runs in a combination of the following modes:

- Transparent firewall or routed firewall mode  
The firewall mode determines if the ASA runs as a Layer 2 or Layer 3 firewall.
- Multiple context or single context mode  
The security context mode determines if the ASA runs as a single device or as multiple security contexts, which act like virtual devices.

Some commands are only available in certain modes.

# Command Modes and Prompts

The ASA CLI includes command modes. Some commands can only be entered in certain modes. For example, to enter commands that show sensitive information, you need to enter a password and enter a more privileged mode. Then, to ensure that configuration changes are not entered accidentally, you have to enter a configuration mode. All lower commands can be entered in higher modes, for example, you can enter a privileged EXEC command in global configuration mode.



## Note

The various types of prompts are all default prompts and when configured, they can be different.

- When you are in the system configuration or in single context mode, the prompt begins with the hostname:  
hostname
- When printing the prompt string, the prompt configuration is parsed and the configured keyword values are printed in the order in which you have set the **prompt** command. The keyword arguments can be any of the following and in any order: hostname, domain, context, priority, state.  
asa(config)# **prompt hostname context priority state**
- When you are within a context, the prompt begins with the hostname followed by the context name:  
hostname/context

The prompt changes depending on the access mode:

- User EXEC mode  
User EXEC mode lets you see minimum ASA settings. The user EXEC mode prompt appears as follows when you first access the ASA:  
hostname>  
hostname/context>
- Privileged EXEC mode  
Privileged EXEC mode lets you see all current settings up to your privilege level. Any user EXEC mode command will work in privileged EXEC mode. Enter the **enable** command in user EXEC mode, which requires a password, to start privileged EXEC mode. The prompt includes the number sign (#):  
hostname#  
hostname/context#
- Global configuration mode  
Global configuration mode lets you change the ASA configuration. All user EXEC, privileged EXEC, and global configuration commands are available in this mode. Enter the **configure terminal** command in privileged EXEC mode to start global configuration mode. The prompt changes to the following:  
hostname(config)#  
hostname/context(config)#
- Command-specific configuration modes

From global configuration mode, some commands enter a command-specific configuration mode. All user EXEC, privileged EXEC, global configuration, and command-specific configuration commands are available in this mode. For example, the **interface** command enters interface configuration mode. The prompt changes to the following:

```
hostname(config-if)#

hostname/context(config-if)#
```

## Syntax Formatting

Command syntax descriptions use the conventions listed in [Table A-1](#).

**Table A-1**      **Syntax Conventions**

| Convention     | Description                                                                                                                                                                                                                  |
|----------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>bold</b>    | Bold text indicates commands and keywords that you enter literally as shown.                                                                                                                                                 |
| <i>italics</i> | Italic text indicates arguments for which you supply values.                                                                                                                                                                 |
| [x]            | Square brackets enclose an optional element (keyword or argument).                                                                                                                                                           |
|                | A vertical bar indicates a choice within an optional or required set of keywords or arguments.                                                                                                                               |
| [x   y]        | Square brackets enclosing keywords or arguments separated by a vertical bar indicate an optional choice.                                                                                                                     |
| {x   y}        | Braces enclosing keywords or arguments separated by a vertical bar indicate a required choice.                                                                                                                               |
| [x {y   z}]    | Nested sets of square brackets or braces indicate optional or required choices within optional or required elements. Braces and a vertical bar within square brackets indicate a required choice within an optional element. |

## Abbreviating Commands

You can abbreviate most commands down to the fewest unique characters for a command; for example, you can enter **wr t** to view the configuration instead of entering the full command **write terminal**, or you can enter **en** to start privileged mode and **conf t** to start configuration mode. In addition, you can enter **0** to represent **0.0.0.0**.

## Command-Line Editing

The ASA uses the same command-line editing conventions as Cisco IOS software. You can view all previously entered commands with the **show history** command or individually with the up arrow or **^p** command. Once you have examined a previously entered command, you can move forward in the list with the down arrow or **^n** command. When you reach a command you wish to reuse, you can edit it or press the **Enter** key to start it. You can also delete the word to the left of the cursor with **^w**, or erase the line with **^u**.

The ASA permits up to 512 characters in a command; additional characters are ignored.

## Command Completion

To complete a command or keyword after entering a partial string, press the **Tab** key. The ASA only completes the command or keyword if the partial string matches only one command or keyword. For example, if you enter `s` and press the **Tab** key, the ASA does not complete the command because it matches more than one command. However, if you enter `dis`, the **Tab** key completes the `disable` command.

## Command Help

Help information is available from the command line by entering the following commands:

- `help command_name`  
Shows help for the specific command.
- `command_name ?`  
Shows a list of arguments available.
- `string?` (no space)  
Lists the possible commands that start with the string.
- `? and +?`  
Lists all commands available. If you enter `?`, the ASA shows only commands available for the current mode. To show all commands available, including those for lower modes, enter `+?`.



### Note

If you want to include a question mark (?) in a command string, you must press **Ctrl-V** before typing the question mark so that you do not inadvertently invoke CLI help.

## Filtering show Command Output

You can use the vertical bar (|) with any **show** command and include a filter option and filtering expression. The filtering is performed by matching each output line with a regular expression, similar to Cisco IOS software. By selecting different filter options you can include or exclude all output that matches the expression. You can also display all output beginning with the line that matches the expression.

The syntax for using filtering options with the **show** command is as follows:

```
hostname# show command | {include | exclude | begin | grep [-v]} regexp
```

In this command string, the first vertical bar (|) is the operator and must be included in the command. This operator directs the output of the **show** command to the filter. In the syntax diagram, the other vertical bars (|) indicate alternative options and are not part of the command.

The **include** option includes all output lines that match the regular expression. The **grep** option without **-v** has the same effect. The **exclude** option excludes all output lines that match the regular expression. The **grep** option with **-v** has the same effect. The **begin** option shows all the output lines starting with the line that matches the regular expression.

Replace *regex* with any Cisco IOS regular expression. The regular expression is not enclosed in quotes or double-quotes, so be careful with trailing white spaces, which will be taken as part of the regular expression.

When creating regular expressions, you can use any letter or number that you want to match. In addition, certain keyboard characters called *metacharacters* have special meaning when used in regular expressions.

Use **Ctrl+V** to escape all of the special characters in the CLI, such as a question mark (?) or a tab. For example, type **d[Ctrl+V]?g** to enter **d?g** in the configuration.

For a list of metacharacters, see [Table 13-2 on page 13-13](#).

## Command Output Paging

For commands such as **help** or **?**, **show**, **show xlate**, or other commands that provide long listings, you can determine if the information displays a screen and pauses, or lets the command run to completion. The **pager** command lets you choose the number of lines to display before the More prompt appears.

When paging is enabled, the following prompt appears:

```
<--- More --->
```

The More prompt uses syntax similar to the UNIX **more** command:

- To view another screen, press the **Space** bar.
- To view the next line, press the **Enter** key.
- To return to the command line, press the **q** key.

## Adding Comments

You can precede a line with a colon (:) to create a comment. However, the comment only appears in the command history buffer and not in the configuration. Therefore, you can view the comment with the **show history** command or by pressing an arrow key to retrieve a previous command, but because the comment is not in the configuration, the **write terminal** command does not display it.

## Text Configuration Files

This section describes how to format a text configuration file that you can download to the ASA, and includes the following topics:

- [How Commands Correspond with Lines in the Text File, page A-6](#)
- [Command-Specific Configuration Mode Commands, page A-6](#)
- [Automatic Text Entries, page A-7](#)
- [Line Order, page A-7](#)
- [Commands Not Included in the Text Configuration, page A-7](#)
- [Passwords, page A-7](#)
- [Multiple Security Context Files, page A-7](#)

## How Commands Correspond with Lines in the Text File

The text configuration file includes lines that correspond with the commands described in this guide.

In examples, commands are preceded by a CLI prompt. The prompt in the following example is “hostname(config)#”:

```
hostname(config)# context a
```

In the text configuration file you are not prompted to enter commands, so the prompt is omitted:

```
context a
```

## Command-Specific Configuration Mode Commands

Command-specific configuration mode commands appear indented under the main command when entered at the command line. Your text file lines do not need to be indented, as long as the commands appear directly following the main command. For example, the following unindented text is read the same as indented text:

```
interface gigabitethernet0/0
nameif inside
interface gigabitethernet0/1
 nameif outside
```

## Automatic Text Entries

When you download a configuration to the ASA, it inserts some lines automatically. For example, the ASA inserts lines for default settings or for the time the configuration was modified. You do not need to enter these automatic entries when you create your text file.

## Line Order

For the most part, commands can be in any order in the file. However, some lines, such as ACEs, are processed in the order they appear, and the order can affect the function of the access list. Other commands might also have order requirements. For example, you must enter the **nameif** command for an interface first because many subsequent commands use the name of the interface. Also, commands in a command-specific configuration mode must directly follow the main command.

## Commands Not Included in the Text Configuration

Some commands do not insert lines in the configuration. For example, a runtime command such as **show running-config** does not have a corresponding line in the text file.

## Passwords

The login, enable, and user passwords are automatically encrypted before they are stored in the configuration. For example, the encrypted form of the password “cisco” might look like jMorNbK0514fadBh. You can copy the configuration passwords to another ASA in its encrypted form, but you cannot unencrypt the passwords yourself.

If you enter an unencrypted password in a text file, the ASA does not automatically encrypt it when you copy the configuration to the ASA. The ASA only encrypts it when you save the running configuration from the command line using the **copy running-config startup-config** or **write memory** command.

## Multiple Security Context Files

For multiple security contexts, the entire configuration consists of the following multiple parts:

- The security context configurations
- The system configuration, which identifies basic settings for the ASA, including a list of contexts
- The admin context, which provides network interfaces for the system configuration

The system configuration does not include any interfaces or network settings for itself. Rather, when the system needs to access network resources (such as downloading the contexts from the server), it uses a context that is designated as the admin context.

Each context is similar to a single context mode configuration. The system configuration differs from a context configuration in that the system configuration includes system-only commands (such as a list of all contexts) while other typical commands are not present (such as many interface parameters).

# Supported Character Sets

The ASA CLI currently supports UTF-8 encoding only. UTF-8 is the particular encoding scheme for Unicode symbols, and has been designed to be compatible with an ASCII subset of symbols. ASCII characters are represented in UTF-8 as one-byte characters. All other characters are represented in UTF-8 as multibyte symbols.

The ASCII printable characters (0x20 to 0x7e) are fully supported. The printable ASCII characters are the same as ISO 8859-1. UTF-8 is a superset of ISO 8859-1, so the first 256 characters (0-255) are the same as ISO 8859-1. The ASA CLI supports up to 255 characters (multibyte characters) of ISO 8859-1.



## APPENDIX **B**

# Addresses, Protocols, and Ports

---

This appendix provides a quick reference for IP addresses, protocols, and applications. This appendix includes the following sections:

- [IPv4 Addresses and Subnet Masks, page B-1](#)
- [IPv6 Addresses, page B-5](#)
- [Protocols and Applications, page B-11](#)
- [TCP and UDP Ports, page B-11](#)
- [Local Ports and Protocols, page B-14](#)
- [ICMP Types, page B-15](#)

## IPv4 Addresses and Subnet Masks

This section describes how to use IPv4 addresses in the ASA. An IPv4 address is a 32-bit number written in dotted-decimal notation: four 8-bit fields (octets) converted from binary to decimal numbers, separated by dots. The first part of an IP address identifies the network on which the host resides, while the second part identifies the particular host on the given network. The network number field is called the network prefix. All hosts on a given network share the same network prefix but must have a unique host number. In classful IP, the class of the address determines the boundary between the network prefix and the host number.

This section includes the following topics:

- [Classes, page B-1](#)
- [Private Networks, page B-2](#)
- [Subnet Masks, page B-2](#)

## Classes

IP host addresses are divided into three different address classes: Class A, Class B, and Class C. Each class fixes the boundary between the network prefix and the host number at a different point within the 32-bit address. Class D addresses are reserved for multicast IP.

- Class A addresses (1.xxx.xxx.xxx through 126.xxx.xxx.xxx) use only the first octet as the network prefix.

- Class B addresses (128.0.xxx.xxx through 191.255.xxx.xxx) use the first two octets as the network prefix.
- Class C addresses (192.0.0.xxx through 223.255.255.xxx) use the first three octets as the network prefix.

Because Class A addresses have 16,777,214 host addresses, and Class B addresses 65,534 hosts, you can use subnet masking to break these huge networks into smaller subnets.

## Private Networks

If you need large numbers of addresses on your network, and they do not need to be routed on the Internet, you can use private IP addresses that the Internet Assigned Numbers Authority (IANA) recommends (see RFC 1918). The following address ranges are designated as private networks that should not be advertised:

- 10.0.0.0 through 10.255.255.255
- 172.16.0.0 through 172.31.255.255
- 192.168.0.0 through 192.168.255.255

## Subnet Masks

A subnet mask lets you convert a single Class A, B, or C network into multiple networks. With a subnet mask, you can create an extended network prefix that adds bits from the host number to the network prefix. For example, a Class C network prefix always consists of the first three octets of the IP address. But a Class C extended network prefix uses part of the fourth octet as well.

Subnet masking is easy to understand if you use binary notation instead of dotted decimal. The bits in the subnet mask have a one-to-one correspondence with the Internet address:

- The bits are set to 1 if the corresponding bit in the IP address is part of the extended network prefix.
- The bits are set to 0 if the bit is part of the host number.

**Example 1:** If you have the Class B address 129.10.0.0 and you want to use the entire third octet as part of the extended network prefix instead of the host number, then you must specify a subnet mask of 11111111.11111111.11111111.00000000. This subnet mask converts the Class B address into the equivalent of a Class C address, where the host number consists of the last octet only.

**Example 2:** If you want to use only part of the third octet for the extended network prefix, then you must specify a subnet mask like 11111111.11111111.11111000.00000000, which uses only 5 bits of the third octet for the extended network prefix.

You can write a subnet mask as a dotted-decimal mask or as a */bits* (“slash bits”) mask. In Example 1, for a dotted-decimal mask, you convert each binary octet into a decimal number: 255.255.255.0. For a */bits* mask, you add the number of 1s: /24. In Example 2, the decimal number is 255.255.248.0 and the */bits* is /21.

You can also supernet multiple Class C networks into a larger network by using part of the third octet for the extended network prefix. For example, 192.168.0.0/20.

This section includes the following topics:

- [Determining the Subnet Mask, page B-3](#)
- [Determining the Address to Use with the Subnet Mask, page B-3](#)

## Determining the Subnet Mask

To determine the subnet mask based on how many hosts you want, see [Table B-1](#).

**Table B-1** *Hosts, Bits, and Dotted-Decimal Masks*

| Hosts <sup>1</sup> | /Bits Mask | Dotted-Decimal Mask                 |
|--------------------|------------|-------------------------------------|
| 16,777,216         | /8         | 255.0.0.0 Class A Network           |
| 65,536             | /16        | 255.255.0.0 Class B Network         |
| 32,768             | /17        | 255.255.128.0                       |
| 16,384             | /18        | 255.255.192.0                       |
| 8192               | /19        | 255.255.224.0                       |
| 4096               | /20        | 255.255.240.0                       |
| 2048               | /21        | 255.255.248.0                       |
| 1024               | /22        | 255.255.252.0                       |
| 512                | /23        | 255.255.254.0                       |
| 256                | /24        | 255.255.255.0 Class C Network       |
| 128                | /25        | 255.255.255.128                     |
| 64                 | /26        | 255.255.255.192                     |
| 32                 | /27        | 255.255.255.224                     |
| 16                 | /28        | 255.255.255.240                     |
| 8                  | /29        | 255.255.255.248                     |
| 4                  | /30        | 255.255.255.252                     |
| Do not use         | /31        | 255.255.255.254                     |
| 1                  | /32        | 255.255.255.255 Single Host Address |

1. The first and last number of a subnet are reserved, except for /32, which identifies a single host.

## Determining the Address to Use with the Subnet Mask

The following sections describe how to determine the network address to use with a subnet mask for a Class C-size and a Class B-size network. This section includes the following topics:

- [Class C-Size Network Address, page B-3](#)
- [Class B-Size Network Address, page B-4](#)

### Class C-Size Network Address

For a network between 2 and 254 hosts, the fourth octet falls on a multiple of the number of host addresses, starting with 0. For example, [Table B-2](#) shows the 8-host subnets (/29) of 192.168.0.x.

**Table B-2** *Class C-Size Network Address*

| Subnet with Mask /29 (255.255.255.248) | Address Range <sup>1</sup>  |
|----------------------------------------|-----------------------------|
| 192.168.0.0                            | 192.168.0.0 to 192.168.0.7  |
| 192.168.0.8                            | 192.168.0.8 to 192.168.0.15 |

**Table B-2** Class C-Size Network Address (continued)

| Subnet with Mask /29 (255.255.255.248) | Address Range <sup>1</sup>     |
|----------------------------------------|--------------------------------|
| 192.168.0.16                           | 192.168.0.16 to 192.168.0.31   |
| —                                      | —                              |
| 192.168.0.248                          | 192.168.0.248 to 192.168.0.255 |

1. The first and last address of a subnet are reserved. In the first subnet example, you cannot use 192.168.0.0 or 192.168.0.7.

## Class B-Size Network Address

To determine the network address to use with the subnet mask for a network with between 254 and 65,534 hosts, you need to determine the value of the third octet for each possible extended network prefix. For example, you might want to subnet an address like 10.1.x.0, where the first two octets are fixed because they are used in the extended network prefix, and the fourth octet is 0 because all bits are used for the host number.

To determine the value of the third octet, follow these steps:

- 
- Step 1** Calculate how many subnets you can make from the network by dividing 65,536 (the total number of addresses using the third and fourth octet) by the number of host addresses you want.
- For example, 65,536 divided by 4096 hosts equals 16.
- Therefore, there are 16 subnets of 4096 addresses each in a Class B-size network.
- Step 2** Determine the multiple of the third octet value by dividing 256 (the number of values for the third octet) by the number of subnets:
- In this example,  $256/16 = 16$ .
- The third octet falls on a multiple of 16, starting with 0.
- Therefore, [Table B-3](#) shows the 16 subnets of the network 10.1.

**Table B-3** Subnets of Network

| Subnet with Mask /20 (255.255.240.0) | Address Range <sup>1</sup> |
|--------------------------------------|----------------------------|
| 10.1.0.0                             | 10.1.0.0 to 10.1.15.255    |
| 10.1.16.0                            | 10.1.16.0 to 10.1.31.255   |
| 10.1.32.0                            | 10.1.32.0 to 10.1.47.255   |
| —                                    | —                          |
| 10.1.240.0                           | 10.1.240.0 to 10.1.255.255 |

1. The first and last address of a subnet are reserved. In the first subnet example, you cannot use 10.1.0.0 or 10.1.15.255.

# IPv6 Addresses

IPv6 is the next generation of the Internet Protocol after IPv4. It provides an expanded address space, a simplified header format, improved support for extensions and options, flow labeling capability, and authentication and privacy capabilities. IPv6 is described in RFC 2460. The IPv6 addressing architecture is described in RFC 3513.

This section describes the IPv6 address format and architecture and includes the following topics:

- [IPv6 Address Format, page B-5](#)
- [IPv6 Address Types, page B-6](#)
- [IPv6 Address Prefixes, page B-10](#)



## Note

This section describes the IPv6 address format, the types, and prefixes. For information about configuring the ASA to use IPv6, see the [“Configuring IPv6 Addressing” section on page 8-11](#)

## IPv6 Address Format

IPv6 addresses are represented as a series of eight 16-bit hexadecimal fields separated by colons (:) in the format: x:x:x:x:x:x:x. The following are two examples of IPv6 addresses:

- 2001:0DB8:7654:3210:FEDC:BA98:7654:3210
- 2001:0DB8:0000:0000:0008:0800:200C:417A



## Note

The hexadecimal letters in IPv6 addresses are not case-sensitive.

You do not need to include the leading zeros in an individual field of the address, but each field must contain at least one digit. So the example address 2001:0DB8:0000:0000:0008:0800:200C:417A can be shortened to 2001:0DB8:0:0:8:800:200C:417A by removing the leading zeros from the third through sixth fields from the left. The fields that contained all zeros (the third and fourth fields from the left) were shortened to a single zero. The fifth field from the left had the three leading zeros removed, leaving a single 8 in that field, and the sixth field from the left had the one leading zero removed, leaving 800 in that field.

It is common for IPv6 addresses to contain several consecutive hexadecimal fields of zeros. You can use two colons (::) to compress consecutive fields of zeros at the beginning, middle, or end of an IPv6 address (the colons represent the successive hexadecimal fields of zeros). [Table B-4](#) shows several examples of address compression for different types of IPv6 address.

**Table B-4** IPv6 Address Compression Examples

| Address Type | Standard Form               | Compressed Form        |
|--------------|-----------------------------|------------------------|
| Unicast      | 2001:0DB8:0:0:0:BA98:0:3210 | 2001:0DB8::BA98:0:3210 |
| Multicast    | FF01:0:0:0:0:0:0:101        | FF01::101              |
| Loopback     | 0:0:0:0:0:0:0:1             | ::1                    |
| Unspecified  | 0:0:0:0:0:0:0:0             | ::                     |

**Note**


---

Two colons (::) can be used only once in an IPv6 address to represent successive fields of zeros.

---

An alternative form of the IPv6 format is often used when dealing with an environment that contains both IPv4 and IPv6 addresses. This alternative has the format `x:x:x:x:x:y.y.y.y`, where `x` represent the hexadecimal values for the six high-order parts of the IPv6 address and `y` represent decimal values for the 32-bit IPv4 part of the address (which takes the place of the remaining two 16-bit parts of the IPv6 address). For example, the IPv4 address 192.168.1.1 could be represented as the IPv6 address `0:0:0:0:0:FFFF:192.168.1.1` or `::FFFF:192.168.1.1`.

## IPv6 Address Types

The following are the three main types of IPv6 addresses:

- **Unicast**—A unicast address is an identifier for a single interface. A packet sent to a unicast address is delivered to the interface identified by that address. An interface may have more than one unicast address assigned to it.
- **Multicast**—A multicast address is an identifier for a set of interfaces. A packet sent to a multicast address is delivered to all addresses identified by that address.
- **Anycast**—An anycast address is an identifier for a set of interfaces. Unlike a multicast address, a packet sent to an anycast address is only delivered to the “nearest” interface, as determined by the measure of distances for the routing protocol.

**Note**


---

There are no broadcast addresses in IPv6. Multicast addresses provide the broadcast functionality.

---

This section includes the following topics:

- [Unicast Addresses, page B-6](#)
- [Multicast Address, page B-8](#)
- [Anycast Address, page B-9](#)
- [Required Addresses, page B-10](#)

## Unicast Addresses

This section describes IPv6 unicast addresses. Unicast addresses identify an interface on a network node.

This section includes the following topics:

- [Global Address, page B-7](#)
- [Site-Local Address, page B-7](#)
- [Link-Local Address, page B-7](#)
- [IPv4-Compatible IPv6 Addresses, page B-7](#)
- [Unspecified Address, page B-8](#)
- [Loopback Address, page B-8](#)
- [Interface Identifiers, page B-8](#)

## Global Address

The general format of an IPv6 global unicast address is a global routing prefix followed by a subnet ID followed by an interface ID. The global routing prefix can be any prefix not reserved by another IPv6 address type (see the “[IPv6 Address Prefixes](#)” section on page B-10, for information about the IPv6 address type prefixes).

All global unicast addresses, other than those that start with binary 000, have a 64-bit interface ID in the Modified EUI-64 format. See the “[Interface Identifiers](#)” section on page B-8, for more information about the Modified EUI-64 format for interface identifiers.

Global unicast address that start with the binary 000 do not have any constraints on the size or structure of the interface ID portion of the address. One example of this type of address is an IPv6 address with an embedded IPv4 address (see the “[IPv4-Compatible IPv6 Addresses](#)” section on page B-7).

## Site-Local Address

Site-local addresses are used for addressing within a site. They can be used to address an entire site without using a globally unique prefix. Site-local addresses have the prefix FEC0::/10, followed by a 54-bit subnet ID, and end with a 64-bit interface ID in the modified EUI-64 format.

Site-local routers do not forward any packets that have a site-local address for a source or destination outside of the site. Therefore, site-local addresses can be considered private addresses.

## Link-Local Address

All interfaces are required to have at least one link-local address. You can configure multiple IPv6 addresses per interfaces, but only one link-local address.

A link-local address is an IPv6 unicast address that can be automatically configured on any interface using the link-local prefix FE80::/10 and the interface identifier in modified EUI-64 format. Link-local addresses are used in the neighbor discovery protocol and the stateless autoconfiguration process. Nodes with a link-local address can communicate; they do not need a site-local or globally unique address to communicate.

Routers do not forward any packets that have a link-local address for a source or destination. Therefore, link-local addresses can be considered private addresses.

## IPv4-Compatible IPv6 Addresses

There are two types of IPv6 addresses that can contain IPv4 addresses.

The first type is the IPv4-compatibly IPv6 address. The IPv6 transition mechanisms include a technique for hosts and routers to dynamically tunnel IPv6 packets over IPv4 routing infrastructure. IPv6 nodes that use this technique are assigned special IPv6 unicast addresses that carry a global IPv4 address in the low-order 32 bits. This type of address is termed an IPv4-compatible IPv6 address and has the format ::y.y.y.y, where y.y.y.y is an IPv4 unicast address.



### Note

The IPv4 address used in the IPv4-compatible IPv6 address must be a globally unique IPv4 unicast address.

The second type of IPv6 address, which holds an embedded IPv4 address, is called the IPv4-mapped IPv6 address. This address type is used to represent the addresses of IPv4 nodes as IPv6 addresses. This type of address has the format ::FFFF:y.y.y.y, where y.y.y.y is an IPv4 unicast address.

## Unspecified Address

The unspecified address, 0:0:0:0:0:0:0, indicates the absence of an IPv6 address. For example, a newly initialized node on an IPv6 network may use the unspecified address as the source address in its packets until it receives its IPv6 address.

**Note**

---

The IPv6 unspecified address cannot be assigned to an interface. The unspecified IPv6 addresses must not be used as destination addresses in IPv6 packets or the IPv6 routing header.

---

## Loopback Address

The loopback address, 0:0:0:0:0:0:1, may be used by a node to send an IPv6 packet to itself. The loopback address in IPv6 functions the same as the loopback address in IPv4 (127.0.0.1).

**Note**

---

The IPv6 loopback address cannot be assigned to a physical interface. A packet that has the IPv6 loopback address as its source or destination address must remain within the node that created the packet. IPv6 routers do not forward packets that have the IPv6 loopback address as their source or destination address.

---

## Interface Identifiers

Interface identifiers in IPv6 unicast addresses are used to identify the interfaces on a link. They need to be unique within a subnet prefix. In many cases, the interface identifier is derived from the interface link-layer address. The same interface identifier may be used on multiple interfaces of a single node, as long as those interfaces are attached to different subnets.

For all unicast addresses, except those that start with the binary 000, the interface identifier is required to be 64 bits long and to be constructed in the Modified EUI-64 format. The Modified EUI-64 format is created from the 48-bit MAC address by inverting the universal/local bit in the address and by inserting the hexadecimal number FFFE between the upper three bytes and lower three bytes of the of the MAC address.


For example, an interface with the MAC address of 00E0.b601.3B7A would have a 64-bit interface ID of 02E0:B6FF:FE01:3B7A.

## Multicast Address

An IPv6 multicast address is an identifier for a group of interfaces, typically on different nodes. A packet sent to a multicast address is delivered to all interfaces identified by the multicast address. An interface may belong to any number of multicast groups.

An IPv6 multicast address has a prefix of FF00::/8 (1111 1111). The octet following the prefix defines the type and scope of the multicast address. A permanently assigned (well known) multicast address has a flag parameter equal to 0; a temporary (transient) multicast address has a flag parameter equal to 1. A multicast address that has the scope of a node, link, site, or organization, or a global scope has a scope parameter of 1, 2, 5, 8, or E, respectively. For example, a multicast address with the prefix FF02::/16 is a permanent multicast address with a link scope. [Figure B-1](#) shows the format of the IPv6 multicast address.

Figure B-1 IPv6 Multicast Address Format

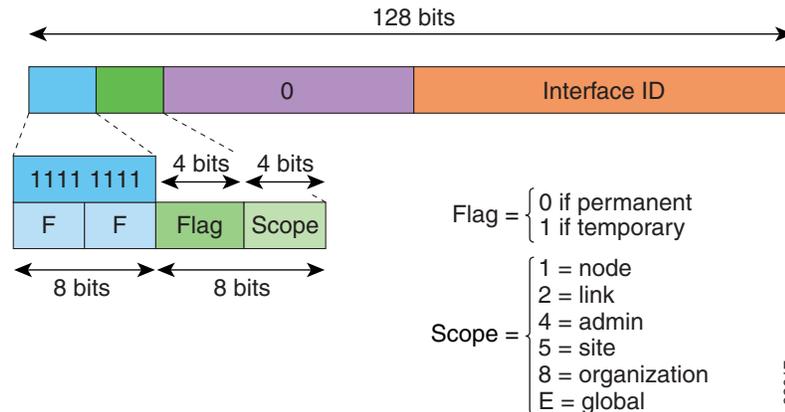

IPv6 nodes (hosts and routers) are required to join the following multicast groups:

- The All Nodes multicast addresses:
  - FF01:: (interface-local)
  - FF02:: (link-local)
- The Solicited-Node Address for each IPv6 unicast and anycast address on the node:  
FF02:0:0:0:1:FFXX:XXXX/104, where XX:XXXX is the low-order 24-bits of the unicast or anycast address.



**Note** Solicited-Node addresses are used in Neighbor Solicitation messages.

IPv6 routers are required to join the following multicast groups:

- FF01::2 (interface-local)
- FF02::2 (link-local)
- FF05::2 (site-local)

Multicast address should not be used as source addresses in IPv6 packets.



**Note** There are no broadcast addresses in IPv6. IPv6 multicast addresses are used instead of broadcast addresses.

## Anycast Address

The IPv6 anycast address is a unicast address that is assigned to more than one interface (typically belonging to different nodes). A packet that is routed to an anycast address is routed to the nearest interface having that address, the nearness being determined by the routing protocol in effect.

Anycast addresses are allocated from the unicast address space. An anycast address is simply a unicast address that has been assigned to more than one interface, and the interfaces must be configured to recognize the address as an anycast address.

The following restrictions apply to anycast addresses:

- An anycast address cannot be used as the source address for an IPv6 packet.

- An anycast address cannot be assigned to an IPv6 host; it can only be assigned to an IPv6 router.

**Note**

Anycast addresses are not supported on the ASA.

## Required Addresses

IPv6 hosts must, at a minimum, be configured with the following addresses (either automatically or manually):

- A link-local address for each interface
- The loopback address
- The All-Nodes multicast addresses
- A Solicited-Node multicast address for each unicast or anycast address

IPv6 routers must, at a minimum, be configured with the following addresses (either automatically or manually):

- The required host addresses
- The Subnet-Router anycast addresses for all interfaces for which it is configured to act as a router
- The All-Routers multicast addresses

## IPv6 Address Prefixes

An IPv6 address prefix, in the format `ipv6-prefix/prefix-length`, can be used to represent bit-wise contiguous blocks of the entire address space. The IPv6-prefix must be in the form documented in RFC 2373 where the address is specified in hexadecimal using 16-bit values between colons. The prefix length is a decimal value that indicates how many of the high-order contiguous bits of the address comprise the prefix (the network portion of the address). For example, `2001:0DB8:8086:6502::/32` is a valid IPv6 prefix.

The IPv6 prefix identifies the type of IPv6 address. [Table B-5](#) shows the prefixes for each IPv6 address type.

**Table B-5** IPv6 Address Type Prefixes

| Address Type         | Binary Prefix                         | IPv6 Notation |
|----------------------|---------------------------------------|---------------|
| Unspecified          | 000...0 (128 bits)                    | ::/128        |
| Loopback             | 000...1 (128 bits)                    | ::1/128       |
| Multicast            | 11111111                              | FF00::/8      |
| Link-Local (unicast) | 1111111010                            | FE80::/10     |
| Site-Local (unicast) | 1111111111                            | FEC0::/10     |
| Global (unicast)     | All other addresses.                  |               |
| Anycast              | Taken from the unicast address space. |               |

# Protocols and Applications

Table B-6 lists the protocol literal values and port numbers; either can be entered in ASA commands.

**Table B-6 Protocol Literal Values**

| Literal | Value | Description                                                                                                               |
|---------|-------|---------------------------------------------------------------------------------------------------------------------------|
| ah      | 51    | Authentication Header for IPv6, RFC 1826.                                                                                 |
| eigrp   | 88    | Enhanced Interior Gateway Routing Protocol.                                                                               |
| esp     | 50    | Encapsulated Security Payload for IPv6, RFC 1827.                                                                         |
| gre     | 47    | Generic Routing Encapsulation.                                                                                            |
| icmp    | 1     | Internet Control Message Protocol, RFC 792.                                                                               |
| icmp6   | 58    | Internet Control Message Protocol for IPv6, RFC 2463.                                                                     |
| igmp    | 2     | Internet Group Management Protocol, RFC 1112.                                                                             |
| igrp    | 9     | Interior Gateway Routing Protocol.                                                                                        |
| ip      | 0     | Internet Protocol.                                                                                                        |
| ipinip  | 4     | IP-in-IP encapsulation.                                                                                                   |
| ipsec   | 50    | IP Security. Entering the ipsec protocol literal is equivalent to entering the esp protocol literal.                      |
| nos     | 94    | Network Operating System (Novell's NetWare).                                                                              |
| ospf    | 89    | Open Shortest Path First routing protocol, RFC 1247.                                                                      |
| pcp     | 108   | Payload Compression Protocol.                                                                                             |
| pim     | 103   | Protocol Independent Multicast.                                                                                           |
| pptp    | 47    | Point-to-Point Tunneling Protocol. Entering the pptp protocol literal is equivalent to entering the gre protocol literal. |
| snp     | 109   | Sitara Networks Protocol.                                                                                                 |
| tcp     | 6     | Transmission Control Protocol, RFC 793.                                                                                   |
| udp     | 17    | User Datagram Protocol, RFC 768.                                                                                          |

Protocol numbers can be viewed online at the IANA website:

<http://www.iana.org/assignments/protocol-numbers>

## TCP and UDP Ports

Table B-7 lists the literal values and port numbers; either can be entered in ASA commands. See the following caveats:

- The ASA uses port 1521 for SQL\*Net. This is the default port used by Oracle for SQL\*Net. This value, however, does not agree with IANA port assignments.
- The ASA listens for RADIUS on ports 1645 and 1646. If your RADIUS server uses the standard ports 1812 and 1813, you can configure the ASA to listen to those ports using the **authentication-port** and **accounting-port** commands.

- To assign a port for DNS access, use the **domain** literal value, not **dns**. If you use **dns**, the ASA assumes you meant to use the **dnsix** literal value.

Port numbers can be viewed online at the IANA website:

<http://www.iana.org/assignments/port-numbers>

**Table B-7** Port Literal Values

| Literal    | TCP or UDP? | Value | Description                                                                |
|------------|-------------|-------|----------------------------------------------------------------------------|
| aol        | TCP         | 5190  | America Online                                                             |
| bgp        | TCP         | 179   | Border Gateway Protocol, RFC 1163                                          |
| biff       | UDP         | 512   | Used by mail system to notify users that new mail is received              |
| bootpc     | UDP         | 68    | Bootstrap Protocol Client                                                  |
| bootps     | UDP         | 67    | Bootstrap Protocol Server                                                  |
| chargen    | TCP         | 19    | Character Generator                                                        |
| citrix-ica | TCP         | 1494  | Citrix Independent Computing Architecture (ICA) protocol                   |
| cmd        | TCP         | 514   | Similar to <b>exec</b> except that <b>cmd</b> has automatic authentication |
| ctiqbe     | TCP         | 2748  | Computer Telephony Interface Quick Buffer Encoding                         |
| daytime    | TCP         | 13    | Day time, RFC 867                                                          |
| discard    | TCP, UDP    | 9     | Discard                                                                    |
| domain     | TCP, UDP    | 53    | DNS                                                                        |
| dnsix      | UDP         | 195   | DNSIX Session Management Module Audit Redirector                           |
| echo       | TCP, UDP    | 7     | Echo                                                                       |
| exec       | TCP         | 512   | Remote process execution                                                   |
| finger     | TCP         | 79    | Finger                                                                     |
| ftp        | TCP         | 21    | File Transfer Protocol (control port)                                      |
| ftp-data   | TCP         | 20    | File Transfer Protocol (data port)                                         |
| gopher     | TCP         | 70    | Gopher                                                                     |
| https      | TCP         | 443   | HTTP over SSL                                                              |
| h323       | TCP         | 1720  | H.323 call signalling                                                      |
| hostname   | TCP         | 101   | NIC Host Name Server                                                       |
| ident      | TCP         | 113   | Ident authentication service                                               |
| imap4      | TCP         | 143   | Internet Message Access Protocol, version 4                                |
| irc        | TCP         | 194   | Internet Relay Chat protocol                                               |
| isakmp     | UDP         | 500   | Internet Security Association and Key Management Protocol                  |
| kerberos   | TCP, UDP    | 750   | Kerberos                                                                   |

**Table B-7 Port Literal Values (continued)**

| <b>Literal</b>    | <b>TCP or UDP?</b> | <b>Value</b> | <b>Description</b>                                                |
|-------------------|--------------------|--------------|-------------------------------------------------------------------|
| klogin            | TCP                | 543          | KLOGIN                                                            |
| kshell            | TCP                | 544          | Korn Shell                                                        |
| ldap              | TCP                | 389          | Lightweight Directory Access Protocol                             |
| ldaps             | TCP                | 636          | Lightweight Directory Access Protocol (SSL)                       |
| lpd               | TCP                | 515          | Line Printer Daemon - printer spooler                             |
| login             | TCP                | 513          | Remote login                                                      |
| lotusnotes        | TCP                | 1352         | IBM Lotus Notes                                                   |
| mobile-ip         | UDP                | 434          | MobileIP-Agent                                                    |
| nameserver        | UDP                | 42           | Host Name Server                                                  |
| netbios-ns        | UDP                | 137          | NetBIOS Name Service                                              |
| netbios-dgm       | UDP                | 138          | NetBIOS Datagram Service                                          |
| netbios-ssn       | TCP                | 139          | NetBIOS Session Service                                           |
| nntp              | TCP                | 119          | Network News Transfer Protocol                                    |
| ntp               | UDP                | 123          | Network Time Protocol                                             |
| pcanywhere-status | UDP                | 5632         | pcAnywhere status                                                 |
| pcanywhere-data   | TCP                | 5631         | pcAnywhere data                                                   |
| pim-auto-rp       | TCP, UDP           | 496          | Protocol Independent Multicast, reverse path flooding, dense mode |
| pop2              | TCP                | 109          | Post Office Protocol - Version 2                                  |
| pop3              | TCP                | 110          | Post Office Protocol - Version 3                                  |
| pptp              | TCP                | 1723         | Point-to-Point Tunneling Protocol                                 |
| radius            | UDP                | 1645         | Remote Authentication Dial-In User Service                        |
| radius-acct       | UDP                | 1646         | Remote Authentication Dial-In User Service (accounting)           |
| rip               | UDP                | 520          | Routing Information Protocol                                      |
| secureid-udp      | UDP                | 5510         | SecureID over UDP                                                 |
| smtp              | TCP                | 25           | Simple Mail Transport Protocol                                    |
| snmp              | UDP                | 161          | Simple Network Management Protocol                                |
| snmptrap          | UDP                | 162          | Simple Network Management Protocol - Trap                         |
| sqlnet            | TCP                | 1521         | Structured Query Language Network                                 |
| ssh               | TCP                | 22           | Secure Shell                                                      |
| sunrpc (rpc)      | TCP, UDP           | 111          | Sun Remote Procedure Call                                         |
| syslog            | UDP                | 514          | System Log                                                        |
| tacacs            | TCP, UDP           | 49           | Terminal Access Controller Access Control System Plus             |
| talk              | TCP, UDP           | 517          | Talk                                                              |
| telnet            | TCP                | 23           | RFC 854 Telnet                                                    |

**Table B-7** Port Literal Values (continued)

| Literal | TCP or UDP? | Value | Description                        |
|---------|-------------|-------|------------------------------------|
| tftp    | UDP         | 69    | Trivial File Transfer Protocol     |
| time    | UDP         | 37    | Time                               |
| uucp    | TCP         | 540   | UNIX-to-UNIX Copy Program          |
| who     | UDP         | 513   | Who                                |
| whois   | TCP         | 43    | Who Is                             |
| www     | TCP         | 80    | World Wide Web                     |
| xdmcp   | UDP         | 177   | X Display Manager Control Protocol |

## Local Ports and Protocols

[Table B-8](#) lists the protocols, TCP ports, and UDP ports that the ASA may open to process traffic destined to the ASA. Unless you enable the features and services listed in [Table B-8](#), the ASA does *not* open any local protocols or any TCP or UDP ports. You must configure a feature or service for the ASA to open the default listening protocol or port. In many cases you can configure ports other than the default port when you enable a feature or service.

**Table B-8** Protocols and Ports Opened by Features and Services

| Feature or Service                                | Protocol | Port Number | Comments                                                                                   |
|---------------------------------------------------|----------|-------------|--------------------------------------------------------------------------------------------|
| DHCP                                              | UDP      | 67,68       | —                                                                                          |
| Failover Control                                  | 105      | N/A         | —                                                                                          |
| HTTP                                              | TCP      | 80          | —                                                                                          |
| HTTPS                                             | TCP      | 443         | —                                                                                          |
| ICMP                                              | 1        | N/A         | —                                                                                          |
| IGMP                                              | 2        | N/A         | Protocol only open on destination IP address 224.0.0.1                                     |
| ISAKMP/IKE                                        | UDP      | 500         | Configurable.                                                                              |
| IPsec (ESP)                                       | 50       | N/A         | —                                                                                          |
| IPsec over UDP (NAT-T)                            | UDP      | 4500        | —                                                                                          |
| IPsec over UDP (Cisco VPN 3000 Series compatible) | UDP      | 10000       | Configurable.                                                                              |
| IPsec over TCP (CTCP)                             | TCP      | —           | No default port is used. You must specify the port number when configuring IPsec over TCP. |
| NTP                                               | UDP      | 123         | —                                                                                          |
| OSPF                                              | 89       | N/A         | Protocol only open on destination IP address 224.0.0.5 and 224.0.0.6                       |

**Table B-8** *Protocols and Ports Opened by Features and Services (continued)*

| Feature or Service                       | Protocol | Port Number | Comments                                                |
|------------------------------------------|----------|-------------|---------------------------------------------------------|
| PIM                                      | 103      | N/A         | Protocol only open on destination IP address 224.0.0.13 |
| RIP                                      | UDP      | 520         | —                                                       |
| RIPv2                                    | UDP      | 520         | Port only open on destination IP address 224.0.0.9      |
| SNMP                                     | UDP      | 161         | Configurable.                                           |
| SSH                                      | TCP      | 22          | —                                                       |
| Stateful Update                          | 8 and 9  | N/A         | —                                                       |
| Telnet                                   | TCP      | 23          | —                                                       |
| VPN Load Balancing                       | UDP      | 9023        | Configurable.                                           |
| VPN Individual User Authentication Proxy | UDP      | 1645, 1646  | Port accessible only over VPN tunnel.                   |

## ICMP Types

Table B-9 lists the ICMP type numbers and names that you can enter in ASA commands.

**Table B-9** *ICMP Types*

| ICMP Number | ICMP Name            |
|-------------|----------------------|
| 0           | echo-reply           |
| 3           | unreachable          |
| 4           | source-quench        |
| 5           | redirect             |
| 6           | alternate-address    |
| 8           | echo                 |
| 9           | router-advertisement |
| 10          | router-solicitation  |
| 11          | time-exceeded        |
| 12          | parameter-problem    |
| 13          | timestamp-request    |
| 14          | timestamp-reply      |
| 15          | information-request  |
| 16          | information-reply    |
| 17          | mask-request         |
| 18          | mask-reply           |
| 31          | conversion-error     |
| 32          | mobile-redirect      |





## APPENDIX **C**

# Configuring an External Server for Authorization and Authentication

---

This appendix describes how to configure an external LDAP, RADIUS, or TACACS+ server to support AAA on the ASA. Before you configure the ASA to use an external server, you must configure the server with the correct ASA authorization attributes and, from a subset of these attributes, assign specific permissions to individual users.

This appendix includes the following sections:

- [Understanding Policy Enforcement of Permissions and Attributes, page C-1](#)
- [Configuring an External LDAP Server, page C-2](#)
- [Configuring an External RADIUS Server, page C-27](#)
- [RADIUS Accounting Disconnect Reason Codes, page C-37](#)

## Understanding Policy Enforcement of Permissions and Attributes

The ASA supports several methods of applying user authorization attributes (also called user entitlements or permissions) to VPN connections. You can configure the ASA to obtain user attributes from a Dynamic Access Policy (DAP) on the ASA, from an external authentication and/or authorization AAA server (RADIUS or LDAP), from a group policy on the ASA, or from all three.

If the ASA receives attributes from all sources, the attributes are evaluated, merged, and applied to the user policy. If there are conflicts between attributes coming from the DAP, the AAA server, or the group policy, those attributes obtained from the DAP always take precedence.


The ASA applies attributes in the following order (see [Figure C-1](#)).

1. DAP attributes on the ASA—Introduced in Version 8.0(2), these attributes take precedence over all others. If you set a bookmark or URL list in DAP, it overrides a bookmark or URL list set in the group policy.
2. User attributes on the AAA server—The server returns these attributes after successful user authentication and/or authorization. Do not confuse these with attributes that are set for individual users in the local AAA database on the ASA (User Accounts in ASDM).
3. Group policy configured on the ASA—If a RADIUS server returns the value of the RADIUS CLASS attribute IETF-Class-25 (OU=*group-policy*) for the user, the ASA places the user in the group policy of the same name and enforces any attributes in the group policy that are not returned by the server.

For LDAP servers, any attribute name can be used to set the group policy for the session. The LDAP attribute map that you configure on the ASA maps the LDAP attribute to the Cisco attribute IETF-Radius-Class.

4. Group policy assigned by the Connection Profile (called tunnel-group in the CLI)—The Connection Profile has the preliminary settings for the connection, and includes a default group policy applied to the user before authentication. All users connecting to the ASA initially belong to this group, which provides any attributes that are missing from the DAP, user attributes returned by the server, or the group policy assigned to the user.
5. Default group policy assigned by the ASA (DfltGrpPolicy)—System default attributes provide any values that are missing from the DAP, user attributes, group policy, or connection profile.

**Figure C-1 Policy Enforcement Flow**

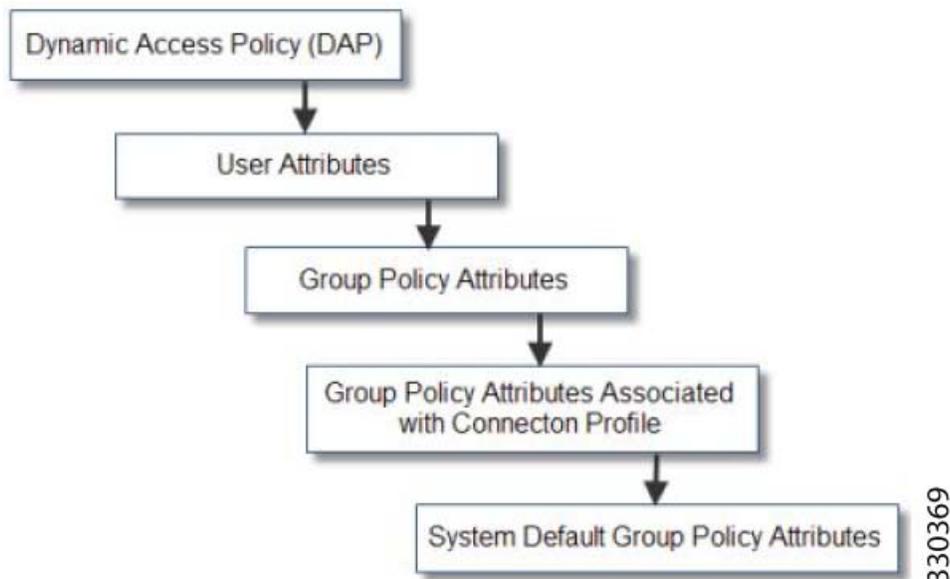

## Configuring an External LDAP Server

The VPN 3000 concentrator and the ASA/PIX 7.0 software required a Cisco LDAP schema for authorization operations. Beginning with Version 7.1.x, the ASA performs authentication and authorization using the native LDAP schema, and the Cisco schema is no longer needed.

You configure authorization (permission policy) using an LDAP attribute map. For examples, see the [“Active Directory/LDAP VPN Remote Access Authorization Examples”](#) section on page C-16.

This section describes the structure, schema, and attributes of an LDAP server and includes the following topics:

- [Organizing the ASA for LDAP Operations, page C-3](#)
- [Defining the ASA LDAP Configuration, page C-5](#)
- [Active Directory/LDAP VPN Remote Access Authorization Examples, page C-16](#)

The specific steps of these processes vary, depending on which type of LDAP server that you are using.

**Note**

For more information about the LDAP protocol, see RFCs 1777, 2251, and 2849.

## Organizing the ASA for LDAP Operations


This section describes how to search within the LDAP hierarchy and perform authenticated binding to the LDAP server on the ASA and includes the following topics:

- [Searching the LDAP Hierarchy, page C-3](#)
- [Binding the ASA to the LDAP Server, page C-4](#)

Your LDAP configuration should reflect the logical hierarchy of your organization. For example, suppose an employee at your company, Example Corporation, is named Employee1. Employee1 works in the Engineering group. Your LDAP hierarchy could have one or many levels. You might decide to set up a single-level hierarchy in which Employee1 is considered a member of Example Corporation. Or you could set up a multi-level hierarchy in which Employee1 is considered to be a member of the department Engineering, which is a member of an organizational unit called People, which is itself a member of Example Corporation. See [Figure C-2](#) for an example of a multi-level hierarchy.

A multi-level hierarchy has more detail, but searches return results more quickly in a single-level hierarchy.

**Figure C-2 A Multi-Level LDAP Hierarchy**

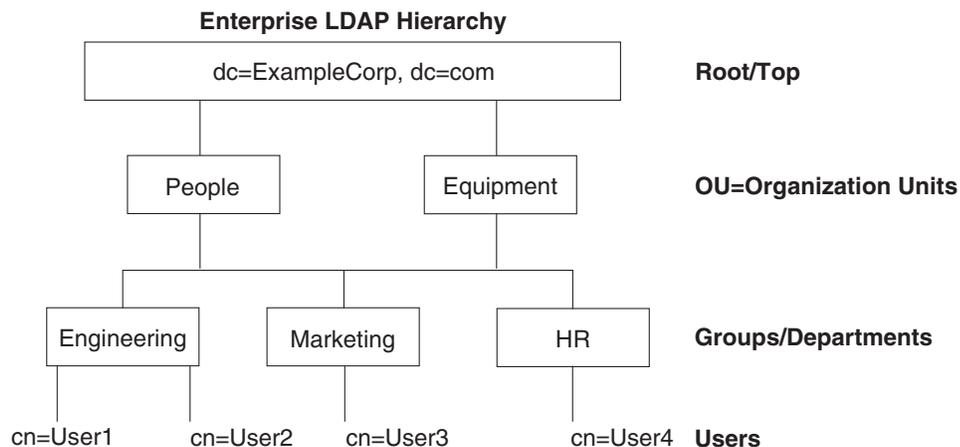

## Searching the LDAP Hierarchy

The ASA lets you tailor the search within the LDAP hierarchy. You configure the following three fields on the ASA to define where in the LDAP hierarchy that your search begins, the extent, and the type of information it is looking for. Together these fields allow you to limit the search of the hierarchy to only the part that includes the user permissions.

- LDAP Base DN defines where in the LDAP hierarchy that the server should begin searching for user information when it receives an authorization request from the ASA.

- Search Scope defines the extent of the search in the LDAP hierarchy. The search proceeds this many levels in the hierarchy below the LDAP Base DN. You can choose to have the server search only the level immediately below it, or it can search the entire subtree. A single level search is quicker, but a subtree search is more extensive.
- Naming Attribute(s) defines the RDN that uniquely identifies an entry in the LDAP server. Common naming attributes can include cn (Common Name), sAMAccountName, and userPrincipalName.

Figure C-2 shows a sample LDAP hierarchy for Example Corporation. Given this hierarchy, you could define your search in different ways. Table C-1 shows two sample search configurations.

In the first example configuration, when Employee1 establishes the IPsec tunnel with LDAP authorization required, the ASA sends a search request to the LDAP server, indicating it should search for Employee1 in the Engineering group. This search is quick.

In the second example configuration, the ASA sends a search request indicating that the server should search for Employee1 within Example Corporation. This search takes longer.

**Table C-1** Example Search Configurations

| No. | LDAP Base DN                                               | Search Scope | Naming Attribute | Result         |
|-----|------------------------------------------------------------|--------------|------------------|----------------|
| 1   | group= Engineering,ou=People,dc=ExampleCorporation, dc=com | One Level    | cn=Employee1     | Quicker search |
| 2   | dc=ExampleCorporation,dc=com                               | Subtree      | cn=Employee1     | Longer search  |

## Binding the ASA to the LDAP Server

Some LDAP servers (including the Microsoft Active Directory server) require the ASA to establish a handshake via authenticated binding before they accept requests for any other LDAP operations. The ASA uses the Login Distinguished Name (DN) and Login Password to establish a trust relationship (bind) with an LDAP server before a user can search. The Login DN represents a user record in the LDAP server that the administrator uses for binding.

When binding, the ASA authenticates to the server using the Login DN and the Login Password. When performing a Microsoft Active Directory read-only operation (such as for authentication, authorization, or group search), the ASA can bind with a Login DN with fewer privileges. For example, the Login DN can be a user whose AD “Member Of” designation is part of Domain Users. For VPN password management write operations, the Login DN needs elevated privileges and must be part of the Account Operators AD group. Microsoft Active Directory group search (also called “MemberOf retrieval”) was added in ASA Version 8.0.4.

An example of a Login DN includes the following entries:

```
cn=Binduser1,ou=Admins,ou=Users,dc=company_A,dc=com
```

See your LDAP Administrator guide for specific Login DN requirements for read and write operations.

The ASA supports the following features:

- Simple LDAP authentication with an unencrypted password using the default port 389 . You can also use other ports instead of the default port.
- Secure LDAP (LDAP-S) using the default port 636. You can also use other ports instead of the default port.
- Simple Authentication and Security Layer (SASL) MD5
- SASL Kerberos

The ASA does not support anonymous authentication.

**Note**

---

As an LDAP client, the ASA does not support the transmission of anonymous binds or requests.

---

## Defining the ASA LDAP Configuration

This section describes how to define the LDAP AV-pair attribute syntax and includes the following topics:

- [Supported Cisco Attributes for LDAP Authorization, page C-5](#)
- [Cisco AV Pair Attribute Syntax, page C-13](#)
- [Cisco AV Pairs ACL Examples, page C-14](#)

**Note**

---

The ASA enforces the LDAP attributes based on attribute name, not numeric ID. RADIUS attributes, on the other hand, are enforced by numeric ID, not by name.

Authorization refers to the process of enforcing permissions or attributes. An LDAP server defined as an authentication or authorization server enforces permissions or attributes if they are configured.

For software Version 7.0, LDAP attributes include the cVPN3000 prefix. For software Versions 7.1 and later, this prefix was removed.

---

## Supported Cisco Attributes for LDAP Authorization

This section provides a complete list of attributes (see [Table C-2](#)) for the ASA 5500, VPN 3000 concentrator, and PIX 500 series ASAs. The table includes attribute support information for the VPN 3000 concentrator and PIX 500 series ASAs to assist you in configuring networks with a combination of these devices.

Table C-2 ASA Supported Cisco Attributes for LDAP Authorization

| Attribute Name                          | VPN 3000 | ASA | PIX | Syntax/<br>Type | Single or<br>Multi-Valued | Possible Values                                                                                                                                                                                                                                                                                                                 |
|-----------------------------------------|----------|-----|-----|-----------------|---------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Access-Hours                            | Y        | Y   | Y   | String          | Single                    | Name of the time-range<br>(for example, Business-Hours)                                                                                                                                                                                                                                                                         |
| Allow-Network-Extension- Mode           | Y        | Y   | Y   | Boolean         | Single                    | 0 = Disabled<br>1 = Enabled                                                                                                                                                                                                                                                                                                     |
| Authenticated-User-Idle- Timeout        | Y        | Y   | Y   | Integer         | Single                    | 1 - 35791394 minutes                                                                                                                                                                                                                                                                                                            |
| Authorization-Required                  | Y        |     |     | Integer         | Single                    | 0 = No<br>1 = Yes                                                                                                                                                                                                                                                                                                               |
| Authorization-Type                      | Y        |     |     | Integer         | Single                    | 0 = None<br>1 = RADIUS<br>2 = LDAP                                                                                                                                                                                                                                                                                              |
| Banner1                                 | Y        | Y   | Y   | String          | Single                    | Banner string for clientless and<br>client SSL VPN, and IPsec clients.                                                                                                                                                                                                                                                          |
| Banner2                                 | Y        | Y   | Y   | String          | Single                    | Banner string for clientless and<br>client SSL VPN, and IPsec clients.                                                                                                                                                                                                                                                          |
| Cisco-AV-Pair                           | Y        | Y   | Y   | String          | Multi                     | An octet string in the following<br>format:<br><br>[Prefix] [Action] [Protocol]<br>[Source] [Source Wildcard Mask]<br>[Destination] [Destination Wildcard<br>Mask] [Established] [Log]<br>[Operator] [Port]<br><br>For more information, see the<br><a href="#">“Cisco AV Pair Attribute Syntax”<br/>section on page C-13.”</a> |
| Cisco-IP-Phone-Bypass                   | Y        | Y   | Y   | Integer         | Single                    | 0 = Disabled<br>1 = Enabled                                                                                                                                                                                                                                                                                                     |
| Cisco-LEAP-Bypass                       | Y        | Y   | Y   | Integer         | Single                    | 0 = Disabled<br>1 = Enabled                                                                                                                                                                                                                                                                                                     |
| Client-Intercept-DHCP-<br>Configure-Msg | Y        | Y   | Y   | Boolean         | Single                    | 0 = Disabled<br>1 = Enabled                                                                                                                                                                                                                                                                                                     |
| Client-Type-Version-Limiting            | Y        | Y   | Y   | String          | Single                    | IPsec VPN client version number<br>string                                                                                                                                                                                                                                                                                       |
| Confidence-Interval                     | Y        | Y   | Y   | Integer         | Single                    | 10 - 300 seconds                                                                                                                                                                                                                                                                                                                |
| DHCP-Network-Scope                      | Y        | Y   | Y   | String          | Single                    | IP address                                                                                                                                                                                                                                                                                                                      |
| DN-Field                                | Y        | Y   | Y   | String          | Single                    | Possible values: UID, OU, O, CN,<br>L, SP, C, EA, T, N, GN, SN, I,<br>GENQ, DNQ, SER, and<br>use-entire-name.                                                                                                                                                                                                                   |
| Firewall-ACL-In                         |          | Y   | Y   | String          | Single                    | Access list ID                                                                                                                                                                                                                                                                                                                  |
| Firewall-ACL-Out                        |          | Y   | Y   | String          | Single                    | Access list ID                                                                                                                                                                                                                                                                                                                  |

Table C-2 ASA Supported Cisco Attributes for LDAP Authorization (continued)

| Attribute Name                | VPN 3000 | ASA | PIX | Syntax/<br>Type | Single or<br>Multi-Valued | Possible Values                                                                                                                                                                                                                                                                                                                                        |
|-------------------------------|----------|-----|-----|-----------------|---------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Group-Policy                  |          | Y   | Y   | String          | Single                    | Sets the group policy for the remote access VPN session. For version 8.2 and later, use this attribute instead of IETF-Radius-Class. You can use one of the three following formats: <ul style="list-style-type: none"> <li>• <i>group policy name</i></li> <li>• <i>OU=group policy name</i></li> <li>• <i>OU=group policy name:</i></li> </ul>       |
| IE-Proxy-Bypass-Local         |          |     |     | Boolean         | Single                    | 0=Disabled<br>1=Enabled                                                                                                                                                                                                                                                                                                                                |
| IE-Proxy-Exception-List       |          |     |     | String          | Single                    | A list of DNS domains. Entries must be separated by the new line character sequence (\n).                                                                                                                                                                                                                                                              |
| IE-Proxy-Method               | Y        | Y   | Y   | Integer         | Single                    | 1 = Do not modify proxy settings<br>2 = Do not use proxy<br>3 = Auto detect<br>4 = Use ASA setting                                                                                                                                                                                                                                                     |
| IE-Proxy-Server               | Y        | Y   | Y   | Integer         | Single                    | IP address                                                                                                                                                                                                                                                                                                                                             |
| IETF-Radius-Class             | Y        | Y   | Y   |                 | Single                    | Sets the group policy for the remote access VPN session. For versions 8.2 and later, we recommend that you use the Group-Policy attribute. You can use one of the three following formats: <ul style="list-style-type: none"> <li>• <i>group policy name</i></li> <li>• <i>OU=group policy name</i></li> <li>• <i>OU=group policy name:</i></li> </ul> |
| IETF-Radius-Filter-Id         | Y        | Y   | Y   | String          | Single                    | Access list name that is defined on the ASA. The setting applies to VPN remote access IPsec and SSL VPN clients.                                                                                                                                                                                                                                       |
| IETF-Radius-Framed-IP-Address | Y        | Y   | Y   | String          | Single                    | An IP address. The setting applies to VPN remote access IPsec and SSL VPN clients.                                                                                                                                                                                                                                                                     |
| IETF-Radius-Framed-IP-Netmask | Y        | Y   | Y   | String          | Single                    | An IP address mask. The setting applies to VPN remote access IPsec and SSL VPN clients.                                                                                                                                                                                                                                                                |
| IETF-Radius-Idle-Timeout      | Y        | Y   | Y   | Integer         | Single                    | Seconds                                                                                                                                                                                                                                                                                                                                                |

Table C-2 ASA Supported Cisco Attributes for LDAP Authorization (continued)

| Attribute Name                        | VPN 3000 | ASA | PIX | Syntax/<br>Type | Single or<br>Multi-Valued | Possible Values                                                                                                                                                         |
|---------------------------------------|----------|-----|-----|-----------------|---------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| IETF-Radius-Service-Type              | Y        | Y   | Y   | Integer         | Single                    | 1 = Login<br>2 = Framed<br>5 = Remote access<br>6 = Administrative<br>7 = NAS prompt                                                                                    |
| IETF-Radius-Session-Timeout           | Y        | Y   | Y   | Integer         | Single                    | Seconds                                                                                                                                                                 |
| IKE-Keep-Alives                       | Y        | Y   | Y   | Boolean         | Single                    | 0 = Disabled<br>1 = Enabled                                                                                                                                             |
| IPsec-Allow-Passwd-Store              | Y        | Y   | Y   | Boolean         | Single                    | 0 = Disabled<br>1 = Enabled                                                                                                                                             |
| IPsec-Authentication                  | Y        | Y   | Y   | Integer         | Single                    | 0 = None<br>1 = RADIUS<br>2 = LDAP (authorization only)<br>3 = NT Domain<br>4 = SDI (RSA)<br>5 = Internal<br>6 = RADIUS with Expiry<br>7 = Kerberos or Active Directory |
| IPsec-Auth-On-Rekey                   | Y        | Y   | Y   | Boolean         | Single                    | 0 = Disabled<br>1 = Enabled                                                                                                                                             |
| IPsec-Backup-Server-List              | Y        | Y   | Y   | String          | Single                    | Server addresses (space delimited)                                                                                                                                      |
| IPsec-Backup-Servers                  | Y        | Y   | Y   | String          | Single                    | 1 = Use client-configured list<br>2 = Disabled and clear client list<br>3 = Use backup server list                                                                      |
| IPsec-Client-Firewall-Filter- Name    | Y        |     |     | String          | Single                    | Specifies the name of the filter to be pushed to the client as firewall policy.                                                                                         |
| IPsec-Client-Firewall-Filter-Optional | Y        | Y   | Y   | Integer         | Single                    | 0 = Required<br>1 = Optional                                                                                                                                            |
| IPsec-Default-Domain                  | Y        | Y   | Y   | String          | Single                    | Specifies the single default domain name to send to the client (1 - 255 characters).                                                                                    |
| IPsec-Extended-Auth-On-Rekey          |          | Y   | Y   | String          | Single                    | String                                                                                                                                                                  |
| IPsec-IKE-Peer-ID-Check               | Y        | Y   | Y   | Integer         | Single                    | 1 = Required<br>2 = If supported by peer certificate<br>3 = Do not check                                                                                                |
| IPsec-IP-Compression                  | Y        | Y   | Y   | Integer         | Single                    | 0 = Disabled<br>1 = Enabled                                                                                                                                             |
| IPsec-Mode-Config                     | Y        | Y   | Y   | Boolean         | Single                    | 0 = Disabled<br>1 = Enabled                                                                                                                                             |
| IPsec-Over-UDP                        | Y        | Y   | Y   | Boolean         | Single                    | 0 = Disabled<br>1 = Enabled                                                                                                                                             |

Table C-2 ASA Supported Cisco Attributes for LDAP Authorization (continued)

| Attribute Name                            | VPN 3000 | ASA | PIX | Syntax/<br>Type | Single or<br>Multi-Valued | Possible Values                                                                                                                               |
|-------------------------------------------|----------|-----|-----|-----------------|---------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------|
| IPsec-Over-UDP-Port                       | Y        | Y   | Y   | Integer         | Single                    | 4001 - 49151; The default is 10000.                                                                                                           |
| IPsec-Required-Client-Firewall-Capability | Y        | Y   | Y   | Integer         | Single                    | 0 = None<br>1 = Policy defined by remote FW Are-You-There (AYT)<br>2 = Policy pushed CPP<br>4 = Policy from server                            |
| IPsec-Sec-Association                     | Y        |     |     | String          | Single                    | Name of the security association                                                                                                              |
| IPsec-Split-DNS-Names                     | Y        | Y   | Y   | String          | Single                    | Specifies the list of secondary domain names to send to the client (1 - 255 characters).                                                      |
| IPsec-Split-Tunneling-Policy              | Y        | Y   | Y   | Integer         | Single                    | 0 = Tunnel everything<br>1 = Split tunneling<br>2 = Local LAN permitted                                                                       |
| IPsec-Split-Tunnel-List                   | Y        | Y   | Y   | String          | Single                    | Specifies the name of the network or access list that describes the split tunnel inclusion list.                                              |
| IPsec-Tunnel-Type                         | Y        | Y   | Y   | Integer         | Single                    | 1 = LAN-to-LAN<br>2 = Remote access                                                                                                           |
| IPsec-User-Group-Lock                     | Y        |     |     | Boolean         | Single                    | 0 = Disabled<br>1 = Enabled                                                                                                                   |
| L2TP-Encryption                           | Y        |     |     | Integer         | Single                    | Bitmap:<br>1 = Encryption required<br>2 = 40 bit<br>4 = 128 bits<br>8 = Stateless-Req<br>15 = 40/128-Encr/Stateless-Req                       |
| L2TP-MPPC-Compression                     | Y        |     |     | Integer         | Single                    | 0 = Disabled<br>1 = Enabled                                                                                                                   |
| MS-Client-Subnet-Mask                     | Y        | Y   | Y   | String          | Single                    | An IP address                                                                                                                                 |
| PFS-Required                              | Y        | Y   | Y   | Boolean         | Single                    | 0 = No<br>1 = Yes                                                                                                                             |
| Port-Forwarding-Name                      | Y        | Y   |     | String          | Single                    | Name string (for example, "Corporate-Apps")                                                                                                   |
| PPTP-Encryption                           | Y        |     |     | Integer         | Single                    | Bitmap:<br>1 = Encryption required<br>2 = 40 bits<br>4 = 128 bits<br>8 = Stateless-Required<br><br>Example:<br>15 = 40/128-Encr/Stateless-Req |
| PPTP-MPPC-Compression                     | Y        |     |     | Integer         | Single                    | 0 = Disabled<br>1 = Enabled                                                                                                                   |

Table C-2 ASA Supported Cisco Attributes for LDAP Authorization (continued)

| Attribute Name                        | VPN 3000 | ASA | PIX | Syntax/<br>Type | Single or<br>Multi-Valued | Possible Values                                                                                                                                                                                                                                                                                                                                                      |
|---------------------------------------|----------|-----|-----|-----------------|---------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Primary-DNS                           | Y        | Y   | Y   | String          | Single                    | An IP address                                                                                                                                                                                                                                                                                                                                                        |
| Primary-WINS                          | Y        | Y   | Y   | String          | Single                    | An IP address                                                                                                                                                                                                                                                                                                                                                        |
| Privilege-Level                       |          |     |     | Integer         | Single                    | For usernames, 0 - 15                                                                                                                                                                                                                                                                                                                                                |
| Required-Client-Firewall-Vendor-Code  | Y        | Y   | Y   | Integer         | Single                    | 1 = Cisco Systems (with Cisco Integrated Client)<br>2 = Zone Labs<br>3 = NetworkICE<br>4 = Sygate<br>5 = Cisco Systems (with Cisco Intrusion Prevention Security Agent)                                                                                                                                                                                              |
| Required-Client-Firewall-Description  | Y        | Y   | Y   | String          | Single                    | —                                                                                                                                                                                                                                                                                                                                                                    |
| Required-Client-Firewall-Product-Code | Y        | Y   | Y   | Integer         | Single                    | Cisco Systems Products:<br>1 = Cisco Intrusion Prevention Security Agent or Cisco Integrated Client (CIC)<br><br>Zone Labs Products:<br>1 = Zone Alarm<br>2 = Zone AlarmPro<br>3 = Zone Labs Integrity<br><br>NetworkICE Product:<br>1 = BlackIce Defender/Agent<br><br>Sygate Products:<br>1 = Personal Firewall<br>2 = Personal Firewall Pro<br>3 = Security Agent |
| Require-HW-Client-Auth                | Y        | Y   | Y   | Boolean         | Single                    | 0 = Disabled<br>1 = Enabled                                                                                                                                                                                                                                                                                                                                          |
| Require-Individual-User-Auth          | Y        | Y   | Y   | Integer         | Single                    | 0 = Disabled<br>1 = Enabled                                                                                                                                                                                                                                                                                                                                          |
| Secondary-DNS                         | Y        | Y   | Y   | String          | Single                    | An IP address                                                                                                                                                                                                                                                                                                                                                        |
| Secondary-WINS                        | Y        | Y   | Y   | String          | Single                    | An IP address                                                                                                                                                                                                                                                                                                                                                        |
| SEP-Card-Assignment                   |          |     |     | Integer         | Single                    | Not used                                                                                                                                                                                                                                                                                                                                                             |
| Simultaneous-Logins                   | Y        | Y   | Y   | Integer         | Single                    | 0 - 2147483647                                                                                                                                                                                                                                                                                                                                                       |
| Strip-Realm                           | Y        | Y   | Y   | Boolean         | Single                    | 0 = Disabled<br>1 = Enabled                                                                                                                                                                                                                                                                                                                                          |
| TACACS-Authtype                       | Y        | Y   | Y   | Integer         | Single                    | —                                                                                                                                                                                                                                                                                                                                                                    |
| TACACS-Privilege-Level                | Y        | Y   | Y   | Integer         | Single                    | —                                                                                                                                                                                                                                                                                                                                                                    |
| Tunnel-Group-Lock                     |          | Y   | Y   | String          | Single                    | Name of the tunnel group or “none”                                                                                                                                                                                                                                                                                                                                   |

Table C-2 ASA Supported Cisco Attributes for LDAP Authorization (continued)

| Attribute Name                      | VPN 3000 | ASA | PIX | Syntax/<br>Type | Single or<br>Multi-Valued | Possible Values                                                                                                                                                                                         |
|-------------------------------------|----------|-----|-----|-----------------|---------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Tunneling-Protocols                 | Y        | Y   | Y   | Integer         | Single                    | 1 = PPTP<br>2 = L2TP<br>4 = IPsec (IKEv1)<br>8 = L2TP/IPsec<br>16 = WebVPN<br>32 = SVC<br>64 = IPsec (IKEv2)<br>8 and 4 are mutually exclusive<br>(0 - 11, 16 - 27, 32 - 43, 48 - 59 are legal values). |
| Use-Client-Address                  | Y        |     |     | Boolean         | Single                    | 0 = Disabled<br>1 = Enabled                                                                                                                                                                             |
| User-Auth-Server-Name               | Y        |     |     | String          | Single                    | IP address or hostname                                                                                                                                                                                  |
| User-Auth-Server-Port               | Y        |     |     | Integer         | Single                    | Port number for server protocol                                                                                                                                                                         |
| User-Auth-Server-Secret             | Y        |     |     | String          | Single                    | Server password                                                                                                                                                                                         |
| WebVPN-ACL-Filters                  |          | Y   |     | String          | Single                    | Webtype access list name                                                                                                                                                                                |
| WebVPN-Apply-ACL-Enable             | Y        | Y   |     | Integer         | Single                    | 0 = Disabled<br>1 = Enabled<br><br>With Version 8.0 and later, this attribute is not required.                                                                                                          |
| WebVPN-Citrix-Support-Enable        | Y        | Y   |     | Integer         | Single                    | 0 = Disabled<br>1 = Enabled<br><br>With Versions 8.0 and later, this attribute is not required.                                                                                                         |
| WebVPN-Enable-functions             |          |     |     | Integer         | Single                    | Not used - deprecated                                                                                                                                                                                   |
| WebVPN-Exchange-Server-Address      |          |     |     | String          | Single                    | Not used - deprecated                                                                                                                                                                                   |
| WebVPN-Exchange-Server-NETBIOS-Name |          |     |     | String          | Single                    | Not used - deprecated                                                                                                                                                                                   |
| WebVPN-File-Access-Enable           | Y        | Y   |     | Integer         | Single                    | 0 = Disabled<br>1 = Enabled                                                                                                                                                                             |
| WebVPN-File-Server-Browsing-Enable  | Y        | Y   |     | Integer         | Single                    | 0 = Disabled<br>1 = Enabled                                                                                                                                                                             |
| WebVPN-File-Server-Entry-Enable     | Y        | Y   |     | Integer         | Single                    | 0 = Disabled<br>1 = Enabled                                                                                                                                                                             |
| WebVPN-Forwarded-Ports              |          | Y   |     | String          | Single                    | Port-forward list name                                                                                                                                                                                  |
| WebVPN-Homepage                     | Y        | Y   |     | String          | Single                    | A URL such as<br><a href="http://www.example.com">http://www.example.com</a>                                                                                                                            |

Table C-2 ASA Supported Cisco Attributes for LDAP Authorization (continued)

| Attribute Name                               | VPN 3000 | ASA | PIX | Syntax/<br>Type | Single or<br>Multi-Valued | Possible Values                                                                                                                                                                                                                                                                                           |
|----------------------------------------------|----------|-----|-----|-----------------|---------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| WebVPN-Macro-Substitution-Value1             | Y        | Y   |     | String          | Single                    | See the <i>SSL VPN Deployment Guide</i> for examples at the following URL:<br><a href="http://supportwiki.cisco.com/ViewWiki/index.php/Cisco_ASA_5500_SSL_VPN_Deployment_Guide%2C_Version_8.x">http://supportwiki.cisco.com/ViewWiki/index.php/Cisco_ASA_5500_SSL_VPN_Deployment_Guide%2C_Version_8.x</a> |
| WebVPN-Macro-Substitution-Value2             | Y        | Y   |     | String          | Single                    | See the <i>SSL VPN Deployment Guide</i> for examples at the following URL:<br><a href="http://supportwiki.cisco.com/ViewWiki/index.php/Cisco_ASA_5500_SSL_VPN_Deployment_Guide%2C_Version_8.x">http://supportwiki.cisco.com/ViewWiki/index.php/Cisco_ASA_5500_SSL_VPN_Deployment_Guide%2C_Version_8.x</a> |
| WebVPN-Port-Forwarding-Auto-Download-Enable  | Y        | Y   |     | Integer         | Single                    | 0 = Disabled<br>1 = Enabled                                                                                                                                                                                                                                                                               |
| WebVPN-Port-Forwarding-Enable                | Y        | Y   |     | Integer         | Single                    | 0 = Disabled<br>1 = Enabled                                                                                                                                                                                                                                                                               |
| WebVPN-Port-Forwarding-Exchange-Proxy-Enable | Y        | Y   |     | Integer         | Single                    | 0 = Disabled<br>1 = Enabled                                                                                                                                                                                                                                                                               |
| WebVPN-Port-Forwarding-HTTP-Proxy-Enable     | Y        | Y   |     | Integer         | Single                    | 0 = Disabled<br>1 = Enabled                                                                                                                                                                                                                                                                               |
| WebVPN-Single-Sign-On-Server-Name            |          | Y   |     | String          | Single                    | Name of the SSO Server (1 - 31 characters).                                                                                                                                                                                                                                                               |
| WebVPN-SVC-Client-DPD                        | Y        | Y   |     | Integer         | Single                    | 0 = Disabled<br>n = Dead peer detection value in seconds (30 - 3600)                                                                                                                                                                                                                                      |
| WebVPN-SVC-Compression                       | Y        | Y   |     | Integer         | Single                    | 0 = None<br>1 = Deflate compression                                                                                                                                                                                                                                                                       |
| WebVPN-SVC-Enable                            | Y        | Y   |     | Integer         | Single                    | 0 = Disabled<br>1 = Enabled                                                                                                                                                                                                                                                                               |
| WebVPN-SVC-Gateway-DPD                       | Y        | Y   |     | Integer         | Single                    | 0 = Disabled<br>n = Dead peer detection value in seconds (30 - 3600)                                                                                                                                                                                                                                      |
| WebVPN-SVC-Keepalive                         | Y        | Y   |     | Integer         | Single                    | 0 = Disabled<br>n = Keepalive value in seconds (15 - 600)                                                                                                                                                                                                                                                 |
| WebVPN-SVC-Keep-Enable                       | Y        | Y   |     | Integer         | Single                    | 0 = Disabled<br>1 = Enabled                                                                                                                                                                                                                                                                               |
| WebVPN-SVC-Rekey-Method                      | Y        | Y   |     | Integer         | Single                    | 0 = None<br>1 = SSL<br>2 = New tunnel<br>3 = Any (sets to SSL)                                                                                                                                                                                                                                            |

**Table C-2** ASA Supported Cisco Attributes for LDAP Authorization (continued)

| Attribute Name             | VPN 3000 | ASA | PIX | Syntax/<br>Type | Single or<br>Multi-Valued | Possible Values                                            |
|----------------------------|----------|-----|-----|-----------------|---------------------------|------------------------------------------------------------|
| WebVPN-SVC-Rekey-Period    | Y        | Y   |     | Integer         | Single                    | 0 = Disabled<br>n = Retry period in minutes<br>(4 - 10080) |
| WebVPN-SVC-Required-Enable | Y        | Y   |     | Integer         | Single                    | 0 = Disabled<br>1 = Enabled                                |
| WebVPN-URL-Entry-Enable    | Y        | Y   |     | Integer         | Single                    | 0 = Disabled<br>1 = Enabled                                |
| WebVPN-URL-List            |          | Y   |     | String          | Single                    | URL list name                                              |

## Cisco AV Pair Attribute Syntax

The Cisco Attribute Value (AV) pair (ID Number 26/9/1) can be used to enforce access lists from a RADIUS server (like Cisco ACS), or from an LDAP server via an LDAP attribute map.

The syntax of each Cisco-AV-Pair rule is as follows:

[Prefix] [Action] [Protocol] [Source] [Source Wildcard Mask] [Destination] [Destination Wildcard Mask] [Established] [Log] [Operator] [Port]

Table C-3 describes the syntax rules.

**Table C-3** AV-Pair Attribute Syntax Rules

| Field                     | Description                                                                                                                                                                                                           |
|---------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Action                    | Action to perform if the rule matches a deny or a permit.                                                                                                                                                             |
| Destination               | Network or host that receives the packet. Specify it as an IP address, a hostname, or the <b>any</b> keyword. If using an IP address, the source wildcard mask must follow.                                           |
| Destination Wildcard Mask | The wildcard mask that applies to the destination address.                                                                                                                                                            |
| Log                       | Generates a FILTER log message. You must use this keyword to generate events of severity level 9.                                                                                                                     |
| Operator                  | Logic operators: greater than, less than, equal to, not equal to.                                                                                                                                                     |
| Port                      | The number of a TCP or UDP port in the range of 0 - 65535.                                                                                                                                                            |
| Prefix                    | A unique identifier for the AV pair (for example: ip:inacl#1= for standard access lists or webvpn:inacl# = for clientless SSL VPN access lists). This field only appears when the filter has been sent as an AV pair. |
| Protocol                  | Number or name of an IP protocol. Either an integer in the range of 0 - 255 or one of the following keywords: <b>icmp, igmp, ip, tcp, udp</b> .                                                                       |

**Table C-3 AV-Pair Attribute Syntax Rules (continued)**

| Field                | Description                                                                                                                                                                                                                                                                   |
|----------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Source               | Network or host that sends the packet. Specify it as an IP address, a hostname, or the <b>any</b> keyword. If using an IP address, the source wildcard mask must follow. This field does not apply to Clientless SSL VPN because the ASA has the role of the source or proxy. |
| Source Wildcard Mask | The wildcard mask that applies to the source address. This field does not apply to Clientless SSL VPN because the ASA has the role of the source or proxy.                                                                                                                    |

## Cisco AV Pairs ACL Examples

Table C-4 shows examples of Cisco AV pairs and describes the permit or deny actions that result.



### Note

Each ACL # in `inacl#` must be unique. However, they do not need to be sequential (for example, 1, 2, 3, 4). That is, they could be 5, 45, 135.

**Table C-4 Examples of Cisco AV Pairs and Their Permitting or Denying Action**

| Cisco AV Pair Example                                                                                                                                                                                   | Permitting or Denying Action                                                                                                                                                                           |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>ip:inacl#1=deny ip 10.155.10.0 0.0.0.255 10.159.2.0 0.0.0.255 log</code>                                                                                                                          | Allows IP traffic between the two hosts using a full tunnel IPsec or SSL VPN client.                                                                                                                   |
| <code>ip:inacl#2=permit TCP any host 10.160.0.1 eq 80 log</code>                                                                                                                                        | Allows TCP traffic from all hosts to the specific host on port 80 only using a full tunnel IPsec or SSL VPN client.                                                                                    |
| <code>webvpn:inacl#1=permit url http://www.example.com<br/>webvpn:inacl#2=deny url smtp://server<br/>webvpn:inacl#3=permit url cifs://server/share</code>                                               | Allows clientlessSSL VPN traffic to the URL specified, denies SMTP traffic to a specific server, and allows file share access (CIFS) to the specified server.                                          |
| <code>webvpn:inacl#1=permit tcp 10.86.1.2 eq 2222 log<br/>webvpn:inacl#2=deny tcp 10.86.1.2 eq 2323 log</code>                                                                                          | Denies Telnet access and permits SSH access on non-default ports 2323 and 2222, respectively, or other application traffic flows using these ports for clientless SSL VPN.                             |
| <code>webvpn:inacl#1=permit url ssh://10.86.1.2<br/>webvpn:inacl#35=permit tcp 10.86.1.5 eq 22 log<br/>webvpn:inacl#48=deny url telnet://10.86.1.2<br/>webvpn:inacl#100=deny tcp 10.86.1.6 eq 23</code> | Allows clientless SSL VPN SSH access to default port 22 and denies Telnet access to port 23, respectively. This example assumes that you are using Telnet or SSH Java plug-ins enforced by these ACLs. |

## URL Types Supported in ACLs

The URL may be a partial URL, contain wildcards for the server, or include a port.

The following URL types are supported.

|              |          |                 |           |
|--------------|----------|-----------------|-----------|
| any All URLs | https:// | post://         | ssh://    |
| cifs://      | ica://   | rdp://          | telnet:// |
| citrix://    | imap4:// | rdp2://         | vnc://    |
| citrixs://   | ftp://   | smart-tunnel:// |           |
| http://      | pop3://  | smtp://         |           |



**Note** The URLs listed in this table appear in CLI or ASDM menus based on whether or not the associated plug-in is enabled.

### Guidelines for Using Cisco-AV Pairs (ACLs)

- Use Cisco-AV pair entries with the ip:inacl# prefix to enforce access lists for remote IPsec and SSL VPN Client (SVC) tunnels.
- Use Cisco-AV pair entries with the webvpn:inacl# prefix to enforce access lists for SSL VPN clientless (browser-mode) tunnels.
- For webtype ACLs, you do not specify the source because the ASA is the source.

Table C-5 lists the tokens for the Cisco-AV-pair attribute:

**Table C-5** ASA-Supported Tokens

| Token             | Syntax Field     | Description                                                                                                                                                  |
|-------------------|------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ip:inacl#Num=     | N/A (Identifier) | (Where <i>Num</i> is a unique integer.) Starts all AV pair access control lists. Enforces access lists for remote IPsec and SSL VPN (SVC) tunnels.           |
| webvpn:inacl#Num= | N/A (Identifier) | (Where <i>Num</i> is a unique integer.) Starts all clientless SSL AV pair access control lists. Enforces access lists for clientless (browser-mode) tunnels. |
| deny              | Action           | Denies action. (Default)                                                                                                                                     |
| permit            | Action           | Allows action.                                                                                                                                               |
| icmp              | Protocol         | Internet Control Message Protocol (ICMP)                                                                                                                     |
| 1                 | Protocol         | Internet Control Message Protocol (ICMP)                                                                                                                     |
| IP                | Protocol         | Internet Protocol (IP)                                                                                                                                       |
| 0                 | Protocol         | Internet Protocol (IP)                                                                                                                                       |
| TCP               | Protocol         | Transmission Control Protocol (TCP)                                                                                                                          |
| 6                 | Protocol         | Transmission Control Protocol (TCP)                                                                                                                          |
| UDP               | Protocol         | User Datagram Protocol (UDP)                                                                                                                                 |
| 17                | Protocol         | User Datagram Protocol (UDP)                                                                                                                                 |
| any               | Hostname         | Rule applies to any host.                                                                                                                                    |
| host              | Hostname         | Any alpha-numeric string that denotes a hostname.                                                                                                            |
| log               | Log              | When the event occurs, a filter log message appears. (Same as permit and log or deny and log.)                                                               |
| lt                | Operator         | Less than value                                                                                                                                              |

Table C-5 ASA-Supported Tokens (continued)

| Token | Syntax Field | Description                                        |
|-------|--------------|----------------------------------------------------|
| gt    | Operator     | Greater than value                                 |
| eq    | Operator     | Equal to value                                     |
| neq   | Operator     | Not equal to value                                 |
| range | Operator     | Inclusive range. Should be followed by two values. |

## Active Directory/LDAP VPN Remote Access Authorization Examples

This section presents example procedures for configuring authentication and authorization on the ASA using the Microsoft Active Directory server. It includes the following topics:

- [User-Based Attributes Policy Enforcement, page C-16](#)
- [Placing LDAP Users in a Specific Group Policy, page C-18](#)
- [Enforcing Static IP Address Assignment for AnyConnect Tunnels, page C-20](#)
- [Enforcing Dial-in Allow or Deny Access, page C-22](#)
- [Enforcing Logon Hours and Time-of-Day Rules, page C-25](#)

Other configuration examples available on Cisco.com include the following TechNotes.

- *ASA/PIX: Mapping VPN Clients to VPN Group Policies Through LDAP Configuration Example* at the following URL:  
[http://www.cisco.com/en/US/products/ps6120/products\\_configuration\\_example09186a008089149d.shtml](http://www.cisco.com/en/US/products/ps6120/products_configuration_example09186a008089149d.shtml)
- *PIX/ASA 8.0: Use LDAP Authentication to Assign a Group Policy at Login* at the following URL:  
[http://www.cisco.com/en/US/partner/products/ps6120/products\\_configuration\\_example09186a00808d1a7c.shtml](http://www.cisco.com/en/US/partner/products/ps6120/products_configuration_example09186a00808d1a7c.shtml)

### User-Based Attributes Policy Enforcement

You can map any standard LDAP attribute to a well-known Vendor-Specific Attribute (VSA) as well as map one or more LDAP attribute(s) to one or more Cisco LDAP attributes.

The following example shows how to configure the ASA to enforce a simple banner for a user configured on an AD LDAP server. On the server, use the Office field in the General tab to enter the banner text. This field uses the attribute named physicalDeliveryOfficeName. On the ASA, create an attribute map that maps physicalDeliveryOfficeName to the Cisco attribute Banner1. During authentication, the ASA retrieves the value of physicalDeliveryOfficeName from the server, maps the value to the Cisco attribute Banner1, and displays the banner to the user.

This example applies to any connection type, including the IPsec VPN client, AnyConnect SSL VPN client, or clientless SSL VPN. In the example, User1 connects through a clientless SSL VPN connection. To configure the attributes for a user on the AD or LDAP Server, perform the following steps:


---

**Step 1** Right-click a user.

The Properties dialog box appears (see [Figure C-3](#)).

- Step 2** Click the **General** tab and enter banner text in the Office field, which uses the AD/LDAP attribute `physicalDeliveryOfficeName`.

**Figure C-3 LDAP User Configuration**

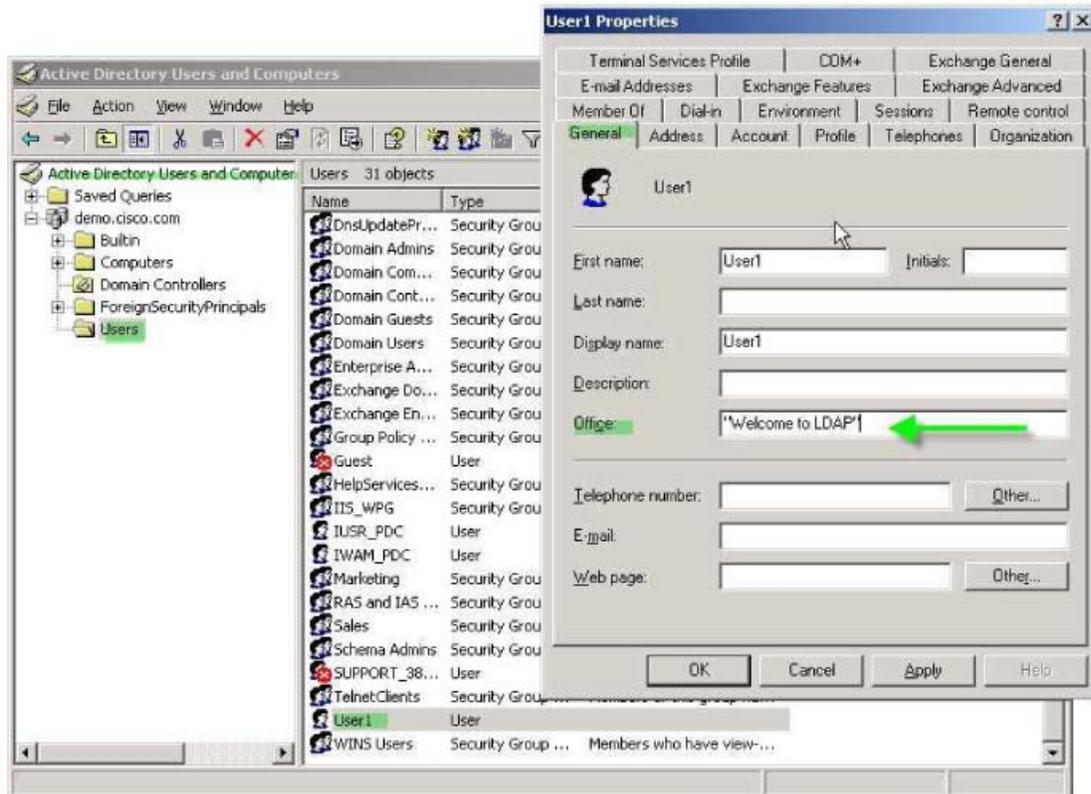

- Step 3** Create an LDAP attribute map on the ASA.

The following example creates the map `Banner` and maps the AD/LDAP attribute `physicalDeliveryOfficeName` to the Cisco attribute `Banner1`:

```
hostname(config)# ldap attribute-map Banner
hostname(config-ldap-attribute-map)# map-name physicalDeliveryOfficeName Banner1
```


- Step 4** Associate the LDAP attribute map to the AAA server.

The following example enters the aaa server host configuration mode for the host `10.1.1.2` in the AAA server group `MS_LDAP`, and associates the attribute map `Banner` that you created in Step 3:

```
hostname(config)# aaa-server MS_LDAP host 10.1.1.2
hostname(config-aaa-server-host)# ldap-attribute-map Banner
```

- Step 5** Test the banner enforcement.

The following example shows a clientless SSL connection and the banner enforced through the attribute map after the user authenticates (see [Figure C-4](#)).

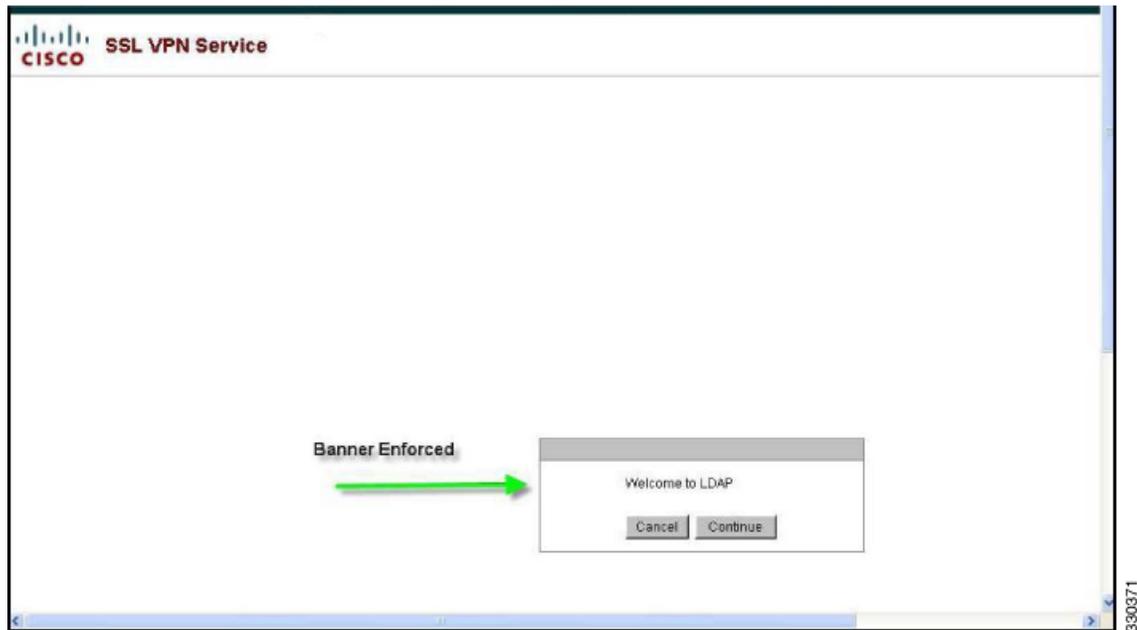**Figure C-4** Banner Displayed

## Placing LDAP Users in a Specific Group Policy


The following example shows how to authenticate User1 on the AD LDAP server to a specific group policy on the ASA. On the server, use the Department field of the Organization tab to enter the name of the group policy. Then create an attribute map and map Department to the Cisco attribute IETF-Radius-Class. During authentication, the ASA retrieves the value of Department from the server, maps the value to the IETF-Radius-Class, and places User1 in the group policy.

This example applies to any connection type, including the IPsec VPN client, AnyConnect SSL VPN client, or clientless SSL VPN. In this example, User1 is connecting through a clientless SSL VPN connection.

To configure the attributes for the user on the AD LDAP server, perform the following steps:

- 
- Step 1** Right-click the user.  
The Properties dialog box appears (see [Figure C-5](#)).
  - Step 2** Click the **Organization** tab and enter **Group-Policy-1** in the Department field.

Figure C-5 AD/LDAP Department Attribute

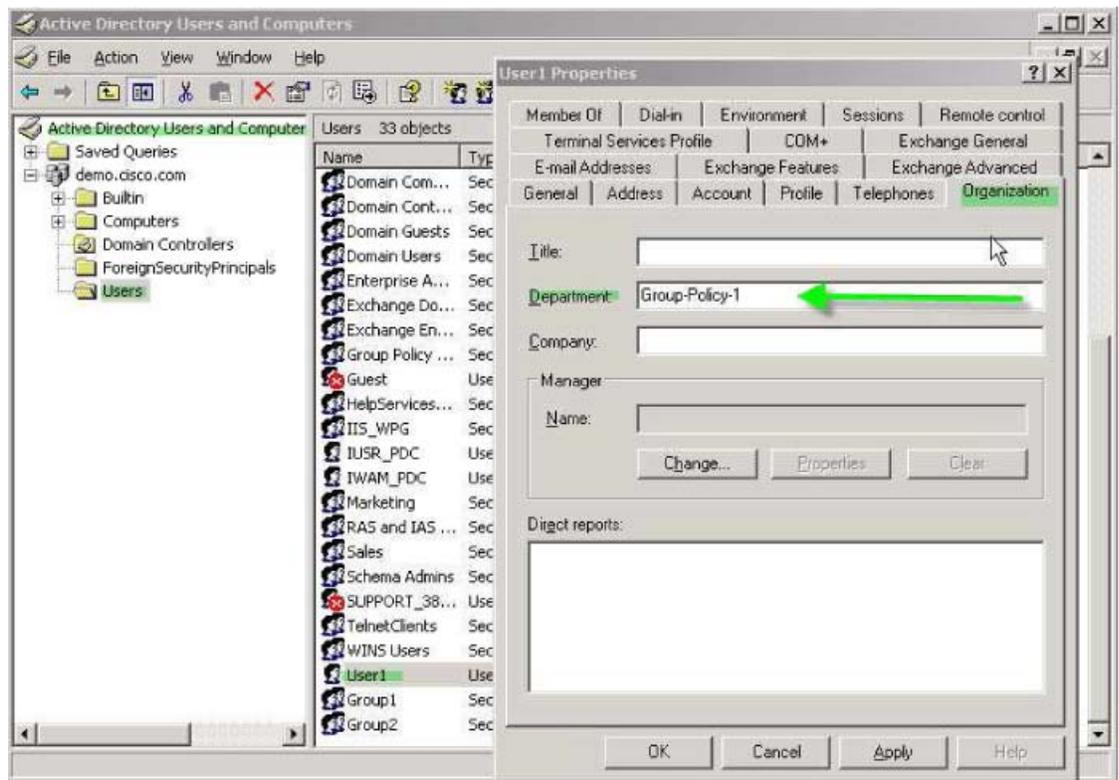

**Step 3** Define an attribute map for the LDAP configuration shown in [Step 1](#).

The following example shows how to map the AD attribute Department to the Cisco attribute IETF-Radius-Class.

```
hostname(config)# ldap attribute-map group_policy
hostname(config-ldap-attribute-map)# map-name Department IETF-Radius-Class
```

**Step 4** Associate the LDAP attribute map to the AAA server.

The following example enters the aaa server host configuration mode for the host 10.1.1.2 in the AAA server group MS\_LDAP, and associates the attribute map group\_policy that you created in Step 3:

```
hostname(config)# aaa-server MS_LDAP host 10.1.1.2
hostname(config-aaa-server-host)# ldap-attribute-map group_policy
```

**Step 5** Add the new group-policy on the ASA and configure the required policy attributes that will be assigned to the user. The following example creates Group-policy-1, the name entered in the Department field on the server:

```
hostname(config)# group-policy Group-policy-1 external server-group LDAP_demo
hostname(config-aaa-server-group)#
```

**Step 6** Establish the VPN connection as the user would, and verify that the session inherits the attributes from Group-Policy1 (and any other applicable attributes from the default group-policy).

**Step 7** Monitor the communication between the ASA and the server by enabling the **debug ldap 255** command from privileged EXEC mode. The following is sample output from this command, which has been edited to provide the key messages:

```
[29] Authentication successful for user1 to 10.1.1.2
[29] Retrieving user attributes from server 10.1.1.2
```

```
[29] Retrieved Attributes:
[29] department: value = Group-Policy-1
[29] mapped to IETF-Radius-Class: value = Group-Policy-1
```

## Enforcing Static IP Address Assignment for AnyConnect Tunnels

In this example, configure the AnyConnect client user Web1 to receive a static IP address. then enter the address in the Assign Static IP Address field of the Dialin tab on the AD LDAP server. This field uses the msRADIUSFramedIPAddress attribute. Create an attribute map that maps this attribute to the Cisco attribute IETF-Radius-Framed-IP-Address.


During authentication, the ASA retrieves the value of msRADIUSFramedIPAddress from the server, maps the value to the Cisco attribute IETF-Radius-Framed-IP-Address, and provides the static address to User1.

The following example applies to full-tunnel clients, including the IPsec client and the SSL VPN clients (AnyConnect client 2.x and the SSL VPN client).

To configure the user attributes on the AD/LDAP server, perform the following steps:

- Step 1** Right-click the username.
- The Properties dialog box appears (see [Figure C-6](#)).
- Step 2** Click the **Dialin** tab, check the **Assign Static IP Address** check box, and enter an IP address of 10.1.1.2.

**Figure C-6 Assign Static IP Address**

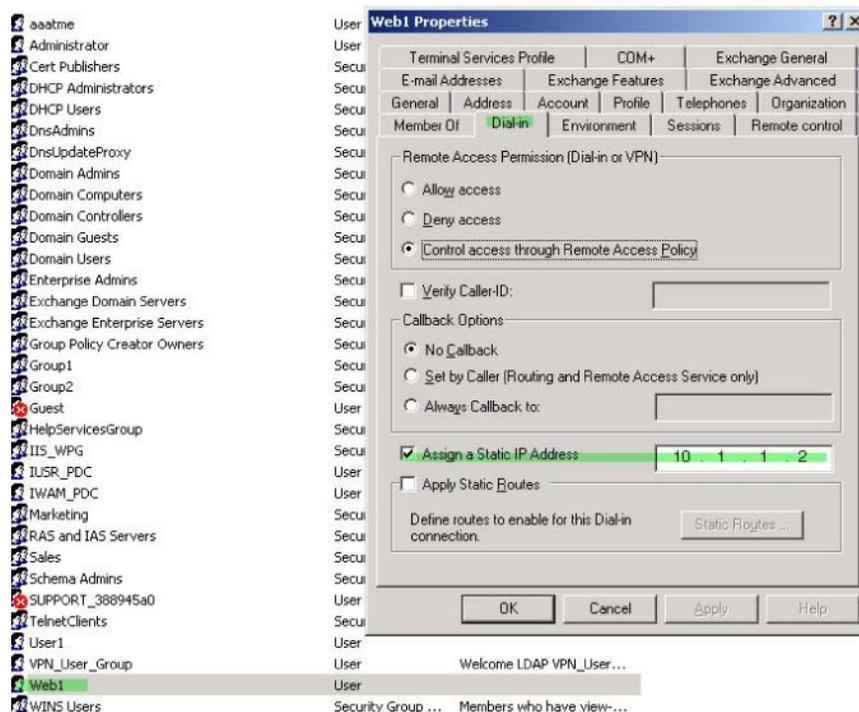

- Step 3** Create an attribute map for the LDAP configuration shown in [Step 1](#).

330373

The following example shows how to map the AD attribute `msRADIUSFramedIPAddress` used by the Static Address field to the Cisco attribute `IETF-Radius-Framed-IP-Address`:

```
hostname(config)# ldap attribute-map static_address
hostname(config-ldap-attribute-map)# map-name msRADIUSFramedIPAddress
IETF-Radius-Framed-IP-Address
```

**Step 4** Associate the LDAP attribute map to the AAA server.

The following example enters the aaa server host configuration mode for the host 10.1.1.2, in the AAA server group `MS_LDAP`, and associates the attribute map `static_address` that you created in Step 3:

```
hostname(config)# aaa-server MS_LDAP host 10.1.1.2
hostname(config-aaa-server-host)# ldap-attribute-map static_address
```


**Step 5** Verify that the `vpn-address-assignment` command is configured to specify AAA by viewing this part of the configuration with the `show run all vpn-addr-assign` command:


```
hostname(config)# show run all vpn-addr-assign
vpn-addr-assign aaa << Make sure this is configured >>
no vpn-addr-assign dhcp
vpn-addr-assign local
hostname(config)#
```

**Step 6** Establish a connection to the ASA with the AnyConnect client. Observe the following:

- The banner is received in the same sequence as a clientless connection (see [Figure C-7](#)).
- The user receives the IP address configured on the server and mapped to the ASA (see [Figure C-8](#)).

**Figure C-7** Verify the Banner for the AnyConnect Session

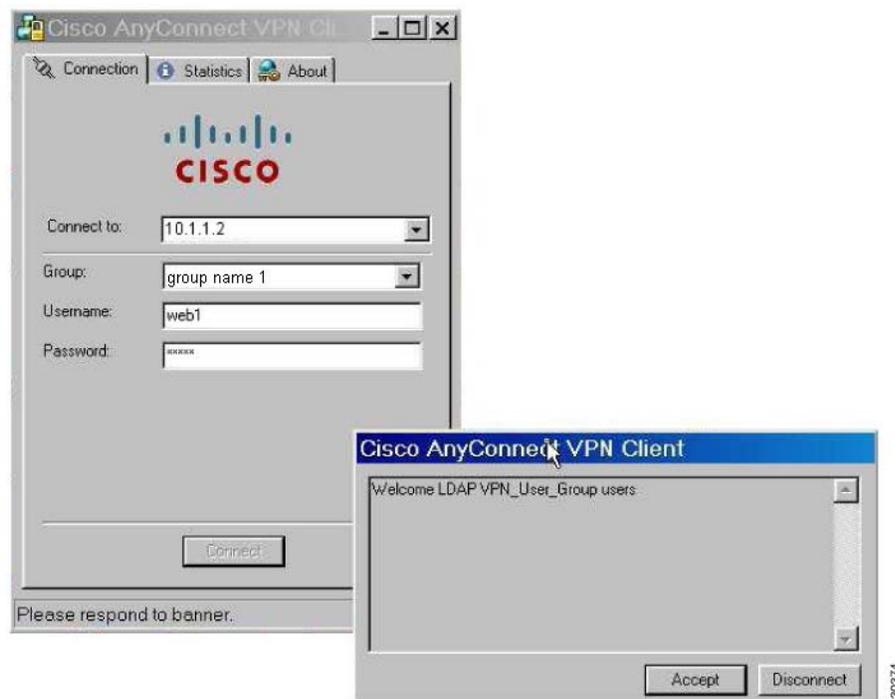

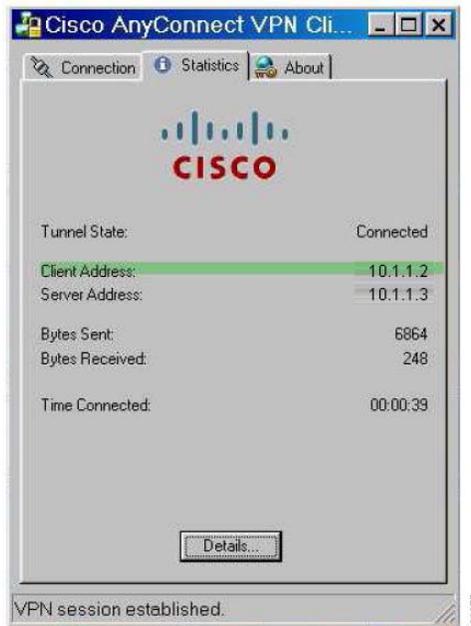**Figure C-8 AnyConnect Session Established**

**Step 7** Use the `show vpn-sessiondb svc` command to view the session details and verify the address assigned:

```
hostname# show vpn-sessiondb svc
```

```
Session Type: SVC
Username : web1 Index : 31
Assigned IP : 10.1.1.2 Public IP : 10.86.181.70
Protocol : Clientless SSL-Tunnel DTLS-Tunnel
Encryption : RC4 AES128 Hashing : SHA1
Bytes Tx : 304140 Bytes Rx : 470506
Group Policy : VPN_User_Group Tunnel Group : Group1_TunnelGroup
Login Time : 11:13:05 UTC Tue Aug 28 2007
Duration : 0h:01m:48s
NAC Result : Unknown
VLAN Mapping : N/A VLAN : none
```

## Enforcing Dial-in Allow or Deny Access

The following example creates an LDAP attribute map that specifies the tunneling protocols allowed by the user. You map the allow access and deny access settings on the Dialin tab to the Cisco attribute Tunneling-Protocol, which supports the bitmap values shown in [Table C-6](#):

**Table C-6** *Bitmap Values for Cisco Tunneling-Protocol Attribute*

| Value          | Tunneling Protocol |
|----------------|--------------------|
| 1              | PPTP               |
| 2              | L2TP               |
| 4 <sup>1</sup> | IPsec (IKEv1)      |
| 8 <sup>2</sup> | L2TP/IPsec         |

**Table C-6** Bitmap Values for Cisco Tunneling-Protocol Attribute (continued)

| Value | Tunneling Protocol                      |
|-------|-----------------------------------------|
| 16    | Clientless SSL                          |
| 32    | SSL client—AnyConnect or SSL VPN client |
| 64    | IPsec (IKEv2)                           |

1. IPsec and L2TP over IPsec are not supported simultaneously. Therefore, the values 4 and 8 are mutually exclusive.
2. See note 1.

Use this attribute to create an Allow Access (TRUE) or a Deny Access (FALSE) condition for the protocols and enforce the method for which the user is allowed access.


For this simplified example, by mapping the tunnel protocol IPsec/IKEv1 (4), you can create an allow (true) condition for the Cisco VPN client. You also map WebVPN (16) and SVC/AC (32), which are mapped as a value of 48 (16+32) and create a deny (false) condition. This allows the user to connect to the ASA using IPsec, but any attempt to connect using clientless SSL or the AnyConnect client is denied.

Another example of enforcing dial-in allow access or deny access is available in the Tech Note *ASA/PIX: Mapping VPN Clients to VPN Group Policies Through LDAP Configuration Example* at the following URL:

[http://www.cisco.com/en/US/products/ps6120/products\\_configuration\\_example09186a008089149d.shtml](http://www.cisco.com/en/US/products/ps6120/products_configuration_example09186a008089149d.shtml)

To configure the user attributes on the AD/LDAP server, perform the following steps:

- 
- Step 1** Right-click the user.  
The Properties dialog box appears.
  - Step 2** Click the **Dial-in** tab, then click the **Allow Access** radio button (Figure C-9).

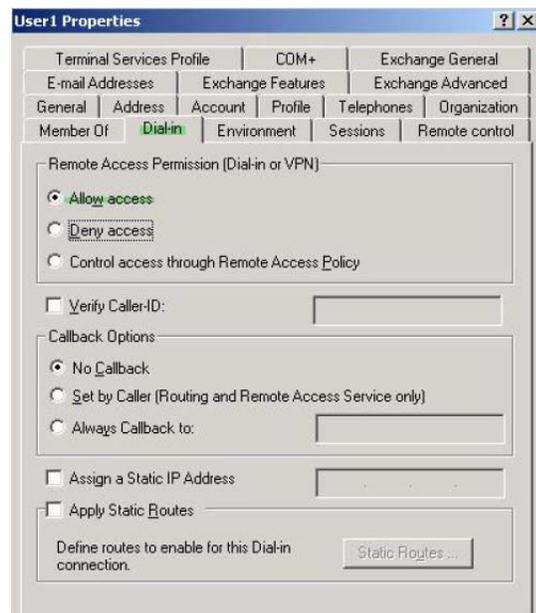**Figure C-9** AD/LDAP User1 - Allow Access



**Note** If you select the Control access through the Remote Access Policy option, then a value is not returned from the server, and the permissions that are enforced are based on the internal group policy settings of the ASA.

**Step 3** Create an attribute map to allow both an IPsec and AnyConnect connection, but deny a clientless SSL connection.

The following example shows how to create the map `tunneling_protocols`, and map the AD attribute `msNPAllowDialin` used by the Allow Access setting to the Cisco attribute `Tunneling-Protocols` using the `map-name` command, and add map values with the `map-value` command:

```
hostname(config)# ldap attribute-map tunneling_protocols
hostname(config-ldap-attribute-map)# map-name msNPAllowDialin Tunneling-Protocols
hostname(config-ldap-attribute-map)# map-value msNPAllowDialin FALSE 48
hostname(config-ldap-attribute-map)# map-value msNPAllowDialin TRUE 4
```

**Step 4** Associate the LDAP attribute map to the AAA server.

The following example enters the aaa server host configuration mode for the host 10.1.1.2, in the AAA server group `MS_LDAP`, and associates the attribute map `tunneling_protocols` that you created in Step 2:

```
hostname(config)# aaa-server MS_LDAP host 10.1.1.2
hostname(config-aaa-server-host)# ldap-attribute-map tunneling_protocols
```

**Step 5** Verify that the attribute map works as configured.

**Step 6** Try connections using clientless SSL, the AnyConnect client, and the IPsec client. The clientless and AnyConnect connections should fail, and the user should be informed that an unauthorized connection mechanism was the reason for the failed connection. The IPsec client should connect because IPsec is an allowed tunneling protocol according to the attribute map (see [Figure C-10](#) and [Figure C-11](#)).

**Figure C-10 Login Denied Message for Clientless User**

Login

**Login denied, unauthorized connection mechanism, contact your administrator.**

Please enter your username and password.

USERNAME:

PASSWORD:

GROUP:

330377

**Figure C-11 Login Denied Message for AnyConnect Client User**

## Enforcing Logon Hours and Time-of-Day Rules


The following example shows how to configure and enforce the hours that a clientless SSL user (such as a business partner) is allowed to access the network.

On the AD server, use the Office field to enter the name of the partner, which uses the physicalDeliveryOfficeName attribute. Then we create an attribute map on the ASA to map that attribute to the Cisco attribute Access-Hours. During authentication, the ASA retrieves the value of physicalDeliveryOfficeName and maps it to Access-Hours.

To configure the user attributes on the AD /LDAP server, perform the following steps:

- 
- Step 1** Select the user, and right-click **Properties**.  
The Properties dialog box appears (see [Figure C-12](#)).
  - Step 2** Click the **General** tab.

Figure C-12 Active Directory Properties Dialog Box

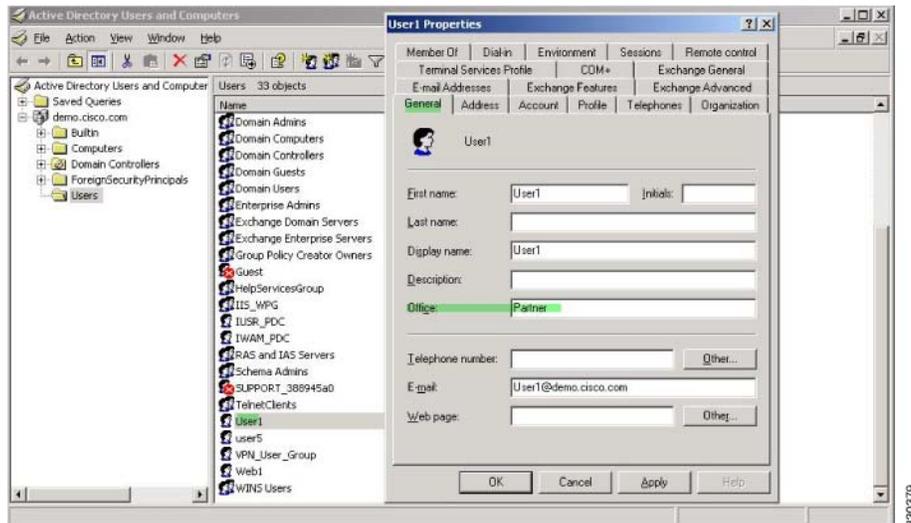**Step 3** Create an attribute map.

The following example shows how to create the attribute map `access_hours` and map the AD attribute `physicalDeliveryOfficeName` used by the Office field to the Cisco attribute `Access-Hours`.

```
hostname(config)# ldap attribute-map access_hours
hostname(config-ldap-attribute-map)# map-name physicalDeliveryOfficeName Access-Hours
```

**Step 4** Associate the LDAP attribute map to the AAA server.

The following example enters the aaa server host configuration mode for the host 10.1.1.2, in the AAA server group `MS_LDAP`, and associates the attribute map `access_hours` that you created in Step 3:

```
hostname(config)# aaa-server MS_LDAP host 10.1.1.2
hostname(config-aaa-server-host)# ldap-attribute-map access_hours
```

**Step 5** Configure time ranges for each value allowed on the server.

The following example configures Partner access hours from 9am to 5pm Monday through Friday:

```
hostname(config)# time-range Partner
hostname(config-time-range)# periodic weekdays 09:00 to 17:00
```

# Configuring an External RADIUS Server

This section presents an overview of the RADIUS configuration procedure and defines the Cisco RADIUS attributes. It includes the following topics:

- [Reviewing the RADIUS Configuration Procedure, page C-27](#)
- [ASA RADIUS Authorization Attributes, page C-27](#)
- [ASA IETF RADIUS Authorization Attributes, page C-36](#)
- [RADIUS Accounting Disconnect Reason Codes, page C-37](#)

## Reviewing the RADIUS Configuration Procedure

This section describes the RADIUS configuration steps required to support authentication and authorization of ASA users.

To set up the RADIUS server to interoperate with the ASA, preform the following steps:

- 
- Step 1** Load the ASA attributes into the RADIUS server. The method you use to load the attributes depends on which type of RADIUS server you are using:
- If you are using Cisco ACS: the server already has these attributes integrated. You can skip this step.
  - If you are using a FUNK RADIUS server: Cisco supplies a dictionary file that contains all the ASA attributes. Obtain this dictionary file, `cisco3k.dct`, from the Cisco Download Software Center on Cisco.com or from the ASA CD-ROM. Load the dictionary file on your server.
  - For RADIUS servers from other vendors (for example, Microsoft Internet Authentication Service): you must manually define each ASA attribute. To define an attribute, use the attribute name or number, type, value, and vendor code (3076). For a list of ASA RADIUS authorization attributes and values, see [Table C-7](#).
- Step 2** Set up the users or groups with the permissions and attributes to send during IPsec or SSL tunnel establishment.
- 

## ASA RADIUS Authorization Attributes

Authorization refers to the process of enforcing permissions or attributes. A RADIUS server defined as an authentication server enforces permissions or attributes if they are configured. These attributes have vendor ID 3076.

[Table C-7](#) lists the ASA supported RADIUS attributes that can be used for user authorization.



### Note

RADIUS attribute names do not contain the `cVPN3000` prefix. Cisco Secure ACS 4.x supports this new nomenclature, but attribute names in pre-4.0 ACS releases still include the `cVPN3000` prefix. The ASAs enforce the RADIUS attributes based on attribute numeric ID, not attribute name. LDAP attributes are enforced by their name, not by the ID.

All attributes listed in [Table C-7](#) are downstream attributes that are sent from the RADIUS server to the ASA except for the following attribute numbers: 146, 150, 151, and 152. These attribute numbers are upstream attributes that are sent from the ASA to the RADIUS server. RADIUS attributes 146 and 150

are sent from the ASA to the RADIUS server for authentication and authorization requests. All four previously listed attributes are sent from the ASA to the RADIUS server for accounting start, interim-update, and stop requests. Upstream RADIUS attributes 146, 150, 151, and 152 were introduced in ASA Version 8.4.3.

**Table C-7 ASA Supported RADIUS Attributes and Values**

| Attribute Name           | VPN 3000 | ASA | PIX | Attr. No. | Syntax/ Type | Single or Multi-Valued | Description or Value                                                                                                                                                                                    |
|--------------------------|----------|-----|-----|-----------|--------------|------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Access-Hours             | Y        | Y   | Y   | 1         | String       | Single                 | Name of the time range, for example, Business-hours                                                                                                                                                     |
| Simultaneous-Logins      | Y        | Y   | Y   | 2         | Integer      | Single                 | 0 - 2147483647                                                                                                                                                                                          |
| Primary-DNS              | Y        | Y   | Y   | 5         | String       | Single                 | An IP address                                                                                                                                                                                           |
| Secondary-DNS            | Y        | Y   | Y   | 6         | String       | Single                 | An IP address                                                                                                                                                                                           |
| Primary-WINS             | Y        | Y   | Y   | 7         | String       | Single                 | An IP address                                                                                                                                                                                           |
| Secondary-WINS           | Y        | Y   | Y   | 8         | String       | Single                 | An IP address                                                                                                                                                                                           |
| SEP-Card-Assignment      |          |     |     | 9         | Integer      | Single                 | Not used                                                                                                                                                                                                |
| Tunneling-Protocols      | Y        | Y   | Y   | 11        | Integer      | Single                 | 1 = PPTP<br>2 = L2TP<br>4 = IPsec (IKEv1)<br>8 = L2TP/IPsec<br>16 = WebVPN<br>32 = SVC<br>64 = IPsec (IKEv2)<br>8 and 4 are mutually exclusive<br>(0 - 11, 16 - 27, 32 - 43, 48 - 59 are legal values). |
| IPsec-Sec-Association    | Y        |     |     | 12        | String       | Single                 | Name of the security association                                                                                                                                                                        |
| IPsec-Authentication     | Y        |     |     | 13        | Integer      | Single                 | 0 = None<br>1 = RADIUS<br>2 = LDAP (authorization only)<br>3 = NT Domain<br>4 = SDI<br>5 = Internal<br>6 = RADIUS with Expiry<br>7 = Kerberos/Active Directory                                          |
| Banner1                  | Y        | Y   | Y   | 15        | String       | Single                 | Banner string to display for Cisco VPN remote access sessions: IPsec IKEv1, AnyConnect SSL-TLS/DTLS/IKEv2, and Clientless SSL                                                                           |
| IPsec-Allow-Passwd-Store | Y        | Y   | Y   | 16        | Boolean      | Single                 | 0 = Disabled<br>1 = Enabled                                                                                                                                                                             |

Table C-7 ASA Supported RADIUS Attributes and Values (continued)

| Attribute Name          | VPN 3000 | ASA | PIX | Attr. No. | Syntax/Type | Single or Multi-Valued | Description or Value                                                                                                                                                                                                                                                                                                                              |
|-------------------------|----------|-----|-----|-----------|-------------|------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Use-Client-Address      | Y        |     |     | 17        | Boolean     | Single                 | 0 = Disabled<br>1 = Enabled                                                                                                                                                                                                                                                                                                                       |
| PPTP-Encryption         | Y        |     |     | 20        | Integer     | Single                 | Bitmap:<br>1 = Encryption required<br>2 = 40 bits<br>4 = 128 bits<br>8 = Stateless-Required<br>15= 40/128-Encr/Stateless-Req                                                                                                                                                                                                                      |
| L2TP-Encryption         | Y        |     |     | 21        | Integer     | Single                 | Bitmap:<br>1 = Encryption required<br>2 = 40 bits<br>4 = 128 bits<br>8 = Stateless-Req<br>15= 40/128-Encr/Stateless-Req                                                                                                                                                                                                                           |
| Group-Policy            |          | Y   | Y   | 25        | String      | Single                 | Sets the group policy for the remote access VPN session. For versions 8.2 and later, use this attribute instead of IETF-Radius-Class. You can use one of the three following formats: <ul style="list-style-type: none"> <li>• <i>group policy name</i></li> <li>• <i>OU=group policy name</i></li> <li>• <i>OU=group policy name;</i></li> </ul> |
| IPsec-Split-Tunnel-List | Y        | Y   | Y   | 27        | String      | Single                 | Specifies the name of the network/access list that describes the split tunnel inclusion list.                                                                                                                                                                                                                                                     |
| IPsec-Default-Domain    | Y        | Y   | Y   | 28        | String      | Single                 | Specifies the single default domain name to send to the client (1-255 characters).                                                                                                                                                                                                                                                                |
| IPsec-Split-DNS-Names   | Y        | Y   | Y   | 29        | String      | Single                 | Specifies the list of secondary domain names to send to the client (1-255 characters).                                                                                                                                                                                                                                                            |
| IPsec-Tunnel-Type       | Y        | Y   | Y   | 30        | Integer     | Single                 | 1 = LAN-to-LAN<br>2 = Remote access                                                                                                                                                                                                                                                                                                               |
| IPsec-Mode-Config       | Y        | Y   | Y   | 31        | Boolean     | Single                 | 0 = Disabled<br>1 = Enabled                                                                                                                                                                                                                                                                                                                       |
| IPsec-User-Group-Lock   | Y        |     |     | 33        | Boolean     | Single                 | 0 = Disabled<br>1 = Enabled                                                                                                                                                                                                                                                                                                                       |

Table C-7 ASA Supported RADIUS Attributes and Values (continued)

| Attribute Name                        | VPN 3000 | ASA | PIX | Attr. No. | Syntax/ Type | Single or Multi-Valued | Description or Value                                                                                                                                                                                     |
|---------------------------------------|----------|-----|-----|-----------|--------------|------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| IPsec-Over-UDP                        | Y        | Y   | Y   | 34        | Boolean      | Single                 | 0 = Disabled<br>1 = Enabled                                                                                                                                                                              |
| IPsec-Over-UDP-Port                   | Y        | Y   | Y   | 35        | Integer      | Single                 | 4001 - 49151. The default is 10000.                                                                                                                                                                      |
| Banner2                               | Y        | Y   | Y   | 36        | String       | Single                 | Banner string to display for Cisco VPN remote access sessions: IPsec IKEv1, AnyConnect SSL-TLS/DTLS/IKEv2, and Clientless SSL. The Banner2 string is concatenated to the Banner1 string , if configured. |
| PPTP-MPPC-Compression                 | Y        |     |     | 37        | Integer      | Single                 | 0 = Disabled<br>1 = Enabled                                                                                                                                                                              |
| L2TP-MPPC-Compression                 | Y        |     |     | 38        | Integer      | Single                 | 0 = Disabled<br>1 = Enabled                                                                                                                                                                              |
| IPsec-IP-Compression                  | Y        | Y   | Y   | 39        | Integer      | Single                 | 0 = Disabled<br>1 = Enabled                                                                                                                                                                              |
| IPsec-IKE-Peer-ID-Check               | Y        | Y   | Y   | 40        | Integer      | Single                 | 1 = Required<br>2 = If supported by peer certificate<br>3 = Do not check                                                                                                                                 |
| IKE-Keep-Alives                       | Y        | Y   | Y   | 41        | Boolean      | Single                 | 0 = Disabled<br>1 = Enabled                                                                                                                                                                              |
| IPsec-Auth-On-Rekey                   | Y        | Y   | Y   | 42        | Boolean      | Single                 | 0 = Disabled<br>1 = Enabled                                                                                                                                                                              |
| Required-Client- Firewall-Vendor-Code | Y        | Y   | Y   | 45        | Integer      | Single                 | 1 = Cisco Systems (with Cisco Integrated Client)<br>2 = Zone Labs<br>3 = NetworkICE<br>4 = Sygate<br>5 = Cisco Systems (with Cisco Intrusion Prevention Security Agent)                                  |

Table C-7 ASA Supported RADIUS Attributes and Values (continued)

| Attribute Name                            | VPN 3000 | ASA | PIX | Attr. No. | Syntax/Type | Single or Multi-Valued | Description or Value                                                                                                                                                                                                                                                                                                                                                 |
|-------------------------------------------|----------|-----|-----|-----------|-------------|------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Required-Client-Firewall-Product-Code     | Y        | Y   | Y   | 46        | Integer     | Single                 | Cisco Systems Products:<br>1 = Cisco Intrusion Prevention Security Agent or Cisco Integrated Client (CIC)<br><br>Zone Labs Products:<br>1 = Zone Alarm<br>2 = Zone AlarmPro<br>3 = Zone Labs Integrity<br><br>NetworkICE Product:<br>1 = BlackIce Defender/Agent<br><br>Sygate Products:<br>1 = Personal Firewall<br>2 = Personal Firewall Pro<br>3 = Security Agent |
| Required-Client-Firewall-Description      | Y        | Y   | Y   | 47        | String      | Single                 | String                                                                                                                                                                                                                                                                                                                                                               |
| Require-HW-Client-Auth                    | Y        | Y   | Y   | 48        | Boolean     | Single                 | 0 = Disabled<br>1 = Enabled                                                                                                                                                                                                                                                                                                                                          |
| Required-Individual-User-Auth             | Y        | Y   | Y   | 49        | Integer     | Single                 | 0 = Disabled<br>1 = Enabled                                                                                                                                                                                                                                                                                                                                          |
| Authenticated-User-Idle-Timeout           | Y        | Y   | Y   | 50        | Integer     | Single                 | 1-35791394 minutes                                                                                                                                                                                                                                                                                                                                                   |
| Cisco-IP-Phone-Bypass                     | Y        | Y   | Y   | 51        | Integer     | Single                 | 0 = Disabled<br>1 = Enabled                                                                                                                                                                                                                                                                                                                                          |
| IPsec-Split-Tunneling-Policy              | Y        | Y   | Y   | 55        | Integer     | Single                 | 0 = No split tunneling<br>1 = Split tunneling<br>2 = Local LAN permitted                                                                                                                                                                                                                                                                                             |
| IPsec-Required-Client-Firewall-Capability | Y        | Y   | Y   | 56        | Integer     | Single                 | 0 = None<br>1 = Policy defined by remote FW Are-You-There (AYT)<br>2 = Policy pushed CPP<br>4 = Policy from server                                                                                                                                                                                                                                                   |
| IPsec-Client-Firewall-Filter-Name         | Y        |     |     | 57        | String      | Single                 | Specifies the name of the filter to be pushed to the client as firewall policy                                                                                                                                                                                                                                                                                       |
| IPsec-Client-Firewall-Filter-Optional     | Y        | Y   | Y   | 58        | Integer     | Single                 | 0 = Required<br>1 = Optional                                                                                                                                                                                                                                                                                                                                         |
| IPsec-Backup-Servers                      | Y        | Y   | Y   | 59        | String      | Single                 | 1 = Use Client-Configured list<br>2 = Disable and clear client list<br>3 = Use Backup Server list                                                                                                                                                                                                                                                                    |
| IPsec-Backup-Server-List                  | Y        | Y   | Y   | 60        | String      | Single                 | Server Addresses (space delimited)                                                                                                                                                                                                                                                                                                                                   |

Table C-7 ASA Supported RADIUS Attributes and Values (continued)

| Attribute Name                    | VPN 3000 | ASA | PIX | Attr. No. | Syntax/ Type | Single or Multi-Valued | Description or Value                                                                                                                             |
|-----------------------------------|----------|-----|-----|-----------|--------------|------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------|
| DHCP-Network-Scope                | Y        | Y   | Y   | 61        | String       | Single                 | IP Address                                                                                                                                       |
| Intercept-DHCP-Configure-Msg      | Y        | Y   | Y   | 62        | Boolean      | Single                 | 0 = Disabled<br>1 = Enabled                                                                                                                      |
| MS-Client-Subnet-Mask             | Y        | Y   | Y   | 63        | Boolean      | Single                 | An IP address                                                                                                                                    |
| Allow-Network-Extension-Mode      | Y        | Y   | Y   | 64        | Boolean      | Single                 | 0 = Disabled<br>1 = Enabled                                                                                                                      |
| Authorization-Type                | Y        | Y   | Y   | 65        | Integer      | Single                 | 0 = None<br>1 = RADIUS<br>2 = LDAP                                                                                                               |
| Authorization-Required            | Y        |     |     | 66        | Integer      | Single                 | 0 = No<br>1 = Yes                                                                                                                                |
| Authorization-DN-Field            | Y        | Y   | Y   | 67        | String       | Single                 | Possible values: UID, OU, O, CN, L, SP, C, EA, T, N, GN, SN, I, GENQ, DNQ, SER, use-entire-name                                                  |
| IKE-KeepAlive-Confidence-Interval | Y        | Y   | Y   | 68        | Integer      | Single                 | 10 - 300 seconds                                                                                                                                 |
| WebVPN-Content-Filter-Parameters  | Y        | Y   |     | 69        | Integer      | Single                 | 1 = Java ActiveX<br>2 = Java Script<br>4 = Image<br>8 = Cookies in images                                                                        |
| WebVPN-URL-List                   |          | Y   |     | 71        | String       | Single                 | URL-List name                                                                                                                                    |
| WebVPN-Port-Forward-List          |          | Y   |     | 72        | String       | Single                 | Port-Forward list name                                                                                                                           |
| WebVPN-Access-List                |          | Y   |     | 73        | String       | Single                 | Access-List name                                                                                                                                 |
| Cisco-LEAP-Bypass                 | Y        | Y   | Y   | 75        | Integer      | Single                 | 0 = Disabled<br>1 = Enabled                                                                                                                      |
| WebVPN-Homepage                   | Y        | Y   |     | 76        | String       | Single                 | A URL such as<br>http://example-example.com                                                                                                      |
| Client-Type-Version-Limiting      | Y        | Y   | Y   | 77        | String       | Single                 | IPsec VPN version number string                                                                                                                  |
| WebVPN-Port-Forwarding-Name       | Y        | Y   |     | 79        | String       | Single                 | String name (example, "Corporate-Apps").<br><br>This text replaces the default string, "Application Access," on the clientless portal home page. |
| IE-Proxy-Server                   | Y        |     |     | 80        | String       | Single                 | IP address                                                                                                                                       |
| IE-Proxy-Server-Policy            | Y        |     |     | 81        | Integer      | Single                 | 1 = No Modify<br>2 = No Proxy<br>3 = Auto detect<br>4 = Use Concentrator Setting                                                                 |

Table C-7 ASA Supported RADIUS Attributes and Values (continued)

| Attribute Name                       | VPN 3000 | ASA | PIX | Attr. No. | Syntax/Type | Single or Multi-Valued | Description or Value                        |
|--------------------------------------|----------|-----|-----|-----------|-------------|------------------------|---------------------------------------------|
| IE-Proxy-Exception-List              | Y        |     |     | 82        | String      | Single                 | New line (\n) separated list of DNS domains |
| IE-Proxy-Bypass-Local                | Y        |     |     | 83        | Integer     | Single                 | 0 = None<br>1 = Local                       |
| IKE-Keepalive-Retry-Interval         | Y        | Y   | Y   | 84        | Integer     | Single                 | 2 - 10 seconds                              |
| Tunnel-Group-Lock                    |          | Y   | Y   | 85        | String      | Single                 | Name of the tunnel group or "none"          |
| Access-List-Inbound                  |          | Y   | Y   | 86        | String      | Single                 | Access list ID                              |
| Access-List-Outbound                 |          | Y   | Y   | 87        | String      | Single                 | Access list ID                              |
| Perfect-Forward-Secrecy-Enable       | Y        | Y   | Y   | 88        | Boolean     | Single                 | 0 = No<br>1 = Yes                           |
| NAC-Enable                           | Y        |     |     | 89        | Integer     | Single                 | 0 = No<br>1 = Yes                           |
| NAC-Status-Query-Timer               | Y        |     |     | 90        | Integer     | Single                 | 30 - 1800 seconds                           |
| NAC-Revalidation-Timer               | Y        |     |     | 91        | Integer     | Single                 | 300 - 86400 seconds                         |
| NAC-Default-ACL                      | Y        |     |     | 92        | String      |                        | Access list                                 |
| WebVPN-URL-Entry-Enable              | Y        | Y   |     | 93        | Integer     | Single                 | 0 = Disabled<br>1 = Enabled                 |
| WebVPN-File-Access-Enable            | Y        | Y   |     | 94        | Integer     | Single                 | 0 = Disabled<br>1 = Enabled                 |
| WebVPN-File-Server-Entry-Enable      | Y        | Y   |     | 95        | Integer     | Single                 | 0 = Disabled<br>1 = Enabled                 |
| WebVPN-File-Server-Browsing-Enable   | Y        | Y   |     | 96        | Integer     | Single                 | 0 = Disabled<br>1 = Enabled                 |
| WebVPN-Port-Forwarding-Enable        | Y        | Y   |     | 97        | Integer     | Single                 | 0 = Disabled<br>1 = Enabled                 |
| WebVPN-Outlook-Exchange-Proxy-Enable | Y        | Y   |     | 98        | Integer     | Single                 | 0 = Disabled<br>1 = Enabled                 |
| WebVPN-Port-Forwarding-HTTP-Proxy    | Y        | Y   |     | 99        | Integer     | Single                 | 0 = Disabled<br>1 = Enabled                 |
| WebVPN-Auto-Applet-Download-Enable   | Y        | Y   |     | 100       | Integer     | Single                 | 0 = Disabled<br>1 = Enabled                 |
| WebVPN-Citrix-Metaframe-Enable       | Y        | Y   |     | 101       | Integer     | Single                 | 0 = Disabled<br>1 = Enabled                 |
| WebVPN-Apply-ACL                     | Y        | Y   |     | 102       | Integer     | Single                 | 0 = Disabled<br>1 = Enabled                 |
| WebVPN-SSL-VPN-Client-Enable         | Y        | Y   |     | 103       | Integer     | Single                 | 0 = Disabled<br>1 = Enabled                 |

Table C-7 ASA Supported RADIUS Attributes and Values (continued)

| Attribute Name                          | VPN 3000 | ASA | PIX | Attr. No. | Syntax/ Type | Single or Multi-Valued | Description or Value                                                                                             |
|-----------------------------------------|----------|-----|-----|-----------|--------------|------------------------|------------------------------------------------------------------------------------------------------------------|
| WebVPN-SSL-VPN-Client-Required          | Y        | Y   |     | 104       | Integer      | Single                 | 0 = Disabled<br>1 = Enabled                                                                                      |
| WebVPN-SSL-VPN-Client-Keep-Installation | Y        | Y   |     | 105       | Integer      | Single                 | 0 = Disabled<br>1 = Enabled                                                                                      |
| SVC-Keepalive                           | Y        | Y   |     | 107       | Integer      | Single                 | 0 = Off<br>15 - 600 seconds                                                                                      |
| SVC-DPD-Interval-Client                 | Y        | Y   |     | 108       | Integer      | Single                 | 0 = Off<br>5 - 3600 seconds                                                                                      |
| SVC-DPD-Interval-Gateway                | Y        | Y   |     | 109       | Integer      | Single                 | 0 = Off)<br>5 - 3600 seconds                                                                                     |
| SVC-Rekey-Time                          |          | Y   |     | 110       | Integer      | Single                 | 0 = Disabled<br>1- 10080 minutes                                                                                 |
| WebVPN-Deny-Message                     |          | Y   |     | 116       | String       | Single                 | Valid string (up to 500 characters)                                                                              |
| Extended-Authentication-On-Rekey        |          | Y   | Y   | 122       | Integer      | Single                 | 0 = Disabled<br>1 = Enabled                                                                                      |
| SVC-DTLS                                |          | Y   |     | 123       | Integer      | Single                 | 0 = False<br>1 = True                                                                                            |
| SVC-MTU                                 |          | Y   |     | 125       | Integer      | Single                 | MTU value<br>256 - 1406 in bytes                                                                                 |
| SVC-Modules                             |          | Y   |     | 127       | String       | Single                 | String (name of a module)                                                                                        |
| SVC-Profiles                            |          | Y   |     | 128       | String       | Single                 | String (name of a profile)                                                                                       |
| SVC-Ask                                 |          | Y   |     | 131       | String       | Single                 | 0 = Disabled<br>1 = Enabled<br>3 = Enable default service<br>5 = Enable default clientless<br>(2 and 4 not used) |
| SVC-Ask-Timeout                         |          | Y   |     | 132       | Integer      | Single                 | 5 - 120 seconds                                                                                                  |
| IE-Proxy-PAC-URL                        |          | Y   |     | 133       | String       | Single                 | PAC Address String                                                                                               |
| Strip-Realm                             | Y        | Y   | Y   | 135       | Boolean      | Single                 | 0 = Disabled<br>1 = Enabled                                                                                      |
| Smart-Tunnel                            |          | Y   |     | 136       | String       | Single                 | Name of a Smart Tunnel                                                                                           |
| WebVPN-ActiveX-Relay                    |          | Y   |     | 137       | Integer      | Single                 | 0 = Disabled<br>Otherwise = Enabled                                                                              |
| Smart-Tunnel-Auto                       |          | Y   |     | 138       | Integer      | Single                 | 0 = Disabled<br>1 = Enabled<br>2 = AutoStart                                                                     |

Table C-7 ASA Supported RADIUS Attributes and Values (continued)

| Attribute Name                  | VPN 3000 | ASA | PIX | Attr. No. | Syntax/Type | Single or Multi-Valued | Description or Value                                                                                                                                                                                                                             |
|---------------------------------|----------|-----|-----|-----------|-------------|------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Smart-Tunnel-Auto-Signon-Enable |          | Y   |     | 139       | String      | Single                 | Name of a Smart Tunnel Auto Signon list appended by the domain name                                                                                                                                                                              |
| VLAN                            |          | Y   |     | 140       | Integer     | Single                 | 0 - 4094                                                                                                                                                                                                                                         |
| NAC-Settings                    |          | Y   |     | 141       | String      | Single                 | Name of the NAC policy                                                                                                                                                                                                                           |
| Member-Of                       |          | Y   | Y   | 145       | String      | Single                 | Comma-delimited string, for example:<br>Engineering, Sales<br><br>An administrative attribute that can be used in dynamic access policies. It does not set a group policy.                                                                       |
| Tunnel Group Name               |          | Y   | Y   | 146       | String      | Single                 | 1 - 253 characters                                                                                                                                                                                                                               |
| Client Type                     |          | Y   | Y   | 150       | Integer     | Single                 | 1 = Cisco VPN Client (IKEv1)<br>2 = AnyConnect Client SSL VPN<br>3 = Clientless SSL VPN<br>4 = Cut-Through-Proxy<br>5 = L2TP/IPsec SSL VPN<br>6 = AnyConnect Client IPsec VPN (IKEv2)                                                            |
| Session Type                    |          | Y   | Y   | 151       | Integer     | Single                 | 0 = None<br>1 = AnyConnect Client SSL VPN<br>2 = AnyConnect Client IPsec VPN (IKEv2)<br>3 = Clientless SSL VPN<br>4 = Clientless Email Proxy<br>5 = Cisco VPN Client (IKEv1)<br>6 = IKEv1 LAN-LAN<br>7 = IKEv2 LAN-LAN<br>8 = VPN Load Balancing |
| Session Subtype                 |          | Y   | Y   | 152       | Integer     | Single                 | 0 = None<br>1 = Clientless<br>2 = Client<br>3 = Client Only<br><br>Session Subtype applies only when the Session Type (151) attribute has the following values: 1, 2, 3, and 4.                                                                  |
| Address-Pools                   |          | Y   | Y   | 217       | String      | Single                 | Name of IP local pool                                                                                                                                                                                                                            |
| IPv6-Address-Pools              |          | Y   |     | 218       | String      | Single                 | Name of IP local pool-IPv6                                                                                                                                                                                                                       |

Table C-7 ASA Supported RADIUS Attributes and Values (continued)

| Attribute Name      | VPN 3000 | ASA | PIX | Attr. No. | Syntax/Type | Single or Multi-Valued | Description or Value                                                                                                                                                                                                                                                                                                  |
|---------------------|----------|-----|-----|-----------|-------------|------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| IPv6-VPN-Filter     |          | Y   |     | 219       | String      | Single                 | ACL value                                                                                                                                                                                                                                                                                                             |
| Privilege-Level     |          | Y   | Y   | 220       | Integer     | Single                 | An integer between 0 and 15.                                                                                                                                                                                                                                                                                          |
| WebVPN-Macro-Value1 |          | Y   |     | 223       | String      | Single                 | Unbounded. For examples, see the <i>SSL VPN Deployment Guide</i> at the following URL:<br><a href="http://supportwiki.cisco.com/ViewWiki/index.php/Cisco_ASA_5500_SSL_VPN_Deployment_Guide%2C_Version_8.x">http://supportwiki.cisco.com/ViewWiki/index.php/Cisco_ASA_5500_SSL_VPN_Deployment_Guide%2C_Version_8.x</a> |
| WebVPN-Macro-Value2 |          | Y   |     | 224       | String      | Single                 | Unbounded. For examples, see the <i>SSL VPN Deployment Guide</i> at the following URL:<br><a href="http://supportwiki.cisco.com/ViewWiki/index.php/Cisco_ASA_5500_SSL_VPN_Deployment_Guide%2C_Version_8.x">http://supportwiki.cisco.com/ViewWiki/index.php/Cisco_ASA_5500_SSL_VPN_Deployment_Guide%2C_Version_8.x</a> |

## ASA IETF RADIUS Authorization Attributes

Table C-8 lists the supported IETF RADIUS attributes.

Table C-8 ASA Supported IETF RADIUS Attributes and Values

| Attribute Name                | VPN 3000 | ASA | PIX | Attr. No. | Syntax/Type | Single or Multi-Valued | Description or Value                                                                                                                                                                                                                                                                     |
|-------------------------------|----------|-----|-----|-----------|-------------|------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| IETF-Radius-Class             | Y        | Y   | Y   | 25        |             | Single                 | For Versions 8.2.x and later, we recommend that you use the Group-Policy attribute (VSA 3076, #25) as described in Table C-7: <ul style="list-style-type: none"> <li>• <i>group policy name</i></li> <li>• <i>OU=group policy name</i></li> <li>• <i>OU=group policy name</i></li> </ul> |
| IETF-Radius-Filter-Id         | Y        | Y   | Y   | 11        | String      | Single                 | Access list name that is defined on the ASA, which applies only to full tunnel IPsec and SSL VPN clients                                                                                                                                                                                 |
| IETF-Radius-Framed-IP-Address | Y        | Y   | Y   | n/a       | String      | Single                 | An IP address                                                                                                                                                                                                                                                                            |
| IETF-Radius-Framed-IP-Netmask | Y        | Y   | Y   | n/a       | String      | Single                 | An IP address mask                                                                                                                                                                                                                                                                       |
| IETF-Radius-Idle-Timeout      | Y        | Y   | Y   | 28        | Integer     | Single                 | Seconds                                                                                                                                                                                                                                                                                  |

**Table C-8** ASA Supported IETF RADIUS Attributes and Values

|                             |   |   |   |    |         |        |                                                                                                                                                                                                              |
|-----------------------------|---|---|---|----|---------|--------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| IETF-Radius-Service-Type    | Y | Y | Y | 6  | Integer | Single | Seconds. Possible Service Type values:<br>.Administrative—User is allowed access to configure prompt.<br>.NAS-Prompt—User is allowed access to exec prompt.<br>.remote-access—User is allowed network access |
| IETF-Radius-Session-Timeout | Y | Y | Y | 27 | Integer | Single | Seconds                                                                                                                                                                                                      |

## RADIUS Accounting Disconnect Reason Codes

These codes are returned if the ASA encounters a disconnect when sending packets:

### Disconnect Reason Code

ACCT\_DISC\_USER\_REQ = 1

ACCT\_DISC\_LOST\_CARRIER = 2

ACCT\_DISC\_LOST\_SERVICE = 3

ACCT\_DISC\_IDLE\_TIMEOUT = 4

ACCT\_DISC\_SESS\_TIMEOUT = 5

ACCT\_DISC\_ADMIN\_RESET = 6

ACCT\_DISC\_ADMIN\_REBOOT = 7

ACCT\_DISC\_PORT\_ERROR = 8

ACCT\_DISC\_NAS\_ERROR = 9

ACCT\_DISC\_NAS\_REQUEST = 10

ACCT\_DISC\_NAS\_REBOOT = 11

ACCT\_DISC\_PORT\_UNNEEDED = 12

ACCT\_DISC\_PORT\_PREEMPTED = 13

ACCT\_DISC\_PORT\_SUSPENDED = 14

ACCT\_DISC\_SERV\_UNAVAIL = 15

ACCT\_DISC\_CALLBACK = 16

ACCT\_DISC\_USER\_ERROR = 17

ACCT\_DISC\_HOST\_REQUEST = 18

ACCT\_DISC\_ADMIN\_SHUTDOWN = 19

ACCT\_DISC\_SA\_EXPIRED = 21

ACCT\_DISC\_MAX\_REASONS = 22

# Configuring an External TACACS+ Server

The ASA provides support for TACACS+ attributes. TACACS+ separates the functions of authentication, authorization, and accounting. The protocol supports two types of attributes: mandatory and optional. Both the server and client must understand a mandatory attribute, and the mandatory attribute must be applied to the user. An optional attribute may or may not be understood or used.


**Note**

To use TACACS+ attributes, make sure that you have enabled AAA services on the NAS.

[Table C-9](#) lists supported TACACS+ authorization response attributes for cut-through-proxy connections. [Table C-10](#) lists supported TACACS+ accounting attributes.

**Table C-9 Supported TACACS+ Authorization Response Attributes**

| Attribute | Description                                                                                                                                         |
|-----------|-----------------------------------------------------------------------------------------------------------------------------------------------------|
| acl       | Identifies a locally configured access list to be applied to the connection.                                                                        |
| idletime  | Indicates the amount of inactivity in minutes that is allowed before the authenticated user session is terminated.                                  |
| timeout   | Specifies the absolute amount of time in minutes that authentication credentials remain active before the authenticated user session is terminated. |

**Table C-10 Supported TACACS+ Accounting Attributes**

| Attribute    | Description                                                                                                                                                            |
|--------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| bytes_in     | Specifies the number of input bytes transferred during this connection (stop records only).                                                                            |
| bytes_out    | Specifies the number of output bytes transferred during this connection (stop records only).                                                                           |
| cmd          | Defines the command executed (command accounting only).                                                                                                                |
| disc-cause   | Indicates the numeric code that identifies the reason for disconnecting (stop records only).                                                                           |
| elapsed_time | Defines the elapsed time in seconds for the connection (stop records only).                                                                                            |
| foreign_ip   | Specifies the IP address of the client for tunnel connections. Defines the address on the lowest security interface for cut-through-proxy connections.                 |
| local_ip     | Specifies the IP address that the client connected to for tunnel connections. Defines the address on the highest security interface for cut-through-proxy connections. |
| NAS port     | Contains a session ID for the connection.                                                                                                                              |
| packs_in     | Specifies the number of input packets transferred during this connection.                                                                                              |
| packs_out    | Specifies the number of output packets transferred during this connection.                                                                                             |
| priv-level   | Set to the user privilege level for command accounting requests or to 1 otherwise.                                                                                     |
| rem_addr     | Indicates the IP address of the client.                                                                                                                                |
| service      | Specifies the service used. Always set to “shell” for command accounting only.                                                                                         |

**Table C-10** Supported TACACS+ Accounting Attributes (continued)

| <b>Attribute</b> | <b>Description</b>                                         |
|------------------|------------------------------------------------------------|
| task_id          | Specifies a unique task ID for the accounting transaction. |
| username         | Indicates the name of the user.                            |





## GLOSSARY

[Numerics](#) | [A](#) | [B](#) | [C](#) | [D](#) | [E](#) | [F](#) | [G](#) | [H](#) | [I](#) | [J](#) | [K](#) | [L](#) | [M](#) | [N](#) | [O](#) | [P](#) | [Q](#) | [R](#) | [S](#) | [T](#) | [U](#) | [V](#) | [W](#) | [X](#)

---

### Numerics

**3DES** See [DES](#).

---

### A

**AAA** Authentication, authorization, and accounting. See also [TACACS+](#) and [RADIUS](#).

**ABR** Area Border Router. In [OSPF](#), a router with interfaces in multiple areas.

**ACE** access control entry. Information entered into the configuration that lets you specify what type of traffic to permit or deny on an [interface](#). By default, traffic that is not explicitly permitted is denied.

**Access Modes** The ASA CLI uses several command modes. The commands available in each mode vary. See also [user EXEC mode](#), [privileged EXEC mode](#), [global configuration mode](#), [command-specific configuration mode](#).

**ACL** access control list. A collection of [ACEs](#). An ACL lets you specify what type of traffic to allow on an interface. By default, traffic that is not explicitly permitted is denied. ACLs are usually applied to the [interface](#) which is the source of inbound traffic. See also [rule](#), [outbound ACL](#).

**ActiveX** A set of object-oriented programming technologies and tools used to create mobile or portable programs. An ActiveX program is roughly equivalent to a Java applet.

**Address Resolution Protocol** See [ARP](#).

**address translation** The translation of a network address and/or port to another network address/or port. See also [IP address](#), [interface PAT](#), [NAT](#), [PAT](#), [Static PAT](#), [xlate](#).

**AES** Advanced Encryption Standard. A symmetric block cipher that can encrypt and decrypt information. The AES algorithm is capable of using cryptographic keys of 128, 192 and 256 bits to encrypt and decrypt data in blocks of 128 bits. See also [DES](#).

**AH** Authentication Header. An IP protocol (type 51) that can ensure data integrity, authentication, and replay detection. AH is embedded in the data to be protected (a full IP datagram, for example). AH can be used either by itself or with [ESP](#). AH is an older [IPsec](#) protocol that is less important in most networks than [ESP](#). AH provides authentication services but does not provide encryption services. It is provided to ensure compatibility with [IPsec](#) peers that do not support [ESP](#), which provides both [authentication](#) and [encryption](#). See also [encryption](#) and [VPN](#). Refer to the RFC 2402.

**AIP** Advanced Inspection and Prevention. For example, the AIP SSM or AIP SSC, which runs IPS software.

|                              |                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>A record address</b>      | “A” stands for address, and refers to name-to-address mapped records in <a href="#">DNS</a> .                                                                                                                                                                                                                                                                                                                                          |
| <b>APCF</b>                  | Application Profile Customization Framework. Lets the security appliance handle nonstandard applications so that they render correctly over a clientless SSL VPN connection.                                                                                                                                                                                                                                                           |
| <b>ARP</b>                   | Address Resolution Protocol. A low-level TCP/IP protocol that maps a hardware address, or MAC address, to an IP address. An example hardware address is 00:00:a6:00:01:ba. The first three groups of characters (00:00:a6) identify the manufacturer; the rest of the characters (00:01:ba) identify the system card. ARP is defined in RFC 826.                                                                                       |
| <b>ASA</b>                   | Adaptive Security Algorithm. Used by the ASA to perform inspections. ASA allows one-way (inside to outside) connections without an explicit configuration for each internal system and application. See also <a href="#">inspection engine</a> .                                                                                                                                                                                       |
| <b>ASA</b>                   | adaptive ASA.                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>ASDM</b>                  | Adaptive Security Device Manager. An application for managing and configuring a single ASA.                                                                                                                                                                                                                                                                                                                                            |
| <b>asymmetric encryption</b> | Also called public key systems, asymmetric encryption allows anyone to obtain access to the public key of anyone else. Once the public key is accessed, you can send an encrypted message to that person using the public key. See also <a href="#">encryption</a> , <a href="#">public key</a> .                                                                                                                                      |
| <b>authentication</b>        | Cryptographic protocols and services that verify the identity of users and the integrity of data. One of the functions of the <a href="#">IPsec</a> framework. Authentication establishes the integrity of the datastream and ensures that it is not tampered with in transit. It also provides confirmation about the origin of the datastream. See also <a href="#">AAA</a> , <a href="#">encryption</a> , and <a href="#">VPN</a> . |
| <b>Auto Applet Download</b>  | Automatically downloads the clientless SSL VPN port-forwarding applet when the user first logs in to clientless SSL VPN.                                                                                                                                                                                                                                                                                                               |
| <b>auto-signon</b>           | This command provides a single sign-on method for clientless SSL VPN users. It passes the clientless SSL VPN login credentials (username and password) to internal servers for authentication using NTLM authentication, basic authentication, or both.                                                                                                                                                                                |
| <hr/>                        |                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>B</b>                     |                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>backup server</b>         | IPsec backup servers let a VPN client connect to the central site when the primary security appliance is unavailable.                                                                                                                                                                                                                                                                                                                  |
| <b>BGP</b>                   | Border Gateway Protocol. BGP performs interdomain routing in TCP/IP networks. BGP is an Exterior Gateway Protocol, which means that it performs routing between multiple autonomous systems or domains and exchanges routing and access information with other BGP systems. The ASA does not support BGP. See also <a href="#">EGP</a> .                                                                                               |
| <b>BLT stream</b>            | Bandwidth Limited Traffic stream. Stream or flow of packets whose bandwidth is constrained.                                                                                                                                                                                                                                                                                                                                            |
| <b>BOOTP</b>                 | Bootstrap Protocol. Lets diskless workstations boot over the network as is described in RFC 951 and RFC 1542.                                                                                                                                                                                                                                                                                                                          |
| <b>BPDU</b>                  | Bridge Protocol Data Unit. Spanning-Tree Protocol hello packet that is sent out at configurable intervals to exchange information among bridges in the network. Protocol data unit is the OSI term for packet.                                                                                                                                                                                                                         |

---

**C**

|                                            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|--------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>CA</b>                                  | Certificate Authority, Certification Authority. A third-party entity that is responsible for issuing and revoking certificates. Each device with the public key of the CA can authenticate a device that has a certificate issued by the CA. The term CA also refers to software that provides CA services. See also <a href="#">certificate</a> , <a href="#">CRL</a> , <a href="#">public key</a> , <a href="#">RA</a> .                                                        |
| <b>cache</b>                               | A temporary repository of information accumulated from previous task executions that can be reused, decreasing the time required to perform the tasks. Caching stores frequently reused objects in the system cache, which reduces the need to perform repeated rewriting and compressing of content.                                                                                                                                                                             |
| <b>CBC</b>                                 | Cipher Block Chaining. A cryptographic technique that increases the encryption strength of an algorithm. CBC requires an initialization vector (IV) to start encryption. The IV is explicitly given in the <a href="#">IPsec</a> packet.                                                                                                                                                                                                                                          |
| <b>certificate</b>                         | A signed cryptographic object that contains the identity of a user or device and the public key of the <a href="#">CA</a> that issued the certificate. Certificates have an expiration date and may also be placed on a <a href="#">CRL</a> if known to be compromised. Certificates also establish non-repudiation for <a href="#">IKE</a> negotiation, which means that you can prove to a third party that <a href="#">IKE</a> negotiation was completed with a specific peer. |
| <b>CHAP</b>                                | Challenge Handshake Authentication Protocol.                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>CIFS</b>                                | Common Internet File System. It is a platform-independent file sharing system that provides users with network access to files, printers, and other machine resources. Microsoft implemented CIFS for networks of Windows computers, however, open source implementations of CIFS provide file access to servers running other operating systems, such as Linux, UNIX, and Mac OS X.                                                                                              |
| <b>Citrix</b>                              | An application that virtualizes client-server applications and optimizes web applications.                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>CLI</b>                                 | command-line interface. The primary interface for entering configuration and monitoring commands to the ASA.                                                                                                                                                                                                                                                                                                                                                                      |
| <b>client/server computing</b>             | Distributed computing (processing) network systems in which transaction responsibilities are divided into two parts: client (front end) and server (back end). Also called distributed computing. See also <a href="#">RPC</a> .                                                                                                                                                                                                                                                  |
| <b>Client update</b>                       | Lets you update revisions of clients to which the update applies; provide a URL or IP address from which to get the update; and, in the case of Windows clients, optionally notify users that they should update their VPN client version.                                                                                                                                                                                                                                        |
| <b>command-specific configuration mode</b> | From global configuration mode, some commands enter a command-specific configuration mode. All user EXEC, privileged EXEC, global configuration, and command-specific configuration commands are available in this mode. See also <a href="#">global configuration mode</a> , <a href="#">privileged EXEC mode</a> , <a href="#">user EXEC mode</a> .                                                                                                                             |
| <b>compression</b>                         | The process of encoding information using fewer bits or other information-bearing units than an unencoded representation would use. Compression can reduce the size of transferring packets and increase communication performance.                                                                                                                                                                                                                                               |
| <b>configuration, config, config file</b>  | A file on the ASA that represents the equivalent of settings, preferences, and properties administered by <a href="#">ASDM</a> or the <a href="#">CLI</a> .                                                                                                                                                                                                                                                                                                                       |

|                                         |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|-----------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Content Rewriting/Transformation</b> | Interprets and modifies applications so that they render correctly over a clientless SSL VPN connection.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>cookie</b>                           | A cookie is a object stored by a browser. Cookies contain information, such as user preferences, to persistent storage.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>CPU</b>                              | Central Processing Unit. Main processor.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>CRC</b>                              | Cyclical Redundancy Check. Error-checking technique in which the frame recipient calculates a remainder by dividing frame contents by a prime binary divisor and compares the calculated remainder to a value stored in the frame by the sending node.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>CRL</b>                              | Certificate Revocation List. A digitally signed message that lists all of the current but revoked certificates listed by a given <a href="#">CA</a> . A CRL is analogous to a book of stolen charge card numbers that allow stores to reject bad credit cards. When certificates are revoked, they are added to a CRL. When you implement authentication using certificates, you can choose to use CRLs or not. Using CRLs lets you easily revoke certificates before they expire, but the CRL is generally only maintained by the <a href="#">CA</a> or an <a href="#">RA</a> . If you are using CRLs and the connection to the <a href="#">CA</a> or <a href="#">RA</a> is not available when authentication is requested, the authentication request will fail. See also <a href="#">CA</a> , <a href="#">certificate</a> , <a href="#">public key</a> , <a href="#">RA</a> . |
| <b>CRV</b>                              | Call Reference Value. Used by <a href="#">H.225.0</a> to distinguish call legs signaled between two entities.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>cryptography</b>                     | Encryption, authentication, integrity, keys and other services used for secure communication over networks. See also <a href="#">VPN</a> and <a href="#">IPsec</a> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>crypto map</b>                       | A data structure with a unique name and sequence number that is used for configuring VPNs on the ASA. A crypto map selects data flows that need security processing and defines the policy for these flows and the crypto peer that traffic needs to go to. A crypto map is applied to an interface. Crypto maps contain the <a href="#">ACLs</a> , encryption standards, peers, and other parameters necessary to specify security policies for <a href="#">VPNs</a> using <a href="#">IKE</a> and <a href="#">IPsec</a> . See also <a href="#">VPN</a> .                                                                                                                                                                                                                                                                                                                       |
| <b>CTIQBE</b>                           | Computer Telephony Interface Quick Buffer Encoding. A protocol used in IP telephony between the Cisco CallManager and CTI <a href="#">TAPI</a> and <a href="#">JTAPI</a> applications. CTIQBE is used by the TAPI/JTAPI protocol inspection module and supports <a href="#">NAT</a> , <a href="#">PAT</a> , and bidirectional <a href="#">NAT</a> . This protocol enables Cisco IP SoftPhone and other Cisco TAPI/JTAPI applications to communicate with Cisco CallManager for call setup and voice traffic across the ASA.                                                                                                                                                                                                                                                                                                                                                      |
| <b>cut-through proxy</b>                | Enables the ASA to provide faster traffic flow after user authentication. The cut-through proxy challenges a user initially at the application layer. After the security appliance authenticates the user, it shifts the session flow and all traffic flows directly and quickly between the source and destination while maintaining session state information.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |

---

## D

|                             |                                                                                                                                                                                                                                                   |
|-----------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>data confidentiality</b> | Describes any method that manipulates data so that no attacker can read it. This is commonly achieved by data encryption and <a href="#">keys</a> that are only available to the parties involved in the communication.                           |
| <b>data integrity</b>       | Describes mechanisms that, through the use of encryption based on <a href="#">secret key</a> or <a href="#">public key</a> algorithms, allow the recipient of a piece of protected data to verify that the data has not been modified in transit. |

|                                                          |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|----------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>data origin authentication</b>                        | A security service where the receiver can verify that protected data could have originated only from the sender. This service requires a data integrity service plus a <a href="#">key</a> distribution mechanism, where a <a href="#">secret key</a> is shared only between the sender and receiver.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>decryption</b>                                        | Application of a specific algorithm or cipher to encrypted data so as to render the data comprehensible to those who are authorized to see the information. See also <a href="#">encryption</a> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>DES</b>                                               | Data encryption standard. DES was published in 1977 by the National Bureau of Standards and is a secret key encryption scheme based on the Lucifer algorithm from IBM. Cisco uses DES in classic crypto (40-bit and 56-bit key lengths), <a href="#">IPsec</a> crypto (56-bit key), and 3DES (triple DES), which performs encryption three times using a 56-bit key. 3DES is more secure than DES but requires more processing for encryption and decryption. See also <a href="#">AES</a> , <a href="#">ESP</a> .                                                                                                                                                                                                                                                                                                                                       |
| <b>DHCP</b>                                              | Dynamic Host Configuration Protocol. Provides a mechanism for allocating IP addresses to hosts dynamically, so that addresses can be reused when hosts no longer need them and so that mobile computers, such as laptops, receive an IP address applicable to the <a href="#">LAN</a> to which it is connected.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Diffie-Hellman</b>                                    | A public key cryptography protocol that allows two parties to establish a shared secret over insecure communications channels. Diffie-Hellman is used within <a href="#">IKE</a> to establish session keys. Diffie-Hellman is a component of <a href="#">Oakley</a> key exchange.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Diffie-Hellman Group 1, Group 2, Group 5, Group 7</b> | <p>Diffie-Hellman refers to a type of public key cryptography using asymmetric encryption based on large prime numbers to establish both Phase 1 and Phase 2 <a href="#">SAs</a>. Group 1 provides a smaller prime number than Group 2 but may be the only version supported by some <a href="#">IPsec</a> peers. Diffie-Hellman Group 5 uses a 1536-bit prime number, is the most secure, and is recommended for use with <a href="#">AES</a>. Group 7 has an elliptical curve field size of 163 bits and is for use with the Movian VPN client, but works with any peer that supports Group 7 (ECC). See also <a href="#">VPN</a> and <a href="#">encryption</a>.</p> <p><b>Note</b> The <b>group 7</b> command option was deprecated in ASA Version 8.0(4). Attempts to configure group 7 will generate an error message and use group 5 instead.</p> |
| <b>digital certificate</b>                               | See <a href="#">certificate</a> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>DMZ</b>                                               | See <a href="#">interface</a> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>DN</b>                                                | Distinguished Name. Global, authoritative name of an entry in the OSI Directory (X.500).                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>DNS</b>                                               | Domain Name System (or Service). An Internet service that translates domain names into IP addresses.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>DoS</b>                                               | Denial of Service. A type of network attack in which the goal is to render a network service unavailable.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>DSL</b>                                               | digital subscriber line. Public network technology that delivers high bandwidth over conventional copper wiring at limited distances. DSL is provisioned via modem pairs, with one modem located at a central office and the other at the customer site. Because most DSL technologies do not use the whole bandwidth of the twisted pair, there is room remaining for a voice channel.                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>DSP</b>                                               | digital signal processor. A DSP segments a voice signal into frames and stores them in voice packets.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>DSS</b>                                               | Digital Signature Standard. A digital signature algorithm designed by The US National Institute of Standards and Technology and based on public-key cryptography. DSS does not do user datagram encryption. DSS is a component in classic crypto, as well as the Redcreek <a href="#">IPsec</a> card, but not in <a href="#">IPsec</a> implemented in Cisco IOS software.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |

**Dynamic NAT** See [NAT](#) and [address translation](#).

**Dynamic PAT** Dynamic Port Address Translation. Dynamic PAT lets multiple outbound sessions appear to originate from a single IP address. With PAT enabled, the ASA chooses a unique port number from the PAT IP address for each outbound translation slot ([xlate](#)). This feature is valuable when an [ISP](#) cannot allocate enough unique IP addresses for your outbound connections. The global pool addresses always come first, before a PAT address is used. See also [NAT](#), [Static PAT](#), and [xlate](#).

---

## E

**ECHO** See [ping](#), [ICMP](#). See also [inspection engine](#).

**EGP** Exterior Gateway Protocol. Replaced by BGP. The ASA does not support EGP. See also [BGP](#).

**EIGRP** Enhanced Interior Gateway Routing Protocol. The ASA does not support EIGRP.

**EMBLEM** Enterprise Management BaseLine Embedded Manageability. A syslog format designed to be consistent with the Cisco IOS system log format and is more compatible with CiscoWorks management applications.

**encryption** Application of a specific algorithm or cipher to data so as to render the data incomprehensible to those unauthorized to see the information. See also [decryption](#).

**ESMTP** Extended [SMTP](#). Extended version of [SMTP](#) that includes additional functionality, such as delivery notification and session delivery. ESMTP is described in RFC 1869, SMTP Service Extensions.

**ESP** Encapsulating Security Payload. An [IPsec](#) protocol, ESP provides authentication and encryption services for establishing a secure tunnel over an insecure network. For more information, refer to RFCs 2406 and 1827.

---

## F

**failover, failover mode** Failover lets you configure two ASAs so that one will take over operation if the other one fails. The ASA supports two failover configurations, Active/Active failover and Active/Standby failover. Each failover configuration has its own method for determining and performing failover. With Active/Active failover, both units can pass network traffic. Active/Active failover lets you configure load balancing on your network. Active/Active failover is only available on units running in multiple context mode. With Active/Standby failover, only one unit passes traffic while the other unit waits in a standby state. Active/Standby failover is available on units running in either single or multiple context mode.

**Fixup** See [inspection engine](#).

**Flash, Flash memory** A nonvolatile storage device used to store the configuration file when the ASA is powered down.

**FQDN/IP** Fully qualified domain name/IP address. [IPsec](#) parameter that identifies peers that are security gateways.

**FragGuard** Provides IP fragment protection and performs full reassembly of all [ICMP](#) error messages and virtual reassembly of the remaining IP fragments that are routed through the ASA.

**FTP** File Transfer Protocol. Part of the TCP/IP protocol stack, used for transferring files between hosts.

---

## G

**GGSN** gateway [GPRS](#) support node. A wireless gateway that allows mobile cell phone users to access the public data network or specified private IP networks.

**global configuration mode** Global configuration mode lets you change the ASA configuration. All user EXEC, privileged EXEC, and global configuration commands are available in this mode. See also [user EXEC mode](#), [privileged EXEC mode](#), [command-specific configuration mode](#).

**GMT** Greenwich Mean Time. Replaced by UTC (Coordinated Universal Time) in 1967 as the world time standard.

**GPRS** general packet radio service. A service defined and standardized by the European Telecommunication Standards Institute. GPRS is an IP-packet-based extension of [GSM](#) networks and provides mobile, wireless, data communications

**GRE** Generic Routing Encapsulation described in RFCs 1701 and 1702. GRE is a tunneling protocol that can encapsulate a wide variety of protocol packet types inside IP tunnels, creating a virtual point-to-point link to routers at remote points over an IP network. By connecting multiprotocol subnetworks in a single-protocol backbone environment, IP tunneling using GRE allows network expansion across a single protocol backbone environment.

**GSM** Global System for Mobile Communication. A digital, mobile, radio standard developed for mobile, wireless, voice communications.

**GTP** GPRS tunneling protocol. GTP handles the flow of user packet data and signaling information between the [SGSN](#) and [GGSN](#) in a [GPRS](#) network. GTP is defined on both the Gn and Gp interfaces of a [GPRS](#) network.

---

## H

**H.225** A protocol used for TCP signaling in applications such as video conferencing. See also [H.323](#) and [inspection engine](#).

**H.225.0** An ITU standard that governs H.225.0 session establishment and packetization. H.225.0 actually describes several different protocols: RAS, use of Q.931, and use of [RTP](#).

**H.245** An ITU standard that governs H.245 endpoint control.

**H.320** Suite of ITU-T standard specifications for video conferencing over circuit-switched media, such as ISDN, fractional T-1, and switched-56 lines. Extensions of ITU-T standard H.320 enable video conferencing over LANs and other packet-switched networks, as well as video over the [Internet](#).

|                             |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|-----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>H.323</b>                | Allows dissimilar communication devices to communicate with each other by using a standardized communication protocol. H.323 defines a common set of CODECs, call setup and negotiating procedures, and basic data transport methods.                                                                                                                                                                                                                                                                                  |
| <b>H.323 RAS</b>            | Registration, admission, and status signaling protocol. Enables devices to perform registration, admissions, bandwidth changes, and status and disengage procedures between <a href="#">VoIP</a> gateway and the gatekeeper.                                                                                                                                                                                                                                                                                           |
| <b>H.450.2</b>              | Call transfer supplementary service for <a href="#">H.323</a> .                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>H.450.3</b>              | Call diversion supplementary service for <a href="#">H.323</a> .                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Hash, Hash Algorithm</b> | A hash algorithm is a one-way function that operates on a message of arbitrary length to create a fixed-length message digest used by cryptographic services to ensure its data integrity. MD5 has a smaller digest and is considered to be slightly faster than <a href="#">SHA-1</a> . Cisco uses both <a href="#">SHA-1</a> and <a href="#">MD5</a> hashes within our implementation of the <a href="#">IPsec</a> framework. See also <a href="#">encryption</a> , <a href="#">HMAC</a> , and <a href="#">VPN</a> . |
| <b>headend</b>              | A firewall, concentrator, or other host that serves as the entry point into a private network for <a href="#">VPN</a> client connections over the public network. See also <a href="#">ISP</a> and <a href="#">VPN</a> .                                                                                                                                                                                                                                                                                               |
| <b>HMAC</b>                 | A mechanism for message authentication using cryptographic hashes such as <a href="#">SHA-1</a> and <a href="#">MD5</a> .                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>host</b>                 | The name for any device on a TCP/IP network that has an IP address. See also <a href="#">network</a> and <a href="#">node</a> .                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>host/network</b>         | An IP address and netmask used with other information to identify a single host or network subnet for ASA configuration, such as an address translation ( <a href="#">xlate</a> ) or <a href="#">ACE</a> .                                                                                                                                                                                                                                                                                                             |
| <b>HTTP</b>                 | Hypertext Transfer Protocol. A protocol used by browsers and web servers to transfer files. When a user views a web page, the browser can use HTTP to request and receive the files used by the web page. HTTP transmissions are not encrypted.                                                                                                                                                                                                                                                                        |
| <b>HTTPS</b>                | Hypertext Transfer Protocol Secure. An <a href="#">SSL</a> -encrypted version of HTTP.                                                                                                                                                                                                                                                                                                                                                                                                                                 |

---

**I**

|             |                                                                                                                                                                           |
|-------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>IANA</b> | Internet Assigned Number Authority. Assigns all port and protocol numbers for use on the <a href="#">Internet</a> .                                                       |
| <b>ICMP</b> | Internet Control Message Protocol. Network-layer Internet protocol that reports errors and provides other information relevant to IP packet processing.                   |
| <b>IDS</b>  | Intrusion Detection System. A method of detecting malicious network activity by signatures and then implementing a policy for that signature.                             |
| <b>IETF</b> | The Internet Engineering Task Force. A technical standards organization that develops <a href="#">RFC</a> documents defining protocols for the <a href="#">Internet</a> . |
| <b>IGMP</b> | Internet Group Management Protocol. IGMP is a protocol used by IPv4 systems to report IP <a href="#">multicast</a> memberships to neighboring multicast routers.          |

|                                    |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>IKE</b>                         | Internet Key Exchange. IKE establishes a shared security policy and authenticates keys for services (such as <a href="#">IPsec</a> ) that require keys. Before any <a href="#">IPsec</a> traffic can be passed, each ASA must verify the identity of its peer. Identification can be done by manually entering preshared keys into both hosts or by a <a href="#">CA</a> service. IKE is a hybrid protocol that uses part <a href="#">Oakley</a> and part of another protocol suite called <a href="#">SKEME</a> inside the <a href="#">ISAKMP</a> framework. IKE (formerly known as ISAKMP/Oakley) is defined in RFC 2409.                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>IKE Extended Authentication</b> | IKE Extended Authenticate (Xauth) is implemented per the IETF draft-ietf-ipsec-isakmp-xauth-04.txt (extended authentication). This protocol provides the capability of authenticating a user within IKE using <a href="#">TACACS+</a> or <a href="#">RADIUS</a> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>IKE Mode Configuration</b>      | IKE Mode Configuration is implemented per the IETF draft-ietf-ipsec-isakmp-mode-cfg-04.txt. IKE Mode Configuration provides a method for a security gateway to download an IP address (and other network level configuration) to the VPN client as part of an IKE negotiation.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>ILS</b>                         | Internet Locator Service. ILS is based on LDAP and is ILSv2 compliant. ILS was developed by Microsoft for use with its NetMeeting, SiteServer, and Active Directory products.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>IMAP</b>                        | Internet Message Access Protocol. Method of accessing e-mail or bulletin board messages kept on a mail server that can be shared. IMAP permits client e-mail applications to access remote message stores as if they were local without actually transferring the message.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>implicit rule</b>               | An access rule automatically created by the ASA based on default rules or as a result of user-defined rules.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>IMSI</b>                        | International Mobile Subscriber Identity. One of two components of a <a href="#">GTP</a> tunnel ID, the other being the <a href="#">NSAPI</a> . See also <a href="#">NSAPI</a> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>inside</b>                      | The first interface, usually port 1, that connects your internal, trusted network protected by the ASA. See also <a href="#">interface</a> , <a href="#">interface name</a> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>inspection engine</b>           | The ASA inspects certain application-level protocols to identify the location of embedded addressing information in traffic. Inspection allows <a href="#">NAT</a> to translate these embedded addresses and to update any checksum or other fields that are affected by the translation. Because many protocols open secondary <a href="#">TCP</a> or <a href="#">UDP</a> ports, each application inspection engine also monitors sessions to determine the port numbers for secondary channels. The initial session on a well-known port is used to negotiate dynamically assigned port numbers. The application inspection engine monitors these sessions, identifies the dynamic port assignments, and permits data exchange on these ports for the duration of the specific session. Some of the protocols that the ASA can inspect are <a href="#">CTIQBE</a> , <a href="#">FTP</a> , <a href="#">H.323</a> , <a href="#">HTTP</a> , <a href="#">MGCP</a> , <a href="#">SMTP</a> , and <a href="#">SNMP</a> . |
| <b>interface</b>                   | The physical connection between a particular network and a ASA.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>interface IP address</b>        | The IP address of the ASA network interface. Each interface IP address must be unique. Two or more interfaces must not be given the same IP address or IP addresses that are on the same IP network.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>interface name</b>              | Human-readable name assigned to the ASA network interface. The inside interface default name is “inside” and the outside interface default name is “outside.” See also <a href="#">inside</a> and <a href="#">outside</a> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>interface PAT</b>               | The use of <a href="#">PAT</a> where the <a href="#">PAT</a> IP address is also the IP address of the outside interface. See <a href="#">Dynamic PAT</a> , <a href="#">Static PAT</a> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Internet</b>                    | The global network that uses <a href="#">IP</a> . Not a <a href="#">LAN</a> . See also <a href="#">intranet</a> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |

|                            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|----------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>intranet</b>            | Intranetwork. A LAN that uses <a href="#">IP</a> . See also <a href="#">network</a> and <a href="#">Internet</a> .                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>IP</b>                  | Internet Protocol. IP protocols are the most popular nonproprietary protocols because they can be used to communicate across any set of interconnected networks and are equally well suited for <a href="#">LAN</a> and <a href="#">WAN</a> communications.                                                                                                                                                                                                                                                                                         |
| <b>IPS</b>                 | Intrusion Prevention Service. An in-line, deep-packet inspection-based solution that helps mitigate a wide range of network attacks.                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>IP address</b>          | An IP protocol address. A ASA interface <code>ip_address</code> . IP version 4 addresses are 32 bits in length. This address space is used to designate the network number, optional subnetwork number, and a host number. The 32 bits are grouped into four octets (8 binary bits), represented by 4 decimal numbers separated by periods, or dots. The meaning of each of the four octets is determined by their use in a particular network.                                                                                                     |
| <b>IP pool</b>             | A range of local IP addresses specified by a name, and a range with a starting IP address and an ending address. IP pools are used by <a href="#">DHCP</a> and <a href="#">VPNs</a> to assign local IP addresses to clients on the inside interface.                                                                                                                                                                                                                                                                                                |
| <b>IPsec</b>               | IP Security. A framework of open standards that provides data confidentiality, data integrity, and data authentication between participating peers. IPsec provides these security services at the IP layer. IPsec uses <a href="#">IKE</a> to handle the negotiation of protocols and algorithms based on local policy and to generate the encryption and authentication keys to be used by IPsec. IPsec can protect one or more data flows between a pair of hosts, between a pair of security gateways, or between a security gateway and a host. |
| <b>IPsec Phase 1</b>       | The first phase of negotiating <a href="#">IPsec</a> , includes the key exchange and the <a href="#">ISAKMP</a> portions of <a href="#">IPsec</a> .                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>IPsec Phase 2</b>       | The second phase of negotiating <a href="#">IPsec</a> . Phase 2 determines the type of encryption rules used for payload, the source and destination that will be used for encryption, the definition of interesting traffic according to access lists, and the <a href="#">IPsec</a> peer. <a href="#">IPsec</a> is applied to the interface in Phase 2.                                                                                                                                                                                           |
| <b>IPsec transform set</b> | A transform set specifies the <a href="#">IPsec</a> protocol, encryption algorithm, and hash algorithm to use on traffic matching the <a href="#">IPsec</a> policy. A transform describes a security protocol ( <a href="#">AH</a> or <a href="#">ESP</a> ) with its corresponding algorithms. The <a href="#">IPsec</a> protocol used in almost all transform sets is <a href="#">ESP</a> with the <a href="#">DES</a> algorithm and HMAC-SHA for authentication.                                                                                  |
| <b>ISAKMP</b>              | Internet Security Association and Key Management Protocol. A protocol framework that defines payload formats, the mechanics of implementing a key exchange protocol, and the negotiation of a security association. See <a href="#">IKE</a> .                                                                                                                                                                                                                                                                                                       |
| <b>ISP</b>                 | Internet Service Provider. An organization that provides connection to the <a href="#">Internet</a> via their services, such as modem dial in over telephone voice lines or <a href="#">DSL</a> .                                                                                                                                                                                                                                                                                                                                                   |

---

**J**

|              |                                                                                                                                    |
|--------------|------------------------------------------------------------------------------------------------------------------------------------|
| <b>JTAPI</b> | Java Telephony Application Programming Interface. A Java-based API supporting telephony functions. See also <a href="#">TAPI</a> . |
|--------------|------------------------------------------------------------------------------------------------------------------------------------|

---

**K**

**key** A data object used for [encryption](#), [decryption](#), or [authentication](#).

---

**L**

**L2TP** Layer Two Tunneling Protocol. An IETF standards track protocol defined in RFC 2661 that provides tunneling of PPP. L2TP is an extension to the PPP. L2TP merges the older Cisco Layer Two Forwarding (L2F) protocol with PPTP. L2TP can be used with IPsec encryption and is considered more secure against attack than PPTP.

**LAN** Local area network. A network residing in one location, such as a single building or campus. See also [Internet](#), [intranet](#), and [network](#).

**layer, layers** Networking models implement layers with which different protocols are associated. The most common networking model is the OSI model, which consists of the following seven layers, in order: physical, data link, network, transport, session, presentation, and application.

**LCN** Logical channel number.

**LDAP** Lightweight Directory Access Protocol. LDAP provides management and browser applications with access to X.500 directories.

---

**M**

**mask** A 32-bit mask that shows how an [Internet](#) address is divided into network, subnet, and host parts. The mask has ones in the bit positions to be used for the network and subnet parts, and zeros for the host part. The mask should contain at least the standard network portion, and the subnet field should be contiguous with the network portion.

**MCR** See [multicast](#).

**MC router** Multicast (MC) routers route multicast data transmissions to the hosts on each LAN in an internetwork that are registered to receive specific multimedia or other broadcasts. See also [multicast](#).

**MD5** Message Digest 5. A one-way hashing algorithm that produces a 128-bit hash. Both MD5 and [SHA-1](#) are variations on MD4 and are designed to strengthen the security of the MD4 hashing algorithm. [SHA-1](#) is more secure than MD4 and MD5. Cisco uses hashes for authentication within the [IPsec](#) framework. Also used for message authentication in SNMP v.2. MD5 verifies the integrity of the communication, authenticates the origin, and checks for timeliness. [MD5](#) has a smaller digest and is considered to be slightly faster than [SHA-1](#).

**MDI** media dependent interface.

**MDIX** media dependent interface crossover.

**message digest** A message digest is created by a hash algorithm, such as [MD5](#) or [SHA-1](#), that is used for ensuring message integrity.

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>MGCP</b>                     | Media Gateway Control Protocol. Media Gateway Control Protocol is a protocol for the control of VoIP calls by external call-control elements known as media gateway controllers or call agents. MGCP merges the IPDC and <a href="#">SGCP</a> protocols.                                                                                                                                                                                                    |
| <b>Mode</b>                     | See <a href="#">Access Modes</a> .                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Mode Config</b>              | See <a href="#">IKE Mode Configuration</a> .                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Modular Policy Framework</b> | A means of configuring ASA features in a manner similar to Cisco IOS software Modular <a href="#">QoS CLI</a> .                                                                                                                                                                                                                                                                                                                                             |
| <b>MS</b>                       | mobile station. Refers generically to any mobile device, such as a mobile handset or computer, that is used to access network services. <a href="#">GPRS</a> networks support three classes of MS, which describe the type of operation supported within the <a href="#">GPRS</a> and the <a href="#">GSM</a> mobile wireless networks. For example, a Class A MS supports simultaneous operation of <a href="#">GPRS</a> and <a href="#">GSM</a> services. |
| <b>MS-CHAP</b>                  | Microsoft <a href="#">CHAP</a> .                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>MTU</b>                      | maximum transmission unit. The maximum number of bytes in a packet that can flow efficiently across the network with best response time. For Ethernet, the default MTU is 1500 bytes, but each network can have different values, with serial connections having the smallest values. The MTU is described in RFC 1191.                                                                                                                                     |
| <b>multicast</b>                | Refers to a network addressing method in which the source transmits a packet to multiple destinations, a multicast group, simultaneously. See also <a href="#">PIM</a> , <a href="#">SMR</a> .                                                                                                                                                                                                                                                              |

---

## N

|                |                                                                                                                                                                                                                                                                                                                                                         |
|----------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>N2H2</b>    | A third-party, policy-oriented filtering application that works with the ASA to control user web access. N2H2 can filter <a href="#">HTTP</a> requests based on the destination hostname, destination IP address, username, and password. The N2H2 corporation was acquired by Secure Computing in October, 2003.                                       |
| <b>NAT</b>     | Network Address Translation. Mechanism for reducing the need for globally unique IP addresses. NAT allows an organization with addresses that are not globally unique to connect to the <a href="#">Internet</a> by translating those addresses into a globally routable address space.                                                                 |
| <b>NEM</b>     | Network Extension Mode. Lets <a href="#">VPN</a> hardware clients present a single, routable network to the remote private network over the <a href="#">VPN</a> tunnel.                                                                                                                                                                                 |
| <b>NetBIOS</b> | Network Basic Input/Output System. A Microsoft protocol that supports Windows hostname registration, session management, and data transfer. The ASA supports NetBIOS by performing <a href="#">NAT</a> of the packets for NBNS UDP port 137 and NBDS UDP port 138.                                                                                      |
| <b>netmask</b> | See <a href="#">mask</a> .                                                                                                                                                                                                                                                                                                                              |
| <b>network</b> | In the context of ASA configuration, a network is a group of computing devices that share part of an IP address space and not a single host. A network consists of multiple nodes or hosts. See also <a href="#">host</a> , <a href="#">Internet</a> , <a href="#">intranet</a> , <a href="#">IP</a> , <a href="#">LAN</a> , and <a href="#">node</a> . |
| <b>NMS</b>     | network management system. System responsible for managing at least part of a network. An NMS is generally a reasonably powerful and well-equipped computer, such as an engineering workstation. NMSs communicate with agents to help keep track of network statistics and resources.                                                                   |

|                                    |                                                                                                                                                                                                                                                                                   |
|------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>node</b>                        | Devices such as routers and printers that would not normally be called hosts. See also <a href="#">host</a> , <a href="#">network</a> .                                                                                                                                           |
| <b>nonvolatile storage, memory</b> | Storage or memory that, unlike RAM, retains its contents without power. Data in a nonvolatile storage device survives a power-off, power-on cycle.                                                                                                                                |
| <b>NSAPI</b>                       | network service access point identifier. One of two components of a <a href="#">GTP</a> tunnel ID, the other component being the <a href="#">IMSI</a> . See also <a href="#">IMSI</a> .                                                                                           |
| <b>NSSA</b>                        | not-so-stubby-area. An OSPF feature described by RFC 1587. NSSA was first introduced in Cisco IOS software release 11.2. It is a nonproprietary extension of the existing stub area feature that allows the injection of external routes in a limited fashion into the stub area. |
| <b>NTLM</b>                        | NT Lan Manager. A Microsoft Windows challenge-response authentication method.                                                                                                                                                                                                     |
| <b>NTP</b>                         | Network Time Protocol.                                                                                                                                                                                                                                                            |

---

**O**

|                        |                                                                                                                                                                                                                                                                  |
|------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Oakley</b>          | A key exchange protocol that defines how to acquire authenticated keying material. The basic mechanism for Oakley is the <a href="#">Diffie-Hellman</a> key exchange algorithm. Oakley is defined in RFC 2412.                                                   |
| <b>object grouping</b> | Simplifies access control by letting you apply access control statements to groups of network objects, such as protocol, services, hosts, and networks.                                                                                                          |
| <b>OSPF</b>            | Open Shortest Path First. OSPF is a routing protocol for IP networks. OSPF is a routing protocol widely deployed in large networks because of its efficient use of network bandwidth and its rapid convergence after changes in topology. The ASA supports OSPF. |
| <b>OU</b>              | Organizational Unit. An X.500 directory attribute.                                                                                                                                                                                                               |
| <b>outbound</b>        | Refers to traffic whose destination is on an interface with lower security than the source interface.                                                                                                                                                            |
| <b>outbound ACL</b>    | An <a href="#">ACL</a> applied to outbound traffic.                                                                                                                                                                                                              |
| <b>outside</b>         | The first interface, usually port 0, that connects to other untrusted networks outside the ASA; the <a href="#">Internet</a> . See also <a href="#">interface</a> , <a href="#">interface name</a> , <a href="#">outbound</a> .                                  |

---

**P**

|                |                                                                                                                                                                                                                                                                                                                        |
|----------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>PAC</b>     | <a href="#">PPTP</a> Access Concentrator. A device attached to one or more PSTN or ISDN lines capable of <a href="#">PPP</a> operation and of handling the <a href="#">PPTP</a> protocol. The PAC needs to implement TCP/IP to pass traffic to one or more <a href="#">PNSs</a> . It may also tunnel non-IP protocols. |
| <b>PAT</b>     | See <a href="#">Dynamic PAT</a> , <a href="#">interface PAT</a> , and <a href="#">Static PAT</a> .                                                                                                                                                                                                                     |
| <b>PDP</b>     | Packet Data Protocol.                                                                                                                                                                                                                                                                                                  |
| <b>Perfmon</b> | The ASA feature that gathers and reports a wide variety of feature statistics, such as connections/second, xlates/second, and so on.                                                                                                                                                                                   |

|                   |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|-------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>PFS</b>        | Perfect Forwarding Secrecy. PFS enhances security by using a different security key for the <a href="#">IPsec Phase 1</a> and <a href="#">Phase 2 SAs</a> . Without PFS, the same security key is used to establish <a href="#">SAs</a> in both phases. PFS ensures that a given <a href="#">IPsec SA</a> key was not derived from any other secret (like some other keys). In other words, if someone were to break a key, PFS ensures that the attacker would not be able to derive any other key. If PFS were not enabled, someone could hypothetically break the <a href="#">IKE SA</a> secret key, copy all the <a href="#">IPsec</a> protected data, and then use knowledge of the <a href="#">IKE SA</a> secret to compromise the <a href="#">IPsec SA</a> setup by this <a href="#">IKE SA</a> . With PFS, breaking <a href="#">IKE</a> would not give an attacker immediate access to <a href="#">IPsec</a> . The attacker would have to break each <a href="#">IPsec SA</a> individually. |
| <b>Phase 1</b>    | See <a href="#">IPsec Phase 1</a> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Phase 2</b>    | See <a href="#">IPsec Phase 2</a> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>PIM</b>        | Protocol Independent Multicast. PIM provides a scalable method for determining the best paths for distributing a specific multicast transmission to a group of hosts. Each host has registered using IGMP to receive the transmission. See also <a href="#">PIM-SM</a> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>PIM-SM</b>     | Protocol Independent Multicast-Sparse Mode. With PIM-SM, which is the default for Cisco routers, when the source of a multicast transmission begins broadcasting, the traffic is forwarded from one MC router to the next, until the packets reach every registered host. See also <a href="#">PIM</a> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>ping</b>       | An <a href="#">ICMP</a> request sent by a host to determine if a second host is accessible.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>PIX</b>        | Private Internet eXchange. The Cisco PIX 500 series ASAs ranged from compact, plug-and-play desktop models for small/home offices to carrier-class gigabit models for the most demanding enterprise and service provider environments. Cisco PIX ASAs provided robust, enterprise-class integrated network security services to create a strong multilayered defense for fast changing network environments. The PIX has been replaced by the Cisco ASA 5500 series.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>PKCS12</b>     | A standard for the transfer of PKI-related data, such as private keys, certificates, and other data. Devices supporting this standard let administrators maintain a single set of personal identity information.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>PNS</b>        | <a href="#">PPTP</a> Network Server. A PNS is envisioned to operate on general-purpose computing/server platforms. The PNS handles the server side of <a href="#">PPTP</a> . Because <a href="#">PPTP</a> relies completely on TCP/IP and is independent of the interface hardware, the PNS may use any combination of IP interface hardware including <a href="#">LAN</a> and <a href="#">WAN</a> devices.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Policy NAT</b> | Lets you identify local traffic for address translation by specifying the source and destination addresses (or ports) in an access list.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>POP</b>        | Post Office Protocol. Protocol that client e-mail applications use to retrieve mail from a mail server.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Pool</b>       | See <a href="#">IP pool</a> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Port</b>       | A field in the packet headers of <a href="#">TCP</a> and <a href="#">UDP</a> protocols that identifies the higher level service which is the source or destination of the packet.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>PPP</b>        | Point-to-Point Protocol. Developed for dial-up <a href="#">ISP</a> access using analog phone lines and modems.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>PPPoE</b>      | Point-to-Point Protocol over Ethernet. An IP protocol that encapsulates <a href="#">PPP</a> packets and sends them over a local network or the internet to establish a connection to a host, usually between a client and an <a href="#">ISP</a> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |

|                                    |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>PPTP</b>                        | Point-to-Point Tunneling Protocol. PPTP was introduced by Microsoft to provide secure remote access to Windows networks; however, because it is vulnerable to attack, PPTP is commonly used only when stronger security methods are not available or are not required. PPTP Ports are pptp, 1723/tcp, 1723/udp, and pptp. For more information about PPTP, see RFC 2637. See also <a href="#">PAC</a> , <a href="#">PPTP GRE</a> , <a href="#">PPTP GRE tunnel</a> , <a href="#">PNS</a> , <a href="#">PPTP session</a> , and <a href="#">PPTP TCP</a> .                                          |
| <b>PPTP GRE</b>                    | Version 1 of GRE for encapsulating PPP traffic.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>PPTP GRE tunnel</b>             | A tunnel defined by a <a href="#">PNS-PAC</a> pair. The tunnel protocol is defined by a modified version of <a href="#">GRE</a> . The tunnel carries <a href="#">PPP</a> datagrams between the <a href="#">PAC</a> and the <a href="#">PNS</a> . Many sessions are multiplexed on a single tunnel. A control connection operating over <a href="#">TCP</a> controls the establishment, release, and maintenance of sessions and of the tunnel itself.                                                                                                                                             |
| <b>PPTP session</b>                | <a href="#">PPTP</a> is connection-oriented. The <a href="#">PNS</a> and <a href="#">PAC</a> maintain the state for each user that is attached to a <a href="#">PAC</a> . A session is created when an end-to-end <a href="#">PPP</a> connection is attempted between a dial-up user and the <a href="#">PNS</a> . The datagrams related to a session are sent over the tunnel between the <a href="#">PAC</a> and <a href="#">PNS</a> .                                                                                                                                                          |
| <b>PPTP TCP</b>                    | Standard <a href="#">TCP</a> session over which <a href="#">PPTP</a> call control and management information is passed. The control session is logically associated with, but separate from, the sessions being tunneled through a <a href="#">PPTP</a> tunnel.                                                                                                                                                                                                                                                                                                                                   |
| <b>preshared key</b>               | A preshared key provides a method of <a href="#">IKE</a> authentication that is suitable for networks with a limited, static number of <a href="#">IPsec</a> peers. This method is limited in scalability because the key must be configured for each pair of <a href="#">IPsec</a> peers. When a new <a href="#">IPsec</a> peer is added to the network, the preshared key must be configured for every <a href="#">IPsec</a> peer with which it communicates. Using <a href="#">certificates</a> and <a href="#">CAs</a> provides a more scalable method of <a href="#">IKE</a> authentication. |
| <b>primary, primary unit</b>       | The ASA normally operating when two units, a primary and secondary, are operating in failover mode.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>privileged EXEC mode</b>        | The highest privilege level at the ASA CLI. Any user EXEC mode command will work in privileged EXEC mode. The privileged EXEC mode prompt appears as follows after you enter the <b>enable</b> command:<br><br><pre>hostname&gt; enable hostname#</pre> <p>See also <a href="#">command-specific configuration mode</a>, <a href="#">global configuration mode</a>, <a href="#">user EXEC mode</a>.</p>                                                                                                                                                                                           |
| <b>protocol, protocol literals</b> | A standard that defines the exchange of packets between network nodes for communication. Protocols work together in layers. Protocols are specified in the ASA configuration as part of defining a security policy by their literal values or port numbers. Possible ASA protocol literal values are ahp, eigrp, esp, gre, icmp, igmp, igmp, ip, ipinip, ipsec, nos, ospf, pcp, snp, tcp, and udp.                                                                                                                                                                                                |
| <b>Proxy-ARP</b>                   | Enables the ASA to reply to an <a href="#">ARP</a> request for IP addresses in the global pool. See also <a href="#">ARP</a> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>public key</b>                  | A public key is one of a pair of keys that are generated by devices involved in public key infrastructure. Data encrypted with a public key can only be decrypted using the associated private key. When a private key is used to produce a digital signature, the receiver can use the public key of the sender to verify that the message was signed by the sender. These characteristics of key pairs provide a scalable and secure method of authentication over an insecure media, such as the <a href="#">Internet</a> .                                                                    |

---

**Q**

**QoS** quality of service. Measure of performance for a transmission system that reflects its transmission quality and service availability.

---

**R**

**RA** Registration Authority. An authorized proxy for a [CA](#). RAs can perform certificate enrollment and can issue [CRLs](#). See also [CA](#), [certificate](#), [public key](#).

**RADIUS** Remote Authentication Dial-In User Service. RADIUS is a distributed client/server system that secures networks against unauthorized access. RFC 2058 and RFC 2059 define the RADIUS protocol standard. See also [AAA](#) and [TACACS+](#).

**refresh** Retrieve the running configuration from the ASA and update the screen. The icon and the button perform the same function.

**registration authority** See [RA](#).

**replay-detection** A security service where the receiver can reject old or duplicate packets to defeat replay attacks. Replay attacks rely on the attacker sending out older or duplicate packets to the receiver and the receiver thinking that the bogus traffic is legitimate. Replay-detection is done by using sequence numbers combined with authentication and is a standard feature of [IPsec](#).

**RFC** Request for Comments. RFC documents define protocols and standards for communications over the [Internet](#). RFCs are developed and published by [IETF](#).

**RIP** Routing Information Protocol. Interior Gateway Protocol (IGP) supplied with UNIX BSD systems. The most common IGP in the [Internet](#). RIP uses hop count as a routing metric.

**RLLA** Reserved Link Local Address. Multicast addresses range from 224.0.0.0 to 239.255.255.255; however only the range 224.0.1.0 to 239.255.255.255 is available to users. The first part of the multicast address range, 224.0.0.0 to 224.0.0.255, is reserved and referred to as the RLLA. These addresses are unavailable.

**route, routing** The path through a [network](#).

**routed firewall mode** In routed firewall mode, the ASA is counted as a router hop in the network. It performs [NAT](#) between connected networks and can use [OSPF](#) or [RIP](#). See also [transparent firewall mode](#).

**RPC** Remote Procedure Call. RPCs are procedure calls that are built or specified by clients and executed on servers, with the results returned over the network to the clients.

**RSA** A [public key](#) cryptographic algorithm (named after its inventors, Rivest, Shamir, and Adelman) with a variable key length. The main weakness of RSA is that it is significantly slow to compute compared to popular secret-key algorithms, such as [DES](#). The Cisco implementation of [IKE](#) uses a [Diffie-Hellman](#) exchange to get the secret keys. This exchange can be authenticated with RSA (or preshared keys). With the [Diffie-Hellman](#) exchange, the [DES](#) key never crosses the network (not even in encrypted form), which is not the case with the RSA encrypt and sign technique. RSA is not public domain, and must be licensed from RSA Data Security.

|                              |                                                                                                                                                                                                                                                                                                                                                                                                                     |
|------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>RSH</b>                   | Remote Shell. A protocol that allows a user to execute commands on a remote system without having to log in to the system. For example, RSH can be used to remotely examine the status of a number of access servers without connecting to each communication server, executing the command, and then disconnecting from the communication server.                                                                  |
| <b>RTCP</b>                  | RTP Control Protocol. Protocol that monitors the <a href="#">QoS</a> of an IPv6 <a href="#">RTP</a> connection and conveys information about the ongoing session. See also <a href="#">RTP</a> .                                                                                                                                                                                                                    |
| <b>RTP</b>                   | Real-Time Transport Protocol. Commonly used with IP networks. RTP is designed to provide end-to-end network transport functions for applications transmitting real-time data, such as audio, video, or simulation data, over multicast or unicast network services. RTP provides such services as payload type identification, sequence numbering, timestamping, and delivery monitoring to real-time applications. |
| <b>RTSP</b>                  | Real Time Streaming Protocol. Enables the controlled delivery of real-time data, such as audio and video. RTSP is designed to work with established protocols, such as <a href="#">RTP</a> and <a href="#">HTTP</a> .                                                                                                                                                                                               |
| <b>rule</b>                  | Conditional statements added to the ASA configuration to define security policy for a particular situation. See also <a href="#">ACE</a> , <a href="#">ACL</a> , <a href="#">NAT</a> .                                                                                                                                                                                                                              |
| <b>running configuration</b> | The configuration currently running in RAM on the ASA. The configuration that determines the operational characteristics of the ASA.                                                                                                                                                                                                                                                                                |

---

## S

|                       |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|-----------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>SA</b>             | security association. An instance of security policy and keying material applied to a data flow. SAs are established in pairs by <a href="#">IPsec</a> peers during both phases of <a href="#">IPsec</a> . SAs specify the encryption algorithms and other security parameters used to create a secure tunnel. Phase 1 SAs ( <a href="#">IKE</a> SAs) establish a secure tunnel for negotiating Phase 2 SAs. Phase 2 SAs ( <a href="#">IPsec</a> SAs) establish the secure tunnel used for sending user data. Both <a href="#">IKE</a> and <a href="#">IPsec</a> use SAs, although SAs are independent of one another. <a href="#">IPsec</a> SAs are unidirectional and they are unique in each security protocol. A set of SAs are needed for a protected data pipe, one per direction per protocol. For example, if you have a pipe that supports <a href="#">ESP</a> between peers, one <a href="#">ESP</a> SA is required for each direction. SAs are uniquely identified by destination ( <a href="#">IPsec</a> endpoint) address, security protocol ( <a href="#">AH</a> or <a href="#">ESP</a> ), and Security Parameter Index. <a href="#">IKE</a> negotiates and establishes SAs on behalf of <a href="#">IPsec</a> . A user can also establish <a href="#">IPsec</a> SAs manually. An <a href="#">IKE</a> SA is used by <a href="#">IKE</a> only, and unlike the <a href="#">IPsec</a> SA, it is bidirectional. |
| <b>SCCP</b>           | Skinny Client Control Protocol. A Cisco-proprietary protocol used between Cisco Call Manager and Cisco <a href="#">VoIP</a> phones.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>SCEP</b>           | Simple Certificate Enrollment Protocol. A method of requesting and receiving (also known as enrolling) certificates from <a href="#">CAs</a> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>SDP</b>            | Session Definition Protocol. An <a href="#">IETF</a> protocol for the definition of Multimedia Services. SDP messages can be part of <a href="#">SGCP</a> and <a href="#">MGCP</a> messages.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>secondary unit</b> | The backup ASA when two are operating in failover mode.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>secret key</b>     | A secret key is a key shared only between the sender and receiver. See <a href="#">key</a> , <a href="#">public key</a> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |

|                            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|----------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>security context</b>    | You can partition a single ASA into multiple virtual firewalls, known as security contexts. Each context is an independent firewall, with its own security policy, interfaces, and administrators. Multiple contexts are similar to having multiple stand-alone firewalls.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>security services</b>   | See <a href="#">cryptography</a> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>serial transmission</b> | A method of data transmission in which the bits of a data character are transmitted sequentially over a single channel.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>SGCP</b>                | Simple Gateway Control Protocol. Controls <a href="#">VoIP</a> gateways by an external call control element (called a call-agent).                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>SGSN</b>                | Serving GPRS Support Node. The SGSN ensures mobility management, session management, and packet relaying functions.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>SHA-1</b>               | Secure Hash Algorithm 1. SHA-1 [NIS94c] is a revision to SHA that was published in 1994. SHA is closely modeled after MD4 and produces a 160-bit digest. Because SHA produces a 160-bit digest, it is more resistant to brute-force attacks than 128-bit hashes (such as <a href="#">MD5</a> ), but it is slower. Secure Hash Algorithm 1 is a joint creation of the National Institute of Standards and Technology and the National Security Agency. This algorithm, like other hash algorithms, is used to generate a hash value, also known as a message digest, that acts like a <a href="#">CRC</a> used in lower-layer protocols to ensure that message contents are not changed during transmission. SHA-1 is generally considered more secure than <a href="#">MD5</a> . |
| <b>SIP</b>                 | Session Initiation Protocol. Enables call handling sessions, particularly two-party audio conferences, or calls. SIP works with <a href="#">SDP</a> for call signaling. <a href="#">SDP</a> specifies the ports for the media stream. Using SIP, the ASA can support any SIP <a href="#">VoIP</a> gateways and <a href="#">VoIP</a> proxy servers.                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>site-to-site VPN</b>    | A site-to-site <a href="#">VPN</a> is established between two <a href="#">IPsec</a> peers that connect remote networks into a single <a href="#">VPN</a> . In this type of <a href="#">VPN</a> , neither <a href="#">IPsec</a> peer is the destination nor source of user traffic. Instead, each <a href="#">IPsec</a> peer provides encryption and authentication services for hosts on the <a href="#">LANs</a> connected to each <a href="#">IPsec</a> peer. The hosts on each <a href="#">LAN</a> send and receive data through the secure tunnel established by the pair of <a href="#">IPsec</a> peers.                                                                                                                                                                    |
| <b>SKEME</b>               | A key exchange protocol that defines how to derive authenticated keying material, with rapid key refreshment.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>SMR</b>                 | Stub Multicast Routing. SMR allows the ASA to function as a stub router. A stub router is a device that acts as an <a href="#">IGMP</a> proxy agent. <a href="#">IGMP</a> is used to dynamically register specific hosts in a multicast group on a particular <a href="#">LAN</a> with a multicast router. Multicast routers route multicast data transmissions to hosts that are registered to receive specific multimedia or other broadcasts. A stub router forwards <a href="#">IGMP</a> messages between hosts and <a href="#">MC routers</a> .                                                                                                                                                                                                                             |
| <b>SMTP</b>                | Simple Mail Transfer Protocol. SMTP is an Internet protocol that supports email services.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>SNMP</b>                | Simple Network Management Protocol. A standard method for managing network devices using data structures called Management Information Bases.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>split tunneling</b>     | Allows a remote <a href="#">VPN</a> client simultaneous encrypted access to a private network and clear unencrypted access to the <a href="#">Internet</a> . If you do not enable split tunneling, all traffic between the <a href="#">VPN</a> client and the ASA is sent through an <a href="#">IPsec</a> tunnel. All traffic originating from the <a href="#">VPN</a> client is sent to the outside interface through a tunnel, and client access to the <a href="#">Internet</a> from its remote site is denied.                                                                                                                                                                                                                                                              |

|                            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|----------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>spoofing</b>            | A type of attack designed to foil network security mechanisms such as filters and access lists. A spoofing attack sends a packet that claims to be from an address from which it was not actually sent.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>SQL*Net</b>             | Structured Query Language Protocol. An Oracle protocol used to communicate between client and server processes.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>SSC</b>                 | Security Services Card for the ASA 5505. For example, the AIP SSC.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>SSH</b>                 | Secure Shell. An application running on top of a reliable transport layer, such as TCP/IP, that provides strong authentication and encryption capabilities.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>SSL</b>                 | Secure Sockets Layer. A protocol that resides between the application layer and TCP/IP to provide transparent encryption of data traffic.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>SSM</b>                 | Security Services Module. For example, the AIP SSM or CSC SSM.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>standby unit</b>        | See <a href="#">secondary unit</a> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>stateful inspection</b> | Network protocols maintain certain data, called state information, at each end of a network connection between two hosts. State information is necessary to implement the features of a protocol, such as guaranteed packet delivery, data sequencing, flow control, and transaction or session IDs. Some of the protocol state information is sent in each packet while each protocol is being used. For example, a browser connected to a web server uses <a href="#">HTTP</a> and supporting TCP/IP protocols. Each protocol layer maintains state information in the packets it sends and receives. The ASA and some other firewalls inspect the state information in each packet to verify that it is current and valid for every protocol it contains. This feature is called stateful inspection and is designed to create a powerful barrier to certain types of computer security threats. |
| <b>Static PAT</b>          | Static Port Address Translation. Static PAT is a static address that also maps a local port to a global port. See also <a href="#">Dynamic PAT</a> , <a href="#">NAT</a> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>subnetmask</b>          | See <a href="#">mask</a> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |

---

## T

|                |                                                                                                                                                                                                                      |
|----------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>TACACS+</b> | Terminal Access Controller Access Control System Plus. A client-server protocol that supports <a href="#">AAA</a> services, including command authorization. See also <a href="#">AAA</a> , <a href="#">RADIUS</a> . |
| <b>TAPI</b>    | Telephony Application Programming Interface. A programming interface in Microsoft Windows that supports telephony functions.                                                                                         |
| <b>TCP</b>     | Transmission Control Protocol. Connection-oriented transport layer protocol that provides reliable full-duplex data transmission.                                                                                    |

|                                  |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|----------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>TCP Intercept</b>             | With the TCP intercept feature, once the optional embryonic connection limit is reached, and until the embryonic connection count falls below this threshold, every SYN bound for the affected server is intercepted. For each SYN, the ASA responds on behalf of the server with an empty SYN/ACK segment. The ASA retains pertinent state information, drops the packet, and waits for the client acknowledgment. If the ACK is received, a copy of the client SYN segment is sent to the server and the <a href="#">TCP</a> three-way handshake is performed between the ASA and the server. If this three-way handshake completes, the connection may resume as normal. If the client does not respond during any part of the connection phase, then the ASA retransmits the necessary segment using exponential back-offs. |
| <b>TDP</b>                       | Tag Distribution Protocol. TDP is used by tag switching devices to distribute, request, and release tag binding information for multiple network layer protocols in a tag switching network. TDP does not replace routing protocols. Instead, it uses information learned from routing protocols to create tag bindings. TDP is also used to open, monitor, and close TDP sessions and to indicate errors that occur during those sessions. TDP operates over a connection-oriented transport layer protocol with guaranteed sequential delivery (such as <a href="#">TCP</a> ). The use of TDP does not preclude the use of other mechanisms to distribute tag binding information, such as piggybacking information on other protocols.                                                                                       |
| <b>Telnet</b>                    | A terminal emulation protocol for TCP/IP networks such as the <a href="#">Internet</a> . Telnet is a common way to control web servers remotely; however, its security vulnerabilities have led to its replacement by <a href="#">SSH</a> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>TFTP</b>                      | Trivial File Transfer Protocol. TFTP is a simple protocol used to transfer files. It runs on UDP and is explained in depth in RFC 1350.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>TID</b>                       | Tunnel Identifier.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>TLS</b>                       | Transport Layer Security. A future IETF protocol to replace <a href="#">SSL</a> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>traffic policing</b>          | The traffic policing feature ensures that no traffic exceeds the maximum rate (bits per second) that you configure, which ensures that no one traffic flow can take over the entire resource.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>transform set</b>             | See <a href="#">IPsec transform set</a> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>translate, translation</b>    | See <a href="#">xlate</a> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>transparent firewall mode</b> | A mode in which the ASA is not a router hop. You can use transparent firewall mode to simplify your network configuration or to make the ASA invisible to attackers. You can also use transparent firewall mode to allow traffic through that would otherwise be blocked in <a href="#">routed firewall mode</a> . See also <a href="#">routed firewall mode</a> .                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>transport mode</b>            | An <a href="#">IPsec</a> encryption mode that encrypts only the data portion (payload) of each packet but leaves the header untouched. Transport mode is less secure than tunnel mode.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>TSP</b>                       | TAPI Service Provider. See also <a href="#">TAPI</a> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>tunnel mode</b>               | An <a href="#">IPsec</a> encryption mode that encrypts both the header and data portion (payload) of each packet. Tunnel mode is more secure than transport mode.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |

- tunnel** A method of transporting data in one protocol by encapsulating it in another protocol. Tunneling is used for reasons of incompatibility, implementation simplification, or security. For example, a tunnel lets a remote [VPN](#) client have encrypted access to a private network.
- Turbo ACL** Increases [ACL](#) lookup speeds by compiling them into a set of lookup tables. Packet headers are used to access the tables in a small, fixed number of lookups, independent of the existing number of [ACL](#) entries.

---

## U

- UDP** User Datagram Protocol. A connectionless transport layer protocol in the IP protocol stack. UDP is a simple protocol that exchanges datagrams without acknowledgments or guaranteed delivery, which requires other protocols to handle error processing and retransmission. UDP is defined in RFC 768.
- UMTS** Universal Mobile Telecommunication System. An extension of [GPRS](#) networks that moves toward an all-IP network by delivering broadband information, including commerce and entertainment services, to mobile users via fixed, wireless, and satellite networks.
- Unicast RPF** Unicast Reverse Path Forwarding. Unicast RPF guards against spoofing by ensuring that packets have a source IP address that matches the correct source interface according to the routing table.
- URL** Uniform Resource Locator. A standardized addressing scheme for accessing hypertext documents and other services using a browser. For example, <http://www.cisco.com>.
- user EXEC mode** The lowest privilege level at the ASA CLI. The user EXEC mode prompt appears as follows when you first access the ASA:
- ```
hostname>
```
- See also [command-specific configuration mode](#), [global configuration mode](#), and [privileged EXEC mode](#).
- UTC** Coordinated Universal Time. The time zone at zero degrees longitude, previously called Greenwich Mean Time (GMT) and Zulu time. UTC replaced GMT in 1967 as the world time standard. UTC is based on an atomic time scale rather than an astronomical time scale.
- UTRAN** Universal Terrestrial Radio Access Network. Networking protocol used for implementing wireless networks in UMTS. GTP allows multi-protocol packets to be tunneled through a UMTS/GPRS backbone between a [GGSN](#), an [SGSN](#) and the [UTRAN](#).
- UUIE** User-User Information Element. An element of an [H.225](#) packet that identifies the users implicated in the message.

V

- VLAN** Virtual [LAN](#). A group of devices on one or more [LANs](#) that are configured (using management software) so that they can communicate as if they were attached to the same physical network cable, when they are located on a number of different [LAN](#) segments. Because VLANs are based on logical instead of physical connections, they are extremely flexible.

VoIP	Voice over IP. VoIP carries normal voice traffic, such as telephone calls and faxes, over an IP-based network. DSP segments the voice signal into frames, which are coupled in groups of two and stored in voice packets. These voice packets are transported using IP in compliance with ITU-T specification H.323 .
VPN	Virtual Private Network. A network connection between two peers over the public network that is made private by strict authentication of users and the encryption of all data traffic. You can establish VPNs between clients, such as PCs, or a headend , such as the ASA.
virtual firewall	See security context .
VSA	Vendor-specific attribute. An attribute in a RADIUS packet that is defined by a vendor rather than by RADIUS RFCs. The RADIUS protocol uses IANA-assigned vendor numbers to help identify VSAs. This lets different vendors have VSAs of the same number. The combination of a vendor number and a VSA number makes a VSA unique. For example, the cisco-av-pair VSA is attribute 1 in the set of VSAs related to vendor number 9. Each vendor can define up to 256 VSAs. A RADIUS packet contains any VSAs attribute 26, named Vendor-specific. VSAs are sometimes referred to as subattributes.

W

WAN	wide-area network. Data communications network that serves users across a broad geographic area and often uses transmission devices provided by common carriers.
WCCP	Web Cache Communication Protocol. Transparently redirects selected types of traffic to a group of web cache engines to optimize resource usage and lower response times.
Websense	A content filtering solution that manages employee access to the Internet . Websense uses a policy engine and a URL database to control user access to websites.
WEP	Wired Equivalent Privacy. A security protocol for wireless LANs , defined in the IEEE 802.11b standard.
WINS	Windows Internet Naming Service. A Windows system that determines the IP address associated with a particular network device, also known as name resolution. WINS uses a distributed database that is automatically updated with the NetBIOS names of network devices currently available and the IP address assigned to each one. WINS provides a distributed database for registering and querying dynamic NetBIOS names to IP address mapping in a routed network environment. It is the best choice for NetBIOS name resolution in such a routed network because it is designed to solve the problems that occur with name resolution in complex networks.

X

X.509	A widely used standard for defining digital certificates. X.509 is actually an ITU recommendation, which means that it has not yet been officially defined or approved for standardized usage.
--------------	--

xauth See [IKE Extended Authentication](#).

xlate An xlate, also referred to as a translation entry, represents the mapping of one IP address to another, or the mapping of one IP address/port pair to another.



INDEX

Symbols

/bits subnet masks [B-3](#)
?
 command string [A-4](#)
 help [A-4](#)

Numerics

4GE SSM
 connector types [6-12](#)
 fiber [6-12](#)
 SFP [6-12](#)
802.1Q tagging [7-9](#)
802.1Q trunk [6-30](#)

A

AAA

 about [35-1](#)
 accounting [38-18](#)
 addressing, configuring [68-2](#)
 authentication
 CLI access [37-19](#)
 network access [38-2](#)
 privileged EXEC mode [37-19](#)
 authorization
 command [37-22](#)
 downloadable access lists [38-14](#)
 network access [38-11](#)
 local database support [35-8](#)
 performance [38-1](#)
 server [77-4](#)

 adding [35-11](#)
 types [35-1](#)
 support summary [35-3](#)
 web clients [38-6](#)
abbreviating commands [A-3](#)
ABR
 definition of [24-2](#)
Access Control Server [70-4, 70-13](#)
Access Group pane
 description [26-7](#)
access hours, username attribute [67-81](#)
accessing the security appliance using SSL [74-6](#)
accessing the security appliance using TKS1 [74-6](#)
access list filter, username attribute [67-82](#)
access lists
 about [14-1](#)
 ACE logging, configuring [20-1](#)
 deny flows, managing [20-5](#)
 downloadable [38-14](#)
 exemptions from posture validation [70-11](#)
 global access rules [34-2](#)
 group policy WebVPN filter [67-74](#)
 implicit deny [14-3, 34-3](#)
 inbound [34-3](#)
 IP address guidelines [14-3](#)
 IPsec [64-27](#)
 IPv6
 about [19-1](#)
 configuring [19-4](#)
 default settings [19-3](#)
 logging [20-1](#)
 NAT guidelines [14-3](#)
 Network Admission Control, default [70-10](#)

- object groups [13-2](#)
- outbound [34-3](#)
- phone proxy [48-7](#)
- remarks [15-5](#)
- scheduling activation [13-16](#)
- types [14-1](#)
- username for Clientless SSL VPN [67-88](#)
- access ports [7-7](#)
- ACEs
 - See* access lists
- activation key
 - entering [3-33](#)
 - location [3-32](#)
 - obtaining [3-33](#)
- Active/Active failover
 - about [63-1](#)
 - actions [63-5](#)
 - command replication [63-3](#)
 - configuration synchronization [63-3](#)
 - configuring
 - asymmetric routing support [63-18](#)
 - failover criteria [63-16](#)
 - failover group preemption [63-12](#)
 - HTTP replication [63-14](#)
 - interface monitoring [63-14](#)
 - virtual MAC addresses [63-16](#)
 - device initialization [63-3](#)
 - duplicate MAC addresses, avoiding [63-2, 63-17](#)
 - optional settings
 - about [63-6](#)
 - configuring [63-12](#)
 - primary status [63-2](#)
 - secondary status [63-2](#)
 - triggers [63-4](#)
- Active/Standby failover
 - about [62-1](#)
 - actions [62-4](#)
 - command replication [62-3](#)
 - configuration synchronization [62-2](#)
 - device initialization [62-2](#)
 - primary unit [62-2](#)
 - secondary unit [62-2](#)
 - triggers [62-4](#)
- Active Directory, settings for password management [67-28](#)
- Active Directory procedures [C-16 to ??](#)
- ActiveX filtering [39-2](#)
- Adaptive Security Algorithm [1-27](#)
- Add/Edit Access Group dialog box
 - description [26-7](#)
- Add/Edit IGMP Join Group dialog box
 - description [26-6](#)
- Add/Edit OSPF Neighbor Entry dialog box [24-12](#)
- admin context
 - about [5-2](#)
 - changing [5-24](#)
- administrative access
 - using ICMP for [37-11](#)
- administrative distance [22-3, 22-5](#)
- Advanced Encryption Standard (AES) [64-9, 64-10](#)
- AIP
 - See* IPS module
- AIP SSC
 - loading an image [58-21, 58-23, 60-14](#)
- AIP SSM
 - about [58-1](#)
 - loading an image [58-21, 58-23, 60-14](#)
 - port-forwarding
 - enabling [8-6, 9-8](#)
- alternate address, ICMP message [B-15](#)
- analyzing syslog messages [77-2](#)
- Application Access Panel, WebVPN [74-88](#)
- application access using Clientless SSL VPN
 - group policy attribute for Clientless SSL VPN [67-75](#)
 - username attribute for Clientless SSL VPN [67-89](#)
- application access using WebVPN
 - and hosts file errors [74-72](#)
 - quitting properly [74-73](#)

- application inspection
 - about [42-1](#)
 - applying [42-6](#)
 - configuring [42-6](#)
 - inspection class map [33-6](#)
 - inspection policy map [33-2](#)
 - security level requirements [8-2, 9-2](#)
 - special actions [33-1](#)
- Application Profile Customization Framework [74-84](#)
- area border router [24-2](#)
- ARP
 - NAT [29-22](#)
- ARP inspection
 - about [4-10](#)
 - enabling [4-12](#)
 - static entry [4-11](#)
- ARP spoofing [4-10](#)
- ARP test, failover [61-15](#)
- ASA (Adaptive Security Algorithm) [1-27](#)
- ASA 5505
 - Base license [7-2](#)
 - client
 - authentication [71-12](#)
 - configuration restrictions, table [71-2](#)
 - device pass-through [71-8](#)
 - group policy attributes pushed to [71-10](#)
 - mode [71-3](#)
 - remote management [71-9](#)
 - split tunneling [71-8](#)
 - TCP [71-4](#)
 - trustpoint [71-7](#)
 - tunnel group [71-7](#)
 - tunneling [71-5](#)
 - Xauth [71-4](#)
 - MAC addresses [7-4](#)
 - maximum VLANs [7-2](#)
 - native VLAN support [7-10](#)
 - non-forwarding interface [7-7](#)
 - power over Ethernet [7-4](#)
 - protected switch ports [7-8, 7-10](#)
 - Security Plus license [7-2](#)
 - server (headend) [71-1](#)
 - SPAN [7-4](#)
 - Spanning Tree Protocol, unsupported [7-8](#)
- ASA 5550 throughput [8-6, 9-9](#)
- ASA CX module
 - about [59-1](#)
 - ASA feature compatibility [59-4](#)
 - authentication proxy
 - about [59-3](#)
 - port [59-10](#)
 - troubleshooting [59-20](#)
 - basic settings [59-7](#)
 - cabling [59-6](#)
 - configuration [59-6](#)
 - debugging [59-19](#)
 - failover [59-5](#)
 - licensing [59-4](#)
 - management access [59-2](#)
 - management defaults [59-5](#)
 - management IP address [59-7](#)
 - monitoring [59-12](#)
 - password reset [59-17](#)
 - PRSM [59-3](#)
 - reload [59-18](#)
 - security policy [59-9](#)
 - sending traffic to [59-11](#)
 - shutdown [59-19](#)
 - traffic flow [59-2](#)
 - VPN [59-4](#)
- ASBR
 - definition of [24-2](#)
- ASDM software
 - allowing access [37-6](#)
 - installing [81-2](#)
- ASR [63-18](#)
- asymmetric routing
 - TCP state bypass [53-4](#)

- asymmetric routing support [63-18](#)
 - attacks
 - DNS request for all records [57-10](#)
 - DNS zone transfer [57-10](#)
 - DNS zone transfer from high port [57-10](#)
 - fragmented ICMP traffic [57-6, 57-9](#)
 - IP fragment [57-4, 57-7](#)
 - IP impossible packet [57-4, 57-7](#)
 - large ICMP traffic [57-6, 57-9](#)
 - ping of death [57-6, 57-9](#)
 - proxied RPC request [57-10](#)
 - statd buffer overflow [57-11](#)
 - TCP NULL flags [57-6, 57-9](#)
 - TCP SYN+FIN flags [57-6, 57-9](#)
 - attributes
 - RADIUS [C-27](#)
 - username [67-80](#)
 - attribute-value pairs
 - TACACS+ [C-38](#)
 - attribute-value pairs (AVP) [67-36](#)
 - authentication
 - about [35-2](#)
 - ASA 5505 as Easy VPN client [71-12](#)
 - CLI access [37-19](#)
 - FTP [38-3](#)
 - HTTP [38-3](#)
 - network access [38-2](#)
 - privileged EXEC mode [37-19](#)
 - Telnet [38-3](#)
 - web clients [38-6](#)
 - WebVPN users with digital certificates [74-28, 74-29](#)
 - authorization
 - about [35-2](#)
 - command [37-22](#)
 - downloadable access lists [38-14](#)
 - network access [38-11](#)
 - Auto-MDI/MDIX [6-2, 7-4](#)
 - auto-signon
 - group policy attribute for Clientless SSL VPN [67-73](#)
 - username attribute for Clientless SSL VPN [67-91](#)
 - Auto-Update, configuring [81-16](#)
-
- B**
- backup server attributes, group policy [67-56](#)
 - Baltimore Technologies, CA server support [41-4](#)
 - banner message, group policy [67-48](#)
 - basic threat detection
 - See* threat detection
 - before configuring KCD [74-44](#)
 - bits subnet masks [B-3](#)
 - Black Ice firewall [67-67](#)
 - Botnet Traffic Filter
 - actions [55-2](#)
 - address categories [55-2](#)
 - blacklist
 - adding entries [55-9](#)
 - description [55-2](#)
 - blocking traffic manually [55-15](#)
 - classifying traffic [55-12](#)
 - configuring [55-6](#)
 - databases [55-2](#)
 - default settings [55-6](#)
 - DNS Reverse Lookup Cache
 - information about [55-4](#)
 - maximum entries [55-4](#)
 - using with dynamic database [55-10](#)
 - DNS snooping [55-10](#)
 - dropping traffic [55-13](#)
 - graylist [55-13](#)
 - dynamic database
 - enabling use of [55-7](#)
 - files [55-3](#)
 - information about [55-2](#)
 - searching [55-16](#)
 - updates [55-7](#)
 - examples [55-19](#)
 - feature history [55-22](#)

- graylist
 - description [55-2](#)
 - dropping traffic [55-13](#)
 - guidelines and limitations [55-6](#)
 - information about [55-1](#)
 - licensing [55-6](#)
 - monitoring [55-17](#)
 - static database
 - adding entries [55-9](#)
 - information about [55-3](#)
 - syslog messages [55-17](#)
 - task flow [55-7](#)
 - threat level
 - dropping traffic [55-13](#)
 - whitelist
 - adding entries [55-9](#)
 - description [55-2](#)
 - working overview [55-5](#)
- bridge
- entry timeout [4-15](#)
 - table, *See* MAC address table
- broadcast Ping test [61-15](#)
- building blocks [13-1](#)
- bypass authentication [71-8](#)
- bypassing firewall checks [53-3](#)
-
- C**
- CA
- certificate validation, not done in WebVPN [74-5](#)
 - CRs and [41-2](#)
 - public key cryptography [41-2](#)
 - revoked certificates [41-2](#)
 - supported servers [41-4](#)
- cached Kerberos tickets
- clearing [74-48](#)
 - showing [74-47](#)
- caching [74-81](#)
- capturing packets [82-14](#)
- cascading access lists [64-23](#)
- CA server
- Digicert [41-4](#)
 - Geotrust [41-4](#)
 - Godaddy [41-4](#)
 - iPlanet [41-4](#)
 - Netscape [41-4](#)
 - RSA Keon [41-4](#)
 - Thawte [41-4](#)
- certificate
- authentication, e-mail proxy [74-79](#)
 - Cisco Unified Mobility [50-5](#)
 - Cisco Unified Presence [51-4](#)
 - enrollment protocol [41-11](#)
 - group matching
 - configuring [64-17](#)
 - rule and policy, creating [64-17](#)
- Certificate Revocation Lists
- See* CRLs
- certificates
- phone proxy [48-15](#)
 - required by phone proxy [48-16](#)
- change query interval [26-8](#)
- change query response time [26-8](#)
- change query timeout value [26-8](#)
- changing between contexts [5-23](#)
- changing the severity level [77-18](#)
- Cisco-AV-Pair LDAP attributes [C-13](#)
- Cisco Integrated Firewall [67-66](#)
- Cisco IOS CS CA
- server support [41-4](#)
- Cisco IP Communicator [48-10](#)
- Cisco IP Phones
- DHCP [11-6](#)
- Cisco IP Phones, application inspection [44-25](#)
- Cisco Security Agent [67-66](#)
- Cisco Trust Agent [70-13](#)
- Cisco UMA. *See* Cisco Unified Mobility.
- Cisco Unified Mobility

- architecture [50-2](#)
- ASA role [47-2, 47-3](#)
- certificate [50-5](#)
- functionality [50-1](#)
- NAT and PAT requirements [50-3, 50-4](#)
- trust relationship [50-5](#)
- Cisco Unified Presence
 - ASA role [47-2, 47-3](#)
 - configuring the TLS Proxy [51-8](#)
 - debugging the TLS Proxy [51-14](#)
 - NAT and PAT requirements [51-2](#)
 - sample configuration [51-14](#)
 - trust relationship [51-4](#)
- Cisco UP. See Cisco Unified Presence.
- Class A, B, and C addresses [B-1](#)
- class-default class map [32-9](#)
- classes, logging
 - filtering messages by [77-16](#)
 - message class variables [77-4](#)
 - types [77-4](#)
- classes, resource
 - See resource management
- class map
 - inspection [33-6](#)
 - Layer 3/4
 - management traffic [32-14](#)
 - match commands [32-12, 32-15](#)
 - through traffic [32-12](#)
 - regular expression [13-15](#)
- clearing cached Kerberos tickets [74-48](#)
- CLI
 - abbreviating commands [A-3](#)
 - adding comments [A-5](#)
 - command line editing [A-3](#)
 - command output paging [A-5](#)
 - displaying [A-5](#)
 - help [A-4](#)
 - paging [A-5](#)
 - syntax formatting [A-3](#)
- client
 - VPN 3002 hardware, forcing client update [66-4](#)
 - Windows, client update notification [66-4](#)
- client access rules, group policy [67-68](#)
- client firewall, group policy [67-63](#)
- clientless authentication [70-13](#)
- Clientless SSL VPN
 - configuring for specific users [67-85](#)
- client mode [71-3](#)
- client update, performing [66-4](#)
- cluster
 - IP address, load balancing [66-6](#)
 - load balancing configurations [66-9](#)
 - mixed scenarios [66-10](#)
 - virtual [66-6](#)
- command authorization
 - about [37-14](#)
 - configuring [37-22](#)
 - multiple contexts [37-16](#)
- command prompts [A-2](#)
- comments
 - configuration [A-5](#)
- configuration
 - clearing [2-18](#)
 - comments [A-5](#)
 - factory default
 - commands [2-10](#)
 - restoring [2-11](#)
 - saving [2-16](#)
 - text file [2-19](#)
 - URL for a context [5-21](#)
 - viewing [2-18](#)
- configuration examples
 - CSC SSM [60-16](#)
 - logging [77-20](#)
- configuration examples for SNMP [79-28](#)
- configuration mode
 - accessing [2-2](#)
 - prompt [A-2](#)

- connection blocking [57-2](#)
 - connection limits
 - configuring [53-1](#)
 - per context [5-17](#)
 - connect time, maximum, username attribute [67-82](#)
 - console port logging [77-11](#)
 - content transformation, WebVPN [74-82](#)
 - context mode [27-2](#)
 - context modes [22-2, 23-3, 24-3, 25-3, 26-3, 60-6](#)
 - contexts
 - See* security contexts
 - conversion error, ICMP message [B-15](#)
 - cookies, enabling for WebVPN [74-10](#)
 - copying files using copy smb
 - command [81-8](#)
 - Coredump [82-14](#)
 - CRACK protocol [64-35](#)
 - crash dump [82-14](#)
 - creating a custom event list [77-13](#)
 - crypto map
 - access lists [64-27](#)
 - applying to interfaces [64-26, 73-10](#)
 - clearing configurations [64-35](#)
 - creating an entry to use the dynamic crypto map [69-13](#)
 - definition [64-20](#)
 - dynamic [64-32](#)
 - dynamic, creating [69-12](#)
 - entries [64-20](#)
 - examples [64-28](#)
 - policy [64-21](#)
 - crypto show commands table [64-34](#)
 - CSC SSM
 - about [60-1](#)
 - loading an image [58-21, 58-23, 60-14](#)
 - sending traffic to [60-10](#)
 - what to scan [60-3](#)
 - CSC SSM feature history [60-18](#)
 - custom firewall [67-67](#)
 - customization, Clientless SSL VPN
 - group policy attribute [67-71](#)
 - login windows for users [67-27](#)
 - username attribute [67-87](#)
 - username attribute for Clientless SSL VPN [67-24](#)
 - custom messages list
 - logging output destination [77-4](#)
 - cut-through proxy
 - AAA performance [38-1](#)
 - CX module
 - about [59-1](#)
 - ASA feature compatibility [59-4](#)
 - authentication proxy
 - about [59-3](#)
 - port [59-10](#)
 - troubleshooting [59-20](#)
 - basic settings [59-7](#)
 - cabling [59-6](#)
 - configuration [59-6](#)
 - debugging [59-19](#)
 - failover [59-5](#)
 - licensing [59-4](#)
 - management access [59-2](#)
 - management defaults [59-5](#)
 - management IP address [59-7](#)
 - monitoring [59-12](#)
 - password reset [59-17](#)
 - PRSM [59-3](#)
 - reload [59-18](#)
 - security policy [59-9](#)
 - sending traffic to [59-11](#)
 - shutdown [59-19](#)
 - traffic flow [59-2](#)
 - VPN [59-4](#)
-
- ## D
- data flow
 - routed firewall [4-17](#)
 - transparent firewall [4-23](#)

- date and time in messages [77-18](#)
- DDNS [12-2](#)
- debug messages [82-13](#)
- default
 - class [5-9](#)
 - DefaultL2Lgroup [67-1](#)
 - DefaultRAgroup [67-1](#)
 - domain name, group policy [67-51](#)
 - group policy [67-1, 67-8, 67-36](#)
 - LAN-to-LAN tunnel group [67-17](#)
 - remote access tunnel group, configuring [67-7](#)
 - routes, defining equal cost routes [22-4](#)
 - tunnel group [64-19, 67-2](#)
- default configuration
 - commands [2-10](#)
 - restoring [2-11](#)
- default policy [32-7](#)
- default routes
 - about [22-4](#)
 - configuring [22-4](#)
- delay sending flow-create events
 - flow-create events
 - delay sending [78-9](#)
- deleting files from Flash [81-2](#)
- deny flows, logging [20-5](#)
- deny in a crypto map [64-23](#)
- deny-message
 - group policy attribute for Clientless SSL VPN [67-71](#)
 - username attribute for Clientless SSL VPN [67-87](#)
- DES, IKE policy keywords (table) [64-9, 64-10](#)
- device ID, including in messages [77-17](#)
- device ID in messages [77-17](#)
- device pass-through, ASA 5505 as Easy VPN client [71-8](#)
- DfltGrpPolicy [67-37](#)
- DHCP
 - addressing, configuring [68-3](#)
 - Cisco IP Phones [11-6](#)
 - options [11-4](#)
 - relay [11-7](#)
 - server [11-3](#)
 - transparent firewall [34-5](#)
- DHCP Intercept, configuring [67-52](#)
- DHCP Relay panel [12-6](#)
- DHCP services [10-6](#)
- Diffie-Hellman
 - Group 5 [64-10, 64-11](#)
 - groups supported [64-10, 64-11](#)
- DiffServ preservation [54-5](#)
- digital certificates
 - authenticating WebVPN users [74-28, 74-29](#)
 - SSL [74-11](#)
- directory hierarchy search [C-3](#)
- disabling content rewrite [74-83](#)
- disabling messages [77-18](#)
- disabling messages, specific message IDs [77-18](#)
- DMZ, definition [1-24](#)
- DNS
 - dynamic [12-2](#)
 - inspection
 - about [43-2](#)
 - managing [43-1](#)
 - rewrite, about [43-2](#)
 - rewrite, configuring [43-3](#)
 - NAT effect on [29-24](#)
 - server, configuring [10-11, 67-40](#)
- DNS request for all records attack [57-10](#)
- DNS zone transfer attack [57-10](#)
- DNS zone transfer from high port attack [57-10](#)
- domain attributes, group policy [67-51](#)
- domain name [10-3](#)
- dotted decimal subnet masks [B-3](#)
- downloadable access lists
 - configuring [38-14](#)
 - converting netmask expressions [38-18](#)
- DSCP preservation [54-5](#)
- dual IP stack, configuring [8-2](#)
- dual-ISP support [22-6](#)
- duplex, configuring [6-11, 7-5](#)

dynamic crypto map [64-32](#)

 creating [69-12](#)

See also crypto map

Dynamic DNS [12-2](#)

dynamic NAT

 about [29-8](#)

 network object NAT [30-4](#)

 twice NAT [31-4](#)

dynamic PAT

 network object NAT [30-6](#)

See also NAT

 twice NAT [31-8](#)

E

Easy VPN

 client

 authentication [71-12](#)

 configuration restrictions, table [71-2](#)

 enabling and disabling [71-1](#)

 group policy attributes pushed to [71-10](#)

 mode [71-3](#)

 remote management [71-9](#)

 trustpoint [71-7](#)

 tunnels [71-9](#)

 Xauth [71-4](#)

 server (headend) [71-1](#)

Easy VPN client

 ASA 5505

 device pass-through [71-8](#)

 split tunneling [71-8](#)

 TCP [71-4](#)

 tunnel group [71-7](#)

 tunneling [71-5](#)

echo reply, ICMP message [B-15](#)

ECMP [22-3](#)

editing command lines [A-3](#)

egress VLAN for VPN sessions [67-44](#)

EIGRP [34-5](#)

DUAL algorithm [27-2](#)

hello interval [27-13](#)

hello packets [27-1](#)

hold time [27-2, 27-13](#)

neighbor discovery [27-1](#)

stub routing [27-3](#)

stuck-in-active [27-2](#)

e-mail

 configuring for WebVPN [74-79](#)

 proxies, WebVPN [74-79](#)

 proxy, certificate authentication [74-79](#)

 WebVPN, configuring [74-79](#)

enable command [2-1](#)

enabling logging [77-6](#)

enabling secure logging [77-16](#)

end-user interface, WebVPN, defining [74-88](#)

Enterprises [11-6](#)

Entrust, CA server support [41-4](#)

established command, security level requirements [8-2, 9-2](#)

EtherChannel

 adding interfaces [6-27](#)

 channel group [6-27](#)

 compatibility [6-5](#)

 converting existing interfaces [6-13](#)

 example [6-34](#)

 failover [6-10](#)

 guidelines [6-10](#)

 interface requirements [6-5](#)

 LACP [6-6](#)

 load balancing

 configuring [6-29](#)

 overview [6-7](#)

 MAC address [6-7](#)

 management interface [6-27](#)

 maximum interfaces [6-29](#)

 minimum interfaces [6-29](#)

 mode

 active [6-6](#)

 on [6-7](#)

- passive [6-6](#)
 - monitoring [6-33](#)
 - overview [6-5](#)
 - port priority [6-27](#)
 - system priority [6-29](#)
 - Ethernet
 - Auto-MDI/MDIX [6-2, 7-4](#)
 - duplex [6-11, 7-5](#)
 - jumbo frames, ASA 5580 [6-32](#)
 - MTU [8-11, 9-14](#)
 - speed [6-11, 7-5](#)
 - EtherType access list
 - compatibility with extended access lists [34-2](#)
 - implicit deny [34-3](#)
 - evaluation license [3-21](#)
 - exporting NetFlow records [78-5](#)
 - extended ACLs
 - configuring
 - for management traffic [15-2](#)
 - external group policy, configuring [67-39](#)
-
- F**
- facility, syslog [77-8](#)
 - factory default configuration
 - commands [2-10](#)
 - restoring [2-11](#)
 - failover
 - about [61-1](#)
 - Active/Active, *See* Active/Active failover
 - Active/Standby, *See* Active/Standby failover
 - configuration file
 - terminal messages, Active/Active [63-3](#)
 - terminal messages, Active/Standby [62-2](#)
 - contexts [62-2](#)
 - debug messages [61-16](#)
 - disabling [62-17, 63-24](#)
 - Ethernet failover cable [61-3](#)
 - failover link [61-3](#)
 - forcing [62-16, 63-23](#)
 - guidelines [60-6, 79-17](#)
 - health monitoring [61-14](#)
 - interface health [61-15](#)
 - interface monitoring [61-15](#)
 - interface tests [61-15](#)
 - link communications [61-3](#)
 - MAC addresses
 - about [62-2](#)
 - automatically assigning [5-12](#)
 - monitoring, health [61-14](#)
 - network tests [61-15](#)
 - primary unit [62-2](#)
 - redundant interfaces [6-10](#)
 - restoring a failed group [62-17, 63-24](#)
 - restoring a failed unit [62-17, 63-24](#)
 - secondary unit [62-2](#)
 - SNMP syslog traps [61-17](#)
 - Stateful Failover, *See* Stateful Failover
 - state link [61-4](#)
 - system log messages [61-16](#)
 - system requirements [61-2](#)
 - testing [62-17, 63-24](#)
 - Trusted Flow Acceleration [65-7](#)
 - type selection [61-8](#)
 - unit health [61-14](#)
 - fast path [1-28](#)
 - fiber interfaces [6-12](#)
 - Fibre Channel interfaces
 - default settings [16-2, 17-2, 18-2, 34-7](#)
 - filter (access list)
 - group policy attribute for Clientless SSL VPN [67-74](#)
 - username attribute for Clientless SSL VPN [67-88](#)
 - filtering
 - ActiveX [39-2](#)
 - FTP [39-14](#)
 - Java applet [39-4](#)
 - Java applets [39-4](#)
 - security level requirements [8-2, 9-2](#)

- servers supported [39-6](#)
 - show command output [A-4](#)
 - URLs [39-1, 39-7](#)
 - filtering messages [77-4](#)
 - firewall
 - Black Ice [67-67](#)
 - Cisco Integrated [67-66](#)
 - Cisco Security Agent [67-66](#)
 - custom [67-67](#)
 - Network Ice [67-67](#)
 - none [67-66](#)
 - Sygate personal [67-67](#)
 - Zone Labs [67-67](#)
 - firewall mode
 - about [4-1](#)
 - configuring [4-1](#)
 - firewall policy, group policy [67-63](#)
 - Flash memory
 - removing files [81-2](#)
 - flash memory available for logs [77-15](#)
 - flow control for 10 Gigabit Ethernet [6-22](#)
 - flow-export actions [78-4](#)
 - format of messages [77-3](#)
 - fragmentation policy, IPsec [64-15](#)
 - fragmented ICMP traffic attack [57-6, 57-9](#)
 - fragment protection [1-25](#)
 - fragment size [57-2](#)
 - FTP inspection
 - about [43-11](#)
 - configuring [43-11](#)
-
- G**
- general attributes, tunnel group [67-3](#)
 - general parameters, tunnel group [67-3](#)
 - general tunnel-group connection parameters [67-3](#)
 - generating RSA keys [41-9](#)
 - global e-mail proxy attributes [74-79](#)
 - global IPsec SA lifetimes, changing [64-29](#)
 - group-lock, username attribute [67-84](#)
 - group policy
 - address pools [67-62](#)
 - attributes [67-40](#)
 - backup server attributes [67-56](#)
 - client access rules [67-68](#)
 - configuring [67-39](#)
 - default domain name for tunneled packets [67-51](#)
 - definition [67-1, 67-36](#)
 - domain attributes [67-51](#)
 - Easy VPN client, attributes pushed to ASA 5505 [71-10](#)
 - external, configuring [67-39](#)
 - firewall policy [67-63](#)
 - hardware client user idle timeout [67-54](#)
 - internal, configuring [67-40](#)
 - IP phone bypass [67-54](#)
 - IPSec over UDP attributes [67-49](#)
 - LEAP Bypass [67-55](#)
 - network extension mode [67-55](#)
 - security attributes [67-46](#)
 - split tunneling attributes [67-49](#)
 - split-tunneling domains [67-52](#)
 - user authentication [67-53](#)
 - VPN attributes [67-42](#)
 - VPN hardware client attributes [67-53](#)
 - webvpn attributes [67-70](#)
 - WINS and DNS servers [67-40](#)
 - group policy, default [67-36](#)
 - group policy, secure unit authentication [67-53](#)
 - group policy attributes for Clientless SSL VPN
 - application access [67-75](#)
 - auto-signon [67-73](#)
 - customization [67-71](#)
 - deny-message [67-71](#)
 - filter [67-74](#)
 - home page [67-73](#)
 - html-content filter [67-72](#)
 - keep-alive-ignore [67-76](#)

port forward [67-75](#)
 port-forward-name [67-76](#)
 sso-server [67-77](#)
 url-list [67-74](#)

groups

SNMP [79-16](#)

GTP inspection

about [46-3](#)
 configuring [46-3](#)

H

H.225 timeouts [44-9](#)

H.245 troubleshooting [44-10](#)

H.323

transparent firewall guidelines [4-4](#)

H.323 inspection

about [44-4](#)
 configuring [44-3](#)
 limitations [44-5](#)
 troubleshooting [44-10](#)

hairpinning [64-26](#)

hardware client, group policy attributes [67-53](#)

help, command line [A-4](#)

high availability

about [61-1](#)

HMAC hashing method [64-2, 73-3](#)

hold-period [70-17](#)

homepage

group policy attribute for Clientless SSL VPN [67-73](#)
 username attribute for Clientless SSL VPN [67-86](#)

host

SNMP [79-16](#)

hostname

configuring [10-2](#)
 in banners [10-2](#)
 multiple context mode [10-2](#)

hosts, subnet masks for [B-3](#)

hosts file

errors [74-72](#)

reconfiguring [74-73](#)

WebVPN [74-72](#)

HSRP [4-4](#)

html-content-filter

group policy attribute for Clientless SSL VPN [67-72](#)
 username attribute for Clientless SSL VPN [67-86](#)

HTTP

filtering [39-1](#)

HTTP(S)

authentication [37-19](#)
 filtering [39-7](#)

HTTP/HTTPS Web VPN proxy, setting [74-11](#)

HTTP compression, Clientless SSL VPN, enabling [67-76, 67-91](#)

HTTP inspection

about [43-16](#)
 configuring [43-16](#)

HTTP redirection for login, Easy VPN client on the ASA 5505 [71-12](#)

HTTPS/Telnet/SSH

allowing network or host access to ASDM [37-1](#)

HTTPS for WebVPN sessions [74-7](#)

hub-and-spoke VPN scenario [64-26](#)

ICMP

rules for access to ASDM [37-11](#)

testing connectivity [82-1](#)

type numbers [B-15](#)

identity NAT

about [29-11](#)
 network object NAT [30-12](#)
 twice NAT [31-20](#)

idle timeout

hardware client user, group policy [67-54](#)
 username attribute [67-82](#)

ID method for ISAKMP peers, determining [64-13](#)

- IKE
 - benefits [64-2, 73-3](#)
 - creating policies [64-11](#)
 - keepalive setting, tunnel group [67-4](#)
 - pre-shared key, Easy VPN client on the ASA 5505 [71-7](#)
 - See also* ISAKMP
- IKEv1 [64-19](#)
- ILS inspection [45-1](#)
- IM [44-19](#)
- implementing SNMP [79-16](#)
- inbound access lists [34-3](#)
- Individual user authentication [71-12](#)
- information reply, ICMP message [B-15](#)
- information request, ICMP message [B-15](#)
- inheritance
 - tunnel group [67-1](#)
 - username attribute [67-81](#)
- inside, definition [1-24](#)
- inspection_default class-map [32-9](#)
- inspection engines
 - See* application inspection
- Instant Messaging inspection [44-19](#)
- intercept DHCP, configuring [67-52](#)
- interface
 - MTU [8-11, 9-14](#)
- interfaces
 - ASA 5505
 - enabled status [7-7](#)
 - MAC addresses [7-4](#)
 - maximum VLANs [7-2](#)
 - non-forwarding [7-7](#)
 - protected switch ports [7-8, 7-10](#)
 - switch port configuration [7-7](#)
 - trunk ports [7-9](#)
 - ASA 5550 throughput [8-6, 9-9](#)
 - configuring for remote access [69-7](#)
 - default settings [16-2, 17-2, 18-2, 34-7, 60-6](#)
 - duplex [6-11, 7-5](#)
 - enabling [6-24](#)
 - failover monitoring [61-15](#)
 - fiber [6-12](#)
 - IDs [6-23](#)
 - IP address [8-7, 9-12](#)
 - MAC addresses
 - automatically assigning [5-22](#)
 - manually assigning to interfaces [8-11, 9-14](#)
 - mapped name [5-20](#)
 - naming, physical and subinterface [8-7, 9-10, 9-11](#)
 - redundant [6-25](#)
 - SFP [6-12](#)
 - speed [6-11, 7-5](#)
 - subinterfaces [6-30](#)
- internal group policy, configuring [67-40](#)
- Internet Security Association and Key Management Protocol
 - See* ISAKMP
- IP addresses
 - classes [B-1](#)
 - configuring an assignment method for remote access clients [68-1](#)
 - configuring for VPNs [68-1](#)
 - configuring local IP address pools [68-2](#)
 - interface [8-7, 9-12](#)
 - management, transparent firewall [9-7](#)
 - private [B-2](#)
 - subnet mask [B-4](#)
- IP fragment attack [57-4, 57-7](#)
- IP impossible packet attack [57-4, 57-7](#)
- IP overlapping fragments attack [57-5](#)
- IP phone [71-8](#)
 - phone proxy provisioning [48-12](#)
- IP phone bypass, group policy [67-54](#)
- IP phones
 - addressing requirements for phone proxy [48-9](#)
 - supported for phone proxy [48-3](#)
- IPSec
 - anti-replay window [54-12](#)

- modes [65-2](#)
- over UDP, group policy, configuring attributes [67-49](#)
- remote-access tunnel group [67-8](#)
- setting maximum active VPN sessions [66-3](#)

IPsec

- access list [64-27](#)
- basic configuration with static crypto maps [64-29](#)
- Cisco VPN Client [64-2](#)
- configuring [64-1, 64-19](#)
- crypto map entries [64-20](#)
- fragmentation policy [64-15](#)
- over NAT-T, enabling [64-14](#)
- over TCP, enabling [64-15](#)
- SA lifetimes, changing [64-29](#)
- tunnel [64-19](#)
- view configuration commands table [64-34](#)

IPSec parameters, tunnel group [67-4](#)

ipsec-ra, creating an IPSec remote-access tunnel [67-8](#)

IPS module

- about [58-1](#)
- configuration [58-7](#)
- operating modes [58-2](#)
- sending traffic to [58-17](#)
- traffic flow [58-2](#)
- virtual sensors [58-15](#)

IP spoofing, preventing [57-1](#)

IP teardrop attack [57-5](#)

IPv6

- commands [21-10](#)
- configuring alongside IPv4 [8-2](#)
- default route [22-5](#)
- dual IP stack [8-2](#)
- duplicate address detection [8-12, 9-15](#)
- neighbor discovery [28-1](#)
- router advertisement messages [28-3](#)
- static neighbors [28-4](#)
- static routes [22-5](#)

IPv6 addresses

- anycast [B-9](#)

- command support for [21-10](#)

- format [B-5](#)

- multicast [B-8](#)

- prefixes [B-10](#)

- required [B-10](#)

- types of [B-6](#)

- unicast [B-6](#)

IPv6 prefixes [28-11](#)

ISAKMP

- about [64-2](#)

- configuring [64-1](#)

- determining an ID method for peers [64-13](#)

- disabling in aggressive mode [64-13](#)

- enabling on the outside interface [69-8](#)

- keepalive setting, tunnel group [67-4](#)

See also IKE

J

Java applet filtering [39-4](#)

Java applets, filtering [39-2](#)

Java object signing [74-82](#)

Join Group pane

- description [26-6](#)

jumbo frames, ASA 5580 [6-32](#)

K

KCD [74-41, 74-42](#)

- before configuring [74-44](#)

KCD status

- showing [74-46](#)

keep-alive-ignore

- group policy attribute for Clientless SSL VPN [67-76](#)

- username attribute for Clientless SSL VPN [67-90](#)

Kerberos

- configuring [35-11](#)

- support [35-6](#)

- Kerberos tickets
 - clearing [74-48](#)
 - showing [74-47](#)
-
- L**
- L2TP description [65-1](#)
 - LACP [6-6](#)
 - LAN-to-LAN tunnel group, configuring [67-17](#)
 - large ICMP traffic attack [57-6, 57-9](#)
 - latency
 - about [54-1](#)
 - configuring [54-2, 54-3](#)
 - reducing [54-8](#)
 - Layer 2 firewall
 - See* transparent firewall
 - Layer 2 forwarding table
 - See* MAC address table
 - Layer 2 Tunneling Protocol [65-1](#)
 - Layer 3/4
 - matching multiple policy maps [32-6](#)
 - LCS Federation Scenario [51-2](#)
 - LDAP
 - application inspection [45-1](#)
 - attribute mapping [35-18](#)
 - Cisco-AV-pair [C-13](#)
 - configuring [35-11](#)
 - configuring a AAA server [C-2 to ??](#)
 - directory search [C-3](#)
 - example configuration procedures [C-16 to ??](#)
 - hierarchy example [C-3](#)
 - SASL [35-6](#)
 - user authentication [35-6](#)
 - user authorization [35-16](#)
 - LEAP Bypass, group policy [67-55](#)
 - licenses
 - activation key
 - entering [3-33](#)
 - location [3-32](#)
 - obtaining [3-33](#)
 - ASA 5505 [3-2](#)
 - ASA 5510 [3-3, 3-8](#)
 - ASA 5520 [3-4](#)
 - ASA 5540 [3-5](#)
 - ASA 5550 [3-6](#)
 - ASA 5580 [3-7](#)
 - ASA 5585-X [3-12, 3-13, 3-14](#)
 - Cisco Unified Communications Proxy features [47-4, 49-5, 50-6, 51-7, 52-8](#)
 - default [3-21](#)
 - evaluation [3-21](#)
 - failover [3-31](#)
 - guidelines [3-31](#)
 - managing [3-1](#)
 - preinstalled [3-21](#)
 - Product Authorization Key [3-33](#)
 - shared
 - backup server, configuring [3-37](#)
 - backup server, information [3-25](#)
 - client, configuring [3-37](#)
 - communication issues [3-25](#)
 - failover [3-25](#)
 - maximum clients [3-27](#)
 - monitoring [3-44](#)
 - overview [3-23](#)
 - server, configuring [3-35](#)
 - SSL messages [3-25](#)
 - temporary [3-21](#)
 - viewing current [3-38](#)
 - VPN Flex [3-21](#)
 - licensing requirements
 - CSC SSM [60-5](#)
 - logging [77-5](#)
 - licensing requirements for SNMP [79-17](#)
 - link up/down test [61-15](#)
 - LLQ
 - See* low-latency queue
 - load balancing

- cluster configurations [66-9](#)
- concepts [66-6](#)
- eligible clients [66-8](#)
- eligible platforms [66-8](#)
- implementing [66-7](#)
- mixed cluster scenarios [66-10](#)
- platforms [66-8](#)
- prerequisites [66-8](#)
- local user database
 - adding a user [35-20](#)
 - configuring [35-20](#)
 - logging in [37-20](#)
 - support [35-8](#)
- lockout recovery [37-31](#)
- logging
 - access lists [20-1](#)
 - classes
 - filtering messages by [77-4](#)
 - types [77-4, 77-16](#)
 - device-id, including in system log messages [77-17](#)
 - e-mail
 - source address [77-10](#)
 - EMBLEM format [77-14](#)
 - facility option [77-8](#)
 - filtering
 - by message class [77-16](#)
 - by message list [77-4](#)
 - by severity level [77-1](#)
 - logging queue, configuring [77-15](#)
 - output destinations [77-8](#)
 - console port [77-8, 77-10, 77-11](#)
 - internal buffer [77-1, 77-6](#)
 - Telnet or SSH session [77-6](#)
 - queue
 - changing the size of [77-15](#)
 - configuring [77-15](#)
 - viewing queue statistics [77-19](#)
 - severity level, changing [77-19](#)
 - timestamp, including [77-18](#)
 - logging feature history [77-20](#)
 - logging queue
 - configuring [77-15](#)
 - login
 - banner, configuring [37-7](#)
 - console [2-1](#)
 - enable [2-1](#)
 - FTP [38-3](#)
 - global configuration mode [2-2](#)
 - local user [37-20](#)
 - password [10-1](#)
 - simultaneous, username attribute [67-81](#)
 - SSH [37-5](#)
 - Telnet [10-1](#)
 - windows, customizing for users of Clientless SSL VPN sessions [67-27](#)
 - low-latency queue
 - applying [54-2, 54-3](#)

M

- MAC address
 - redundant interfaces [6-4](#)
- MAC addresses
 - ASA 5505 [7-4](#)
 - ASA 5505 device pass-through [71-8](#)
 - automatically assigning [5-22](#)
 - failover [62-2](#)
 - manually assigning to interfaces [8-11, 9-14](#)
 - security context classification [5-3](#)
- MAC address table
 - about [4-23](#)
 - built-in-switch [4-14](#)
 - entry timeout [4-15](#)
 - MAC learning, disabling [4-16](#)
 - resource management [5-17](#)
 - static entry [4-15](#)
- MAC learning, disabling [4-16](#)
- management interfaces

- default settings [16-2, 17-2, 18-2, 34-7](#)
- management IP address, transparent firewall [9-7](#)
- man-in-the-middle attack [4-10](#)
- mapped addresses
 - guidelines [29-21](#)
- mapped interface name [5-20](#)
- mask
 - reply, ICMP message [B-15](#)
 - request, ICMP message [B-15](#)
- Master Passphrase [10-6](#)
- match commands
 - inspection class map [33-4](#)
 - Layer 3/4 class map [32-12, 32-15](#)
- matching, certificate group [64-17](#)
- maximum active IPsec VPN sessions, setting [66-3](#)
- maximum connect time, username attribute [67-82](#)
- maximum object size to ignore username attribute for Clientless SSL VPN [67-90](#)
- MD5, IKE policy keywords (table) [64-9, 64-10, 64-11](#)
- media termination address, criteria [48-6](#)
- message filtering [77-4](#)
- message list
 - filtering by [77-4](#)
- message-of-the-day banner [37-8](#)
- messages, logging
 - classes
 - about [77-4](#)
 - list of [77-4](#)
 - component descriptions [77-3](#)
 - filtering by message list [77-4](#)
 - format of [77-3](#)
 - message list, creating [77-13](#)
 - severity levels [77-3](#)
- messages classes [77-4](#)
- messages in EMBLEM format [77-14](#)
- metacharacters, regular expression [13-13](#)
- MGCP inspection
 - about [44-11](#)
 - configuring [44-11](#)
- mgmt0 interfaces
 - default settings [16-2, 17-2, 18-2, 34-7](#)
- MIBs [79-2](#)
- MIBs for SNMP [79-29](#)
- Microsoft Access Proxy [51-1](#)
- Microsoft Active Directory, settings for password management [67-28](#)
- Microsoft Internet Explorer client parameters, configuring [67-57](#)
- Microsoft KCD [74-41, 74-42](#)
- Microsoft Windows CA, supported [41-4](#)
- mixed cluster scenarios, load balancing [66-10](#)
- mixed-mode Cisco UCM cluster, configuring for phone proxy [48-17](#)
- MMP inspection [50-1](#)
- mobile redirection, ICMP message [B-15](#)
- mode
 - context [5-15](#)
 - firewall [4-1](#)
- modular policy framework
 - configuring flow-export actions for NetFlow [78-5](#)
- monitoring
 - CSC SSM [60-13](#)
 - failover [61-14](#)
 - OSPF [24-16](#)
 - resource management [5-29](#)
 - SNMP [79-1](#)
- monitoring logging [77-19](#)
- monitoring NSEL [78-10](#)
- monitoring switch traffic, ASA 5505 [7-4](#)
- More prompt [A-5](#)
- MPF
 - default policy [32-7](#)
 - examples [32-18](#)
 - feature directionality [32-3](#)
 - features [32-2](#)
 - flows [32-6](#)
 - matching multiple policy maps [32-6](#)
 - service policy, applying [32-17](#)
 - See also* class map

See also policy map

MPLS

LDP [34-6](#)

router-id [34-6](#)

TDP [34-6](#)

MRoute pane

description [26-4](#)

MSIE client parameters, configuring [67-57](#)

MTU [8-11, 9-14](#)

MTU size, Easy VPN client, ASA 5505 [71-5](#)

multicast traffic [4-4](#)

multiple context mode

logging [77-2](#)

See security contexts

N

NAC

See Network Admission Control

naming an interface

other models [8-7, 9-10, 9-11](#)

NAT

about [29-1](#)

bidirectional initiation [29-2](#)

disabling proxy ARP for global addresses [21-11](#)

DNS [29-24](#)

dynamic

about [29-8](#)

dynamic NAT

network object NAT [30-4](#)

twice NAT [31-4](#)

dynamic PAT

about [29-10](#)

network object NAT [30-6](#)

twice NAT [31-8](#)

identity

about [29-11](#)

identity NAT

network object NAT [30-12](#)

twice NAT [31-20](#)

implementation [29-16](#)

interfaces [29-21](#)

mapped address guidelines [29-21](#)

network object

comparison with twice NAT [29-16](#)

network object NAT

about [29-17](#)

configuring [30-1](#)

dynamic NAT [30-4](#)

dynamic PAT [30-6](#)

examples [30-15](#)

guidelines [30-2](#)

identity NAT [30-12](#)

monitoring [30-14](#)

prerequisites [30-2](#)

static NAT [30-10](#)

no proxy ARP [30-13, 31-19](#)

object

extended PAT [30-6](#)

flat range for PAT [30-6](#)

routed mode [29-13](#)

route lookup [30-13, 31-24](#)

RPC not supported with [45-3](#)

rule order [29-20](#)

static

about [29-3](#)

few-to-many mapping [29-7](#)

many-to-few mapping [29-6, 29-7](#)

one-to-many [29-6](#)

static NAT

network object NAT [30-10](#)

twice NAT [31-15](#)

static with port translation

about [29-4](#)

terminology [29-2](#)

transparent mode [29-13](#)

twice

extended PAT [31-8](#)

- flat range for PAT [31-8](#)
 - twice NAT
 - about [29-17](#)
 - comparison with network object NAT [29-16](#)
 - configuring [31-1](#)
 - dynamic NAT [31-4](#)
 - dynamic PAT [31-8](#)
 - examples [31-24](#)
 - guidelines [31-2](#)
 - identity NAT [31-20](#)
 - monitoring [31-24](#)
 - prerequisites [31-2](#)
 - static NAT [31-15](#)
 - types [29-3](#)
 - VPN [29-14](#)
 - VPN client rules [29-20](#)
 - native VLAN support [7-10](#)
 - NAT-T
 - enabling IPsec over NAT-T [64-14](#)
 - using [64-15](#)
 - neighbor reachable time [28-3](#)
 - neighbor solicitation messages [28-2](#)
 - neighbor advertisement messages [28-2](#)
 - NetFlow
 - overview [78-1](#)
 - NetFlow collector
 - configuring [78-5](#)
 - NetFlow event
 - matching to configured collectors [78-5](#)
 - NetFlow event logging
 - disabling [78-9](#)
 - Network Activity test [61-15](#)
 - Network Admission Control
 - ACL, default [70-10](#)
 - clientless authentication [70-13](#)
 - configuring [67-59](#)
 - exemptions [70-11](#)
 - revalidation timer [70-10](#)
 - uses, requirements, and limitations [70-1](#)
 - network extension mode [71-3](#)
 - network extension mode, group policy [67-55](#)
 - Network Ice firewall [67-67](#)
 - network object NAT
 - about [29-17](#)
 - comparison with twice NAT [29-16](#)
 - configuring [30-1](#)
 - dynamic NAT [30-4](#)
 - dynamic PAT [30-6](#)
 - examples [30-15](#)
 - guidelines [30-2](#)
 - identity NAT [30-12](#)
 - monitoring [30-14](#)
 - prerequisites [30-2](#)
 - static NAT [30-10](#)
 - Nokia VPN Client [64-35](#)
 - non-secure Cisco UCM cluster, configuring phone proxy [48-15](#)
 - No Payload Encryption [3-30](#)
 - no proxy ARP [31-19](#)
 - NSEL and syslog messages
 - redundant messages [78-2](#)
 - NSEL configuration examples [78-12](#)
 - NSEL feature history [78-14](#)
 - NSEL licensing requirements [78-3](#)
 - NSEL runtime counters
 - clearing [78-10](#)
 - NTLM support [35-6](#)
 - NT server
 - configuring [35-11](#)
 - support [35-6](#)
-
- O**
- object groups
 - about [13-1](#)
 - configuring [13-6](#)
 - removing [13-11](#)
 - object NAT

See network object NAT

open ports [B-14](#)

operating systems, posture validation exemptions [70-11](#)

OSPF

area authentication [24-11](#)

area MD5 authentication [24-11](#)

area parameters [24-10](#)

authentication key [24-9](#)

authentication support [24-2](#)

cost [24-9](#)

dead interval [24-9](#)

defining a static neighbor [24-12](#)

interaction with NAT [24-2](#)

interface parameters [24-8](#)

link-state advertisement [24-2](#)

logging neighbor states [24-13](#)

LSAs [24-2](#)

MD5 authentication [24-9](#)

monitoring [24-16](#)

NSSA [24-11](#)

packet pacing [24-16](#)

processes [24-2](#)

redistributing routes [24-4](#)

route calculation timers [24-13](#)

route summarization [24-7](#)

outbound access lists [34-3](#)

output destination [77-5](#)

output destinations [77-1, 77-6](#)

e-mail address [77-1, 77-6](#)

SNMP management station [77-1, 77-6](#)

Telnet or SSH session [77-1, 77-6](#)

outside, definition [1-24](#)

oversubscribing resources [5-8](#)

P

packet

capture [82-14](#)

classifier [5-3](#)

packet flow

routed firewall [4-17](#)

transparent firewall [4-23](#)

packet trace, enabling [82-7](#)

paging screen displays [A-5](#)

parameter problem, ICMP message [B-15](#)

password

resetting on SSM hardware module [82-11](#)

password management, Active Directory settings [67-28](#)

passwords

changing [10-2](#)

recovery [82-8](#)

security appliance [10-1](#)

username, setting [67-80](#)

WebVPN [74-109](#)

password-storage, username attribute [67-84](#)

PAT

Easy VPN client mode [71-3](#)

See dynamic PAT

pause frames for flow control [6-22](#)

PDA support for WebVPN [74-78](#)

peers

alerting before disconnecting [64-16](#)

ISAKMP, determining ID method [64-13](#)

performance, optimizing for WebVPN [74-81](#)

permit in a crypto map [64-23](#)

phone proxy

access lists [48-7](#)

ASA role [47-3](#)

certificates [48-15](#)

Cisco IP Communicator [48-10](#)

Cisco UCM supported versions [48-3](#)

configuring mixed-mode Cisco UCM cluster [48-17](#)

configuring non-secure Cisco UCM cluster [48-15](#)

event recovery [48-41](#)

IP phone addressing [48-9](#)

IP phone provisioning [48-12](#)

IP phones supported [48-3](#)

Linksys routers, configuring [48-26](#)

- NAT and PAT requirements [48-8](#)
- ports [48-7](#)
- rate limiting [48-11](#)
- required certificates [48-16](#)
- sample configurations [48-43](#)
- SAST keys [48-41](#)
- TLS Proxy on ASA, described [47-3](#)
- troubleshooting [48-27](#)
- ping
 - See* ICMP
- ping of death attack [57-6, 57-9](#)
- PKI protocol [41-11](#)
- PoE [7-4](#)
- policing
 - flow within a tunnel [54-11](#)
- policy, QoS [54-1](#)
- policy map
 - inspection [33-2](#)
 - Layer 3/4
 - about [32-1](#)
 - feature directionality [32-3](#)
 - flows [32-6](#)
- pools, address
 - DHCP [11-3](#)
- port-forward
 - group policy attribute for Clientless SSL VPN [67-75](#)
 - username attribute for Clientless SSL VPN [67-89](#)
- port-forwarding
 - enabling [8-6, 9-8](#)
- port-forward-name
 - group policy attribute for Clientless SSL VPN [67-76](#)
 - username attribute for Clientless SSL VPN [67-90](#)
- ports
 - open on device [B-14](#)
 - phone proxy [48-7](#)
 - TCP and UDP [B-11](#)
- port translation
 - about [29-4](#)
- posture validation
 - exemptions [70-11](#)
 - revalidation timer [70-10](#)
 - uses, requirements, and limitations [70-1](#)
- power over Ethernet [7-4](#)
- PPPoE, configuring [72-1 to 72-5](#)
- prerequisites for use
 - CSC SSM [60-5](#)
- pre-shared key, Easy VPN client on the ASA 5505 [71-7](#)
- primary unit, failover [62-2](#)
- printers [71-8](#)
- private networks [B-2](#)
- privileged EXEC mode, accessing [2-1](#)
- privileged mode
 - accessing [2-1](#)
 - prompt [A-2](#)
- privilege level, username, setting [67-80](#)
- Product Authorization Key [3-33](#)
- prompts
 - command [A-2](#)
 - more [A-5](#)
- protocol numbers and literal values [B-11](#)
- Protocol pane (PIM)
 - description [26-10](#)
- proxied RPC request attack [57-10](#)
- proxy
 - See* e-mail proxy
- proxy ARP
 - NAT
 - NAT
 - proxy ARP [29-22](#)
- proxy ARP, disabling [21-11](#)
- proxy bypass [74-83](#)
- proxy servers
 - SIP and [44-19](#)
- PRSM [59-3](#)
- public key cryptography [41-2](#)

Q

QoS

- about [54-1, 54-3](#)
- DiffServ preservation [54-5](#)
- DSCP preservation [54-5](#)
- feature interaction [54-4](#)
- policies [54-1](#)
- priority queueing
 - IPSec anti-replay window [54-12](#)
- statistics [54-15](#)
- token bucket [54-2](#)
- traffic shaping
 - overview [54-4](#)
- viewing statistics [54-15](#)

Quality of Service

See QoS

question mark

- command string [A-4](#)
- help [A-4](#)

queue, logging

- changing the size of [77-15](#)
- viewing statistics [77-19](#)

queue, QoS

- latency, reducing [54-8](#)
- limit [54-2, 54-3](#)

R

RADIUS

- attributes [C-27](#)
- Cisco AV pair [C-13](#)
- configuring a AAA server [C-27](#)
- configuring a server [35-11](#)
- downloadable access lists [38-14](#)
- network access authentication [38-4](#)
- network access authorization [38-14](#)
- support [35-4](#)

RAS, H.323 troubleshooting [44-10](#)

rate limit [77-19](#)

rate limiting [54-3](#)

rate limiting, phone proxy [48-11](#)

RealPlayer [44-15](#)

reboot, waiting until active sessions end [64-16](#)

redirect, ICMP message [B-15](#)

redundancy, in site-to-site VPNs, using crypto maps [64-34](#)

redundant interface

EtherChannel

converting existing interfaces [6-13](#)

redundant interfaces

configuring [6-25](#)

failover [6-10](#)

MAC address [6-4](#)

setting the active interface [6-27](#)

Registration Authority description [41-2](#)

regular expression [13-12](#)

reloading

context [5-26](#)

security appliance [82-8](#)

remote access

IPSec tunnel group, configuring [67-8](#)

restricting [67-84](#)

tunnel group, configuring default [67-7](#)

VPN, configuring [69-1, 69-15](#)

remote management, ASA 5505 [71-9](#)

Request Filter pane

description [26-11](#)

resetting the SSM hardware module password [82-11](#)

resource management

about [5-8](#)

assigning a context [5-21](#)

class [5-16](#)

configuring [5-8](#)

default class [5-9](#)

monitoring [5-29](#)

oversubscribing [5-8](#)

resource types [5-17](#)

- unlimited [5-9](#)
- resource usage [5-32](#)
- revalidation timer, Network Admission Control [70-10](#)
- revoked certificates [41-2](#)
- rewrite, disabling [74-83](#)
- RFCs for SNMP [79-29](#)
- RIP
 - authentication [25-2](#)
 - definition of [25-1](#)
 - enabling [25-4](#)
 - support for [25-2](#)
- RIP panel
 - limitations [25-3](#)
 - RIP Version 2 Notes [25-3](#)
- routed mode
 - about [4-1](#)
 - NAT [29-13](#)
 - setting [4-1](#)
- route map
 - definition [23-1](#)
- route maps
 - defining [23-4](#)
 - uses [23-1](#)
- router
 - advertisement, ICMP message [B-15](#)
 - solicitation, ICMP message [B-15](#)
- router advertisement messages [28-3](#)
- router advertisement transmission interval [28-8](#)
- router lifetime value [28-8](#)
- routes
 - about default [22-4](#)
 - configuring default routes [22-4](#)
 - configuring IPv6 default [22-5](#)
 - configuring IPv6 static [22-5](#)
 - configuring static routes [22-3](#)
- routing
 - other protocols [34-5](#)
- RSA
 - keys, generating [37-4, 41-9](#)

- RTSP inspection
 - about [44-15](#)
 - configuring [44-15](#)
- rules
 - ICMP [37-10](#)
- running configuration
 - copying [81-8](#)
 - saving [2-16](#)

S

- same security level communication
 - enabling [8-15, 9-18](#)
- SAs, lifetimes [64-29](#)
- SAST keys [48-41](#)
- SCCP (Skinny) inspection
 - about [44-25](#)
 - configuration [44-25](#)
 - configuring [44-25](#)
- SDI
 - configuring [35-11](#)
 - support [35-5](#)
- secondary unit, failover [62-2](#)
- secure unit authentication [71-12](#)
- secure unit authentication, group policy [67-53](#)
- security, WebVPN [74-5, 74-13](#)
- Security Agent, Cisco [67-66](#)
- security appliance
 - CLI [A-1](#)
 - connecting to [2-1](#)
 - managing licenses [3-1](#)
 - managing the configuration [2-15](#)
 - reloading [82-8](#)
 - upgrading software [81-2](#)
 - viewing files in Flash memory [81-1](#)
- security association
 - clearing [64-34](#)
 - See also* SAs
- security attributes, group policy [67-46](#)

- security contexts
 - about [5-1](#)
 - adding [5-18](#)
 - admin context
 - about [5-2](#)
 - changing [5-24](#)
 - assigning to a resource class [5-21](#)
 - cascading [5-6](#)
 - changing between [5-23](#)
 - classifier [5-3](#)
 - command authorization [37-16](#)
 - configuration
 - URL, changing [5-25](#)
 - URL, setting [5-21](#)
 - logging in [5-7](#)
 - MAC addresses
 - automatically assigning [5-22](#)
 - classifying using [5-3](#)
 - managing [5-1, 5-23](#)
 - mapped interface name [5-20](#)
 - monitoring [5-27](#)
 - multiple mode, enabling [5-15](#)
 - nesting or cascading [5-7](#)
 - prompt [A-2](#)
 - reloading [5-26](#)
 - removing [5-24](#)
 - resource management [5-8](#)
 - resource usage [5-32](#)
 - saving all configurations [2-17](#)
 - unsupported features [5-14](#)
 - VLAN allocation [5-20](#)
- security level
 - about [8-1](#)
 - interface [8-8, 9-10, 9-12](#)
- security models for SNMP [79-16](#)
- sending messages to an e-mail address [77-10](#)
- sending messages to an SNMP server [77-11](#)
- sending messages to ASDM [77-11](#)
- sending messages to a specified output destination [77-16](#)
- sending messages to a syslog server [77-8](#)
- sending messages to a Telnet or SSH session [77-12](#)
- sending messages to the console port [77-11](#)
- sending messages to the internal log buffer [77-9](#)
- service policy
 - applying [32-17](#)
 - default [32-17](#)
 - interface [32-18](#)
- session management path [1-28](#)
- severity levels, of system log messages
 - changing [77-1](#)
 - filtering by [77-1](#)
 - list of [77-3](#)
- severity levels, of system messages
 - definition [77-3](#)
- SHA, IKE policy keywords (table) [64-9, 64-10, 64-11](#)
- shared license
 - backup server, configuring [3-37](#)
 - backup server, information [3-25](#)
 - client, configuring [3-37](#)
 - communication issues [3-25](#)
 - failover [3-25](#)
 - maximum clients [3-27](#)
 - monitoring [3-44](#)
 - server, configuring [3-35](#)
 - SSL messages [3-25](#)
- show command, filtering output [A-4](#)
- showing cached Kerberos tickets [74-47](#)
- showing KCD status [74-46](#)
- simultaneous logins, username attribute [67-81](#)
- single mode
 - backing up configuration [5-15](#)
 - configuration [5-15](#)
 - enabling [5-15](#)
 - restoring [5-16](#)
- single sign-on
 - See* SSO
- single-signon
 - group policy attribute for Clientless SSL VPN [67-77](#)

- username attribute for Clientless SSL VPN [67-92](#)
- SIP inspection
 - about [44-19](#)
 - configuring [44-19](#)
 - instant messaging [44-19](#)
 - timeouts [44-24](#)
 - troubleshooting [44-24](#)
- site-to-site VPNs, redundancy [64-34](#)
- Smart Call Home monitoring [80-19](#)
- smart tunnels [74-48](#)
- SMTP inspection [43-31](#)
- SNMP
 - about [79-1](#)
 - failover [79-17](#)
 - management station [77-1, 77-6](#)
 - prerequisites [79-17](#)
- SNMP configuration [79-18](#)
- SNMP groups [79-16](#)
- SNMP hosts [79-16](#)
- SNMP monitoring [79-26, 79-27](#)
- SNMP terminology [79-2](#)
- SNMP traps [79-2](#)
- SNMP users [79-16](#)
- SNMP Version 3 [79-15, 79-23](#)
- SNMP Versions 1 and 2c [79-22](#)
- source quench, ICMP message [B-15](#)
- SPAN [7-4](#)
- Spanning Tree Protocol, unsupported [7-8](#)
- speed, configuring [6-11, 7-5](#)
- split tunneling
 - ASA 5505 as Easy VPN client [71-8](#)
 - group policy [67-49](#)
 - group policy, domains [67-52](#)
- SSCs
 - management access [58-4](#)
 - management defaults [58-6](#)
 - management interface [58-11](#)
 - password reset [58-23, 60-15](#)
 - reload [58-24, 60-16](#)
- reset [58-24, 60-16](#)
- routing [58-8](#)
- sessioning to [58-10](#)
- shutdown [58-24, 60-16](#)
- SSH
 - authentication [37-19](#)
 - concurrent connections [37-2](#)
 - login [37-5](#)
 - password [10-1](#)
 - RSA key [37-4](#)
 - username [37-5](#)
- SSL
 - certificate [74-11](#)
 - used to access the security appliance [74-6](#)
- SSL/TLS encryption protocols
 - configuring [74-10](#)
 - WebVPN [74-10](#)
- SSL VPN Client
 - compression [75-16](#)
 - DPD [75-15](#)
 - enabling
 - permanent installation [75-7](#)
 - installing
 - order [75-6](#)
 - keepalive messages [75-16](#)
 - viewing sessions [75-19](#)
- SSMs
 - loading an image [58-21, 58-23, 60-14](#)
 - management access [58-4](#)
 - management defaults [58-6](#)
 - password reset [58-23, 60-15](#)
 - reload [58-24, 60-16](#)
 - reset [58-24, 60-16](#)
 - routing [58-8](#)
 - sessioning to [58-10](#)
 - shutdown [58-24, 60-16](#)
- sso-server
 - group policy attribute for Clientless SSL VPN [67-77](#)
 - username attribute for Clientless SSL VPN [67-92](#)

- SSO with WebVPN [74-13 to ??](#)
 - configuring HTTP Basic and NTLM authentication [74-14](#)
 - configuring HTTP form protocol [74-20](#)
 - configuring SiteMinder [74-15, 74-17](#)
- startup configuration
 - copying [81-8](#)
 - saving [2-16](#)
- std buffer overflow attack [57-11](#)
- Stateful Failover
 - about [61-10](#)
 - state information [61-10](#)
 - state link [61-4](#)
- stateful inspection [1-27](#)
 - bypassing [53-3](#)
- state information [61-10](#)
- state link [61-4](#)
- static ARP entry [4-11](#)
- static bridge entry [4-15](#)
- Static Group pane
 - description [26-6](#)
- static NAT
 - about [29-3](#)
 - few-to-many mapping [29-7](#)
 - many-to-few mapping [29-6, 29-7](#)
 - network object NAT [30-10](#)
 - twice NAT [31-15](#)
- static NAT with port translation
 - about [29-4](#)
- static routes
 - configuring [22-3](#)
- statistics, QoS [54-15](#)
- stealth firewall
 - See* transparent firewall
- stuck-in-active [27-2](#)
- subcommand mode prompt [A-2](#)
- subinterfaces, adding [6-30](#)
- subnet masks
 - /bits [B-3](#)
 - about [B-2](#)
 - address range [B-4](#)
 - determining [B-3](#)
 - dotted decimal [B-3](#)
 - number of hosts [B-3](#)
- Sun Microsystems Java™ Runtime Environment (JRE) and WebVPN [74-66](#)
- Sun RPC inspection
 - about [45-3](#)
 - configuring [45-3](#)
- SVC
 - See* SSL VPN Client
- switch MAC address table [4-14](#)
- switch ports
 - access ports [7-7](#)
 - protected [7-8, 7-10](#)
 - SPAN [7-4](#)
 - trunk ports [7-9](#)
- Sygate Personal Firewall [67-67](#)
- SYN attacks, monitoring [5-33](#)
- SYN cookies [5-33](#)
- syntax formatting [A-3](#)
- syslogd server program [77-5](#)
- syslog messages
 - analyzing [77-2](#)
- syslog messaging for SNMP [79-27](#)
- syslog server
 - designating more than one as output destination [77-5](#)
 - EMBLEM format
 - configuring [77-14](#)
 - enabling [77-8, 77-14](#)
- system configuration [5-2](#)
- system log messages
 - classes [77-4](#)
 - classes of [77-4](#)
 - configuring in groups
 - by message list [77-4](#)
 - by severity level [77-1](#)
 - device ID, including [77-17](#)

- disabling logging of [77-1](#)
- filtering by message class [77-4](#)
- managing in groups
 - by message class [77-16](#)
- output destinations [77-1, 77-6](#)
 - syslog message server [77-6](#)
 - Telnet or SSH session [77-6](#)
- severity levels
 - about [77-3](#)
 - changing the severity level of a message [77-1](#)
- timestamp, including [77-18](#)

T

TACACS+

- command authorization, configuring [37-29](#)
- configuring a server [35-11](#)
- network access authorization [38-11](#)
- support [35-5](#)

tail drop [54-3](#)

TCP

- ASA 5505 as Easy VPN client [71-4](#)
- connection limits per context [5-17](#)
- ports and literal values [B-11](#)
- sequence number randomization
 - disabling using Modular Policy Framework [53-12](#)

TCP Intercept

- enabling using Modular Policy Framework [53-12](#)
- monitoring [5-33](#)

TCP normalization [53-3](#)

TCP NULL flags attack [57-6, 57-9](#)

TCP state bypass

- AAA [53-5](#)
- configuring [53-10](#)
- failover [53-5](#)
- firewall mode [53-5](#)
- inspection [53-5](#)
- multiple context mode [53-5](#)

NAT [53-5](#)

SSMs and SSCs [53-5](#)

TCP Intercept [53-5](#)

TCP normalization [53-5](#)

unsupported features [53-5](#)

TCP SYN+FIN flags attack [57-6, 57-9](#)

Telnet

allowing management access [37-1](#)

authentication [37-19](#)

concurrent connections [37-2](#)

login [37-4](#)

password [10-1](#)

template timeout intervals

configuring for flow-export actions [78-7](#)

temporary license [3-21](#)

testing configuration [82-1](#)

threat detection

basic

drop types [56-2](#)

enabling [56-4](#)

overview [56-2](#)

rate intervals [56-2](#)

rate intervals, setting [56-4](#)

statistics, viewing [56-5](#)

system performance [56-3](#)

scanning

attackers, viewing [56-18](#)

default limits, changing [56-17](#)

enabling [56-17](#)

host database [56-15](#)

overview [56-15](#)

shunned hosts, releasing [56-18](#)

shunned hosts, viewing [56-17](#)

shunning attackers [56-17](#)

system performance [56-15](#)

targets, viewing [56-18](#)

scanning statistics

enabling [56-7](#)

system performance [56-6](#)

- viewing [56-9](#)
- time exceeded, ICMP message [B-15](#)
- time ranges, access lists [13-16](#)
- timestamp, including in system log messages [77-18](#)
- timestamp reply, ICMP message [B-15](#)
- timestamp request, ICMP message [B-15](#)
- TLS1, used to access the security appliance [74-6](#)
- TLS Proxy
 - applications supported by ASA [47-3](#)
 - Cisco Unified Presence architecture [51-1](#)
 - configuring for Cisco Unified Presence [51-8](#)
 - licenses [47-4, 49-5, 50-6, 51-7, 52-8](#)
- token bucket [54-2](#)
- toolbar, floating, WebVPN [74-89](#)
- traffic flow
 - routed firewall [4-17](#)
 - transparent firewall [4-23](#)
- traffic shaping
 - overview [54-4](#)
- transform set
 - creating [69-1, 69-10](#)
 - definition [64-19](#)
- transmit queue ring limit [54-2, 54-3](#)
- transparent firewall
 - about [4-2](#)
 - ARP inspection
 - about [4-10](#)
 - enabling [4-12](#)
 - static entry [4-11](#)
 - data flow [4-23](#)
 - DHCP packets, allowing [34-5](#)
 - guidelines [4-7](#)
 - H.323 guidelines [4-4](#)
 - HSRP [4-4](#)
 - MAC address timeout [4-15](#)
 - MAC learning, disabling [4-16](#)
 - management IP address [9-7](#)
 - multicast traffic [4-4](#)
 - packet handling [34-5](#)
 - static bridge entry [4-15](#)
 - unsupported features [4-7](#)
 - VRRP [4-4](#)
- transparent mode
 - NAT [29-13](#)
- troubleshooting
 - H.323 [44-9](#)
 - H.323 RAS [44-10](#)
 - phone proxy [48-27](#)
 - SIP [44-24](#)
- troubleshooting SNMP [79-24](#)
- trunk, 802.1Q [6-30](#)
- trunk ports [7-9](#)
- Trusted Flow Acceleration
 - failover [65-7](#)
 - modes [4-6, 4-10, 4-14, 15-1, 34-7, 63-7, 65-7](#)
- trustpoint [41-3](#)
- trustpoint, ASA 5505 client [71-7](#)
- trust relationship
 - Cisco Unified Mobility [50-5](#)
 - Cisco Unified Presence [51-4](#)
- tunnel
 - ASA 5505 as Easy VPN client [71-5](#)
 - IPsec [64-19](#)
 - security appliance as a tunnel endpoint [64-2](#)
- tunnel group
 - ASA 5505 as Easy VPN client [71-7](#)
 - configuring [67-6](#)
 - creating [67-8](#)
 - default [64-19, 67-1, 67-2](#)
 - default, remote access, configuring [67-7](#)
 - default LAN-to-LAN, configuring [67-17](#)
 - definition [67-1, 67-2](#)
 - general parameters [67-3](#)
 - inheritance [67-1](#)
 - IPSec parameters [67-4](#)
 - LAN-to-LAN, configuring [67-17](#)
 - name and type [67-8](#)
 - remote access, configuring [69-11](#)

- remote-access, configuring [67-8](#)
 - tunnel-group
 - general attributes [67-3](#)
 - tunnel-group ISAKMP/IKE keepalive settings [67-4](#)
 - tunneling, about [64-1](#)
 - tunnel mode [65-2](#)
 - twice NAT
 - about [29-17](#)
 - comparison with network object NAT [29-16](#)
 - configuring [31-1](#)
 - dynamic NAT [31-4](#)
 - dynamic PAT [31-8](#)
 - examples [31-24](#)
 - guidelines [31-2](#)
 - identity NAT [31-20](#)
 - monitoring [31-24](#)
 - prerequisites [31-2](#)
 - static NAT [31-15](#)
 - tx-ring-limit [54-2, 54-3](#)
-
- ## U
- UDP
 - connection limits per context [5-17](#)
 - connection state information [1-28](#)
 - ports and literal values [B-11](#)
 - unreachable, ICMP message [B-15](#)
 - unreachable messages
 - required for MTU discovery [37-10](#)
 - url-list
 - group policy attribute for Clientless SSL VPN [67-74](#)
 - username attribute for Clientless SSL VPN [67-89](#)
 - URLs
 - context configuration, changing [5-25](#)
 - context configuration, setting [5-21](#)
 - filtering [39-1](#)
 - filtering, about [39-7](#)
 - filtering, configuration [39-11](#)
 - user, VPN
 - definition [67-1](#)
 - user access, restricting remote [67-84](#)
 - user authentication, group policy [67-53](#)
 - user EXEC mode
 - accessing [2-1](#)
 - prompt [A-2](#)
 - username
 - adding [35-20](#)
 - clientless authentication [70-14](#)
 - encrypted [35-23](#)
 - management tunnels [71-9](#)
 - password [35-23](#)
 - WebVPN [74-109](#)
 - Xauth for Easy VPN client [71-4](#)
 - username attributes
 - access hours [67-81](#)
 - configuring [67-79, 67-80](#)
 - group-lock [67-84](#)
 - inheritance [67-81](#)
 - password, setting [67-80](#)
 - password-storage [67-84](#)
 - privilege level, setting [67-80](#)
 - simultaneous logins [67-81](#)
 - vpn-filter [67-82](#)
 - vpn-framed-ip-address [67-83](#)
 - vpn-idle timeout [67-82](#)
 - vpn-session-timeout [67-82](#)
 - vpn-tunnel-protocol [67-83](#)
 - username attributes for Clientless SSL VPN
 - auto-signon [67-91](#)
 - customization [67-87](#)
 - deny message [67-87](#)
 - filter (access list) [67-88](#)
 - homepage [67-86](#)
 - html-content-filter [67-86](#)
 - keep-alive ignore [67-90](#)
 - port-forward [67-89](#)
 - port-forward-name [67-90](#)
 - sso-server [67-92](#)

url-list [67-89](#)
 username configuration, viewing [67-79](#)
 username webvpn mode [67-85](#)
 users
 SNMP [79-16](#)
 U-turn [64-26](#)

V

VeriSign, configuring CAs example [41-4](#)
 viewing QoS statistics [54-15](#)
 viewing RMS [81-19](#)
 virtual cluster [66-6](#)
 IP address [66-6](#)
 master [66-6](#)
 virtual firewalls
 See security contexts
 virtual HTTP [38-3](#)
 virtual reassembly [1-25](#)
 virtual sensors [58-15](#)
 VLAN mapping [67-44](#)
 VLANs [6-30](#)
 802.1Q trunk [6-30](#)
 allocating to a context [5-20](#)
 ASA 5505
 MAC addresses [7-4](#)
 maximum [7-2](#)
 mapped interface name [5-20](#)
 subinterfaces [6-30](#)
 VoIP
 proxy servers [44-19](#)
 troubleshooting [44-9](#)
 VPN
 address pool, configuring (group-policy) [67-62](#)
 address range, subnets [B-4](#)
 parameters, general, setting [66-1](#)
 setting maximum number of IPsec sessions [66-3](#)
 VPN attributes, group policy [67-42](#)
 VPN client

 NAT rules [29-20](#)
 VPN Client, IPsec attributes [64-2](#)
 vpn-filter username attribute [67-82](#)
 VPN flex license [3-21](#)
 vpn-framed-ip-address username attribute [67-83](#)
 VPN hardware client, group policy attributes [67-53](#)
 vpn-idle-timeout username attribute [67-82](#)
 vpn load balancing
 See load balancing [66-6](#)
 vpn-session-timeout username attribute [67-82](#)
 vpn-tunnel-protocol username attribute [67-83](#)
 VRRP [4-4](#)

W

WCCP [40-1](#)
 web caching [40-1](#)
 web clients, secure authentication [38-6](#)
 web e-Mail (Outlook Web Access), Outlook Web Access [74-80](#)
 WebVPN
 assigning users to group policies [74-31, 74-32](#)
 authenticating with digital certificates [74-28, 74-29](#)
 CA certificate validation not done [74-5](#)
 client application requirements [74-110](#)
 client requirements [74-110](#)
 configuring
 e-mail [74-79](#)
 configuring WebVPN and ASDM on the same interface [74-7](#)
 cookies [74-10](#)
 defining the end-user interface [74-88](#)
 definition [74-2](#)
 e-mail [74-79](#)
 e-mail proxies [74-79](#)
 end user set-up [74-87](#)
 floating toolbar [74-89](#)
 group policy attributes, configuring [74-33](#)
 hosts file [74-72](#)

- hosts files, reconfiguring [74-73](#)
- HTTP/HTTPS proxy, setting [74-11](#)
- Java object signing [74-82](#)
- PDA support [74-78](#)
- security precautions [74-5, 74-13](#)
- security tips [74-109](#)
- setting HTTP/HTTPS proxy [74-8](#)
- SSL/TLS encryption protocols [74-10](#)
- supported applications [74-110](#)
- troubleshooting [74-72](#)
- unsupported features [74-4](#)
- use of HTTPS [74-7](#)
- usernames and passwords [74-109](#)
- use suggestions [74-87, 74-110](#)

WebVPN, Application Access Panel [74-88](#)

webvpn attributes

- group policy [67-70](#)

welcome message, group policy [67-48](#)

WINS server, configuring [67-40](#)

X

- Xauth, Easy VPN client [71-4](#)
- XOFF frames [6-22](#)

Z

- Zone Labs firewalls [67-67](#)
- Zone Labs Integrity Server [67-64](#)

