

Panic Button (PB-15)

The Panic Button is used to activate (or deactivate) a panic alarm.

● Parts

1. Panic Button / LED Indicator

Button usage:

1. Press to send a learn code or activate a panic alarm.
2. Press and hold the button for 8 seconds to send a Cancel Code to the Control Panel. (This function is not compatible with every control panel)


LED Indicator:

1. The LED indicator will light up briefly when the device is transmitting a signal.
2. The LED indicator will flash twice when receiving acknowledgement from the Control Panel.

2. Cover-Fixing Screw

3. Fixing Hook

4. Battery Compartment

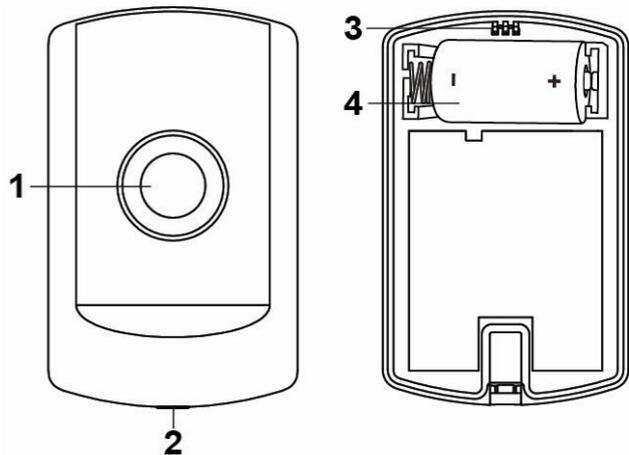

● Battery

- The Panic Button is powered by one EL123AP Lithium battery.
- The Panic Button will transmit any detected low battery status along with any regular status signal transmission to the Control Panel for display accordingly.
- When changing battery, after removing the old battery, press the button twice to fully discharge before inserting new battery.

● Supervisory Signal

- The Panic Button will automatically transmit Supervisory Signals every 15 to 18 minutes.
- If the Control Panel has not received the signal from the Panic Button for a preset period of time, the Control Panel will indicate that the Panic Button is out-of-signal range or is out of order.

● Getting Started

- Remove the cover-fixing screw using a Philips screwdriver and separate the cover from the base.
- Insert the battery according to the marked polarities.
- Replace the top over the base by hooking the base onto the fixing hook and pushing the cover towards the base.
- Lightly tighten the screw.
- Put the Control Panel into learn mode.
- Press the button on the Panic Button to transmit a learn code.
- Refer to your Control Panel's operation manual to complete the learn-in process.

● Walk Test

- Place the Control Panel in the walk test mode.
- Press the Button once.
- The Panel will display the RSSi (Radio Strength Signal) strength and sound a 2-tone beep.

● Operation

- After the Panic Button is learned successfully, press the Button to activate a Panic Alarm.
- Press and hold the Button for 8 seconds or more will send a Cancel Code to the Control Panel to stop the alarm. (This function is not compatible with all control panels.)

● Mounting the Panic Button

The Panic Button can be mounted using two methods: Self-adhesive or Screw mounting.

● Self-adhesive mounting

- I. Clean the surface with a suitable degreaser.
- II. Remove the protective covering from one side of double-sided adhesive pad and firmly apply to the back of the device.
- III. Remove the other covering and firmly place/press the device in the desired location.


< NOTE >

☞ Do not use the Self-adhesive mounting method on poorly painted and/or rough surfaces.

● Screw Mounting

The base has two screw knockouts, where the plastic is thinner for mounting purposes. To mount the Panic Button:

- I. Remove the cover-fixing screw and separate the top cover from the base.
- II. Break through the knockouts on the base.
- III. Use the holes as a template to drill two holes and insert the wall plugs.
- IV. Screw the base into the wall plugs.
- V. Replace the top cover over the base by hooking the base onto the fixing hook and pushing the cover towards the base.
- VI. Lightly tighten t

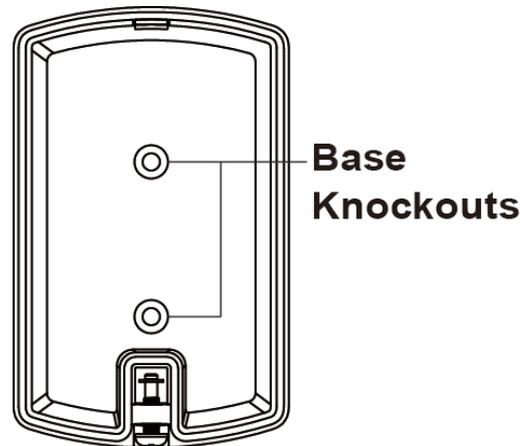

VII. he screw.

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- . Reorient or relocate the receiving antenna.
- . Increase the separation between the equipment and receiver.
- . Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- . Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: To assure continued compliance, any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. (Example - use only shielded interface cables when connecting to computer or peripheral devices).

FCC Radiation Exposure Statement

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

The antennas used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.