

DAP-1610



AC1200 Dual Band Wi-Fi Range Extender

Quick Install Guide

D-Link®

Package Contents



DAP-1610 AC1200 Dual Band Wi-Fi Range Extender





Wi-Fi Configuration Card




Quick Install Guide

If any of the above items are missing, please contact your reseller.

Before You Begin

- For setup, you will want your Range Extender to be plugged in to an available outlet as close to your Wi-Fi Router as possible. Once setup is complete, you can plug it in to an outlet in an area between your Wi-Fi router and where you want improved coverage. See the Troubleshooting section for tips on Wi-Fi Extender placement.
- If your wireless router or access point **does not have a WPS button** ( , ), follow the steps under *Method Two: QRS Mobile Setup* to set up your Range Extender.

Product Overview

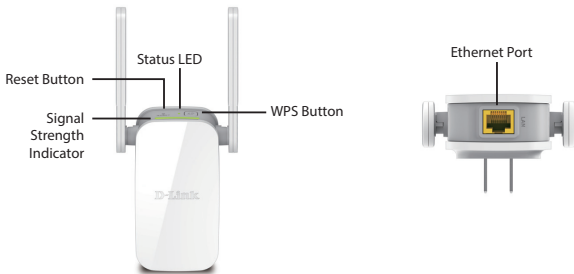

LED	Color	Status	Description
Status LED	Red	Solid	The device is powering on.
	Amber	Blinking	The device is ready but not connected to a router or access point.
	Green	Solid	Indicates that the range extender is connected to your wireless router or access point.
		Blinking	The WPS button has been pushed and the device is establishing a connection.

Signal Strength Indicator


Very Weak (1 x Amber)	
Weak (1 x Green)	
Good (2 x Green)	
Strong (3 x Green)	

There are two easy ways to set up your Range Extender.


It is recommended that you use **Method One**. If your router does not have a WPS button (🔄, WPS), see **Method Two: QRS Mobile Setup**, on page 6.

Method One: Quick WPS Setup

- 1 Plug your Range Extender into an available outlet **near your wireless router** and wait until the Status LED is blinking amber (*this may take up to 3 minutes*). You can move it to a more suitable location after it is set up.

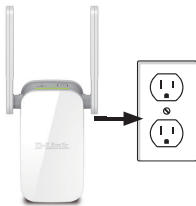

- 2 Press the **WPS** (Wi-Fi Protected Setup) button on your wireless router for **3 seconds**. Look for the WPS light (🔄, WPS) on your router and **make sure it is blinking**. If it does not blink, see the important note below.

WI-FI PROTECTED
SETUP

IMPORTANT

WPS may be disabled on some Routers or Modems.
If the WPS Status LED on your Router or Modem does not start blinking when you have pressed the WPS button, try again and hold it a little longer. If it still does not blink, **STOP**, and **configure your Range Extender using Method Two: QRS Mobile Setup**, on page 6.



- 3 Once confirmed that the WPS light is blinking on your router, within one minute, press the **WPS** button on your Range Extender for **2-3 seconds**. The Status LED should start to blink green.



- 4** When the Status LED turns **solid green** (*may take up to 3 minutes*), this indicates that your Range Extender is connected to your wireless router. You can now unplug and move your Range Extender to a location between your wireless router and the area where you want wireless coverage.



Note: If the Status LED on your Range Extender does not turn solid green after running WPS setup, try resetting the unit (*see [Troubleshooting - What if I forgot my Range Extender's Admin password or want to reset my Range Extender?](#)*) and try WPS setup again. If it still does not turn solid green after following all the steps, see **Method Two: QRS Mobile Setup**, on page 6.

If after moving your Range Extender, the signal strength indicator is showing one single amber bar or if your Range Extender LED does not turn solid green within 3 minutes, move your Range Extender to a wall outlet closer to your wireless router.



Signal Strength Indicator	
Very Weak (1 x Amber)	
Weak (1 x Green)	
Good (2 x Green)	
Strong (3 x Green)	


Your setup is complete! To connect your wireless devices to your Range Extender, see **Connect Your Wireless Devices**, on page 7.

Method Two: QRS Mobile Setup



- 1 Search for “**QRS Mobile**” on the App Store or Google Play and download the QRS Mobile App to your iPhone, iPad, or Android device. **Do not launch the app until step 4.**




- 2 Plug your Range Extender into an available outlet **near your wireless router** and wait until the Status LED is blinking amber (*this may take up to 3 minutes*). You can move your Range Extender to a more suitable location after it is set up.

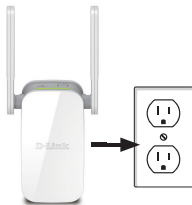


- 3 You now need to connect to your Range Extender. Go to **Wi-Fi Settings** on your mobile device. From the list of available Wi-Fi networks, select the Wi-Fi Name (SSID) as listed on the supplied **Wi-Fi Configuration** card and enter the Wi-Fi Password when prompted. *Note: It is OK if you see an “Internet may not be available” notification or similar during the setup process.*

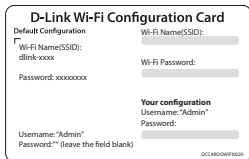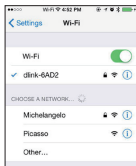

- 4 Once connected to your Range Extender, **launch the QRS Mobile app**, wait for the Introduction Screen to change to the Welcome Screen (this may take up to 30 seconds), then tap **Start** to continue.

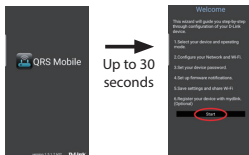


- 5 When prompted to select a Mode, select **Repeater** (default), then tap **Next** to continue. Please follow the on-screen instructions to complete the setup.

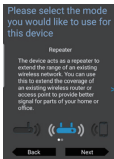

Your setup is complete! To connect your wireless devices to your Range Extender, see **Connect Your Wireless Devices**, below.

Connect Your Wireless Devices

- 1 From your wireless device go to **Wi-Fi Settings** to display the available wireless networks.

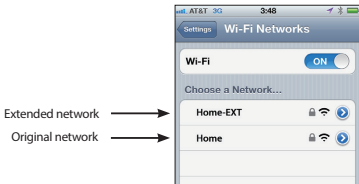

If **Quick WPS Setup** was used to set up your Range Extender, the SSID on your Range Extender will automatically be assigned the following:

- (Your Router's SSID)-EXT

The Wi-Fi Password for your Range Extender will be the same as your router's Wi-Fi password.

If **QRS Mobile Setup** was used to set up your Range Extender, use the SSID and Wi-Fi Password you specified during the setup process.

SmartConnect: By default, SmartConnect is enabled on this Range Extender. SmartConnect will automatically steer your device to the optimal wireless band (2.4GHz or 5GHz) according to current network traffic. When enabled, you will only see one wireless network name (SSID) from your Range Extender.

- 2 Your device is now connected to your Range Extender. To connect additional devices, repeat step 1.


Troubleshooting

Why can't I connect to my wireless router or my wireless connection drops?

1. Verify that your Range Extender is within range of your wireless router. Try plugging it into a location closer to the router and verify the Status LED is solid green.
2. Note that when extending a wireless signal from a router or access point, devices connected to the Range Extender will not get the same speed/throughput as when connected directly to the router.

How do I change the wireless settings on my Range Extender?


1. Open a web browser (e.g., Internet Explorer, Firefox, Chrome, or Safari) and go to <http://dlinkap.local/>
2. At the login screen, enter your Admin Password (If WPS Setup was used, password is blank by default - just leave blank) and click **Log in**.
3. Go to **Setup > Wireless**.
4. Enter a new **Wi-Fi Network Name (SSID)** and modify the security (Wi-Fi password) settings as needed.
5. Click **Save**.

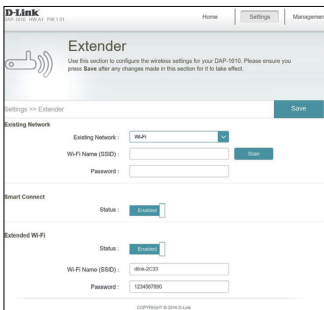


The screenshot shows the D-Link web interface for a Range Extender. At the top, there is a navigation bar with 'Home', 'Settings', and 'Management' tabs. The main heading is 'Extender' with a sub-note: 'Use this section to configure the wireless settings for your DAP-1610. Please ensure you press Save after any changes made in this section for it to take effect.' Below this, there is a breadcrumb trail 'Settings >> Extender' and a 'Save' button. The 'Existing Network' section includes a dropdown menu for 'Existing Network' (set to 'WPA1'), a 'Wi-Fi Name (SSID)' field, a 'Password' field, and a 'Scan' button. The 'Smart Connect' section has a 'Status' dropdown set to 'Enabled'. The 'Extended Wi-Fi' section also has a 'Status' dropdown set to 'Enabled', a 'Wi-Fi Name (SSID)' field containing 'dlink-2033', and a 'Password' field containing '1234567890'. A copyright notice 'COPYRIGHT © 2010 D-LINK' is visible at the bottom.

Note: If you have changed the Wi-Fi Network name, the device you are currently using to connect to your Range Extender will drop. You will need to go to your Wi-Fi Settings and connect to your Range Extender using the new network name and password.

Where should I place my Range Extender for best performance?

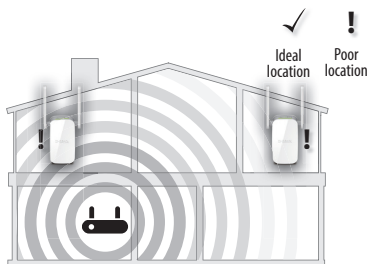

A Range Extender only works as well as the signal it is extending. Therefore, proper placement of your Range Extender is important in achieving desired results.

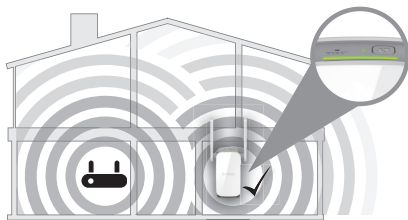

For best performance, place your Range Extender in between your router and your dead zone, making sure it is placed in a location where the Wi-Fi signal is still strong. Use the Smart Signal Indicator to help find a location with a strong signal. The more bars lit on the signal indicator, the stronger the Wi-Fi signal is.

What if I forgot my Range Extender's Admin password or want to reset my Range Extender?

1. If you forgot your Admin password or want to reset your Range Extender back to the factory default settings, press and hold the reset button on the bottom of the extender using a paper clip and release after a minimum of 10 seconds. The Status light will turn red.

Note: This process will erase all your settings.

2. Setup your Range Extender using your preferred method.



What if WPS setup is not working?

WPS may be disabled on some Routers or Modems. If the WPS Status LED on your Router or Modem does not start blinking when you have pressed the WPS button, try again and hold it a little longer. If it still does not blink, **STOP**, and **configure your Range Extender using Method Two: QRS Mobile Setup**, on page 6.

GPL Code Statement

This D-Link product includes software code developed by third parties, including software code subject to the GNU General Public License (“[GPL](#)”) or GNU Lesser General Public License (“[LGPL](#)”). As applicable, the terms of the GPL and LGPL, and information on obtaining access to the GPL code and LGPL code used in this product, are available to you at:

<http://tsd.dlink.com.tw/GPL.asp>

The GPL code and LGPL code used in this product is distributed WITHOUT ANY WARRANTY and is subject to the copyrights of one or more authors. For details, see the GPL code and the LGPL code for this product and the terms of the GPL and LGPL.

Written Offer for GPL and LGPL Source Code

Where such specific license terms entitle you to the source code of such software, D-Link will provide upon written request via email and/or traditional paper mail the applicable GPL and LGPL source code files via CD-ROM for a nominal cost to cover shipping and media charges as allowed under the GPL and LGPL.

Please direct all inquiries to:

Email:

GPLCODE@dlink.com

Snail Mail:

Attn: GPLSOURCE REQUEST
D-Link Systems, Inc.
17595 Mt. Herrmann Street
Fountain Valley, CA 92708

GNU GENERAL PUBLIC LICENSE

Version 3, 29 June 2007

Copyright (C) 2007 Free Software Foundation, Inc. <<http://fsf.org/>>

View the full GPL Code Statement at <http://www.gnu.org/licenses/gpl.html>

Technical Support

This guide is for first time configuration. Please refer to the user manual to learn more.

U.S. customers can contact D-Link Technical Support through our website.

USA



<http://support.dlink.com/>

D-Link[®]

Version 1.03(US)_90x130

June 21, 2019

©2019 D-Link. All rights reserved. D-Link and the D-Link logo are trademarks or registered trademarks of D-Link Corporation or its subsidiaries. All other third-party marks mentioned herein may be trademarks of their respective owners. This publication may not be reproduced, in whole or in part, without prior express written permission from D-Link Systems, Inc.