

# iGAZE® REP KIT

---

Transceiver System for 10kΩ, or 8.2kΩ  
Resistive Safety Edges  
Pulsed output



Movable Device  
TCO0900



Fixed Device  
RCO0900P

INSTRUCTION MANUAL  
v.05.24.18



# TRANSCIVER SYSTEM FOR SAFETY EDGES


## TECHNICAL SPECIFICATIONS

Movable device name	TCOO900
Fixed device name	RCOO900P
Frequency	902-928 Mhz
Range of the system in free space	20 m / 60 feet
TCOO900 power supply	2 x 1.5V batteries (AA)
RCOO900P power supply	12/24 Vac-dc
Battery duration	2 years (normal functioning mode). 5 years (Low power mode).
Minimum battery level (TCOO900)	1.9V
Compatible safety edges (TCOO900)	Resistive (8.2 k $\Omega$ / 10k $\Omega$ )
Number of outputs (RCOO900P)	2
Maximum number of Transmitters for each RCOO900P	8 for each device.
Maximum number of safety edges for each output	8 for each relay.
Power draw on RCOO900P (24Vdc)	15mA (3-wire or 4-wire pulsed) 50mA (2-wire pulsed)
Resistive Safety Edge (max value)	5kOhm < R < 20KOhm (safety edge OK) R<5KOhm (safety edge in short circuit) R>20KOhm (OPEN safety edge)
Frequency for alternate current (RCOO900P)	50-60Hz
Operating Temperature	-10°C to +55°C / 14°F to 131°F


## QUICK START GUIDE

BELOW IS THE MOST COMMON INSTALLATION

**TCOO900** - Both safety edges are 8.2k $\Omega$  or 10k $\Omega$  resistive.

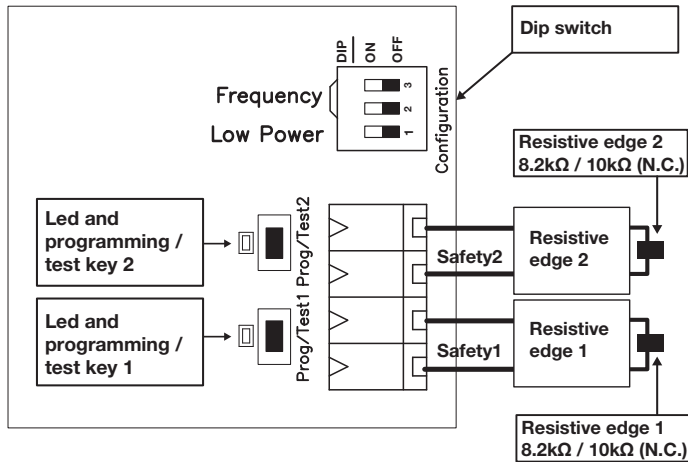

**RCOO900P** - Pulsed 2 Frequency on both channels

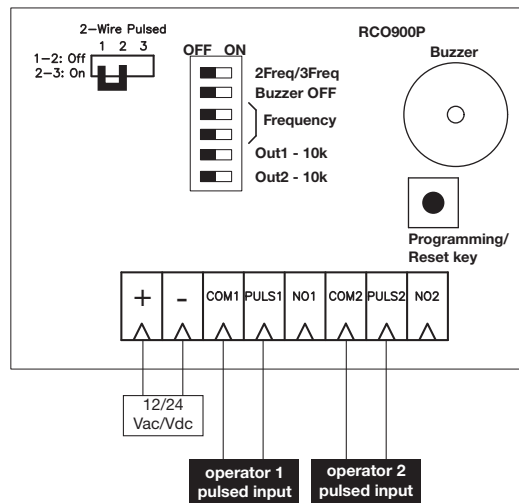

## A DESCRIPTION

The iGAZE® REP transceiver system is intended as a safety device for automated gates and rolling doors. The system is comprised of 1 fixed device (RC00900P) with 2 pulsed outputs, which is connected to the operator, and up to 8 movable devices (TC00900) for each relay. The system TC00900 will accept only resistive safety edge 10kΩ or 8.2kΩ. The transmission signal is bi-directional and utilizes the frequencies 902-928MHz. Maximum range between the movable and fixed devices is 60 feet.


**TC00900 is suitable for outdoor use. RCO0900P is suitable for indoor use only (“indoor” means inside the operator box). The installation of the system must be carried out by a qualified installer.**

## B CONFIGURATION AND ELECTRICAL CONNECTIONS

**ATTENTION!** If external operators or devices are installed, wiring type **CL2, CL2P, CL2R** or **CL2X** complying with UL 13 or other cable with equivalent or better electrical, mechanical, and flammability ratings shall be used.

### STEP 1

#### DIP SWITCHES CONFIGURATION OF TC00900

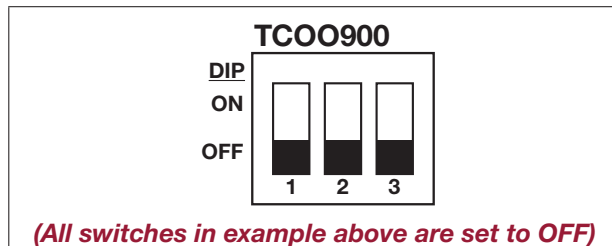


N°DIP	Function
1	Low Power (see section E on page 9)
2	Frequency channel selection (see page 4)
3	

### STEP 2



#### CONNECT THE SAFETY EDGE TO THE SAFETY EDGE MOVABLE DEVICE (TC00900)

#### EXAMPLE 1 - Both safety edges are 8.2kΩ or 10kΩ resistive

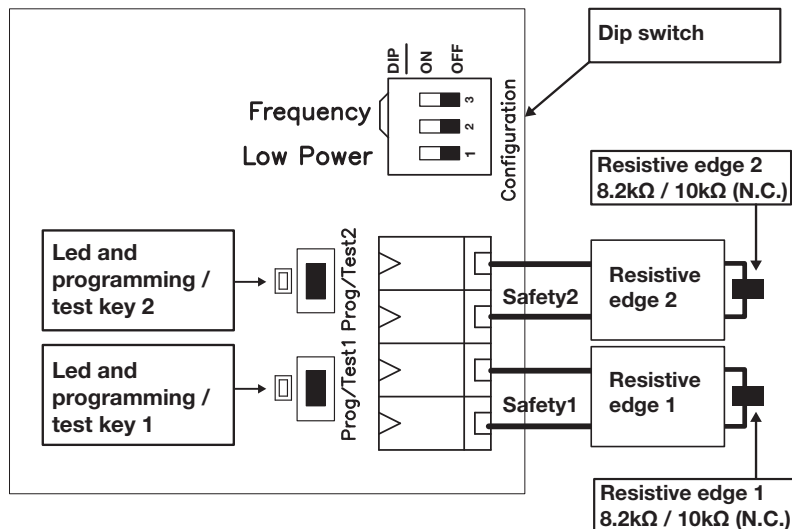

### STEP 3

SET DIP SWITCHES 2 AND 3 ON THE TCOO900 AND 3 AND 4 ON THE RCOO900P TO THE SAME SETTINGS.

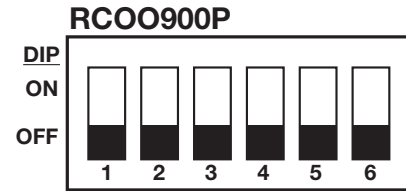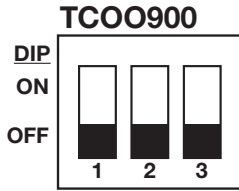

N° DIP	Function
1	Low power. (see Section E on page 9)
2	Frequency channel selection
3	

N° DIP	Function
1	2 Freq / 3 Freq
2	Buzzer ON / OFF
3	Frequency channel selection
4	
5	Out1 type: N.O. contact (OFF) or 10k signal (ON) 1
6	Out2 type: N.O. contact (OFF) or 10k signal (ON) 2

It is possible to associate a maximum of 8 TCOO900 to each RCOO900P.


**WARNING:** for a correct functioning of the system, every TCOO900 must have the frequency dip switch set the same way as the corresponding RCOO900P.

Frequency channel selection			
Channel	Dip 3 (2)	Dip 4 (3)	Frequency
1	OFF	OFF	912.900
2	OFF	ON	914.900
3	ON	OFF	916.900
4	ON	ON	918.900

On a safety system with more than one Receiver, to avoid interference, we recommend the use of different frequency settings on each set of a RCOO900P and the associated TCOO900.

### STEP 4

POWER THE TCOO900 BY INSTALLING THE TWO AA BATTERIES (1.5V) INTO THE BATTERY HOLDER. PLEASE NOTE THE CORRECT POLARITY.

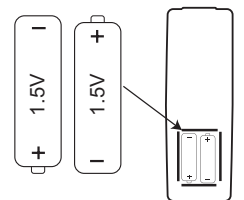


### STEP 5

MOUNT THE TCOO900 AS HIGH AS POSSIBLE AND IN SUCH A WAY AS THERE ARE NO OBSTACLES IN THE DIRECTION OF THE RCOO900P AND IN SUCH A WAY AS THE MAXIMUM DISTANCE BETWEEN THE TWO DEVICES IS LESS THAN 60 FEET (MAX 20 METERS / 60 FEET).

**WARNING:** install the TCOO900 at a minimum height of 8" from the ground. Keep the installation area clean of debris which can effect the normal operation of the system.

**NOTE:** Transmitter Solutions is not responsible for any damage caused by an improper, incorrect, or unintended use of the product.

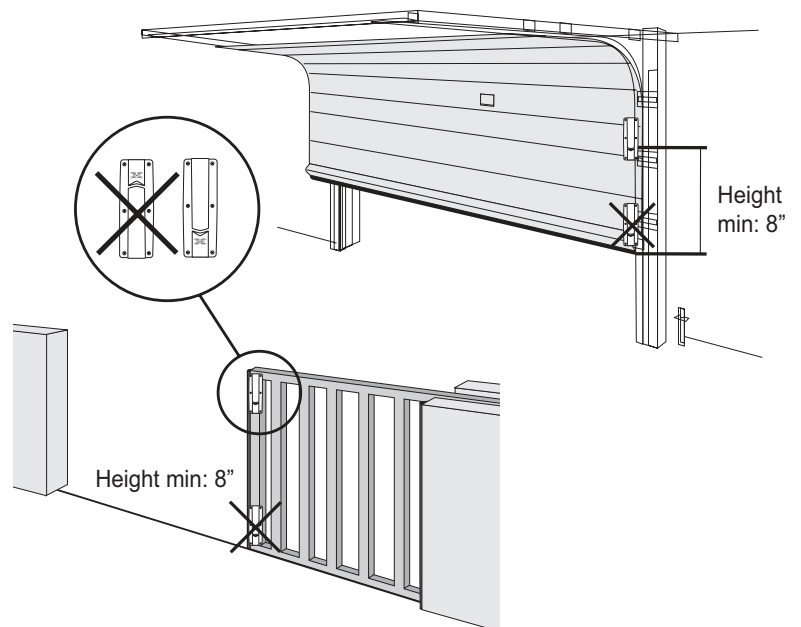

## STEP 6

MOUNT THE RCO0900P AS CLOSE AS POSSIBLE TO THE TCO0900. IF MOUNTED TO A WALL, USE SUITABLE SCREWS AND ANCHORS TO SECURE THE RCO0900P.

## STEP 7


DEPENDING ON THE TYPE OF SIGNAL REQUIRED, CONNECT THE OUTPUTS AS EXPLAINED IN THE FOLLOWING EXAMPLES.

**WARNING:** The power supply for the receiver must be an insulated transformer to protect against short circuits


**NOTE:** The signals given on the outputs 1 and 2 are a N.O. contact, resistive output (10k $\Omega$ ) or pulsed output, depending on the setting of dip switches 5 and 6, and the wiring connection.

**NOTE:** The level of acoustic noise generated by the device is less than 70 dBA.


### EXAMPLE 1 - Pulsed 2 Frequency on both channels

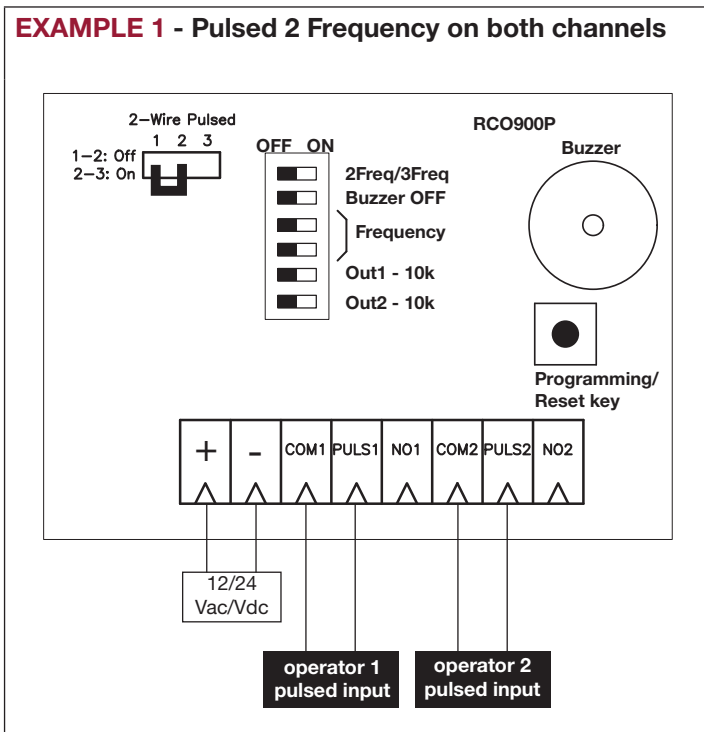


### EXAMPLE 2 - Pulsed 2-wire on channel 1 and pulsed 4-wire on channel 2

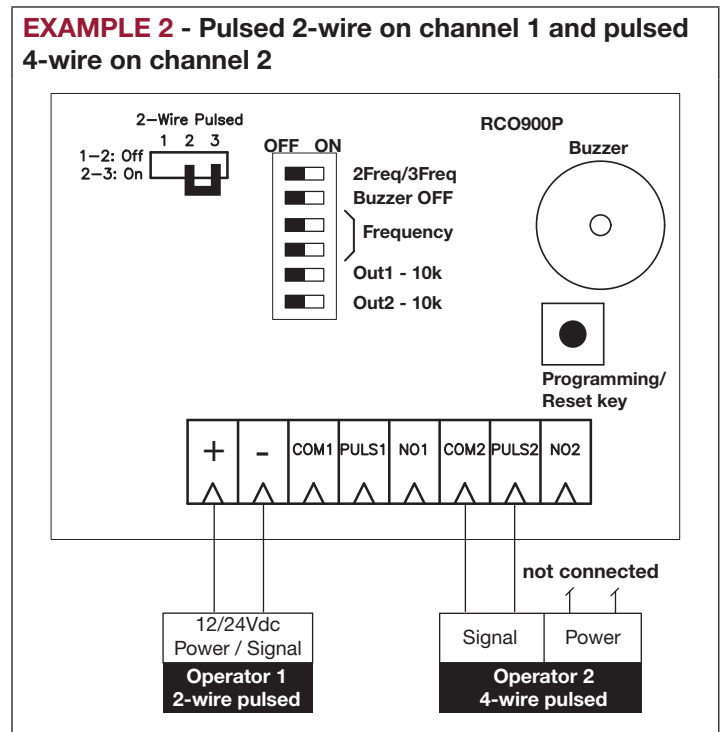


### EXAMPLE 3 - Pulsed 4-wire on both channels

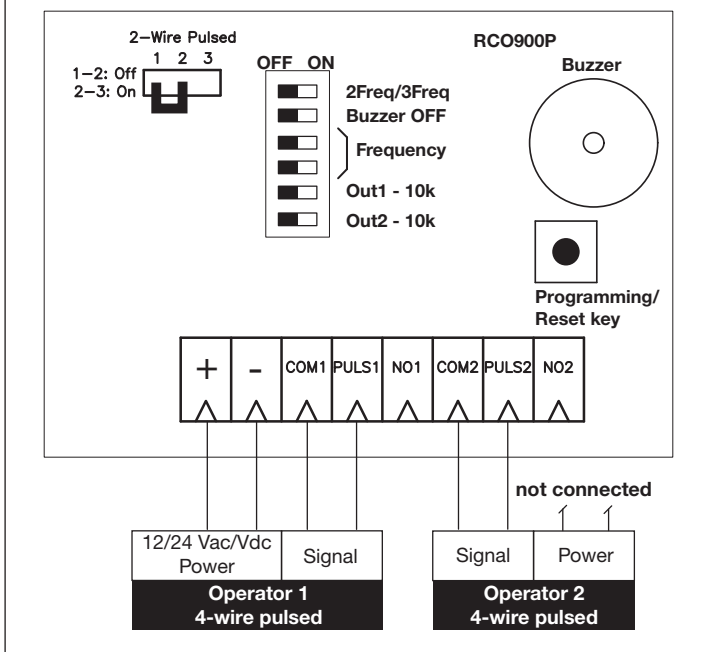


### EXAMPLE 4 - Pulsed 3-wire on both channels

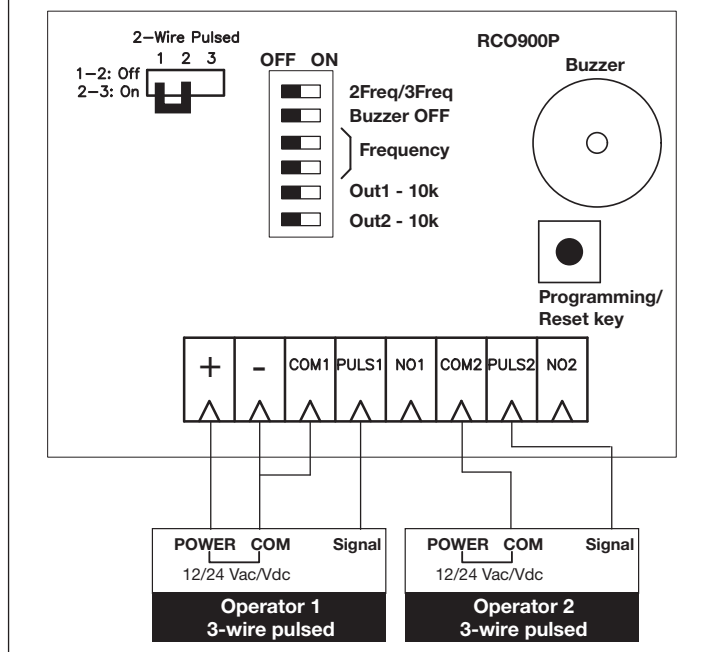

### EXAMPLE 5 - Pulsed 2-wire on channel 1 and 10k on channel 2

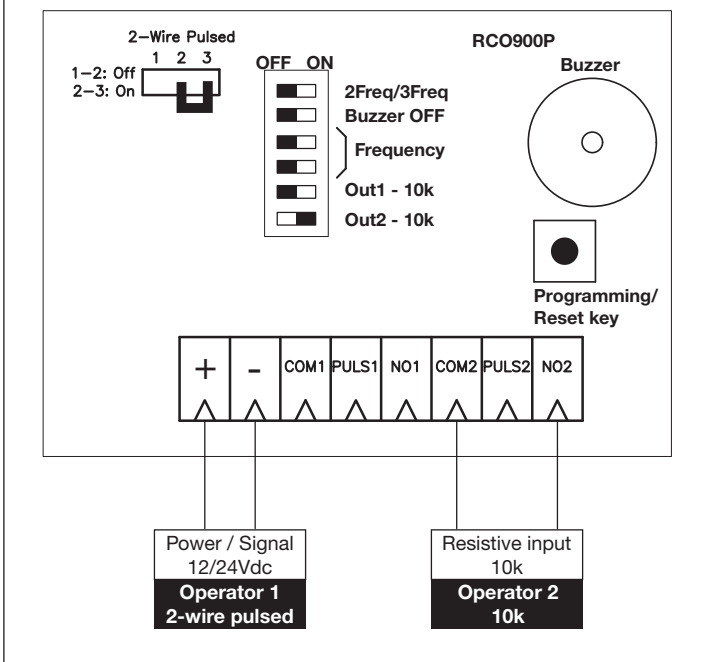


### EXAMPLE 6 - Pulsed 4-wire on channel 1 and N.O. on channel 2

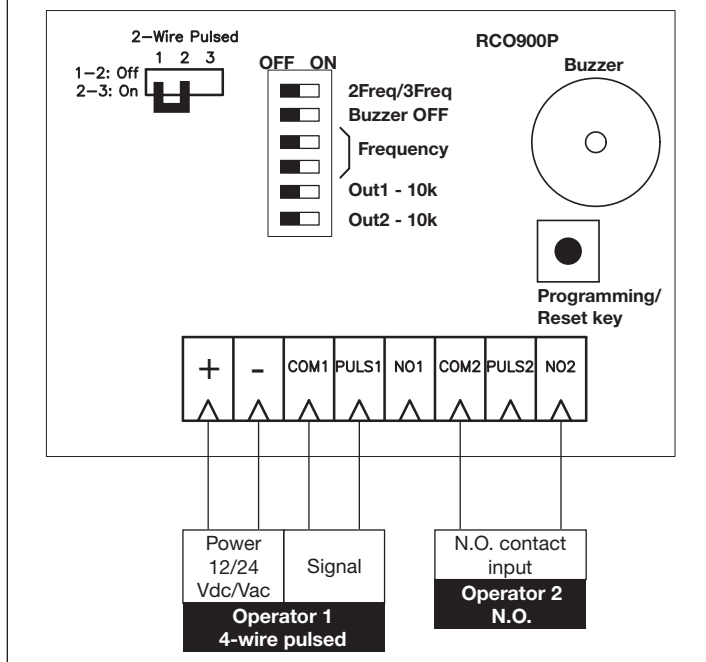

## STEP 8

MOUNT THE IGAZE® REP RCO0900P

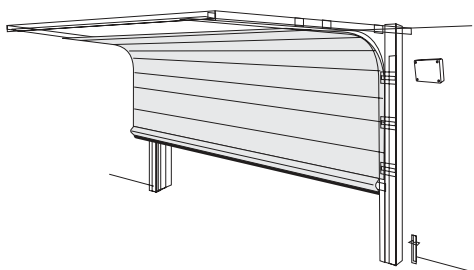


## STEP 9

POWER THE RCO0900P WITH 12-24 VAC/DC INSULATED POWER SUPPLY (NOT INCLUDED WITH THE IGAZE® REP KIT).

## STEP 10

PROGRAM THE TCOO900 TO THE RCOO900P ACCORDING TO THE FOLLOWING INSTRUCTIONS:

### PROGRAMMING OF THE MOVABLE DEVICE ON CHANNEL 1 OUTPUT OF THE FIXED DEVICE

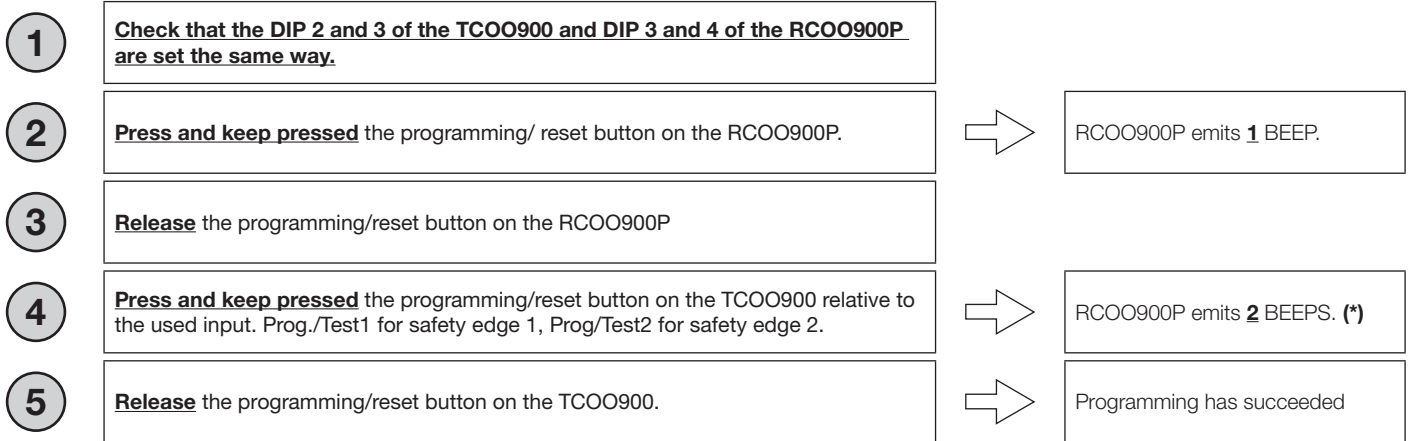


To enter more TCOO900 in the RCOO900P, repeat the operation from step 2. (on page 3)

(\*) **If you hear 4 BEEPS**, it means that the maximum number of safety edges for the selected channel has been reached and that no new devices on the same channel output can be memorized.

**NOTE:** When the TCOO900 is used with two connected safety edges, it is necessary to carry out the learning process two times, one for each input.

**WARNING:** The same output of the TCOO900 can be memorized on both output channels. To erase the memorized input it is necessary to perform a complete reset of the RCOO900P (see page 8).

### PROGRAMMING OF THE TRANSMITTER ON CHANNEL 2 OUTPUT OF THE FIXED DEVICE

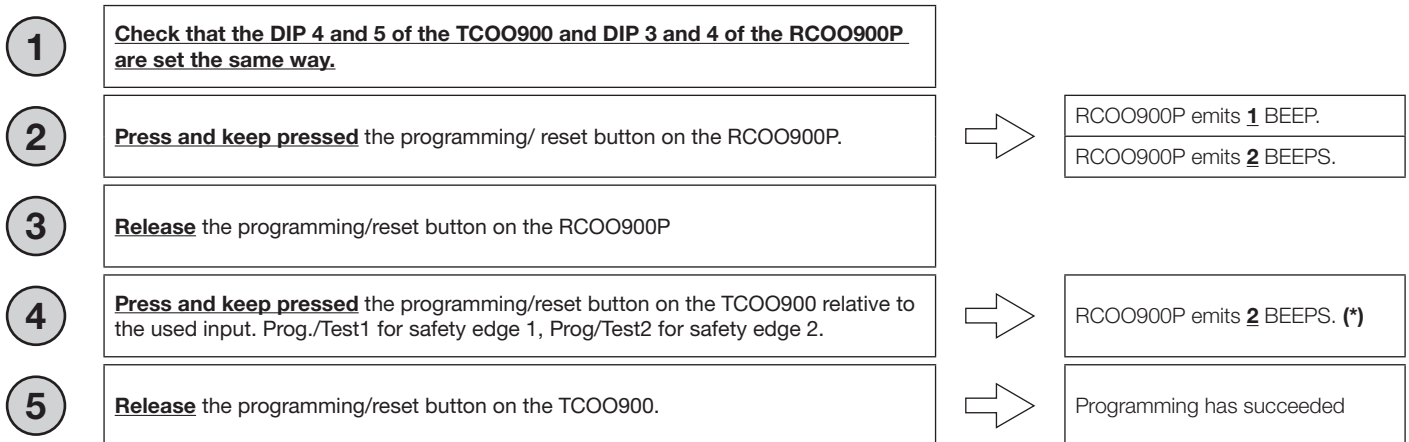

To enter more TCOO900 in the RCOO900P, repeat the operation from step 2. (on page 3)

(\*) **If you hear 4 BEEPS**, it means that the maximum number of safety edges for the selected channel has been reached and that no new devices on the same channel output can be memorized.

**NOTE:** When the TCOO900 is used with two connected safety edges, it is necessary to carry out the learning process two times, one for each input.

**WARNING:** The same output of the TCOO900 can be memorized on both RCOO900P output channels. To erase the memorized input it is necessary to perform a complete reset of the RCOO900P (see page 8).

## STEP 11

### TEST THAT THE PROGRAMMING OF THE MOVABLE DEVICE WAS SUCCESSFUL.

On each TCOO900, two buttons, labeled “programming/test key”, and two leds are present. Pushing the programming button of the edge to test during normal functioning (so not in programming) produces a signal that is sent to the RCOO900P activates the output channel and responds to this signal with:

Acoustic signaling during the normal functioning		
Number of BEEP/ BLINK	Meaning	What to do
1	Regular functioning, no mistake found.	-
2	One or more safety edges faulty.	Check the safety edge connections
3	One or more 8.2k / 10k resistive edges disconnected.	Check the resistive edges connected
4	Battery level low.	Substitute the batteries of the indicted device
5	Low battery.	Replace the batteries
6	One or more associated devices disconnected	Check each associated device

**NOTE:** If one TCOO900 is in the alarm state and it is necessary to open or close the operating device, press and keep pressed the programming / test button of the TCOO900 in alarm at the same time the operating device is activated to open or close.


## STEP 12

### VERIFY THE CORRECT FUNCTION OF EACH SAFETY EDGE, MOVABLE AND FIXED DEVICES WITH THE OPERATOR INSTALLED.

#### D RECEIVER RESET

Using the program/reset key, it is possible to erase all TCOO900 that are programmed into the RCOO900P.

**NOTE: This procedure resets all memory to factory defaults.**

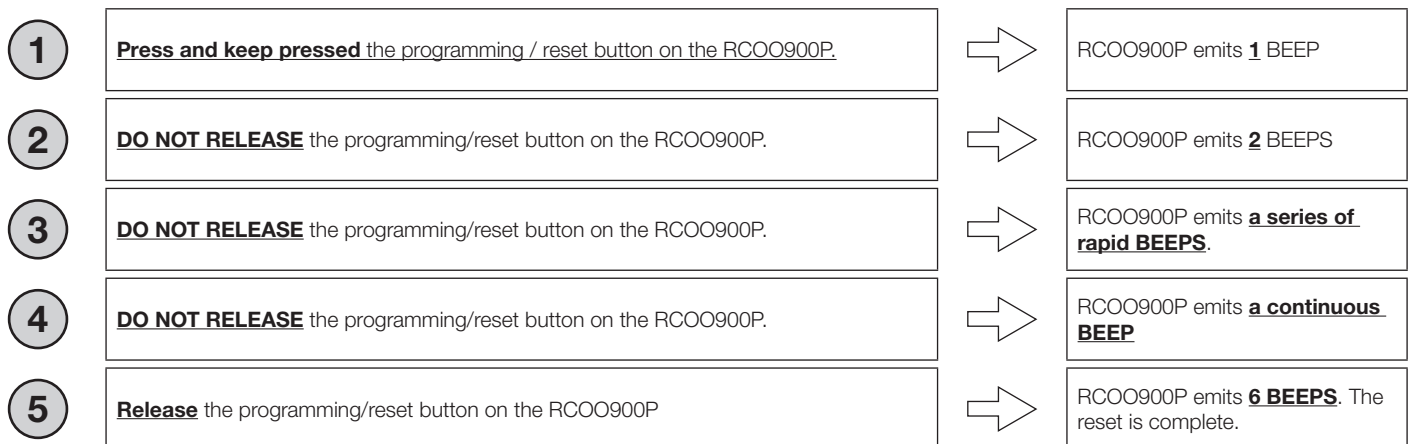



## E ENERGY SAVING (LOW POWER)

With the dip switch set to low power it is important to remember that the TCOO900 will only check in with the RCOO900P every 15 seconds. If a power failure (dead battery) were to occur during this 15 second interval, the RCOO900P will only signal an alarm after the 15 second interval has been reached.

TCOO900 Dip switch 1 set ON: (Low power activated) state of the transmitter is checked every 15 seconds.

TCOO900 Dip switch 1 set OFF: (Low power deactivated) state of the transmitter is checked each second.

## F FCC COMPLIANCE

### **FCC ID: SU7TCO900 and SU7RCOO900P**

This device complies with part 15 of the fcc rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**IMPORTANT!** Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

### **FCC Radiation Exposure Statement**

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

The antennas used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.

**1 – Ensure that wire leads from safety edge are securely attached to the movable device (TCOO900).**

**NOTE:** Wire leads from safety edge have no specific polarity and can be placed in either terminal of Safety device Input1 or Safety device Input2 on the movable device.

Ensure that wire leads into the fixed device (RCOO900P) are firmly connected and into proper terminals (ie N.C. or N.O.) for help in wiring RCOO900P inputs see STEP 7 examples.

**2 – Make sure that the type of safety edge attached to the TCOO900 is resistive.**

How to determine the type of edge if there is no clear label:

A voltmeter can be used to determine the type of edge:

- 1- Set voltmeter to read Ohms
- 2- Place a test probe on each of the wire leads from the safety edge
- 3- If the voltmeter registers resistance (ie 8.2K $\Omega$  or 10K $\Omega$ ) the safety edge is resistive
- 4- If the voltmeter does not register resistance (ie 1) the safety edge is mechanical

If safety edge is mechanical, the system **RCOO900P / TCOO900** is NOT compatible.

Determine what type of output signal the gate operator is looking for:

- Doorking – 10K resistive device
- NICE – 8.2K resistive device
- If 8.2k or 10k (resistive): DIP switch 5 or 6 on the RCOO900P need to be in the ON position (DIP 5 for Output1 and Safety Device 1 and DIP 6 for Output2 and Safety Device 2)
- If N.O. contact: DIP switch 5 or 6 on the RCOO900P needs to be in the off position (DIP 5 for Output1 and Safety Device 1 and DIP 6 for Output2 and Safety Device 2)

**3 – To ensure that the TCOO900 and RCOO900P are communicating within the same frequency DIP switch 2 and 3 on the TCOO900 and DIP switch 3 and 4 on the RCOO900P need to be in the same position.****4 – Check batteries in TCOO900 to ensure correct polarity and sufficient power.****5 – If TCOO900 and RCOO900P are still not communicating ensure that obstacles between the devices are moved and mount devices as high as possible and away from metal objects.**

**WARRANTY**

The warranty period of this product is 24 months, beginning from the manufacturing date. During this period, if the product does not operate correctly, due to a defective component, the product will be repaired or replaced at the sole discretion of Transmitter Solutions. This warranty does not extend to the product casing which can be damaged by conditions outside of the control of Transmitter Solutions.

EXCEPT AS SET FORTH ABOVE, TRANSMITTER SOLUTIONS MAKES NO WARRANTIES REGARDING THE GOODS, EXPRESS OR IMPLIED, INCLUDING WARRANTY OF MERCHANTABILITY OR WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE. BUYER MAKES NO RELIANCE ON ANY REPRESENTATION OF TRANSMITTER SOLUTIONS, EXPRESS OR IMPLIED, WITH REGARD TO THE GOODS AND ACCEPTS THEM "AS-IS/WHERE-IS". TRANSMITTER SOLUTIONS SELLS THE GOODS TO BUYER ON CONDITION THAT TRANSMITTER SOLUTIONS WILL HAVE NO LIABILITY OF ANY KIND AS A RESULT OF THE SALE. BUYER AGREES THAT TRANSMITTER SOLUTIONS SHALL HAVE NO LIABILITY FOR DAMAGES OF ANY KIND, WHETHER DIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES, INCLUDING INJURIES TO PERSONS OR PROPERTY, TO BUYER, ITS EMPLOYEES OR AGENTS, AS A RESULT OF THE SALE. BUYER ALSO AGREES TO HOLD TRANSMITTER SOLUTIONS HARMLESS FROM ANY CLAIMS BUYER, OR ANY THIRD PARTY, MAY HAVE AS A RESULT OF BUYER'S USE OR DISPOSAL OF THE GOODS. BUYER HAS READ THIS DISCLAIMER AND AGREES WITH ITS TERMS IN CONSIDERATION OF RECEIVING THE GOODS.



2 480 South 3850 West, Suite  
Salt Lake City, UT 84120  
(866) 975-0101 • (866) 975-0404 fa  
[www.transmittersolutions.com](http://www.transmittersolutions.com)