



**User Manual**

**DAP-1665 AC1200 Wi-Fi Range Extender/Access Point**

# Preface

D-Link reserves the right to revise this publication and to make changes in the content hereof without obligation to notify any person or organization of such revisions or changes.

## Manual Revisions

Revision	Date	Description
1.00	October 1, 2013	• Initial release
1.01	September 30, 2014	• Add Power Usage
1.10	April 21, 2016	• Updated FCC statement
1.20	October 19, 2016	• B1 firmware release

## Trademarks

D-Link and the D-Link logo are trademarks or registered trademarks of D-Link Corporation or its subsidiaries in the United States or other countries. All other company or product names mentioned herein are trademarks or registered trademarks of their respective companies.

Apple®, Apple logo®, Safari®, iPhone®, iPad®, iPod touch® and Macintosh® are trademarks of Apple Inc., registered in the U.S. and other countries. App Store<sup>SM</sup> is a service mark of Apple Inc. Chrome™ browser, Google Play™ and Android™ are trademarks of Google Inc. Internet Explorer®, Windows® and the Windows logo are trademarks of the Microsoft group of companies.

Copyright © 2016 by D-Link Corporation, Inc.

All rights reserved. This publication may not be reproduced, in whole or in part, without prior expressed written permission from D-Link Corporation, Inc.

## Power Usage

This device is an Energy Related Product (ErP) that automatically switches to a power-saving Network Standby mode within 1 minute of no packets being transmitted. It can also be turned off through a power switch to save energy when it is not needed.

**Network Standby:** 2.56 watts

**Switched Off:** 0.07 watts

# Table of Contents

<b>Preface</b> .....	<b>ii</b>	Setup Wizard .....	22
Manual Revisions.....	ii	Access Point Mode .....	23
Trademarks .....	ii	Repeater Mode .....	25
Power Usage.....	ii	Wi-Fi Client Mode .....	31
<b>Product Overview</b> .....	<b>4</b>	Extender.....	36
Package Contents.....	4	Settings .....	36
System Requirements.....	5	Access Point Mode .....	37
Introduction .....	6	Repeater Mode .....	43
Features.....	7	Wi-Fi Client .....	47
Hardware Overview .....	8	Bridge.....	48
Connections .....	8	Bridge with AP Mode.....	51
LEDs .....	9	WISP Client .....	56
WPS Button .....	10	WISP Repeater.....	57
<b>Installation</b> .....	<b>11</b>	Network Settings.....	61
Operation Modes.....	11	IPv4 .....	62
Access Point Mode .....	12	Static IP .....	62
Wireless Client Mode.....	13	Dynamic IP (DHCP).....	64
Repeater Mode .....	14	IPv6 .....	65
Bridge Mode .....	15	Autoconfiguration (SLAAC/DHCPv6).....	65
Bridge with AP Mode .....	16	Static IPv6 .....	66
WISP Client Router Mode.....	17	Local Connectivity Only.....	67
WISP Repeater Mode.....	18	Management.....	68
Wireless Installation Considerations.....	19	Time & Schedule .....	68
<b>Configuration</b> .....	<b>20</b>	Log .....	70
Web-based Setup .....	21	Admin .....	71
		System .....	72
		Upgrade .....	73

Statistics .....	74
<b>Connecting to a Wireless Network .....</b>	<b>75</b>
WPS Button.....	75
Mac OS.....	76
Windows® 10 .....	78
Windows® 8.....	80
Windows® 7 .....	84
Windows Vista® .....	86
<b>Troubleshooting .....</b>	<b>88</b>
<b>Technical Specifications .....</b>	<b>92</b>
<b>GPL Code Statement.....</b>	<b>93</b>
<b>Regulatory Statements .....</b>	<b>106</b>

# Product Overview

## Package Contents



DAP-1665 AC1200 Wi-Fi Range Extender/Access Point



Ethernet Cable



Two Detachable Antennas<sup>1</sup>



Power Adapter



CD-ROM with Manual

If any of the above items are missing, please contact your reseller.

**Note:** Using a power supply with a different voltage rating than the one included with the DAP-1665 will cause damage and void the warranty for this product.

<sup>1</sup> The appearance of the external antennas may vary depending on region.

# System Requirements

<b>Network Requirements</b>	<ul style="list-style-type: none"><li>• An Ethernet-based Network</li><li>• IEEE 802.11ac/n/g/b/a wireless clients (AP/Repeater Mode)</li><li>• IEEE 802.11ac/n/g/b/a wireless network (Client/Bridge/Repeater Mode)</li><li>• 10/100/1000 Mbps Ethernet</li></ul>
<b>Web-based Configuration Utility Requirements</b>	<p><b>Computer with the following:</b></p> <ul style="list-style-type: none"><li>• Windows®, Macintosh, or Linux-based operating system</li><li>• An installed Ethernet adapter</li></ul> <p><b>Browser Requirements:</b></p> <ul style="list-style-type: none"><li>• Internet Explorer® 10 or higher</li><li>• Firefox 28 or higher</li><li>• Chrome 28 or higher</li><li>• Safari 6.0 or higher</li></ul> <p><b>Windows® Users:</b> Make sure you have the latest version of Java installed. Visit <a href="http://www.java.com">www.java.com</a> to download the latest version.</p>

# Introduction

D-Link introduces the new D-Link DAP-1665 AC1200 Wi-Fi Range Extender/Access Point. With a maximum combined wireless signal rate of up to 1200 Mbps<sup>1</sup>, the DAP-1665 expands high-speed wireless network access for your home or office.

The DAP-1665 is compliant with the latest draft IEEE 802.11ac standard, which features beamforming and MU-MIMO for better wireless performance. The DAP-1665 is also backward-compatible with 802.11n/g/b/a devices so older devices can easily integrate into your network. The access point has the flexibility to operate in 5 different modes: **Access Point, Wireless Client, Bridge, Bridge with AP, Repeater, WISP Client,** and **WISP Repeater**. Its easy-to-use setup wizard makes sure that you will be connected to a wireless network in minutes.

The DAP-1665 features Wi-Fi Protected Access (WPA-PSK/WPA2-PSK) to provide an enhanced level of security for wireless data communications. The DAP-1665 also includes convenience features to keep your wireless connection safe from unauthorized access. Finally, Wi-Fi Protected Setup (WPS) lets you easily set up your device in any mode by simply pressing a button.

<sup>1</sup> Maximum wireless signal rate derived from draft 802.11ac specifications. Actual data throughput will vary. Network conditions and environmental factors, including volume of traffic, building materials and construction, and network overhead, lower actual data throughput rate. Environmental factors will adversely affect wireless signal range. Wireless range and speed rates are D-Link RELATIVE performance measurements based on the wireless range and speed rates of a standard Wireless N product from D-Link.

# Features


- **Faster Wireless Networking** - Featuring Wireless AC, the DAP-1665 provides combined wireless speeds of up to 1200 Mbps<sup>1</sup>. This capability allows users to participate in real-time activities online, such as video streaming, online gaming, and real-time audio.
- **Flexible Operation Modes** - The DAP-1665 can operate as an Access Point, Repeater, Wireless Client, Bridge, Bridge with AP, WISP Client, and WISP Repeater, meaning that you can customize its operation to suit your specific networking requirements.
- **Gigabit Ethernet Port** - The built-in Gigabit Ethernet port facilitates a wired connection of up to 1 Gbps, meaning that wired devices can also take advantage of the DAP-1665's high-speed wireless capabilities.
- **Compatible with IEEE 802.11ac/n/g/b/a Devices** - The DAP-1665 is still fully compatible with the 802.11n/g/b/a standards, so it can connect with existing wireless adapters found on older devices.
- **Robust Security** - Support for industry-standard WPA/WPA2 security encryption, lets you rest assured your network is secure from hackers.
- **User-friendly Setup Wizard** - Using its easy-to-use web-based user interface, the DAP-1665 lets you control what information is accessible to those on the wireless network, whether from the Internet or from your company's server. Configure your access point to your specific settings within minutes.

<sup>1</sup> Maximum wireless signal rate derived from draft 802.11ac specifications. Actual data throughput will vary. Network conditions and environmental factors, including volume of network traffic, building materials and construction, and network overhead, lower actual data throughput rate. Environmental factors will adversely affect wireless signal range. Wireless range and speed rates are D-Link RELATIVE performance measurements based on the wireless range and speed rates of a standard Wireless N product from D-Link.



# Hardware Overview


## Connections

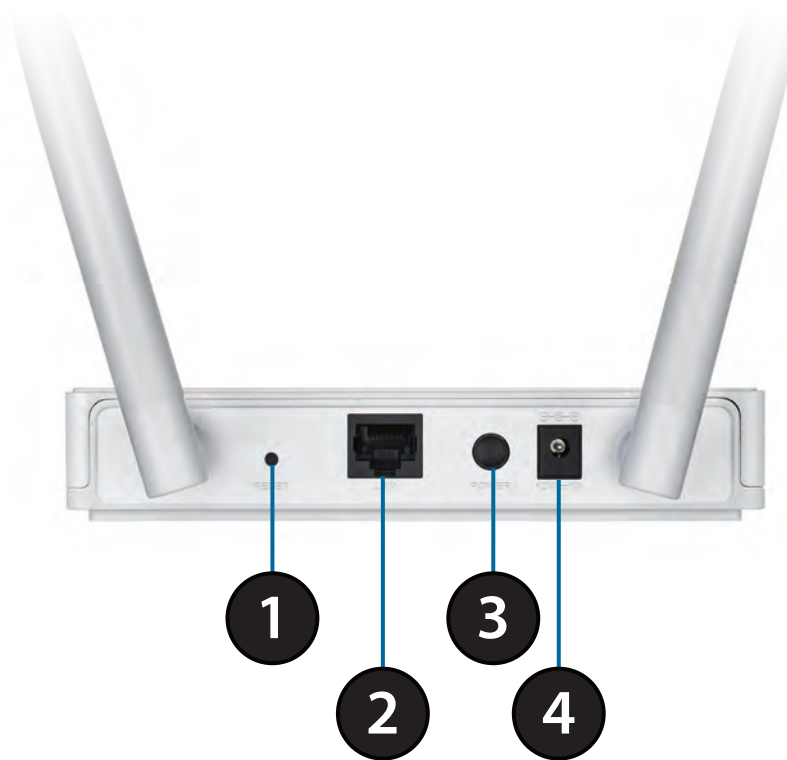

1	<b>Reset Button</b>	Press this button to restore the access point to its original factory default settings.
2	<b>LAN Port</b>	Connect 10/100/1000 Ethernet devices such as computers, switches, and hubs.
3	<b>Power Switch</b>	Press to power the unit on or off.
4	<b>Power Receptor</b>	Receptor for the supplied power adapter.

# Hardware Overview


## LEDs

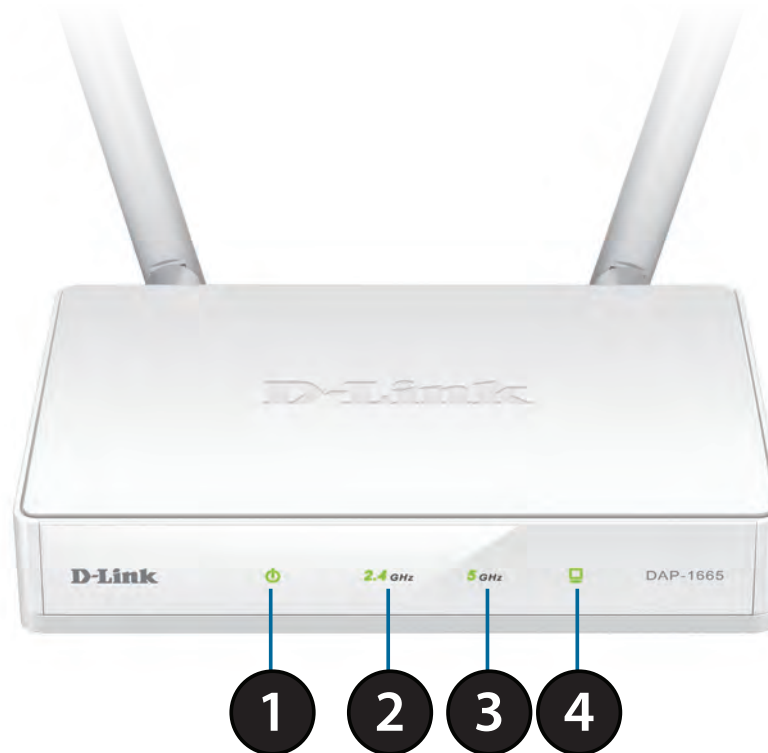

1	<b>Power LED</b>	A solid green light indicates the device is receiving power.
2	<b>2.4 GHz Wireless</b>	A solid green light indicates that the 2.4 GHz wireless band is active.
3	<b>5 GHz Wireless</b>	A solid green light indicates that the 5 GHz wireless band is active.
4	<b>LAN LED</b>	A solid green light indicates the LAN port connection is active.

# Hardware Overview

## WPS Button

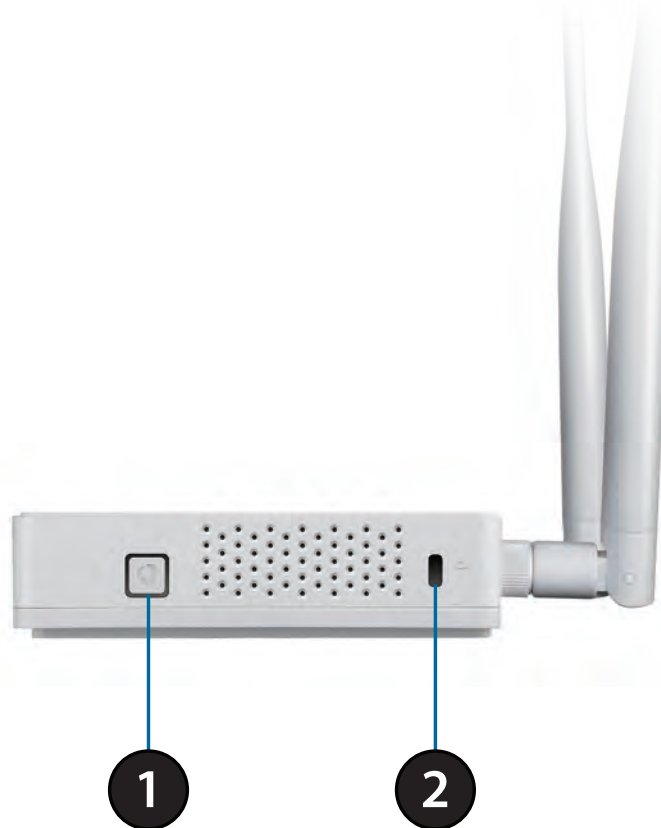

<b>1</b>	<b>WPS Button</b>	Press this button to use WPS to establish a secure connection with other wireless devices.
<b>2</b>	<b>Kensington Slot</b>	Attach a Kensington® lock to protect your access point against theft.

# Installation

Please configure the DAP-1665 with a computer connected directly to the device. The following pages will explain the different operational modes you can use.


## Operation Modes

The DAP-1665 features a number of operation modes, enabling you to customize it to your networking requirements. Please refer to the following sections to determine which mode is most suitable for your network.

- **Access Point Mode** on page 12
- **Wireless Client Mode** on page 13
- **Repeater Mode** on page 14
- **Bridge Mode** on page 15
- **Bridge with AP Mode** on page 16
- **WISP Repeater Mode** on page 18
- **WISP Client Router Mode** on page 17

## Access Point Mode

Access Point (AP) mode adds wireless capability to your existing wired network. The DAP-1665 acts as a central connection point for any computer (client) that has an 802.11ac or backwards compatible 802.11n/g/b/a wireless network interface and is within range of the access point. Clients must connect to the network name (SSID) broadcast by the access point in order to wirelessly access the network. If wireless security is enabled on the access point, the client will need to enter a password to connect. In Access Point mode, multiple clients can connect wirelessly to the network at the same time.

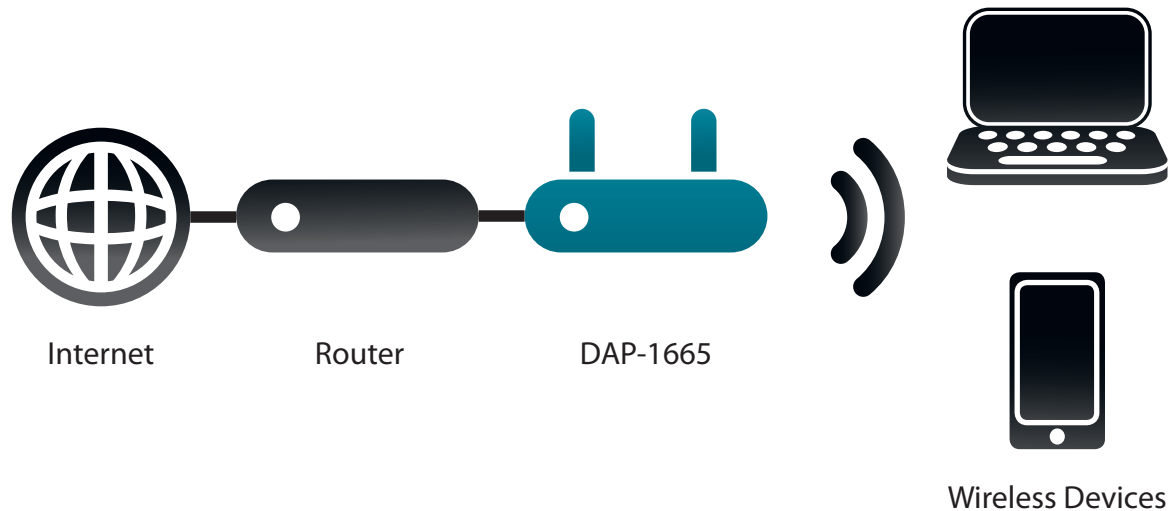


## Wireless Client Mode

In Wireless Client mode, the DAP-1665 acts as a wireless network adapter for your Ethernet-enabled device (such as a game console or a TV set-top box). Connect your Ethernet-enabled device to the access point using an Ethernet cable, and enjoy wired speeds of up to 1000 Mbps.


If you are going to connect several Ethernet-enabled devices to your DAP-1665, connect the LAN port of the DAP-1665 to an Ethernet switch, then connect your devices to this switch.

**Example:** Connect a gaming console using an Ethernet cable to the DAP-1665. The unit is set to Wireless Client mode which will wirelessly connect to a wireless router on your network.

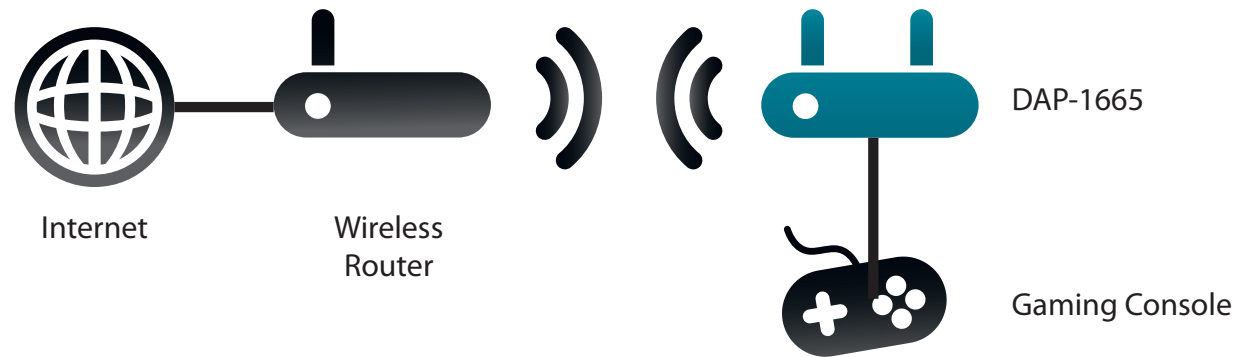

## Repeater Mode

In Repeater mode, the DAP-1665 extends the range of your existing wireless network by repeating the wireless signal of another access point or wireless router. The DAP-1665 and wireless router (if used) must be within range of each other. The extended wireless network can use the same SSID and security settings as the existing network, or you can choose to specify a new network name and security method.

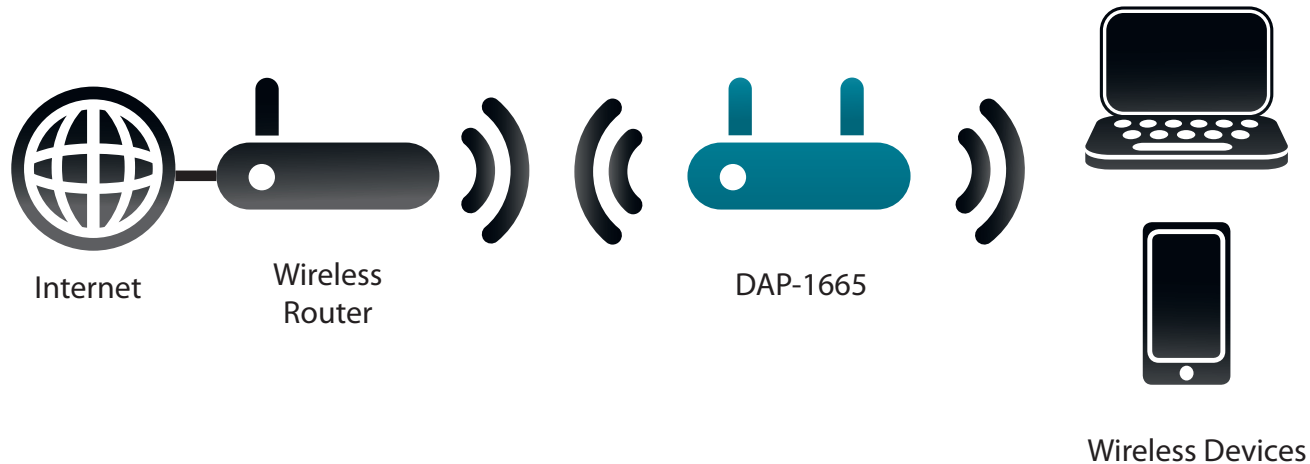

## Bridge Mode

In Bridge mode, the DAP-1665 creates a wireless link between two existing networks, enabling data to be shared between the two networks without the need for a physical connection. The two networks must be within wireless reach of one another in order for bridge mode to be effective.

**Note:** Bridge mode is not specified in the Wi-Fi or IEEE standards. This mode will only work using two DAP-1665 units. Compatibility with other APs (even other D-Link APs) is not guaranteed.






## Bridge with AP Mode

Bridge with AP mode has the same features of Bridge mode, but adds the functionality of Access Point mode, meaning that wireless clients can connect to one of the DAP-1665s and have access to both networks via the wireless bridge.


**Note:** The Bridge with AP mode is not specified in the Wi-Fi or IEEE standards. This mode will only work using two DAP-1665 units. Compatibility with other APs (even other D-Link APs) is not guaranteed.

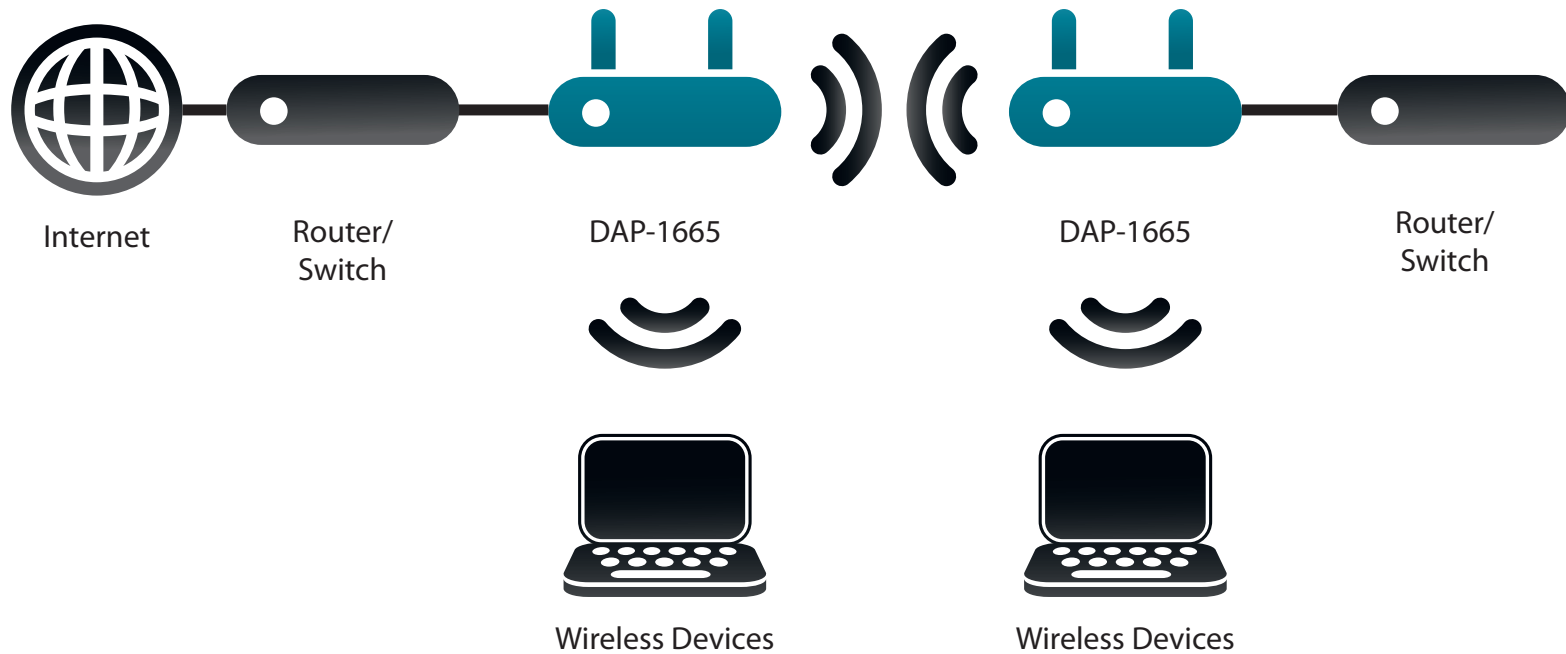

## WISP Client Router Mode

In the WISP Client Router mode, the DAP-1665 wirelessly connects to a WISP (Wireless Internet Service Provider) AP. In this mode, the DAP-1665 also acts as a router for wired clients on your LAN and provides NAT (Network Address Translation) and a DHCP server to generate IP addresses for wired clients only. NAT and the DHCP server allow many computers to share the same wireless Internet connection.

If you are a WISP subscriber and want to access your WISP account using wired computers, connect your computers to the DAP-1665 to get NAT, and then connect them to the WISP AP.

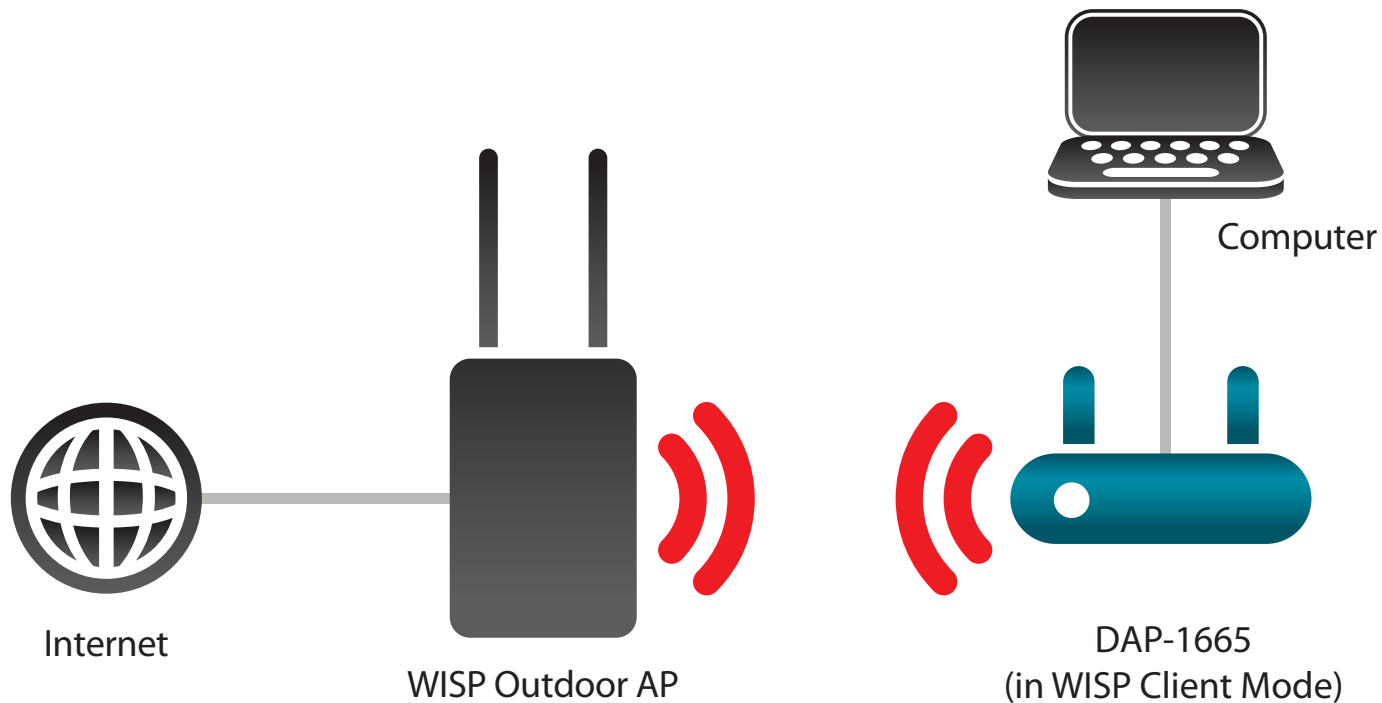


**Connecting Wired PCs to the Internet Using the DAP-1665**

## WISP Repeater Mode

In the WISP Repeater mode, the DAP-1665 wirelessly connects to a WISP (Wireless Internet Service Provider) AP. In this mode, the DAP-1665 also acts as a router for both wireless and wired clients on your LAN. The WISP Repeater mode provides NAT (Network Address Translation) and a DHCP server to generate IP addresses for both wireless and wired clients. NAT and the DHCP server allow many computers to share the same wireless Internet connection.

If you are a WISP subscriber and want to use your WISP account in your house, but the signals from the outdoor WISP AP are not strong enough to reach all of the areas in the house, use the DAP-1665 to extend the signals from the outdoor WISP AP and provide access to wireless clients in your house. Using this mode, wireless as well as wired clients can connect to the outdoor WISP AP through the DAP-1665.

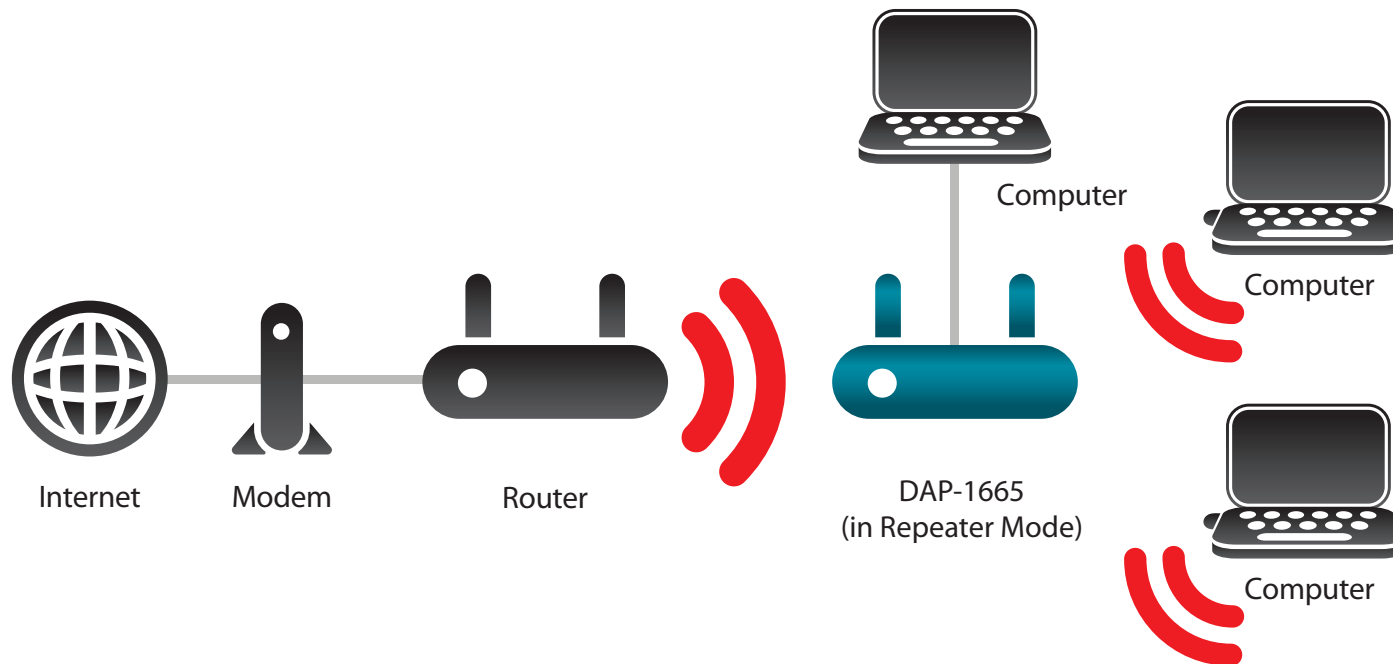

**Connecting Wired and Wireless PCs to the Internet Using the DAP-1665**


# Wireless Installation Considerations

The DAP-1665 wireless access point lets you access your network using a wireless connection from virtually anywhere within the operating range of the device. Keep in mind, however, that the number, thickness and location of walls, ceilings, or other objects that the wireless signals must pass through, may limit the range. Typical ranges vary depending on the types of materials and background RF (radio frequency) noise in your home or business. The key to maximizing wireless range is to follow these basic guidelines:

1. Keep the number of walls and ceilings between the D-Link access point and other network devices to a minimum. Each wall or ceiling can reduce your adapter's range from 3-90 feet (1-30 meters.) Position your devices so that the number of walls or ceilings is minimized.
2. Be aware of the direct line between network devices. A wall that is 1.5 feet thick (.5 meters), at a 45-degree angle appears to be almost 3 feet (1 meter) thick. At a 2-degree angle it appears over 42 feet (14 meters) thick! Position devices so that the signal will travel straight through a wall or ceiling (instead of at an angle) for better reception.
3. Building materials make a difference. A solid metal door or aluminum studs may have a negative effect on range. Try to position access points, wireless routers, and computers so that the signal passes through drywall or open doorways. Materials and objects such as glass, steel, metal, walls with insulation, water (fish tanks), mirrors, file cabinets, brick, and concrete will degrade your wireless signal.
4. Keep your product away (at least 3-6 feet or 1-2 meters) from electrical devices or appliances that generate RF noise.
5. If you are using 2.4 GHz cordless phones or X-10 (wireless products such as ceiling fans, lights, and home security systems), your wireless connection may also be affected. Make sure your 2.4 GHz phone base is as far away from your wireless devices as possible. The base transmits a signal even if the phone is not in use.


# Configuration

This section will show you how to configure your D-Link wireless access point using the web-based configuration utility.

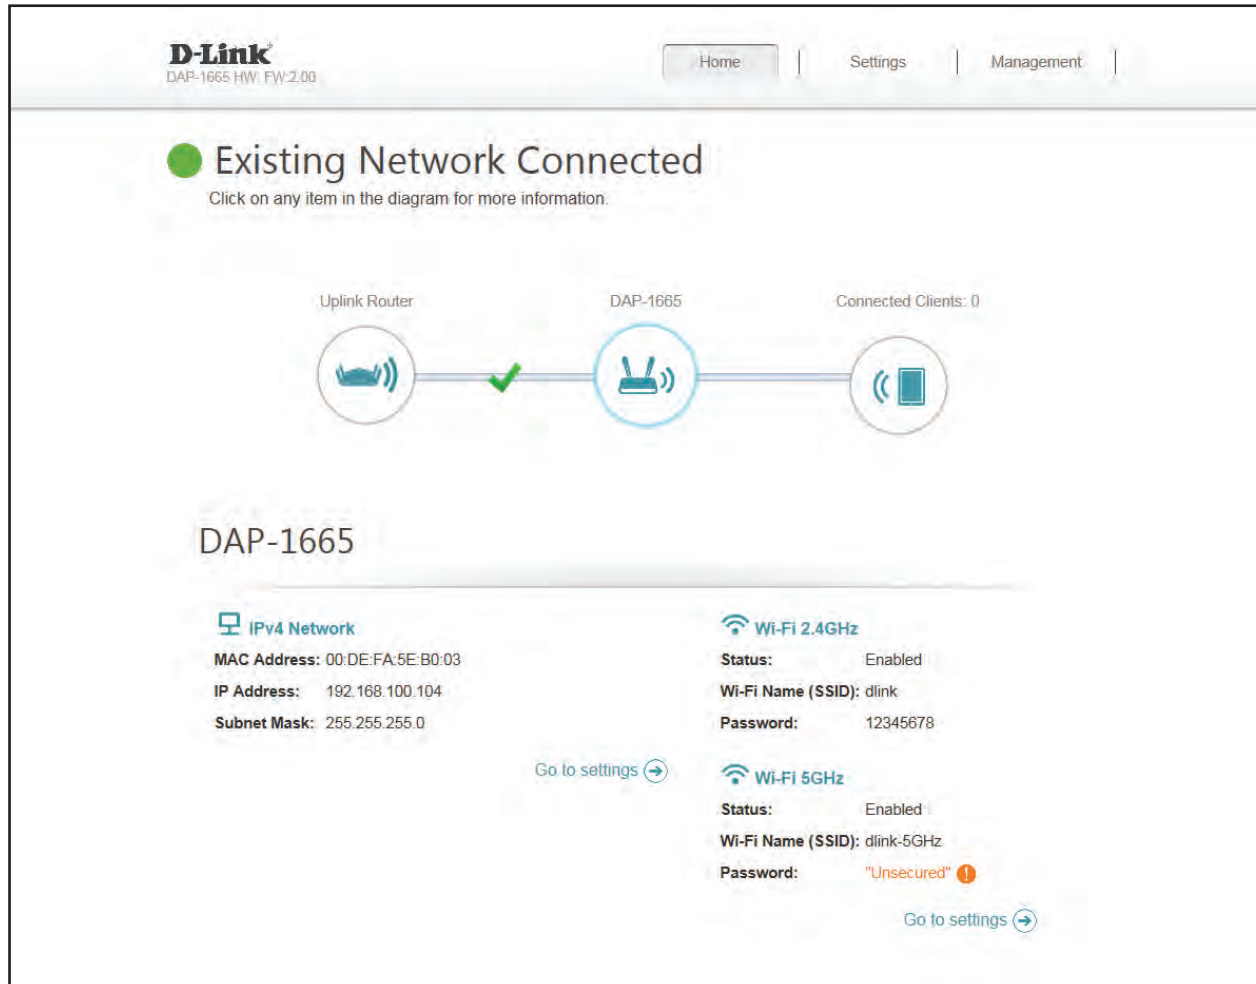

# Web-based Setup

If you wish to change the default settings or adjust the configuration of the DAP-1665, you may use the web-based configuration utility.



To access the configuration utility, open a web browser such as Internet Explorer and enter **http://dlinkap** in the address field.

If you have already run the setup wizard, enter your password in the box. Otherwise, leave the password blank by default and click **Log In**.

If you get a *Page Cannot be Displayed* error, please refer to **Troubleshooting** on page 89 for assistance.

A screenshot of a web-based login form. The form is contained within a light gray rounded rectangle. At the top, the text 'Admin Password:' is displayed. Below this text is a white rectangular text input field with a thin blue border. Below the input field is a teal rectangular button with the text 'Log In' in white.



# Setup Wizard

If this is the first time you are setting up your DAP-1665, open a web browser such as Internet Explorer and enter **http://dlinkap** in the address field to access the setup wizard.

Select a language from the drop-down menu and click **Next** to proceed with the wizard.

If you want to configure the access point manually without running the wizard, skip to **Manual Configuration** on page 36.

The next screen will display a list of modes for your DAP-1665 that you may choose from. Click **Next** to continue.

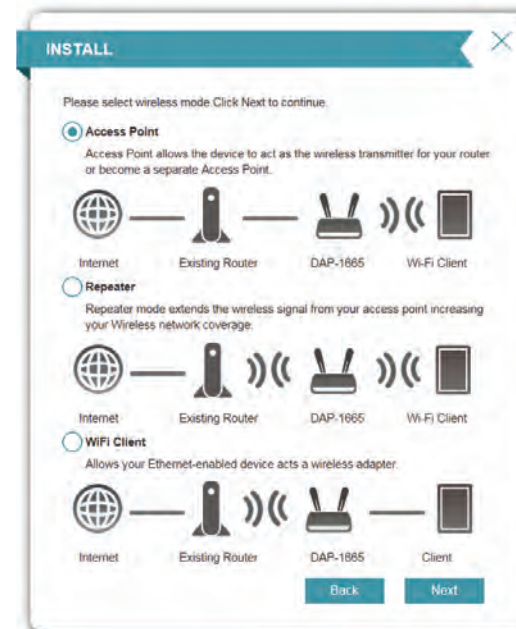

## Access Point Mode

This wizard is designed to assist you in configuring your DAP-1665 as a wireless access point for your existing network.

If you have already connected an Ethernet cable from your DAP-1665 to your router, the wizard will automatically detect it.

Click **Skip** to continue or **Back** to go back to the previous step.



This screen will help you to set a network name (SSID) and security password for your wireless network. Specify an SSID for both the 2.4 GHz and 5 GHz bands (these names must not be the same). If you wish to use the same wireless security password for both networks, check the box and enter your desired password in the field provided. If you wish to use a different password for each network, uncheck the box and enter the desired passwords in the **2.4 GHz Wi-Fi Password** and **5 GHz Wi-Fi Password** fields.

Click **Next** to continue or **Back** to go back to the previous step.






## Section 3 - Configuration

Next, enter a password for your administrator account. This account is used to log into the DAP-1665 for managing your network.

Click **Next** to proceed.

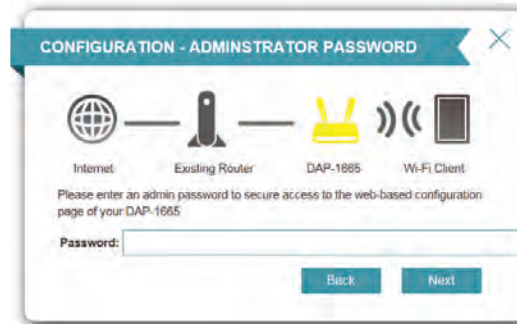


A summary page will be displayed, showing the current settings for your 2.4 GHz and 5 GHz wireless networks. It is recommended that you make a note of this information for future reference.

Click **Finish** to save your network settings.

In order for your network settings to take effect, the DAP-1665 will reboot automatically.


When the device has finished rebooting the main screen will display.

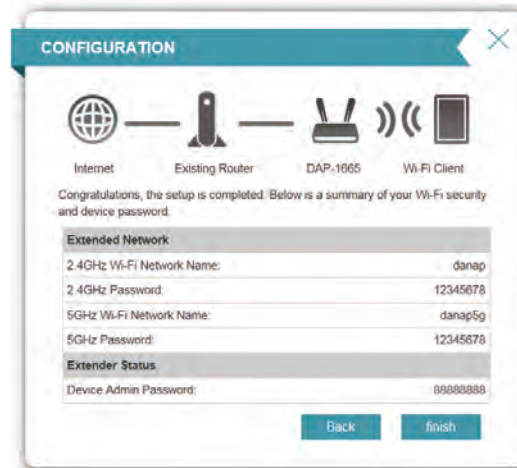

## Repeater Mode

This wizard is designed to assist you in configuring your DAP-1665 as a repeater to extend the range of your existing wireless network.

Select **Repeater** from the menu and click **Next**.

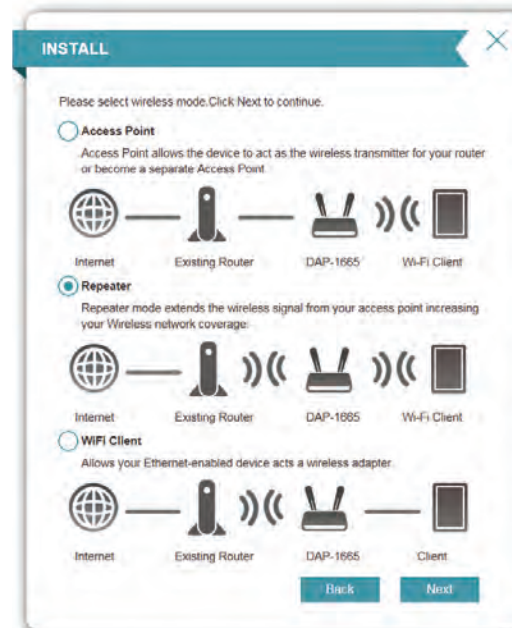


Press the WPS Push Button on your existing wireless router with 120 seconds to complete the WPS setup process. A **Retry** button will appear at the lower left if the time expired before you can press the button.

If your router does not support WPS, proceed to page 27.



If a connection has been successfully made, click **Next** on the following screen to complete the setup process.

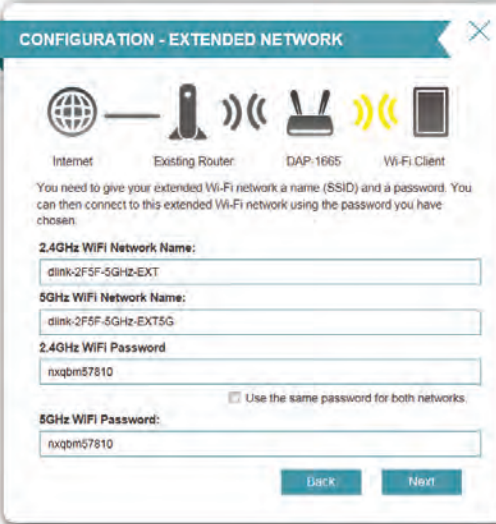

**CONFIGURATION - EXTENDED NETWORK**

Internet Existing Router DAP-1665 Wi-Fi Client

You need to give your extended Wi-Fi network a name (SSID) and a password. You can then connect to this extended Wi-Fi network using the password you have chosen.

**2.4GHz WiFi Network Name:**  
dlink-2F5F-5GHz-EXT

**5GHz WiFi Network Name:**  
dlink-2F5F-5GHz-EXT5G

**2.4GHz WiFi Password:**  
nxqbm57810


Use the same password for both networks.

**5GHz WiFi Password:**  
nxqbm57810

Back Next

Next, enter a password for your administrator account. This account is used to log into the DAP-1665 for managing your network.

Click **Next** to proceed.

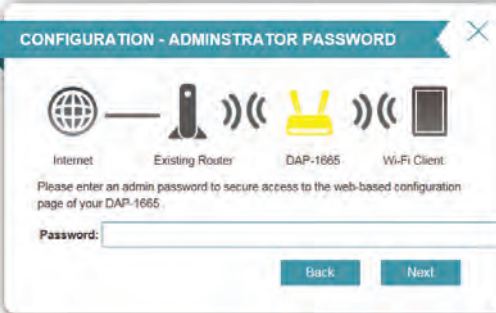

**CONFIGURATION - ADMINISTRATOR PASSWORD**

Internet Existing Router DAP-1665 Wi-Fi Client

Please enter an admin password to secure access to the web-based configuration page of your DAP-1665.

**Password:**

Back Next

A summary page will be displayed, showing the current settings for your 2.4 GHz and 5 GHz wireless networks. It is recommended that you make a note of this information for future reference.

Click **Finish** to save your network settings.


In order for your network settings to take effect, the DAP-1665 will reboot automatically.

When the device has finished rebooting the login page will display.




## If your router does not support WPS:

Select **Wi-Fi** to setup your network manually.

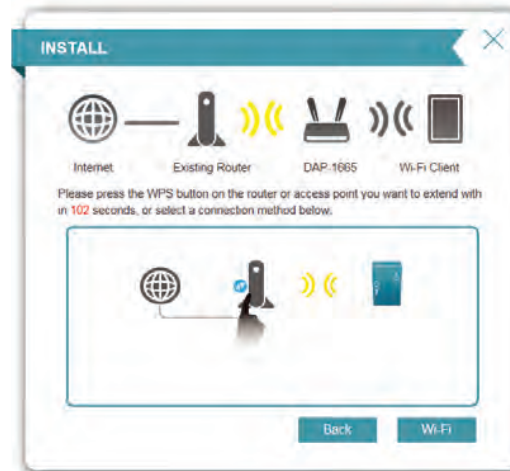

The wizard will then scan for available wireless networks within range of the DAP-1665. Click on the SSID of the router or access point you wish to extend.

If you do not see your network in the list, click  to search again.

If you still do not see your network, type in the SSID of your network manually, by clicking **Manual**.



If you click **Manual** on the previous page, type in the SSID of the network you wish to extend.

Click **Next** to continue.

If the existing wireless network uses wireless security, enter the Wi-Fi Password in the field provided.

Click **Next** to continue.

By default, the **Wireless Network Name (SSID)** field will display the same network name as the source network. If you wish to specify a different name for the extended network, enter it in the field provided. If you wish to use the same network name for both 2.4 and 5 GHz networks, check the box below.

The security password will be the same as that of the source network, regardless of whether the network name is the same or not.

Click **Next** to continue.

INSTALL: SELECT A WI-FI NETWORK TO EXTEND

Internet Existing Router DAP-1665 Wi-Fi Client

Please enter Wireless Network Name and Password of the existing Wi-Fi network

Wireless Network Name:

Password:

Back Next

INSTALL: SELECT A WI-FI NETWORK TO EXTEND

Internet Existing Router DAP-1665 Wi-Fi Client

Please enter the Wi-Fi password for your existing Wi-Fi network

Wireless Network Name:

dlink-2F5F-5GHz

Password:

Back Next

CONFIGURATION - EXTENDED NETWORK

Internet Existing Router DAP-1665 Wi-Fi Client

You need to give your extended Wi-Fi network a name (SSID) and a password. You can then connect to this extended Wi-Fi network using the password you have chosen.

2.4GHz WiFi Network Name:

dlink

5GHz WiFi Network Name:

dlink-5GHz

2.4GHz WiFi Password

Use the same password for both networks.


5GHz WiFi Password:

Back Next

## Section 3 - Configuration

Next, enter a password for your administrator account. This account is used to log into the DAP-1665 for managing your network.

Click **Next** to proceed.

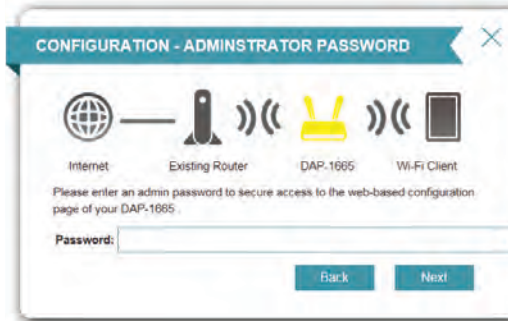

A summary page will be displayed showing the network name and Wi-Fi password for the extended network. It is recommended that you make a record of this information for future reference.

Click **Finish** to save the configuration.

In order for your network settings to take effect, the DAP-1665 will reboot automatically.


When the device has finished rebooting the login page will display.



## Wi-Fi Client Mode

This wizard is designed to assist you in configuring your DAP-1665 as a wireless client.

Select **WiFi Client** from the menu and click **Next**.

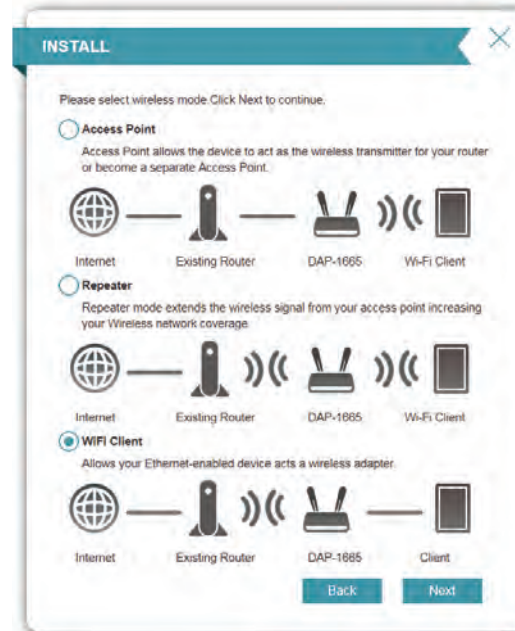

Press the WPS Push Button on your existing wireless router with 120 seconds to complete the WPS setup process. A **Retry** button will appear at the lower left if the time expired before you can press the button.

If your router does not support WPS, proceed to page 32.






## Section 3 - Configuration

Next, enter a password for your administrator account. This account is used to log into the DAP-1665 for managing your network.

Click **Next** to proceed.

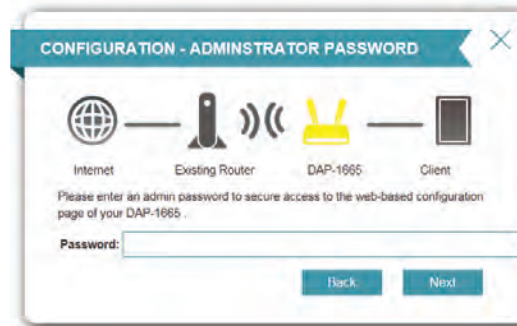


A summary page will be displayed showing the network name and Wi-Fi password for the extended network. It is recommended that you make a record of this information for future reference.

Click **Finish** to save the configuration.

In order for your network settings to take effect, the DAP-1665 will reboot automatically.

When the device has finished rebooting the login page will display.

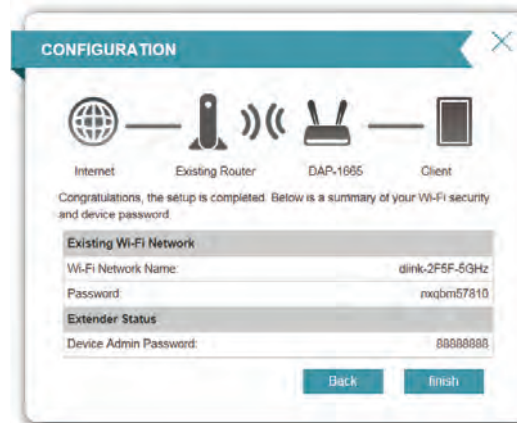

## If your router does not support WPS:

Click **Wi-Fi** to manually select your network.



The wizard will then scan for available wireless networks within range of the DAP-1665. Click on the SSID of the router or access point you wish to extend.

If you do not see your network in the list, click  to search again.

If you still do not see your network, type in the SSID of your network manually, by clicking **Manual**.



## Section 3 - Configuration

If you click **Manual** on the previous page, type in the SSID of the network you wish to extend.


Click **Next** to continue.

If the existing wireless network uses wireless security, enter the Wi-Fi Password in the field provided.

Click **Next** to continue.

Next, enter a password for your administrator account. This account is used to log into the DAP-1665 for managing your network.

Click **Next** to proceed.

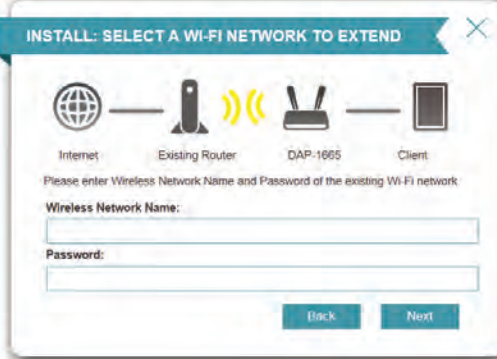

INSTALL: SELECT A WI-FI NETWORK TO EXTEND


Internet Existing Router DAP-1665 Client

Please enter Wireless Network Name and Password of the existing Wi-Fi network

Wireless Network Name:

Password:

Back Next

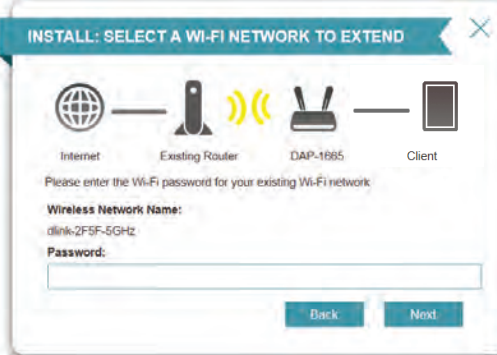

INSTALL: SELECT A WI-FI NETWORK TO EXTEND

Internet Existing Router DAP-1665 Client

Please enter the Wi-Fi password for your existing Wi-Fi network

Wireless Network Name:  
dlink-2FSF-5GHz

Password:

Back Next



CONFIGURATION - ADMINSTRATOR PASSWORD

Internet Existing Router DAP 1665 Client

Please enter an admin password to secure access to the web-based configuration page of your DAP-1665.

Password:


Back Next

A summary page will be displayed showing the network name and Wi-Fi password for the existing network. It is recommended that you make a record of this information for future reference.

Click **Finish** to save the configuration.

In order for your network settings to take effect, the DAP-1665 will reboot automatically.

When the device has finished rebooting the login page will display.

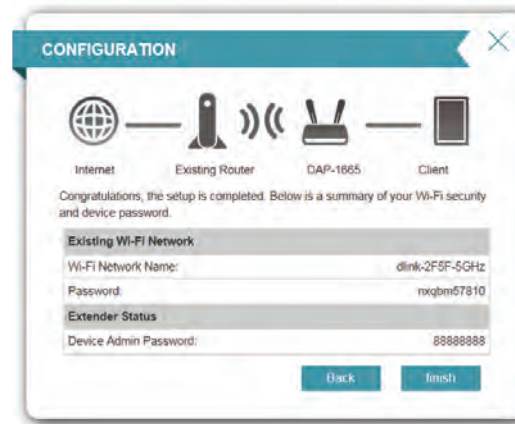

# Extender Settings

You may also manually configure your DAP-1665 instead of running the setup wizard. Please refer to the following pages for detailed instructions on how to manually configure the DAP-1665 for your desired operation mode.

- **Access Point Mode** on page 37
- **Wireless Client Mode** on page 48
- **Bridge Mode** on page 49
- **Bridge with AP Mode** on page 52
- **Repeater Mode** on page 46

## Access Point Mode

This section lets you configure your DAP-1665 as a wireless access point for your existing network.

### 2.4 GHz Band

**Wireless Mode:** Select **Access Point** from the drop-down menu.

**Status:** Enables the wireless function for the **2.4 GHz** band. If you do not want to use wireless on this band, disable the slider. You may also set up a specific time range (schedule).

**Wi-Fi Name (SSID):** Specify a network name (SSID) to identify the 2.4 GHz network. This is the network name that wireless clients will search for when connecting to your wireless network.

**Password:** Enter a password for connecting to your 2.4 GHz network.

#### Advanced Settings:

**Security Mode:** Select the type of wireless security you wish to use for the extended network. Choose from **WPA/WPA2-Personal/WPA/WPA2-Enterprise/None**.

**802.11 Mode:** Select one of the following:  
**802.11n Only** - Select if you are only using 802.11n wireless clients.  
**Mixed 802.11n and 802.11g** - Select if you are using a mix of 802.11n and 802.11g wireless clients.  
**Mixed 802.11n, 802.11g and 802.11b** - Select if you are using a mix of 802.11n, 802.11g, and 802.11b wireless clients.

**Wi-Fi Channel:** Choose from channels 1-11 for an existing wireless network or to reduce interference in congested areas. The **Auto** setting can be selected to allow the DAP-1665 to automatically choose the channel with the least amount of interference.

**Transmission Power:** Depending on your wireless reception and coverage area, you can choose between **Low, Medium, or High** power.

The screenshot shows the 'Extender' configuration page for a D-Link DAP-1665. The page is titled 'Extender' and includes a navigation bar with 'Home', 'Settings', and 'Management'. Below the title, there is a sub-header 'Settings >> Wireless' and a 'Save' button. The 'Existing Network' section shows 'Wireless Mode' set to 'Access Point'. The '2.4GHz Extended Wi-Fi' section has 'Status' set to 'Enabled', 'Wi-Fi Name (SSID)' set to 'dlink', and 'Password' set to '12345678'. The 'Advanced Settings' section includes 'Security Mode' (WPA/WPA2-Personal), '802.11 Mode' (Mixed 802.11b/g/n), 'Wi-Fi Channel' (Auto), 'Transmission Power' (High), 'Channel Width' (Auto 20/40 MHz), 'HT20/40 Coexistence' (Enabled), 'Visibility Status' (Visible), 'WFLAN' (None), and 'Schedule' (Always Enable). The '5GHz Extended Wi-Fi' section has 'Status' set to 'Enabled', 'Wi-Fi Name (SSID)' set to 'dlink-5GHz', and 'Password' set to an empty field. The 'Wi-Fi Protected Setup' section has 'WPS-PBC Status' set to 'Enabled' and 'WPS-PIN Status' set to 'Unlocked'. The 'User Limit' section has 'Status' set to 'Disabled' and 'Maximum User Client' set to an empty field. The footer of the page reads 'COPYRIGHT © 2015 D-Link'.


**Channel Width:** Select the Channel Width:  
**Auto 20/40** - Select if you are using both 802.11n and non-802.11n wireless devices.  
**20 MHz** - Select if you are not using any 802.11n wireless clients.

**HT20/40 Coexistence:** Enable or disable HT20/40 coexistence by toggling the slider. Enabling this feature helps with device compatibility depending on their 802.11 version.

**Visibility Status:** Select whether you would like the network name (SSID) of your wireless network to be **Visible** or **Invisible** to wireless clients. If **Invisible**, the SSID of the DAP-1665 will not be seen by site survey utilities, so wireless clients will have to manually enter the SSID of your wireless network in order to connect to it.

**WiFi VLAN:** If you have already defined VLAN IDs, you can choose if the clients accessing the 2.4 or 5 GHz band will be able to see other clients connected to that VLAN. The default setting is **None**.


**Schedule:** If you have added a rule under Management >> Schedule, click on the drop-down menu to choose whether the device will be **Always Enable** or choose from the name of your custom schedule. Click **Save** to store the setting and the device will reboot to activate the selected schedule.

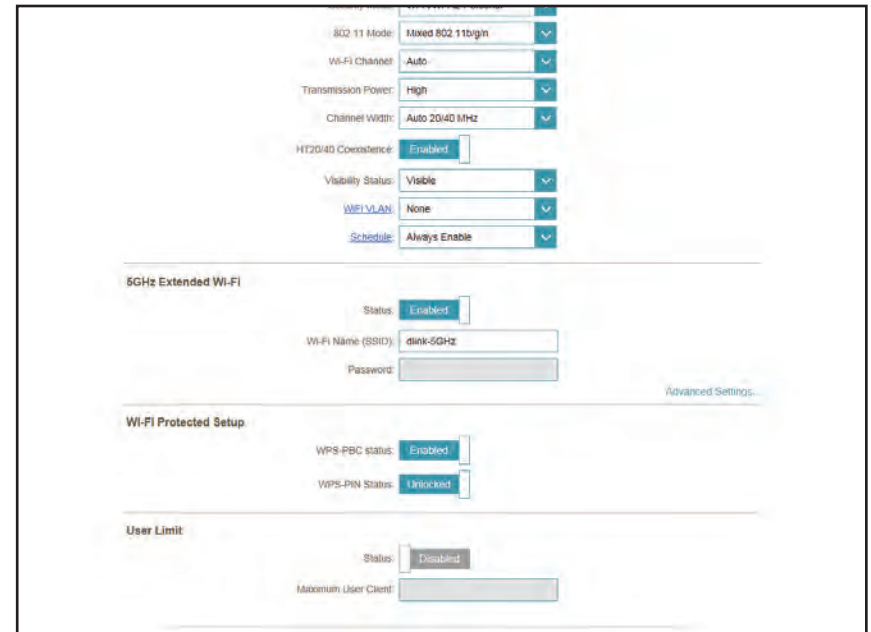

## 5 GHz Band

**Enable Wireless:** Check the box to enable the wireless function for the **5 GHz** band. If you do not want to use wireless, uncheck the box to disable all wireless functions. You may also set up a specific time range (schedule). Select a schedule from the drop-down menu or click **Add New** to create a new schedule. By default, the schedule is set to **Always**.

**Wireless Network Name:** Specify a network name (SSID) to identify the 5 GHz network. This is the network name that wireless clients will search for when connecting to your wireless network. This name should be different to that of the 2.4 GHz network configured above.

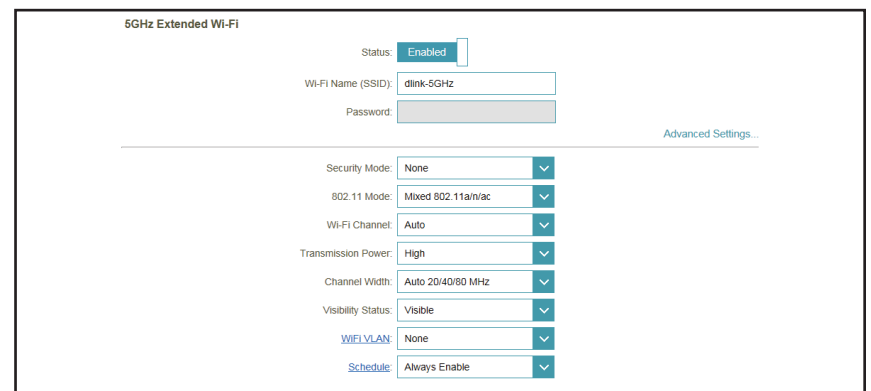

**802.11** Select one of the following:

**Mode:** **802.11a Only** - Select if you are only using 802.11a wireless clients.

**802.11n Only** - Select if you are only using 802.11n wireless clients.

**Mixed 802.11n and 802.11a** - Select if you are using a mix of 802.11n and 802.11a wireless clients.

**802.11ac Only** - Select if you are only using 802.11ac wireless clients.

**Mixed 802.11ac and 802.11n** - Select if you are using a mix of 802.11ac and 802.11n wireless clients.

**Mixed 802.11ac, 802.11n and 802.11a** - Select if you are using a mix of 802.11ac, 802.11n, and 802.11a wireless clients.

**Wireless Channel:** Indicates the channel setting for the DAP-1665. The channel can be changed to fit the channel setting for an existing wireless network or to reduce interference in congested areas. If you enable Auto Channel Scan, this option will not be available.

**Enable Auto Channel Scan:** The **Auto Channel Scan** setting can be selected to allow the DAP-1665 to automatically choose the channel with the least amount of interference.

**Channel Width:** Select the Channel Width:

**Auto 20/40/80** - Select this option if you are using a combination of 802.11ac, 802.11n, and other wireless devices.

**Auto 20/40** - Select if you are using both 802.11n and non-802.11n wireless devices.

**20 MHz** - Select if you are not using any 802.11n wireless clients.

**Visibility Status:** Select whether you would like the network name (SSID) of your wireless network to be **Visible** or **Invisible** to wireless clients. If **Invisible**, the SSID of the DAP-1665 will not be seen by site survey utilities, so wireless clients will have to manually enter the SSID of your wireless network in order to connect to it.

Click **Save Settings** at the top of the page to save the current configuration.



## Advanced Settings:

**Security Mode:** Select the type of wireless security you wish to use for the extended network. Choose from **WPA/WPA2-Personal/WPA/WPA2-Enterprise/None**.

**802.11 Mode:** Select one of the following:


- 802.11a Only** - Select if you are only using 802.11a wireless clients.
- 802.11n Only** - Select if you are only using 802.11n wireless clients.
- Mixed 802.11a/n** - Select if you are using a mix of 802.11n and 802.11a wireless clients.
- 802.11ac Only** - Select if you are only using 802.11ac wireless clients.
- Mixed 802.11n/ac** - Select if you are using a mix of 802.11ac and 802.11n wireless clients.
- Mixed 802.11a/n/ac** - Select if you are using a mix of 802.11ac, 802.11n, and 802.11a wireless clients.

**Wi-Fi Channel:** Choose from channels 1-11 for an existing wireless network or to reduce interference in congested areas. The **Auto** setting can be selected to allow the DAP-1665 to automatically choose the channel with the least amount of interference.

**Transmission Power:** Depending on your wireless reception and coverage area, you can choose between **Low, Medium, or High** power.

**Channel Width:** Select the Channel Width:  
**Auto 20/40** - Select if you are using both 802.11n and non-802.11n wireless devices.  
**20/40/80 MHz** - Select if you are not using any 802.11n wireless clients.

**Visibility Status:** Select whether you would like the network name (SSID) of your wireless network to be **Visible** or **Invisible** to wireless clients. If **Invisible**, the SSID of the DAP-1665 will not be seen by site survey utilities, so wireless clients will have to manually enter the SSID of your wireless network in order to connect to it.

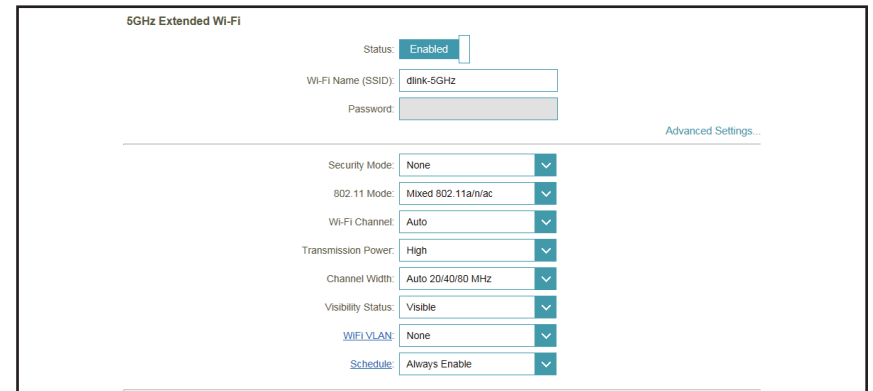

5GHz Extended Wi-Fi

Status:  Enabled

Wi-Fi Name (SSID):

Password:

[Advanced Settings...](#)

Security Mode:

802.11 Mode:

Wi-Fi Channel:

Transmission Power:

Channel Width:

Visibility Status:

WFI VLAN:


Schedule:

**WiFi VLAN:** If you have already defined VLAN IDs, you can choose if the clients accessing the 2.4 or 5 GHz band will be able to see other clients connected to that VLAN. The default setting is **None**.

**Schedule:** If you have added a rule under Management >> Schedule, click on the drop-down menu to choose whether the device will be **Always Enable** or choose from the name of your custom schedule. Click **Save** to store the setting and the device will reboot to activate the selected schedule.

**Wi-Fi Protected Setup:** **Enable** WPS-PBC status if you wish to allow push button connections to this device. **Unlocked** enables the use of the PIN method for Wi-Fi Protected Setup (WPS).

**User Limit:** **Enable** this function and enter a number in the Maximum User Client box to limit the amount of client connections to this device.


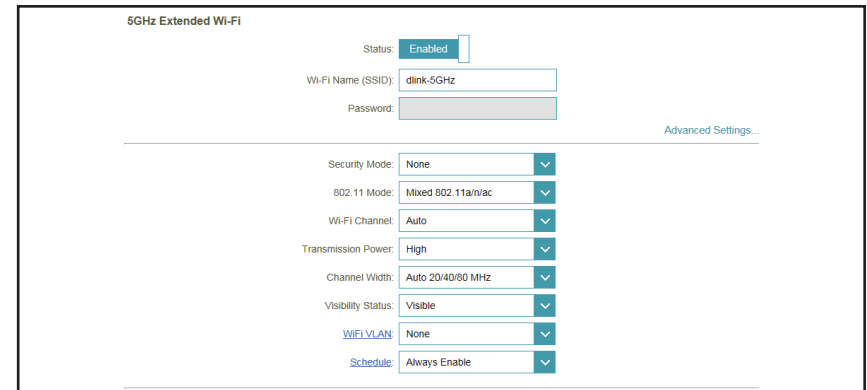


## VLAN

**Name:** Enter a name for this rule.

**VLAN ID:** Enter an ID number for this VLAN.

**Priority ID:** Choose between 0 to 7 priorities levels. The type of priority you wish to assign to this rule is described next to the number.

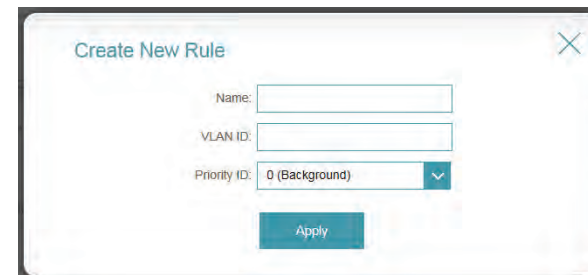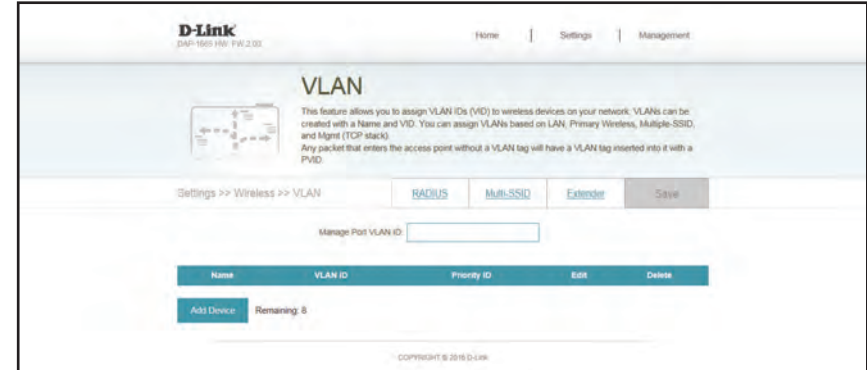



# RADIUS

**Name:** Enter a name for this rule.

**RADIUS Server Address:** Enter your RADIUS server's IP address.


**RADIUS Server Port:** Enter the port your RADIUS server connects for authentication. It is usually UDP port 1812.

**RADIUS Server Shared Secret:** Enter the shared secret for connecting to your RADIUS server via an encrypted password.

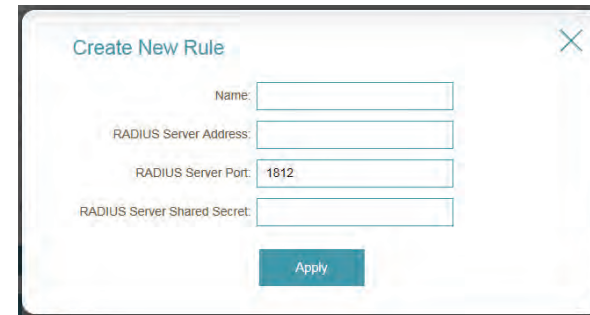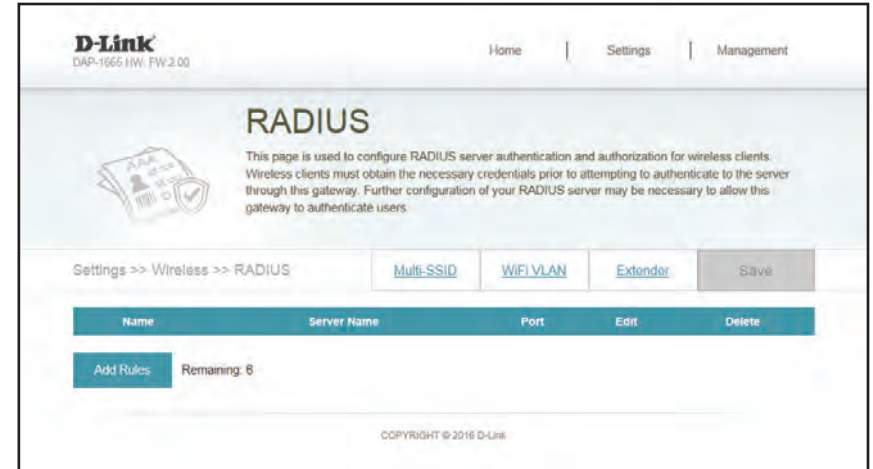

## Multi-SSID

- Internet Access Only:** Enable this to allow only access to the Internet when connected to these SSID networks.
- WiFi Name: (SSID)** Enter a name for this new network.
- Password:** Enter a password for this network.
- Frequency:** Select between **2.4** or **5 GHz**.
- Security Mode:** Select **WPA/WPA2-Personal**, **WPA/WPA2-Enterprise**, or **None**.
- Visibility Status:** Select **Visible** or **Invisible** to allow this SSID to be scanned or not.
- WiFi VLAN:** Select an existing WiFi VLAN to apply that rule to this network.
- Schedule:** Select an existing schedule to apply it to this network.

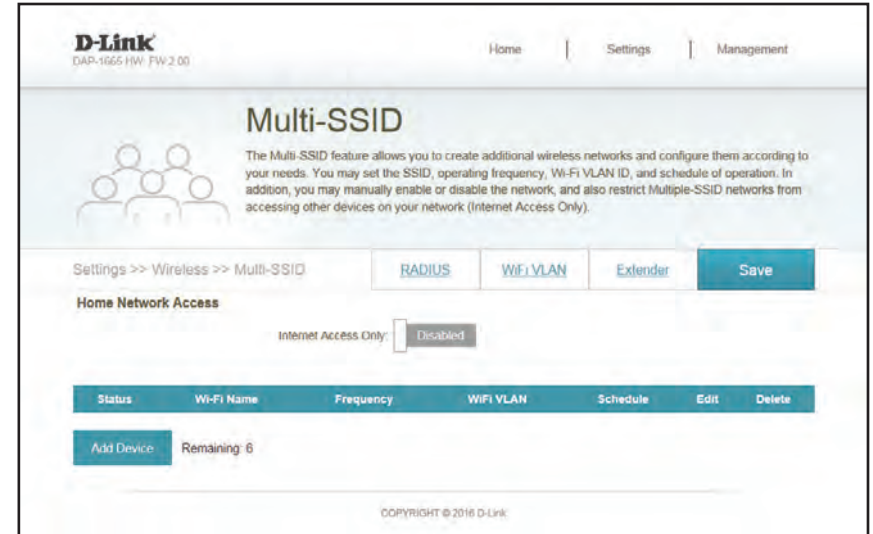

## Repeater Mode

Repeater mode re-broadcasts the wireless signal of an existing network to increase coverage. The existing wireless signal can be repeated by the DAP-1665 using both the 2.4 GHz and 5 GHz bands.

### Existing Network

**Wireless Mode:** Select **Repeater** from the drop-down menu.

**Wireless Network Name:** Click **Scan** to display a list of wireless networks in your area. In the pop-up, click on the SSID, and click **Select** at the bottom of the page to continue. The wireless network name will automatically appear in the Repeater Network Name field below, and the Repeater Network Band and Channel Width will automatically be detected. You can also manually enter the SSID of the access point you want to repeat the signal of.

**Password:** Enter a custom password for the existing network.

The screenshot shows the 'Extender' configuration page for a D-Link DAP-1665. The 'Existing Network' section is active, showing a 'Wireless Mode' dropdown set to 'Repeater'. Below it, the 'Wireless Network Name' field contains 'dlink-2F5F-5GHz' and the 'Password' field contains '12345678'. A 'Scan' button is located to the right of the network name field. A 'Save' button is located at the bottom right of the page.

### 2.4 GHz Extended Wi-Fi

**Status:** Displays the name of the network to be repeated.

**Wi-Fi Name (SSID):** Specify a network name (SSID) to identify the 2.4 GHz network. This is the network name that wireless clients will search for when connecting to your wireless network.

**Password:** Enter a password for connecting to your 2.4 GHz network.

The screenshot shows the '2.4GHz Extended Wi-Fi' configuration page. The 'Status' is set to 'Enabled'. The 'Wi-Fi Name (SSID)' field contains 'dlink' and the 'Password' field contains '12345678'. There is an 'Advanced Settings...' link to the right. Below these fields, several settings are listed with dropdown menus: 'Security Mode' is set to 'WPA/WPA2-Personal', '802.11 Mode' is set to 'Mixed 802.11b/g/n', 'Wi-Fi Channel' is set to 'Auto', 'Transmission Power' is set to 'High', 'Channel Width' is set to 'Auto 20/40 MHz', 'HT20/40 Coexistence' is set to 'Enabled', 'Visibility Status' is set to 'Visible', and 'Schedule' is set to 'Always Enable'.

## Advanced Settings:

**Security Mode:** Select the type of wireless security you wish to use for the extended network. Choose from **WPA/WPA2-Personal/WPA/WPA2-Enterprise/None**.

**802.11 Mode:** Select one of the following:  
**802.11n Only** - Select if you are only using 802.11n wireless clients.  
**Mixed 802.11n and 802.11g** - Select if you are using a mix of 802.11n and 802.11g wireless clients.  
**Mixed 802.11n, 802.11g and 802.11b** - Select if you are using a mix of 802.11n, 802.11g, and 802.11b wireless clients.

**Wi-Fi Channel:** Choose from channels 1-11 for an existing wireless network or to reduce interference in congested areas. The **Auto** setting can be selected to allow the DAP-1665 to automatically choose the channel with the least amount of interference.

**Transmission Power:** Depending on your wireless reception and coverage area, you can choose between **Low**, **Medium**, or **High** power.

**Channel Width:** Select the Channel Width:  
**Auto 20/40** - Select if you are using both 802.11n and non-802.11n wireless devices.  
**20 MHz** - Select if you are not using any 802.11n wireless clients.

**HT20/40 Coexistence:** Enable or disable HT20/40 coexistence by toggling the slider. Enabling this feature helps with device compatibility depending on their 802.11 version.

**Visibility Status:** Select whether you would like the network name (SSID) of your wireless network to be **Visible** or **Invisible** to wireless clients. If **Invisible**, the SSID of the DAP-1665 will not be seen by site survey utilities, so wireless clients will have to manually enter the SSID of your wireless network in order to connect to it.

**Schedule:** If you have added a rule under Management >> Schedule, click on the drop-down menu to choose whether the device will be **Always Enable** or choose from the name of your custom schedule. Click **Save** to store the setting and the device will reboot to activate the selected schedule.

2.4GHz Extended Wi-Fi

Status:  Enabled

Wi-Fi Name (SSID):

Password:

[Advanced Settings...](#)

Security Mode:

802.11 Mode:

Wi-Fi Channel:

Transmission Power:

Channel Width:

HT20/40 Coexistence:  Enabled


Visibility Status:

Schedule:

## 5 GHz Band

**Status:** Click to enable the wireless function for the **5 GHz** band. If you do not want to use wireless, uncheck the box to disable all wireless functions. You may also set up a specific time range (schedule). Select a schedule from the drop-down menu or click **Add New** to create a new schedule. By default, the schedule is set to **Always**.

**Wireless Network Name:** Specify a network name (SSID) to identify the 5 GHz network. This is the network name that wireless clients will search for when connecting to your wireless network. This name should be different to that of the 2.4 GHz network configured above.

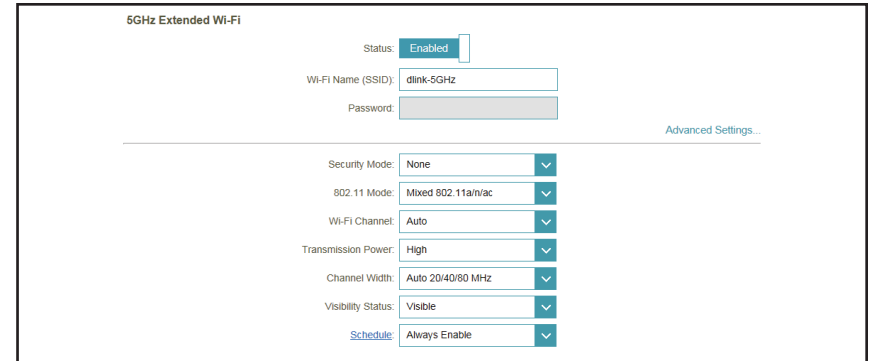

5GHz Extended Wi-Fi

Status:  Enabled

Wi-Fi Name (SSID):

Password:

[Advanced Settings...](#)

Security Mode:

802.11 Mode:

Wi-Fi Channel:

Transmission Power:

Channel Width:

Visibility Status:

Schedule:

### Advanced Settings:

**Security Mode:** Select the type of wireless security you wish to use for the extended network. Choose from **WPA/WPA2-Personal/WPA/WPA2-Enterprise/None**.

**802.11 Mode:** Select one of the following:

- 802.11a Only** - Select if you are only using 802.11a wireless clients.
- 802.11n Only** - Select if you are only using 802.11n wireless clients.
- Mixed 802.11a/n** - Select if you are using a mix of 802.11n and 802.11a wireless clients.
- 802.11ac Only** - Select if you are only using 802.11ac wireless clients.
- Mixed 802.11n/ac** - Select if you are using a mix of 802.11ac and 802.11n wireless clients.
- Mixed 802.11a/n/ac** - Select if you are using a mix of 802.11ac, 802.11n, and 802.11a wireless clients.

**Wi-Fi Channel:** Choose from channels 1-11 for an existing wireless network or to reduce interference in congested areas. The **Auto** setting can be selected to allow the DAP-1665 to automatically choose the channel with the least amount of interference.

**Transmission Power:** Depending on your wireless reception and coverage area, you can choose between **Low**, **Medium**, or **High** power.

**Channel Width:** Select the Channel Width:  
**Auto 20/40** - Select if you are using both 802.11n and non-802.11n wireless devices.  
**20/40/80 MHz** - Select if you are not using any 802.11n wireless clients.

**Visibility Status:** Select whether you would like the network name (SSID) of your wireless network to be **Visible** or **Invisible** to wireless clients. If **Invisible**, the SSID of the DAP-1665 will not be seen by site survey utilities, so wireless clients will have to manually enter the SSID of your wireless network in order to connect to it.

**Schedule:** If you have added a rule under Management >> Schedule, click on the drop-down menu to choose whether the device will be **Always Enable** or choose from the name of your custom schedule. Click **Save** to store the setting and the device will reboot to activate the selected schedule.

**Wi-Fi Protected Setup:** **Enable** WPS-PBC status if you wish to allow push button connections to this device.  
**Unlocked** enables the use of the PIN method for Wi-Fi Protected Setup (WPS).

**User Limit:** **Enable** this function and enter a number in the Maximum User Client box to limit the amount of client connections to this device.

The screenshot shows the configuration page for 5GHz Extended Wi-Fi. The page is divided into several sections:

- 5GHz Extended Wi-Fi:** This section contains a "Status" dropdown menu set to "Enabled". Below it are input fields for "WiFi Name (SSID)" with the value "dlink-5GHz" and a "Password" field. A link for "Advanced Settings" is visible on the right.
- Advanced Settings:** This section contains several dropdown menus: "Security Mode" (None), "802.11 Mode" (Mixed 802.11a/n/ac), "Wi-Fi Channel" (Auto), "Transmission Power" (High), "Channel Width" (Auto 20/40/80 MHz), "Visibility Status" (Visible), and "Schedule" (Always Enable).
- Wi-Fi Protected Setup:** This section contains two status dropdown menus: "WPS-PBC status" (Enabled) and "WPS-PIN Status" (Unlocked).
- User Limit:** This section contains a "Status" dropdown menu set to "Disabled" and a "Maximum User Client" input field.



## Wi-Fi Client

### Existing Network

**Wireless Mode:** Select **Wi-Fi Client** from the drop-down menu.

**Wireless Network Name:** Click **Scan** to display a list of wireless networks in your area. In the pop-up, click on the SSID, and click **Select** at the bottom of the page to continue. The wireless network name will automatically appear in the Wireless Network Name field below. You can also manually enter the SSID of the network you want to connect to.

**Password:** Enter the password for the existing network. You may need to ask the network administrator for this information.

#### Advanced Settings:

**Wireless MAC Clone:** Tick **Enable** to clone the MAC address of another device. Manually enter the MAC Address, or click on the drop-down box to search through the MAC addresses of connected devices.

The screenshot shows the D-Link Extender configuration interface. At the top, there is a navigation bar with 'Home', 'Settings', and 'Management' tabs. The main heading is 'Extender' with a sub-heading 'Use this section to configure the wireless settings for your D-Link Router. Please make sure that any changes made in this section will need to be updated on your wireless device.' Below this, there is a 'Settings >> Wireless' breadcrumb and a 'Save' button. The 'Existing Network' section contains a 'Wireless Mode' dropdown menu set to 'Wi-Fi Client', a 'Wireless Network Name' text field containing 'dlink-2F5F-5GHz' with a 'Scan' button to its right, and a 'Password' text field containing '12345678'. Below this is a 'WIFI MAC Clone' section with a 'WIFI MAC Clone' dropdown set to 'Disabled', a 'Mac Address' text field, and a '+ MAC Address' dropdown menu. At the bottom, the 'Wi-Fi Protected Setup' section shows 'WPS-PBC status' set to 'Enabled'.

### Wi-Fi Protected Setup

**WPS-PBC Status:** Check **Enable** if you wish to enable the use of the PIN method for Wi-Fi Protected Setup (WPS).

Click **Save Settings** to save the current configuration.

# Bridge

## Existing Network

**Wireless Mode:** Select **Bridge** from the drop-down menu.

### 2.4 GHz Bridge Wi-Fi

**Status:** Click to enable the wireless function for the **2.4 GHz** band. If you do not want to use wireless, uncheck the box to disable all wireless functions.

**Wi-Fi Name (SSID):** Specify a network name (SSID) to identify the 2.4 GHz network. This is the network name that wireless clients will search for when connecting to your wireless network.

**Password:** Enter a custom password for this network.

### Advanced Settings:

**802.11 Mode:** Select one of the following:  
**802.11n Only** - Select if you are only using 802.11n wireless clients.

**Mixed 802.11n and 802.11g** - Select if you are using a mix of 802.11n and 802.11g wireless clients.

**Mixed 802.11n, 802.11g and 802.11b** - Select if you are using a mix of 802.11n, 802.11g, and 802.11b wireless clients.

**Wi-Fi Channel:** Choose from channels 1-11 for an existing wireless network or to reduce interference in congested areas. The **Auto** setting can be selected to allow the DAP-1665 to automatically choose the channel with the least amount of interference.

**Channel Width:** Select the Channel Width:  
**Auto 20/40** - Select if you are using both 802.11n and non-802.11n wireless devices.  
**20 MHz** - Select if you are not using any 802.11n wireless clients.

The screenshot shows the D-Link DAP-1665 Web UI. The page title is "Extender". Below the title, there is a "Settings >> Wireless" breadcrumb and a "Save" button. The "Existing Network" section shows "Wireless Mode" set to "Bridge". The "2.4GHz Bridge Wi-Fi" section has "Status" set to "Enabled", "Wi-Fi Name (SSID)" set to "dlink", and "Password" set to an empty field. There is an "Advanced Settings" link. The "5GHz Bridge Wi-Fi" section has "Status" set to "Enabled", "Wi-Fi Name (SSID)" set to "dlink", and "Password" set to an empty field. There is also an "Advanced Settings" link. At the bottom, there are three dropdown menus: "802.11 Mode" set to "Mixed 802.11n/g", "Wi-Fi Channel" set to an empty field, and "Channel Width" set to "Auto 20/40/60 MHz". Below these is a table with columns: Status, Name, Frequency, Remote AP MAC Address, Edit, and Delete. The table contains one row: "Add Record", "Remaining: 8".

## 5 GHz Bridge Wi-Fi

**Status:** Click to enable the wireless function for the **5 GHz** band. If you do not want to use wireless, uncheck the box to disable all wireless functions.

**Wi-Fi Name (SSID):** Specify a network name (SSID) to identify the 5 GHz network. This is the network name that wireless clients will search for when connecting to your wireless network.

**Password:** Enter a custom password for this network.

### Advanced Settings:

**802.11 Mode:** Select one of the following:  
**802.11a Only** - Select if you are only using 802.11a wireless clients.  
**802.11n Only** - Select if you are only using 802.11n wireless clients.  
**Mixed 802.11a/n** - Select if you are using a mix of 802.11n and 802.11a wireless clients.  
**802.11ac Only** - Select if you are only using 802.11ac wireless clients.  
**Mixed 802.11n/ac** - Select if you are using a mix of 802.11ac and 802.11n wireless clients.  
**Mixed 802.11a/n/ac** - Select if you are using a mix of 802.11ac, 802.11n, and 802.11a wireless clients.

**Wi-Fi Channel:** Choose a channel from the drop-down list for an existing wireless network or to reduce interference in congested areas.

**Channel Width:** Select the Channel Width:  
**Auto 20/40** - Select this if you are using both 802.11n and non-802.11n wireless devices.  
**Auto 20/40/80 MHz** - Select this if you are not using any 802.11n wireless clients.

The screenshot shows the D-Link Extender configuration interface. At the top, there are navigation links for Home, Settings, and Management. The main heading is "Extender" with a sub-heading "Use this section to configure the wireless settings for your D-Link Router. Please make sure that any changes made in this section will need to be updated on your wireless device." Below this, there is a "Settings >> Wireless" breadcrumb and a "Save" button. The "Existing Network" section shows "Wireless Mode" set to "Bridge". The "2.4GHz Bridge Wi-Fi" section has "Status" set to "Enabled", "Wi-Fi Name (SSID)" set to "dlink", and a "Password" field. The "5GHz Bridge Wi-Fi" section also has "Status" set to "Enabled", "Wi-Fi Name (SSID)" set to "dlink", and a "Password" field. Below these are "Advanced Settings" links. The "802.11 Mode" is set to "Mixed 802.11a/n/ac", "Wi-Fi Channel" is set to "Auto", and "Channel Width" is set to "Auto 20/40/80 MHz". At the bottom, there is a table with columns for Status, Name, Frequency, Remote AP MAC Address, Edit, and Delete. An "Add Record" button is next to the table, and it shows "Remaining: 8".

## Section 3 - Configuration

At the bottom of the page, click **Add Record** to create a new record of the network you would like to bridge. A list of wireless networks will appear for you to select from.

If the desired network is not listed, click **Manual** and type in the **Name**, select the **Frequency** and type in the **Remote AP MAC Address**. Click **Apply** to save the record.

Status	Name	Frequency	Remote AP MAC Address	Edit	Delete
Add Record	Remaining: 8				

Create New Record

Please choose the Wi-Fi network you like to bridge.

Select Manual

Create New Record

Name:

Frequency: WIFI 2.4GHZ

Remote AP MAC Address:

Apply

## Bridge with AP Mode

### Existing Network

**Wireless Mode:** Select **Bridge with AP** from the drop-down menu.

### 2.4 GHz Bridge Wi-Fi

**Status:** Click to enable the wireless function for the **2.4 GHz** band. If you do not want to use wireless, uncheck the box to disable all wireless functions.

**Wi-Fi Name (SSID):** Specify a network name (SSID) to identify the 2.4 GHz network. This is the network name that wireless clients will search for when connecting to your wireless network.

**Password:** Enter a custom password for this network.

### Advanced Settings:

**802.11 Mode:** Select one of the following:  
**802.11n Only** - Select if you are only using 802.11n wireless clients.  
**Mixed 802.11n and 802.11g** - Select if you are using a mix of 802.11n and 802.11g wireless clients.  
**Mixed 802.11n, 802.11g and 802.11b** - Select if you are using a mix of 802.11n, 802.11g, and 802.11b wireless clients.

**Wi-Fi Channel:** Choose from channels 1-11 for an existing wireless network or to reduce interference in congested areas.

**Channel Width:** Select the Channel Width:  
**Auto 20/40** - Select if you are using both 802.11n and non-802.11n wireless devices.  
**20 MHz** - Select if you are not using any 802.11n wireless clients.

The screenshot shows the D-Link Extender configuration interface. At the top, it says 'D-Link DAP-1665 HW: FW:2.00' and has navigation links for 'Home', 'Settings', and 'Management'. The main heading is 'Extender' with a sub-note: 'Use this section to configure the wireless settings for your D-Link Router. Please make sure that any changes made in this section will need to be updated on your wireless device.' Below this, there are two tabs: 'RADIUS' and 'Save'. The 'Settings >> Wireless' breadcrumb is visible. The 'Existing Network' section has a 'Wireless Mode' dropdown set to 'Bridge with AP'. The '2.4GHz Bridge Wi-Fi' section has a 'Status' toggle set to 'Enabled', a 'Wi-Fi Name (SSID)' field with 'dlink', and a 'Password' field. An 'Advanced Settings...' link is present. The '5GHz Bridge Wi-Fi' section also has a 'Status' toggle set to 'Enabled', a 'Wi-Fi Name (SSID)' field with 'dlink', and a 'Password' field, with an 'Advanced Settings...' link. At the bottom, there are three dropdown menus: '802.11 Mode' set to 'Mixed 802.11n/n/ac', 'Wi-Fi Channel' (empty), and 'Channel Width' set to 'Auto 20/40/80 MHz'.

## 5 GHz Bridge Wi-Fi

**Status:** Click to enable the wireless function for the **5 GHz** band. If you do not want to use wireless, uncheck the box to disable all wireless functions.

**Wi-Fi Name (SSID):** Specify a network name (SSID) to identify the 5 GHz network. This is the network name that wireless clients will search for when connecting to your wireless network.

**Password:** Enter a custom password for this network.

### Advanced Settings:

**802.11 Mode:** Select one of the following:

- 802.11a Only** - Select if you are only using 802.11a wireless clients.
- 802.11n Only** - Select if you are only using 802.11n wireless clients.
- Mixed 802.11a/n** - Select if you are using a mix of 802.11n and 802.11a wireless clients.
- 802.11ac Only** - Select if you are only using 802.11ac wireless clients.
- Mixed 802.11n/ac** - Select if you are using a mix of 802.11ac and 802.11n wireless clients.
- Mixed 802.11a/n/ac** - Select if you are using a mix of 802.11ac, 802.11n, and 802.11a wireless clients.

**Wi-Fi Channel:** Choose a channel from the drop-down list for an existing wireless network or to reduce interference in congested areas.

**Channel Width:** Select the Channel Width:

- Auto 20/40** - Select this if you are using both 802.11n and non-802.11n wireless devices.
- Auto 20/40/80 MHz** - Select this if you are not using any 802.11n wireless clients.

5GHz Bridge Wi-Fi

Status:  Enabled

Wi-Fi Name (SSID):

Password:

[Advanced Settings...](#)

802.11 Mode:

Wi-Fi Channel:

Channel Width:

Status	Name	Frequency	Remote AP MAC Address	Edit	Delete
<input type="button" value="Add Record"/>	Remaining: 8				

## 2.4 GHz Extended Wi-Fi

**Status:** Click to enable the wireless function for the **2.4 GHz** band. If you do not want to use wireless, uncheck the box to disable all wireless functions.

**Wi-Fi Name (SSID):** Specify a network name (SSID) to identify the 2.4 GHz network. This is the network name that wireless clients will search for when connecting to your wireless network.

**Password:** Enter a custom password for this network.

### Advanced Settings:

**802.11 Mode:** Select one of the following:  
**802.11n Only** - Select if you are only using 802.11n wireless clients.  
**Mixed 802.11n and 802.11g** - Select if you are using a mix of 802.11n and 802.11g wireless clients.  
**Mixed 802.11n, 802.11g and 802.11b** - Select if you are using a mix of 802.11n, 802.11g, and 802.11b wireless clients.

**Wi-Fi Channel:** Choose from channels 1-11 for an existing wireless network or to reduce interference in congested areas.

**Transmission Power:** Depending on your wireless reception and coverage area, you can choose between **Low**, **Medium**, or **High** power.

**Channel Width:** Select the Channel Width:  
**Auto 20/40** - Select if you are using both 802.11n and non-802.11n wireless devices.  
**20 MHz** - Select if you are not using any 802.11n wireless clients.

**HT20/40 Coexistence:** Enable or disable HT20/40 coexistence by toggling the slider. Enabling this feature helps with device compatibility depending on their 802.11 version.

**Visibility Status:** Select whether you would like the network name (SSID) of your wireless network to be **Visible** or **Invisible** to wireless clients. If **Invisible**, the SSID of the DAP-1665 will not be seen by site survey utilities, so wireless clients will have to manually enter the SSID of your wireless network in order to connect to it.

The screenshot displays the configuration page for the 2.4 GHz Extended Wi-Fi network. At the top, there is a table with columns for Status, Name, Frequency, Remote AP MAC Address, Edit, and Delete. Below the table, there is an 'Add Record' button and a 'Remaining: 8' indicator. The main configuration area is titled '2.4GHz Extended Wi-Fi' and includes the following settings:

- Status:** Enabled (checkbox)
- Wi-Fi Name (SSID):** dlink
- Password:** 12345678
- Advanced Settings:**
  - Security Mode:** WPA/WPA2-Personal
  - 802.11 Mode:** Mixed 802.11b/g/n
  - Wi-Fi Channel:** 1
  - Transmission Power:** High
  - Channel Width:** Auto 20/40 MHz
  - HT20/40 Coexistence:** Enabled (checkbox)
  - Visibility Status:** Visible
  - Schedule:** Always Enable

Below the 2.4GHz settings, there is a section for '5GHz Extended Wi-Fi' with the following settings:

- Status:** Enabled (checkbox)
- Wi-Fi Name (SSID):** dlink-5GHz
- Password:** (empty field)
- Advanced Settings:** (link)

Further down, there is a 'Wi-Fi Protected Setup' section with the following settings:

- WPS-PBC status:** Enabled (checkbox)
- WPS-PIN status:** Unlocked (checkbox)

At the bottom, there is a 'User Limit' section with the following settings:

- Status:** Disabled (checkbox)
- Maximum User Client:** (empty field)

**Schedule:** If you have added a rule under Management >> Schedule, click on the drop-down menu to choose whether the device will be **Always Enable** or choose from the name of your custom schedule. Click **Save** to store the setting and the device will reboot to activate the selected schedule.

## 5 GHz Extended Wi-Fi

**Status:** Click to enable the wireless function for the **5 GHz** band. If you do not want to use wireless, uncheck the box to disable all wireless functions.

**Wi-Fi Name (SSID):** Specify a network name (SSID) to identify the 5 GHz network. This is the network name that wireless clients will search for when connecting to your wireless network.

**Password:** Enter a custom password for this network.

### Advanced Settings:

**Security Mode:** Select the type of wireless security you wish to use for the extended network. Choose from **WPA/WPA2-Personal/WPA/WPA2-Enterprise/None**.

**802.11 Mode:** Select one of the following:  
**802.11a Only** - Select if you are only using 802.11a wireless clients.  
**802.11n Only** - Select if you are only using 802.11n wireless clients.  
**Mixed 802.11a/n** - Select if you are using a mix of 802.11n and 802.11a wireless clients.  
**802.11ac Only** - Select if you are only using 802.11ac wireless clients.  
**Mixed 802.11n/ac** - Select if you are using a mix of 802.11ac and 802.11n wireless clients.  
**Mixed 802.11a/n/ac** - Select if you are using a mix of 802.11ac, 802.11n, and 802.11a wireless clients.

**Wi-Fi Channel:** Choose a channel from the drop-down menu for an existing wireless network or to reduce interference in congested areas.

**Transmission Power:** Depending on your wireless reception and coverage area, you can choose between **Low, Medium, or High** power.

The screenshot displays the configuration page for the D-Link DAP-1665. At the top, there is a table with columns for Status, Name, Frequency, Remote AP MAC Address, Edit, and Delete. Below this, there is an 'Add Record' button and a 'Remaining: 0' indicator. The page is divided into two main sections: '2.4GHz Extended Wi-Fi' and '5GHz Extended Wi-Fi'. Each section has a 'Status' dropdown menu set to 'Enabled', a 'Wi-Fi Name (SSID)' text input field, and a 'Password' text input field. Below these are 'Advanced Settings' links. The '5GHz Extended Wi-Fi' section includes a 'Security Mode' dropdown set to 'None', an '802.11 Mode' dropdown set to 'Mixed 802.11a/n/ac', a 'Wi-Fi Channel' dropdown, a 'Transmission Power' dropdown set to 'High', a 'Channel Width' dropdown set to 'Auto 20/40/80 MHz', a 'Visibility Status' dropdown set to 'Visible', and a 'Schedule' dropdown set to 'Always Enable'. At the bottom, there is a 'Wi-Fi Protected Setup' section with 'WPS-PBC status' set to 'Enabled' and 'WPS-PIN Status' set to 'Unlocked', and a 'User Limit' section with 'Status' set to 'Disabled' and a 'Maximum User Client' text input field.



**Channel Width:** Select the Channel Width:  
**Auto 20/40** - Select if you are using both 802.11n and non-802.11n wireless devices.  
**20/40/80 MHz** - Select if you are not using any 802.11n wireless clients.

**Visibility Status:** Select whether you would like the network name (SSID) of your wireless network to be **Visible** or **Invisible** to wireless clients. If **Invisible**, the SSID of the DAP-1665 will not be seen by site survey utilities, so wireless clients will have to manually enter the SSID of your wireless network in order to connect to it.

**Schedule:** If you have added a rule under Management >> Schedule, click on the drop-down menu to choose whether the device will be **Always Enable** or choose from the name of your custom schedule. Click **Save** to store the setting and the device will reboot to activate the selected schedule.

**Wi-Fi Protected Setup:** **Enable** WPS-PBC status if you wish to allow push button connections to this device.  
**Unlocked** enables the use of the PIN method for Wi-Fi Protected Setup (WPS).

**User Limit:** **Enable** this function and enter a number in the Maximum User Client box to limit the amount of client connections to this device.

The screenshot displays the configuration page for the D-Link DAP-1665, showing various Wi-Fi settings. At the top, there is a table with columns: Status, Name, Frequency, Remote AP MAC Address, Edit, and Delete. Below the table, there is an 'Add Record' button and a 'Remaining: 0' indicator. The main settings are organized into sections:


- 2.4GHz Extended Wi-Fi:** Status is 'Enabled'. Wi-Fi Name (SSID) is 'dlink'. Password is '12345678'. There is an 'Advanced Settings' link.
- 5GHz Extended Wi-Fi:** Status is 'Enabled'. Wi-Fi Name (SSID) is 'dlink-5GHz'. Password is empty. There is an 'Advanced Settings' link.
- General Settings:** Security Mode: None; 802.11 Mode: Mixed 802.11a/n/ac; Wi-Fi Channel: (empty); Transmission Power: High; Channel Width: Auto 20/40/80 MHz; Visibility Status: Visible; Schedule: Always Enable.
- Wi-Fi Protected Setup:** WPS-PBC Status: Enabled; WPS-PIN Status: Unlocked.
- User Limit:** Status: Disabled; Maximum User Client: (empty).

## WISP Client

**Wireless Mode:** Select **WISP Client** from the drop-down menu.

**Wireless Network Name:** Click **Scan** to display a list of wireless networks in your area. In the pop-up, click on the SSID, and click **Select** at the bottom of the page to continue. The wireless network name will automatically appear in the Wireless Network Name field below. You can also manually enter the SSID of the network you want to connect to.

**Password:** Enter the password for the selected network. You may need to ask the network administrator for this information.

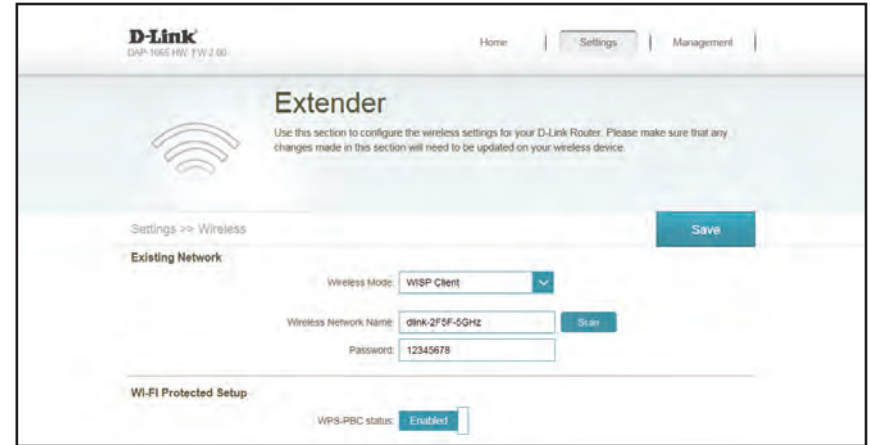


## WISP Repeater

**Wireless Mode:** Select **WISP Repeater** from the drop-down menu.

**Wireless Network Name:** Click **Scan** to display a list of wireless networks in your area. In the pop-up, click on the SSID, and click **Select** at the bottom of the page to continue. The wireless network name will automatically appear in the Wireless Network Name field below. You can also manually enter the SSID of the network you want to connect to.

**Password:** Enter the password for the selected network. You may need to ask the network administrator for this information.

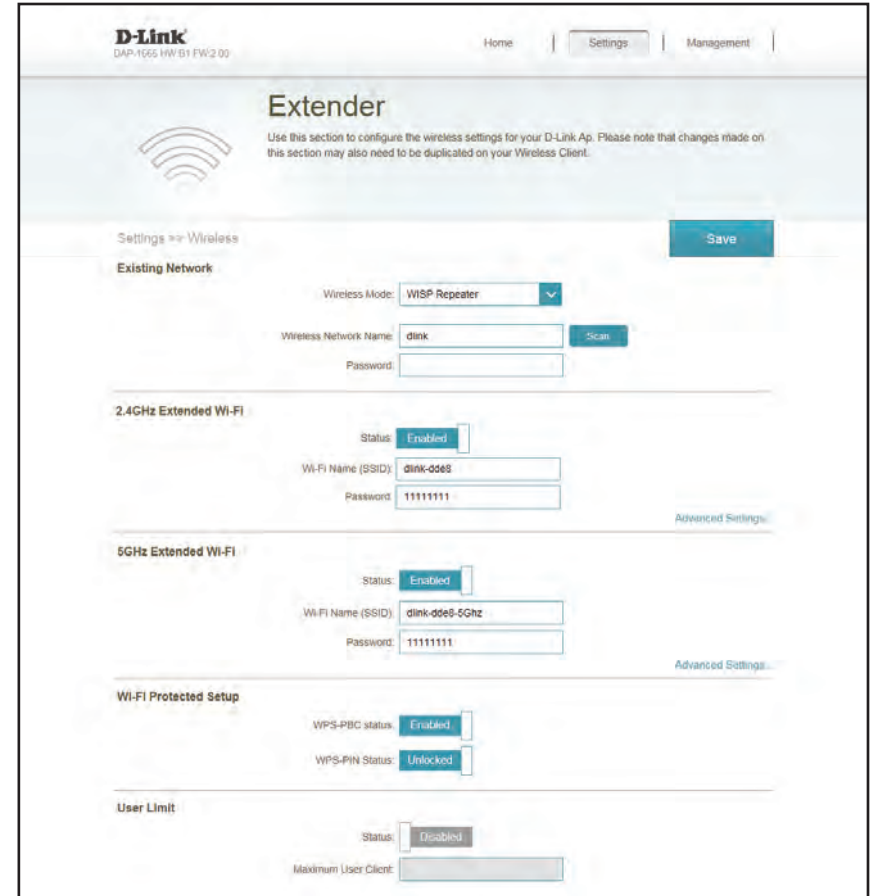

The screenshot displays the 'Extender' configuration page for a D-Link DAP-1665 HW B1 FW2.00. The page is titled 'Extender' and includes a 'Save' button. The 'Existing Network' section shows 'Wireless Mode' set to 'WISP Repeater', 'Wireless Network Name' as 'dlink', and a 'Scan' button. Below this, the '2.4GHz Extended Wi-Fi' section has 'Status' set to 'Enabled', 'Wi-Fi Name (SSID)' as 'dlink-0de8', and 'Password' as '11111111'. The '5GHz Extended Wi-Fi' section also has 'Status' set to 'Enabled', 'Wi-Fi Name (SSID)' as 'dlink-0de8-5Ghz', and 'Password' as '11111111'. The 'Wi-Fi Protected Setup' section shows 'WPS-PBC status' as 'Enabled' and 'WPS-PIN Status' as 'Unlocked'. The 'User Limit' section has 'Status' set to 'Disabled' and a 'Maximum User Client' field.

## 2.4 GHz Extended Wi-Fi

**Status:** Click to enable the wireless function for the **2.4 GHz** band. If you do not want to use wireless, uncheck the box to disable all wireless functions.

**Wi-Fi Name (SSID):** Specify a network name (SSID) to identify the extended 2.4 GHz network. This is the network name that wireless clients will search for when connecting to your wireless network.

**Password:** Enter a custom password for this network.

### Advanced Settings:

**802.11 Mode:** Select one of the following:  
**802.11n Only** - Select if you are only using 802.11n wireless clients.  
**Mixed 802.11n and 802.11g** - Select if you are using a mix of 802.11n and 802.11g wireless clients.  
**Mixed 802.11n, 802.11g and 802.11b** - Select if you are using a mix of 802.11n, 802.11g, and 802.11b wireless clients.

**Wi-Fi Channel:** This is set on **Auto** for best performance when using WISP.

**Transmission Power:** Depending on your wireless reception and coverage area, you can choose between **Low**, **Medium**, or **High** power.

**Channel Width:** Select the Channel Width:  
**Auto 20/40** - Select if you are using both 802.11n and non-802.11n wireless devices.  
**20 MHz** - Select if you are not using any 802.11n wireless clients.

**HT20/40 Coexistence:** Enable or disable HT20/40 coexistence by toggling the slider. Enabling this feature helps with device compatibility depending on their 802.11 version.

**Visibility Status:** Select whether you would like the network name (SSID) of your wireless network to be **Visible** or **Invisible** to wireless clients. If **Invisible**, the SSID of the DAP-1665 will not be seen by site survey utilities, so wireless clients will have to manually enter the SSID of your wireless network in order to connect to it.

2.4GHz Extended Wi-Fi

Status:  Enabled

Wi-Fi Name (SSID):

Password:

[Advanced Settings...](#)

---

Security Mode:

802.11 Mode:

Wi-Fi Channel:

Transmission Power:

Channel Width:

HT20/40 Coexistence:  Enabled

Visibility Status:

[Schedule:](#)

**Schedule:** If you have added a rule under Management >> Schedule, click on the drop-down menu to choose whether the device will be **Always Enable** or choose from the name of your custom schedule. Click **Save** to store the setting and the device will reboot to activate the selected schedule.

## 5 GHz Extended Wi-Fi

**Status:** Click to enable the wireless function for the **5 GHz** band. If you do not want to use wireless, uncheck the box to disable all wireless functions.

**Wi-Fi Name (SSID):** Specify a network name (SSID) to identify the 5 GHz network. This is the network name that wireless clients will search for when connecting to your wireless network.

**Password:** Enter a custom password for this network.

### Advanced Settings:

**Security Mode:** Select the type of wireless security you wish to use for the extended network. Choose from **WPA/WPA2-Personal/WPA/WPA2-Enterprise/None**.

- 802.11 Mode:** Select one of the following:
- 802.11a Only** - Select if you are only using 802.11a wireless clients.
  - 802.11n Only** - Select if you are only using 802.11n wireless clients.
  - Mixed 802.11a/n** - Select if you are using a mix of 802.11n and 802.11a wireless clients.
  - 802.11ac Only** - Select if you are only using 802.11ac wireless clients.
  - Mixed 802.11n/ac** - Select if you are using a mix of 802.11ac and 802.11n wireless clients.
  - Mixed 802.11a/n/ac** - Select if you are using a mix of 802.11ac, 802.11n, and 802.11a wireless clients.

**Wi-Fi Channel:** Choose a channel from the drop-down menu for an existing wireless network or to reduce interference in congested areas.

**Transmission Power:** Depending on your wireless reception and coverage area, you can choose between **Low**, **Medium**, or **High** power.

**Channel Width:** Select the Channel Width:  
**Auto 20/40** - Select if you are using both 802.11n and non-802.11n wireless devices.  
**20/40/80 MHz** - Select if you are not using any 802.11n wireless clients.

**Visibility Status:** Select whether you would like the network name (SSID) of your wireless network to be **Visible** or **Invisible** to wireless clients. If **Invisible**, the SSID of the DAP-1665 will not be seen by site survey utilities, so wireless clients will have to manually enter the SSID of your wireless network in order to connect to it.

**Schedule:** If you have added a rule under Management >> Schedule, click on the drop-down menu to choose whether the device will be **Always Enable** or choose from the name of your custom schedule. Click **Save** to store the setting and the device will reboot to activate the selected schedule.

**Wi-Fi Protected Setup:** **Enable** WPS-PBC status if you wish to allow push button connections to this device.  
**Unlocked** enables the use of the PIN method for Wi-Fi Protected Setup (WPS).


**User Limit:** **Enable** this function and enter a number in the Maximum User Client box to limit the amount of client connections to this device.

The screenshot shows the configuration page for 5GHz Extended Wi-Fi. The page is titled "5GHz Extended Wi-Fi" and contains several sections:

- Status:** A toggle switch set to "Enabled".
- Wi-Fi Name (SSID):** A text input field containing "dlink-5GHz".
- Password:** A text input field.
- Advanced Settings...:** A link to expand the settings.
- Security Mode:** A dropdown menu set to "None".
- 802.11 Mode:** A dropdown menu set to "Mixed 802.11a/n/ac".
- Wi-Fi Channel:** A dropdown menu set to "Auto".
- Transmission Power:** A dropdown menu set to "High".
- Channel Width:** A dropdown menu set to "Auto 20/40/80 MHz".
- Visibility Status:** A dropdown menu set to "Visible".
- Schedule:** A dropdown menu set to "Always Enable".
- Wi-Fi Protected Setup:**
  - WPS-PBC status:** A toggle switch set to "Enabled".
  - WPS-PIN Status:** A toggle switch set to "Unlocked".
- User Limit:**
  - Status:** A toggle switch set to "Disabled".
  - Maximum User Client:** A text input field.

# Network Settings

This page lets you configure the network settings for the DAP-1665. To access this page, click the **Settings** at the top of the page, then select **Network**. Click **Save** at any time to save the changes you have made on this page.

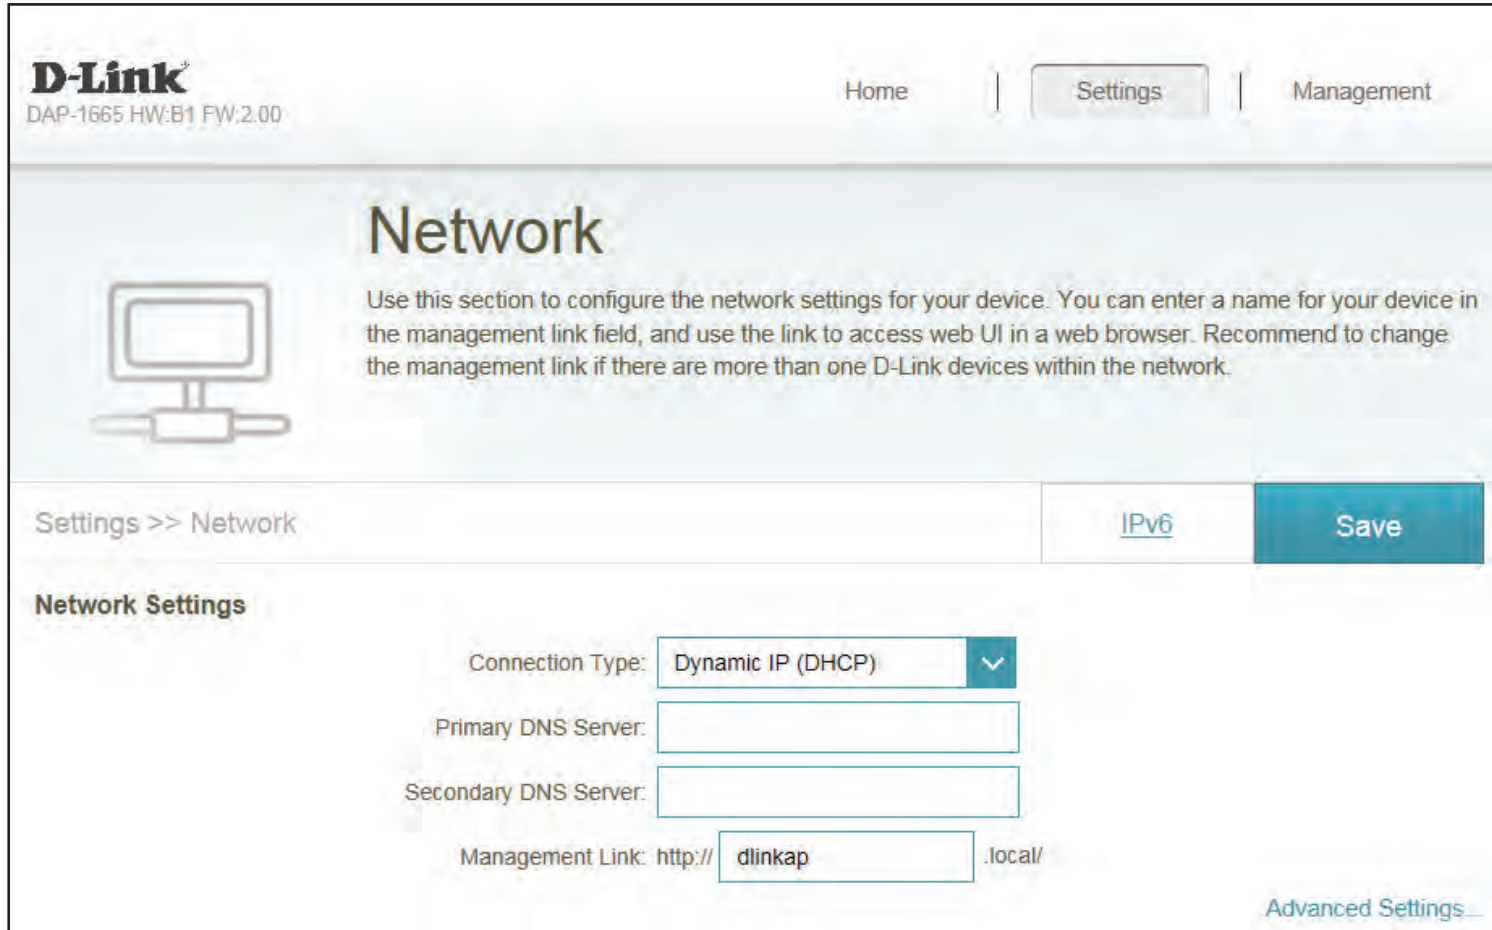

**D-Link**  
DAP-1665 HW:B1 FW:2.00

Home | Settings | Management

## Network

Use this section to configure the network settings for your device. You can enter a name for your device in the management link field, and use the link to access web UI in a web browser. Recommend to change the management link if there are more than one D-Link devices within the network.

Settings >> Network [IPv6](#) **Save**

### Network Settings

Connection Type:  ▾

Primary DNS Server:

Secondary DNS Server:

Management Link: http://  .local/

[Advanced Settings](#)

# IPv4 Static IP

**Connection Type:** Select **Static IP** to manually assign an IP address to the DAP-1665.

**LAN IP Address:** Enter the IPv4 address that you want to assign to the network AP. This address should be outside of the uplink router's DHCP address pool.

**Subnet Mask:** Enter the subnet mask.

**Gateway Address:** Enter the gateway address. This is usually the IP address of the uplink router.

**Primary DNS Server:** Enter the address of the primary DNS server.

**Secondary DNS Server:** Enter the address of the secondary DNS server. This is optional but will provide backup if the primary server fails.

**Management Link:** Enter a custom URL link to access this management interface.

The screenshot shows the D-Link DAP-1665 web interface. The top navigation bar includes 'Home', 'Settings', and 'Management'. The main heading is 'Network'. Below the heading is a brief instruction: 'Use this section to configure the network settings for your device. You can enter a name for your device in the management link field, and use the link to access web UI in a web browser. Recommend to change the management link if there are more than one D-Link devices within the network.' The 'Settings >> Network' breadcrumb is visible, along with 'IPv6' and 'Save' buttons. The 'Network Settings' section contains the following fields:

- Connection Type: Static IP (dropdown menu)
- LAN IP Address: 192.168.0.50
- Subnet Mask: 255.255.255.0
- Gateway Address: (empty)
- Primary DNS Server: (empty)
- Secondary DNS Server: (empty)
- Management Link: http:// dlinkap .local/

Below the Network Settings is the 'DHCP Server' section with the following options:

- Status: Enabled
- DHCP IP Address Range: 192.168.0. 100 to 192.168.0. 199
- DHCP Lease Time: 10080 minutes
- Always Broadcast: Enabled (compatibility for some DHCP Clients)

The 'Advanced Settings' section at the bottom includes:

- UPnP: Enabled
- IPv4 Multicast Streams: Enabled
- IPv6 Multicast Streams: Enabled



## Advanced Settings:

**Status:** Click to enable the DHCP server function.

**DHCP IP Address Range:** Enter the range of the DHCP address pool from which requesting clients can be assigned addresses. You should ensure that the access point's static IP address is outside of this range in order to avoid any IP address conflicts.

**DHCP Lease Time:** Enter the length of time IP addresses assigned by the server will be valid for.

**Always Broadcast:** Check the box to have the DHCP server always broadcast its response to clients. This can help to avoid problems when clients fail to obtain an IP address from the DHCP server.

**UPnP:** Enable this to allow universal Plug and Play functionality.

**IPv4/IPv6 Multicast Streams:** Enable each on to allow multicasting to clients on IPv4/IPv6 networks.

The screenshot shows the DHCP Server configuration page. At the top right, there is a link for "Advanced Settings...". The main section is titled "DHCP Server" and contains the following settings:

- Status: Enabled (checkbox checked)
- DHCP IP Address Range: 192.168.0.100 to 192.168.0.199
- DHCP Lease Time: 10080 minutes
- Always Broadcast: Enabled (checkbox checked) (compatibility for some DHCP Clients)

Below this is the "Advanced Settings" section with the following options:

- UPnP: Enabled (checkbox checked)
- IPv4 Multicast Streams: Enabled (checkbox checked)
- IPv6 Multicast Streams: Enabled (checkbox checked)

## Dynamic IP (DHCP)

**Connection Type:** Select **Dynamic IP** to automatically assign an IP address to the DAP-1665.

**Primary DNS Server:** Enter the address of the primary DNS server.

**Secondary DNS Server:** Enter the address of the secondary DNS server. This is optional but will provide backup if the primary server fails.

**Management Link:** Enter a custom URL link to access this management interface.

### Advanced Settings:

**Status:** Click to enable the DHCP server function.

**DHCP IP Address Range:** Enter the range of the DHCP address pool from which requesting clients can be assigned addresses. You should ensure that the access point's static IP address is outside of this range in order to avoid any IP address conflicts.

**DHCP Lease Time:** Enter the length of time IP addresses assigned by the server will be valid for.

**Always Broadcast:** Check the box to have the DHCP server always broadcast its response to clients. This can help to avoid problems when clients fail to obtain an IP address from the DHCP server.

**UPnP:** Enable this to allow universal Plug and Play functionality.

**IPv4/IPv6 Multicast Streams:** Enable each on to allow multicasting to clients on IPv4/IPv6 networks.

The screenshot shows the D-Link DAP-1665 web interface. The top navigation bar includes 'Home', 'Settings', and 'Management'. The main heading is 'Network'. Below the heading is a brief instruction: 'Use this section to configure the network settings for your device. You can enter a name for your device in the management link field, and use the link to access web UI in a web browser. Recommend to change the management link if there are more than one D-Link devices within the network.'

The 'Network Settings' section is active, showing the following configuration:

- Connection Type: Dynamic IP (DHCP)
- Primary DNS Server: (empty field)
- Secondary DNS Server: (empty field)
- Management Link: http://dlinkap.local/

The 'DHCP Server' section is also visible, with the following settings:

- Status: Enabled
- DHCP IP Address Range: 192.168.0.100 to 192.168.0.199
- DHCP Lease Time: 10080 minutes
- Always Broadcast: Enabled (compatibility for some DHCP Clients)

The 'Advanced Settings' section shows:

- UPnP: Enabled
- IPv4 Multicast Streams: Enabled
- IPv6 Multicast Streams: Enabled

At the bottom right, there is a 'Save' button and a copyright notice: 'COPYRIGHT © 2016 D-Link'.

# IPv6

## Autoconfiguration (SLAAC/DHCPv6)

**My Internet Connection is:** Select **Autoconfiguration (SLAAC/DHCPv6)** to have the DAP-1665 automatically receive an IPv6 address from the uplink router.

**DNS Type:** You can select to obtain IPv6 DNS server information automatically, or you can select to configure DNS servers manually and fill in the boxes accordingly.

**Primary DNS Server:** For manual settings, enter the primary IPv6 DNS server address.

**Secondary DNS Server:** For manual settings, enter the secondary IPv6 DNS server address. This is optional but will provide backup if the primary server fails.



## Static IPv6

**My Internet Connection is:** Select **Static IPv6** to manually assign an IP address to the DAP-1665.

**IPv6 Address:** Enter the IPv6 address that you want to assign to the extended network AP. This address should be outside of the uplink router's DHCP address pool.

**Subnet Prefix Length:** Enter the length of the IPv6 subnet prefix.

**Default Gateway:** Enter the default gateway.

**Primary DNS Server:** Enter the primary IPv6 DNS server address.

**Secondary DNS Server:** Enter the secondary IPv6 DNS server address. This is optional but will provide backup if the primary server fails.

The screenshot shows the D-Link IPv6 configuration interface. At the top, the D-Link logo and model number 'DAP-1665 RV.B1 FW2.00' are visible. Navigation links for 'Home', 'Settings', and 'Management' are present. The main heading is 'IPv6' with a sub-note: 'All of your IPv6 internet and network connection details are displayed on this page.' Below this, a breadcrumb trail reads 'Settings >> Internet >> IPv6'. A 'Save' button is highlighted in blue. The configuration form includes a dropdown menu for 'My Internet Connection is' set to 'Static IPv6', and input fields for 'IPv6 Address', 'Subnet Prefix Length', 'Default Gateway', 'Primary DNS Server', and 'Secondary DNS Server'. A copyright notice 'COPYRIGHT © 2016 D-Link' is at the bottom.

## Local Connectivity Only

**My Internet Connection is:** Select **Link-local only** to only set an IPv6 address for the local network.

**LAN IPv6 Link-Local Address:** Shows the link-local address of the DAP-1665.



# Management

The Management section allows you to adjust the administrative settings of the router such as time and date, administrator password, and update the device's firmware. Click **Save** to apply your settings.

## Time & Schedule

Use the Time page to configure the time and date settings of the access point. You can also configure daylight saving adjustments and synchronize the access point's clock and calendar with an Internet-based Network Time Protocol (NTP) server.

**Time Configuration:** Select the Time Zone from the drop-down box and **Enable** or disable Daylight Saving

**Automatic Time Configuration:** **Enable** Update Time Using an NTP Server if you have a valid connection to an NTP server you wish to use. You can type in a custom IP address in the NTP Server field if you have selected **Manual** from the drop-down box.

The screenshot displays the 'Time' configuration page in the D-Link management interface. At the top, there are navigation links for 'Home', 'Settings', and 'Management'. The main heading is 'Time', with a sub-note stating: 'Your ap's internal clock is used for data logging and schedules for features. The date and time can be synchronized with a public time server on the Internet, or set manually.' Below this, there are two main sections: 'Time Configuration' and 'Automatic Time Configuration'. In the 'Time Configuration' section, the 'Time Zone' is set to '(GMT-05:00) Eastern Time (US & Canada)', the 'Time' is '2016/12/28 12:38:07 AM', and 'Enable Daylight Saving' is set to 'Disabled'. In the 'Automatic Time Configuration' section, 'Update Time Using an NTP Server' is set to 'Enabled', and the 'NTP Server' is set to 'D-Link NTP Server'. There are 'Schedule' and 'Save' buttons at the top right of the configuration area.

# Schedule

Use the Schedule page to create new schedule rules for various device functions. Schedules created here will be available for selection from schedule selection drop-down menus throughout the configuration utility.

Click **Add Rule** to add a schedule for times that can be used to control the device's specific features.

On this page, you can **Edit** and **Delete** the rule. Click **Save** to apply the rules.

D-Link  
DAP-1665 HW:81 FW:2.00

Home | Settings | Management

## Schedule

Some features, such as the firewall and website filters, can be turned on or off based on a schedule. One common use of schedules is to control access to the Internet by a specified device during specified time periods.

Management >> Schedule

Time Save

Name	Schedule	Edit	Delete
Rule1	Wed: 5:00 - 11:00 Fri: 10:00 - 16:00		

Add Rule Remaining: 9

COPYRIGHT © 2016 D-Link

You can draw the times slots in the pop-up window and type in a custom rule name. Click **Apply** to add the rule.

Name: Rule 1

Text field contains illegal characters.

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23
Mon																								
Tue																								
Wed						5:00 - 11:00																		
Thu																								
Fri										10:00 - 16:00														
Sat																								
Sun																								

Apply

# Log

The DAP-1665 keeps a running log of events and activities occurring on the access point. If the device is rebooted, the logs will automatically be cleared. Click **Save** to apply your changes.

**SysLog Settings:** **Enable** Logging to Syslog Server if you have one on your network. You can then manually enter the IP address of the server or select from the drop-down list on the right.

**E-mail Settings:** **Enable** E-mail Notification and enter your desired From/To E-mail Addresses, SMTP information, and authentication information for your account.

**E-mail Log When Full or On Schedule:** You can **enable** automatic sending of logs when they are full or schedule logs to be sent via a preset schedule.

The screenshot displays the 'System Log' configuration interface for a D-Link DAP-1665. The page is titled 'System Log' and includes a brief description: 'On-board diagnostics run continuously in the background to monitor the health of your ap. The results are recorded in the system log if it is enabled. This info can be used to diagnose common problems or help Customer Support resolve issues more quickly.' The configuration is organized into three main sections:

- SysLog Settings:**
  - 'Enable Logging to Syslog Server' is set to 'Enabled'.
  - 'SysLog Server IP Address' is an empty text field.
  - A dropdown menu for server selection is currently set to '<<< Computer Name'.
- E-mail Settings:**
  - 'Enable E-mail Notification' is set to 'Enabled'.
  - 'From E-mail Address', 'To E-mail Address', and 'SMTP Server Address' are empty text fields.
  - 'SMTP Server Port' is set to '25'.
  - 'Enable Authentication' is set to 'Enabled'.
  - 'Account Name' and 'Password' are empty text fields.
- E-mail Log When Full or On Schedule:**
  - 'Send When Log Full' is set to 'Enabled'.
  - 'Send on Schedule' is set to 'Enabled'.
  - 'Schedule' is set to 'Always Enable'.

A 'Save' button is located in the top right corner of the configuration area.




# Admin

You can change the admin password and configure system settings from the Admin page. Click **Save** to apply settings.

**Admin Password:** Enter a custom password for your admin account in this box. You can also enable a graphical authentication for better security against bots here.

**Administration:** **Enable** HTTPS Server to encrypt the connection to your device's management page.

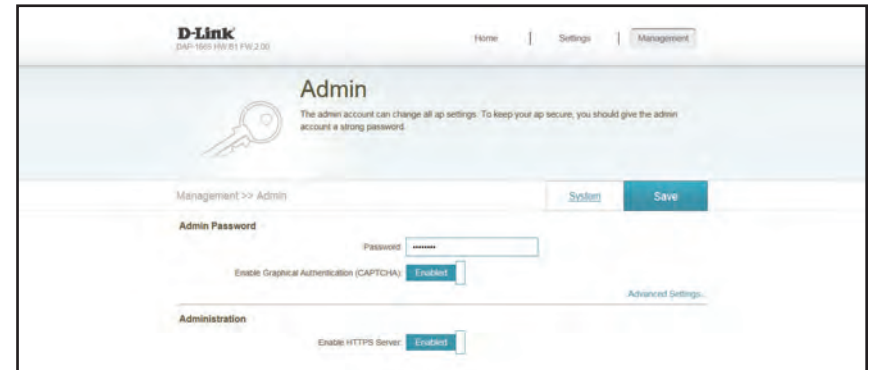

# System


You can save your DAP-1665's settings to a file as a backup from this page.

**Save Settings to Local Hard Drive:** Click **Save** to save the access point's current configuration to a file on your local computer. After clicking, a *Save File* dialog will appear, prompting you to save the configuration file on your computer.

**Load Settings From Local Hard Drive:** Click **Browse** to locate a previously saved configuration file on your local computer. Once the file has been located, click **Upload Settings** to apply the configuration in the file to the access point.  
**Note:** This will overwrite any current configuration.

**Restore to Factory Default Settings:** Click **Restore Device** to reset the DAP-1665's settings to the factory defaults.  
**Warning:** This will erase all current settings and cannot be undone.

**Reboot the Device:** Click **Reboot** to reboot the device. You will need to log in to the device again once the reboot has been completed.

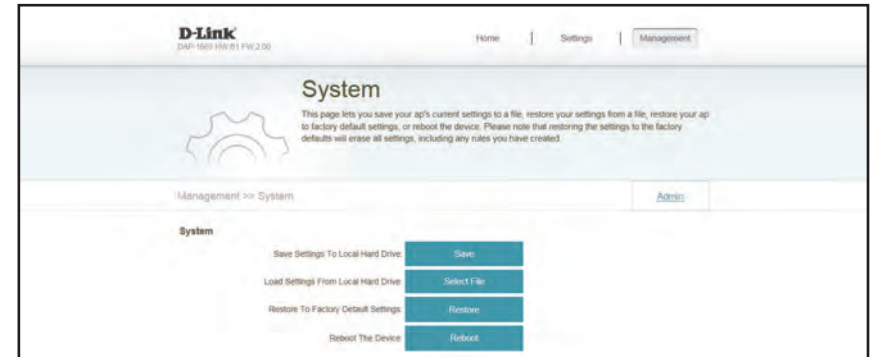

# Upgrade

Use the Upgrade page to update the device's firmware.


**Firmware** This section displays information about the device's current firmware and language pack. Click **Check for New Firmware** to check for new firmware or language pack versions.

**Note:** The access point must have an active Internet connected to check for firmware updates.

**Check the Latest Firmware and Language Pack Versions:** If the above check for firmware and language packs detected updates, the details will displayed here. Click **Download** to download the update files to your computer.


**Upgrade Manually:** Click **Select File** to locate a firmware file on your computer. Once located, click **Upload** to commence the firmware upgrade process. It is recommended that you save your current router configuration using the System page before you begin a firmware upgrade.

**Warning:** You must use a wired connection to the access point to update the firmware.

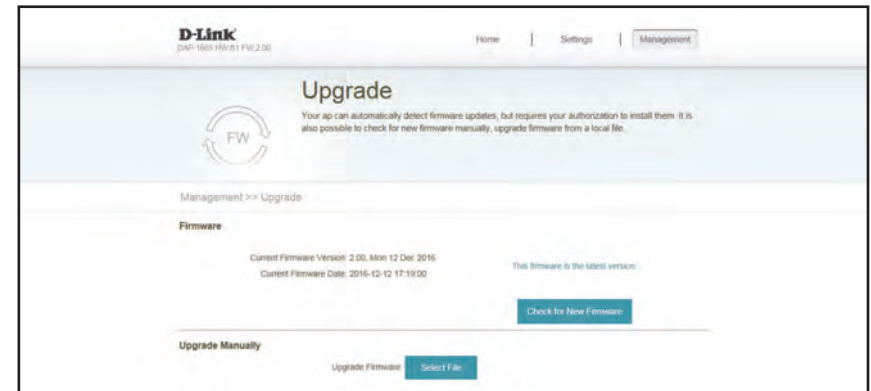

# Statistics

The DAP-1665 keeps statistics of the traffic that passes through it. You can view the amount of packets that pass through the LAN and wireless portions of the network. The traffic counter will reset if the access point is rebooted. Use the tabs at the top of the graph or click **Clear** to clear the statistics.

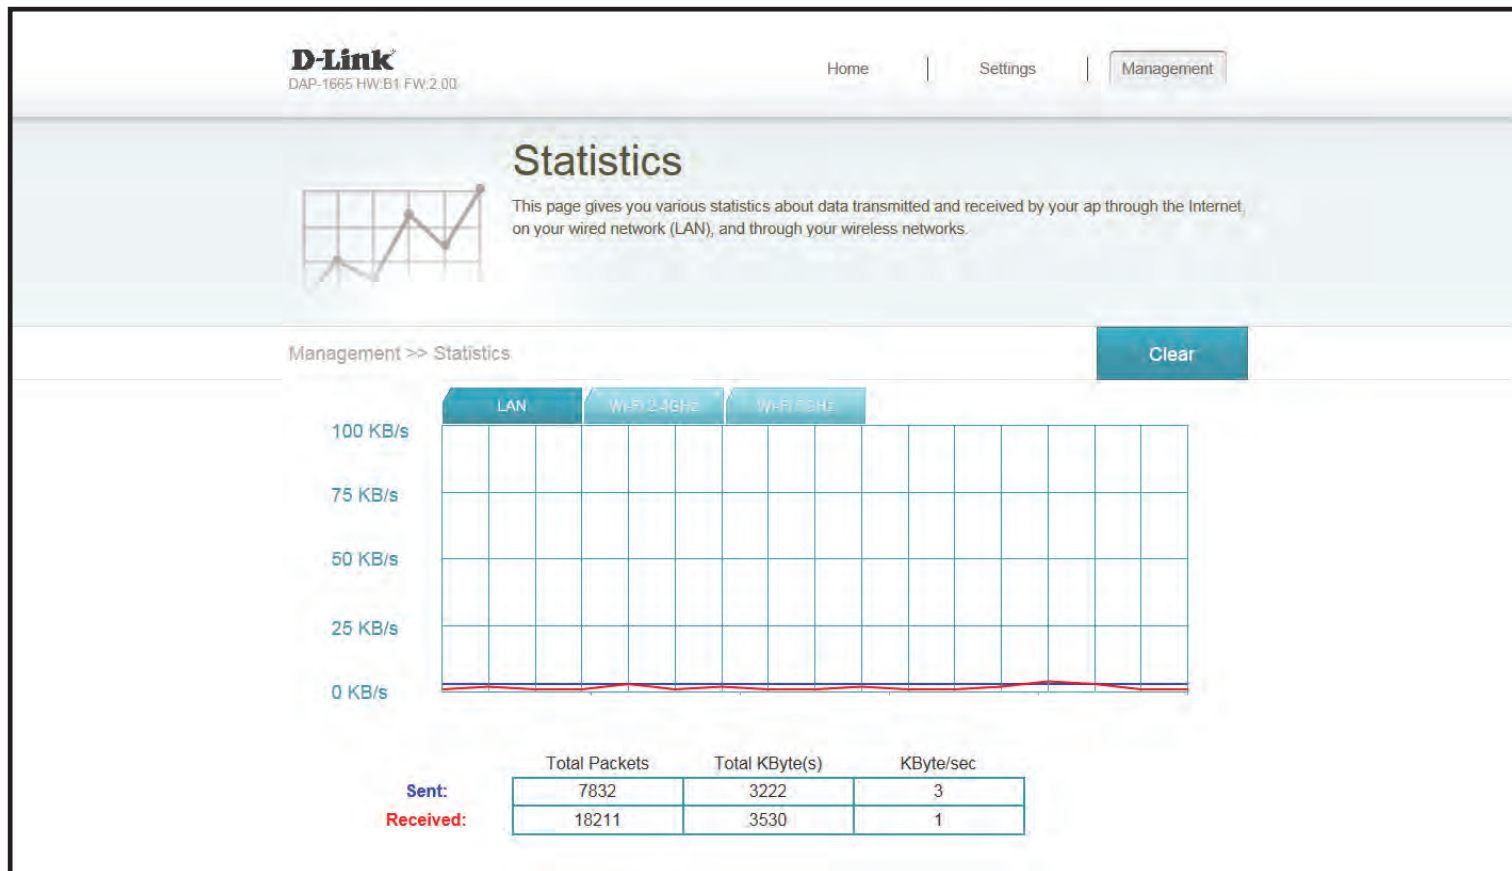

# Connecting to a Wireless Network

## WPS Button

Once an uplink network has been established, you may use the DAP-1665's WPS function to add additional wireless clients to your extended network. Many wireless devices such as wireless routers, media players, printers, and cameras will have a WPS button (or a software utility with WPS) that you can press to connect to the DAP-1665. Please refer to the user manual for the wireless device you want to connect to make sure you understand how to enable WPS. Once you know, follow the steps below:

- Step 1** - Press the WPS button on the DAP-1665 for about 1 second. The Status/WPS LED on the DAP-1330 will start blinking green. You can also use the WPS option in the setup wizard section of the web interface.
- Step 2** - Within 120 seconds, press the WPS button on your wireless device.
- Step 3** - Allow up to 1 minute to configure. Once the LED light stops blinking and turns solid green, you will be connected and your wireless connection will be secured with WPA2.


# Mac OS

It is recommended to enable wireless security (WPA/WPA2) on your wireless router or access point before configuring your wireless adapter. If you are joining an existing network, you will need to know the security key (Wi-Fi password) being used.

To quickly access your Wi-Fi information and settings, click the Wi-Fi icon on the menu bar.



Clicking on this icon will display a list of all wireless networks within range of your computer. Select the desired network by clicking on the network name.

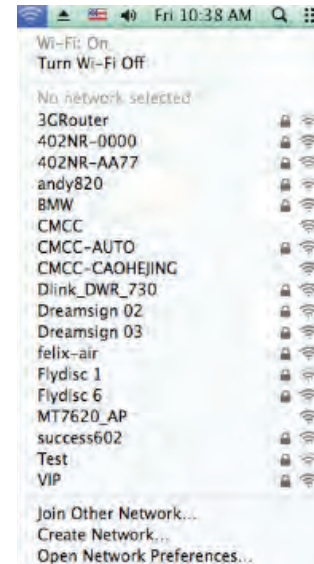

You will then be prompted to enter the network security key (Wi-Fi password) for the wireless network. Enter the password into the box and click **Join**.

**Note:** To avoid having to enter your network security key each time you connect, check **Remember this network**.



Once the connection is successfully established, you will see a check by the name of your wireless network.



# Windows® 10

When connecting to the DAP-1665 wirelessly for the first time, you will need to input the wireless network name (SSID) and Wi-Fi password (security key) of the device you are connecting to. If your product has a Wi-Fi Configuration Card, you can find the default network name and Wi-Fi password here. Otherwise refer to the product label for the default Wi-Fi network SSID and password, or enter the Wi-Fi credentials set during the product configuration.

To join an existing network, locate the wireless network icon in the taskbar, next to the time display and click on it.



Wireless Icon

Clicking on this icon will display a list of wireless networks which are within range of your computer. Select the desired network by clicking on the SSID.






To connect to the SSID, click **Connect**.

To automatically connect with the router when your device next detects the SSID, click the **Connect Automatically** check box.

You will then be prompted to enter the Wi-Fi password (network security key) for the wireless network. Enter the password into the box and click **Next** to connect to the network. Your computer will now automatically connect to this wireless network when it is detected.

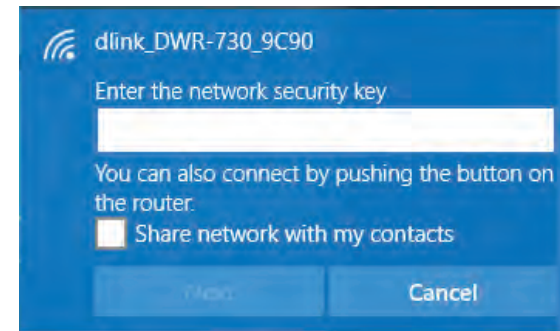


# Windows® 8

It is recommended to enable wireless security (WPA/WPA2) on your wireless router or access point before configuring your wireless adapter. If you are joining an existing network, you will need to know the security key (Wi-Fi password) being used.

To join an existing network, locate the wireless network icon in the taskbar, next to the time display.





Clicking on this icon will display a list of wireless networks which are within connecting proximity of your computer. Select the desired network by clicking on the network name.

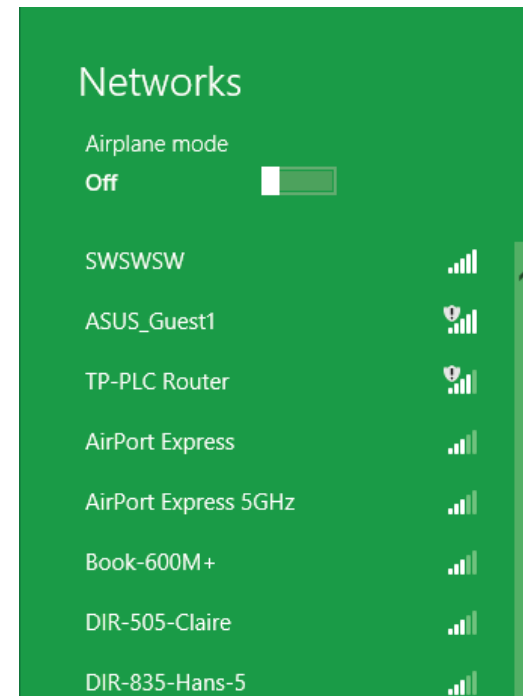

You will then be prompted to enter the network security key (Wi-Fi password) for the wireless network. Enter the password into the box and click **Next**.

If you wish to use Wi-Fi Protected Setup (WPS) to connect to the router, you can also press the WPS button on your router at this point to enable the WPS function.

When you have established a successful connection to a wireless network, the word **Connected** will appear next to the name of the network to which you are connected.

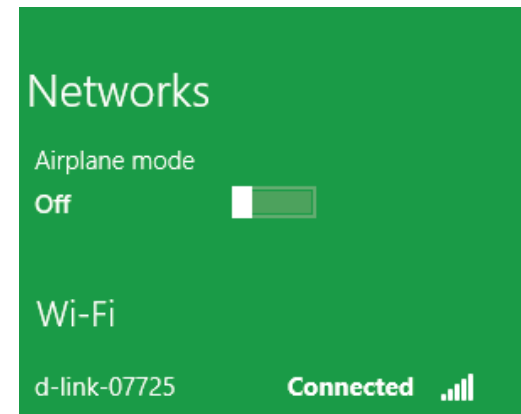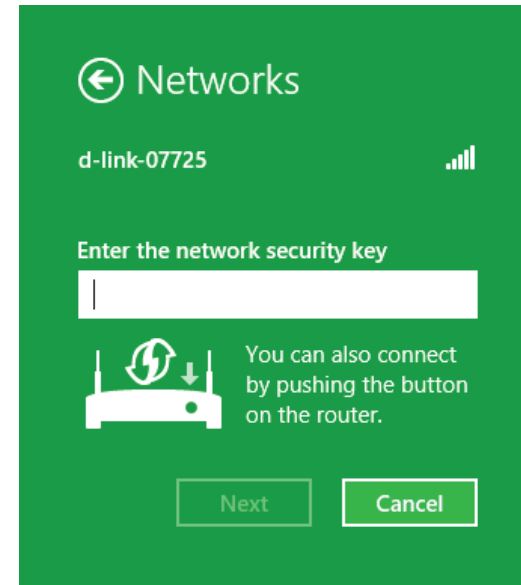


Highlight the wireless network (SSID) you would like to connect to and click the **Connect** button. The Wi-Fi Configuration Card will list your device's specific network, it will not be simply dlink.

If you get a good signal but cannot access the Internet, check your TCP/IP settings for your wireless adapter. Refer to the Networking Basics section in this manual for more information.



The following window appears while your computer tries to connect to the router.

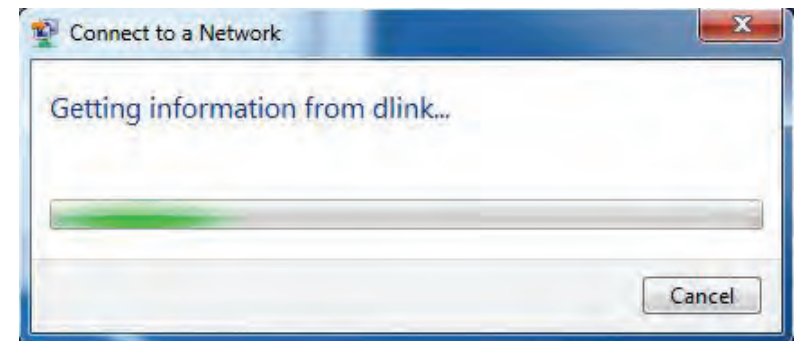

## Section 5 - Connecting to a Wireless Network

---

Enter the same security key or passphrase that is on your DAP-1665 and click **Connect**.

It may take 20-30 seconds to connect to the wireless network. If the connection fails, please verify that the security settings are correct. The key or passphrase must be exactly the same as on the wireless router.

Additionally, you may connect using Wi-Fi Protected Setup (WPS) and Push Button Configuration (PBC). When the window to the right is displayed, press the Simple Connect Button on the DAP-1665.



# Windows® 7

It is recommended to enable wireless security (WPA/WPA2) on your DAP-1665 before configuring your wireless adapter. If you are joining an existing network, you will need to know the security key or passphrase being used.

Click on the wireless icon in your system tray (lower-right corner).



Wireless Icon

The utility will display any available wireless networks in your area.




Highlight the wireless network (SSID) you would like to connect to and click the **Connect** button. The Wi-Fi Configuration Card will list your device's specific network.

If you get a good signal but cannot access the Internet, check your TCP/IP settings for your wireless adapter. Refer to **Networking Basics** on page <?> for more information.



The following window appears while your computer tries to connect to the router.

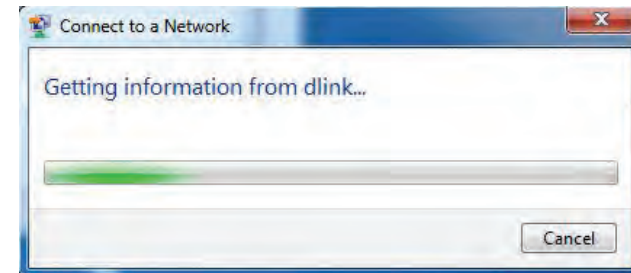

Enter the same security key or passphrase that is on your DAP-1665 and click **Connect**.

It may take 20-30 seconds to connect to the wireless network. If the connection fails, please verify that the security settings are correct. The key or passphrase must be exactly the same as on the wireless router.

Additionally, you may connect using Wi-Fi Protected Setup (WPS) and Push Button Configuration (PBC). When the window to the right is displayed, press the Simple Connect Button on the DAP-1665.



# Windows Vista®

Windows Vista® users may use the convenient, built-in wireless utility. Follow these instructions:

From the **Start menu**, go to **Control Panel**, and then click on **Network and Sharing Center**.


Select **Connect to a network**.



The utility will display any available wireless networks in your area. Click on a network (displayed using the SSID) and click the **Connect** button. The Wi-Fi Configuration Card will list your device's specific network.


If you get a good signal but cannot access the Internet, check your TCP/IP settings for your wireless adapter. Refer to the **Networking Basics** section in this manual for more information.

Click **Connect** to continue.

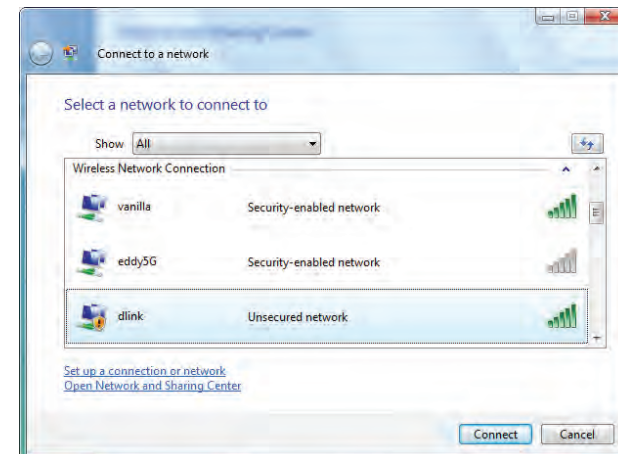



The utility will display the following window to indicate a connection is being made.

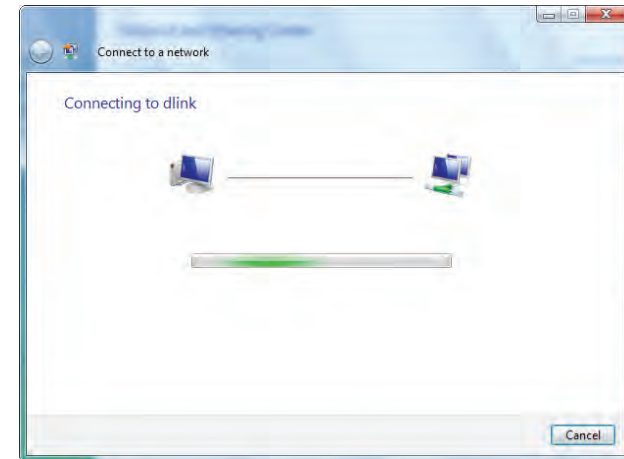

The final window indicates a successful connection has been established.

The next two pages display the windows used to connect to a WPA-PSK wireless network.

# Troubleshooting

This chapter provides solutions to problems that can occur during the installation and operation of the DAP-1665. Read the following descriptions if you are having problems.

## 1. Why can't I access the web-based configuration utility?

When entering the name or IP address of the D-Link access point (**192.168.0.50** for example), you are not connecting to a website on the Internet or have to be connected to the Internet. The device has the utility built-in to a ROM chip in the device itself. Your computer must be on the same IP subnet to connect to the web-based utility.

- Make sure you have an updated Java-enabled web browser. We recommend the following:
  - Microsoft Internet Explorer® 7.0 or higher
  - Mozilla Firefox® 12.0 or higher
  - Google Chrome™ 20.0 or higher
  - Apple Safari® 4.0 or higher
- Verify physical connectivity by checking for solid link lights on the device. If you do not get a solid link light, try using a different cable. If the computer is turned off, the link light may not be on.
- Disable any Internet security software running on the computer. Software firewalls such as ZoneAlarm, BlackICE, Sygate, Norton Personal Firewall, and Windows® XP firewall may block access to the configuration pages. Check the help files included with your firewall software for more information on disabling or configuring it.

- Configure your Internet settings:
  - Go to **Start > Settings > Control Panel**. Double-click the **Internet Options** icon. From the Security tab, click the button to restore the settings to their defaults.
  - Click the Connection tab and set the dial-up option to Never Dial a Connection. Click the LAN Settings button. Make sure nothing is checked. Click OK.
  - Go to the Advanced tab and click the button to restore these settings to their defaults. Click OK three times.
  - Close your web browser (if open) and open it.
- Access the web management. Open your web browser and enter the IP address of your D-Link access point in the address bar. This should open the login page for your the web management.
- If you still cannot access the configuration, unplug the power to the access point for 10 seconds and plug back in. Wait about 30 seconds and try accessing the configuration. If you have multiple computers, try connecting using a different computer.

### 2. What can I do if I forgot my password?

If you forgot your password, you must reset your access point. Unfortunately this process will change all your settings back to the factory defaults.

To reset the access point, locate the reset button (hole) on the rear panel of the unit. With the access point powered on, use a paperclip to hold the button down for 10 seconds. Release the button and the access point will go through its reboot process. Wait about 30 seconds to access the access point. The default IP address is **192.168.0.50**. When logging in, the username is Admin and leave the password box empty.

### 3. Why can't I connect to certain sites or send and receive emails when connecting through my access point?

If you are having a problem sending or receiving email, or connecting to secure sites such as eBay, banking sites, and Hotmail, we suggest lowering the MTU in increments of ten (Ex. 1492, 1482, 1472, etc).

**Note: AOL DSL+ users must use MTU of 1400.**

To find the proper MTU Size, you'll have to do a special ping of the destination you're trying to go to. A destination could be another computer, or a URL.

- Click on **Start** and then click **Run**.
- Windows® 95, 98, and ME users type in *command* (Windows® NT, 2000, and XP users type in *cmd*) and press **Enter** (or click **OK**).
- Once the window opens, you'll need to do a special ping. Use the following syntax:

```
ping [url] [-f] [-l] [MTU value]
```

Example: **ping yahoo.com -f -l 1472**

```
C:\>ping yahoo.com -f -l 1482
Pinging yahoo.com [66.94.234.13] with 1482 bytes of data:
Packet needs to be fragmented but DF set.
Packet needs to be fragmented but DF set.
Packet needs to be fragmented but DF set.
Packet needs to be fragmented but DF set.
Ping statistics for 66.94.234.13:
    Packets: Sent = 4, Received = 0, Lost = 4 (100% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 0ms, Maximum = 0ms, Average = 0ms
C:\>ping yahoo.com -f -l 1472
Pinging yahoo.com [66.94.234.13] with 1472 bytes of data:
Reply from 66.94.234.13: bytes=1472 time=93ms TTL=52
Reply from 66.94.234.13: bytes=1472 time=109ms TTL=52
Reply from 66.94.234.13: bytes=1472 time=125ms TTL=52
Reply from 66.94.234.13: bytes=1472 time=203ms TTL=52
Ping statistics for 66.94.234.13:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 93ms, Maximum = 203ms, Average = 132ms
C:\>
```

You should start at 1472 and work your way down by 10 each time. Once you get a reply, go up by 2 until you get a fragmented packet. Take that value and add 28 to the value to account for the various TCP/IP headers. For example, let's say that 1452 was the proper value, the actual MTU size would be 1480, which is the optimum for the network we're working with (1452+28=1480).

Once you find your MTU, you can now configure your access point with the proper MTU size.

To change the MTU rate on your access point follow the steps below:

- Open your browser, enter the IP address of your access point (**192.168.0.50**) and click **OK**.
- Enter your username (Admin) and password (blank by default). Click **OK** to enter the web configuration page for the device.
- Click on **Setup** and then click **Manual Configure**.
- To change the MTU enter the number in the MTU field and click **Save Settings** to save your settings.
- Test your email. If changing the MTU does not resolve the problem, continue changing the MTU in increments of ten.

# Technical Specifications

## Standards

- IEEE 802.11ac
- IEEE 802.11n
- IEEE 802.11gF
- IEEE 802.11b
- IEEE 802.3
- IEEE 802.3u

## Security

- WPA/WPA2
  - Personal
  - Enterprise
- WEP
- WPS

## Wireless Signal Rate

- Up to 1200 Mbps

## Maximum Operating Voltage

- 12 V 1A

## Power Consumption

- 5.7 W

## Frequency Range<sup>3</sup>

- 2.4 GHz Band:
  - 2.4 - 2.4835 GHz
- 5 GHz Band:
  - 5.15 GHz to 5.25 GHz
  - 5.725 GHz to 5.85 GHz

## Antennas

- Two 2.4 GHz 5.12 dBi, 5 GHz 5.10 dBi external antenna<sup>2</sup>

## LEDs

- Power

<sup>1</sup> Maximum wireless signal rate derived from IEEE Standard draft 802.11ac, 802.11n and 802.11g specifications. Actual data throughput will vary. Network conditions and environmental factors, including volume of network traffic, building materials and construction, and network overhead, lower actual data throughput rate. Environmental conditions will adversely affect wireless signal range.

<sup>2</sup> All Maximum transmission power values expressed are for dual-chain mode. Maximum transmission power and included antennas may vary depending on regional regulations.

<sup>3</sup> Range may vary depending on regional regulations.

- 2.4 GHz wireless

## Temperature

- Operating
  - 32°F to 131°F ( 0°C to 55°C)
- Storage
  - -20 to 65 °C (-4 to 149 °F)
- 5 GHz wireless
- LAN

## Humidity

- Operating
  - 10 - 90% (non-condensing)
- Storage
  - 5 - 95% (non-condensing)

## Safety & Emissions

- CE
- FCC

## Dimensions

- 47 x 108 x 27.8 mm (5.79 x 4.25 x 1.1 inches)

## Weight

- 222 grams (0.489 lbs)
- ISED

# GPL Code Statement

This D-Link product includes software code developed by third parties, including software code subject to the GNU General Public License (“GPL”) or GNU Lesser General Public License (“LGPL”). As applicable, the terms of the GPL and LGPL, and information on obtaining access to the GPL code and LGPL code used in this product, are available to you at:

<http://tsd.dlink.com.tw/GPL.asp>

The GPL code and LGPL code used in this product is distributed WITHOUT ANY WARRANTY and is subject to the copyrights of one or more authors. For details, see the GPL code and the LGPL code for this product and the terms of the GPL and LGPL.

## WRITTEN OFFER FOR GPL AND LGPL SOURCE CODE

Where such specific license terms entitle you to the source code of such software, D-Link will provide upon written request via email and/or traditional paper mail the applicable GPL and LGPL source code files via CD-ROM for a nominal cost to cover shipping and media charges as allowed under the GPL and LGPL.

Please direct all inquiries to:  
Email: [GPLCODE@DLink.com](mailto:GPLCODE@DLink.com)  
Snail Mail:  
Attn: GPLSOURCE REQUEST  
D-Link Systems, Inc.  
17595 Mt. Herrmann Street  
Fountain Valley, CA 92708

## GNU GENERAL PUBLIC LICENSE Version 3, 29 June 2007

Copyright (C) 2007 Free Software Foundation, Inc. <http://fsf.org/> Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

## Preamble

The GNU General Public License is a free, copyleft license for software and other kinds of works.

The licenses for most software and other practical works are designed to take away your freedom to share and change the works. By contrast, the GNU General Public License is intended to guarantee your freedom to share and change all versions of a program—to make sure it remains free software for all its users. We, the Free Software Foundation, use the GNU General Public License for most of our software; it applies also to any other work released this way by its authors. You can apply it to your programs, too.

When we speak of free software, we are referring to freedom, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for them if you wish), that you receive source code or can get it if you want it, that you can change the software or use pieces of it in new free programs, and that you know you can do these things.

To protect your rights, we need to prevent others from denying you these rights or asking you to surrender the rights. Therefore, you have certain responsibilities if you distribute copies of the software, or if you modify it: responsibilities to respect the freedom of others.

For example, if you distribute copies of such a program, whether gratis or for a fee, you must pass on to the recipients the same freedoms that you received. You must make sure that they, too, receive or can get the source code. And you must show them these terms so they know their rights.

Developers that use the GNU GPL protect your rights with two steps:

(1) assert copyright on the software, and (2) offer you this License giving you legal permission to copy, distribute and/or modify it.

For the developers' and authors' protection, the GPL clearly explains that there is no warranty for this free software. For both users' and authors' sake, the GPL requires that modified versions be marked as changed, so that their problems will not be attributed erroneously to authors of previous versions.

Some devices are designed to deny users access to install or run modified versions of the software inside them, although the manufacturer can do so. This is fundamentally incompatible with the aim of protecting users' freedom to change the software. The systematic pattern of such abuse occurs in the area of products for individuals to use, which is precisely where it is most unacceptable. Therefore, we have designed this version of the GPL to prohibit the practice for those products. If such problems arise substantially in other domains, we stand ready to extend this provision to those domains in future versions of the GPL, as needed to protect the freedom of users.

Finally, every program is threatened constantly by software patents. States should not allow patents to restrict development and use of software on general-purpose computers, but in those that do, we wish to avoid the special danger that patents applied to a free program could make it effectively proprietary. To prevent this, the GPL assures that patents cannot be used to render the program non-free.

The precise terms and conditions for copying, distribution and modification follow.



## TERMS AND CONDITIONS

### 0. Definitions.

“This License” refers to version 3 of the GNU General Public License.

“Copyright” also means copyright-like laws that apply to other kinds of works, such as semiconductor masks.

“The Program” refers to any copyrightable work licensed under this License. Each licensee is addressed as “you”. “Licensees” and “recipients” may be individuals or organizations.

To “modify” a work means to copy from or adapt all or part of the work in a fashion requiring copyright permission, other than the making of an exact copy. The resulting work is called a “modified version” of the earlier work or a work “based on” the earlier work.

A “covered work” means either the unmodified Program or a work based on the Program.

To “propagate” a work means to do anything with it that, without permission, would make you directly or secondarily liable for infringement under applicable copyright law, except executing it on a computer or modifying a private copy. Propagation includes copying, distribution (with or without modification), making available to the public, and in some countries other activities as well.

To “convey” a work means any kind of propagation that enables other parties to make or receive copies. Mere interaction with a user through a computer network, with no transfer of a copy, is not conveying.

An interactive user interface displays “Appropriate Legal Notices” to the extent that it includes a convenient and prominently visible feature that (1) displays an appropriate copyright notice, and (2) tells the user that there is no warranty for the work (except to the extent that warranties are provided), that licensees may convey the work under this License, and how to view a copy of this License. If the interface presents a list of user commands or options, such as a menu, a prominent item in the list meets this criterion.

## 1. Source Code.

The “source code” for a work means the preferred form of the work for making modifications to it. “Object code” means any non-source form of a work.

A “Standard Interface” means an interface that either is an official standard defined by a recognized standards body, or, in the case of interfaces specified for a particular programming language, one that is widely used among developers working in that language.

The “System Libraries” of an executable work include anything, other than the work as a whole, that (a) is included in the normal form of packaging a Major Component, but which is not part of that Major Component, and (b) serves only to enable use of the work with that Major Component, or to implement a Standard Interface for which an implementation is available to the public in source code form. A “Major Component”, in this context, means a major essential component (kernel, window system, and so on) of the specific operating system (if any) on which the executable work runs, or a compiler used to produce the work, or an object code interpreter used to run it.

The “Corresponding Source” for a work in object code form means all the source code needed to generate, install, and (for an executable work) run the object code and to modify the work, including scripts to control those activities. However, it does not include the work’s System Libraries, or general-purpose tools or generally available free programs which are used unmodified in performing those activities but which are not part of the work. For example, Corresponding Source includes interface definition files associated with source files for the work, and the source code for shared libraries and dynamically linked subprograms that the work is specifically designed to require, such as by intimate data communication or control flow between those subprograms and other parts of the work.

The Corresponding Source need not include anything that users can regenerate automatically from other parts of the Corresponding Source.

The Corresponding Source for a work in source code form is that same work.

## **2. Basic Permissions.**

All rights granted under this License are granted for the term of copyright on the Program, and are irrevocable provided the stated conditions are met. This License explicitly affirms your unlimited permission to run the unmodified Program. The output from running a covered work is covered by this License only if the output, given its content, constitutes a covered work. This License acknowledges your rights of fair use or other equivalent, as provided by copyright law.

You may make, run and propagate covered works that you do not convey, without conditions so long as your license otherwise remains in force. You may convey covered works to others for the sole purpose of having them make modifications exclusively for you, or provide you with facilities for running those works, provided that you comply with the terms of this License in conveying all material for which you do not control copyright. Those thus making or running the covered works for you must do so exclusively on your behalf, under your direction and control, on terms that prohibit them from making any copies of your copyrighted material outside their relationship with you.

Conveying under any other circumstances is permitted solely under the conditions stated below. Sublicensing is not allowed; section 10 makes it unnecessary.

## **3. Protecting Users' Legal Rights From Anti-Circumvention Law.**

No covered work shall be deemed part of an effective technological measure under any applicable law fulfilling obligations under article 11 of the WIPO copyright treaty adopted on 20 December 1996, or similar laws prohibiting or restricting circumvention of such measures.

When you convey a covered work, you waive any legal power to forbid circumvention of technological measures to the extent such circumvention is effected by exercising rights under this License with respect to the covered work, and you disclaim any intention to limit operation or modification of the work as a means of enforcing, against the work's users, your or third parties' legal rights to forbid circumvention of technological measures.

## **4. Conveying Verbatim Copies.**

You may convey verbatim copies of the Program's source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice; keep intact all notices stating that this License and any non-permissive terms added in accord with section 7 apply to the code; keep intact all notices of the absence of any warranty; and give all recipients a copy of this License along with the Program.

You may charge any price or no price for each copy that you convey, and you may offer support or warranty protection for a fee.

### **5. Conveying Modified Source Versions.**

You may convey a work based on the Program, or the modifications to produce it from the Program, in the form of source code under the terms of section 4, provided that you also meet all of these conditions:

- a) The work must carry prominent notices stating that you modified it, and giving a relevant date.
- b) The work must carry prominent notices stating that it is released under this License and any conditions added under section 7. This requirement modifies the requirement in section 4 to “keep intact all notices”.
- c) You must license the entire work, as a whole, under this License to anyone who comes into possession of a copy. This License will therefore apply, along with any applicable section 7 additional terms, to the whole of the work, and all its parts, regardless of how they are packaged. This License gives no permission to license the work in any other way, but it does not invalidate such permission if you have separately received it.
- d) If the work has interactive user interfaces, each must display Appropriate Legal Notices; however, if the Program has interactive interfaces that do not display Appropriate Legal Notices, your work need not make them do so.

A compilation of a covered work with other separate and independent works, which are not by their nature extensions of the covered work, and which are not combined with it such as to form a larger program, in or on a volume of a storage or distribution medium, is called an “aggregate” if the compilation and its resulting copyright are not used to limit the access or legal rights of the compilation’s users beyond what the individual works permit. Inclusion of a covered work in an aggregate does not cause this License to apply to the other parts of the aggregate.

## **6. Conveying Non-Source Forms.**

You may convey a covered work in object code form under the terms of sections 4 and 5, provided that you also convey the machine-readable Corresponding Source under the terms of this License, in one of these ways:

- a) Convey the object code in, or embodied in, a physical product (including a physical distribution medium), accompanied by the Corresponding Source fixed on a durable physical medium customarily used for software interchange.
- b) Convey the object code in, or embodied in, a physical product (including a physical distribution medium), accompanied by a written offer, valid for at least three years and valid for as long as you offer spare parts or customer support for that product model, to give anyone who possesses the object code either (1) a copy of the Corresponding Source for all the software in the product that is covered by this License, on a durable physical medium customarily used for software interchange, for a price no more than your reasonable cost of physically performing this conveying of source, or (2) access to copy the Corresponding Source from a network server at no charge.
- c) Convey individual copies of the object code with a copy of the written offer to provide the Corresponding Source. This alternative is allowed only occasionally and noncommercially, and only if you received the object code with such an offer, in accord with subsection 6 b.
- d) Convey the object code by offering access from a designated place (gratis or for a charge), and offer equivalent access to the Corresponding Source in the same way through the same place at no further charge. You need not require recipients to copy the Corresponding Source along with the object code. If the place to copy the object code is a network server, the Corresponding Source may be on a different server (operated by you or a third party) that supports equivalent copying facilities, provided you maintain clear directions next to the object code saying where to find the Corresponding Source. Regardless of what server hosts the Corresponding Source, you remain obligated to ensure that it is available for as long as needed to satisfy these requirements.
- e) Convey the object code using peer-to-peer transmission, provided you inform other peers where the object code and Corresponding Source of the work are being offered to the general public at no charge under subsection 6d.

A separable portion of the object code, whose source code is excluded from the Corresponding Source as a System Library, need not be included in conveying the object code work.

A “User Product” is either (1) a “consumer product”, which means any tangible personal property which is normally used for personal, family, or household purposes, or (2) anything designed or sold for incorporation into a dwelling. In determining whether a product is a consumer product, doubtful cases shall be resolved in favor of coverage. For a particular product received by a particular user, “normally used” refers to a typical or common use of that class of product, regardless of the status of the particular user or of the way in which the particular user actually uses, or expects or is expected to use, the product. A product is a consumer product regardless of whether the product has substantial commercial, industrial or non-consumer uses, unless such uses represent the only significant mode of use of the product.

“Installation Information” for a User Product means any methods, procedures, authorization keys, or other information required to install and execute modified versions of a covered work in that User Product from a modified version of its Corresponding Source. The information must suffice to ensure that the continued functioning of the modified object code is in no case prevented or interfered with solely because modification has been made.

If you convey an object code work under this section in, or with, or specifically for use in, a User Product, and the conveying occurs as part of a transaction in which the right of possession and use of the User Product is transferred to the recipient in perpetuity or for a fixed term (regardless of how the transaction is characterized), the Corresponding Source conveyed under this section must be accompanied by the Installation Information. But this requirement does not apply if neither you nor any third party retains the ability to install modified object code on the User Product (for example, the work has been installed in ROM).

The requirement to provide Installation Information does not include a requirement to continue to provide support service, warranty, or updates for a work that has been modified or installed by the recipient, or for the User Product in which it has been modified or installed. Access to a network may be denied when the modification itself materially and adversely affects the operation of the network or violates the rules and protocols for communication across the network.

Corresponding Source conveyed, and Installation Information provided, in accord with this section must be in a format that is publicly documented (and with an implementation available to the public in source code form), and must require no special password or key for unpacking, reading or copying.

## **7. Additional Terms.**

“Additional permissions” are terms that supplement the terms of this License by making exceptions from one or more of its conditions. Additional permissions that are applicable to the entire Program shall be treated as though they were included in this License, to the extent that they are valid under applicable law. If additional permissions apply only to part of the Program, that part may be used separately under those permissions, but the entire Program remains governed by this License without regard to the additional permissions.

When you convey a copy of a covered work, you may at your option remove any additional permissions from that copy, or from any part of it. (Additional permissions may be written to require their own removal in certain cases when you modify the work). You may place additional permissions on material, added by you to a covered work, for which you have or can give appropriate copyright permission.

Notwithstanding any other provision of this License, for material you add to a covered work, you may (if authorized by the copyright holders of that material) supplement the terms of this License with terms:

- a) Disclaiming warranty or limiting liability differently from the terms of sections 15 and 16 of this License; or
- b) Requiring preservation of specified reasonable legal notices or author attributions in that material or in the Appropriate Legal Notices displayed by works containing it; or
- c) Prohibiting misrepresentation of the origin of that material, or requiring that modified versions of such material be marked in reasonable ways as different from the original version; or
- d) Limiting the use for publicity purposes of names of licensors or authors of the material; or
- e) Declining to grant rights under trademark law for use of some trade names, trademarks, or service marks; or
- f) Requiring indemnification of licensors and authors of that material by anyone who conveys the material (or modified versions of it) with contractual assumptions of liability to the recipient, for any liability that these contractual assumptions directly impose on those licensors and authors.

All other non-permissive additional terms are considered “further restrictions” within the meaning of section 10. If the Program as you received it, or any part of it, contains a notice stating that it is governed by this License along with a term that is a further restriction, you may remove that term. If a license document contains a further restriction but permits relicensing or conveying under this License, you may add to a covered work material governed by the terms of that license document, provided that the further restriction does not survive such relicensing or conveying.

If you add terms to a covered work in accord with this section, you must place, in the relevant source files, a statement of the additional terms that apply to those files, or a notice indicating where to find the applicable terms.

Additional terms, permissive or non-permissive, may be stated in the form of a separately written license, or stated as exceptions; the above requirements apply either way.

## **8. Termination.**

You may not propagate or modify a covered work except as expressly provided under this License. Any attempt otherwise to propagate or modify it is void, and will automatically terminate your rights under this License (including any patent licenses granted under the third paragraph of section 11).

However, if you cease all violation of this License, then your license from a particular copyright holder is reinstated (a) provisionally, unless and until the copyright holder explicitly and finally terminates your license, and (b) permanently, if the copyright holder fails to notify you of the violation by some reasonable means prior to 60 days after the cessation.

Moreover, your license from a particular copyright holder is reinstated permanently if the copyright holder notifies you of the violation by some reasonable means, this is the first time you have received notice of violation of this License (for any work) from that copyright holder, and you cure the violation prior to 30 days after your receipt of the notice.

Termination of your rights under this section does not terminate the licenses of parties who have received copies or rights from you under this License. If your rights have been terminated and not permanently reinstated, you do not qualify to receive new licenses for the same material under section 10.

## **9. Acceptance Not Required for Having Copies.**

You are not required to accept this License in order to receive or run a copy of the Program. Ancillary propagation of a covered work occurring solely as a consequence of using peer-to-peer transmission to receive a copy likewise does not require acceptance. However, nothing other than this License grants you permission to propagate or modify any covered work. These actions infringe copyright if you do not accept this License. Therefore, by modifying or propagating a covered work, you indicate your acceptance of this License to do so.

## **10. Automatic Licensing of Downstream Recipients.**

Each time you convey a covered work, the recipient automatically receives a license from the original licensors, to run, modify and propagate that work, subject to this License. You are not responsible for enforcing compliance by third parties with this License.

An “entity transaction” is a transaction transferring control of an organization, or substantially all assets of one, or subdividing an organization, or merging organizations. If propagation of a covered work results from an entity transaction, each party to that transaction who receives a copy of the work also receives whatever licenses to the work the party’s predecessor in interest had or could give under the previous paragraph, plus a right to possession of the Corresponding Source of the work from the predecessor in interest, if the predecessor has it or can get it with reasonable efforts.



You may not impose any further restrictions on the exercise of the rights granted or affirmed under this License. For example, you may not impose a license fee, royalty, or other charge for exercise of rights granted under this License, and you may not initiate litigation (including a cross-claim or counterclaim in a lawsuit) alleging that any patent claim is infringed by making, using, selling, offering for sale, or importing the Program or any portion of it.

### **11. Patents.**

A “contributor” is a copyright holder who authorizes use under this License of the Program or a work on which the Program is based. The work thus licensed is called the contributor’s “contributor version”.

A contributor’s “essential patent claims” are all patent claims owned or controlled by the contributor, whether already acquired or hereafter acquired, that would be infringed by some manner, permitted by this License, of making, using, or selling its contributor version, but do not include claims that would be infringed only as a consequence of further modification of the contributor version. For purposes of this definition, “control” includes the right to grant patent sublicenses in a manner consistent with the requirements of this License.

Each contributor grants you a non-exclusive, worldwide, royalty-free patent license under the contributor’s essential patent claims, to make, use, sell, offer for sale, import and otherwise run, modify and propagate the contents of its contributor version.

In the following three paragraphs, a “patent license” is any express agreement or commitment, however denominated, not to enforce a patent (such as an express permission to practice a patent or covenant not to sue for patent infringement). To “grant” such a patent license to a party means to make such an agreement or commitment not to enforce a patent against the party.

If you convey a covered work, knowingly relying on a patent license, and the Corresponding Source of the work is not available for anyone to copy, free of charge and under the terms of this License, through a publicly available network server or other readily accessible means, then you must either (1) cause the Corresponding Source to be so available, or (2) arrange to deprive yourself of the benefit of the patent license for this particular work, or (3) arrange, in a manner consistent with the requirements of this License, to extend the patent license to downstream recipients. “Knowingly relying” means you have actual knowledge that, but for the patent license, your conveying the covered work in a country, or your recipient’s use of the covered work in a country, would infringe one or more identifiable patents in that country that you have reason to believe are valid.

If, pursuant to or in connection with a single transaction or arrangement, you convey, or propagate by procuring conveyance of, a covered work, and grant a patent license to some of the parties receiving the covered work authorizing them to use, propagate, modify or convey a specific copy of the covered work, then the patent license you grant is automatically extended to all recipients of the covered work and works based on it.

A patent license is “discriminatory” if it does not include within the scope of its coverage, prohibits the exercise of, or is conditioned on the non-exercise of one or more of the rights that are specifically granted under this License. You may not convey a covered work if you are a party to an arrangement with a third party that is in the business of distributing software, under which you make payment to the third party based on the extent of your activity of conveying the work, and under which the third party grants, to any of the parties who would receive the covered work from you, a discriminatory patent license (a) in connection with copies of the covered work conveyed by you (or copies made from those copies), or (b) primarily for and in connection with specific products or compilations that contain the covered work, unless you entered into that arrangement, or that patent license was granted, prior to 28 March 2007.

Nothing in this License shall be construed as excluding or limiting any implied license or other defenses to infringement that may otherwise be available to you under applicable patent law.

### **12. No Surrender of Others’ Freedom.**

If conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot convey a covered work so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not convey it at all. For example, if you agree to terms that obligate you to collect a royalty for further conveying from those to whom you convey the Program, the only way you could satisfy both those terms and this License would be to refrain entirely from conveying the Program.

### **13. Use with the GNU Affero General Public License.**

Notwithstanding any other provision of this License, you have permission to link or combine any covered work with a work licensed under version 3 of the GNU Affero General Public License into a single combined work, and to convey the resulting work. The terms of this License will continue to apply to the part which is the covered work, but the special requirements of the GNU Affero General Public License, section 13, concerning interaction through a network will apply to the combination as such.

#### **14. Revised Versions of this License.**

The Free Software Foundation may publish revised and/or new versions of the GNU General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Program specifies that a certain numbered version of the GNU General Public License “or any later version” applies to it, you have the option of following the terms and conditions either of that numbered version or of any later version published by the Free Software Foundation. If the Program does not specify a version number of the GNU General Public License, you may choose any version ever published by the Free Software Foundation. If the Program specifies that a proxy can decide which future versions of the GNU General Public License can be used, that proxy’s public statement of acceptance of a version permanently authorizes you to choose that version for the Program.

Later license versions may give you additional or different permissions. However, no additional obligations are imposed on any author or copyright holder as a result of your choosing to follow a later version.

#### **15. Disclaimer of Warranty.**

THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE PROGRAM “AS IS” WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

#### **16. Limitation of Liability.**

IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MODIFIES AND/OR CONVEYS THE PROGRAM AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

#### **17. Interpretation of Sections 15 and 16.**

If the disclaimer of warranty and limitation of liability provided above cannot be given local legal effect according to their terms, reviewing courts shall apply local law that most closely approximates an absolute waiver of all civil liability in connection with the Program, unless a warranty or assumption of liability accompanies a copy of the Program in return for a fee.

# Regulatory Statements

## **Federal Communication Commission Interference Statement**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## **Non-modifications Statement:**

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

## **Caution:**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter except in accordance with FCC multi-transmitter product procedures. For product available in the USA/Canada market, only channel 1~11 can be operated. Selection of other channels is not possible.

## **Note**

The country code selection is for non-USA models only and is not available to all USA models. Per FCC regulations, all WiFi product marketed in the USA must be fixed to USA operational channels only.

### **RF Frequency Requirements**

This device is for indoor use only when using all channels in the 5.150-5.250 GHz frequency range. High power radars are allocated as primary users of the 5.250-5.350 GHz bands. These radar stations can cause interference with and/or damage this device. This device will not operate on channels which overlap the 5600-5650 MHz band.

It is restricted to indoor environments only.

### **IMPORTANT NOTICE:**

#### **FCC Radiation Exposure Statement**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20 cm between the radiator and your body.

#### **Innovation, Science and Economic Development Canada (ISED) Statement:**

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

#### **Innovation, Science and Economic Development Canada (ISED) Statement:**

This device complies with Industry Canada's licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'ISED applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

The device meets the exemption from the routine evaluation limits in section 2.5 of RSS 102 and compliance with RSS-102 RF exposure, users can obtain Canadian information on RF exposure and compliance.

Le dispositif rencontre l'exemption des limites courantes d'évaluation dans la section 2.5 de RSS 102 et la conformité à l'exposition de RSS-102 rf, utilisateurs peut obtenir l'information canadienne sur l'exposition et la conformité de rf.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.

Cet émetteur ne doit pas être Co-placé ou ne fonctionnant en même temps qu'aucune autre antenne ou émetteur. Cet équipement devrait être installé et actionné avec une distance minimum de 20 centimètres entre le radiateur et votre corps.

the device for operation in the band 5150-5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems

les dispositifs fonctionnant dans la bande 5150-5250 MHz sont réservés uniquement pour une utilisation à l'intérieur afin de réduire les risques de brouillage préjudiciable aux systèmes de satellites mobiles utilisant les mêmes canaux;

This radio transmitter (IC: 4216A-AP1665B1) has been approved by Industry Canada to operate with the antenna types listed below with the maximum permissible gain and required antenna impedance for each antenna type indicated. Antenna types not included in this list, having a gain greater than the maximum gain indicated for that type, are strictly prohibited for use with this device.

Le présent émetteur radio (IC: 4216A-AP1665B1) a été approuvé par Industrie Canada pour fonctionner avec les types d'antenne énumérés ci-dessous et ayant un gain admissible maximal et l'impédance requise pour chaque type d'antenne. Les types d'antenne non inclus dans cette liste, ou dont le gain est supérieur au gain maximal indiqué, sont strictement interdits pour l'exploitation de l'émetteur.

**Table for Filed Antenna**

Ant.	Brand	P/N	Antenna Type	Connector	Antenna Gain (dBi)		Cable Loss (dBi)		True Gain (dBi)	
					2.4 G	5 G	2.4 G	5 G	2.4 G	5 G
1	Whayu and Ren Feng (second source)	290-20187	Dipole Antenna	SMA Plug Reverse	1.8	2.8	0.5	1	1.3	1.8

**Radiation Exposure Statement**

This equipment complies with ISED radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20 cm between the radiator and your body.

**Déclaration d'exposition aux radiations**

Cet équipement est conforme aux limites d'exposition aux rayonnements ISED établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec un minimum de 20 cm de distance entre la source de rayonnement et votre corps.

**Japan Voluntary Control Council for Interference Statement**

この装置は、クラス B 情報技術装置です。この装置は、家庭環境で使用することを目的としていますが、この装置がラジオやテレビジョン受信機に近接して使用されると、受信障害を引き起こすことがあります。

取扱説明書に従って正しい取り扱いをして下さい。

VCCI-B

**Japan Voluntary Control Council for Interference Statement**

This is a Class B product based on the standard of the VCCI Council. If this is used near a radio or television receiver in a domestic environment, it may cause radio interference. Install and use the equipment according to the instruction manual.

電波法により5GHz帯は屋内使用に限ります。



	<b>Frequency Band(s)</b> <b>Frequenzband</b> <b>Fréquence bande(s)</b> <b>Bandas de Frecuencia</b> <b>Frequenza/e</b> <b>Frequentie(s)</b>	<b>Max. Output Power (EIRP)</b> <b>Max. Output Power</b> <b>Consommation d'énergie max.</b> <b>Potencia máxima de Salida</b> <b>Potenza max. Output</b> <b>Max. Output Power</b>
5 G	5.15 – 5.25 GHz	200 mW
	5.25 – 5.35 GHz	200 mW
	5.47 – 5.725 GHz	1 W
2.4 G	2.4 – 2.4835 GHz	100 mW



## European Community Declaration of Conformity:

Česky [Czech]	Tímto D-Link Corporation prohlašuje, že tento produkt, jeho příslušenství a software jsou v souladu se směrnicí 2014/53/EU. Celý text ES prohlášení o shodě vydaného EU a o firmwaru produktu lze stáhnout na stránkách k produktu <a href="http://www.dlink.com">www.dlink.com</a> .
Dansk [Danish]	D-Link Corporation erklærer herved, at dette produkt, tilbehør og software er i overensstemmelse med direktiv 2014/53/EU. Den fulde tekst i EU-overensstemmelseserklæringen og produktfirmware kan wnloades fra produktsiden hos <a href="http://www.dlink.com">www.dlink.com</a> .
Deutsch [German]	Hiermit erklärt die D-Link Corporation, dass dieses Produkt, das Zubehör und die Software der Richtlinie 2014/53/EU entsprechen. Der vollständige Text der Konformitätserklärung der Europäischen Gemeinschaft sowie die Firmware zum Produkt stehen Ihnen zum Herunterladen von der Produktseite im Internet auf <a href="http://www.dlink.com">www.dlink.com</a> zur Verfügung.
Eesti [Estonian]	Käesolevaga kinnitab D-Link Corporation, et see toode, tarvikud ja tarkvara on kooskõlas direktiiviga 2014/53/EL. Euroopa Liidu vastavusdeklaratsiooni täistekst ja toote püsivara on allalaadimiseks saadaval tootelehel <a href="http://www.dlink.com">www.dlink.com</a> .
English	Hereby, D-Link Corporation, declares that this product, accessories, and software are in compliance with directive 2014/53/EU. The full text of the EU Declaration of Conformity and product firmware are available for download from the product page at <a href="http://www.dlink.com">www.dlink.com</a>
Español [Spanish]	Por la presente, D-Link Corporation declara que este producto, accesorios y software cumplen con las directivas 2014/53/UE. El texto completo de la declaración de conformidad de la UE y el firmware del producto están disponibles y se pueden descargar desde la página del producto en <a href="http://www.dlink.com">www.dlink.com</a> .
Ελληνική [Greek]	Με την παρούσα, η D-Link Corporation δηλώνει ότι αυτό το προϊόν, τα αξεσουάρ και το λογισμικό συμμορφώνονται με την Οδηγία 2014/53/ΕΕ. Το πλήρες κείμενο της δήλωσης συμμόρφωσης της ΕΕ και το υλικολογισμικό του προϊόντος είναι διαθέσιμα για λήψη από τη σελίδα του προϊόντος στην τοποθεσία <a href="http://www.dlink.com">www.dlink.com</a> .
Français [French]	Par les présentes, D-Link Corporation déclare que ce produit, ces accessoires et ce logiciel sont conformes aux directives 2014/53/UE. Le texte complet de la déclaration de conformité de l'UE et le icroprogramme du produit sont disponibles au téléchargement sur la page des produits à <a href="http://www.dlink.com">www.dlink.com</a> .
Italiano [Italian]	Con la presente, D-Link Corporation dichiara che questo prodotto, i relativi accessori e il software sono conformi alla direttiva 2014/53/UE. Il testo completo della dichiarazione di conformità UE e il firmware del prodotto sono disponibili per il download dalla pagina del prodotto su <a href="http://www.dlink.com">www.dlink.com</a> .

Latviski [Latvian]	Ar šo uzņēmums D-Link Corporation apliecina, ka šis produkts, piederumi un programmatūra atbilst direktīvai 2014/53/ES. ES atbilstības deklarācijas pilno tekstu un produkta aparātprogrammatūru var lejupielādēt attiecīgā produkta lapā vietnē <a href="http://www.dlink.com">www.dlink.com</a> .
Lietuvių [Lithuanian]	Šiuo dokumentu „D-Link Corporation“ pareiškia, kad šis gaminys, priedai ir programinė įranga atitinka direktyvą 2014/53/ES. Visą ES atitikties deklaracijos tekstą ir gaminio programinę aparatinę įrangą galima atsisiųsti iš gaminio puslapio adresu <a href="http://www.dlink.com">www.dlink.com</a> .
Nederlands [Dutch]	Hierbij verklaart D-Link Corporation dat dit product, accessoires en software voldoen aan de richtlijnen 2014/53/EU. De volledige tekst van de EU conformiteitsverklaring en productfirmware is beschikbaar voor download van de productpagina op <a href="http://www.dlink.com">www.dlink.com</a> .
Malti [Maltese]	Bil-preżenti, D-Link Corporation tiddikjara li dan il-prodott, l-aċċessorji, u s-software huma konformi mad-Direttiva 2014/53/UE. Tista' tniżżel it-test sħiħ tad-dikjarazzjoni ta' konformità tal-UE u l-firmware tal-prodott mill-paġna tal-prodott fuq <a href="http://www.dlink.com">www.dlink.com</a> .
Magyar [Hungarian]	Ezennel a D-Link Corporation kijelenti, hogy a jelen termék, annak tartozékai és szoftvere megfelelnek a 2014/53/EU sz. rendeletnek. Az EU Megfelelőségi nyilatkozat teljes szövege és a termék firmware a termék oldaláról tölthető le a <a href="http://www.dlink.com">www.dlink.com</a> címen.
Polski [Polish]	D-Link Corporation niniejszym oświadcza, że ten produkt, akcesoria oraz oprogramowanie są zgodne z dyrektywami 2014/53/EU. Pełen tekst deklaracji zgodności UE oraz oprogramowanie sprzętowe do produktu można pobrać na stronie produktu w witrynie <a href="http://www.dlink.com">www.dlink.com</a> .
Português [Portuguese]	Desta forma, a D-Link Corporation declara que este produto, os acessórios e o software estão em conformidade com a diretiva 2014/53/UE. O texto completo da declaração de conformidade da UE e do firmware
Slovensko[Slovenian]	Podjetje D-Link Corporation s tem izjavlja, da so ta izdelek, dodatna oprema in programnska oprema skladni z direktivami 2014/53/EU. Celotno besedilo izjave o skladnosti EU in vdelana programska oprema sta na voljo za prenos na strani izdelka na <a href="http://www.dlink.com">www.dlink.com</a> .
Slovensky [Slovak]	Spoločnosť D-Link týmto vyhlasuje, že tento produkt, príslušenstvo a softvér sú v súlade so smernicou 214/53/EÚ. Úplné znenie vyhlásenia EÚ o zhode a firmvéri produktu sú k dispozícii na prevzatie zo stránky produktu <a href="http://www.dlink.com">www.dlink.com</a> .
Suomi [Finnish]	D-Link Corporation täten vakuuttaa, että tämä tuote, lisävarusteet ja ohjelmisto ovat direktiivin 2014/53/EU vaatimusten mukaisia. Täydellinen EU-vaatimustenmukaisuusvakuutus samoin kuin tuotteen laiteohjelmisto ovat ladattavissa osoitteesta <a href="http://www.dlink.com">www.dlink.com</a> .

## Appendix C - Regulatory Information

---

Svenska [Swedish]	D-Link Corporation försäkrar härmed att denna produkt, tillbehör och programvara överensstämmer med direktiv 2014/53/EU. Hela texten med EU-försäkran om överensstämmelse och produkt-firmware kan hämtas från produktsidan på <a href="http://www.dlink.com">www.dlink.com</a> .
Íslenska [Icelandic]	Hér með lýsir D-Link Corporation því yfir að þessi vara, fylgihlutir og hugbúnaður eru í samræmi við tilskipun 2014/53/EB. Sækja má ESB-samræmisýfirlýsinguna í heild sinni og fastbúnað vörunnar af vefsíðu vörunnar á <a href="http://www.dlink.com">www.dlink.com</a> .
Norsk [Norwegian]	Herved erklærer D-Link Corporation at dette produktet, tilbehøret og programvaren er i samsvar med direktivet 2014/53/EU. Den fullstendige teksten i EU-erklæring om samsvar og produktets fastvare er tilgjengelig for nedlasting fra produktsiden på <a href="http://www.dlink.com">www.dlink.com</a> .

### **Warning Statement:**

The power outlet should be near the device and easily accessible.

### **NOTICE OF WIRELESS RADIO LAN USAGE IN THE EUROPEAN COMMUNITY (FOR WIRELESS PRODUCT ONLY):**

- This device is restricted to indoor use when operated in the European Community using channels in the 5.15-5.35 GHz band to reduce the potential for interference.
- This device is a 2.4 GHz wideband transmission system (transceiver), intended for use in all EU member states and EFTA countries. This equipment may be operated in AL, AD, BE, BG, DK, DE, FI, FR, GR, GW, IS, IT, HR, LI, LU, MT, MK, MD, MC, NL, NO, AT, PL, PT, RO, SM, SE, RS, SK, ES, CI, HU, and CY.

#### **Usage Notes:**

- To remain in conformance with European National spectrum usage regulations, frequency and channel limitations will be applied on the products according to the country where the equipment will be deployed.
- This device is restricted from functioning in Ad-hoc mode while operating in 5 GHz. Ad-hoc mode is direct peer-to-peer communication between two client devices without an Access Point.
- Access points will support DFS (Dynamic Frequency Selection) and TPC (Transmit Power Control) functionality as required when operating in 5 GHz band within the EU.
- Please refer to the product manual or datasheet to check whether your product uses 2.4 GHz and/or 5 GHz wireless.

### **HINWEIS ZUR VERWENDUNG VON DRAHTLOS-NETZWERK (WLAN) IN DER EUROPÄISCHEN GEMEINSCHAFT ( NUR FÜR EIN DRAHTLOSES PRODUKT )**

- Der Betrieb dieses Geräts in der Europäischen Gemeinschaft bei Nutzung von Kanälen im 5,15-5,35 GHz Frequenzband ist ausschließlich auf Innenräume beschränkt, um das Interferenzpotential zu reduzieren.
- Bei diesem Gerät handelt es sich um ein zum Einsatz in allen EU-Mitgliedsstaaten und in EFTA-Ländern - ausgenommen Frankreich. Der Betrieb dieses Geräts ist in den folgenden Ländern erlaubt: AL, AD, BE, BG, DK, DE, FI, FR, GR, GW, IS, IT, HR, LI, LU, MT, MK, MD, MC, NL, NO, AT, PL, PT, RO, SM, SE, RS, SK, ES, CI, HU, CY

#### **Gebrauchshinweise:**

- Um den in Europa geltenden nationalen Vorschriften zum Nutzen des Funkspektrums weiterhin zu entsprechen, werden Frequenz und Kanalbeschränkungen, dem jeweiligen Land, in dem das Gerät zum Einsatz kommt, entsprechend, auf die Produkte angewandt.
- Die Funktionalität im Ad-hoc-Modus bei Betrieb auf 5 GHz ist für dieses Gerät eingeschränkt. Bei dem Ad-hoc-Modus handelt es sich um eine Peer-to-Peer-Kommunikation zwischen zwei Client-Geräten ohne einen Access Point.
- Access Points unterstützen die Funktionen DFS (Dynamic Frequency Selection) und TPC (Transmit Power Control) wie erforderlich bei Betrieb auf 5 GHz innerhalb der EU.
- Bitte schlagen Sie im Handbuch oder Datenblatt nach, ob Ihr Gerät eine 2,4 GHz und / oder 5 GHz Verbindung nutzt.

## **AVIS CONCERNANT L'UTILISATION DE LA RADIO SANS FIL LAN DANS LA COMMUNAUTÉ EUROPÉENNE (UNIQUEMENT POUR LES PRODUITS SANS FIL)**

- Cet appareil est limité à un usage intérieur lorsqu'il est utilisé dans la Communauté européenne sur les canaux de la bande de 5,15 à 5,35 GHz afin de réduire les risques d'interférences.
- Cet appareil est un système de transmission à large bande (émetteur-récepteur) de 2,4 GHz, destiné à être utilisé dans tous les États-membres de l'UE et les pays de l'AELE. Cet équipement peut être utilisé dans les pays suivants : AL, AD, BE, BG, DK, DE, FI, FR, GR, GW, IS, IT, HR, LI, LU, MT, MK, MD, MC, NL, NO, AT, PL, PT, RO, SM, SE, RS, SK, ES, CI, HU, CY

### **Notes d'utilisation:**

- Pour rester en conformité avec la réglementation nationale européenne en matière d'utilisation du spectre, des limites de fréquence et de canal seront appliquées aux produits selon le pays où l'équipement sera déployé.
- Cet appareil ne peut pas utiliser le mode Ad-hoc lorsqu'il fonctionne dans la bande de 5 GHz. Le mode Adhoc fournit une communication directe pair à pair entre deux périphériques clients sans point d'accès.
- Les points d'accès prendront en charge les fonctionnalités DFS (Dynamic Frequency Selection) et TPC (Transmit Power Control) au besoin lors du fonctionnement dans la bande de 5 GHz au sein de l'UE.
- Merci de vous référer au guide d'utilisation ou de la fiche technique afin de vérifier si votre produit utilise 2.4 GHz et/ou 5 GHz sans fil.

## **AVISO DE USO DE LA LAN DE RADIO INALÁMBRICA EN LA COMUNIDAD EUROPEA (SOLO PARA EL PRODUCTO INALÁMBRICO)**

- El uso de este dispositivo está restringido a interiores cuando funciona en la Comunidad Europea utilizando canales en la banda de 5,15-5,35 GHz, para reducir la posibilidad de interferencias.
- Este dispositivo es un sistema de transmisión (transceptor) de banda ancha de 2,4 GHz, pensado para su uso en todos los estados miembros de la UE y en los países de la AELC. Este equipo se puede utilizar en AL, AD, BE, BG, DK, DE, FI, FR, GR, GW, IS, IT, HR, LI, LU, MT, MK, MD, MC, NL, NO, AT, PL, PT, RO, SM, SE, RS, SK, ES, CI, HU, CY

### **Notas de uso:**

- Para seguir cumpliendo las normas europeas de uso del espectro nacional, se aplicarán limitaciones de frecuencia y canal en los productos en función del país en el que se pondrá en funcionamiento el equipo.
- Este dispositivo tiene restringido el funcionamiento en modo Ad-hoc mientras funcione a 5 Ghz. El modo Ad-hoc es la comunicación directa de igual a igual entre dos dispositivos cliente sin un punto de acceso.
- Los puntos de acceso admitirán la funcionalidad DFS (Selección de frecuencia dinámica) y TPC (Control de la potencia de transmisión) si es necesario cuando funcionan a 5 Ghz dentro de la UE.
- Por favor compruebe el manual o la ficha de producto para comprobar si el producto utiliza las bandas inalámbricas de 2.4 GHz y/o la de 5 GHz.

### **AVVISO PER L'USO DI LAN RADIO WIRELESS NELLA COMUNITÀ EUROPEA (SOLO PER PRODOTTI WIRELESS)**

- Nella Comunità europea, l'uso di questo dispositivo è limitato esclusivamente agli ambienti interni sui canali compresi nella banda da 5,15 a 5,35 GHz al fine di ridurre potenziali interferenze. Questo dispositivo è un sistema di trasmissione a banda larga a 2,4 GHz (ricetrasmittente), destinato all'uso in tutti gli stati membri dell'Unione europea e nei paesi EFTA.
- Questo dispositivo può essere utilizzato in AL, AD, BE, BG, DK, DE, FI, FR, GR, GW, IS, IT, HR, LI, LU, MT, MK, MD, MC, NL, NO, AT, PL, PT, RO, SM, SE, RS, SK, ES, CI, HU, CY

#### **Note per l'uso**

- Al fine di mantenere la conformità alle normative nazionali europee per l'uso dello spettro di frequenze, saranno applicate limitazioni sulle frequenze e sui canali per il prodotto in conformità alle normative del paese in cui il dispositivo viene utilizzato.
- Questo dispositivo non può essere attivato in modalità Ad-hoc durante il funzionamento a 5 GHz. La modalità Ad-hoc è una comunicazione diretta peer-to-peer fra due dispositivi client senza un punto di accesso.
- I punti di accesso supportano le funzionalità DFS (Dynamic Frequency Selection) e TPC (Transmit Power Control) richieste per operare a 5 GHz nell'Unione europea.
- Ti invitiamo a fare riferimento al manuale del prodotto o alla scheda tecnica per verificare se il tuo prodotto utilizza le frequenze 2,4 GHz e/o 5 GHz.

### **KENNISGEVING VAN DRAADLOOS RADIO LAN-GEbruik IN DE EUROPESE GEMEENSCHAP (ALLEEN VOOR DRAADLOOS PRODUCT)**

- Dit toestel is beperkt tot gebruik binnenshuis wanneer het wordt gebruikt in de Europese Gemeenschap gebruik makend van kanalen in de 5.15-5.35 GHz band om de kans op interferentie te beperken.
- Dit toestel is een 2.4 GHz breedband transmissiesysteem (transceiver) dat bedoeld is voor gebruik in alle EU lidstaten en EFTA landen. Deze uitrusting mag gebruikt worden in AL, AD, BE, BG, DK, DE, FI, FR, GR, GW, IS, IT, HR, LI, LU, MT, MK, MD, MC, NL, NO, AT, PL, PT, RO, SM, SE, RS, SK, ES, CI, HU, CY

#### **Gebruiksaanwijzingen:**

- Om de gebruiksvoorschriften van het Europese Nationale spectrum na te leven, zullen frequentie- en kanaalbeperkingen worden toegepast op de producten volgens het land waar de uitrusting gebruikt zal worden.
- Dit toestel kan niet functioneren in Ad-hoc mode wanneer het gebruikt wordt in 5 GHz. Ad-hoc mode is directe peer-to-peer communicatie tussen twee klantenapparaten zonder een toegangspunt.
- Toegangspunten ondersteunen DFS (Dynamic Frequency Selection) en TPC (Transmit Power Control) functionaliteit zoals vereist bij gebruik in 5 GHz binnen de EU.
- Raadpleeg de handleiding of de datasheet om te controleren of uw product gebruik maakt van 2.4 GHz en/of 5 GHz.

### **SAFETY INSTRUCTIONS**

The following general safety guidelines are provided to help ensure your own personal safety and protect your product from potential damage. Remember to consult the product user instructions for more details.

- Static electricity can be harmful to electronic components. Discharge static electricity from your body (i.e. touching grounded bare metal) before touching the product.
- Do not attempt to service the product and never disassemble the product. For some products with a user replaceable battery, please read and follow the instructions in the user manual.
- Do not spill food or liquid on your product and never push any objects into the openings of your product.
- Do not use this product near water, areas with high humidity, or condensation unless the product is specifically rated for outdoor application.
- Keep the product away from radiators and other heat sources.
- Always unplug the product from mains power before cleaning and use a dry lint free cloth only.

### **SICHERHEITSVORSCHRIFTEN**

Die folgenden allgemeinen Sicherheitsvorschriften dienen als Hilfe zur Gewährleistung Ihrer eigenen Sicherheit und zum Schutz Ihres Produkts. Weitere Details finden Sie in den Benutzeranleitungen zum Produkt.

- Statische Elektrizität kann elektronischen Komponenten schaden. Um Schäden durch statische Aufladung zu vermeiden, leiten Sie elektrostatische Ladungen von Ihrem Körper ab, (z. B. durch Berühren eines geerdeten blanken Metallteils), bevor Sie das Produkt berühren.
- Unterlassen Sie jeden Versuch, das Produkt zu warten, und versuchen Sie nicht, es in seine Bestandteile zu zerlegen. Für einige Produkte mit austauschbaren Akkus lesen Sie bitte das Benutzerhandbuch und befolgen Sie die dort beschriebenen Anleitungen.
- Vermeiden Sie, dass Speisen oder Flüssigkeiten auf Ihr Produkt gelangen, und stecken Sie keine Gegenstände in die Gehäuseschlitze oder -öffnungen Ihres Produkts.
- Verwenden Sie dieses Produkt nicht in unmittelbarer Nähe von Wasser und nicht in Bereichen mit hoher Luftfeuchtigkeit oder Kondensation, es sei denn, es ist speziell zur Nutzung in Außenbereichen vorgesehen und eingestuft.
- Halten Sie das Produkt von Heizkörpern und anderen Quellen fern, die Wärme erzeugen.
- Trennen Sie das Produkt immer von der Stromzufuhr, bevor Sie es reinigen und verwenden Sie dazu ausschließlich ein trockenes fusselfreies Tuch.

### **CONSIGNES DE SÉCURITÉ**

Les consignes générales de sécurité ci-après sont fournies afin d'assurer votre sécurité personnelle et de protéger le produit d'éventuels dommages. Veuillez consulter les consignes d'utilisation du produit pour plus de détails.

- L'électricité statique peut endommager les composants électroniques. Déchargez l'électricité statique de votre corps (en touchant un objet en métal relié à la terre par exemple) avant de toucher le produit.
- N'essayez pas d'intervenir sur le produit et ne le démontez jamais. Pour certains produits contenant une batterie remplaçable par l'utilisateur, veuillez lire et suivre les consignes contenues dans le manuel d'utilisation.
- Ne renversez pas d'aliments ou de liquide sur le produit et n'insérez jamais d'objets dans les orifices.
- N'utilisez pas ce produit à proximité d'un point d'eau, de zones très humides ou de condensation sauf si le produit a été spécifiquement conçu pour une application extérieure.
- Éloignez le produit des radiateurs et autres sources de chaleur.
- Débranchez toujours le produit de l'alimentation avant de le nettoyer et utilisez uniquement un chiffon sec non pelucheux.

### **INSTRUCCIONES DE SEGURIDAD**

Las siguientes directrices de seguridad general se facilitan para ayudarle a garantizar su propia seguridad personal y para proteger el producto frente a posibles daños. No olvide consultar las instrucciones del usuario del producto para obtener más información.

- La electricidad estática puede resultar nociva para los componentes electrónicos. Descargue la electricidad estática de su cuerpo (p. ej., tocando algún metal sin revestimiento conectado a tierra) antes de tocar el producto.
- No intente realizar el mantenimiento del producto ni lo desmonte nunca. Para algunos productos con batería reemplazable por el usuario, lea y siga las instrucciones del manual de usuario.
- No derrame comida o líquidos sobre el producto y nunca deje que caigan objetos en las aberturas del mismo.
- No utilice este producto cerca del agua, en zonas con humedad o condensación elevadas a menos que el producto esté clasificado específicamente para aplicación en exteriores.
- Mantenga el producto alejado de los radiadores y de otras fuentes de calor.
- Desenchufe siempre el producto de la alimentación de red antes de limpiarlo y utilice solo un paño seco sin pelusa.



### **ISTRUZIONI PER LA SICUREZZA**

Le seguenti linee guida sulla sicurezza sono fornite per contribuire a garantire la sicurezza personale degli utenti e a proteggere il prodotto da potenziali danni. Per maggiori dettagli, consultare le istruzioni per l'utente del prodotto.

- L'elettricità statica può essere pericolosa per i componenti elettronici. Scaricare l'elettricità statica dal corpo (ad esempio toccando una parte metallica collegata a terra) prima di toccare il prodotto.
- Non cercare di riparare il prodotto e non smontarlo mai. Per alcuni prodotti dotati di batteria sostituibile dall'utente, leggere e seguire le istruzioni riportate nel manuale dell'utente.
- Non versare cibi o liquidi sul prodotto e non spingere mai alcun oggetto nelle aperture del prodotto.
- Non usare questo prodotto vicino all'acqua, in aree con elevato grado di umidità o soggette a condensa a meno che il prodotto non sia specificatamente approvato per uso in ambienti esterni.
- Tenere il prodotto lontano da caloriferi e altre fonti di calore.
- Scollegare sempre il prodotto dalla presa elettrica prima di pulirlo e usare solo un panno asciutto che non lasci filacce.

### **VEILIGHEIDSINFORMATIE**

De volgende algemene veiligheidsinformatie werd verstrekt om uw eigen persoonlijke veiligheid te waarborgen en uw product te beschermen tegen mogelijke schade. Denk eraan om de gebruikersinstructies van het product te raadplegen voor meer informatie.

- Statische elektriciteit kan schadelijk zijn voor elektronische componenten. Ontlaad de statische elektriciteit van uw lichaam (d.w.z. het aanraken van geaard bloot metaal) voordat u het product aanraakt.
- U mag nooit proberen het product te onderhouden en u mag het product nooit demonteren. Voor sommige producten met door de gebruiker te vervangen batterij, dient u de instructies in de gebruikershandleiding te lezen en te volgen.
- Mors geen voedsel of vloeistof op uw product en u mag nooit voorwerpen in de openingen van uw product duwen.
- Gebruik dit product niet in de buurt van water, gebieden met hoge vochtigheid of condensatie, tenzij het product specifiek geclassificeerd is voor gebruik buitenshuis.
- Houd het product uit de buurt van radiators en andere warmtebronnen.
- U dient het product steeds los te koppelen van de stroom voordat u het reinigt en gebruik uitsluitend een droge pluisvrije doek.

## Disposing of and Recycling Your Product

### ENGLISH

EN



This symbol on the product or packaging means that according to local laws and regulations this product should not be disposed of in household waste but sent for recycling. Please take it to a collection point designated by your local authorities once it has reached the end of its life, some will accept products for free. By recycling the product and its packaging in this manner you help to conserve the environment and protect human health.

### D-Link and the Environment

At D-Link, we understand and are committed to reducing any impact our operations and products may have on the environment. To minimise this impact D-Link designs and builds its products to be as environmentally friendly as possible, by using recyclable, low toxic materials in both products and packaging.

D-Link recommends that you always switch off or unplug your D-Link products when they are not in use. By doing so you will help to save energy and reduce CO2 emissions.

To learn more about our environmentally responsible products and packaging please visit [www.dlinkgreen.com](http://www.dlinkgreen.com).

### DEUTSCH

DE



Dieses Symbol auf dem Produkt oder der Verpackung weist darauf hin, dass dieses Produkt gemäß bestehender örtlicher Gesetze und Vorschriften nicht über den normalen Hausmüll entsorgt werden sollte, sondern einer Wiederverwertung zuzuführen ist. Bringen Sie es bitte zu einer von Ihrer Kommunalbehörde entsprechend amtlich ausgewiesenen Sammelstelle, sobald das Produkt das Ende seiner Nutzungsdauer erreicht hat. Für die Annahme solcher Produkte erheben einige dieser Stellen keine Gebühren. Durch ein auf diese Weise durchgeführtes Recycling des Produkts und seiner Verpackung helfen Sie, die Umwelt zu schonen und die menschliche Gesundheit zu schützen.

### D-Link und die Umwelt

D-Link ist sich den möglichen Auswirkungen seiner Geschäftstätigkeiten und seiner Produkte auf die Umwelt bewusst und fühlt sich verpflichtet, diese entsprechend zu mindern. Zu diesem Zweck entwickelt und stellt D-Link seine Produkte mit dem Ziel größtmöglicher Umweltfreundlichkeit her und verwendet wiederverwertbare, schadstoffarme Materialien bei Produktherstellung und Verpackung.

D-Link empfiehlt, Ihre Produkte von D-Link, wenn nicht in Gebrauch, immer auszuschalten oder vom Netz zu nehmen. Auf diese Weise helfen Sie, Energie zu sparen und CO2-Emissionen zu reduzieren.

Wenn Sie mehr über unsere umweltgerechten Produkte und Verpackungen wissen möchten, finden Sie entsprechende Informationen im Internet unter [www.dlinkgreen.com](http://www.dlinkgreen.com).

**FRANÇAIS****FR**

Ce symbole apposé sur le produit ou son emballage signifie que, conformément aux lois et réglementations locales, ce produit ne doit pas être éliminé avec les déchets domestiques mais recyclé. Veuillez le rapporter à un point de collecte prévu à cet effet par les autorités locales; certains accepteront vos produits gratuitement. En recyclant le produit et son emballage de cette manière, vous aidez à préserver l'environnement et à protéger la santé de l'homme.

**D-Link et l'environnement**

Chez D-Link, nous sommes conscients de l'impact de nos opérations et produits sur l'environnement et nous engageons à le réduire. Pour limiter cet impact, D-Link conçoit et fabrique ses produits de manière aussi écologique que possible, en utilisant des matériaux recyclables et faiblement toxiques, tant dans ses produits que ses emballages.

D-Link recommande de toujours éteindre ou débrancher vos produits D-Link lorsque vous ne les utilisez pas. Vous réaliserez ainsi des économies d'énergie et réduirez vos émissions de CO<sub>2</sub>.

Pour en savoir plus sur les produits et emballages respectueux de l'environnement, veuillez consulter le [www.dlinkgreen.com](http://www.dlinkgreen.com).

**ESPAÑOL****ES**

Este símbolo en el producto o el embalaje significa que, de acuerdo con la legislación y la normativa local, este producto no se debe desechar en la basura doméstica sino que se debe reciclar. Llévelo a un punto de recogida designado por las autoridades locales una vez que ha llegado al fin de su vida útil; algunos de ellos aceptan recogerlos de forma gratuita. Al reciclar el producto y su embalaje de esta forma, contribuye a preservar el medio ambiente y a proteger la salud de los seres humanos.

**D-Link y el medio ambiente**

En D-Link, comprendemos y estamos comprometidos con la reducción del impacto que puedan tener nuestras actividades y nuestros productos en el medio ambiente. Para reducir este impacto, D-Link diseña y fabrica sus productos para que sean lo más ecológicos posible, utilizando materiales reciclables y de baja toxicidad tanto en los productos como en el embalaje.

D-Link recomienda apagar o desenchufar los productos D-Link cuando no se estén utilizando. Al hacerlo, contribuirá a ahorrar energía y a reducir las emisiones de CO<sub>2</sub>.

Para obtener más información acerca de nuestros productos y embalajes ecológicos, visite el sitio [www.dlinkgreen.com](http://www.dlinkgreen.com).

## ITALIANO

IT



La presenza di questo simbolo sul prodotto o sulla confezione del prodotto indica che, in conformità alle leggi e alle normative locali, questo prodotto non deve essere smaltito nei rifiuti domestici, ma avviato al riciclo. Una volta terminato il ciclo di vita utile, portare il prodotto presso un punto di raccolta indicato dalle autorità locali. Alcuni questi punti di raccolta accettano gratuitamente i prodotti da riciclare. Scegliendo di riciclare il prodotto e il relativo imballaggio, si contribuirà a preservare l'ambiente e a salvaguardare la salute umana.

### D-Link e l'ambiente

D-Link cerca da sempre di ridurre l'impatto ambientale dei propri stabilimenti e dei propri prodotti. Allo scopo di ridurre al minimo tale impatto, D-Link progetta e realizza i propri prodotti in modo che rispettino il più possibile l'ambiente, utilizzando materiali riciclabili a basso tasso di tossicità sia per i prodotti che per gli imballaggi.

D-Link raccomanda di spegnere sempre i prodotti D-Link o di scollegarne la spina quando non vengono utilizzati. In questo modo si contribuirà a risparmiare energia e a ridurre le emissioni di anidride carbonica.

Per ulteriori informazioni sui prodotti e sugli imballaggi D-Link a ridotto impatto ambientale, visitate il sito all'indirizzo [www.dlinkgreen.com](http://www.dlinkgreen.com).

## NEDERLANDS

NL



Dit symbool op het product of de verpakking betekent dat dit product volgens de plaatselijke wetgeving niet mag worden weggegooid met het huishoudelijk afval, maar voor recyclage moeten worden ingeleverd. Zodra het product het einde van de levensduur heeft bereikt, dient u het naar een inzamelpunt te brengen dat hiertoe werd aangeduid door uw plaatselijke autoriteiten, sommige autoriteiten accepteren producten zonder dat u hiervoor dient te betalen. Door het product en de verpakking op deze manier te recyclen helpt u het milieu en de gezondheid van de mens te beschermen.

### D-Link en het milieu

Bij D-Link spannen we ons in om de impact van onze handelingen en producten op het milieu te beperken. Om deze impact te beperken, ontwerpt en bouwt D-Link zijn producten zo milieuvriendelijk mogelijk, door het gebruik van recycleerbare producten met lage toxiciteit in product en verpakking.

D-Link raadt aan om steeds uw D-Link producten uit te schakelen of uit de stekker te halen wanneer u ze niet gebruikt. Door dit te doen bespaart u energie en beperkt u de CO<sub>2</sub>-emissies.

Breng een bezoek aan [www.dlinkgreen.com](http://www.dlinkgreen.com) voor meer informatie over onze milieuverantwoorde producten en verpakkingen.

**POLSKI****PL**

Ten symbol umieszczony na produkcie lub opakowaniu oznacza, że zgodnie z miejscowym prawem i lokalnymi przepisami niniejszego produktu nie wolno wyrzucać jak odpady czy śmieci z gospodarstwa domowego, lecz należy go poddać procesowi recyklingu. Po zakończeniu użytkowania produktu, niektóre odpowiednie do tego celu podmioty przyjmą takie produkty nieodpłatnie, dlatego prosimy dostarczyć go do punktu zbiórki wskazanego przez lokalne władze. Poprzez proces recyklingu i dzięki takiemu postępowaniu z produktem oraz jego opakowaniem, pomogą Państwo chronić środowisko naturalne i dbać o ludzkie zdrowie.

**D-Link i środowisko**

D-Link podchodzimy w sposób świadomy do ochrony otoczenia oraz jesteśmy zaangażowani w zmniejszanie wpływu naszych działań i produktów na środowisko naturalne. W celu zminimalizowania takiego wpływu firma D-Link konstruuje i wytwarza swoje produkty w taki sposób, aby były one jak najbardziej przyjazne środowisku, stosując do tych celów materiały nadające się do powtórnego wykorzystania, charakteryzujące się małą toksycznością zarówno w przypadku samych produktów jak i opakowań.

Firma D-Link zaleca, aby Państwo zawsze prawidłowo wyłączali z użytku swoje produkty D-Link, gdy nie są one wykorzystywane. Postępując w ten sposób pozwalają Państwo oszczędzać energię i zmniejszać emisje CO<sub>2</sub>.

Aby dowiedzieć się więcej na temat produktów i opakowań mających wpływ na środowisko prosimy zapoznać się ze stroną Internetową [www.dlinkgreen.com](http://www.dlinkgreen.com).

**ČESKY****CZ**

Tento symbol na výrobku nebo jeho obalu znamená, že podle místně platných předpisů se výrobek nesmí vyhazovat do komunálního odpadu, ale odeslat k recyklaci. Až výrobek doslouží, odneste jej prosím na sběrné místo určené místními úřady k tomuto účelu. Někteřá sběrná místa přijímají výrobky zdarma. Recyklací výrobku i obalu pomáháte chránit životní prostředí i lidské zdraví.

**D-Link a životní prostředí**

Ve společnosti D-Link jsme si vědomi vlivu našich provozů a výrobků na životní prostředí a snažíme se o minimalizaci těchto vlivů. Proto své výrobky navrhujeme a vyrábíme tak, aby byly co nejekologičtější, a ve výrobcích i obalech používáme recyklovatelné a nízkotoxické materiály.

Společnost D-Link doporučuje, abyste své výrobky značky D-Link vypnuli nebo vytáhli ze zásuvky vždy, když je nepoužíváte. Pomůžete tak šetřit energii a snížit emise CO<sub>2</sub>.

Více informací o našich ekologických výrobcích a obalech najdete na adrese [www.dlinkgreen.com](http://www.dlinkgreen.com).

**MAGYAR****HU**

Ez a szimbólum a terméken vagy a csomagoláson azt jelenti, hogy a helyi törvényeknek és szabályoknak megfelelően ez a termék nem semmisíthető meg a háztartási hulladékkal együtt, hanem újrahasznosításra kell küldeni. Kérjük, hogy a termék élettartamának elteltét követően vigye azt a helyi hatóság által kijelölt gyűjtőhelyre. A termékek egyes helyeken ingyen elhelyezhetők. A termék és a csomagolás újrahasznosításával segíti védeni a környezetet és az emberek egészségét.

**A D-Link és a környezet**

A D-Linknél megértjük és elköteleztük magunkat a műveleteink és termékeink környezetre gyakorolt hatásainak csökkentésére. Az ezen hatás csökkentése érdekében a D-Link a lehető leginkább környezetbarát termékeket tervez és gyárt azáltal, hogy újrahasznosítható, alacsony károsanyag-tartalmú termékeket gyárt és csomagolásokat alkalmaz.

A D-Link azt javasolja, hogy mindig kapcsolja ki vagy húzza ki a D-Link termékeket a tápforrásból, ha nem használja azokat. Ezzel segít az energia megtakarításában és a széndioxid kibocsátásának csökkentésében.

Környezetbarát termékeinkről és csomagolásainkról további információkat a [www.dlinkgreen.com](http://www.dlinkgreen.com) weboldalon tudhat meg.

**NORSK****NO**

Dette symbolet på produktet eller forpakningen betyr at dette produktet ifølge lokale lover og forskrifter ikke skal kastes sammen med husholdningsavfall, men leveres inn til gjenvinning. Vennligst ta det til et innsamlingssted anvist av lokale myndigheter når det er kommet til slutten av levetiden. Noen steder aksepteres produkter uten avgift. Ved på denne måten å gjenvinne produktet og forpakningen hjelper du å verne miljøet og beskytte folks helse.

**D-Link og miljøet**

Hos D-Link forstår vi oss på og er forpliktet til å minske innvirkningen som vår drift og våre produkter kan ha på miljøet. For å minimalisere denne innvirkningen designer og lager D-Link produkter som er så miljøvennlig som mulig, ved å bruke resirkulerbare, lav-toksiske materialer både i produktene og forpakningen.

D-Link anbefaler at du alltid slår av eller frakobler D-Link-produkter når de ikke er i bruk. Ved å gjøre dette hjelper du å spare energi og å redusere CO<sub>2</sub>-utslipp.

For mer informasjon angående våre miljøansvarlige produkter og forpakninger kan du gå til [www.dlinkgreen.com](http://www.dlinkgreen.com).

## DANSK

DK



Dette symbol på produktet eller emballagen betyder, at dette produkt i henhold til lokale love og regler ikke må bortskaffes som husholdningsaffald, mens skal sendes til genbrug. Indlever produktet til et indsamlingssted som angivet af de lokale myndigheder, når det er nået til slutningen af dets levetid. I nogle tilfælde vil produktet blive modtaget gratis. Ved at indlevere produktet og dets emballage til genbrug på denne måde bidrager du til at beskytte miljøet og den menneskelige sundhed.

### D-Link og miljøet

Hos D-Link forstår vi og bestræber os på at reducere enhver indvirkning, som vores aktiviteter og produkter kan have på miljøet. For at minimere denne indvirkning designer og producerer D-Link sine produkter, så de er så miljøvenlige som muligt, ved at bruge genanvendelige materialer med lavt giftighedsniveau i både produkter og emballage.

D-Link anbefaler, at du altid slukker eller frakobler dine D-Link-produkter, når de ikke er i brug. Ved at gøre det bidrager du til at spare energi og reducere CO<sub>2</sub>-udledningerne.

Du kan finde flere oplysninger om vores miljømæssigt ansvarlige produkter og emballage på [www.dlinkgreen.com](http://www.dlinkgreen.com).

## SUOMI

FI



Tämä symboli tuotteen pakkauksessa tarkoittaa, että paikallisten lakien ja säännösten mukaisesti tätä tuotetta ei pidä hävittää yleisen kotitalousjätteen seassa vaan se tulee toimittaa kierrätettäväksi. Kun tuote on elinkaarensa päässä, toimita se lähimpään viranomaisten hyväksymään kierrätyspisteeseen. Kierrättämällä käytetyn tuotteen ja sen pakkauksen autat tukemaan sekä ympäristön että ihmisten terveyttä ja hyvinvointia.

### D-Link ja ympäristö

D-Link ymmärtää ympäristönsuojelun tärkeyden ja on sitoutunut vähentämään tuotteistaan ja niiden valmistuksesta ympäristölle mahdollisesti aiheutuvia haittavaikutuksia. Nämä negatiiviset vaikutukset minimoidakseen D-Link suunnittelee ja valmistaa tuotteensa mahdollisimman ympäristöystävällisiksi käyttämällä kierrätettäviä, alhaisia pitoisuuksia haitallisia aineita sisältäviä materiaaleja sekä tuotteissaan että niiden pakkauksissa.

Suosittellemme, että irrotat D-Link-tuotteesi virtalähteestä tai sammutat ne aina, kun ne eivät ole käytössä. Toimimalla näin autat säästämään energiaa ja vähentämään hiilidioksiidipäästöjä.

Lue lisää ympäristöystävällisistä D-Link-tuotteista ja pakkauksistamme osoitteesta [www.dlinkgreen.com](http://www.dlinkgreen.com).

**SVENSKA****SE**

Den här symbolen på produkten eller förpackningen betyder att produkten enligt lokala lagar och föreskrifter inte skall kastas i hushållssoporna utan i stället återvinnas. Ta den vid slutet av dess livslängd till en av din lokala myndighet utsedd uppsamlingsplats, vissa accepterar produkter utan kostnad. Genom att på detta sätt återvinna produkten och förpackningen hjälper du till att bevara miljön och skydda människors hälsa.

**D-Link och miljön**

På D-Link förstår vi och är fast beslutna att minska den påverkan våra verksamheter och produkter kan ha på miljön. För att minska denna påverkan utformar och bygger D-Link sina produkter för att de ska vara så miljövänliga som möjligt, genom att använda återvinningsbara material med låg gifthalt i både produkter och förpackningar.

D-Link rekommenderar att du alltid stänger av eller kopplar ur dina D-Link produkter när du inte använder dem. Genom att göra detta hjälper du till att spara energi och minska utsläpp av koldioxid.

För mer information om våra miljöansvariga produkter och förpackningar [www.dlinkgreen.com](http://www.dlinkgreen.com).

**PORTUGUÊS****PT**

Este símbolo no produto ou embalagem significa que, de acordo com as leis e regulamentações locais, este produto não deverá ser eliminado juntamente com o lixo doméstico mas enviado para a reciclagem. Transporte-o para um ponto de recolha designado pelas suas autoridades locais quando este tiver atingido o fim da sua vida útil, alguns destes pontos aceitam produtos gratuitamente. Ao reciclar o produto e respectiva embalagem desta forma, ajuda a preservar o ambiente e protege a saúde humana.

**A D-Link e o ambiente**

Na D-Link compreendemos e comprometemo-nos com a redução do impacto que as nossas operações e produtos possam ter no ambiente. Para minimizar este impacto a D-Link concebe e constrói os seus produtos para que estes sejam o mais inofensivos para o ambiente possível, utilizando materiais recicláveis e não tóxicos tanto nos produtos como nas embalagens.

A D-Link recomenda que desligue os seus produtos D-Link quando estes não se encontrarem em utilização. Com esta acção ajudará a poupar energia e reduzir as emissões de CO<sub>2</sub>.

Para saber mais sobre os nossos produtos e embalagens responsáveis a nível ambiental visite [www.dlinkgreen.com](http://www.dlinkgreen.com).