

**D-Link *AirPlus* G<sup>TM</sup>**

**DI-524**

**802.11g/2.4GHz  
Wireless Router**

Manual

**D-Link<sup>®</sup>**

**Building Networks for People**

# Contents

Package Contents .....	3
Introduction .....	4
Wireless Basics .....	8
Getting Started .....	11
Using the Configuration Menu .....	12
Networking Basics .....	39
Troubleshooting .....	54
Technical Specifications .....	61
Frequently Asked Questions .....	64
Contacting Technical Support .....	92
Warranty .....	93
Registration .....	96

# Package Contents



## Contents of Package:

- **D-Link AirPlus G DI-524**  
802.11g/2.4GHz Wireless Router
- Power Adapter-DC 5V, 2.5A
- Manual and Warranty on CD
- Quick Installation Guide
- Ethernet Cable (All the DI-524's Ethernet ports are Auto-MDIX)

*Note: Using a power supply with a different voltage rating than the one included with the DI-524 will cause damage and void the warranty for this product.*

If any of the above items are missing, please contact your reseller.

## System Requirements for Configuration:

- Ethernet-Based Cable or DSL Modem
- Computers with Windows, Macintosh, or Linux-based operating systems with an installed Ethernet adapter
- Internet Explorer Version 6.0 or Netscape Navigator Version 6.0 and Above

# Introduction

The D-Link *AirPlus G* DI-524 802.11g/2.4 Ghz Wireless Router is an 802.11g high-performance, wireless router that supports high-speed wireless networking at home, at work or in public places.

Unlike most routers, the DI-524 provides data transfers at up to 54 Mbps (compared to the standard 11 Mbps) when used with other D-Link *AirPlus G* products. The 802.11g standard is backwards compatible with 802.11b products. This means that you do not need to change your entire network to maintain connectivity. You may sacrifice some of 802.11g's speed when you mix 802.11b and 802.11g devices, but you will not lose the ability to communicate when you incorporate the 802.11g standard into your 802.11b network. You may choose to slowly change your network by gradually replacing the 802.11b devices with 802.11g devices .

In addition to offering faster data transfer speeds when used with other 802.11g products, the DI-524 has the newest, strongest, most advanced security features available today. When used with other 802.11g WPA (WiFi Protected Access) and 802.1x compatible products in a network with a RADIUS server, the security features include:

**WPA: Wi-Fi Protected Access** authorizes and identifies users based on a secret key that changes automatically at a regular interval. **WPA uses TKIP (Temporal Key Integrity Protocol)** to change the temporal key every 10,000 packets (a packet is a kind of message transmitted over a network.) This insures much greater security than the standard WEP security. (By contrast, the older WEP encryption required the keys to be changed manually.)


**802.1x: Authentication** is a first line of defense against intrusion. In the Authentication process the server verifies the identity of the client attempting to connect to the network. Unfamiliar clients would be denied access.

For home users that will not incorporate a RADIUS server in their network, the security for the DI-524, used in conjunction with other 802.11g products, will still be much stronger than ever before. Utilizing the **Pre Shared Key mode** of WPA, the DI-524 will obtain a new security key every time it connects to the 802.11g network. You only need to input your encryption information once in the configuration menu. No longer will you have to manually input a new WEP key frequently to ensure security, with the DI-524, you will automatically receive a new key every time you connect, vastly increasing the safety of your communications.

# Connections

All Ethernet Ports (WAN and LAN) are auto MDI/MDIX, meaning you can use either a straight-through or a crossover Ethernet cable.

Pressing the **Reset Button** restores the router to its original factory default settings.

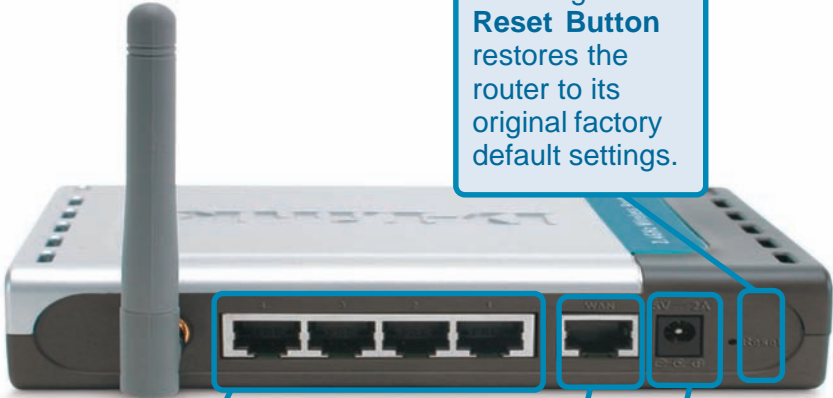


**Auto MDI/MDIX LAN ports** automatically sense the cable type when connecting to Ethernet-enabled computers.

The **Auto MDI/MDIX WAN port** is the connection for the Ethernet cable to the Cable or DSL modem.

Receptor for the **Power Adapter**.

# LEDs

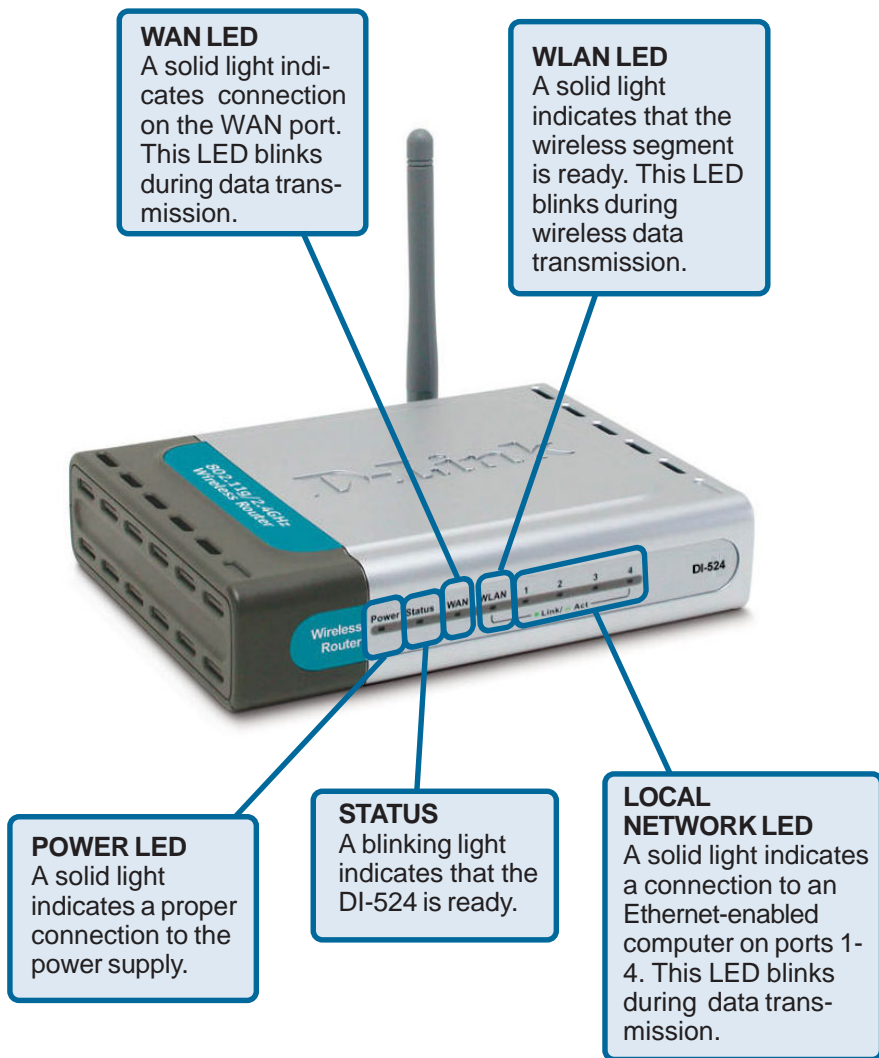

# Features

- Fully compatible with the 802.11g standard to provide a wireless data rate of up to 54Mbps.
- Backwards compatible with the 802.11b standard to provide a wireless data rate of up to 11Mbps.
- **WPA** (Wi Fi Protected Access) authorizes and identifies users based on a secret key that changes automatically at a regular interval, for example:
  - **TKIP** (Temporal Key Integrity Protocol), in conjunction with a RADIUS server, changes the temporal key every 10,000 packets, ensuring greater security.
  - **Pre Shared Key** mode means that the home user, without a RADIUS server, can connect securely via a pre-shared key, vastly improving the safety of communications on the network.
- 802.1x **Authentication** in conjunction with the RADIUS server verifies the identity of would be clients.
- Utilizes **OFDM** technology (**O**rtogonal **F**requency **D**ivision **M**ultiplexing).
- User-friendly configuration and diagnostic utilities.
- Operates in the 2.4GHz frequency range.
- Connects multiple computers to a Broadband (Cable or DSL) modem to share the Internet connection.
- Advanced Firewall features
  - Supports NAT with VPN pass-through, providing added security
  - MAC Filtering
  - IP Filtering
  - URL Filtering
  - Domain Blocking
  - Scheduling
- DHCP server enables all networked computers to automatically receive IP addresses.
- Web-based interface for Managing and Configuring.
- Access Control to manage users on the network.
- Supports special applications that require multiple connections.
- Equipped with 4 10/100 Ethernet ports, 1 WAN port, Auto MDI/MDIX.

# Wireless Basics

D-Link wireless products are based on industry standards to provide easy-to-use and compatible high-speed wireless connectivity within your home, business or public access wireless networks. D-Link wireless products will allow you access to the data you want, when and where you want it. You will be able to enjoy the freedom that wireless networking brings.

A WLAN is a cellular computer network that transmits and receives data with radio signals instead of wires. WLANs are used increasingly in both home and office environments, and public areas such as airports, coffee shops and universities. Innovative ways to utilize WLAN technology are helping people to work and communicate more efficiently. Increased mobility and the absence of cabling and other fixed infrastructure have proven to be beneficial for many users.

Wireless users can use the same applications they use on a wired network. Wireless adapter cards used on laptop and desktop systems support the same protocols as Ethernet adapter cards.

*People use wireless LAN technology for many different purposes:*

**Mobility** - Productivity increases when people have access to data in any location within the operating range of the WLAN. Management decisions based on real-time information can significantly improve worker efficiency.

**Low Implementation Costs** – WLANs are easy to set up, manage, change and relocate. Networks that frequently change can benefit from WLANs ease of implementation. WLANs can operate in locations where installation of wiring may be impractical.

**Installation and Network Expansion** - Installing a WLAN system can be fast and easy and can eliminate the need to pull cable through walls and ceilings. Wireless technology allows the network to go where wires cannot go - even outside the home or office.

**Scalability** – WLANs can be configured in a variety of topologies to meet the needs of specific applications and installations. Configurations are easily changed and range from peer-to-peer networks suitable for a small number of users to larger infrastructure networks to accommodate hundreds or thousands of users, depending on the number of wireless devices deployed.

**Inexpensive Solution** - Wireless network devices are as competitively priced as conventional Ethernet network devices.



## Wireless Basics (*continued*)

### Standards-Based Technology

The DI-524 Wireless Broadband Router utilizes the new **802.11g** standard.

The IEEE **802.11g** standard is an extension of the 802.11b standard. It increases the data rate up to 54 Mbps within the 2.4GHz band, utilizing **OFDM technology**.

This means that in most environments, within the specified range of this device, you will be able to transfer large files quickly or even watch a movie in MPEG format over your network without noticeable delays. This technology works by transmitting high-speed digital data over a radio wave utilizing **OFDM (Orthogonal Frequency Division Multiplexing)** technology. **OFDM** works by splitting the radio signal into multiple smaller sub-signals that are then transmitted simultaneously at different frequencies to the receiver. **OFDM** reduces the amount of **crosstalk** (interference) in signal transmissions.

The DI-524 is backwards compatible with 802.11b devices. This means that if you have an existing 802.11b network, the devices in that network will be compatible with 802.11g devices at speeds of up to 11Mbps in the 2.4GHz range.

## Wireless Basics *(continued)*


### Installation Considerations

The D-Link *AirPlus G* DI-524 lets you access your network, using a wireless connection, from virtually anywhere within its operating range. Keep in mind, however, that the number, thickness and location of walls, ceilings, or other objects that the wireless signals must pass through, may limit the range. Typical ranges vary depending on the types of materials and background RF (radio frequency) noise in your home or business. The key to maximizing wireless range is to follow these basic guidelines:

- 1 Keep the number of walls and ceilings between the DI-524 and other network devices to a minimum - each wall or ceiling can reduce your D-Link wireless product's range from 3-90 feet (1-30 meters). Position your devices so that the number of walls or ceilings is minimized.
- 2 Be aware of the direct line between network devices. A wall that is 1.5 feet thick (.5 meters), at a 45-degree angle appears to be almost 3 feet (1 meter) thick. At a 2-degree angle it looks over 42 feet (14 meters) thick! Position devices so that the signal will travel straight through a wall or ceiling (instead of at an angle) for better reception.
- 3 Building Materials can impede the wireless signal - a solid metal door or aluminum studs may have a negative effect on range. Try to position wireless devices and computers with wireless adapters so that the signal passes through drywall or open doorways and not other materials.
- 4 Keep your product away (at least 3-6 feet or 1-2 meters) from electrical devices or appliances that generate extreme RF noise.

# Getting Started

## Setting up a Wireless Infrastructure Network

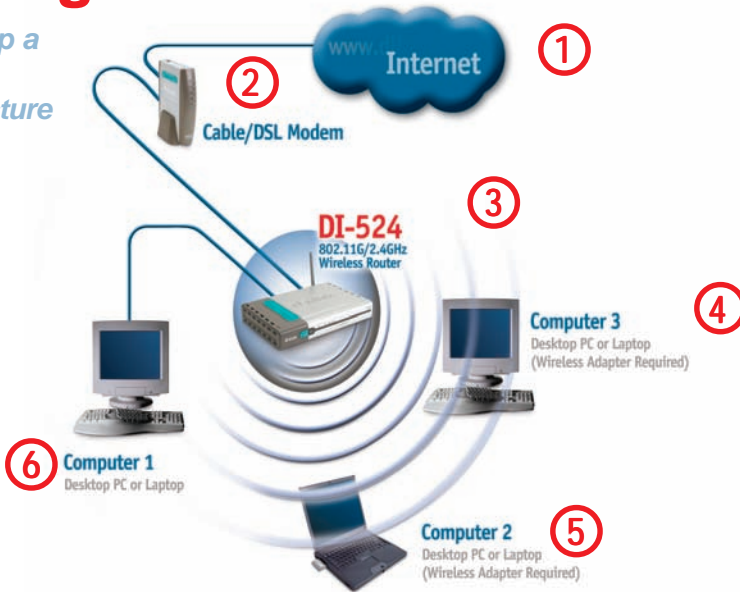

Please remember that **D-Link AirPlus G** wireless devices are pre-configured to connect together, right out of the box, with their default settings.

**For a typical wireless setup at home (as shown above), please do the following:**

- 1** You will need broadband Internet access (a Cable or DSL-subscriber line into your home or office).
- 2** Consult with your Cable or DSL provider for proper installation of the modem.
- 3** Connect the Cable or DSL modem to the DI-524 Wireless Broadband Router (see the printed Quick Installation Guide included with your router).
- 4** If you are connecting a desktop computer to your network, install the D-Link AirPlus G DWL-G510 wireless PCI adapter into an available PCI slot on your desktop computer. You may also install the DWL-G520, or the DWL-520. (See the printed Quick Installation Guide included with the network adapter.)
- 5** Install the D-Link DWL-G630 wireless Cardbus adapter into a laptop computer. (See the printed Quick Installation Guide included with the DWL-G630.)
- 6** Install the D-Link DFE-530TX+ adapter into a desktop computer. The four Ethernet LAN ports of the DI-524 are Auto MDI/MDIX and will work with both Straight-Through and Cross-Over cable. (See the printed Quick Installation Guide included with the DFE-530TX+.)

# Using the Configuration Menu

Whenever you want to configure your network or the DI-524, you can access the Configuration Menu by opening the web-browser and typing in the IP Address of the DI-524. The DI-524 default IP Address is shown at right:

- Open the web browser
- Type in the **IP Address** of the Router (<http://192.168.0.1>)


*Note: if you have changed the default IP Address assigned to the DI-524, make sure to enter the correct IP Address.*

- Type **admin** in the **User Name** field
- Leave the **Password** blank
- Click **OK**



## Home > Wizard

The Home>Wizard screen will appear. Please refer to the *Quick Installation Guide* for more information regarding the Setup Wizard.

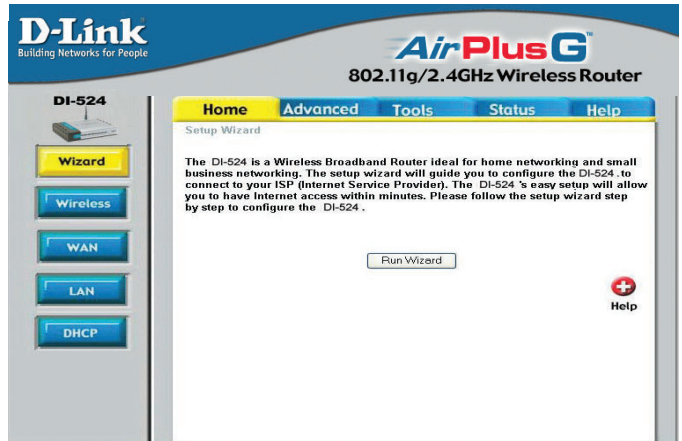

These buttons appear on most of the configuration screens in this section. Please click on the appropriate button at the bottom of each screen after you have made a configuration change.



**Apply**

Clicking **Apply** will save changes made to the page.



**Cancel**

Clicking **Cancel** will clear changes made to the page.



**Help**

Clicking **Help** will bring up helpful information regarding the page.




**Restart**

Clicking **Restart** will restart the router. (Necessary for some changes.)

# Using the Configuration Menu (continued)

## Home > Wireless

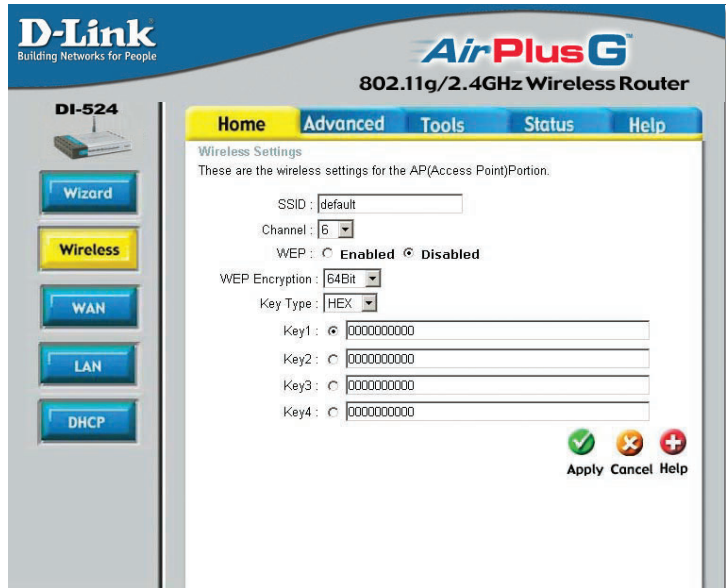

### SSID-

Service Set Identifier (SSID) is the name designated for a specific wireless local area network (WLAN). The SSID's factory default setting is **default**. The SSID can be easily changed to connect to an existing wireless network or to establish a new wireless network.

### Channel-

**6** is the default channel. All devices on the network must share the same channel. (Note: The wireless adapters will automatically scan and match the wireless setting.)

### WEP-

Wired Equivalent Privacy (WEP) is a wireless security protocol for Wireless Local Area Networks (WLAN). WEP provides security by encrypting the data that is sent over the WLAN. Select **Enabled** or **Disabled**. **Disabled** is the default setting. (Note: If you enable encryption on the DI-524 make sure to also enable encryption on all the wireless clients or wireless connection will not be established.)

### WEP Encryption-

Select the level of encryption desired: 64-bit, or 128-bit.

### Key Type-


Select **HEX** or **ASCII**.

### Keys 1-4-

Input up to 4 WEP keys; select the one you wish to use.

# Using the Configuration Menu (continued)

## Home > WAN > Dynamic IP Address

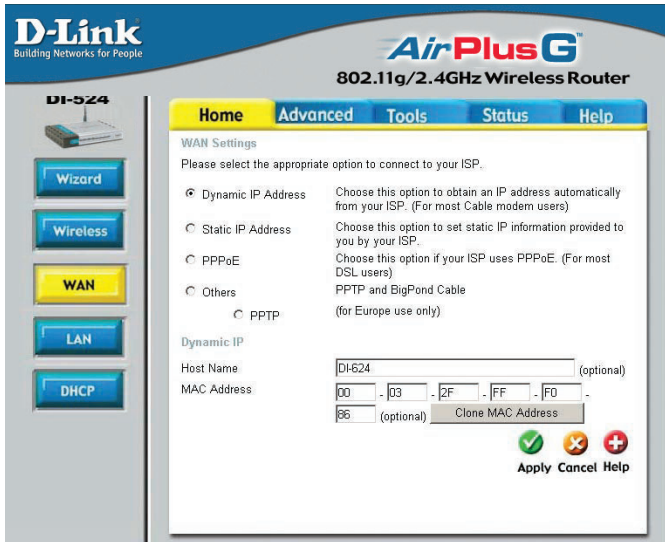

### Dynamic IP Address-

Choose Dynamic IP Address to obtain IP Address information automatically from your ISP. Select this option if your ISP does not give you any IP numbers to use. This option is commonly used for Cable modem services.

### Host Name-

The Host Name is optional but may be required by some ISPs. The default host name is the device name of the Router and may be changed.

### MAC Address-

The default MAC Address is set to the WAN's physical interface MAC address on the Broadband Router. It is not recommended that you change the default MAC address unless required by your ISP.

### Clone MAC Address-

The default MAC address is set to the WAN's physical interface MAC address on the Broadband Router. You can use the "Clone MAC Address" button to copy the MAC address of the Ethernet Card installed by your ISP and replace the WAN MAC address with the MAC address of the router. It is not recommended that you change the default MAC address unless required by your ISP.

# Using the Configuration Menu (continued)

Home > WAN > Static IP Address

The screenshot shows the D-Link configuration interface for a DI-524 AirPlus G 802.11g/2.4GHz Wireless Router. The page is titled 'Home > WAN > Static IP Address'. On the left, there is a navigation menu with buttons for Wizard, Wireless, WAN (highlighted in yellow), LAN, and DHCP. The main content area has tabs for Home, Advanced, Tools, Status, and Help. Under the 'Home' tab, the 'WAN Settings' section is active. It asks the user to select an option to connect to their ISP. The 'Static IP Address' option is selected with a radio button. Below this, there are input fields for IP Address, Subnet Mask, ISP Gateway Address, Primary DNS Address, and Secondary DNS Address, all containing '0.0.0.0'. The IP Address field is noted as '(assigned by your ISP)' and the Secondary DNS Address field as '(optional)'. At the bottom right, there are three buttons: a green checkmark for 'Apply', a red 'X' for 'Cancel', and a red plus sign for 'Help'.

## Static IP Address-

Choose Static IP Address if all WAN IP information is provided to you by your ISP. You will need to enter in the IP address, subnet mask, gateway address, and DNS address(es) provided to you by your ISP. Each IP address entered in the fields must be in the appropriate IP form, which are four octets separated by a dot (x.x.x.x). The Router will not accept the IP address if it is not in this format.

## IP Address-

Input the public IP Address provided by your ISP.

## Subnet Mask-

Input your Subnet mask. (All devices in the network must have the same subnet mask.)

## ISP

## Gateway Address-

Input the public IP address of the ISP to which you are connecting.

## Primary

## DNS Address-

Input the primary DNS (Domain Name Server) IP address provided by your ISP.

## Secondary

## DNS Address-

This is optional.

# Using the Configuration Menu (continued)

Please be sure to remove any existing PPPoE client software installed on your computers.

Choose PPPoE (Point to Point Protocol over Ethernet) if your ISP uses a PPPoE connection. Your ISP will provide you with a username and password. This option is typically used for DSL services. Select Dynamic PPPoE to obtain an IP address automatically for your PPPoE connection. Select Static PPPoE to use a static IP address for your PPPoE connection.

## Home > WAN > PPPoE



### PPPoE-

Choose this option if your ISP uses PPPoE. (Most DSL users will select this option.)

**Dynamic PPPoE-** receive an IP Address automatically from your ISP.

**Static PPPoE-**you have an assigned (static) IP Address.

### User Name-

Your PPPoE username provided by your ISP.

### Retype Password-

Re-enter the PPPoE password

### Service Name-

Enter the Service Name provided by your ISP (optional).

### IP Address-

This option is only available for Static PPPoE. Enter the static IP Address for the PPPoE connection.

### Primary DNS Address-

Primary DNS IP address provided by our ISP

### Secondary DNS Address-

This option is only available for Static PPPoE. Enter the static IP Address for the PPPoE connection.

(Continued on the next page)



# Using the Configuration Menu (continued)

Home > WAN > PPPoE *continued*

**Maximum Idle Time-**

Enter a maximum idle time during which Internet connection is maintained during inactivity. To disable this feature, enable *Auto-reconnect*.

**MTU-**

Maximum Transmission Unit-1492 is the default setting-you may need to change the MTU for optimal performance with your specific ISP.

**Auto-reconnect-**

If enabled, the DI-524 will automatically connect to your ISP after your system is restarted or if the PPPoE connection is dropped.

Home > LAN



LAN is short for Local Area Network. This is considered your internal network. These are the IP settings of the LAN interface for the DI-524. These settings may be referred to as Private settings. You may change the LAN IP address if needed. The LAN IP address is private to your internal network and cannot be seen on the Internet.

**IP Address-**

The IP address of the LAN interface. The default IP address is: **192.168.0.1**.

**Subnet Mask-**

The subnet mask of the LAN interface. The default subnet mask is **255.255.255.0**.

**Local Domain-**

This field is optional. Enter in the local domain name.

# Using the Configuration Menu (continued)

Home > DHCP

**D-Link**  
Building Networks for People

**AirPlus G™**  
802.11g/2.4GHz Wireless Router

**DI-524**

Wizard  
Wireless  
WAN  
LAN  
DHCP

Home Advanced Tools Status Help

DHCP Server  
The DI-524 can be setup as a DHCP Server to distribute IP addresses to the LAN network.

DHCP Server  Enabled  Disabled

Starting IP Address 192.168.0.100

Ending IP Address 192.168.0.199

Lease Time 1 Week

Apply Cancel Help

DHCP Client Table

Host Name	IP Address	MAC Address	Expired Time
unknown	192.168.0.101	00-50-BA-7D-E5-E1	Jan/03/2003 17:09:05

**DHCP** stands for *Dynamic Host Control Protocol*. The DI-524 has a built-in DHCP server. The DHCP Server will automatically assign an IP address to the computers on the LAN/private network. Be sure to set your computers to be DHCP clients by setting their TCP/IP settings to “Obtain an IP Address Automatically.” When you turn your computers on, they will automatically load the proper TCP/IP settings provided by the DI-524. The DHCP Server will automatically allocate an unused IP address from the IP address pool to the requesting computer. You must specify the starting and ending address of the IP address pool.

**DHCP Server-** Select **Enabled** or **Disabled**. The **default** setting is **Enabled**.

**Starting IP Address-** The starting IP address for the DHCP server’s IP assignment.

**Ending IP Address-** The ending IP address for the DHCP server’s IP assignment.

**Lease Time-** The length of time for the IP address lease. Enter the Lease time. The default setting is one hour.

# Using the Configuration Menu (continued)

## Advanced > Virtual Server

**D-Link**  
Building Networks for People

**AirPlus G™**  
802.11g/2.4GHz Wireless Router

DI-524

Virtual Server

Applications

Filters

Firewall

DMZ

Performance

Home Advanced Tools Status Help

Virtual Server

Virtual Server is used to allow Internet users access to LAN services.

Enabled  Disabled

Name  Clear

Private IP

Protocol Type

Private Port

Public Port

Schedule  Always

From time  :  AM to  :  AM

day  to

Virtual Servers List

Name	Private IP	Protocol	Schedule	Apply	Cancel	Help
<input type="checkbox"/> Virtual Server FTP	0.0.0.0	TCP 21/21	always			
<input type="checkbox"/> Virtual Server HTTP	0.0.0.0	TCP 80/80	always			
<input type="checkbox"/> Virtual Server HTTPS	0.0.0.0	TCP 443/443	always			
<input type="checkbox"/> Virtual Server DNS	0.0.0.0	UDP 53/53	always			

The DI-524 can be configured as a virtual server so that remote users accessing Web or FTP services via the public IP address can be automatically redirected to local servers in the LAN (Local Area Network).

The DI-524 firewall feature filters out unrecognized packets to protect your LAN network so all computers networked with the DI-524 are invisible to the outside world. If you wish, you can make some of the LAN computers accessible from the Internet by enabling *Virtual Server*. Depending on the requested service, the DI-524 redirects the external service request to the appropriate server within the LAN network.

The DI-524 is also capable of port-redirection meaning incoming traffic to a particular port may be redirected to a different port on the server computer.

Each virtual service that is created will be listed at the bottom of the screen in the Virtual Servers List. There are pre-defined virtual services already in the table. You may use them by enabling them and assigning the server IP to use that particular virtual service.

# Using the Configuration Menu (continued)

## Advanced > Virtual Server *continued*

<b>Virtual Server-</b>	Select <b>Enabled</b> or <b>Disabled</b> .
<b>Name-</b>	Enter the name referencing the virtual service.
<b>Private IP-</b>	The server computer in the LAN (Local Area Network) that will be providing the virtual services.
<b>Protocol Type-</b>	The protocol used for the virtual service.
<b>Private Port-</b>	The port number of the service used by the Private IP computer.
<b>Public Port-</b>	The port number on the WAN (Wide Area Network) side that will be used to access the virtual service.
<b>Schedule-</b>	The schedule of time when the virtual service will be enabled. The schedule may be set to <b>Always</b> , which will allow the particular service to always be enabled. If it is set to <b>Time</b> , select the time frame for the service to be enabled. If the system time is outside of the scheduled time, the service will be disabled.

**Example #1:** If you have a Web server that you wanted Internet users to access at all times, you would need to enable it. Web (HTTP) server is on LAN (Local Area Network) computer 192.168.0.25. HTTP uses port 80, TCP.  
Name: Web Server  
Private IP: 192.168.0.25  
Protocol Type: TCP  
Private Port: 80  
Public Port: 80  
Schedule: always

# Using the Configuration Menu (continued)

## Advanced > Virtual Server *continued*

### Virtual Servers List

Name	Private IP	Protocol	Schedule	
<input checked="" type="checkbox"/> Virtual Server HTTP	192.168.0.25	TCP 80/80	always	 



Click on this icon to edit the virtual service



Click on this icon to delete the virtual service

### Example #2:

If you have an FTP server that you wanted Internet users to access by WAN port 2100 and only during the weekends, you would need to enable it as such. FTP server is on LAN computer 192.168.0.30. FTP uses port 21, TCP.

Name: FTP Server  
Private IP: 192.168.0.30  
Protocol Type: TCP  
Private Port: 21  
Public Port: 2100

Schedule: From: 01:00AM to 01:00AM, Sat to Sun

All Internet users who want to access this FTP Server must connect to it from port 2100. This is an example of port redirection and can be useful in cases where there are many of the same servers on the LAN network.

# Using the Configuration Menu (continued)

## Advanced > Applications

The screenshot shows the configuration page for Special Applications on a D-Link DI-524 router. The page is titled "Special Application" and includes a "Special Application is used to run applications that require multiple connections." section. There are radio buttons for "Enabled" and "Disabled". Below this are input fields for "Name", "Trigger Port", "Trigger Type" (a dropdown menu), "Public Port", and "Public Type" (a dropdown menu). A "Clear" button is next to the Name field. At the bottom right of the form area are "Apply", "Cancel", and "Help" buttons. Below the form is a "Special Applications List" table with columns for "NAME", "Trigger", and "Public". The table lists several predefined applications with checkboxes and edit/delete icons.

NAME	Trigger	Public	
<input type="checkbox"/> Battle.net	6112	6112	
<input type="checkbox"/> Dialpad	7175	51200-51201,51210	
<input type="checkbox"/> ICU II	2019	2000-2038,2050-2051,2069,2085,3010-3030	
<input type="checkbox"/> MSN Gaming Zone	47624	2300-2400,28800-29000	
<input type="checkbox"/> PC-to-Phone	12053	12120,12122,24150-24220	
<input type="checkbox"/> Quick Time 4	554	6970-6999	

Some applications require multiple connections, such as Internet gaming, video conferencing, Internet telephony and others. These applications have difficulties working through NAT (Network Address Translation). Special Applications makes some of these applications work with the DI-524. If you need to run applications that require multiple connections, specify the port normally associated with an application in the "Trigger Port" field, select the protocol type as TCP or UDP, then enter the public ports associated with the trigger port to open them for inbound traffic.

The DI-524 provides some predefined applications in the table on the bottom of the web page. Select the application you want to use and enable it.

**Note!** Only one PC can use each Special Application tunnel.

- Name-** This is the name referencing the special application.
- Trigger Port-** This is the port used to trigger the application. It can be either a single port or a range of ports.
- Trigger Type-** This is the protocol used to trigger the special application.
- Public Port-** This is the port number on the WAN side that will be used to access the application. You may define a single port or a range of ports. You can use a comma to add multiple ports or port ranges.
- Public Type-** This is the protocol used for the special application.

# Using the Configuration Menu (continued)

## Advanced > Filters > IP Filters

The screenshot shows the configuration interface for the D-Link DI-524 AirPlus G 802.11g/2.4GHz Wireless Router. The page is titled "Advanced > Filters > IP Filters". The left sidebar contains navigation buttons for "Virtual Server", "Applications", "Filters" (highlighted in yellow), "Firewall", "DMZ", and "Performance". The main content area has tabs for "Home", "Advanced", "Tools", "Status", and "Help".

**Filters**  
Filters are used to allow or deny LAN users from accessing the Internet.

IP Filters     URL Blocking  
 MAC Filters     Domain Blocking

**IP Filters**  
Use IP Filters to deny LAN IP addresses access to the Internet.

Enabled     Disabled   

IP  -

Port  -

Protocol Type

Schedule  Always

From time  :  AM to  :  AM  
day  to

IP Filter List			
	IP Range	Protocol	Schedule
<input type="checkbox"/>	*	TCP 20-21	always
<input type="checkbox"/>	*	TCP 80	always

Filters are used to deny or allow LAN (Local Area Network) computers from accessing the Internet. The DI-524 can be setup to deny internal computers by their IP or MAC addresses. The DI-524 can also block users from accessing restricted web sites.

### IP Filters-

Use IP Filters to deny LAN IP addresses from accessing the Internet. You can deny specific port numbers or all ports for the specific IP address.

### IP-

The IP address of the LAN computer that will be denied access to the Internet.

### Port-

The single port or port range that will be denied access to the Internet.

### Protocol Type-

Select the protocol type.

### Schedule-

This is the schedule of time when the IP Filter will be enabled.

# Using the Configuration Menu (continued)

## Advanced > Filters > URL Blocking

The screenshot shows the configuration interface for a D-Link DI-524 AirPlus G 802.11g/2.4GHz Wireless Router. The left sidebar contains navigation buttons for Virtual Server, Applications, Filters (highlighted in yellow), Firewall, DMZ, and Performance. The main content area is titled 'Filters' and includes a sub-section for 'URL Blocking'. Under 'Filters', there are radio buttons for IP Filters, MAC Filters, URL Blocking (selected), and Domain Blocking. The 'URL Blocking' section has radio buttons for Enabled (selected) and Disabled. Below this is a text input field containing 'aaaa' and a dropdown menu showing 'unicom'. A 'Delete' button is next to the dropdown. At the bottom right, there are three icons: a green checkmark for 'Apply', a red X for 'Cancel', and a red plus sign for 'Help'.

URL Blocking is used to deny LAN computers from accessing specific web sites by the URL. A URL is a specially formatted text string that defines a location on the Internet. If any part of the URL contains the blocked word, the site will not be accessible and the web page will not display. To use this feature, enter the text string to be blocked and click **Apply**. The text to be blocked will appear in the list. To delete the text, just highlight it and click **Delete**.

### Filters-

Select the filter you wish to use; in this case, **URL Blocking** was chosen.

### URL Blocking-

Select **Enabled** or **Disabled**.

### Keywords-

Block URLs which contain keywords listed below. Enter the keywords in this space.



# Using the Configuration Menu (continued)

## Advanced > Filters > MAC Filters

The screenshot shows the configuration interface for a D-Link DI-524 AirPlus G 802.11g/2.4GHz Wireless Router. The page is titled "Advanced > Filters > MAC Filters". The left sidebar contains navigation buttons for Virtual Server, Applications, Filters (highlighted in yellow), Firewall, DMZ, and Performance. The main content area has tabs for Home, Advanced (selected), Tools, Status, and Help. Under the "Filters" section, there are radio buttons for IP Filters, MAC Filters (selected), URL Blocking, and Domain Blocking. The "MAC Filters" section includes a description, radio buttons for Disabled MAC Filters, Only allow computers with MAC address listed below to access the network (selected), and Only deny computers with MAC address listed below to access the network. Below this are input fields for Name (MACfilter 1), MAC Address (00 - 80 - c0 - a1 - 23 - 65), and DHCP Client (Clone). At the bottom, there is a "MAC Filter List" table with columns for Name and MAC Address, and buttons for Apply, Cancel, and Help.

Use MAC (Media Access Control) Filters to allow or deny LAN (Local Area Network) computers by their MAC addresses from accessing the Network. You can either manually add a MAC address or select the MAC address from the list of clients that are currently connected to the Broadband Router.

### Filters-

Select the filter you wish to use; in this case, **MAC filters** was chosen.

### MAC Filters-

Choose **Disable** MAC filters; **allow** MAC addresses listed below; or **deny** MAC addresses listed below.

### Name-

Enter the name here.

### MAC Address-

Enter the MAC Address.

### DHCP Client-

Select a DHCP client from the pull-down list; click **Clone** to copy that MAC Address.