

# USER MANUAL

DIR-605

VERSION 1.0



**D-Link**<sup>®</sup>

**WIRELESS**

# Table of Contents

<b>Package Contents</b> .....	<b>4</b>	<b>DHCP Server Settings</b> .....	<b>31</b>
System Requirements .....	4	Time and Date .....	32
Features .....	5	Parental Control .....	33
Hardware Overview .....	6	Port Forwarding .....	34
Connections.....	6	Application Rules .....	35
LEDs.....	7	Access Control.....	36
<b>Installation</b> .....	<b>8</b>	Firewall & DMZ .....	37
Before you Begin .....	8	Advanced Wireless .....	38
Wireless Installation Considerations.....	9	Advanced Network.....	39
Connect to Cable/DSL/Satellite Modem .....	10	Device Administration .....	40
Connect to Another Router.....	11	Save and Restore .....	41
<b>Configuration</b> .....	<b>13</b>	Firmware Update .....	42
Web-based Configuration Utility .....	13	DDNS Setting .....	43
Setup Wizard .....	14	System Check.....	44
Internet Setup .....	18	Schedules .....	45
Static (assigned by ISP) .....	18	Log Settings.....	46
Dynamic (Cable) .....	19	Device Info.....	47
PPPoE (DSL) .....	20	Log.....	48
PPTP .....	21	Statistics .....	49
L2TP .....	22	Wireless .....	50
Dual Access (for Russia only).....	23	Help .....	51
Wireless Setup.....	24	<b>Wireless Security</b> .....	<b>52</b>
LAN Setup .....	30	What is WEP? .....	52

Configure WEP .....	53	Tips .....	90
What is WPA? .....	54	Wireless Modes .....	91
Configure WPA-PSK and WPA2-PSK .....	55	<b>Networking Basics</b> .....	<b>92</b>
Configure WPA/WPA2-PSK .....	56	Check your IP address .....	92
Configure WPA, WPA2, and WPA/WPA2 (RADIUS): ..	57	Statically Assign an IP address .....	93
<b>Connect to a Wireless Network</b> .....	<b>58</b>	<b>Technical Specifications</b> .....	<b>94</b>
Using Windows® XP .....	58	<b>Contacting Technical Support</b> .....	<b>96</b>
Configure WEP .....	59	<b>Warranty</b> .....	<b>97</b>
Configure WPA-PSK .....	61	<b>Registration</b> .....	<b>102</b>
<b>Setting Up Wi-Fi Protection</b> .....	<b>63</b>		
<b>(WCN 2.0 in Windows Vista)</b> .....	<b>63</b>		
Initial Router Configuration for Wi-Fi Protection .....	63		
Setting Up a Configured Router .....	64		
<b>Changing the Computer Name and Joining a Workgroup</b> .....	<b>65</b>		
<b>Configuring the IP Address in Vista</b> .....	<b>67</b>		
<b>Setting Up a Connection or Network Wirelessly</b> ....	<b>70</b>		
<b>Connecting to a Secured Wireless Network (WEP, WPA-PSK &amp; WPA2-PSK)</b> .....	<b>75</b>		
<b>Connecting to an Unsecured Wireless Network</b> .....	<b>79</b>		
<b>Troubleshooting</b> .....	<b>83</b>		
<b>Wireless Basics</b> .....	<b>87</b>		
What is Wireless? .....	88		

# Package Contents

- D-Link DIR-605 Wireless Router
- Power Adapter
- Ethernet Cable
- Manual and Warranty on CD

**Note:** Using a power supply with a different voltage rating than the one included with the DIR-605 will cause damage and void the warranty for this product.

**Note:** Always attach the power cord plug to the power supply, before inserting the power cord and connected power supply to the wall outlet.



# System Requirements

- Ethernet-based Cable or DSL Modem
- Computers with Windows®, Macintosh®, or Linux-based operating systems with an installed Ethernet adapter
- Internet Explorer Version 6.0 or Netscape Navigator™ Version 6.0 and above (for configuration)

# Features

- **Faster Wireless Networking** - The DIR-605 provides up to 300Mbps\* wireless connection with other 802.11n wireless clients. This capability allows users to participate in real-time activities online, such as video streaming, online gaming, and real-time audio.
- **Compatible with 802.11b and 802.11g Devices** - The DIR-605 is still fully compatible with the IEEE 802.11b and IEEE 802.11g standard, so it can connect with existing 802.11b and IEEE 802.11g PCI, USB and Cardbus adapters.
- **Advanced Firewall Features** - The Web-based user interface displays a number of advanced network management features including:
  - **Content Filtering** - Easily applied content filtering based on MAC Address, URL, and/or Domain Name.
  - **Filter Scheduling** - These filters can be scheduled to be active on certain days or for a duration of hours or minutes.
  - **Secure Multiple/Concurrent Sessions** - The DIR-605 can pass through VPN sessions. It supports multiple and concurrent IPsec and PPTP sessions, so users behind the DIR-605 can securely access corporate networks.
- **User-friendly Setup Wizard** - Through its easy-to-use Web-based user interface, the DIR-605 lets you control what information is accessible to those on the wireless network, whether from the Internet or from your company's server. Configure your router to your specific settings within minutes.

\* Maximum wireless signal rate derived from IEEE Standard 802.11g and Draft 802.11n specifications. Actual data throughput will vary. Network conditions and environmental factors, including volume of network traffic, building materials and construction, and network overhead, lower actual data throughput rate. Environmental conditions will adversely affect wireless signal range.


# Hardware Overview

## Connections



# Hardware Overview

## LEDs

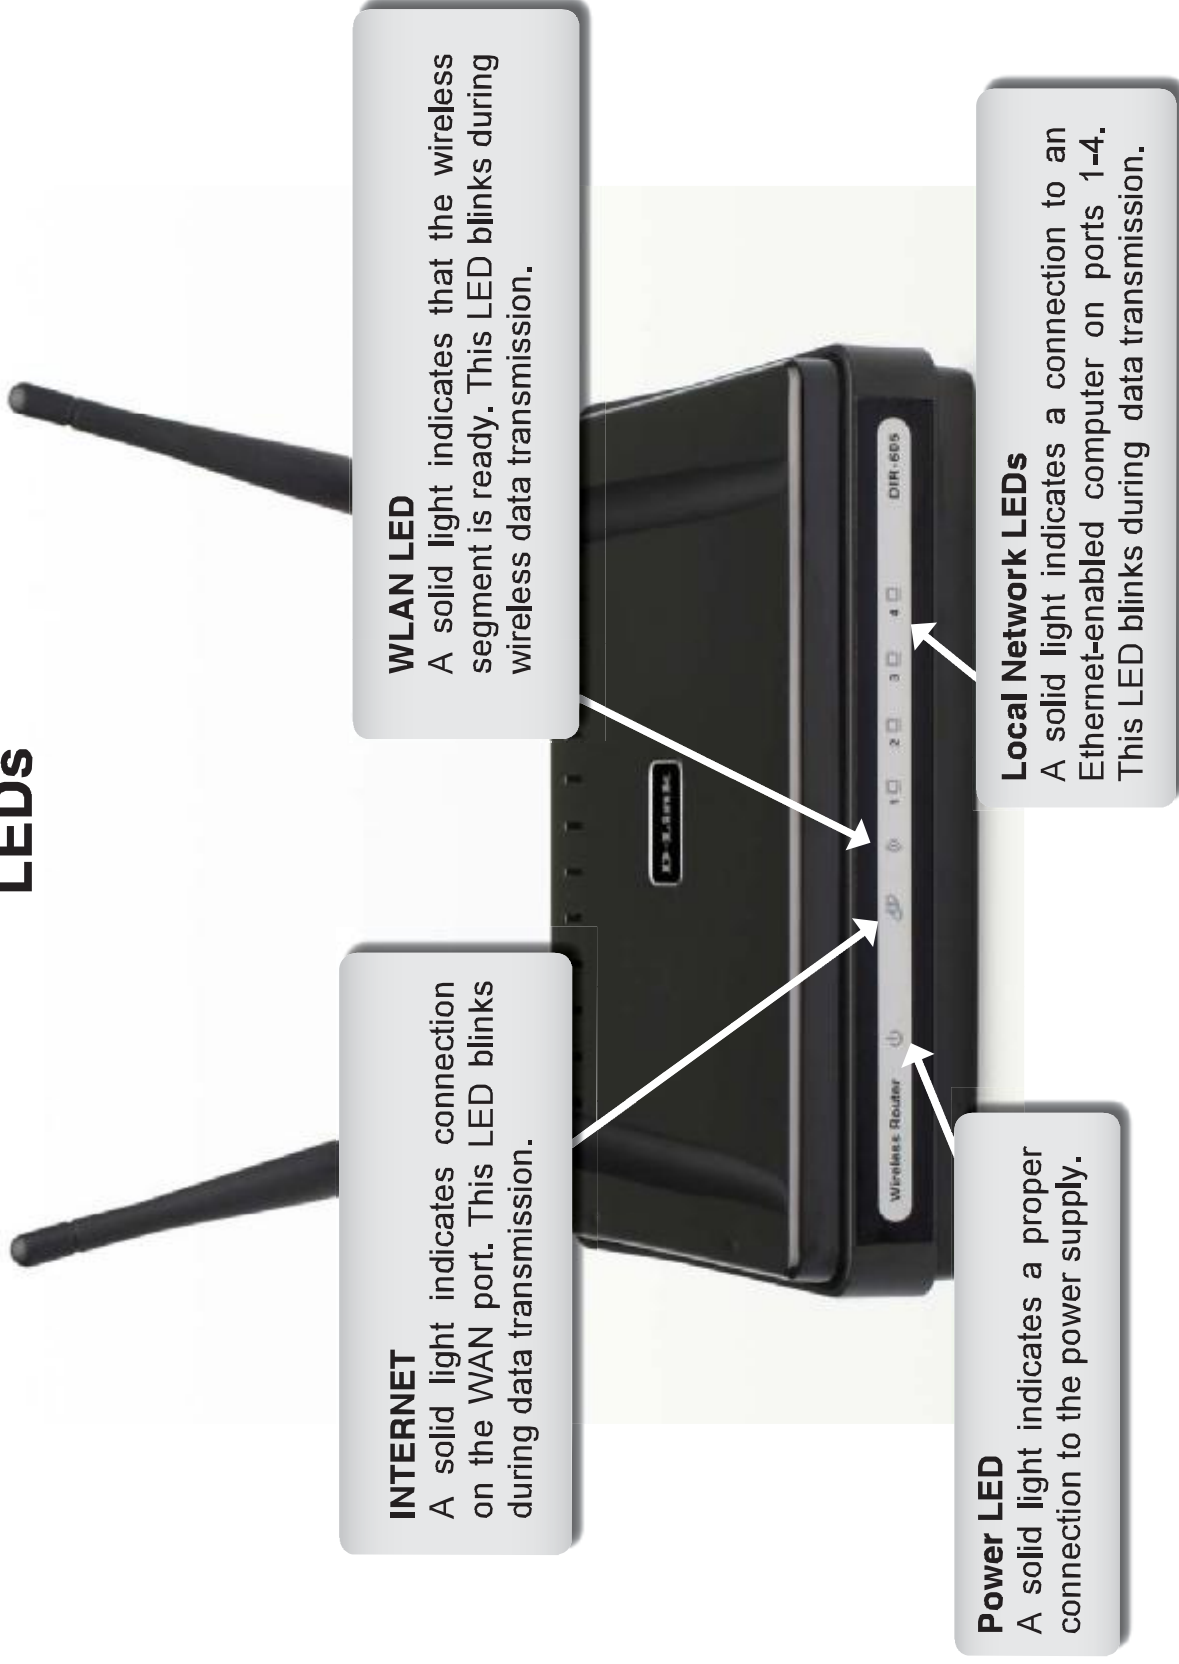

**INTERNET**

A solid light indicates connection on the WAN port. This LED blinks during data transmission.

**WLAN LED**

A solid light indicates that the wireless segment is ready. This LED blinks during wireless data transmission.

**Power LED**

A solid light indicates a proper connection to the power supply.

**Local Network LEDs**

A solid light indicates a connection to an Ethernet-enabled computer on ports 1-4. This LED blinks during data transmission.

# Installation

This section will walk you through the installation process. Placement of the router is very important. Do not place the router in an enclosed area such as a closet, cabinet, or in the attic or garage.

## Before you Begin

Please configure the router with the computer that was last connected directly to your modem. Also, you can only use the Ethernet port on your modem. If you were using the USB connection before using the router, then you must turn off your modem, disconnect the USB cable and connect an Ethernet cable to the WAN port on the router, and then turn the modem back on. In some cases, you may need to call your ISP to change connection types (USB to Ethernet).

If you have DSL and are connecting via PPPoE, make sure you disable or uninstall any PPPoE software such as WinPoet, Broadjump, or Ethernet 300 from your computer or you will not be able to connect to the Internet.



## Wireless Installation Considerations

The D-Link wireless router lets you access your network using a wireless connection from virtually anywhere within the operating range of your wireless network. Keep in mind, however, that the number, thickness and location of walls, ceilings, or other objects that the wireless signals must pass through, may limit the range. Typical ranges vary depending on the types of materials and background RF (radio frequency) noise in your home or business. The key to maximizing wireless range is to follow these basic guidelines:

1. Keep the number of walls and ceilings between the D-Link router and other network devices to a minimum - each wall or ceiling can reduce your adapter's range from 3-90 feet (1-30 meters.) Position your devices so that the number of walls or ceilings is minimized.
2. Be aware of the direct line between network devices. A wall that is 1.5 feet thick (.5 meters), at a 45-degree angle appears to be almost 3 feet (1 meter) thick. At a 2-degree angle it looks over 42 feet (14 meters) thick! Position devices so that the signal will travel straight through a wall or ceiling (instead of at an angle) for better reception.
3. Building Materials make a difference. A solid metal door or aluminum studs may have a negative effect on range. Try to position access points, wireless routers, and computers so that the signal passes through drywall or open doorways. Materials and objects such as glass, steel, metal, walls with insulation, water (fish tanks), mirrors, file cabinets, brick, and concrete will degrade your wireless signal.
4. Keep your product away (at least 3-6 feet or 1-2 meters) from electrical devices or appliances that generate RF noise.
5. If you are using 2.4GHz cordless phones or X-10 (wireless products such as ceiling fans, lights, and home security systems), your wireless connection may degrade dramatically or drop completely. Make sure your 2.4GHz phone base is as far away from your wireless devices as possible. The base transmits a signal even if the phone is not in use.

## Connect to Cable/DSL/Satellite Modem

If you are connecting the router to a cable/DSL/satellite modem, please follow the steps below:

1. Place the router in an open and central location. Do not plug the power adapter into the router.
2. Turn the power off on your modem. If there is no on/off switch, then unplug the modem's power adapter. Shut down your computer.
3. Unplug the Ethernet cable (that connects your computer to your modem) from your computer and place it into the WAN port on the router.
4. Plug an Ethernet cable into one of the four LAN ports on the router. Plug the other end into the Ethernet port on your computer.
5. Turn on or plug in your modem. Wait for the modem to boot (about 30 seconds).
6. Plug the power adapter to the router and connect to an outlet or power strip. Wait about 30 seconds for the router to boot.
7. Turn on your computer.
8. Verify the link lights on the router. The power light, WAN light, and the LAN light (the port that your computer is plugged into) should be lit. If not, make sure your computer, modem, and router are powered on and verify the cable connections are correct.
9. Skip to page 16 to configure your router.

# Connect to Another Router

If you are connecting the D-Link router to another router to use as a wireless access point and/or switch, you will have to do the following before connecting the router to your network:

- Disable UPnP™
- Disable DHCP
- Change the LAN IP address to an available address on your network. The LAN ports on the router cannot accept a DHCP address from your other router.

To connect to another router, please follow the steps below:

1. Plug the power into the router. Connect one of your computers to the router (LAN port) using an Ethernet cable. Make sure your IP address on the computer is 192.168.0.xxx (where xxx is between 2 and 254). Please see the **Networking Basics** section for more information. If you need to change the settings, write down your existing settings before making any changes. In most cases, your computer should be set to receive an IP address automatically in which case you will not have to do anything to your computer.
2. Open a web browser and enter **http://192.168.0.1** and press **Enter**. When the login window appears, set the user name to **admin** and leave the password box empty. Click **OK** to continue.
3. Click on **Advanced** and then click **Advanced Network**. Uncheck the Enable UPnP checkbox. Click **Save Settings** to continue.
4. Click **Setup** and then click **Network Settings**. Uncheck the Enable DHCP Server checkbox. Click **Save Settings** to continue.
5. Under Router Settings, enter an available IP address and the subnet mask of your network. Click **Save Settings** to save your settings. Use this new IP address to access the configuration utility of the router in the future. Close the browser and change your computer's IP settings back to the original values as in Step 1.

6. Disconnect the Ethernet cable from the router and reconnect your computer to your network.
7. Connect an Ethernet cable in one of the LAN ports of the router and connect it to your other router. Do not plug anything into the WAN port of the D-Link router.
8. You may now use the other three LAN ports to connect other Ethernet devices and computers. To configure your wireless network, open a web browser and enter the IP address you assigned to the router. Refer to the **Configuration** and **Wireless Security** sections for more information on setting up your wireless network.

# Configuration


This section will show you how to configure your new D-Link wireless router using the web-based configuration utility.

## Web-based Configuration Utility

To access the configuration utility, open a web-browser such as Internet Explorer and enter the IP address of the router (192.168.0.1).




Enter the user name (admin) and your password. Leave the password blank by default.

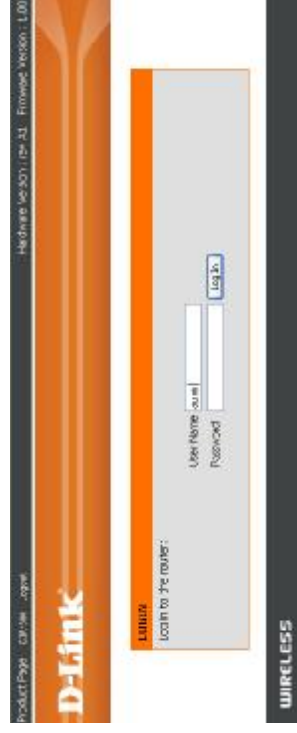

If you get a **Page Cannot be Displayed** error, please refer to the **Troubleshooting** section for assistance.

# Setup Wizard

You may run the setup wizard from the opening Internet Setup window to quickly set up your router. Click **Internet Connection Setup Wizard**, you will be directed to the first window of the wizard.

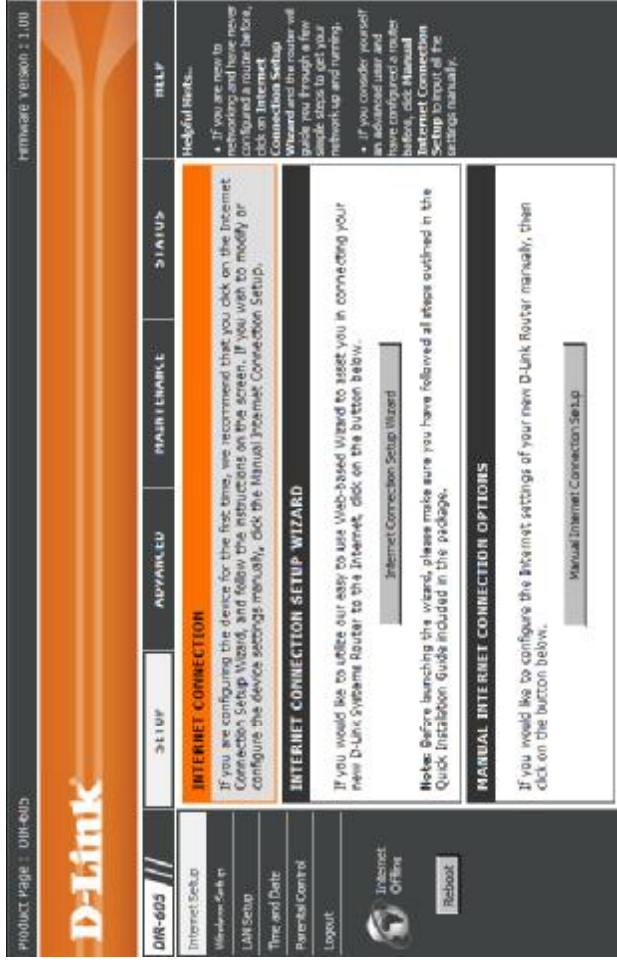


Click **Next** to continue.



Create a new password and then click **Next** to continue.




Select your time zone from the drop-down menu and then click **Next** to continue.

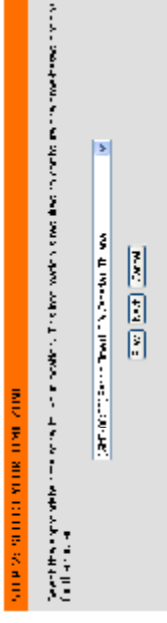

Select the type of Internet connection you use and then click **Next** to continue.



If you selected Dynamic, you may need to enter the MAC address of the computer that was last connected directly to your modem. If you are currently using that computer, click **Clone Your PC's MAC Address** and then click **Next** to continue.

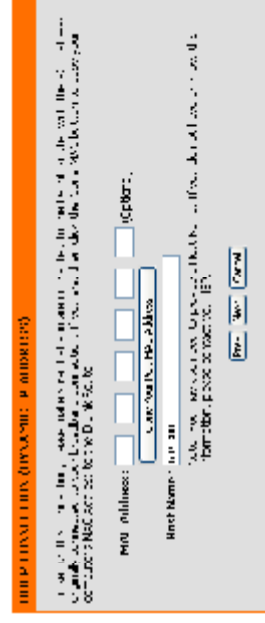


The Host Name is optional but may be required by some ISPs. The default host name is the device name of the Router and may be changed.

If you selected PPPoE, enter your PPPoE username and password. Click **Next** to continue.

Select **Static** if your ISP assigned you the IP address, subnet mask, gateway, and DNS server addresses.


**Note:** Make sure to remove your PPPoE software from your computer. The software is no longer needed and will not work through a router.

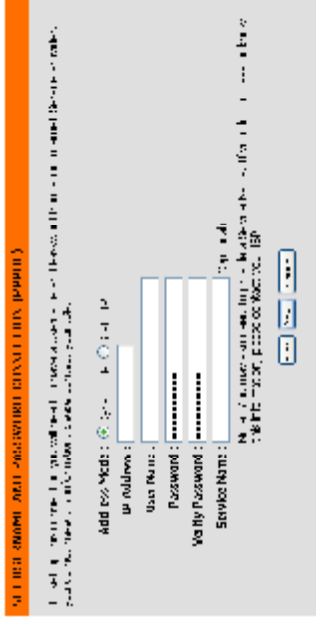

If you selected PPTP, enter your PPTP username and password. Click **Next** to continue.



If you selected L2TP, enter your L2TP username and password. Click **Next** to continue.

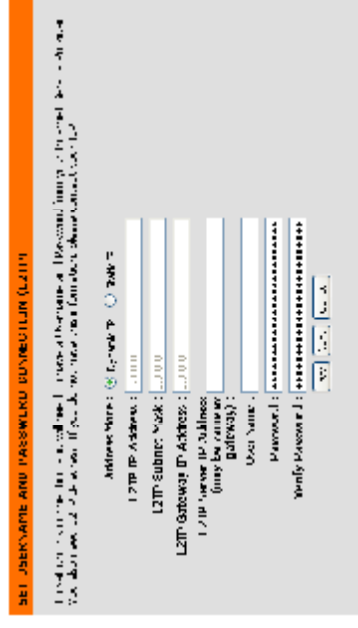



If you selected Big Pond, enter your Big Pond username and password. Click **Next** to continue.

SET USER NAME AND PASSWORD CONNECTION (BIGPOND)

Back

Auth Service: bigpond

Big Pond Username (Only the same as at work):

Big Pond User Name:

Big Pond Password:

Big Pond Verify Password:

Next Cancel

If you selected Static, enter your network settings supplied by your Internet provider. Click **Next** to continue.

SET STATIC IP ADDRESS CONNECTION

Back

IP Address: 0.0.0.0

Subnet Mask: 0.0.0.0

Gateway Address: 0.0.0.0

Primary DNS Address: 0.0.0.0

Next Cancel

Click **Connect** to save your settings.

SUMMARY (BIGPOND)

Back

The static IP address, subnet mask, gateway address and DNS address.

Next Cancel

Please allow 1-2 minutes for rebooting. When the router has finished rebooting, the opening window will be displayed.

REBOOTING...

Back

The router is rebooting. Please wait 1-2 minutes for the router to finish rebooting. The opening window will be displayed.

Next Cancel

## Internet Setup Static (assigned by ISP)

Select Static IP Address if all WAN IP information is provided to you by your ISP. You will need to enter in the IP address, subnet mask, gateway address, and DNS address(es) provided to you by your ISP. Each IP address entered in the fields must be in the appropriate IP form, which are four octets separated by a dot (x.x.x.x). The Router will not accept the IP address if it is not in this format.

**IP Address:** Enter the IP address assigned by your ISP.

**Subnet Mask:** Enter the Subnet Mask assigned by your ISP.

**ISP Gateway:** Enter the Gateway assigned by your ISP.


**MAC Address:** The default MAC Address is set to the WAN's physical interface MAC address on the Broadband Router. It is not recommended that you change the default MAC address unless required by your ISP.

**Clone MAC Address:** The default MAC address is set to the WAN's physical interface MAC address on the Broadband Router. You can use the **Clone MAC Address** button to copy the MAC address of the Ethernet Card installed by your ISP and replace the WAN MAC address with the MAC address of the router. It is not recommended that you change the default MAC address unless required by your ISP.

**Primary DNS Address:** Enter the Primary DNS server IP address assigned by your ISP.

**Secondary DNS Address:** This is optional.

**MTU:** Maximum Transmission Unit - you may need to change the MTU for optimal performance with your specific ISP. **1492 is the default MTU.**

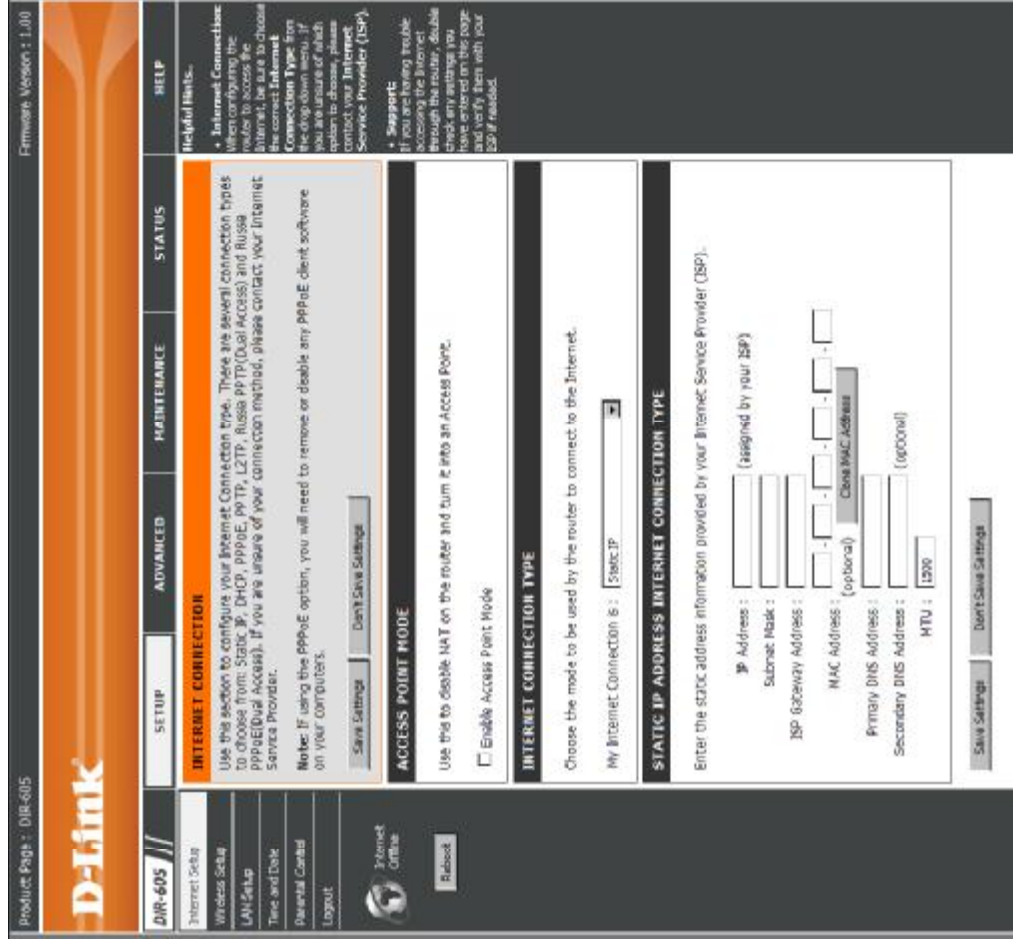

# Internet Setup Dynamic

To manually set up the Internet connection, click the **Manual Internet Connection Setup** button on the Router's opening window.

**Access Point Mode:** Checking this box disables NAT and turns the Router into an Access Point only.

**Dynamic IP Address:** Choose Dynamic IP Address to obtain IP Address information automatically from your ISP. Select this option if your ISP does not give you any IP numbers to use. This option is commonly used for Cable modem services.


**Host Name:** The Host Name is optional but may be required by some ISPs. The default host name is the device name of the Router and may be changed.

**MAC Address:** The default MAC Address is set to the WAN's physical interface MAC address on the Broadband Router. It is not recommended that you change the default MAC address unless required by your ISP.

**Clone MAC Address:** The default MAC address is set to the WAN's physical interface MAC address on the Broadband Router. You can use the "Clone MAC Address" button to copy the MAC address of the Ethernet Card installed by your ISP and replace the WAN MAC address with the MAC address of the router. It is not recommended that you change the default MAC address unless required by your ISP.

**DNS Addresses:** Enter the DNS (Domain Name Server) server IP address assigned by your ISP.

**MTU:** Maximum Transmission Unit - You may need to change the MTU for optimal performance with your specific ISP.

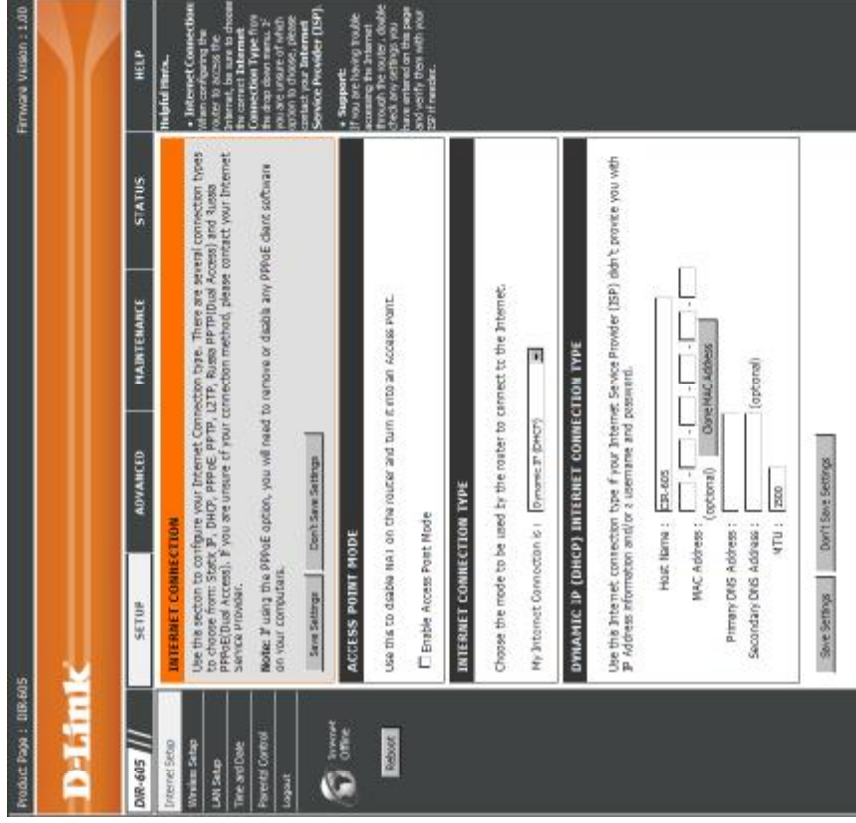

## Internet Setup PPPoE

Choose PPPoE (Point to Point Protocol over Ethernet) if your ISP uses a PPPoE connection. Your ISP will provide you with a username and password. This option is typically used for DSL services. Make sure to remove your PPPoE software from your computer. The software is no longer needed and will not work through a router.

**PPPoE:** Select **Dynamic** (most common) or **Static**. Select **Static** if your ISP assigned you the IP address, subnet mask, gateway, and DNS server addresses.

**User Name:** Enter your PPPoE user name.

**Password:** Enter your PPPoE password and then retype the password in the next box.

**Service Name:** Enter the ISP Service Name (optional).


**IP Address:** Enter the IP address (Static PPPoE only).

**DNS Addresses:** Enter the Primary and Secondary DNS Server Addresses (Static PPPoE only).

**Maximum Idle Time:** Enter a maximum idle time during which the Internet connection is maintained during inactivity. To disable this feature, enable Auto-reconnect.

**MTU:** Maximum Transmission Unit - You may need to change the MTU for optimal performance with your specific ISP. 1492 is the default MTU.

**Connection Mode Select:** Select either **Always-on**, **Manual**, or **Connect-on demand**.

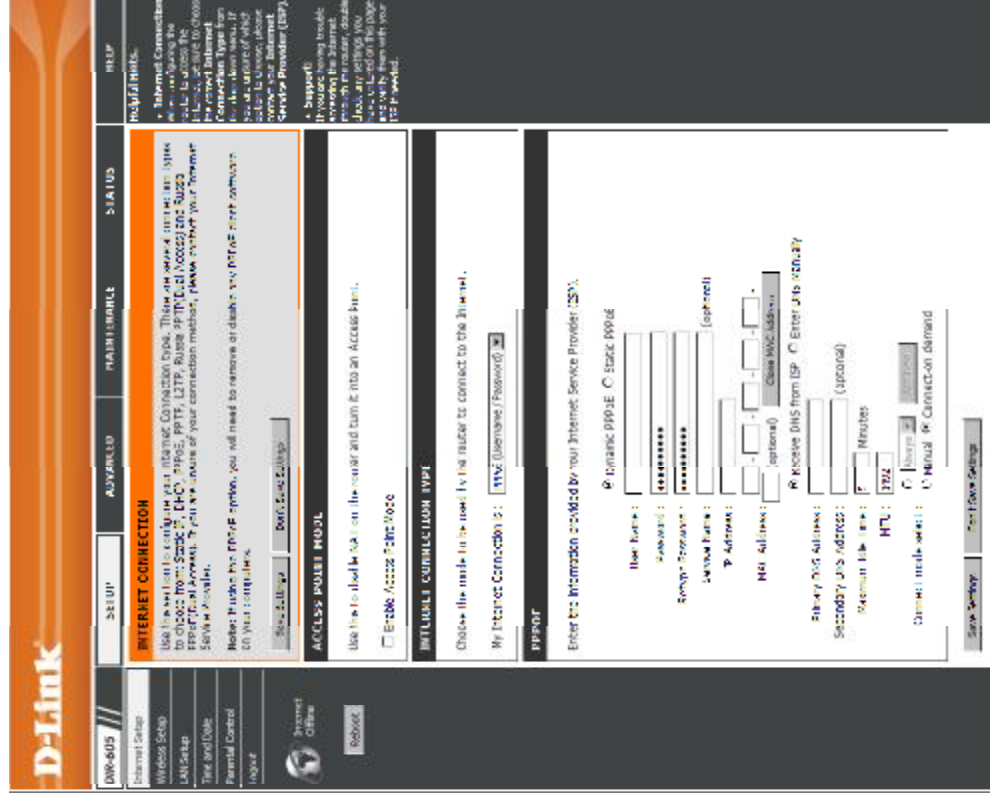

# Internet Setup

## PPTP

Choose PPTP (Point-to-Point-Tunneling Protocol ) if your ISP uses a PPTP connection. Your ISP will provide you with a username and password. This option is typically used for DSL services.

**PPTP:** Select **Dynamic** (most common) or **Static**. Select **Static** if your ISP assigned you the IP address, subnet mask, gateway, and DNS server addresses.

**IP Address:** Enter the IP address (Static PPTP only).

**Subnet Mask:** Enter the Primary and Secondary DNS Server Addresses (Static PPTP only).

**Gateway:** Enter the Gateway IP Address provided by your ISP.

**DNS:** The DNS server information will be supplied by your ISP (Internet Service Provider.)

**Server IP:** Enter the Server IP provided by your ISP (optional).


**PPTP Account:** Enter your PPTP account name.

**PPTP Password:** Enter your PPTP password and then retype the password in the next box.

**Maximum Idle Time:** Enter a maximum idle time during which the Internet connection is maintained during inactivity. To disable this feature, enable Auto-reconnect.

**MTU:** Maximum Transmission Unit - You may need to change the MTU for optimal performance.

**Connect Mode:** Select either Always-on, Manual, or Connect-on demand.

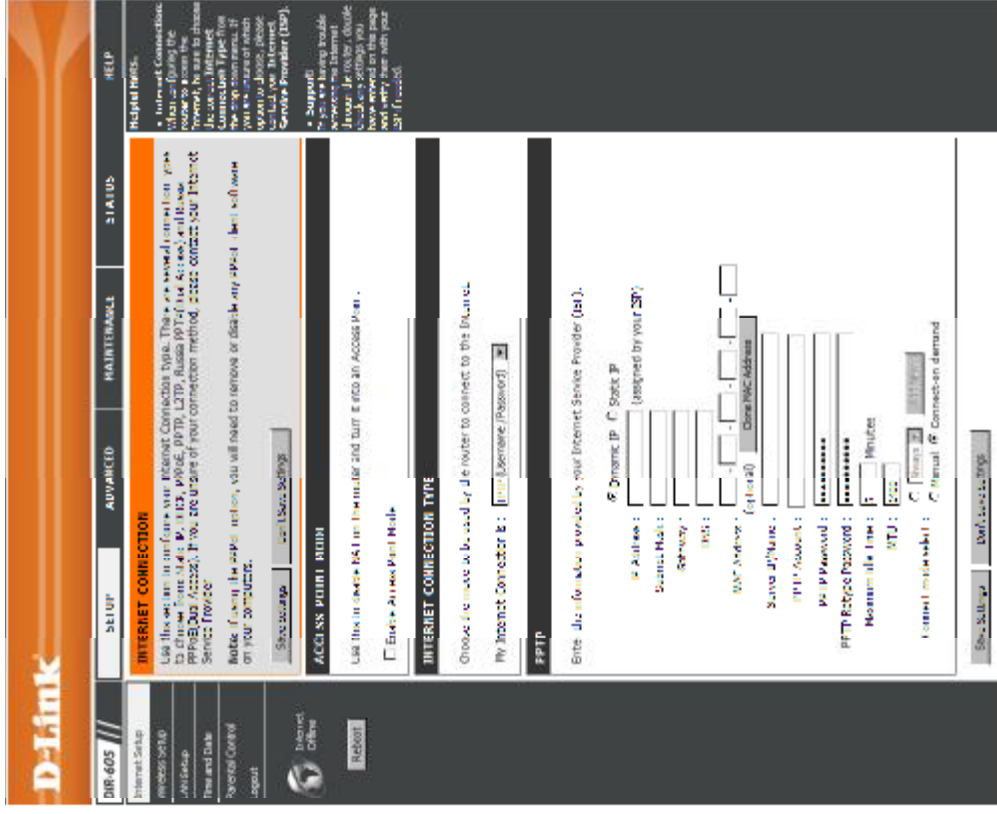



## Internet Setup L2TP

Choose L2TP (Layer 2 Tunneling Protocol) if your ISP uses a L2TP connection. Your ISP will provide you with a username and password. This option is typically used for DSL services.

**L2TP:** Select **Dynamic** (most common) or **Static**. Select **Static** if your ISP assigned you the IP address, subnet mask, gateway, and DNS server addresses.

**IP Address:** Enter the IP address (Static L2TP only).

**Subnet Mask:** Enter the Primary and Secondary DNS Server Addresses (Static L2TP only).

**Gateway:** Enter the Gateway IP Address provided by your ISP.

**DNS:** The DNS server information will be supplied by your ISP (Internet Service Provider.)

**Server IP:** Enter the Server IP provided by your ISP (optional).


**L2TP Account:** Enter your L2TP account name.

**L2TP Password:** Enter your L2TP password and then retype the password in the next box.

**Maximum Idle Time:** Enter a maximum idle time during which the Internet connection is maintained during inactivity. To disable this feature, enable Auto-reconnect.


**MTU:** Maximum Transmission Unit - You may need to change the MTU for optimal performance with your specific ISP.

**Connect Mode:** Select either Always-on, Manual, or Connect-on demand.

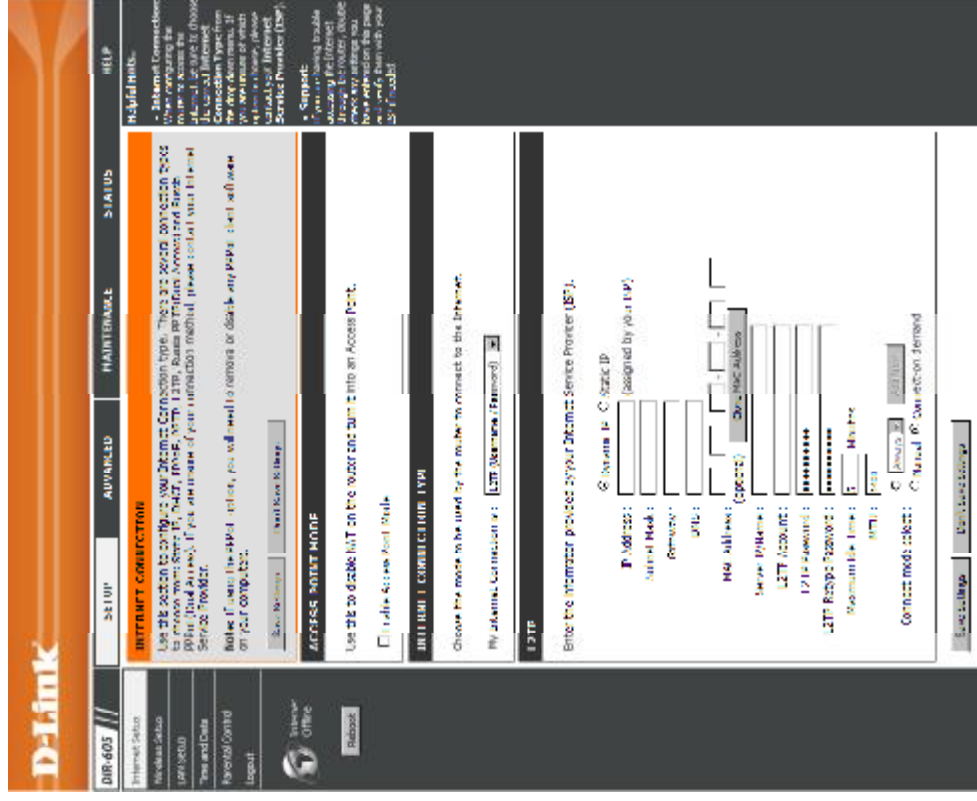

# Internet Setup Dual Access (for Russia only)

There are two main steps to configure a Dual Access Internet connection for Russia. First, configure a PPPoE connection (as previously described for PPPoE connections), and add the physical WAN IP settings as instructed from the ISP. Second, configure a PPTP connection (as previously described for PPTP connections). In addition, the second step also includes an option to use a MAC address that will always be associated with the connection. The MAC address is entered manually or copied from the computer.

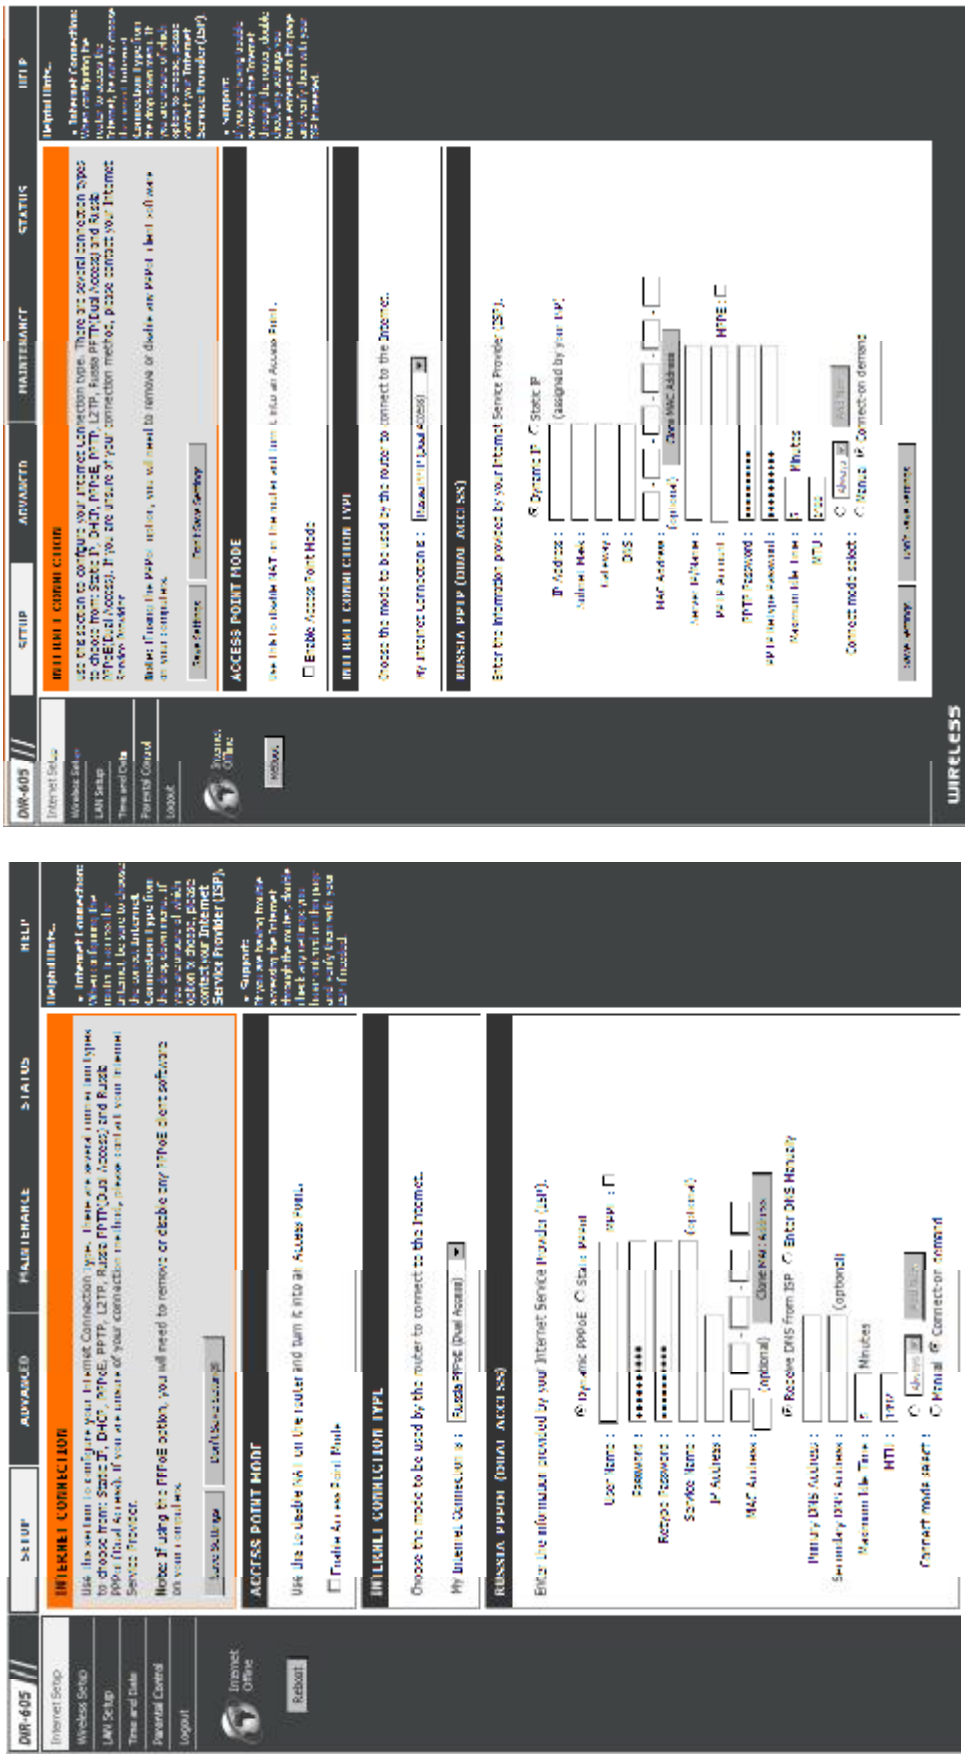

## Wireless Setup

Wireless settings for the router may be configured manually or by using a wizard. To use the wizard, click the **Wireless Connection Setup Wizard** button and then follow the steps that are described below. To configure the wireless settings manually, click the **Manual Wireless Connection Setup** button. The parameters for this window are described later in this section. The Wireless Security section that directly follows this Configuration section provides additional explanation for how to configure the WEP, WPA, WPA2, and WPA/WPA2 wireless security mode options.

**WIRELESS CONNECTION**

There are 2 ways to setup your wireless connection. You can use the Wireless Connection Setup wizard if you can manually configure the connection.

Please note that changes made on this section will also need to be duplicated to your wireless clients and PC.

**WIRELESS CONNECTION SETUP WIZARD**

If you would like to utilize our easy to use Web based Wizard to setup you in connecting your new D-Link Systems Wireless router to the Internet, click on the button below.

[Wireless Connection Setup Wizard](#)

**MANUAL WIRELESS CONNECTION OPTIONS**

If you would like to configure the Internet settings of your new D-Link Router manually, then click on the button below.

[Manual Wireless Connection Setup](#)

**Helpful Hints:**

- If you are new to wireless networking and have never configured a wireless router before, click Manual Wireless Connection Setup to get your wireless network up and running.
- If you consider yourself an advanced user and have configured a wireless router before, click Manual Wireless Connection Setup to get your wireless network up and running.

Click **Next** to continue.

**WELCOME TO THE D-LINK WIRELESS SECURITY SETUP WIZARD**

If you are new to wireless networking and have never configured a wireless router before, click Manual Wireless Connection Setup to get your wireless network up and running.

- Step 1: Enter your wireless network name
- Step 2: Select the wireless security mode
- Step 3: Set your wireless security password

[Next](#) [Cancel](#)

**STEP 1: NAME YOUR WIRELESS NETWORK**

You can choose between WPA2, WPA, WEP, and WPA/WPA2 wireless security modes. For more information on wireless security, click on the help icon.


Wireless Network Name (SSID)

[Yes](#) [Cancel](#)

Enter a Wireless Network Name in the textbox, which is also known as the SSID, and then click **Next** to continue.



Use the radio buttons to select the desired level of wireless security, Best, Better, or Good, and then click **Next** to continue.

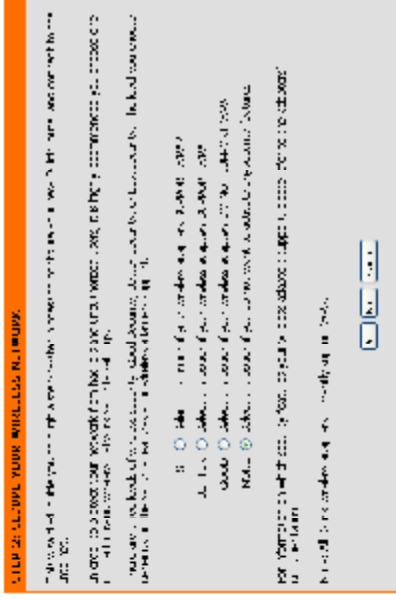

Enter a Wireless Security Password in the textbox and then click **Next** to continue.



This window displays a summary of your wireless security settings. Please print this out or record this information in a safe place and then click **Save** to continue.



The Router will save your new settings and reboot. When it is finished after 1-2 minutes, the opening Wireless Setup window is displayed.



**Wi-Fi Protected** To implement Wi-Fi protection, or WCN 2.0, tick the Enable checkbox, click either **Generate New Setup: PIN** or **Reset PIN to Default**, and then configure the Wi-Fi settings below. Please see the Setting Up Wi-Fi Protection (WCN 2.0 in Windows Vista) section later in this manual for detailed configuration information.

**Enable Wireless:** Check the box to enable the wireless function. If you do not want to use wireless, uncheck the box to disable all the wireless functions.


**Wireless Network Name:** Service Set Identifier (SSID) is the name of your wireless network. Create a name using up to 32 characters. The SSID is case-sensitive.

**Wireless Channel:** Indicates the channel setting for the DIR-605. By default the channel is set to 6. The Channel can be changed to fit the channel setting for an existing wireless network or to customize the wireless network. The **Auto Channel Selection** setting can be selected to allow the DIR-605 to choose the channel with the least amount of interference.

**Transmission Rate:** Use the drop-down menu to select the appropriate Transmission Rate in Mbits per second. Many users will want to use the default setting, *Best (automatic)*.

**WMM Enable:** Enable Wi-Fi Multimedia to enjoy basic quality of service features. WMM prioritizes traffic according to four access categories: voice, video, best effort, and background.

**Enable Hidden Wireless:** Check this option if you would not like the SSID of your wireless network to be broadcasted by the DIR-605. If this option is checked, the SSID of the DIR-605 will not be seen by Site Survey utilities so your wireless clients will have to know the SSID of your DIR-605 in order to connect to it.

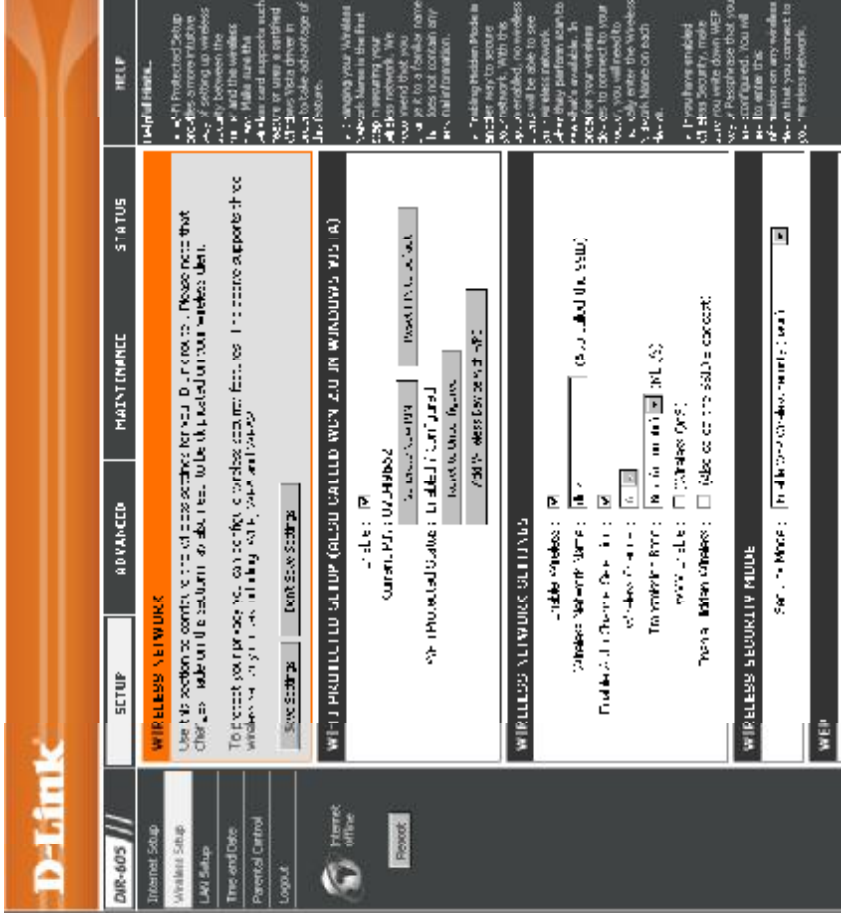


1. To enable wireless security on the Router, use the drop-down menu to select the desired option. To enable WEP, select *Enable WEP Wireless Security (basic)*.

2. Next to **Authentication**, select either *Open* or *Shared Key*. Shared Key provides greater security.

3. Select either *64Bit* or *128Bit* encryption from the drop-down menu next to **WEP Encryption**.

4. Next to **Default Key Type**, select *WEP Key 1* and enter a WEP key that you create. Make sure you enter this key exactly on all your wireless devices. You may enter up to four different keys either using *Hex* or *ASCII*. Hex is recommended (letters A-F and numbers 0-9 are valid). In *ASCII* all numbers and letters are valid.

5. Click **Save Settings** to save your settings. If you are configuring the Router with a wireless adapter, you will lose connectivity until you enable WEP on your adapter and enter the same WEP key as you did on the Router.

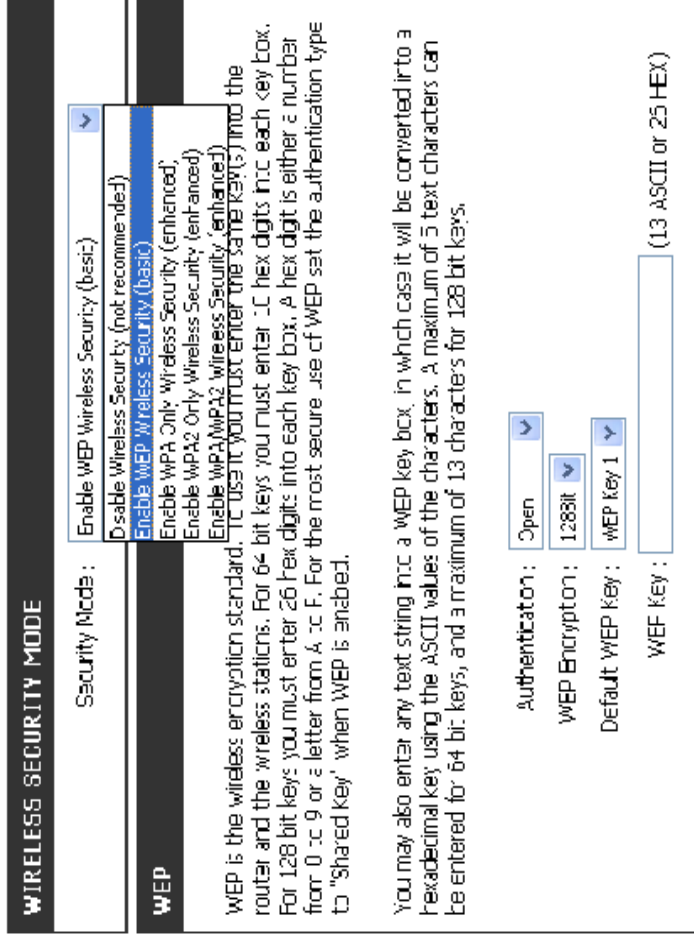

**NOTE:**

It is recommended to enable encryption on your wireless Router before your wireless network adapters. Please establish wireless connectivity before enabling encryption. Your wireless signal may degrade when enabling encryption due to the added overhead.

1. To enable WPA, WPA2, or WPA/WPA2, select either *Enable WPA Only Wireless Security (enhanced)*, *Enable WPA2 Only Wireless Security (enhanced)*, or *Enable WPA/WPA2 Wireless Security (enhanced)*.

2. Next to **Cipher Type**, select *TKIP*, *AES*, or *Both*.

3. Next to **PSK/EAP**, select *PSK*.

4. Next to **Network Key**, enter a passphrase. The key is an alpha-numeric password between 8 and 63 characters long. The password can include symbols (!?\*&\_) and spaces. Make sure you enter this key exactly the same on all other wireless clients.

5. Click **Save Settings** to save your settings. If you are configuring the router with a wireless adapter, you will lose connectivity until you enable WPA, WPA2, or WPA/WPA2 (whichever of the three options you have selected above) on your adapter and enter the same network key as you did on the router.

**WIRELESS SECURITY MODE**

Security Mode :  ▾

---

**WPA ONLY**

WPA Only requires stations to use high grade encryption and authentication.

Cipher Type :  ▾  
 PSK / EAP :  ▾

Network Key :

**WIRELESS SECURITY MODE**

Security Mode :  ▾

---

**WPA2 ONLY**

WPA2 Only requires stations to use high grade encryption and authentication.

Cipher Type :  ▾  
 PSK / EAP :  ▾

Network Key :

**WIRELESS SECURITY MODE**

Security Mode :  ▾

---

**WPA, WPA2**

WPA/WPA2 requires stations to use high grade encryption and authentication.

Cipher Type :  ▾  
 PSK / EAP :  ▾

Network Key :

1. To enable WPA, WPA2, or WPA/WPA2 for a RADIUS server, next to **Security Mode**, select *Enable WPA Only Wireless Security (enhanced)*, *Enable WPA2 Only Wireless Security (enhanced)*, or *Enable WPA/WPA2 Wireless Security (enhanced)*.

2. Next to **Cipher Type**, select *TKIP*, *AES*, or *Auto*.

3. Next to **PSK/EAP**, select *EAP*.


4. Next to **RADIUS Server 1** enter the **IP Address** of your RADIUS server.

5. Next to **Port**, enter the port you are using with your RADIUS server. 1812 is the default port.

6. Next to **Shared Secret**, enter the security key.

7. If you have a secondary RADIUS server, enter its IP address, port, and secret key.

8. Click **Save Settings** to save your settings.

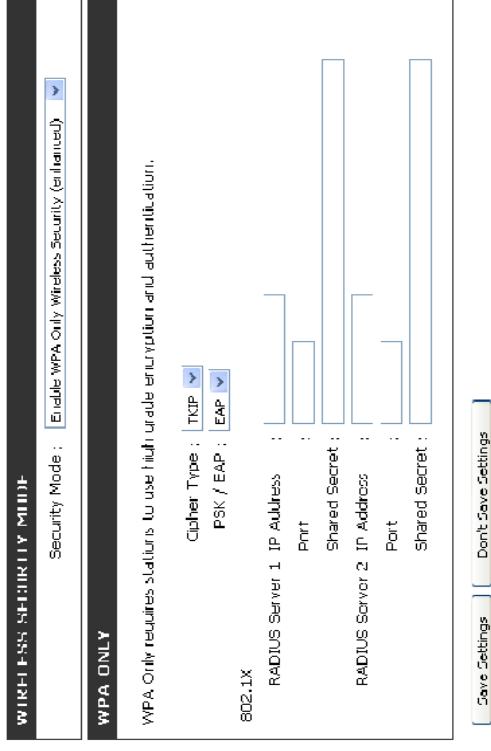

## LAN Setup

This section will allow you to change the local network settings of the router and to configure the DHCP settings.

**Router IP** Enter the IP address of the router. The default **Address:** IP address is 192.168.0.1.

If you change the IP address, once you click **Apply**, you will need to enter the new IP address in your browser to get back into the configuration utility.

**Default Subnet** Enter the Subnet Mask. The default subnet mask **Mask:** is 255.255.255.0.

**Local Domain** Enter the Domain name (Optional). **Name:**

**Enable DNS** Check the box to transfer the DNS server **Relay:** information from your ISP to your computers. If unchecked, your computers will use the router for a DNS server.

Refer to the next page for DHCP information.

The screenshot shows the D-Link DIR-605 web interface. The top navigation bar includes links for Internet Setup, LAN Setup, Time and Date, Parental Control, Logout, Internet Utility, and Reboot. The main content area is titled 'NETWORK SETTINGS' and contains several sections:

- ROUTER SETTINGS:** Includes fields for Router IP Address (192.168.0.1), Default Subnet Mask (255.255.255.0), Local Domain Name, and a checked box for Enable DNS Relay. A note states: 'Please note that this section is optional and you do not need to change any of the settings here to get your network up and running.'
- DHCP SERVER SETTINGS:** Includes a checked box for Enable DHCP Server and a DHCP IP Address Range of 100 to 199. A note says: 'Use this section to configure the built-in DHCP server to assign IP addresses to the computers on your network. The IP address that is configured here is the IP address that you use to access the Web-based management interface. If you change the IP address here, you may need to adjust your PC's network settings to access the network again.'
- DHCP CLIENT LIST:** A table with columns for Computer Name, IP Address, MAC Address, and Leased Time. Below the table is a section for DHCP Reservations with a note: 'Remaining number of clients that can be configured: 25'.





## Time and Date


This section will allow you to configure, update, and maintain the correct time on the internal system clock.

**Time Zone:** Select the Time Zone from the drop-down menu.

**Enable Daylight Saving:** Ticking this checkbox enables Daylight Saving time. Click **Sync. your computer's time settings** to copy your PC's time settings.

**NTP Server Used:** Tick the "Automatically synchronize with D-Link's Internet time server" checkbox and then use the drop-down menu to select an NTP Server. NTP is short for Network Time Protocol. NTP synchronizes computer clock times in a network of computers.

**Manual:** To manually input the time, enter the values in these fields for the Year, Month, Day, Hour, Minute, and Second. Click **Save Settings**.

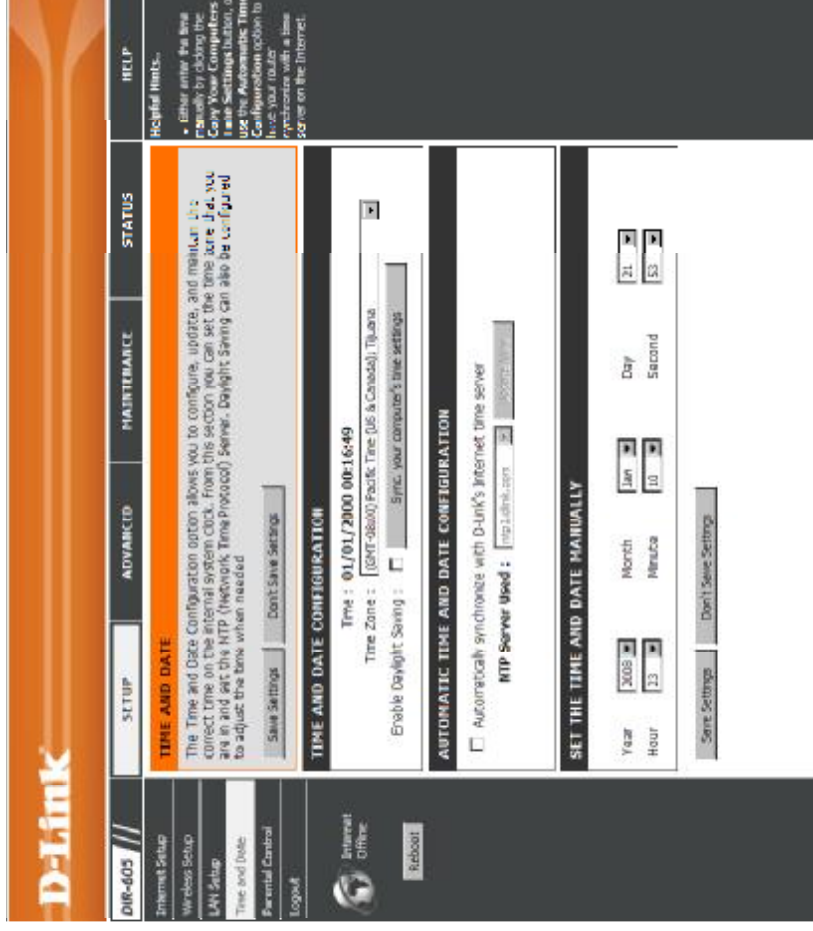




# Parental Control

This feature allows you to create a list of websites that you want to either allow or deny users access.

**Configure** Select *Turn Parental Control OFF*, *Turn Parental Control ON* and *ALLOW* computers access to **Control:** *ONLY* these sites, or *Turn Parental Control ON* and *DENY* computers access to *ONLY* these sites.

**Website URL:** Enter the keywords or URLs that you want to block (or allow). Any URL with the keyword in it will be blocked.

**Schedule:** The schedule of time when the parental control filter will be enabled. The schedule may be set to Always, which will allow the particular service to always be enabled. You can create your own times in the **Maintenance > Schedules** section.

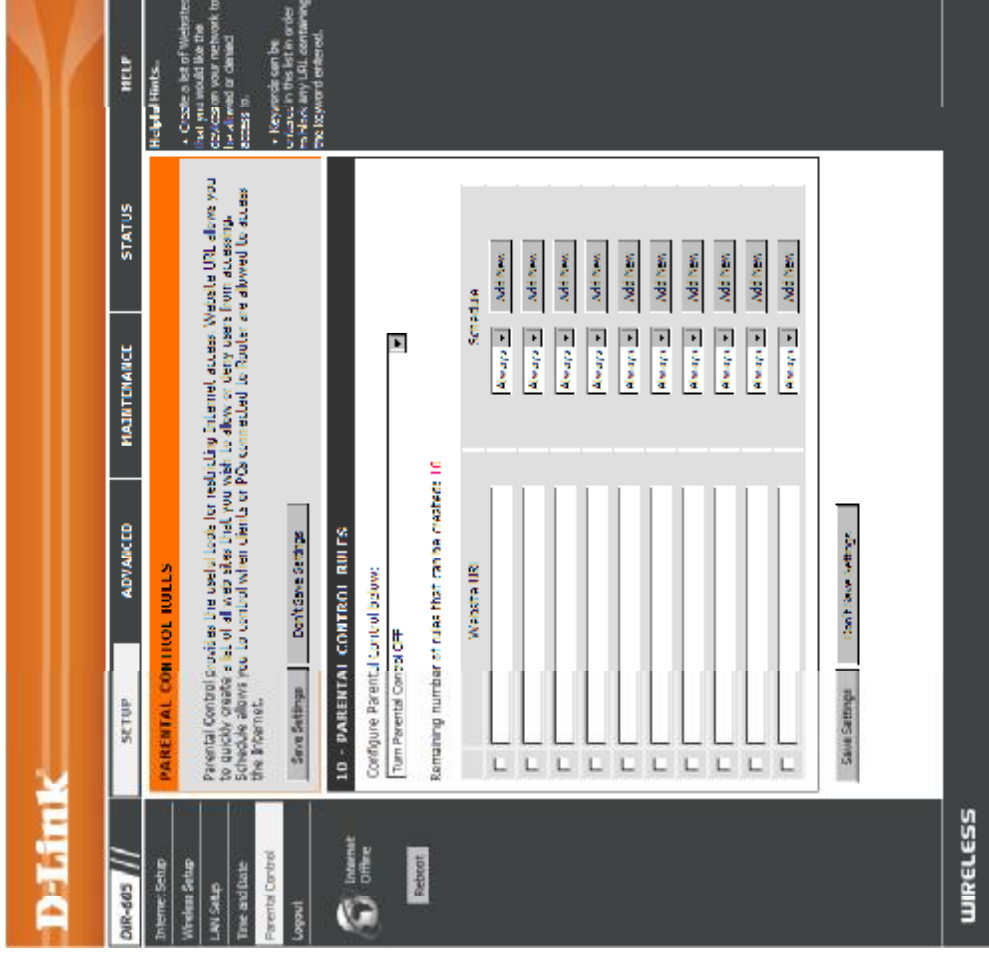

# Port Forwarding

This will allow you to open a single port or a range of ports.


**Rule:** Check the box to enabled the rule.

**Name:** Enter a name for the rule.

**IP Address:** Enter the IP address of the computer on your local network that you want to allow the incoming service to.

**Start Port/ End Port:** Enter the port or ports that you want to open. If you want to open one port, enter the same port in both boxes.

**Traffic Type:** Select *TCP*, *UDP*, or *Any*

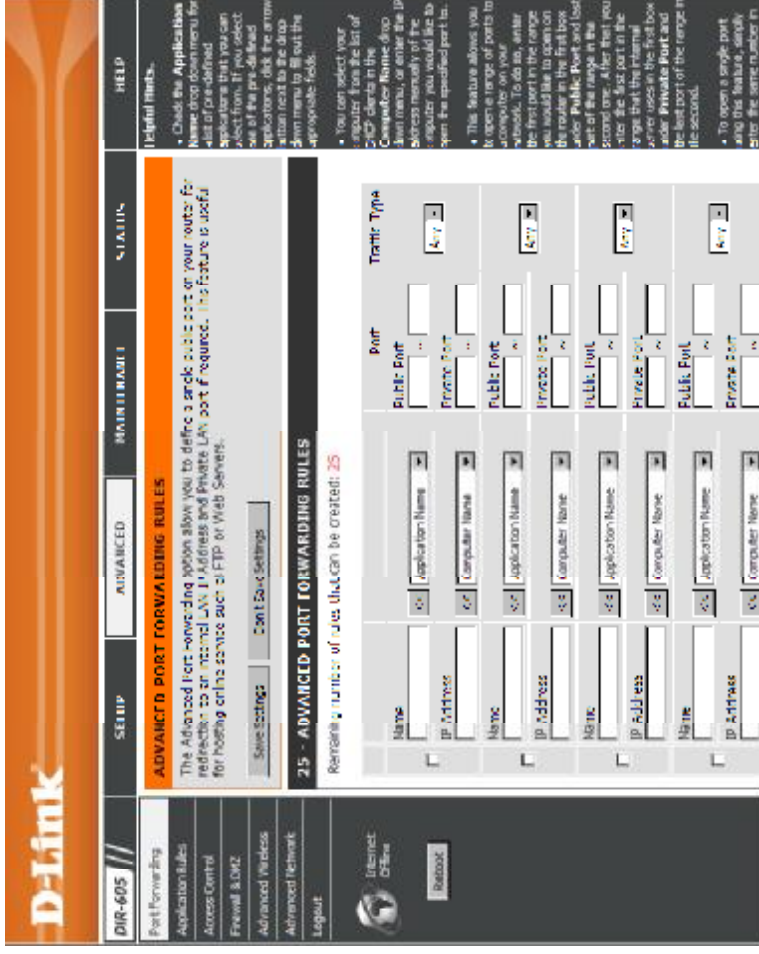

## Application Rules

Some applications require multiple connections, such as Internet gaming, video conferencing, Internet telephony and others. These applications have difficulties working through NAT (Network Address Translation). Special Applications makes some of these applications work with the DIR-605.

**Rule:** Check the box to enable the rule.

**Name:** Enter a name for the rule.

**Trigger Port:** This is the port used to trigger the application. It can be either a single port or a range of ports.

**Firewall Port:** This is the port number on the WAN side that will be used to access the application. You may define a single port or a range of ports. You can use a comma to add multiple ports or port ranges.

**Traffic Type:** Select *TCP*, *UDP*, or *Any*.

**APPLICATION RULE**

The Application Rules option is used to open a single or multiple ports in your firewall when the router detects traffic from the Internet on a triggering trigger port or port range. Special Applications rules apply to all computers on your internal network.

Save Settings    Don't Save Settings

**25 - APPLICATION RULES**

Remaining number of rules that can be created: 25

Rule	Name	Application Name	Firewall Port	Traffic Type
<input type="checkbox"/>		App's Port Name	Trigger	Any
<input type="checkbox"/>		App's Port Name	Trigger	Any
<input type="checkbox"/>		App's Port Name	Trigger	Any
<input type="checkbox"/>		App's Port Name	Trigger	Any
<input type="checkbox"/>		App's Port Name	Trigger	Any
<input type="checkbox"/>		App's Port Name	Trigger	Any
<input type="checkbox"/>		App's Port Name	Trigger	Any

**Helpful hints...**

- Check the Application Rules drop down menu for a list of pre-defined applications that you can select from. If you select one of the pre-defined applications, click the arrow button next to the drop down menu to fill out the appropriate fields.

## Access Control


Use MAC (Media Access Control) Filters to allow or deny LAN (Local Area Network) computers by their MAC addresses from accessing the Network. You can either manually add a MAC address or select the MAC address from the list of clients that are currently connected to the Broadband Router.

**Configure MAC** Select *Turn MAC Filtering OFF*, *Turn MAC Filtering ON* and *ALLOW* computers listed to access the network, or *Turn MAC Filtering ON* and *DENY* computers listed to access the network.

**MAC Address:** Enter the MAC address you would like to filter.  
To find the MAC address on a computer, please refer to the Networking Basics section in this manual.

**DHCP Client** Select a DHCP client from the drop-down **List:** menu and click the arrow to copy that MAC Address.

**Schedule:** The schedule of time when the network filter will be enabled. The schedule may be set to Always, which will allow the particular service to always be enabled. You can create your own times in the **Maintenance > Schedules** section.

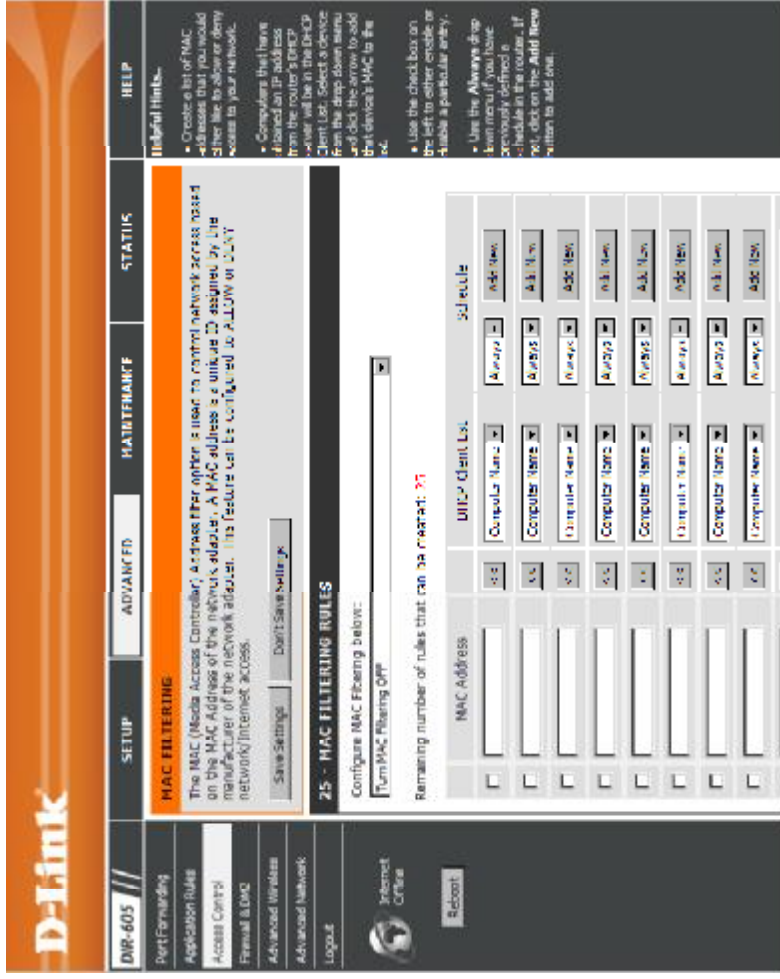

## Firewall & DMZ

This section will allow you to set up a DMZ host and to set up firewall rules.

If you have a client PC that cannot run Internet applications properly from behind the DIR-605, then you can set the client up for unrestricted Internet access. It allows a computer to be exposed to the Internet. This feature is useful for gaming purposes. Enter the IP address of the internal computer that will be the DMZ host. Adding a client to the DMZ (Demilitarized Zone) may expose your local network to a variety of security risks, so only use this option as a last resort.

**Enable SPI:** Check this to enable SPI.

**Enable DMZ Host:** Check this box to enable DMZ.

**DMZ IP Address:** Enter the IP address of the computer you would like to open all ports to.

**Name:** Choose a name for the firewall rule.

**Action:** Select to *Allow* or *Deny* transport of the data packets according to the criteria defined in the rule.

**Source/Dest:** The Source/Destination is the TCP/UDP port on either the LAN or WAN side.

**Schedule:** Click **Add New** to access the Schedules window. See **Maintenance>Schedules** for more information.

**IP Address:** Enter a beginning and ending IP address.

**Protocol:** Select the transport protocol that will be used for the filter rule.

**Port Range:** Enter the desired port range for the filter rule.

**D-Link**

DIR-605 // SETUP ADVANCED FIREWALL STATUS HELP

**FIREWALL & DMZ SETTINGS**

Firewall rules can be used to allow or deny traffic passing through the router. You can specify a single port by entering the port box on the left or a range of ports by entering both input boxes.

DMZ means "Demilitarized Zone". DMZ allows computers behind the router (firewall) to be accessible to Internet traffic. Usually, your DMZ would contain Web servers, FTP servers and others.

Save Settings Don't Save Settings

**FIREWALL SETTING**

Enable SPI:

**DMZ HOST**

The DMZ (Demilitarized Zone) enables you with an option to set a single computer on your network to be able to be accessed by a computer that cannot be Internet applications successfully from behind the router; then you can place the computer into the DMZ for unrestricted Internet access.

Notes: Putting a computer in the DMZ may expose that computer to a variety of security risks. Use of this option is only recommended as a last resort.

Enable DMZ Host:

DMZ IP Address:

DMZ Host Name:

**50 - FIREWALL RULES**

Remaining number of rules that can be created: 50

Name	Interface	IP Address	Protocol	Port Range	Action
<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>



## Advanced Wireless

This window allows you to change the behavior of the 802.11g wireless radio from the standard settings. Please be aware that any changes to the factory default settings may adversely affect the behavior of your network.

**Transmit Power:** Set the transmit power of the antennas.

**Beacon interval:** Beacons are packets sent by an Access Point to synchronize a wireless network. Specify a value. *100* is the default setting and is recommended.

**RTS Threshold:** This value should remain at its default setting of 2346. If inconsistent data flow is a problem, only a minor modification should be made.

**Fragmentation:** The fragmentation threshold, which is specified in bytes, determines whether packets will be fragmented. Packets exceeding the 2346 byte setting will be fragmented before transmission. *2346* is the default setting.

**DTIM Interval:** (Delivery Traffic Indication Message) *1* is the default setting. A DTIM is a countdown informing clients of the next window for listening to broadcast and multicast messages.

**Preamble Type:** Select Short or Long Preamble. The Preamble defines the length of the CRC block (Cyclic Redundancy Check) is a common technique for detecting data transmission errors) for communication between the wireless router and the roaming wireless network adapters. Auto is the default setting. Note: High network traffic areas should use the shorter preamble type.

**CTS Mode:** CTS (Clear To Send) is a function used to minimize collisions among wireless devices on a wireless local area network (LAN). CTS will make sure the wireless network is clear before a wireless client attempts to send wireless data. Enabling CTS will add overhead and may lower wireless throughput. **None:** CTS is typically used in a pure 802.11g environment. If CTS is set to "None" in a mixed mode environment populated by 802.11b clients, wireless collisions may occur frequently. **Always:** CTS will always be used to make sure the wireless LAN is clear before sending data. **Auto:** CTS will monitor the wireless network and automatically decide whether to implement CTS based on the amount of traffic and collisions that occurs on the wireless network.

**802.11 Mode:** Select one of the following:

**Mixed 802.11g and 802.11b** - Select if you are using both 802.11b and 802.11g wireless clients.

**802.11n Only** - Select only if all of your wireless clients are 802.11n.

**Mixed 802.11n, 802.11b, and 802.11g** - Select if you are using a mix of 802.11n, 11g, and 11b wireless clients.

**Channel Width:** Select the Channel Width:

**Auto 20/40** - Select if you are using both 802.11n and non-802.11n wireless devices.

**20MHz** - Select if you are not using any 802.11n wireless clients. This is the default setting.

**Short GI:** Check this box to reduce the guard interval time therefore increasing the data capacity. However, it's less reliable and may create higher data loss.




## Advanced Network

This window allows you to change the LAN settings. Please be aware that any changes to the factory default settings may affect the behavior of your network.

**Enable UPnP:** To use the Universal Plug and Play (UPnP™) feature tick this checkbox. UPnP provides compatibility with networking equipment, software and peripherals.

**Enable WAN** Unchecking the box will not allow the DIR-605 **Ping Respond:** to respond to Pings. Blocking the Ping may provide some extra security from hackers. Tick this checkbox to allow the WAN port to be “Pinged”.

**WAN Port Speed:** You may set the port speed of the WAN port to *10Mbps*, *100Mbps*, or *10/100Mbps Auto*. Some older cable or DSL modems may require you to set the port speed to 10Mbps.

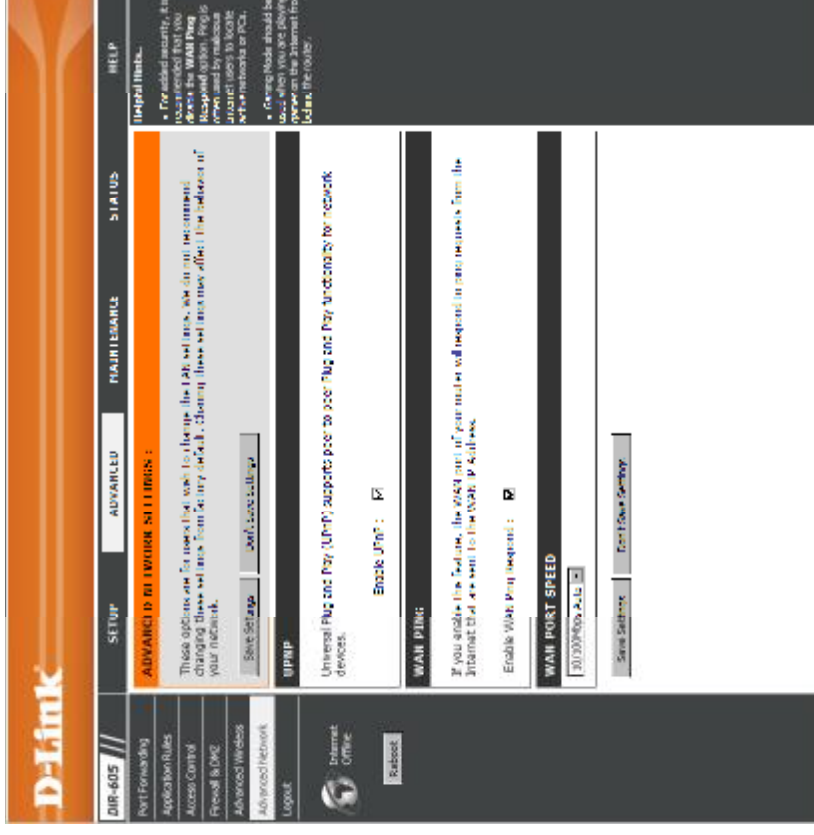

## Device Administration

This window will allow you to change the Administrator password. You can also enable Remote Management.


**Administrator Login Name:** Enter a new Login Name for the Administrator account.

**Administrator Password:** Enter a new password for the Administrator Login Name and then retype the new password in the Confirm Password textbox. The administrator can make changes to the settings.

**Enable Remote Management:** Remote management allows the DIR-605 to be configured from the Internet by a web browser. A username and password is still required to access the Web-Management interface. In general, only a member of your network can browse the built-in web pages to perform Administrator tasks. This feature enables you to perform Administrator tasks from the remote (Internet) host.

**IP Allowed to Access:** The Internet IP address of the computer that has access to the Broadband Router. If you input an asterisk (\*) into this field, then any computer will be able to access the Router. Putting an asterisk (\*) into this field would present a security risk and is not recommended.

**Port:** The port number used to access the DIR-605. For example: `http://x.x.x.x:8080` whereas `x.x.x.x` is the WAN IP address of the DIR-605 and `8080` is the port used for the Web-Management interface.

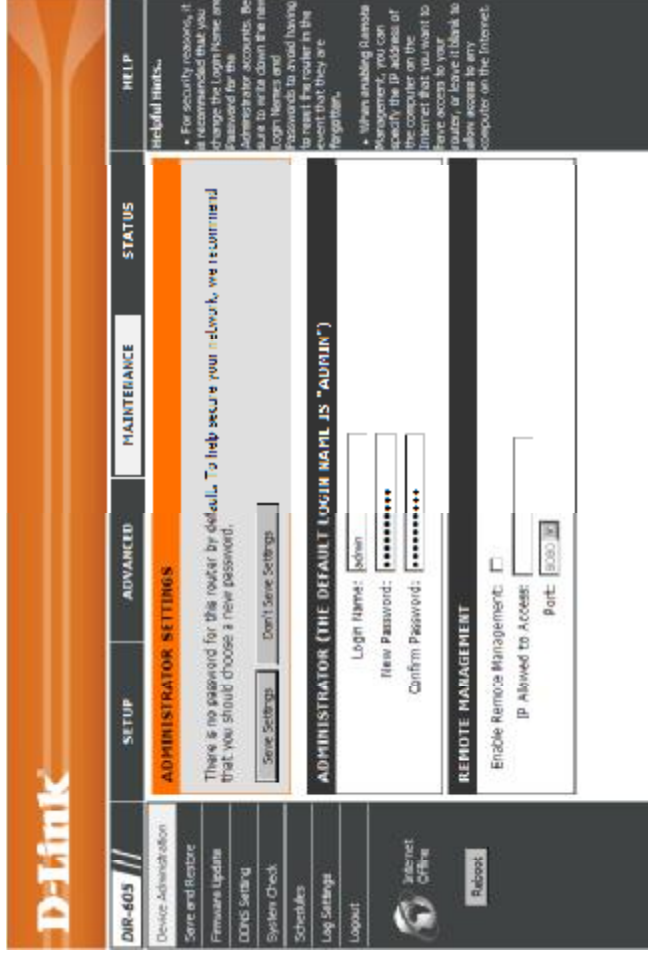



## Save and Restore


This window allows you to save your configuration file to a hard drive, load configuration settings from a hard drive, and restore the Router's factory default settings.

**Save Settings to Local Hard Drive:** Use this option to save the current router configuration settings to a file on the hard disk of the computer you are using. First, click the **Save** button. You will then see a file dialog, where you can select a location and file name for the settings.

**Load Settings from Local Hard Drive:** Use this option to load previously saved router configuration settings. First, use the **Browse** control to find a previously save file of configuration settings. Then, click the **Upload Settings** button to transfer those settings to the Router.

**Restore to Factory Default Settings:** This option will restore all configuration settings back to the settings that were in effect at the time the router was shipped from the factory. Any settings that have not been saved will be lost, including any rules that you have created. If you want to save the current router configuration settings, use the **Save** button above.

**Reboots:** Click the **Reboots** button on the left side of the window to restart the Router.

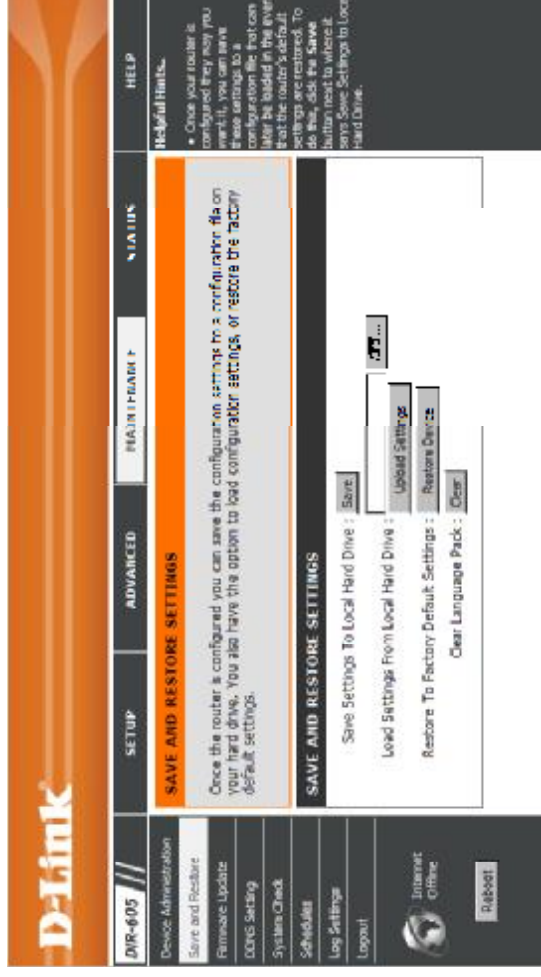

## Firmware Update

You can upgrade the firmware of the Router here. Make sure the firmware you want to use is on the local hard drive of the computer. Click on **Browse** to locate the firmware file to be used for the update. Please check the D-Link support site for firmware updates at <http://support.dlink.com>. You can download firmware upgrades to your hard drive from the D-Link support site.

**Firmware Upgrade:** Click the **Check Now** button (or the link at the top of the window) to find out if there is an updated firmware; if so, download the new firmware to your hard drive.

**Browse:** After you have downloaded the new firmware, click **Browse** in this window to locate the firmware update on your hard drive. Click **Save Settings** to complete the firmware upgrade.

The screenshot shows the D-Link DIR-605 router's web interface. The top navigation bar includes 'SETUP', 'ADVANCED', 'MAINTENANCE', and 'STATUS'. The main content area is titled 'FIRMWARE UPDATE' and contains the following text:

There may be new firmware for your DIR-605 to improve functionality and performance. [Click here to check for an upgrade on our support site.](#)

To upgrade the firmware, locate the upgrade file on the local hard drive with the upgrade button. Once you have found the file to be used, click the Save Settings below to start the firmware upgrade.

**CURRENT FIRMWARE INFO**

Current Firmware Version: 1.1E  
Firmware Date: Thu 17 Jan 2009

Check Online Now for Latest Firmware Version

**UPDATE SETTING**

Update:

**UPDATE LANGUAGE PACKAGE**

Update:

**Helpful Hints...**

- Firmware updates are released periodically to improve the functionality of our routers and may solve problems with your router's features of the router. Check our support site by clicking on the [Click here](#) to check for an upgrade on our support site link and see if an updated firmware is available for your router.

## DDNS Setting

The router supports DDNS (Dynamic Domain Name Service). The Dynamic DNS service allows a dynamic public IP address to be associated with a static host name in any of the many domains, allowing access to a specified host from various locations on the Internet. This is enabled to allow remote access to a host by clicking a hyperlinked URL in the form “hostname.dyndns.org”. Many ISPs assign public IP addresses using DHCP, this can make it difficult to locate a specific host on the LAN using standard DNS. If for example you are running a public web server or VPN server on your LAN, this ensures that the host can be located from the Internet if the public IP address changes. DDNS requires that an account be setup with one of the supported DDNS providers.


**Enable DDNS:** Tick the Enable DDNS checkbox to enable support for DDNS.

**Server** Select one of the DDNS registration organizations from those listed in the pull-down menu. Available servers include *dlinkddns.com(Free)*, *DynDns.org(Custom)*, *Dyn.Dns.org(free)*, and *Dyn.Dns.org(Static)*.

**Host Name:** Enter the host name of the DDNS server.

**Username:** Enter the username given to you by your DDNS server.

**Password:** Enter the password or key given to you by your DDNS server.

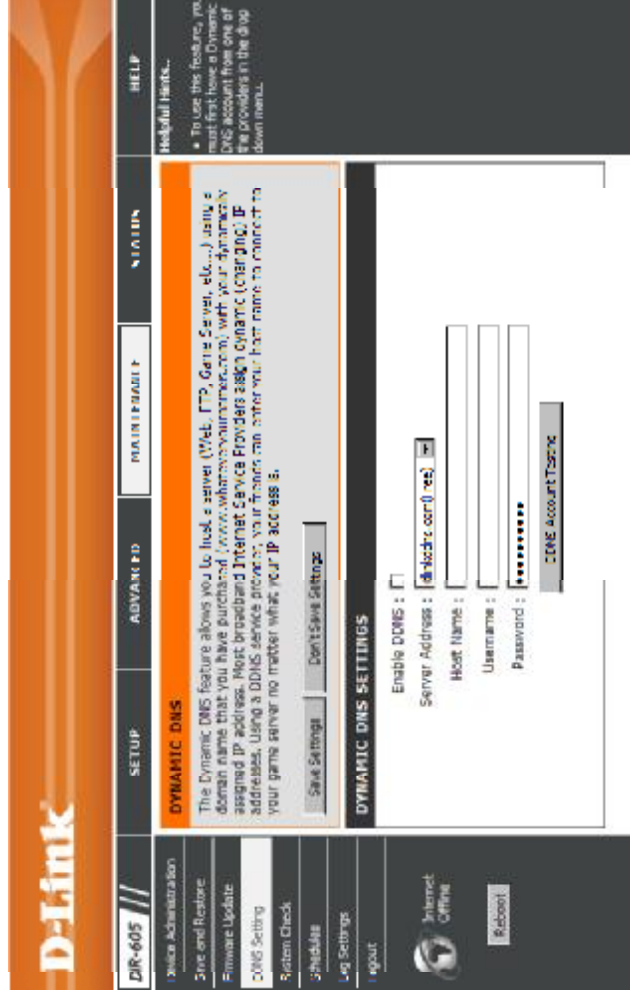

## System Check

This tool is used to verify the physical connectivity on both the LAN and the WAN interfaces. The Ping Test can be used to test the status of the Internet.

**Virtual Cable VCT** is an advanced feature that integrates a **Tester (VCT)** LAN cable tester on every Ethernet port on the router. Through the graphical user interface (GUI), VCT can be used to remotely diagnose and report cable faults such as opens, shorts, swaps, and impedance mismatch. This feature significantly reduces service calls and returns by allowing users to easily troubleshoot their cable connections.

**Ping Test:** The Ping Test is used to send Ping packets to test if a computer is on the Internet. Enter the IP Address that you wish to Ping, and click **Ping**.

**DIR-605**  
Device Administration  
Save and Restore  
Firmware Updates  
DNS Settings  
System Check  
Schedules  
Log Settings  
Logout

**System Check**

**SYSTEM CHECK**  
The System Check tool can be used to verify the physical connectivity on both the LAN and WAN interfaces. The Ping Test tool can be used to verify the status of the Internet.

**VCT VCT-UP**

Port	Link Status	Speed
Gigabit Ethernet	Disconnected	100Mbps
LAN1	Disconnected	100Mbps
LAN2	Disconnected	100Mbps
LAN3	Disconnected	100Mbps
LAN4	Disconnected	100Mbps

**PING TEST**  
Ping test is used to send "ping" packets to test if a computer is on the Internet.

Host Name or IP Address:

**PING**

**Helpful Hint:**  
• Ping checks whether a computer on the Internet is online. It does not check whether the IP address of the target computer or domain name is correct.

## Schedules


The Router allows the user the ability to manage schedule rules for various firewall and parental control features on this window. Once you have finished configuring the new schedule rule, click the **Save Settings** button at the top of the window.

**Name:** Enter a name for the new schedule rule.

**Day(s):** Choose the desired day(s), either All Week or Select Days. If the latter is selected, please use the checkboxes directly below to specify the individual days.

**All Day - 24 hrs:** Tick this check box if the new schedule rule applies to the full 24-hour period.

**Start Time/ End Time:** If the new schedule rule does not apply to the full 24-hour period, untick the previous checkbox and then enter a specific beginning and ending time.

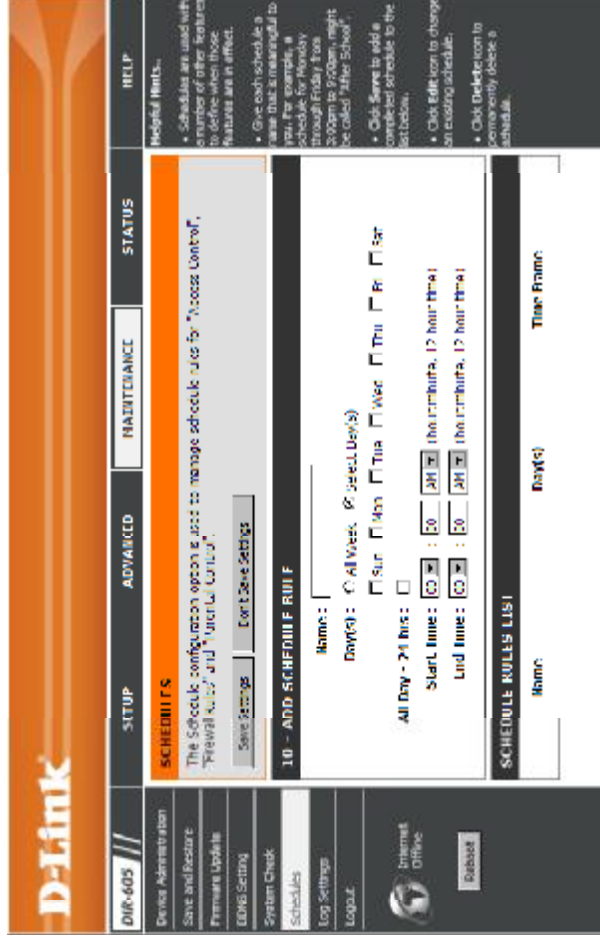


## Log Settings

The system log displays chronological event log data specified by the router user. You may also save a simple text file containing the log to your computer. Click the **Save** button and follow the prompts to save the file.

**Save Log File:** Click on the **Save** button link on this window to save the log file to your local hard drive.

**Log Type:** Click the checkbox(es) of the type of log information requested: System Activity, Debug Information, Attacks, Dropped Packets, and Notice.

**Send by Mail:** Enter the your SMTP server name(or IP address) and enter your mail address before sending your system log by mail.

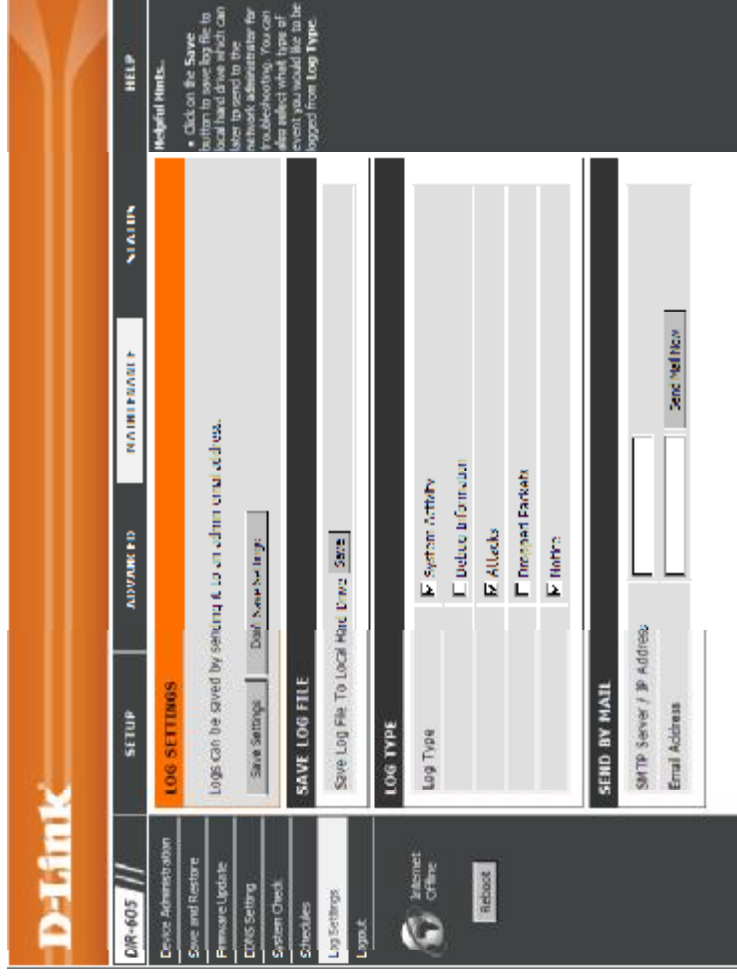

## Device Info

This window displays the current information for the DIR-605. It will display the LAN, WAN, and Wireless information.

If your WAN connection is set up for a Dynamic IP address then a **DHCP Release** button and a **DHCP Renew** button will be displayed. Use **DHCP Release** to disconnect from your ISP and use **DHCP Renew** to connect to your ISP.

If your WAN connection is set up for PPPoE, a **Connect** button and a **Disconnect** button will be displayed. Use **Disconnect** to drop the PPPoE connection and use **Connect** to establish the PPPoE connection.

**LAN:** Displays the MAC address and the private (local) IP settings for the router.

**WAN:** Displays the MAC address and the public IP settings for the router.

**Wireless** Displays the wireless MAC address and your **802.11N:** wireless settings such as SSID, Channel, and Encryption status.

The screenshot shows the D-Link DIR-605 web interface. At the top, there is a navigation bar with tabs for SETUP, ADVANCED, PARTNERACT, STATUS, and HELP. Below this is a sidebar with links for Device Info, Log, Statistics, Active Session, Wireless, and Logout. The main content area is titled "DEVICE INFORMATION" and contains the following text: "All of your internet and network connection details are displayed on this page. The following version is also displayed here." Below this, it shows "Firmware Version : 1.00 , Thu 17 Jan 2009". There are three main sections: LAN, INTERNET, and WIRELESS 802.11N. The LAN section displays MAC Address: 08:00:27:00:00:00, IP Address: 192.168.1.1, Subnet Mask: 255.255.255.0, and DHCP Server: Enabled. The INTERNET section displays MAC Address: 00:1d:68:12:0f:08, Connection: DHCP Client, and buttons for DHCP Release and DHCP Renew. The WIRELESS 802.11N section displays SSID: dlink, Channel: 1, and Encryption: 128 Bits.



# Log

This window allows you to view a log of activities on the Router. This is especially helpful detecting unauthorized network usage.

**First Page:** View the first page of the log.

**Last Page:** View the last page of the log.

**Previous:** View the previous page.

**Next:** View the next page.

**Clear:** Clear the log.

**Link to Log** Click this button to go directly to the Log Settings  
**Settings:** window (**Maintenance > Log Settings**).





## Statistics


The window below displays the Traffic Statistics. Here you can view the amount of packets that pass through the DIR-605 on both the WAN and the LAN ports. The traffic counter will reset if the device is rebooted.

## Active Session

The NAPT Active Session table displays a list of all active conversations between WAN computers and LAN computers.

# Wireless

The wireless client table displays a list of current connected wireless clients. This table also displays the connection time and MAC address of the connected wireless client.

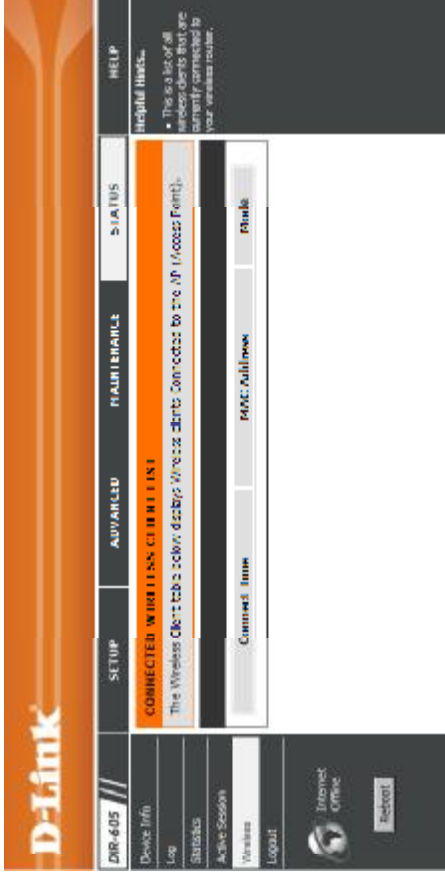

# Help

Click the desired hyperlink to get more information about how to use the Router.

