

Integration Guide

Mizar Radio Module 915 MHz



Table of contents

| | |
|--|---|
| Document history | 3 |
| Introduction | 4 |
| Pinout | 4 |
| Block diagram | 4 |
| Operational description | 5 |
| <i>Working modes</i> | 5 |
| <i>Functional states</i> | 5 |
| Idle State..... | 5 |
| Receive State | 5 |
| Transmission State..... | 5 |
| Interface description (pinout reference) | 6 |
| Electrical characteristics..... | 7 |
| RF characteristics | 7 |
| <i>Low speed mode</i> | 7 |
| <i>High speed mode</i> | 8 |



Document history


| <i>Date</i> | <i>Author</i> | <i>Notes</i> |
|----------------------------------|----------------------|---|
| April 19th, 2012 | Davide Carli | Initial draft |
| May 2nd, 2012 | Davide Carli | Added details on test command(s) 0x86 |
| May 31th, 2012 | Davide Carli | In-depth documentation of test commands |
| July 18th, 2012 | Davide Carli | Added data on current consumption in DEEP SLEEP status |
| April 15th, 2013 | Davide Carli | Updated the description of some test commands |
| December 20 th , 2013 | Davide Carli | Document splitted in 433 MHz and 915 MHz versions RF Characteristics updated according to FW 2.01A and 2.01B Removed outdated information |
| January 15 th , 2014 | Davide Carli | RF Characteristics updated according to FW 2.02B |
| February 11 th , 2014 | Pier Giorgio Peruzzi | Added Operational description and Interface description |




Introduction

Mizar radiofrequency (RF) module operates in the 902-928 MHz ISM frequency band.

Pinout

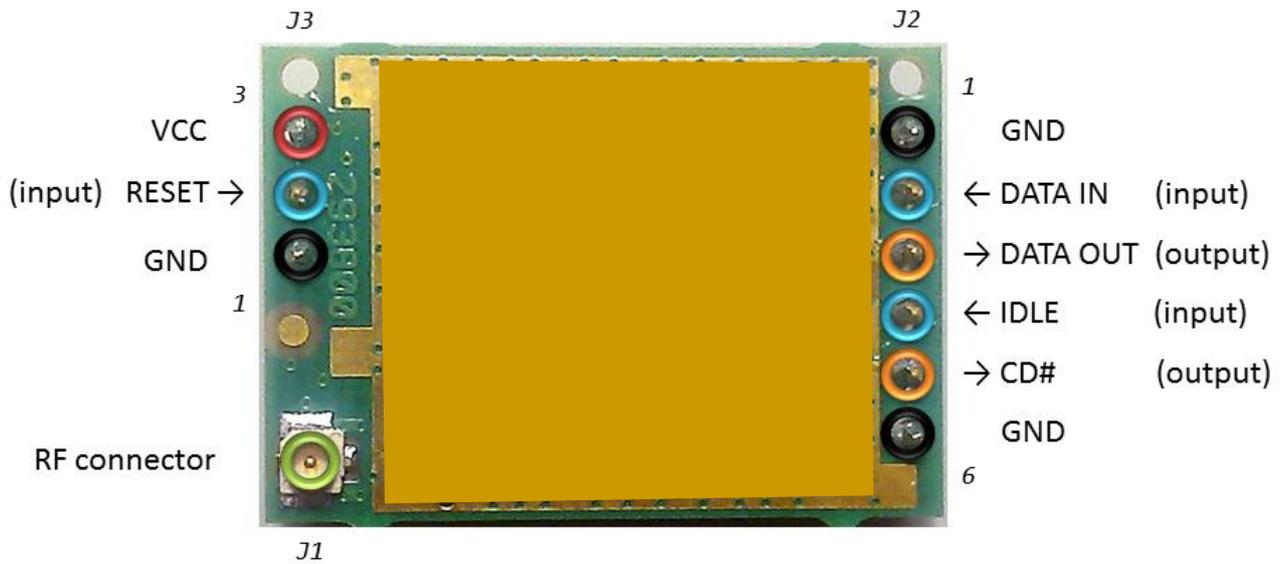

Block diagram

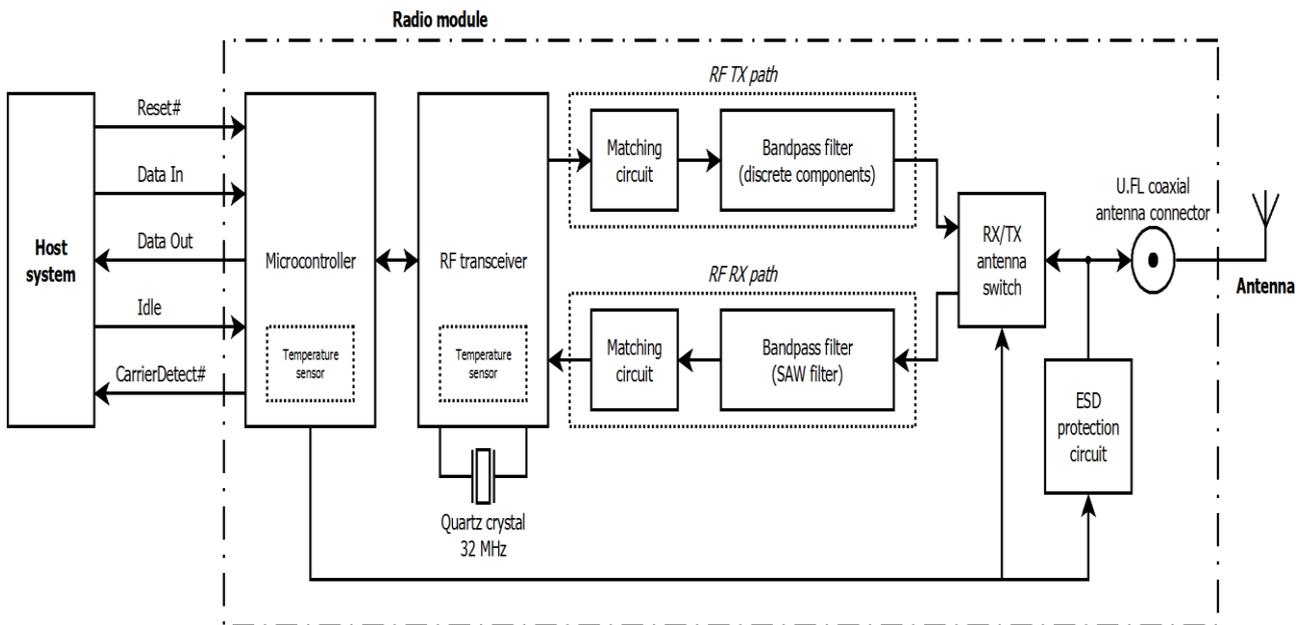

Operational description

The equipment is a radio module to be integrated inside cordless devices.

It is based upon an FSK (Frequency Shift Keying Modulation) Half-Duplex transceiver working in the ISM band from 902 to 928 MHz.

The radio module has a UART interface to exchange data and commands.

Working modes

Radio module can operate in the follow working modes :

- Low Speed, Low Power, fixed channel (among 25 channels)
 - FSK, Bitrate 36864 bps, RZ Manchester encoded, Frequency deviation +/- 75KHz
- Low Speed, Frequency Hopping Mode over 25 channels
 - FSK, Bitrate 36864 bps, RZ Manchester encoded, Frequency deviation +/- 75KHz
- High Speed, Digital Transmission Mode, fixed channel (among 12 channels)
 - FSK, Bitrate 500,000 bps, NRZ, Frequency deviation +/- 220KHz
- High Speed, Digital Transmission + frequency agility Mode over 12 channels
 - FSK, Bitrate 500,000 bps, NRZ, Frequency deviation +/- 220KHz

Default mode after power-up is Low Speed Low Power mode.

Radio module can receive commands to allow to change its working mode.

Functional states

Radio module can be set in one of the following states during operation:

Idle State

Radio module stays in low power receiving mode with a limited capability to receive data. RF transmission is not allowed while radio is set in Idle state.

Receive State

It is the normal default state. In this state the radio receives the RF packets, decodes the packets and sends them to the Host device. In this mode the transceiver checks continuously the RF signal and demodulates it. The demodulated and filtered signal is sent to the microcontroller inside the radio module which decodes it and sends decoded data to the Host by means of the UART interface. Only valid demodulated data packets are sent to the Host.

Transmission State

This state is enabled from the host when it needs to transmit data. The transmission state is enabled sending a data packet to the radio module over the UART interface. The microcontroller in the radio module checks for the integrity of the data packet and enables the transceiver to modulate and transmit to the RF interface, preceded by a short preamble burst. Radio module exits automatically from this state when the complete packet has been transmitted, and returns to the receive state.



Radio module operates in CSMA-CA (carrier sense multiple access – collision avoidance) : transmission is enabled when the RF channel is not busy by the use of a “carrier detect” function. Radio module accesses the channel in a fair way using a backoff algorithm.

Interface description (pinout reference)

UART 2-pin interface, used to exchange data from the Host:

DATA_OUT (output pin) : transmits data to Host.

DATA_IN (input pin) : receives data from Host.

CD# – (output pin) Carrier Detect :

When radio is in receive mode, this pin signals the presence of RF carrier.

IDLE - (input pin) :

A high level on this pin forces the radio module in Idle State.

RESET (input pin) :

A low level on this pin resets the radio module.

VCC and GND :

Radio module power supply.

RF Port :

Radio Frequency Connector for the antenna.



Electrical characteristics

Table 1

| Parameter | Min. | Typ. | Max. | Unit |
|--|------|------|------|------|
| Power supply voltage (between VCC pin and GND pin) | 3,1 | 3,3 | 3,6 | V |
| Operating temperature range | -30 | --- | +85 | °C |

RF characteristics

Low speed mode

Table 2

| Parameter | Typ. value | Unit |
|-------------------------------------|---------------|-------|
| Modulation | RZ Manchester | |
| Bit rate (over-the-air) | 36864 | bit/s |
| Frequency deviation | ± 75,000 | kHz |
| Number of supported channels | 25 | |
| Index of default channel | 8 | |
| Center frequency of default channel | 910,00000 | MHz |

Table 3

| Channel index | Channel center frequency [MHz] |
|---------------|--------------------------------|
| 1 | 902,80050 |
| 2 | 903,82900 |
| 3 | 904,85750 |
| 4 | 905,88600 |
| 5 | 906,91450 |
| 6 | 907,94300 |
| 7 | 908,97150 |
| 8 | 910,00000 |
| 9 | 911,02850 |
| 10 | 912,05700 |
| 11 | 913,08550 |
| 12 | 914,11400 |
| 13 | 915,14250 |
| 14 | 916,17100 |
| 15 | 917,19950 |
| 16 | 918,22800 |
| 17 | 919,25650 |
| 18 | 920,28500 |
| 19 | 921,31350 |
| 20 | 922,34200 |
| 21 | 923,37050 |
| 22 | 924,39900 |
| 23 | 925,42750 |
| 24 | 926,45600 |
| 25 | 927,48450 |



High speed mode

Table 6

| Parameter | Typ. value | Unit |
|-------------------------------------|------------|-------|
| Modulation | NRZ | |
| Bit rate (over-the-air) | 500000 | bit/s |
| Frequency deviation | ± 220,000 | kHz |
| Number of supported channels | 12 | |
| Index of default channel | 4 | |
| Center frequency of default channel | 910,00000 | MHz |

Table 7

| Channel index | Channel center frequency [MHz] |
|---------------|--------------------------------|
| 1 | 903,64900 |
| 2 | 905,76600 |
| 3 | 907,88300 |
| 4 | 910,00000 |
| 5 | 912,11700 |
| 6 | 914,23400 |
| 7 | 916,35100 |
| 8 | 918,46800 |
| 9 | 920,58500 |
| 10 | 922,70200 |
| 11 | 924,81900 |
| 12 | 926,93600 |



Federal Communications Commission (FCC) Statement

You are cautioned that changes or modifications not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) this device may not cause harmful interference, and
- 2) this device must accept any interference received, including interference that may cause undesired operation of the device.

FCC RF Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Industry Canada (IC) Statement

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Canada, avis d'Industry Canada (IC)

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Caution: Exposure to Radio Frequency Radiation.

To comply with RSS 102 RF exposure compliance requirements, a separation distance of at least 20 cm must be maintained between the antenna of this device and all persons.


Pour se conformer aux exigences de conformité CNR 102 RF exposition, une distance de séparation d'au moins 20 cm doit être maintenue entre l'antenne de cet appareil et toutes les personnes

End Product Labeling:

The final end product must be labeled in a visible area with the following:

“Contains FCC ID: U4F0022, IC: 3862D-006”.

Antenna list:
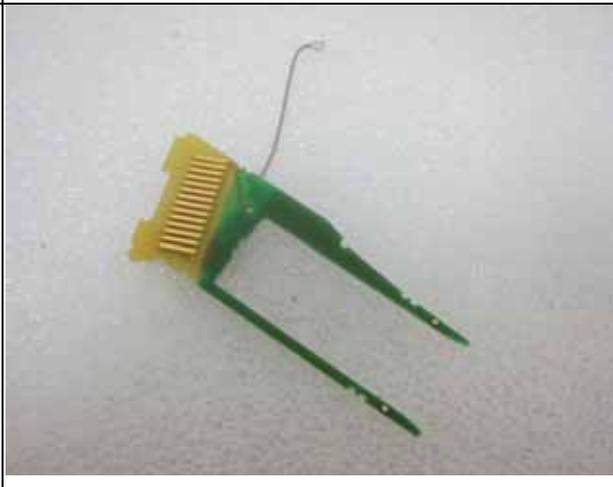
| | |
|---|--|
| <p><i>Rubber Antenna</i> <i>P/N: ANT-916-CW-QW</i></p> |  |
| <p><i>Rubber Antenna</i> <i>P/N: G-RA0K14155047-BON</i></p> |  |
| <p><i>Printing Antenna</i> <i>P/N: 663316020</i></p> |  |