

Dell™ E2009W/E2209W Flat Panel Monitor User's Guide

[About Your Monitor](#)

[Setting Up the Monitor](#)

[Operating the Monitor](#)

[Troubleshooting](#)

[Appendix](#)

Notes, Notices, and Cautions



NOTE: A NOTE indicates important information that helps you make better use of your computer.



NOTICE: A NOTICE indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.



CAUTION: A CAUTION indicates a potential for property damage, personal injury, or death.

Information in this document is subject to change without notice.

© 2008 Dell Inc. All rights reserved.

Reproduction in any manner whatsoever without the written permission of Dell Inc. is strictly forbidden.

Trademarks used in this text: *Dell*, and the *Dell* logo are trademarks of Dell Inc; *Microsoft*, *Windows*, are registered trademarks of Microsoft Corporation; *Adobe* is a trademark of Adobe Systems Incorporated, which may be registered in certain jurisdictions. ENERGY STAR is a registered trademark of the U.S. Environmental Protection Agency. As an ENERGY STAR partner, Dell Inc. has determined that this product meets the ENERGY STAR guidelines for energy efficiency.

Other trademarks and trade names may be used in this document to refer to either the entities claiming the marks and names or their products. Dell Inc. disclaims any proprietary interest in trademarks and trade names other than its own.

Model E2009Wt, E2009Wf, E2209Wf, E2209Wc.

September 2008 Rev. A00


About Your Monitor

Dell™ E2009W/E2209W Flat Panel Monitor User's Guide


- [Package Contents](#)
- [Product Features](#)
- [Identifying Parts and Controls](#)
- [Monitor Specifications](#)
- [Plug and Play Capability](#)
- [Maintenance Guidelines](#)

Package Contents

Your monitor ships with the components shown below. Ensure that you have received all the components and [contact Dell](#) if something is missing.

 **NOTE:** Some items may be optional and may not ship with your Monitor. Some features or media may not be available in certain countries.

	<ul style="list-style-type: none">• Monitor with stand
	<ul style="list-style-type: none">• Power Cable
	<ul style="list-style-type: none">• VGA Cable
	<ul style="list-style-type: none">• DVI Cable
	<ul style="list-style-type: none">• <i>Drivers and Documentation</i> media• <i>Quick Setup Guide</i>• <i>Safety Information</i>

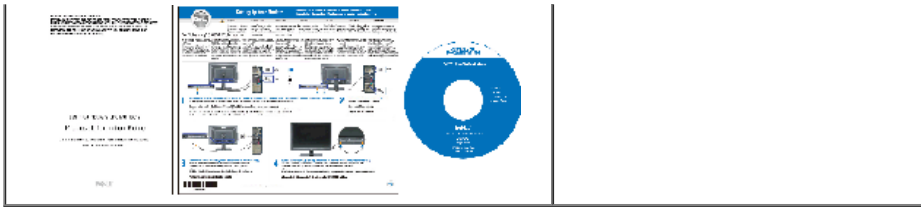

Product Features

The Dell™ E2009W/E2209W flat panel display has an active matrix, thin-film transistor (TFT), liquid crystal display (LCD). The monitor features include:


- **E2009W:**20-inch (508 mm) viewable area display.
- **E2209W:**22-inch (558.68 mm) viewable area display.
- 1680 x 1050 resolution, plus full-screen support for lower resolutions.
- Wide viewing angle to allow viewing from a sitting or standing position, or moving side-to-side.
- Tilt adjustment capabilities.
- Plug and play capability if supported by your system.
- On-Screen Display (OSD) adjustments for ease of set-up and screen optimization.
- Software and documentation media includes an information file (INF), Image color Matching File (ICM), and product documentation.
- Energy Saver feature for Energy Star compliance.
- Asset Management Capable.

Identifying Parts and Controls

Front View




Front View

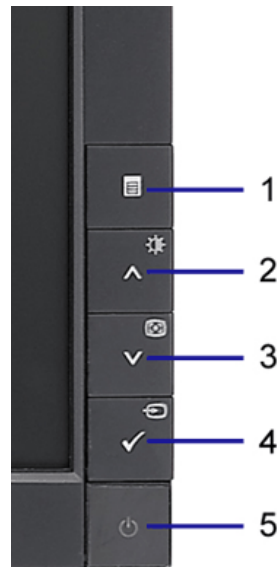

Front panel controls

- | | |
|---|-----------------|
| 1 | OSD menu button |
| 2 | Up button |
| 3 | Down button |
| 4 | OK button |
| 5 | Power button |

Back View

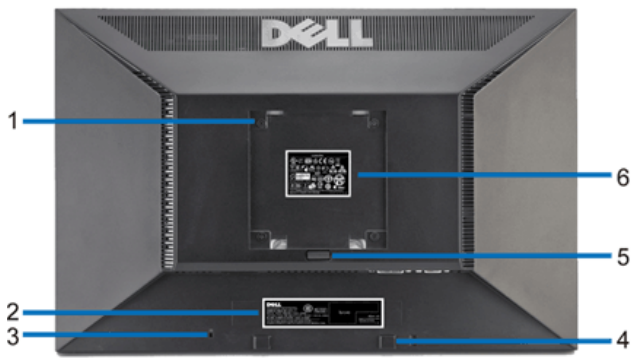

Back view



Back View with monitor stand

Label	Description/Use
1	VESA mounting holes (100mm) (Behind attached VESA plate) Use to mount the monitor.
2	Barcode serial number label Refer to this label if you need to contact Dell for technical support.
3	Security lock slot Use a security lock with the slot to help secure your monitor.
4	Dell Soundbar mounting brackets Attach the optional Dell Soundbar.
5	Stand removal button Press to release the stand.
6	Regulatory rating label Lists the regulatory approvals.
7	Cable management slot Help organize cables by placing them through the slot.


Side View



Left view

Right view

Bottom View

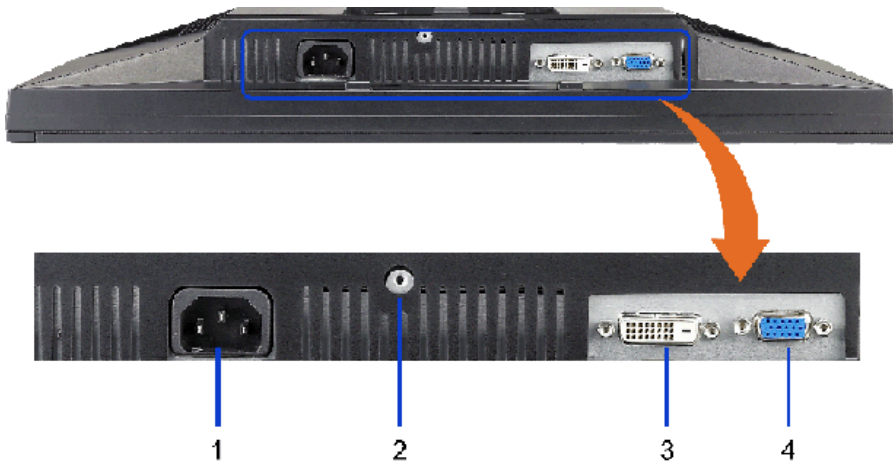

Bottom view

Label	Description
1	AC power cord connector
2	Stand lock
3	DVI connector
4	VGA connector

Monitor Specifications

Flat Panel Specifications

Model	E2009W	E2209W
Screen type	Active matrix - TFT LCD	Active matrix - TFT LCD
Panel type	TN	TN
Screen dimensions	20 inches (20-inch viewable image size)	22 inches (22-inch viewable image size)
Preset display area:		
Horizontal	433.44 mm (17.06 inches)	473.76 mm (18.7 inches)
Vertical	270.90 mm (10.67 inches)	296.1 mm (11.7 inches)
Pixel pitch	0.258 mm	0.282 mm
Viewing angle	160° (vertical) typ, 170° (horizontal) typ	160° (vertical) typ, 170° (horizontal) typ
Luminance output	300 cd/m ² (typ)	300 cd/m ² (typ)
Contrast ratio	1000 to 1 (typ)	1000 to 1 (typ)
Faceplate coating	Antiglare with hard-coating 3H	Antiglare with hard-coating 3H
Backlight	CCFL (4) edgelight system	CCFL (4) edgelight system
Response Time	5ms typical	5ms typical
Color gamut (Typical)	85%*	85%**

* E2009W color gamut (typical) is based on CIE1976 (85%) and CIE1931 (72%) test standards.

** E2209W color gamut (typical) is based on CIE1976 (85%) and CIE1931 (72%) test standards.

Resolution Specifications

Model	E2009W/E2209W
Horizontal scan range	30 kHz to 83 kHz (automatic)
Vertical scan range	56 Hz to 75 Hz (automatic)
Optimal preset resolution	1680 x 1050 at 60 Hz
Highest preset resolution	1680 x 1050 at 60 Hz

Video Supported Modes

Model	E2009W/E2209W
Video display capabilities (DVI playback)	480i/480p/576i/576p/720p/1080i/1080p (Support HDCP)

Preset Display Modes

Display Mode	Horizontal Frequency (kHz)	Vertical Frequency (Hz)	Pixel Clock (MHz)	Sync Polarity (Horizontal/Vertical)
VESA, 720 x 400	31.5	70.0	28.3	-/+
VESA, 640 x 480	31.5	60.0	25.2	-/-
VESA, 640 x 480	37.5	75.0	31.5	-/-
VESA, 800 x 600	37.9	60.0	40.0	+/+
VESA, 800 x 600	46.9	75.0	49.5	+/+
VESA, 1024 x 768	48.4	60.0	65.0	-/-
VESA, 1024 x 768	60.0	75.0	78.8	+/+
VESA, 1152 x 864	67.5	75.0	108.0	+/+
VESA, 1280 x 1024	64.0	60.0	135.0	+/+
VESA, 1280 x 1024	80.0	75.0	135.0	+/+
VESA, 1680 x 1050	65.2	60.0	146.3	-/+
VESA, 1680 x 1050	64.6	60.0	119.0	+/-

Electrical Specifications

Model	E2009W/E2209W
Video input signals	Analog RGB, 0.7 Volts +/-5%, positive polarity at 75 ohm input impedance Digital DVI-D TMDS, 600mV for each differential line, positive polarity at 50 ohm input impedance
Synchronization input signals	Separate horizontal and vertical synchronizations, polarity-free TTL level, SOG (Composite SYNC on green)
AC input voltage/frequency/current	100 to 240 VAC/50 or 60 Hz \pm 3 Hz/2.0A (Max.)
Inrush current	120V: 40A (Max.) 240V: 80A (Max.)

Physical Characteristics

Model	E2009W	E2209W
Connector type	15-pin D-subminiature, blue connector; DVI-D, white connector	15-pin D-subminiature, blue connector; DVI-D, white connector
Signal cable type	Digital: Detachable, DVI-D, Solid pins, shipped detached from the monitor Analog: Detachable, D-Sub, 15pins, shipped attached to the monitor	Digital: Detachable, DVI-D, Solid pins, shipped detached from the monitor Analog: Detachable, D-Sub, 15pins, shipped attached to the monitor
Dimensions (with stand)		
Height	14.96 inches (380.0 mm)	16.01 inches (406.7 mm)
Width	18.5 inches (470.0 mm)	20.13 inches (511.2 mm)
Depth	6.24 inches (158.5 mm)	6.44 inches (163.9 mm)
Dimensions (without stand)		
Height	12.1 inches (310.0 mm)	13.15 inches (334.0 mm)
Width	18.5 inches (470.0 mm)	20.13 inches (511.2 mm)
Depth	2.76 inches (70.0 mm)	2.54 inches (64.5 mm)
Stand dimensions		
Height	11.34 inches (288.0 mm)	12.39 inches (314.7 mm)
Width	10.26 inches (260.5 mm)	10.47 inches (265.9 mm)

Depth	6.24 inches (158.5 mm)	6.44 inches (163.7 mm)
Weight		
Weight with packaging	14.15 lbs (6.42 kg)	16.76 lbs (7.62 kg)
Weight with stand assembly and cables	10.80 lbs (4.90 kg)	13.16 lbs (5.98 kg)
Weight without stand assembly (For wall mount or VESA mount considerations - no cables)	8.10 lbs (3.68 kg)	11.92 lbs (5.41 kg)
Weight of stand assembly	2.64 lbs (1.20 kg)	2.73 lbs (1.24 kg)

Environmental Characteristics

Model	E2009W/E2209W
Temperature	
Operating	5° to 35°C (41° to 95°F)
Non-operating	Storage: -20° to 60°C (-4° to 140°F) Shipping: -20° to 60°C (-4° to 140°F)
Humidity	
Operating	10% to 80% (non-condensing)
Non-operating	Storage: 5% to 90% (non-condensing) Shipping: 5% to 90% (non-condensing)
Altitude	
Operating	3,657.6m (12,000 ft) max
Non-operating	12,192 m (40,000 ft) max
Thermal dissipation	256.08 BTU/hour (maximum) 153.6 BTU/hour (typical)

Power Management Modes

If you have VESA's DPM™ compliance display card or software installed in your PC, the monitor can automatically reduce its power consumption when not in use. This is referred to as *Power Save Mode**. If the computer detects input from keyboard, mouse, or other input devices, the monitor automatically resumes functioning. The following table shows the power consumption and signaling of this automatic power saving feature:

E2009W

VESA Modes	Horizontal Sync	Vertical Sync	Video	Power Indicator	Power Consumption
Normal operation	Active	Active	Active	Blue	38 W (typical)/43 W (maximum)
Active-off mode	Inactive	Inactive	Blanked	Amber	Less than 2 W
Switch off	-	-	-	Off	Less than 1 W

E2209W

VESA Modes	Horizontal Sync	Vertical Sync	Video	Power Indicator	Power Consumption
Normal operation	Active	Active	Active	Blue	40 W (typical)/45 W (maximum)
Active-off mode	Inactive	Inactive	Blanked	Amber	Less than 2 W
Switch off	-	-	-	Off	Less than 1 W

The OSD will only function in the *normal operation* mode. When the **menu** or **plus** buttons are pressed in Active-off mode, one of the following messages will be displayed:

Analog Input In Power Save Mode. Press Computer Power Button or Any Key on Keyboard or Move Mouse

OR

Digital Input In Power Save Mode. Press Computer Power Button or Any Key on Keyboard or Move Mouse

Activate the computer and the monitor to gain access to the OSD.




NOTE: This monitor is ENERGY STAR®-compliant as well as TCO '99/TCO '03 power management compatible.

* Zero power consumption in OFF mode can only be achieved by disconnecting the main cable from the monitor.

Pin Assignments


VGA Connector

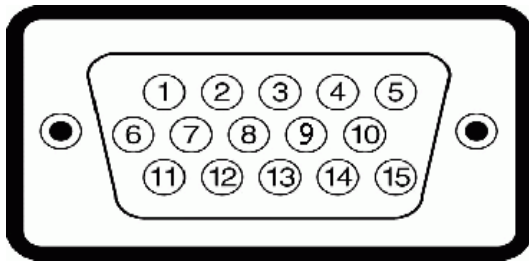

Pin Number 15-pin Side of the Connected Signal Cable

1	Video-Red
2	Video-Green
3	Video-Blue
4	GND
5	Self-test
6	GND-R
7	GND-G
8	GND-B
9	Computer 5V/3.3V
10	GND-sync
11	GND
12	DDC data
13	H-sync
14	V-sync
15	DDC clock

DVI Connector

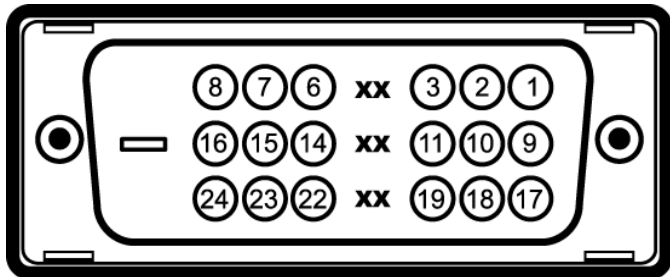

Pin Number 24-pin Side of the Connected Signal Cable

1	TMDS RX2-
2	TMDS RX2+
3	TMDS Ground
4	Floating
5	Floating
6	DDC Clock
7	DDC Data
8	Floating
9	TMDS RX1-
10	TMDS RX1+
11	TMDS Ground
12	Floating
13	Floating
14	+5V/+3.3V power
15	Self test

16	Hot Plug Detect
17	TMDS RX0-
18	TMDS RX0+
19	TMDS Ground
20	Floating
21	Floating
22	TMDS Ground
23	TMDS Clock+
24	TMDS Clock-

Plug and Play Capability

You can install the monitor in any Plug and Play-compatible system. The monitor automatically provides the computer system with its Extended Display Identification Data (EDID) using Display Data Channel (DDC) protocols so the system can configure itself and optimize the monitor settings. Most monitor installations are automatic; you can select different settings if desired. For more information about changing the monitor settings, see [Operating the Monitor](#).

LCD Monitor Quality and Pixel Policy

During the LCD monitor manufacturing process, it is not uncommon for one or more pixels to become fixed in an unchanging state. The visible result is a fixed pixel that appears as an extremely tiny dark or bright discolored spot. In almost every case, these fixed pixels are hard to see and do not detract from display quality or usability. A display with 1 to 5 fixed pixels is considered normal and within competitive standards. For more information, see Dell Support site at: support.dell.com.

Maintenance Guidelines

Cleaning Your Monitor

 **CAUTION:** Read and follow the [safety instructions](#) before cleaning the monitor.

 **CAUTION:** Before cleaning the monitor, unplug the monitor power cable from the electrical outlet.

For best practices, follow the instructions in the list below while unpacking, cleaning, or handling your monitor:

- To clean your antistatic screen, lightly dampen a soft, clean cloth with water. If possible, use a special screen-cleaning tissue or solution suitable for the antistatic coating. Do not use benzene, thinner, ammonia, abrasive cleaners, or compressed air.
 - Use a lightly-dampened, warm cloth to clean the monitor. Avoid using detergent of any kind as some detergents leave a milky film on the monitor.
 - If you notice white powder when you unpack your monitor, wipe it off with a cloth.
 - Handle your monitor with care as dark-colored monitors may scratch and show white scuff marks more than light-colored monitors.
 - To help maintain the best image quality on your monitor, use a dynamically changing screen saver and turn off your monitor when not in use.
-


[Back to Contents Page](#)

Setting Up the Monitor

DELL™ E2009W/E2209W Flat Panel Monitor User's Guide

- [Attaching the Stand](#)
 - [Connecting the Monitor](#)
 - [Organizing the Cables](#)
 - [Attaching the Soundbar \(optional\)](#)
 - [Removing the Stand](#)
 - [Wall Mounting \(Optional\)](#)
-

Attaching the Stand


 **NOTE:** The stand is detached from monitor when they are shipped from the factory.



Place the stand on a flat surface and follow these steps to attach the monitor stand:

1. Fit the groove on the back of the monitor to the two tabs on the upper part of the stand.
 2. Lower the monitor so that the monitor mounting area snaps on to or locks on to the stand.
-


Connecting Your Monitor

 **CAUTION:** Before you begin any of the procedures in this section, follow the [Safety Instructions](#).


To connect your monitor to the computer:

1. Turn off your computer and disconnect the power cable.
2. Connect either the white (digital DVI-D) or the blue (analog VGA) display connector cable to the corresponding video port on the back of your computer. Do not connect both cables on the same computer. Use both the cables only when they are connected to two different computers with appropriate video systems.

Connecting the White DVI Cable

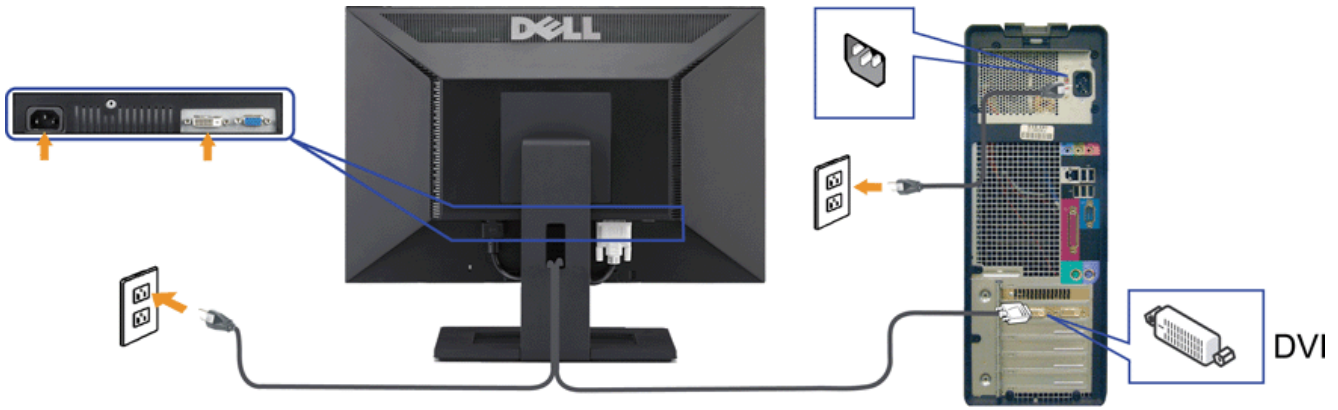

Connecting the Blue VGA Cable

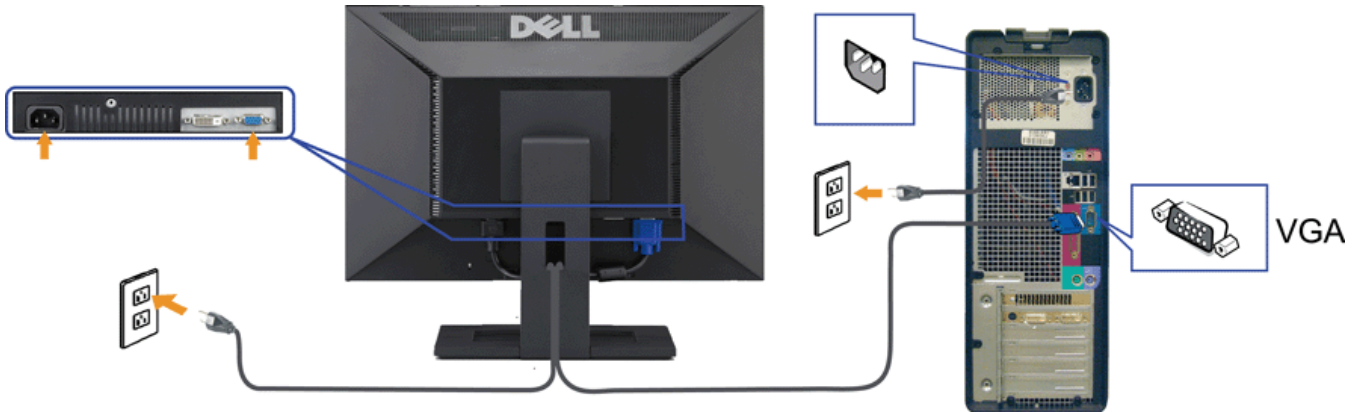

CAUTION: The graphics are used for the purpose of illustration only. Appearance of the computer may vary.

Organizing the Cables



After attaching all necessary cables to your monitor and computer, (See [Connecting Your Monitor](#) for cable attachment,) use the cable management slot to organize all cables as shown above.

Attaching the Soundbar(optional)



➡ **NOTICE:** Do not use with any device other than Dell Soundbar.

1. Working from the rear of the monitor, attach the Dell Soundbar by aligning the two slots with the two tabs along the bottom rear of the monitor.
2. Slide the Dell Soundbar to the left until it snaps into place.
3. Connect the Soundbar with the power brick.
4. Plug the power cables of the power brick into a nearby outlet.
5. Insert the lime-green mini stereo plug from the rear of the Soundbar into the computer's audio output jack.

Removing the Stand


🔪 **NOTE:** To prevent scratches on the LCD screen while removing the stand, ensure that the monitor is placed on a clean surface.

To remove the stand:



1. Press and hold the stand release button.
2. Lift the stand up and away from the monitor .


Wall Mounting (Optional)

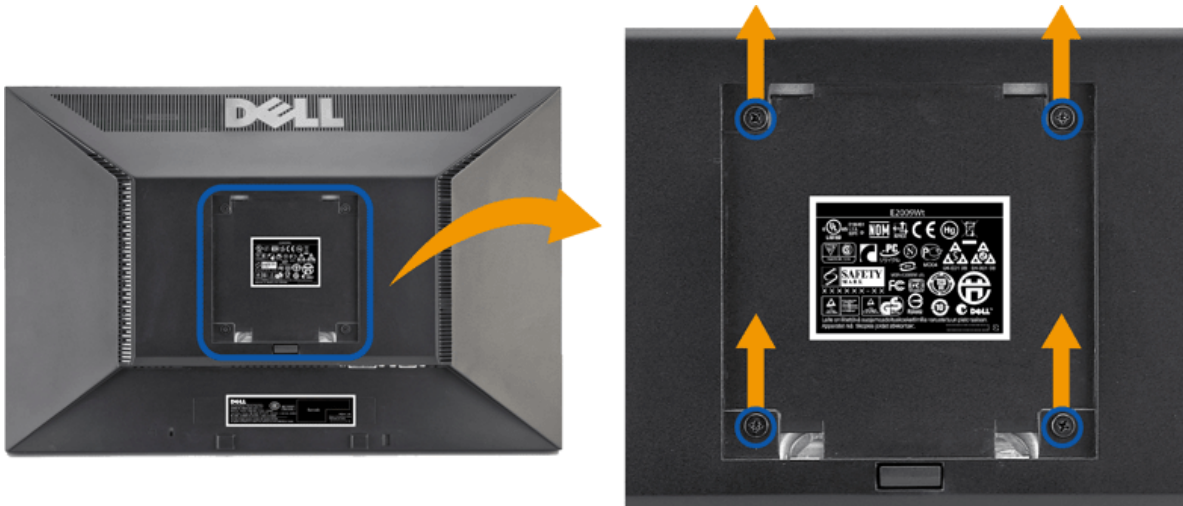

(Screw dimension: M4 x 10mm).

Refer to the instructions that come with the VESA compatible base mounting kit.

1. Place the monitor panel on soft cloth or cushion on stable flat table.
2. Remove the stand
3. Use a screwdriver to remove the four screws securing the plastic cover.
4. Attach the mounting bracket from the wall mounting kit to the LCD.
5. Mount the LCD on the wall by following the instructions that come with the base mounting kit.

 **NOTE:** For use only with UL (expand UL) Listed Wall Mount Bracket with minimum weight/load bearing capacity of 4.36kg.

[Back to Contents Page](#)


Operating the Monitor




Dell™ E2009W/E2209W Flat Panel Monitor User's Guide





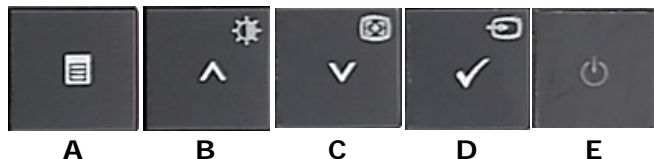



- [Using the Front Panel Controls](#)
- [Using the On-Screen Display \(OSD\) Menu](#)
- [Setting the Optimal Resolution](#)
- [Using the Dell Soundbar \(Optional\)](#)
- [Using the Tilt](#)

Using the Front Panel Controls

Use the control buttons on the front of the monitor to adjust the characteristics of the image being displayed. As you use these buttons to adjust the controls, an OSD shows the numeric values of the characteristics as they change.




Front panel Button		Description
A	 OSD Menu	Use the MENU button to launch the on-screen display (OSD) and select the OSD Menu. See Accessing the Menu System .
B	 Brightness/Contrast Hot Key	Use this button to directly access the "Brightness/Contrast" menu or to increase the values of the selected menu option.
C	 Auto Adjust	<p>Use Auto Adjust to activate automatic setup/adjustment or to decrease the values of the selected menu option.</p> <p>Auto Adjustment allows the monitor to self-adjust to the incoming video signal. After using Auto Adjustment, you can further tune your monitor by using the Pixel Clock and Phase controls under Displays Settings.</p> <p>The following dialog appears on a black screen as the monitor automatically adjusts to the current input:</p> <div style="background-color: black; color: white; text-align: center; padding: 10px; margin: 10px 0;"> Auto Adjustment in progress... </div> <p>NOTE: In most cases, Auto Adjust produces the best image for your configuration.</p> <p>NOTE: AUTO ADJUST option is only available when you are using the analog (VGA) connector.</p>

<p>D</p>	 <p>OK / Input Source Select</p>	<p>Use this button to select the input source or select an OSD menu option. Use the Input source button to select one of the two different video signals that may be connected to your monitor:</p> <ul style="list-style-type: none"> • VGA input • DVI-D input <p>If both VGA and DVI cables are connected to one Computer, this monitor displays an image automatically as long as a video signal is present in either VGA or DVI outputs. On a display connected to two Computers, set equal time for both screen savers. The video input from the movement of the first mouse will activate the display.</p> <p>As you cycle through the inputs, the following messages appear to indicate currently selected input source. It may take 1 or 2 seconds for the image to appear.</p> <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="background-color: black; color: white; padding: 5px; text-align: center;"> <p>1. Auto Detect (Analog) </p> </div> <p>or</p> <div style="background-color: black; color: white; padding: 5px; text-align: center;"> <p>1. Auto Detect (Digital) </p> </div> </div> <div style="display: flex; justify-content: space-around; align-items: center; margin-top: 10px;"> <div style="background-color: black; color: white; padding: 5px; text-align: center;"> <p>2. Analog Input </p> </div> <p>or</p> <div style="background-color: black; color: white; padding: 5px; text-align: center;"> <p>3. Digital Input </p> </div> </div> <p>If either VGA or DVI-D input is selected and both VGA and DVI-D cables are not connected, a floating dialog box as shown below appears.</p> <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="background-color: black; color: white; padding: 5px; text-align: center;"> <p>DELL E2X09W</p>  </div> <p>or</p> <div style="background-color: black; color: white; padding: 5px; text-align: center;"> <p>DELL E2X09W</p>  </div> </div>
<p>E</p>	 <p>Power button (with power light indicator)</p>	<p>Use the Power button to turn the monitor on and off.</p> <p>The blue LED indicates the monitor is on and fully functional. An amber LED indicates DPMS power save mode.</p>

Using the On-Screen Display (OSD) Menu

Accessing the Menu System

 **NOTE:** If you change the settings and then either proceed to another menu or exit the OSD menu, the monitor automatically saves those changes. The changes are also saved if you change the settings and then wait for the OSD menu to disappear.


1. Push the MENU button to launch the OSD menu and display the main menu.

Main Menu for Analog (VGA) Input







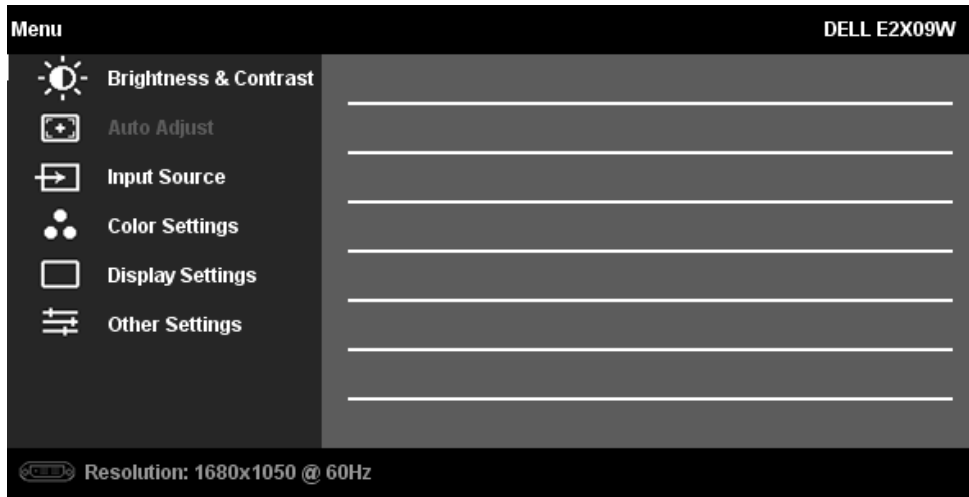



or

Main Menu for Digital (DVI -D) Input



NOTE: AUTO ADJUST is only available when you use the analog (VGA) connector.

2. Push the  and  buttons to move between the setting options. As you move from one icon to another, the option name is highlighted. See the following table for a complete list of all the options available for the monitor.
3. Push the  button once to activate the highlighted option.
4. Push the  and  buttons to select the desired parameter.
5. Push  to enter the slide bar and then use the  or  button, according to the indicators on the menu, to make your changes.
6. Press the **Menu** button once to return to the main menu to select another option or press the **Menu** button two or three times to exit from the OSD menu.


Icon	Menu and	Description
------	----------	-------------




Submenus

BRIGHTNESS & CONTRAST

Use this menu to activate Brightness/Contrast adjustment.

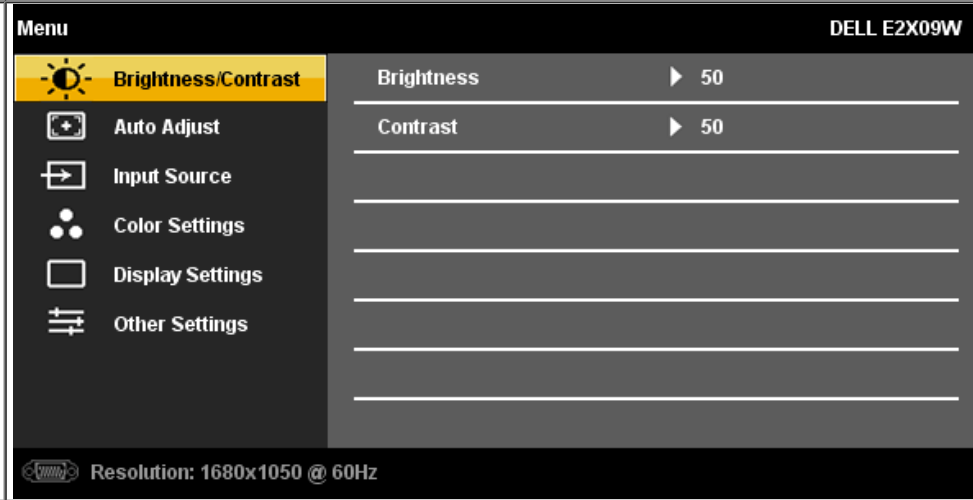

Back

Push  to go back to the main menu.



Brightness

Brightness adjusts the luminance of the backlight.


Push the  button to increase brightness and push the  button to decrease brightness (min 0 ~ max 100).

Contrast

Adjust Brightness first, and then adjust Contrast only if further adjustment is necessary.

Push the  button to increase contrast and push the  button to decrease contrast (min 0 ~ max 100).
The Contrast function adjusts the degree of difference between darkness and lightness on the monitor screen.


Exit Menu

Push  to exit the OSD main menu.



AUTO ADJUST

Even though your computer recognizes your monitor on startup, the Auto Adjustment function optimizes the display settings for use with your particular setup.




NOTE: In most cases, Auto Adjust produces the best image for your configuration.

NOTE: AUTO ADJUST option is only available when you are using the analog (VGA) connector.



INPUT SOURCE

Use the INPUT SOURCE menu to select between different video signals that may be connected to your monitor.

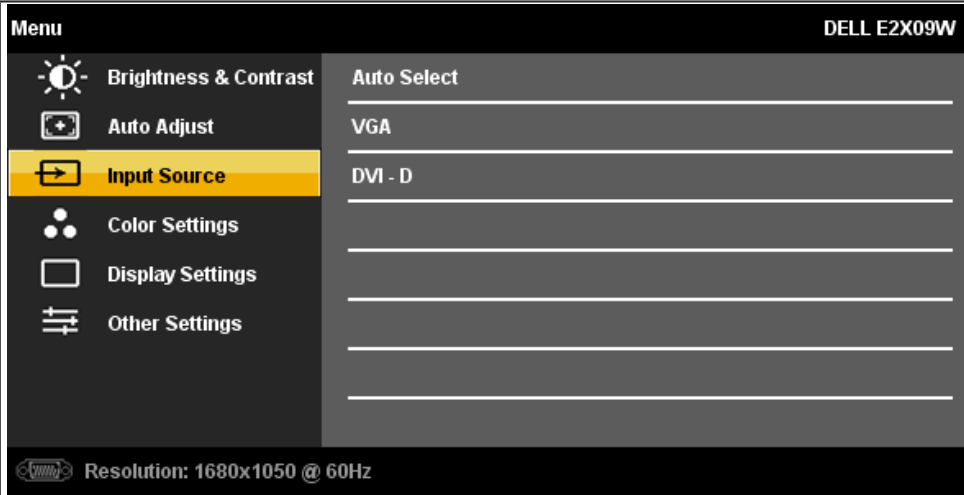

Back

Push to go back to the main menu.

VGA

Select VGA input when you are using the analog (VGA) connector. Push to select the VGA input source.

DVI-D

Select DVI-D input when you are using the Digital (DVI) connector. Push to select the DVI input source.

Scan for Sources

Select Auto Select to scan for available input signals.

Exit Menu


Push to exit the OSD main menu.







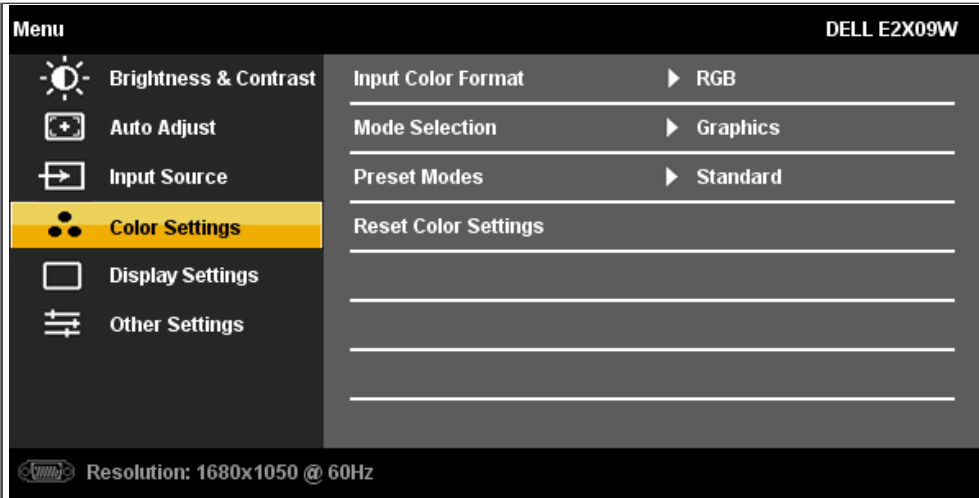


Color Settings

Use the Color Settings to adjust the color setting mode and color temperature. There are different color setting sub-menus for VGA/DVI-D and Video input.



Color setting mode submenu





Back	Push  to go back to the main menu.
Input Color Format	<p>Allows you to set the video input mode to:</p> <ul style="list-style-type: none"> • RGB: Select this option if your monitor is connected to a computer or DVD player using the VGA and DVI cable or the HDMI to DVI adapter. • YPbPr: Select this option if the your DVD player supports only YPbPr output.
Mode Selection	<p>Allows you to set the display mode to:</p> <ul style="list-style-type: none"> • Graphics: Select this mode if your monitor is connected to your computer. • Video: Select this mode if you monitor is connected to a DVD player. <p>NOTE: Depending upon the Display Mode you select the Preset Modes available for your monitor change.</p>
Preset Mode	<p>Allows you to choose from a list of preset color modes.</p> <p>In the Graphics mode, you can set the color to the following preset values:</p> <ul style="list-style-type: none"> • Standard: Loads the monitor's default color settings. This is the default preset mode. • Multimedia: Loads color settings ideal for multimedia applications. • Game: Loads color settings ideal for most gaming applications. • Warm: Increase the color temperature. The screen appears warmer with a red/yellow tint. • Cool: Decreases the color temperature. The screen appears cooler with a blue tint. • Custom (R, G, B): Allows you to manually adjust the color settings. Press the  and  buttons to adjust the Red, Green, and Blue values and create your own preset color mode. <p>In the Video mode, you can set the color to the following preset values:</p> <ul style="list-style-type: none"> • Movie: Loads color settings ideal for movies. This is the default preset mode. • Sports: Loads color settings ideal for sports. • Game: Loads color settings ideal for game. • Nature: Loads color settings ideal for nature.
Hue	<p>This feature can shift color of video image to green or purple. This is used to adjust the desired flesh tone color. Use  or  to adjust the hue from '0' to '100' .</p> <p>Push  to increase the green shade of the video image</p> <p>Push  to increase the purple shade of the video image</p>

NOTE: Hue adjustment is available only for video input.

Saturation

This feature can adjust the color saturation of the video image. Use  or  to adjust the saturation from '0' to '100'.

Push  to increase the monochrome appearance of the video image


Push  to increase the colorful appearance of the video image

NOTE: Saturation adjustment is available only for video input.

Color Reset

Resets your monitor's color settings to the factory defaults.

Exit Menu







Push  to exit the OSD main menu.



DISPLAY SETTINGS







Display Setting submenu

Display Setting submenu for VGA input

Menu		DELL E2X09W	
	Brightness & Contrast	Horizontal Position	▶ 50
	Auto Adjust	Vertical Position	▶ 50
	Input Source	Sharpness	▶ 50
	Color Settings	Pixel Clock	▶ 50
	Display Settings	Phase	▶ 50
	Other Settings	Reset Display Settings	











Resolution: 1680x1050 @ 60Hz

Display Setting submenu for DVI-D input







Menu		DELL E2X09W	
	Brightness & Contrast	Horizontal Position	▶ 50
	Auto Adjust	Vertical Position	▶ 50
	Input Source	Sharpness	▶ 50
	Color Settings	Pixel Clock	▶ 50
	Display Settings	Phase	▶ 50
	Other Settings	Reset Display Settings	

Resolution: 1680x1050 @ 60Hz

Back

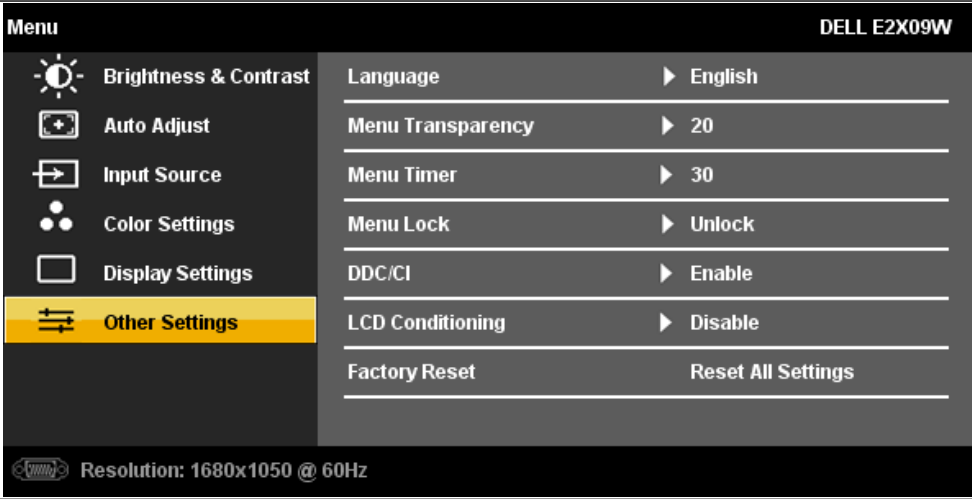	Push  to go back to the main menu.
Horizontal Position	Use the  and  buttons to adjust image left and right. Minimum is '0' (-). Maximum is '100' (+). NOTE: When using a DVI source, the Horizontal Position setting is not available.
Vertical Position	Use the  and  buttons to adjust image up and down. Minimum is '0' (-). Maximum is '100' (+). NOTE: When using a DVI source, the Vertical Position setting is not available.
Sharpness	This feature can make the image look sharper or softer. Use  or  to adjust the sharpness from '0' to '100'.
Pixel Clock	The Phase and Pixel Clock adjustments allow you to adjust your monitor to your preference. Use the  and  buttons to adjust for best image quality.
Phase	If satisfactory results are not obtained using the Phase adjustment, use the Pixel Clock (coarse) adjustment and then use Phase (fine), again. NOTE: Pixel Clock and Phase Adjustments are only available for "VGA" input.
Display Reset	Reset the image to the original factory setting.
Exit Menu	Push  to exit the OSD main menu.



OTHER SETTINGS	
	
Back	Push  to go back to the main menu.
Language	Language option to set the OSD display to one of seven languages (English, Espanol, Francais, Deutsch, Brazilian Portuguese, Japanese, or Simplified Chinese).
Menu Transparency	This function is used to change the OSD background from opaque to transparent.
Menu Timer	OSD Hold Time: Sets the length of time the OSD will remain active after the last time you pressed a button. Use the  and  buttons to adjust the slider in 1 second increments, from 5 to 60 seconds.
Menu Lock	Controls user access to adjustments. When 'Lock' is selected, no user adjustments are allowed. All buttons are locked except  button. NOTE: When the OSD is locked, pressing the menu button will take the user directly to the OSD settings menu, with 'OSD Lock' pre-selected on entry. Press and hold  button for 15 seconds to unlock and allow user access to all applicable settings.
DDC/CI	DDC/CI (Display Data Channel/Command Interface) allows your monitor parameters (brightness, color balance etc) to be adjustable via software on your PC. You can disable this feature by selecting "Disable". You can disable this feature by selecting Disable. The following warning message appears: Select Yes to disable DDC/CI and No to exit with out making changes.

NOTE: For best user experience and optimum performance of your monitor, keep this feature enabled.

WARNING MESSAGE

DELL E2X09W

The function of adjusting display setting using PC application will be disabled.

Do you wish to disable DDC/CI function?

No

Yes

LCD Conditioning

This feature will help reduce minor cases of image retention.

If an image appears to be stuck on the monitor, select **LCD Conditioning** to help eliminate any image retention. Using the LCD Conditioning feature may take some time. Severe cases of image retention are known as burn-in, the LCD Conditioning feature does not remove burn-in.

NOTE: Use LCD Conditioning only when you experience a problem with image retention.

Below warning message appears once user select "Enable" LCD Conditioning.

WARNING MESSAGE

DELL E2X09W

The feature will help reduce minor cases of image retention. Depending on the degree of retention, the program may take some time to run.

Do you wish to continue?

No

Yes

LCD Conditioning is currently in progress. Press any button on the monitor to terminate LCD Conditioning at any time.

NOTE: Press any button on the monitor to terminate LCD Conditioning at any time.

Factory Reset

Reset all OSD settings to the factory preset values.

WARNING MESSAGE


DELL E2X09W

Are you sure you want to reset to default settings?

No



Yes

Exit Menu

Push  to exit the OSD main menu.


OSD Warning Messages

One of the following warning messages may appear on the screen indicating that the monitor is out of synchronization.

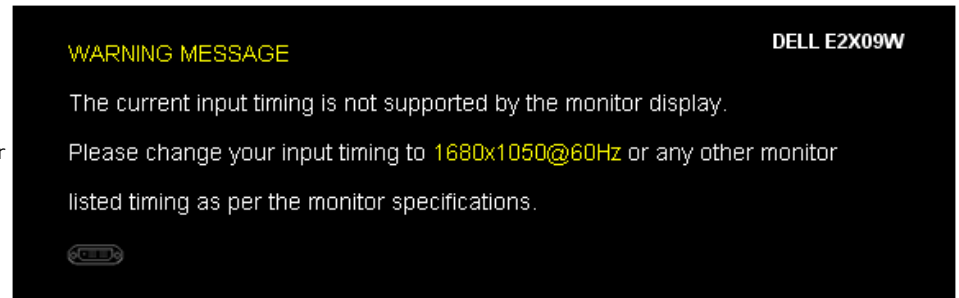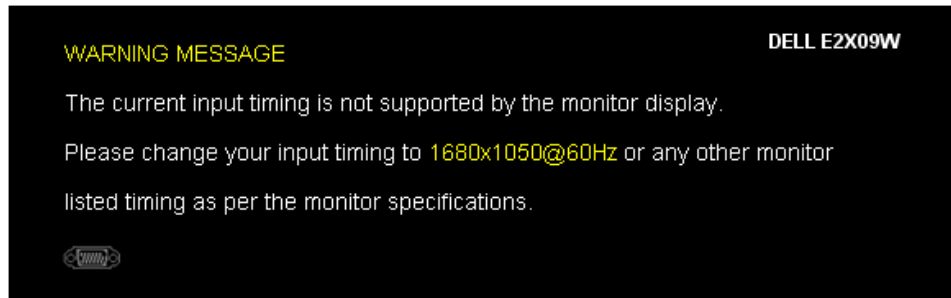

This means that the monitor cannot synchronize with the signal that it is receiving from the computer. See [Monitor Specifications](#) for the Horizontal and Vertical frequency ranges addressable by this monitor. Recommended mode is 1680 X 1050.

You will see the following message before the DDC/CI function is disabled.

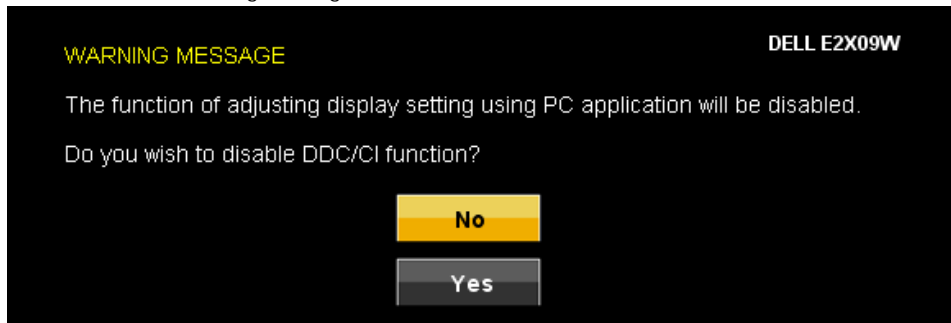


When monitor enters Power Save mode, the following message appears :



Activate the computer and wake up the monitor to gain access to the [OSD](#)

If either VGA or DVI-D input is selected and both VGA and DVI-D cables are not connected, a floating dialog box as shown below appears.

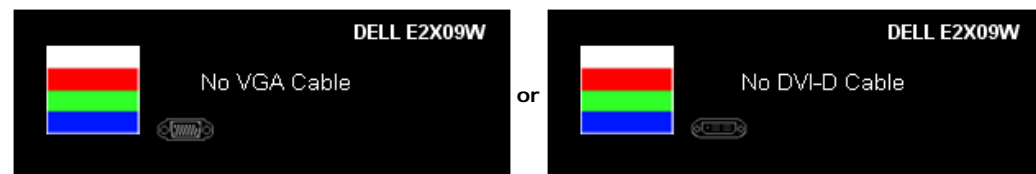

See [Solving Problems](#) for more information.

Setting the Optimal Resolution

To set the optimal resolution for the monitor:

1. Right-click on the desktop and select **Properties**.
2. Select the **Settings** tab.
3. Set the screen resolution to **1680 x 1050**.
4. Click **OK**.

If you do not see 1680 x 1050 as an option, you may need to update your graphics driver. Depending on your computer, complete one of the following procedures:

- If you have a Dell desktop or portable computer:
 - Go to **support.dell.com**, enter your service tag, and download the latest driver for your graphics card.
 - If you are using a non-Dell computer (portable or desktop):
 - Go to the support site for your computer and download the latest graphic drivers.
 - Go to your graphics card website and download the latest graphic drivers.
-

Using the Dell Soundbar (Optional)

The Dell Soundbar is a stereo two channel system, mountable on Dell Flat Panel Displays.



1. Power/volume control
 2. Power indicator
 3. Headphone connectors
-

Using the Tilt



You can tilt the monitor to best fit your viewing needs.

[Back to Contents Page](#)

Troubleshooting

Dell™ E2009W/E2209W Flat Panel Monitor User's Guide

- [Troubleshooting Your Monitor](#)
- [Common Problems](#)
- [Product Specific Problems](#)

CAUTION: Before you begin any of the procedures in this section, follow the [Safety Instructions](#)

Troubleshooting Your Monitor

Self-Test Feature Check

Your monitor provides a self-test feature that allows you to check whether your monitor is functioning properly. If your monitor and computer are properly connected but the monitor screen remains dark, run the monitor self-test by performing the following steps:

1. Turn off both your computer and the monitor.
2. Unplug the video cable from the back of the computer. To ensure proper Self-Test operation, remove both Digital (white connector) and the Analog (blue connector) cables from the back of computer.
3. Turn on the monitor.

The floating dialog box should appear on-screen (against a black background) if the monitor cannot sense a video signal and is working correctly. While in self-test mode, the power LED remains blue. Also, depending upon the selected input, one of the dialogs shown below will continuously scroll through the screen.



4. This box also appears during normal system operation, if the video cable becomes disconnected or damaged.
5. Turn off your monitor and reconnect the video cable; then turn on both your computer and the monitor.




If your monitor screen remains blank after you use the previous procedure, check your video controller and computer, because your monitor is functioning properly.


Built-in Diagnostics

Your monitor has a built-in diagnostic tool that helps you determine if the screen abnormality you are experiencing is an inherent problem with your monitor, or with your computer and video card.

NOTE: You can run the built-in diagnostics only when the video cable is unplugged and the monitor is in *self-test mode*.

To run the built-in diagnostics:

1. Ensure that the screen is clean (no dust particles on the surface of the screen).
2. Unplug the video cable(s) from the back of the computer or monitor. The monitor then goes into the self-test mode.
3. Press and hold the  and  buttons on the front panel, simultaneously for 2 seconds. A gray screen appears.
4. Carefully inspect the screen for abnormalities.
5. Press the  button on the front panel again. The color of the screen changes to red.
6. Inspect the display for any abnormalities.
7. Repeat steps 5 and 6 to inspect the display in green, blue, and white colored screens.

The test is complete when the white screen appears. To exit, press the  button again.

If you do not detect any screen abnormalities upon using the built-in diagnostic tool, the monitor is functioning properly. Check the video card and computer.

Common Problems


The following table contains general information about common monitor problems you might encounter and the possible solutions.

Common Symptoms	What You Experience	Possible Solutions
No Video/ Power LED off	No picture	<ul style="list-style-type: none">• Ensure that the video cable connecting the monitor and the computer is properly connected and secure.

		<ul style="list-style-type: none"> • Verify that the power outlet is functioning properly by using any other electrical equipment. • Ensure that the power button is depressed fully.
No Video/ Power LED on	No picture or no brightness	<ul style="list-style-type: none"> • Increase brightness & contrast controls via OSD. • Perform monitor self-test feature check. • Check for bent or broken pins in the video cable connector. • Run the built-in diagnostics.
Poor Focus	Picture is fuzzy, blurry, or ghosting	<ul style="list-style-type: none"> • Perform Auto Adjust via OSD. • Adjust the Phase and Pixel Clock controls via OSD. • Eliminate video extension cables. • Reset the monitor to Factory Settings. • Change the video resolution to the correct aspect ratio (16:10).
Shaky/Jittery Video	Wavy picture or fine movement	<ul style="list-style-type: none"> • Perform Auto Adjust via OSD. • Adjust the Phase and Pixel Clock controls via OSD. • Reset the monitor to Factory Settings. • Check environmental factors. • Relocate the monitor and test in another room.
Missing Pixels	LCD screen has spots	<ul style="list-style-type: none"> • Cycle power on-off. • Pixel that is permanently off is a natural defect that can occur in LCD technology. • Run the built-in diagnostics.
Stuck-on Pixels	LCD screen has bright spots	<ul style="list-style-type: none"> • Cycle power on-off. • Pixel that is permanently off is a natural defect that can occur in LCD technology. • Run the built-in diagnostics.
Brightness Problems	Picture too dim or too bright	<ul style="list-style-type: none"> • Reset the monitor to Factory Settings. • Auto Adjust via OSD. • Adjust brightness & contrast controls via OSD.
Geometric Distortion	Screen not centered correctly	<ul style="list-style-type: none"> • Reset the monitor to Factory Settings. • Auto Adjust via OSD. • Adjust brightness & contrast controls via OSD. <p>NOTE: When using '2: DVI-D', the positioning adjustments are not available.</p>
Horizontal/Vertical Lines	Screen has one or more lines	<ul style="list-style-type: none"> • Reset the monitor to Factory Settings. • Perform Auto Adjust via OSD. • Adjust Phase and Pixel Clock controls via OSD. • Perform monitor self-test feature check and determine if these lines are also in self-test mode. • Check for bent or broken pins in the video cable connector. • Run the built-in diagnostics. <p>NOTE: When using '2: DVI-D', the Pixel Clock and Phase adjustments are not available.</p>
Synchronization Problems	Screen is scrambled or appears torn	<ul style="list-style-type: none"> • Reset the monitor to Factory Settings. • Perform Auto Adjust via OSD. • Adjust Phase and Pixel Clock controls via OSD. • Perform monitor self-test feature check to determine if scrambled screen appears in self-test mode. • Check for bent or broken pins in the video cable connector. • Restart the computer in the <i>safe mode</i>.
Safety Related Issues	Visible signs of smoke or sparks	<ul style="list-style-type: none"> • Do not perform any troubleshooting steps. • Contact Dell immediately.
Intermittent Problems	Monitor malfunctions on & off	<ul style="list-style-type: none"> • Ensure that the video cable connecting the monitor to the computer is connected properly and is secure. • Reset the monitor to Factory Settings. • Perform monitor self-test feature check to determine if the intermittent problem occurs in self-test mode.
Missing Color	Picture missing color	<ul style="list-style-type: none"> • Perform monitor self-test feature check. • Ensure that the video cable connecting the monitor to the computer is connected properly and is secure. • Check for bent or broken pins in the video cable connector.
Wrong Color	Picture color not good	<ul style="list-style-type: none"> • Change the Color Setting Mode in the Color Settings OSD to Graphics or Video depending to the application. • Try different Color Preset Settings in Color Settings OSD. Adjust R/G/B value in Color Settings OSD if the Color Management is turned off. • Change the Input Color Format to PC RGB or YPbPr in the Advance Setting OSD. • Run the built-in diagnostics.
Image retention from a static image left on the monitor for a long period of time	Faint shadow from the static image displayed appears on the screen	<ul style="list-style-type: none"> • Use the Power Management feature to turn off the monitor at all times when it is not in use (for more information, see Power Management Modes). • Alternatively, use a dynamically changing screensaver.

Product Specific Problems

Specific Symptoms	What You Experience	Possible Solutions
Screen image is too small	Image is centered on screen, but does not fill entire viewing area	<ul style="list-style-type: none"> • Check the Scaling Ratio setting in Image Setting OSD. • Reset the monitor to Factory Settings.
Cannot adjust the monitor with the buttons on the front panel	OSD does not appear on the screen	<ul style="list-style-type: none"> • Turn off the monitor, unplug the power cord, plug back, and then turn on the monitor.
The picture does not fill the entire screen.	The picture cannot fill the height or width of the screen	<ul style="list-style-type: none"> • Due to different video formats (aspect ratio) of DVDs, the monitor may display in full screen.

 **NOTE:** When choosing DVI-D mode, the **Auto Adjust** function is not available.


[Back to Contents Page](#)

Appendix

Dell™ E2009W/E2209W Flat Panel Monitor User's Guide

- [Safety Instructions](#)
 - [FCC Notice \(U.S. Only\) and Other Regulatory Information](#)
 - [Contacting Dell](#)
-

CAUTION: Safety Instructions

 **CAUTION:** Use of controls, adjustments, or procedures other than those specified in this documentation may result in exposure to shock, electrical hazards, and/or mechanical hazards.


For information on safety instructions, see the *Product Information Guide*.

FCC Notices (U.S. Only) and Other Regulatory Information

For FCC notices and other regulatory information, see the regulatory compliance website located at: http://www.dell.com/regulatory_compliance.

Contacting Dell

For customers in the United States, call 800-WWW-DELL (800-999-3355).

 **NOTE:** If you do not have an active Internet connection, you can find contact information on your purchase invoice, packing slip, bill, or Dell product catalog.

Dell provides several online and telephone-based support and service options. Availability varies by country and product, and some services may not be available in your area. To contact Dell for sales, technical support, or customer service issues:

1. Visit support.dell.com.
 2. Verify your country or region in the **Choose A Country/Region** drop-down menu at the bottom of the page.
 3. Click **Contact Us** on the left side of the page.
 4. Select the appropriate service or support link based on your need.
 5. Choose the method of contacting Dell that is convenient for you.
-