



COMSPHERE 3600 SERIES DATA SERVICE UNITS MODELS 3610 AND 3611

USER'S GUIDE

Document No. 3610-A2-GB46-60

December 1996

NOTE

This document supports Firmware version 8.0 or greater.
Refer to Appendix G for Firmware Version Control
Information.

COMSPHERE 3600 Series Data Service Units Models 3610 and 3611

User's Guide
3610-A2-GB46-60

7th Edition (December 1996)

Changes and enhancements to the product and to the information herein will be documented and issued as a new release.

United States

FCC Registration number: AW292J-61661-DD-N
PSTN Ringer Equivalence number (REN) V.32 DBM option 0.7B

Canada

V.32 Dial Backup Module
Certification number: 230 3684 A
DOC Load number: 7
2-Wire Switched 56 DBM
Certification number: 230 5870 A
DOC Load number: 0
ISDN Dial Backup Module
Certification number: 230 6943 A
DOC Load number: 0

Warranty, Sales, and Service Information

Contact your sales or service representative directly for any help needed. For additional information concerning warranty, sales, service, repair, installation, documentation, or training, use one of the following methods:

- **Via the Internet:** Visit the Paradyne World Wide Web site at <http://www.paradyne.com>
- **Via Telephone:** Call our automated call system to receive current information via fax or to speak with a company representative.
 - Within the U.S.A., call 1-800-870-2221
 - International, call 727-530-2340

Trademarks

All products and services mentioned herein are the trademarks, service marks, registered trademarks or registered service marks of their respective owners.



Printed on recycled paper

COPYRIGHT © 1996 Paradyne Corporation. All rights reserved.

This publication is protected by federal copyright law. No part of this publication may be copied or distributed, transmitted, transcribed, stored in a retrieval system, or translated into any human or computer language in any form or by any means, electronic, mechanical, magnetic, manual or otherwise, or disclosed to third parties without the express written permission of Paradyne Corporation, 8545 126th Avenue North, P.O. Box 2826, Largo, Florida 33779-2826.

Paradyne Corporation makes no representation or warranties with respect to the contents hereof and specifically disclaims any implied warranties of merchantability or fitness for a particular purpose. Further, Paradyne Corporation reserves the right to revise this publication and to make changes from time to time in the contents hereof without obligation of Paradyne Corporation to notify any person of such revision or changes.

Important Safety Instructions

1. Read and follow all warning notices and instructions marked on the product or included in the manual.
2. This product is intended to be used with a three-wire grounding type plug – a plug which has a grounding pin. This is a safety feature. Equipment grounding is vital to ensure safe operation. Do not defeat the purpose of the grounding type plug by modifying the plug or using an adapter.

Prior to installation, use an outlet tester or a voltmeter to check the ac receptacle for the presence of earth ground. If the receptacle is not properly grounded, the installation must not continue until a qualified electrician has corrected the problem.

If a three-wire grounding type power source is not available, consult a qualified electrician to determine another method of grounding the equipment.
3. Slots and openings in the cabinet are provided for ventilation. To ensure reliable operation of the product and to protect it from overheating, these slots and openings must not be blocked or covered.
4. Do not allow anything to rest on the power cord and do not locate the product where persons will walk on the power cord.
5. Do not attempt to service this product yourself, as opening or removing covers may expose you to dangerous high voltage points or other risks. Refer all servicing to qualified service personnel.
6. General purpose cables are provided with this product. Special cables, which may be required by the regulatory inspection authority for the installation site, are the responsibility of the customer.
7. When installed in the final configuration, the product must comply with the applicable Safety Standards and regulatory requirements of the country in which it is installed. If necessary, consult with the appropriate regulatory agencies and inspection authorities to ensure compliance.
8. A rare phenomenon can create a voltage potential between the earth grounds of two or more buildings. If products installed in separate buildings are **interconnected**, the voltage potential may cause a hazardous condition. Consult a qualified electrical consultant to determine whether or not this phenomenon exists and, if necessary, implement corrective action prior to interconnecting the products.
9. In addition, if the equipment is to be used with telecommunications circuits, take the following precautions:
 - Never install telephone wiring during a lightning storm.
 - Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations.
 - Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected at the network interface.
 - Use caution when installing or modifying telephone lines.
 - Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
 - Do not use the telephone to report a gas leak in the vicinity of the leak.

Notices

WARNING

THIS EQUIPMENT HAS BEEN TESTED AND FOUND TO COMPLY WITH THE LIMITS FOR A CLASS A DIGITAL DEVICE, PURSUANT TO PART 15 OF THE FCC RULES. THESE LIMITS ARE DESIGNED TO PROVIDE REASONABLE PROTECTION AGAINST HARMFUL INTERFERENCE WHEN THE EQUIPMENT IS OPERATED IN A COMMERCIAL ENVIRONMENT. THIS EQUIPMENT GENERATES, USES, AND CAN RADIATE RADIO FREQUENCY ENERGY AND, IF NOT INSTALLED AND USED IN ACCORDANCE WITH THE INSTRUCTION MANUAL, MAY CAUSE HARMFUL INTERFERENCE TO RADIO COMMUNICATIONS. OPERATION OF THIS EQUIPMENT IN A RESIDENTIAL AREA IS LIKELY TO CAUSE HARMFUL INTERFERENCE IN WHICH CASE THE USER WILL BE REQUIRED TO CORRECT THE INTERFERENCE AT HIS OWN EXPENSE.

THE AUTHORITY TO OPERATE THIS EQUIPMENT IS CONDITIONED BY THE REQUIREMENTS THAT NO MODIFICATIONS WILL BE MADE TO THE EQUIPMENT UNLESS THE CHANGES OR MODIFICATIONS ARE EXPRESSLY APPROVED BY PARADYNE.

WARNING

TO USERS OF DIGITAL APPARATUS IN CANADA:

THIS CLASS A DIGITAL APPARATUS MEETS ALL REQUIREMENTS OF THE CANADIAN INTERFERENCE-CAUSING EQUIPMENT REGULATIONS.

CET APPAREIL NUMÉRIQUE DE LA CLASSE A RESPECTE TOUTES LES EXIGENCES DU RÈGLEMENT SUR LE MATÉRIEL BROUILLEUR DU CANADA.

Government Requirements

Certain governments require that instructions pertaining to connection to the telephone network be included in the installation and operation manual. Specific instructions are listed in the following sections.

United States

Notice to Users of the Telephone Network

This equipment complies with Part 68 of the FCC rules. On the bottom of the equipment is a label or silk-screened text that contains, among other information, the FCC registration number and Ringer Equivalence Number (REN) for this equipment. If requested, please provide this information to your telephone company.

The REN is useful to determine the quantity of devices you may connect to your telephone line and still have all of those devices ring when your number is called. In most areas, the sum of the RENs of all devices should not exceed 5. Call your local telephone company to ascertain the maximum REN for your calling area.

If your Model 3610 or 3611 DSU with DBM causes harm to the telephone network, the telephone company may discontinue your service temporarily. If possible, they will notify you in advance. But if advance notice is not practical, you will be notified as soon as possible. You will be advised of your right to file a complaint with the FCC.

Your telephone company may make changes in facilities, equipment, operations, or procedures that could affect the proper operation of your equipment. If so, you will be given advance notice so as to give you an opportunity to maintain uninterrupted service.

The DBM cannot be used on public coin-operated telephone service provided by the telephone company. Connection to party-line service is subject to state tariffs. Contact the state public utility commission, public service commission, or corporation commission for information.

No repairs may be performed by the user. Should you experience difficulty with this equipment, refer to the *Equipment Warranty and Support* section.

For Digital Data Service (DDS) installations, inform the local telephone company of the appropriate facility interface code for the service you desire.

DDS Facility			
Interface Code	Data Rate (bps)	Interface Code	Data Rate (bps)
04DU5-24	2400	04DU5-38	38,400
04DU5-48	4800	04DU5-56	56,000
04DU5-96	9600	04DU5-64	64,000
04DU5-19	19,200		

For DBM installations, the proper service and jack must be ordered from the telephone company. Refer to the following table for this information.

DBM Jack Installation Requirements				
DBM Type	USOC Jack (Standalone)	USOC Jack (Carrier-Mounted)	Canadian Jack (Standalone)	Canadian Jack (Carrier-Mounted)
12.0 or 14.4 kbps V.32bis DBM	RJ11C Permissive RJ45C Programmable	RJ21X Permissive RJ27X Programmable	CA11A Permissive CA27A Programmable	CA21A Permissive CA27A Programmable
2-Wire Switched 56 DBM	SJA48	SJA48 (uses an adapter cable)	CA11 (metallic channel)	CA21A (metallic channel)
4-Wire Switched 56 DBM	SJA56	SJA57	Not available in Canada	Not available in Canada
ISDN BRI DBM	SJA11	SJA11 (uses an adapter cable)	CA-A11	CA-A11 (uses an adapter cable)

After the telephone company has installed the requested service and jack, you can connect the DSU with the cable provided. An FCC-compliant telephone cord and modular plug are provided with this equipment. This equipment is designed to be connected to the telephone network or premises wiring using a compatible modular jack that is Part 68 compliant.

Canada

Notice to Users of the Canadian Telephone Network

The Canadian Department of Communications has certified that this equipment meets certain telecommunications network protective, operational, and safety requirements. The Department does not guarantee that the equipment will operate to the user's satisfaction.

Before installation, verify connectivity of this equipment to the local telecommunications company's facilities. The equipment must be connected by an acceptable method. In some cases, the telecommunications company's inside wiring associated with single-line individual service may be extended with a certified connector assembly (telephone connection cord). The customer should be aware that compliance with the above conditions may not prevent degradation of service in some situations.

If you experience difficulty with this equipment and require service, refer to the *Equipment Warranty and Support* section.

Repairs to certified equipment should be made by an authorized Canadian maintenance facility. Any repairs or alterations made by the user to this equipment, or equipment malfunctions, may cause the telecommunications company to ask you to disconnect the equipment.

Users should ensure that the electrical ground connections of the power utility, telephone lines and internal metallic water pipe system, if present, are connected together for protection. This precaution may be particularly important in rural areas.

CAUTION

Users should not attempt to make such connections themselves, but should contact the appropriate electric inspection authority, or an electrician, as appropriate.

The load number (LN) is labeled on the equipment. The LN denotes the percentage of the total load to be connected to a telephone loop used by this equipment. To prevent an overload, the total of the LNs of all devices attached to the loop may not exceed 100. The LN also specifies the appropriate ringing type (A or B), if applicable. For example, LN = 20A designates a load number of 20 and an A type ringer.

Equipment Warranty and Support

If you experience trouble with this equipment, please contact your sales or service representative (as appropriate) for repair or warranty information. If the product needs to be returned to the company service center for repair, contact them directly for return instructions using one of the following methods:

- **Via the Internet:** Visit the Paradyne World Wide Web site at <http://www.paradyne.com>
- **Via Telephone:** Call our automated call system to receive current information via fax or to speak with a company representative.
 - Within the U.S.A., call 1-800-870-2221
 - International, call 727-530-2340

If the trouble is causing harm to the telephone network, the telephone company may request that you remove the equipment from the network until the problem is resolved.

Table of Contents

Preface

About This Guide	v
How to Use This Guide	v
Related Documents	v

1. Product Introduction

Standard DSU Features	1-1
Optional DSU Features	1-2
DBM Common Capabilities	1-3
TDM/MCMP and Digital Bridge Capabilities	1-4
Related Documents	1-5

2. Model 3610 Installation

Overview	2-1
Before You Begin	2-1
Installation Process	2-2
DSU Installation Planning	2-2
Verifying the S1 Switch Settings	2-2
Powering Up the DSU	2-4
Power-Up Routine	2-4
Saving and Changing Configuration Options	2-5
Home Screen Display	2-6
DDS Network Connection	2-8
Network Verification Testing	2-8
DTE Connections	2-9
Network Diagnostic Connection	2-9
SNA Diagnostic Interface Verification	2-10
Async Terminal Connection	2-10

3. Front Panel Operation

Overview	3-2
Front Panels	3-2
LCD	3-3
Keypad	3-3
Status Indicators	3-4
Async Terminal Operation	3-5
Menu Structure	3-5
Top-Level Menu	3-5
Local/Remote Menu Branches	3-5
Status Branch	3-6
Health and Status	3-6
DTE Status	3-7
Circuit Quality	3-7
Identity	3-7
Terminal Power	3-7
Backup Branch	3-9
Test Branch	3-9
Abort	3-9
Device Test	3-10
Loopbacks	3-10
Digital Test	3-12
End-to-End Test	3-12
Bit Error Rate Test	3-13
Lamp Test	3-13
Dial Tone Test	3-13
Configuration Branch	3-14
Options	3-14
Poll List	3-15
Directory	3-15
Phone	3-15
Network Address	3-15
Change Protocol Mode	3-15
Async Terminal	3-15
SPID	3-16
Menu	3-16
Control Branch	3-16
Transmitter Control	3-16
LEDs	3-16
External Leads	3-16
Reset	3-17
Remote Branch	3-17
Front Panel Security	3-18

4. Configuration Option Tables

Overview	4-1
Related Documentation	4-1
Configuration Option Tables	4-1
Configuration Option Tables Format	4-1

Appendices

A.	Data Service Unit Menu	A-1
B.	DSU Configuration Worksheet	B-1
C.	Async Terminal Operation	C-1
D.	SNA Diagnostics	D-1
E.	Troubleshooting and Front Panel Messages	E-1
F.	Technical Specifications	F-1
G.	Firmware Version Control Information	G-1

Glossary

Index

Preface

About This Guide

This user's guide provides basic information to get you started using your COMSPHERE 3600 Series Data Service Unit (DSU). It provides a summary of the DSU's features and System Network Architecture (SNA) Diagnostic Interface options.

It is assumed that you are familiar with the functional operation of data communications equipment (DCE).

How to Use This Guide

Chapter 1 gives a general overview of the 3600 Series DSU and SNA Diagnostic Interface options. Refer to this chapter for a summary of standard and optional features. A list of related documents is also included.

Chapter 2 explains how to install and set up your Model 3610 DSU. To install a Model 3611 DSU, refer to the *COMSPHERE 3000 Series Carrier, Installation Manual*.

Chapter 3 provides an overview of the DSU's front panel, status indicators, and menu structure, with a brief description of each branch's purpose or function.

Chapter 4 provides the basics of setting or changing configuration options. Configuration option tables assist you in making appropriate selections when a change to the factory-loaded configuration options may be required.

Appendix A provides DSU factory default configuration option settings and the DSU's menu structure. Refer to the menu tree as you proceed through the menu from the front panel or an async (asynchronous) terminal.

Appendix B provides a configuration worksheet to use during planning.

Appendix C provides async terminal operation details.

Appendix D presents SNA Diagnostics operation.

Appendix E provides troubleshooting and front panel messages.

Appendix F presents local area data set (LADS) connection distances tables and technical specifications.

Appendix G provides firmware version control information.

The Glossary defines acronyms and product-specific terms used in this guide.

Related Documents

For 3600 Series related documentation, see Table 1-1 in Chapter 1.

Product Introduction 1

Standard DSU Features	1-1
Optional DSU Features	1-2
DBM Common Capabilities	1-3
V.32bis DBM	1-3
2-Wire Switched 56 DBM	1-3
4-Wire Switched 56 DBM	1-3
ISDN DBM	1-4
TDM/MCMP and Digital Bridge Capabilities	1-4
TDM Capability	1-4
MCMP Capability	1-4
Digital Bridge Capability	1-5
Related Documents	1-5

Standard DSU Features

The COMSPHERE 3600 Series Data Service Units (DSUs), Models 3610 and 3611, support communication between computers and other data processing devices by providing connections to digital data service (DDS) transmission facilities.

The 3600 Series DSU offers the following standard features:

- **Multispeed operation:** Operates on the DATAPHONE Digital Service network, or equivalent DDS network, at data rates of 2.4, 4.8, 9.6, 19.2, 38.4, 56, and 64 kbps full-duplex. The DSU is also compatible with the ACCUNET Spectrum of Digital Services network (ASDS), and supports 64 kbps Clear Channel operation on a 72 kbps local loop.
- **Nondisruptive diagnostics:** In a nondisruptive diagnostic network, transmits all communications without interruption to user-transmitted data.
- **Async/Sync conversion:** Provides point-to-point and multipoint asynchronous-to-synchronous data conversion for DTE ports. The DSU can send asynchronous data over a synchronous network.
- **Automatic rate detection:** The DSU supports detection of the DDS data rate automatically.
- **User-selectable interfaces:** Two user-selectable data terminal equipment (DTE) interfaces for data rates up to 64 kbps.
 - EIA/TIA-232-E interface for operation at data rates up to 19.2 kbps with standard cable and rates up to 64 kbps with a low capacitance cable
 - V.35 interface for data rates up to 64 kbps
- **LADS operation:** Can operate as a local area data set (LADS) at data rates of 2.4, 4.8, 9.6, 19.2, 38.4, 56, or 64 kbps full-duplex (sometimes called a limited-distance modem or LDM).
- **Flexible device control:** The 3600 Series DSUs provide access to the COMSPHERE 6700 or 6800 Series Network Management System (NMS) and are compatible with DATAPHONE II System Controller, Diagnostic Console, or Network Controller.
- **Rate adaption:** When a DSU or DBM is operating with a data rate greater than the DTE, rate adaption is automatically enabled. Both point-to-point and multipoint configurations support rate adaption.
- **Crossed-pair detection:** Generates a facility alarm when the DDS receive and transmit pairs are crossed.

- **Multiple sets of factory defaults:** Provides several full sets of default configuration options in DSU memory for:

- Control (FacC)
- Tributary (FacT)
- Central-Site Digital Bridge (FacB)
- Multipoint Control (MPTC)
- Multipoint Tributary (MPTT)

Options sets can be saved to several storage areas.

- **Front panel control:** Provides control from a front panel with a 2-line, 16-character liquid crystal display (LCD), light-emitting diode (LED) status indicators, and software-defined function keys.

- Model 3610 has a front panel
- Model 3611 has a shared diagnostic control panel (SDCP), which is mounted on the COMSPHERE 3000 Series Carrier. The SDCP can be shared by as many as 128 DSUs

Either front panel provides:

- Health and Status information
- Modifiable configuration options
- Initiation of tests and commands
- Reports of test results
- Management of remote DSUs

- **Network interface (aggregate):** Provides an additional mode of dial backup. When Network Interface is set to aggregate switch or forced on, the DSU provides an internal aggregate data stream, including diagnostics, framing, and standby mode on the alternate V.35 or EIA-232 interface of Port 1.

- **Full tributary diagnostics:** Supports an enhanced set of diagnostic tests and commands. The set of diagnostics can be addressed to tributaries from:

- A COMSPHERE 6700 or 6800 Series NMS workstation
- The front panel
- The async terminal of a control DSU
- A DATAPHONE II System Controller or Network Controller

- **Point-to-Point and Multipoint:** Supports both link configuration options.

- **Async terminal control:** Provides control from an async (asynchronous) VT100-compatible terminal. This feature is available only for a Model 3610 standalone DSU.

- **External dial backup:** Provided by an external dial backup unit (DBU), such as a 3800 Series dial/lease modem, for a point-to-point DSU.

- **SNA Diagnostic Interface:** The 3600 Series DSU has SNA (System Network Architecture) Diagnostic Interface with the LPDA-2 protocol installed on the circuit card. LPDA-2 (Link Problem Determination Aid, Release 2) diagnostics are part of IBM's NetView management system.

When enabled, the SNA Diagnostic Interface provides the following features:

- LPDA-2 protocol, allowing the 3600 Series DSU to be controlled from IBM's NetView management program.
- Full option support for all other 3600 Series DSU options, including Dial backup module (DBM), Time division multiplexer (TDM), and Multichannel multipoint (MCMP).
- With TDM/MCMP, Port 1 supports LPDA-2. For digital sharing, LPDA-2 support is available on all ports.

Optional DSU Features

The 3600 Series DSU offers a number of optional features:

- **Dial Backup Modules:**
 - ISDN (Integrated Services Digital Network) DBM – Basic Rate Interface (BRI) 1B+D with digital 2-wire 2B1Q U interface
 - 2-wire Switched 56 DBM – digital access
 - 4-wire Switched 56 DBM – digital access
 - V.32bis DBM – 14.4 kbps analog modem
- TDM/MCMP
- Digital Bridging

DBM Common Capabilities

Integrated DBMs ensure continuity of service if the DDS connection fails. DBM childboards are attached to the DSU circuit card. The DBM option offers the following features:

- **Automatic backup and restoration:** When configured for automatic operation, the DSU/DBM detects a network failure, performs the dial backup, and restores the data path to the DDS circuit when the network returns to service.
- **Interoperability:** Provides digital DBM compatibility. The ISDN DBM, 2-wire Switched 56 DBM, and 4-wire Switched 56 DBM can communicate with each other at 56 kbps.
- **Independent operation:** Although the DSU and DBM are functionally integrated, you can configure each separately and run most tests independently.
- **Security:** Provides multiple levels of call setup security. Prevents unauthorized access and invalid calls to the DBM.
- **Dial backup support:** Provides DBM support of TDM or MCMP networks.
- **Flexible device control:** Provides control of the DBM from an NMS, the DSU's front panel, an async terminal, or automatically by the DSU/DBM. DBMs support a comprehensive set of diagnostics, tests, and commands.
- **Installation choices:** Orderable from the factory as one unit with the dial backup option installed on the DSU or a DBM field-installable upgrade.
- **V.13 operation:** Provides pseudo-switched carrier operation from the tributary to the control.
- **Non-interfering testing:** Allows data to be sent on a DDS facility while performing a test on the active DBM over the dial backup facility without disrupting data on the DDS line.
- **Bridging:** Digital bridging provides dial backup of multipoint configurations. When ordered from the factory as a DBM-X for Model 3611, does not function as a DSU. A DBM-X is a Model 3611 DBM-D, DBM-I, DBM-S, or DBM-V.

V.32bis DBM

The V.32bis 14.4 kbps analog DBM childboards offer the following features:

- **Multispeed point-to-point backup:** Provides point-to-point service over the 2-wire dial network at a customer-specified rate at full-duplex.
- **Data rates:** Provides DBM speeds up to 14.4 kbps using standard dial lines.

2-Wire Switched 56 DBM

The 2-wire Switched 56 DBM childboards provide dial backup capability through the switched 56 kbps digital service. The Switched 56 DBM offers the following features:

- **Network compatibility:** Provides 2-wire Switched 56 DBM service restoration of failed DDS circuits over compatible switched 56 kbps services from the Local Exchange Carrier (LEC) or long distance carrier for:
 - AT&T's ACCUNET Switched 56 kbps Service
 - MCI's 56 kbps Switched Digital Service
 - Northern Telecom's DataPath 2-wire Service
 - US SPRINT's VPN56
- **Data rates:** Operates at 56 kbps full-duplex and uses proprietary rate adaption to support data rates that are less than 56 kbps.

4-Wire Switched 56 DBM

The 4-wire Switched 56 DBM childboards provide dial backup capability through the switched 56 kbps digital service. The Switched 56 DBM offers the following features:

- **Network compatibility:** Provides 4-wire Switched 56 DBM service restoration of failed DDS circuits over compatible switched 56 kbps services from LEC or long distance carrier for:
 - AT&T's ACCUNET Switched 56 kbps Service
 - MCI's 56 kbps Switched Digital Service
 - US SPRINT's VPN56
- **Data rates:** Operates at 56 kbps full-duplex and uses proprietary rate adaption to support data rates of less than 56 kbps.

ISDN DBM

The ISDN DBM childboards offer the following features:

- **ISDN digital service restoration:** Provides backup capability if the DDS private line fails. The ISDN DBM operates on a digital 2-wire 2B1Q (U interface). The BRI operates with a 64 kbps B-channel and a D-channel for signaling (1B+D). Supports the following protocols and switches:
 - AT&T 5ESS
 - DMS-100
 - NI-1 (National ISDN-1)
 - NI-2 (National ISDN-2)
- **Data rates:** Operates at 64 or 56 kbps full-duplex and uses proprietary rate adaption to support data rates of less than 56 kbps.

TDM/MCMP and Digital Bridge Capabilities

TDM capability allows up to six independent ports to share one standard digital point-to-point facility. MCMP capability allows up to six ports to share one standard 56 kbps multipoint facility. Digital bridge is available with either TDM or MCMP. Similar features are:

- **Async/Sync conversion:** Provides up to six ports configurable for asynchronous-to-synchronous operation.
- **FEP port sharing:** Provides a method of connecting a front-end processor (FEP) to two consecutive ports to broadcast the same message over the network and the shared ports.
- **Elastic store per port:** Provides a transmit elastic store buffer for each port to support extended circuits. Supports both digital and analog extensions.
- **Switched-carrier emulation:** Provides optional switched-carrier emulation for each port for both the inbound and outbound directions.

TDM Capability

Additional TDM capability includes the following features:

- **Port capacity:** Allows up to six independent ports to share one standard digital point-to-point facility. Provides Port 1 on the DSU and five EIA-232 or V.35 ports on the TDM circuit card. Model 3611 provides EIA-232 for Ports 2–6.
- **Digital sharing:** Allows two groups of consecutive ports to share the same TDM channel. All ports in a digital-sharing group operate at the same speed and receive the same data.
- **Models:** There are two versions of the Model 3610 standalone TDM/Flex:
 - 2-port TDM/Flex
 - 6-port TDM/Flex

With either Flex model, each port can be set independently as either an EIA-232 or V.35 interface.

- **Digital bridge:** Performs digital bridge functions and supports many applications, including dedicated multipoint dial backup and multipoint LADS operation.
- **Flexible device control:** Provides the same diagnostic capabilities as a point-to-point 3600 Series DSU without the TDM option. Allows control of the TDM option from the front panel, or from a 6700 or 6800 Series NMS.
- **Point-to-point backup:** Allows a DSU with TDM to have a DBM installed for point-to-point dial backup.

MCMP Capability

Additional MCMP capability includes the following features:

- **Channel capacity:** Allows up to six virtual multipoint circuits over one 56 kbps DDS multipoint facility.
- **Digital sharing:** Allows up to three digital-sharing groups at each tributary site by assigning channels to more than one port. All ports operate at the same speed and receive the same data.

MCMP capability allows digital sharing and multiplexing simultaneously at any tributary site.

- **Models:** There are two versions of the Model 3610 standalone MCMP/Flex:
 - 2-port MCMP/Flex
 - 6-port MCMP/Flex

With either Flex model, each port can be set independently as either an EIA-232 or V.35 interface. Model 3611 provides EIA-232 for Ports 2–6.

- **Number of addressable devices:** Supports up to 40 tributary DSUs or 20 tributary DSUs with DBMs, each equipped with an MCMP circuit card.
- **Multipoint dial backup:** Provides multipoint service restoration with extended bridges using the Network Interface configuration option to allow dial backup.

Digital Bridge Capability

Digital bridging is primarily used for dedicated multipoint dial backup. The ISDN, dial, or switched 56 kbps network provides backup support.

The digital bridge capability is dedicated to a single DSU. The DTE connected to the DSU is usually the controlling DTE of a multipoint network. Configure the TDM/MCMP option to provide the digital bridge capability.

Digital bridging, when used to support dedicated multipoint dial backup, includes the following features:

- **Number of tributaries:** Provides dedicated multipoint dial backup for up to 20 tributary DSUs.
- **Partial and full backup:** Provides multipoint dial backup for both partial and full backup on DDS multipoint circuits.
- **Restoration:** When the DSU rate equals the DBM rate, preconfigured tributary DSUs can automatically drop the backup connection and switch back to the DDS facility when the DDS network is restored.

Related Documents

Table 1-1 lists 3600 Series related documentation. The following is a list of technical reference documents.

- ANSI T1.410 – 1992
- ANSI T1.601 – 1992
- ANSI X3.64 – 1979 (Reaffirmed 1990)
- AT&T Technical Reference 41458
- AT&T Technical Reference 61330
- AT&T Technical Reference 62310 – 1993
- Bell Canada DCTE Specifications – 1989
- Bell Communications Research Technical Reference Publication 41028
- Bellcore Special Report SR-NWT-001953
- DATAPHONE II 2600 Series Data Service Units User's Manual
- EIA/TIA-232-E (ISO 2110)
- Integrated Network Corporation Compatibility Bulletin CB-INC-101
- ITU-TSS V.35 (ISO 2593)
- Northern Telecom NIS S204-2 1986
- Pacific Bell PUB L-780035-PB/NB
- Pacific Bell PUB L-780036-PB/NB

**Table 1-1
COMSPHERE 3600 Series Product-Related Documentation**

Document Name	Document Number	Description
COMSPHERE 3600 Series Data Service Units, Models 3610 and 3611, Time Division Multiplexer, Multichannel Multipoint, and Digital Bridge Options Supplement	3610-A2-GB48	Supplement to this User's Guide. Shipped with all standalone 3610 DSUs with TDM, MCMP, or Digital Bridge options or upgrades. Provides descriptions of TDM, MCMP, and Digital Bridge features, installation instructions, front panel operation, configuration options and worksheets, troubleshooting, messages, and specifications.
COMSPHERE 3600 Series Data Service Units, Models 3610 and 3611, Dial Backup Module Options Supplement	3610-A2-GB49	Supplement to this User's Guide. Shipped with all standalone 3610 DSUs with Dial Backup Modules or upgrades. Provides descriptions of DBMs, features, installation instructions, front panel operation, configuration options and worksheets, troubleshooting, messages, and specifications.
COMSPHERE Model 3610 2-port or 6-port TDM/Flex or MCMP/Flex Upgrade Installation Instructions	3610-A2-GZ51	Shipped with field-installable TDM/Flex or MCMP/Flex upgrades. Contains Model 3610 Flex MUX installation procedures.
COMSPHERE 3600 DBM Option Installation Instructions	3610-A2-GZ52	Shipped with field-installable dial backup upgrades. Contains installation procedures for all Model 3610 and 3611 DBM types.
COMSPHERE 3000 Series Carrier Installation Manual	3000-A2-GA31	Shipped with every carrier. Contains installation procedures for the carrier and its components, options, and operation.
COMSPHERE –48 Vdc Central Office Power Unit, Installation Guide	3000-A2-GB41	Shipped with every –48 Vdc power unit. Includes descriptions of features, installation instructions, troubleshooting, specifications, and an equipment list.
COMSPHERE 6800 Series Network Management System, Communications Products Support Command Reference Manual	6800-A2-GB31	Shipped with software. Provides descriptions of device commands for interaction between 6800 Series NMS and other product lines.
COMSPHERE 6700 Series Network Management System, User's Guide	6700-A2-GY31	Shipped with software and is orderable. Provides descriptions of NMS features, installation instructions, configuration setup, display and statistics options, reports generation, online help conventions, and input forms.

Model 3610 Installation **2**

Overview	2-1
Before You Begin	2-1
Installation Process	2-2
DSU Installation Planning	2-2
Verifying the S1 Switch Settings	2-2
Powering Up the DSU	2-4
Power-Up Routine	2-4
Saving and Changing Configuration Options	2-5
Home Screen Display	2-6
DDS Network Connection	2-8
Network Verification Testing	2-8
DTE Connections	2-9
Network Diagnostic Connection	2-9
SNA Diagnostic Interface Verification	2-10
Async Terminal Connection	2-10

Overview

The Model 3610 DSU is delivered with default switch settings and factory-installed software options. The factory default configuration option set is FacT.


The Model 3610 DSU is ready to connect to the network. No on-site assembly is required.

Before You Begin

Before connecting any cables to your DSU, verify the following:

- There is a dedicated grounded ac outlet within 6 feet that is protected by a circuit breaker. Label the circuit breaker that protects the ac outlet and ensure that the circuit breaker is set to ON.
- Your installation site is clean, well-lit, ventilated, and free from environmental extremes.
- You have contacted the telephone company to coordinate installing your DSU to the DDS network. The DSU can only operate at the data rate provided by the DDS network. The DBM, if enabled, should also be connected to the dial network.

- Your package contains a power cord and ac transformer.

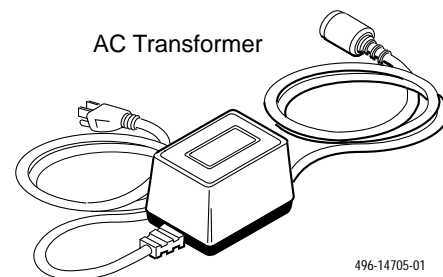

CAUTION

Only use the power transformer designed for the Model 3610 DSU. Using other transformers may result in personal injury or damage to the equipment.

Installation Process

- Verifying the S1 Switch Settings
- Powering Up the DSU
- Connecting to the DDS Network
- Network Verification Testing
- DTE Connections

DSU Installation Planning

The Model 3610 DSU is designed for desktop operation.

- Place the DSU in the planned location.
- Allow 1 to 2 feet of clearance for cable connections, space for the ventilation slots on the sides, and clearance at the rear for the cable connections.
- Verify the S1 switch settings as indicated below.

Verifying the S1 Switch Settings


HANDLING PRECAUTIONS FOR STATIC-SENSITIVE DEVICES

This product is designed to protect sensitive components from damage due to electrostatic discharge (ESD) during normal operation. When performing installation procedures, however, take proper static control precautions to prevent damage to equipment. If you are not sure of the proper static control precautions, contact your nearest sales or service representative.

The Model 3610 DSU has a switch located under the front panel. To verify or change the S1 switch settings, remove the front bezel:

 **Procedure**

1. Place a small screwdriver or your thumbs under the two tabs on the outside edges of the front bezel. Firmly press upward to separate the bezel from the tabs.

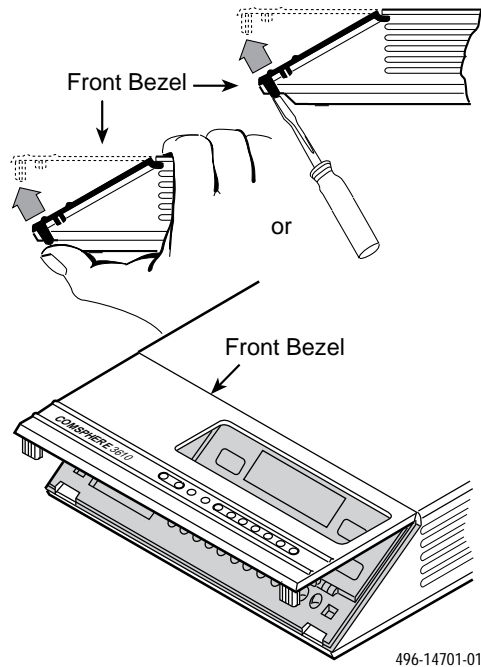


2. Swing the front bezel up and set aside.
3. Change the switch settings if necessary. Use a small instrument. Do not use a pencil.

If the DSU has . . .	Then use . . .
Two switches	Figure A.
Four switches	Figure B.

4. Reinsert the front bezel's hinge tabs into position at the top and swing the bezel down. Snap the bezel back into place.


Figure A

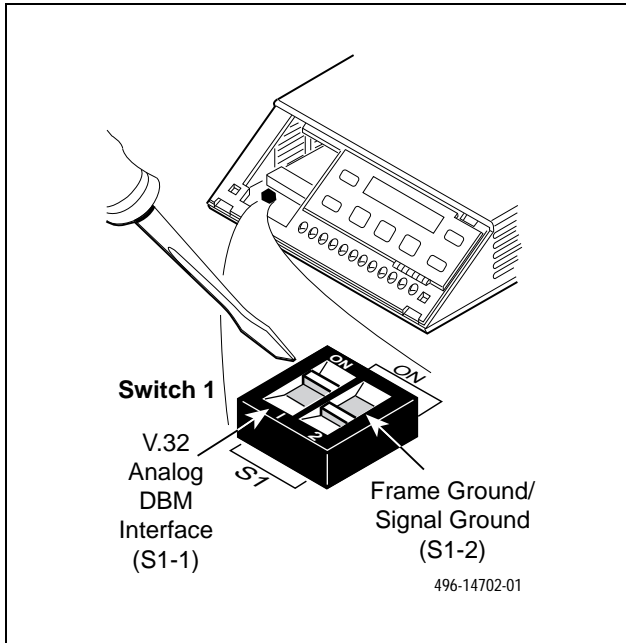

Switch	Setting	Function
S1-1 V.32 Analog DBM only	ON (default)	Permissive transmit output level of -9 dBm
	OFF	Programmable transmit output level between -12 dBm and 0 dBm
S1-2	ON	Frame ground (FG) connected to signal ground (SG)
	OFF (default)	FG connected to SG through 100 ohm resistor

ON is to the rear as you face the front of the DSU.
OFF is to the front.

Figure B

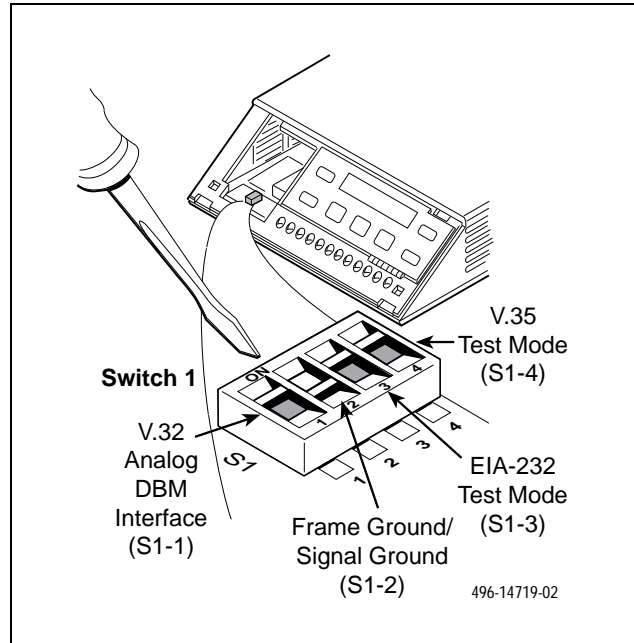

Switch	Setting	Function
S1-1 V.32 Analog DBM only	ON (default)	Permissive transmit output level of -9 dBm
	OFF	Programmable transmit output level between -12 dBm and 0 dBm
S1-2	ON	Frame ground (FG) connected to signal ground (SG)
	OFF (default)	FG connected to SG through 100 ohm resistor
S1-3	ON (default)	Enables EIA-232 Test mode; Pin 25 controlled by the DSU
	OFF	Disables EIA-232 Test mode
S1-4	ON (default)	Enables V.35 Test mode; V.35 lead NN controlled by the DSU
	OFF	Disables V.35 Test mode

ON is to the left as you face the front of the DSU.
OFF is to the right.

Powering Up the DSU

CAUTION

The power cord and ac transformer have a 3-wire grounding-type plug with a grounding pin. This is a safety feature. Grounding of the unit is vital to ensure safe operation. Do not defeat the purpose of the grounding plug by modifying it or by using an adapter.


Prior to installation, use an outlet tester or voltmeter to check the ac receptacle for earth ground. If the power source does not provide a ground connection, consult an electrician to determine another method of grounding the unit before proceeding with the installation.

NOTE

Before connecting the DSU to any network, ensure that approved primary protectors have been installed on the circuit in accordance with Article 800 of the National Electric Code, NFPA 70, in the United States and Section 60 of the Canadian Electric Code, Part 1, in Canada.

Procedure

1. At the rear of the DSU, insert the round end of the power cable into the receptacle labeled POWER.

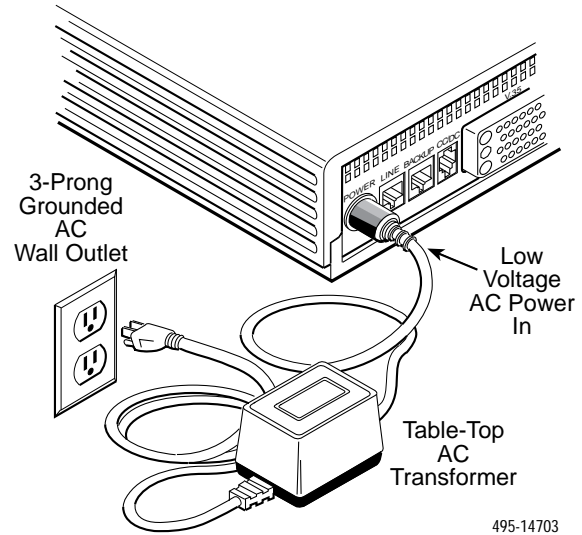

2. Connect the 3-prong plug at the other end of the cable to an ac outlet.

Power-Up Routine

When you apply power for the first time, the DSU performs a power-up routine and:


- Determines what hardware options are installed, if any. These may include DBM and MUX for TDM/MCMP.
- Runs a Device Test on the DSU and each installed hardware option. All front panel lights flash on and off.

Procedure

1. Watch the LCD during the tests.



The results of each test display briefly as Pass, Fail, or Abrt. The tests take about 20 seconds to complete. You are looking for successful test results.

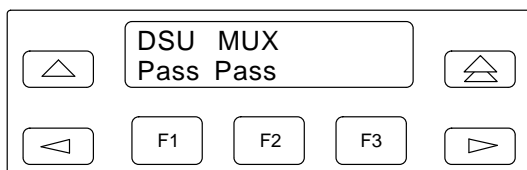

2. Continue if you receive successful messages. If a Fail message appears or an installed hardware option does not appear, refer to Appendix E, *Troubleshooting and Front Panel Messages*.

The DSU power-up routine can be:

- Initiated using the Reset selection in the Control branch.
- Disabled with the PowerOnTst General configuration option.

Saving and Changing Configuration Options

For Model 3610 and Model 3611 DSUs, change configurations options from:

- A front panel, or
- A 6700 or 6800 Series NMS, or
- An async terminal (Model 3610 standalone only)

Appendix B provides a Basic Configuration Worksheet, which is a summary of Basic DSU mode configuration option sets. Use the worksheet, the menu tree in Appendix A, and Chapter 4, *Configuration Option Tables*, for reference.


Configuration options supporting TDM, MCMP, and digital bridging are in Document No. 3610-A2-GB48. Configuration options supporting DBMs are in Document No. 3610-A2-GB49.


The Model 3610 is preconfigured at the factory for FacT with default settings for a tributary, point-to-point circuit, and a data rate of Auto. Set the data rate to match the service provider's rate.

If you have a point-to-point configuration:



- Enable one unit as the control
- Enable the other unit as the tributary
- Set the link configuration option (Table 4-3)

Home Screen Display

Pressing the  key (double-up arrow) on the front panel changes the display on the Home screen. The following is an example of the Home screen display:

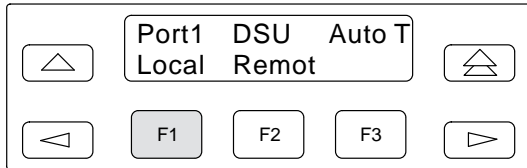


- Port 1 = DTE port or aggregate data stream currently monitored and reflected by DTE status indicators
- DSU = Operating mode
- Auto = Default setting displays until actual data rate is detected
- T = Network position of DSU (tributary in this example)


In the following LCD examples, the shaded area below the front panel shows the additional options that appear when the  or  key is pressed. Hardware selections are filtered when not installed.


To save and change options:

Procedure


1. From the Home screen, as shown above, select Local (F1). The following screen appears on the LCD.

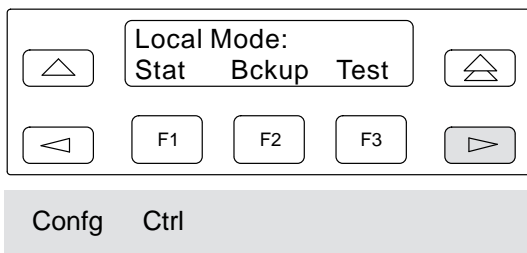

2. To access the Configuration (**Config**) branch, press the  key until Config appears. Press the function key below Config. The following screen appears.

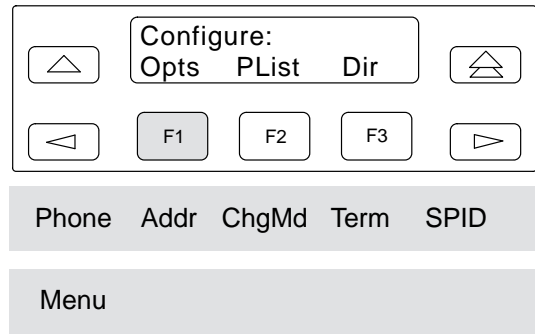

3. Select **Opts** (for Configuration Options). The following screen appears.

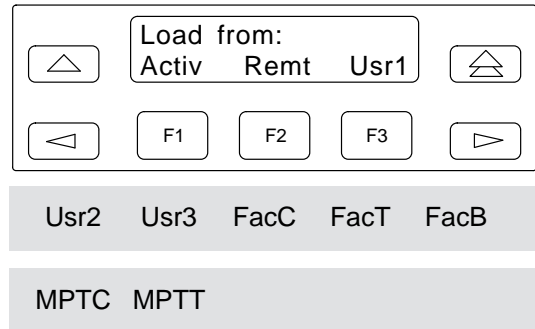


4. The selections on the screen are configuration option sets stored in the DSU's memory. Table 2-1 lists the **Load from** menu selections and their source.

NOTE


You are advised to first save the factory default settings to store a set of working configuration options **before** changing any configuration options.

From the **Load from** menu, any selection except Remote loads a complete set of configuration option values into a working buffer.

- After changing and not saving configuration options, the following prompt appears when the \triangle or \triangleleft key is pressed.

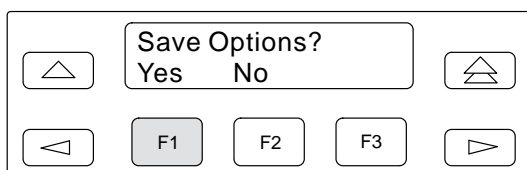


- If you press F1 for Yes, the **Save To** screen appears.

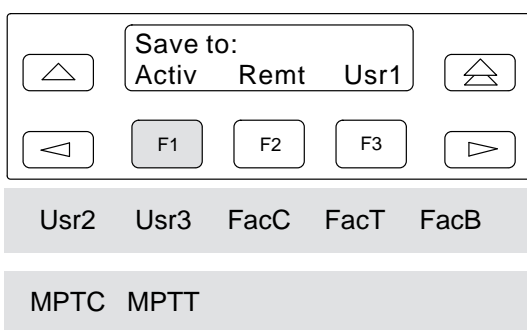

If Save to is not displayed, press \triangle until the prompt appears.

When you press a function key from the **Save to** screen, the DSU performs a verification routine to ensure that the configuration options chosen are compatible.

- You must select SAVE for changes to take effect. After selecting SAVE, the following screen appears.

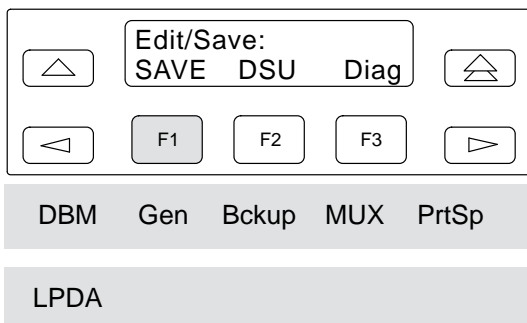

Continue with network connections and verification testing. When finalized, you can edit and save additional configuration options.

Table 2-1
Default Configuration Option Sets

Load from	Source Of Configuration Options
Activ	Active: Currently active configuration options for the addressed DSU; use to change and save configuration options.
Remt	Remote: Configuration options that can be retrieved from a selected tributary DSU; these will be from the tributary's Active set and appear based on local hardware. They are filtered when the front panel is locked. The selected option set can then be displayed, edited, and saved back to the same tributary, another tributary, or the control DSU. The five factory default option sets do not appear when in Remote mode. Remote is filtered for a multipoint tributary or a unit with Diag Type of None.
Usr1	User 1: User-defined option sets.
Usr2	User 2: User-defined option sets.
Usr3*	User 3: User-defined option sets, and factory default settings for a DBM-X (Model 3611 DBM-D, DBM-I, DBM-S, and DBM-V; does not function as a DSU).
FacC	Factory Control: Control DSU factory default settings.
FacT	Factory Tributary: Tributary DSU factory default settings.
FacB	Factory Digital Bridge: Central-site digital bridge factory default settings. FacB is filtered when MUX CCA is not installed.
MPTC	Multipoint Control: Multipoint Control DSU factory default settings. MPTC is filtered when TDM CCA is installed.
MPTT	Multipoint Tributary: Multipoint Tributary DSU factory default settings.
* When configuring a DBM-X, do not SAVE to Usr3.	

Refer to Chapter 3, Chapter 4, and Appendix E for details regarding configuration of your unit. Use the Appendix B worksheet for recording configuration option changes stored in Usr1, Usr2, or Usr3. For a complete list of DSU factory default settings, refer to Table A-1.

DDS Network Connection


NOTE

Before connecting the DSU to the DDS network, ensure that approved primary protectors have been installed on the circuit in accordance with Article 800 of the National Electric Code, NFPA 70, in the United States and Section 60 of the Canadian Electric Code, Part 1, in Canada.

To connect the DSU to the DDS network:

Procedure

1. Plug the DDS network interface RJ48S cable into the DSU jack labeled **LINE**.
2. For Canada, plug the 6-pin cable end (feature number 3600-F1-006) into the wall jack.

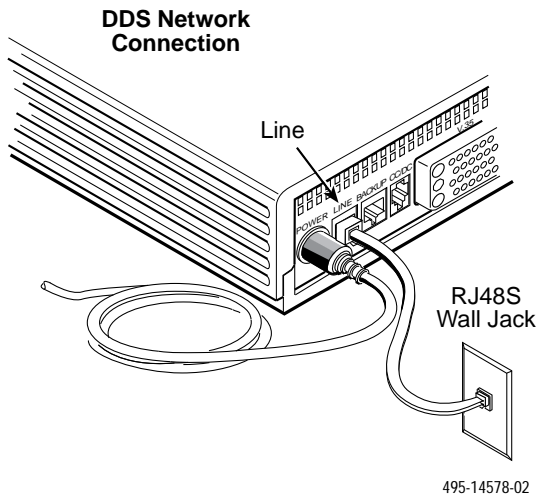

If a remote DSU is also connected to the network and there are no other facility alarms, the:

- DSU's green **OK** LED lights.
- **Alarm** indicator is no longer lit.
- Health and Status screen no longer displays a **No Signal** message. The DDS data rate displays Auto while detecting a rate. Change the Rate(Kbps) to a set rate when the data rate has been detected.

If connecting the DSU to a LADS network, set the data rate. There are distance limitations that govern the use of DSUs on the network. See Appendix F for LADS connection distances.

Network Verification Testing

Perform verification testing after any installation. Refer to the Link Configuration option, Table 4-3.

Procedure

1. For a multipoint link configuration, request a device Identity report to ensure that the DSU is addressed properly (**ID** from the Status branch).

NOTE

The Model 3610 is delivered with a network address set to **254**.

2. For a point-to-point link or multipoint link configuration, verify the port speed [Prt(Kbps) from DSU Options].
3. From the control, perform a Digital Test on the DDS circuit to ensure that the network is functioning (**DT** from the Test branch).

DTE Connections

The distance between the DSU and the DTE must be within the EIA-232 or V.35 interface limits. Refer to Appendix F for LADS connection distances.

For the EIA-232 connector:


- The typical maximum distance is 50 feet at data rates no greater than 19.2 kbps.
- For distances greater than 50 feet or data rates higher than 19.2 kbps, use short, high quality cable with low capacitance and a DTE capable of supporting the distance and data rate.
- As specified in EIA-232-D, ensure that the distance is not greater than 50 feet and the effective shunt capacitance of the circuit does not exceed 2500 pF. Calculate the cable capacitance per foot and multiply by the number of feet of cable.

When Port 1 requires a speed higher than 19.2 kbps, the port interface should be set to V.35. For all models using the V.35 connector, the maximum distance recommended between the DSU and the DTE is 1000 feet.

To install the Model 3610 DTE connection:

Procedure

1. Connect the plug end of the DTE cable to the proper port on the back panel of the DSU (EIA232 or V.35). Tighten the two holding screws, if present, to secure the connector.

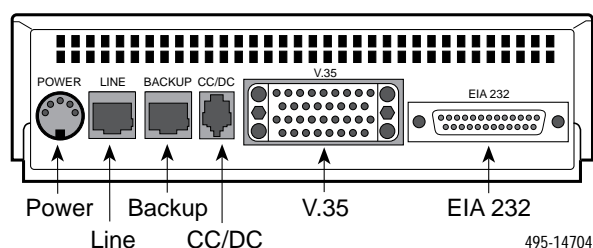

NOTE

If connecting the DTE to the V.35 connector, set the DTE Port in General Configuration Options to **V.35** so the DSU can communicate with the DTE (Table 4-4). The default for this configuration option is EIA232.

2. Connect the other end of the cable to the appropriate port on the DTE. Tighten the two holding screws, if present.
3. Perform Local Loopback (**LL**) and DTE Loopback tests. Refer to the *Test Branch* section of Chapter 3.

Network Diagnostic Connection

A hubbing device and an M6BJ cable are needed to connect the control DSU to a 6700 or 6800 Series NMS. The hubbing device provides two 8-pin modular jacks for diagnostic channel (DC) and control channel (CC) connections.


NOTE

When installing 3600 Series DSUs and 3400 Series or DATAPHONE II modems on the same diagnostic channel, install the DSU ahead (upstream) of the modems. This ensures that the DSU maintains contact if the modem loses power.

To install the hubbing device:

Procedure

1. Plug the 4-pin modular plug of the hubbing device into the modular jack labeled **CC/DC** located on the rear of the DSU.

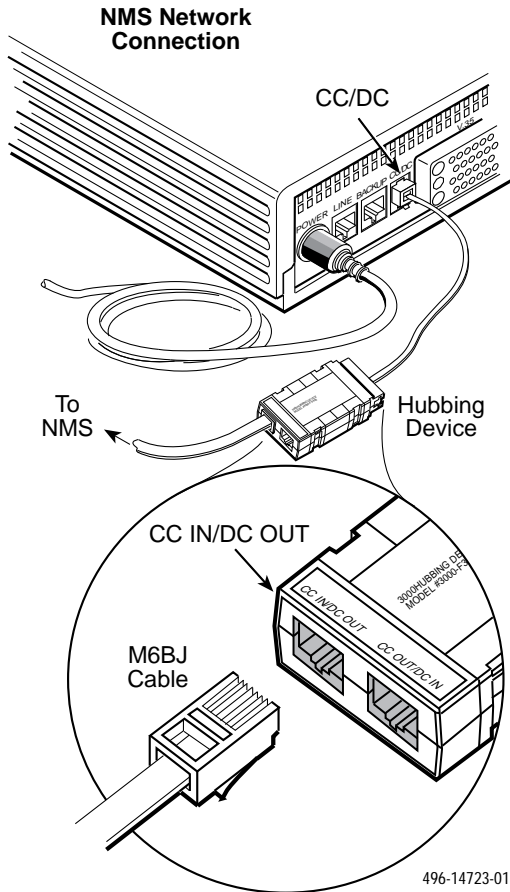

2. Plug one end of the 6-pin cable into the hubbing device jack labeled **CC IN/DC OUT**.
3. Plug the opposite end of the M6BJ cable into the appropriate 6700 or 6800 Series NMS jack.

Refer to your COMSPHERE 6700 or 6800 Series NMS documentation to control and configure the DSU from the NMS.

SNA Diagnostic Interface Verification

Procedure


1. Enable the LPDA option (refer to Table 4-5).
2. Send a **DSU/CSU** and **Line Status** test from the IBM NetView console to the control DSU and each tributary.
3. As the status for each DSU is returned to NetView, check the network address. If the address is correct, the verification procedure is complete. Refer to Appendix D, *SNA Diagnostics*, for additional configuration information.

Async Terminal Connection

Use a CC-to-DB25 cable to connect an async terminal to a DSU. This feature is available for the Model 3610 standalone unit only. To enable the async terminal, see Appendix C, *Async Terminal Operation*.

Procedure

1. Plug the 4-pin modular plug of the DSU CC-to-DB25 cable (feature number 3600-F3-504) into the DSU jack labeled **CC/DC**.

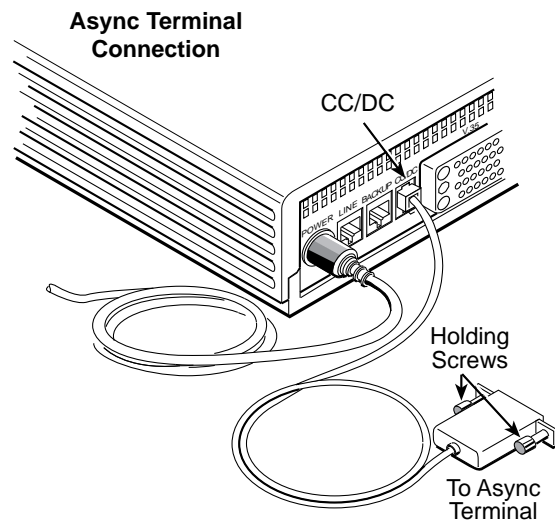

2. Connect the EIA-232 (DB25) end of the cable to the async terminal. Tighten the holding screws.

Front Panel Operation **3**

Overview	3-2
Front Panels	3-2
LCD	3-3
Keypad	3-3
Status Indicators	3-4
Async Terminal Operation	3-5
Menu Structure	3-5
Top-Level Menu	3-5
Local/Remote Menu Branches	3-5
Status Branch	3-6
Health and Status	3-6
Device Health and Status	3-6
Expanded Health and Status	3-7
Subnetwork Health and Status	3-7
DTE Status	3-7
Circuit Quality	3-7
Identity	3-7
Terminal Power	3-7
Backup Branch	3-9
Test Branch	3-9
Abort	3-9
Device Test	3-10
Loopbacks	3-10
Local Loopback	3-10
DTE Loopback	3-10
Digital Loopback	3-10
Remote Digital Loopback	3-11
Bilateral Loopback	3-11
Digital Test	3-12
End-to-End Test	3-12
Bit Error Rate Test	3-13
Lamp Test	3-13
Dial Tone Test	3-13
Configuration Branch	3-14
Options	3-14
User Storage Areas	3-14
Remote DSU	3-14
Poll List	3-15
Directory	3-15
Phone	3-15
Network Address	3-15
Change Protocol Mode	3-15
Async Terminal	3-15
SPID	3-16
Menu	3-16

Control Branch 3-16
 Transmitter Control 3-16
 LEDs 3-16
 External Leads 3-16
 Displaying External Leads 3-17
 Reset 3-17
 Remote Branch 3-17
 Front Panel Security 3-18

Overview

You can manage a 3600 Series DSU from:

- The front panel
- An async terminal
- An NMS

This chapter describes how to manage the DSU using the front panel. Refer to Appendix C for async terminal operation.

The menus are organized as a branching hierarchy or menu tree. Appendix A contains this menu tree. Appendix B contains a Configuration Worksheet with Basic mode configuration option settings. Basic mode represents a DSU with no additional hardware features installed. Refer to these reference materials as you proceed through the DSU's menus.

Refer to your COMSPHERE 6700 or 6800 Series NMS documentation to control and configure the DSU from the NMS.

Front Panels


The front panel is the user interface to the DSU. There are two types of front panels:

- The front panel on the Model 3610 (Figure 3-1)
- The shared diagnostic control panel (SDCP) used with the Model 3611 (Figure 3-2) in a COMSPHERE 3000 Series Carrier

The front panel for both models provides a 2-line, 16-character LCD and keypad for accessing menus to:

- Monitor health and status
- Initiate dial backup operations
- Initiate diagnostic tests
- Set, change, and save configuration options

The front panel's LCD displays the result of any command initiated from the front panel. Front panel basic operation does not vary with the addition of DSU options (DBM, TDM, MCMP, or SNA Diagnostic Interface). However, menu or selection displays vary based on features installed and enabled.

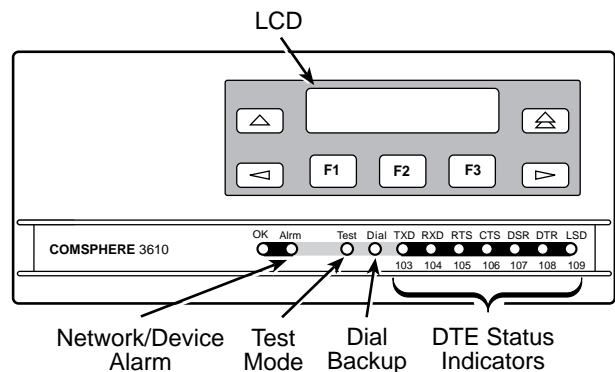

496-12347b-06

Figure 3-1. Model 3610 Front Panel


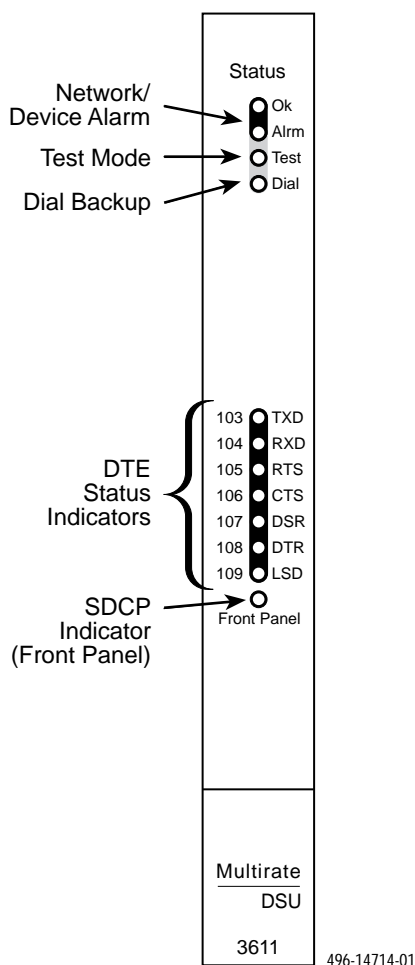


Figure 3-2. Model 3611 DSU Faceplate

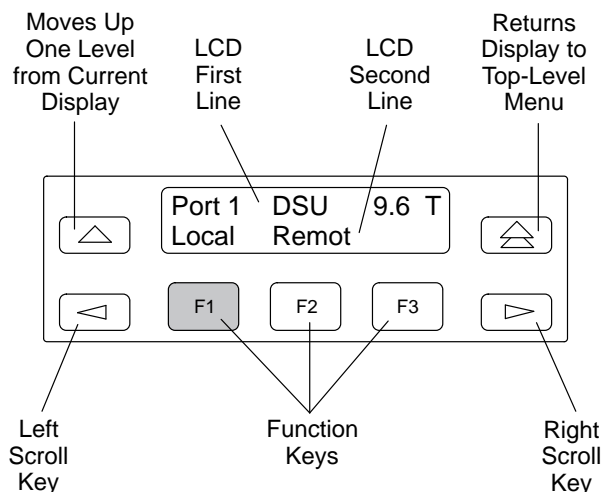

Keypad

There are seven keys on the Model 3610 front panel.

- The key terminates any work in progress.
- The key returns to the previous display.
- The and keys scroll. For input screens, these keys move the cursor one character to the left or right to allow one entry at a time. All menus and display screens wrap around. Scrolling takes you to the first or last selection of the menu.
- The F1, F2, or F3 function keys select the item displayed directly above the key on the LCD. Refer to the following table.

LCD

The 2-line, 16-character LCD on the front panel displays the following information:


- **Menus:** The menu structure is provided in Appendix A and the menu branches appear throughout this chapter.
- **Input Screens:** Used to enter information such as a customer ID, the network address of a remote DSU, or test durations. Input screens, such as test run time, appear with a blinking cursor to indicate that a field can be changed.
- **Display Screens:** Provide configuration information and test results.

Function Key	LCD	Input Screen
F1	↑	Each key press increments the number, usually by 1.
F2	↓	Each key press decreases the number by the appropriate amount.
F3	One of the following appears, depending on the purpose of the current display:	
	Enter	Selects the value displayed.
	Undo	voids any current changes.
	Dial	Dials the telephone number shown on the first line of the display. Available with installed DBM.
	Enab	Enables options.
	Disab	Disables options.
Displ	Allows viewing of EIA lead status.	

Status Indicators

Status indicators continuously provide information on the current operating condition of the DSU or DBM. Table 3-1 describes all status indicators.

- Model 3610 DSU status indicators appear on the front panel.
- The carrier-mounted Model 3611 status indicators appear on the SDCP.

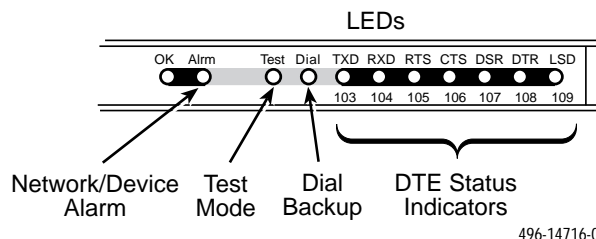

**Table 3-1
DSU Status Indicators**

LED Label	Color	Description
OK	Green	Health and status indicator: DSU operation is normal. The OK LED flashes two times per second when a message from an NMS is present. When lit, the DSU has not detected any alarm listed under Alarm , below.
Alarm	Red	Health and status indicator: There is an alarm in the local or remote DSU, DBM, or DDS facility, or there is a corrupted configuration. For a DSU with TDM or MCMP, the alarm may be in the communications path between the DSU and TDM or MCMP circuit card. Alarms at the local or remote DSU cause the Alarm status indicator to light on the affected DSU. Refer to Table E-5, Device Health and Status Messages, for further details. DBM health and status messages are in Document No. 3610-A2-GB49.
Test	Yellow	When the active core is being tested, the active DSU or DBM device is either performing a test or other DSUs or DBMs are in Test mode. The DSU or DBM is automatically put into Test mode when a remote DSU or DBM is performing a test disruptively. A DSU or DBM in Test mode has the DTE interface turned Off. DSU with TDM or MCMP: Any test involving the TDM or MCMP also involves the DSU. The test is integrated into the DSU's Health and Status report. When the active core is being tested, any port included in the active core is also tested.
Dial	Yellow	DBM is active: Rapid flashing: Call establish in progress Slow flashing: Call established but in Standby mode Steady ON: Backup call established and active
TXD, RXD, RTS, CTS, DSR, DTR, LSD	Green	DTE status indicators: Internal lead states at the DSU/DTE interface for circuit designations: Control circuit active (CTS, DSR, DTR, LSD, and RTS) or Data circuit spacing (RXD and TXD) DSU with TDM or MCMP: The circuit external lead states for any TDM or MCMP ports can be selected through the front panel's Control branch. Model 3610 DSU: The monitored port is displayed on the front panel LCD. Model 3611 DSU with TDM or MCMP: The TDM or MCMP faceplate indicates the monitored port with port LED lit. DTR is always on. Refer to DTE Status on front panel for DTR status.
Front Panel (Model 3611 only)	Yellow	The currently selected DSU at the SDCP: The SDCP addresses one DSU at a time. Model 3611 DSU with TDM or MCMP: The TDM or MCMP circuit card has the same address as the associated DSU and is also addressed.

Async Terminal Operation

You can use an async terminal in place of the front panel to manage a standalone Model 3610 DSU. When enabled, the async terminal interface:

- Supports a VT100-compatible terminal
- Is set to VT100 standards of 9.6 kbps data rate, 8 bits, 1 stop bit, and no parity
- Emulates the front panel

Menus and selections are the same as operating the unit from the front panel. However, the async terminal is not limited to three selections per screen. An entire range of selections or information is presented on one screen. If connecting a modem for remote access, refer to Appendix C, *Async Terminal Operation*.

Menu Structure


You access the menu tree, a representation of the DSU's menu structure, via the front panel. Use the menu, shown in Appendix A, as a guide as you proceed through the branches of the DSU.


The menus that appear depend upon the DSU's function within the network (i.e., control or tributary) and the hardware options that are installed (e.g., a DBM or MUX).


A Model 3610 DSU comes from the factory configured as a tributary, while the Model 3611 DSU comes configured as a control. Refer to Chapter 4 before changing or customizing the default settings. Table A-1 lists all DSU factory default settings.

Top-Level Menu

Access to all network management tasks begins at the top-level menu, the head of the menu hierarchy.

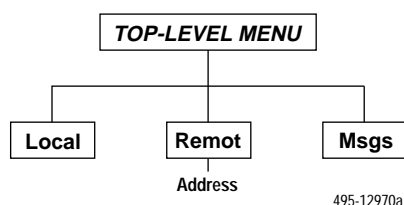


When the DSU power-up routine occurs or the  key is pressed, the Home screen display appears. The beginning of the LCD display indicates the DTE port or aggregate data rate (Aggr). If the DDS signal has not been located yet, Auto will display.

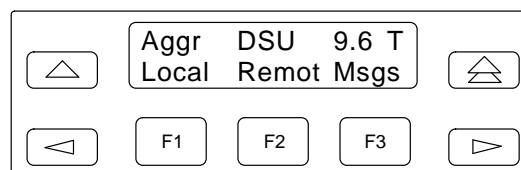

The top-level menu contains the:

- **Local** selection: For a control DSU.
- **Remote** selection: Used for control of a remote DSU. Refer to the *Remote Branch* section, p. 3-17.
- Messages (**Msgs**) selection: Appears when an NMS message has been received and not cleared. The OK LED flashes. Once the NMS messages are cleared, the Msgs selection disappears and the OK LED no longer flashes.

Local/Remote Menu Branches

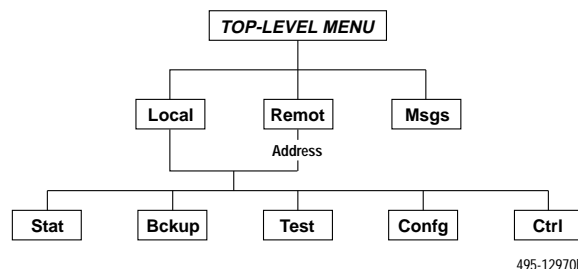

The Local menu has five branches; the Remote menu has four (Bckup is not available). Each selection leads to submenus.


- Status (**Stat**) branch
- Backup (**Bckup**) branch
- **Test** branch: The Test branch does not appear when the DSU is in Display mode. The front panel is locked and the DSU is in read only mode. Authorized personnel can change access. Contact your system administrator for further details.
- Configuration (**Cfg**) branch
- Control (**Ctrl**) branch

Status Branch

The Status (**Stat**) branch reports on the:

- Health and status of the DSU and DBM
- DTE interface
- Circuit quality:
 - For an analog DBM connection, Network Signal Level and Quality
 - For a DSU with App Module ID displaying XLOOP, DDS Signal Quality
- Identity of the DSU (see Table 3-2)
- Terminal's power – status of voltage on the DTE's RTS lead

Refer to Appendix E for DSU and MUX Health and Status messages.

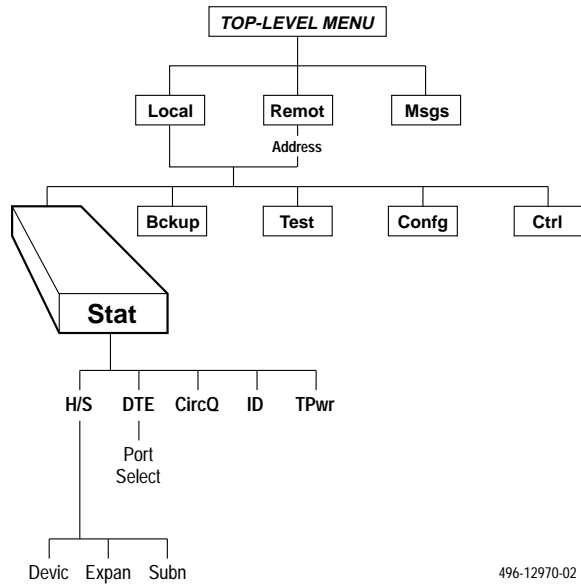

Health and Status

Health and Status (**H/S**) displays the health and status of the DSU, and if installed, DBM H/S. DSU and line conditions are automatically scanned for normal limits.

There are three types of Health and Status reports:


- **Devic** (Device Health and Status)
- **Expan** (Expanded Health and Status)
- **Subn** (Subnetwork Health and Status)

All alarm and status conditions appear for the specified DSU at the time H/S is selected. For a:

- **Local DSU:** alarm and status conditions are updated every 2 seconds.
- **Remote DSU:** display reflects the actual alarm and status conditions at the time of access.

Device Health and Status

Device Health and Status (**Devic**) reports health and status information for a selected DSU. After 15 minutes without a key press, the Device Health and Status (H/S) reappears on the front panel. See Appendix E for Health and Status messages.

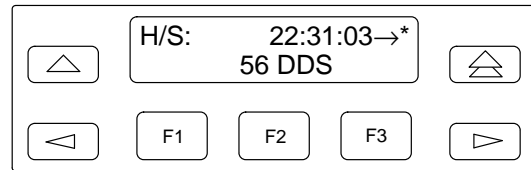

When the digital circuit is the active link,

- The first line on the LCD includes:
 - A running timer (hhh:mm:ss) to reflect the length of time the DSU has been operating. This timer is displayed until the time exceeds 254:59:59, when the time is replaced with MAX.
 - Display of → to indicate that additional health and status messages exist. Use the ◀ or ▶ key to scroll through the messages. The unit automatically scrolls through additional messages approximately every three seconds.
 - An asterisk (*) when an NMS is polling the control DSU or a control DSU is polling a tributary.
- The second line displays:
 - The DSU's aggregate data rate or test alarms.
 - A DDS facility alarm if the DDS data rate is not available. Refer to the Rate(Kbps) configuration option (Table 4-1).

Expanded Health and Status

Expanded Health and Status (**Expan**) appears during an automatic backup for the local DSU when there is:

- A dialing attempt failure.
- An unrequested disconnect after a successful connection.

Subnetwork Health and Status

Subnetwork Health and Status (**Subn**) displays status information from a DSU's subnetwork of all DSUs and DBMs assigned to that DSU's active poll list. The downstream network addresses and their current status are listed.

To page through the tributary addresses from the front panel, press the:

- F1 key for the next highest network address.
- F2 key for the next lowest address.

Refer to Table E-6 for Subnetwork health and status messages and recommended action.

DTE Status

DTE status is a snapshot display showing the status of the external DTE interface of the local or remote DSU/DBM. If more than one port is active, a port number selection screen appears.


- The local DSU status display is updated every 2 seconds.
- The remote DSU status is updated approximately every 3 seconds.

From the front panel, the DTE interface statuses appear in sets. Use the \triangleleft or \triangleright key to view each DTE lead status.

Circuit Quality

Circuit Quality (**CircQ**) is a display showing the DDS Receive Signal Loss (DDS RxLoss) based on peak detection of the received signal. The DDS RxLoss display is available when App Module ID displays XLOOP, except when MUX Function is set to EBrdg.

The approximate DDS RxLoss appears when the decibel range is between 0 (zero) and 65 and displays >65 for a loss greater than 65 dB. The following display reflects a DDS Receive Signal Loss of 38 decibels.

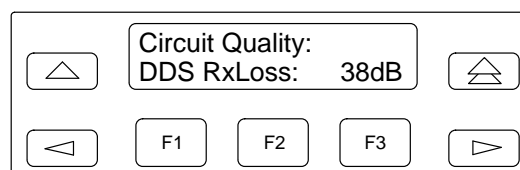

Circuit quality also displays the level and quality of the signal being received from the network when a V.32 analog DBM is active. When an analog DBM is not active, the first four measurements display an x.

Identity

Identity (**ID**) displays the DSU's model number, serial number, software/firmware version, network address, DSU rate and installed options.

Table 3-2 lists the Identity information provided for the DSU and its options. One field appears at a time. Press the \triangleright key to display the next field.

When the control DSU firmware version is less than 7.24 but greater than 1.10, the tributary SW Version changes need to be made as shown in Table G-1.

Terminal Power

Terminal Power (**TPwr**) displays the status of the connected DTE's EIA-232 and V.35 interface. The DSU checks the state of the RTS lead and reports the DTE power status.

For both the EIA-232 and V.35 interfaces, the second line displays:


- **On** if the voltage is less than $-3V$ or greater than $+3V$.
- **Off** if no power is detected on the RTS lead.

**Table 3-2
Identity Descriptions**

Field Name	Information Displayed
Model:	3610 or 3611.
S#:	Unit serial number.
DSU SW ver:	Software/firmware version residing on DSU or changed using the SW Vers configuration option in Table 4-4. Refer to Appendix G, <i>Firmware Version Control Information</i> .
Netwrk Addr:	Using ADp protocol, the ADp network address appears. Using DP11 protocol, the DATAPHONE II address appears.
DSU Rate:	Aggregate DDS data rate set for DSU Rate(Kbps) configuration option. Displays Auto while unit is locating the data rate. This does not appear for a DBM-X.
DBM SW ver:	The software/firmware version residing on the DBM. Not valid with V.32 DBM.
DBM Rate:	Aggregate data rate set for DBM Rate(Kbps) configuration option.
DBMtyp: xxx yy.y z	Type of DBM installed. xxx can be: I ISDN or DBM-I, V V.32 or DBM-V, 2wS 2-wire Switched 56 kbps DBM or DBM-D, or 4wS 4-wire Switched 56 kbps DBM or DBM-S yy.y indicates the DBM's maximum data rate. z displays P when the Primary Core is set to Yes.
MUX Card:	TDM/MCMP. Appears when the MUX circuit card is installed.
MUX App:	Currently configured application of TDM/MCMP. Possible values are: TDM, MCMP, CBrdg (central-site bridge), EBrdg (extended bridge), and None (TDM/MCMP circuit card disabled)
MUX SW ver:	Software version residing on the TDM/MCMP circuit card.
App Modul:	ASPEN. Allows Single-Port Async/Sync operation.
	CISC or 64CC: CISC when the Clear Channel with Integrated Secondary Channel chip is present. 64CC when the CISC chip is not present.
	LPDA-2. Indicates that the SNA Diagnostic Interface option is installed.
	SEQU. Sequoia chip is installed and allows Single-Port Async/Sync operation. Installed in models 3610-A4-xxx or 3611-B4-xxx.
	XLOOP. Provides enhanced DDS mode.

Backup Branch

The Backup (**Bckup**) branch appears when the configuration option Network Interface (**NetIntf**) is set to AggSw or Forc or a DBM is installed. The DSU provides an internal aggregate data stream for diagnostics, standby mode, and framing on the alternate V.35 or EIA-232 interface of Port 1. The aggregate port can be connected to an external dial backup unit (DBU).

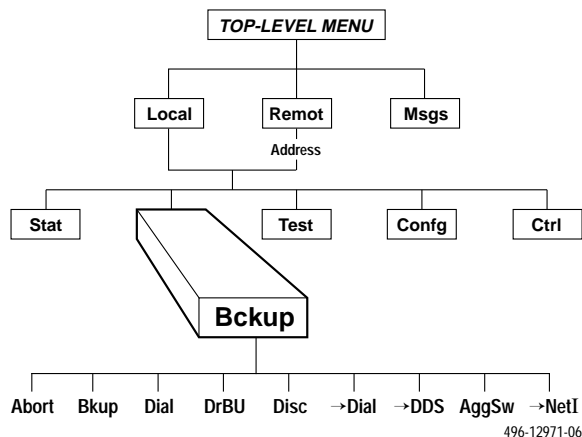


For additional use of the Backup branch, refer to the TDM/MCMP/Digital Bridge Options Supplement, Document No. 3610-A2-GB48, and the DBM Options Supplement, Document No. 3610-A2-GB49.

Test Branch

The **Test** branch provides extensive testing capabilities for the DSU, the DDS circuit, the DBM, and the backup circuit. When the tributary DSU receives a test request from the control DSU, the DSU aborts any locally initiated test in progress.

NOTE

Running a test can affect your application data or may cause your application session to be dropped depending upon the protocol, front-end processor, and time-out parameters. No data or acknowledgment messages will be transmitted while the test is in progress on the active core.

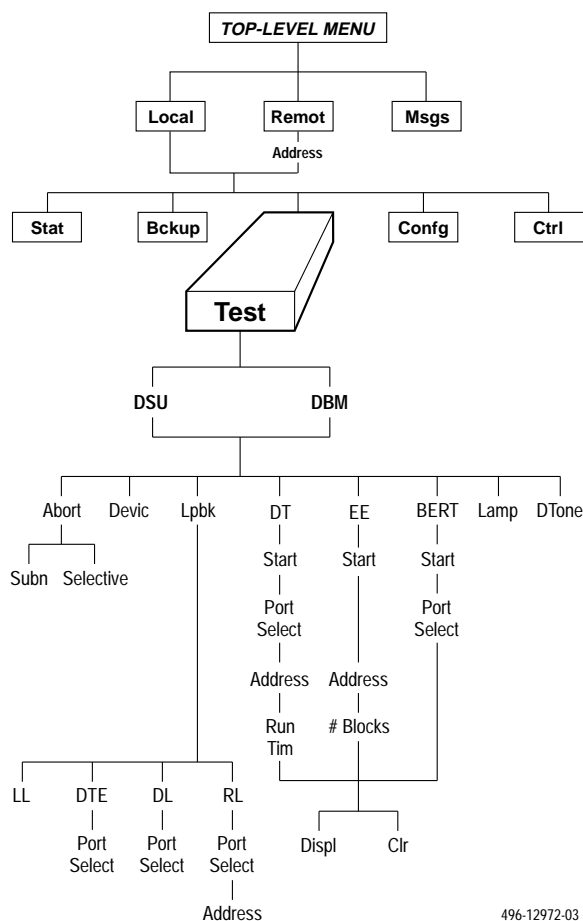

Abort

Abort allows you to stop a test that is running. The DSU is not allowed to run any other test until the test in progress is aborted or completes.

There are two selections for aborting a test:

- **Subn** (Subnetwork) displays only at the control DSU. This selection terminates any test running at the control DSU or at a tributary DSU or DBM associated with the control.
- **Selective** terminates whatever test is in progress at the local DSU. Does not appear in Remote mode with MUX Funct set to CBrdg or NetIntf set to AggSw or Forc.

After selecting either Subn or Selective, the test terminates and the front panel displays **Command Complete**.

Device Test

Device (**Devic**) Test is an internal self-test. If a DBM is installed, the DBM must be in Idle mode.

If a network loopback is in effect when you initiate a Device Test, the test will not run and **Abort** appears on the second line on the front panel.

If the DSU fails the test, the:

- Second line displays **Fail**.
- Alarm (**Alrm**) status indicator is lit.
- Device H/S message appears in the DSU's Health and Status report for the diagnostic channel (DC in DiagConn configuration option, Table 4-3).

The Alarm status indicator stays lit and the failure appears in the DSU's Health and Status report until a Device Test ends with **Pass**. Until then, you can proceed but you must be aware that the DSU may not function properly.

Loopbacks

A loopback is any test that verifies a device's integrity by connecting the device's output in one direction to the device's input in the other direction and then checking the received signal for errors.

Loopback (**Lpbk**) provides four loopback tests:

- Local Loopback (LL)
- DTE Loopback (DTE)
- Digital Loopback (DL)
- Remote Digital Loopback (RL)

Figures 3-3 and 3-4 show the direction of each loopback on the circuit. All loopbacks are labeled based on the control DSU. Loopbacks do not appear with a multipoint DSU in Remote mode. Refer to the figures as you read about loopbacks.

Local Loopback

Local Loopback (**LL**) is session-disruptive; performing the test disrupts data. In Local Loopback, the DTE may run a test to determine if the DTE to DSU connection and the DSU itself are functioning properly. The DSU must be connected to the DTE, but the network connection to the DSU is not required for this test.

Once the LL loopback test begins, the message **Command Complete** appears. While the DSU is in Local Loopback, any data transmission from the DTE is returned as received data. An operator can send a test pattern and verify correct reception of the test. The DSU does not monitor this testing. LL does not appear when in Remote mode.

DTE Loopback

DTE Loopback (**DTE**) loops back the data path at the DTE/DCE interface on a per-port basis without affecting the operation of the remaining ports. Once the DTE loopback test begins, the message **Command Complete** appears. DTE does not appear when in Remote mode.

Digital Loopback

Digital Loopback (**DL**) allows manual testing of the remote end of the circuit. For example, a Digital Loopback may be required to complete an external bit error rate test (BERT) from the remote DSU.

The local DSU receives test data, loops it back to the transmitter before the DTE interface, and returns it to the network. Once the digital loopback test begins, the message **Command Complete** appears.

Remote Digital Loopback

Remote Digital Loopback (**RL**) supports testing by an external device, such as a protocol analyzer connected to the local DSU's DTE interface. Data input is sent to the remote DSU and returned for error detection.

In Remote Digital Loopback, the local DSU (control or tributary) puts the remote DSU into Digital Loopback. A control DSU can originate Remote Digital Loopback on a point-to-point or multipoint network. A tributary DSU can originate Remote Digital Loopback in a point-to-point network only. RL does not appear when in Remote mode.

Remote Digital Loopback can also be initiated by receiving a V.54 pattern that starts a Digital Loopback. For point-to-point configurations, enable configuration options V.54 Lpbk (V.54 Loopback – Table 4-1) and RespondRDL (Respond to Remote Digital Loopback – Table 4-4).

The control DSU can send a Digital Loopback to a multipoint tributary and perform a Remote Digital Loopback on the multipoint tributary. A Digital Loopback cannot be initiated from a multipoint tributary.

When a DSU (control or tributary) originates Remote Digital Loopback, both the originating DSU and the targeted DSU enter Test mode. No other test can be run at the originating DSU or the targeted DSU until the Remote Digital Loopback is aborted.

Bilateral Loopback

Bilateral Loopback combines Digital (DL) and DTE loopbacks and operates simultaneously in the same DSU. For point-to-point configurations, use the Bilateral Loopback (Bilat Lpbk) configuration option from the General (Gen) configuration option set (Table 4-4).

Once the loopback test begins, the message **Command Complete** appears. If the Bilateral Loopback configuration option is activated, requesting a Remote Digital Loopback (RL) or Digital Test (DT) automatically initiates a DTE Loopback. A Digital Test (DT) starts a Remote Loopback which causes a Bilateral Loopback at a remote site.

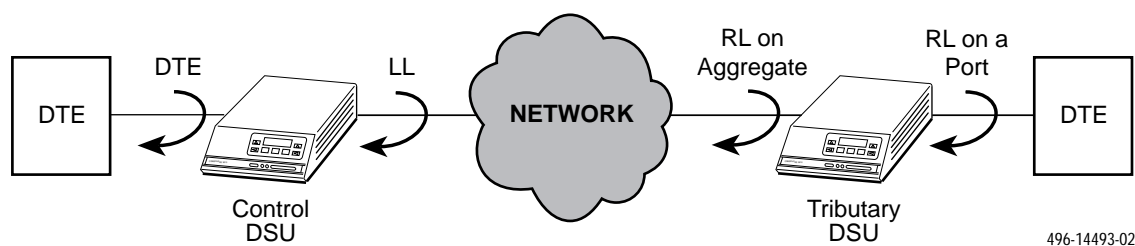


Figure 3-3. Loopbacks, Example 1

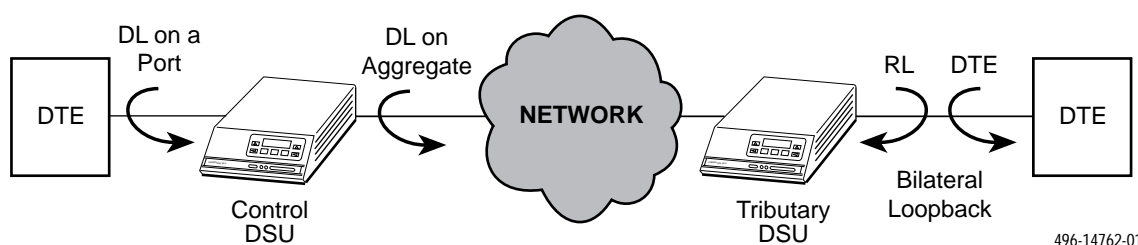


Figure 3-4. Loopbacks, Example 2

Digital Test

The Digital Test (DT) checks the functionality of a pair of DSUs or DBMs and the data circuit between them.

The Digital Test uses the local DSU's test pattern generator. In a multipoint network where only a control DSU can originate a Digital Test, tributary DSUs not involved in the test are placed in Test mode for the duration of the test.

Digital test is not available when:

- In remote mode, or
- Alternate Port 1 has NetIntf set to forced on (Forc) with the DSU in Backup mode, or
- LPDA-2 configuration option is enabled

The local DSU transmits the test pattern over the network to the remote DSU, which is placed in Remote Digital Loopback (RL); the user inputs the length of time.

During the test, the TXD, RXD, and RTS LEDs show the states of the leads at the DTE interface. At the conclusion of the test, the local DSU releases the remote DSU from Digital Loopback.

To review the results of the DT test, press \uparrow and select Display (Displ). When using the front panel, press the \triangleright key to scroll through the results shown in Table 3-3. The Clear (Clr) selection clears the test results and resets the counter to zero.

**Table 3-3
Digital Test Results**

Results	Information Displayed
Time:	Running test timer.
Tot Error:	Running count of bits in error. MAX appears when the error count reaches about 65000.
Err Secs:	Running count of errored seconds: An errored second is at least one error detected during a 1-second time period.
Run on: port <i>nn</i>	Port number appears if this test was not run on an aggregate data path.

When the test is complete:

- The top line display changes from **Active** to **Final**.
- The second line changes from **Please wait . . .** to either **Command Complete** or **Command Failed**.

End-to-End Test

The End-to-End (EE) test analyzes a control and a tributary DSU or DBM and the network circuit between them in both directions independently. Packets of data are transmitted between DSUs or DBMs.

The test determines the direction of the data transmission problem if the circuit is the cause. If an End-to-End test is run, the in-band diagnostics are disrupted. EE does not appear when in Remote mode.

To review the results of the EE test, press \uparrow and select Display (Displ). When using the front panel, press the \triangleright key to scroll through the results shown in Table 3-4. The Clear (Clr) selection clears the test results and resets the timer to zero.

**Table 3-4
End-to-End Test Results**

Results	Reported By*	Information Displayed
Time:	Local & remote DSU/DBM	Running test timer.
Tot Block:	Local & remote DSU/DBM	Number of blocks completed.
Rx Blk Err:	Local & remote DSU/DBM	Number of incoming blocks with errors detected, indicating an error in the incoming transmission path.
Tx Blk Err:	Local & remote DSU/DBM	Number of blocks with errors detected at the remote DSU, indicating an error in the outgoing transmission path.
Rx TimOuts:	Local DSU/DBM only	Number of blocks that were not received or acknowledged by the remote DSU or DBM.
* Local refers to the test initiator.		

When the test is over:

- The top line display changes from **Active** to **Final**.
- The second line changes from **Please wait . . .** to either **Command Complete** or **Command Failed**.

Bit Error Rate Test

The Bit Error Rate Test (**BERT**) is a session-disruptive test that transmits a pseudo-random pattern. The test pattern is set to Standard 511 test pattern or AT&T (compatible with DPH 2500/2600 DSUs) using the Tst Pattern configuration option (Table 4-4).

BERT is used to analyze the network circuit. The results can be monitored by simultaneously executing a BERT in the local and remote DSUs. The Bit Error Rate Test is designed for point-to-point networks only; use the Digital Test (DT) for multipoint networks. This test is not available for a control DSU with the DBM in Backup mode or when in Remote mode with in-band framing.

The test continues until aborted from the front panel, an async terminal, or an NMS. This test can be run on an aggregate or per-port basis. When run on an aggregate basis, in-band diagnostics are disrupted.

To display the results of the BERT test, press \uparrow and select Display (Displ). The results are shown in Table 3-5. The Clear (Clr) selection clears the test results and resets the timer to zero.

Table 3-5
Bit Error Rate Test (BERT) Results

Results	Information Displayed
Time:	Running test timer.
Tot Error:	Running count of bits in error. MAX appears when the error count reaches about 65000.
Err Secs:	Running count of errored seconds. An errored second is at least one error detected during a 1-second time period.
Run on: port <i>nn</i>	Port selected for testing.

When the test is over:

- The top line display changes from **Active** to **Final**.
- The second line changes from **Please wait . . .** to either **Command Complete** or **Command Failed**.

Lamp Test

The **Lamp** test is a test of the status indicators (LEDs) and the LCDs. Any indicator that does not flash is not functional.

- All LEDs are functioning if all the status indicators on the Model 3610 front panel are flashing.
- In a COMSPHERE 3000 Series Carrier, the status indicators on the SDCP remain ON.
- The LCD on the front panel or SDCP alternately flashes solid blocks, followed by a character set display.

Pressing any key except the \triangleleft key returns you to the DSU Test menu to abort the test. Once the test aborts, the LCD and LEDs stop flashing.


Dial Tone Test

The Dial Tone test (**DTone**) allows a DBM to test for dial tone. This selection does not appear in the DSU's Test branch.

Configuration Branch

The Configuration (**Confg**) branch allows you to configure or customize the DSU and its options to:

- Fit site requirements.
- Enter and change telephone numbers (if a DBM is installed).
- Specify the protocol used by a connected NMS.

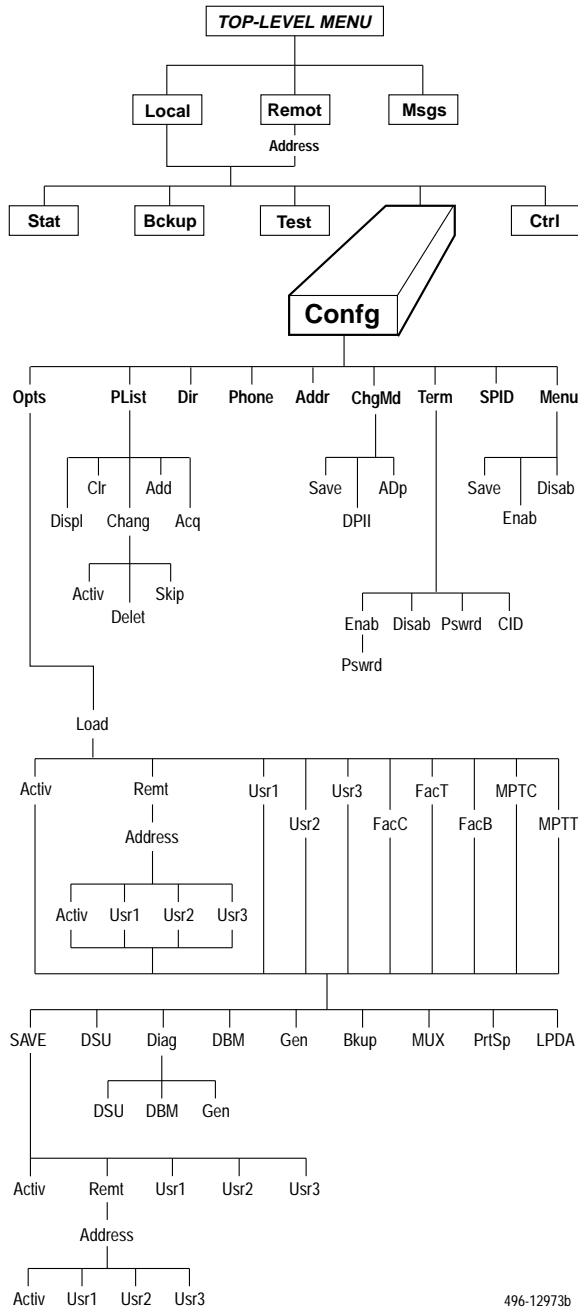

Options

Options (**Opts**) allows you to save, copy, and/or change DSU, Diagnostic, DBM, General, Backup, MUX, and LPDA-2 configuration options.

The selections on the **Load from** menu are sets or libraries of configuration options stored in the DSU's memory. Refer to:

- *Saving and Changing Configuration Options* section in Chapter 2
- Table 2-1 in Chapter 2 for default configuration option set content descriptions
- Table A-1 in Appendix A for all DSU factory default configuration option settings
- Table E-4 in Appendix E for Configuration Error Messages

User Storage Areas

Usr1, Usr2, and Usr3 are storage areas for user-defined configuration option sets. Use these storage areas to:

- Maintain predetermined option sets for specified DSU, Diag (DSU, DBM, and Gen), DBM, Gen, Bkup, and LPDA configurations.
- Permit the rapid loading of an entire configuration option set after changes have been saved for reuse.
- Save the time required to change each individual configuration option.

If configuration option changes are entered in Active, the current set of options are restored if a power-up test occurs.

Remote DSU

Selecting Remt from the **Load from** menu results in configuration options appearing based on hardware installed at the remote location.

Remt requires a remote address. The remote address selections range from 1 to 255 for ADp protocol and 1 to 80 for DPII protocol. If you want to save configuration options to all of your remote devices, select the broadcast address (**192**). After the configuration options are saved, the changed configuration options are broadcast to the entire network once.

When configuring remotely, it is recommended that the control and tributary DSUs have the same firmware version, or that the control has the highest version.

Poll List

Poll List (**PList**) maintains or changes a DSU's poll list. A poll list identifies all DSUs or DBMs one level downstream in the network. When an NMS is polling a control unit or a control unit is polling a tributary, an asterisk (*) appears in the Health and Status display.

- A control DSU includes its tributary DSUs, or DSUs and DBMs, in its poll list.
- A tributary DSU includes any extended control DSUs, DBMs, or APL modems that are attached to the diagnostic channel.

Poll List is available in the Local branch to a DSU with nondisruptive or mixed diagnostics. A poll list can be:

- Displayed (**Displ**)
- Cleared (**Clr**)
- Changed (**Chang**) – Activate, delete, or skip.
- Added (**Add**) – Adds the local address to the poll list; for NonDisruptive MCMP only.
- Acquired (**Acq**) – Automatically generated using the Acquire Poll List command. Abort is available to stop the Acq command.

Command Complete appears when the poll list is completed.

Directory

Directory (**Dir**) is the DSU's dial backup directory. Refer to Document No. 3610-A2-GB49 for more DBM information.

Phone

Phone (**Phone**), the local telephone number feature, stores the local DBM's telephone number. Refer to Document No. 3610-A2-GB49 for more DBM information.

Network Address

Network address (**Addr**) is the network address of the local DSU, and is available from the Local branch. The DSU's network address is numeric. A DBM automatically acquires an address equal to the DSU's address plus 1; it is recommended that you assign odd numbers to DSUs.

- ADp address range is 1 to 255
- DPII address range is 1 to 80

Change Protocol Mode

Change Protocol Mode (**ChgMd**) allows you to select the network management protocol from the front panel. The protocol selections are:

- Advanced Diagnostic (ADp) used by the 6700 and 6800 Series NMS
- DATAPHONE II (DPII) used by the 6800 Series NMS and DATAPHONE II System Controller, Diagnostic Console, and Network Controller

ChgMd is not available on a tributary DSU or DBM configured for disruptive or no diagnostics (Diag Type = Disr or None), or a single-port multipoint tributary DSU.

Both the control and tributary DSUs must be configured for the same protocol. In a carrier-mounted configuration, the SDU must be configured for the same protocol as the DSU.

Async Terminal

Async Terminal (**Term**) is available for the Model 3610 standalone DSU. The async terminal feature allows you to manage the DSU through full menu displays similar to the front panel.

Once enabled, the async terminal operates exactly as the front panel, but without the limitation of the 2-line, 16-character LCD. Refer to Appendix C, *Async Terminal Operation*.

SPID

Service Profile Identifier Screen (**SPID**) provides access to two Bearer Access Channels: B1 and B2. This feature applies only to the ISDN DBM. Refer to Document No. 3610-A2-GB49 for more DBM information.


Menu

Menu allows you to disable Full mode. Full mode displays all menu selections based on installed and user-configured configuration options.

When disabled, an abbreviated set of selections appears. The configuration options that do not display when in Full mode are indicated by row with a ◀ symbol in Appendix B, *DSU Configuration Worksheet*.

Control Branch

The Control (**Ctrl**) branch allows you to enable or disable the DSU's transmitter, as well as the DBM's, and to display/change the status of the general purpose external DTE leads.

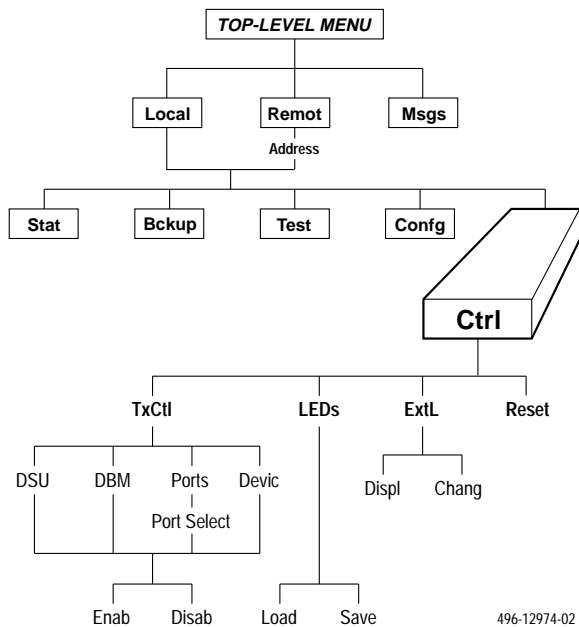

Transmitter Control

Transmitter Control (**TxCtl**) allows you to enable or disable the DSU's transmitter (DDS core).

When the DSU transmitter is disabled:

- A disabled DSU responds to tests. Aborting a test clears the test but the unit remains disabled.
- A DSU in test clears the test when it receives an enable or disable command.
- If an enable command is sent to a control from an NMS, the local front panel, or an async terminal, all disabled tributaries are enabled; all tributaries in test are restored to Data mode (DM).

A DBM can be disabled if it is addressed from the Remote branch. When the local DBM is disabled, the DBM does not originate or answer any calls until enabled.

LEDs

The **LEDs** selection is only available from the Local branch. This selection allows you to monitor any port or the aggregate data stream at any given time. The selected port's lead activity is reflected in the front panel status indicators, including TXD and RXD.

External Leads

External Leads (**ExtL**) allows you to display the state of four general-purpose leads on the EIA-232-D/V.24 Port 1 interface:

- Pins 12 and 13 for output (control leads)
- Pins 19 and 23 for input (alarm leads)

If the configuration option External Leads (Ext Leads) is set to ExtLd, you can change the state of the two output leads from the front panel, an async terminal, or a 6700 or 6800 Series NMS.

When the DSU's diagnostic protocol is ADp and the CCN by External Leads (CCN by EL – Table 4-4) configuration option is enabled, a control DSU reports any changes to the four leads to the 6700 or 6800 Series NMS as part of its health and status poll response.

Displaying External Leads

Display (**Displ**) allows you to view the external lead states. When you select Display, the External Leads status report appears showing the current status of the general-purpose external leads on the EIA-232-D/V.24 interface.

- Input leads A (Pin 23) and B (Pin 19):
Off () when voltage on lead is less than +0.8V.
ON () when voltage on lead is more than +2.2V.
- Output leads A (Pin 12) and B (Pin 13):
Off (), -12V is applied to lead.
ON (), +12V is applied to lead.

Change (**Chang**) allows you to change the state of the two output leads. Examples include changing a lead to signal a console operator or resetting a remote computer.

Reset

Selecting **Reset** will reset all connections and start a power-up routine. When the PowerOnTst General configuration option is disabled, the unit bypasses device tests but continues to generate configuration error messages if a major device error is detected.

While the DSU is executing power-up diagnostics, the async terminal connection is ended and the async terminal displays **Device Reset**. Once completed, the user needs to login into the async terminal again.

NOTE


Reset is disruptive and can affect your application data or may cause your application session to be dropped.

Remote Branch


The Remote (**Remot**) branch allows front panel access to remote units.

- Point-to-point configuration: access DSU at the other end.
- Multipoint configuration: enter DSU remote addresses and access each unit.

When the Remote branch is accessed, the front panel displays the local menu tree with the remote unit's data.

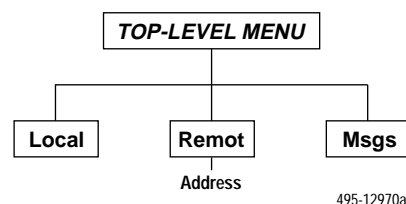

When the remote unit status is displayed, an inverse **I** appears on the top left of the LCD, as shown below.

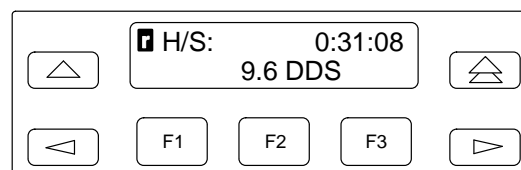

When changing configuration options:

- At the **Load from** menu, select **Activ** to obtain the remote unit's active configuration.
- From the **Edit/Save** menu, press **Save to** and then select **Activ**.

The remote end starts responding after SAVE is pressed. After selecting SAVE, the responding message is **Command Complete** or **Command Fail**. Use the Remote branch to run tests or communicate with a tributary. Refer to the *Options* section, page 3-14.

Remote does not appear as a menu selection for a multipoint tributary or when the Diagnostic Type is set to None (Table 4-2).

Front Panel Security

The Model 3610 front panel and Model 3611 shared diagnostic control panel (SDCP) have two levels of security access, as shown in Table 3-6. Refer to Appendix A to view the functions on the menu tree.

**Table 3-6
Security Access Levels**


Security Access Level	Functions Available
Unlock	All
Lock (Read Only)	Local branch only: <ul style="list-style-type: none"> • Status branch • Configuration branch displays • Control branch: Display External Leads only

The 3600 Series DSUs are shipped from the factory with the security level set to Unlock. When the front panel is locked, only the Local branch appears on the control DSU.

NOTE

To lock or unlock the front panel, the async terminal must be disabled.


If the security has not been set on the front panel before, the following appears:

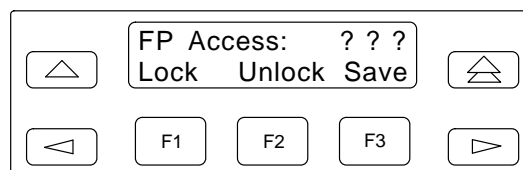

To select the security level:

Procedure

1. Press the key to go to the top-level menu.
2. Press the and keys simultaneously for three seconds. The following menu appears:

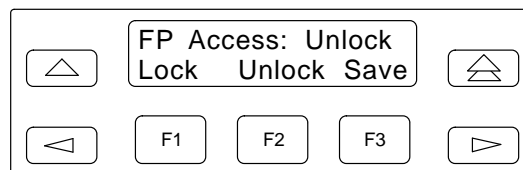


3. Select the security level:
 - Lock** – To restrict control (F1)
 - Unlock** – To provide full access (F2)
4. Press **Save** (F3).

Configuration Option Tables 4

Overview	4-1
Related Documentation	4-1
Configuration Option Tables	4-1
Configuration Option Tables Format	4-1

Overview

After the DSU and any options are installed, set the software configuration options by accessing the Configuration (**Confg**) branch of the menu. Refer to the menu tree in Appendix A and the worksheet in Appendix B while planning configurations.

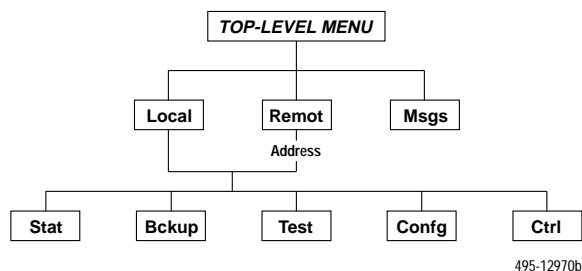

Load and save a set of factory defaults before changing any configuration options. Refer to the *Saving and Changing Configuration Options* section in Chapter 2. For additional information, refer to:

- Table 2-1, Default Configuration Option Sets.
- Table E-4, Configuration Error Messages, for messages that may appear after pressing SAVE.

Related Documentation

Configuration options supporting TDM, MCMP, and digital bridging are in Document No. 3610-A2-GB48. Configuration options supporting DBMs are in Document No. 3610-A2-GB49.

Configuration Option Tables

This section contains a configuration option table for each functional group or option set within the Configuration (**Confg**) branch of the menu that is specific to DSU and LPDA-2 applications.

Each table lists all the configuration options available in the option set. The tables are in the order in which they appear on the Confg branch of the menu.

- DSU Configuration Options (Table 4-1)
- Diagnostic DSU Configuration Options (Table 4-2)
- Diagnostic General Configuration Options (Table 4-3)
- General Configuration Options (Table 4-4)
- LPDA-2 Configuration Options (Table 4-5)

Factory default option sets for the tables listed above are located in Table A-1. Configuration options appear or are filtered based on settings in effect and additional installed hardware features.

Configuration Option Tables Format

The tables show the following configuration option information:

- Name of the configuration option followed by a colon (:) and the factory default setting for FacT (tributary).
- All selectable options.
- Description of the configuration option.
- Description of each selectable setting.

**Table 4-1
(1 of 3)
DSU Configuration Options**

Rate(Kbps): Auto												
Next	Auto	64CC	64L	56	38.4	19.2	9.6	4.8	2.4	Prev		
<p>DSU Data Rate.¹ Data rate in kbps on the digital circuit. Sets the data rate of the DDS circuit interface. Auto is available to identify the line rate. When a weak quality or a poor signal exists, Device H/S messages appear on the front panel while the DSU continues to determine the data rate. Rate(Kbps) does not appear for EBrdg.</p> <p>NOTE: Setting the actual data rate will result in maximum reliability and minimum power-up time. The actual data rate is recommended over the Auto setting after installation.</p> <p>Control and tributary DSUs set to 64CC or 64L must be set to the same rate.</p> <p>When App Module ID displays XLOOP, the 19.2 kbps data rate results in a DDS network service of +6 dB.</p> <p>Auto – DSU detects the data rate and displays the value in the H/S display. While attempting to detect the data rate, the front panel will display Device H/S messages. Once the data rate is detected, the Device H/S will display the data rate in place of Auto. To ensure proper line rates, configure the unit for the actual data rate. TxClkSource configuration option must be set to DDS or RXC in order to locate the data rate.</p> <p>64CC – 64 kbps Clear Channel on a 72 kbps circuit.</p> <p>64L – 64 kbps LADS operation.</p> <p>56 to 2.4 – Selects a DSU data rate between 56 and 2.4 kbps.</p>												
PrtSp(Kbps): 9.6												
Next	64	56	48	38.4	32	28.8	24.0	19.2	18.8	18.0	16.8	14.4
12.0	9.6	9.2	8.4	7.2	4.8	4.4	4.0	2.4	2.0	1.2	Disab	Prev
<p>Port Speed.² Sets the speed of the DTE port interface. The port speed may be set to any value less than or equal to the Rate(Kbps) configuration option value. If the value is set less than the DDS rate, the DSU performs rate adaption.</p> <p>NOTE: When the Async→Sync configuration option is enabled, the following port speeds will not appear: 32, 24.0, 18.8, 18.0, 9.2, 8.4, 4.4, 4.0, and 2.0 kbps.</p> <p>64 to 1.2 – Selects the DTE's port speed.</p> <p>Disab – Sets the port speed to 0 (zero) bps.</p>												
TxClkSource: DDS												
Next	Int	RXC	Ext	Prt1	Prt2	Prt3	Prt4	Prt5	Prt6	DDS	Prev	
<p>Transmit Clock Source. Specifies the transmit timing source for the DSU. Not valid with EBrdg.</p> <p>Int – Internal clock source. Timing is provided by the DSU.</p> <p>RXC – Receive clock source. The DSU generates transmit timing from the receive data signal. This choice is provided for LADS configurations and differs from the DDS selection when running tests.</p> <p>Ext³ – External clock source. The DSU is timed by the external Transmit Timing lead on Port 1 only.</p> <p>Prt1 to Prt6 – Selects Ports 1 through 6. The DSU is timed by the external Transmit Timing lead on the selected port.</p> <p>DDS – DDS Network. The DDS network is the timing source for the DSU.</p>												
<p>¹ If operating in MCMP mode (MUX Funct is set to MCMP), the Rate(Kbps) default setting is 56 kbps.</p> <p>² Port speed does not appear if TDM or MCMP hardware is installed. Instead, this entry is made in the DSU Port Speed Configuration Options for MCMP or TDM. Refer to Document No. 3610-A2-GB48.</p> <p>³ In TDM and MCMP mode, the External clock source is replaced with Ports 1 – 6. Selecting a port number results in the TDM operating with timing provided by the DTE at the selected port (EIA-232 Pin 24 or V.35 Pins U and W). For EBrdg mode in full Backup, timing is set using the Bridge Timing configuration option. Refer to Document No. 3610-A2-GB48.</p>												

**Table 4-1
(2 of 3)
DSU Configuration Options**

Msg Clamp: Enab				
Next	Enab	Disab	Prev	
<p>Message Clamping. Controls the data leads when disruptive diagnostic tests and commands are received from the remote DSU. This configuration option applies to both the DSU and DBM.</p> <p>When Disr Type is set to 3600e (see Table 4-2), as required for 64CC service, and Msg Clamp is set to Enab, the DSU sends the escape header portion of a diagnostic message to the DTE before detecting an escape header and invalid data. However, the DSU does clamp the ensuing command portion of the message.</p> <p>Enab – Received Data (RXD) is held to MARK and LSD is turned Off during diagnostic exchanges. This prevents diagnostic messages from reaching the DTE interface.</p> <p>Disab – DSU passes diagnostic messages to the DTE interface. Use the Disable setting if the remote DSU is configured for switched RTS (RTS Control set to DTE, Table 4-4).</p>				
TxElasStor: Disab				
Next	Enab	Disab	Prev	
<p>Transmit Elastic Store.⁴ Elastic store hardware consists of a transmit buffer on the DSU's transmitted data (TXD) lead. Serial data from the extended circuit is clocked into the DSU's elastic store using a clock provided by the DTE's receive clock lead. The DSU uses its own system timing to clock data out of the buffer.</p> <p>Enab – Enable this configuration option if you have an extended network. Transmit Elastic Store resets upon power-up, overflow, or after the request-to-send lead makes an Off-to-ON transition. Use TxElasStor to minimize the effects of clocking differences from different sources.</p> <p>Disab – Disable this configuration option if you do not have an extended network.</p>				
RxElasStor: Disab				
Next	Enab	Disab	Prev	
<p>Receive Elastic Store. Receive Elastic Store hardware consists of a receive buffer on the DSU's received data (RXD) lead. The Receive Elastic Store configuration option is supported in single port DSUs configured for disruptive diagnostics.</p> <p>Enab – Enable this configuration option if you have an extended network, and when interfacing to a DTE or DCE that provides its own clock source and supports the Transmit Elastic Store configuration option.</p> <p>Disab – Disable this configuration option if you do not have an extended network.</p>				
19.2 PowrLvl: +6				
Next	+6	0	-10	Prev
<p>19.2 kbps Power Level. Selects the appropriate power level, in decibels, for operation at 19.2 kbps. This configuration option appears when Rate(Kbps) is set to 19.2 kbps.</p> <p>NOTE: When the App Module ID displays XLOOP, setting the Rate(Kbps) configuration option to 19.2 kbps filters this configuration option and results in a DDS network service of +6 dB. Refer to Table 3-2 for ID descriptions.</p> <p>+6 – For DDS network service.</p> <p>0 – For alternate DDS service.</p> <p>-10 – For LADS operation.</p>				
<p>⁴ In TDM or MCMP mode, the DSU's Transmit Elastic Store settings are ignored; instead, this configuration option is selected on a per-port basis in the MUX Port<i>n</i> menu.</p> <p>In Bridge mode with MUX Funct set to CBrdg, the Transmit Elastic Store configuration options for Port 1 are ignored (automatically disabled).</p>				

**Table 4-1
(3 of 3)
DSU Configuration Options**

64KScrambling: Off									
Next	On	Off	Prev						
64 kbps Scrambling. Controls the data scrambler used with 64 kbps Clear Channel operation. Data scrambling suppresses the possible simulation of network control codes by application data. This configuration option appears when Rate(Kbps) is set to 64CC, and must be the same at both the local and remote DSUs.									
On – Enables data scrambling.									
Off – Disables data scrambling.									
64KLatchLpbk: On									
Next	On	Off	Prev						
64 kbps Latching Loopback. Controls the DSU's response to the network latching loopback sequence on 64 kbps Clear Channel operation. This configuration option appears when Rate(Kbps) is set to 64CC.									
On – DSU responds to the network latching loopback command. ON is required for compliance with AT&T Technical Reference 62310 – 1993.									
Off – DSU ignores the network latching loopback command.									
NetIntf: Disab									
Next	AggSw	Forc	Disab	Prev					
Network Interface. When set to AggSw, the DSU bridges aggregate data over the alternate Port 1. If the DTE Port configuration option is set to EIA-232 (Table 4-4), the aggregate data is bridged to the V.35 interface. If the DTE Port configuration option is set to V.35, the aggregate data is bridged to the EIA-232 interface. Not valid with digital bridging.									
AggSw – Enable for aggregate switch backup. When Answer External Dial Backup is disabled (Table 4-4), the DSR signal is sent to the external dial backup unit. Data can be sent over alternate Port 1 and the DDS line simultaneously. An installed DBM must be disabled to select this configuration option.									
Forc – Forces Aggregate Switching to ON. When Answer External Dial Backup is enabled (Table 4-4), the alternate Port 1 is active and the DDS line is inactive.									
Disab – Alternate Port 1 not in use.									
Netl Timing: Netl									
Next	Int	Netl	Prt1	Prt 2	Prt3	Prt4	Prt5	Prt6	Prev
Network Interface Switch Timing. If NetIntf is set to AggSw or Forc, this configuration option determines where timing is obtained. Not valid with EBrdg.									
Int – Timing is generated internally by the DSU.									
Netl – Timing is taken from the network.									
Prt1 to Prt6 – Timing is taken from the port. Not available in MCMP mode. Ports 2 through 6 are available for TDM mode, if installed.									
V.54 Lpbk: Disab									
Next	Enab	Disab	Prev						
V.54 Loopback. Enables V.54 Loopback operation. This configuration option is supported for point-to-point configurations. The V.54 sequences are generated and detected on Port 1. Refer to the <i>Remote Digital Loopback</i> section in Chapter 3.									
Enab – Enable if the DTE generates V.54 loopback sequences or if the 3600 Series DSU is communicating with a non-3600 Series DSU that supports V.54 signaling.									
Disab – Disable if the DTE does not support V.54 signaling or other DSUs do not support V.54 signaling.									

**Table 4-2
(1 of 2)
Diagnostic DSU Configuration Options**

Diag Type: Disr						
Next	NonD	Disr	Mixed	None	Prev	
Diagnostic Type. Defines the diagnostic interaction between the control and tributary DSUs. All DSUs on the same circuit must be set the same.						
NonD – Nondisruptive Diagnostics. An in-band secondary channel transport carries diagnostics data between the control and the tributary DSUs.						
Disr – Disruptive Diagnostics. The same (primary) channel that carries user-transmitted data between the control and the tributary DSUs also carries diagnostic data. Select this mode for compatibility with earlier releases that use disruptive diagnostics. Valid for EBrdg.						
Mixed – Mixed mode supports nondisruptive health and status updates. User-initiated commands are sent disruptively. Mixed should only be selected in single-port multipoint configurations; not valid for point-to-point, EBrdg, or MCMP.						
None – No diagnostic communications with remote devices; only allows local diagnostics.						
2nd Ch(bps): 400						
Next	100	400	800	1200	1600	Prev
In-band Secondary Channel Diagnostic Speed in bps. Determines the DSU's diagnostic speed when you select NonD (nondisruptive diagnostics) and no excess bandwidth is available for in-band diagnostics. This configuration option only appears when Diag Type is set to NonD.						
For example:						
– DSU port speed and DDS line speed are both set to 9.6 kbps (9600 bps)						
– Diagnostic Type entered is NonD with diagnostic speed set to 400 bps						
– Diagnostic speed of 400 is subtracted from the original 9600. In this example, the DSU port speed is 9.2 kbps (9200 bps).						
100 to 1600 – Refer to the following list for valid diagnostic speeds.						
If the DSU Rate(Kbps) equals the Port Speed, or the underspeed port speed and sum of the TDM ports is equal to the aggregate speed on the DSU, use the following diagnostic speeds:						
DSU Rate or Aggregate Speed	Valid Diagnostic Speeds in bps					
1.2	100, 400					
2.0	100, 400					
2.4	100, 400, 800					
4.0	100, 400, 800					
4.8	100, 400, 800, 1200, 1600					
7.2	100, 400, 800, 1200					
8.4	100, 400, 1600					
9.6	100, 400, 800, 1200, 1600					
12.0	100, 400, 800, 1200					
14.4	100, 400, 800, 1200, 1600					
16.8	100, 400, 800, 1200					
18.0	100, 400, 1200					
19.2	100, 400, 800, 1200, 1600					
28.8	100, 400, 800					
32	100, 400, 800, 1600					
38.4	100, 400, 800, 1200, 1600					
48	100, 400, 800, 1200, 1600					
56	100, 400, 800, 1600					
64	100, 400, 800, 1600					
NOTE: When the TDM is operating at a line speed greater than 19.2 kbps or with a multipoint configuration, 100 bps is not a valid in-band secondary channel transport rate. TDM uses 10 bps of the DSU port bandwidth for in-band framing and diagnostics.						

Table 4-2
(2 of 2)
Diagnostic DSU Configuration Options

Disr Type: 3600e						
Next	2500	2600	3600s	3600e	Br56	Prev
<p>Disruptive Diagnostic Type. Defines the diagnostic interaction between the control and tributary DSUs. It must be set consistently for all DSUs on the same circuit when Diag Type is set to Disr, NonD, or Mixed. Regardless of the diagnostic type enabled, aggregate tests are still sent disruptively.</p> <p>NOTE: If the DSU Rate(Kbps) is set to 64CC, the DSU defaults to Disr Type 3600e and no other configuration options will appear for this configuration option set.</p> <p>2500 – Only for point-to-point circuits when the control is either a 2500 or 3500 Series DSU, or the tributary is a 2500 Series DSU. Digital Loopback and Digital Test commands are sent using the 2500 signaling. All other remote commands use 2600 signaling. When 2500 is selected and AutoRestor is enabled, RespondRDL (Table 4-4) must be enabled for automatic restoration to work.</p> <p>2600 – Used in mixed networks when the control is a 2600 Series DSU and the tributaries are 2600/3500/3600 Series DSUs, or when the control is a 3600 Series DSU and at least one tributary is a 2600 or 3500 Series DSU. This selection is not available for digital DBMs.</p> <p>3600s² – Used in circuits containing only 3600 Series DSUs. This configuration option performs full 3600 diagnostics between control and tributary DSUs. It utilizes Switched CMI/DMI mode (control mode idle/data mode idle) signaling to ensure protocol independence with primary data and to trap diagnostic messages in DSUs. It is recommended that this mode be used when the control and tributary DSUs are configured for RTS Cntrl: FrcOn (Table 4-4). Switched-carrier operation can be supported; Msg Clamp (Table 4-1) must be disabled. This selection is host protocol independent, but not as fast as 3600e described below. This selection is not available for digital DBMs.</p> <p>3600e – An alternate diagnostic protocol for circuits containing only 3600 Series DSUs. It is the diagnostic type protocol used on 64 kbps CC and backup PSTN links. This configuration option performs full 3600 diagnostics between control and tributary DSUs. An escape mode signaling (special data pattern) is utilized for minimum disruptive effect, or when the network does not support CMI network codes.</p> <p>Br56 – Required for aggregate switching and digital bridge configurations when a Switched 56 DBM or ISDN DBM is installed.</p>						
<p>¹ Do not use 3600s if you have a point-to-point tributary with disruptive diagnostics, no rate adaption, and RTS configured with DTE.</p>						

Table 4-3
(1 of 3)
Diagnostic General Configuration Options

Position: Trib				
Next	Cntrl	Trib	G2Trb	Prev
<p>Network Position. Determines the DSU's position in the network, and defines its test and diagnostic capabilities. In Bridge mode, the only value available is Cntrl.</p> <p>Cntrl – Control. Digital bridge must be set to Cntrl.</p> <p>Trib – Tributary.</p> <p>G2Trb – This selection appears only in a DPHI protocol mode. In a DATAPHONE II network, configure the outbound tributary as a G2Trb and have one DSU on its poll list. Configure other tributaries as Trib.</p>				
LinkConfig: Pt-Pt				
Next	Pt-Pt	M-Pt	Prev	
<p>Link Configuration. Determines a point-to-point or multipoint circuit. This configuration option is required for proper operation, testing, dial backup procedures, and nondisruptive diagnostics.</p> <p>NOTE: For a DSU loaded from FacB, or a DSU with MCMP installed and loaded from FacT or FacC, the default is M-Pt (multipoint).</p> <p>Pt-Pt – Point-to-point configuration.</p> <p>M-Pt – Multipoint configuration.</p>				
Resp Period: 1				
Next	1	2	10	Prev
<p>Response Period. Determines how frequently the DSU sends health and status information. This applies to RTS/CTS Delay diagnostics, which is used for single-port multipoint configuration if the Diagnostic Type configuration option is set to NonD or Mixed (Table 4-2). Although this configuration option determines how often the health and status message is transmitted, an extended RTS/CTS delay occurs each time the DTE raises or lowers RTS. Applicable to tributary DSUs and DBMs only.</p> <p>1 – Tributary DSU responds with health and status information each time the DTE raises RTS.</p> <p>2 – Tributary DSU responds with health and status information every other time the DTE raises RTS.</p> <p>10 – Tributary DSU responds with health and status information every tenth time the DTE raises RTS.</p>				
TribTimOut: 0:10				
Next	Chang	Prev		
<p>Tributary Time-out. The time (in minutes and seconds) that a DSU waits for a tributary health and status report before generating a Tributary Time-out alarm. This setting can be from 5 seconds to 10 minutes. Use this configuration option for single-port multipoint configurations when the Diagnostic Type is set to NonD or Mixed (Table 4-2).</p> <p>Chang – Set this configuration option to greater than or equal to the maximum amount of time it takes for the front-end processor (FEP) to complete its polling cycle on that circuit, multiplied by the value entered in Resp Period.</p>				
Diag Conn: CC				
Next	CC	DC	Prev	
<p>Diagnostic Connection. Set this value to match the connection set up for the 3600 Hubbing Device connected to this DSU. Refer to the <i>Network Diagnostic Connection</i> section in Chapter 2. This configuration option is only available for a Model 3610 DSU configured as a control.</p> <p>CC – Control Channel. Set Control Channel for CC IN/DC OUT connection as the first link an NMS.</p> <p>DC – Diagnostic Channel. Set Diagnostic Channel for CC OUT/DC IN connections from the remaining tributaries.</p>				

**Table 4-3
(2 of 3)
Diagnostic General Configuration Options**

Link Delay: 0s								
Next	0s	1s	2s	5s	10s	20s	50s	Prev
Link Delay. Controls the additional time in seconds that a DSU or DBM waits for a response from a device one level downstream. This configuration option does not appear for a multipoint single port device.								
NOTE: This configuration option only appears when Diag Type is set to NonD (Table 4-2). If diagnostic time-outs are occurring during polling or DATAPHONE commands, increase the link delay to the next higher value.								
0s to 50s – Sets the number of seconds the DSU or DBM waits for a downstream device response.								
Network Delay: 0s								
Next	0s	1s	2s	5s	10s	20s	50s	Prev
Network Delay. Controls the additional time in seconds that a DSU or DBM waits for a response from a multilink channel. The amount of delay should be set to at least 1 second if the downstream link is MCMP. Increase the network delay when:								
<ul style="list-style-type: none"> • Receiving timeouts from an NMS • Fast Select configuration option is disabled • A tributary is two or more units downstream from the control unit 								
NOTE: This configuration option only appears when Diag Type is set to NonD (Table 4-2) and only applies when the protocol mode is set to ADp.								
0s to 50s – Sets the time the DSU or DBM waits for a multilink channel response.								
Packet Delay: 0s								
Next	0s	1s	2s	5s	Prev			
Packet Delay. Controls the time in seconds that a DSU or DBM waits for a packet to complete from an NMS. This configuration option only appears for a DSU configured as a control.								
NOTE: Must be used when the Model 3600 DSU's diagnostic channel operates over packet switch, satellite communications, or other facilities that provide extended throughput delays.								
0s to 5s – Sets the time the DSU or DBM waits for an NMS to complete its command.								
Extend Chan: No								
Next	Yes	No	Prev					
Extend Main Channel. ¹ For an extended network, specifies whether there is main channel connectivity between the DTE port of the tributary DSU and the DTE port of the extended control DSU. If set to Yes, DSUs send Test mode conditions across multiple links. Test mode is not sent over a circuit configured for disruptive diagnostics.								
Yes – Set this configuration option to Yes to extend main channel connectivity between the DTE ports of the tributary and extended DSU in an extended network. A tributary DSU sends Test mode conditions downstream, and a control DSU receives/accepts the Test mode condition.								
No – Set this configuration option to No if you do not have an extended network. A control DSU does not receive/accept the Test mode condition; the condition is ignored.								
¹ When in MCMP or TDM mode, using a multipoint single-port device, or Diag Type is set to Disr or None, this configuration option does not appear. Instead, it is displayed in the MUX Port configuration options under Port 1. Ports 2 – 6 must be set independently. See Document No. 3610-A2-GB48 for MUX Configuration Options.								

Table 4-3
(3 of 3)
Diagnostic General Configuration Options

Upstrm Port:Prt1							
Next	Prt1	Prt2	Prt3	Prt4	Prt5	Prt6	Prev
<p>Upstream Port.² If an extended control DSU has its DTE interface connected to the tributary DSU or APL modem and the configuration option Extend Chan is set to Yes, set this configuration option to the upstream port number. Select Prt1 if the tributary DSU is operating in single-port mode. This configuration option has an effect only if Diag Type is set to NonD.</p> <p>Prt1 to Prt6 – Selects the upstream port number.</p>							
M-PtSymPrt:Disab							
Next	Enab	Disab	Prev				
<p>Multipoint Symmetrical Port. This configuration option enables rate adaption in the tributary DSU to control direction on a multipoint circuit. This configuration option will not appear for a point-to-point circuit or when operating in MCMP mode.</p> <p>Enable this configuration option:</p> <ul style="list-style-type: none"> • When performing multipoint rate adaption (e.g., the port speed is less than the line speed), or • If the transmit data rate is required to match the receive data rate for single-port multipoint nondisruptive diagnostics <p>This is generally the case in extended circuit applications and in multipoint applications where the tributary DSU is configured as a digital-sharing device.</p> <p>NOTE: Enable this configuration option for the control DSU and the tributaries; the control DSU and tributaries must be set the same.</p> <p>Enab – Enable this configuration option when performing multipoint rate adaption or when a multipoint network is configured for nondisruptive diagnostics and a symmetric port speed is required for proper DTE operation.</p> <p>Disab – Disables multipoint rate adaption on data from the tributary to the control DSU (asymmetrical).</p>							
Fast Sel: Enab							
Next	Enab	Disab	Prev				
<p>Fast Select. Fast Select is a technique used by ADp protocol or the 6700 or 6800 Series NMS. When enabled, the DSU transfers a message to a downstream device in a character-by-character format. When disabled, the DSU transfers the message to the downstream device in packet or block format. The 3800 Series Dial Modem does not support Fast Select; therefore, you must disable Fast Select in all 3600 Series DSUs between an NMS and a 3800 Series Dial Modem on an extended circuit.</p> <p>This configuration option does not appear if the DSU is a multipoint single-port device, if the protocol used is DP11, or if Diag Type is set to Disr or None.</p> <p>Enab – Enables the Fast Select feature.</p> <p>Disab – Disables the Fast Select feature. When disabled, all devices on the same level of the circuit must be disabled.</p>							
<p>² When in MCMP or TDM mode, this configuration option does not appear. Instead, it is displayed in the DSU Port Speed configuration options for MCMP or TDM under Port 1. Ports 2 – 6 must be set independently.</p>							

Table 4-4
(1 of 6)
General Configuration Options

DTE Port: EIA232			
Next	EIA232	V.35	Prev
<p>DTE Port. Selects the active DTE interface. The other port is the alternate Port 1. Refer to the AnswExtBU configuration option in this table and NetIntf configuration option (Table 4-1).</p> <p>EIA232 – The EIA-232 connector is typically used for data rates up to 19.2 kbps. Operation at speeds up to 64 kbps is dependent upon cable length, cable quality, and the local environment. Connector type should match the DTE.</p> <p>V.35 – For all available rates at distances up to 1000 feet.</p>			
RTS Cntrl: DTE			
Next	FrcOn	DTE	Prev
<p>Request-to-Send Control. If set to FrcOn, the DSU is always in data mode and never sends control mode idle (CMI) as the RTS lead is forced ON. If set to DTE, the DSU sends CMI whenever RTS is Off, and data mode idle (DMI) when RTS is ON.</p> <p>This configuration is forced ON internally for point-to-point configurations with nondisruptive diagnostics or rate adaption.</p> <p>Set this configuration option to DTE for multipoint tributaries performing nondisruptive or mixed diagnostics, rate adaption, or when configuration option M-PtSymPrt is enabled.</p> <p>FrcOn – Forced On. Keeps the RTS ON continuously, regardless of whether RTS at the DTE interface is ON or Off. Control DSUs with LPDA-2 enabled must have RTS Cntrl forced ON and CTS Cntrl set to =RTS.</p> <p>DTE – DSU responds to RTS from the DTE. Does not appear for CBRdg or EBRdg.</p>			
CTS Cntrl: Std			
Next	Std	=RTS	Prev
<p>Clear-to-Send Control. Controls the CTS lead when RTS is received.</p> <p>Std – Standard. CTS follows RTS with a delay. CTS is normally controlled by the DTE's RTS lead. However, the CTS lead can be affected by the response to abnormal conditions such as no signal or test mode, as determined by the following configuration option settings in this table: RTS Cntrl, CTS Lead, and Circ Assur.</p> <p>=RTS – Request-to-Send. CTS follows RTS with no delay. This configuration option is required for a control DSU with LPDA enabled and RTS Cntrl set to FrcOn, or a tributary DSU with LPDA enabled when in an FEP-to-FEP configuration. In point-to-point configurations where LPDA is disabled and RTS Cntrl is forced ON, CTS Cntrl can also be forced ON if the DTE interfaces require no delay between RTS Cntrl and CTS Cntrl (0 ms), but RTS Cntrl does not require an RTS-to-CTS transition. If MUX Funct is set to TDM, MCMP, EBRdg, or CBRdg, CTS will not be affected by network alarms.</p>			
AntiStream:Disab			
Next	Chang	Disab	Prev
<p>AntiStreaming. Antistreaming provides circuit protection against a streaming DTE by clamping the RTS lead of the tributary DSU. A streaming DTE has its RTS lead constantly turned ON.</p> <p>In TDM or MCMP mode, the AntiStream configuration option is not displayed; rather, you select these configuration options on a per-port basis in the MUX submenu.</p> <p>If the tributary DTE turns ON RTS longer than the time specified for the AntiStreaming configuration option, the tributary DSU turns on its alarm indicator and clamps RTS to Off. Although the tributary DTE is not allowed to send, the DSU can still respond to commands and is capable of being tested or disabled.</p> <p>Upon detecting that RTS is no longer turned ON, the DSU turns off its alarm, resets the streaming timer, and allows the DTE to send data.</p> <p>This configuration option only applies to a DSU configured with RTS Control set to DTE and is disabled when RTS Control is set to FrcOn.</p> <p>Chang – Set timer to any value from 1 to 100 second(s) in increments of 1.</p> <p>Disab – Sets timer to Disab. When you select Disab, streaming terminal detection is not provided. For async terminal, enter 0 (zero) for Disable.</p>			

**Table 4-4
(2 of 6)
General Configuration Options**

LSD Lead: Std				
Next	Std	Delay	FrcOn	Prev
Line Signal Detect Lead. Controls behavior of the Line Signal Detect lead.				
Std – LSD lead goes Off in response to a control mode idle (CMI) signal from the DDS network or DDS failure.				
Delay – LSD does not go Off in response to a network alarm condition or CMI. LSD goes Off only after repeated call attempts fail and the Tries Time-out configuration option expires. Enable Auto Bckup to use this selection (refer to the Backup Configuration Option Table in Document No. 3610-A2-GB49).				
FrcOn – Forced On. Keeps LSD on as long as the DSU has power.				
CTS Lead: Std				
Next	Std	Delay	FrcOn	Prev
Clear-to-Send Lead. Controls the Clear-to-Send lead. Appears when CTS Cntrl configuration option is set to Std.				
The Std and Delay selections are ignored if RTS Control is set to DTE, CTS Control is set to =RTS, or Circuit Assurance is enabled.				
Std – CTS is determined by the combination of the RTS Control and CTS Control configuration options in this table.				
Delay – CTS does not go Off in response to a network alarm condition or CMI. CTS goes Off only after repeated call attempts fail, the Tries Time-out configuration option expires, and the call is dropped. Enable Auto Bckup to use this selection (refer to the Backup Configuration Option Table in Document No. 3610-A2-GB49).				
FrcOn – Forced On. Keeps CTS on as long as the DSU has power.				
DSR FrcOn: Enab				
Next	Enab	Disab	Prev	
Data Set Ready Forced On. Provides the ability to override any other options controlling the Data Set Ready lead.				
In MCMP, TDM, CBrdg, or EBrdg mode, the DSR FrcOn and DSR on Test configuration options are not displayed. Select these configuration options on a per-port basis from the MUX submenu.				
Enab – DSR remains ON as long as the device is working regardless of tests and network alarms.				
Disab – DSR functions as an active lead reflecting various test and alarm conditions and other options.				
SystemStat: Enab				
Next	Enab	Disab	Prev	
System Status. Controls the behavior of the DSR lead in response to a No Signal, Out-of-Service, or Out-of-Frame alarm from the network.				
Enab – Network alarm turns Off DSR.				
Disab – Network alarm does not affect DSR. For a DBM-D, DBM-I, DBM-S, or DBM-V, network interface aggregate switching, or when the DSU is in Bridge mode, this configuration option should be set to Disab.				
DSR on Tst: Enab				
Next	Enab	Disab	Prev	
Data Set Ready On in Test. Controls the behavior of the DSR lead during testing.				
In MCMP, TDM, CBrdg, or EBrdg mode, the DSR FrcOn and DSR on Test configuration options are not displayed. Select these configuration options on a per-port basis from the MUX submenu.				
Enab – DSR is ON continuously during testing, allowing a DTE that relies on DSR being ON to send test messages to the DSU.				
Disab – DSR is Off during testing.				

Table 4-4
(3 of 6)
General Configuration Options

Circ Assur: Disab			
Next	Enab	Disab	Prev
<p>Circuit Assurance. Controls the CTS lead in response to a data signal from the network. This configuration option is ignored if rate adaption in effect or RTS Cntrl is set to ON at other end. Used for single-port applications only. When enabled, Diag Type should not be set to NonD (Table 4-2) and rate adaption should not be in effect.</p> <p>A DDS Facility Alarm condition turns Off the CTS lead, regardless of the Circuit Assurance setting.</p> <p>Enab – The DSU turns Off the CTS lead if the DSU receives control mode idle (CMI) from the network.</p> <p>Disab – The CTS lead is not affected by the receipt of CMI.</p>			
Tst Pattern: Std			
Next	AT&T	Std	Prev
<p>Test Pattern. Selects the test pattern generator and comparator used by the DSU in disruptive testing. This configuration option only applies to aggregate tests.</p> <p>AT&T – Must be selected by a 3600 Series DSU when exchanging test patterns with 2500, 2600, and 3500 Series DSUs.</p> <p>Std – The ITU standard 511-bit pattern; used with external test equipment.</p>			
RespondRDL: Disab			
Next	Enab	Disab	Prev
<p>Respond to Remote Digital Loopback. Determines whether the DSU responds to a 2500 or V.54 Remote Loopback request. Refer to the <i>Loopbacks</i> section in Chapter 3.</p> <p>Enab – Performs a Digital Loopback.</p> <p>Disab – Ignores the Loopback command.</p>			
LL by DTE: Disab			
Next	Enab	Disab	Prev
<p>Local Loopback by DTE. Whenever this lead is ON, the Local Loopback overrides any other diagnostic tests run by the network. Refer to the <i>Loopbacks</i> section in Chapter 3.</p> <p>Enab – The DTE forces the DSU into Local Loopback when the signal on Pin 18 of the EIA-232-D/V.24 interface or Pin L of the V.35 interface is turned ON. Local Loopback ends when the signal is dropped.</p> <p>Disab – The DTE will not initiate Local Loopback in response to the signal.</p>			
RL by DTE: Disab			
Next	Enab	Disab	Prev
<p>Remote Digital Loopback by DTE. For this configuration option, Link Configuration must be set to Pt-Pt (Table 4-3). Refer to the <i>Loopbacks</i> section in Chapter 3.</p> <p>Enab – The DTE forces the DSU to request a Remote Digital Loopback when the signal on Pin 21 of the EIA-232-D/V.24 interface or Pin N of the V.35 interface is turned ON. Remote Digital Loopback ends when the signal is dropped.</p> <p>Disab – The DTE cannot initiate Remote Digital Loopback.</p>			
Bilat Lpbk: Disab			
Next	Enab	Disab	Prev
<p>Bilateral Loopback. If this configuration option is enabled, a DTE Loopback occurs when a Digital Loopback occurs. Refer to the <i>Loopbacks</i> section in Chapter 3.</p> <p>Enab – When enabled, a Digital Loopback causes a DTE Loopback.</p> <p>Disab – Disables Bilateral Loopback.</p>			

**Table 4-4
(4 of 6)
General Configuration Options**

Ext Leads: Rate					
Next	ExtLd	Rate	RPower	Prev	
<p>External Leads. Controls the use of the general-purpose leads on the EIA-232-D/V.24 interface for Port 1 except when Rate is selected. These leads can be controlled and monitored from the front panel, an async terminal, or a 6700 or 6800 Series NMS.</p> <p>ExtLd – Enables Pins 12 and 13 as output (control) and Pins 19 and 23 as input (alarm) leads. When enabled, Pins 12 and 13 output +12V when ON and –12V when Off. Pins 19 and 23 recognize voltages from +2.2V to +12V as ON (reported as an External alarm) and –12V to +.8V as Off.</p> <p>Rate – If the TDM or MCMP option is installed, use Pin 12 on each port to control speed selection and make an extended modem change speed to match the backup port speed. Pin 12 on all ports turns Off at the same time to indicate that the TDM is in fallback. If a port does not fall back and remain at the same speed, then the fallback feature in the DCE connected to that port should not be enabled.</p> <p>RPower – Functions similarly to ExtLd, but the inputs report power failure or fan alarms when a redundant power supply is installed in the COMSPHERE 3000 Series Carrier.</p>					
CCN by EL: Disab					
Next	Enab	Disab	Prev		
<p>Configuration Change Notification by External Leads. Controls the use of the general-purpose output leads to set an CCN event. This configuration option only has an effect if Ext Leads is set to ExtLd and the protocol is ADp.</p> <p>Enab – Change in state of a general-purpose lead signals CCN to the NMS.</p> <p>Disab – General-purpose lead changes do not set a CCN event.</p>					
DTR Alarm: Disab					
Next	Enab	Disab	Prev		
<p>Data Terminal Ready Alarm. Causes the DSU to generate an alarm if DTR is Off for more than 30 seconds. The front panel or async terminal displays DTR Alarm and reports it to the NMS. Does not appear for TDM or MCMP mode.</p> <p>Enab – If DTR lead turns Off for 30 seconds, the DSU generates an alarm.</p> <p>Disab – No alarm is generated when DTR lead is Off.</p>					
SW Vers: Normal					
Next	3.24	4.43	6.66	Normal	Prev
<p>Software Version of the DSU. Forces the DSU's software/firmware version to be reported to the NMS through the Identity (ID) command in the DSU SW vers field. This configuration option supports NMS compatibility for a tributary DSU with a control DSU with an older software version. It applies when Diag Type is set to Disr (Table 4-2) or when a multipoint DSU configured for Mixed or NonD diagnostics is not operating in MCMP mode.</p> <p>When the control DSU's software version is 7.25 or greater, it will be compatible with any tributary 3600 Series DSU, regardless of its software version. To ensure optimal functioning of the DSU, both the control and tributary DSU's SW Vers configuration option must be set to Normal, and the tributary DSU's set to Normal or No.</p> <p>NOTE: Refer to Firmware Version Control, Table G-1.</p> <p>If the control DSU's software version is less than 7.25, the following configuration option changes need to be made:</p> <p>3.24 – Set 3.24 for a tributary DSU when the control DSU's software version is 3.13 or less, and the tributary DSU's software version is 5.15 or greater. No setting change is required for the control DSU; the DSU SW Vers configuration option is not available to the control.</p> <p>4.43 – Set 4.43 for the tributary DSU when the control DSU's software version is 4.25 or 4.28 and the tributary DSU's software version is 5.15 or greater. For the control DSU, set the 3.20 DSU SW Vers (the name of the configuration option in an older firmware version) configuration option to No.</p> <p>6.66 – Set 6.66 for the tributary DSU when the control DSU's software version is 6.xx or greater and the tributary DSU's software version is 8.xx or greater.</p> <p>Normal – Select Normal for both the tributary and control when both DSU software versions are 7.25 or greater.</p>					

**Table 4-4
(5 of 6)
General Configuration Options**

AnswExtBU: Disab			
Next	Enab	Disab	Prev
<p>Answer External Dial Backup. This configuration option is an aggregate switch on-demand feature that allows dial backup for a point-to-point 3600 Series DSU using an External dial backup unit (DBU). The 3600 Series DSU is forced to switch the aggregate data to the alternate DTE connector which is an interface connected to the aggregate data path rather than to the DTE (alternate Port 1, either the V.35 or EIA-232 interface). Control of the aggregate switch can be automated in several ways.</p> <p>When the remote site is to initiate a dial backup session, enable AnswExtBU. With this type of automated control, the DSU monitors the data terminal ready (DTR) lead on the aggregate port. When the External DBU has established a call and has turned ON the data set ready (DSR) lead, the DSU switches the aggregate data from the DDS line to the aggregate port via a crossover cable between the External DBU and the DSU. When the External DBU drops the call and the DTR signal turns Off, the DSU switches the aggregate data back to the DDS line. Note that when you select enable, the front panel Backup (Bkup) and Drop Backup (DrBU) and NMS Standby Facility commands are ignored.</p> <p>When a dial backup session is initiated at the local site, disable AnswExtBU so that the DSU controls the DSR lead on the aggregate port. By selecting the Backup command from the front panel (Bkup) or Standby Facility command from the NMS, data is routed from the External DBU through the network interface (NetIntf) switch to the DTE. As a result, the DSR signal turns ON, which then turns on the DTR signal at the External DBU. If configured for DTR call-control, the External DBU places the call. Data switches back to the DDS line when the front panel Drop Backup (DrBU) or NMS Standby Facility command is issued. This turns the DSR signal Off on the alternate Port 1 and, if the External DBU is configured correctly, the DBU drops the dial connection.</p> <p>NOTE: If an Internal DBM is installed and active or NetIntf is not set to AggSw (Table 4-1), this configuration option will not appear.</p> <p>Enab – Activates the DSU to automatically switch the aggregate data stream to the alternate Port 1 when the DTR signal turns ON. The DSU configuration option NetIntf must be set to AggSw.</p> <p>Disab – Allows the local DSU to control the call initiation and disconnect on an external DBU via the DSU's front panel or the NMS. The DSU configuration option NetIntf must be set to Forc (Table 4-1).</p>			
RLSD in MCMP: No			
Next	Yes	No	Prev
<p>Receive Line Signal Detector in Multichannel Multipoint. Defines whether switched RLSD is required for shared backup with MCMP to support RLSD detection. This configuration option only appears when an ISDN or Switched 56 DBM is installed.</p> <p>Yes – Switched RLSD is required.</p> <p>No – Switched RLSD is not required.</p>			
Async→Sync: Disab			
Next	Enab	Disab	Prev
<p>Asynchronous-to-Synchronous Conversion. Sets Port 1 of the DSU DTE interface for asynchronous or synchronous operation. This configuration option only appears when the Single-Port Async/Sync feature is installed (App Modul ID displays ASPEN or SEQU).</p> <p>Enab – Configures Port 1 as asynchronous (asynchronous-to-synchronous conversion takes place).</p> <p>Disab – Configures Port 1 as synchronous.</p>			
AsyncBit/Char: 8			
Next	6	7	8
			9
			10
			Prev
<p>Asynchronous Bits per Character. Specifies the length of a character, including the parity bit but excluding the start and stop bits. This configuration option only appears when the Single-Port Async/Sync feature is installed and the Async→Sync configuration option is enabled.</p> <p>6 to 10 – Selects the asynchronous bits per character. When Stop Bits is set to 2, 10 will not appear.</p>			

Table 4-4
(6 of 6)
General Configuration Options

Stop Bits: 1			
Next	1	2	Prev
<p>Stop Bits. Specifies the number of stop bits in an asynchronous character. This configuration option only appears when the Single-Port Async/Sync feature is installed and the Async→Sync configuration option is enabled.</p> <p>1 to 2 – Selects the number of stop bits to be used. When the AsyncBit/Char configuration option is set to 10, 2 will not appear.</p>			
Overspeed: 2.3			
Next	1.0	2.3	Prev
<p>Overspeed. Selects the overspeed percentage of the asynchronous-to-synchronous converter. This configuration option only appears when the Single-Port Async/Sync feature is installed and the Async→Sync configuration option is enabled.</p> <p>1.0 – Selects the basic overspeed range. Basic range provides 1.0% overspeed in the DTE asynchronous data rate.</p> <p>2.3 – Selects the overspeed percentage for extended range. Extended range provides 2.3% overspeed in the DTE asynchronous data rate.</p>			
PowerOnTst: Enab			
Next	Enab	Disab	Prev
<p>Power On Test. This configuration option affects the power-up routine and Reset initiated from the Control branch.</p> <p>Enab – Any installed DSU, DBM, and MUX performs all device tests during the initial power-up routine or when selecting Reset from the Control branch.</p> <p>Disab – The power-up routine and Reset will bypass lamp and device tests. Major device errors from communication failures may result in a DDS, DBM, or MUX facility alarm.</p>			

Table 4-5
(1 of 2)
LPDA-2 Configuration Options

LPDA-2: Disab			
Next	Enab	Disab	Prev
<p>LPDA-2 Operation. Allows the DSU to respond to LPDA-2 commands issued from NetView. This configuration option must be enabled at the control DSU and each tributary DSU for SNA Diagnostic Interface operation.</p> <p>When a disruptive test is running at the control DSU, the FEP reports Test in Progress to the NetView operator when the operator issues an LPDA-2 command. If the Test Mode (TM) switch S1-3 or S1-4 is disabled at the control DSU, the control DSU may respond to an LPDA-2 command while running a test initiated by an NMS or front panel. The LPDA-2 command cannot propagate any farther than the control. If the control DSU is performing a Device Test or an End-to-End test, it ignores any NetView-initiated command.</p> <p>Enab – The 3600 Series DSU responds to LPDA-2 commands. When enabled, it is recommended that DSR FrcOn be set to Enab and CTS Cntrl set to RTS.</p> <p>Disab – The 3600 Series DSU does not respond to LPDA-2 commands.</p>			

**Table 4-5
(2 of 2)
LPDA-2 Configuration Options**

LPDA Address: 001			
Next	Chang	Prev	
<p>LPDA Address. Used to set the LPDA-2 address used by NetView. Choices are 1 through 255, in decimal.</p> <p>The following rules apply to control DSU address assignment:</p> <ol style="list-style-type: none"> 1. Link Segment Level 1 (Primary Circuit). The control DSU closest to the NetView host is typically assigned the address 1. 2. Link Segment Level 2 (Extended Circuit). The extended control DSU is typically assigned the address 2. <p>The following rules apply to tributary DSU address assignment:</p> <ol style="list-style-type: none"> 1. Valid Addresses: Tributary DSUs range from 1 to 255. 2. Single DTE: The tributary DSU address is set to the Physical Unit (PU) address of the attached terminal device; required by NetView. 3. Extended Circuit: For configurations having extended circuits, the tributary DSU in the primary circuit is set to 253. Address 253 (FD hex) is the broadcast LPDA-2 address. 			
SNA Backup:Disab			
Next	Enab	Disab	Prev
<p>SNA Backup. Allows the DSU to respond to the NetView commands for establishing and dropping a dial backup command (Call Out and Disconnect). When the SNA Backup configuration option is disabled, backup can still be controlled from a 6700 or 6800 NMS; SNA Backup only needs to be enabled at the control DSU. For extended circuit configurations, the extended circuit link can also be configured to respond to the NetView dial backup command by turning on SNA Backup at the extended control DSU. This feature is not supported in multipoint configurations.</p> <p>Enab – The 3600 Series DSU control responds to the NetView dial backup command.</p> <p>Disab – The 3600 Series DSU control sends a Request Not Supported by DCE message to NetView upon receiving a dial backup command.</p>			
Code 1: 582210			
Next	Chang	Prev	
<p>Code 1. Determines the DSU type and model reported to NetView for the DSU/CSU and Line Status test and Transmit/Receive Test commands. The default values are the type (5822) and model (10) of the IBM 5822, which the standalone 3610 DSU emulates for LPDA-2 monitoring. This value can be changed, but NetView may report an error if the value is not a known IBM model number.</p> <p>NOTE: The default value for the carrier-mounted 3611 DSU is 582218.</p>			
Code 2: 5822101			
Next	Chang	Prev	
<p>Code 2. Determines the DSU type and model reported for the Call Out and the Disconnect commands. This configuration option is normally set to the same value as Code 1. The last digit in the configuration option is used to tell NetView that the DSU is either calling itself a DSU (1) or an APL modem (0) when responding to a NetView Dial Backup command. It is needed because the NetView dial backup commands are meant for APL devices and a particular release of NetView may not expect a DSU device to respond to an APL specific command.</p> <p>NOTE: The default value for the carrier-mounted 3611 DSU is 5822181.</p>			

Data Service Unit Menu **A**

DSU Menu Tree	A-1
Top-Level Menu	A-1
Factory Default Settings	A-1

DSU Menu Tree

The menu tree and DSU configuration options are presented on the next two pages. Configuration options appear or are filtered based on settings in effect and additional installed hardware features.

Top-Level Menu


The DSU operation is presented as menu selections that branch downward from the top-level of the menu tree.

Factory Default Settings

Table A-1 presents all DSU factory default configuration settings. Refer to Chapter 4 for details regarding DSU configuration options.

For additional factory default configuration settings, refer to Document No.:


- 3610-A2-GB48 for TDM, MCMP, and digital bridging
- 3610-A2-GB49 for DBMs

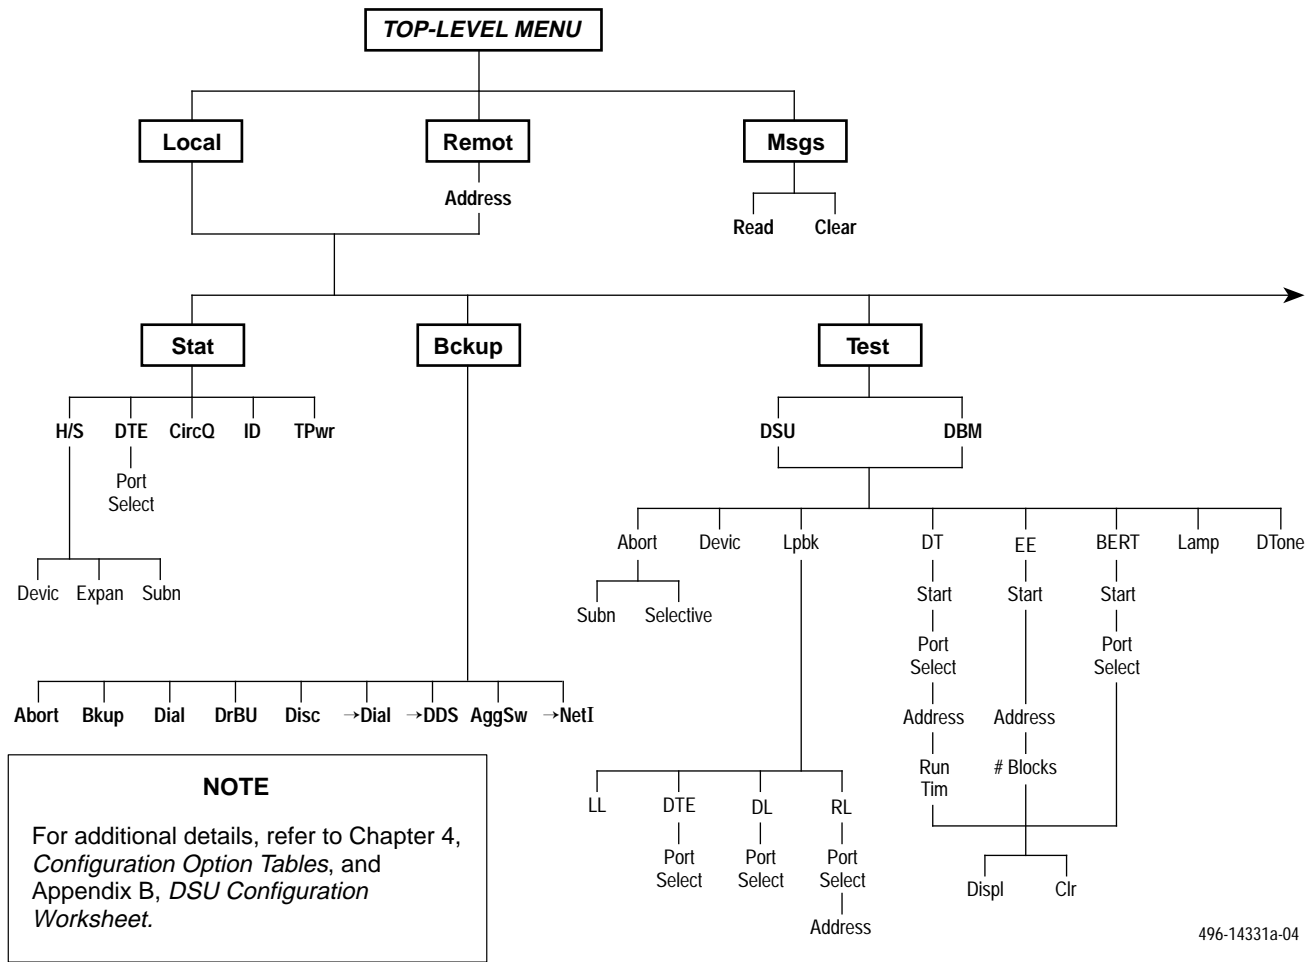

NOTE
 For additional details, refer to Chapter 4, *Configuration Option Tables*, and Appendix B, *DSU Configuration Worksheet*.

496-14331a-04

ABBREVIATIONS		DBM	Dial Backup Module	EBrdg	Extended Bridge	MPTC	Multipoint Control
→ DDS	Switch to DDS Path	DDD	Direct Distance Dialing	Enab	Enable	MPTT	Multipoint Tributary
→ Dial	Switch to DDD Path	DDS	Digital Data Service	Expan	Expanded Health and Service	MUX	Multiplexer
Acq	Acquire	Devic	Device	ExtL	External Leads	NetI	Network Interface
Addr	Address	Diag	Diagnostic	FacB	Factory Bridge	Opts	Configuration Options
ADp	Advanced Diagnostic protocol	Dir	Directory	FacC	Factory Control	PList	Poll List
AggSw	Aggregate Switch	Disab	Disable	FacT	Factory Tributary	PrtSp	Port Speed
Bckup	Backup	Disc	Disconnect	FB1	Fallback 1	Pswrd	Password
BERT	Bit Error Rate Test	Displ	Display	Gen	General	Remot	Remote Mode
CBrdg	Central-Site Bridge	DL	Digital Loopback	H/S	Health and Status	Remt	Remote
Chan	Channel to Port	DPII	DATAPHONE II	LEDs	Light Emitting Diodes	RL	Remote Digital Loopback
ChgMd	Change Mode	DrBU	Drop Backup	LL	Local Loopback	SPID	Service Profile Identifier
CID	Customer Identifier	DSU	Data Service Unit	Lpbk	Loopback	Subn	Subnetwork Health and Status
CircQ	Circuit Quality	DT	Digital Test	LPDA	Link Problem Determination Aid	TDM	Time Division Multiplexer
Clr	Clear	DTE	Data Terminal Equipment	MCMP	Multichannel Multipoint	Term	Async Terminal
Confg	Configure	DTone	Dial Tone	Msgs	Messages	TPwr	Terminal Power
Ctrl	Control	EE	End-to-End Test			TxCtl	Transmitter Control

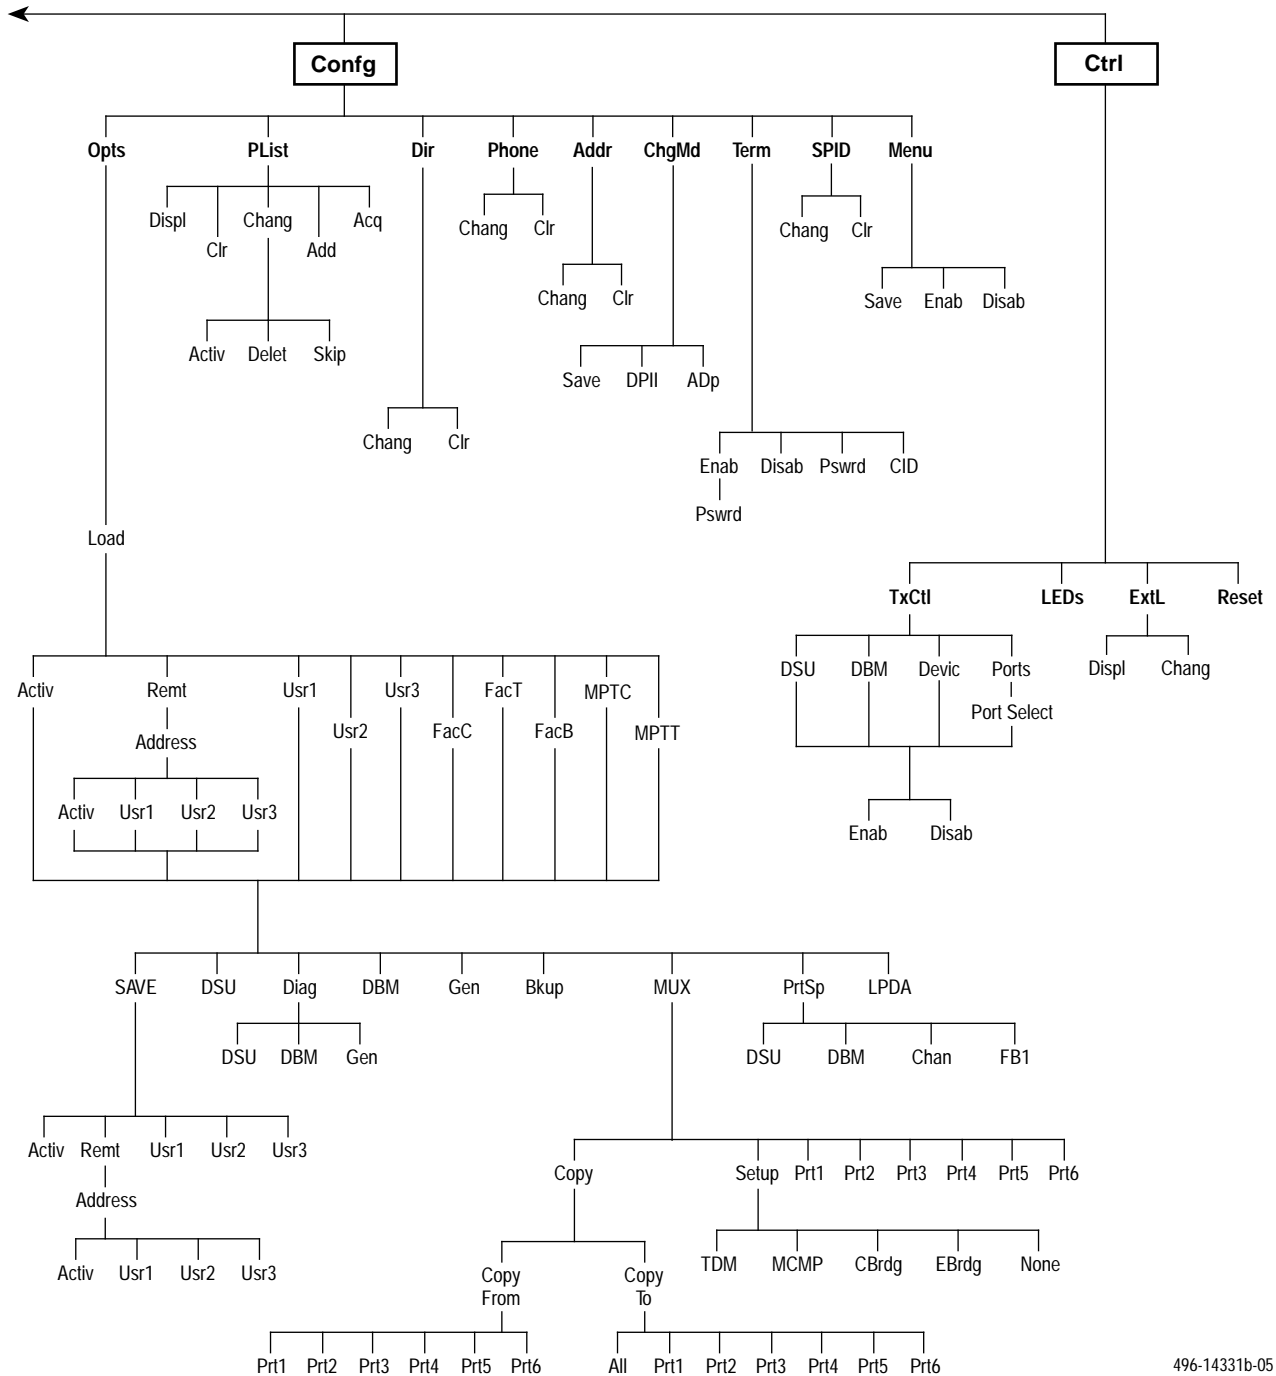

496-14331b-05

**Table A-1
(1 of 2)
Factory Default DSU Configuration Option Settings**

DSU	FacC Control	FacT Tributary	FacB Digital Bridge	MPTC Multipoint Control	MPTT Multipoint Tributary
Rate(Kbps)	Auto*	Auto*	Auto	Auto*	Auto*
PrtSp(Kbps)	9.6 kbps	9.6 kbps	9.6 kbps	9.6 kbps	9.6 kbps
TxClockSource	DDS	DDS	DDS	DDS	DDS
Message Clamp	Enable	Enable	Enable	Enable	Enable
TxElasticStore	Disable	Disable	Disable	Disable	Disable
RxElasticStore	Disable	Disable	Disable	Disable	Disable
19.2 PowerLevel	+6	+6	+6	+6	+6
64KScrambling	Off	Off	Off	Off	Off
64KLatchLoopback	On	On	On	On	On
Network Interface	Disable	Disable	Disable	Disable	Disable
Network Int. Timing	NetI	NetI	NetI	NetI	NetI
V.54 LoopBack	Disable	Disable	Disable	Disable	Disable
Diag DSU	FacC	FacT	FacB	MPTC	MPTT
Diagnostic Type	Disruptive	Disruptive	Disruptive	NonDisruptive	NonDisruptive
2ndChannel(bps)	400	400	400	400	400
Disruptive Type	3600e	3600e	3600e	3600e	3600e
Diag Gen	FacC	FacT	FacB	MPTC	MPTT
Position	Control	Trib	Control	Control	Trib
LinkConfiguration	Point-to-Point**	Point-to-Point**	Multipoint	Multipoint	Multipoint
Response Period	1	1	1	1	1
TributaryTimeOut	0:10	0:10	0:10	0:10	0:10
Diagnostic Connection	CC	CC	CC	CC	CC
Link Delay	0s	0s	0s	0s	0s
Network Delay	0s	0s	0s	0s	0s
Packet Delay	0s	0s	0s	0s	0s
Extend Channel	No	No	No	No	No
Upstream Port	Port 1	Port 1	Port 1	Port 1	Port 1
M-PtSymPort	Disable	Disable	Disable	Enable	Enable
Fast Select	Enable	Enable	Enable	Enable	Enable
LPDA-2	FacC	FacT	FacB	MPTC	MPTT
LPDA-2	Disable	Disable	Disable	Disable	Disable
LPDA Address	1	1	1	1	1
SNA Backup	Disable	Disable	Disable	Disable	Disable
Code 1 Model 3610	582210	582210	582210	582210	582210
Model 3611	582218	582218	582218	582218	582218
Code 2 Model 3610	5822101	5822101	5822101	5822101	5822101
Model 3611	5822181	5822181	5822181	5822181	5822181
* Defaults to 56 kbps when MCMP installed.					
** Defaults to Multipoint when MCMP installed.					

**Table A-1
(2 of 2)
Factory Default DSU Configuration Option Settings**

Gen	FacC Control	FacT Tributary	FacB Digital Bridge	MPTC Multipoint Control	MPTT Multipoint Tributary
DTE Port	EIA232	EIA232	EIA232	EIA232	EIA232
RTS Control	FrcOn	DTE	FrcOn	FrcOn	DTE
CTS Control	Std	Std	Std	Std	Std
AntiStream	Disable	Disable	Disable	Disable	Disable
LSD Lead	Std	Std	Std	Std	Std
CTS Lead	Std	Std	Std	Std	Std
DSR ForceOn	Enable***	Enable***	Enable	Enable***	Enable***
SystemStatus	Enable	Enable	Disable	Enable	Enable
DSR on Test	Enable	Enable	Enable	Enable	Enable
Circuit Assurance	Disable	Disable	Disable	Disable	Disable
Test Pattern	Std	Std	Std	Std	Std
RespondRDL	Disable	Enable	Disable	Disable	Enable
LL by DTE	Disable	Disable	Disable	Disable	Disable
RL by DTE	Disable	Disable	Disable	Disable	Disable
Bilateral Loopback	Disable	Disable	Disable	Disable	Disable
External Leads	Rate	Rate	Rate	Rate	Rate
CCN by ExtLeads	Disable	Disable	Disable	Disable	Disable
DTR Alarm	Disable	Disable	Disable	Disable	Disable
SW Version	Normal	Normal	Normal	Normal	Normal
AnswerExternalBU	Disable	Disable	Disable	Disable	Disable
RLSD in MCMP	No	No	No	No	No
Async→Sync	Disable	Disable	Disable	Disable	Disable
AsyncBit/Character	8	8	8	8	8
Stop Bits	1	1	1	1	1
Overspeed	2.3	2.3	2.3	2.3	2.3
PowerOnTest	Enable	Enable	Enable	Enable	Enable
*** DBM-X defaults to Disable.					

DSU Configuration Worksheet **B**

DSU Configuration Worksheet B-1

DSU Configuration Worksheet

The DSU Configuration Worksheet contains Basic mode DSU configuration options. Included are option sets for the DSU and LPDA-2 options.

The worksheet presents the options sets with configuration options and values. You can use the worksheet for:

- Reference
- Recording changes to options
- Planning changes to default settings

Use this worksheet along with Chapter 4, *Configuration Option Tables*, and Appendix A, *Data Service Unit Menu*.

Configuration Worksheet for Basic DSU Mode

Date: _____

Location: _____

Local Phone Number: () _____

Device: _____

Local Address: _____

DBM Installed

Serial Number: _____

Tributary Network Address: _____

SNA Diagnostic Interface (LPDA-2) Enabled

DSU Configuration Options	Value
Rate(Kbps)	Auto, 64CC, 64L, 56, 38.4, 19.2, 9.6, 4.8, 2.4
PrtSp(Kbps) ●	64, 56, 48, 38.4, 32, 28.8, 24.0, 19.2, 18.8, 18.0, 16.8, 14.4, 12.0, 9.6, 9.2, 8.4, 7.2, 4.8, 4.4, 4.0, 2.4, 2.0, 1.2, Disab
TxCikSource	Int, RXC, Ext, DDS, Prt1, Prt2, Prt3, Prt4, Prt5, Prt6
Msg Clamp ◀	Enab, Disab
TxElasStor	Enab, Disab
RxElasStor ◀	Enab, Disab
19.2 PowrLvl ●●	◀ +6, 0, -10
64KScrambling ◀	On, Off
64KLatchLpbk ◀	On, Off
NetIntf ◀	AggSw, Forc, Disab
Net ITiming ◀	Int, NetI, Prt1, Prt2, Prt3, Prt4, Prt5, Prt6
V.54 Lpbk ◀	Enab, Disab

Diagnostic DSU Configuration Options	Value
Diag Type	NonD, Disr, Mixed, None
2nd Ch(bps) ◀	100, 400, 800, 1200, 1600
Disr Type	2500, 2600, 3600s, 3600e, Br56

Diagnostic General Configuration Options	Value
Position	Cntrl, Trib, G2Trb
LinkConfg	Pt-Pt, M-Pt
Resp Period ◀	1, 2, 10
TribTimOut ◀	sec to min (5 sec to 10 min)
Diag Conn	CC, DC
Link Delay ◀	0s, 1s, 2s, 5s, 10s, 20s, 50s
Network Delay ◀	0s, 1s, 2s, 5s, 10s, 20s, 50s
Packet Delay ◀	0s, 1s, 2s, 5s
Extend Chan ◀	Yes, No
Upstrm Port ◀	Prt1, Prt2, Prt3, Prt4, Prt5, Prt6
M-PtSymPrt ◀	Enab, Disab
Fast Sel ◀	Enab, Disab

General Configuration Options	Value
DTE Port	EIA232, V.35
RTS Cntrl	FrcOn, DTE
CTS Cntrl	Std, =RTS
AntiStream ◀	Disab, 1-100 sec (async term = 0-100)
LSD Lead ◀	Std, Delay, FrcOn
CTS Lead ◀	Std, Delay, FrcOn
DSR FrcOn ◀	Enab, Disab
SystemStat ◀	Enab, Disab
DSR on Tst ◀	Enab, Disab
Circ Assur ◀	Enab, Disab
Tst Pattern ◀	AT&T, Std
RespondRDL ◀	Enab, Disab
LL by DTE ◀	Enab, Disab
RL by DTE ◀	Enab, Disab
Bilat Lpbk ◀	Enab, Disab
Ext Leads ◀	ExtLd, Rate, RPowr
CCN by EL ◀	Enab, Disab
DTR Alarm ◀	Enab, Disab
SW Vers ◀	3.24, 4.43, 6.66, Normal
AnswExtBU ◀	Enab, Disab
Async→Sync	Enab, Disab
AsyncBit/Char	6, 7, 8, 9, 10
Stop Bits	1, 2
Overspeed	1.0, 2.3
PowerOnTst	Enab, Disab

LPDA-2 Configuration Options	Value
LPDA-2	Enab, Disab
LPDA Address	(1 - 256)
SNA Backup	Enab, Disab
Code 1	(6 digits)
Code 2	(7 digits)

ChgMd Configuration Options	Value
Protocol Mode	DPIL, ADp

S1 Hardware Settings	Value
DBM Interface ★★	Permissive (ON), Programmable (OFF)
Frame Ground/Signal Ground	Connected (ON), Disconnected (OFF)
EIA-232 Test Mode	Enable (ON), Disable (OFF)
V.35 Test Mode	Enable (ON), Disable (OFF)

- When the Async→Sync configuration option is enabled using the General branch, the following PrtSp(Kbps) settings do not appear: 32, 24.0, 18.8, 18.0, 9.2, 8.4, 4.4, 4.0, and 2.0 kbps
- 19.2 Power Level defaults to +6 dB when App Module ID displays XLOOP
- ★★ V.32 Analog DBM only
- ◀ Configuration options that do **not** appear when Full mode is disabled using Menu from the Configuration branch.

Async Terminal Operation C

Async Terminal Start-Up	C-1
Password Security	C-2
Enabling the Async Terminal	C-3
Disabling the Async Terminal	C-3
Async Terminal to Front Panel Usage Differences	C-4
Screen Types	C-5
Selection Screens	C-5
Changing External Leads	C-6
Input Screens	C-7
Customer ID (CID)	C-7
Amount of Time Input Fields	C-7
Digital Test	C-8
Display Screens	C-8

Async Terminal Start-Up

You can use an async terminal to manage a standalone Model 3610 DSU. When enabled, the async terminal:

- Supports a VT100-compatible terminal interface
- Is set to VT100 with 9.6 kbps data rate, 8 bits, 1 stop bit, and no parity
- Emulates the front panel

The modem needs to be set for the same speed of 9.6 kbps before enabling the async terminal. If you are accessing the DSU through an external modem, the modem should have V.42bis/MNP error correction enabled.

An async terminal is connected to the Model 3610 DSU with a CC-to-DB25 cable. See the *Async Terminal Connection* section in Chapter 2 for further information.

Upon delivery, the **Term** feature is available, but disabled. **Disab** is the factory-loaded setting. After the physical connection is made, async terminal access is established by enabling the Term configuration option.

The async terminal cannot be used while the DSU is executing power-up diagnostics. Device Reset is displayed on the async terminal screen.

Password Security

Use the Term password to secure entry into front panel functions from the async terminal. Also use this password to enable the async terminal feature and to gain access to the front panel once Term is enabled.

The default Term password configured on the DSU is <null>. Upon establishing async terminal access from the front panel, press the Enter key on the terminal to display the Password Access Menu. Enter the configured password and press the Enter key again.

The Term password can be modified at the async terminal or the front panel. The password can be up to 8 characters.


NOTE

Any alpha character entered in the password field must continue to be entered with the same upper and/or lowercase.

To set up password security at the front panel:

Procedure

1. Go to the **Config** branch. Use the \triangleleft or \triangleright key to display the Term selection. Select **Term**.
2. Select **Pswrd**; the Term Pswrd screen appears.

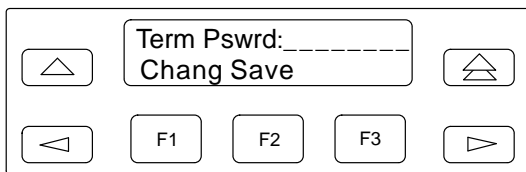


To access the terminal without a password, press **F2** for Save. After the async terminal is enabled, press **Enter** to access the top-level menu.

3. Select **Chang** (change). Enter the password characters by using the F1 (\uparrow) and F2 (\downarrow) keys to select available characters, and the \triangleleft and \triangleright keys to move the cursor to the left or right.

Valid Password Entries

Input	Password Entry	
Alpha	a to z	Upper or lowercase
Numeric	0 to 9	
Characters	#	Pound sign
	-	Dash
	.	Period
	/	Backslash


If you enter an invalid password character, the entry is ignored. If the terminal is set up for sound, the terminal beeps when there is an invalid entry. For this example, site134K is the password.

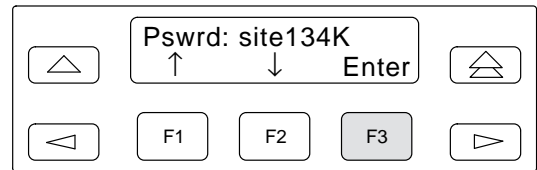

4. Enter the password into the system by pressing the \triangle key; select Save.

The confirmation message **Command Complete** appears after saving the password to memory.

5. If you do not want to save the password entered, select **Undo**.

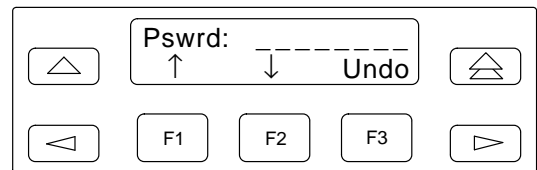


Enabling the Async Terminal

To enable the async terminal:


Procedure

1. Ensure that the terminal is connected physically to the DSU.
2. Go to the **Confg** branch. Use the \triangleleft or \triangleright key to display the Term selection.
3. Select **Term**.
4. Select **Enab**; the following screen appears.

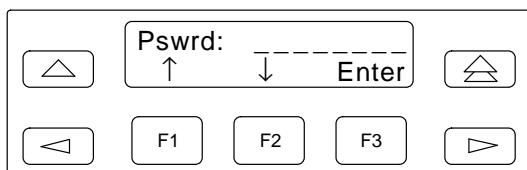


5. Enter the previously configured password and press **F3**. The async terminal is now enabled and the front panel is disabled (locked). The LCD displays **User I/F – Idle** and **FP Locked**.

If you need to see the password, follow the *Password Security* section to access **Chang**. Press **F1** for Change and the password is displayed.

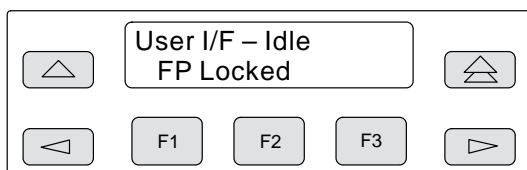

6. From the terminal, press the Enter key and the Password Access Menu screen appears.

If the password is valid, the DSU's top-level menu appears on the async terminal. At the same time, the LCD's message changes to:

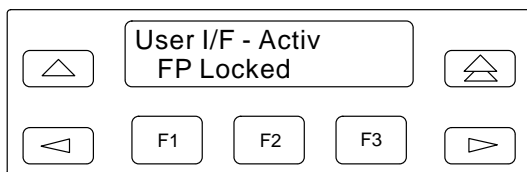


If no key is pressed at the async terminal for 5 minutes, the front panel redispays **User I/F – Idle** and **FP Locked**.

If the password is invalid, the Password Access Menu screen reappears. The async terminal feature is considered activated when the Top-Level Menu screen appears (see the *Selection Screens* section).


Disabling the Async Terminal

To return control of the DSU to the front panel when async terminal (**Term**) is enabled:


1. Press the \triangleleft and \triangleright keys simultaneously for three seconds. The following menu appears:

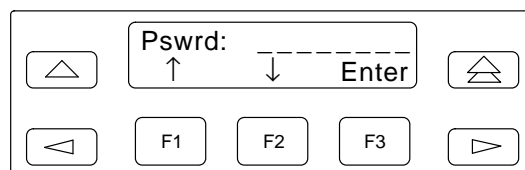

2. Enter the password characters and select **Enter** (F3). If you enter an invalid password, the following screen appears.

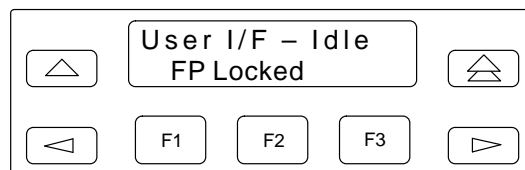


If a valid password is entered, the front panel returns to the top-level menu.

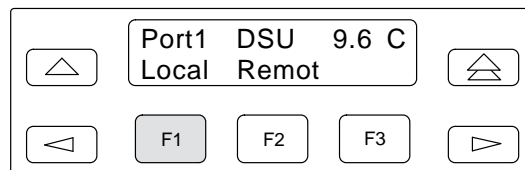

3. Press F1 for Local. Press the \triangleright key until Confg appears; select **Confg**.

- Press the \triangleleft key until Term appears; select **Term**. The following screen appears.

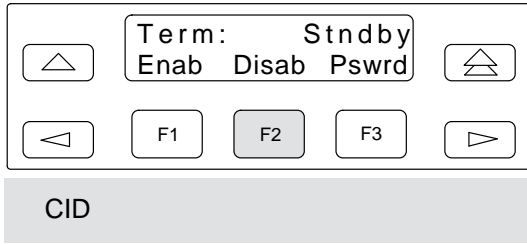

- Select **Disab**.

NOTE
When you disable the async terminal connection, the speed changes from 9.6 kbps to the NMS interface of 1.2 kbps.

Async Terminal to Front Panel Usage Differences

Menu tree sequences and functions are the same for the front panel and the async terminal. There are a few areas with slight differences. From a selection or display screen, pressing the Enter key at any time during a session refreshes the async terminal's screen.

NOTE
When no entries are made for 5 minutes, the async terminal session times out and a blank screen appears. When you press the Enter key, the Password Access Menu screen appears.

Some symbols appearing on an async terminal screen differ from the front panel keypad as shown in the table below. The first two table entries represent front panel function keys. The remainder of the table relates to front panel to async screen displays. For keypad function details, refer to the *Keypad* section of Chapter 3.

Symbol Display Comparison

Front Panel	Async Terminal
↑ (F1)	^
↓ (F2)	∨
↕	*
— (line above text line)	^
__ (line below text line)	∨
↔	*
→	>
←	<

Screen Types

There are three types of async terminal screens:

- Selection screens
- Input screens
- Display screens


Some functions operate the same throughout the async terminal interface. These functions are the following:

- To return to the top-level menu from any selection screen or from anywhere within the menu hierarchy, enter **T** (or **Ctrl-T**). This is the same as pressing the \triangle key from the front panel. The **t** can be upper or lowercase.
- To return to the previous menu, enter **U** (or **Ctrl-U**). This is the same as pressing the \triangle key from the front panel. The **u** can be upper or lowercase.
- To view Health and Status, enter **V** (or **Ctrl-V**). See Chapter 3 for Health and Status access using the front panel. The **v** can be upper or lowercase.
- To end the async terminal session, enter **Ctrl-x**. This logs off the async terminal and returns to the Password Access Menu screen.

Selection Screens

Selection screens display the selections available through the menu tree. After password access, the Top-Level Menu screen appears on the async terminal as shown below. The unit's current configuration is displayed. This example identifies a Control DSU with Port 1 operating at the port speed of 9.6 kbps.


To select from the menu, enter the number or letter that corresponds with your desired selection (e.g., enter **1** to select the Local branch). No carriage return <CR> is required.

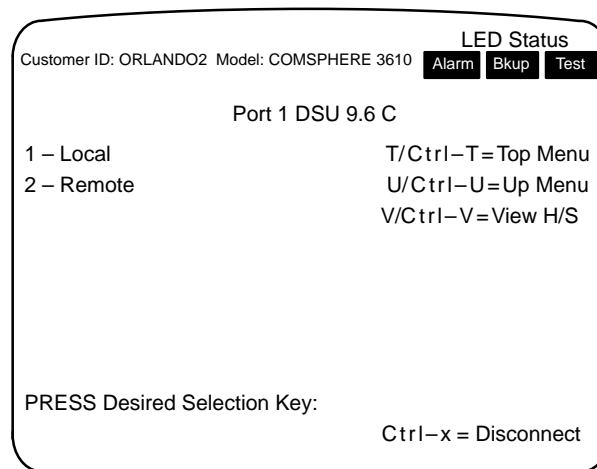

Every configuration option selection screen presents Previous as the first choice. From the front panel, the sequence is Next as the first choice and Prev (Previous) as the last choice.

The Top-Level Menu screen displays LED status for Alarm, Backup, and Test for the active core if a condition exists on the interface. Each status only appears if the front panel LED is lit or blinking.


When you press **1 – Local**, the Second-Level Menu screen appears. The third line on the screen changes to **Local Mode** and the options follow the menu tree shown in Appendix A.

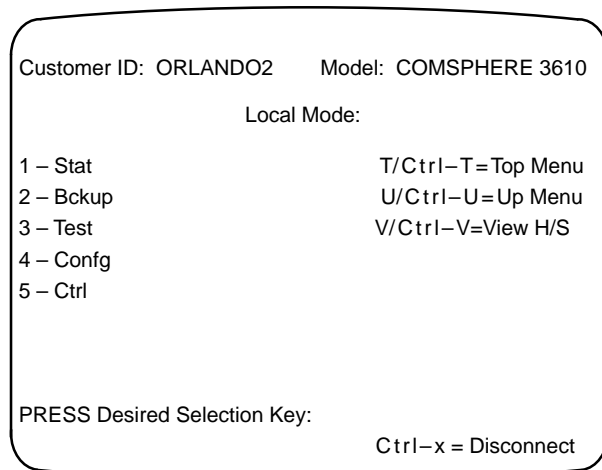

To access the Configure branch:

PRESS: 4 – Config

The Configure Menu Selection screen appears and is comparable to selecting **Config** from the front panel.

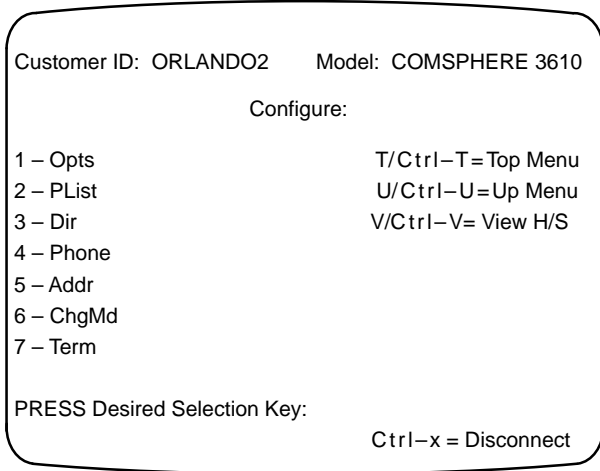

Changing External Leads

The External Leads configuration option must be set before external leads can be displayed or changed. To set external leads, select ExtLd from General Configuration Options (Table 4-4). After External Leads is enabled:

Procedure

1. From the Second-Level Menu screen:


PRESS: 5 – Ctrl

2. The Control Function Menu selection screen appears.

PRESS: 3 – ExtL

3. The External Leads Menu selection screen appears.


PRESS: 2 – Chang

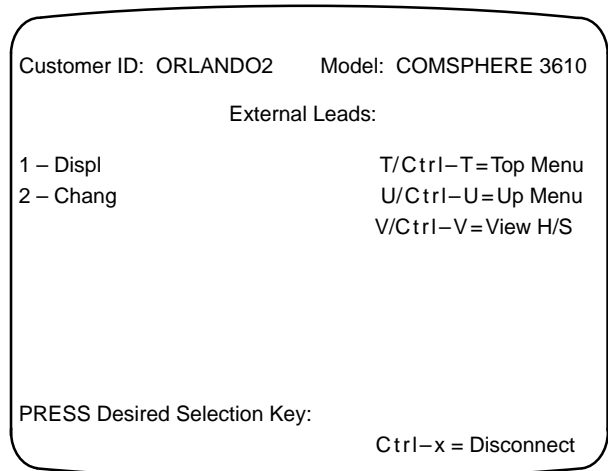

4. The External Leads Input screen appears. The OutA or OutB field will be highlighted. To change the value of the bolded field:

PRESS: 1 – Toggle

The highlighted field will change from high to low or vice versa for on and off. At the front panel, use the $\uparrow\downarrow$ keys instead. To move between the OutA and OutB fields, use the <Tab> key on the keyboard. At the front panel, use the \triangleleft or \triangleright key.

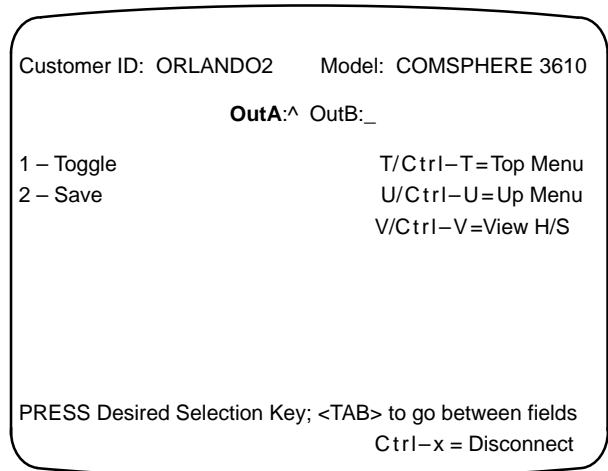

5. If the value of either field is changed:

PRESS: 2 – Save

Input Screens

Input screens require data input followed by the carriage return <CR> key. The options to enter **T** for top menu, **U** for up one menu, and **H** for Health and Status do not appear. They are disabled for input screens; **Ctrl-T**, **Ctrl-U** and **Ctrl-V** continue to be available along with **Ctrl-x**.

Customer ID (CID)

The Customer ID field appears on the second line of every screen.


Procedure

1. From the Configure Menu Selection screen, to enter or change the Customer ID:

PRESS: 6 – Term

2. The Async Terminal Menu screen appears with Term: Enab as the third line. To access the Customer ID:

PRESS: 4 – CID

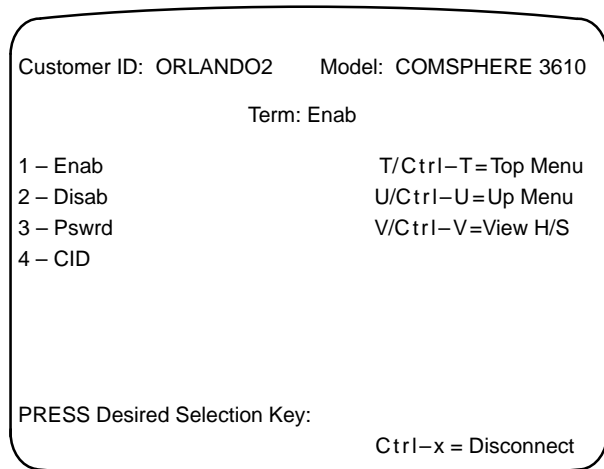

3. From the Customer ID Menu screen, to set up or change the Customer ID:

PRESS: 1 – Chang

The Customer ID input screen appears. The Customer ID can be up to 8 characters.

Valid Customer ID Entries

Input	ID Entry	
Alpha	a to z	Upper or lowercase accepted. Display always uppercase.
Numeric	0 to 9	
Characters	#	Pound sign
	-	Dash
	.	Period
	/	Backslash

If you enter an invalid character, the entry is ignored. If the terminal is set up for sound, the terminal beeps when there is an invalid entry.

4. After entering the Customer ID (CID), press the carriage return <CR>. The Customer ID menu screen reappears.

PRESS: 2 – Save

When the confirmation message **Command Complete** appears after saving the CID to memory, the CID will appear on every screen and you can access other menus.

Amount of Time Input Fields

Three input screens have an amount-of-time prompt for specific user input. The input field must be fully populated. The three screens are:

- Digital Test Run Time
- Configuration Diagnostic Tributary Time Out (TribTimOut)
- Configuration Backup Network Time Out (NtwkTimOut)

Digital Test

Access Digital Test from the second-level menu of the Test branch. Diagnostics (**Diag**) must be set to None from the **Config** branch first. To set the amount of time for the Digital Test (**DT**):

Procedure

1. Select **DSU** from the DSU or DBM selection screen; the DSU Tests selection screen appears.

PRESS: 4 – DT


2. The DSU Digital Test selection screen appears.

PRESS: 1 – Start

3. The Port Number selection screen appears.

PRESS: 2 – Prt1

4. The DSU Digital Test Run Time input screen appears. The hhh:mm:ss must be fully populated as shown below.

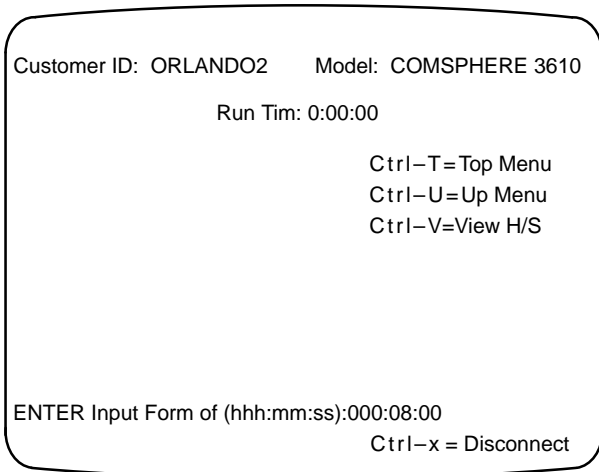

5. Enter the run time for the Digital Test and press the carriage return <CR>. The following message appears on the screen: **Please wait**.
6. The Digital Test completion screen appears.


For further information on Digital Test, refer to the *Digital Test* section of Chapter 3.

Display Screens

Display screens provide configuration information and results of performance and device-specific tests. All information is presented on one async terminal screen.

The Health and Status display shown below can be accessed by:

- Using selection screens and the menu tree path
- Ctrl-V from input screens
- V from all other screens

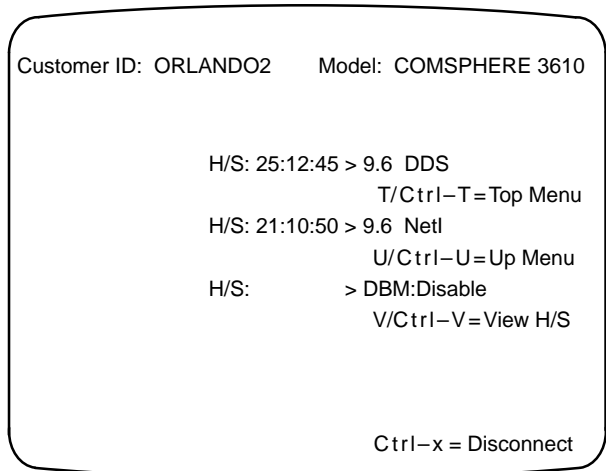

SNA Diagnostics **D**

SNA Diagnostic Interface	D-1
LPDA-2 Addressing	D-2

SNA Diagnostic Interface

The SNA Diagnostic Interface option is compatible with IBM's LPDA-2 (Line Problem Determination Aid, Revision 2) protocol. Management of 3600 Series DSUs by LPDA-2 can be enabled from:

- The front panel
- COMSPHERE 6700 or 6800 Series NMS

This feature is compatible with all other options available to the 3600 Series DSUs: DBM, MCMP, and TDM. However, the SNA Diagnostic Interface option is supported via Port 1 on a MCMP or TDM circuit card.

The 3600 Series DSUs operating with the SNA Diagnostic Interface option emulate IBM 5822 DSUs. The 3600 Series DSUs are data compatible, but they are not diagnostically compatible with IBM 5822 DSUs. A mixture of 3600 Series and IBM 5822 DSUs will not support LPDA-2 diagnostics. The SNA Diagnostic Interface option must be enabled in each control and tributary DSU.

The 3600 Series DSU responds to commands from an NMS or NetView on a first-come, first-served basis. The NetView operator can monitor DSU parameters and line status and can initiate tests from NetView. DSU configuration options cannot be changed; this is a NetView constraint. An operator of a 6700 or 6800 Series NMS can change network configuration options as well as perform tests.

The SNA Diagnostic Interface firmware is installed in the carrier-mounted Model 3611 DSU and the standalone Model 3610 DSU. Either model may be configured as the control of a circuit that is to be managed by the NetView management system.

The LPDA-2 option must be enabled from the Configuration branch (Table 4-5).

LPDA-2 Addressing

The addressing scheme for LPDA-2 establishes a relationship between the link segments (primary circuit and extended circuit) and the remote DSUs populating the circuit. It allows you to target a link segment or a particular control-tributary DSU pair in the circuit for diagnostic testing.


The LPDA-2 address is independent of the DSU network address associated with an NMS or front panel command, although you may choose to assign the same value to each.

The following rules apply to assigning the LPDA-2 address to control DSUs (Figure D-1):

- **Link Segment Level 1.** The control DSU closest to the NetView host is the first level control and assigned the address 1.
- **Link Segment Level 2.** An extended control DSU, is the second level control and assigned the address 2.
- **Valid Addresses.** Valid addresses for control DSUs range from 1 to 255.

The following rules apply to assigning the LPDA-2 address for tributary DSUs:

- **Valid Addresses.** Valid addresses for tributary DSUs range from 1 to 255.
- **Single DTE.** The tributary DSU address is set to the physical unit address of the attached terminal device; this is a NetView constraint.
- **Extended Circuit.** For configurations having extended circuits, the backbone tributary DSU in the primary circuit must be set to 253 and configured as a point-to-point circuit. Address 253 (FD hex) is the broadcast LPDA-2 address.

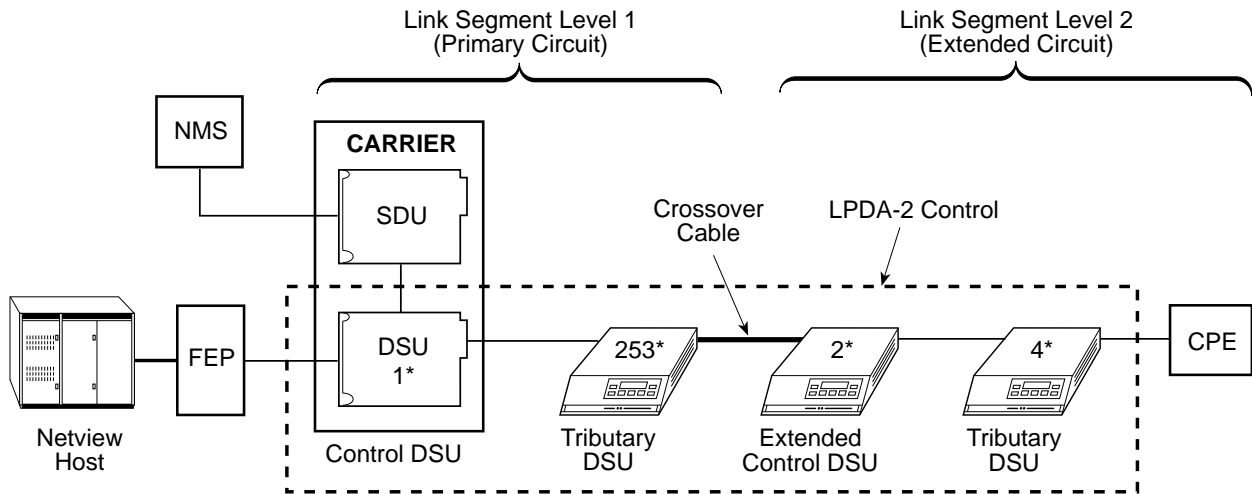

* LPDA-2 Address
 CPE = Customer Provided Equipment

496-12986b-04

Figure D-1. LPDA-2 Addressing Example

Troubleshooting and Front Panel Messages **E**

Troubleshooting	E-1
Messages	E-1
Messages Format	E-2

Troubleshooting

Confirm the installed hardware options. You receive a power-up message for each hardware option type; for example:

- DSU Pass
- MUX Pass (TDM or MCMP)
- DBM Pass

If a fail message appears or a hardware option does not appear, go to the Configuration (Config) branch, load, and save a factory-set configuration (FacC or FacT). Refer to the *Power-Up Routine* section in Chapter 2.

If the DSU is not connected to the network yet, the:

- Red **Alrm** indicator is lit
- LCD displays **DDS F:No Signal**, indicating a facility alarm
- LCD displays Health and Status information

Procedure

If the DSU fails the power-up test:

1. Go to the Test branch.
2. Re-execute the Device Test (Devic). If the test passes, continue operating the DSU.

If the device test fails again, call your sales or service representative.

Messages

This section describes the informational messages that may appear on the DSU's front panel when:

- Using the Async Terminal feature
- Executing a command
- An error condition prevents execution of a command

The messages listed here do not include menus, data entry displays, or specific test results; they do give the condition for the message and any action to perform.


- Table E-1 lists command progress messages.
- Table E-2 identifies and describes front panel messages displayed when async terminal is enabled.
- Table E-3 lists command error messages.
- Table E-4 contains configuration error messages that may appear when the verification routine runs after pressing SAVE.
- Table E-5 lists device health and status messages.
- Table E-6 presents subnetwork health and status messages.

For configuration error messages supporting TDM, MCMP, and digital bridging, refer to Document No. 3610-A2-GB48.

For configuration error, progress, and health and status messages supporting DBMs, refer to Document No. 3610-A2-GB49.

Messages Format

The following screen shows the message format.

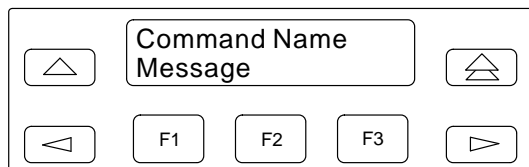

**Table E-1
Command Progress Messages**

Message	Condition
Command Complete	Command successfully completed.
Command Failed	Command was not executed.
Please wait . . .	Command is taking more than 2 seconds to complete.

**Table E-2
Front Panel Messages for
Enabled Async Terminal**

Message	Condition
User I/F – Idle FP Locked	Async terminal is enabled; the front panel is locked.
User I/F – Activ FP Locked	Async terminal is enabled and a session is started.
Term: Stndby	Async terminal is enabled but inactive. Front panel access has been initiated and a valid password entered. The async terminal is in Standby mode. If no key is pressed for 5 minutes, the DSU reverts to User I/F – Idle .

**Table E-3
Command Error Messages**

Message	Condition	Action
Command Failed	Command could not execute and none of the error messages below apply.	If problem cannot be corrected, call your sales or service representative.
Conflict w/Envir	Command conflicts with test in progress, configuration inappropriate for this command, or configuration option settings are not compatible.	<ol style="list-style-type: none"> 1. Check for a test in progress. 2. If there is a test in progress, either wait for the test to finish or abort the test. 3. If there is no test in progress, check configuration option settings.
Inval Selection: No Valid Choices	Invalid menu selection based upon previous selections that caused a menu to display with no selectable options.	Press any key to return to the top-level menu.
No Response	Invalid remote address or remote device not powered, connected to network, or enabled.	Check remote address and status.
Not in Menu	NMS command not in supported set of commands for NMS.	Use a valid NMS command.

**Table E-4
(1 of 2)
Configuration Error Messages**

Message	Condition	Action
AgSw Req SymPrt	Network Interface is set to aggregate switch or forced on for a multipoint network with port speed not equal to DDS speed, and multipoint symmetric mode is disabled.	Symmetric port is required when configuration option NetIntf is set to AggSw or Forc. Enable configuration option M-PtSymPrt.
AgSw&Trib Incmpt	A tributary is incompatible with Network Interface set to aggregate switch.	Disable the configuration option NetIntf if aggregate switching is not used.
AutoRate&TxClk	The DSU data rate is set to Auto and transmit clock source is not set to DDS or RXC.	Change configuration option Rate(Kbps) or TxClkSource.
Br56&SpeedIncmpt	DDS Speed must be 56 kbps for Br56 diagnostics.	Set configuration option Disr Type (disruptive diagnostic type) to Br56, or set PrtSp(Kbps) to 56 kbps.
Circ Assur Inval	Circuit Assurance enabled with either: <ul style="list-style-type: none"> • Nondisruptive diagnostics, or • Port speed not equal to data rate. Circuit assurance is invalid with rate adaption. 	Change configuration option: <ul style="list-style-type: none"> • Diag Type to another option, or • PrtSp(Kbps) to match Rate(Kbps).
CTS Ctrl&DiagTyp	CTS Control is =RTS with Mixed or NonDisruptive diagnostics for a multipoint tributary.	Set configuration option CTS Cntrl to Std (standard) or set configuration option Diag Type to Disr or None.
DSU Agg Exceeded	The aggregate port speeds cannot exceed the DDS data rate.	Set configuration option PrtSp(Kbps) to be equal to or less than the DDS Rate(Kbps).
DSU AsyncUndersp	<ul style="list-style-type: none"> • A port configured for asynchronous operation cannot be the underspeed port. • Bit robbing for NonDisruptive diagnostics is not allowed. 	Use configuration option Async→Sync to set one port to synchronous and underspeed, or lower the asynchronous port speed, or set Diag type to Disr, Mixed, or None.
Elast Not Valid	Receive Elastic Store is not allowed if the port speed does not equal the DDS data rate or if the diagnostic type is set to NonDisruptive.	Set configuration option PrtSp(Kbps) to match the Rate(Kbps). When configuration option RxElasStor is enabled, Diag Type must be set to Disr.
Incmpt Diag mode	Incompatible diagnostic mode: <ul style="list-style-type: none"> • Point-to-point configuration is not compatible with Mixed diagnostics. • Disruptive diagnostic type 2500 or 2600 is not compatible with NonDisruptive diagnostic type. 	<ul style="list-style-type: none"> • For point-to-point, set configuration option Diag Type to Disr, NonD, or None. • Change configuration option Diag Type to Disr, Mixed, or None, or change Disr Type to a setting other than 2500 or 2600.
Invalid Port Spd	Disruptive diagnostic type 2500 or 2600 is being used with rate adaption.	Set the configuration option PrtSp(Kbps) to match the Rate(Kbps) to eliminate rate adaption.
Inval RTS Cntrl	Multipoint tributary device with RTS Control forced on.	Set configuration option RTS Cntrl to DTE.
Inval 2ndChanSpd	DSU port speed with Diagnostic Type set to NonDisruptive. Use configuration option In-Band Secondary Channel Diagnostic Speed when no excess bandwidth is available.	Refer to configuration option 2nd Ch(bps) for valid diagnostic speeds with in-band diagnostics.

**Table E-4
(2 of 2)
Configuration Error Messages**

Message	Condition	Action
LPDA&PrtSPIncmpt	LPDA enabled is incompatible with port 1 speed set to less than 4.8 kbps with: <ul style="list-style-type: none"> • A digital DBM and diagnostic type set to NonDisruptive, or multipoint with symmetric mode disabled and port speed is less than DDS speed, or MCMP. • Disruptive diagnostic type set to Br56 and diagnostic type set to NonDisruptive, or multipoint with symmetric mode disabled and port speed is less than DDS speed, or MCMP. 	<ul style="list-style-type: none"> • Change configuration option PrtSp(Kbps) to 4.8 kbps or higher, or change Diag Type, or enable M-PtSymPrt, or change MUX Funct to not equal MCMP. • Change configuration option Disr Type to Br56, or set PrtSp(Kbps) to the DDS speed, or enable M-PtSymPrt. MCMP is not available with symmetric mode and multipoint.
10BPC & 2 Stops	Two stop bits not available when number of bits per character is set to 10. Need one start bit; the maximum size of asynchronous character is 12 bits (ASPEN chip).	When the configuration option AsyncBit/Char is set to 10, set the configuration option Stop Bits to 1.
V.54&2500 Incmpt	Disruptive diagnostic type set to 2500 is incompatible with V.54 Loopback enabled.	Set configuration option Disr Type for any value but 2500, or disable configuration option V.54 Lpbk.

**Table E-5
(1 of 4)
Device Health and Status Messages**

Message	Condition	Action
Config Corrupt	Configuration is corrupt.	Reset all configuration options from one of the factory-loaded option sets: FacC, FacT, FacB, MPTC, or MPTT. Refer to Table 2-1.
<i>nn.n</i> DDS	Indicates the data rate (<i>nn.n</i>) of the active core (DSU or DBM) when there are no alarms.	Data rate set by configuration option Rate(Kbps) or detected by autorating.
DDS F: <i>alarm</i>	Digital facility alarm; <i>alarm</i> is one of the following network alarms: <ol style="list-style-type: none"> 1. BipIrviol – Excessive Bipolar Violations. Data rates do not match or network trouble. 2. CrossPairs – Crossed Pairs. DDS Receive and Transmit pairs are crossed. 3. CMI Fac Alarm – Control mode idle notification from a remote unit. 4. No Signal – No signal received. Local DSU network problem. 5. No Sync – No synchronization. Rate(Kbps) is set to Auto and the DSU is attempting to detect the data rate. 6. OutofServc – Out-of-Service condition. Rate(Kbps) is set to 56 kbps or less and remote not detected. 7. Rate Confl – Rate conflict. Rate(Kbps) is set to Auto and the total of the port speeds exceeds the aggregate rate. 	<ol style="list-style-type: none"> 1. Verify that the DSU Rate(Kbps) setting matches the network speed. Try temporarily setting the Rate(Kbps) to Auto and the network speed will appear on the H/S display if the rate can be determined. If the network is the problem, contact the service provider. 2. Check the local wiring. 3. The CMI notification is set using the Backup configuration option FAOnCMI. 4. Check DDS line from rear of DSU and from wall for network connection. Contact the service provider. 5. Set the Rate(Kbps) configuration option to the actual data rate. If bipolar violations occur, contact the service provider. 6. Verify that the remote site is in service. 7. The total of port speeds exceeds the data rate. Lower the PrtSp(Kbps).
Dial Tone:Fail	Dial tone test was enabled and test failed.	Try another piece of equipment on the line. Line may be out of order.
DSU:Device Fail	Internal failure in the DSU is detected.	Initiate a Device self-test (Devic) from the Test branch. If message continues, call your sales or service representative.
DSU:Disable	DSU transmitter is disabled.	To enable the DSU, use Control branch's control option TxCtl.

Table E-5
(2 of 4)
Device Health and Status Messages

Message	Condition	Action
DSUTst: <i>test,init</i>	<p>The DSU is running a test, initiated from <i>init</i>. <i>test</i> is one of the following tests:</p> <ul style="list-style-type: none"> BERT — Bit Error Rate Test BiL — Bilateral Loopback Dev — Device Test DL — Digital Loopback DT — Digital Test DTE — DTE Loopback E-E — End-to-End Test Lamp — Lamp Test LL — Local Loopback NetL — Network Loopback RL — Remote Digital Loopback TM — Test Mode <p><i>init</i> is one of the following initiators:</p> <ul style="list-style-type: none"> DCP — Diagnostic Control Panel (front panel) DTE — Data Terminal Equipment LPDA — NetView-initiated test NMS — Network Management System Ntwk — Network Remt — Remote DSU 	<p>Refer to the <i>Test Branch</i> section of Chapter 3 for details regarding each test. Many tests require no action.</p> <p>NetL (network loopback) test may appear if the service provider is testing the line; they should notify you of the testing. Could also be a problem with crossed pairs needing repair.</p>
<i>nn.n</i> EBrdg	Indicates the Bridge Rate (<i>nn.n</i>) of the active core (DSU or DBM) when there are no alarms.	The bridge rate is set with the MUX Setup configuration option.
External Alarm A	The DSU detects a positive voltage on Pin 23.	Refer to configuration option Ext Leads.
External Alarm B	The DSU detects a positive voltage on Pin 19.	Refer to configuration option Ext Leads.
Invalid Address	<p>A DSU was powered up with an invalid address. Invalid addresses are:</p> <ul style="list-style-type: none"> 0 — Reserved for the SDU 192 — Reserved for the broadcast address 191 — Invalid for a DSU with a DBM because of the reserved 192 broadcast address 255 — Invalid for a DSU with a DBM >80 — Addresses greater than 80 are not valid for DP11 protocol 	Change the configuration option Network Address.
MCMPCommunicFail	No reply from MCMP circuit card. The DSU periodically polls the MCMP circuit card for health and status. When the DSU does not receive a response, this message appears.	The problem could be temporary while retraining is in progress. If message continues, initiate a Device self-test (Devic) from the Test branch. If failure continues, call your sales or service representative.

**Table E-5
(3 of 4)
Device Health and Status Messages**

Message	Condition	Action
MUX CommunicFail	No reply from TDM circuit card. The DSU periodically polls the TDM circuit card for health and status. When the DSU does not receive a response, this message appears.	The problem could be temporary while retraining is in progress. If message continues, initiate a Device self-test (Devic) from the Test branch. If failure continues, call your sales or service representative.
MUX Device Fail	Internal failure of TDM or MCMP is detected.	Initiate a Device self-test (Devic) from the Test branch. If failure continues, call your sales or service representative.
<i>nn.n</i> NetI	Network Interface speed when configuration option NetInI is set to Forc.	Informational message.
NetI F:No Signal	No signal from Network Interface alternate port.	The configuration option NetInI is set to Forc for aggregate switching.
OutofFrameThresh	For DSUs operating on a single port (rate adaption or nondisruptive), TDM, or MCMP, the local DSU has detected a continuous MUX Out-of-Frame condition. If the alarm continues on a point-to-point circuit and the local DSU is configured for automatic backup, the local DSU disruptively tests the DDS circuit. If the test fails, the DSU issues a DDS Facility alarm and initiates dial backup.	The alarm clears when a local DSU synchronizes with a remote DSU. Both DSUs need to have the same port speeds.
<i>PnnTst: test,init</i>	The DSU is running a test on port <i>nn</i> (01—06), initiated from <i>init</i> . <i>test</i> is one of the following tests: BERT — Bit Error Rate Test DL — Digital Loopback DT — Digital Test DTE — DTE Loopback RL — Remote Digital Loopback <i>init</i> is one of the following initiators: DCP — Diagnostic Control Panel (front panel) DTE — Data Terminal Equipment LPDA — NetView-initiated test NMS — Network Management System Remt — Remote DSU TM — Test Mode	Refer to the <i>Test Branch</i> section of Chapter 3 for details regarding each test. Many tests require no action.
Port <i>nnn</i> DTR Alarm	The DTR lead at port <i>nnn</i> (01—06, All) has been Off for more than 30 seconds.	Check DSU connection and DTE power connection.

Table E-5
(4 of 4)
Device Health and Status Messages

Message	Condition	Action
Prtnnn Disable	Transmitter at port <i>nnn</i> (01—06, All) is disabled.	Use the Control branch's control option TxCtl to enable the port.
Prtnnn Stream Term	Streaming terminal. DTE at port <i>nnn</i> (01—06, All) has its RTS lead turned ON longer than the predefined time.	Refer to configuration option AntiStream. Verify DTE operation.
Redun Fan Alarm	Indicates a problem with the fan on the -48 Vdc Central Office Power Unit.	Check NMS adapter cable connection to -48 Vdc power supply cable connections. If okay, call your sales or service representative.
Redun Pwr Alarm	Indicates a problem with the power on the -48 Vdc Central Office Power Unit.	Check NMS adapter cable connection to -48 Vdc power supply cable connections. If okay, call your sales or service representative.
Subnetwrk Alarm	A major alarm was set Off by one of the devices in your subnetwork.	Check the Subnetwork Health and Status report and Table E-6.
Sub-normal Speed	The DBM is operating at a dial backup speed less than the DSU and the DDS network speed.	Set the configuration option DBM Rate(Kbps) to the DDS network data rate.
Subtree Truncat	Downstream health and status information has been truncated because of an overflow of the system limits.	Clear any alarms to decrease the amount of information reported.

**Table E-6
Subnetwork Health and Status Messages**

Message	Condition	Action
Devic	Device Failure. One of the following major alarms is in effect: <ul style="list-style-type: none"> • Configuration Corrupt • DSU Device Failure • MUX Device Failure 	See Table E-5 for conditions and action.
DialBU	Dial BackUp Mode.	Indicates DBM is active.
DialCN	Dial Connect.	Indicates DBM is in Standby mode.
DialTn	Dial Tone Test failure.	Check the DBM facility.
Disab	Indicates DSU, DBM, or Port <i>nn</i> is disabled (<i>nn</i> = 1–6).	Check status of address.
DTR	DTE alarm.	Data Terminal Ready lead is Off.
ExtLd	External lead alarm A or B.	See External Alarm A message in Table E-5.
Facil	DDS facility alarm. Indicates a network facility alarm.	When facility working, remote status address is available.
MAJOR	Indicates a major alarm from a DATAPHONE II device.	Verify DP11 connection.
MUX	MUX (TDM or MCMP) failure.	See MCMP or MUX CommunicFail message in Table E-5.
NoResp	No response. The active poll list member did not respond.	Probable cause: facility problem, remote DSU problem, or poll list incorrect.
Normal	Active poll list member reports no alarm or status.	Status message.
RPower	Redundant power supply alarm.	See Redun Pwr Alarm message in Table E-5.
Stndby	Dial standby.	Status message.
Stream	Streaming terminal.	See Prt nn Stream Term message in Table E-5.
SubSpd	Subnormal operating speed.	See Sub-normal Speed message in Table E-5.
Test	Test mode. DSU test, DBM test, or Port <i>nn</i> test (<i>nn</i> = 1–6).	Status message.
Thresh	Threshold exceeded.	See OutofFrame Thresh message in Table E-5.
TribTm	Tributary time-out.	Multipoint configuration with no response.
Trunc	Subtree truncation.	See Subtree Truncat message in Table E-5.

Technical Specifications **F**

Technical Specifications F-1

Technical Specifications

The 3600 Series DSUs can be used as a Local Area Data Set (LADS) to provide a point-to-point link between two devices. The network facility is a direct 4-wire crossover connection without using a digital service.

Tables F-1 through F-6 list the technical specifications for the following:

- LADS maximum connection distance requirements (Tables F-1 and F-2)
- 3600 Series DSU (Tables F-3 and F-4)
- 3600 Hubbing Device for use with a Model 3610 DSU only (Table F-5)
- Async Terminal for use with a Model 3610 DSU only (Table F-6)

Table F-1
LADS Connection Distances for
Models 3610-A3-xxx and 3611-A3-xxx or Lower

Data Rate (kbps)	Wire Diameter (AWG)			
	19 Gauge (.0359" or .9122 mm)	22 Gauge (.0253" or .643 mm)	24 Gauge (.0201" or .511 mm)	26 Gauge (.0159" or .404 mm)
2.4	20.0 mi (32.2 km)	16.6 mi (26.7 km)	12.7 mi (20.5 km)	9.4 mi (15.1 km)
4.8	19.4 mi (31.2 km)	12.7 mi (20.5 km)	9.6 mi (15.4 km)	7.1 mi (11.5 km)
9.6	15.2 mi (24.5 km)	9.7 mi (15.6 km)	7.3 mi (11.7 km)	5.6 mi (9.0 km)
19.2*	11.8 mi (19.0 km)	7.5 mi (12.1 km)	5.7 mi (9.2 km)	4.2 mi (6.8 km)
38.4	11.2 mi (18.0 km)	6.5 mi (10.5 km)	4.6 mi (7.4 km)	3.2 mi (5.1 km)
56	9.2 mi (14.8 km)	5.4 mi (8.7 km)	3.8 mi (6.2 km)	2.8 mi (4.5 km)
64	9.2 mi (14.8 km)	5.4 mi (8.7 km)	3.8 mi (6.2 km)	2.8 mi (4.5 km)

* Power level is -10 dBm.

Table F-2
LADS Connection Distances for Models 3610-A4-xxx and 3611-B4-xxx

Data Rate (kbps)	Wire Diameter (AWG)			
	19 Gauge (.0359" or .9122 mm)	22 Gauge (.0253" or .643 mm)	24 Gauge (.0201" or .511 mm)	26 Gauge (.0159" or .404 mm)
2.4	20.0 mi (32.2 km)	16.6 mi (26.7 km)	12.7 mi (20.5 km)	9.4 mi (15.1 km)
4.8	19.4 mi (31.2 km)	12.7 mi (20.5 km)	9.6 mi (15.4 km)	7.1 mi (11.5 km)
9.6	15.23 mi (24.51 km)	10.18 mi (16.39 km)	7.32mi (11.77 km)	5.87 mi (9.45 km)
19.2	12.91 mi (20.78 km)	8.23 mi (13.25 km)	5.89 mi (9.49 km)	4.69 mi (7.55 km)
38.4	11.2 mi (18.0 km)	6.55 mi (10.55 km)	4.79 mi (7.71 km)	3.53mi (5.68 km)
56	10.84 mi (17.45 km)	6.4 mi (10.3 km)	4.50 mi (7.24 km)	3.34 mi (5.37 km)
64	10.69 mi (17.2 km)	6.06 mi (9.76 km)	4.47 mi (7.2 km)	3.20 mi (5.15 km)

Table F-3
(1 of 3)
General COMSPHERE 3600 Series Technical Specifications

Specifications	Criteria
AC POWER FUSE Model 3610/3611 DSU 3000 Series Carrier	No accessible fuse 4-amp fuse for +115 Vac; Part number 190-0037-0431 (two spares supplied with carrier)
AC POWER REQUIREMENTS 3610 DSU 3610 DSU with DBM 3611 DSU 3611 DSU with DBM 3000 Series Carrier (16 DSUs with DBMs plus SDU and fan module)	24 Vac (CT), 60 Hz \pm 3 (0.093 amp, 8.0 watts at 115 Vac) 24 Vac (CT), 60 Hz \pm 3 (0.114 amp, 9.5 watts at 115 Vac) 24 Vac (CT), 60 Hz \pm 3 (0.029 amp, 4.5 watts at 115 Vac) 24 Vac (CT), 60 Hz \pm 3 (0.080 amp, 8.0 watts at 115 Vac) 90—132 Vac, 60 Hz \pm 3 (1.930 amp, 165 watts at 115 Vac)

**Table F-3
(2 of 3)
General COMSPHERE 3600 Series Technical Specifications**

Specifications	Criteria
<p>APPROVALS FCC Part 15 FCC Part 68 UL 3610 DSU 3611 DSU, 3000 Series Carrier CSA Safety 3610 DSU 3611 DSU, 3000 Series Carrier Emissions Bell Canada</p>	<p>Class A digital device AW292J-61661-DD-N</p> <p>Listed UL 1950 Recognized Component UL 1950</p> <p>Certified CSA 22.2, No. 220-M1986 Certified Component CSA 22.2, No. 950-M89</p> <p>Class A digital apparatus</p> <p>“DCTE Specifications,” July 1989, Issue 1</p>
<p>DTE INTERFACE 3610 and Non-modular 3611 DSUs 25-pin D-subminiature connector 34-pin connector Modular 3611 DSU 25-Pin V.35 Interface Uses a Rear Connector Plate with two 25-pin D-subminiature connectors.</p>	<p>EIA-232/ ITU V.24 (ISO 2110) ITU V.35 (ISO 2593)</p> <p>EIA-232/ ITU V.24 (ISO 2110) ITU V.35 (ISO 2593)</p> <p>A modular DSU V.35 interconnect cable is required to use the V.35 connector. The cable provides an interface between the DSU's 25-pin D-type connector and the DTE cable's V.35 connector.</p>
<p>ENVIRONMENT Operating Temperature Storage Temperature Relative Humidity Shock and Vibration</p>	<p>32° to 122° F (0° to 50° C) -4° to 158° F (-20° to 70° C) 5%—95% (noncondensing) Withstands normal shipping and handling</p>
<p>HEAT DISSIPATION (MAX.) AT 115 VAC 3610 DSU 3610 DSU with DBM 3611 DSU 3611 DSU with DBM 3000 Series Carrier (16 DSUs with DBMs plus SDU and fan module)</p>	<p>22.16 Btu/hr. 29.00 Btu/hr. 22.16 Btu/hr. 27.30 Btu/hr. 563.00 Btu/hr.</p>
<p>NMS COMPATIBILITY</p>	<p>DATAPHONE II System Controller, Diagnostic Console, or Network Controller COMSPHERE 6700 Series NMS, Release 4.0 or greater for full support COMSPHERE 6800 Series NMS, Release 4.1.5 or greater for full support NetView, Version 1, Release 3 or greater</p>
<p>ASYNCR TERMINAL</p>	<p>ANSI X3.64/VT100 compatibility Data Rate: 9.6 kbps 8 bits per character, 1 stop bit, no parity</p>

**Table F-3
(3 of 3)
General COMSPHERE 3600 Series Technical Specifications**

Specifications	Criteria
DATA RATES	<p>Primary channel rates: 64, 56, 38.4, 19.2, 9.6, 4.8, and 2.4 kbps</p> <p>Async/Sync rates: 64, 56, 48, 38.4, 32, 19.2, 18.8, 18.0, 16.8, 14.4, 12.0, 9.6, 9.2, 7.2, 4.8, 4.4, 2.4, 2.0, and 1.2 kbps</p> <p>Other asynchronous rates (e.g., 150, 300, 600, and 1800 bps) can be obtained through oversampling</p> <p>Asynchronous rates support ITU V.14 extended rate range at 8 to 12 bits per character, including the start and stop bit (+2.3, -2.5 percent overspeed/underspeed compensation at 10 bits per character)</p>
PHYSICAL DIMENSIONS 3610 DSU Height Width Depth 3611 DSU (modular or non-modular) Height Width (thickness) Depth Rear Connector Plate (2-port) Height Width Depth (25-Pin V.35 Interface) 3000 Series Carrier Height Width Depth	<p>2.13 inches (5.4 cm) 7.63 inches (19.4 cm) 12.13 inches (30.8 cm)</p> <p>7.13 inches (18.1 cm) 0.90 inch (2.3 cm) 13.40 inches (34.0 cm)</p> <p>5.24 inches (13.3 cm) 0.88 inch (2.2 cm) 1.00 inch (2.5 cm)</p> <p>10.50 inches (26.7 cm) 19.00 inches (48.3 cm) 14.00 inches (35.6 cm)</p>
WEIGHT 3610 DSU 3610 DSU with DBM 3611 DSU (modular) 3611 DSU (modular) with DBM 3611 DSU (non-modular) 3611 DSU (non-modular) with DBM Rear Connector Plate (2-port) 25-Pin EIA-232/25-Pin V.35 3000 Series Carrier (16 DSUs with DBMs plus SDU and fan module)	<p>3.70 pounds (1.68 kg) 4.10 pounds (1.86 kg) 0.91 pound (0.41 kg) 1.34 pounds (0.61 kg) 1.05 pounds (0.48 kg) 1.50 pounds (0.68 kg) 0.13 pound (0.06 kg) 70.00 pounds (31.8 kg)</p>

**Table F-4
DSU Technical Specifications**

Specifications	Criteria
APPLICATION	Full- or half-duplex data transmission via point-to-point or multipoint DDS network, or local area data channel
COMMUNICATION LINE	Leased or private 4-wire DDS line
DATA RATES Digital Services (DDS, ASDS) LADS Clear Channel ¹ When timing is external (provided by the DTE), the DTE's clock must be within these ranges.	2.4, 4.8, 9.6, 19.2, 38.4, 56, and 64CC kbps 2.4, 4.8, 9.6, 19.2, 38.4, 56, and 64 kbps 64 kbps (on a 72 kbps circuit) with the 64KScrambling configuration option enabled 64CC kbps ± 11 bps 56 kbps ± 9 bps 38.4 kbps ± 4 bps 19.2 kbps ± 5 bps 9.6 kbps ± 1 bps 4.8 kbps ± 0 bps 2.4 kbps ± 0 bps
DDS NETWORK INTERFACE 3610 DSU 3611 DSU	8-pin modular jack, USOC RJ48S (One or two) 50-pin connector, USOC RJ48T
DIAGNOSTIC INTERFACE 3610 DSU 3611 DSU	Requires 3600 Series Hubbing Device which provides two 8-pin modular jacks Via the SDU in the COMSPHERE 3000 Series Carrier or DC-OUT via NMS adapter cable (for a tributary in the carrier)
NETWORK COMPATIBILITY ANSI T1.410 – 1992 and AT&T Technical Reference 62310 – 1993 Integrated Network Corporation Compatibility Bulletin CB-INC-101 and Pacific Bell publications PUB L-780035-PB/NB and PUB L-780036-PB/NB	2.4, 4.8, 9.6, 19.2, 38.4, 56, and 64 kbps meeting the desired loss loop 19.2 kbps loop at levels of +6 dBm
DSU COMPATIBILITY Primary Channel Diagnostic Channel Point-to-Point or Multipoint: Point-to-Point Only:	All Paradyne digital products and other products that are compliant with AT&T Technical Reference 62310 – 1987 3600 Series — enhanced 3600 diagnostics (nondisruptive or disruptive) 3500 Series — 2600 diagnostics 2600 Series — 2600 diagnostics 2500 Series — 2500 loopbacks
¹ If a 3600 Series DSU is not used on both ends of the circuit or if the scrambler configuration option (64KScrambling) is not enabled, the customer's DTE must provide for the primary data's ones (1s) density.	

**Table F-5
3600 Hubbing Device Technical Specifications**

Specifications	Criteria
APPLICATION	Diagnostic interfaces for the Model 3610 DSU
NETWORK MANAGEMENT INTERFACES NMS	Two 8-pin modular jacks. The 3600 Hubbing Device has a 6-inch cable that terminates in a 4-pin modular plug.
PHYSICAL DIMENSIONS Height Width (thickness) Depth	1.9 inches (4.8 cm) 0.9 inches (2.3 cm) 3.4 inches (8.6 cm)
WEIGHT	0.13 pounds (0.06 kg)

**Table F-6
Async Terminal Technical Specifications**

Specifications	Criteria
APPLICATION	ANSI X3.64/VT100 compatibility Data Rate: 9.6 kbps 8 bits per character, 1 stop bit, no parity
ASYNC TERMINAL CONNECTION CC-to-DB25 cable	One 4-pin modular jack to 25-pin D-subminiature EIA-232 connector.

Firmware Version Control Information **G**

Firmware Version Control G-1

Firmware Version Control

The DSU firmware version is reported to an NMS. To ensure NMS compatibility when the control and tributary have different firmware versions, the firmware version can be modified.

To determine the current firmware version, use the Health and Status Identity (**ID**) display. Refer to the *Identity* section of Chapter 3 and Table 3-2. When the control DSU firmware version is less than 7.24 but greater than 1.10, changes are required to the DSU tributary firmware version.

To modify the control or tributary DSU firmware version, use the SW Vers configuration option in General Configuration Options, Table 4-4. Refer to the Firmware Version Control, Table G-1, for software versions.

**Table G-1
Firmware Version Control**

If Control DSU is:		If Tributary DSU is:		Set Tributary DSU's SW Ver. to:
Release	FW Version	Release	FW Version	
2	3.xx	3	4.xx	3.20
2	3.xx	3.1	5.xx	3.21
2	3.xx	3.2 or 3.3	6.xx	3.22
2	3.xx	3.4	7.xx	3.23
2	3.xx	3.5	8.xx	3.24
3	4.xx	3.1	5.xx	4.40
3	4.xx	3.2 or 3.3	6.xx	4.41
3	4.xx	3.4	7.xx	4.42
3	4.xx	3.5	8.xx	4.43
3.1	5.xx	3.1	5.xx	Normal
3.1	5.xx	3.2 or 3.3	6.xx	Normal
3.1	5.xx	3.4	7.xx	6.65
3.1	5.xx	3.5	8.xx	6.66
3.2	6.2x	3.2	6.2x	Normal
3.2	6.2x	3.3	6.33–6.99	Normal
3.2	6.2x	3.4	7.xx	6.65
3.2	6.2x	3.5	8.xx	6.66
3.3	6.33–6.99	3.3	6.33–6.99	Normal
3.3	6.33–6.99	3.4	7.xx	6.65
3.3	6.33–6.99	3.5	8.xx	6.66
3.4	7.xx	3.4	7.xx	Normal
3.4	7.xx	3.5	8.xx	Normal
3.5	8.xx	3.5	8.xx	Normal

Glossary

ac	Alternating current.
ACCUNET	See ASDS.
active core	The core that is transmitting data. For example, the DBM is the active core when the unit is in Backup mode. In the case of a DBM-D, DBM-I, DBM-S, or DBM-V, the primary core and the active core are the same.
ADp	Advanced Diagnostic protocol. An enhanced diagnostic communication protocol used with the 6700 and 6800 Series NMS and with certain front panel diagnostic functions.
aggregate rate	The sum of the DTE rates.
alarm	An abnormal condition affecting modems, multiplexers, and data services units, usually requiring attention. Major alarms indicate a service disruption; minor alarms are less severe, but are indications of a developing problem.
alternate port	The unused Port 1, either the V.35 or the EIA-232 interface, that provides an aggregate data path for an external dial backup unit.
analog signal	A type of signal composed of continuously variable values, used to transmit voice or data over telephone lines.
ANSI	American National Standards Institute. Sets standards for the US computer industry. ANSI participates in defining network protocol standards.
apl	Analog Private Line. Dedicated private line; not available for dialing.
ASDS	ACCUNET Spectrum of Digital Services. An AT&T network service offering the alternatives of fractional T1, 9.6, 56 or 64 kbps (clear channel) digital, and analog access to a digital core network.
ASPEN	Asynchronous-to-Synchronous with Prism Enhancements chip. This is a chip upgrade that includes an async/sync converter to support the Single-Port Async/Sync feature, which also supports the same functionality as earlier versions of the 3600 Series DSU.
async terminal	This feature allows a device to be controlled from an async (asynchronous) terminal like an ASCII terminal. When enabled, the async terminal menus emulate the front panel without being limited by the 2-line, 16-character liquid-crystal display (LCD), which can accommodate only three selections per screen.
asynchronous transmission	A data transmission that is synchronized by a transmission start bit at the beginning of a character (five to eight bits) and one or more stop bits at the end.

auto backup	A function of the dial backup module (DBM) or carrier-mounted dial backup unit, whereby the DSU activates the DBM to reestablish a line automatically when a facility alarm is detected from the DDS network.
auto restoral	A function of the DBM whereby the DSU automatically returns to the DDS network when service is restored over the private line. On point-to-point circuits, the DSU test the integrity of the DDS network before switching data back to the private line.
backup	See auto backup.
backbone network	The main circuit that carries the data before it is split into extended circuits going to their final destination.
bandwidth	The range of electrical frequencies a device is capable of handling.
basic mode	A mode of operation in which the single power module in the Central Office (CO) Power Unit supplies power to the entire carrier.
B-channel	Bearer Channel. ISDN 64 kbps bearer channel used for voice, circuit, or packet switched data.
BERT	Bit Error Rate Test. A test used to analyze the network circuit. Both the control and tributary devices must be connected to the network.
bis	See V.32bis.
bit robbing	Used with nondisruptive diagnostics when the data rate and port speed(s) are not equal.
bps	Bits per second. Indicates the speed at which data is transmitted between devices.
BRI	Basic Rate Interface. ISDN interface consisting of B-channel for information transfer and D-channel for control and signaling.
bridge mode	All ports are assigned to one digital-sharing group.
broadcast	A method of transmission. The simultaneous transmission to two or more communicating devices.
callback directory pointer	The directory entry in an originating DBM consists of the answering DBM's telephone number, a delimiting character, and a callback pointer. The pointer identifies the originating DBM's telephone number in the answering DBM's Backup Directory.
capacitance	The property of an electric nonconductor that permits the storage of energy as a result of electric displacement.
carrier	The rack mounting that contains 17 slots: 1 SDU control slot and 16 device slots.
carrier-mounted	A Model 3611 DSU that is designed for installation in a COMSPHERE 3000 Series Carrier and used at central-site operations. Up to 16 DSUs can be installed per carrier, with 6 carriers per cabinet.
CBrdg	Central-site digital bridge.
CC	Control Channel. The diagnostic interface between an NMS and the SDU.
CCITT	Consultative Committee on International Telegraphy and Telephony. An advisory committee established by the United Nations to recommend communications standards and policies. See ITU-TSS.
channel	A bidirectional DS0, voice, or data path, for electrical transmission between two or more points. Also called a circuit, link, path, or facility.

cluster controller	A device that controls communications processing for multiple terminals.
CMI	Control Mode Idle. A control signal sent over the DDS line to indicate that the other end has RTS off and no data to send.
COMSPHERE	A Paradyne product family and a registered trademark.
configuration option	Device software that sets specific operating parameters for the device. Sometimes referred to as straps.
connector module	An interface that is shipped with a modular DSU with TDM or MCMP and installed onto the rear of the COMSPHERE 3000 Series Carrier. The module contains six EIA-232 connectors, one for each port. The module also has a 26-pin high-density D-type connector located at the top to the module for V.35 operation on Port 1 or an aggregate data path.
control	A device that is, for diagnostic purposes, at the logical head of a hierarchical network. It is the unit from which tests and commands are issued to other units on the same circuit. There is only one control per link.
core	A function of the circuit card that provides data transmission capability. With 3500 and 3600 Series DSUs, there are two cores: one for the DSU and one for the DBM. The data can be transmitted through either (also see active core).
CPE	Customer Provided Equipment. Terminal equipment supplied by either the customer or some other supplier, which is connected to the telecommunications network.
crossed pairs	When the DDS receive and transmit pairs are crossed, a facility alarm is generated.
CSA	Canadian Standards Association.
CTS	Clear to Send. A signal indicating that the device is ready for the DTE to transmit data.
Data mode	One of two general operating modes; the other is Command mode. When in Data mode, the modem considers any input from the computer to be data and transmits it across the telephone line to the remote modem.
dBm	A decibel referenced to one milliwatt. This unit measures relative signal power.
DBM	The optional Dial Backup Module for the 3600 Series DSU. This module provides an alternate data path in case of failure of the digital connection. Four types of DBMs are available: V.32 14.4 kbps analog DBM and 2-wire Switched 56 DBM, 4-wire Switched 56 DBM, and ISDN digital DBMs.
DBM-D	A carrier-mounted dial backup unit that provides automatic dial backup and service restoration of failed digital circuits using 2-wire access over 56 kbps switched digital services. The unit functions as a DBM; does not function as a DSU.
DBM-I	A carrier-mounted dial backup unit that provides automatic dial backup and service restoration of failed digital circuits using an ISDN U-interface with two digital channels. The unit functions as a DBM; does not function as a DSU.
DBM-S	A carrier-mounted dial backup unit that provides automatic dial backup and service restoration of failed digital circuits using 4-wire access over 56 kbps switched digital services. The unit functions as a DBM; does not function as a DSU.
DBM-V	A carrier-mounted V.32 dial backup unit that provides automatic dial backup and service restoration of failed digital circuits over the PSTN. The unit functions as a DBM; does not function as a DSU.
DBM-X	A carrier-mounted dial backup unit that provides automatic dial backup and service restoration of failed digital circuits. Primary core is enabled; does not function as a DSU.

DBU	Dial Backup Unit. A device used for establishing a data channel on the public telephone network and for switching data traffic there during a failure of the private line data channel.
D-channel	The ISDN channel that carries signaling information to Control call setup.
DC	Diagnostic Channel. The diagnostic interface between two network devices, used to extend the NMS diagnostics to downstream devices.
DCE	Data Communications Equipment. The equipment that provides the functions required to establish, maintain, and end a connection. It also provides the signal conversion required for communication between the DTE and the network.
DCP	Diagnostic Control Panel. See front panel.
DDD	Direct Distance Dialing. Telephone exchange service, the public switched telephone network (PSTN) that enables a telephone service user to access telephone lines without operator assistance.
DDS	Digital Data Service, such as DATAPHONE Digital Service or ACCUNET Spectrum of Digital Services, that provides digital (not dial) communication circuits.
dedicated backup	A dial backup module (DBM) assigned to a particular DSU that is continually available for service restoration. The DBM switches to Dial Backup mode automatically when the DDS line fails; no switching is required. An external dial backup unit can also provide dedicated backup.
diagnostic path extension	A method used by an NMS to extend diagnostic control to devices other than a tributary 3610 DSU at a remote location. It uses one multiplexed channel to provide an external 1200 bps asynchronous transparent path for the NMS's control channel.
dial backup module	Ensures continuity of service if a DDS connection fails. Detects network failure, performs dial backup functions, and automatically restores the DDS data path when the network returns to service. See DBM.
dial network	See PSTN.
dial string	A sequence of up to 36 characters that the DBM can send into the dial network to establish a call to a remote backup device. It consists of a telephone number and may include other information, such as a callback directory pointer.
digital bridging	Provides the ability for dial backup of a multipoint configuration by bridging the signal on the digital side.
digital sharing	Sharing device enabled allows TDM to backup MCMP use digital-sharing groups.
digital signal	A signal composed of only two discrete values (representing the binary digits 0 and 1), used to transfer data between a locally attached DTE and a device.
DIP switch	Dual In-line Package switch.
DMI	Data Mode Idle. Refers to a sequence of ones transmitted or received on the DDS or switched 56 kbps network. Data Mode Idle operation is recommended for point-to-point applications.
downstream	In extended networks, the direction in which diagnostic messages flow from the diagnostic control site to any intermediate links and then to the final tributary modem.
DPII	DATAPHONE II. The name of both a family of Paradyne NMS products (System Controller, Diagnostic Console, and Network Controller), and the network management protocol used by these products.
DS0	Digital signal level 0 (zero). A 64 kbps digital telecommunications signal or channel.
DSD	Digital sharing device.

DSR	Data Set Ready. A signal from the modem to the DTE that indicates the modem is turned ON and connected to the DTE.
DSU	Data Service Unit. Data communications equipment that provides an interface between the DTE and the digital network.
DTE	Data Terminal Equipment. The equipment, such as a computer or terminal, that provides data in the form of digital signals.
DTR	Data Terminal Ready. A signal from the DTE to the modem, sent via Pin 20 of the EIA-232 interface, that indicates the DTE is turned ON and connected to the modem.
EBrdg	Extended digital bridge.
EDP	Escape-based diagnostic protocol.
EIA/TIA	Electronics Industries Association/Telecommunications Industry Association. This organization provides standards for the data communications industry to ensure uniformity of the interface between DTEs and DCEs.
EIA/TIA-232-E	An Electronic Industries Association's standard defining the 25-pin interface between data terminal equipment and data communications equipment.
elastic store	A form of buffering between collocated data communications devices in complex networks; required to maintain timing synchronization for data transmission in the entire network.
End to End Test	A pattern test run in both directions simultaneously on local and remote devices.
EPROM	Erasable programmable read-only memory.
errored second	A performance measurement reported during Digital Test or Transmit Test Pattern that is defined as a second in which at least one error has been detected.
extended network	The extension of a circuit where the tributary DCE is connected to a downstream (extended) control DCE.
FA	Facility Alarm. A failure reported to the front panel when there is a facility or device failure.
FacB	Factory Bridge. Factory default configuration option settings.
FacC	Factory Control. Factory default configuration option settings.
FacT	Factory Tributary. Factory default configuration option settings.
factory defaults	A predetermined set of configuration option settings for a specific set of hardware features.
fallback	Retraining at a lower rate or speed.
fast select	An extended data field used on some packet types for x.25 facility.
FCC	Federal Communications Commission. Board of Commissioners that regulates all U.S. interstate, intrastate, and foreign electrical communication systems that originate from the United States.
FEP	Front-End Processor. A communications computer associated with a host computer that manages the lines and routing of data through the network.
ferrite choke	A ferrite choke is attached to a cable to reduce electromagnetic interference and ensure compliance with FCC Part 15 Rules.

filtering	The 3600 Series DSU and hardware features present menus and selections based on features installed and enabled. Filtering is not displaying options for hardware that is not installed.
flex	The flex option is available for the Model 3610 with TDM or MCMP. When installed, each port can be set independently as either an EIA-232 or V.35 interface.
framing	A control procedure used with multiplexed digital channels where bits are inserted so the receiver can identify time slots allocated to each subchannel.
front panel	The front panel of a device that continuously provides status information about the device's operation and allows an operator to manage its operation. This is a generic term used for both the standalone and carrier-mounted models.
full backup	If the DSU/DBM detect a network failure, the DBM can automatically initiate dial backup and each tributary communicates with the control DSU through a backup connection.
full-duplex	The capability to transmit in two directions simultaneously.
Hz	Hertz. A unit of frequency that equals one cycle per second.
IBF	In-band framing. See bit robbing.
IEC	InterExchange Carrier. A company that provides inter-LATA (local exchange carrier) telecommunication services, like AT&T, MCI, and SPRINT. Access to these services can be provided through DDS dedicated channels, T1.5 dedicated access channel, or digital switched access (DSA) channels.
IOC	ISDN Ordering Code.
ISDN	Integrated Services Digital Network. Provides capability to carry voice and data while sending signaling on the D-channel.
ITU-TSS	International Telecommunications Union Telecommunications Standardization Sector. An advisory committee established by the United Nations to recommend communications standards and policies and allocate transmission frequencies. Before March, 1993, it was called CCITT.
kbps	Kilo (1,000) bits per second.
LADS	Local Area Data Set is used to provide a point-to-point link between two devices (also called LDM).
LATA	Local Area Transport Area. A region served by a local exchange carrier (LEC) that consists of one or more area codes.
LCD	Liquid Crystal Display. Thin glass plates containing liquid crystal material. When voltage is applied, the amount of light able to pass through the glass plates is altered so that messages can be displayed.
LDM	Limited-Distance Modem (also called a local area data set or LADS).
LEC	Local Exchange Carrier. A company that provides intra-LATA (local exchange carrier) telecommunication services, like NYNEX or Bell South.
LED	Light Emitting Diode. A light or status indicator that glows in response to the presence of a certain condition (e.g., an alarm).
link configuration	Provides a communication path between point-to-point or multipoint units for compatibility with network operations.

link-level address	NMS communications are directed to a tributary via a link-level address. It takes the form of control network address/tributary network address (e.g., 157/04 — DSU control address of 157 and tributary address of 04).
LN	Load Number. Percentage of total load to be connected to a telephone loop used by the labeled equipment.
loopback test	Any test that verifies a device's integrity by connecting the device's output in one direction to the device's input in the other direction and then checking the received signal for errors.
LPDA	Link Problem Determination Aid. A series of testing procedures used in NetView that are initiated by the network control program (NCP) that provides the status of modems and attached devices, and the overall quality of the link.
LSD	Line Signal Detect. A signal between the DTE and the device indicating energy exists on the transmission circuit.
MCMP	Multichannel Multipoint. A circuit card that enables the support of up to six independent applications over a single multipoint digital facility. The MCMP capability can support up to 40 tributary DSUs, each optioned with an MCMP card.
MNP	Microcom Networking Protocol. Levels 4-2 of this protocol, similar to ITU V.42, detect and correct data errors caused by poor telephone line conditions. Level 5, similar to ITU V.42bis, includes data compression.
mode	Mode of operation for the DSU based on settings in effect and additional installed hardware features.
Modular DSU	A DSU circuit card that contains gold finger contacts and is used with a rear connector plate. This circuit card type is easily removed from the front of the carrier without disconnecting the DTE cables.
MPTC	Factory Multipoint Control. Factory default configuration option settings.
MPTT	Factory Multipoint Tributary. Factory default configuration option settings.
multiplex	To combine many low-speed data sources into a single, high-speed serial data stream. The data is coded at transmission, and decoded at reception. Some multiplexing techniques include Frequency Division Multiplexing (FDM), Time Division Multiplexing (TDM), and Statistical Multiplexing (Stat MUX).
multipoint circuit	A special type of circuit where one control device communicates in a broadcast mode with one or more tributary devices. Communication from a tributary device is always directly to the control device, and not to any of the other tributary devices.
MUX	Multiplexer. A device that enables the simultaneous transmission of multiple independent data streams into a single high-speed data stream.
network interface	Use of alternate Port 1 as a form of backup by providing an internal aggregate data stream.
NMS	Network Management System. A set of diagnostic and configuration management tools for a data communication network, consisting of software programs and dedicated computer hardware.
non-disruptive diagnostics	Diagnostics that are transmitted over the in-band secondary channel or routed through a DBM in Standby mode so that primary data is not affected. The data rate and port speed(s) are not equal.
non-disruptive session	Executing the command will not disrupt primary data.
NT1	Network Termination One. Termination of ISDN U-interface from the Network.

option sets	Sets of configuration options (or libraries) that are related and fulfill a specific function. For example, the Diagnostic (Diag branch) configuration options allow you to configure the DSU for performing diagnostic functions. This option set (or library) contains 16 configuration options related to the DSU's or DBM's diagnostic operation.
partial backup	Partial backup on multipoint circuits is possible when not all tributaries are affected by a network failure. The tributaries that are affected by the network failure communicate with the control DSU through a backup connection.
PCC	Pseudo Carrier Control. Used by tributaries in a multipoint environment to communicate with the control device via manipulation of the RTS Control Signal. Also known as V.13 signaling.
permissive interface	A dial modem operating mode characterized by a fixed output power level of -9 dBm.
pF	Picofarads.
point-to-point circuit	A data network circuit with one control and one tributary.
port sharing	FEP port sharing allows transmissions and controls received by the first port to be sent to the second port in the port sharing group.
primary core	The circuit card that is normally running when power is supplied to the unit. In the case of a DBM-D, DBM-I, DBM-S, or DBM-V, the primary core and the active core are the same.
protocol	The rules for timing, format, error control, and flow control during data transmission.
PSTN	Public Switched Telephone Network. A network shared among many users who can use telephones to establish connections between two points.
rate adaption	Used when the DSU or DBM operates at a speed greater than the DTE. This capability is enabled automatically when the port speed is set lower than the line speed.
rear connector plate	Used with modular devices, a connector plate is installed onto the rear of the COMSPHERE 3000 Series Carrier. It contains two DTE connectors and functions as an interface between the modular device and the DTE.
REN	Ringer Equivalence Number. Used to determine the quantity of devices with ringers that may be connected to a telephone line.
reset	A reinitialization of the device that occurs at power-up or in response to a reset command.
RMA	Return Material Authorization. Provided by customer assistance center for equipment return.
RTS	Request to Send. A signal from the DTE to the modem, sent via Pin 4 of the EIA-232 interface, that states the DTE has data to send.
RXD	Received Data. Pin 3 of the EIA-232 interface that is used by the DTE to receive data from the modem. Conversely, the modem uses Pin 3 to transmit data to the DTE.
SDCP	Shared Diagnostic Control Panel. A feature that allows carrier-mounted devices to share the same diagnostic control panel. Installed into one COMSPHERE 3000 Series Carrier, it controls and monitors the devices in all the carriers in the cabinet. A single SDCP can control up to 8 carriers, with a total of 128 devices.
SDU	Shared Diagnostic Unit. A circuit card installed in Slot 0 of the COMSPHERE 3000 Series Carrier that provides an interface between an optional SDCP and/or network management system and the devices in the carrier.

SEQUOIA	This is a chip upgrade that includes an async/sync converter to support the Single-Port Async/Sync feature, which also supports the same functionality as earlier versions of the 3600 Series DSU.
session disruptive	Application data may be disrupted when running a test, or running the test may cause the application session to be dropped or terminated. The result depends upon the protocol, the front-end processor, the time-out parameters, etc.
session-nondisruptive diagnostics	Diagnostic messages with a duration of .5 seconds or less that are sent over the primary data channel. These messages may interrupt customer data, causing errors requiring retransmission of data blocks. They should not, however, cause termination of the communication session.
SNA	Systems Network Architecture. A description of the logical structure, formats, protocols, and operation sequences that transmit information and that control the configuration and operation of an IBM network.
SPI	Service Profile Identifier. Local telephone company provides this information. Must be stored in DSU permanent memory.
standalone	A device designed for desktop operation. A standalone device can be configured as either a control or a tributary.
standby mode	A DBM can be placed in standby mode to allow diagnostics nondisruptively.
switched mode	Used in networks containing only 3600 Series DSUs, it is a mode of operation using control mode idle (CMI) and data mode idle (DMI) signaling in order to ensure protocol independence of primary data while trapping diagnostic data in the DSU.
switched 56 kbps digital service	A service provided by local exchange and interexchange carriers (LECs and IECs) that allow customers to use high-speed switched digital data capability without having to subscribe to private network services.
System Controller	An NMS that uses the DATAPHONE II (DPII) protocol.
tail circuit	See extended network.
TDM	Time Division Multiplexer. A device that enables the simultaneous transmission of multiple independent data streams into a single high-speed data stream by simultaneously sampling the independent data streams and combining these samples to form the high-speed stream.
Test mode	A condition indicating the device is currently in Test, such as local loopback.
training	A process where two DSUs or modems try to establish a connection over the telephone line.
tributary	A device that receives commands from other devices in the network.
TXD	Transmit Data. Pin 2 of the EIA-232 interface that is used by the DTE to transmit data to the modem. Conversely, the modem uses Pin 2 to receive data from the DTE.
U-Interface	Marks the demarcation line between the customer-provided equipment and the local telephone company. Interface provides basic rate access.
USOC	Universal Service Ordering Codes. Generic telephone company service ordering codes.
Vac	Volts alternating current.
V.32bis	An ITU standard for full-duplex transmissions with asynchronous or synchronous data over dial or leased telephone lines at rates up to 14.4 kbps.
V.35	An ITU standard for a high-speed, 34-position, DCE/DTE interface.

VT100	Terminal emulation mode used for asynchronous communications.
winkback detection	In telephone switching systems, a momentary signal state change from control mode idle (CMI) to data mode idle (DMI), and back to CMI (sometimes referred to as a “wink start”).
6-port connector module	A module that is installed on the COMSPHERE 3000 Series Carrier that contains six 25-pin EIA-232 DTE connectors. In addition, a 26-pin high-density D-type connector is located at the top of the connector module to provide the V.35 interface for either Port 1 or an aggregate data path.
6700 Series Network Management System	A Paradyne automated network management system that allows an operator to monitor network conditions, analyze problems, and take restorative measures from a single personal computer (PC) workstation. This NMS operates in a Microsoft Windows graphic environment.
6800 Series Network Management System	A Paradyne automated network management system that allows an operator to monitor network conditions, analyze problems, and take restorative measures.

Index

Symbols

=RTS, CTS Cntrl, 4-10

Numbers

19.2 PowerLvl, 4-3
2nd Ch(bps), 4-5
3600e, Diag Type, 4-6
64CC
 App Modul ID display, 3-8
 Rate(Kbps), 4-2
64KLatchLpbk, 4-4
64KScrambling, 4-4

A

abbreviations, for menu tree, A-2
abort, an active Test, 3-9
ac transformer, 2-1
ACCUNET, 1-1
active, saving configuration options to, 2-7, 3-14
address
 for remote unit, 3-14
 LPDA-2, 4-16, D-1–D-2
 network, 2-8, 3-15
 up to 40 for MCMP, 1-5
ADp, protocol, 3-16
aggregate
 data rate, 3-5–3-6
 ID display, 3-8
 switch, 1-2
alarm
 and status conditions, 3-6
 DDS F: messages, E-5
 DTR, 4-13
 LED status indicator, 3-4
alternate port 1, 1-2, 3-9
Answer External Dial Backup, 4-14
AnswExtBU, 4-14
AntiStreaming, 4-10
App Modul, ID display, 3-8
ASPEN, App Modul ID display, 3-8

async terminal, 1-2, C-1–C-8
 connection, 2-10
 front panel
 differences, C-4
 messages, E-2
 how to, enable, C-3
 operation, 3-5
 password security, C-2
 technical specifications, F-6
Async terminal (Term), Configuration branch, 3-15
Async to Sync, 4-14
 App Modul ASPEN, 3-8
 data conversion, 1-1
 for MUX ports, 1-4
AsyncBit/Char, 4-14
Asynchronous
 Bits per Character, 4-14
 to Synchronous conversion, 4-14
AT&T, TstPattern, 4-12
auto
 data rate, 3-6
 Rate(Kbps), 4-2

B

Backup (Bckup) branch, 3-9
bandwidth, for in-band diagnostics, 4-5
basic mode, 3-2
 configuration worksheet, B-1–B-2
Bilat Lpbk, 4-12
 test, 3-11
bilateral loopback, 3-11, 4-12
Bit Error Rate Test (BERT), 3-13
Br56, Diag Type, 4-6

C

- cable
 - CC-to-DB25 for async terminal, 2-10
 - M6BJ for NMS connection, 2-9
- Canada, government requirements, E
- CC, Diag Conn, 4-7
- CC/DC
 - async terminal connection, 2-10
 - rear panel network connection, 2-9
- CCN by EL, external leads, 4-13
- Change protocol mode (ChgMd), Configuration branch, 3-15
- channel capacity, MCMP, 1-4
- ChgMd, configuration option, worksheet, B-1–B-2
- Circ Assur, 4-12
- circuit, quality, 3-7
- CISC, App Modul ID display, 3-8
- Clock Source, Transmit, 4-2
- Cntrl, Position, 4-7
- Code, LPDA commands, 4-16
- Command
 - Complete message, 3-10–3-13, E-2
 - Failed message, E-2
- configuration
 - corrupt message, E-5
 - link, 4-7
- Configuration (Conf) branch, 3-14–3-16
 - Async terminal (Term), 3-15
 - Change protocol mode (ChgMd), 3-15
 - Directory (Dir), 3-15
 - Menu, Full mode, 3-16
 - Network address (Addr), 3-15
 - Options (Opts), 3-14–3-15
 - Poll List (PList), 3-15
 - SPID, 3-16
- configuration options
 - diagnostic general, 4-7–4-9
 - DSU, 4-2–4-4
 - diagnostic, 4-5–4-6
 - error messages, E-3–E-4
 - factory defaults, 2-7
 - general, 4-10–4-15
 - how to save and change, 2-5
 - LPDA-2, 4-15–4-16
 - tables, 4-1–4-16
 - format, 4-1
 - worksheets, B-1–B-2
- Conflict w/Envir message, E-2
- connection
 - async terminal, 2-10
 - DDS network, 2-8
 - diagnostic, 4-7
 - DTE, 2-9
 - for V.35 and EIA-232, 2-9
 - LADS distances, F-1, F-2
 - network diagnostic, 2-9
- control
 - CTS, 4-10
 - RTS, 4-10

- Control (Ctrl) branch, 3-16
 - External leads (ExtL), 3-16
 - LEDs, 3-16
 - Transmitter control (TxCtl), 3-16
- crossed-pairs
 - detection, 1-1
 - facility alarm, E-5
- CTS, LED status indicator, 3-4
- CTS Cntrl, clear-to-send, 4-10
- CTS Lead, 4-11

D

- data set ready
 - during tests, 4-11
 - forced on, 4-11
- Data Terminal Ready (DTR), alarm, 4-13
- DBM
 - See also* 3610-A2-GB49
 - common capabilities, 1-3
 - ISDN, 1-4
 - Switched 56, 1-3–1-4
 - testing, 1-3
 - V.32, 1-3
- DBM-X, 3-8
 - digital bridging, 1-3
 - factory default option sets, 2-7
 - ID displays, 3-8
- DC, Diag Conn, 4-7
- DDS, network, 1-1, 2-1
- DDS F: facility alarm messages, E-5
- DDS RxLoss, circuit quality display, 3-7
- defaults, factory, 1-2, 2-1, A-1–A-6
 - configuration option sets, 2-7
- delay
 - link, 4-8
 - network, 4-8
 - packet, 4-8
- detection
 - auto rate, 1-1
 - crossed-pairs, 1-1
- Devic, message, E-9
- device
 - control, 1-1
 - test, 2-4, 3-10
- device (Devic), health and status, 3-6
- Diag Conn, 4-7
- Diag Type, 4-5
- diagnostic
 - connection, 4-7
 - disruptive type, 4-6
 - DSU configuration options, 4-5–4-6
 - factory defaults, A-4
 - worksheet, B-1–B-2
 - for tributary, 1-2
 - general configuration options, 4-7–4-9
 - factory defaults, A-4
 - worksheet, B-1–B-2
 - nondisruptive, 1-1
 - speed, 4-5
 - type, 4-5

Dial, LED, 3-4
 Dial tone test, 3-13
 DialBU, message, E-9
 DialCN, message, E-9
 DialTn, message, E-9
 digital bridge
 See also 3610-A2-GB48
 capabilities, 1-4
 digital loopback, 3-10
 remote, 3-11
 digital sharing, 1-4
 Digital test (DT), 2-8, 3-12
 results, 3-12
 Directory (Dir), Configuration branch, 3-15
 Disab, message, E-9
 display
 mode, 3-5
 screens, 3-3, C-5
 Disr, Diag Type, 4-5–4-6
 disruptive diagnostic type, 4-6
 DMI, Reset/Device test, 3-17
 documents, product-related, 1-5–1-6
 DSR
 FrcOn, 4-11
 LED status indicator, 3-4
 on Tst, 4-11
 DSU
 configuration options, 4-2–4-4
 for remote, 3-14
 worksheet, B-1–B-2
 Data Rate, 4-2
 factory default settings, A-1–A-6
 installation planning, 2-2
 menu tree, A-1–A-3
 standard features, 1-1
 status indicators, 3-4
 technical specifications, F-5
 Tst messages, E-6
 DTE
 DSU connection, 2-9
 loopback, 2-9, 3-10
 Port, 4-10
 RTS Cntrl, 4-10
 Status, 3-7
 DTone, dial tone test, 3-13
 DTR
 Alarm, 4-13
 message, E-7
 call control. *See* 3610-A2-GB49
 LED status indicator, 3-4
 message, E-9

E

edit/save, after configuration option changes, 3-14
 EIA-232
 async terminal connection, 2-10
 DSU to DTE connection, 2-9
 DTE Port, 4-10
 interface, 1-1
 terminal power display, 3-7
 test mode, 2-2
 elastic store, for each port, 1-4
 enable, async terminal, C-3
 End-to-End test (EE), 3-12
 results, 3-12
 expanded (expan), health and status, 3-7
 Ext, TxClkSource, 4-2
 Ext Leads, 4-13
 Extend Chan, 4-8
 External Alarm, message, E-6
 external dial backup, 1-2, 3-9
 Answer, 4-14
 External leads (ExtL), 3-16, 4-13
 async terminal, C-6
 configuration change notification (CCN), 4-13
 how to display, 3-17
 ExtLd, message, E-9

F

Fac, factory default settings, 2-7, A-4–A-6, E-1
 faceplate, for model 3611, 3-3
 Facil, message, E-9
 facility alarm, 3-6, E-5
 FacT, factory defaults, 4-1
 factory defaults, 1-2, 3-5, A-1–A-6
 configuration option sets, 2-7
 Fast Select, 4-9
 features
 DSU standard, 1-1
 optional, 1-2–1-4
 FEP, port sharing, 1-3–1-4
 firmware version control, 3-7, 4-13, G-2
 frame ground, switch, 2-2
 front panel
 access to Remote branch, 3-17
 async terminal
 differences, C-4
 messages, E-2
 control, 1-2
 device health and status display, 3-6
 how to open, 2-2
 messages, E-1–E-10
 operation, 3-2–3-16
 security, 3-18
 full mode, Menu configuration option, 3-16
 function keys, on front panel, 3-3–3-4

G

- G2Trb, Position, 4-7
- general, configuration options, 4-10–4-15
 - factory defaults, A-5
 - worksheet, B-1–B-2
- general 3600 series, technical specifications, F-2–F-4
- government requirements
 - Canada, E
 - United States, C

H

- health and status
 - device messages, E-5–E-8
 - LEDs, 3-4
 - reports, 3-6
 - subnetwork messages, E-9
- home screen, 2-6
- hubbing device
 - network diagnostic connection, 2-9
 - technical specifications, F-6

I

- Identity (ID), 2-8, 3-7
 - field descriptions, 3-8
- In-band diagnostics, diagnostic speed, 4-5
- input, screens, 3-3–3-4
- installation process, 2-2–2-9
 - configuration options, how to change, 2-5
 - DDS network connection, 2-8
 - DSU DTE connections, 2-9
 - network verification testing, 2-8
 - powering up the DSU, 2-4–2-5
 - verify S1 switch settings, 2-2
- interface
 - DTE, 3-7
 - EIA-232 and V.35, 1-1
 - terminal power, 3-7
 - LPDA-2, 2-10
 - network, 1-2, 1-5
 - SNA diagnostic, D-1–D-2
- Invalid, Selection message, E-2

K

- keypad, operation, 3-3

L

- LADS
 - connection distances, F-1, F-2
 - operation, 1-1
- Lamp test, 3-13
- latching loopback, 4-4
- LCD
 - display, 3-3
 - examples, 2-6
- lead
 - clear-to-send (CTS), 4-11
 - line signal detect (LSD), 4-11
- LEDs, 3-16
 - Lamp test, 3-13
 - status indicators, 3-4
- LINE, rear panel network interface, 2-8
- link
 - address for LPDA-2, D-2
 - configuration, 1-2, 2-8, 4-7
- Link Delay, 4-8
- link segment, LPDA-2 address, 4-16
- LinkConfig, 4-7
- LL by DTE, 4-12
- local
 - loopback, 2-9, 3-10
 - by DTE, 4-12
 - menu, 3-5
- loopback
 - bilateral, 3-11, 4-12
 - digital (DL), 3-10
 - DTE, 3-10
 - local, 4-12
 - remote digital, 4-12
 - examples, 3-11
 - latching, 4-4
 - local (LL), 3-10
 - local and DTE, 2-9
 - network, 3-10
 - remote digital (RL), 3-11
 - respond to remote digital, 4-12
 - V.54, 4-4
- Loopback (Lpbk) test, 3-10–3-11
- LPDA-2
 - Address, 4-16
 - Addressing, D-1–D-2
 - App Modul ID display, 3-8
 - configuration options, 4-15–4-16
 - factory defaults, A-4
 - operation, 4-15
 - option verification, 2-10
 - SNA diagnostic interface, 1-2
- LPDA-2, configuration options, worksheet, B-1–B-2
- LSD
 - Lead, 4-11
 - LED status indicator, 3-4

M

- main channel, extend, 4-8
- MAJOR, message, E-9
- MCMP
 - See also* 3610-A2-GB48
 - capabilities, 1-4
 - Communication Fail message, E-6
 - RLSD in, 4-14
- Menu, Configuration branch, 3-16
- menu
 - structure, 3-5
 - tree, 3-2, A-1–A-3
 - tree abbreviations, A-2
- message
 - 10BPC & 2 Stops, E-4
 - AgSw Req SymPrt, E-3
 - AgSw&TribIncmt, E-3
 - AutoRate&TxClk, E-3
 - Br56&SpeedIncmt, E-3
 - Circ Assur Inval, E-3
 - Command Complete, E-2
 - Command Failed, E-2
 - Config Corrupt, E-5
 - Conflict w/Envir, E-2
 - CTS Ctrl&DiagTyp, E-3
 - DDS data rate, E-5
 - DDS F:
 - BiplrViol, E-5
 - CMI Fac Alarm, E-5
 - CrossPairs, E-5
 - No Signal, E-5
 - No Sync, E-5
 - OutofServc, E-5
 - Rate Confl, E-5
 - Dial Tone:Fail, E-5
 - DSU
 - Agg Exceeded, E-3
 - AsyncUndersp, E-3
 - Device Fail, E-5
 - Disable, E-5
 - Tst, E-6
 - EBrdg rate, E-6
 - Elast Not Valid, E-3
 - External Alarm, E-6
 - Incmt, Diag mode, E-3
 - Inval
 - 2ndChanSpd, E-3
 - RTS Cntrl, E-3
 - Selection, E-2
 - Invalid
 - Address, E-6
 - Port Spd, E-3
 - LPDA&PrtSPIncmt, E-4
 - MCMP CommunicFail, E-6
 - MUX
 - CommunicFail, E-7
 - Device Fail, E-7
 - NetI, E-7
 - NetI F:No Signal, E-7
 - No Response, E-2
 - Not in Menu, E-2
 - OutofFrame Thresh, E-7
 - Please wait, E-2
 - Port DTR Alarm, E-7
 - Prt
 - Disable, E-8
 - Stream Term, E-8
 - Redun
 - Fan Alarm, E-8
 - Pwr Alarm, E-8
 - Subnetwrk Alarm, E-8
 - Sub-normal Speed, E-8
 - Subtree Truncat, E-8
 - Term: Stndby, E-2
 - Tst:
 - BERT, E-6–E-7
 - BiL, E-6
 - DCP, E-6–E-7
 - Dev, E-6
 - DL, E-6–E-7
 - DT, E-6–E-7
 - DTE, E-6–E-7
 - E-E, E-6
 - Lamp, E-6
 - LL, E-6
 - LPDA, E-6–E-7
 - NetL, E-6
 - NMS, E-6–E-7
 - Ntwk, E-6
 - Remt, E-6–E-7
 - RL, E-6–E-7
 - TM, E-6, E-7
 - User I/F - Activ, E-2
 - V.54&2500 Incmt, E-4
- Message Clamping, 4-3
- messages
 - command error, E-2
 - command progress, E-2
 - configuration error, E-3–E-4
 - device health and status, E-5–E-8
 - format, E-2
 - H/S display, 3-6
 - subnetwork health and status, E-9
- Mixed, Diag Type, 4-5
- mode
 - basic, 3-2, B-1–B-2
 - full, 3-16
 - standby
 - Dial LED, 3-4
 - from backup branch, 3-9
 - test, 3-4
 - EIA-232 or V.35, 2-2–2-3
- model 3610/3611
 - front panels, 3-2
 - ID display, 3-8
- M-Pt, LinkConfig, 4-7
- MPTC, factory defaults, A-4–A-6
- M-PtSymPrt, 4-9
- MPTT, factory defaults, A-4–A-6
- Msg Clamp, 4-3
- Msgs, top-level menu, 3-5

- multipoint
 - configuration, 1-2
 - dial backup, 1-5
 - link configuration, 2-8
 - symmetrical port, 4-9
- multispeed operation, 1-1
- MUX, message, E-9
- MUX App, MUX function ID display, 3-8
- MUX card, ID display, 3-8

N

- NetI Timing, 4-4
- NetIntf, 4-4
- network
 - address, 2-8
 - DDS connection, 2-8
 - diagnostic connection, 2-9
 - interface, 1-2, 4-4
 - set to AggSw, 3-9
 - switch timing, 4-4
 - loopback, 3-10
 - position, 4-7
 - verification testing, 2-8
- Network address (Addr), Configuration branch, 3-15
- Network Delay, 4-8
- Netwrk Addr, protocol ID display, 3-8
- NMS
 - health and status, 3-6
 - polling, 3-15
- No Response message, E-2
- No signal, message, E-1
- NonD, Diag Type, 4-5
- nondisruptive diagnostics, 1-1
- NoResp, message, E-9
- Normal, message, E-9
- Not In Menu message, E-2

O

- OK LED, status indicator, 3-4
- options, changing and saving, 2-5
- Options (Opts)
 - Configuration branch, 3-14–3-15
 - Configuration tables, 4-1–4-16
- Overspeed, 4-15

P

- Packet Delay, 4-8
- parity, none for async terminal, 3-5, C-1
- password security, async terminal, C-2
- phone, configuration option, 3-15
- Please wait message, E-2
- Pnn Tst messages, E-7
- point-to-point
 - configuration, 1-2
 - link configuration, 2-8, 4-7
- Poll List (PList), Configuration branch, 3-15
- polling
 - from NMS, 3-15
 - front panel display, 3-6
- port
 - DTE, 4-10
 - multipoint symmetrical, 4-9
 - upstream, 4-9
- Port Speed, 4-2
- Position, Network, 4-7
- POWER, rear panel connection, 2-4
- power level, 4-3
- PowerOnTst, 4-15
 - disable power-up routine, 2-5
 - Reset/Device test, 3-17
- power-up routine, 2-4, 3-5, 4-15, E-1
- primary core
 - See also* 3610-A2-GB49
 - DBM-X, 1-3
 - ID display, 3-8
- protocol
 - changing mode, 3-15
 - for ISDN, 1-4
 - for remote unit, 3-14
 - Netwrk Addr ID display, 3-8
- PrtSp(Kbps), 4-2
- PSTN connection, 3-6
- Pt-Pt, LinkConfig, 4-7

R

rate
 adaption, 1-1
 automatic detection, 1-1
 Rate(Kbps), configuration option, 4-2
 RDL, respond to, 4-12
 rear panel, 2-9
 Receive
 Elastic Store, 4-3
 Line Signal Detect (RLSD), for MCMP, 4-14
 receive signal loss, DDS circuit quality, 3-7
 remote
 configuration option sets, 2-7
 digital loopback, 3-11
 DSU, 3-14
 DTE digital loopback, 4-12
 menu, 3-5
 Remote branch, 3-17
 requirements, government, C
 Reset
 Control branch option, 3-17
 initiate power-up routine, 2-5
 power on test, 4-15
 Transmitter control (TxCtl), 3-17
 Resp Period, 4-7
 RespondRDL, 4-12
 response period, 4-7
 RL by DTE, 4-12
 RLSD in MCMP, 4-14
 RPower, message, E-9
 RPower, ExtLeads, 4-13
 RTS, LED status indicator, 3-4
 RTS Cntrl, Request-to-Send, 4-10
 RXC, TxClkSource, 4-2
 RXD, LED status indicator, 3-4
 RxElasStor, 4-3

S

S#, serial number ID display, 3-8
 S1 switch setting, how to verify, 2-2
 save, configuration option changes, 2-7, 3-14
 scrambler, 64CC, 4-4
 screen types, async terminal, C-5
 SDCP
 for model 3611, 3-2
 Lamp test, 3-13
 security
 for DBMs, 1-3
 for front panel, 3-18
 self-test, Device test, 3-10, 3-14
 SEQU, App Modul ID display, 3-8
 signal ground, switch, 2-2
 signal loss, circuit quality display, 3-7
 SNA Backup, 4-16
 SNA diagnostic interface. *See* LPDA-2
 software version control, 4-13, G-2
 specifications. *See* technical specifications
 SPID, Configuration branch, 3-16

standby mode, 3-4
 network interface, 3-9
 status
 indicators, 3-4–3-6
 for async terminal, C-5
 Lamp test, 3-13
 system, 4-11
 Status (Stat) branch, 3-6–3-8
 circuit quality (CircQ), 3-7
 DTE status, 3-7
 Identity (ID), 3-7
 terminal power, 3-7
 Stndby, message, E-9
 stop bits, 4-15
 for async terminal, 3-5, C-1
 Stream, message, E-9
 streaming. *See* AntiStreaming
 subnetwork (subn), health and status, 3-7
 SubSpd, message, E-9
 SW Vers, 4-13
 firmware version, 3-8–3-9
 switched-carrier emulation, 1-4
 SystemStat, 4-11

T

TDM
 See also 3610-A2-GB48
 capabilities, 1-4
 technical specifications, F-1–F-6
 3600 hubbing device, F-6
 async terminal, F-6
 DSU, F-5
 general 3600 Series, F-2–F-4
 Term: Stndby message, E-2
 terminal power, 3-7
 test
 data set ready (DSR), 4-11
 LED, 3-4
 message, E-9
 mode
 EIA-232 or V.35, 2-2–2-3
 LED, 3-4
 network verification, 2-8
 pattern for BERT test, 3-13
 power-on, 4-15
 Test branch, 3-9
 abort, 3-9
 selective, 3-9
 subnetwork (Subn), 3-9
 Bit Error Rate Test (BERT), 3-13
 Device (Devic), 3-10
 Dial tone test, 3-13
 Digital test (DT), 3-12
 End-to-End test (EE), 3-12
 Lamp test, 3-13
 Loopback, 3-10–3-11
 messages, E-6, E-7
 Thresh, message, E-9
 TIA. *See* EIA-232
 time-out, tributary, 4-7

top-level menu, 3-5, A-1, C-5
Transmit

- Clock Source, 4-2
- Clock Source for DBM, 1-3
- Elastic Store, 4-3

Transmitter control (TxCtl), 3-16
Trib, Position, 4-7
TribTimOut, 4-7
TribTm, message, E-9
tributary

- diagnostics, 1-2
- time-out, 4-7

troubleshooting, E-1
Trunc, message, E-9
Tst Pattern, 4-12
TxClkSource, 4-2
TXD, LED status indicator, 3-4
TxElasStor, 4-3

U

United States, government requirements, C
Upstrm Port, 4-9
User I/F

- Activ message, E-2
- Idle message, E-2

Usr

- configuration option sets, 2-7
- configuration options, 3-14

V

V.13, operation, 1-3
V.35

- DSU to DTE connection, 2-9
- DTE Port, 4-10
- interface, 1-1
- terminal power display, 3-7
- test mode, 2-2

V.54 Lpbk, 4-4
verification, network testing, 2-8
verification routine, configuration option changes, 3-14
VT100 terminal, 3-5, C-1

W

worksheet, DSU configuration options, B-1–B-2

X

XLOOP, App Modul ID display, 3-8