

Ref. No. 4177  
022010 (CDC1N)

# ONKYO SERVICE MANUAL

## BLU-RAY DISC PLAYER

### MODEL BD-SP807(B)CDC1N



**Black model**



RC-730DV

B CDC1N | 120 V AC, 60Hz

## SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK ON THE SCHEMATIC DIAGRAM AND IN THE PARTS LIST ARE CRITICAL FOR RISK OF FIRE AND ELECTRIC SHOCK.

REPLACE THESE COMPONENTS WITH ONKYO PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL.

MAKE LEAKAGE-CURRENT OR RESISTANCE MEASUREMENTS TO DETERMINE THAT EXPOSED PARTS ARE ACCEPTABLY INSULATED FROM THE SUPPLY CIRCUIT BEFORE RETURNING THE APPLIANCE TO THE CUSTOMER.

**ONKYO**  
IMAGINATIVE SIGHT & SOUND

# TABLE OF CONTENTS

|   |        |
|---|--------|
| Specifications .....                            | 1-1-1  |
| Laser Beam Safety Precautions .....             | 1-2-1  |
| Important Safety Precautions .....              | 1-3-1  |
| Standard Notes for Servicing .....              | 1-4-1  |
| Cabinet Disassembly Instructions .....          | 1-5-1  |
| How to Initialize the BLU-RAY Disc Player ..... | 1-6-1  |
| Firmware Renewal Mode .....                     | 1-7-1  |
| Block Diagrams .....                            | 1-8-1  |
| Schematic Diagrams / CBA and Test Points .....  | 1-9-1  |
| Exploded Views .....                            | 1-10-1 |
| Mechanical Parts List .....                     | 1-11-1 |
| Electrical Parts List .....                     | 1-12-1 |

Manufactured under license from Dolby Laboratories.  
Dolby and the double-D symbol are trademarks of Dolby Laboratories.

# SPECIFICATIONS

## General

|                                     |   |
|-------------------------------------|---|
| Signal system                       | NTSC color  |
| Power requirements                  | 120V AC, 60Hz                                       |
| Power consumption                   | 30W (standby: 0.6W)                                 |
| Dimensions (width x height x depth) | 17-1/8 x 4-1/4 x 12-5/16 inches (435 x 108 x 312mm) |
| Weight                              | 11.0 lbs ( 5.0kg )                                  |
| Operating temperature               | 41°F (5°C) to 104°F (40°C)                          |
| Operating humidity                  | Less than 80% (no condensation)                     |

## Audio

|                                 |  |
|---------------------------------|--|
| BD Linear Audio                 | 4 Hz–88 kHz (196 kHz)                      |
| DVD Linear Audio                | 4 Hz–44 kHz (96 kHz), 4 Hz–22 kHz (48 kHz) |
| Audio CD                        | 4 Hz–20 kHz (44.1 kHz)                     |
| Signal to Noise Ratio           | 112 dB                                     |
| Audio Dynamic Range             | 98 dB                                      |
| THD (Total Harmonic Distortion) | 0.004% (1 kHz)                             |

## Terminals


| <b>Audio output (Analog)</b>  |  |
|-------------------------------|--|
| RCA jack x 2                  | DOWN MIX L/R: 2Vrms (output impedance: more than 1kΩ)  |
| RCA jack x 8                  | FRONT L/R, CENTER, SURR L/R, SURR BACK L/R: 2Vrms (output impedance: more than 1kΩ)<br>SUB WOOFER: 1.1Vrms (output impedance: more than 1kΩ) |
| <b>Video output</b>           |  |
| RCA jack x 1                  | 1Vp-p (75Ω)  |
| <b>Component video output</b> |  |
| RCA jack x 3                  | Y: 1Vp-p (75Ω) PB: 700mVp-p (75Ω) PR: 700mVp-p (75Ω)   |
| <b>Audio output (Digital)</b> |  |
| RCA jack x 1                  | 500mVp-p (75Ω)   |
| Optical jack x 1              | Digital connector  |
| <b>HDMI output</b>            |  |
| HDMI jack x 1                 | Video: 480i, 480p, 720p, 1080i, 1080p, 1080p24 / Audio   |
| <b>ETHERNET terminal</b>      |  |
|                               | 10BASE-T/100BASE-TX  |

## Note

- The specifications and design of this product are subject to change without notice.

# LASER BEAM SAFETY PRECAUTIONS


This BD player uses a pickup that emits a laser beam.

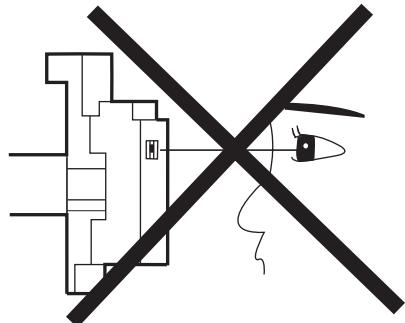

**Do not look directly at the laser beam coming from the pickup or allow it to strike against your skin.**

The laser beam is emitted from the location shown in the figure. When checking the laser diode, be sure to keep your eyes at least 30 cm away from the pickup lens when the diode is turned on. Do not look directly at the laser beam.

**CAUTION:** Use of controls and adjustments, or doing procedures other than those specified herein, may result in hazardous radiation exposure.

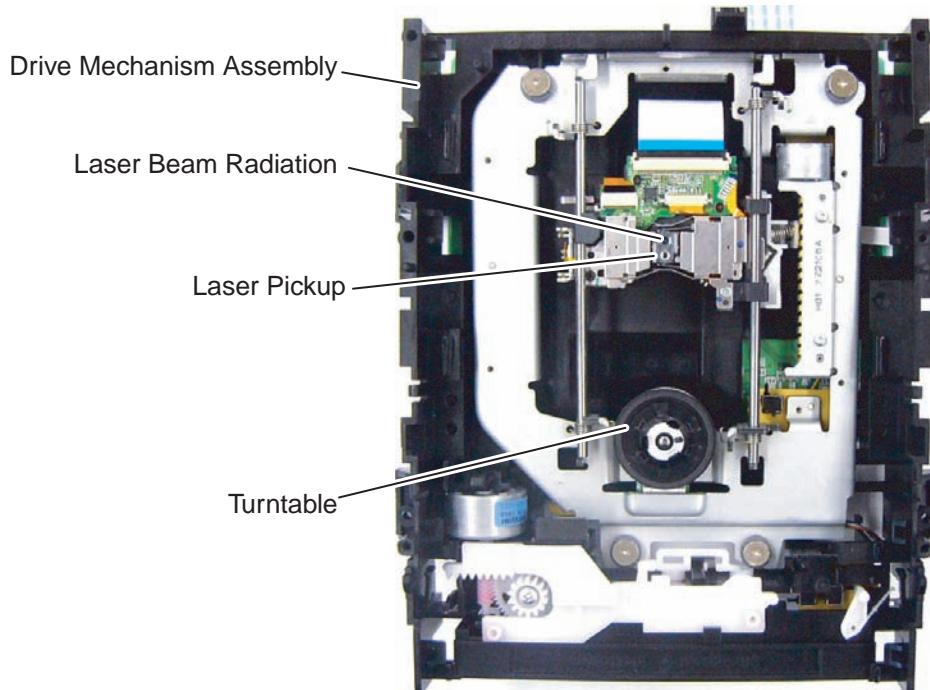

**CAUTION** - LASER RADIATION WHEN OPEN.  
DO NOT STARE INTO BEAM. (FDA 21CFR/Class II)

**CAUTION** - CLASS 2 LASER RADIATION WHEN OPEN  
DO NOT STARE INTO THE BEAM (IEC60825-1/Class 2)

**ATTENTION** - RAYONNEMENT LASER DE CLASSE 2 EN CAS D'OUVERTURE  
NE PAS REGARDER DANS LE FAISCEAU

**注意** - ここを開くとクラス2のレーザー放射が出る  
ビームをのぞき込まないこと

**Location: Inside Top of BD mechanism.**

# IMPORTANT SAFETY PRECAUTIONS

## Product Safety Notice

Some electrical and mechanical parts have special safety-related characteristics which are often not evident from visual inspection, nor can the protection they give necessarily be obtained by replacing them with components rated for higher voltage, wattage, etc. Parts that have special safety characteristics are identified by a  on schematics and in parts lists. Use of a substitute replacement that does not have the same safety characteristics as the recommended replacement part might create shock, fire, and/or other hazards. The Product's Safety is under review continuously and new instructions are issued whenever appropriate. Prior to shipment from the factory, our products are carefully inspected to confirm with the recognized product safety and electrical codes of the countries in which they are to be sold. However, in order to maintain such compliance, it is equally important to implement the following precautions when a set is being serviced.

## Precautions during Servicing

- A.** Parts identified by the  symbol are critical for safety. Replace only with part number specified.
- B.** In addition to safety, other parts and assemblies are specified for conformance with regulations applying to spurious radiation. These must also be replaced only with specified replacements.  
Examples: RF converters, RF cables, noise blocking capacitors, and noise blocking filters, etc.
- C.** Use specified internal wiring. Note especially:
  - 1) Wires covered with PVC tubing
  - 2) Double insulated wires
  - 3) High voltage leads
- D.** Use specified insulating materials for hazardous live parts. Note especially:
  - 1) Insulation tape
  - 2) PVC tubing
  - 3) Spacers
  - 4) Insulators for transistors
- E.** When replacing AC primary side components (transformers, power cord, etc.), wrap ends of wires securely about the terminals before soldering.
- F.** Observe that the wires do not contact heat producing parts (heat sinks, oxide metal film resistors, fusible resistors, etc.).
- G.** Check that replaced wires do not contact sharp edges or pointed parts.
- H.** When a power cord has been replaced, check that 5 - 6 kg of force in any direction will not loosen it.

- I.** Also check areas surrounding repaired locations.
- J.** Be careful that foreign objects (screws, solder droplets, etc.) do not remain inside the set.
- K.** When connecting or disconnecting the internal connectors, first, disconnect the AC plug from the AC outlet.

## Safety Check after Servicing

Examine the area surrounding the repaired location for damage or deterioration. Observe that screws, parts, and wires have been returned to their original positions. Afterwards, do the following tests and confirm the specified values to verify compliance with safety standards.


### 1. Clearance Distance

When replacing primary circuit components, confirm specified clearance distance ( $d$ ) and ( $d'$ ) between soldered terminals, and between terminals and surrounding metallic parts. (See Fig. 1)

**Table 1: Ratings for selected area**

| AC Line Voltage | Clearance Distance ( $d$ ), ( $d'$ )          |
|-----------------|---|
| 120 V           | $\geq 3\text{mm}(d)$<br>$\geq 4\text{mm}(d')$ |

**Note:** This table is unofficial and for reference only. Be sure to confirm the precise values.

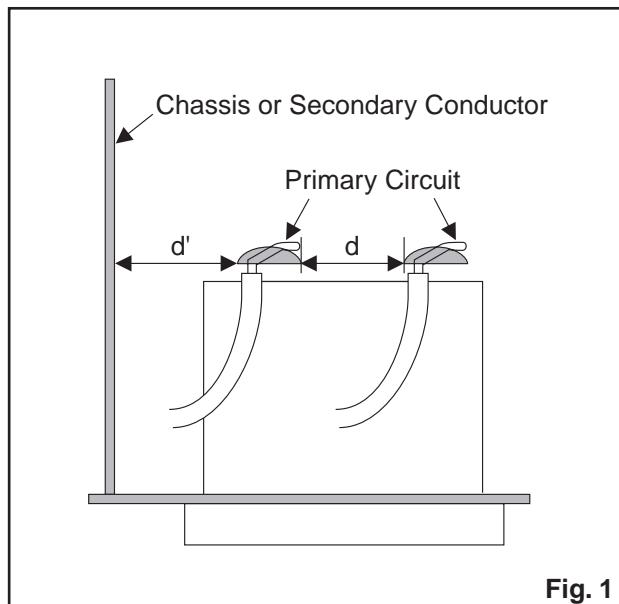


### 2. Leakage Current Test

Confirm the specified (or lower) leakage current between B (earth ground, power cord plug prongs) and externally exposed accessible parts (RF terminals, antenna terminals, video and audio input and output terminals, microphone jacks, earphone jacks, etc.) is lower than or equal to the specified value in the table below.

#### Measuring Method (Power ON):

Insert load  $Z$  between B (earth ground, power cord plug prongs) and exposed accessible parts. Use an AC voltmeter to measure across the terminals of load  $Z$ . See Fig. 2 and the following table.

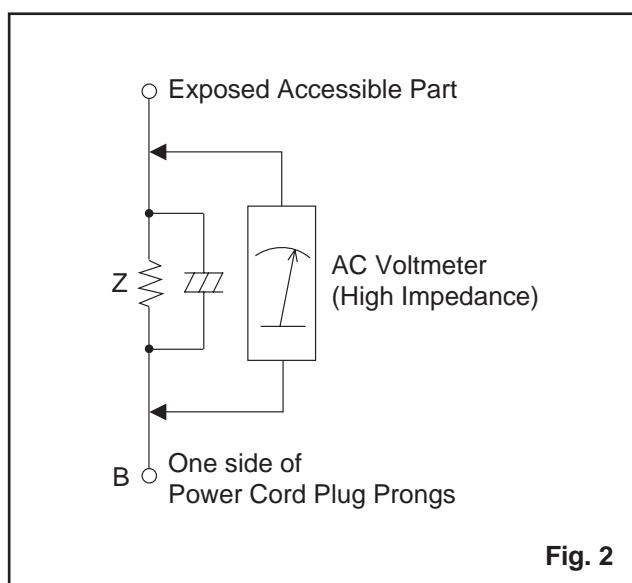

**Table 2: Leakage current ratings for selected areas**


| AC Line Voltage | Load Z                                     | Leakage Current (i)                                     | One side of power cord plug prongs (B) to: |
|-----------------|--|---|--|
| 120 V           | 2k $\Omega$ RES.<br>Connected in parallel  | i $\leq 0.7\text{mA}$ AC Peak<br>i $\leq 2\text{mA}$ DC | RF or<br>Antenna terminals                 |
|                 | 50k $\Omega$ RES.<br>Connected in parallel | i $\leq 0.7\text{mA}$ AC Peak<br>i $\leq 2\text{mA}$ DC | A/V Input, Output                          |

**Note:** This table is unofficial and for reference only. Be sure to confirm the precise values.


# STANDARD NOTES FOR SERVICING

## Circuit Board Indications


1. The output pin of the 3 pin Regulator ICs is indicated as shown.

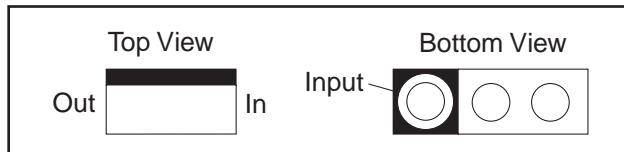

2. For other ICs, pin 1 and every fifth pin are indicated as shown.

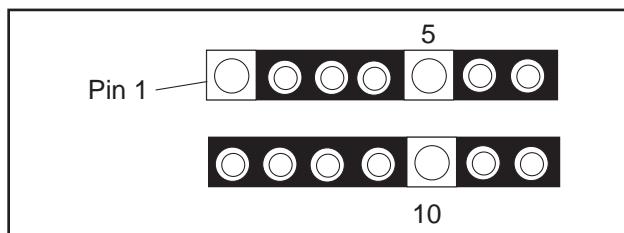


3. The 1st pin of every male connector is indicated as shown.

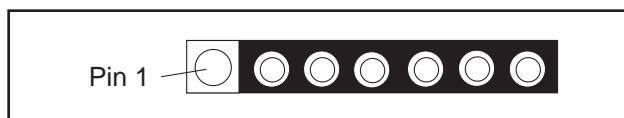

## Instructions for Connectors

1. When you connect or disconnect the FFC (Flexible Foil Connector) cable, be sure to first disconnect the AC cord.
2. FFC (Flexible Foil Connector) cable should be inserted parallel into the connector, not at an angle.

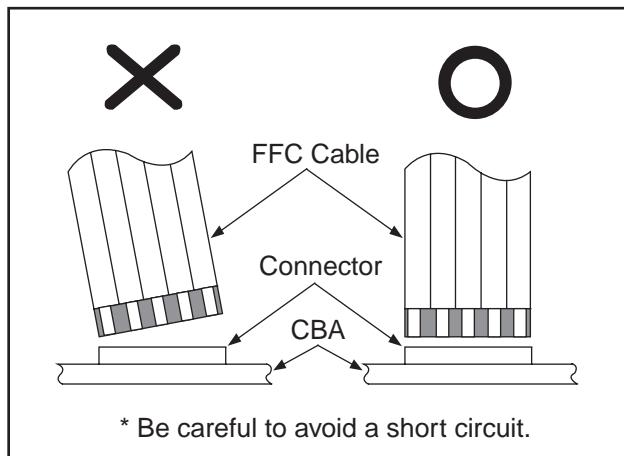

## Pb (Lead) Free Solder

When soldering, be sure to use the Pb free solder.

## How to Remove / Install Flat Pack-IC

### 1. Removal

With Hot-Air Flat Pack-IC Desoldering Machine:

1. Prepare the hot-air flat pack-IC desoldering machine, then apply hot air to the Flat Pack-IC (about 5 to 6 seconds). (Fig. S-1-1)

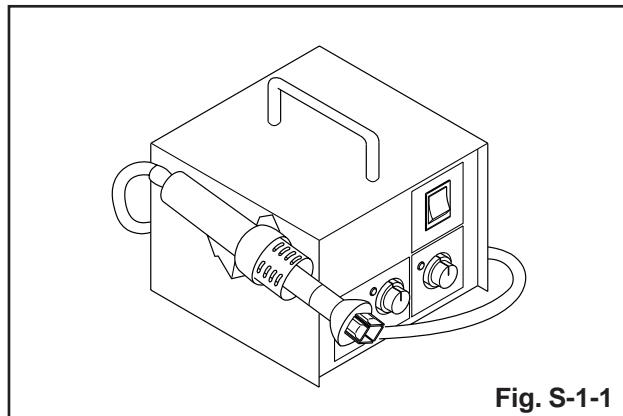



Fig. S-1-1

2. Remove the flat pack-IC with tweezers while applying the hot air.
3. Bottom of the flat pack-IC is fixed with glue to the CBA; when removing entire flat pack-IC, first apply soldering iron to center of the flat pack-IC and heat up. Then remove (glue will be melted). (Fig. S-1-6)
4. Release the flat pack-IC from the CBA using tweezers. (Fig. S-1-6)

### CAUTION:


1. The Flat Pack-IC shape may differ by models. Use an appropriate hot-air flat pack-IC desoldering machine, whose shape matches that of the Flat Pack-IC.
2. Do not supply hot air to the chip parts around the flat pack-IC for over 6 seconds because damage to the chip parts may occur. Put masking tape around the flat pack-IC to protect other parts from damage. (Fig. S-1-2)

- The flat pack-IC on the CBA is affixed with glue, so be careful not to break or damage the foil of each pin or the solder lands under the IC when removing it.

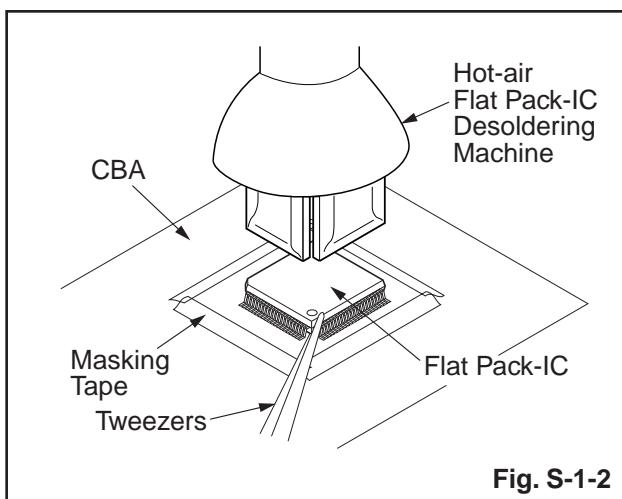


#### With Soldering Iron:

- Using desoldering braid, remove the solder from all pins of the flat pack-IC. When you use solder flux which is applied to all pins of the flat pack-IC, you can remove it easily. (Fig. S-1-3)

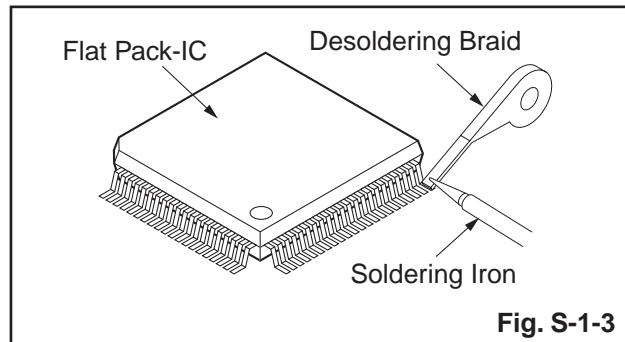

- Lift each lead of the flat pack-IC upward one by one, using a sharp pin or wire to which solder will not adhere (iron wire). When heating the pins, use a fine tip soldering iron or a hot air desoldering machine. (Fig. S-1-4)


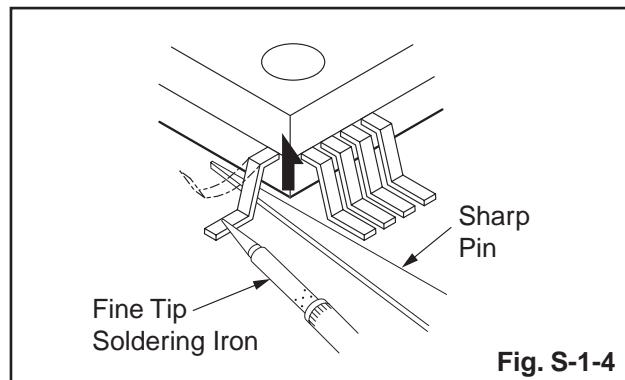


- Bottom of the flat pack-IC is fixed with glue to the CBA; when removing entire flat pack-IC, first apply soldering iron to center of the flat pack-IC and heat up. Then remove (glue will be melted). (Fig. S-1-6)
- Release the flat pack-IC from the CBA using tweezers. (Fig. S-1-6)

### With Iron Wire:

1. Using desoldering braid, remove the solder from all pins of the flat pack-IC. When you use solder flux which is applied to all pins of the flat pack-IC, you can remove it easily. (Fig. S-1-3)
2. Affix the wire to a workbench or solid mounting point, as shown in Fig. S-1-5.
3. While heating the pins using a fine tip soldering iron or hot air blower, pull up the wire as the solder melts so as to lift the IC leads from the CBA contact pads as shown in Fig. S-1-5.
4. Bottom of the flat pack-IC is fixed with glue to the CBA; when removing entire flat pack-IC, first apply soldering iron to center of the flat pack-IC and heat up. Then remove (glue will be melted). (Fig. S-1-6)
5. Release the flat pack-IC from the CBA using tweezers. (Fig. S-1-6)

**Note:** When using a soldering iron, care must be taken to ensure that the flat pack-IC is not being held by glue. When the flat pack-IC is removed from the CBA, handle it gently because it may be damaged if force is applied.

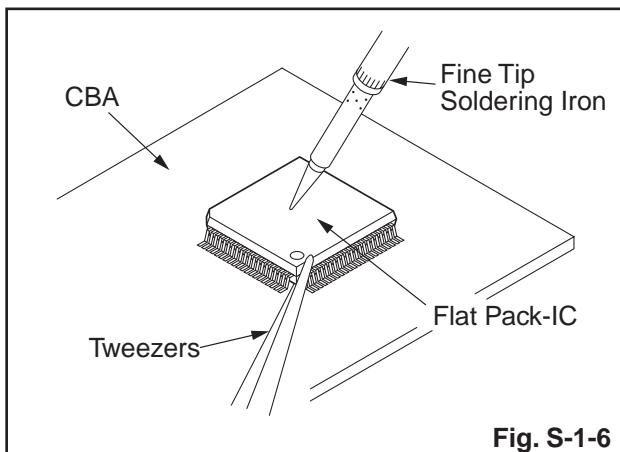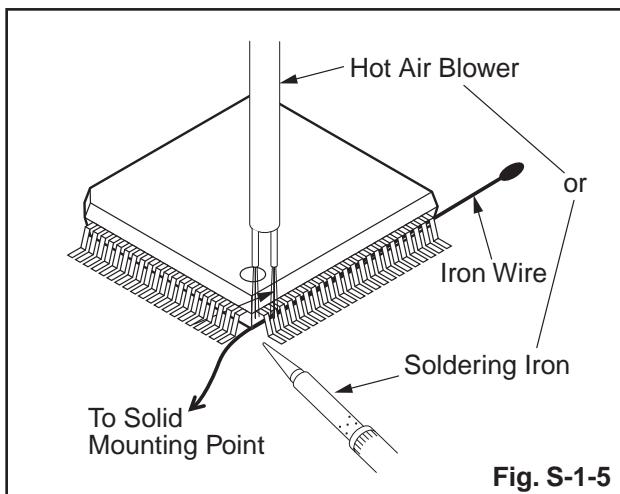

### 2. Installation

1. Using desoldering braid, remove the solder from the foil of each pin of the flat pack-IC on the CBA so you can install a replacement flat pack-IC more easily.
2. The "●" mark on the flat pack-IC indicates pin 1. (See Fig. S-1-7.) Be sure this mark matches the pin 1 on the PCB when positioning for installation. Then presolder the four corners of the flat pack-IC. (See Fig. S-1-8.)
3. Solder all pins of the flat pack-IC. Be sure that none of the pins have solder bridges.

Example :


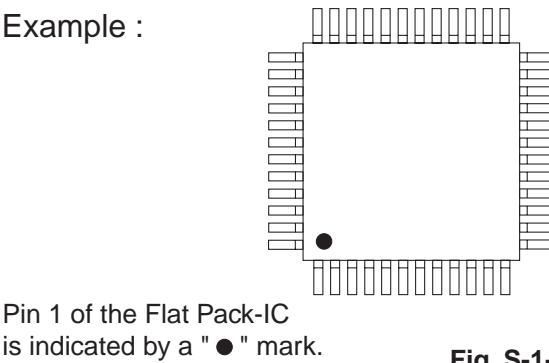


Fig. S-1-7

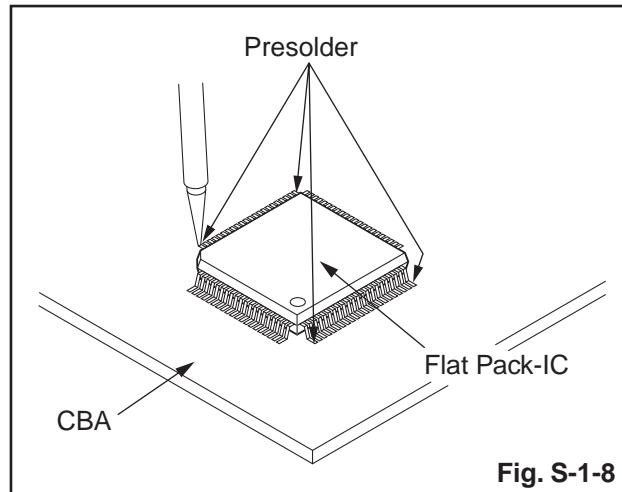

# Instructions for Handling Semi-conductors



Electrostatic breakdown of the semi-conductors may occur due to a potential difference caused by electrostatic charge during unpacking or repair work.

## 1. Ground for Human Body

Be sure to wear a grounding band ( $1\text{ M}\Omega$ ) that is properly grounded to remove any static electricity that may be charged on the body.

## 2. Ground for Workbench


Be sure to place a conductive sheet or copper plate with proper grounding ( $1\text{ M}\Omega$ ) on the workbench or other surface, where the semi-conductors are to be placed. Because the static electricity charge on clothing will not escape through the body grounding band, be careful to avoid contacting semi-conductors with your clothing.

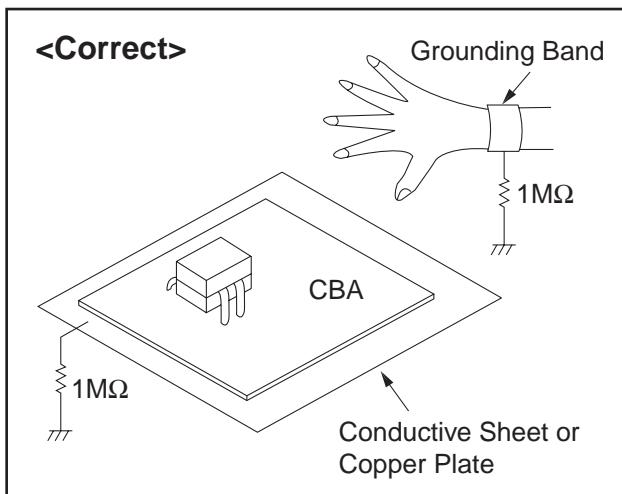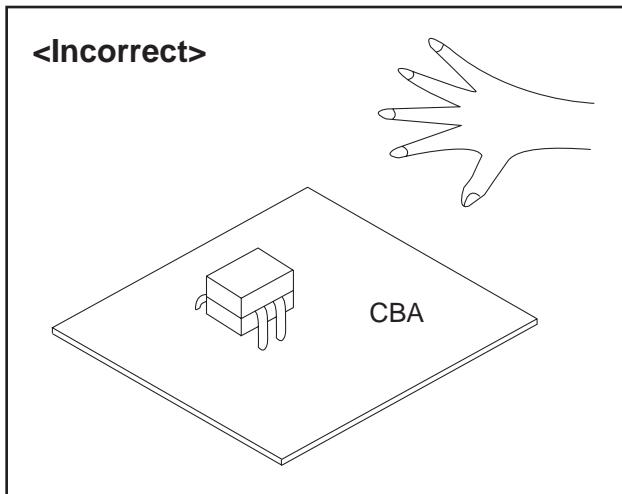

# CABINET DISASSEMBLY INSTRUCTIONS

## 1. Disassembly Flowchart

This flowchart indicates the disassembly steps to gain access to item(s) to be serviced. When reassembling, follow the steps in reverse order. Bend, route, and dress the cables as they were originally.

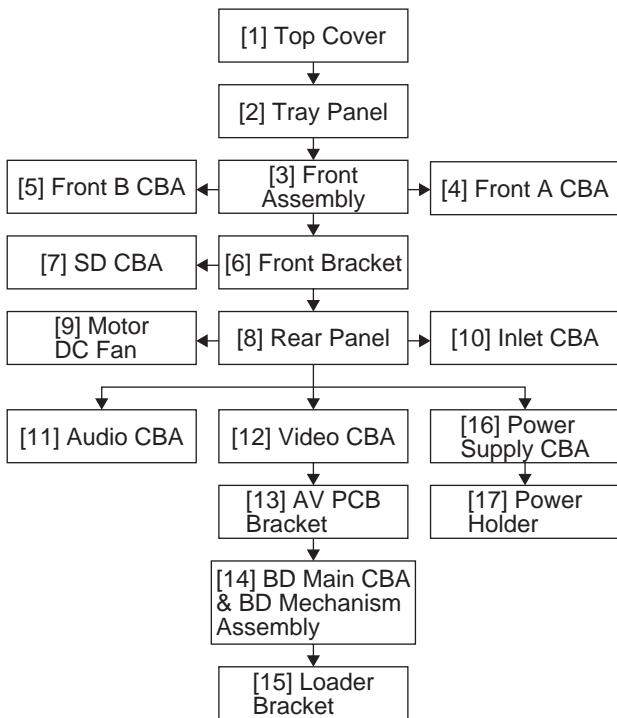

## 2. Disassembly Method

| ID/<br>Loc.<br>No. | Part           | Removal     |   |      |
|--------------------|----------------|-------------|---|------|
|                    |                | Fig.<br>No. | Remove/*Unhook/<br>Unlock/Release/<br>Unplug/Desolder             | Note |
| [1]                | Top Cover      | D1          | 9(S-1)  | ---  |
| [2]                | Tray Panel     | D2          | -----   | 1    |
| [3]                | Front Assembly | D2          | *2(L-1), *(L-2), 5(S-2), 9(S-3), *CN2002                          | 2    |
| [4]                | Front A CBA    | D2          | *CN3001   | ---  |
| [5]                | Front B CBA    | D2          | -----   | ---  |
| [6]                | Front Bracket  | D3          | 7(S-4), (S-5)   | ---  |
| [7]                | SD CBA         | D3          | 2(S-6), *CN5001   | 4    |
| [8]                | Rear Panel     | D4          | 5(S-7), (S-8), 2(S-9), (S-10), (S-11), 11(S-12), 2(S-13), *CN1006 | ---  |
| [9]                | Motor DC Fan   | D4          | -----   | ---  |

| ID/<br>Loc.<br>No. | Part                                | Removal     |   |      |
|--------------------|-------------------------------------|-------------|---|------|
|                    |                                     | Fig.<br>No. | Remove/*Unhook/<br>Unlock/Release/<br>Unplug/Desolder | Note |
| [10]               | Inlet CBA                           | D4          | *CN1001   | ---  |
| [11]               | Audio CBA                           | D5          | 6(S-14), *CN2005, *CN2007, *CN2008                    | ---  |
| [12]               | Video CBA                           | D6          | 4(S-15), *CN7101                                      | ---  |
| [13]               | AV PCB Bracket                      | D6          | 4(S-16)   | ---  |
| [14]               | BD Main CBA & BD Mechanism Assembly | D6          | 4(S-17), *CN6001, *CN7601                             | 3, 4 |
| [15]               | Loader Bracket                      | D6          | 6(S-18)   | ---  |
| [16]               | Power Supply CBA                    | D7          | 2(S-19), 2(S-20)                                      | ---  |
| [17]               | Power Holder                        | D7          | 3(S-21)   | ---  |

### Note:


- (1) Identification (location) No. of parts in the figures
- (2) Name of the part
- (3) Figure Number for reference
- (4) Identification of parts to be removed, unhooked, unlocked, released, unplugged, unclamped, or desoldered.  
P = Spring, L = Locking Tab, S = Screw, CN = Connector  
\* = Unhook, Unlock, Release, Unplug, or Desolder  
e.g. 2(S-2) = two Screws (S-2), 2(L-2) = two Locking Tabs (L-2)
- (5) Refer to "Reference Notes."

## Reference Note

### 1. How to remove tray panel

- 1) Connect the wall plug to an AC outlet and press the [▲] button to open the tray.
- 2) To lift up, the tray panel is removed.
- 3) Press the [▲] button again to close the tray.
- 4) Press the [ON/STANDBY] button to turn the power off.
- 5) Unplug an AC cord.
2. **CAUTION 1:** Locking Tabs (L-1) and (L-2) are fragile. Be careful not to break them.
3. **The BD Main CBA & BD Mechanism Assembly is adjusted as a unit at factory. Therefore, do not disassemble it. Replace the BD Main CBA & BD Mechanism Assembly as a unit.**
4. **CAUTION 2:** Connectors (CN1003 and CN6001, CN5001 and CN5003, CN5004 and CN7601) are fragile.

Make sure to hold both ends while you remove the connector. While you remove, be careful not to hold the other end too hard since this may result in damage to locking tabs.

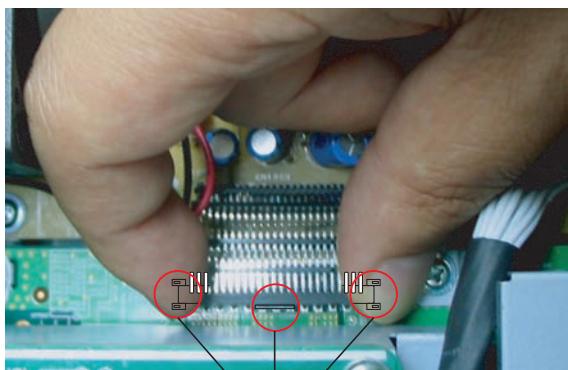

Locking tabs

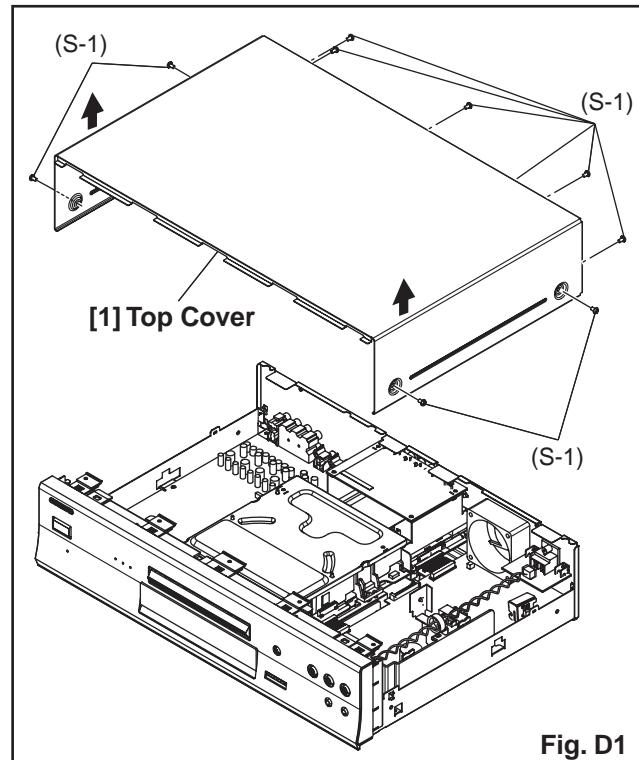


Fig. D1

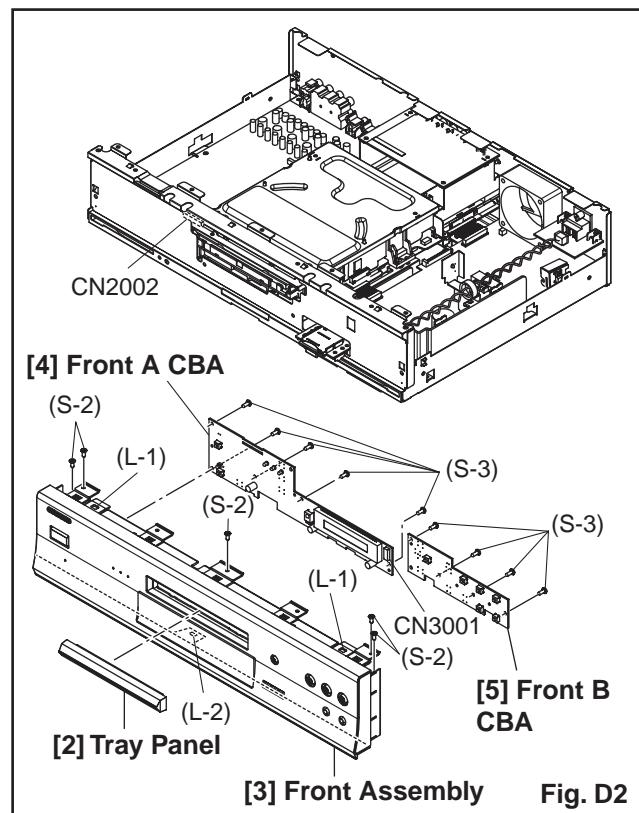


Fig. D2

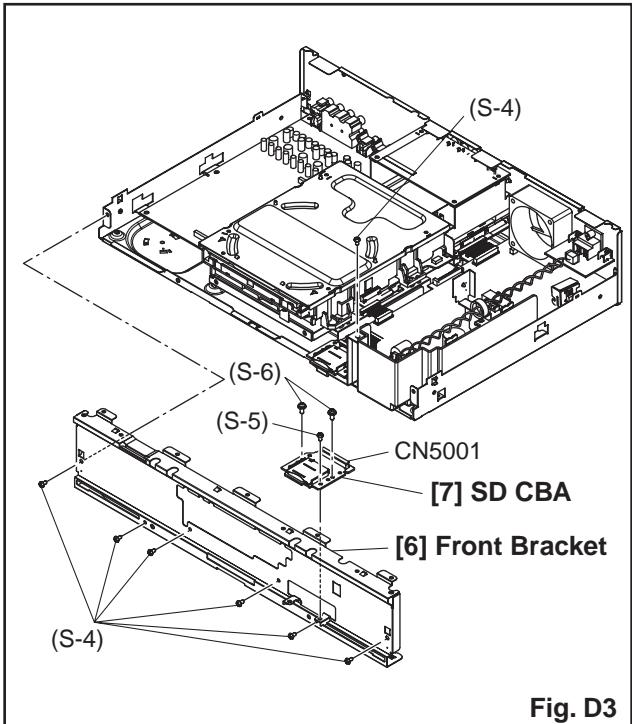


Fig. D3

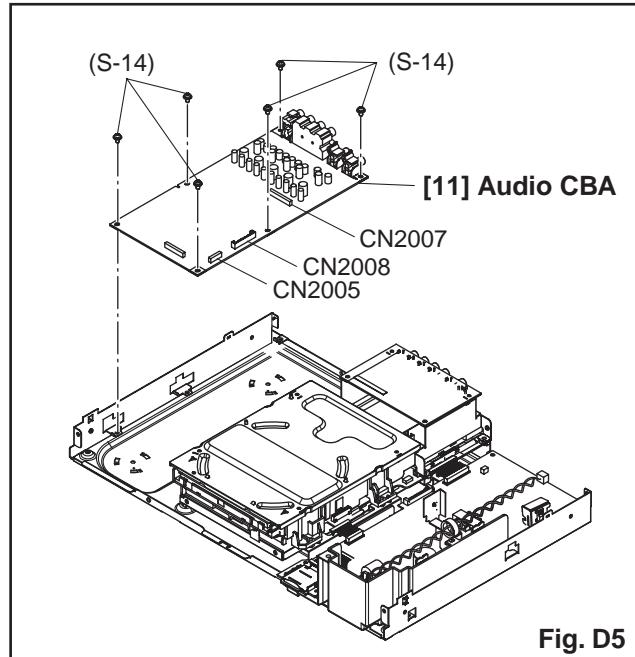


Fig. D5


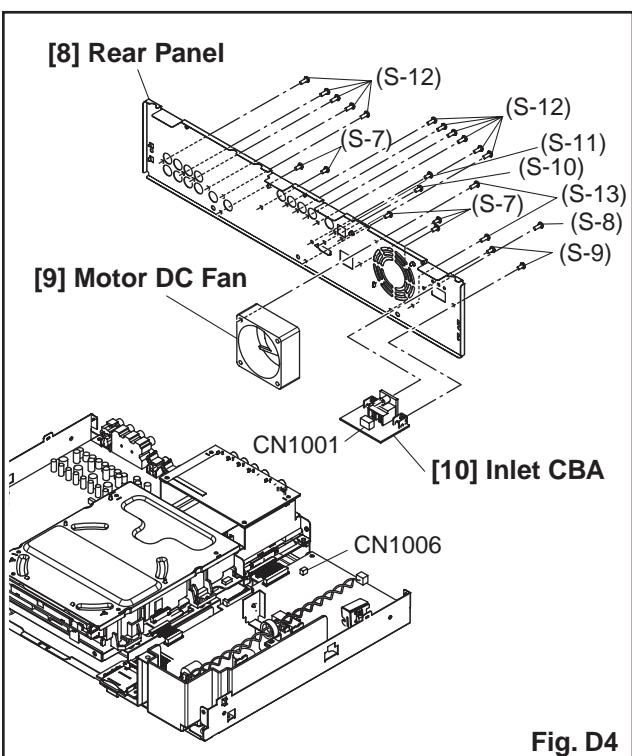


Fig. D4

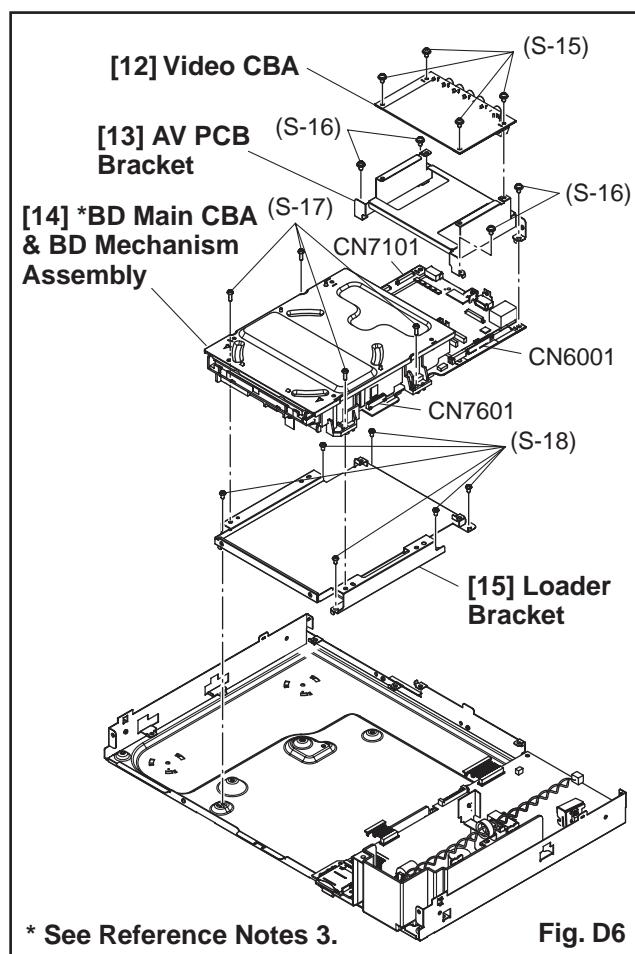

\* See Reference Notes 3.

Fig. D6


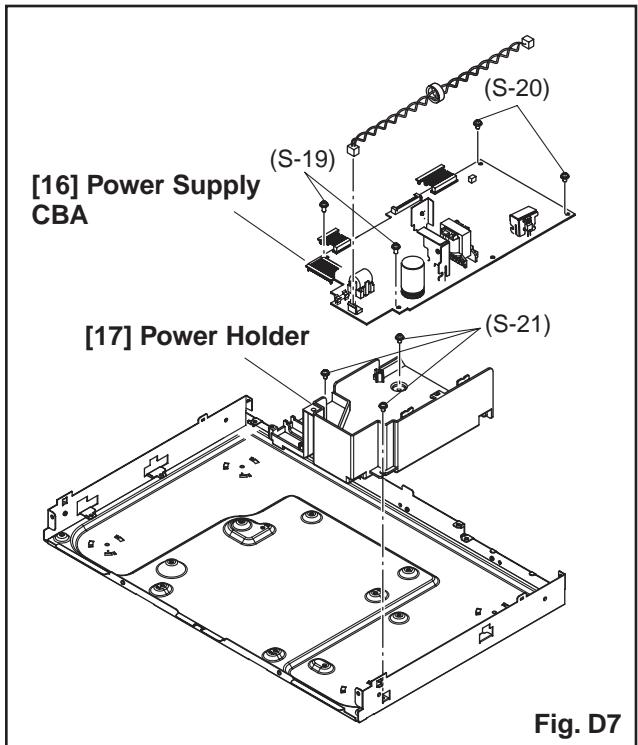


Fig. D7

### 3. How to Eject Manually

1. Remove the Top Cover.
2. Insert a screwdriver, etc. into the straightly so that the Portion A is pushed.
3. Pull the tray out manually and remove a disc.

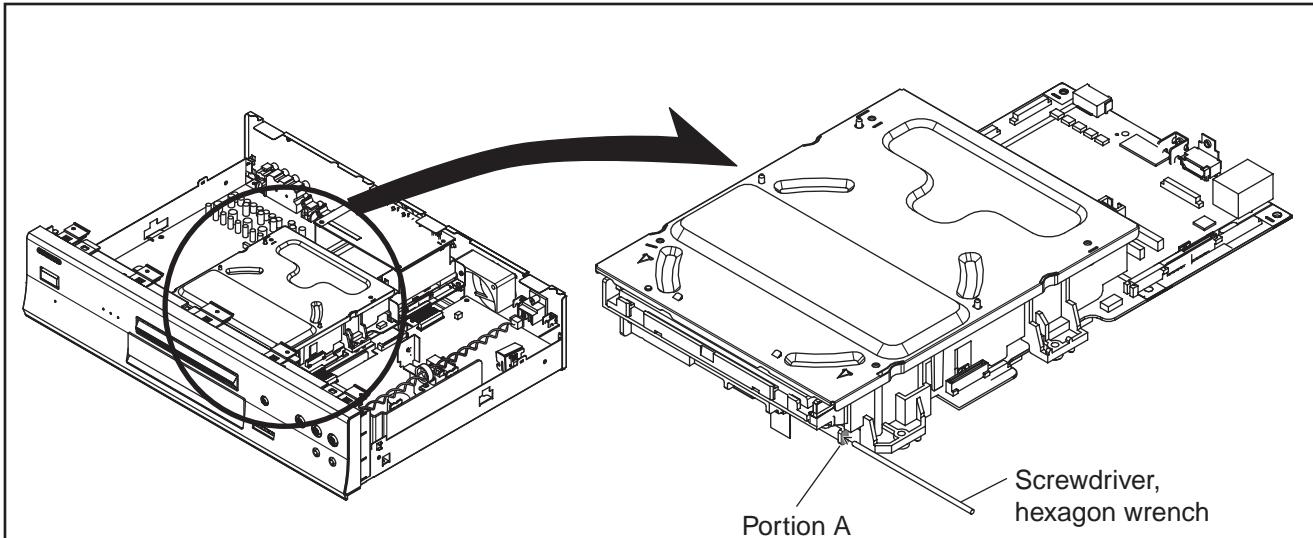

# HOW TO INITIALIZE THE BLU-RAY DISC PLAYER

To put the program back at the factory-default, initialize the BD player as the following procedure.

1. Turn the power on.
2. Remove the disc on the tray and close the tray.
3. Press [1], [2], [3], [4], and [DISPLAY] buttons on the remote control unit in that order.

Fig. a appears on the screen.

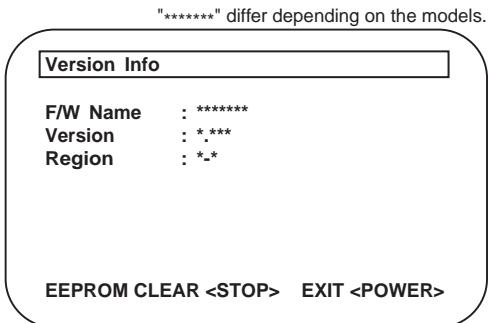


Fig. a

4. Press [ ] button on the remote control unit.

Fig. b appears on the screen and Fig. c appears on the VFD.

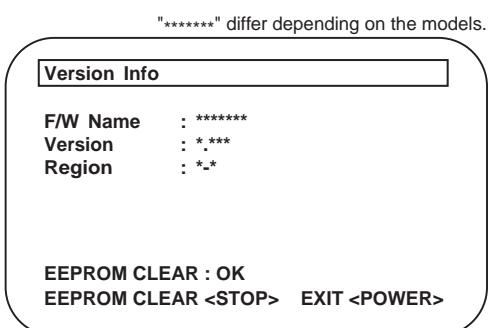


Fig. b

**CLEAR**

Fig. c

5. To exit this mode, press [ON/STANDBY] button.

# FIRMWARE RENEWAL MODE

**Note:** The file extension of the available firmware is "b20".

1. Turn the power on and remove the disc on the tray and close the tray.
2. To put the BD player into version up mode, press [9], [8], [7], [6], and [POP UP MENU/MENU] buttons on the remote control unit in that order. The tray will open automatically.  
Fig. a appears on the screen and Fig. b appears on the VFD.

"\*\*\*\*\*" differs depending on the models.

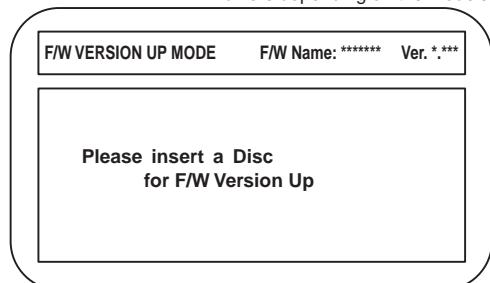


Fig. a Version Up Mode Screen



Fig. b VFD in Version Up Mode

3. Load the disc for version up.
4. The BD player enters the F/W version up mode automatically. Fig. c appears on the screen and Fig. d appears on the VFD. Make sure to insert the proper F/W for the state of this model.

"\*\*\*\*\*" differs depending on the models.

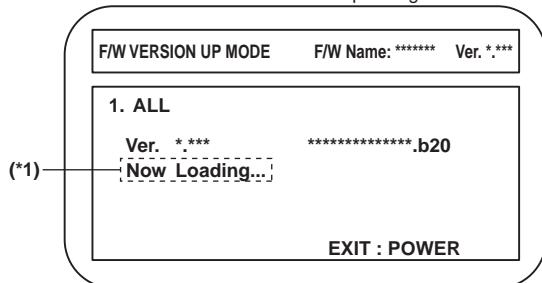


Fig. c Programming Mode Screen (Example)



Fig. d VFD in Programming Mode (Example)

The appearance shown in (\*) of Fig. c is described as follows:

| No. | Appearance     | State  |
|-----|----------------|--|
| 1   | Now Loading... | Loading the disc   |
| 2   | Reading...     | Sending files into the memory.   |
| 3   | See FL Display | Writing new version data, the progress will be displayed as shown in Fig. e. |

26%

Fig. e VFD in Version Up Mode

5. After programming is finished, the checksum on the VFD (Fig. f).

F3A8

Fig. f VFD upon Finishing the Programming Mode (Example)

Checksum appears on the VFD then the tray will open automatically. Remove the disc on the tray. At this time, no button is available.

6. Unplug the AC cord from the AC outlet. Then plug it again.
7. Turn the power on.
8. Press [1], [2], [3], [4], and [DISPLAY] buttons on the remote control unit in that order.

Fig. g appears on the screen.

"\*\*\*\*\*" differ depending on the models.

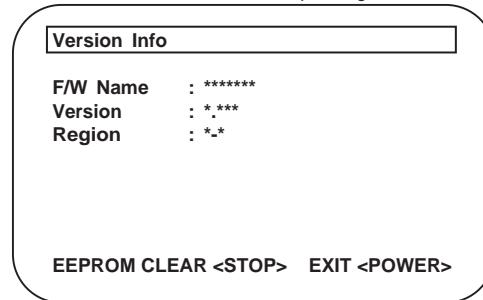


Fig. g

9. Press [■] button on the remote control unit.  
Fig. h appears on the screen and Fig. i appears on the VFD.

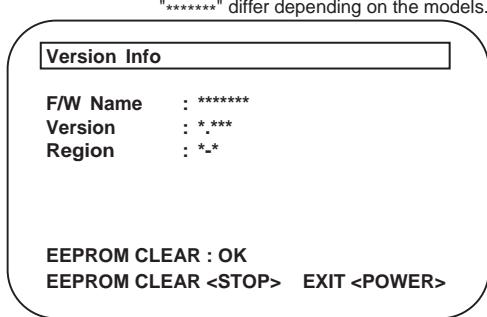


Fig. h

**CLEAR**

Fig. i

10. To exit this mode, press [ON/STANDBY] button.

## How to Verify the Firmware Version

1. Turn the power on.
2. Remove the disc on the tray and close the tray.
3. Press [1], [2], [3], [4], and [DISPLAY] buttons on the remote control unit in that order.

Fig. j appears on the screen.


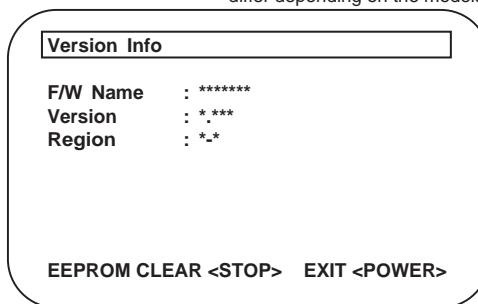


Fig. j


4. To exit this mode, press [ON/STANDBY] button.

# BLOCK DIAGRAMS


## System Control Block Diagram

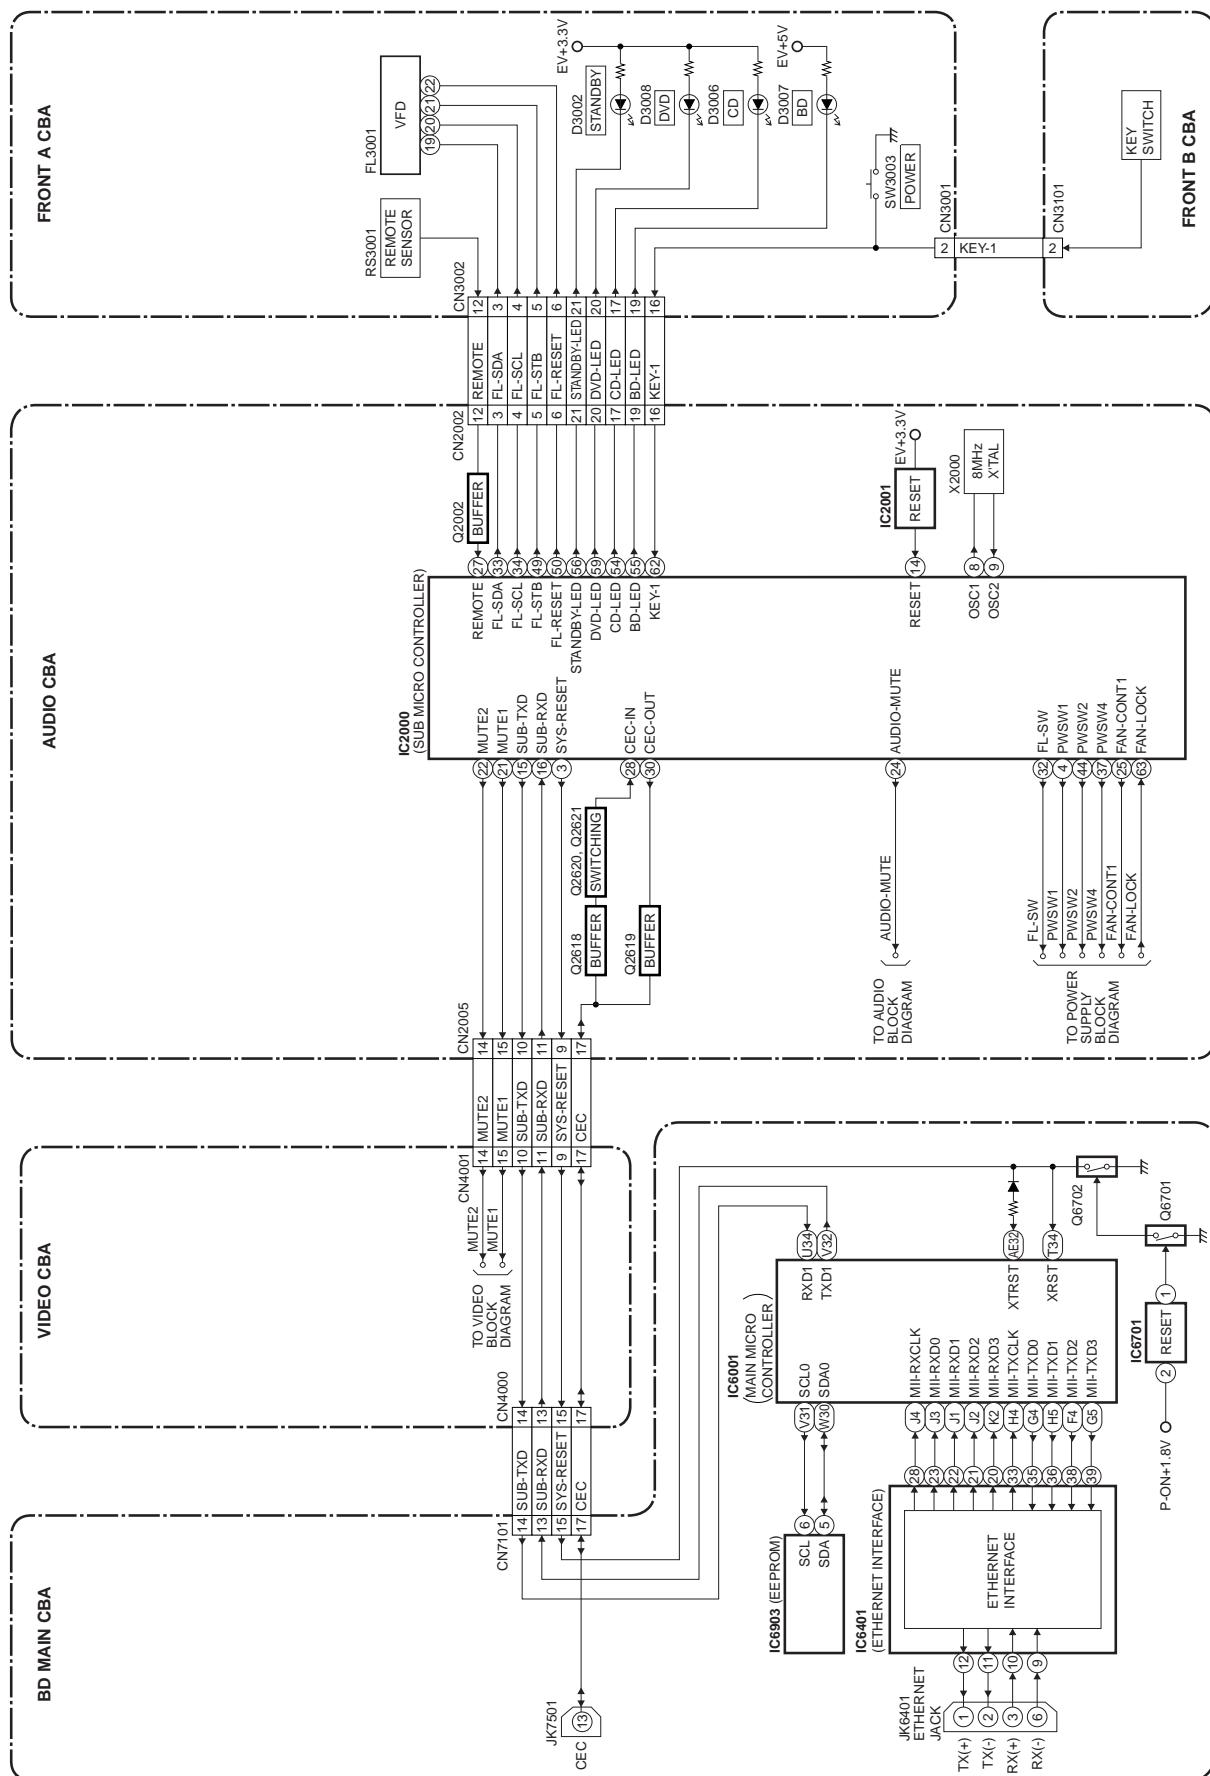


# Digital Signal Process 1 Block Diagram

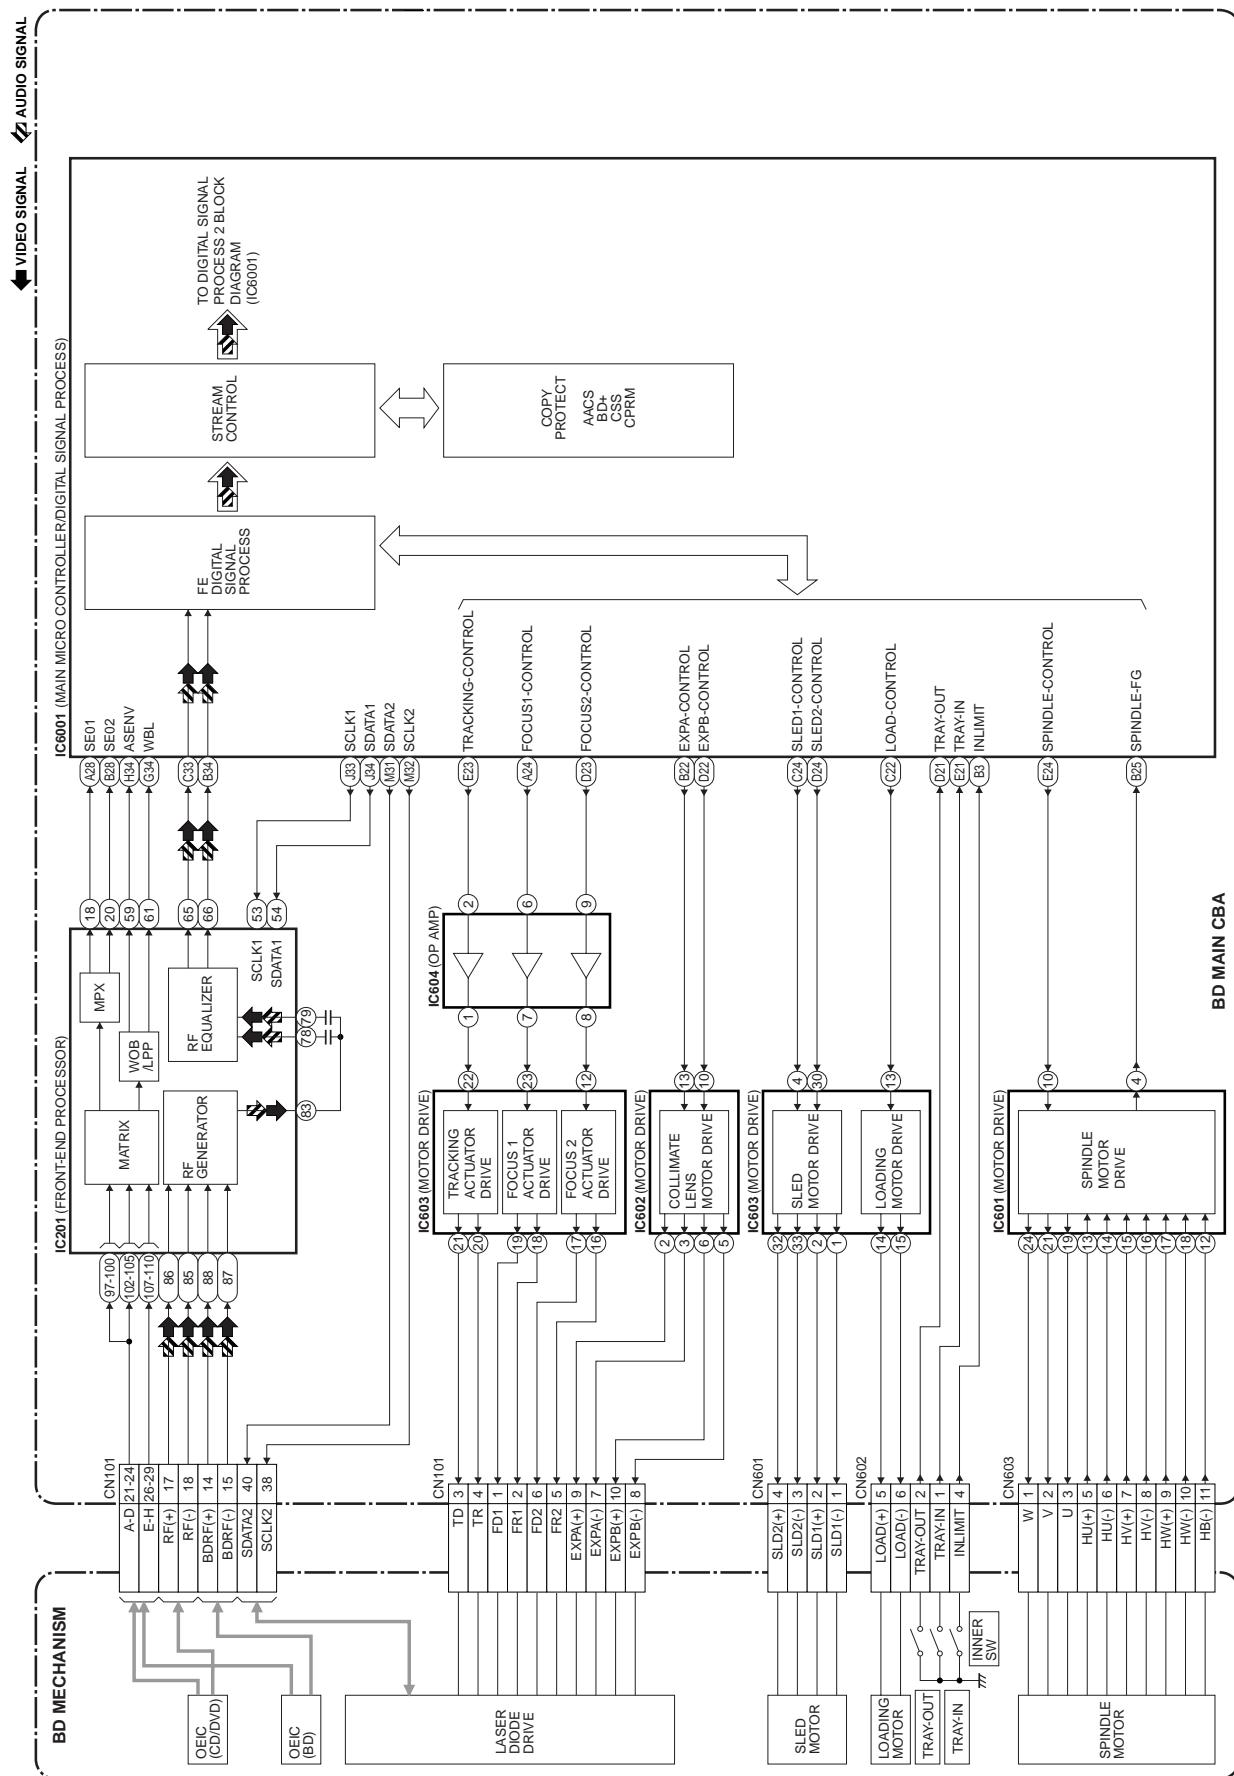


# Digital Signal Process 2 Block Diagram

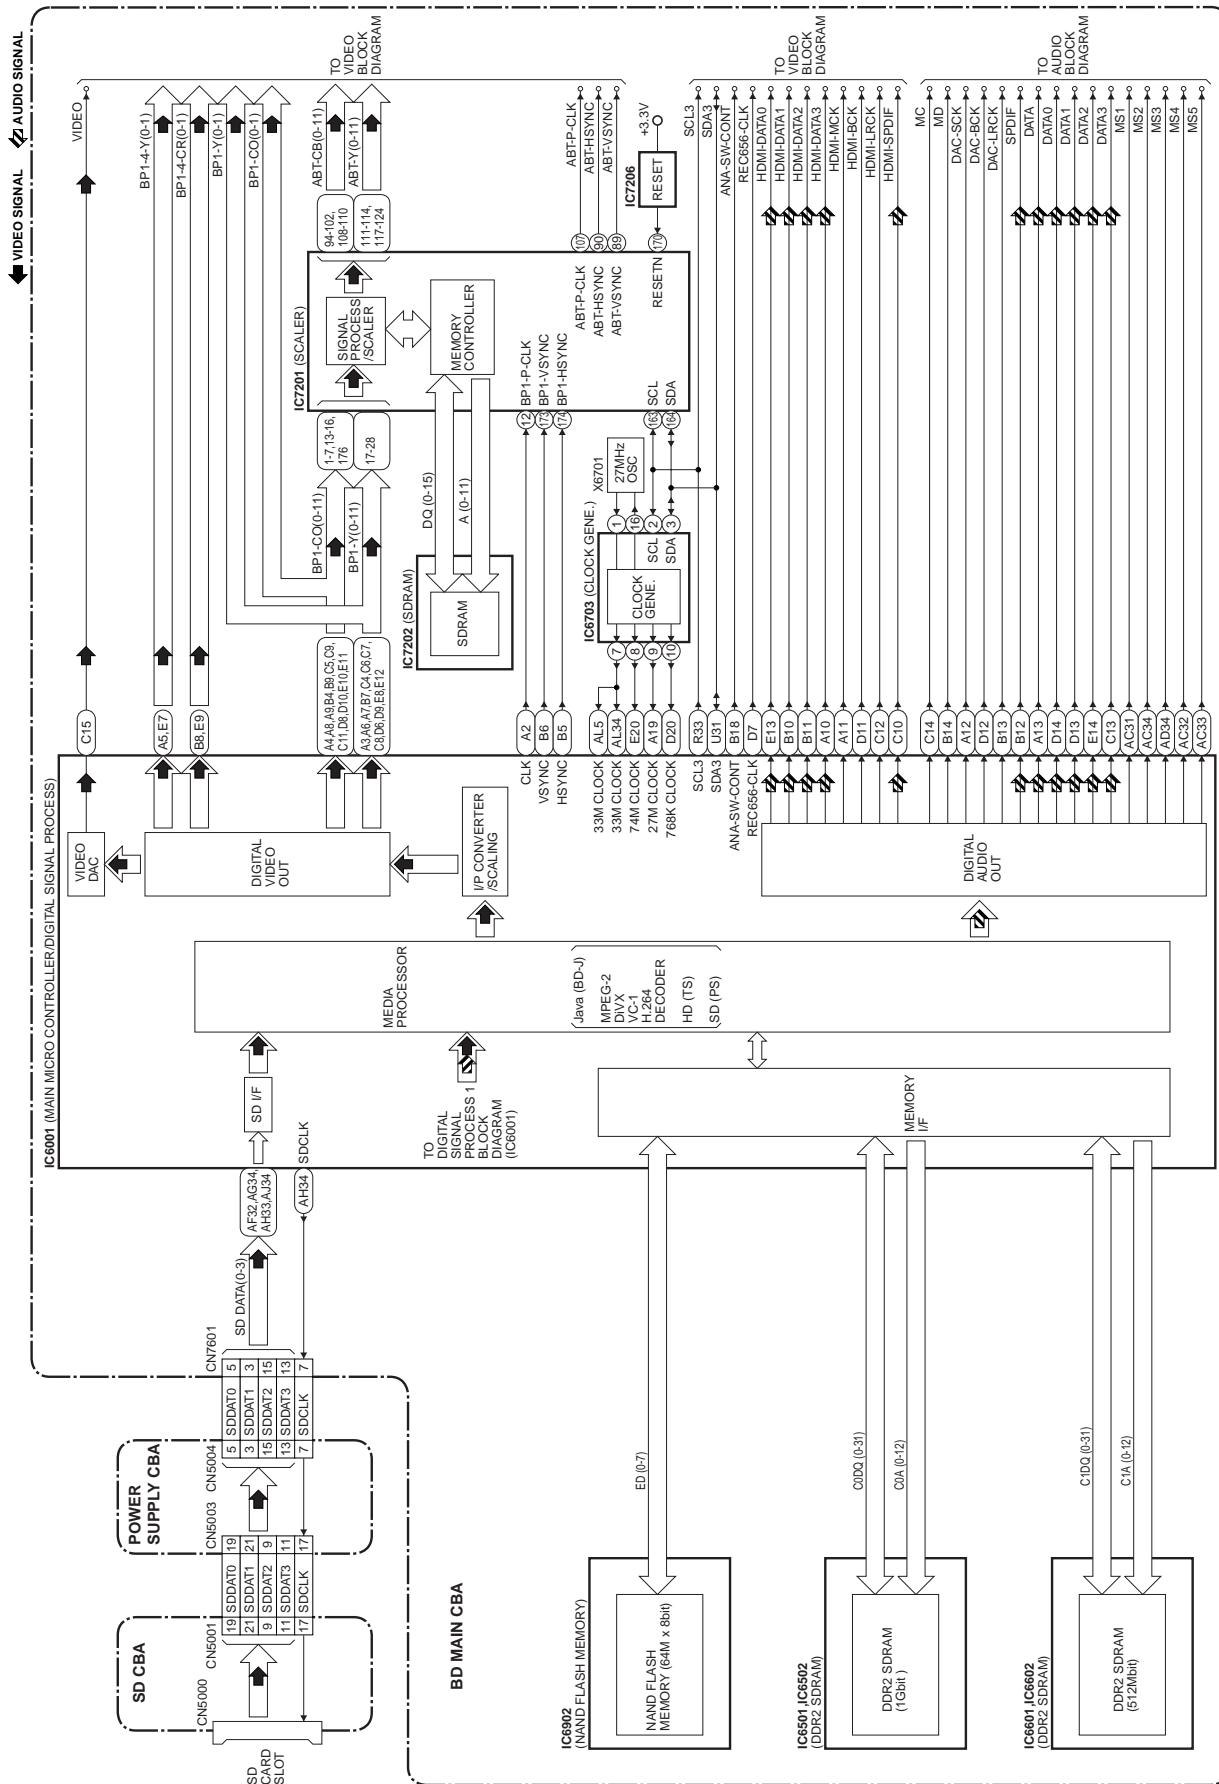

# Video Block Diagram

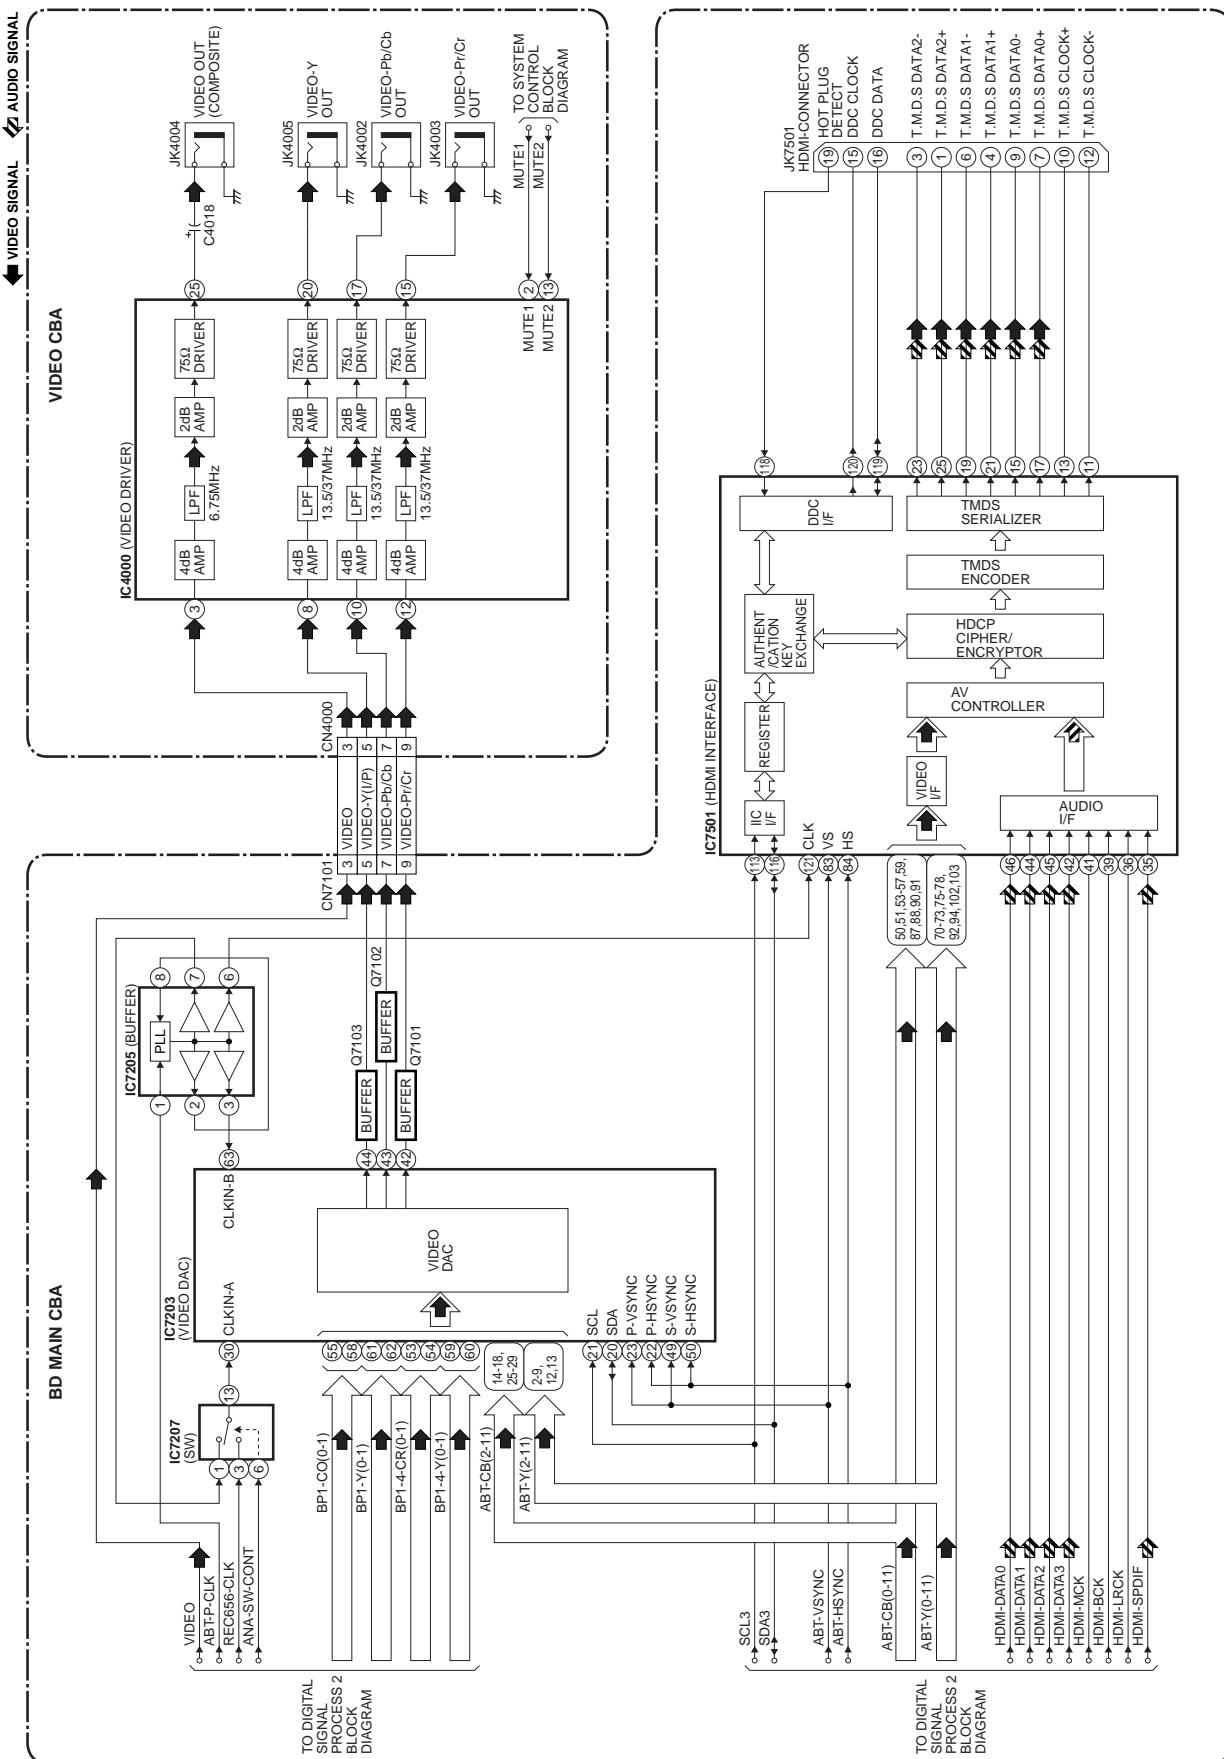


# Audio Block Diagram

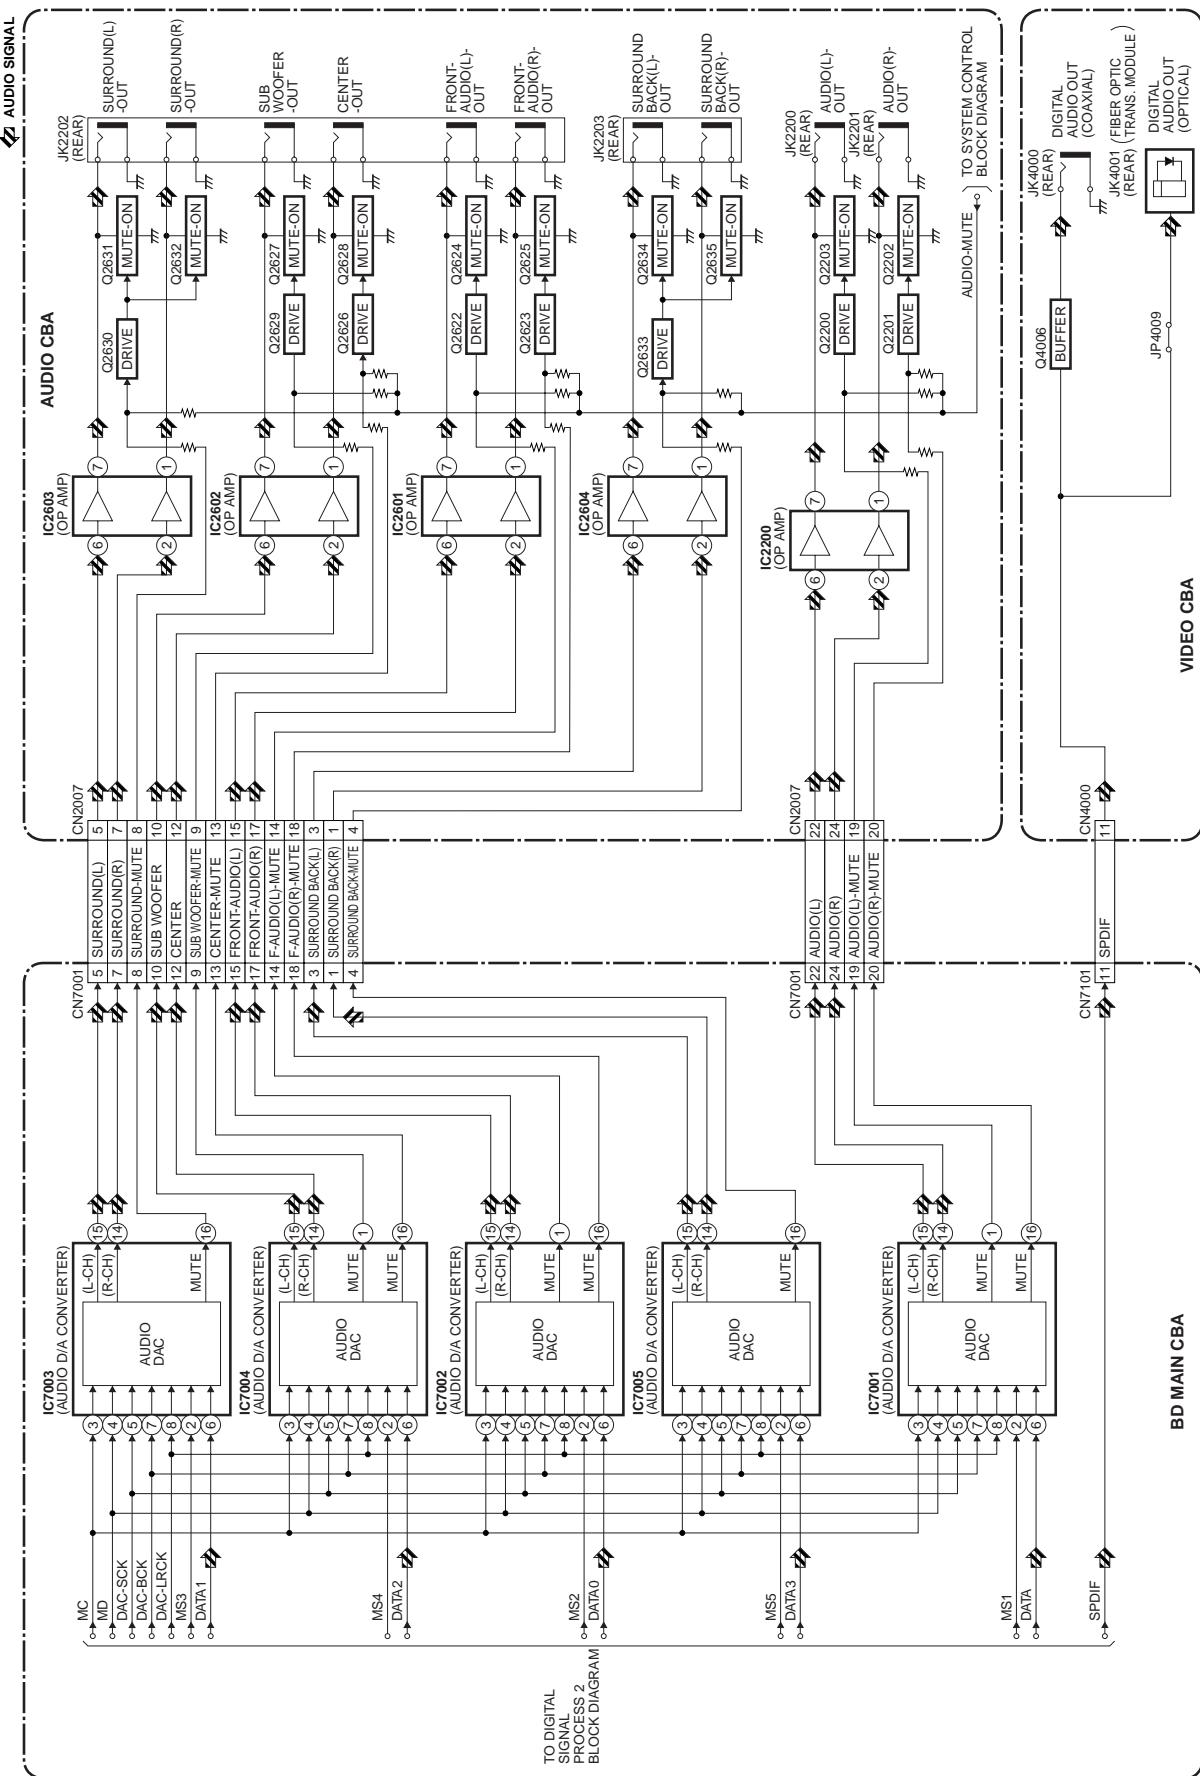

# Power Supply Block Diagram

**CAUTION !**  
Fixed voltage (or Auto voltage selectable) power supply circuit is used in this unit.  
If Main Fuse (F1001) is blown, check to see that all components in the power supply circuit are not defective before you connect the AC plug to the AC power supply.  
Otherwise it may cause some components in the power supply circuit to fail.

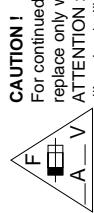

**NOTE:**  
The voltage for parts in hot circuit is measured using hot GND as a common terminal.

-■-

-■-

-■-

-■-

-■-

-■-

-■-

-■-

-■-

-■-

-■-

-■-

-■-

-■-

-■-

-■-

-■-

-■-

-■-

-■-

-■-

-■-

-■-

-■-

-■-

-■-

-■-

-■-

-■-

-■-

-■-

-■-

-■-

-■-

-■-

-■-

-■-

-■-

-■-

-■-

-■-

-■-

-■-

-■-

-■-

-■-

-■-

-■-

-■-

-■-

-■-

-■-

-■-

-■-

-■-

-■-


**CAUTION !**

For continued protection against fire hazard,  
replace only with the same type fuse.

**ATTENTION :** Pour une protection continue les risques  
d'incendie n'utiliser que des fusible de même type.

**Risk of fire-replace fuse as marked.**

"Ce symbole représente un fusible à fusion rapide."

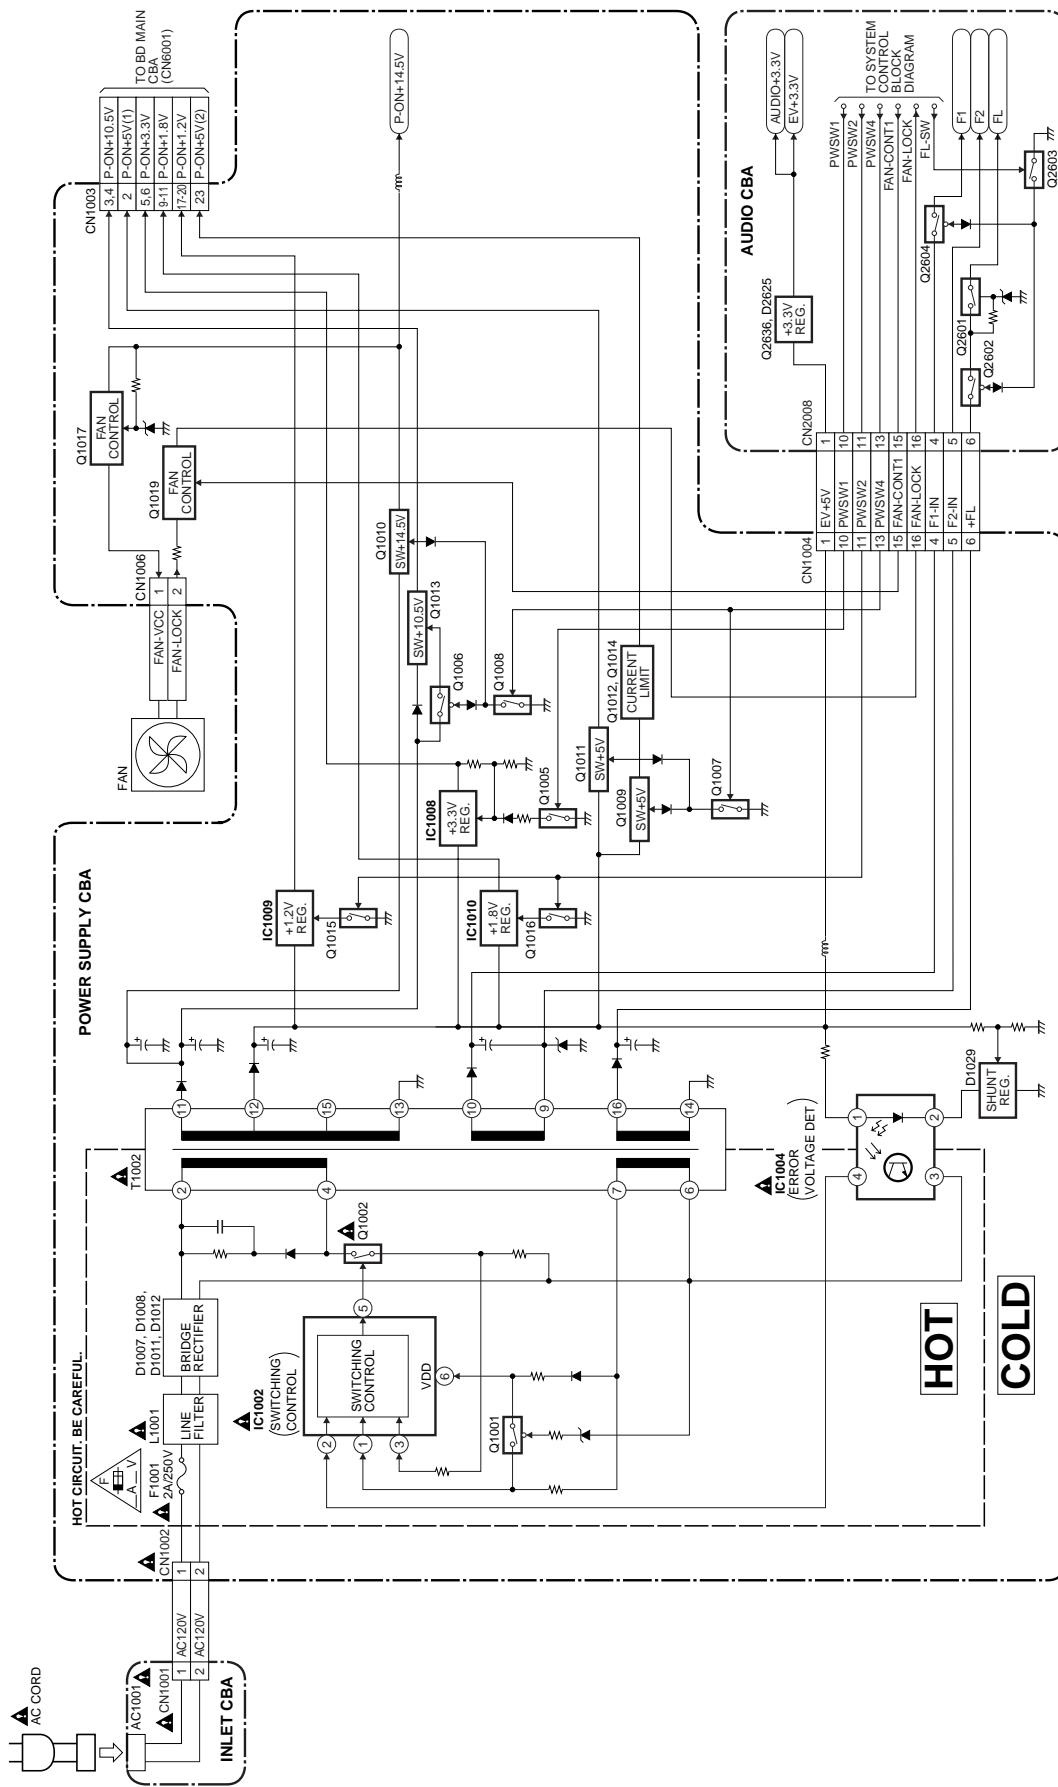

# SCHEMATIC DIAGRAMS / CBA AND TEST POINTS

## Standard Notes

### WARNING


Many electrical and mechanical parts in this chassis have special characteristics. These characteristics often pass unnoticed and the protection afforded by them cannot necessarily be obtained by using replacement components rated for higher voltage, wattage, etc. Replacement parts that have these special safety characteristics are identified in this manual and its supplements; electrical components having such features are identified by the mark "▲" in the schematic diagram and the parts list. Before replacing any of these components, read the parts list in this manual carefully. The use of substitute replacement parts that do not have the same safety characteristics as specified in the parts list may create shock, fire, or other hazards.

### Notes:

1. Do not use the part number shown on these drawings for ordering. The correct part number is shown in the parts list, and may be slightly different or amended since these drawings were prepared.
2. All resistance values are indicated in ohms ( $K = 10^3$ ,  $M = 10^6$ ).
3. Resistor wattages are 1/4W or 1/6W unless otherwise specified.
4. All capacitance values are indicated in  $\mu F$  ( $P = 10^{-6} \mu F$ ).
5. All voltages are DC voltages unless otherwise specified.
6. Electrical parts such as capacitors, connectors, diodes, IC's, transistors, resistors, switches, and fuses are identified by four digits. The first two digits are not shown for each component. In each block of the diagram, there is a note such as shown below to indicate these abbreviated two digits.

## LIST OF CAUTION, NOTES, AND SYMBOLS USED IN THE SCHEMATIC DIAGRAMS ON THE FOLLOWING PAGES:

### 1. CAUTION:

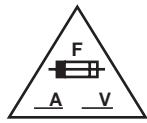

FOR CONTINUED PROTECTION AGAINST FIRE HAZARD, REPLACE ONLY WITH THE SAME TYPE FUSE.

ATTENTION: POUR UNE PROTECTION CONTINUE LES RISQUES D'INCENDIE N'UTILISER QUE DES FUSIBLES DU MÊME TYPE.

RISK OF FIRE-REPLACE FUSE AS MARKED.



This symbol means fast operating fuse.

Ce symbole représente un fusible à fusion rapide.

### 2. CAUTION:


Fixed Voltage (or Auto voltage selectable) power supply circuit is used in this unit.

If Main Fuse (F1001) is blown, first check to see that all components in the power supply circuit are not defective before you connect the AC plug to the AC power supply. Otherwise it may cause some components in the power supply circuit to fail.

### 3. Note:

1. Do not use the part number shown on the drawings for ordering. The correct part number is shown in the parts list, and may be slightly different or amended since the drawings were prepared.
2. To maintain original function and reliability of repaired units, use only original replacement parts which are listed with their part numbers in the parts list section of the service manual.

### 4. Voltage indications for PLAY and STOP mode on the schematics are as shown below:

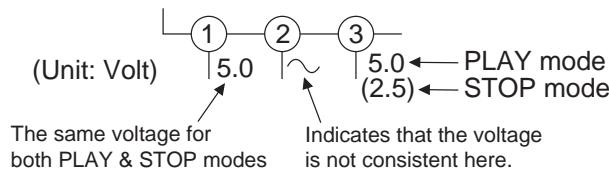


### 5. How to read converged lines

1-D3  
↑  
Distinction Area  
Line Number  
(1 to 3 digits)

Examples:

1. "1-D3" means that line number "1" goes to the line number "1" of the area "D3".
2. "1-B1" means that line number "1" goes to the line number "1" of the area "B1".

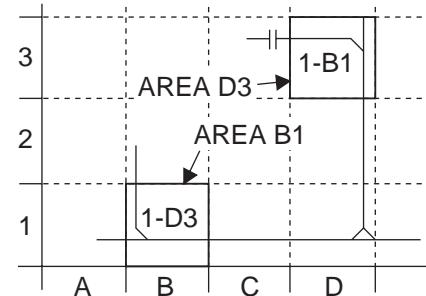

### 6. Test Point Information


○ : Indicates a test point with a jumper wire across a hole in the PCB.

□→ : Used to indicate a test point with a component lead on foil side.


○○ : Used to indicate a test point with no test pin.

● : Used to indicate a test point with a test pin.


# Audio 1/3 Schematic Diagram

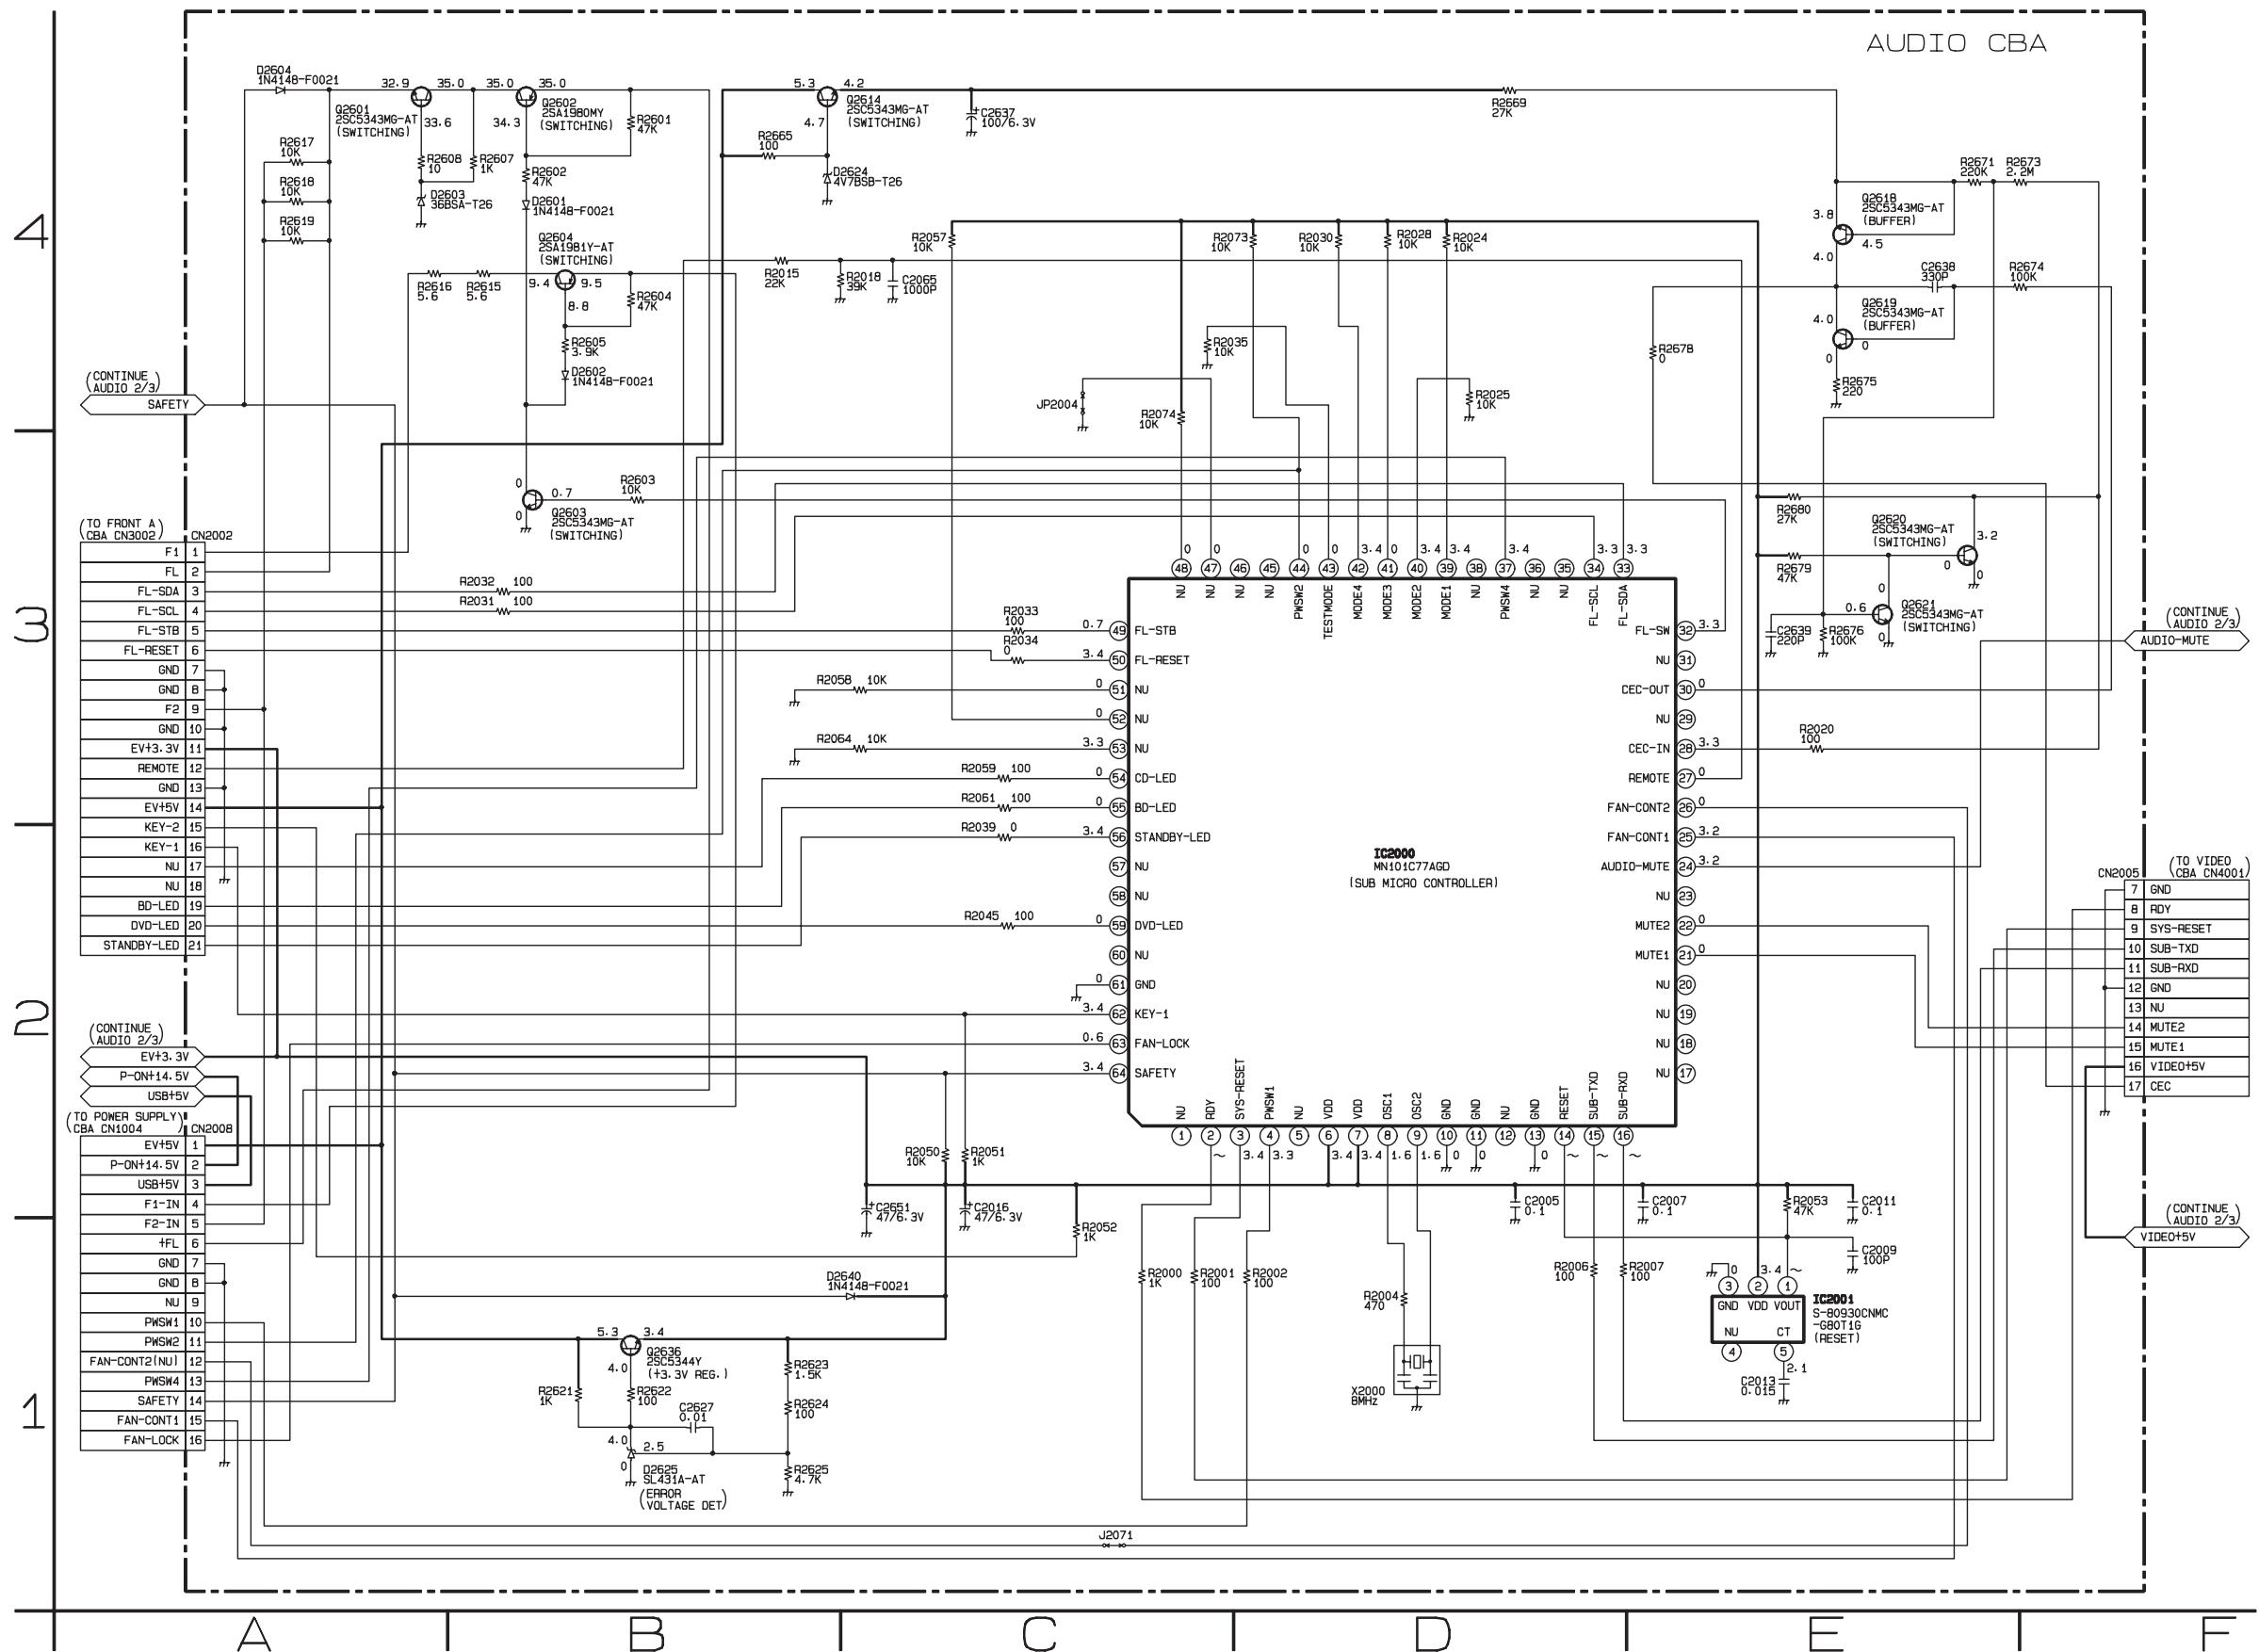


## Audio 2/3 Schematic Diagram

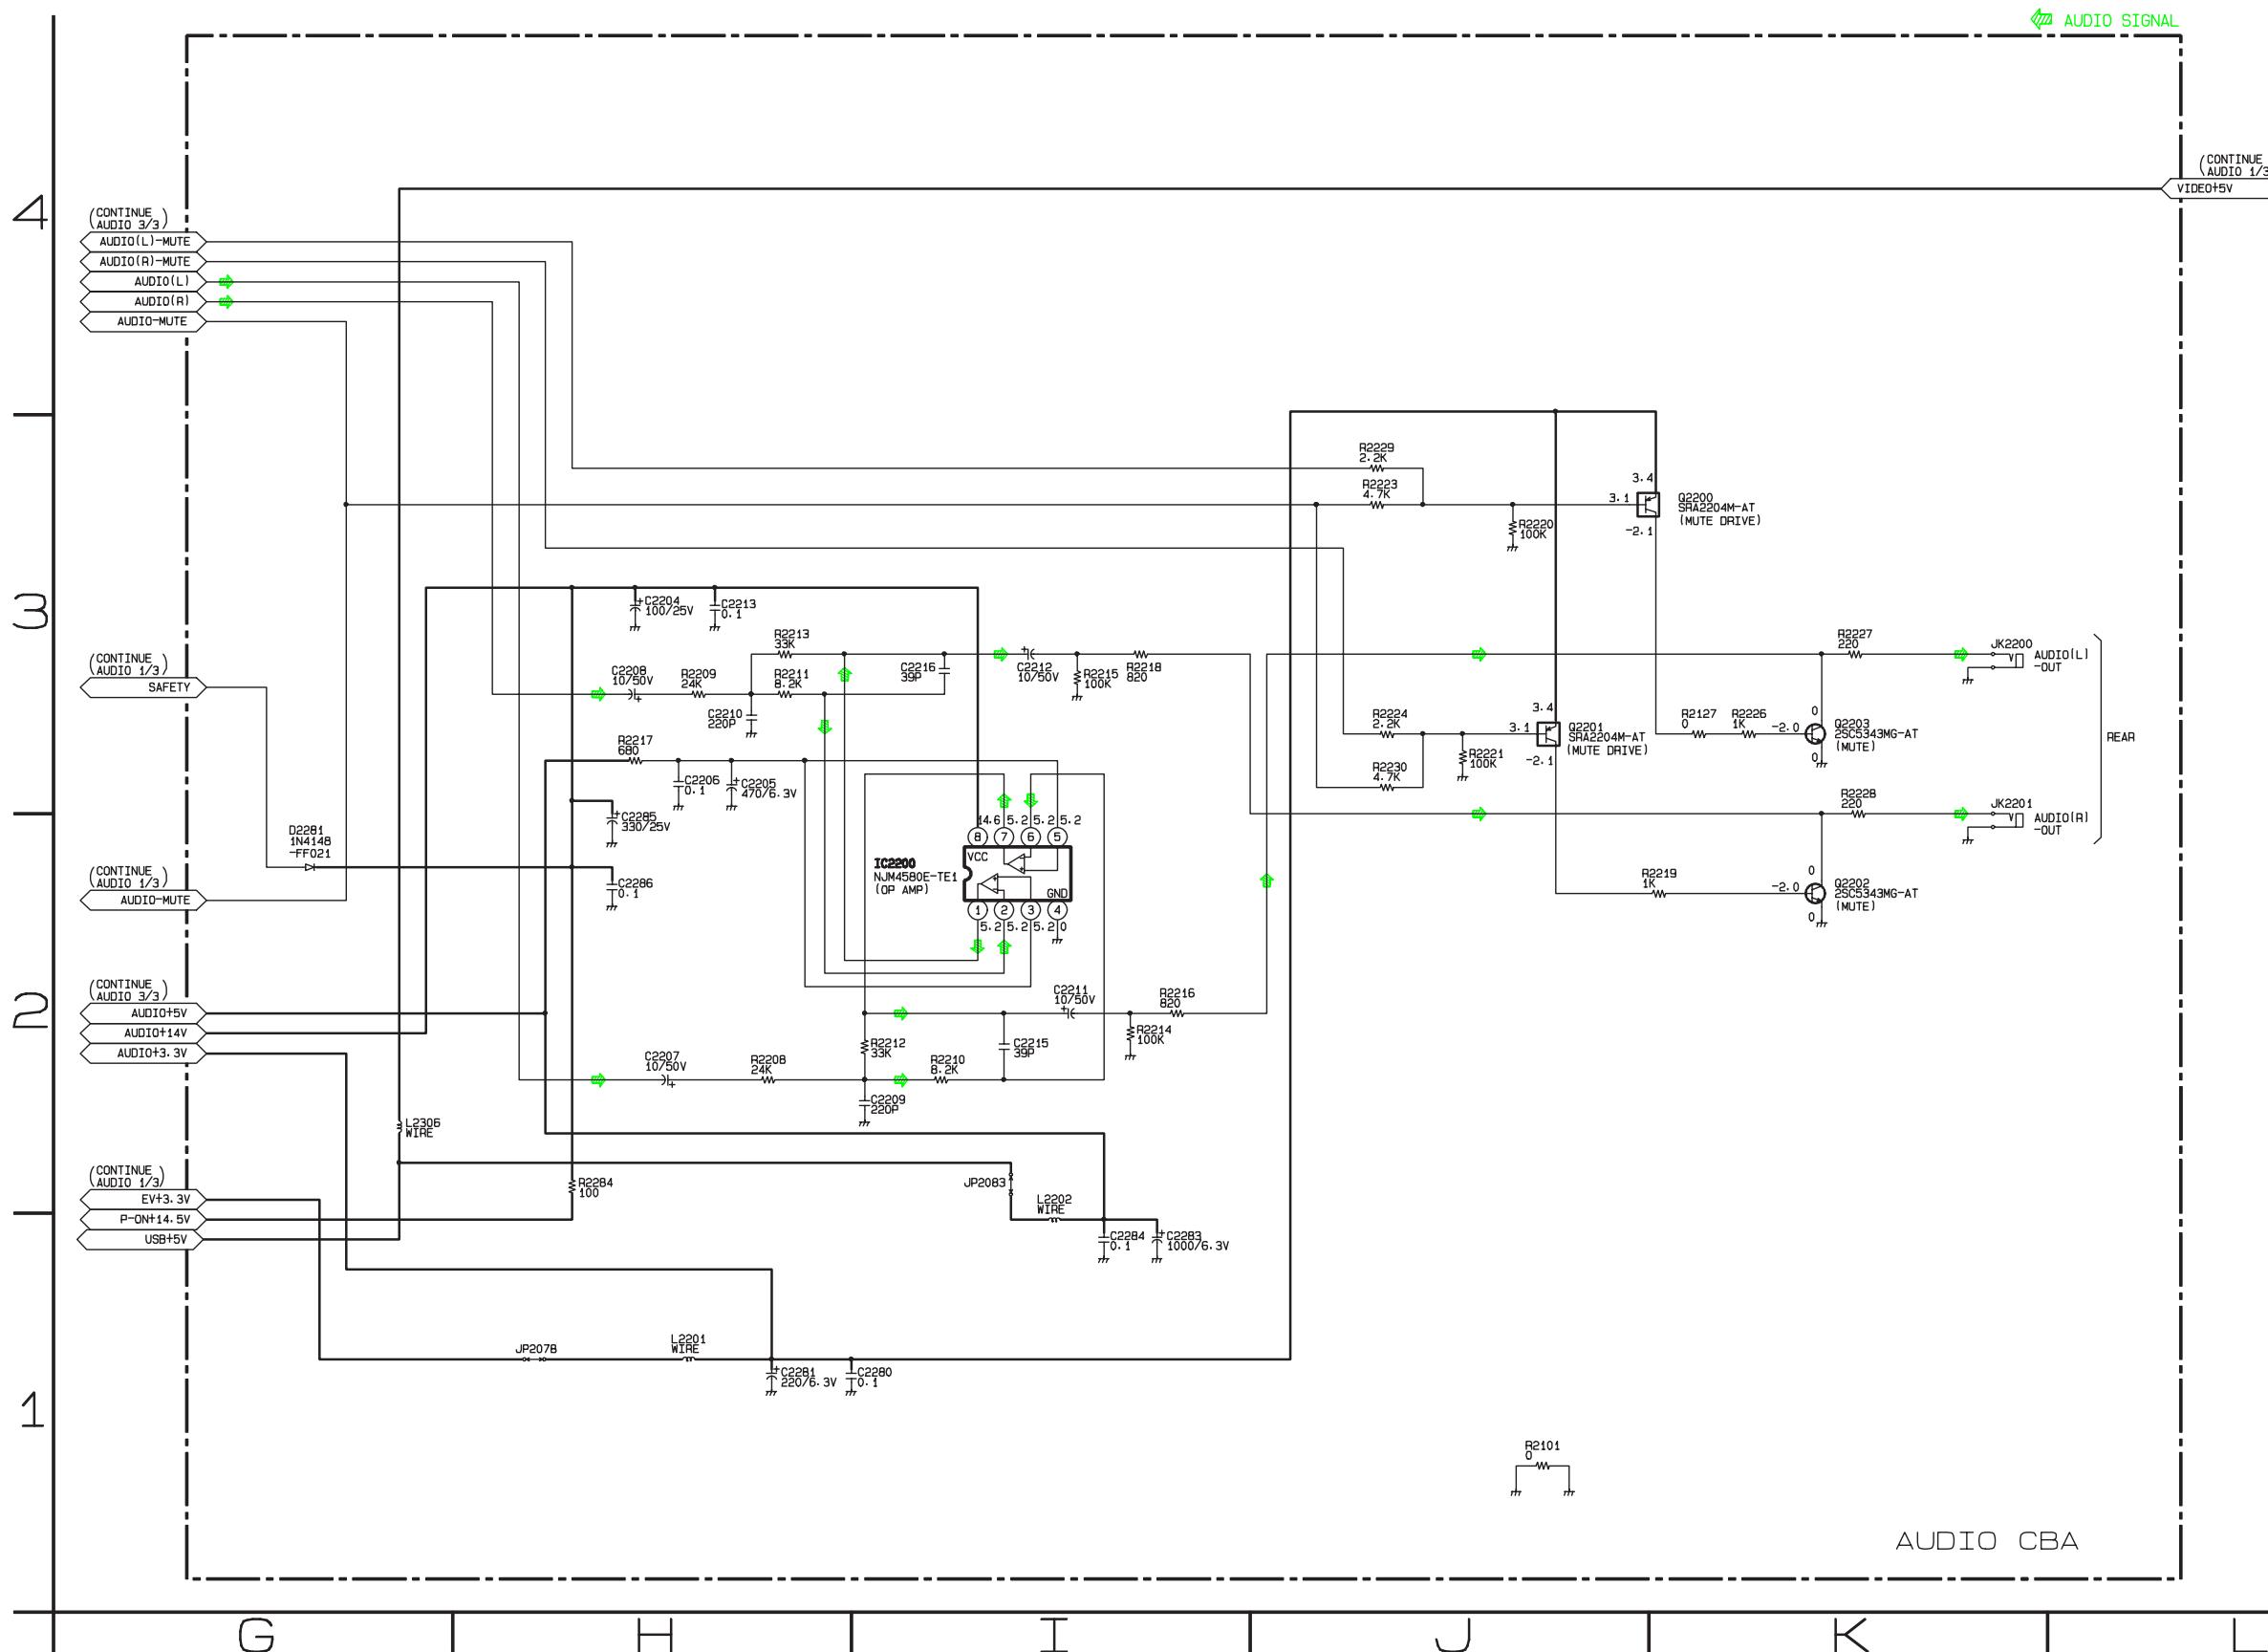

## **Audio 3/3 Schematic Diagram**

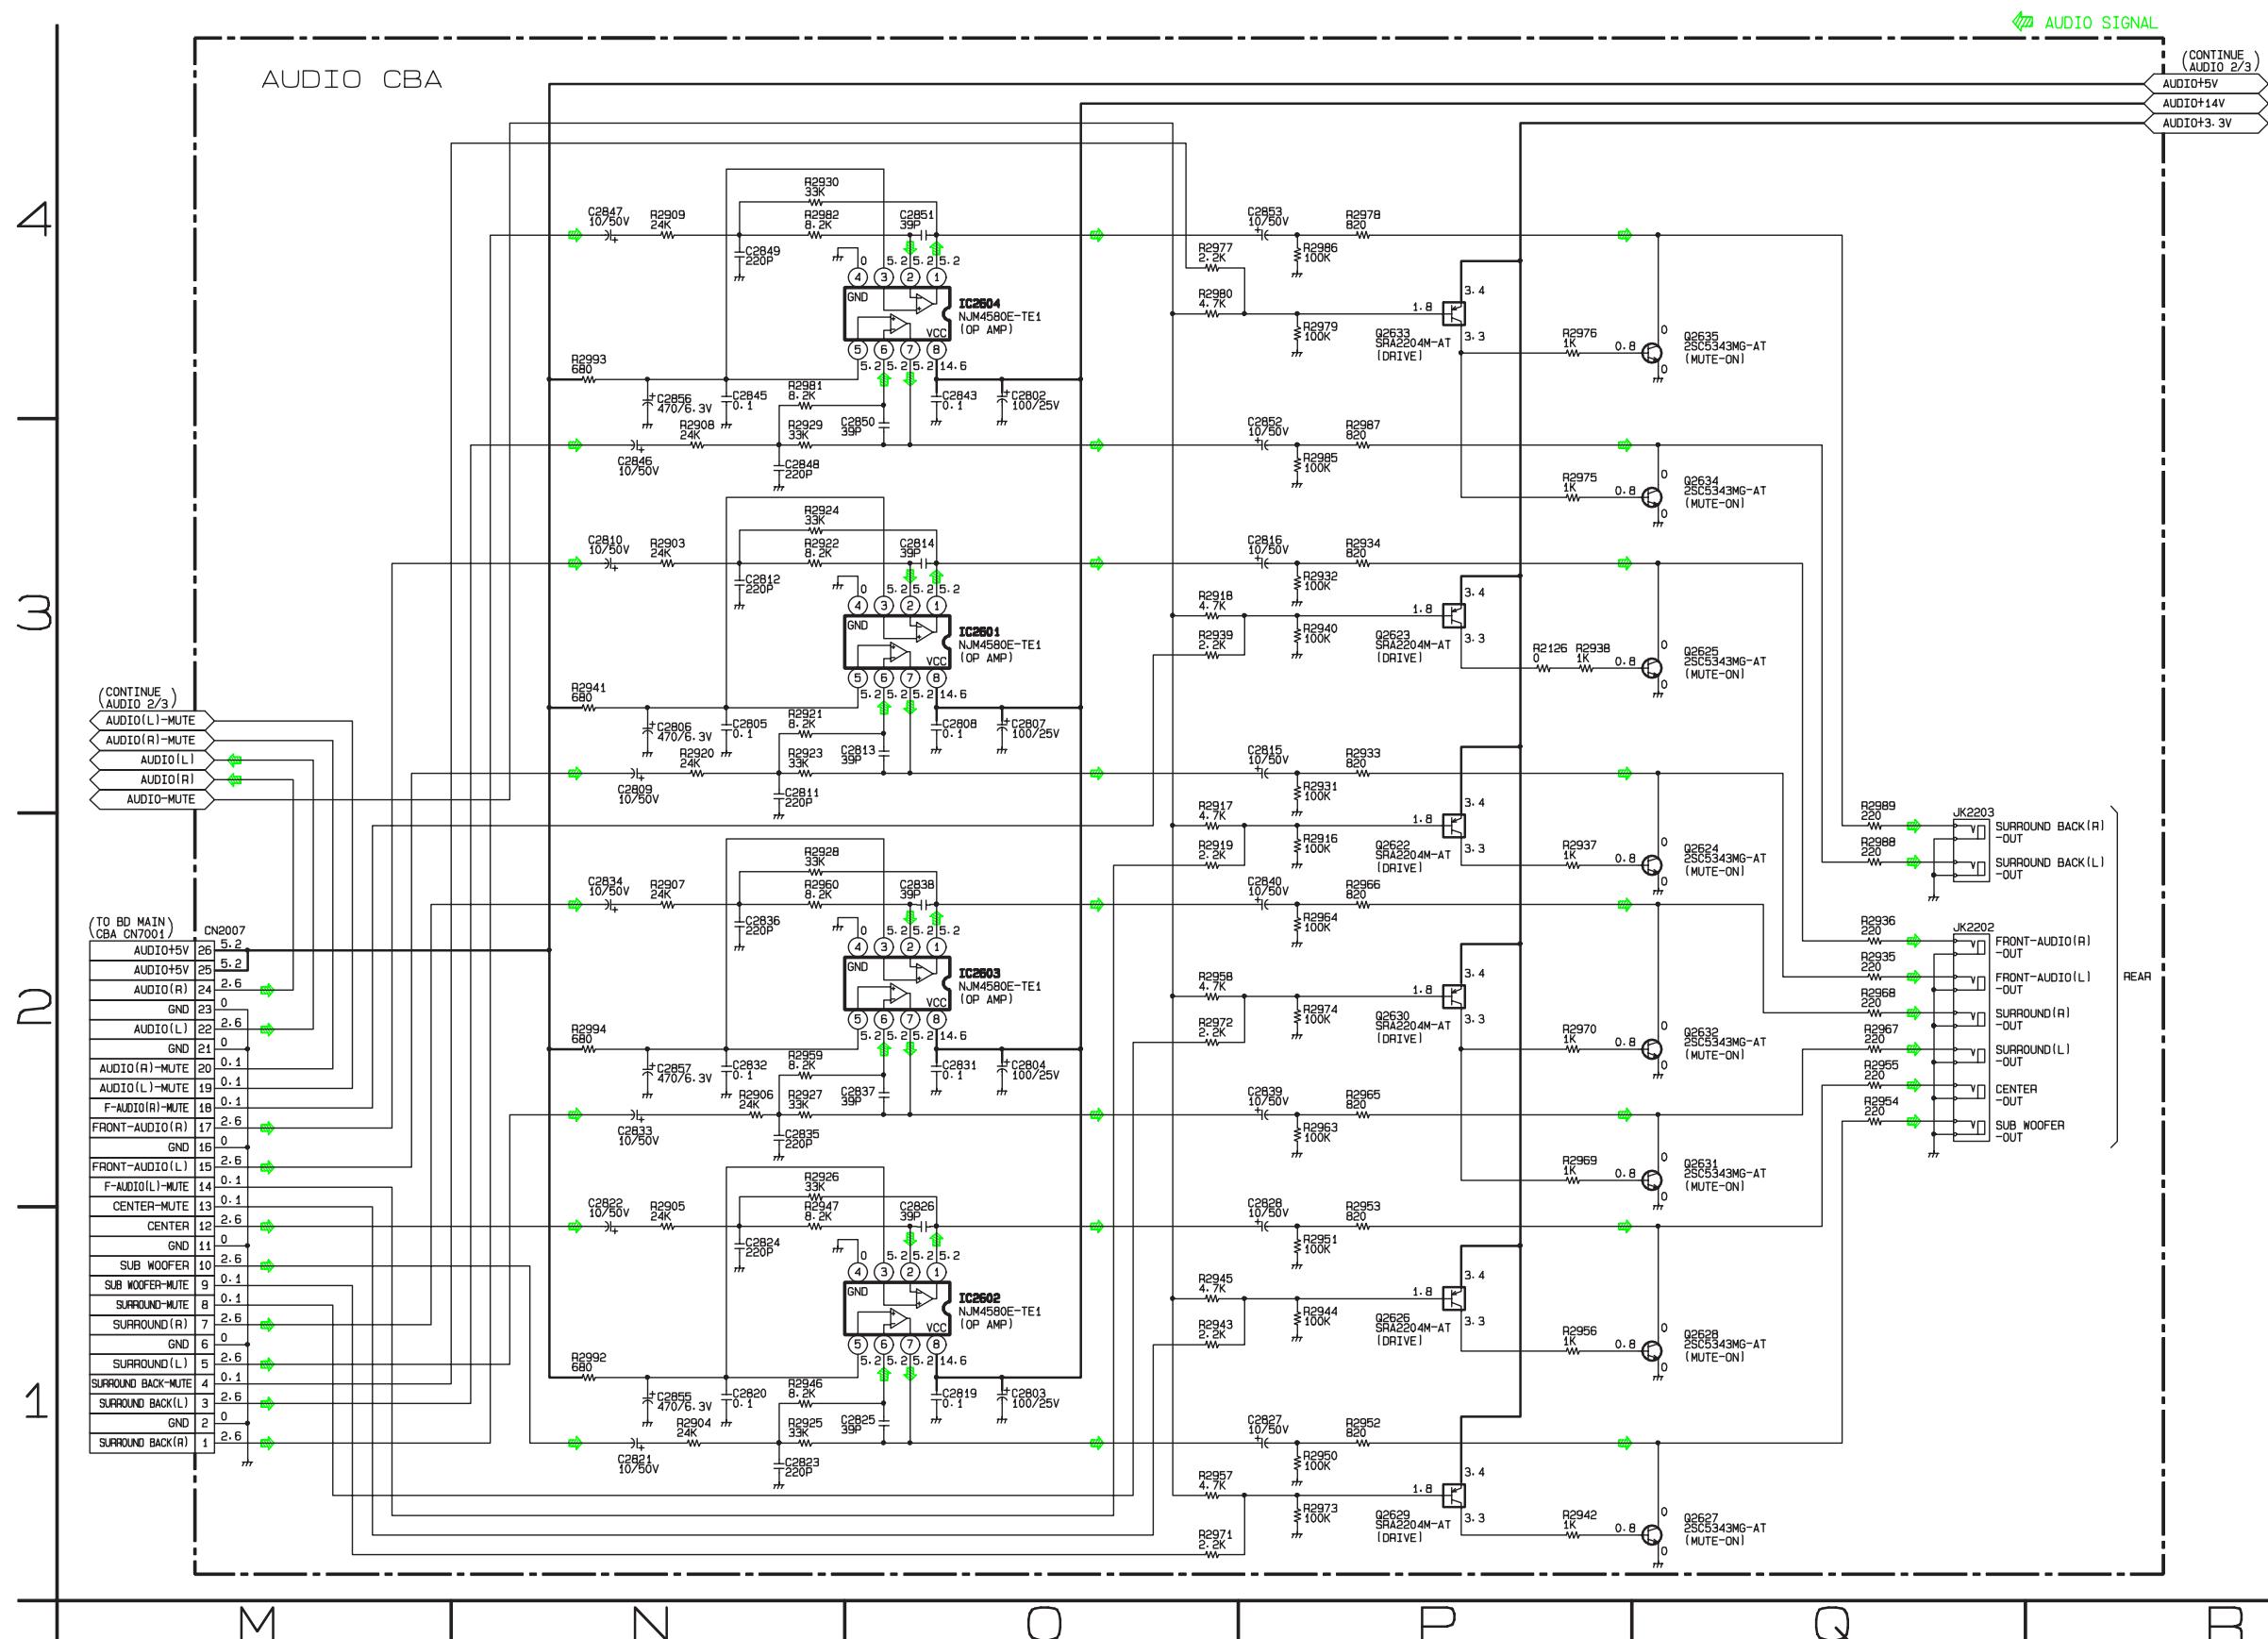


## Video Schematic Diagram

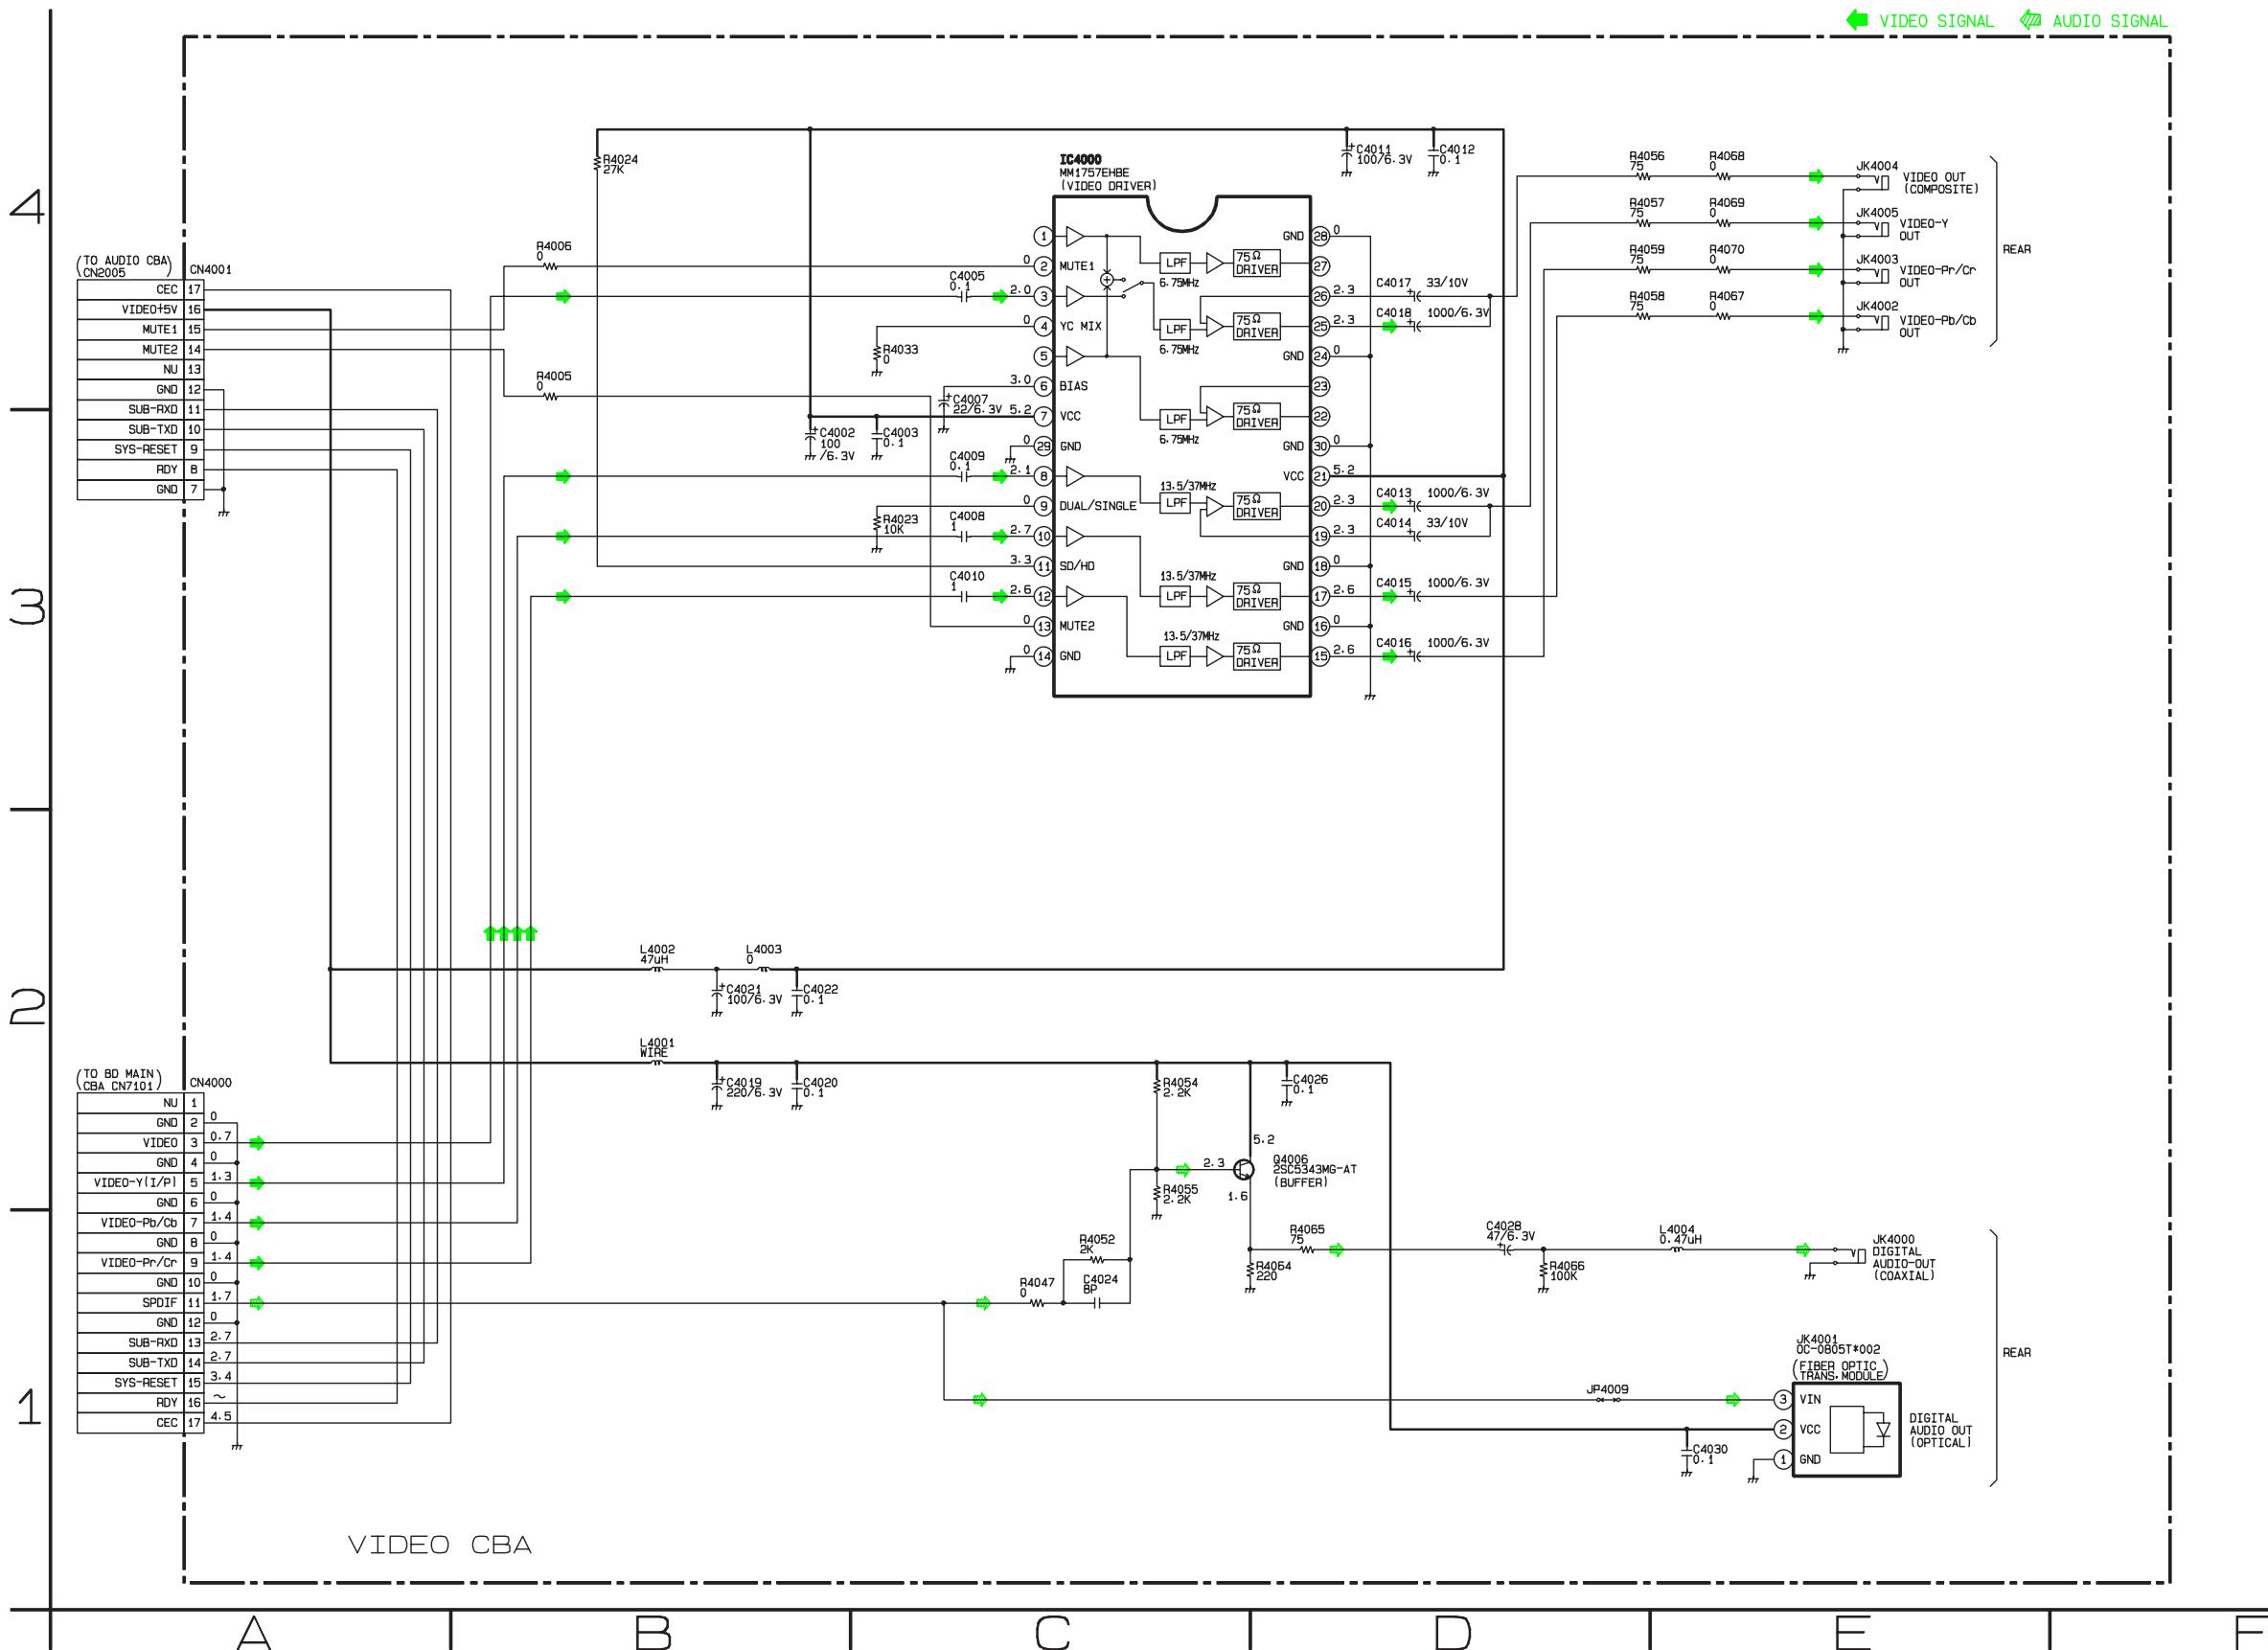

# Power Supply & Inlet Schematic Diagram

## **CAUTION !**

Fixed voltage (or Auto voltage selectable) power supply circuit is used in this unit. If Main Fuse (F1001) is blown , check to see that all components in the power supply circuit are not defective before you connect the AC plug to the AC power supply. Otherwise it may cause some components in the power supply circuit to fail.

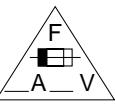


CAUTION !


**ATTENTION :** Pour une protection continue les risques d'incendie n'utiliser que des fusibles de même type.

NOT


**NOTE:** The voltage for parts in hot circuit is measured using hot GND as a common terminal.

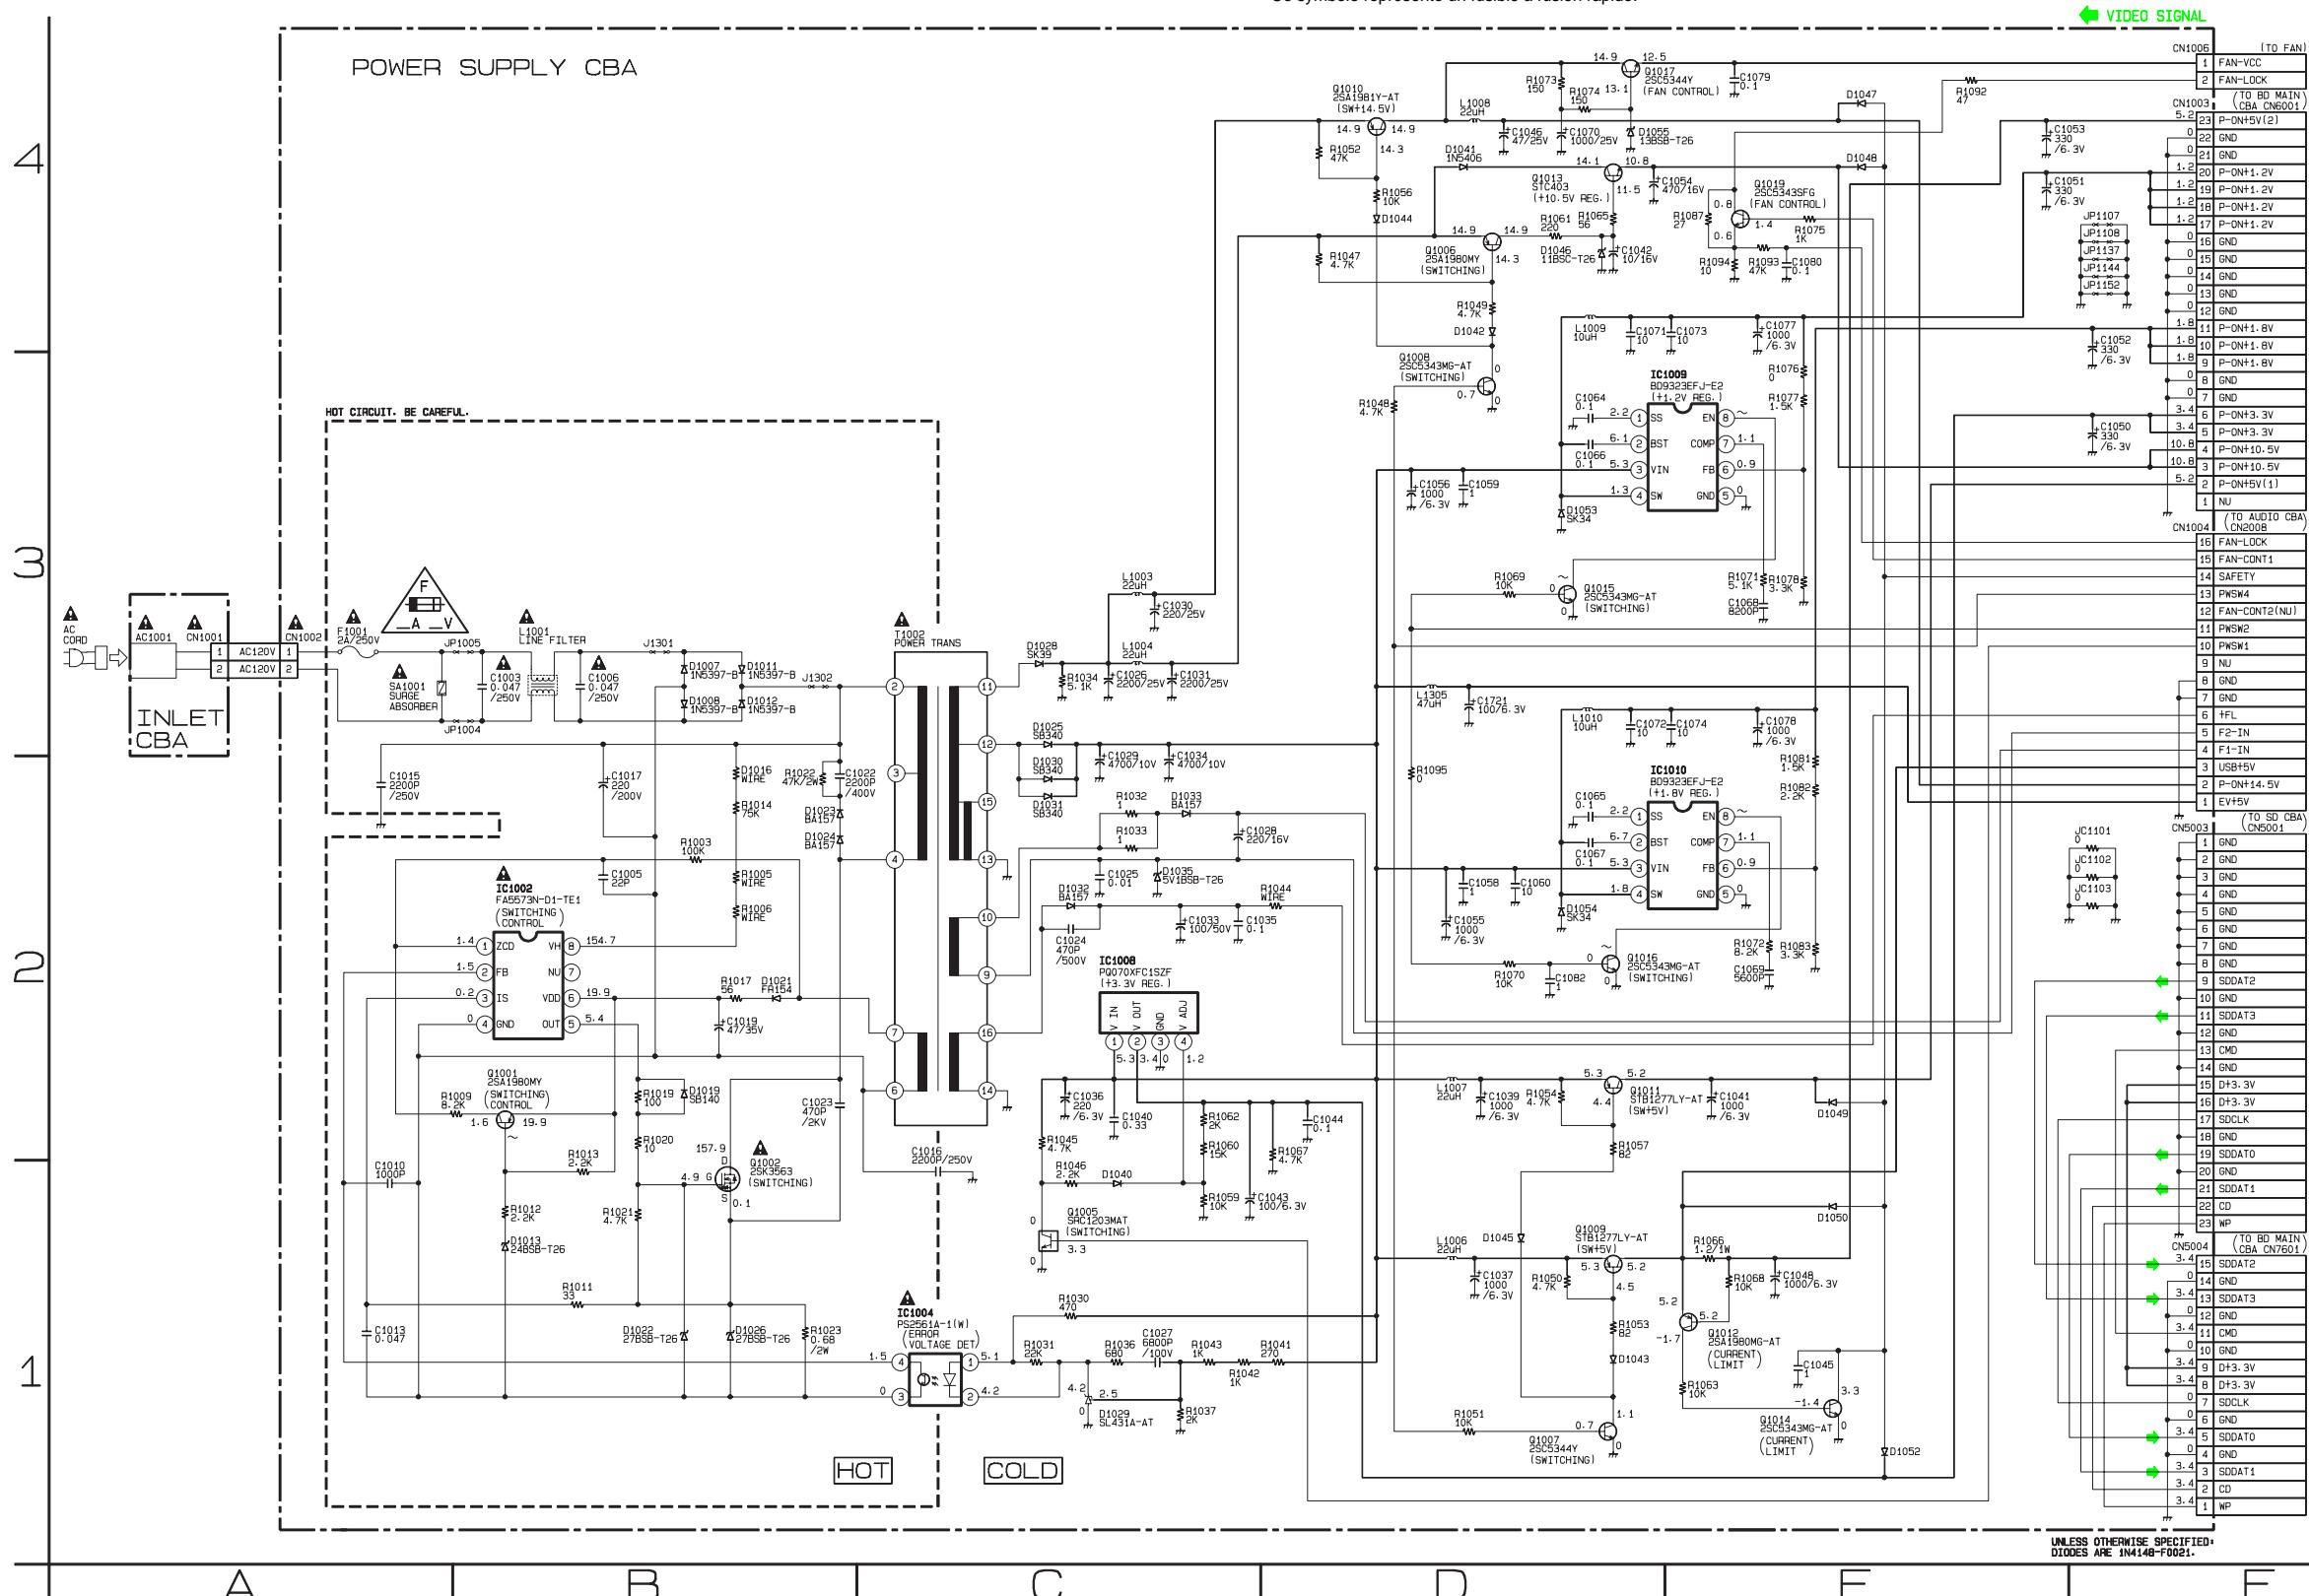

## Front A & Front B Schematic Diagram

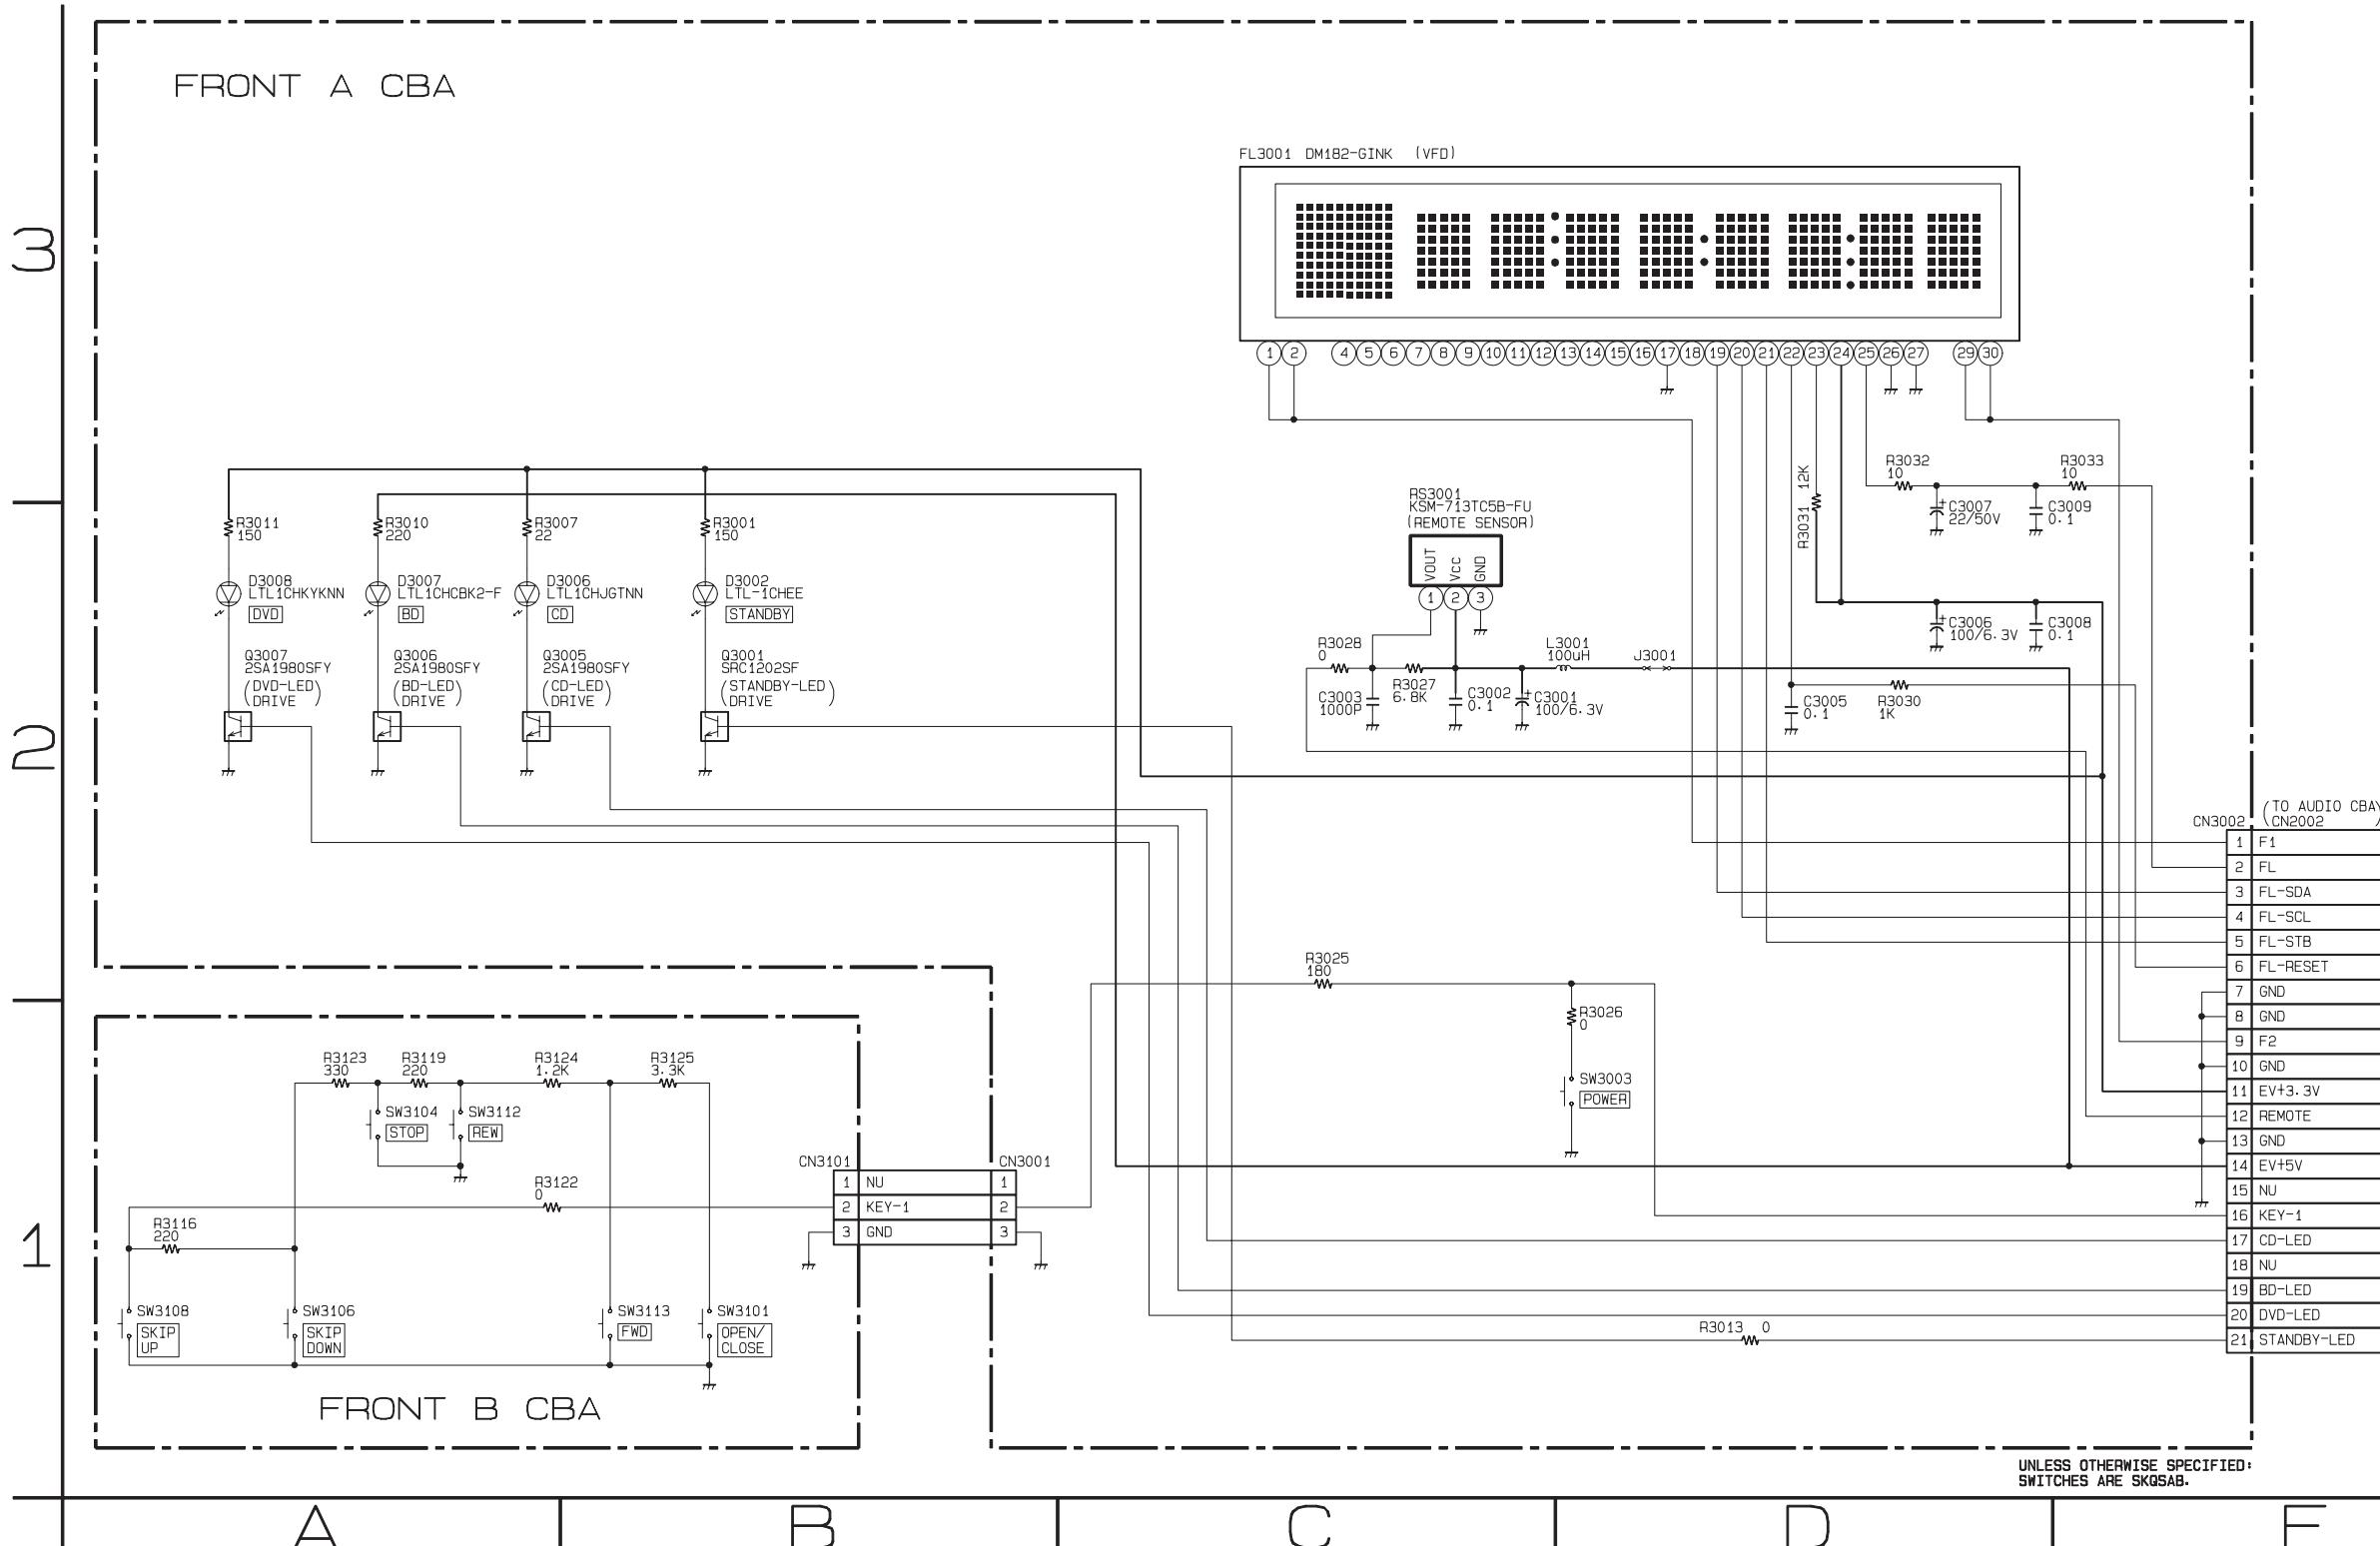

## SD Schematic Diagram

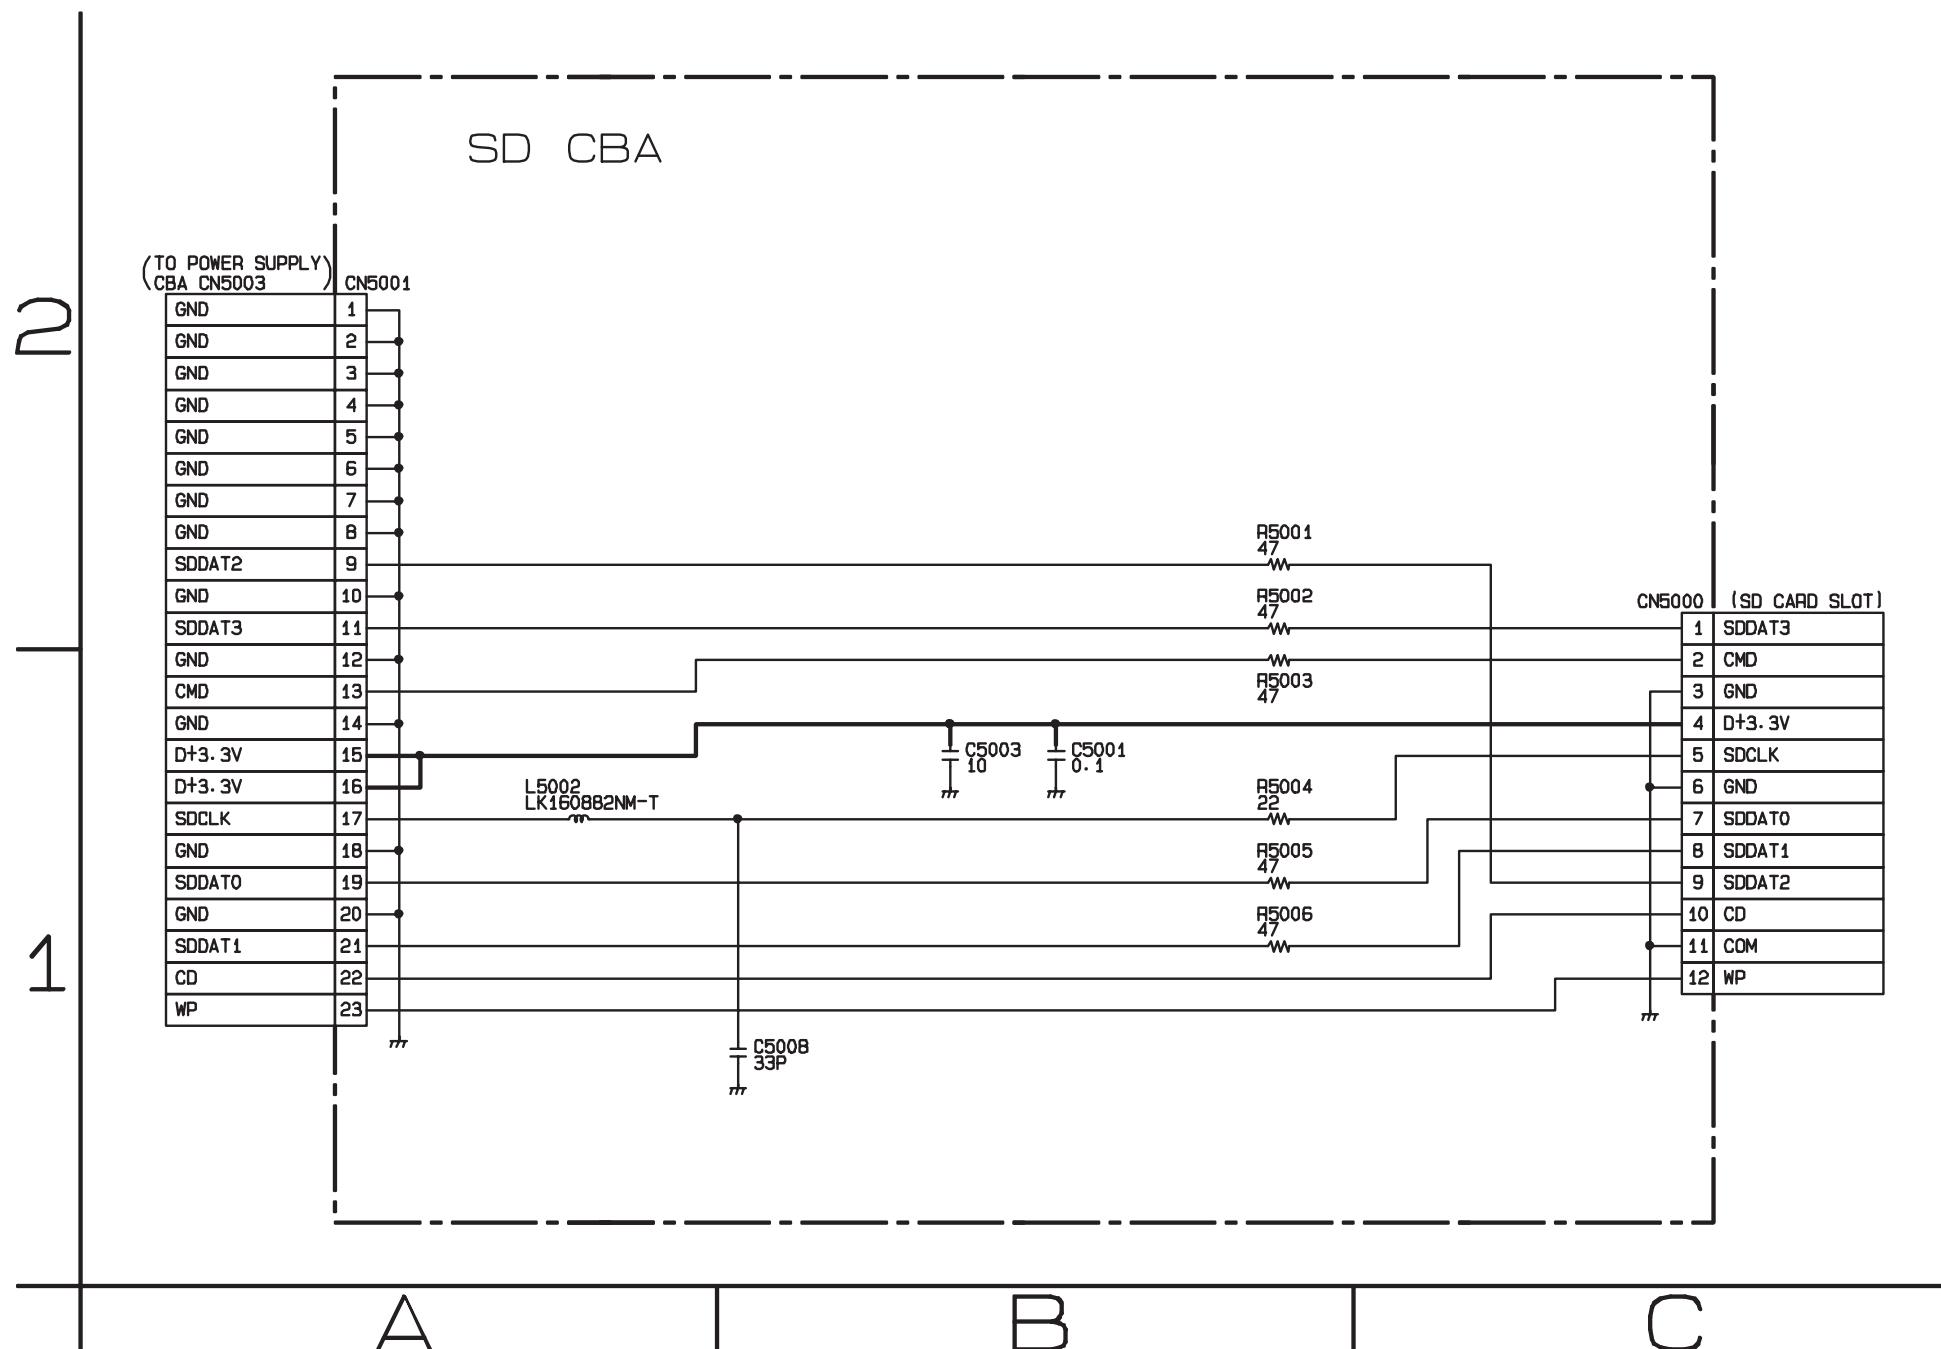


**BD Main 1/13 Schematic Diagram**

**\*1 NOTE:**

The order of pins shown in this diagram is different from that of actual IC600

IC6001 is divided into nine and shown as IC6001 (1/9) ~ IC6001 (9/9) in this BD Main Schematic Diagram Secti

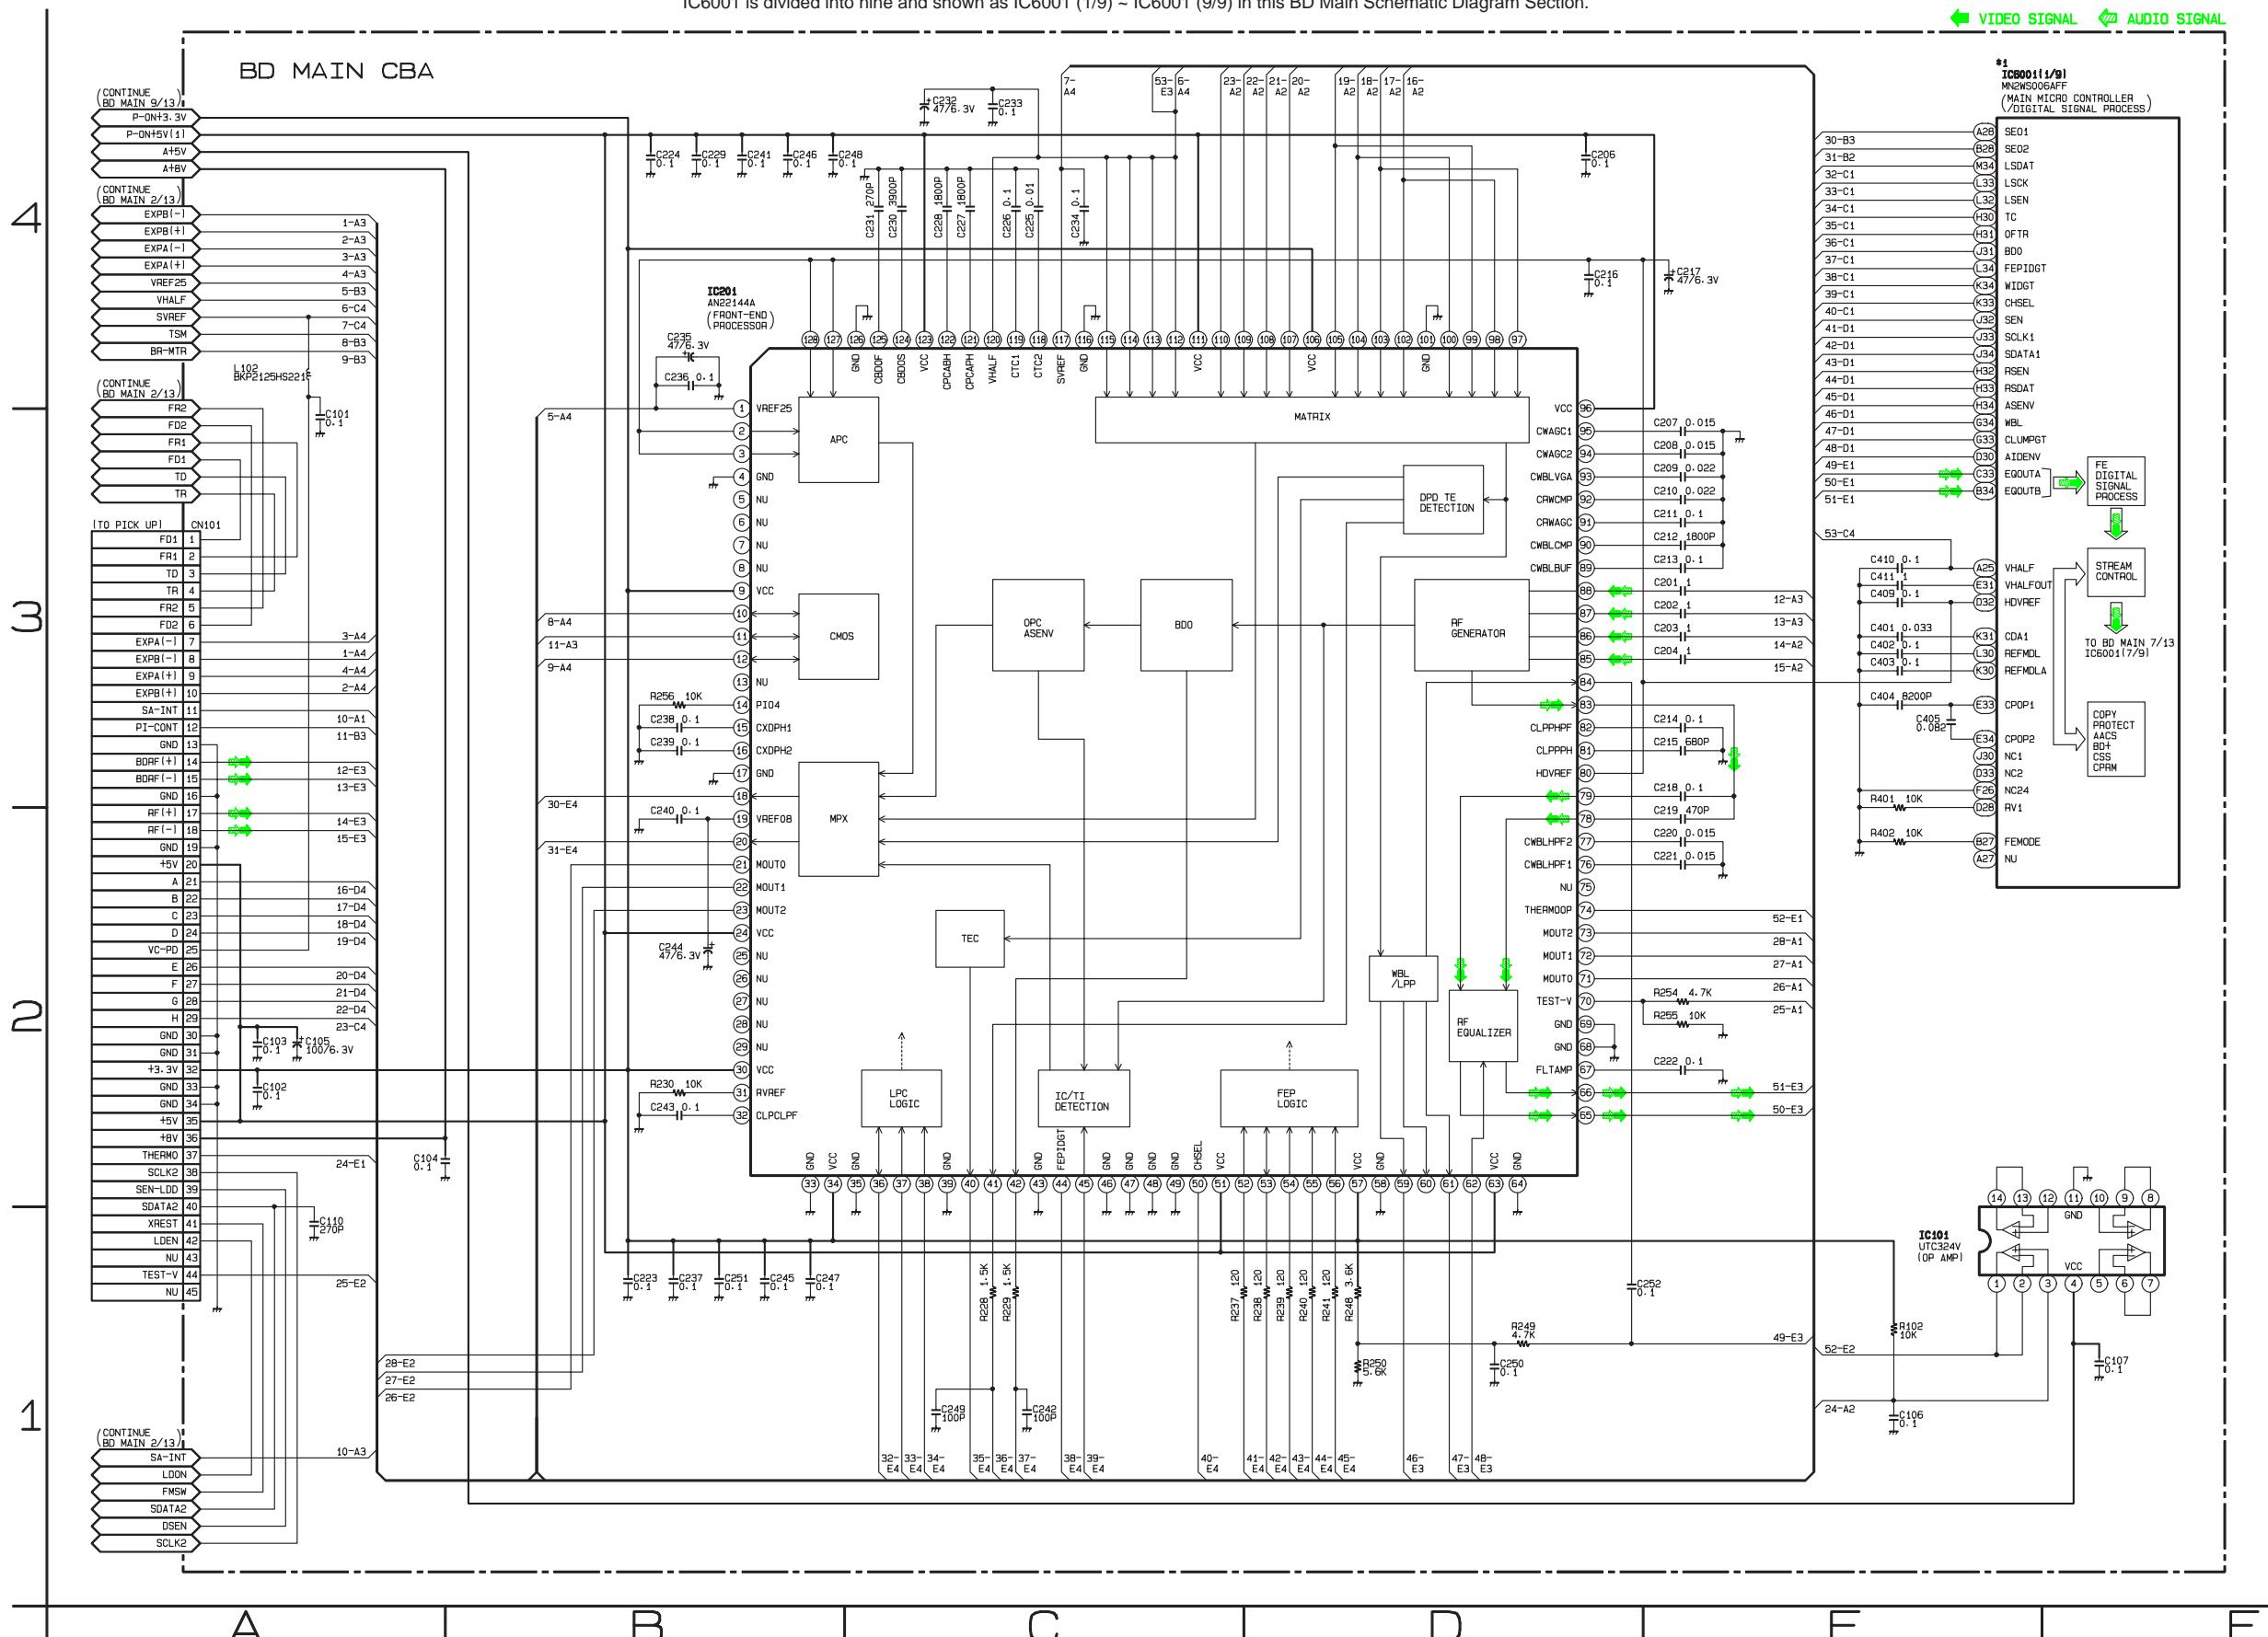


## BD Main 2/13 Schematic Diagram

\*1 NOTE:

The order of pins shown in this diagram is different from that of actual IC6001.

IC6001 is divided into nine and shown as IC6001 (1/9) ~ IC6001 (9/9) in this BD Main Schematic Diagram Section.

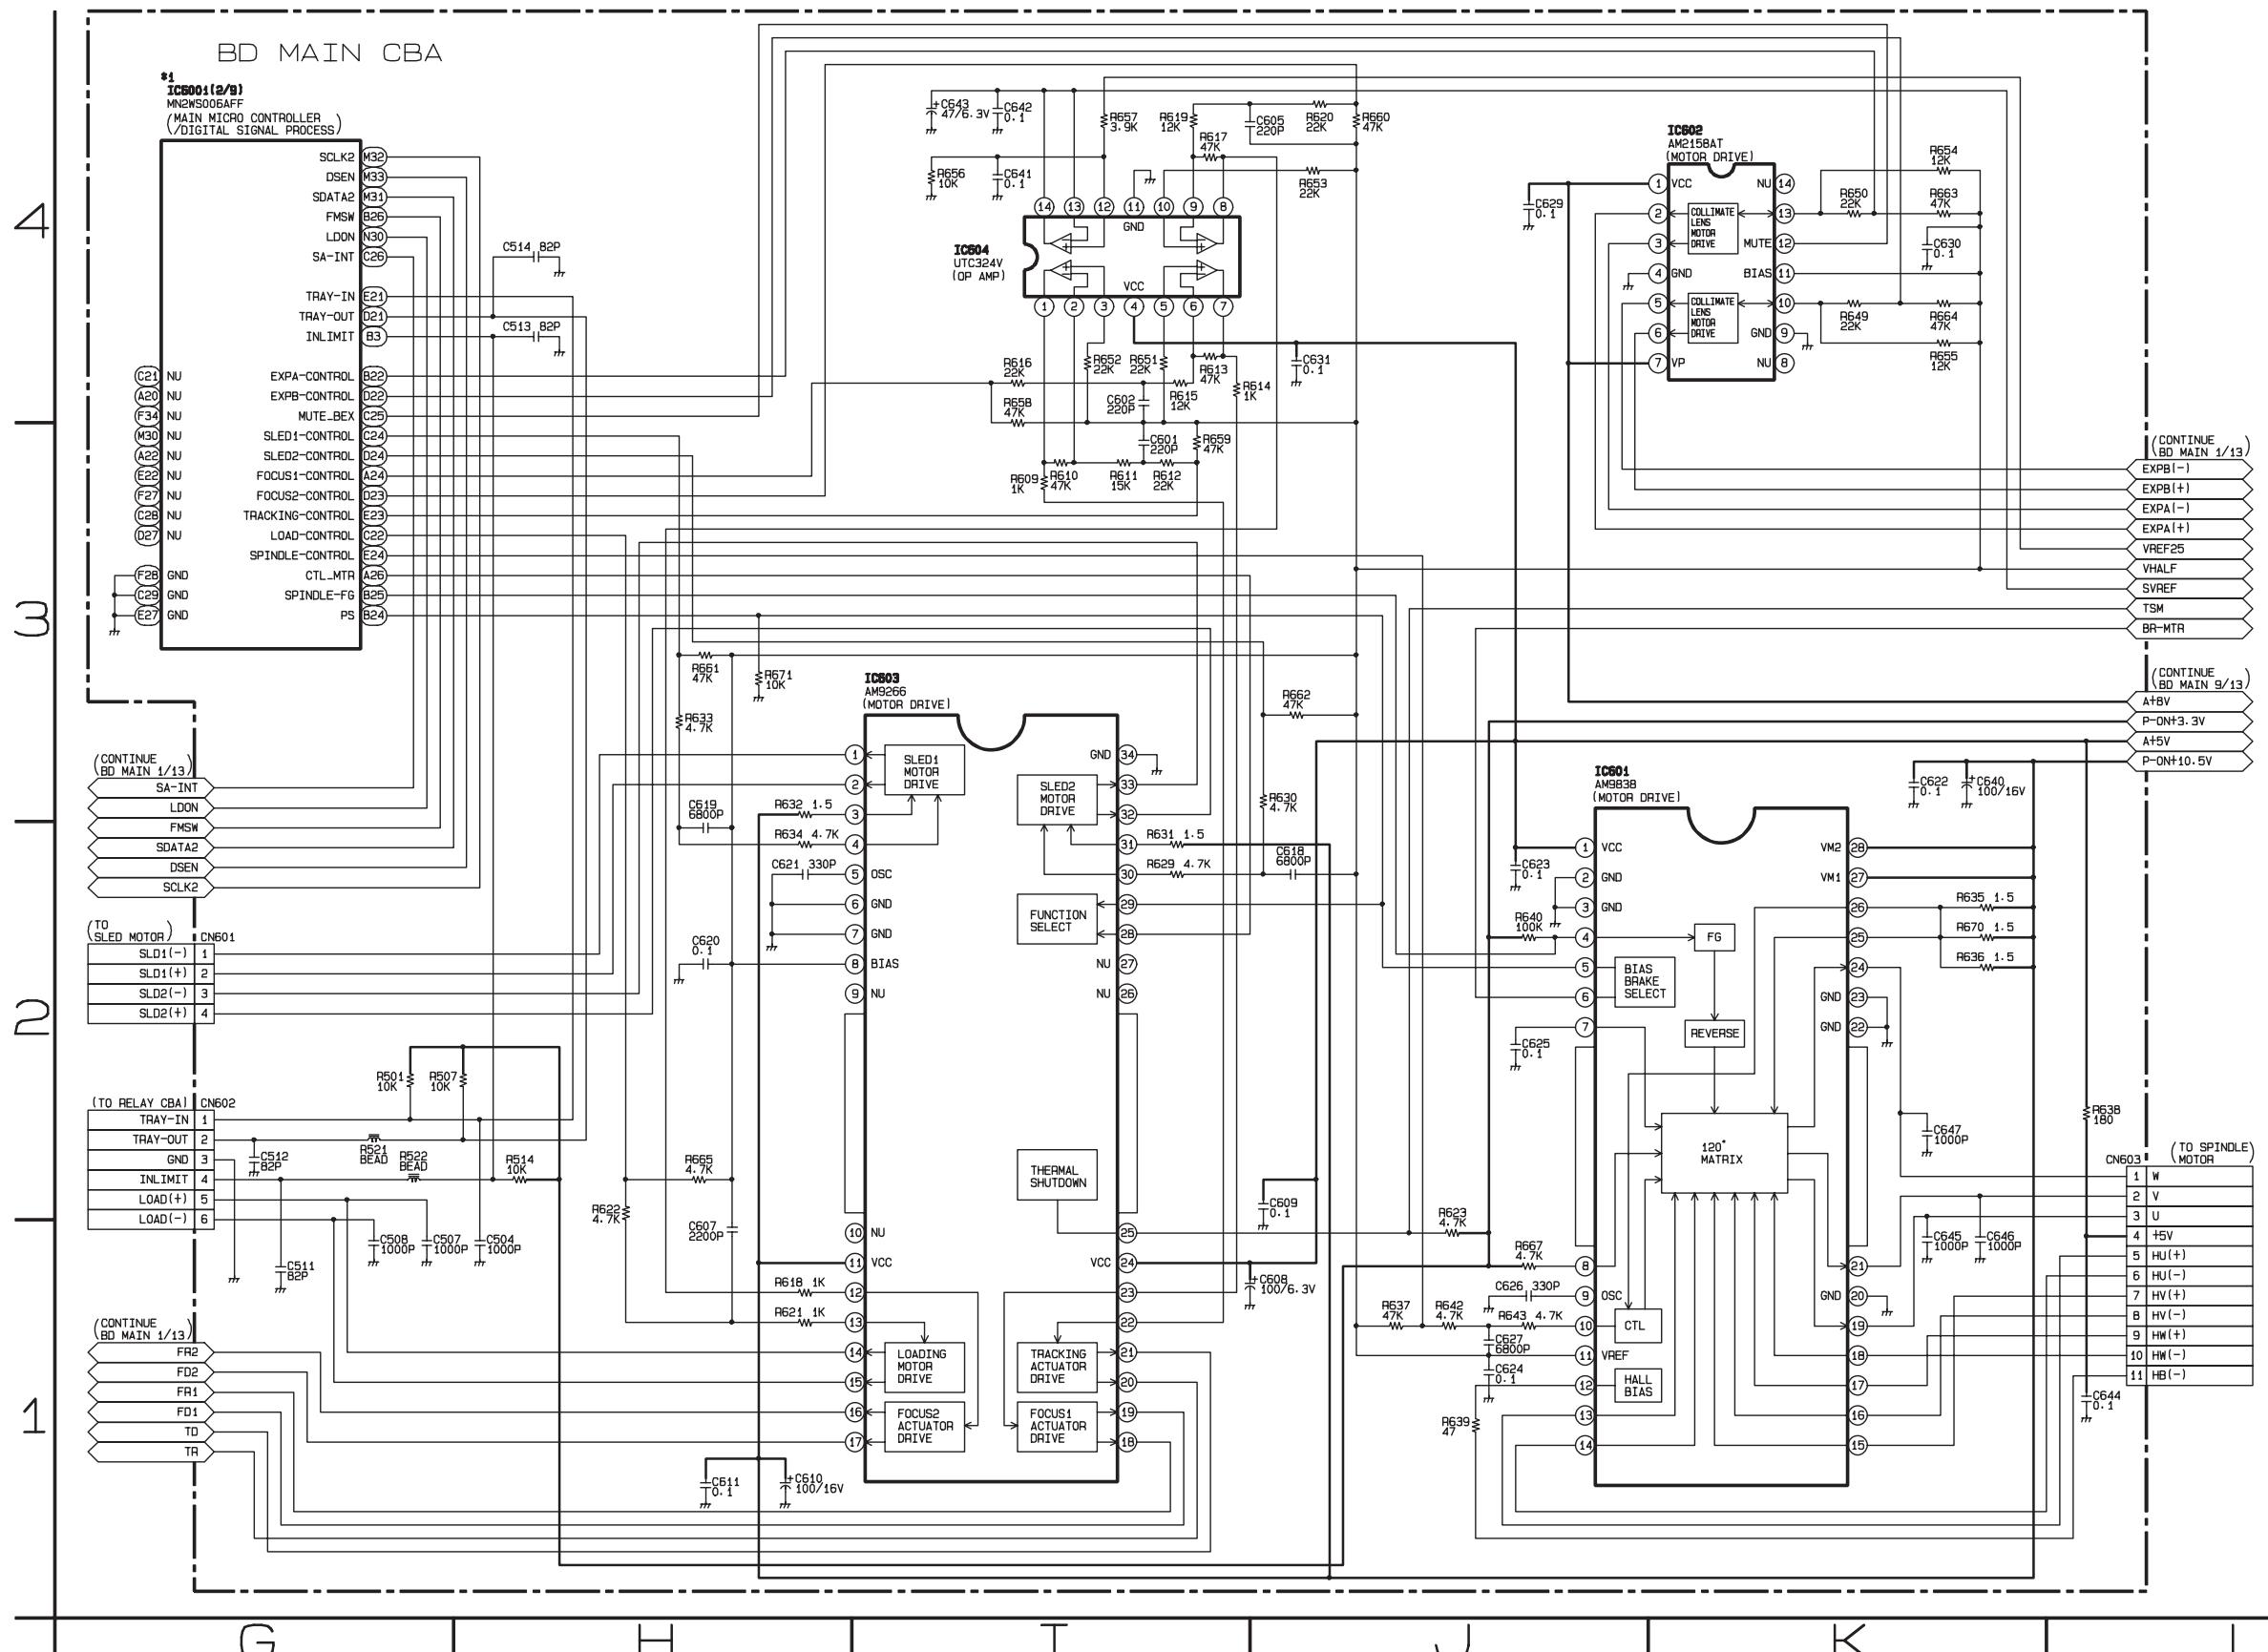


## BD Main 3/13 Schematic Diagram

\*1 NOTE:

The order of pins shown in this diagram is different from that of actual IC6001.

IC6001 is divided into nine and shown as IC6001 (1/9) ~ IC6001 (9/9) in this BD Main Schematic Diagram Section.

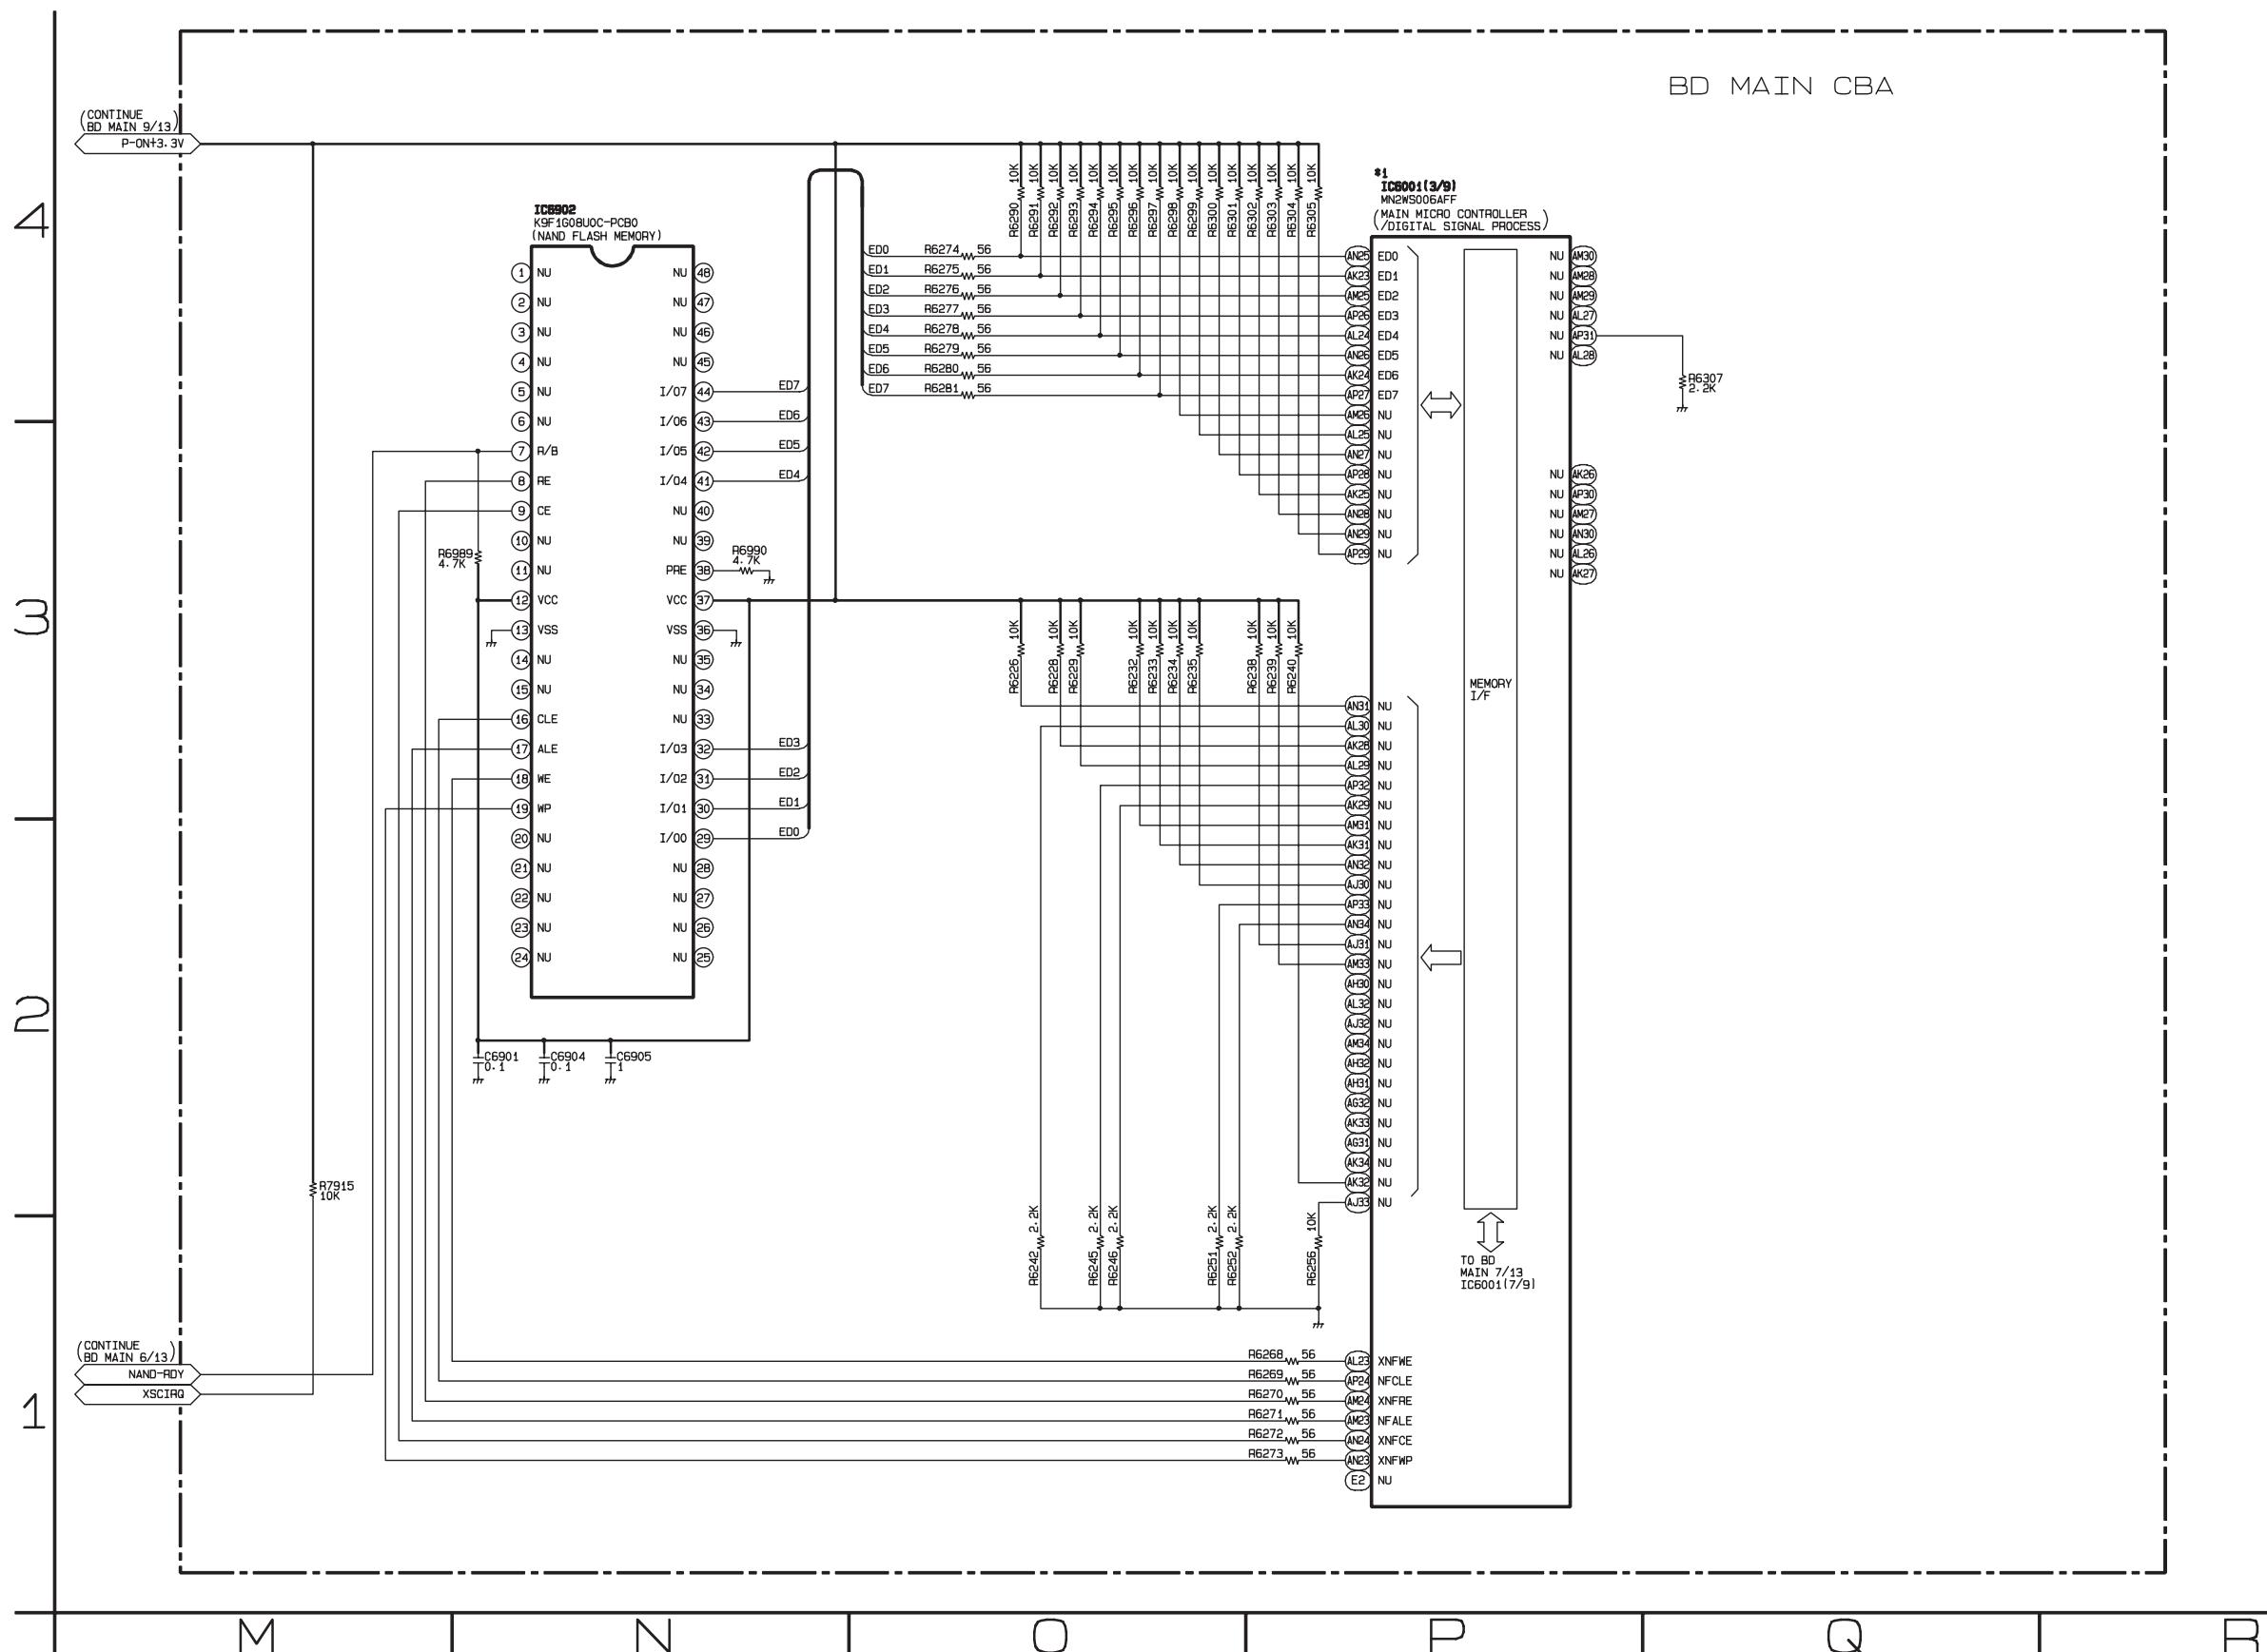


# BD Main 4/13 Schematic Diagram

\*1 NOTE:

The order of pins shown in this diagram is different from that of actual IC6001.

IC6001 is divided into nine and shown as IC6001 (1/9) ~ IC6001 (9/9) in this BD Main Schematic Diagram Section.

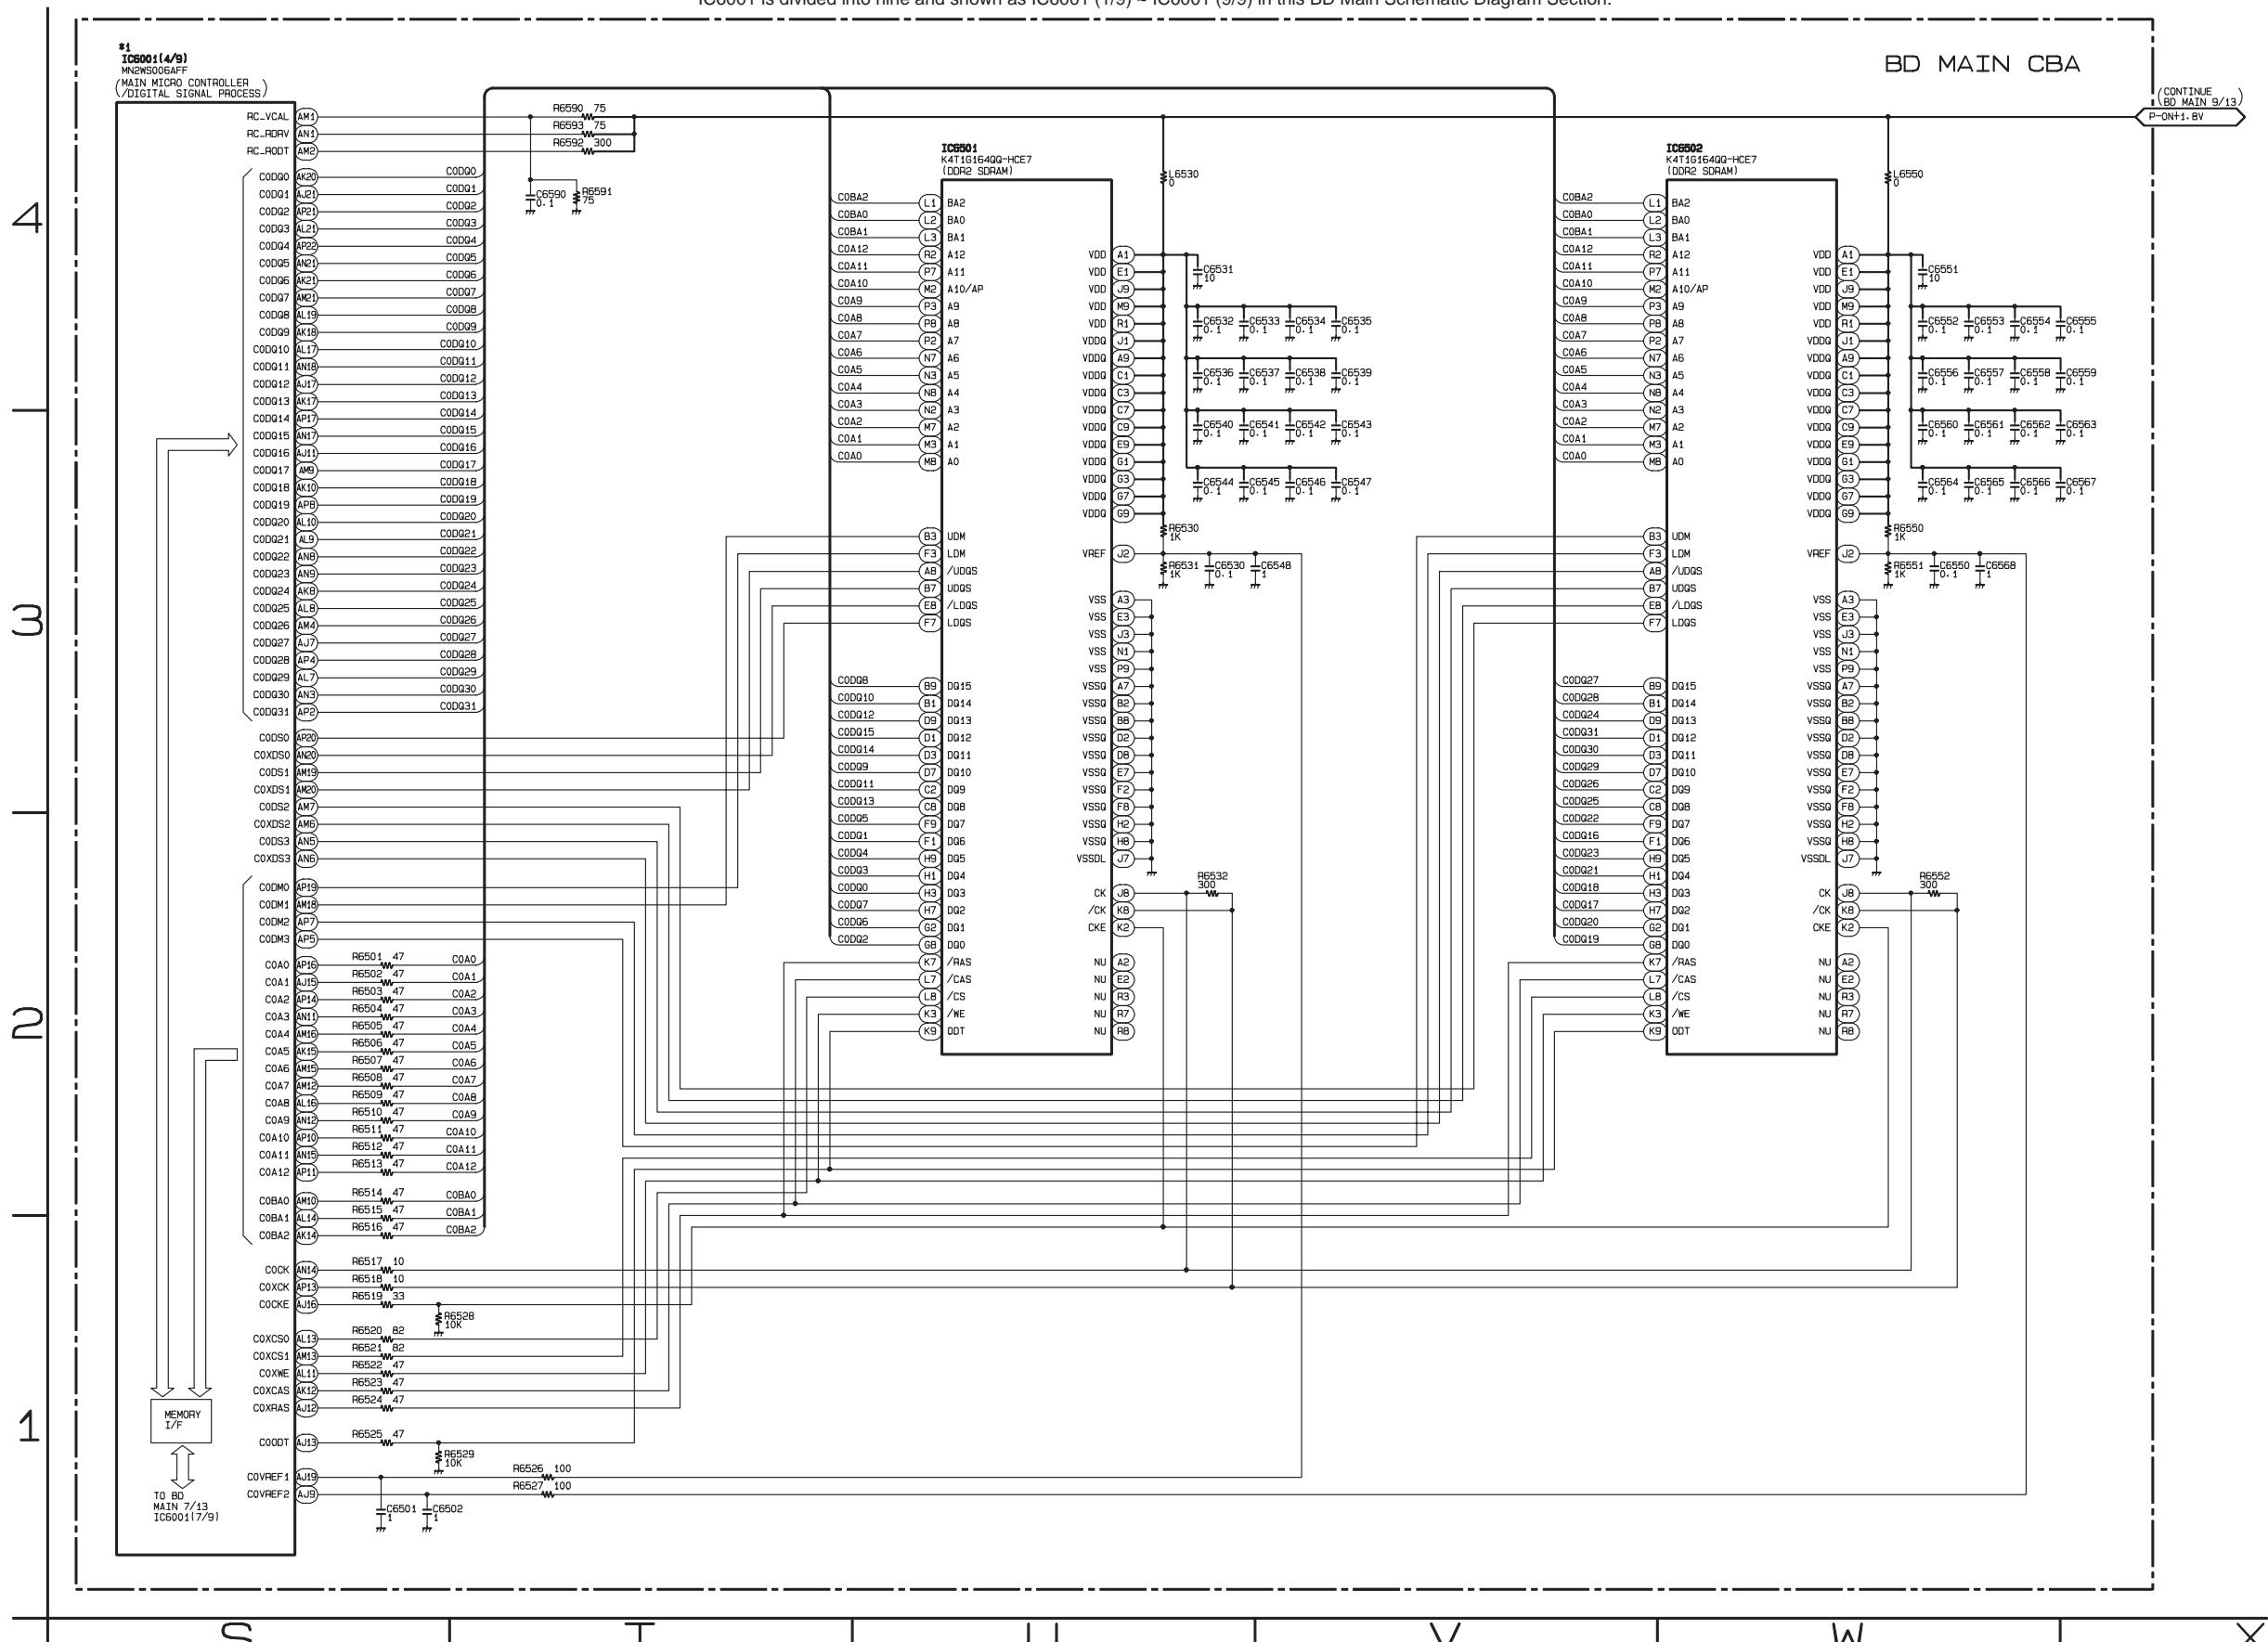


# BD Main 5/13 Schematic Diagram

\*1 NOTE:

The order of pins shown in this diagram is different from that of actual IC6001.

IC6001 is divided into nine and shown as IC6001 (1/9) ~ IC6001 (9/9) in this BD Main Schematic Diagram Section.

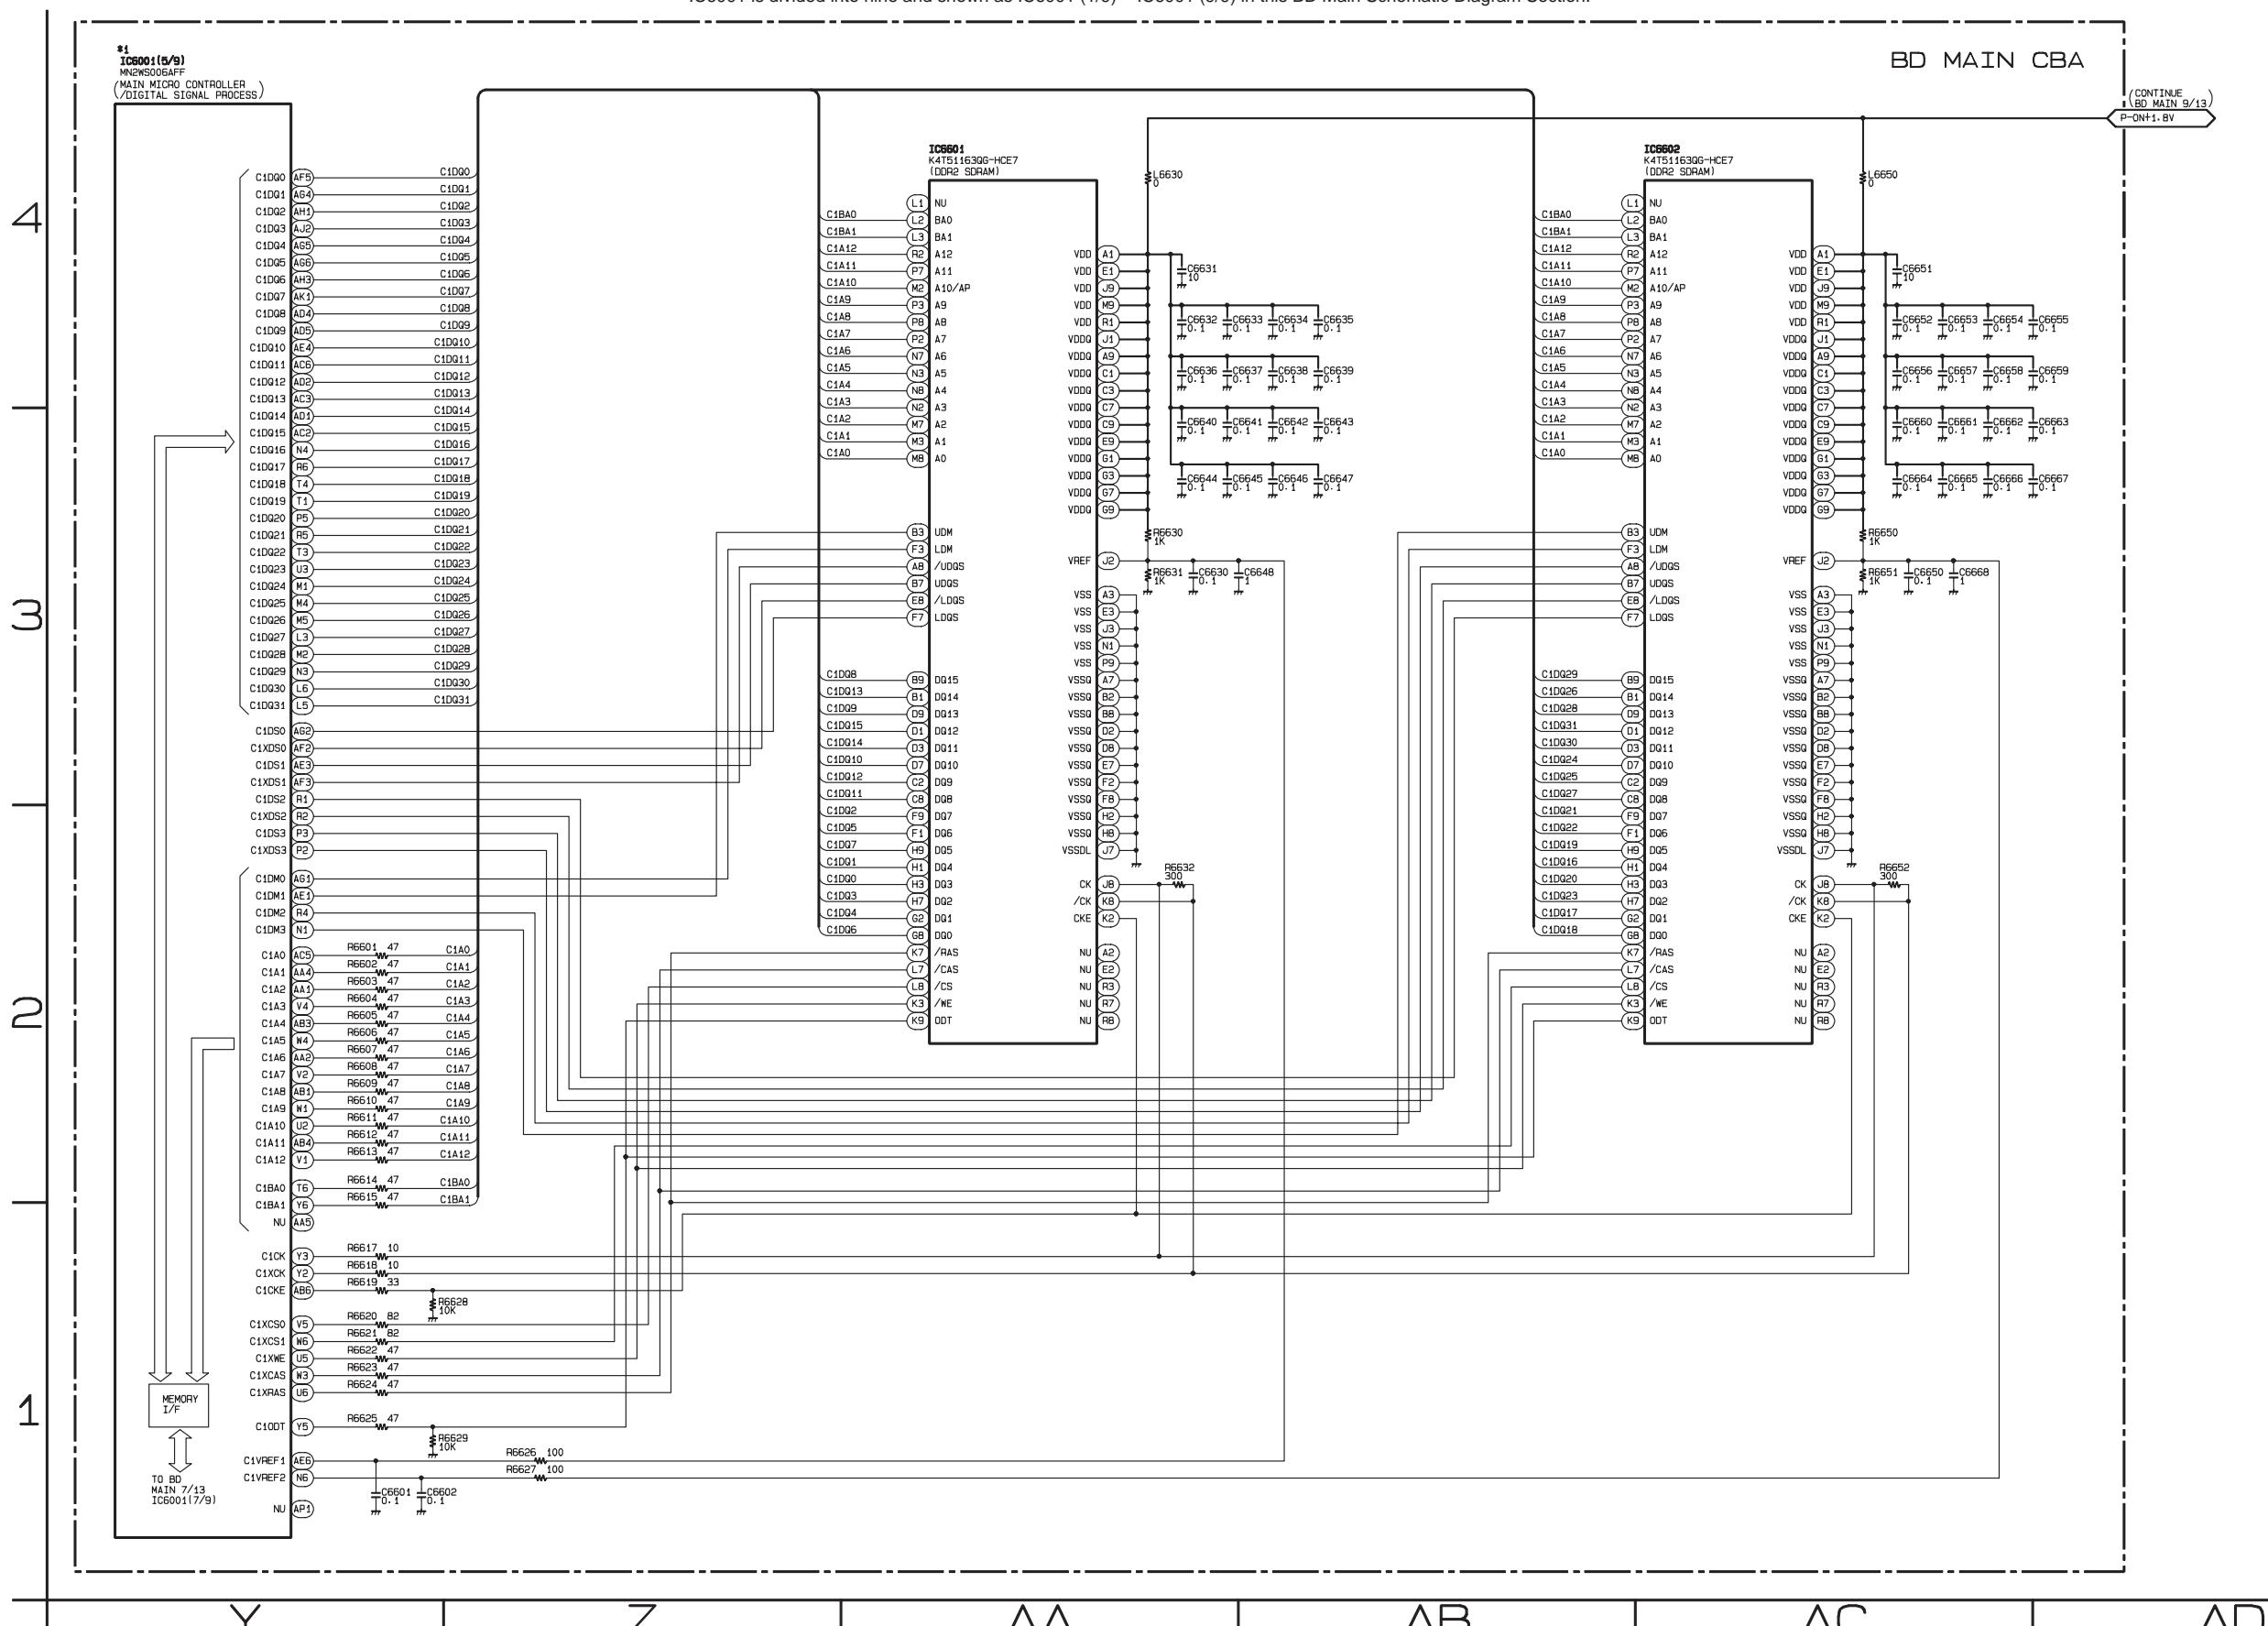


**BD Main 6/13 Schematic Diagram**

## \*1 NOTE

The order of pins shown in this diagram is different from that of actual IC600.

IC6001 is divided into nine and shown as IC6001 (1/9) ~ IC6001 (9/9) in this BD Main Schematic Diagram Section.

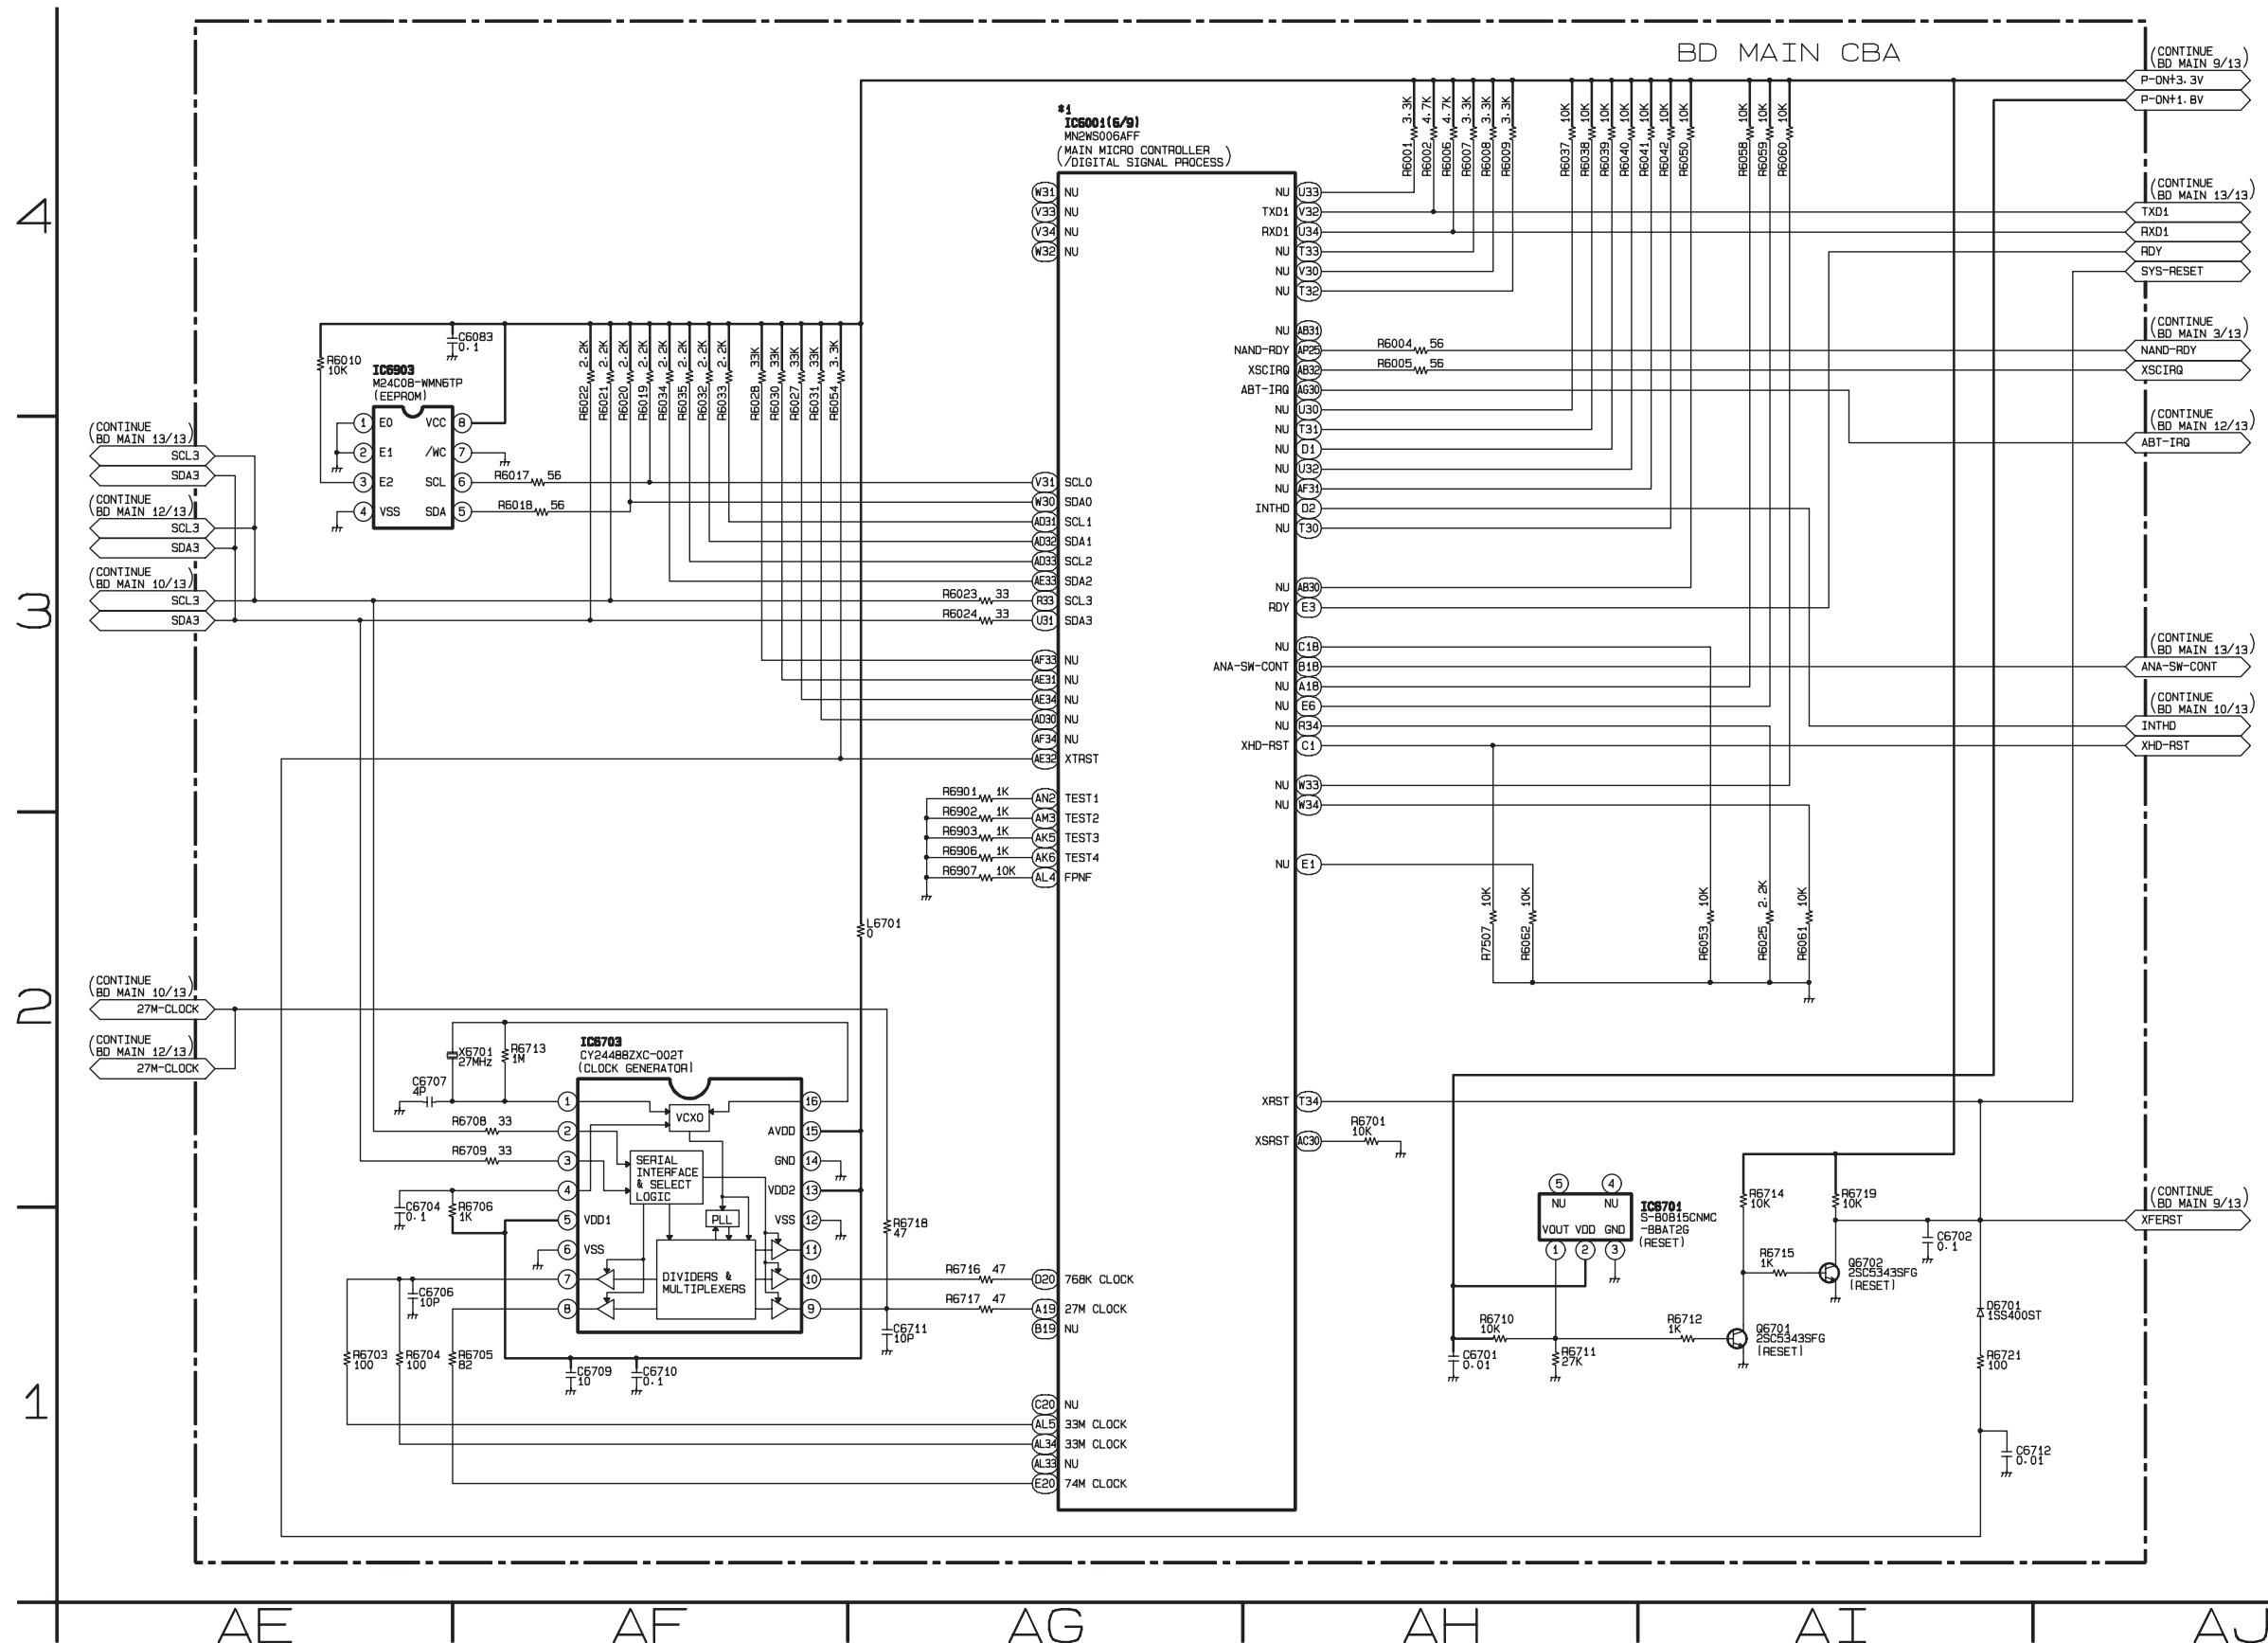


**BD Main 7/13 Schematic Diagram**


**\*1 NOTE:**

The order of pins shown in this diagram is different from that of actual IC6001.

IC6001 is divided into nine and shown as IC6001 (1/9) ~ IC6001 (9/9) in this BD Main Schematic Diagram Section.

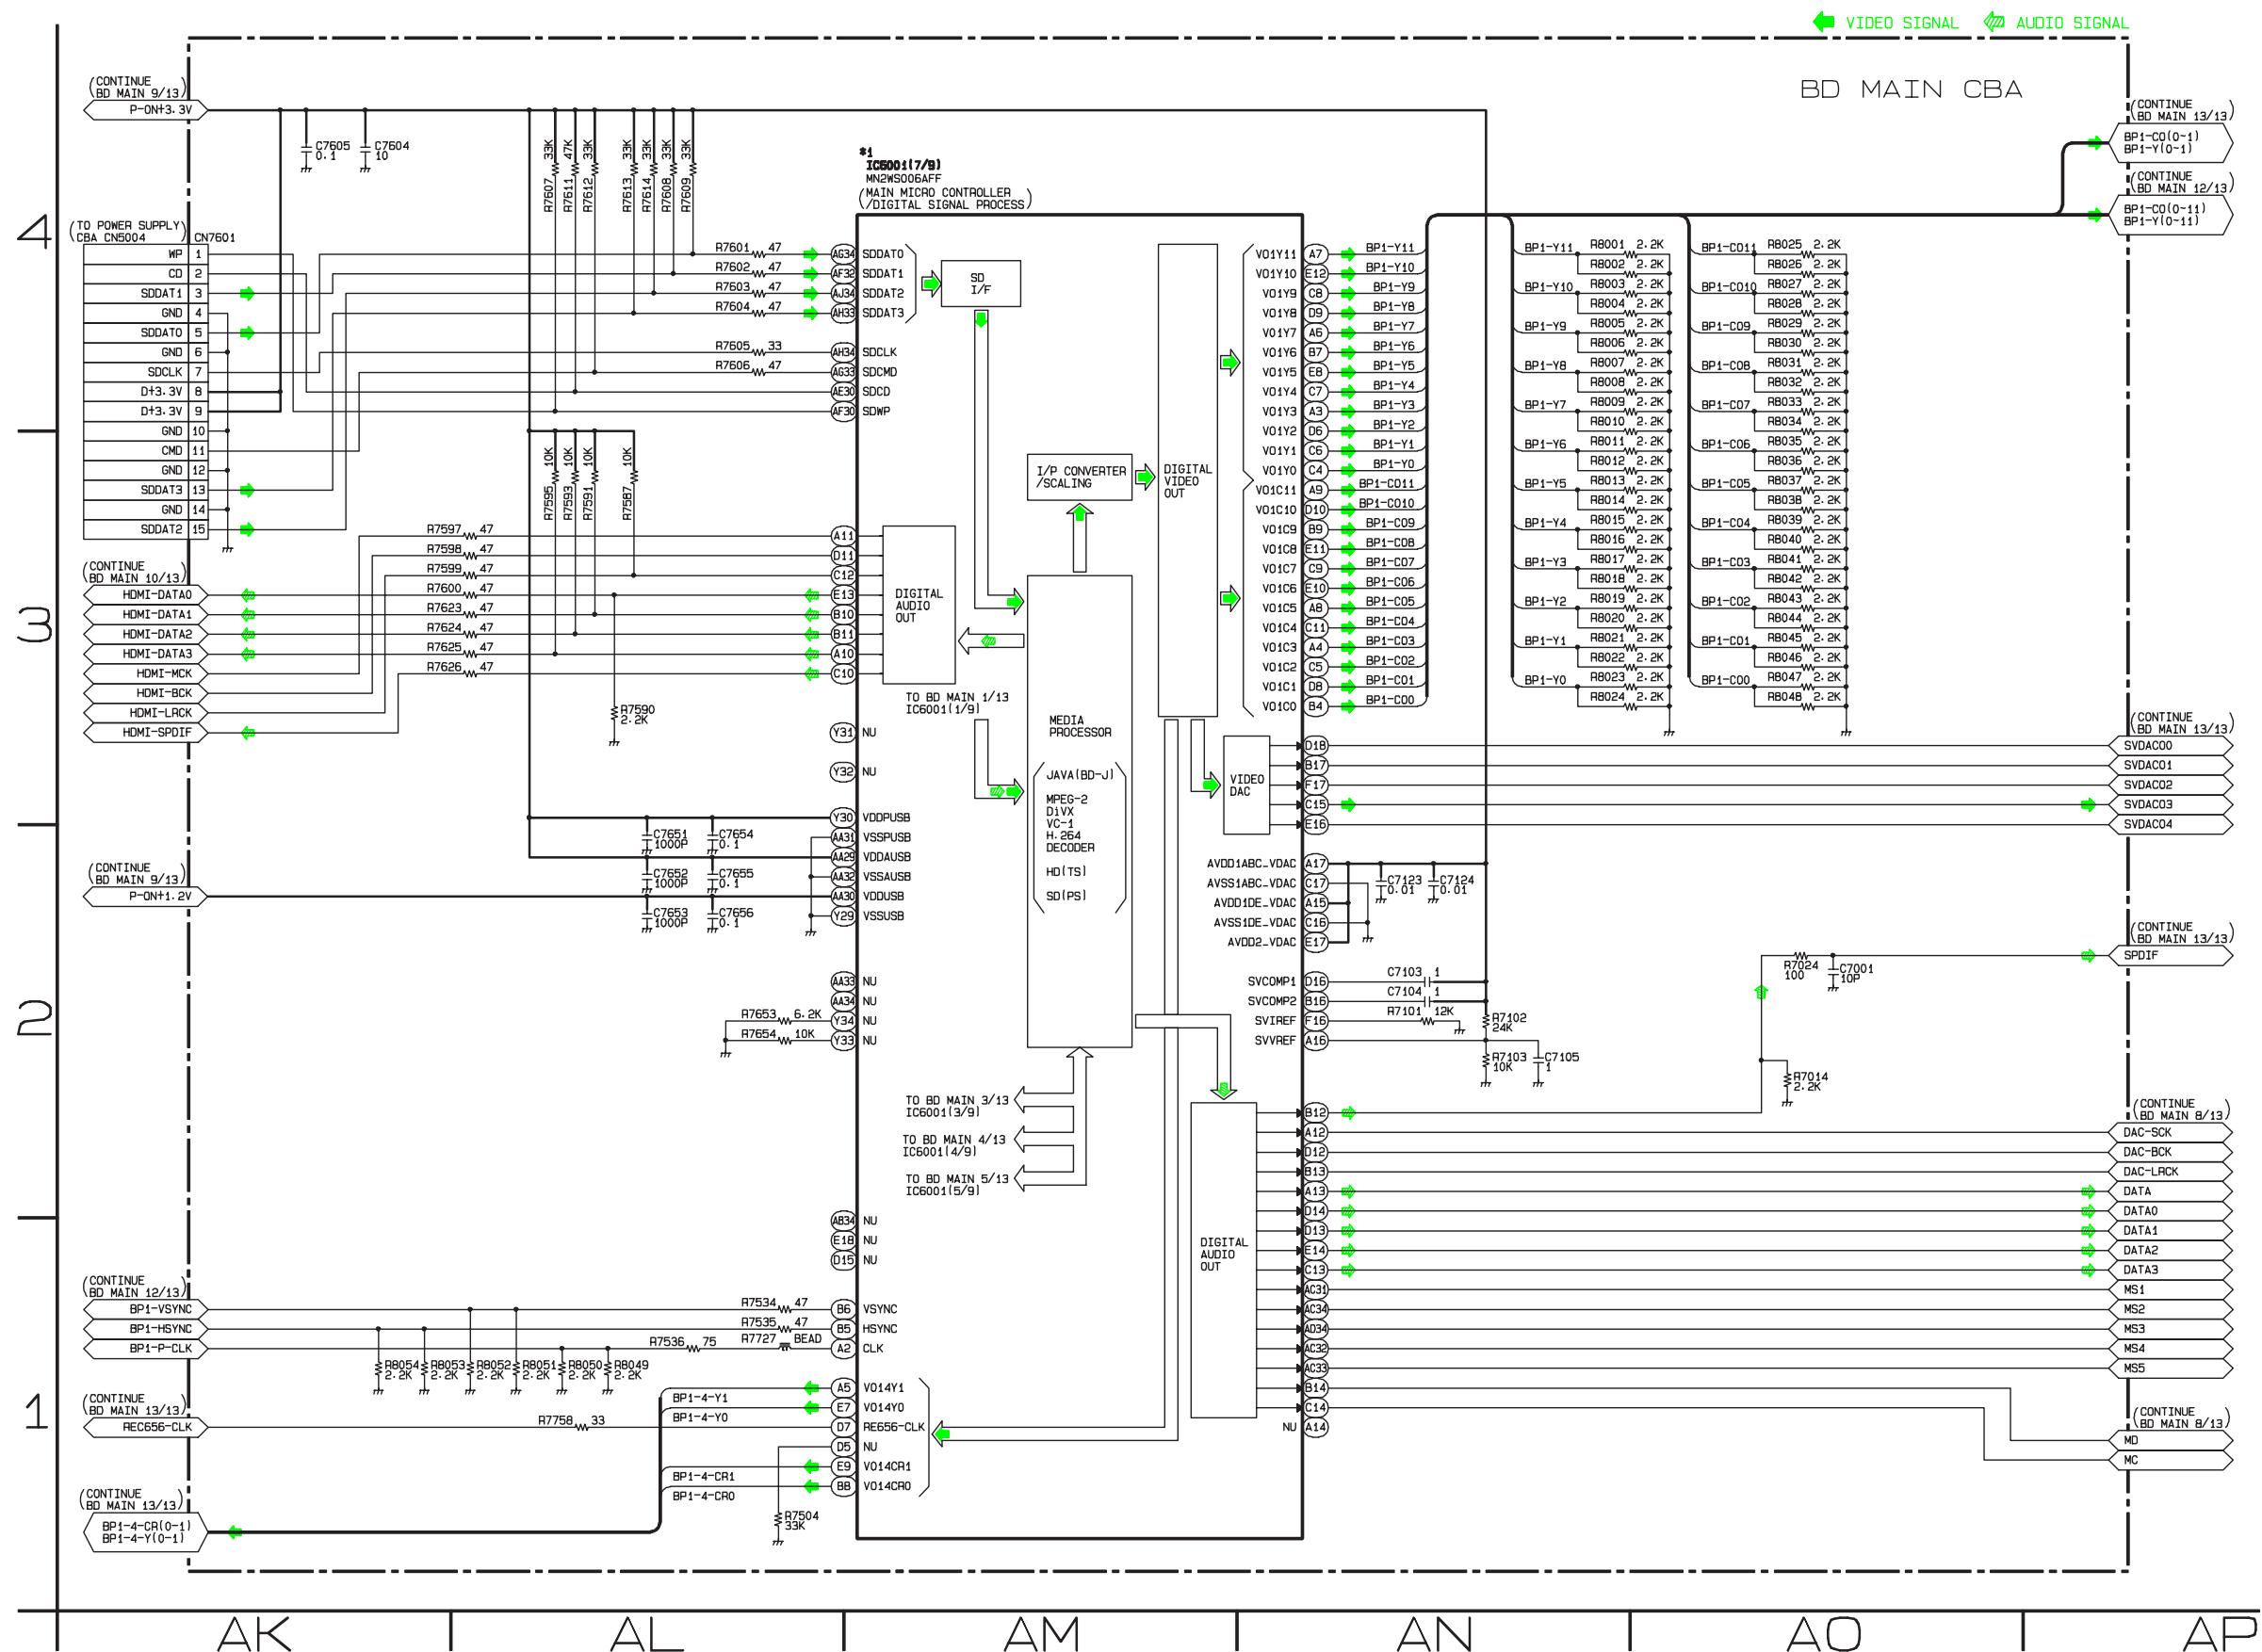

## BD Main 8/13 Schematic Diagram

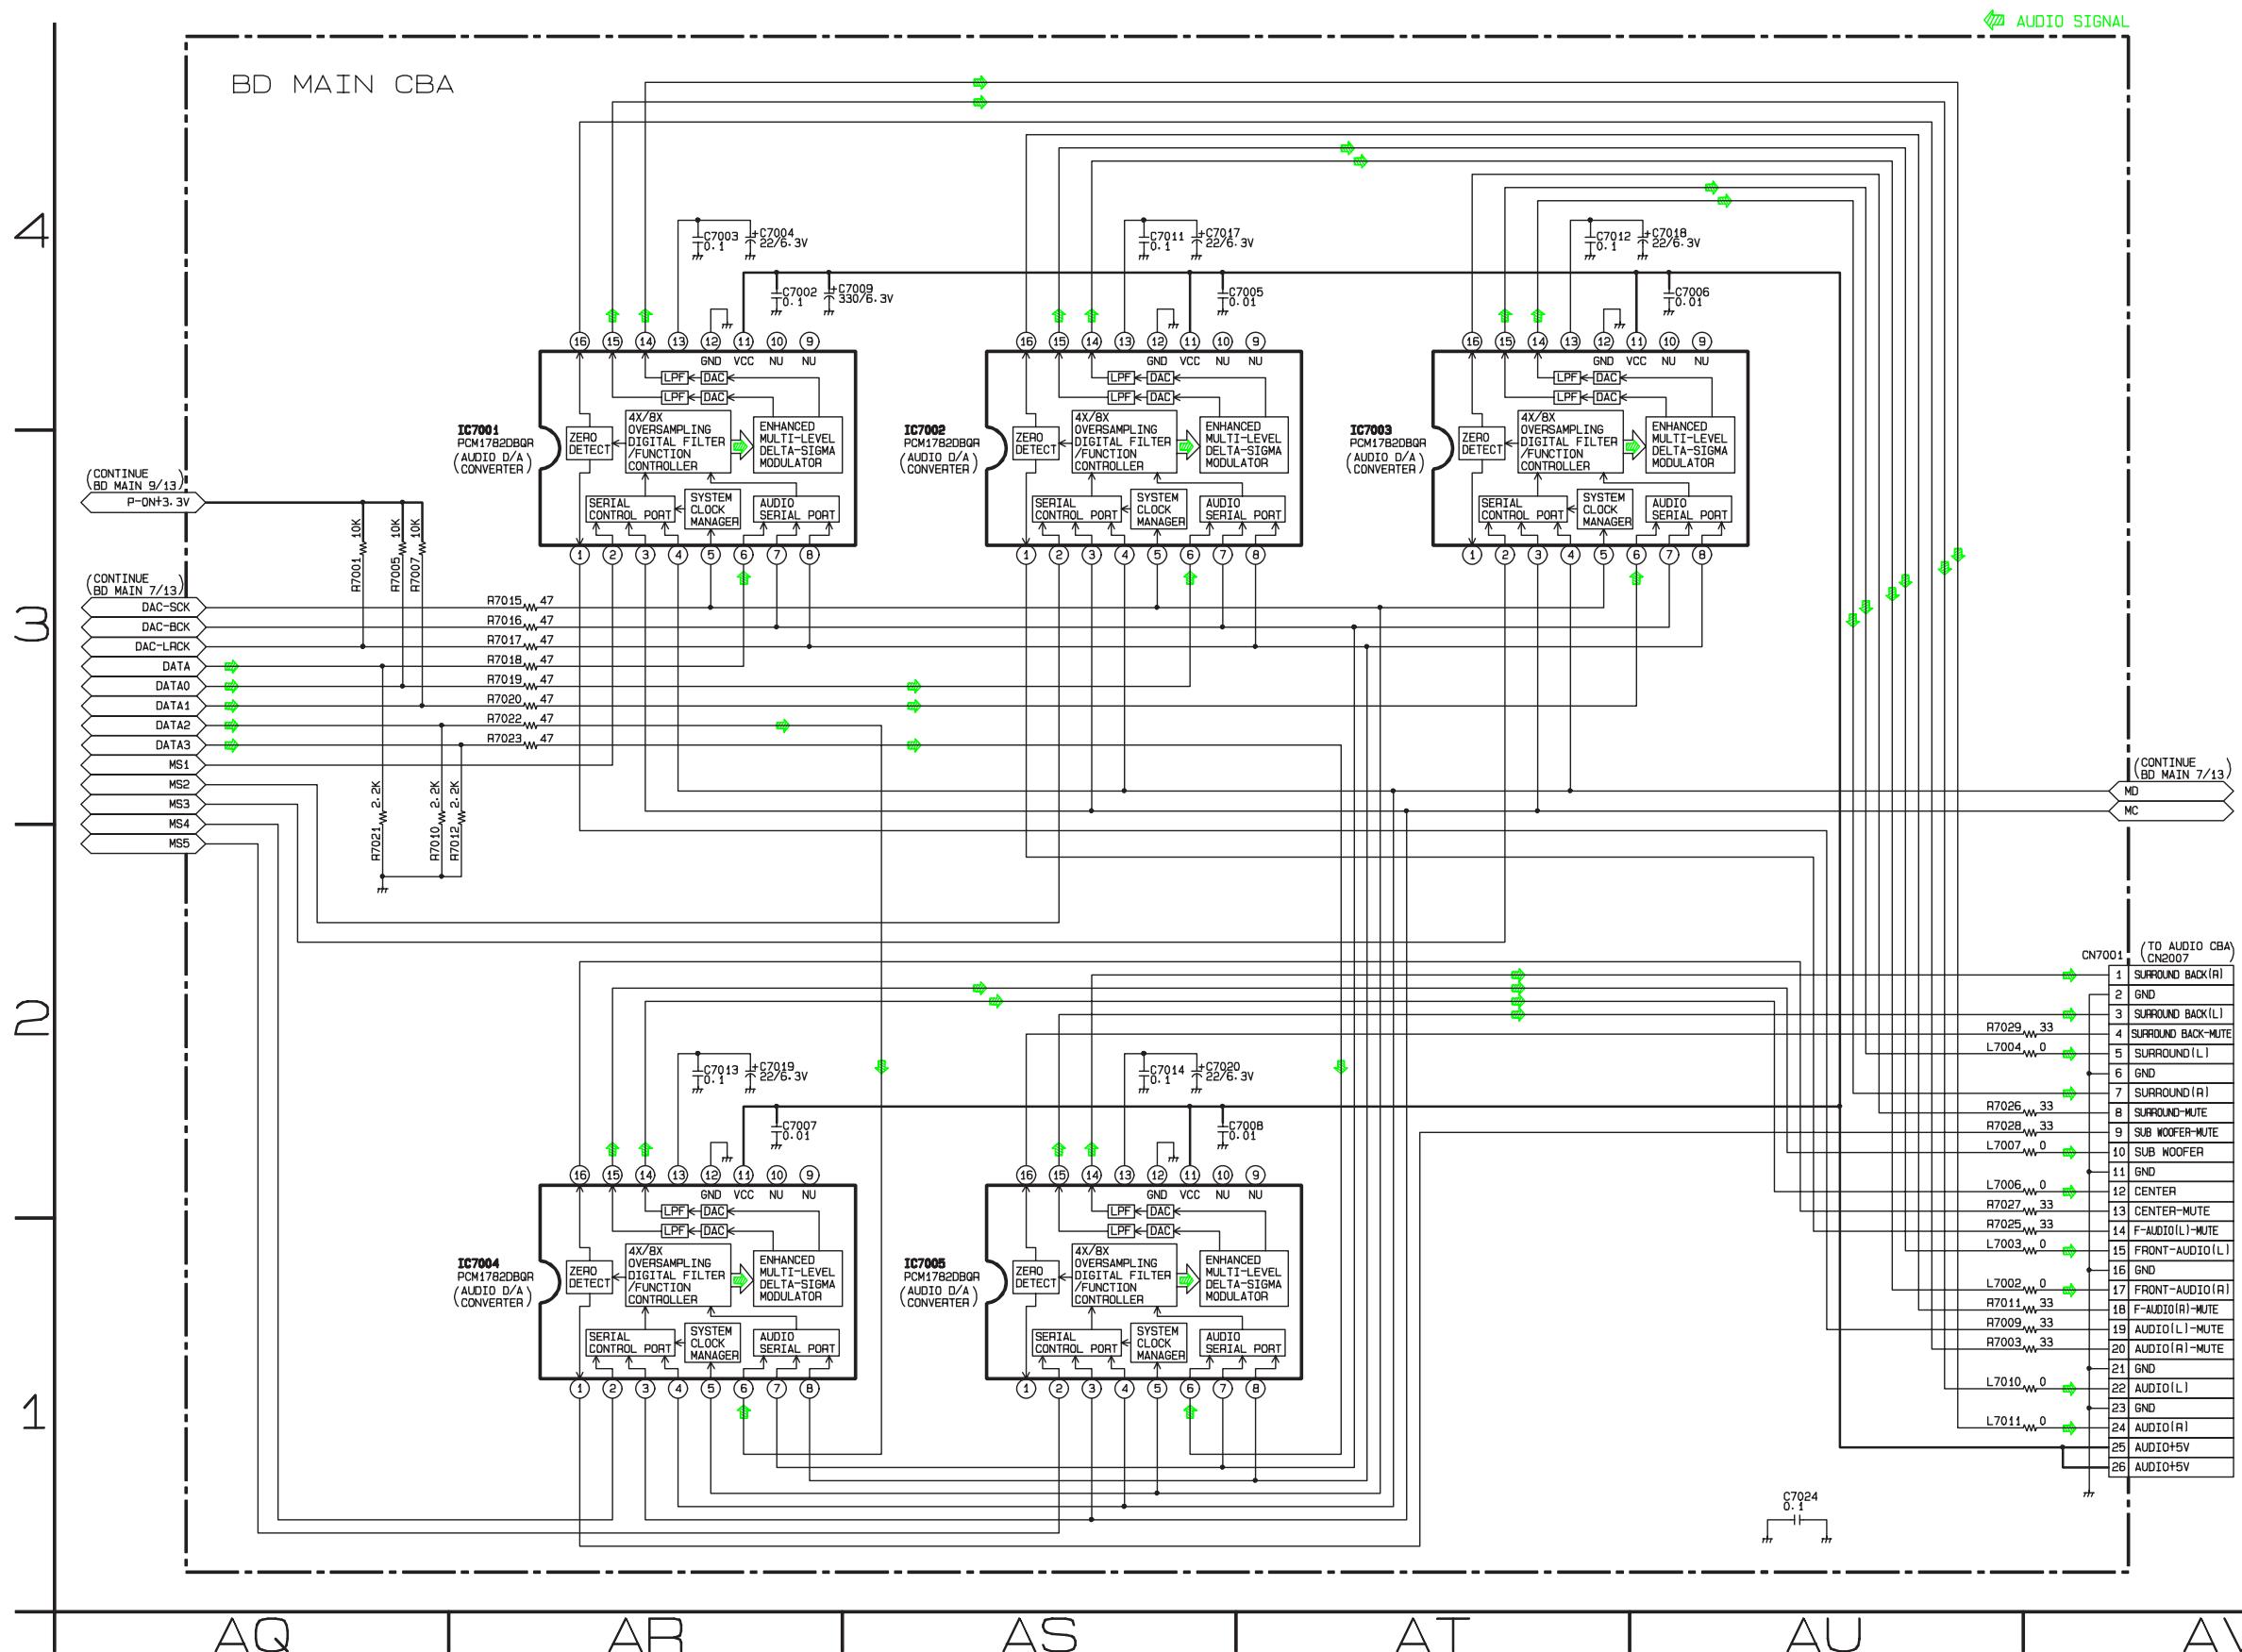


**BD Main 9/13 Schematic Diagram**


**\*1 NOTE:**

The order of pins shown in this diagram is different from that of actual IC6001.

IC6001 is divided into nine and shown as IC6001 (1/9) ~ IC6001 (9/9) in this BD Main Schematic Diagram Section.

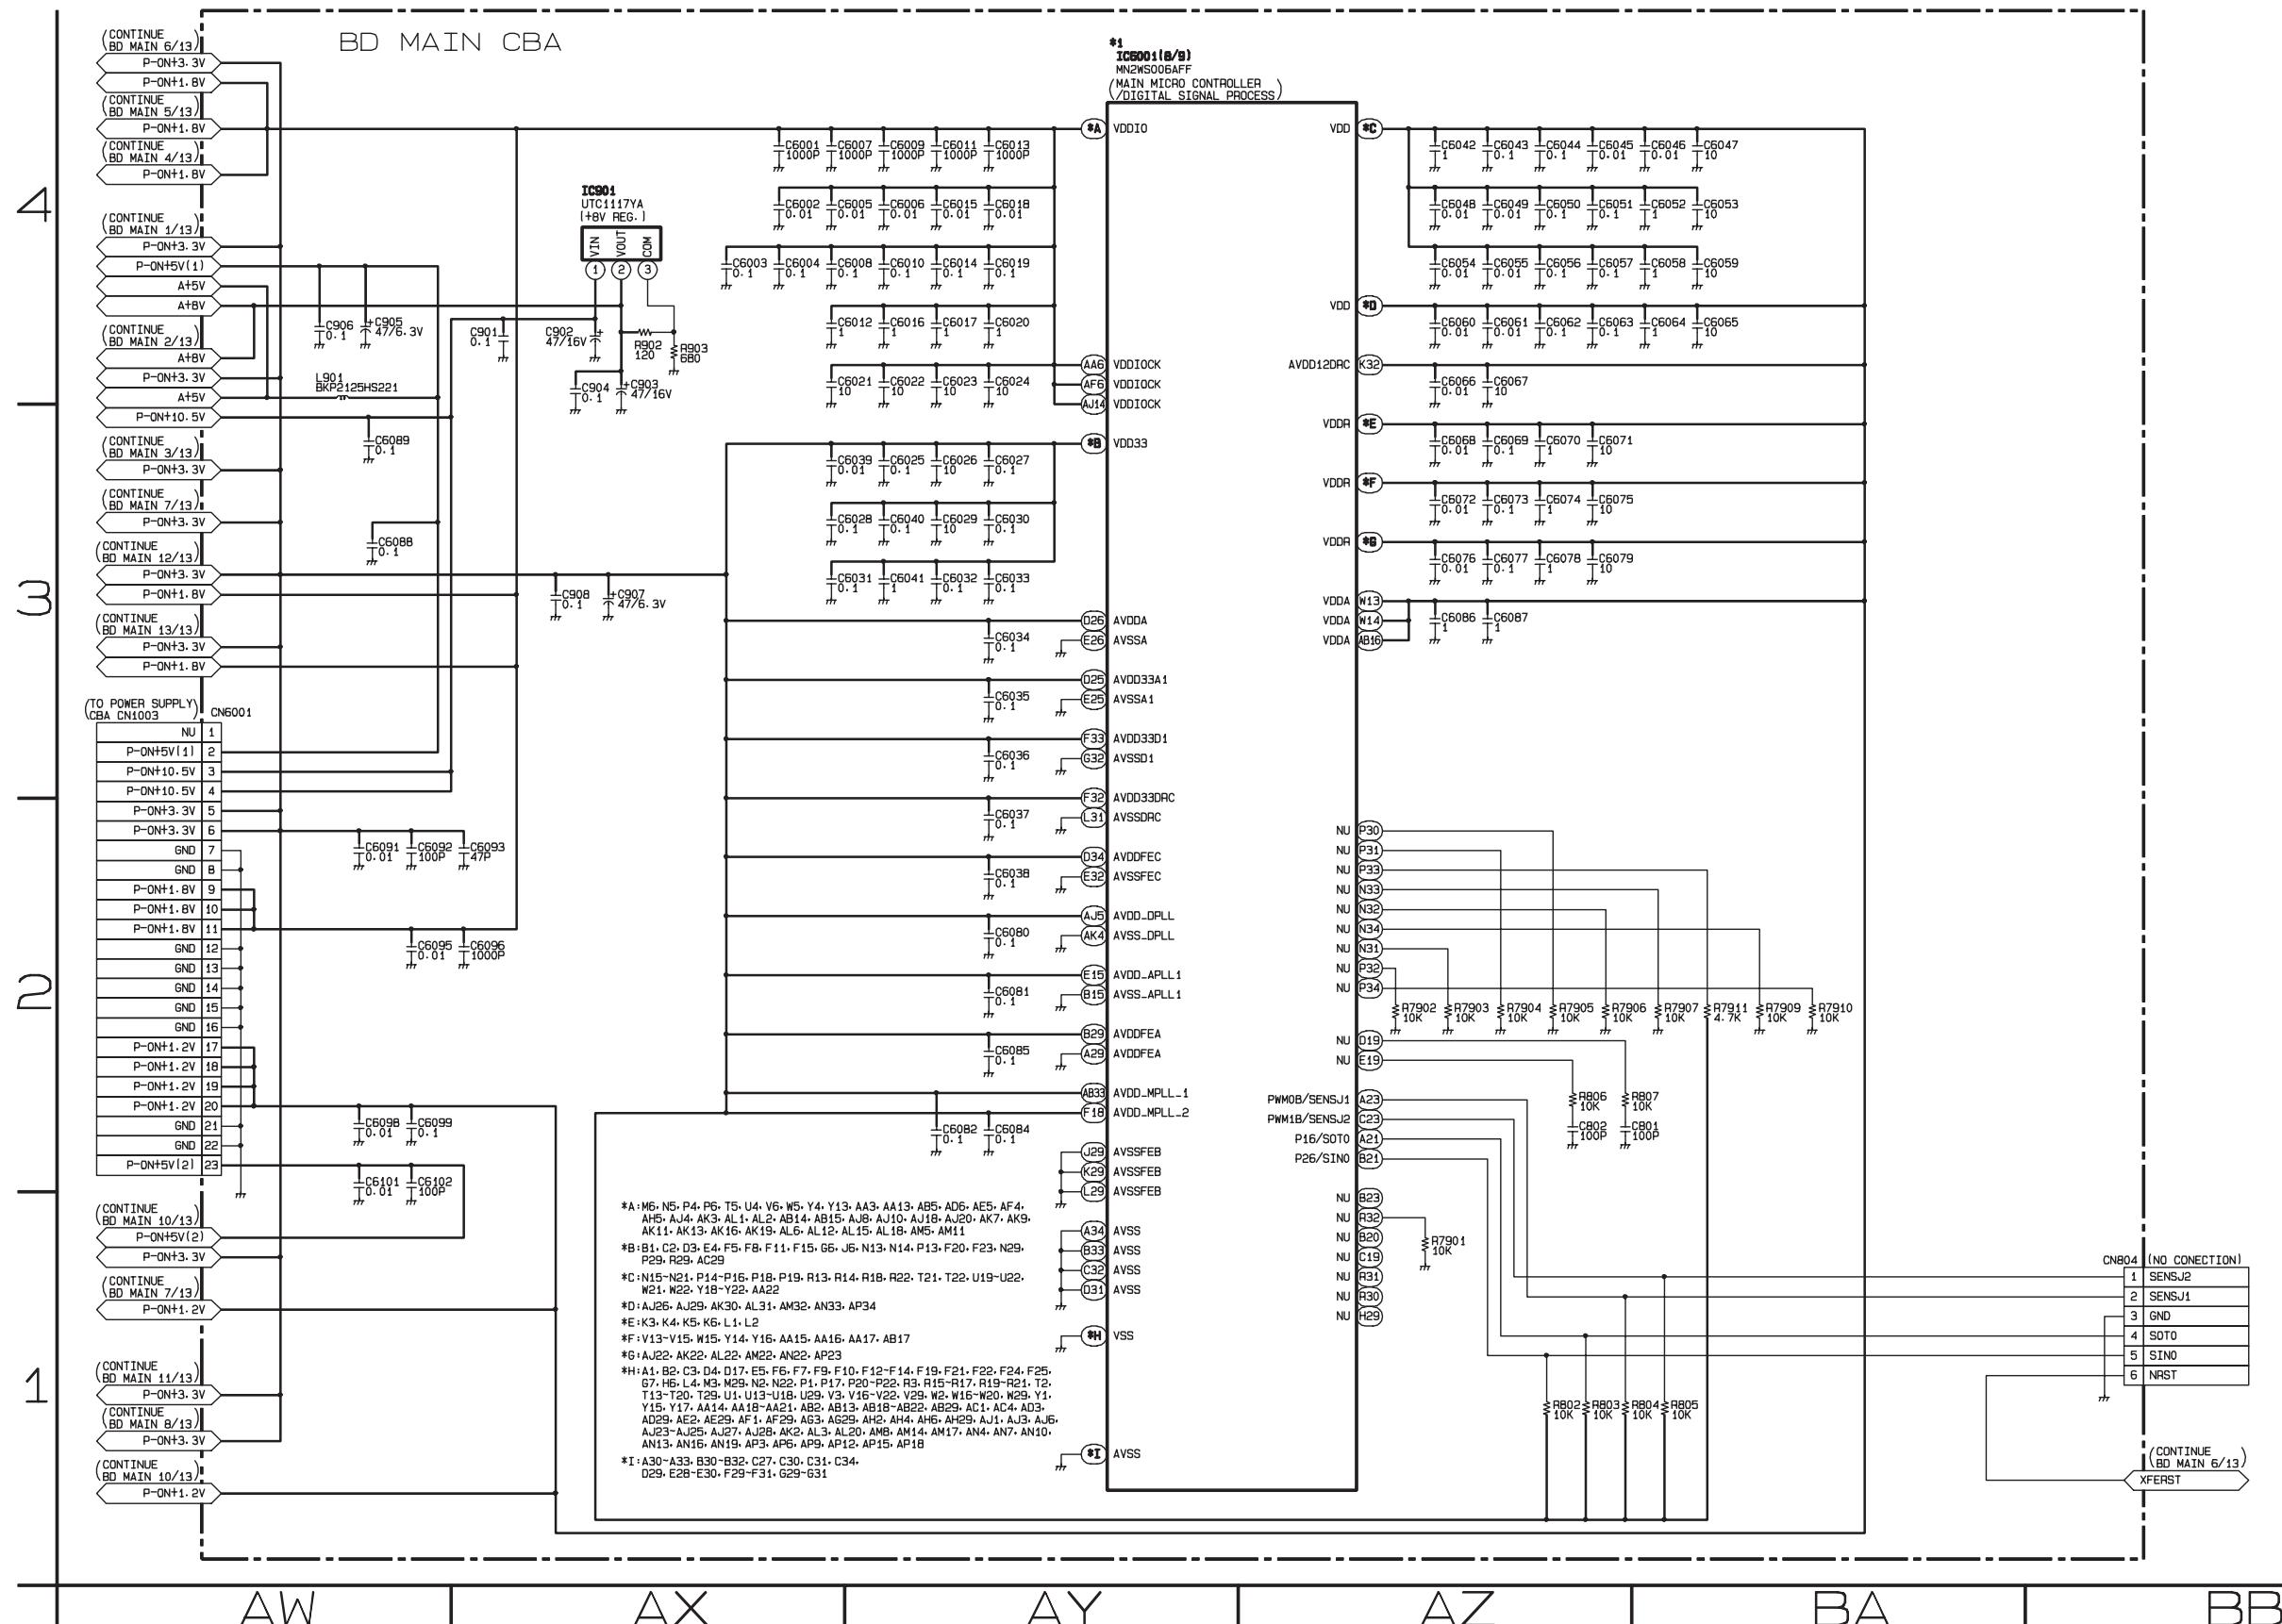


# BD Main 10/13 Schematic Diagram

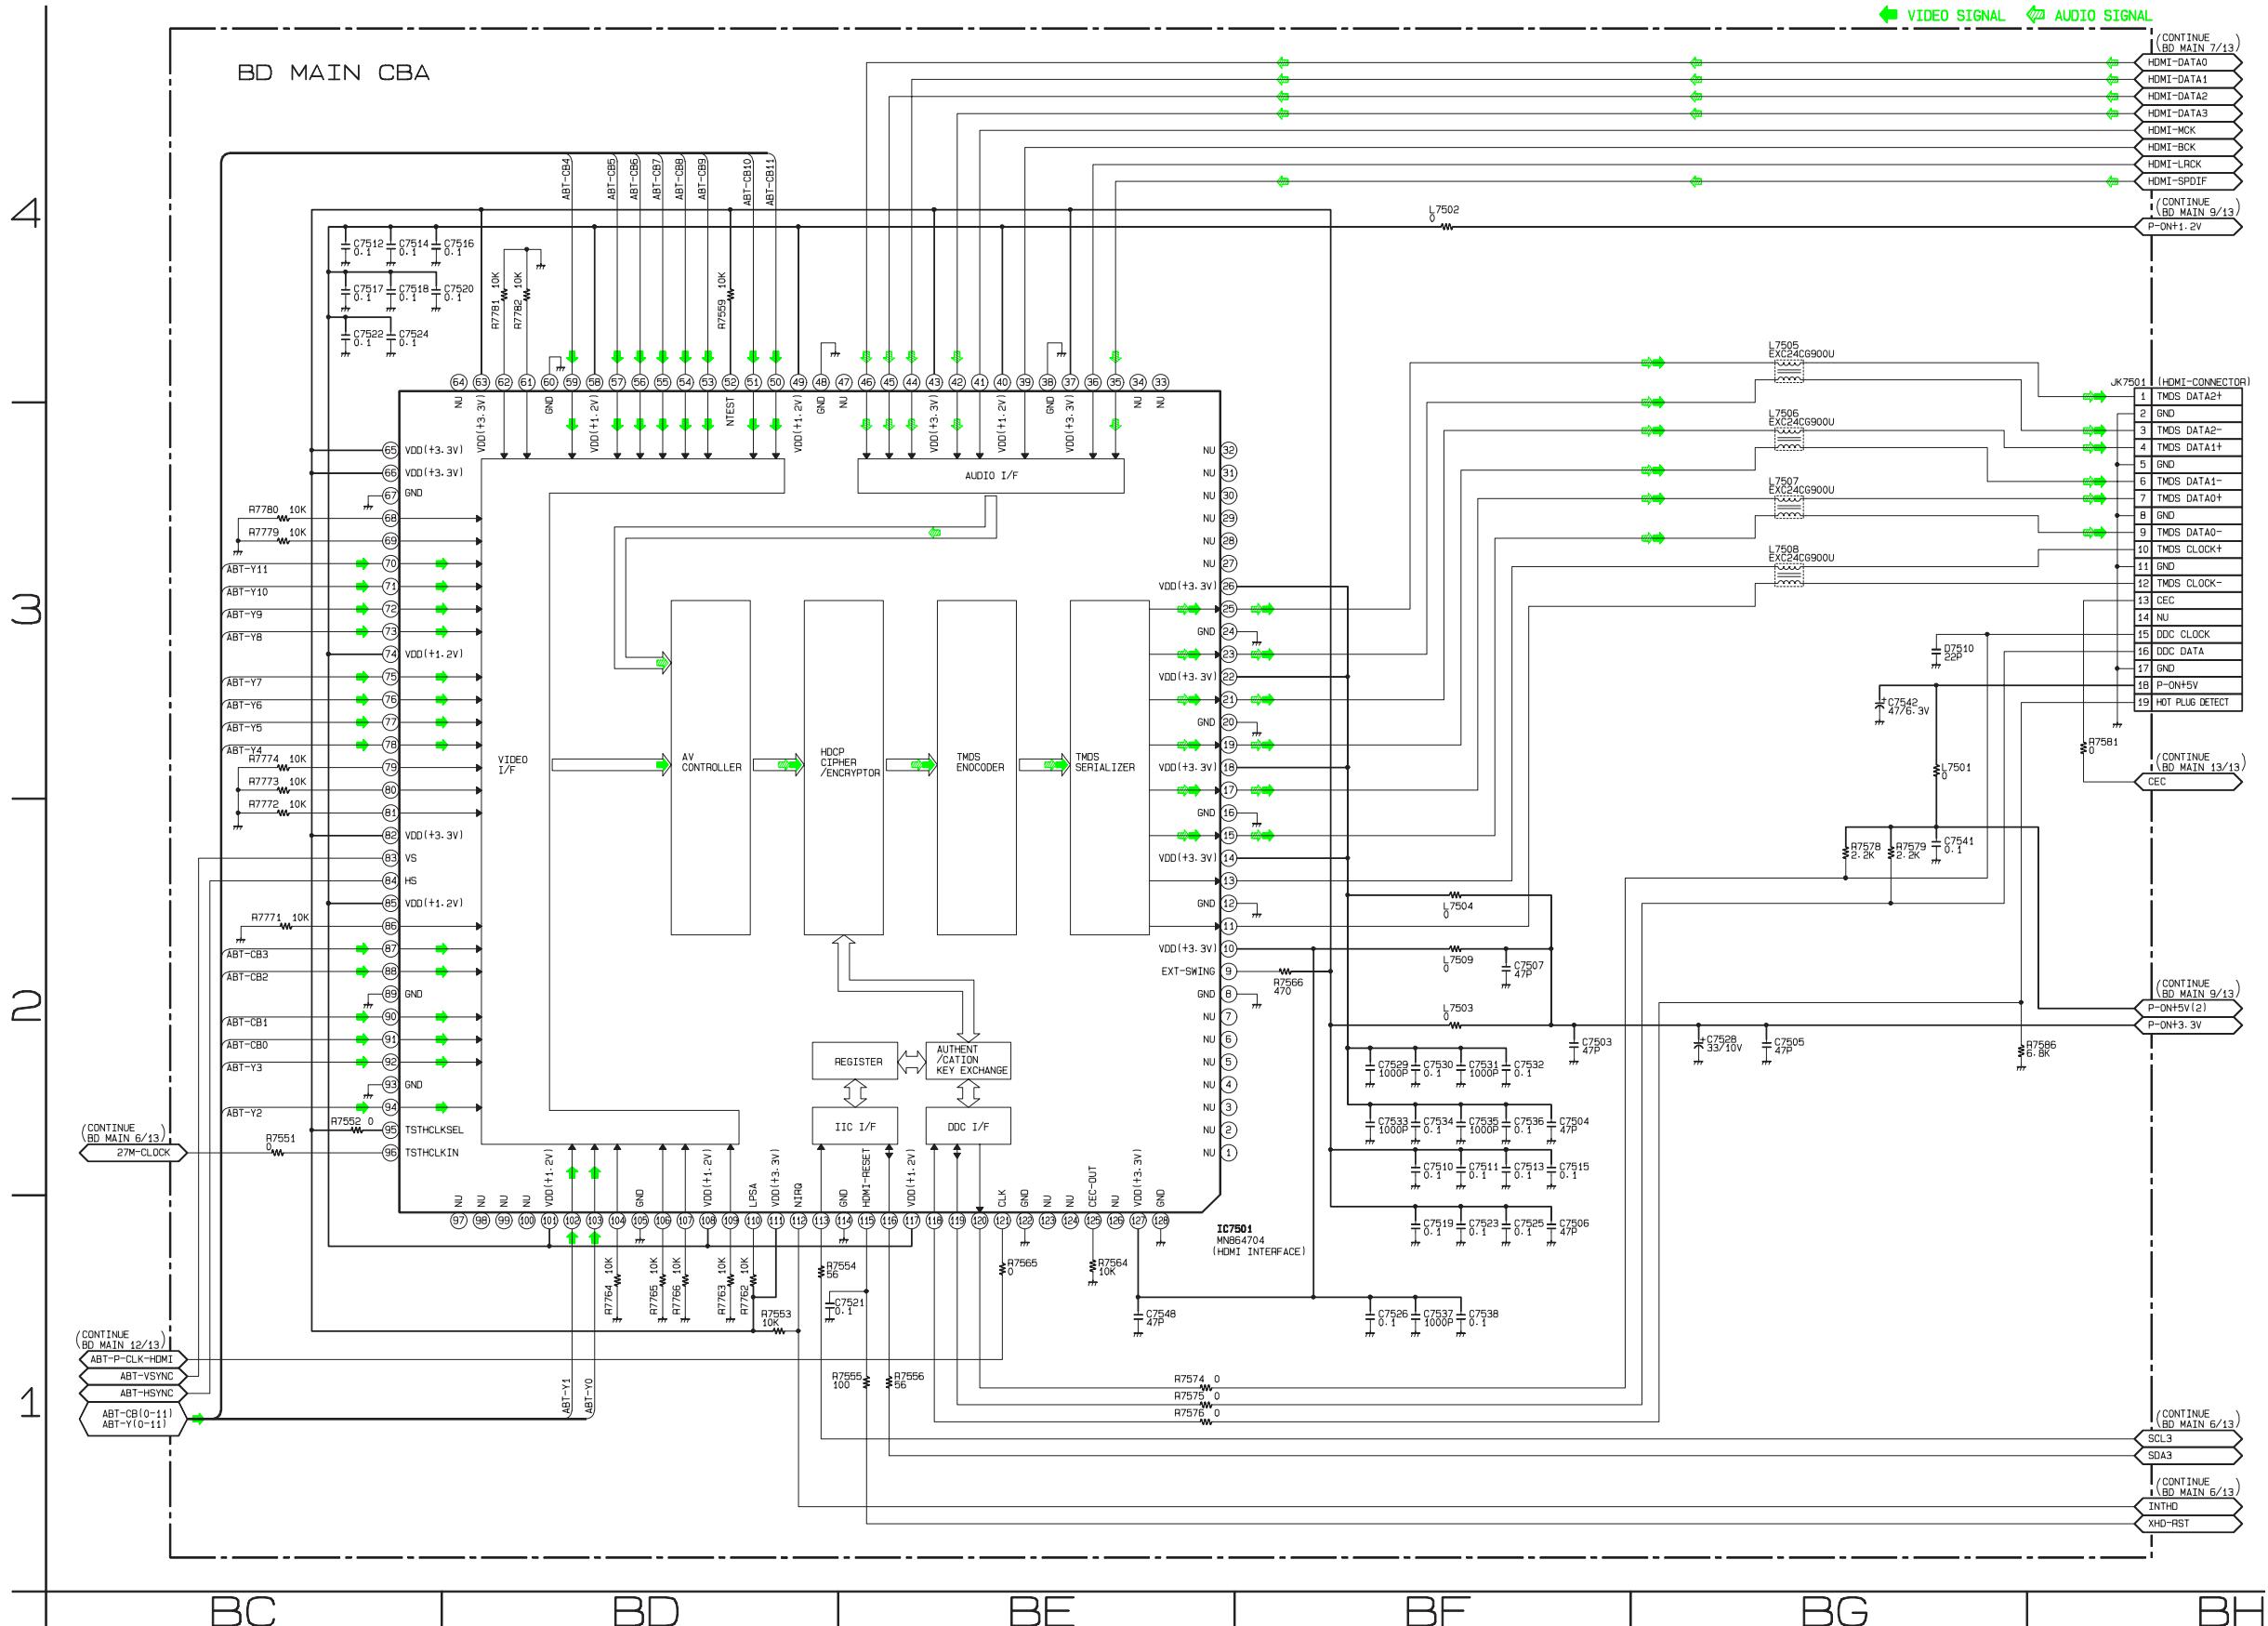


## BD Main 11/13 Schematic Diagram

\*1 NOTE:


The order of pins shown in this diagram is different from that of actual IC6001.  
IC6001 is divided into nine and shown as IC6001 (1/9) ~ IC6001 (9/9) in this BD Main Schematic Diagram Section.

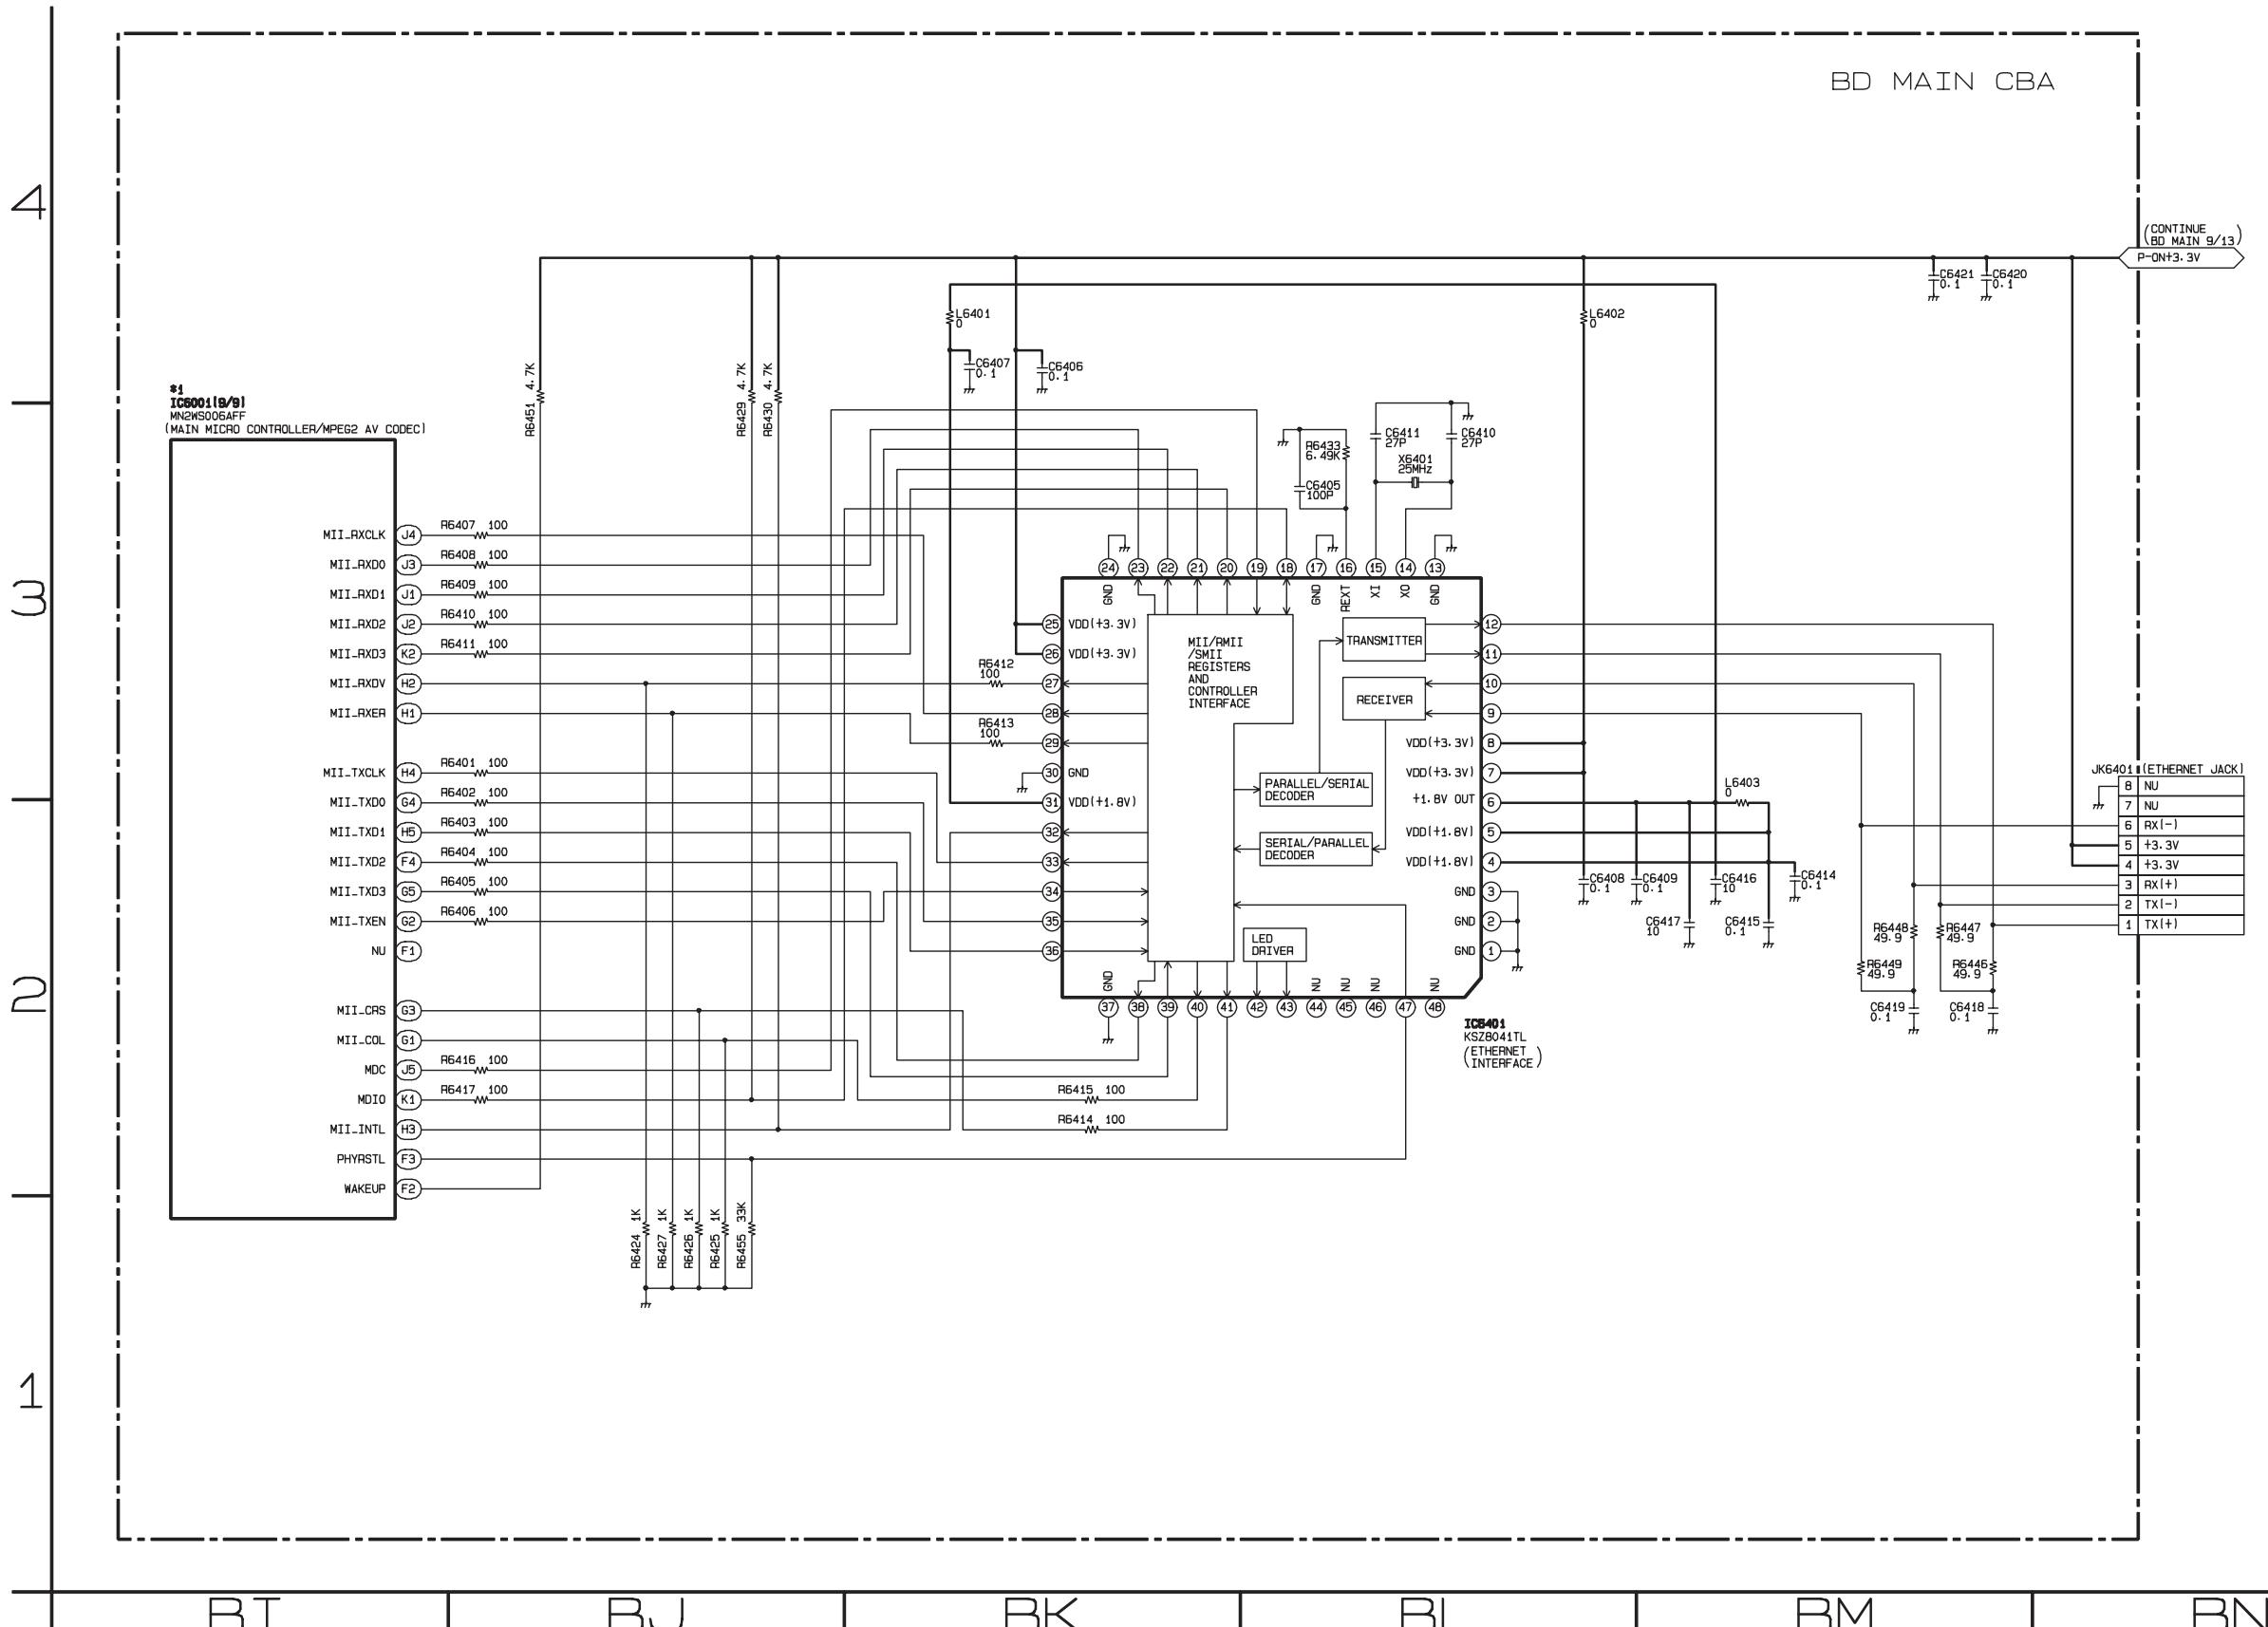


# BD Main 12/13 Schematic Diagram

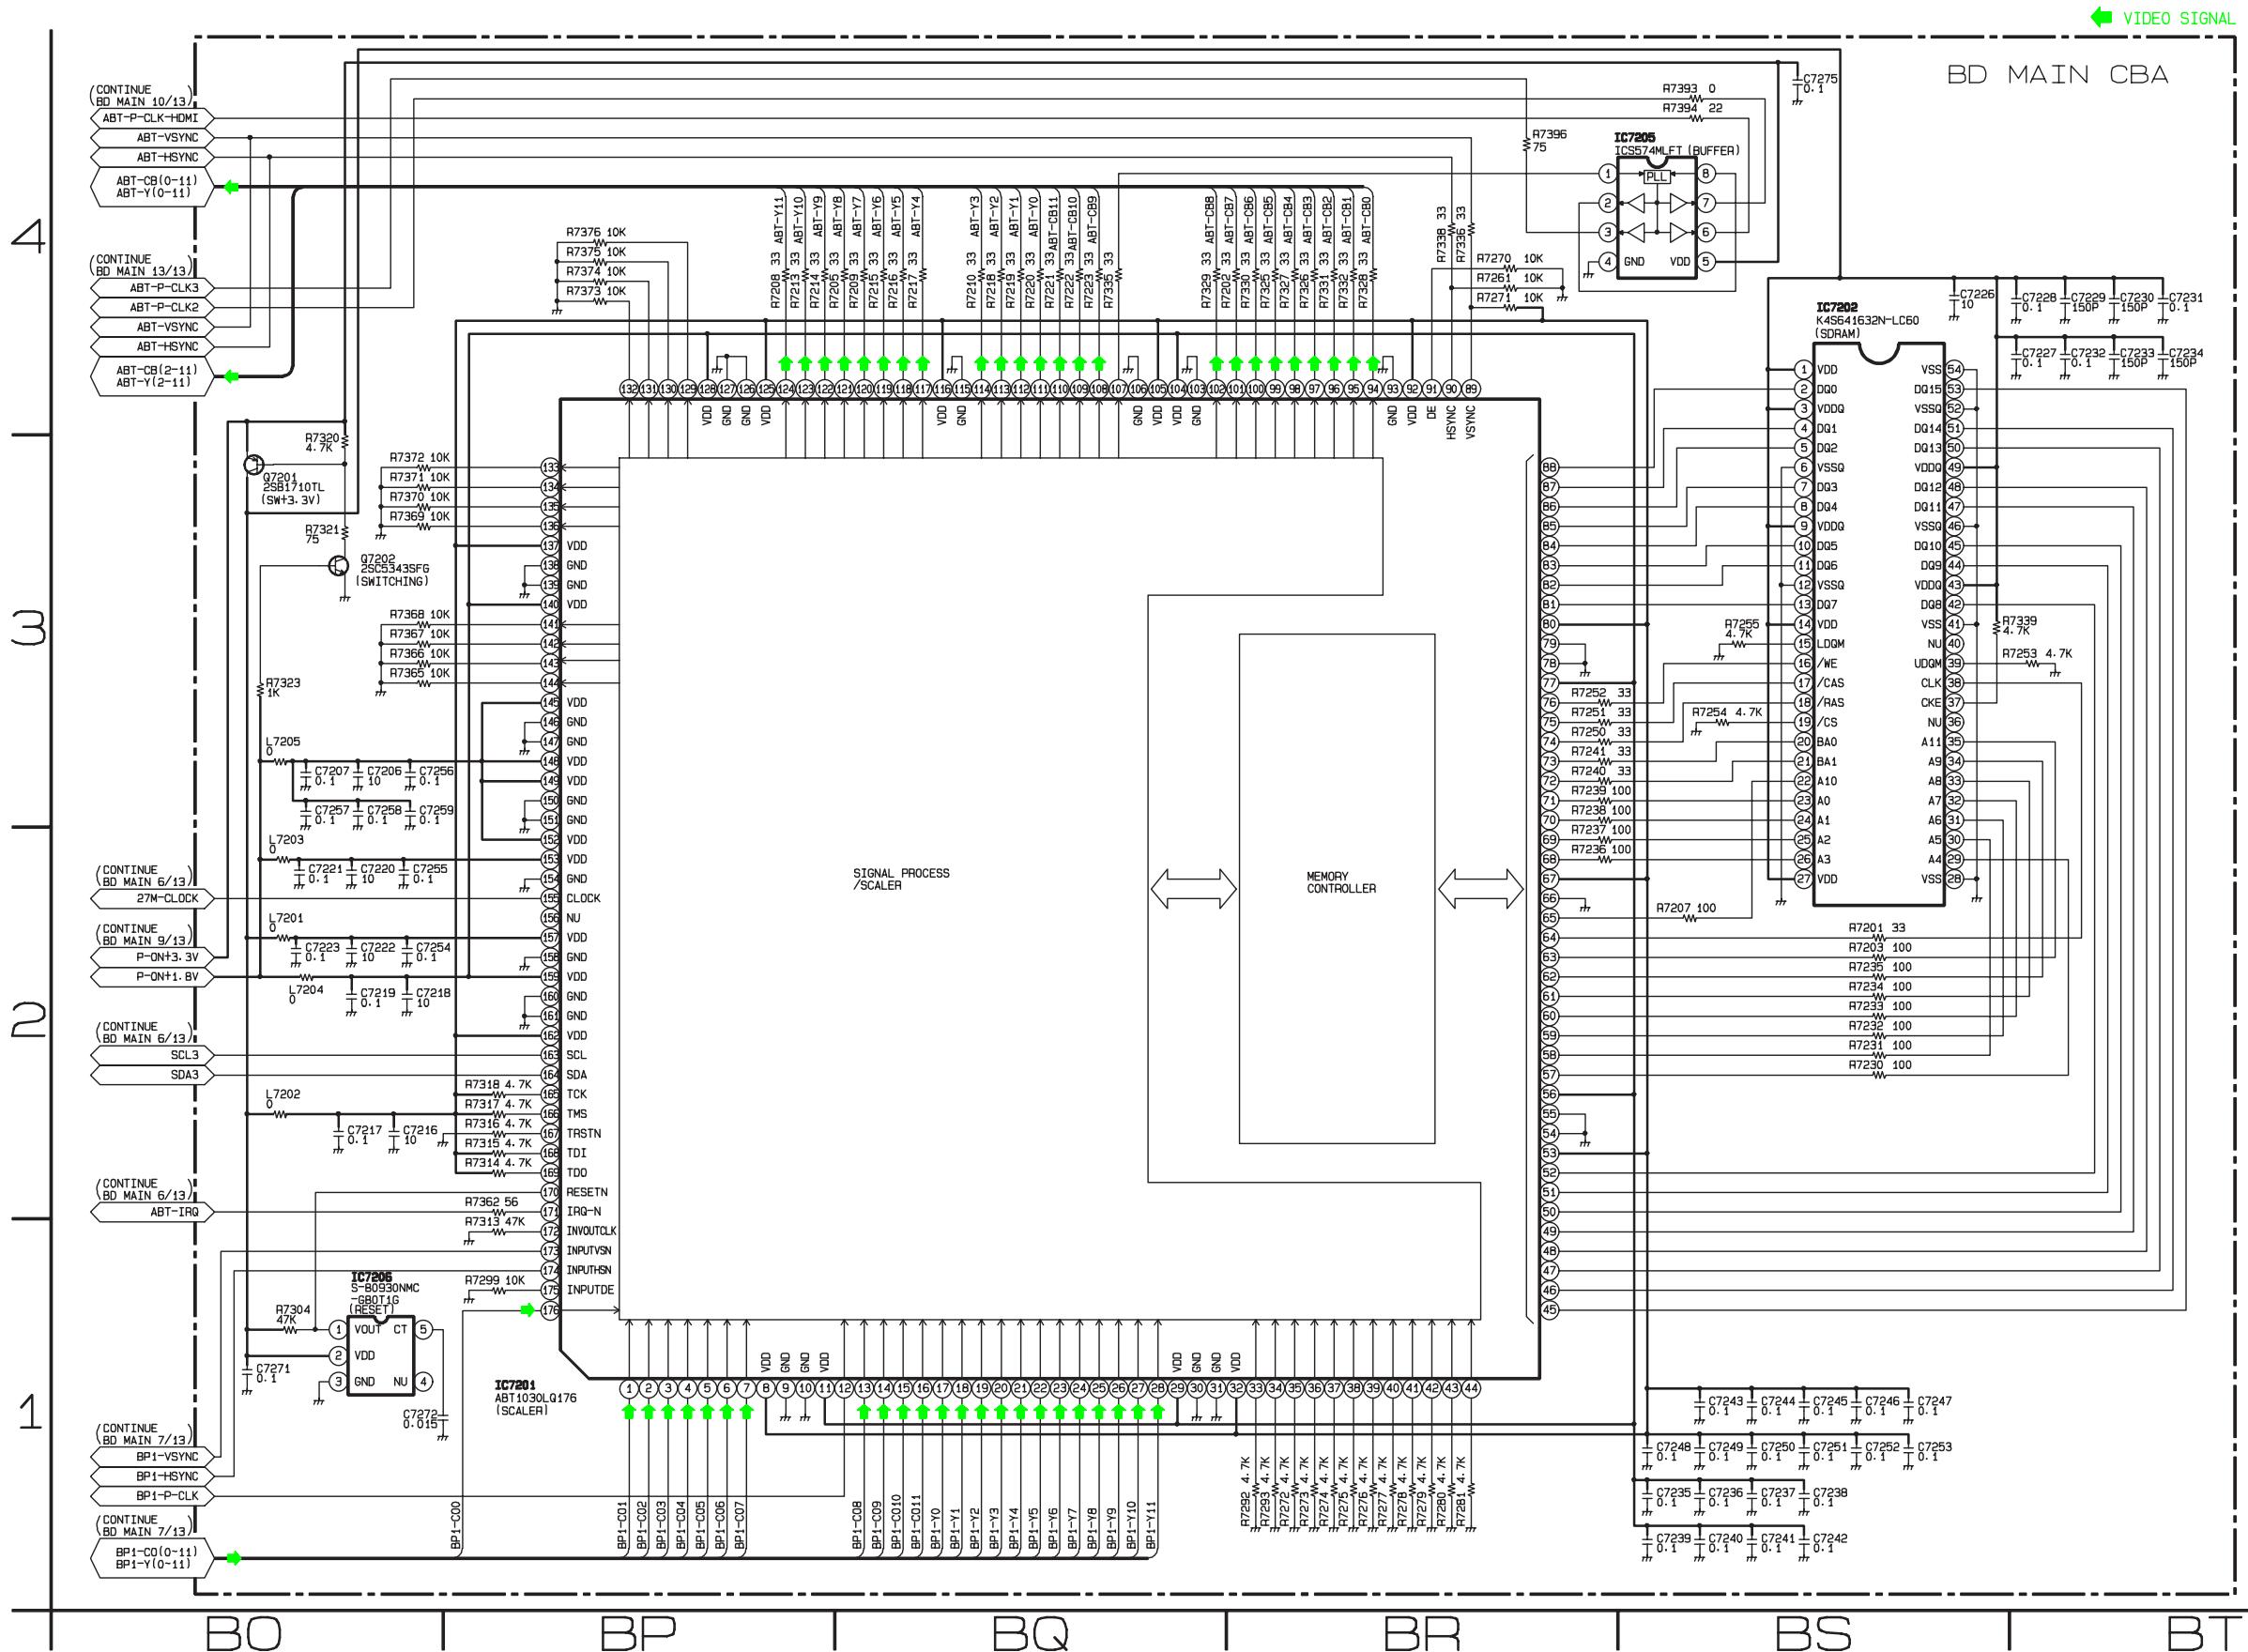


# BD Main 13/13 Schematic Diagram

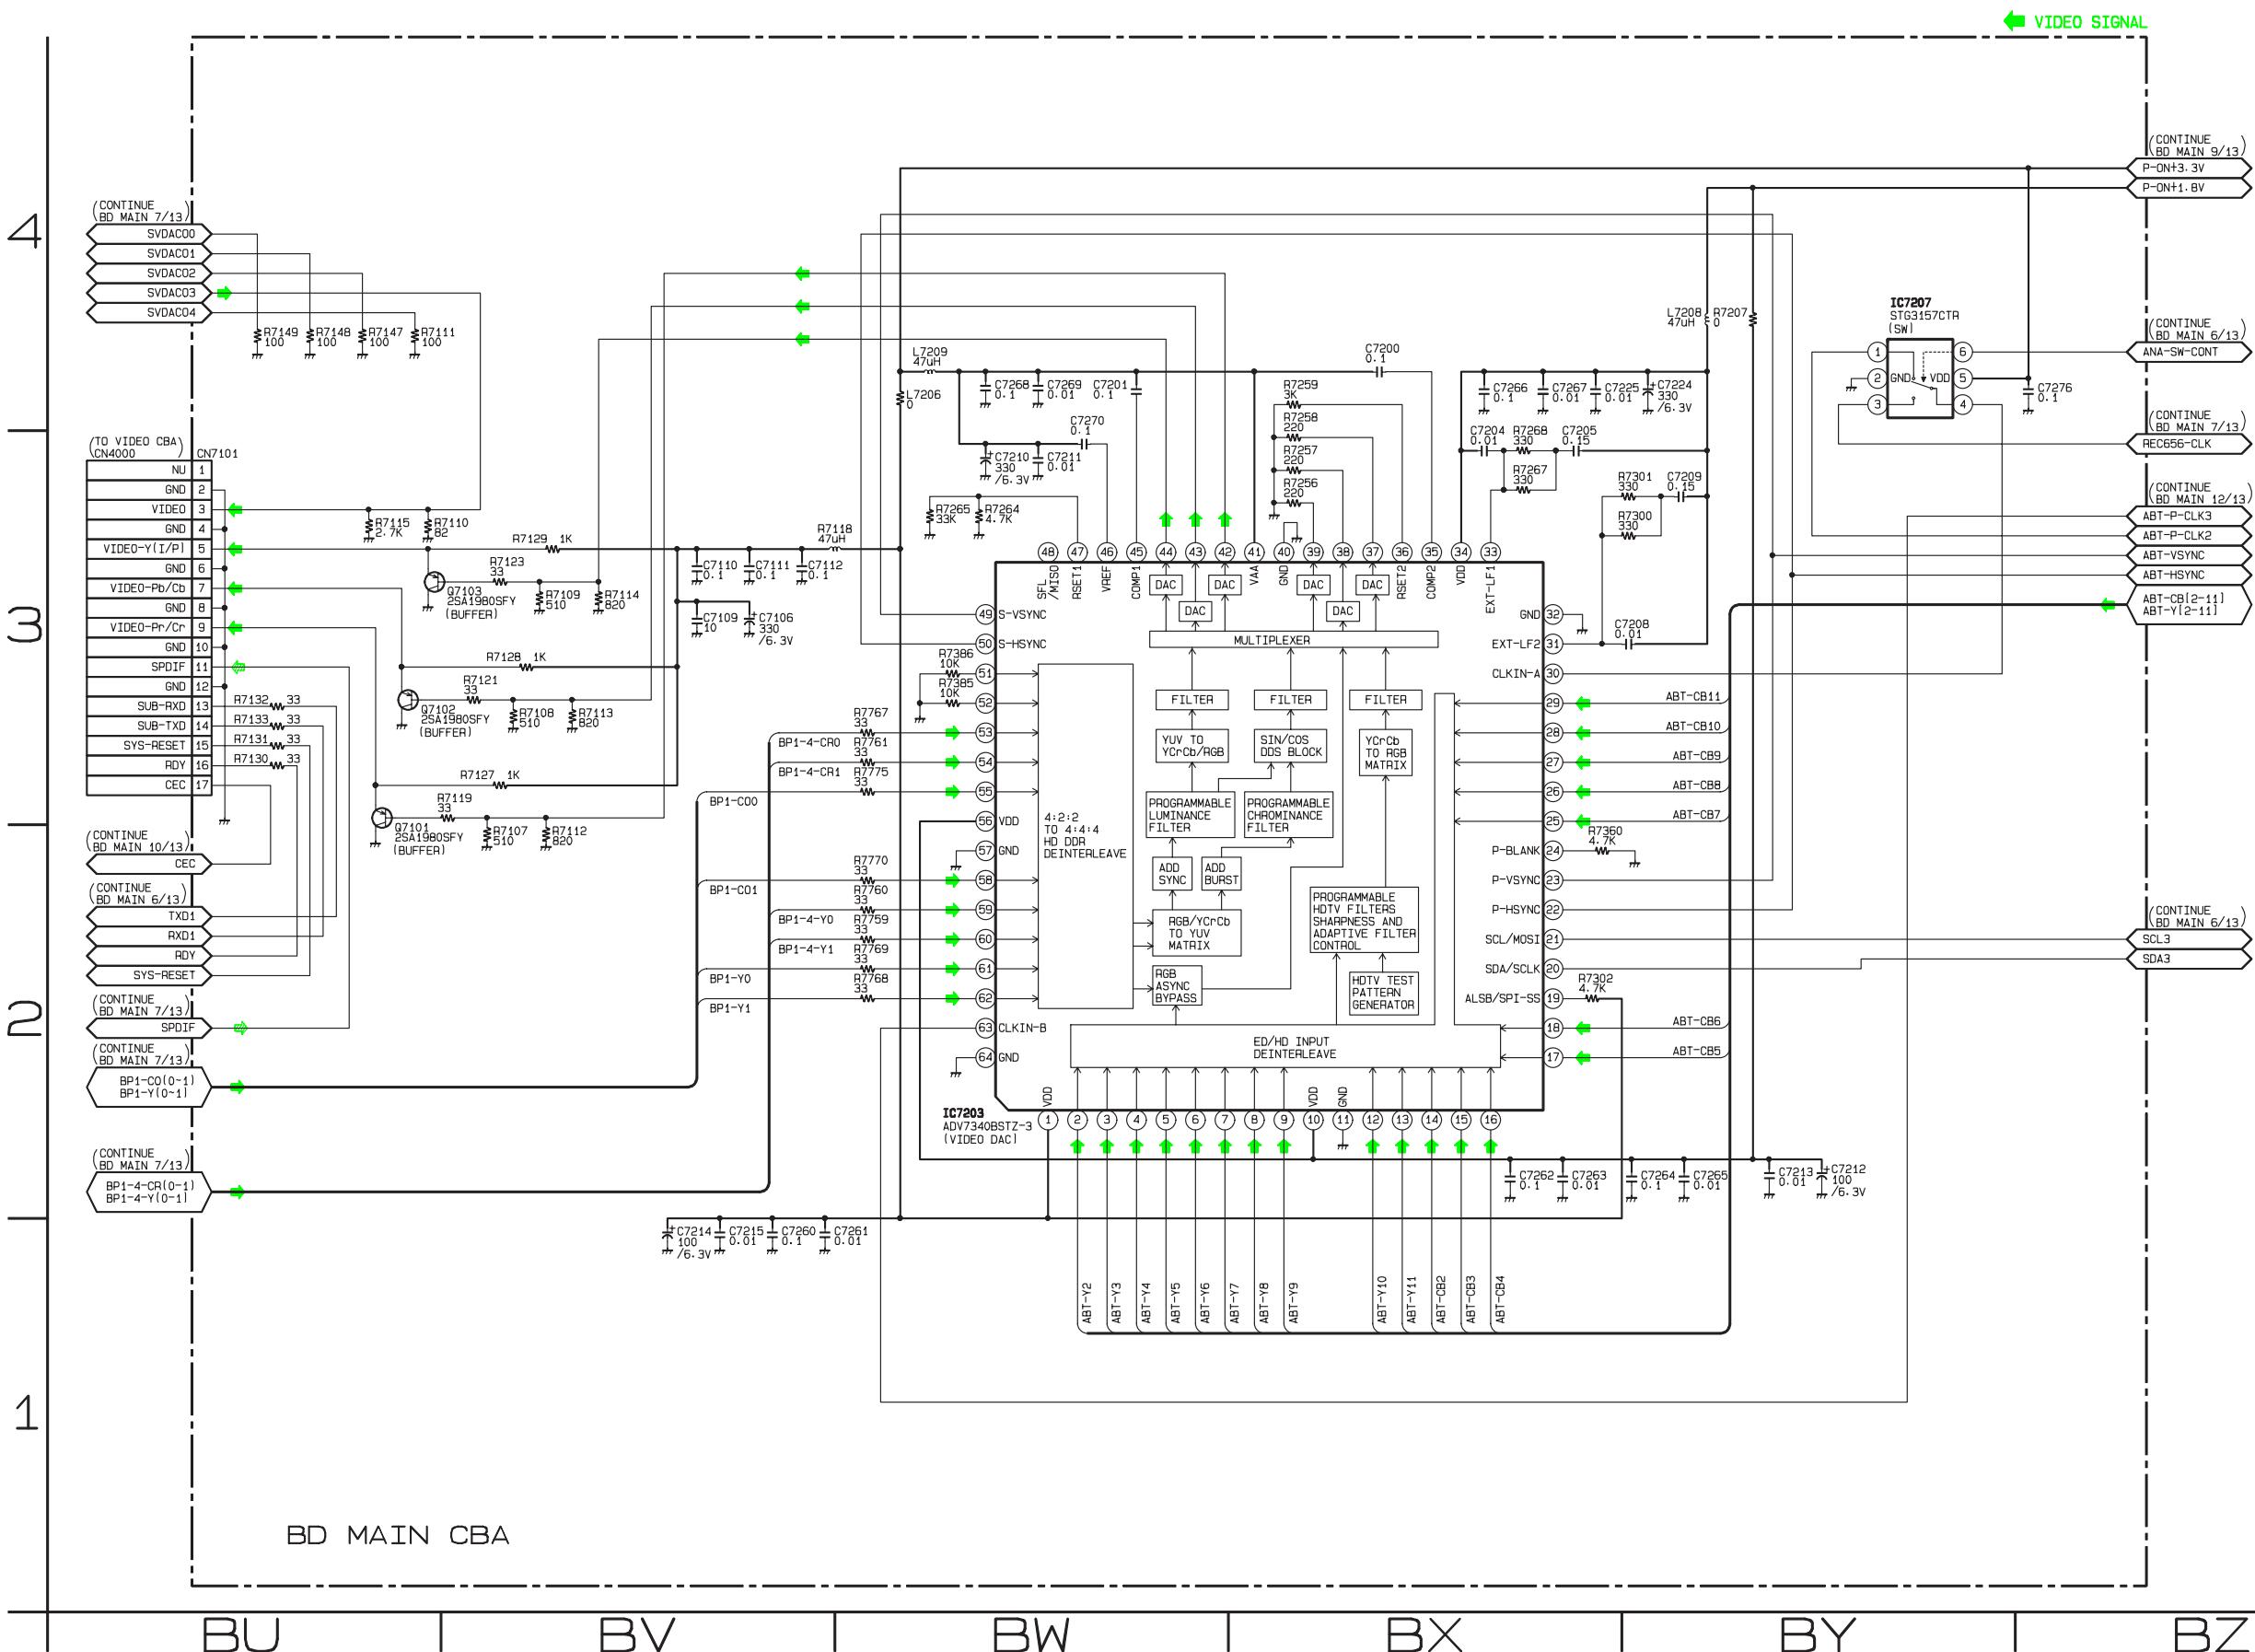


## **Audio CBA Top View**

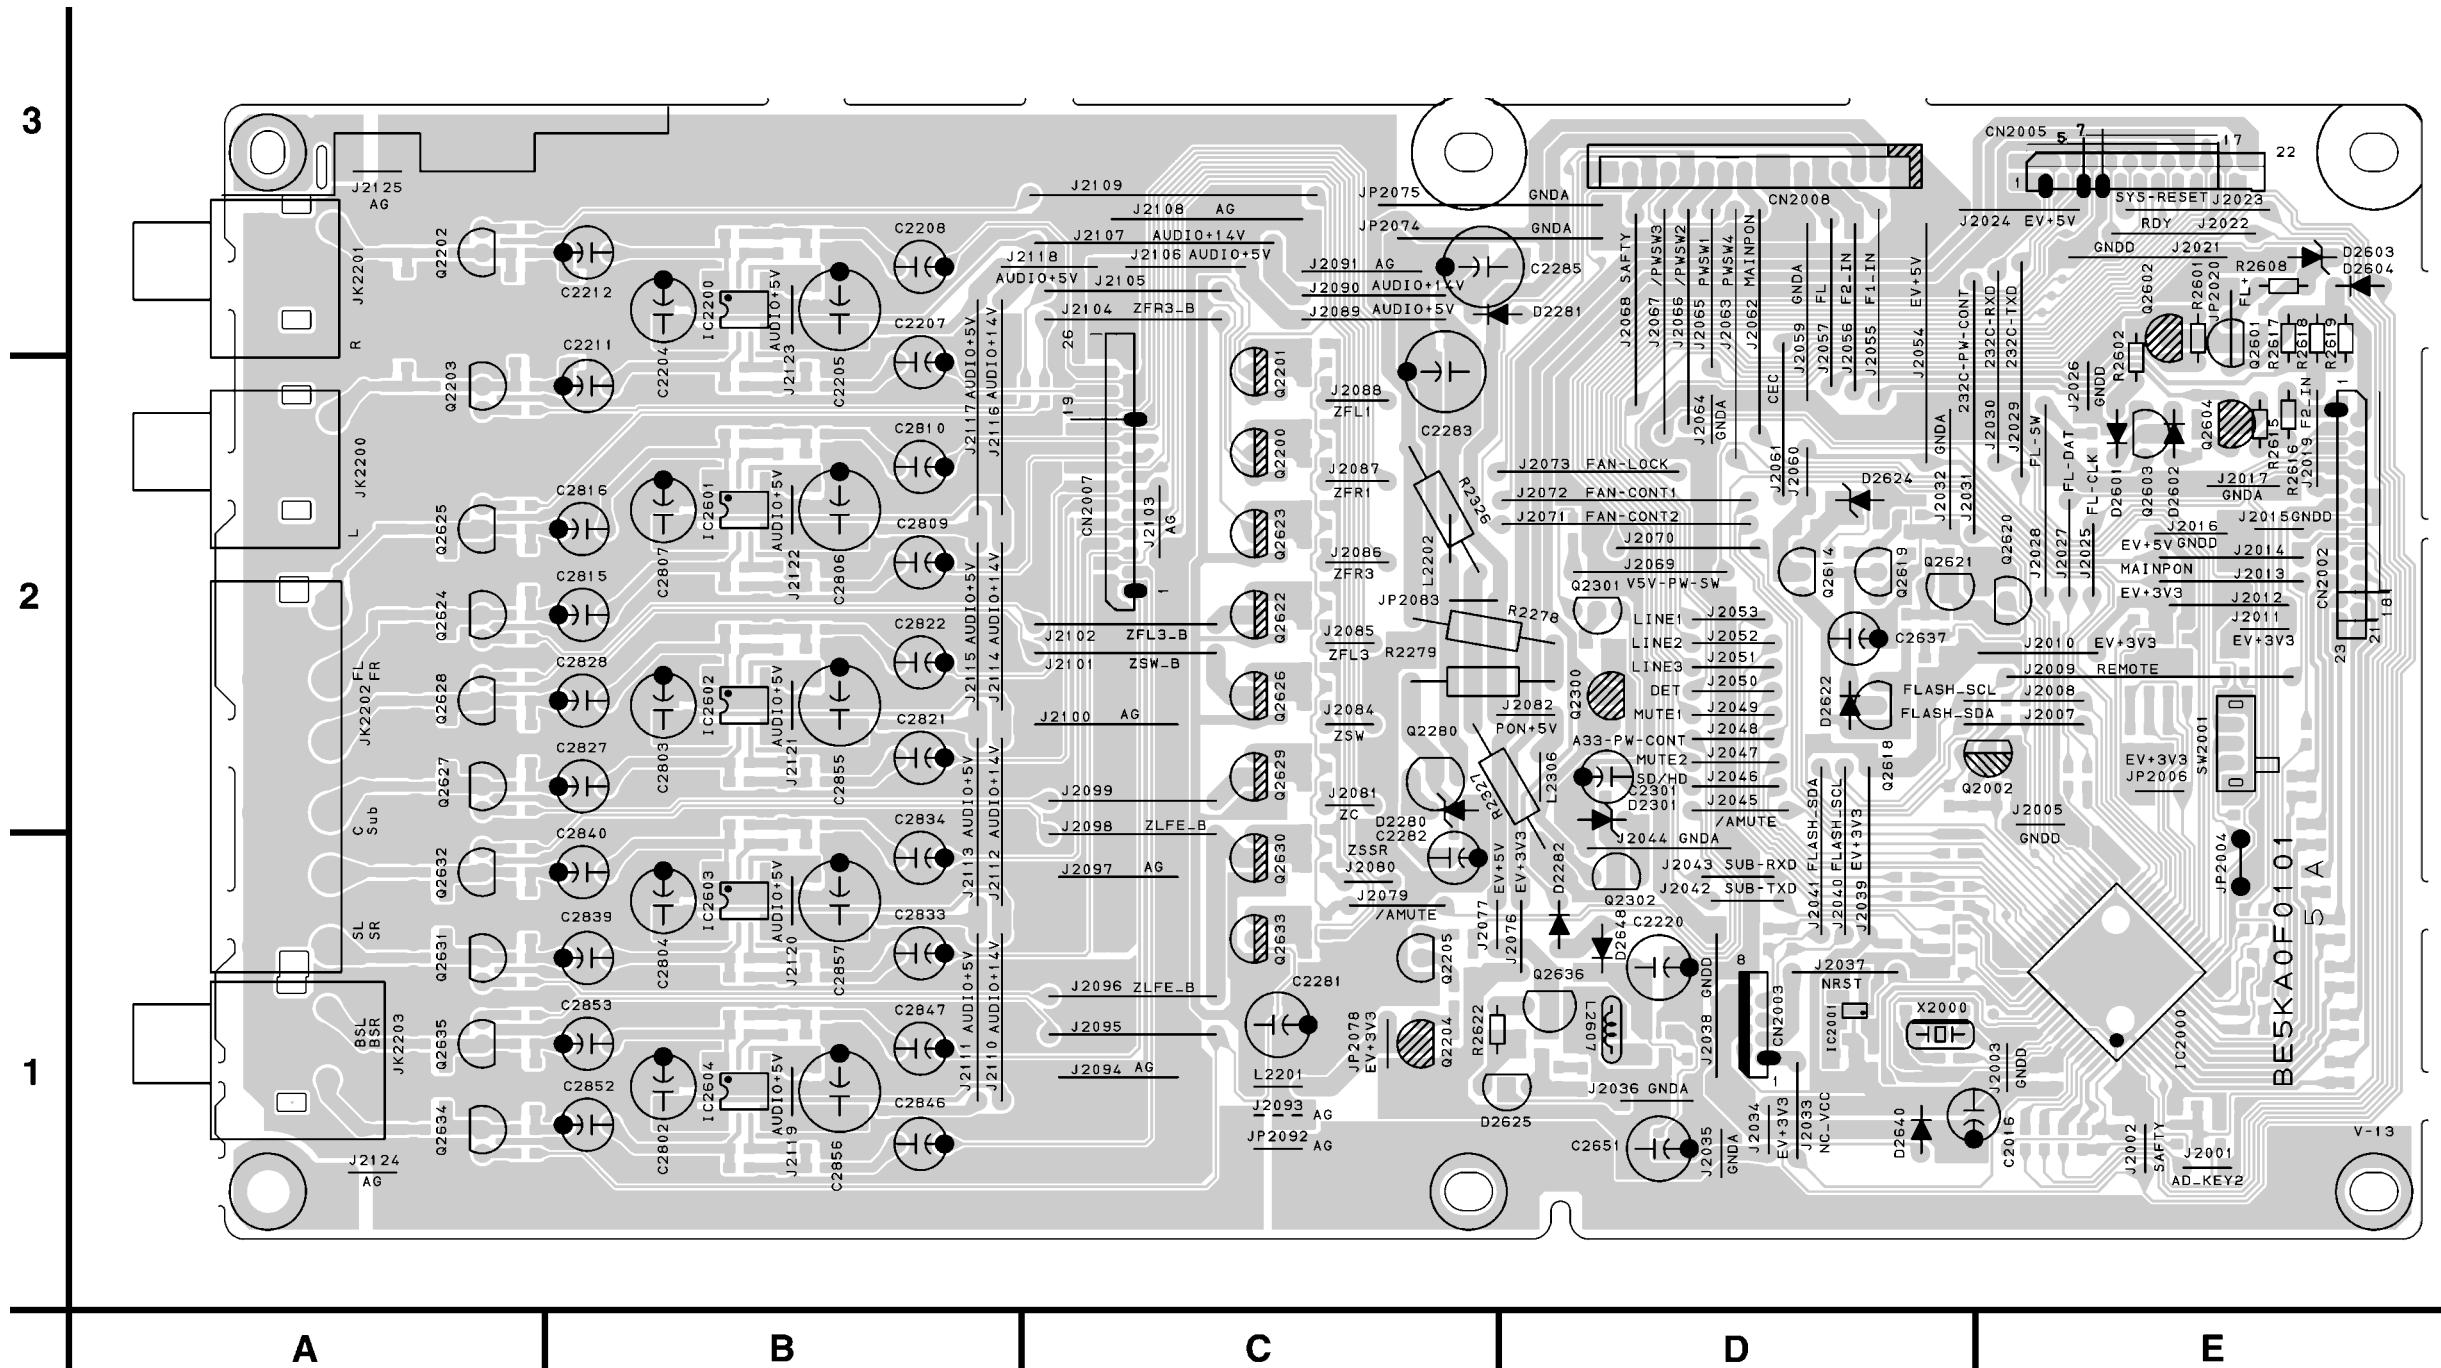


## **Audio CBA Bottom View**

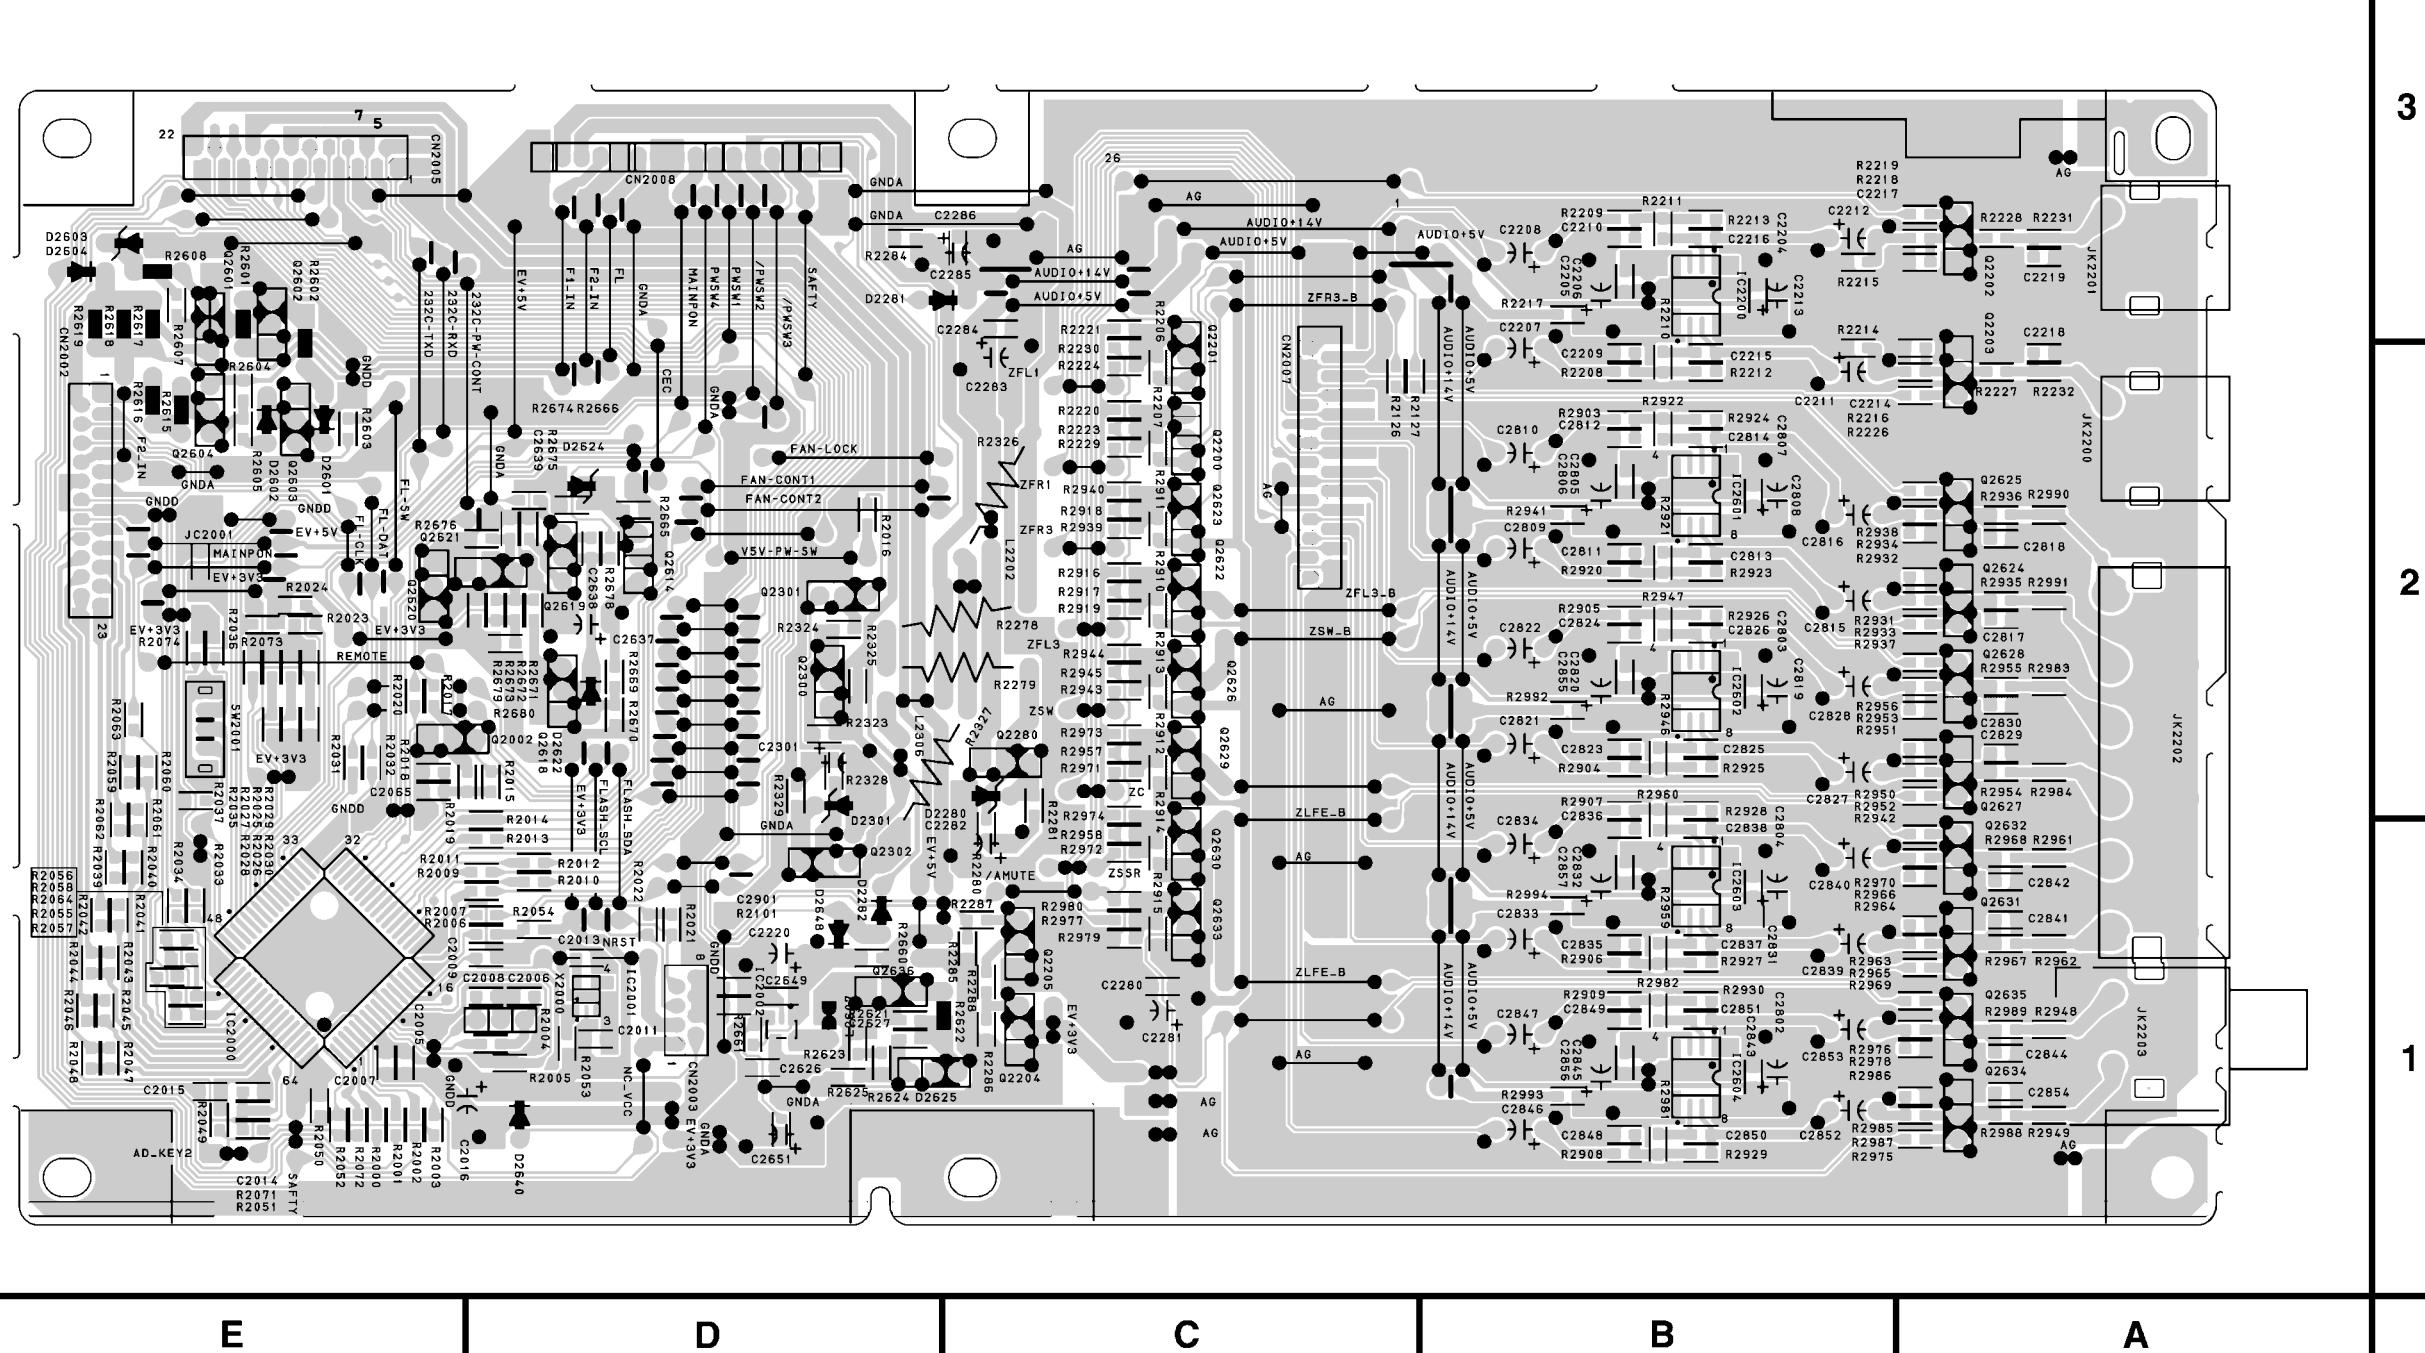

## **Video CBA Top View**

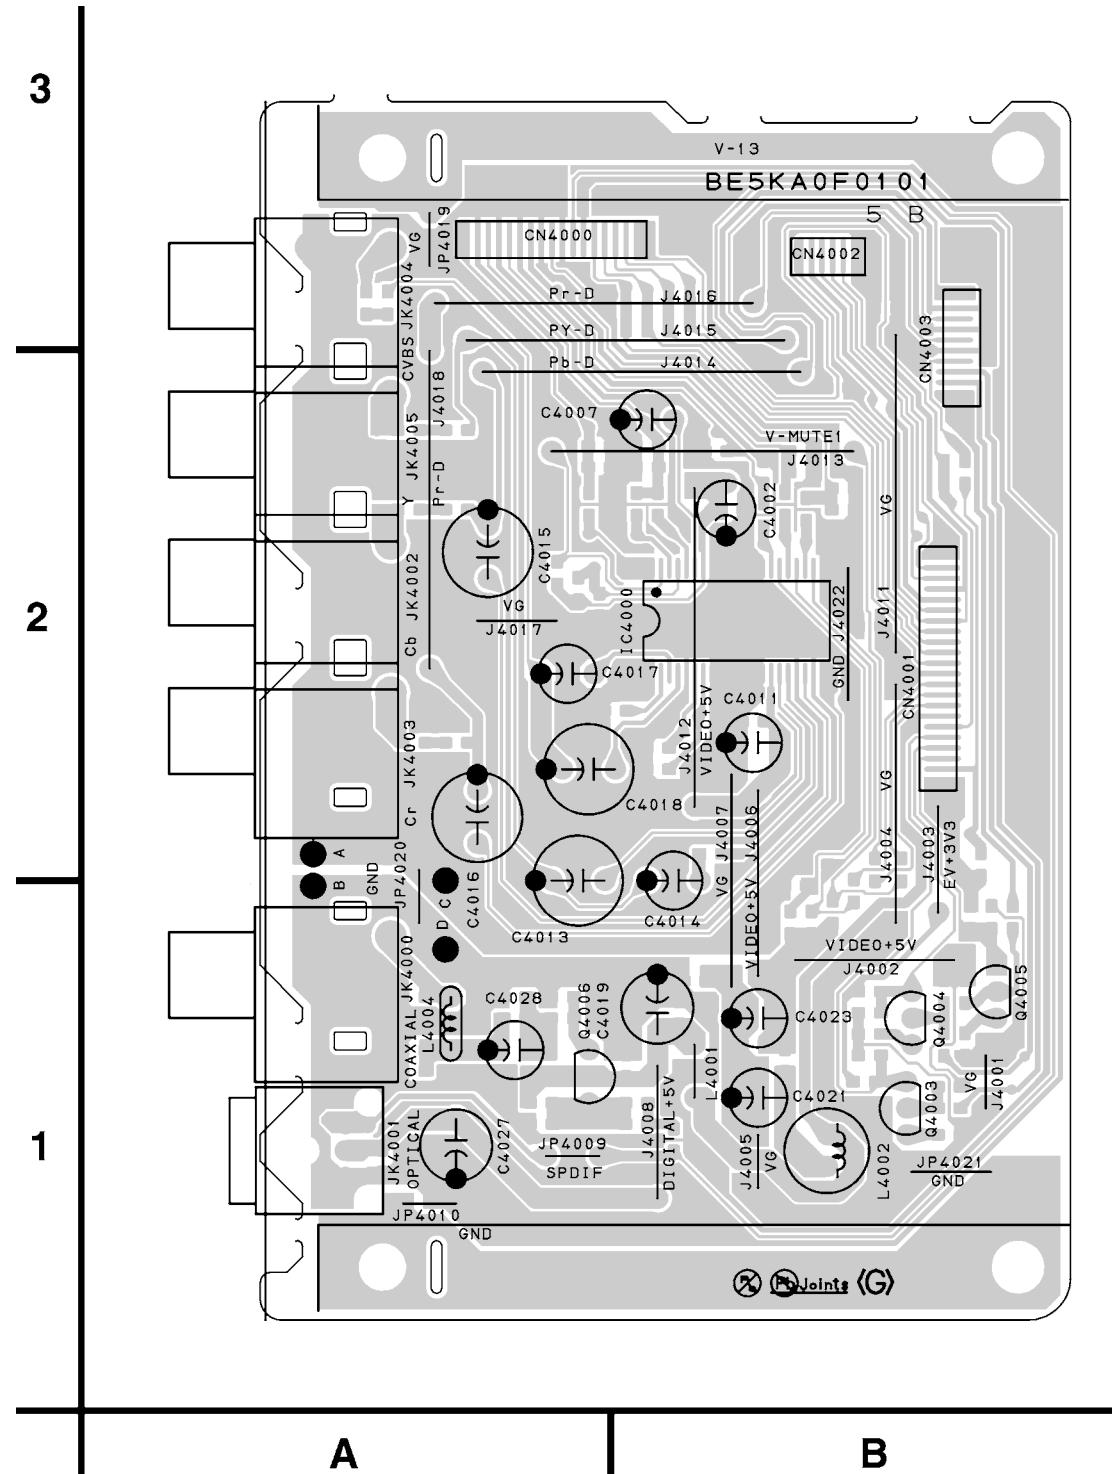


**Video CBA Bottom View**

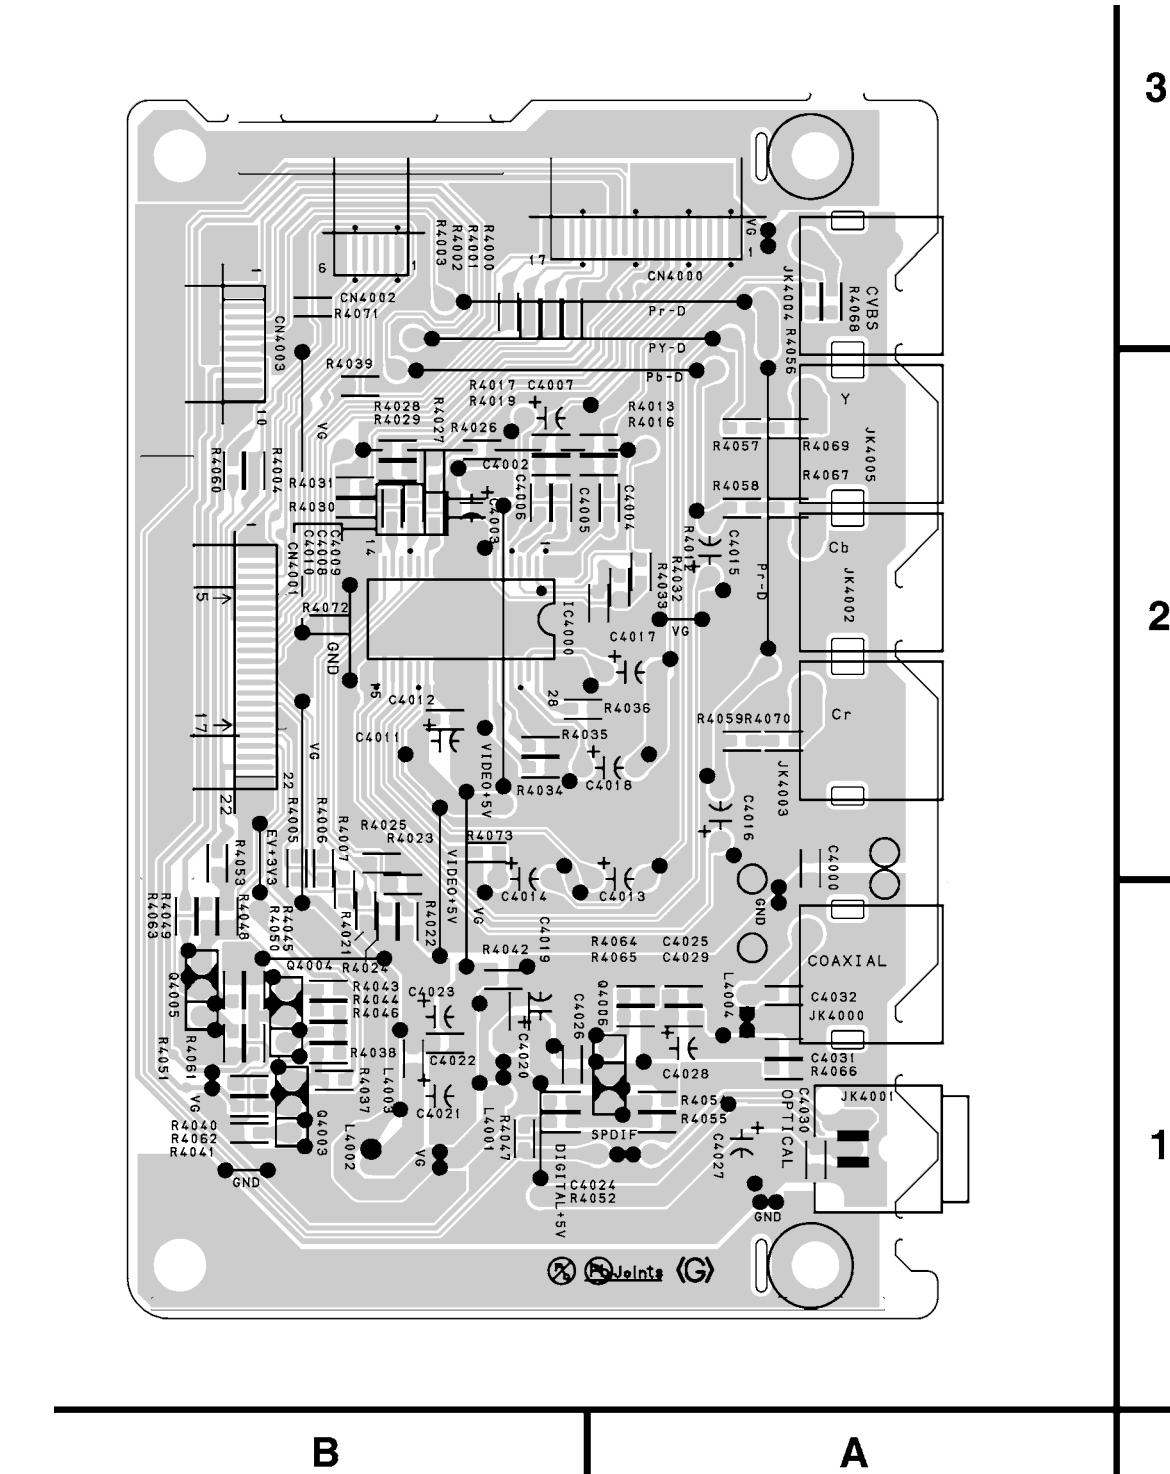

# Power Supply CBA Top View

## CAUTION !

Fixed voltage (or Auto voltage selectable) power supply circuit is used in this unit.  
If Main Fuse (F1001) is blown , check to see that all components in the power supply circuit are not defective before you connect the AC plug to the AC power supply.  
Otherwise it may cause some components in the power supply circuit to fail.

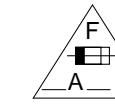

## CAUTION !

For continued protection against fire hazard,  
replace only with the same type fuse.  
ATTENTION : Pour une protection continue les risques  
d'incendie n'utiliser que des fusible de même type.


### Risk of fire-replace fuse as marked.

"This symbol means fast operating fuse."  
"Ce symbole représente un fusible à fusion rapide."

Because a hot chassis ground is present in the power supply circuit, an isolation transformer must be used when repairing.  
Also, in order to have the ability to increase the input slowly, when troubleshooting this type of power supply circuit, a variable isolation transformer is required.

## NOTE:


The voltage for parts in hot circuit is measured using hot GND as a common terminal.

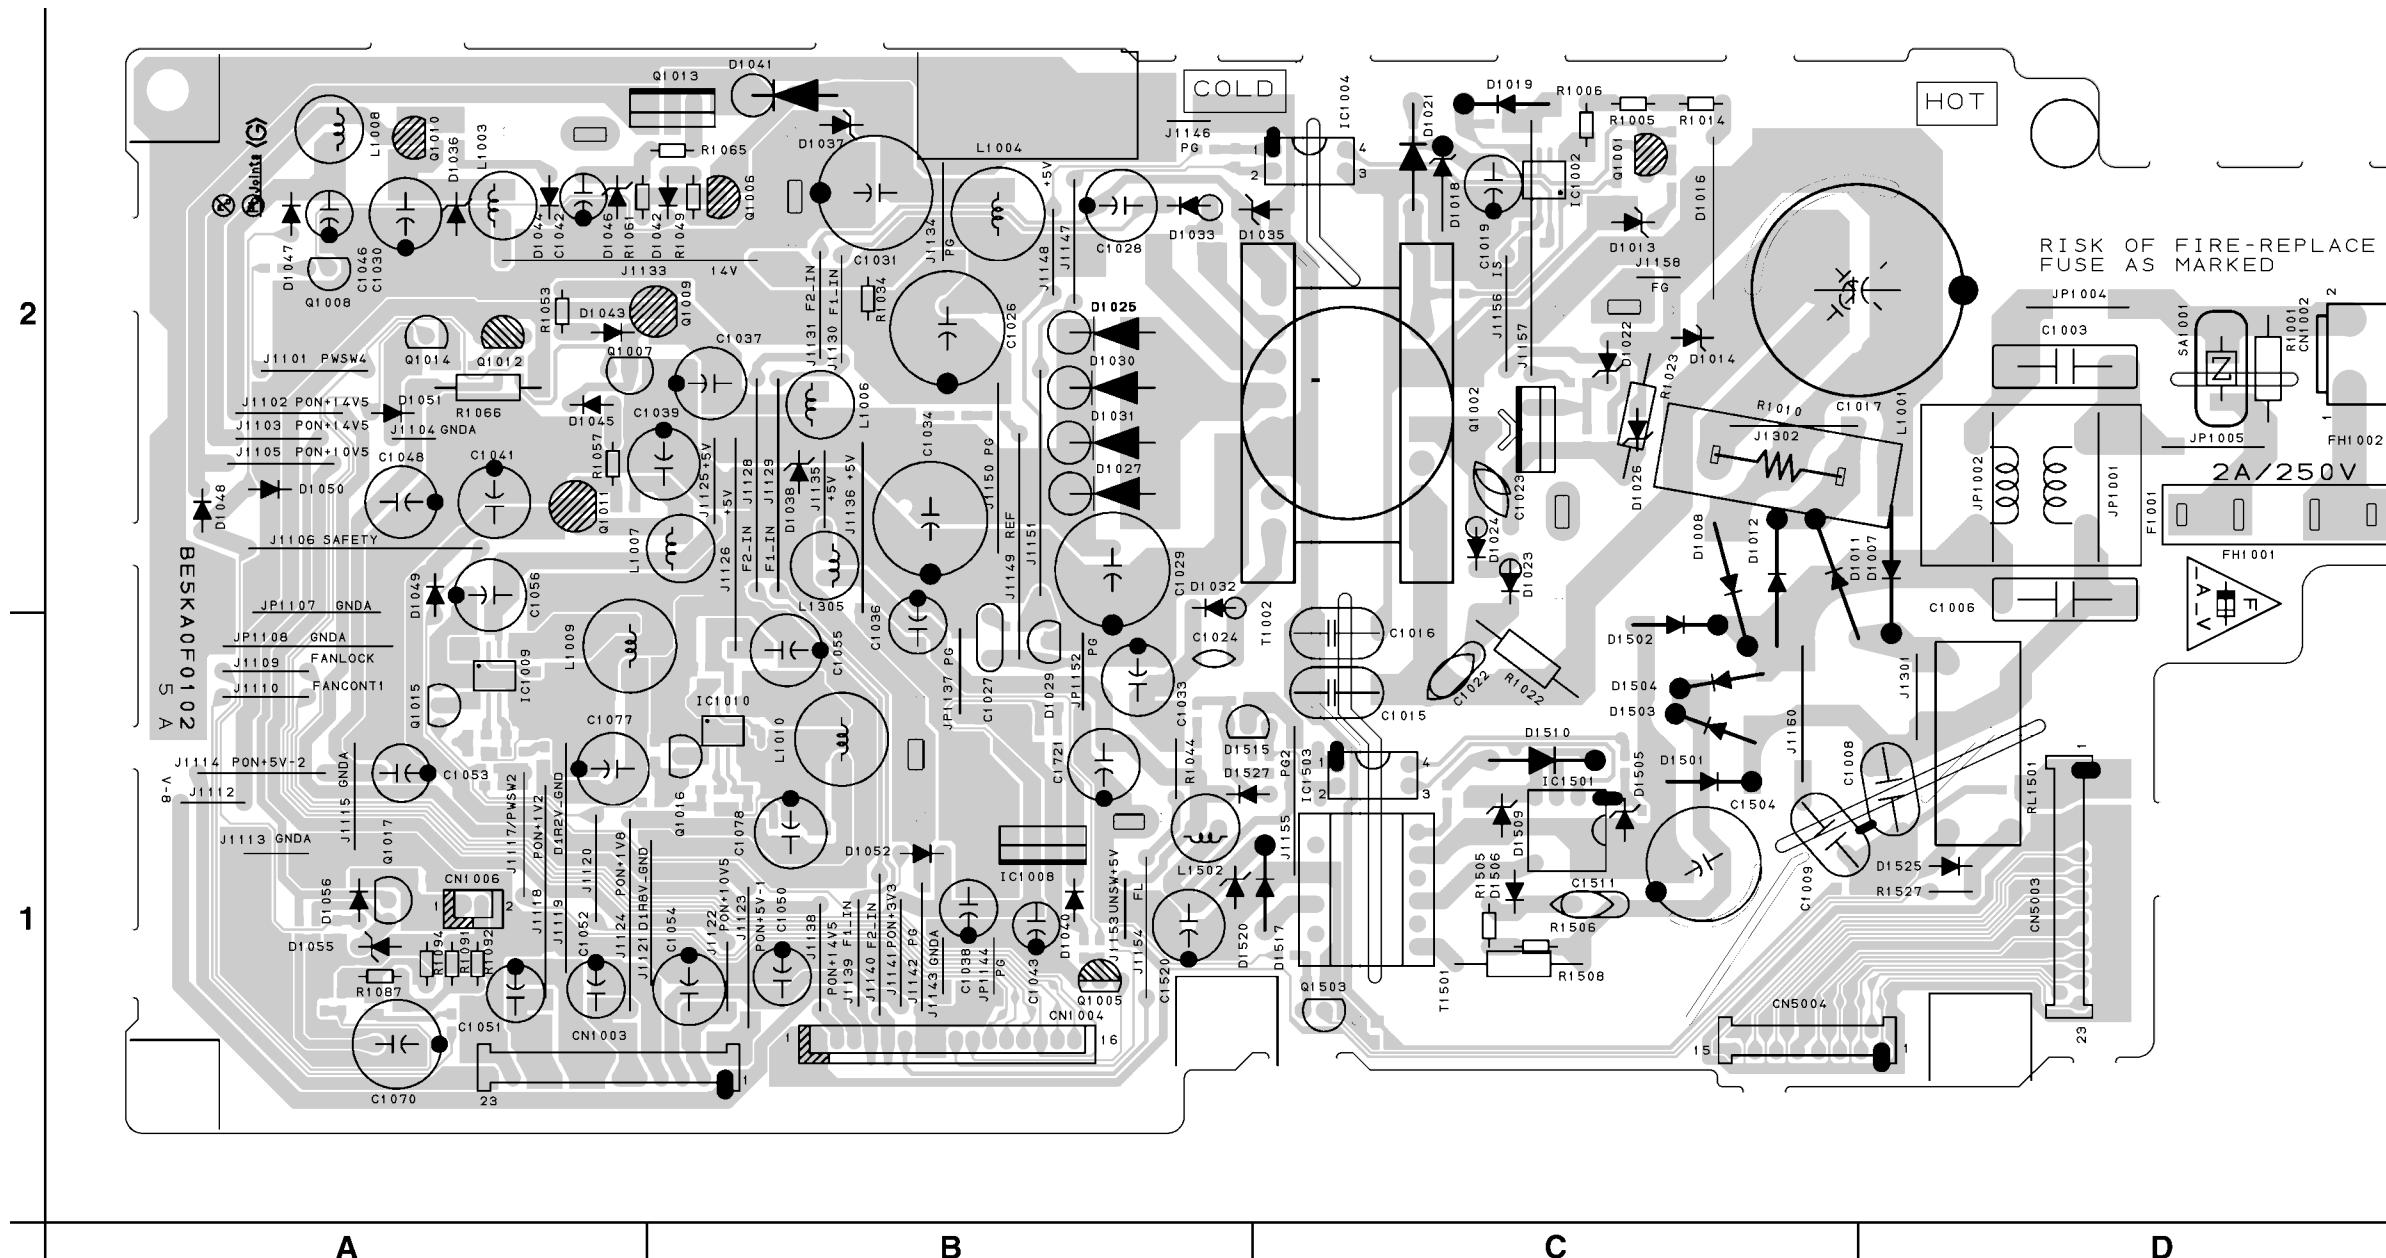

# Power Supply CBA Bottom View

**CAUTION !**

Fixed voltage (or Auto voltage selectable) power supply circuit is used in this unit.  
If Main Fuse (F1001) is blown , check to see that all components in the power supply circuit are not defective before you connect the AC plug to the AC power supply.  
Otherwise it may cause some components in the power supply circuit to fail.

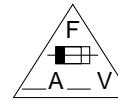
**CAUTION !**

For continued protection against fire hazard,  
replace only with the same type fuse.

**ATTENTION : Pour une protection continue les risques d'Incendie n'utiliser que des fusibles de même type.**

**Risk of fire-replace fuse as marked.**

■ "This symbol means fast operating fuse."  
"Ce symbole représente un fusible à fusion rapide."


Because a hot chassis ground is present in the power supply

circuit, an isolation transformer must be used when repairing.


Also, in order to have the ability to increase the input slowly,  
when troubleshooting this type of power supply circuit,  
a variable isolation transformer is required.

**NOTE:**


The voltage for parts in hot circuit is measured using  
hot GND as a common terminal.

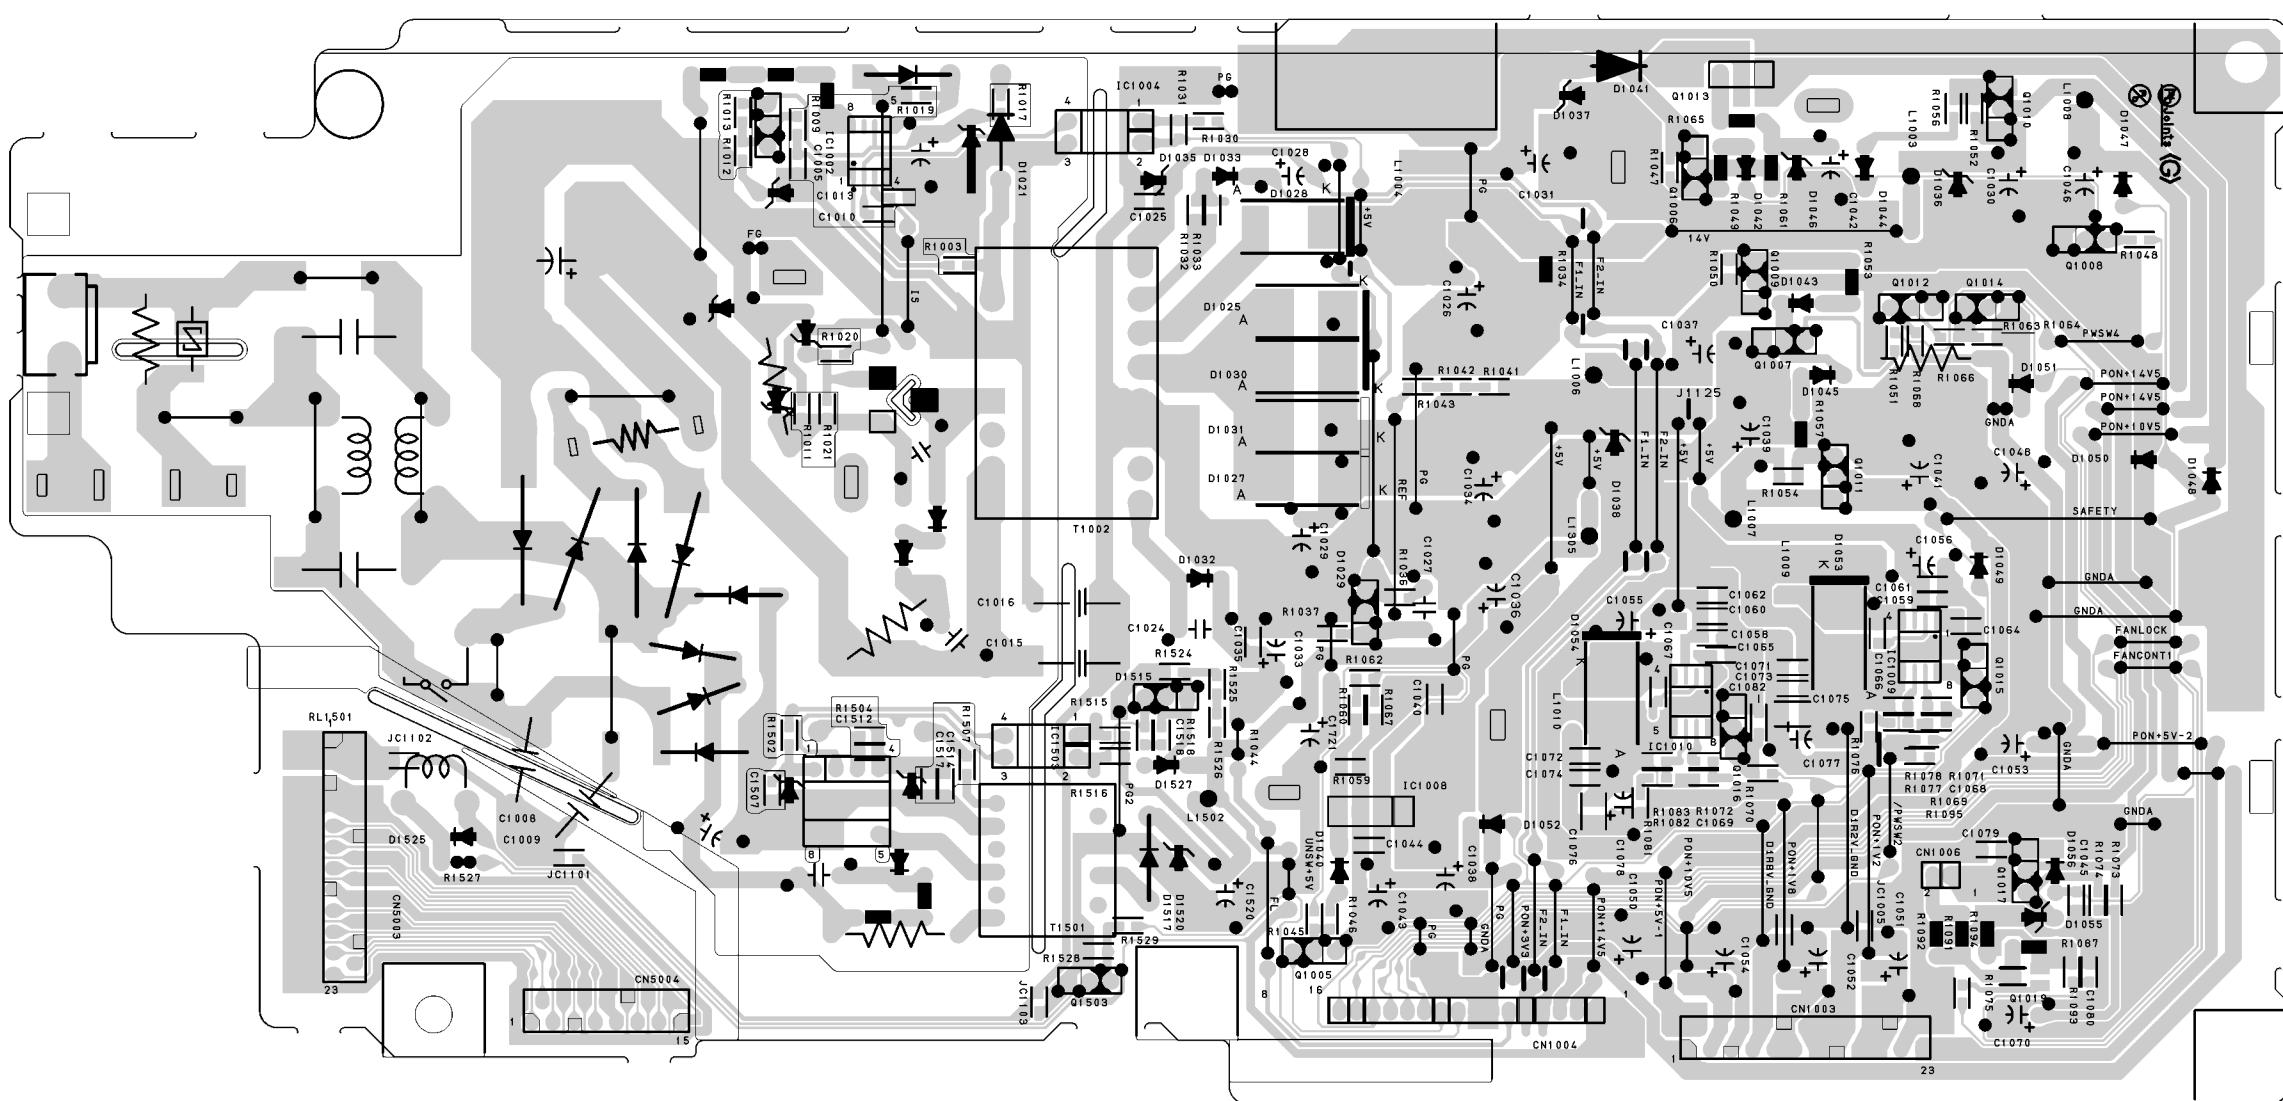
**D**
**C**
**B**
**A**


**Front A CBA Top View**

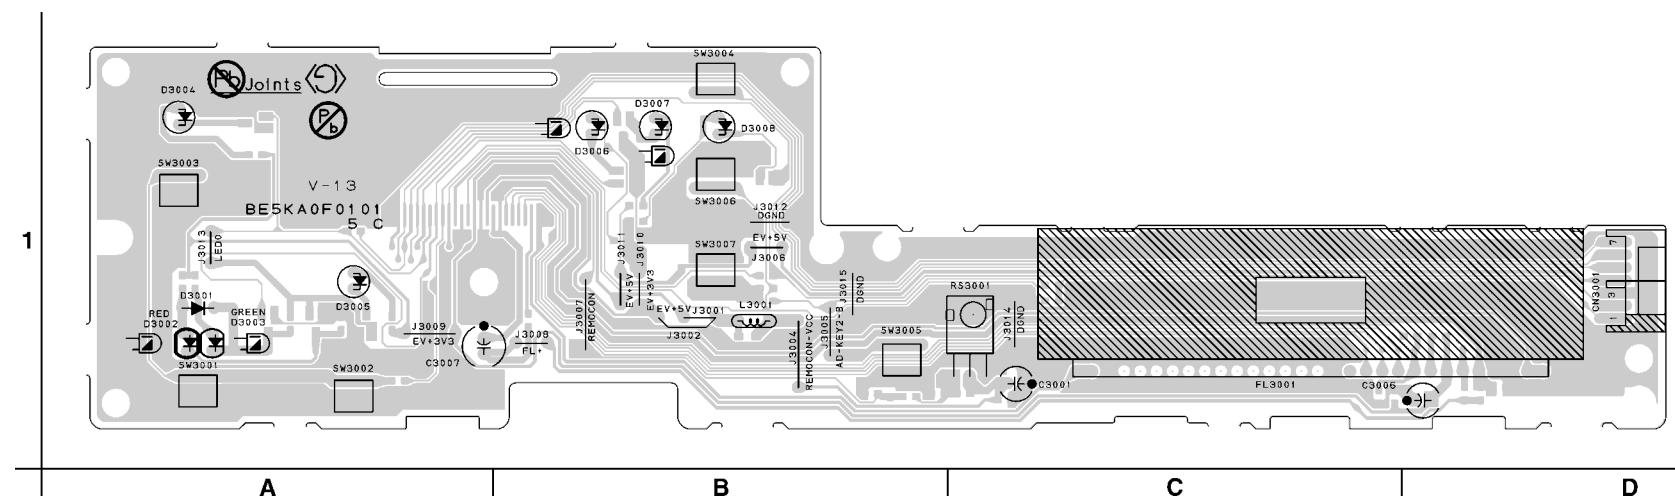


**Front B CBA Top View**

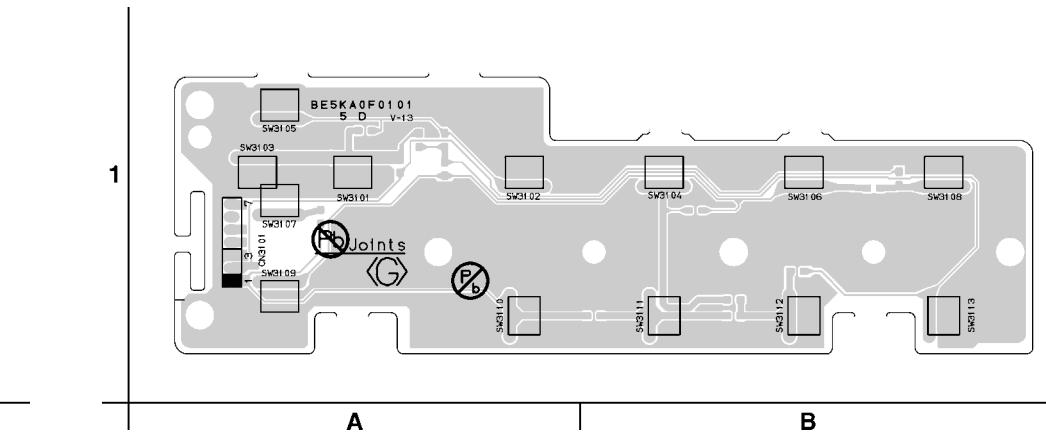

**Front A CBA Bottom View**

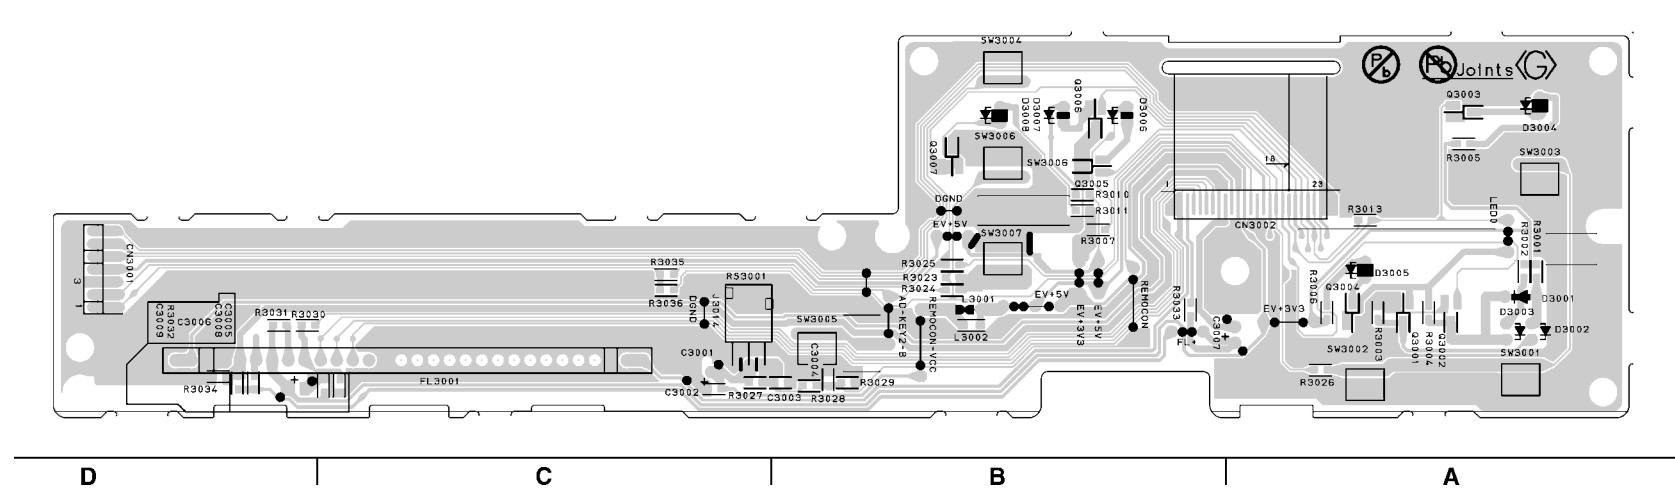


**Front B CBA Bottom View**

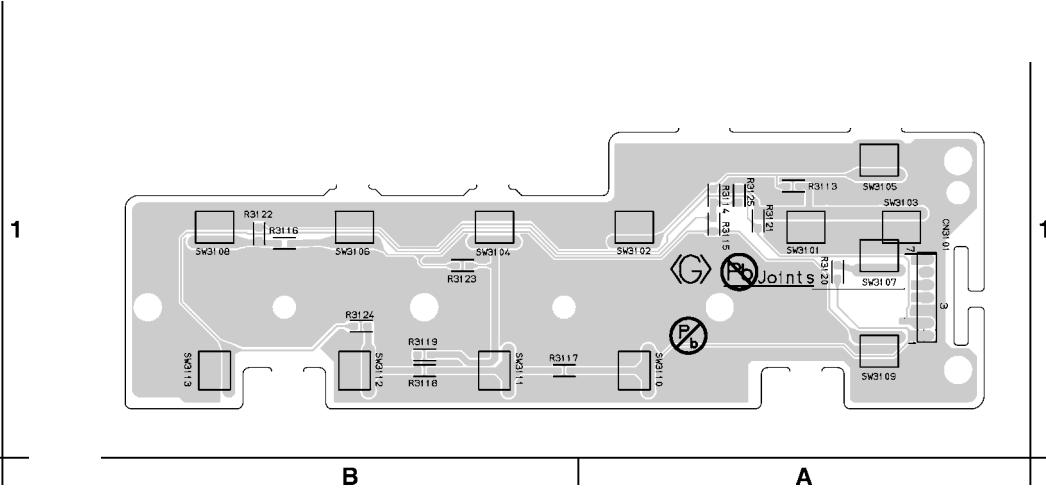


BE5KA0F01015C

BE5KA0F01015D

**INLET CBA Top View**

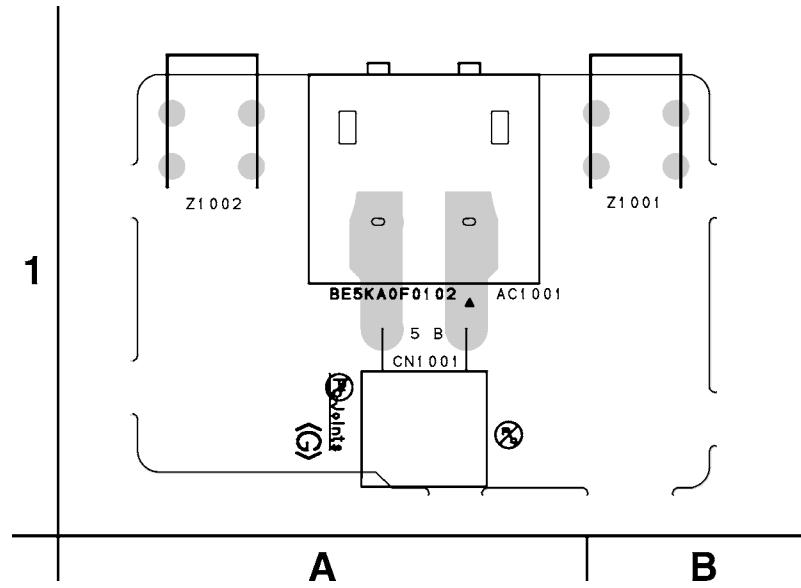


**INLET CBA Bottom View**

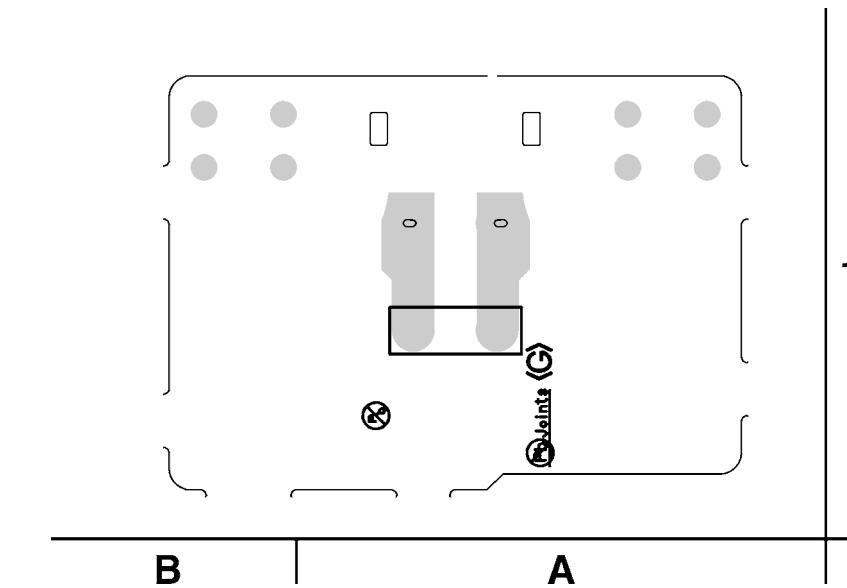


BE5KA0F01025B

**SD CBA Top View**

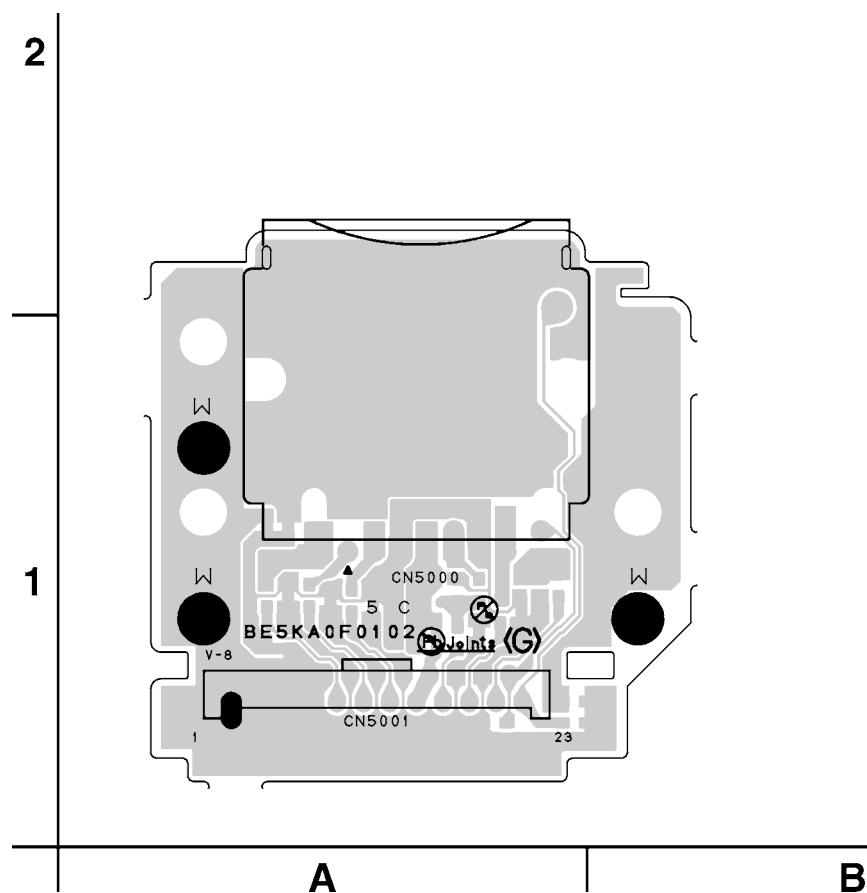


**SD CBA Bottom View**

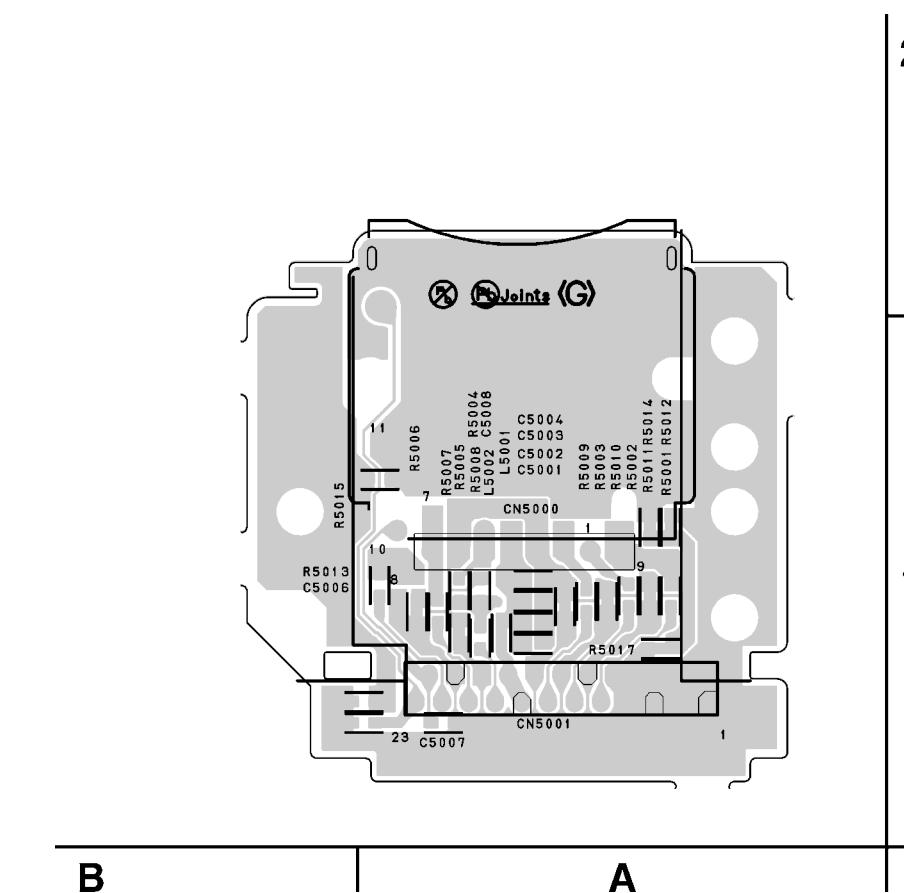


BE5KA0F01025C

# EXPLODED VIEWS

## Cabinet

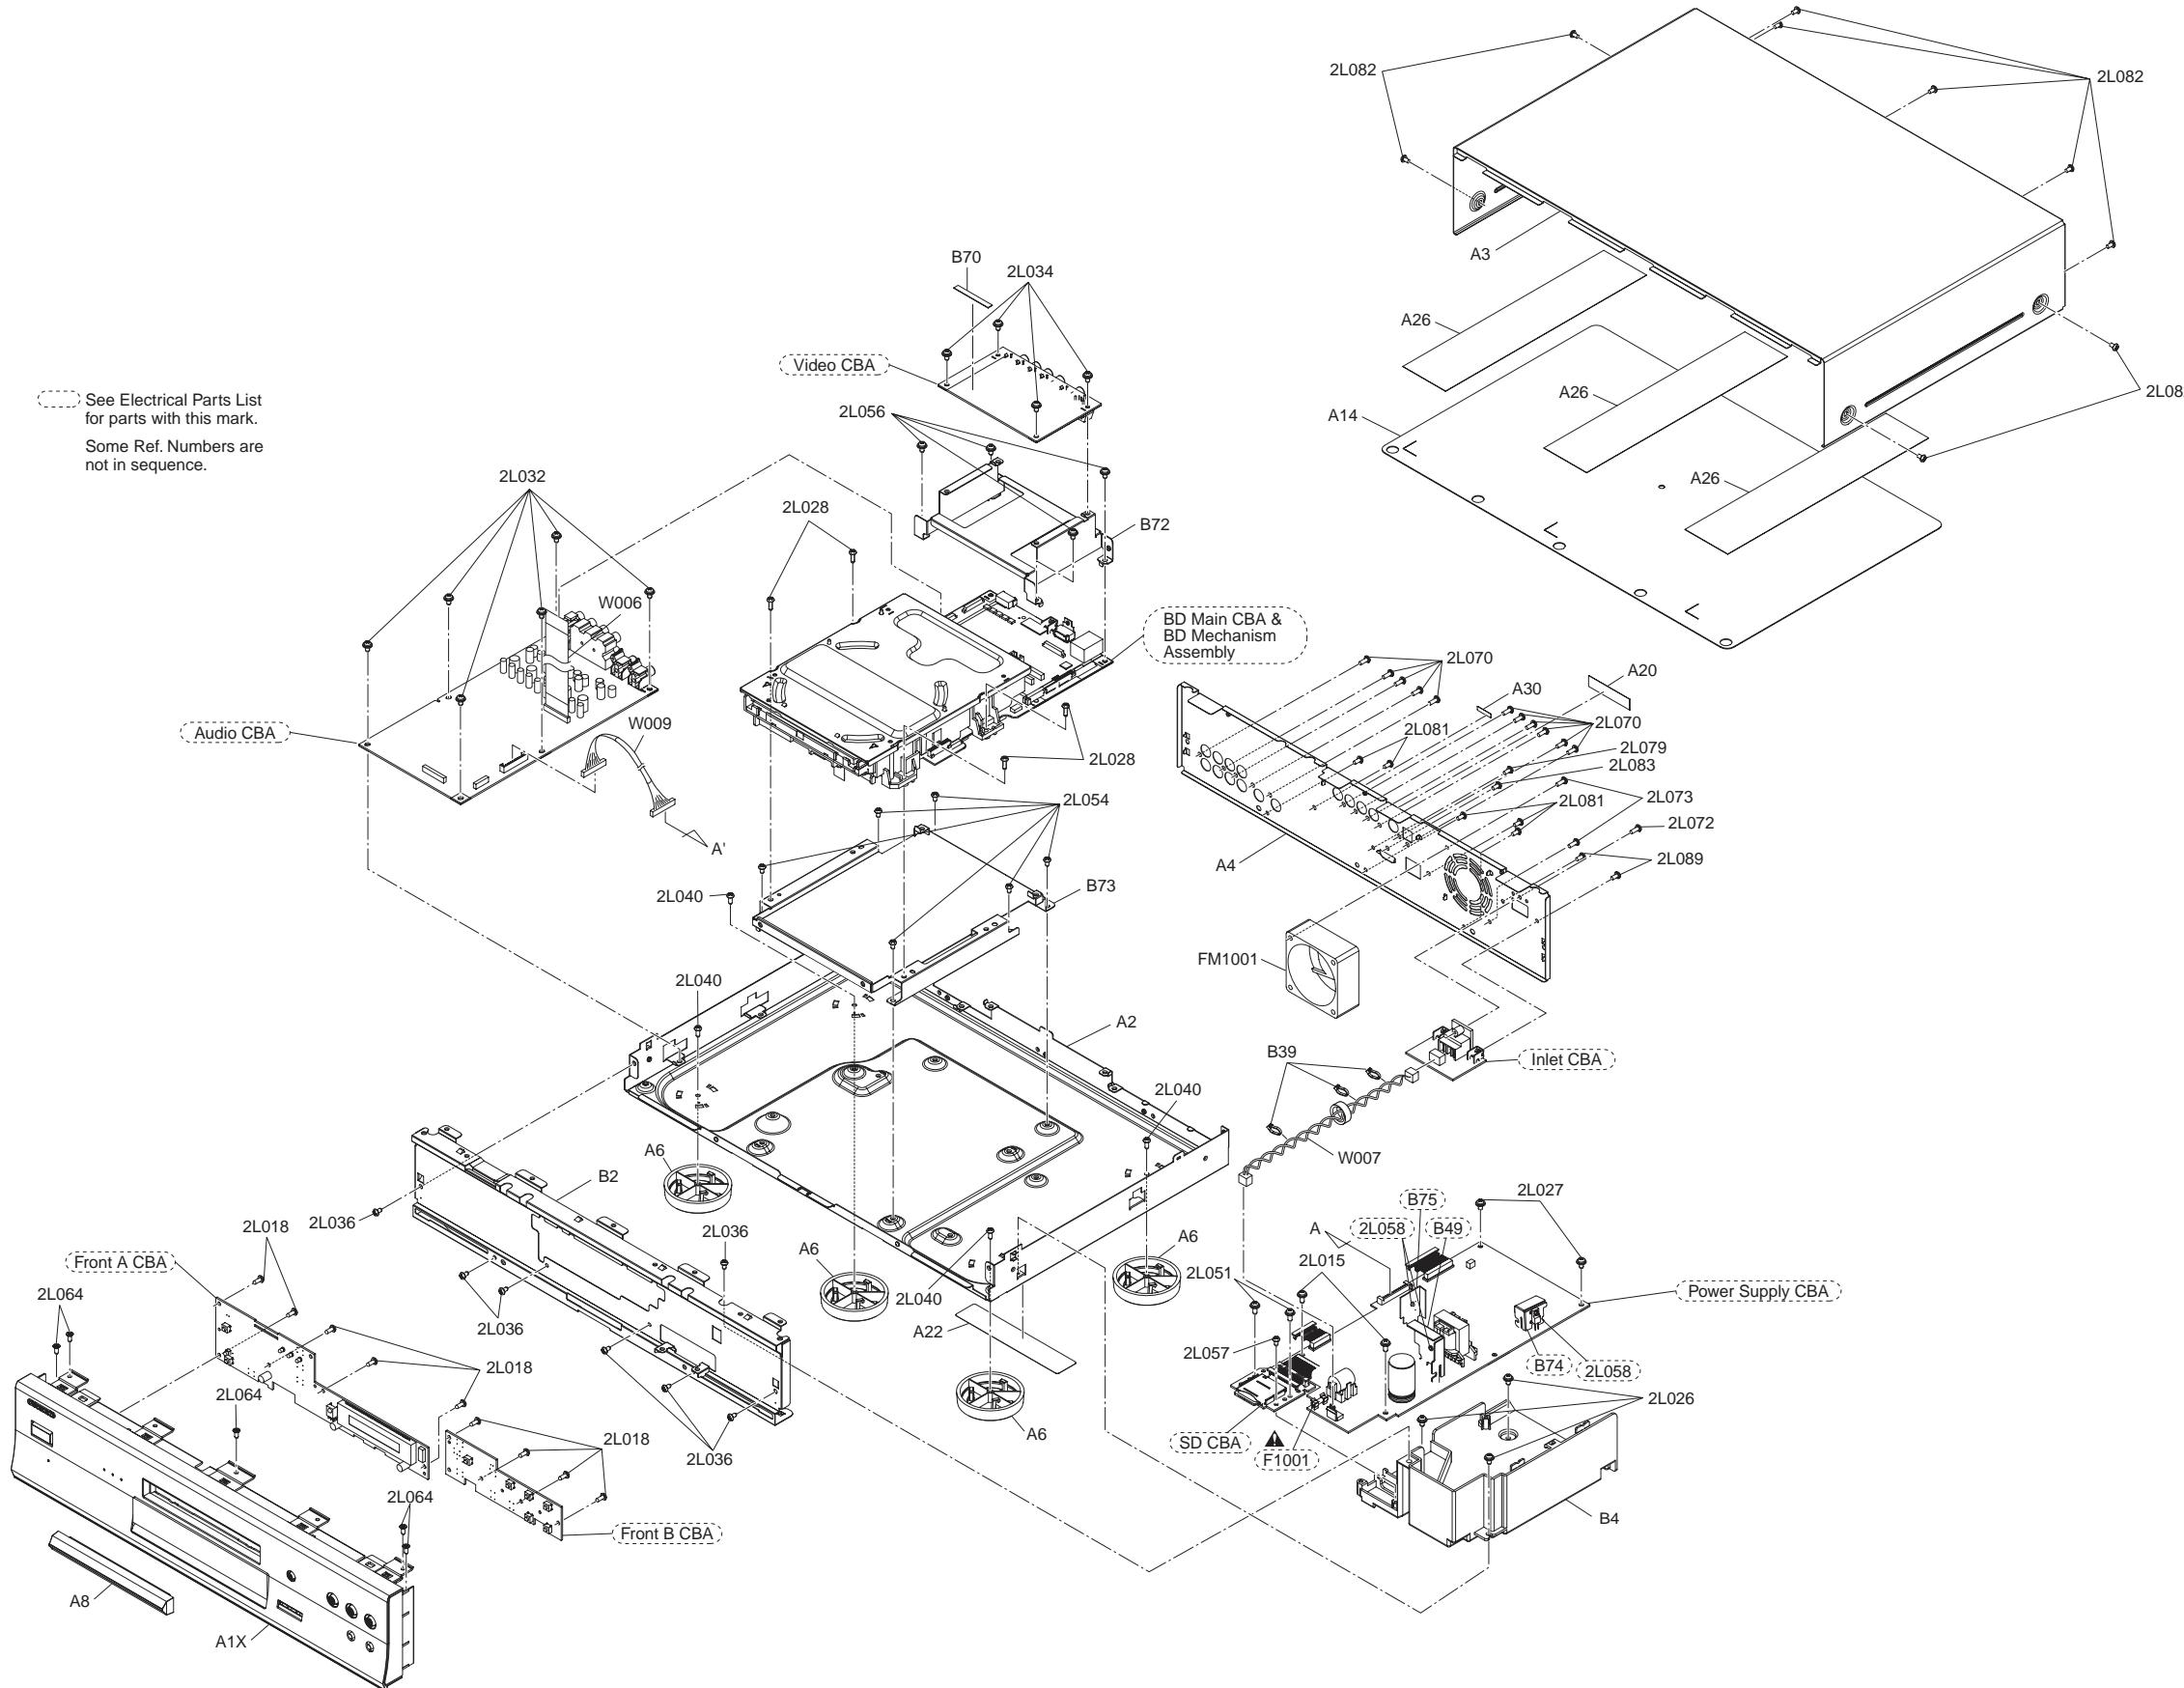

## Packing

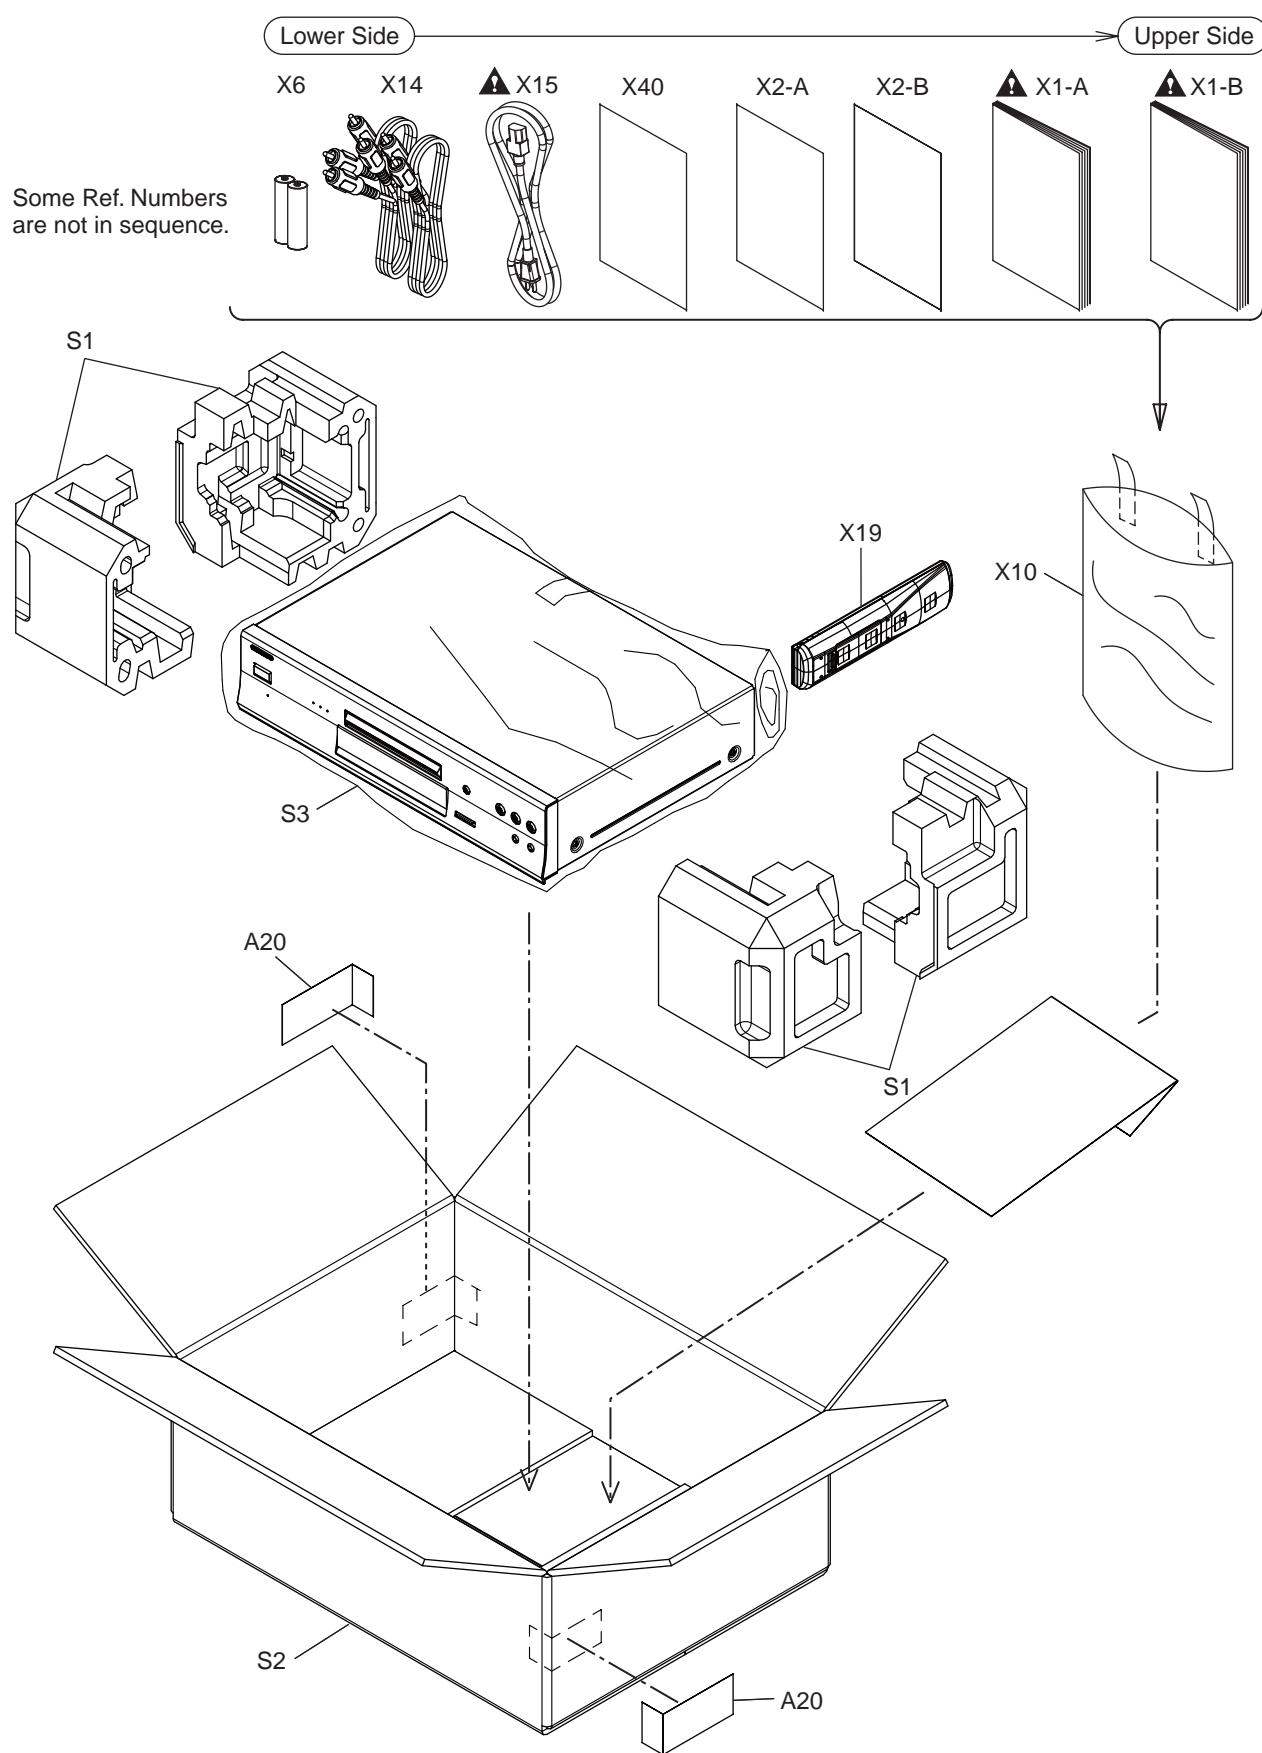

|          |                                  |              |  |
|----------|----------------------------------|--------------|--|
|          |                                  | 20091110     |  |
|          | BD-SP807(B)CDC1N(E5KE0UD)        |              |  |
|          |                                  |              |  |
| Ref. No. | Description                      | Parts No.    |  |
|          | MECHANICAL PARTS                 |              |  |
| A1X      | FRONT ASSEMBLY E5KE0UD           | 1VM124219    |  |
| A2       | CHASSIS E5KA0UD                  | 1VM021192    |  |
| A3       | TOP COVER E5KA0UD                | 1VM021193    |  |
| A4       | REAR PANEL E5KE0UD               | 1VM229036    |  |
| A6       | FOOT ASSEMBLY E5KE0UD            | 1VM433859    |  |
| A8       | TRAY PANEL ASSEMBLY E5KE0UD      | 1VM228837    |  |
| A14      | TOP PLATE E5KE0UD                | 1VM228897    |  |
| A20      | BAR CODE LABEL E5KE0UD           | -----        |  |
| A22      | LICENSE LABEL E5KE0UD            | -----        |  |
| A26      | DOUBLE SIDE TAPE E5KA0UD         | 1VM329678    |  |
| A30      | MODEL NO. LABEL E5KE0UD          | -----        |  |
| ZL015    | SCREW TAP TIGHT WASHER+ P-TIGHT  | GCJP3080     |  |
| ZL018    | SCREW P-TIGHT M3X8 BIND HEAD+    | GBJP3080     |  |
| ZL026    | SCREW S-TIGHT M3X6 E5E10UD       | 1VM429667    |  |
| ZL027    | SCREW S-TIGHT M3X6 E5E10UD       | 1VM429667    |  |
| ZL028    | SCREW S-TIGHT M3X10 E5610UD      | 0VM412936A   |  |
| ZL032    | SCREW S-TIGHT M3X6 E5E10UD       | 1VM429667    |  |
| ZL034    | SCREW S-TIGHT M3X6 E5E10UD       | 1VM429667    |  |
| ZL036    | SCREW S-TIGHT M3X6 BIND HEAD+    | GBJS3060     |  |
| ZL040    | SCREW P-TIGHT M3X8 BIND HEAD+    | GBJP3080     |  |
| ZL051    | SCREW TAP TIGHT WASHER+ P-TIGHT  | GCJP3080     |  |
| ZL054    | SCREW C-TIGHT M3X6 E5610UD       | 0VM412937A   |  |
| ZL056    | SCREW S-TIGHT M3X6 E5E10UD       | 1VM429667    |  |
| ZL057    | SCREW S-TIGHT M3X6 BIND HEAD+    | GBJS3060     |  |
| ZL064    | SCREW S-TIGHT M3X8 DISH HEAD+    | GDHS3080     |  |
| ZL070    | B-TIGHT SCREW M3X8 E5E00UD       | 1VM428563    |  |
| ZL072    | B-TIGHT SCREW M3X8 E5E00UD       | 1VM428563    |  |
| ZL073    | B-TIGHT SCREW M3X8 E5E00UD       | 1VM428563    |  |
| ZL079    | S-TIGHT SCREW M3X6 E5E00UD       | 1VM428564    |  |
| ZL081    | S-TIGHT SCREW M3X6 E5E00UD       | 1VM428564    |  |
| ZL082    | S-TIGHT SCREW M3X6 E5E00UD       | 1VM428564    |  |
| ZL083    | S-TIGHT SCREW M3X6 E5E00UD       | 1VM428564    |  |
| ZL089    | S-TIGHT SCREW M3X6 E5E00UD       | 1VM428564    |  |
| B2       | FRONT BRACKET E5KA0UD            | 1VM122941J   |  |
| B4       | POWER HOLDER E5KA0UD             | 1VM122880    |  |
| B39      | LEAD CLAMPER 100MM               | 1790356      |  |
| B70      | HIMELON TAPE(5X40) E5KA0UD       | 1VM431686    |  |
| B72      | AV PCB BRACKET E5KA0UD           | 1VM226905B   |  |
| B73      | LOADER BRACKET E5KA0UD           | 1VM122901    |  |
| FM1001   | MOTOR DC FAN 2D65BL100190        | MMEZR12XNR08 |  |
| W006     | WIRE ASSEMBLY FFC 26/169/1.0     | WX1E5KA0-006 |  |
| W007     | WIRE ASSEMBLY VH 2/265/AWG20     | WX1E5KA0-007 |  |
| W009     | WIRE ASSEMBLY PH 16/290/AWG24    | WX1E5KA0-009 |  |
| S1       | SIDE PAD E5KE0UD                 | 1VM124119    |  |
| S2       | GIFT BOX CARTON E5KE0UD          | 1VM332219    |  |
| S3       | SET BAG E5KB0UD                  | 1VM433842    |  |
| X1-A!    | OWNERS MANUAL(EN) E5KE0UD        | 1VMN28736    |  |
| X1-B!    | OWNERS MANUAL(ES/FR) E5KE0UD     | 1VMN28737    |  |
| X-2A     | QUICK GUIDE(EN) E5KE0UD          | 1VMN28738    |  |
| X-2B     | QUICK GUIDE(ES/FR) E5KE0UD       | 1VMN28739    |  |
| X6       | MANGANESE DRY BATTERY R6UWC/2STA | XB0M311MS003 |  |
| X10      | ACCESSORY BAG E5795ED            | 0VM416059    |  |

|                  |   |              |
|------------------|---|--------------|
| X14              | AV CORD 1000/BLACK                        | WPZ0102TM018 |
| X15!             | CORD W/O A GND WIRE UL/CSA/ 162/NO/BLACK  | WAV0162LW001 |
| X19              | REMOTE CONTROL UNIT NB821UD               | NB821UD      |
| X40              | WARRANTY CARD E5H50UD                     | 1VMN26325    |
| ELECTRICAL PARTS |   |              |
| 1B1              | BD MAIN CBA & BD MECHANISM ASSEMBLY       | N77RABUN     |
|                  | AV ASSEMBLY                               | 1VSA23609    |
|                  | Consists of the following                 |              |
|                  | VIDEO CBA                                 | -----        |
|                  | AUDIO CBA                                 | -----        |
|                  | FRONT A CBA                               | -----        |
|                  | FRONT B CBA                               | -----        |
|                  | VIDEO CBA                                 | -----        |
| C4002            | ELECTROLYTIC CAP. 100UF/6.3V/M            | CEA101ENW016 |
| C4003            | CHIP CERAMIC CAP.(1608) F Z 0.1UF/50V     | CHD1JZ30F104 |
| C4005            | CHIP CERAMIC CAP.(1608) B K 0.1UF/50V     | CHD1JK30B104 |
| C4007            | ELECTROLYTIC CAP. 22UF/6.3V/M             | CEA22RENW016 |
| C4008            | CHIP CERAMIC CAP.(1608) B K 1UF/10V       | CHD1AK30B105 |
| C4009            | CHIP CERAMIC CAP.(1608) B K 0.1UF/50V     | CHD1JK30B104 |
| C4010            | CHIP CERAMIC CAP.(1608) B K 1UF/10V       | CHD1AK30B105 |
| C4011            | ELECTROLYTIC CAP. 100UF/6.3V/M            | CEA101ENW016 |
| C4012            | CHIP CERAMIC CAP.(1608) F Z 0.1UF/50V     | CHD1JZ30F104 |
| C4013            | ELECTROLYTIC CAP. 1000UF/6.3V/M           | CEA102ENW016 |
| C4014            | ELECTROLYTIC CAP. 33UF/10V/M              | CEB33RENW016 |
| C4015            | ELECTROLYTIC CAP. 1000UF/6.3V/M           | CEA102ENW016 |
| C4016            | ELECTROLYTIC CAP. 1000UF/6.3V/M           | CEA102ENW016 |
| C4017            | ELECTROLYTIC CAP. 33UF/10V/M              | CEB33RENW016 |
| C4018            | ELECTROLYTIC CAP. 1000UF/6.3V/M           | CEA102ENW016 |
| C4019            | ELECTROLYTIC CAP. 220UF/6.3V/M            | CEA221ENW016 |
| C4020            | CHIP CERAMIC CAP.(1608) F Z 0.1UF/50V     | CHD1JZ30F104 |
| C4021            | ELECTROLYTIC CAP. 100UF/6.3V/M            | CEA101ENW016 |
| C4022            | CHIP CERAMIC CAP.(1608) F Z 0.1UF/50V     | CHD1JZ30F104 |
| C4024            | CHIP CERAMIC CAP. CH D 8PF/50V            | CHD1JD3CH8R0 |
| C4026            | CHIP CERAMIC CAP.(1608) B K 0.1UF/25V     | CHD1EK30B104 |
| C4028            | ELECTROLYTIC CAP. 47UF/6.3V/M             | CEA47RENW016 |
| C4030            | CHIP CERAMIC CAP.(1608) F Z 0.1UF/50V     | CHD1JZ30F104 |
| CN4000           | WIRE ASSEMBLY FFC DIRECT 17/65/1.0        | WX1E5KA0-005 |
| CN4001           | WIRE ASSEMBLY FFC DIRECT 11/279/1.0       | WX1E5KE0-002 |
| IC4000           | IC VIDEO DRIVER MM1757EHBE                | QSCA0T0MM001 |
| L4001            | WIRE CP STP-S-0.60                        | XZ40F0REN002 |
| L4002            | RADIAL TYPE CHOKE COIL CW68-470K-841040NP | LLBD00PKV023 |
| L4003            | CHIP RES.(1608) 1/10W 0 OHM               | RRXAZR5Z0000 |
| L4004            | INDUCTOR(0.47UH K) LAP02TAR47K            | LLAXKATTUR47 |
| Q4006            | NPN TRANSISTOR 2SC5343MG-AT               | NQSG2SC5343M |
| R4005            | CHIP RES.(1608) 1/10W 0 OHM               | RRXAZR5Z0000 |
| R4006            | CHIP RES.(1608) 1/10W 0 OHM               | RRXAZR5Z0000 |
| R4023            | CHIP RES. 1/10W J 10K OHM                 | RRXAJR5Z0103 |
| R4024            | CHIP RES. 1/10W J 27K OHM                 | RRXAJR5Z0273 |
| R4033            | CHIP RES.(1608) 1/10W 0 OHM               | RRXAZR5Z0000 |
| R4047            | CHIP RES.(1608) 1/10W 0 OHM               | RRXAZR5Z0000 |
| R4052            | CHIP RES. 1/10W J 2K OHM                  | RRXAJR5Z0202 |
| R4054            | CHIP RES. 1/10W J 2.2K OHM                | RRXAJR5Z0222 |
| R4055            | CHIP RES. 1/10W J 2.2K OHM                | RRXAJR5Z0222 |
| R4056            | CHIP RES. 1/10W J 75 OHM                  | RRXAJR5Z0750 |
| R4057            | CHIP RES. 1/10W J 75 OHM                  | RRXAJR5Z0750 |
| R4058            | CHIP RES. 1/10W J 75 OHM                  | RRXAJR5Z0750 |

## BD-SP807(B)CDC1N(E5KE0UD)

|        |   |              |
|--------|---|--------------|
| R4059  | CHIP RES. 1/10W J 75 OHM                  | RRXAJR5Z0750 |
| R4064  | CHIP RES. 1/10W J 220 OHM                 | RRXAJR5Z0221 |
| R4065  | CHIP RES. 1/10W J 75 OHM                  | RRXAJR5Z0750 |
| R4066  | CHIP RES. 1/10W J 100K OHM                | RRXAJR5Z0104 |
| R4067  | CHIP RES.(1608) 1/10W 0 OHM               | RRXAZR5Z0000 |
| R4068  | CHIP RES.(1608) 1/10W 0 OHM               | RRXAZR5Z0000 |
| R4069  | CHIP RES.(1608) 1/10W 0 OHM               | RRXAZR5Z0000 |
| R4070  | CHIP RES.(1608) 1/10W 0 OHM               | RRXAZR5Z0000 |
| JK4000 | RCA JACK MSP-251V-10 GILT LF              | JXRL010LY143 |
| JK4001 | FIBER OPTIC TRANS MODULE 0C-0805T*002     | JWHHA00JD002 |
| JK4002 | RCA JACK 1PIN(BLUE) MSP-251V-31-GILT(B11  | JXRL010LY179 |
| JK4003 | RCA JACK 1PIN(RED) MSP-251V-12-GILT(B11   | JXRL010LY176 |
| JK4004 | RCA JACK(YELLOW) MSD-251V-11 GILT FE      | JXRL010LY110 |
| JK4005 | RCA JACK 1PIN(GREEN) MSP-251V-16-GILT(B11 | JXRL010LY178 |
| JP4009 | WIRE CP STP-S-0.60                        | XZ40F0REN002 |
|        | AUDIO CBA                                 | -----        |
| C2005  | CHIP CERAMIC CAP.(1608) F Z 0.1UF/50V     | CHD1JJ30F104 |
| C2007  | CHIP CERAMIC CAP.(1608) F Z 0.1UF/50V     | CHD1JJ30F104 |
| C2009  | CHIP CERAMIC CAP.(1608) CH J 100PF/50V    | CHD1JJ3CH101 |
| C2011  | CHIP CERAMIC CAP.(1608) F Z 0.1UF/50V     | CHD1JJ30F104 |
| C2013  | CHIP CERAMIC CAP.(1608) B K 0.015UF/50V   | CHD1JK30B153 |
| C2016  | ELECTROLYTIC CAP. 47UF/6.3V/M             | CEA47RENW016 |
| C2065  | CHIP CERAMIC CAP.(1608) B K 1000PF/50V    | CHD1JK30B102 |
| C2204  | ELECTROLYTIC CAP. 100UF/25V (RFO T2)      | CED101ELN004 |
| C2205  | ELECTROLYTIC CAP. 470UF/6.3V (RFO T2)     | CEA471ELN004 |
| C2206  | CHIP CERAMIC CAP.(1608) F Z 0.1UF/50V     | CHD1JJ30F104 |
| C2207  | ELECTROLYTIC CAP. 10UF/50V (RFO T2)       | CEF100ELN004 |
| C2208  | ELECTROLYTIC CAP. 10UF/50V (RFO T2)       | CEF100ELN004 |
| C2209  | CHIP CERAMIC CAP. CH J 220PF/50V          | CHD1JJ3CH221 |
| C2210  | CHIP CERAMIC CAP. CH J 220PF/50V          | CHD1JJ3CH221 |
| C2211  | ELECTROLYTIC CAP. 10UF/50V (RFO T2)       | CEF100ELN004 |
| C2212  | ELECTROLYTIC CAP. 10UF/50V (RFO T2)       | CEF100ELN004 |
| C2213  | CHIP CERAMIC CAP.(1608) F Z 0.1UF/50V     | CHD1JJ30F104 |
| C2215  | CHIP CERAMIC CAP. CH J 39PF/50V           | CHD1JJ3CH390 |
| C2216  | CHIP CERAMIC CAP. CH J 39PF/50V           | CHD1JJ3CH390 |
| C2280  | CHIP CERAMIC CAP.(1608) F Z 0.1UF/50V     | CHD1JJ30F104 |
| C2281  | ELECTROLYTIC CAP. 220UF/6.3V/M            | CEA221ENW016 |
| C2283  | ELECTROLYTIC CAP. 1000UF/6.3V/M           | CEA102ENW016 |
| C2284  | CHIP CERAMIC CAP.(1608) F Z 0.1UF/50V     | CHD1JJ30F104 |
| C2285  | ELECTROLYTIC CAP. 330UF/25V/M             | CED331ENW016 |
| C2286  | CHIP CERAMIC CAP.(1608) F Z 0.1UF/50V     | CHD1JJ30F104 |
| C2627  | CHIP CERAMIC CAP.(1608) B K 0.01UF/50V    | CHD1JK30B103 |
| C2637  | ELECTROLYTIC CAP. 100UF/6.3V/M            | CEA101ENW016 |
| C2638  | CHIP CERAMIC CAP. CH J 330PF/50V          | CHD1JJ3CH331 |
| C2639  | CHIP CERAMIC CAP. CH J 220PF/50V          | CHD1JJ3CH221 |
| C2651  | ELECTROLYTIC CAP. 47UF/6.3V/M             | CEA47RENW016 |
| C2802  | ELECTROLYTIC CAP. 100UF/25V (RFO T2)      | CED101ELN004 |
| C2803  | ELECTROLYTIC CAP. 100UF/25V (RFO T2)      | CED101ELN004 |
| C2804  | ELECTROLYTIC CAP. 100UF/25V (RFO T2)      | CED101ELN004 |
| C2805  | CHIP CERAMIC CAP.(1608) F Z 0.1UF/50V     | CHD1JJ30F104 |
| C2806  | ELECTROLYTIC CAP. 470UF/6.3V (RFO T2)     | CEA471ELN004 |
| C2807  | ELECTROLYTIC CAP. 100UF/25V (RFO T2)      | CED101ELN004 |
| C2808  | CHIP CERAMIC CAP.(1608) F Z 0.1UF/50V     | CHD1JJ30F104 |
| C2809  | ELECTROLYTIC CAP. 10UF/50V (RFO T2)       | CEF100ELN004 |
| C2810  | ELECTROLYTIC CAP. 10UF/50V (RFO T2)       | CEF100ELN004 |
| C2811  | CHIP CERAMIC CAP. CH J 220PF/50V          | CHD1JJ3CH221 |
| C2812  | CHIP CERAMIC CAP. CH J 220PF/50V          | CHD1JJ3CH221 |
| C2813  | CHIP CERAMIC CAP. CH J 39PF/50V           | CHD1JJ3CH390 |
| C2814  | CHIP CERAMIC CAP. CH J 39PF/50V           | CHD1JJ3CH390 |

## BD-SP807(B)CDC1N(E5KE0UD)

|        |   |              |
|--------|---|--------------|
| C2815  | ELECTROLYTIC CAP. 10UF/50V (RFO T2)     | CEF100ELN004 |
| C2816  | ELECTROLYTIC CAP. 10UF/50V (RFO T2)     | CEF100ELN004 |
| C2819  | CHIP CERAMIC CAP.(1608) F Z 0.1UF/50V   | CHD1JJ30F104 |
| C2820  | CHIP CERAMIC CAP.(1608) F Z 0.1UF/50V   | CHD1JJ30F104 |
| C2821  | ELECTROLYTIC CAP. 10UF/50V (RFO T2)     | CEF100ELN004 |
| C2822  | ELECTROLYTIC CAP. 10UF/50V (RFO T2)     | CEF100ELN004 |
| C2823  | CHIP CERAMIC CAP. CH J 220PF/50V        | CHD1JJ3CH221 |
| C2824  | CHIP CERAMIC CAP. CH J 220PF/50V        | CHD1JJ3CH221 |
| C2825  | CHIP CERAMIC CAP. CH J 39PF/50V         | CHD1JJ3CH390 |
| C2826  | CHIP CERAMIC CAP. CH J 39PF/50V         | CHD1JJ3CH390 |
| C2827  | ELECTROLYTIC CAP. 10UF/50V (RFO T2)     | CEF100ELN004 |
| C2828  | ELECTROLYTIC CAP. 10UF/50V (RFO T2)     | CEF100ELN004 |
| C2831  | CHIP CERAMIC CAP.(1608) F Z 0.1UF/50V   | CHD1JJ30F104 |
| C2832  | CHIP CERAMIC CAP.(1608) F Z 0.1UF/50V   | CHD1JJ30F104 |
| C2833  | ELECTROLYTIC CAP. 10UF/50V (RFO T2)     | CEF100ELN004 |
| C2834  | ELECTROLYTIC CAP. 10UF/50V (RFO T2)     | CEF100ELN004 |
| C2835  | CHIP CERAMIC CAP. CH J 220PF/50V        | CHD1JJ3CH221 |
| C2836  | CHIP CERAMIC CAP. CH J 220PF/50V        | CHD1JJ3CH221 |
| C2837  | CHIP CERAMIC CAP. CH J 39PF/50V         | CHD1JJ3CH390 |
| C2838  | CHIP CERAMIC CAP. CH J 39PF/50V         | CHD1JJ3CH390 |
| C2839  | ELECTROLYTIC CAP. 10UF/50V (RFO T2)     | CEF100ELN004 |
| C2840  | ELECTROLYTIC CAP. 10UF/50V (RFO T2)     | CEF100ELN004 |
| C2843  | CHIP CERAMIC CAP.(1608) F Z 0.1UF/50V   | CHD1JJ30F104 |
| C2845  | CHIP CERAMIC CAP.(1608) F Z 0.1UF/50V   | CHD1JJ30F104 |
| C2846  | ELECTROLYTIC CAP. 10UF/50V (RFO T2)     | CEF100ELN004 |
| C2847  | ELECTROLYTIC CAP. 10UF/50V (RFO T2)     | CEF100ELN004 |
| C2848  | CHIP CERAMIC CAP. CH J 220PF/50V        | CHD1JJ3CH221 |
| C2849  | CHIP CERAMIC CAP. CH J 220PF/50V        | CHD1JJ3CH221 |
| C2850  | CHIP CERAMIC CAP. CH J 39PF/50V         | CHD1JJ3CH390 |
| C2851  | CHIP CERAMIC CAP. CH J 39PF/50V         | CHD1JJ3CH390 |
| C2852  | ELECTROLYTIC CAP. 10UF/50V (RFO T2)     | CEF100ELN004 |
| C2853  | ELECTROLYTIC CAP. 10UF/50V (RFO T2)     | CEF100ELN004 |
| C2855  | ELECTROLYTIC CAP. 470UF/6.3V (RFO T2)   | CEA471ELN004 |
| C2856  | ELECTROLYTIC CAP. 470UF/6.3V (RFO T2)   | CEA471ELN004 |
| C2857  | ELECTROLYTIC CAP. 470UF/6.3V (RFO T2)   | CEA471ELN004 |
| CN2002 | FFC CONNECTOR 21PIN IMSA-9615S-21A-PP-A | JC96J21ER007 |
| CN2005 | FFC CONNECTOR IMSA-9615S-11A-PP-A       | JC96J11ER007 |
| CN2007 | FFC CONNECTOR IMSA-9615S-26A-PP-A       | JC96J26ER007 |
| CN2008 | CONNECTOR PRINT OSU B16B-PH-K-S(LF)(SN) | J3PHC16JG029 |
| D2281  | DIODE SWITCHING 1N4148-F0021            | NDTZ01N4148F |
| D2601  | DIODE SWITCHING 1N4148-F0021            | NDTZ01N4148F |
| D2602  | DIODE SWITCHING 1N4148-F0021            | NDTZ01N4148F |
| D2603  | DIODE ZENER 36BSA-T26                   | NDTA036BST26 |
| D2604  | DIODE SWITCHING 1N4148-F0021            | NDTZ01N4148F |
| D2624  | DIODE ZENER 4V7BSB-T26                  | NDTB4R7BST26 |
| D2625  | IC SHUNT REGULATOR SL431A-AT            | NSZBA0TAUK01 |
| D2640  | DIODE SWITCHING 1N4148-F0021            | NDTZ01N4148F |
| IC2000 | IC SUB MICON MN101C77AGD                | QSAA0ROMS011 |
| IC2001 | RESET IC S-80930CNMC-G80T1G             | QSCA0TOSK402 |
| IC2200 | IC OP AMP NJM4580E-TE1                  | QSCA0TJR002  |
| IC2601 | IC OP AMP NJM4580E-TE1                  | QSCA0TJR002  |
| IC2602 | IC OP AMP NJM4580E-TE1                  | QSCA0TJR002  |
| IC2603 | IC OP AMP NJM4580E-TE1                  | QSCA0TJR002  |
| IC2604 | IC OP AMP NJM4580E-TE1                  | QSCA0TJR002  |
| L2201  | WIRE CP STP-S-0.60                      | XZ40F0REN002 |
| L2202  | WIRE CP STP-S-0.60                      | XZ40F0REN002 |
| L2306  | WIRE CP STP-S-0.60                      | XZ40F0REN002 |
| Q2200  | PNP TRANSISTOR RES.-IN SRA2204M-AT      | NQSZSRA2204M |
| Q2201  | PNP TRANSISTOR RES.-IN SRA2204M-AT      | NQSZSRA2204M |
| Q2202  | NPN TRANSISTOR 2SC5343MG-AT             | NQSG2SC5343M |

## BD-SP807(B)CDC1N(E5KE0UD)

|       |                                    |              |
|-------|------------------------------------|--------------|
| Q2203 | NPN TRANSISTOR 2SC5343MG-AT        | NQSG2SC5343M |
| Q2601 | NPN TRANSISTOR 2SC5343MG-AT        | NQSG2SC5343M |
| Q2602 | PNP TRANSISTOR 2SA1980M Y          | NQSY2SA1980M |
| Q2603 | NPN TRANSISTOR 2SC5343MG-AT        | NQSG2SC5343M |
| Q2604 | PNP TRANSISTOR 2SA1981Y-AT         | NQSY02SA1981 |
| Q2614 | NPN TRANSISTOR 2SC5343MG-AT        | NQSG2SC5343M |
| Q2618 | NPN TRANSISTOR 2SC5343MG-AT        | NQSG2SC5343M |
| Q2619 | NPN TRANSISTOR 2SC5343MG-AT        | NQSG2SC5343M |
| Q2620 | NPN TRANSISTOR 2SC5343MG-AT        | NQSG2SC5343M |
| Q2621 | NPN TRANSISTOR 2SC5343MG-AT        | NQSG2SC5343M |
| Q2622 | PNP TRANSISTOR RES.-IN SRA2204M-AT | NQSZSRA2204M |
| Q2623 | PNP TRANSISTOR RES.-IN SRA2204M-AT | NQSZSRA2204M |
| Q2624 | NPN TRANSISTOR 2SC5343MG-AT        | NQSG2SC5343M |
| Q2625 | NPN TRANSISTOR 2SC5343MG-AT        | NQSG2SC5343M |
| Q2626 | PNP TRANSISTOR RES.-IN SRA2204M-AT | NQSZSRA2204M |
| Q2627 | NPN TRANSISTOR 2SC5343MG-AT        | NQSG2SC5343M |
| Q2628 | NPN TRANSISTOR 2SC5343MG-AT        | NQSG2SC5343M |
| Q2629 | PNP TRANSISTOR RES.-IN SRA2204M-AT | NQSZSRA2204M |
| Q2630 | PNP TRANSISTOR RES.-IN SRA2204M-AT | NQSZSRA2204M |
| Q2631 | NPN TRANSISTOR 2SC5343MG-AT        | NQSG2SC5343M |
| Q2632 | NPN TRANSISTOR 2SC5343MG-AT        | NQSG2SC5343M |
| Q2633 | PNP TRANSISTOR RES.-IN SRA2204M-AT | NQSZSRA2204M |
| Q2634 | NPN TRANSISTOR 2SC5343MG-AT        | NQSG2SC5343M |
| Q2635 | NPN TRANSISTOR 2SC5343MG-AT        | NQSG2SC5343M |
| Q2636 | NPN TRANSISTOR 2SC5344 Y           | NQSY02SC5344 |
| R2000 | CHIP RES. 1/10W J 1K OHM           | RRXAJR5Z0102 |
| R2001 | CHIP RES. 1/10W J 100 OHM          | RRXAJR5Z0101 |
| R2002 | CHIP RES. 1/10W J 100 OHM          | RRXAJR5Z0101 |
| R2004 | CHIP RES. 1/10W J 470 OHM          | RRXAJR5Z0471 |
| R2006 | CHIP RES. 1/10W J 100 OHM          | RRXAJR5Z0101 |
| R2007 | CHIP RES. 1/10W J 100 OHM          | RRXAJR5Z0101 |
| R2015 | CHIP RES. 1/10W J 22K OHM          | RRXAJR5Z0223 |
| R2018 | CHIP RES. 1/10W J 39K OHM          | RRXAJR5Z0393 |
| R2020 | CHIP RES. 1/10W J 100 OHM          | RRXAJR5Z0101 |
| R2024 | CHIP RES. 1/10W J 10K OHM          | RRXAJR5Z0103 |
| R2025 | CHIP RES. 1/10W J 10K OHM          | RRXAJR5Z0103 |
| R2028 | CHIP RES. 1/10W J 10K OHM          | RRXAJR5Z0103 |
| R2030 | CHIP RES. 1/10W J 10K OHM          | RRXAJR5Z0103 |
| R2031 | CHIP RES. 1/10W J 100 OHM          | RRXAJR5Z0101 |
| R2032 | CHIP RES. 1/10W J 100 OHM          | RRXAJR5Z0101 |
| R2033 | CHIP RES. 1/10W J 100 OHM          | RRXAJR5Z0101 |
| R2034 | CHIP RES.(1608) 1/10W 0 OHM        | RRXAZR5Z0000 |
| R2035 | CHIP RES. 1/10W J 10K OHM          | RRXAJR5Z0103 |
| R2039 | CHIP RES.(1608) 1/10W 0 OHM        | RRXAZR5Z0000 |
| R2045 | CHIP RES. 1/10W J 100 OHM          | RRXAJR5Z0101 |
| R2050 | CHIP RES. 1/10W J 10K OHM          | RRXAJR5Z0103 |
| R2051 | CHIP RES. 1/10W J 1K OHM           | RRXAJR5Z0102 |
| R2052 | CHIP RES. 1/10W J 1K OHM           | RRXAJR5Z0102 |
| R2053 | CHIP RES. 1/10W J 47K OHM          | RRXAJR5Z0473 |
| R2057 | CHIP RES. 1/10W J 10K OHM          | RRXAJR5Z0103 |
| R2058 | CHIP RES. 1/10W J 10K OHM          | RRXAJR5Z0103 |
| R2059 | CHIP RES. 1/10W J 100 OHM          | RRXAJR5Z0101 |
| R2061 | CHIP RES. 1/10W J 100 OHM          | RRXAJR5Z0101 |
| R2064 | CHIP RES. 1/10W J 10K OHM          | RRXAJR5Z0103 |
| R2073 | CHIP RES. 1/10W J 10K OHM          | RRXAJR5Z0103 |
| R2074 | CHIP RES. 1/10W J 10K OHM          | RRXAJR5Z0103 |
| R2101 | CHIP RES.(1608) 1/10W 0 OHM        | RRXAZR5Z0000 |
| R2126 | CHIP RES.(1608) 1/10W 0 OHM        | RRXAZR5Z0000 |
| R2127 | CHIP RES.(1608) 1/10W 0 OHM        | RRXAZR5Z0000 |
| R2208 | CHIP RES. 1/10W F 24K OHM          | RRXAFR5H2402 |

## BD-SP807(B)CDC1N(E5KE0UD)

|       |                             |              |
|-------|-----------------------------|--------------|
| R2209 | CHIP RES. 1/10W F 24K OHM   | RRXAFR5H2402 |
| R2210 | CHIP RES. 1/10W J 8.2K OHM  | RRXAJR5Z0822 |
| R2211 | CHIP RES. 1/10W J 8.2K OHM  | RRXAJR5Z0822 |
| R2212 | CHIP RES. 1/10W F 33.0K OHM | RRXAFR5H3302 |
| R2213 | CHIP RES. 1/10W F 33.0K OHM | RRXAFR5H3302 |
| R2214 | CHIP RES. 1/10W J 100K OHM  | RRXAJR5Z0104 |
| R2215 | CHIP RES. 1/10W J 100K OHM  | RRXAJR5Z0104 |
| R2216 | CHIP RES. 1/10W J 820 OHM   | RRXAJR5Z0821 |
| R2217 | CHIP RES. 1/10W J 680 OHM   | RRXAJR5Z0681 |
| R2218 | CHIP RES. 1/10W J 820 OHM   | RRXAJR5Z0821 |
| R2219 | CHIP RES. 1/10W J 1K OHM    | RRXAJR5Z0102 |
| R2220 | CHIP RES. 1/10W J 100K OHM  | RRXAJR5Z0104 |
| R2221 | CHIP RES. 1/10W J 100K OHM  | RRXAJR5Z0104 |
| R2223 | CHIP RES. 1/10W J 4.7K OHM  | RRXAJR5Z0472 |
| R2224 | CHIP RES. 1/10W J 2.2K OHM  | RRXAJR5Z0222 |
| R2226 | CHIP RES. 1/10W J 1K OHM    | RRXAJR5Z0102 |
| R2227 | CHIP RES. 1/10W J 220 OHM   | RRXAJR5Z0221 |
| R2228 | CHIP RES. 1/10W J 220 OHM   | RRXAJR5Z0221 |
| R2229 | CHIP RES. 1/10W J 2.2K OHM  | RRXAJR5Z0222 |
| R2230 | CHIP RES. 1/10W J 4.7K OHM  | RRXAJR5Z0472 |
| R2284 | CHIP RES. 1/10W J 100 OHM   | RRXAJR5Z0101 |
| R2601 | CARBON RES. 1/4W J 47K OHM  | RCX4JATZ0473 |
| R2602 | CARBON RES. 1/4W J 47K OHM  | RCX4JATZ0473 |
| R2603 | CHIP RES. 1/10W J 10K OHM   | RRXAJR5Z0103 |
| R2604 | CHIP RES. 1/10W J 47K OHM   | RRXAJR5Z0473 |
| R2605 | CHIP RES. 1/10W J 3.9K OHM  | RRXAJR5Z0392 |
| R2607 | CHIP RES. 1/10W J 1K OHM    | RRXAJR5Z0102 |
| R2608 | CARBON RES. 1/4W J 10 OHM   | RCX4JATZ0100 |
| R2615 | CARBON RES. 1/4W J 5.6 OHM  | RCX4JATZ05R6 |
| R2616 | CARBON RES. 1/4W J 5.6 OHM  | RCX4JATZ05R6 |
| R2617 | CARBON RES. 1/4W J 10K OHM  | RCX4JATZ0103 |
| R2618 | CARBON RES. 1/4W J 10K OHM  | RCX4JATZ0103 |
| R2619 | CARBON RES. 1/4W J 10K OHM  | RCX4JATZ0103 |
| R2621 | CHIP RES. 1/10W J 1K OHM    | RRXAJR5Z0102 |
| R2622 | CARBON RES. 1/4W J 100 OHM  | RCX4JATZ0101 |
| R2623 | CHIP RES. 1/10W F 1.5K OHM  | RRXAFR5H1501 |
| R2624 | CHIP RES. 1/10W F 100 OHM   | RRXAFR5H1000 |
| R2625 | CHIP RES. 1/10W F 4.7K OHM  | RRXAFR5H4701 |
| R2665 | CHIP RES. 1/10W J 100 OHM   | RRXAJR5Z0101 |
| R2669 | CHIP RES. 1/10W J 27K OHM   | RRXAJR5Z0273 |
| R2671 | CHIP RES. 1/10W J 220K OHM  | RRXAJR5Z0224 |
| R2673 | CHIP RES. 1/10W J 2.2M OHM  | RRXAJR5Z0225 |
| R2674 | CHIP RES. 1/10W J 100K OHM  | RRXAJR5Z0104 |
| R2675 | CHIP RES. 1/10W J 220 OHM   | RRXAJR5Z0221 |
| R2676 | CHIP RES. 1/10W J 100K OHM  | RRXAJR5Z0104 |
| R2678 | CHIP RES.(1608) 1/10W 0 OHM | RRXAZR5Z0000 |
| R2679 | CHIP RES. 1/10W J 47K OHM   | RRXAJR5Z0473 |
| R2680 | CHIP RES. 1/10W J 27K OHM   | RRXAJR5Z0273 |
| R2903 | CHIP RES. 1/10W F 24K OHM   | RRXAFR5H2402 |
| R2904 | CHIP RES. 1/10W F 24K OHM   | RRXAFR5H2402 |
| R2905 | CHIP RES. 1/10W F 24K OHM   | RRXAFR5H2402 |
| R2906 | CHIP RES. 1/10W F 24K OHM   | RRXAFR5H2402 |
| R2907 | CHIP RES. 1/10W F 24K OHM   | RRXAFR5H2402 |
| R2908 | CHIP RES. 1/10W F 24K OHM   | RRXAFR5H2402 |
| R2909 | CHIP RES. 1/10W F 24K OHM   | RRXAFR5H2402 |
| R2916 | CHIP RES. 1/10W J 100K OHM  | RRXAJR5Z0104 |
| R2917 | CHIP RES. 1/10W J 4.7K OHM  | RRXAJR5Z0472 |
| R2918 | CHIP RES. 1/10W J 4.7K OHM  | RRXAJR5Z0472 |
| R2919 | CHIP RES. 1/10W J 2.2K OHM  | RRXAJR5Z0222 |
| R2920 | CHIP RES. 1/10W F 24K OHM   | RRXAFR5H2402 |

## BD-SP807(B)CDC1N(E5KE0UD)

|       |                             |              |
|-------|-----------------------------|--------------|
| R2921 | CHIP RES. 1/10W J 8.2K OHM  | RRXAJR5Z0822 |
| R2922 | CHIP RES. 1/10W J 8.2K OHM  | RRXAJR5Z0822 |
| R2923 | CHIP RES. 1/10W F 33.0K OHM | RRXAFR5H3302 |
| R2924 | CHIP RES. 1/10W F 33.0K OHM | RRXAFR5H3302 |
| R2925 | CHIP RES. 1/10W F 33.0K OHM | RRXAFR5H3302 |
| R2926 | CHIP RES. 1/10W F 33.0K OHM | RRXAFR5H3302 |
| R2927 | CHIP RES. 1/10W F 33.0K OHM | RRXAFR5H3302 |
| R2928 | CHIP RES. 1/10W F 33.0K OHM | RRXAFR5H3302 |
| R2929 | CHIP RES. 1/10W F 33.0K OHM | RRXAFR5H3302 |
| R2930 | CHIP RES. 1/10W F 33.0K OHM | RRXAFR5H3302 |
| R2931 | CHIP RES. 1/10W J 100K OHM  | RRXAJR5Z0104 |
| R2932 | CHIP RES. 1/10W J 100K OHM  | RRXAJR5Z0104 |
| R2933 | CHIP RES. 1/10W J 820 OHM   | RRXAJR5Z0821 |
| R2934 | CHIP RES. 1/10W J 820 OHM   | RRXAJR5Z0821 |
| R2935 | CHIP RES. 1/10W J 220 OHM   | RRXAJR5Z0221 |
| R2936 | CHIP RES. 1/10W J 220 OHM   | RRXAJR5Z0221 |
| R2937 | CHIP RES. 1/10W J 1K OHM    | RRXAJR5Z0102 |
| R2938 | CHIP RES. 1/10W J 1K OHM    | RRXAJR5Z0102 |
| R2939 | CHIP RES. 1/10W J 2.2K OHM  | RRXAJR5Z0222 |
| R2940 | CHIP RES. 1/10W J 100K OHM  | RRXAJR5Z0104 |
| R2941 | CHIP RES. 1/10W J 680 OHM   | RRXAJR5Z0681 |
| R2942 | CHIP RES. 1/10W J 1K OHM    | RRXAJR5Z0102 |
| R2943 | CHIP RES. 1/10W J 2.2K OHM  | RRXAJR5Z0222 |
| R2944 | CHIP RES. 1/10W J 100K OHM  | RRXAJR5Z0104 |
| R2945 | CHIP RES. 1/10W J 4.7K OHM  | RRXAJR5Z0472 |
| R2946 | CHIP RES. 1/10W J 8.2K OHM  | RRXAJR5Z0822 |
| R2947 | CHIP RES. 1/10W J 8.2K OHM  | RRXAJR5Z0822 |
| R2950 | CHIP RES. 1/10W J 100K OHM  | RRXAJR5Z0104 |
| R2951 | CHIP RES. 1/10W J 100K OHM  | RRXAJR5Z0104 |
| R2952 | CHIP RES. 1/10W J 820 OHM   | RRXAJR5Z0821 |
| R2953 | CHIP RES. 1/10W J 820 OHM   | RRXAJR5Z0821 |
| R2954 | CHIP RES. 1/10W J 220 OHM   | RRXAJR5Z0221 |
| R2955 | CHIP RES. 1/10W J 220 OHM   | RRXAJR5Z0221 |
| R2956 | CHIP RES. 1/10W J 1K OHM    | RRXAJR5Z0102 |
| R2957 | CHIP RES. 1/10W J 4.7K OHM  | RRXAJR5Z0472 |
| R2958 | CHIP RES. 1/10W J 4.7K OHM  | RRXAJR5Z0472 |
| R2959 | CHIP RES. 1/10W J 8.2K OHM  | RRXAJR5Z0822 |
| R2960 | CHIP RES. 1/10W J 8.2K OHM  | RRXAJR5Z0822 |
| R2963 | CHIP RES. 1/10W J 100K OHM  | RRXAJR5Z0104 |
| R2964 | CHIP RES. 1/10W J 100K OHM  | RRXAJR5Z0104 |
| R2965 | CHIP RES. 1/10W J 820 OHM   | RRXAJR5Z0821 |
| R2966 | CHIP RES. 1/10W J 820 OHM   | RRXAJR5Z0821 |
| R2967 | CHIP RES. 1/10W J 220 OHM   | RRXAJR5Z0221 |
| R2968 | CHIP RES. 1/10W J 220 OHM   | RRXAJR5Z0221 |
| R2969 | CHIP RES. 1/10W J 1K OHM    | RRXAJR5Z0102 |
| R2970 | CHIP RES. 1/10W J 1K OHM    | RRXAJR5Z0102 |
| R2971 | CHIP RES. 1/10W J 2.2K OHM  | RRXAJR5Z0222 |
| R2972 | CHIP RES. 1/10W J 2.2K OHM  | RRXAJR5Z0222 |
| R2973 | CHIP RES. 1/10W J 100K OHM  | RRXAJR5Z0104 |
| R2974 | CHIP RES. 1/10W J 100K OHM  | RRXAJR5Z0104 |
| R2975 | CHIP RES. 1/10W J 1K OHM    | RRXAJR5Z0102 |
| R2976 | CHIP RES. 1/10W J 1K OHM    | RRXAJR5Z0102 |
| R2977 | CHIP RES. 1/10W J 2.2K OHM  | RRXAJR5Z0222 |
| R2978 | CHIP RES. 1/10W J 820 OHM   | RRXAJR5Z0821 |
| R2979 | CHIP RES. 1/10W J 100K OHM  | RRXAJR5Z0104 |
| R2980 | CHIP RES. 1/10W J 4.7K OHM  | RRXAJR5Z0472 |
| R2981 | CHIP RES. 1/10W J 8.2K OHM  | RRXAJR5Z0822 |
| R2982 | CHIP RES. 1/10W J 8.2K OHM  | RRXAJR5Z0822 |
| R2985 | CHIP RES. 1/10W J 100K OHM  | RRXAJR5Z0104 |
| R2986 | CHIP RES. 1/10W J 100K OHM  | RRXAJR5Z0104 |

## BD-SP807(B)CDC1N(E5KE0UD)

|        |   |              |
|--------|---|--------------|
| R2987  | CHIP RES. 1/10W J 820 OHM                 | RRXAJR5Z0821 |
| R2988  | CHIP RES. 1/10W J 220 OHM                 | RRXAJR5Z0221 |
| R2989  | CHIP RES. 1/10W J 220 OHM                 | RRXAJR5Z0221 |
| R2992  | CHIP RES. 1/10W J 680 OHM                 | RRXAJR5Z0681 |
| R2993  | CHIP RES. 1/10W J 680 OHM                 | RRXAJR5Z0681 |
| R2994  | CHIP RES. 1/10W J 680 OHM                 | RRXAJR5Z0681 |
| JK2200 | RCA JACK 1PIN(WHITE) MSP-251V-13-GILT(B11 | JXRL010LY177 |
| JK2201 | RCA JACK 1PIN(RED) MSP-251V-12-GILT(B11   | JXRL010LY176 |
| JK2202 | RCA JACK 6PIN MSD-246V-184-GILT(B1        | JXRL060LY181 |
| JK2203 | RCA JACK 2PIN MSD-242V-03-GILT(B11        | JXRL020LY180 |
| JP2004 | WIRE CP STP-S-0.60                        | XZ40F0REN002 |
| JP2078 | WIRE CP STP-S-0.60                        | XZ40F0REN002 |
| JP2083 | WIRE CP STP-S-0.60                        | XZ40F0REN002 |
| X2000  | CERAMIC RESONATOR ZTT8.00MT47             | FY0805PLN004 |
|        | FRONT A CBA                               | -----        |
| C3001  | ELECTROLYTIC CAP. 100UF/6.3V/M/H7         | CEA101ENW025 |
| C3002  | CHIP CERAMIC CAP.(1608) F Z 0.1UF/50V     | CHD1JZ30F104 |
| C3003  | CHIP CERAMIC CAP.(1608) B K 1000PF/50V    | CHD1JK30B102 |
| C3005  | CHIP CERAMIC CAP.(1608) F Z 0.1UF/50V     | CHD1JZ30F104 |
| C3006  | ELECTROLYTIC CAP. 100UF/6.3V/M/H7         | CEA101ENW025 |
| C3007  | ELECTROLYTIC CAP. 22UF/50V/M/H7           | CEF22REN025  |
| C3008  | CHIP CERAMIC CAP.(1608) F Z 0.1UF/50V     | CHD1JZ30F104 |
| C3009  | CHIP CERAMIC CAP.(1608) F Z 0.1UF/50V     | CHD1JZ30F104 |
| CN3001 | CONNECTOR PRINT OSU S3B-PH-K-S(LF)(SN)    | J3PHC03JG030 |
| CN3002 | WIRE ASSEMBLY FFC DIRECT 21/150/1.0       | WX1E5KE-001  |
| D3002  | LED(RED) LTL1-1CHEE                       | NPQZLTL1CHEE |
| D3006  | LED(GREEN) LTL1CHJGTNN                    | NPQZ1CHJGTNN |
| D3007  | LED(BLUE) LTL1CHCBK2-F                    | NPQ3L1CHCBK2 |
| D3008  | LED(AMBER YELLOW) LTL1CHKYKNN             | NPQZ1CHKYKNN |
| L3001  | INDUCTOR(100UH K) LAP02TA101K             | LLAXKATTU101 |
| Q3001  | NPN TRANSISTOR RES-IN SRC1202SF           | NQ1ZSRC1202S |
| Q3005  | PNP TRANSISTOR SMD 2SA1980SFY             | NQ1Y2SA1980S |
| Q3006  | PNP TRANSISTOR SMD 2SA1980SFY             | NQ1Y2SA1980S |
| Q3007  | PNP TRANSISTOR SMD 2SA1980SFY             | NQ1Y2SA1980S |
| R3001  | CHIP RES. 1/10W J 150 OHM                 | RRXAJR5Z0151 |
| R3007  | CHIP RES. 1/10W J 22 OHM                  | RRXAJR5Z0220 |
| R3010  | CHIP RES. 1/10W J 220 OHM                 | RRXAJR5Z0221 |
| R3011  | CHIP RES. 1/10W J 150 OHM                 | RRXAJR5Z0151 |
| R3013  | CHIP RES.(1608) 1/10W 0 OHM               | RRXAZR5Z0000 |
| R3025  | CHIP RES. 1/10W J 180 OHM                 | RRXAJR5Z0181 |
| R3026  | CHIP RES.(1608) 1/10W 0 OHM               | RRXAZR5Z0000 |
| R3027  | CHIP RES. 1/10W J 6.8K OHM                | RRXAJR5Z0682 |
| R3028  | CHIP RES.(1608) 1/10W 0 OHM               | RRXAZR5Z0000 |
| R3030  | CHIP RES. 1/10W J 1K OHM                  | RRXAJR5Z0102 |
| R3031  | CHIP RES. 1/10W J 12K OHM                 | RRXAJR5Z0123 |
| R3032  | CHIP RES. 1/10W J 10 OHM                  | RRXAJR5Z0100 |
| R3033  | CHIP RES. 1/10W J 10 OHM                  | RRXAJR5Z0100 |
| SW3003 | TACT SWITCH SKQSAB                        | SST0101AL038 |
| FL3001 | FL DM182-GINK                             | TVFD150FT018 |
| RS3001 | SENSOR REMOTE RECEIVER KSM-713TC5B-FU     | USEJRS0KK007 |
|        | FRONT B CBA                               | -----        |
| CN3101 | WIRE ASSEMBLY PH DIRECT 3/35/AWG26        | WX1E5KA0-002 |
| R3116  | CHIP RES. 1/10W J 220 OHM                 | RRXAJR5Z0221 |
| R3119  | CHIP RES. 1/10W J 560 OHM                 | RRXAJR5Z0561 |
| R3122  | CHIP RES.(1608) 1/10W 0 OHM               | RRXAZR5Z0000 |
| R3123  | CHIP RES. 1/10W J 330 OHM                 | RRXAJR5Z0331 |
| R3124  | CHIP RES. 1/10W J 1.2K OHM                | RRXAJR5Z0122 |
| R3125  | CHIP RES. 1/10W J 3.3K OHM                | RRXAJR5Z0332 |

## BD-SP807(B)CDC1N(E5KE0UD)

|        |   |               |
|--------|---|---------------|
| SW3101 | TACT SWITCH SKQSAB                            | SST0101AL038  |
| SW3104 | TACT SWITCH SKQSAB                            | SST0101AL038  |
| SW3106 | TACT SWITCH SKQSAB                            | SST0101AL038  |
| SW3108 | TACT SWITCH SKQSAB                            | SST0101AL038  |
| SW3112 | TACT SWITCH SKQSAB                            | SST0101AL038  |
| SW3113 | TACT SWITCH SKQSAB                            | SST0101AL038  |
|        | POWER ASSEMBLY                                | 1VSA23605     |
|        | Consists of the following                     |               |
|        | POWER SUPPLY CBA                              | -----         |
|        | SD CBA  | -----         |
|        | INLET CBA                                     | -----         |
|        | POWER SUPPLY CBA                              | -----         |
| C1003! | LINE ACROSS CAP. 0.047UF/250V K               | CT2E473DC016  |
| C1005  | CHIP CERAMIC CAP.(1608) CH J 22PF/50V         | CHD1JK3JCH220 |
| C1006! | LINE ACROSS CAP. 0.047UF/250V K               | CT2E473DC016  |
| C1010  | CHIP CERAMIC CAP.(1608) B K 1000PF/50V        | CHD1JK30B102  |
| C1013  | CHIP CERAMIC CAP.(1608) B K 0.047UF/50V       | CHD1JK30B473  |
| C1015  | SAFETY CAP. 2200PF/250V                       | CCG2EMA0F222  |
| C1016  | SAFETY CAP. 2200PF/250V                       | CCG2EMA0F222  |
| C1017  | ELECTROLYTIC CAPACITOR ZR200TA221K18EB        | CA2D221DYG04  |
| C1019  | ELECTROLYTIC CAP. 47UF/35V/M                  | CEE47RENW016  |
| C1022  | METALIZED FILM CAP. 0.0022UF/400V K           | CT2H222DT034  |
| C1023  | CAP CERAMIC 470PF/2KV/K                       | CA3D471PAN17  |
| C1024  | CERAMIC CAP. B K 470PF/500V                   | CCD2JKS0B471  |
| C1025  | CHIP CERAMIC CAP.(1608) B K 0.01UF/50V        | CHD1JK30B103  |
| C1026  | ELECTROLYTIC CAP 2200UF/25V/M                 | CED222ENW009  |
| C1027  | POLYESTER FILM CAP. (PB FREE) 0.0068UF/100V J | CA2A682DT018  |
| C1028  | ELECTROLYTIC CAP. 220UF/16V/M                 | CEC221ENW016  |
| C1029  | ELECTROLYTIC CAP 4700UF/10V/M                 | CEB472ENW009  |
| C1030  | ELECTROLYTIC CAP. 220UF/25V/M                 | CED221ENW016  |
| C1031  | ELECTROLYTIC CAP 2200UF/25V/M                 | CED222ENW009  |
| C1033  | ELECTROLYTIC CAP. 100UF/50V/M                 | CEF101ENW016  |
| C1034  | ELECTROLYTIC CAP 4700UF/10V/M                 | CEB472ENW009  |
| C1035  | CHIP CERAMIC CAP.(1608) F Z 0.1UF/50V         | CHD1JZ30F104  |
| C1036  | ELECTROLYTIC CAP. 220UF/6.3V/M                | CEA221ENW016  |
| C1037  | ELECTROLYTIC CAP. 1000UF/6.3V/M               | CEA102ENW016  |
| C1039  | ELECTROLYTIC CAP. 1000UF/6.3V/M               | CEA102ENW016  |
| C1040  | CHIP CERAMIC CAP.(1608) B K 0.33UF/10V        | CHD1AK30B334  |
| C1041  | ELECTROLYTIC CAP. 1000UF/6.3V/M               | CEA102ENW016  |
| C1042  | ELECTROLYTIC CAP. 10UF/16V/M                  | CEC10RENW016  |
| C1043  | ELECTROLYTIC CAP. 100UF/6.3V/M                | CEA101ENW016  |
| C1044  | CHIP CERAMIC CAP.(1608) B K 0.1UF/25V         | CHD1EK30B104  |
| C1045  | CHIP CERAMIC CAP.(1608) B K 1UF/10V           | CHD1AK30B105  |
| C1046  | ELECTROLYTIC CAP. 47UF/25V/M                  | CED47RENW016  |
| C1048  | ELECTROLYTIC CAP. 1000UF/6.3V/M               | CEA102ENW016  |
| C1050  | ELECTROLYTIC CAP. 330UF/6.3V/M                | CEA331ENW016  |
| C1051  | ELECTROLYTIC CAP. 330UF/6.3V/M                | CEA331ENW016  |
| C1052  | ELECTROLYTIC CAP. 330UF/6.3V/M                | CEA331ENW016  |
| C1053  | ELECTROLYTIC CAP. 330UF/6.3V/M                | CEA331ENW016  |
| C1054  | ELECTROLYTIC CAP. 470UF/16V/M                 | CEC471ENW016  |
| C1055  | ELECTROLYTIC CAP. 1000UF/6.3V/M               | CEA102ENW016  |
| C1056  | ELECTROLYTIC CAP. 1000UF/6.3V/M               | CEA102ENW016  |
| C1058  | CHIP CERAMIC CAP.(1608) B K 1UF/10V           | CHD1AK30B105  |
| C1059  | CHIP CERAMIC CAP.(1608) B K 1UF/10V           | CHD1AK30B105  |
| C1060  | CHIP CERAMIC CAP. B K 10UF/10V                | CHE1AK30B106  |
| C1064  | CHIP CERAMIC CAP.(1608) F Z 0.1UF/50V         | CHD1JZ30F104  |
| C1065  | CHIP CERAMIC CAP.(1608) F Z 0.1UF/50V         | CHD1JZ30F104  |
| C1066  | CHIP CERAMIC CAP.(1608) F Z 0.1UF/50V         | CHD1JZ30F104  |

## BD-SP807(B)CDC1N(E5KE0UD)

|         |  |              |
|---------|--|--------------|
| C1067   | CHIP CERAMIC CAP.(1608) F Z 0.1UF/50V    | CHD1JZ30F104 |
| C1068   | CHIP CERAMIC CAP. B K 8200PF/50V         | CHD1JK30B822 |
| C1069   | CHIP CERAMIC CAP.(1608) B K 5600PF/50V   | CHD1JK30B562 |
| C1070   | ELECTROLYTIC CAP. 1000UF/25V/M           | CED102ENW016 |
| C1071   | CHIP CERAMIC CAP. B K 10UF/10V           | CHE1AK30B106 |
| C1072   | CHIP CERAMIC CAP. B K 10UF/10V           | CHE1AK30B106 |
| C1073   | CHIP CERAMIC CAP. B K 10UF/10V           | CHE1AK30B106 |
| C1074   | CHIP CERAMIC CAP. B K 10UF/10V           | CHE1AK30B106 |
| C1077   | ELECTROLYTIC CAP. 1000UF/6.3V/M          | CEA102ENW016 |
| C1078   | ELECTROLYTIC CAP. 1000UF/6.3V/M          | CEA102ENW016 |
| C1079   | CHIP CERAMIC CAP.(1608) B K 0.1UF/25V    | CHD1EK30B104 |
| C1080   | CHIP CERAMIC CAP.(1608) B K 0.1UF/25V    | CHD1EK30B104 |
| C1082   | CHIP CERAMIC CAP.(1608) B K 1UF/10V      | CHD1AK30B105 |
| C1721   | ELECTROLYTIC CAP. 100UF/6.3V/M           | CEA101ENW016 |
| CN1002! | CONNECTOR PRINT OSU B2P3-VH-B (LF)(SN)   | J3VH030JG014 |
| CN1003  | TWG CONNECTOR 23P TWG-P23P-A1            | J3TWA23TG001 |
| CN1004  | CONNECTOR PRINT OSU B16B-PH-K-S(LF)(SN)  | J3PHC16JG029 |
| CN1006  | PH CONNECTOR TOP 2P B2B-PH-K-S (LF)(SN)  | J3PHC02JG029 |
| CN5003  | TWG CONNECTOR 23P TWG-P23P-A1            | J3TWA23TG001 |
| CN5004  | TWG CONNECTOR 15P TWG-P15P-A1            | J3TWA15TG001 |
| D1007   | DIODE 1N5397-B                           | NDLZ001N5397 |
| D1008   | DIODE 1N5397-B                           | NDLZ001N5397 |
| D1011   | DIODE 1N5397-B                           | NDLZ001N5397 |
| D1012   | DIODE 1N5397-B                           | NDLZ001N5397 |
| D1013   | DIODE ZENER 24BSB-T26                    | NDTB024BST26 |
| D1016   | WIRE CP STP-S-0.60                       | XZ40F0REN002 |
| D1019   | SCHOTTKY BARRIER DIODE SB140             | NDQZ000SB140 |
| D1021   | DIODE FR154                              | NDLZ000FR154 |
| D1022   | DIODE ZENER 27BSB-T26                    | NDTB027BST26 |
| D1023   | RECTIFIER DIODE BA157                    | NDQZ000BA157 |
| D1024   | RECTIFIER DIODE BA157                    | NDQZ000BA157 |
| D1025   | SCHOTTKY BARRIER DIODE SB340             | NDQZ000SB340 |
| D1026   | DIODE ZENER 27BSB-T26                    | NDTB027BST26 |
| D1028   | SCHOTTKY BARRIER DIODE SMD SK39          | ND1Z0000SK39 |
| D1029   | IC SHUNT REGULATOR SL431A-AT             | NSZBA0TAUK01 |
| D1030   | SCHOTTKY BARRIER DIODE SB340             | NDQZ000SB340 |
| D1031   | SCHOTTKY BARRIER DIODE SB340             | NDQZ000SB340 |
| D1032   | RECTIFIER DIODE BA157                    | NDQZ000BA157 |
| D1033   | RECTIFIER DIODE BA157                    | NDQZ000BA157 |
| D1035   | DIODE ZENER 5V1BSB-T26                   | NDTB5R1BST26 |
| D1040   | DIODE SWITCHING 1N4148-F0021             | NDTZ01N4148F |
| D1041   | DIODE 1N5406                             | NDLZ001N5406 |
| D1042   | DIODE SWITCHING 1N4148-F0021             | NDTZ01N4148F |
| D1043   | DIODE SWITCHING 1N4148-F0021             | NDTZ01N4148F |
| D1044   | DIODE SWITCHING 1N4148-F0021             | NDTZ01N4148F |
| D1045   | DIODE SWITCHING 1N4148-F0021             | NDTZ01N4148F |
| D1046   | DIODE ZENER 11BSC-T26                    | NDTC011BST26 |
| D1047   | DIODE SWITCHING 1N4148-F0021             | NDTZ01N4148F |
| D1048   | DIODE SWITCHING 1N4148-F0021             | NDTZ01N4148F |
| D1049   | DIODE SWITCHING 1N4148-F0021             | NDTZ01N4148F |
| D1050   | DIODE SWITCHING 1N4148-F0021             | NDTZ01N4148F |
| D1052   | DIODE SWITCHING 1N4148-F0021             | NDTZ01N4148F |
| D1053   | SCHOTTKY BARRIER DIODE SMD SK34          | ND1Z0000SK34 |
| D1054   | SCHOTTKY BARRIER DIODE SMD SK34          | ND1Z0000SK34 |
| D1055   | DIODE ZENER 13BSB-T26                    | NDTB013BST26 |
| IC1002! | IC SWITCHING FA5573N-D1-TE1 SOP8         | QSCA0T0FD002 |
| IC1004! | PHOTOCOUPLED PS2561A-1(W)                | QPEWPS2561A1 |
| IC1008  | IC VOLTAGE REGULATOR PQ070XFC1SZF / 4PIN | QSZBA0RSH083 |
| IC1009  | IC DC-DC CONVERTER BD9323EFJ-E2          | QSCA0T0RM002 |
| IC1010  | IC DC-DC CONVERTER BD9323EFJ-E2          | QSCA0T0RM002 |

## BD-SP807(B)CDC1N(E5KE0UD)

|        |   |              |
|--------|---|--------------|
| L1001! | COIL LINE FILTER ST0603FT20-009 0.027     | LLEB0Z0Y2001 |
| L1003  | CHOKE COIL 22UH-K                         | LLBD00PKV021 |
| L1004  | POWER INDUCTORS CWKBNP-220K               | LLF2200KV002 |
| L1006  | CHOKE COIL 22UH-K                         | LLBD00PKV021 |
| L1007  | CHOKE COIL 22UH-K                         | LLBD00PKV021 |
| L1008  | CHOKE COIL 22UH-K                         | LLBD00PKV021 |
| L1009  | POWER INDUCTORS CWKBNP-100K               | LLF1000KV002 |
| L1010  | POWER INDUCTORS CWKBNP-100K               | LLF1000KV002 |
| L1305  | RADIAL TYPE CHOKE COIL CW68-470K-841040NP | LLBD00PKV023 |
| Q1001  | PNP TRANSISTOR 2SA1980M Y                 | NQSY2SA1980M |
| Q1002! | FET MOS 2SK3563(Q M)                      | QFQZSK3563QM |
| Q1005  | NPN TRANSISTOR RES-IN SRC1203MAT          | NQSZSRC1203M |
| Q1006  | PNP TRANSISTOR 2SA1980M Y                 | NQSY2SA1980M |
| Q1007  | NPN TRANSISTOR 2SC5344 Y                  | NQSY02SC5344 |
| Q1008  | NPN TRANSISTOR 2SC5343MG-AT               | NQSG2SC5343M |
| Q1009  | PNP TRANSISTOR STB1277LY-AT               | NQSYSTB1277L |
| Q1010  | PNP TRANSISTOR 2SA1981Y-AT                | NQSY02SA1981 |
| Q1011  | PNP TRANSISTOR STB1277LY-AT               | NQSYSTB1277L |
| Q1012  | PNP TRANSISTOR 2SA1980MG-AT               | NQSG2SA1980M |
| Q1013  | NPN TRANSISTOR STC403                     | NQEZ00STC403 |
| Q1014  | NPN TRANSISTOR 2SC5343MG-AT               | NQSG2SC5343M |
| Q1015  | NPN TRANSISTOR 2SC5343MG-AT               | NQSG2SC5343M |
| Q1016  | NPN TRANSISTOR 2SC5343MG-AT               | NQSG2SC5343M |
| Q1017  | NPN TRANSISTOR 2SC5344 Y                  | NQSY02SC5344 |
| Q1019  | NPN TRANSISTOR SMD 2SC5343SFG             | NQ1G2SC5343S |
| R1003  | CHIP RES. 1/10W F 100K OHM                | RRXAFR5H1003 |
| R1005  | WIRE CP STP-S-0.60                        | XZ40F0REN002 |
| R1006  | WIRE CP STP-S-0.60                        | XZ40F0REN002 |
| R1009  | CHIP RES. 1/10W J 8.2K OHM                | RRXAJR5Z0822 |
| R1011  | CHIP RES. 1/10W J 33 OHM                  | RRXAJR5Z0330 |
| R1012  | CHIP RES. 1/10W J 2.2K OHM                | RRXAJR5Z0222 |
| R1013  | CHIP RES. 1/10W J 2.2K OHM                | RRXAJR5Z0222 |
| R1014  | CARBON RES. 1/4W J 75K OHM                | RCX4JATZ0753 |
| R1017  | CHIP RES. 1/10W J 56 OHM                  | RRXAJR5Z0560 |
| R1019  | CHIP RES. 1/10W J 100 OHM                 | RRXAJR5Z0101 |
| R1020  | CHIP RES. 1/10W J 10 OHM                  | RRXAJR5Z0100 |
| R1021  | CHIP RES. 1/10W J 4.7K OHM                | RRXAJR5Z0472 |
| R1022  | METAL OXIDE FILM RES. 2W J 47K OHM        | RN02473ZU001 |
| R1023  | METAL OXIDE FILM RES. 2W J 0.68 OHM       | RN02R68ZU001 |
| R1030  | CHIP RES. 1/10W J 470 OHM                 | RRXAJR5Z0471 |
| R1031  | CHIP RES. 1/10W J 22K OHM                 | RRXAJR5Z0223 |
| R1032  | CHIP RES. 1/10W J 1 OHM                   | RRXAJR5Z01R0 |
| R1033  | CHIP RES. 1/10W J 1 OHM                   | RRXAJR5Z01R0 |
| R1034  | CARBON RES. 1/4W J 5.1K OHM               | RCX4JATZ0512 |
| R1036  | CHIP RES. 1/10W J 680 OHM                 | RRXAJR5Z0681 |
| R1037  | CHIP RES. 1/10W F 2K OHM                  | RRXAFR5H2001 |
| R1041  | CHIP RES. 1/10W F 270 OHM                 | RRXAFR5H2700 |
| R1042  | CHIP RES. 1/10W F 1.0K OHM                | RRXAFR5H1001 |
| R1043  | CHIP RES. 1/10W F 1.0K OHM                | RRXAFR5H1001 |
| R1044  | WIRE CP STP-S-0.60                        | XZ40F0REN002 |
| R1045  | CHIP RES. 1/10W J 4.7K OHM                | RRXAJR5Z0472 |
| R1046  | CHIP RES. 1/10W J 2.2K OHM                | RRXAJR5Z0222 |
| R1047  | CHIP RES. 1/10W J 4.7K OHM                | RRXAJR5Z0472 |
| R1048  | CHIP RES. 1/10W J 4.7K OHM                | RRXAJR5Z0472 |
| R1049  | CARBON RES. 1/4W J 4.7K OHM               | RCX4JATZ0472 |
| R1050  | CHIP RES. 1/10W J 4.7K OHM                | RRXAJR5Z0472 |
| R1051  | CHIP RES. 1/10W J 10K OHM                 | RRXAJR5Z0103 |
| R1052  | CHIP RES. 1/10W J 47K OHM                 | RRXAJR5Z0473 |
| R1053  | CARBON RES. 1/4W J 82 OHM                 | RCX4JATZ0820 |
| R1054  | CHIP RES. 1/10W J 4.7K OHM                | RRXAJR5Z0472 |

## BD-SP807(B)CDC1N(E5KE0UD)

|         |  |              |
|---------|--|--------------|
| R1056   | CHIP RES. 1/10W J 10K OHM                | RRXAJR5Z0103 |
| R1057   | CARBON RES. 1/4W J 82 OHM                | RCX4JATZ0820 |
| R1059   | CHIP RES. 1/10W F 10K OHM                | RRXAFR5H1002 |
| R1060   | CHIP RES. 1/10W F 15K OHM                | RRXAFR5H1502 |
| R1061   | CARBON RES. 1/4W J 220 OHM               | RCX4JATZ0221 |
| R1062   | CHIP RES. 1/10W F 2K OHM                 | RRXAFR5H2001 |
| R1063   | CHIP RES. 1/10W J 10K OHM                | RRXAJR5Z0103 |
| R1065   | CARBON RES. 1/4W J 56 OHM                | RCX4JATZ0560 |
| R1066   | METAL OXIDE FILM RES. 1W J 1.2 OHM       | RN011R2ZU001 |
| R1067   | CHIP RES. 1/10W J 4.7K OHM               | RRXAJR5Z0472 |
| R1068   | CHIP RES. 1/10W J 10K OHM                | RRXAJR5Z0103 |
| R1069   | CHIP RES. 1/10W J 10K OHM                | RRXAJR5Z0103 |
| R1070   | CHIP RES. 1/10W J 10K OHM                | RRXAJR5Z0103 |
| R1071   | CHIP RES. 1/10W J 5.1K OHM               | RRXAJR5Z0512 |
| R1072   | CHIP RES. 1/10W J 8.2K OHM               | RRXAJR5Z0822 |
| R1073   | CHIP RES. 1/10W J 150 OHM                | RRXAJR5Z0151 |
| R1074   | CHIP RES. 1/10W J 150 OHM                | RRXAJR5Z0151 |
| R1075   | CHIP RES. 1/10W F 1.0K OHM               | RRXAFR5H1001 |
| R1076   | CHIP RES.(1608) 1/10W 0 OHM              | RRXAZR5Z0000 |
| R1077   | CHIP RES. 1/10W F 1.5K OHM               | RRXAFR5H1501 |
| R1078   | CHIP RES. 1/10W F 3.3K OHM               | RRXAFR5H3301 |
| R1081   | CHIP RES. 1/10W F 1.5K OHM               | RRXAFR5H1501 |
| R1082   | CHIP RES. 1/10W F 2.2K OHM               | RRXAFR5H2201 |
| R1083   | CHIP RES. 1/10W F 3.3K OHM               | RRXAFR5H3301 |
| R1087   | CARBON RES. 1/4W J 27 OHM                | RCX4JATZ0270 |
| R1092   | CARBON RES. 1/4W J 47 OHM                | RCX4JATZ0470 |
| R1093   | CHIP RES. 1/10W J 47K OHM                | RRXAJR5Z0473 |
| R1094   | CARBON RES. 1/4W J 10 OHM                | RCX4JATZ0100 |
| R1095   | CHIP RES.(1608) 1/10W 0 OHM              | RRXAZR5Z0000 |
| 2L058   | SCREW S-TIGHT M3X8 BIND HEAD+            | GBJS3080     |
| B49     | POWER HEATSINK E4340UD                   | 1VM422057E   |
| B74     | POWER HEATSINK E3BH0JD                   | 1VM323816    |
| B75     | HEAT SINK E2A00JD                        | 1VM424636E   |
| F1001!  | FUSE TIME RAG FSL 250V 2A(EM)            | PDGJAB0NG202 |
| FH1001  | FUSE HOLDER MSF-015 LF (B110)            | XH01Z00LY002 |
| FH1002  | FUSE HOLDER MSF-015 LF (B110)            | XH01Z00LY002 |
| JC1101  | CHIP RES.(1608) 1/10W 0 OHM              | RRXAZR5Z0000 |
| JC1102  | CHIP RES.(1608) 1/10W 0 OHM              | RRXAZR5Z0000 |
| JC1103  | CHIP RES.(1608) 1/10W 0 OHM              | RRXAZR5Z0000 |
| JP1004  | WIRE CP STP-S-0.60                       | XZ40F0REN002 |
| JP1005  | WIRE CP STP-S-0.60                       | XZ40F0REN002 |
| JP1107  | WIRE CP STP-S-0.60                       | XZ40F0REN002 |
| JP1108  | WIRE CP STP-S-0.60                       | XZ40F0REN002 |
| JP1137  | WIRE CP STP-S-0.60                       | XZ40F0REN002 |
| JP1144  | WIRE CP STP-S-0.60                       | XZ40F0REN002 |
| JP1152  | WIRE CP STP-S-0.60                       | XZ40F0REN002 |
| SA1001! | SURGE ABSORBER 470V+10PER                | NVQZ10D471KB |
| T1002!  | TRANS POWER 8733                         | LTT2PC0KT050 |
|         | SD CBA                                   | -----        |
| C5001   | CHIP CERAMIC CAP.(1608) B K 0.1UF/16V    | CHD1CK30B104 |
| C5003   | CHIP CERAMIC CAP.(2125) B K 10UF/6.3V    | CHE0KK30B106 |
| C5008   | CHIP CERAMIC CAP.(1608) CH J 33PF/50V    | CHD1JJ3CH330 |
| CN5000  | CONNECTOR IC CARD MES 9PIN 1903572       | JF19090AP001 |
| CN5001  | BOARD CONNECTOR 23P(PB FREE) 127301123K2 | JCTWA23TG004 |
| L5002   | CHIP INDUCTOR LK160882NM-T               | LLACMB3TU82N |
| R5001   | CHIP RES. 1/10W J 47 OHM                 | RRXAJR5Z0470 |
| R5002   | CHIP RES. 1/10W J 47 OHM                 | RRXAJR5Z0470 |
| R5003   | CHIP RES. 1/10W J 47 OHM                 | RRXAJR5Z0470 |
| R5004   | CHIP RES. 1/10W J 22 OHM                 | RRXAJR5Z0220 |

|         |  |              |
|---------|--|--------------|
| R5005   | CHIP RES. 1/10W J 47 OHM                       | RRXAJR5Z0470 |
| R5006   | CHIP RES. 1/10W J 47 OHM                       | RRXAJR5Z0470 |
|         |  |              |
|         | INLET CBA                                      | -----        |
| CN1001! | VH CONNECTOR PRINT OSU B2P3S-VH(LF)(SN)        | J3VH030JG002 |
| AC1001! | TERMINAL ACPLUG RESEPTAL AC IN 0 P ST-02G-ACBP | JTDC0P0SLT02 |

**ONKYO CORPORATION**

Service Dept. Technical Support : 2-1, Nisshin-cho, Neyagawa-shi, OSAKA 572-8540, JAPAN  
Tel: 072-831-8023 Fax: 072-831-8163

**ONKYO U.S.A. CORPORATION**

18 Park Way, Upper Saddle River, N.J. 07458, U.S.A.  
Tel: 201-785-2600 Fax: 201-785-2650 <http://www.us.onkyo.com/>

**ONKYO EUROPE ELECTRONICS GmbH (DUISBURG OFFICE)**

Hafenrr.7602, Logport Office-Center, Bliersheimerstr.80B, 47229 Duisburg, Germany  
Tel: +49-2065-90198-00 Fax: +49-2065-90198-40 <http://www.eu.onkyo.com/>

**ONKYO EUROPE UK Office**

Suite 1, Gregories Court, Gregories Road, Beaconsfield, Buckinghamshire, HP9 1HQ  
UNITED KINGDOM Tel: +44-(0)1494-681515 Fax: +44(0)-1494-680452

**ONKYO CHINA LIMITED**

Units 2102-2107, Metroplaza Tower I, 223 Hing Fong Road, Kwai Chung,  
N.T., HONG KONG Tel: 852-2429-3118 Fax: 852-2428-9039  
<http://www.ch.onkyo.com/>

