

Service Manual



DVD Recorder

DMR-EZ45VEB

Vol. 1

Colour

(S).....Silver Type

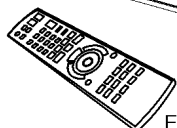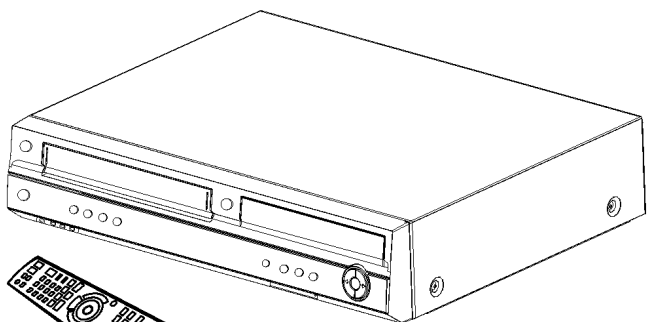

EUR7659YN0

Notes:

This model's RAM / Digital P.C.B
Module are - RFKNEZ45VEB

CAUTION:

Pairing of RAM Drive and Digital P.C.B. as "RAM / DIGITAL P.C.B. MODULE" have to be replaced together. If the pairing is changed, RAM Drive unit has to be re-aligned. Because the alignment data for RAM Drive Unit is stored in Digital P.C.B.

Manufactured under license from Dolby Laboratories. "Dolby" and double-D symbol are trademarks of Dolby Laboratories.

"DTS" and "DTS 2.0 + Digital Out" are trademarks of Digital Theater Systems, Inc.

- SD logo is a trademark.
- Portions of this product are protected under copyright law and are provided under license by ARIS/SOLANA/4C.
- miniSD™ is a trademark of SD Card Association.

Apparatus Claims of U.S. Patent Nos. 4,631,603, 4,577,216, and 4,819,098, licensed for limited viewing uses only.

HDAVI Control™ is a trademark of Matsushita Electric Industrial Co., Ltd.

G-CODE is a registered trademark of Gemstar Development Corporation. The G-CODE system is manufactured under license from Gemstar Development Corporation.

HDMI, the HDMI logo and High-Defininition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.

MPEG Layer-3 audio decoding technology licensed from Fraunhofer IIS and Thomson multimedia.

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

Panasonic®

© 2006 Matsushita Electric Industrial CO., Ltd. All rights reserved. Unauthorized copying and distribution is a violation of law.

⚠ WARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

CONTENTS

	Page		Page
1 SAFETY PRECAUTIONS	4	11 MISCELLANEOUS	45
1.1. GENERAL GUIDELINES	4	11.1. ABBREVIATIONS	45
2 WARNING	5	12 BLOCK DIAGRAM	51
2.1. PREVENTION OF ELECTROSTATIC DISCHARGE (ESD) TO ELECTROSTATIC SENSITIVE (ES) DEVICES	5	12.1. POWER SUPPLY BLOCK DIAGRAM	51
2.2. PRECAUTION OF LASER DIODE	6	12.2. SYSTEM CONTROL, SERVO & TIMER BLOCK DIAGRAM	52
2.3. SERVICE CAUTION BASED ON LEGAL RESTRICTIONS	7	12.3. AUDIO BLOCK DIAGRAM	53
3 SERVICE NAVIGATION	8	12.4. VIDEO BLOCK DIAGRAM	54
3.1. SERVICE INFORMATION	8	12.5. DIGITAL I/F P.C.B. BLOCK DIAGRAM	56
4 SPECIFICATION	9	12.6. HDMI BLOCK DIAGRAM	57
5 LOCATION OF CONTROLS AND COMPONENTS	10	13 SCHEMATIC DIAGRAM	59
6 OPERATING INTRUCTIONS	11	13.1. INTERCONNECTION DIAGRAM	59
6.1. (DVD) TAKING OUT THE DISC FROM RAM-DRIVE UNIT WHEN THE DISC CANNOT BE EJECTED BY OPEN/CLOSE BUTTON	11	13.2. POWER SUPPLY	60
6.2. (VHS) REMOVING OF CASSETTE TAPE	12	13.3. DIGITAL I/F	61
7 SERVICE MODE	14	13.4. IO / TUNER	62
7.1. (DVD) SELF-DIAGNOSIS AND SPECIAL MODE SETTING	14	13.5. SYSCON / SERVO / TIMER MAIN	63
7.2. (VHS) SELF-DIAGNOSIS AND SPECIAL MODE SETTING	24	13.6. VIDEO	64
8 SERVICE FIXTURE AND TOOLS	26	13.7. AUDIO NICAM	65
9 ASSEMBLING AND DISASSEMBLING	27	13.8. FRONT JACK	66
9.1. DISASSEMBLY FLOW CHART	27	13.9. FL DRIVE	67
9.2. P.C.B. POSITIONS	27	13.10. SD/DV IN	68
9.3. CAUTION WHILE INSERTING CASSETTE TAPE WHEN DISASSEMBLING THE UNIT	27	13.11. HDMI	69
9.4. TOP CASE	28	14 PRINTED CIRCUIT BOARD	71
9.5. FRONT PANEL	28	14.1. POWER & DIGITAL I/F P.C.B. (COMPONENT SIDE) ---	71
9.6. FRONT JACK P.C.B. & FL DRIVE P.C.B.	29	14.2. POWER & DIGITAL I/F P.C.B. (SOLDER SIDE)	72
9.7. REAR PANEL & FAN MOTOR	29	14.3. MAIN P.C.B. (COMPONENT SIDE)	73
9.8. VCR MECHANISM UNIT	30	14.4. MAIN P.C.B. (SOLDER SIDE)	74
9.9. MAIN P.C.B.	31	14.5. FRONT JACK P.C.B.	75
9.10. TUNER	31	14.6. FL DRIVE P.C.B.	76
9.11. DVD-RAM DRIVE / DIGITAL P.C.B. MODULE	32	14.7. SD/DV IN P.C.B.	77
9.12. SD/DV IN P.C.B.	33	14.8. HDMI P.C.B.	78
9.13. POWER & DIGITAL I/F P.C.B.	34	15 APPENDIX FOR SCHEMATIC DIAGRAM	79
9.14. BACK END P.C.B.	35	15.1. VOLTAGE AND WAVEFORM CHART	79
9.15. HDMI P.C.B.	35	16 EXPLODED VIEWS	91
10 MEASUREMENTS AND ADJUSTMENTS	36	16.1. MECHANISM & CASING PARTS	91
10.1. SERVICE POSITIONS	36	16.2. FRONT PANEL PARTS	92
10.2. CAUTION FOR REPLACING PARTS	39	16.3. VHS MECHANISM PARTS	93
10.3. (DVD) STANDARD INSPECTION SPECIFICATION AFTER MAKING REPAIRS	44	16.4. PACKING & ACCESSORIES	94
		17 REPLACEMENT PARTS LIST	95
		17.1. CASING PARTS & PRINTED CIRCUIT BOARDS	95
		17.2. VHS MECHANISM PARTS	95
		17.3. PACKING & ACCESSORIES PARTS	96
		17.4. ELECTRICAL PARTS	96
		17.5. SERVICE FIXTURE AND TOOLS	108

1 SAFETY PRECAUTIONS

1.1. GENERAL GUIDELINES

1. Be careful during removing metal parts, sharp edges.
2. When servicing, observe the original lead dress. If a short circuit is found, replace all parts which have been overheated or damaged by the short circuit.
3. After servicing, see to it that all the protective devices such as insulation barriers, insulation papers shields are properly installed.
4. After servicing, make the following leakage current checks to prevent the customer from being exposed to shock hazards.

1.1.1. LEAKAGE CURRENT COLD CHECK

1. Unplug the AC cord and connect a jumper between the two prongs on the plug.
2. Measure the resistance value, with an ohmmeter, between the jumpered AC plug and each exposed metallic cabinet part on the equipment such as screw heads, connectors, control shafts, etc. When the exposed metallic part has a return path to the chassis, the reading should be between $1M\Omega$ and $5.2M\Omega$.
When the exposed metal does not have a return path to the chassis, the reading must be infinity.

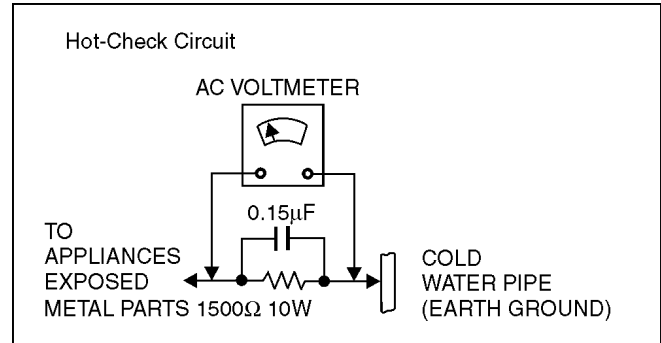


Figure 1

1.1.2. LEAKAGE CURRENT HOT CHECK

1. Plug the AC cord directly into the AC outlet. Do not use an isolation transformer for this check.
2. Connect a $1.5k\Omega$, 10 watts resistor, in parallel with a $0.15\mu\text{F}$ capacitors, between each exposed metallic part on the set and a good earth ground such as a water pipe, as shown in Figure 1.
3. Use an AC voltmeter, with 1000 ohms/volt or more sensitivity, to measure the potential across the resistor.
4. Check each exposed metallic part, and measure the voltage at each point.
5. Reverse the AC plug in the AC outlet and repeat each of the above measurements.
6. The potential at any point should not exceed 0.75 volts RMS. A leakage current tester (Simpson Model 229 or equivalent) may be used to make the hot checks, leakage current must not exceed $1/2$ milliampere. In case a measurement is outside of the limits specified, there is a possibility of a shock hazard, and the equipment should be repaired and rechecked before it is returned to the customer.

2 WARNING

2.1. PREVENTION OF ELECTROSTATIC DISCHARGE (ESD) TO ELECTROSTATIC SENSITIVE (ES) DEVICES

Some semiconductor (solid state) devices can be damaged easily by static electricity. Such components commonly are called Electrostatic Sensitive (ES) Devices. Examples of typical ES devices are integrated circuits and some field-effect transistor-sand semiconductor "chip" components. The following techniques should be used to help reduce the incidence of component damage caused by electrostatic discharge (ESD).

1. Immediately before handling any semiconductor component or semiconductor-equipped assembly, drain off any ESD on your body by touching a known earth ground. Alternatively, obtain and wear a commercially available discharging ESD wrist strap, which should be removed for potential shock reasons prior to applying power to the unit under test.
2. After removing an electrical assembly equipped with ES devices, place the assembly on a conductive surface such as aluminum foil, to prevent electrostatic charge buildup or exposure of the assembly.
3. Use only a grounded-tip soldering iron to solder or unsolder ES devices.
4. Use only an anti-static solder removal device.

Some solder removal devices not classified as "anti-static (ESD protected)" can generate electrical charge sufficient to damage ES devices.

5. Do not use freon-propelled chemicals. These can generate electrical charges sufficient to damage ES devices.
6. Do not remove a replacement ES device from its protective package until immediately before you are ready to install it. (Most replacement ES devices are packaged with leads electrically shorted together by conductive foam, aluminum foil or comparable conductive material).
7. Immediately before removing the protective material from the leads of a replacement ES device, touch the protective material to the chassis or circuit assembly into which the device will be installed.

Caution

Be sure no power is applied to the chassis or circuit, and observe all other safety precautions.

8. Minimize bodily motions when handling unpacked replacement ES devices. (Otherwise harmless motion such as the brushing together of your clothes fabric or the lifting of your foot from a carpeted floor can generate static electricity sufficient to damage an ES device).

IMPORTANT SAFETY NOTICE

There are special components used in this equipment which are important for safety. These parts are marked by Δ in the schematic diagrams, Exploded Views and replacement parts list. It is essential that these critical parts should be replaced with manufacturer's specified parts to prevent shock, fire, or other hazards. Do not modify the original design without permission of manufacturer.

2.2. PRECAUTION OF LASER DIODE

CAUTION:

This product utilizes a laser diode with the unit turned "on", invisible laser radiation is emitted from the pickup lens.
Wave length: 662 nm/780 nm
Maximum output radiation power from pickup: 100µ W/VDE.
Laser radiation from the pickup lens is safety level, but be sure the followings:


1. Do not disassemble the optical pickup unit, since radiation from exposed laser diode is dangerous.
2. Do not adjust the variable resistor on the pickup unit. It was already adjusted.
3. Do not look at the focus lens using optical instruments.
4. Recommend not to look at pickup lens for a long time.

ACHTUNG:


Dieses Produkt enthält eine Laserdiode.
Im eingeschalteten Zustand wird unsichtbare Laserstrahlung von der Lasereinheit ausgestrahlt.
Wellenlänge: 662 nm/780 nm
Maximale Strahlungsleistung der Lasereinheit: 100µ W/VDE.
Die Strahlung der eingeschalteten Lasereinheit ist ungefährlich, wenn folgende Punkte beachtet werden:

1. Die Lasereinheit nicht zerlegen, da die Strahlung an der freigelegten Laserdiode gefährlich ist.
2. Den werkseitig justierten Einstellregler der Lasereinheit nicht verstellen.
3. Nicht in die Fokussierlinse blicken.
4. Auch nicht mit optischen Instrumenten in die Fokussierlinse blicken.

DANGER - VISIBLE AND INVISIBLE LASER RADIATION WHEN OPEN. AVOID DIRECT EXPOSURE TO BEAM. FDA 21 CFR/1398.11(b)	
注意	— 打开时有可见及不可见激光辐射。避免光束照射。
注意	— ここを開くと可視及び不可視レーザー光が出ます。ビームを見たり、触れたりしないでください。
CAUTION - CLASS 3B VISIBLE AND INVISIBLE LASER RADIATION WHEN OPEN. AVOID EXPOSURE TO THE BEAM. (IEC9025-1 +A2/Class 3B)	
ATTENTION	— RAYONNEMENT LASER VISIBLE ET INVISIBLE, CLASSE 3B, EN CAS D'OUVERTURE. EVITER UNE EXPOSITION AU FAISCEAU.
FORSIGTIG	— SYNLIG OG USYNLIG LASERSTRÅLING KLASSE 3B, NÅR LAGET ER ÅBENT. UNNGÅ ÅT BLIVE UDSAT FOR STRÅLEN.
VARO	— AVATTAESSA OLET ALTUINA LUOKAN 3B NÄKYVÄÄ JA NÄKYMÄTÖNTÄ LASERSÄTELYÄ. VÄRÖ ALITSIUMISTA SÄTEELÄ.
VARNING	— KLASS 3B SYNLIG OCH OSYNLIG LASERSTRÅLNING NÄR DENNA DEL ÄR ÖPPNAD. UNNÅG EXPONERING FÖR STRÅLEN.
VORSICHT	— SICHTBARE UND UNSICHTBARE LASERSTRÄHLUNG KLASSE 3B, WENN ABDECKUNG GEÖFFNET. NICHT DEM STRAHL AUSSETZEN.
CAUTION - VISIBLE AND INVISIBLE LASER RADIATION WHEN OPEN. AVOID EXPOSURE TO THE BEAM. (IEC9025-1)	
ATTENTION	— RAYONNEMENT LASER VISIBLE ET INVISIBLE EN CAS D'OUVERTURE. EXPOSITION DANGEREUSE AU FAISCEAU.
ADVARSEL	— SYNLIG OG USYNLIG LASERSTRÅLING VED ÅBNING. UNNGÅ UDSÆTTELSE FOR STRÅLING.
VARO!	— AVATTAESSA OLET ALTUINA NÄKYVÄÄ JA NÄKYMÄTÖNTÄ LASERSÄTELYÄ. ÄLÄ KATSO SÄTEESEEN.
VARNING	— SYNLIG OCH OSYNLIG LASERSTRÅLNING NÄR DENNA DEL ÄR ÖPPNAD. BETRÄKTA EJ STRÅLEN.
VORSICHT	— SICHTBARE UND UNSICHTBARE LASERSTRÄHLUNG, WENN ABDECKUNG GEÖFFNET. NICHT DEM STRAHL AUSSETZEN.
ADVARSEL	— SYNLIG OG USYNLIG LASERSTRÅLING NÄR DEKSEL ÅPNES. UNNGÅ EKSPONERING FÖR STRÅLEN. VOL1J67

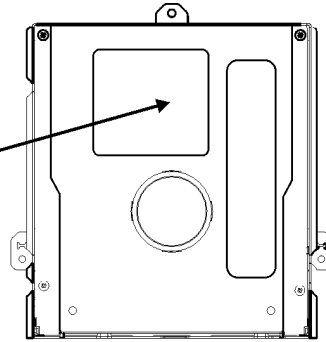

LUOKAN 1 LASERLAITE
KLASS 1 LASER APPARAT

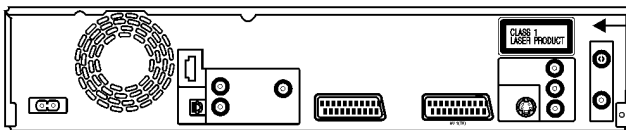

**CLASS 1
LASER PRODUCT**

CAUTION!

THIS PRODUCT UTILIZES A LASER.
USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

2.3. SERVICE CAUTION BASED ON LEGAL RESTRICTIONS

General description about lead free Solder (PbF)

- The lead free solder has been used in the mounting process of all electrical components on the printed circuit boards used for this equipment in considering the globally environmental conservation.
- The normal solder is the alloy of tin (Sn) and lead (Pb). On the other hand, the lead free solder is the alloy mainly consists of tin (Sn), silver (Ag) and Copper (Cu), and the melting point of the lead free solder is higher approx. 30 degrees C (86°F) more than that of the normal solder.

Service caution for repair work using Lead Free Solder (PbF)

- The lead free solder has to be used when repairing the equipment for which the lead free solder is used.
- To put lead free solder, it should be well molten and mixed with the original lead free solder.
- Remove the remaining lead free solder on the PCB cleanly for soldering of the new IC.
- Since the melting point of the lead free solder is higher than that of the normal lead solder, it takes the longer time to melt the lead free solder.
- Use the soldering iron (more than 70W) equipped with the temperature control after setting the temperature at 350 ± 30 degrees C (662 ± 86 °F). When soldering or unsoldering, please completely remove all of the solder on the pins or solder area and be sure to heat the soldering points with the Pb free solder until it melts enough.

Definition of PCB Lead Free Solder being used

- The letter of "PbF" is printed either foil side or component side using the lead free solder.

PbF

Recommended Lead Free Solder (Service Parts Route.)

- The following 3 types of lead free solder are available through the service parts route.
 - RFKZ03D01K----- (0.3mm 100g Reel)
 - RFKZ06D01K----- (0.6mm 100g Reel)
 - RFKZ10D01K----- (1.0mm 100g Reel)

Note

- Ingredient: tin (Sn), 96.5%, silver (Ag) 3.0%, Copper (Cu) 0.5%, Cobalt (Co) / Germanium (Ge) 0.1 to 0.3%

3 SERVICE NAVIGATION

3.1. SERVICE INFORMATION

This service manual contains technical information which will allow service personnel to understand and service these models.

Please place orders using the parts list and not the drawing reference numbers.

1. This service manual does not contain the following information, because of the impossibility of servicing at component level.

- Schematic Diagram, Block Diagram,
Exploded View, Parts List and P.C.B. layout of
RAM / Digital P.C.B. Module and Back End P.C.B. Unit

2. The following categories are recycling module part.


Please send them to Central Repair Center.

- RAM / Digital P.C.B. Module: RFKNEZ45VEB
- Back End P.C.B. Unit: REPD0031E

3. If the circuit is changed or modified, this information will be followed by supplement service manual to be filed with original service manual.

4. Adjustment procedures, Disassembly Procedures and Assembly Procedures for VCR Mechanism Chassis are separate volume from this service manual. Please refer to the service manual for R4 Mechanism Chassis for EURO model (MAD0403002C2).

4 SPECIFICATION

Power supply:	AC220-240 V, 50/60 Hz	Video input AV1 / AV2:	21 pin connector (1.0 Vp-p 75 Ω)
Power consumption:	30 W ±1,3 W Power save mode 2 W ±0,4 W	Video input AV3 / AV4:	pin jack connector (1.0 Vp-p 75 Ω)
Dimensions and Mass:	430 (W) x 351 (D) x 84 (H) mm excluding (protrusions) / 5.4 kg	S-Video input AV1 / AV2:	21 pin connector (Y: 1.0 Vp-p, C: 0.3 Vp-p 75 Ω)
Operating temperature range:	+5 to +40 °C	S-Video input AV3 / AV4:	pin jack connector (Y: 1.0 Vp-p, C: 0.3 Vp-p 75 Ω)
Operating humidity range:	35 to 80 % RH (no condensation)	RGB Video input AV3 (PAL):	21 pin connector (0.7 Vp-p 75 Ω)
Pickup Laser power:	CLASS1	DV input:	IEEE 1394 Standard 4 pin
Pickup Wave length:	DVD 662 nm / CD 780 nm No hazardous radiation is emitted with the safety protection	Video output AV1 / AV2:	21 pin connector (1.0 Vp-p 75 Ω)
Recording format Heads	VHS Video Cassette System Standard with FM audio NTSC (only from extern and DVD) 4 Helical Scan Heads for Video 2 Helical Scan Heads for FM audio 1 Fixed Head for Normal audio	FBAS Video output (composit):	pin jack connector (1.0 Vp-p 75 Ω)
Recording system:	MPEG2 (Hybrid VBR) Audio: Dolby Digital 2CH	S-Video output AV1:	21 pin connector (1.0 Vp-p 75 Ω)
Signal system:	PAL 625/50, NTSC 525/60	S-Video output (cinch):	pin jack connector (1.0 Vp-p 75 Ω)
DVD Region number:	Region No. 2	S-Video output:	S connector (1.0 Vp-p 75 Ω)
DVD Recording / Playable discs:	DVD-RAM (12 cm 4.7 GB) DVD-RAM (12 cm 9.4 GB) DVD-RAM (8 cm 2.8 GB) DVD-R (12 cm 4.7 GB) DVD-R (8 cm 1.4 GB) DVD-RW (12 cm 4.7GB) DVD+R (12 cm 4.7 GB) DVD+RW (12 cm 4.7 GB) DVD-R DL (12 cm 8.5 GB) DVD+R DL (12 cm 8.5 GB)	RGB Video output AV1:	21 pin connector (0.7 Vp-p 75 Ω)
DVD approximate Recording time:	XP: 10 MBps (60 min) SP: 5 MBps (120 min) LP: 3 MBps (240 min) EP: 1.7 / 1.2 MBps (360 - 480 min)	Component Video output:	Y pin jack (1.0 Vp-p 75 Ω) PB pin jack (0.7 Vp-p 75 Ω) PR pin jack (0.7 Vp-p 75 Ω)
Additional playable discs:	DVD-RAM (VR format) DVD-RW (VR format) DVD-R (MP3, JPG) DVD-R DL, DVD+R DL DVD-Video, DVD-Audio CD-Audio (CD-DA), Video CD SVCD (IEC62107) CD-R, CD-RW (CD-DA, MP3, JPG, VCD)	HDMI output (19 pin type A):	Version 1.2a (EDID Vers. 1.3)
TV tuner system (PAL):	UHF: CH21-CH68 (analog/DVB-T)	Audio input AV1 / AV2:	21 pin connector (-6 dBV 500 mV)
RF Converter Output:	not provided	Audio input AV3 / AV4:	pin jack (-6 dBV 500 mV)
SD Card Slot:	JPEG (Still Picture DCF Standard) TIFF (uncompressed) MPEG2 (rec. by Panasonic cam)	Audio output (cinch):	pin jack (-6 dBV 500 mV)
Compatible Cards:	SD Card, Multimedia Card miniSD™ Card (with adapter)	Optical output:	PCM, Dolby Digital, DTS, MPEG
Card format:	FAT12, FAT16	Videotape speed and Recording time (PAL/SECAM 240 min. tape):	
Card picture pixels:	34x34 to 6144x4096	SP:	23.39 mm/s, 240 min.
		LP:	11.695 mm/s, 480 min.
		EP:	7.796 mm/s, 720 min.
		FF/REW time:	60 sec. (180 min. tape)
		Videotape speed and Recording time (NTSC 240 min. tape):	
		SP:	33.35 mm/s, 168 min.
		EP:	11.12 mm/s, 505 min.
		Winding Speed (180 min. tape):	FF time approximate 60 sec. REW time approximate 43 sec.
		Note:	
		Specifications are subject to change without notice.	
		Mass and dimensions are approximate.	
		■ Build-in decoders: You can play discs with following symbols	
			

5 LOCATION OF CONTROLS AND COMPONENTS

Remote Control

DVD/VHS



Stand-by/on switch

Press to switch the unit from on to stand-by mode or vice versa. In stand-by mode, the unit is still consuming a small amount of power.

Switching this unit into standby mode does not disconnect it from the mains.



Select the HDD, DVD or SD drive.



Direction buttons in the menu guide.
Select groups or titles.

ENTER: Select or save a setting.

◀▶ Still picture or slow motion playback.



Display the programme information from the TV GUIDE or the Banner.

PROG/CHECK



Check / Change a Timer recording.

SUB MENU



Launch DVD sub menus.

RETURN



Return to the previous menu.

VIDEO Plus+



VIDEO Plus+ menu



Search or slow motion playback.

REW: VHS Jet Rewind and Rewind Search
FF: VHS Forward Search



Stops recording, replay or forward / reverse action
Hold more than 3 seconds to eject the VHS tape.



Pause a recording or playback.
Hold more than 2 seconds for VHS slow-motion playback.



Start the recording.

REC MODE



Record mode button XP, SP, LP, EP

EXT LINK



Record with external recording control.

DIRECT TV REC



Direct TV recording.



Launch the MHEG Service.



Displays subtitles



Launch the disc menus.

TV



Turn the television set on and off.



Select the AV input on the television set.



CH: Select the channel on the television set.



VOLUME: Volume control of the television set.

TRACKING/V-LOCK/PAUSE



CH: Select the channel on the Recorder.

PAGE: Scroll in the electronic TV Guide.

TRACKING / V-LOCK: Optimise the VHS playback picture.

1

2

3

Number buttons - direct input

4

5

6

VCD 5: 0 5 15: 1 5

7

8

9

JPEG MP3 5: 0 0 5 15: 0 1 5

0

JPEG 5: 0 0 0 5 15: 0 0 1 5

GUIDE: Launch the TV Guide menu.

DIRECT NAVIGATOR: title view

TOP MENU: Main menu of DVD-video.

FUNCTION selection menu.



Cancel a function.



Reset the VHS tape counter.



Switch button of the AV input between AV1, AV2
AV3 (front), AV4 and DV in.



Delete a title.



Starts playback.

RAM - You can increase the playback speed

Hold PLAY during playback.

VHS - Playback or continuous playback



SKIP: Skip chapters, titles, or pictures.

INDEX: Find the beginning of a VHS recording.



Menu guide (red button): Profile, GUIDE, MHEG, Manual Tuning



Menu guide (green button): Profile, GUIDE, MHEG



Menu guide (yellow button): Profile, GUIDE, MHEG

CREATE CHAPTER: Dividing a recording into chapters.



Menu guide (blue button): Profile, GUIDE


MANUAL SKIP: Jump forwards 30 seconds.



Select the time frame.



Jet rewind to the beginning of the VHS tape.

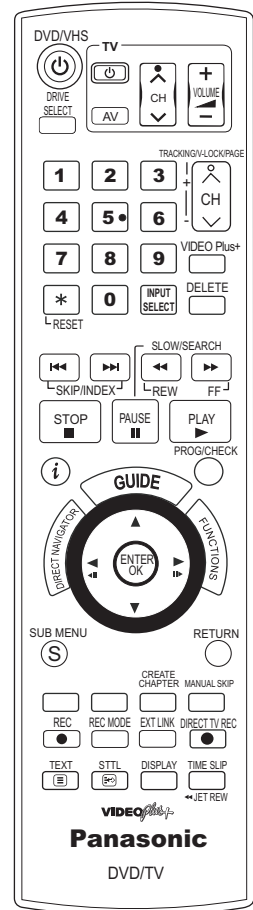

6 OPERATING INSTRUCTIONS

6.1. (DVD) TAKING OUT THE DISC FROM RAM-DRIVE UNIT WHEN THE DISC CANNOT BE EJECTED BY OPEN/CLOSE BUTTON

6.1.1. (DVD) FORCIBLE DISC EJECT

6.1.1.1. (DVD) WHEN THE POWER CAN BE TURNED OFF.


1. Turn off the power and press [STOP], [CH UP] keys on the front panel simultaneously for 5 seconds.

6.1.1.2. (DVD) THE POWER CAN NOT BE TURNED OFF.


1. Press [POWER] key on the front panel for over 10 seconds to turn off the power forcibly and press [STOP] [CH UP] keys on the front panel simultaneously for 5 seconds.

6.1.2. (DVD) WHEN THE FORCIBLE DISC EJECT CAN NOT BE DONE.

1. Turn off the power and pull out AC cord.
2. Remove the Top Case.
3. Push in SLIDE CAM by Eject Pin (JZS0484) or minus screw driver (small) to eject tray slightly.

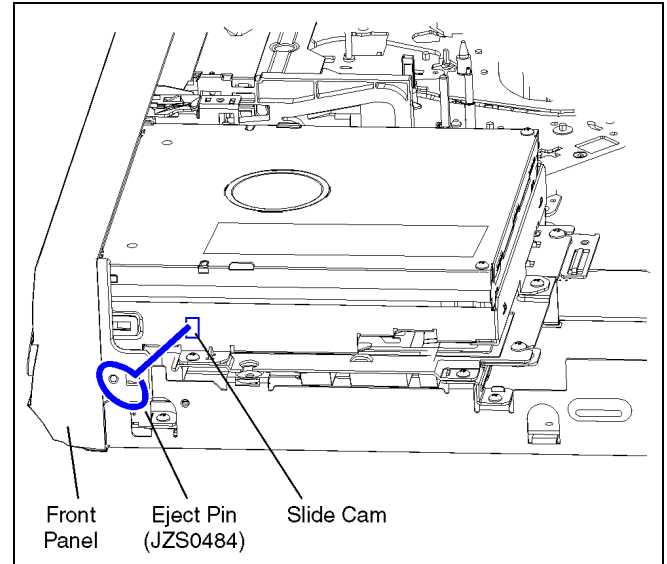

4. Push out Tray by Eject Pin (JZS0484) or minus screw driver (small).

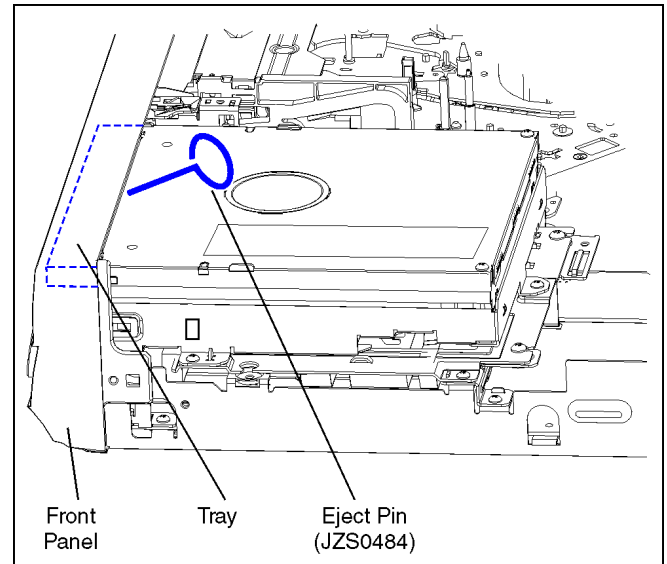

6.2. (VHS) REMOVING OF CASSETTE TAPE

When the cassette tape could not be removed after an electrical malfunction, there are 2 ways to remove a cassette tape.

6.2.1. (VHS) REMOVAL BY COMPULSORY UNLOADING.

If Service Mode can be activated when the power can not be turned on, this operation is able.


1. Press [STOP] and [EJECT] button simultaneously for more than 3 seconds and set Drive to [VHS] and set the Service Mode to 7.
2. Press [STOP] button in order to unload the mechanism. (Pay attention to tape slack)

Service Mode Display:

7 ** *(STOP) → 7 0L ** (EJECT)


6.2.2. (VHS) REMOVAL BY MANUAL OPERATION.

1. Disconnect the AC plug, and remove the Top Panel and the Front Panel by referring to the Disassembly Procedures.
2. Connect a batterie (9V spec.) to the Loading Motor in series for supplying 9V to rotate the Loading Motor.

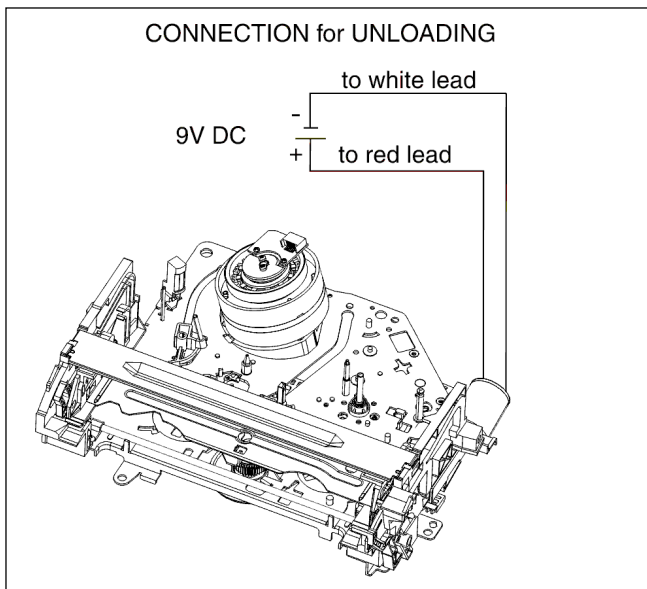


3. Stop unloading just before unloading will be completed. The tape becomes slack.

4. Rotate the S-Reel by a small minus screwdriver to remove the slack tape.

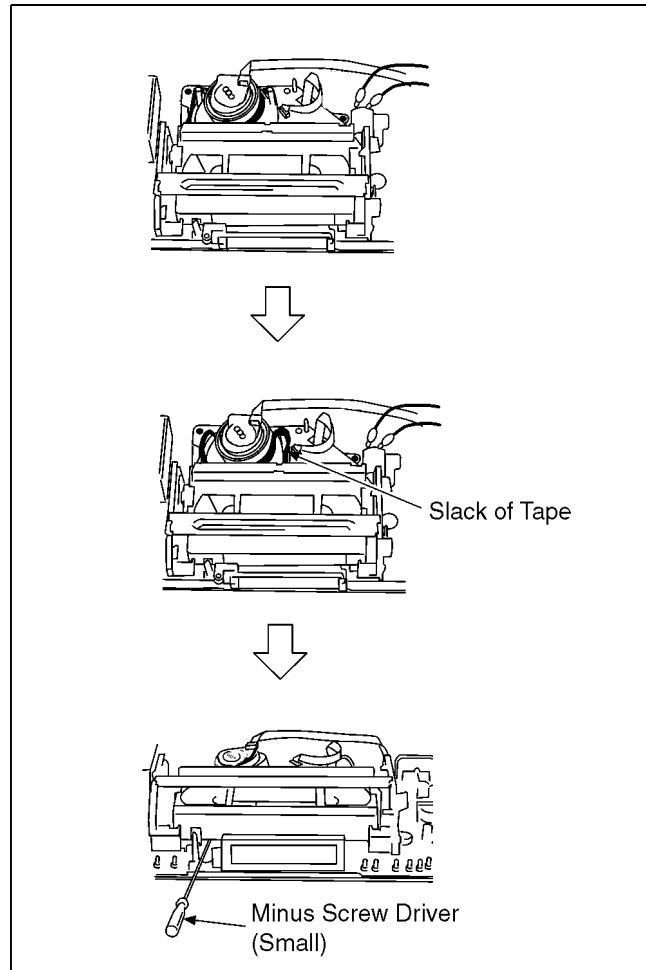


5. Then unload again to remove the cassette tape.

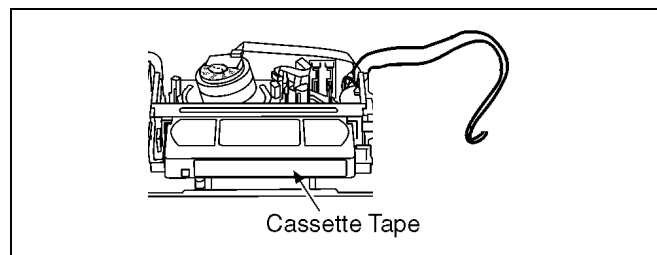


6.2.3. (VHS) TAKE OUT CASSETTE TAPE MANUALLY AFTER REMOVING THE MECHANISM

1. Disconnect the AC plug, and remove the Top Panel, Front Panel and the Mechanism by referring assembling and disassembling description.

2. Remove the Screw and remove the Loading Motor.

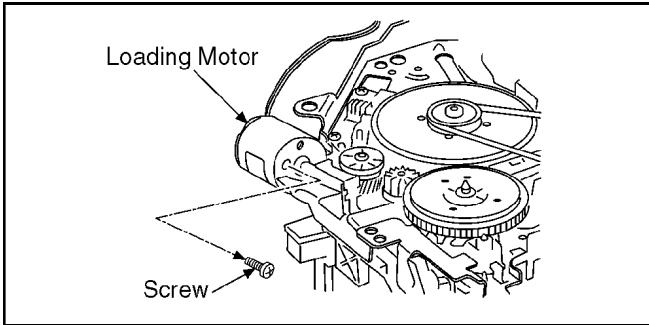


3. Rotate the Main Cam Gear counter-clockwise until just before the unloading will be completed.

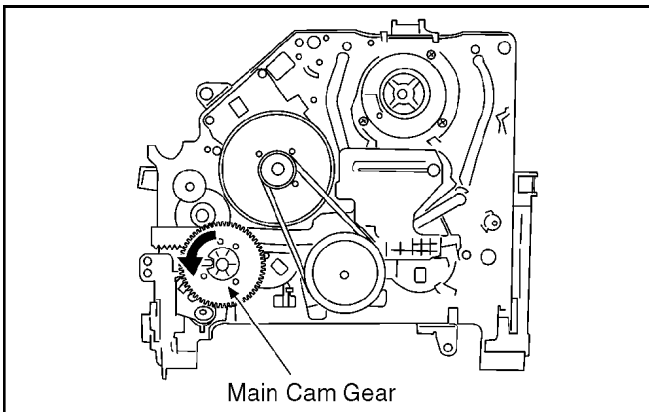


4. Rotate the Capstan Motor clockwise to remove the slack tape.

5. Rotate the Main Cam Gear counter-clockwise again to remove the cassette-tape.

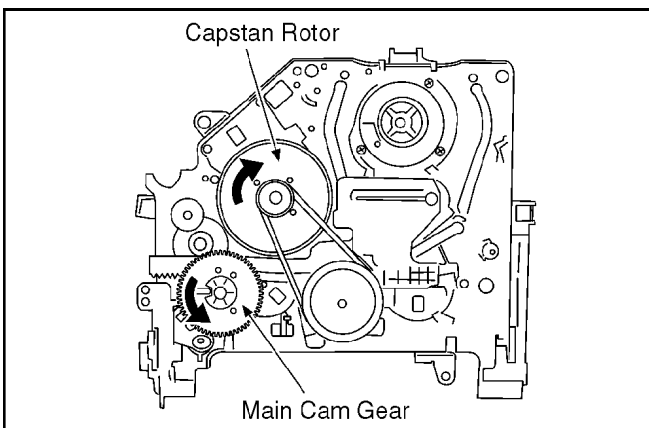

6. Attach Loading Motor and tighten the screw.

7. Set the Position Switch to EJECT POSITION certainly and attach the mechanism to chassis.

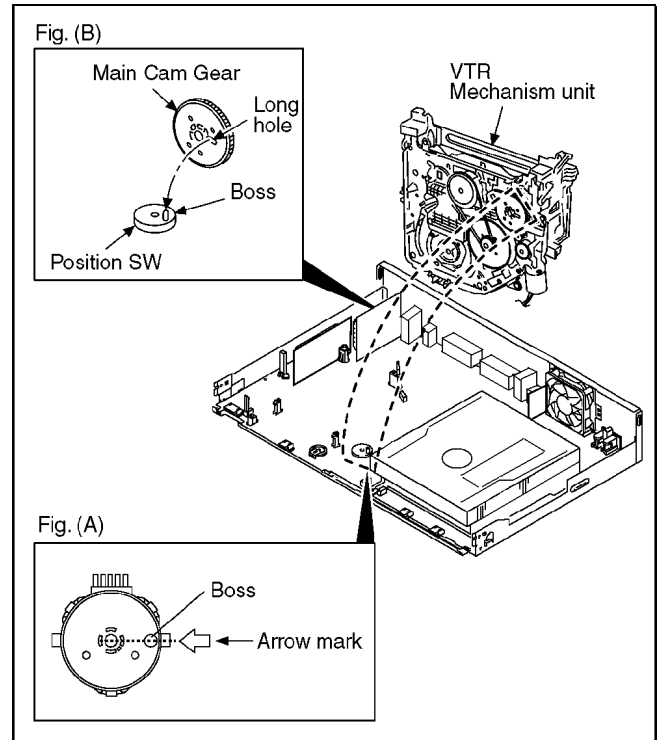

7 SERVICE MODE

7.1. (DVD) SELF-DIAGNOSIS AND SPECIAL MODE SETTING

7.1.1. (DVD) SELF-DIAGNOSIS FUNCTIONS

Self-Diagnosis Function provides information for errors to service personnel by "Self-Diagnosis Display" when any error has occurred.

U**, **H**** and **F**** are stored in memory and held.

You can check latest error code by transmitting [0] [1] of Remote Controller in Service Mode.

Automatic Display on FL will be cancelled when the power is turned off or AC input is turned off during self-diagnosis display is ON.

Error Code	Diagnosis contents	Description	Monitor Display	Automatic FL display
U30	Remote control code error	Display appears when main unit and remote controller codes are not matched.	No display	<div style="border: 1px solid black; padding: 5px; text-align: center;">DVD *</div> <p>*** is remote controller code of the main unit. Display for 5 seconds.</p>
U59	Abnormal inner temperature detected	Display appears when the drive temperature exceeds 70°C. The power is turned off forcibly. For 30 minutes after this, all key entries are disabled. (Fan motor operates at the highest speed for the first 5 minutes. For the remaining 25 minutes, fan motor is also stopped.) The event is saved in memory as well.	No display	<div style="border: 1px solid black; padding: 5px; text-align: center;">U59</div> <p>"U59" is displayed for 30 minutes.</p>
U61	The unit is carrying out its recovery process (with no disc in the disc tray).	* The unit detected an error while recording or playing with with no disc in the disc tray . The unit is carrying out its recovery process. This process restores the unit to normal operation. The unit is not broken. Wait until the message disappears.	No display	<div style="border: 1px solid black; padding: 5px; text-align: center;">U61</div>
U71	HDMI incompatible error(HDCP incompatible)	Display this error when the equipment (compatible with DVI such as TV, amplifier etc.) connected to the unit by HDMI is incompatible with HDCP. *HDCP=High-bandwidth Digital Content Protection.	No display	<div style="border: 1px solid black; padding: 5px; text-align: center;">U71</div>
U72	HDMI connection error (communication error)	This error is displayed when there are any communication problems with the unit and the equipments (TV, amplifier etc.) connected to the unit by HDMI. (or when there is a problem with the HDMI cable).	No display	<div style="border: 1px solid black; padding: 5px; text-align: center;">U72</div> <p>"U72" display disappears when error has been solved by Power OFF/ON of connecting equipment or by inserting/removing of HDMI cable.</p>
U73	HDMI connection error (authentication error)	When authentication error occurs while the equipments (TV, amplifier etc.) are connected by HDMI. (or when there is a problem with the HDMI cable).	No display	<div style="border: 1px solid black; padding: 5px; text-align: center;">U73</div> <p>"U73" display disappears when error has been solved by Power OFF/ON of connecting equipment or by inserting/removing of HDMI cable.</p>
U80	ST Microprocessor Communication Error on Timer Bus	Displayed appears when ST Microprocessor Communication Error on Timer Bus occurs.	No display	<div style="border: 1px solid black; padding: 5px; text-align: center;">U80</div> <p>"U80" is displayed till Power Key is pressed.</p>
U81	ST Microprocessor Communication Error on UART	Displayed appears when ST Microprocessor Communication Error on UART occurs.	No display	<div style="border: 1px solid black; padding: 5px; text-align: center;">U81</div> <p>"U81" is displayed till Power Key is pressed.</p>

Error Code	Diagnosis contents	Description	Monitor Display	Automatic FL display
U88	The unit is carrying out its recovery process (with no disc in the disc tray).	* The unit detected an error while recording or playing with with no disc in the disc tray . The unit is carrying out its recovery process. This process restores the unit to normal operation. The unit is not broken. Wait until the message disappears.	No display	<div style="border: 1px solid black; padding: 5px; text-align: center;">U88</div>
U99	Hang-up	Displayed when communication error has occurred between Main microprocessor and Timer microprocessor.	No display	<div style="border: 1px solid black; padding: 5px; text-align: center;">U99</div> Displayed is left until the [POWER] key is pressed.
F00	No error information	Initial setting for error code in memory (Error code Initialization is possible with error code initialization and main unit initialization.)	No display	No display
F58	Drive hardware error	When drive unit error is detected, the event is saved in memory.	No display	No display
F34	Initialization error when main microprocessor is started up for program recording	When initialization error is detected after starting up main microprocessor for program recording, the power is turned off automatically. The event is saved in memory.	No display	No display
UN-SUPPORT	Unsupported disc error	*An unsupported format disc was played, although the drive starts normally. *The data format is not supported, although the media type is supported. *Exceptionally in case of the disc is dirty.	"This disc is incompatible."	<div style="border: 1px solid black; padding: 5px; text-align: center;">UNSUP</div> ↓ <div style="border: 1px solid black; padding: 5px; text-align: center;">PORT</div> Display for 5 seconds.
NO READ	Disc read error	*A disc is flawed or dirty. *A poor quality failed to start. *The track information could not be read.	"Cannot read. Please check the disc."	<div style="border: 1px solid black; padding: 5px; text-align: center;">NOREAD</div>
HARD ERR	Drive error	The drive detected a hard error.	"DVD drive error."	Display for 5 seconds. <div style="border: 1px solid black; padding: 5px; text-align: center;">HARD</div> ↓ <div style="border: 1px solid black; padding: 5px; text-align: center;">ERR</div>
SELF CHECK	Restoration operation	Since the power cord fell out during a power failure or operation, it is under restoration operation. *It will OK, if a display disappears automatically. If a display does not disappear, there is the possibility that defective Digital P.C.B. / RAM drive.	No display	<div style="border: 1px solid black; padding: 5px; text-align: center;">SELF</div> ↓ <div style="border: 1px solid black; padding: 5px; text-align: center;">CHECK</div>
PLEASE WAIT	Unit is in termination process	Unit is in termination process now. "BYE" is displayed and power will be turned off. In case "Quick Start" of setup menu is ON, it is displayed in restoration operation for AC off.	No display	<div style="border: 1px solid black; padding: 5px; text-align: center;">PLEASE</div> ↓ <div style="border: 1px solid black; padding: 5px; text-align: center;">WAIT</div>

Error Code	Diagnosis contents	Description	Monitor Display	Automatic FL display
UN-FORMAT	Unformatted disc error	You have inserted an unformatted DVD-RAM or DVD-RW that is unformatted or recorded on other equipment.	Format: This disc is not formatted properly. Format the disc in DISK MANAGEMENT?	<div style="border: 1px solid black; padding: 5px; text-align: center;">UNFOR</div> <div style="text-align: center;">↓</div> <div style="border: 1px solid black; padding: 5px; text-align: center;">MAT</div>
IR ERR	IR communication error	[IR ERR] is display when communication between Timer microprocessor and IR microprocessor fails.	No display	<div style="border: 1px solid black; padding: 5px; text-align: center;">IR ERR</div>
No REC	Recording is impossible	[No REC] is displayed when recording is impossible due to the defect, dirt or wound of media.	No display	<div style="border: 1px solid black; padding: 5px; text-align: center;">NOREC</div>




7.1.2. SPECIAL MODES SETTING













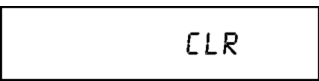
Item		FL display	Key operation
Mode name	Description		Front Key
TEST Mode	*All the main unit's parameters (include tuner) are initialized.	T M R V 1	Press [VHS to DVD COPYING], [REC] and [OPEN/CLOSE] keys simultaneously for five seconds when power is off.
Rating password	The audiovisual level setting password is initialized to "Level 8".	I N I T	Open the tray, and press [REC] and [PLAY] simultaneously for 5 seconds.
Service Mode	Setting every kind of modes for servicing. *Details are described in "Service Mode".	S E R V	When the power is off, press [STOP], [OPEN/CLOSE] and [VHS to DVD COPYING] keys simultaneously for 5 seconds.
Forced disc eject	Removing a disc that cannot be ejected. The tray will open and unit will shift to P-off mode. *When Timer REC is ON or EXT-LINK is ON, execute " Forced disc eject " after releasing Timer REC or EXT-LINK. *This command is not effective during "Child lock" is ON. While Demonstration Lock is being set, this Forced disc eject function is not accepted. If this command was executed while TIMER REC is being set, TIMER REC setting will turn to OFF.	The display before execution leaves. *****	When the power is off, press [STOP] and [CH UP] keys simultaneously for 5 seconds.
Child lock/unlock	Set or release "Child Lock".	X H O L D	Press [ENTER] and [RETURN] by remote controller simultaneously until [X-HOLD] is displayed.
NTSC/PAL system select	To switch PAL/NTSC alternately.	The display before execution leaves. *****	While the power is on (E-E mode), press [STOP] and [OPEN/CLOSE] simultaneously for 5 seconds.
Forced power-off	When the power button is not effective while power is ON, turn off the power forcibly. *When Timer REC is ON or EXT-LINK is ON, execute "Forced Power-off" after releasing Timer REC or EXT-LINK.	Display in P-off mode.	Press [Power] key over than 10 seconds.
Aging	Perform sequence of modes as * Aging Description shown below continually. Caution: All programs in DVD-RAM disc will be deleted because Formatting is done once in Aging process.	Display following the then mode.	When the power is ON, press [CH DOWN], [VHS to DVD COPYING] and [OPEN/CLOSE] simultaneously for over 5 seconds and less than 10 seconds. NOTE1: If Unit has not turned into Aging mode by operations shown above, execute TEST MODE once and re-execute operation shown above. (*All the main unit's parameters include tuner are initialized by TEST mode.) NOTE2: If the unit has hung-up because of pressing keys for over 10 seconds, once turn off the power, and re-execute this command. *When releasing Aging mode, press [POWER] key.

Item		FL display	Key operation
Mode name	Description		Front Key
Aging Contents (Example):			
<pre> graph LR Format --> REC --> STOP --> PLAY --> CUE --> REV --> PLAY --> PAUSE PAUSE --> SLOW --> R-SLOW --> PLAY --> STOP --> OPEN --> CLOSE CLOSE --> Format </pre>			
<p>* XP mode ... repeat twice SP mode ... repeat 4 times LP mode ... repeat 8 times EP mode ... repeat 12 times</p>			
Demonstration lock/unlock	Ejection of the disc is prohibited. The lock setting is effective until unlocking the tray and not released by "Main unit initialization" of service mode.	*When lock the tray. 	When the power is on, press [STOP] and [POWER] keys simultaneously for 5 seconds.
		"LOCK" is displayed for 3 seconds. *When unlock the tray. 	When the power is on, press [STOP] and [POWER] keys simultaneously for 5 seconds.
		"UNLOCK" is displayed for 3 seconds. *When press OPEN/CLOSE key while the tray being locked. 	Press [OPEN/CLOSE] key while the tray being locked.
ATP re-execution	Re-execute ATP.	Display at ATP executing. 	When the power is on (E-E mode), press [CH UP] and [CH DOWN] simultaneously for 5 seconds.
Progressive initialization	The progressive setting is initialized to Interlace.	The display before execution leaves. 	When the power is on (E-E mode), press [STOP] and [VHS to DVD COPYING] simultaneously for 5 seconds.




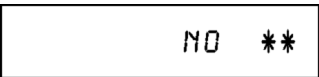



7.1.3. (DVD) SERVICE MODES




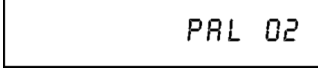
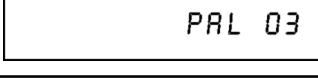
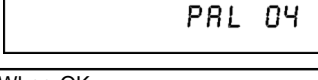
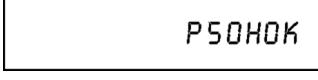
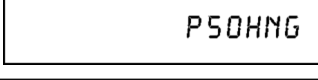
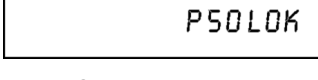
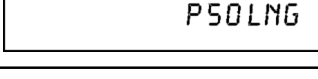
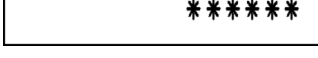
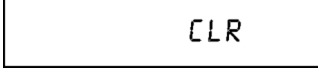
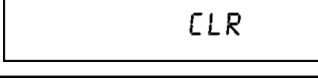
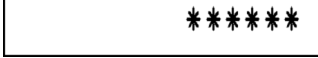
Service mode setting: While the power is off, press [STOP], [VHS to DVD COPYING] and [OPEN/CLOSE] simultaneously for five seconds.

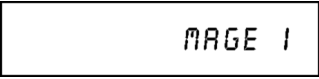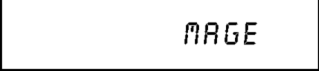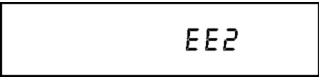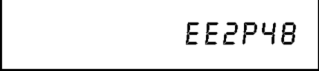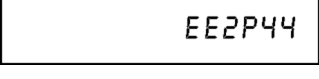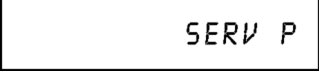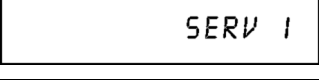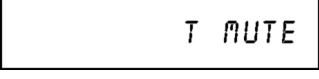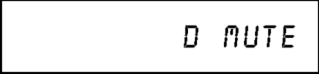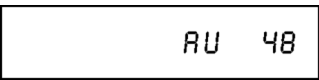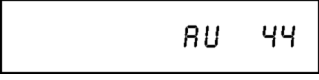Item		FL display	Key operation
Mode name	Description		(Remote controller key)
Release Items	Item of Service Mode executing is cancelled.	SERV	Press [0] [0] or [Return] in service mode.
Error Code Display	Last Error Code of U/H/F held by Timer is displayed on FL. *Details are described in "Self-Diagnosis Functions".	 *  shows U/H/F  shows number If any error history dose not exist, [F00] is displayed.	Press [0] [1] in service mode
ROM Version Display	1. Region code (displayed for 5 sec.) 2. Main firm version (displayed for 5 sec.) 3. Timer firm version (displayed for 5 sec.) 4. Drive firm version (displayed for 5 sec.) 5. ROM correction version (displayed for 5 sec.) 6. VHS Microprocessor version (displayed for 5 sec.) 7. VHS ROM Correction version (left displayed)	1. <div style="text-align: center;">NO **</div> 2. <div style="text-align: center;">*****</div> 3. <div style="text-align: center;">*****</div> 4. <div style="text-align: center;">****</div> 5. <div style="text-align: center;">***</div> 6. <div style="text-align: center;">****</div> 7. <div style="text-align: center;">**</div> " " are version displays.	Press [0] [2] in service mode
White Picture Output	White picture is output as component Output from AV Decoder. *White picture (Saturation rate : 100%) *It is enable to switch Interlace/Progressive by "I/P switch: [1] [4]"	*Initial mode is "Interlace". <div style="text-align: center;">WHIT I</div>	Press [1] [1] in service mode.
		Switch Interlace/Progressive <div style="text-align: center;">WHIT</div>	Press [1] [4] in White Picture Output mode. *I/P are switched alternately.

Mode name	Item Description	FL display	Key operation (Remote controller key)
Magenta Picture Output	Magenta picture is output with Component Output from AV Decoder. *Magenta picture (Saturation rate: 100%) *It is enable to switch Interlace/Progressive by "I/P switch: [1] [4]"	*Initial mode is "Interlace". 	Press [1] [2] in service mode.
		Switch Interlace/Progressive 	Press [1] [4] in Magenta Picture Output mode. *I/P are switched alternately.
RTSC Return in XP (A & V)	AV1 input signal is encoded (XP), decoded (XP) and output decoded signal to external without DISC recording and DISC playback.	Initial mode: EE2/ Interlace/ XP/ Audio 48kHz 	Press [1] [3] in service mode.
		Switch Interlace/Progressive 	Press [1] [4] in RTSC Return XP mode. *I/P are switched alternately.
		Audio 44.1 kHz/ 48 kHz Switch 	Press [2] [4] in RTSC Return XP mode. *48 kHz / 44.1 kHz are switched alternately.
I/P Switch	Switch Interlace and Progressive in EE mode. *Initial setting is "Interlace". *This command is effective during executing "White Picture Output", "Magenta Picture Output" and "RTSC Return in XP (A & V)" modes.	Initial mode is Interlace 	Press [1] [4] in I/P Switch mode. *I/P are switched alternately.
		Switch Interlace/Progressive 	
Audio Mute (XTMUTE)	Check whether mute is applied normally by the timer microprocessor.		Press [2] [1] in service mode.
Audio Mute (XDMUTE)	Check whether mute is applied normally by the Digital P.C.B..		Press [2] [2] in service mode.
Audio Pattern Output	The audio pattern stored in the internal memory is output (Lch: 1kHz/-18dB) (Rch: 400Hz/-18dB) *Audio sound clock switching operation of DAC can be confirmed by sub command [2] [4].	Initial mode (Audio 48kHz) 	Press [2] [3] in service mode.
		Audio 44.1kHz/48kHz switching 	Press [2] [4] in Audio Pattern Output mode. *48 kHz / 44.1 kHz are switched alternately.
Laser Used Time Indiction	Check laser used time (hours) of drive.	 ●(****) is the used time display in hour. ●Laser used time of DVD/ CD in Playback/Recording mode is counted.	Press [4] [1] in service mode.
Delete the Laser Used Time	Laser used time stored in the memory of the unit is deleted.		Press [9] [5] in service mode.

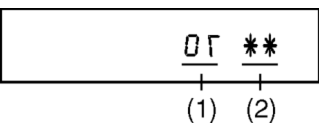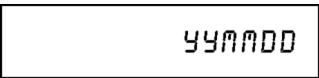
Item		FL display	Key operation (Remote controller key)															
Mode name	Description																	
RAM Drive Last Error	RAM Drive error code display. *For details about the drive error code, refer to the Service Manual for the specific RAM Drive.	<p>1. Error Number is displayed for 5 seconds.</p> <div style="border: 1px solid black; padding: 5px; text-align: center;">NO **</div> <p>2. Time when the error has occurred is displayed for 5 seconds.</p> <div style="border: 1px solid black; padding: 5px; text-align: center;">DDHHMM</div> <p>DD: Day hh: Hour mm: Minute</p> <p>3. Last Drive Error (1/2) is displayed for 5 seconds.</p> <div style="border: 1px solid black; padding: 5px; text-align: center;">*****</div> <p>4. Last Drive Error (2/2) is displayed for 5 seconds.</p> <div style="border: 1px solid black; padding: 5px; text-align: center;">*****</div> <p>5. Error occurring Disc type is displayed for 5 seconds.</p> <div style="border: 1px solid black; padding: 5px; text-align: center;">*****</div> <p>6. Disc Maker ID is displayed for 5 seconds.</p> <div style="border: 1px solid black; padding: 5px; text-align: center;">*****</div> <p>7. Factor of Drive Error occurring is left displayed</p>	<p>Press [4] [2] in service mode. When "INFO*****" is being displayed, past 19 error histories can be displayed by pressing [0] [1] - [1] [9]</p> <p>In case that the maker cannot be identified, display is black out.</p>															
Delete the Last Drive Error	Delete the Last Drive Error information stored on the DVD RAM-Drive.	<div style="border: 1px solid black; padding: 5px; text-align: center;">CLR</div>	Press [9] [6] in service mode.															
Laser power confirmation	Drive state is judged based on difference between laser power value at shipping and present laser power value.	<div style="border: 1px solid black; padding: 5px; text-align: center;">CHK *</div> <p>* is judgment result</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="width: 5%;">*</th> <th style="width: 45%;">Power value difference</th> <th style="width: 50%;">Evaluation</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>1mW or less</td> <td>Very good</td> </tr> <tr> <td>1</td> <td>2mW or less</td> <td>Good</td> </tr> <tr> <td>2</td> <td>3mW or less</td> <td>Bad</td> </tr> <tr> <td>3</td> <td>4mW or more</td> <td>Very bad</td> </tr> </tbody> </table> <p>If DVD-RAM disc in not inserted, [NO DISC] is displayed. If power value study was filed, [ERROR] is displayed.</p>	*	Power value difference	Evaluation	0	1mW or less	Very good	1	2mW or less	Good	2	3mW or less	Bad	3	4mW or more	Very bad	<p>1. Insert DVD-RAM disc into RAM Drive in service mode. (Other media are assumed to be non-correspondence.)</p> <p>2. Press [4] [4].</p>
*	Power value difference	Evaluation																
0	1mW or less	Very good																
1	2mW or less	Good																
2	3mW or less	Bad																
3	4mW or more	Very bad																
Turn on all FL/LEDs	All segments of FL and all LEDs are turned on.	All segments are turned on.	Press [5] [1] in service mode.															
PB HIGH Signal Output	8 pin of AV 1 Jack (PB HIGH terminal) is High (approx. 11V DC).	<div style="border: 1px solid black; padding: 5px; text-align: center;">PB HI</div>	Press [5] [2] in service mode.															
PB MIDDLE Signal Output	8 pin of AV 1 Jack (PB HIGH terminal) is Middle (approx. 5.5V DC)	<div style="border: 1px solid black; padding: 5px; text-align: center;">PB MID</div>	Press [5] [3] in service mode.															

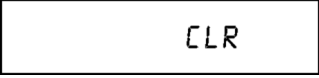Item		FL display	Key operation
Mode name	Description		(Remote controller key)
Front connection inspection	Press all front keys and check the connection between Main P.C.B. and Front key Switches.	 <p>(1) Each time a key is pressed, segment turned on increases one by one. (2) Total number of keys that have been pressed.</p>	Press [5] [4] in service mode.
Production Date Display	Display the date when the unit was produced.	 <p>YY: Year MM: Month DD: Day</p>	Press [6] [1] in service mode.
Display the accumulated working time	Display the accumulated unit's working time.	 <p>(Indicating unit: Second)</p>	Press [6] [4] in service mode.
Display the Error History	Display the Error History stored on the unit.	<p>Display reason of error for 5 seconds.</p>  <p>01: Defect of Digital P.C.B. (AV DEC / MAIN CPU) 02: Defect of RAM Drive. 03: Defect of Disc. 04: Defect of Digital P.C.B. or Communication Error. 05: Defect of Digital P.C.B. (AV DEC / MAIN CPU) 06: Defect of HDD.</p> <p>Display the time when the error has occurred for 5 seconds.</p>  <p>DD: Day hh: Hour mm: Minute Accumulated working time till occurring of the error is left displayed.</p>  <p>(Indicating unit: Second)</p>	Press [6] [5] in service mode. Then press [0] [1] ~ [1] [9], the past 19 error histories are displayed.
Delete the Error History	Delete Error History information stored on the unit.		Press [9] [7] in service mode.

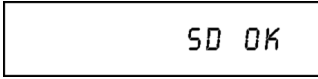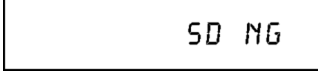Item		FL display	Key operation (Remote controller key)
Mode name	Description		
SD card WRITE check	Check SD card WRITE function with SD slot.	When the WRITE check is OK.  When the WRITE check is NG.  *Note: The image stored in the SD card will be erased.	Insert a SC card to SD card slot, and press [7] [4] in service mode. * Insert SD card while the power is off. * Check for [CARD SD] display on the FL display and go on the procedure.
AV4(V)/AV1(RGB) I/O Setting	Set input to AV4 (V) and set output to AV1 (RGB) for I/O checking		Press [8] [0] in service mode.
AV2(Y/C)/AV1(V) I/O Setting	Set input to AV2 (Y/C) and set output to AV1 (V) for I/O checking		Press [8] [1] in service mode.
AV2(V)/AV1(Y/C) I/O Setting	Set input to AV2 (V) and set output to AV1 (Y/C) for I/O checking		Press [8] [2] in service mode.
AV2(RGB)/AV1(V) I/O Setting	Set input to AV2 (RGB) and set output to AV1 (V) for I/O checking		Press [8] [3] in service mode.
P50(H) Output	Timer Microprocessor IC7504-76 output High signal for AV1-pin 10 passing through inverter (approx. 0V DC at AV1-pin 10).	When OK.  When NG. 	Press [8] [4] in service mode.
P50(L) Output	Timer Microprocessor IC7504-76 output Low signal for AV1-pin 10 passing through inverter (approx. 4.4V DC at AV1-pin 10).	When OK.  When NG. 	Press [8] [5] in service mode.
Tray OPEN/CLOSE Test	The RAM drive tray is opened and closed repeatedly.	 ** is number of open/close cycle times.	Press [9] [1] in service mode *When releasing this mode, press the [POWER] button of Remote Controller more than 10 seconds.
Error code initialization	Initialization of the last error code held by timer (Write in F00)		Press [9] [8] in service mode.
Initialize Service	Last Drive Error, Error history and Error Codes stored on the unit are initialized to factory setting.		Press [9] [9] in service mode.
Finishing service mode	Release Service Mode.	Display in STOP (E-E) mode. 	Press power button on the front panel or Remote controller in service mode.

7.2. (VHS) SELF-DIAGNOSIS AND SPECIAL MODE SETTING

7.2.1. (VHS) SPECIAL MODES SETTING

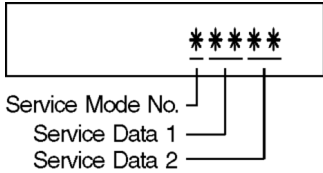Item		FL display	Key operation
Mode name	Description		Front Key
Tracking Center	Tape Tracking is adjusted to center FIX position.	No display.	During PLAYBACK, press [VHS CH UP] and [VHS CH DOWN] keys simultaneously.
VHS Service Mode	In order to make service easy, a part of inside information of a microprocessor is displayed on FIP. *Details are described in "VHS Service Mode".		Press [STOP], and [EJECT] keys simultaneously for three seconds when power is off. Set Drive to VHS.
Releasing EXT LINK & Timer Program	Releasing Continuation EXT LINK & Continuation Timer Program	No display.	While in EXT LINK or Timer REC mode, press [VHS STOP] key for 3 seconds.
Eject	Ejecting Cassette Tape	No display.	While in other than Timer REC mode, press [STOP] key for 3 seconds or press [STOP] key of the Remote Controller for 3 seconds in VHS mode.

7.2.2. (VHS) SERVICE MODES

(Service Mode Setting)

- When power is OFF, press [STOP] and [EJECT] keys simultaneously for 3 seconds to enter Service Mode and set Drive to VHS.
- In Service Mode, press [STOP] and [EJECT] keys simultaneously to add Service Number.

Service Mode Number	Contents	Contents of Indication on minute	Contents of Indication on second	Remarks
0	Indication for the inner data of IC6001	VHS mode (Real time)	Process number of the mechanism movement (Real time)	
1	Indication for the inner data of IC6001	Tape beginning and ending detection data (Real time) 00: Both tape beginning and ending have not been detected 01: Tape ending is detecting now 02: Tape beginning is detecting now 03: Both tape beginning and ending are detecting now	Key code (Real time) Indicate the receiving code when the key of VCR or remote controller being operated.	
2	Indication for the inner data of IC6001	Mechanism position (Real time) 0L: EJECT position 02: DOWN position 03: RREW position 04: LOAD position 05: REV position 06: PLAY position 07: POFF position 08: STOP_R position 09: STOP_F position 0- : FF/REW position 0_ : Intermediate between each positions	Ordering for the Motors (Real time) 0*, 2*: CYL off, CAP off 1*: CYL on, CAP on (fwd) 3*: CYL on, CAP on (rev) 8*, A*: CYL on, CAP off 9*: CYL on, CAP on (fwd) B*: CYL on, CAP on (rev) *0: Motor off *1: Loading *2: Unloading *3: Break (Load + Unload)	The following functions are prohibited to operate the mechanism without cassette tape. ●Tape beginning and ending detection. ●Reel lock detection ●Tape detection and tape position detection Press the EJECT key for over 3 seconds in this mode, and then the VCR is shifted into the special modes, such as PG Adjustment, Model Code Setting, and so on. The orders for the motors are as follows.
3	Self-diagnosis history (1st)	1st history of error number	"- -" is displayed.	
4	Self-diagnosis history (2nd)	2nd history of error number	"- -" is displayed	
5	Self-diagnosis history (3rd)	3rd history of error number	"- -" is displayed	
6	Indication for the inner data of IC6001	Servo data (4 digits) (Real time)		

Service Mode Number	Contents	Contents of Indication on minute	Contents of Indication on second	Remarks
7	Manual mechanism operation	Mechanism position (Real time) 0L: EJECT position 02: DOWN position 03: RREW position 04: LOAD position 05: REV position 06: PLAY position 07: POFF position 08: STOP_R position 09: STOP_F position 0- : FF/REW position 0_ : Intermediate between each positions	Ordering for the Motors 0*, 2*: CYL off, CAP off 1*:CYL off, CAP on (fwd) 3*: CYL off, CAPon (rev) 8*, A*: CYL on, CAP off 9*: CYL on, CAPon (fwd) B*: CYL on, CAP on (rev) *0: Motor off *1:Loading *2: Unloading *3: Break (Load + Unload)	Press the following key; PLAY key: Loading STOP key: Unloading

7.2.3. (VHS) SELF-DIAGNOSIS FUNCTIONS

This model has a self-diagnosis. If the VHS section detects trouble during installation or during use, the power is automatically turned off or become power-save mode and it is memorized into the EEPROM (IC9705) as error code of two-digit number. It's memorized error code can be displayed in "second" display portion (the last 2 digits of the FIP) by placing the unit in Service Mode Number 2 when turning on the Service Information Display as for example "01" or "02" etc. as below. If a second error occurs, the most recent error will be memorized and can be displayed in Service Mode Number 2. It can be memorized until 3 self-diagnosis histories in maximum.

In order to erase the memorized error code, press STOP and EJECT buttons on the Front Panel simultaneously over 5 seconds during turning on Service Information Display mode.

7.2.3.1. MEMORY OF THE SELF-DIAGNOSIS HISTORY

*This is effective only in Service Mode 3, 4, 5.

7.2.3.1.1. ERROR NUMBERS AT A GLANCE

Memory No. (Error Code)	Reason
01	The cylinder could not be started. (Error of the cylinder or the cylinder driver.)
02	The CAP FG could not be detected.
03	Mechanism lock during without the unloading and the cassette-up.
04	Mechanism lock during unloading
05	S-reel pulse cannot be detected during unloading. (Error of the S-reel circuit or the Capstan circuit)
06	Mechanism lock during the Cassette-up.
09	Communication error between VHS Microprocessor (IC6001) and Timer Microprocessor (IC9704).
15	S-reel pulse cannot be detected when a cassette tape is inserted. (Error of the S-reel circuit or the Capstan circuit)
16	Detection of the Cylinder lock during the constant rotation
17	Detection of S-reel lock during the constant tape running
18	Detection of T-reel lock during the constant tape running
2*	An error while the PG Automatic Adjustment
Refer to following table	
80	An exceptional ejection depends on a accidental error

Note:

2* is as follows.

20	NG1 in the PG Shifter Automatic Adjustment (The cylinder rotation is unstable during the automatic adjustment.)
21	NG2 in the PG Shifter Automatic Adjustment (The vertical sync signal is lacked while over 5 seconds on the alignment tape.)
22	NG3 in the PG Shifter Automatic Adjustment (The installing position of Heads to the cylinder is out of specification.)
23	NG4 in the PG Shifter Automatic Adjustment (The servo is not locked to the cylinder for more than 10 sec.)

7.2.3.1.2. MEMORY FOR THE SELF-DIAGNOSIS HISTORY

3. The self-diagnosis result is memorized the state of the moment of detecting.

4. There are the histories from number 1 to number 3.

5. The latest error is memorized on history number 1, and then the old histories are shifted to the history number 2 and 3.

The error code memorized in the history number 2 and 3 is over-written by shift.

4. If the latest error is the same with the history number 1 (2nd-latest), it is not memorized.

(The same error code is not memorized in succession)

7.2.3.1.3. CLEAR FOR THE SELF-DIAGNOSIS HISTORY

1. Press STOP and EJECT buttons simultaneously over 5 seconds during turning on Service Information Display mode.

7.2.3.1.4. INDICATION OF THE SELF-DIAGNOSIS HISTORY

The self-diagnosis histories can be indicated on the FIP with Service Mode number 3 to 5.

The procedure of service mode setting and indication format are the same as usual.

FIP INDICATION: 4 0 3 — —				
Hour of one-digit	Minute of two-digit	Minute of one-digit	Second of two-digit	Second of one-digit
Service mode number	Error code		—	—
3	Error code of history 1 (the latest)		—	—
4	Error code of history 2 (2nd latest)		—	—
5	Error code of history 3 (3rd latest)		—	—

The Error code of history 1, 2 and 3 can be indicated by selecting the Service mode 3, 4 and 5.
In case of no error code in the memory, it is indicated as "00".

8 SERVICE FIXTURE AND TOOLS

Part Number	Description	Pcs	Compatibility
RFKZ03D01K	Lead Free Solder (0.3 mm / 100 g Reel)	1	Same as ES15
RFKZ06D01K	Lead Free Solder (0.6 mm / 100 g Reel)	1	Same as ES15
RFKZ010D01	Lead Free Solder (1.0 mm / 100 g Reel)	1	Same as ES15
RFKZ0316	Solder Remover (Lead free 10 W temperature Solder / 180 g)	1	Same as ES15
RFKZ0328	Flux	1	Same as ES15
RFKZ0329	Bottle of Flux	1	Same as ES15
JZS0484	Eject Pin	1	Same as ES15

Part Number	Description	Pcs	Compatibility
RFKZ0240	Extension Cable (Main P.C.B. - Power & Digital I/F P.C.B. / 19 pin)	1	Same as E75V
RFKZ0327	Extension Cable (Main P.C.B. - Power & Digital I/F P.C.B. / 15 pin)	2	New
RFKZ0260	Extension Cable (Power Digital I/F P.C.B. - Digital P.C.B. / 88 pin)	1	Same as EH50 series
RFKZ0366	Extension Cable (HDMI P.C.B. - Digital P.C.B. / 40 pin / 500 mm)	1	Same as EH55 / EH56 series
RFKZ0239	Extension Cable (to Front Jack P.C.B. and FL P.C.B. / 10 pin)	4	Same as E75V


(for VHS)

Part Number	Description	Pcs	Compatibility
VFJ8125H3F	PAL VHS Alignment Tape	1	Same as E75V
VFK0329	Post Adjustment Screwdriver	1	Same as E75V
VFK0330	Fine Adjustment Gear Driver	1	Same as E75V


9 ASSEMBLING AND DISASSEMBLING

9.1. DISASSEMBLY FLOW CHART

The following chart is the procedure for disassembling the casing and inside parts for internal inspection when carrying out the servicing. To assemble the unit, reverse the steps shown in the chart below.

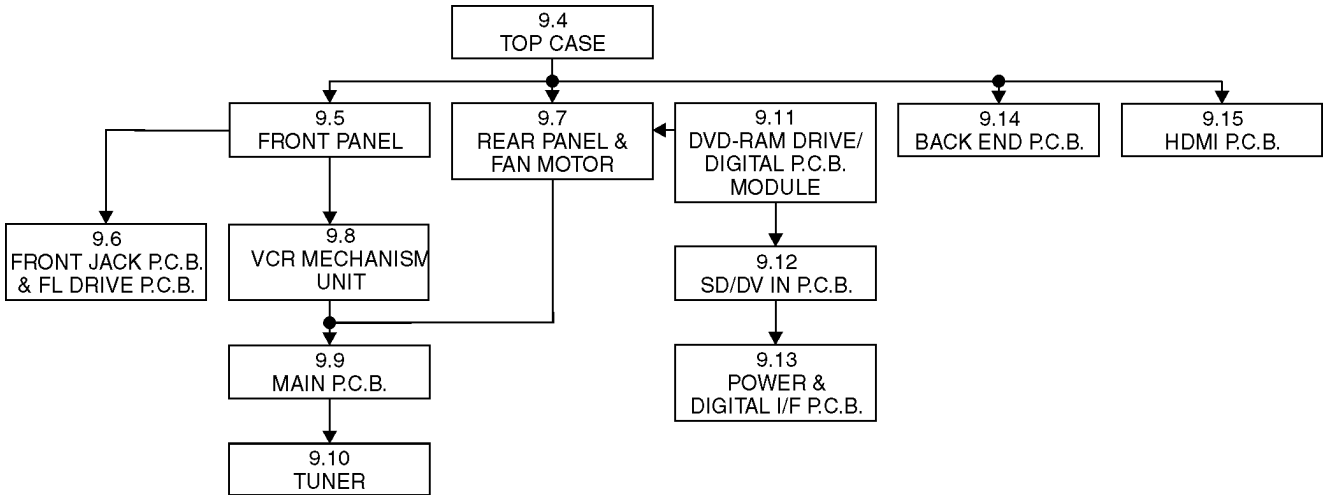


9.2. P.C.B. POSITIONS

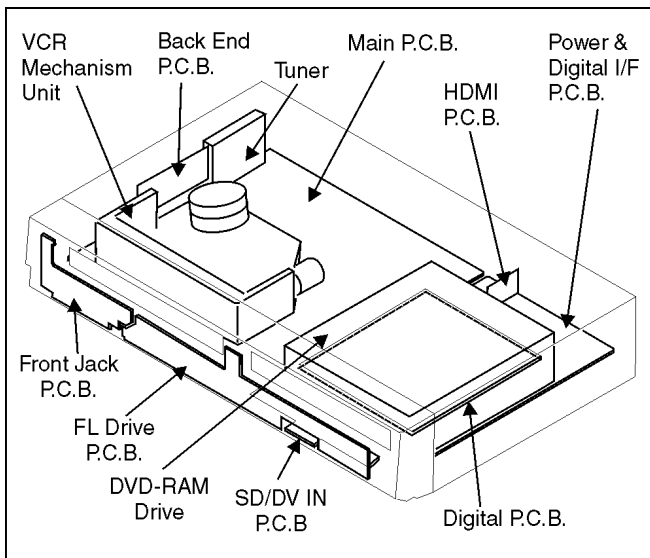

9.3. CAUTION WHILE INSERTING CASSETTE TAPE WHEN DISASSEMBLING THE UNIT


NOTE:

Video Cassette might not enter when a strong lighting is applied to VHS Mechanism when Video Cassette is inserted. Please weaken the lighting or cover with the top panel etc.

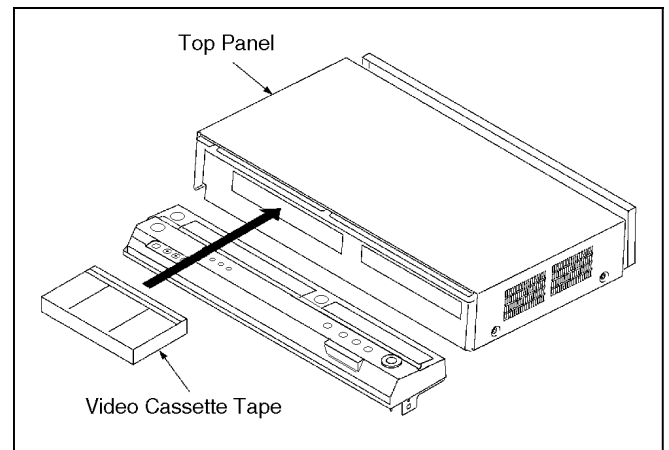


9.4. TOP CASE

1. Remove the 4 screws (A) and 3 screws (B).
2. Slide the Top Case for rear direction slightly, and open the both ends at rear side of the Top Case a little and lift up the Top Case for the direction of the arrows.

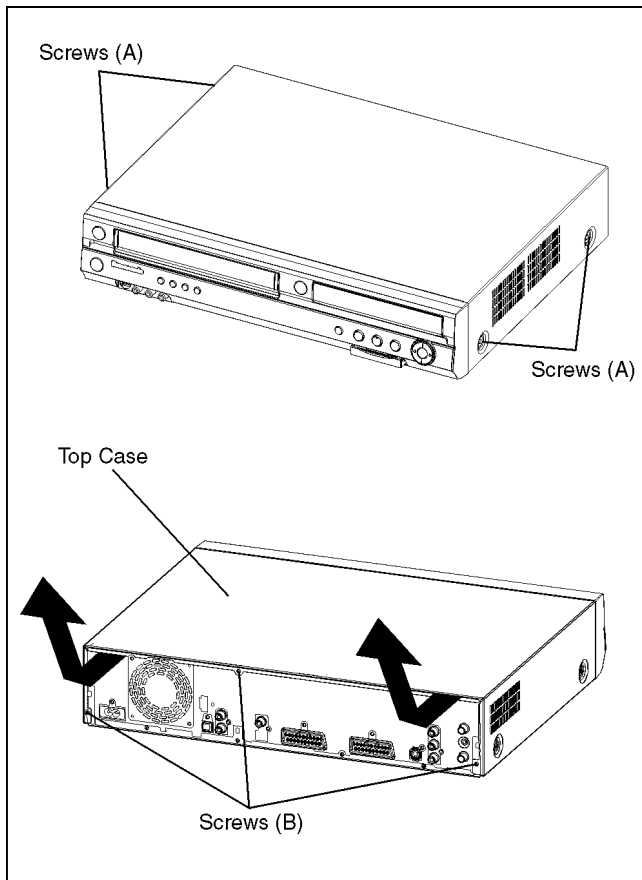


9.5. FRONT PANEL

1. Remove one screw (A).
2. Unlock tab (A) and tab (B) simultaneously.
3. Unlock tab (C) and tab (D) simultaneously.
4. Unlock 2 tabs (E) respectively and pull out Front Panel with connector slightly.

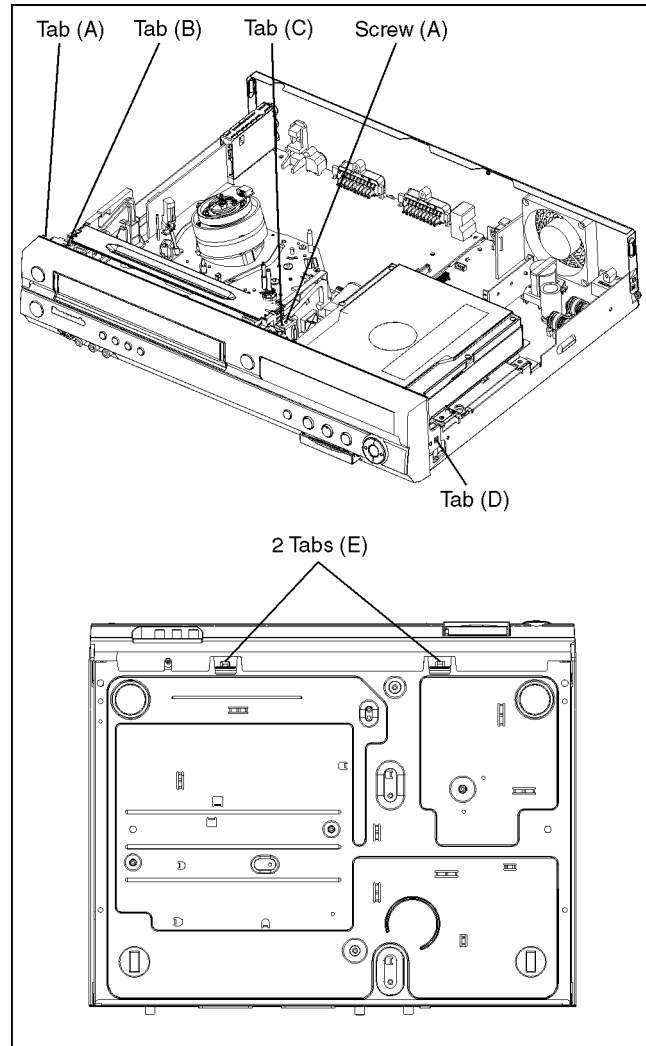


Note:

When attaching Front Panel, in order to hook Cassette Door Opener Lever to Cassette Door, push up cassette door in the direction of arrow and insert a front panel.

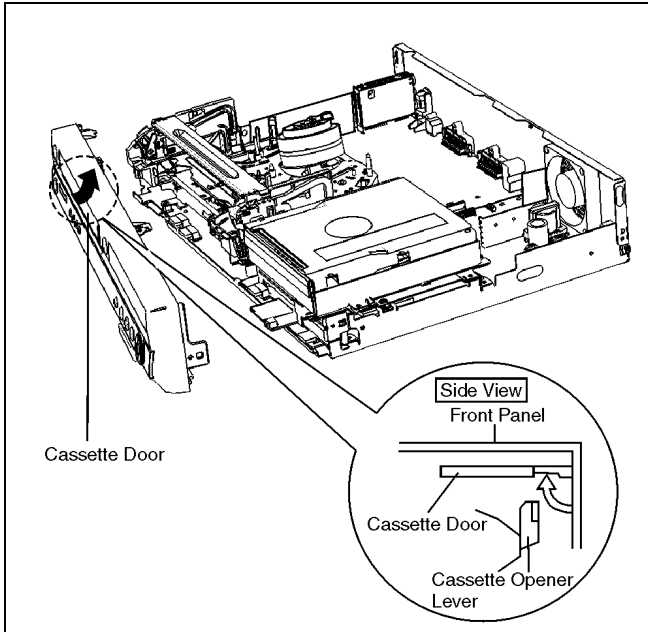


9.6. FRONT JACK P.C.B. & FL DRIVE P.C.B.

1. Remove one 6 screws (A) to remove FL Drive P.C.B.
2. Remove 3 screws (B) and unlock the Locking Tab (B) to remove Front Jack P.C.B.

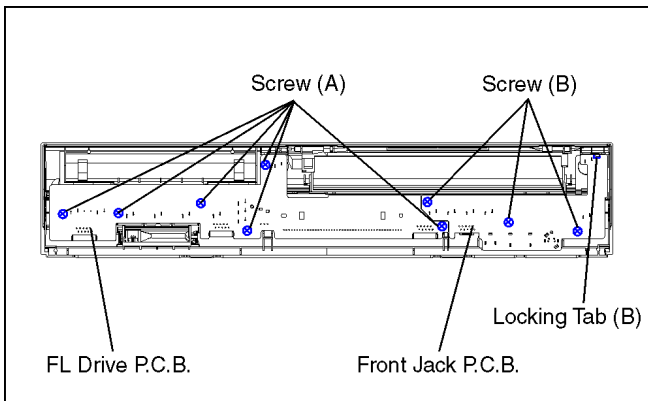


9.7. REAR PANEL & FAN MOTOR

1. Remove 10 Screws (A), Screw (B) and Fan Connector.
2. Unlock 2 Locking Tabs to remove Rear Panel with Fan Motor.
3. Attention when inserting Rear Panel:
Don't shut the Fan Cable between Rear Panel and Chassis.
Check that the Locking Tabs on both sides on the Rear Panel snap into the holes of the Chassis.

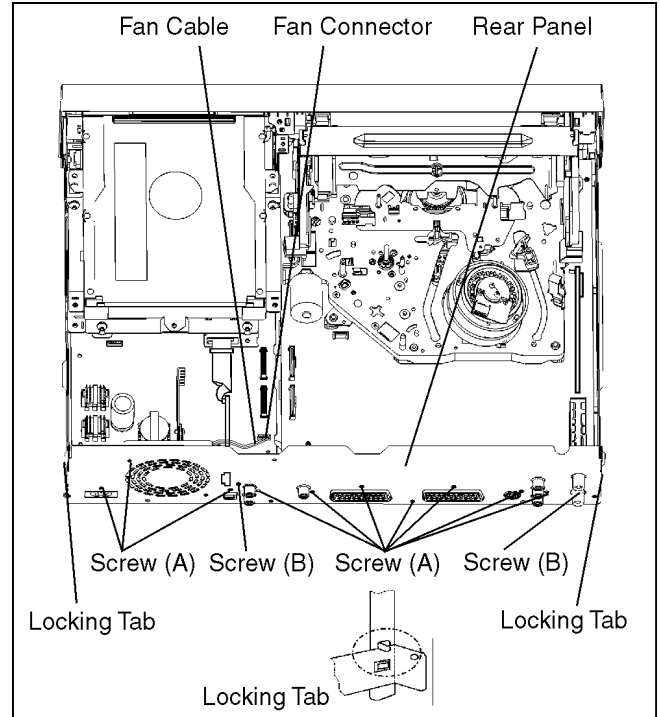

9.7.1. ONLY FAN MOTOR

1. Remove 2 Screws and Fan Connector to remove Fan Motor.

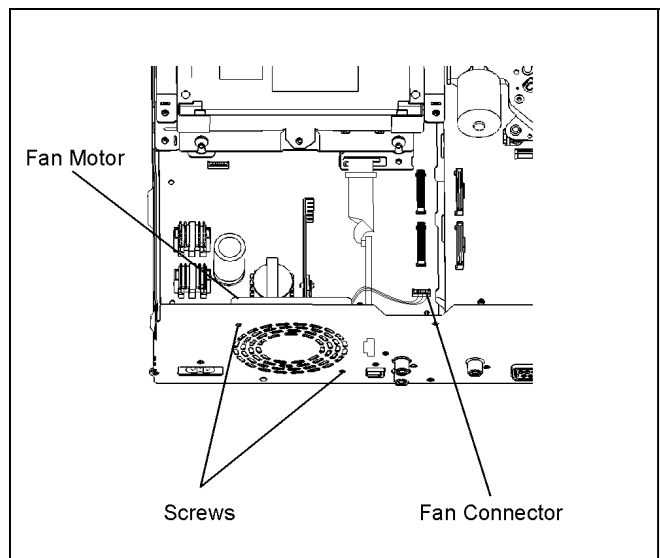


9.8. VCR MECHANISM UNIT

1. Disconnect 3 Connectors (P1531, P2501 and P4002).
2. Remove 3 black Screws (A), Screw (B), Screw (C) and Screw D).
3. Lift up VCR Mechanism Unit perpendicularly so to disconnect Connectors (P2571 and P3001).


Note:

When you lift up VCR Mechanism Unit, because connections of P2501 and P3001 are tight, pay attention to that.

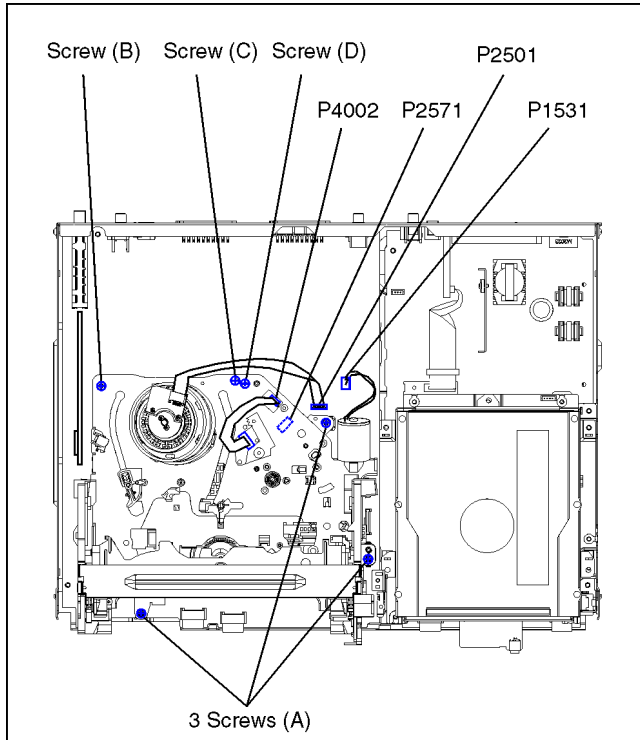


9.8.1. CAUTION FOR ATTACHING VCR MECHANISM UNIT

1. Because Position SW should be set to "Eject Position", refer to fig.(A) and set the position switch so that the boss and arrow mark come on a straight line.
2. Attach VCR Mechanism Unit so that Boss of Position SW is put into long hole of Main Cam Gear, refer to Fig. (B).

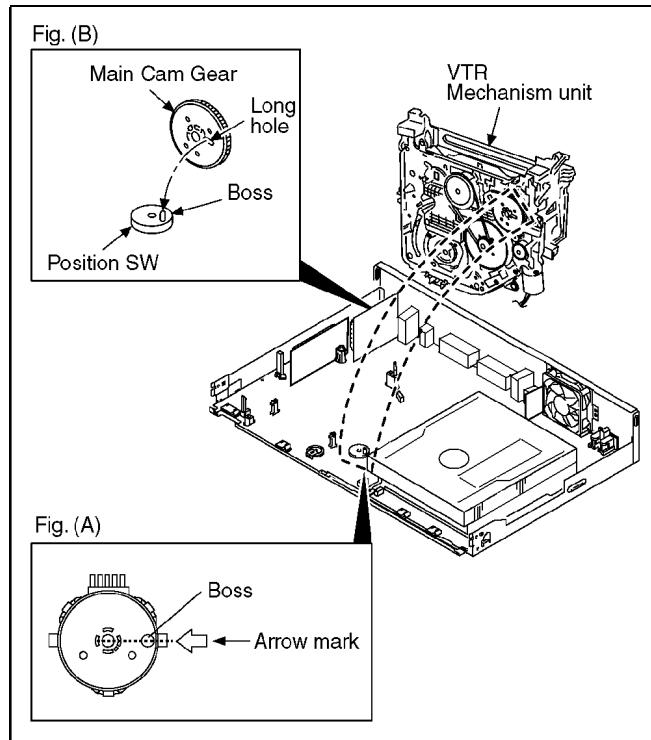


9.9. MAIN P.C.B.

1. Disconnect 3 Connectors.
2. Remove 3 Screws and remove Main P.C.B.

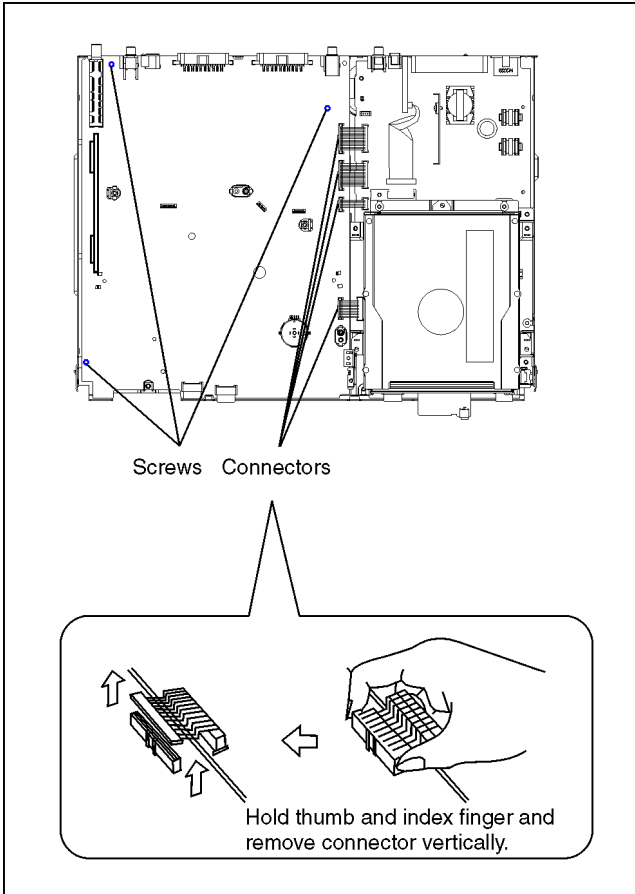

9.10. TUNER

1. Remove the solders.
2. Pull out the Tuner from Main P.C.B.

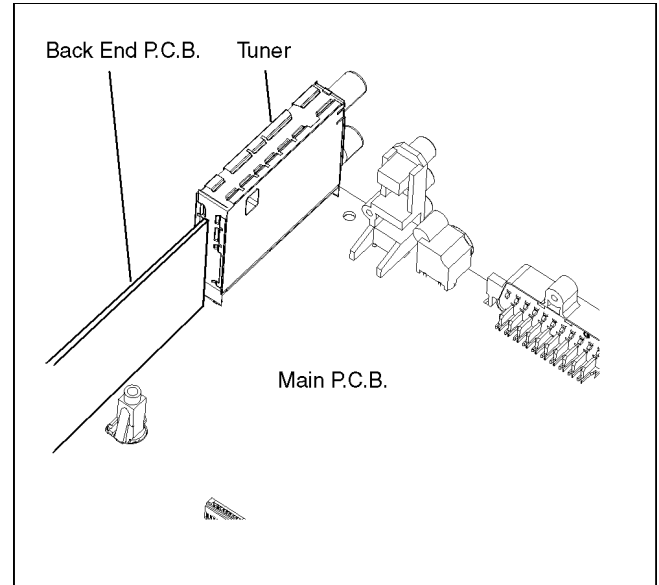


9.11. DVD-RAM DRIVE / DIGITAL P.C.B. MODULE

CAUTION:


The DVD-RAM Drive and the Digital P.C.B. have to be replaced together as one Module.

If the Module is changed the DVD-RAM Drive has to be re-aligned because the alignment data for the DVD-RAM Drive is stored in the Digital P.C.B.


1. Remove 3 Screws.
2. Lift up DVD-RAM Drive slightly.

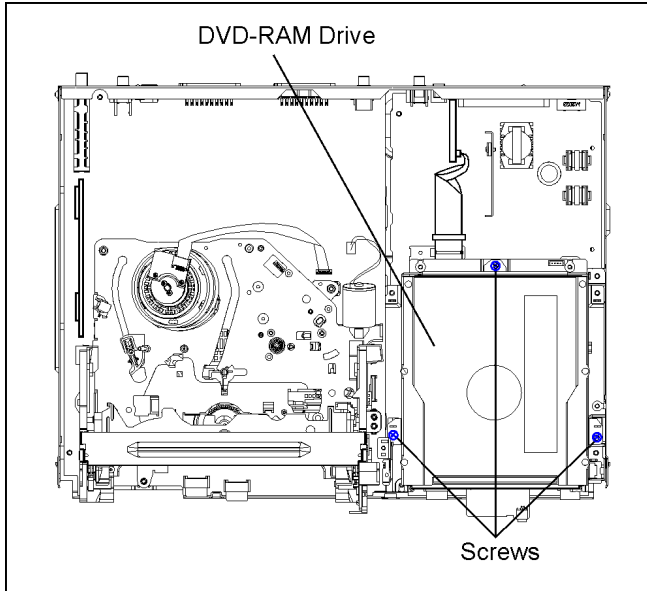

3. Disconnect FFC from Digital P.C.B.

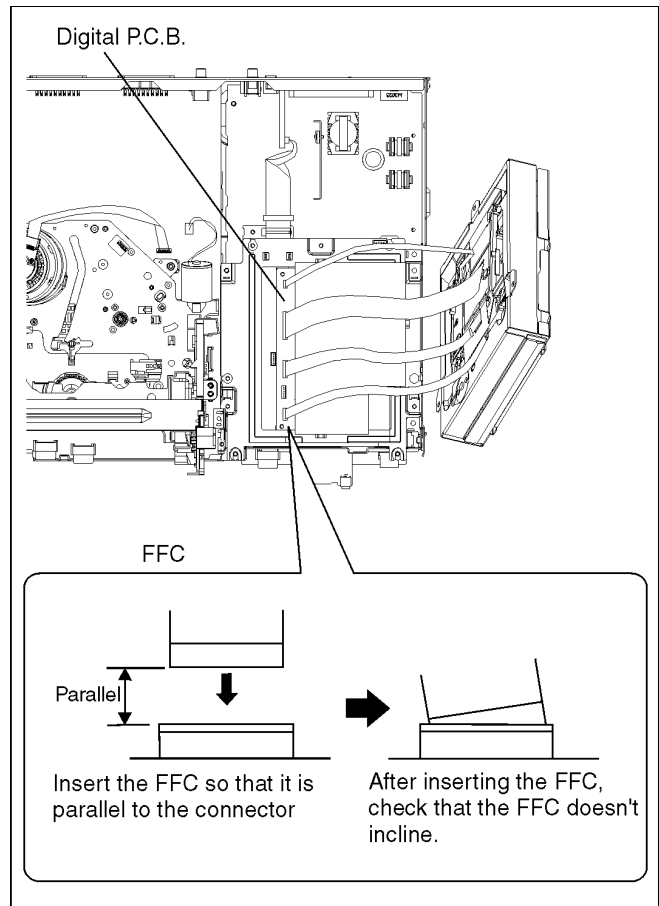



4. Remove 4 Screws and DVD Angle.

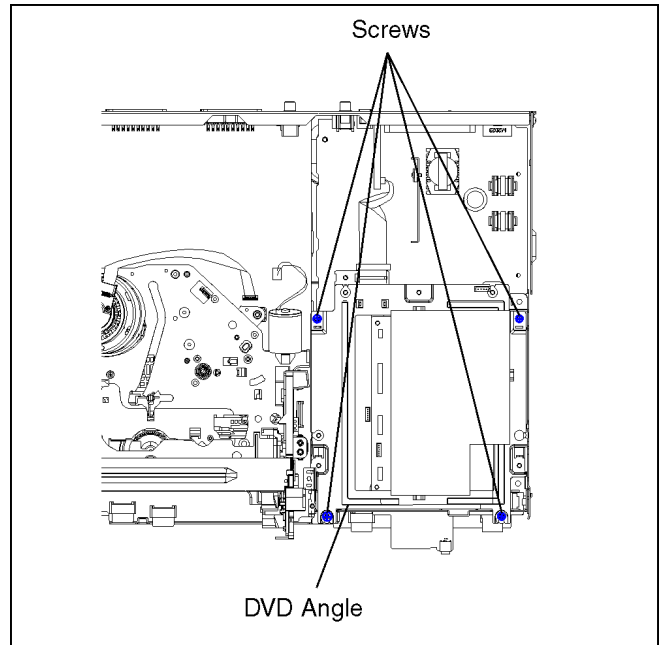

5. Disconnect FFC.
6. Remove 4 Screws from Digital P.C.B.
7. Pay attention while pulling out Digital P.C.B. to disconnect Connector (A).

9.12. SD/DV IN P.C.B.

1. Remove 2 Screws.
2. Pull out the DV IN P.C.B. backwards.

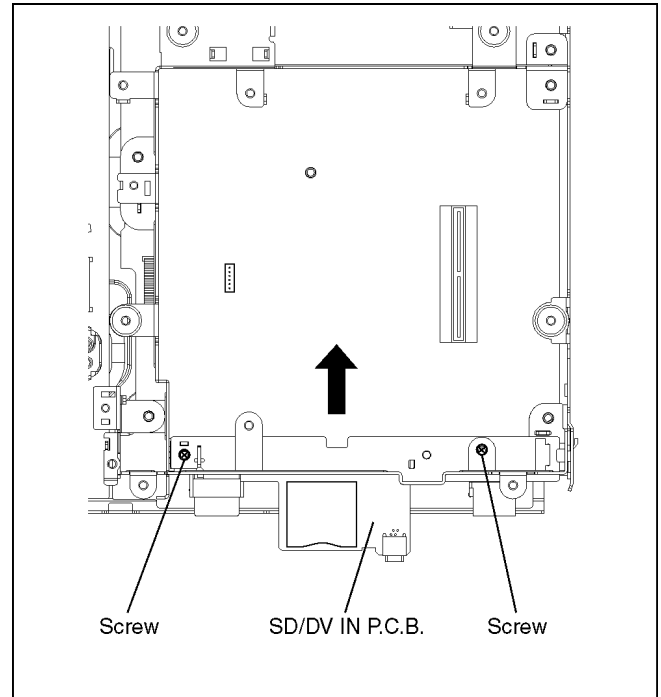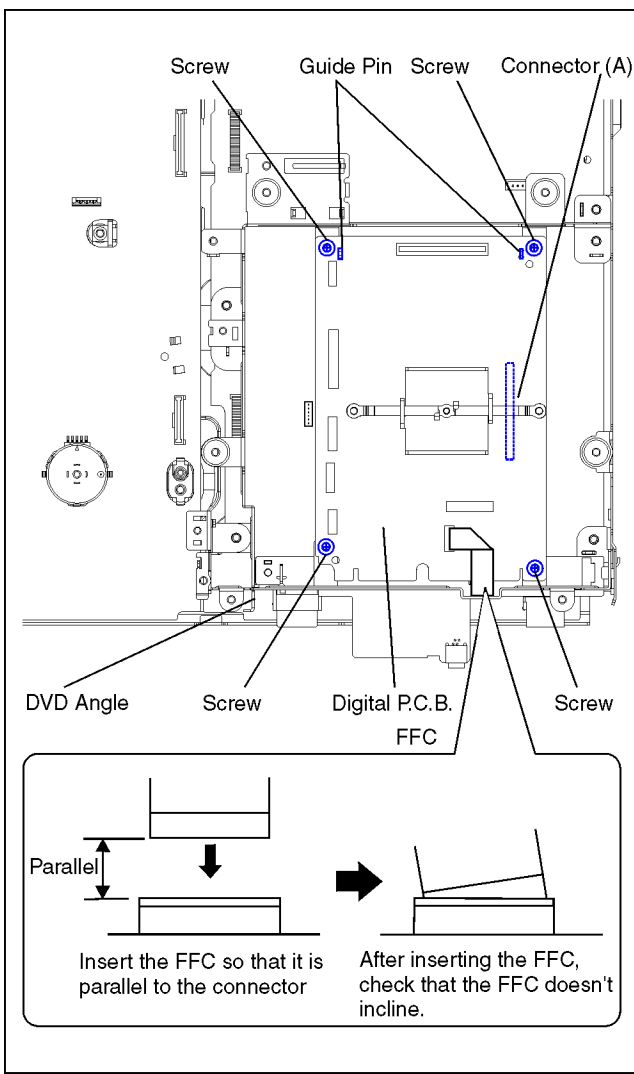

CAUTION:

When replacing the Module, pay attention to inserting FFC, and be careful to do not touch surface of CSP ICs.

If you have touched surface of CSP IC, clean up with alcohol and so on to prevent oxidation.

NOTE:


When inserting Digital P.C.B. confirm correct position of Guide Pins.

9.13. POWER & DIGITAL I/F P.C.B.

1. Remove Rear Panel and disconnect 3 Connectors.
2. Remove the 6 Screws.
3. Remove DVD Angle (A) and DVD Angle (B).
4. Remove Power & Digital I/F P.C.B.


Note:

When inserting P.C.B. confirm correct positions of Guide Pins.

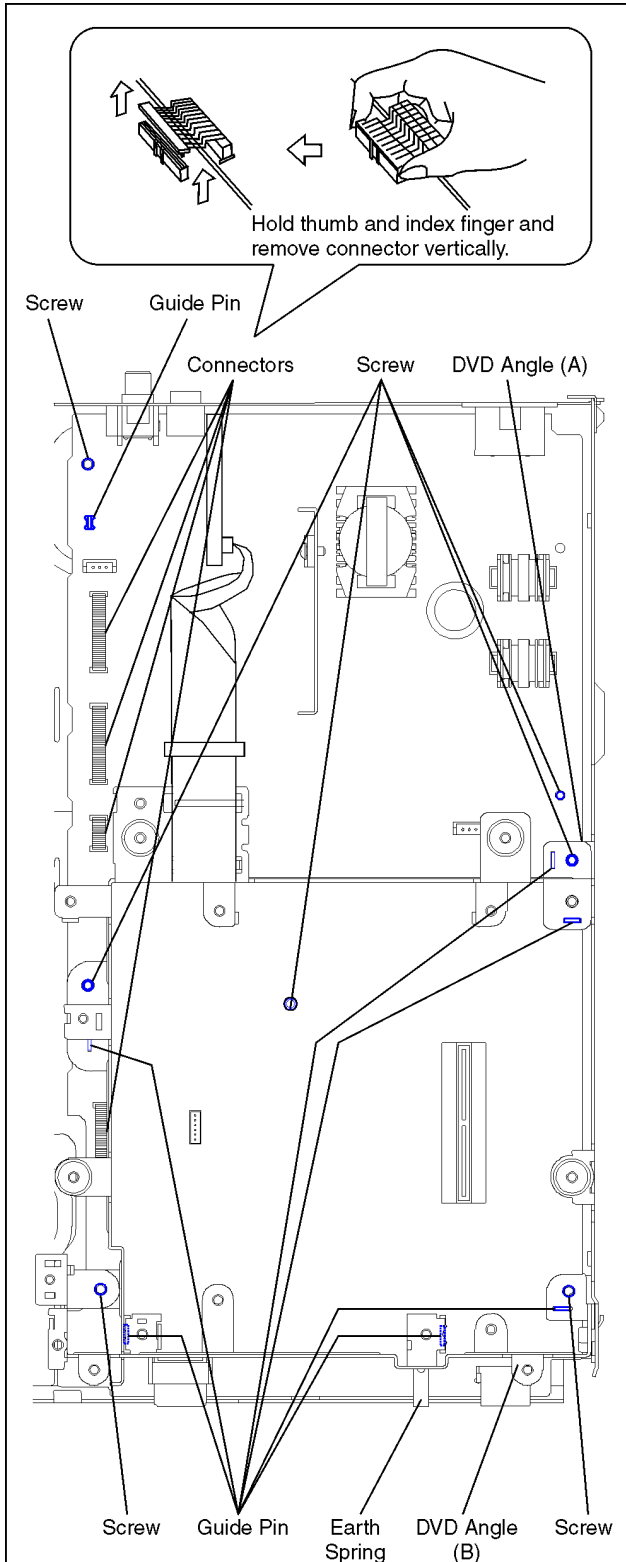


Caution:

The earth springs has to contact the Metalchassis.

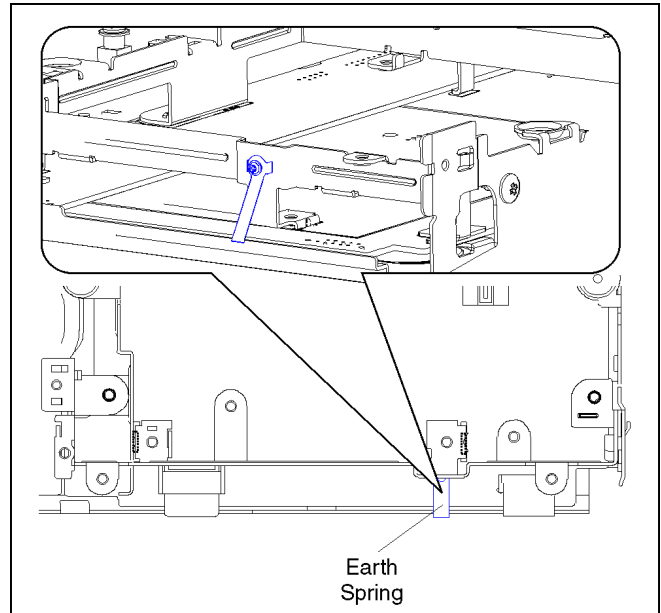


9.14. BACK END P.C.B.

1. Pull out the Back End P.C.B. in direction of the arrow.

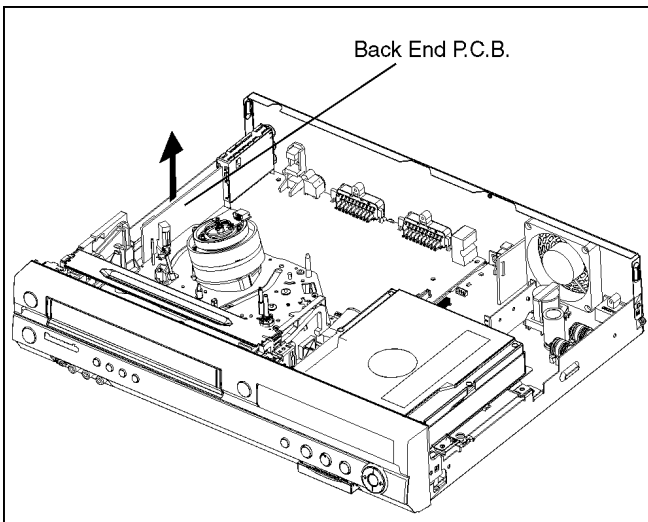

9.15. HDMI P.C.B.

1. Remove Screw on backside of Rear Panel.
2. Pull out the HDMI P.C.B. in the direction of the arrow.

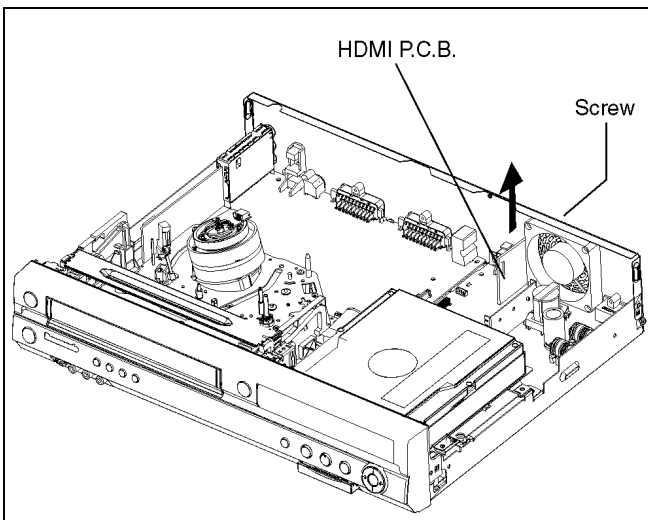

10 MEASUREMENTS AND ADJUSTMENTS

10.1. SERVICE POSITIONS

10.1.1. CHECKING AND REPAIRING OF POWER & DIGITAL I/F P.C.B.

CAUTION:

Before repairing of Power & Digital I/F P.C.B. read and observe "CAUTION FOR DIVX" (NEW FEATURE) first.

1. Top Case

- Remove 4 Screws (A) on side and 3 Screws (B) on rear side.
- Remove Top Case.

2. Front Panel

- Remove one Screw (A) on center.
- Unlock 2 Locking Tabs (A), (D) on Front Panel side and 2 Locking Tabs (B), (C) on Front Panel topside.
- Unlock 2 Locking Tabs (E) on Front Panel bottom side and remove Front Panel.

3. Rear Panel with Fan Motor

- Remove 10 Screws (A) and (B) on Rear Panel.
- Unlock 2 Locking Tabs on the sides and remove Rear Panel with Fan Motor.

4. Digital P.C.B.


- Remove 4 Screws and DVD Angle.
- Disconnect FFC and 4 Screws from Digital P.C.B.

5. DV P.C.B.

- Remove 2 Screws.
- Pull out the DV P.C.B. backwards.

6. Power & Digital I/F P.C.B.

- Disconnect 3 Connectors.
- Remove 4 Screws from DVD Angle (A) and DVD Angle (B).
- Remove 2 Screws from P.C.B.
- Remove DVD Angle (A) and DVD Angle (B).
- Lift up Power & Digital I/F P.C.B., put it upside-down.
- Connect Extension Cables:
 - between Main P.C.B. and Power Digital I/F P.C.B. : RFKZ0327 (2x) and RFKZ0240
 - between Main P.C.B. and Front Jack P.C.B.: RFKZ0239
 - between Main P.C.B. and FL Drive P.C.B.: RFKZ0239
 - between Power & Digital I/F P.C.B. and FL Drive P.C.B.: RFKZ0239 (2x)

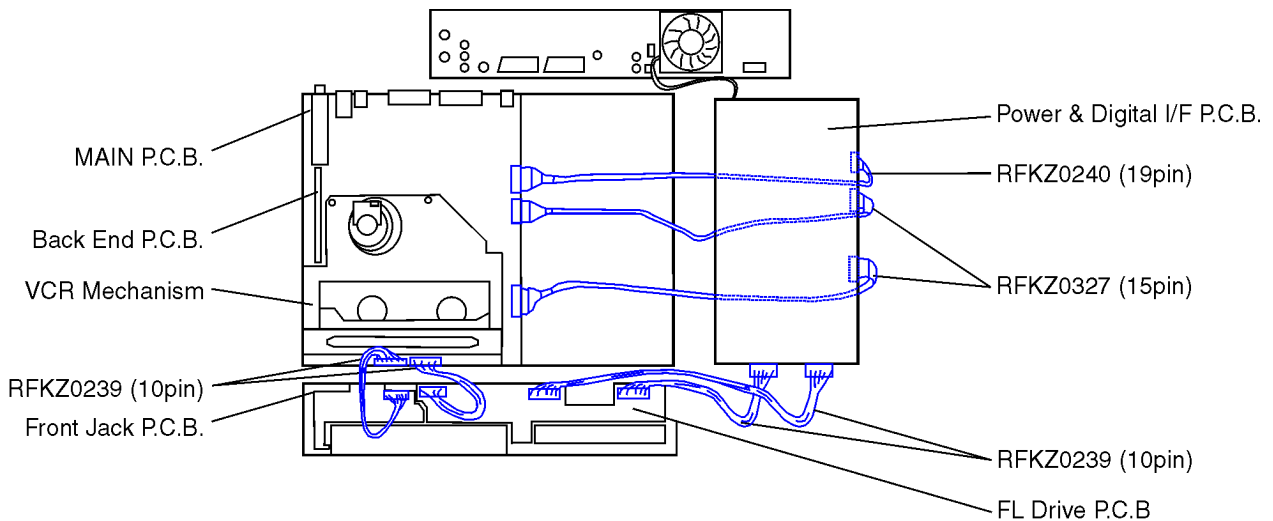

10.1.2. CHECKING AND REPAIRING OF MAIN P.C.B.

1. Top Case

- Remove 4 Screws (A) on side and 3 Screws (B) on rear side and remove the Top Case.

2. Front Panel

- Remove on Screw (A) on center.
- Unlock 2 Locking Tabs (A), (D) on Front Panel side and unlock 2 Locking Tabs (B), (C) on Front Panel topside.
- Unlock 3 Locking Tabs (E) on Front Panel bottom side and remove Front Panel.

3. Rear Panel with Fan Motor


- Remove 10 Screws (A) and (B) on Rear Panel.
- Unlock 2 Locking Tabs on the sides and remove Rear Panel with Fan Motor.

4. VCR Mechanism Unit

- Disconnect 3 Connectors and remove 3 black Screws (A) and 3 Screws (B), (C), (D).
- Lift up VCR Mechanism Unit to remove it.

5. Main P.C.B.

- Disconnect 3 Connectors.
- Remove 3 Screws and remove Main P.C.B.
- Attach VTR Mechanism Unit on to Main P.C.B.
- Tighten Screw (C) with Earth Wire and tighten Screw (D).
- Insert Connectors and 2 FFCs.
- Hold Main P.C.B. with VTR Mechanism, put it upside-down.
- Connect Extension Cables:
 - between Main P.C.B. and Power Digital I/F P.C.B.: RFKZ0327 (2x) and RFKZ0240
 - between Main P.C.B. and Front Jack P.C.B.: RFKZ0239
 - between Main P.C.B. and FL Drive P.C.B.: RFKZ0239
 - between Power & Digital I/F P.C.B. and FL Drive P.C.B.: RFKZ0239 (2x)

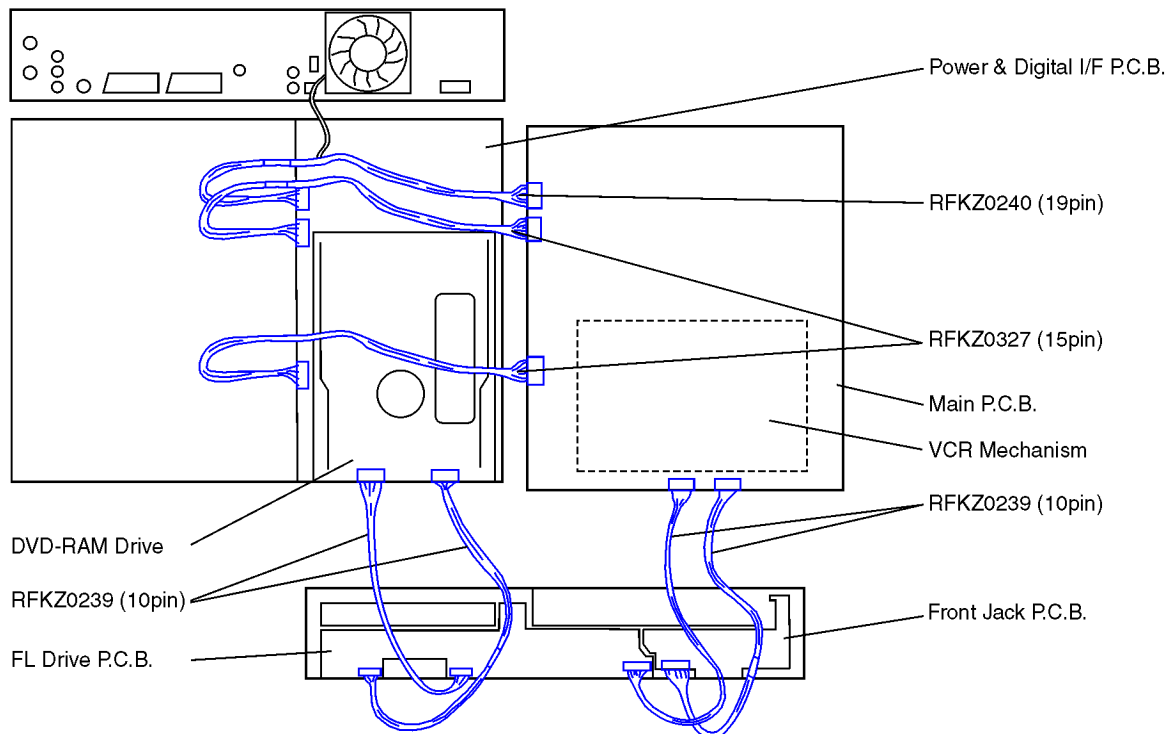

10.1.3. CHECKING AND REPLACING OF DVD-RAM DRIVE / DIGITAL P.C.B. MODULE

1. Top Case

- Remove 4 Screws (A) on side and 3 Screws (B) on rear side.
- Remove Top Case.

2. Front Panel

- Remove one Screws (A) on center.
- Unlock 2 Locking Tabs (A), (D) on Front Panel side and 2 Locking Tabs (B), (C) on Front Panel topside.
- Unlock 2 Locking Tabs (E) on Front Panel bottom side and remove Front Panel.


3. DVD-RAM Drive / Digital P.C.B. Module

- Remove the 5 Screws.
- Lift up and hold the DVD-RAM Drive (together with DVD Angle) slightly.
- Remove FF Cable from SD/DV IN Card P.C.B.
- Remove 4 screws from Digital P.C.B. (pay attention while pulling out Digital P.C.B. to disconnect Connector).
- Remove the Digital P.C.B. together with the DVD-RAM Drive and put it beside chassis.
- Remove 2 Screws from SD/DV IN Card P.C.B., take P.C.B. out and attach FF Cable back to Digital P.C.B.
- Attach the Front Panel back to the Chassis.
- Connect Extension Cables:
 - between Power & Digital I/F P.C.B. and Digital P.C.B. with RFKZ0260 (Red Wire = Pin 1)
 - between Power & Digital I/F P.C.B. and HDMI P.C.B. with RFKZ0366

CAUTION:

The DVD-RAM Drive and the Digital P.C.B. have to be replaced together as one Module.

If the Module is changed the DVD-RAM Drive has to be re-aligned because the alignment data for the DVD-RAM Drive is stored in the Digital P.C.B.

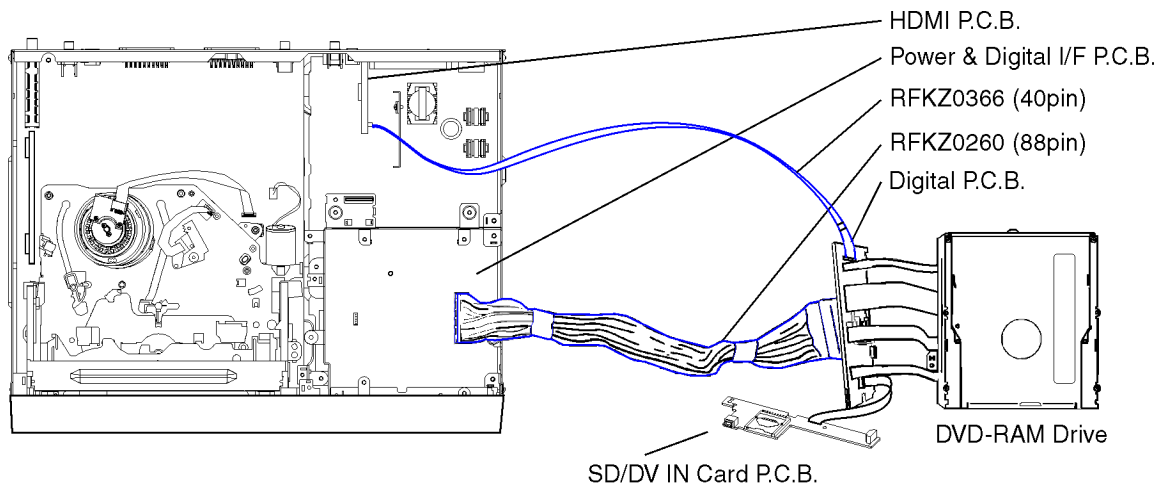

10.2. CAUTION FOR REPLACING PARTS

10.2.1. NOTICE AFTER REPLACING DVD-RAM/DIGITAL P.C.B. MODULE

TM AV1 is displayed after replacing DVD-RAM/Digital P.C.B. Module. Power-off and start-up again.

10.2.2. NOTICE FOR REPLACING PARTS OF VHS MECHANISM

10.2.2.1. REGARDING CHANGE OF PARTS OF VHS MECHANISM

The following parts are not compatible with past R4 Mechanism. Use parts of exclusive use.

Ref. No.	Part Name	Part Number		Pcs	
		Current	Previous		
101	RDD CYLINDER ASS'Y	VEG1699KIT	VEG1648T/VEG1648-DT	1	*1
101-1	FPC HOLDER	VMD5464	VMD4983	1	
102	CAPSTAN MOTOR	VEM0800T	VEM0750T	1	
105	INTERMEDIATE GEAR	VDG1686	VDG1510	1	
106	MAIN CAM GEAR	VDG1685	VDG1511	1	
114	OPENER PIECE	VMD5466	VMD4252	1	
116	MAIN LEVER	VML3934	VML3624	1	
117	PINCH CHARGE ARM	VML3933	VML3626	1	
122	AC HEAD ASS'Y	L1AE00000044	L1AE00000036	1	
130	T BRAKE ARM	VXL3343	VXL3113	1	
135	SIDE PLATE L	VMD5468	VMD4255	1	
136	SIDE PLATE R	VMD5469	VMD4254	1	
137	CASSETTE HOLDER UNIT	VXA8265	VXA7110	1	
139	SECTOR GEAR	VXA8323	VXA7311	1	

*1: Part Number off RDD CYLINDER ASS'Y is different depending on the model.


Capstan Motor (VEM0800T) used for current R4 Mechanism is not compatible with Capstan Motor (VEM0750T) of previous R4 Mechanism.

Therefore, confirm part number by Service Manual of individual models and use part of exclusive use.

10.2.2.2. NOTICE FOR REPLACING CAPSTAN MOTOR

VEM0800-1A is printed on capstan motor of replacement part. VEM0800-1B is printed on capstan motor of product.

Though printed part numbers differ between product and replacement part, **VEM0800-1A and VEM800-1B have compatibility.**

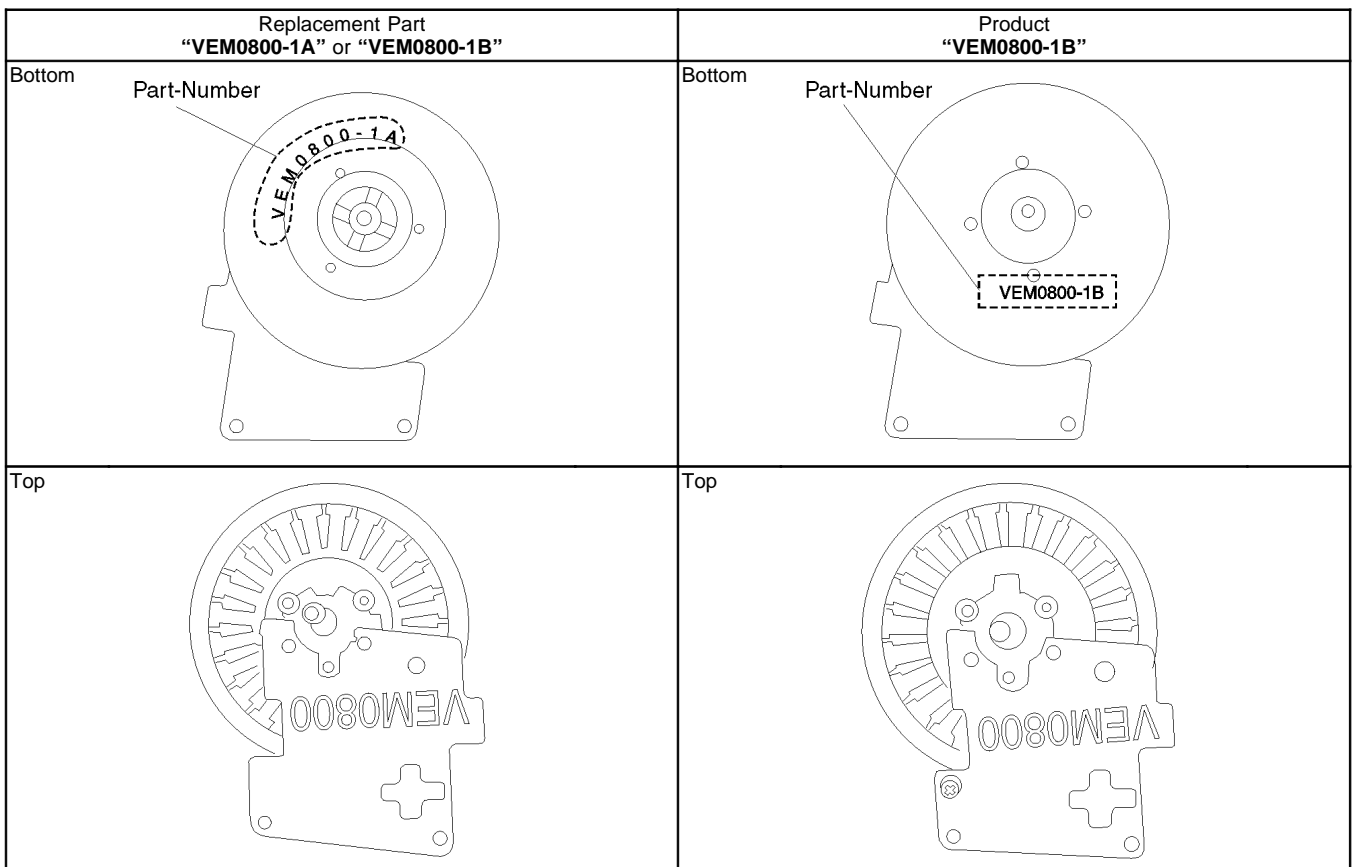

10.2.2.3. ITEMS THAT SHOULD BE DONE AFTER REPLACING PARTS

✓: Necessary —: Unnecessary

	Reset IC6001 * Note 1	Reset IC9704 * Note 1	PG Shifter Automatic Adjustment * Note 2	X-VALUE & LINEARITY (P2 and P3 Posts) Adjustment * Note 3
DD Cylinder	—	—	✓	✓
Main P.C.B.	✓	—	—	—
IC6001	✓	—	—	—
IC9704	—	✓	—	—
Power and Digital I/F P.C.B.	—	✓	✓	—
IC9705 (EEPROM)	—	—	✓	—

*** Note 1:**

Resetting object	Condition of power	Short Terminal
IC6001	POWER ON	TL6004 (Reset_L) and TL6002 (GND)
IC9704	POWER ON	IC9706-4 (Reset_L) and GND

*** Note 2:**

PG Shifter Automatic Adjustment Procedure

PROCEDURE		F.I.P. DISPLAY
Turn on the Service Mode 1. Set Drive Select to VHS and press the [STOP] and [EJECT] key simultaneously for more than 3 seconds.		00000
Activate the Service Mode 2 (Auto tracking will be turned off). 2. Pressing the [STOP] and [EJECT] key simultaneously twice.		20000
Put it in PG adjustment mode. 3. Press the [EJECT] key for more than 3 seconds.		2 00
Set in adjustment No. 1. 4. Press the [CH UP] key once.		2 100
Insert the alignment cassette tape (VFM8125H3F) 5. The PG Shifter Adjustment starts automatically.		2 100
6. This value displays that PG Adjustment data is memorized in EEPROM		for example 0 557
Result	Success	Cassette tape is ejected automatically. 2 100
	Error	NG1 in the PG Shifter Automatic Adjustment (The cylinder rotation is unstable during the automatic adjustment.) F20
		NG2 in the PG Shifter Automatic Adjustment (The vertical sync signal is lacked while over 5 seconds on the alignment tape.) F21
		NG3 in PG Shifter Automatic Adjustment (The installing position of Heads to the cylinder is out of specification.) F22
	NG4 in the PG Shifter Automatic Adjustment (The servo is not locked to the cylinder for more than 10 sec.) F23	
Exit from Service Mode. 7. Press STOP and EJECT keys simultaneously in 6 times. * Then the FIP becomes normal indication.		10:00 (Normal Indication)

*** Note 3:**


X-VALUE & LINEARITY (P2 and P3 Posts) Adjustment Procedure

1. Set the Auto Tracking to off.
 - a. Set Drive Select to VHS and press the [STOP] and [EJECT] keys simultaneously for more than 3 seconds to enter Service Mode.
 - b. Press [STOP] and [EJECT] keys simultaneously twice to activate Service Mode 2 and then Auto-Tracking is turned off.
2. Perform the X-VALUE ADJUSTMENT

X-VALUE ADJUSTMENT

1. After turning off the Auto tracking, playback the alignment Tape and press [VHS CH UP] and [VHS CH DOWN] keys simultaneously to adjustment the tracking to FIX value.
2. Adjust A/C Head Base so that the envelope becomes maximum level. (It is described on "5-2. Tape Interchangeability Adjustment" in "R4 Mechanism" that is separated volume.)


Alignment Tape	VFM8125H3F
Test Point of Playback Envelope	TW3001 (or TW4502)



LINEARITY ADJUSTMENT



1. After turning off the Auto tracking, playback the alignment Tape and press [VHS CH UP] and [VHS CH DOWN] keys simultaneously to adjust the tracking to FIX value.
2. Adjust the LINEARITY so that the envelope is flat when moving tracking to (+) and (-) directions.

Alignment Tape	VFM8125H3F
Test Point of Playback Envelope	TW3001 (or TW4502)

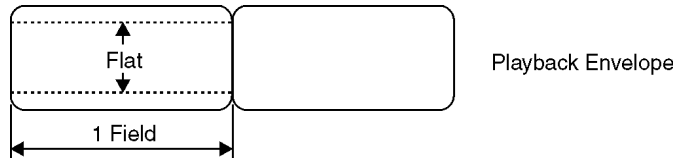

● Main symptoms and Adjustment point

Envelope	Post Name		Adjustment Method
	P2 Post		Turn P2 Post counter-clockwise (Approx. 1/2 revolution)
	P2 Post		Turn P2 Post clockwise (Approx. 1/4 revolution)
	P3 Post		Turn P3 Post clockwise (Approx. 1/2 revolution)
	P3 Post		Turn P3 Post counter-clockwise (Approx. 1/4 revolution)
	P2 Post		Turn P2 Post clockwise (Less than 1 revolution) Turn P3 Post counter-clockwise (Less than 1 revolution)
	P3 Post		

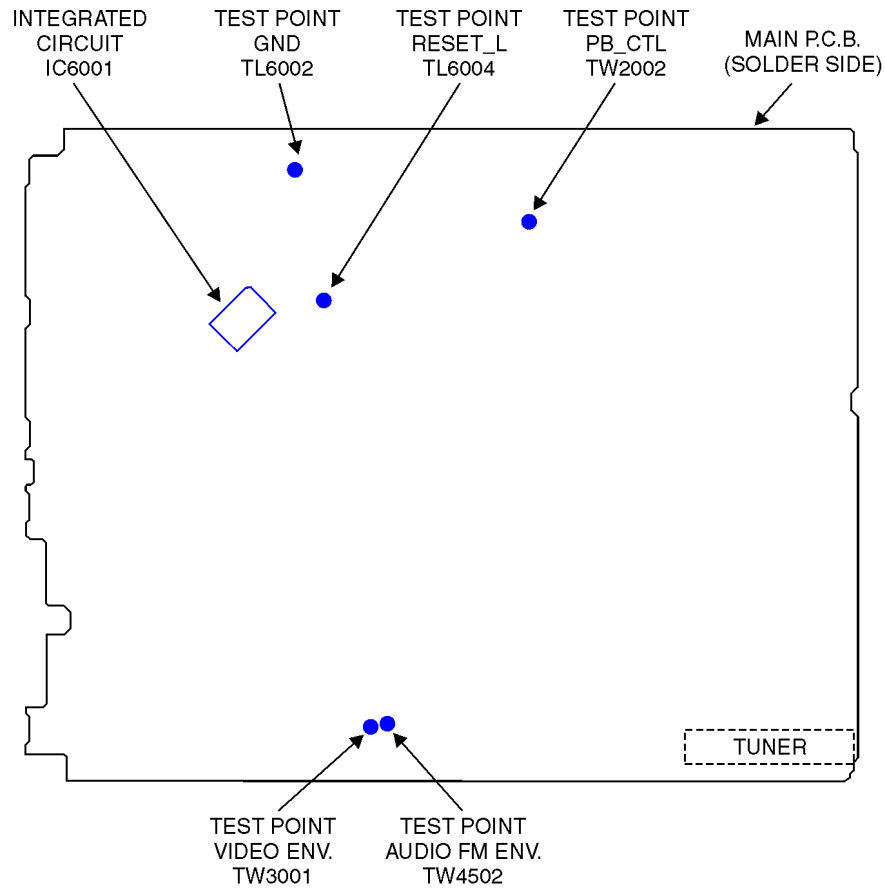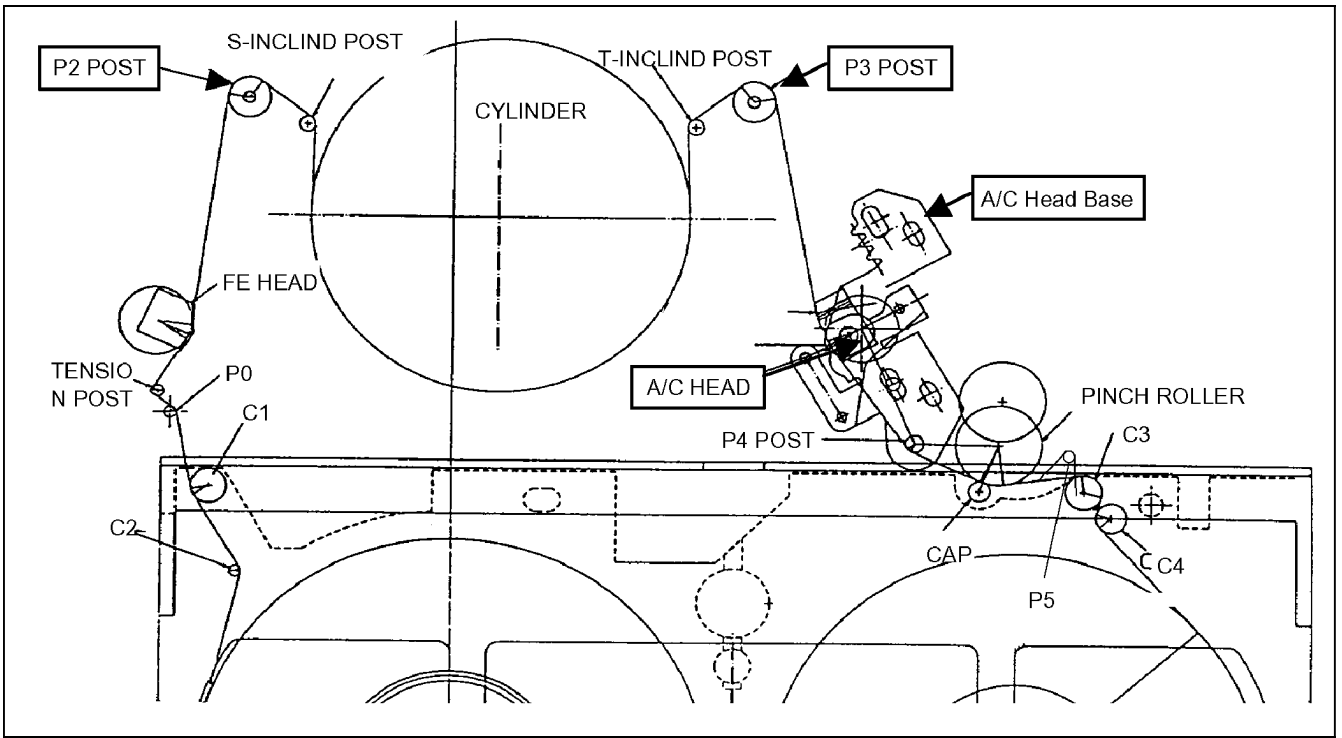

10.3. (DVD) STANDARD INSPECTION SPECIFICATION AFTER MAKING REPAIRS

After making repairs, we recommend performing the following inspection, to check normal operation.

No.	Procedure	Item to Check																														
1	Turn on the power, and confirm items pointed out.	Items pointed out should reappear.																														
2	Insert RAM disc.	The Panasonic RAM disc should be recognized.																														
3	Enter the EE (TU IN / AV IN - AV OUT) mode.	No abnormality should be seen in the picture, sound or operation.																														
4	Perform auto recording and playback for one minute using the RAM disc.	No abnormality should be seen in the picture, sound or operation. *Panasonic DVD-RAM disc should be used when recording and playback.																														
5	If a problem is caused by a VCD, DVD-R, DVD-Video, Audio-CD, or MP3, playback the test disc.	No abnormality should be seen in the picture, sound or operation.																														
6	Models with DV Input Jack: In case of that the trouble is caused by DV terminal.	Models with DV Input Jack; 1) DV terminal: Check to be able to record from DVC.																														
7	After checking and making repairs, upgrade the firmware to the latest version.	Make sure that [UPDOK] appears in the FL displays.																														
<p>Caution for updating Firmware. Firmware of this model is compulsively changed even if new version has already been installed in product. UNFORMAT in not displayed. Please confirm firm version of the product before update, to avoid making down version.</p> <p>step1. Confirm firm version of the product. a). Press [VHS to DVD COPYING] + [STOP] + [OPEN/CLOSE] buttons of product simultaneously for 5 seconds to turn it in Service mode. b). Press [0] [2] of the remote controller. Region code/ MAIN firm version/ TIMER firm version/ DRIVE firmware version/ ROM Correction version is displayed in this order.</p> <p>step 2. Compare Main firm version and Drive firm version of FL display with versions of updating disc.</p> <p>For Example:</p> <table border="1"> <thead> <tr> <th colspan="2">Versions of updating disc</th> <th colspan="2">Versions of FL display</th> <th rowspan="2">Judgment of updating disc</th> <th rowspan="2">Descriptions</th> </tr> <tr> <th>Main firm</th> <th>Drive firm</th> <th>Main firm</th> <th>Drive firm</th> </tr> </thead> <tbody> <tr> <td>3090U5</td> <td>S126</td> <td>3090U5</td> <td>S155</td> <td rowspan="2">NG</td> <td rowspan="2">If this updating disc was used, the product will be made down version. 1. Download latest firmware from TSN System and burn it to CD-R or CD-RW. 2. Update product with this download latest firmware.</td> </tr> <tr> <td>3010C5</td> <td>S155</td> <td>3040C5</td> <td>S155</td> </tr> <tr> <td>3090U5</td> <td>S155</td> <td>3090U5</td> <td>S126</td> <td rowspan="2">OK</td> <td rowspan="2">If this updating disc was used, the product will be made up version.</td> </tr> <tr> <td>3040C5</td> <td>S155</td> <td>3010C5</td> <td>S155</td> </tr> </tbody> </table>			Versions of updating disc		Versions of FL display		Judgment of updating disc	Descriptions	Main firm	Drive firm	Main firm	Drive firm	3090U5	S126	3090U5	S155	NG	If this updating disc was used, the product will be made down version. 1. Download latest firmware from TSN System and burn it to CD-R or CD-RW. 2. Update product with this download latest firmware.	3010C5	S155	3040C5	S155	3090U5	S155	3090U5	S126	OK	If this updating disc was used, the product will be made up version.	3040C5	S155	3010C5	S155
Versions of updating disc		Versions of FL display		Judgment of updating disc	Descriptions																											
Main firm	Drive firm	Main firm	Drive firm																													
3090U5	S126	3090U5	S155	NG	If this updating disc was used, the product will be made down version. 1. Download latest firmware from TSN System and burn it to CD-R or CD-RW. 2. Update product with this download latest firmware.																											
3010C5	S155	3040C5	S155																													
3090U5	S155	3090U5	S126	OK	If this updating disc was used, the product will be made up version.																											
3040C5	S155	3010C5	S155																													
8	Transfer [9][9] in the service mode setting, and initialize the service settings (return various settings and error information to their default values. The laser time is not included in this initialization).	Make sure that [CLR SERV] appears in the FL display. After checking it, turn the power off.																														

Use the following checklist to establish the judgement criteria for the picture and sound.

Item	Contents	Check	Item	Contents	Check
Picture	Block noise		Sound	Distorted sound	
	Crosscut noise			Noise (static, background noise, etc.)	
	Dot noise			The sound level is too low.	
	Picture disruption			The sound level is too high.	
	Not bright enough			The sound level changes.	
	Too bright				
	Flickering color				
Color fading					

11 MISCELLANEOUS

11.1. ABBREVIATIONS

11.1.1. DVD

INITIAL/LOGO		ABBREVIATIONS	
A	A0~UP	ADDRESS	
	ACLK	AUDIO CLOCK	
	AD0~UP	ADDRESS BUS	
	ADATA	AUDIO PES PACKET DATA	
	ALE	ADDRESS LATCH ENABLE	
	AMUTE	AUDIO MUTE	
	AREQ	AUDIO PES PACKET REQUEST	
	ARF	AUDIO RF	
	ASI	SERVO AMP INVERTED INPUT	
	ASO	SERVO AMPOUTPUT	
	ASYN	AUDIO WORD DISTINCTION SYNC	
	B	BCK	BIT CLOCK (PCM)
		BCKIN	BIT CLOCK INPUT
BDO		BLACK DROP OUT	
BLKCK		SUB CODE BLOCK CLOCK	
BOTTOM		CAP. FOR BOTTOM HOLD	
BYP		BYPATH	
BYTCK		BYTE CLOCK	
C		CAV	CONSTANT ANGULAR VELOCITY
	CBDO	CAP. BLACK DROP OUT	
	CD	COMPACT DISC	
	CDSC	CD SERIAL DATA CLOCK	
	CDSRDATA	CD SERIAL DATA	
	CDRF	CD RF (EFM) SIGNAL	
	CDV	COMPACT DISC-VIDEO	
	CHNDATA	CHANNEL DATA	
	CKSL	SYSTEM CLOCKSELECT	
	CLV	CONSTANT LINEAR VELOCITY	
	COFTR	CAP. OFF TRACK	
	CPA	CPU ADDRESS	
	CPCS	CPU CHIP SELECT	
	CPDT	CPU DATA	
	CPUADR	CPU ADDRESS LATCH	
	CPUADT	CPU ADDRESS DATA BUS	
	CPUIRQ	CPU INTERRUPT REQUEST	
	CPRD	CPU READ ENABLE	
	CPWR	CPU WRITE ENABLE	
	CS	CHIPSELECT	
	CSYNCIN	COMPOSITE SYNC IN	
	CSYNCOUT	COMPOSITE SYNC OUT	
	D	DACCK	D/A CONVERTER CLOCK
		DEEMP	DEEMPHASIS BIT ON/OFF
		DEMPH	DEEMPHASIS SWITCHING
		DIG0~UP	FL DIGIT OUTPUT
		DIN	DATA INPUT
		DMSRCK	DM SERIAL DATA READ CLOCK
		DMUTE	DIGITAL MUTE CONTROL
		DO	DROP OUT
		DOUT0~UP	DATAOUTPUT
DRF		DATA SLICE RF (BIAS)	
DRPOUT		DROP OUT SIGNAL	
DREQ		DATA REQUEST	
DRESP		DATA RESPONSE	
DSC		DIGITAL SERVO CONTROLLER	
DSLIF		DATA SLICE LOOP FILTER	
DVD		DIGITAL VIDEO DISC	

INITIAL/LOGO		ABBREVIATIONS
E	EC	ERROR TORQUE CONTROL
	ECR	ERROR TORQUE CONTROL REFERENCE
	ENCSEL	ENCODER SELECT
	ETMCLK	EXTERNAL M CLOCK (81MHz/40.5MHz)
	ETSCLK	EXTERNAL S CLOCK (54MHz)
F	FBAL	FOCUS BALANCE
	FCLK	FRAME CLOCK
	FE	FOCUS ERROR
	FFI	FOCUS ERROR AMP INVERTED INPUT
	FEO	FOCUS ERROR AMP OUTPUT
	FG	FREQUENCY GENERATOR
	FSC	FREQUENCY SUB CARRIER
	FSCK	FS (384 OVER SAMPLING) CLOCK

INITIAL/LOGO		ABBREVIATIONS
G	GND	COMMON GROUNDING (EARTH)
H	HA0~UP	HOST ADDRESS
	HD0~UP	HOST DATA
	HINT	HOST INTERRUPT
	HRXW	HOST READ/WRITE
I	IECOUT	IEC958 FORMAT DATA OUTPUT
	IPFRAG	INTERPOLATION FLAG
	IREF	I (CURRENT) REFERENCE
	ISEL	INTERFACE MODE SELECT
L	LDON	LASER DIODE CONTROL
	LPC	LASER POWER CONTROL
	LRCK	L CH/R CH DISTINCTION CLOCK
M	MA0~UP	MEMORY ADDRESS
	MCK	MEMORY CLOCK
	MCKI	MEMORY CLOCK INPUT
	MCLK	MEMORY SERIAL COMMAND CLOCK
	MDATA	MEMORY SERIAL COMMAND DATA
	MDQ0~UP	MEMORY DATA INPUT/OUTPUT
	MDQM	MEMORY DATA I/O MASK
	MLD	MEMORYSERIAL COMMAND LOAD
MPEG	MOVING PICTURE EXPERTS GROUP	
O	ODC	OPTICAL DISC CONTROLLER
	OFTR	OFF TRACKING
	OSCI	OSCILLATOR INPUT
	OSCO	OSCILLATOR OUTPUT
	OSD	ON SCREEN DISPLAY
P	P1~UP	PORT
	PCD	CD TRACKING PHASE DIFFERENCE
	PCK	PLL CLOCK
	PDVD	DVD TRACKING PHASE DIFFERENCE
	PEAK	CAP. FOR PEAK HOLD
	PLLCLK	CHANNEL PLL CLOCK
	PLLOK	PLL LOCK
	PWMCTL	PWM OUTPUT CONTROL
	PWMDA	PULSE WAVE MOTOR DRIVEA
	PWMOA, B	PULSE WAVE MOTOR OUT A, B

INITIAL/LOGO		ABBREVIATIONS
R	RE	READ ENABLE
	RFENV	RF ENVELOPE
	RFO	RF PHASE DIFFERENCE OUTPUT
	RS	(CD-ROM) REGISTER SELECT
	RSEL	RF POLARITY SELECT
	RST	RESET
	RSV	RESERVE

INITIAL/LOGO		ABBREVIATIONS	
S	SBI0, 1	SERIAL DATA INPUT	
	SBO0	SERIAL DATA OUTPUT	
	SBT0, 1	SERIAL CLOCK	
	SCK	SERIAL DATA CLOCK	
	SCKR	AUDIO SERIAL CLOCK RECEIVER	
	SCL	SERIAL CLOCK	
	SCLK	SERIAL CLOCK	
	SDA	SERIAL DATA	
	SEG0-UP	FL SEGMENT OUTPUT	
	SELCLK	SELECTCLOCK	
	SEN	SERIAL PORT ENABLE	
	SIN1, 2	SERIAL DATA IN	
	SOUT1, 2	SERIAL DATA OUT	
	SPDI	SERIAL PORT DATA INPUT	
	SPDO	SERIAL PORT DATA OUTPUT	
	SPEN	SERIAL PORT R/W ENABLE	
	SPRCLK	SERIAL PORT READ CLOCK	
	SPWCLK	SERIAL PORT WRITE CLOCK	
	SQCK	SUB CODE Q CLOCK	
	SQCX	SUBCODE Q DATA READ CLOCK	
	SRDATA	SERIAL DATA	
	SRMADR	SRAM ADDRESS BUS	
	SRMDT0-7	SRAM DATA BUS 0-7	
	SS	START/STOP	
	STAT	STATUS	
	STCLK	STREAM DATA CLOCK	
	STD0-UP	STREAM DATA	
	STENABLE	STREAM DATA INPUT ENABLE	
	STSEL	STREAM DATA POLARITY SELECT	
	STVALID	STREAM DATAVALIDITY	
	SUBC	SUB CODE SERIAL	
	SBCK	SUB CODE CLOCK	
	SUBQ	SUB CODE Q DATA	
	SYSCLK	SYSTEM CLOCK	
	T	TE	TRACKING ERROR
		TIBAL	BALANCE CONTROL
		TID	BALANCE OUTPUT 1
		TIN	BALANCE INPUT
TIP		BALANCE INPUT	
TIS		BALANCE OUTPUT 2	
TPSN		OP AMP INPUT	
TPSO		OP AMP OUTPUT	
TPSP		OP AMP INVERTED INPUT	
TRCRS		TRACK CROSSIGNAL	
TRON		TRACKING ON	
TRSON		TRAVERSE SERVO ON	

INITIAL/LOGO		ABBREVIATIONS
V	VBLANK	V BLANKING
	VCC	COLLECTOR POWER SUPPLY VOLTAGE
	VCDCONT	VIDEO CD CONTROL (TRACKING BALANCE)
	VDD	DRAIN POWER SUPPLY VOLTAGE
	VFB	VIDEO FEED BACK
	VREF	VOLTAGE REFERENCE
VSS	SOURCE POWER SUPPLYVOLTAGE	
W	WAIT	BUS CYCLE WAIT
	WDCK	WORD CLOCK
	WEH	WRITE ENABLE HIGH
	WSR	WORD SELECT RECEIVER
X	X	X' TAL
	XALE	X ADDRESS LATCH ENABLE
	XAREQ	X AUDIO DATA REQUEST
	XCDROM	X CD ROM CHIP SELECT
	XCS	X CHIP SELECT
	XCSYNC	X COMPOSITE SYNC
	XDS	X DATA STROBE
	XHSYNCO	X HORIZONTAL SYNC OUTPUT
	XHINT	XH INTERRUPTREQUEST
	XI	X' TAL OSCILLATOR INPUT
	XINT	X INTERRUPT
	XMW	X MEMORY WRITE ENABLE
	XO	X' TAL OSCILLATOR OUTPUT
	XRE	X READ ENABLE
	XSRMCE	X SRAM CHIP ENABLE
	XSRMOE	X SRAM OUTPUT ENABLE
	XSRMWE	X SRAM WRITE ENABLE
	XVCS	X V-DEC CHIPSELECT
XVDS	X V-DEC CONTROL BUS STROBE	
XVSYNCO	X VERTICAL SYNC OUTPUT	

11.1.2. VHS

443NT [L]	4.43 NTSC ①	BIL	BILINGUAL
A. COMP	AUDIO COMPONENT SIGNAL	BIL [L]	BILINGUAL ①
A. COMPO	AUDIO COMPONENT SIGNAL	BIL. [H]	BILINGUAL ②
A. D.P [L]	AUDIO DUBBING PAUSE ①	BIL/M1 [L]	BILINGUAL ①
A. D/L [L]	AUDIO DUBBING PAUSE ①	BS CLOCK	BS CLOCK
A. DEF [S]	AUDIO DEFEAT	BS DATA	BS DATA
A. DEF [S] [L]	AUDIO DEFEAT	BS LCH IN	BS L CHANNEL INPUT
A. DUB P [L]	AUDIO DUBBING PAUSE ①	BS MIX [H]	BS MIX ②
A. DUB [H]	AUDIO DUBBING ②	BS MON [H]	BS MONITOR ②
A. ERASE	AUDIO ERASE	BS MONI [H]	BS MONITOR ②
A. H. SW	AUDIO HEAD SWITCHING PULSE	BS RCH IN	BS R CHANNEL INPUT
A. HEAD [R]	AUDIO HEAD (REC)	BS VIDEO	BS VIDEO SIGNAL
A. HEAD [W]	AUDIO HEAD (PLAY)	BS VIDEO/BS1	BS VIDEO SIGNAL
A. IN [L]	AUDIO INPUT (L)	BS [H]	BS ②
A. IN [R]	AUDIO INPUT (R)	BS. LEVEL	BS LEVEL
A. MUT [H]	AUDIO MUTE ②	BS. M [H]	BS MONITOR ②
A. MUTE [H]	AUDIO MUTE ②	BS/VTR [H]	BS/VTR ②
A. OUT [L]	AUDIO OUTPUT (L)	BUS CLK	BUS CLOCK
A. OUT [R]	AUDIO OUTPUT (R)	BUS LSN	BUS LISTEN
A. RF OUT	AUDIO RF SIGNAL OUTPUT	BUS TLK	BUS TALK
A/VS/S. DATA	AV SW/SERIAL DATA	BUZZER	BUZZER
AC ONLINE	AC ONLINE	CAP EC	CAPSTAN TORQUE CONTROL
AC. O/EE. H	AC ONLINE/EE ②	CAP M GND	CAPSTAN MOTOR GND
AFC S C	AFC S CURVE	CAP. ET	CAPSTAN TORQUE CONTROL
AFC [S]	AFC S CURVE	CAP. FG1	CAPSTAN FG1 PULSE
AFC. DEF	AFC DEFEAT	CAP. FG2	CAPSTAN FG2 PULSE
ARFC OUT	AUDIO RF SIGNAL OUTPUT	CAS. SW	CASSETTE SW
ART. V	ARTIFICIAL VERTICAL SYNC SIGNAL	CCN	PLAYBACK CONTROL SIGNAL (-)
ART. V. MM	ARTIFICIAL VERTICAL SYNC SIGNAL MONO MULTI	CCP	PLAYBACK CONTROL SIGNAL (+)
	ARTIFICIAL VERTICAL SYNC SIGNAL ②/NORMAL	CHM	CONTROL SIGNAL (+)
ART. V/H/N	ARTIFICIAL VERTICAL SYNC SIGNAL ②/NORMAL	CHP	CONTROL SIGNAL (-)
AT. V/H/N	ARTIFICIAL VERTICAL SYNC SIGNAL TEST/NORMAL/SERVICE	CINEM [L]	CINEMA ①
ATSW/TEST/NOR/SE	TEST/NORMAL/SERVICE	CINEMA [L]	CINEMA ①
AUDIO IN [L]	AUDIO INPUT (L)	CINEMA/MIX	CINEMA/MIX
AUDIO IN [R]	AUDIO INPUT (R)	CKL	RATCH LOCK
AUDIO OUT [L]	AUDIO OUTPUT (L)	CKS	SHIFT LOCK
AUDIO OUT [R]	AUDIO OUTPUT (R)	CL	CLOCK
AUDIO SELECT [H]	AUDIO SELECT ②	CLK	CLOCK
AUDIO. L	AUDIO (L)	CLK (C.G)	CLOCK
AUDIO. R	AUDIO (R)	CLOCK. IN	CLOCK INPUT
AV CNT	AV CONTROL	CLP	CLAMP
AV CTL	AV CONTROL	COL/B/W/NOR	COLOUR/BLACK & WHITE/NORMAL
AV CTL/S. CLK	AV CONTROL/SERIAL CLOCK	COLOR [H]	COLOUR ②
AV. C.M.	AV CONTROL MODE	CONV	CONVERTOR
AVCNT/METER. R	AV CONTROL/LEVEL METER (R)	CS	CHIP SELECT
AVSW/METER. L	AV SW/LEVEL METER (L)	CTL GND	CONTROL GND
B MODE. H	B MODE ②	CTL HEAD [+]	CONTROL HEAD (+)
B.G.P	BURST GATE PULSE	CTL HEAD [-]	CONTROL HEAD (-)
BACKUP 5V	BACK UP 5V	CTL [+]	CONTROL HEAD (+)
BAND. U.E.	BAND U	CTL [-]	CONTROL HEAD (-)
BANDVL. D	BAND VL	CUE BIAS	CUE BIAS
BI/MI [L]	BILINGUAL/MIX ①	CURRENT LIM	CURRENT LIMMITER
		CYL ET	CYLINDER TORQUE CONTROL


CYL GND	CYLINDER GND	FULL. E. 12V	FULL ERASE 12V
D.F.M. REC [H]	DELAIED FM RECORDING (H)	GND [A]	GND (ANALOG)
D. FM REC [L]	DELAIED FM RECORDING (L)	GND [TU]	GND (TUNER)
D. GND	DIGITAL GND	GND/N. SW. 12V	GND/NON SW 12V
D. REC [H]	DELAYED RECORDING (H)	H. SYNC	HORIZONTAL SYNC
D4/S. LED	D4/STILL LED	H. AMP. SW	HEAD AMP SW PULSE
D4/STILLED	D4/STILL LED	H. P <R>	HEAD PHONE (R)
DAC [CLK]	TUNER DAC (CLOCK)	H. P <L>	HEAD PHONE (L)
DAC/FSCS	TUNER DAC/FS CHIP SELECT	H. P GND	HEAD PHONE GND
DAREC [H]	DELAYED AUDIO RECORDING (H)	H. P OUT [L]	HEAD PHONE OUTPUT (L)
DATA	DATA	H. P OUT [R]	HEAD PHONE OUTPUT (R)
DECODER [L]	DECODER (L)	H. SW	HEAD SW PULSE
DECODER [R]	DECODER (R)	HEAD PHONE [L]	HEAD PHONE (L)
DEW	DEW	HEAD PHONE [R]	HEAD PHONE (R)
DEW SNS	DEW SENSOR	HEAD SW	HEAD SW
DFMRE [H]	DELAYED FM AUDIO RECORDING (H)	HEATER [+]	HEATER (+)
E. REC 5V	EXCEPT RECORDING 5V	HEATER [-]	HEATER (-)
EC	ERROR TORQUE CONTROL	HSS	HORIZONTAL SYNC SIGNAL
ECR	ERROR TORQUE CONTROL	HTR [+]	HEATER (+)
	REFERENCE VOLTAGE	HTR [-]	HEATER (-)
EDT TRIG [L]	EDIT TRIGGER (L)	I RFE	REFERENCE CURRENT
EDIT [H]	EDIT (H)	ICL	CONTROL AGC CIRCUIT
EE [H]	EE (H)	IF	INTERMEDIATE FREQUENCY
EE [H]/INS [M]	EE (H)/INSERT (M)	IN SELA1	INPUT SELECT A1 POSITION
EE. VV. TR	EE/VV/TRICK PLAY	IN SELA2	INPUT SELECT A2 POSITION
EJECT. PO	EJECT POSITION	IN SELA3	INPUT SELECT A3 POSITION
EJECT/VDET	EJECT/REVERSE SLOW LOCK	INS L/R [L]	INSERT Lch/Rch (L)
ENV. SEL	ENVELOPE SELECT	INS. [H]	INSERT (H)
ENVE. OUT	ENVELOPE OUTPUT	INSEL A1	INPUT SELECT A1 POSITION
ENVE. SEL	ENVELOPE SELECT	INSEL A2	INPUT SELECT A2 POSITION
ENV SELECT	ENVELOPE SELECT	INSERT	INSERT
EP [H]	LP (H)	INSERT [H]	INSERT (H)
EP/LP [H]	LP (H)	IO CS	INPUT/OUTPUT CHIP SELECT
EP/LP/SP	LP/SP	JOG1	JOG1
EP/SS [H]	LP/SLOW/STILL/STOP (H)	JOG S3 LED/FOWRD	JOG LED/FORWARD LED
EPROMCS	EPROM CHIP SELECT	JOG/F. LED	JOG LED/FORWARD LED
EX. REC 5V	EXCEPT RECORDING 5V	JSB [H]	JSB (H)
FF/REW [L]	FIRST FORWARD/REWIND (L)	JST. CLCK	JUST CLOCK
FG1 IN	FG1 PULSE INPUT	JST. CLK	JUST CLOCK
FG2 IN	FG2 PULSE INPUT	JST. CLOCK	JUST CLOCK
FILTER ADJUSTMENT	FILTER ADJUSTMENT	L. OUT	Lch OUTPUT
FLY ERASE [H]	FLYING ERASE HEAD ON (H)	L. CH [H]	Lch (H)
FLY ON [H]	FLYING ERASE HEAD ON (H)	L. CH [L]	Lch (L)
FLY. E [H]	FLYING ERASE HEAD ON (H)	LED (MAIN)	LED (MAIN)
FM MUT [H]	FM AUDIO MUTE (H)	LED (STEREO)	LED (STEREO)
FM MUTE [H]	FM AUDIO MUTE (H)	LED (SUB)	LED (SUB)
FM OUT [L]	FM OUTPUT (L)	LED CKL	LED SERIAL CLOCK
FM OUT [R]	FM OUTPUT (R)	LED CKS	LED SERIAL CLOCK
FM PACK OUT [L]	FM PACK OUTPUT (L)	LED DATA	LED SERIAL DATA
FM PACK OUT [R]	FM PACK OUTPUT (R)	LINE IN 1 [L]	LINE INPUT 1 (L)
FM/BS SEL [L]	FM/BS SELECT (L)	LINE IN 1 [R]	LINE INPUT 1 (R)
FM/BS SEL [R]	FM/BS SELECT (R)	LINE IN 2 [L]	LINE INPUT 2 (L)
FS. CLK	FS CLOCK	LINE IN 2 [R]	LINE INPUT 2 (R)
FUL. E [H]	FULL ERASE HEAD ON (H)	LINE IN V	LINE INPUT VIDEO
FULL. E [H]	FULL ERASE HEAD ON (H)	LINE IN [L]	LINE INPUT (L)

LINE IN [R]	LINE INPUT (R)	P-OFF [H]	POWER OFF $\text{\textcircled{H}}$
LINE OUT [L]	LINE OUTPUT (L)	P-OFF [L]	POWER OFF $\text{\textcircled{L}}$
LINE OUT [R]	LINE OUTPUT (R)	P. FAIL	POWER FAILURE DETECT
LP [H]	LP $\text{\textcircled{H}}$	P. OFF [H]	POWER OFF $\text{\textcircled{H}}$
LPTRI [L]	LP TRICK PLAY $\text{\textcircled{L}}$	P. OFF [L]	POWER OFF $\text{\textcircled{L}}$
Lch/A. DUB	Lch/AUDIO DUBBING	PAL [H]	PAL $\text{\textcircled{H}}$
M GND	MOTOR GND	PAL [L]/NTSC [H]	PAL $\text{\textcircled{L}}$ /NTSC $\text{\textcircled{H}}$
M REG	MOTOR REGULATOR	PB ADJ OUT	PLAYBACK ADJUST OUTPUT
MAIN OUT	MAIN OUTPUT	PB OUT	PLAYBACK OUTPUT
MAIN [L]	MAIN $\text{\textcircled{L}}$	PB. H	PLAYBACK $\text{\textcircled{H}}$
MAIN/MONO	MAIN/MONAUURAL	PFG	PG/FG
MAX IN	MAXIMAM INPUT	PHOTSN +B	PHOTO SENSOR +B
MES [H]	MESECAM $\text{\textcircled{H}}$	PICT. CNT	PICTURE CONTROL
MESE [H]	MESECAM $\text{\textcircled{H}}$	PLAY LED/RVS LED	PLAY LED/REVERSE LED
MESE [L]	MESECAM $\text{\textcircled{L}}$	PLAY. PO	PLAY POSITION
METER 5V	LEVEL METER 5V	PLAY/R. LED	PLAY LED/REVERSE LED
METER [L]	LEVEL METER (L)	PLY/DEW	PLAY/DEW $\text{\textcircled{H}}$
METER [R]	LEVEL METER (R)	POWER OFF [L]	POWER OFF $\text{\textcircled{L}}$
METER. L/AVS	LEVEL METER (L)	PREROLL [H]	PREROLL $\text{\textcircled{H}}$
METER. R/AVC	LEVEL METER (R)	PWRFAIL	POWER FAILURE DETECT
MI/BI [L]	MIX $\text{\textcircled{H}}$ /BILIGUAL	R. CH [H]	Rch $\text{\textcircled{H}}$
MIC GND	MIC GND	R. CH [L]	Rch $\text{\textcircled{L}}$
MIC IN	MIC INPUT	R. ST	RESET
MIC IN [L]	MIC INPUT (L)	R/S/F	REVERSE $\text{\textcircled{H}}$ /STOP $\text{\textcircled{M}}$ /FORWARD $\text{\textcircled{L}}$
MIC IN [R]	MIC INPUT (R)	RCH [H]	Rch $\text{\textcircled{H}}$
MIC [H]	MIC $\text{\textcircled{H}}$	REC 12V	RECORDING 12V
MIX [H]	MIX $\text{\textcircled{H}}$	REC CHROMA	RECORDING CHROMINANCE SIGNAL
MIX [H]/CINEMA [L]	MIX $\text{\textcircled{H}}$ /CINEMA SOUND $\text{\textcircled{L}}$	REC H	RECORDING $\text{\textcircled{H}}$
MIX/CINE	MIX $\text{\textcircled{H}}$ /CINEMA SOUND $\text{\textcircled{L}}$	REC IN	RECORDING INPUT
MIX/CINEMA [L]	MIX $\text{\textcircled{H}}$ /CINEMA SOUND $\text{\textcircled{L}}$	REC OUT [L]	RECORDING OUTPUT $\text{\textcircled{L}}$
MN. H/M. L	MONAUURAL $\text{\textcircled{H}}$ /MAIN $\text{\textcircled{L}}$	REC START	RECORDING START
MN. H/MAI. L	MONAUURAL $\text{\textcircled{H}}$ /MAIN $\text{\textcircled{L}}$	REC VR [C]	RECORDING VOLUME (COMMON)
MN2/MES. L	MONAUURAL 2/MESECAM $\text{\textcircled{L}}$	REC VR [L]	RECORDING VOLUME (L)
MODE SEL	AUDIO MODE SELECT	REC VR [R]	RECORDING VOLUME (R)
MODE SW	AUDIO MODE SW	REC Y	RECORDING LUMINANCE SIGNAL
MODE. S. IN	AUDIO MODE SELECT INPUT	REC [H]	RECORDING $\text{\textcircled{H}}$
MODE. S. OUT	AUDIO MODE SELECT OUTPUT	REC. C	RECORDING CHROMINANCE SIGNAL
MONO [H]	MONAUURAL $\text{\textcircled{H}}$	REC. Y	RECORDING LUMINANCE SIGNAL
MONO [H]/MAIN [L]	MONAUURAL $\text{\textcircled{H}}$ /MAIN $\text{\textcircled{L}}$	REC/EE CTL	RECORDING/EE CONTROL
MONO2 [L]	MONAUURAL 2	REEL-T	REEL PULSE (TAKE-UP)
MONO2/MESE [FM(L)]	MONAUURAL 2/MESECAM (FM $\text{\textcircled{L}}$)	REEL-S	REEL PULSE (SUPPLY)
MOTOR GND	MOTOR GND	REGULATOR FILTER	REGULATOR FILTER
MUTE	MUTE	RESET	RESET
N. A. REC [L]	NORMAL AUDIO RECORDING	REV M F/R	REVIEW MOTOR
N. SW 12V	NON SW 12V		FORWARD/REVERSE
N. SW. 5. DET	NON SW 5V DETECT	REV M V1	REVIEW MOTOR V1
NICAM	NICAM	REV M V2	REVIEW MOTOR V2
NICAM [L]	NICAM $\text{\textcircled{L}}$	REV MOTOR F/R	REVIEW MOTOR
NOL [H]	PAL $\text{\textcircled{H}}$ /4.43 NTSC $\text{\textcircled{M}}$ /3.58 NTSC $\text{\textcircled{L}}$		FORWARD/REVERSE
NOR/SOFT [H]	NORMAL/SOFT TAPE PLAY $\text{\textcircled{H}}$	REV MOTOR V1	REVIEW MOTOR V1
NORMAL [H]	NORMAL $\text{\textcircled{H}}$	REV MOTOR V2	REVIEW MOTOR V2
NR BIAS	NR BIAS	REV MOTOR [+]	REVIEW MOTOR (+)
NTSC [L]	NTSC $\text{\textcircled{L}}$	REV MOTOR [-]	REVIEW MOTOR (-)
OCH	CONTROL AGC CIRCUIT	REV. M. GND	REVIEW MOTOR GND
OUT	OUTPUT	RF. CHROMA	RF CHROMINANCE SIGNAL

RF OUT	RF OUTPUT	SYSCON 5V	SYSTEM CONTROL 5V
RF Y	RF LUMINANCE SIGNAL	SYSTEM	SYSTEM SW
RF. Y. IN	RF LUMINANCE SIGNAL INPUT	T-PHOTO	TAKE-UP PHOTO TRANSISTOR
RF. Y. OUT	RF LUMINANCE SIGNAL OUTPUT	T-RL. PLS	TAKE-UP REEL PULSE
ROTAR. SW	ROTARY SW	T. BUSCLK	TIMER BUS CLOCK
ROTARY	ROTARY SW	T. BUSLSN	TIMER BUS LISTEN
RST	RESET	T. BUSTLK	TIMER BUS TALK
RST [L]	RESET \textcircled{L}	T. END [L]	TAPE END \textcircled{L}
Rch/INST	Rch/INSERT	T. PHOTO	TAKE-UP PHOTO TRANSISTOR
S IN	SERIAL DATA INPUT	TAPE END [L]	TAPE END \textcircled{L}
S OUT	SERIAL DATA OUTPUT	TAPE END [L]/CAM	TAPE END \textcircled{L} /CAMERA PAUSE
S-PHOTO	SUPPLY PHOTO TRANSISTOR	TEST	TEST MODE
S-RL. PLS	SUPPLY REEL PULSE	TPZ	TRAPEZOIDAL WAVE CIRCUIT
S. CLK	SERIAL CLOCK	TRIC [L]	TRIC PLAY \textcircled{L}
S. CLK/AV	SERIAL CLOCK/AV	TRICK [L]	TRIC PLAY \textcircled{L}
S. DATA	SERIAL DATA	TRK. ENV	AUTO TRACKING ENVELOPE DETECT
S. DATA/A	SERIAL DATA	TU. AUDIO	TUNER AUDIO
S. PHOTO	SUPPLY PHOTO TRANSISTOR	TU. GND	TUNER GND
S. TAB [L]	SAFETY TAB SW ON \textcircled{L}	TU. V. IN	TUNER VIDEO SIGNAL INPUT
S/P/N	SECAM/PAL/NTSC	TU. VIDEO	TUNER VIDEO
SC IN	SERIAL CLOCK INPUT	TUN NOR IN	TUNER NORMAL INPUT
SC OUT	SERIAL CLOCK OUTPUT	TUN R	TUNER AUDIO (R)
SCK SELECT	SERIAL CLOCK SELECT	TUN. AUDIO IN	TUNER AUDIO INPUT
SEL OUT [L]	SELECT OUTPUT (L)	TUNER 12V	TUNER 12V
SEL OUT [R]	SELECT OUTPUT (R)	TUNER L	TUNER AUDIO (L)
SHUTTLE 1	SHUTTLE 1	TUNER V IN	TUNER VIDEO SIGNAL INPUT
SIF	SOUND INTERMEDIATE FREQUENCY	TUNER [L]	TUNER AUDIO (L)
SLMUT [H]	INPUT SELECT MUTE \textcircled{H}	TUNER [N]	TUNER AUDIO (NORMAL)
SLNID [+]	SOLENOID (+)	TUNER [R]	TUNER AUDIO (R)
SLNID [-]	SOLENOID (-)	TUNER. 12	TUNER 12V
SLW TR. MM	SLOW TRACKING MONO MULTI	TUOFF [H]	TUNER OFF \textcircled{H}
SLW TR. REF	SLOW TRACKING REFERENCE	TV. AUDIO	TV AUDIO
	VOLTAGE	TV/VTR	TV/VTR
SNS. GND	SENSOR GND	TXTON [L]	TEXT ON \textcircled{L}
SOFT [H]	SOFT TAPE PLAY \textcircled{H}	U. REG45V	UNREGULATOR 45V
SOFT [H]/NORMAL	SOFT TAPE PLAY \textcircled{H} /NORMAL \textcircled{H}	UNREG	UNREGULATOR
SOLENOID ON [L]	SOLENOID ON \textcircled{L}	UNREG19V	UNREGULATOR 19V
SP [H]	SP \textcircled{H}	V. REF	REFERENCE VOLTAGE
SP/L/SLP	SP/LP	V. EE [H]	VIDEO EE \textcircled{H}
SSS [L]	SLOW/STILL/STOP	V. EE [L]	VIDEO EE \textcircled{L}
STEREO LED	STEREO LED	VCO REF	REFERENCE OSCILLATER
STEREO [H]	STEREO \textcircled{H}	VD. IN	VIDEO SIGNAL INPUT
STEREO [L]	STEREO \textcircled{L}	VD. OUT	VIDEO SIGNAL OUTPUT
STOP. PO	STOP POSITION	VIDEO EE [L]	VIDEO EE \textcircled{L}
STOP/5V	STOP POSITION/5V	VIDEO IN	VIDEO SIGNAL INPUT
STOP1/TAPE SEL	STOP1 POSITION/TAPE SELECT	VIDEO OUT	VIDEO SIGNAL OUTPUT
STOP1/PAL:ST	STOP1 POSITION/PAL	VM	MOTOR VOLTAGE
STOP2. PO	STOP 2 POSITION	VM DOWN [L]	MOTOR VOLTAGE DOWN \textcircled{L}
STOP2/S-TAB	STOP 2 POSITION/SAFETY TAB SW	VSS	VERTICAL SYNC SIGNAL
STREO [H]	STEREO \textcircled{H}	VTR [H]	VTR \textcircled{H}
SUB BIAS	SUB BIAS	VTR. 12V	VTR 12V
SUB. SW	SUB SW	X IN	OSCILLATOR INPUT
SVHS CAS [L]	S-VHS CASSETTE \textcircled{L}	X OUT	OSCILLATOR OUTPUT
SW. 5. DET	SW 5V DETECT		
SYNC [L]	SYNC \textcircled{L}		


12 BLOCK DIAGRAM

12.1. POWER SUPPLY BLOCK DIAGRAM

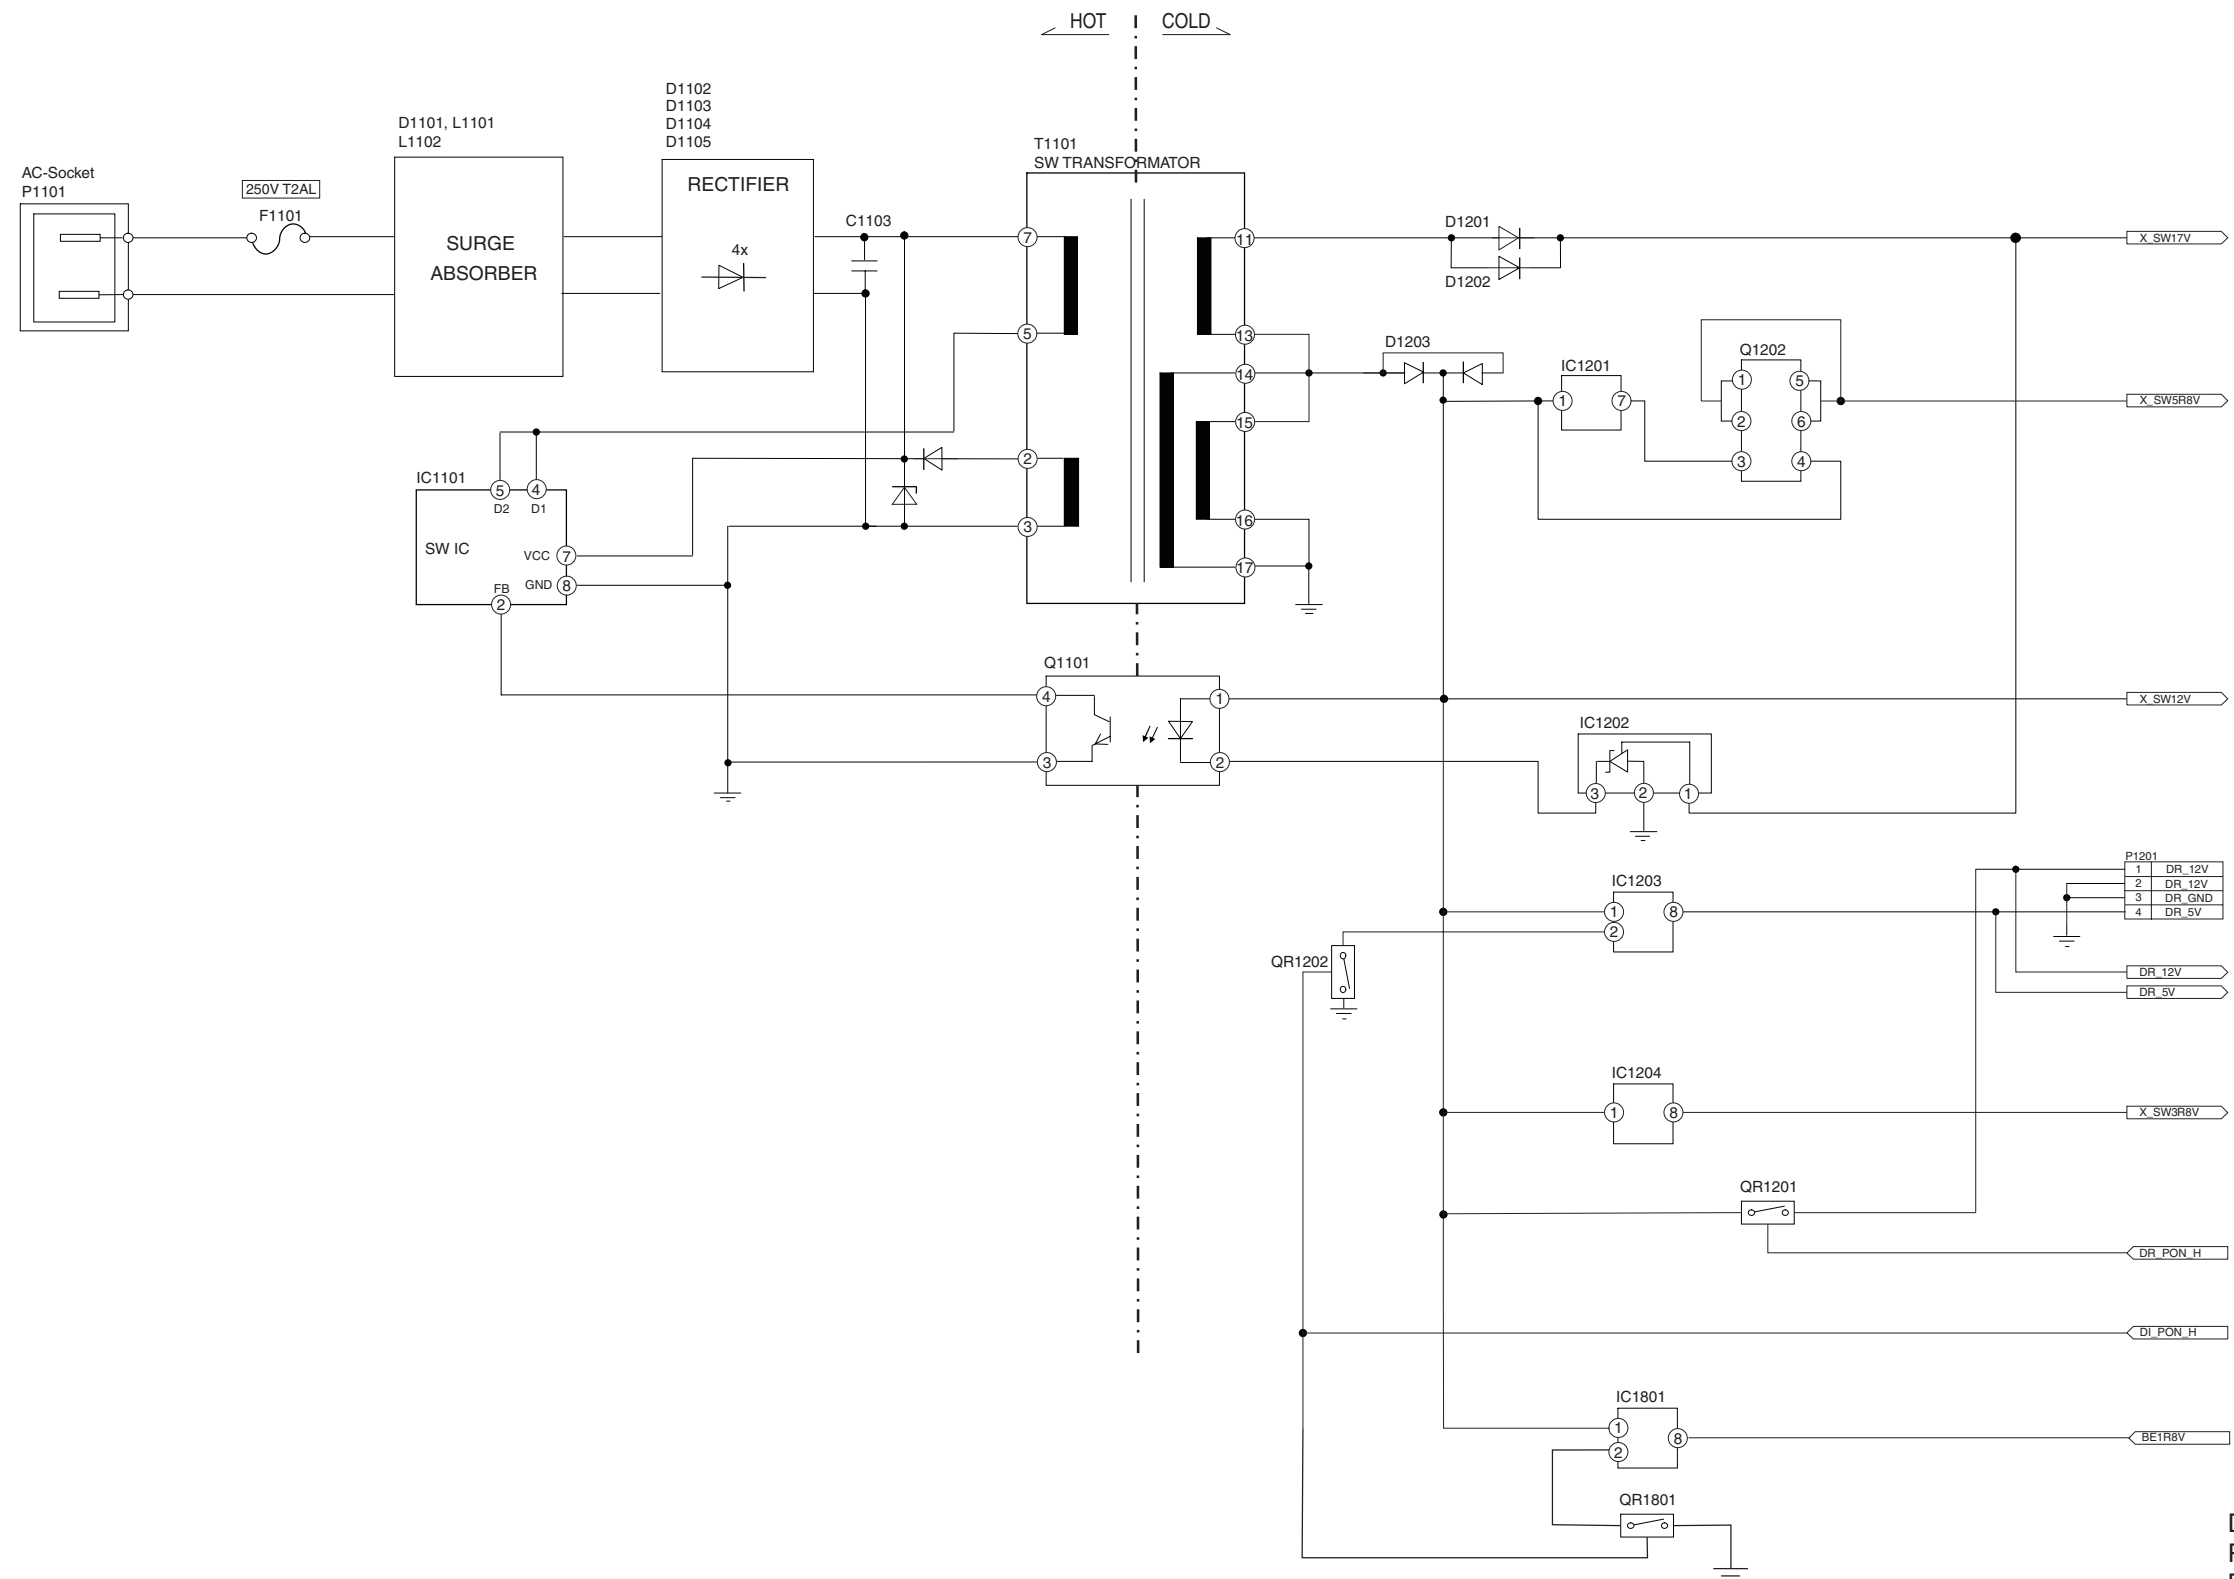


DMR-EZ45VEB
POWER SUPPLY
BLOCK DIAGRAM

12.2. SYSTEM CONTROL, SERVO & TIMER BLOCK DIAGRAM

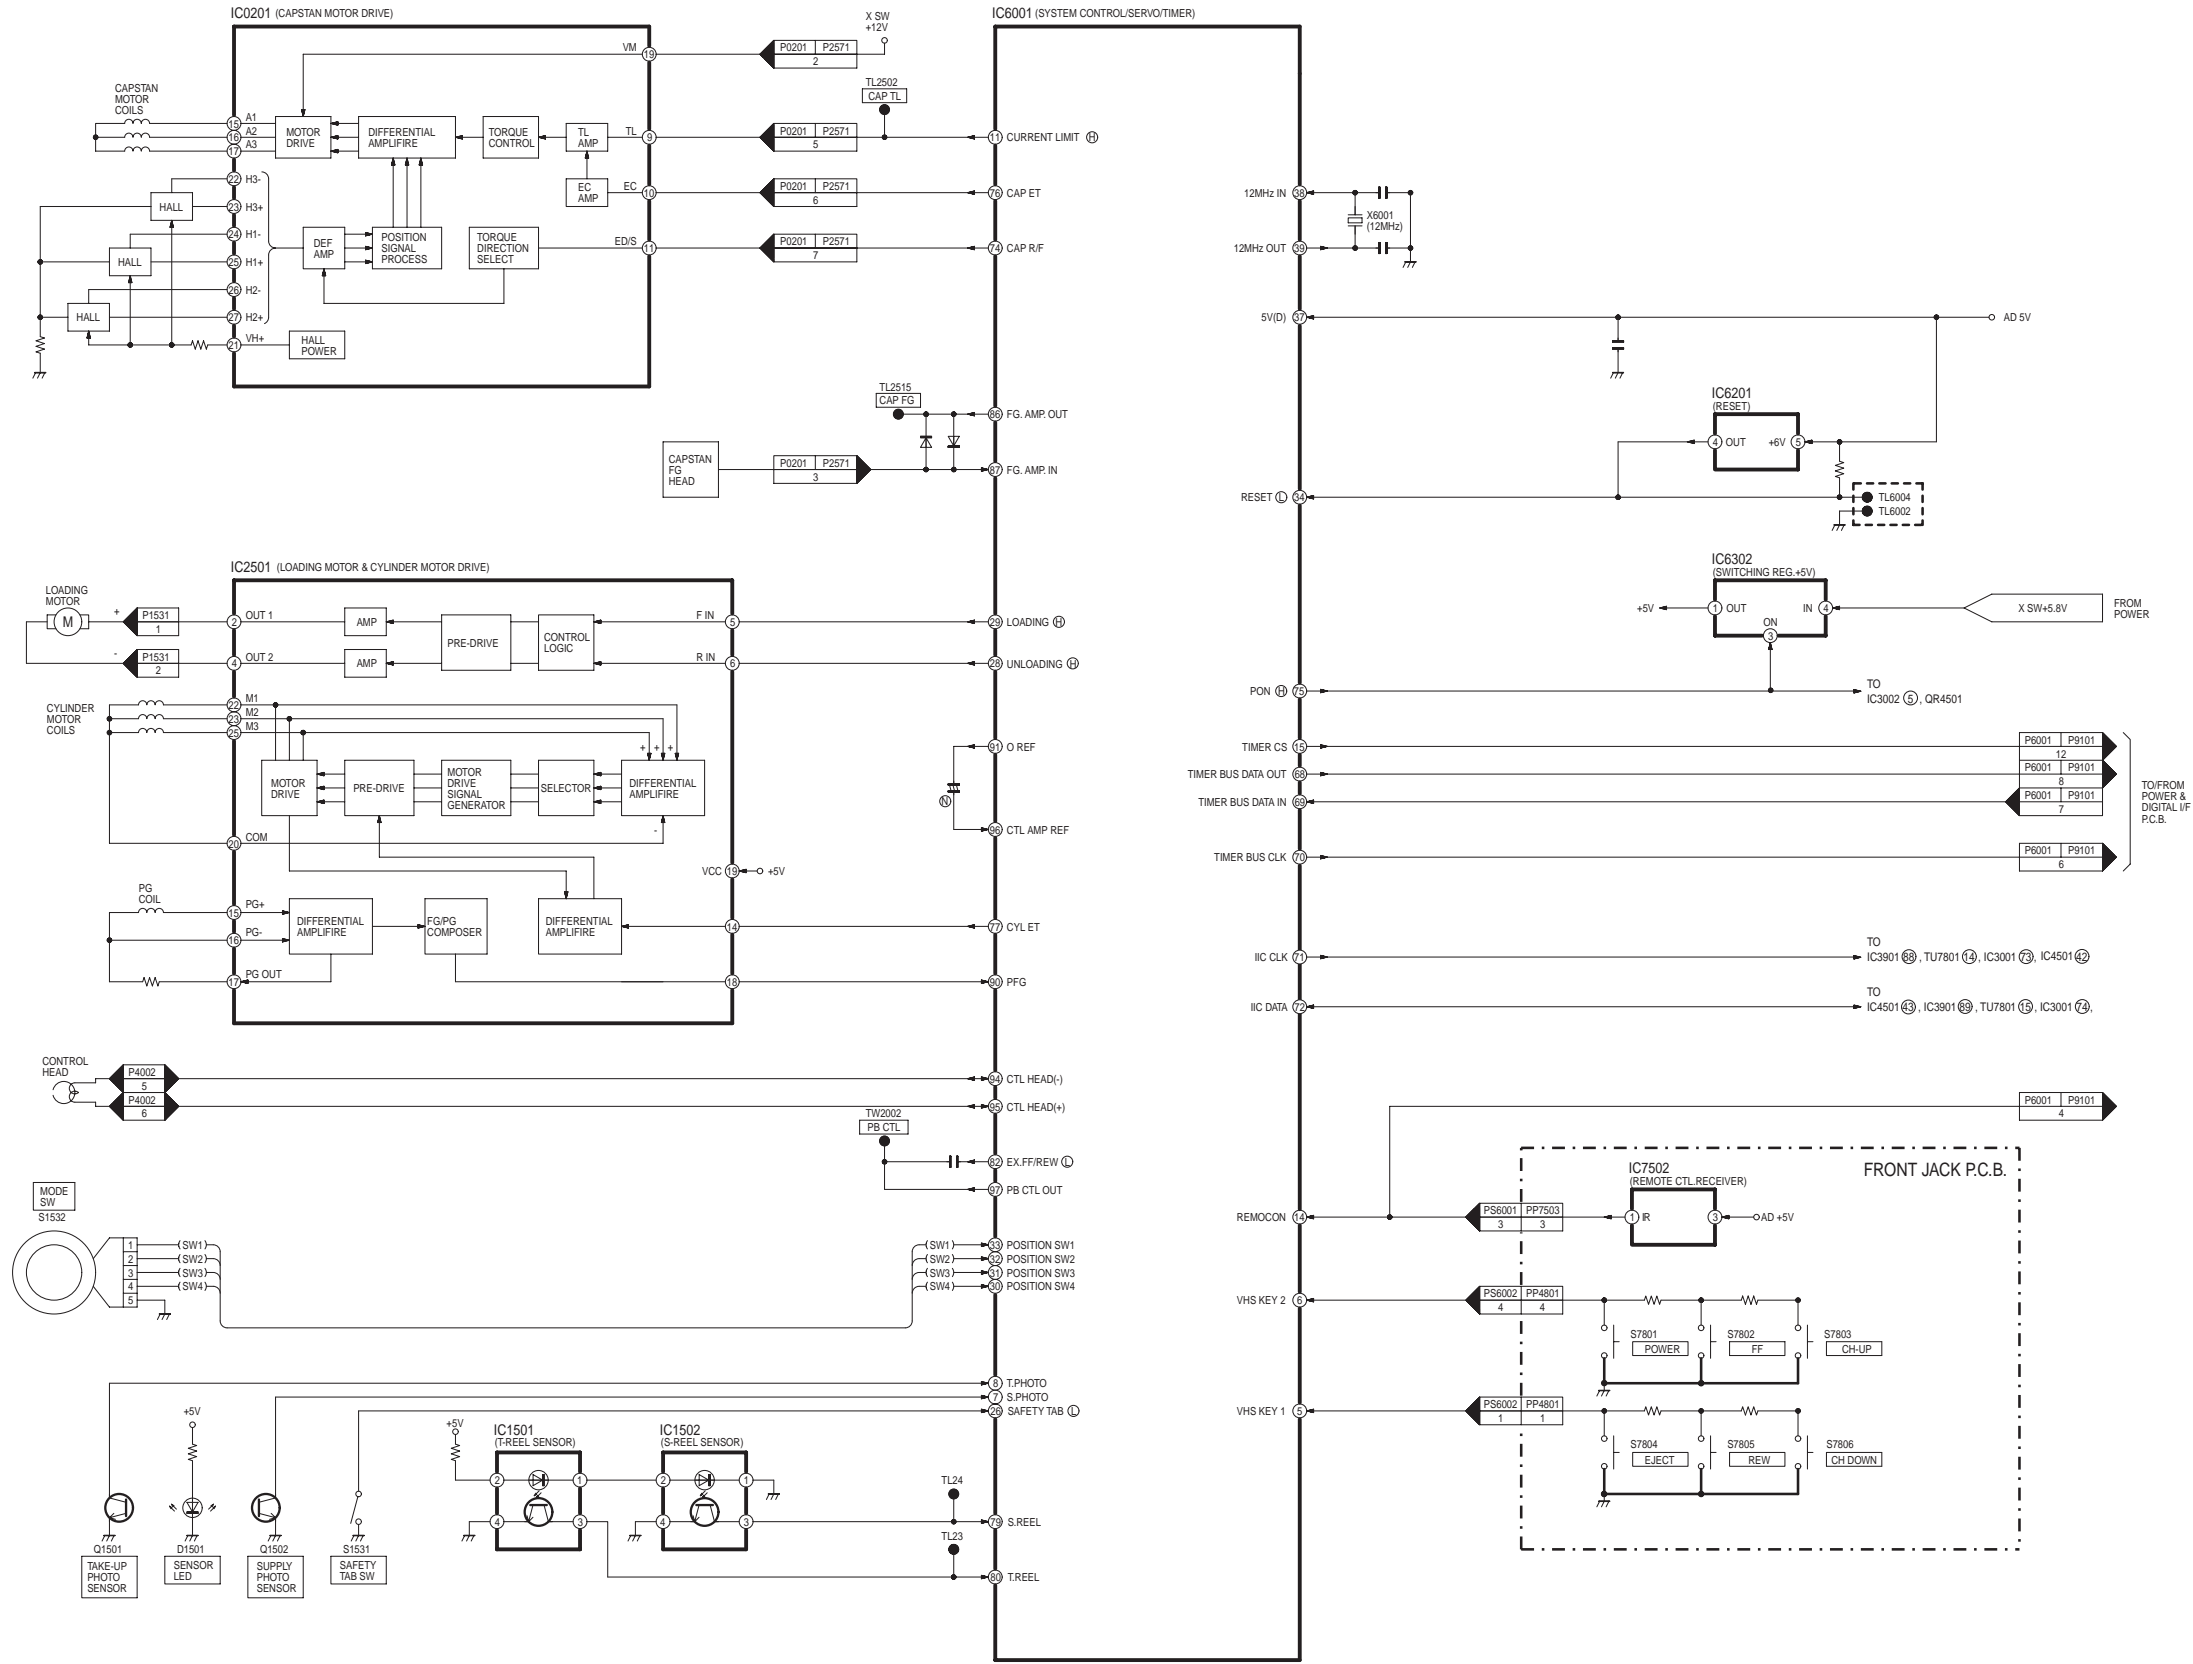

DMR-EZ45VEB
SYSTEM CONTROL / SERVO & TIMER
BLOCK DIAGRAM


12.3. AUDIO BLOCK DIAGRAM

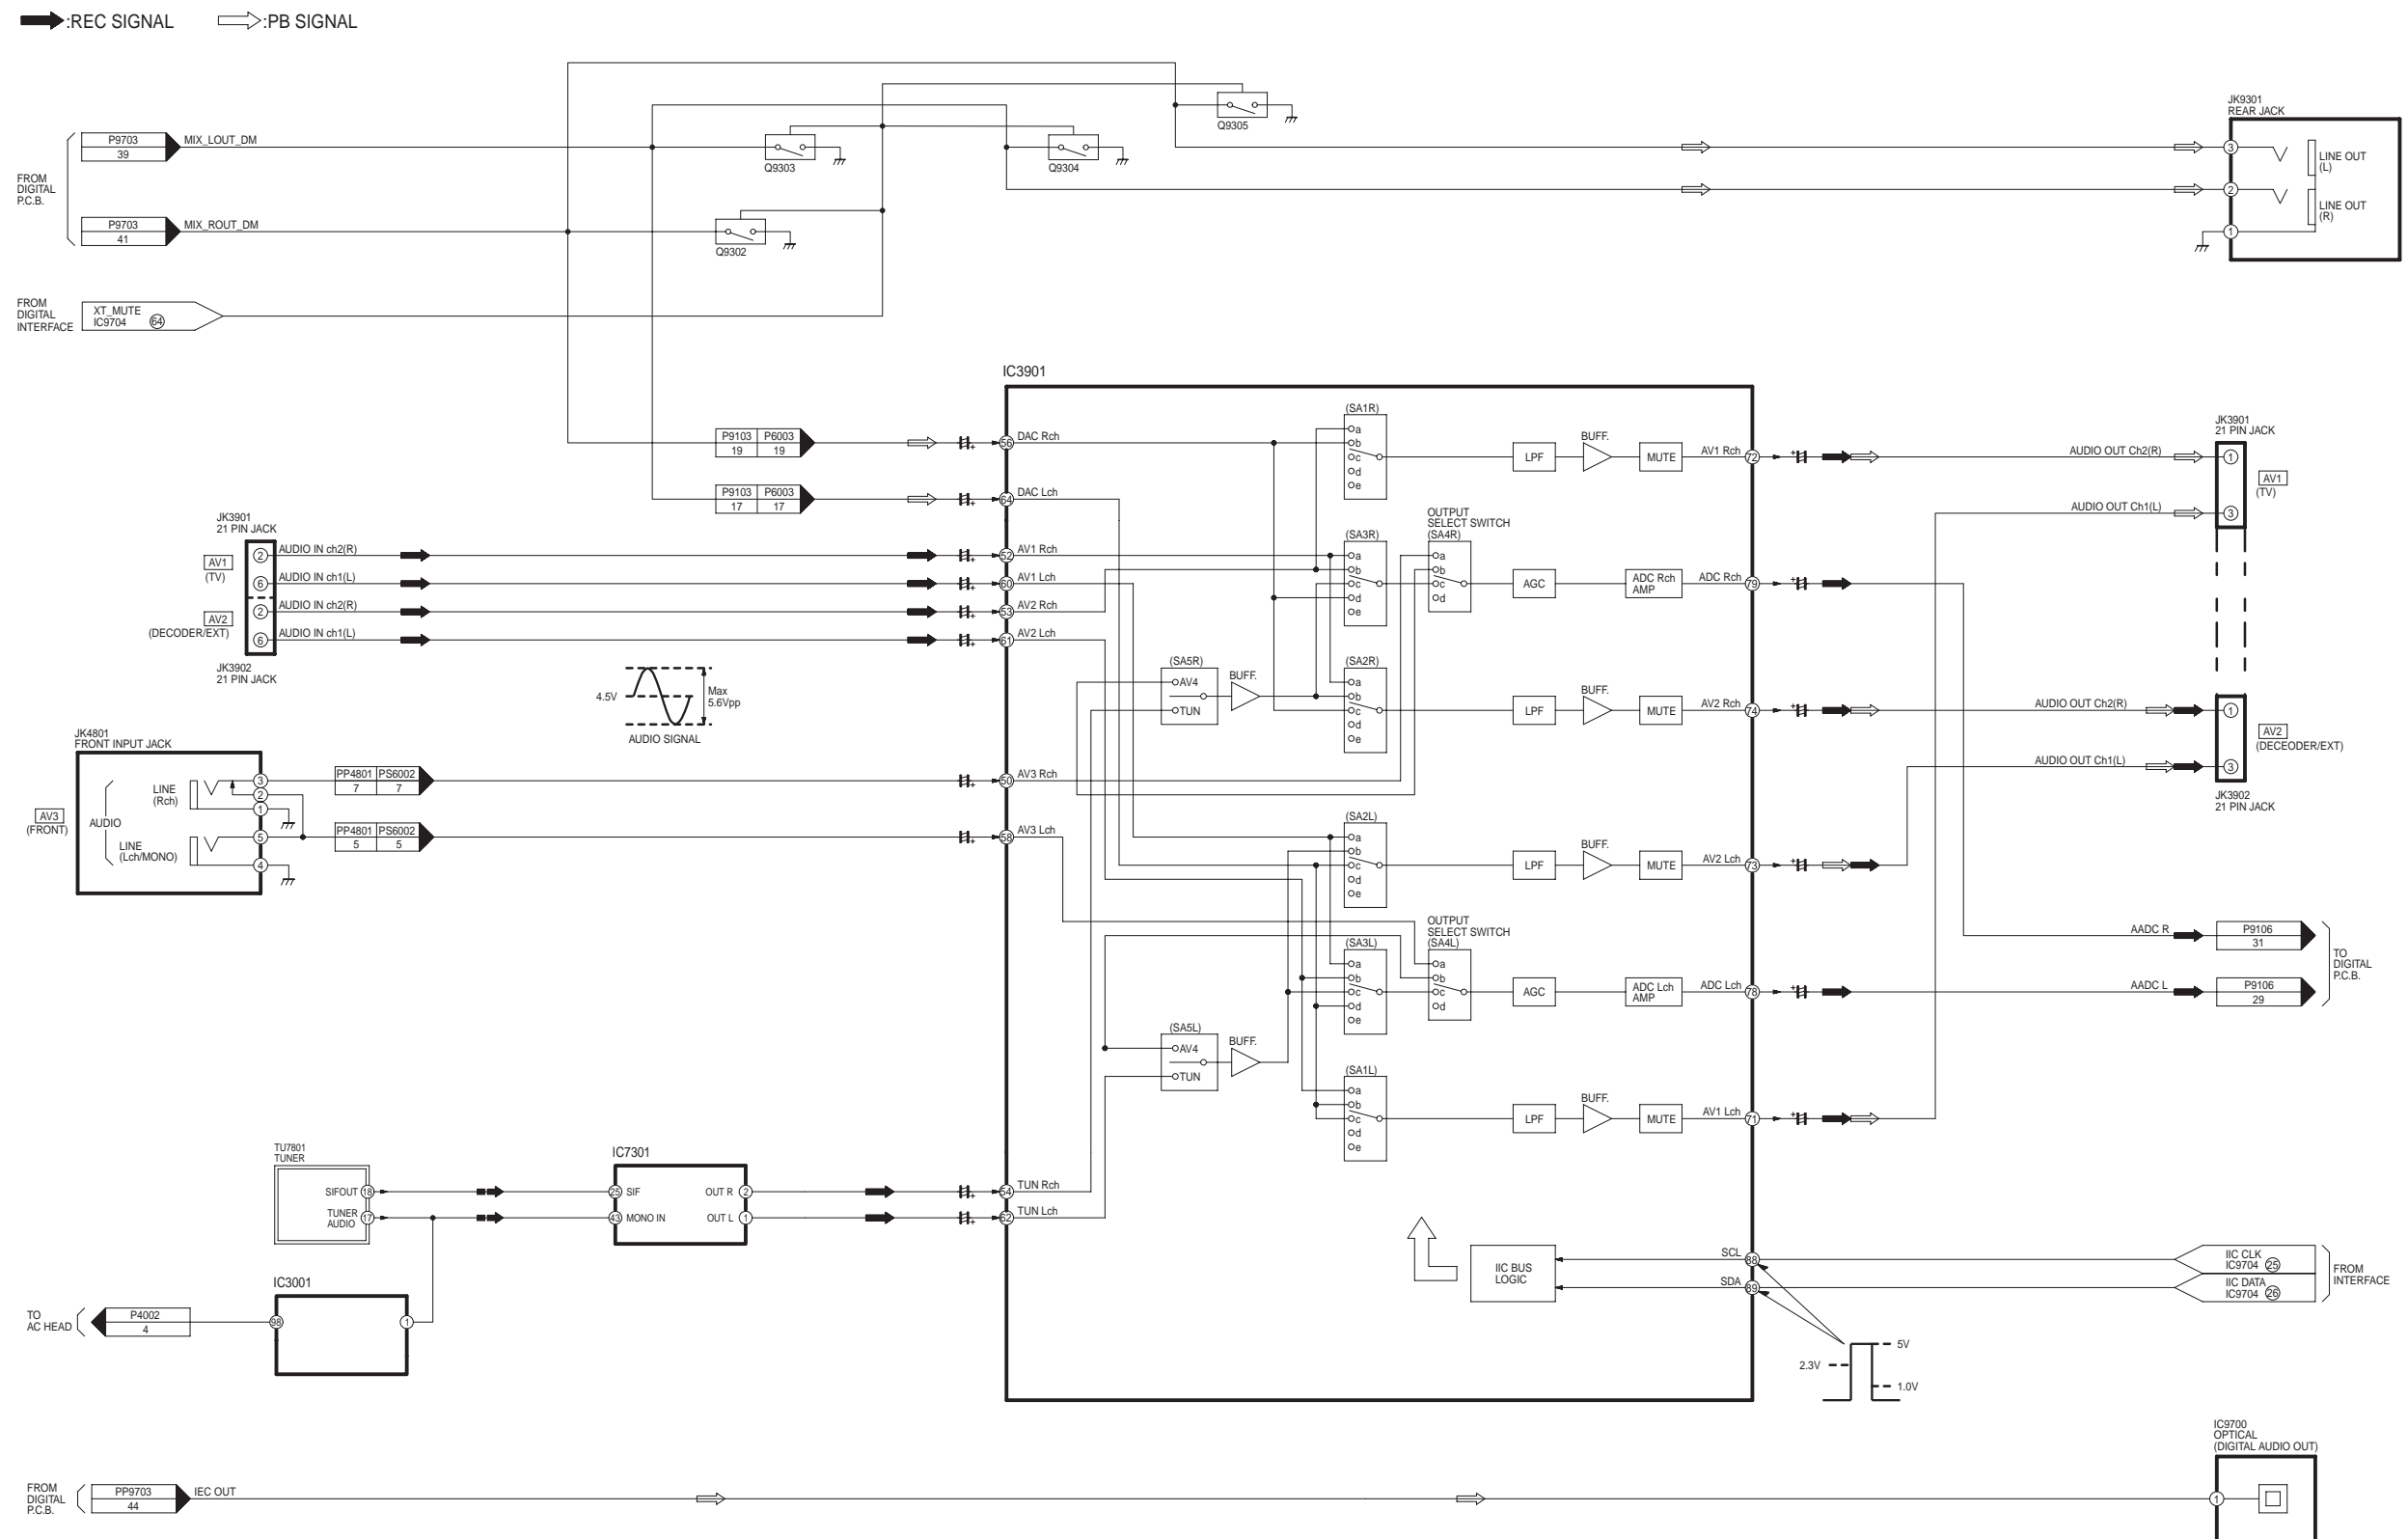

DMR-EZ45VEB
AUDIO
BLOCK DIAGRAM


12.4. VIDEO BLOCK DIAGRAM

← REC SIGNAL ← PB SIGNAL

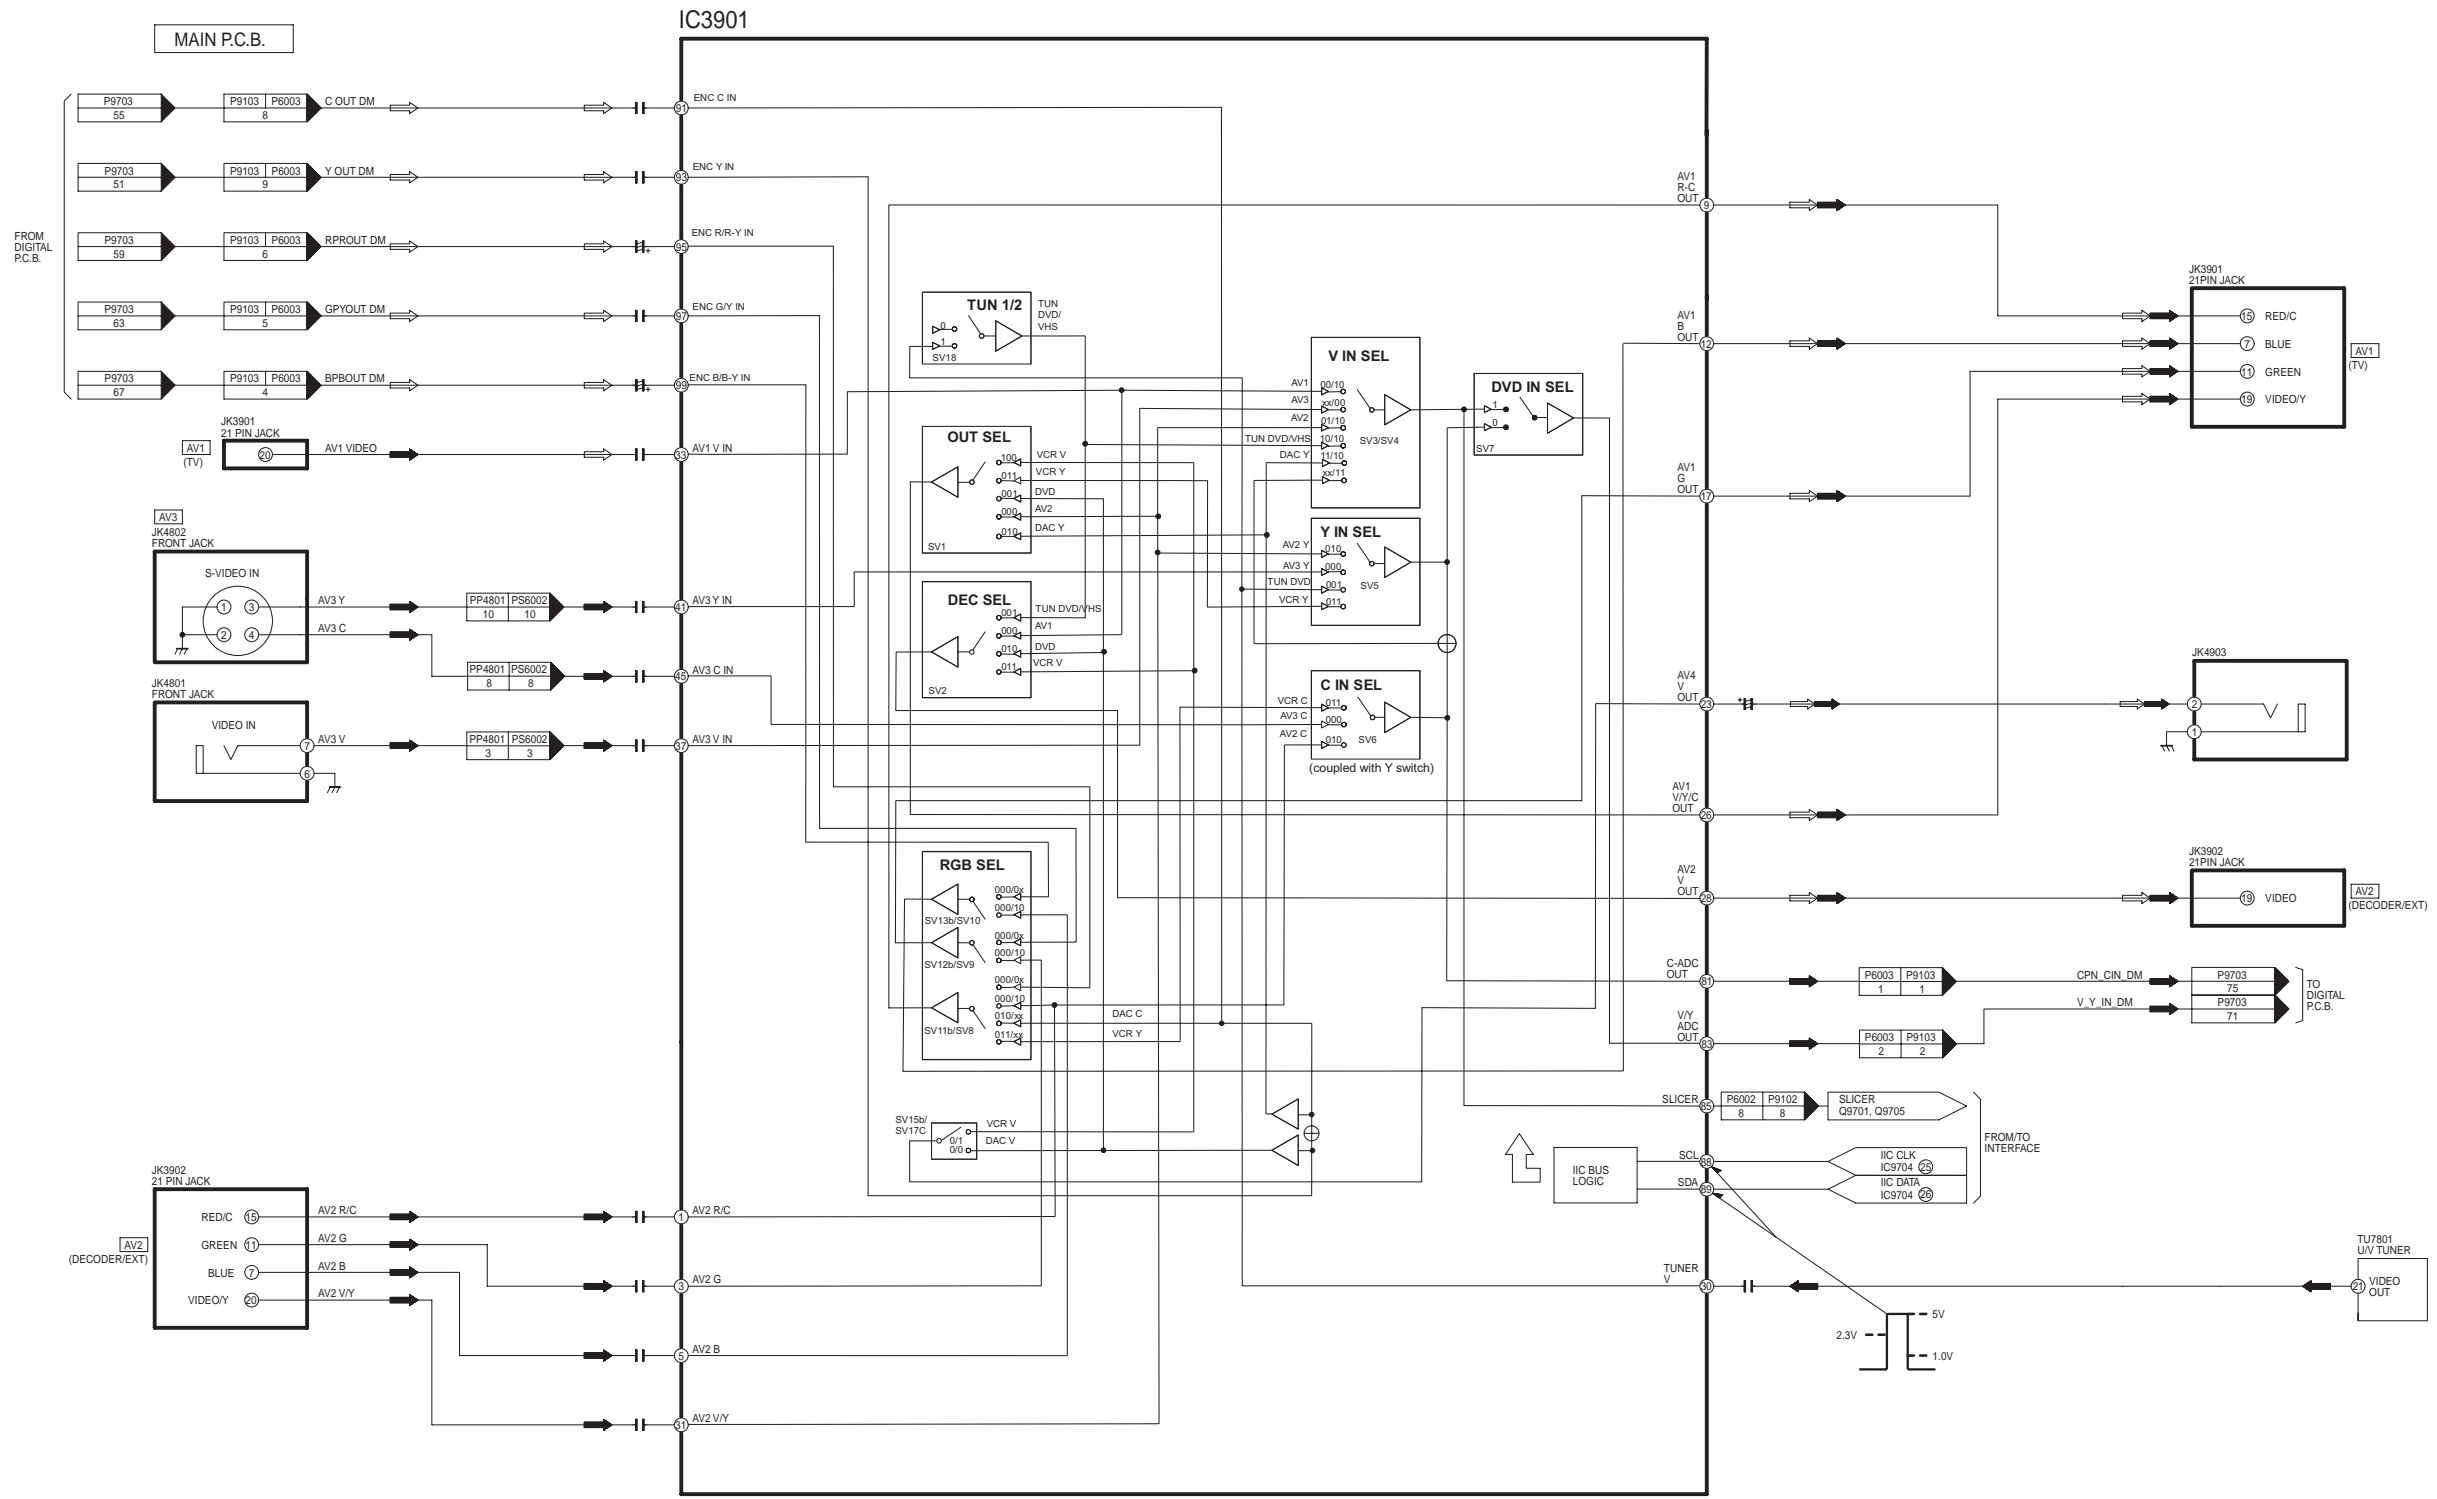


DMR-EZ45VEB
VIDEO 1/2
BLOCK DIAGRAM

← REC SIGNAL ← PB SIGNAL

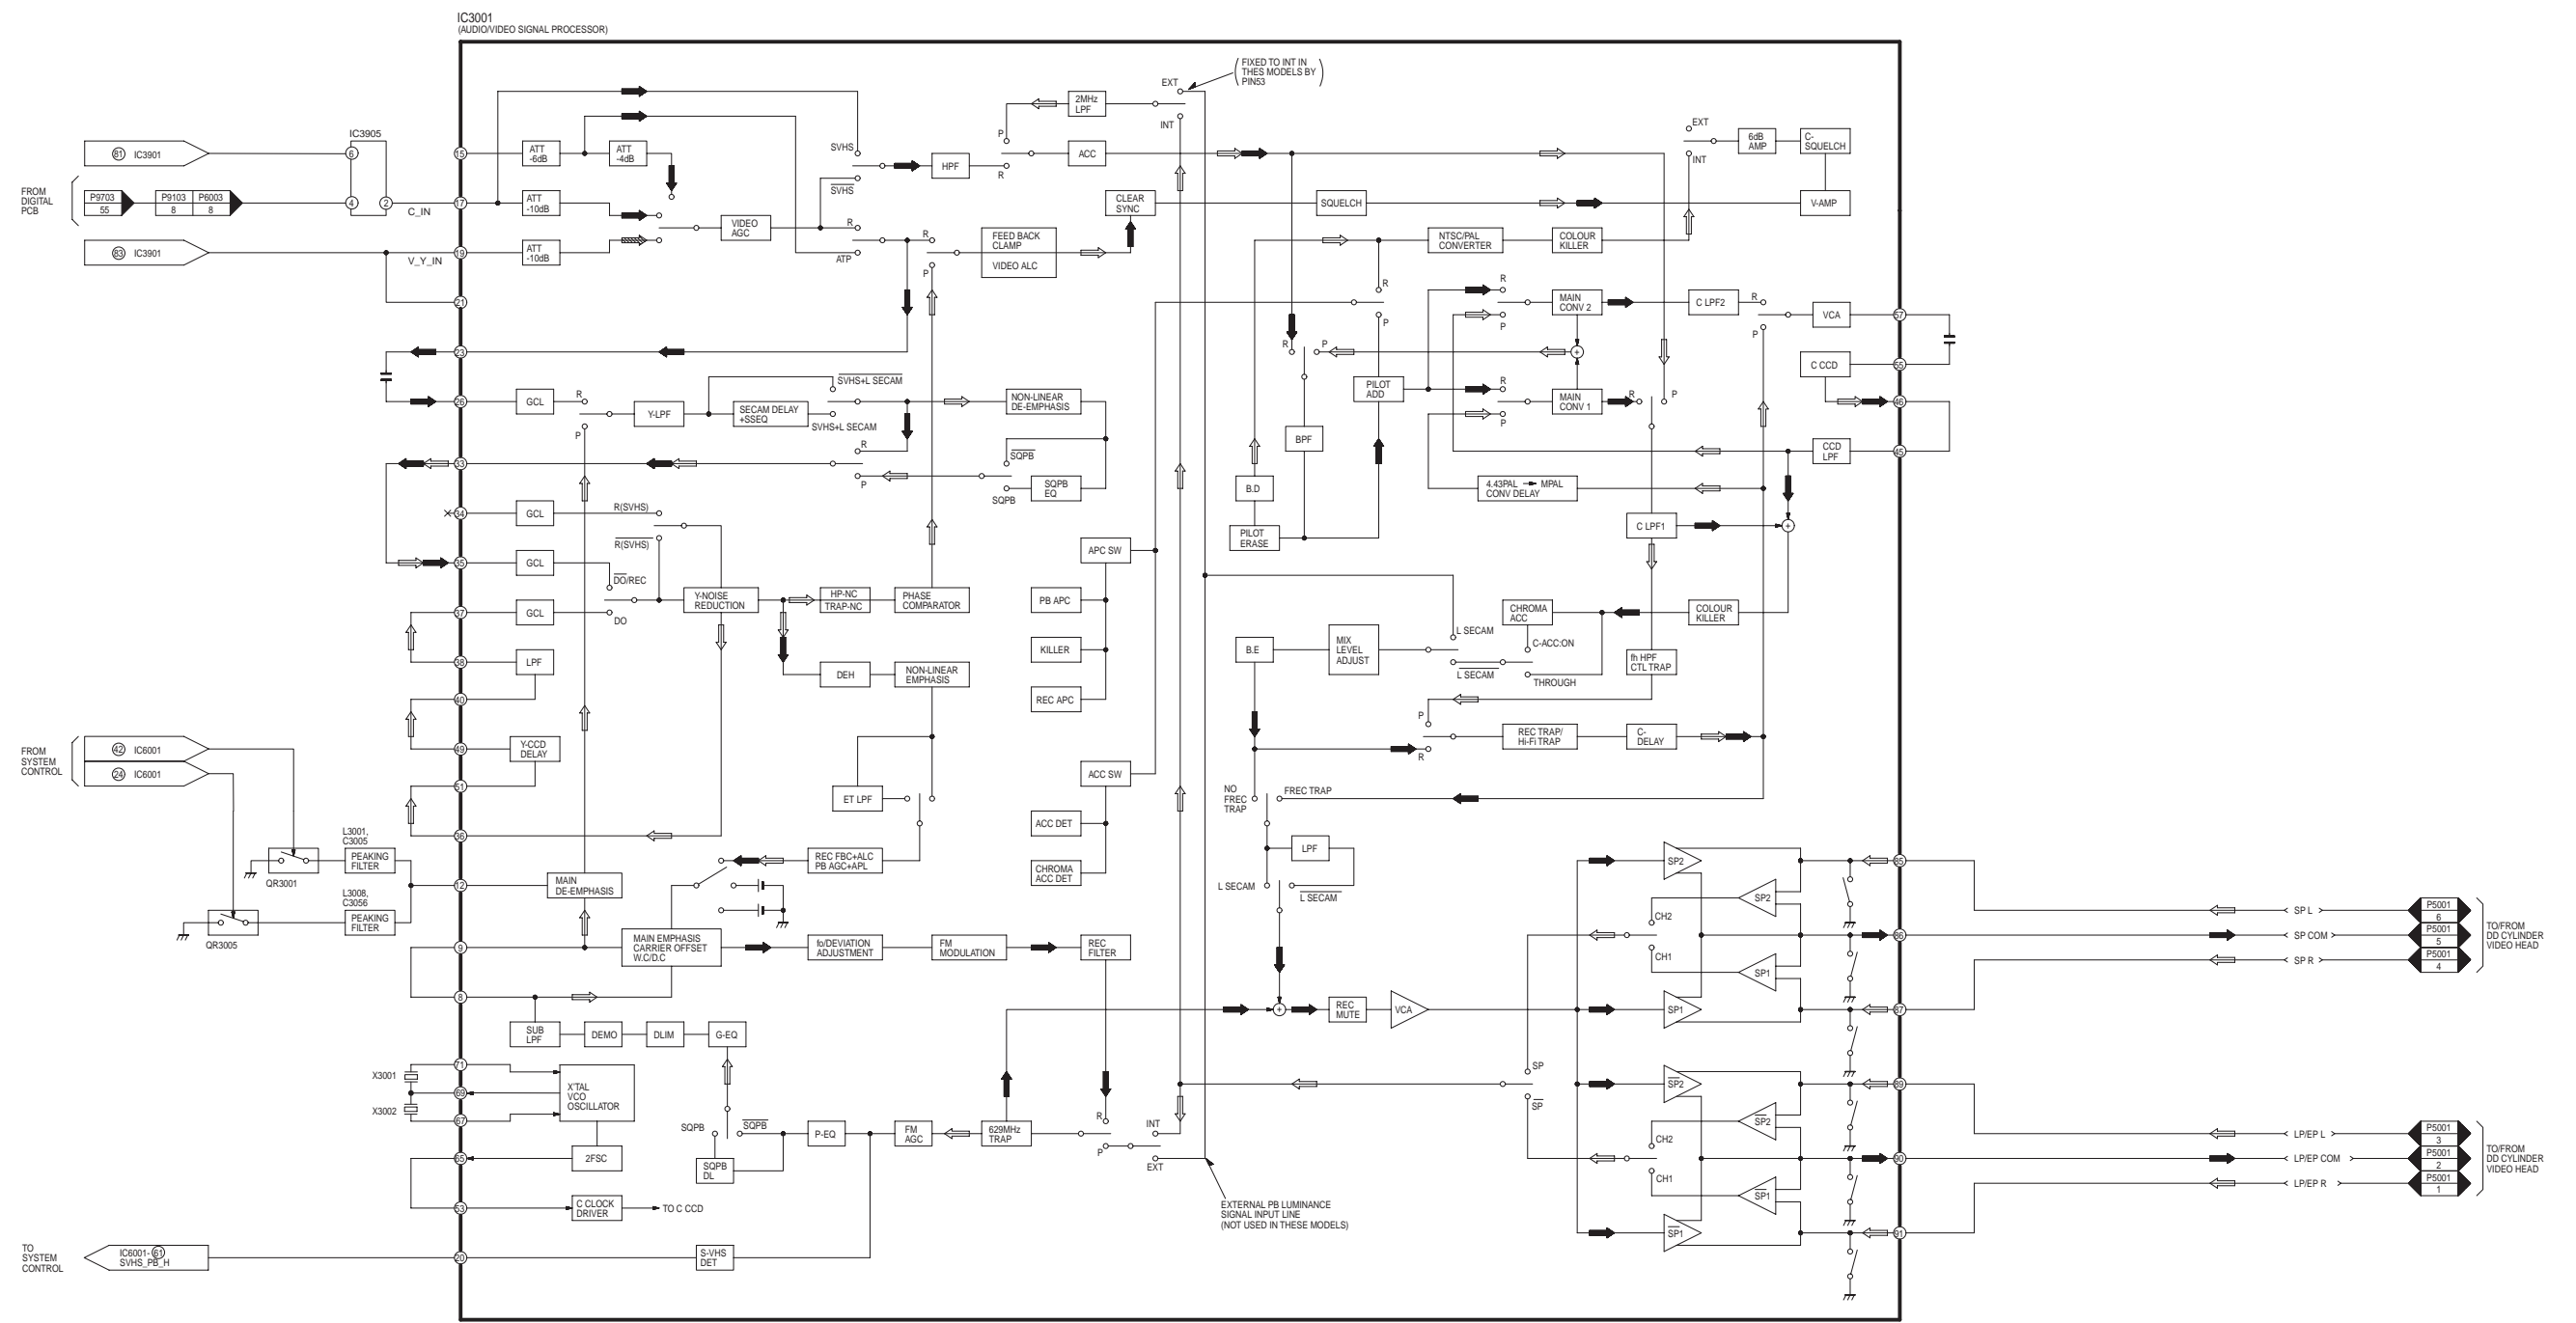


DMR-EZ45VEB
VIDEO 2/2
BLOCK DIAGRAM

12.5. DIGITAL I/F P.C.B. BLOCK DIAGRAM

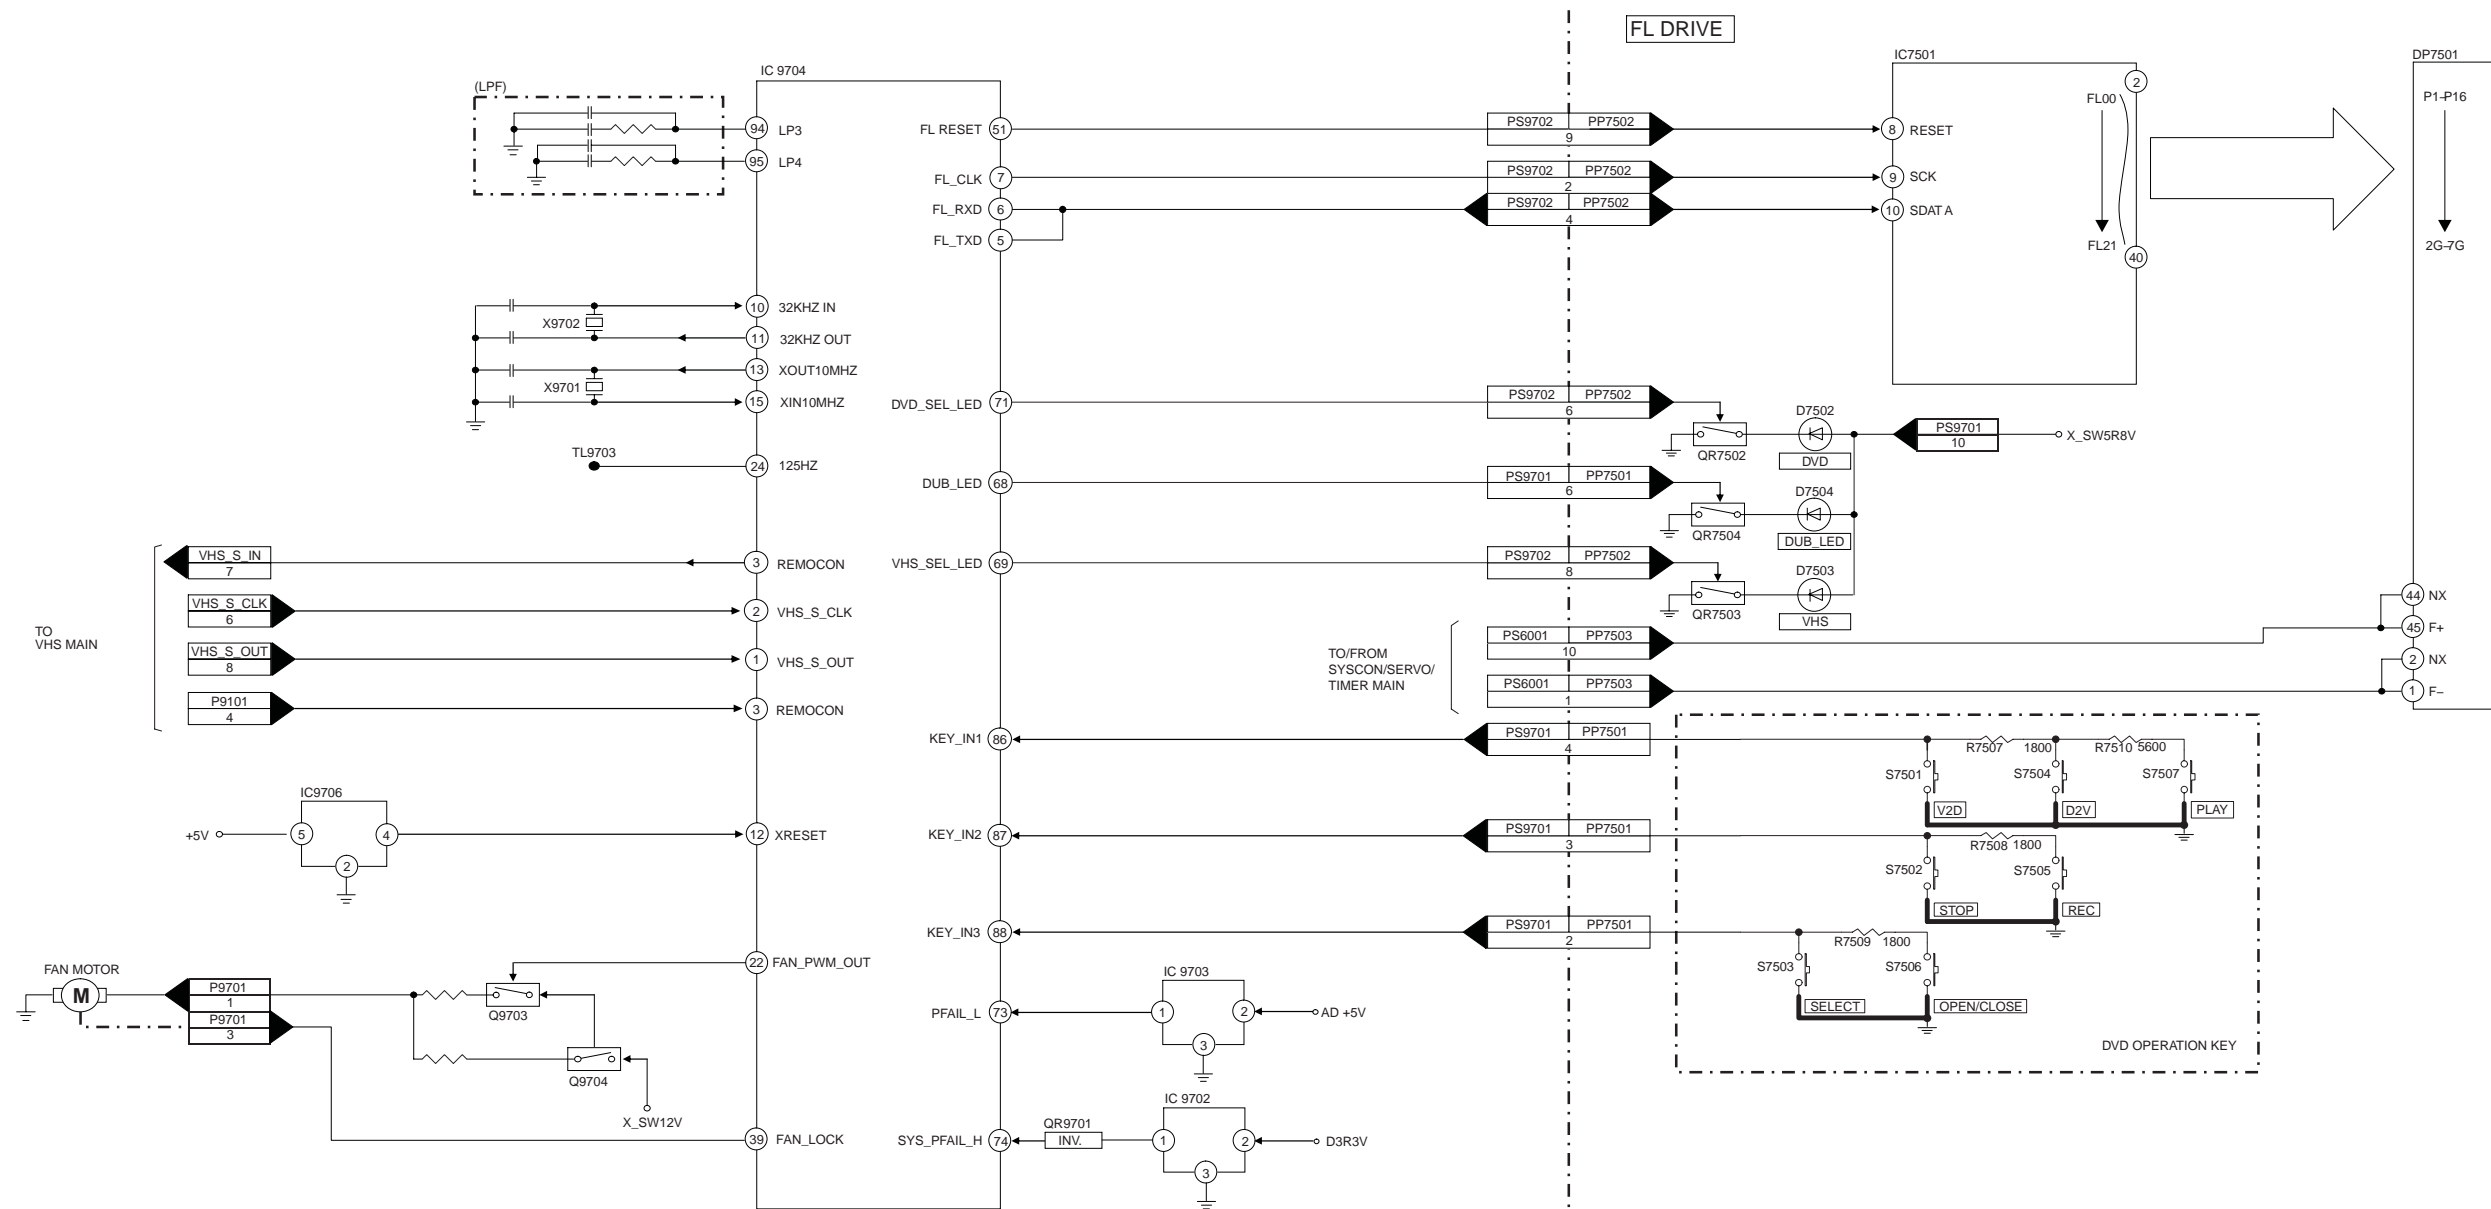

DMR-EZ45VEB
DIGITAL I/F PCB
BLOCK DIAGRAM


12.6. HDMI BLOCK DIAGRAM

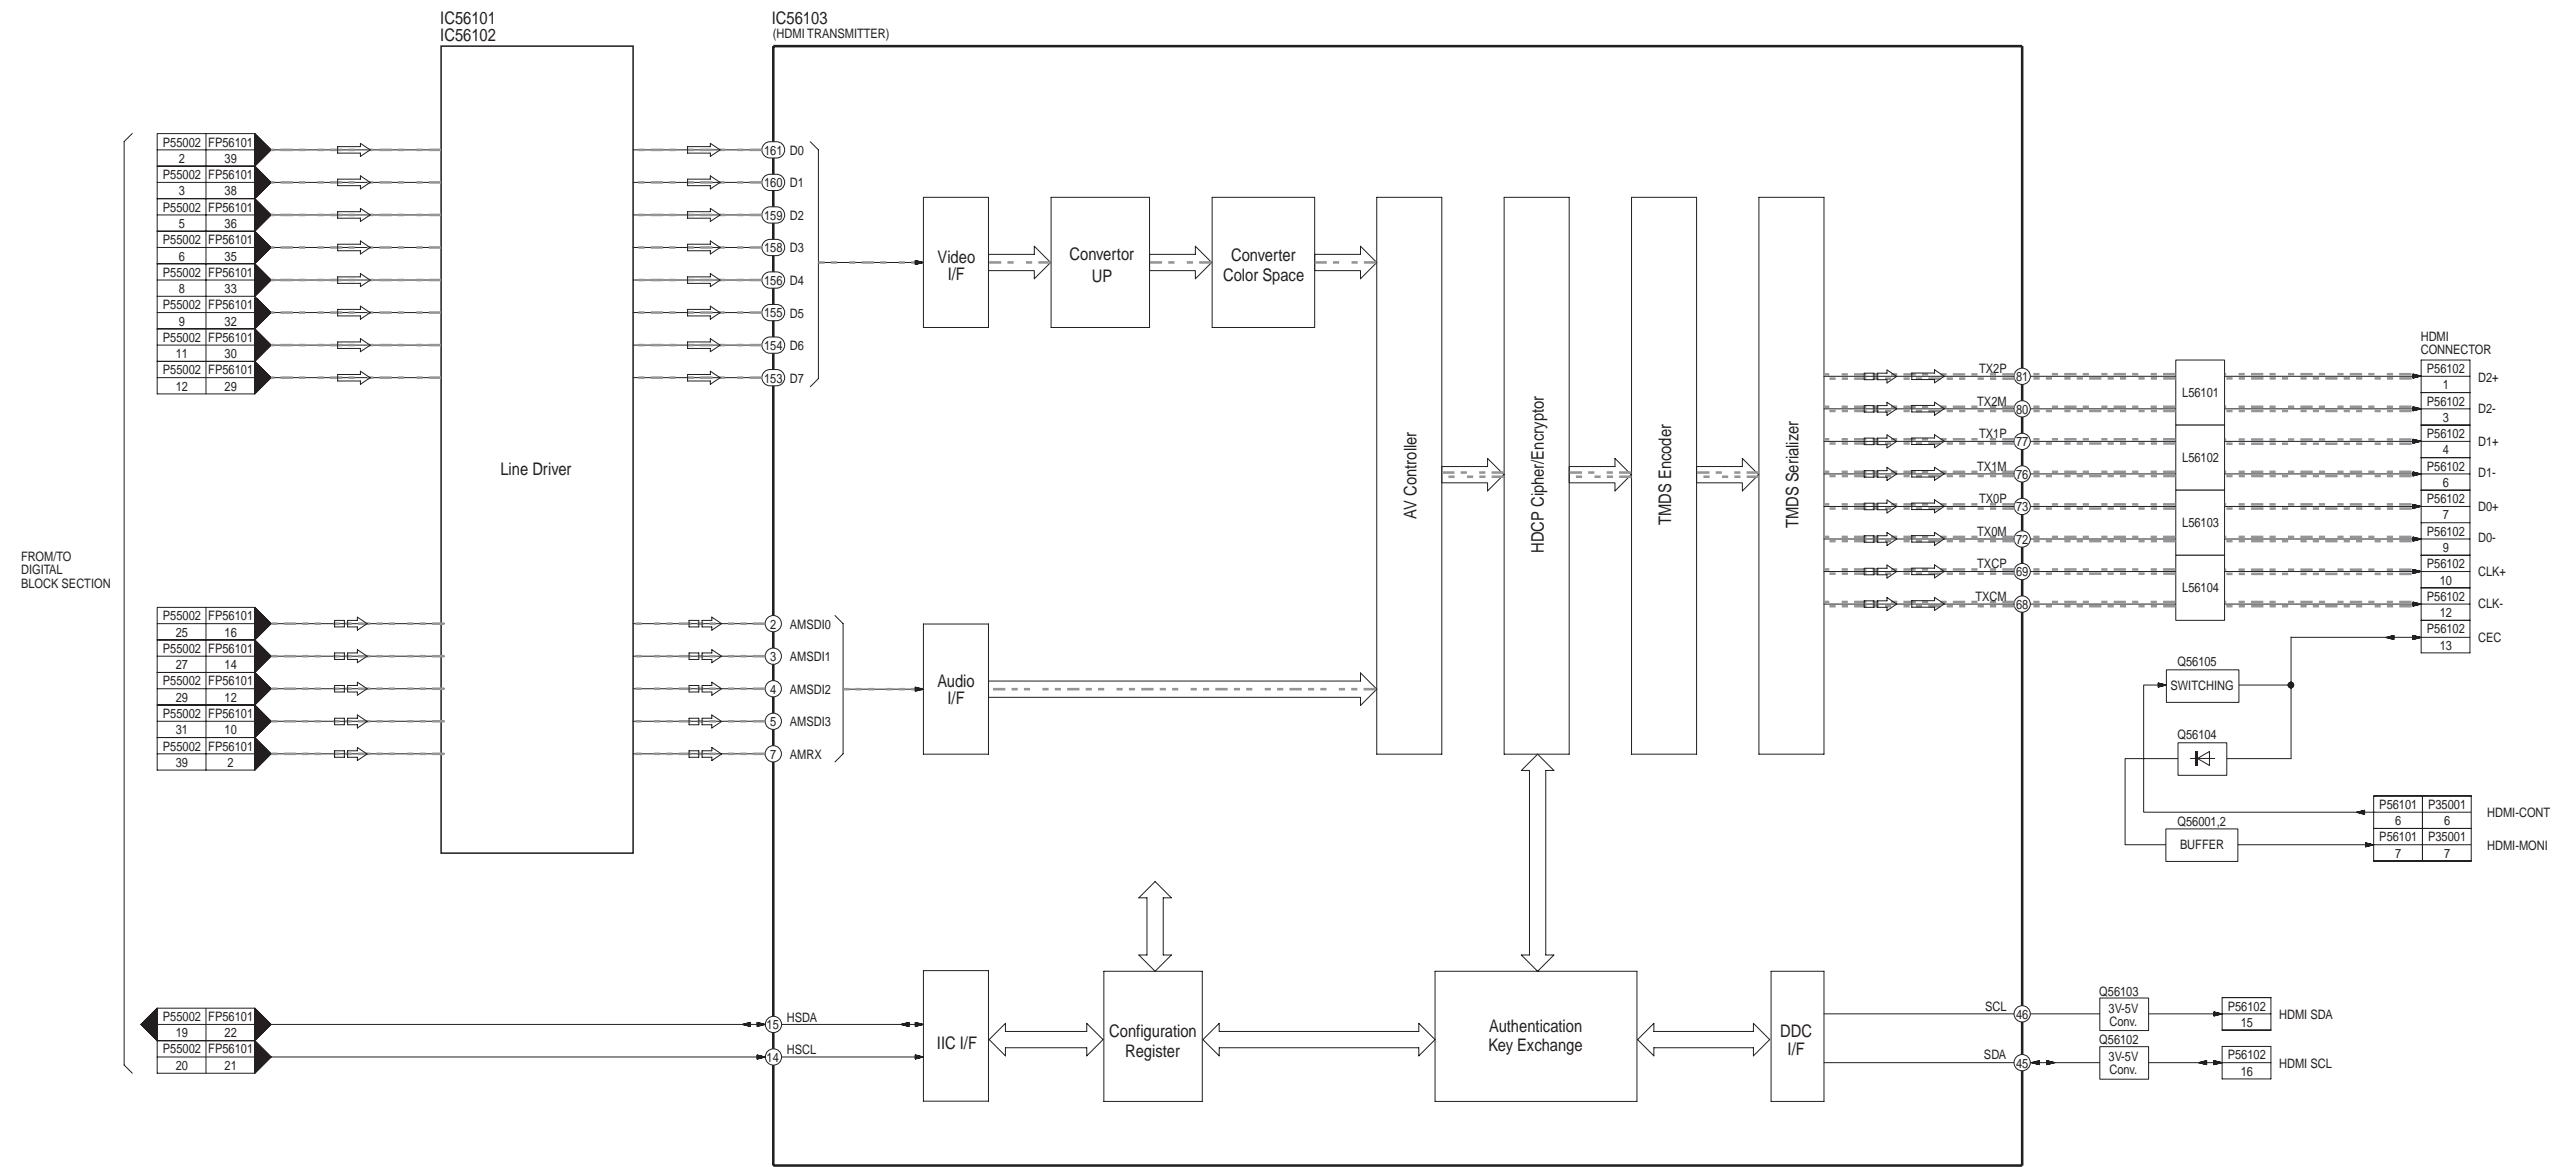


DMR-EZ45VEB
HDMI
BLOCK DIAGRAM

13 SCHEMATIC DIAGRAM


13.1. INTERCONNECTION DIAGRAM

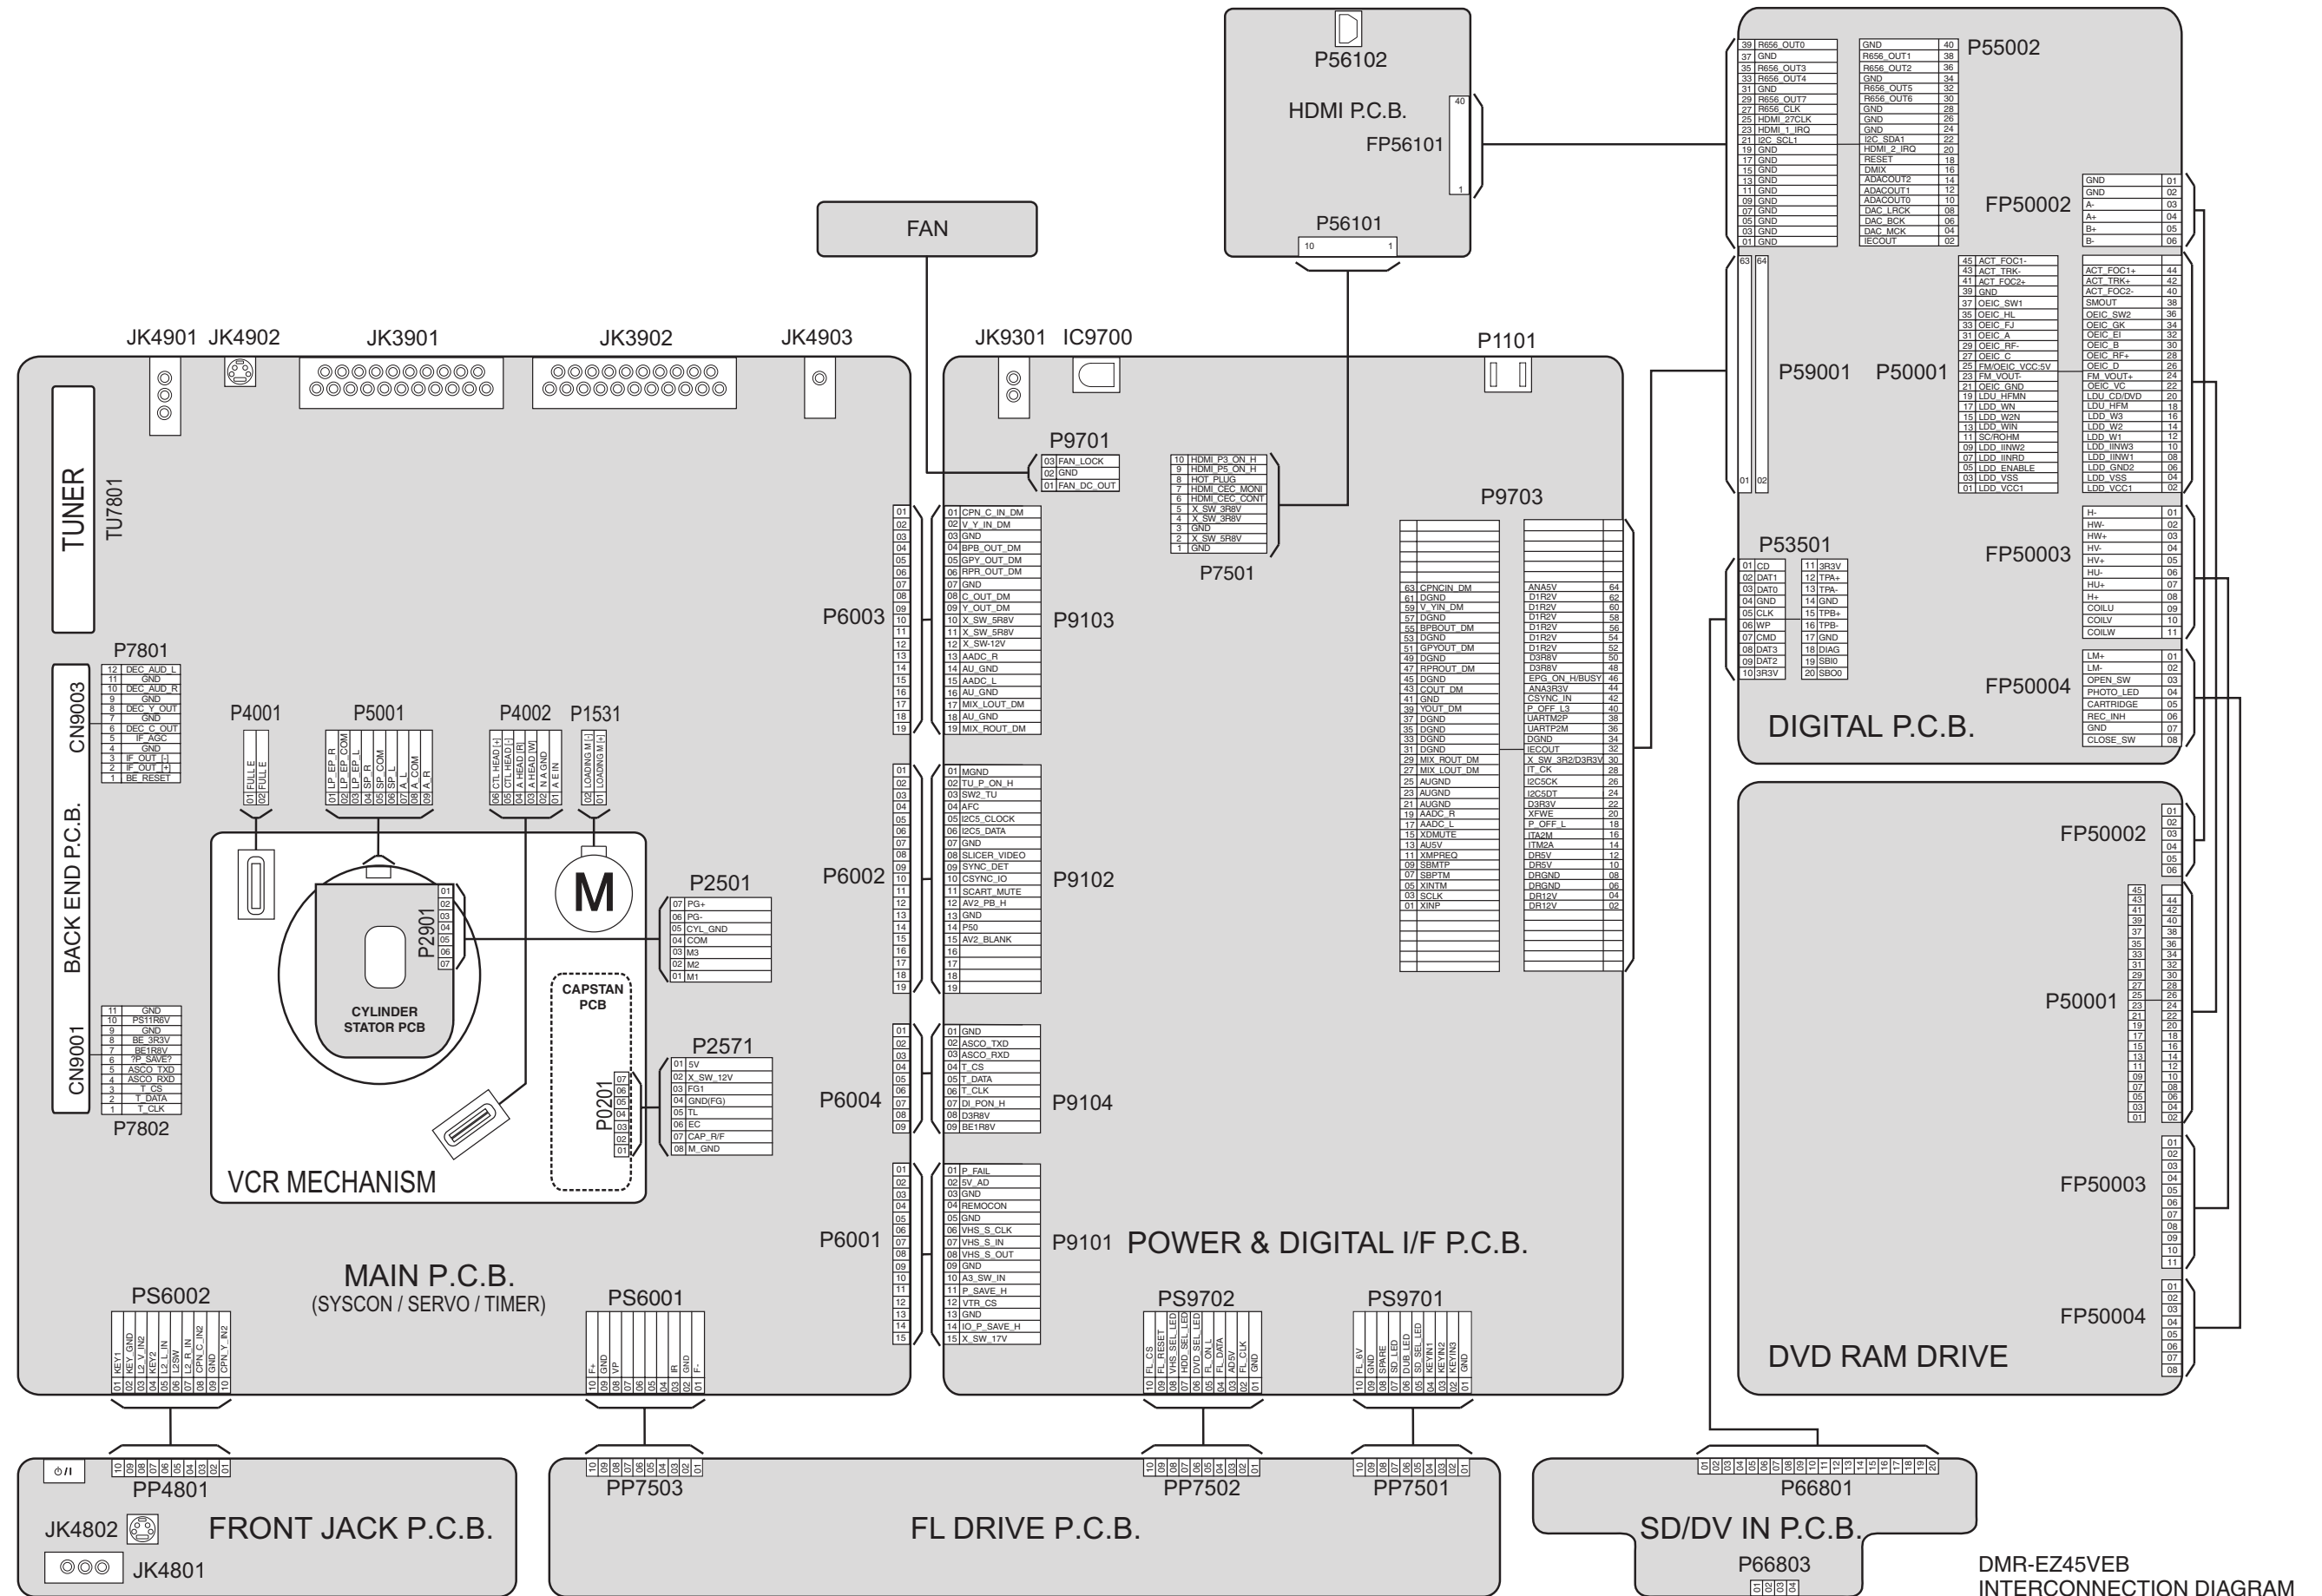

13.2. POWER SUPPLY

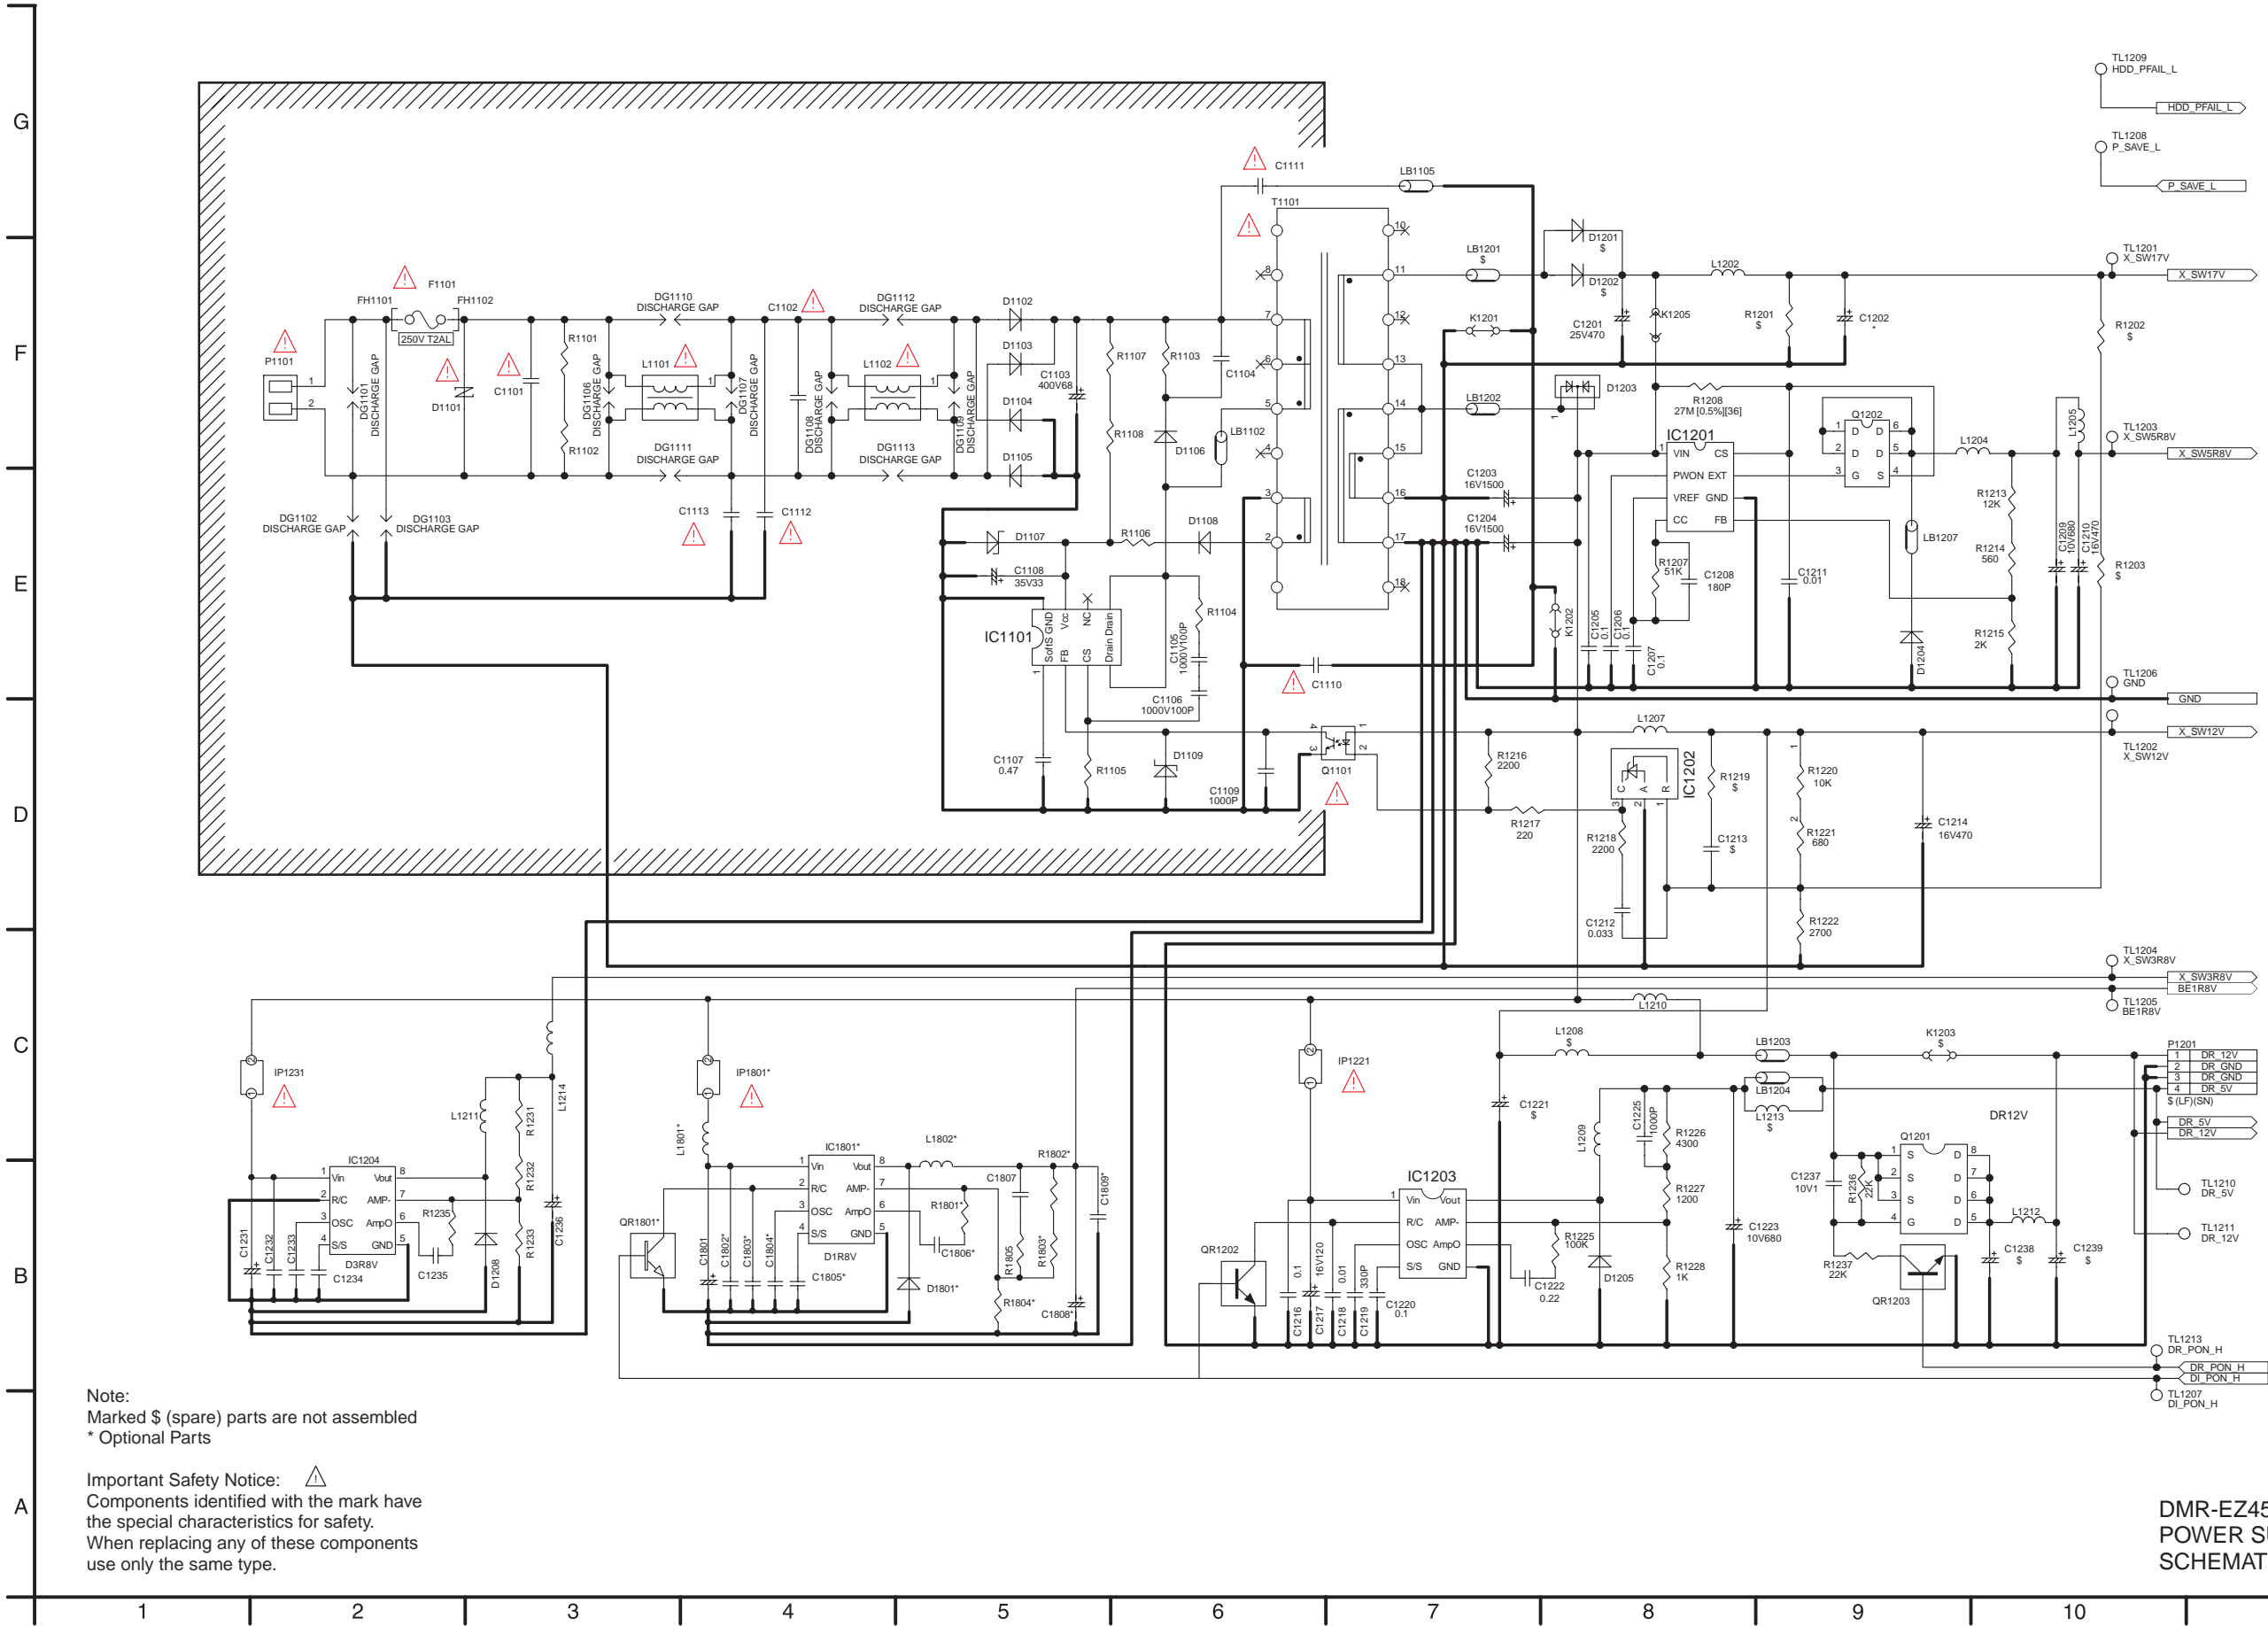


Note:
 Marked \$ (spare) parts are not assembled
 * Optional Parts

Important Safety Notice: 
 Components identified with the mark have the special characteristics for safety.
 When replacing any of these components use only the same type.

DMR-EZ45VEB
 POWER SUPPLY
 SCHEMATIC DIAGRAM


13.3. DIGITAL I/F

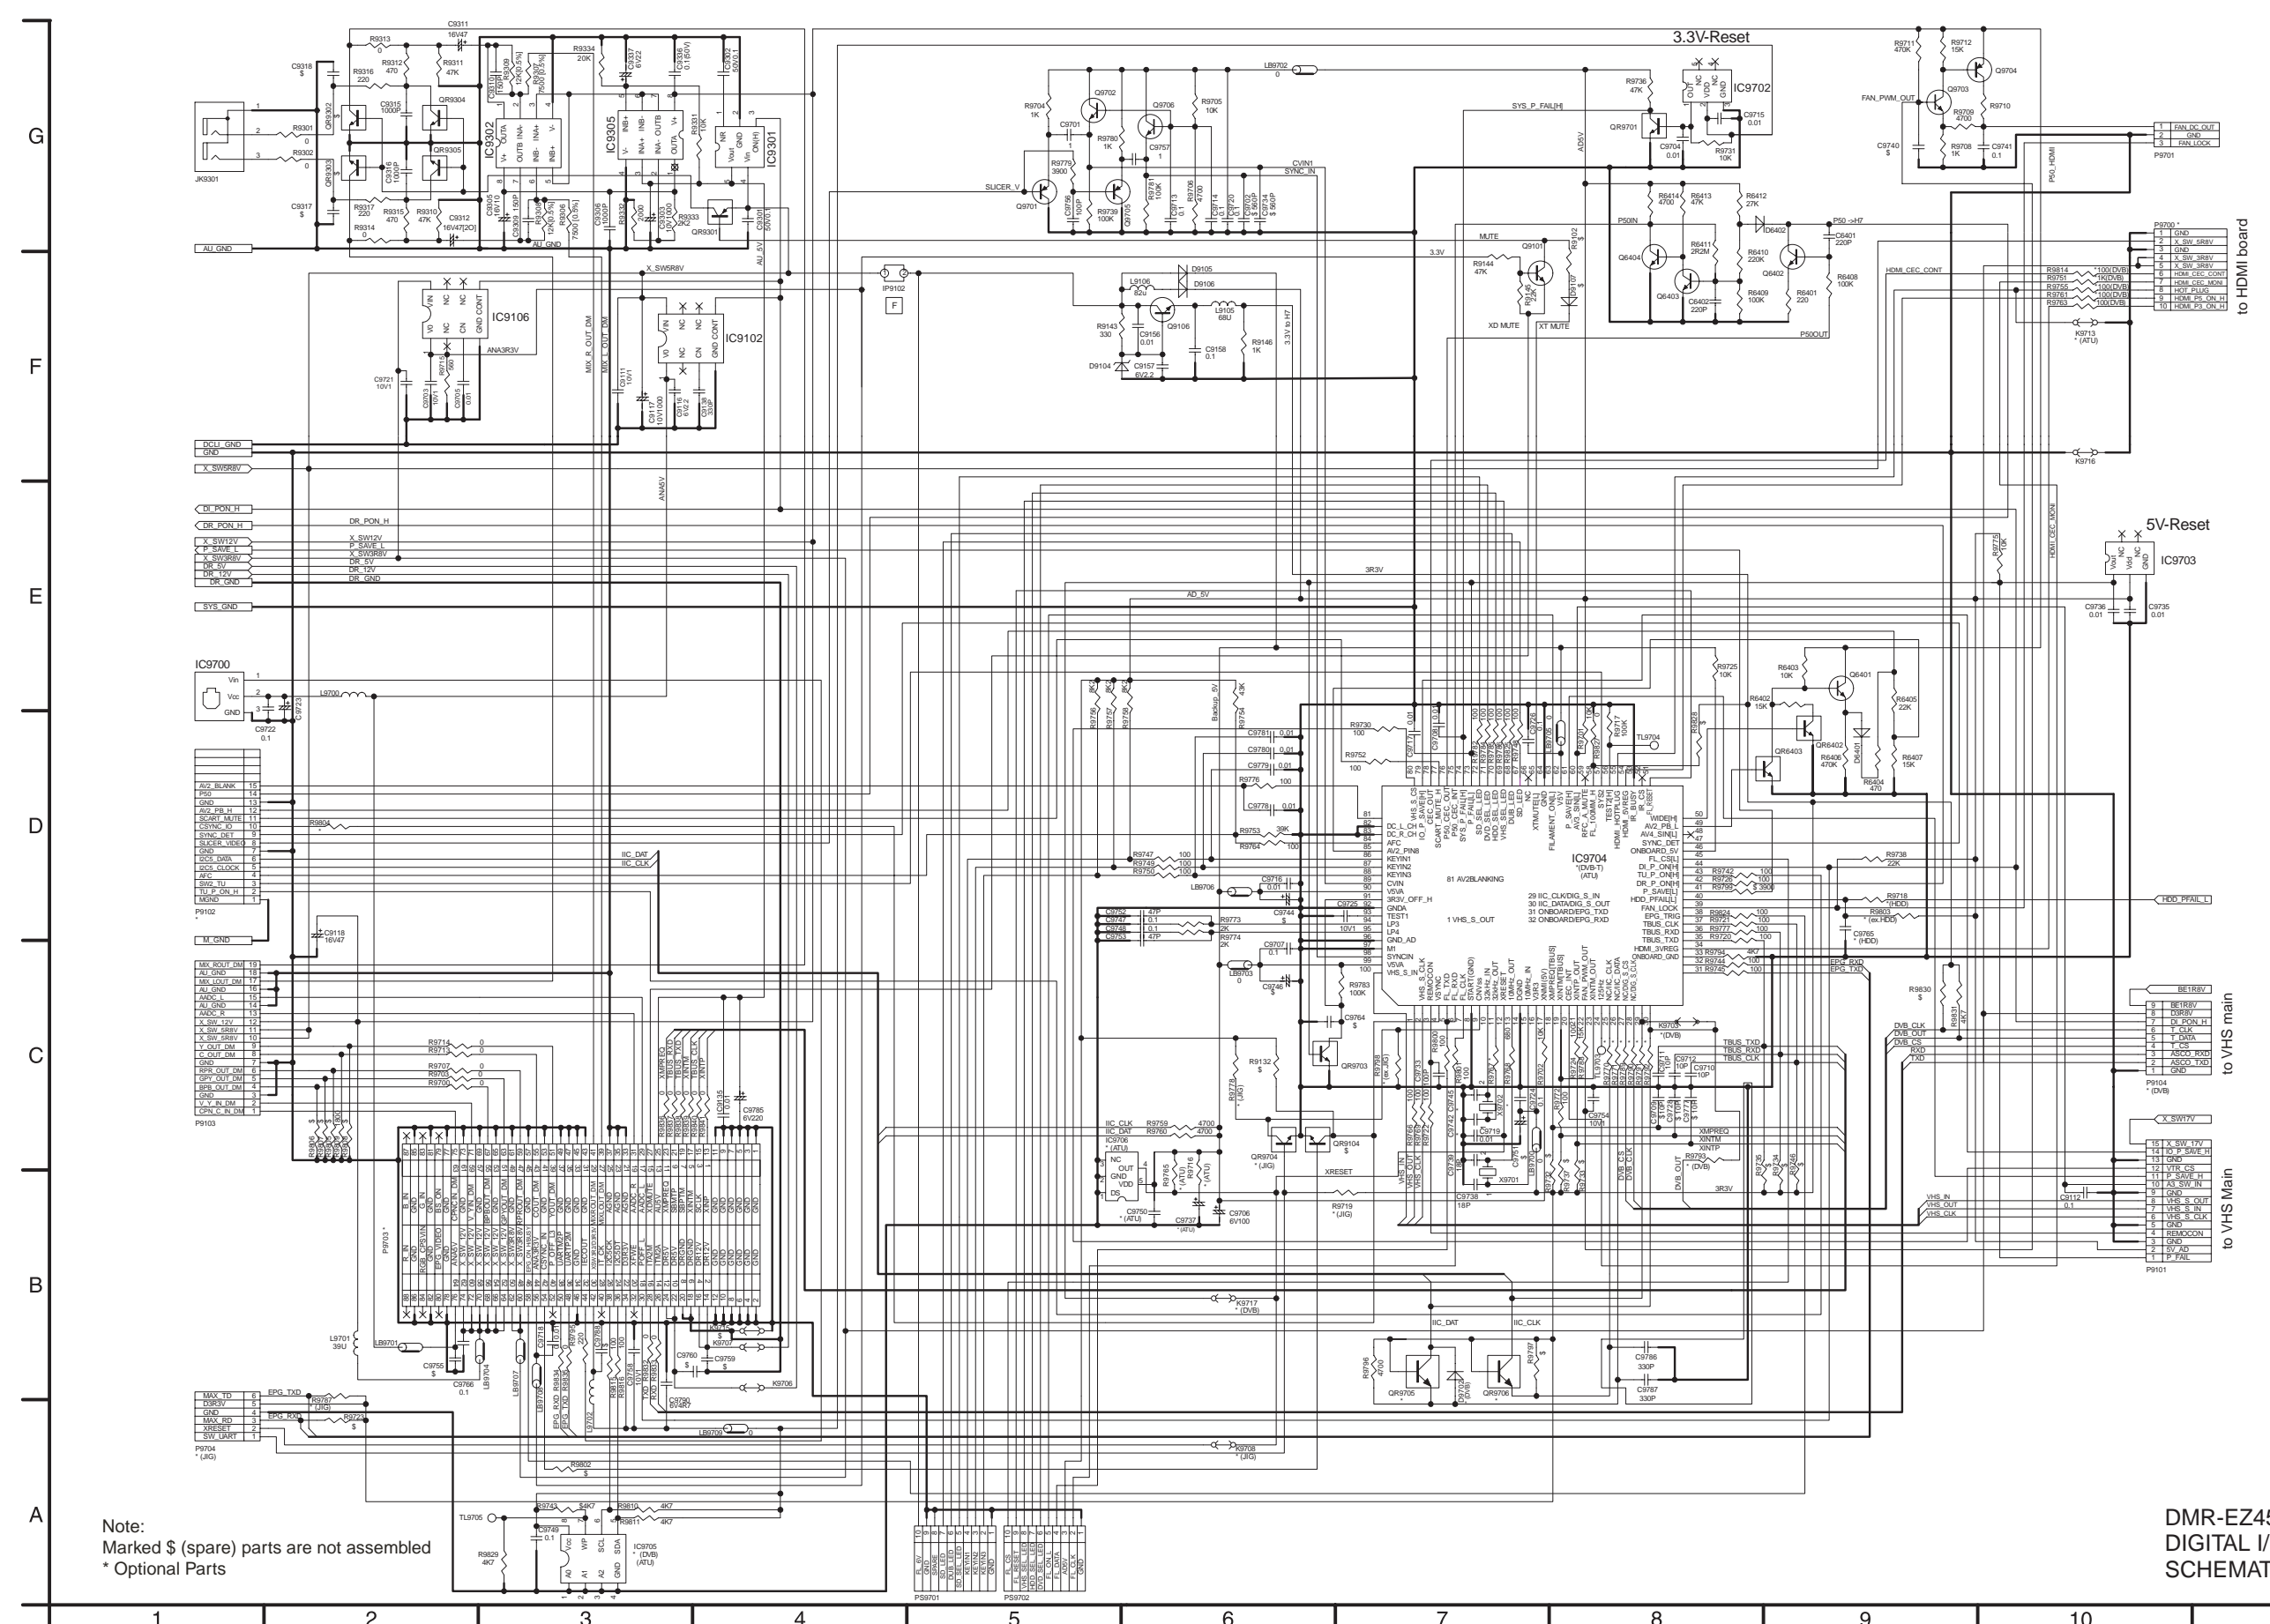

Note:
 Marked \$ (spare) parts are not assembled
 * Optional Parts

DMR-EZ45VEB
 DIGITAL I/F
 SCHEMATIC DIAGRAM


13.4. IO / TUNER

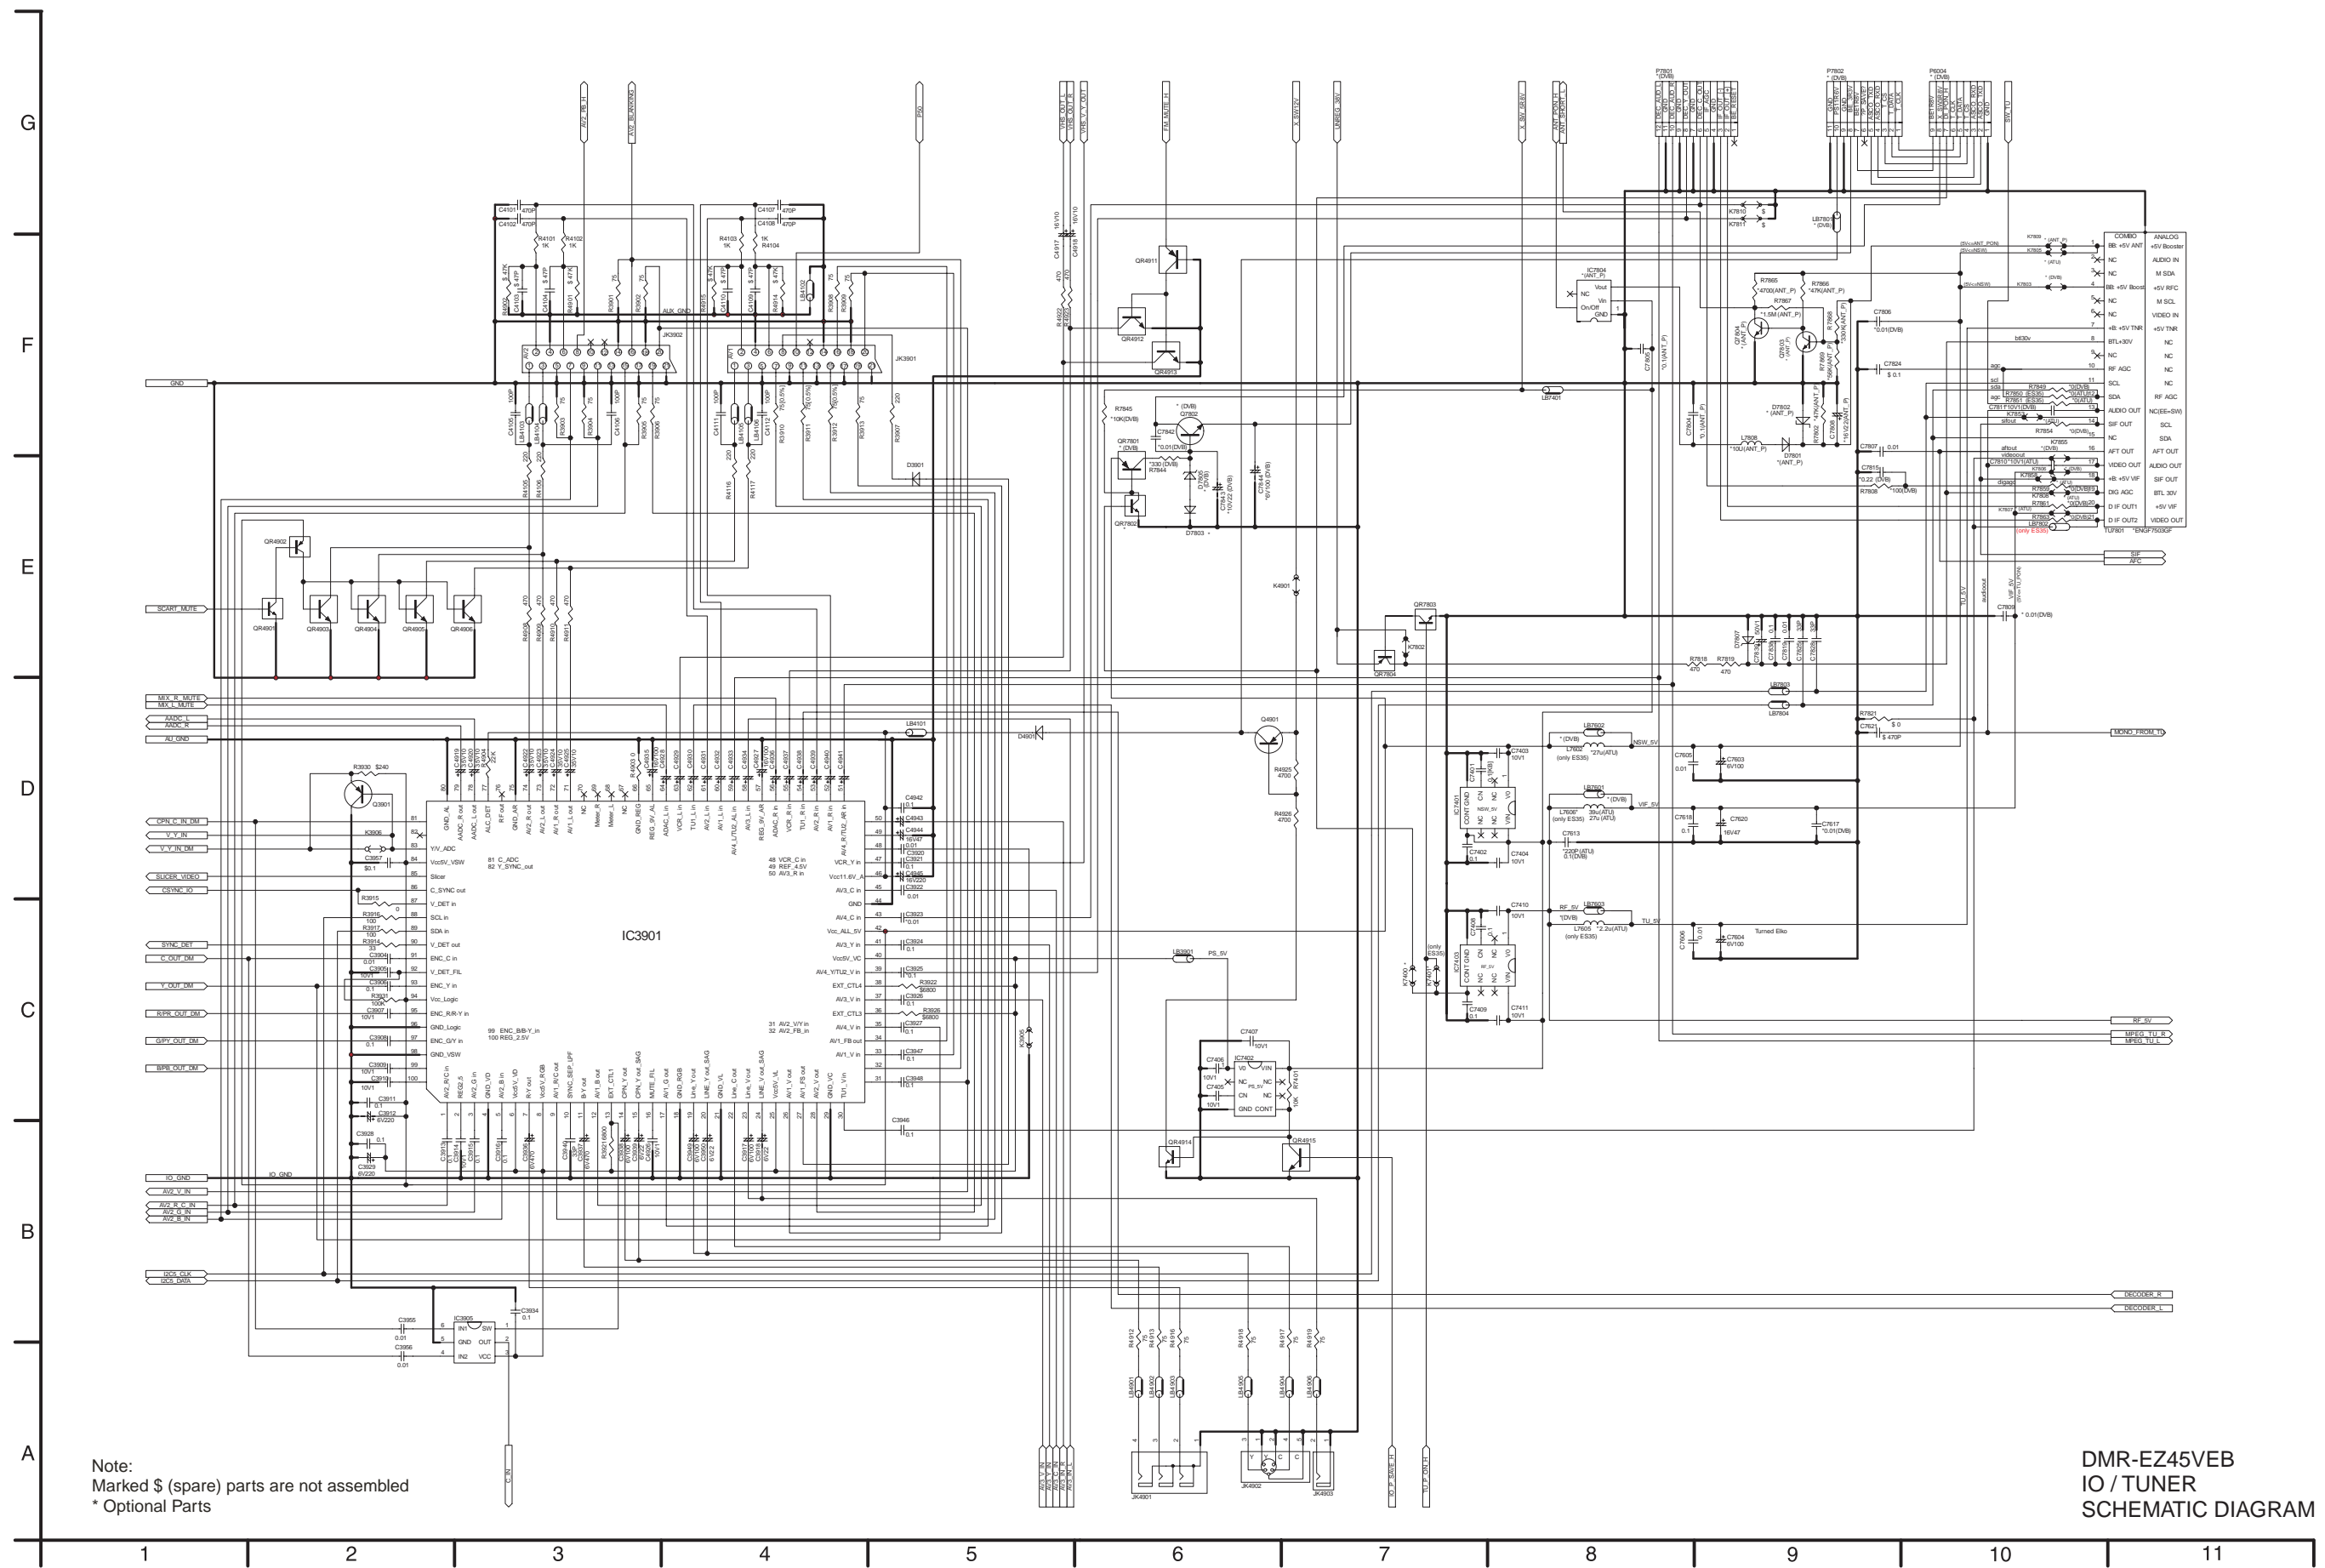


Note:
 Marked \$ (spare) parts are not assembled
 * Optional Parts

DMR-EZ45VEB
 IO / TUNER
 SCHEMATIC DIAGRAM

13.5. SYSCON / SERVO / TIMER MAIN

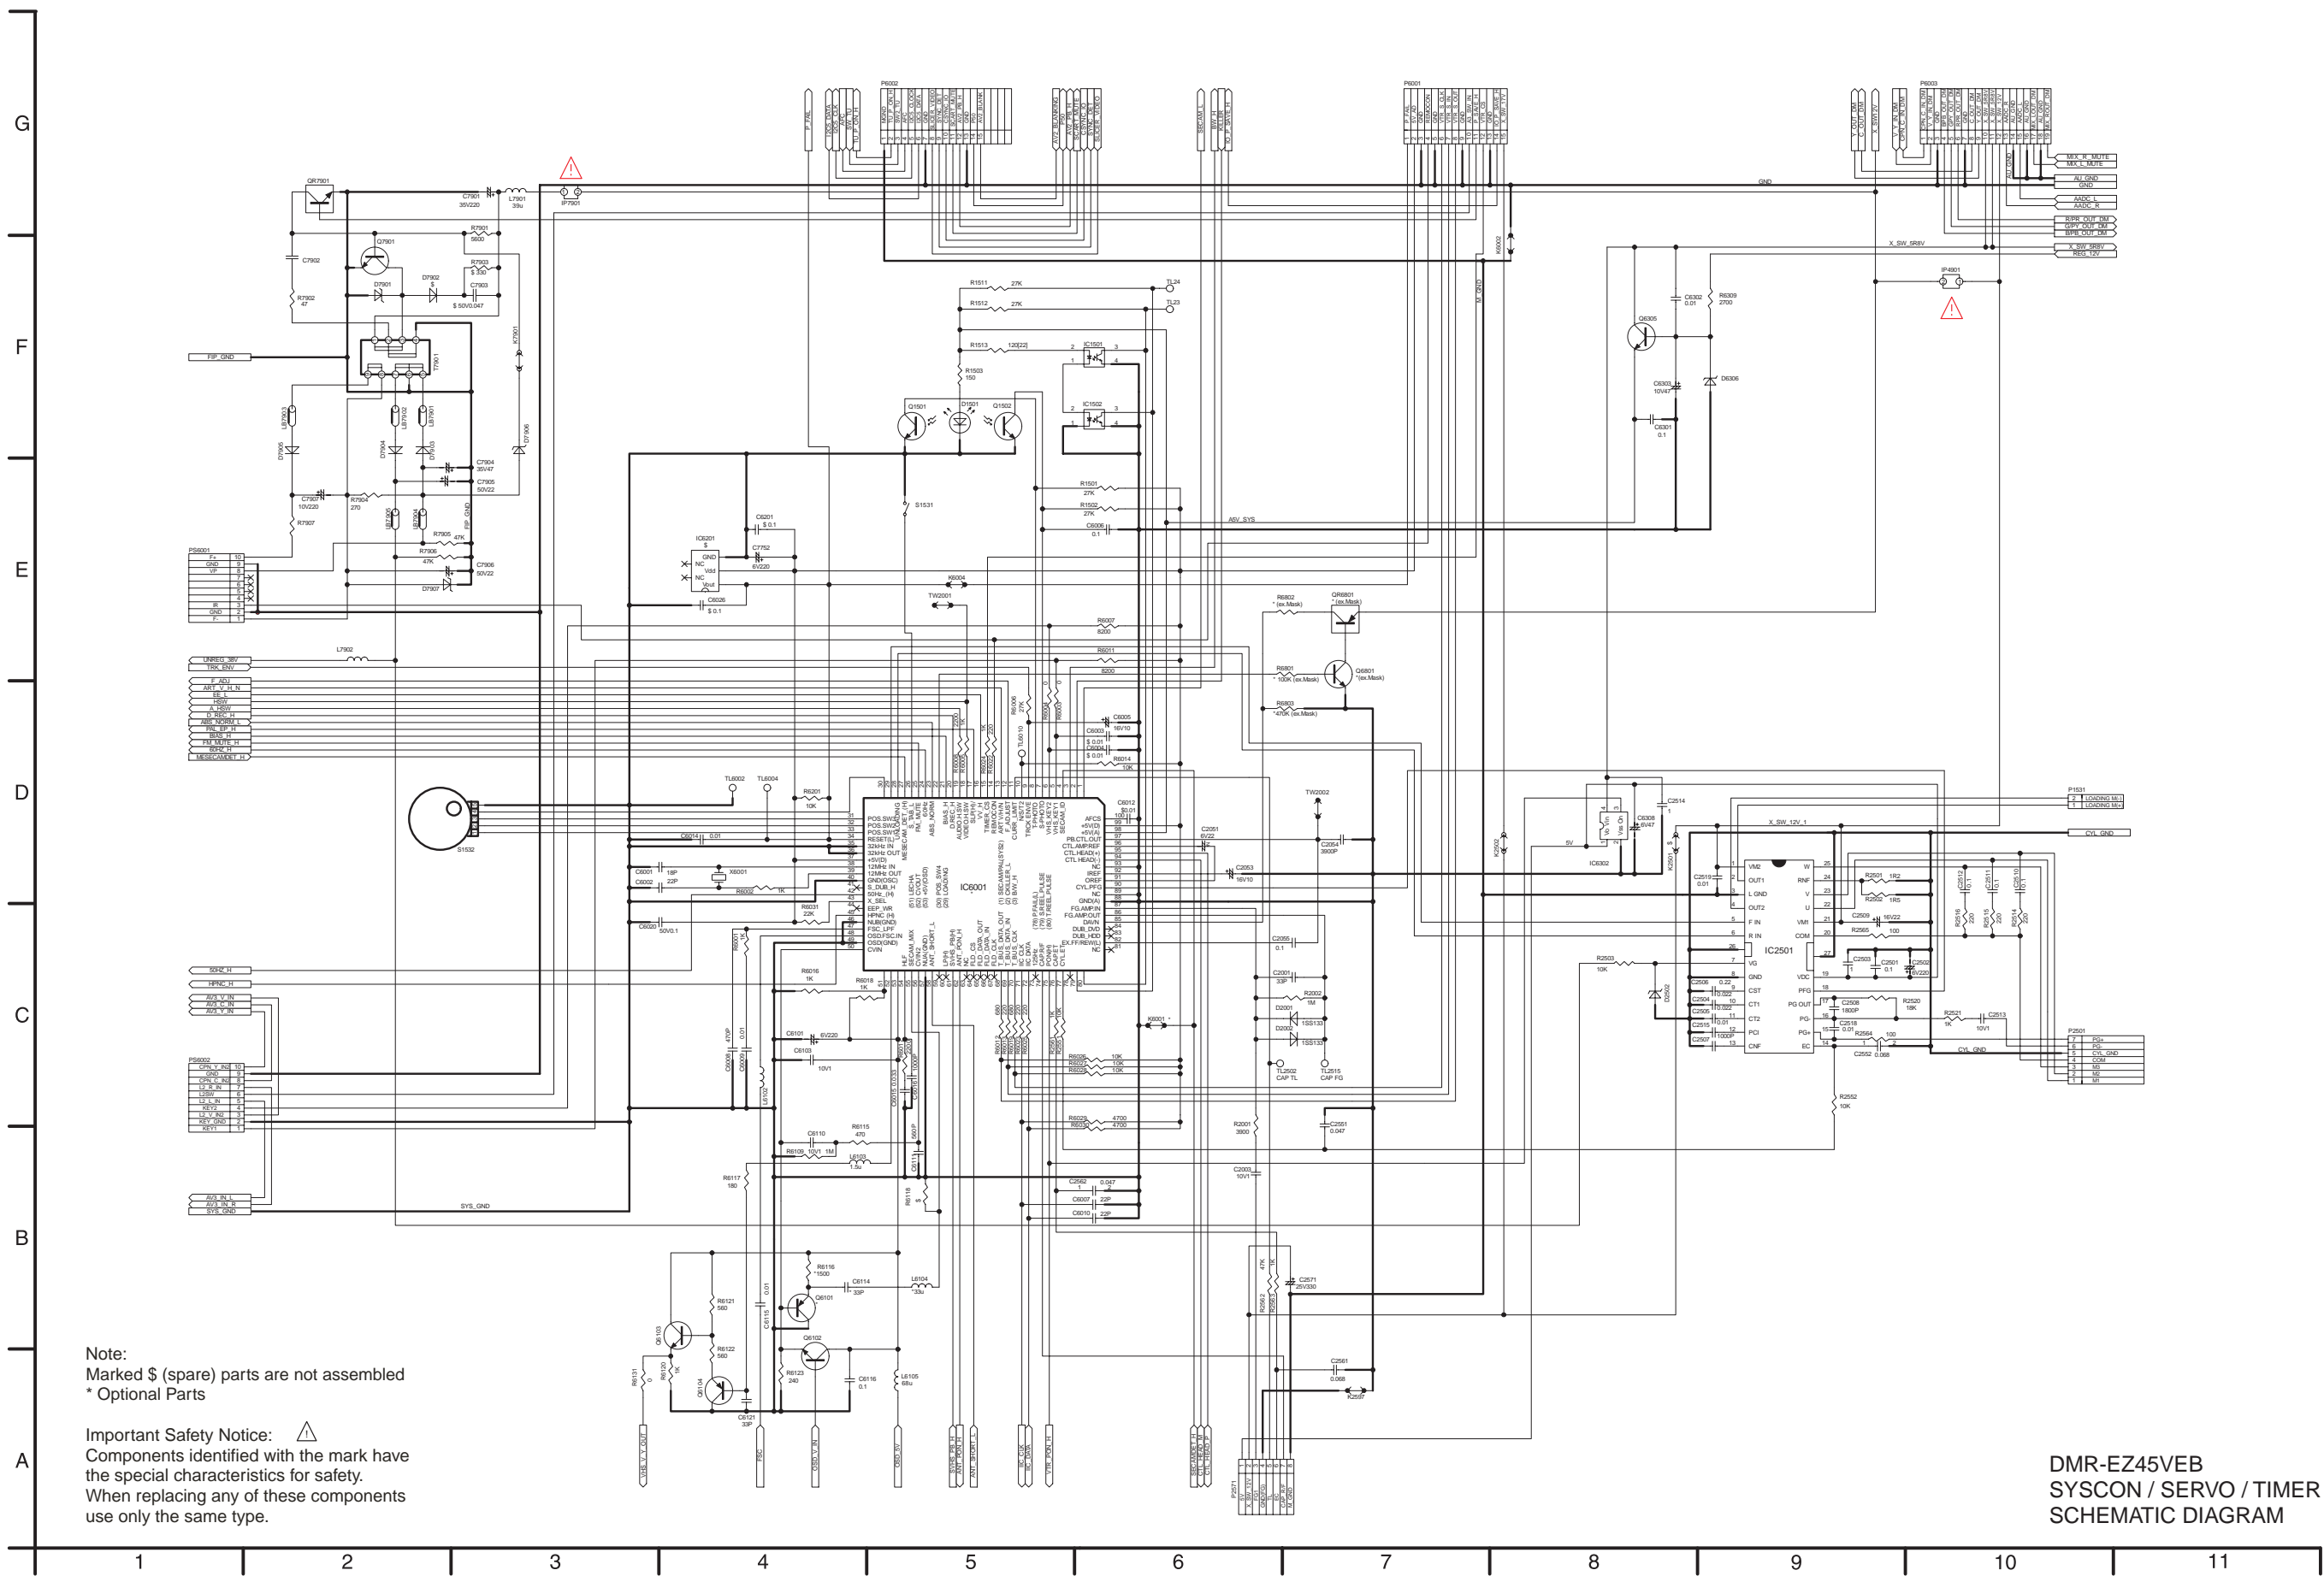


Note:
 Marked \$ (spare) parts are not assembled
 * Optional Parts

Important Safety Notice: 
 Components identified with the mark have
 the special characteristics for safety.
 When replacing any of these components
 use only the same type.

DMR-EZ45VEB
 SYSCON / SERVO / TIMER
 SCHEMATIC DIAGRAM


13.6. VIDEO

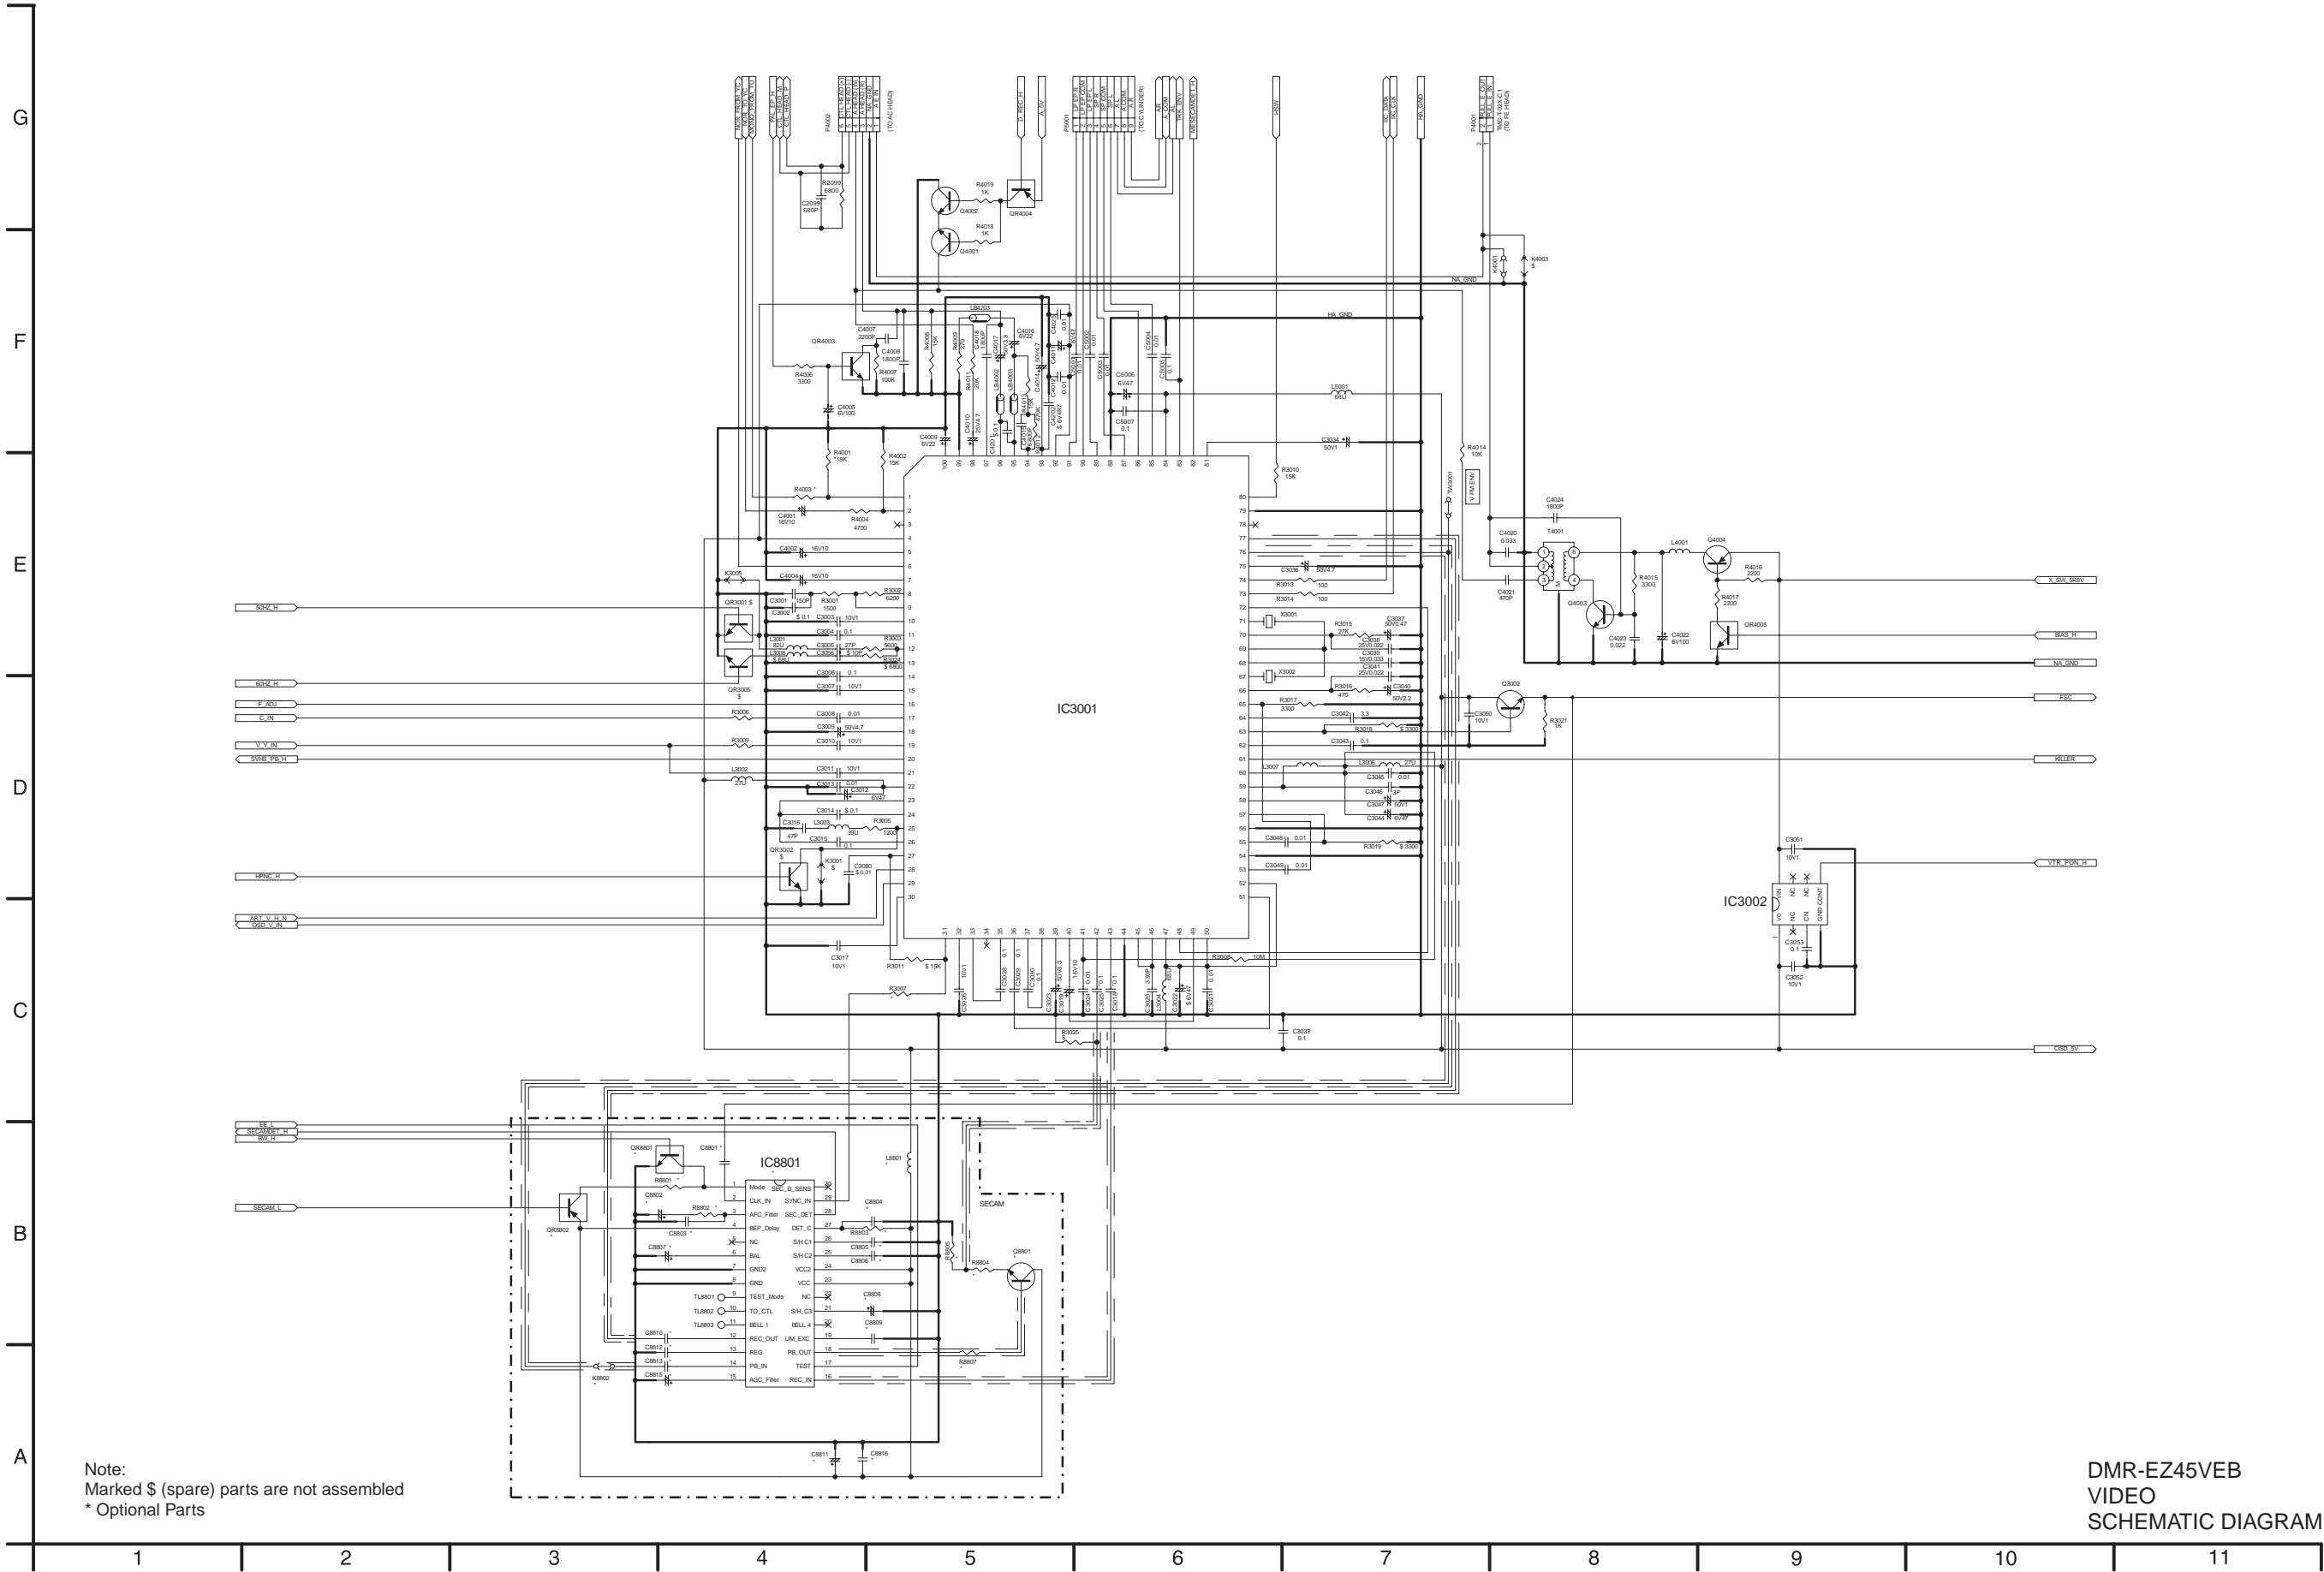

Note:
 Marked \$ (spare) parts are not assembled
 * Optional Parts

DMR-EZ45VEB
 VIDEO
 SCHEMATIC DIAGRAM


13.7. AUDIO NICAM

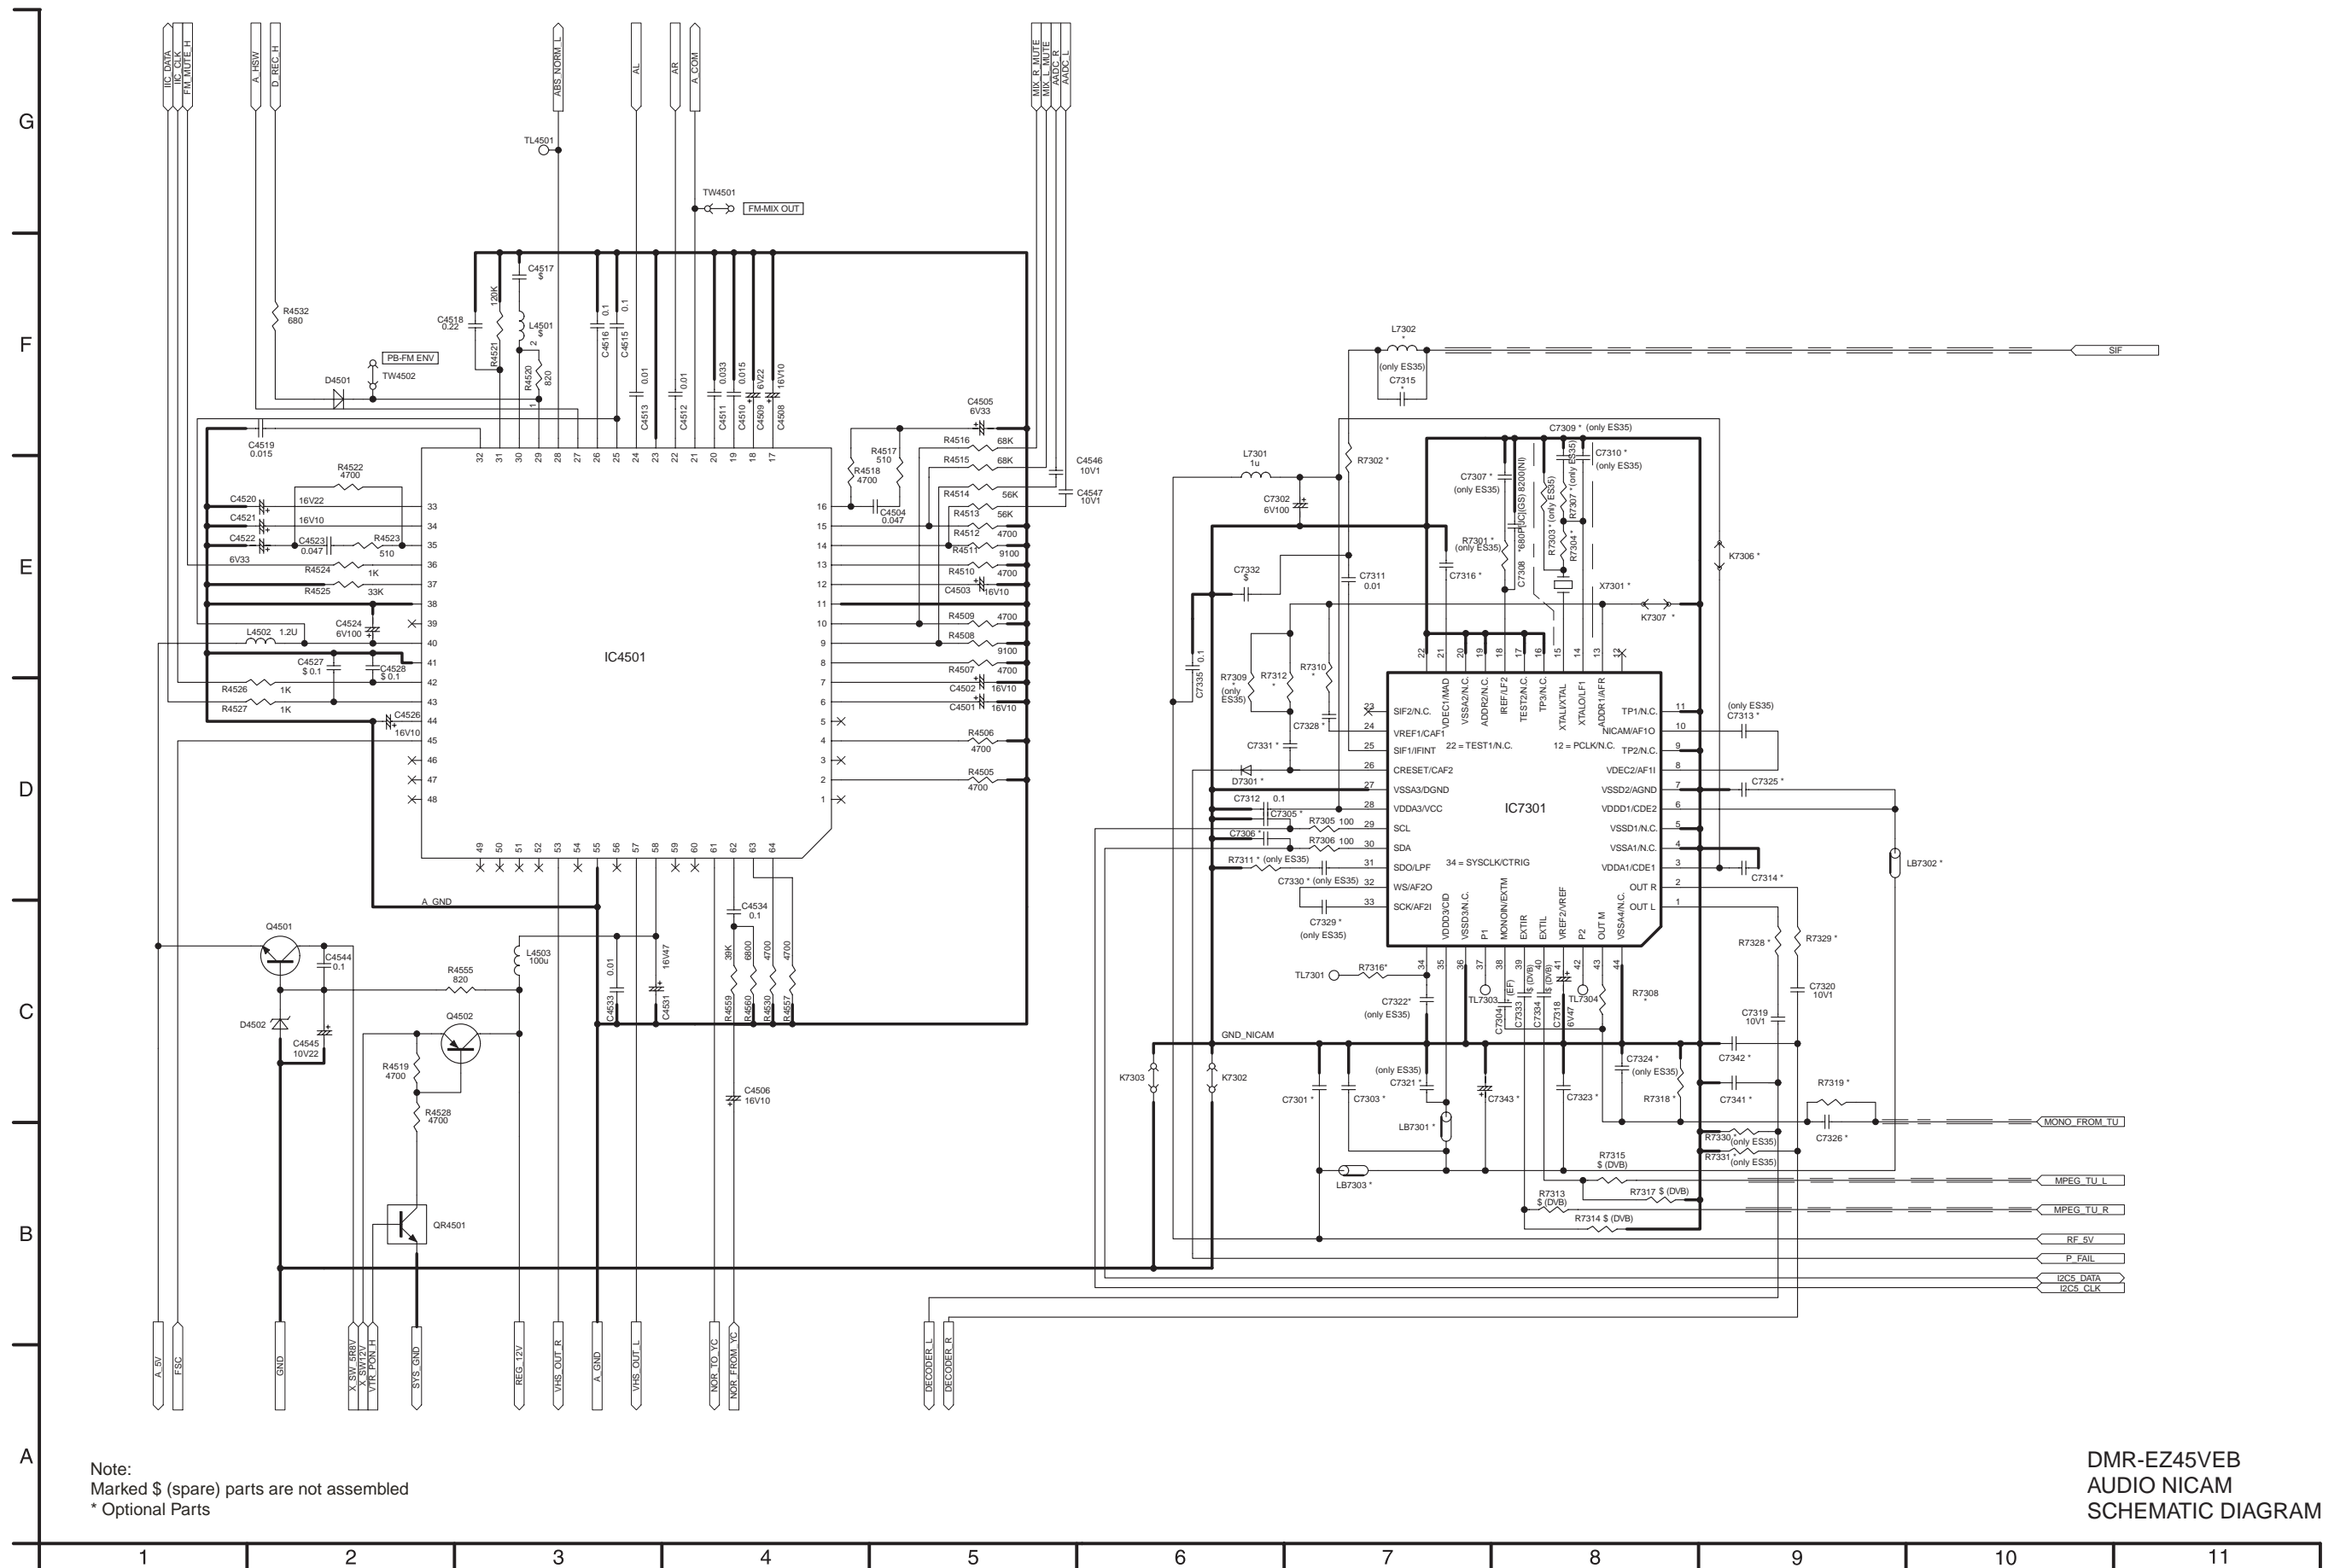

Note:
 Marked \$ (spare) parts are not assembled
 * Optional Parts

DMR-EZ45VEB
 AUDIO NICAM
 SCHEMATIC DIAGRAM


13.8. FRONT JACK

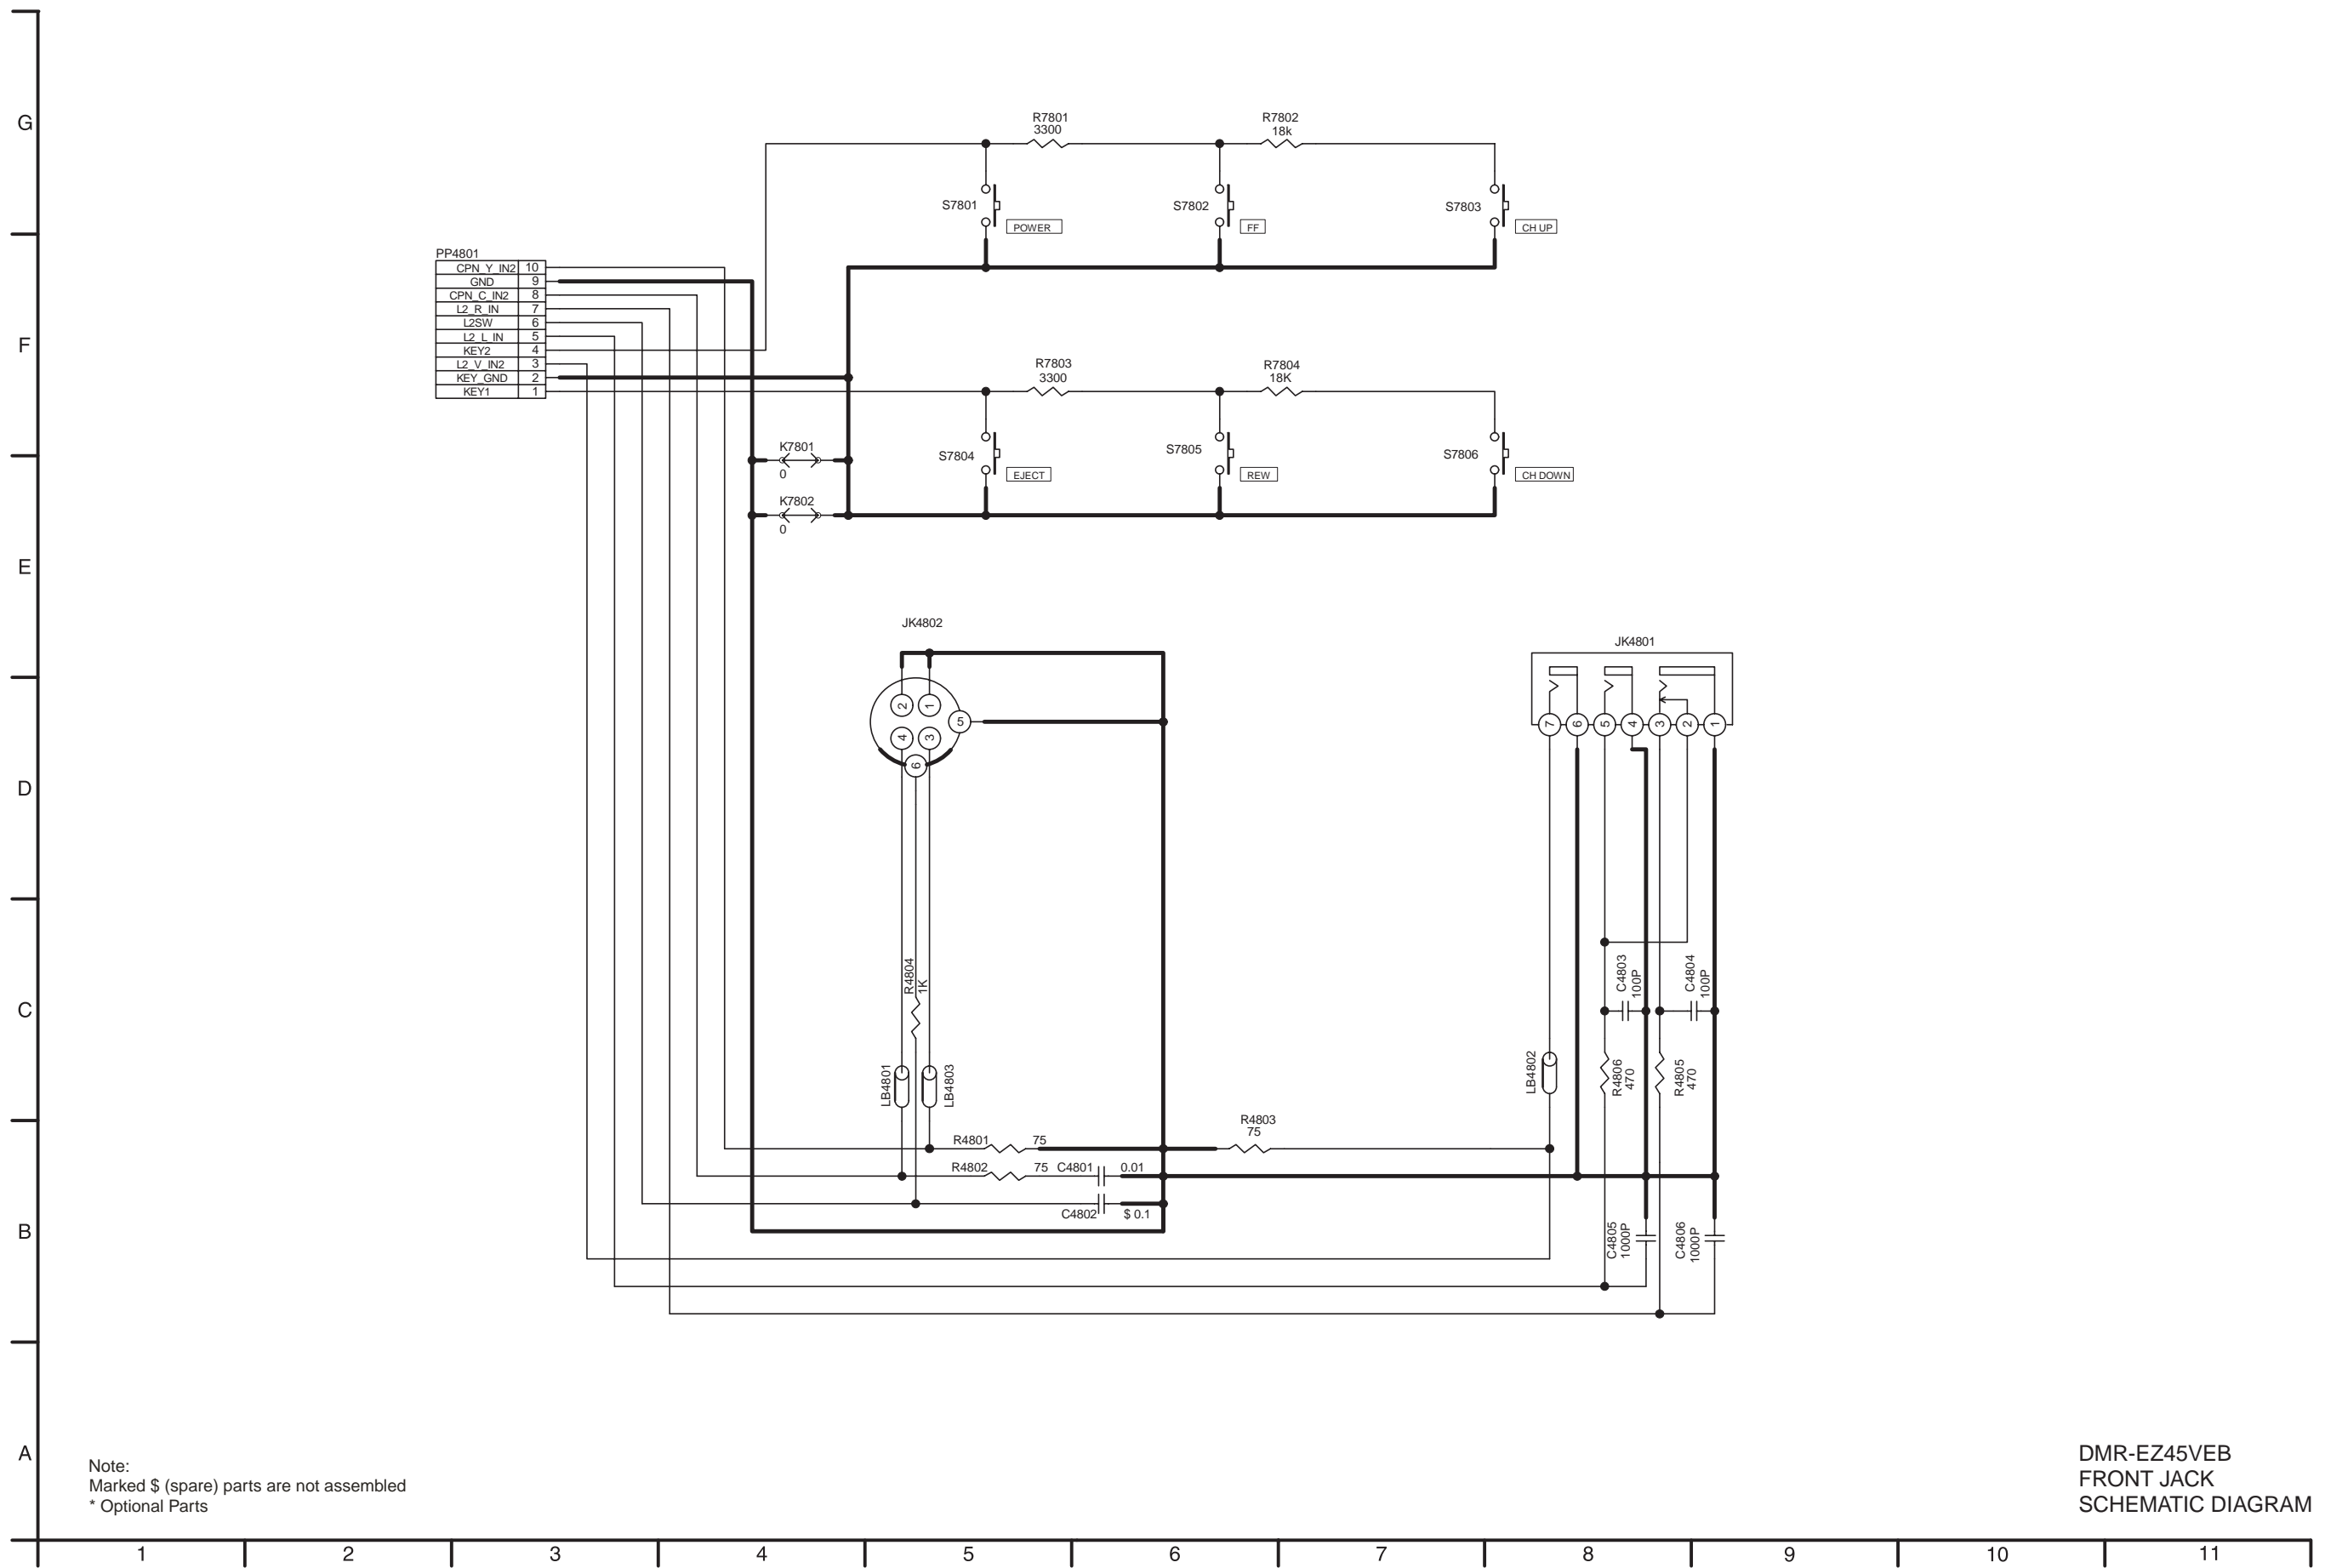

Note:
 Marked \$ (spare) parts are not assembled
 * Optional Parts

DMR-EZ45VEB
 FRONT JACK
 SCHEMATIC DIAGRAM


13.9. FL DRIVE

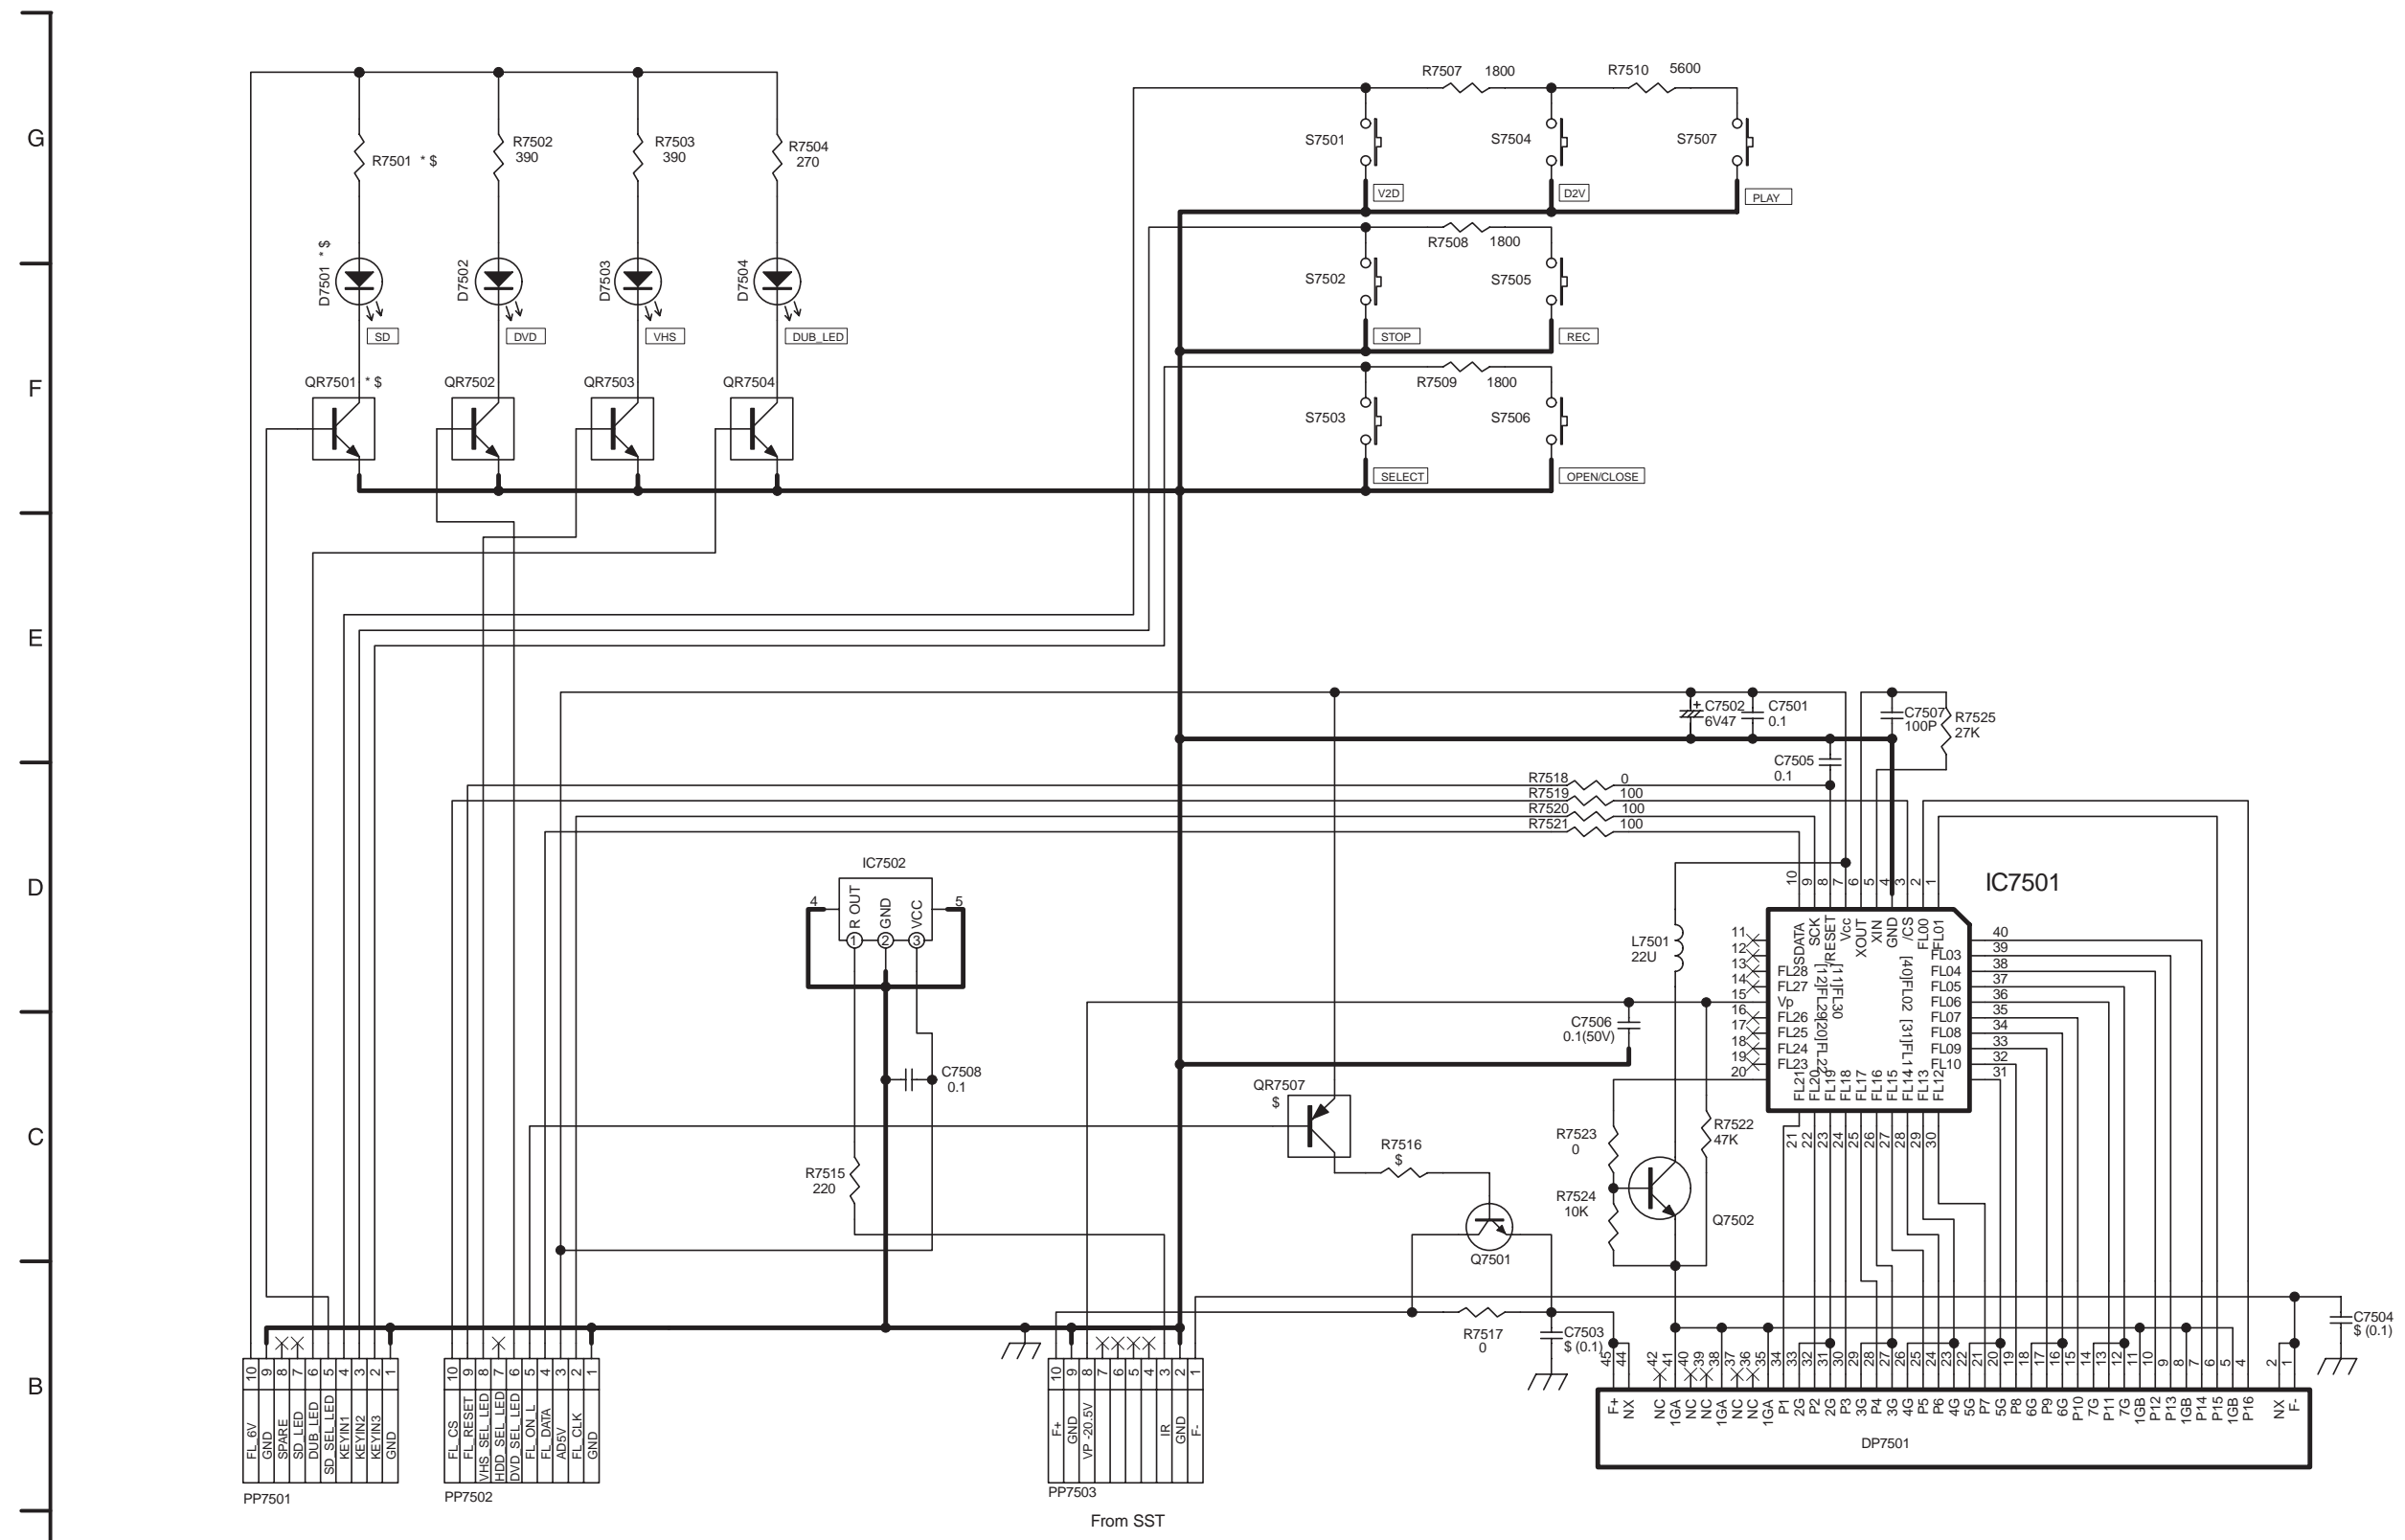

Note:
 Marked \$ (spare) parts are not assembled
 * Optional Parts

DMR-EZ45VEB
 FL DRIVE
 SCHEMATIC DIAGRAM


13.10. SD/DV IN

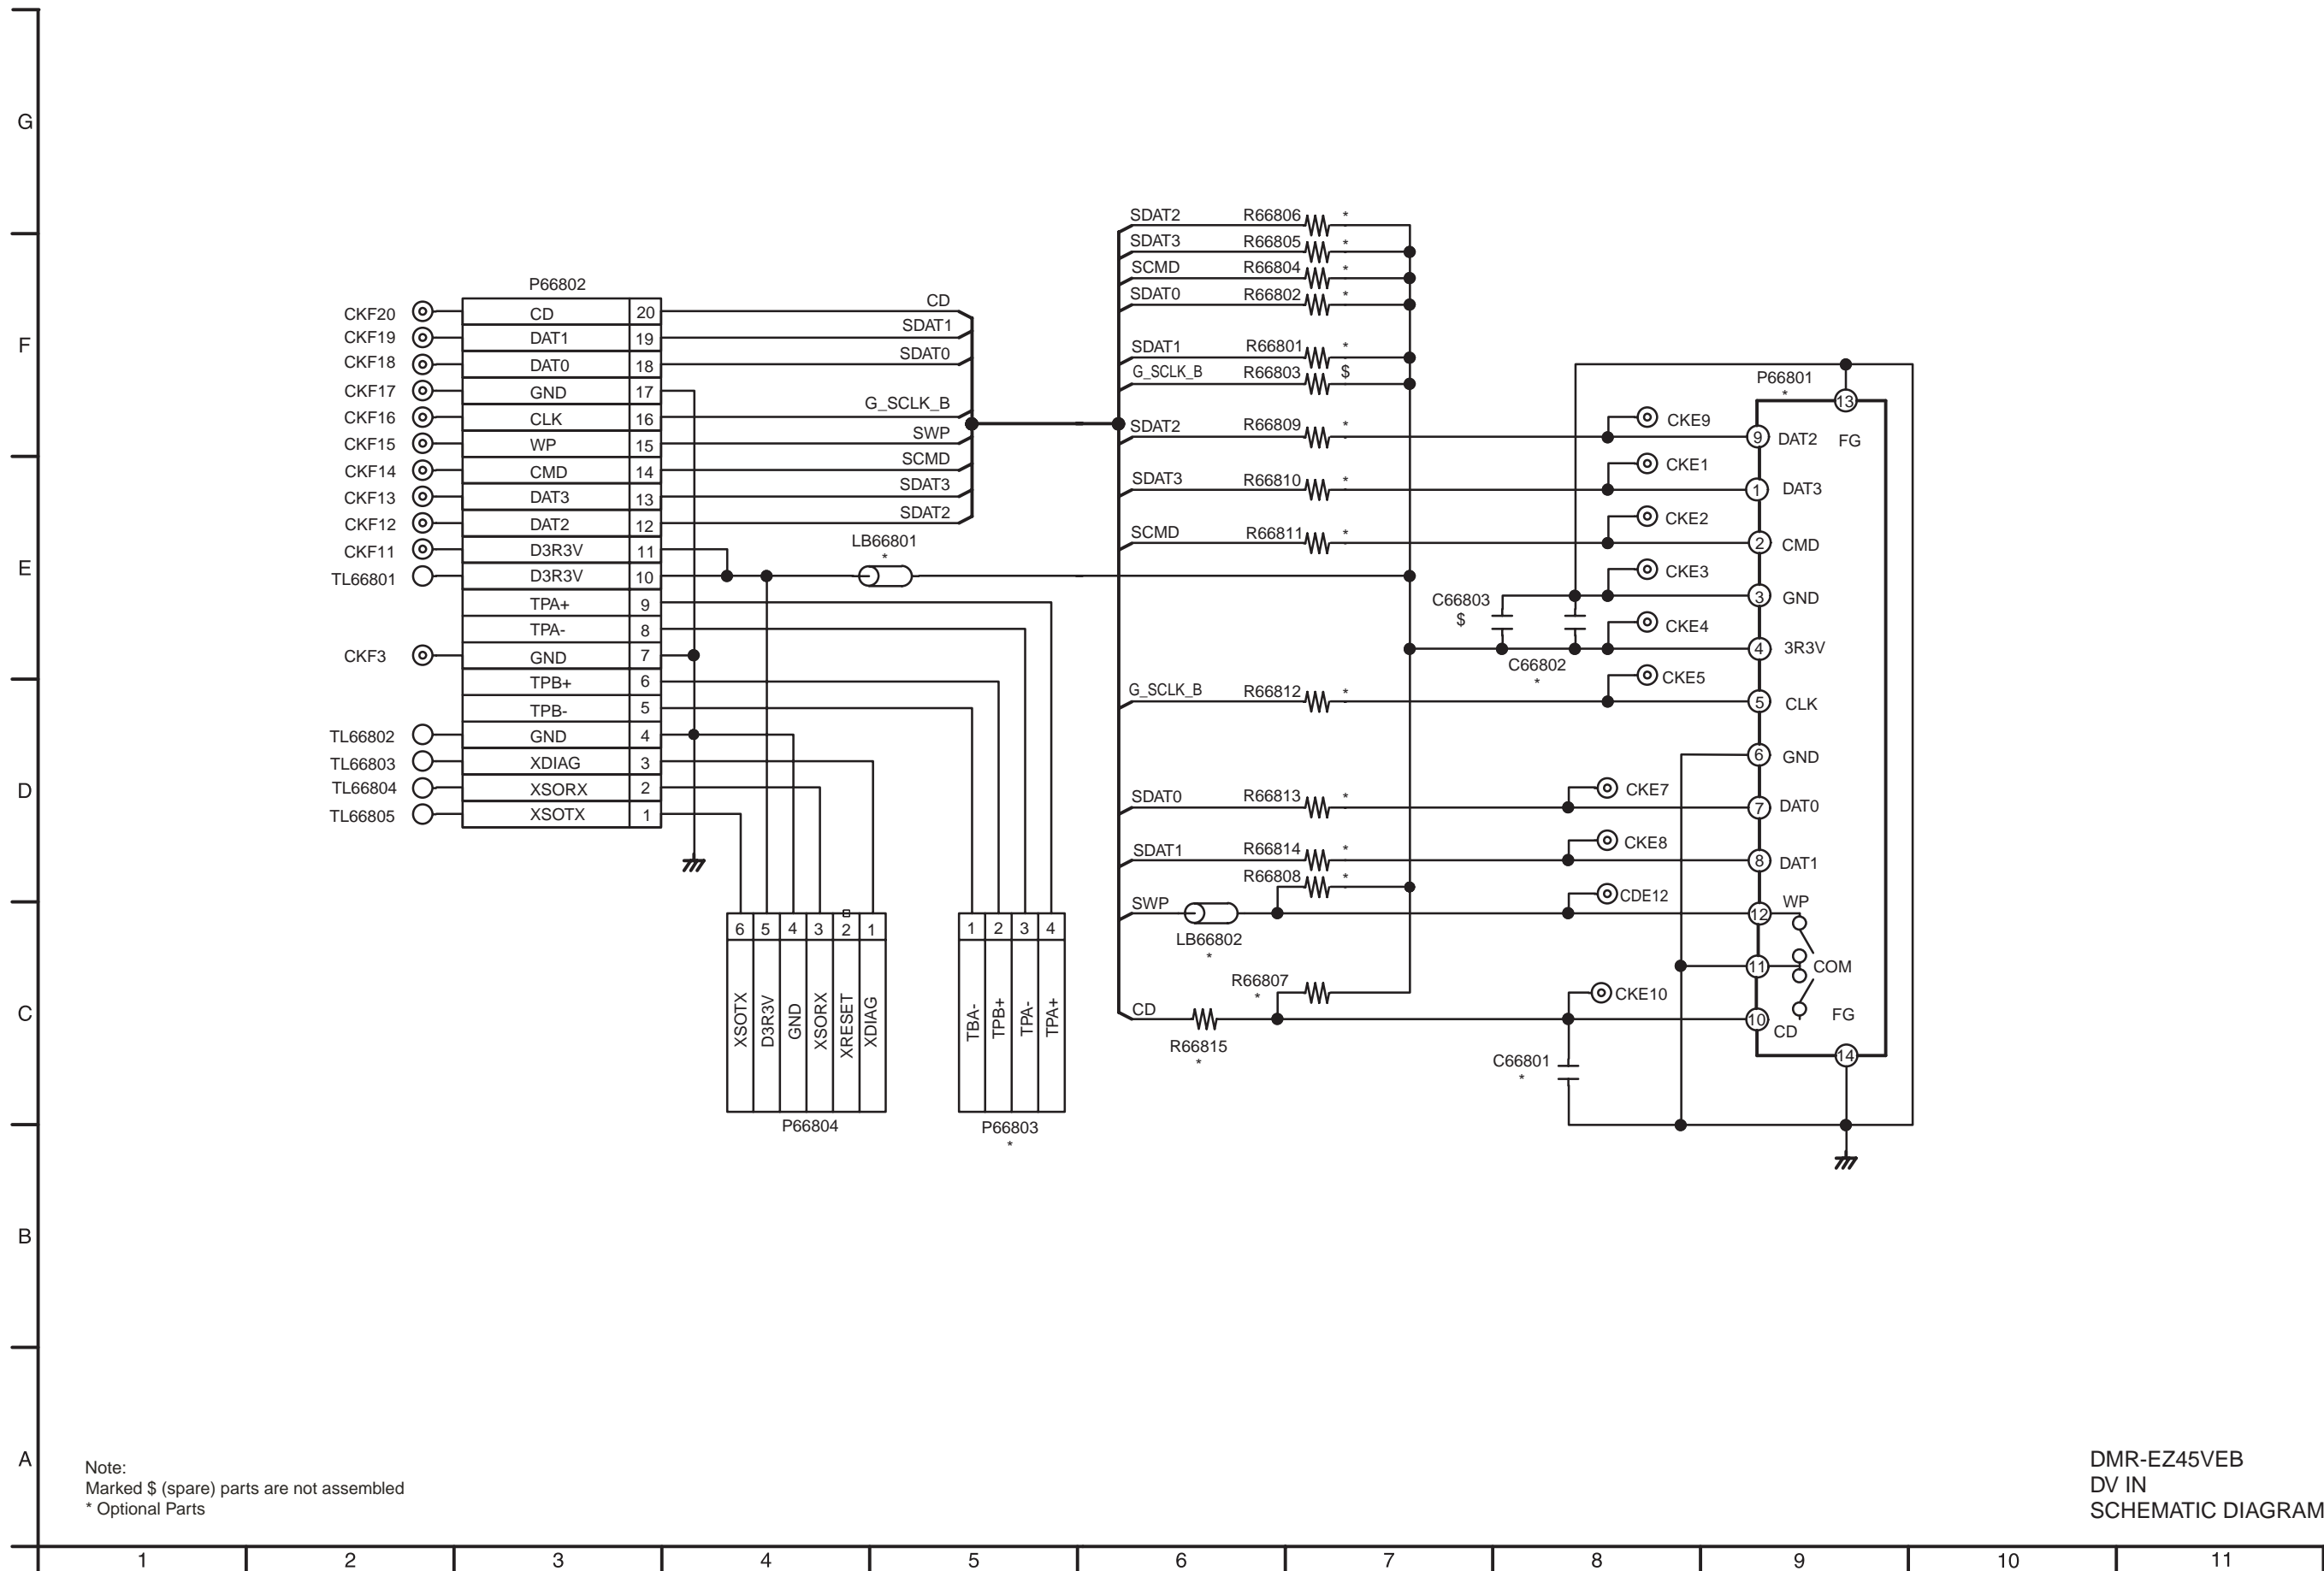

Note:
 Marked \$ (spare) parts are not assembled
 * Optional Parts

DMR-EZ45VEB
 DV IN
 SCHEMATIC DIAGRAM


13.11. HDMI

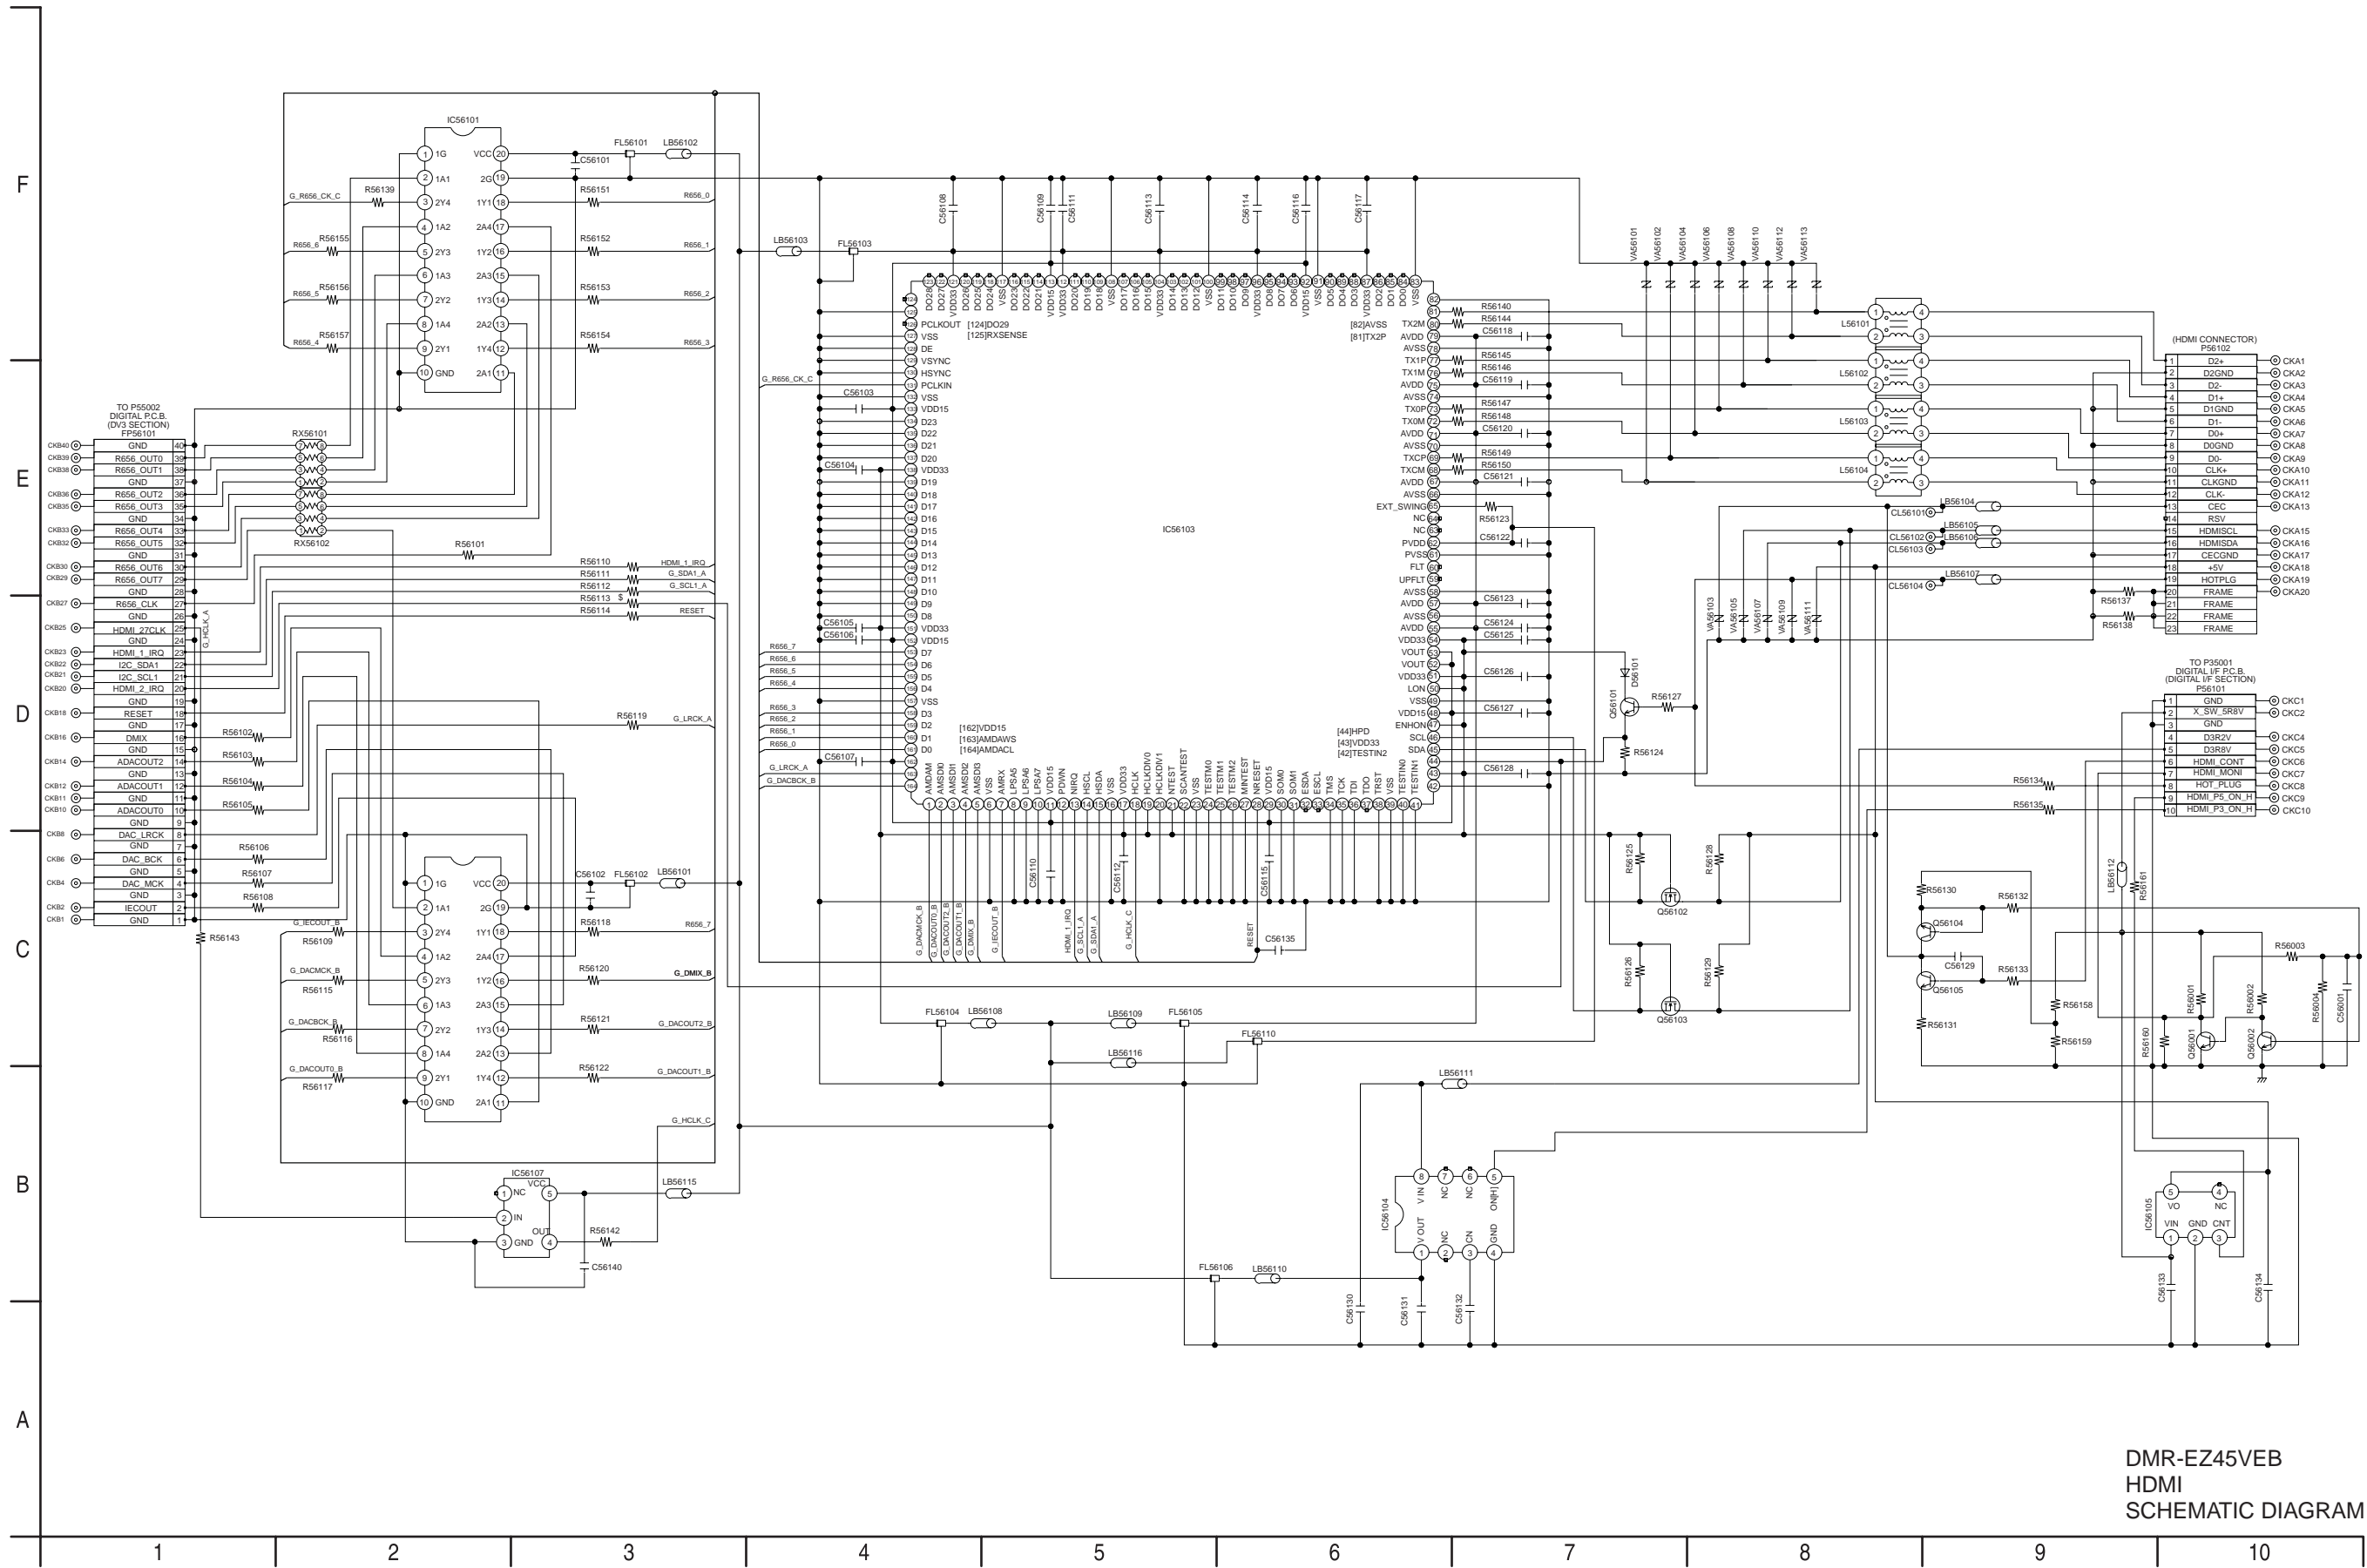

DMR-EZ45VEB
HDMI
SCHEMATIC DIAGRAM

14 PRINTED CIRCUIT BOARD


14.1. POWER & DIGITAL I/F P.C.B. (COMPONENT SIDE)

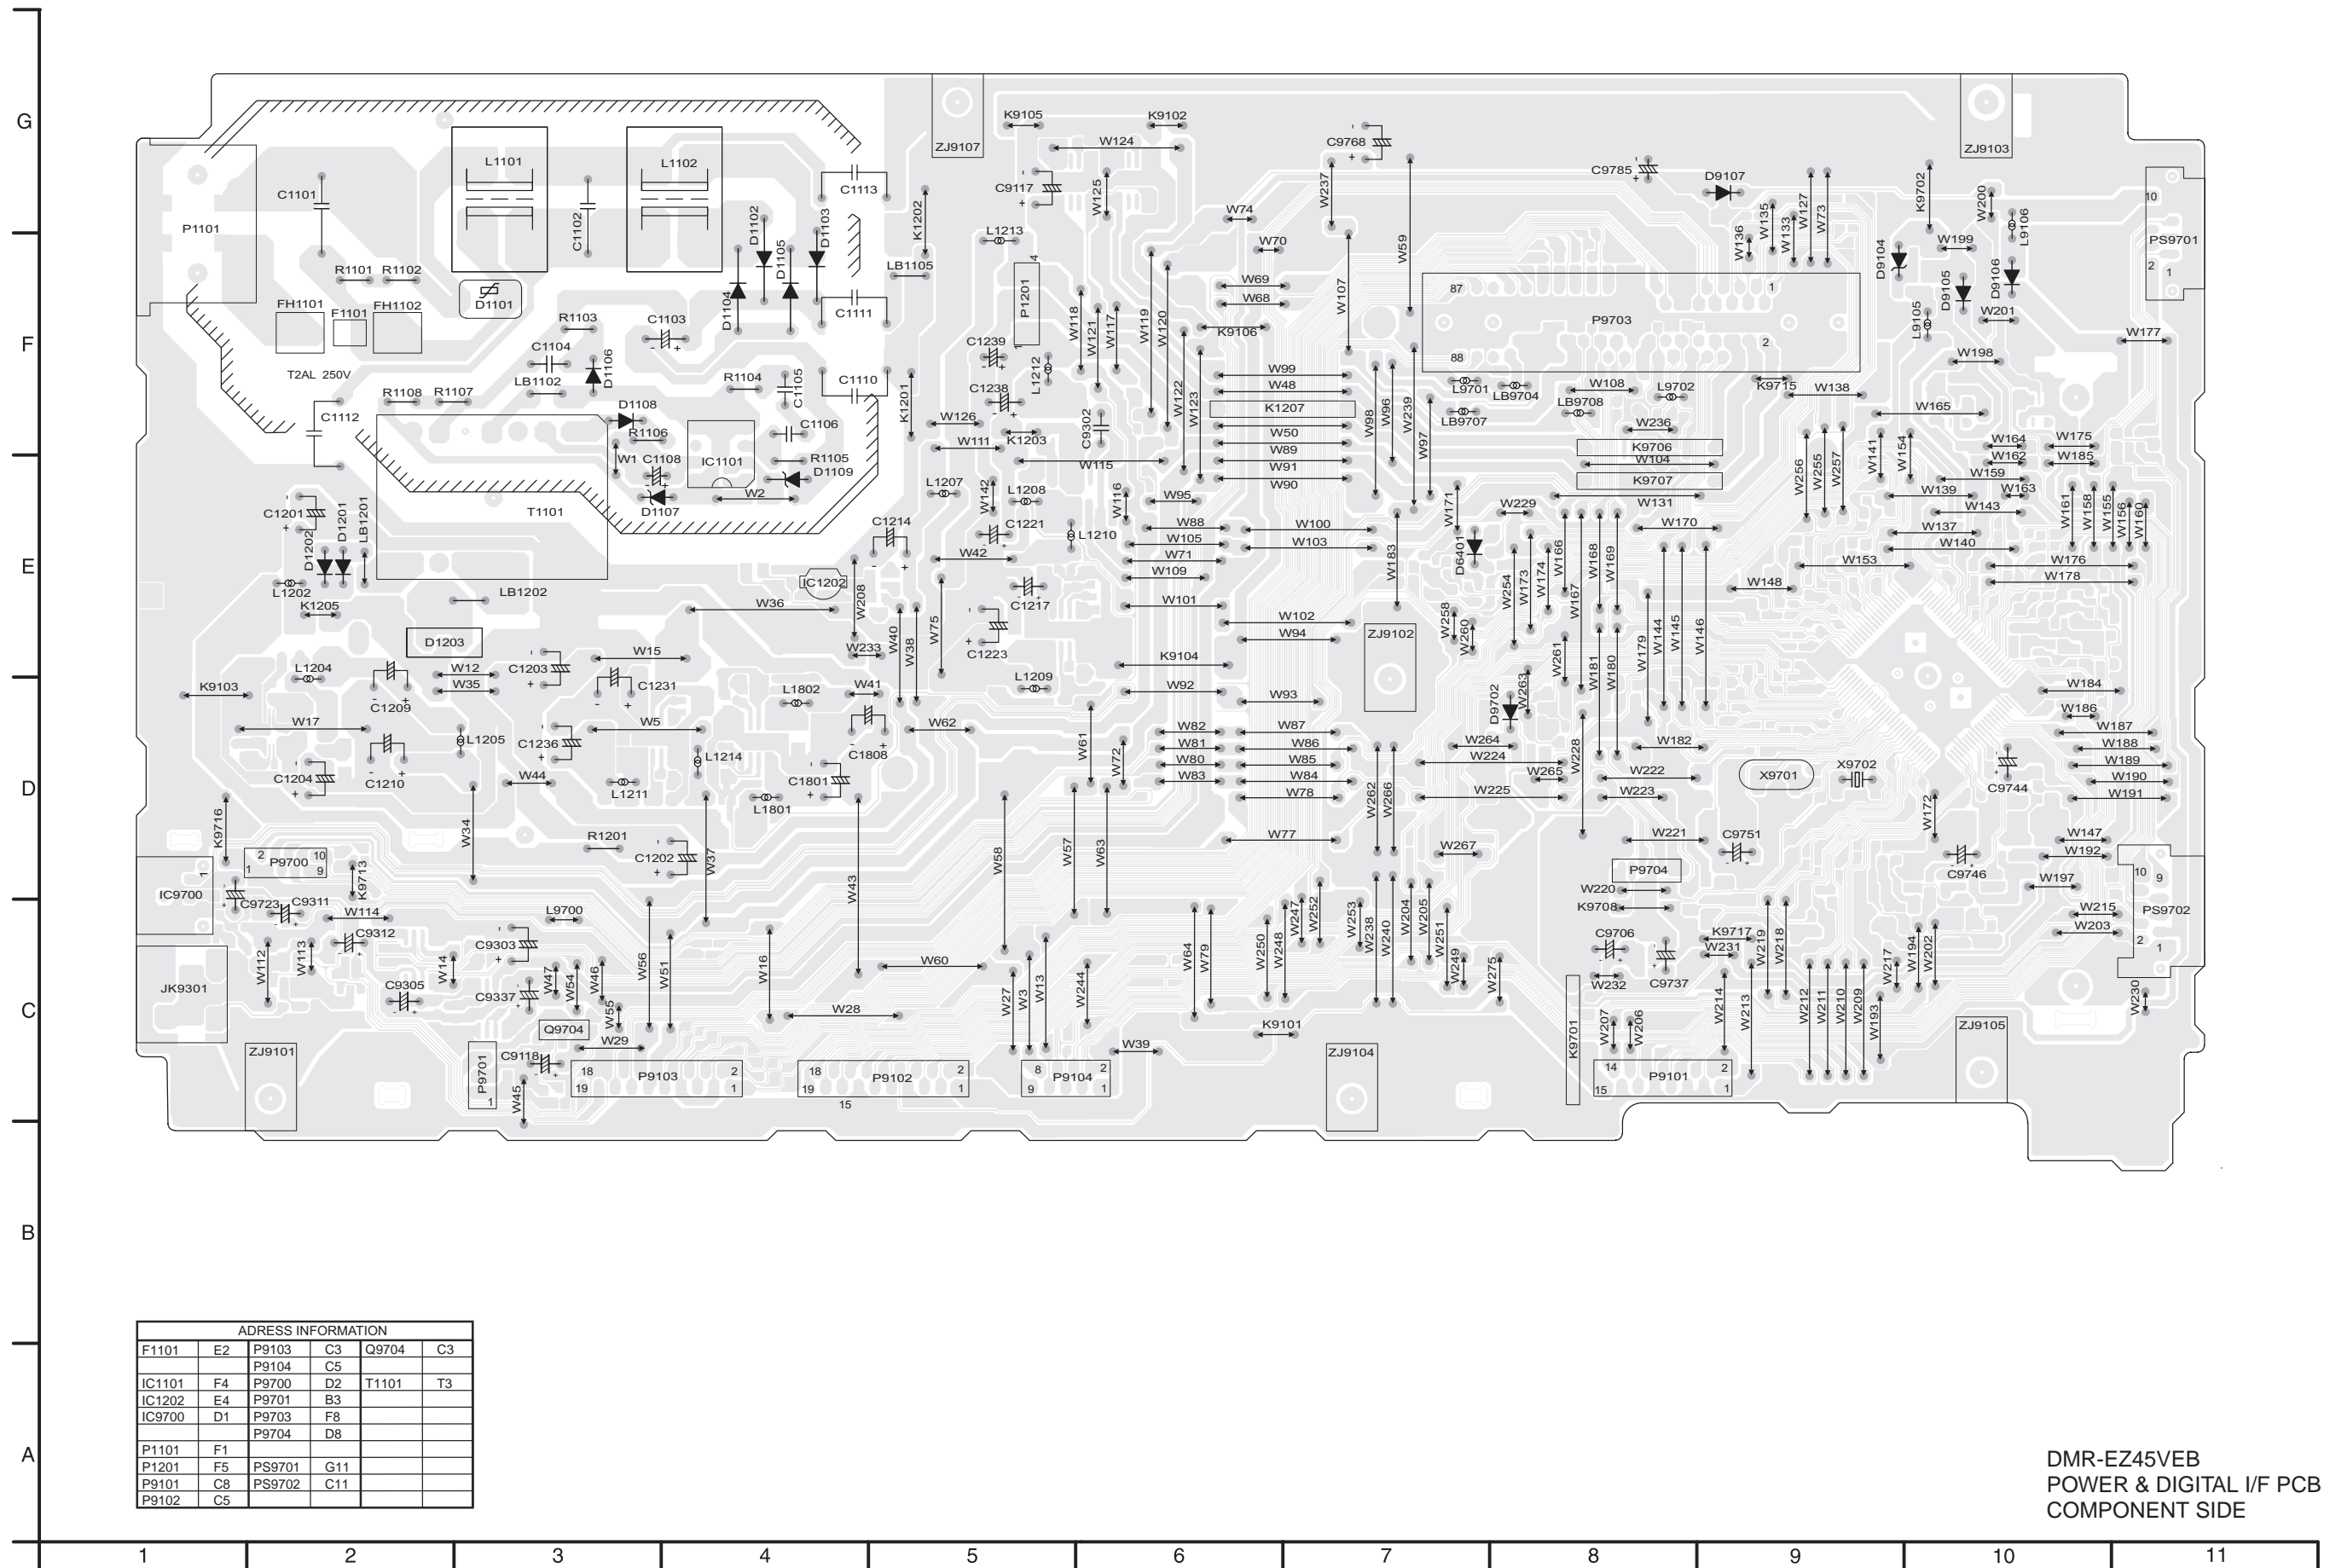

ADDRESS INFORMATION					
F1101	E2	P9103	C3	Q9704	C3
		P9104	C5		
IC1101	F4	P9700	D2	T1101	T3
IC1202	E4	P9701	B3		
IC9700	D1	P9703	F8		
		P9704	D8		
P1101	F1				
P1201	F5	PS9701	G11		
P9101	C8	PS9702	C11		
P9102	C5				

DMR-EZ45VEB
 POWER & DIGITAL I/F PCB
 COMPONENT SIDE

14.2. POWER & DIGITAL I/F P.C.B. (SOLDER SIDE)

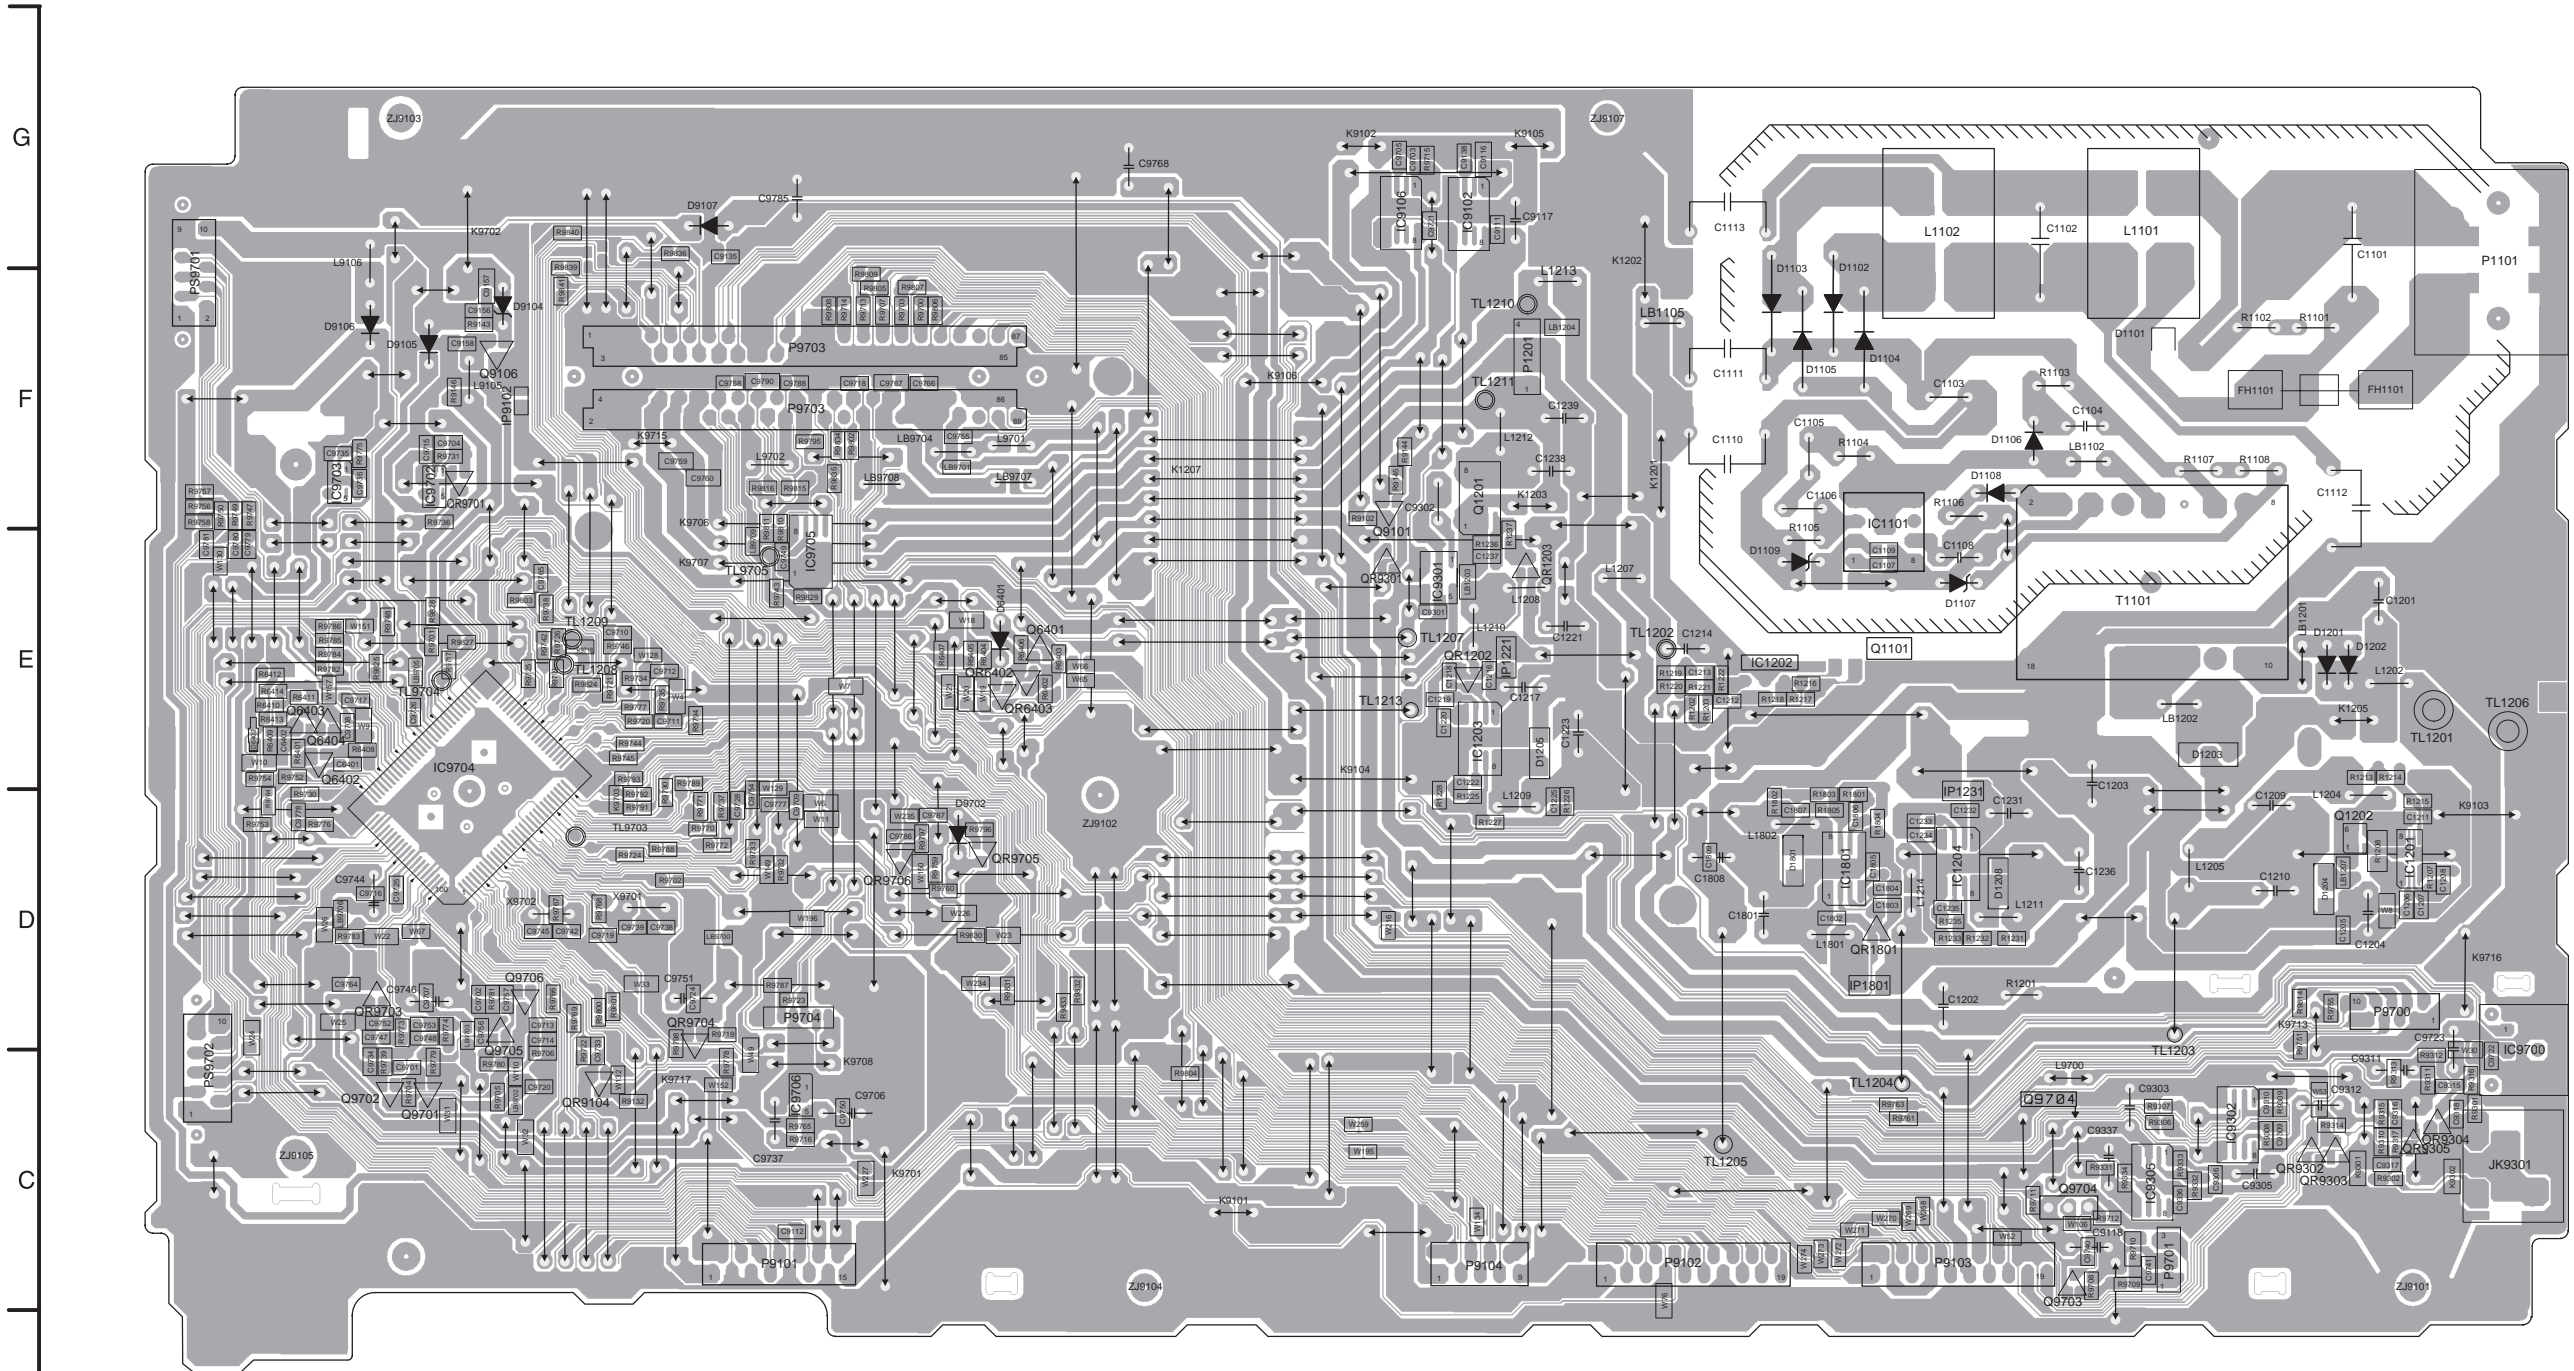


ADDRESS INFORMATION

IC1101	F8	IC31502	F6	IC9700	C11	IP9102	F2	P9703	F4	Q6402	E2	Q9706	D3	QR9303	C10	TL1201	E10	TL1211	F6
IC1201	D10	IC31510	F6	IC9702	F2	P9704	D4	Q6403	E2	Q6404	E2	QR1202	E6	QR9304	C10	TL1202	E7	TL1213	E6
IC1202	E8	IC34001	E5	IC9703	F2	P1101	F11	Q6404	E2	QR1203	E6	QR9305	C10	TL1203	D9	TL9703	D3	TL9704	D3
IC1203	E6	IC35004	E9	IC9704	E2	P1201	F7	Q9101	F6	QR1204	E7	QR9701	F2	TL1204	C8	TL9704	E2	TL9705	E3
IC1204	D8	IC35005	E10	IC9705	E4	P9101	C3	Q9106	F2	QR1801	D8	QR9703	D2	TL1205	C7	TL9705	E3	TL9706	E3
IC15001	C8	IC9102	F6	IC9706	C4	P9102	C7	Q9701	C2	QR6402	E4	QR9704	D3	TL1206	E11	TL9706	E3	TL9707	E3
IC15002	D8	IC9106	F6	IC9707	C4	P9103	C8	Q1101	E8	QR6403	E5	QR9705	D4	TL1207	E6	TL9707	E3	TL9708	E3
IC15003	D9	IC9301	E6	IP1221	E7	P9104	C6	Q1201	F6	QR6404	E5	QR9706	D4	TL1208	E3	TL9708	E3	TL9709	E3
IC15004	C10	IC9302	C10	IP1231	D8	P9700	D10	Q1202	D10	QR9104	C3	QR9301	E6	TL1209	E3	TL9709	E3	TL9710	E3
IC1801	D8	IC9305	C9	IP1801	D8	P9701	C9	Q6401	E5	QR9705	D2	QR9302	C10	T1101	E9	TL1210	F7	TL9711	E3

DMR-EZ45VEB
POWER & DIGITAL I/F PCB
SOLDER SIDE


14.4. MAIN P.C.B. (SOLDER SIDE)

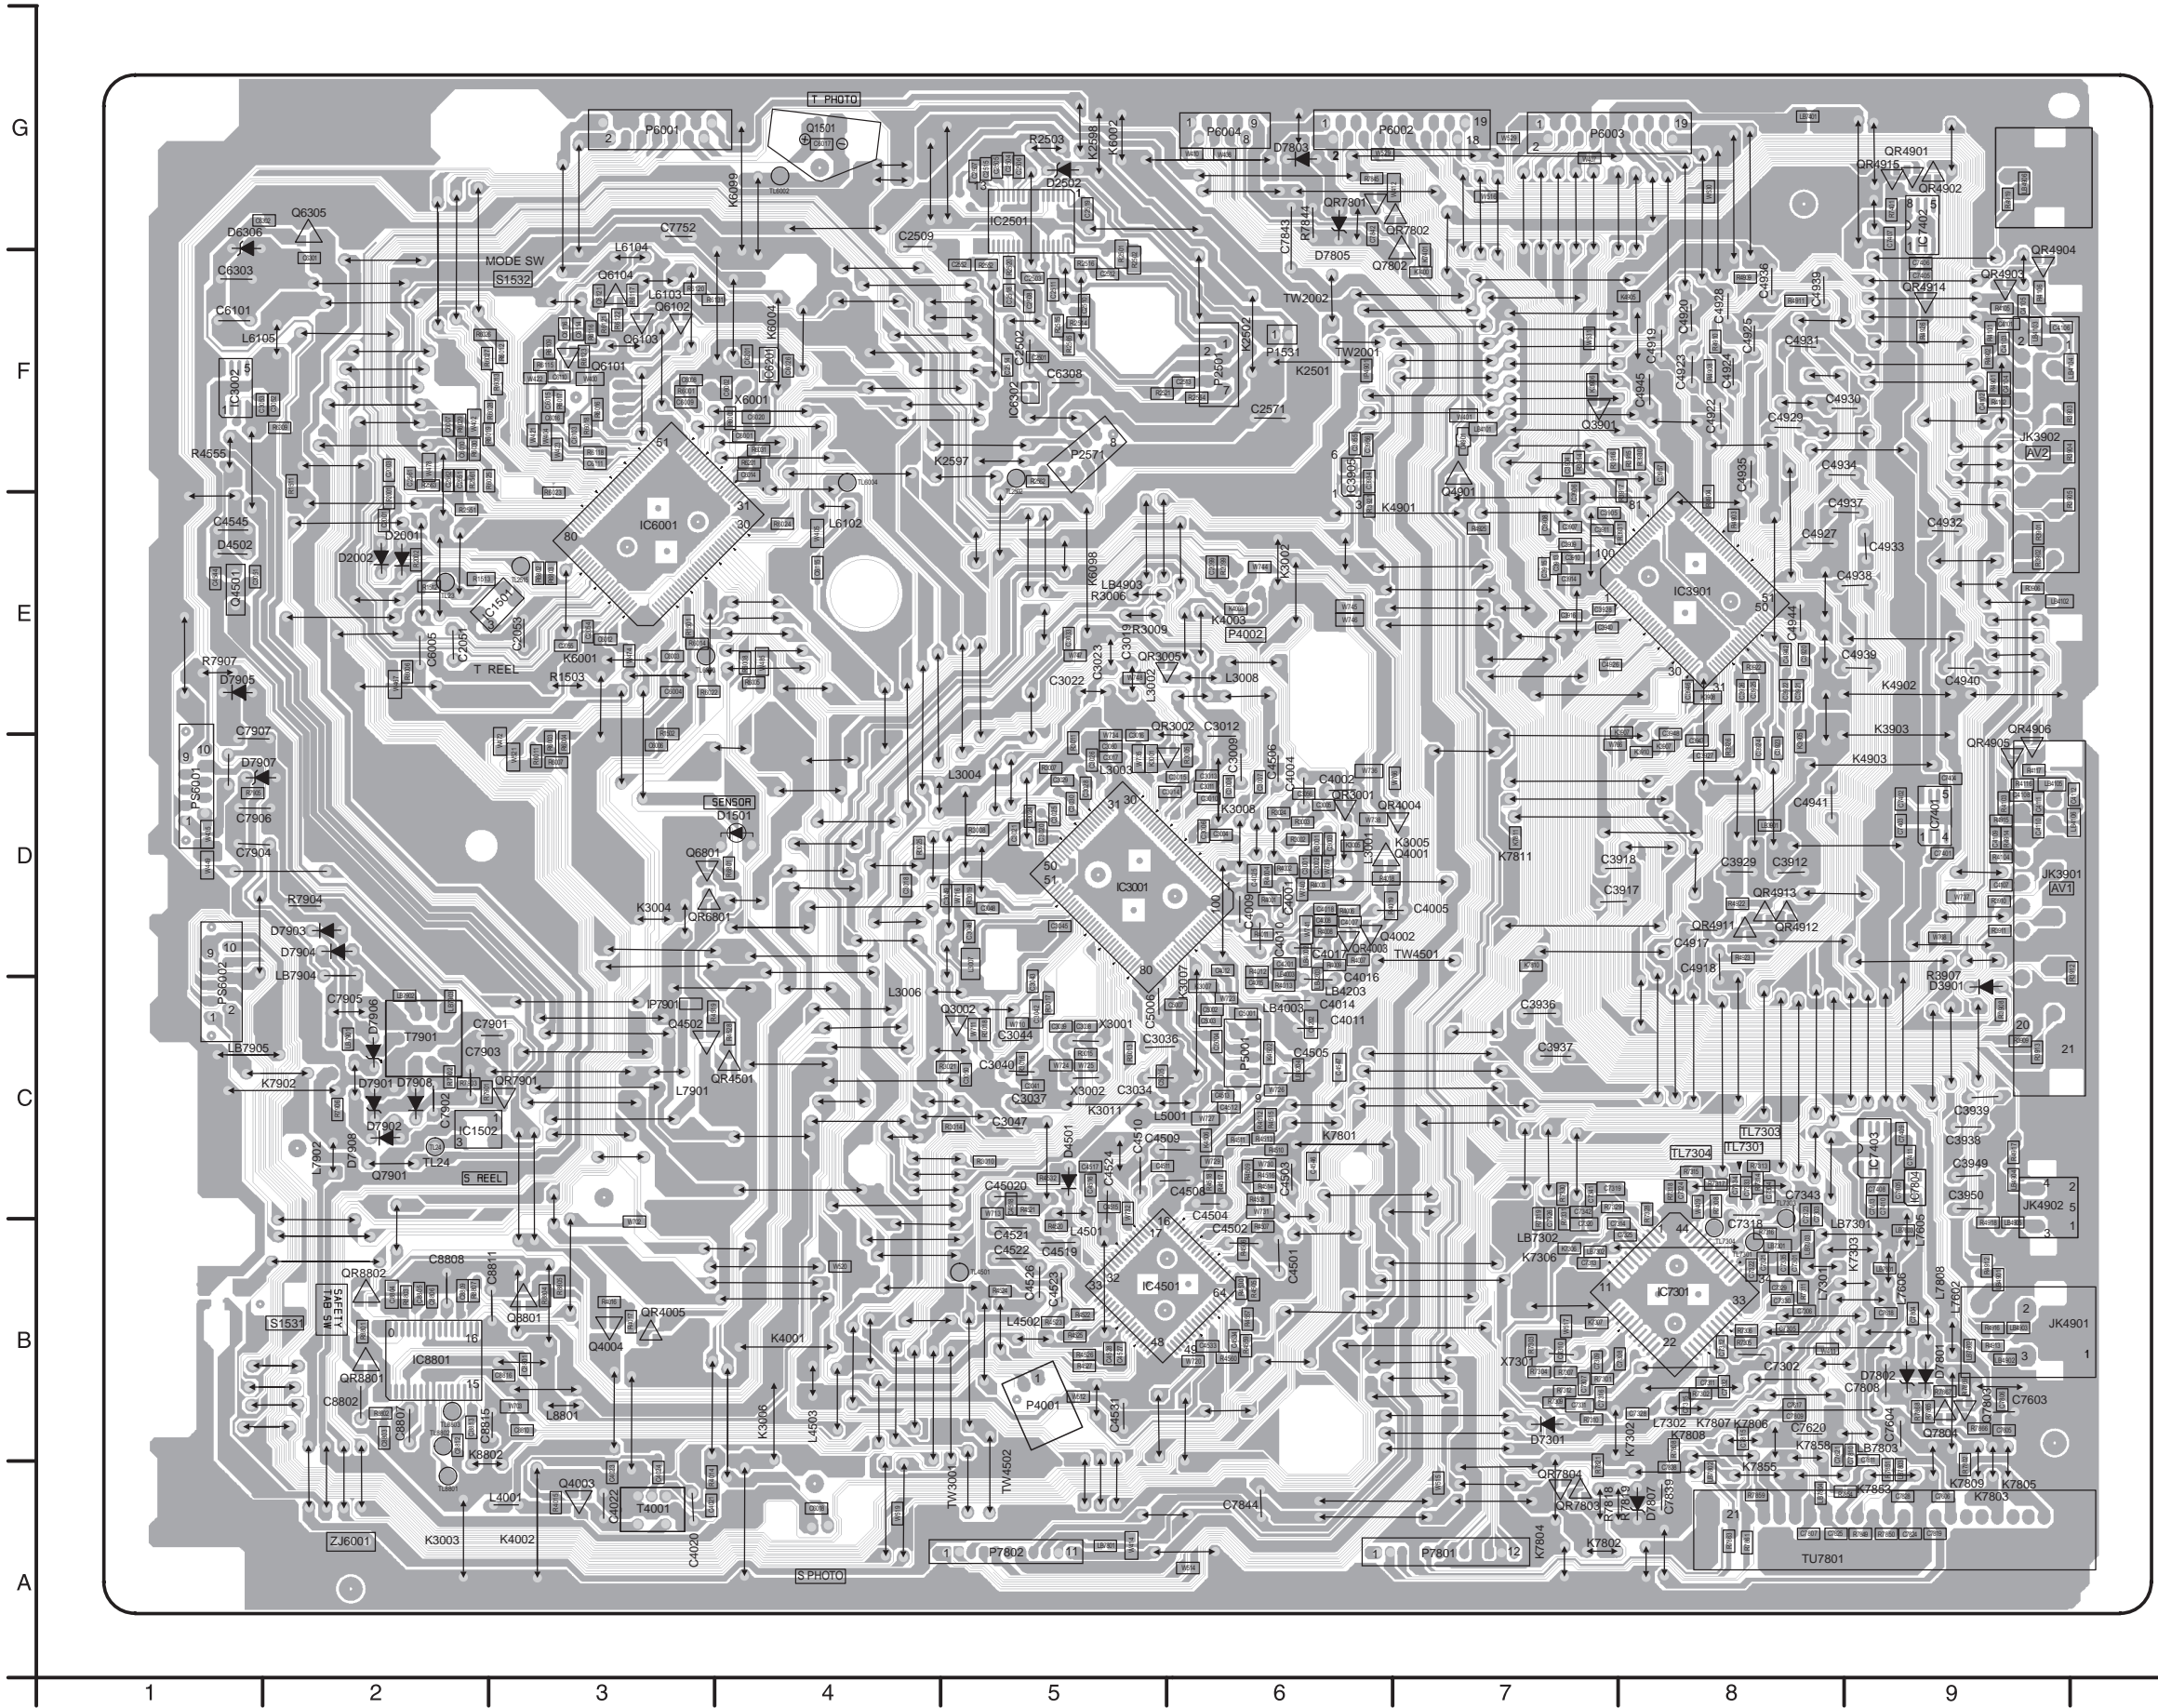

ADRESS INFORMATION			
IC1501	E2	QR3001	D6
IC1502	C2	QR3002	E5
IC2501	G5	QR3005	E5
IC3001	D5	QR4003	D6
IC3002	F1	QR4004	D7
IC3901	E8	QR4005	B3
IC3905	F6	QR4501	C4
IC4501	B5	QR4901	G9
IC6001	E3	QR4902	G9
IC6201	F4	QR4903	F9
IC6302	F5	QR4904	F9
IC7301	B8	QR4905	D9
IC7401	D9	QR4906	E9
IC7402	G9	QR4911	D8
IC7403	C9	QR4912	D8
IC7804	C9	QR4913	D8
IC8801	B2	QR4914	F9
		QR4915	G9
IP4901	F6	QR6801	D3
IP7901	C3	QR7801	G6
		QR7802	G7
JK3901	D9	QR7803	A7
JK3902	F9	QR7804	A7
JK4901	B9	QR7901	C3
JK4902	C9	QR8801	B2
		QR8802	B2
P1531	F6		
P2501	F6	T4001	A3
P2571	F5	T7901	C2
P4001	B5	TL23	E2
P4002	E6	TL24	C2
P5001	C6	TL2502	F5
P6001	G3	TL2515	E3
P6002	G6	TL4501	B5
P6003	G7	TL6002	G4
P6004	G6	TL6004	F4
P7801	A7	TL6010	F3
P7802	A5	TL7301	C8
PS6001	D2	TL7301	B8
PS6002	C1	TL7303	C8
		TL7303	C8
Q1501	G4	TL7304	C8
Q3002	C5	TL7304	B8
Q3901	F7	TL8801	A2
Q4001	D7	TL8802	B2
Q4002	D6	TL8803	B2
Q4003	A3		
Q4004	B3	TU7801	A8
Q4501	E1		
Q4502	C3	TW2001	F6
Q4901	F7	TW2002	F6
Q6101	F3	TW3001	A5
Q6102	F3	TW4501	D7
Q6103	F3	TW4502	A5
Q6104	F3		
Q6305	G2		
Q6801	D3		
Q7802	F6		
Q7803	B9		
Q7804	B9		
Q7901	C2		
Q8801	B3		


DMR-EZ45VEB
MAIN PCB
SOLDER SIDE

14.5. FRONT JACK P.C.B.

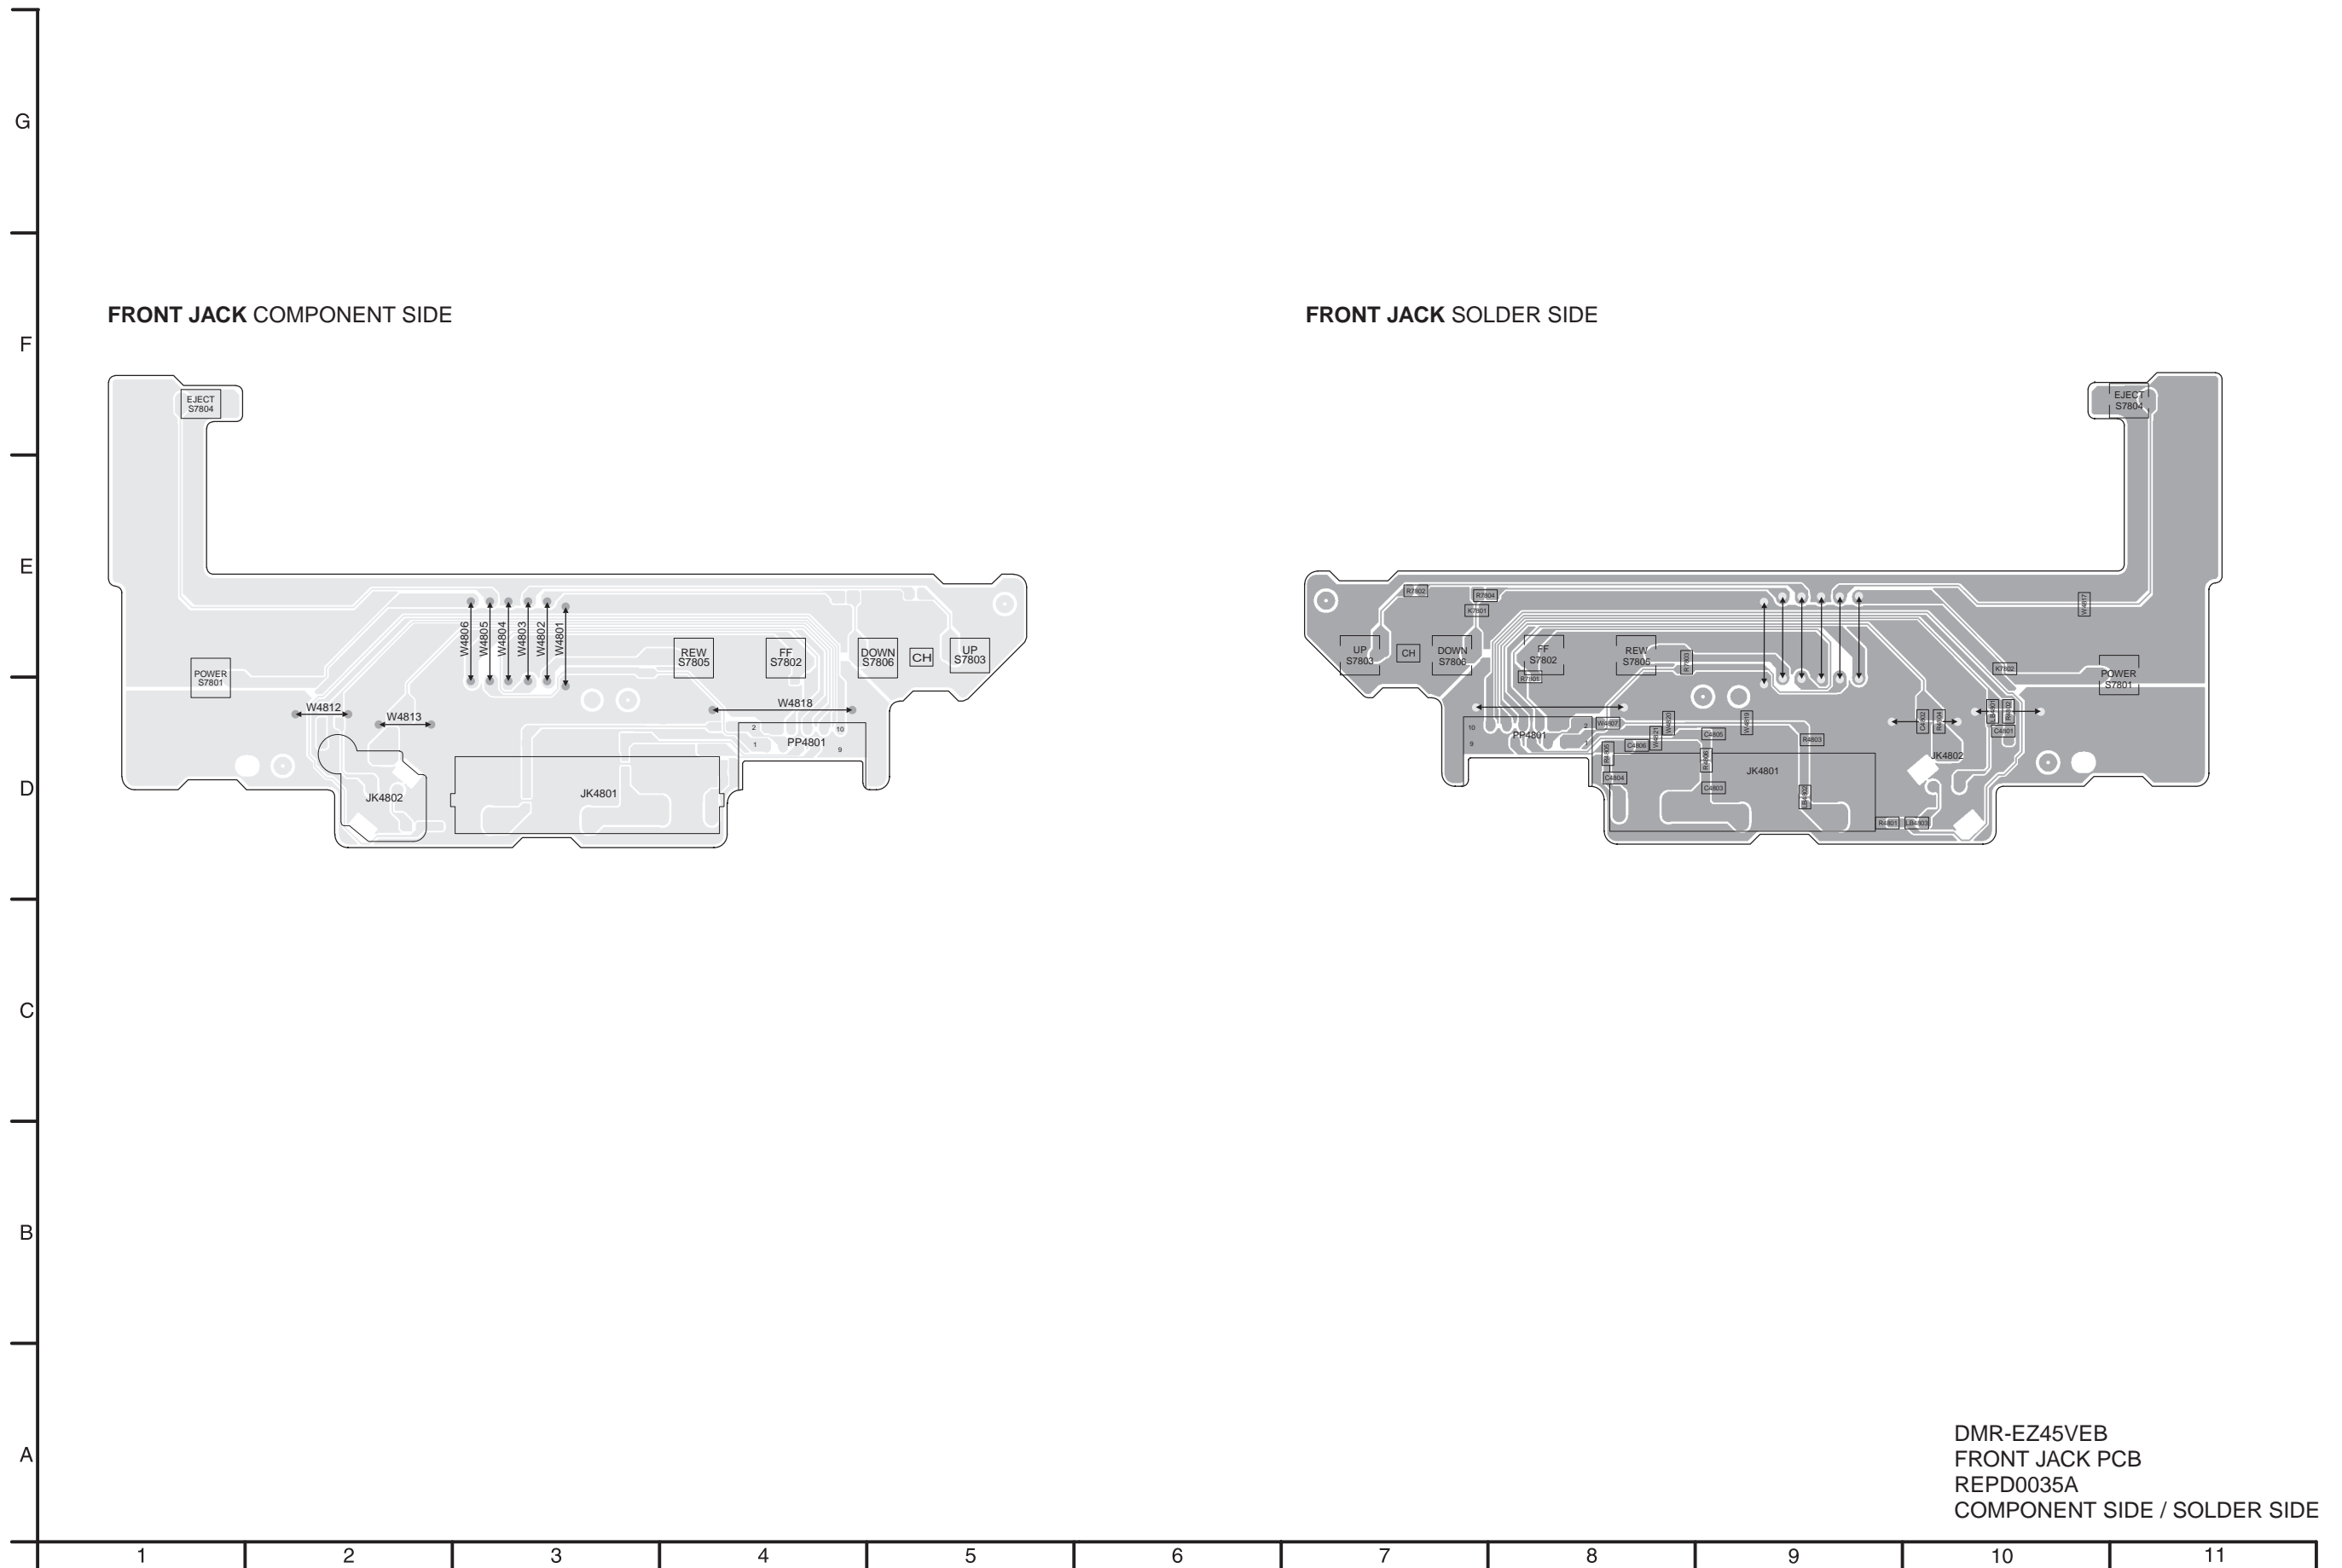

DMR-EZ45VEB
 FRONT JACK PCB
 REPD0035A
 COMPONENT SIDE / SOLDER SIDE


14.6. FL DRIVE P.C.B.

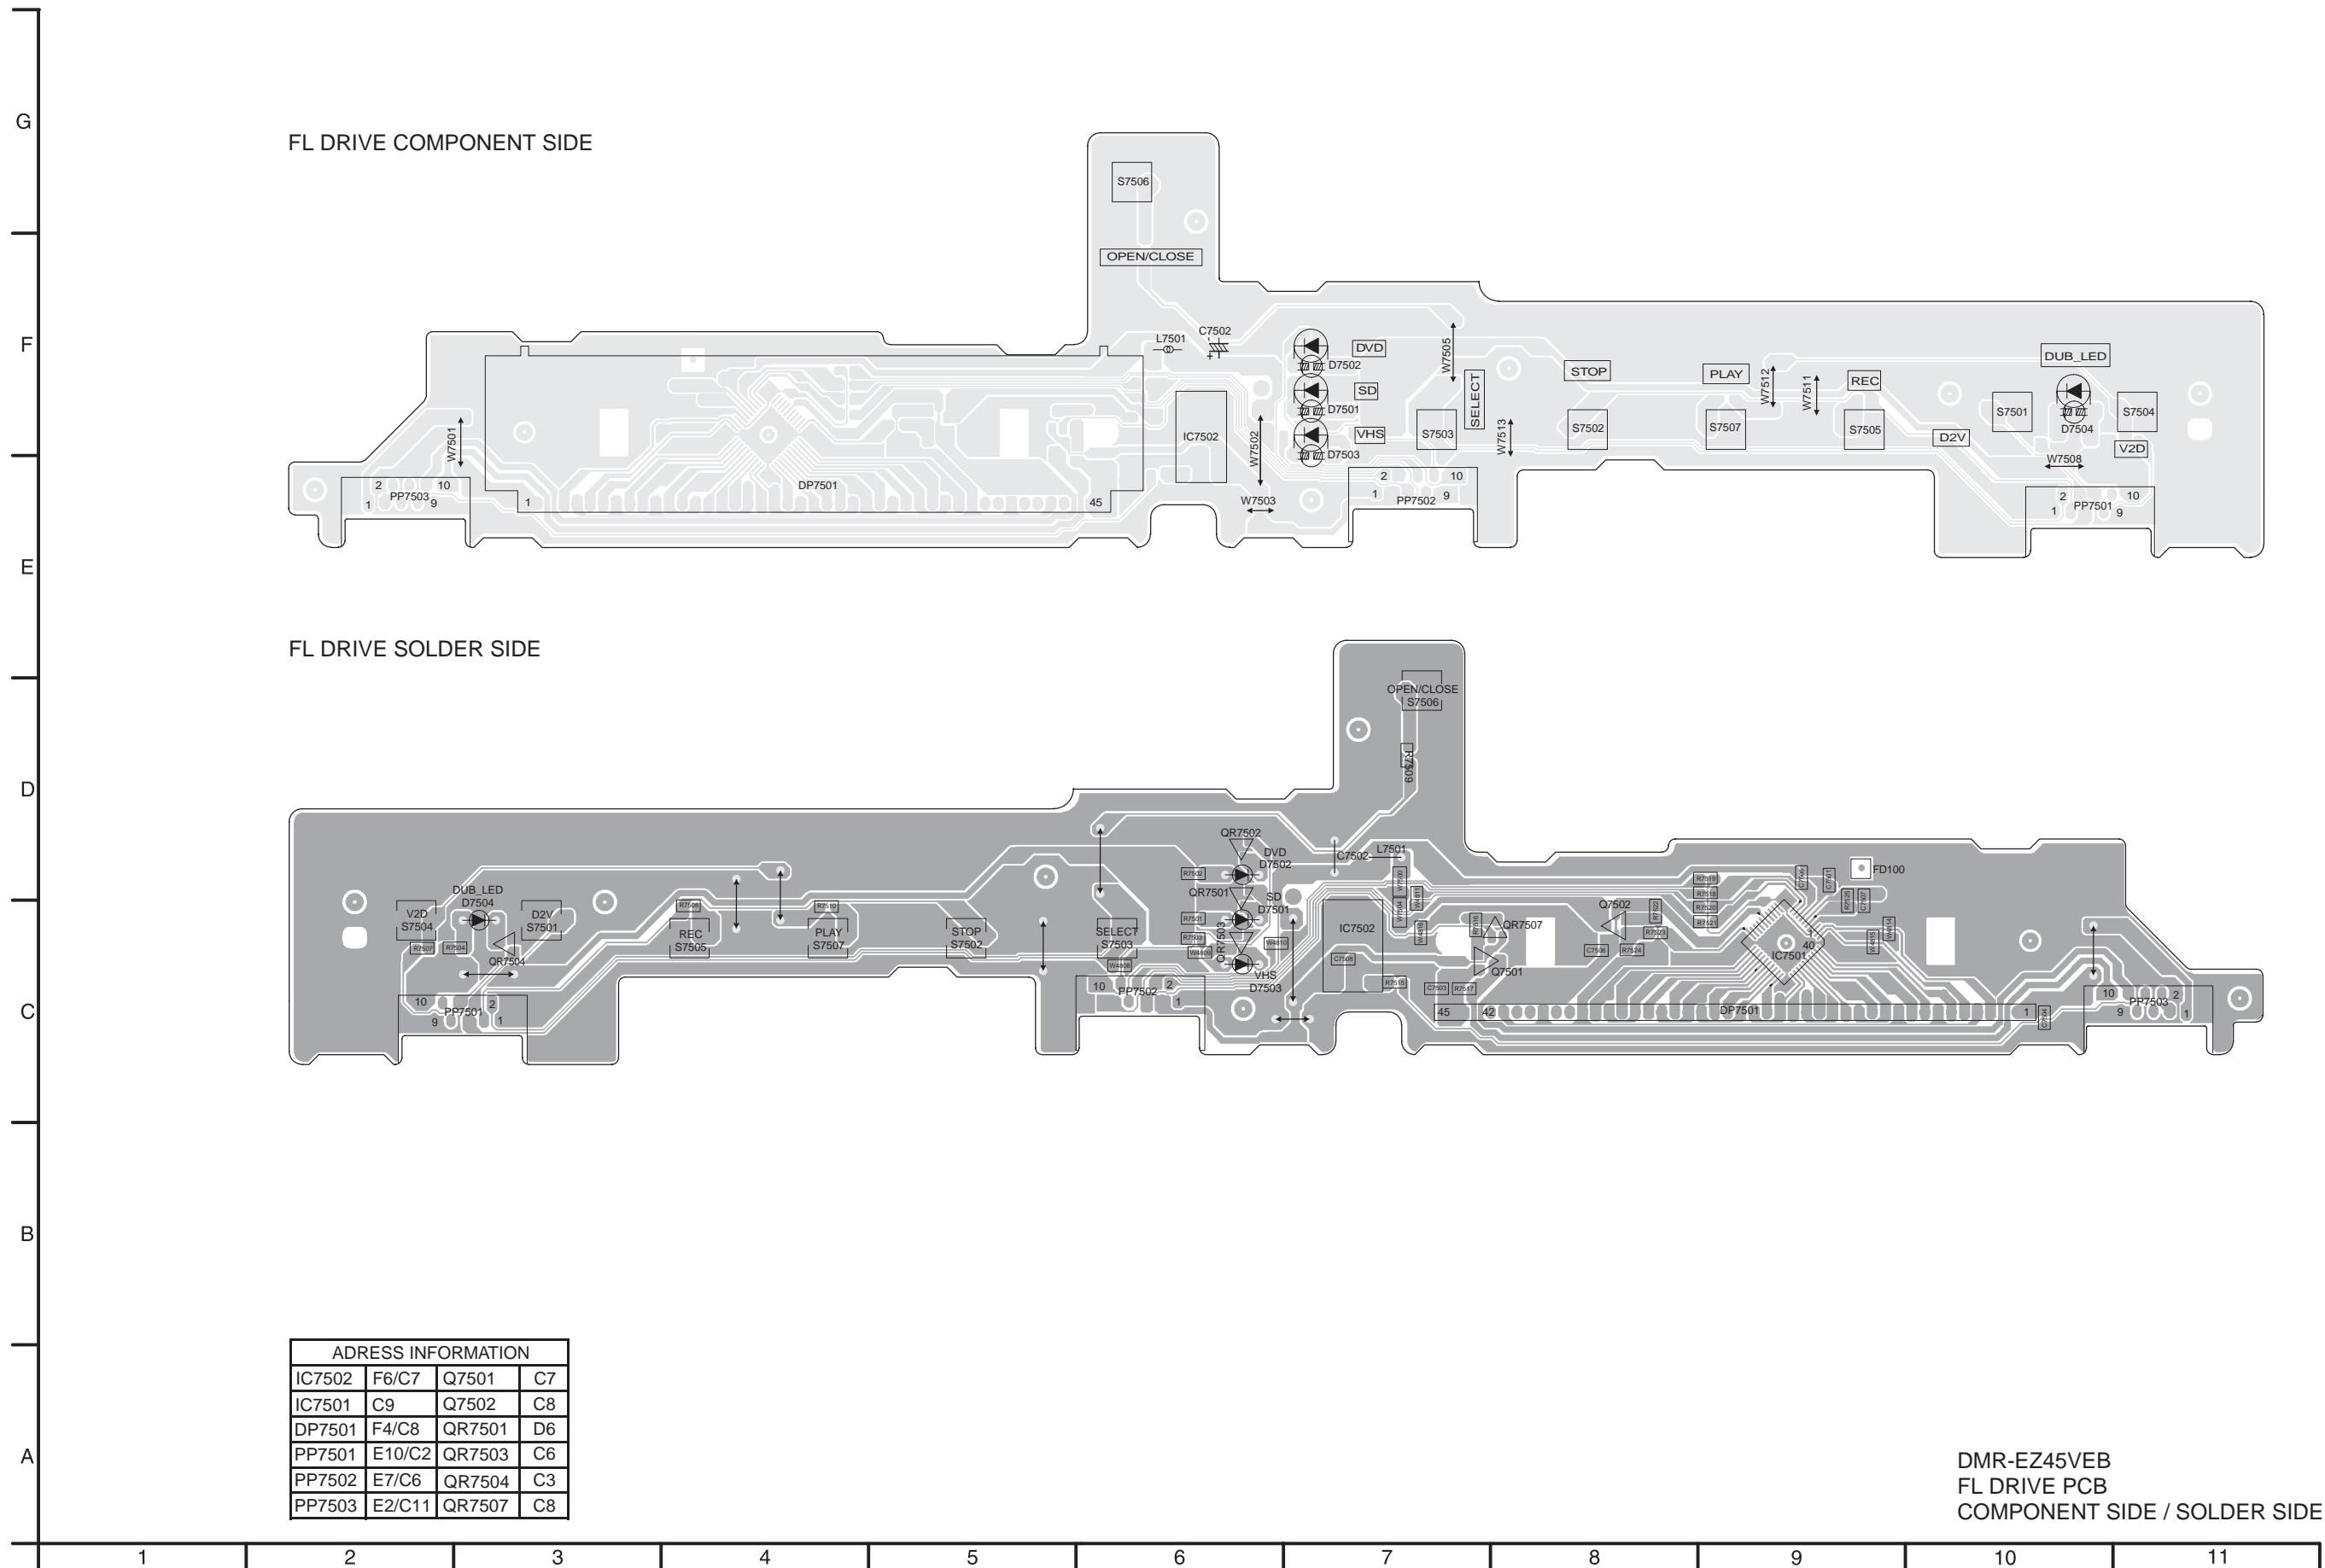

ADDRESS INFORMATION			
IC7502	F6/C7	Q7501	C7
IC7501	C9	Q7502	C8
DP7501	F4/C8	QR7501	D6
PP7501	E10/C2	QR7503	C6
PP7502	E7/C6	QR7504	C3
PP7503	E2/C11	QR7507	C8


DMR-EZ45VEB
 FL DRIVE PCB
 COMPONENT SIDE / SOLDER SIDE

14.7. SD/DV IN P.C.B.

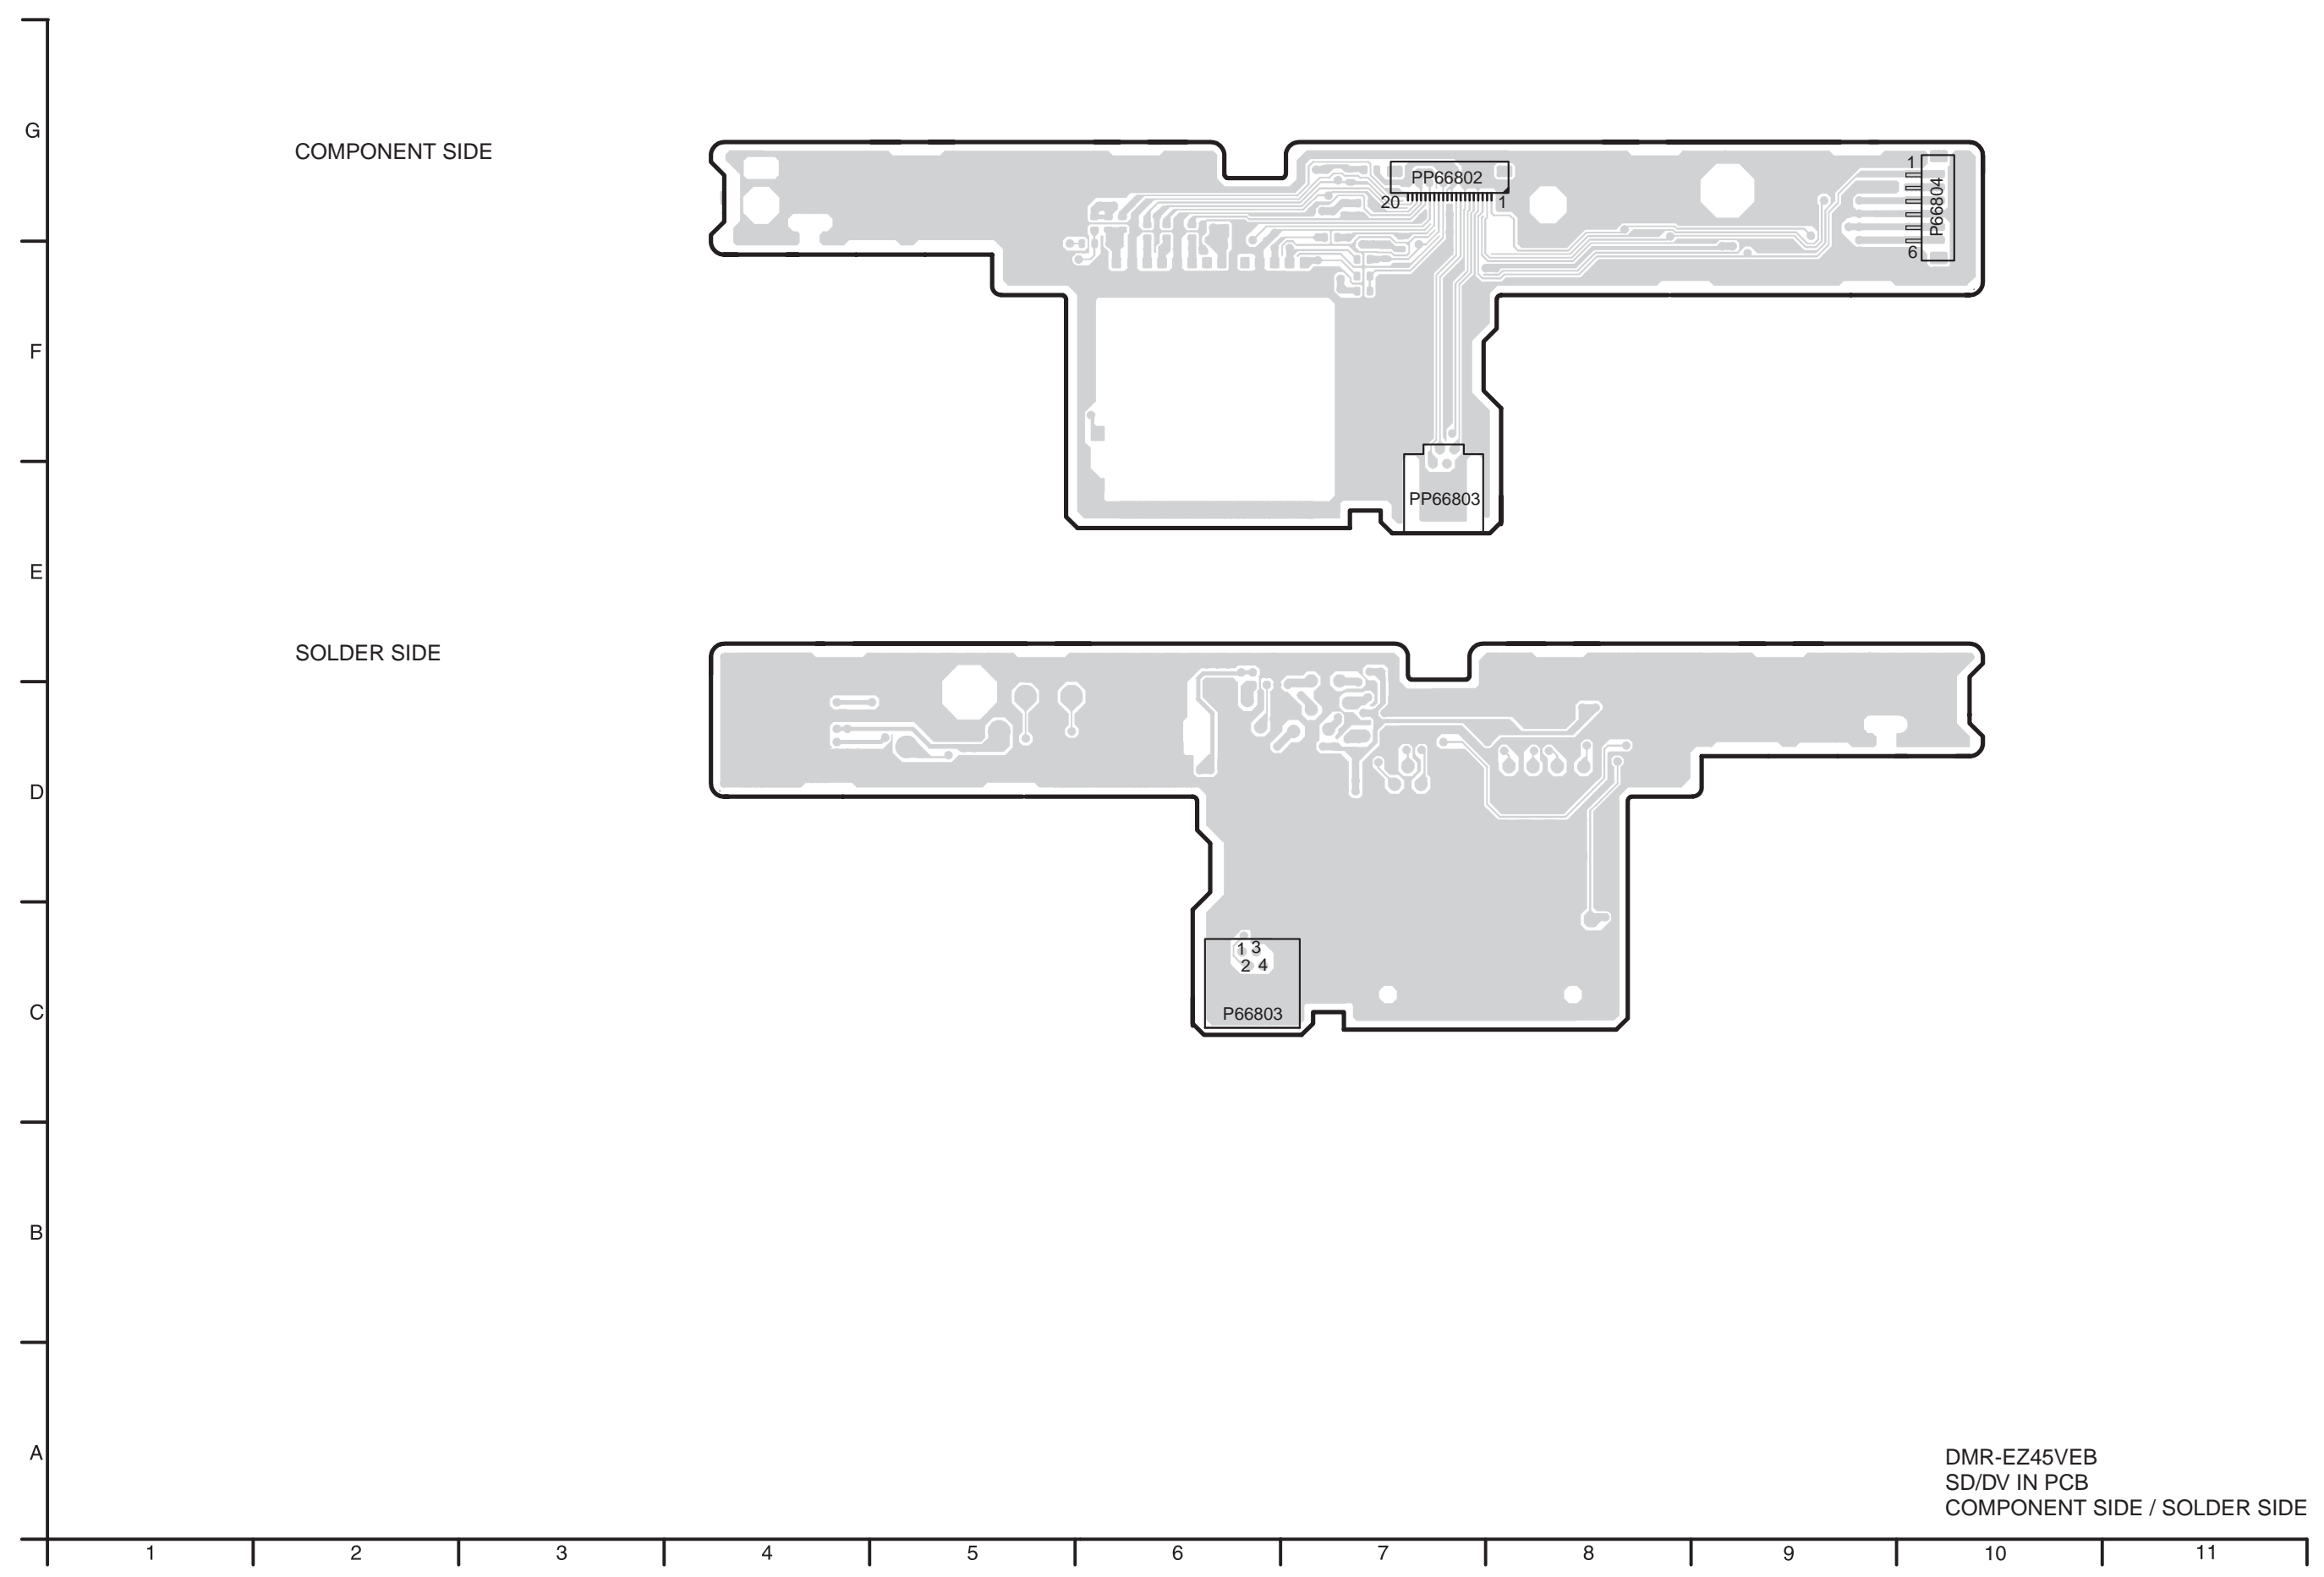


DMR-EZ45VEB
SD/DV IN PCB
COMPONENT SIDE / SOLDER SIDE

14.8. HDMI P.C.B.

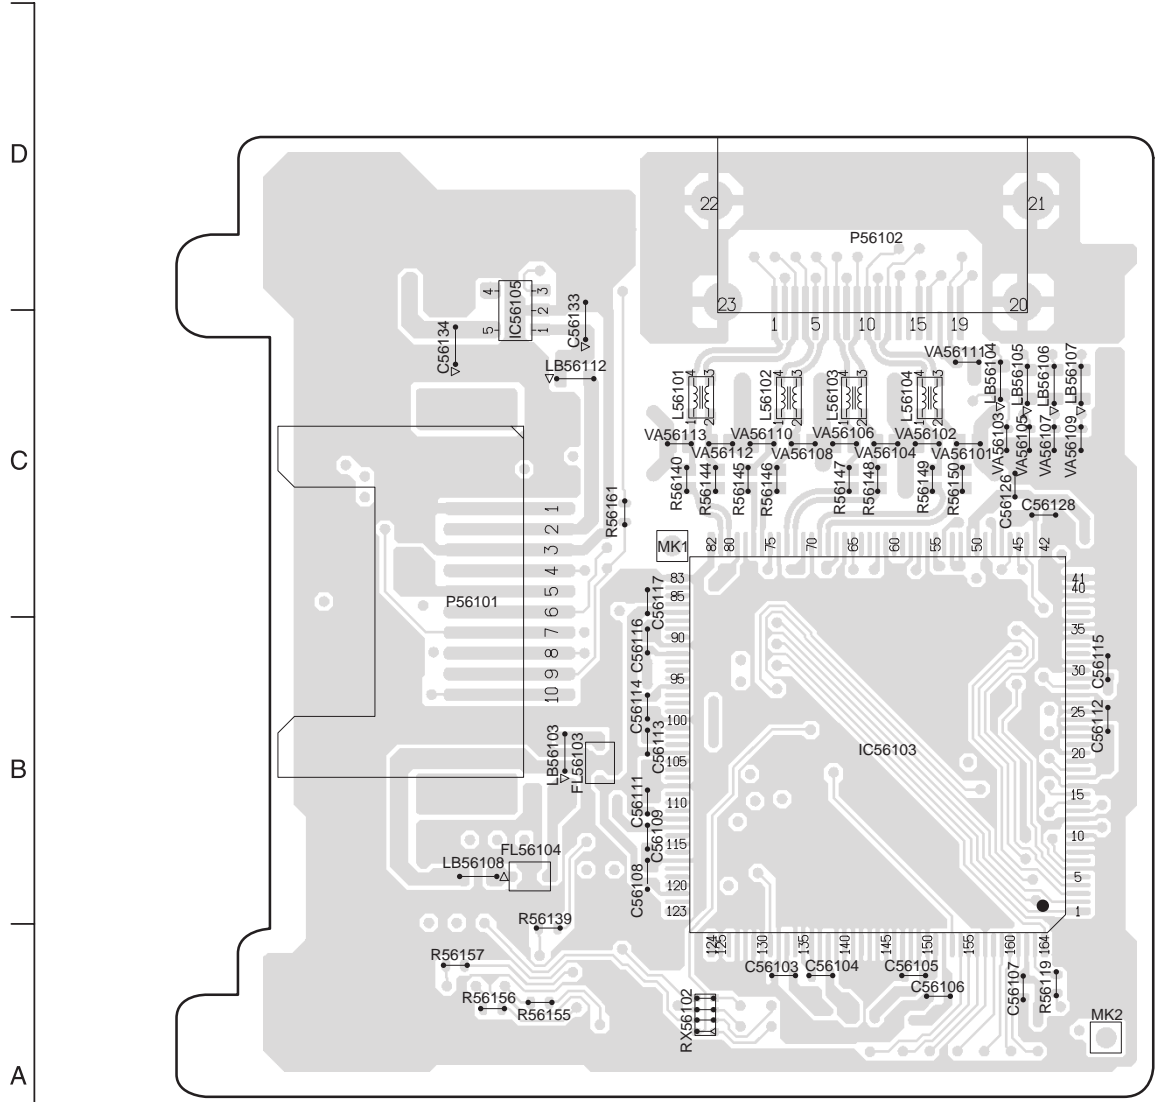


COMPONENT SIDE

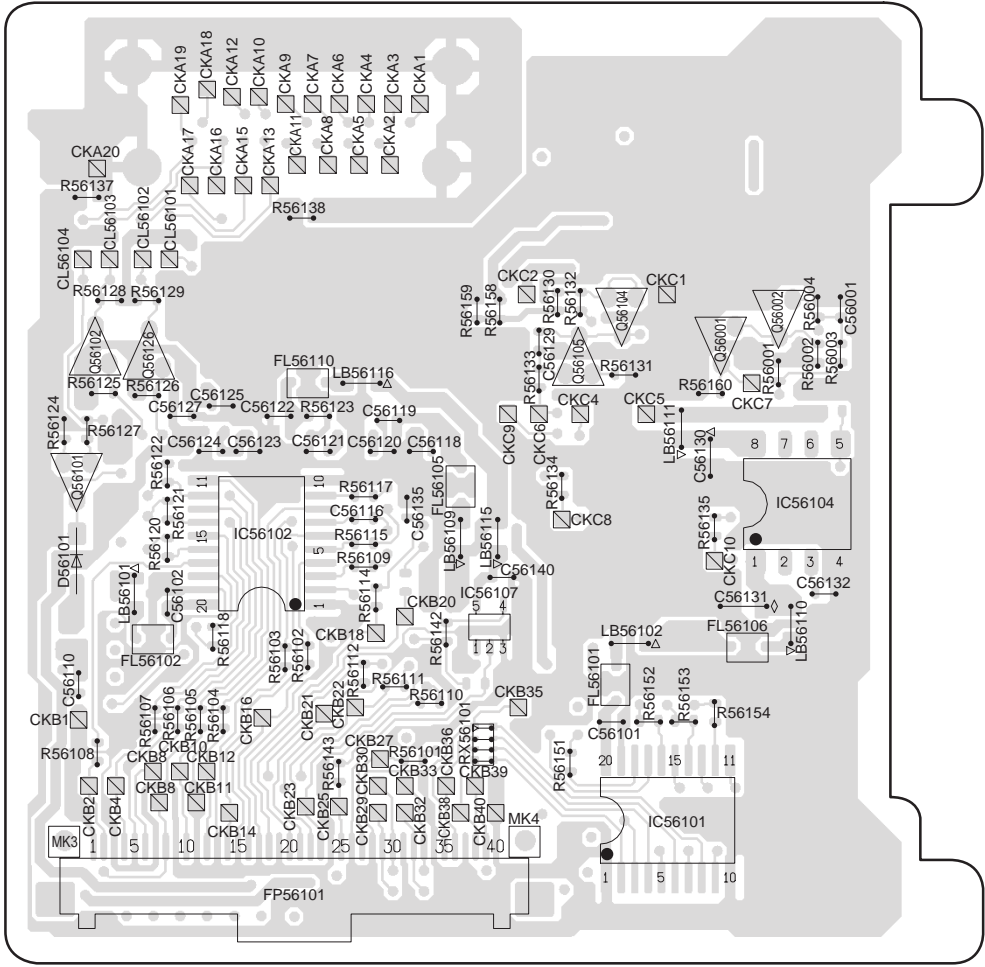

SOLDER SIDE

DMR-EZ45VEB
HDMI P.C.B.
VEP73137A

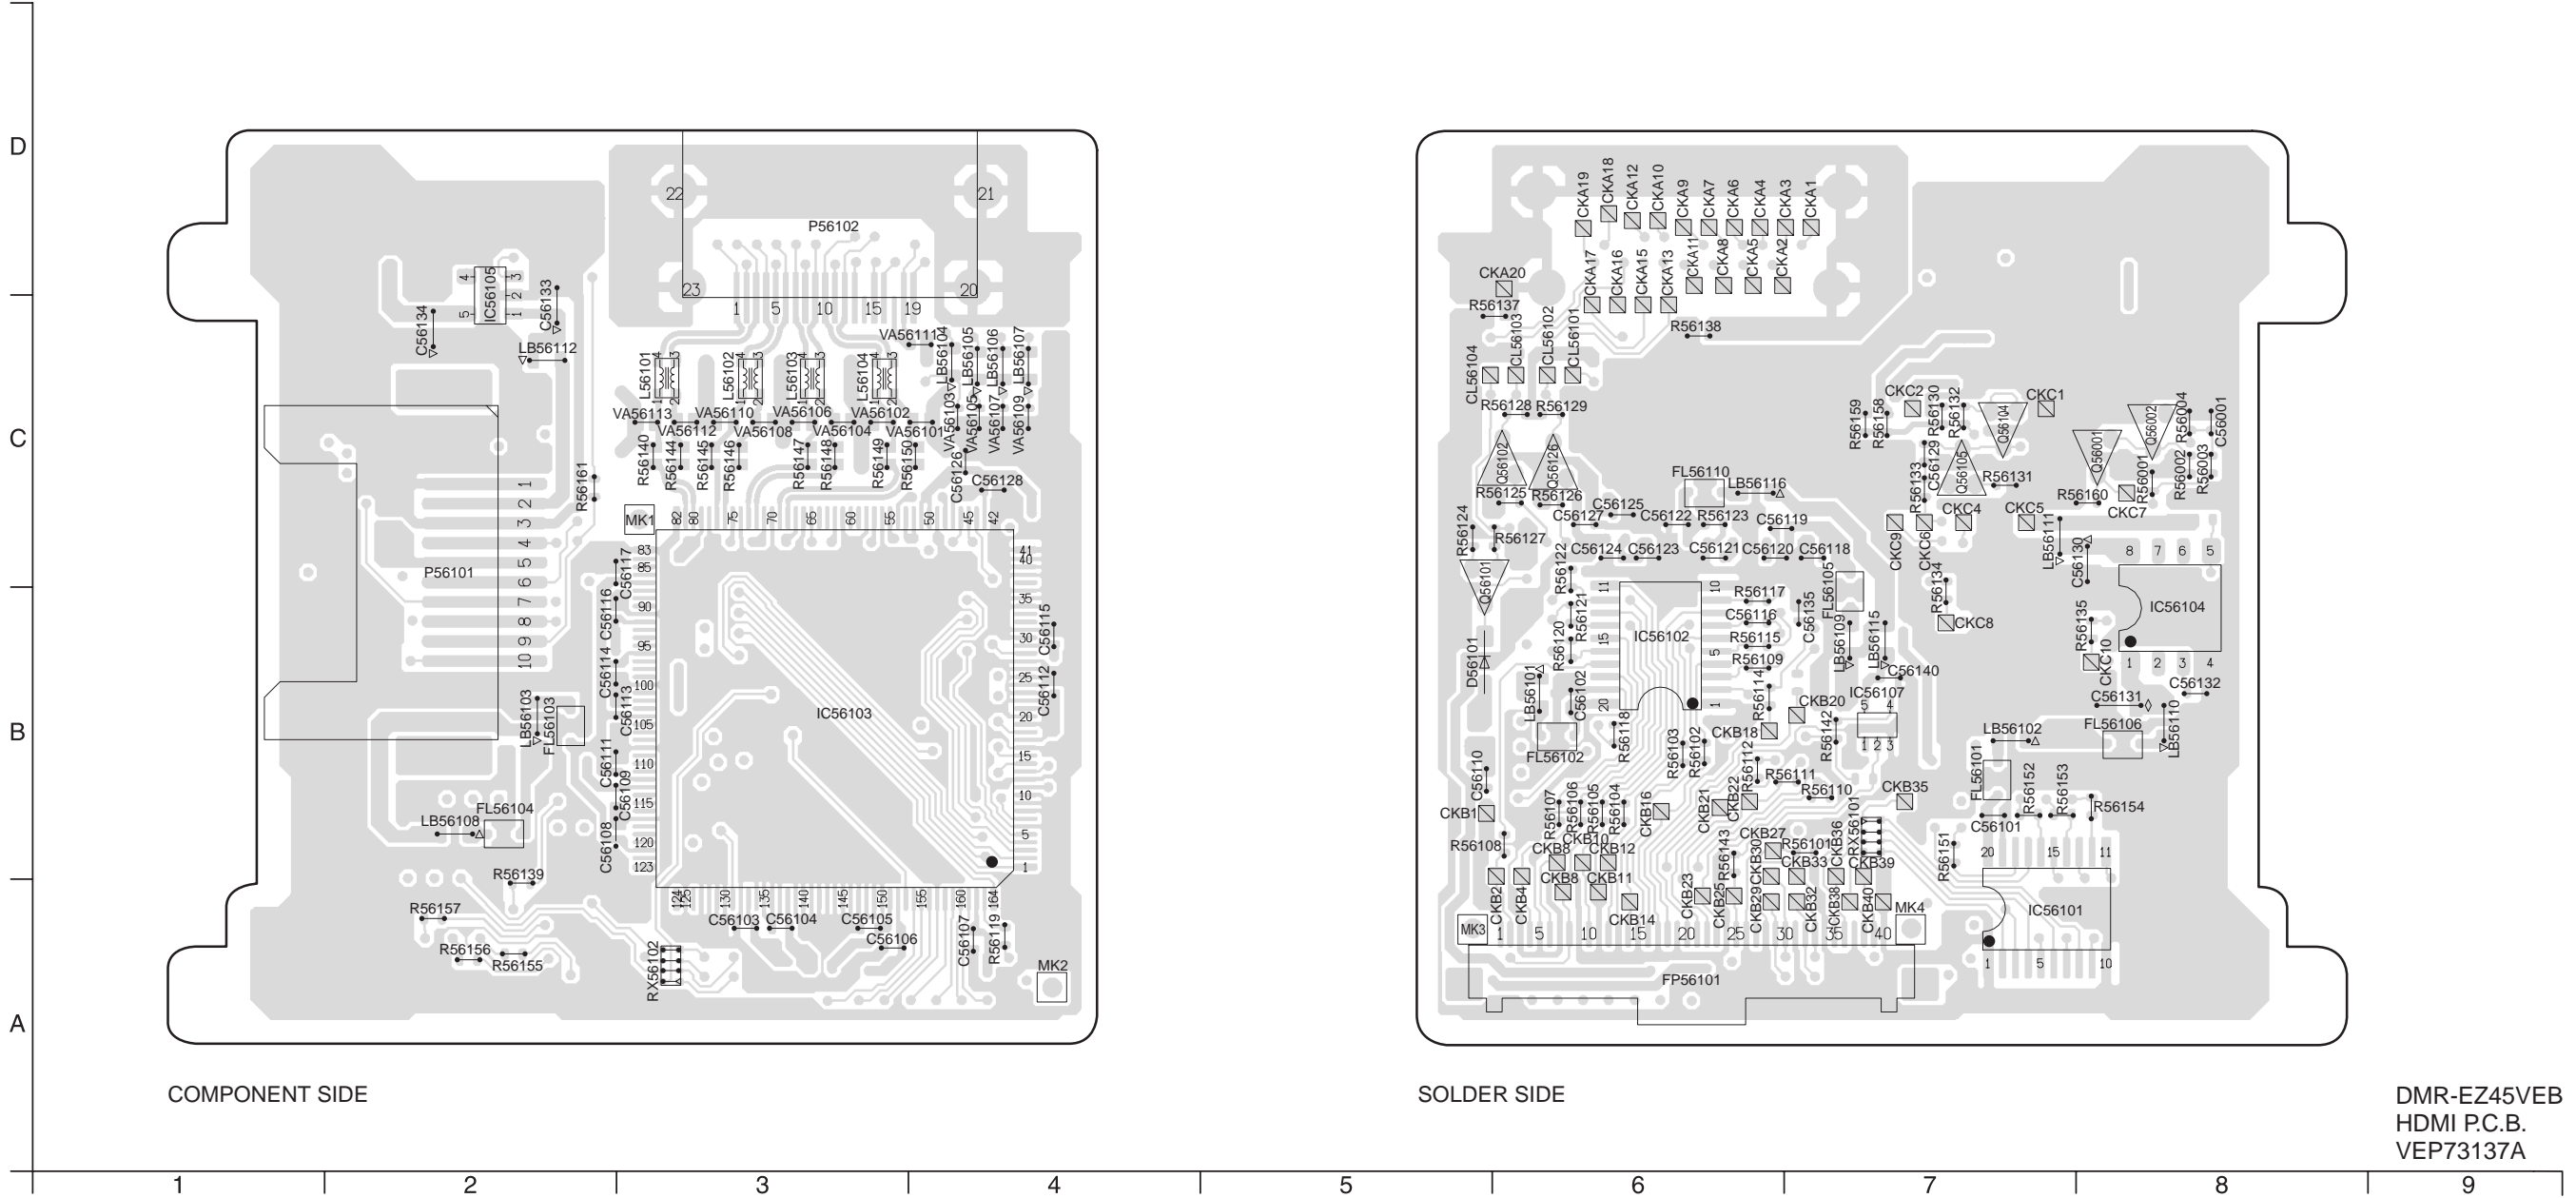

15 APPENDIX FOR SCHEMATIC DIAGRAM

15.1. VOLTAGE AND WAVEFORM CHART

NOTE:

- Indicated voltage values are the standard values for the unit measured by the DC electronic circuit tester (high-impedance) with the chassis taken as standard.

Therefore, there may exist some errors in the voltage values, depending on the internal impedance of the DC circuit tester.

15.1.1. VOLTAGE CHART (IC1201 - IC2501)

Ref.No.	IC1201									
Mode	1	2	3	4	5	6	7	8		
Stop	12,32	4,45	1,20	1,26	0,75	0,00	6,54	12,30		
Play	12,31	4,45	1,20	1,26	0,75	0,00	6,54	12,30		
Rec.	12,31	4,45	1,19	1,26	0,72	0,00	6,54	12,29		

Ref.No.	IC1203									
Mode	1	2	3	4	5	6	7	8		
Stop	12,32	0,03	1,29	4,16	0,00	1,18	0,76	5,21		
Play	12,32	0,03	1,29	4,16	0,00	1,25	0,76	5,21		
Rec.	12,31	0,03	1,29	4,15	0,00	1,25	0,76	5,21		

Ref.No.	IC1204									
Mode	1	2	3	4	5	6	7	8		
Stop	12,32	0,04	1,28	4,15	0,04	1,11	0,76	3,84		
Play	12,31	0,04	1,28	4,14	0,04	1,11	0,75	3,84		
Rec.	12,31	0,05	1,28	4,14	0,04	1,10	0,75	3,84		

Ref.No.	IC2501									
Mode	1	2	3	4	5	6	7	8	9	10
Stop	12,32	0,00	0,00	0,00	0,00	0,00	16,08	0,00	0,00	1,02
Play	12,32	0,00	0,00	0,00	0,00	0,00	16,08	0,00	0,00	1,02
Rec.	12,32	0,00	0,00	0,00	0,00	0,00	16,08	0,00	0,00	1,02

Ref.No.	IC2501									
Mode	11	12	13	14	15	16	17	18	19	20
Stop	3,82	0,00	0,05	5,05	2,47	2,47	2,47	2,47	5,02	0,75
Play	3,82	0,00	0,00	5,05	2,47	2,47	2,47	2,47	5,02	0,75
Rec.	3,82	0,00	0,00	5,05	2,47	2,47	2,47	2,47	5,02	0,75

Ref.No.	IC2501									
Mode	21	22	23	24	25					
Stop	12,32	0,74	0,74	0,00	0,74					
Play	12,32	0,74	0,74	0,00	0,74					
Rec.	12,32	0,74	0,74	0,00	0,74					

15.1.2. VOLTAGE CHART (IC3001-IC9706, Q1201-Q6801, QR1202-QR7901, P6001-P9703)

Ref.No.	IC3001									
Mode	1	2	3	4	5	6	7	8	9	10
Stop	0,00	0,00	0,06	5,12	2,09	2,59	2,83	1,94	1,86	2,03
Play	0,00	0,00	0,06	5,12	2,09	2,59	2,83	1,94	1,86	2,03
Rec.	0,00	0,00	0,06	5,12	2,09	2,59	2,83	1,94	1,86	2,03

Ref.No.	IC3001									
Mode	11	12	13	14	15	16	17	18	19	20
Stop	2,62	1,61	0,00	2,77	2,79	0,00	2,79	1,97	2,78	0,00
Play	2,62	1,61	0,00	2,77	2,79	0,00	2,79	1,97	2,78	0,00
Rec.	2,62	1,61	0,00	2,77	2,79	0,00	2,79	1,97	2,78	0,00

Ref.No.	IC3001									
Mode	21	22	23	24	25	26	27	28	29	30
Stop	2,79	5,01	2,31	0,00	2,12	2,95	0,42	0,00	2,10	2,89
Play	2,79	5,01	2,31	0,00	2,12	2,95	0,42	0,00	2,10	2,89
Rec.	2,79	5,01	2,31	0,00	2,12	2,95	0,42	0,00	2,10	2,89

Ref.No.	IC3001									
Mode	31	32	33	34	35	36	37	38	39	40
Stop	0,35	2,31	2,05	1,77	2,98	2,27	2,98	2,17	1,45	2,10
Play	0,35	2,31	2,05	1,77	2,98	2,27	2,98	2,17	1,45	2,10
Rec.	0,35	2,31	2,05	1,77	2,98	2,27	2,98	2,17	1,45	2,10

Ref.No.	IC3001									
Mode	41	42	43	44	45	46	47	48	49	50
Stop	2,72	1,97	2,12	0,00	3,13	3,13	5,07	0,14	3,12	5,07
Play	2,72	1,97	2,12	0,00	3,13	3,13	5,07	0,14	3,12	5,07
Rec.	2,72	1,97	2,12	0,00	3,13	3,13	5,07	0,14	3,12	5,07

Ref.No.	IC3001									
Mode	51	52	53	54	55	56	57	58	59	60
Stop	2,04	5,07	2,60	0,00	2,08	0,00	2,17	1,94	5,05	5,05
Play	2,04	5,07	2,60	0,00	2,08	0,00	2,17	1,94	5,05	5,05
Rec.	2,04	5,07	2,60	0,00	2,08	0,00	2,17	1,94	5,05	5,05

Ref.No.	IC3001									
Mode	61	62	63	64	65	66	67	68	69	70
Stop	4,12	2,29	2,20	2,26	2,20	2,26	0,28	1,27	2,01	2,70
Play	4,12	2,29	2,20	2,26	2,20	2,26	0,00	1,27	2,01	2,70
Rec.	4,12	2,29	2,20	2,26	2,20	2,26	0,00	1,27	2,01	2,70

Ref.No.	IC3001									
Mode	71	72	73	74	75	76	77	78	79	80
Stop	2,18	0,14	4,30	4,25	2,75	2,23	2,84	0,02	0,02	2,35
Play	2,18	0,14	4,30	4,25	2,75	2,23	2,84	0,02	0,02	2,35
Rec.	2,18	0,14	4,30	4,25	2,75	2,23	2,84	0,02	0,02	2,35

Ref.No.	IC3001									
Mode	81	82	83	84	85	86	87	88	89	90
Stop	4,67	0,00	2,97	5,03	2,28	2,28	2,28	0,00	2,28	2,28
Play	4,67	0,00	2,97	5,03	2,28	2,28	2,28	0,00	2,28	2,28
Rec.	4,67	0,00	2,97	5,03	2,28	2,28	2,28	0,00	2,28	2,28

Ref.No.	IC3001									
Mode	91	92	93	94	95	96	97	98	99	100
Stop	2,28	5,12	1,60	2,54	2,52	2,49	0,00	2,24	0,00	2,58
Play	2,28	5,12	1,60	2,54	2,52	2,49	0,00	2,24	0,00	2,58
Rec.	2,28	5,12	1,60	2,54	2,52	2,49	0,00	2,24	0,00	2,58

Ref.No.	IC3002									
Mode	1	2	3	4	5	6	7	8		
Stop	5,14	0,00	1,28	0,00	4,87	0,00	0,00	5,65		
Play	5,14	0,00	1,28	0,00	4,87	0,00	0,00	5,65		
Rec.	5,14	0,00	1,28	0,00	4,87	0,00	0,00	5,65		

Ref.No.	IC3901									
Mode	1	2	3	4	5	6	7	8	9	10
Stop	2,01	2,51	1,51	0,00	1,57	4,92	1,66	4,91	0,00	2,77
Play	2,01	2,51	1,51	0,00	1,57	4,92	1,66	4,91	0,00	2,77
Rec.	2,01	2,51	1,51	0,00	1,57	4,92	1,66	4,91	0,00	2,77

Ref.No.	IC3901									
Mode	11	12	13	14	15	16	17	18	19	20
Stop	1,65	0,00	0,00	1,65	1,69	1,80	0,00	0,00	1,62	1,66
Play	1,65	0,00	0,00	1,65	1,69	1,80	0,00	0,00	1,62	1,66
Rec.	1,65	0,00	0,00	1,65	1,69	1,80	0,00	0,00	1,62	1,66

Ref.No.	IC3901									
Mode	21	22	23	24	25	26	27	28	29	30
Stop	0,00	1,74	1,67	1,70	4,90	1,49	0,00	1,49	0,00	2,01
Play	0,00	1,74	1,67	1,70	4,90	1,49	0,00	1,49	0,00	2,01
Rec.	0,00	1,74	1,67	1,70	4,90	1,49	0,00	1,49	0,00	2,01

Ref.No.	IC3901									
Mode	31	32	33	34	35	36	37	38	39	40
Stop	1,56	0,00	1,57	0,00	2,04	0,00	1,57	0,00	1,59	4,92
Play	1,56	0,00	1,57	0,00	2,04	0,00	1,57	0,00	1,59	4,92
Rec.	1,56	0,00	1,57	0,00	2,04	0,00	1,57	0,00	1,59	4,92

Ref.No.	IC3901									
Mode	41	42	43	44	45	46	47	48	49	50
Stop	1,55	4,92	2,00	0,00	2,00	11,78	2,02	2,00	4,48	4,48
Play	1,55	4,92	2,00	0,00	2,00	11,78	2,02	2,00	4,48	4,48
Rec.	1,55	4,92	2,00	0,00	2,00	11,78	2,02	2,00	4,48	4,48

Ref.No.	IC3901									
Mode	51	52	53	54	55	56	57	58	59	60
Stop	4,44	4,45	4,45	4,45	4,45	4,45	9,00	4,45	4,45	4,45
Play	4,44	4,45	4,45	4,45	4,45	4,45	9,00	4,45	4,45	4,45
Rec.	4,44	4,45	4,45	4,45	4,45	4,45	9,00	4,45	4,45	4,45

Ref.No.	IC3901									
Mode	61	62	63	64	65	66	67	68	69	70
Stop	4,45	4,45	4,45	4,45	9,01	0,00	0,00	0,00	0,00	0,00
Play	4,45	4,45	4,45	4,45	9,01	0,00	0,00	0,00	0,00	0,00
Rec.	4,45	4,45	4,45	4,45	9,01	0,00	0,00	0,00	0,00	0,00

Ref.No.	IC3901									
Mode	71	72	73	74	75	76	77	78	79	80
Stop	4,50	4,50	4,50	4,50	0,00	4,50	9,62	4,50	4,50	0,00
Play	4,50	4,50	4,50	4,50	0,00	4,50	9,62	4,50	4,50	0,00
Rec.	4,50	4,50	4,50	4,50	0,00	4,50	9,62	4,50	4,50	0,00

Ref.No.	IC3901									
Mode	81	82	83	84	85	86	87	88	89	90
Stop	2,08	4,87	1,44	4,92	2,02	4,46	4,52	4,66	4,52	4,92
Play	2,08	4,87	1,44	4,92	2,02	4,46	4,52	4,66	4,52	4,92
Rec.	2,08	4,87	1,44	4,92	2,02	4,46	4,52	4,66	4,52	4,92

Ref.No.	IC3901									
Mode	91	92	93	94	95	96	97	98	99	100
Stop	2,02	3,19	2,09	4,92	2,01	0,00	2,04	0,00	2,01	2,45
Play	2,02	3,19	2,09	4,92	2,01	0,00	2,04	0,00	2,01	2,45
Rec.	2,02	3,19	2,09	4,92	2,01	0,00	2,04	0,00	2,01	2,45

Ref.No.	IC3905									
Mode	1	2	3	4	5	6				
Stop	0,04	2,06	4,92	2,83	0,00	2,81				
Play	0,04	2,06	4,92	2,83	0,00	2,81				
Rec.	0,04	2,06	4,92	2,83	0,00	2,81				

Ref.No.	IC4501									
Mode	1	2	3	4	5	6	7	8	9	10
Stop	2,44	0,00	2,44	0,00	0,00	2,55	2,05	0,00	0,00	0,00
Play	2,44	0,00	2,44	0,00	0,00	2,55	2,05	0,00	0,00	0,00
Rec.	2,44	0,00	2,44	0,00	0,00	2,55	2,05	0,00	0,00	0,00

Ref.No.	IC4501									
Mode	11	12	13	14	15	16	17	18	19	20
Stop	0,00	2,05	0,00	0,00	0,00	2,50	0,73	2,55	2,55	2,10
Play	0,00	2,05	0,00	0,00	0,00	2,52	0,73	2,55	2,55	2,10
Rec.	0,00	2,05	0,00	0,00	0,00	2,52	0,73	2,55	2,55	2,10

Ref.No.	IC4501									
Mode	21	22	23	24	25	26	27	28	29	30
Stop	2,10	2,10	0,00	2,10	5,11	2,13	0,00	4,33	1,86	1,79
Play	2,10	2,10	0,00	2,10	5,11	2,13	0,00	4,33	1,86	1,79
Rec.	2,10	2,10	0,00	2,10	5,11	2,13	0,00	4,33	1,86	1,79

Ref.No.	IC4501									
Mode	31	32	33	34	35	36	37	38	39	40
Stop	0,00	2,54	2,55	0,73	2,55	0,00	1,73	0,00	0,00	5,11
Play	0,00	2,54	2,55	0,73	2,55	0,00	1,73	0,00	0,00	5,11
Rec.	0,00	2,54	2,55	0,73	2,55	0,00	1,73	0,00	0,00	5,11

Ref.No.	IC4501									
Mode	41	42	43	44	45	46	47	48	49	50
Stop	0,00	4,30	4,25	3,26	1,57	4,97	2,54	2,55	0,24	0,24
Play	0,00	4,30	4,25	3,26	1,57	4,97	2,54	2,55	0,24	0,24
Rec.	0,00	4,30	4,25	3,26	1,57	4,97	2,54	2,55	0,24	0,24

Ref.No.	IC4501									
Mode	51	52	53	54	55	56	57	58	59	60
Stop	6,13	6,14	6,13	0,00	0,00	0,00	6,15	12,04	6,24	0,00
Play	6,13	6,14	6,13	0,00	0,00	0,00	6,15	12,04	6,24	0,00
Rec.	6,13	6,14	6,13	0,00	0,00	0,00	6,15	12,04	6,24	0,00

Ref.No.	IC4501									
Mode	61	62	63	64						
Stop	2,54	2,47	0,00	0,00						
Play	2,54	2,47	0,00	0,00						
Rec.	2,54	2,47	0,00	0,00						

Ref.No.	IC6001									
Mode	1	2	3	4	5	6	7	8	9	10
Stop	5,02	4,12	0,00	0,00	5,04	0,70	0,70	4,75	2,95	5,04
Play	5,02	4,12	0,00	0,00	5,04	5,02	0,70	0,60	2,95	5,04
Rec.	5,02	4,12	0,00	0,00	5,04	0,70	0,70	4,75	2,95	5,04

Ref.No	IC6001									
Mode	11	12	13	14	15	16	17	18	19	20
Stop	0,00	0,00	0,00	5,03	3,91	0,00	0,00	0,00	0,00	0,03
Play	0,00	0,00	0,00	5,03	3,91	0,00	0,00	0,00	0,00	0,00
Rec.	0,00	0,00	0,00	5,03	3,91	0,00	0,00	0,00	0,00	0,03

Ref.No.	IC6001									
Mode	21	22	23	24	25	26	27	28	29	30
Stop	0,00	0,00	4,34	0,00	0,00	5,05	0,00	0,00	0,00	5,03
Play	0,00	0,00	4,34	0,00	0,00	5,05	0,00	0,00	0,00	5,03
Rec.	0,00	0,00	4,34	0,00	0,00	5,05	0,00	0,00	0,00	5,03

Ref.No.	IC6001									
Mode	31	32	33	34	35	36	37	38	39	40
Stop	5,03	5,02	0,00	4,57	0,00	0,00	5,03	2,17	2,09	0,00
Play	5,03	5,02	0,00	4,57	0,00	0,00	5,03	2,17	2,09	0,00
Rec.	5,03	0,00	0,00	0,00	0,00	0,00	5,03	2,17	2,09	0,00

Ref.No.	IC6001									
Mode	41	42	43	44	45	46	47	48	49	50
Stop	0,00	0,00	5,10	0,00	0,00	0,00	2,01	2,27	0,00	1,69
Play	0,00	0,00	5,10	0,00	0,00	0,00	2,01	2,27	0,00	1,69
Rec.	0,00	0,00	5,10	0,00	0,00	0,00	2,01	2,27	0,00	1,69

Ref.No.	IC6001									
Mode	51	52	53	54	55	56	57	58	59	60
Stop	2,52	1,70	5,03	2,23	0,47	1,94	0,00	0,40	0,00	0,00
Play	2,52	1,70	5,03	2,23	0,00	1,94	0,00	0,00	0,00	0,00
Rec.	2,52	1,70	5,03	2,23	0,00	1,94	0,00	0,00	0,00	0,00

Ref.No.	IC6001									
Mode	61	62	63	64	65	66	67	68	69	70
Stop	0,01	0,00	0,00	0,00	0,00	0,00	0,00	3,95	2,43	4,26
Play	0,01	0,00	0,00	0,00	0,00	0,00	0,00	3,95	2,43	4,26
Rec.	0,01	0,00	0,00	0,00	0,00	0,00	0,00	3,95	2,43	4,26

Ref.No.	IC6001									
Mode	71	72	73	74	75	76	77	78	79	80
Stop	4,26	4,22	0,00	0,00	4,81	0,00	5,04	0,00	0,14	5,07
Play	4,26	4,22	0,00	0,00	4,81	0,00	5,04	0,00	0,14	5,07
Rec.	4,26	4,22	0,00	0,00	4,81	0,00	5,04	0,00	0,14	5,07

Ref.No.	IC6001									
Mode	81	82	83	84	85	86	87	88	89	90
Stop	0,00	0,00	0,00	0,00	0,00	2,54	2,54	0,00	0,00	2,46
Play	0,00	0,00	0,00	0,00	0,00	2,54	2,54	0,00	0,00	2,46
Rec.	0,00	0,00	0,00	0,00	0,00	2,54	2,54	0,00	0,00	2,46

Ref.No.	IC6001									
Mode	91	92	93	94	95	96	97	98	99	100
Stop	2,54	2,54	0,00	2,50	2,50	2,53	2,53	5,08	5,04	0,00
Play	2,54	2,54	0,00	2,50	2,50	2,53	2,53	5,08	5,04	0,00
Rec.	2,54	2,54	0,00	2,50	2,50	2,53	2,53	5,08	5,04	0,00

Ref.No	IC6302									
Mode	1	2	3	4						
Stop	5,02	0,00	4,87	5,67						
Play	5,02	0,00	4,87	5,67						
Rec.	5,02	0,00	4,87	5,67						

Ref.No.	IC7301									
Mode	1	2	3	4	5	6	7	8	9	10
Stop	2,42	2,43	2,43	0,00	0,00	2,43	0,00	2,42	0,00	2,43
Play	2,42	2,43	2,43	0,00	0,00	2,43	0,00	2,42	0,00	2,43
Rec.	2,42	2,43	2,43	0,00	0,00	2,43	0,00	2,42	0,00	2,43

Ref.No.	IC7301									
Mode	11	12	13	14	15	16	17	18	19	20
Stop	0,00	0,00	0,00	2,92	2,5	0,00	0,00	2,93	0,00	0,00
Play	0,00	0,00	0,00	2,92	2,5	0,00	0,00	2,93	0,00	0,00
Rec.	0,00	0,00	0,00	2,92	2,5	0,00	0,00	2,93	0,00	0,00

Ref.No.	IC7301									
Mode	21	22	23	24	25	26	27	28	29	30
Stop	0,63	0,00	0,00	1,40	2,39	1,41	0,00	4,97	4,66	4,52
Play	0,63	0,00	0,00	1,40	2,39	1,41	0,00	4,97	4,66	4,52
Rec.	0,63	0,00	0,00	1,40	2,39	1,41	0,00	4,97	4,66	4,52

Ref.No.	IC7301									
Mode	31	32	33	34	35	36	37	38	39	40
Stop	2,97	2,42	2,42	2,12	2,53	0,00	0,00	2,42	2,42	2,42
Play	2,97	2,42	2,42	2,12	2,53	0,00	0,00	2,42	2,42	2,42
Rec.	2,97	2,42	2,42	2,12	2,53	0,00	0,00	2,42	2,42	2,42

Ref.No.	IC7301									
Mode	41	42	43	44						
Stop	2,43	0,00	2,43	0,00						
Play	2,43	0,00	2,43	0,00						
Rec.	2,43	0,00	2,43	0,00						

Ref.No.	IC7401									
Mode	1	2	3	4	5	6	7	8		
Stop	4,92	0,00	1,26	0,00	5,66	0,00	0,00	5,66		
Play	4,92	0,00	1,26	0,00	5,66	0,00	0,00	5,66		
Rec.	4,92	0,00	1,26	0,00	5,66	0,00	0,00	5,66		

Ref.No.	IC7402									
Mode	1	2	3	4	5	6	7	8		
Stop	4,93	0,00	1,26	0,00	4,66	0,00	0,00	5,66		
Play	4,93	0,00	1,26	0,00	4,66	0,00	0,00	5,66		
Rec.	4,93	0,00	1,26	0,00	4,66	0,00	0,00	5,66		

Ref.No.	IC7403									
Mode	1	2	3	4	5	6	7	8		
Stop	4,98	0,00	1,28	0,00	4,81	0,00	0,00	5,66		
Play	4,98	0,00	1,28	0,00	4,81	0,00	0,00	5,66		
Rec.	4,98	0,00	1,28	0,00	4,81	0,00	0,00	5,66		

Ref.No.	IC9102									
Mode	1	2	3	4	5	6	7	8		
Stop	4,98	0,00	1,27	0,00	4,78	0,00	0,00	5,68		
Play	4,98	0,00	1,27	0,00	4,78	0,00	0,00	5,68		
Rec.	4,98	0,00	1,27	0,00	4,77	0,00	0,00	5,68		

Ref.No.	IC9106									
Mode	1	2	3	4	5	6	7	8		
Stop	3,27	0,00	1,26	0,00	4,78	0,00	0,00	3,74		
Play	3,27	0,00	1,26	0,00	4,78	0,00	0,00	3,74		
Rec.	3,28	0,00	1,27	0,00	4,78	0,00	0,00	3,72		

Ref.No.	IC9301									
Mode	1	2	3	4	5	6				
Stop	1,27	0,00	4,78	5,68	0,00	5,00				
Play	1,27	0,00	4,78	5,68	0,00	5,00				
Rec.	1,23	0,00	4,77	5,68	0,00	5,00				

Ref.No.	IC9302									
Mode	1	2	3	4	5	6	7	8		
Stop	4,78	3,33	3,33	0,00	3,33	3,33	4,74	10,54		
Play	4,78	3,33	3,33	0,00	3,33	3,33	4,74	10,54		
Rec.	4,78	3,33	3,33	0,00	3,33	3,33	4,74	10,54		

Ref.No.	IC9305									
Mode	1	2	3	4	5	6	7	8		
Stop	10,54	5,00	5,00	0,00	3,33	3,33	3,33	12,31		
Play	10,54	5,00	5,00	0,00	3,33	3,33	3,33	12,31		
Rec.	10,54	5,00	5,00	0,00	3,33	3,33	3,33	12,31		

Ref.No.	IC9702									
Mode	1	2	3	4	5					
Stop	2,35	3,27	0,00	0,00	0,00					
Play	2,35	3,27	0,00	0,00	0,00					
Rec.	2,35	3,27	0,00	0,00	0,00					

Ref.No.	IC9703									
Mode	1	2	3	4	5					
Stop	4,57	5,05	0,00	0,00	0,00					
Play	4,57	5,05	0,00	0,00	0,00					
Rec.	4,57	5,05	0,00	0,00	0,00					

Ref.No.	IC9704									
Mode	1	2	3	4	5	6	7	8	9	10
Stop	2,35	4,28	5,01	4,46	0,13	0,15	4,29	0,00	0,00	0,85
Play	2,38	4,28	5,01	4,46	0,17	0,16	4,29	0,00	0,00	0,85
Rec.	2,42	4,28	5,01	4,46	0,16	0,17	4,29	0,00	0,00	0,85

Ref.No.	IC9704									
Mode	11	12	13	14	15	16	17	18	19	20
Stop	1,96	4,84	2,05	0,00	1,97	3,27	4,81	3,28	3,20	0,00
Play	1,20	4,84	2,05	0,00	1,97	3,27	4,81	3,28	3,22	0,00
Rec.	1,20	4,83	2,05	0,00	1,97	3,28	4,83	3,28	3,18	0,00

Ref.No.	IC9704									
Mode	21	22	23	24	25	26	27	28	29	30
Stop	3,00	0,00	3,22	0,00	0,00	0,00	0,00	0,00	4,65	4,53
Play	3,00	1,31	3,22	0,00	0,00	0,00	0,00	0,00	4,65	4,53
Rec.	3,01	0,00	3,21	0,00	0,00	0,00	0,00	0,00	4,65	4,53

Ref.No.	IC9704									
Mode	31	32	33	34	35	36	37	38	39	40
Stop	3,28	3,28	0,00	0,00	0,66	3,19	3,26	3,28	2,60	5,03
Play	3,28	3,28	0,00	0,00	0,66	3,23	3,26	3,28	2,55	5,02
Rec.	0,00	3,25	0,00	0,00	0,66	3,20	3,26	3,28	2,56	5,01

Ref.No.	IC9704									
Mode	41	42	43	44	45	46	47	48	49	50
Stop	4,83	4,82	4,82	4,78	2,94	4,81	4,92	0,00	4,79	0,01
Play	4,83	4,82	4,82	4,77	2,93	4,83	4,92	0,00	0,00	0,01
Rec.	4,83	4,82	4,82	4,77	2,94	4,83	4,92	0,00	4,79	0,01

Ref.No.	IC9704									
Mode	51	52	53	54	55	56	57	58	59	60
Stop	4,83	0,01	0,00	0,01	0,00	0,00	0,01	0,00	0,01	5,02
Play	4,83	0,01	0,00	0,01	0,00	0,00	0,01	0,00	0,01	5,03
Rec.	4,83	0,01	0,00	0,01	0,00	0,00	0,01	0,00	0,01	5,02

Ref.No.	IC9704									
Mode	61	62	63	64	65	66	67	68	69	70
Stop	0,00	4,84	0,01	0,00	4,83	4,83	0,01	0,01	0,01	0,01
Play	0,00	4,84	0,01	0,00	4,83	4,83	0,01	0,01	0,01	0,01
Rec.	0,00	4,84	0,01	0,00	4,83	4,83	0,01	0,01	0,01	0,01

Ref.No.	IC9704									
Mode	71	72	73	74	75	76	77	78	79	80
Stop	4,80	0,01	4,54	0,00	5,03	0,01	0,01	0,01	0,01	3,90
Play	4,80	0,01	4,54	0,00	5,02	0,01	0,01	0,01	0,01	3,89
Rec.	4,80	0,01	4,54	0,00	5,02	0,01	0,01	0,01	0,01	3,90

Ref.No.	IC9704									
Mode	81	82	83	84	85	86	87	88	89	90
Stop	0,00	0,00	0,00	1,96	0,00	5,04	5,04	5,02	1,96	4,83
Play	0,00	0,00	0,00	1,96	0,00	4,49	5,01	5,02	1,96	4,84
Rec.	0,00	0,00	0,00	1,96	0,00	5,03	5,02	5,02	2,05	4,83

Ref.No.	IC9704									
Mode	91	92	93	94	95	96	97	98	99	100
Stop	0,00	0,00	2,61	1,57	1,22	0,00	0,00	1,92	4,84	4,04
Play	0,00	0,00	2,61	1,57	1,22	0,00	0,00	2,13	4,84	4,00
Rec.	0,00	0,00	2,61	1,57	1,22	0,00	0,00	1,81	4,84	4,00

Ref.No.	IC9705									
Mode	1	2	3	4	5	6	7	8		
Stop	0,00	0,00	0,00	0,00	3,28	3,28	0,03	3,27		
Play	0,00	0,00	0,00	0,00	3,28	3,28	0,03	3,27		
Rec.	0,00	0,00	0,00	0,00	3,28	3,28	0,03	3,27		

Ref.No.	IC9706									
Mode	1	2	3	4	5					
Stop	0,00	0,00	0,00	4,84	4,84					
Play	0,00	0,00	0,00	4,84	4,84					
Rec.	0,00	0,00	0,00	4,84	4,84					

Ref.No.	Q1201									
Mode	1	2	3	4	5	6	7	8		
Stop	12,32	12,32	12,32	6,12	12,32	12,32	12,32	12,32		
Play	12,32	12,32	12,32	6,12	12,32	12,32	12,32	12,32		
Rec.	12,32	12,32	12,30	6,12	12,32	12,32	12,30	12,3		

Ref.No.	Q1202									
Mode	1	2	3	4	5	6				
Stop	5,77	5,77	6,54	12,03	5,77	5,77				
Play	5,77	5,77	6,54	12,03	5,77	5,77				
Rec.	5,77	5,77	6,54	12,03	5,77	5,77				

Ref.No.	Q6401			Q6402			Q6403			
Mode	E	B	C	E	B	C	E	B	C	
Stop	0,00	0,00	12,32	0,00	0,00	4,34	0,00	0,56	0,02	
Play	11,73	12,92	12,32	0,00	0,00	4,34	0,00	0,56	0,02	
Rec.	0,00	0,00	12,32	0,00	0,00	4,34	0,00	0,56	0,02	

Ref.No.	Q6404			Q9106			Q9701		
Mode	E	B	C	E	B	C	E	B	C
Stop	0,00	0,02	5,04	3,29	3,94	5,59	2,73	2,13	0,00
Play	0,00	0,02	5,04	3,29	3,94	5,59	2,73	2,13	0,00
Rec.	0,00	0,02	5,03	3,29	3,94	5,59	2,56	1,91	0,00

Ref.No.	Q9702			Q9703			Q9705		
Mode	E	B	C	E	B	C	E	B	C
Stop	1,87	1,61	5,04	0,01	0,38	12,29	2,65	1,95	0,00
Play	1,87	1,61	5,04	1,07	1,64	11,63	2,65	1,95	0,00
Rec.	2,01	1,60	5,04	1,07	1,64	11,66	2,65	2,00	0,00

Ref.No.	Q9706			Q3002			Q4001		
Mode	E	B	C	E	B	C	E	B	C
Stop	2,00	1,61	5,05	1,57	2,20	5,12	0,01	0,75	0,02
Play	2,00	1,61	5,05	1,57	2,20	5,12	0,01	0,75	0,02
Rec.	2,00	1,61	5,05	1,57	2,20	5,12	0,01	0,75	0,02

Ref.No.	Q4002			Q4003			Q4004		
Mode	E	B	C	E	B	C	E	B	C
Stop	0,01	0,75	0,00	0,00	0,16	0,16	5,65	5,65	0,16
Play	0,01	0,75	0,00	0,00	0,16	0,16	5,65	5,65	0,16
Rec.	0,01	0,75	0,00	0,00	0,16	0,16	5,65	5,65	0,16

Ref.No.	Q4502			Q4901			Q6102		
Mode	E	B	C	E	B	C	E	B	C
Stop	12,05	11,42	12,10	12,16	11,43	12,1	1,49	2,14	5,03
Play	12,13	11,42	12,10	12,14	11,40	12,09	1,49	2,28	5,04
Rec.	12,13	11,42	12,10	12,13	11,40	12,07	1,49	2,25	5,04

Ref.No.	Q6103			Q6104			Q6305		
Mode	E	B	C	E	B	C	E	B	C
Stop	2,98	3,60	5,04	2,3	1,60	0,00	5,09	5,85	5,66
Play	3,12	3,71	5,04	2,33	1,73	0,00	5,09	5,85	5,65
Rec.	3,04	3,66	5,03	2,32	1,54	0,00	5,09	5,85	5,65

Ref.No.	Q6801			QR1202			QR1203		
Mode	E	B	C	E	B	C	E	B	C
Stop	0,00	0,00	12,05	0,03	4,78	0,00	0,00	4,82	0,01
Play	0,00	0,00	12,05	0,03	4,78	0,00	0,00	4,81	0,01
Rec.	0,00	0,00	12,05	0,04	4,78	0,00	0,00	4,81	0,02

Ref.No.	QR9101			QR6402			QR6403		
Mode	E	B	C	E	B	C	E	B	C
Stop	3,29	3,28	5,38	0,00	0,00	0,00	0,00	4,80	0,00
Play	3,29	3,28	5,38	0,00	0,01	12,27	0,00	0,01	12,00
Rec.	3,29	3,28	5,38	0,00	0,00	0,00	0,00	4,79	0,00

Ref.No.	QR9301			QR9305			QR9305		
Mode	E	B	C	E	B	C	E	B	C
Stop	5,68	5,38	0,06	0,00	0,00	0,01	0,02	0,00	0,01
Play	5,68	5,38	0,00	0,00	0,00	0,01	0,02	0,00	0,01
Rec.	5,68	5,38	0,00	0,00	0,00	0,01	0,00	0,00	0,01

Ref.No.	QR9701			QR9703			QR4003		
Mode	E	B	C	E	B	C	E	B	C
Stop	0,00	2,35	0,00	0,00	4,57	0,00	0,00	0,00	0,00
Play	0,00	2,35	0,00	0,00	4,57	0,00	0,00	0,00	0,00
Rec.	0,00	2,35	0,00	0,00	4,57	0,00	0,00	0,00	0,00

Ref.No.	QR4004			QR4005			QR4501		
Mode	E	B	C	E	B	C	E	B	C
Stop	5,13	0,03	5,04	0,00	0,01	5,65	0,00	4,87	0,02
Play	5,13	0,03	5,04	0,00	0,01	5,65	0,00	4,87	0,02
Rec.	5,13	0,03	5,04	0,00	0,01	5,65	0,00	4,87	0,02

Ref.No.	QR4901			QR4902			QR4903		
Mode	E	B	C	E	B	C	E	B	C
Stop	0,00	0,01	4,92	4,93	4,92	0,00	0,00	0,05	0,19
Play	0,00	0,01	4,92	4,93	4,92	0,00	0,00	0,01	0,29
Rec.	0,00	0,01	4,92	4,93	4,92	0,00	0,00	0,01	0,32

Ref.No.	QR4904			QR4905			QR4906		
Mode	E	B	C	E	B	C	E	B	C
Stop	0,00	0,00	1,80	0,00	0,00	0,00	0,00	0,33	0,45
Play	0,00	0,00	1,85	0,00	0,00	0,00	0,00	0,00	0,62
Rec.	0,00	0,00	1,93	0,00	0,00	0,00	0,00	0,00	0,62

Ref.No.	QR4911			QR4912			QR4913		
Mode	E	B	C	E	B	C	E	B	C
Stop	0,00	0,00	0,00	0,00	0,00	0,33	0,00	0,00	0,17
Play	0,00	0,00	0,00	0,00	0,00	0,48	0,00	0,00	0,36
Rec.	0,00	0,00	0,00	0,00	0,00	0,46	0,00	0,00	0,36

Ref.No.	QR4914			QR4915			QR6801		
Mode	E	B	C	E	B	C	E	B	C
Stop	0,00	4,66	0,04	0,00	0,01	4,66	12,15	12,04	0,00
Play	0,00	4,65	0,05	0,00	0,01	4,66	12,13	12,02	0,00
Rec.	0,00	4,65	0,04	0,00	0,01	4,66	12,13	12,02	0,00

Ref.No.	QR7803			QR7804			QR7901		
Mode	E	B	C	E	B	C	E	B	C
Stop	0,00	4,82	0,04	33,78	0,04	33,75	0,00	0,01	0,06
Play	0,00	4,82	0,04	33,81	0,04	33,84	0,00	0,01	0,07
Rec.	0,00	4,82	0,04	33,83	0,04	33,8	0,00	0,01	0,07

Ref.No.	P6001									
Mode	1	2	3	4	5	6	7	8	9	10
Stop	4,54	5,04	0,00	5,03	0,00	4,30	2,40	4,01	0,00	5,04
Play	4,54	5,04	0,00	5,03	0,00	4,30	2,40	4,01	0,00	5,04
Rec.	4,54	5,04	0,00	5,03	0,00	4,30	2,40	4,01	0,00	5,04

Ref.No.	P6001									
Mode	11	12	13	14	15					
Stop	0,00	3,90	0,00	0,00	12,33					
Play	0,00	3,90	0,00	0,00	12,33					
Rec.	0,00	3,90	0,00	0,00	12,33					

Ref.No.	P6002									
Mode	1	2	3	4	5	6	7	8	9	10
Stop	0,00	4,81	0,00	1,91	4,66	4,53	0,00	1,96	4,92	4,47
Play	0,00	4,81	0,00	1,91	4,66	4,53	0,00	1,96	4,92	4,47
Rec.	0,00	4,81	0,00	1,91	4,66	4,53	0,00	1,96	4,92	4,47

Ref.No.	P6002									
Mode	11	12	13	14	15					
Stop	0,00	0,00	0,00	4,34	0,00					
Play	0,00	11,08	0,00	4,34	0,00					
Rec.	0,00	0,00	0,00	4,34	0,00					

Ref.No.	P6003									
Mode	1	2	3	4	5	6	7	8	9	10
Stop	2,08	1,41	0,00	0,84	0,62	0,87	0,00	0,85	0,57	5,68
Play	2,08	1,41	0,00	0,84	0,62	0,87	0,00	0,85	0,57	5,68
Rec.	2,08	1,41	0,00	0,84	0,62	0,87	0,00	0,85	0,57	5,68

Ref.No.	P6003									
Mode	11	12	13	14	15	16	17	18	19	
Stop	5,68	12,3	2,47	0,00	2,47	0,00	0,00	0,00	0,00	
Play	5,68	12,3	2,47	0,00	2,47	0,00	0,00	0,00	0,00	
Rec.	5,68	12,3	2,47	0,00	2,47	0,00	0,00	0,00	0,00	

Ref.No.	P9703									
Mode	1	2	3	4	5	6	7	8	9	10
Stop	2,95	12,28	3,26	12,28	3,21	0,00	0,14	0,00	3,23	5,18
Play	2,95	12,28	3,26	12,28	3,21	0,00	0,14	0,00	3,23	5,18
Rec.	2,95	12,28	3,26	12,28	3,21	0,00	0,14	0,00	3,23	5,18

Ref.No.	P9703									
Mode	11	12	13	14	15	16	17	18	19	20
Stop	3,28	5,18	5,01	3,29	5,01	2,88	2,47	4,77	2,47	3,25
Play	3,28	5,18	5,01	3,29	5,01	2,88	2,47	4,77	2,47	3,25
Rec.	3,28	5,18	5,01	3,29	5,01	2,88	2,47	4,77	2,47	3,25

Ref.No.	P9703									
Mode	21	22	23	24	25	26	27	28	29	30
Stop	0,00	3,27	0,00	3,28	0,00	3,28	2,44	0,00	2,42	3,26
Play	0,00	3,27	0,00	3,28	0,00	3,28	2,44	0,00	2,42	3,26
Rec.	0,00	3,27	0,00	3,28	0,00	3,28	2,44	0,00	2,42	3,26

Ref.No.	P9703									
Mode	31	32	33	34	35	36	37	38	39	40
Stop	0,00	1,62	0,00	0,00	0,00	3,28	0,00	3,28	0,55	0,00
Play	0,00	1,62	0,00	0,00	0,00	3,28	0,00	3,28	0,55	0,00
Rec.	0,00	1,62	0,00	0,00	0,00	3,28	0,00	3,28	0,55	0,00

Ref.No.	P9703									
Mode	41	42	43	44	45	46	47	48	49	50
Stop	0,00	0,00	0,85	3,27	0,00	3,28	0,88	3,73	0,00	3,73
Play	0,00	0,00	0,85	3,27	0,00	3,28	0,88	3,73	0,00	3,73
Rec.	0,00	0,00	0,85	3,27	0,00	3,28	0,88	3,73	0,00	3,73


Ref.No.	P9703									
Mode	51	52	53	54	55	56	57	58	59	60
Stop	0,58	12,09	0,00	12,09	0,86	12,09	0,00	12,01	1,43	12,08
Play	0,58	12,09	0,00	12,09	0,86	12,09	0,00	12,01	1,43	12,08
Rec.	0,58	12,09	0,00	12,09	0,86	12,09	0,00	12,01	1,43	12,08

Ref.No.	P9703									
Mode	61	62	63	64						
Stop	0,00	12,08	2,08	4,98						
Play	0,00	12,08	2,08	4,98						
Rec.	0,00	12,08	2,08	4,98						

15.1.3. WAVEFORM CHART


NOTE:

The waveforms are measured with PAL colour bar signal.

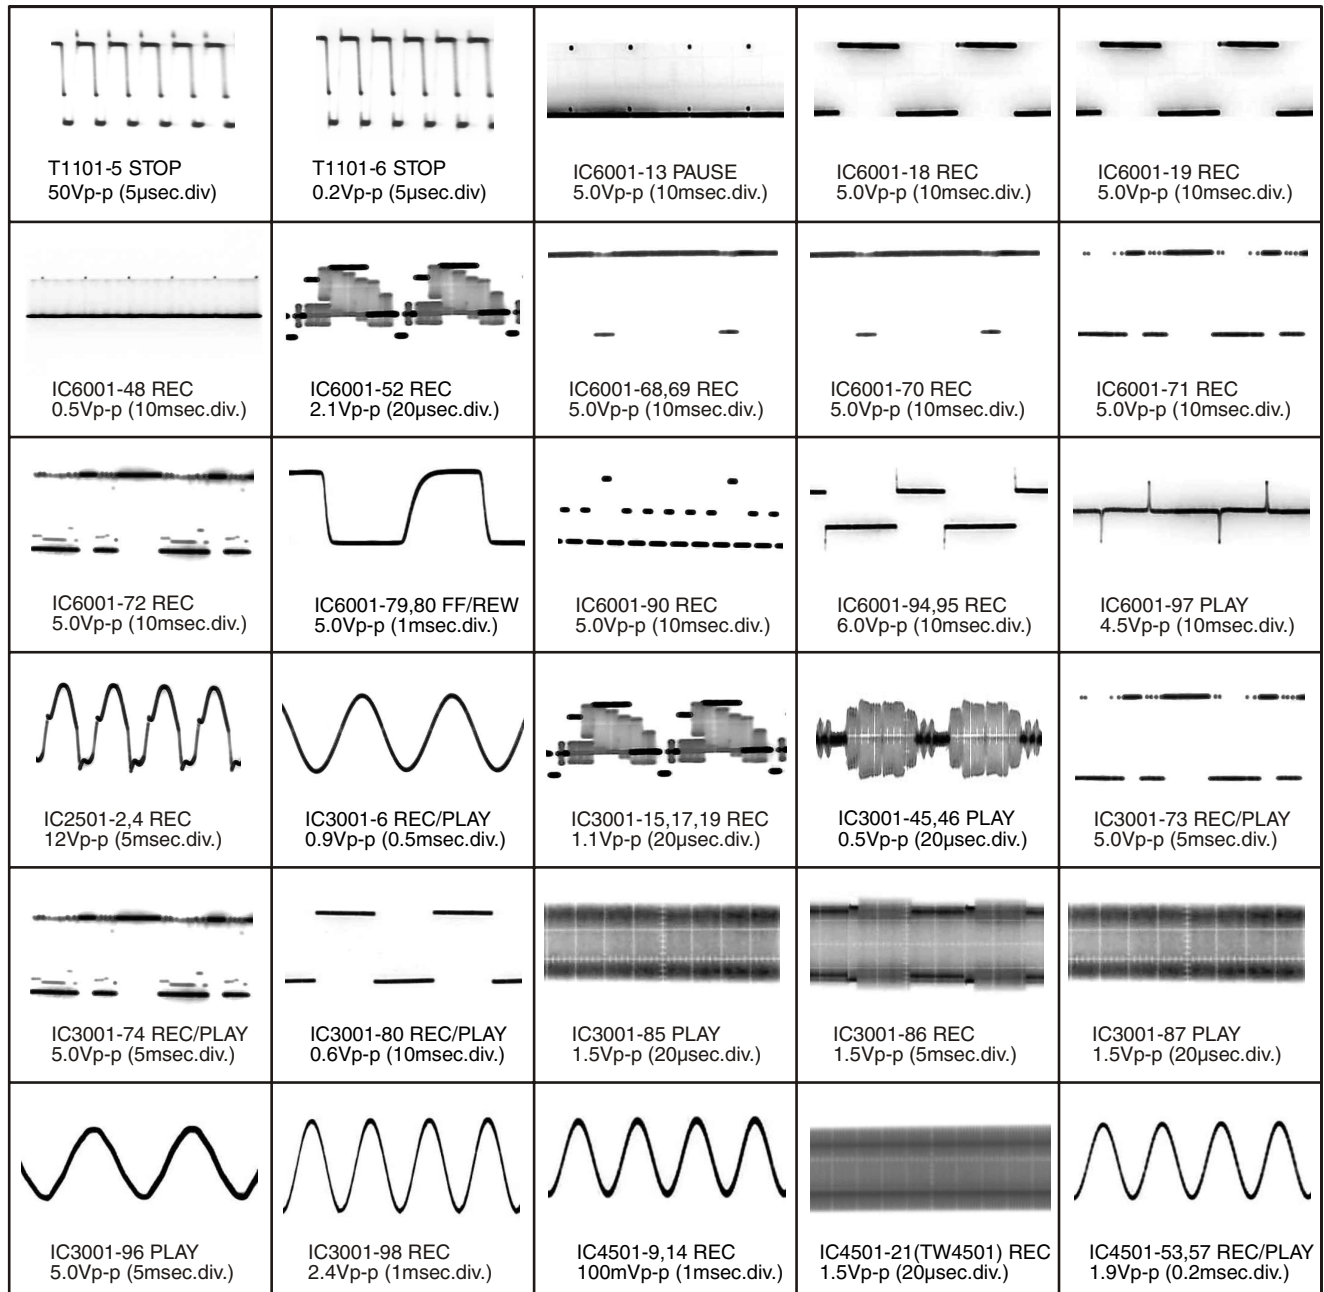


16 EXPLODED VIEWS


16.1. MECHANISM & CASING PARTS

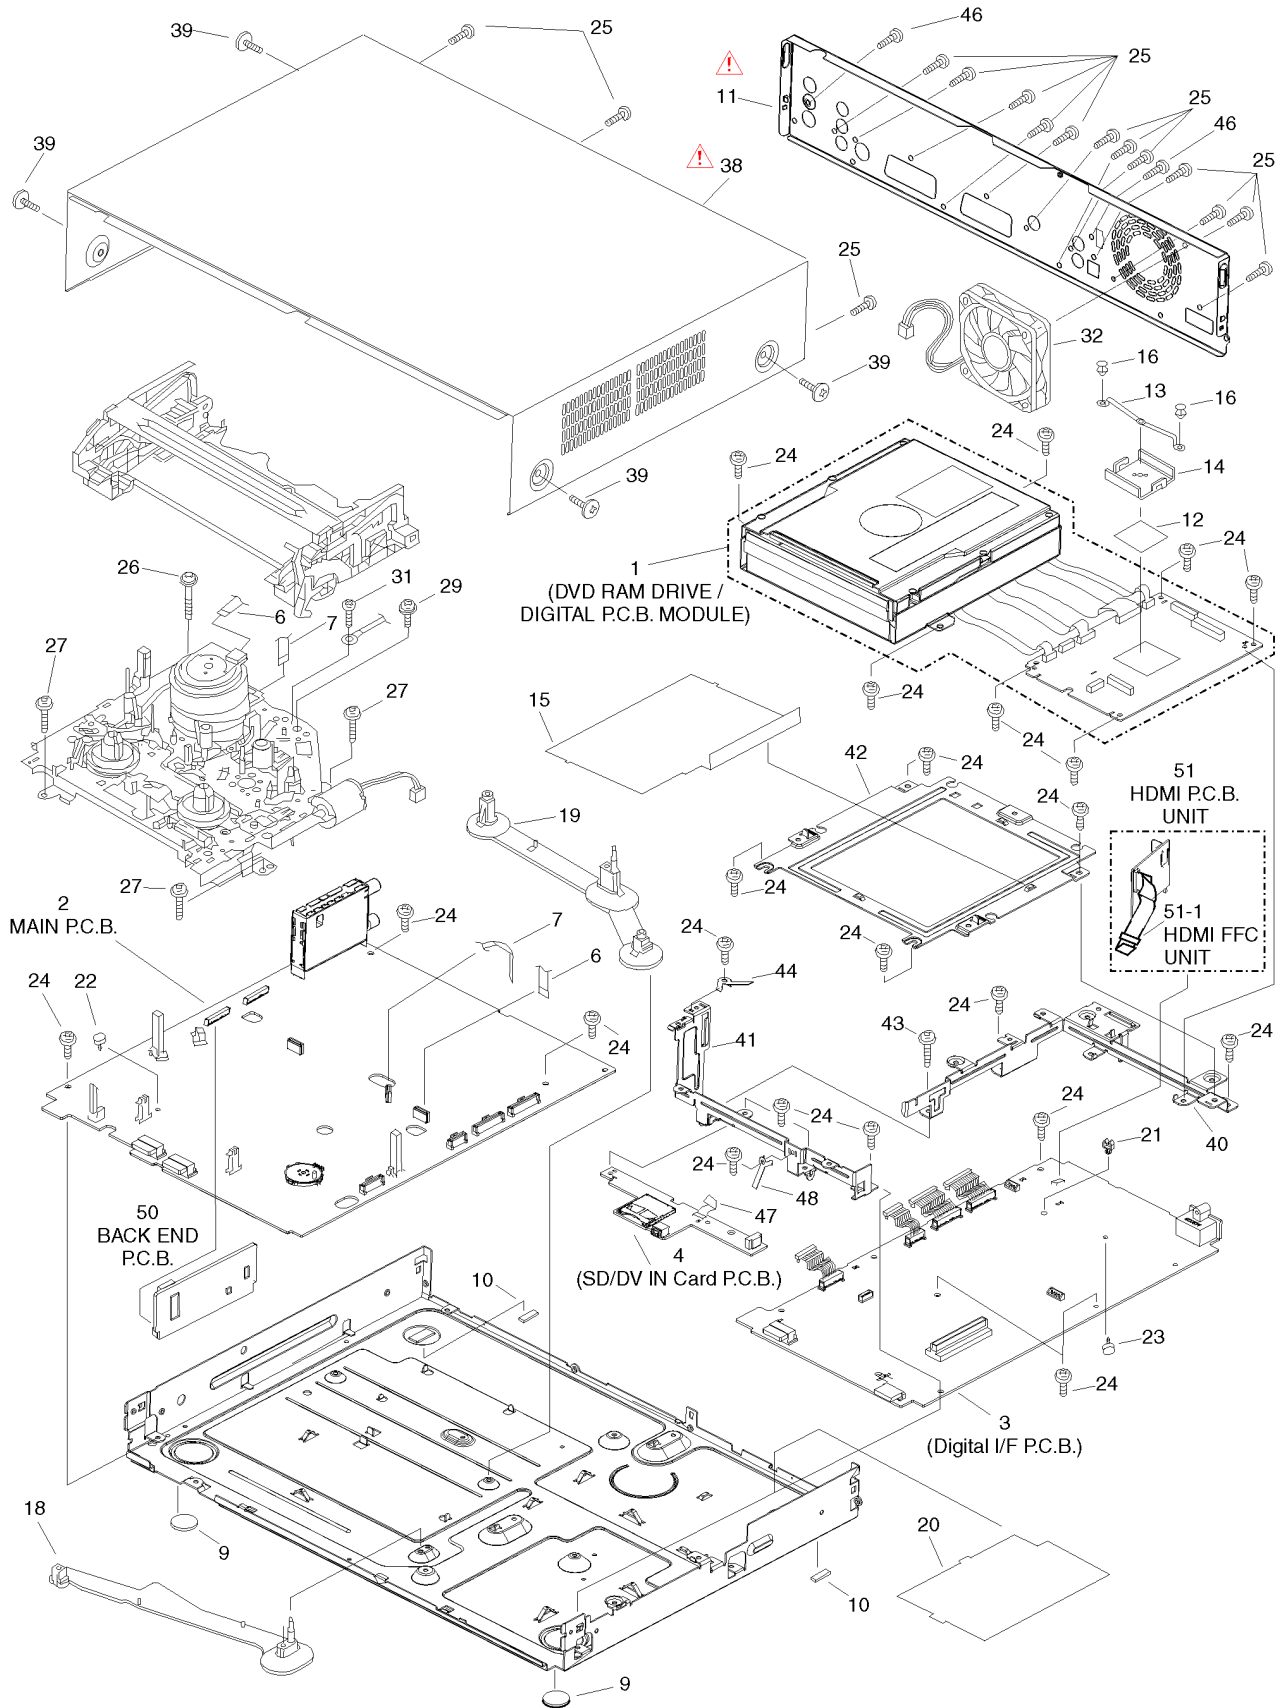


16.2. FRONT PANEL PARTS

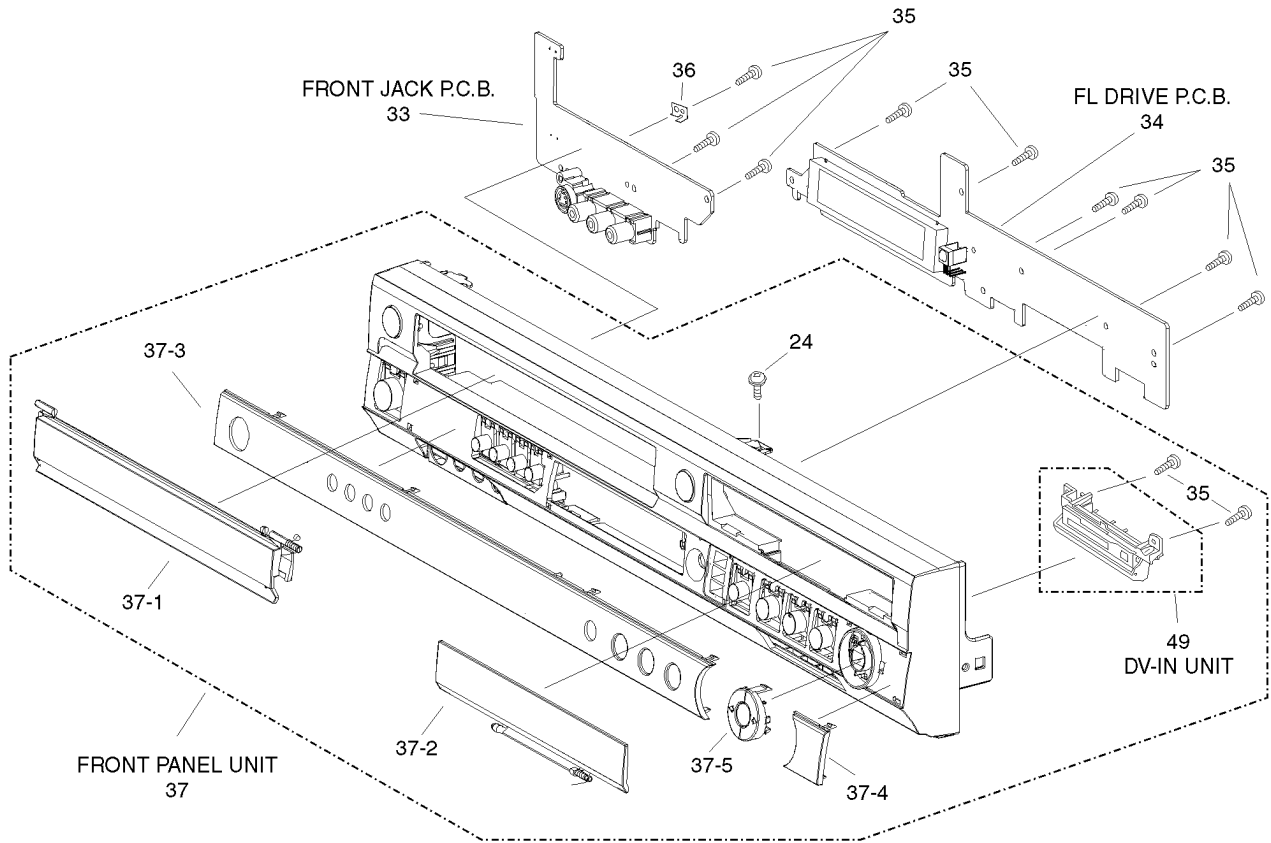

16.3. VHS MECHANISM PARTS

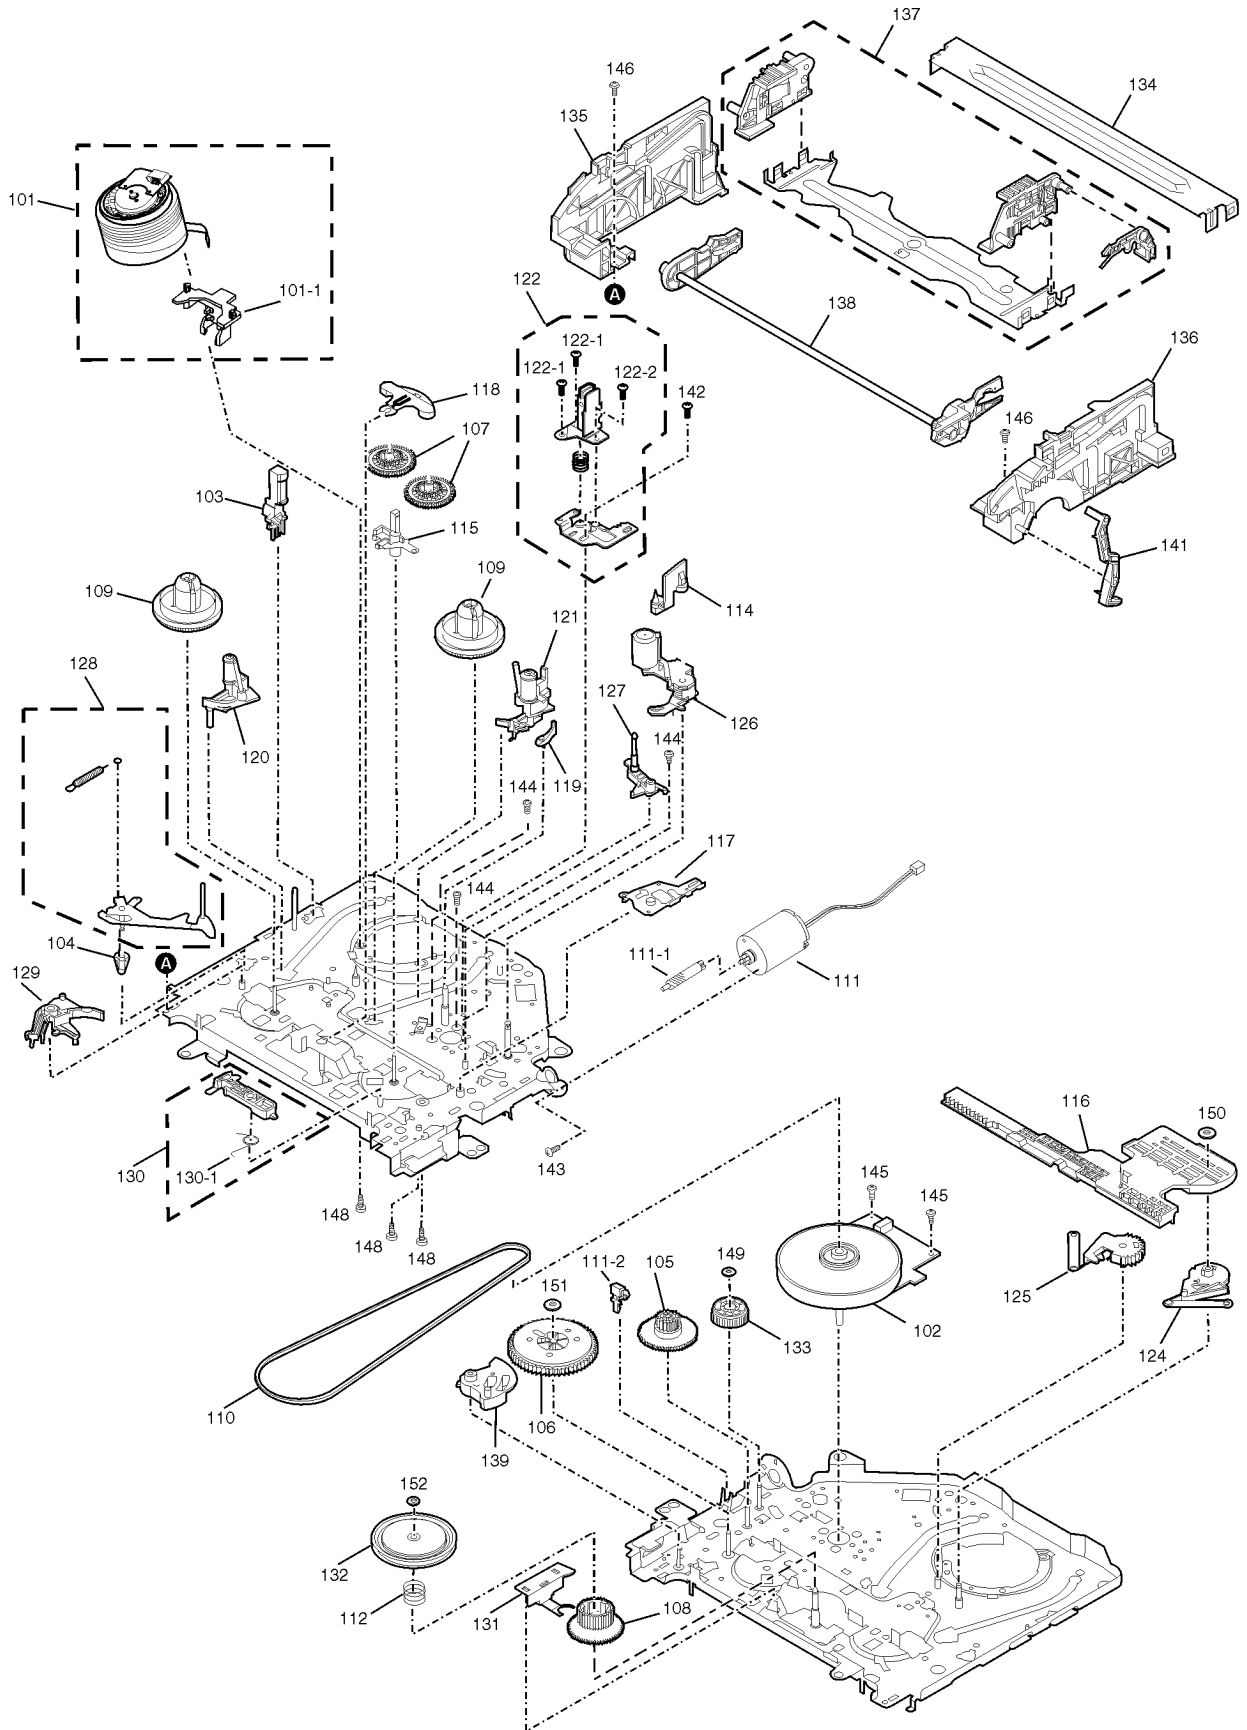

16.4. PACKING & ACCESSORIES

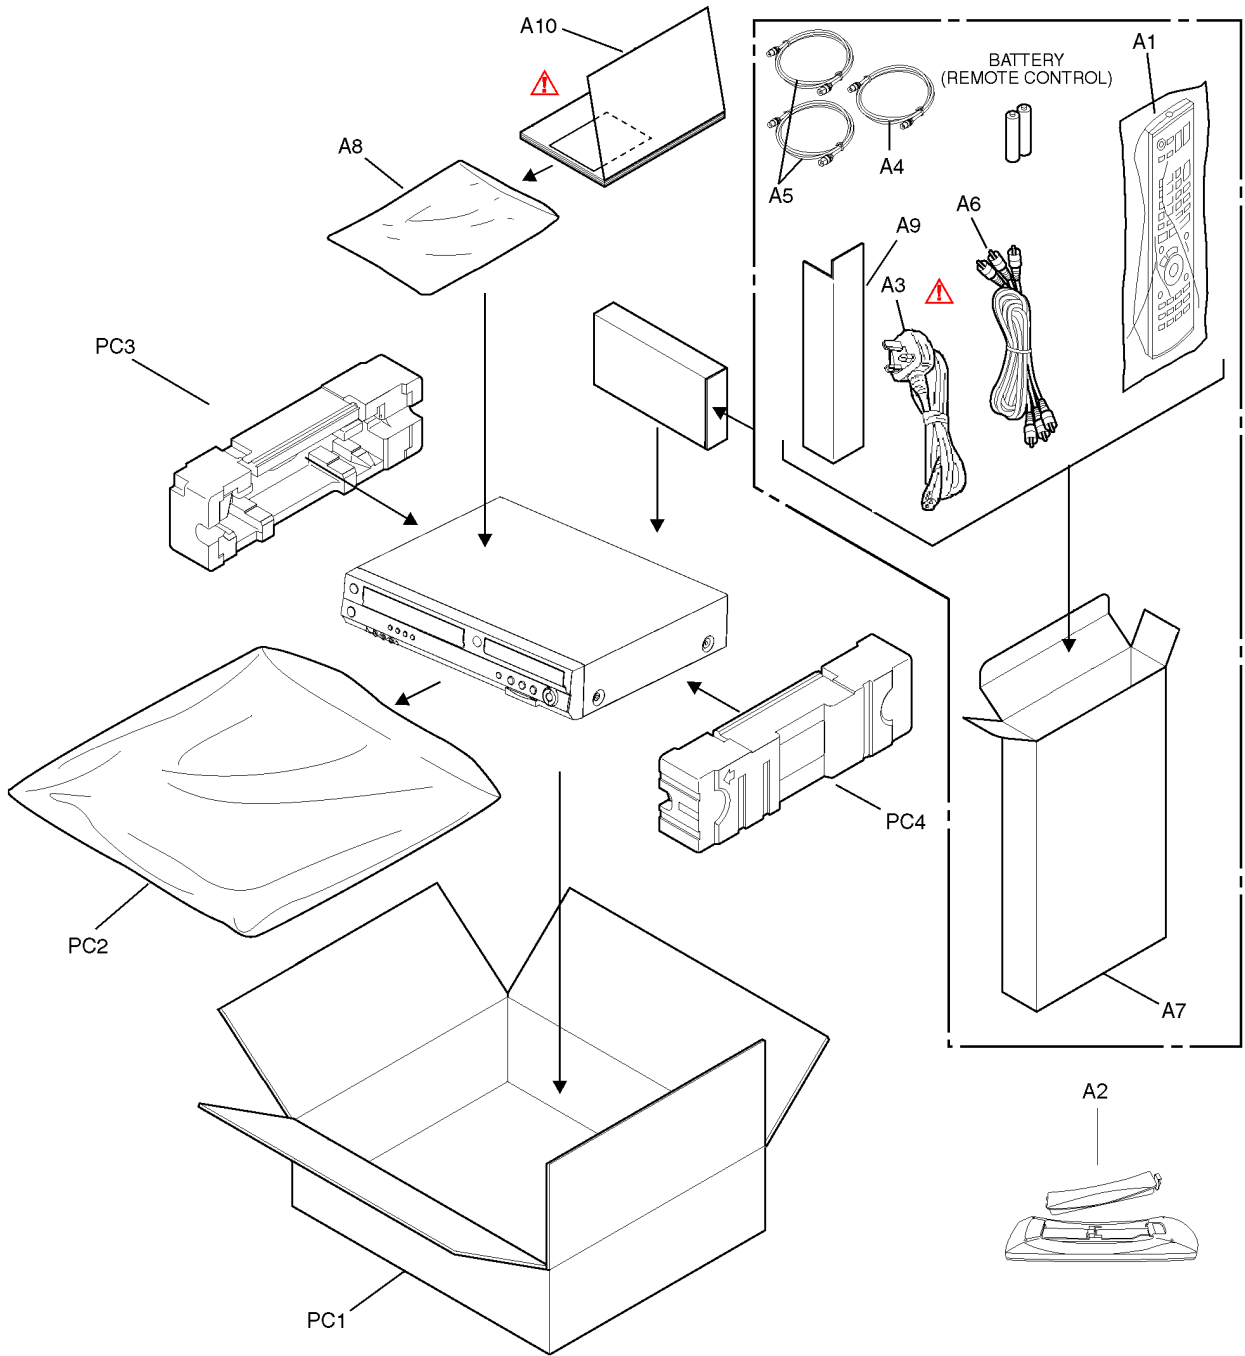

17 REPLACEMENT PARTS LIST

Notes:

*Important safety notice:

Components identified by \triangle mark have special characteristics important for safety.

Furthermore, special parts which have purposes of fire-retardant (resistors), high-quality sound (capacitors), low-noise (resistors), etc. are used.

When replacing any of components, be sure to use only manufactures specified parts shown in the parts list.

*Warning: This product uses a laser diode. Refer to caution statements.

*Capacity values are in microfarads (μ F) unless specified otherwise, P=Pico-farads (pF), F=Farads (F).

*Resistance values are in ohms, unless specified otherwise, 1K=1,000 (OHM), 1M=1,000k (OHM).

*The marking (RTL) indicates the retention time is limited for this item. After the discontinuation of this assembly in production, it will no longer be available.

*All parts except parts mentioned [SPC] in the Remarks column are supplied from PAVCG.

*Parts mentioned [SPC] are supplied from PAVC

17.1. CASING PARTS & PRINTED CIRCUIT BOARDS

Ref. No.	Part No.	Part Name & Description	PCS	Remarks
1 &block ;	RFKNEZ45VEB	RAM/DIGITAL MODULE PCB	1	RTL
2 &block ;	REPD0026E	MAIN PCB UNIT	1	RTL
3	RFKBD0033B	DIGIT INTERF UNIT	1	RTL
4 &block ;	REPD0046B	SD/DV PCB UNIT	1	RTL
6	VWJ1727-RW	FFC	1	
7	VWJ1728-RW	FFC A/C HEAD	1	
9	RKA0178-X	LEG	2	
10	VKA0382	LEG CUSHION	2	
11	RGRD0009A-A1	REAR PANEL	1	\triangle
12	RMQ1513	HEAT TRANSFER SHEET	1	
13	RMC0672	PLATE SPRING	1	
14	RMV0357	HEAT SINK	1	
15	RMZD0003-2	DIGITAL PCB BARRIER	1	
16	VKC0295	MINI CARD SPACER	2	
18	RMX0354	MECHA SPACER (F)	1	
19	RMX0355	MECHA SPACER (R)	1	
20	VMZ3452	BARRIER	1	
21	RMRD0003	CABLE CLAMPER	1	
22	VKC0554	PCB SUPPORT 4(MECHA)	1	
23	VKC0295	MINI CARD SPACER	1	
24	RHD30111-3	SCREW	25	
25	VHD0690-1	SCREW	15	
26	VHD1770	SCREW	1	
27	RHDC0023	SCREW	3	
29	VHD1092-1	SCREW	1	
31	XTV26+6FFJ	SCREW	1	
32	L6FAYYYE0001	FAN MOTOR	1	
33 &block ;	REPD0035A	FRONT JACK PCB	1	RTL
34 &block ;	REPD0036B	FL DRIVE UNIT	1	RTL
35	RHD26045	SCREW (PANEL)	11	

Ref. No.	Part No.	Part Name & Description	PCS	Remarks
36	RMCD0002	EARTH SPRING (FRONT)	1	
37	RYP1336-S	FRONT PANEL UNIT	1	
37-1	RKF0757A-S	BLINDER PANEL	1	
37-2	RKF0758A-S1	TRAY DOOR	1	
37-3	RKW0811A-Q	FRONT WINDOW	1	
37-4	RKW0810-Q	FR WINDOW	1	
37-5	RGU2475-S	DUB BUTTON	1	
38	RKMD0006-S	TOP PANEL	1	\triangle
39	RHD30113	SCREW TOP CASE SIDE	4	
40	RMAD0006	DVD ANGLE (R)	1	
41	RMAD0005	DVD ANGLE (F)	1	
42	RMAD0009	DVD BRACKET	1	
43	VHD1092-1	SCREW	1	
44	RMC0632	EARTH SPRING (T)	1	
46	XSN3+4FJK	SCREW (TUNER)	2	
47	REZD0023-1	SD/DV-DIGITAL FFC	1	
48	RMCD0001	EARTH SPRING (ANGLE)	1	
49	DV-IN UNIT	RYQD0001	1	
50 &block ;	REPD0031E	BACKEND PCB UNIT	1	RTL
51 &block ;	VEP73137AB	HDMI PCB UNIT	1	RTL
51-1	REED0002	FFC HDMI CABLE UNIT	1	

17.2. VHS MECHANISM PARTS

Ref. No.	Part No.	Part Name & Description	PCS	Remarks
101	VEG1699KIT	RDD CYLINDER	1	
101-1	VMD5464	FPC HOLDER	1	
102	VEM0800T	CAPSTAN MOTOR	1	
103	L1AZ00000004	FE HEAD	1	
104	VDB1431	TENSION ARM BOSH	1	
105	VDG1686	INTERMEDIATE GEAR	1	
106	VDG1685	MAIN CAM GEAR	1	
107	VDG1512-1	IDLER GEAR	2	
108	VDG1514-3	CHANGE GEAR	1	
109	VDR0372A	REEL TABLE	2	
110	VDV0391-2	CAPSTAN BELT	1	
111	VEM0797	LOADING MOTOR	1	
111-1	VDG1637	WORM GEAR	1	
111-2	VMD4987	WORM BEARING	1	
112	VMB3550A	CHANGING GEAR SPRING	1	
114	VMD5466	OPENER PIECE	1	
115	VMD4253-1	LED PRISM	1	
116	VML3934	MAIN LEVER	1	
117	VML3933	PINCH CHARGE ARM	1	
118	VML3632	IDLER ARM	1	
119	VMX3092	P4 CAP	1	
120	VXA7105-3	S SHAFT HOLDER	1	
121	VXA7106-3	T SHAFT HOLDER	1	
122	L1AE00000044	AC HEAD	1	
122-1	VHD1066-2	SCREW	2	
122-2	VHD1185	SCREW	1	
124	VXL3107	S LOADING ARM	1	
125	VXL3108	T LOADING ARM	1	
126	VXL3109-7	PINCH ARM UNIT	1	
127	VXL3110	P5 ARM	1	
128	VXL3111-1	TENSION ARM	1	
129	VXL3252	S BRAKE ARM	1	
130	VXL3343	T BRAKE ARM	1	
130-1	VMB3548-2A	T BRAKE SPRING	1	
131	VXL3124-2	CHANGING LEVER UNIT	1	
132	VXP2133-2	CENTER CLUTCH UNIT	1	
133	VXP2168	TORQUE CLUTCH	1	
134	VMA0L25	TOP PLATE	1	
135	VMD5468	SIDE PLATE(L)	1	
136	VMD5469	SIDE PLATE(R)	1	
137	VXA8265	CASSETTE HOLDER UNIT	1	

Ref. No.	Part No.	Part Name & Description	PCS	Remarks
138	VXL3160	MAIN SHAFT	1	
139	VXA8323	SECTOR GEAR	1	
141	VML3706-3	OPENER LEVER	1	
142	VHD1044-1	SCREW	1	
143	XYN3+C4FJ	SCREW	1	
144	XTN26+7JFJ	SCREW	3	
145	XTV26+5FFJ	SCREW	2	
146	XTV26+8FFJ	SCREW	2	
148	VHD1117-1	SCREW	3	
149	VMX2208	WASHER	1	
150	VMX3114	WASHER	1	
151	VMX2699	WASHER	1	
152	VMX3196	WASHER	1	

17.3. PACKING & ACCESSORIES PARTS

Ref. No.	Part No.	Part Name & Description	PCS	Remarks
A1	EUR7659YN0	REMOTE CONTROL	1	
A2	UR76EC5903	BATTERY COVER	1	
A3	K2CT3CA00004	POWERCORD	1	△
A4	K1TWACA00001	RF CABLE	1	
A5	K1TWACC00001	RF CABLE	2	
A6	K2KA6BA00003	AV CORD	1	
A7	RPQFD0007	ACCESSORY BOX	1	
A8	RFFD0007	PE-BAG, 24cmx37cmx40	1	
A9	RPQD0003	PAD (C)	1	
A10	RQTD0201-2B	O/I BOOK ENG UK	1	
A10	RQCAD0029	QUICK START GUIDE	1	
A10	RQCAD0035	REFERENCE GUIDE	1	
A10	RQCB1364	CCP CARD FOR UK	1	
A10	RQCC2704	DVD-MEDIA LEAFLET	1	
PC1	RPG7929	CARTON BOX	1	
PC2	RFFD0006	MIRAMAT BAG	1	
PC3	RPN1860A	CUSHION(LEFT)	1	
PC4	RPN1860B	CUSHION(RIGHT)	1	

17.4. ELECTRICAL PARTS

Ref. No.	Part No.	Part Name & Description	PCS	Remarks
C1101	ECQU2A683MLC	X2 CAPACITOR	1	△
C1102	ECQU2A683MLC	X2 CAPACITOR	1	△
C1103	EEUED2G680E	CAPACITOR	1	
C1104	F0C2G473A022	CAPACITOR	1	
C1105	ECKN3A101KBP	CERAMIC CAPACITOR	1	
C1106	ECKN3A101KBP	CERAMIC CAPACITOR	1	
C1107	ECJ1VB1C474K	CHIP CAPACITOR	1	
C1108	F2A1V3300027	ALU ELEC CAPACITOR	1	
C1109	F1H1H1020005	CHIP CAPACITOR	1	
C1110	ECKWNA101MBV	CERAMIC CAPACITOR	1	△
C1111	ECKWNA101MBV	CERAMIC CAPACITOR	1	△
C1112	F1BAF471A013	CERAMIC CAPACITOR	1	△
C1113	F1BAF221A013	CERAMIC CAPACITOR	1	△
C1201	EEUFM1E471B	CAPACITOR	1	
C1202	F2A1C221A019	ALU ELEC CAPACITOR	1	
C1203	EEUFM1C152B	CAPACITOR	1	
C1204	EEUFM1C152B	CAPACITOR	1	
C1205	F1H1H104A731	CHIP CAPACITOR	1	
C1206	F1H1C104A042	CHIP CAPACITOR	1	
C1207	F1H1A2240004	CHIP CAPACITOR	1	
C1208	ECJ1VCLH181J	CHIP CAPACITOR	1	
C1209	F2A1A681A540	ALU ELEC CAPACITOR	1	
C1210	ECA1CHG471B	ALU ELEC CAPACITOR	1	
C1211	F1H1H1030007	CHIP CAPACITOR	1	
C1212	F1H1C333A041	CHIP CAPACITOR	1	
C1214	ECA1CHG471B	ALU ELEC CAPACITOR	1	
C1216	F1H1H104A731	CHIP CAPACITOR	1	
C1217	EEUFM1C121B	ALU ELEC CAPACITOR	1	
C1218	F1H1H1030007	CHIP CAPACITOR	1	
C1219	ECJ1VB1H331K	CHIP CAPACITOR	1	

Ref. No.	Part No.	Part Name & Description	PCS	Remarks
C1220	F1H1C104A042	CHIP CAPACITOR	1	
C1222	F1H1C224A074	CHIP CAPACITOR	1	
C1223	F2A1A681A540	ALU ELEC CAPACITOR	1	
C1225	F1H1H1020005	CHIP CAPACITOR	1	
C1231	EEUFM1E221B	ALU ELEC CAPACITOR	1	
C1232	F1H1E104A030	CHIP CAPACITOR	1	
C1233	ECJ1VCLH391J	CHIP CAPACITOR	1	
C1234	F1H1C104A042	CHIP CAPACITOR	1	
C1235	F1H1H1020005	CHIP CAPACITOR	1	
C1236	F2A0J681A550	ALU ELEC CAPACITOR	1	
C1237	ECJ1VB1A105K	CHIP CAPACITOR	1	
C1801	EEUFM1E221B	ALU ELEC CAPACITOR	1	
C1802	F1H1E104A030	CHIP CAPACITOR	1	
C1803	F1H1H1030007	CHIP CAPACITOR	1	
C1804	ECJ1VCLH391J	CHIP CAPACITOR	1	
C1805	F1H1C104A042	CHIP CAPACITOR	1	
C1806	F1H1H1020005	CHIP CAPACITOR	1	
C1808	F2A0J681A550	ALU ELEC CAPACITOR	1	
C1809	ECJ1VB1A105K	CHIP CAPACITOR	1	
C2001	F1H1H330A736	CHIP CAPACITOR	1	
C2003	F1H1A1050029	CHIP CAPACITOR	1	
C2051	ECEA0JKN220B	ALU ELEC CAPACITOR	1	
C2053	ECEA1CKA100B	ALU ELEC CAPACITOR	1	
C2054	ECJ1VB1H392K	CHIP CAPACITOR	1	
C2055	F1H1E104A030	CHIP CAPACITOR	1	
C2099	ECJ1VCLH681J	CHIP CAPACITOR	1	
C2501	F1H1E104A030	CHIP CAPACITOR	1	
C2502	ECEA0JKA221B	ALU ELEC CAPACITOR	1	
C2503	ECJ1VB1A105K	CHIP CAPACITOR	1	
C2504	F1H1E223A029	CHIP CAPACITOR	1	
C2505	F1H1E223A029	CHIP CAPACITOR	1	
C2506	F1H1A2240004	CHIP CAPACITOR	1	
C2507	F1H1H1020005	CHIP CAPACITOR	1	
C2508	F1H1H182A219	CHIP CAPACITOR	1	
C2509	ECEA1CKA220B	ALU ELEC CAPACITOR	1	
C2510	F1H1C104A042	CHIP CAPACITOR	1	
C2511	F1H1C104A042	CHIP CAPACITOR	1	
C2512	F1H1C104A042	CHIP CAPACITOR	1	
C2513	F1H1A1050029	CHIP CAPACITOR	1	
C2514	ECJ1VB1A105K	CHIP CAPACITOR	1	
C2515	F1H1H1030007	CHIP CAPACITOR	1	
C2518	F1H1H1030007	CHIP CAPACITOR	1	
C2519	F1H1H1030007	CHIP CAPACITOR	1	
C2551	F1H1C473A071	CHIP CAPACITOR	1	
C2552	ECJ1VB1C683K	CHIP CAPACITOR	1	
C2561	ECJ1VB1C683K	CHIP CAPACITOR	1	
C2562	F1H1C473A071	CHIP CAPACITOR	1	
C2571	ECA1EM331B	ALU ELEC CAPACITOR	1	
C3001	F1H1H1510001	CHIP CAPACITOR	1	
C3003	ECJ1VB1A105K	CHIP CAPACITOR	1	
C3004	F1H1C104A042	CHIP CAPACITOR	1	
C3005	F1H1H2700003	CHIP CAPACITOR	1	
C3006	F1H1C104A042	CHIP CAPACITOR	1	
C3007	ECJ1VB1A105K	CHIP CAPACITOR	1	
C3008	F1H1H1030006	CHIP CAPACITOR	1	
C3009	ECEA1HKA4R7B	ALU ELEC CAPACITOR	1	
C3010	ECJ1VB1A105K	CHIP CAPACITOR	1	
C3011	ECJ1VB1A105K	CHIP CAPACITOR	1	
C3012	ECEA0JKA470B	ALU ELEC CAPACITOR	1	
C3013	F1H1H1030007	CHIP CAPACITOR	1	
C3015	F1H1C104A042	CHIP CAPACITOR	1	
C3016	F1H1H4700004	CHIP CAPACITOR	1	
C3017	ECJ1VB1A105K	CHIP CAPACITOR	1	
C3019	ECEA1CKA100B	ALU ELEC CAPACITOR	1	
C3020	ECJ1VCLH331J	CHIP CAPACITOR	1	
C3021	F1H1H1030007	CHIP CAPACITOR	1	
C3023	ECEA1HKA3R3B	ALU ELEC CAPACITOR	1	
C3024	F1H1H1030006	CHIP CAPACITOR	1	
C3026	ECJ1VB1A105K	CHIP CAPACITOR	1	
C3028	F1H1C104A042	CHIP CAPACITOR	1	
C3029	F1H1C104A042	CHIP CAPACITOR	1	
C3030	F1H1C104A042	CHIP CAPACITOR	1	
C3033	F1H1C104A042	CHIP CAPACITOR	1	

Ref. No.	Part No.	Part Name & Description	PCS	Remarks
C3034	ECEA1HKA010B	ALU ELEC CAPACITOR	1	
C3036	ECEA1HKA4R7B	ALU ELEC CAPACITOR	1	
C3037	ECEA1HKA47B	ALU ELEC CAPACITOR	1	
C3038	F1H1E223A029	CHIP CAPACITOR	1	
C3039	F1H1C333A041	CHIP CAPACITOR	1	
C3040	ECEA1HKA2R2B	ALU ELEC CAPACITOR	1	
C3041	F1H1E223A029	CHIP CAPACITOR	1	
C3042	ECJ2YB0J335K	CHIP CAPACITOR	1	
C3043	F1H1C104A042	CHIP CAPACITOR	1	
C3044	ECEA0JKA470B	ALU ELEC CAPACITOR	1	
C3045	F1H1H1030007	CHIP CAPACITOR	1	
C3046	ECJ1VC1H030C	CHIP CAPACITOR	1	
C3047	ECEA1HKA010B	ALU ELEC CAPACITOR	1	
C3048	F1H1H1030007	CHIP CAPACITOR	1	
C3049	F1H1H1030007	CHIP CAPACITOR	1	
C3050	F1H1A1050029	CHIP CAPACITOR	1	
C3051	ECJ1VB1A105K	CHIP CAPACITOR	1	
C3052	ECJ1VB1A105K	CHIP CAPACITOR	1	
C3053	F1H1C104A042	CHIP CAPACITOR	1	
C3904	F1H1H1030006	CHIP CAPACITOR	1	
C3905	ECJ1VB1A105K	CHIP CAPACITOR	1	
C3906	F1H1C104A042	CHIP CAPACITOR	1	
C3907	F1J1A105A003	CHIP CAPACITOR	1	
C3908	F1H1C104A042	CHIP CAPACITOR	1	
C3909	F1J1A105A003	CHIP CAPACITOR	1	
C3910	ECJ1VB1A105K	CHIP CAPACITOR	1	
C3911	F1H1C104A042	CHIP CAPACITOR	1	
C3912	ECEA0JKA221B	ALU ELEC CAPACITOR	1	
C3913	F1H1C104A042	CHIP CAPACITOR	1	
C3914	ECJ1VB1A105K	CHIP CAPACITOR	1	
C3915	F1H1C104A042	CHIP CAPACITOR	1	
C3916	F1H1C104A042	CHIP CAPACITOR	1	
C3917	ECEA0JKA101B	ALU ELEC CAPACITOR	1	
C3918	ECEA0JKA220B	ALU ELEC CAPACITOR	1	
C3920	F1H1H1030006	CHIP CAPACITOR	1	
C3921	F1H1C104A042	CHIP CAPACITOR	1	
C3922	F1H1H1030006	CHIP CAPACITOR	1	
C3923	F1H1H1030006	CHIP CAPACITOR	1	
C3924	F1H1C104A042	CHIP CAPACITOR	1	
C3925	F1H1C104A042	CHIP CAPACITOR	1	
C3926	F1H1C104A042	CHIP CAPACITOR	1	
C3927	F1H1C104A042	CHIP CAPACITOR	1	
C3928	F1H1C104A042	CHIP CAPACITOR	1	
C3929	ECEA0JKA221B	ALU ELEC CAPACITOR	1	
C3934	F1H1C104A042	CHIP CAPACITOR	1	
C3936	F2A0J471A016	ALU ELEC CAPACITOR	1	
C3937	F2A0J471A016	ALU ELEC CAPACITOR	1	
C3938	ECEA0JKA101B	ALU ELEC CAPACITOR	1	
C3939	ECEA0JKA220B	ALU ELEC CAPACITOR	1	
C3940	F1H1H330A736	CHIP CAPACITOR	1	
C3946	F1H1C104A042	CHIP CAPACITOR	1	
C3947	F1H1C104A042	CHIP CAPACITOR	1	
C3948	F1H1C104A042	CHIP CAPACITOR	1	
C3949	ECEA0JKA101B	ALU ELEC CAPACITOR	1	
C3950	ECEA0JKA220B	ALU ELEC CAPACITOR	1	
C3955	F1H1H1030006	CHIP CAPACITOR	1	
C3956	F1H1H1030006	CHIP CAPACITOR	1	
C4001	ECEA1CKA100B	ALU ELEC CAPACITOR	1	
C4002	ECEA1CKA100B	ALU ELEC CAPACITOR	1	
C4004	ECEA1CKA100B	ALU ELEC CAPACITOR	1	
C4005	ECEA0JKA101B	ALU ELEC CAPACITOR	1	
C4007	F1H1H222A219	CHIP CAPACITOR	1	
C4008	F1H1H182A219	CHIP CAPACITOR	1	
C4009	ECEA0JKA220B	ALU ELEC CAPACITOR	1	
C4010	ECEA1EKA4R7B	ALU ELEC CAPACITOR	1	
C4011	ECEA0JKA470B	ALU ELEC CAPACITOR	1	
C4012	F1H1H1030007	CHIP CAPACITOR	1	
C4014	ECEA1HKA4R7B	ALU ELEC CAPACITOR	1	
C4015	F1H1H682A219	CHIP CAPACITOR	1	
C4016	ECEA0JKA220B	ALU ELEC CAPACITOR	1	
C4017	ECEA1HKA3R3B	ALU ELEC CAPACITOR	1	
C4018	F1H1H182A219	CHIP CAPACITOR	1	
C4020	ECQB1H333JF3	PLAST FILM CAPACITOR	1	

Ref. No.	Part No.	Part Name & Description	PCS	Remarks
C4021	ECJ1VC1H471J	CHIP CAPACITOR	1	
C4022	ECA0JM101B	ALU ELEC CAPACITOR	1	
C4023	F1H1E223A029	CHIP CAPACITOR	1	
C4024	F1H1H182A219	CHIP CAPACITOR	1	
C4025	ECJ2VF1H103Z	CHIP CAPACITOR	1	
C4101	ECJ1VB1H471K	CHIP CAPACITOR	1	
C4102	ECJ1VB1H471K	CHIP CAPACITOR	1	
C4105	F1H1H1010005	CHIP CAPACITOR	1	
C4106	F1H1H1010005	CHIP CAPACITOR	1	
C4107	ECJ1VB1H471K	CHIP CAPACITOR	1	
C4108	ECJ1VB1H471K	CHIP CAPACITOR	1	
C4111	F1H1H1010005	CHIP CAPACITOR	1	
C4112	F1H1H1010005	CHIP CAPACITOR	1	
C4501	ECEA1CKA100B	ALU ELEC CAPACITOR	1	
C4502	ECEA1CKA100B	ALU ELEC CAPACITOR	1	
C4503	ECEA1CKA100B	ALU ELEC CAPACITOR	1	
C4504	ECQB1H473JF3	PLAST FILM CAPACITOR	1	
C4505	ECEA0JKA330B	ALU ELEC CAPACITOR	1	
C4506	ECEA1CKA100B	ALU ELEC CAPACITOR	1	
C4508	ECEA1CKA100B	ALU ELEC CAPACITOR	1	
C4509	ECEA0JKA220B	ALU ELEC CAPACITOR	1	
C4510	ECQB1H153JF3	PLAST FILM CAPACITOR	1	
C4511	F1H1C333A041	CHIP CAPACITOR	1	
C4512	F1H1H1030006	CHIP CAPACITOR	1	
C4513	F1H1H1030006	CHIP CAPACITOR	1	
C4515	F1H1E104A030	CHIP CAPACITOR	1	
C4516	F1H1C104A042	CHIP CAPACITOR	1	
C4518	F1H1A2240004	CHIP CAPACITOR	1	
C4519	ECQB1H153JF3	PLAST FILM CAPACITOR	1	
C4520	ECEA1CKA220B	ALU ELEC CAPACITOR	1	
C4521	ECEA1CKA100B	ALU ELEC CAPACITOR	1	
C4522	ECEA0JKA330B	ALU ELEC CAPACITOR	1	
C4523	ECQB1H473JF3	PLAST FILM CAPACITOR	1	
C4524	ECEA0JKA101B	ALU ELEC CAPACITOR	1	
C4526	ECEA1CKA100B	ALU ELEC CAPACITOR	1	
C4531	ECEA1CKA470B	ALU ELEC CAPACITOR	1	
C4533	F1H1H1030007	CHIP CAPACITOR	1	
C4534	F1H1C104A042	CHIP CAPACITOR	1	
C4544	F1H1E104A030	CHIP CAPACITOR	1	
C4545	ECEA1AKA220B	ALU ELEC CAPACITOR	1	
C4546	F1J1A105A003	CHIP CAPACITOR	1	
C4547	F1J1A105A003	CHIP CAPACITOR	1	
C4801	F1H1H1030007	CHIP CAPACITOR	1	
C4803	F1H1H1010005	CHIP CAPACITOR	1	
C4804	F1H1H1010005	CHIP CAPACITOR	1	
C4805	F1H1H1020005	CHIP CAPACITOR	1	
C4806	F1H1H1020005	CHIP CAPACITOR	1	
C4917	ECEA1CKA100B	ALU ELEC CAPACITOR	1	
C4918	ECEA1CKA100B	ALU ELEC CAPACITOR	1	
C4919	ECEA1VKA100B	ALU ELEC CAPACITOR	1	
C4920	ECEA1VKA100B	ALU ELEC CAPACITOR	1	
C4922	ECEA1VKA100B	ALU ELEC CAPACITOR	1	
C4923	ECEA1VKA100B	ALU ELEC CAPACITOR	1	
C4924	ECEA1VKA100B	ALU ELEC CAPACITOR	1	
C4925	ECEA1VKA100B	ALU ELEC CAPACITOR	1	
C4926	ECJ1VB1A105K	CHIP CAPACITOR	1	
C4927	ECEA1CKA101B	ALU ELEC CAPACITOR	1	
C4928	F2A1H1R0A236	ALU ELEC CAPACITOR	1	
C4929	F2A1H1R0A236	ALU ELEC CAPACITOR	1	
C4930	F2A1H1R0A236	ALU ELEC CAPACITOR	1	
C4931	F2A1H1R0A236	ALU ELEC CAPACITOR	1	
C4932	F2A1H1R0A236	ALU ELEC CAPACITOR	1	
C4933	F2A1H1R0A236	ALU ELEC CAPACITOR	1	
C4934	F2A1H1R0A236	ALU ELEC CAPACITOR	1	
C4935	ECEA1CKA101B	ALU ELEC CAPACITOR	1	
C4936	F2A1H1R0A236	ALU ELEC CAPACITOR	1	
C4937	F2A1H1R0A236	ALU ELEC CAPACITOR	1	
C4938	F2A1H1R0A236	ALU ELEC CAPACITOR	1	
C4939	F2A1H1R0A236	ALU ELEC CAPACITOR	1	
C4940	F2A1H1R0A236	ALU ELEC CAPACITOR	1	
C4941	F2A1H1R0A236	ALU ELEC CAPACITOR	1	
C4942	F1H1E104A030	CHIP CAPACITOR	1	
C4943	F2A1H1R0A236	ALU ELEC CAPACITOR	1	

Ref. No.	Part No.	Part Name & Description	PCS	Remarks
C4944	ECEA1CKA470B	ALU ELEC CAPACITOR	1	
C4945	F2A1C221A019	ALU ELEC CAPACITOR	1	
C5001	F1H1H1030006	CHIP CAPACITOR	1	
C5002	F1H1H1030006	CHIP CAPACITOR	1	
C5003	F1H1H1030006	CHIP CAPACITOR	1	
C5004	F1H1H1030006	CHIP CAPACITOR	1	
C5005	F1H1E104A030	CHIP CAPACITOR	1	
C5006	ECEA0JKA470B	ALU ELEC CAPACITOR	1	
C5007	F1H1C104A042	CHIP CAPACITOR	1	
C56001	ECJ0ECLH221J	CHIP CAPACITOR	1	
C56101	ECJ0EB1A104K	CHIP CAPACITOR	1	
C56102	ECJ0EB1A104K	CHIP CAPACITOR	1	
C56103	ECJ0EB1A104K	CHIP CAPACITOR	1	
C56104	ECJ0EB1A104K	CHIP CAPACITOR	1	
C56105	ECJ0EB1A104K	CHIP CAPACITOR	1	
C56106	ECJ0EB1A104K	CHIP CAPACITOR	1	
C56107	ECJ0EB1A104K	CHIP CAPACITOR	1	
C56108	ECJ0EB1A104K	CHIP CAPACITOR	1	
C56109	ECJ0EB1A104K	CHIP CAPACITOR	1	
C56110	ECJ0EB1A104K	CHIP CAPACITOR	1	
C56111	ECJ0EB1A104K	CHIP CAPACITOR	1	
C56112	ECJ0EB1A104K	CHIP CAPACITOR	1	
C56113	ECJ0EB1A104K	CHIP CAPACITOR	1	
C56114	ECJ0EB1A104K	CHIP CAPACITOR	1	
C56115	ECJ0EB1A104K	CHIP CAPACITOR	1	
C56116	ECJ0EB1A104K	CHIP CAPACITOR	1	
C56117	ECJ0EB1A104K	CHIP CAPACITOR	1	
C56118	ECJ0EB1A104K	CHIP CAPACITOR	1	
C56119	ECJ0EB1A104K	CHIP CAPACITOR	1	
C56120	ECJ0EB1A104K	CHIP CAPACITOR	1	
C56121	ECJ0EB1A104K	CHIP CAPACITOR	1	
C56122	ECJ0EB1A104K	CHIP CAPACITOR	1	
C56123	ECJ0EB1A104K	CHIP CAPACITOR	1	
C56124	ECJ0EB1A104K	CHIP CAPACITOR	1	
C56125	ECJ0EB1A104K	CHIP CAPACITOR	1	
C56126	ECJ0EB1A104K	CHIP CAPACITOR	1	
C56127	ECJ0EB1A104K	CHIP CAPACITOR	1	
C56128	ECJ0EB1A104K	CHIP CAPACITOR	1	
C56129	ECJ0ECLH221J	CHIP CAPACITOR	1	
C56130	F1H0J1050012	CHIP CAPACITOR	1	
C56131	FLJ0J106A014	CHIP CAPACITOR	1	
C56132	ECJ0EB1C103K	CHIP CAPACITOR	1	
C56133	ECJ1VB1A105K	CHIP CAPACITOR	1	
C56134	ECJ1VB1A105K	CHIP CAPACITOR	1	
C56135	ECJ0EB1A104K	CHIP CAPACITOR	1	
C56140	ECJ0EB1A104K	CHIP CAPACITOR	1	
C6001	ECJ1VCLH180J	CHIP CAPACITOR	1	
C6002	ECJ1VCLH220J	CHIP CAPACITOR	1	
C6005	ECEA1CKA100B	ALU ELEC CAPACITOR	1	
C6006	F1H1E104A030	CHIP CAPACITOR	1	
C6007	ECJ1VCLH220J	CHIP CAPACITOR	1	
C6008	ECJ1VCLH471J	CHIP CAPACITOR	1	
C6009	F1H1H1030007	CHIP CAPACITOR	1	
C6010	ECJ1VCLH220J	CHIP CAPACITOR	1	
C6014	F1H1H1030007	CHIP CAPACITOR	1	
C6015	F1H1C333A041	CHIP CAPACITOR	1	
C6016	F1H1H1020005	CHIP CAPACITOR	1	
C6017	F1H1C104A042	CHIP CAPACITOR	1	
C6018	F1H1C104A042	CHIP CAPACITOR	1	
C6020	ECJ2VF1H104Z	CHIP CAPACITOR	1	
C6101	ECEA0JKA221B	ALU ELEC CAPACITOR	1	
C6103	F1H1A1050029	CHIP CAPACITOR	1	
C6110	F1H1A1050029	CHIP CAPACITOR	1	
C6111	ECJ1VB1H561K	CHIP CAPACITOR	1	
C6115	F1H1H1030007	CHIP CAPACITOR	1	
C6116	F1H1C104A042	CHIP CAPACITOR	1	
C6121	F1H1H330A736	CHIP CAPACITOR	1	
C6301	F1H1E104A030	CHIP CAPACITOR	1	
C6302	F1H1H1030007	CHIP CAPACITOR	1	
C6303	ECEA1AKA470B	ALU ELEC CAPACITOR	1	
C6308	ECEA0JKA470B	ALU ELEC CAPACITOR	1	
C6401	ECJ1VCLH221J	CHIP CAPACITOR	1	
C6402	ECJ1VCLH221J	CHIP CAPACITOR	1	

Ref. No.	Part No.	Part Name & Description	PCS	Remarks
C66801	F1H1H1030006	CHIP CAPACITOR	1	
C66802	F1H1A225A051	CHIP CAPACITOR	1	
C7301	F1H1H1030007	CHIP CAPACITOR	1	
C7302	ECEA0JKA101B	ALU ELEC CAPACITOR	1	
C7303	F1H1H1030007	CHIP CAPACITOR	1	
C7305	F1H1H330A736	CHIP CAPACITOR	1	
C7306	F1H1H330A736	CHIP CAPACITOR	1	
C7308	D0GB822JA057	CHIP RESISTOR	1	
C7311	F1H1H1030007	CHIP CAPACITOR	1	
C7312	F1H1C104A042	CHIP CAPACITOR	1	
C7314	F1H1C104A042	CHIP CAPACITOR	1	
C7316	F1H1E104A030	CHIP CAPACITOR	1	
C7318	ECEA0JKA470B	ALU ELEC CAPACITOR	1	
C7319	F1J1A105A003	CHIP CAPACITOR	1	
C7320	F1J1A105A003	CHIP CAPACITOR	1	
C7323	F1H1E104A030	CHIP CAPACITOR	1	
C7325	F1H1C104A042	CHIP CAPACITOR	1	
C7326	F1H1A1050029	CHIP CAPACITOR	1	
C7328	F1H1E104A030	CHIP CAPACITOR	1	
C7331	F1J1A105A003	CHIP CAPACITOR	1	
C7335	F1H1E104A030	CHIP CAPACITOR	1	
C7341	F1H1H472A219	CHIP CAPACITOR	1	
C7342	F1H1H472A219	CHIP CAPACITOR	1	
C7343	ECEA0JKA221B	ALU ELEC CAPACITOR	1	
C7401	F1H1C104A042	CHIP CAPACITOR	1	
C7402	F1H1C104A042	CHIP CAPACITOR	1	
C7403	ECJ1VB1A105K	CHIP CAPACITOR	1	
C7404	ECJ1VB1A105K	CHIP CAPACITOR	1	
C7405	ECJ1VB1A105K	CHIP CAPACITOR	1	
C7406	ECJ1VB1A105K	CHIP CAPACITOR	1	
C7407	ECJ1VB1A105K	CHIP CAPACITOR	1	
C7408	F1H1C104A042	CHIP CAPACITOR	1	
C7409	F1H1C104A042	CHIP CAPACITOR	1	
C7410	ECJ1VB1A105K	CHIP CAPACITOR	1	
C7411	ECJ1VB1A105K	CHIP CAPACITOR	1	
C7501	F1H1E104A030	CHIP CAPACITOR	1	
C7502	ECEA0JKA470B	ALU ELEC CAPACITOR	1	
C7505	F1H1E104A030	CHIP CAPACITOR	1	
C7506	F1H1H104A731	CHIP CAPACITOR	1	
C7507	F1H1H1010005	CHIP CAPACITOR	1	
C7508	F1H1E104A030	CHIP CAPACITOR	1	
C7603	ECEA0JKA101B	ALU ELEC CAPACITOR	1	
C7604	ECEA0JKA101B	ALU ELEC CAPACITOR	1	
C7605	F1H1H1030007	CHIP CAPACITOR	1	
C7606	F1H1H1030007	CHIP CAPACITOR	1	
C7613	F1H1E104A030	CHIP CAPACITOR	1	
C7617	F1H1H1030007	CHIP CAPACITOR	1	
C7618	F1H1E104A030	CHIP CAPACITOR	1	
C7620	ECEA1CKA470B	ALU ELEC CAPACITOR	1	
C7752	ECEA0JKA221B	ALU ELEC CAPACITOR	1	
C7806	F1H1H1030007	CHIP CAPACITOR	1	
C7807	F1H1H1030007	CHIP CAPACITOR	1	
C7809	F1H1H1030007	CHIP CAPACITOR	1	
C7815	F1H1A2240004	CHIP CAPACITOR	1	
C7819	F1H1H1030007	CHIP CAPACITOR	1	
C7825	F1H1H330A736	CHIP CAPACITOR	1	
C7828	F1H1H330A736	CHIP CAPACITOR	1	
C7838	F1H1E104A030	CHIP CAPACITOR	1	
C7839	ECEA1HKA010B	ALU ELEC CAPACITOR	1	
C7842	F1H1H1030007	CHIP CAPACITOR	1	
C7843	ECEA1AKA220B	ALU ELEC CAPACITOR	1	
C7844	ECEA0JKA101B	ALU ELEC CAPACITOR	1	
C7901	F2A1V221A117	ALU ELEC CAPACITOR	1	
C7902	ECQB1H392KF3	PLAST FILM CAPACITOR	1	
C7904	F2A1V470A117	ALU ELEC CAPACITOR	1	
C7905	F2A1H2200032	ALU ELEC CAPACITOR	1	
C7906	F2A1H2200032	ALU ELEC CAPACITOR	1	
C7907	F2A1A2210063	ALU ELEC CAPACITOR	1	
C9001	F1H1H1030006	CHIP CAPACITOR	1	
C9002	F1H1H1030006	CHIP CAPACITOR	1	
C9003	F1H1C104A042	CHIP CAPACITOR	1	
C9004	F1H1H1030006	CHIP CAPACITOR	1	
C9005	F1H1H1030006	CHIP CAPACITOR	1	

Ref. No.	Part No.	Part Name & Description	PCS	Remarks
C9006	ECJ1VC1H020C	CHIP CAPACITOR	1	
C9007	ECJ2FB1A225K	CHIP CAPACITOR	1	
C9008	F1H1C104A042	CHIP CAPACITOR	1	
C9009	F1H1H1030006	CHIP CAPACITOR	1	
C9010	F1H1H1030006	CHIP CAPACITOR	1	
C9011	F1H1C104A042	CHIP CAPACITOR	1	
C9012	ECJ1VC1H100C	CHIP CAPACITOR	1	
C9013	ECJ1VC1H100C	CHIP CAPACITOR	1	
C9014	F1H1C104A042	CHIP CAPACITOR	1	
C9038	F1H1C104A042	CHIP CAPACITOR	1	
C9039	ECJ1VB1H221K	CHIP CAPACITOR	1	
C9040	ECJ1VB1H221K	CHIP CAPACITOR	1	
C9042	F1H1C104A008	CHIP CAPACITOR	1	
C9111	ECJ1VB1A105K	CHIP CAPACITOR	1	
C9112	F1H1E104A030	CHIP CAPACITOR	1	
C9116	F1J0J2250003	CHIP CAPACITOR	1	
C9117	ECA1AHG102B	ALU ELEC CAPACITOR	1	
C9118	ECEA1CKA470B	ALU ELEC CAPACITOR	1	
C9135	F1H1H1030007	CHIP CAPACITOR	1	
C9138	ECJ1VB1H331K	CHIP CAPACITOR	1	
C9156	F1H1H1030007	CHIP CAPACITOR	1	
C9157	F1J0J2250003	CHIP CAPACITOR	1	
C9158	F1H1E104A030	CHIP CAPACITOR	1	
C9201	ECJ1VF1C105Z	CHIP CAPACITOR	1	
C9202	ECJ1VC1H102J	CHIP CAPACITOR	1	
C9203	F1H1C104A042	CHIP CAPACITOR	1	
C9204	ECJ1VF1C334Z	CHIP CAPACITOR	1	
C9205	F1H1H1500009	CHIP CAPACITOR	1	
C9206	F1H1H1030007	CHIP CAPACITOR	1	
C9207	ECJ1VF1C105Z	CHIP CAPACITOR	1	
C9208	F1H1H1500009	CHIP CAPACITOR	1	
C9211	ECJ1VB1H152K	CHIP CAPACITOR	1	
C9212	ECJ1VC1H100C	CHIP CAPACITOR	1	
C9301	F1H1H104A731	CHIP CAPACITOR	1	
C9302	ECQV1H104JL3	PLAST FILM CAPACITOR	1	
C9303	F1H1H1030006	CHIP CAPACITOR	1	
C9303	ECA1AM102B	ALU ELEC CAPACITOR	1	
C9305	F1H1H1030006	CHIP CAPACITOR	1	
C9305	ECEA1CKA100B	ALU ELEC CAPACITOR	1	
C9306	F1H1H1030006	CHIP CAPACITOR	1	
C9306	ECJ1VC1H102J	CHIP CAPACITOR	1	
C9307	ECJ1VF1C105Z	CHIP CAPACITOR	1	
C9308	F1H1C104A008	CHIP CAPACITOR	1	
C9309	ECJ1VF1C105Z	CHIP CAPACITOR	1	
C9309	ECJ1VC1H121J	CHIP CAPACITOR	1	
C9310	ECJ1VF1C105Z	CHIP CAPACITOR	1	
C9310	ECJ1VC1H121J	CHIP CAPACITOR	1	
C9311	ECJ1VF1C105Z	CHIP CAPACITOR	1	
C9311	F2A1C470A637	ALU ELEC CAPACITOR	1	
C9312	F1H1C104A008	CHIP CAPACITOR	1	
C9312	F2A1C470A637	ALU ELEC CAPACITOR	1	
C9313	ECJ1VF1C105Z	CHIP CAPACITOR	1	
C9315	F1H1H1020005	CHIP CAPACITOR	1	
C9316	F1H1H1020005	CHIP CAPACITOR	1	
C9336	F1H1H104A731	CHIP CAPACITOR	1	
C9337	ECEA0JKA220B	ALU ELEC CAPACITOR	1	
C9501	ECJ1VF1C105Z	CHIP CAPACITOR	1	
C9502	ECJ1VF1C105Z	CHIP CAPACITOR	1	
C9503	F1H1H1030006	CHIP CAPACITOR	1	
C9504	F1H1H1030006	CHIP CAPACITOR	1	
C9505	F1H1C104A042	CHIP CAPACITOR	1	
C9506	F1H1C104A042	CHIP CAPACITOR	1	
C9507	F1H1H1030006	CHIP CAPACITOR	1	
C9508	F1H1C104A042	CHIP CAPACITOR	1	
C9509	ECJ1VF1C105Z	CHIP CAPACITOR	1	
C9510	ECJ1VF1C105Z	CHIP CAPACITOR	1	
C9511	F1H1H4700004	CHIP CAPACITOR	1	
C9512	F1H1H4700004	CHIP CAPACITOR	1	
C9513	F1H1H4700004	CHIP CAPACITOR	1	
C9514	F1H1H4700004	CHIP CAPACITOR	1	
C9701	ECJ1VB1A105K	CHIP CAPACITOR	1	
C9703	ECJ1VB1A105K	CHIP CAPACITOR	1	
C9704	F1H1H1030007	CHIP CAPACITOR	1	

Ref. No.	Part No.	Part Name & Description	PCS	Remarks
C9705	F1H1H1030007	CHIP CAPACITOR	1	
C9706	ECEA0JKA101B	ALU ELEC CAPACITOR	1	
C9707	F1H1E104A030	CHIP CAPACITOR	1	
C9708	F1H1H1030007	CHIP CAPACITOR	1	
C9710	ECJ1VC1H100D	CHIP CAPACITOR	1	
C9711	ECJ1VC1H100D	CHIP CAPACITOR	1	
C9712	ECJ1VC1H100D	CHIP CAPACITOR	1	
C9713	F1H1H104A748	CHIP CAPACITOR	1	
C9714	F1H1H104A748	CHIP CAPACITOR	1	
C9715	F1H1H1030007	CHIP CAPACITOR	1	
C9716	F1H1H1030007	CHIP CAPACITOR	1	
C9717	F1H1H1030007	CHIP CAPACITOR	1	
C9718	F1H1H1030007	CHIP CAPACITOR	1	
C9719	F1H1H1030007	CHIP CAPACITOR	1	
C9720	F1H1H104A731	CHIP CAPACITOR	1	
C9721	ECJ1VB1A105K	CHIP CAPACITOR	1	
C9722	F1H1C104A042	CHIP CAPACITOR	1	
C9723	F2A0J470A599	ALU ELEC CAPACITOR	1	
C9724	F1H1E104A030	CHIP CAPACITOR	1	
C9725	F1H1A1050029	CHIP CAPACITOR	1	
C9726	F1H1E104A030	CHIP CAPACITOR	1	
C9733	F1H1H1010005	CHIP CAPACITOR	1	
C9735	F1H1H1030007	CHIP CAPACITOR	1	
C9736	F1H1H1030007	CHIP CAPACITOR	1	
C9737	F4D55473A013	ALU ELEC CAPACITOR	1	
C9738	ECJ1VC1H180J	CHIP CAPACITOR	1	
C9739	ECJ1VC1H180J	CHIP CAPACITOR	1	
C9741	F1H1H104A731	CHIP CAPACITOR	1	
C9742	ECJ1VC1H220J	CHIP CAPACITOR	1	
C9744	ECEA0JKA221B	ALU ELEC CAPACITOR	1	
C9745	ECJ1VC1H180J	CHIP CAPACITOR	1	
C9746	ECEA0JKA221B	ALU ELEC CAPACITOR	1	
C9747	F1H1C104A042	CHIP CAPACITOR	1	
C9748	F1H1C104A042	CHIP CAPACITOR	1	
C9749	F1H1H104A731	CHIP CAPACITOR	1	
C9750	F1H1H104A731	CHIP CAPACITOR	1	
C9752	F1H1H4700004	CHIP CAPACITOR	1	
C9753	F1H1H4700004	CHIP CAPACITOR	1	
C9754	F1H1A1050029	CHIP CAPACITOR	1	
C9756	F1H1H1010005	CHIP CAPACITOR	1	
C9757	ECJ1VB1A105K	CHIP CAPACITOR	1	
C9758	ECJ1VB1A105K	CHIP CAPACITOR	1	
C9768	ECA1CM471B	ALU ELEC CAPACITOR	1	
C9778	F1H1H1030007	CHIP CAPACITOR	1	
C9779	F1H1H1030007	CHIP CAPACITOR	1	
C9780	F1H1H1030007	CHIP CAPACITOR	1	
C9781	F1H1H1030007	CHIP CAPACITOR	1	
C9785	ECEA0JKA221B	ALU ELEC CAPACITOR	1	
C9786	ECJ1VB1H331K	CHIP CAPACITOR	1	
C9787	ECJ1VB1H331K	CHIP CAPACITOR	1	
C9788	F1H1H1030007	CHIP CAPACITOR	1	
C9790	F1J0J475A008	CHIP CAPACITOR	1	
C9801	EEEHA0J101P	CHIP CAPACITOR	1	
C9802	EEEHA0J101P	CHIP CAPACITOR	1	
C9803	F1H1H1030006	CHIP CAPACITOR	1	
C9804	ECJ1VB1C105K	CHIP CAPACITOR	1	
C9805	ECJ1VB1C105K	CHIP CAPACITOR	1	
C9806	ECJ1VB1C105K	CHIP CAPACITOR	1	
C9807	F1H1C104A042	CHIP CAPACITOR	1	
C9808	ECJ1VB1C105K	CHIP CAPACITOR	1	
C9809	ECJ1VB1C105K	CHIP CAPACITOR	1	
C9810	ECJ1VB1C105K	CHIP CAPACITOR	1	
C9811	F1H1C104A042	CHIP CAPACITOR	1	
C9812	ECJ1VB1C105K	CHIP CAPACITOR	1	
C9813	ECJ1VB1C105K	CHIP CAPACITOR	1	
C9814	ECJ1VB1C105K	CHIP CAPACITOR	1	
C9815	ECJ1VB1C105K	CHIP CAPACITOR	1	
C9816	ECJ1VB1C105K	CHIP CAPACITOR	1	
C9817	F1H1H1030006	CHIP CAPACITOR	1	
C9818	F1H1H1030007	CHIP CAPACITOR	1	
C9819	F1H1C104A042	CHIP CAPACITOR	1	
C9820	F1H1H1030006	CHIP CAPACITOR	1	
C9821	F1H1H1030007	CHIP CAPACITOR	1	

Ref. No.	Part No.	Part Name & Description	PCS	Remarks
C9822	ECJ1VB1C105K	CHIP CAPACITOR	1	
C9823	ECJ1VB1C105K	CHIP CAPACITOR	1	
C9824	ECJ1VB1C105K	CHIP CAPACITOR	1	
C9825	ECJ1VB1C105K	CHIP CAPACITOR	1	
C9826	F1H1H1030006	CHIP CAPACITOR	1	
C9827	ECJ1VB1C105K	CHIP CAPACITOR	1	
C9828	ECJ1VB1C105K	CHIP CAPACITOR	1	
C9829	ECJ1VB1C105K	CHIP CAPACITOR	1	
C9830	F1H1C104A042	CHIP CAPACITOR	1	
C9831	ECJ1VB1C105K	CHIP CAPACITOR	1	
C9832	ECJ1VB1C105K	CHIP CAPACITOR	1	
C9833	ECJ1VB1C105K	CHIP CAPACITOR	1	
C9834	F1H1C104A042	CHIP CAPACITOR	1	
C9835	ECJ1VB1C105K	CHIP CAPACITOR	1	
C9836	F1H1H1030006	CHIP CAPACITOR	1	
C9839	ECJ1VC1H102J	CHIP CAPACITOR	1	
C9903	F2H1C100A013	CAPACITOR	1	
C9904	F2H1H1R0A006	CAPACITOR	1	
C9905	F2H1H1R0A006	CAPACITOR	1	
C9906	F2H1C100A013	CAPACITOR	1	
C9909	ECJ1VC1H070D	CHIP CAPACITOR	1	
C9910	ECJ1VC1H070D	CHIP CAPACITOR	1	
C9911	ECJ1VC1H070D	CHIP CAPACITOR	1	
C9912	ECJ1VC1H070D	CHIP CAPACITOR	1	
C9913	ECJ1VF1C105Z	CHIP CAPACITOR	1	
C9914	ECJ1VF1C105Z	CHIP CAPACITOR	1	
C9915	ECJ1VF1C105Z	CHIP CAPACITOR	1	
C9916	ECJ1VF1C105Z	CHIP CAPACITOR	1	
C9917	F1H1H1510001	CHIP CAPACITOR	1	
C9918	F1H1H1510001	CHIP CAPACITOR	1	
CN9001	K1KB11B00013	CONNECTOR	1	
CN9003	K1KB12B00030	CONNECTOR	1	
D1101	ERZVA5V471	SURGE ABSORBER	1	△
D1102	B0EALR000016	DIODE	1	
D1103	B0EALR000016	DIODE	1	
D1104	B0EALR000016	DIODE	1	
D1105	B0EALR000016	DIODE	1	
D1106	B0HADV000001	DIODE	1	
D1107	MAZ42000MF	DIODE	1	
D1108	B0HAGM000008	DIODE	1	
D1109	MAZ73000BF	ZENER DIODE	1	
D1203	B0JBLSL000002	DIODE	1	
D1204	B0JCPD000021	DIODE	1	
D1205	B0JCPE000015	DIODE	1	
D1208	B0JCPE000015	DIODE	1	
D1501	B3EA00000072	DIODE	1	
D1801	B0JCPE000015	DIODE	1	
D2001	B0AACK000004	SWITCHING DIODE	1	
D2002	B0AACK000004	SWITCHING DIODE	1	
D2502	MAZ4160NMF	DIODE	1	
D3901	B0AACK000004	SWITCHING DIODE	1	
D4501	B0AACK000004	SWITCHING DIODE	1	
D4502	MAZ4056NHF	DIODE	1	
D4901	MA2J11200L	DIODE	1	
D56101	MA2J72800L	DIODE	1	
D6306	MAZ4056NHF	DIODE	1	
D6401	B0AACK000004	SWITCHING DIODE	1	
D6402	B0ACCK000005	DIODE	1	
D7301	MA2C165001VT	DIODE	1	
D7501	B3ABA0000595	LED	1	
D7502	B3ACA0000273	DIODE	1	
D7503	B3ADA0000173	DIODE	1	
D7504	B3AAA0000752	DIODE	1	
D7803	MA2C165001VT	DIODE	1	
D7805	MAZ40390HF	DIODE	1	
D7807	MAZ4300NMF	DIODE	1	
D7901	B0BA03600021	DIODE	1	
D7903	B0AADM000003	DIODE	1	
D7904	B0AADM000003	DIODE	1	
D7905	B0JAMD000026	DIODE	1	
D7906	MAZ4220NLF	DIODE	1	
D7907	MAZ4180NHF	DIODE	1	
D7908	MA2C165001VT	DIODE	1	

Ref. No.	Part No.	Part Name & Description	PCS	Remarks
D9104	MAZ40390HF	DIODE	1	
D9105	B0AACK000004	SWITCHING DIODE	1	
D9106	B0JACE000001	DIODE	1	
D9107	B0AACK000004	SWITCHING DIODE	1	
D9201	B0CCAB000039	DIODE	1	
D9702	MA2C72300F	DIODE	1	
DP7501	A2BD00000157	FL DISPLAY	1	
F1101	K5D202BK0005	FUSE 250V / 2 AT	1	△
FH1101	EYF52BCY	FUSE HOLDER	1	
FH1102	EYF52BCY	FUSE HOLDER	1	
FL6101	F1H0J1050025	CERAMIC CAPACITOR	1	
FL6102	F1H0J1050025	CERAMIC CAPACITOR	1	
FL6103	F1H0J1050025	CERAMIC CAPACITOR	1	
FL6104	F1H0J1050025	CERAMIC CAPACITOR	1	
FL6105	F1H0J1050025	CERAMIC CAPACITOR	1	
FL6106	F1H0J1050025	CERAMIC CAPACITOR	1	
FL6110	F1H0J1050025	CERAMIC CAPACITOR	1	
FP6101	K1MN40AA0082	CONNECTOR	1	
IC1101	CODACZ00009	INTEGRATED CIRCUIT	1	
IC1201	C0DBAKG00007	POWER SUPPLY IC	1	
IC1202	C0DAEMZ00001	VOLTAGE REGULATOR	1	
IC1203	C0DBAJG00011	POWER SUPPLY IC	1	
IC1204	C0DBAJG00011	POWER SUPPLY IC	1	
IC1501	B3NAA0000118	GAP SENSOR	1	
IC1502	B3NAA0000118	GAP SENSOR	1	
IC1801	C0DBAJG00011	POWER SUPPLY IC	1	
IC2501	CLAB00001767	MOTOR DRIVE IC	1	
IC3001	CLAB00002084	INTEGRATED CIRCUIT	1	
IC3002	C0CBCDD00026	POWER SUPPLY IC	1	
IC3901	CLAB00002379	INTEGRATED CIRCUIT	1	
IC3905	CLAB00001340	INTEGRATED CIRCUIT	1	
IC4501	AN3656NFBPBV	INTEGRATED CIRCUIT	1	
IC6001	C2CBHF000469	VHS MICON IC	1	
IC6101	C0JBAB0002116	INTEGRATED CIRCUIT	1	
IC6102	C0JBAB0002116	INTEGRATED CIRCUIT	1	
IC6103	MN8647011	HDMI LSI IC	1	
IC6104	C0CBCDD00048	POWER SUPPLY IC	1	
IC6105	C0CBCDC00052	POWER SUPPLY IC	1	
IC6107	C0JBAB000604	INTEGRATED CIRCUIT	1	
IC6302	C0CBCDC00020	POWER SUPPLY IC	1	
IC7301	CLAB00002225	INTEGRATED CIRCUIT	1	
IC7401	C0CBCDD00025	POWER SUPPLY IC	1	
IC7402	C0CBCDD00025	POWER SUPPLY IC	1	
IC7403	C0CBCDD00025	POWER SUPPLY IC	1	
IC7501	C0HBB0000044	DISPLAY DRIVER IC	1	
IC7502	B3RAD0000073	IR RECEIVER	1	
IC9001	CLAB00002208	INTEGRATED CIRCUIT	1	
IC9102	C0CBCDD00025	POWER SUPPLY IC	1	
IC9106	C0CBCDD00048	POWER SUPPLY IC	1	
IC9201	C0JBAB000706	INTEGRATED CIRCUIT	1	
IC9301	C3ABQG000083	SDRAM	1	
IC9301	C0DBAHD00013	VOLTAGE REGULATOR	1	
IC9302	C3FBMD000166	16 MBIT LOW VOLTAGE	1	
IC9302	C0ABBB000216	AMPLIFIERS	1	
IC9303	C0EBE0000504	INTEGRATED CIRCUIT	1	
IC9305	C0ABBB000119	INTEGRATED CIRCUIT	1	
IC9700	B3ZAZ0000017	OPTICAL LINK	1	
IC9702	C0EBE0000194	VOLTAGE RESET IC	1	
IC9703	C0EBJ0000336	RESET IC	1	
IC9704	C2CBJG000733	MICON IC	1	
IC9705	RFKFM6016K	EEPROM IC	1	SPC
IC9706	C0EBE0000504	INTEGRATED CIRCUIT	1	
IC9901	C0ABBB000216	AMPLIFIERS	1	
IP1221	ERJ8GEY0R00V	CHIP RESISTOR	1	
IP1231	ERJ8GEY0R00V	CHIP RESISTOR	1	
IP1801	ERJ8GEY0R00V	CHIP RESISTOR	1	
IP4901	K5H5012A0010	FUSE	1	
IP7901	D0YBR0000020	CHIP RESISTOR	1	
IP9102	K5H5012A0010	FUSE	1	
J1	VEE0U97	EARTH WIRE	1	
JK3901	K1FB121B0018	CONNECTOR	1	
JK3902	K1FB121B0018	CONNECTOR	1	
JK4801	K2HA307A0009	CONNECTOR	1	

Ref. No.	Part No.	Part Name & Description	PCS	Remarks
JK4802	K1CB104A0017	CONNECTOR	1	
JK4901	K2HA304B0007	CONNECTOR	1	
JK4902	K1CB105B0041	CONNECTOR	1	
JK4903	K2HA1YB0002	CONNECTOR	1	
JK9301	K2HA204B0147	CONNECTOR	1	
K3005	DOYBR0000020	CHIP RESISTOR	1	
K3905	DOYBR0000020	CHIP RESISTOR	1	
K3906	DOYBR0000020	CHIP RESISTOR	1	
K3907	DOYBR0000020	CHIP RESISTOR	1	
K3908	ERJ6GEY0R00Z	CHIP RESISTOR	1	
K3909	DOYBR0000020	CHIP RESISTOR	1	
K3910	DOYBR0000020	CHIP RESISTOR	1	
K4502	DOYBR0000020	CHIP RESISTOR	1	
K4905	DOYBR0000020	CHIP RESISTOR	1	
K7306	DOYBR0000020	CHIP RESISTOR	1	
K7307	DOYBR0000020	CHIP RESISTOR	1	
K7400	DOYBR0000020	CHIP RESISTOR	1	
K7801	DOYBR0000020	CHIP RESISTOR	1	
K7802	DOYBR0000020	CHIP RESISTOR	1	
K9302	ERJ6GEY0R00Z	CHIP RESISTOR	1	
K9703	DOYBR0000020	CHIP RESISTOR	1	
L1101	G0B233D00001	LINE FILTER	1	
L1102	G0B233D00001	LINE FILTER	1	
L1202	G0A220GA0026	CHOKE COIL RADIAL	1	
L1204	G0A220ZA0042	CHOKE COIL	1	
L1205	G0A100H00025	CHOKE COIL	1	
L1207	G0A100H00025	CHOKE COIL	1	
L1209	G0A470ZA0042	CHOKE COIL	1	
L1210	G0A220GA0026	CHOKE COIL RADIAL	1	
L1211	G0A330ZA0042	CHOKE COIL	1	
L1214	G0A220GA0026	CHOKE COIL RADIAL	1	
L1801	G0A220GA0026	CHOKE COIL RADIAL	1	
L1802	G0A220ZA0042	CHOKE COIL	1	
L3001	G0C820JA0019	CHOKE COIL AXIAL	1	
L3002	G0C270JA0019	CHOKE COIL AXIAL	1	
L3003	G0C390JA0019	CHOKE COIL AXIAL	1	
L3004	G0C680JA0019	CHOKE COIL AXIAL	1	
L3006	G0C270JA0019	CHOKE COIL AXIAL	1	
L3007	ELJFAL20KFB	CHIP INDUCTOR	1	
L4001	G0C221KA0073	FIXED INDUCTOR	1	
L4502	G0C1R2J00004	CHOKE COIL AXIAL	1	
L4503	G0C101JA0019	CHOKE COIL AXIAL	1	
L4503	G0C101JA0019	CHOKE COIL AXIAL	1	
L5001	G0C680JA0019	CHOKE COIL AXIAL	1	
L56101	J0MAB0000170	BEAD CORE	1	
L56102	J0MAB0000170	BEAD CORE	1	
L56103	J0MAB0000170	BEAD CORE	1	
L56104	J0MAB0000170	BEAD CORE	1	
L6103	G0C1R5JA0019	CHOKE COIL	1	
L6105	G0C680JA0019	CHOKE COIL AXIAL	1	
L7301	G0C1R0JA0019	CHOKE COIL AXIAL	1	
L7302	G0C2R2JA0019	CHOKE COIL AXIAL	1	
L7501	G0C220JA0019	CHOKE COIL AXIAL	1	
L7901	G0C390JA0019	CHOKE COIL AXIAL	1	
L9005	J0JJC0000015	BEAD CORE	1	
L9007	J0JJC0000015	BEAD CORE	1	
L9008	G1CR15M00002	CHIP INDUCTOR	1	
L9105	G0C680JA0019	CHOKE COIL AXIAL	1	
L9106	G0C820JA0019	CHOKE COIL AXIAL	1	
L9201	ELJNA2R7JFB	CHIP INDUCTOR	1	
L9501	ELJFAL10MFB	CHIP INDUCTOR	1	
L9502	J0JJC0000015	BEAD CORE	1	
L9503	ELJFAL150KFB	CHIP INDUCTOR	1	
L9504	ELJFAL100JFB	CHIP INDUCTOR	1	
L9505	ELJFAL100JFB	CHIP INDUCTOR	1	
L9701	G0C390JA0019	CHOKE COIL AXIAL	1	
L9702	G0A220GA0026	CHOKE COIL RADIAL	1	
L9801	DOYBR0000020	CHIP RESISTOR	1	
L9802	J0JDC0000002	BEAD CORE	1	
L9803	J0JHC0000075	BEAD CORE	1	
L9804	ELJPA270KFB	CHIP INDUCTOR	1	
L9903	ELJFA330KFB	CHIP INDUCTOR	1	
LB1102	EXCELDR35V	BEAD CORES	1	

Ref. No.	Part No.	Part Name & Description	PCS	Remarks
LB1105	EXCELDR35V	BEAD CORES	1	
LB1203	ERJ6GEY0R00Z	CHIP RESISTOR	1	
LB1204	ERJ6GEY0R00Z	CHIP RESISTOR	1	
LB1207	J0JHC0000048	BEAD CORE	1	
LB3901	J0JGC0000020	BEAD CORE	1	
LB4002	J0JBC0000070	CHIP INDUCTOR	1	
LB4003	J0JBC0000070	CHIP INDUCTOR	1	
LB4101	J0JBC0000041	BEAD CORE	1	
LB4102	J0JHC0000021	BEAD CORE	1	
LB4103	J0JBC0000041	BEAD CORE	1	
LB4104	J0JBC0000041	BEAD CORE	1	
LB4105	J0JBC0000041	BEAD CORE	1	
LB4106	J0JBC0000041	BEAD CORE	1	
LB4203	DOYBR0000020	CHIP RESISTOR	1	
LB4801	DOYBR0000020	CHIP RESISTOR	1	
LB4802	DOYBR0000020	CHIP RESISTOR	1	
LB4803	DOYBR0000020	CHIP RESISTOR	1	
LB4901	DOYBR0000020	CHIP RESISTOR	1	
LB4902	DOYBR0000020	CHIP RESISTOR	1	
LB4903	DOYBR0000020	CHIP RESISTOR	1	
LB4904	DOYBR0000020	CHIP RESISTOR	1	
LB4905	DOYBR0000020	CHIP RESISTOR	1	
LB4906	DOYBR0000020	CHIP RESISTOR	1	
LB6101	J0JHC0000032	BEAD CORE	1	
LB6102	J0JHC0000032	BEAD CORE	1	
LB6103	J0JHC0000032	BEAD CORE	1	
LB6104	J0JCC0000119	FERRITE CORE	1	
LB6105	J0JCC0000119	FERRITE CORE	1	
LB6106	J0JCC0000119	FERRITE CORE	1	
LB6107	J0JCC0000119	FERRITE CORE	1	
LB6108	J0JHC0000032	BEAD CORE	1	
LB6109	J0JHC0000032	BEAD CORE	1	
LB6110	J0JHC0000032	BEAD CORE	1	
LB6111	J0JHC0000032	BEAD CORE	1	
LB6112	J0JHC0000032	BEAD CORE	1	
LB6115	J0JHC0000032	BEAD CORE	1	
LB6116	J0JHC0000032	BEAD CORE	1	
LB6801	J0JHC0000032	BEAD CORE	1	
LB6802	J0JHC0000045	BEAD CORE	1	
LB7301	ERJ6GEY0R00Z	CHIP RESISTOR	1	
LB7302	J0JBC0000011	BEAD CORE	1	
LB7303	ERJ6GEY0R00Z	CHIP RESISTOR	1	
LB7401	J0JHC0000032	BEAD CORE	1	
LB7601	J0JHC0000032	BEAD CORE	1	
LB7602	J0JHC0000032	BEAD CORE	1	
LB7603	J0JHC0000032	BEAD CORE	1	
LB7801	J0JGC0000020	BEAD CORE	1	
LB7803	J0JBC0000011	BEAD CORE	1	
LB7804	J0JBC0000011	BEAD CORE	1	
LB7901	DOYBR0000020	CHIP RESISTOR	1	
LB7902	DOYBR0000020	CHIP RESISTOR	1	
LB7903	DOYBR0000020	CHIP RESISTOR	1	
LB9700	DOYBR0000020	CHIP RESISTOR	1	
LB9701	J0JHC0000032	BEAD CORE	1	
LB9702	DOYBR0000020	CHIP RESISTOR	1	
LB9703	DOYBR0000020	CHIP RESISTOR	1	
LB9704	J0JKB0000012	BEAD CORE	1	
LB9705	DOYBR0000020	CHIP RESISTOR	1	
LB9706	J0JCC0000060	BEAD CORE	1	
LB9707	J0JKB0000012	BEAD CORE	1	
LB9708	J0JKB0000003	BEAD CORE	1	
LB9709	DOYBR0000020	CHIP RESISTOR	1	
LB9710	J0JHC0000021	BEAD CORE	1	
LB9711	J0JHC0000021	BEAD CORE	1	
P1101	K2AA2H000007	AC INLET	1	△
P1531	K1KA02A00375	CONNECTOR	1	
P2501	K1MN07A00030	CONNECTOR	1	
P2571	K1KA08A00355	CONNECTOR	1	
P4001	K1KB02A00035	CONNECTOR	1	
P4002	K1MN06A00042	CONNECTOR	1	
P5001	K1MN09A00029	CONNECTOR	1	
P56101	K1KY10BA0033	CONNECTOR	1	
P56102	K1FA119E0002	CONNECTOR	1	

Ref. No.	Part No.	Part Name & Description	PCS	Remarks
P6001	K1KB15AA0032	CONNECTOR 15POL.	1	
P6002	K1KB19AA0032	CONNECTOR 19POL.	1	
P6003	K1KB19AA0032	CONNECTOR 19POL.	1	
P6004	K1KB09A00047	CONNECTOR	1	
P66801	K1NA09E00075	CONNECTOR	1	
P66802	K1MY20BA0049	CONNECTOR	1	
P66803	K2HZ104B0016	CONNECTOR	1	
P66804	K1KA06AA0104	CONNECTOR	1	
P7801	K1KA12AA0288	CONNECTOR	1	
P7802	K1KA11AA0288	CONNECTOR	1	
P9101	K1KA15A00118	CONNECTOR	1	
P9102	K1KA19A00007	CONNECTOR	1	
P9103	K1KA19A00007	CONNECTOR	1	
P9104	K1KA09A00210	CONNECTOR	1	
P9700	K1KY10AA0107	CONNECTOR	1	
P9701	K1KA03AA0180	CONNECTOR	1	
P9703	K1KA88A00003	CONNECTOR	1	
PP4801	K1KA10B00196	CONNECTOR	1	
PP7501	K1KA10B00196	CONNECTOR	1	
PP7502	K1KA10B00196	CONNECTOR	1	
PP7503	K1KA10B00196	CONNECTOR	1	
PS6001	K1KB10B00053	CONNECTOR	1	
PS6002	K1KB10B00053	CONNECTOR	1	
PS9701	K1KB10B00045	CONNECTOR	1	
PS9702	K1KB10B00053	CONNECTOR	1	
Q1101	B3PBA0000237	PHOTO COUPLER	1	△
Q1201	B1DHED000008	TRANSISTOR	1	
Q1202	B1DHDD000022	TRANSISTOR	1	
Q1501	PNB2303M01VT	PHOTO TRANSISTOR	1	
Q1502	PNB2303M01VT	PHOTO TRANSISTOR	1	
Q3002	2SD1819A0L	TRANSISTOR	1	
Q4001	2SD114900L	TRANSISTOR	1	
Q4002	2SD1819A0L	TRANSISTOR	1	
Q4003	2SD0602ARL	TRANSISTOR	1	
Q4004	2SB0710A0L	TRANSISTOR	1	
Q4501	BLAAGD000016	TRANSISTOR	1	
Q4502	2SB0710A0L	TRANSISTOR	1	
Q4901	2SB0710A0L	TRANSISTOR	1	
Q56001	2SD1819A0L	TRANSISTOR	1	
Q56002	2SD1819A0L	TRANSISTOR	1	
Q56101	2SD1819A0L	TRANSISTOR	1	
Q56102	B1CFHA000002	TRANSISTOR	1	
Q56103	B1CFHA000002	TRANSISTOR	1	
Q56104	2SD1819A0L	TRANSISTOR	1	
Q56105	2SD1819A0L	TRANSISTOR	1	
Q6102	2SD1819A0L	TRANSISTOR	1	
Q6103	2SD1819A0L	TRANSISTOR	1	
Q6104	2SB1218A0L	SS-TRANSISTOR	1	
Q6305	2SD0601A0L	TRANSISTOR	1	
Q6305	2SD0601A0L	TRANSISTOR	1	
Q6401	2SD1819A0L	TRANSISTOR	1	
Q6402	2SD1819A0L	TRANSISTOR	1	
Q6403	2SD1819A0L	TRANSISTOR	1	
Q6404	2SD1819A0L	TRANSISTOR	1	
Q7502	2SD0601A0L	TRANSISTOR	1	
Q7502	2SD0601A0L	TRANSISTOR	1	
Q7802	2SD0602A0L	TRANSISTOR	1	
Q7901	B1BAEK000001	POWER TRANSISTOR	1	
Q9101	2SD1819A0L	TRANSISTOR	1	
Q9106	2SD0601A0L	TRANSISTOR	1	
Q9106	2SD0601A0L	TRANSISTOR	1	
Q9201	2SB0709A0L	PNP TRANSISTOR	1	
Q9701	2SB1218A0L	SS-TRANSISTOR	1	
Q9702	2SD1819A0L	TRANSISTOR	1	
Q9703	2SD1819A0L	TRANSISTOR	1	
Q9704	2SB1321A0A	TRANSISTOR	1	
Q9705	2SB1218A0L	SS-TRANSISTOR	1	
Q9706	2SD1819A0L	TRANSISTOR	1	
QR1202	B1GBCFNN0009	TRANSISTOR	1	
QR1203	B1GBCFNN0009	TRANSISTOR	1	
QR1801	B1GBCFNN0009	TRANSISTOR	1	
QR4003	B1GBCFJJ0007	TRANSISTOR	1	
QR4004	B1GDCFJJ0008	DIGITAL TRANSISTOR	1	

Ref. No.	Part No.	Part Name & Description	PCS	Remarks
QR4005	B1GBCFNN0009	TRANSISTOR	1	
QR4501	B1GBCFJJ0007	TRANSISTOR	1	
QR4901	B1GBCFNN0009	TRANSISTOR	1	
QR4902	B1GDCFJJ0008	DIGITAL TRANSISTOR	1	
QR4903	UNR521600L	TRANSISTOR	1	
QR4904	UNR521600L	TRANSISTOR	1	
QR4905	UNR521600L	TRANSISTOR	1	
QR4906	UNR521600L	TRANSISTOR	1	
QR4911	B1GDCFNN0007	TRANSISTOR	1	
QR4912	UNR521600L	TRANSISTOR	1	
QR4913	UNR521600L	TRANSISTOR	1	
QR4914	B1GBCFNN0009	TRANSISTOR	1	
QR4915	B1GBCFJJ0007	TRANSISTOR	1	
QR6402	B1GBCFJA0006	TRANSISTOR	1	
QR6403	B1GBCFJA0006	TRANSISTOR	1	
QR7501	B1GBCFJJ0007	TRANSISTOR	1	
QR7502	B1GBCFJJ0007	TRANSISTOR	1	
QR7503	B1GBCFJJ0007	TRANSISTOR	1	
QR7504	B1GBCFJJ0007	TRANSISTOR	1	
QR7801	B1GDCFNN0007	TRANSISTOR	1	
QR7802	B1GBCFNN0009	TRANSISTOR	1	
QR7803	B1GBCFNN0009	TRANSISTOR	1	
QR7804	B1GDCFLL0012	TRANSISTOR	1	
QR7901	B1GBCFJN0009	TRANSISTOR	1	
QR9301	B1GDCFJJ0008	DIGITAL TRANSISTOR	1	
QR9304	UNR521600L	TRANSISTOR	1	
QR9305	UNR521600L	TRANSISTOR	1	
QR9701	B1GBCFLL0012	TRANSISTOR	1	
QR9703	B1GBCFNA0010	TRANSISTOR	1	
QR9705	B1GBCFNN0009	TRANSISTOR	1	
QR9706	B1GBCFNN0009	TRANSISTOR	1	
R1101	ERDS2FJ105T	CARBON RESISTOR	1	
R1102	ERDS2FJ105T	CARBON RESISTOR	1	
R1103	ERG2SJ683E	SOLID RESISTOR	1	
R1104	ERG2SJ221E	METAL OXIDE RESISTOR	1	
R1105	ERX12SJR47E	METAL RESISTOR	1	
R1106	ERGL2SJ180E	METAL OXIDE RESISTOR	1	
R1107	ERDS2TJ474T	CARBON RESISTOR	1	
R1108	ERDS2TJ474T	CARBON RESISTOR	1	
R1207	D0GB513JA057	CHIP RESISTOR	1	
R1208	D1BFR0270001	RESISTOR ARRAY	1	
R1213	D1BB12020002	CHIP RESISTOR	1	
R1214	D1BB5600A010	CHIP RESISTOR	1	
R1215	D1BB20010002	CHIP RESISTOR	1	
R1216	D0GB222JA057	CHIP RESISTOR	1	
R1217	D0GB221JA057	CHIP RESISTOR	1	
R1218	D0GB222JA057	CHIP RESISTOR	1	
R1220	D1BB10020004	CHIP RESISTOR	1	
R1221	D1BB68000002	CHIP RESISTOR	1	
R1222	D1BB2701A010	CHIP RESISTOR	1	
R1225	D0GB104JA057	CHIP RESISTOR	1	
R1226	D1BB4301A010	CHIP RESISTOR	1	
R1227	D1BB1201A010	CHIP RESISTOR	1	
R1228	D1BB1001A010	CHIP RESISTOR	1	
R1231	ERJ3GEYF362V	CHIP RESISTOR	1	
R1232	ERJ3GEYF181V	CHIP RESISTOR	1	
R1233	D1BB1001A010	CHIP RESISTOR	1	
R1235	D0GB104JA057	CHIP RESISTOR	1	
R1236	D0GB223JA057	CHIP RESISTOR	1	
R1237	D0GB223JA057	CHIP RESISTOR	1	
R1501	D0GB273JA057	CHIP RESISTOR	1	
R1502	D0GB273JA057	CHIP RESISTOR	1	
R1503	ERDS2TJ151T	CARBON RESISTOR	1	
R1511	D0GB273JA057	CHIP RESISTOR	1	
R1512	D0GB273JA057	CHIP RESISTOR	1	
R1513	ERJ6GEYJ121V	CHIP RESISTOR	1	
R1801	D0GB104JA057	CHIP RESISTOR	1	
R1802	ERJ3GEYF181V	CHIP RESISTOR	1	
R1803	D1BB15010002	CHIP RESISTOR	1	
R1804	D1BB1201A010	CHIP RESISTOR	1	
R2001	D0GB392JA057	CHIP RESISTOR	1	
R2002	D0GB105JA057	CHIP RESISTOR	1	
R2099	D0GB682JA057	CHIP RESISTOR	1	

Ref. No.	Part No.	Part Name & Description	PCS	Remarks
R2501	ERJ6GEYJ1R2V	CHIP RESISTOR	1	
R2502	ERJ6GEYJ1R5V	CHIP RESISTOR	1	
R2503	ERDS2TJ103T	CARBON RESISTOR	1	
R2514	D0GB221JA057	CHIP RESISTOR	1	
R2515	D0GB221JA057	CHIP RESISTOR	1	
R2516	D0GB221JA057	CHIP RESISTOR	1	
R2520	D0GB183JA057	CHIP RESISTOR	1	
R2521	D0GB102JA057	CHIP RESISTOR	1	
R2551	D0GB103JA057	CHIP RESISTOR	1	
R2552	D0GB103JA057	CHIP RESISTOR	1	
R2561	D0GB102JA057	CHIP RESISTOR	1	
R2562	D0GB473JA057	CHIP RESISTOR	1	
R2563	D0GB102JA057	CHIP RESISTOR	1	
R2564	D0GB101JA057	CHIP RESISTOR	1	
R2565	D0GB101JA057	CHIP RESISTOR	1	
R3001	D0GB152JA057	CHIP RESISTOR	1	
R3002	D0GB622JA057	CHIP RESISTOR	1	
R3003	D0GB562JA057	CHIP RESISTOR	1	
R3005	D0GB122JA057	CHIP RESISTOR	1	
R3008	D0GB106JA057	CHIP RESISTOR	1	
R3010	D0GB153JA057	CHIP RESISTOR	1	
R3013	D0GB101JA057	CHIP RESISTOR	1	
R3014	D0GB101JA057	CHIP RESISTOR	1	
R3015	D0GB273JA057	CHIP RESISTOR	1	
R3016	D0GB471JA057	CHIP RESISTOR	1	
R3017	D0GB332JA057	CHIP RESISTOR	1	
R3021	D0GB102JA057	CHIP RESISTOR	1	
R3901	ERJ3GEYG750V	CHIP RESISTOR	1	
R3902	ERJ3GEYG750V	CHIP RESISTOR	1	
R3903	ERJ3GEYG750V	CHIP RESISTOR	1	
R3904	ERJ3GEYG750V	CHIP RESISTOR	1	
R3905	ERJ3GEYG750V	CHIP RESISTOR	1	
R3906	ERJ3GEYG750V	CHIP RESISTOR	1	
R3907	ERDS2TJ221T	CARBON RESISTOR	1	
R3908	D0GB750JA057	CHIP RESISTOR	1	
R3909	ERJ3GEYG750V	CHIP RESISTOR	1	
R3910	ERJ3RED750V	CHIP RESISTOR	1	
R3911	ERJ3RED750V	CHIP RESISTOR	1	
R3912	ERJ3RED750V	CHIP RESISTOR	1	
R3913	ERJ3GEYG750V	CHIP RESISTOR	1	
R3914	D0GB330JA057	CHIP RESISTOR	1	
R3915	D0YBR0000020	CHIP RESISTOR	1	
R3916	D0GB101JA057	CHIP RESISTOR	1	
R3917	D0GB101JA057	CHIP RESISTOR	1	
R3921	D0GB682JA057	CHIP RESISTOR	1	
R3931	D0GB104JA057	CHIP RESISTOR	1	
R4001	D0GB332JA057	CHIP RESISTOR	1	
R4002	D0GB153JA057	CHIP RESISTOR	1	
R4003	D0GB682JA057	CHIP RESISTOR	1	
R4004	D0GB472JA057	CHIP RESISTOR	1	
R4006	D0GB332JA057	CHIP RESISTOR	1	
R4007	D0GB104JA057	CHIP RESISTOR	1	
R4008	D0GB153JA057	CHIP RESISTOR	1	
R4009	D0GB271JA057	CHIP RESISTOR	1	
R4011	D0GB203JA057	CHIP RESISTOR	1	
R4012	D0GB474JA057	CHIP RESISTOR	1	
R4013	D0GB153JA057	CHIP RESISTOR	1	
R4014	D0GB103JA057	CHIP RESISTOR	1	
R4015	D0GB332JA057	CHIP RESISTOR	1	
R4016	D0GB222JA057	CHIP RESISTOR	1	
R4017	D0GB222JA057	CHIP RESISTOR	1	
R4018	ERJ6GEYJ102V	CHIP RESISTOR	1	
R4019	ERJ6GEYJ102V	CHIP RESISTOR	1	
R4101	D0GB102JA057	CHIP RESISTOR	1	
R4102	D0GB102JA057	CHIP RESISTOR	1	
R4103	D0GB102JA057	CHIP RESISTOR	1	
R4104	D0GB102JA057	CHIP RESISTOR	1	
R4105	D0GB221JA057	CHIP RESISTOR	1	
R4106	D0GB221JA057	CHIP RESISTOR	1	
R4116	D0GB221JA057	CHIP RESISTOR	1	
R4117	D0GB221JA057	CHIP RESISTOR	1	
R4505	D0GB472JA057	CHIP RESISTOR	1	
R4506	D0GB472JA057	CHIP RESISTOR	1	

Ref. No.	Part No.	Part Name & Description	PCS	Remarks
R4507	D0GB472JA057	CHIP RESISTOR	1	
R4508	D0GB912JA057	CHIP RESISTOR	1	
R4509	D0GB472JA057	CHIP RESISTOR	1	
R4510	D0GB472JA057	CHIP RESISTOR	1	
R4511	D0GB912JA057	CHIP RESISTOR	1	
R4512	D0GB472JA057	CHIP RESISTOR	1	
R4513	D0GB563JA057	CHIP RESISTOR	1	
R4514	D0GB563JA057	CHIP RESISTOR	1	
R4515	D0GB683JA057	CHIP RESISTOR	1	
R4516	D0GB683JA057	CHIP RESISTOR	1	
R4517	D0GB511JA057	CHIP RESISTOR	1	
R4518	D0GB472JA057	CHIP RESISTOR	1	
R4519	D0GB472JA057	CHIP RESISTOR	1	
R4520	D0GB821JA057	CHIP RESISTOR	1	
R4521	D0GB124JA057	CHIP RESISTOR	1	
R4522	D0GB472JA057	CHIP RESISTOR	1	
R4523	D0GB511JA057	CHIP RESISTOR	1	
R4524	D0GB102JA057	CHIP RESISTOR	1	
R4525	D0GB333JA057	CHIP RESISTOR	1	
R4526	D0GB102JA057	CHIP RESISTOR	1	
R4527	D0GB102JA057	CHIP RESISTOR	1	
R4528	D0GB472JA057	CHIP RESISTOR	1	
R4530	D0GB472JA057	CHIP RESISTOR	1	
R4532	D0GB681JA057	CHIP RESISTOR	1	
R4555	ERDS2TJ821T	CARBON RESISTOR	1	
R4557	D0GB472JA057	CHIP RESISTOR	1	
R4559	D0GB393JA057	CHIP RESISTOR	1	
R4560	D0GB682JA057	CHIP RESISTOR	1	
R4801	D0GB750JA057	CHIP RESISTOR	1	
R4802	D0GB750JA057	CHIP RESISTOR	1	
R4803	D0GB750JA057	CHIP RESISTOR	1	
R4804	D0GB102JA057	CHIP RESISTOR	1	
R4805	D0GB471JA057	CHIP RESISTOR	1	
R4806	D0GB471JA057	CHIP RESISTOR	1	
R4903	D0YBR0000020	CHIP RESISTOR	1	
R4904	D0GB223JA057	CHIP RESISTOR	1	
R4908	D0GB471JA057	CHIP RESISTOR	1	
R4909	D0GB471JA057	CHIP RESISTOR	1	
R4910	D0GB471JA057	CHIP RESISTOR	1	
R4911	D0GB471JA057	CHIP RESISTOR	1	
R4912	D1BB75R0A010	CHIP RESISTOR	1	
R4913	D1BB75R0A010	CHIP RESISTOR	1	
R4916	D1BB75R0A010	CHIP RESISTOR	1	
R4917	D1BB75R0A010	CHIP RESISTOR	1	
R4918	D1BB75R0A010	CHIP RESISTOR	1	
R4919	D1BB75R0A010	CHIP RESISTOR	1	
R4922	D0GB471JA057	CHIP RESISTOR	1	
R4923	D0GB471JA057	CHIP RESISTOR	1	
R4925	D0GB472JA057	CHIP RESISTOR	1	
R4926	D0GB472JA057	CHIP RESISTOR	1	
R56001	ERJ2GEJ472X	RESISTOR	1	
R56002	ERJ2GEJ473X	RESISTOR	1	
R56003	ERJ2GEJ225X	RESISTOR	1	
R56004	ERJ2GEJ104X	RESISTOR	1	
R56101	ERJ2GEJ220X	RESISTOR	1	
R56102	ERJ2GEJ330X	RESISTOR	1	
R56103	ERJ2GEJ330X	RESISTOR	1	
R56104	ERJ2GEJ330X	RESISTOR	1	
R56105	ERJ2GEJ330X	RESISTOR	1	
R56106	ERJ2GEJ820X	RESISTOR	1	
R56107	ERJ2GEJ330X	RESISTOR	1	
R56108	ERJ2GEJ330X	RESISTOR	1	
R56109	ERJ2GEJ121X	RESISTOR	1	
R56110	ERJ2GEJ330X	RESISTOR	1	
R56111	ERJ2GEJ330X	RESISTOR	1	
R56112	ERJ2GEJ330X	RESISTOR	1	
R56114	ERJ2GEJ330X	RESISTOR	1	
R56115	ERJ2GEJ820X	RESISTOR	1	
R56116	ERJ2GEJ101X	RESISTOR	1	
R56117	ERJ2GEJ151X	RESISTOR	1	
R56118	ERJ2GEJ820X	RESISTOR	1	
R56119	ERJ2GEJ330X	RESISTOR	1	
R56120	ERJ2GEJ151X	RESISTOR	1	

Ref. No.	Part No.	Part Name & Description	PCS	Remarks
R56121	ERJ2GEJ151X	RESISTOR	1	
R56122	ERJ2GEJ151X	RESISTOR	1	
R56123	ERJ2GEJ511X	RESISTOR	1	
R56124	ERJ2GEJ103X	RESISTOR	1	
R56125	ERJ2GEJ202X	RESISTOR	1	
R56126	ERJ2GEJ202X	RESISTOR	1	
R56127	ERJ2GEJ103X	RESISTOR	1	
R56128	ERJ2GEJ202X	RESISTOR	1	
R56129	ERJ2GEJ202X	RESISTOR	1	
R56130	ERJ2GEJ273X	RESISTOR	1	
R56131	ERJ2GEJ221X	RESISTOR	1	
R56132	ERJ2GEJ224X	RESISTOR	1	
R56133	ERJ2GEJ104X	RESISTOR	1	
R56134	ERJ2GEJ470X	RESISTOR	1	
R56135	ERJ2GEJ470X	RESISTOR	1	
R56137	ERJ2GE0R00X	RESISTOR	1	
R56138	ERJ2GE0R00X	RESISTOR	1	
R56139	ERJ2GEJ820X	RESISTOR	1	
R56140	ERJ2GEJ8R2X	RESISTOR	1	
R56142	ERJ2GEJ330X	RESISTOR	1	
R56143	ERJ2GEJ330X	RESISTOR	1	
R56144	ERJ2GEJ8R2X	RESISTOR	1	
R56145	ERJ2GEJ8R2X	RESISTOR	1	
R56146	ERJ2GEJ8R2X	RESISTOR	1	
R56147	ERJ2GEJ8R2X	RESISTOR	1	
R56148	ERJ2GEJ8R2X	RESISTOR	1	
R56149	ERJ2GEJ8R2X	RESISTOR	1	
R56150	ERJ2GEJ8R2X	RESISTOR	1	
R56151	ERJ2GEJ820X	RESISTOR	1	
R56152	ERJ2GEJ820X	RESISTOR	1	
R56153	ERJ2GEJ820X	RESISTOR	1	
R56154	ERJ2GEJ820X	RESISTOR	1	
R56155	ERJ2GEJ820X	RESISTOR	1	
R56156	ERJ2GEJ820X	RESISTOR	1	
R56157	ERJ2GEJ820X	RESISTOR	1	
R56158	ERJ2GEJ152X	RESISTOR	1	
R56159	ERJ2GEJ332X	RESISTOR	1	
R56160	ERJ2GEJ223X	RESISTOR	1	
R56161	ERJ2GEJ470X	RESISTOR	1	
R6001	D0GB102JA057	CHIP RESISTOR	1	
R6002	D0GB102JA057	CHIP RESISTOR	1	
R6003	D0YBR0000020	CHIP RESISTOR	1	
R6004	D0YBR0000020	CHIP RESISTOR	1	
R6005	D0GB102JA057	CHIP RESISTOR	1	
R6006	D0GB273JA057	CHIP RESISTOR	1	
R6007	D0GB822JA057	CHIP RESISTOR	1	
R6008	D0GB222JA057	CHIP RESISTOR	1	
R6011	D0GB822JA057	CHIP RESISTOR	1	
R6012	D0GB681JA057	CHIP RESISTOR	1	
R6013	D0GB221JA057	CHIP RESISTOR	1	
R6014	D0GB103JA057	CHIP RESISTOR	1	
R6016	D0GB102JA057	CHIP RESISTOR	1	
R6017	D0GB222JA057	CHIP RESISTOR	1	
R6018	D0GB102JA057	CHIP RESISTOR	1	
R6019	D0GB681JA057	CHIP RESISTOR	1	
R6022	D0GB221JA057	CHIP RESISTOR	1	
R6023	D0GB221JA057	CHIP RESISTOR	1	
R6024	D0GB102JA057	CHIP RESISTOR	1	
R6025	D0GB221JA057	CHIP RESISTOR	1	
R6026	D0GB103JA057	CHIP RESISTOR	1	
R6027	D0GB103JA057	CHIP RESISTOR	1	
R6028	D0GB103JA057	CHIP RESISTOR	1	
R6029	D0GB472JA057	CHIP RESISTOR	1	
R6030	D0GB472JA057	CHIP RESISTOR	1	
R6031	D0GB223JA057	CHIP RESISTOR	1	
R6109	D0GB105JA057	CHIP RESISTOR	1	
R6115	D0GB471JA057	CHIP RESISTOR	1	
R6117	D0GB181JA057	CHIP RESISTOR	1	
R6120	D0GB102JA057	CHIP RESISTOR	1	
R6121	D0GB561JA057	CHIP RESISTOR	1	
R6122	D0GB561JA057	CHIP RESISTOR	1	
R6123	D0GB241JA057	CHIP RESISTOR	1	
R6131	D0YBR0000020	CHIP RESISTOR	1	

Ref. No.	Part No.	Part Name & Description	PCS	Remarks
R6201	D0GB103JA057	CHIP RESISTOR	1	
R6309	D0GB272JA057	CHIP RESISTOR	1	
R6401	D0GB221JA057	CHIP RESISTOR	1	
R6402	D0GB153JA057	CHIP RESISTOR	1	
R6403	D0GB103JA057	CHIP RESISTOR	1	
R6404	D0GB471JA057	CHIP RESISTOR	1	
R6405	D0GB223JA057	CHIP RESISTOR	1	
R6406	D0GB474JA057	CHIP RESISTOR	1	
R6407	D0GB153JA057	CHIP RESISTOR	1	
R6408	D0GB104JA057	CHIP RESISTOR	1	
R6409	D0GB104JA057	CHIP RESISTOR	1	
R6410	D0GB224JA057	CHIP RESISTOR	1	
R6411	D0GB225JA057	CHIP RESISTOR	1	
R6412	D0GB273JA057	CHIP RESISTOR	1	
R6413	D0GB473JA057	CHIP RESISTOR	1	
R6414	D0GB472JA057	CHIP RESISTOR	1	
R66801	D0GB123JA057	CHIP RESISTOR	1	
R66802	D0GB123JA057	CHIP RESISTOR	1	
R66804	D0GB123JA057	CHIP RESISTOR	1	
R66805	D0GB123JA057	CHIP RESISTOR	1	
R66806	D0GB123JA057	CHIP RESISTOR	1	
R66807	D0GB223JA057	CHIP RESISTOR	1	
R66808	D0GB223JA057	CHIP RESISTOR	1	
R66809	D0GB750JA057	CHIP RESISTOR	1	
R66810	D0GB750JA057	CHIP RESISTOR	1	
R66811	D0GB750JA057	CHIP RESISTOR	1	
R66812	D0GB750JA057	CHIP RESISTOR	1	
R66813	D0GB750JA057	CHIP RESISTOR	1	
R66814	D0GB750JA057	CHIP RESISTOR	1	
R66815	D0GB101JA057	CHIP RESISTOR	1	
R7302	D0YBR0000020	CHIP RESISTOR	1	
R7304	D0YBR0000020	CHIP RESISTOR	1	
R7305	D0GB101JA057	CHIP RESISTOR	1	
R7306	D0GB101JA057	CHIP RESISTOR	1	
R7308	D0GB221JA057	CHIP RESISTOR	1	
R7310	D0YBR0000020	CHIP RESISTOR	1	
R7312	D0YBR0000020	CHIP RESISTOR	1	
R7316	D0GB103JA057	CHIP RESISTOR	1	
R7328	D0GB221JA057	CHIP RESISTOR	1	
R7329	D0GB221JA057	CHIP RESISTOR	1	
R7401	D0GB103JA057	CHIP RESISTOR	1	
R7501	D0GB681JA057	CHIP RESISTOR	1	
R7502	D0GB391JA057	CHIP RESISTOR	1	
R7503	D0GB391JA057	CHIP RESISTOR	1	
R7504	D0GB271JA057	CHIP RESISTOR	1	
R7507	D0GB182JA057	CHIP RESISTOR	1	
R7508	D0GB182JA057	CHIP RESISTOR	1	
R7509	D0GB182JA057	CHIP RESISTOR	1	
R7510	D0GB562JA057	CHIP RESISTOR	1	
R7515	D0GB221JA057	CHIP RESISTOR	1	
R7517	D0YBR0000020	CHIP RESISTOR	1	
R7518	D0YBR0000020	CHIP RESISTOR	1	
R7519	D0GB101JA057	CHIP RESISTOR	1	
R7520	D0GB101JA057	CHIP RESISTOR	1	
R7521	D0GB101JA057	CHIP RESISTOR	1	
R7522	D0GB473JA057	CHIP RESISTOR	1	
R7523	D0YBR0000020	CHIP RESISTOR	1	
R7524	D0GB103JA057	CHIP RESISTOR	1	
R7525	D0GB273JA057	CHIP RESISTOR	1	
R7801	D0GB332JA057	CHIP RESISTOR	1	
R7802	D0GB183JA057	CHIP RESISTOR	1	
R7803	D0GB332JA057	CHIP RESISTOR	1	
R7804	D0GB183JA057	CHIP RESISTOR	1	
R7808	D0GB101JA057	CHIP RESISTOR	1	
R7818	ERDS2TJ471T	CARBON RESISTOR	1	
R7819	ERDS2TJ471T	CARBON RESISTOR	1	
R7844	ERDS2TJ331T	CARBON RESISTOR	1	
R7845	D0GB103JA057	CHIP RESISTOR	1	
R7849	D0YBR0000020	CHIP RESISTOR	1	
R7854	D0YBR0000020	CHIP RESISTOR	1	
R7859	D0YBR0000020	CHIP RESISTOR	1	
R7861	D0YBR0000020	CHIP RESISTOR	1	
R7863	D0YBR0000020	CHIP RESISTOR	1	

Ref. No.	Part No.	Part Name & Description	PCS	Remarks
R7901	D0GB562JA057	CHIP RESISTOR	1	
R7902	D0GB470JA057	CHIP RESISTOR	1	
R7904	ERDS2TJ271T	CARBON RESISTOR	1	
R7905	D0GB473JA057	CHIP RESISTOR	1	
R7906	D0GB473JA057	CHIP RESISTOR	1	
R9008	D0GB181JA057	CHIP RESISTOR	1	
R9009	D0GB103JA057	CHIP RESISTOR	1	
R9010	D0GB152JA057	CHIP RESISTOR	1	
R9011	D0GB152JA057	CHIP RESISTOR	1	
R9012	D0GB100JA057	CHIP RESISTOR	1	
R9013	D0GB330JA057	CHIP RESISTOR	1	
R9014	D0GB330JA057	CHIP RESISTOR	1	
R9015	DOYBR0000020	CHIP RESISTOR	1	
R9016	DOYBR0000020	CHIP RESISTOR	1	
R9017	D1BB10020004	CHIP RESISTOR	1	
R9028	DOYBR0000020	CHIP RESISTOR	1	
R9029	D0GB103JA057	CHIP RESISTOR	1	
R9030	D0GB474JA057	CHIP RESISTOR	1	
R9031	D0GB103JA057	CHIP RESISTOR	1	
R9032	D0GB103JA057	CHIP RESISTOR	1	
R9033	D0GB103JA057	CHIP RESISTOR	1	
R9037	DOYBR0000020	CHIP RESISTOR	1	
R9038	DOYBR0000020	CHIP RESISTOR	1	
R9102	D0GB103JA057	CHIP RESISTOR	1	
R9143	D0GB331JA057	CHIP RESISTOR	1	
R9144	D0GB473JA057	CHIP RESISTOR	1	
R9145	D0GB223JA057	CHIP RESISTOR	1	
R9146	D0GB102JA057	CHIP RESISTOR	1	
R9200	D0GB101JA057	CHIP RESISTOR	1	
R9201	D0GB104JA057	CHIP RESISTOR	1	
R9202	D0GB104JA057	CHIP RESISTOR	1	
R9203	DOYBR0000020	CHIP RESISTOR	1	
R9204	D0GB332JA057	CHIP RESISTOR	1	
R9205	D0GB104JA057	CHIP RESISTOR	1	
R9206	D0GB105JA057	CHIP RESISTOR	1	
R9207	D0GB101JA057	CHIP RESISTOR	1	
R9208	D0GB101JA057	CHIP RESISTOR	1	
R9209	D0GB101JA057	CHIP RESISTOR	1	
R9210	D0GB181JA057	CHIP RESISTOR	1	
R9211	D0GB101JA057	CHIP RESISTOR	1	
R9212	D0GB103JA057	CHIP RESISTOR	1	
R9213	D0GB750JA057	CHIP RESISTOR	1	
R9214	D0GB103JA057	CHIP RESISTOR	1	
R9215	D0GB103JA057	CHIP RESISTOR	1	
R9216	D0GB103JA057	CHIP RESISTOR	1	
R9218	D0GB472JA057	CHIP RESISTOR	1	
R9220	D0GB103JA057	CHIP RESISTOR	1	
R9221	D0GB750JA057	CHIP RESISTOR	1	
R9223	D0GB103JA057	CHIP RESISTOR	1	
R9224	D0GB103JA057	CHIP RESISTOR	1	
R9226	D0GB393JA057	CHIP RESISTOR	1	
R9227	D1HG5608A002	RESISTOR ARRAY	1	
R9228	D1HG5608A002	RESISTOR ARRAY	1	
R9229	D1HG5608A002	RESISTOR ARRAY	1	
R9230	D1HG5608A002	RESISTOR ARRAY	1	
R9231	D1HG5608A002	RESISTOR ARRAY	1	
R9232	D1HG5608A002	RESISTOR ARRAY	1	
R9233	D1HG5608A002	RESISTOR ARRAY	1	
R9234	D1HG5608A002	RESISTOR ARRAY	1	
R9235	D1HG5608A002	RESISTOR ARRAY	1	
R9236	D0GB103JA057	CHIP RESISTOR	1	
R9237	D0GB820JA057	CHIP RESISTOR	1	
R9239	D0GB820JA057	CHIP RESISTOR	1	
R9240	D0GB820JA057	CHIP RESISTOR	1	
R9241	D0GB560JA057	CHIP RESISTOR	1	
R9242	D0GB560JA057	CHIP RESISTOR	1	
R9243	D0GB560JA057	CHIP RESISTOR	1	
R9244	D0GB560JA057	CHIP RESISTOR	1	
R9245	D0GB560JA057	CHIP RESISTOR	1	
R9246	D0GB560JA057	CHIP RESISTOR	1	
R9247	JOJDC0000026	BEAD CORE	1	
R9249	D0GB103JA057	CHIP RESISTOR	1	
R9250	D0GB103JA057	CHIP RESISTOR	1	

Ref. No.	Part No.	Part Name & Description	PCS	Remarks
R9254	D0GB103JA057	CHIP RESISTOR	1	
R9271	D0GB103JA057	CHIP RESISTOR	1	
R9272	D0GB103JA057	CHIP RESISTOR	1	
R9301	D0GB330JA057	CHIP RESISTOR	1	
R9301	DOYBR0000020	CHIP RESISTOR	1	
R9302	D0GB103JA057	CHIP RESISTOR	1	
R9302	DOYBR0000020	CHIP RESISTOR	1	
R9303	D0GB103JA057	CHIP RESISTOR	1	
R9305	D0GB103JA057	CHIP RESISTOR	1	
R9306	D0GB472JA057	CHIP RESISTOR	1	
R9306	DOHB752ZA002	METAL FILM RESISTOR	1	
R9307	D0GB103JA057	CHIP RESISTOR	1	
R9307	DOHB752ZA002	METAL FILM RESISTOR	1	
R9308	D0GB103JA057	CHIP RESISTOR	1	
R9308	DOHB123ZA002	METAL FILM RESISTOR	1	
R9309	DOHB123ZA002	METAL FILM RESISTOR	1	
R9310	D0GB103JA057	CHIP RESISTOR	1	
R9310	D0GB473JA057	CHIP RESISTOR	1	
R9311	D0GB103JA057	CHIP RESISTOR	1	
R9311	D0GB473JA057	CHIP RESISTOR	1	
R9312	D0GB103JA057	CHIP RESISTOR	1	
R9312	D0GB471JA057	CHIP RESISTOR	1	
R9313	D0GB103JA057	CHIP RESISTOR	1	
R9313	DOYBR0000020	CHIP RESISTOR	1	
R9314	D0GB103JA057	CHIP RESISTOR	1	
R9314	DOYBR0000020	CHIP RESISTOR	1	
R9315	D0GB103JA057	CHIP RESISTOR	1	
R9315	D0GB471JA057	CHIP RESISTOR	1	
R9316	D0GB820JA057	CHIP RESISTOR	1	
R9316	D0GB221JA057	CHIP RESISTOR	1	
R9317	D0GB103JA057	CHIP RESISTOR	1	
R9317	D0GB221JA057	CHIP RESISTOR	1	
R9318	D0GB103JA057	CHIP RESISTOR	1	
R9319	D0GB103JA057	CHIP RESISTOR	1	
R9320	DOYBR0000020	CHIP RESISTOR	1	
R9322	D0GB102JA057	CHIP RESISTOR	1	
R9323	D0GB102JA057	CHIP RESISTOR	1	
R9331	D1BB10020004	CHIP RESISTOR	1	
R9332	D1BB20010002	CHIP RESISTOR	1	
R9333	D1BB2201A010	CHIP RESISTOR	1	
R9334	D1BB20020003	CHIP RESISTOR	1	
R9501	D1BB10020004	CHIP RESISTOR	1	
R9502	DOYBR0000020	CHIP RESISTOR	1	
R9503	D0GB103JA057	CHIP RESISTOR	1	
R9504	DOYBR0000020	CHIP RESISTOR	1	
R9505	D1BB2000A010	CHIP RESISTOR	1	
R9506	D1BB33000002	CHIP RESISTOR	1	
R9507	D1BB33000002	CHIP RESISTOR	1	
R9508	D1BB33000002	CHIP RESISTOR	1	
R9509	D1BB33000002	CHIP RESISTOR	1	
R9700	JOJCC0000103	BEAD CORE	1	
R9701	D0GB103JA057	CHIP RESISTOR	1	
R9702	D0GB103JA057	CHIP RESISTOR	1	
R9703	JOJCC0000103	BEAD CORE	1	
R9704	D0GB102JA057	CHIP RESISTOR	1	
R9705	D1BB10020004	CHIP RESISTOR	1	
R9706	D1BB4701A010	CHIP RESISTOR	1	
R9707	JOJCC0000103	BEAD CORE	1	
R9708	D0GB102JA057	CHIP RESISTOR	1	
R9709	D0GB472JA057	CHIP RESISTOR	1	
R9710	ERJ6GEY0R00Z	CHIP RESISTOR	1	
R9711	D0GB474JA057	CHIP RESISTOR	1	
R9712	D0GB153JA057	CHIP RESISTOR	1	
R9713	JOJCC0000103	BEAD CORE	1	
R9714	JOJCC0000103	BEAD CORE	1	
R9715	D0GB561JA057	CHIP RESISTOR	1	
R9716	D0GB181JA057	CHIP RESISTOR	1	
R9717	D0GB104JA057	CHIP RESISTOR	1	
R9720	D0GB101JA057	CHIP RESISTOR	1	
R9721	D0GB101JA057	CHIP RESISTOR	1	
R9722	D0GB101JA057	CHIP RESISTOR	1	
R9724	D0GB101JA057	CHIP RESISTOR	1	
R9725	D0GB103JA057	CHIP RESISTOR	1	

Ref. No.	Part No.	Part Name & Description	PCS	Remarks
R9726	D0GB101JA057	CHIP RESISTOR	1	
R9730	D0GB101JA057	CHIP RESISTOR	1	
R9731	D0GB103JA057	CHIP RESISTOR	1	
R9736	D0GB473JA057	CHIP RESISTOR	1	
R9738	D0GB223JA057	CHIP RESISTOR	1	
R9739	D0GB104JA057	CHIP RESISTOR	1	
R9742	D0GB101JA057	CHIP RESISTOR	1	
R9744	D0GB101JA057	CHIP RESISTOR	1	
R9745	D0GB101JA057	CHIP RESISTOR	1	
R9747	D0GB101JA057	CHIP RESISTOR	1	
R9748	D0GB101JA057	CHIP RESISTOR	1	
R9749	D0GB101JA057	CHIP RESISTOR	1	
R9750	D0GB101JA057	CHIP RESISTOR	1	
R9751	D0GB102JA057	CHIP RESISTOR	1	
R9752	D0GB101JA057	CHIP RESISTOR	1	
R9753	D1BB3902A010	CHIP RESISTOR	1	
R9754	D1BB4302A010	CHIP RESISTOR	1	
R9755	D0GB101JA057	CHIP RESISTOR	1	
R9756	D0GB822JA057	CHIP RESISTOR	1	
R9757	D0GB822JA057	CHIP RESISTOR	1	
R9758	D0GB822JA057	CHIP RESISTOR	1	
R9759	D0GB472JA057	CHIP RESISTOR	1	
R9760	D0GB472JA057	CHIP RESISTOR	1	
R9761	D0GB101JA057	CHIP RESISTOR	1	
R9763	D0GB101JA057	CHIP RESISTOR	1	
R9764	D0GB101JA057	CHIP RESISTOR	1	
R9765	D0GB332JA057	CHIP RESISTOR	1	
R9766	D0GB101JA057	CHIP RESISTOR	1	
R9767	D0GB104JA057	CHIP RESISTOR	1	
R9768	D0GB681JA057	CHIP RESISTOR	1	
R9769	D0GB101JA057	CHIP RESISTOR	1	
R9770	D0GB221JA057	CHIP RESISTOR	1	
R9771	D0GB221JA057	CHIP RESISTOR	1	
R9772	D0GB101JA057	CHIP RESISTOR	1	
R9773	D0GB202JA057	CHIP RESISTOR	1	
R9774	D0GB202JA057	CHIP RESISTOR	1	
R9775	D0GB103JA057	CHIP RESISTOR	1	
R9776	D0GB101JA057	CHIP RESISTOR	1	
R9777	D0GB101JA057	CHIP RESISTOR	1	
R9779	D0GB392JA057	CHIP RESISTOR	1	
R9780	D0GB102JA057	CHIP RESISTOR	1	
R9781	D0GB104JA057	CHIP RESISTOR	1	
R9782	D0GB101JA057	CHIP RESISTOR	1	
R9783	D0GB104JA057	CHIP RESISTOR	1	
R9784	D0GB101JA057	CHIP RESISTOR	1	
R9785	D0GB101JA057	CHIP RESISTOR	1	
R9786	D0GB101JA057	CHIP RESISTOR	1	
R9788	D0GB153JA057	CHIP RESISTOR	1	
R9789	D0GB101JA057	CHIP RESISTOR	1	
R9790	D0GB101JA057	CHIP RESISTOR	1	
R9793	D0GB101JA057	CHIP RESISTOR	1	
R9794	D0GB473JA057	CHIP RESISTOR	1	
R9795	D0GB221JA057	CHIP RESISTOR	1	
R9796	D0GB472JA057	CHIP RESISTOR	1	
R9798	D0GB472JA057	CHIP RESISTOR	1	
R9800	D0GB101JA057	CHIP RESISTOR	1	
R9801	D0GB101JA057	CHIP RESISTOR	1	
R9801	D0GB101JA057	CHIP RESISTOR	1	
R9802	D0GB101JA057	CHIP RESISTOR	1	
R9803	D0GB101JA057	CHIP RESISTOR	1	
R9803	D0GB223JA057	CHIP RESISTOR	1	
R9804	D0GB101JA057	CHIP RESISTOR	1	
R9804	D0GB220JA057	CHIP RESISTOR	1	
R9805	D0GB101JA057	CHIP RESISTOR	1	
R9805	ECJ1VC1H100D	CHIP CAPACITOR	1	
R9806	D0GB101JA057	CHIP RESISTOR	1	
R9806	ECJ1VC1H100D	CHIP CAPACITOR	1	
R9807	ECJ1VC1H100D	CHIP CAPACITOR	1	
R9808	ECJ1VC1H100D	CHIP CAPACITOR	1	
R9809	ERJ3GEYJ911V	CHIP RESISTOR	1	
R9810	D0GB473JA057	CHIP RESISTOR	1	
R9811	D0GB473JA057	CHIP RESISTOR	1	
R9814	D0GB101JA057	CHIP RESISTOR	1	

Ref. No.	Part No.	Part Name & Description	PCS	Remarks
R9815	D0GB101JA057	CHIP RESISTOR	1	
R9816	D0GB101JA057	CHIP RESISTOR	1	
R9824	D0GB101JA057	CHIP RESISTOR	1	
R9825	D0GB101JA057	CHIP RESISTOR	1	
R9827	D0YBR0000020	CHIP RESISTOR	1	
R9829	D0GB472JA057	CHIP RESISTOR	1	
R9831	D0GB472JA057	CHIP RESISTOR	1	
R9832	D0YBR0000020	CHIP RESISTOR	1	
R9833	D0YBR0000020	CHIP RESISTOR	1	
R9834	D0YBR0000020	CHIP RESISTOR	1	
R9835	D0YBR0000020	CHIP RESISTOR	1	
R9836	D0YBR0000020	CHIP RESISTOR	1	
R9837	D0YBR0000020	CHIP RESISTOR	1	
R9838	D0YBR0000020	CHIP RESISTOR	1	
R9839	D0YBR0000020	CHIP RESISTOR	1	
R9840	D0YBR0000020	CHIP RESISTOR	1	
R9841	D0YBR0000020	CHIP RESISTOR	1	
R9903	D0GB240JA057	CHIP RESISTOR	1	
R9904	D0GB240JA057	CHIP RESISTOR	1	
R9905	D0GB240JA057	CHIP RESISTOR	1	
R9906	D0GB240JA057	CHIP RESISTOR	1	
R9907	ERJ3RBD103V	CHIP RESISTOR	1	
R9908	ERJ3RBD103V	CHIP RESISTOR	1	
R9909	ERJ3RBD103V	CHIP RESISTOR	1	
R9910	ERJ3RBD103V	CHIP RESISTOR	1	
R9911	ERJ3RED204V	RESISTOR	1	
R9912	ERJ3RED204V	RESISTOR	1	
R9915	ERJ3RED204V	RESISTOR	1	
R9916	ERJ3RED204V	RESISTOR	1	
R9917	D0GB103JA057	CHIP RESISTOR	1	
R9918	D0GB103JA057	CHIP RESISTOR	1	
R9919	D0GB471JA057	CHIP RESISTOR	1	
R9920	D0GB471JA057	CHIP RESISTOR	1	
RX6101	D1H83304A024	RESISTOR ARRAY	1	
RX6102	D1H83304A024	RESISTOR ARRAY	1	
S1531	K0C111A00006	SAFETY TAB SWITCH	1	
S1532	K0Z200000598	MODE SWITCH	1	
S7501	EVQ11G07K	TOUCH SWITCH	1	
S7502	EVQ11G07K	TOUCH SWITCH	1	
S7503	EVQ11G07K	TOUCH SWITCH	1	
S7504	EVQ11G07K	TOUCH SWITCH	1	
S7505	EVQ11G07K	TOUCH SWITCH	1	
S7506	EVQ11G07K	TOUCH SWITCH	1	
S7507	EVQ11G07K	TOUCH SWITCH	1	
S7801	EVQ11G07K	TOUCH SWITCH	1	
S7802	EVQ11G07K	TOUCH SWITCH	1	
S7803	EVQ11G07K	TOUCH SWITCH	1	
S7804	EVQ11G07K	TOUCH SWITCH	1	
S7805	EVQ11G07K	TOUCH SWITCH	1	
S7806	EVQ11G07K	TOUCH SWITCH	1	
SW1	K0L1BA000123	SWITCH	1	
SW4	K0L1BA000078	SWITCH	1	
T1101	ETS29AZ2M6AC	TRANSFORMER	1	⚠
T4001	G2A472C00003	BIAS TRANSFORMER	1	
T7901	G4D1A0000117	SWITCH. TRANSFORMER	1	
TU7801	ENGF7507GF	TUNER	1	
VA6101	D4ED13900002	SURGE ABSORBER	1	
VA6102	D4ED13900002	SURGE ABSORBER	1	
VA6103	EZJZ0V800AA	SURGE ABSORBER	1	
VA6104	D4ED13900002	SURGE ABSORBER	1	
VA6105	EZJZ0V800AA	SURGE ABSORBER	1	
VA6106	D4ED13900002	SURGE ABSORBER	1	
VA6107	EZJZ0V800AA	SURGE ABSORBER	1	
VA6108	D4ED13900002	SURGE ABSORBER	1	
VA6109	EZJZ0V800AA	SURGE ABSORBER	1	
VA6110	D4ED13900002	SURGE ABSORBER	1	
VA6111	EZJZ0V800AA	SURGE ABSORBER	1	
VA6112	D4ED13900002	SURGE ABSORBER	1	
VA6113	D4ED13900002	SURGE ABSORBER	1	
W10	ERJ6GEY0R00Z	CHIP RESISTOR	1	
W106	D0YBR0000020	CHIP RESISTOR	1	
W11	ERJ6GEY0R00Z	CHIP RESISTOR	1	
W110	D0YBR0000020	CHIP RESISTOR	1	

Ref. No.	Part No.	Part Name & Description	PCS	Remarks
W128	DOYBR0000020	CHIP RESISTOR	1	
W129	DOYBR0000020	CHIP RESISTOR	1	
W130	DOYBR0000020	CHIP RESISTOR	1	
W132	DOYBR0000020	CHIP RESISTOR	1	
W134	DOYBR0000020	CHIP RESISTOR	1	
W149	DOYBR0000020	CHIP RESISTOR	1	
W150	ERJ6GEY0R00Z	CHIP RESISTOR	1	
W151	DOYBR0000020	CHIP RESISTOR	1	
W152	DOYBR0000020	CHIP RESISTOR	1	
W157	DOYBR0000020	CHIP RESISTOR	1	
W18	ERJ6GEY0R00Z	CHIP RESISTOR	1	
W19	ERJ6GEY0R00Z	CHIP RESISTOR	1	
W195	DOYBR0000020	CHIP RESISTOR	1	
W196	ERJ6GEY0R00Z	CHIP RESISTOR	1	
W20	ERJ6GEY0R00Z	CHIP RESISTOR	1	
W21	ERJ6GEY0R00Z	CHIP RESISTOR	1	
W216	DOYBR0000020	CHIP RESISTOR	1	
W22	ERJ6GEY0R00Z	CHIP RESISTOR	1	
W226	ERJ6GEY0R00Z	CHIP RESISTOR	1	
W227	ERJ6GEY0R00Z	CHIP RESISTOR	1	
W23	ERJ6GEY0R00Z	CHIP RESISTOR	1	
W234	DOYBR0000020	CHIP RESISTOR	1	
W235	DOYBR0000020	CHIP RESISTOR	1	
W24	ERJ6GEY0R00Z	CHIP RESISTOR	1	
W25	ERJ6GEY0R00Z	CHIP RESISTOR	1	
W259	DOYBR0000020	CHIP RESISTOR	1	
W26	ERJ6GEY0R00Z	CHIP RESISTOR	1	
W268	DOYBR0000020	CHIP RESISTOR	1	
W269	DOYBR0000020	CHIP RESISTOR	1	
W270	DOYBR0000020	CHIP RESISTOR	1	
W271	DOYBR0000020	CHIP RESISTOR	1	
W272	DOYBR0000020	CHIP RESISTOR	1	
W273	DOYBR0000020	CHIP RESISTOR	1	
W274	DOYBR0000020	CHIP RESISTOR	1	
W30	ERJ6GEY0R00Z	CHIP RESISTOR	1	
W31	ERJ6GEY0R00Z	CHIP RESISTOR	1	
W32	ERJ6GEY0R00Z	CHIP RESISTOR	1	
W33	ERJ6GEY0R00Z	CHIP RESISTOR	1	
W4	ERJ6GEY0R00Z	CHIP RESISTOR	1	
W400	ERJ6GEY0R00Z	CHIP RESISTOR	1	
W401	ERJ6GEY0R00Z	CHIP RESISTOR	1	
W402	ERJ6GEY0R00Z	CHIP RESISTOR	1	
W404	DOYBR0000020	CHIP RESISTOR	1	
W405	ERJ6GEY0R00Z	CHIP RESISTOR	1	
W407	DOYBR0000020	CHIP RESISTOR	1	
W408	DOYBR0000020	CHIP RESISTOR	1	
W409	DOYBR0000020	CHIP RESISTOR	1	
W410	DOYBR0000020	CHIP RESISTOR	1	
W411	DOYBR0000020	CHIP RESISTOR	1	
W412	ERJ6GEY0R00Z	CHIP RESISTOR	1	
W414	ERJ6GEY0R00Z	CHIP RESISTOR	1	
W421	DOYBR0000020	CHIP RESISTOR	1	
W422	DOYBR0000020	CHIP RESISTOR	1	
W423	DOYBR0000020	CHIP RESISTOR	1	
W435	ERJ6GEY0R00Z	CHIP RESISTOR	1	
W449	ERJ6GEY0R00Z	CHIP RESISTOR	1	
W467	ERJ6GEY0R00Z	CHIP RESISTOR	1	
W472	ERJ6GEY0R00Z	CHIP RESISTOR	1	
W474	DOYBR0000020	CHIP RESISTOR	1	
W478	ERJ6GEY0R00Z	CHIP RESISTOR	1	
W4807	DOYBR0000020	CHIP RESISTOR	1	
W4808	DOYBR0000020	CHIP RESISTOR	1	
W4809	DOYBR0000020	CHIP RESISTOR	1	
W4810	DOYBR0000020	CHIP RESISTOR	1	
W4811	DOYBR0000020	CHIP RESISTOR	1	
W4814	DOYBR0000020	CHIP RESISTOR	1	
W4815	DOYBR0000020	CHIP RESISTOR	1	
W4816	DOYBR0000020	CHIP RESISTOR	1	
W4817	DOYBR0000020	CHIP RESISTOR	1	
W4819	DOYBR0000020	CHIP RESISTOR	1	
W4820	DOYBR0000020	CHIP RESISTOR	1	
W4821	DOYBR0000020	CHIP RESISTOR	1	
W485	ERJ6GEY0R00Z	CHIP RESISTOR	1	

Ref. No.	Part No.	Part Name & Description	PCS	Remarks
W49	ERJ6GEY0R00Z	CHIP RESISTOR	1	
W512	DOYBR0000020	CHIP RESISTOR	1	
W514	DOYBR0000020	CHIP RESISTOR	1	
W515	DOYBR0000020	CHIP RESISTOR	1	
W516	DOYBR0000020	CHIP RESISTOR	1	
W517	DOYBR0000020	CHIP RESISTOR	1	
W519	DOYBR0000020	CHIP RESISTOR	1	
W52	DOYBR0000020	CHIP RESISTOR	1	
W520	DOYBR0000020	CHIP RESISTOR	1	
W521	ERJ6GEY0R00Z	CHIP RESISTOR	1	
W529	DOYBR0000020	CHIP RESISTOR	1	
W53	ERJ6GEY0R00Z	CHIP RESISTOR	1	
W530	DOYBR0000020	CHIP RESISTOR	1	
W531	DOYBR0000020	CHIP RESISTOR	1	
W532	DOYBR0000020	CHIP RESISTOR	1	
W6	ERJ6GEY0R00Z	CHIP RESISTOR	1	
W65	DOYBR0000020	CHIP RESISTOR	1	
W66	DOYBR0000020	CHIP RESISTOR	1	
W67	DOYBR0000020	CHIP RESISTOR	1	
W7	ERJ6GEY0R00Z	CHIP RESISTOR	1	
W702	DOYBR0000020	CHIP RESISTOR	1	
W703	ERJ6GEY0R00Z	CHIP RESISTOR	1	
W710	DOYBR0000020	CHIP RESISTOR	1	
W711	DOYBR0000020	CHIP RESISTOR	1	
W713	DOYBR0000020	CHIP RESISTOR	1	
W716	DOYBR0000020	CHIP RESISTOR	1	
W720	DOYBR0000020	CHIP RESISTOR	1	
W723	DOYBR0000020	CHIP RESISTOR	1	
W724	DOYBR0000020	CHIP RESISTOR	1	
W725	DOYBR0000020	CHIP RESISTOR	1	
W726	DOYBR0000020	CHIP RESISTOR	1	
W727	ERJ6GEY0R00Z	CHIP RESISTOR	1	
W729	DOYBR0000020	CHIP RESISTOR	1	
W730	DOYBR0000020	CHIP RESISTOR	1	
W731	ERJ6GEY0R00Z	CHIP RESISTOR	1	
W732	DOYBR0000020	CHIP RESISTOR	1	
W734	DOYBR0000020	CHIP RESISTOR	1	
W735	ERJ6GEY0R00Z	CHIP RESISTOR	1	
W736	ERJ6GEY0R00Z	CHIP RESISTOR	1	
W737	DOYBR0000020	CHIP RESISTOR	1	
W738	ERJ6GEY0R00Z	CHIP RESISTOR	1	
W739	DOYBR0000020	CHIP RESISTOR	1	
W740	DOYBR0000020	CHIP RESISTOR	1	
W741	ERJ6GEY0R00Z	CHIP RESISTOR	1	
W744	DOYBR0000020	CHIP RESISTOR	1	
W745	ERJ6GEY0R00Z	CHIP RESISTOR	1	
W746	ERJ6GEY0R00Z	CHIP RESISTOR	1	
W747	DOYBR0000020	CHIP RESISTOR	1	
W748	DOYBR0000020	CHIP RESISTOR	1	
W7500	ERJ6GEY0R00Z	CHIP RESISTOR	1	
W7504	ERJ6GEY0R00Z	CHIP RESISTOR	1	
W76	ERJ6GEY0R00Z	CHIP RESISTOR	1	
W766	DOYBR0000020	CHIP RESISTOR	1	
W767	DOYBR0000020	CHIP RESISTOR	1	
W768	DOYBR0000020	CHIP RESISTOR	1	
W8	ERJ6GEY0R00Z	CHIP RESISTOR	1	
W9	ERJ6GEY0R00Z	CHIP RESISTOR	1	
X3001	H0D443400040	CRYSTAL OSCILLATOR	1	
X3002	H0D357400067	CRYSTAL OSCILLATOR	1	
X6001	H0D120500009	CRYSTAL OSCILLATOR	1	
X7301	H0D245500016	CRYSTAL OSCILLATOR	1	
X9002	H0J270500100	CRYSTAL OSCILLATOR	1	
X9201	H0J270500098	CRYSTAL OSCILLATOR	1	
X9701	H0D100500018	OSCILLATOR	1	
X9702	H0A327200108	CRYSTAL OSCILLATOR	1	
ZA1201	UBXPH512-02	HEATSINK	1	
ZA1202	XTN3+8FFJ	SCREW	1	
ZJ6001	K9ZZ00001279	EARTH FITTING	1	
ZJ9103	K9ZZ00001279	EARTH FITTING	1	
ZJ9107	K9ZZ00001279	EARTH FITTING	1	

17.5. SERVICE FIXTURE AND TOOLS

Ref. No.	Part No.	Part Name & Description	PCS	Remarks
	RFKZ03D01K	Lead Free Solder (0.3 mm / 100 g Reel)	1	(SPC)
	RFKZ06D01K	Lead Free Solder (0.6 mm / 100 g Reel)	1	(SPC)
	RFKZ010D01	Lead Free Solder (1.0 mm / 100 g Reel)	1	(SPC)
	RFKZ0316	Solder Remover (Lead Free 10 W temperature Solder / 180 g)	1	(SPC)
	RFKZ0328	Flux	1	(SPC)
	RFKZ0329	Bottle of Flux	1	(SPC)
	RFKZ0240	Extension Cable (Main P.C.B. - Power & Digital I/F P.C.B. / 19 pin)	1	(SPC)
	RFKZ0327	Extension Cable (Main P.C.B. - Power & Digital I/F P.C.B. / 15 pin)	2	(SPC)
	RFKZ0260	Extension Cable (Power Digital I/F P.C.B. - Digital P.C.B. / 88 pin)	1	(SPC)
	RFKZ0366	Extension Cable (HDMI P.C.B. - Digital P.C.B. / 40 pin)	1	(SPC)
	RFKZ0239	Extension Cable (to Front Jack P.C.B. and FL P.C.B. / 10 pin)	4	(SPC)
	JZS0484	Eject Pin	1	(SPC)
	for VHS			
	VFJ8125H3F	PAL VHS Alignment Tape	1	(SPC)
	VFK0329	Post Adjustment Screwdriver	1	(SPC)
	VFK0330	Fine Adjustment Gear Driver	1	(SPC)