

HCD-VX88

SERVICE MANUAL

E Model

Ver 1.2 2001.11



HCD-VX88 is the tuner, tape player, VIDEO CD/CD player and amplifier section in MHC-VX88.

This stereo system is equipped with the Dolby B-type noise reduction system*.

* Manufactured under license from Dolby Laboratories Licensing Corporation.

DOLBY and the double-D symbol  are trademarks of Dolby Laboratories Licensing Corporation.

CD Section	Model Name Using Similar Mechanism	HCD-VX77
	CD Mechanism Type	CDM58-K2BD37A
	Base Unit Name	BU-K2BD37A
	Optical Pick-up Name	KSM-213DAP/Z-NP
TAPE Section	Model Name Using Similar Mechanism	HCD-VX77
	Tape Transport Mechanism Type	TCM-230AWR11

SPECIFICATIONS

Amplifier section

The following measured at AC 120, 220, 240V
50/60 Hz

DIN power output (rated) 160 + 160 watts
(6 ohms at 1 kHz, DIN)

Continuous RMS power output (reference)
200 + 200 watts
(6 ohms at 1 kHz,
10% THD)

Inputs
MD/VIDEO (AUDIO) IN: voltage 450 mV/250 mV,
(phono jacks) impedance 47 kilohms
MIC: sensitivity 1 mV,
(phone jack) impedance 10 kilohms

Outputs
VIDEO OUT:
(Phono jack)
max. output level 1 Vp-p,
unbalanced, Sync
negative, load impedance
75 ohms

S-VIDEO OUT:
(4 pin/mini-DIN jack)
Y: 1 Vp-p, unbalanced
Sync negative
C: 0.286 Vp-p
load impedance 75 ohms

PHONES:
(stereo mini jack)
FRONT SPEAKER:
accepts impedance of 6 to
16 ohms

SATELLITE SPEAKER:
accepts impedance of 6 to
16 ohms

VIDEO CD/CD player section

System

Laser

Laser output

Frequency response

Wavelength

Signal-to-noise ratio

Dynamic range

Video color system format

CD OPTICAL DIGITAL OUT

(Square optical connector jack, rear panel)

Wavelength

Output Level

2 Hz – 20 kHz (± 0.5 dB)
780 – 790 nm
More than 90 dB
More than 90 dB
NTSC, PAL

40 – 13,000 Hz (± 3 dB),
using Sony TYPE I
cassette
40 – 14,000 Hz (± 3 dB),
using Sony TYPE II
cassette

Tape player section

Recording system

Frequency response
(DOLBY NR OFF)

Compact disc and digital
audio system

Semiconductor laser
($\lambda=780$ nm)

Emission duration:
continuous

Max. 44.6 μ W*

*This output is the value
measured at a distance of
200 mm from the
objective lens surface on
the Optical Pick-up Block
with 7 mm aperture.

2 Hz – 20 kHz (± 0.5 dB)
780 – 790 nm

More than 90 dB

More than 90 dB

NTSC, PAL

40 – 13,000 Hz (± 3 dB),

using Sony TYPE I

cassette

40 – 14,000 Hz (± 3 dB),

using Sony TYPE II

cassette

Tuner section

FM tuner section

Tuning range 87.5 – 108.0 MHz

Antenna FM lead antenna

Antenna terminals 75 ohm unbalanced

Intermediate frequency 10.7 MHz

AM tuner section

Tuning range Middle Eastern models: 531 – 1,602 kHz
(with the interval set at 9 kHz)

Other models: 531 – 1,602 kHz
(with the interval set at 9 kHz)

530 – 1,710 kHz
(with the interval set at 10 kHz)

Antenna AM loop antenna

Antenna terminals External antenna terminal

Intermediate frequency 450 kHz

— Continued on next page —

COMPACT DISC DECK RECEIVER

General

Power requirements	220 V AC, 50/60 Hz
Thailand models:	120 V, 220 V or 230 - 240 V AC, 50/60 Hz
Other models:	Adjustable with voltage selector
Power consumption	250 watts
Dimensions (w/h/d)	Approx. 280 x 360 x 425 mm (11 x 14 ³ / ₁₆ x 16 ¹¹ / ₁₆ in.)
Mass:	Approx. 11 kg (24 lb. 5 oz)

Design and specifications are subject to change without notice.

TABLE OF CONTENTS

1. SERVICE NOTES	4
2. GENERAL	5
3. DISASSEMBLY	7
4. TEST MODE	12
5. MECHANICAL ADJUSTMENTS	17
6. ELECTRICAL ADJUSTMENTS	17
7. DIAGRAMS	
7-1. Circuit Boards Location	23
7-2. Block Diagrams	25
7-3. Printed Wiring Board – BD Section –	28
7-4. Schematic Diagram – BD Section –	29
7-5. Printed Wiring Board – VIDEO Section –	30
7-6. Schematic Diagram – VIDEO (1/3) Section –	31
7-7. Schematic Diagram – VIDEO (2/3) Section –	32
7-8. Schematic Diagram – VIDEO (3/3) Section –	33
7-9. Printed Wiring Board – MAIN Section –	34
7-10. Schematic Diagram – MAIN (1/3) Section –	35
7-11. Schematic Diagram – MAIN (2/3) Section –	36
7-12. Schematic Diagram – MAIN (3/3) Section –	37
7-13. Printed Wiring Board – POWER AMP Section –	38
7-14. Schematic Diagram – POWER AMP Section –	39
7-15. Printed Wiring Boards – PANEL Section –	40
7-16. Schematic Diagram – PANEL Section –	41
7-17. Printed Wiring Boards – LEAF SW Section –	42
7-18. Schematic Diagram – LEAF SW Section –	43
7-19. Printed Wiring Boards – DRIVER Section –	44
7-20. Schematic Diagram – DRIVER Section –	45
7-21. Printed Wiring Board – TRANS Section –	46
7-22. Schematic Diagram – TRANS Section –	47
7-23. IC Pin Function Description	48
7-24. IC Block Diagrams	57
8. EXPLODED VIEWS	62
9. ELECTRICAL PARTS LIST	68

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK \triangle OR DOTTED LINE WITH MARK \triangle ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

NOTES ON HANDLING THE OPTICAL PICK-UP BLOCK OR BASE UNIT


The laser diode in the optical pick-up block may suffer electrostatic break-down because of the potential difference generated by the charged electrostatic load, etc. on clothing and the human body. During repair, pay attention to electrostatic break-down and also use the procedure in the printed matter which is included in the repair parts.

The flexible board is easily damaged and should be handled with care.

NOTES ON LASER DIODE EMISSION CHECK

The laser beam on this model is concentrated so as to be focused on the disc reflective surface by the objective lens in the optical pick-up block. Therefore, when checking the laser diode emission, observe from more than 30 cm away from the objective lens.

Laser component in this product is capable of emitting radiation exceeding the limit for Class 1.

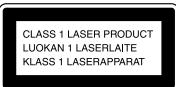

This appliance is classified as a CLASS 1 LASER product. The CLASS 1 LASER PRODUCT MARKING is located on the rear exterior.

CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

Notes on chip component replacement


- Never reuse a disconnected chip component.
- Notice that the minus side of a tantalum capacitor may be damaged by heat.

Flexible Circuit Board Repairing

- Keep the temperature of soldering iron around 270°C during repairing.
- Do not touch the soldering iron on the same conductor of the circuit board (within 3 times).
- Be careful not to apply force on the conductor when soldering or unsoldering.

MODEL IDENTIFICATION


— BACK PANEL —

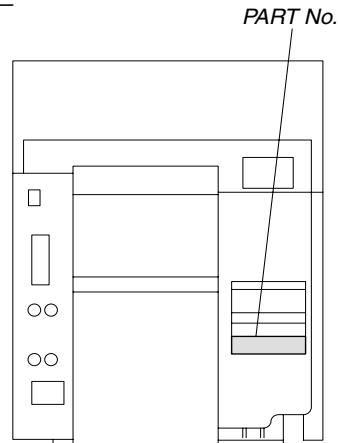

MODEL	PART No.
EXCEPT IA model	4-225-040-7□
IA model	4-227-061-2□


- Abbreviation
IA : Indonesian

SECTION 1 SERVICE NOTES

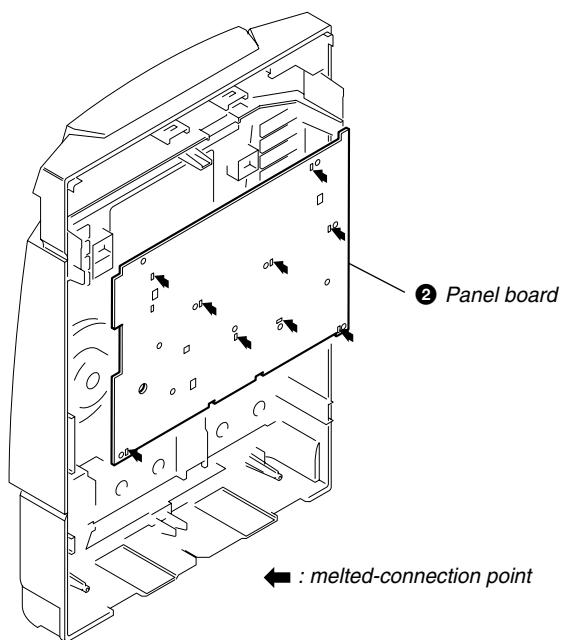

① Cut the nine melted-connection points with cutting pliers.

Note for installing the panel board

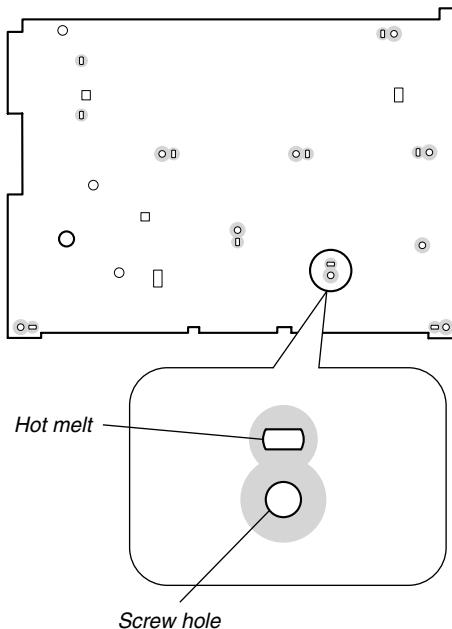

Attach the panel board with
six screws (+BVTP 2.6 × 8)
after the board is removed once.
Do not tighten the screws excessively.




SELF-DIAGNOSIS

This model has the self-diagnosis function for the VIDEO and AUDIO decoder sections.


Connecting to the LED between TP522 and TP523 on the VIDEO BOARD.

Immediately after the power on, the self-diagnosis function searches each operation of IC's around the CD mechanism control microcomputer (IC502). and TP5

The results can be checked by LED of the VIDEO board.

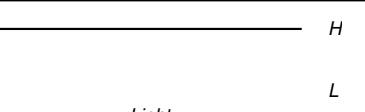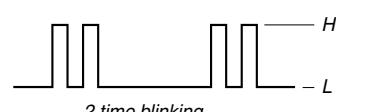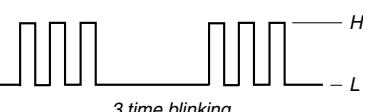Oscilloscope (Waveform)	Symptom
	H L No error
	2 time blinking MPEG decoder (IC505) error
	3 time blinking MPEG decoder (IC505) or DRAM (IC507) error


[VIDEO BOARD] (SIDE A)

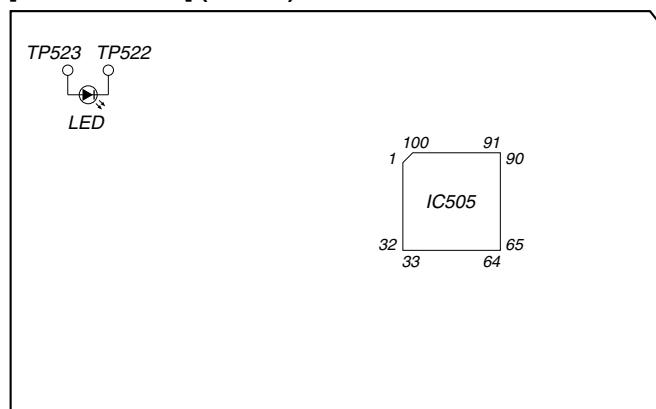

SECTION 2 GENERAL

LOCATION OF CONTROLS


- Front view

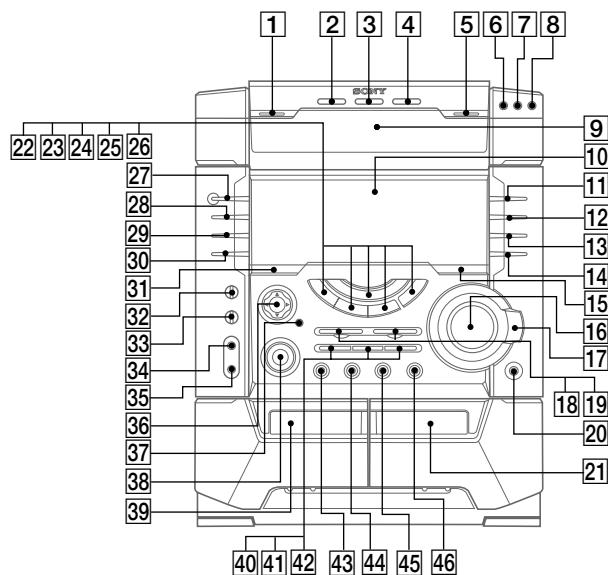

- | | |
|-------------|--------------------------------------|
| [1] | DISC SKIP button |
| [2] | DISC 1 button and indicator |
| [3] | DISC 2 button and indicator |
| [4] | DISC 3 button and indicator |
| [5] | ▲ OPEN/CLOSE button |
| [6] | PREV button |
| [7] | NEXT button |
| [8] | RETURN button |
| [9] | CD disc tray |
| [10] | Fluorescent indicator tube |
| [11] | EDIT, TUNER MEMORY button |
| [12] | PLAY MODE, STEREO/MONO button |
| [13] | REPEAT, DOLBY NR button |
| [14] | DIRECTION button |
| [15] | CINEMA SPACE button |
| [16] | VOLUME knob |
| [17] | Shuttle knob |
| [18] | ■ button |
| [19] | ◀▶ button |
| [20] | PHONES jack |
| [21] | Tape deck-B |
| [22] | TAPE A/B button |
| [23] | CD button |
| [24] | Function indicator |
| [25] | TUNER/BAND button |
| [26] | MD (VIDEO) button |
| [27] | ■ button and indicator |
| [28] | DISPLAY button |
| [29] | SPECTRUM button |
| [30] | EQ EDIT button |
| [31] | GROOVE button |
| [32] | ECHO LEVEL knob |
| [33] | MIC LEVEL knob |
| [34] | MIC2 jack |
| [35] | MIC1 jack |
| [36] | ◀, ▶, △, ▽ button and indicator |
| [37] | PICTURE EFFECT button |
| [38] | V-GROOVE button and indicator |
| [39] | Tape deck-A |
| [40] | - ■ button |
| [41] | ■ button |
| [42] | ▶■ + button |
| [43] | KARAOKE PON button |
| [44] | CD SYNC HI-DUB button |
| [45] | REC PAUSE/START button and indicator |
| [46] | ENTER button |

Step 3: Setting the time

You must set the time before using the timer functions.

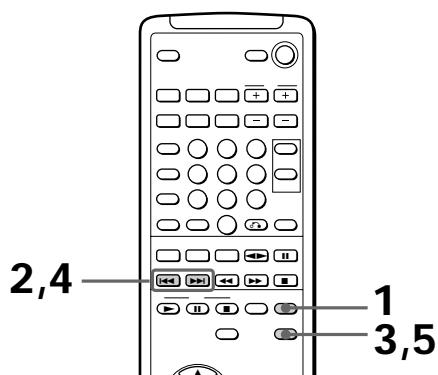

- 1** Press CLOCK/TIMER SET.
The hour indication flashes.



- 2** Press ▲ or ▼ repeatedly to set the hour.

continued

Step 3: Setting the time (continued)

- 3** Press ENTER.

The minute indication flashes.



- 4** Press ▲ or ▼ repeatedly to set the minute.

- 5** Press ENTER.

The clock starts working.

Tip

If you've made a mistake, start over from step 1.

To change the time

The previous explanation shows you how to set the time while the power is off. To change the time while the power is on, do the following:

- 1 Press CLOCK/TIMER SET.
- 2 Press ▲ or ▼ repeatedly to select SET CLOCK.
- 3 Press ENTER.
- 4 Perform steps 2 through 5 above.


Note

The clock settings are canceled when you disconnect the power cord or if a power failure occurs.


SECTION 3 DISASSEMBLY

Note : Follow the disassembly procedure in the numerical order given.


COVER (TOP)

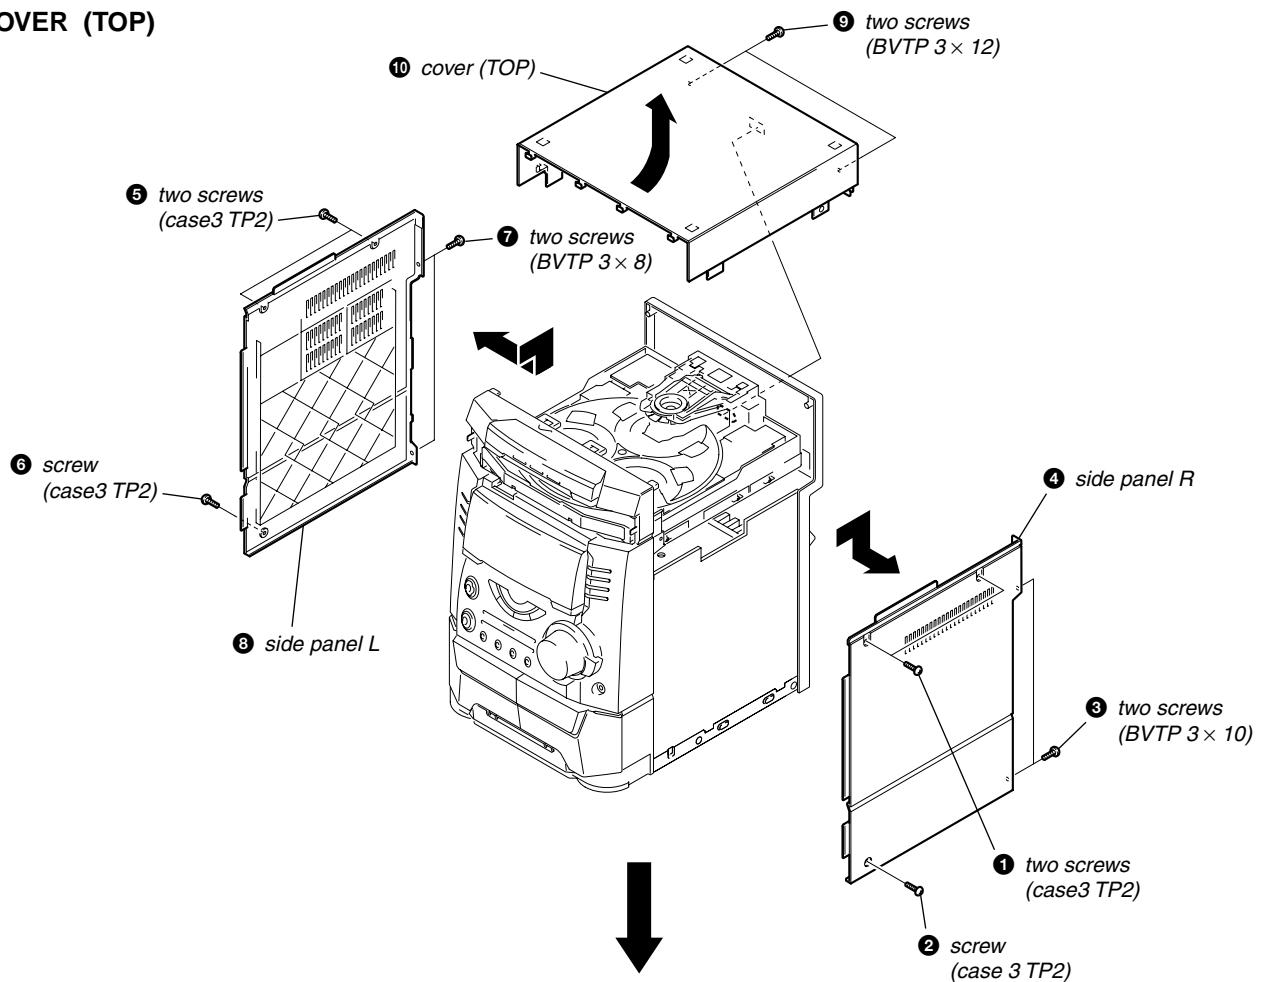


LOADING PANEL ASS'Y

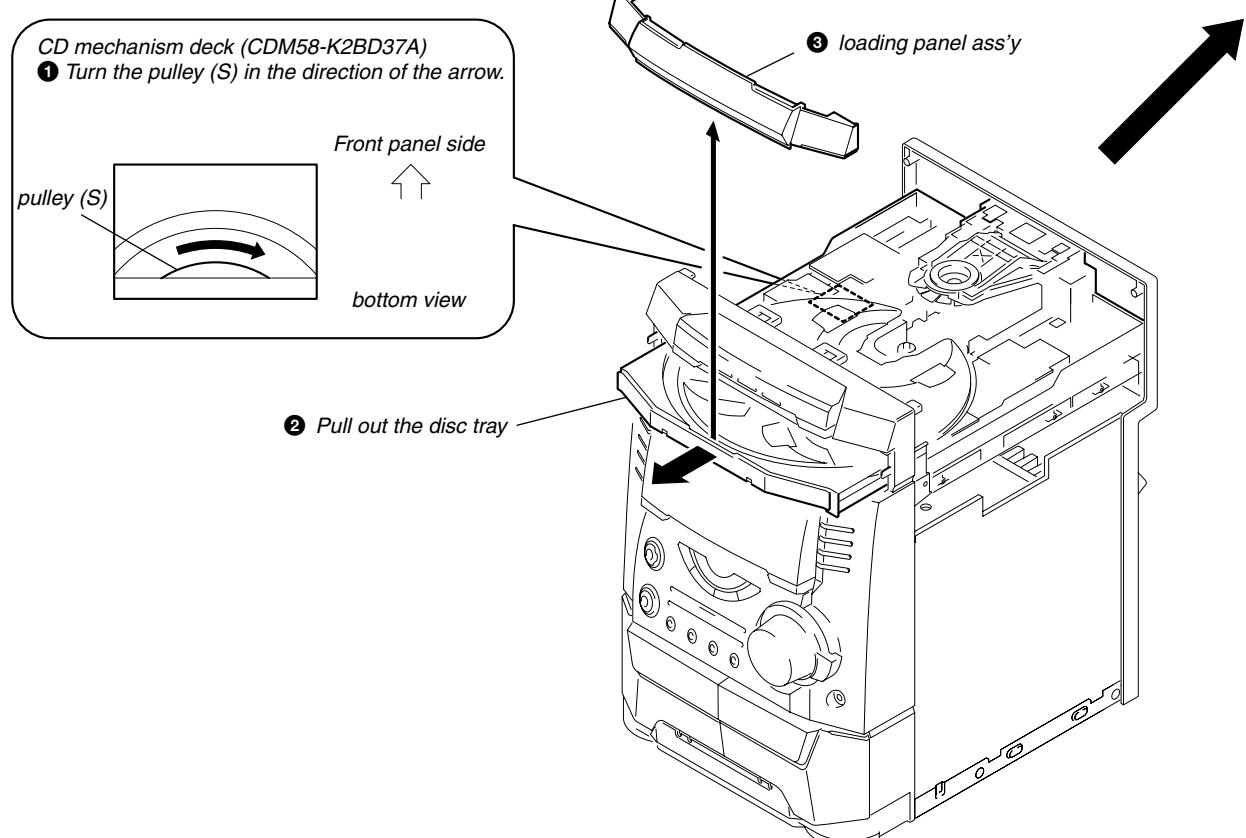


FRONT PANEL SECTION, CD MECHANISM DECK (CDM58-K2BD37A)

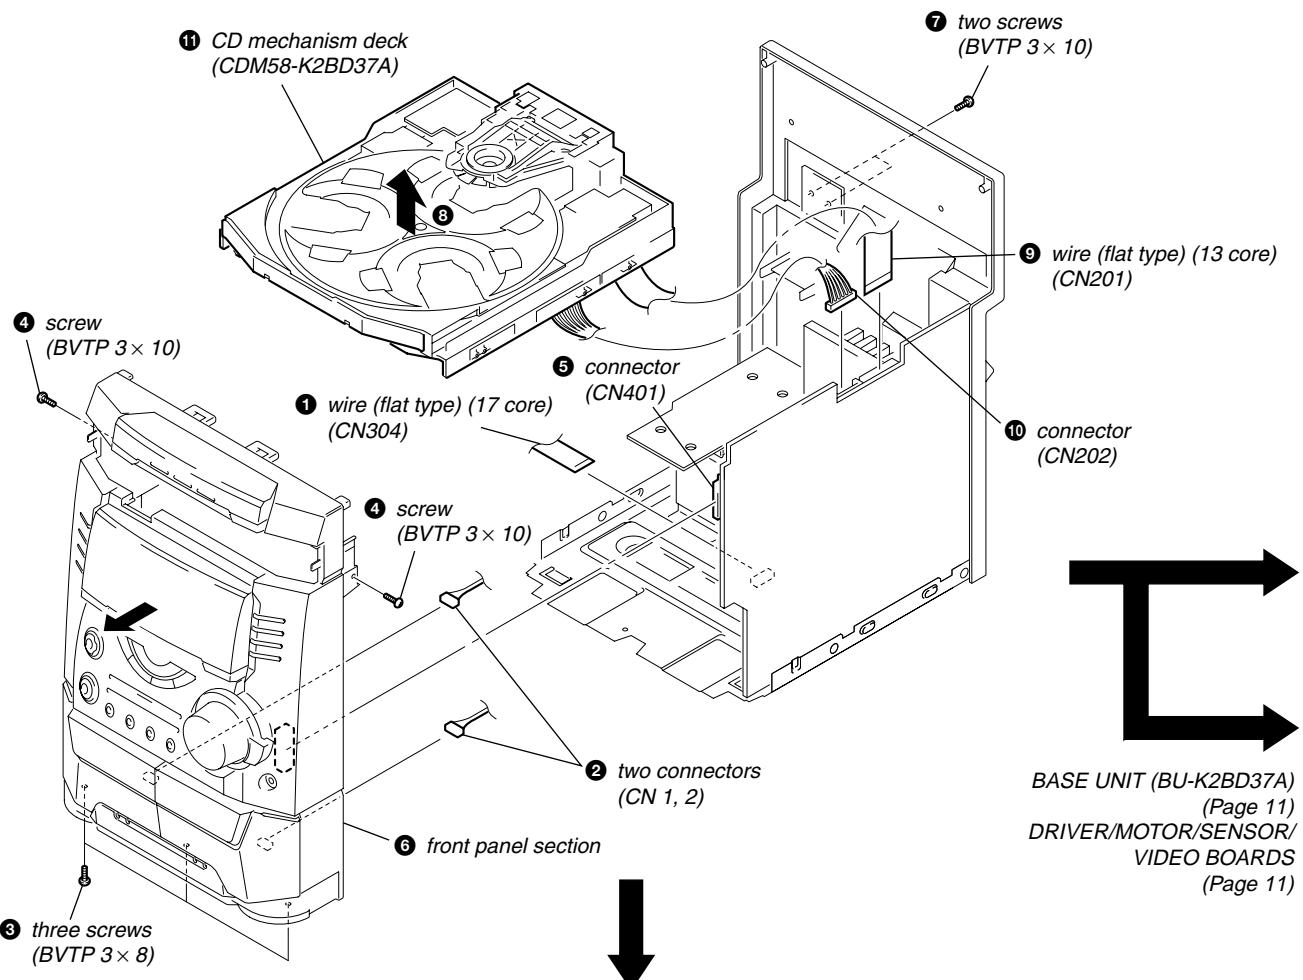


TAPE MECHANISM DECK (TCM-230AWR11)

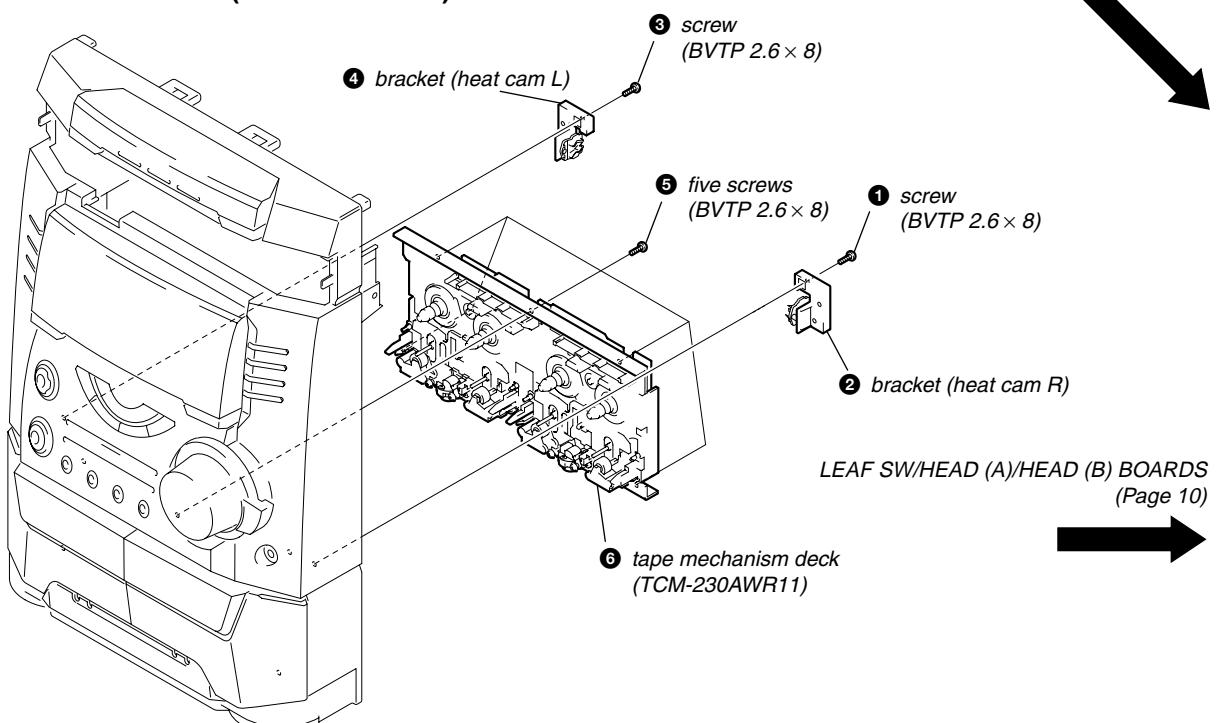


PANEL BOARD

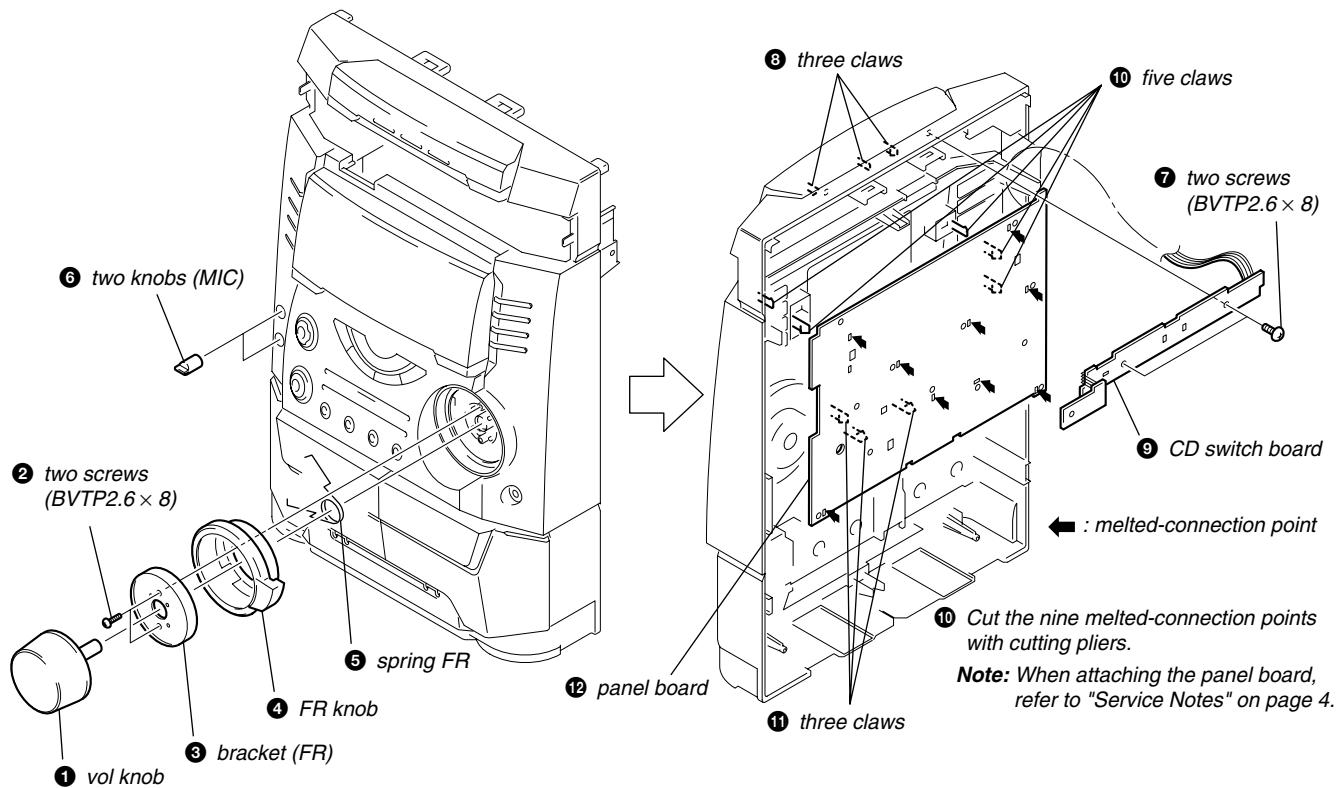


POWER TRANSFORMER (T971), TRANS BOARD

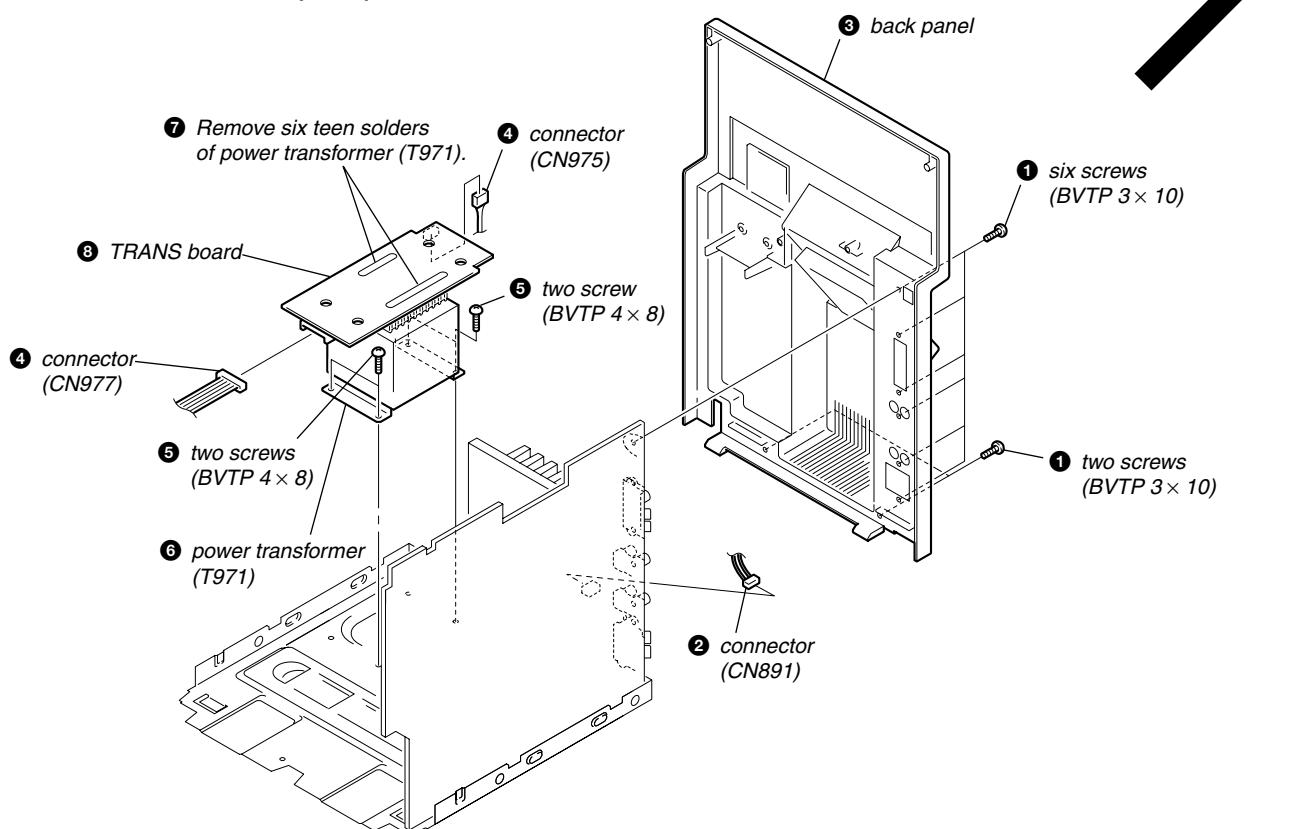


MAIN/POWER AMP BOARDS

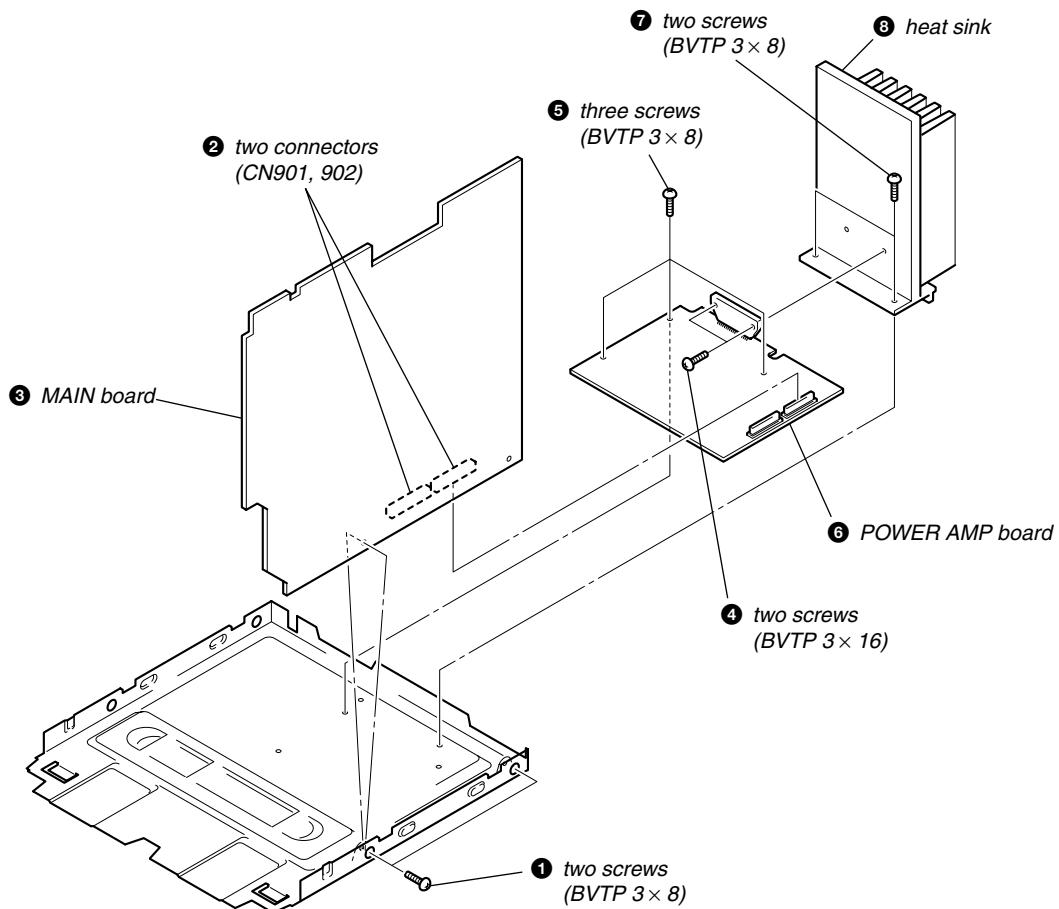


LEAF SW/HEAD (A)/HEAD (B) BOARDS

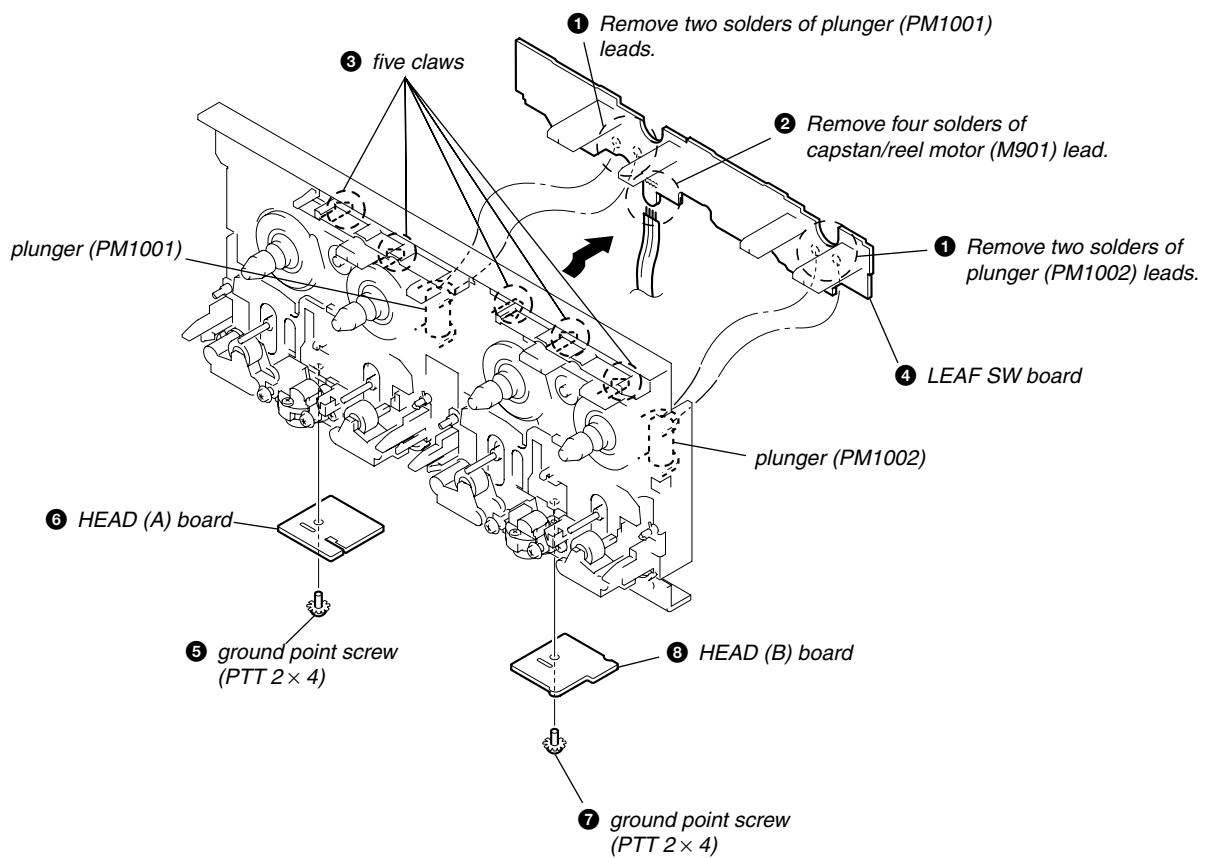

BASE UNIT (BU-K2BD37A)

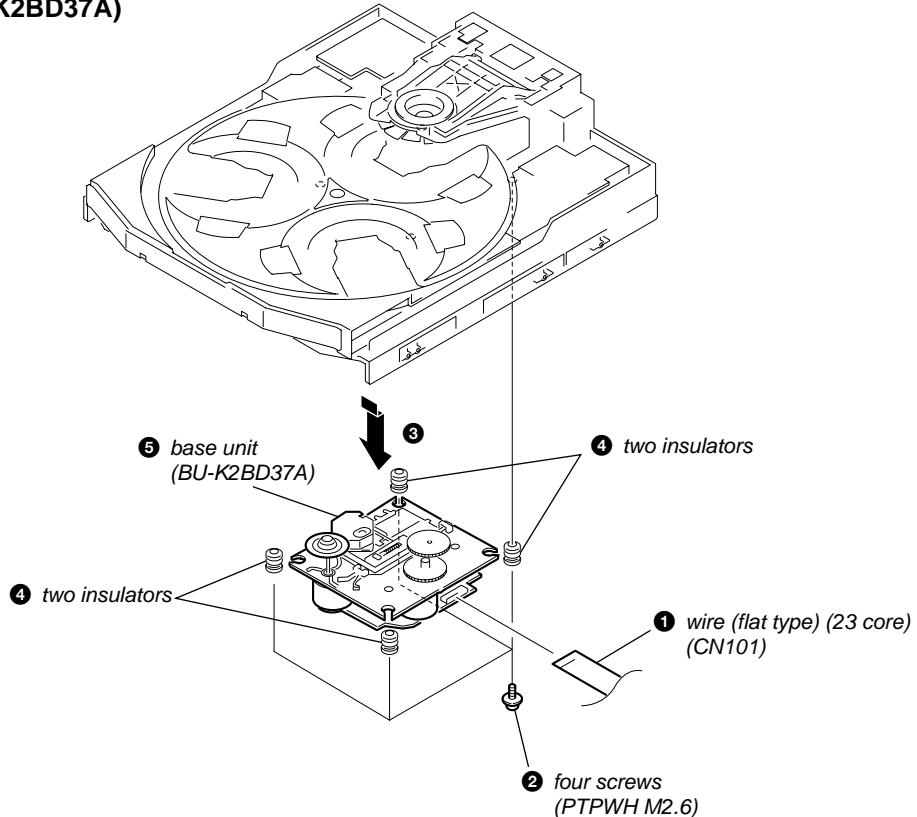

DRIVER/MOTOR/SENSOR/VIDEO BOARDS

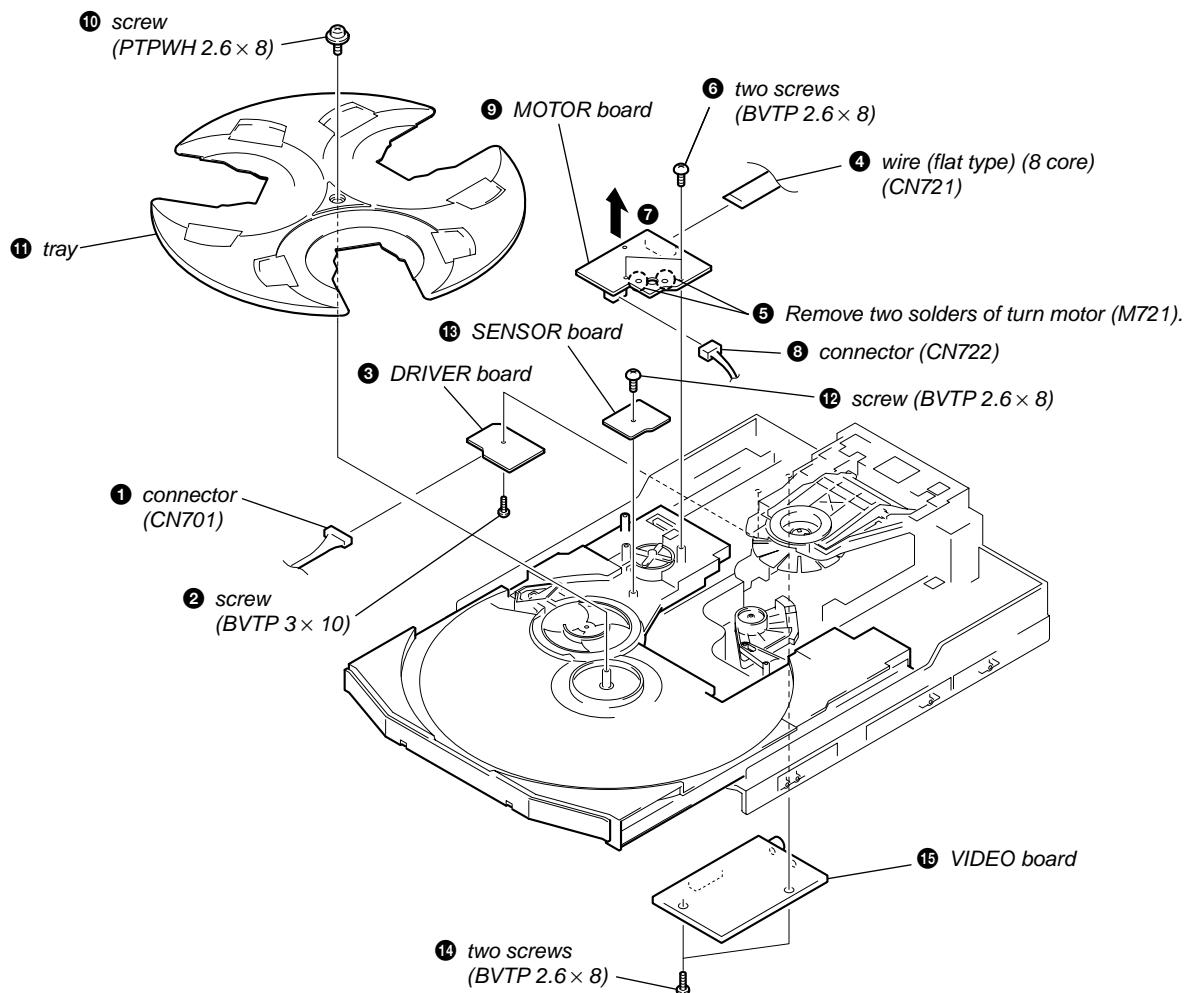

SECTION 4 TEST MODE

[MC Cold Reset]

- The cold reset clears all data including preset data stored in the RAM to initial conditions. Execute this mode when returning the set to the customer.

Procedure:

- Press three buttons [■], [ENTER], and [I/O] simultaneously.
- The fluorescent indicator tube displays "COLD RESET" and the set is reset.

[CD Ship Mode]

- This mode moves the pickup to the position durable to vibration. Use this mode when returning the set to the customer after repair.

Procedure:

- Press [I/O] button to turn the set ON.
- Press [CD] button and [I/O] button simultaneously.
- After the "STANDBY" display blinks six times, a message "LOCK" is displayed on the fluorescent indicator tube, and the CD ship mode is set.

[MC Hot Reset]

- This mode resets the set with the preset data kept stored in the memory. The hot reset mode functions same as if the power cord is plugged in and out.

Procedure:

- Press three buttons [■], [ENTER], and [DISC 1] simultaneously.
- The fluorescent indicator tube becomes blank instantaneously, and the set is reset.

[CD Service Mode]

- This mode can run the CD sled motor freely. Use this mode, for instance, when cleaning the pickup.

Procedure:

- Press [I/O] button to turn the set ON.
- Select the function "CD".
- Press three buttons [■], [ENTER], and [OPEN/CLOSE] simultaneously.
- The CD service mode is selected.
- With the CD in stop status, turn the shuttle knob clockwise to move the pickup to outside track, or turn the shuttle knob counter-clockwise to inside track.
- To exit from this mode, perform as follows:
 - Move the pickup to the most inside track.
 - Press three buttons in the same manner as step 2.

- Note:**
- Always move the pickup to most inside track when exiting from this mode. Otherwise, a disc will not be unloaded.
 - Do not run the sled motor excessively, otherwise the gear can be chipped.

[VACS ON/OFF Mode]

- This mode is used to switch ON and OFF the VACS (Variable Attenuation Control System).

Procedure:

Press the [ENTER] and [SPECTRUM] buttons simultaneously. The message "VACS OFF" or "VACS ON" appears.

[Change-over of MW Tuner Step between 9 kHz and 10 kHz]

- A step of MW channels can be changed over between 9 kHz and 10 kHz.

Procedure:

- Press [I/O] button to turn the set ON.
- Select the function "TUNER", and press [TUNER/BAND] button to select the BAND "AM".
- Press [I/O] button to turn the set OFF.
- Press [ENTER] and [I/O] buttons simultaneously, and the display of fluorescent indicator tube changes to "AM 9 k STEP" or "AM 10 k STEP", and thus the channel step is changed over.

[GC Test Mode]

- This mode is used to check the software version, FL tube, LED, keyboard and VACS.

Procedure:

- Press three buttons [■], [ENTER], and [DISC 2] simultaneously.
- LEDs and fluorescent indicator tube are all turned on.
- When you want to enter the software version display mode, press [DISC 1]. The model number and destination are displayed.
- Each time [DISC 1] is pressed, the display changes starting from MC version, GC version, VC version, CD version, CM version, ST version, TC version, TA version, TM version and BR version in this order, and returns to the model number and destination display.
- When [DISC 3] is pressed while the version numbers are being displayed except model number and destination, year, month and day of the software creation appear. When [DISC 3] is pressed again, the display returns to the software version display. When [DISC 1] is pressed while year, month and day of the software creation are being displayed, the year, month and day of creation of the software versions are displayed in the same order of version display.
- Press [DISC 2] button, and the key check mode is activated.
- In the key check mode, the fluorescent indicator tube displays "KEY0 VOL0". Each time a button is pressed, "KEY" value increases. However, once a button is pressed, it is no longer taken into account.
"VOL" value increases like 1, 2, 3 ... if rotating [VOLUME] knob in "+" direction, or it decreases like 0, 9, 8 ... if rotating in "-" direction.
- Also when [DISC 3] is pressed after lighting of all LEDs and FL tubes, value of VACS appears.
- To exit from this mode, press three buttons in the same manner as step 1, or disconnect the power cord.

[MC Test Mode]

- This mode is used to check operations of the respective sections of Amplifier, Tuner, CD and Tape.

Procedure:

1. Press the **[I/O]** button to turn on the set.
2. Press the three buttons of **[■]**, **[ENTER]** and **[DISC 3]** simultaneously.
3. A message “TEST MODE” appears on the FL display tube.
4. When **[△ (CURSOR UP)]** button is pressed, GEQ increases to its maximum and a message “GEQ ALL MA” appears.
5. When **[▽ (CURSOR DOWN)]** button is pressed, GEQ decreases to its minimum and a message “GEQ ALL M1” appears.
6. When **[◀ (CURSOR LEFT)]** or **[▶ (CURSOR RIGHT)]** button is pressed, GEQ is set to flat and a message “GEQ FLAT” appears.
7. When the VOLUME control knob is turned clockwise even slightly, the sound volume increases to its maximum and a message “VOLUME MAX” appears for two seconds, then the display returns to the original display.
8. When the VOLUME control knob is turned counter-clockwise even slightly, the sound volume decreases to its minimum and a message “VOLUME MIN” appears for two seconds, then the display returns to the original display.
9. In the test mode, the default-preset channel is called even when the TUNER is selected and an attempt is made to call the preset channel that has been stored in memory, by operating the Shuttle knob. (It means that the memory is cleared.)
10. When CD is selected and the **[EDIT]** button is pressed, the disc that is being chucked at this moment becomes the default setting. It means that the default disc only is accessed when any other discs are selected even though the display indication changes accordingly. At the same time, the **[DISC SKIP EX-CHANGE]** and **[OPEN/CLOSE]** cannot be accepted. (It means that the tray motor and the turntable motor are disabled of their operation.)
11. When a tape is inserted in Deck B and recording is started, the input source function selects VIDEO automatically.
12. When **[■]** button is pressed to stop recording, the Tape (Deck) B is selected and tape is rewound using the Shuttle knob, tape is rewound, tape is stops at around the record-starting position and playback of the recorded portion of the tape is started. If PAUSE is inserted even once during recording, tape is rewound to the position around the PAUSE position and is played back.
13. When the **[CD SYNC HI-DUB]** Button is press during playback of Deck B, either normal speed or high speed can be selected by this button.
14. Select the desired loop by pressing the **[PLAY MODE]** button. Insert a test tape AMS-110A or AMS-RO to Deck A.
15. Press the **[SPECTRUM]** button to enter the AMS test mode.
16. After a tape is rewound first, the FF AMS is checked, and the mechanism is shut off after detecting the AMS signal twice.
17. Then the REW AMS is checked and the mechanism is shut off after detecting the AMS signal twice.
18. When the check is complete, a message of either OK or NG appears.
19. When you want to exit this mode, press the **[I/O]** button twice. The cold reset is enforced at the same time.

[Aging Mode]

This mode can be used for operation check of CD section and tape deck section.

- If an error occurred:
The aging operation stops and display status.
- If no error occurs:
The aging operation continues repeatedly.

1. Operating method of Aging Mode

Turn on the main power and select "CD" of the function.

- 1) Set a disc in DISC1 tray. Select CONTINUE ALL DISCS (press the [PLAY MODE] button), and REPEAT OFF (press the [REPEAT] button).
- 2) Load the tapes recording use into the decks A and B respectively.
- 3) Press three buttons [] , [ENTER] , and [DISC SKIP/EX-CHANGE] simultaneously.
- 4) Aging operations of CD and tape are started at the same time.
- 5) To exit the aging mode, perform [MC Cold Reset].

3. Aging Mode in CD section

- 1) Display state Display

- No error occurs

AGING [* * * *]

Note:

* * * * : Number of aging operations

Error display

E ** □ # # \$ \$ % %
① ② ③ ④ ⑤

① **	The error No. 00 indicates the newest error. As the error No. increases, it means the older error. When you want to retrieve the error history, press the [PLAY MODE] button in the case of mechanism error. Or press the [REPEAT] button in the case of NO DISC error.
② □	M: Mechanism error
③ # #	Don't care 01: FOCUS ERROR 02: GFS ERROR 03: SETUP ERROR
④ \$ \$	High order digits only D: Stopped during closing due to problems other than mechanism. E: Stopped during opening due to problems other than mechanism. C: Stopped during chucking due to problems other than mechanism. F: Stopped during EX-opening due to problems other than mechanism.
⑤ % %	Emergency related errors (High order digits only) 1: Stopped during chuck-up 2: Stopped during chuck-down 3: Time out by EX-OPEN 5: Time out by EX-CLOSE Status at the time of NO DISC judgment (High order digits only) 1: STOP 2: SETUP 3: TOC READ 4: ACCESS 5: PLAY BACK 6: PAUSE 7: MANUAL SEARCH (PLAY) 8: MANUAL SEARCH (PAUSE)

- When the buttons [] , [ENTER] and [DISC 1] are pressed simultaneously, number of time of the mechanism error and the NO DISC error can be checked.

Display: EMC**EDC** **: Number of times of error (Maximum three times)
EMC: Mechanism error
EDC: NO DISC error

- When aging operation is complete, be sure to perform the MC Cold Reset to reset the error history.

2) Operation during aging mode

In the aging mode, the program is executed in the following sequence.

- (1) The disc tray opens and closes.
- (2) The mechanism accesses DISC 2 and makes an attempt to read TOC. However, since there are no discs, a message “CD2 NO DISC” appears.
- (3) The mechanism accesses DISC 3 and a message “CD3 NO DISC” appears.
- (4) The disc tray turns to select a disc1.
- (5) A disc is chucked.
- (6) TOC of disc is read.
- (7) The pickup accesses to the track 1, and playing 2 seconds.
- (8) The pickup accesses to the last track, and playing 2 seconds.
- (9) Every time when an aging operation of step 1 to step 8 is complete, the display “AGING[*][*][*][*]” value increases as the number of aging operations is counted up.
- (10) Returns to step 1.

3. Aging Mode in Tape Deck section

1) Display state

- No error occurs

Display action now

- Error occurred

Display action last time

NO.	Display action	Action contents	Final timing
1	TAPE A AG-1	Rewind the TAPE A, B	The top of tape
2	TAPE A AG-2	FWD play the TAPE A	2 minutes playing
3	TAPE A AG-3	F.F. the TAPE A	20 second FF or the end of tape
4	TAPE A AG-4	REV play the TAPE A	2 minutes playing
5	TAPE A AG-5	Rewind the TAPE A	The top of tape
6	TAPE B AG-2	FWD play the TAPE B	2 minutes playing
7	TAPE B AG-3	F.F. the TAPE B	20 second FF or the end of tape
8	TAPE B AG-4	REV play the TAPE B	2 minutes playing
9	TAPE B AG-5	Rewind the TAPE B	The top of tape

2) Operation during aging mode

In the aging mode, the program is executed in the following sequence.

- (1) Rewind is executed up to the top of tape A and B.
- (2) A tape on FWD side is played for 2 minutes.
- (3) FF is executed up to either made for 20 second or the end of tape.
- (4) A tape is reversed, and the tape on REV side is played for 2 minutes.
- (5) Rewind is executed up to the top of tape.
- (6) Returns to step 2, and repeat steps from 2 to 5.

[Function Change Mode]

* Select either VIDEO or MD of the external FUNCTION input.

Procedure:

1. Turn on the power.
2. Press the two buttons **ENTER** and **I/O** at the same time.
The main power is turned on and the other function of the previous function is selected and displayed. “MD” or “VIDEO”.


VIDEO CD COLOR-BARS MODE

On this mode, the data of the color-bars signal as a picture signal and the 1kHz sine wave signal as a sound signal are output by the CD mechanism control microcomputer (IC502) for video CD signal check. When measurement of the voltage and waveform on the VIDEO board, perform it in this mode.


For reference, the color-bars signal can be observed at J302 (VIDEO OUT) and the sound signal can be observed at J101 (VIDEO/MD (AUDIO) OUT) using an oscilloscope.

1. Connect the lead wire to both ends of the land of SL503 of the VIDEO board.
2. Turn the power on. Press **CD** button to select CD.
3. After 2 or 3 seconds later, connect the lead wire.
4. After measuring, remove the lead wire connected.

[VIDEO BOARD] (SIDE A)

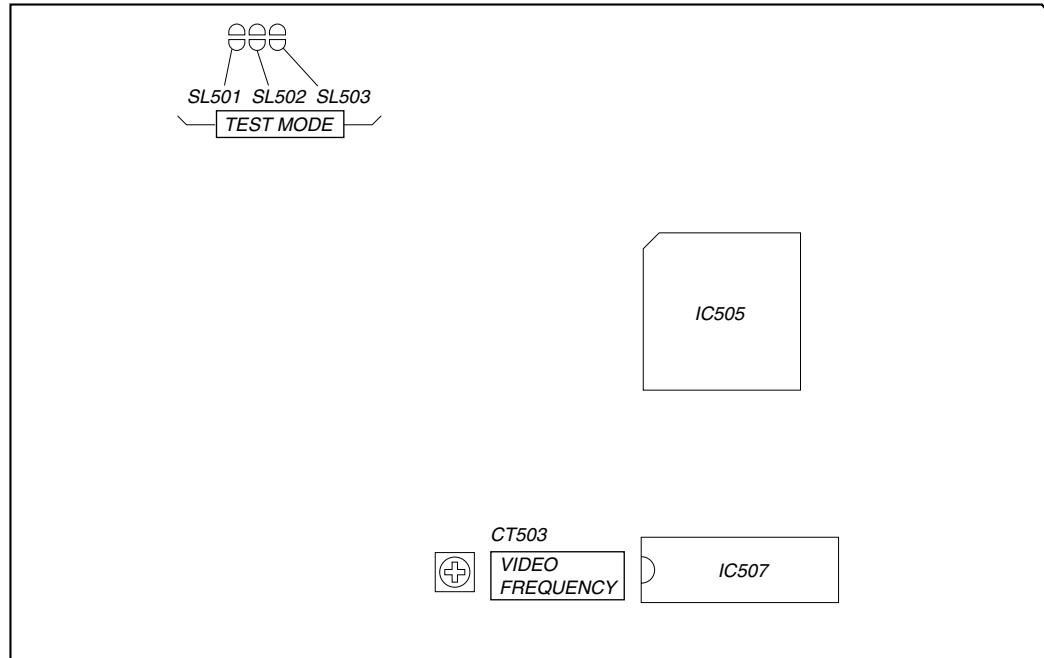

[VIDEO BOARD] (SIDE B)

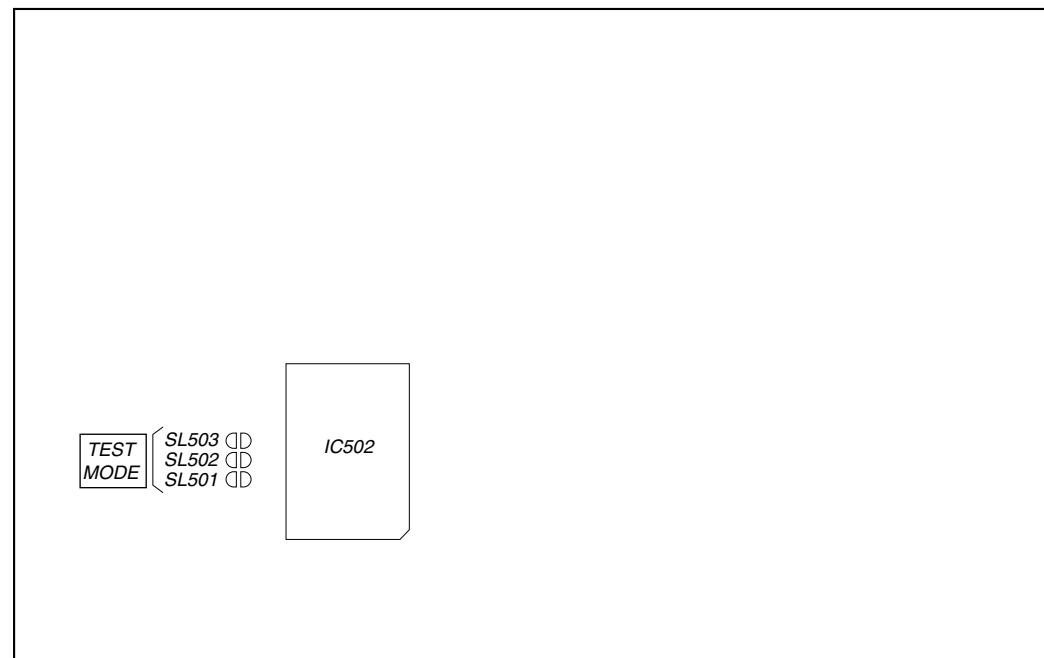

SECTION 5 MECHANICAL ADJUSTMENTS

Precaution

- Clean the following parts with a denatured alcohol-moistened swab:

record/playback heads	pinch rollers
erase head	rubber belts
capstan	idle
- Demagnetize the record/playback head with a head demagnetizer.
- Do not use a magnetized screwdriver for the adjustments.
- After the adjustments, apply suitable locking compound to the parts adjusted.
- The adjustments should be performed with the rated power supply voltage unless otherwise noted.

Torque Measurement

Mode	Torque meter	Meter reading
FWD	CQ-102C	3.06 N • m to 6.96 N • m 31 to 71 g • cm (0.43 – 0.98 oz • inch)
FWD back tension	CQ-102C	0.19 N • m to 0.58 N • m 2 to 6 g • cm (0.02 – 0.08 oz • inch)
REV	CQ-102RC	3.06 N • m to 6.96 N • m 31 to 71 g • cm (0.43 – 0.98 oz • inch)
REV back tension	CQ-102RC	0.19 N • m to 0.58 N • m 2 to 6 g • cm (0.02 – 0.08 oz • inch)
FF/REW	CQ-201B	6.96 N • m to 14.02 N • m 71 to 143 g • cm (0.98 – 1.99 oz • inch)
FWD tension	CQ-403A	9.80 N • m 100 g or more (3.53 oz or more)
REV tension	CQ-403R	9.80 N • m 100 g or more (3.53 oz or more)

SECTION 6 ELECTRICAL ADJUSTMENTS

DECK SECTION

0 dB=0.775 V

- Demagnetize the record/playback head with a head demagnetizer.
- Do not use a magnetized screwdriver for the adjustments.
- After the adjustments, apply suitable locking compound to the parts adjust.
- The adjustments should be performed with the rated power supply voltage unless otherwise noted.
- The adjustments should be performed in the order given in this service manual. (As a general rule, playback circuit adjustment should be completed before performing recording circuit adjustment.)
- The adjustments should be performed for both L-CH and R-CH.
- Switches and controls should be set as follows unless otherwise specified.

- Test Tape

Tape	Signal	Used for
P-4-A100	10 kHz, -10 dB	Azimuth Adjustment
WS-48B	3 kHz, 0 dB	Tape Speed Adjustment
P-4-L300	315 Hz, 0 dB	Level Adjustment


Record/Playback Head Azimuth Adjustment

DECK A DECK B


Note: Perform this adjustments for both decks

Procedure:


- Mode: Playback

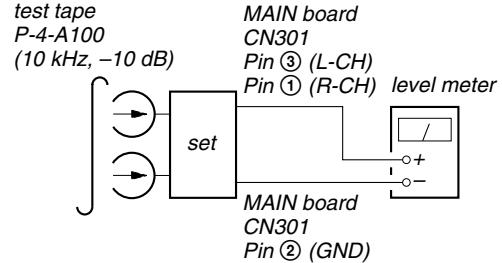

2. Turn the adjustment screw and check output peaks. If the peaks do not match for L-CH and R-CH, turn the adjustment screw so that outputs match within 1dB of peak.

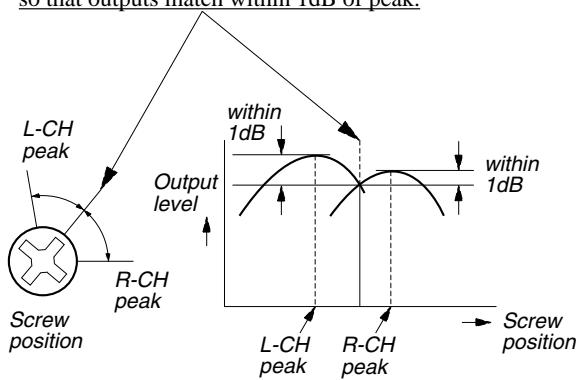


3. Mode: Playback

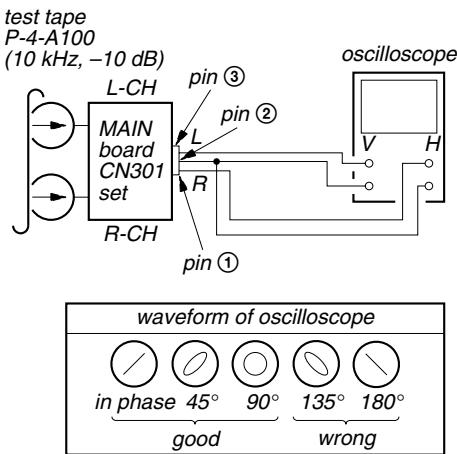

4. After the adjustments, apply suitable locking compound to the parts adjusted.

Adjustment Location: Playback Head (Deck A).

Record/Playback/Erase Head (Deck B).

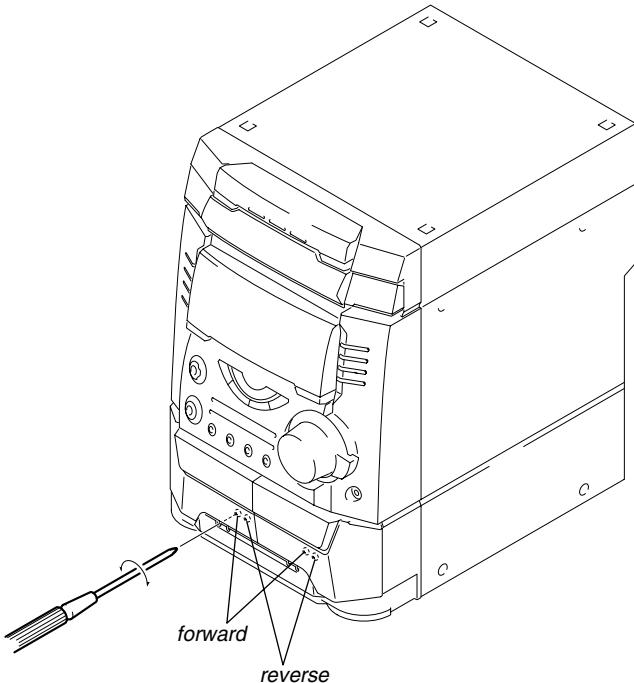

Tape Speed Adjustment DECK B


Note: Start the Tape Speed adjustment as below after setting to the test mode.

In the test mode, the tape speed is high during pressing the **[CD SYNC HI-DUB]** button.

Procedure:

1. Turn the power switch on.
2. Press the **[■]** button, **[ENTER]** button and **[DISC 3]** button simultaneously.
(The "TEST MODE" on the fluorescent indicator tube display while in the test mode.)
- To exit from the test mode, press the **[I/O]** button.

Mode: Playback

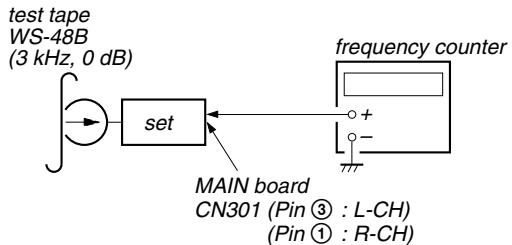


1. Insert the WS-48B into the deck B.
2. Press the **[▷]** button on the deck B.
3. Press the **[CD SYNC HI-DUB]** button in playback mode.
Then at HIGH speed mode.
4. Adjust RV1001 on the LEAF SW board do that frequency counter reads $6,000 \pm 30$ Hz.
5. Press the **[CD SYNC HI-DUB]** button.
Then back to NORMAL speed mode.
6. Adjust RV1002 on the LEAF SW board so that frequency counter reads $3,000 \pm 15$ Hz.

Adjustment Location: LEAF SW board

Playback Level Adjustment DECK A DECK B

Procedure:

Mode: Playback

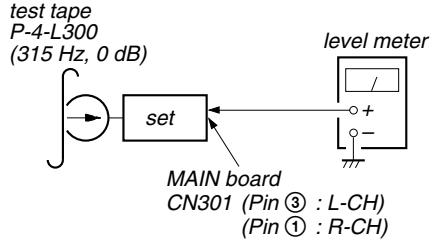

Deck A is RV302 (L-CH) and RV352 (R-CH), Deck B is RV303 (L-CH) and RV353 (R-CH) so that adjustment within adjustment level as follows.

Adjustment Level:

CN301 PB level: 301.5 to 338.3 mV (-8.2 to -7.2 dB)
level difference between the channels: within ± 0.5 dB

Adjustment Location: MAIN board

Sample Value of Wow and Flutter: 0.3% or less W. RMS
(WS-48B)

REC Bias Adjustment [DECK B]

Procedure:


INTRODUCTION

When set to the test mode performed in Tape Speed Adjustment, when the tape is rewound after recording, the "REC memory mode" which rewinds only the recorded portion and playback is set.


This "REC memory mode" is convenient for performing this adjustment. During recording, the input signal FUNCTION will automatically switch to VIDEO.

(If do not operation of stopped from recording complete, and rotate of shuttle knob then rewind to recording start position.)

1. Press [MD (VIDEO)] button to select VIDEO. (This step is not necessary if the above test mode has already been set.)
2. Insert a tape into deck B.
3. After press [REC PAUSE/START] button, press [REC PAUSE/START] button, then recording start.
4. Mode: Record

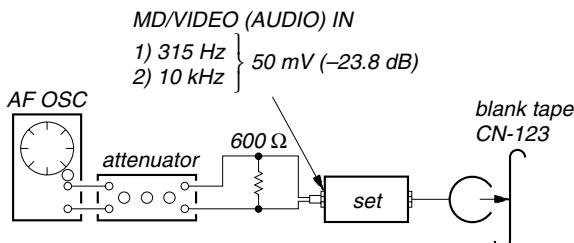

5. Mode: Playback

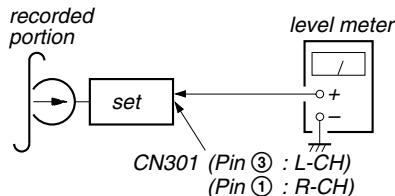

6. Confirm playback the signal recorded in step 3 become adjustable level as follows.

If these levels do not adjustable level, adjustment the RV304 (L-CH) and RV354 (R-CH) on the AUDIO board to repeat steps 4 and 5.

Adjustable Level: Playback output of 315 Hz to playback output of 10 kHz: ± 1.0 dB

Adjustment Location: MAIN board

REC Level Adjustment [DECK B]

Procedure:

INTRODUCTION


When set to the test mode performed in Tape Speed Adjustment, when the tape is rewound after recording, the "REC memory mode" which rewinds only the recorded portion and playback is set.

This "REC memory mode" is convenient for performing this adjustment. During recording, the input signal FUNCTION will automatically switch to VIDEO.


(If do not operation of stopped from recording complete, and rotate of shuttle knob then rewind to recording start position.)

1. Press [MD (VIDEO)] button to select VIDEO. (This step is not necessary if the above test mode has already been set.)
2. Insert a tape into deck B.
3. After press [REC PAUSE/START] button, press [REC PAUSE/START] button, then recording start.

4. Mode: Record

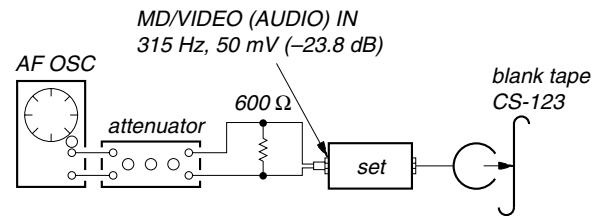

5. Mode: Playback

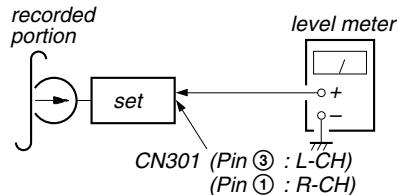

6. Confirm playback the signal recorded in step 3 become adjustable level as follows.


If these levels do not adjustable level, adjustment the RV301 (L-CH) and RV351 (R-CH) on the MAIN board to repeat steps 4 and 5.

Adjustable Level:


CN301 PB level: 47.2 to 53.0 mV (-24.3 to -23.3 dB)

Adjustment Location: MAIN board


[MAIN BOARD] (Component Side)

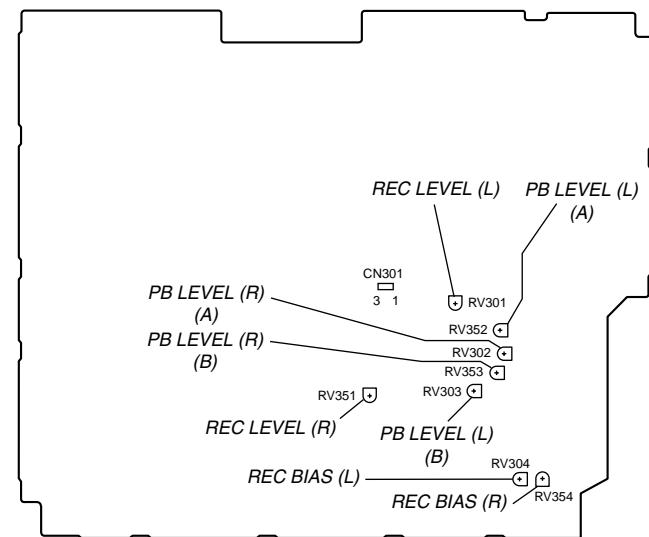

[LEAF SW BOARD] (Conductor Side)

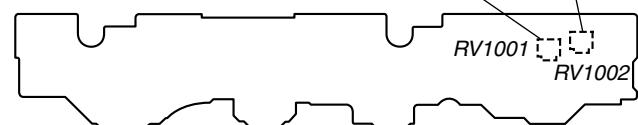

FM Tuned Level Adjustment

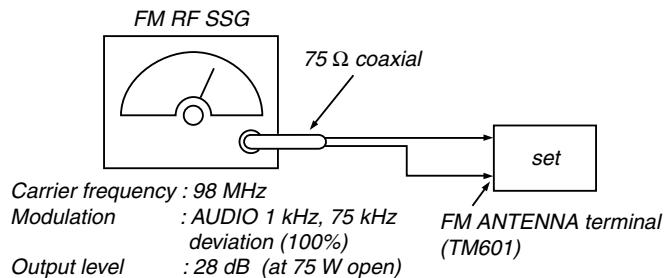


Procedure:

- Supply a 28 dB 98 MHz signal from the ANTENNA terminal.
- Tune the set to 98 MHz.
- Adjust RV611 to the point (moment) when the TUNED indicator on the fluorescent indication tube will change from going off to going on.

Adjustment Location: MAIN board

Null Adjustment

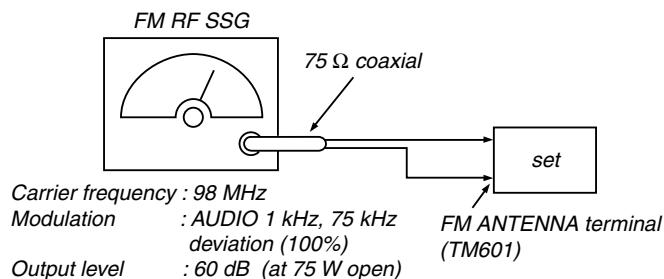


Procedure:

- Supply a 60 dB 98 MHz signal from the ANTENNA terminal.
- Tune the set to 98 MHz.
- Measure voltage between pin ② of IC 601. Adjust T601 until the voltage becomes 0 V.

Adjustment Location: MAIN board

[MAIN BOARD] (Component Side)

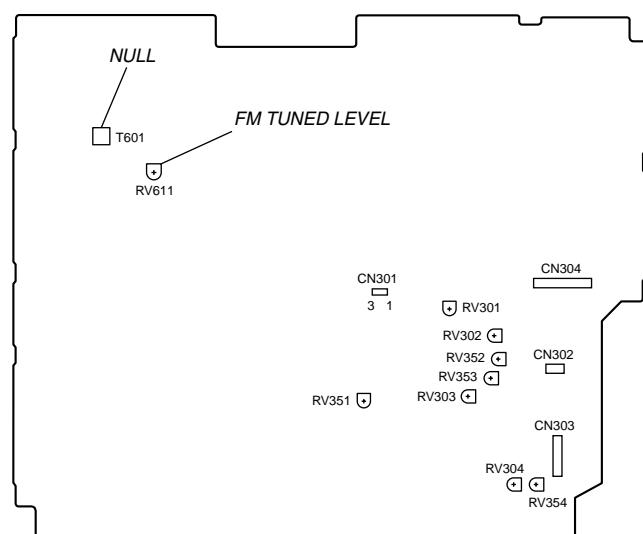


CD SECTION

Note :

- CD Block is basically designed to operate without adjustment. Therefore, check each item in order given.
- Use YEDS-18 disc (3-702-101-01) unless otherwise indicated.
- Use an oscilloscope with more than 10MΩ impedance.
- Clean the object lens by an applicator with neutral detergent when the signal level is low than specified value with the following checks.


S-Curve Check

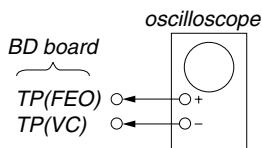

Procedure :

- Connect oscilloscope to TP (FEO).
- Connect between TP (FEI) and TP (VC) by lead wire.
- Connect between TP (AGCCON) and TP (GND) by lead wire.
- Turn Power switch on.
- Load a disc (YEDS-18) and actuate the focus search. (In consequence of open and close the disc tray, actuate the focus search)
- Confirm that the oscilloscope waveform (S-curve) is symmetrical between A and B. And confirm peak to peak level within 4 ± 1 Vp-p.

S-curve waveform

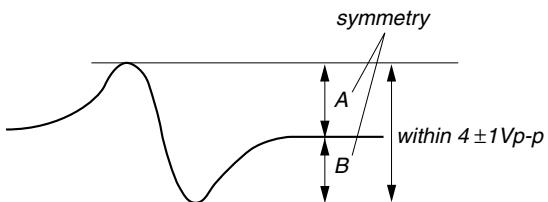


- After check, remove the lead wire connected in step 2 and 3.

Note :

- Try to measure several times to make sure than the ratio of A : B or B : A is more than 10 : 7.
- Take sweep time as long as possible and light up the brightness to obtain best waveform.

RF Level Check

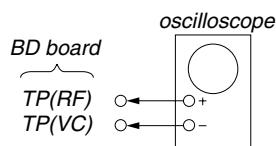


Procedure :


- Connect oscilloscope to TP (RF).
- Connect between TP (AGCCON) and TP (GND) by lead wire.
- Turned Power switch on.
- Load a disc (YEDS-18) and playback.
- Confirm that oscilloscope waveform is clear and check RF signal level is correct or not.
- After check, remove the lead wire connected in step 2.

Note: Clear RF signal waveform means that the shape “◊” can be clearly distinguished at the center of the waveform.

RF signal waveform

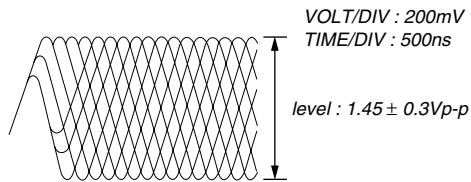


E-F Balance (1 Track Jump) Check

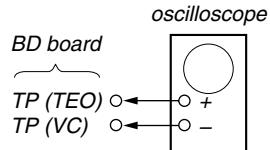

Procedure:

1. Connect oscilloscope to TP (TEO) and TP (VC) board.
2. Turned Power switch on.
3. Load a disc (YEDS-18) and playback the number five track.
4. Press the button. (Becomes the 1 track jump mode.)
5. Confirm that the level B and A (DC voltage) on the oscilloscope waveform.

1 track jump waveform

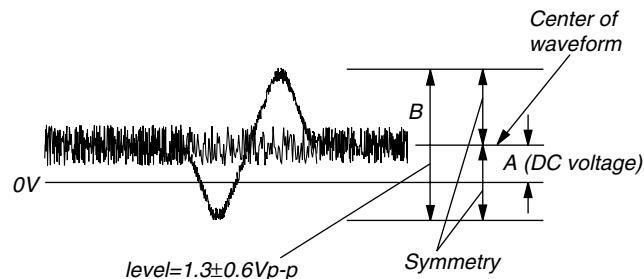


Specification level: $\frac{A}{B} \times 100 = \text{less than } \pm 22\%$

6. After check, remove the lead wire connected in step 1.

RF PLL Free-Run Frequency Check

Procedure :


1. Connect frequency counter to test point (XPCK) with lead wire.

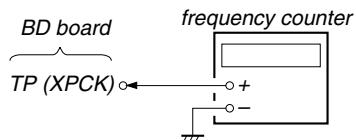

2. Turned Power switch on.
3. Put the disc (YEDS-18) in to play the number five track.
Confirm that reading on frequency counter is 4.3218MHz.

Adjustment Location :


[BD BOARD] (SIDE B)

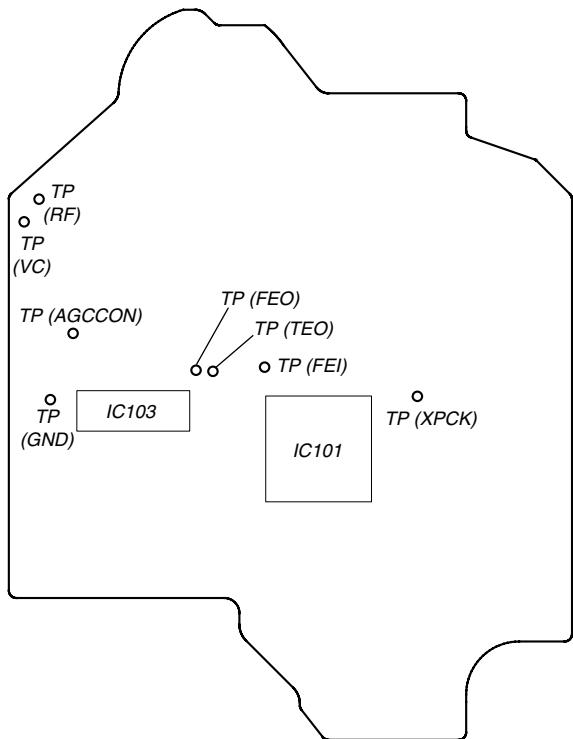

VIDEO SECTION


VIDEO Frequency Adjustment

1. Connect the frequency counter to check point of the VIDEO board.
2. Adjust CT503 of the VIDEO board so that the frequency counter read $27\text{MHz} \pm 80\text{Hz}$ at STOP condition.

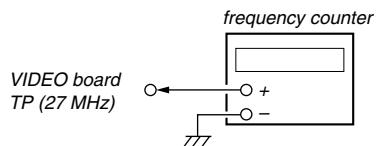


Adjustment Location :

[VIDEO BOARD] – SIDE A –

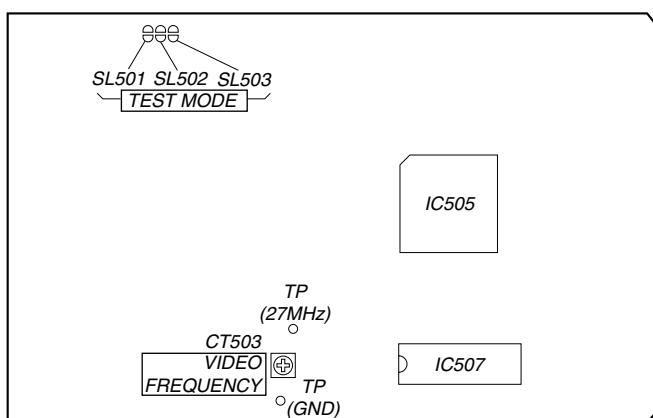


[VIDEO BOARD] – SIDE B –

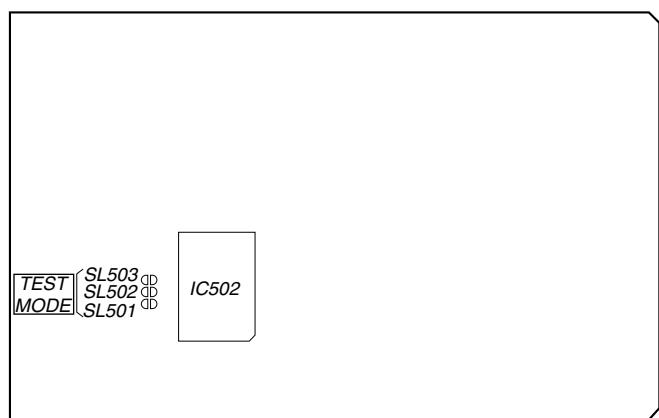



SECTION 7 DIAGRAMS

THIS NOTE IS COMMON FOR PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS.
(In addition to this, the necessary note is printed in each block.)


Note on Schematic Diagram:

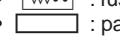- All capacitors are in μF unless otherwise noted. pF : $\mu\mu\text{F}$
50 WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and $1/4\text{W}$ or less unless otherwise specified.
- % : indicates tolerance.
- Δ : internal component.
-  : nonflammable resistor.
-  : fusible resistor.
-  : panel designation.

Note: The components identified by mark Δ or dotted line with mark Δ are critical for safety.
Replace only with part number specified.

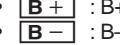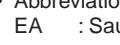-  : B+ Line.
-  : B- Line.
-  : adjustment for repair.
- Voltages are taken with a VOM (Input impedance $10\text{ M}\Omega$). Voltage variations may be noted due to normal production tolerances.
- Waveforms are taken with a oscilloscope. Voltage variations may be noted due to normal production tolerances.
- Circled numbers refer to waveforms.
- Signal path.
 -  : FM
 -  : AM
 -  : PB (DECK A)
 -  : PB (DECK B)
 -  : REC (DECK B)
 -  : CD (AUDIO)
 -  : digital out
 -  : CD (VIDEO)
 -  : VIDEO (C)
 -  : VIDEO (Y)
- Abbreviation
 - EA : Saudi Arabia model



Note on Printed Wiring Boards:

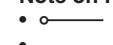-  : parts extracted from the component side.
-  : parts extracted from the conductor side.
-  : Pattern from the side which enables seeing.


Caution:





Pattern face side: Parts on the pattern face side seen from (Side B)
Parts face side: Parts on the parts face side seen from (Side A)

- Indication of transistor.

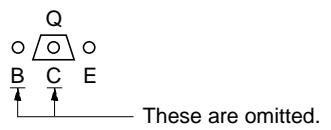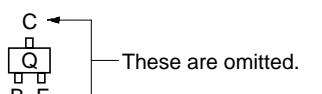


7-1. CIRCUIT BOARDS LOCATION

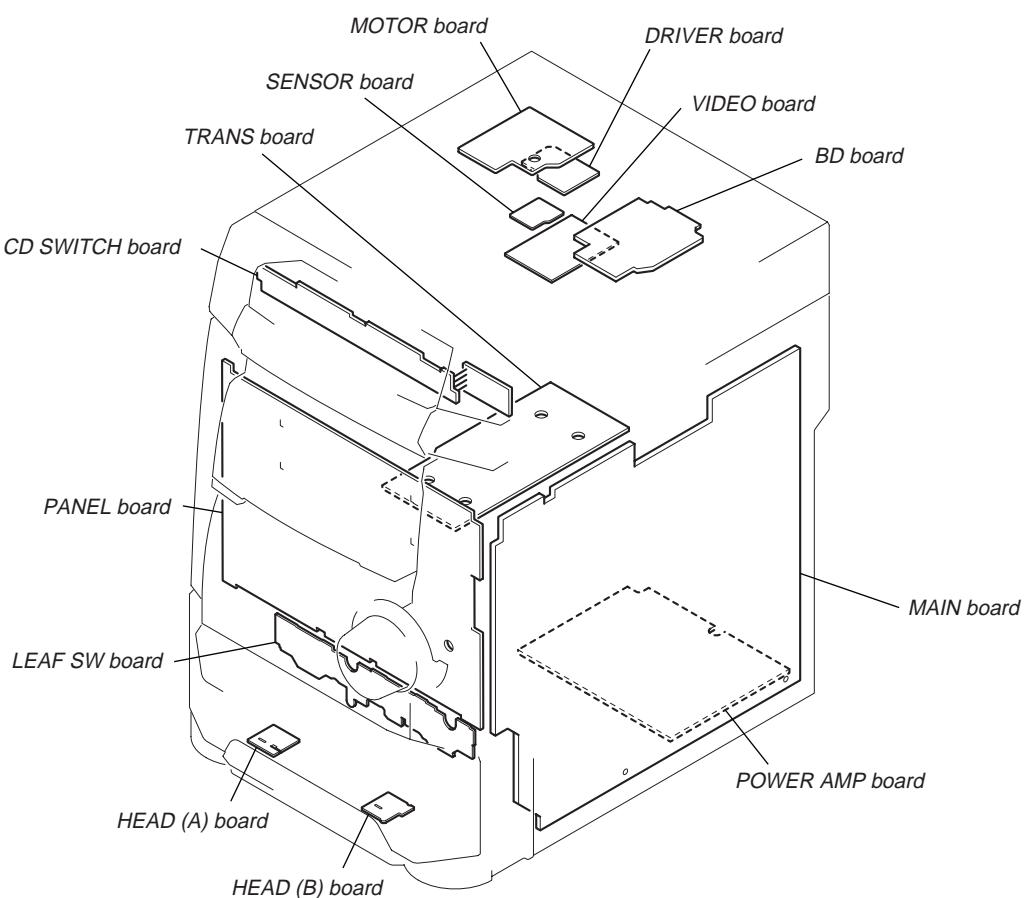


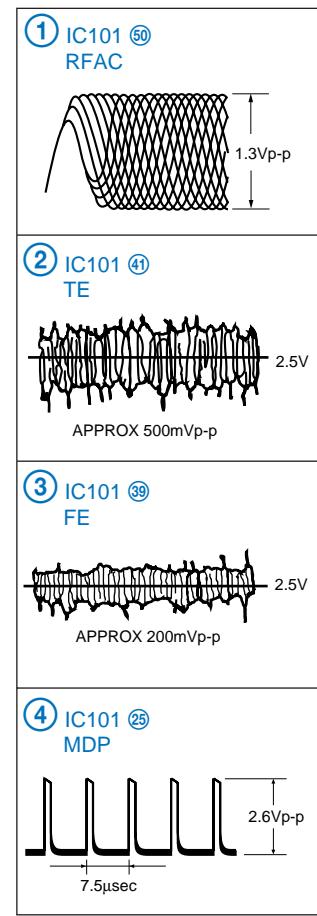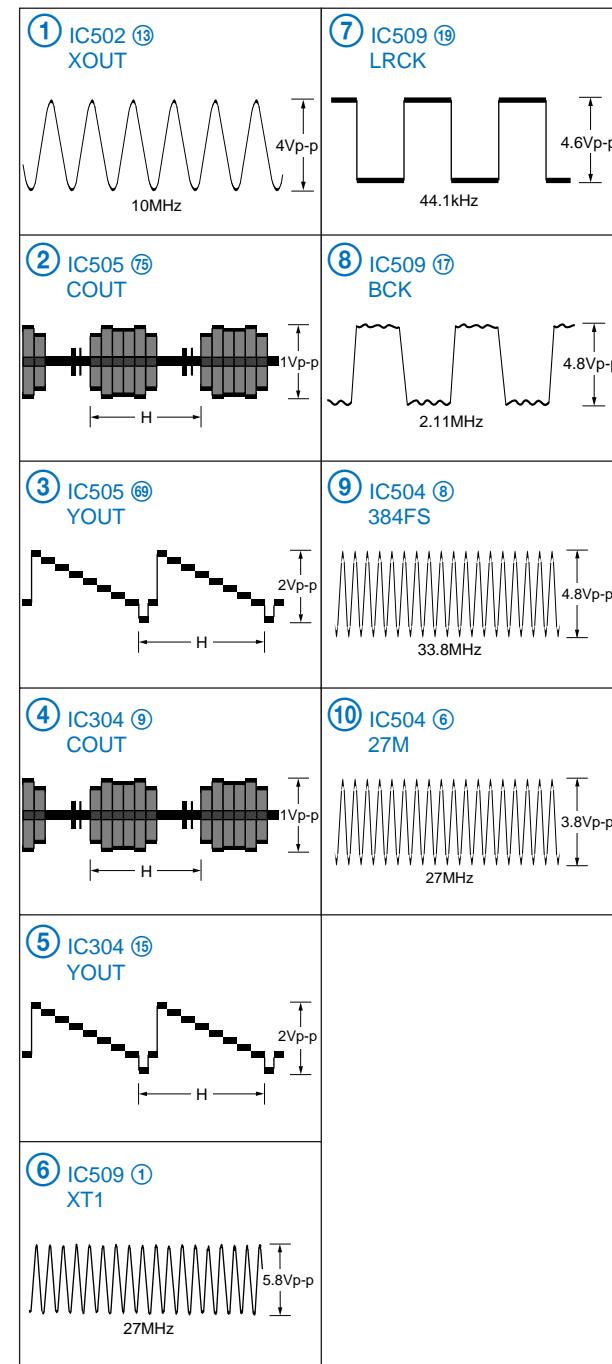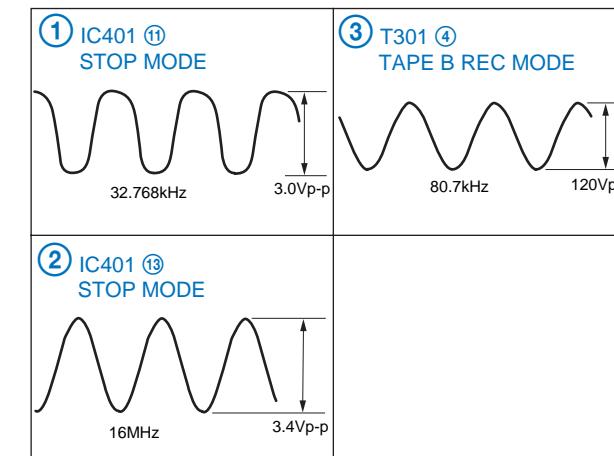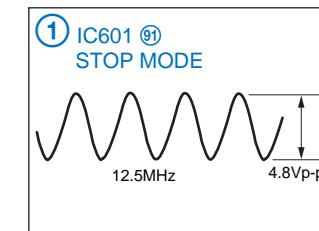Waveforms**- CD SECTION -****- VIDEO SECTION -****- MAIN BOARD -****- PANEL BOARD -**


7-2. BLOCK DIAGRAMS
-TUNER/CD SECTION -

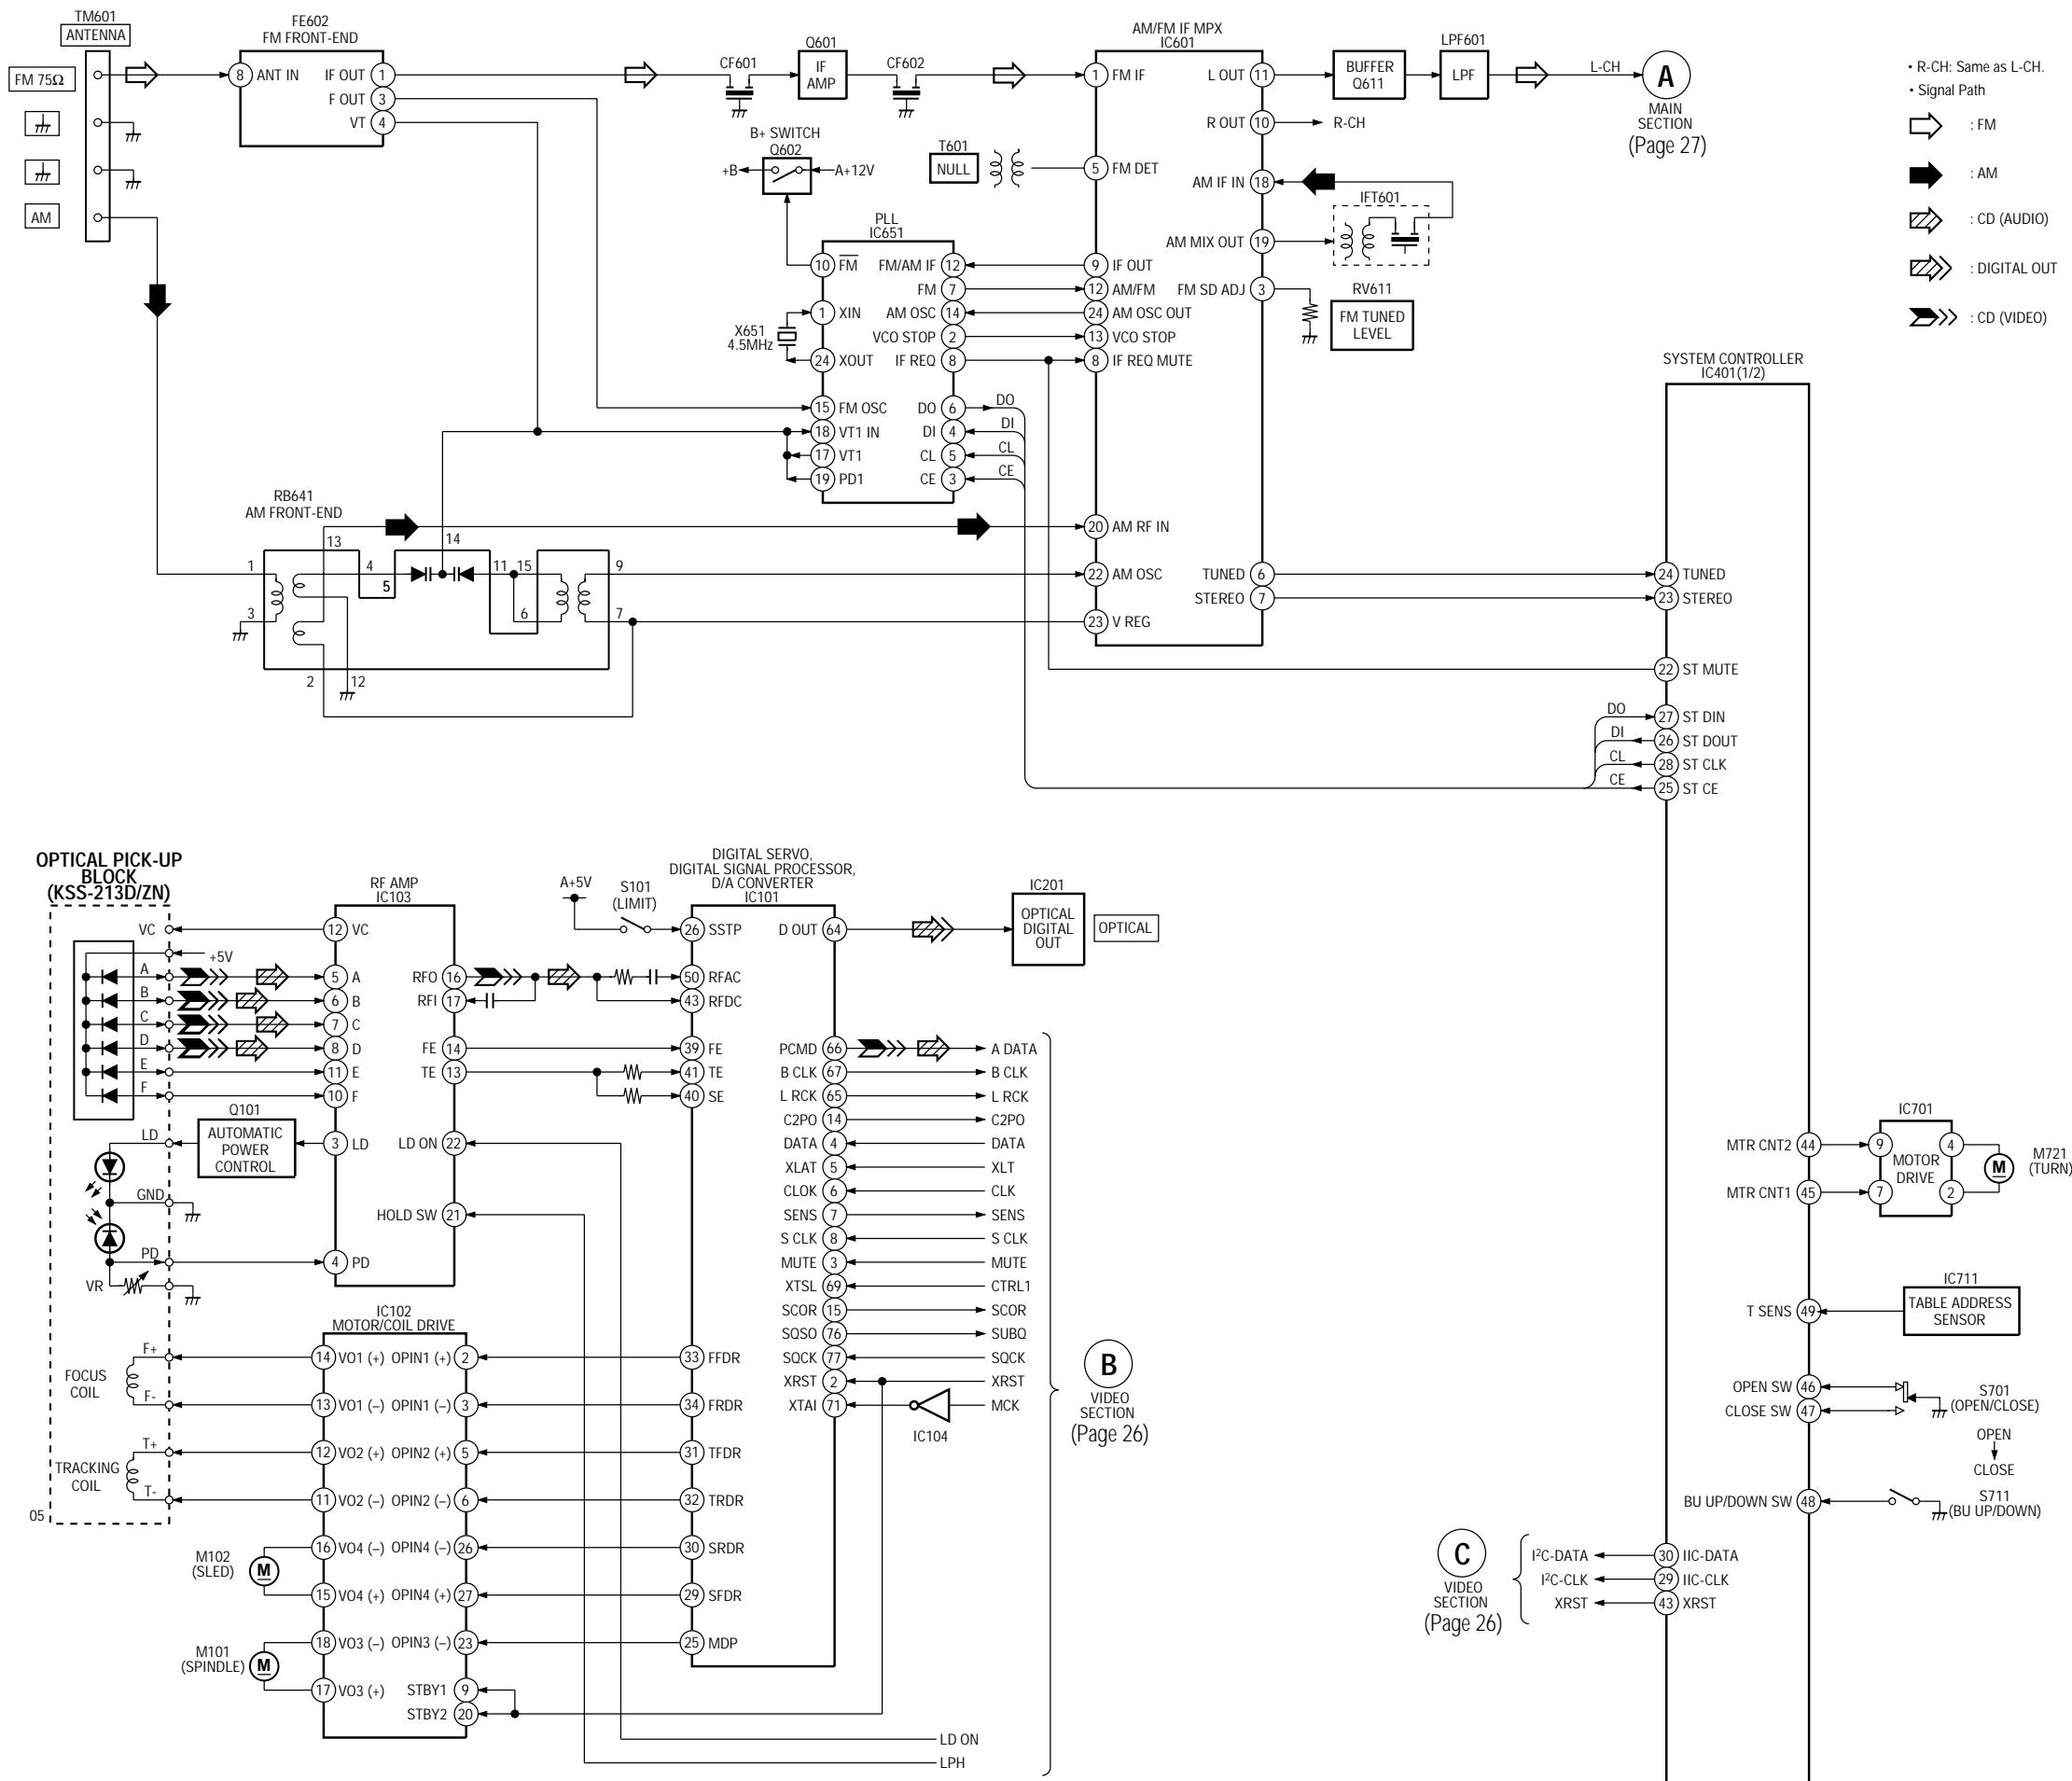

- VIDEO SECTION -

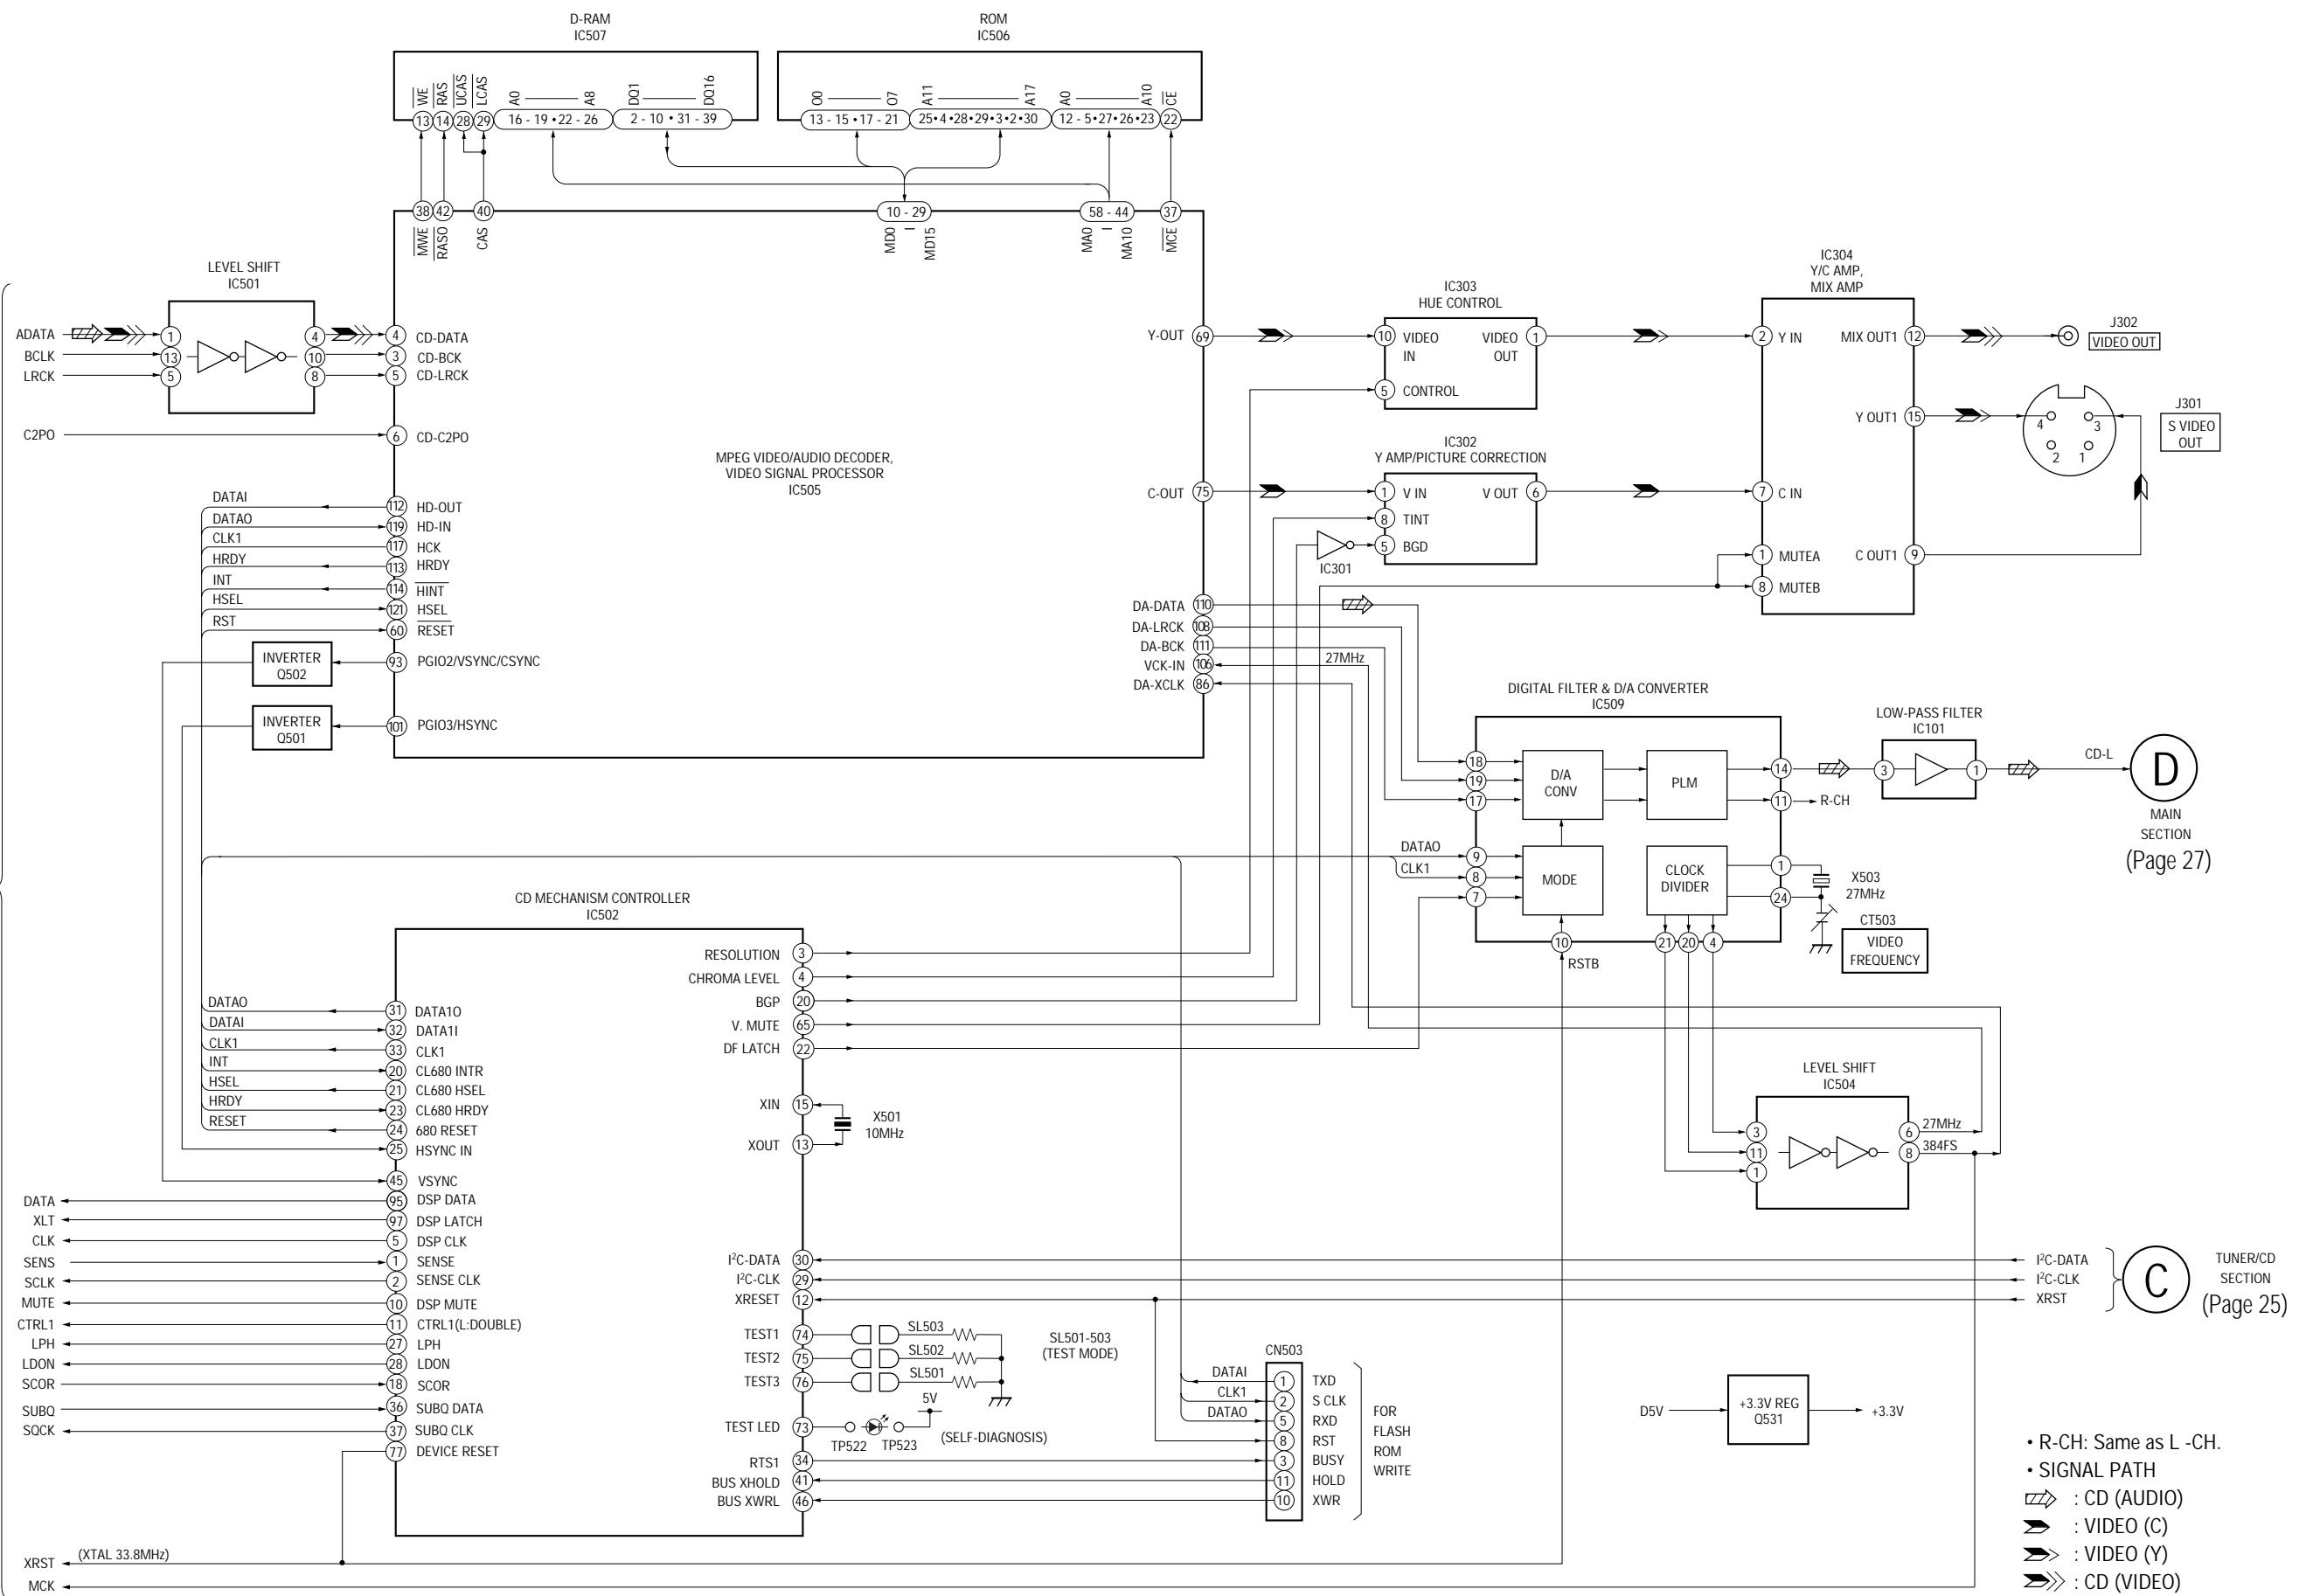

– MAIN SECTION –

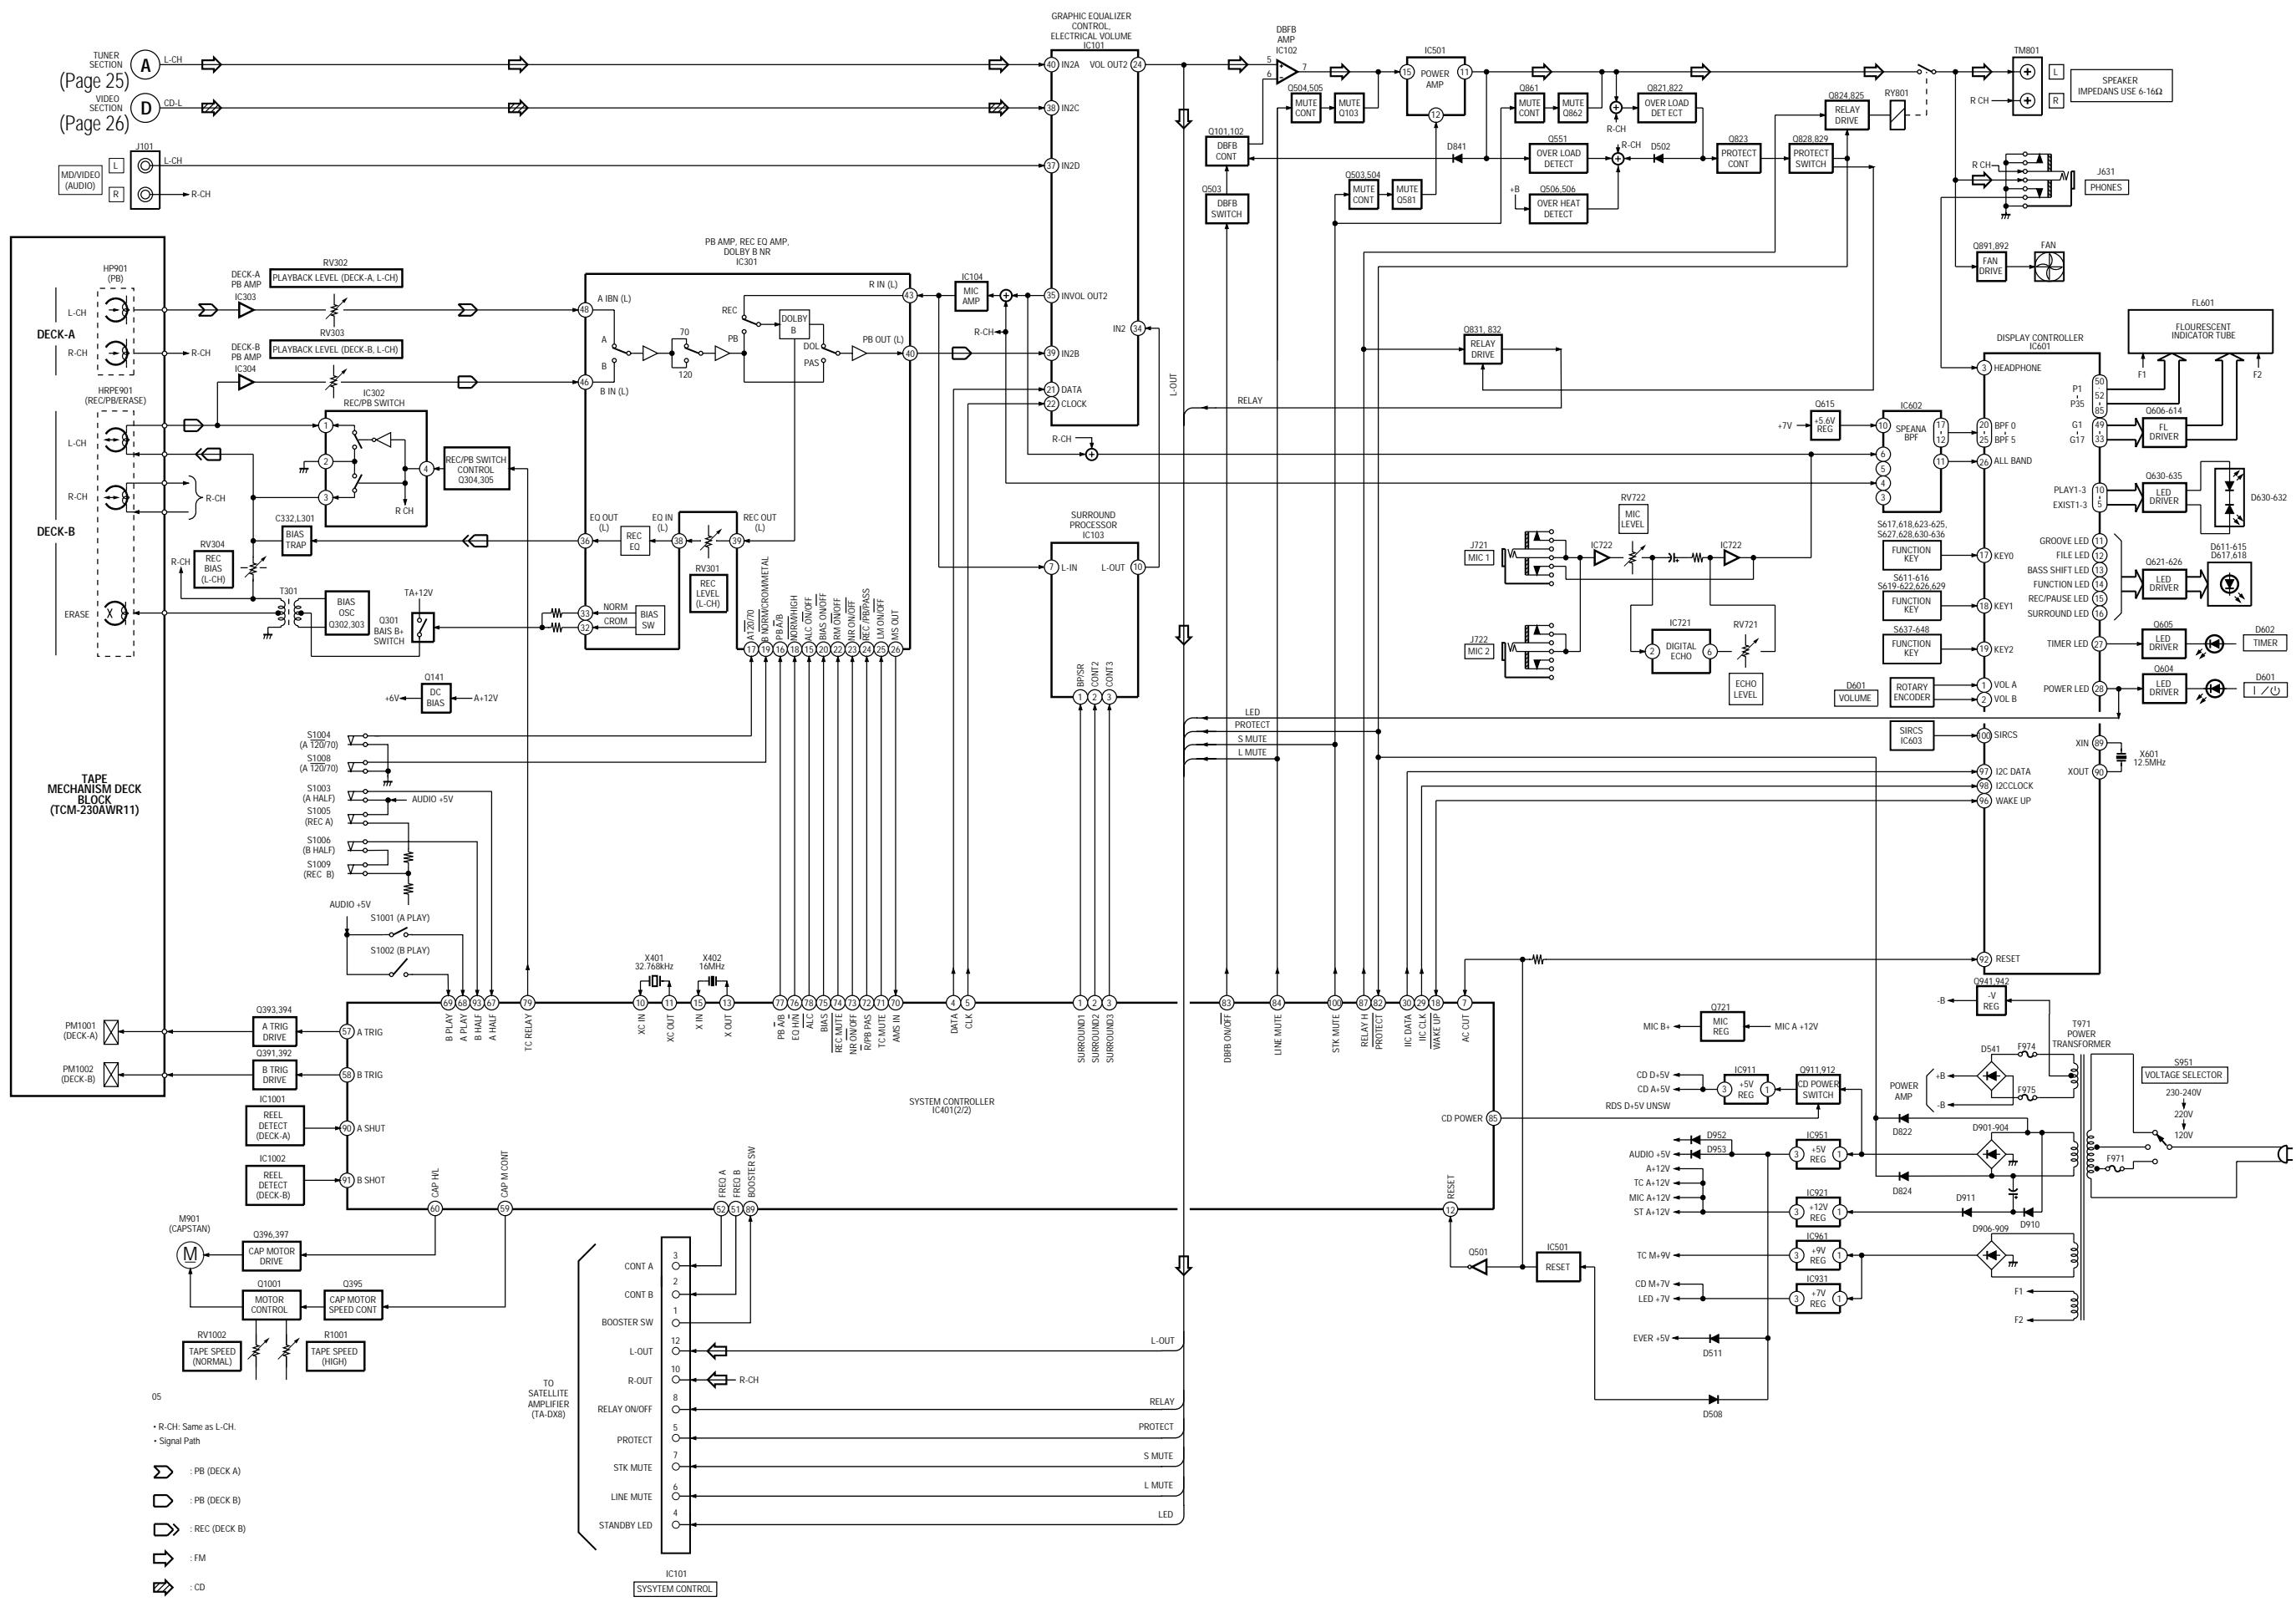


7-3. PRINTED WIRING BOARD – BD SECTION –

- See page 23 for Circuit Boards Location.


【BOARD BOARD】(SIDE A)

Semiconductor Location	
Ref. No.	Location
IC104	D-1
Q101	C-3

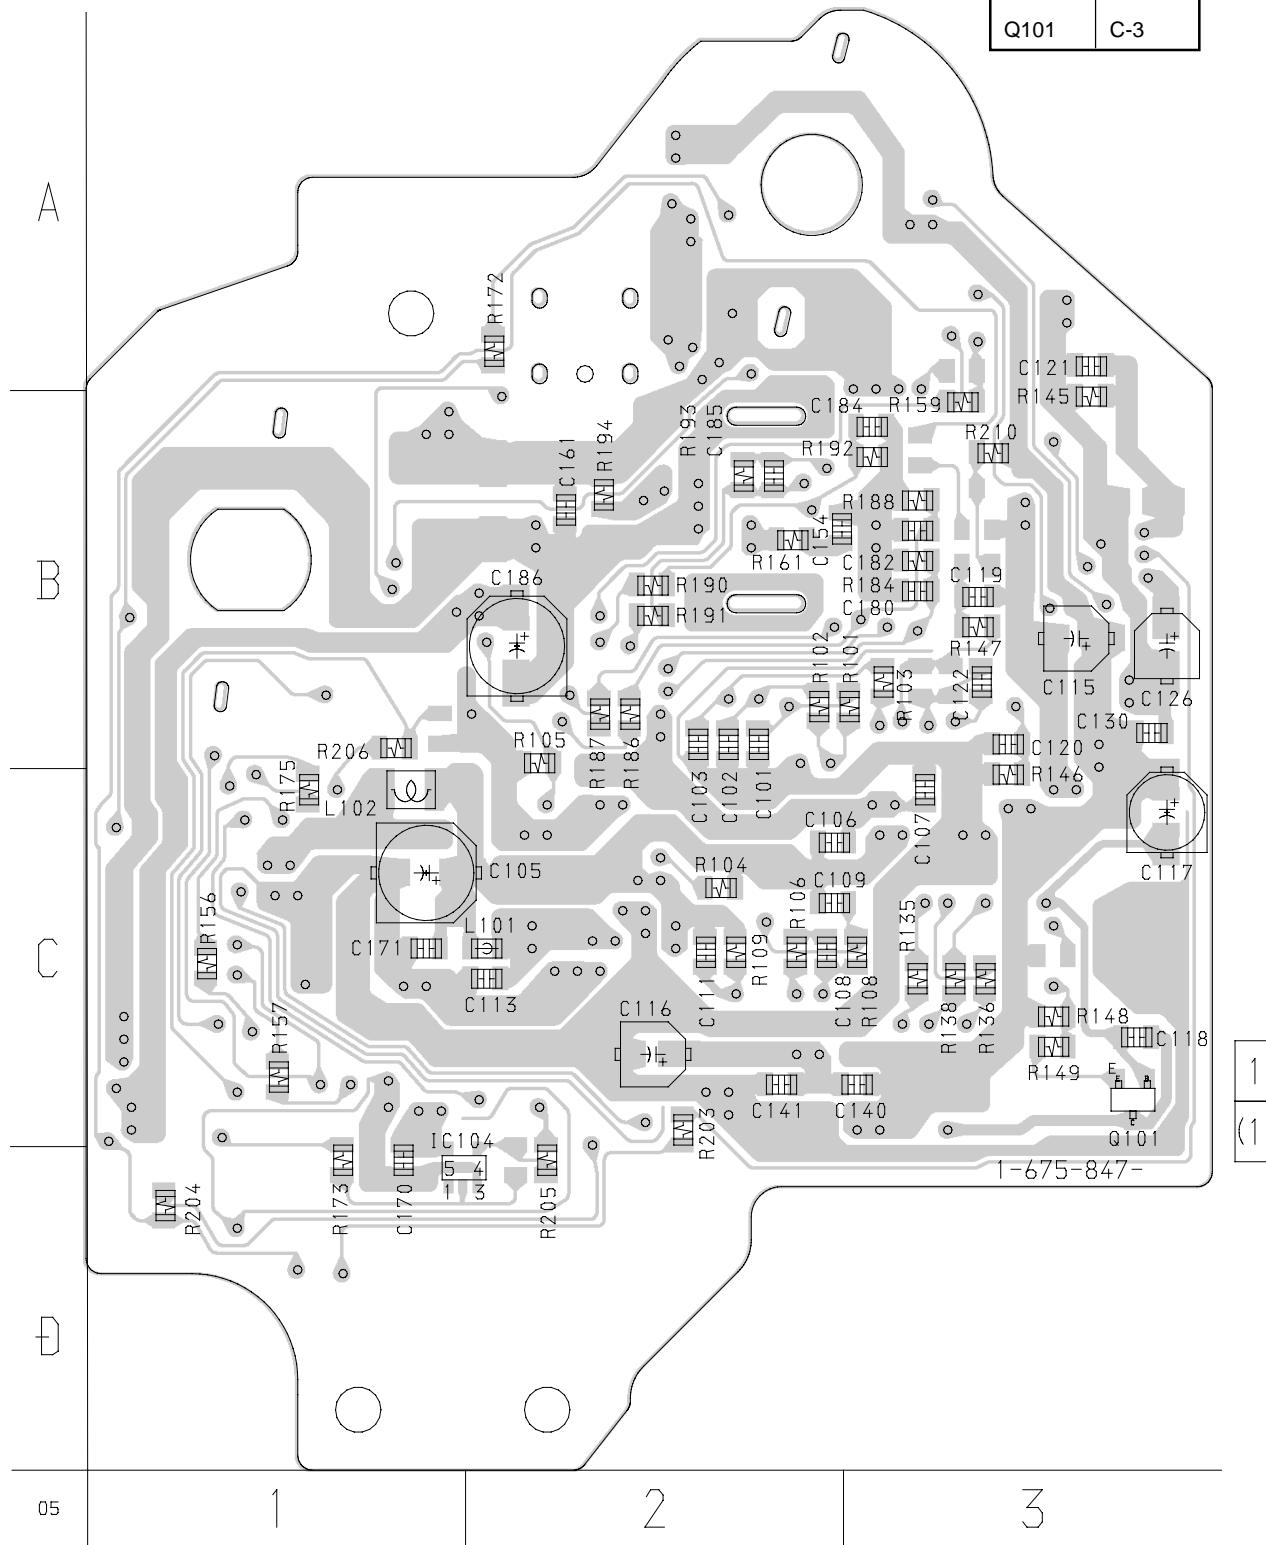


(BOARD) SIDE B

• Semiconductor Location	
Ref. No.	Location
IC101	C-2
IC102	B-2
IC103	C-1

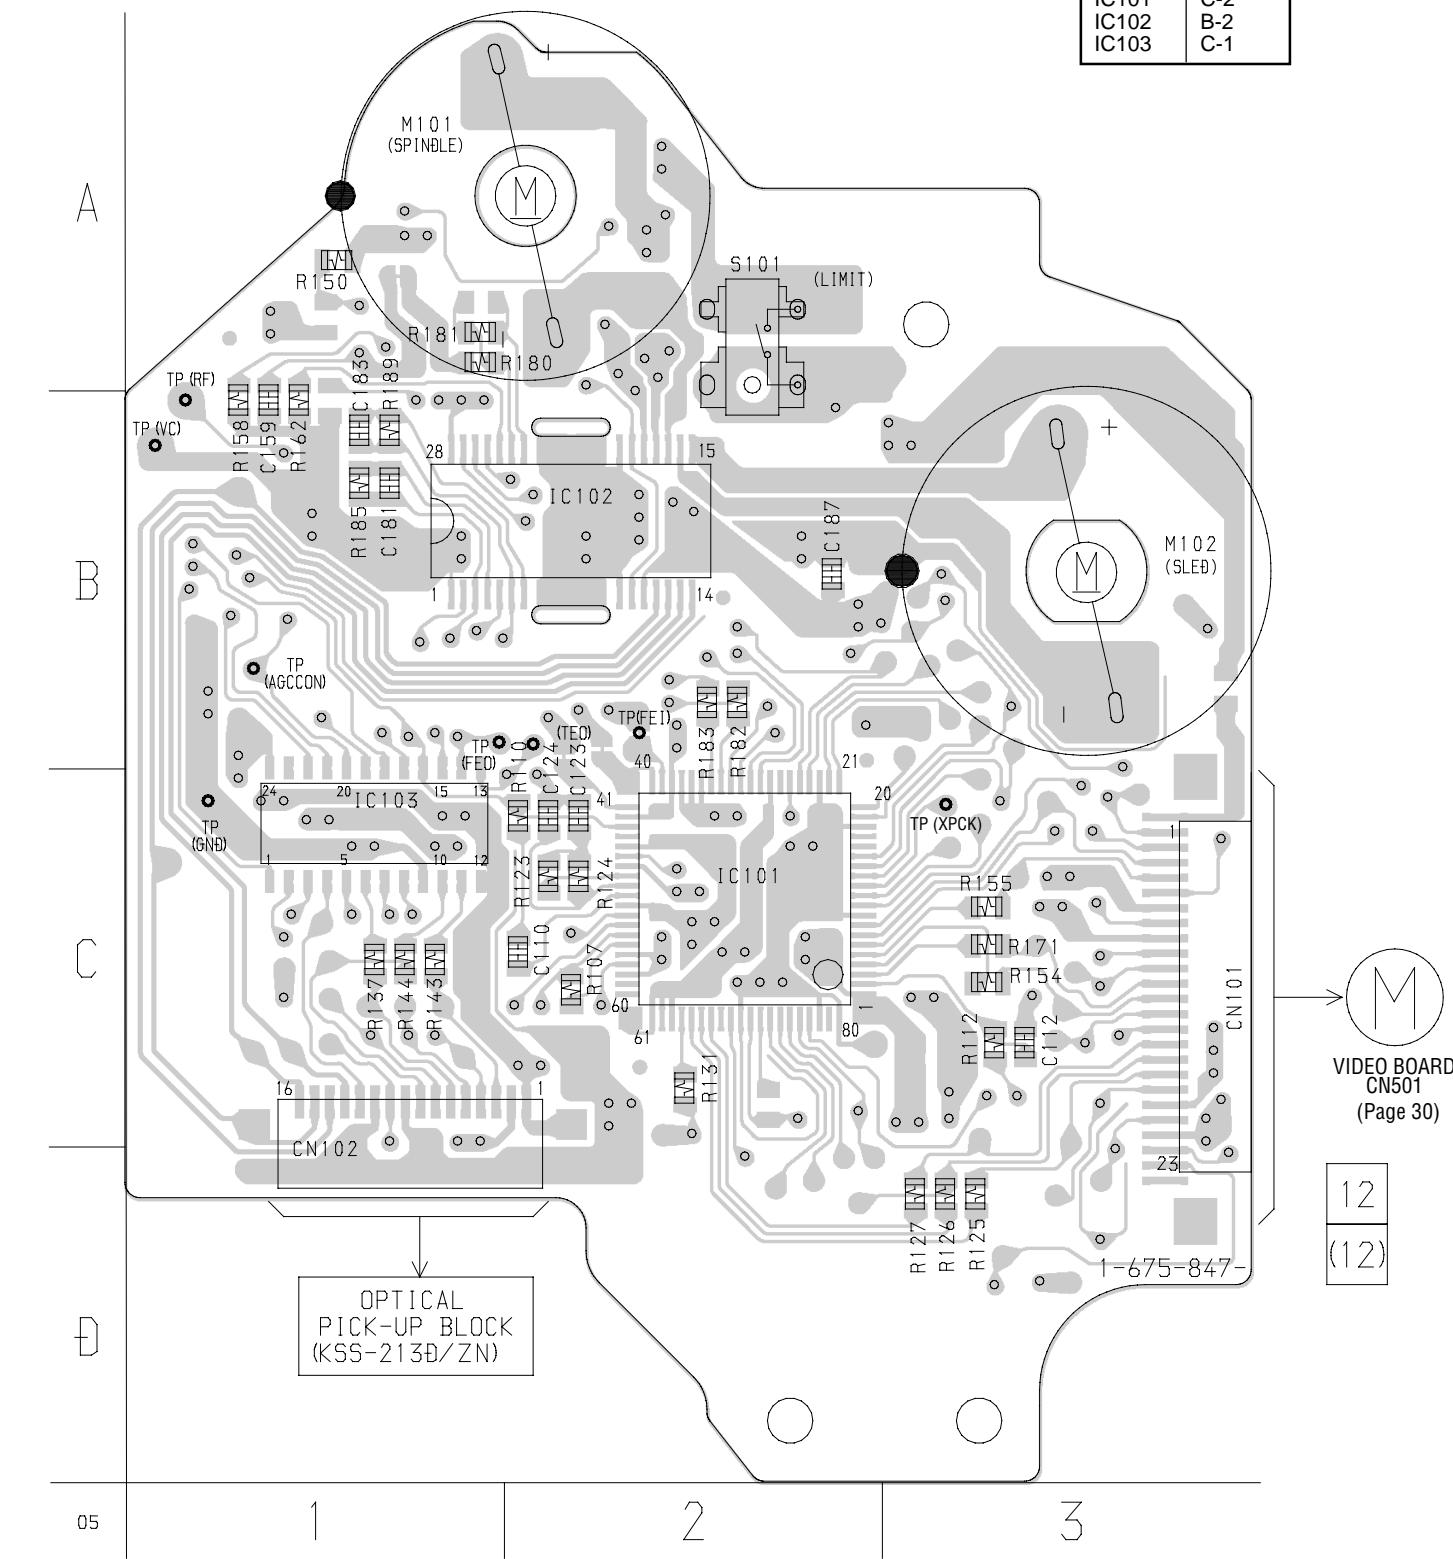

7-4. SCHEMATIC DIAGRAM – BD SECTION –

- See page 24 for Waveforms.
- See page 57 for IC Block Diagrams.

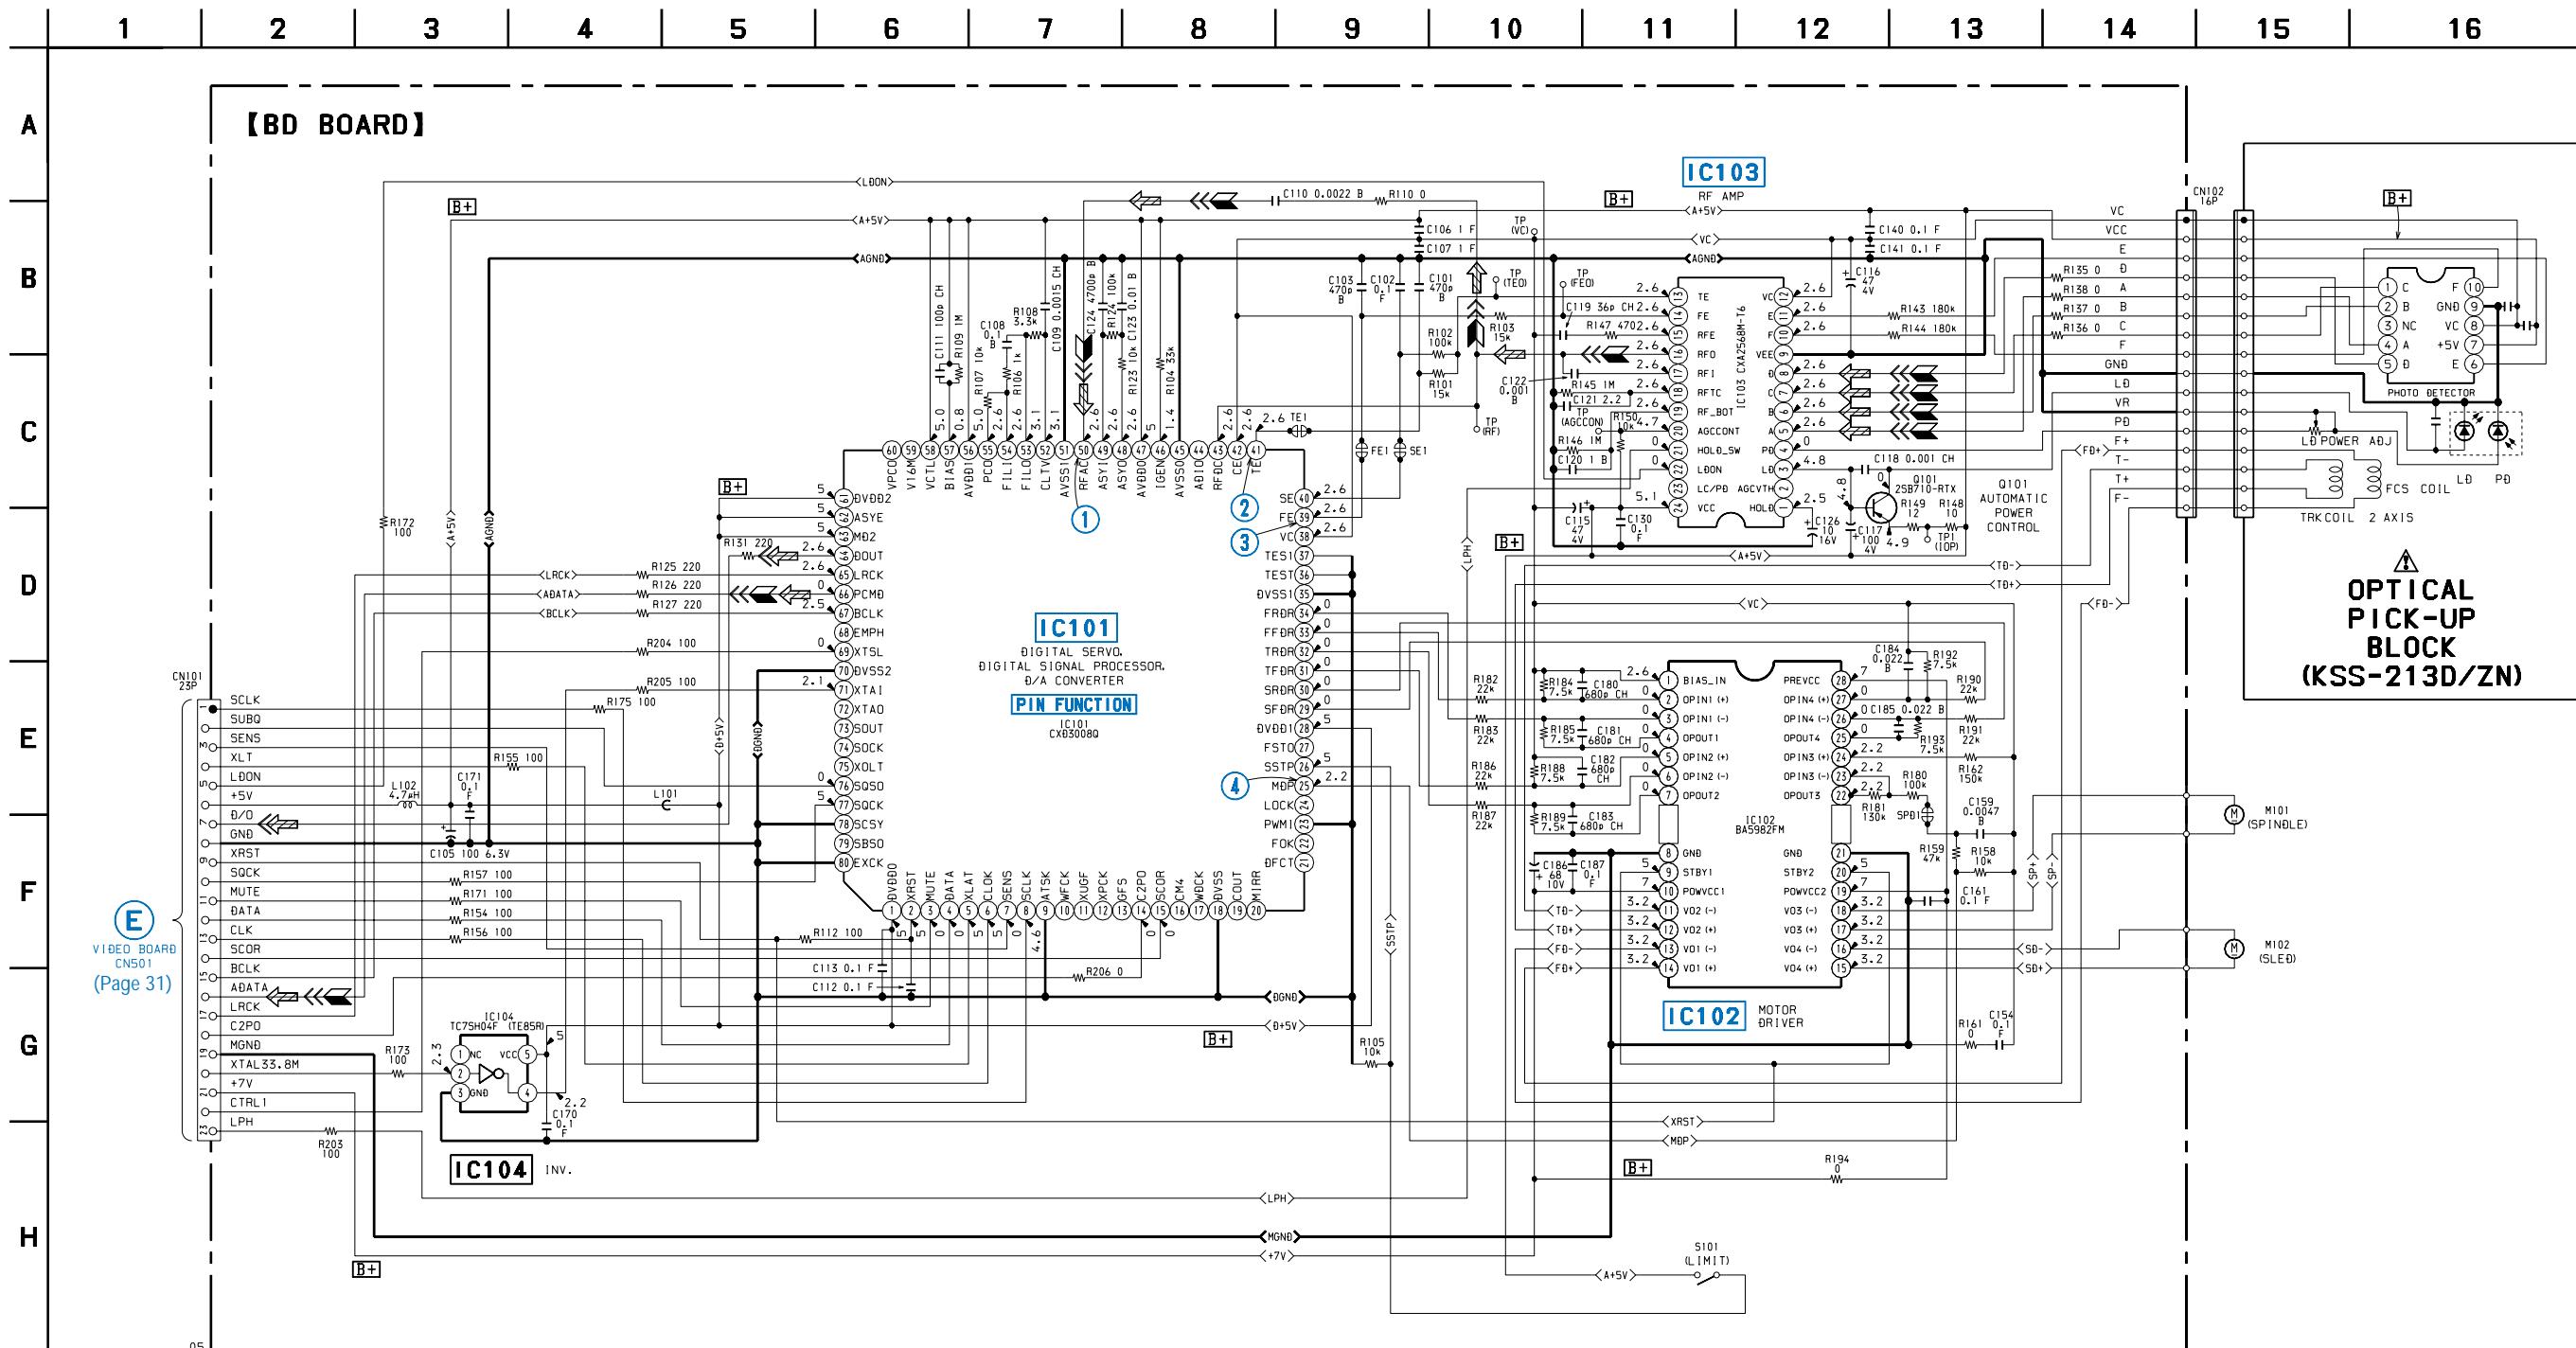


• Voltages and waveforms are dc with respect to ground under no-signal conditions.
no mark : CD STOP

The components identified by mark \triangle or dotted line with mark \triangle are critical for safety.
Replace only with part number specified.

7-5. PRINTED WIRING BOARD - VIDEO SECTION -


- See page 23 for Circuit Boards Location.

【VIDEO BOARD】(SIDE A)

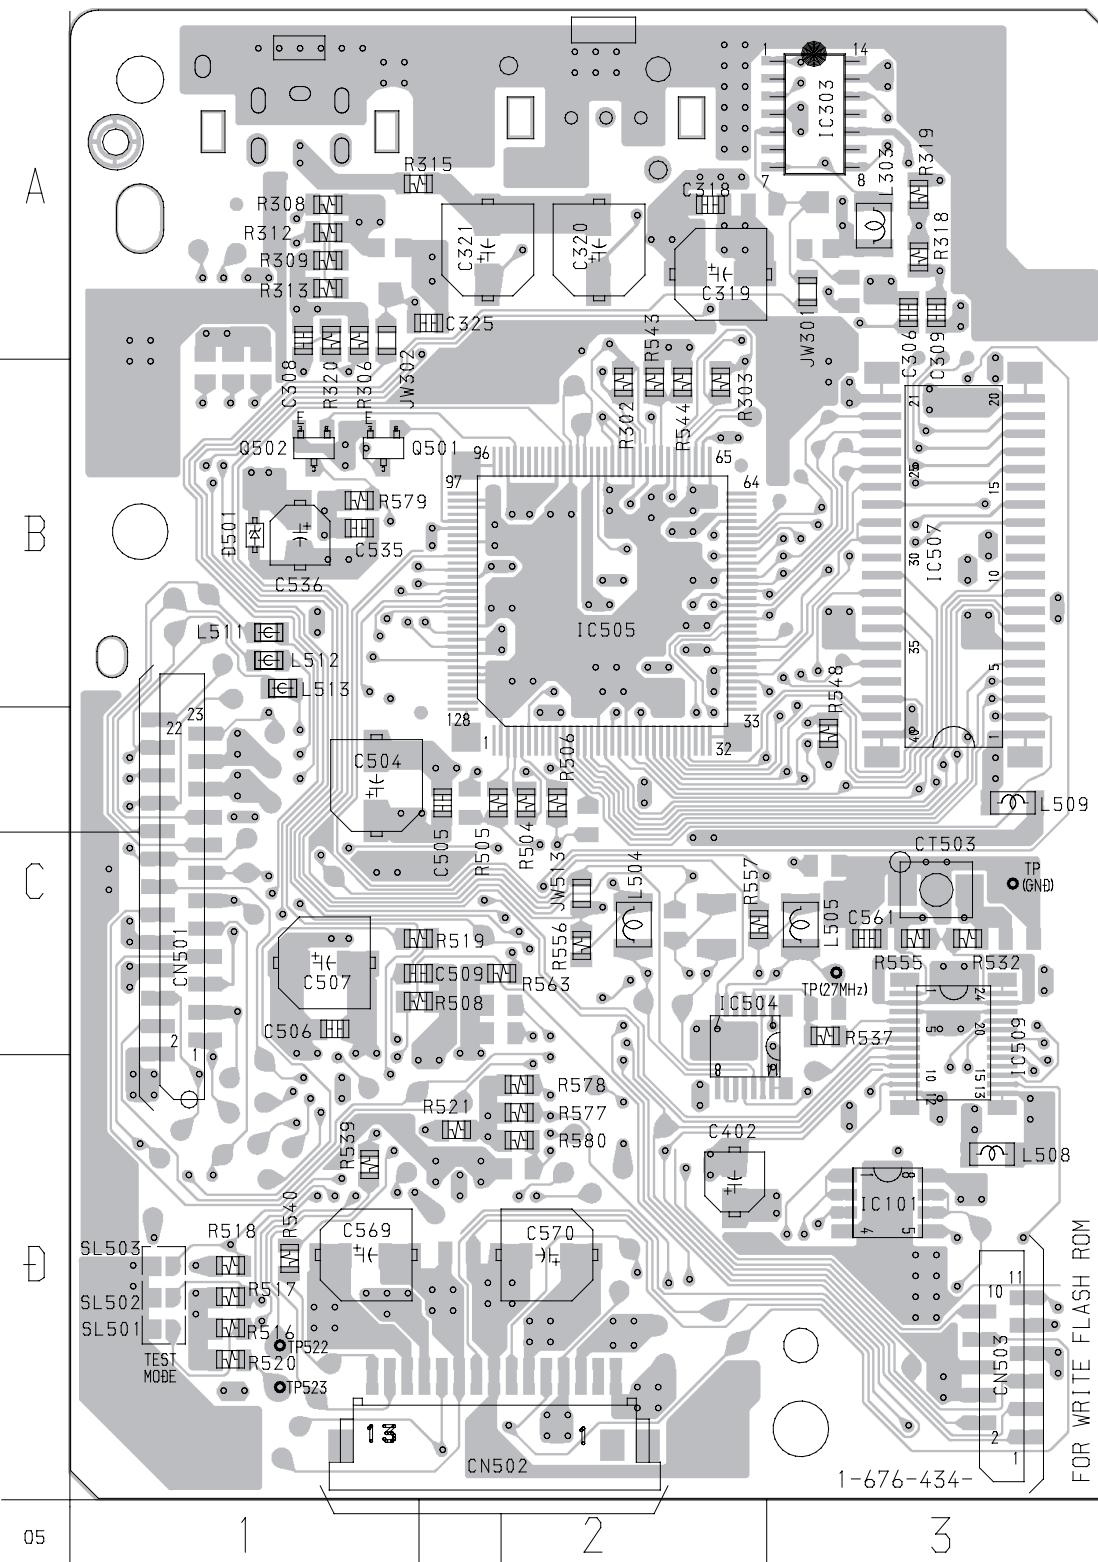


7-6. SCHEMATIC DIAGRAM – VIDEO (1/3) SECTION –

• See page 24 for Waveform.

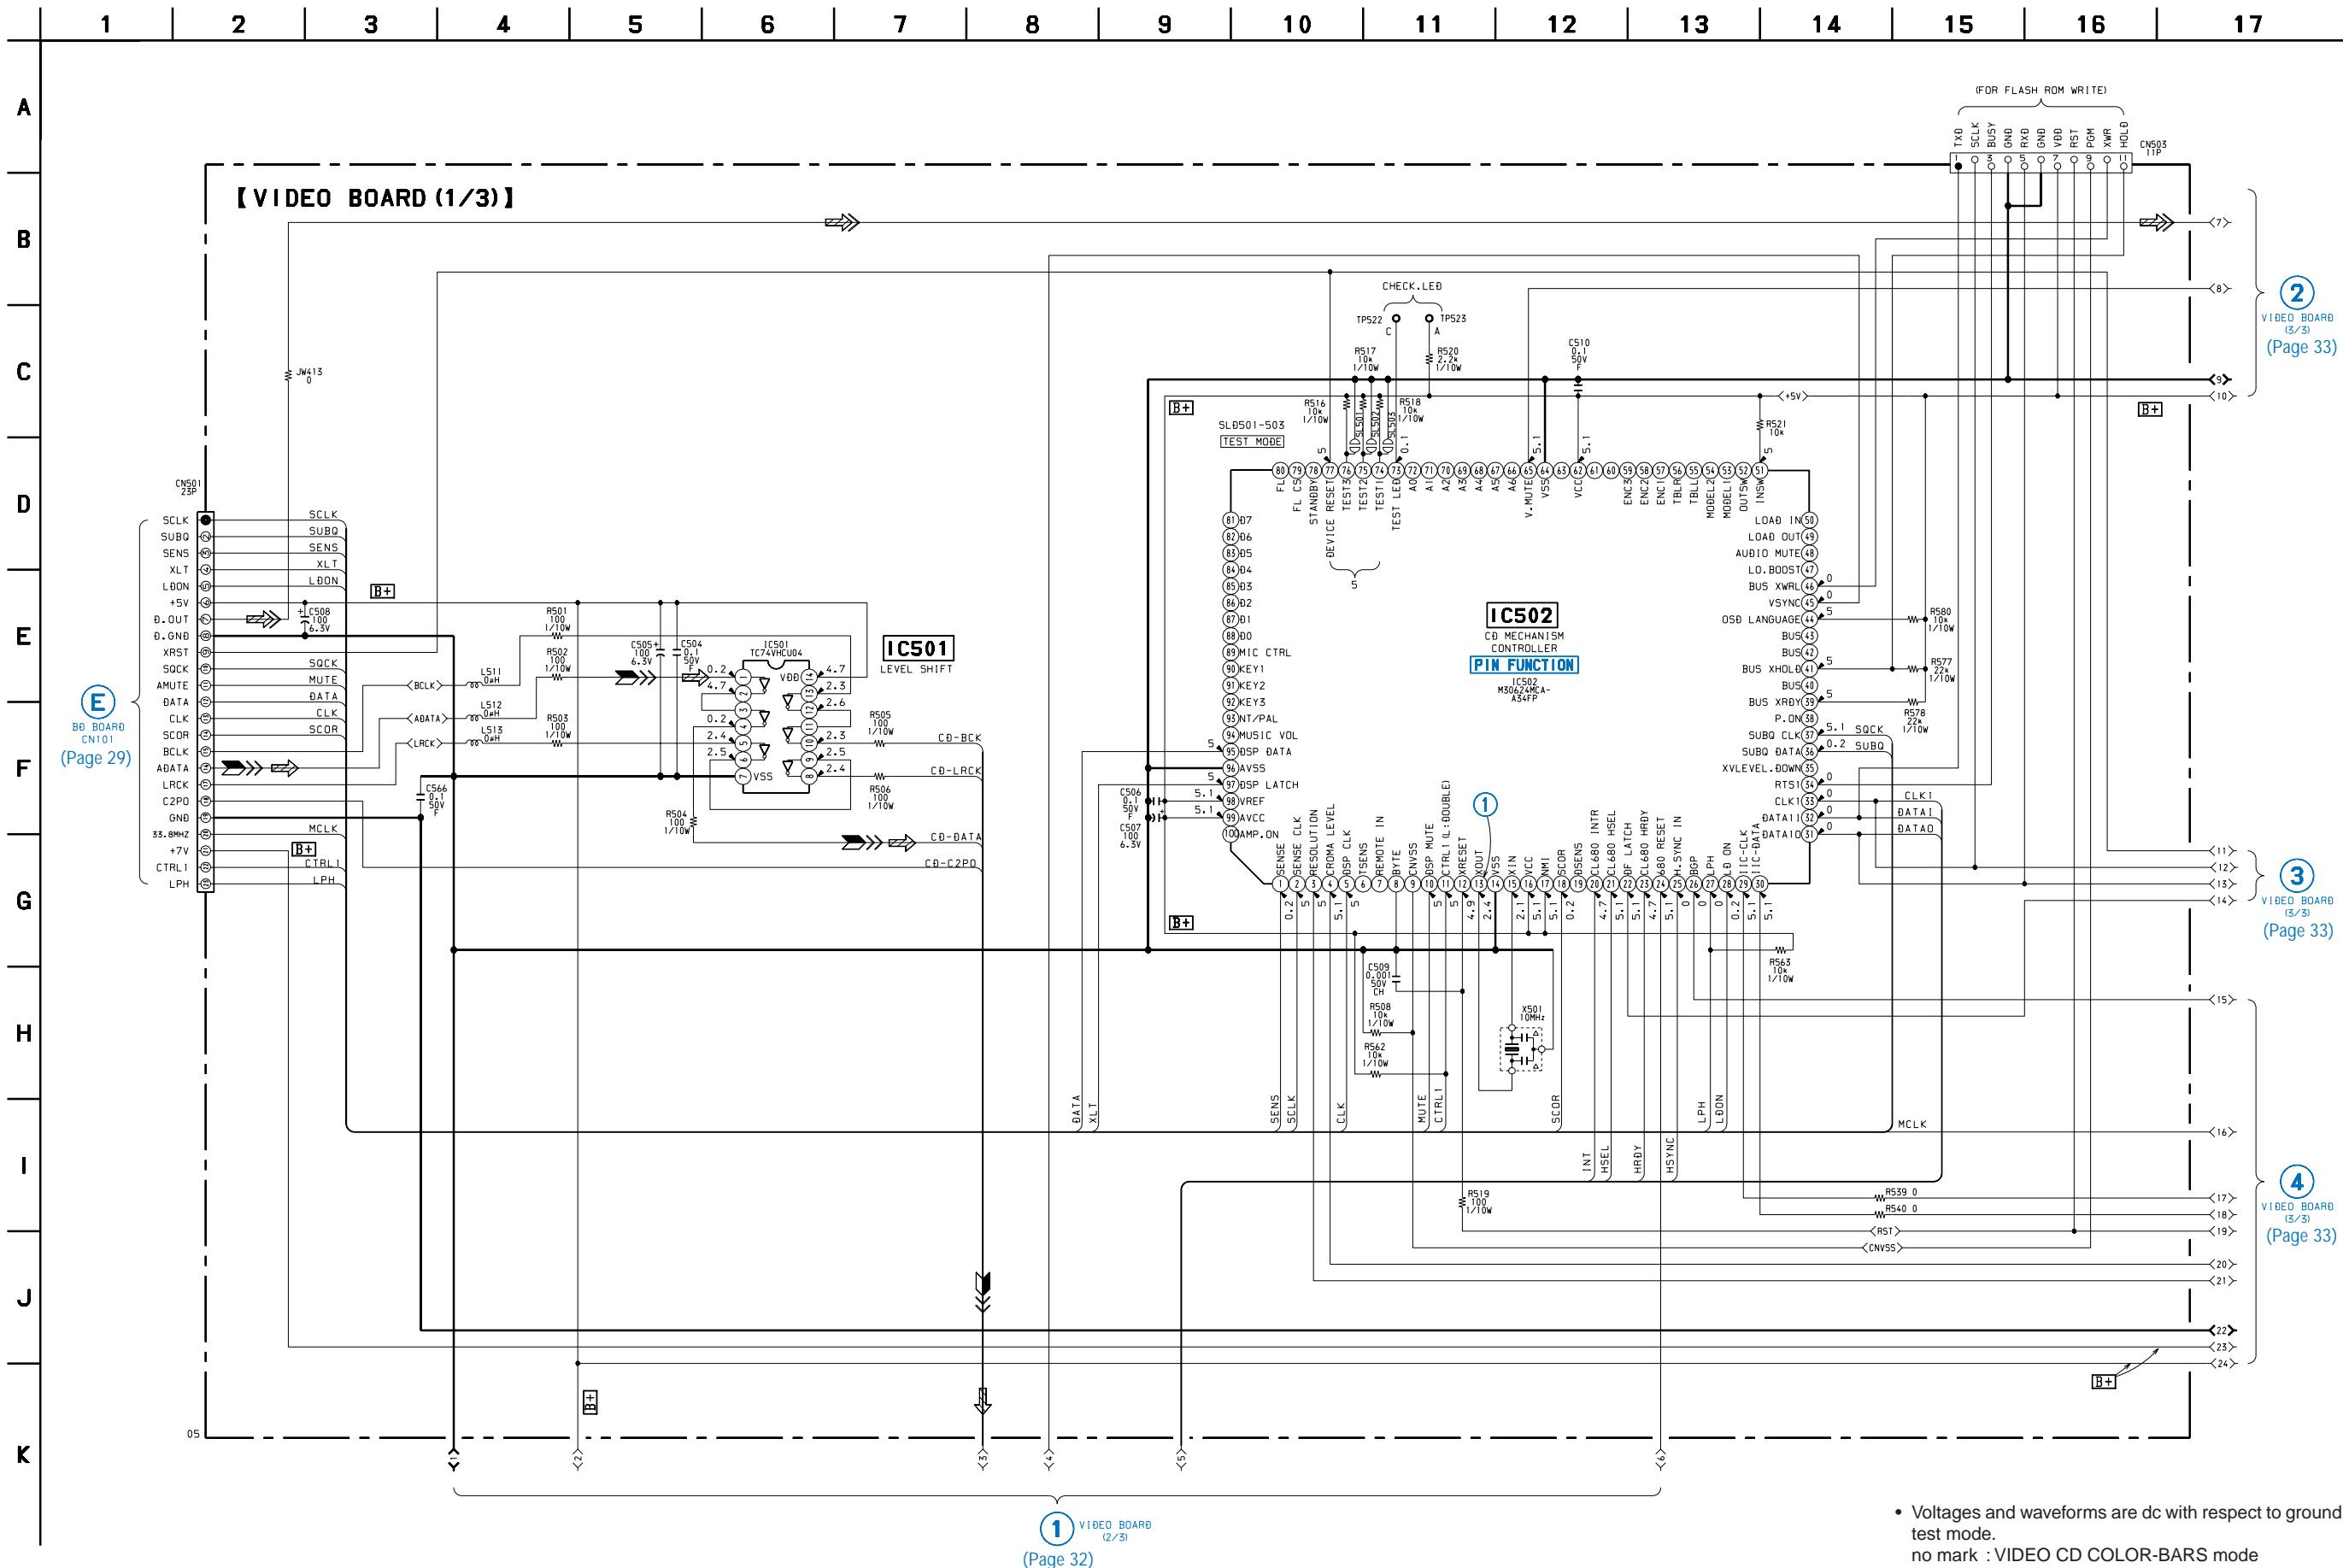


7-7. SCHEMATIC DIAGRAM – VIDEO (2/3) SECTION –

• See page 24 for Waveforms.

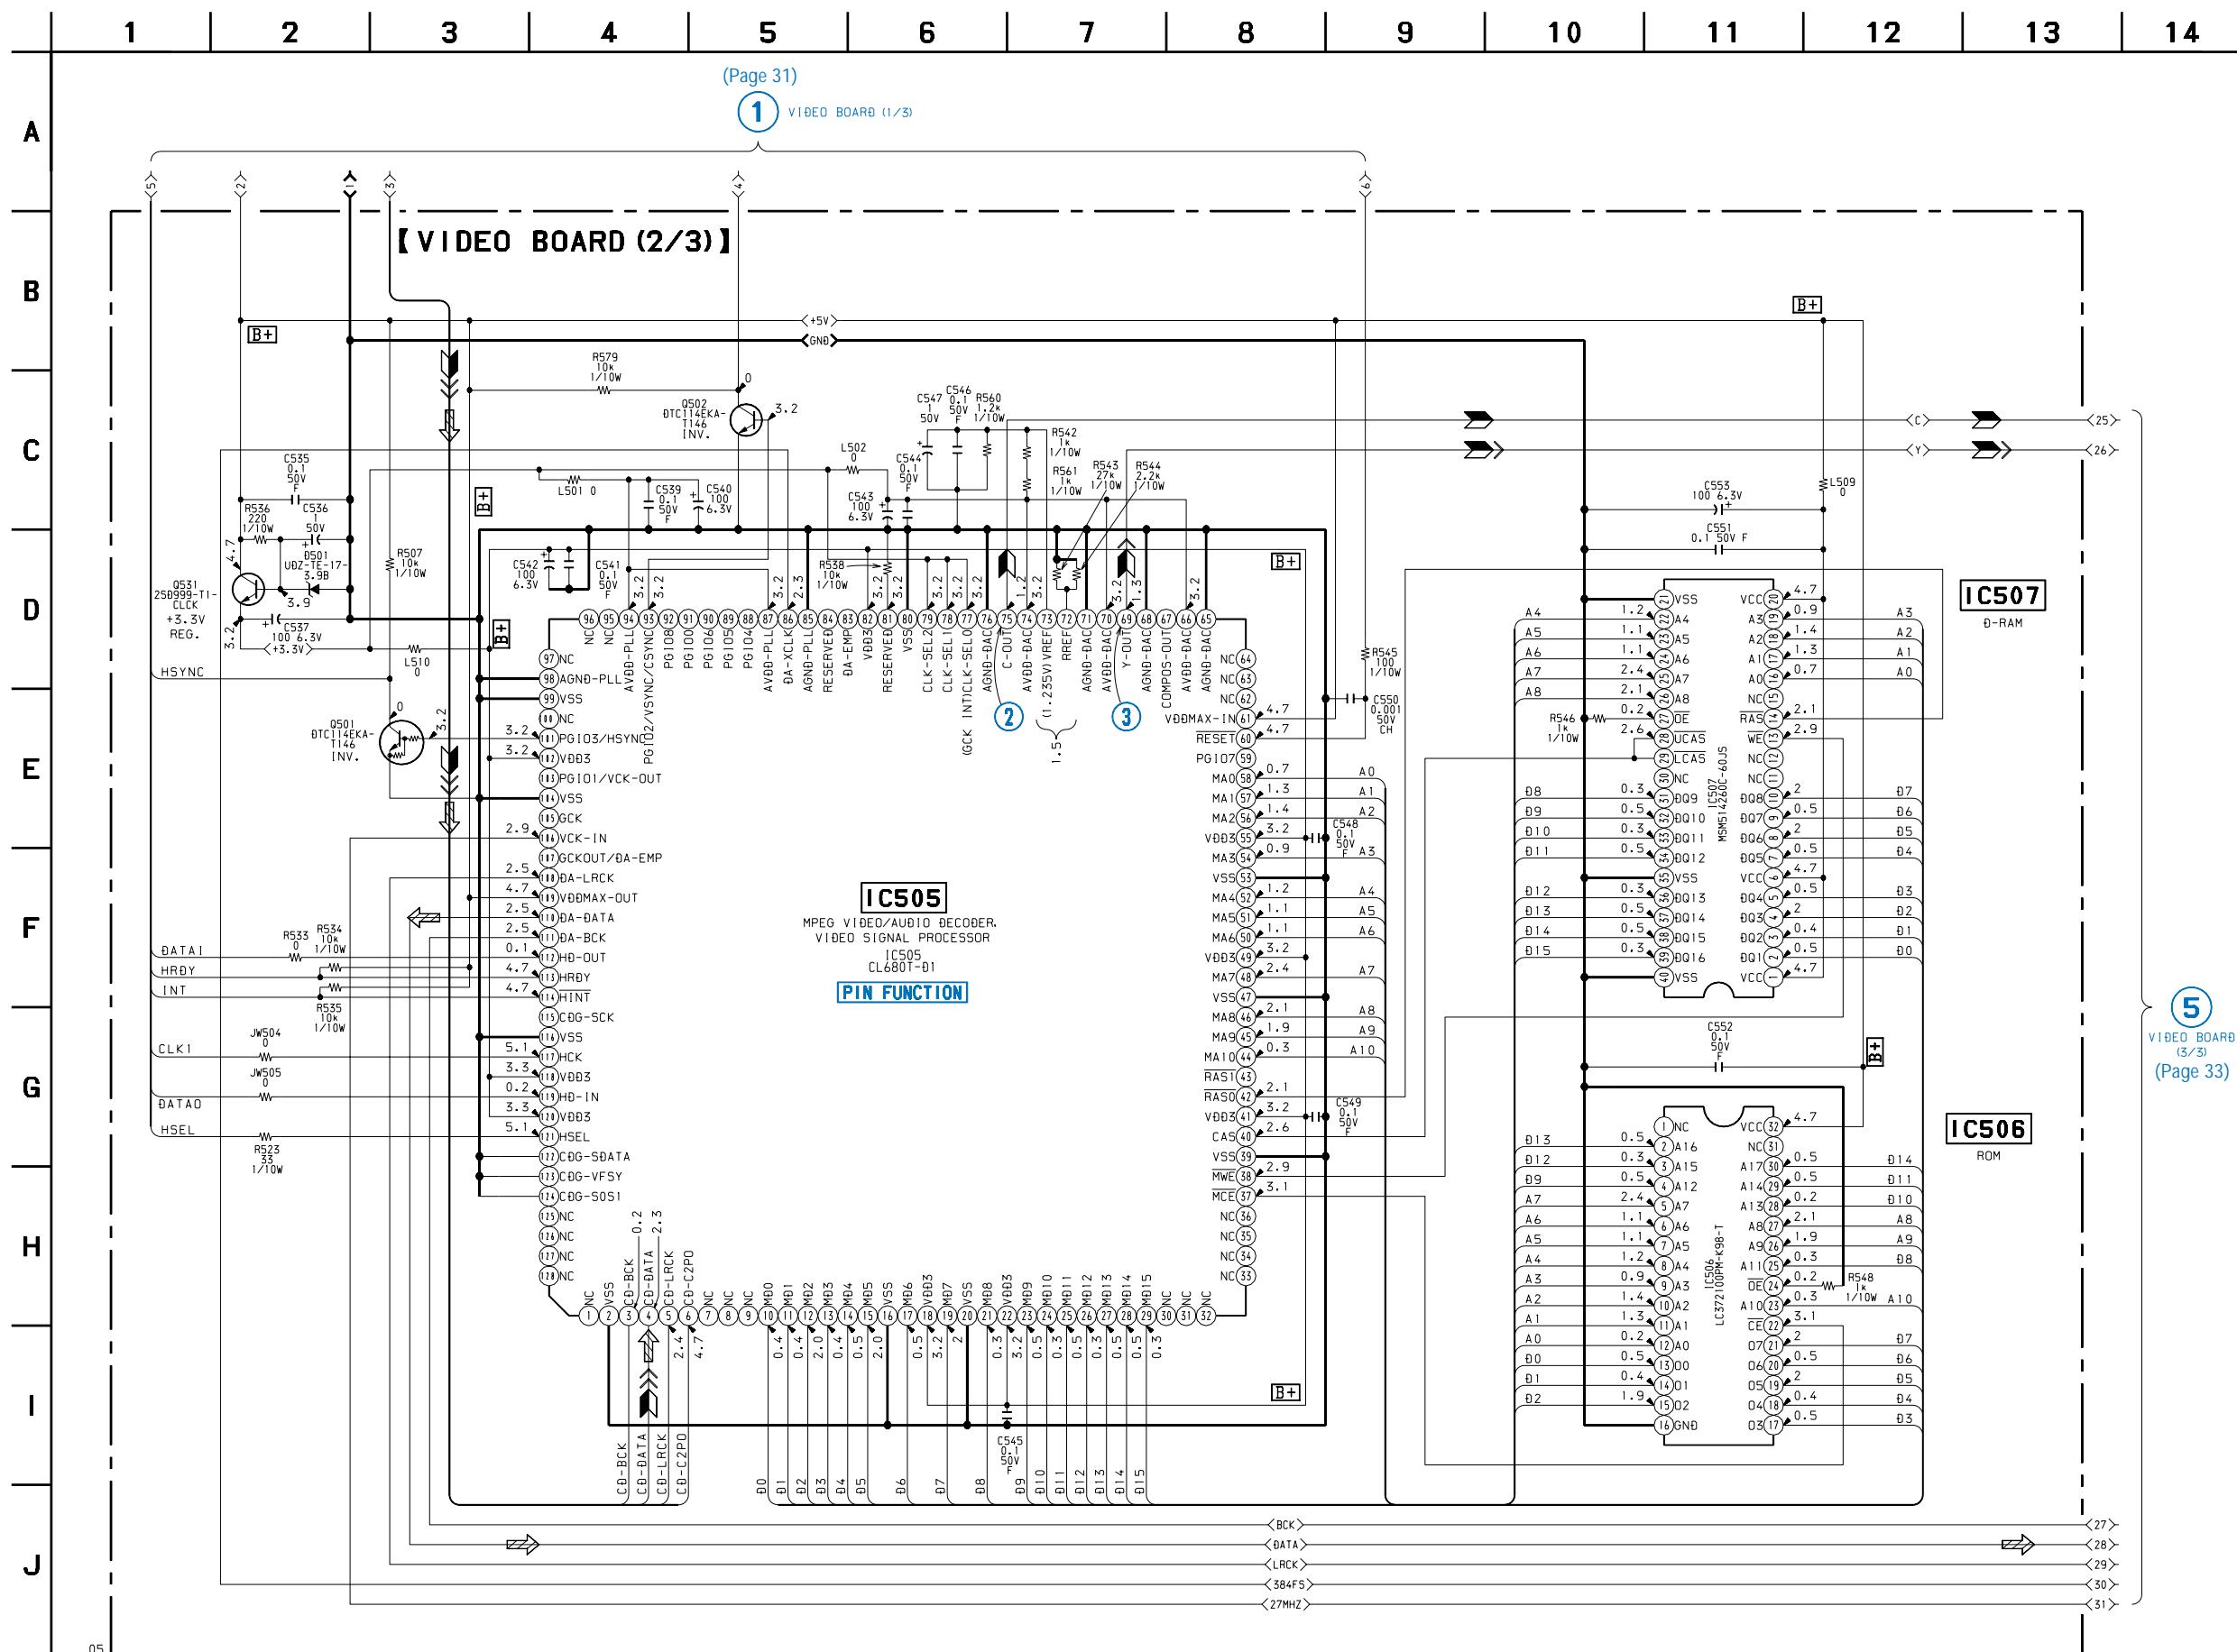


7-8. SCHEMATIC DIAGRAM – VIDEO (3/3) SECTION –

• See page 24 for Waveforms. • See page 57 for IC Block Diagrams.

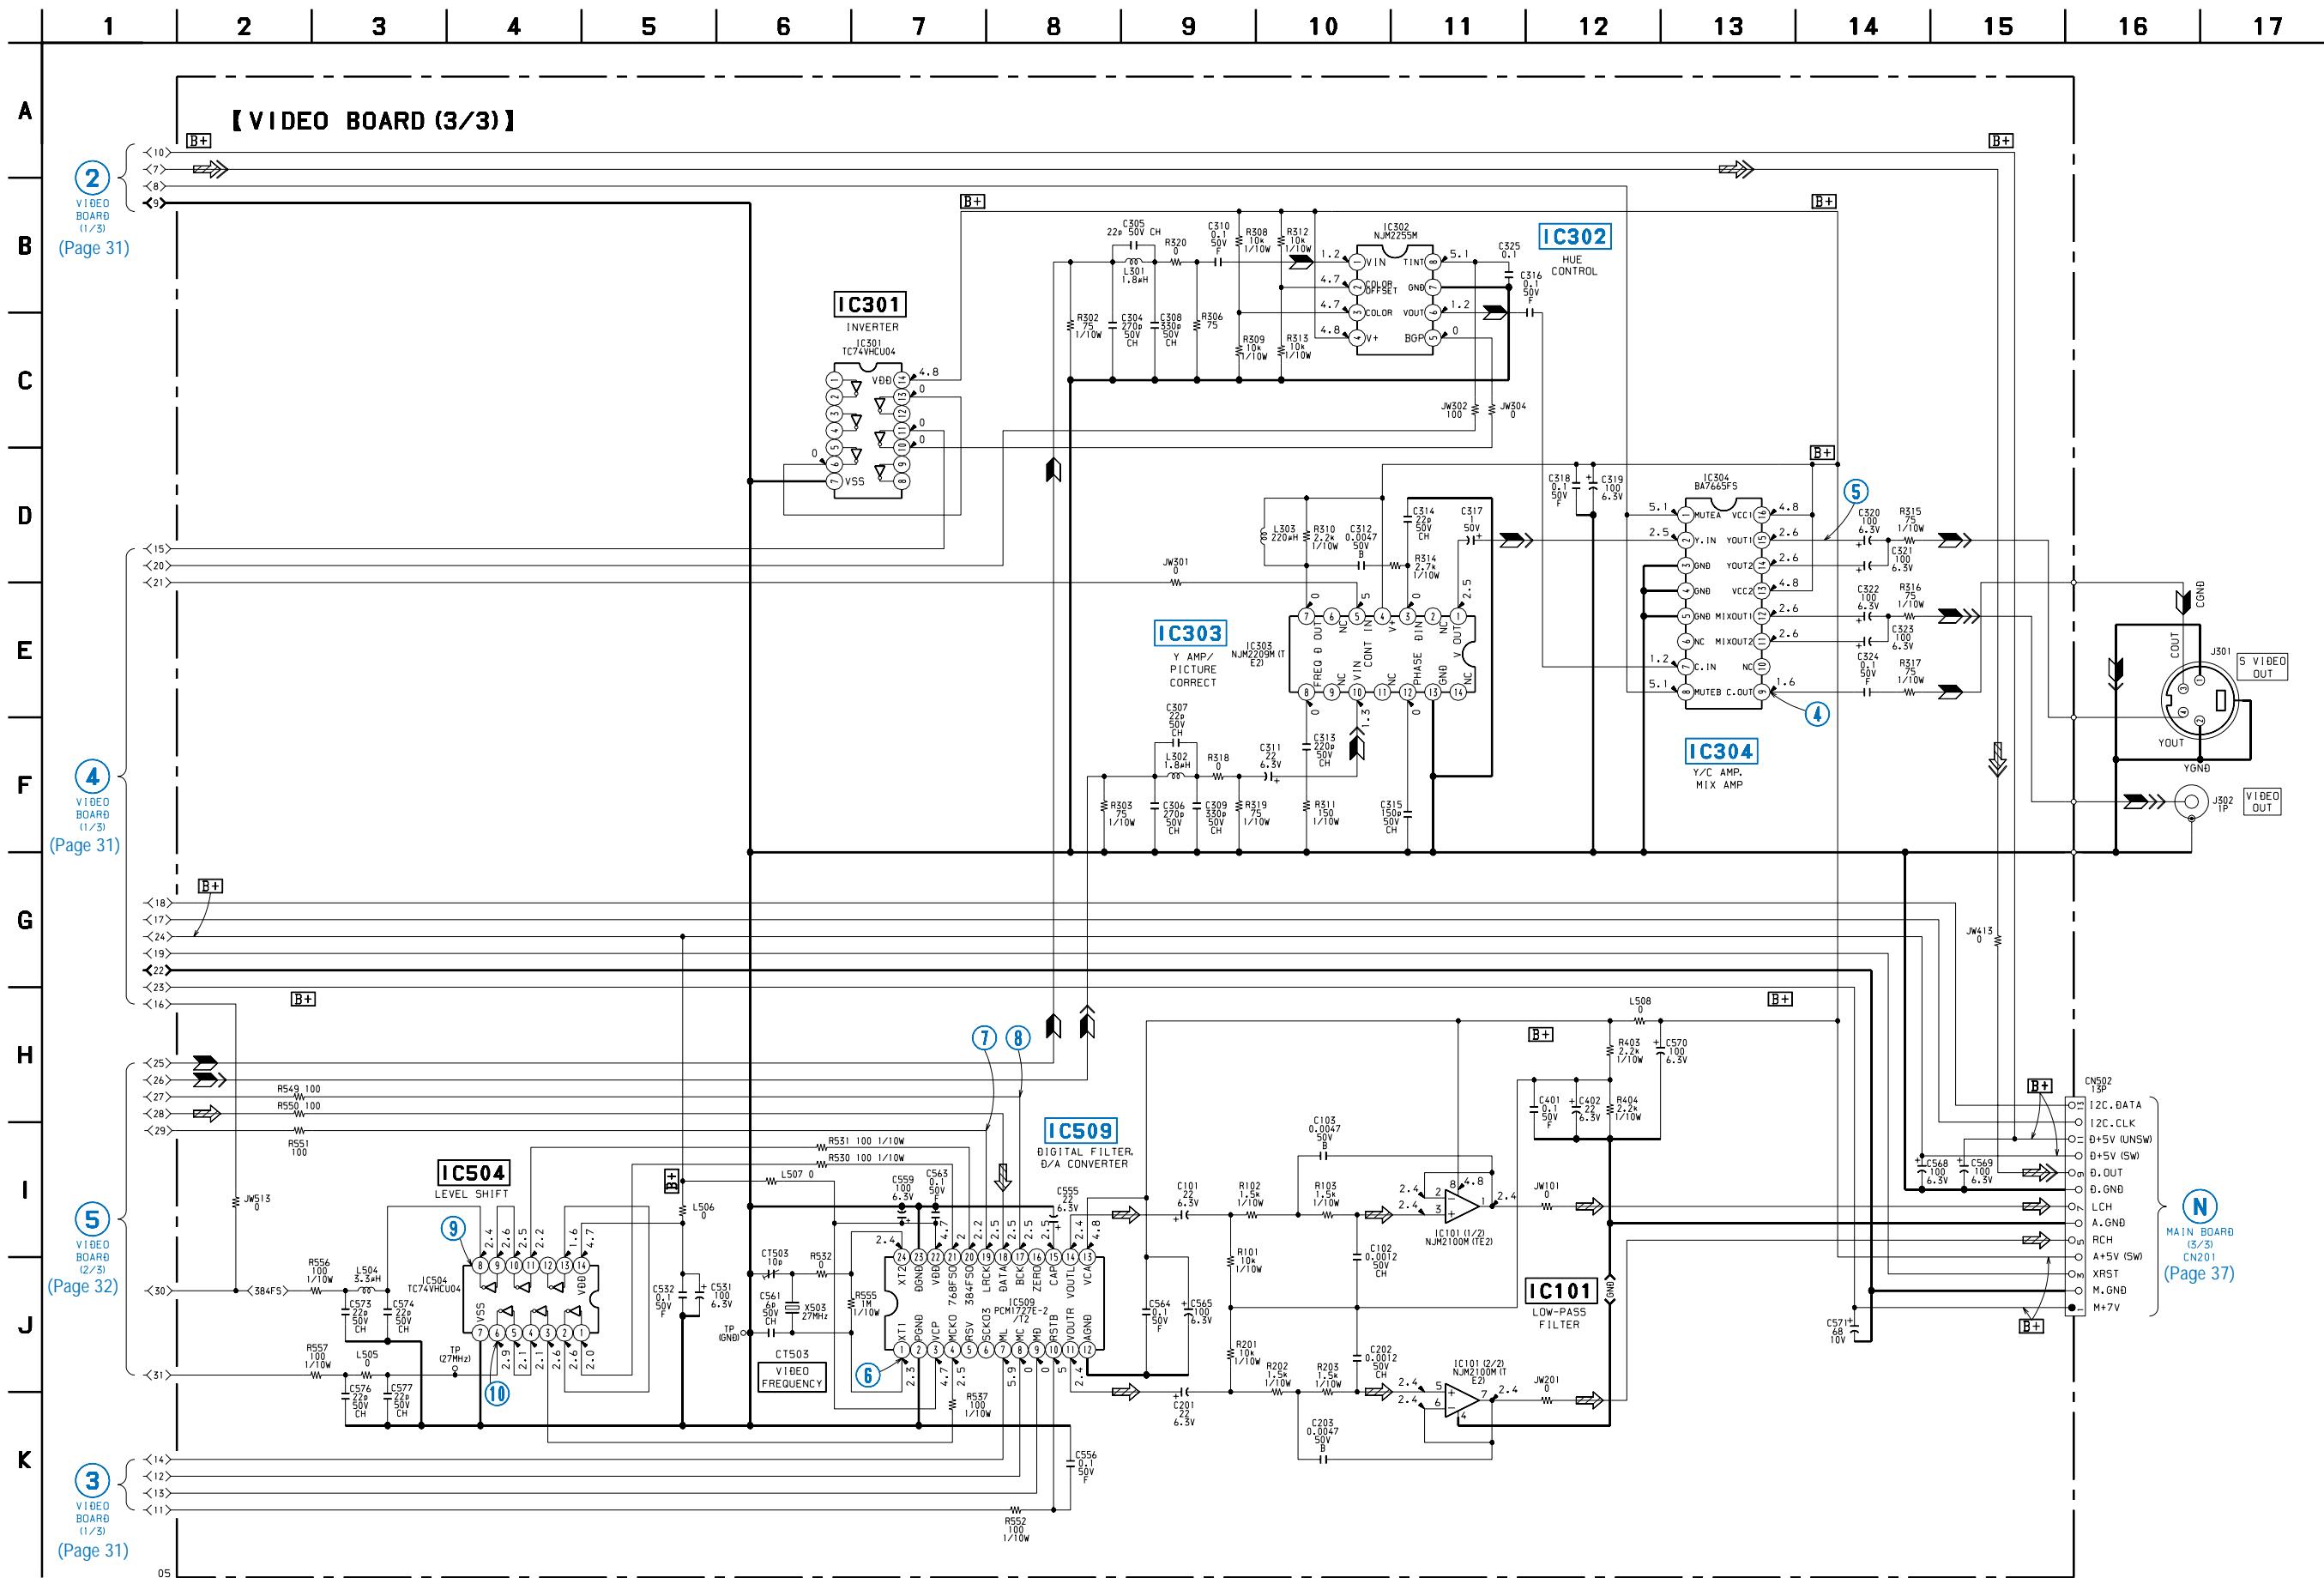


• Voltages and waveforms are dc with respect to ground in test mode.
no mark : VIDEO CD COLOR-BARS mode

Ref. No.	Location
D501	B-4
D502	B-4
D503	A-4
D504	B-3
D505	A-4
D506	A-4
D507	A-4
D508	C-1
D511	C-1
D601	C-9
D641	D-11
D651	C-8
D801	H-10
D822	F-10
D824	F-9
D841	G-10
D861	H-8
D891	H-11
D892	H-11
D901	H-9
D902	H-9
D903	H-9
D904	H-9
D906	H-9
D907	I-9
D908	I-9
D909	I-9
D910	I-6
D911	I-6
D952	G-6
D953	G-6
IC101	E-7
IC102	C-5
IC103	B-5
IC104	C-6
IC201	A-11
IC301	G-5
IC302	H-3
IC303	F-2
IC304	G-3
IC401	B-2
IC501	B-4
IC601	C-10
IC651	A-9
IC911	C-8
IC921	H-7
IC931	H-5
IC951	G-6
IC961	H-6
Q101	D-6
Q102	D-5
Q103	I-7
Q141	D-4
Q151	D-6
Q152	C-5
Q153	I-7
Q301	H-4
Q302	I-4
Q303	I-5
Q304	H-4
Q305	H-5
Q391	D-1
Q392	D-1
Q393	D-2
Q394	D-1
Q395	E-2
Q396	E-2
Q397	D-1
Q501	B-4
Q503	D-3
Q504	D-3
Q505	D-3
Q601	C-9
Q602	A-11
Q611	D-9
Q612	D-9
Q821	H-10
Q822	H-10
Q823	G-10
Q824	G-10
Q825	G-10
Q828	F-10
Q829	G-10
Q831	G-11
Q832	G-11
Q861	H-8
Q862	G-10
Q863	G-9
Q891	F-10
Q892	G-10
Q911	C-8
Q912	D-8

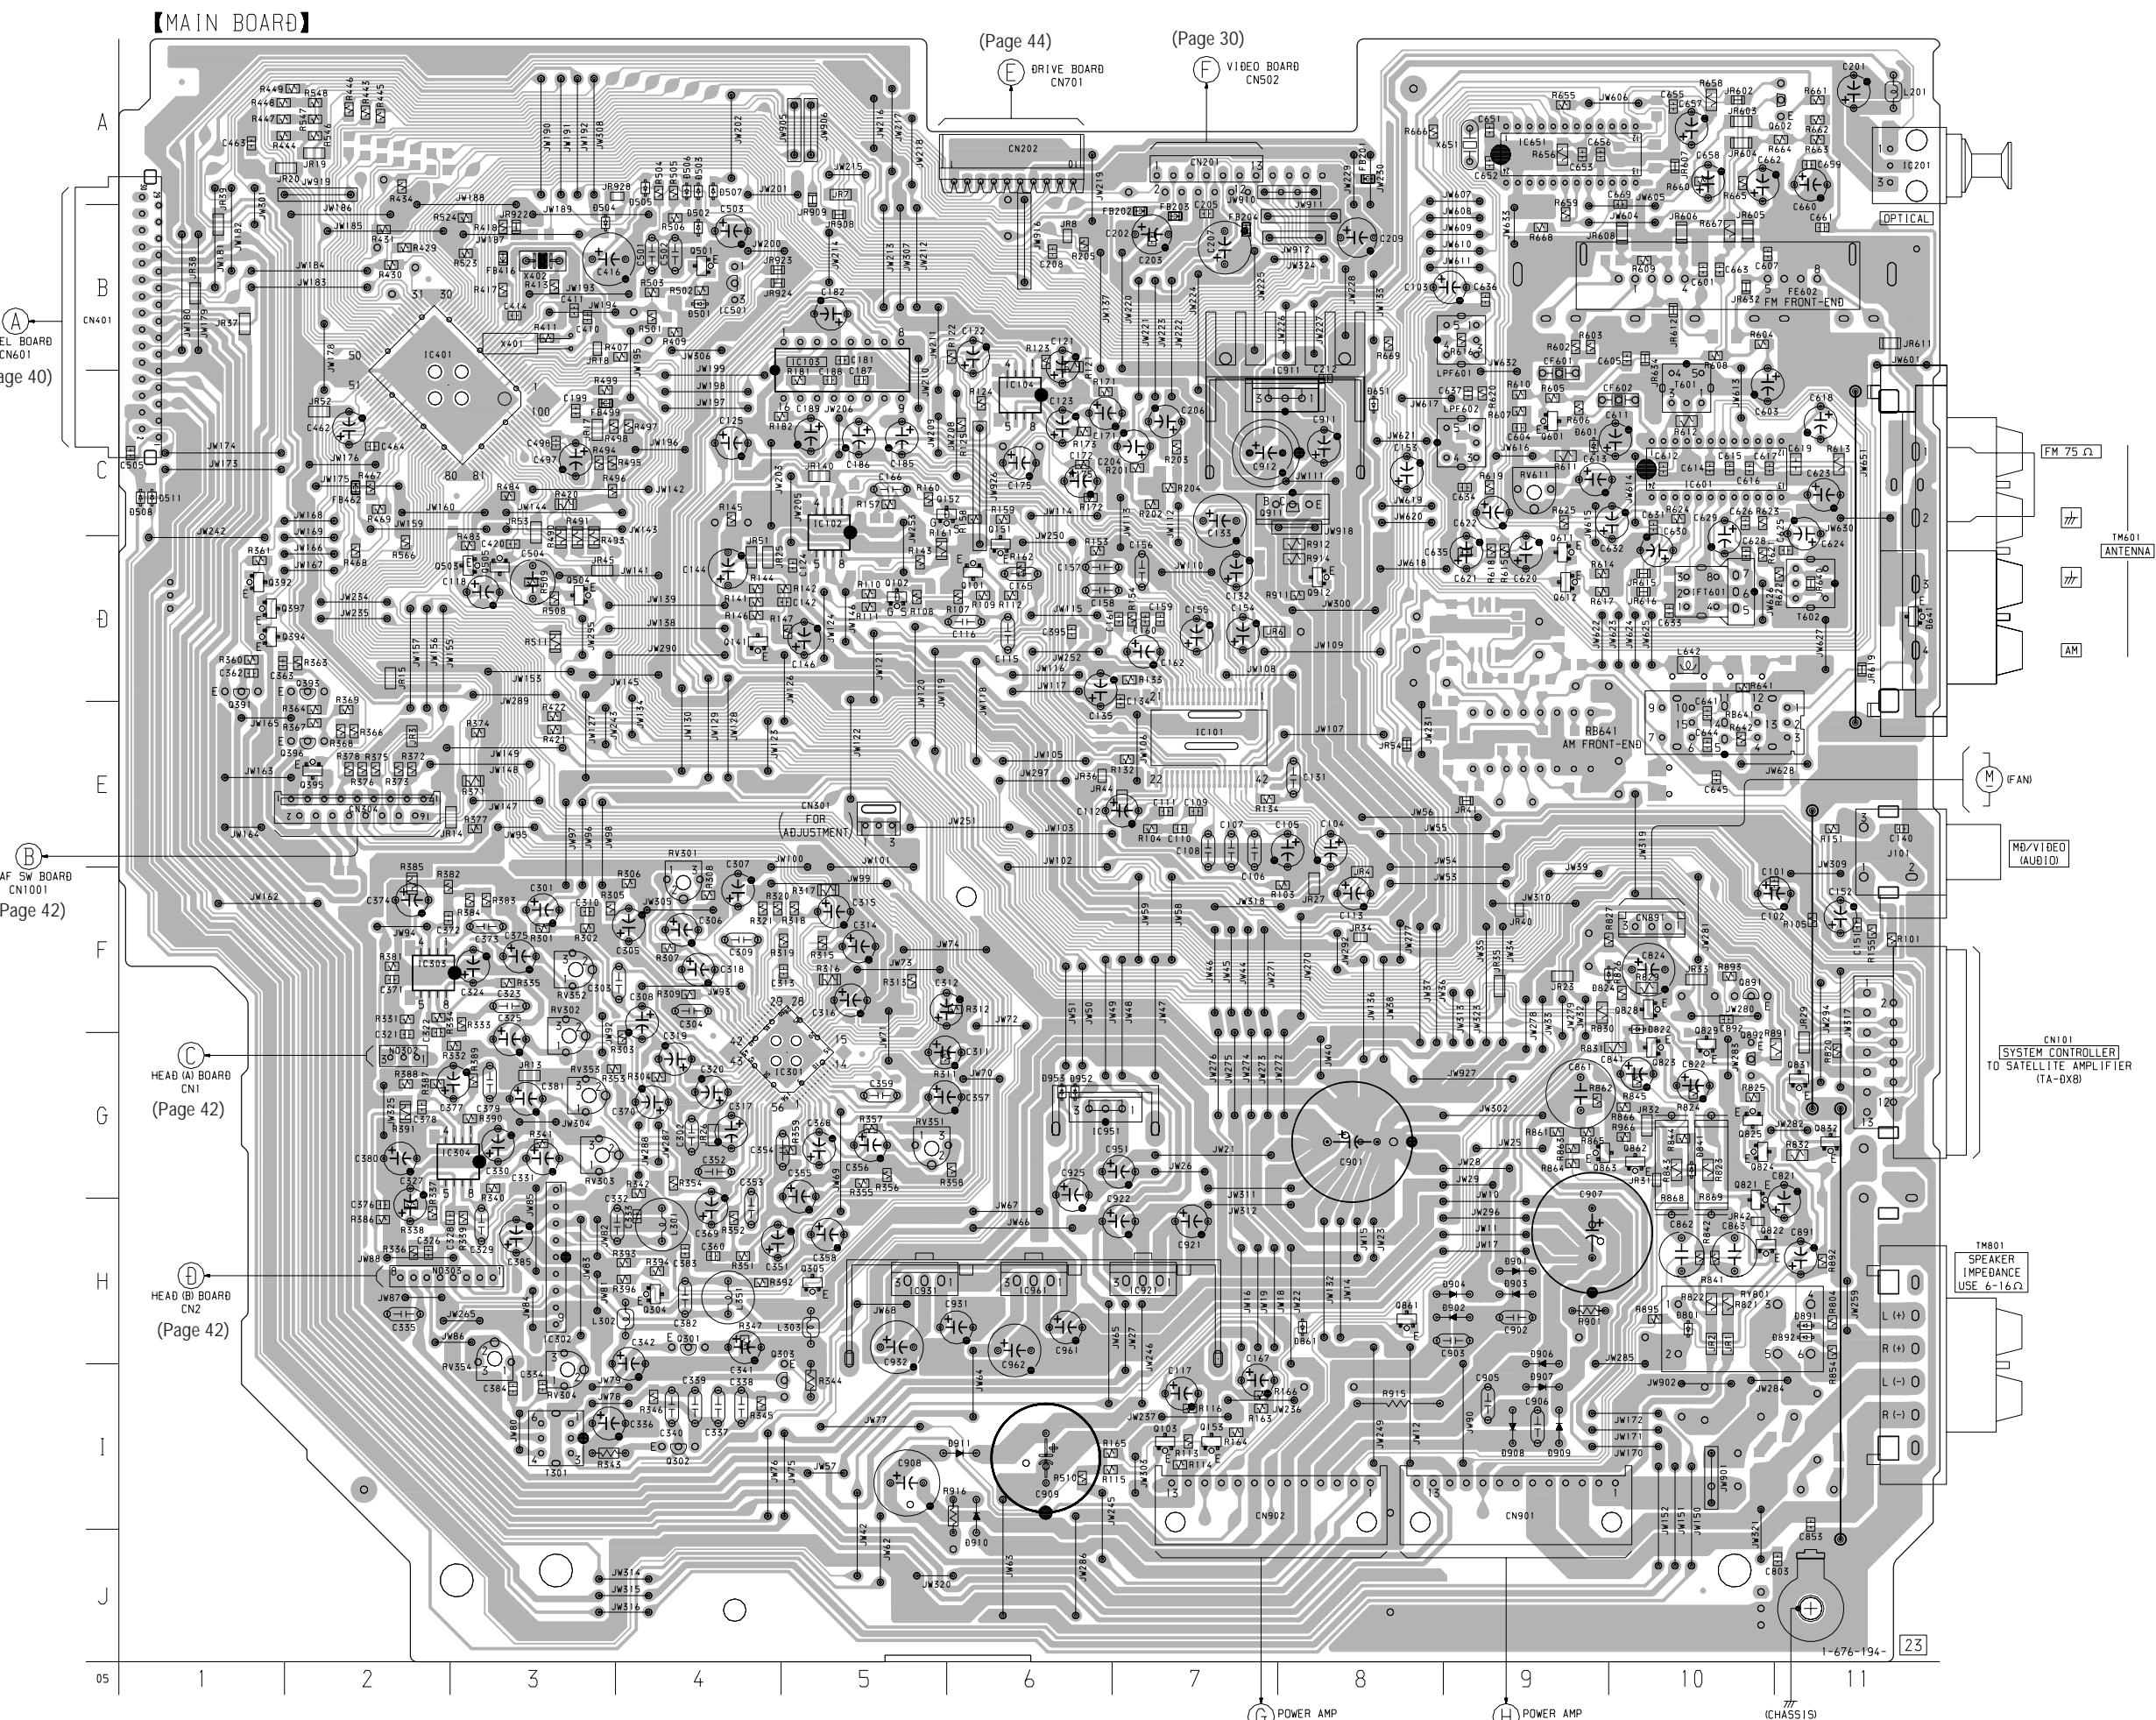

7-10. SCHEMATIC DIAGRAM – MAIN (1/3) SECTION –

- See page 57 for IC Block Diagrams.

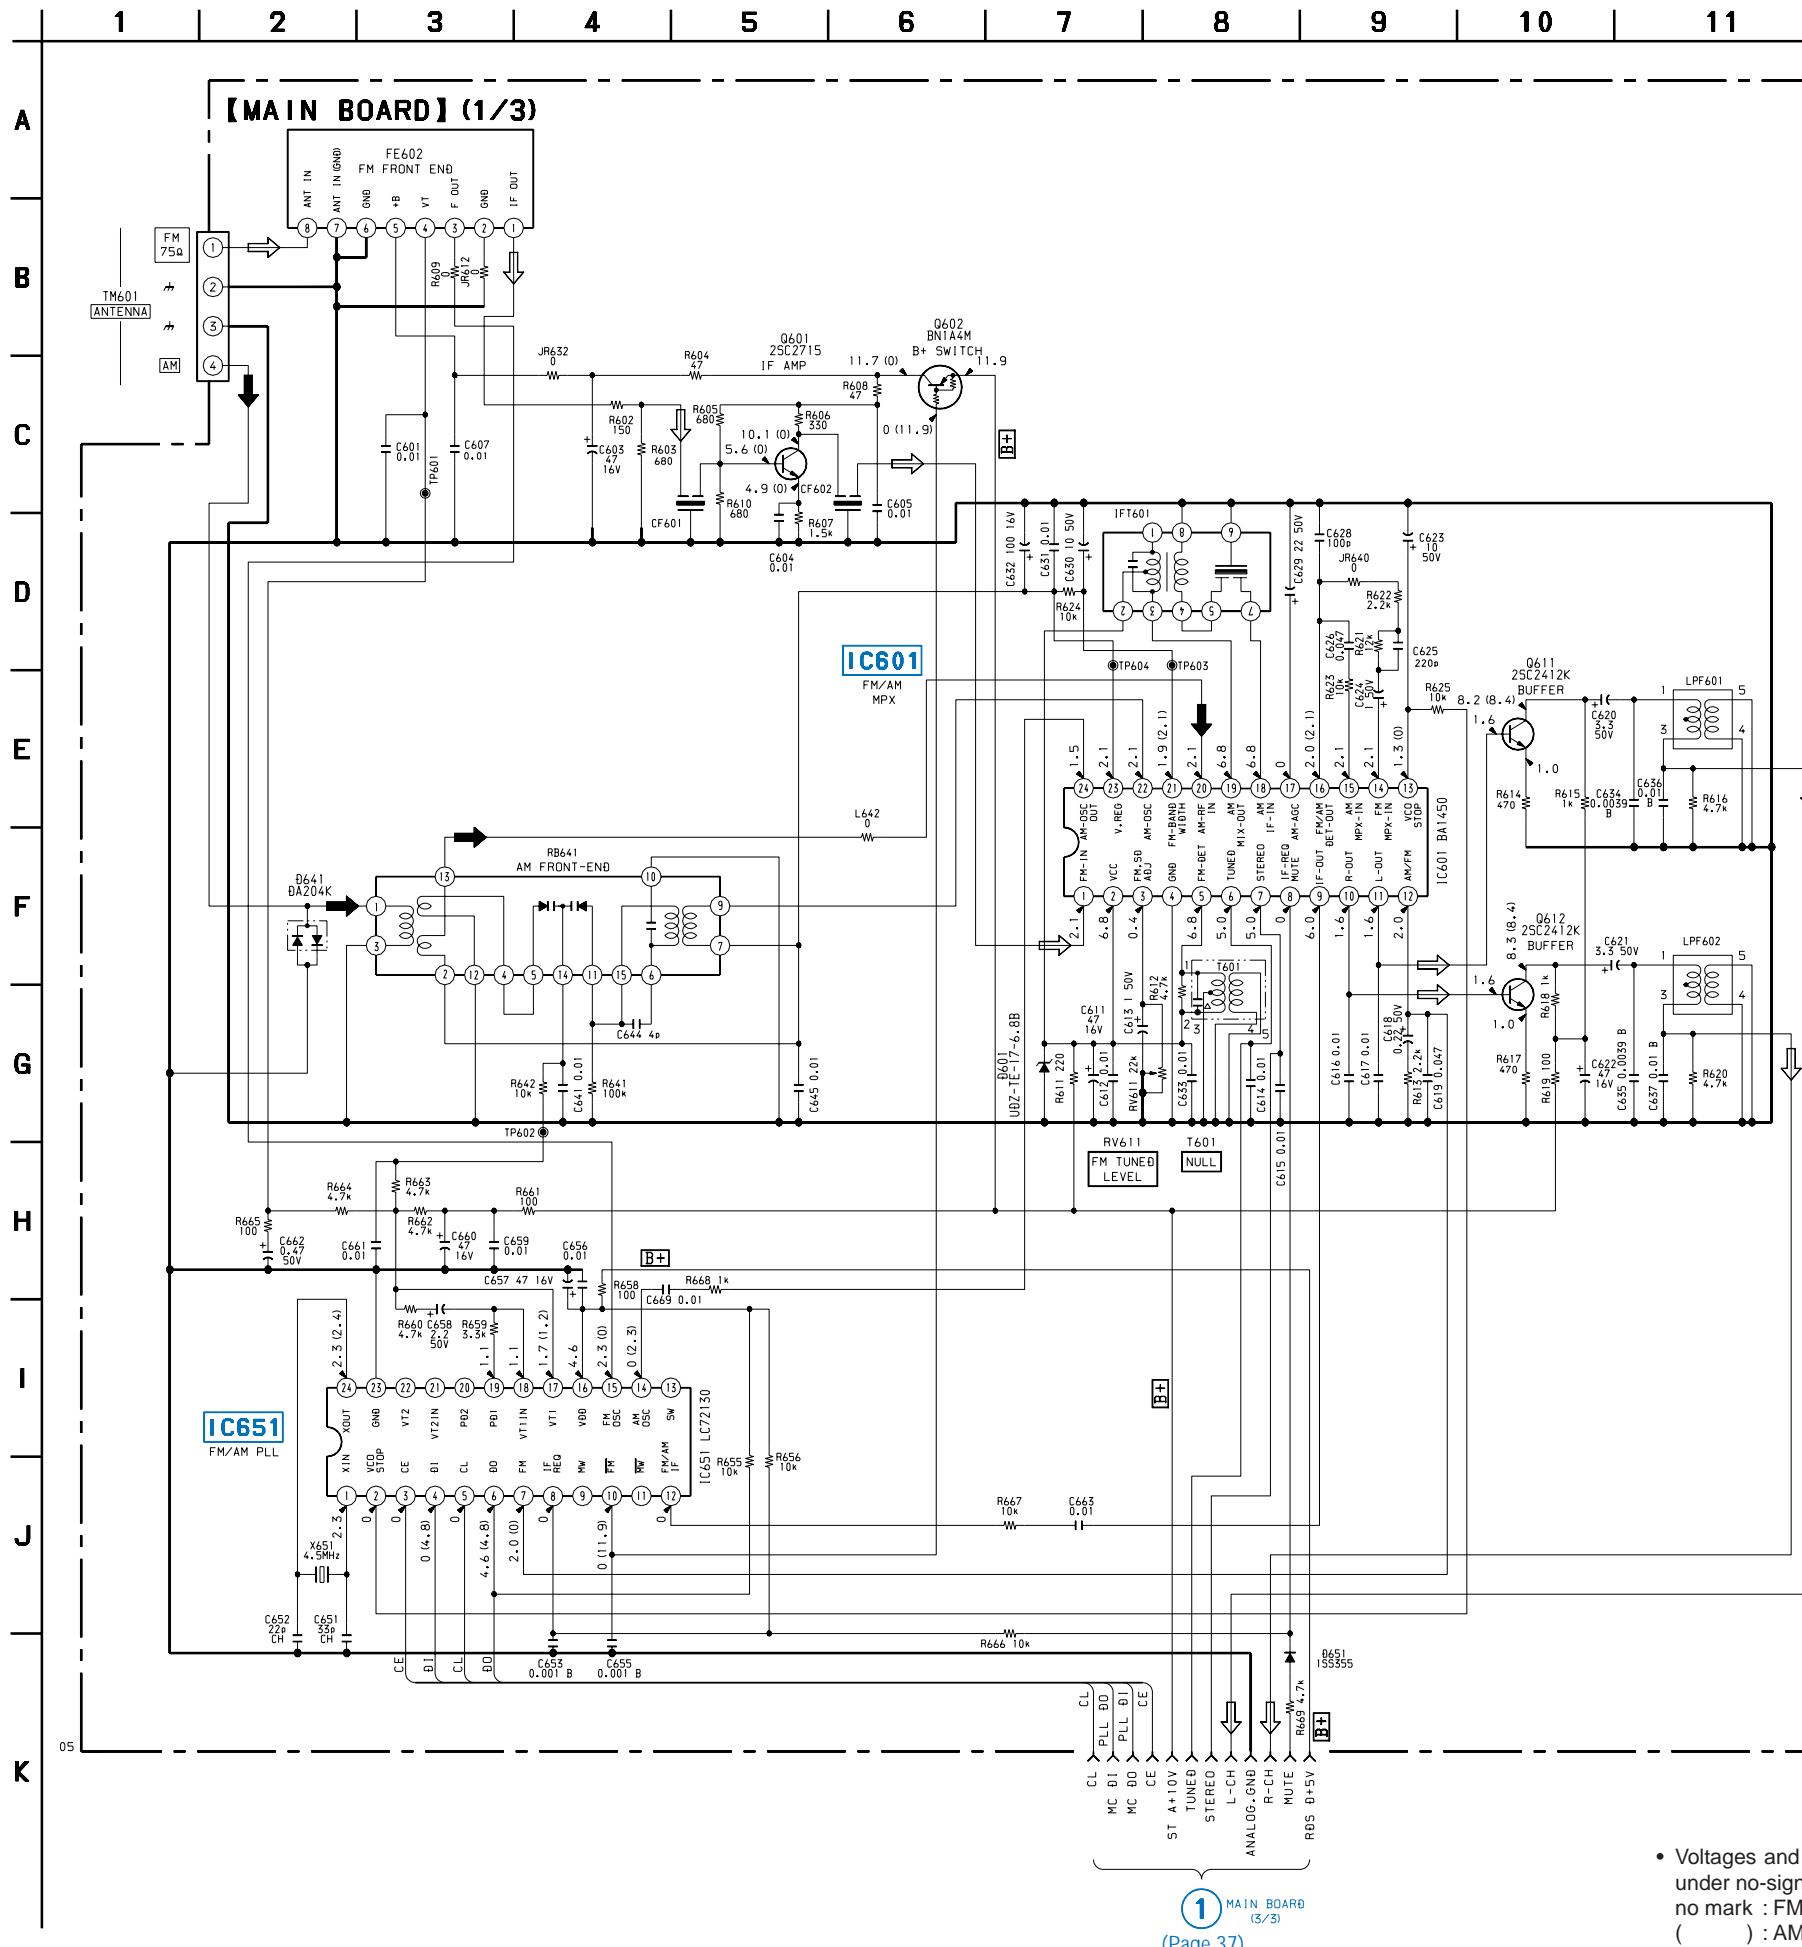


- Voltages and waveforms are dc with respect to ground under no-signal (detuned) conditions.
no mark : FM
() : AM

7-11. SCHEMATIC DIAGRAM – MAIN (2/3) SECTION –

- See page 24 for Waveforms.
- See page 57 for IC Block Diagrams.

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23

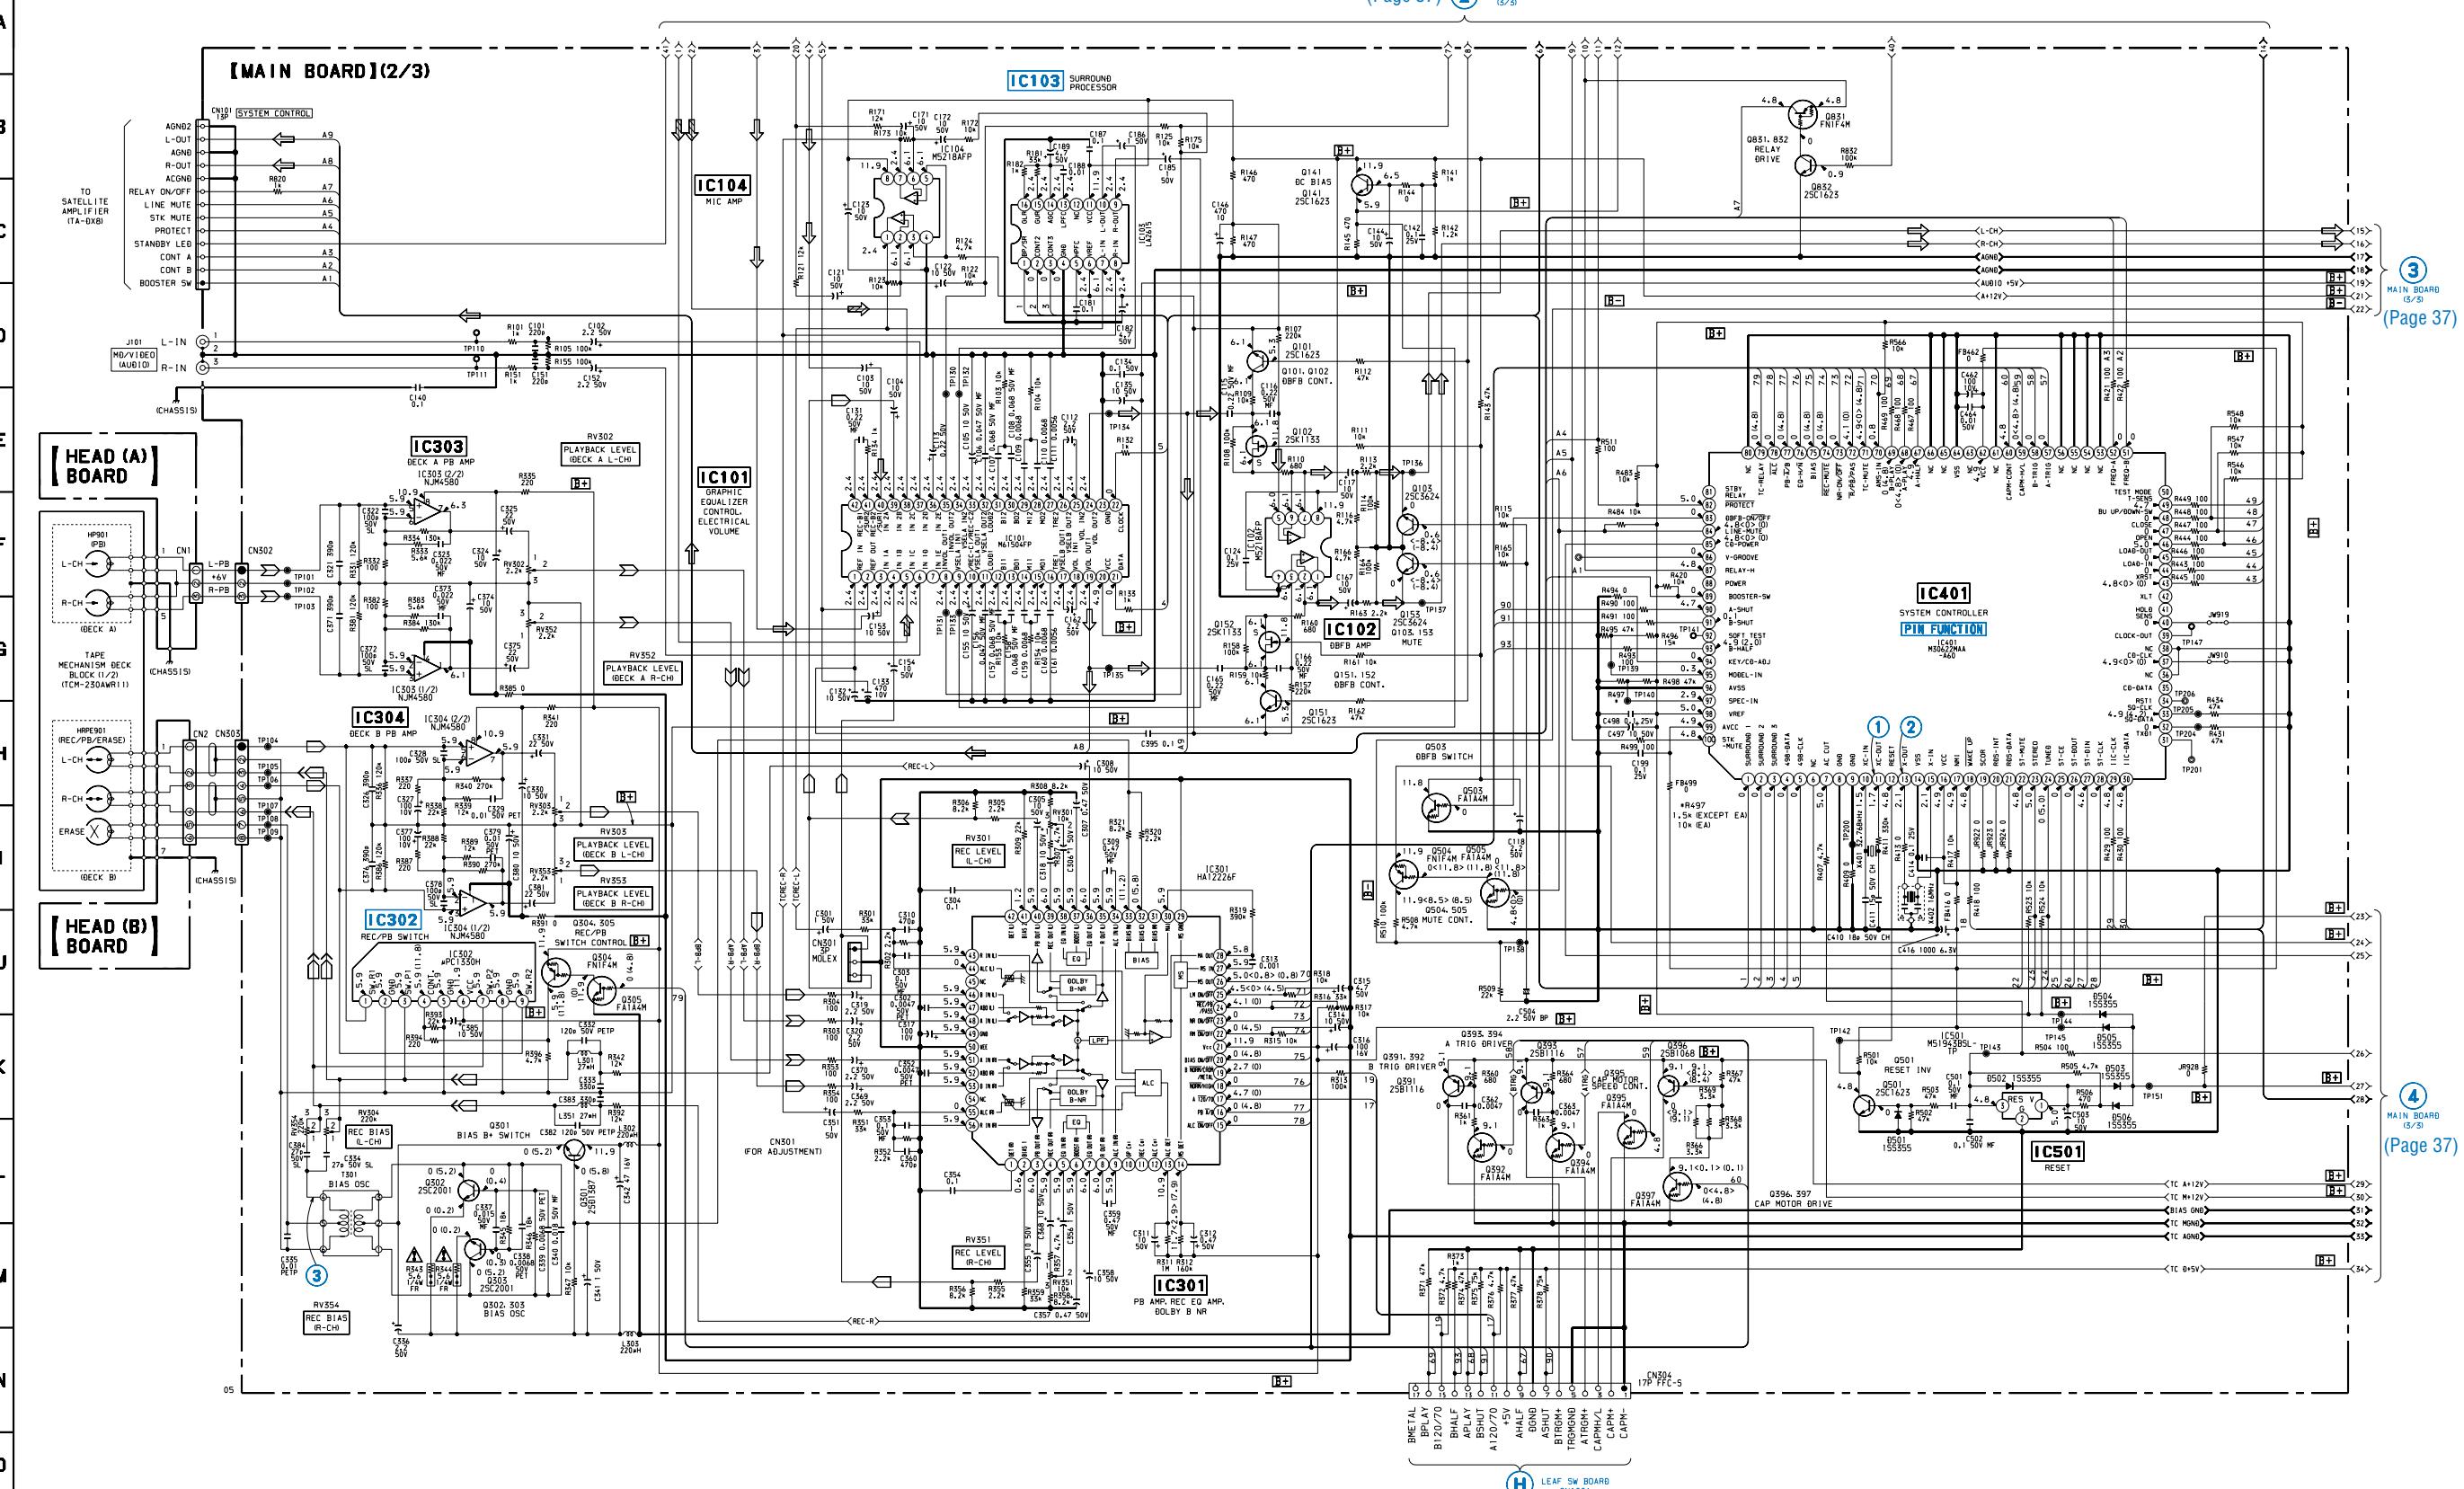

- Voltages and waveforms are dc with respect to ground under no-signal conditions.


no mark : CD (STOP)

() : REC

< > : TAPE PB

The components identified by mark \triangle or dotted line with mark \triangle are critical for safety.
Replace only with part number specified.

7-12. SCHEMATIC DIAGRAM – MAIN (3/3) SECTION –

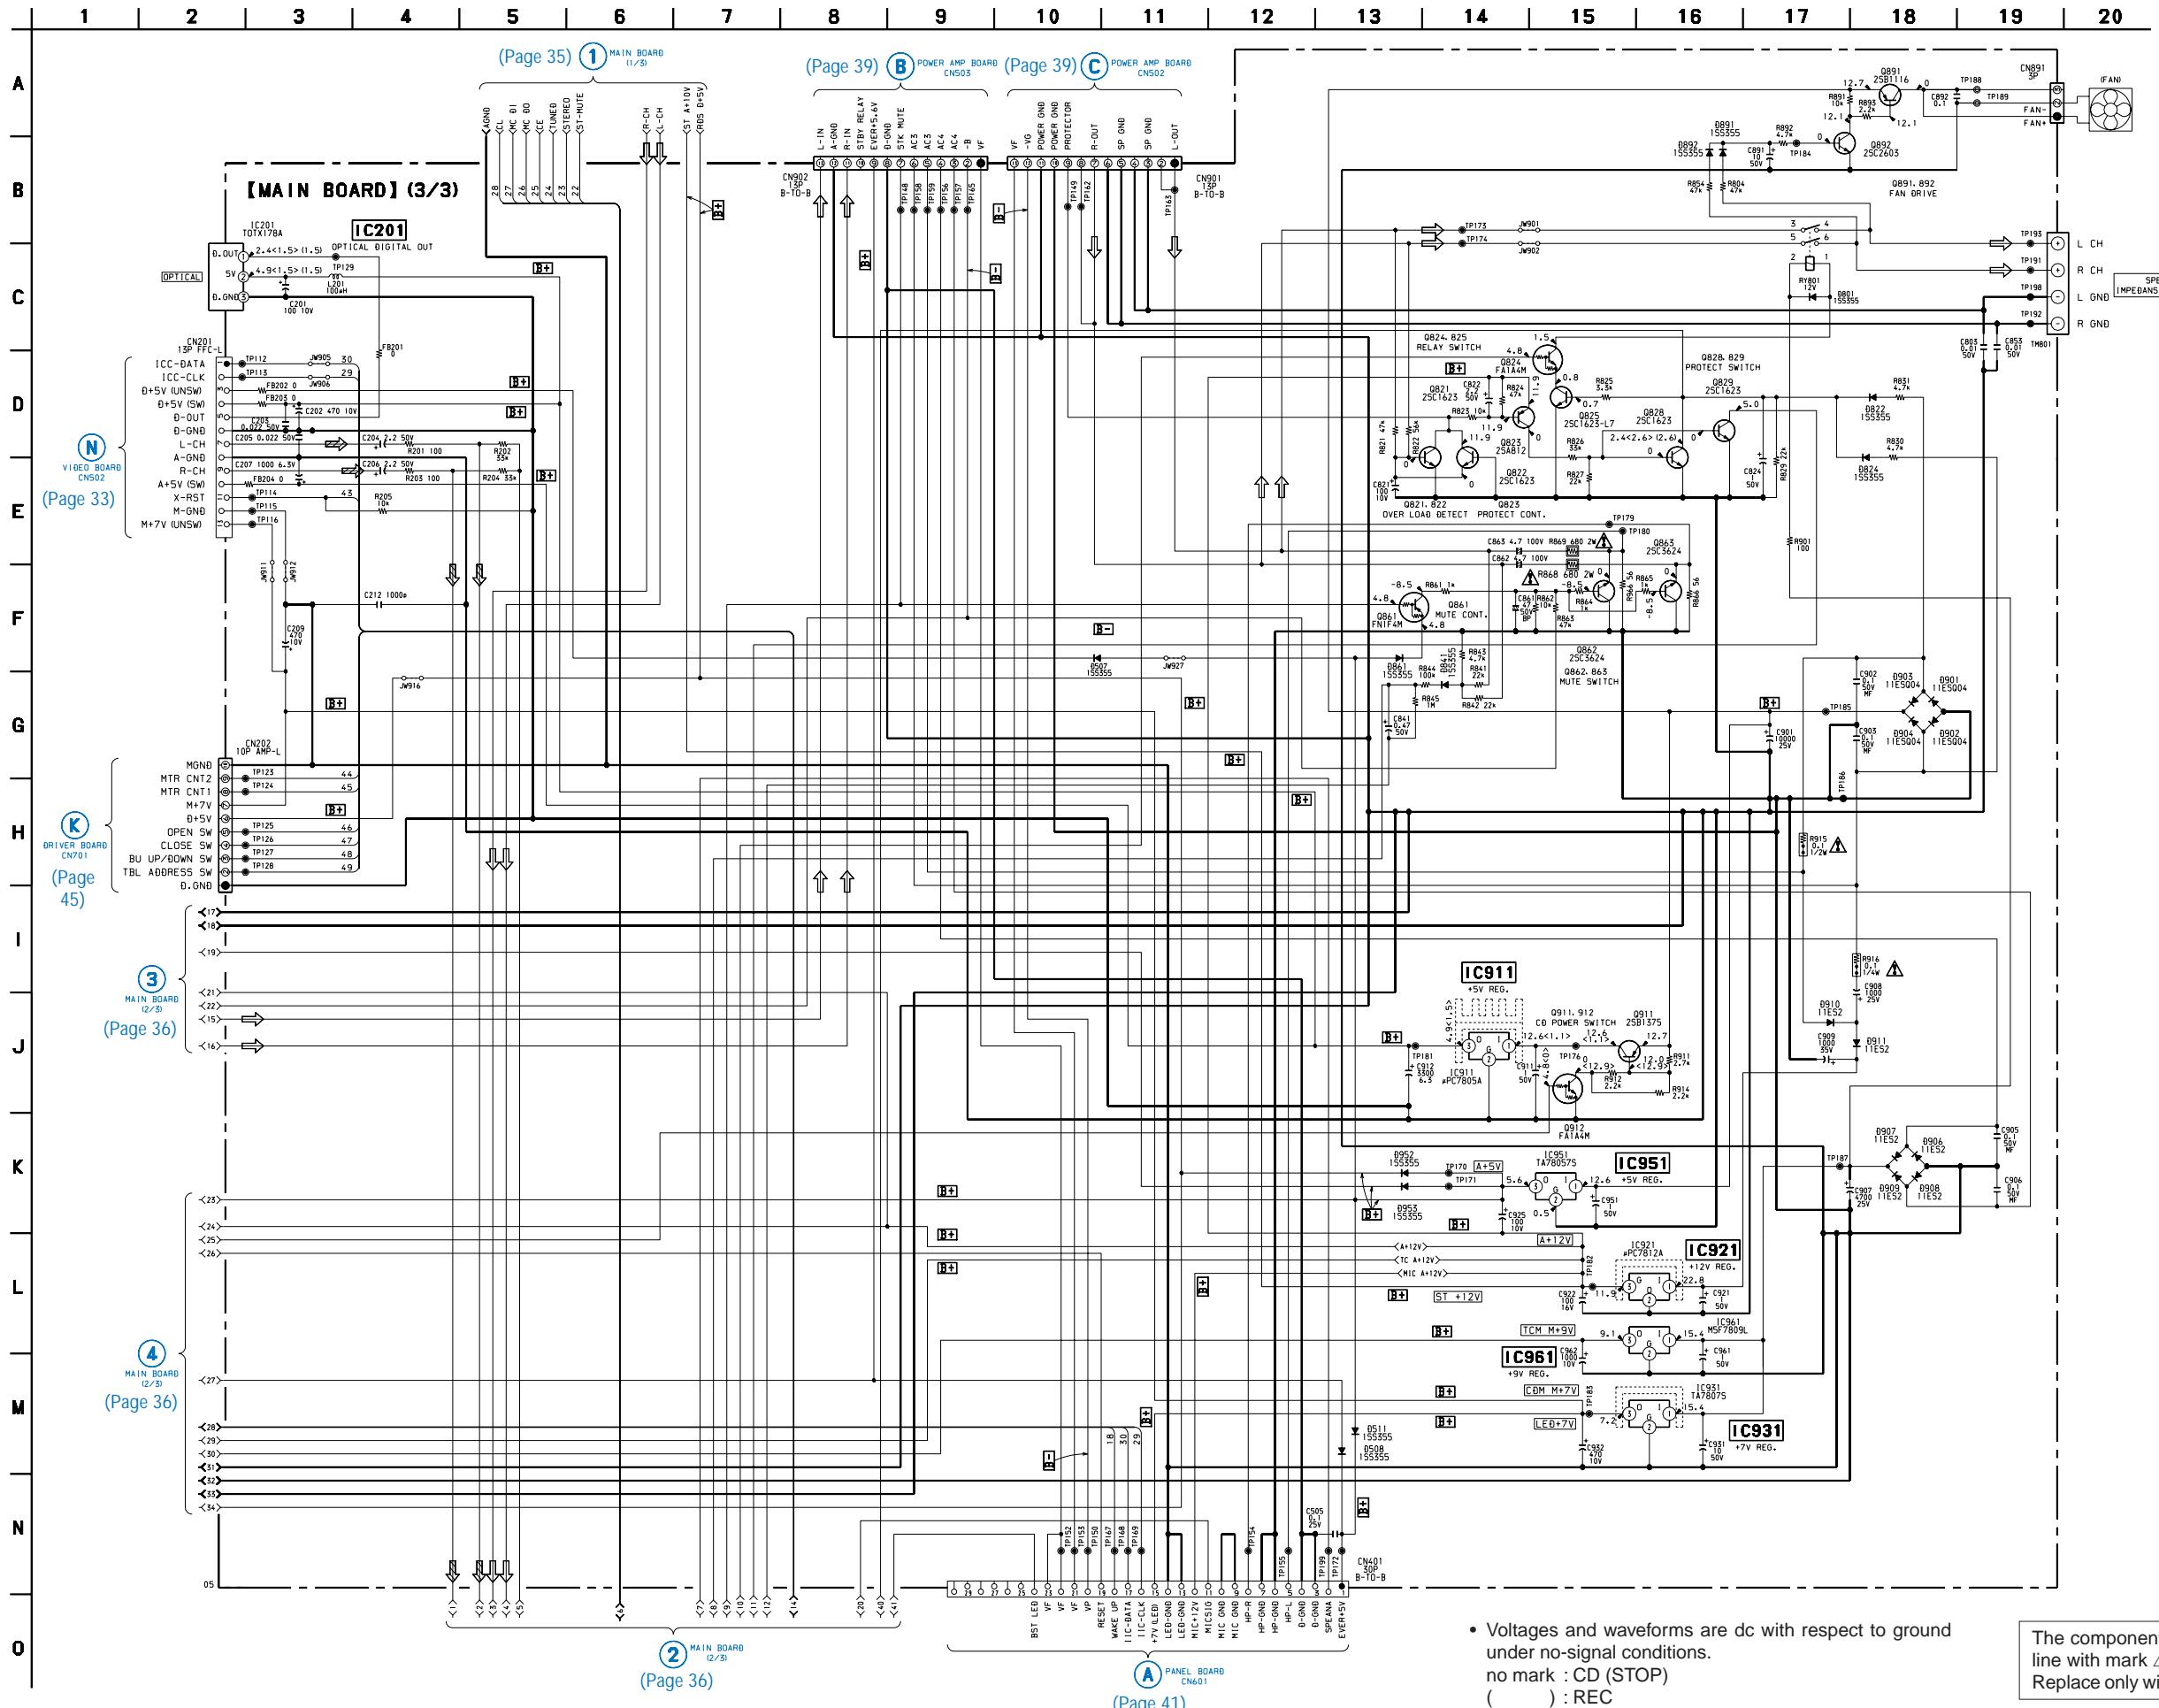

• Voltages and waveforms are dc with respect to ground under no-signal conditions.

no mark : CD (STOP)

() : REC

< > : TAPE PB


The components identified by mark \triangle or dotted line with mark \triangle are critical for safety. Replace only with part number specified.

7-13. PRINTED WIRING BOARD – POWER AMP SECTION –


- See page 23 for Circuit Boards Location.

- Semiconductor Location

Ref. No.	Location
D501	B-5
D502	A-4
D503	E-4
D504	F-5
D541	C-1
D543	E-2
D551	B-5
D581	E-4
D941	A-1
D979	A-1
IC501	D-6
Q501	B-2
Q503	F-1
Q504	F-1
Q505	F-4
Q506	F-5
Q551	B-5
Q581	E-4
Q941	B-1
Q942	A-1

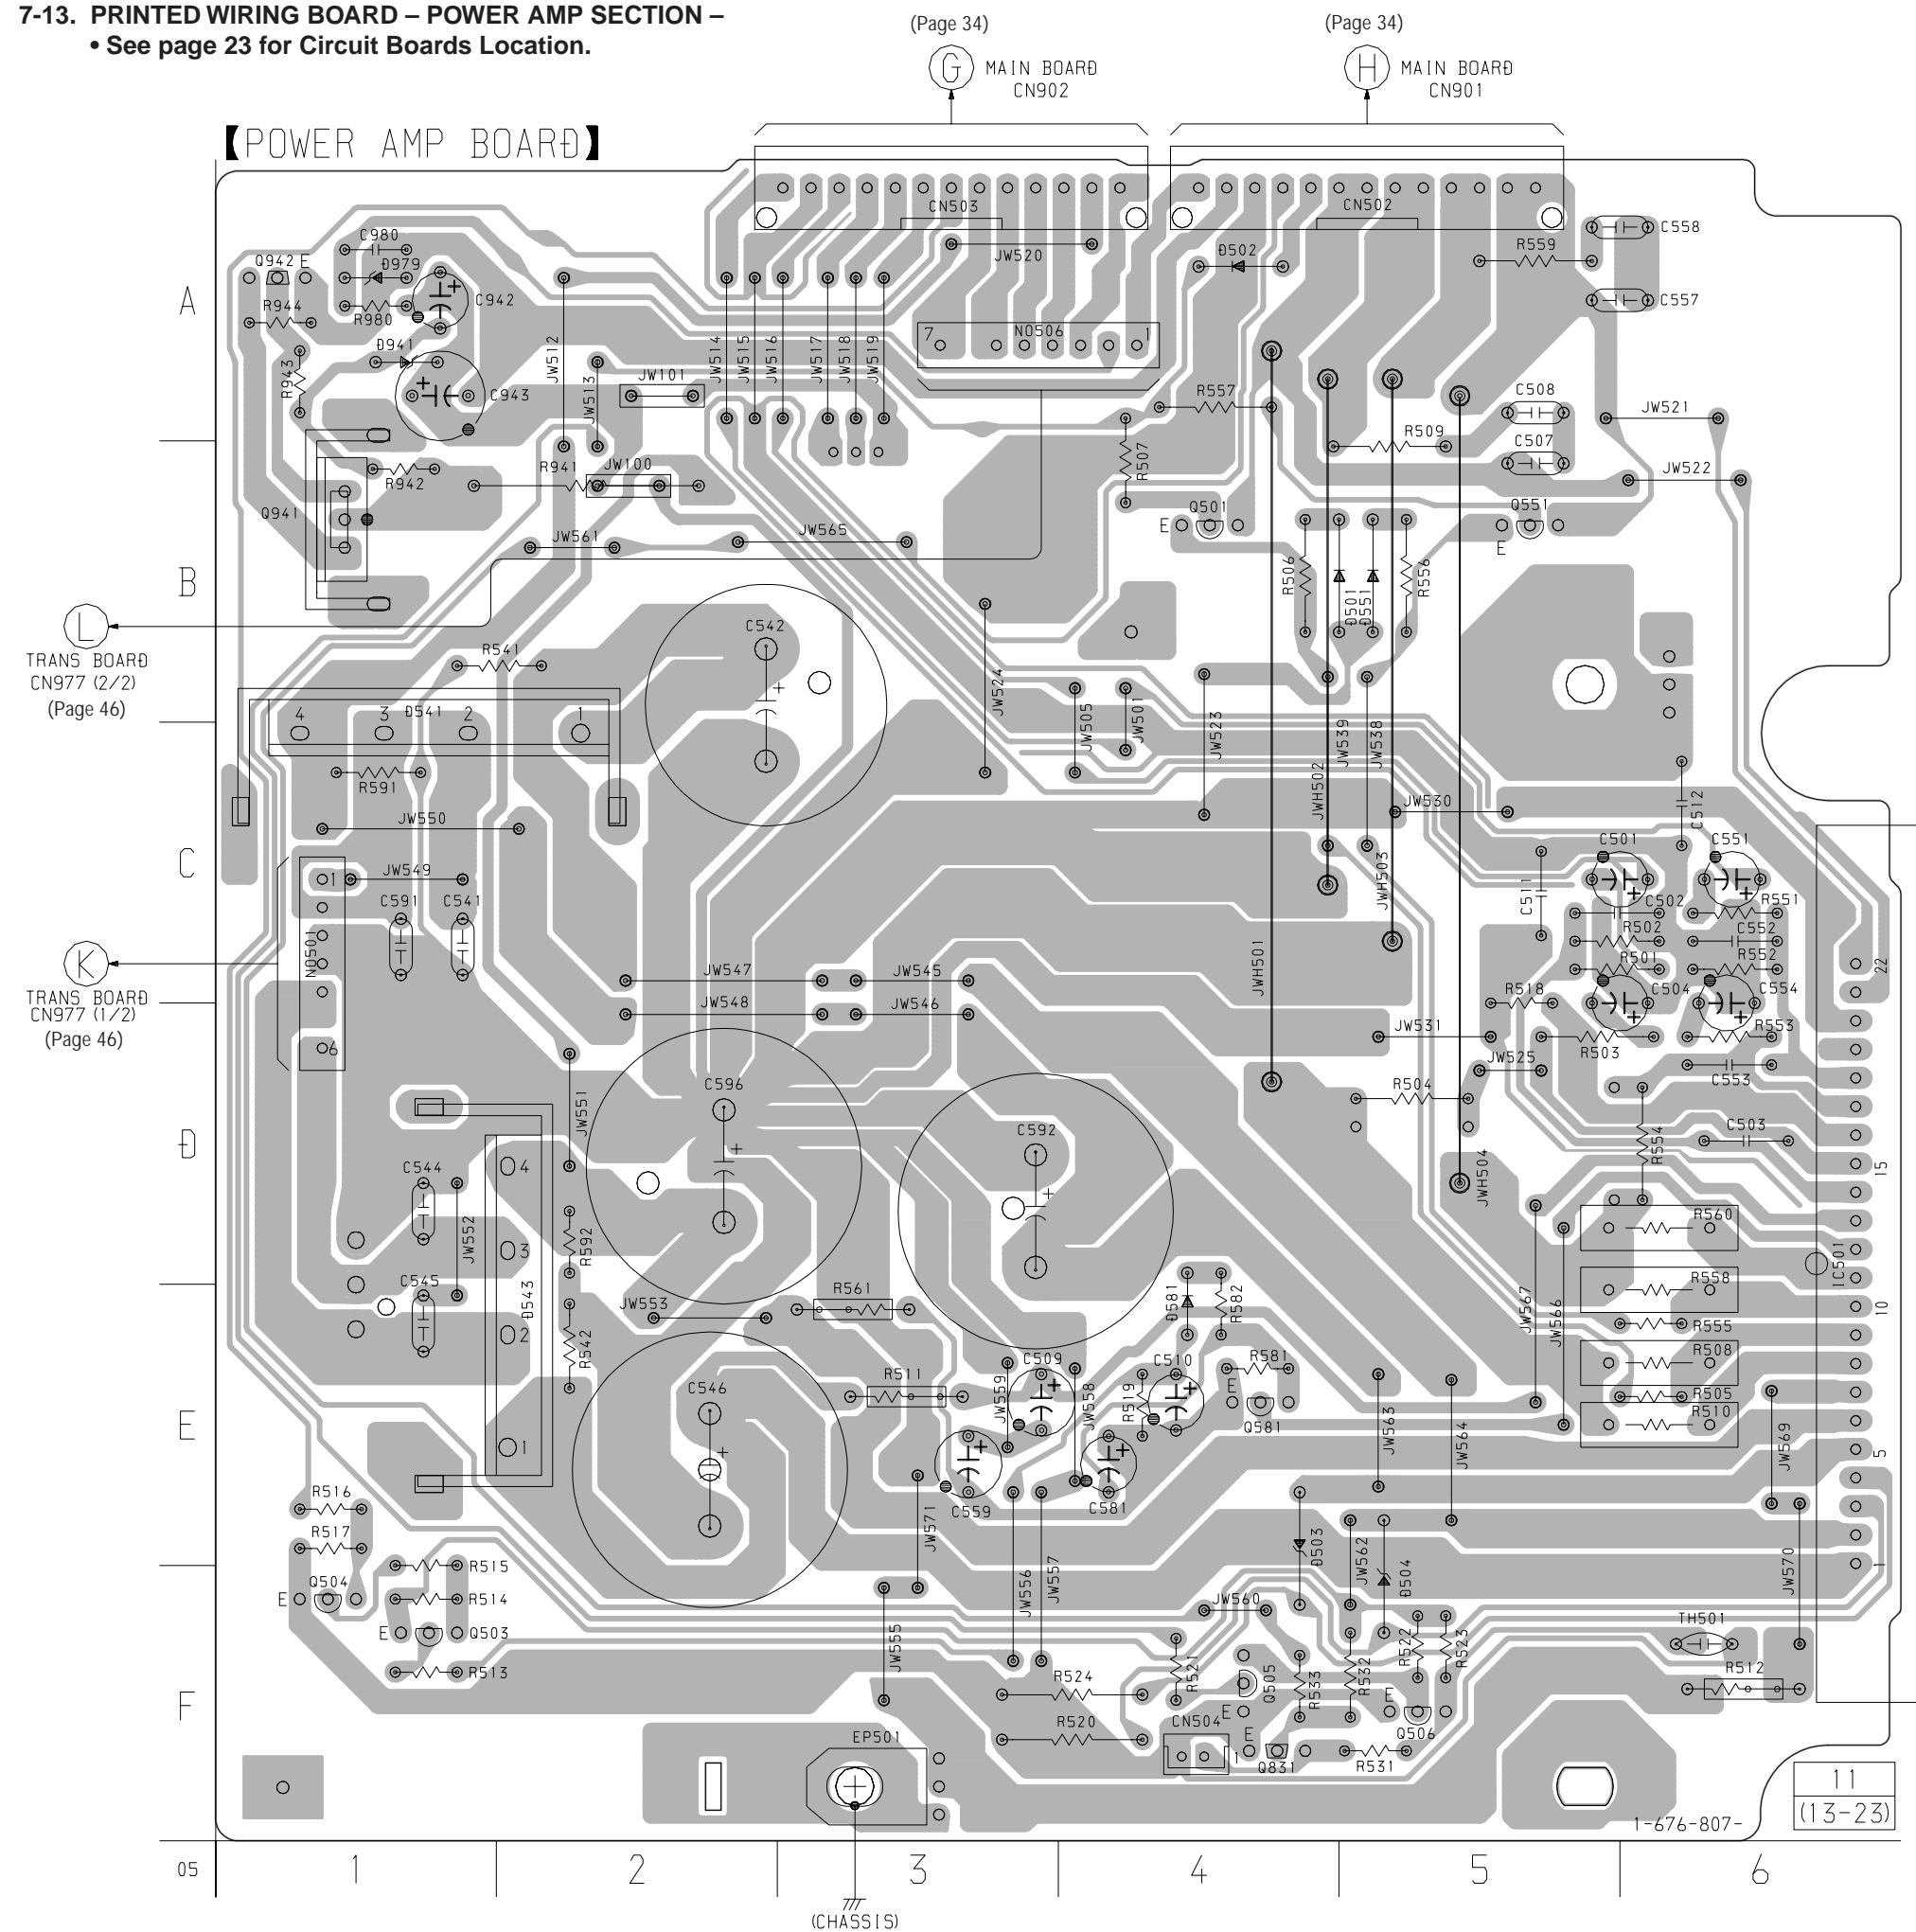


7-14. SCHEMATIC DIAGRAM – POWER AMP SECTION –

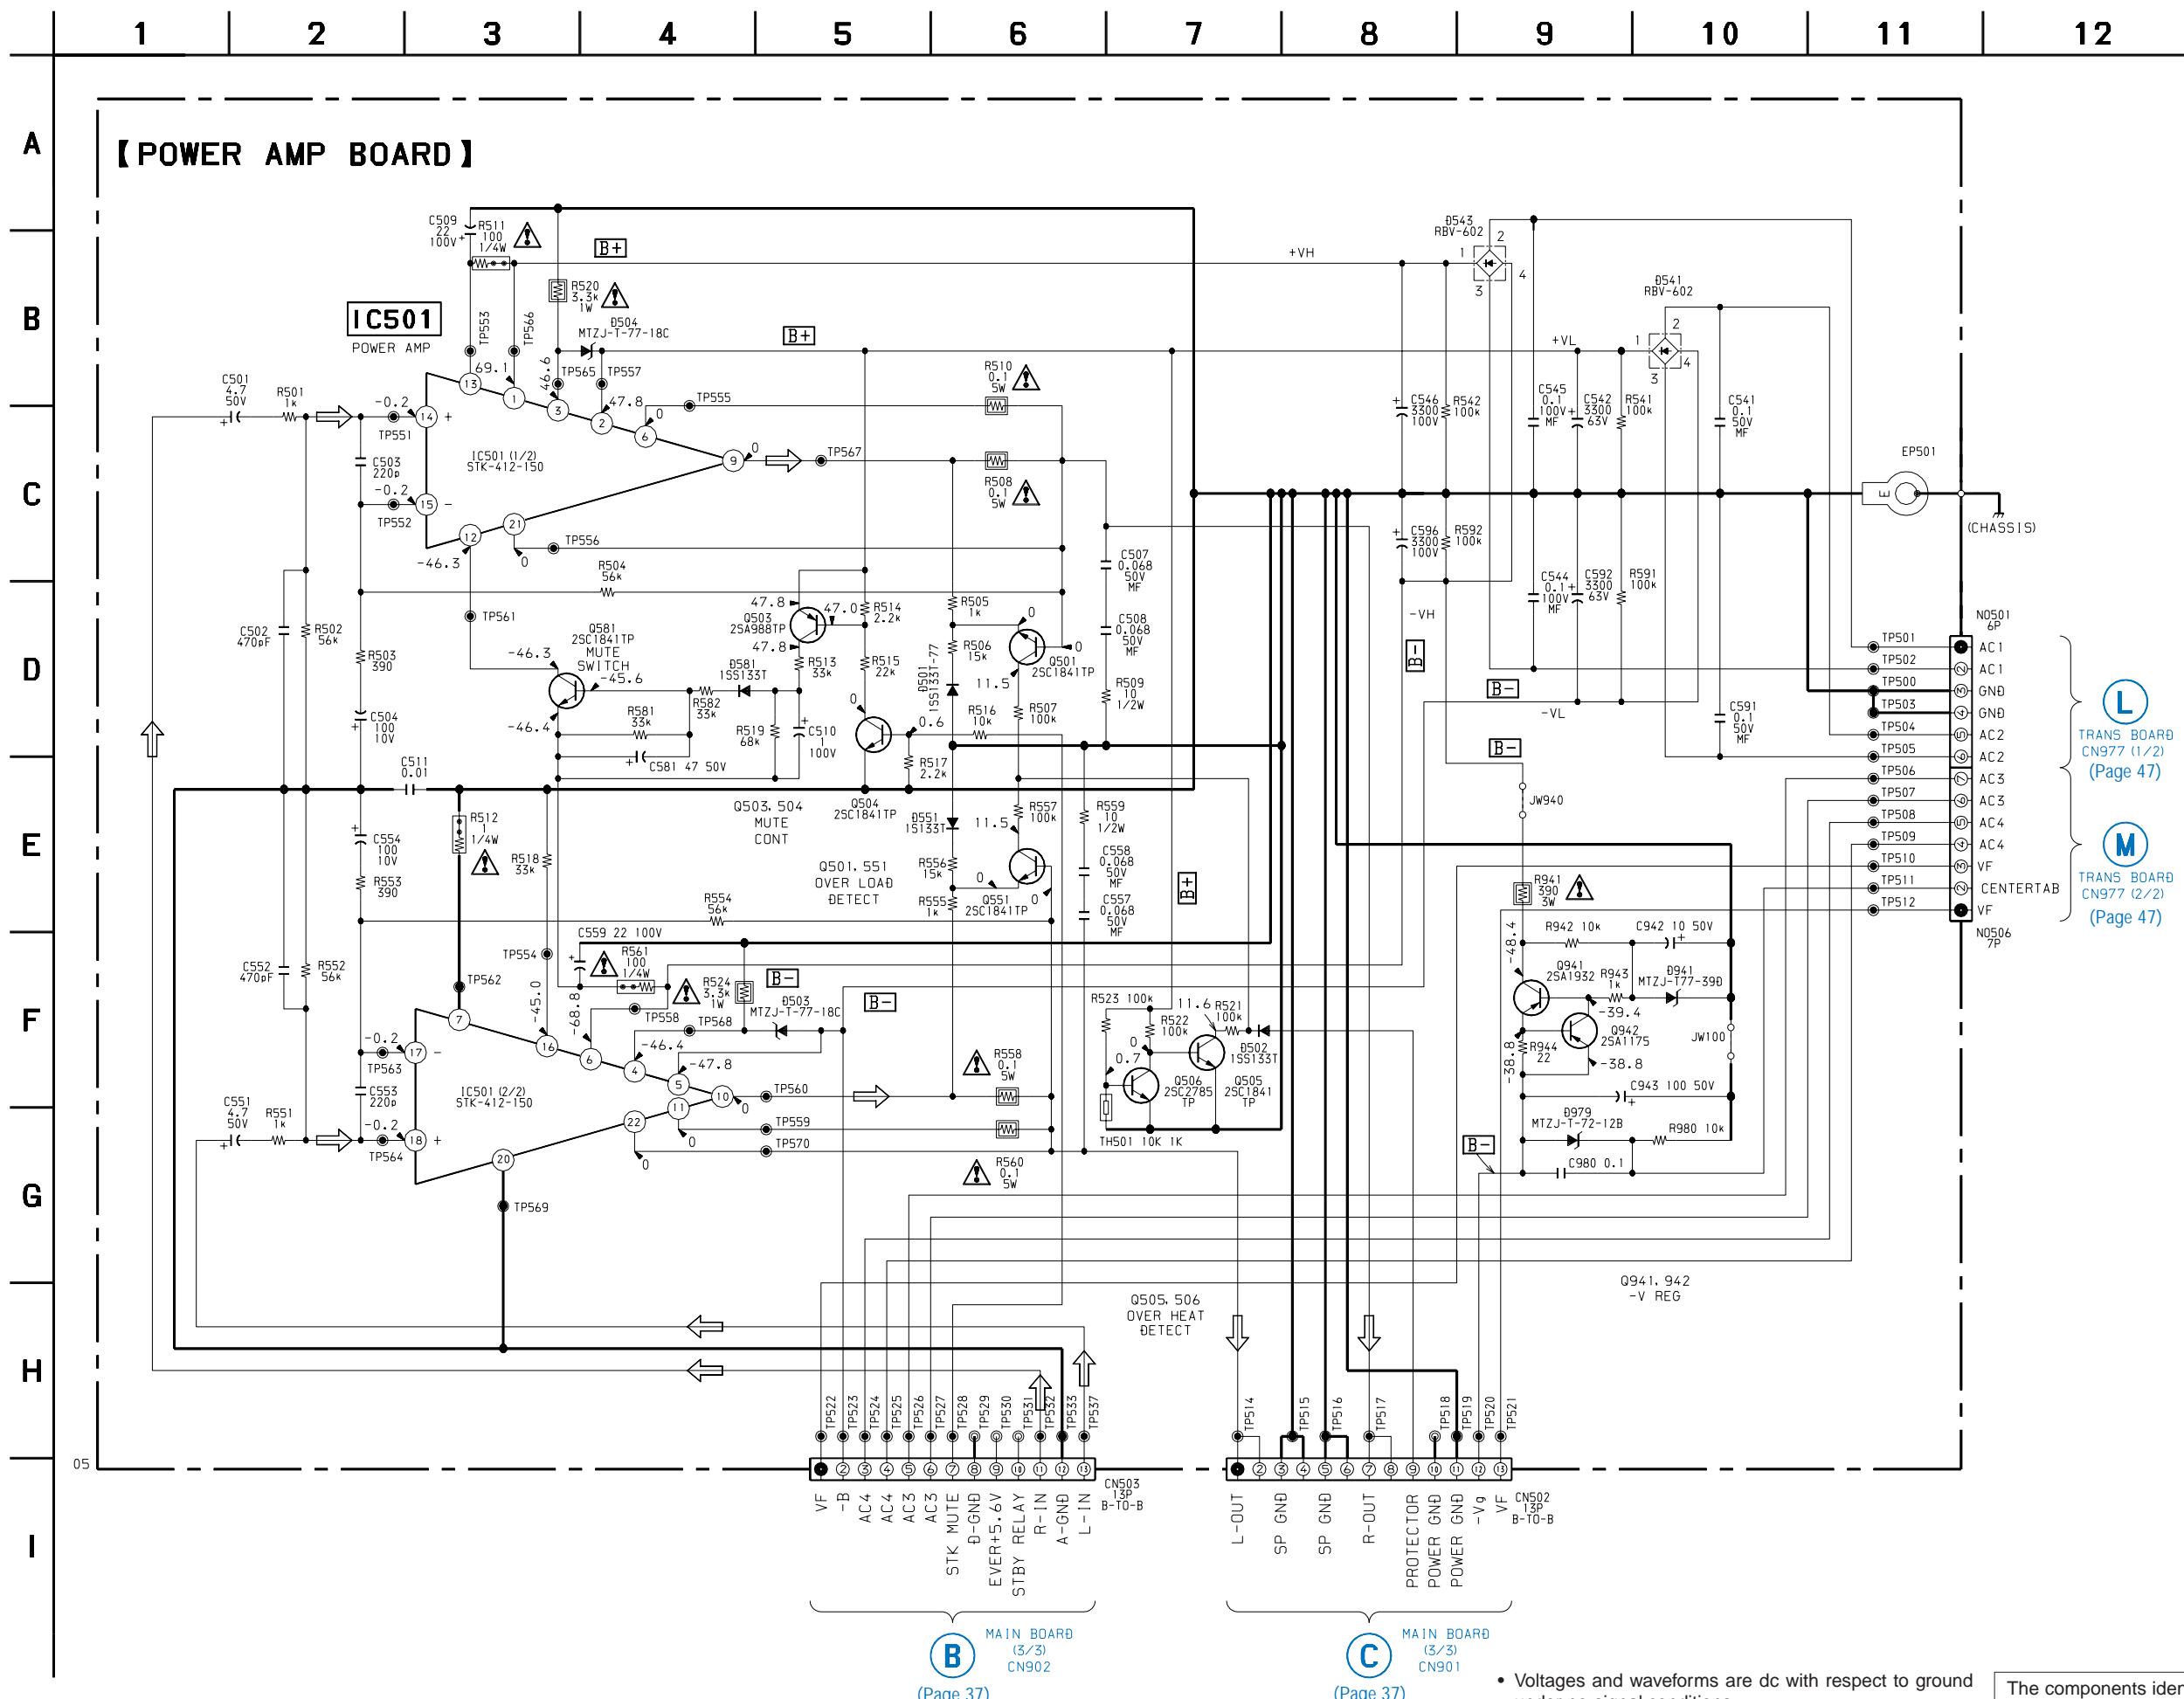

7-15. PRINTED WIRING BOARDS – PANEL SECTION – • See page 23 for Circuit Boards Location.


- Semiconductor Location – CD SWITCH Board –

Ref. No.	Location
D630	A-8
D631	A-6
D632	A-5
Q630	A-8
Q631	A-8
Q632	A-5
Q633	A-9
Q634	A-9
Q635	A-4

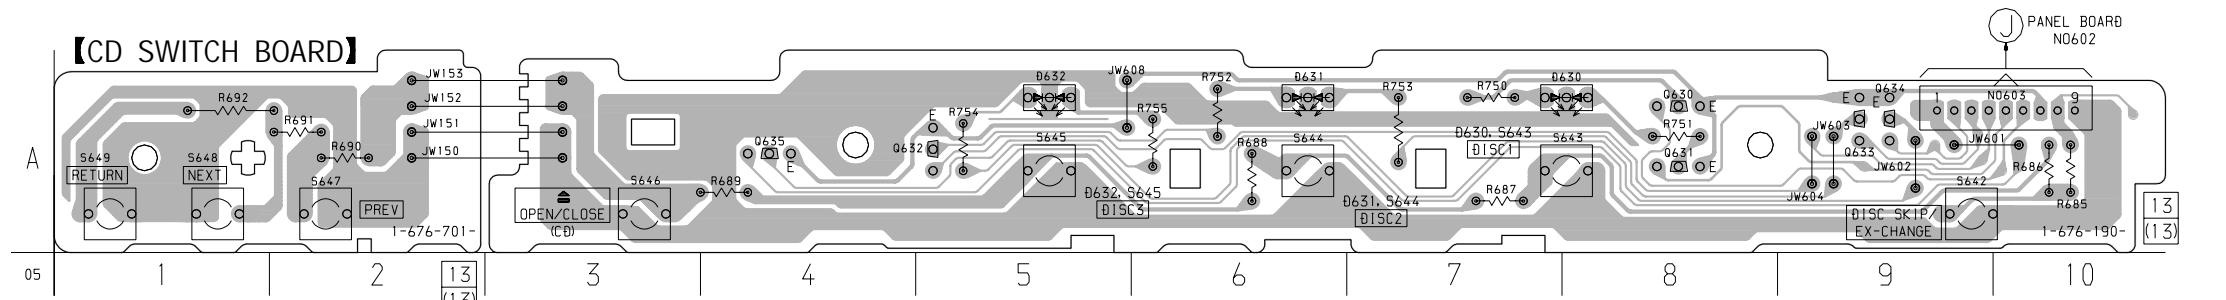


- Semiconductor Location – PANEL Board –

Ref. No.	Location
D601	A-10
D602	B-2
D603	D-3
D604	C-1
D605	F-9
D611	B-9
D612	E-8
D613	E-9
D614	G-8
D615	D-6
D617	G-5
D618	C-2
IC601	C-6
IC602	F-4
IC603	A-9
IC721	D-9
IC722	G-9
Q604	C-10
Q605	A-3
Q606	C-8
Q607	C-8
Q608	C-8
Q609	C-8
Q610	B-8
Q611	B-9
Q612	B-9
Q613	C-7
Q614	C-7
Q615	C-3
Q621	A-9
Q622	E-9
Q623	F-8
Q624	E-6
Q625	G-5
Q626	C-2
Q721	G-8

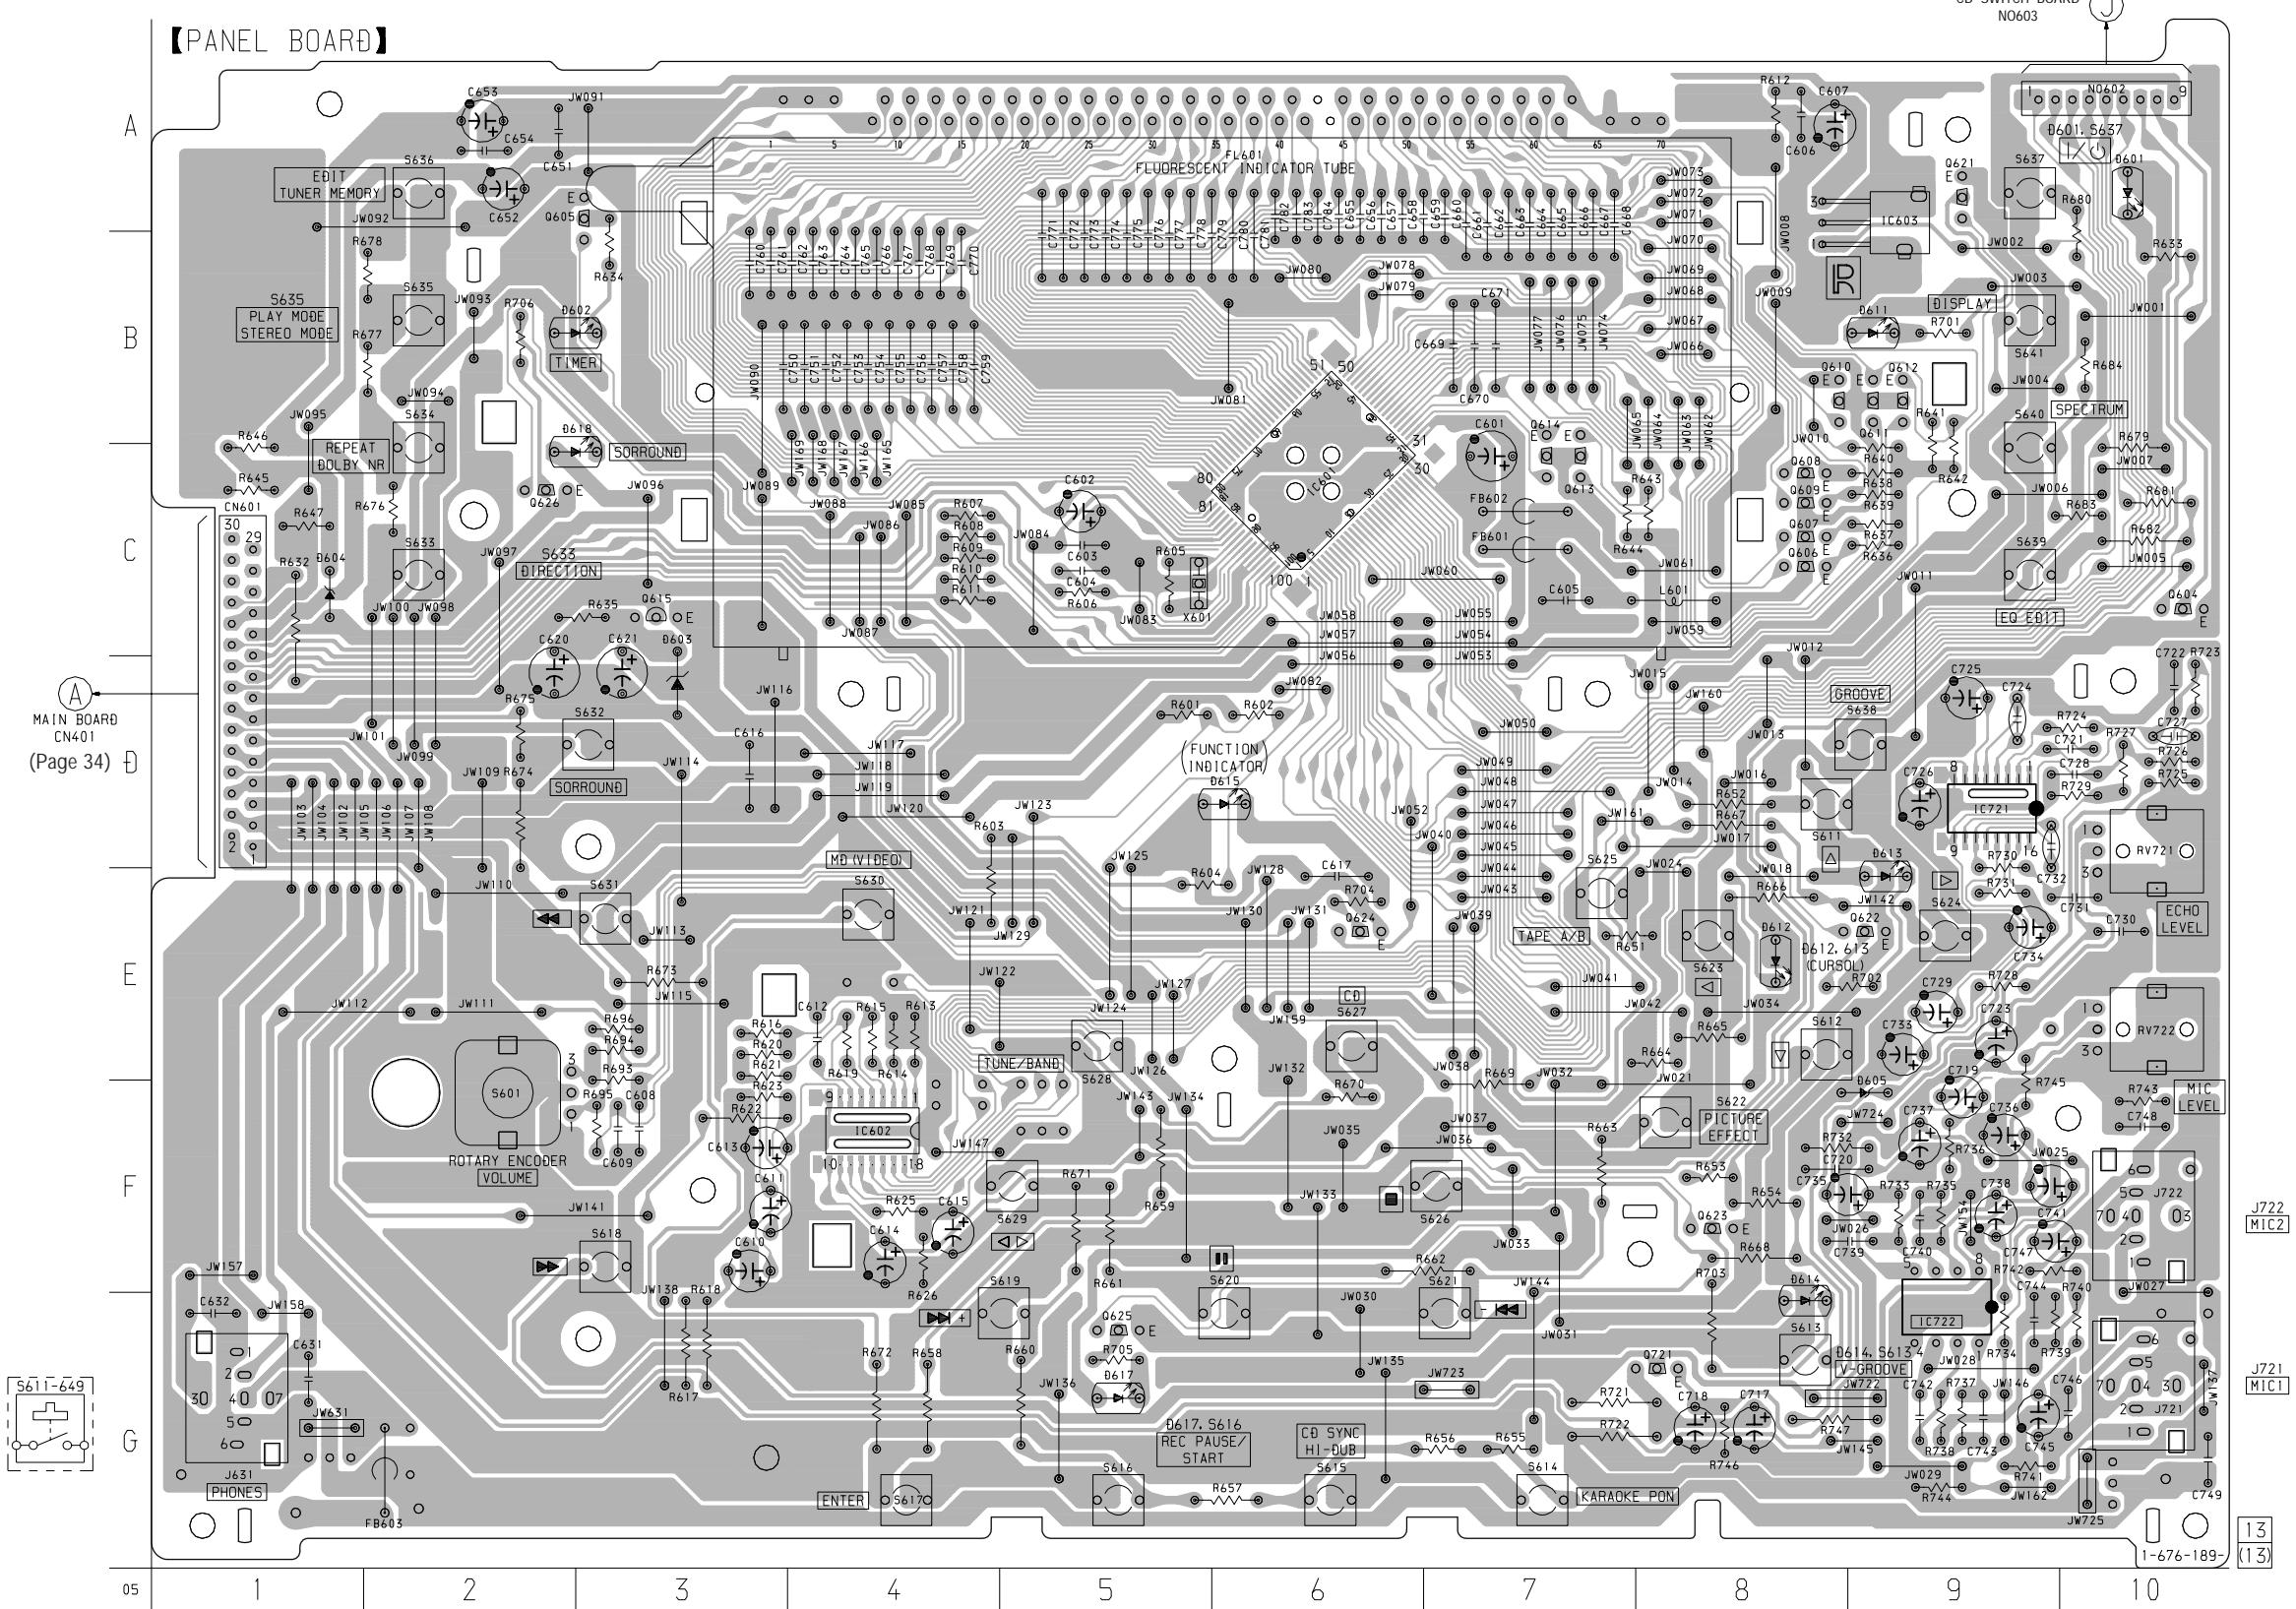

7-16. SCHEMATIC DIAGRAM – PANEL SECTION –




- See page 24 for Waveform.
 - See page 57 for IC Block Diagrams

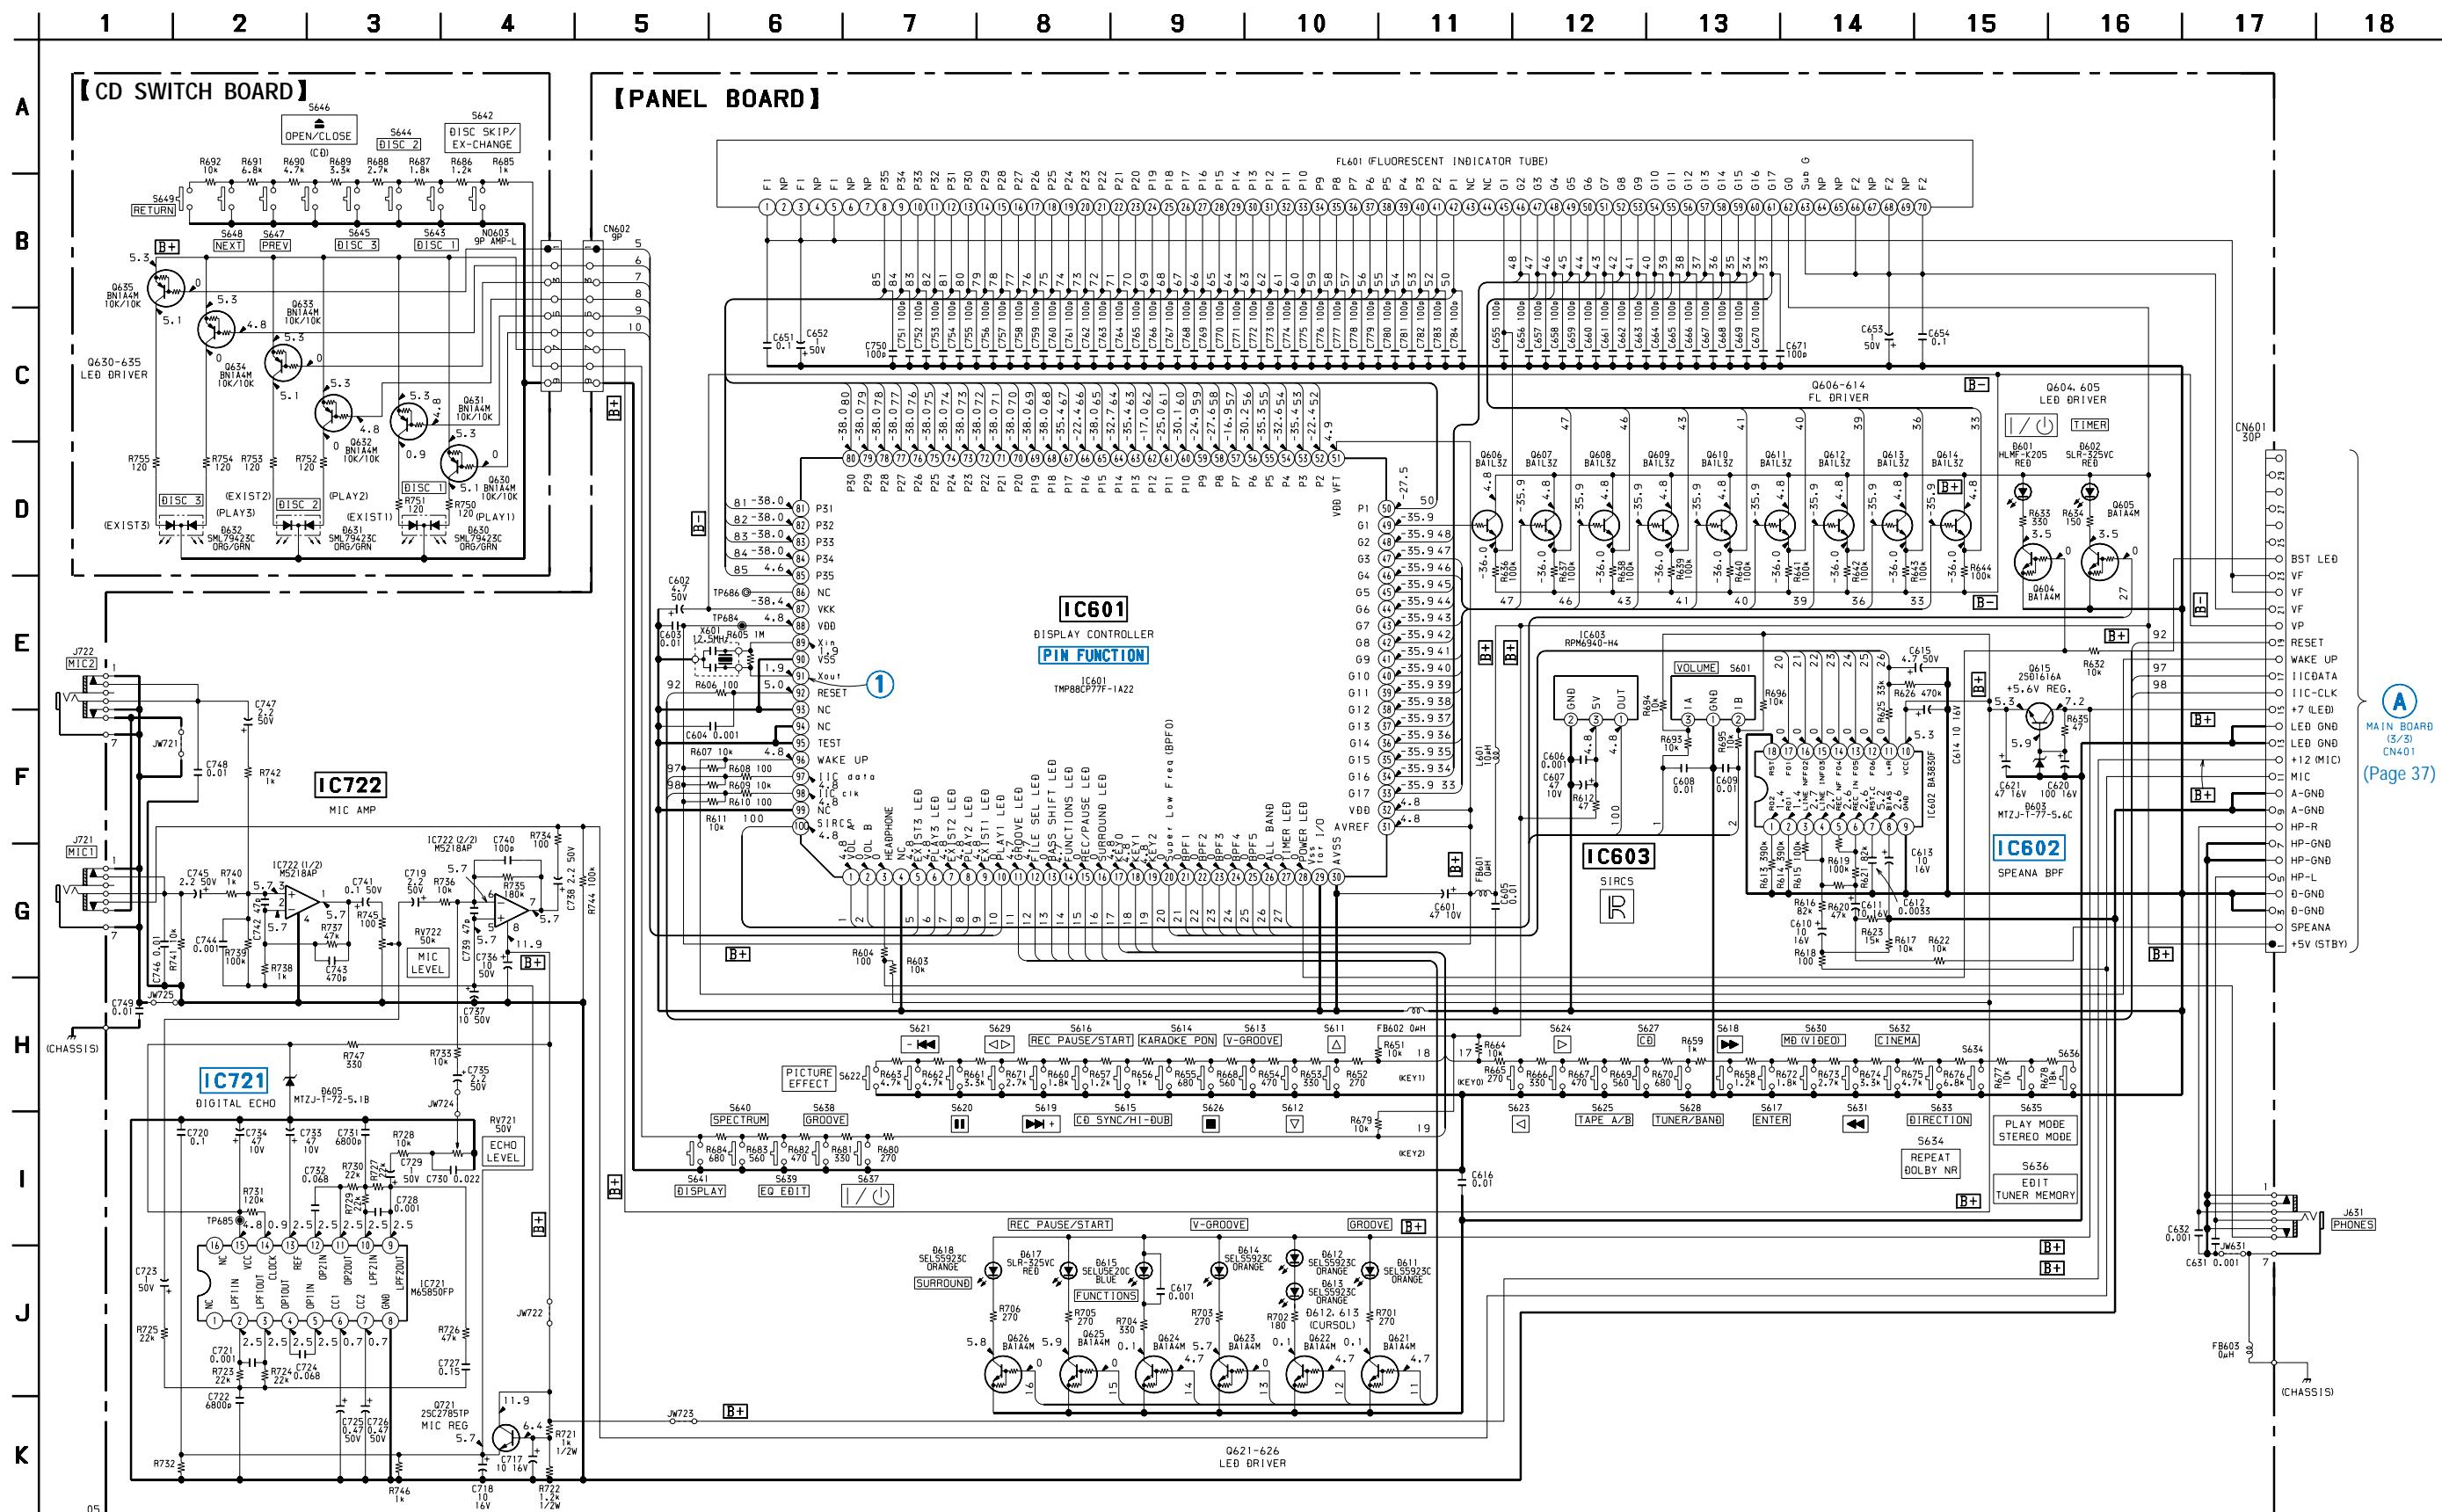


- Voltages and waveforms are dc with respect to ground under no-signal conditions.
no mark : CD (STOP)

7-17. PRINTED WIRING BOARDS – LEAF SW SECTION

- • See page 23 for Circuit Boards Location

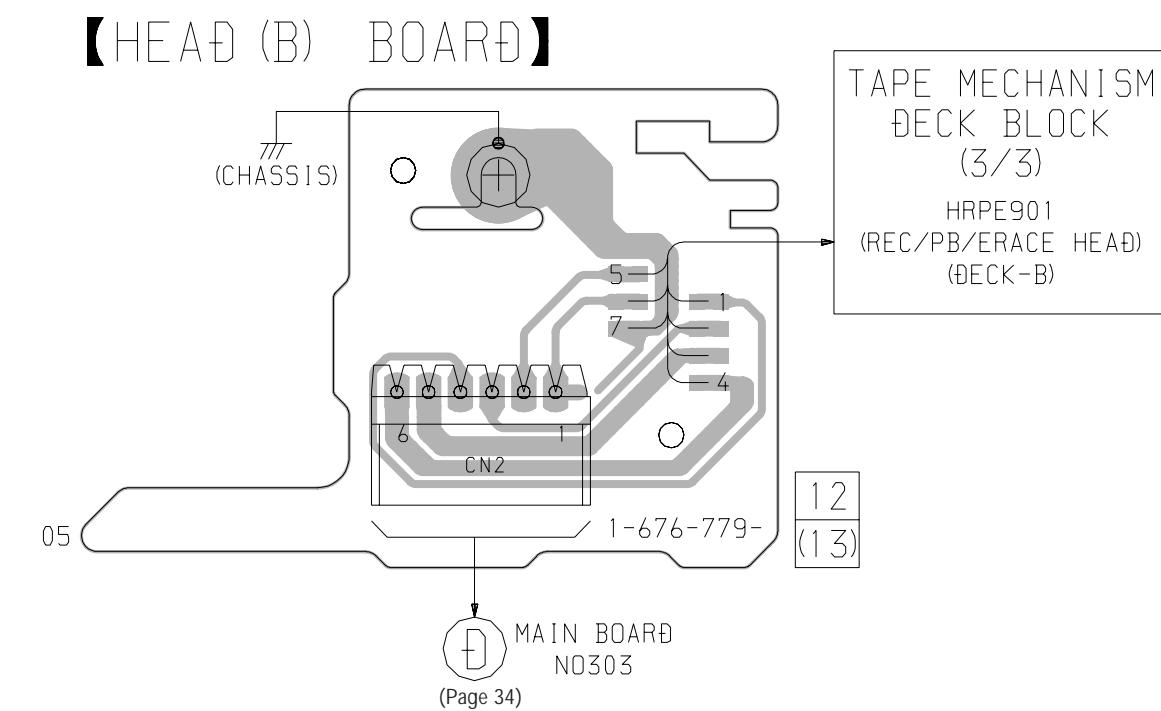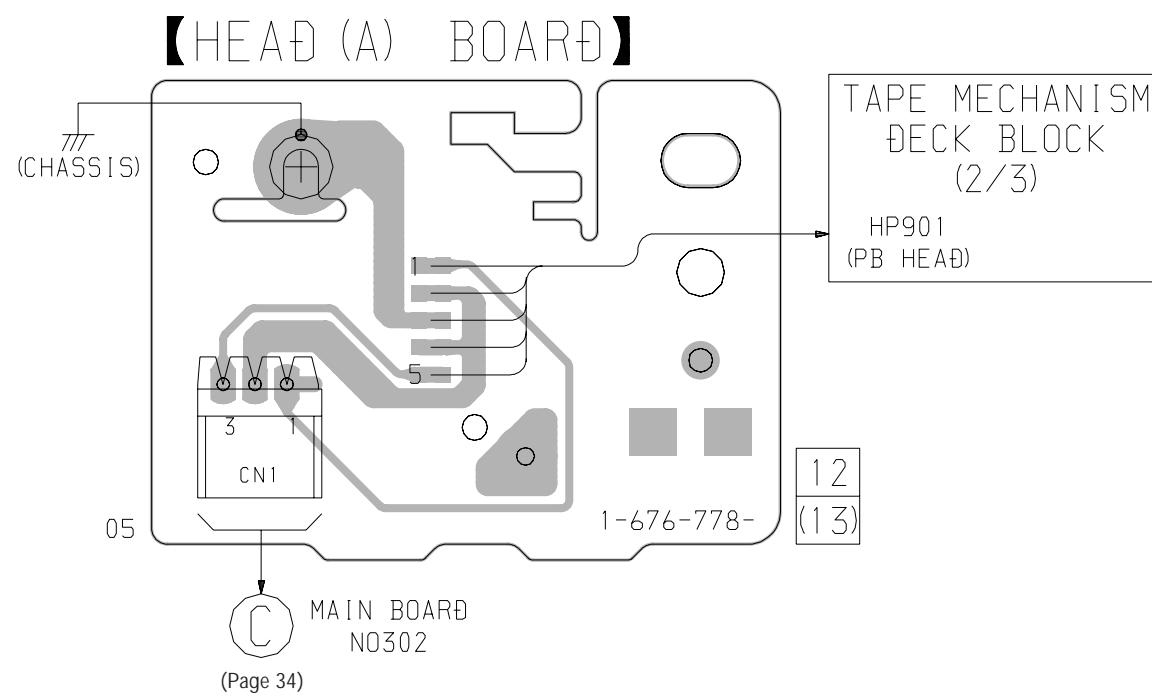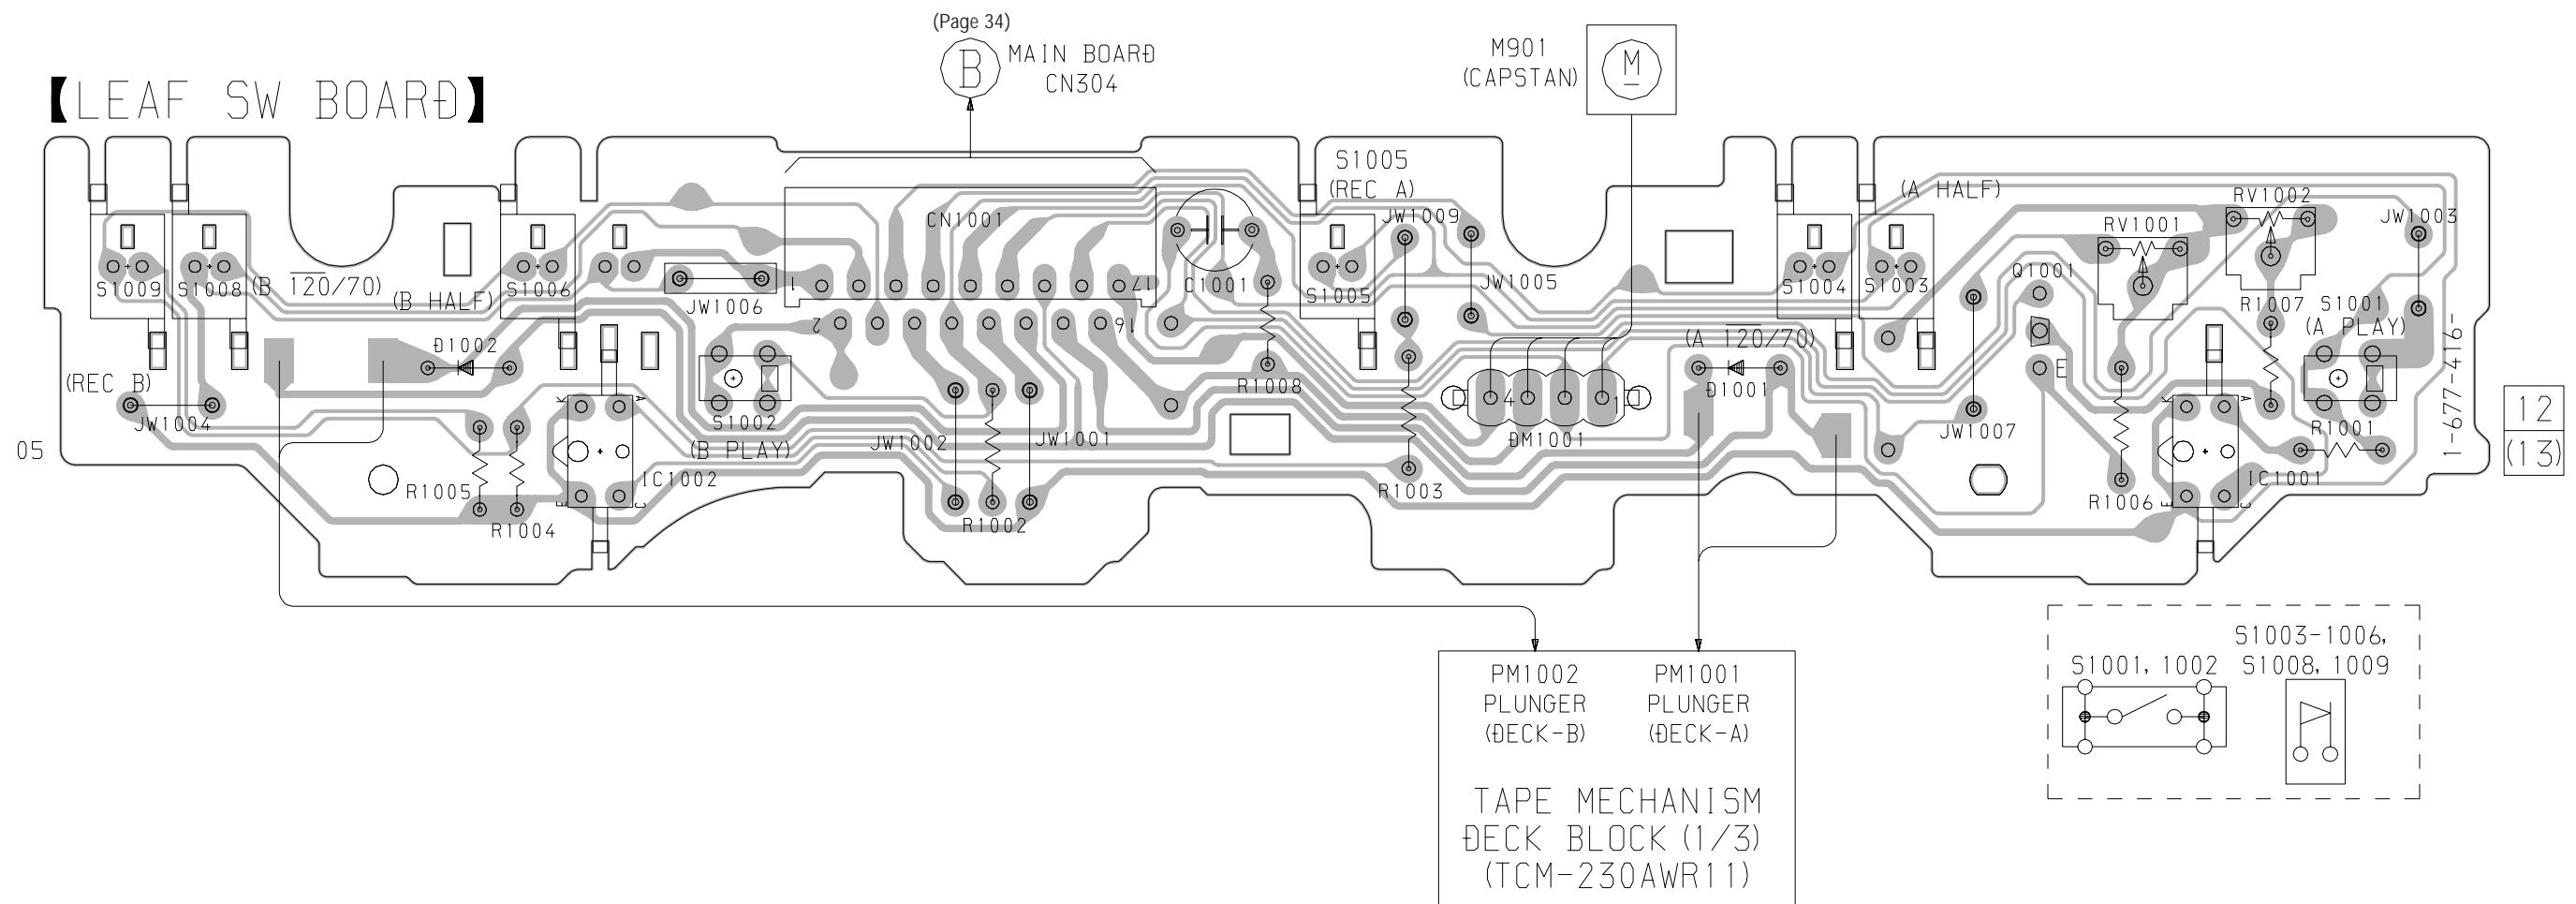

7-18. SCHEMATIC DIAGRAM – LEAF SW SECTION –

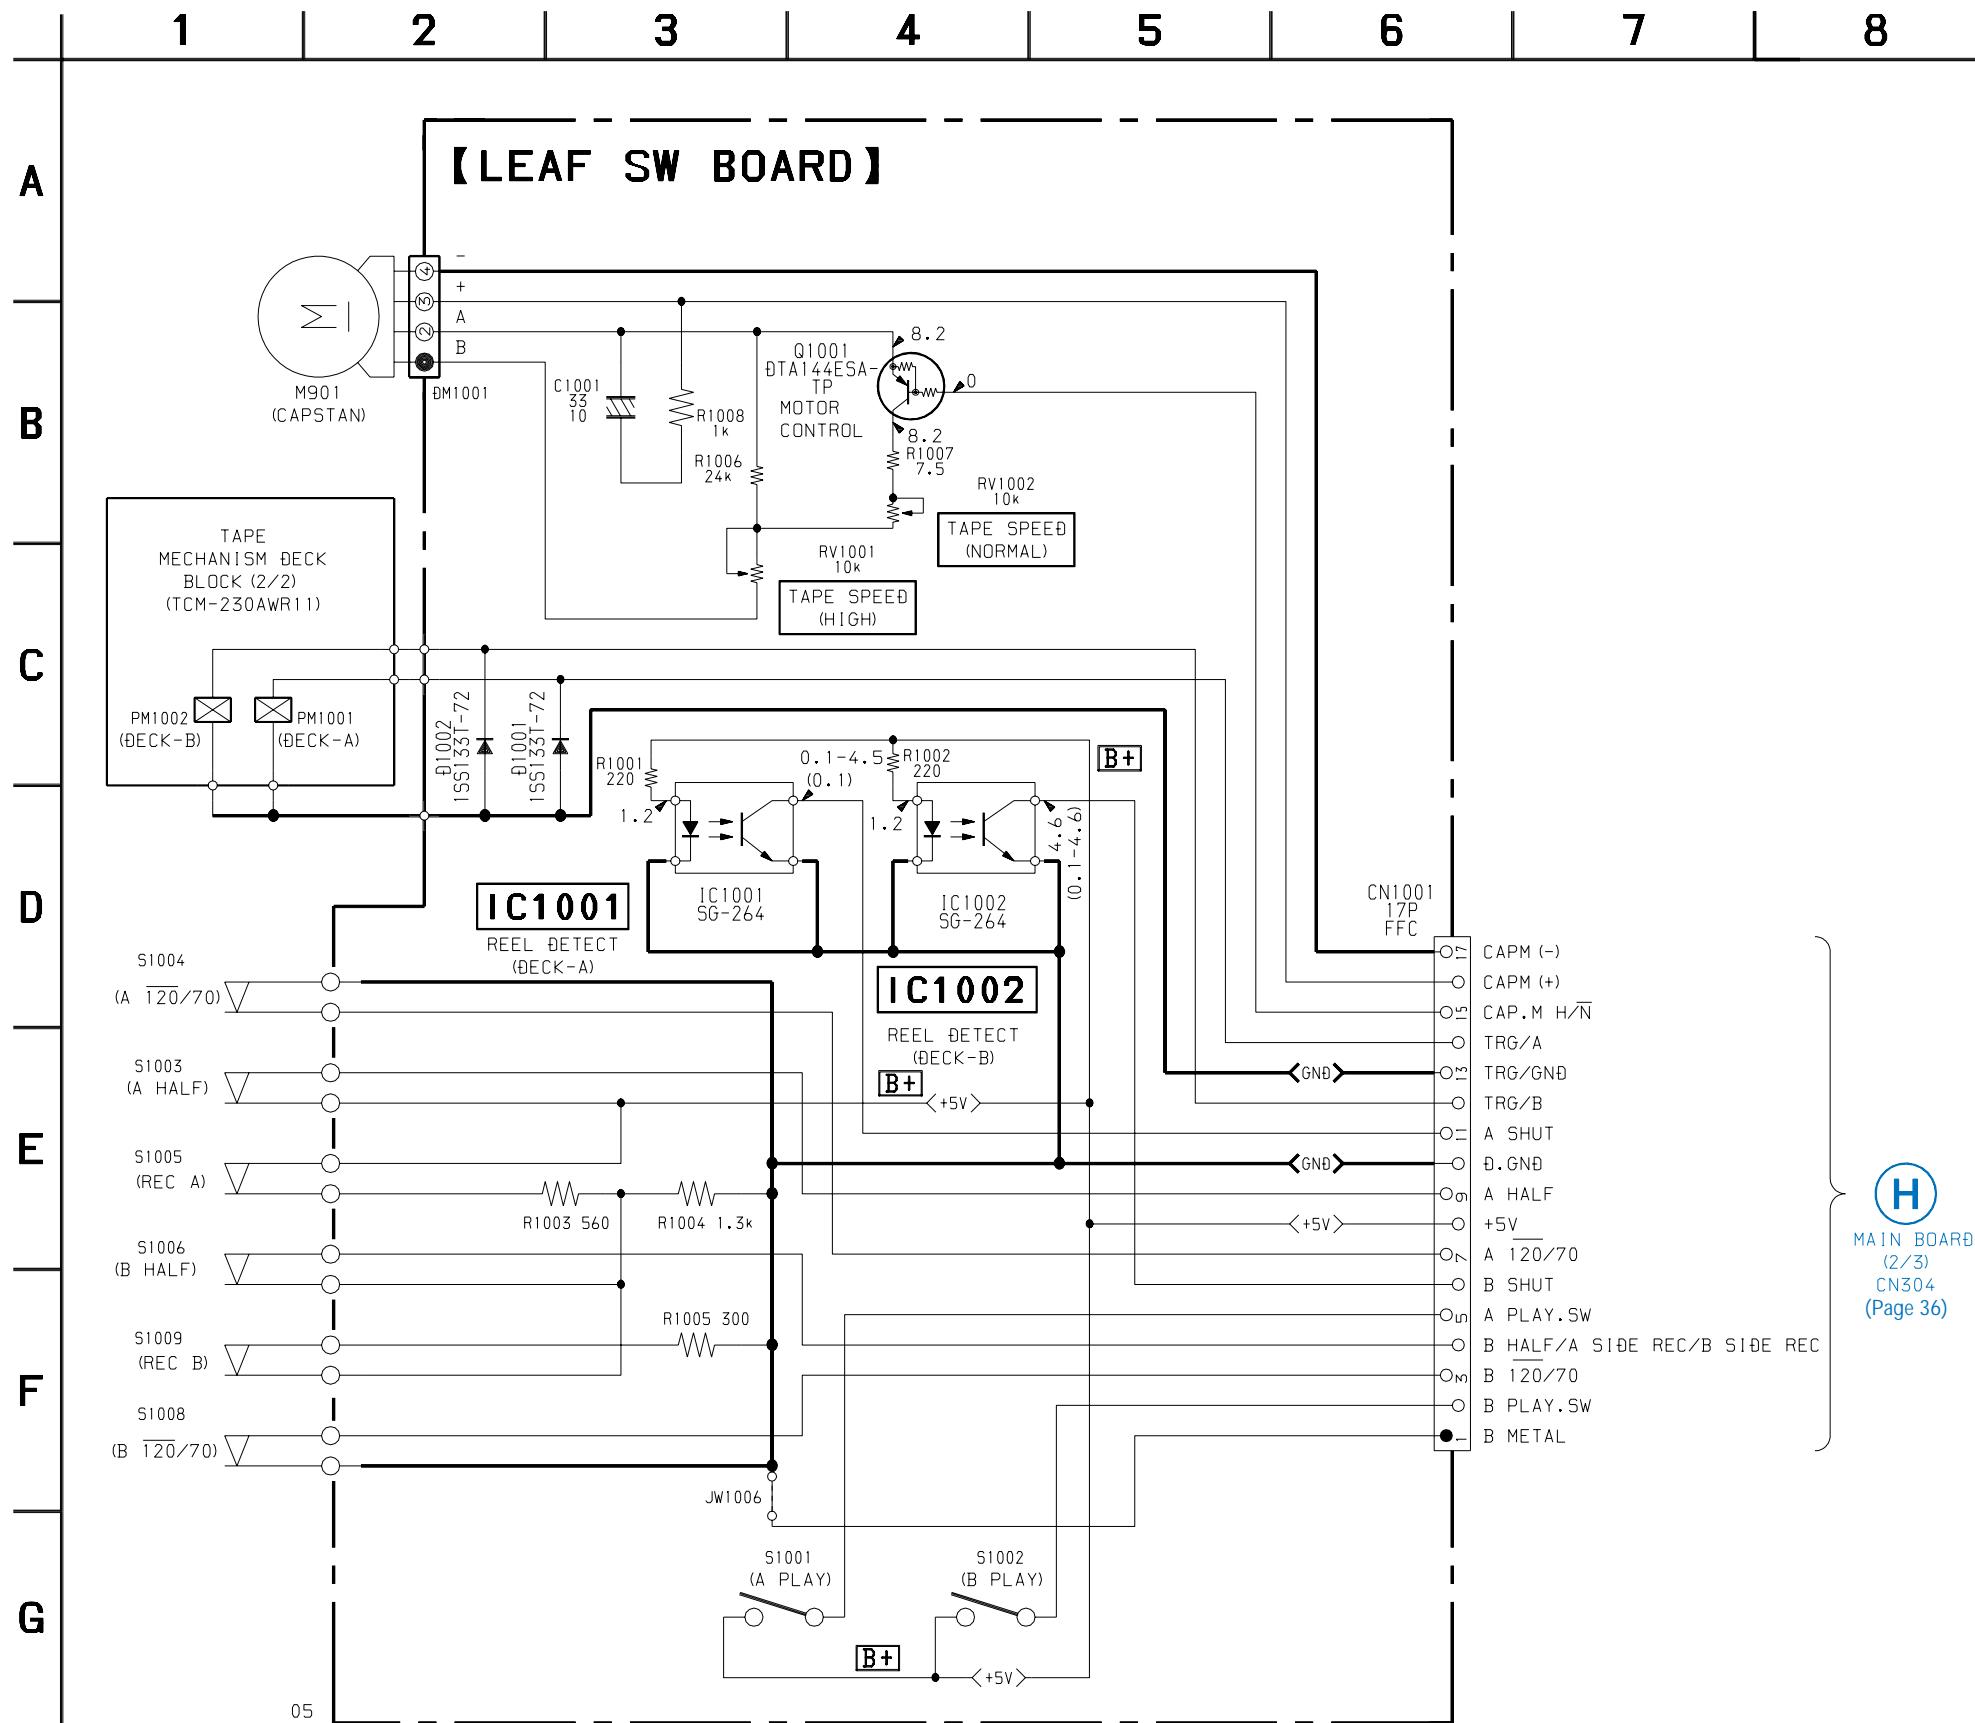


- Voltages and waveforms are dc with respect to ground under no-signal conditions.
- no mark : PB (DECK-A)
- () : PB (DECK-B)


7-19. PRINTED WIRING BOARDS – DRIVER SECTION – • See page 23 for Circuit Boards Location.

• Semiconductor Location

Ref. No.	Location
D701	E-1
IC701 IC711	E-1 B-5

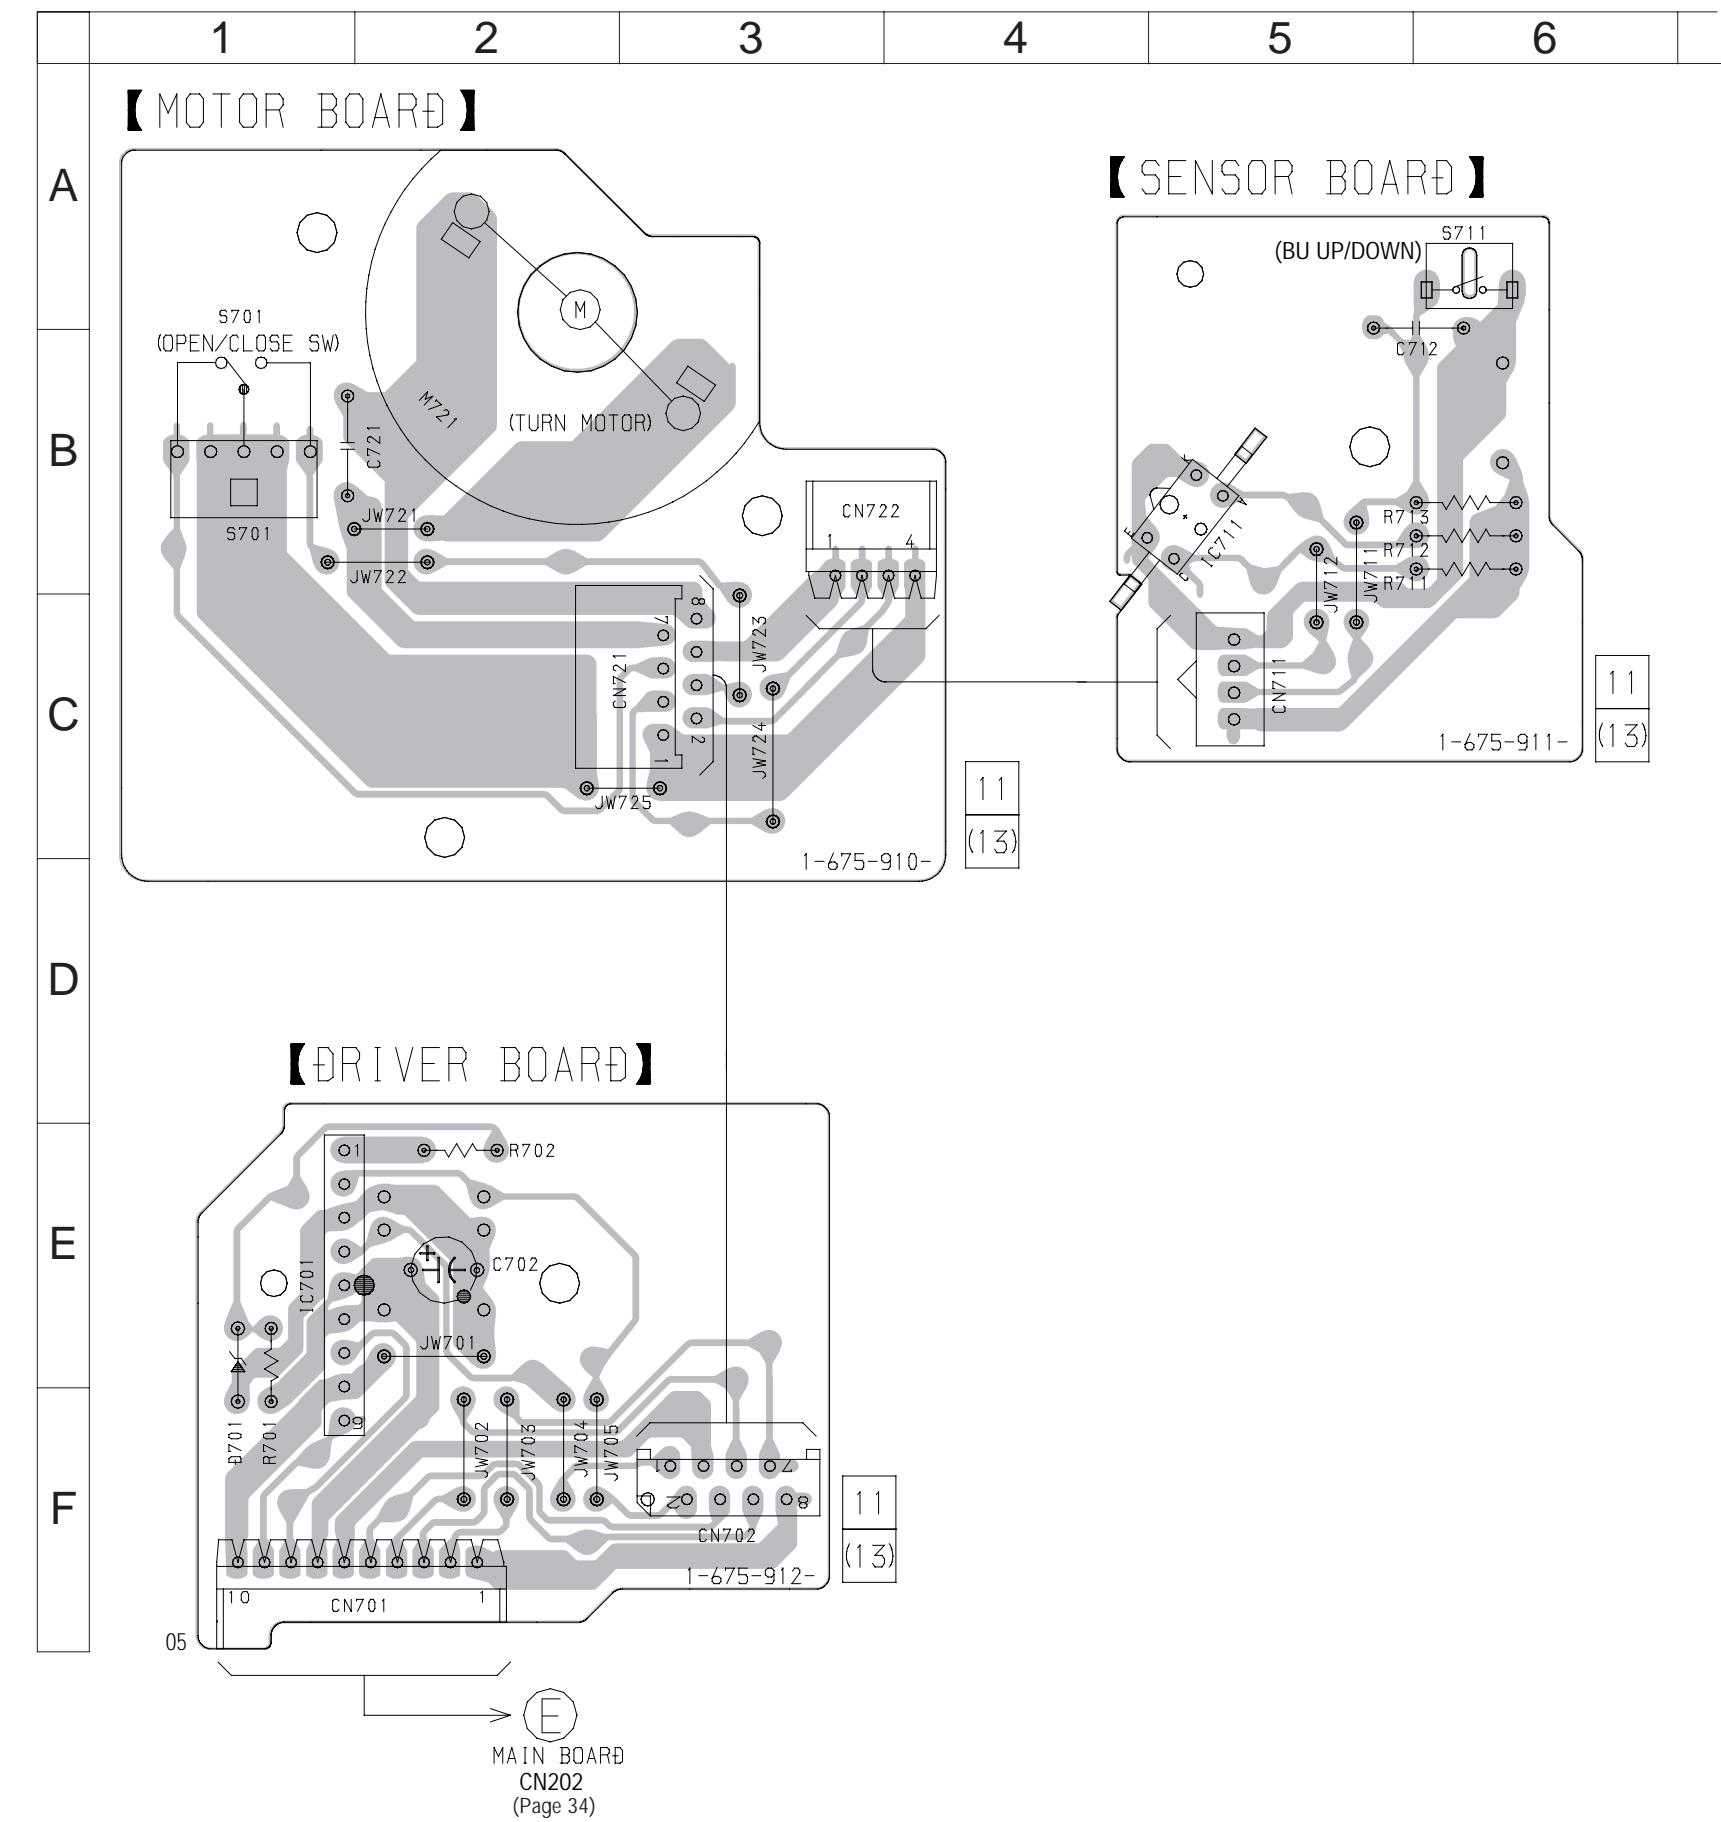


7-20. SCHEMATIC DIAGRAM – DRIVER SECTION –
 • See page 57 for IC Block Diagram.

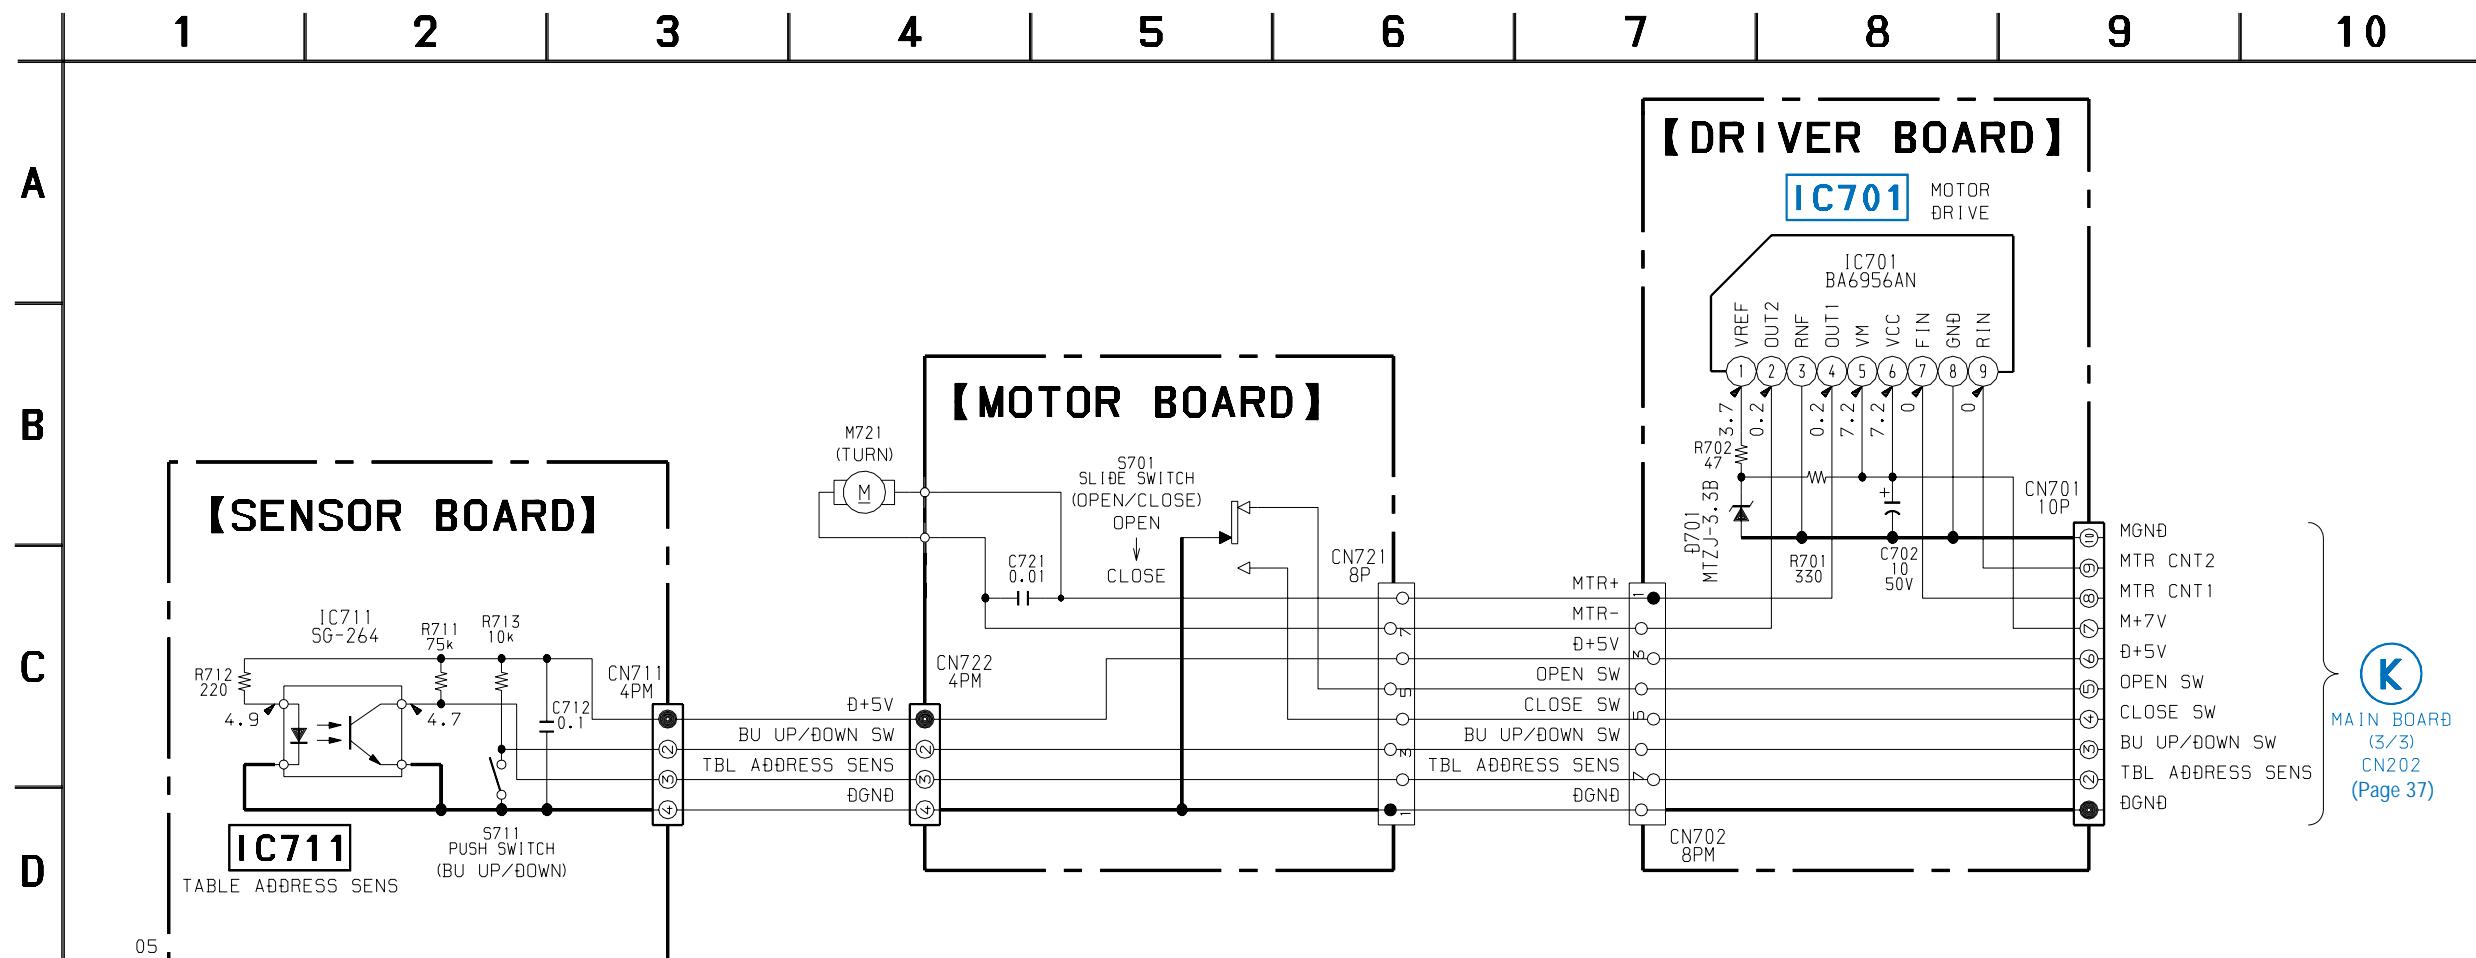


- Voltages and waveforms are dc with respect to ground under no-signal conditions.
no mark : CD (STOP)

7-21. PRINTED WIRING BOARD – TRANS SECTION –

• See page 23 for Circuit Boards Location.

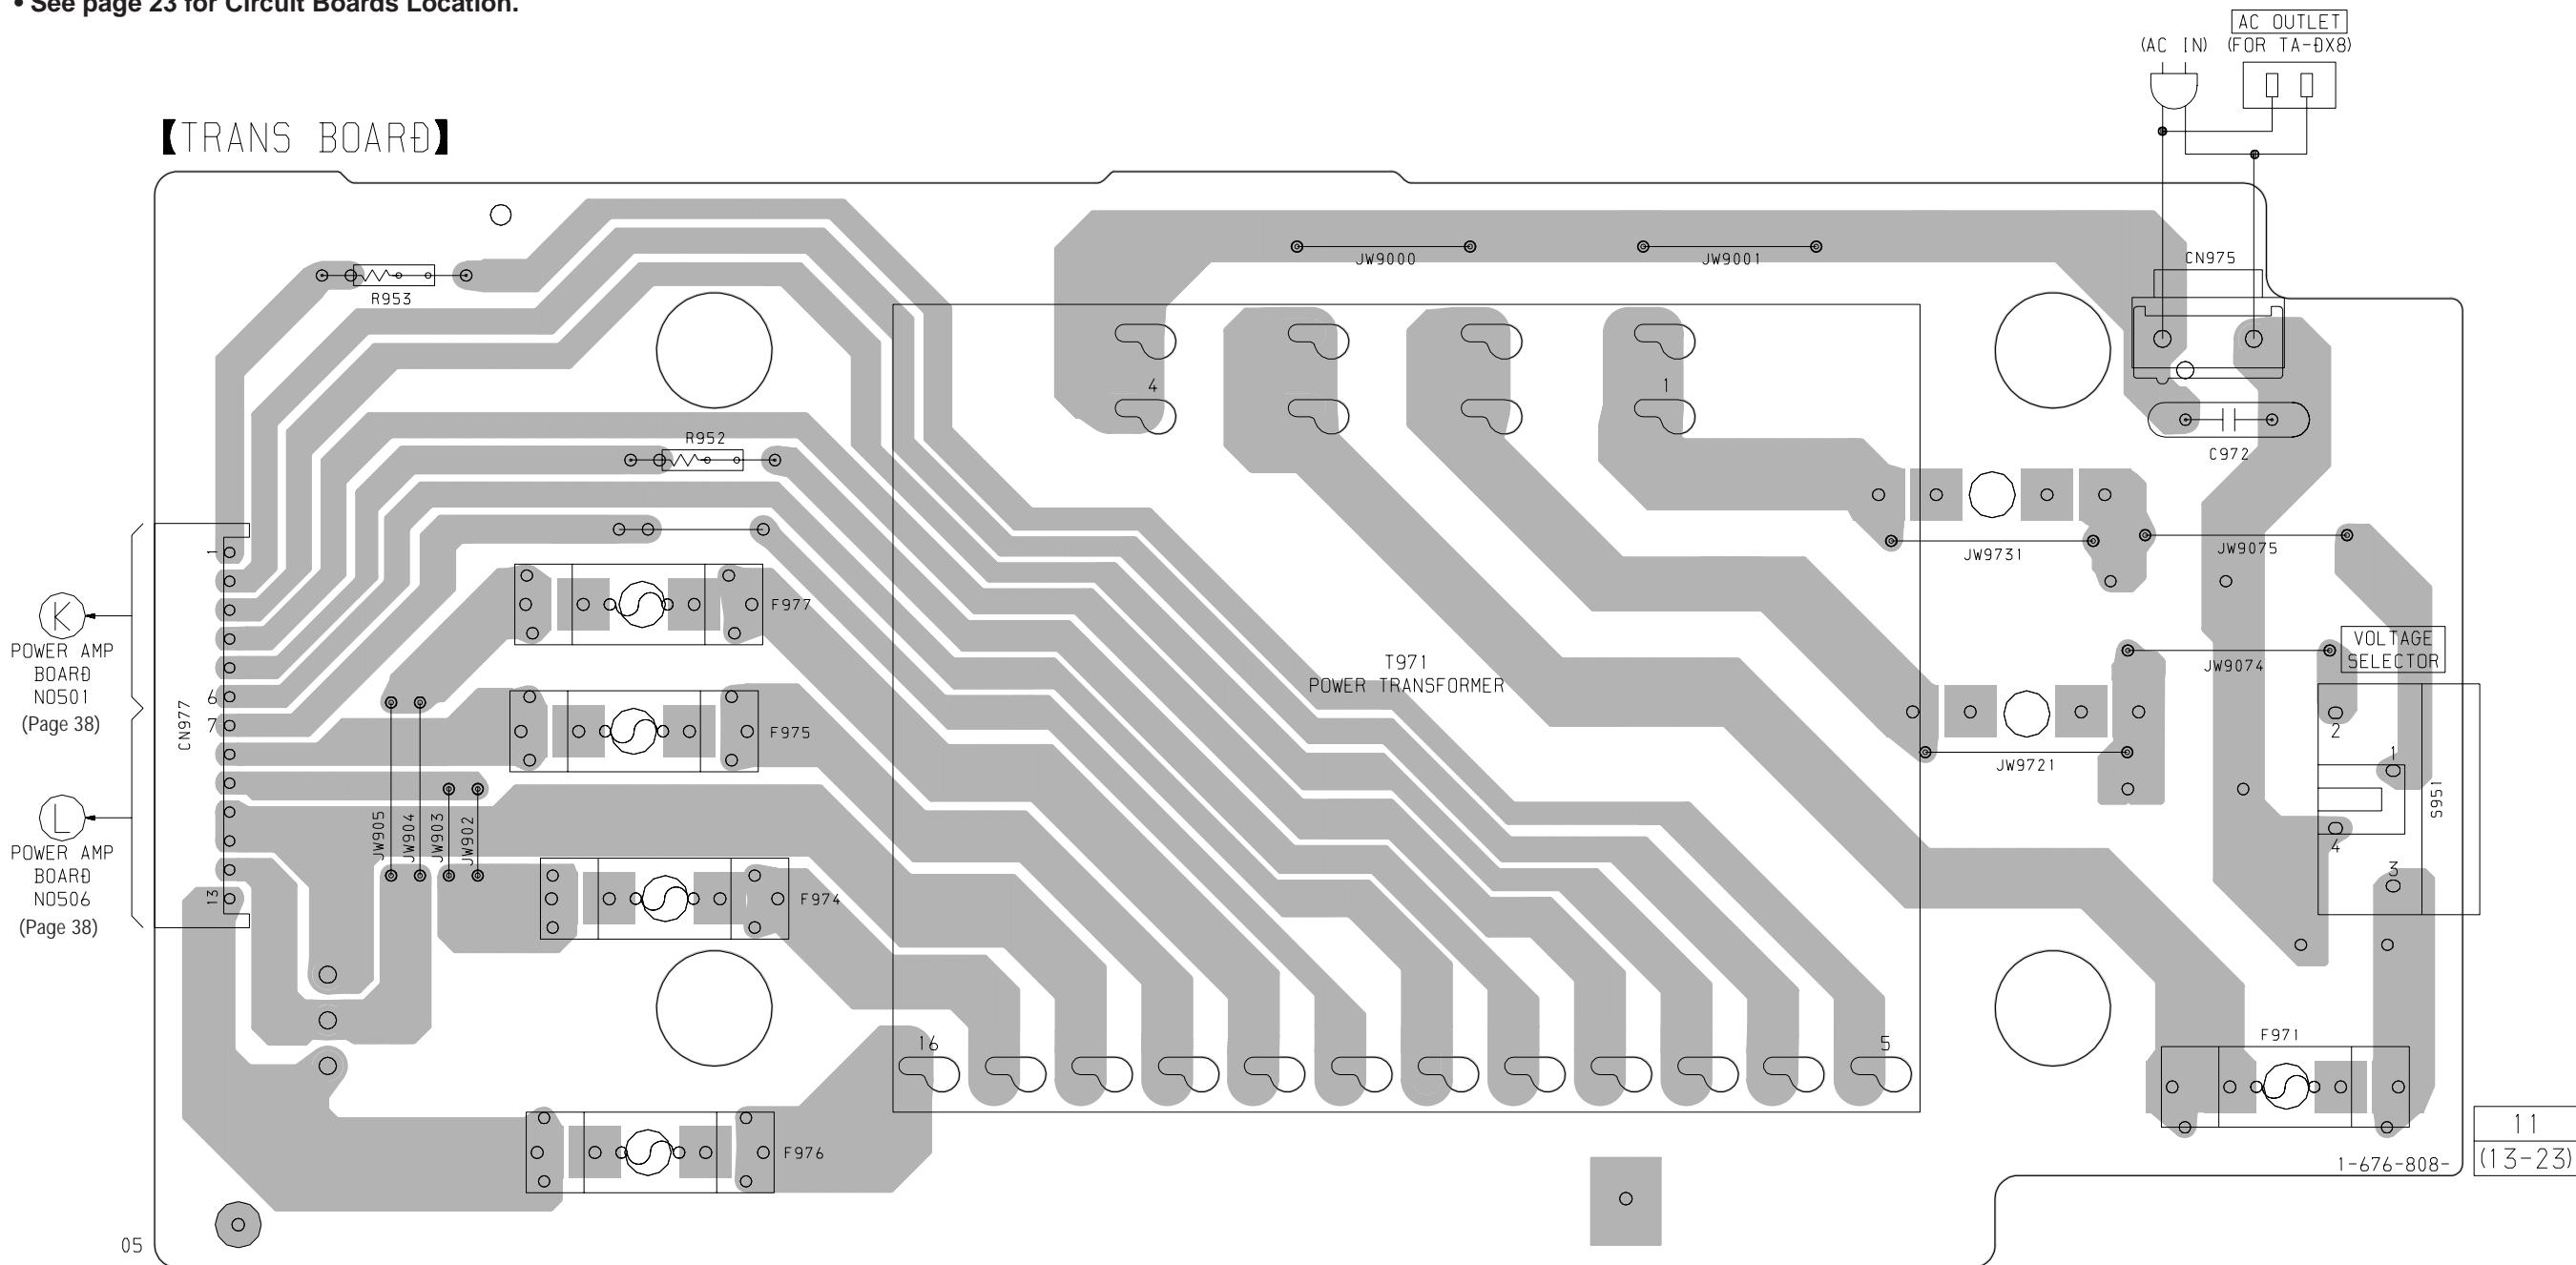

7-22. SCHEMATIC DIAGRAM – TRANS SECTION –

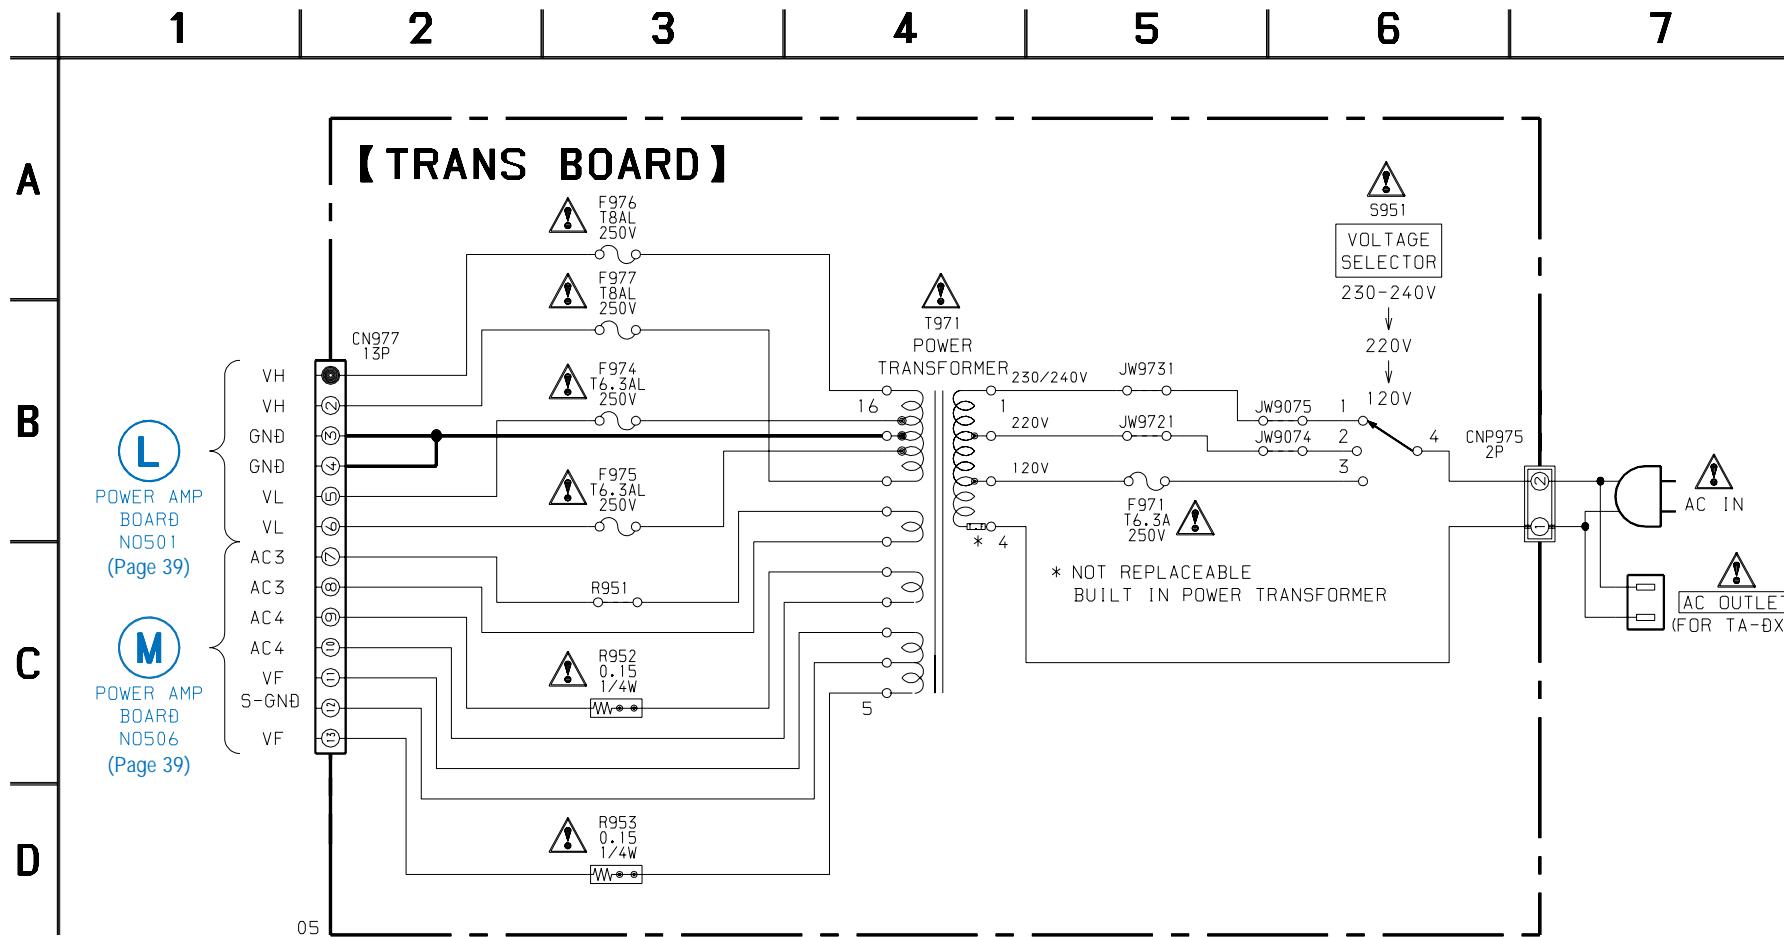

The components identified by mark \triangle or dotted line with mark \triangle are critical for safety.
Replace only with part number specified.

7-23. IC PIN FUNCTION DESCRIPTION

• IC101 DIGITAL SERVO, DIGITAL SIGNAL PROCESSOR, D/A CONVERTER (CXD3008Q) (BD Board)

Pin No.	Pin Name	I/O	Description
1	DVDD0	—	+5V power supply (digital)
2	XRST	I	System reset
3	MUTE	I	Muting selection pin
4	DATA	I	Serial data input, supplied from CPU
5	XLAT	I	Latch input, supplied from CPU
6	CLOK	I	Serial data transfer clock input, supplied from CPU
7	SENS	O	SENS output
8	SCLK	I	SENS serial data read-out clock
9	ATSK	I/O	Input pin for anti-shock (Connected to ground)
10	WFCK	O	WFCK (Write Frame Clock) output (Not used)
11	XUGF	O	XUGF output (Not used)
12	XPCK	O	XPCK output (Not used)
13	GFS	O	GFS output (Not used)
14	C2PO	O	C2PO output
15	SCOR	O	Sub-code sync output
16	CM4	O	4.2336MHz output (Not used)
17	WDCK	O	48-bit slot D/A interface word clock (Not used)
18	DVSS	—	Digital ground
19	COUT	O	Numbers of track counted signal output (Not used)
20	MIRR	O	Mirror signal output (Not used)
21	DFCT	O	Defect signal output (Not used)
22	FOK	O	Focus OK output (Not used)
23	PWMI	I	(Not used)
24	LOCK	I/O	GFS in sampled by 460Hz (Not used)
25	MDP	O	Output to control spindle motor servo
26	SSTP	I	Detection signal input from limit switch
27	FSTO	O	2/3 divider output (Not used)
28	DVDD1	—	Digital power supply
29	SFDR	O	Sled motor drive output
30	SRDR	O	
31	TFDR	O	Tracking coil drive output
32	TRDR	O	
33	FFDR	O	Focus coil drive output
34	FRDR	O	
35	DVSS1	—	Digital ground
36	TEST	I	TEST pin connected normally ground
37	TES1	I	
38	VC	I	Center voltage input
39	FE	I	FOCUS error signal input
40	SE	I	Sled error signal input

Pin No.	Pin Name	I/O	Description
41	TE	I	Tracking error signal input
42	CE	I	Center servo analog input
43	RFDC	I	RF signal input
44	ADIO	O	Test pin (Not used)
45	AVSS0	—	Analog ground
46	IGEN	I	Power supply pin operational amplifiers
47	AVDD0	—	+5V power supply (analog)
48	ASYO	O	EFM full swing output
49	ASYI	I	Asymmetry compare voltage input
50	RFAC	I	EFM RF signal input
51	AVSS1	—	Analog ground
52	CLTV	I	Control voltage input for master VCO
53	FILO	O	Filter output for master PLL
54	FILI	I	Filter input for master PLL
55	PCO	O	Charge-pump output for master PLL
56	AVDD1	—	+5V power supply (analog)
57	BIAS	I	Asymmetry circuit constant current input
58	VCTL	I	Control voltage input for variable pitch PLL
59	V16M	I/O	16.9344MHz output (Not used)
60	VPCO	O	Charge-pump output for variable pitch PLL (Not used)
61	DVDD2	—	+5V power supply (digital)
62	ASYE	I	Asymmetry circuit ON/OFF (Connected to +5V.)
63	MD2	I	Digital-out ON/OFF control (Connected to +5V.)
64	DOUT	O	Digital-out output
65	LRCK	O	48-bit slot D/A interface, LR clock output
66	PCMD	O	48-bit slot D/A interface, Serial data output
67	BCLK	O	48-bit slot D/A interface, bit clock output
68	EMPH	O	Playback disc output in emphasis mode (Not used)
69	XTSL	I	X'tal selection input pin
70	DVSS2	—	Digital ground
71	XTAI	I	X'tal oscillator circuit input
72	XTAO	O	X'tal oscillator circuit output (Not used)
73	SOUT	O	(Not used)
74	SOCK	O	
75	XOLT	O	(Not used)
76	SQSO	O	
77	SQCK	I	Clock input for SQSO read-out
78	SCSY	I	Sub-code input (Connected to ground)
79	SBSO	O	Sub-P through Sub-W serial output (Not used)
80	EXCK	I	Clock input for SBSO read-out (Connected to ground)

• IC502 CD, MECHANISM CONTROLLER (M30620MCA-A34FP) (VIDEO Board (1/3))

Pin No.	Pin Name	I/O	Description
1	SENSE	I	Internal state (SENSE) monitor input (IC101)
2	SENSE CLK	O	Serial data reading clock output (IC101)
3	RESOLUTION	O	Serial data output (IC101)
4	CROMA LEVEL	O	Lach output (IC101)
5	DSP CLK	O	Serial data clock output (IC101)
6	TSENS	I	Not used
7	REMOTE IN	I	Not used
8	BYTE	I	External bus width change input (Connected to ground)
9	CNVSS	-	Ground
10	DSP MUTE	O	Mute output (IC101) "H" : mute
11	CTRL1 (L : DOUBLE)	O	Double change output (IC101) "L" : double
12	XRESET	I	System reset input "L" : reset
13	XOUT	O	Main clock output (10MHz)
14	VSS	-	Ground
15	XIN	I	Main clock input (10MHz)
16	VCC	-	+5V power supply
17	NMI	I	Requests mask disable interruption input (Connected to +5V)
18	SCOR	I	Subcode sync input (IC101)
19	D SENS	I	Not used
20	CL680 INT	I	Video CD interruption input (IC505)
21	CL680 HSEL	O	Video CD select data of the host MPU (IC505)
22	DF LATCH	O	Digital filter latch output (IC509)
23	CL680 HRDY	I	Ready signal input for communication to the host MPU (IC505)
24	680 RESET	O	Video CD reset output (IC505) "L" : reset
25	H. SYNC IN	I	H. sync signal input
26	BGP	O	BGP output
27	LPH	O	Double control output (IC101) "H" : double
28	LD ON	O	Laser diode ON/OFF output
29	IIC-CLK	I/O	IIC clock input from master control
30	IIC-DATA	I/O	IIC data input from master control
31	DATA1O	O	Serial 1 data output (IC505, 509)
32	DATA1I	I	Serial 1 data input (IC505, 509)
33	CLK1	O	Serial 1 clock output
34	RTS1	O	Not used
35	XVLEVEL. DOWN	O	Fix the video signal output level output (Not used)
36	SUBQ DATA	I	Serial 2 data input for subcode sync reading
37	SUBQ CLK	I	Serial 2 clock input for subcode sync reading
38	P. ON	I	Not used
39	BUS XRDY	I	Not used
40	BUS	I	Not used
41	BUS XHOLD	I	Not used
42, 43	BUS	I	Not used
44	OSD LANGUAGE	I	Model selection input "L" : chinese model, "H" : except chinese model
45	V. SYNC	I	V sync signal input

Pin No.	Pin Name	I/O	Description
46	BUS XWRL	I	Not used
47	LO. BOOST	I	Not used
48	AUDIO MUTE	O	Audio mute output "L" : mute (Not used)
49	LOAD OUT	I	Not used
50	LOAD IN	I	Not used
51	INSW	I	Not used
52	OUTSW	I	Not used
53	MODEL 1	I	L : System input (Fixed at "L")
54	MODEL 2	I	L : System input (Fixed at "L")
55	TBLL	I	Not used
56	TBLR	I	Not used
57	ENC 1	I	Not used
58	ENC 2	I	Not used
59	ENC 3	I	Not used
60	—	I	Not used
61	—	I	Not used
62	VCC	—	+5V power supply
63	—	I	Not used
64	VSS	—	Ground
65	V. MUTE	O	Video mute output "L"
66 to 72	A6 to A0	I	Not used
73	TEST LED	O	TEST LED for MPEG decoder
74	TEST 1	I	Test mode for Video CD check
75	TEST 2	I	Test mode for servo check
76	TEST 3	I	Not used
77	DEVICE RESET	O	Device system rest output "L" : reset
78	STANDBY	I	Not used
79	FL CS	I	Not used
80	FL	I	Not used
81 to 88	D7 to D0	I	Not used
89	MIC CTRL	I	Not used
90	KEY 1	I	Not used
91	KEY 2	I	Not used
92	KEY 3	I	Not used
93	NY/PAL	I	NTSC/PAL select switch input (Open)
94	MUSIC VOL	I	Not used
95	DSP DATA	O	Serial data output (IC101)
96	AVSS	—	A/D converter ground
97	DSP LATCH	O	Serial data latch output (IC101)
98	VREF	I	A/D converter reference voltage input (Connected to +5V)
99	AVCC	—	A/D converter +5V power supply
100	AMP. ON	I	Not used

• IC505 MPEG VIDEO/AUDIO DECODER, VIDEO SIGNAL PROCESSOR (CL680T-D1) (VIDEO Board (2/3))

Pin No.	Pin Name	I/O	Description
1	NC	—	Not used
2	VSS	—	Ground
3	CD-BCK	I	CD Decode bit clock
4	CD-DATA	I	CD Decode data
5	CD-LRCK	I	CD Decode Left or Right channel selection clock
6	CD-C2PO	I	CD Decode C2 error data
7	NC	—	Not used
8	NC	—	Not used
9	NC	—	Not used
10	MD0	I/O	Data bus between Microcode ROM/D-RAM and CL680
11	MD1	I/O	Data bus between Microcode ROM/D-RAM and CL680
12	MD2	I/O	Data bus between Microcode ROM/D-RAM and CL680
13	MD3	I/O	Data bus between Microcode ROM/D-RAM and CL680
14	MD4	I/O	Data bus between Microcode ROM/D-RAM and CL680
15	MD5	I/O	Data bus between Microcode ROM/D-RAM and CL680
16	VSS	—	Ground
17	MD6	I/O	Data bus between Microcode ROM/D-RAM and CL680
18	VDD3	—	+3.3V Power supply
19	MD7	I/O	Data bus between Microcode ROM/D-RAM and CL680
20	VSS	—	Ground
21	MD8	I/O	Data bus between Microcode ROM/D-RAM and CL680
22	VDD3	—	+3.3V Power supply
23	MD9	I/O	Data bus between Microcode ROM/D-RAM and CL680
24	MD10	I/O	Data bus between Microcode ROM/D-RAM and CL680
25	MD11	I/O	Data bus between Microcode ROM/D-RAM and CL680
26	MD12	I/O	Data bus between Microcode ROM/D-RAM and CL680
27	MD13	I/O	Data bus between Microcode ROM/D-RAM and CL680
28	MD14	I/O	Data bus between Microcode ROM/D-RAM and CL680
29	MD15	I/O	Data bus between Microcode ROM/D-RAM and CL680
30	NC	—	Not used
31	NC	—	Not used
32	NC	—	Not used
33	NC	—	Not used
34	NC	—	Not used
35	NC	—	Not used
36	NC	—	Not used
37	<u>MCE</u>	O	Chip enable signal to Microcode ROM
38	<u>MWE</u>	O	Write enable signal to D-RAM
39	VSS	—	Ground
40	CAS	O	Column address strove : Latch the column address to D-RAM
41	VDD3	—	+3.3V power supply
42	<u>RAS0</u>	O	Row address strove : Latch row address to D-RAM
43	<u>RAS1</u>	—	Not used
44	MA10	O	Address data from CL680 to Microcode ROM
45	MA9	O	Address data from CL680 to Microcode ROM

Pin No.	Pin Name	I/O	Description
46	MA8	O	Address data from CL680 to Microcode ROM/D-RAM
47	VSS	-	Ground
48	MA7	O	Address data from CL680 to Microcode ROM/D-RAM
49	VDD3	-	+3.3V Power supply
50	MA6	O	Address data from CL680 to Microcode ROM/D-RAM
51	MA5	O	Address data from CL680 to Microcode ROM/D-RAM
52	MA4	O	Address data from CL680 to Microcode ROM/D-RAM
53	VSS	-	Ground
54	MA3	O	Address data from CL680 to Microcode ROM/D-RAM
55	VDD3	-	+3.3V Power supply
56	MA2	O	Address data from CL680 to Microcode ROM/D-RAM
57	MA1	O	Address data from CL680 to Microcode ROM/D-RAM
58	MA0	O	Address data from CL680 to Microcode ROM/D-RAM
59	PGIO7	I/O	Not used
60	<u>RESET</u>	I	Reset signal input from the host MPU
61	VDDMAX-IN	I	Fix the maximum input voltage each input pin and I/O pin
62	NC	-	Not used
63	NC	-	Not used
64	NC	-	Not used
65	AGND DAC	-	Ground
66	AVDD DAC	-	+3.3V Power supply
67	COMPOS OUT	O	Not used
68	AGND DAC	-	Ground
69	Y-OUT	O	Luminance signal out
70	AVDD DAC	-	+3.3V Power supply
71	AGND DAC	-	Ground
72	RREF	I	Fix the video signal output level
73	(1.235V) VREF	O	Reference voltage (+1.235V)
74	AVDD DAC	-	+3.3V Power supply
75	C-OUT	O	Chrominance signal out
76	AGND DAC	-	Ground
77	(GCK INT) CLK SEL	I	GCK selection "H"; Internal, "L"; External
78	CLK SEL	I	DA-XCK selection (1)
79	CLK SEL	I	DA-XCK selection (2)
80	VSS	-	Ground
81	RESERVED	I	Selection the operation clock 42.336MHz
82	VDD3	-	+3.3V Power supply
83	DA-EMP	-	Not used
84	RESERVED	-	Not used
85	AGND PLL	-	Ground
86	DA-XCLK	I	Main reference clock input (16.9344MHz=384fs)
87	AVDD PLL	-	+3.3V
88	PGIO4	I/O	Not used
89	PGIO5	I/O	Not used
90	PGIO6	I/O	Not used

Pin No.	Pin Name	I/O	Description
91	PGIO0	I/O	Not used
92	PGIO8	I/O	Not used
93	PGIO2/VSYNC/CSYNC	O	Vertical synchronized signal of video signal
94	AVDD PLL	-	+3.3V Power supply
95	NC	-	Not used
96	NC	-	Not used
97	NC	-	Not used
98	AGND PLL	-	Ground
99	VSS	-	Ground
100	NC	-	Not used
101	PGIO3/HSYNC	O	H. sync signal output
102	VDD3	-	+3.3V Power supply
103	PGIO1/VCK-OUT	I/O	Not used
104	VSS	-	Ground
105	GCK	I	Not used
106	VCK-IN	I	Main clock for video signal processor
107	GCKOUT/DA-EMP	O	Not used
108	DA-LRCK	O	Digital Audio Left or Right channel selection clock
109	VDDMAX-OUT	O	Fix the maximum output voltage certain output pins (Connected to +5V)
110	DA-DATA	O	Digital Audio data
111	DA-BCK	O	Digital Audio bit clock
112	HD-OUT	O	Serial Data output from CL680 to the host MPU
113	HRDY	O	Ready signal CL680 is ready for communication to the host MPU
114	<u>HINT</u>	O	Request signal for interrupting the host MPU
115	CDG-SCK	I/O	Not used
116	VSS	-	Ground
117	HCK	I	Host clock : reference signal for the host bus interface
118	VDD3	-	+3.3V Power supply
119	HD-IN	I	Serial Data output from the host MPU to CL680
120	VDD3	-	+3.3V Power supply
121	HSEL	I	Select data or address of the host MPU
122	CDG-SDATA	I	Ground
123	CDG-VFSY	I	Ground
124	CDG-SOS1	I	Ground
125	NC	-	Not used
126	NC	-	Not used
127	NC	-	Not used
128	NC	-	Not used

• IC401 SYSTEM CONTROLLER (M30622MAA-A60) (MAIN BOARD)

Pin No.	Pin Name	I/O	Description
1	SURROUND 1	O	Surround control signal output
2	SURROUND 2	O	Surround control signal output
3	SURROUND 3	O	Surround control signal output
4	498-DATA	O	Data signal output for IC101 (M61504FP)
5	498-CLK	O	Clock signal output for IC101 (M61504FP)
6	N.C	I	Not used.
7	AC-CUT	I	AC CUT ON (L) / OFF (H) CHECK
8	GND	—	Connected to ground.
9	GND	—	Connected to ground.
10	XC IN	I	SUB CLOCK input. (32.768kHz)
11	XC OUT	O	SUB CLOCK output. (32.768kHz)
12	RESET	I	System reset input.
13	X-OUT	O	MAIN SYSTEM CLOCK output. (16MHz)
14	VSS	—	Connected to ground.
15	X-IN	I	MAIN SYSTEM CLOCK input. (16MHz)
16	VCC	—	Power supply. (+5V)
17	NMI	I	PULL UP (EVER +5V)
18	WAKE_UP	I	WAKE UP signal input. (L)
19	SCOR	I	CD Q-data request signal input. (Connected to ground)
20	RDS-INT	I	RDS interrupt signal input. (Connected to ground)
21	RDS-DATA	I	RDS data signal input. (Connected to ground)
22	ST-MUTE	O	Tuner mute signal output.
23	STEREO	I	STEREO detect signal input. L=ON, H=OF
24	TUNED	I	TUNED detect signal input. L=ON, H=OFF
25	ST-CE	O	TUNER chip enable output.
26	ST-DOUT	O	TUNER data output.
27	ST-DIN	I	TUNER data input.
28	ST-CLK	O	TUNER clock signal output.
29	IIC_CLK	O	IIC SCL output.
30	IIC_DATA	O	IIC SDA output.
31	TXDI	—	Not used.
32	SQ-DATA	I	Subcode Q data input. (CD data) (Connected to ground)
33	SQ-CLK	I	Subcode Q data input. (CD clock) (Connected to ground)
34	RST1	I	Not used.
35	CD-DATA	I	CD data input. (Not used)
36	N.C	I	Not used.
37	CD-CLK	I	CD clock input. (Connected to ground)
38	N.C	I	Not used.
39	CLOCK-OUT	O	Clock check signal output. (Not used)
40	SENS	I	BD condition signal input. (Connected to ground)
41	HOLD	O	MODE signal input. (Not used)
42	XLT	O	CD latch signal output. (Not used)
43	XRST	O	CD reset signal output.
44	LOAD-IN	I	Loading motor control signal input.
45	LOAD-OUT	O	Loading motor control signal output.
46	OPEN	I	Tray open detect signal input.
47	CLOSE	I	Tray close detect signal input.
48	UP/DOWN SW	I	Pick-up up/down detect signal input.
49	T-SENS	I	CD table detect signal input.
50	TEST MODE	I	Not used.

Pin No.	Pin Name	I/O	Description
51	FREQ-B	I	Sound control signal to the satellite amplifier (TA-DX8).
52	FREQ-A	I	Sound control signal to the satellite amplifier (TA-DX8).
53	N.C	I	Not used.
54	N.C	I	Not used.
55	N.C	I	Not used.
56	N.C	I	Not used.
57	A TRIG	O	A deck trigger control signal output.H=ON, L=OFF
58	B TRIG	O	B deck trigger control signal output.H=ON, L=OFF
59	CAPM-H/L	O	Capstan motor High/Low speed control signal output.
60	CAPM-CONT	O	Capstan motor REV/FWD/STOP control signal output.H=REV, L=FWD/STOP
61	N.C	I	Not used.
62	VCC	—	POWER SUPPLY (+5V)
63	N.C	I	Not used.
64	VSS	—	Ground.
65	N.C	I	Not used.
66	N.C	I	Not used.
67	A HALF	I	A deck half detect signal input.
68	A PLAY	I	A deck play detect signal input.
69	B PLAY	I	B deck play detect signal input.
70	AMS-IN	I	AMS signal input. L=ON,H=OFF
71	TC-MUTE	O	Tape deck line mute ON/OFF signal output. H=ON, L=OFF
72	REC/PB/PASS	I	REC/PB/PASS select signal input.
73	NR-ON/OFF	O	DOLBY NR ON/OFF signal output. H=ON, L=OFF
74	REC-MUTE	O	REC mute ON/OFF signal output. L=ON, H=OFF
75	BAIS	O	BIAS ON/OFF signal output.H=ON, L=OFF
76	EQ-H/N	O	EQ High/Normal select signal output. H=High, L=Normal
77	PB-A/B	O	Playback deckA/B select signal output. H=deckB, L=deckA
78	ALC	O	ALC ON/OFF signal output. L=ON, H=OFF
79	TC-RELAY	O	Tape deck relay ON/OFF signal output. H=ON, L=OFF
80	N.C	I	Not used.
81	STBY-RELAY	O	STANDBY relay control signal output. (Not used)
82	PROTECT	I	Speaker protect signal input. L=ON, H=OFF
83	DBFB-ON/OFF	O	DBFD control signal output. H=ON, L=OFF
84	LINE-MUTE	O	Line mute signal output. L=ON, H=OFF
85	CD-POWER	O	CD-POWER ON/OFF signal output. H=ON, L=OFF
86	F-SHIFT	O	Not used.
87	RELAY-H	O	Speaker terminal relay control signal output. H=ON, L=OFF
88	POWER	O	POWER ON/OFF signal output. H=ON, L=OFF
89	BOOSTER SW	I	Booster switch input from the satellite amplifier (TA-DX8).
90	A SHUT	I	A deck reel pulse detect signal input.
91	B SHUT	I	B deck reel pulse detect signal input.
92	SOFT-TEST	O	Not used.
93	B HALF	I	B deck half detect signal input.
94	KEY/CD ADJ	O	KEY (for jig) / CD adjust.
95	MODEL-IN	I	Model select signal input.
96	AVSS	—	Analog ground.
97	SPEC-IN	I	Version select signal input.
98	VREF	—	Analog Reference Voltage
99	AVCC	—	Analog Power Supply
100	STK-MUTE	O	Power amplifier mute ON/OFF signal output. H=ON, L=OFF


• IC601 DISPLAY CONTROLLER (TMP88CP77F-1A22) (PANEL BOARD)

Pin No.	Pin Name	I/O	Description
1	VOL A	I	VOLUME A signal input.
2	VOL B	I	VOLUME B signal input.
3	HEADPHONE	I	Headphone detect signal input. H=ON, L=OFF
4	N.C	I	Not used.
5	EXIST3 LED	O	EXIST LED of disc3 drive signal output.
6	PLAY3 LED	O	PLAY LED of disc3 drive signal output.
7	EXIST2 LED	O	EXIST LED of disc2 drive signal output.
8	PLAY2 LED	O	PLAY LED of disc2 drive signal output.
9	EXIST1 LED	O	EXIST LED of disc1 drive signal output.
10	PLAY1 LED	O	PLAY LED of disc1 drive signal output.
11	GROOVE LED	O	GROOVE LED drive signal output.(high active)
12	FILE SEL LED	O	Cursol LED drive signal output.
13	BASS SHIFT LED	O	V-GROOVE LED drive signal output.
14	FUNCTIONS LED	O	Function indicator LED drive signal output.
15	REC/PAUSE	O	REC/PAUSE LED drive signal output.(high active)
16	SURROUND	O	SURROUND LED drive signal output.(high active)
17-19	KEY0-2	I	KEY input. (AD)
20	Super Low Freq (BPF 0)	I	BPF input. (AD)
21-25	BPF1-5	I	BPF input. (AD)
26	ALL BAND	I	BPF input. (AD)
27	TIMER LED	O	TIMER LED driver output.
28	POWER	O	I/⊕ LED output.
29	VSS	—	Ground.
30	AVSS	—	Ground.
31	AVREF	—	Analog reference voltage.
32	VDD	—	Power supply (+5V)
33-49	G17-1	O	FL gride signal output.
50	P1	O	FL segment signal output.
51	VDD VFT	—	Power supply (+5V)
52-85	P2-35	O	FL segment signal output.
86	N.C	I	Not used.
87	VKK	—	-30V driving power for FL.
88	VDD	—	Power supply (+5V)
89	Xin	I	12.5MHz (Xin)
90	VSS	—	Ground.
91	Xout	O	12.5MHz (Xout)
92	RESET	I	RESET (low active)
93-94	N.C	I	Not used.
95	TEST	I	Connected to ground.
96	WAKE UP	O	WAKE UP signal output for master controller. (PULL UP)
97	I2C data	O	IIC SDA
98	I2C clk	O	IIC SCL
99	N.C	I	Not used.
100	SIRCS	I	Remote commander input. (input capture)


7-24. IC BLOCK DIAGRAMS

- BD Board -


IC101 CXD3008Q

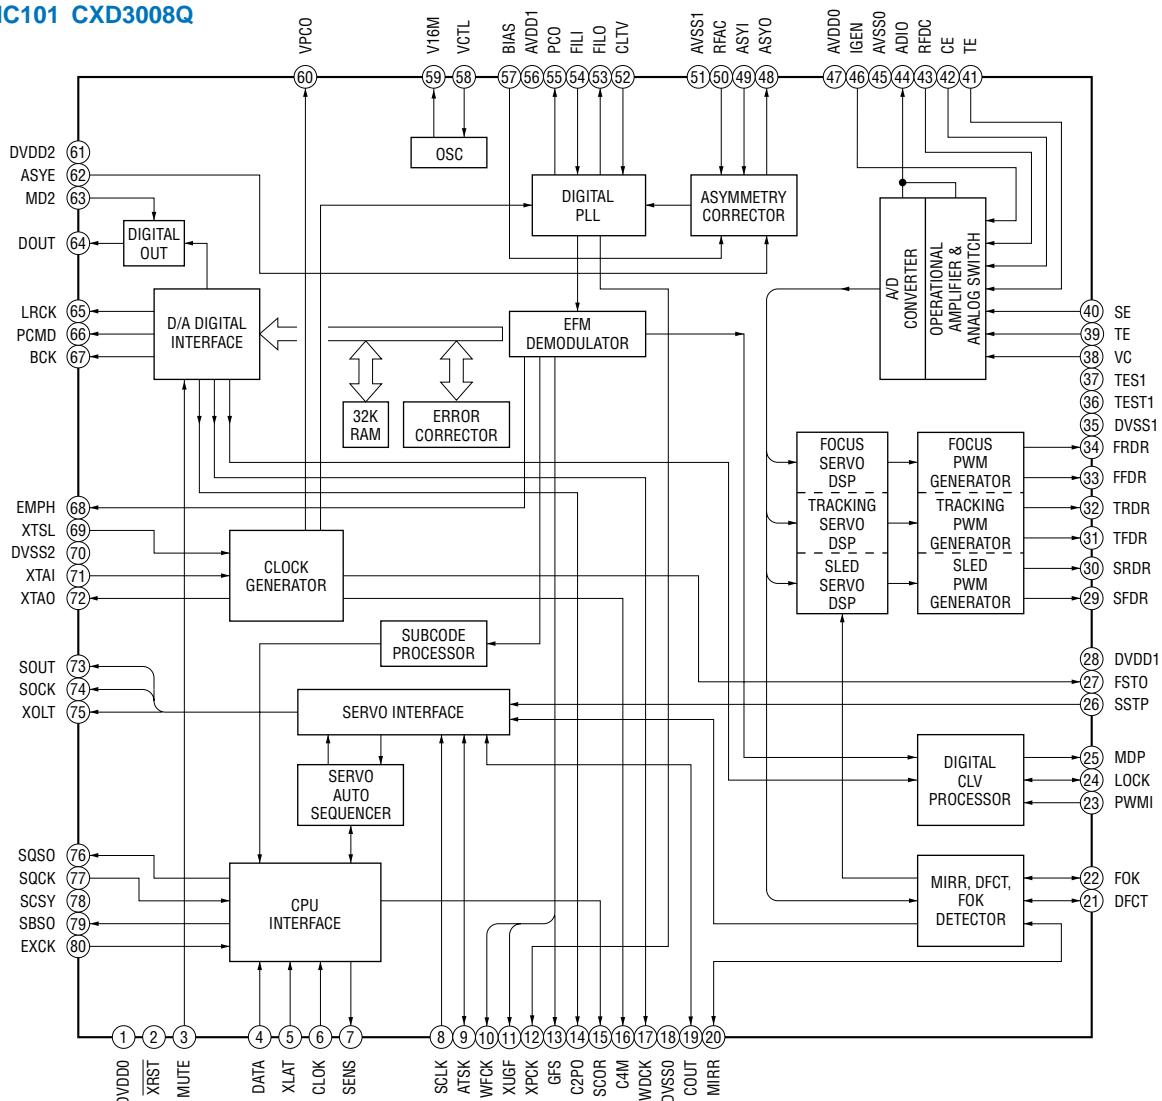

IC102 BA5982FM

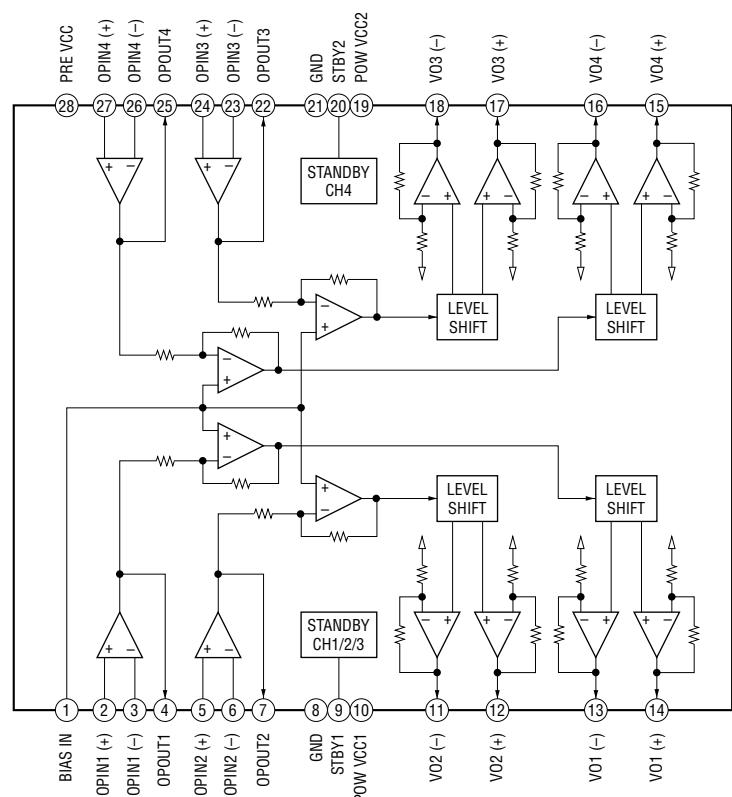


IC103 CXA2568M-T6

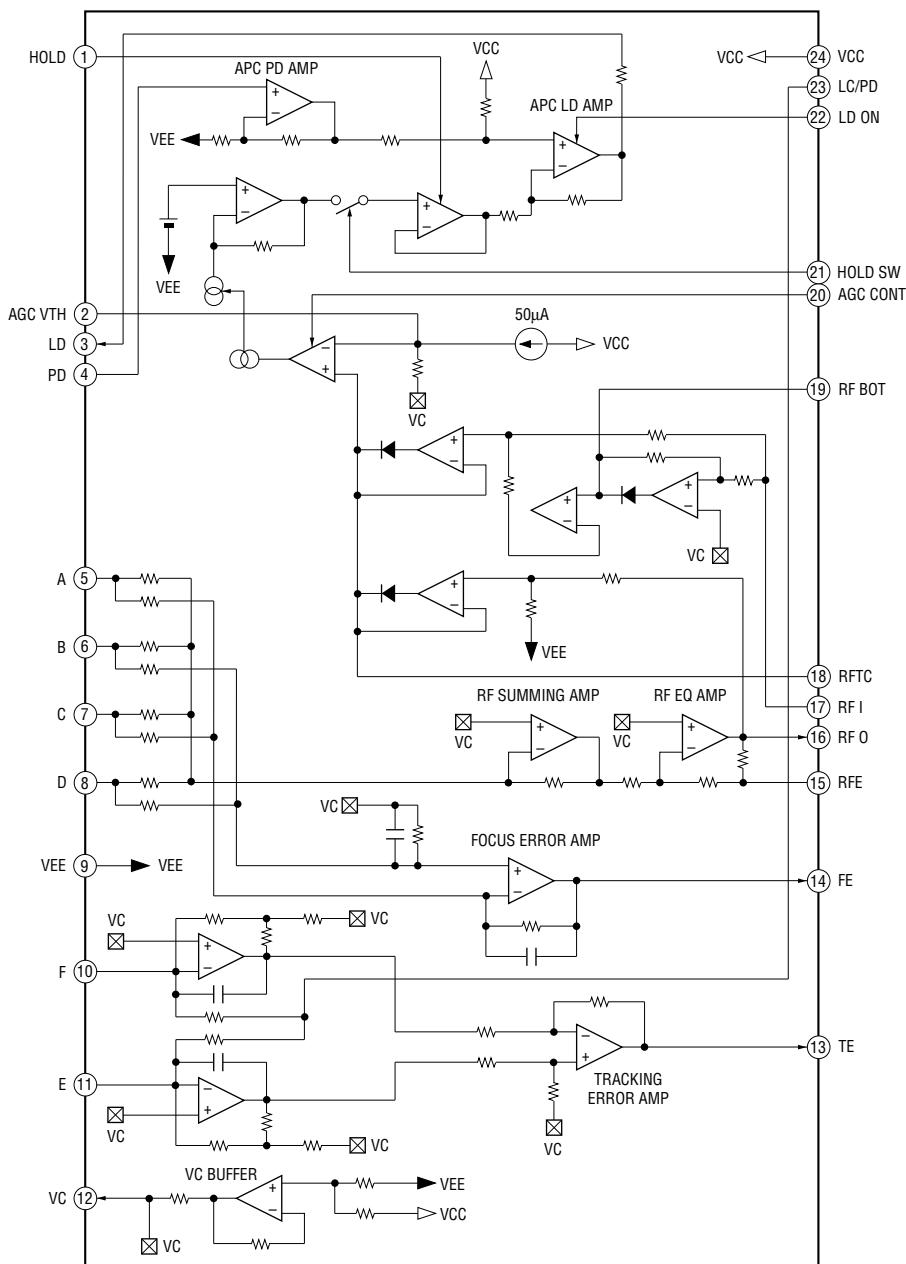


- VIDEO Board -


IC302 NJM2255M

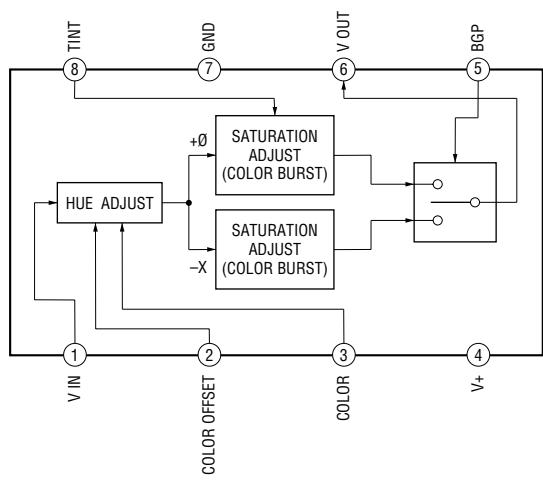


IC303 NJM2209M

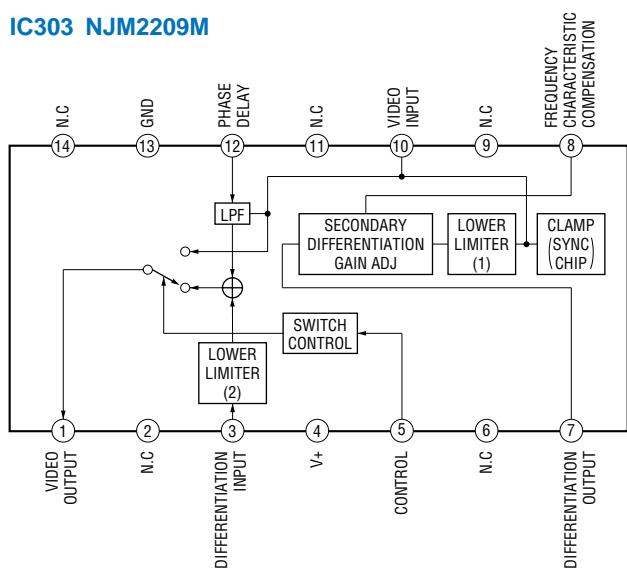

IC304 BA7665FS-E2

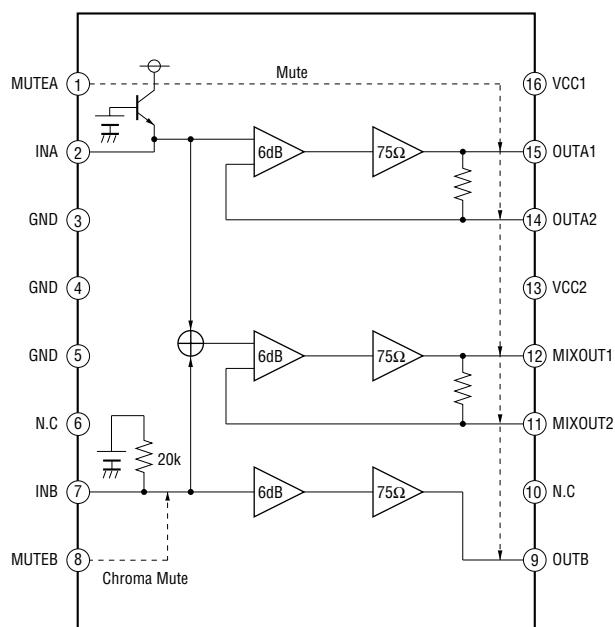


IC509 PCM1727E-2/T2

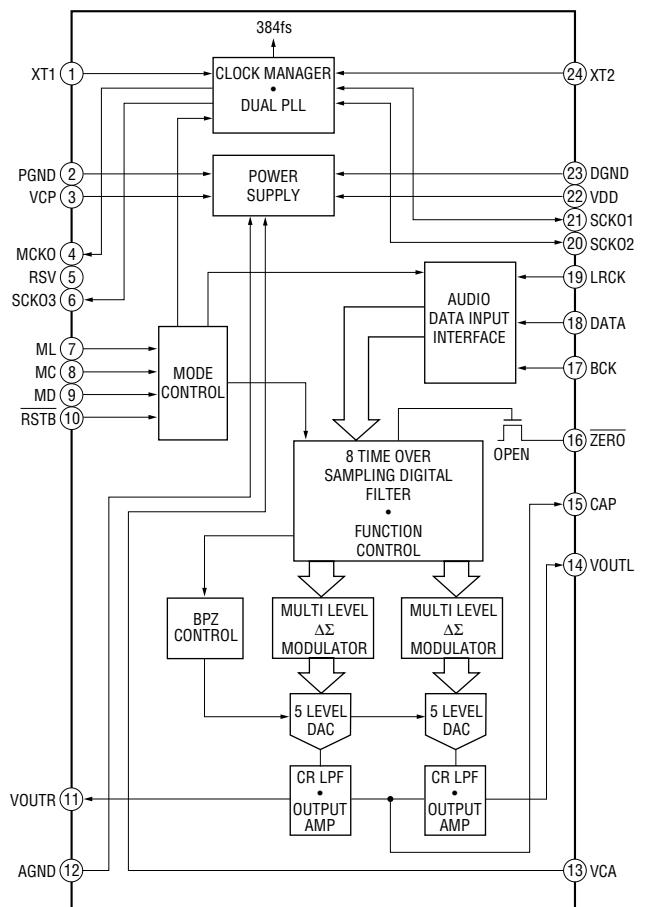


- MAIN Board -


IC103 LA2615

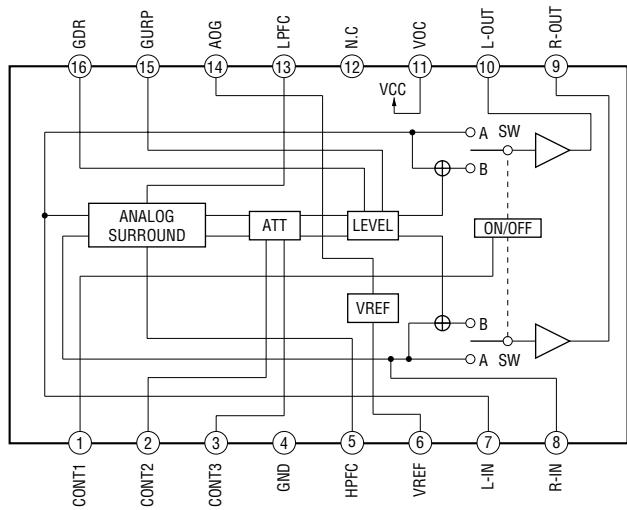


IC302 μPC1330HA

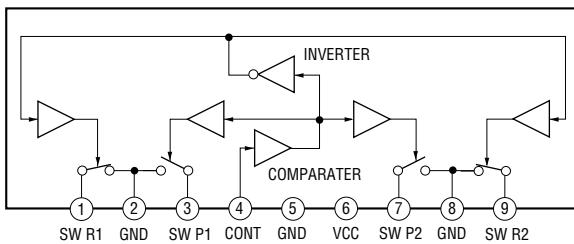

IC601 BA1450

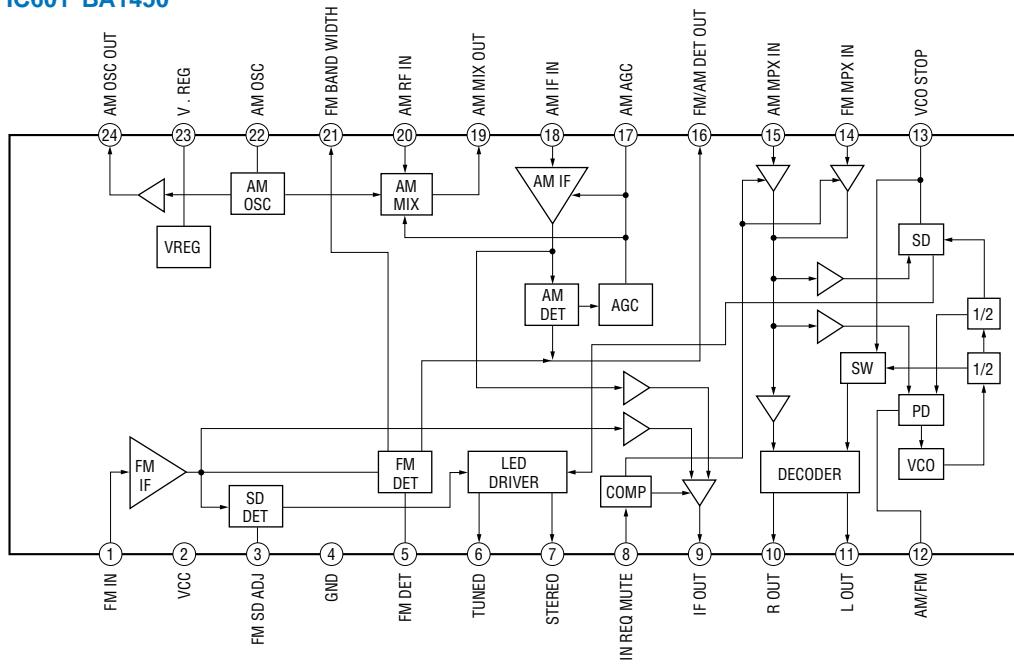


IC651 LC72130

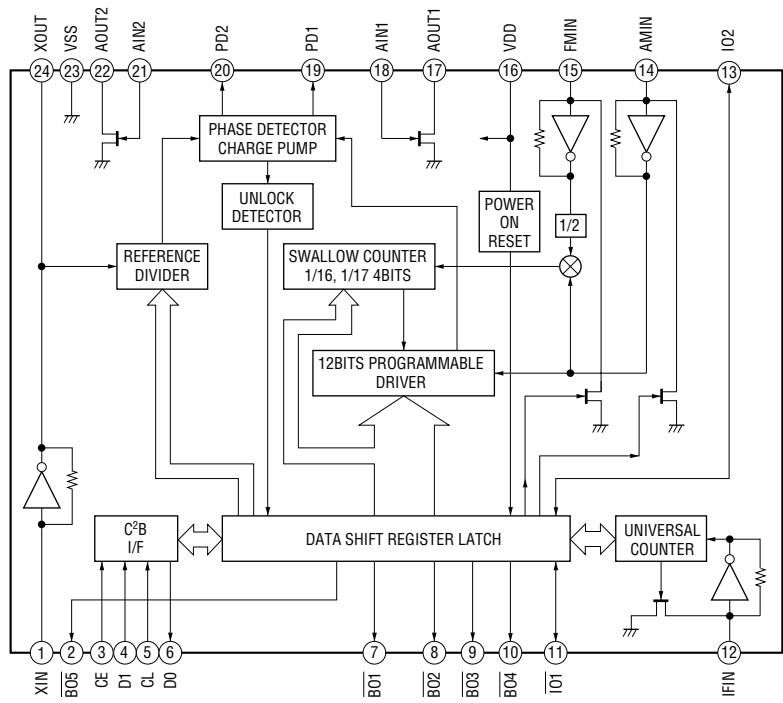


- PANEL Board -

IC602 BA3830F-E2

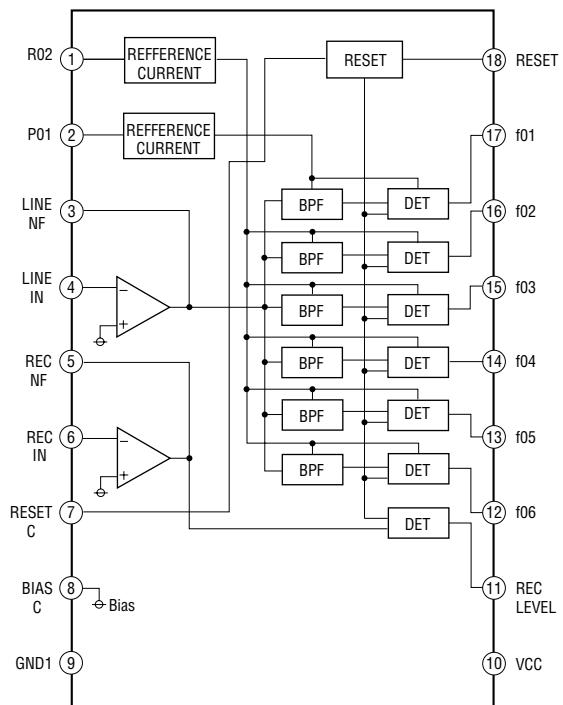


IC721 M65850FP

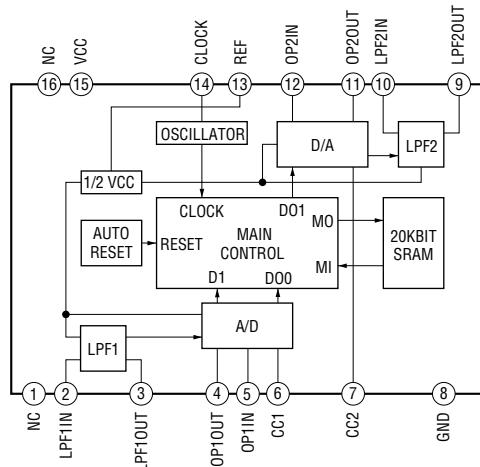

- DRIVER Board -

IC701 BA6956AN

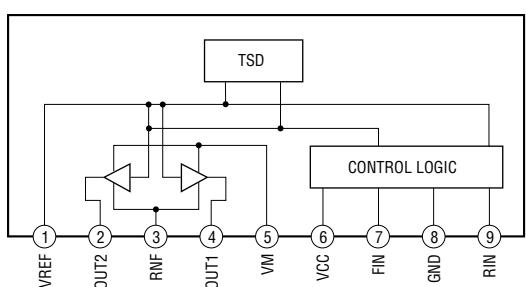

SECTION 8 EXPLODED VIEWS

NOTE:

- -XX and -X mean standardized parts, so they may have some difference from the original one.
- Color Indication of Appearance Parts
Example:
KNOB, BALANCE (WHITE) . . . (RED)
↑ ↑
Parts Color Cabinet's Color


• Abbreviation

EA : Saudi Arabia model
IA : Indonesian model
MY : Malaysia model
SP : Singapore model

- Items marked “*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.
- Hardware (# mark) list is given in the last of the electrical parts list.


The components identified by mark \triangle or dotted line with mark \triangle are critical for safety.
Replace only with part number specified.

(1) COVER SECTION

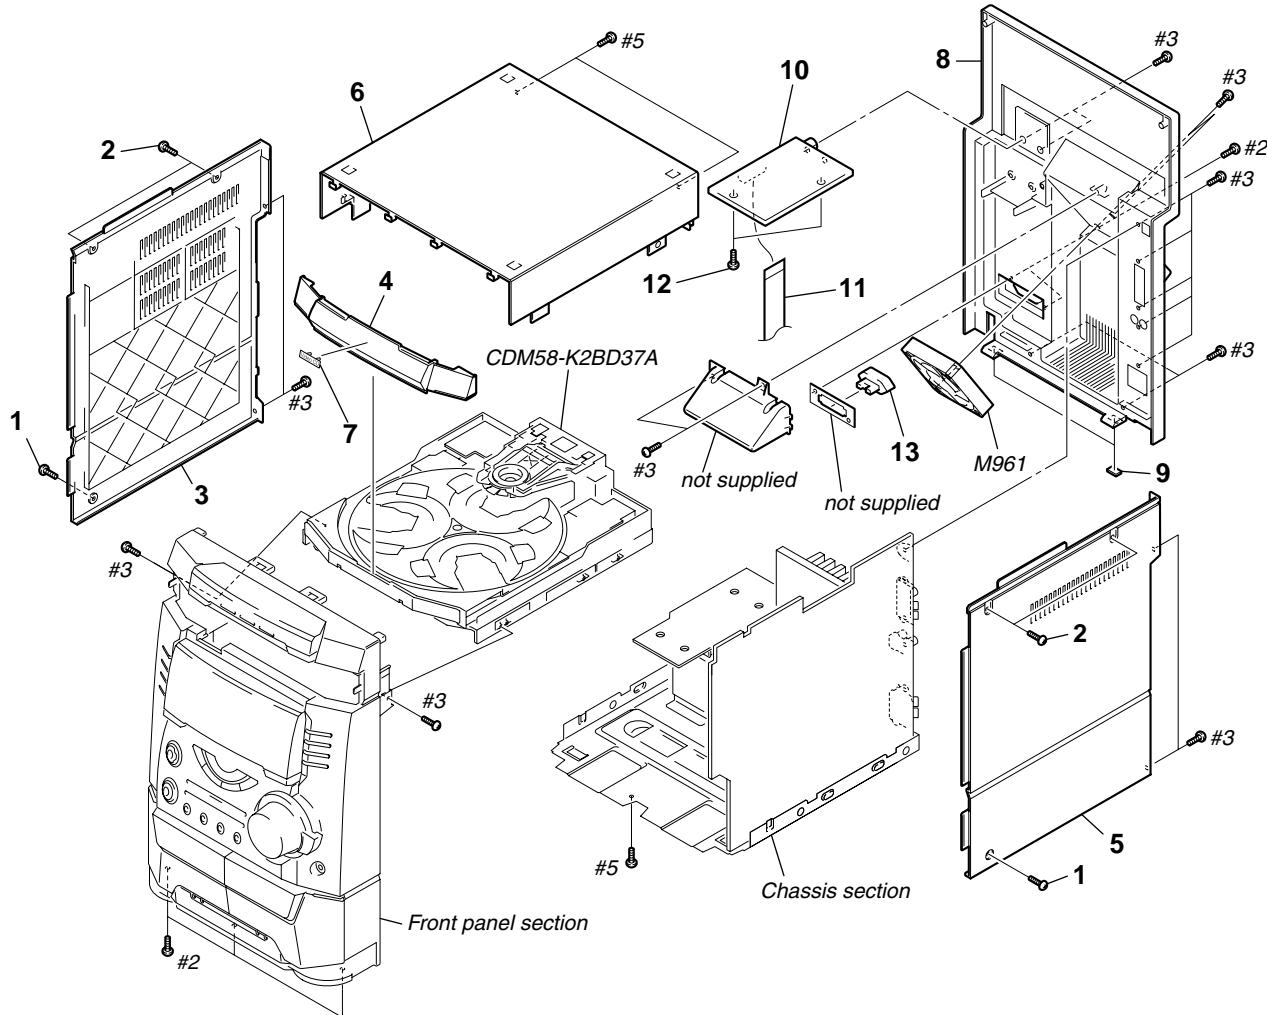


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
1	3-363-099-01	SCREW (CASE 3 TP2)		7	4-991-781-01	EMBLEM (VCD)	
2	3-363-099-41	SCREW (CASE 3 TP2)		8	4-225-040-71	BACK PANEL (E, EA, MY, SP)	
3	4-225-038-21	SIDE PANEL L		8	4-227-061-21	BACK PANEL (IA)	
4	X-4952-778-1	LOADING PANEL ASSY (EA, MY, SP)		9	4-225-252-01	CUSHION (FOOT)	
4	X-4952-779-1	LOADING PANEL ASSY (E)		10	A-4724-973-A	VIDEO BOARD, COMPLETE	
4	X-4952-783-1	LOADING PANEL ASSY (IA)		11	1-792-246-11	WIRE (FLAT TYPE) (23 CORE)	
5	4-225-039-21	SIDE PANEL R		12	4-951-620-01	SCREW (2.6X8), +BVTP	
6	4-224-550-21	COVER (TOP) (IA)		△13	1-526-794-11	OUTLET, AC	
6	4-224-550-41	COVER (TOP) (E, EA, MY, SP)		M961	1-763-072-11	FAN, D. C.	

(2) FRONT PANEL SECTION

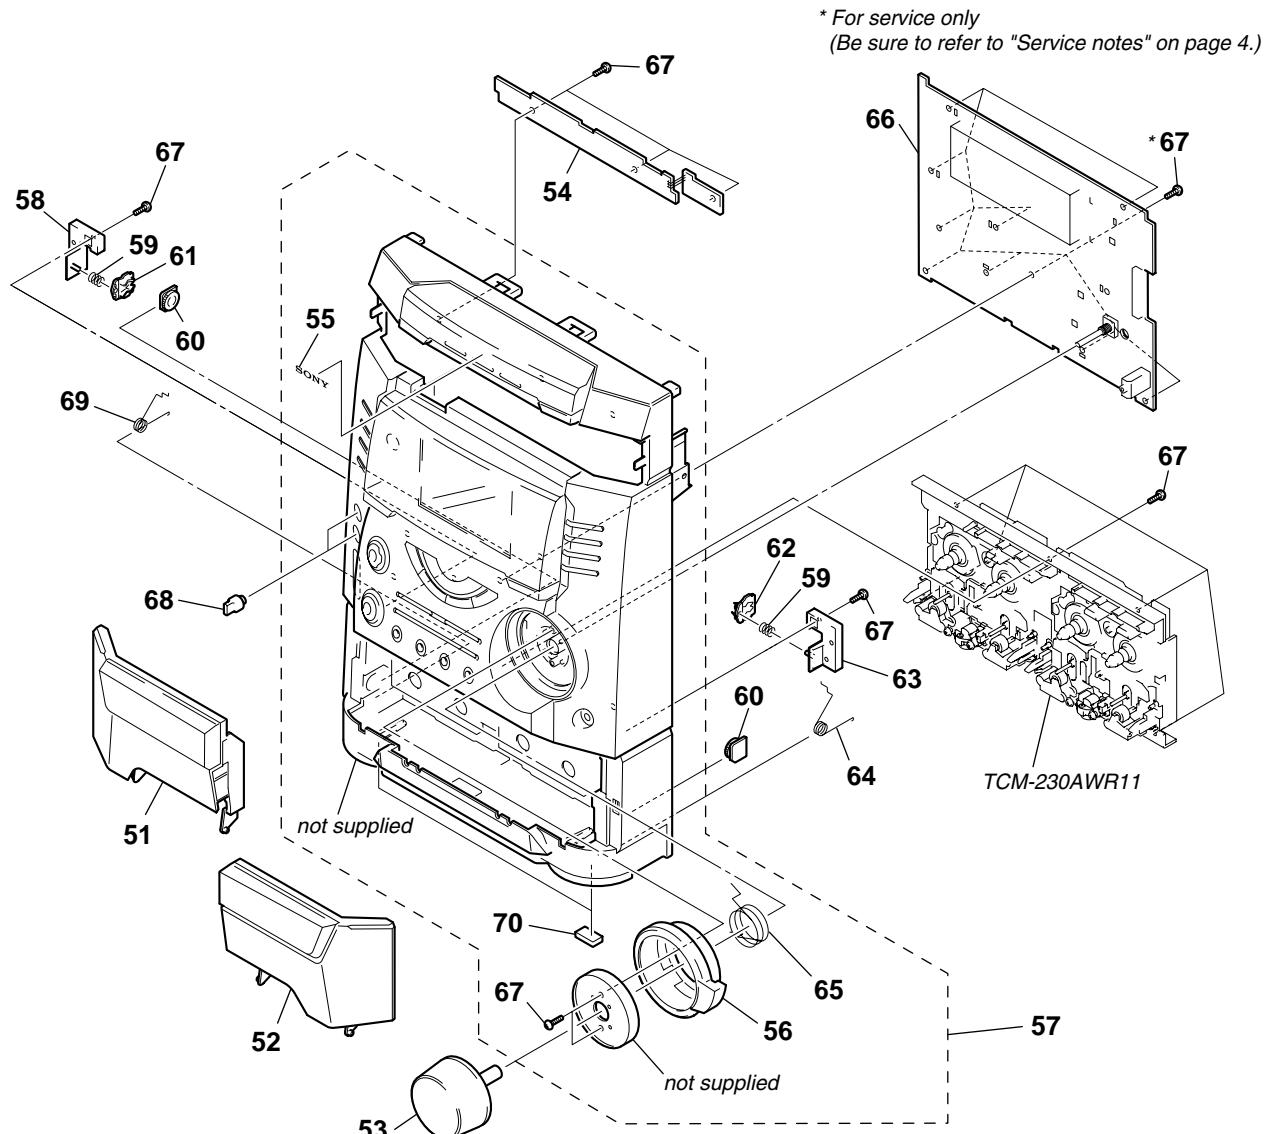

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
51	X-4952-418-1	TC HOLDER (L) ASSY (IA)		59	4-224-803-01	SPRING (PUSH), COMPRESSION COIL	
51	X-4952-790-1	TC HOLDER (L) ASSY (E, EA)		60	4-224-104-11	DAMPER	
51	X-4953-019-1	TC HOLDER (L) ASSY (EA, MY, SP)		61	4-224-560-01	CAM (L), HEART	
52	X-4952-729-1	TC HOLDER (R) ASSY (EA, MY, SP)		62	4-224-559-01	CAM (R), HEART	
52	X-4952-730-1	TC HOLDER (R) ASSY (IA)		63	4-224-561-01	BRACKET (HEART CAM R)	
52	X-4952-793-1	TC HOLDER (R) ASSY (E)		64	4-225-053-01	SPRING R	
53	4-225-032-01	VOL KNOB		65	4-225-054-01	SPRING FR	
54	A-4473-074-A	CD SWITCH BOARD, COMPLETE		66	A-4473-076-A	PANEL BOARD, COMPLETE (E, EA, MY, SP)	
55	4-962-708-71	EMBLEM (4-A), SONY		66	A-4473-525-A	PANEL BOARD, COMPLETE (IA)	
56	4-225-033-01	FR KNOB		67	4-951-620-01	SCREW (2.6X8), +BVTP	
57	X-4952-671-1	FRONT PANEL ASSY (EA, MY, SP)		68	4-224-578-01	KNOB (MIC)	
57	X-4952-672-1	FRONT PANEL ASSY (E)		69	4-225-052-01	SPRING L	
57	X-4952-676-1	FRONT PANEL ASSY (IA)		70	4-225-252-01	CUSHION (FOOT)	
58	4-224-562-01	BRACKET (HEART CAM L)					


(3) CHASSIS SECTION

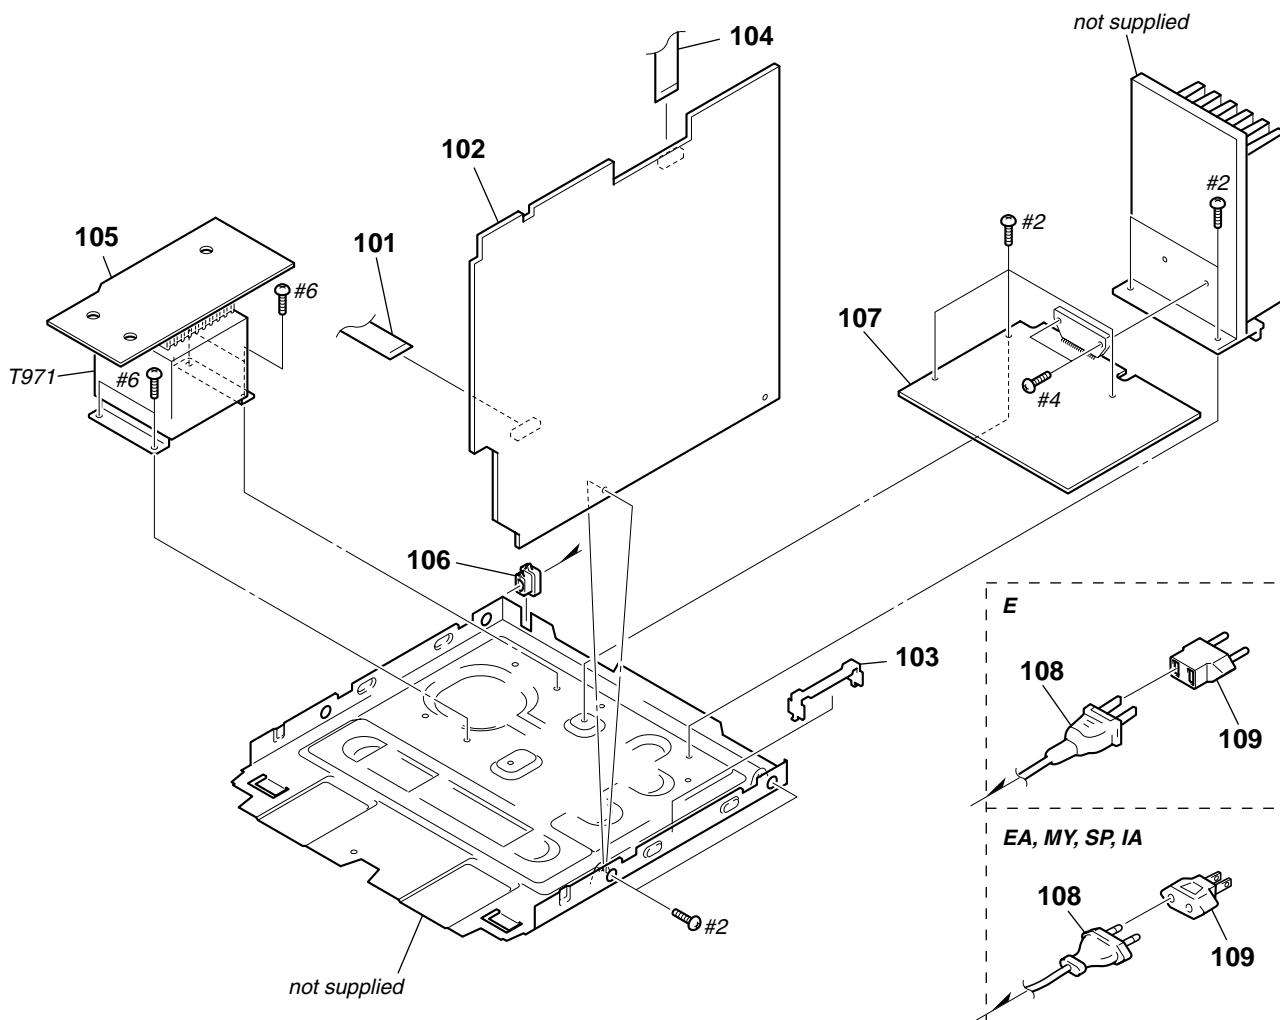

The components identified by mark \triangle or dotted line with mark \triangle are critical for safety.
Replace only with part number specified.


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
101	1-773-045-11	WIRE (FLAT TYPE) (17 CORE)		107	A-4428-483-A	POWER AMP BOARD, COMPLETE	
102	A-4428-472-A	MAIN BOARD, COMPLETE (E, MY, SP)					(E, EA, MY, SP)
102	A-4473-078-A	MAIN BOARD, COMPLETE (EA)		\triangle 108	1-575-653-11	CORD, POWER (E)	
102	A-4473-527-A	MAIN BOARD, COMPLETE (IA)		\triangle 108	1-777-071-21	CORD, POWER (MY, SP)	
* 103	4-988-533-01	HOLDER, PWB		\triangle 108	1-777-071-51	CORD, POWER (EA, IA)	
104	1-690-589-31	WIRE (FLAT TYPE) (13 CORE)		\triangle 109	1-569-007-11	ADAPTOR, CONVERSION 2P (E)	
105	1-676-808-11	TRANS BOARD		\triangle 109	1-569-008-21	ADAPTOR, CONVERSION 2P (EA, MY, SP, IA)	
* 106	3-703-244-00	BUSHING (2104), CORD		\triangle T971	1-435-325-11	POWER TRANSFORMER	
107	A-4428-344-A	POWER AMP BOARD, COMPLETE (IA)					

**(4) TAPE MECHANISM DESK SECTION
(TCM-230AWR11)**

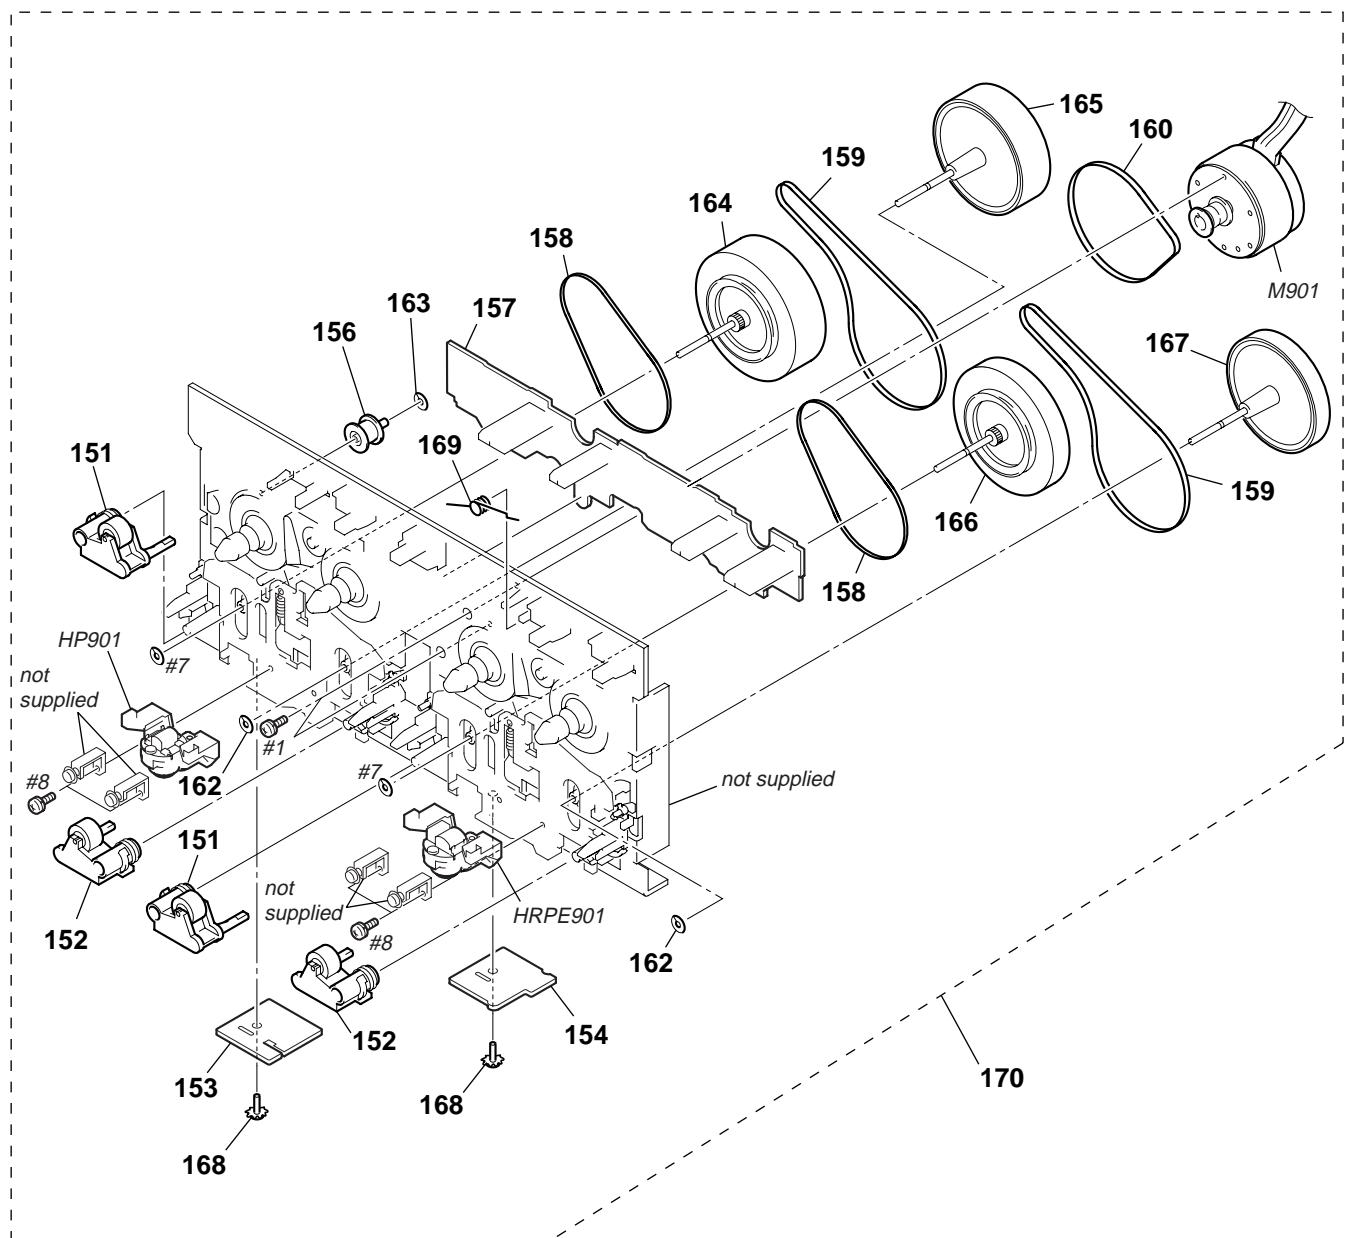


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
151	X-3374-156-5	PINCH LEVER (REV) ASSY		164	X-3378-041-1	FLYWHEEL (A-REV) ASSY	
152	X-3374-155-5	PINCH LEVER (FWD) ASSY		165	X-3378-040-1	FLYWHEEL (A-FWD) ASSY	
153	A-2007-839-A	HEAD (A) BOARD, COMPLETE		166	X-3378-043-1	FLYWHEEL (B-REV) ASSY	
154	A-2007-840-A	HEAD (B) BOARD, COMPLETE		167	X-3378-042-1	FLYWHEEL (B-FWD) ASSY	
156	3-040-580-02	PULLEY (TENSION)		168	4-227-872-11	SCREW (+PTT 2X4), GROUND POINT	
157	A-2007-838-A	LEAF SW BOARD, COMPLETE		169	4-227-455-02	SPRING (HALF), TORSION	
158	3-041-947-01	BELT (FR)		170	A-2100-894-A	TAPE MECHANISM DECK (TCM-230AWR11)	
159	3-041-946-01	BELT (CAPSTAN B)		HP901	X-4954-985-1	BLOCK (A) ASSY, HEAD (PB)	
160	4-227-239-01	BELT (CAPSTAN C)		HRPE901X-4954-986-1	BLOCK (B) ASSY, HEAD (REC/PB/ERASE)		
162	3-019-208-01	WASHER, STOPPER		M901	X-3378-241-1	MOTOR ASSY (WITH PULLEY)	(CAPSTAN/REEL)
163	3-016-533-01	WASHER (FR), STOPPER					

**(5) CD MECHANISM DECK SECTION
(CDM58-K2BD37A)**

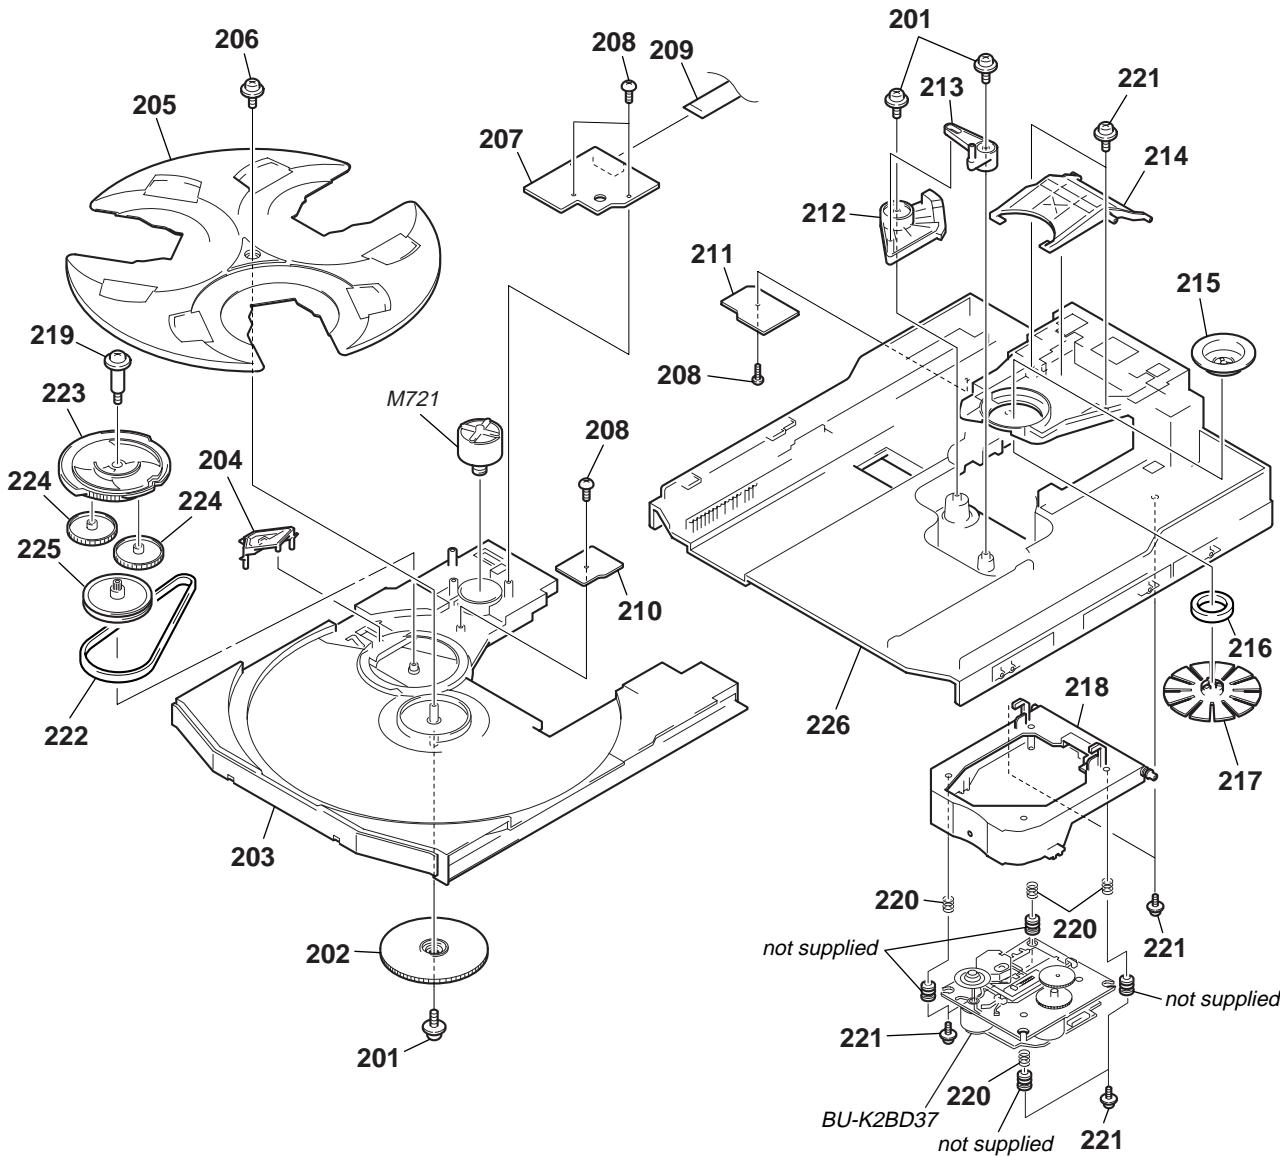

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remark</u>	<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remark</u>
201	4-933-134-11	SCREW (+PTPWH M2.6X8)		215	4-221-688-01	PULLEY (B), CHUCKING	
202	4-221-679-01	CAM (RELAY)		216	1-471-035-11	MAGNET ASSY	
203	4-221-675-01	TABLE		217	X-4952-019-1	PULLEY (A) ASSY, CHUCKING	
204	4-221-686-01	LEVER (CHANGE)		218	X-4951-889-1	HOLDER (BU) ASSY	
205	4-221-676-01	TRAY		219	4-222-097-01	SCREW, STEP	
206	4-933-134-51	SCREW (+PTPWH 2.6X8)		220	4-227-045-11	SPRING (INSULATOR), COIL	
207	1-675-910-11	MOTOR BOARD		221	4-985-672-01	SCREW (+PTPWH M2.6), FLOATING	
208	4-951-620-01	SCREW (2.6X8), +BVTP		222	4-222-095-01	BELT	
209	1-791-983-12	WIRE (FLAT TYPE) (8 CORE)		223	4-221-678-02	CAM (CONTROL)	
210	1-675-911-11	SENSOR BOARD		224	4-221-683-01	GEAR (U)	
211	1-675-912-11	DRIVER BOARD		225	4-221-685-01	PULLEY (S)	
212	X-4952-608-1	CAM (U/D) ASSY		226	4-221-674-03	CHASSIS	
213	4-221-681-01	LEVER (EX)		M721	A-4672-826-A	MOTOR ASSY (TURN)	
214	4-221-682-01	LEVER (LIFTER)					

**(6) BASE UNIT SECTION
(BU-K2BD37A)**

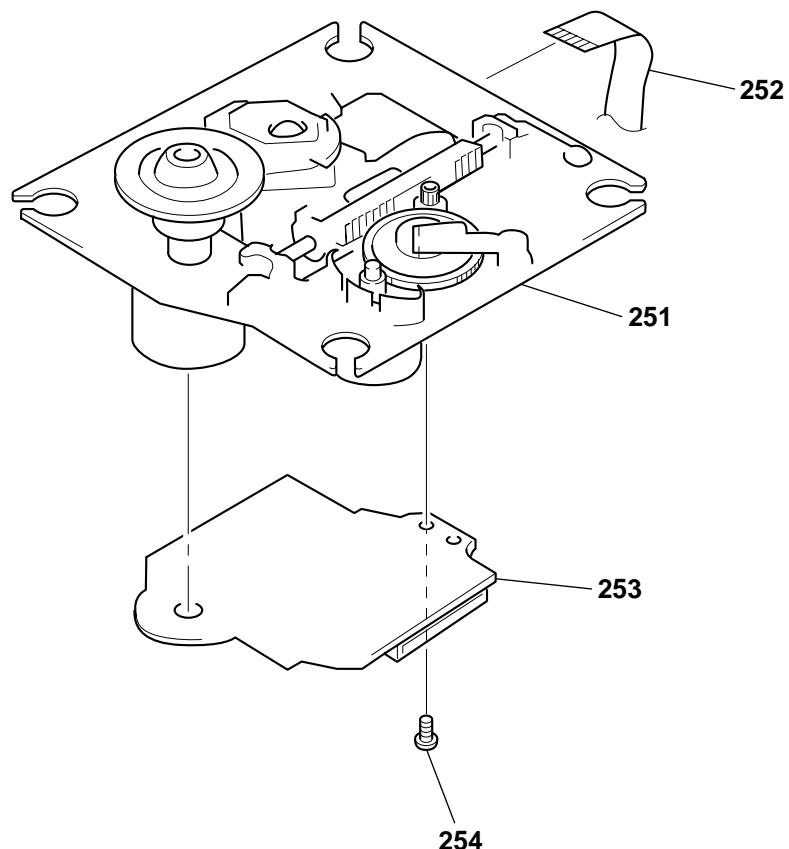

The components identified by mark \triangle or dotted line with mark \triangle are critical for safety.
Replace only with part number specified.

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remark</u>	<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remark</u>
\triangle 251	8-820-116-01	OPTICAL PICK-UP KSM-213DAP/Z-NP		253	A-4725-001-A	BD BOARD, COMPLETE	
252	1-769-069-11	WIRE (FLAT TYPE) (16 CORE)		254	4-951-620-01	SCREW (2.6X8), +BVTP	

SECTION 9

ELECTRICAL PARTS LIST

NOTE:

• Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.

• -XX and -X mean standardized parts, so they may have some difference from the original one.

• RESISTORS

All resistors are in ohms.

METAL: Metal-film resistor.

METAL OXIDE: Metal oxide-film resistor.

F: nonflammable

• Abbreviation

EA : Saudi Arabia model

MY : Malaysia model

IA : Indonesian model

SP : Singapore model

- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

• SEMICONDUCTORS

In each case, u: μ , for example:

uA... : μ A... uPA... : μ PA...

uPB... : μ PB... uPC... : μ PC...

uPD... : μ PD...

• CAPACITORS

uF: μ F

• COILS

uH: μ H

The components identified by mark \triangle or dotted line with mark \triangle are critical for safety. Replace only with part number specified.

When indicating parts by reference number, please include the board.

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
A-4725-001-A	BD BOARD, COMPLETE						< CONNECTOR >

		< CAPACITOR >		CN101	1-770-706-11	CONNECTOR, FFC/FPC 23P	
				CN102	1-777-937-11	CONNECTOR, FFC/FPC 16P	
C101	1-163-005-11	CERAMIC CHIP	470PF	10%	50V		< IC >
C102	1-163-038-00	CERAMIC CHIP	0.1uF		25V		
C103	1-163-005-11	CERAMIC CHIP	470PF	10%	50V	IC101	8-752-397-42 IC CXD3008Q
C105	1-126-206-11	ELECT CHIP	100uF	20%	6.3V	IC102	8-759-640-22 IC BA5982FM
C106	1-164-346-11	CERAMIC CHIP	1uF		16V	IC103	8-752-085-51 IC CXA2568M-T6
						IC104	8-759-398-25 IC TC7SH04F (TE85L)
C107	1-164-346-11	CERAMIC CHIP	1uF		16V		
C108	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V		< COIL >
C109	1-163-145-00	CERAMIC CHIP	0.0015uF	5%	50V	L101	1-414-234-22 FERRITE BEAD
C110	1-164-161-11	CERAMIC CHIP	0.0022uF	10%	100V	L102	1-410-377-31 INDUCTOR CHIP 4.7uH
C111	1-163-251-11	CERAMIC CHIP	100PF	5%	50V		
C112	1-163-038-00	CERAMIC CHIP	0.1uF		25V		< TRANSISTOR >
C113	1-163-038-00	CERAMIC CHIP	0.1uF		25V	Q101	8-729-049-31 TRANSISTOR 2SB710-RTX
C115	1-126-607-11	ELECT CHIP	47uF	20%	4V		
C116	1-126-607-11	ELECT CHIP	47uF	20%	4V		
C117	1-126-209-11	ELECT CHIP	100uF	20%	4V		< RESISTOR >
C118	1-163-275-11	CERAMIC CHIP	0.001uF	5%	50V	R101	1-216-077-00 RES-CHIP 15K
C119	1-163-106-00	CERAMIC CHIP	36PF	5%	50V	R102	1-216-097-00 RES-CHIP 100K
C120	1-109-982-11	CERAMIC CHIP	1uF	10%	10V	R103	1-216-077-00 RES-CHIP 15K
C121	1-125-838-11	CERAMIC CHIP	2.2uF	10%	6.3V	R104	1-216-085-00 METAL CHIP 33K
C122	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V	R105	1-216-073-00 METAL CHIP 10K
C123	1-163-021-11	CERAMIC CHIP	0.01uF	10%	50V	R106	1-216-049-11 RES-CHIP 1K
C124	1-163-017-00	CERAMIC CHIP	0.0047uF	5%	50V	R107	1-216-073-00 METAL CHIP 10K
C126	1-124-779-00	ELECT CHIP	10uF	20%	16V	R108	1-216-061-00 METAL CHIP 3.3K
C130	1-163-038-00	CERAMIC CHIP	0.1uF		25V	R109	1-216-121-00 RES-CHIP 1M
C140	1-163-038-00	CERAMIC CHIP	0.1uF		25V	R110	1-216-295-00 SHORT 0
C141	1-163-038-00	CERAMIC CHIP	0.1uF		25V	R112	1-216-025-00 RES-CHIP 100
C154	1-163-038-00	CERAMIC CHIP	0.1uF		25V	R123	1-216-073-00 METAL CHIP 10K
C159	1-163-017-00	CERAMIC CHIP	0.0047uF	5%	50V	R124	1-216-097-00 RES-CHIP 100K
C161	1-163-038-00	CERAMIC CHIP	0.1uF		25V	R125	1-216-033-00 METAL CHIP 220
C170	1-163-038-00	CERAMIC CHIP	0.1uF		25V	R126	1-216-033-00 METAL CHIP 220
C171	1-163-038-00	CERAMIC CHIP	0.1uF		25V	R127	1-216-033-00 METAL CHIP 220
C180	1-163-137-00	CERAMIC CHIP	680PF	5%	50V	R131	1-216-033-00 METAL CHIP 220
C181	1-163-137-00	CERAMIC CHIP	680PF	5%	50V	R135	1-216-295-00 SHORT 0
C182	1-163-137-00	CERAMIC CHIP	680PF	5%	50V	R136	1-216-295-00 SHORT 0
C183	1-163-137-00	CERAMIC CHIP	680PF	5%	50V	R137	1-216-295-00 SHORT 0
C184	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V	R138	1-216-295-00 SHORT 0
C185	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V	R143	1-216-103-00 METAL CHIP 180K
C186	1-128-065-11	ELECT CHIP	68uF	20%	10V	R144	1-216-103-00 METAL CHIP 180K
C187	1-163-038-00	CERAMIC CHIP	0.1uF		25V	R145	1-216-121-00 RES-CHIP 1M
						R146	1-216-121-00 RES-CHIP 1M
							5% 1/10W

BD	CD SWITCH	DRIVER	HEAD (A)
-----------	------------------	---------------	-----------------

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remark</u>			<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remark</u>									
< RESISTOR >																		
R147	1-216-041-00	METAL CHIP	470	5%	1/10W	R685	1-249-417-11	CARBON	1K	5%	1/4W							
R148	1-216-001-00	METAL CHIP	10	5%	1/10W	R686	1-249-418-11	CARBON	1.2K	5%	1/4W							
R149	1-216-003-11	RES-CHIP	12	5%	1/10W	R687	1-249-420-11	CARBON	1.8K	5%	1/4W							
R150	1-216-073-00	METAL CHIP	10K	5%	1/10W	R688	1-249-422-11	CARBON	2.7K	5%	1/4W							
R154	1-216-025-00	RES-CHIP	100	5%	1/10W	R689	1-247-843-11	CARBON	3.3K	5%	1/4W							
R155	1-216-025-00	RES-CHIP	100	5%	1/10W	R690	1-249-425-11	CARBON	4.7K	5%	1/4W							
R156	1-216-025-00	RES-CHIP	100	5%	1/10W	R691	1-249-427-11	CARBON	6.8K	5%	1/4W							
R157	1-216-025-00	RES-CHIP	100	5%	1/10W	R692	1-249-429-11	CARBON	10K	5%	1/4W							
R158	1-216-073-00	METAL CHIP	10K	5%	1/10W	R750	1-249-406-11	CARBON	120	5%	1/4W							
R159	1-216-089-00	RES-CHIP	47K	5%	1/10W	R751	1-249-406-11	CARBON	120	5%	1/4W							
R161	1-216-295-00	SHORT	0			R752	1-249-406-11	CARBON	120	5%	1/4W							
R162	1-216-101-00	METAL CHIP	150K	5%	1/10W	R753	1-249-406-11	CARBON	120	5%	1/4W							
R171	1-216-025-00	RES-CHIP	100	5%	1/10W	R754	1-249-406-11	CARBON	120	5%	1/4W							
R172	1-216-025-00	RES-CHIP	100	5%	1/10W	R755	1-249-406-11	CARBON	120	5%	1/4W							
R173	1-216-025-00	RES-CHIP	100	5%	1/10W	< SWITCH >												
R175	1-216-025-00	RES-CHIP	100	5%	1/10W	S642	1-771-410-21	SWITCH, TACTILE (DISC SKIP/EX-CHANGE)										
R180	1-216-097-00	RES-CHIP	100K	5%	1/10W	S643	1-771-410-21	SWITCH, TACTILE (DISC 1)										
R181	1-216-100-00	RES-CHIP	130K	5%	1/10W	S644	1-771-410-21	SWITCH, TACTILE (DISC 2)										
R182	1-216-081-00	METAL CHIP	22K	5%	1/10W	S645	1-771-410-21	SWITCH, TACTILE (DISC 3)										
R183	1-216-081-00	METAL CHIP	22K	5%	1/10W	S646	1-771-410-21	SWITCH, TACTILE (▲ OPEN/CLOSE (CD))										
R184	1-216-070-00	METAL CHIP	7.5K	5%	1/10W	S647	1-771-410-21	SWITCH, TACTILE (PREV)										
R185	1-216-070-00	METAL CHIP	7.5K	5%	1/10W	S648	1-771-410-21	SWITCH, TACTILE (NEXT)										
R186	1-216-081-00	METAL CHIP	22K	5%	1/10W	S649	1-771-410-21	SWITCH, TACTILE (RETURN)										
R187	1-216-081-00	METAL CHIP	22K	5%	1/10W	*****												
R188	1-216-070-00	METAL CHIP	7.5K	5%	1/10W	1-675-912-11 DRIVER BOARD												
R189	1-216-070-00	METAL CHIP	7.5K	5%	1/10W	*****												
R190	1-216-081-00	METAL CHIP	22K	5%	1/10W	< CAPACITOR >												
R191	1-216-081-00	METAL CHIP	22K	5%	1/10W	C702	1-126-964-51	ELECT	10uF	20%	50V							
R192	1-216-070-00	METAL CHIP	7.5K	5%	1/10W	< CONNECTOR >												
R193	1-216-070-00	METAL CHIP	7.5K	5%	1/10W	CN701	1-785-336-11	PIN, CONNECTOR (LIGHT ANGLE) 10P										
R194	1-216-295-00	SHORT	0			CN702	1-785-550-11	CONNECTOR, FFC/FPC 8P										
R203	1-216-025-00	RES-CHIP	100	5%	1/10W	< DIODE >												
R204	1-216-025-00	RES-CHIP	100	5%	1/10W	D701	8-719-983-63	DIODE	MTZJ-T-72-3.3B									
R205	1-216-025-00	RES-CHIP	100	5%	1/10W	< IC >												
R206	1-216-295-00	SHORT	0			IC701	8-759-598-69	IC	BA6956AN									
R210	1-216-295-00	SHORT	0			< RESISTOR >												
< SWITCH >																		
S101	1-771-853-11	SWITCH, DETECTION (LIMIT)				R701	1-249-411-11	CARBON	330	5%	1/4W							

A-4473-074-A CD SWITCH BOARD, COMPLETE																		

< LED >																		
D630	8-719-056-13	LED	SML79423C-TP15	(DISC 1)		R702	1-249-401-11	CARBON	47	5%	1/4W							
D631	8-719-056-13	LED	SML79423C-TP15	(DISC 2)		*****												
D632	8-719-056-13	LED	SML79423C-TP15	(DISC 3)		< TRANSISTOR >												
< TRANSISTOR >																		
Q630	8-729-422-57	TRANSISTOR	BN1A4M-TP			< CONNECTOR >												
Q631	8-729-422-57	TRANSISTOR	BN1A4M-TP			* CN1 1-564-719-11 PIN, CONNECTOR (SMALL TYPE) 3P												
Q632	8-729-422-57	TRANSISTOR	BN1A4M-TP			*****												
Q633	8-729-422-57	TRANSISTOR	BN1A4M-TP			< CONNECTOR >												
Q634	8-729-422-57	TRANSISTOR	BN1A4M-TP			*****												
Q635	8-729-422-57	TRANSISTOR	BN1A4M-TP			1-676-220-12 HEAD (A) BOARD												

HEAD (B)

LEAF SW

MAIN

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
	1-676-221-12	HEAD (B) BOARD *****			A-4428-472-A	MAIN BOARD, COMPLETE (E, MY, SP)	
		< CONNECTOR >			A-4473-078-A	MAIN BOARD, COMPLETE (EA)	
	CN2	PIN, CONNECTOR (SMALL TYPE) 6P			A-4473-527-A	MAIN BOARD, COMPLETE (IA)	
		*****				*****	
	A-2007-838-A	LEAF SW BOARD, COMPLETE *****			7-685-646-79	SCREW +BVTP 3X8 TYPE2 N-S	
		< CAPACITOR >				< CAPACITOR >	
C1001	1-107-716-11	ELECT	33uF 20% 10V	C101	1-163-001-11	CERAMIC CHIP	220PF 10% 50V
		< CONNECTOR >		C102	1-126-961-11	ELECT	2.2uF 20% 50V
CN1001	1-568-860-21	SOCKET, CONNECTOR 17P		C103	1-126-964-11	ELECT	10uF 20% 50V
		< DIODE >		C104	1-126-964-11	ELECT	10uF 20% 50V
D1001	8-719-911-19	DIODE 1SS133T-72		C105	1-126-964-11	ELECT	10uF 20% 50V
D1002	8-719-911-19	DIODE 1SS133T-72		C106	1-136-161-00	MYLAR	0.047uF 5% 50V
		< PHOTO INTERRUPTER >		C107	1-136-495-11	MYLAR	0.068uF 5% 50V
IC1001	8-749-014-38	PHOTO INTERRUPTER SG-264		C108	1-136-495-11	MYLAR	0.068uF 5% 50V
IC1002	8-749-014-38	PHOTO INTERRUPTER SG-264		C109	1-163-019-00	CERAMIC CHIP	0.0068uF 10% 50V
		< TRANSISTOR >		C110	1-163-019-00	CERAMIC CHIP	0.0068uF 10% 50V
Q1001	8-729-029-56	TRANSISTOR DTA144ESA-TP		C111	1-163-018-00	CERAMIC CHIP	0.0056uF 5% 50V
		< RESISTOR >		C112	1-126-961-11	ELECT	2.2uF 20% 50V
R907	1-247-879-11	CARBON	100K 5% 1/4W	C113	1-126-957-11	ELECT	0.22uF 20% 50V
R1001	1-249-409-11	CARBON	220 5% 1/4W	C115	1-136-169-00	MYLAR	0.22uF 5% 50V
R1002	1-249-409-11	CARBON	220 5% 1/4W	C116	1-136-169-00	MYLAR	0.22uF 5% 50V
R1003	1-249-414-11	CARBON	560 5% 1/4W	C117	1-126-964-11	ELECT	10uF 20% 50V
R1004	1-247-834-11	CARBON	1.3K 5% 1/4W	C118	1-126-961-11	ELECT	2.2uF 20% 50V
R1005	1-247-818-11	CARBON	300 5% 1/4W	C121	1-126-964-11	ELECT	10uF 20% 50V
R1006	1-247-864-11	CARBON	24K 5% 1/4W	C122	1-126-964-11	ELECT	10uF 20% 50V
R1007	1-247-780-00	CARBON	7.5 5% 1/4W	C123	1-126-964-11	ELECT	10uF 20% 50V
R1008	1-249-417-11	CARBON	1K 5% 1/4W	C124	1-163-038-00	CERAMIC CHIP	0.1uF 25V
		< VARIABLE RESISTOR >		C131	1-136-169-00	MYLAR	0.22uF 5% 50V
RV1001	1-241-785-11	RES, ADJ, CARBON 10K		C132	1-126-964-11	ELECT	10uF 20% 50V
RV1002	1-241-785-11	RES, ADJ, CARBON 10K		C133	1-126-925-11	ELECT	470uF 20% 10V
		< SWITCH >		C134	1-163-038-00	CERAMIC CHIP	0.1uF 25V
S1001	1-570-953-11	SWITCH, PUSH (1 KEY) (A PLAY)		C135	1-126-964-11	ELECT	10uF 20% 50V
S1002	1-570-953-11	SWITCH, PUSH (1 KEY) (B PLAY)		C140	1-163-038-00	CERAMIC CHIP	0.1uF 25V
S1003	1-771-333-11	SWITCH, LEAF (A HALF)		C142	1-163-038-00	CERAMIC CHIP	0.1uF 25V
S1004	1-771-536-11	SWITCH, LEAF (A 120/70)		C144	1-126-964-11	ELECT	10uF 20% 50V
S1005	1-771-536-11	SWITCH, LEAF (REC A)		C146	1-126-925-11	ELECT	470uF 20% 10V
S1006	1-771-333-11	SWITCH, LEAF (B HALF)		C151	1-163-001-11	CERAMIC CHIP	220PF 10% 50V
S1008	1-771-536-11	SWITCH, LEAF (B 120/70)		C152	1-126-961-11	ELECT	2.2uF 20% 50V
S1009	1-771-536-11	SWITCH, LEAF (REC B)		C153	1-126-964-11	ELECT	10uF 20% 50V
		*****		C154	1-126-964-11	ELECT	10uF 20% 50V
				C155	1-126-964-11	ELECT	10uF 20% 50V
				C156	1-136-161-00	MYLAR	0.047uF 5% 50V
				C157	1-136-495-11	MYLAR	0.068uF 5% 50V
				C158	1-136-495-11	MYLAR	0.068uF 5% 50V
				C159	1-163-019-00	CERAMIC CHIP	0.0068uF 10% 50V
				C160	1-163-019-00	CERAMIC CHIP	0.0068uF 10% 50V
				C161	1-163-018-00	CERAMIC CHIP	0.0056uF 5% 50V
				C162	1-126-961-11	ELECT	2.2uF 20% 50V
				C165	1-136-169-00	MYLAR	0.22uF 5% 50V
				C166	1-136-169-00	MYLAR	0.22uF 5% 50V
				C167	1-126-964-11	ELECT	10uF 20% 50V
		*****		C171	1-126-964-11	ELECT	10uF 20% 50V
				C172	1-126-964-11	ELECT	10uF 20% 50V
				C181	1-163-038-00	CERAMIC CHIP	0.1uF 25V
				C182	1-126-963-11	ELECT	4.7uF 20% 50V
				C185	1-126-960-11	ELECT	1uF 20% 50V

Ref. No.	Part No.	Description			Remark	Ref. No.	Part No.	Description			Remark
C186	1-126-960-11	ELECT	1uF	20%	50V	C353	1-136-165-00	MYLAR	0.1uF	5%	50V
C187	1-163-038-00	CERAMIC CHIP	0.1uF		25V	C354	1-136-165-00	MYLAR	0.1uF	5%	50V
C188	1-163-031-11	CERAMIC CHIP	0.01uF		50V	C355	1-126-964-11	ELECT	10uF	20%	50V
C189	1-126-963-11	ELECT	4.7uF	20%	50V	C356	1-126-960-11	ELECT	1uF	20%	50V
C199	1-163-038-00	CERAMIC CHIP	0.1uF		25V	C357	1-126-959-11	ELECT	0.47uF	20%	50V
C201	1-104-665-11	ELECT	100uF	20%	10V	C358	1-126-964-11	ELECT	10uF	20%	50V
C202	1-126-925-11	ELECT	470uF	20%	10V	C359	1-137-194-81	MYLAR	0.47uF	5%	50V
C203	1-163-033-00	CERAMIC CHIP	0.022uF		50V	C360	1-163-005-11	CERAMIC CHIP	470PF	10%	50V
C204	1-126-961-11	ELECT	2.2uF	20%	50V	C362	1-163-017-00	CERAMIC CHIP	0.0047uF	5%	50V
C205	1-163-033-00	CERAMIC CHIP	0.022uF		50V	C363	1-163-017-00	CERAMIC CHIP	0.0047uF	5%	50V
C206	1-126-961-11	ELECT	2.2uF	20%	50V	C368	1-126-964-11	ELECT	10uF	20%	50V
C207	1-126-916-11	ELECT	1000uF	20%	6.3V	C369	1-126-961-11	ELECT	2.2uF	20%	50V
C209	1-126-925-11	ELECT	470uF	20%	10V	C370	1-126-961-11	ELECT	2.2uF	20%	50V
C212	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V	C371	1-163-131-00	CERAMIC CHIP	390PF	5%	50V
C301	1-126-960-11	ELECT	1uF	20%	50V	C372	1-163-117-00	CERAMIC CHIP	100PF	5%	50V
C302	1-130-479-00	MYLAR	0.0047uF	5%	50V	C373	1-136-157-00	MYLAR	0.022uF	5%	50V
C303	1-136-165-00	MYLAR	0.1uF	5%	50V	C374	1-126-964-11	ELECT	10uF	20%	50V
C304	1-136-165-00	MYLAR	0.1uF	5%	50V	C375	1-126-965-11	ELECT	22uF	20%	50V
C305	1-126-964-11	ELECT	10uF	20%	50V	C376	1-163-131-00	CERAMIC CHIP	390PF	5%	50V
C306	1-126-960-11	ELECT	1uF	20%	50V	C377	1-104-665-11	ELECT	100uF	20%	10V
C307	1-126-959-11	ELECT	0.47uF	20%	50V	C378	1-163-117-00	CERAMIC CHIP	100PF	5%	50V
C308	1-126-964-11	ELECT	10uF	20%	50V	C379	1-130-483-00	MYLAR	0.01uF	5%	50V
C309	1-137-194-81	MYLAR	0.47uF	5%	50V	C380	1-126-964-11	ELECT	10uF	20%	50V
C310	1-163-005-11	CERAMIC CHIP	470PF	10%	50V	C381	1-126-965-11	ELECT	22uF	20%	50V
C311	1-126-964-11	ELECT	10uF	20%	50V	C382	1-137-427-11	MYLAR	120PF	5%	50V
C312	1-126-959-11	ELECT	0.47uF	20%	50V	C383	1-163-003-11	CERAMIC CHIP	330PF	10%	50V
C313	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V	C384	1-163-103-00	CERAMIC CHIP	27PF	5%	50V
C314	1-126-964-11	ELECT	10uF	20%	50V	C385	1-126-964-11	ELECT	10uF	20%	50V
C315	1-126-963-11	ELECT	4.7uF	20%	50V	C395	1-163-038-00	CERAMIC CHIP	0.1uF		25V
C316	1-126-933-11	ELECT	100uF	20%	16V	C410	1-163-233-11	CERAMIC CHIP	18PF	5%	50V
C317	1-104-665-11	ELECT	100uF	20%	10V	C411	1-163-231-11	CERAMIC CHIP	15PF	5%	50V
C318	1-126-964-11	ELECT	10uF	20%	50V	C414	1-163-038-00	CERAMIC CHIP	0.1uF		25V
C319	1-126-961-11	ELECT	2.2uF	20%	50V	C416	1-126-916-11	ELECT	1000uF	20%	6.3V
C320	1-126-961-11	ELECT	2.2uF	20%	50V	C462	1-104-665-11	ELECT	100uF	20%	10V
C321	1-163-131-00	CERAMIC CHIP	390PF	5%	50V	C497	1-126-964-11	ELECT	10uF	20%	50V
C322	1-163-117-00	CERAMIC CHIP	100PF	5%	50V	C498	1-163-038-00	CERAMIC CHIP	0.1uF		25V
C323	1-136-157-00	MYLAR	0.022uF	5%	50V	C501	1-136-165-00	MYLAR	0.1uF	5%	50V
C324	1-126-964-11	ELECT	10uF	20%	50V	C502	1-136-165-00	MYLAR	0.1uF	5%	50V
C325	1-126-965-11	ELECT	22uF	20%	50V	C503	1-126-964-11	ELECT	10uF	20%	50V
C326	1-163-131-00	CERAMIC CHIP	390PF	5%	50V	C504	1-109-953-11	ELECT	2.2uF	20%	50V
C327	1-104-665-11	ELECT	100uF	20%	10V	C505	1-163-038-00	CERAMIC CHIP	0.1uF		25V
C328	1-163-117-00	CERAMIC CHIP	100PF	5%	50V	C601	1-163-031-11	CERAMIC CHIP	0.01uF		50V
C329	1-130-483-00	MYLAR	0.01uF	5%	50V	C603	1-104-664-11	ELECT	47uF	20%	16V
C330	1-126-964-11	ELECT	10uF	20%	50V	C604	1-163-031-11	CERAMIC CHIP	0.01uF		50V
C331	1-126-965-11	ELECT	22uF	20%	50V	C605	1-163-031-11	CERAMIC CHIP	0.01uF		50V
C332	1-137-427-11	MYLAR	120PF	5%	50V	C607	1-163-031-11	CERAMIC CHIP	0.01uF		50V
C333	1-163-003-11	CERAMIC CHIP	330PF	10%	50V	C611	1-104-664-11	ELECT	47uF	20%	16V
C334	1-163-103-00	CERAMIC CHIP	27PF	5%	50V	C612	1-163-031-11	CERAMIC CHIP	0.01uF		50V
C335	1-137-150-11	MYLAR	0.01uF	5%	100V	C613	1-126-960-11	ELECT	1uF	20%	50V
C336	1-126-961-11	ELECT	2.2uF	20%	50V	C614	1-163-031-11	CERAMIC CHIP	0.01uF		50V
C337	1-136-155-00	FILM	0.015uF	5%	50V	C615	1-163-031-11	CERAMIC CHIP	0.01uF		50V
C338	1-130-481-00	MYLAR	0.0068uF	5%	50V	C616	1-163-021-11	CERAMIC CHIP	0.01uF	10%	50V
C339	1-130-481-00	MYLAR	0.0068uF	5%	50V	C617	1-163-021-11	CERAMIC CHIP	0.01uF	10%	50V
C340	1-136-156-00	MYLAR	0.018uF	5%	50V	C618	1-126-957-11	ELECT	0.22uF	20%	50V
C341	1-126-960-11	ELECT	1uF	20%	50V	C619	1-163-075-00	CERAMIC CHIP	0.047uF		50V
C342	1-104-664-11	ELECT	47uF	20%	16V	C620	1-126-962-11	ELECT	3.3uF	20%	50V
C351	1-126-960-11	ELECT	1uF	20%	50V						
C352	1-130-479-00	MYLAR	0.0047uF	5%	50V						

MAIN

Ref. No.	Part No.	Description		Remark	Ref. No.	Part No.	Description		Remark		
C621	1-126-962-11	ELECT	3.3uF	20%	50V	C951	1-126-960-11	ELECT	1uF	20%	50V
C622	1-104-664-11	ELECT	47uF	20%	16V	C961	1-126-960-11	ELECT	1uF	20%	50V
C623	1-126-964-11	ELECT	10uF	20%	50V	C962	1-126-926-11	ELECT	1000uF	20%	10V
C624	1-126-960-11	ELECT	1uF	20%	50V						
C625	1-163-125-00	CERAMIC CHIP	220PF	5%	50V					< CERAMIC FILTER >	
C626	1-104-760-11	CERAMIC CHIP	0.047uF	10%	50V	CF601	1-760-023-11	FILTER, CERAMIC			
C628	1-163-117-00	CERAMIC CHIP	100PF	5%	50V	CF602	1-760-023-11	FILTER, CERAMIC			
C629	1-126-965-11	ELECT	22uF	20%	50V						
C630	1-126-964-11	ELECT	10uF	20%	50V					< CONNECTOR >	
C631	1-163-031-11	CERAMIC CHIP	0.01uF		50V	* CN101	1-565-291-11	SOCKET, CONNECTOR 13P			(SYSTEM CONTROL)
C632	1-126-933-11	ELECT	100uF	20%	16V	CN201	1-565-937-11	SOCKET, CONNECTOR 13P			
C633	1-163-031-11	CERAMIC CHIP	0.01uF		50V	CN202	1-785-336-11	PIN, CONNECTOR (LIGHT ANGLE) 10P			
C634	1-163-016-00	CERAMIC CHIP	0.0039uF	10%	50V	* CN301	1-568-449-11	HOUSING, CONNECTOR (PC BOARD) 3P			
C635	1-163-016-00	CERAMIC CHIP	0.0039uF	10%	50V	* CN304	1-569-934-11	SOCKET, CONNECTOR 17P			
C636	1-163-021-11	CERAMIC CHIP	0.01uF	10%	50V	CN401	1-793-766-11	CONNECTOR, BOARD TO BOARD 30P			
C637	1-163-021-11	CERAMIC CHIP	0.01uF	10%	50V	* CN891	1-564-506-11	PLUG, CONNECTOR 3P			
C641	1-163-031-11	CERAMIC CHIP	0.01uF		50V	CN901	1-778-982-21	CONNECTOR, BOARD TO BOARD 13P			
C644	1-163-087-00	CERAMIC CHIP	4PF		50V	CN902	1-778-982-21	CONNECTOR, BOARD TO BOARD 13P			
C645	1-163-031-11	CERAMIC CHIP	0.01uF		50V						
C651	1-163-239-11	CERAMIC CHIP	33PF	5%	50V					< DIODE >	
C652	1-163-235-11	CERAMIC CHIP	22PF	5%	50V	D501	8-719-988-61	DIODE 1SS355TE-17			
C653	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V	D502	8-719-988-61	DIODE 1SS355TE-17			
C655	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V	D503	8-719-988-61	DIODE 1SS355TE-17			
C656	1-163-031-11	CERAMIC CHIP	0.01uF		50V	D504	8-719-988-61	DIODE 1SS355TE-17			
C657	1-104-664-11	ELECT	47uF	20%	16V	D505	8-719-988-61	DIODE 1SS355TE-17			
C658	1-126-961-11	ELECT	2.2uF	20%	50V	D506	8-719-988-61	DIODE 1SS355TE-17			
C659	1-163-031-11	CERAMIC CHIP	0.01uF		50V	D507	8-719-988-61	DIODE 1SS355TE-17			
C660	1-104-664-11	ELECT	47uF	20%	16V	D508	8-719-988-61	DIODE 1SS355TE-17			
C661	1-163-031-11	CERAMIC CHIP	0.01uF		50V						
C662	1-126-959-11	ELECT	0.47uF	20%	50V	D511	8-719-988-61	DIODE 1SS355TE-17			
C663	1-163-031-11	CERAMIC CHIP	0.01uF		50V	D601	8-719-056-83	DIODE UDZ-TE-17-6.8B			
C669	1-163-031-11	CERAMIC CHIP	0.01uF		50V	D641	8-719-914-42	DIODE DA204K-T-146			
C803	1-163-031-11	CERAMIC CHIP	0.01uF		50V	D651	8-719-988-61	DIODE 1SS355TE-17			
C821	1-104-665-11	ELECT	100uF	20%	10V	D801	8-719-988-61	DIODE 1SS355TE-17			
C822	1-126-961-11	ELECT	2.2uF	20%	50V	D822	8-719-988-61	DIODE 1SS355TE-17			
C824	1-126-960-11	ELECT	1uF	20%	50V	D824	8-719-988-61	DIODE 1SS355TE-17			
C841	1-126-959-11	ELECT	0.47uF	20%	50V	D841	8-719-988-61	DIODE 1SS355TE-17			
C853	1-163-031-11	CERAMIC CHIP	0.01uF		50V	D861	8-719-988-61	DIODE 1SS355TE-17			
C861	1-107-717-11	ELECT	47uF	20%	50V	D891	8-719-988-61	DIODE 1SS355TE-17			
C862	1-107-721-11	ELECT	4.7uF	20%	100V	D892	8-719-988-61	DIODE 1SS355TE-17			
C863	1-107-721-11	ELECT	4.7uF	20%	100V	D901	8-719-210-21	DIODE 11EQS04-TA1B			
C891	1-126-964-11	ELECT	10uF	20%	50V	D902	8-719-210-21	DIODE 11EQS04-TA1B			
C892	1-163-038-00	CERAMIC CHIP	0.1uF		25V	D903	8-719-210-21	DIODE 11EQS04-TA1B			
C901	1-111-235-61	ELECT	10000uF	20%	25V	D904	8-719-210-21	DIODE 11EQS04-TA1B			
C902	1-136-165-00	MYLAR	0.1uF	5%	50V	D906	8-719-200-82	DIODE 11ES2-TB5			
C903	1-136-165-00	MYLAR	0.1uF	5%	50V	D907	8-719-200-82	DIODE 11ES2-TB5			
C905	1-136-165-00	MYLAR	0.1uF	5%	50V	D908	8-719-200-82	DIODE 11ES2-TB5			
C906	1-136-165-00	MYLAR	0.1uF	5%	50V	D909	8-719-200-82	DIODE 11ES2-TB5			
C907	1-128-548-11	ELECT	4700uF	20%	25V	D910	8-719-200-82	DIODE 11ES2-TB5			
C908	1-126-942-61	ELECT	1000uF	20%	25V	D911	8-719-200-82	DIODE 11ES2-TB5			
C909	1-126-952-11	ELECT	1000uF	20%	35V	D952	8-719-988-61	DIODE 1SS355TE-17			
C911	1-126-960-11	ELECT	1uF	20%	50V	D953	8-719-988-61	DIODE 1SS355TE-17			
C912	1-126-917-11	ELECT	3300uF	20%	6.3V						
C921	1-126-960-11	ELECT	1uF	20%	50V						
										< SHORT >	
C922	1-126-933-11	ELECT	100uF	20%	16V	FB201	1-216-295-00	SHORT	0		
C925	1-104-665-11	ELECT	100uF	20%	10V	FB202	1-216-295-00	SHORT	0		
C931	1-126-964-11	ELECT	10uF	20%	50V	FB203	1-216-295-00	SHORT	0		
C932	1-126-925-11	ELECT	470uF	20%	10V						

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
FB204	1-216-295-00	SHORT	0	JR34	1-216-295-00	SHORT	0
FB416	1-216-295-00	SHORT	0	JR35	1-216-296-00	SHORT	0 (IA)
FB462	1-216-295-00	SHORT	0	JR36	1-216-295-00	SHORT	0
FB499	1-216-295-00	SHORT	0	JR37	1-216-296-00	SHORT	0
	< FRONT END >			JR38	1-216-296-00	SHORT	0
FE602	1-693-478-11	FRONT END (FM3 GANGS)		JR39	1-216-296-00	SHORT	0 (IA)
	< IC >			JR40	1-216-295-00	SHORT	0 (IA)
IC101	8-759-652-04	IC M61504FP-TP		JR42	1-216-295-00	SHORT	0
IC102	8-759-099-06	IC M5218Afp-TE1		JR44	1-216-296-00	SHORT	0
IC103	8-759-652-01	IC LA2615		JR45	1-216-296-00	SHORT	0 (IA)
IC104	8-759-099-06	IC M5218Afp-TE1		JR51	1-216-296-00	SHORT	0
IC201	8-749-923-04	IC TOTX178A (OPTICAL)		JR52	1-216-296-00	SHORT	0
IC301	8-759-652-02	IC HA12226F		JR53	1-216-296-00	SHORT	0 (IA)
IC302	8-759-143-54	IC uPC1330HA		JR54	1-216-295-00	SHORT	0
IC303	8-759-656-83	IC NJM4580MD-TE		JR140	1-216-296-00	SHORT	0
IC304	8-759-656-83	IC NJM4580MD-TE		JR205	1-216-295-00	SHORT	0 (E, MY, SP, IA)
IC401	8-759-677-43	IC M30622MAA-A60		JR431	1-216-295-00	SHORT	0
IC501	8-759-635-63	IC M51943BSL-TP		JR433	1-216-295-00	SHORT	0 (E, EA, MY, SP)
IC601	8-759-652-00	IC BA1450		JR434	1-216-295-00	SHORT	0 (IA)
IC651	8-759-288-54	IC LC72130		JR602	1-216-295-00	SHORT	0
IC911	8-759-039-69	IC uPC7805AHF		JR603	1-216-296-00	SHORT	0
IC921	8-759-088-08	IC uPC7812AHF		JR604	1-216-296-00	SHORT	0
IC931	8-759-071-48	IC TA7807S		JR605	1-216-296-00	SHORT	0
IC951	8-759-158-62	IC TA78057S		JR606	1-216-296-00	SHORT	0
IC961	8-759-701-59	IC M5F7809L		JR607	1-216-295-00	SHORT	0
	< IF TRANSFORMER >			JR608	1-216-296-00	SHORT	0
IFT601	1-435-295-11	TRANSFORMER, IF		JR611	1-216-296-00	SHORT	0
	< JACK >			JR612	1-216-295-00	SHORT	0
J101	1-793-987-11	JACK, PIN 2P (MD/VIDEO (AUDIO))		JR615	1-216-295-00	SHORT	0
	< SHORT >			JR616	1-216-295-00	SHORT	0
JR1	1-216-296-00	SHORT	0	JR619	1-216-295-00	SHORT	0
JR2	1-216-296-00	SHORT	0	JR632	1-216-295-00	SHORT	0
JR3	1-216-296-00	SHORT	0	JR634	1-216-295-00	SHORT	0
JR4	1-216-296-00	SHORT	0	JR640	1-216-295-00	SHORT	0
JR6	1-216-296-00	SHORT	0	JR920	1-216-295-00	SHORT	0 (EA)
JR7	1-216-296-00	SHORT	0	JR922	1-216-295-00	SHORT	0
JR8	1-216-295-00	SHORT	0	JR923	1-216-295-00	SHORT	0
JR13	1-216-296-00	SHORT	0	JR924	1-216-295-00	SHORT	0
JR14	1-216-296-00	SHORT	0	JR926	1-216-295-00	SHORT	0 (EA)
JR15	1-216-296-00	SHORT	0	JR927	1-216-295-00	SHORT	0
JR17	1-216-296-00	SHORT	0	JR928	1-216-295-00	SHORT	0 (E, MY, SP, IA)
JR18	1-216-295-00	SHORT	0		< COIL/SHORT >		
JR19	1-216-296-00	SHORT	0	L201	1-414-189-31	INDUCTOR	100uH
JR23	1-216-296-00	SHORT	0	L301	1-410-780-11	INDUCTOR	27mH
JR25	1-216-296-00	SHORT	0	L302	1-414-193-41	INDUCTOR	220uH
JR26	1-216-296-00	SHORT	0	L303	1-414-193-41	INDUCTOR	220uH
JR27	1-216-296-00	SHORT	0	L351	1-410-780-11	INDUCTOR	27mH
JR29	1-216-296-00	SHORT	0	L642	1-216-296-00	SHORT	0
JR31	1-216-295-00	SHORT	0		< LOW-PASS FILTER >		
JR32	1-216-296-00	SHORT	0	LPF601	1-234-458-11	FILTER, LOW PASS	
JR33	1-216-296-00	SHORT	0	LPF602	1-234-458-11	FILTER, LOW PASS	
	< TRANSISTOR >				< TRANSISTOR >		
				Q101	8-729-120-28	TRANSISTOR	2SC1623-T1-L5L6
				Q102	8-729-144-85	FET	2SK1133-T1B

MAIN

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
Q103	8-729-107-45	TRANSISTOR	2SC3624A-T1L15L16	R121	1-216-224-91	RES-CHIP	12K 5% 1/8W
Q141	8-729-120-28	TRANSISTOR	2SC1623-T1-L5L6	R122	1-216-073-00	METAL CHIP	10K 5% 1/10W
Q151	8-729-120-28	TRANSISTOR	2SC1623-T1-L5L6	R123	1-216-073-00	METAL CHIP	10K 5% 1/10W
Q152	8-729-144-85	FET	2SK1133-T1B	R124	1-216-065-00	RES-CHIP	4.7K 5% 1/10W
Q153	8-729-107-45	TRANSISTOR	2SC3624A-T1L15L16	R125	1-216-073-00	METAL CHIP	10K 5% 1/10W
Q301	8-729-801-93	TRANSISTOR	2SD1387-34-TP	R132	1-216-049-11	RES-CHIP	1K 5% 1/10W
Q302	8-729-142-46	TRANSISTOR	2SC2001TP-LK	R133	1-216-049-11	RES-CHIP	1K 5% 1/10W
Q303	8-729-142-46	TRANSISTOR	2SC2001TP-LK	R134	1-216-049-11	RES-CHIP	1K 5% 1/10W
Q304	8-729-113-69	TRANSISTOR	FN1F4M-T1M32	R141	1-216-049-11	RES-CHIP	1K 5% 1/10W
Q305	8-729-113-13	TRANSISTOR	FA1A4M-T1L33	R142	1-216-051-00	METAL CHIP	1.2K 5% 1/10W
Q391	8-729-140-04	TRANSISTOR	2SB1116-TP-LK	R143	1-216-089-00	RES-CHIP	47K 5% 1/10W
Q392	8-729-113-13	TRANSISTOR	FA1A4M-T1L33	R144	1-216-295-00	SHORT 0	
Q393	8-729-140-04	TRANSISTOR	2SB1116-TP-LK	R145	1-216-041-00	METAL CHIP	470 5% 1/10W
Q394	8-729-113-13	TRANSISTOR	FA1A4M-T1L33	R146	1-216-041-00	METAL CHIP	470 5% 1/10W
Q395	8-729-113-13	TRANSISTOR	FA1A4M-T1L33	R147	1-216-041-00	METAL CHIP	470 5% 1/10W
Q396	8-729-116-57	TRANSISTOR	2SB1068TP-K	R151	1-216-049-11	RES-CHIP	1K 5% 1/10W
Q397	8-729-113-13	TRANSISTOR	FA1A4M-T1L33	R153	1-216-073-00	METAL CHIP	10K 5% 1/10W
Q501	8-729-120-28	TRANSISTOR	2SC1623-T1-L5L6	R154	1-216-073-00	METAL CHIP	10K 5% 1/10W
Q503	8-729-113-13	TRANSISTOR	FA1A4M-T1L33	R155	1-216-097-00	RES-CHIP	100K 5% 1/10W
Q504	8-729-113-69	TRANSISTOR	FN1F4M-T1M32	R157	1-216-105-00	RES-CHIP	220K 5% 1/10W
Q505	8-729-113-13	TRANSISTOR	FA1A4M-T1L33	R158	1-216-097-00	RES-CHIP	100K 5% 1/10W
Q601	8-729-201-27	TRANSISTOR	2SC2715Y-TE85L	R159	1-216-073-00	METAL CHIP	10K 5% 1/10W
Q602	8-729-422-57	TRANSISTOR	BN1A4M-TP	R160	1-216-045-00	METAL CHIP	680 5% 1/10W
Q611	8-729-120-28	TRANSISTOR	2SC2412K-T-146-QR	R161	1-216-222-00	RES-CHIP	10K 5% 1/8W
Q612	8-729-120-28	TRANSISTOR	2SC2412K-T-146-QR	R162	1-216-089-00	RES-CHIP	47K 5% 1/10W
Q821	8-729-120-28	TRANSISTOR	2SC1623-T1-L5L6	R163	1-216-057-00	METAL CHIP	2.2K 5% 1/10W
Q822	8-729-120-28	TRANSISTOR	2SC1623-T1-L5L6	R164	1-216-097-00	RES-CHIP	100K 5% 1/10W
Q823	8-729-216-22	TRANSISTOR	2SA812-T1-M5M6	R165	1-216-073-00	METAL CHIP	10K 5% 1/10W
Q824	8-729-113-13	TRANSISTOR	FA1A4M-T1L33	R166	1-216-065-00	RES-CHIP	4.7K 5% 1/10W
Q825	8-729-120-28	TRANSISTOR	2SC1623-T1-L5L6	R171	1-216-075-00	METAL CHIP	12K 5% 1/10W
Q828	8-729-120-28	TRANSISTOR	2SC1623-T1-L5L6	R172	1-216-073-00	METAL CHIP	10K 5% 1/10W
Q829	8-729-120-28	TRANSISTOR	2SC1623-T1-L5L6	R173	1-216-073-00	METAL CHIP	10K 5% 1/10W
Q831	8-729-113-69	TRANSISTOR	FN1F4M-T1M32	R175	1-216-073-00	METAL CHIP	10K 5% 1/10W
Q832	8-729-120-28	TRANSISTOR	2SC1623-T1-L5L6	R181	1-216-085-11	RES-CHIP	33K 5% 1/10W
Q861	8-729-113-69	TRANSISTOR	FN1F4M-T1M32	R182	1-216-049-11	RES-CHIP	1K 5% 1/10W
Q862	8-729-107-45	TRANSISTOR	2SC3624A-T1L15L16	R201	1-216-025-00	RES-CHIP	100 5% 1/10W
Q863	8-729-107-45	TRANSISTOR	2SC3624A-T1L15L16	R202	1-216-085-00	METAL CHIP	33K 5% 1/10W
Q891	8-729-140-04	TRANSISTOR	2SB1116-TP-LK	R203	1-216-025-00	RES-CHIP	100 5% 1/10W
Q892	8-729-620-05	TRANSISTOR	2SC2603TP-EF	R204	1-216-085-00	METAL CHIP	33K 5% 1/10W
Q911	8-729-141-83	TRANSISTOR	2SB1375	R205	1-216-073-00	METAL CHIP	10K 5% 1/10W
Q912	8-729-113-13	TRANSISTOR	FA1A4M-T1L33	R301	1-216-085-00	METAL CHIP	33K 5% 1/10W
< RESISTOR >				R302	1-216-057-00	METAL CHIP	2.2K 5% 1/10W
R101	1-216-049-11	RES-CHIP	1K 5% 1/10W	R303	1-216-025-00	RES-CHIP	100 5% 1/10W
R103	1-216-073-00	METAL CHIP	10K 5% 1/10W	R304	1-216-025-00	RES-CHIP	100 5% 1/10W
R104	1-216-073-00	METAL CHIP	10K 5% 1/10W	R305	1-216-057-00	METAL CHIP	2.2K 5% 1/10W
R105	1-216-097-00	RES-CHIP	100K 5% 1/10W	R306	1-216-071-00	METAL CHIP	8.2K 5% 1/10W
R107	1-216-105-00	RES-CHIP	220K 5% 1/10W	R307	1-216-065-00	RES-CHIP	4.7K 5% 1/10W
R108	1-216-097-00	RES-CHIP	100K 5% 1/10W	R308	1-216-071-00	METAL CHIP	8.2K 5% 1/10W
R109	1-216-073-00	METAL CHIP	10K 5% 1/10W	R309	1-216-081-00	METAL CHIP	22K 5% 1/10W
R110	1-216-045-00	METAL CHIP	680 5% 1/10W	R311	1-216-121-00	RES-CHIP	1M 5% 1/10W
R111	1-216-073-00	METAL CHIP	10K 5% 1/10W	R312	1-216-102-00	RES-CHIP	160K 5% 1/10W
R112	1-216-089-00	RES-CHIP	47K 5% 1/10W	R313	1-216-097-00	RES-CHIP	100K 5% 1/10W
R113	1-216-057-00	METAL CHIP	2.2K 5% 1/10W	R315	1-216-073-00	METAL CHIP	10K 5% 1/10W
R114	1-216-097-00	RES-CHIP	100K 5% 1/10W	R316	1-216-234-00	RES-CHIP	33K 5% 1/8W
R115	1-216-073-00	METAL CHIP	10K 5% 1/10W	R317	1-216-222-00	RES-CHIP	10K 5% 1/8W
R116	1-216-065-00	RES-CHIP	4.7K 5% 1/10W	R318	1-216-073-00	METAL CHIP	10K 5% 1/10W
				R319	1-216-111-00	METAL CHIP	390K 5% 1/10W
				R320	1-216-057-00	METAL CHIP	2.2K 5% 1/10W

Ref. No.	Part No.	Description			Remark	Ref. No.	Part No.	Description			Remark
R321	1-216-071-00	METAL CHIP	8.2K	5%	1/10W	R396	1-216-065-00	RES-CHIP	4.7K	5%	1/10W
R331	1-216-099-00	METAL CHIP	120K	5%	1/10W	R407	1-216-065-00	RES-CHIP	4.7K	5%	1/10W
R332	1-216-025-00	RES-CHIP	100	5%	1/10W	R409	1-216-295-00	SHORT	0		
R333	1-216-067-00	METAL CHIP	5.6K	5%	1/10W	R411	1-216-109-00	METAL CHIP	330K	5%	1/10W
R334	1-216-100-00	RES-CHIP	130K	5%	1/10W	R413	1-216-295-00	SHORT	0		
R335	1-216-033-00	METAL CHIP	220	5%	1/10W	R417	1-216-073-00	METAL CHIP	10K	5%	1/10W
R336	1-216-099-00	METAL CHIP	120K	5%	1/10W	R418	1-216-025-00	RES-CHIP	100	5%	1/10W
R337	1-216-033-00	METAL CHIP	220	5%	1/10W	R420	1-216-073-00	METAL CHIP	10K	5%	1/10W
R338	1-216-081-00	METAL CHIP	22K	5%	1/10W	R421	1-216-025-00	RES-CHIP	100	5%	1/10W
R339	1-216-075-00	METAL CHIP	12K	5%	1/10W	R422	1-216-025-00	RES-CHIP	100	5%	1/10W
R340	1-216-107-00	METAL CHIP	270K	5%	1/10W	R429	1-216-025-00	RES-CHIP	100	5%	1/10W
R341	1-216-033-00	METAL CHIP	220	5%	1/10W	R430	1-216-025-00	RES-CHIP	100	5%	1/10W
R342	1-216-075-00	METAL CHIP	12K	5%	1/10W	R431	1-216-089-00	RES-CHIP	47K	5%	1/10W
▲ R343	1-219-787-17	FUSIBLE	5.6	5%	1/4W F	R434	1-216-089-00	RES-CHIP	47K	5%	1/10W
▲ R344	1-219-787-17	FUSIBLE	5.6	5%	1/4W F	R443	1-216-025-00	RES-CHIP	100	5%	1/10W
R345	1-216-079-00	METAL CHIP	18K	5%	1/10W	R444	1-216-025-00	RES-CHIP	100	5%	1/10W
R346	1-216-079-00	METAL CHIP	18K	5%	1/10W	R445	1-216-025-00	RES-CHIP	100	5%	1/10W
R347	1-216-073-00	METAL CHIP	10K	5%	1/10W	R446	1-216-025-00	RES-CHIP	100	5%	1/10W
R351	1-216-085-00	METAL CHIP	33K	5%	1/10W	R447	1-216-025-00	RES-CHIP	100	5%	1/10W
R352	1-216-057-00	METAL CHIP	2.2K	5%	1/10W	R448	1-216-025-00	RES-CHIP	100	5%	1/10W
R353	1-216-025-00	RES-CHIP	100	5%	1/10W	R449	1-216-025-00	RES-CHIP	100	5%	1/10W
R354	1-216-025-00	RES-CHIP	100	5%	1/10W	R467	1-216-025-00	RES-CHIP	100	5%	1/10W
R355	1-216-057-00	METAL CHIP	2.2K	5%	1/10W	R468	1-216-025-00	RES-CHIP	100	5%	1/10W
R356	1-216-071-00	METAL CHIP	8.2K	5%	1/10W	R469	1-216-025-00	RES-CHIP	100	5%	1/10W
R357	1-216-065-00	RES-CHIP	4.7K	5%	1/10W	R483	1-216-073-00	METAL CHIP	10K	5%	1/10W
R358	1-216-071-00	METAL CHIP	8.2K	5%	1/10W	R484	1-216-073-00	METAL CHIP	10K	5%	1/10W
R359	1-216-085-00	METAL CHIP	33K	5%	1/10W	R490	1-216-174-00	RES-CHIP	100	5%	1/8W
R360	1-216-045-00	METAL CHIP	680	5%	1/10W	R491	1-216-174-00	RES-CHIP	100	5%	1/8W
R361	1-216-049-11	RES-CHIP	1K	5%	1/10W	R493	1-216-174-00	RES-CHIP	100	5%	1/8W
R363	1-216-049-11	RES-CHIP	1K	5%	1/10W	R494	1-216-295-00	SHORT	0		
R364	1-216-045-00	METAL CHIP	680	5%	1/10W	R495	1-216-089-00	RES-CHIP	47K	5%	1/10W
R366	1-216-061-00	METAL CHIP	3.3K	5%	1/10W	R496	1-216-077-00	RES-CHIP	15K	5%	1/10W
R367	1-216-089-00	RES-CHIP	47K	5%	1/10W	R497	1-216-053-00	METAL CHIP	1.5K	5%	1/10W (E, MY, SP, IA)
R368	1-216-061-00	METAL CHIP	3.3K	5%	1/10W	R497	1-216-073-00	METAL CHIP	10K	5%	1/10W (EA)
R369	1-216-061-00	METAL CHIP	3.3K	5%	1/10W	R498	1-216-089-00	RES-CHIP	47K	5%	1/10W
R371	1-216-238-91	RES-CHIP	47K	5%	1/8W	R499	1-216-025-00	RES-CHIP	100	5%	1/10W
R372	1-216-065-00	RES-CHIP	4.7K	5%	1/10W	R501	1-216-073-00	METAL CHIP	10K	5%	1/10W
R373	1-216-049-11	RES-CHIP	1K	5%	1/10W	R502	1-216-089-00	RES-CHIP	47K	5%	1/10W
R374	1-216-089-00	RES-CHIP	47K	5%	1/10W	R503	1-216-089-00	RES-CHIP	47K	5%	1/10W
R375	1-216-094-00	RES-CHIP	75K	5%	1/10W	R504	1-216-025-00	RES-CHIP	100	5%	1/10W
R376	1-216-065-00	RES-CHIP	4.7K	5%	1/10W	R505	1-216-065-00	RES-CHIP	4.7K	5%	1/10W
R377	1-216-089-00	RES-CHIP	47K	5%	1/10W	R506	1-216-041-00	METAL CHIP	470	5%	1/10W
R378	1-216-094-00	RES-CHIP	75K	5%	1/10W	R508	1-216-065-00	RES-CHIP	4.7K	5%	1/10W
R381	1-216-099-00	METAL CHIP	120K	5%	1/10W	R509	1-216-081-00	METAL CHIP	22K	5%	1/10W
R382	1-216-025-00	RES-CHIP	100	5%	1/10W	R510	1-216-097-00	RES-CHIP	100K	5%	1/10W
R383	1-216-067-00	METAL CHIP	5.6K	5%	1/10W	R511	1-216-174-00	RES-CHIP	100	5%	1/8W
R384	1-216-100-00	RES-CHIP	130K	5%	1/10W	R523	1-216-073-00	METAL CHIP	10K	5%	1/10W
R385	1-216-296-00	SHORT	0			R524	1-216-073-00	METAL CHIP	10K	5%	1/10W
R386	1-216-099-00	METAL CHIP	120K	5%	1/10W	R546	1-216-073-00	METAL CHIP	10K	5%	1/10W
R387	1-216-033-00	METAL CHIP	220	5%	1/10W	R547	1-216-073-00	METAL CHIP	10K	5%	1/10W
R388	1-216-081-00	METAL CHIP	22K	5%	1/10W	R548	1-216-073-00	METAL CHIP	10K	5%	1/10W
R389	1-216-075-00	METAL CHIP	12K	5%	1/10W	R566	1-216-073-00	METAL CHIP	10K	5%	1/10W
R390	1-216-107-00	METAL CHIP	270K	5%	1/10W	R602	1-216-029-00	METAL CHIP	150	5%	1/10W
R391	1-216-296-00	SHORT	0			R603	1-216-045-00	METAL CHIP	680	5%	1/10W
R392	1-216-075-00	METAL CHIP	12K	5%	1/10W	R604	1-216-017-00	RES-CHIP	47	5%	1/10W
R393	1-216-081-00	METAL CHIP	22K	5%	1/10W	R605	1-216-045-00	METAL CHIP	680	5%	1/10W
R394	1-216-033-00	METAL CHIP	220	5%	1/10W	R606	1-216-037-00	METAL CHIP	330	5%	1/10W

The components identified by mark ▲ or dotted line with mark △ are critical for safety.
Replace only with part number specified.

MAIN

MOTOR

Ref. No.	Part No.	Description		Remark	Ref. No.	Part No.	Description		Remark			
R607	1-216-053-00	METAL CHIP	1.5K	5%	1/10W	R864	1-216-049-11	RES-CHIP	1K	5%	1/10W	
R608	1-216-017-00	RES-CHIP	47	5%	1/10W	R865	1-216-049-11	RES-CHIP	1K	5%	1/10W	
R609	1-216-295-00	SHORT	0			R866	1-216-019-00	METAL CHIP	56	5%	1/10W	
R610	1-216-045-00	METAL CHIP	680	5%	1/10W	△R868	1-215-891-11	METAL OXIDE	680	5%	2W F	
R611	1-216-182-00	RES-CHIP	220	5%	1/8W	△R869	1-215-891-11	METAL OXIDE	680	5%	2W F	
R612	1-216-214-00	RES-CHIP	4.7K	5%	1/8W	R891	1-216-222-00	RES-CHIP	10K	5%	1/8W	
R613	1-216-206-00	RES-CHIP	2.2K	5%	1/8W	R892	1-216-065-00	RES-CHIP	4.7K	5%	1/10W	
R614	1-216-041-00	METAL CHIP	470	5%	1/10W	R893	1-216-057-00	METAL CHIP	2.2K	5%	1/10W	
R615	1-216-049-11	RES-CHIP	1K	5%	1/10W	R901	1-249-405-11	CARBON	100	5%	1/4W	
R616	1-216-065-00	RES-CHIP	4.7K	5%	1/10W	R911	1-216-059-00	METAL CHIP	2.7K	5%	1/10W	
R617	1-216-041-00	METAL CHIP	470	5%	1/10W	R912	1-216-206-00	RES-CHIP	2.2K	5%	1/8W	
R618	1-216-049-11	RES-CHIP	1K	5%	1/10W	△R915	1-219-591-11	FUSIBLE	0.1	5%	1/2W F	
R619	1-216-025-00	RES-CHIP	100	5%	1/10W	△R916	1-219-119-11	FUSIBLE	0.1	5%	1/4W F	
R620	1-216-065-00	RES-CHIP	4.7K	5%	1/10W	R966	1-216-019-00	METAL CHIP	56	5%	1/10W	
R621	1-216-075-00	METAL CHIP	12K	5%	1/10W							
R622	1-216-057-00	METAL CHIP	2.2K	5%	1/10W						< ENCAPSULATED COMPONENT >	
R623	1-216-073-00	METAL CHIP	10K	5%	1/10W	RB641	1-234-457-11	ENCAPSULATED COMPONENT				(AM FRONT-END)
R624	1-216-073-00	METAL CHIP	10K	5%	1/10W							
R625	1-216-073-00	METAL CHIP	10K	5%	1/10W							
R641	1-216-097-00	RES-CHIP	100K	5%	1/10W							
											< VARIABLE RESISTOR >	
R642	1-216-073-00	METAL CHIP	10K	5%	1/10W	RV301	1-241-764-11	RES, ADJ, CARBON 10K				
R655	1-216-073-00	METAL CHIP	10K	5%	1/10W	RV302	1-241-762-11	RES, ADJ, CARBON 2.2K				
R656	1-216-222-00	RES-CHIP	10K	5%	1/8W	RV303	1-241-762-11	RES, ADJ, CARBON 2.2K				
R658	1-216-174-00	RES-CHIP	100	5%	1/8W	RV304	1-241-768-11	RES, ADJ, CARBON 220K				
R659	1-216-061-00	METAL CHIP	3.3K	5%	1/10W	RV351	1-241-764-11	RES, ADJ, CARBON 10K				
R660	1-216-065-00	RES-CHIP	4.7K	5%	1/10W	RV352	1-241-762-11	RES, ADJ, CARBON 2.2K				
R661	1-216-025-00	RES-CHIP	100	5%	1/10W	RV353	1-241-762-11	RES, ADJ, CARBON 2.2K				
R662	1-216-065-00	RES-CHIP	4.7K	5%	1/10W	RV354	1-241-768-11	RES, ADJ, CARBON 220K				
R663	1-216-065-00	RES-CHIP	4.7K	5%	1/10W	RV611	1-241-765-11	RES, ADJ, CARBON 22K				
R664	1-216-065-00	RES-CHIP	4.7K	5%	1/10W							
R665	1-216-025-00	RES-CHIP	100	5%	1/10W						< RELAY >	
R666	1-216-073-00	METAL CHIP	10K	5%	1/10W	RY801	1-755-372-11	RELAY				
R667	1-216-222-00	RES-CHIP	10K	5%	1/8W							
R668	1-216-049-11	RES-CHIP	1K	5%	1/10W							
R669	1-216-065-00	RES-CHIP	4.7K	5%	1/10W							
											< TRANSFORMER >	
R804	1-216-089-00	RES-CHIP	47K	5%	1/10W	T301	1-423-980-11	TRANSFORMER, BIAS OSCILLATION				
R820	1-216-049-11	RES-CHIP	1K	5%	1/10W	T601	1-435-195-11	TRANSFORMER, DISCRIMINATOR				
R821	1-216-238-91	RES-CHIP	47K	5%	1/8W							
R822	1-216-240-00	RES-CHIP	56K	5%	1/8W						< TERMINAL >	
R823	1-216-222-00	RES-CHIP	10K	5%	1/8W	TM601	1-694-555-11	TERMINAL BOARD (4P) (ANTENNA)				
						TM801	1-694-635-11	TERMINAL BOARD (4P) (SPEAKER, IMPEDANCE USE 6-16Ω)				
R824	1-216-089-00	METAL CHIP	47K	5%	1/10W						< VIBRATOR >	
R825	1-216-061-00	METAL CHIP	3.3K	5%	1/10W	X401	1-567-098-41	VIBRATOR, CRYSTAL (32.768kHz)				
R826	1-216-085-00	METAL CHIP	33K	5%	1/10W	X402	1-781-107-21	VIBRATOR, CERAMIC (16MHz)				
R827	1-216-081-00	METAL CHIP	22K	5%	1/10W	X651	1-760-549-31	VIBRATOR, CRYSTAL (4.5MHz)				
R829	1-216-230-00	RES-CHIP	22K	5%	1/8W							
R830	1-216-214-00	RES-CHIP	4.7K	5%	1/8W							
R831	1-216-214-00	RES-CHIP	4.7K	5%	1/8W							
R832	1-216-097-00	RES-CHIP	100K	5%	1/10W							
R841	1-216-081-00	METAL CHIP	22K	5%	1/10W							
R842	1-216-081-00	METAL CHIP	22K	5%	1/10W							
R843	1-216-214-00	RES-CHIP	4.7K	5%	1/8W							
R844	1-216-097-00	RES-CHIP	100K	5%	1/10W							
R845	1-216-121-00	RES-CHIP	1M	5%	1/10W							
R854	1-216-089-00	RES-CHIP	47K	5%	1/10W	C721	1-162-306-11	CERAMIC	0.01uF	30%	16V	
R861	1-216-049-11	RES-CHIP	1K	5%	1/10W							
											< CONNECTOR >	
R862	1-216-073-00	METAL CHIP	10K	5%	1/10W	CN721	1-770-516-31	CONNECTOR, FFC 8P				
R863	1-216-089-00	RES-CHIP	47K	5%	1/10W							

The components identified by mark ▲ or dotted line with mark △ are critical for safety.
Replace only with part number specified.

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
CN722	1-785-330-11	PIN, CONNECTOR (LIGHT ANGLE) 4P < SWITCH >		C720	1-164-159-11	CERAMIC	0.1uF 50V
S701	1-771-822-11	SWITCH, LEVER (SLIDE) (OPEN/CLOSE)		C721	1-162-294-31	CERAMIC	0.001uF 10% 50V
		*****		C722	1-162-305-11	CERAMIC	0.0068uF 30% 16V
		A-4473-076-A PANEL BOARD, COMPLETE (E, EA, MY, SP) A-4473-525-A PANEL BOARD, COMPLETE (IA)		C723	1-126-960-11	ELECT	1uF 20% 50V
		*****		C724	1-136-495-11	MYLAR	0.068uF 5% 50V
		*****		C725	1-126-959-11	ELECT	0.47uF 20% 50V
		4-224-584-01 HOLDER (FL)		C726	1-124-465-00	ELECT	0.47uF 20% 50V
		< CAPACITOR >		C727	1-136-167-00	MYLAR	0.15uF 5% 50V
C601	1-124-589-11	ELECT	47uF 20% 16V	C728	1-162-294-31	CERAMIC	0.001uF 10% 50V
C602	1-126-163-11	ELECT	4.7uF 20% 50V	C729	1-126-960-11	ELECT	1uF 20% 50V
C603	1-162-306-11	CERAMIC	0.01uF 30% 16V	C730	1-161-494-00	CERAMIC	0.022uF 25V
C604	1-162-294-31	CERAMIC	0.001uF 10% 50V	C731	1-162-305-11	CERAMIC	0.0068uF 30% 16V
C605	1-162-306-11	CERAMIC	0.01uF 30% 16V	C732	1-136-495-11	MYLAR	0.068uF 5% 50V
C606	1-162-294-31	CERAMIC	0.001uF 10% 50V	C733	1-104-664-11	ELECT	47uF 20% 10V
C607	1-104-664-11	ELECT	47uF 20% 10V	C734	1-124-589-11	ELECT	47uF 20% 16V
C608	1-162-306-11	CERAMIC	0.01uF 30% 16V	C735	1-124-257-00	ELECT	2.2uF 20% 50V
C609	1-162-306-11	CERAMIC	0.01uF 30% 16V	C736	1-126-964-11	ELECT	10uF 20% 50V
C610	1-126-157-11	ELECT	10uF 20% 16V	C737	1-126-964-11	ELECT	10uF 20% 50V
C611	1-126-157-11	ELECT	10uF 20% 16V	C738	1-126-961-11	ELECT	2.2uF 20% 50V
C612	1-162-303-11	CERAMIC	0.0033uF 30% 16V	C739	1-162-215-31	CERAMIC	47PF 5% 50V
C613	1-126-157-11	ELECT	10uF 20% 16V	C740	1-162-282-31	CERAMIC	100PF 10% 50V
C614	1-126-157-11	ELECT	10uF 20% 16V	C741	1-124-463-00	ELECT	0.1uF 20% 50V
C615	1-126-963-11	ELECT	4.7uF 20% 50V	C742	1-162-215-31	CERAMIC	47PF 5% 50V
C616	1-162-306-11	CERAMIC	0.01uF 30% 16V	C743	1-162-290-31	CERAMIC	470PF 10% 50V
C617	1-162-294-31	CERAMIC	0.001uF 10% 50V	C744	1-162-294-31	CERAMIC	0.001uF 10% 50V
C620	1-126-933-11	ELECT	100uF 20% 16V	C745	1-126-961-11	ELECT	2.2uF 20% 50V
C621	1-104-664-11	ELECT	47uF 20% 16V	C746	1-162-306-11	CERAMIC	0.01uF 30% 16V
C631	1-162-294-31	CERAMIC	0.001uF 10% 50V	C747	1-126-961-11	ELECT	2.2uF 20% 50V
C632	1-162-294-31	CERAMIC	0.001uF 10% 50V	C748	1-162-306-11	CERAMIC	0.01uF 30% 16V
C651	1-164-159-11	CERAMIC	0.1uF 50V	C749	1-162-306-11	CERAMIC	0.01uF 30% 16V
C652	1-126-960-11	ELECT	1uF 20% 50V	C750	1-162-282-31	CERAMIC	100PF 10% 50V
C653	1-126-960-11	ELECT	1uF 20% 50V	C751	1-162-282-31	CERAMIC	100PF 10% 50V
C654	1-164-159-11	CERAMIC	0.1uF 50V	C752	1-162-282-31	CERAMIC	100PF 10% 50V
C655	1-162-282-31	CERAMIC	100PF 10% 50V	C753	1-162-282-31	CERAMIC	100PF 10% 50V
C656	1-162-282-31	CERAMIC	100PF 10% 50V	C754	1-162-282-31	CERAMIC	100PF 10% 50V
C657	1-162-282-31	CERAMIC	100PF 10% 50V	C755	1-162-282-31	CERAMIC	100PF 10% 50V
C658	1-162-282-31	CERAMIC	100PF 10% 50V	C756	1-162-282-31	CERAMIC	100PF 10% 50V
C659	1-162-282-31	CERAMIC	100PF 10% 50V	C757	1-162-282-31	CERAMIC	100PF 10% 50V
C660	1-162-282-31	CERAMIC	100PF 10% 50V	C758	1-162-282-31	CERAMIC	100PF 10% 50V
C661	1-162-282-31	CERAMIC	100PF 10% 50V	C759	1-162-282-31	CERAMIC	100PF 10% 50V
C662	1-162-282-31	CERAMIC	100PF 10% 50V	C760	1-162-282-31	CERAMIC	100PF 10% 50V
C663	1-162-282-31	CERAMIC	100PF 10% 50V	C761	1-162-282-31	CERAMIC	100PF 10% 50V
C664	1-162-282-31	CERAMIC	100PF 10% 50V	C762	1-162-282-31	CERAMIC	100PF 10% 50V
C665	1-162-282-31	CERAMIC	100PF 10% 50V	C763	1-162-282-31	CERAMIC	100PF 10% 50V
C666	1-162-282-31	CERAMIC	100PF 10% 50V	C764	1-162-282-31	CERAMIC	100PF 10% 50V
C667	1-162-282-31	CERAMIC	100PF 10% 50V	C765	1-162-282-31	CERAMIC	100PF 10% 50V
C668	1-162-282-31	CERAMIC	100PF 10% 50V	C766	1-162-282-31	CERAMIC	100PF 10% 50V
C669	1-162-282-31	CERAMIC	100PF 10% 50V	C767	1-162-282-31	CERAMIC	100PF 10% 50V
C670	1-162-282-31	CERAMIC	100PF 10% 50V	C768	1-162-282-31	CERAMIC	100PF 10% 50V
C671	1-162-282-31	CERAMIC	100PF 10% 50V	C769	1-162-282-31	CERAMIC	100PF 10% 50V
C717	1-126-157-11	ELECT	10uF 20% 16V	C770	1-162-282-31	CERAMIC	100PF 10% 50V
C718	1-126-157-11	ELECT	10uF 20% 16V	C771	1-162-282-31	CERAMIC	100PF 10% 50V
C719	1-126-961-11	ELECT	2.2uF 20% 50V	C772	1-162-282-31	CERAMIC	100PF 10% 50V
				C773	1-162-282-31	CERAMIC	100PF 10% 50V
				C774	1-162-282-31	CERAMIC	100PF 10% 50V
				C775	1-162-282-31	CERAMIC	100PF 10% 50V
				C776	1-162-282-31	CERAMIC	100PF 10% 50V
				C777	1-162-282-31	CERAMIC	100PF 10% 50V

PANEL

Ref. No.	Part No.	Description	Remark			Ref. No.	Part No.	Description	Remark		
C778	1-162-282-31	CERAMIC	100PF	10%	50V	Q613	8-729-900-74	TRANSISTOR	BA1L3Z-TP		
C779	1-162-282-31	CERAMIC	100PF	10%	50V	Q614	8-729-900-74	TRANSISTOR	BA1L3Z-TP		
C780	1-162-282-31	CERAMIC	100PF	10%	50V	Q615	8-729-111-29	TRANSISTOR	2SD1616A-TP-LK		
C781	1-162-282-31	CERAMIC	100PF	10%	50V	Q621	8-729-900-80	TRANSISTOR	BA1A4M-TP		
C782	1-162-282-31	CERAMIC	100PF	10%	50V	Q622	8-729-900-80	TRANSISTOR	BA1A4M-TP		
C783	1-162-282-31	CERAMIC	100PF	10%	50V	Q623	8-729-900-80	TRANSISTOR	BA1A4M-TP		
C784	1-162-282-31	CERAMIC	100PF	10%	50V	Q624	8-729-900-80	TRANSISTOR	BA1A4M-TP		
< CONNECTOR >						Q625	8-729-900-80	TRANSISTOR	BA1A4M-TP		
CN601	1-793-767-11	CONNECTOR, BOARD TO BOARD 30P				Q626	8-729-900-80	TRANSISTOR	BA1A4M-TP		
< DIODE >						Q721	8-729-119-79	TRANSISTOR	2SC2785TP-FEK		
< RESISTOR >											
D601	8-719-057-30	LED HLMF-K205-2UL (I/O)				R603	1-249-429-11	CARBON	10K	5%	1/4W
D602	8-719-063-93	LED SLR325VC-N-T32 (TIMER)				R604	1-247-807-31	CARBON	100	5%	1/4W
D603	8-719-921-48	DIODE MTZJ-T-72-5.6C				R605	1-247-903-00	CARBON	1M	5%	1/4W
D605	8-719-109-85	DIODE MTZJ-T-72-5.1B				R606	1-247-807-31	CARBON	100	5%	1/4W
D611	8-719-071-41	LED SELS5923C-TP15 (GROOVE)				R607	1-249-429-11	CARBON	10K	5%	1/4W
D612	8-719-071-41	LED SELS5923C-TP15 (CURSOL)				R608	1-247-807-31	CARBON	100	5%	1/4W
D613	8-719-071-41	LED SELS5923C-TP15 (CURSOL)				R609	1-249-429-11	CARBON	10K	5%	1/4W
D614	8-719-071-41	LED SELS5923C-TP15 (V-GROOVE)				R610	1-247-807-31	CARBON	100	5%	1/4W
D615	8-719-072-82	LED SELU5E20C-STP15 (FUNCTION)				R611	1-249-429-11	CARBON	10K	5%	1/4W
D617	8-719-063-93	LED SLR325VC-N-T32 (REC PAUSE/START)				R612	1-249-401-11	CARBON	47	5%	1/4W
D618	8-719-071-41	LED SELS5923C-TP15 (SURROUND)				R613	1-247-893-11	CARBON	390K	5%	1/4W
< INDUCTOR >						R614	1-247-893-11	CARBON	390K	5%	1/4W
FB601	1-412-473-21	INDUCTOR 0uH				R615	1-249-441-11	CARBON	100K	5%	1/4W
FB602	1-412-473-21	INDUCTOR 0uH				R616	1-249-440-11	CARBON	82K	5%	1/4W
FB603	1-412-473-21	INDUCTOR 0uH				R617	1-249-429-11	CARBON	10K	5%	1/4W
< FLUORESCENT INDICATOR TUBE >						R618	1-249-441-11	CARBON	100K	5%	1/4W
FL601	1-517-928-11	INDICATOR TUBE, FLUORESCENT				R619	1-249-441-11	CARBON	100K	5%	1/4W
< IC >						R620	1-249-437-11	CARBON	47K	5%	1/4W
IC601	8-759-652-49	IC TMP88CP77F-1A22				R621	1-249-440-11	CARBON	82K	5%	1/4W
IC602	8-759-570-21	IC BA3830F-E2				R622	1-249-429-11	CARBON	10K	5%	1/4W
IC603	8-759-648-23	IC RPM6940-H4				R623	1-249-431-11	CARBON	15K	5%	1/4W
IC721	8-759-496-40	IC M65850FP				R625	1-249-435-11	CARBON	33K	5%	1/4W
IC722	8-759-634-51	IC M5218AP				R626	1-247-895-00	CARBON	470K	5%	1/4W
< JACK >						R632	1-249-429-11	CARBON	10K	5%	1/4W
J631	1-785-569-11	JACK (SMALL TYPE) (PHONES)				R633	1-249-411-11	CARBON	330	5%	1/4W
J721	1-785-569-11	JACK (SMALL TYPE) (MIC1)				R634	1-249-407-11	CARBON	150	5%	1/4W
J722	1-785-569-11	JACK (SMALL TYPE) (MIC2)				R635	1-249-401-11	CARBON	47	5%	1/4W
< COIL >						R636	1-249-441-11	CARBON	100K	5%	1/4W
L601	1-410-509-11	INDUCTOR 10uH				R637	1-249-441-11	CARBON	100K	5%	1/4W
< TRANSISTOR >						R638	1-249-441-11	CARBON	100K	5%	1/4W
Q604	8-729-900-80	TRANSISTOR BA1A4M-TP				R639	1-249-441-11	CARBON	100K	5%	1/4W
Q605	8-729-900-80	TRANSISTOR BA1A4M-TP				R640	1-249-441-11	CARBON	100K	5%	1/4W
Q606	8-729-900-74	TRANSISTOR BA1L3Z-TP				R641	1-249-441-11	CARBON	100K	5%	1/4W
Q607	8-729-900-74	TRANSISTOR BA1L3Z-TP				R642	1-249-441-11	CARBON	100K	5%	1/4W
Q608	8-729-900-74	TRANSISTOR BA1L3Z-TP				R643	1-249-441-11	CARBON	100K	5%	1/4W
Q609	8-729-900-74	TRANSISTOR BA1L3Z-TP				R644	1-249-441-11	CARBON	100K	5%	1/4W
Q610	8-729-900-74	TRANSISTOR BA1L3Z-TP				R651	1-249-429-11	CARBON	10K	5%	1/4W
Q611	8-729-900-74	TRANSISTOR BA1L3Z-TP				R652	1-249-410-11	CARBON	270	5%	1/4W
Q612	8-729-900-74	TRANSISTOR BA1L3Z-TP				R653	1-249-411-11	CARBON	330	5%	1/4W
						R654	1-249-413-11	CARBON	470	5%	1/4W
						R655	1-249-415-11	CARBON	680	5%	1/4W
						R656	1-249-417-11	CARBON	1K	5%	1/4W
						R657	1-249-418-11	CARBON	1.2K	5%	1/4W
						R658	1-249-418-11	CARBON	1.2K	5%	1/4W
						R659	1-249-417-11	CARBON	1K	5%	1/4W

Ref. No.	Part No.	Description			Remark	Ref. No.	Part No.	Description			Remark
R660	1-249-420-11	CARBON	1.8K	5%	1/4W	R744	1-249-441-11	CARBON	100K	5%	1/4W
R661	1-247-843-11	CARBON	3.3K	5%	1/4W	R745	1-247-807-31	CARBON	100	5%	1/4W
R662	1-249-425-11	CARBON	4.7K	5%	1/4W	R746	1-249-417-11	CARBON	1K	5%	1/4W
R663	1-249-427-11	CARBON	6.8K	5%	1/4W	R747	1-260-093-11	CARBON	330	5%	1/2W
R664	1-249-429-11	CARBON	10K	5%	1/4W						< VARIABLE RESISTOR >
R665	1-249-410-11	CARBON	270	5%	1/4W	RV721	1-225-739-11	RES, VAR CARBON 50K (ECHO LEVEL)			
R666	1-249-411-11	CARBON	330	5%	1/4W	RV722	1-225-739-11	RES, VAR CARBON 50K (MIC LEVEL)			
R667	1-249-413-11	CARBON	470	5%	1/4W						< SWITCH >
R668	1-249-414-11	CARBON	560	5%	1/4W	S601	1-418-725-11	ENCODER, ROTARY (12 TYPE) (VOLUMUE)			
R669	1-249-414-11	CARBON	560	5%	1/4W	S611	1-771-410-21	SWITCH, TACTILE (Δ)			
R670	1-249-415-11	CARBON	680	5%	1/4W	S612	1-771-410-21	SWITCH, TACTILE (∇)			
R671	1-249-422-11	CARBON	2.7K	5%	1/4W	S613	1-771-410-21	SWITCH, TACTILE (V-GROOVE)			
R672	1-249-420-11	CARBON	1.8K	5%	1/4W	S614	1-771-410-21	SWITCH, TACTILE (KARAOKE PON)			
R673	1-249-422-11	CARBON	2.7K	5%	1/4W	S615	1-771-410-21	SWITCH, TACTILE (CD SYNC/HI-DUB)			
R674	1-247-843-11	CARBON	3.3K	5%	1/4W	S616	1-771-410-21	SWITCH, TACTILE (REC PAUSE/START)			
R675	1-249-425-11	CARBON	4.7K	5%	1/4W	S617	1-771-410-21	SWITCH, TACTILE (ENTER)			
R676	1-249-427-11	CARBON	6.8K	5%	1/4W	S618	1-771-410-21	SWITCH, TACTILE (▶▶)			
R677	1-249-429-11	CARBON	10K	5%	1/4W	S619	1-771-410-21	SWITCH, TACTILE (▶▶+)			
R678	1-249-432-11	CARBON	18K	5%	1/4W	S620	1-771-410-21	SWITCH, TACTILE (II)			
R679	1-249-429-11	CARBON	10K	5%	1/4W	S621	1-771-410-21	SWITCH, TACTILE (-◀◀)			
R680	1-249-410-11	CARBON	270	5%	1/4W	S622	1-771-410-21	SWITCH, TACTILE (PICTURE EFFECT)			
R681	1-249-411-11	CARBON	330	5%	1/4W	S623	1-771-410-21	SWITCH, TACTILE (<)			
R682	1-249-413-11	CARBON	470	5%	1/4W	S624	1-771-410-21	SWITCH, TACTILE (>)			
R683	1-249-414-11	CARBON	560	5%	1/4W	S625	1-771-410-21	SWITCH, TACTILE (TAPE A/B)			
R684	1-249-415-11	CARBON	680	5%	1/4W	S626	1-771-410-21	SWITCH, TACTILE (■)			
R693	1-249-429-11	CARBON	10K	5%	1/4W	S627	1-771-410-21	SWITCH, TACTILE (CD)			
R694	1-249-429-11	CARBON	10K	5%	1/4W	S628	1-771-410-21	SWITCH, TACTILE (TUNER/BAND)			
R695	1-249-429-11	CARBON	10K	5%	1/4W	S629	1-771-410-21	SWITCH, TACTILE (< >)			
R701	1-249-410-11	CARBON	270	5%	1/4W	S630	1-771-410-21	SWITCH, TACTILE (MD (VIDEO))			
R702	1-249-408-11	CARBON	180	5%	1/4W	S631	1-771-410-21	SWITCH, TACTILE (◀◀)			
R703	1-249-410-11	CARBON	270	5%	1/4W	S632	1-771-410-21	SWITCH, TACTILE (CHINEMA)			
R704	1-249-411-11	CARBON	330	5%	1/4W	S633	1-771-410-21	SWITCH, TACTILE (DIRECTION)			
R705	1-249-410-11	CARBON	270	5%	1/4W	S634	1-771-410-21	SWITCH, TACTILE (REPEAT, DOLBY NR)			
R706	1-249-410-11	CARBON	270	5%	1/4W	S635	1-771-410-21	SWITCH, TACTILE			(PLAY MODE, STEREO MODE)
R721	1-260-099-11	CARBON	1K	5%	1/2W	S636	1-771-410-21	SWITCH, TACTILE (EDIT, TUNER MEMORY)			
R722	1-260-100-11	CARBON	1.2K	5%	1/2W	S637	1-771-410-21	SWITCH, TACTILE (I/V)			
R723	1-249-433-11	CARBON	22K	5%	1/4W	S638	1-771-410-21	SWITCH, TACTILE (GROOVE)			
R724	1-249-433-11	CARBON	22K	5%	1/4W	S639	1-771-410-21	SWITCH, TACTILE (EQ EDIT)			
R726	1-249-437-11	CARBON	47K	5%	1/4W	S640	1-771-410-21	SWITCH, TACTILE (SPECTRUM)			
R727	1-249-433-11	CARBON	22K	5%	1/4W	S641	1-771-410-21	SWITCH, TACTILE (DISPLAY)			
R728	1-249-429-11	CARBON	10K	5%	1/4W						< VIBRATOR >
R729	1-249-433-11	CARBON	22K	5%	1/4W	X601	1-579-352-11	VIBRATOR, CERAMIC (12.5MHz)			
R731	1-247-881-00	CARBON	120K	5%	1/4W						*****
R732	1-249-417-11	CARBON	1K	5%	1/4W	A-4428-344-A	POWER AMP BOARD, COMPLETE (IA)				
R733	1-249-429-11	CARBON	10K	5%	1/4W	A-4428-483-A	POWER AMP BOARD, COMPLETE				
R734	1-247-807-31	CARBON	100	5%	1/4W						(E, EA, MY, SP)
R735	1-247-885-00	CARBON	180K	5%	1/4W						*****
R736	1-249-429-11	CARBON	10K	5%	1/4W						
R737	1-249-437-11	CARBON	47K	5%	1/4W						< CAPACITOR >
R738	1-249-417-11	CARBON	1K	5%	1/4W	C501	1-126-963-11	ELECT	4.7uF	20%	50V
R739	1-249-441-11	CARBON	100K	5%	1/4W	C502	1-162-294-31	CERAMIC	0.001uF	10%	50V
R740	1-249-417-11	CARBON	1K	5%	1/4W	C503	1-162-286-31	CERAMIC	220PF	10%	50V
R741	1-249-429-11	CARBON	10K	5%	1/4W	C504	1-104-665-11	ELECT	100uF	20%	10V
R742	1-249-417-11	CARBON	1K	5%	1/4W	C507	1-136-495-11	MYLAR	0.068uF	5%	50V

POWER AMP

Ref. No.	Part No.	Description	Remark			Ref. No.	Part No.	Description	Remark					
C508	1-136-495-11	MYLAR	0.068uF	5%	50V	< RESISTOR >								
C509	1-128-560-11	ELECT	22uF	20%	100V	R501	1-249-417-11	CARBON	1K	5%	1/4W			
C510	1-128-578-11	ELECT	1uF	20%	100V	R502	1-249-438-11	CARBON	56K	5%	1/4W			
C511	1-162-306-11	CERAMIC	0.01uF	30%	16V	R503	1-249-412-11	CARBON	390	5%	1/4W			
C541	1-130-777-00	MYLAR	0.1uF	5%	100V	R504	1-249-438-11	CARBON	56K	5%	1/4W			
C542	1-127-752-11	ELECT	3300uF	20%	63V	R505	1-249-417-11	CARBON	1K	5%	1/4W			
C544	1-130-777-00	MYLAR	0.1uF	5%	100V	R506	1-249-431-11	CARBON	15K	5%	1/4W			
C545	1-130-777-00	MYLAR	0.1uF	5%	100V	R507	1-249-441-11	CARBON	100K	5%	1/4W			
C551	1-127-755-11	ELECT	3300uF	20%	100V	△ R508	1-219-718-11	METAL	0.1	10%	5W F			
C551	1-126-963-11	ELECT	4.7uF	20%	50V	R509	1-260-076-11	CARBON	10	5%	1/2W			
C552	1-162-294-31	CERAMIC	0.001uF	10%	50V	△ R510	1-219-718-11	METAL	0.1	10%	5W F			
C553	1-162-286-31	CERAMIC	220PF	10%	50V	△ R511	1-212-881-11	FUSIBLE	100	5%	1/4W F			
C554	1-104-665-11	ELECT	100uF	20%	10V	△ R512	1-202-972-61	FUSIBLE	1	5%	1/4W F			
C557	1-136-495-11	MYLAR	0.068uF	5%	50V	R513	1-249-435-11	CARBON	33K	5%	1/4W			
C558	1-136-495-11	MYLAR	0.068uF	5%	50V	R514	1-249-421-11	CARBON	2.2K	5%	1/4W			
C559	1-128-560-11	ELECT	22uF	20%	100V	R515	1-249-433-11	CARBON	22K	5%	1/4W			
C581	1-126-967-11	ELECT	47uF	20%	50V	R516	1-249-429-11	CARBON	10K	5%	1/4W			
C591	1-130-777-00	MYLAR	0.1uF	5%	100V	R517	1-249-421-11	CARBON	2.2K	5%	1/4W			
C592	1-127-752-11	ELECT	3300uF	20%	63V	R518	1-249-435-11	CARBON	33K	5%	1/4W			
C596	1-127-755-11	ELECT	3300uF	20%	100V	R519	1-249-439-11	CARBON	68K	5%	1/4W			
C942	1-126-964-11	ELECT	10uF	20%	50V	△ R520	1-215-872-11	METAL OXIDE	3.3K	5%	1W F			
C943	1-126-968-11	ELECT	100uF	20%	50V	R521	1-249-441-11	CARBON	100K	5%	1/4W			
C980	1-164-159-11	CERAMIC	0.1uF		50V	R522	1-249-441-11	CARBON	100K	5%	1/4W			
			< CONNECTOR >						R523	1-249-441-11	CARBON	100K	5%	1/4W
CN502	1-778-981-11	CONNECTOR, BOARD TO BOARD 13P	△ R524	1-215-872-11	METAL OXIDE	3.3K	5%	1W F						
CN503	1-778-981-11	CONNECTOR, BOARD TO BOARD 13P							R541	1-249-441-11	CARBON	100K	5%	1/4W
			< DIODE >						R542	1-249-441-11	CARBON	100K	5%	1/4W
D501	8-719-911-19	DIODE 1SS133T-72				R551	1-249-417-11	CARBON	1K	5%	1/4W			
D502	8-719-911-19	DIODE 1SS133T-72				R552	1-249-438-11	CARBON	56K	5%	1/4W			
D503	8-719-922-03	DIODE MTZJ-T-77-18C				R553	1-249-412-11	CARBON	390	5%	1/4W			
D504	8-719-922-03	DIODE MTZJ-T-77-18C				R554	1-249-438-11	CARBON	56K	5%	1/4W			
D541	8-719-302-38	DIODE RBV-602-01				R555	1-249-417-11	CARBON	1K	5%	1/4W			
D543	8-719-302-37	DIODE RBV-602				R556	1-249-431-11	CARBON	15K	5%	1/4W			
D551	8-719-911-19	DIODE 1SS133T-72				R557	1-249-441-11	CARBON	100K	5%	1/4W			
D581	8-719-911-19	DIODE 1SS133T-72				△ R558	1-219-718-11	METAL	0.1	10%	5W F			
D941	8-719-110-90	DIODE MTZJ-T-77-39D				R559	1-260-076-11	CARBON	10	5%	1/2W			
D979	8-719-110-31	DIODE MTZJ-T-72-12B				△ R560	1-219-718-11	METAL	0.1	10%	5W F			
			< EARTH TERMINAL >						△ R561	1-212-881-11	FUSIBLE	100	5%	1/4W F
* EP501	1-537-738-21	TERMINAL, EARTH				R581	1-249-435-11	CARBON	33K	5%	1/4W			
			< IC >						R582	1-249-435-11	CARBON	33K	5%	1/4W
IC501	8-749-017-06	IC STK412-150				R591	1-249-441-11	CARBON	100K	5%	1/4W			
			< TRANSISTOR >						R592	1-249-441-11	CARBON	100K	5%	1/4W
Q501	8-729-140-84	TRANSISTOR 2SC1841TP-PAFAEA				△ R941	1-216-478-11	METAL OXIDE	390	5%	3W F			
Q503	8-729-140-82	TRANSISTOR 2SA988TP-PAFAEA				R942	1-249-429-11	CARBON	10K	5%	1/4W			
Q504	8-729-140-84	TRANSISTOR 2SC1841TP-PAFAEA							R943	1-249-417-11	CARBON	1K	5%	1/4W
Q505	8-729-140-84	TRANSISTOR 2SC1841TP-PAFAEA							R944	1-247-791-91	CARBON	22	5%	1/4W
Q506	8-729-119-79	TRANSISTOR 2SC2785TP-FEK							R980	1-249-429-11	CARBON	10K	5%	1/4W
			< THERMISTOR >											
									TH501	1-807-796-11	THERMISTOR			

The components identified by mark ▲ or dotted line with mark △ are critical for safety.
Replace only with part number specified.

SENSOR	TRANS	VIDEO
---------------	--------------	--------------

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
	1-675-911-11	SENSOR BOARD *****		C203	1-163-017-00	CERAMIC CHIP	0.0047uF 5% 50V
		< CAPACITOR >		C304	1-163-127-00	CERAMIC CHIP	270PF 5% 50V
C712	1-164-159-11	CERAMIC 0.1uF	50V	C305	1-163-235-11	CERAMIC CHIP	22PF 5% 50V
		< PHOTO INTERRUPTER >		C306	1-163-127-00	CERAMIC CHIP	270PF 5% 50V
IC711	8-749-014-38	PHOTO INTERRUPTER SG-264		C307	1-163-235-11	CERAMIC CHIP	22PF 5% 50V
		< RESISTOR >		C308	1-163-263-11	CERAMIC CHIP	330PF 5% 50V
R711	1-247-876-11	CARBON 75K 5%	1/4W	C309	1-163-263-11	CERAMIC CHIP	330PF 5% 50V
R712	1-249-409-11	CARBON 220 5%	1/4W	C310	1-165-319-11	CERAMIC CHIP	0.1uF 50V
R713	1-249-429-11	CARBON 10K 5%	1/4W	C311	1-124-778-00	ELECT CHIP	22uF 20% 6.3V
		< SWITCH >		C312	1-163-017-00	CERAMIC CHIP	0.0047uF 5% 50V
S711	1-771-821-11	SWITCH, PUSH (1 KEY) (BU UP/DOWN)		C313	1-163-125-00	CERAMIC CHIP	220PF 5% 50V
		*****		C314	1-163-235-11	CERAMIC CHIP	22PF 5% 50V
	1-676-808-11	TRANS BOARD *****		C315	1-163-255-11	CERAMIC CHIP	150PF 5% 50V
		1-533-293-11 FUSE HOLDER		C316	1-165-319-11	CERAMIC CHIP	0.1uF 50V
		< CAPACITOR >		C317	1-126-193-11	ELECT	1uF 20% 50V
△C972	1-113-925-11	CERAMIC 0.01uF 20% 250V (E, EA, MY, SP)		C318	1-165-319-11	CERAMIC CHIP	0.1uF 50V
		< CONNECTOR >		C319	1-126-206-11	ELECT CHIP	100uF 20% 6.3V
CN975	1-564-321-00	PIN, CONNECTOR 2P		C320	1-126-206-11	ELECT CHIP	100uF 20% 6.3V
* CN977	1-564-528-11	PLUG, CONNECTOR 13P		C321	1-126-206-11	ELECT CHIP	100uF 20% 6.3V
		< FUSE >		C322	1-126-206-11	ELECT CHIP	100uF 20% 6.3V
△F971	1-532-506-31	FUSE (T6.3AL/250)		C323	1-126-206-11	ELECT CHIP	100uF 20% 6.3V
△F974	1-532-506-31	FUSE (T6.3AL/250)		C324	1-165-319-11	CERAMIC CHIP	0.1uF 50V
△F975	1-532-506-31	FUSE (T6.3AL/250)		C325	1-165-319-11	CERAMIC CHIP	0.1uF 50V
△F976	1-533-949-31	FUSE, CYLINDRICAL (TIME LUG) (T8AL/250)		C401	1-165-319-11	CERAMIC CHIP	0.1uF 50V
△F977	1-533-949-31	FUSE, CYLINDRICAL (TIME LUG) (T8AL/250)		C402	1-124-778-00	ELECT CHIP	22uF 20% 6.3V
		< RESISTOR >		C504	1-165-319-11	CERAMIC CHIP	0.1uF 50V
△R952	1-219-120-11	FUSIBLE 0.15 5%	1/4W F	C505	1-126-206-11	ELECT CHIP	100uF 20% 6.3V
△R953	1-219-120-11	FUSIBLE 0.15 5%	1/4W F	C506	1-165-319-11	CERAMIC CHIP	0.1uF 50V
		< SWITCH >		C507	1-126-206-11	ELECT CHIP	100uF 20% 6.3V
△S951	1-771-291-11	SWITCH, POWER (VOLTAGE SELECTOR)		C508	1-126-206-11	ELECT CHIP	100uF 20% 6.3V
		< TRANSFORMER >		C509	1-163-275-11	CERAMIC CHIP	0.001uF 5% 50V
△T971	1-435-325-11	POWER TRANSFORMER		C510	1-165-319-11	CERAMIC CHIP	0.1uF 50V
		*****		C531	1-126-206-11	ELECT CHIP	100uF 20% 6.3V
	A-4724-973-A	VIDEO BOARD, COMPLETE *****		C532	1-165-319-11	CERAMIC CHIP	0.1uF 50V
		< CAPACITOR >		C535	1-165-319-11	CERAMIC CHIP	0.1uF 50V
C101	1-124-778-00	ELECT CHIP 22uF 20%	6.3V	C536	1-126-193-11	ELECT	1uF 20% 50V
C102	1-163-143-00	CERAMIC CHIP 0.0012uF 5%	50V	C537	1-126-206-11	ELECT CHIP	100uF 20% 6.3V
C103	1-163-017-00	CERAMIC CHIP 0.0047uF 5%	50V	C539	1-165-319-11	CERAMIC CHIP	0.1uF 50V
C201	1-124-778-00	ELECT CHIP 22uF 20%	6.3V	C540	1-126-206-11	ELECT CHIP	100uF 20% 6.3V
C202	1-163-143-00	CERAMIC CHIP 0.0012uF 5%	50V	C541	1-165-319-11	CERAMIC CHIP	0.1uF 50V
		< CAPACITOR >		C542	1-126-206-11	ELECT CHIP	100uF 20% 6.3V
				C543	1-126-206-11	ELECT CHIP	100uF 20% 6.3V
				C544	1-165-319-11	CERAMIC CHIP	0.1uF 50V
				C545	1-165-319-11	CERAMIC CHIP	0.1uF 50V
				C546	1-165-319-11	CERAMIC CHIP	0.1uF 50V
				C547	1-126-193-11	ELECT	1uF 20% 50V
				C548	1-165-319-11	CERAMIC CHIP	0.1uF 50V
				C549	1-165-319-11	CERAMIC CHIP	0.1uF 50V
				C550	1-163-275-11	CERAMIC CHIP	0.001uF 5% 50V
				C551	1-165-319-11	CERAMIC CHIP	0.1uF 50V
				C552	1-165-319-11	CERAMIC CHIP	0.1uF 50V
				C553	1-126-206-11	ELECT CHIP	100uF 20% 6.3V
				C555	1-124-778-00	ELECT CHIP	22uF 20% 6.3V
				C556	1-165-319-11	CERAMIC CHIP	0.1uF 50V
				C559	1-126-206-11	ELECT CHIP	100uF 20% 6.3V
				C561	1-163-089-00	CERAMIC CHIP	6PF 50V
				C563	1-165-319-11	CERAMIC CHIP	0.1uF 50V

The components identified by mark △ or dotted line with mark △ are critical for safety.
Replace only with part number specified.

VIDEO

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark	
C564	1-165-319-11	CERAMIC CHIP	0.1uF	50V	L504	1-410-375-11	INDUCTOR CHIP	3.3uH
C565	1-126-206-11	ELECT CHIP	100uF	20%	L505	1-216-296-00	SHORT	0
C566	1-165-319-11	CERAMIC CHIP	0.1uF	50V	L506	1-216-296-00	SHORT	0
C568	1-126-206-11	ELECT CHIP	100uF	20%	L507	1-216-296-00	SHORT	0
C569	1-126-206-11	ELECT CHIP	100uF	20%	L508	1-216-296-00	SHORT	0
C570	1-126-206-11	ELECT CHIP	100uF	20%	L509	1-216-296-00	SHORT	0
C571	1-128-065-11	ELECT CHIP	68uF	20%	L510	1-216-296-00	SHORT	0
C573	1-163-235-11	CERAMIC CHIP	22PF	5%	L511	1-469-705-21	INDUCTOR	0uH
C574	1-163-235-11	CERAMIC CHIP	22PF	5%	L512	1-469-705-21	INDUCTOR	0uH
C576	1-163-235-11	CERAMIC CHIP	22PF	5%	L513	1-469-705-21	INDUCTOR	0uH
C577	1-163-235-11	CERAMIC CHIP	22PF	5%	< TRANSISTOR >			
< CONNECTOR >								
CN501	1-779-343-21	CONNECTOR, FFC/FPC 23P			Q501	8-729-900-53	TRANSISTOR	DTC114EKA-T146
CN502	1-779-416-11	CONNECTOR, FFC (LIF (NON-ZIF)) 13P			Q502	8-729-900-53	TRANSISTOR	DTC114EKA-T146
< TRIMMER >								
CT503	1-141-539-11	CAP, ADJ	10PF		R101	1-216-073-00	METAL CHIP	10K 5% 1/10W
< DIODE >								
D501	8-719-422-12	DIODE	UDZ-TE-17-3.9B		R102	1-208-441-61	RES-CHIP	1.5K 2% 1/10W
< IC >								
IC101	8-759-701-40	IC	NJM2100M (TE2)		R103	1-208-441-61	RES-CHIP	1.5K 2% 1/10W
IC301	8-759-530-30	IC	TC74VHCU04FT (EL)		R201	1-216-073-00	METAL CHIP	10K 5% 1/10W
IC302	8-759-662-94	IC	NJM2255M (TE2)		R202	1-208-441-61	RES-CHIP	1.5K 2% 1/10W
IC303	8-759-711-47	IC	NJM2209M (TE2)		R203	1-208-441-61	RES-CHIP	1.5K 2% 1/10W
IC304	8-759-662-95	IC	BA7665FS-E2		R302	1-216-624-11	METAL CHIP	75 0.5% 1/10W
IC501	8-759-530-30	IC	TC74VHCU04FT (EL)		R303	1-216-624-11	METAL CHIP	75 0.5% 1/10W
IC502	8-759-663-01	IC	M30620MCA-A34FP		R306	1-216-624-11	METAL CHIP	75 0.5% 1/10W
IC504	8-759-530-30	IC	TC74VHCU04FT (EL)		R308	1-216-073-00	METAL CHIP	10K 5% 1/10W
IC505	8-759-535-48	IC	CL680T-D1		R309	1-216-073-00	METAL CHIP	10K 5% 1/10W
IC506	8-759-677-67	IC	LC372100PM-K98-TLA		R310	1-216-057-00	METAL CHIP	2.2K 5% 1/10W
IC507	8-759-342-01	IC	MSM514260C-60JS		R311	1-216-029-00	METAL CHIP	150 5% 1/10W
IC509	8-759-535-62	IC	PCM1727E-2/T2		R312	1-216-073-00	METAL CHIP	10K 5% 1/10W
< JACK >								
J301	1-537-943-11	TERMINAL, S (S VIDEO OUT)			R313	1-216-073-00	METAL CHIP	10K 5% 1/10W
J302	1-774-227-11	JACK, PIN 1P (VIDEO OUT)			R314	1-216-059-00	METAL CHIP	2.7K 5% 1/10W
< RESISTOR >								
JW101	1-216-295-00	SHORT	0		R315	1-216-624-11	METAL CHIP	75 0.5% 1/10W
JW201	1-216-295-00	SHORT	0		R316	1-216-022-00	METAL CHIP	75 5% 1/10W
JW301	1-216-295-00	SHORT	0		R317	1-216-022-00	METAL CHIP	75 5% 1/10W
JW302	1-216-025-00	RES-CHIP	100	5% 1/10W	R318	1-216-295-00	SHORT	0
JW304	1-216-295-00	SHORT	0		R319	1-216-624-11	METAL CHIP	75 0.5% 1/10W
JW413	1-216-295-00	SHORT	0		R320	1-216-295-00	SHORT	0
JW504	1-216-295-00	SHORT	0		R403	1-216-057-00	METAL CHIP	2.2K 5% 1/10W
JW505	1-216-295-00	SHORT	0		R404	1-216-057-00	METAL CHIP	2.2K 5% 1/10W
JW513	1-216-295-00	SHORT	0		R501	1-216-025-00	RES-CHIP	100 5% 1/10W
< COIL/SHORT >								
L301	1-410-372-21	INDUCTOR CHIP	1.8uH		R502	1-216-025-00	RES-CHIP	100 5% 1/10W
L302	1-410-372-21	INDUCTOR CHIP	1.8uH		R503	1-216-025-00	RES-CHIP	100 5% 1/10W
L303	1-410-658-31	INDUCTOR CHIP	220uH		R504	1-216-025-00	RES-CHIP	100 5% 1/10W
L501	1-216-296-00	SHORT	0		R505	1-216-025-00	RES-CHIP	100 5% 1/10W
L502	1-216-296-00	SHORT	0		R506	1-216-025-00	RES-CHIP	100 5% 1/10W
< COIL/SHORT >								
R507	1-216-073-00	METAL CHIP	10K 5% 1/10W		R508	1-216-073-00	METAL CHIP	10K 5% 1/10W
R516	1-216-073-00	METAL CHIP	10K 5% 1/10W		R517	1-216-073-00	METAL CHIP	10K 5% 1/10W
R518	1-216-073-00	METAL CHIP	10K 5% 1/10W		R519	1-216-025-00	RES-CHIP	100 5% 1/10W
R520	1-216-057-00	METAL CHIP	2.2K 5% 1/10W		R521	1-216-073-00	METAL CHIP	10K 5% 1/10W
R523	1-216-013-00	METAL CHIP	33 5% 1/10W		R530	1-216-025-00	RES-CHIP	100 5% 1/10W

Ref. No.	Part No.	Description		Remark	Ref. No.	Part No.	Description	Remark
R531	1-216-025-00	RES-CHIP	100	5%	1/10W		*****	
R532	1-216-295-00	SHORT	0				HARDWARE LIST	
R533	1-216-295-00	SHORT	0				*****	
R534	1-216-073-00	METAL CHIP	10K	5%	1/10W	#1	7-628-254-05	SCREW +PS 2.6X5
R535	1-216-073-00	METAL CHIP	10K	5%	1/10W	#2	7-685-646-79	SCREW +BVTP 3X8 TYPE2 N-S
R536	1-216-033-00	METAL CHIP	220	5%	1/10W	#3	7-685-647-79	SCREW +BVTP 3X10 TYPE2 N-S
R537	1-216-025-00	RES-CHIP	100	5%	1/10W	#4	7-685-650-79	SCREW +BVTP 3X16 TYPE2 N-S
R538	1-216-073-00	METAL CHIP	10K	5%	1/10W	#5	7-685-648-79	SCREW +BVTP 3X12 TYPE2 N-S
R539	1-216-295-00	SHORT	0			#6	7-685-881-09	SCREW +BVTT 4X8 (S)
R540	1-216-295-00	SHORT	0			#7	7-623-921-01	WASHER 1.7, NYLON
R542	1-216-651-11	METAL CHIP	1K	0.5%	1/10W	#8	7-685-783-09	SCREW +PTT 2X6 (S)
R543	1-216-685-11	METAL CHIP	27K	0.5%	1/10W			
R544	1-216-659-11	METAL CHIP	2.2K	0.5%	1/10W			
R545	1-216-025-00	RES-CHIP	100	5%	1/10W			
R546	1-216-049-11	RES-CHIP	1K	5%	1/10W			
R548	1-216-049-11	RES-CHIP	1K	5%	1/10W			
R549	1-216-025-00	RES-CHIP	100	5%	1/10W			
R550	1-216-025-00	RES-CHIP	100	5%	1/10W			
R551	1-216-025-00	RES-CHIP	100	5%	1/10W			
R552	1-216-025-00	RES-CHIP	100	5%	1/10W			
R555	1-216-121-00	RES-CHIP	1M	5%	1/10W			
R556	1-216-025-00	RES-CHIP	100	5%	1/10W			
R557	1-216-025-00	RES-CHIP	100	5%	1/10W			
R560	1-216-653-11	METAL CHIP	1.2K	0.5%	1/10W			
R561	1-216-651-11	METAL CHIP	1K	0.5%	1/10W			
R562	1-216-073-00	METAL CHIP	10K	5%	1/10W			
R563	1-216-073-00	METAL CHIP	10K	5%	1/10W			
R577	1-216-081-00	METAL CHIP	22K	5%	1/10W			
R578	1-216-081-00	METAL CHIP	22K	5%	1/10W			
R579	1-216-073-00	METAL CHIP	10K	5%	1/10W			
R580	1-216-073-00	METAL CHIP	10K	5%	1/10W			
< VIBRATOR >								
X501	1-767-510-11	VIBRATOR, CERAMIC (10Mz)						
X503	1-767-519-11	VIBRATOR, CRYSTAL (27MHz)						

MISCELLANEOUS								

11	1-792-246-11	WIRE (FLAT TYPE) (23 CORE)						
▲13	1-526-794-11	OUTLET, AC						
101	1-773-045-11	WIRE (FLAT TYPE) (17 CORE)						
104	1-690-589-31	WIRE (FLAT TYPE) (13 CORE)						
▲108	1-575-653-11	CORD, POWER (E)						
▲108	1-777-071-21	CORD, POWER (MY, SP)						
▲108	1-777-071-51	CORD, POWER (EA, IA)						
▲109	1-569-007-11	ADAPTOR, CONVERSION 2P (E)						
▲109	1-569-008-21	ADAPTOR, CONVERSION 2P (EA, MY, SP, IA)						
209	1-791-983-12	WIRE (FLAT TYPE) (8 CORE)						
216	1-471-035-11	MAGNET ASSY						
▲251	8-820-116-01	OPTICAL PICK-UP KSM-213DAP/Z-NP						
252	1-769-069-11	WIRE (FLAT TYPE) (16 CORE)						
HP901	X-4954-985-1	BLOCK (A) ASSY, HEAD (PB)						
	HRPE901X-4954-986-1	BLOCK (B) ASSY, HEAD (REC/PB/ERASE)						
M721	A-4672-826-A	MOTOR ASSY (TURN)						
M901	X-3378-241-1	MOTOR ASSY (CAPSTAN/REEL)						
M961	1-763-072-11	FAN, D. C.						
▲T971	1-435-325-11	POWER TRANSFORMER						

The components identified by mark ▲ or dotted line with mark ▲ are critical for safety.
Replace only with part number specified.

REVISION HISTORY

Clicking the version allows you to jump to the revised page.

Also, clicking the version at the upper right on the revised page allows you to jump to the next revised page.