

# Service Manual


## DVD Home Theater Sound System



### SA-HT935EE

Colour

(S).....Silver Type

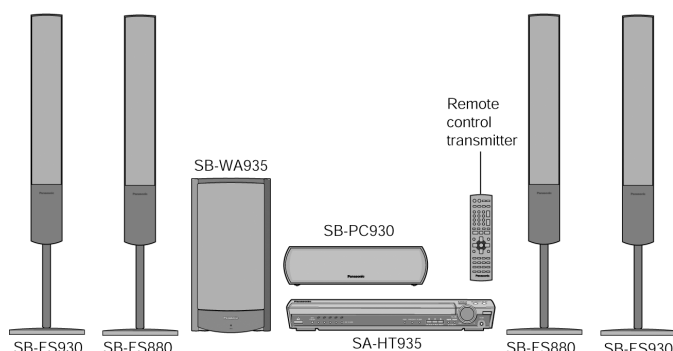

## Specifications

### General

#### Power Source:

AC 230V, 50Hz

#### Power consumption:

25 W

#### Dimensions (W×H×D):

430×68×423 mm

#### Mass:

4 kg

### Amplifier section

#### RMS Output Power: Dolby Digital Mode

##### Total RMS Dolby Digital

mode Power: 1000 W

##### At 1kHz and total harmonic of 10%

I Front: 170 W/ Channel (6Ω)

I Center: 260 W/ Channel (4Ω)

I Surround: 70 W/ Channel (4Ω)

##### At 100Hz and total harmonic of 10%

I Active subwoofers: 260 W/ Channel (4Ω)

#### DIN Output Power: Dolby Digital Mode:

##### Total DIN Dolby Digital mode Power:

750 W

##### At 1Hz and total harmonic of 1%

I Front: 140 W/ Channel (6Ω)

I Center: 180 W/ Channel (4Ω)

I Surround: 55 W/ Channel (4Ω)

At 100Hz and total harmonic of 1%

I Subwoofer: 180 W/ Channel (4Ω)

### IFM tuner section

#### Frequency Range:

87.5-108.0MHz

(50kHz in step)

#### Sensitivity:

2.5μV (IHF)

#### S/N 26dB

2.2μV

#### Antenna Terminal:

75Ω (non balance)

### IAM tuner section

#### Frequency Range:

522-1629kHz (9kHz in step)

#### AM Sensitivity S/N 20dB at

999kHz:

560μV/m

### IPhone Jack:

#### Terminal:

Stereo 3.5 mm jack

### IDisc section

#### Discs played [8 cm or 12 cm]:

- (1) DVD-RAM (DVD-VR compatible, JPEG formatted discs)
- (2) DVD-Audio
- (3) DVD-Video
- (4) DVD-R, DVD-RW (DVD-Video compatible)  
+R, +RW (Video compatible)

# Panasonic

© 2005 Panasonic AVC Networks Singapore Pte. Ltd. All rights reserved. Unauthorized copying and distribution is a violation of law.

- (5) CD-Audio (CD-DA)  
 (6) Video CD  
 (7) SVCD (Conforming to IEC62107)  
 (8) CD-R/CD-RW (CD-DA, Video-CD, SVCD, MP3, WMA, JPEG formatted discs)  
 (9) MP3/WMA

Compatible compression rate:

MP3: between 32 kbps and 320 kbps

WMA: between 48 kbps and 320 kbps

Maximum number of recognizable audio and picture contents and groups:

4000 audio and picture contents and 400 groups

- (10) JPEG

EXIF Ver 2.1 JPEG Baseline files

Picture resolution: between 320 x 240 and 6144 x 4096 pixels (sub sampling is 4:2:2 or 4:2:0)

Maximum number of recognizable audio and picture contents and groups:

4000 audio and picture contents and 400 groups

- (11) MPEG4

MPEG4 data recorded with the multi cameras or DVD video recorders Conforming to SD VIDEO specifications (ASF Standard) / MPEG4 (Simple Profile) video system/G.726 audio system.

Maximum number of recognizable audio and picture contents and groups:

4000 audio and picture contents and 400 groups

- (12) DivX

DivX 3.11, 4.x, 5.x

GMC (Global Motion Compensation) not supported.

Maximum number of recognizable audio and picture contents and groups:

4000 audio and picture contents and 400 groups

- (13) HighMAT Level 2 (Audio and Image)

**Pick up:**

**Wavelength:**

ICD: 785nm

IDVD: 662nm

**Laser power:**

CLASS 2/ CLASS 3A

**Audio output (DISC):**

Number of channels: 5.1 ch (FL, FR, C, SL, SR, SW)

**Audio performance( Measurement at Rec Out terminal):**

**Frequency response:**

DVD (linear audio): 4 Hz-22 kHz  
(48 kHz sampling)

4 Hz-44 kHz  
(96 kHz sampling)

DVD-Audio: 4 Hz-88 kHz  
(192 kHz sampling)

CD-Audio: 4 Hz-20 kHz

**S/N ratio:**

CD-Audio: 95 dB

**Dynamic range:**

DVD (linear audio): 95 dB

CD-Audio: 93 dB

**Total harmonic distortion:**

CD-Audio: 0.005 %

**Video section**

**Video system:**

Signal system: PAL 625/50, PAL 525/60, NTSC

**Composite video output:**

Output level: 1 Vp-p (75 Ω)

Terminal: Pin jack (1 system)

Scart jack (1 system)

**S-video output:**

Y output level: 1 Vp-p (75 Ω)

C output level: NTSC; 0.286 Vp-p (75 Ω)

PAL; 0.3 Vp-p (75 Ω)

Terminal: S terminal (1 system)

Scart jack (1 system)

**Component video output :**

NTSC: 525(480)P/525(480)I:

PAL: 625(576)P/625(576)I:

Y output level: 1 Vp-p (75 Ω)

P<sub>B</sub> output level: 0.7 Vp-p (75 Ω)

P<sub>R</sub> output level: 0.7 Vp-p (75 Ω)

Terminal: Pin jack (Y: green, P<sub>B</sub>: blue,

P<sub>R</sub>: red) (1 system)

**RGB video output :**

R output level: 0.7 Vp-p (75 Ω)

G output level: 0.7 Vp-p (75 Ω)

B output level: 0.7 Vp-p (75 Ω)

Terminal: Scart jack (1 system)

**Power consumption in standby mode:**

approx 0.7W

**Note:**

- Specifications are subject to change without notice. Mass and dimensions are approximate.
- Total harmonic distortion is measured by the digital spectrum analyzer.

**Solder:**

This model uses lead free solder (PbF).

system	SC-HT935
Main unit	SA-HT935
Front speakers	SB-FS930P
Center speaker	SB-PC930P
Surround speakers	SB-FS880EB
Active subwoofer	SB-WA935EE

MPEG Layer-3 audio decoding technology licensed from Fraunhofer IIS and Thomson multimedia.

Windows Media, and the Windows logo are trademarks, or registered trademarks of Microsoft Corporation in the United States and/or other countries.

WMA is a compression format developed by Microsoft Corporation. It achieves the same sound quality as MP3 with a file size that is smaller than that of MP3.



HighMAT and the HighMAT logo are either trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries.

## ■ Built-in decoders

You can play discs with these symbols.



## ⚠ WARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

## CONTENTS


	Page		Page
<b>1 Use of Active Subwoofer</b> .....	5	11.9. Removal of the Rotary Tray .....	23
1.1. Checking Player when Active Subwoofer is not used .....	5	11.10. Removal of the Open Lock Gear .....	23
<b>2 Safety Precautions</b> .....	6	11.11. Removal of the Close Lock Gear .....	23
2.1. GENERAL GUIDELINES .....	6	11.12. Removal of the Tray Motor P.C.B. and Sensor P.C.B. ...	24
<b>3 Prevention of Electro Static Discharge (ESD) to Electrostatically Sensitive (ES) Devices</b> .....	6	11.13. Removal of the Traverse Unit .....	24
<b>4 Before Repair and Adjustment (Using Active Subwoofer)</b> .....	7	11.14. Removal of the Pulley Gear .....	24
<b>5 Protection Circuitry</b> .....	7	11.15. Removal of the Loading Motor P.C.B. ....	25
<b>6 Precaution of Laser Diode</b> .....	8	11.16. Removal of the Drive Gear (A) & (B) .....	25
<b>7 About Lead Free Solder (PbF)</b> .....	8	11.17. Disassembling the Fixed Plate, Magnet and Clamper ....	25
<b>8 General Description</b> .....	9	11.18. Removal of the Cam Gear & Support Piece .....	26
8.1. Operating instructions .....	9	11.19. Removal of the Slide Plate (L) & (R) and Change Lever-	26
8.2. Disc information .....	10	11.20. Assembly of Tray Base .....	27
8.3. About HighMAT .....	11	<b>12 Service Position</b> .....	<b>28</b>
<b>9 Accessories</b> .....	<b>16</b>	12.1. Checking & Repair Tray Motor P.C.B and Sensor P.C.B-28	
<b>10 Handling Precautions for Optical Pickup Unit</b> .....	<b>17</b>	12.2. Checking & Repair Main P.C.B .....	28
10.1. Cautions to Be Taken in Handling the Optical Pickup Unit .....	17	12.3. Checking & Repair DVD Module P.C.B .....	28
10.2. Grounding for electrostatic breakdown prevention .....	17	<b>13 Optical Pick-up Self-Diagnosis and Replacement Procedure</b> .....	<b>29</b>
<b>11 Disassembly and Main Component Replacement Procedures</b> .....	<b>19</b>	13.1. Optical Pickup Breakdown Diagnosis .....	29
11.1. Disassembly Procedure .....	20	13.2. Service Mode Table 1 .....	30
11.2. Main Components and P.C.B. Locations .....	20	13.3. DVD Self Diagnostic Function-Error Code .....	30
11.3. Disassembling the Top Cabinet .....	21	13.4. Service mode table 2 .....	32
11.4. Disassembling the Front Panel .....	21	13.5. Sales demonstration lock function .....	34
11.5. Disassembling the Tray Assembly .....	22	13.6. Handling After Completing Repairs .....	34
11.6. Disassembling the Mechanism Base Block .....	22	<b>14 Self-Diagnosis Function</b> .....	<b>35</b>
11.7. Disassembling the Main P.C.B .....	22	14.1. Automatic Displayed Error Codes .....	35
11.8. Removal of the Tray Base Guide (L) and Tray Base Guide (R) .....	23	14.2. Memorized Error Codes .....	35
		<b>15 Service Precautions</b> .....	<b>36</b>
		15.1. Recovery after the DVD player is repaired .....	36
		15.2. Firmware version-up of the DVD player .....	36

<b>16 Adjustment Procedure</b> .....	<b>37</b>	<b>21 Block Diagram</b> .....	<b>47</b>
16.1. Service Tools and Equipment .....	37	<b>22 Schematic Diagram</b> .....	<b>53</b>
16.2. Important points in adjustment .....	37	<b>23 Printed Circuit Board Diagram</b> .....	<b>63</b>
16.3. Storing and handling of test discs .....	37	<b>24 Wiring Connection Diagram</b> .....	<b>67</b>
16.4. Optical adjustment .....	38	<b>25 Illustration of IC 類, Transistors and Diodes</b> .....	<b>69</b>
<b>17 Abbreviations</b> .....	<b>39</b>	<b>26 Terminal Function of ICs</b> .....	<b>70</b>
<b>18 Voltage Chart</b> .....	<b>41</b>	26.1. IC2018 (MN101C49GHB): Operation CPU .....	70
18.1. DVD Module P.C.B. ....	41	<b>27 Parts Location and Replacement Parts List</b> .....	<b>71</b>
18.2. Main P.C.B. ....	42	27.1. Loading Mechanism, Traverse Unit & Cabinet .....	72
18.3. FL P.C.B. ....	43	27.2. Component Parts List .....	76
18.4. Loading Motor P.C.B., Tray Motor P.C.B., Sensor P.C.B. .....	43	27.3. Packing Materials & Accessories Parts List .....	86
<b>19 Wave Form Chart</b> .....	<b>44</b>	27.4. Packaging .....	86
<b>20 Schematic Diagram Notes</b> .....	<b>45</b>	<b>28 Schematic Diagram for printing with letter size</b> .....	<b>87</b>


# 1 Use of Active Subwoofer

## 1.1. Checking Player when Active Subwoofer is not used

1. This unit uses the active subwoofer to supply the power of the component, and the active subwoofer should be connected to the component to check operational conditions of the component.

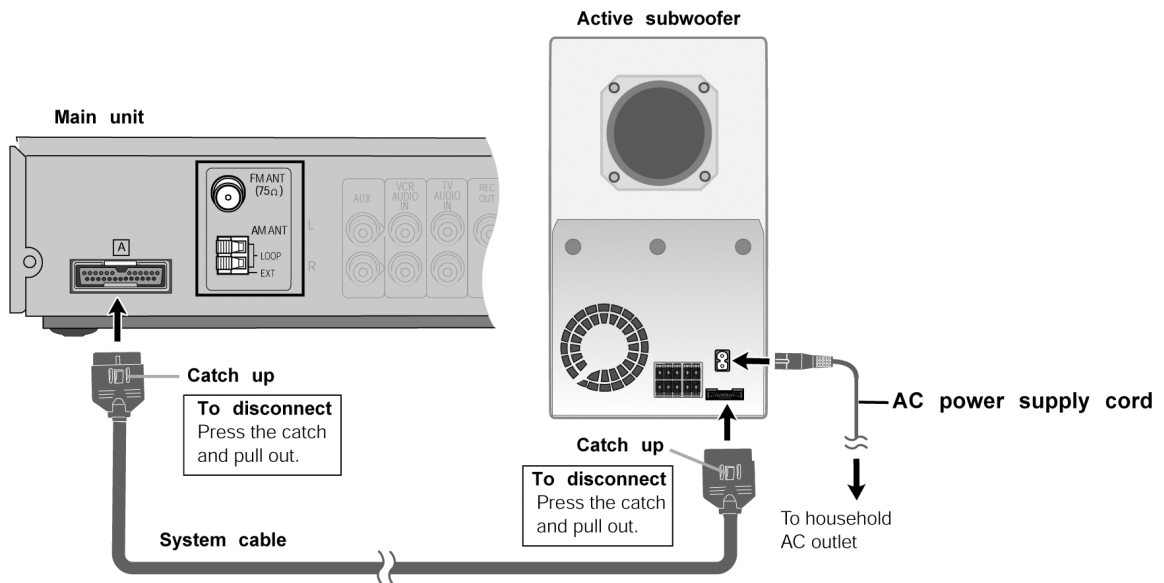

2. If the active subwoofer is not available due to repair of the unit, use the following equipment.

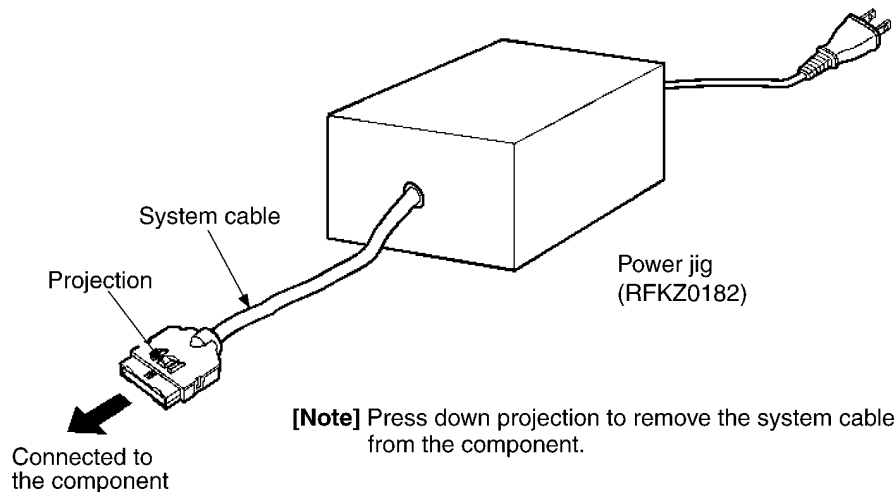

Jig product number: RFKZ0182 (110V, 127V, 220V, 230V-240V for overseas domestic use)

## 2 Safety Precautions

### 2.1. GENERAL GUIDELINES

1. When servicing, observe the original lead dress. If a short circuit is found, replace all parts which have been overheated or damaged by the short circuit.
2. After servicing, see to it that all the protective devices such as insulation barriers, insulation papers shields are properly installed.
3. After servicing, carry out the following leakage current checks to prevent the customer from being exposed to shock hazards.

#### 2.1.1. LEAKAGE CURRENT COLD CHECK

1. Unplug the AC cord and connect a jumper between the two prongs on the plug.
2. Measure the resistance value, with an ohmmeter, between the jumpered AC plug and each exposed metallic cabinet part on the equipment such as screwheads, connectors, control shafts, etc. When the exposed metallic part has a return path to the chassis, the reading should be between  $1M\Omega$  and  $5.2M\Omega$ .

When the exposed metal does not have a return path to the chassis, the reading must be  $\infty$ .

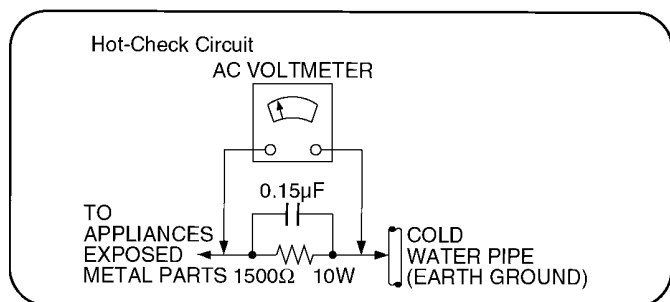


Figure 1

#### 2.1.2. LEAKAGE CURRENT HOT CHECK (See Figure 1 .)

1. Plug the AC cord directly into the AC outlet. Do not use an isolation transformer for this check.
2. Connect a  $1.5k\Omega$ , 10 watts resistor, in parallel with a  $0.15\mu F$  capacitors, between each exposed metallic part on the set and a good earth ground such as a water pipe, as shown in Figure 1.
3. Use an AC voltmeter, with 1000 ohms/volt or more sensitivity, to measure the potential across the resistor.
4. Check each exposed metallic part, and measure the voltage at each point.
5. Reverse the AC plug in the AC outlet and repeat each of the above measurements.
6. The potential at any point should not exceed 0.75 volts RMS. A leakage current tester (Simpson Model 229 or equivalent) may be used to make the hot checks, leakage current must not exceed 1/2 milliamp. In case a measurement is outside of the limits specified, there is a possibility of a shock hazard, and the equipment should be repaired and rechecked before it is returned to the customer.

## 3 Prevention of Electro Static Discharge (ESD) to Electrostatically Sensitive (ES) Devices

Some semiconductor (solid state) devices can be damaged easily by static electricity. Such components commonly are called Electrostatically Sensitive (ES) Devices. Examples of typical ES devices are integrated circuits and some field-effect transistors and semiconductor "chip" components. The following techniques should be used to help reduce the incidence of component damage caused by electro static discharge (ESD).

1. Immediately before handling any semiconductor component or semiconductor-equipped assembly, drain off any ESD on your body by touching a known earth ground. Alternatively, obtain and wear a commercially available discharging ESD wrist strap, which should be removed for potential shock reasons prior to applying power to the unit under test.
2. After removing an electrical assembly equipped with ES devices, place the assembly on a conductive surface such as aluminum foil, to prevent electrostatic charge buildup or exposure of the assembly.
3. Use only a grounded-tip soldering iron to solder or unsolder ES devices.
4. Use only an anti-static solder removal device. Some solder removal devices not classified as "anti-static (ESD protected)" can generate electrical charge sufficient to damage ES devices.
5. Do not use freon-propelled chemicals. These can generate electrical charges sufficient to damage ES devices.
6. Do not remove a replacement ES device from its protective package until immediately before you are ready to install it. (Most replacement ES devices are packaged with leads electrically shorted together by conductive foam, aluminum foil or comparable conductive material).
7. Immediately before removing the protective material from the leads of a replacement ES device, touch the protective material to the chassis or circuit assembly into which the device will be installed.

**Caution**

Be sure no power is applied to the chassis or circuit, and observe all other safety precautions.

8. Minimize bodily motions when handling unpackaged replacement ES devices. (Otherwise harmless motion such as the brushing together of your clothes fabric or the lifting of your foot from a carpeted floor can generate static electricity (ESD) sufficient to damage an ES device).

**IMPORTANT SAFETY NOTICE**

There are special components used in this equipment which are important for safety. These parts are marked by  $\triangle$  in the schematic diagrams, Exploded Views and replacement parts list. It is essential that these critical parts should be replaced with manufacturer's specified parts to prevent shock, fire, or other hazards. Do not modify the original design without permission of manufacturer.

## 4 Before Repair and Adjustment (Using Active Subwoofer)

Disconnect AC power, discharge Power Supply Capacitors C547~C549 through a 10  $\Omega$ , 10 W resistor to ground.

DO NOT SHORT-CIRCUIT DIRECTLY (with a screwdriver blade, for instance), as this may destroy solid state devices.

After repairs are completed, restore power gradually using a variac, to avoid overcurrent.

Current consumption at AC 230 V, 50 Hz in NO SIGNAL mode should be ~ 1000 mA.

## 5 Protection Circuitry

The protection circuitry may have operated if either of the following conditions are noticed:

- No sound is heard when the power is turned on.
- Sound stops during a performance.

The function of this circuitry is to prevent circuitry damage if, for example, the positive and negative speaker connection wires are "shorted", or if speaker systems with an impedance less than the indicated rated impedance of the amplifier are used.

If this occurs, follow the procedure outlines below:

1. Turn off the power.
2. Determine the cause of the problem and correct it.
3. Turn on the power once again after one minute.

**Note:**

When the protection circuitry functions, the unit will not operate unless the power is first turned off and then on again.

## 6 Precaution of Laser Diode

### CAUTION :


This product utilizes a laser. Invisible laser radiation is emitted from the optical pick up lens when the unit is turned on.

Wavelength : 662nm(DVD)/785nm(VCD/CD)

Maximum output radiation power from pick up : 100μW/VDE

Laser radiation from pick up unit is safety level, but be sure the followings:

1. Do not disassemble the optical pick up unit, since radiation from exposed laser diode is dangerous.
2. Do not adjust the variable resistor on the pick up unit. It was already adjusted.
3. Do not look at the focus lens using optical instruments.
4. Recommend not to look at pick up lens for a long time.

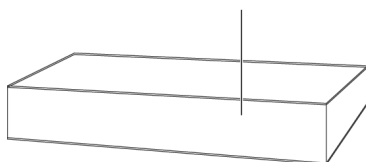

(Back of product)

<b>CAUTION</b>	- LASER RADIATION WHEN OPEN. DO NOT STARE INTO BEAM.	FDA 21 CFR / Class II
<b>CAUTION</b>	- VISIBLE AND INVISIBLE LASER RADIATION WHEN OPEN. AVOID EXPOSURE TO BEAM.	IEC60825-1 / Class 3b
<b>VARNING</b>	- SYNLIIG OCH OSYNLIIG LASERSTRÅLNING NÄR DENNA DEL ÄR ÖPPNAD. BETRÄKTA EJ STRÅLEN.	
<b>ADVARSEL</b>	- SYNLIIG OG USYNLIIG LASERSTRÅLING VED ÅBNING. UNDGÅ UDSÆTTELSE FOR STRÅLING.	
<b>ADVARSEL</b>	- SYNLIIG OG USYNLIIG LASERSTRÅLING NÄR DEKSEL ÄPNES. UNNGÅ EKSPONERING FÖR STRÅLEN.	
<b>VARO!</b>	- AVATTAESSA OLET ALTIINA NÄKYVÄÄ JA NÄKYMÄTÖN LASERSÄTEILYLLE. ÄLÄ KATSO SÄTEESEEN.	
<b>VORSICHT</b>	- SICHTBARE UND UNSICHTBARE LASERSTRAHLUNG. WENN ABDECKUNG GEÖFFNET, NICHT DEM STRAHL AUSSETZEN.	
<b>ATTENTION</b>	- RAYONNEMENT LASER VISIBLE ET INVISIBLE EN CAS D'OUVERTURE. EXPOSITION DANGEREUSE AU FAISCEAU.	
注意	- 打付時有可见及不可见激光辐射。避免激光照射。	
注意	- ここを開くと可能及び不可視レーザー光が出ます。ビームを見たり、触れたりしないで下さい。 RQLX50054	

(Inside of product)

### CAUTION:

THIS PRODUCT UTILIZES A LASER.

USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

## 7 About Lead Free Solder (PbF)

Distinction of PbF PCB: PCBs (manufactured) using lead free solder will have a PbF stamp on the PCB.

### Caution:



- Pb free solder has a higher melting point than standard solder; Typically the melting point is 50 - 70°F (30 - 40°C) higher. Please use a high temperature soldering iron. In case of the soldering iron with temperature control, please set it to 700 ± 20°F (370 ± 10°C).
- Pb free solder will tend to splash when heated too high (about 1100°F/ 600°C).

When soldering or unsoldering, please completely remove all of the solder on the pins or solder area, and be sure to heat the soldering points with the Pb free solder until it melts enough.







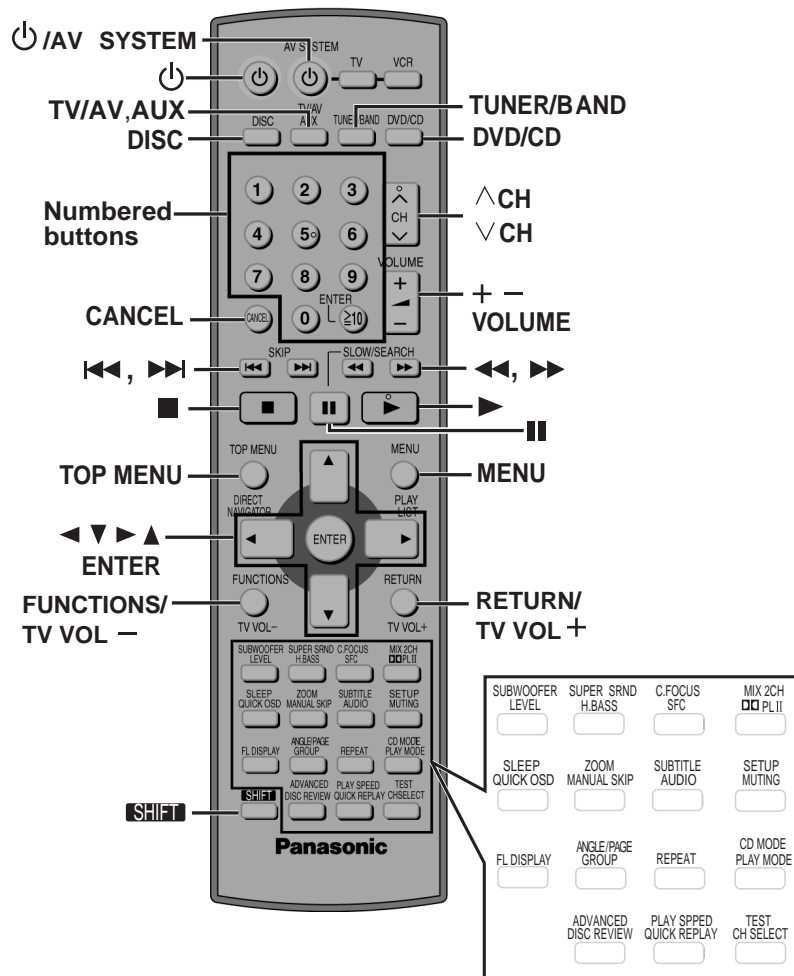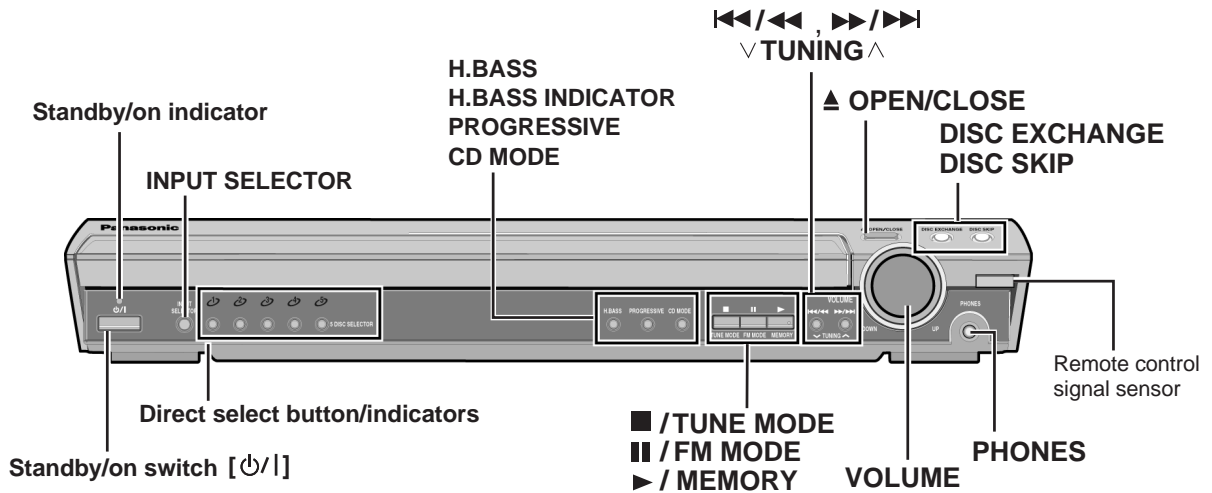


# 8 General Description

## 8.1. Operating instructions



## 8.2. Disc information

### ■ Discs that can be played

Disc	Logo	Indication in these operating instructions	Remarks
DVD-RAM		<b>RAM</b>	Recorded with devices using Version 1.1 of the Video Recording Format (a unified video recording standard), such as DVD video recorders, DVD video cameras, personal computers, etc.
		<b>JPEG</b>	Recorded using the DCF (Design rule for Camera File system) standard Version 1.0. ●To play JPEG files, select "Play as Data Disc" in Other Menu.
DVD-Audio		<b>DVD-A</b>	—
		<b>DVD-V</b>	Some DVD-Audio discs contain DVD-Video content. To play DVD-Video content, select "Play as DVD-Video" in Other Menu.
DVD-Video			—
DVD-R (DVD-Video) / DVD-RW (DVD-Video)		<b>DVD-V</b>	Discs recorded and finalized* on DVD video recorders or DVD video cameras.
+ R (Video) / + RW (Video)	—		Discs recorded and finalized* on DVD video recorders or DVD video cameras.
Video CD		<b>VCD</b>	—
SVCD			Conforming to IEC62107
CD		<b>CD</b>	This unit is compatible with HDCD, but does not support the Peak Extend function (a function which expands the dynamic range of high level signals). HDCD-encoded CD's sound better because they are encoded with 20 bits, as compared with 16 bits for all other CD's.
CD-R CD-RW	—	<b>WMA</b> <b>MP3</b> <b>JPEG</b> <b>CD</b> <b>VCD</b>	<ul style="list-style-type: none"> <li>● This unit can play CD-R/RW (audio recording disc) recorded with the formats on the left. Close the sessions or finalize* the disc after recording.</li> <li>● <b>HighMAT discs</b> WMA, MP3 or JPEG files only. To play without using the HighMAT function, select "Play as Data Disc" in Other Menu.</li> <li>● <b>WMA</b> This unit does not support Multiple Bit Rate (MBR: a file that contains the same content encoded at several different bit rates).</li> </ul>

\* A process that allows play on compatible equipment.

● It may not be possible to play the above discs in all cases due to the type of disc or condition of the recording.

### ■ Discs that cannot be played

DVD-ROM, CD-ROM, CDV, CD-G, SACD, DivX Video Discs and Photo CD, DVD-RAM that cannot be removed from their cartridge, 2.6-GB and 5.2-GB DVD-RAM, and "Chaoji VCD" available on the market including CVD, DVCD and SVCD that do not conform to IEC62107.

### ■ Audio format of DVD's

This unit automatically recognizes and decodes discs with these symbols.



### ■ To prevent damage

Do not:

- load more than one disc per tray.
- touch the drawer or the carousel while they are in motion.
- rotate the carousel by hand.
- close the drawer by hand.

### ■ To clean discs

Wipe with a damp cloth and then wipe dry.



### ■ Video systems

- This unit can play PAL and NTSC, but your television must match the system used on the disc.
- PAL discs cannot be correctly viewed on an NTSC television.
- This unit can convert NTSC signals to PAL 60 for viewing on a PAL television.

### ■ Disc handling precautions

- Do not attach labels or stickers to discs (This may cause disc warping, rendering it unusable).
- Do not write on the label side with a ball-point pen or other writing instrument.
- Do not use record cleaning sprays, benzene, thinner, static electricity prevention liquids or any other solvent.
- Do not use scratch-proof protectors or covers.
- Do not use the following discs:
  - Discs with exposed adhesive from removed stickers or labels (rented discs, etc).
  - Discs that are badly warped or cracked.
  - Irregularly shaped discs, such as heart shapes.

### Tips for making WMA/MP3 and JPEG discs (For CD-R, CD-RW)

- Discs must conform to ISO9660 level 1 or 2 (except for extended formats).
- This unit supports multi-session but if there are a lot of sessions it takes more time for play to start. Keep the number of sessions to a minimum to avoid this.
- When there are more than 8 groups, the eighth group onwards will be displayed on one vertical line in the menu screen.
- There may be differences in the display order on the menu screen and computer screen.
- This unit cannot play files recorded using packet write.

#### Naming folders and files

(Files are treated as content and folders are treated as groups on this unit.)


At the time of recording, prefix folder and file names with 3-digit numbers in the order you want to play them (this may not work at times).

Files must have the extension:

".WMA" or ".wma"

".MP3" or ".mp3"

".JPG", ".jpg", ".JPEG" or ".jpeg"

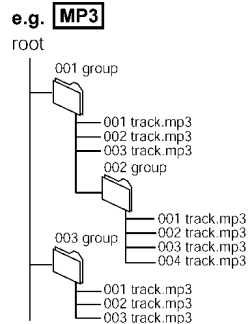

#### WMA

- You cannot play WMA files that are copy protected.
- This unit does not support Multiple Bit Rate (MBR).

#### MP3

This unit does not support ID3 tags.

Compatible sampling rates: 8, 11.02, 12, 16, 22.05, 24, 32, 44.1 and 48 kHz.

#### JPEG

- To view JPEG files on this unit:
  - Take them on a digital camera that meets the DCF Standard (Design rule for Camera File system) Version 1.0. Some digital cameras have functions that are not supported by the DCF Standard Version 1.0 like automatic picture rotation which may render a picture un-viewable.
  - Do not alter the files in any way or save them under a different name.
- This unit cannot display moving pictures, MOTION JPEG and other such formats, still pictures other than JPEG (e.g. TIFF) or play pictures with attached audio.

## 8.3. About HighMAT

### 8.3.1. What's HighMAT?

Consumers worldwide are using PCs to create their own collections of music, photos and even video by burning them onto CDs. But how these collections can be experienced across different devices can be confusing to navigate, time consuming to access for a DVD player, and be incomplete in terms of music information available to the customer.

HighMAT offers a solution to this growing consumer problem. HighMAT dramatically improves the digital media experience on consumer electronic devices by delivering a simple, standardized approach that allows consumers who have created personal collections of digital music, photography and video on their PC to:

>> Create a HighMAT CD or DVD which can be easily played back on consumer electronics devices such as CD and DVD players, and car stereos.

>> Move digital media files (using recordable media such as CD-R and CD-RW) between the PC and various playback devices such as CD and DVD players.

A new standard for creating personal media on consumer electronic devices, HighMAT enable easier and more seamless interoperability between Windows PCs and devices designed for your living room, or the car.

**HIGH MAT** HighMAT is a new technology which has been co-developed and is supported by Microsoft Corporation and Matsushita Electric Industrial Co., Ltd. (Panasonic). HighMAT stands for High-Performance Media Access Technology. Look for the HighMAT logo on electronics devices - there are three levels of playback support for consumer electronics devices. [▶ HighMAT Official Website](#)



**HighMAT Audio**  
Products which display this logo are able to play back HighMAT audio content only (WMA, MP3)



**HighMAT Audio and Image**  
 Products which display this logo are able to play back HighMAT audio content (WMA, MP3) and still pictures (JPEG) only



**HighMAT Audio, Image and Video**  
 Products which display this logo are able to play back all three types of HighMAT content: Audio (WMA, MP3), still pictures (JPEG) and video (WMV, MPEG-4\*)  
 \*MPEG-4: support is optional

### 8.3.2. Why take advantage of HighMAT?



A Problem Defined: Today, when consumers create their own digital audio, video or photo collections on CD-R or other physical formats, there are numerous, inconsistent ways that devices read the data. For the consumer, the playback experience can be confusing:

- Many consumer electronics devices do not support playlists or advanced playback options such as the ability to access content by date or genre.
- The user interface for accessing the media and any associated information (including playlists, folders, music metadata and more) may vary between different devices.
- Large collections of music, videos or photos may take several minutes for a CD or DVD player to read.
- Discs may be unplayable because the compressed media format is not supported by the playback device or the disc layout is incompatible.

A Solution Created: HighMAT delivers a better digital media access experience by creating a standard approach for PCs to structure digital media on various physical formats and for playback devices to read the data.


### 8.3.3. Benefits of HighMAT?


- 1 Creating a HighMAT CD makes it easier to navigate different types of media you want to burn onto a CD ( Photos, Music ).

Conventional	HighMAT
<p>Even though DVD player is CD-R/RW compatible, the inconsistent ways that various DVD players can read the music or photos files often leads to a confusing and inconsistent playback experience.</p>	<p>HighMAT compatible products play content back with consistent interface. This includes products which are JPEG compatible products without HighMAT support.</p>
	

2


**Eliminates compatibility issues and delivers better more consistent access to more music information like artist, song name, genre and photo information (metadata) as well as provide faster access to large amounts of music and photo files burned on CDs.**

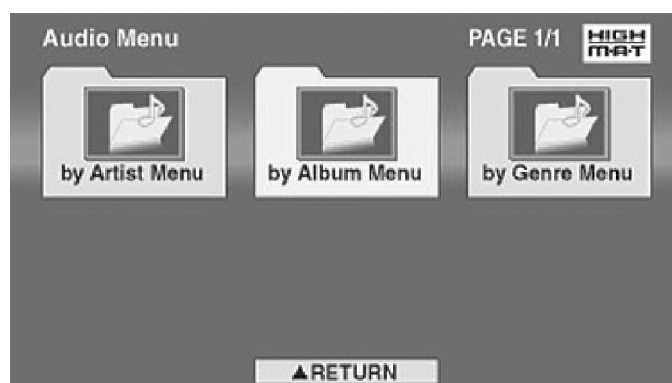

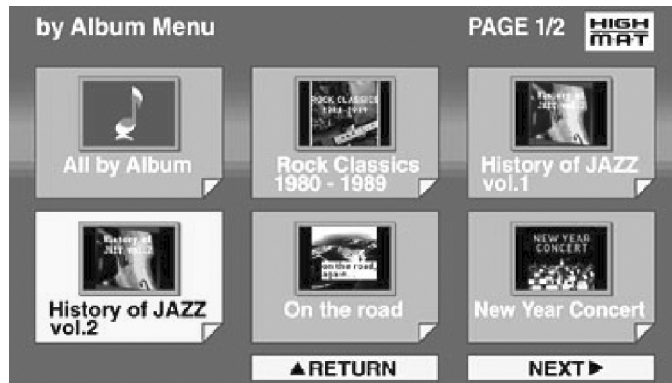

Easy navigation to access disc contents

### 3 HighMAT CDs can also work on other players.

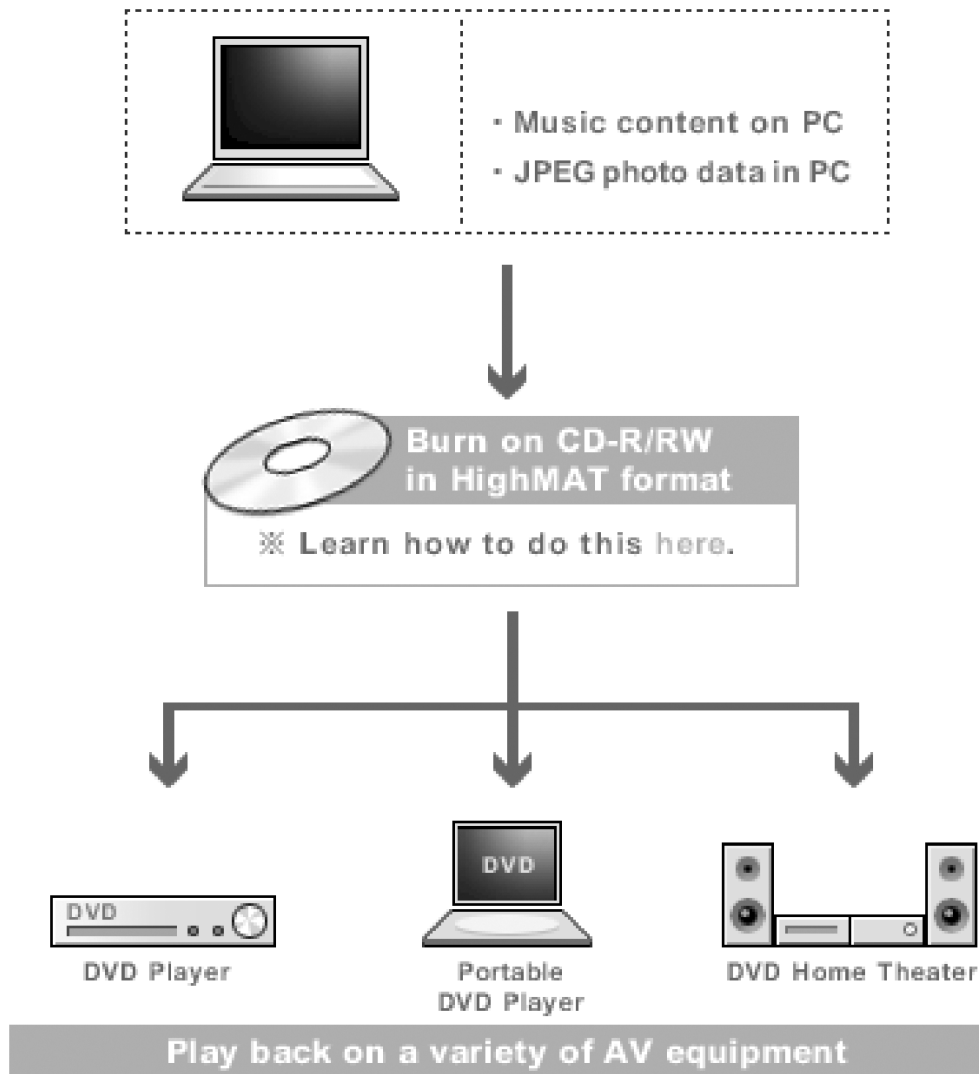

HighMAT is now available for CD Burning and in Leading DVD Players


HighMAT is a new technology that is now available in leading software and consumer electronic devices to dramatically improve the digital media experience when you create homemade CDs

HighMAT delivers a simple, standardized way for PC software and consumer electronics devices to talk to each other and work better together.


When you create your homemade CDs with software that supports HighMAT CD burning, and then play them back on a DVD player that supports HighMAT, you get better, easier navigation. You get folders you can access with a single click of your DVD player's remote control. You can view important information about your music like full song names, artist titles, album names and genre. And you can get faster startup on your home entertainment device.

To enjoy the benefits of HighMAT, all you need is software that supports HighMAT for CD burning of music or photos, as well as a home entertainment device like a DVD player that supports HighMAT for playback. Always look for the HighMAT logo on your software or home entertainment device to ensure it supports the HighMAT experience.

# 9 Accessories

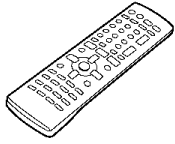


Remote control

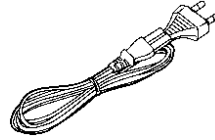


AC cord



AM loop antenna




System cable




FM indoor antenna



Speaker cable



Video Cable

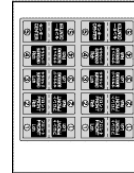

Speaker label




## 10 Handling Precautions for Optical Pickup Unit

The laser diode in the optical pickup unit may break down due to static electricity of clothes or human body. Special care must be taken avoid caution to electrostatic breakdown when servicing and handling the laser diode.

### 10.1. Cautions to Be Taken in Handling the Optical Pickup Unit

The laser diode in the optical pickup unit may be damaged due to electrostatic discharge generating from clothes or human body. Special care must be taken avoid caution to electrostatic discharge damage when servicing the laser diode.

1. Do not give a considerable shock to the optical pickup unit as it has an extremely high-precise structure.
2. To prevent the laser diode from the electrostatic discharge damage, the flexible cable of the optical pickup unit removed should be short-circuited with a short pin or a clip.
3. The flexible cable may be cut off if an excessive force is applied to it. Use caution when handling the flexible cable.
4. The antistatic FPC is connected to the new optical pickup unit. After replacing the optical pickup unit and connecting the flexible cable, cut off the antistatic FPC.

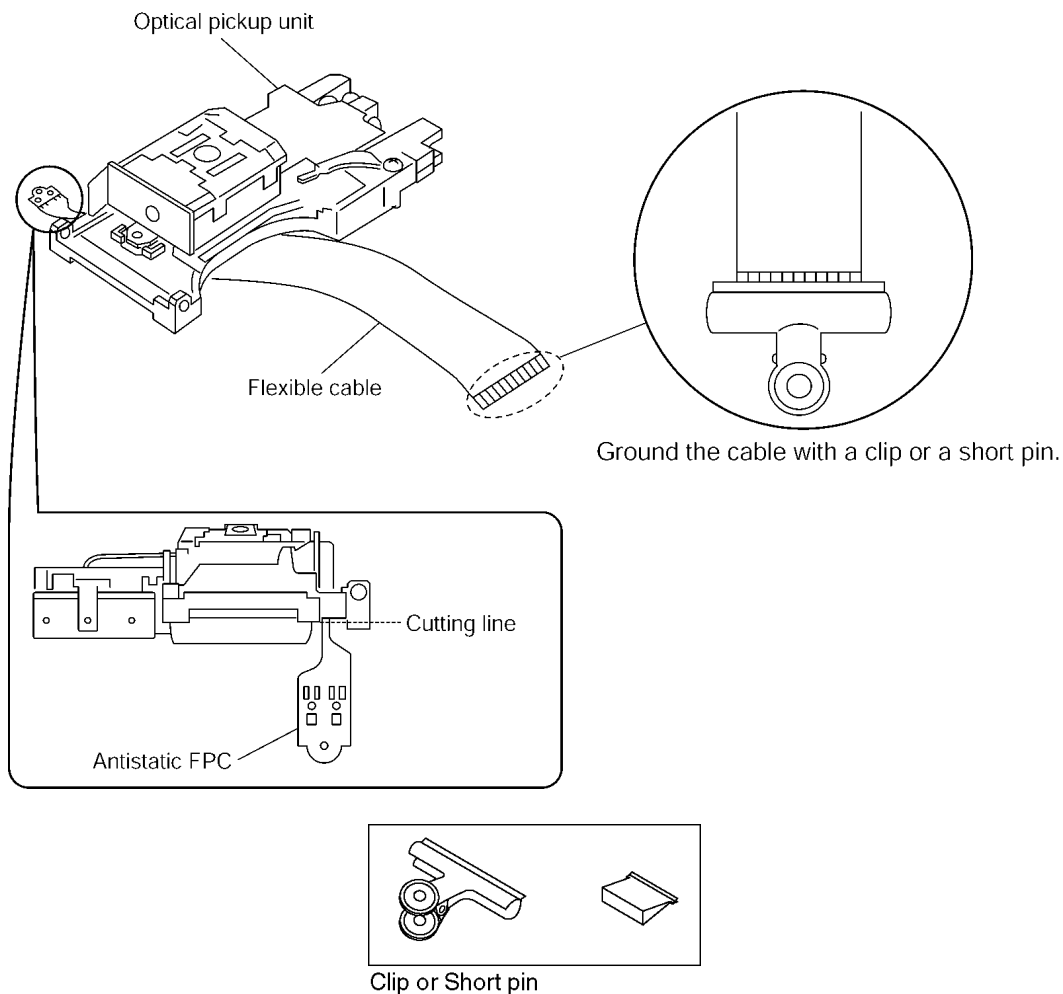

### 10.2. Grounding for electrostatic breakdown prevention



Some devices such as the DVD player use the optical pickup (laser diode) and the optical pickup will be damaged by static electricity in the working environment. Proceed servicing works under the working environment where grounding works is completed.

#### 10.2.1. Worktable grounding

1. Put a conductive material (sheet) or iron sheet on the area where the optical pickup is placed, and ground the sheet.

#### 10.2.2. Human body grounding

1. Use the anti-static wrist strap to discharge the static electricity form your body.

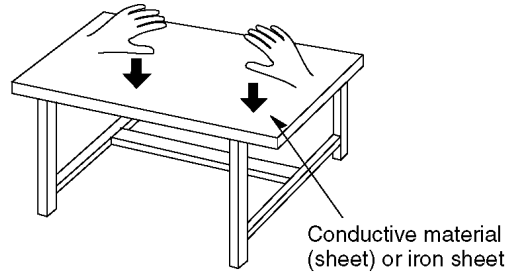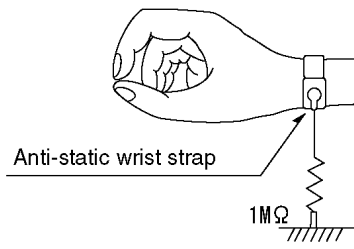

# 11 Disassembly and Main Component Replacement Procedures

## “ATTENTION SERVICER”


Some chassis components may have sharp edges.

Be careful when disassembling and servicing.


1. **This section describes procedures for checking the operation of the major printed circuit boards and replacing the main components.**
2. **For assembly after operation checks or replacement, reverse the respective procedures. Special reassembly procedures are described only when required.**
3. **Select items from the following index when checks or replacement are required.**

- Disassembling the Top Cabinet
- Disassembling the Front Panel
- Disassembling the Tray Assembly
- Disassembling the Mechanism Base Block
- Disassembling the Main P.C.B
- Removal of the Tray Base Guide (L) and Tray Base Guide (R)
- Removal of the Rotary Tray
- Removal of the Open Lock Gear
- Removal of the Close Lock Gear
- Removal of the Tray Motor P.C.B.and Sensor P.C.B.
- Removal of the Traverse Unit
- Removal of the Pulley Gear
- Removal of the Loading Motor P.C.B.
- Removal of the Drive Gear (A) & (B)
- Disassembly the Fixed Plate, Magnet and Clamper
- Removal of the Cam Gear & Support Piece
- Removal of the Slide Plate (L) & (R) and Changer Lever
- Assembly of Tray Base

### 11.1. Disassembly Procedure

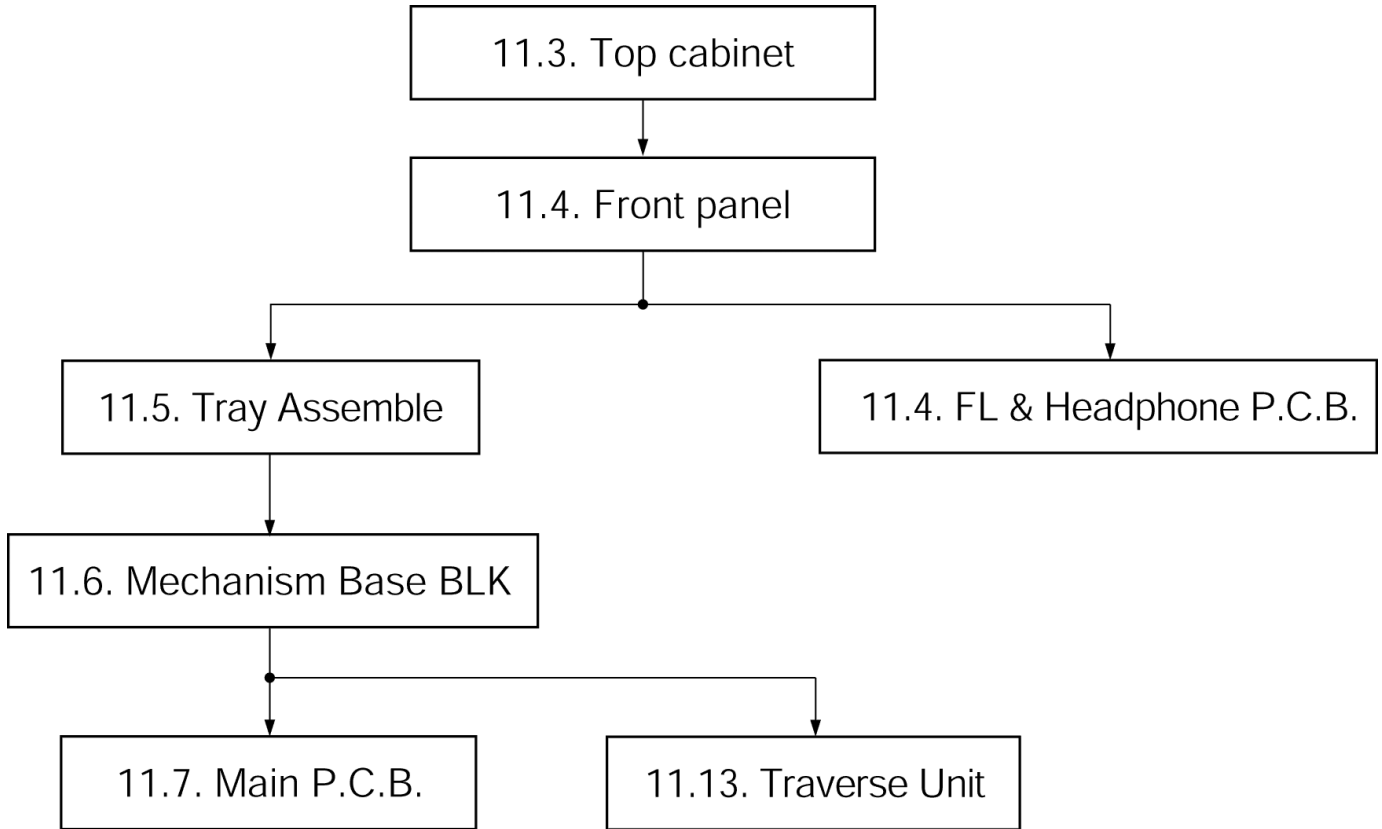



### 11.2. Main Components and P.C.B. Locations

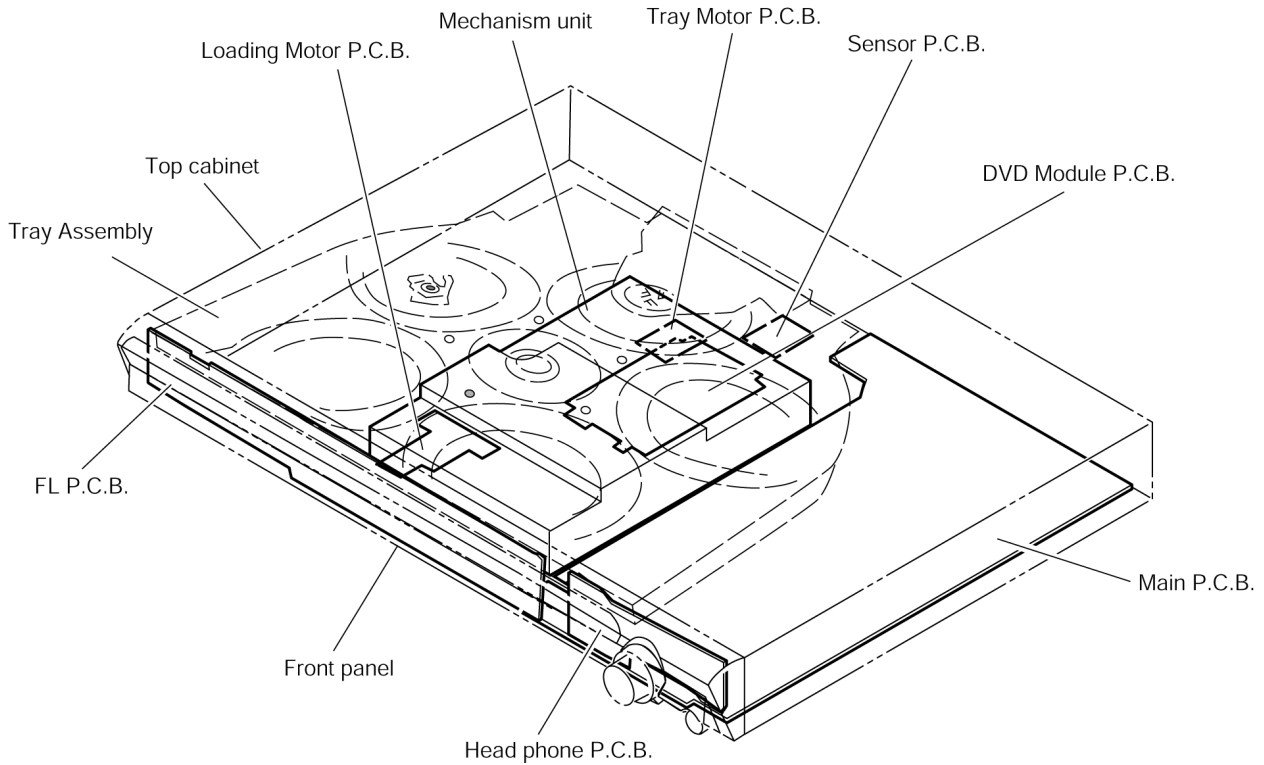

## 11.3. Disassembling the Top Cabinet

**Step 1** Remove 7 screws.

**Step 2** Remove the top cabinet in the direction of arrow.

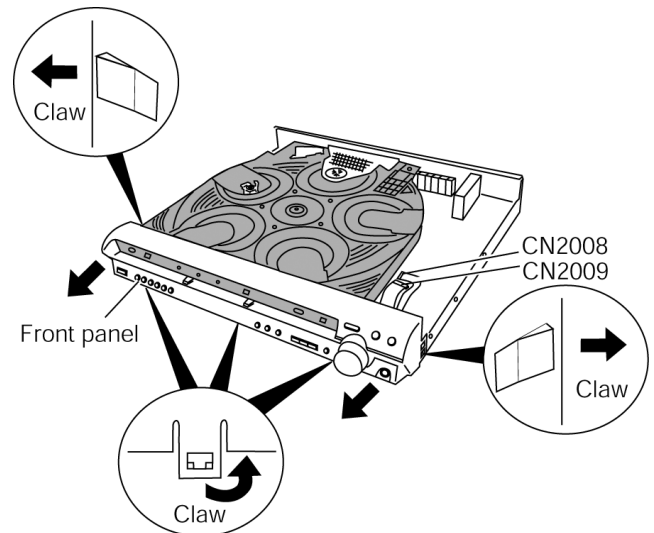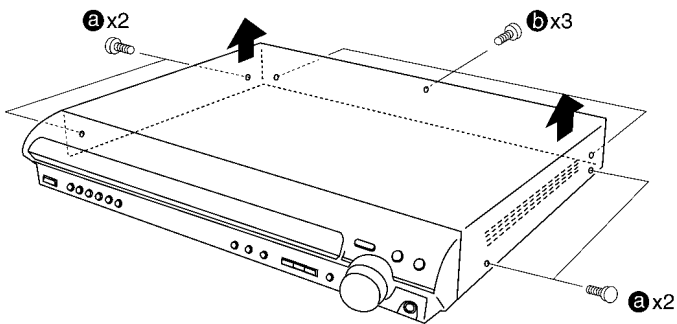


## 11.4. Disassembling the Front Panel

· Follow the (Step 1) - (Step 2) of Item 11.3.

**Step 1** Keep the close lock gear pressed in clockwise, move the tray assembly in the direction of the arrow.

**Step 2** Unlock the claws at the bottom of the top tray.


**Step 3** Remove the top tray in the direction of arrow.

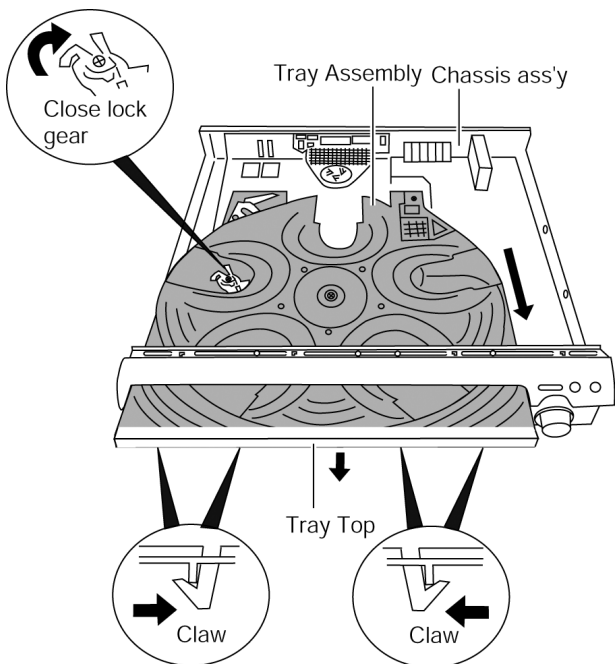

**Step 6** Remove the front panel in the direction of arrow.

**Step 7** Remove panel angle.

**Step 8** Remove 8 screws.

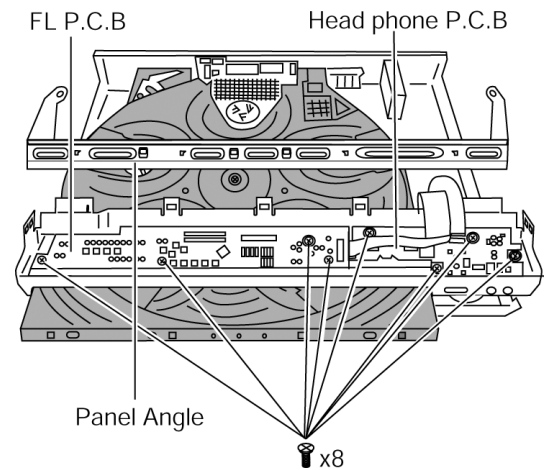

**Step 4** Pull out the FFC from connectors (CN2008 & CN2009).


**Step 5** Unlock the claws of the front panel in the directions.

## 11.5. Disassembling the Tray Assembly

- Follow the (Step 1) - (Step 2) of Item 11.3.
- Follow the (Step 1) - (Step 6) of Item 11.4.

**Step 1** Pull out the FFC from connector (CN2010).


**Step 2** Hold gear, push and release the 2 claws in the direction of arrow.

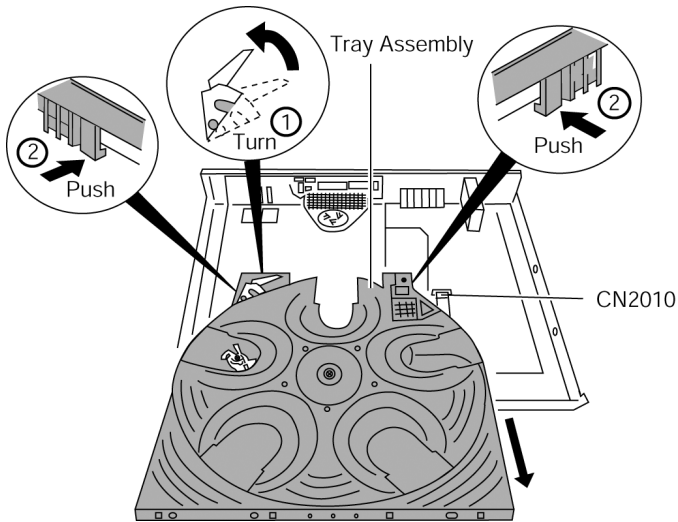

## 11.6. Disassembling the Mechanism Base Block

- Follow the (Step 1) - (Step 2) of Item 11.3.
- Follow the (Step 1) - (Step 6) of Item 11.4.
- Follow the (Step 1) - (Step 2) of Item 11.5.

**Step 1** Remove 4 screws and unlock the lock.

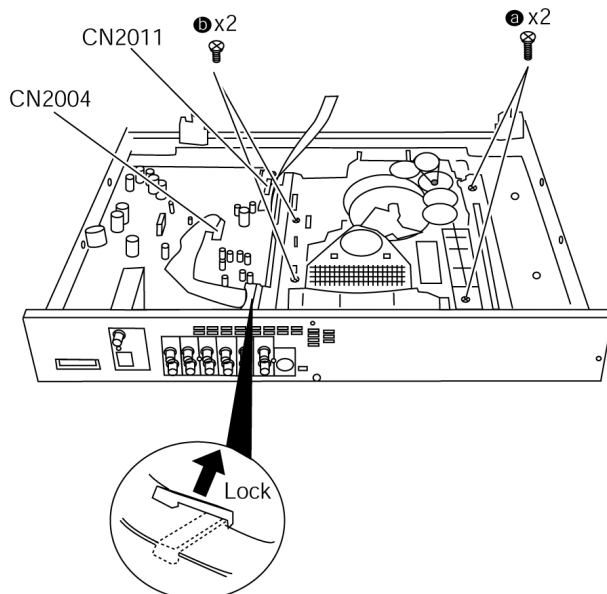

**Step 2** Detach FFC cable at connectors (CN2004, CN2011).


**Step 3** Remove mechanism base block.

## 11.7. Disassembling the Main P.C.B

- Follow Item 11.4.


**Step 1** Unlock the claw and remove 9 screws.

**Step 2** Remove the main P.C.B.

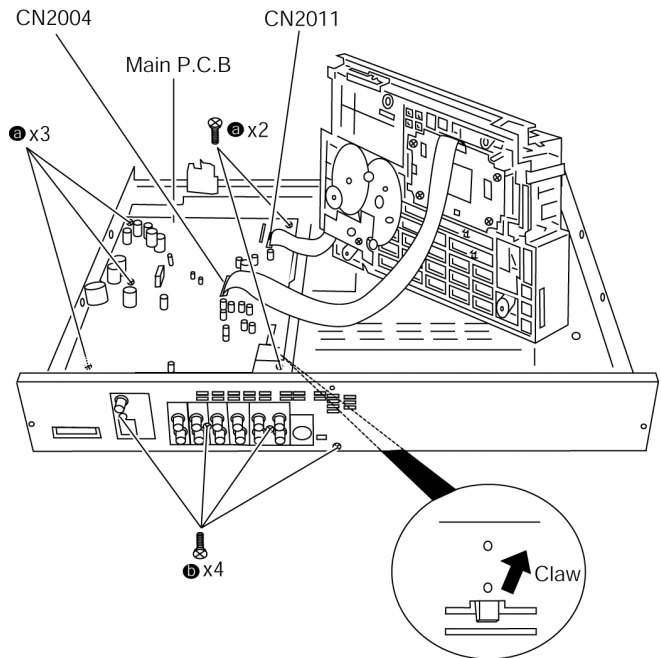

## 11.8. Removal of the Tray Base Guide (L) and Tray Base Guide (R)

- Follow the (Step 1) - (Step 2) of Item 11.3.
- Follow the (Step 1) - (Step 6) of Item 11.4.
- Follow the (Step 1) - (Step 2) of Item 11.5.

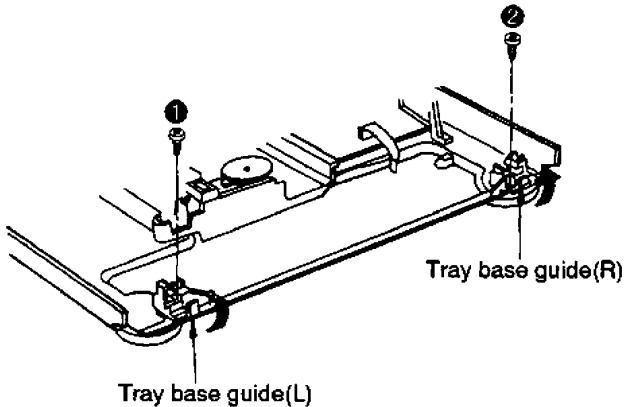


**Step 1** Remove the 2 screws.

**Step 2** Remove the tray base guide (L) and tray guide (R) in the direction of arrow.

## 11.9. Removal of the Rotary Tray

- Follow the (Step 1) - (Step 2) of Item 11.3.
- Follow the (Step 1) - (Step 6) of Item 11.4.
- Follow the (Step 1) - (Step 2) of Item 11.5.

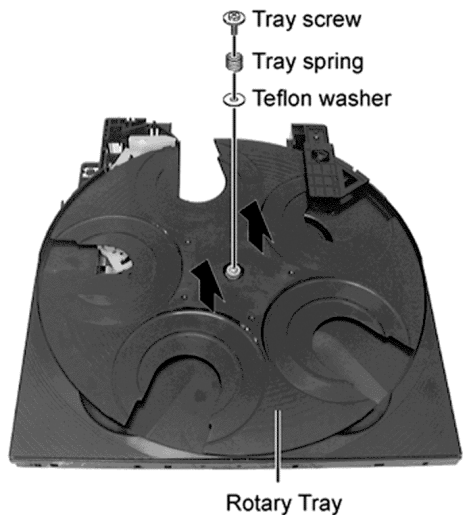


**Step 1** Remove tray screw, tray spring and teflon washer.


**Step 2** Remove rotary tray.

## 11.10. Removal of the Open Lock Gear

- Follow the (Step 1) - (Step 2) of Item 11.3.
- Follow the (Step 1) - (Step 6) of Item 11.4.
- Follow the (Step 1) - (Step 2) of Item 11.5.

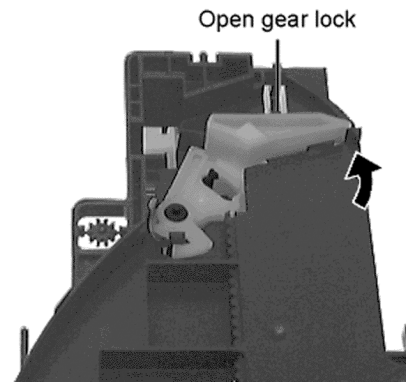

**Step 1** Rotate open lock gear in the direction of arrow. (Anti-clockwise)

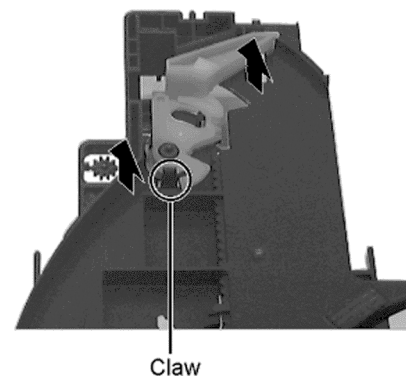


**Step 2** Release claw of open lock gear, remove open lock gear in the direction of arrow.


## 11.11. Removal of the Close Lock Gear

- Follow the (Step 1) - (Step 2) of Item 11.3.
- Follow the (Step 1) - (Step 6) of Item 11.4.
- Follow the (Step 1) - (Step 2) of Item 11.5.

**Step 1** Remove 1 screw.

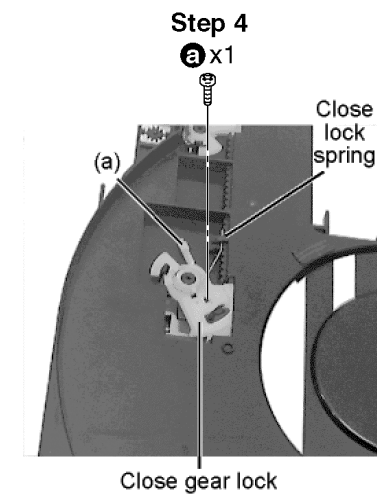

**Step 2** Hook close lock spring to claw (a).

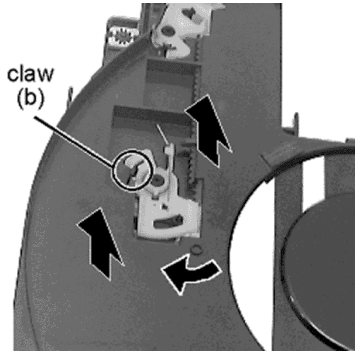


**Step 3** Rotate close lock gear to direction of arrow, press claw (b) and pull out close lock gear.

## 11.12. Removal of the Tray Motor P.C.B. and Sensor P.C.B.

- Follow the (Step 1) - (Step 2) of Item 11.3.
- Follow the (Step 1) - (Step 6) of Item 11.4.
- Follow the (Step 1) - (Step 2) of Item 11.5.

**Step 1** Remove 2 screws.

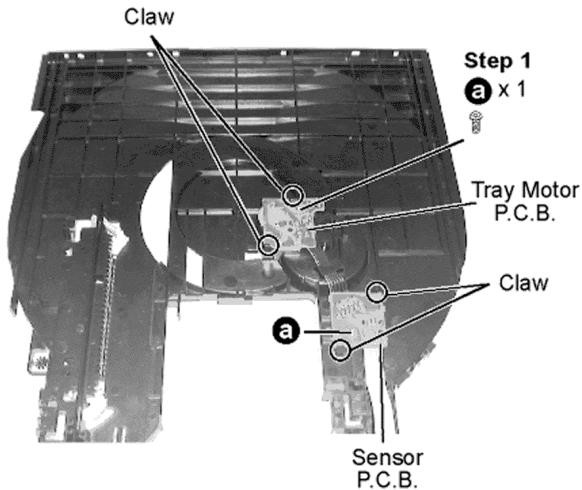


**Step 2** Release 4 claws at Tray Motor P.C.B. and Sensor P.C.B.

## 11.13. Removal of the Traverse Unit


- Follow the (Step 1) - (Step 2) of Item 11.3.
- Follow the (Step 1) - (Step 6) of Item 11.4.
- Follow the (Step 1) - (Step 2) of Item 11.5.
- Follow the (Step 1) - (Step 3) of Item 11.6.

**Step 1** Rotate cam gear anti-clockwise. (Align at position (A) as marking on gear with arrow)

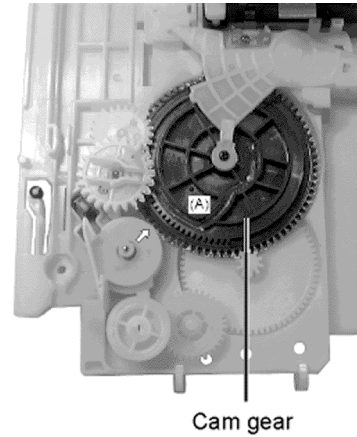

Cam gear

**Step 2** Flip the base mecha unit in vertical position.

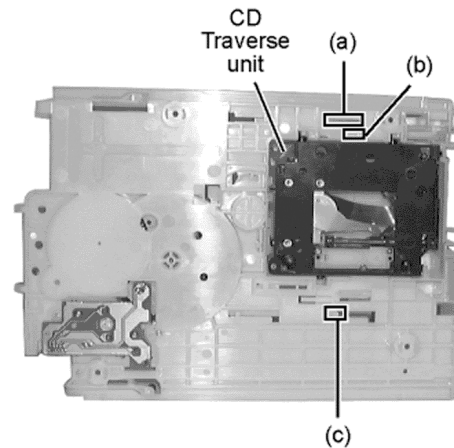


**Step 3** Press upward (a), push backward (b) and press to left (c) to release CD traverse unit.

## 11.14. Removal of the Pulley Gear


- Follow the (Step 1) - (Step 2) of Item 11.3.
- Follow the (Step 1) - (Step 6) of Item 11.4.
- Follow the (Step 1) - (Step 2) of Item 11.5.
- Follow the (Step 1) - (Step 3) of Item 11.6.

**Step 1** Remove of the loading belt.

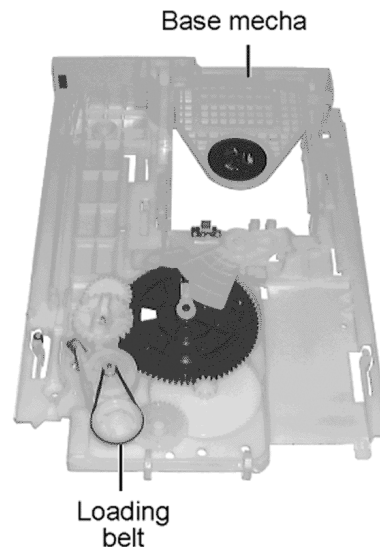

**Step 2** Flip the base mecha.



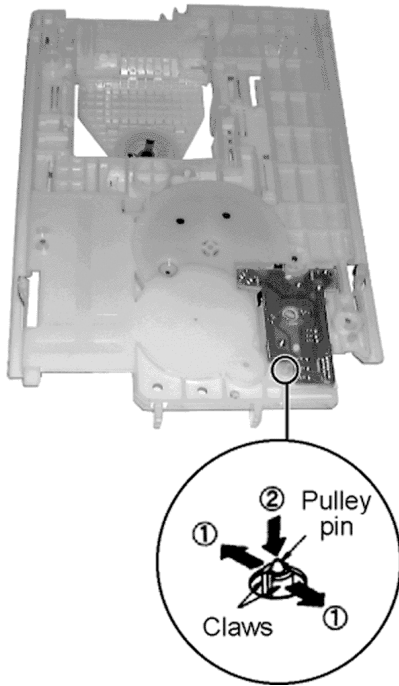


**Step 3** Release the 2 claws in the direction of arrow (1), and then push the pulley pin in the direction of arrow (2).

### 11.15. Removal of the Loading Motor P.C.B.

- Follow the (Step 1) - (Step 2) of Item 11.3.
- Follow the (Step 1) - (Step 6) of Item 11.4.
- Follow the (Step 1) - (Step 2) of Item 11.5.
- Follow the (Step 1) - (Step 3) of Item 11.6.

**Step 1** Remove 2 screws.

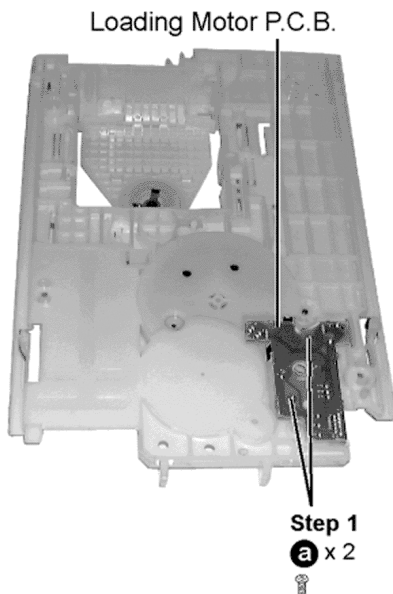


**Step 2** Remove Loading Motor P.C.B.

### 11.16. Removal of the Drive Gear (A) & (B)


- Follow the (Step 1) - (Step 2) of Item 11.3.
- Follow the (Step 1) - (Step 6) of Item 11.4.
- Follow the (Step 1) - (Step 2) of Item 11.5.

· Follow the (Step 1) - (Step 3) of Item 11.6.

**Step 1** Release the claw in the direction of arrow (1), and then push drive gear shaft up.

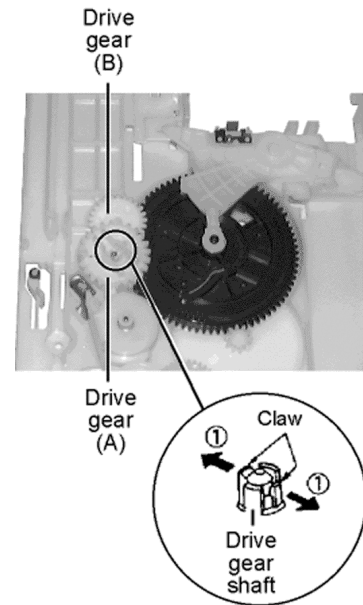


**Step 2** Remove Drive Gear (A) and Drive Gear (B).

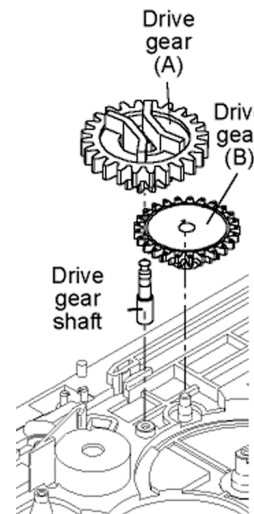

### 11.17. Disassembling the Fixed Plate, Magnet and Clamper

- Follow the (Step 1) - (Step 2) of Item 11.3.
- Follow the (Step 1) - (Step 6) of Item 11.4.
- Follow the (Step 1) - (Step 2) of Item 11.5.
- Follow the (Step 1) - (Step 3) of Item 11.6.


**Step 1** Release 3 claws in the direction of arrow.

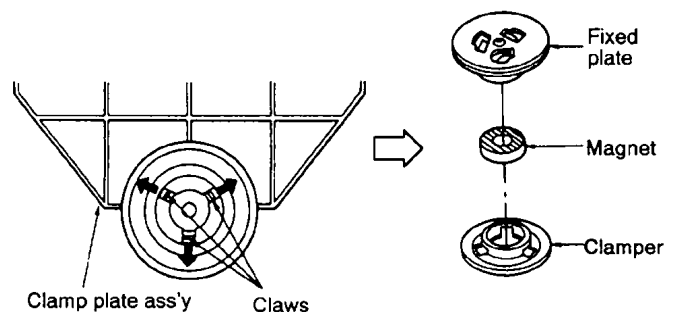



## 11.18. Removal of the Cam Gear & Support Piece

- Follow the (Step 1) - (Step 2) of Item 11.3.
- Follow the (Step 1) - (Step 6) of Item 11.4.
- Follow the (Step 1) - (Step 2) of Item 11.5.
- Follow the (Step 1) - (Step 3) of Item 11.6.


**Step 1** Rotate (A) in cam gear anti-clockwise.

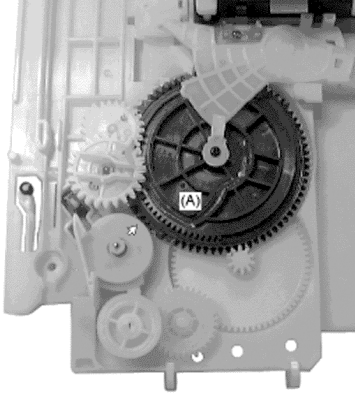

**Step 2** Remove 1 screw and support piece.

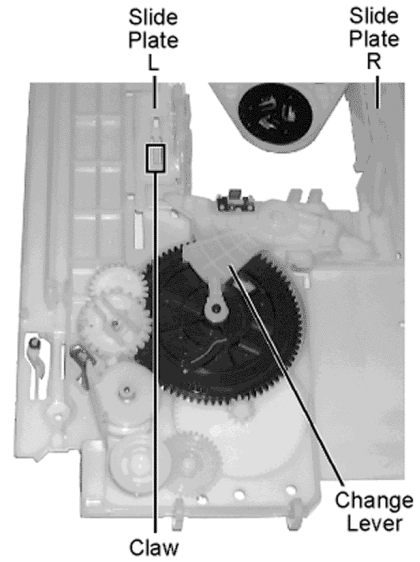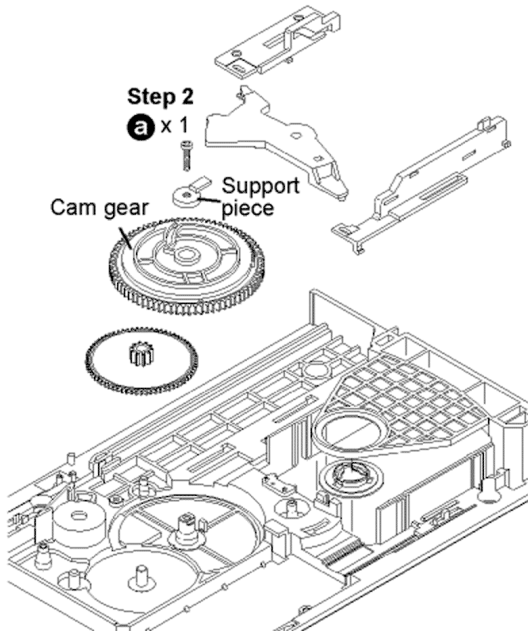

**Step 2** Remove slide plate (L) & (R) and change lever as arrow shown.

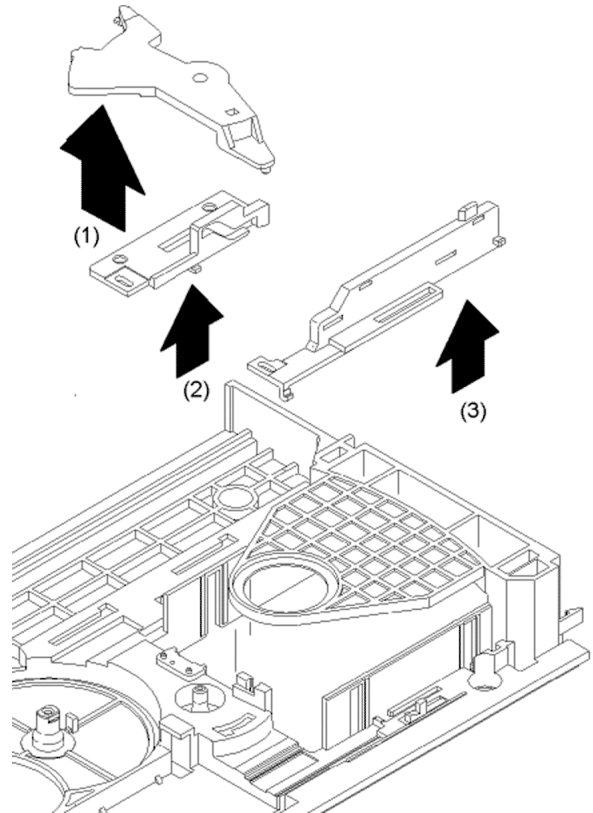

## 11.19. Removal of the Slide Plate (L) & (R) and Change Lever


- Follow the (Step 1) - (Step 2) of Item 11.3.
- Follow the (Step 1) - (Step 6) of Item 11.4.
- Follow the (Step 1) - (Step 2) of Item 11.5.
- Follow the (Step 1) - (Step 3) of Item 11.6.

**Step 1** Press the claw and push the Slide Plate (L) up.


## 11.20. Assembly of Tray Base

- Follow the (Step 1) - (Step 2) of Item 11.3.
- Follow the (Step 1) - (Step 6) of Item 11.4.
- Follow the (Step 1) - (Step 2) of Item 11.5.

**Step 1** Rotate cam gear anti-clockwise. Align at position (C) as marking on gear with arrow.

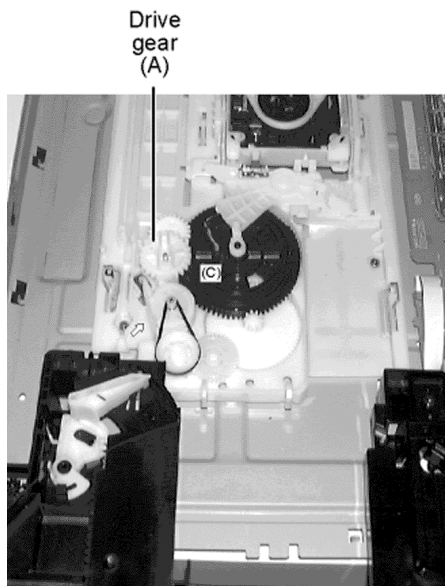

**Step 2** Make sure drive gear (A) at vertical position.

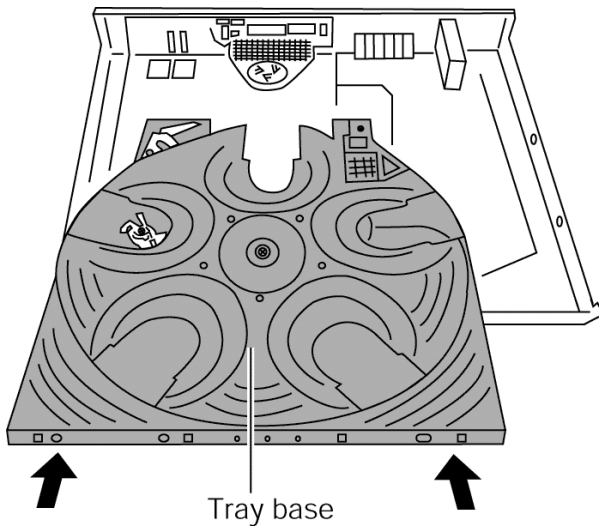

**Step 3** Push tray base to the direction of arrow shown.

## 12 Service Position


Prepare service tools before process service position.

Service Tools	
Loading Motor P.C.B - Main P.C.B	REEX0465 (11 pin)

### 12.1. Checking & Repair Tray Motor P.C.B and Sensor P.C.B

- Follow the (Step 1) - (Step 2) of Item 11.3.
- Follow the (Step 1) - (Step 6) of Item 11.4.
- Follow the (Step 1) - (Step 2) of Item 11.5.

**Step 1** Upset tray assembly.

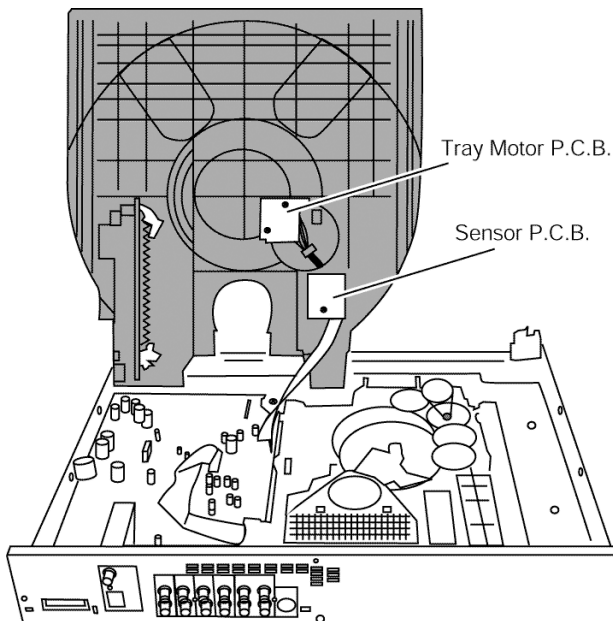

### 12.2. Checking & Repair Main P.C.B

- Follow the (Step 1) - (Step 2) of Item 11.3.
- Follow the (Step 1) - (Step 8) of Item 11.4.
- Follow the (Step 1) - (Step 2) of Item 11.5.
- Follow the (Step 1) - (Step 3) of Item 11.6.
- Follow the (Step 1) - (Step 2) of Item 11.7.

**Step 1** Change cable (REZ1483) to extended cable (REEX0465).

**Step 2** Connect all the cables.


**Step 3** Position mechanism base block and tray assembly in horizontally.

**Step 4** Connect the system cable and switch on the power.

**Step 5** Insert CD into tray assembly.

**Step 6** Press CD mode button to lock the CD.


**Step 7** Turn over mechanism base block, tray assembly and Main P.C.B and position 3 of it in horizontally.

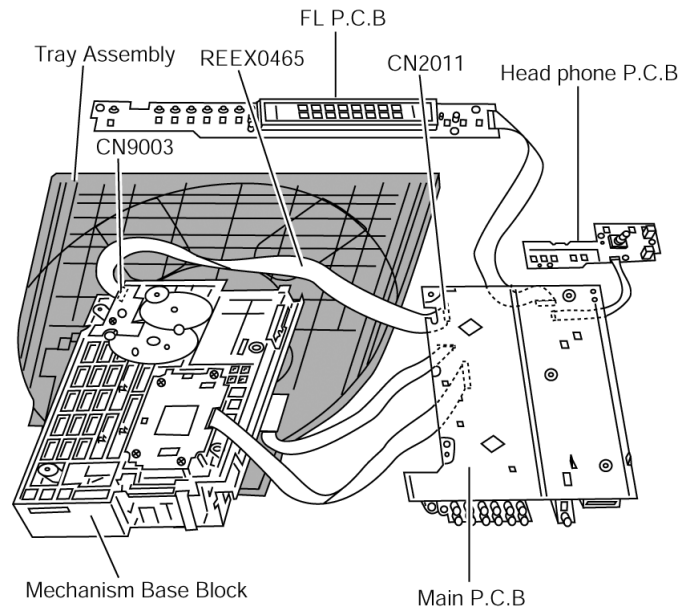

### 12.3. Checking & Repair DVD Module P.C.B

- Follow the Item 12.2.

**Step 1** Remove 4 screws of DVD module P.C.B.

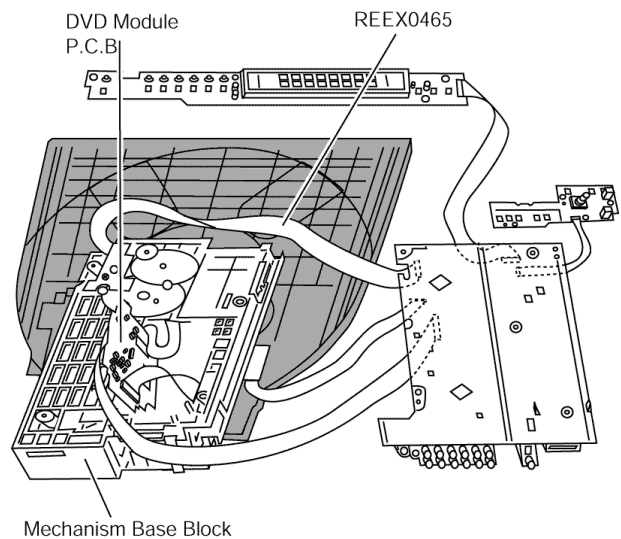


# 13 Optical Pick-up Self-Diagnosis and Replacement Procedure

## 13.1. Optical Pickup Breakdown Diagnosis

The optical pickup self-diagnosis function and tilt adjustment check function have been included in this unit. When repairing, use the following procedure for effective Self-diagnosis and tilt adjustment. Be sure to use the self-diagnosis function before replacing the optical pickup when "NO DISC" is displayed. As a guideline, you should replace the optical pickup when the value of the laser drive current is more than 55.

### Note:

Press the power button to turn on the power, and check the value within three minutes before the unit warms up. (Otherwise, the result will be incorrect.)

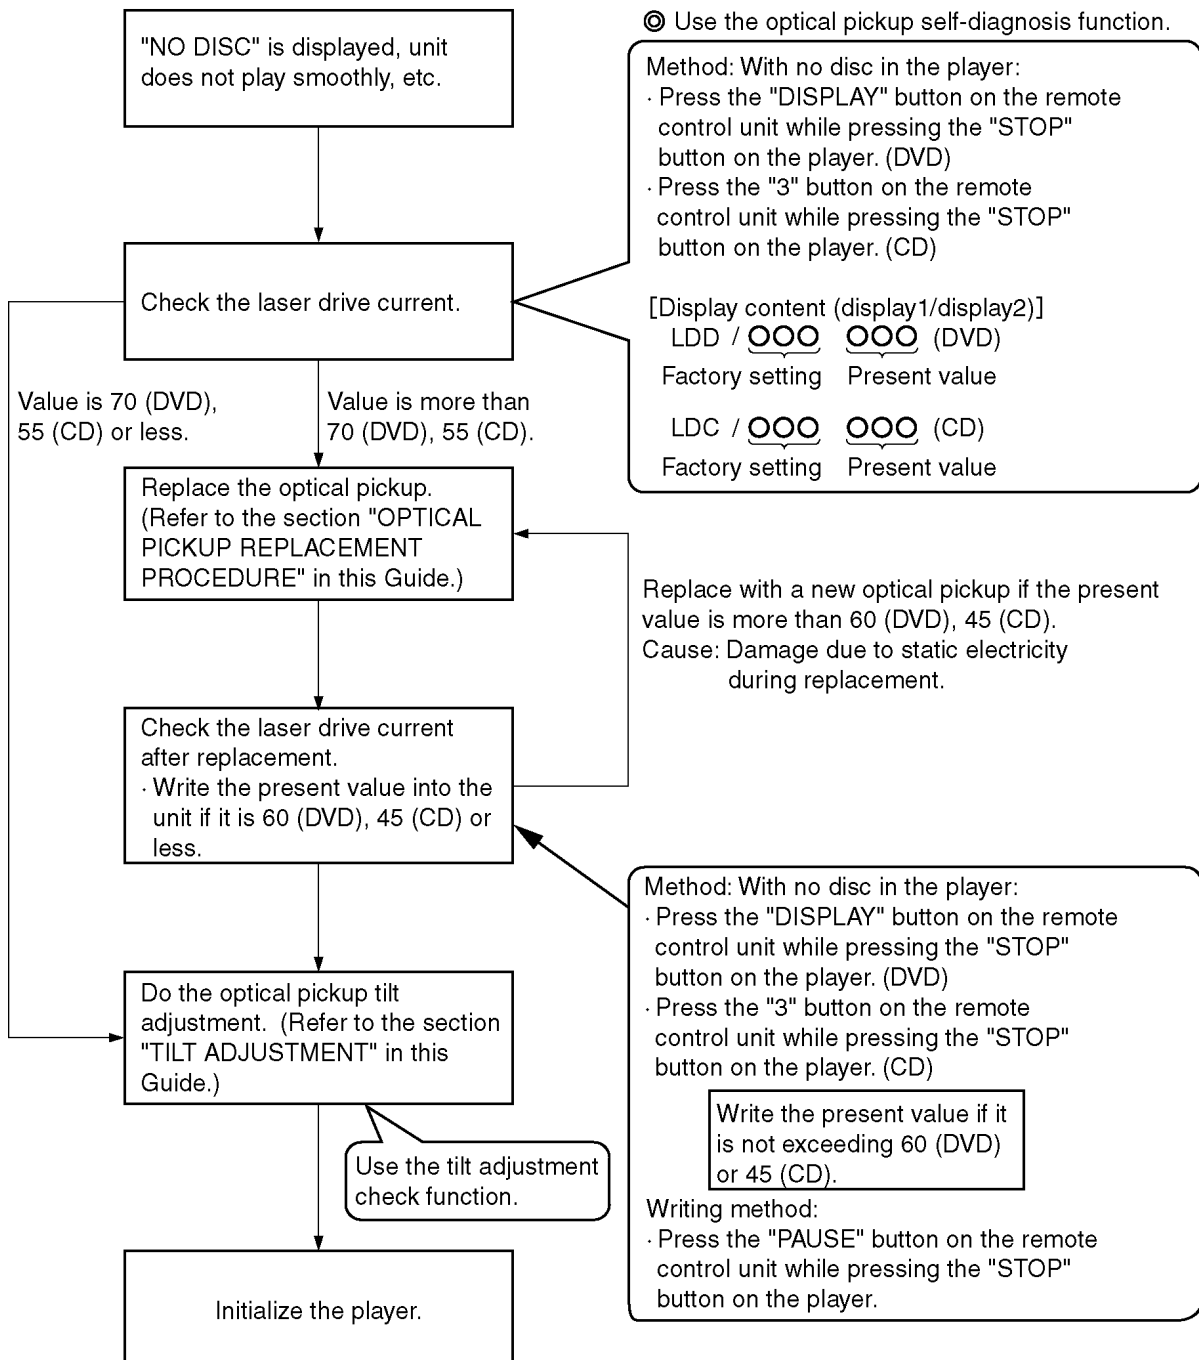

## 13.2. Service Mode Table 1

The service modes can be activated by pressing various button combination on the player and remote control unit.

Player buttons	Remote control unit buttons	Application	Note
STOP	0	Error code display	(Refer to the item, "13.3. DVD Self Diagnostic Function-Error Code").
	5	Tilt adjustment	Refer to the item "16.4. Optical adjustment".
	6	Area number and broadcasting system check	
	7	Built-in program version check	
	DISPLAY	DVD laser drive current check	Refer to the item "13.1. Optical Pickup Breakdown Diagnosis".
	3	CD laser drive current check	
	PAUSE	Writing of laser drive current value after replacement of optical pickup (Do use this function only when optical pickup is replaced.)	
	≧10	Initialization of the player (factory setting is restored.) Used after replacement of micro-computer and its peripherals and printed circuit board.	

## 13.3. DVD Self Diagnostic Function-Error Code

Error Code	Error Content	Additional error explanation
	U, H error	
U11	Focus error	
H01	Tray loading error	
H02	Spindle servo error	(Spindle servo, DSC (IC8251) SP motor, CLV servo error)
H03	Traverse servo error	(Traverse motor, IC8251)
H04	Tracking servo error	
H05	Seek error	
H06	Power error	Cannot switch off the power because of the panel and system computer communication error
H07	Spindle motor drive error	Spindle motor
	DSC related	
F500	DSC error	DSC (IC8251) stops in the occurrence of servo error (startup, focus error, etc.)
F501	DSC not Ready error	DSC-system computer communication error (Communication failure caused by idling of DSC)
F502	DSC Time out error	Similar as F500
F503	DSC communication Failure	Communication error (result error occurred although communication command was sent)
F504	Error adjusting DSC data slice offset	
F505	DSC Attention error	Similar as F500
F506	Invalid media	Disc is flipped over, TOC unreadable, incompatible disc media
	ODC related	
F600	Access failure to management information caused by demodulation error	Operation stopped because navigation data is not accessible caused by the demodulation defect
F601	Indeterminate sector ID requested	Operation stopped caused by the request to access abnormal ID data
F602	Access failure to LEAD-IN caused by demodulation error	LEAD IN data unreadable
F603	Access failure to KEYDET caused by demodulation error	Access failure to CSS data of disc
F610	ODC abnormality	No permission for command execution
F611	6626 QCODE don't read Error	Access failure to seek address in CD series
F612	No CRC OK for a specific time	Access failure to ID data in DVD series
F620	Laser safeguard: high temperature condition	
F621	Laser safeguard: circuit failure condition	
F630	No reply to KEY DET enquiry	(for internal use only)
F631	CPPM KEY DET is not available till the FILE terminal	(CPPM file system is unreadable caused by scratches)
F632	CPPM KEY DET is not available	Been revoked or falsified
	Disc code	
F103	Illegal highlight Position	Big possibility of disc specification violation during highlight display
	HIC Error	
F4FF	Force initialize failure (time out)	
	Micro computer error	
F700	MBX overflow	When replying message to disc manager
F701	Message command does not end	Next message is sent before replying to disc manager
F702	Message command changes	Message is changed before it is sent as a reply to disc manager
F880	Task number is not appropriate	Message coming from a non-existing task

Error Code	Error Content	Additional error explanation
F890	Sending message when message is being sent to AV task	Sending message to AV task
F891	Message couldn't be sent to AV task	Begin sending message to AV task
F893	FROM falsification	
F894	EEPROM abnormality	
F895	Language area abnormality	Firm version agreement check for factory preset setting failure prevention
F896	No existence model	Firm version agreement check for factory preset setting failure prevention
F897	Initialize is not completed	Initialize completion check for factory preset setting failure prevention
F898	Disagreement of hardware and software	Unsuitable combination of AV DECORDER, SDRAM and FLASH ROM (firmware)
F8A0	Message command is not appropriate	Begin sending message to AV task






**Note:**

An error code will be canceled if a power supply is turned OFF.

\*1: CPPM is the copy guard function beforehand written in the disk for protection of copyrights.

## 13.4. Service mode table 2

Pressing various button combinations on the player and remote control unit can activate the service modes.

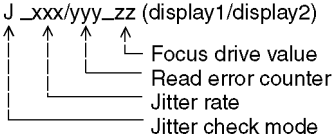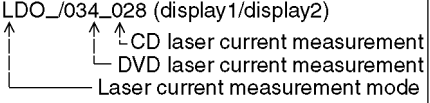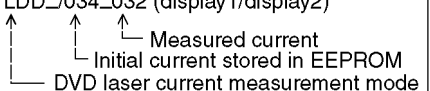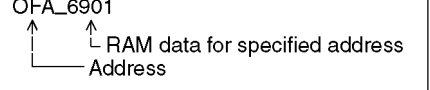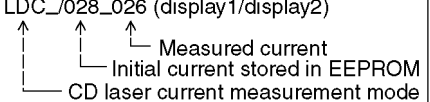Item	Player mode and button combination	Function	Display	Cancellation method
Jitter check	In STOP (no disc) mode, press STOP button on the player, and "5" button on the remote control unit.	Jitter check Jitter rate is measured and displayed. Measurement is repeatedly done in the cycle of one second. Read error counter starts from zero upon mode setting. When target block data failed to be read out, the counter advances by one increment. When the failure is caused by minor error, it may be corrected when retried to enable successful reading. In this case, the counter advances by one. When the error persists even after retry, the counter may jump by two or more.	J _xxx/yyy_zz (display1/display2)  Jitter rate is shown in decimal notation to one place of decimal. Focus drive value is shown in hexadecimal notation.	Press STOP or OPEN button.
Error code check	In STOP (no disc) mode, press STOP button on the player, and "0" button on the remote control unit. * With pointing of cursor up and down on display	Error code check The latest error code stored in EEPROM is displayed.	Error code (play_err) is expressed in the following convention. Error code = 0 x DAXX is expressed: → DVDnn UXX Error code = 0 x DBXX is expressed: → DVDnn HXX Error code = 0 x DXXX is expressed: → DVDnn FXXX Error code = 0 x 0000 is expressed: → DVDnn F--- * "xx" denotes the error code.	Cancelled automatically 5 seconds later.
Initial setting of laser drive current	In STOP (no disc) mode, press STOP button on the player, and PAUSE button on the remote control unit.	Initial setting of laser drive current Initial current value for each of DVD laser and CD laser is separately saved in EEPROM.	LDO_/034_028 (display1/display2)  The value denotes the current in decimal notation. The above example shows the initial current is 34mA and 28mA for DVD laser and CD laser respectively when the laser is switched on.	Cancelled automatically 5 seconds later.
DVD laser drive current measurement	In STOP (no disc) mode, press STOP button on the player, and DISPLAY button on the remote control unit.	DVD laser drive current measurement DVD laser drive current is measured and the result is displayed together with the initial value stored in EEPROM. After the measurement, DVD laser emission is kept on. It is turned off when POWER key is switched off. (It is also turned off when POWER button on the player is switched off.)	LDD_/034_032 (display1/display2)  The value denotes the current in decimal notation. The above example shows the initial current is 34mA and the measured value is 32mA.	Cancelled automatically 5 seconds later.
ADSC internal RAM data check	In STOP (no disc) mode, press STOP button on the player, and "1" button on the remote control unit.	ADSC internal RAM data check ADSC internal RAM data is read out and displayed.	OFA_6901  The value is shown in hexadecimal notation. The above example shows the data in ADSC address OFAh is 6901h.	Press STOP or PLAY button.
CD laser drive current measurement	In STOP (no disc) mode, press STOP button on the player, and "3" button on the remote control unit.	CD laser drive current measurement CD laser drive current is measured and the result is displayed together with the initial value stored in EEPROM. After the measurement, CD laser emission is kept on. It is turned off when POWER key is switched off. (It is also turned off when POWER button on the player is switched off.)	LDC_/028_026 (display1/display2)  The value denotes the current in decimal notation. The above example shows the initial current is 28mA and the measured value is 26mA.	Cancelled automatically 5 seconds later.



Item	Player mode and button combination	Function	Display	Cancellation method
Version display	In STOP (no disc) mode, press STOP button on the player, and "7" button on the remote control unit.	Version display	srrr/xyzzz (display1/display2) 	Cancelled automatically 5 seconds later.
Initialization	In STOP (no disc) mode, press STOP button on the player, and ≥10 button on the remote control unit.	Initialization User settings are cancelled and player is initialized to factory setting.	--INIT--	_____
Area	In STOP (no disc) mode, press STOP button on the player, and "6" button on the remote control unit.	Area number and broadcasting system check	w_xy_zzz 	Cancelled automatically 5 seconds later.
Region and syscon version display	In STOP (no disc) mode, press STOP button on the player, and "8" button on the remote control unit.	Region and syscon display	w_xxyzzz 	Cancelled automatically 5 seconds later.
Communication error display	In STOP (no disc) mode, press STOP button on the player, and "MENU" button on the remote control unit.	Displays frequency of communication errors between system control IC and mechanism control IC during DVD module.	ER_02_30	Cancelled automatically 5 seconds later.

Item	Player mode and button combination	Function	Display	Cancellation method
Timer 1 check	In STOP (no disc) mode, press STOP button on the player, and "▲" button on the remote control unit.	Timer 1 check Laser operation timer Operation time is measured separately for DVD laser and CD laser.	T1_1234/5678 (display1/display2) Shown to the left is DVD laser time, and to the right CD laser time. Time is shown in 4 digits of decimal notation in a unit of 10 hours. "0000" will follow "9999".	Cancelled automatically 5 seconds later.
Timer 1 reset	While displaying Timer 1 data, press STOP button on the "▼" button on the remote control unit.	Timer 1 reset Laser operation timer Operation time of both DVD laser and CD laser is reset all at once.	T1_0000/0000 (display1/display2)	Cancelled automatically 5 seconds later.
Timer 2 check	In STOP (no disc) mode, press STOP button on the player, and "▶" button on the remote control unit.	Timer 2 check Spindle motor operation timer	T2_12345 Time is shown in 5 digits of decimal notation in a unit of 10 hours. "00000" will follow "99999".	Cancelled automatically 5 seconds later.
Timer 2 reset	While displaying Timer 2 data, press STOP button on the player and "◀" button on the remote control unit.	Timer 2 reset Spindle motor operation timer	T2_00000	Cancelled automatically 5 seconds later.

## 13.5. Sales demonstration lock function

This function prevents discs from being lost when the unit is used for sales demonstrations by disabling the disc eject function. "LOCKED" is displayed on the unit, and ordinary operation is disabled.

### 13.5.1. Setting

#### · Prohibiting removal of disc

1. Select the DVD/CD function.
2. Press and hold down the ■ button on the player and the power button on the remote controller unit for at least three seconds. (The message, "\_\_\_LOCKED\_" appears when the function is activated.)

#### Note:

OPEN/CLOSE ▲, DISC CHECK and DISC CHANGE buttons are invalid and the player displays "\_\_\_LOCKED\_" while the lock function mode is entered.

#### · Prohibiting operation of selector and disk

1. Select the DVD/CD function.
2. Press and hold down the ► button on the player and the power button on the remote controller unit for at least three seconds. (The message, "\_\_\_LOCKED\_" appears when the function is activated.)

#### Note:

The following buttons are invalid and the player displays "\_\_\_LOCKED\_" while the lock function mode is entered.

Player	▲, ■,   , SELECTOR, ►►, ◀◀, VOLUME KNOB, DISC CHECK, DISC CHANGE, DISC1-DISC5
Remote controller unit	SLEEP, REPEAT, 0~9, ≥10, RETURN, TOP MENU, ■,   , ◀◀, ►►, ◀◀, ►►, POSITION MEMORY, TUNER/BAND, D.MIX, CH SELECT/ TEST, SET UP/ MUTING, DISPLAY, GROUP, TV, VCR/AUX, QUICK REPLAY, SUBTITLE, FL DISPLAY, CH & VOLUME

### 13.5.2. Cancellation

The lock can be cancelled by the same procedure as used in setting. ("UNLOCK" is displayed on cancellation. Disconnecting the power cable from power outlet does not cancel the lock.)

## 13.6. Handling After Completing Repairs

Use the following procedure after completing repairs.

### 13.6.1. Method

Confirm that the power is turned on:

1. Press the "OPEN/CLOSE" button to close the tray.
2. Press the "POWER" button to turn off the power.
3. Disconnect the power plug from the outlet.

### 13.6.2. Precautions

Do not disconnect the power plug from the outlet with the tray still open, then close the tray manually.


## 14 Self-Diagnosis Function

### 14.1. Automatic Displayed Error Codes

#### 14.1.1. Automatic Display Function

For a power unit error, the code is automatically displayed.

**F61:** Automatically displayed on the LCD of the player.

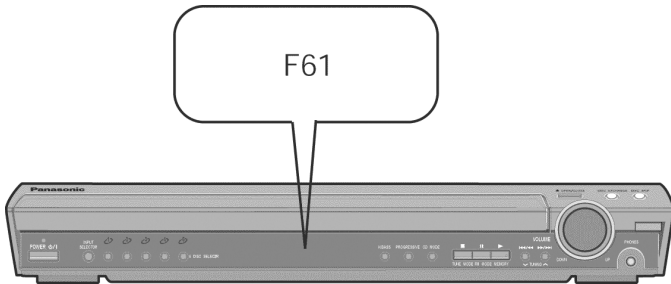

#### 14.1.2. Re-Display

##### · For F61 Display

- When the code, F61 is displayed, the power is automatically turned off.
- The code, F61 is displayed for three seconds, and then the current time appears.
- To retrieve the code, turn on the power button so that the code F61 appears, however, is switched to time display after three seconds, and the power is automatically turned off.

#### 14.1.3. Description of Error Code

##### 14.1.3.1. F61

##### · State, Condition

When the power is turned on, the unit is automatically turned off. The power does not turn on.

##### · Cause, Troubleshooting


Power circuit system failure and/or direct current flow to speaker terminal

Identify the cause and replace with new parts.

## 14.2. Memorized Error Codes

### 14.2.1. Activating Self-Diagnosis Function and Displaying Method

1. Turn on the power.
2. Select DVD/CD function. With no DVD/CD inserted in the player, press and hold down the F\_SKIP ►► button simultaneously for at least two seconds, and press the “CD MODE” button for at least two seconds in order to display “T\_\_\_\_\_”.
3. Press the ■ button. If a memorized error is detected, the result of self diagnosis is displayed. (Ex.: T H15)(See table below)  
If several errors are detected, press the ■ button to display each.

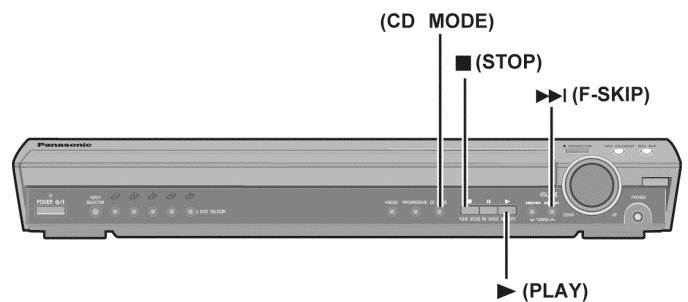

#### 14.2.2. Re-Display

- Press the power button to turn off the power, and then turn on the power.
- The details of self diagnosis are stored in the unit memory. To retrieve them, follow the procedure described the above, “Activating Self-Diagnosis Function and Displaying Method”.

#### 14.2.3. Deleting Details of Self Diagnosis

- After repair, press and hold down the ■ button for at least five seconds, “\_ CLEAR \_” appears for a second and then “T\_\_\_\_\_” appears. (Deleting the details of self diagnosis)
- After repairing errors, be sure to delete the details of self diagnosis.

Error Code	State, Condition	Cause, Troubleshooting
H15	The disc tray cannot be opened: it closes spontaneously.	Disc tray open/close detection switch (S9001) failure. (Check and replace)
H16	The disc tray cannot be closed: it opens spontaneously.	

# 15 Service Precautions

## 15.1. Recovery after the DVD player is repaired

- When FLASH ROM IC or DVD module P.C.B. is replaced, carry out the recovery processing to optimize the drive.  
Playback the recovery disk to process the recovery automatically.
- Recovery disc (Product number: RFKZD03R005)
- Performing recovery
  1. Load the recovery disc RFKZD03R005 on to the player and run it.
  2. Recovery is performed automatically. When it is finished, a message appears on the screen.
  3. Remove the recovery disc.
  4. Turn off the power.

**Note:**

This unit requires no initialization process carried out after the traditional DVD players were repaired.

When the recovery measures are taken, the customer setting will return to the factory setting as same as the procedure described in item of "Initialization" in 13.4. is carried out. Write down the contents of the setting before recovery processing, and reset the player.

## 15.2. Firmware version-up of the DVD player

- The firmware of the DVD player may be renewed to improve the quality including operability and playability to the substandard discs.processing to optimize the drive.  
The recovery disc has also firmware version-up.
- After version-up, recovery processing is executed automatically.
- Part number of the recovery disc for version-up will be noticed when it is supplied.
- Updating firmware
  1. Load the recovery disc that is supplied to the player and run it.
  2. Firmware version of the player is automatically checked. Appropriate message appears whenever necessary.
  3. Using remote controller's cursor key, select whether version updating is to be done or not. (Selection of Yes/No)
  4. a. If Yes is selected, version updating is performed.
    - b. If No is selected, only recovery is performed.
  5. a. When updating is finished, remove the disc according to the message appearing on the screen.
    - b. Remove the disc according to the message appearing on the screen.
  6. Turn off the power.

**Note:**

If the AC power supply is shut out during version-up due to a power failure, the version-up is improperly carried out. In such a case, replace the FLASH ROM IC and carry out the version-up again.

# 16 Adjustment Procedure

## 16.1. Service Tools and Equipment

Application	Name	Number
Tilt adjustment	DVD test disc	DVDT-S20 [SPG]
	TORX screw driver (T6)	Available on sales route. (T6) or RFKZ0185 [SPG]
Others	Grease	RFKXPG641 [SPG]
Confirmation	CD test disc	PVCD-K06 or any other commercially available disc
	VCD test disc	PVCD-K06 or any other commercially available disc
	Recovery disc	RFKZD03R005 [SPG]

## 16.2. Important points in adjustment

### 16.2.1. Important points in optical adjustment

- Before starting optical adjustment, be sure to take anti-static measures.
- Optical pickup tilt adjustment is needed after replacement of the following components.

1. Optical pickup unit
2. Spindle motor unit
3. Optical pickup peripheral parts

#### Notes

Adjustment is generally unnecessary after replacing other parts of the traverse unit. However, make adjustment if there is a noticeable degradation in picture quality. Optical adjustments cannot be made inside the optical pickup. Adjustment is generally unnecessary after replacing the traverse unit.

### 16.2.2. Important points in electrical adjustment

- Follow the adjustment procedures described in this manual.

## 16.3. Storing and handling of test discs

- Surface precision is vital for DVD test discs. Be sure to store and handle them carefully.
1. Do not place discs directly onto the workbench, etc., after use.
  2. Handle discs carefully in order to maintain their flatness. Place them into their case after use and store them vertically. Store discs in a cool place where they are not exposed to direct sunlight or air from air conditioners.
  3. Accurate adjustment will not be possible if the disc is warped when placed on a surface made of glass, etc. If this happens, use a new test disc to make optical adjustments.
  4. If adjustment is done using a warped disc, the adjustment will be incorrect and some discs will not be playable.

## 16.4. Optical adjustment

### 16.4.1. Optical pickup tilt adjustment

Measurement point	Adjustment point	Mode	Disc
	Tangential adjustment screw Tilt adjustment screw	T01 (inner periphery) play T30 (center periphery) T43 (outer periphery) play	DVDT-S20 [SPG]
Measuring equipment	Adjustment value		
None (Main unit display for servicing is used.)		Adjust to the minimum jitter value.	

#### 16.4.1.1. Adjustment procedure

1. While pressing STOP button on the main unit, press "5" on the remote control unit.
2. Confirm that "J\_xxx/yyy\_zz" (display1/display2) is shown on the front display.

##### For your information:

"yyy" and "zz" shown to the right have nothing to do with the jitter value. "yyy" is the error counter, while "zz" is the focus drive value.



##### Note:

Jitter value appears on the front display.

3. Play test disc T30 (center periphery).
4. Adjust tangential adjustment screw so that the jitter value is minimized.
5. Play test disc T30 (center periphery).
6. Adjust tilt adjustment screw 1 so that the jitter value is minimized.
7. Play test disc T30 (center periphery).
8. Adjust tilt adjustment screw 2 so that the jitter value is minimized.
9. Repeat adjusting tilt adjustment screws 1 and 2 alternately until the jitter value is minimized.

#### 16.4.1.2. Important points

1. Make tangential adjustment first, and then make tilt adjustment.
2. Repeat adjusting two or three times to find the optimum point.
3. Finish the procedure with tilt adjustment.

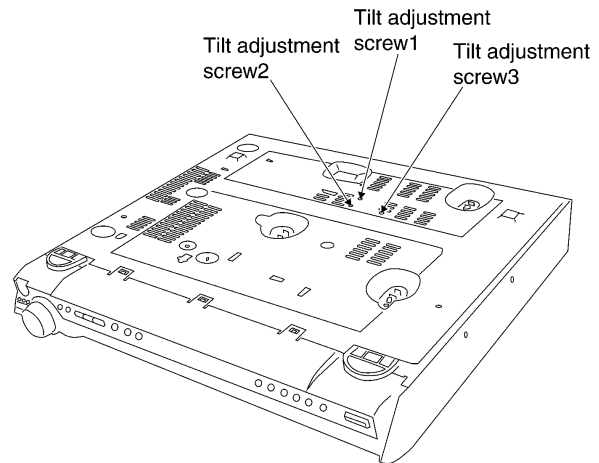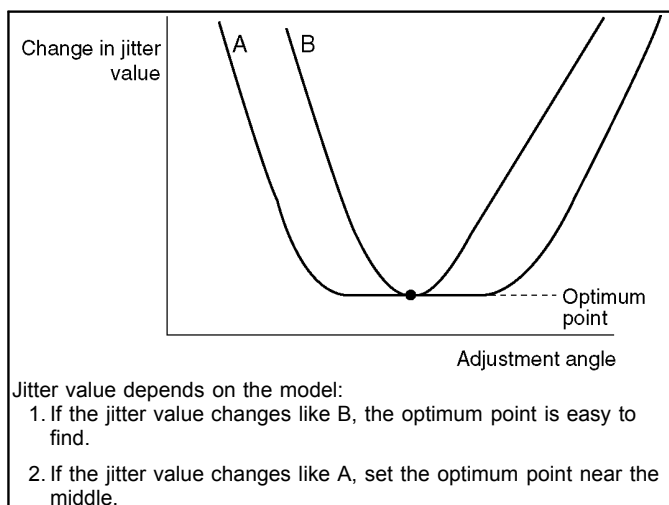


#### 16.4.1.3. Check after adjustment

Play test disc or any other disc to make sure there is no picture degradation in the inner, middle and outer peripheries, and no audio skipping. After adjustment is finished, lock each adjustment screw in position using screw lock.

#### 16.4.1.4. Procedure for screw lock

1. After adjustment, remove top cover, tray, clamper base and traverse unit in this sequence.
2. Lay the traverse unit upside down, and fix adjustment screw with screw lock.
3. After fixing, reassemble traverse unit, clamper base, tray and top cover.

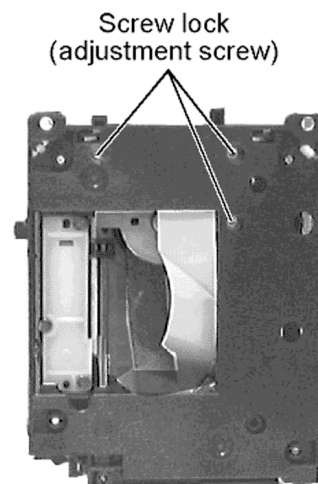

# 17 Abbreviations

INITIAL/LOGO	ABBREVIATIONS
A	A0~UP ACLK AD0~UP ADATA ALE AMUTE AREQ ARF ASI ASO ASYN
	ADDRESS AUDIO CLOCK ADDRESS BUS AUDIO PES PACKET DATA ADDRESS LATCH ENABLE AUDIO MUTE AUDIO PES PACKET REQUEST AUDIO RF SERVO AMP INVERTED INPUT SERVO AMP OUTPUT AUDIO WORD DISTINCTION SYNC
B	BCK BCKIN BDO BLKCK BOTTOM BYP BYTCK
	BIT CLOCK (PCM) BIT CLOCK INPUT BLACK DROP OUT SUB CODE BLOCK CLOCK CAP. FOR BOTTOM HOLD BYPATH BYTE CLOCK
C	CAV CBDO CD CDSCK CDSRDATA CDRF CDV CHNDATA CKSL CLV COFTR CPA CPCS CPDT CPUADR CPUADT CPUIRQ CPRD CPWR CS CSYNIN CSYNOUT
	CONSTANT ANGULAR VELOCITY CAP. BLACK DROP OUT COMPACT DISC CD SERIAL DATA CLOCK CD SERIAL DATA CD RF (EFM) SIGNAL COMPACT DISC-VIDEO CHANNEL DATA SYSTEM CLOCK SELECT CONSTANT LINEAR VELOCITY CAP. OFF TRACK CPU ADDRESS CPU CHIP SELECT CPU DATA CPU ADDRESS LATCH CPU ADDRESS DATA BUS CPU INTERRUPT REQUEST CPU READ ENABLE CPU WRITE ENABLE CHIP SELECT COMPOSITE SYNC IN COMPOSITE SYNC OUT
D	DACCK DEEMP DEMPH DIG0~UP DIN DMSRCK DMUTE DO DOUT0~UP DRF DRPOUT DREQ DRESP DSC DSLIF DVD
	D/A CONVERTER CLOCK DEEMPHASIS BIT ON/OFF DEEMPHASIS SWITCHING FL DIGIT OUTPUT DATA INPUT DM SERIAL DATA READ CLOCK DIGITAL MUTE CONTROL DROP OUT DATA OUTPUT DATA SLICE RF (BIAS) DROP OUT SIGNAL DATA REQUEST DATA RESPONSE DIGITAL SERVO CONTROLLER DATA SLICE LOOP FILTER DIGITAL VIDEO DISC

INITIAL/LOGO	ABBREVIATIONS
E	EC ECR  ENCSEL ETMCLK ETSCLK
	ERROR TORQUE CONTROL ERROR TORQUE CONTROL REFERENCE ENCODER SELECT EXTERNAL M CLOCK (81MHz/40.5MHz) EXTERNAL S CLOCK (54MHz)
F	FBAL FCLK FE FFI FEO FG FSC FSCK
	FOCUS BALANCE FRAME CLOCK FOCUS ERROR FOCUS ERROR AMP INVERTED INPUT FOCUS ERROR AMP OUTPUT FREQUENCY GENERATOR FREQUENCY SUB CARRIER FS (384 OVER SAMPLING) CLOCK
G	GND
	COMMON GROUNDING (EARTH)
H	HA0~UP HD0~UP HINT HRXW
	HOST ADDRESS HOST DATA HOST INTERRUPT HOST READ/WRITE
I	IECOUT IPFRAG IREF ISEL
	IEC958 FORMAT DATA OUTPUT INTERPOLATION FLAG I (CURRENT) REFERENCE INTERFACE MODE SELECT
L	LDON LPC LRCK
	LASER DIODE CONTROL LASER POWER CONTROL L CH/R CH DISTINCTION CLOCK
M	MA0~UP MCK MCKI MCLK MDATA MDQ0~UP MDQM MLD MPEG
	MEMORY ADDRESS MEMORY CLOCK MEMORY CLOCK INPUT MEMORY SERIAL COMMAND CLOCK MEMORY SERIAL COMMAND DATA MEMORY DATA INPUT/OUTPUT MEMORY DATA I/O MASK MEMORY SERIAL COMMAND LOAD MOVING PICTURE EXPERTS GROUP
O	ODC OFTR OSCI OSCO OSD
	OPTICAL DISC CONTROLLER OFF TRACKING OSCILLATOR INPUT OSCILLATOR OUTPUT ON SCREEN DISPLAY
P	P1~UP PCD PCK PDVD PEAK PLLCLK PLOCK PWMCTL PWMDA PWMOA, B
	PORT CD TRACKING PHASE DIFFERENCE PLL CLOCK DVD TRACKING PHASE DIFFERENCE CAP. FOR PEAK HOLD CHANNEL PLL CLOCK PLL LOCK PWM OUTPUT CONTROL PULSE WAVE MOTOR DRIVE A PULSE WAVE MOTOR OUT A, B

INITIAL/LOGO	ABBREVIATIONS
R	RE RFENV RFO RS RSEL RST RSV
S	SBI0, 1 SBO0 SBT0, 1 SCK SCKR SCL SCLK SDA SEG0~UP SELCLK SEN SIN1, 2 SOUT1, 2 SPDI SPDO SPEN SPRCLK SPWCLK SQCK SQCX SRDATA SRMADR SRMDT0~7 SS STAT STCLK STD0~UP STENABLE STSEL STVALID SUBC SBCK SUBQ SYSCLK
T	TE TIBAL TID TIN TIP TIS TPSN TPSO TPSP TRCRS TRON TRSON
	READ ENABLE RF ENVELOPE RF PHASE DIFFERENCE OUTPUT (CD-ROM) REGISTER SELECT RF POLARITY SELECT RESET RESERVE SERIAL DATA INPUT SERIAL DATA OUTPUT SERIAL CLOCK SERIAL DATA CLOCK AUDIO SERIAL CLOCK RECEIVER SERIAL CLOCK SERIAL CLOCK SERIAL DATA FL SEGMENT OUTPUT SELECT CLOCK SERIAL PORT ENABLE SERIAL DATA IN SERIAL DATA OUT SERIAL PORT DATA INPUT SERIAL PORT DATA OUTPUT SERIAL PORT R/W ENABLE SERIAL PORT READ CLOCK SERIAL PORT WRITE CLOCK SUB CODE Q CLOCK SUB CODE Q DATA READ CLOCK SERIAL DATA SRAM ADDRESS BUS SRAM DATA BUS 0~7 START/STOP STATUS STREAM DATA CLOCK STREAM DATA STREAM DATA INPUT ENABLE STREAM DATA POLARITY SELECT STREAM DATA VALIDITY SUB CODE SERIAL SUB CODE CLOCK SUB CODE Q DATA SYSTEM CLOCK TRACKING ERROR BALANCE CONTROL BALANCE OUTPUT 1 BALANCE INPUT BALANCE INPUT BALANCE OUTPUT 2 OP AMP INPUT OP AMP OUTPUT OP AMP INVERTED INPUT TRACK CROSS SIGNAL TRACKING ON TRAVERSE SERVO ON

INITIAL/LOGO	ABBREVIATIONS
V	VBLANK VCC VCDCONT VDD VFB VREF VSS
W	WAIT WDCK WEH WSR
X	X XALE XAREQ XCDROM XCS XCSYNC XDS XHSYNCO XHINT XI XINT XMW XO XRE XSRMCE XSRMOE XSRMWE XVCS XVDS XVSYNCO
	V BLANKING COLLECTOR POWER SUPPLY VOLTAGE VIDEO CD CONTROL (TRACKING BALANCE) DRAIN POWER SUPPLY VOLTAGE VIDEO FEED BACK VOLTAGE REFERENCE SOURCE POWER SUPPLY VOLTAGE BUS CYCLE WAIT WORD CLOCK WRITE ENABLE HIGH WORD SELECT RECEIVER X' TAL X ADDRESS LATCH ENABLE X AUDIO DATA REQUEST X CD ROM CHIP SELECT X CHIP SELECT X COMPOSITE SYNC X DATA STROBE X HORIZONTAL SYNC OUTPUT XH INTERRUPT REQUEST X' TAL OSCILLATOR INPUT X INTERRUPT X MEMORY WRITE ENABLE X' TAL OSCILLATOR OUTPUT X READ ENABLE X SRAM CHIP ENABLE X SRAM OUTPUT ENABLE X SRAM WRITE ENABLE X V-DEC CHIP SELECT X V-DEC CONTROL BUS STROBE X VERTICAL SYNC OUTPUT



# 18 Voltage Chart

## 18.1. DVD Module P.C.B.

RefNo	IC8001																			
MODE	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
CD PLAY	3.1	3.0	0	3.1	3.3	3.4	3.0	3.1	0	0	3.1	3.4	2.9	3.1	3.0	0	3.0	3.0	3.4	0
RefNo	IC8001																			
MODE	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40
CD PLAY	3.4	-	-	1.5	0.8	1.2	1.0	3.4	0	0.5	1.0	-	-	3.4	0	-	-	2.4	-	-
RefNo	IC8001																			
MODE	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60
CD PLAY	-	-	-	1.2	-	-	-	3.4	0	-	-	2.5	0	0	0	-	-	-	-	-
RefNo	IC8001																			
MODE	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80
CD PLAY	-	3.4	0	0	0.1	1.0	1.0	3.0	2.8	3.1	0.1	0.1	3.2	0	1.7	.0	1.7	0.1	3.4	0
RefNo	IC8001																			
MODE	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	96	97	98	99	100
CD PLAY	3.4	0.1	3.4	3.4	0.1	0.1	0	0.1	1.2	0	0	0	0	0.1	0.1	0	0	3.4	0.8	0.1
RefNo	IC8001																			
MODE	101	102	103	104	105	106	107	108	109	110	111	112	113	114	115	116	117	118	119	120
CD PLAY	2.4	2.1	1.9	0.3	0	1.9	3.4	2.1	2.1	1.9	1.8	1.1	1.1	1.7	1.7	1.7	1.7	3.3	2.0	1.7
RefNo	IC8001																			
MODE	121	122	123	124	125	126	127	128	129	130	131	132	133	134	135	136	137	138	139	140
CD PLAY	1.5	0	0	0.1	0	0	2.3	1.7	2.6	2.6	2.6	2.6	2.6	2.6	2.4	2.4	0	2.4	0	0
RefNo	IC8001																			
MODE	141	142	143	144	145	146	147	148	149	150	151	152	153	154	155	156	157	158	159	160
CD PLAY	0.5	0	0	0	0	1.1	2.2	1.7	2.6	2.6	2.6	2.6	2.6	2.6	2.4	2.4	0	2.4	3.4	0
RefNo	IC8001																			
MODE	161	162	163	164	165	166	167	168	169	170	171	172	173	174	175	176	177	178	179	180
CD PLAY	3.4	0	0	0	0	3.4	3.4	1.7	0	1.7	0.9	1.2	0	0	0	0.9	1.7	3.4	0	3.4
RefNo	IC8001																			
MODE	181	182	183	184	185	186	187	188	189	190	191	192	193	194	195	196	197	198	199	200
CD PLAY	0	3.4	0	0	-	-	-	-	-	3.4	0	1.0	1.7	0	1.5	3.4	1.3	0.5	1.5	1.4
RefNo	IC8001																			
MODE	201	202	203	204	205	206	207	208	209	210	211	212	213	214	215	216	217	218	219	220
CD PLAY	0	3.4	3.4	1.2	0	1.7	1.4	1.4	3.4	3.4	1.0	1.8	0	-	-	3.4	2	0	1.2	1.6
RefNo	IC8001																			
MODE	221	222	223	224	225	226	227	228	229	230	231	232	233	234	235	236	237	238	239	240
CD PLAY	0.2	0	1.7	0.2	3.4	1.7	0.1	0.9	0	0.1	3.4	1.6	-	2.2	0	1.2	0.1	0.1	3.4	3.2
RefNo	IC8001																			
MODE	241	242	243	244	245	246	247	248	249	250	251	252	253	254	255	256				
CD PLAY	1.7	0	1.7	3.3	3.4	3.4	0	3.3	2.6	0	3.6	2.8	0	2.9	3.4	2.9				
RefNo	IC8051																			
MODE	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
CD PLAY	3.4	3.2	3.4	3.1	3.2	0.1	3.2	3.4	3.1	3.0	-	0.1	2.9	3.4	2.7	3.3	3.3	3.3	3.0	2.2
RefNo	IC8051																			
MODE	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40
CD PLAY	1.6	0.1	-	-	-	-	3.4	0	-	-	-	-	-	-	-	-	3.4	1.7	2.7	-
RefNo	IC8051																			
MODE	41	42	43	44	45	46	47	48	49	50	51	52	53	54						
CD PLAY	0.1	3.0	3.4	3.2	3.1	0	3.0	3.1	3.4	2.8	2.8	0	2.9	0						
RefNo	IC8111																			
MODE	1	2	3	4	5	6	7	8												
CD PLAY	3.4	0	0.1	-	-	0	0	4.9												
RefNo	IC8251																			
MODE	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
CD PLAY	1.7	1.7	1.7	1.9	1.9	1.8	0	4.9	3.4	0.1	2.6	2.4	2.5	2.5	4.5	4.6	5.1	4.0	0.1	0.6
RefNo	IC8251																			
MODE	21	22	23	24	25	26	27	28												
CD PLAY	9.6	9.4	1.8	1.7	1.7	1.7	3.4	3.2												
RefNo	IC8421																			
MODE	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
CD PLAY	0	3.4	3.0	3.4	1.7	0.9	1.7	1.7	4.8	0	0.9	0.1	0.1	0	2.4	2.4	4.9	0	2.4	2.4
RefNo	IC8421																			
MODE	21	22	23	24	25	26	27	28												
CD PLAY	2.4	4.9	-	0	2.5	2.4	2.4	4.8												
RefNo	IC8601																			
MODE	1	2	3																	
CD PLAY	0	3.2	3.4																	
RefNo	IC8606																			
MODE	1	2	3	4	5															
CD PLAY	0.7	1.2	0	0	0															
RefNo	IC8611																			
MODE	1	2	3	4	5	6	7	8												
CD PLAY	0.1	0.1	0.1	0.1	3.4	3.4	0.1	3.4												
RefNo	IC8651																			
MODE	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
CD PLAY	-	-	-	-	-	-	-	-	-	-	-	2.9	3.4	3.4	1.0	-	-	-	-	-
RefNo	IC8651																			
MODE	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40
CD PLAY	-	-	-	-	-	2.4	0	1.9	1.0	1.0	1.0	1.0	1.4	1.2	1.5	1.5	3.4	1.4	1.2	1.3
RefNo	IC8651																			
MODE	41	42	43	44	45	46	47	48												
CD PLAY	1.4	1.4	1.7	1.7	1.9	0	3.4	-												
RefNo	IC8691										IC8695									
MODE	1	2	3	4	5							1	2	3	4	5				
CD PLAY	3.0	3.0	0.1	4.3	4.9							0	0	0	0	4.9				
RefNo	Q8550			Q8551			Q8552			Q8560			Q8561							
MODE	E	C	B		E	C	B		E	C	B		E	C	B		E	C	B	
CD PLAY	4.9	4.8	4.2		0.1	4.8	0.1		4.8	0	4.8		0.1	0.1	0.7		1.5	3.5	2.1	
RefNo	Q8562			Q8606			Q8607													
MODE	E	C	B		E	C	B		E	C	B									
CD PLAY	4.2	2.3	3.6		0	0.1	0.7		0	3.2	0.1									
RefNo	QR8111			QR8112			QR8420			QR8571										
MODE	E	C	B		E	C	B		E	C	B		E	C	B					
CD PLAY	0.1	0.1	1.2		0.1	4.5	0.1		0	4.0	0.1		3.4	3.3	0.1					

18.2. Main P.C.B.

Ref No.		IC2006																																					
MODE	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16																							
CD PLAY	4.8	2.5	2.1	1.5	4.8	1.5	0	2.0	1.9	0	1.9	0	1.5	1.5	1.5	2.0																							
STANDBY	0.1	0	0.1	0	0.1	0	0	0.2	0.2	0	0.1	0.1	0.1	0.1	0.1	0																							
Ref No.		IC2007																																					
MODE	1	2	3	4	5	6	7	8	9																														
CD PLAY	0	0.3	0	0.3	9.0	9.6	0	0	0																														
STANDBY	0	0.1	0	0.1	1.3	0.1	0	0	0																														
Ref No.		IC2008								IC2009																													
MODE	1	2	3	4	5	6	7	8	9		1	2	3	4	5	6																							
CD PLAY	0	0.3	0	0.3	9.0	9.6	0	0	0		0	1.4	4.7	2.1	0	2.1																							
STANDBY	0	0.1	0	0.1	1.4	0.1	0	0	0		0	0	0	0.2	0	0.2																							
Ref No.		IC2010																																					
MODE	1	2	3	4	5	6	7	8																															
CD PLAY	0	0	0	-6.7	0	0	0	6.9																															
STANDBY	0.4	0.4	0.1	0.1	0.1	0.4	0.4	0.2																															
Ref No.		IC2011																																					
MODE	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20																			
CD PLAY	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0																			
STANDBY	0	0	0	0	0.2	0.2	0	0	0	0.2	0	0	0	0	0	0	0	0	0	0																			
Ref No.		IC2011																																					
MODE	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40																			
CD PLAY	0	0	0	0	0	0	0	0	0	0	0	0	-6.5	2.0	0	0	0	0	0	0																			
STANDBY	0	0	0	0	0	0	0	0.3	0	0	0	0	0.1	0	0	0	0	0	0	0																			
Ref No.		IC2011																																					
MODE	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60																			
CD PLAY	0	-6.7	6.9	0	0.1	0.1	0	0	0	0	0	0	0	0	0	0	0	0	0	0																			
STANDBY	0	0.2	0.2	0	0.1	0.1	0	0	0	0	0	0	0	0	0	0	0.2	0.2	0	0																			
Ref No.		IC2011																																					
MODE	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80																			
CD PLAY	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0																			
STANDBY	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0																			
Ref No.		IC2013																																					
MODE	1	2	3	4	5	6	7	8																															
CD PLAY	0	0	0	-6.7	0	0	0	6.9																															
STANDBY	0.3	0.3	0	0.1	0	0.4	0.4	0.2																															
Ref No.		IC2014																																					
MODE	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20																			
CD PLAY	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	6.9	-6.7	0.1	0.1	0																			
STANDBY	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0.2	0.2	0.1	0.1	0.1	0																			
Ref No.		IC2015																																					
MODE	1	2	3	4	5	6	7	8																															
CD PLAY	0	0	0	-6.7	0	0	0	6.9																															
STANDBY	0.3	0.3	0	0.1	0	0	0	0.2																															
Ref No.		IC2018																																					
MODE	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20																			
CD PLAY	0	4.8	1.5	4.8	2.4	4.8	0.2	0	0	4.8	4.6	2.3	2.3	0	0	4.6	0	3.2	4.0	4.4																			
STANDBY	0	4.8	1.6	4.8	2.4	4.8	4.7	0	0	4.8	4.7	2.4	2.4	0	0	4.7	0	0	0	2.7																			
Ref No.		IC2018																																					
MODE	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40																			
CD PLAY	4.6	0	0	0	0	4.7	4.5	4.8	0.1	0.1	2.5	4.6	4.6	4.4	4.5	0.1	4.2	0.1	0.1																				
STANDBY	0	0	0	0	0	4.7	4.7	4.8	4.8	4.8	2.6	4.7	4.7	4.4	0.1	0.1	0.1	0.1	0.1	0.1																			
Ref No.		IC2018																																					
MODE	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60																			
CD PLAY	4.7	0.1	4.2	0.1	4.6	4.8	0	0.1	4.1	0.1	0.1	4.2	0.1	0.1	0.1	0.1	0.1	0.1	0.1	0.1																			
STANDBY	4.7	0.1	0.1	0.1	0.1	4.8	0	0.1	0.1	0.1	0.1	0.1	0.1	0.1	0.1	0.1	0	0	0	0																			
Ref No.		IC2018																																					
MODE	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80																			
CD PLAY	3.6	4.7	0.1	4.7	4.7	4.7	4.7	4.6	4.6	4.0	4.6	4.6	4.2	0	4.7	4.7	0.1	0	0	0																			
STANDBY	3.2	3.0	4.8	4.8	4.8	4.8	0.1	0	0	0	0	0.6	0	0	4.8	4.8	4.7	0	0	0																			
Ref No.		IC2018																																					
MODE	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	96	97	98	99	100																			
CD PLAY	0	0	4.5	0	0	0	0	0	0	0	3.2	4.4	-	0	0	0	0	0	0	4.8																			
STANDBY	0	0	0	0	0	0	0	0	0	0	0	0	0.0	0	0	0	0	0	0	4.8																			
Ref No.		IC2019																																					
MODE	1	2	3	4	5	6	7	8																															
CD PLAY	0	4.8	0	0	0	0	0	0																															
STANDBY	0	4.8	0	0	0	0	0	0																															
Ref No.		IC2601																																					
MODE	1	2	3	4	5	6	7	8	9	10	11	12	13	14																									
CD PLAY	0	0	0	6.9	0	0	0	0	0	0	-6.7	0	0	0																									
STANDBY	0	0	0	0.2	0	0	0	0	0	0	0.1	0	0	0																									
Ref No.		IC2602																																					
MODE	1	2	3	4	5	6	7	8																															
CD PLAY	0	0	0	-6.7	0	0	0	6.9																															
STANDBY	0	0	0	0.2	0	0	0	0.2																															

RefNo	Q2000				Q2001				Q2002				Q2003				Q2004			
MODE	E	C	B		E	C	B		E	C	B		E	C	B		E	C	B	
CD PLAY	0	4.6	0		0	0	4.2		0	0	4.2		0	2.2	0		0	0.1	4.4	
STANDBY	0	4.7	0		0	0	4.3		0	0	4.3		0	0.1	0		0	0.1	0.1	

### 18.3. FL P.C.B.

RefNo	IC6901																			
MODE	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
CD PLAY	-26.5	-26.5	3.2	0	1.8	1.8	4.3	4.6	4.5	0.2	-26.5	-26.5	-24.0	-27.0	-21.0	-21.0	-23.9	-23.9	-23.9	
STANDBY	0	0	0	0	1.0	1.0	2.0	0	0	0	-0.2	-0.2	-0.2	-0.1	-0.1	-0.1	-0.1	-0.1	-0.1	

### 18.4. Loading Motor P.C.B., Tray Motor P.C.B., Sensor P.C.B.

Loading Motor P.C.B.

RefNo	Q9001			
MODE	1	2	3	4
CD PLAY	1.2	4.5	0	0
STANDBY	0.2	4.8	0	0












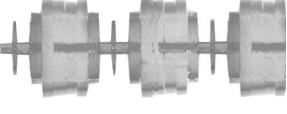





Tray Motor P.C.B.

RefNo	Q9101				Q9102			
MODE	1	2	3	4	1	2	3	4
CD PLAY	1.2	0	4.7	0	2.5	1.2	0.1	0
STANDBY	0.1	0	4.8	0	0.4	-0.2	4.8	0

Sensor P.C.B.

RefNo	Q9103			
MODE	1	2	3	4
CD PLAY	3.7	2.5	0	0.2
STANDBY	0.2	0.4	0	4.7

# 19 Wave Form Chart

<p>WF No. IC2006-2 (PLAY)</p>  <p>0.8Vp-p(20usec/div)</p>	<p>WF No. IC2006-4 (PLAY)</p>  <p>1.1Vp-p(20usec/div)</p>	<p>WF No. IC2006-6 (PLAY)</p>  <p>1.1Vp-p(20usec/div)</p>	<p>WF No. IC2006-8 (PLAY)</p>  <p>0.6Vp-p(20usec/div)</p>
<p>WF No. IC2006-9 (PLAY)</p>  <p>0.6Vp-p(20usec/div)</p>	<p>WF No. IC2006-11 (PLAY)</p>  <p>1.0Vp-p(20usec/div)</p>	<p>WF No. IC2006-12 (PLAY)</p>  <p>1.0Vp-p(20usec/div)</p>	<p>WF No. IC2006-13 (PLAY)</p>  <p>2.1Vp-p(20usec/div)</p>
<p>WF No. IC2006-14 (PLAY)</p>  <p>2.1Vp-p(20usec/div)</p>	<p>WF No. IC2006-15 (PLAY)</p>  <p>2.1Vp-p(20usec/div)</p>	<p>WF No. IC2006-16 (PLAY)</p>  <p>1.2Vp-p(20usec/div)</p>	<p>WF No. IC2011-17 (PLAY)</p>  <p>0.03Vp-p(200usec/div)</p>
<p>WF No. IC2011-18 (PLAY)</p>  <p>0.13Vp-p(200usec/div)</p>	<p>WF No. IC2011-28 (PLAY)</p>  <p>0.8Vp-p(5msec/div)</p>	<p>WF No. IC2011-39 (PLAY)</p>  <p>0.1Vp-p(200usec/div)</p>	<p>WF No. IC2013-1 (PLAY)</p>  <p>2.2Vp-p(200usec/div)</p>
<p>WF No. IC2018-12 (PLAY)</p>  <p>4.5Vp-p(100nsec/div)</p>			

## 20 Schematic Diagram Notes

- This schematic diagram may be modified at any time with the development of new technology.

### Notes:

<b>S6801:</b>	Play and memory switch ( ▶ Memory).
<b>S6802:</b>	R. skip, search and Tuning switch (  ◀◀ / ◀◀ / TUNING ∨ ).
<b>S6803:</b>	F. skip, search and Tuning switch ( ▶▶ / ▶▶ / TUNING ^ ).
<b>S6804:</b>	Pause and FM mode switch ( ■ FM MODE).
<b>S6805:</b>	Tray open / close switch ( ▲ Open / Close).
<b>S6806:</b>	Disc skip switch (DISC SKIP).
<b>S6807:</b>	Disc exchange switch (DISC EXCHANGE).
<b>S6808:</b>	Stop and TUNE mode switch ( ■ TUNE MODE).
<b>S6900:</b>	Standby / on switch (POWER ⏻ / ⏻ ).
<b>S6901:</b>	Source select switch (INPUT SELECTOR).
<b>S6902-S6906:</b>	Disc switch (DISC1-DISC5).
<b>S6907:</b>	Harmonic bass switch (H.BASS).
<b>S6909:</b>	Progressive out switch (PROGRESSIVE).
<b>S6910:</b>	CD mode switch [CD MODE].
<b>S9001:</b>	Loading switch.
<b>VR6800:</b>	Volume control.

- Indicated voltage values are the standard values for the unit measured by the DC electronic circuit tester (high-impedance) with the chassis taken as standard. Therefore, there may exist some errors in the voltage values, depending on the internal impedance of the DC circuit tester.

- Important safety notice:








Components identified by △ mark have special characteristics important for safety.

Furthermore, special parts which have purposes of fire-retardant (resistors), high-quality sound (capacitors), low-noise (resistors), etc. are used.

When replacing any of components, be sure to use only manufacturer's specified parts shown in the parts list.

- The supply part number is described alone in the replacement parts list.

- Voltage and signal line

	: +B Signal line
	: CD-DA signal line
	: Main signal line
	: DVD (Video) signal line
	: DVD (Audio) signal line
	: FM/AM signal line
	: -B Signal line

### Caution!

IC and LSI are sensitive to static electricity.

Secondary trouble can be prevented by taking care during repair.

Cover the parts boxes made of plastics with aluminum foil.


Ground the soldering iron.

Put a conductive mat on the work table.


Do not touch the legs of IC or LSI with the fingers directly.



# 21 Block Diagram

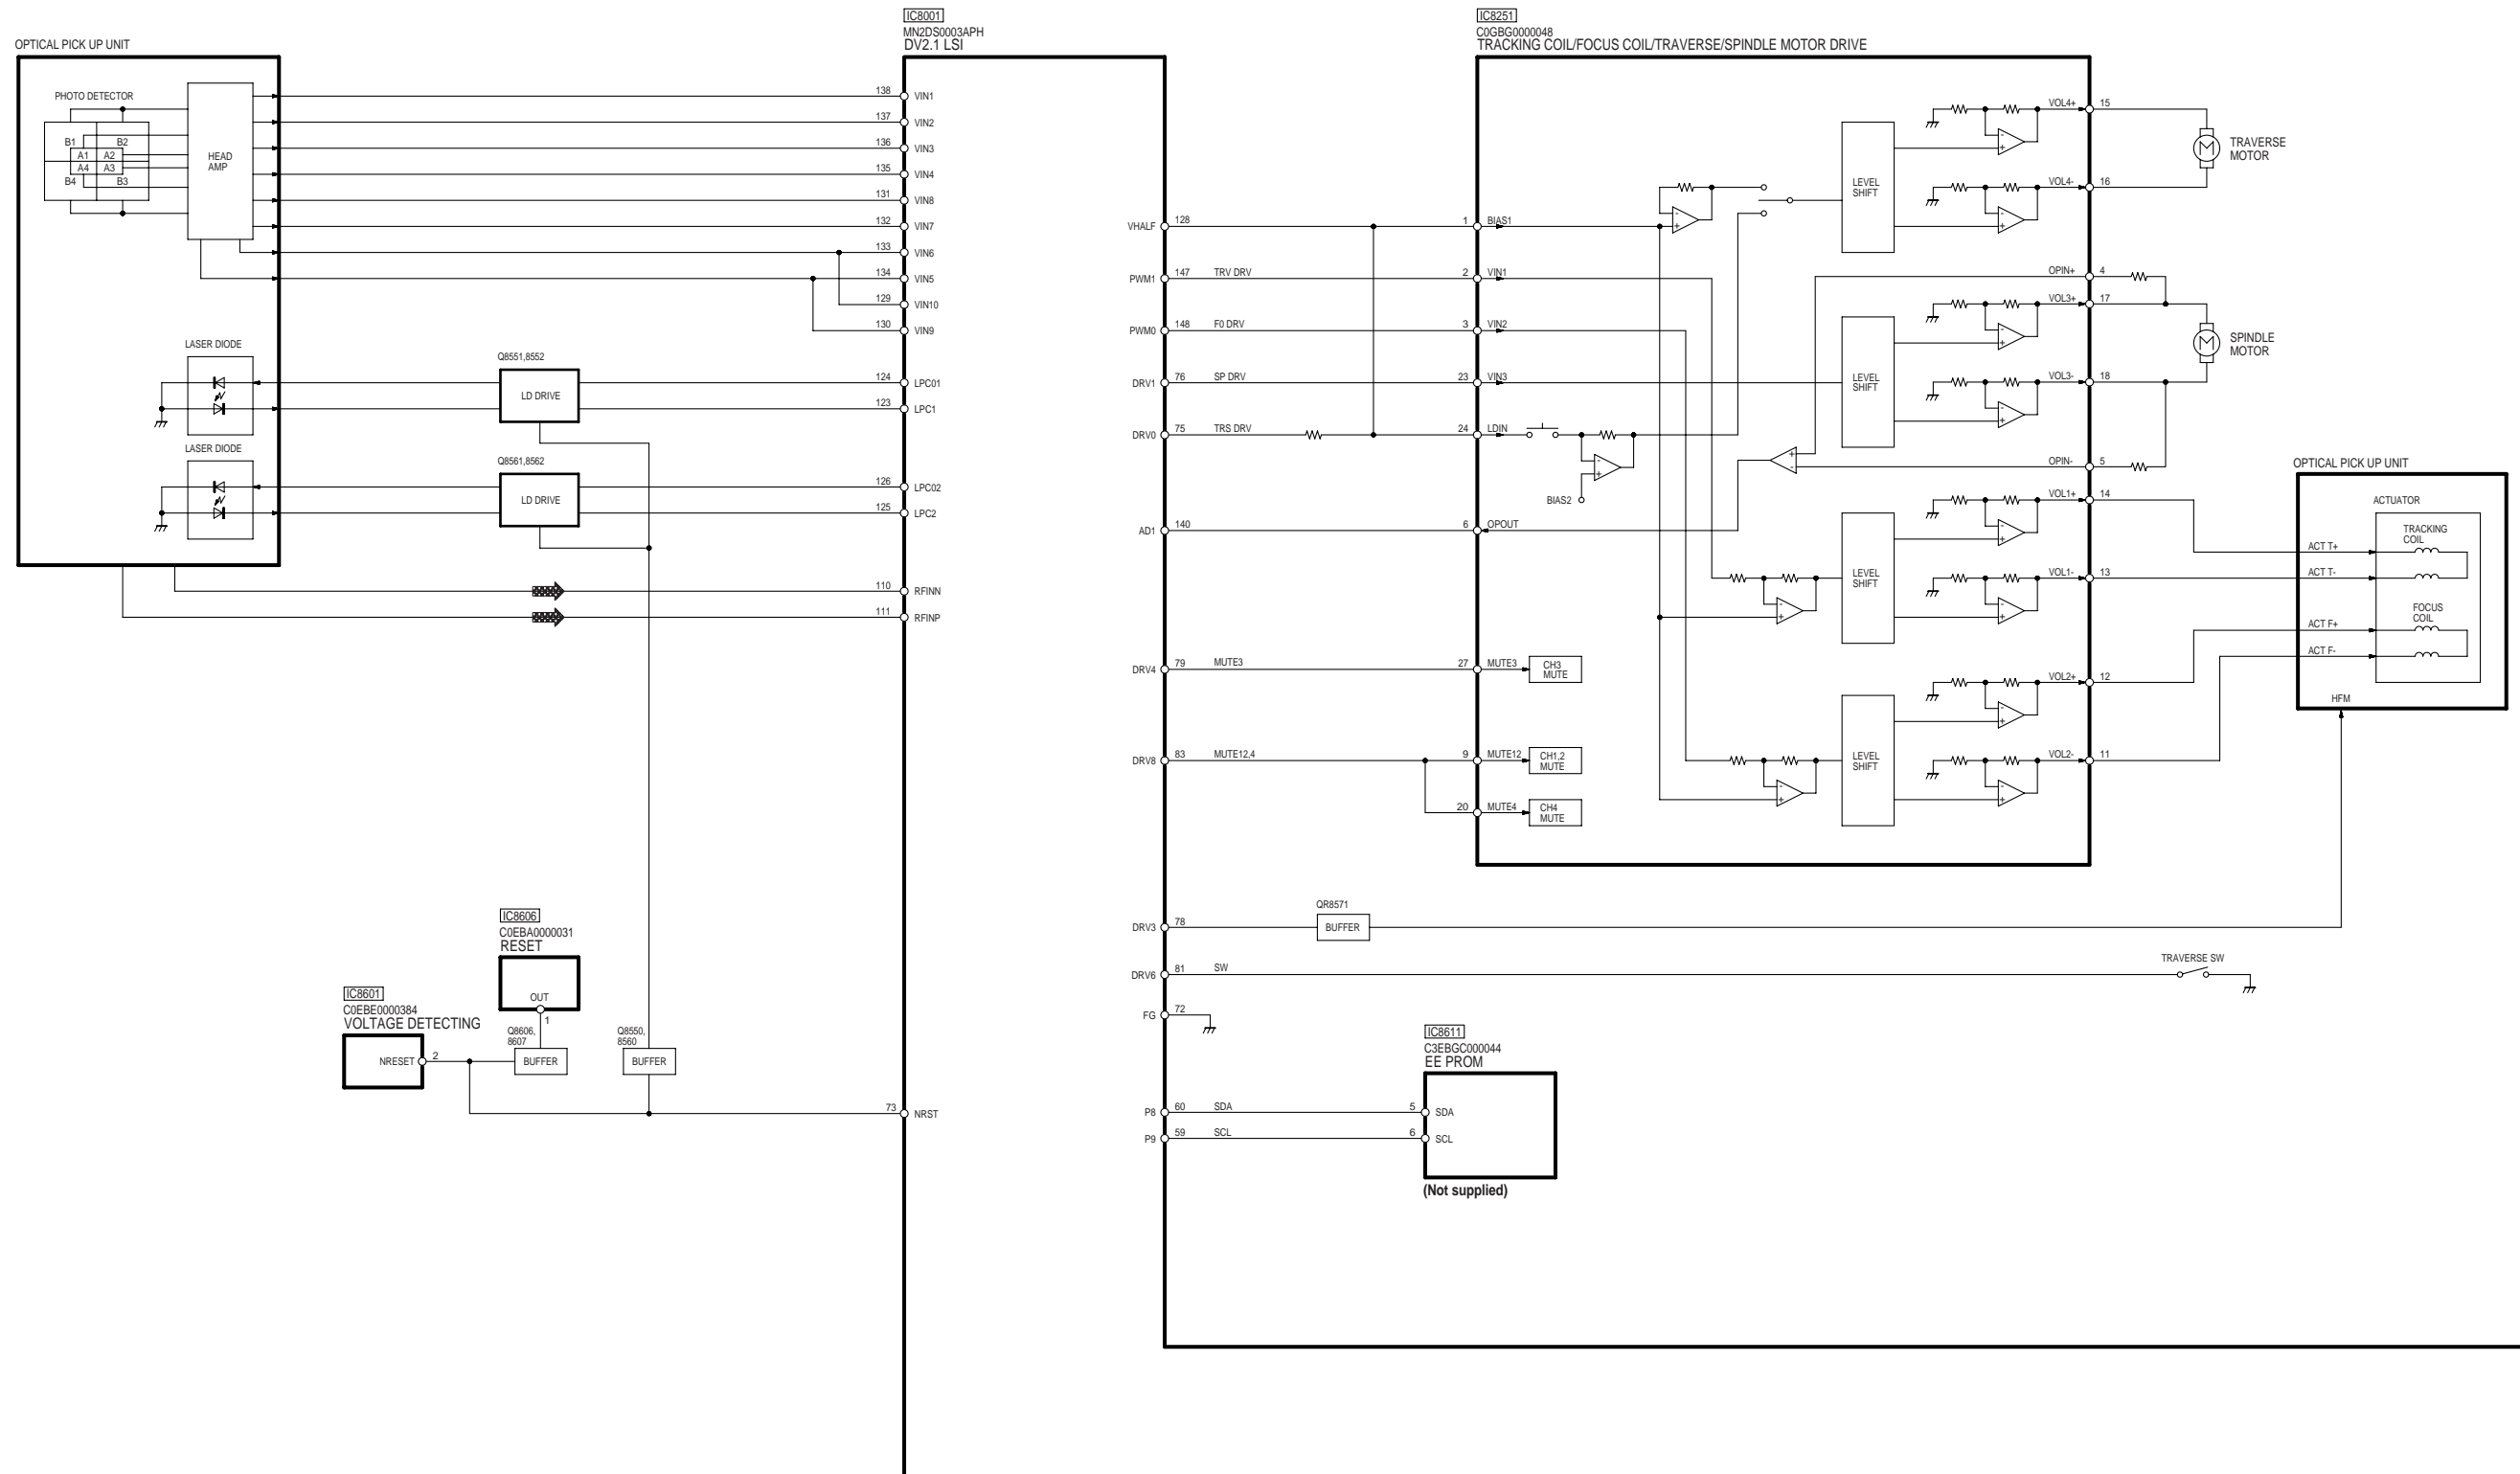



SA-HT935EE BLOCK DIAGRAM

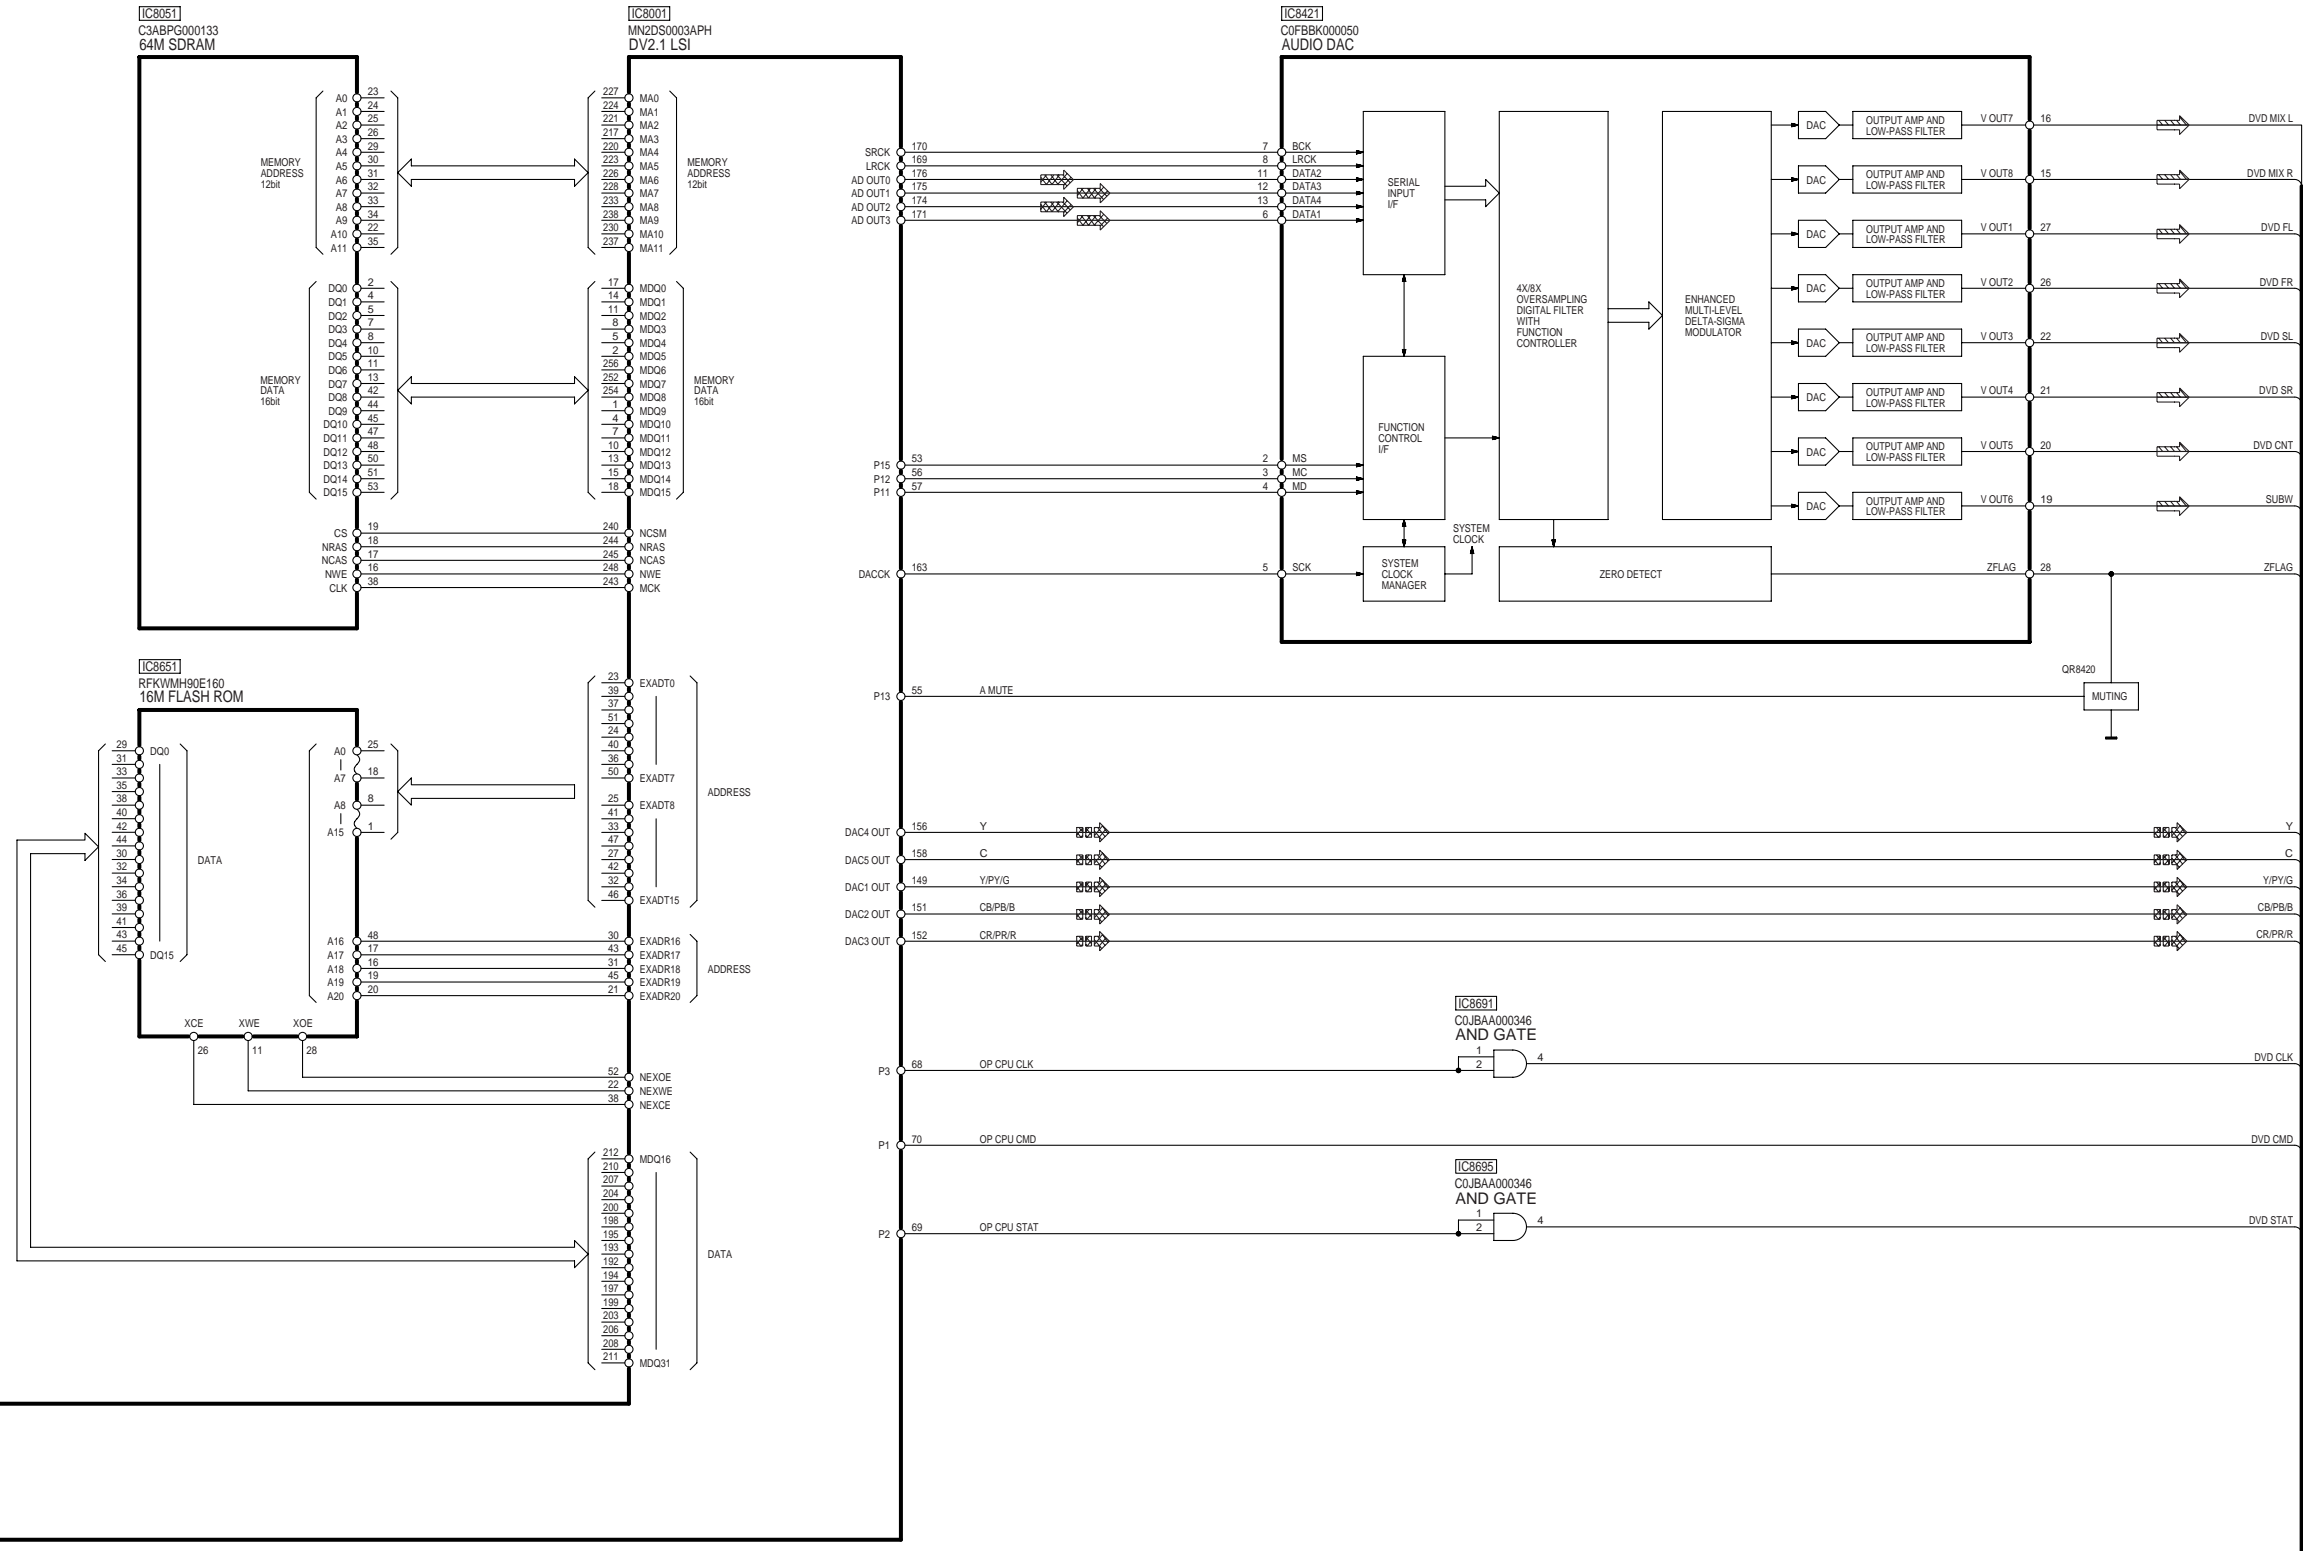


SA-HT935EE BLOCK DIAGRAM



TUNER PACK

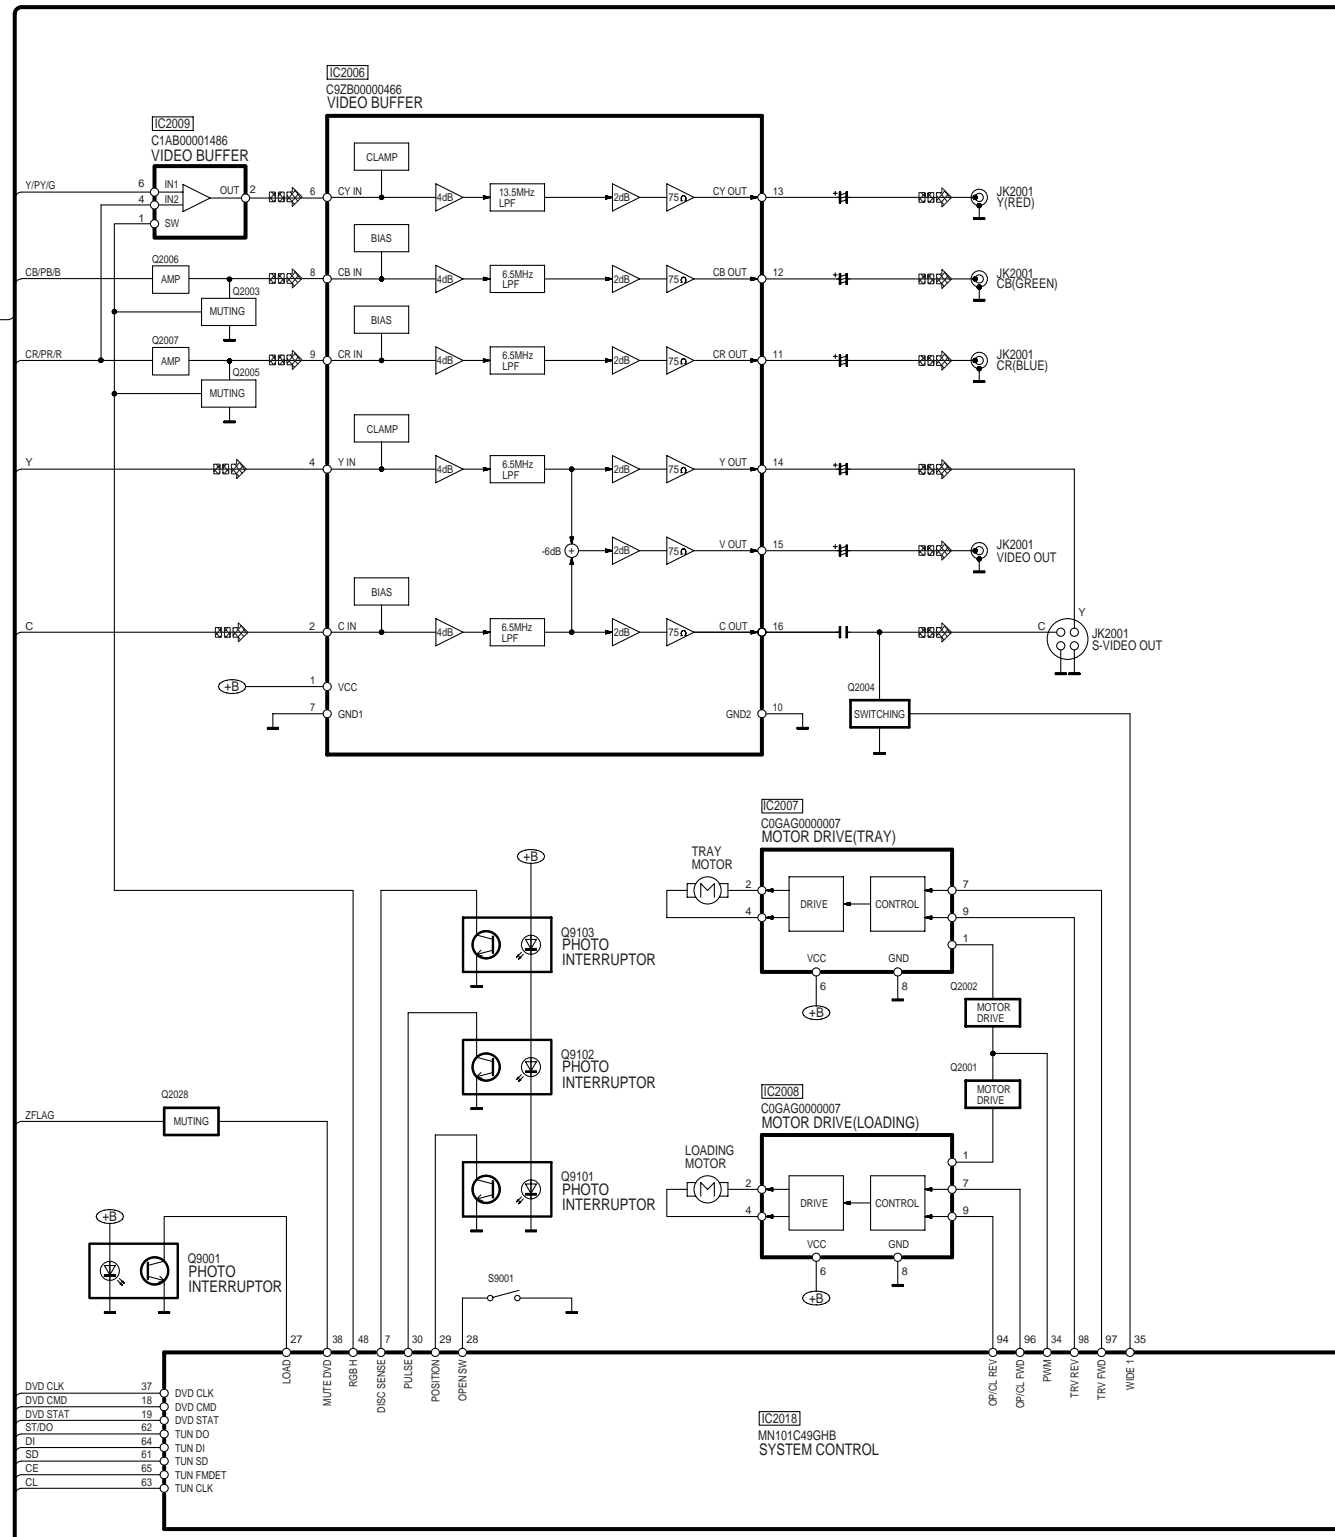
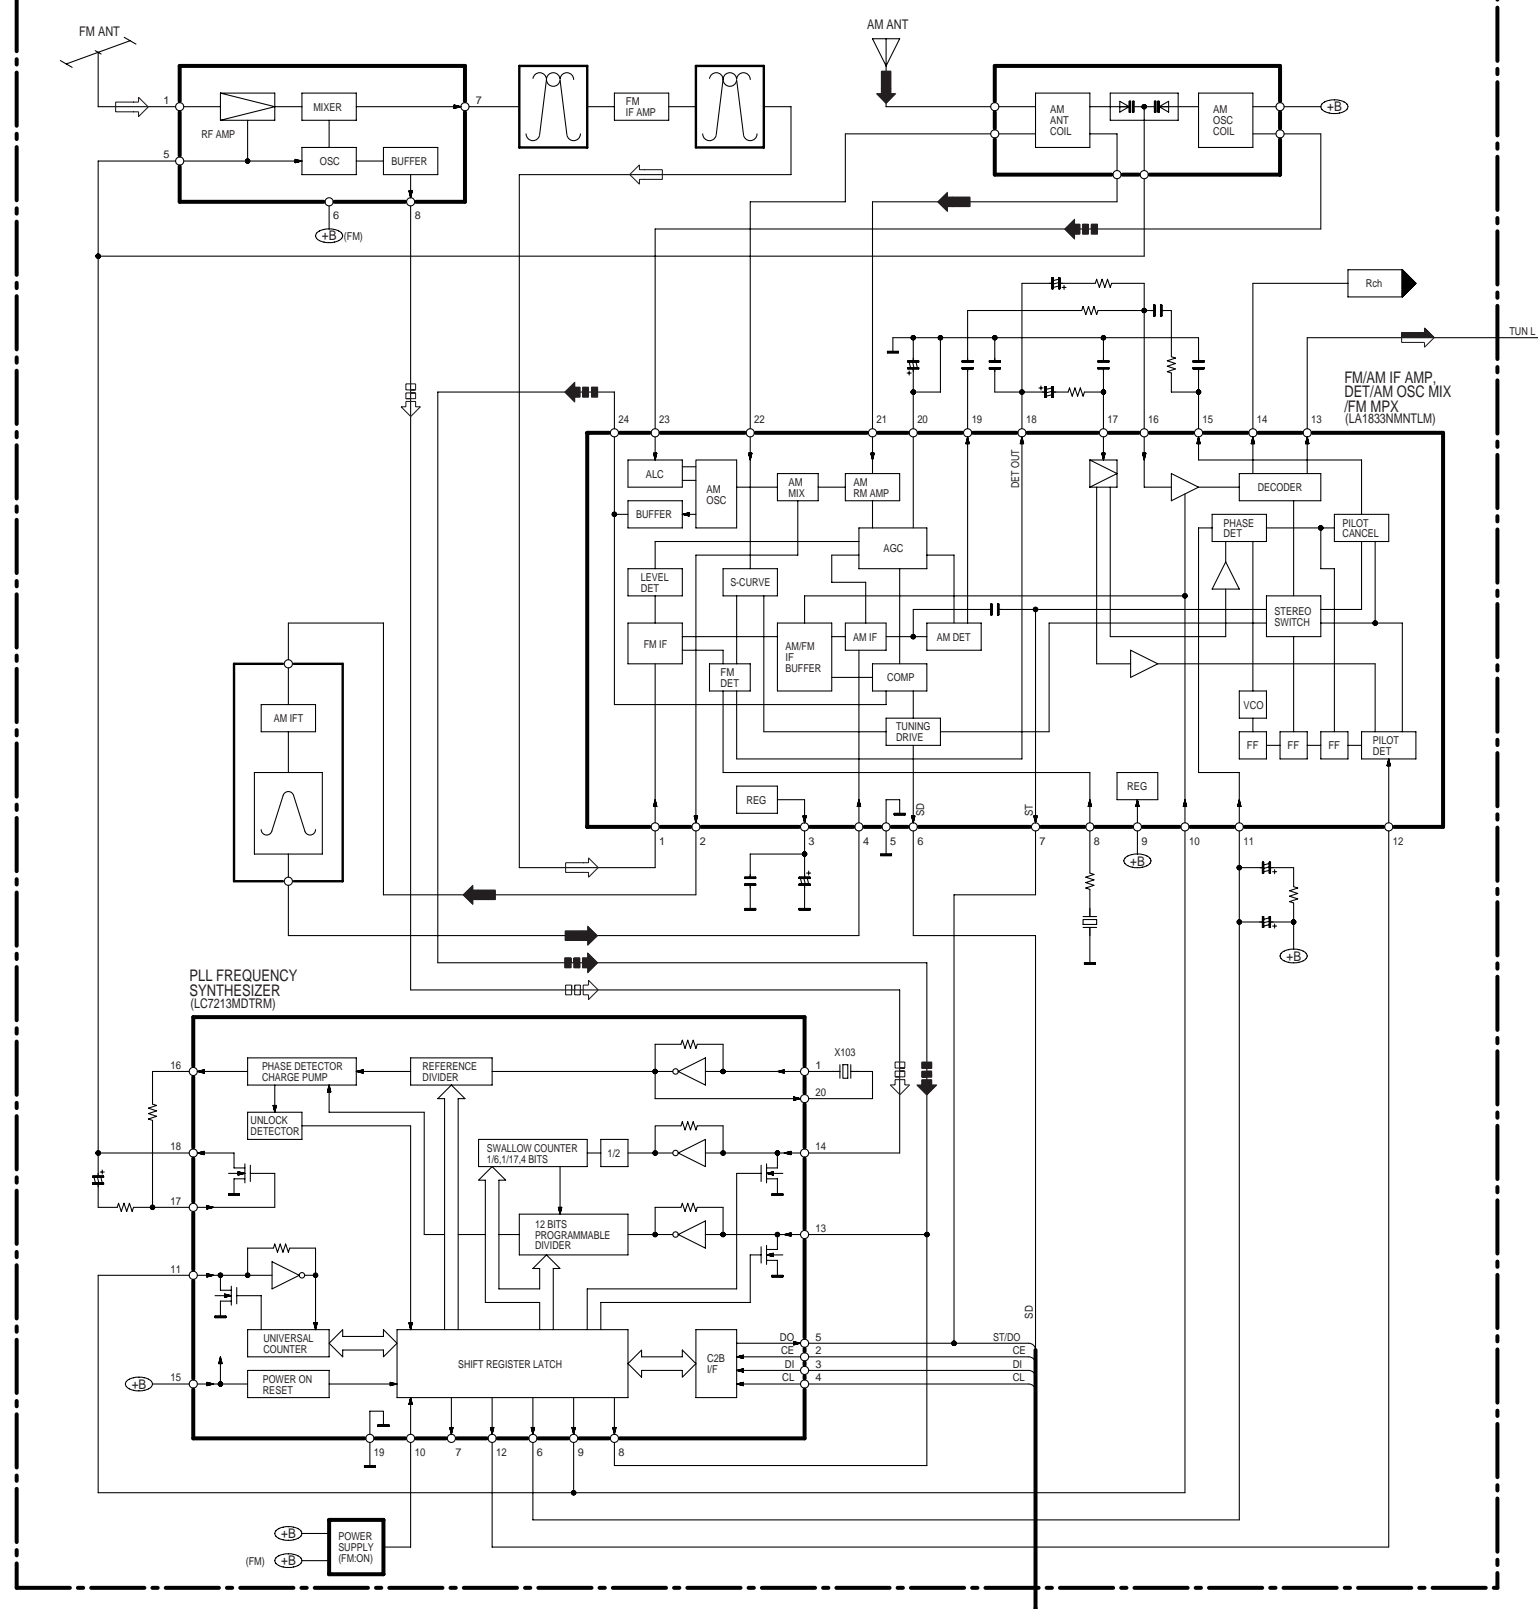


SA-HT935EE BLOCK DIAGRAM

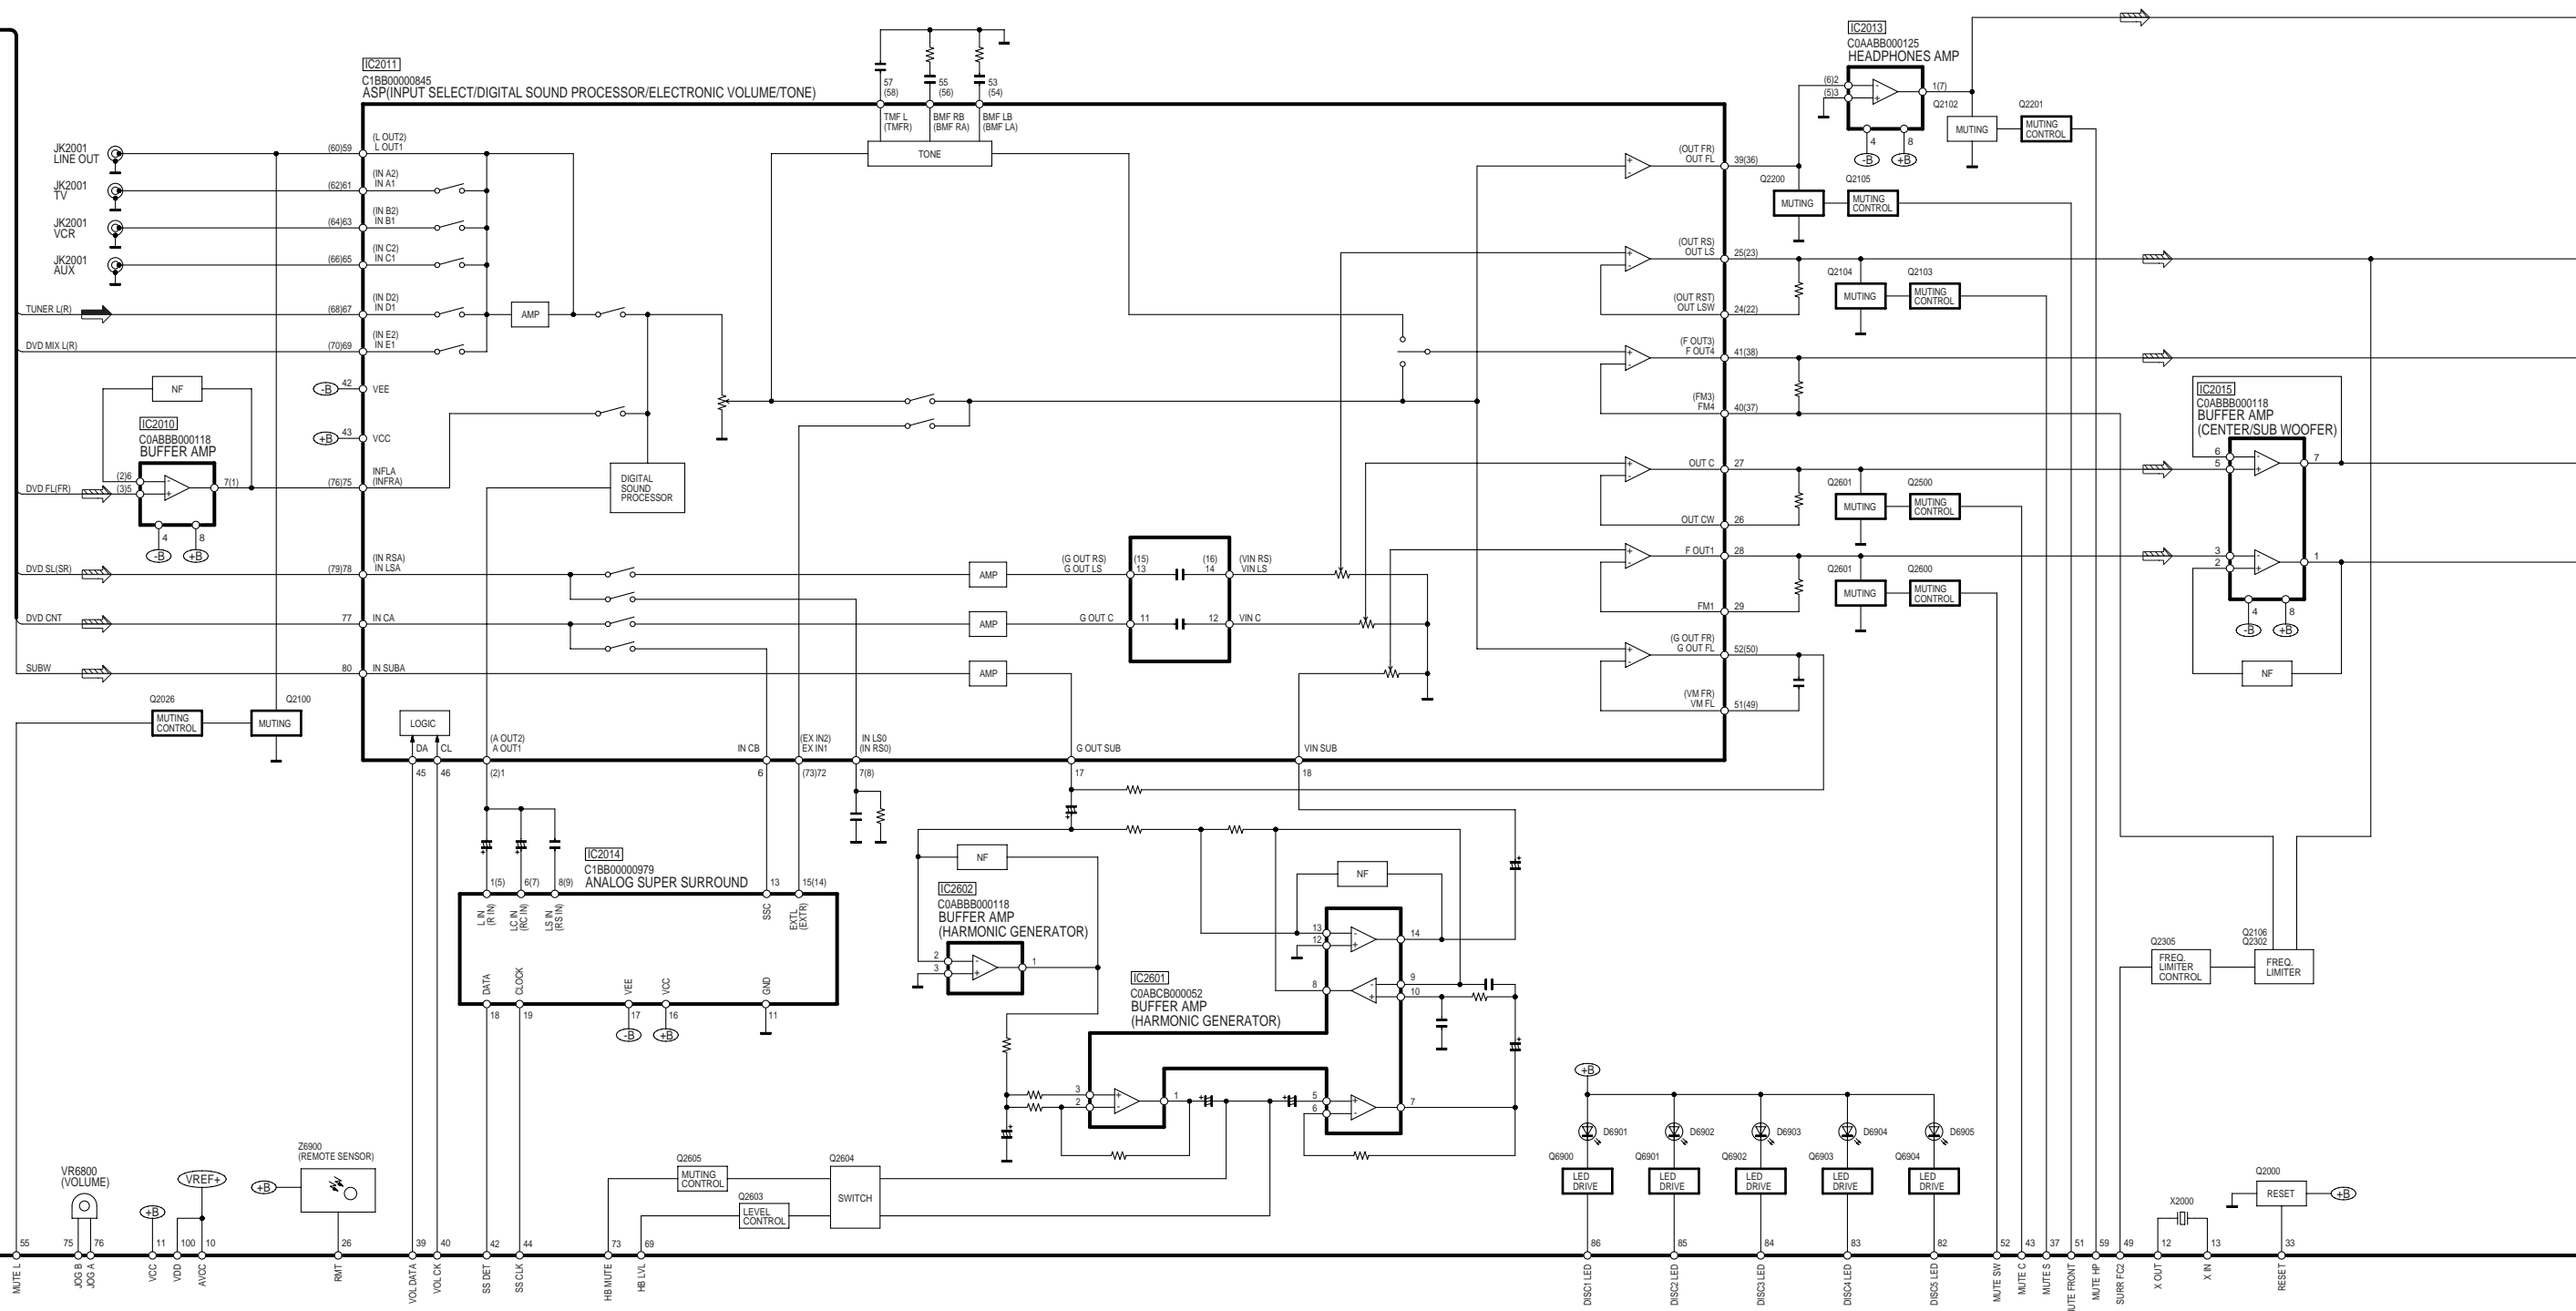

SA-HT935EE BLOCK DIAGRAM

SIGNAL LINES

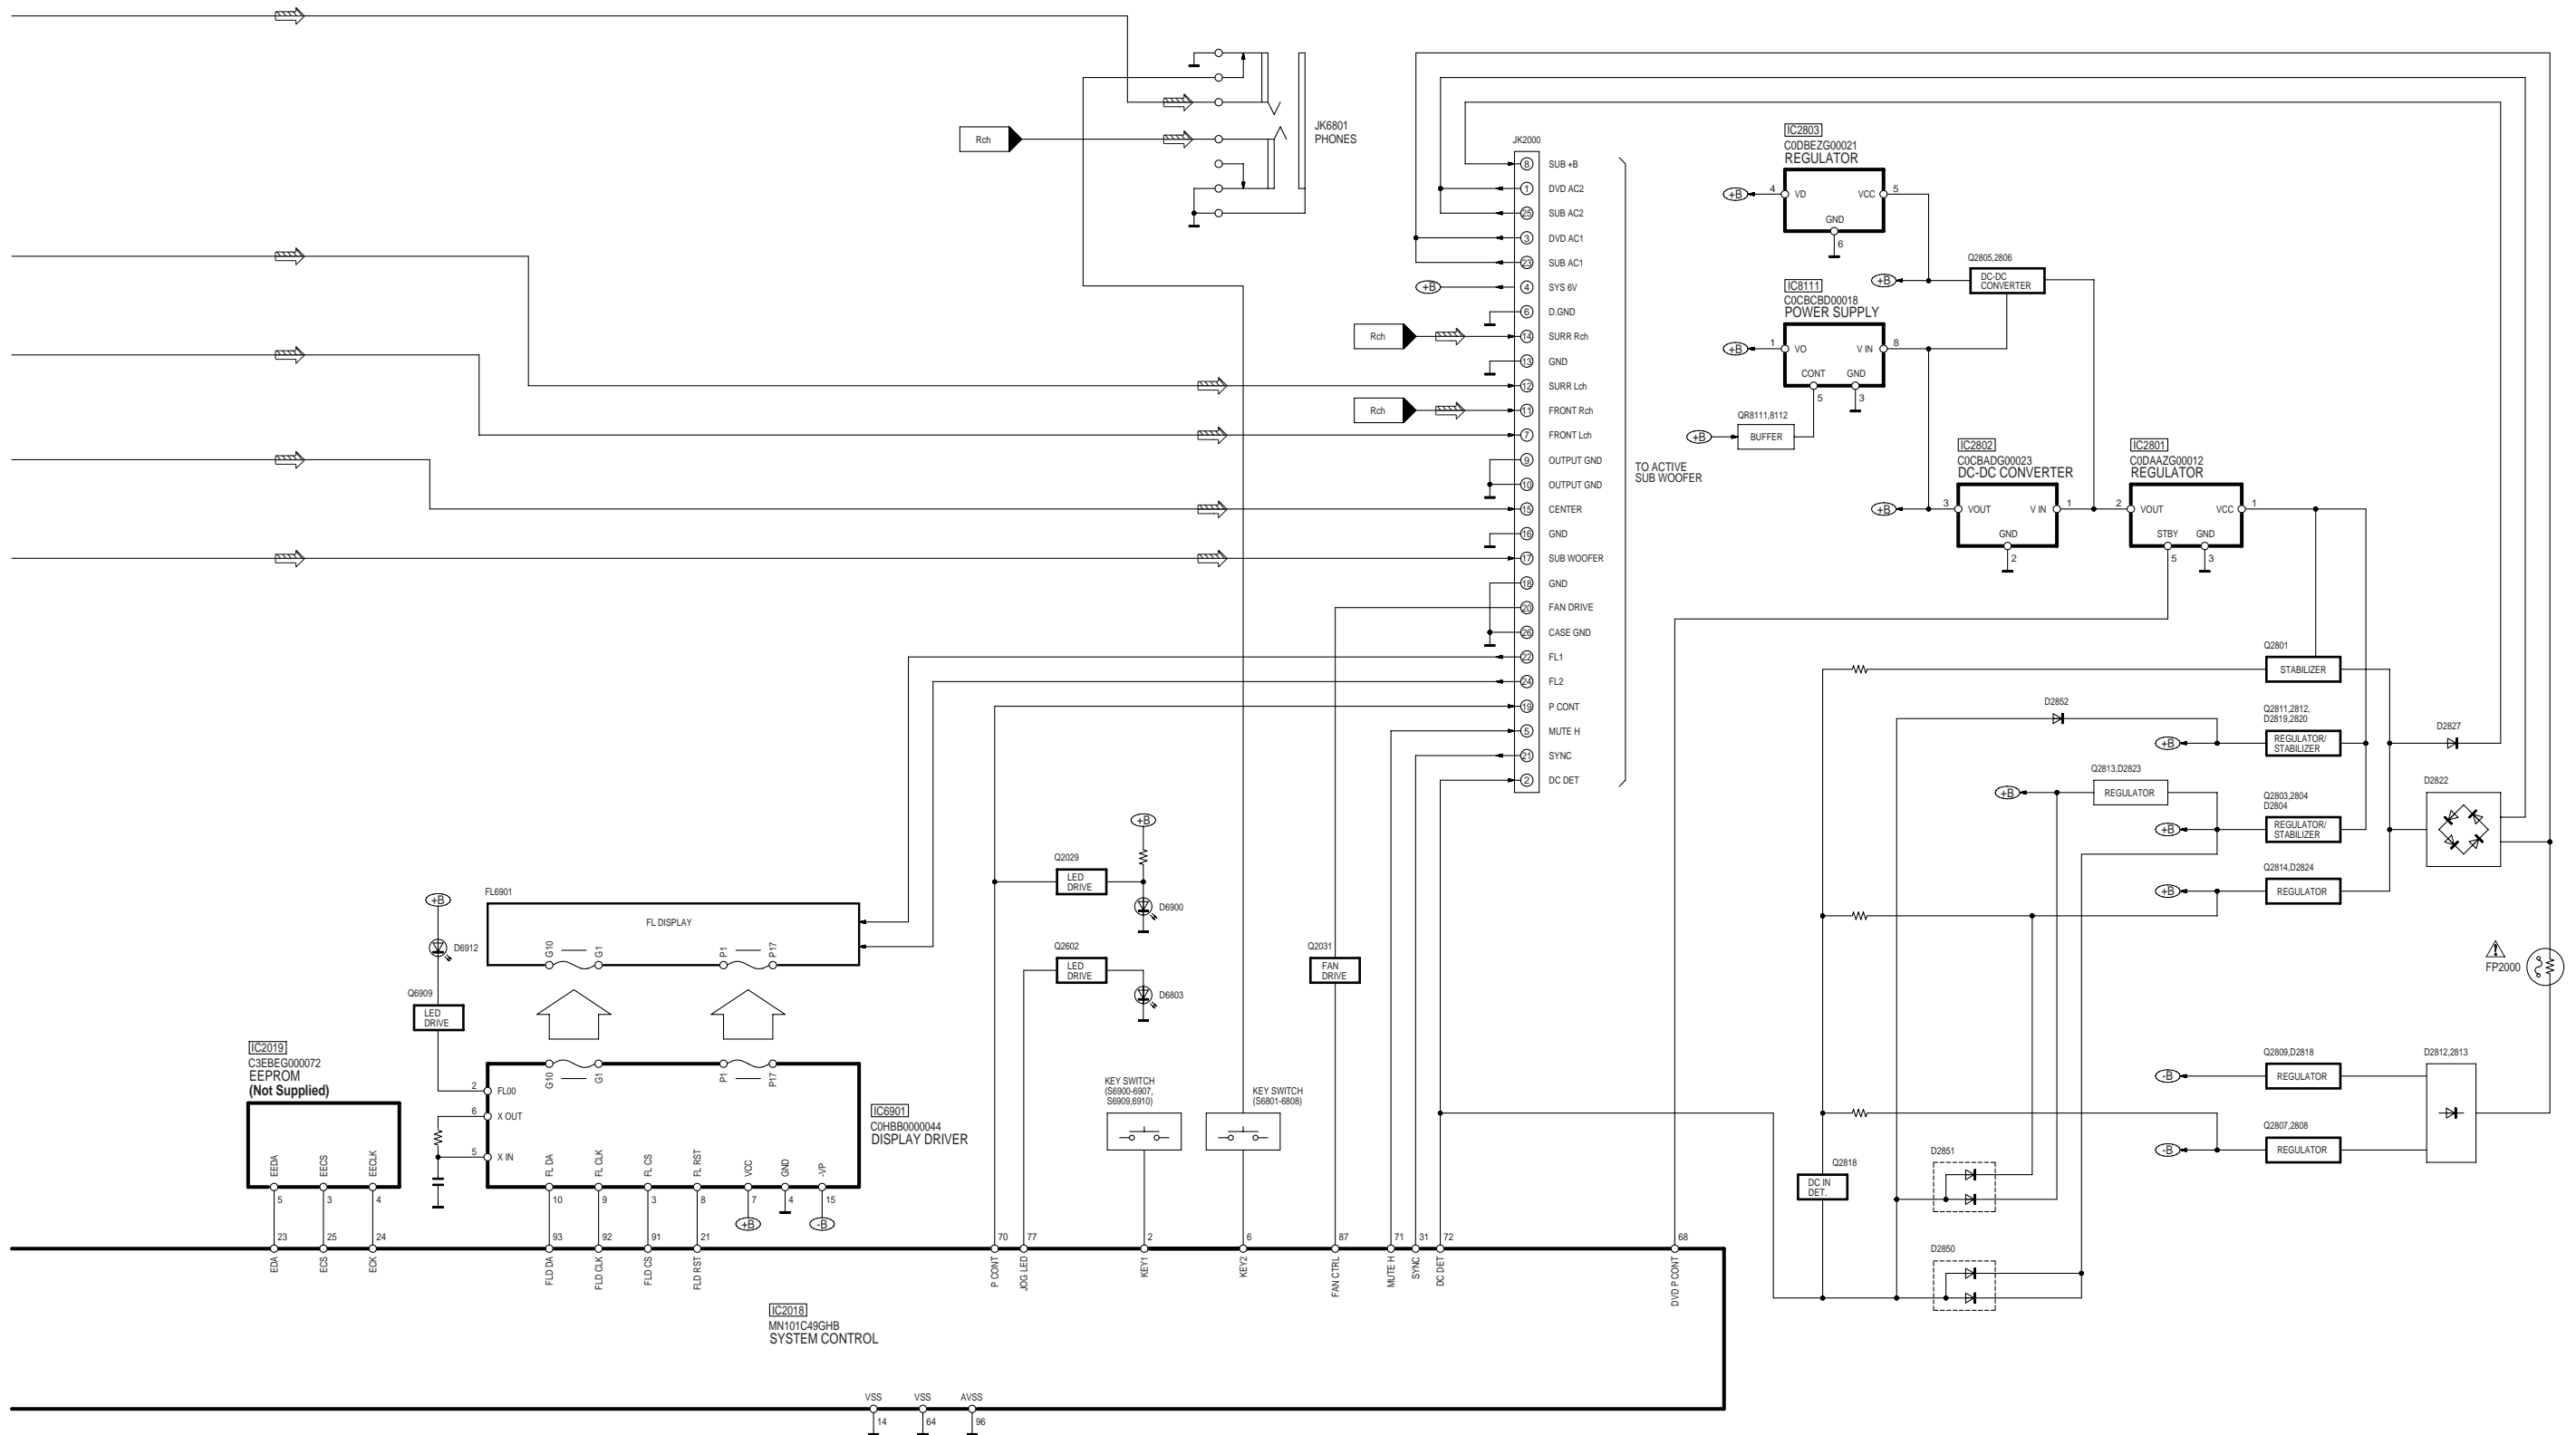


SA-HT935EE BLOCK DIAGRAM



# 22 Schematic Diagram

SCHEMATIC DIAGRAM-1

## A DVD MODULE CIRCUIT

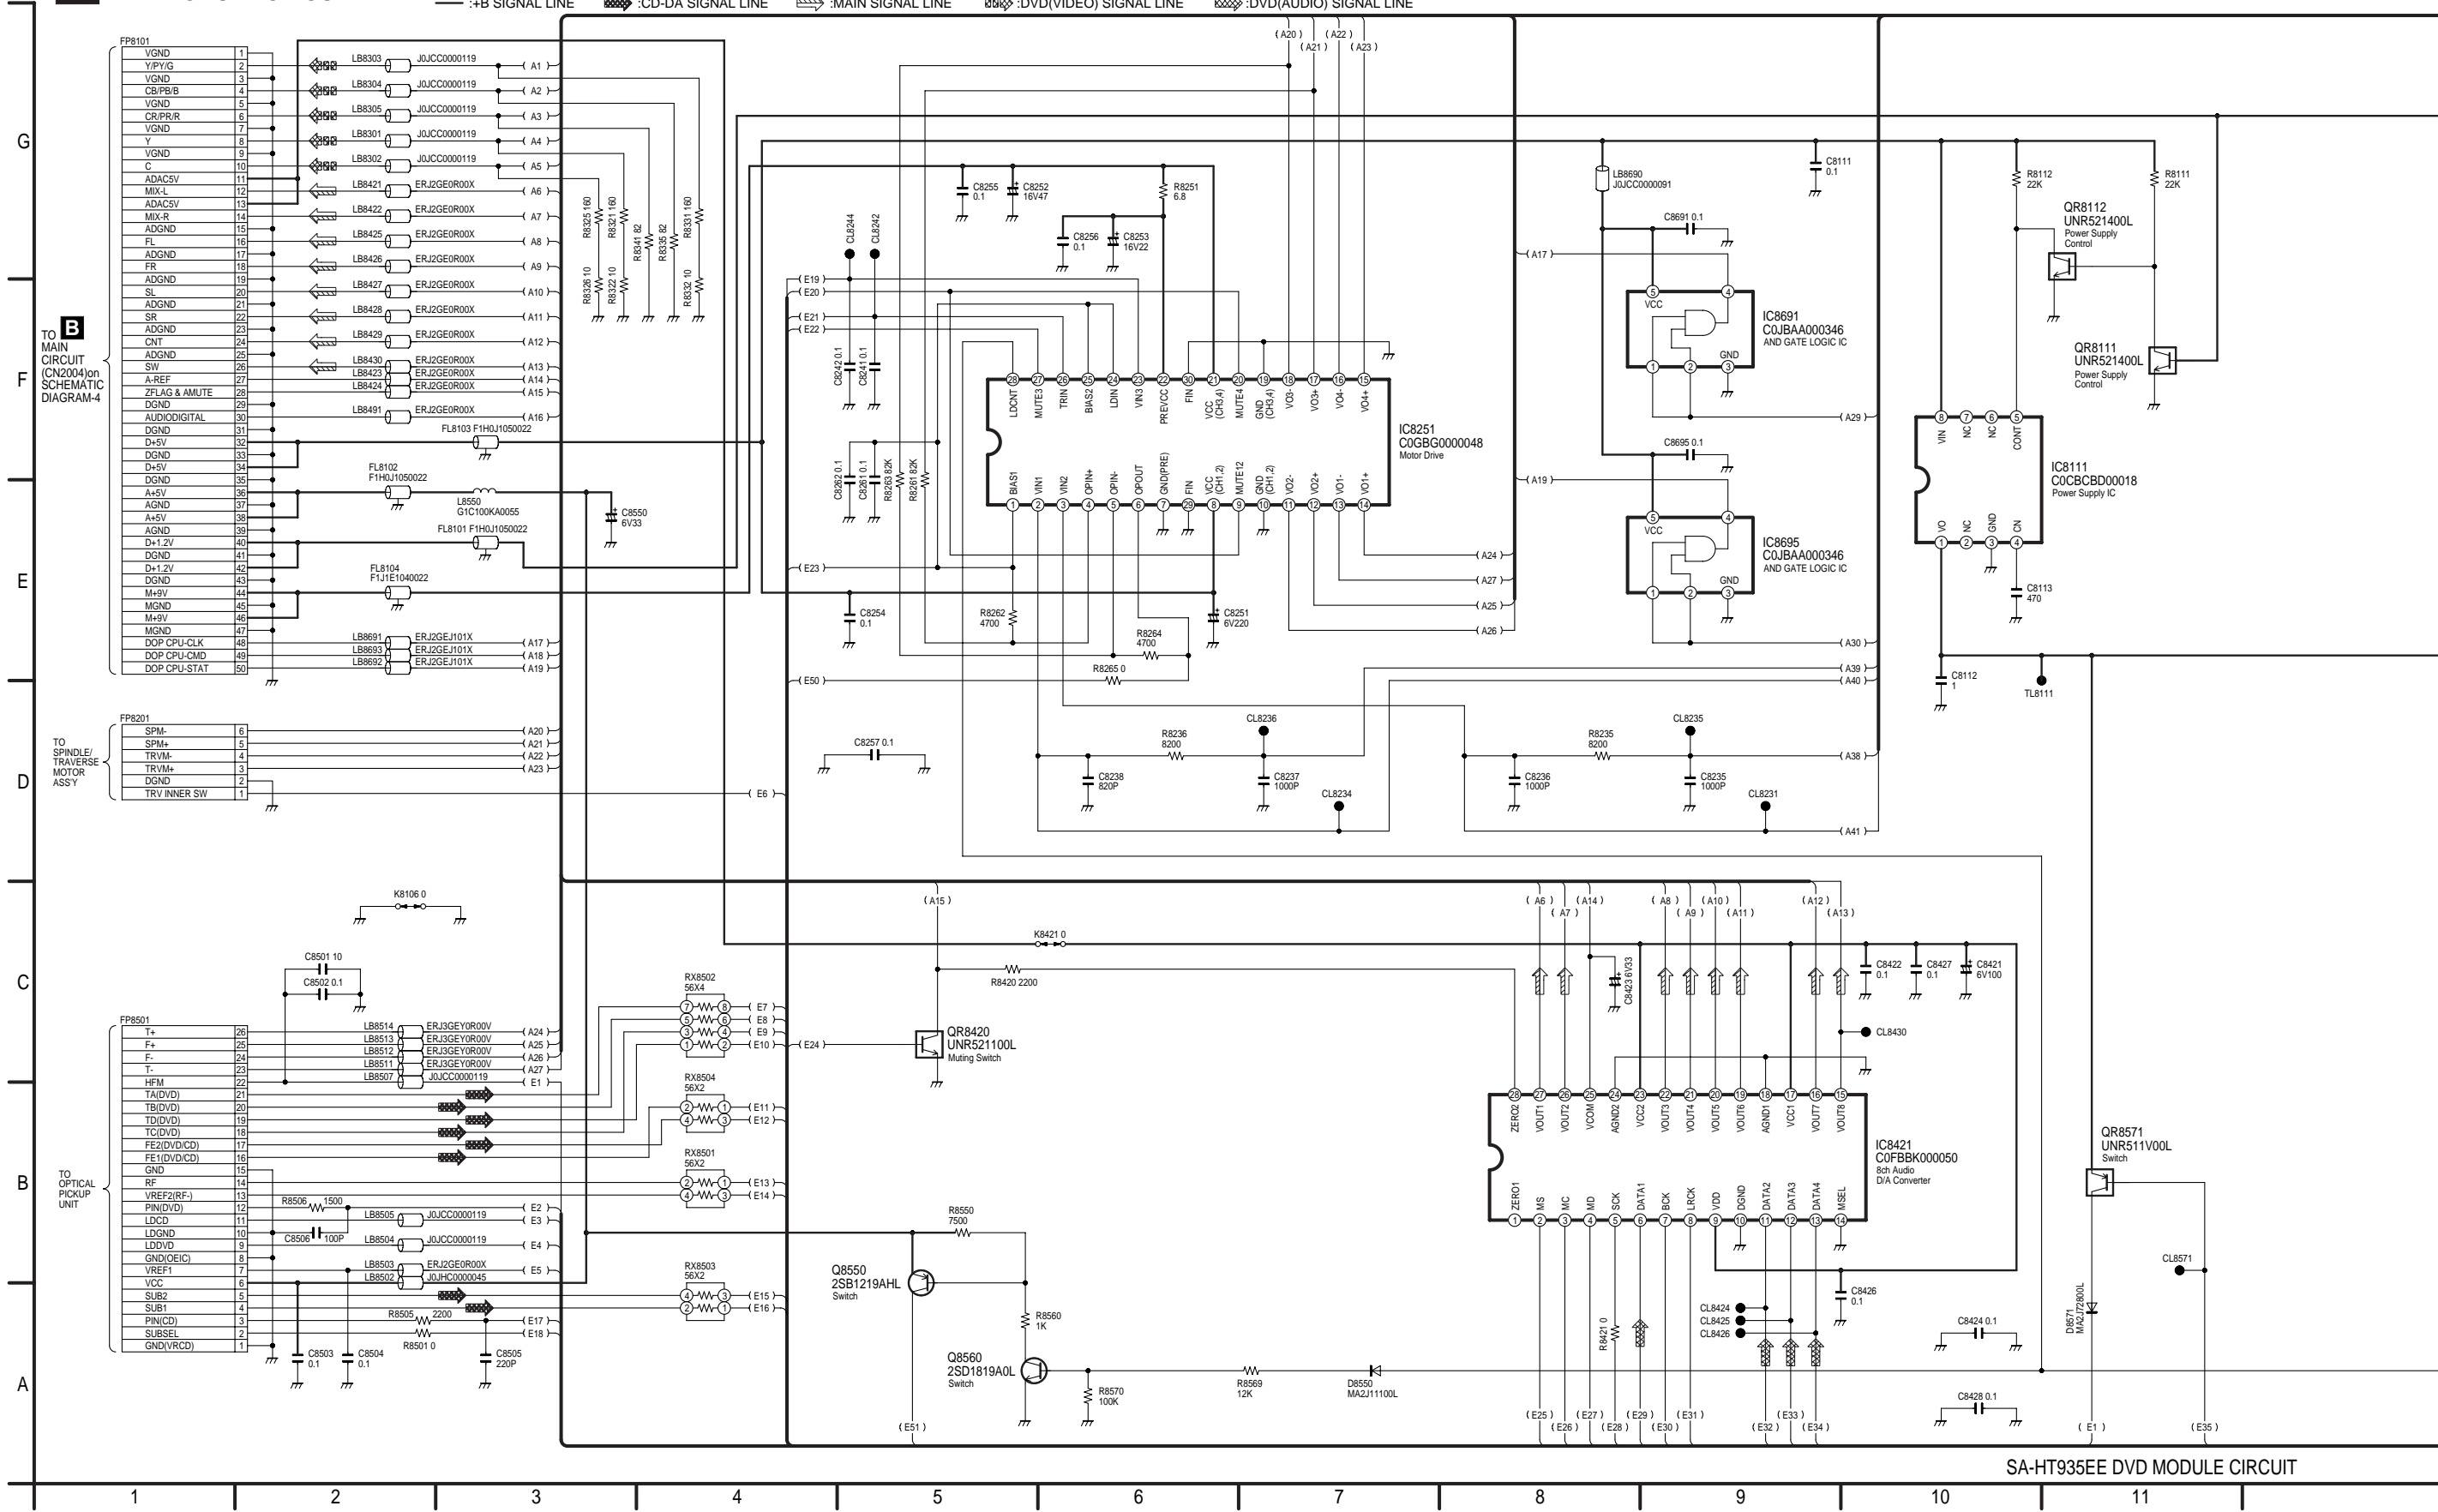


SA-HT935EE DVD MODULE CIRCUIT

SCHEMATIC DIAGRAM-2

**A** DVD MODULE CIRCUIT


— :+B SIGNAL LINE    :CD-DA SIGNAL LINE    :DVD(VIDEO) SIGNAL LINE    :DVD(AUDIO) SIGNAL LINE

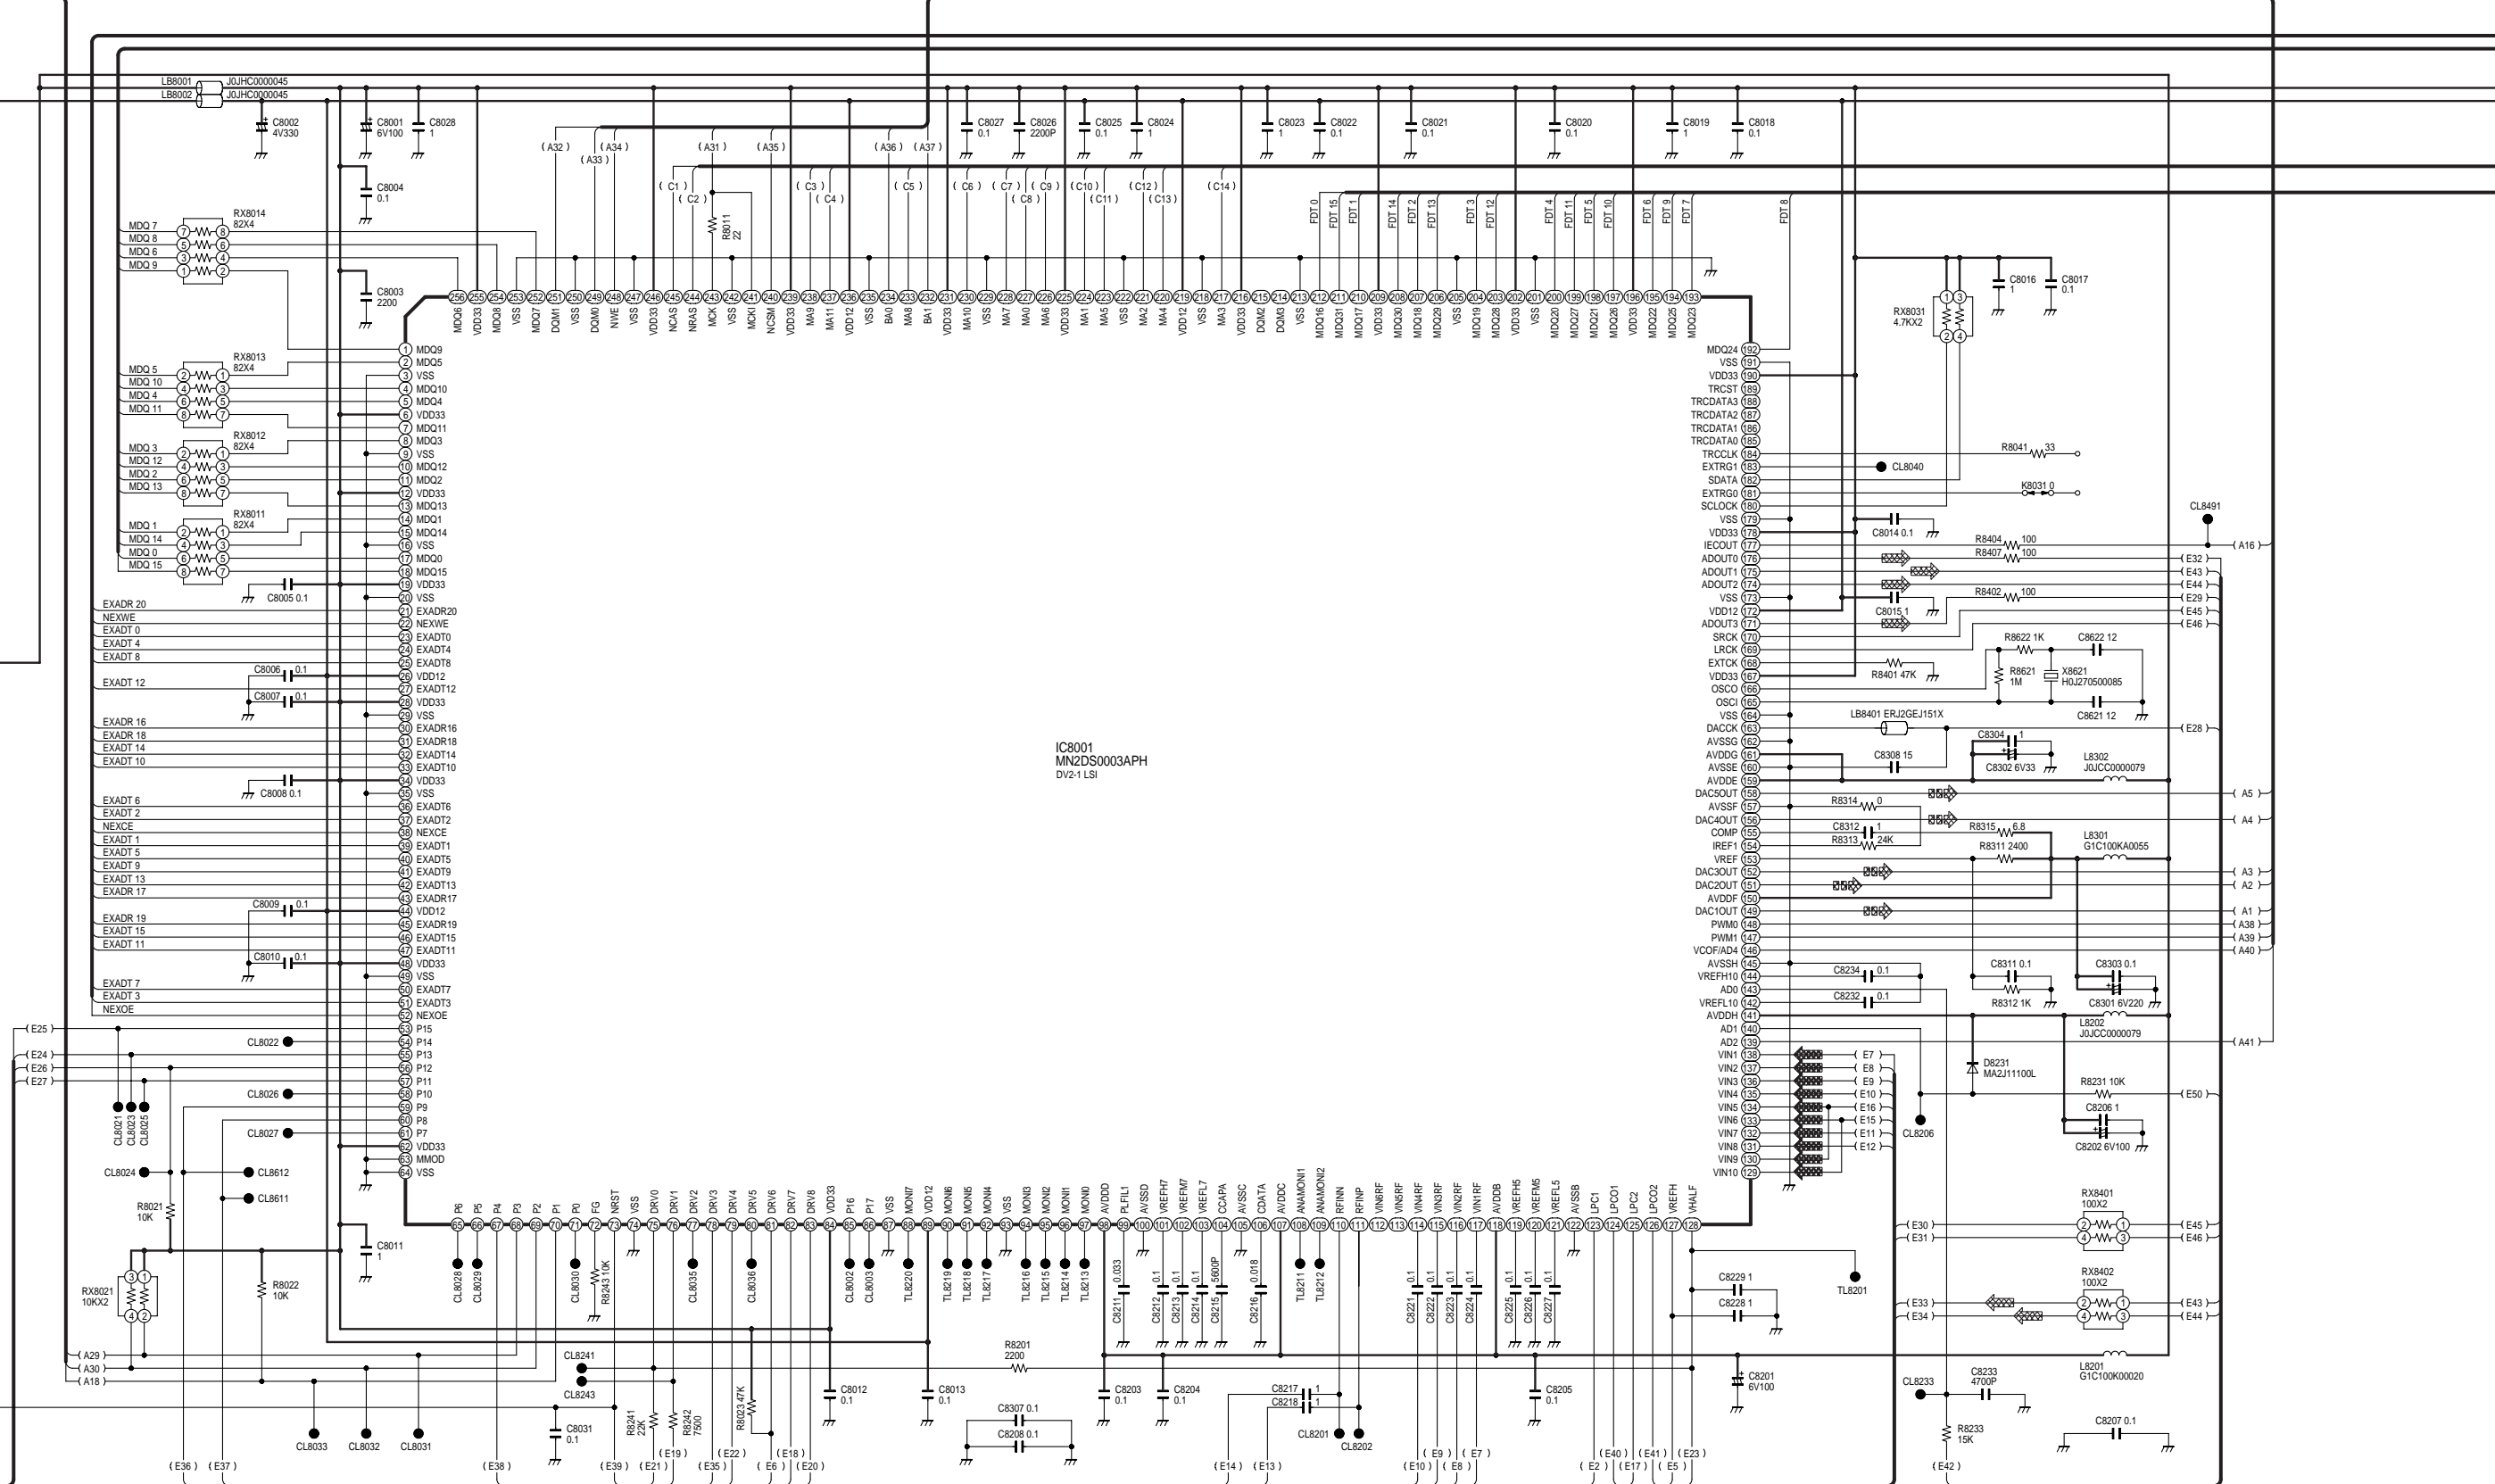

SA-HT935EE DVD MODULE CIRCUIT

SCHEMATIC DIAGRAM-3

**A** DVD MODULE CIRCUIT

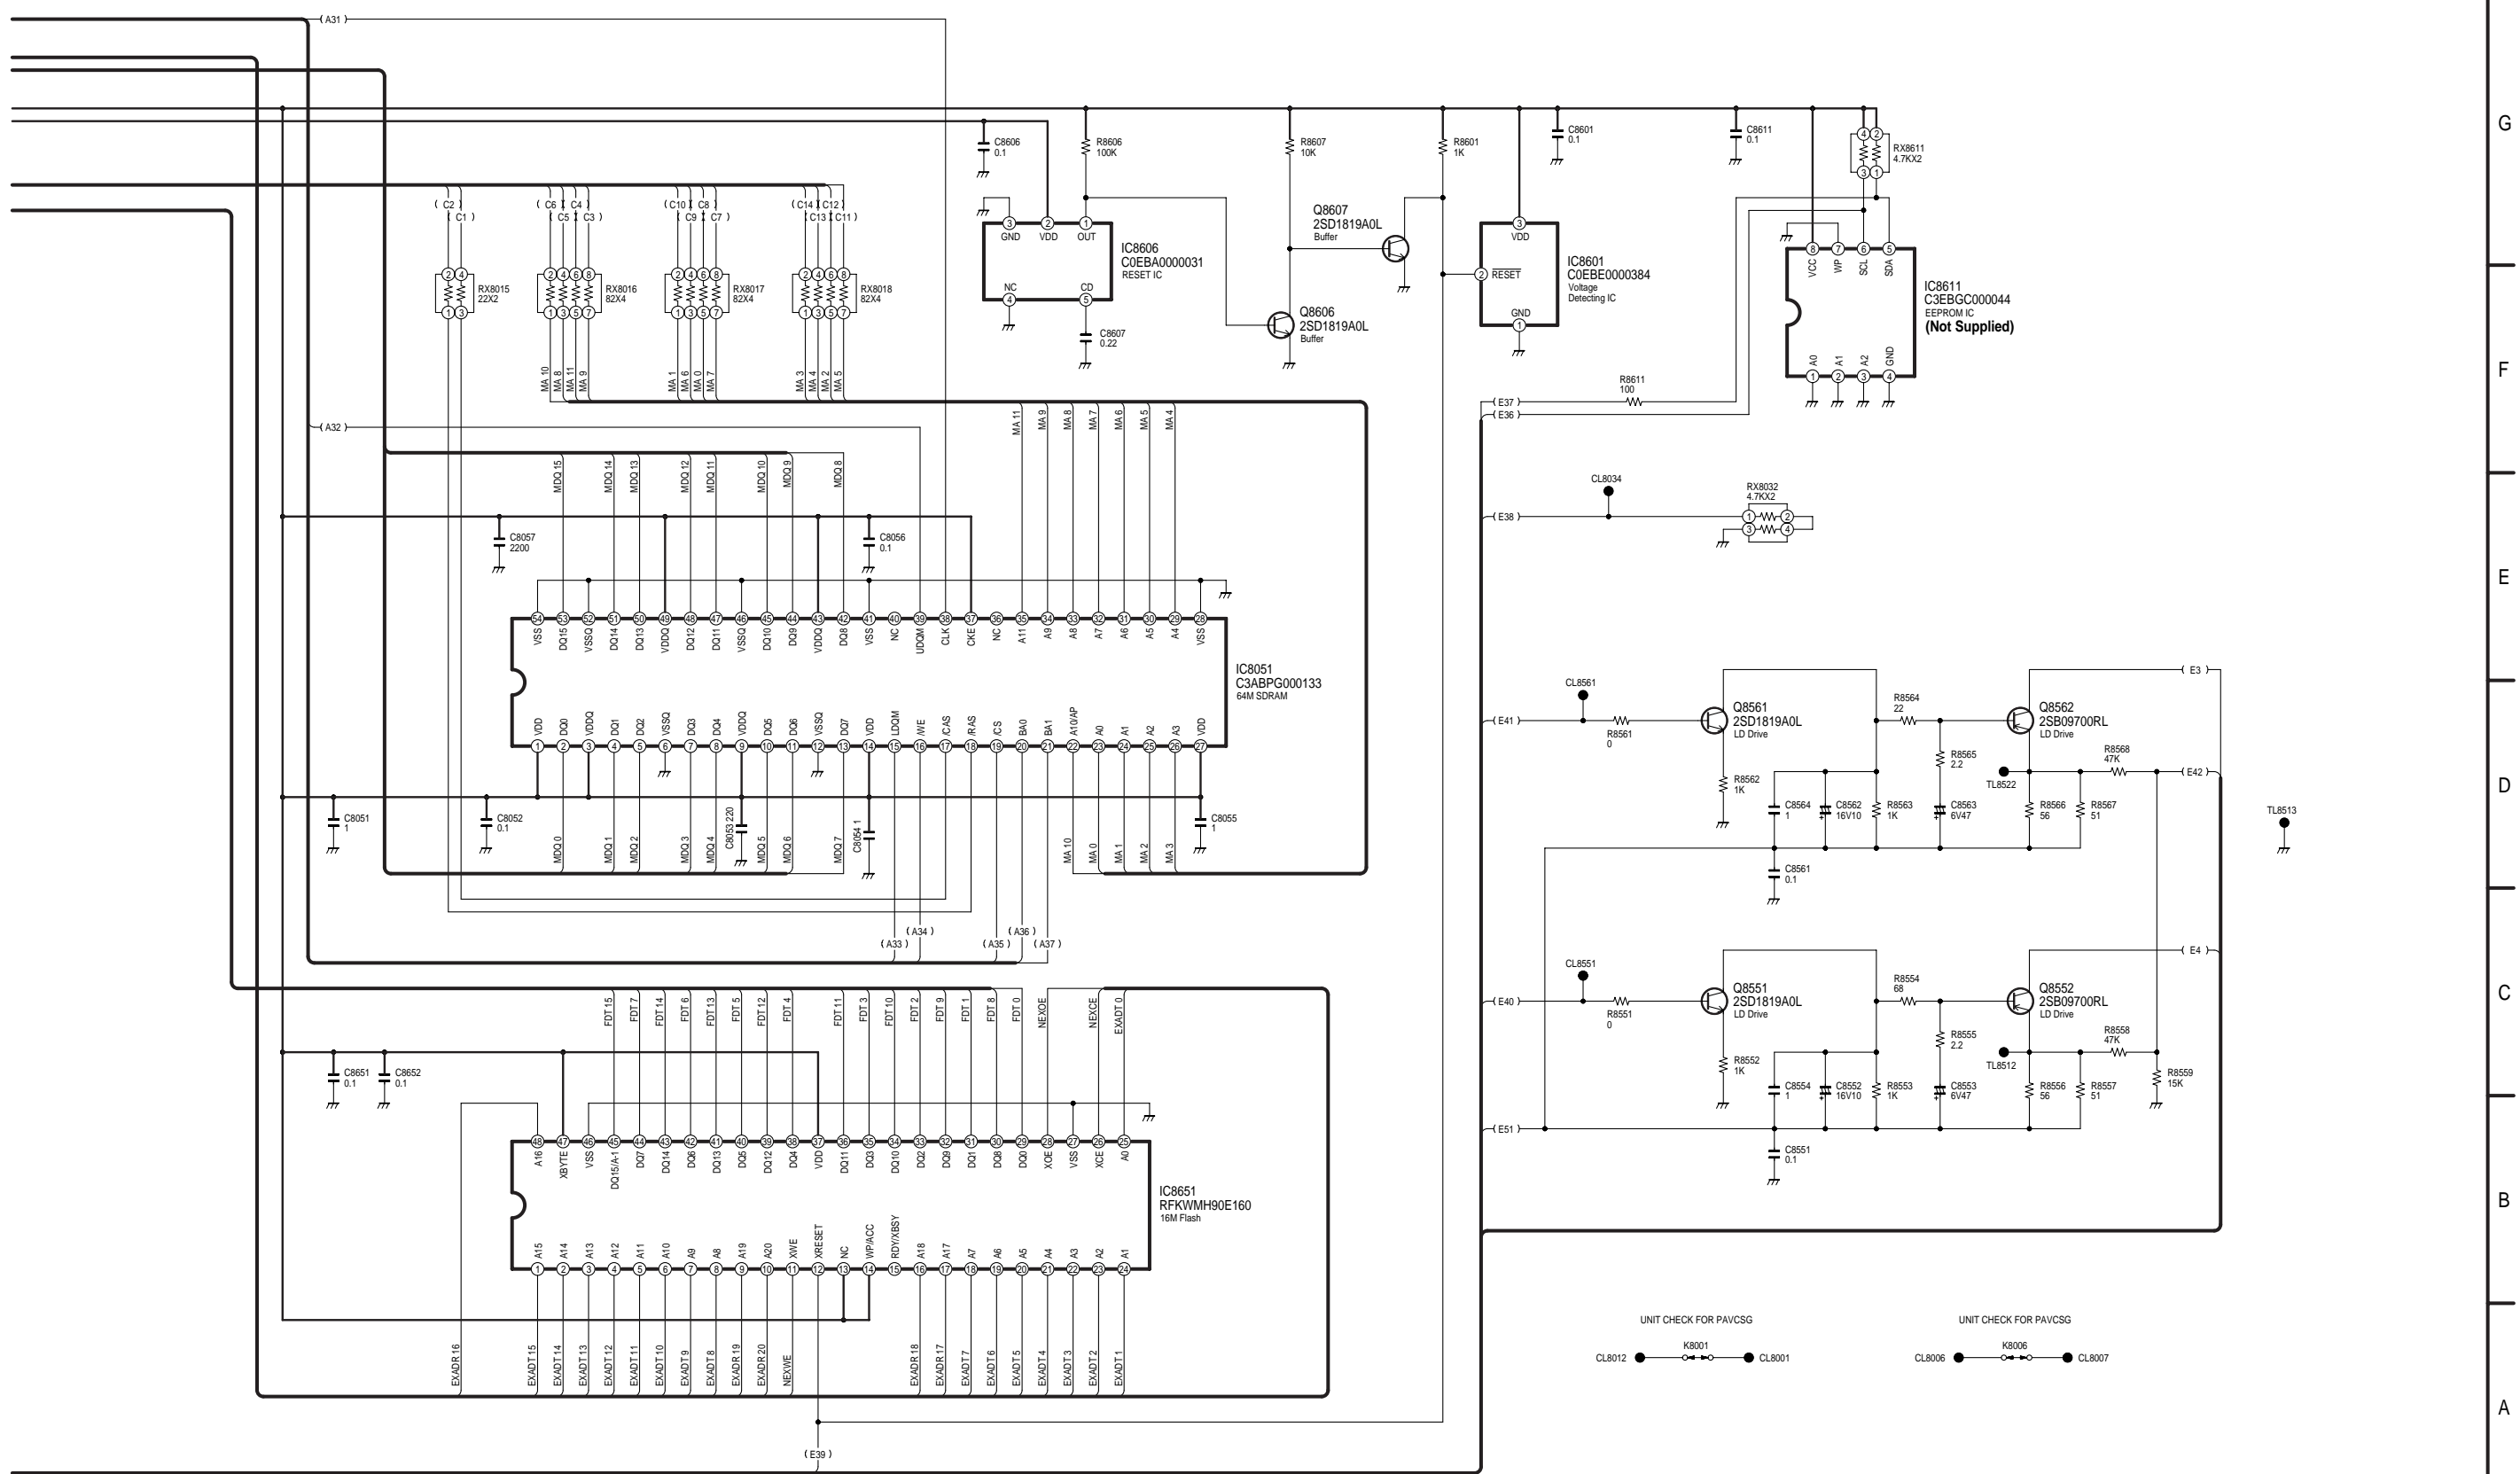


G  
F  
E  
D  
C  
B  
A

SA-HT935EE DVD MODULE CIRCUIT

23 24 25 26 27 28 29 30 31 32 33

SCHEMATIC DIAGRAM-4

B MAIN CIRCUIT

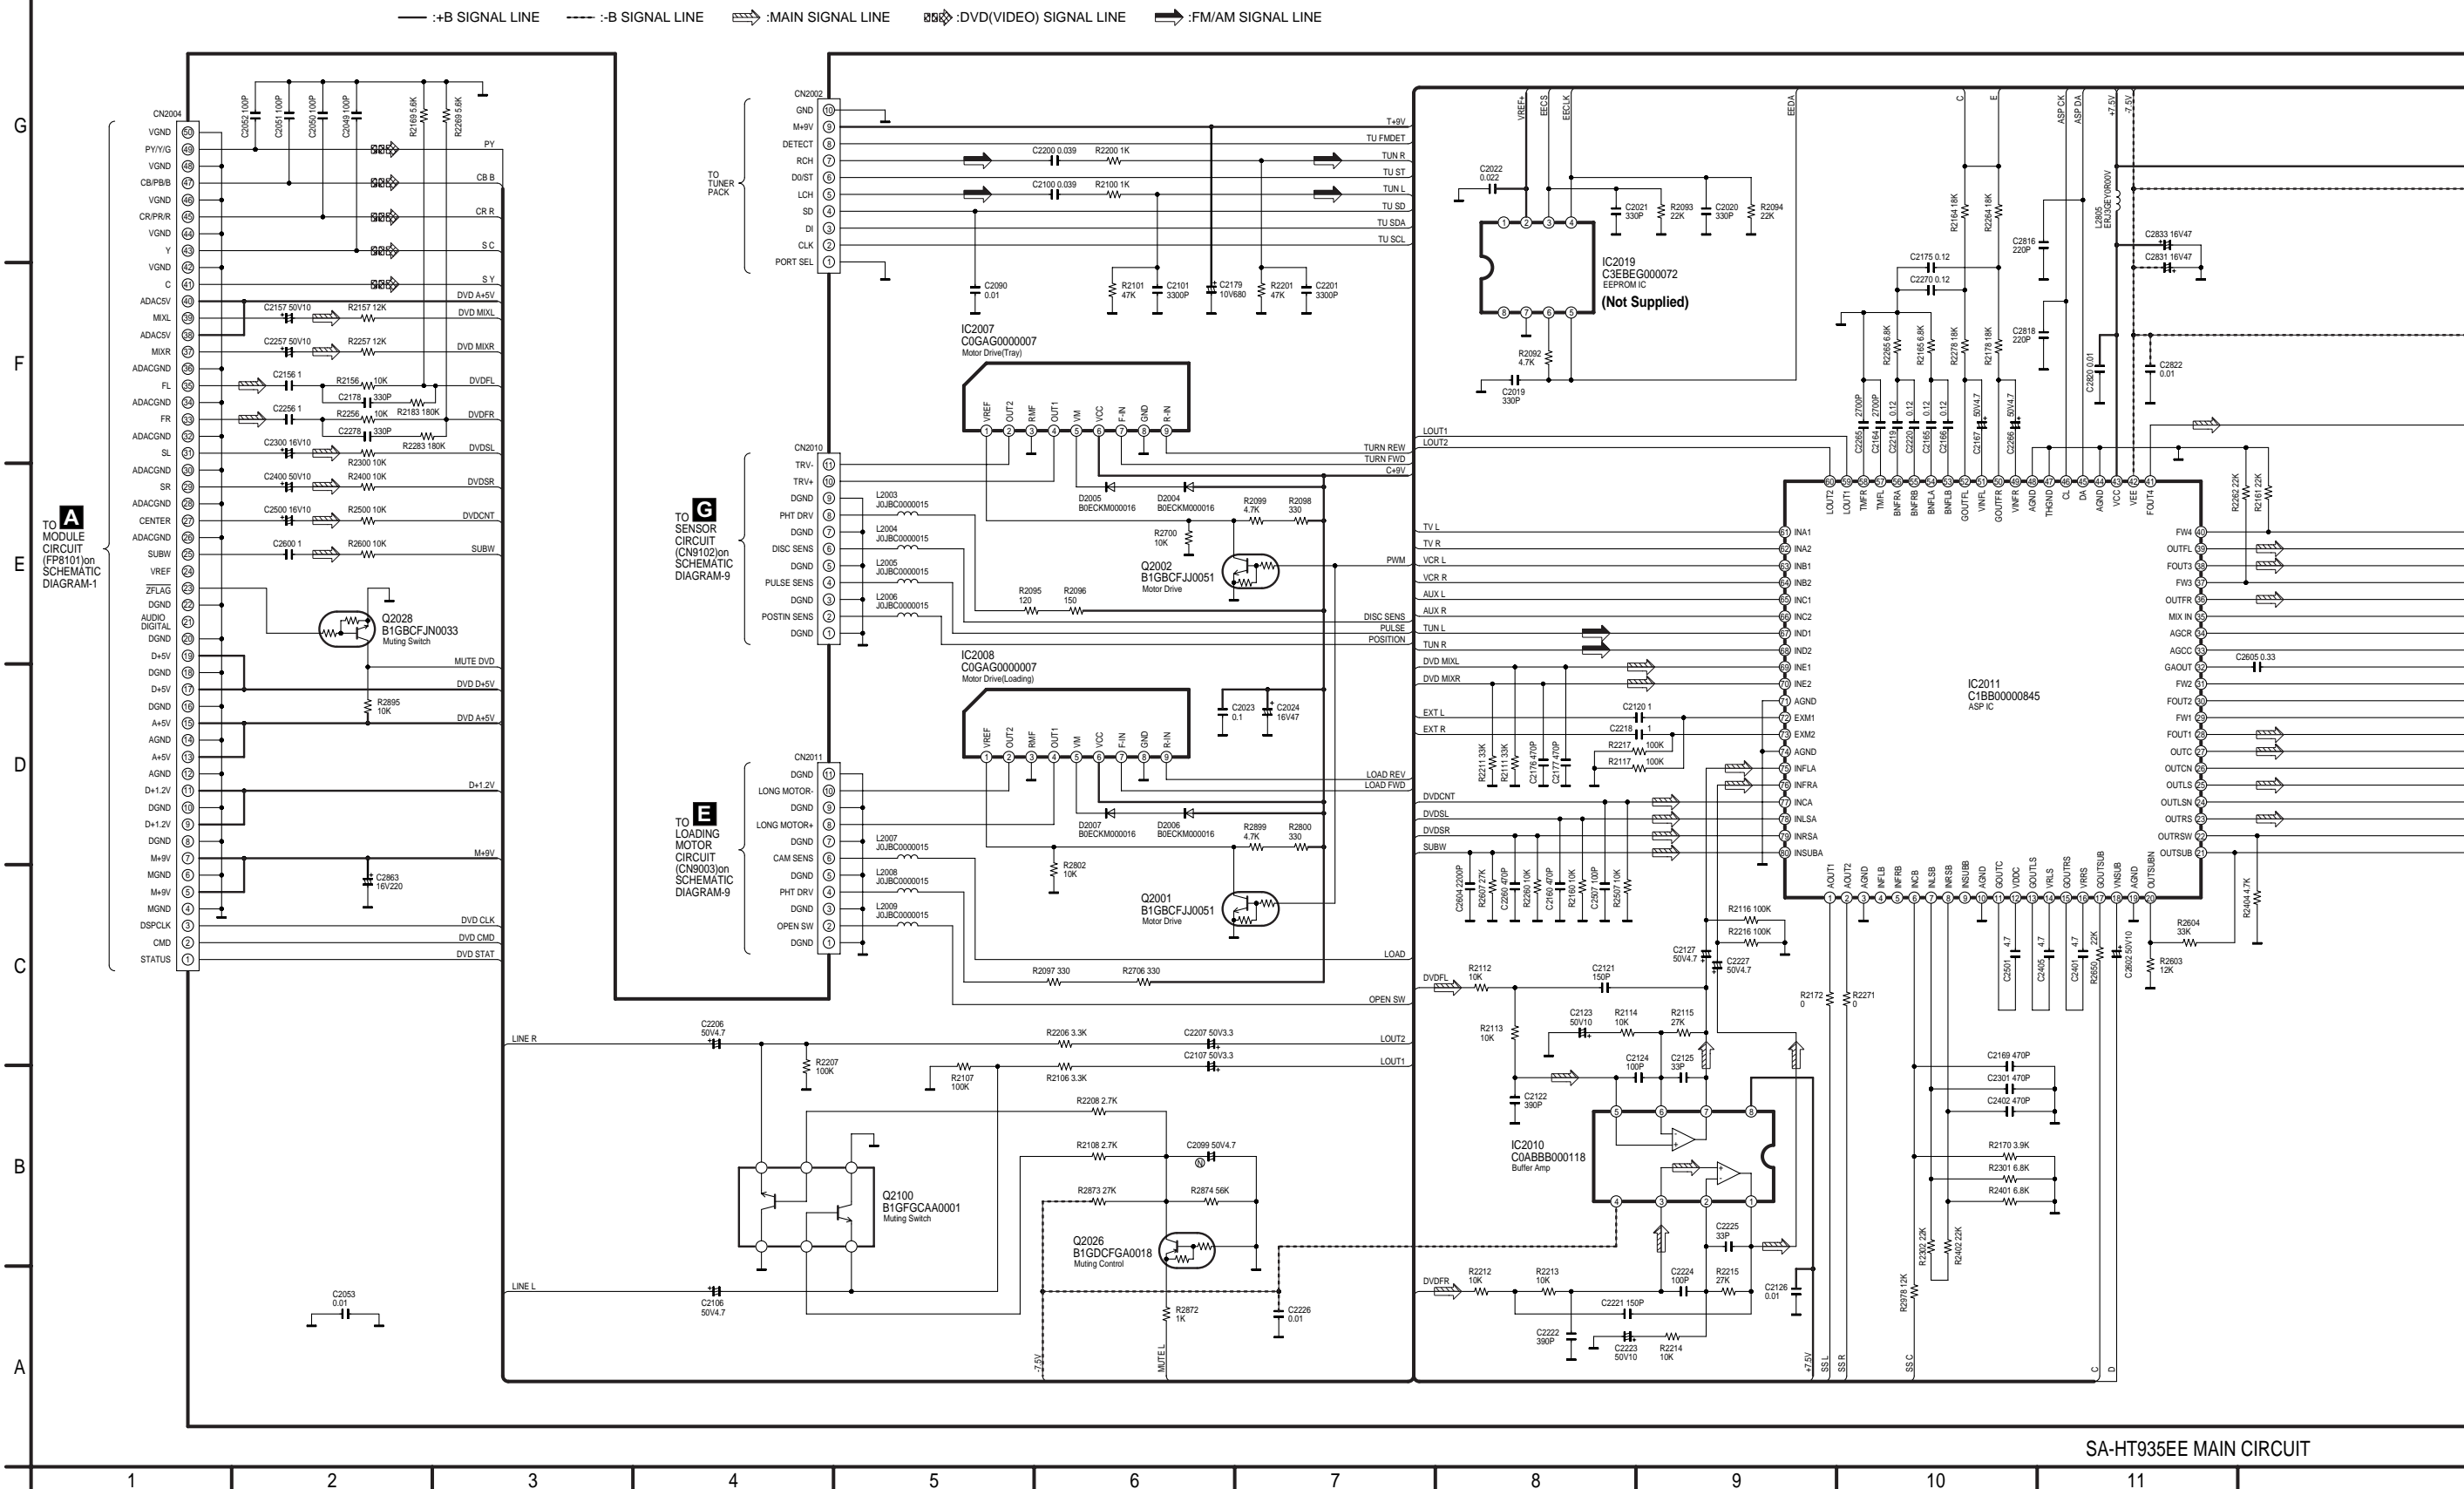




SCHEMATIC DIAGRAM-5

**B** MAIN CIRCUIT

— :+B SIGNAL LINE    - - - : -B SIGNAL LINE    ⇨ : MAIN SIGNAL LINE

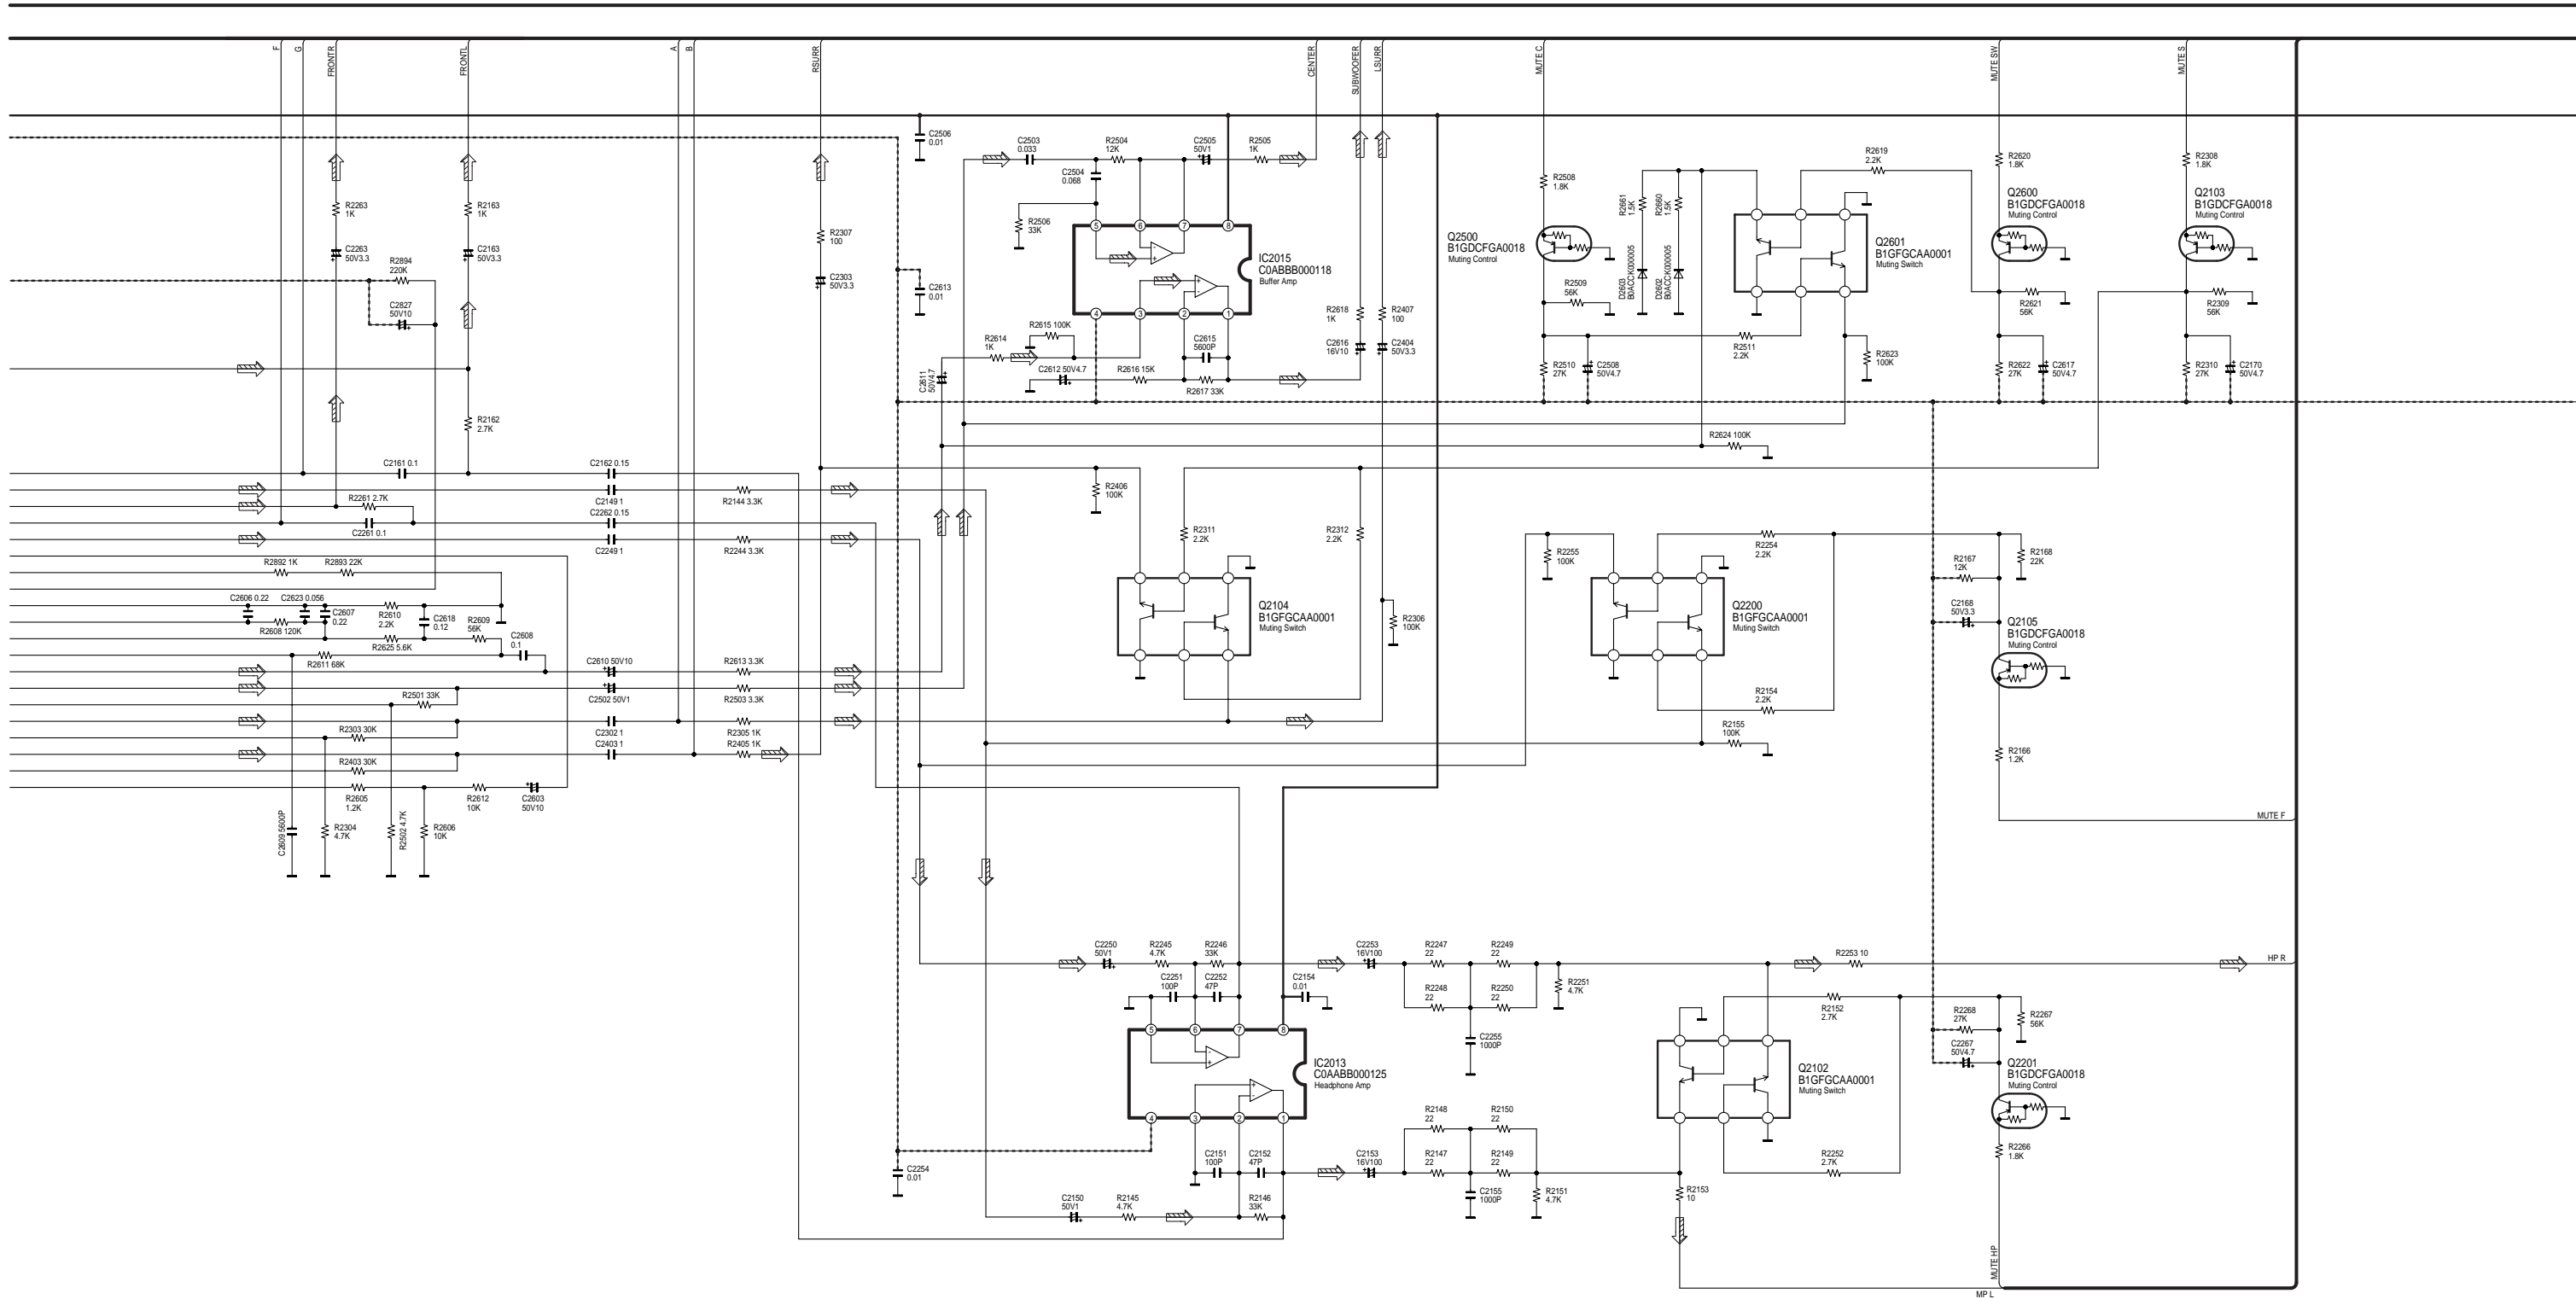

SA-HT935EE MAIN CIRCUIT


12      13      14      15      16      17      18      19      20      21      22



SCHEMATIC DIAGRAM-7

**B** MAIN CIRCUIT

— +B SIGNAL LINE    - - - -B SIGNAL LINE    ⇨ MAIN SIGNAL LINE

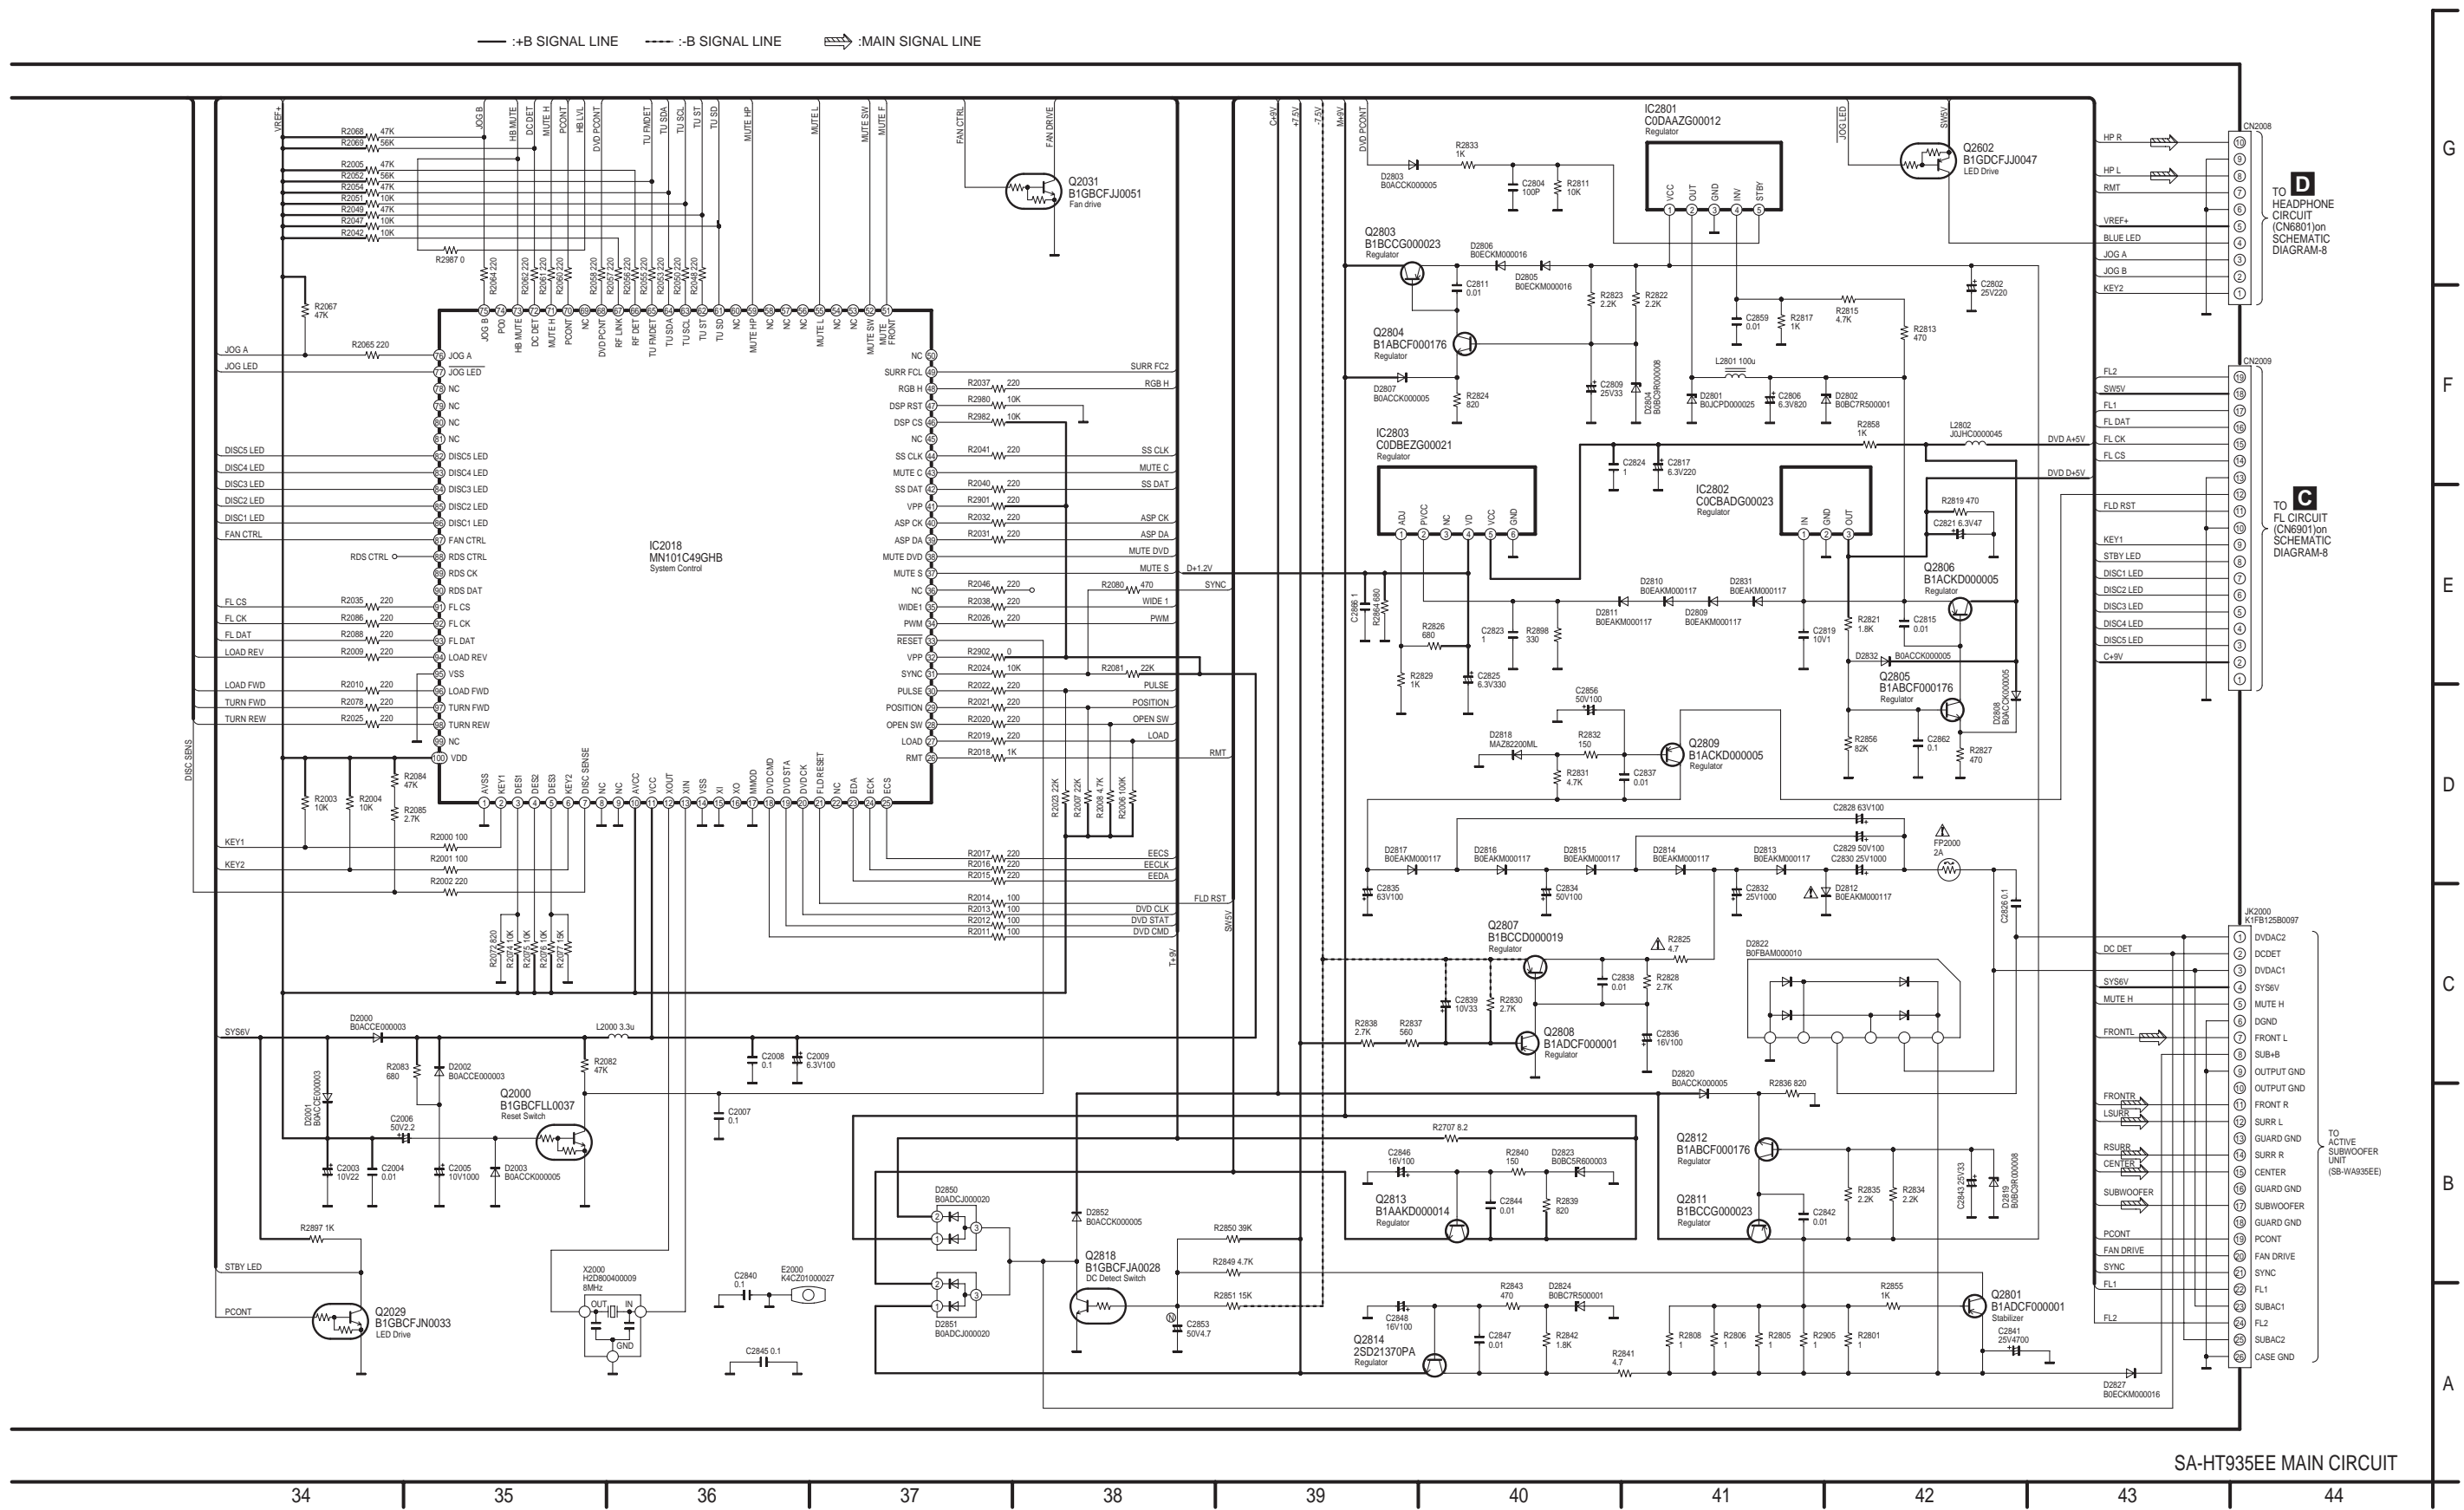

**D** TO HEADPHONE CIRCUIT (CN6801) on SCHEMATIC DIAGRAM-8


**C** TO FL CIRCUIT (CN6901) on SCHEMATIC DIAGRAM-8

TO ACTIVE SUBWOOFER UNIT (SB-WA935EE)


SA-HT935EE MAIN CIRCUIT

SCHEMATIC DIAGRAM-8




C FL CIRCUIT

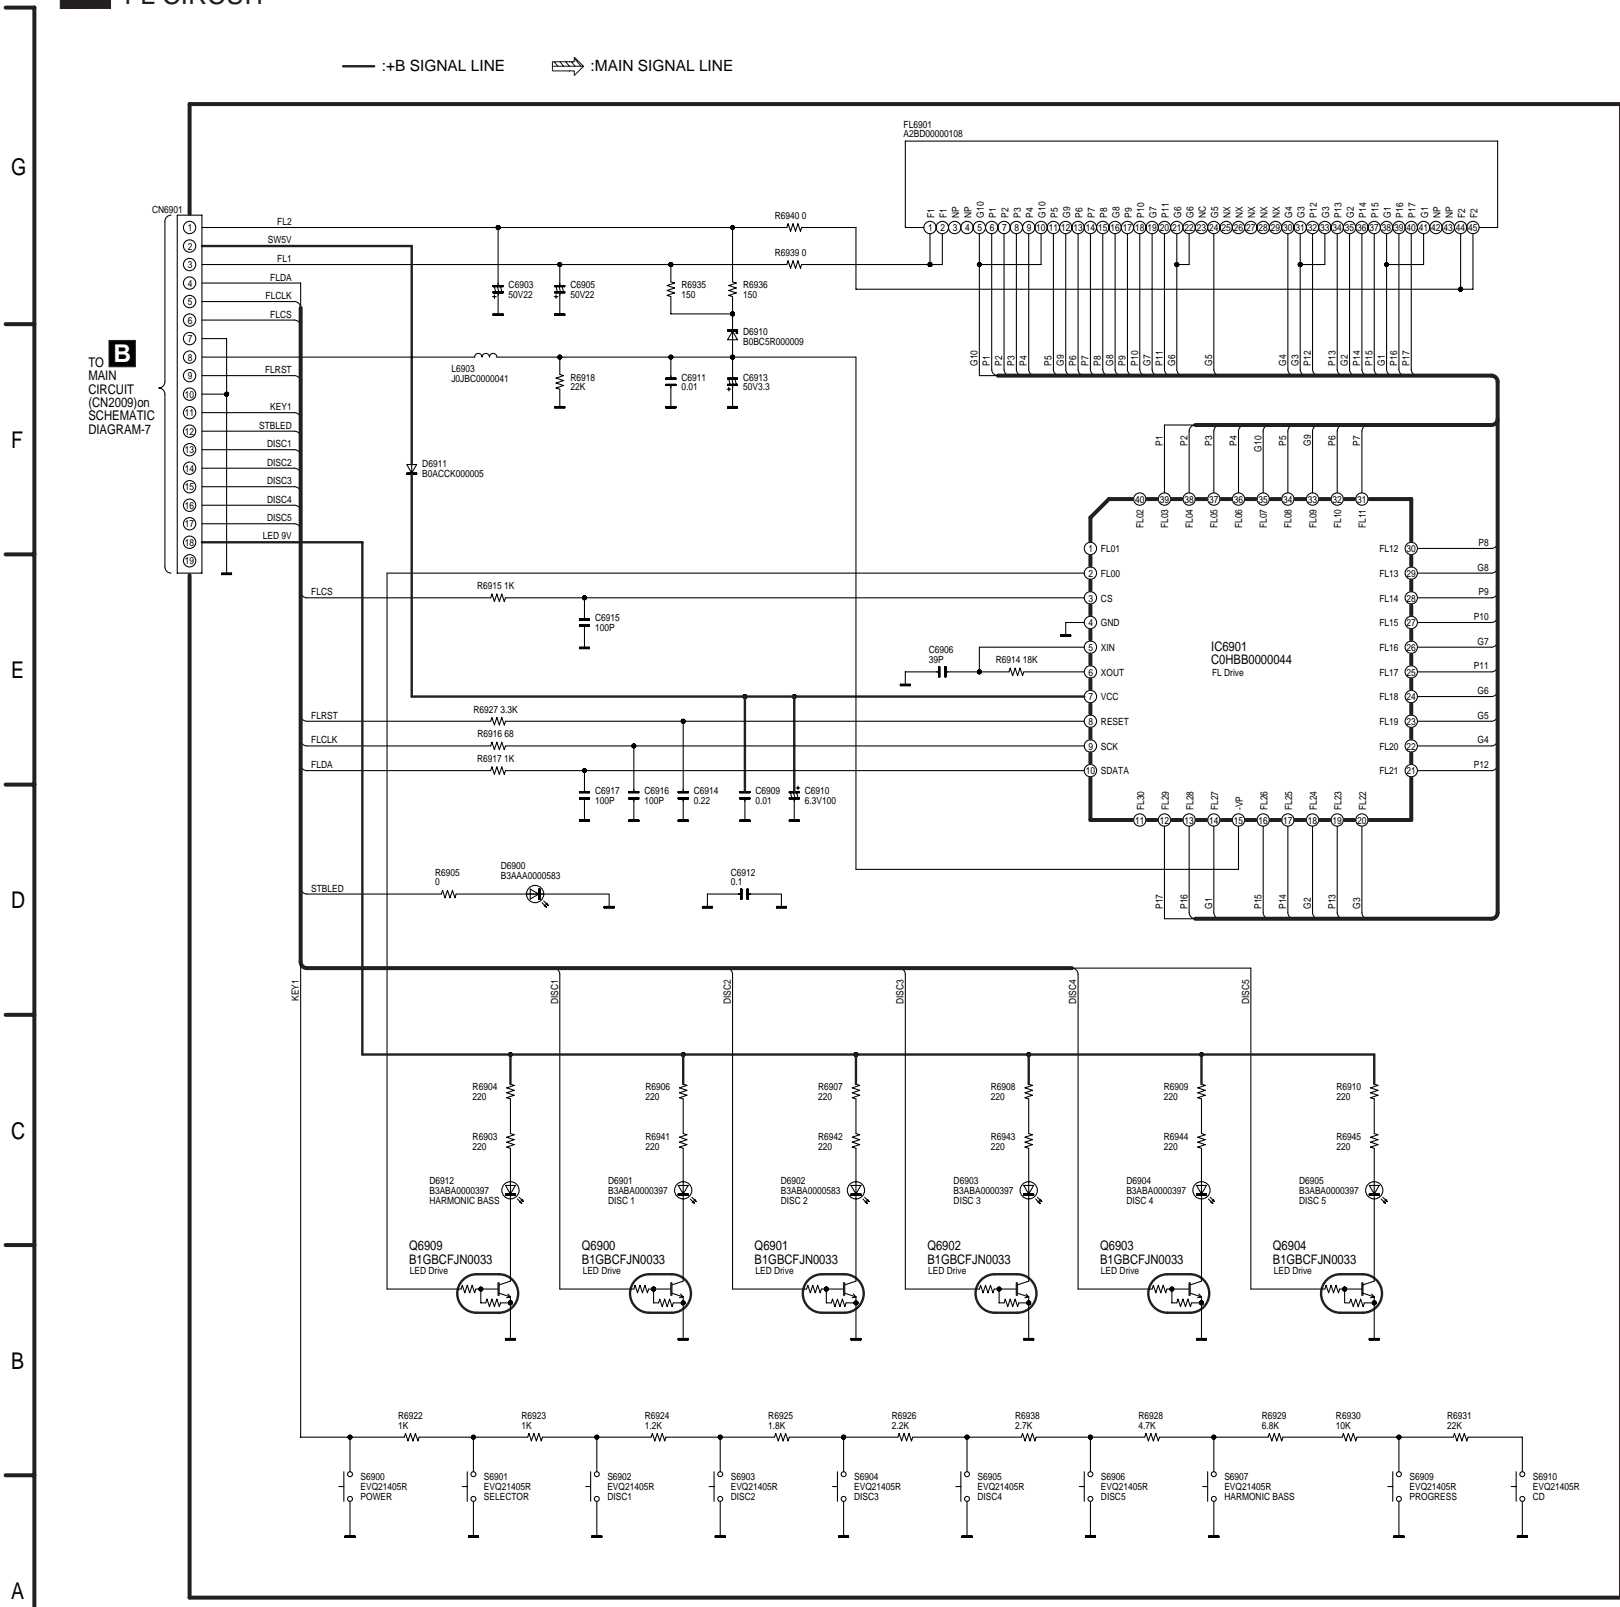

D HEADPHONE CIRCUIT

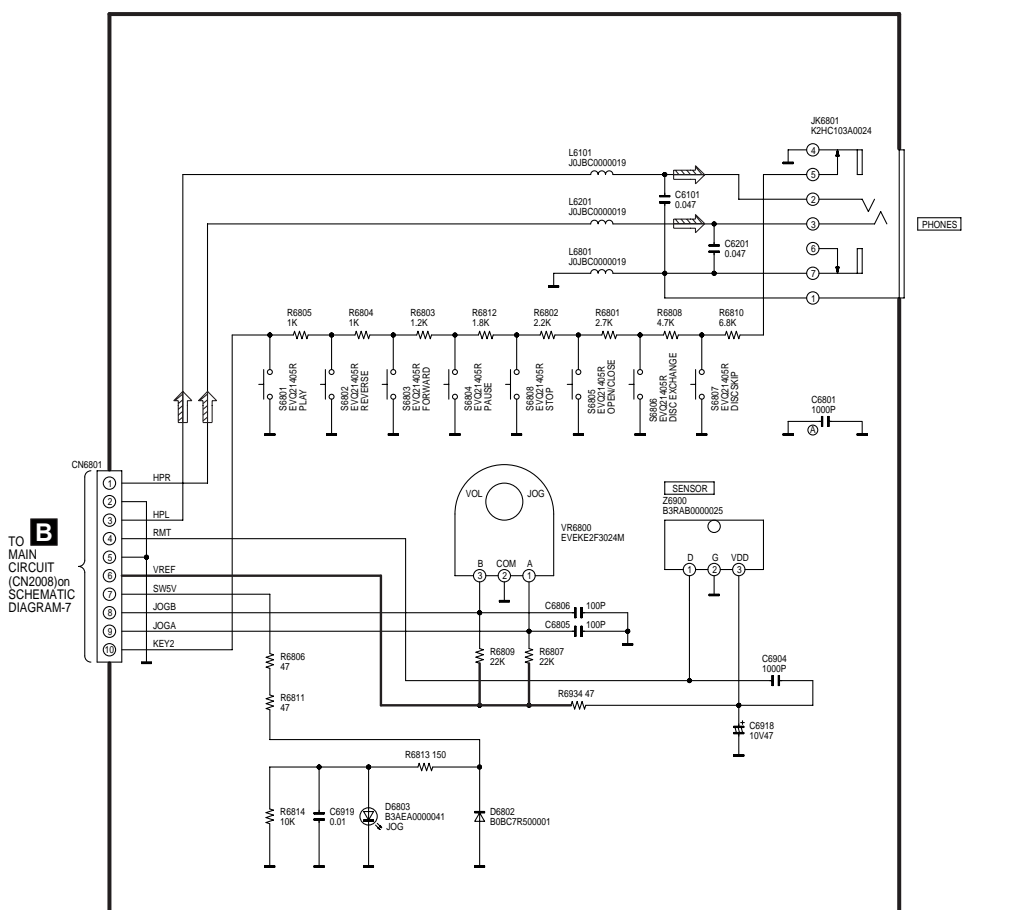


SCHEMATIC DIAGRAM-9

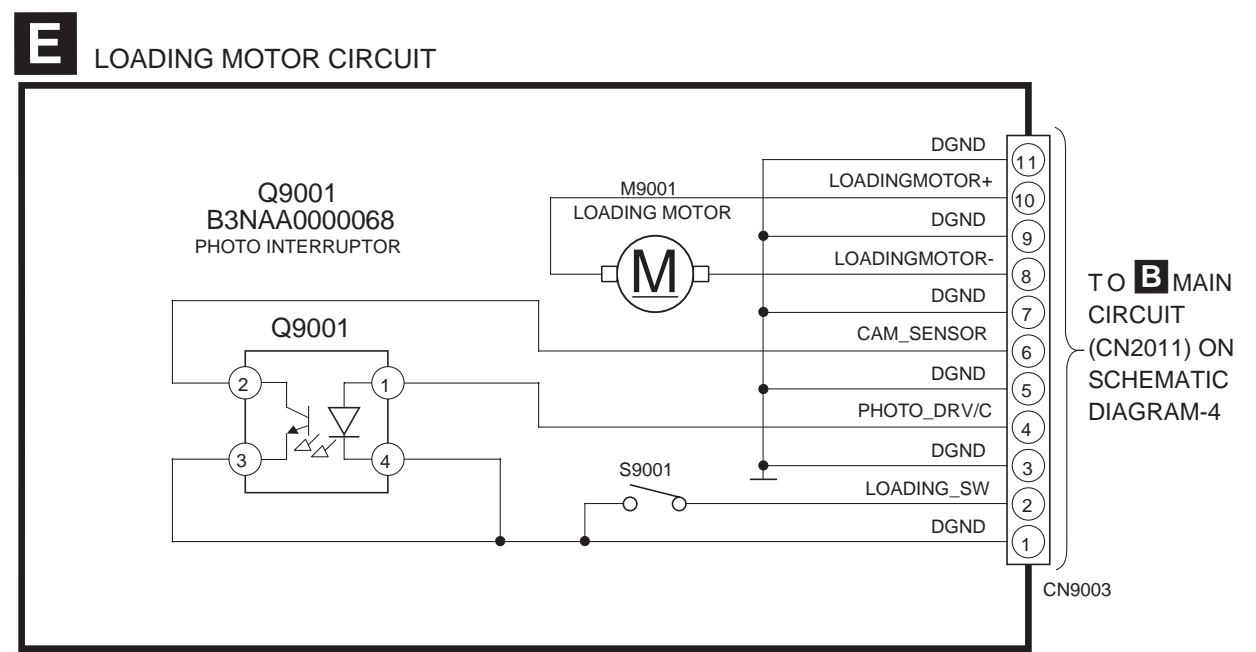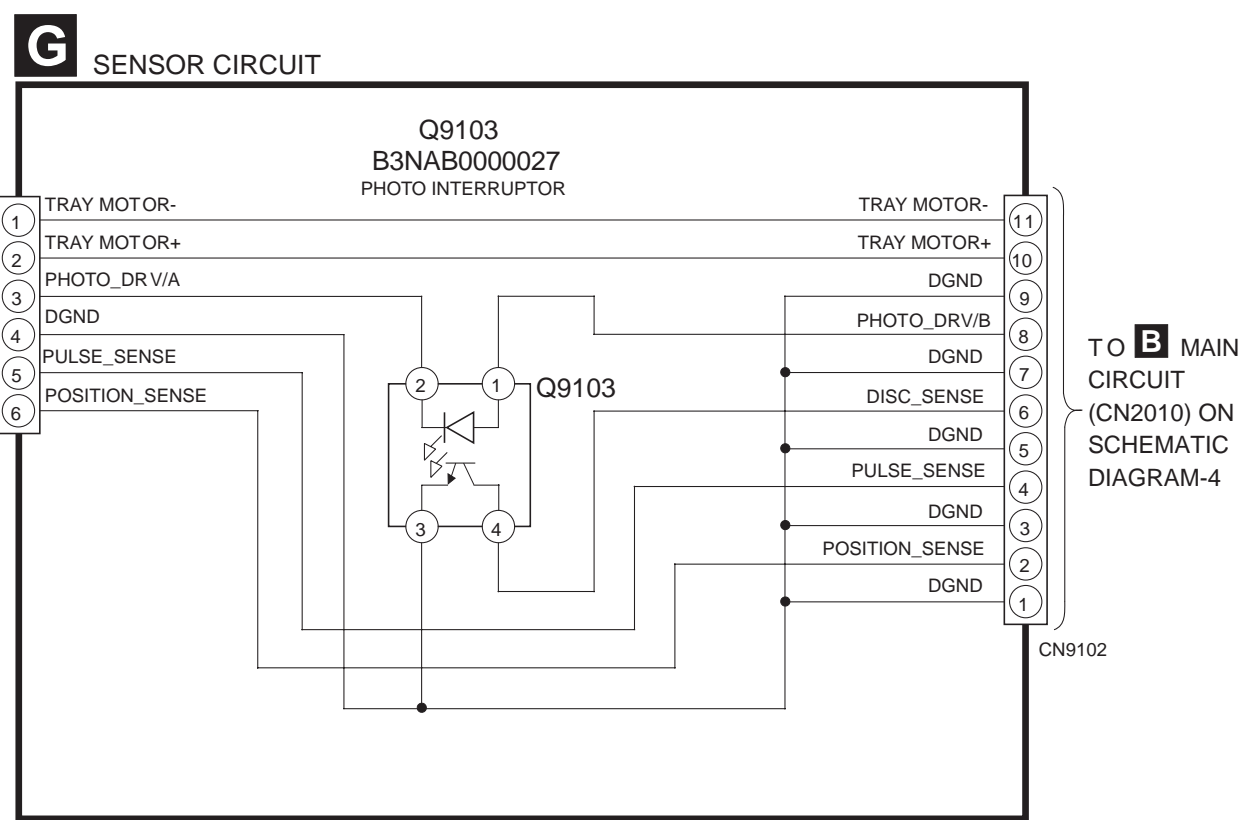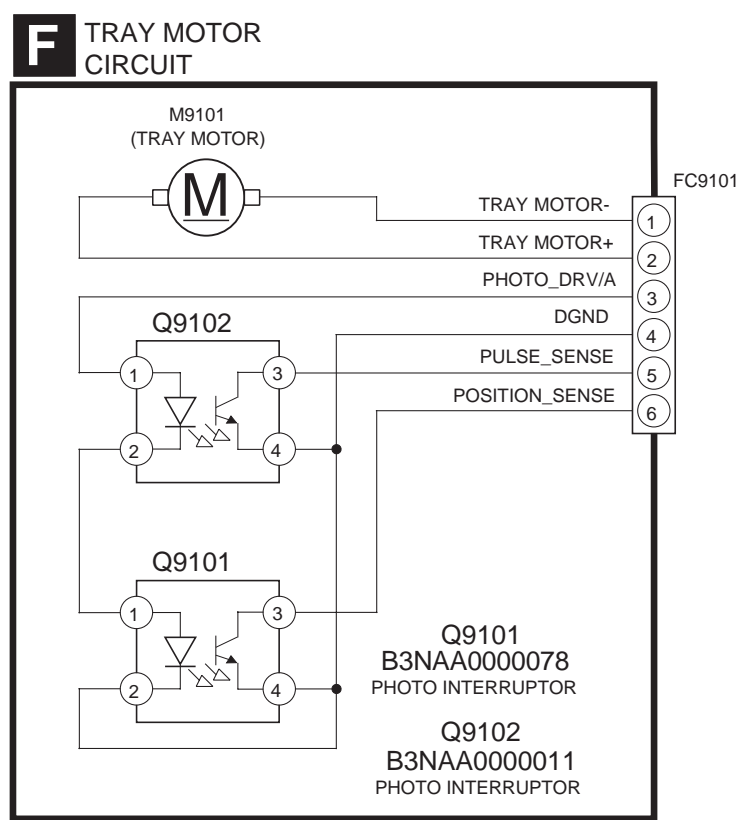



# 23 Printed Circuit Board Diagram

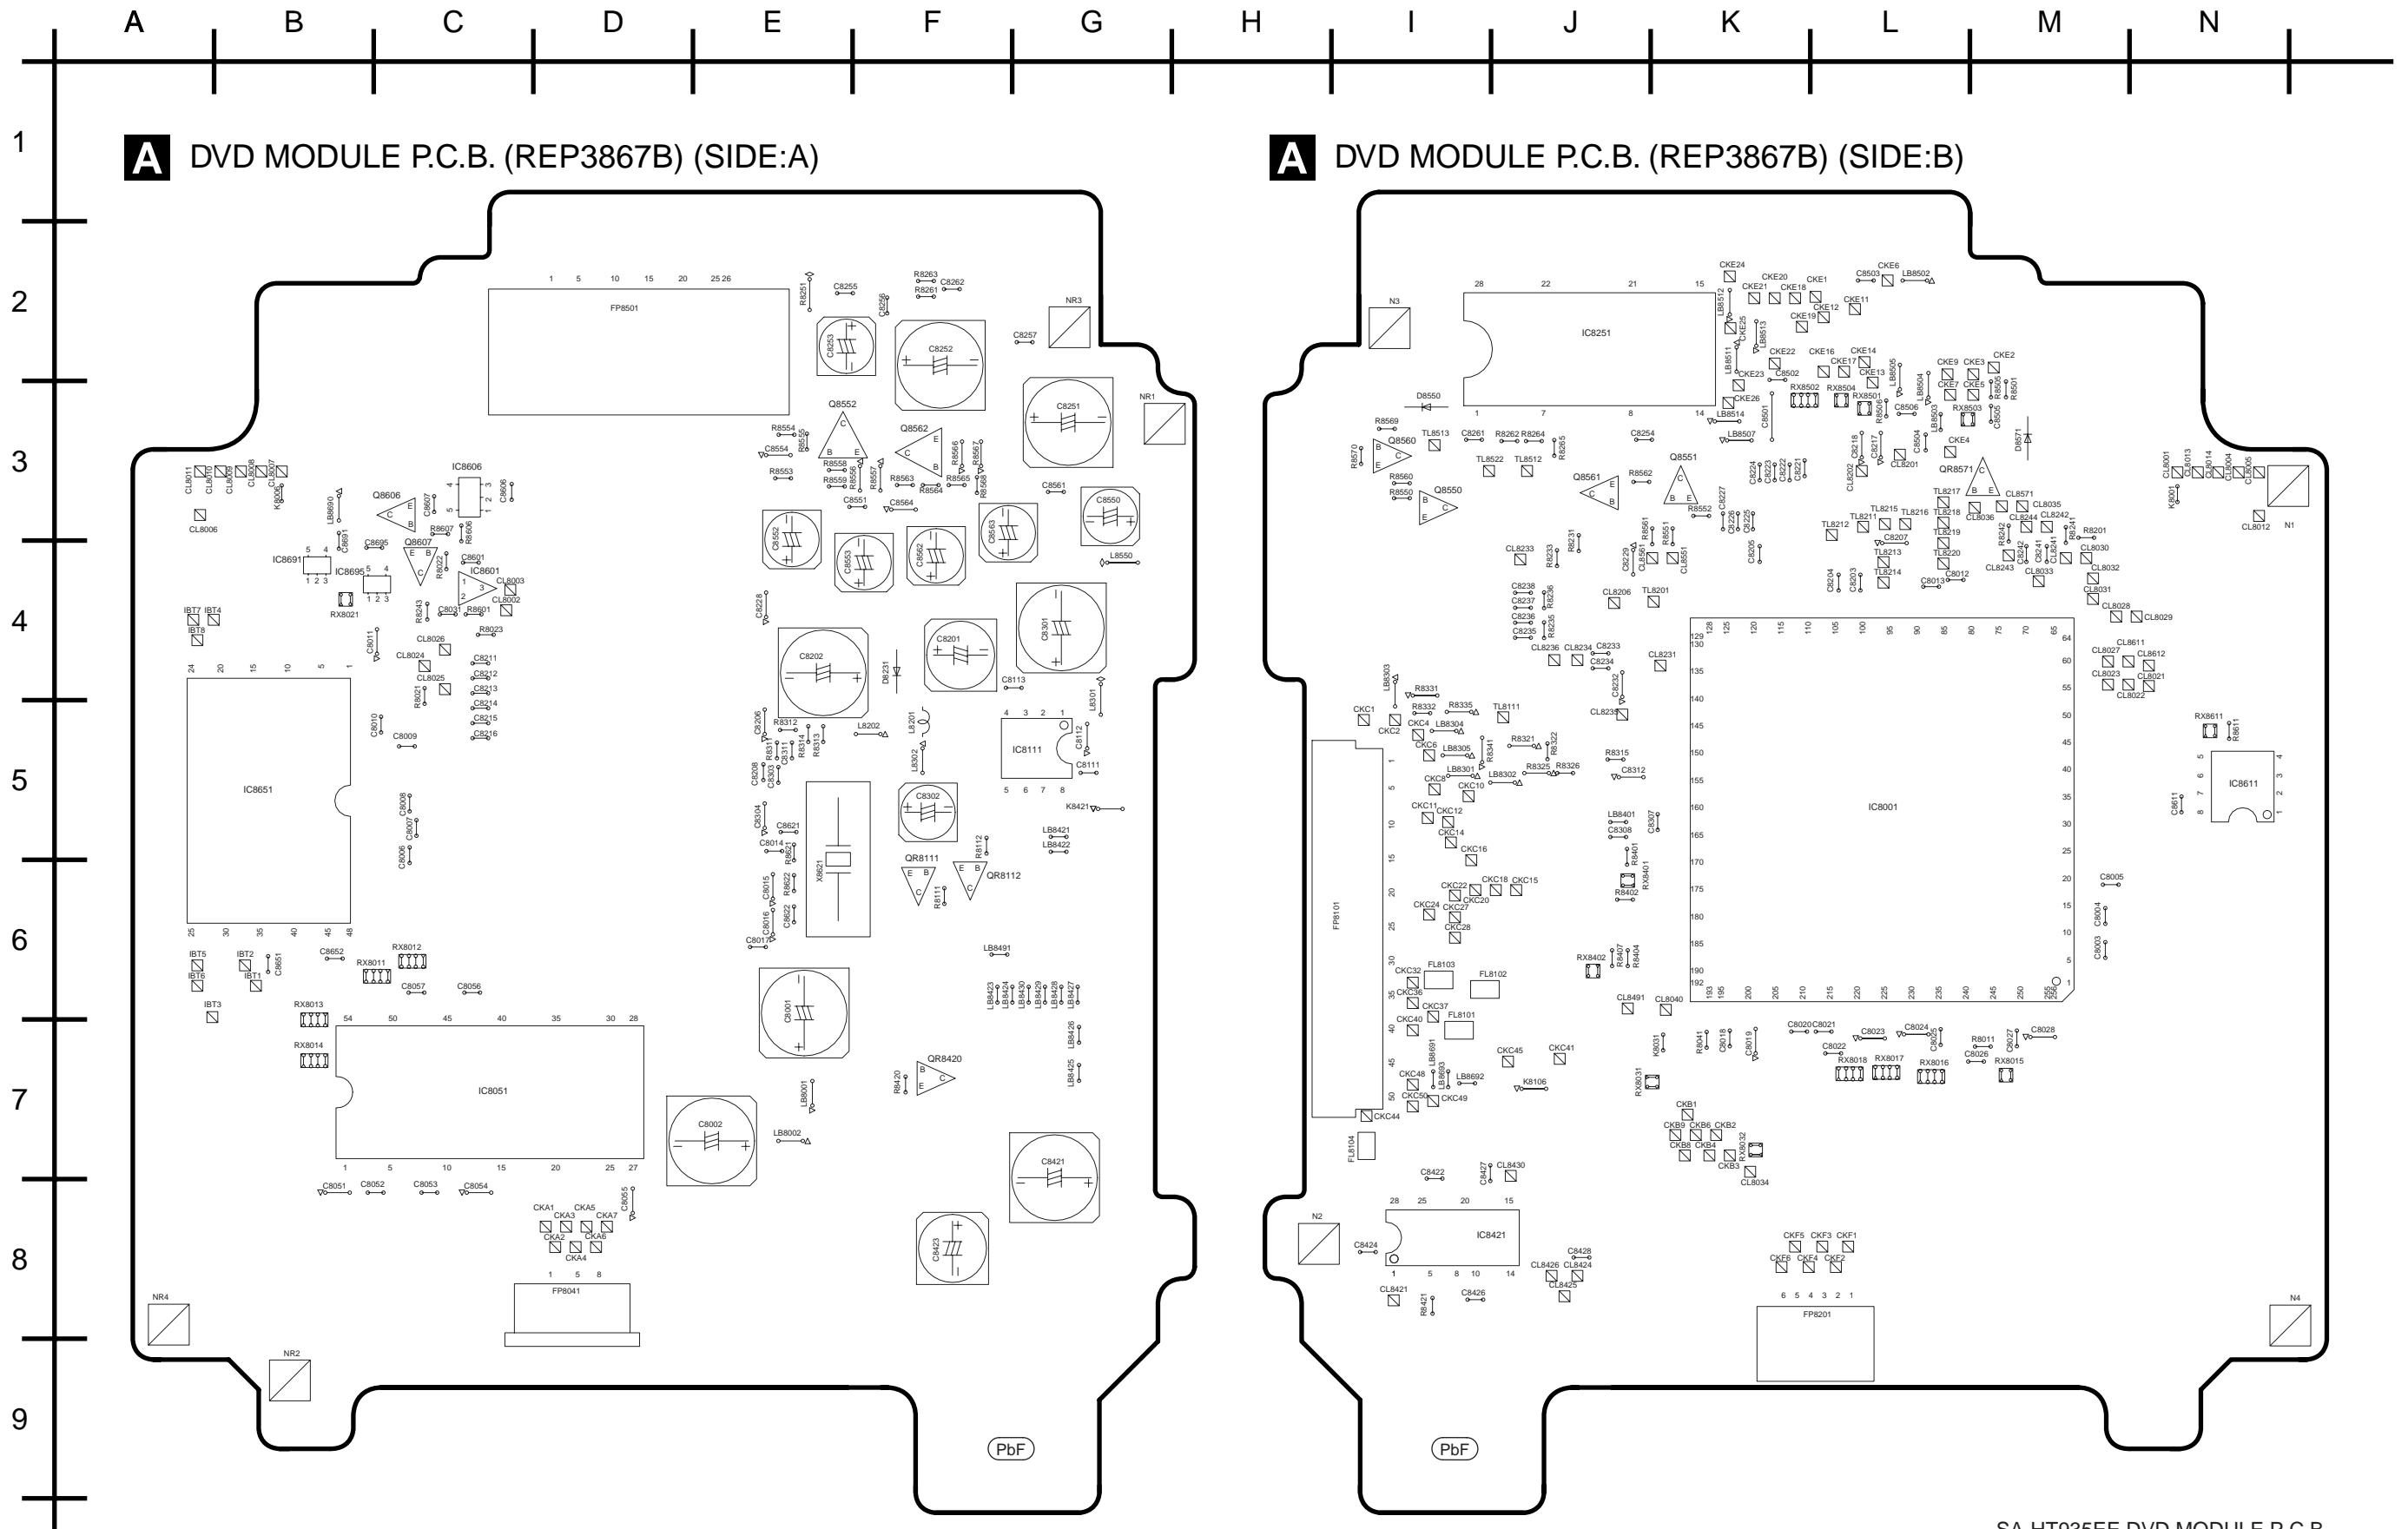


SA-HT935EE DVD MODULE P.C.B.

A B C D E F G H I J K L M N

1  
2  
3  
4  
5  
6  
7  
8  
9


**B** MAIN P.C.B. (REPX0451C)

AV JACK

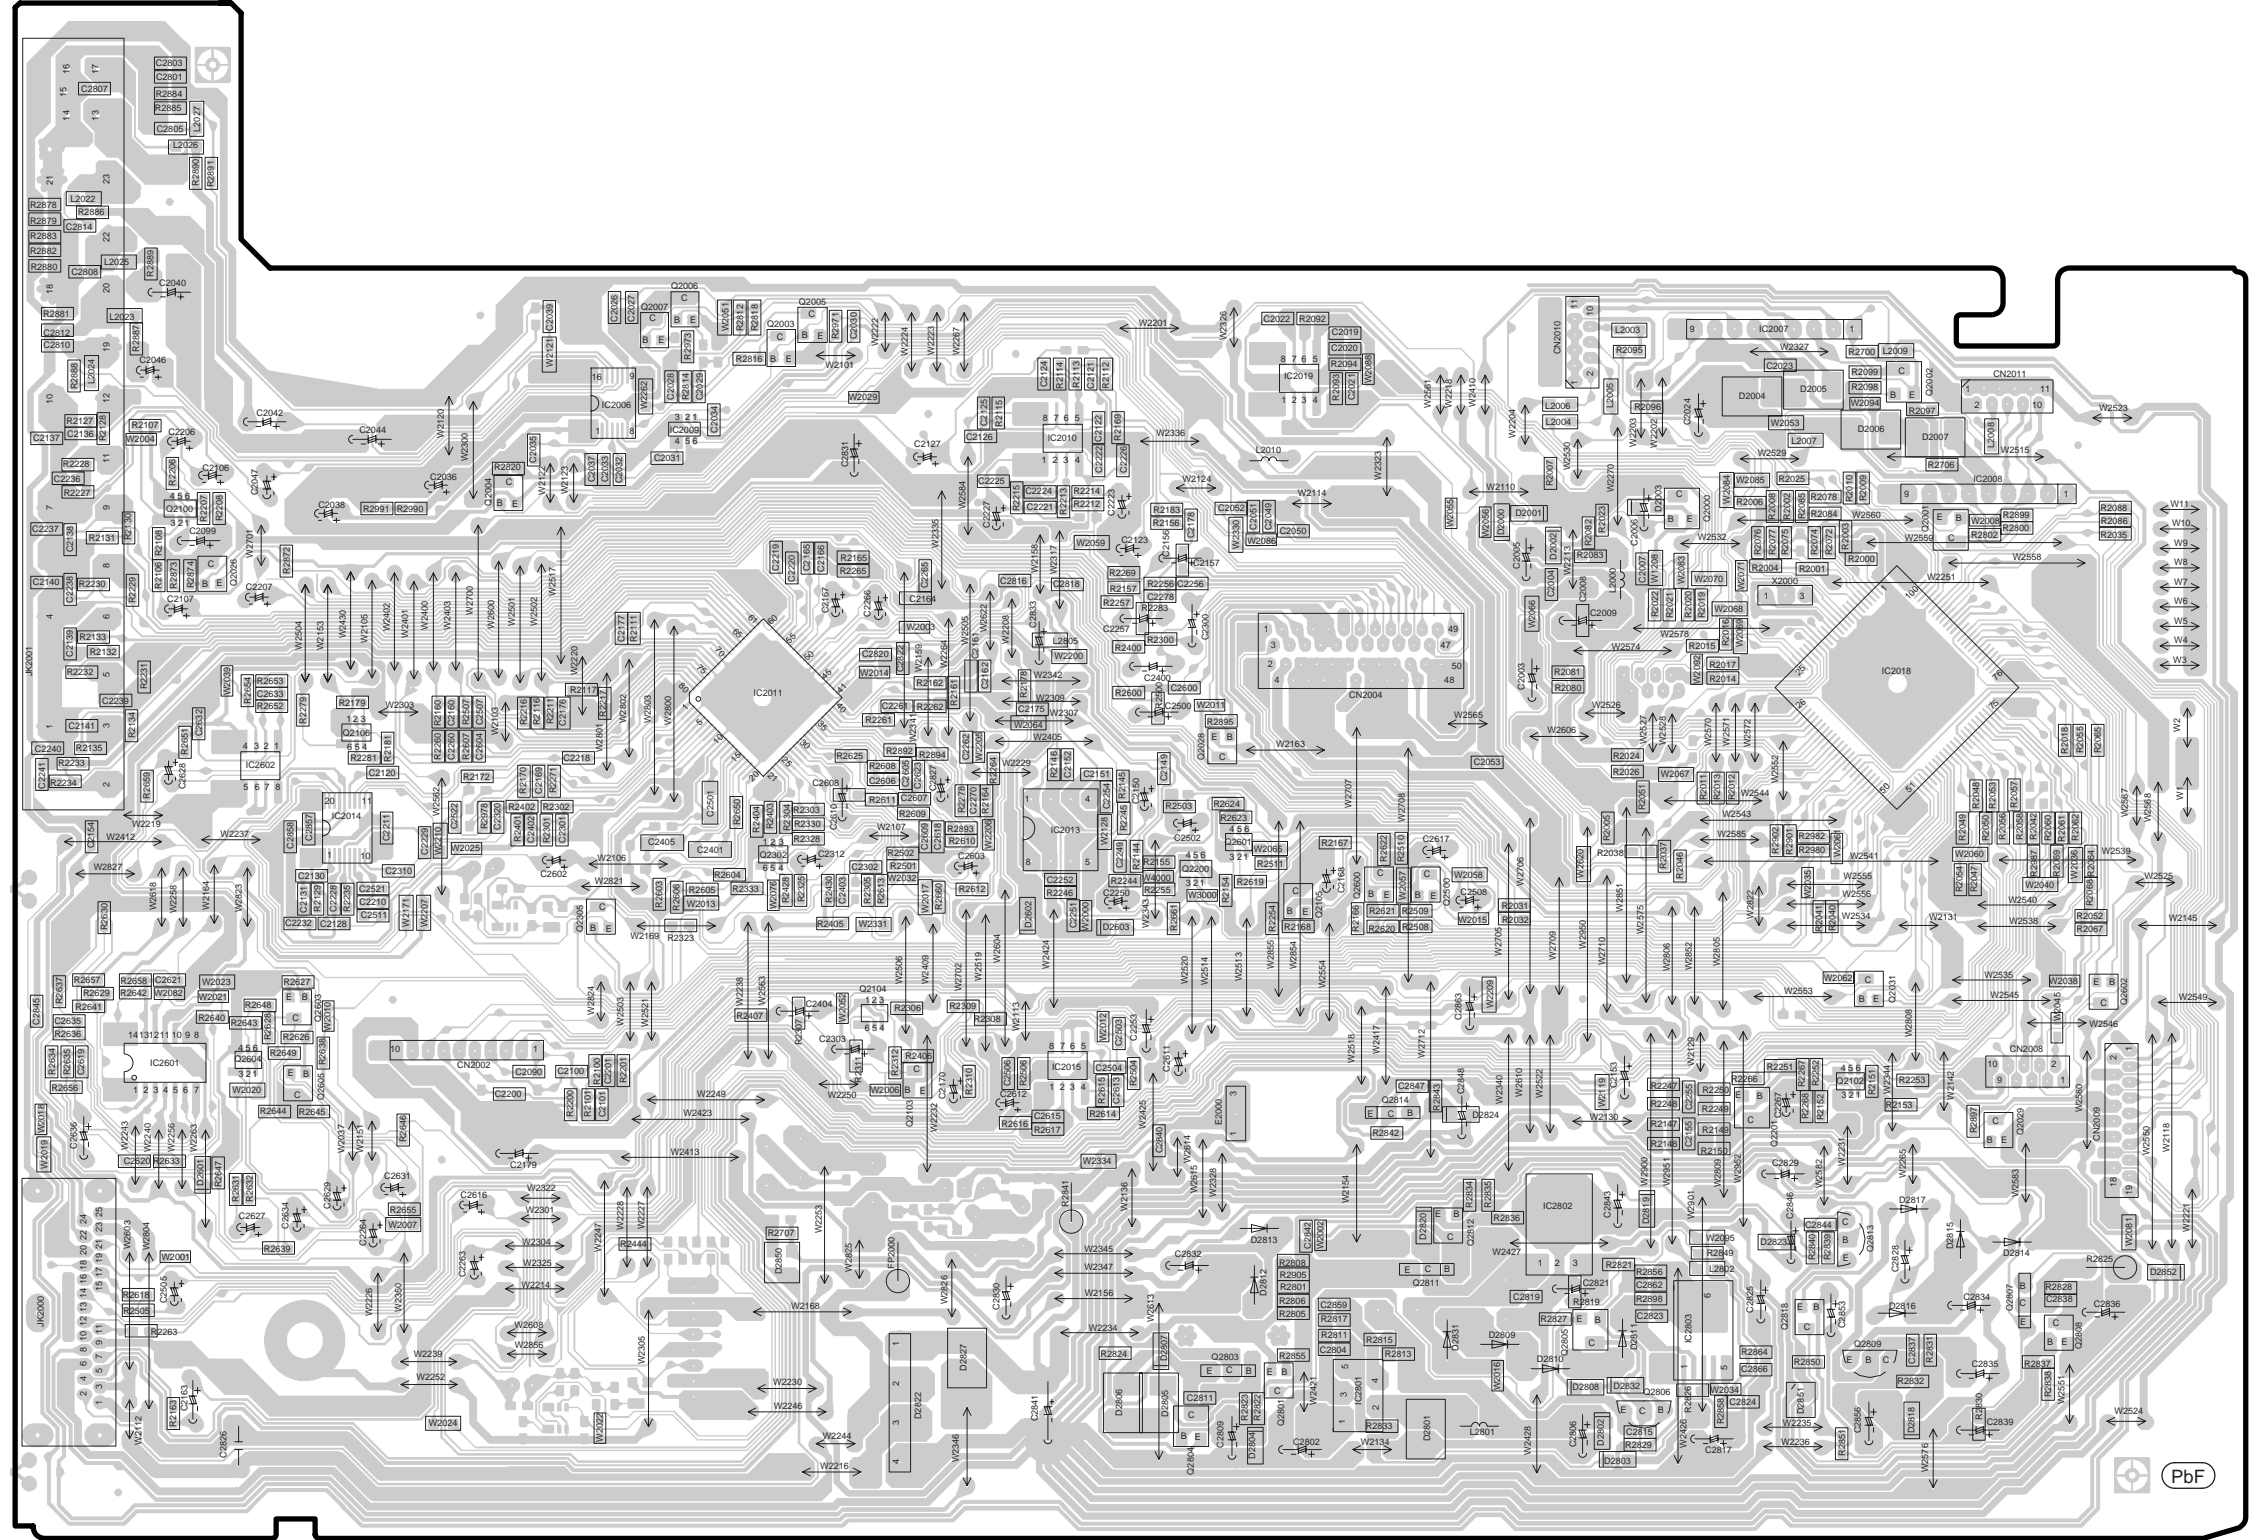

SA-HT935EE MAIN P.C.B.




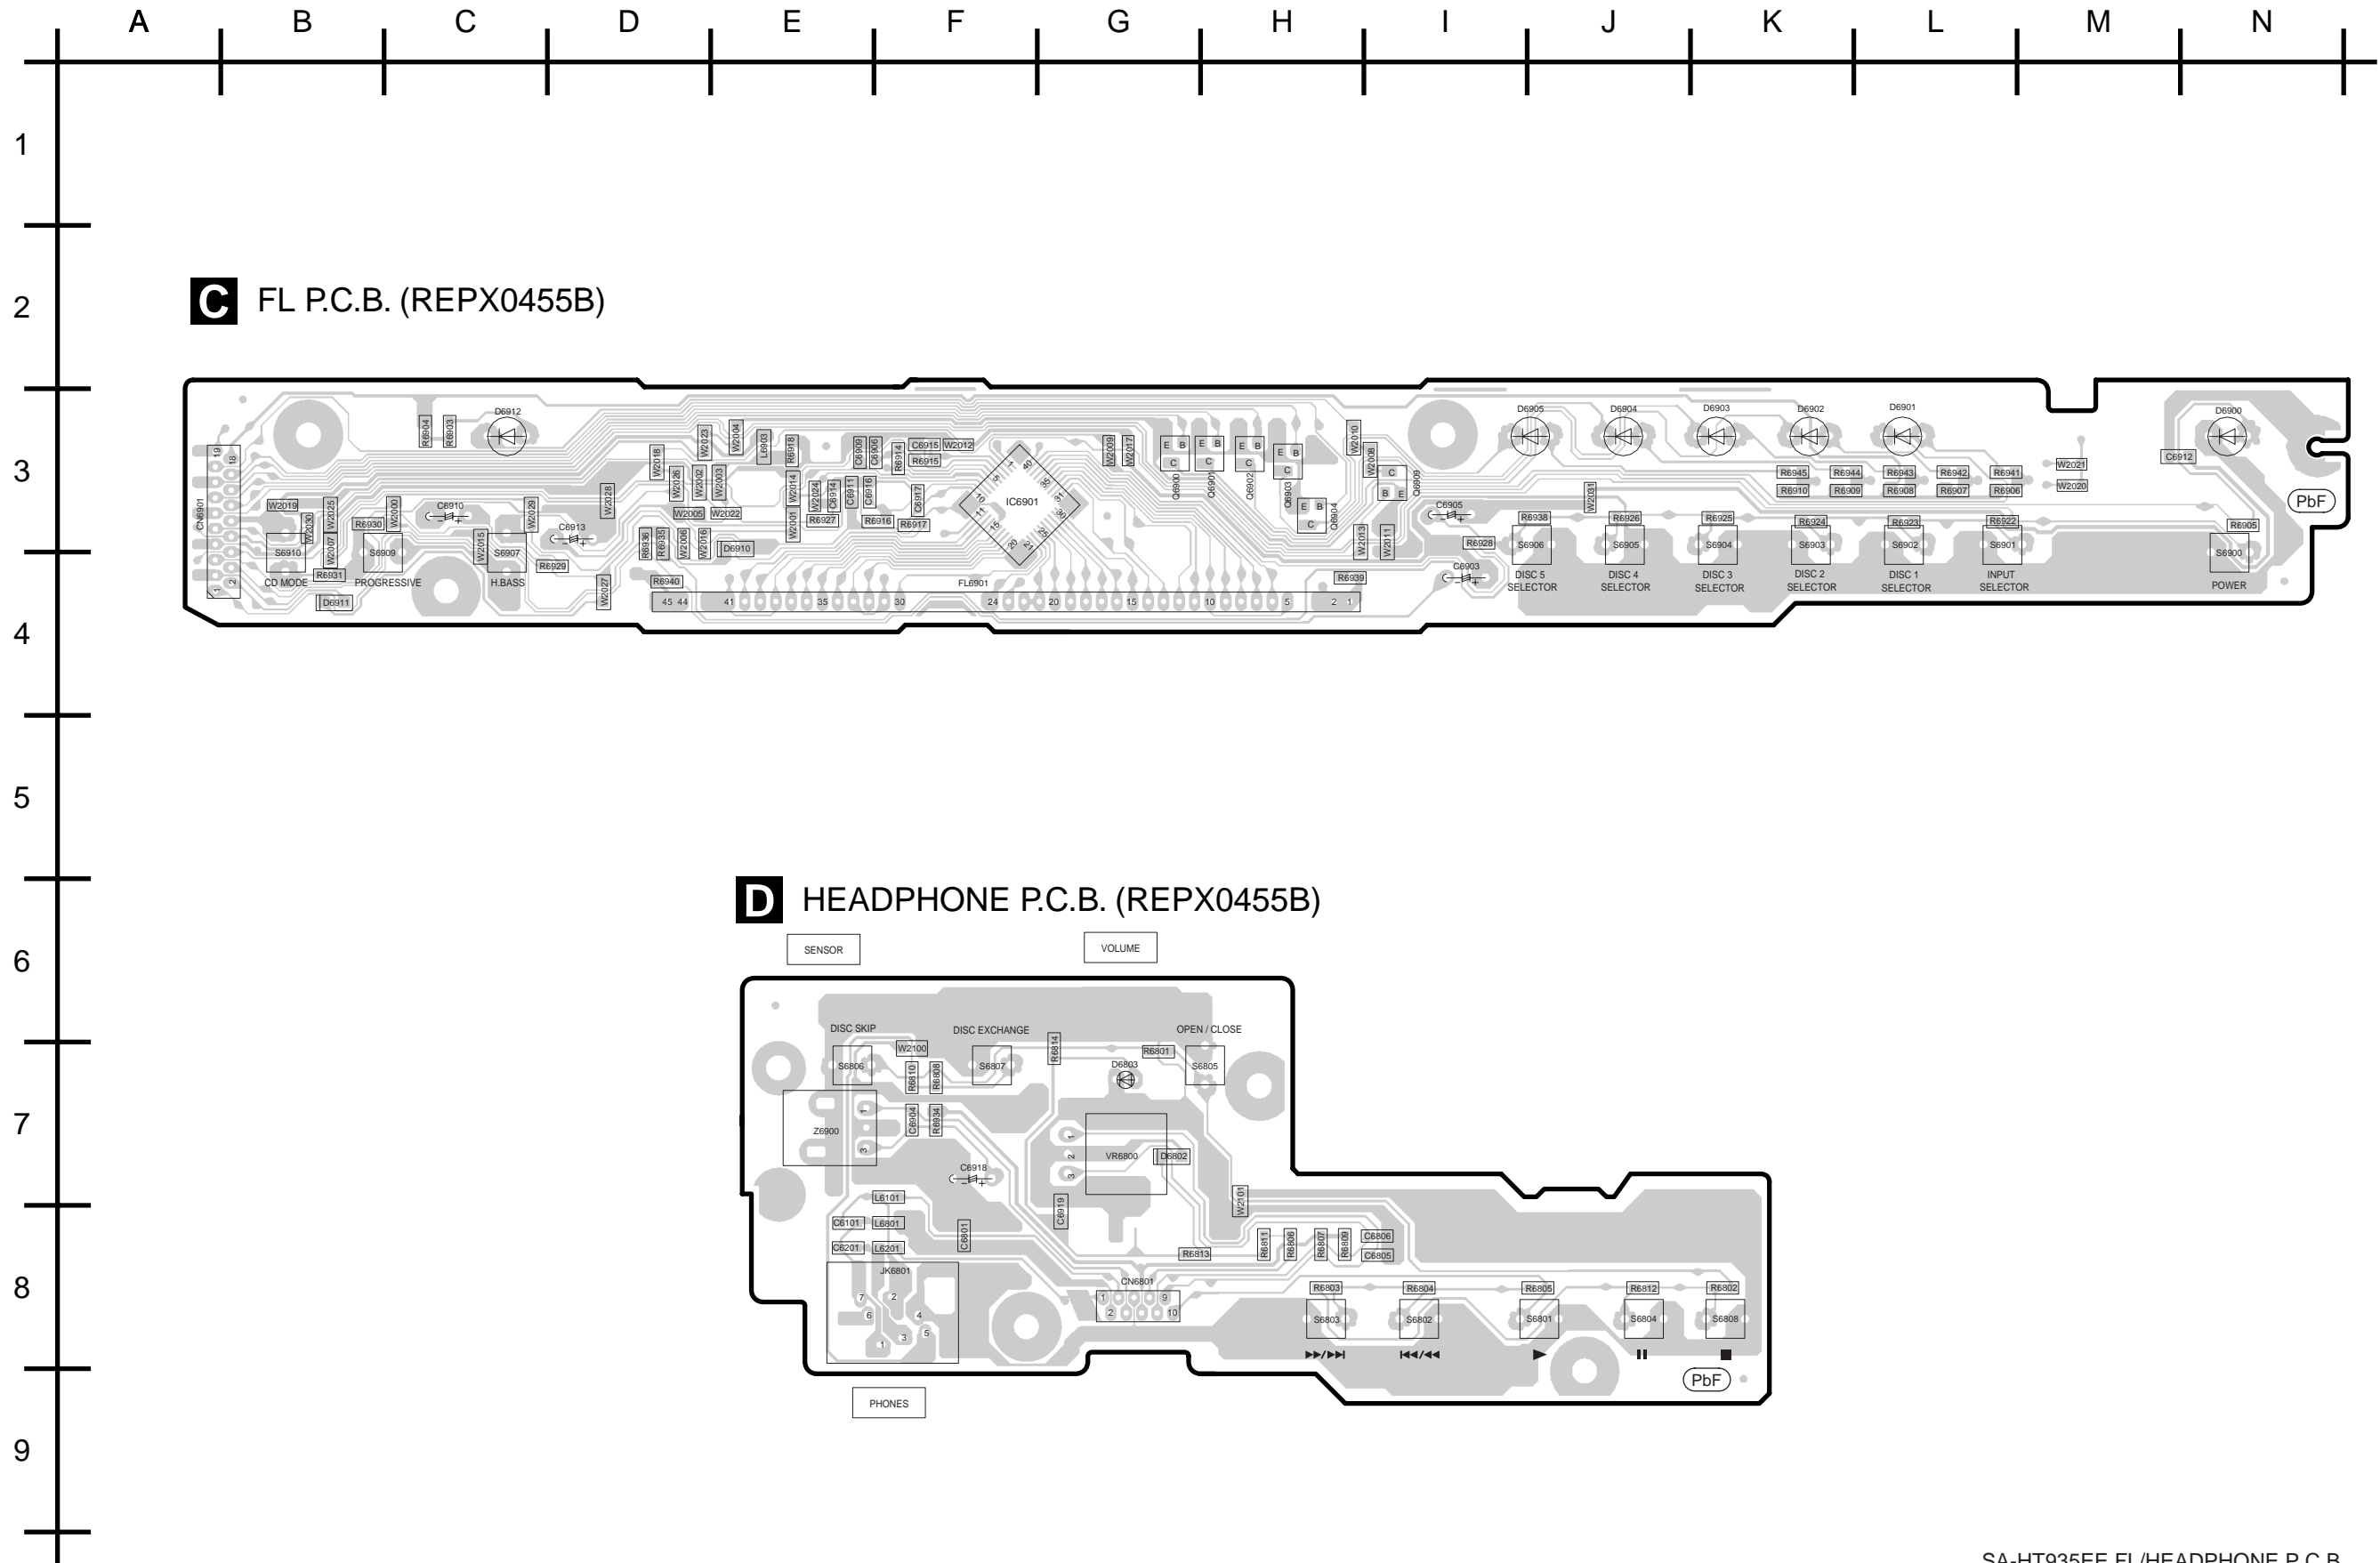

**C** FL P.C.B. (REPX0455B)


**D** HEADPHONE P.C.B. (REPX0455B)

SA-HT935EE FL/HEADPHONE P.C.B.

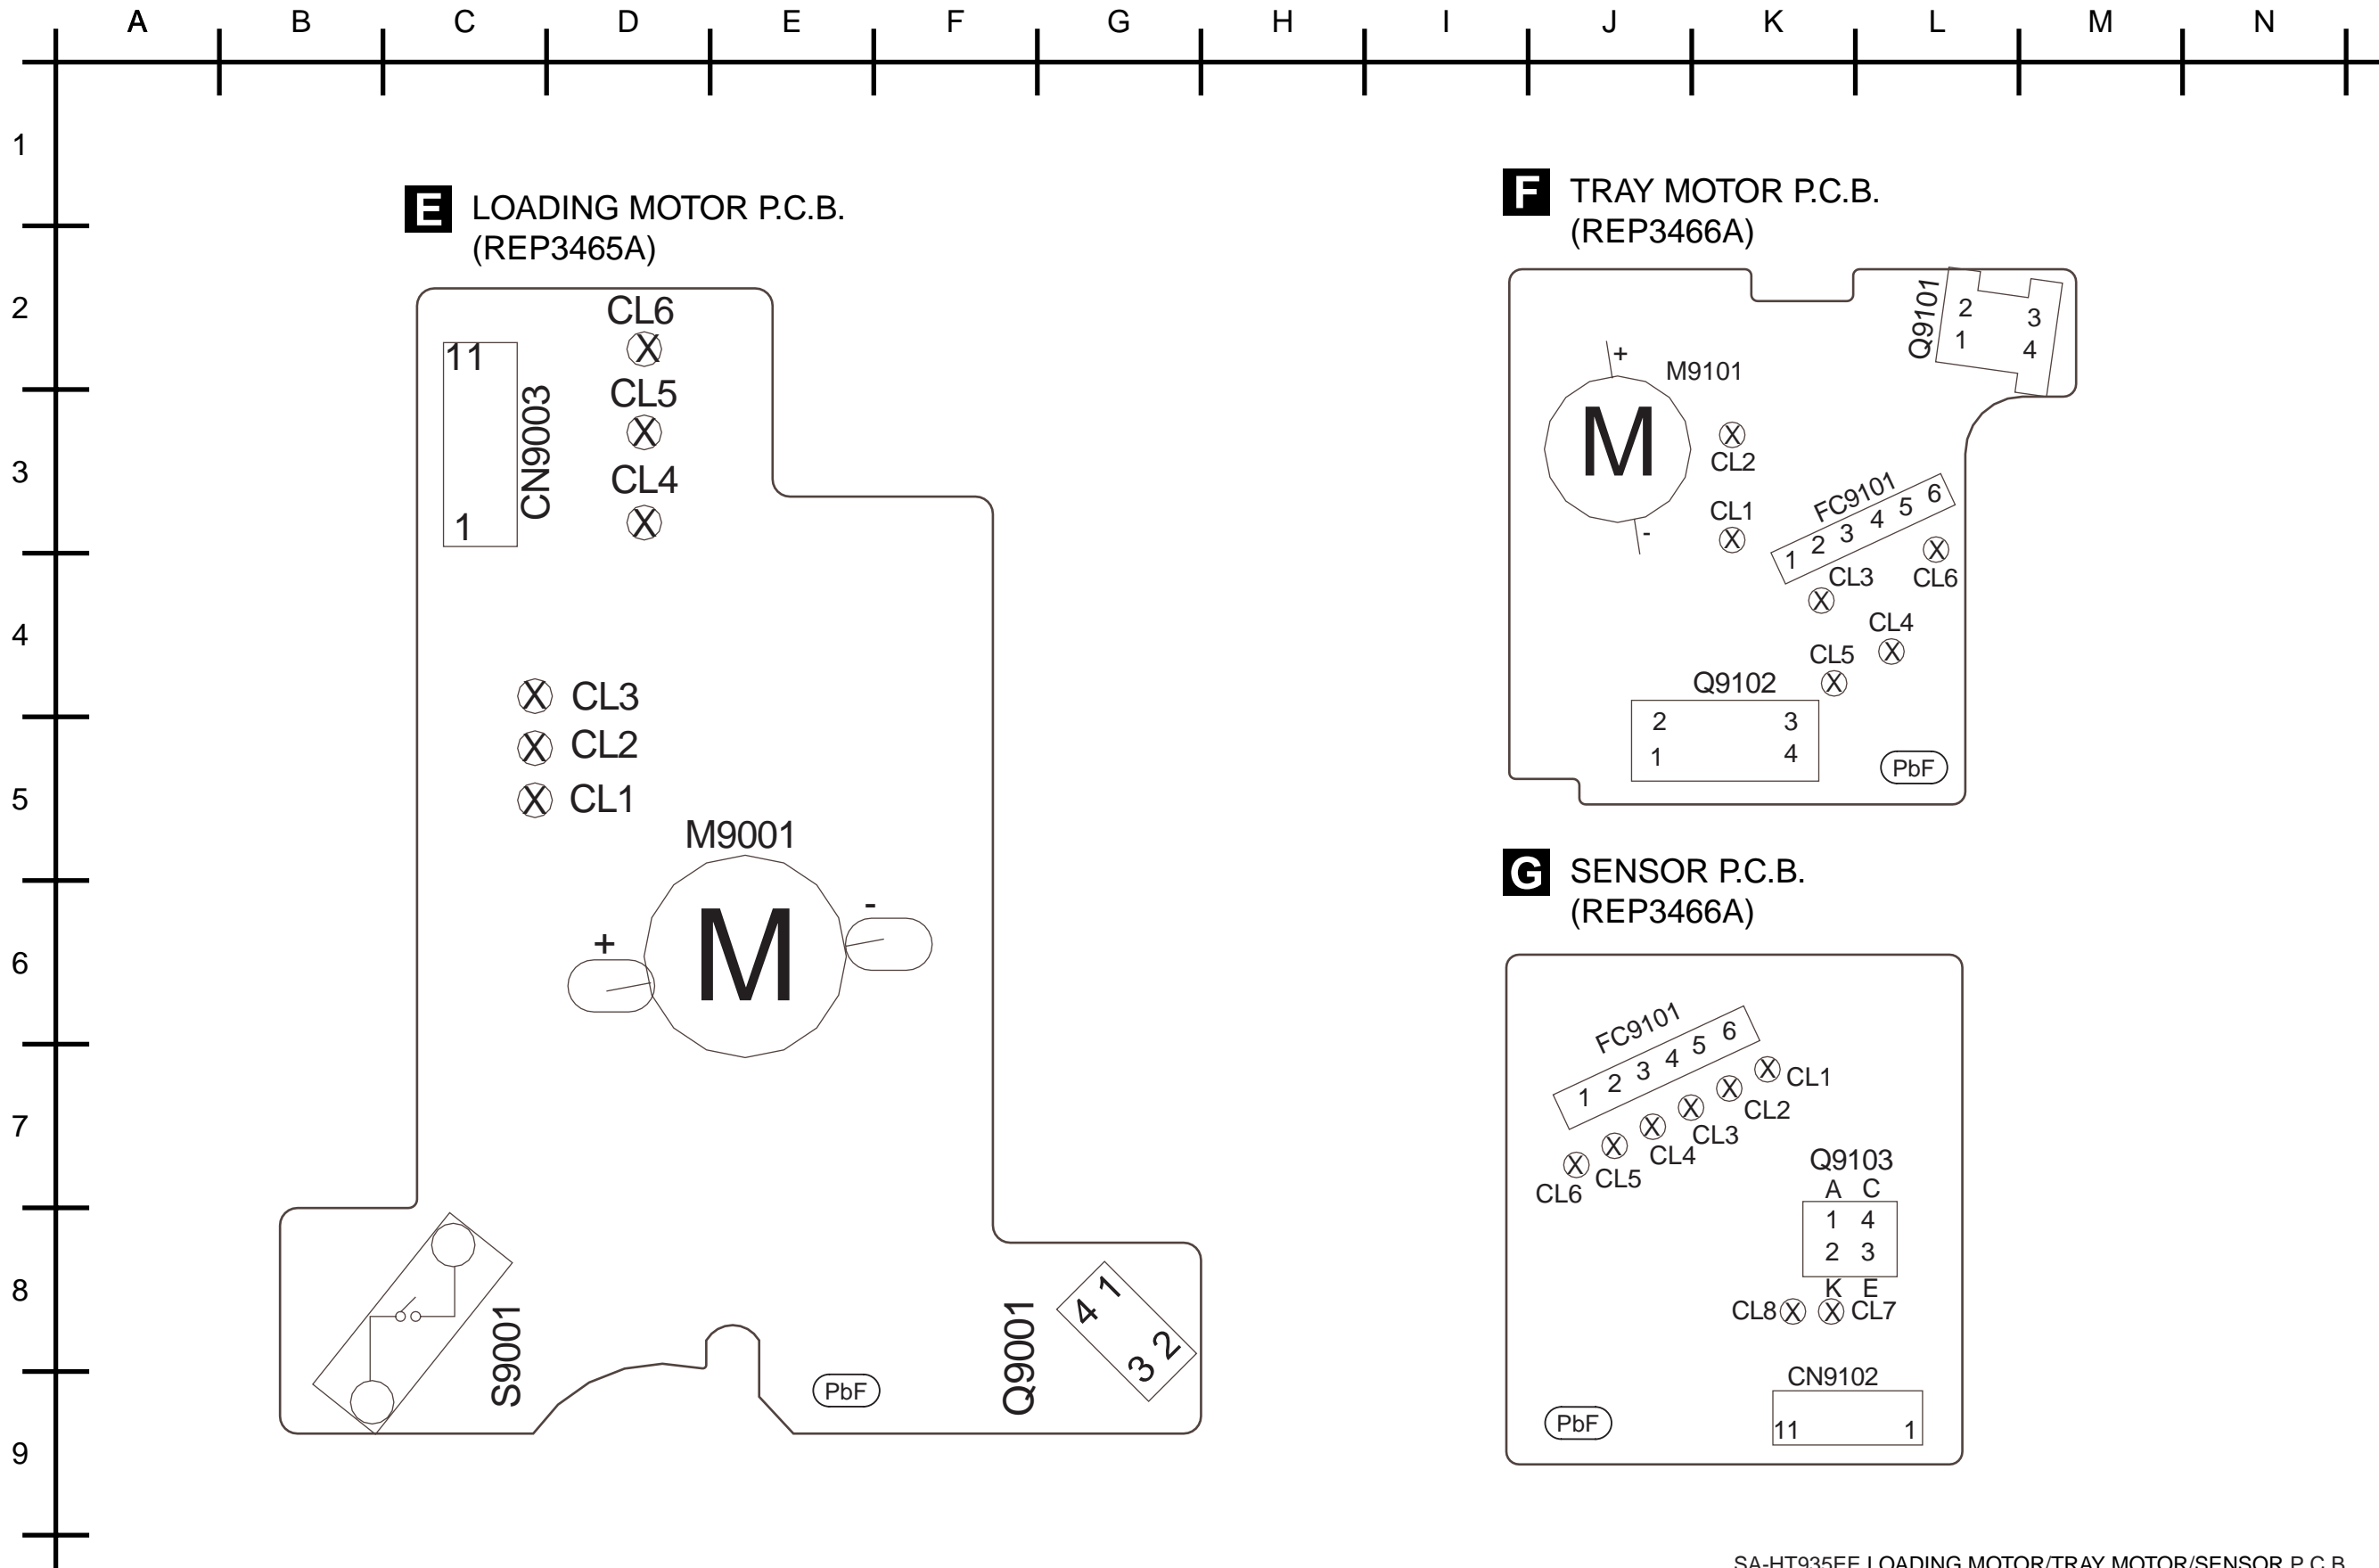































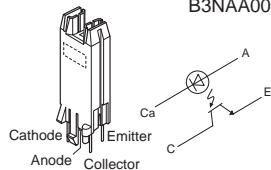
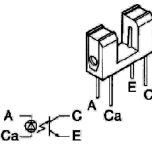
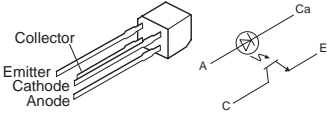
SA-HT935EE LOADING MOTOR/TRAY MOTOR/SENSOR P.C.B.

# 24 Wiring Connection Diagram

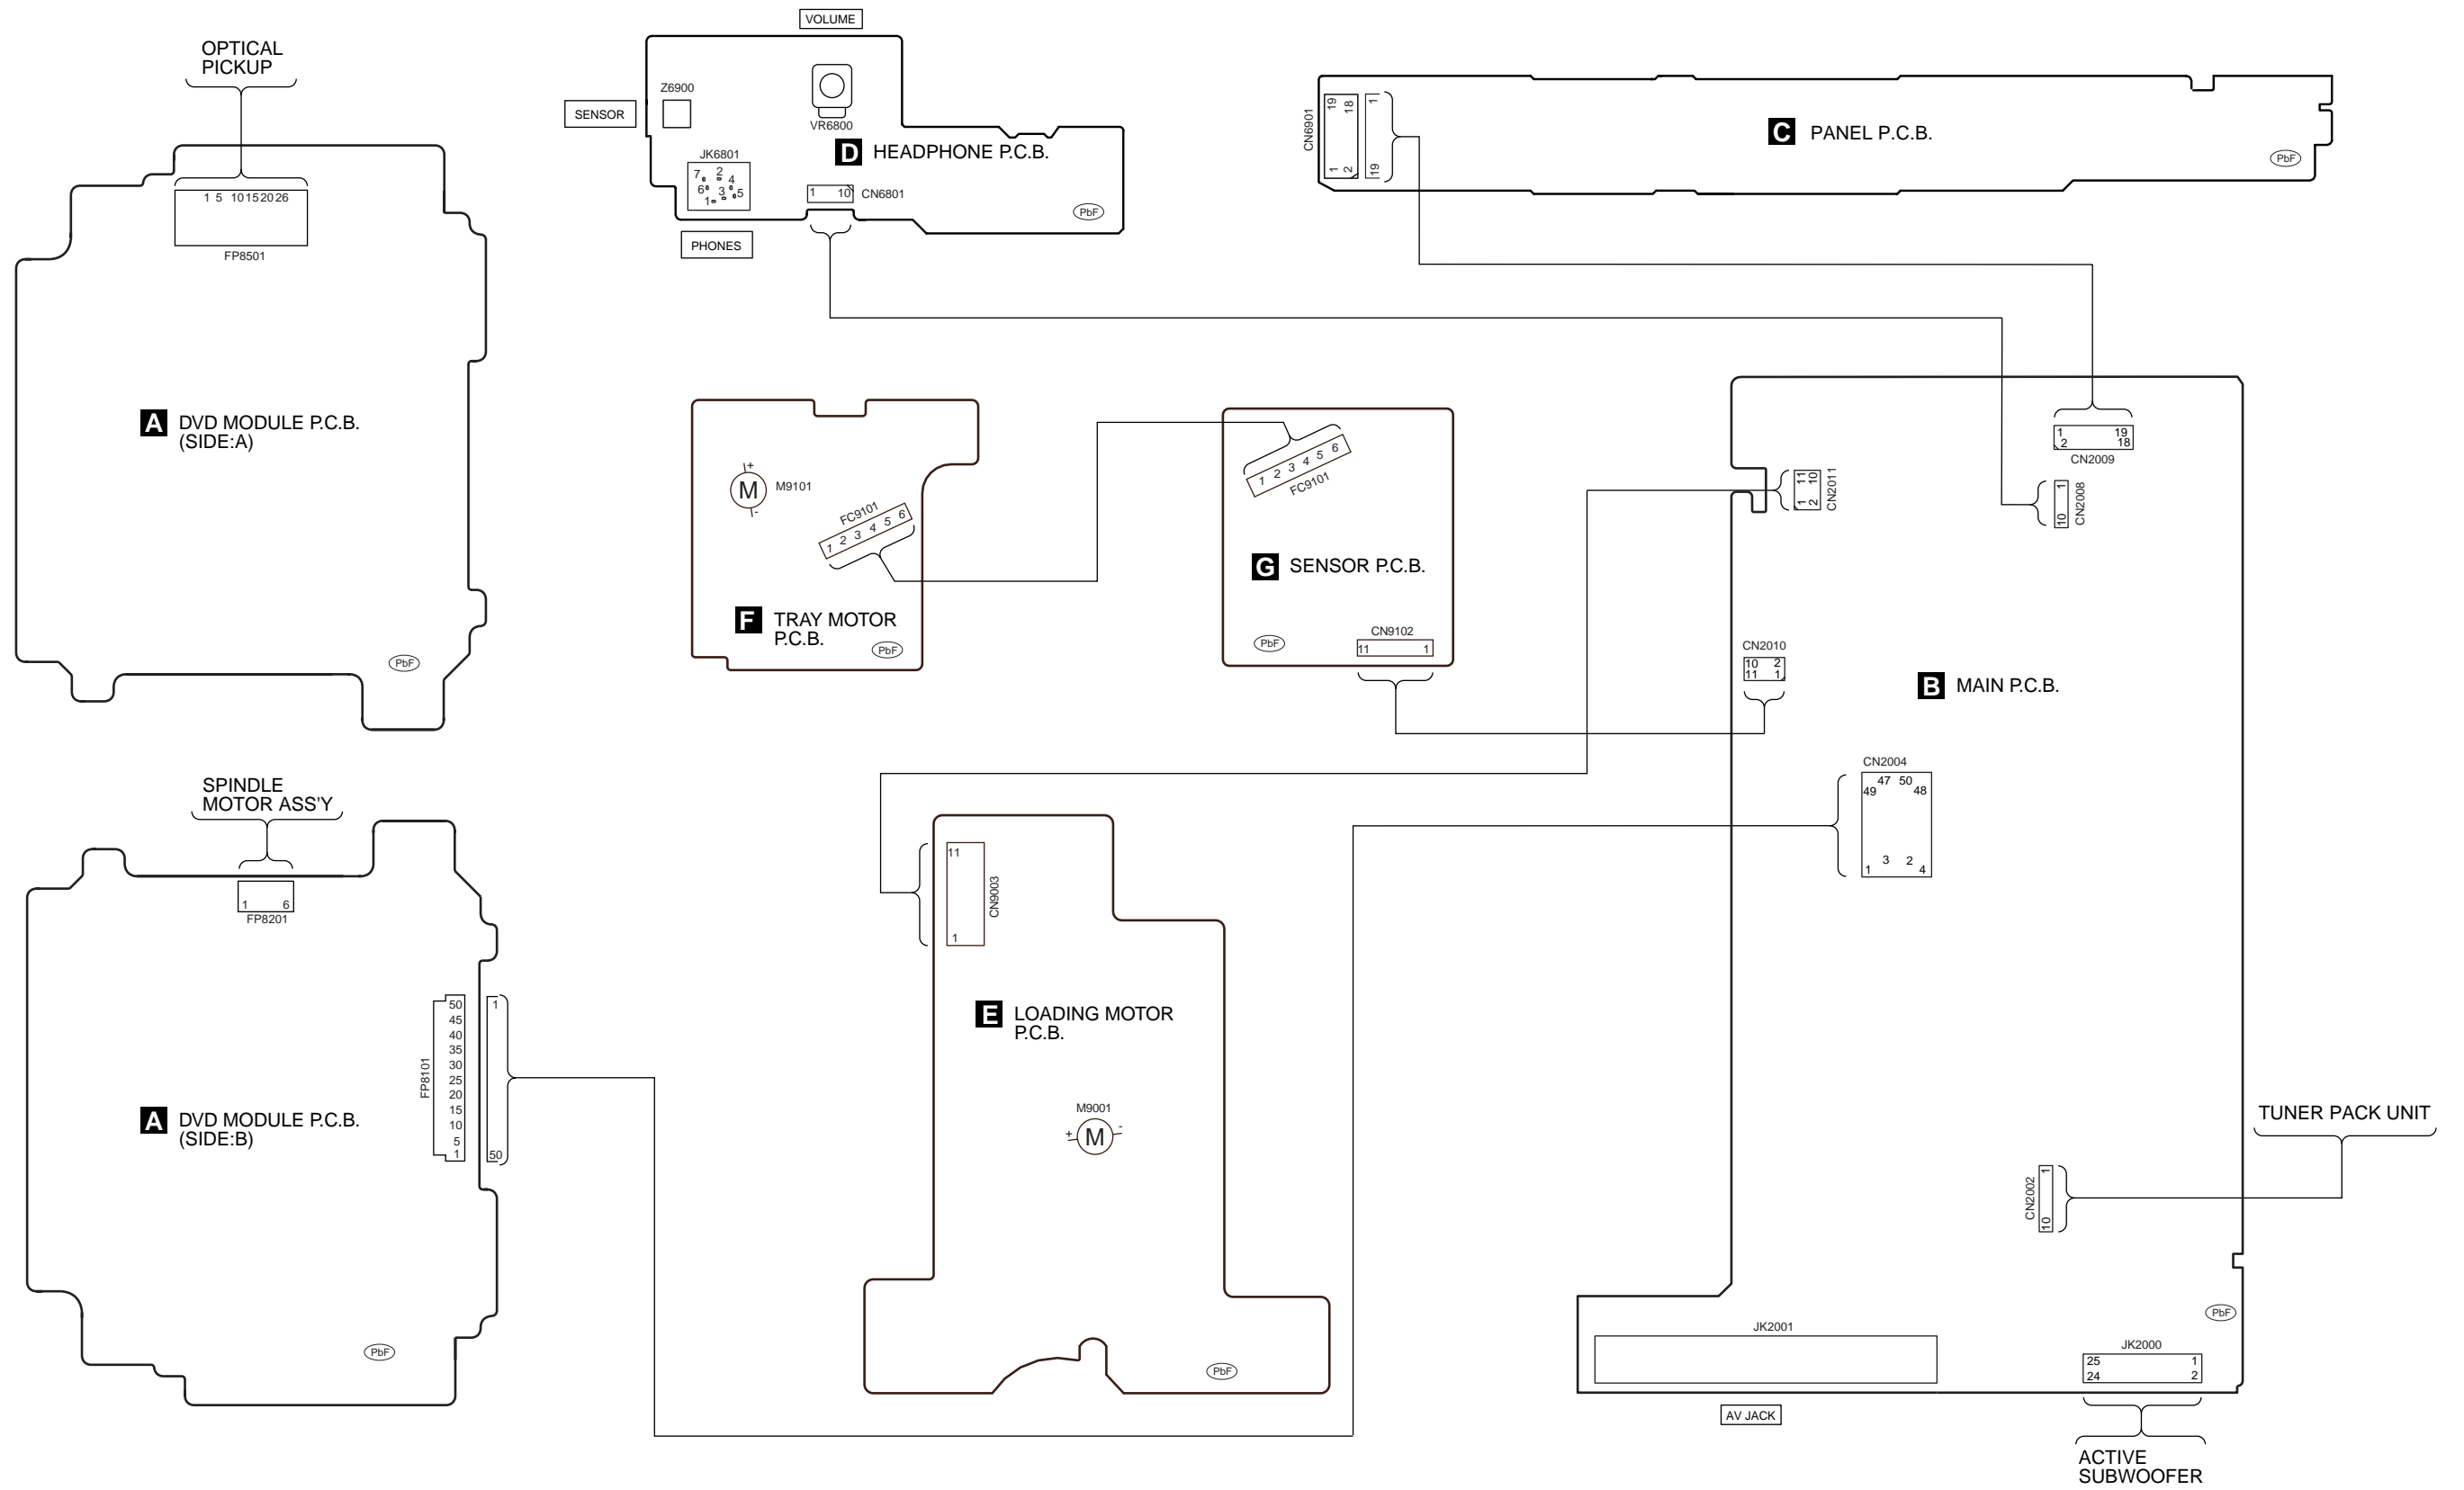



# 25 Illustration of IC's, Transistors and Diodes

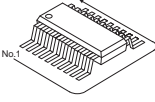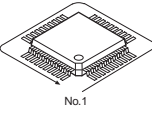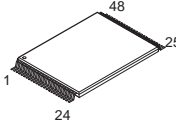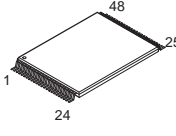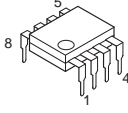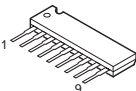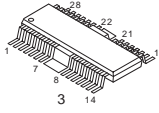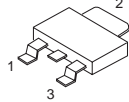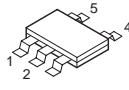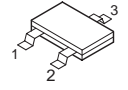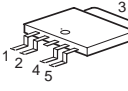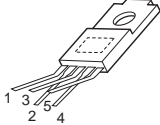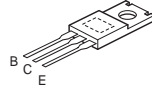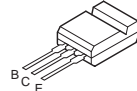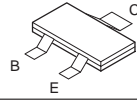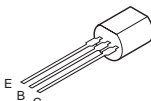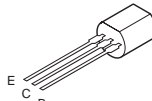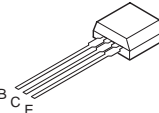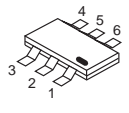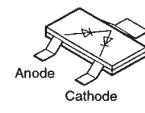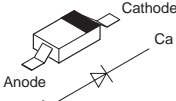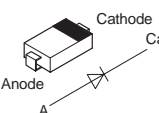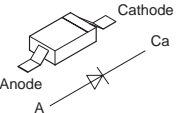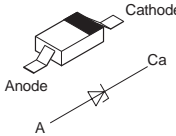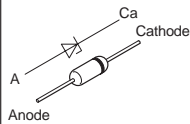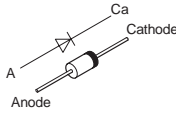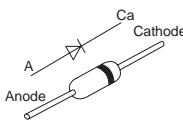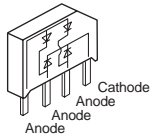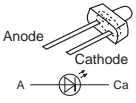 <p>C0ABBB000118 (8p) C0ABCB000052 (14p) C0CBCBD00018 (8p) C0FBBK000050 (28p) C1BB00000979 (20p) C3ABPG000133 (54p) C9ZB00000466 (16p)</p>		 <p>C3EBGC000044 (8p) C3EBEG000072 (8p)</p>		 <p>C0HBB0000044 (40p) C1BB00000845 (80p) MN101C49GHB (100p) MN2DS0003APH (256p)</p>		<p>RFKWMH90E160</p> 
<p>C0AABB000125</p> 	<p>C0GAG0000007</p> 	<p>C0GBG0000048</p> 	<p>C0CBADG00023</p> 	<p>C0EBA0000031 C0JBAA000346</p> 	<p>C0EBE0000384</p> 	
<p>C0DBEZG00021</p> 	<p>C0DAAZG00012</p> 	<p>B1BCCG000023</p> 	<p>2SD21370PA</p> 	<p>2SB09700RL 2SB1219AHL 2SD1819A0L 2SB0709AHL B1ABCF000176</p> 	<p>B1GBCFLL0037 B1ADCF000001 B1GBCFJA0028 B1GBCFJN0033 B1GDCFGA0018 B1GBCFJJ0051 B1GDCFJJ0047 UNR521400L UNR511V00L UNR521100L</p>	
<p>B1AAKD000014</p> 	<p>B1ACKD000005</p> 	<p>B1BCCD000019</p> 	<p>B1GFGCAA0001 C1AB00001486</p> 	<p>B0ADCJ000020</p> 	<p>MAZ82200ML</p> 	
<p>B0ACCE000003 B0ECKM000016</p> 	<p>MA2J11100L</p> 	<p>B0ACCK000005 B0BC9R000008 B0BC7R500001 B0BC5R000009 B0JCPD000025</p> 	<p>B0BC5R600003</p> 	<p>B0EAKM000117</p> 		
<p>MA2J72800L</p> 	<p>B0FBAM000010</p> 	<p>B3AAA0000583 B3ABA0000397 B3AEA0000041</p> 	<p>B3NAA0000068</p> 	<p>B3NAA0000078</p> 		
<p>B3NAA0000011</p> 	<p>B3NAB0000027</p> 					

## 26 Terminal Function of ICs

### 26.1. IC2018 (MN101C49GHB): Operation CPU

Pin No.	Terminal Name	I/O	Function
1	AVSS	-	Power supply for A/D converter
2	KEY1	I	Key 1 line input
3	DES1	I	Tuner region setting signal input
4	DES2	I	Model select signal input
5	DES3	I	DVD region setting signal input
6	KEY2	I	Key 2 line input
7	DISC SENSE	I	Disc sensor signal input
8	N.C	-	No connecting (GND)
9	N.C	-	No connecting (GND)
10	AVCC	-	+ Power supply for A/D converter
11	VCC	-	Power supply terminal (5V)
12	XOUT	-	Main clock output (8.0MHz)
13	XIN	-	Main clock input (8.0MHz)
14	VSS	-	GND
15	XI	-	GND
16	XO	-	Not used, open
17	MMOD	-	GND
18	DVD CMD	O	DVD command signal output
19	DVD STA	I	DVD status signal input
20	DVD CK	I	DVD clock signal input
21	FLD RST	O	FL Driver Reset signal output
22	SBI2	-	No connection (OPEN)
23	EDA	I/O	EEPROM data in/output
24	ECK	O	EEPROM clock output
25	ECS	O	EEPROM latch output
26	RMT	I	Remote control input
27	LOAD	I	UP/DOWN switch signal input
28	OPEN SW	I	Rotary tray OPEN switch signal input
29	POS SW	I	Position detection sensor signal input
30	PULSE	I	Speed detection sensor signal input
31	SYNC	I	AC failure detection input
32	VPP	-	Power supply for Flash
33	RESET	I	System reset signal input
34	PWM	O	Pulse width modulation output for the changer
35	WIDE1	-	Not used
36	N.C	-	Not used
37	MUTE_S	O	Mute signal output for surround Audio signal
38	MUTE_DVD	I	Signal output from DVD module control mute circuit
39	ASP_DA	O	ASP data output
40	ASP_CK	O	ASP clock output
41	VPP	-	Power supply for Flash
42	SS_DATA	O	Surround data output
43	MUTE_C	O	Mute signal output for Center speaker
44	SS_CLK	O	Surround clock output
45	N.C	-	Not used, open
46	DSP_CS	-	Not used, open
47	N.C	-	Not used, open
48	N.C	-	Not used
49	SURR FC2	-	Surround Frequency Limiter
50	N.C	-	Not used, open
51	MUTE F	O	Mute signal output for Front speaker
52	MUTE SW	O	Mute signal output for Subwoofer
53	N.C	-	Not used, open
54	N.C	-	Not used, open
55	MUTE L	O	Mute signal output for the line output
56	N.C	-	Not used, open
57	N.C	-	Not used, open
58	N.C	-	Not used, open

Pin No.	Terminal Name	I/O	Function
59	MUTE_HP	O	Mute signal output for Headphone
60	N.C	-	Not used
61	TU_SD	I	Tuner signal detect input
62	TU_ST/DO	I	Stereo indicator from Tuner/ DO output of Tuner IC
63	TU_SCL (PLL CK)	O	Clock output for Tuner
64	TU_SDA (PLL DA)	O	Data output for Tuner
65	FM_DET	I	Tuner FM detect signal input
66	RF_DET	I	RF detect input (Wireless ready)
67	RF_LINK	I	RF power control input (Wireless ready)
68	DVD_PCNT	O	Control signal output for the power for the DVD module
69	N.C	-	Not used, open
70	PCONT	O	Control signal output for the power control relay
71	MUTE_H	O	Mute signal output for HIC amplifier
72	DC_DET	I	DC detection signal input
73	HB_MUTE	O	Mute signal output for Harmonic bass
74	N.C	-	Not used, open
75	JOG_B	I	Volume jog B signal input
76	JOG_A	I	Volume jog A signal input
77	JOG_LED	O	Volume Jog LED control signal output
78	RF_PCONT	O	Control signal output for the RF power
79	N.C	-	Not used, open
80	N.C	-	Not used, open
81	N.C	-	Not used, open
82	DISC5_LED	O	Disc 5 LED control signal output
83	DISC4_LED	O	Disc 4 LED control signal output
84	DISC3_LED	O	Disc 3 LED control signal output
85	DISC2_LED	O	Disc 2 LED control signal output
86	DISC1_LED	O	Disc 1 LED control signal output
87	N.C	-	Not used
88	N.C	-	Not used, open
89	N.C	-	Not used, open
90	N.C	-	Not used, open
91	FL_CS	O	FL driver latch output
92	FL_CK	O	FL driver clock output
93	FL_DAT	O	Data input for the FL driver
94	LOAD_REV	O	Reverse control signal output for OPEN/CLOSE motor
95	VSS	-	Power supply for D/A converter (GND)
96	LOAD_FWD	O	Forward control signal output for OPEN/CLOSE motor
97	TURN_FWD	O	Forward control signal output for turn motor
98	TURN_REW	O	Reverse control signal output for turn motor
99	NC	-	Not used, open
100	VDD	-	+ Power supply for D/A converter

## 27 Parts Location and Replacement Parts List

### Notes:

\*Important safety notice:

Components identified by  $\triangle$  mark have special characteristics important for safety purpose.

Furthermore, special parts which have purposes of fire-retardant (resistors), high-quality sound (capacitors), low-noise (resistors), etc. are used.

When replacing any of components, be sure to use only manufacture's specified parts shown in the parts list.

\*Warning: This product uses a laser diode. Refer to caution statements.

\*Capacity values are in microfarads ( $\mu\text{F}$ ) unless specified otherwise, P=Pico-farads (pF), F=Farads (F).

\*Resistance values are in ohms, unless specified otherwise, 1K=1,000 (OHM), 1M=1,000K (OHM).

\*The parenthesized indications in the Remarks columns specify the model names and areas. (Refer to the cover page)

\*The marking (RTL) indicates the retention time is limited for this item. After the discontinuation of this assembly in production, it will no longer be available.

\*Reference for O/I book languages are as follows:


[Ur: Ukrainian, Ru: Russia]


\*[M] indicates in the Remarks columns indicates parts supplied by PAVCSG.

\*[SPG] indicates in the Remarks columns indicates parts supplied by SPG [PAVC].





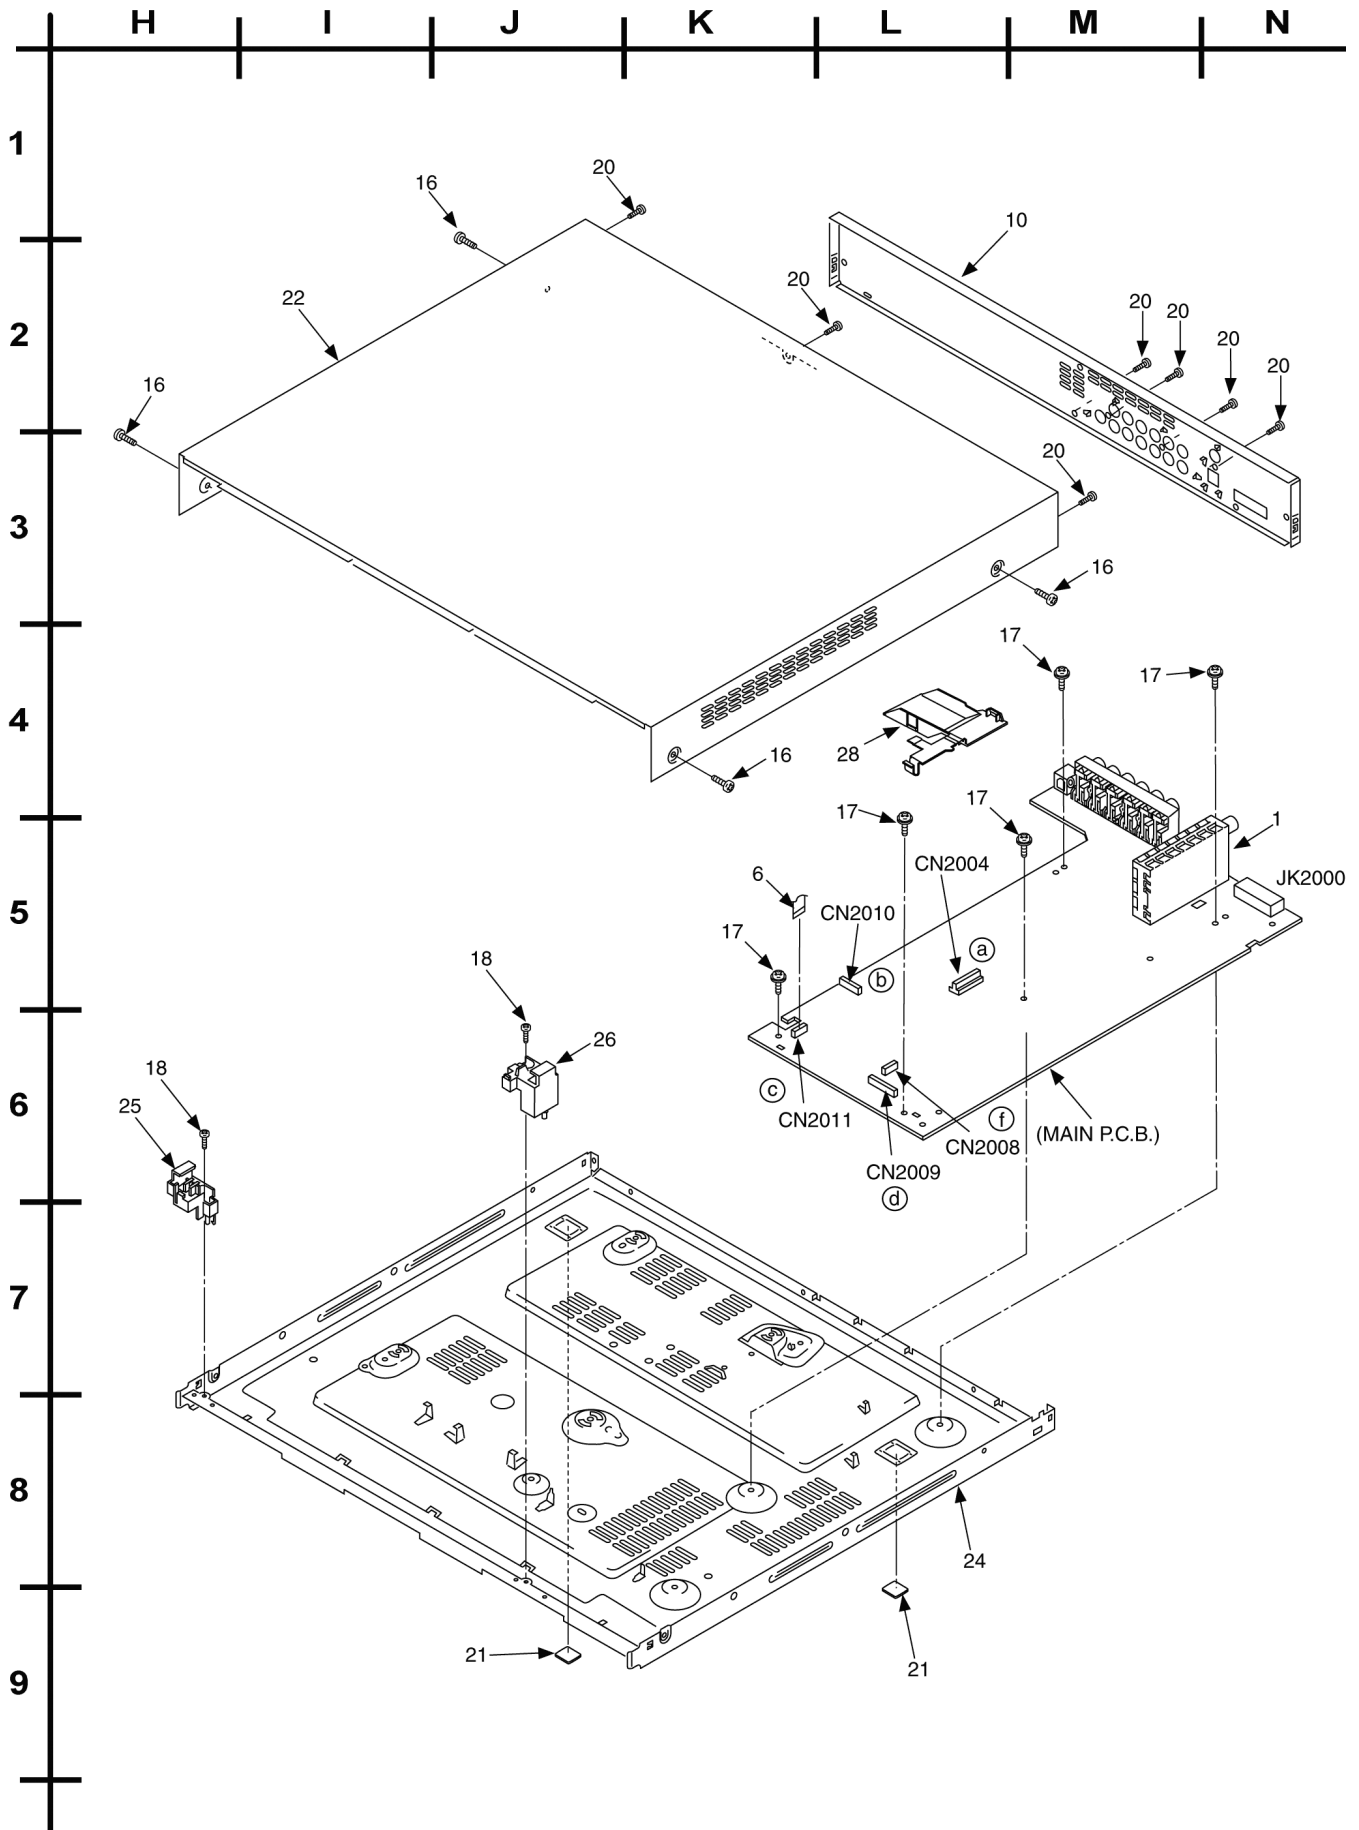

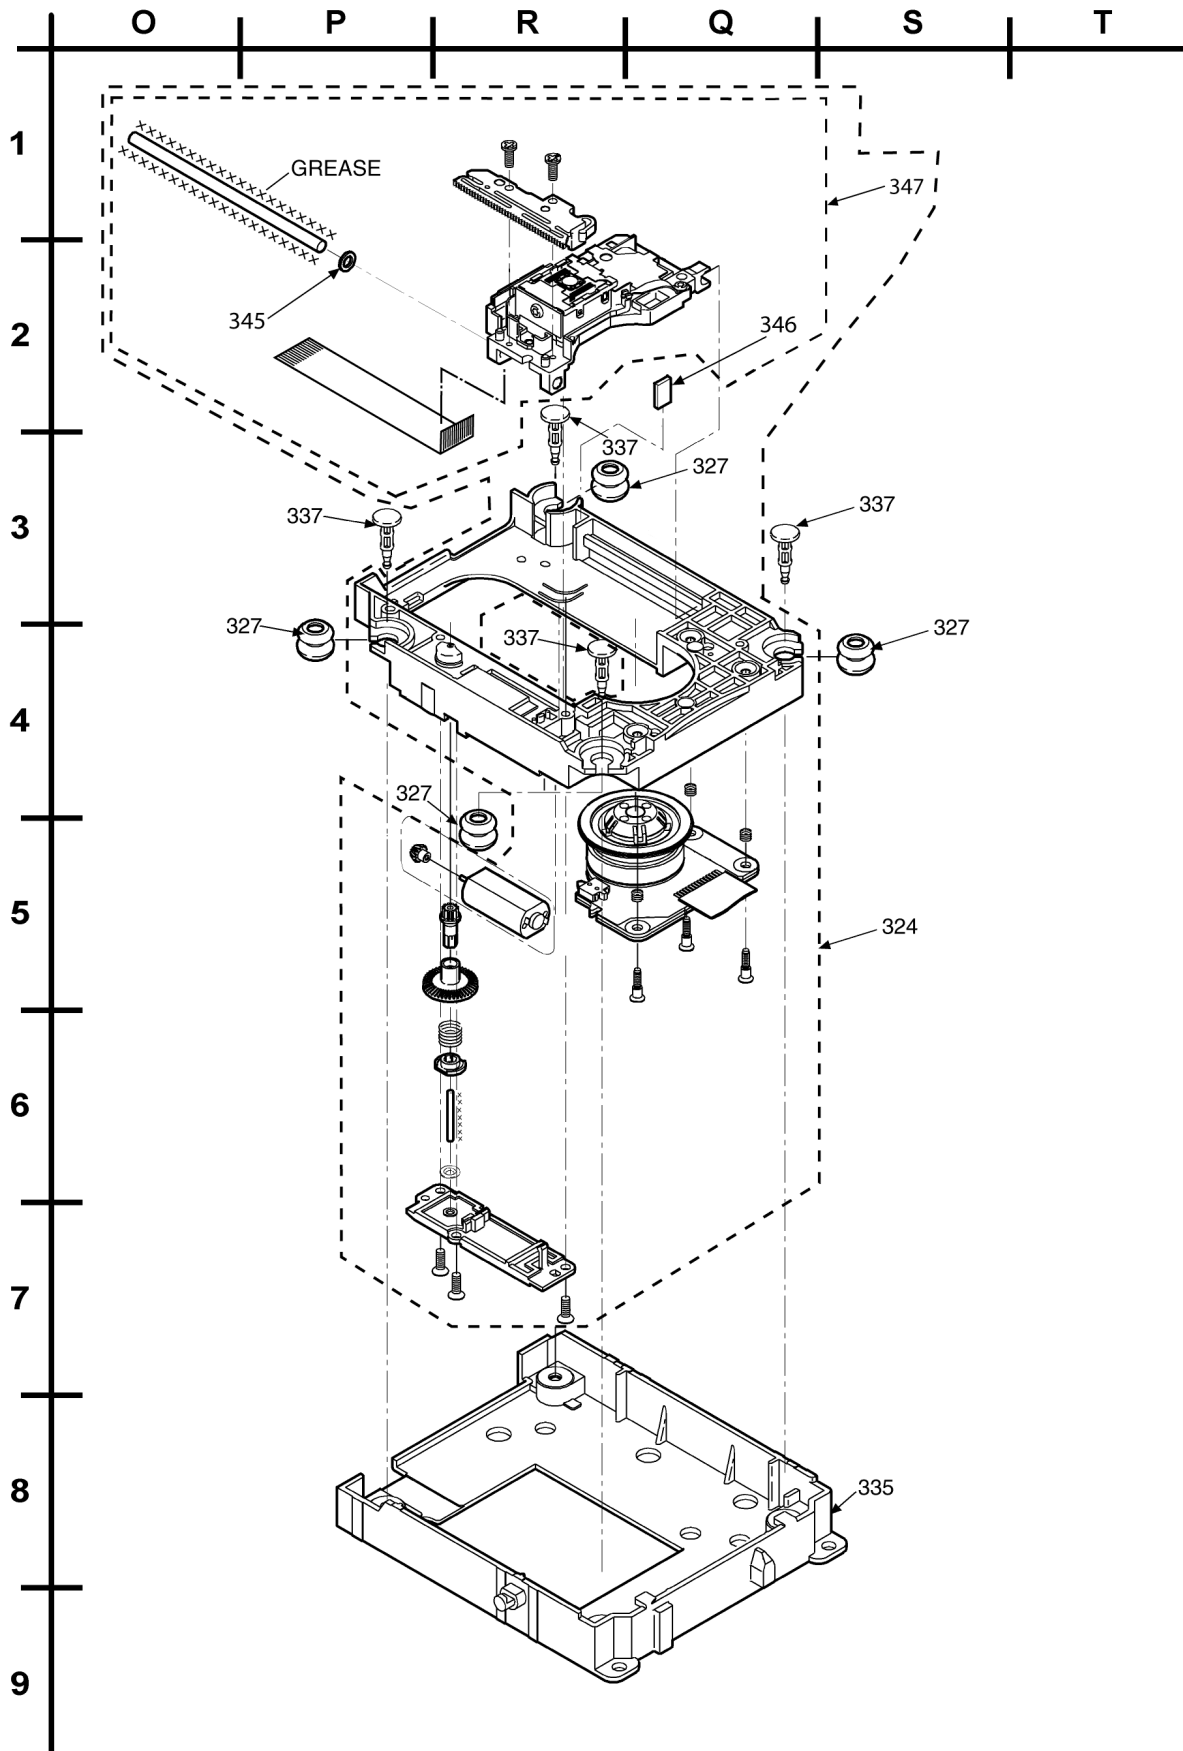

## 27.1.2. Traverse and Cabinet Parts List

Ref. No.	Part No.	Part Name & Description	Remarks
		CABINET AND CHASSIS	
1	J3CCBC000008	TUNER PACK	[M]
2	RKWX0250A-Q	TRAY ORNAMENT	[M]
3	REEX0420	10P FFC WIRE	[M]
4	REEX0421	50P FFC WIRE	[M]
5	REEX0422	19P FFC	[M]
6	REZ1483	11P FFC (MECHA BASE	[M]
7	RGKX0311-S	TRAY LID	[M]
8	RGPX0177C-S	FRONT PANEL	[M]
9	RGQX0025-Q	SENSOR WINDOW	[M]
10	RGRX0045D-E	REAR PANEL	[M]
11	RGUX0622-S	OPEN/CLASE BUTTON	[M]
12	RGUX0623-S	POWER BUTTON	[M]
13	RGUX0624-S	OPERATION BUTTON	[M]
14	RGWX0076-S	VOLUME KNOB	[M]
15	RHD26046	SCREW	[M]
16	RHD30007-1SJ	SCREW	[M]
17	RHD30090-1	SCREW	[M]
18	RHD30102-1	SCREW	[M]
19	RHD30107-1	SCREW	[M]
20	RHD30119-S	SCREW	[M]
21	RKA0059-K	LEG RUBBER	[M]
22	RKMX0111-S	TOP CABINET	[M]
23	RKWX0249A-Q	FL ORNAMENT	[M]
24	RMKX0103	BOTTOM CHASSIS	[M]
25	RMN0730	TRAY GUIDE L	[M]
26	RMN0731	TRAY GUIDE R	[M]
27	RMNX0149	FL HOLDER	[M]
28	RMVX0085	CHASSIS COVER	[M]
29	RMX0274	TRAY SUPPORT R	[M]
30	RMX0275	TRAY SUPPORT L	[M]
31	RKAX0026-K	RUBBER CUSHION	[M]
32	RMRX0052-Q	LIGHTING RING	[M]
		TRVERSE DECK	
301	RDG0567	PULSE GEAR	[M]
302	RDG0568	OPEN LOCK GEAR	[M]
303	RDG0569	CLOSE LOCK GEAR	[M]
304	RDV0073	TRAY BELT	[M]
305	REZ1484	11P FFC	[M]
306	RGQ0358-K	TRAY BASE	[M]
307	RGQ0359-K	ROTARY TRAY	[M]
309	RMB0365	TRAY SPRING	[M]
310	RME0384	CLOSE LOCK GEAR SPRING	[M]
311	RMF0324	BLOCK SHEET	[M]
312	RMM0255	SLIDE PLATE L	[M]
313	XTB3+10JFJ	SCREW	[M]
314	XTN26+8GFJ	SCREW	[M]
315	XTWS3+10SFJ	SCREW	[M]
316	JSM0048	MAGNET	[M]
317	RDG0562	PULLEY GEAR	[M]
318	RDG0563	RELAY GEAR A	[M]
319	RDG0564	RELAY GEAR B	[M]
320	RDG0565	DRIVE GEAR A	[M]
321	RDG0566	DRIVE GEAR B	[M]
322	RDG0570	CAM GEAR	[M]
323	RDV0072	LOADING BELT	[M]
324	RAE2012Z-S	DU69U TRAVERSE	[M]
325	REM0112	LOADING MOTOR ASS'Y	[M]
326	RMC0387	SUPPORT SPRING	[M]
327	RMG0598-A	FLOATING RUBBER	[M]
328	RMG0615-K	CUSHION SHEET	[M]
329	RMG0620-K	CUSHION RUBBER	[M]
330	RMK0555	MECHA BASE	[M]
331	RML0646	CHANGE LEVER	[M]
332	RMM0254	SLIDE PLATE R	[M]
333	RMR1446-X	CLAMPER	[M]
334	RMR1447-X	MAGNET HOLDER	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
335	RMR1596-X2	MIDDLE CHASSIS	[M]
336	RMR1507-X	SUPPORT PIECE	[M]
337	RMS0789	FIXED PIN	[M]
338	RMS0802-J	DRIVE GEAR SHAFT	[M]
339	XTN26+14JFJK	SCREW	[M]
340	XTV2+6GFJ	PCB SCREW	[M]
341	XWG6FFY	WASHER	[M]
342	RMF0182	TRAY FELT	[M]
343	RMS0123-1	FIXED PIN B	[M]
344	RMM0256	BLOCK BASE	[M]
345	RMG0617-H	CUSHION RUBBER A	[M]
346	RMG0618-H	CUSHION RUBBER B	[M]
347	RXQ1252	DVD OPU CUB ASS'Y	[M]
348	RMX0247	WASHER	[M]

## 27.2. Component Parts List

Ref. No.	Part No.	Part Name & Description	Remarks
		PRINTED CIRCUIT BOARDS	
	REP3867B	DVD MODULE P.C.B	[M] (RTL)
	REPX0451C	MAIN P.C.B	[M] (RTL)
	REPX0455B	FL P.C.B	[M] (RTL)
	REPX0455B	HEADPHONE P.C.B	[M] (RTL)
	REP3465A	LOADING MOTOR P.C.B	[M] (RTL)
	REP3466A	TRAY MOTOR P.C.B	[M] (RTL)
	REP3466A	SENSOR P.C.B	[M] (RTL)
		INTEGRATED CIRCUITS	
IC2006	C9ZB00000466	IC VIDEO BUFFER	[M]
IC2007	C0GAG0000007	IC MOTOR DRIVE	[M]
IC2008	C0GAG0000007	IC MOTOR DRIVE	[M]
IC2009	C1AB00001486	IC VIDEO SWITCH	[M]
IC2010	C0ABBB000118	IC BUFFER AMP	[M]
IC2011	C1BB00000845	IC ASP	[M]
IC2013	C0AABB000125	IC HP AMP	[M]
IC2014	C1BB00000979	IC ANALOG SUPER SURROUND	[M]
IC2015	C0ABBB000118	IC BUFFER AMP	[M]
IC2018	MN101C49GHB	IC MICRO-PROCESSOR	[M]
IC2601	C0ABC0000052	IC BUFFER AMP	[M]
IC2602	C0ABBB000118	IC BUFFER AMP	[M]
IC2801	C0AAZG00012	IC 5V REGULATOR	[M]
IC2802	C0CBADG00023	IC DC-DC CONVERTER	[M]
IC2803	C0DBEZG00021	IC REGULATOR	[M]
IC6901	C0HBB0000044	IC DISPLAY	[M]
IC8001	MN2DS0003APH	IC DV2.1 LSI	[M]
IC8051	C3ABPG000133	IC 64M SDRAM	[M]
IC8111	C0CBCBD00018	IC POWER SUPPLY	[M]
IC8251	C0GBG0000048	IC MOTOR DRIVER	[M]
IC8421	C0FBBK000050	IC AUDIO DAC	[M]
IC8601	C0EBE0000384	IC VOLTAGE DETECTING	[M]
IC8606	C0EBA0000031	IC RESET	[M]
IC8651	RFKWMH90E160	IC 16M FLASH ROM	[SPG]
IC8691	C0JBAA000346	IC AND GATE	[M]
IC8695	C0JBAA000346	IC AND GATE	[M]
		TRANSISTORS	
Q2000	B1GBCFLL0037	TRANSISTOR	[M]
Q2001	B1GBCFJJ0051	TRANSISTOR	[M]
Q2002	B1GBCFJJ0051	TRANSISTOR	[M]
Q2003	B1GBCFJN0033	TRANSISTOR	[M]
Q2004	B1GBCFJN0033	TRANSISTOR	[M]
Q2005	B1GBCFJN0033	TRANSISTOR	[M]
Q2006	2SB0709AHL	TRANSISTOR	[M]
Q2007	2SB0709AHL	TRANSISTOR	[M]
Q2026	B1GDCFGA0018	TRANSISTOR	[M]
Q2028	B1GBCFJN0033	TRANSISTOR	[M]
Q2029	B1GBCFJN0033	TRANSISTOR	[M]
Q2031	B1GBCFJJ0051	TRANSISTOR	[M]
Q2100	B1GFGCAA0001	TRANSISTOR	[M]
Q2102	B1GFGCAA0001	TRANSISTOR	[M]
Q2103	B1GDCFGA0018	TRANSISTOR	[M]
Q2104	B1GFGCAA0001	TRANSISTOR	[M]
Q2105	B1GDCFGA0018	TRANSISTOR	[M]
Q2106	B1GFGCAA0001	TRANSISTOR	[M]
Q2200	B1GFGCAA0001	TRANSISTOR	[M]
Q2201	B1GDCFGA0018	TRANSISTOR	[M]
Q2302	B1GFGCAA0001	TRANSISTOR	[M]
Q2305	B1GDCFGA0018	TRANSISTOR	[M]
Q2500	B1GDCFGA0018	TRANSISTOR	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
Q2600	B1GDCFGA0018	TRANSISTOR	[M]
Q2601	B1GFGCAA0001	TRANSISTOR	[M]
Q2602	B1GDCFJJ0047	TRANSISTOR	[M]
Q2603	B1GDCFGA0018	TRANSISTOR	[M]
Q2604	B1GFGCAA0001	TRANSISTOR	[M]
Q2605	B1GDCFGA0018	TRANSISTOR	[M]
Q2801	B1ADCF000001	TRANSISTOR	[M]
Q2803	B1BCCG000023	TRANSISTOR	[M]
Q2804	B1ABCF000176	TRANSISTOR	[M]
Q2805	B1ABCF000176	TRANSISTOR	[M]
Q2806	B1ACKD000005	TRANSISTOR	[M]
Q2807	B1BCCD000019	TRANSISTOR	[M]
Q2808	B1ADCF000001	TRANSISTOR	[M]
Q2809	B1ACKD000005	TRANSISTOR	[M]
Q2811	B1BCCG000023	TRANSISTOR	[M]
Q2812	B1ABCF000176	TRANSISTOR	[M]
Q2813	B1AAKD000014	TRANSISTOR	[M]
Q2814	2SD21370PA	TRANSISTOR	[M]
Q2818	B1GBCFJA0028	TRANSISTOR	[M]
Q6900	B1GBCFJN0033	TRANSISTOR	[M]
Q6901	B1GBCFJN0033	TRANSISTOR	[M]
Q6902	B1GBCFJN0033	TRANSISTOR	[M]
Q6903	B1GBCFJN0033	TRANSISTOR	[M]
Q6904	B1GBCFJN0033	TRANSISTOR	[M]
Q6909	B1GBCFJN0033	TRANSISTOR	[M]
Q8550	2SB1219AHL	TRANSISTOR	[M]
Q8551	2SD1819A0L	TRANSISTOR	[M]
Q8552	2SB09700RL	TRANSISTOR	[M]
Q8560	2SD1819A0L	TRANSISTOR	[M]
Q8561	2SD1819A0L	TRANSISTOR	[M]
Q8562	2SB09700RL	TRANSISTOR	[M]
Q8606	2SD1819A0L	TRANSISTOR	[M]
Q8607	2SD1819A0L	TRANSISTOR	[M]
Q9001	B3NAA0000068	CAM SENSOR TRANSISTOR	[M]
Q9101	B3NAA0000078	POSITION SENSOR TRANSISTOR	[M]
Q9102	B3NAA0000011	PHOTO INTERRUPTOR TRANSISTOR	[M]
Q9103	B3NAB0000027	PHOTO REFLECTOR TRANSISTOR	[M]
		DIODES	
QR8111	UNR521400L	TRANSISTOR	[M]
QR8112	UNR521400L	TRANSISTOR	[M]
QR8420	UNR521100L	TRANSISTOR	[M]
QR8571	UNR511V00L	TRANSISTOR	[M]
		DIODES	
D2000	B0ACCE000003	DIODE	[M]
D2001	B0ACCE000003	DIODE	[M]
D2002	B0ACCE000003	DIODE	[M]
D2003	B0ACCK000005	DIODE	[M]
D2004	B0ECKM000016	DIODE	[M]
D2005	B0ECKM000016	DIODE	[M]
D2006	B0ECKM000016	DIODE	[M]
D2007	B0ECKM000016	DIODE	[M]
D2601	B0ACCK000005	DIODE	[M]
D2602	B0ACCK000005	DIODE	[M]
D2603	B0ACCK000005	DIODE	[M]
D2801	B0JCPD000025	DIODE	[M]
D2802	B0BC7R500001	DIODE	[M]
D2803	B0ACCK000005	DIODE	[M]
D2804	B0BC9R000008	DIODE	[M]
D2805	B0ECKM000016	DIODE	[M]
D2806	B0ECKM000016	DIODE	[M]
D2807	B0ACCK000005	DIODE	[M]
D2808	B0ACCK000005	DIODE	[M]
D2809	B0EAKM000117	DIODE	[M]
D2810	B0EAKM000117	DIODE	[M]
D2811	B0EAKM000117	DIODE	[M]
D2812	B0EAKM000117	DIODE	[M]
D2813	B0EAKM000117	DIODE	[M]
D2814	B0EAKM000117	DIODE	[M]
D2815	B0EAKM000117	DIODE	[M]
D2816	B0EAKM000117	DIODE	[M]
D2817	B0EAKM000117	DIODE	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
D2818	MAZ82200ML	DIODE	[M]
D2819	B0BC9R000008	DIODE	[M]
D2820	B0ACCK000005	DIODE	[M]
D2822	B0FBAM000010	DIODE	[M]
D2823	B0BC5R600003	DIODE	[M]
D2824	B0BC7R500001	DIODE	[M]
D2827	B0ECKM000016	DIODE	[M]
D2831	B0EAKM000117	DIODE	[M]
D2832	B0ACCK000005	DIODE	[M]
D2850	B0ADCJ000020	DIODE	[M]
D2851	B0ADCJ000020	DIODE	[M]
D2852	B0ACCK000005	DIODE	[M]
D6802	B0BC7R500001	DIODE	[M]
D6803	B3AEA0000041	DIODE	[M]
D6900	B3AAA0000583	DIODE	[M]
D6901	B3ABA0000397	DIODE	[M]
D6902	B3ABA0000397	DIODE	[M]
D6903	B3ABA0000397	DIODE	[M]
D6904	B3ABA0000397	DIODE	[M]
D6905	B3ABA0000397	DIODE	[M]
D6910	B0BC5R000009	DIODE	[M]
D6911	B0ACCK000005	DIODE	[M]
D6912	B3AAA0000583	DIODE	[M]
D8231	MA2J11100L	DIODE	[M]
D8550	MA2J11100L	DIODE	[M]
D8571	MA2J72800L	DIODE	[M]
		CHIP INDUCTORS	
LB8001	J0JHC0000045	CHIP INDUCTOR	[M]
LB8002	J0JHC0000045	CHIP INDUCTOR	[M]
LB8301	J0JCC0000119	CHIP INDUCTOR	[M]
LB8302	J0JCC0000119	CHIP INDUCTOR	[M]
LB8303	J0JCC0000119	CHIP INDUCTOR	[M]
LB8304	J0JCC0000119	CHIP INDUCTOR	[M]
LB8305	J0JCC0000119	CHIP INDUCTOR	[M]
LB8401	ERJ2GEJ151X	CHIP INDUCTOR	[M]
LB8421	ERJ2GE0R00X	CHIP RESISTOR	[M]
LB8422	ERJ2GE0R00X	CHIP RESISTOR	[M]
LB8423	ERJ2GE0R00X	CHIP RESISTOR	[M]
LB8424	ERJ2GE0R00X	CHIP RESISTOR	[M]
LB8425	ERJ2GE0R00X	CHIP RESISTOR	[M]
LB8426	ERJ2GE0R00X	CHIP RESISTOR	[M]
LB8427	ERJ2GE0R00X	CHIP RESISTOR	[M]
LB8428	ERJ2GE0R00X	CHIP RESISTOR	[M]
LB8429	ERJ2GE0R00X	CHIP RESISTOR	[M]
LB8430	ERJ2GE0R00X	CHIP RESISTOR	[M]
LB8491	ERJ2GE0R00X	CHIP RESISTOR	[M]
LB8502	J0JHC0000045	CHIP INDUCTOR	[M]
LB8503	ERJ2GE0R00X	CHIP RESISTOR	[M]
LB8504	J0JCC0000119	CHIP INDUCTOR	[M]
LB8505	J0JCC0000119	CHIP INDUCTOR	[M]
LB8507	J0JCC0000119	CHIP INDUCTOR	[M]
LB8511	ERJ3GEY0R00V	CHIP RESISTOR	[M]
LB8512	ERJ3GEY0R00V	CHIP RESISTOR	[M]
LB8513	ERJ3GEY0R00V	CHIP RESISTOR	[M]
LB8514	ERJ3GEY0R00V	CHIP RESISTOR	[M]
LB8690	J0JCC0000091	FILTER	[M]
LB8691	ERJ2GEJ101X	CHIP RESISTOR	[M]
LB8692	ERJ2GEJ101X	CHIP RESISTOR	[M]
LB8693	ERJ2GEJ101X	CHIP RESISTOR	[M]
		VARIABLE RESISTOR	
VR6800	EVEKE2F3024M	VR VOLUME JOG	[M]
		SWITCHES	
S6801	EVQ21405R	SW PLAY	[M]
S6802	EVQ21405R	SW REV	[M]
S6803	EVQ21405R	SW FWD	[M]
S6804	EVQ21405R	SW PAUSE	[M]
S6805	EVQ21405R	SW OPEN/CLOSE	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
S6806	EVQ21405R	SW SKIP	[M]
S6807	EVQ21405R	SW DISC EX	[M]
S6808	EVQ21405R	SW STOP	[M]
S6900	EVQ21405R	SW POWER	[M]
S6901	EVQ21405R	SW SEELECTOR	[M]
S6902	EVQ21405R	SW DISC 1	[M]
S6903	EVQ21405R	SW DISC 2	[M]
S6904	EVQ21405R	SW DISC 3	[M]
S6905	EVQ21405R	SW DISC 4	[M]
S6906	EVQ21405R	SW DISC 5	[M]
S6907	EVQ21405R	SW HARMONIC BASS	[M]
S6909	EVQ21405R	SW PROGRESSIVE	[M]
S6910	EVQ21405R	SW CD	[M]
S9001	K0L1BA000086	SW LOADING	[M]
		CONNECTORS	
CN2002	K1KA10AA0031	10P CONNECTOR	[M]
CN2004	K1MN50A00008	50P CONNECTOR	[M]
CN2008	K1MN10A00052	10P CONNECTOR	[M]
CN2009	K1MN19A00036	19P CONNECTOR	[M]
CN2010	K1MN11A00030	11P CONNECTOR	[M]
CN2011	K1MN11A00030	11P CONNECTOR	[M]
CN6801	K1MN10B00088	10P CONNECTOR	[M]
CN6901	K1MN19B00026	19P CONNECTOR	[M]
CN9003	K1MN11B00065	11P CONNECTOR	[M]
CN9102	K1MN11B00065	11P CONNECTOR	[M]
FP8101	K1MN50B00031	50P CONNECTOR	[M]
FP8201	K1MN06B00080	6P CONNECTOR	[M]
FP8501	K1MN26B00094	26P CONNECTOR	[M]
		COILS	
L2000	G0C3R3JA0027	COIL	[M]
L2003	J0JBC0000015	CHIP INDUCTOR	[M]
L2004	J0JBC0000015	CHIP INDUCTOR	[M]
L2005	J0JBC0000015	CHIP INDUCTOR	[M]
L2006	J0JBC0000015	CHIP INDUCTOR	[M]
L2007	J0JBC0000015	CHIP INDUCTOR	[M]
L2008	J0JBC0000015	CHIP INDUCTOR	[M]
L2009	J0JBC0000015	CHIP INDUCTOR	[M]
L2010	ELESN220JA	COIL	[M]
L2022	J0JBC0000015	CHIP INDUCTOR	[M]
L2023	J0JBC0000015	CHIP INDUCTOR	[M]
L2024	J0JBC0000015	CHIP INDUCTOR	[M]
L2025	J0JBC0000015	CHIP INDUCTOR	[M]
L2026	J0JBC0000015	CHIP INDUCTOR	[M]
L2027	J0JBC0000015	CHIP INDUCTOR	[M]
L2801	G0ZZ00001930	COIL	[M]
L2802	J0JHC0000045	CHIP INDUCTOR	[M]
L2805	ERJ3GEY0R00V	CHIP JUMPER	[M]
L6101	J0JBC0000019	CHIP INDUCTOR	[M]
L6201	J0JBC0000019	CHIP INDUCTOR	[M]
L6801	J0JBC0000019	CHIP INDUCTOR	[M]
L6903	J0JBC0000041	CHIP INDUCTOR	[M]
L8201	G1C100K00020	CHIP INDUCTOR	[M]
L8202	J0JCC0000079	FILTER	[M]
L8301	G1C100KA0055	CHIP INDUCTOR	[M]
L8302	J0JCC0000079	FILTER	[M]
L8550	G1C100KA0055	CHIP INDUCTOR	[M]
		COMPONENT COMBINATION	
Z6900	B3RAB0000025	REMOTE SENSOR	[M]
		OSCILLATORS	
X2000	H2D800400009	CRYSTAL OSCILLATOR	[M]
X8621	HOJ270500085	CRYSTAL	[M]
		DISPLAY TUBES	
FL6901	A2BD00000108	FL DISPLAY	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
FL8101	F1H0J1050022	CHIP CAPACITOR	[M]
FL8102	F1H0J1050022	CHIP CAPACITOR	[M]
FL8103	F1H0J1050022	CHIP CAPACITOR	[M]
FL8104	F1J1E1040022	CHIP CAPACITOR	[M]
FC9101	RWJ4906082SS	6P FLAT CABLE	[M]
		FUSE PROTECTOR	
FP2000	K5G202AA0002	FUSE PROTECTOR	[M] △
		JACKS	
JK2000	K1FB125B0097	JK SYSTEM CONNECTOR	[M]
JK2001	K2HZ929B0001	JK COMBO	[M]
JK6801	K2HC103A0024	JK SMALL SIGN	[M]
		EARTH TERMINAL	
E2000	K4CZ01000027	TERMINAL	[M]
		CHIP RESISTORS	
W1208	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2000	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2000	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2001	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2001	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2002	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2002	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2003	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2003	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2004	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2004	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2005	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2006	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2007	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2008	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2008	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2009	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2010	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2010	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2011	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2011	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2012	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2013	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2014	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2014	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2015	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2015	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2016	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2016	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2017	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2017	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2018	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2018	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2019	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2019	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2020	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2021	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2022	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2023	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2024	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2024	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2025	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2025	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2026	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2027	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2028	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2029	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2029	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2030	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2031	ERJ3GEY0R00V	CHIP RESISTOR	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
W2032	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2034	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2035	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2036	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2038	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2039	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2040	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2045	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2051	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2052	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2053	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2055	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2056	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2057	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2058	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2059	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2060	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2061	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2062	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2064	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2065	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2066	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2067	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2068	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2069	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2070	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2071	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2076	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2081	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2082	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2083	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2084	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2085	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2086	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2088	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2092	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2094	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2095	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2100	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2101	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2119	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2121	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2128	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2171	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2200	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2205	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2206	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2207	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2209	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2210	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2262	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2330	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2331	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2334	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2620	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W3000	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W4000	ERJ3GEY0R00V	CHIP RESISTOR	[M]
		RESISTORS	
R2000	ERJ3GEYJ101V	100 1/16W	[M]
R2001	ERJ3GEYJ101V	100 1/16W	[M]
R2002	ERJ3GEYJ221V	220 1/16W	[M]
R2003	ERJ3GEYJ103V	10K 1/16W	[M]
R2004	ERJ3GEYJ103V	10K 1/16W	[M]
R2005	ERJ3GEYJ473V	47K 1/16W	[M]
R2006	ERJ3GEYJ104V	100K 1/16W	[M]
R2007	ERJ3GEYJ223V	22K 1/16W	[M]
R2008	ERJ3GEYJ472V	4.7K 1/16W	[M]
R2009	ERJ3GEYJ221V	220 1/16W	[M]
R2010	ERJ3GEYJ221V	220 1/16W	[M]
R2011	ERJ3GEYJ101V	100 1/16W	[M]
R2012	ERJ3GEYJ101V	100 1/16W	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
R2013	ERJ3GEYJ101V	100 1/16W	[M]
R2014	ERJ3GEYJ101V	100 1/16W	[M]
R2015	ERJ3GEYJ221V	220 1/16W	[M]
R2016	ERJ3GEYJ221V	220 1/16W	[M]
R2017	ERJ3GEYJ221V	220 1/16W	[M]
R2018	ERJ3GEYJ102V	1K 1/16W	[M]
R2019	ERJ3GEYJ221V	220 1/16W	[M]
R2020	ERJ3GEYJ221V	220 1/16W	[M]
R2021	ERJ3GEYJ221V	220 1/16W	[M]
R2022	ERJ3GEYJ221V	220 1/16W	[M]
R2023	ERJ3GEYJ223V	22K 1/16W	[M]
R2024	ERJ3GEYJ103V	10K 1/16W	[M]
R2025	ERJ3GEYJ221V	220 1/16W	[M]
R2026	ERJ3GEYJ221V	220 1/16W	[M]
R2031	ERJ3GEYJ221V	220 1/16W	[M]
R2032	ERJ3GEYJ221V	220 1/16W	[M]
R2035	ERJ3GEYJ221V	220 1/16W	[M]
R2037	ERJ3GEYJ221V	220 1/16W	[M]
R2038	ERJ3GEYJ221V	220 1/16W	[M]
R2040	ERJ3GEYJ221V	220 1/16W	[M]
R2041	ERJ3GEYJ221V	220 1/16W	[M]
R2042	ERJ3GEYJ103V	10K 1/16W	[M]
R2046	ERJ3GEYJ221V	220 1/16W	[M]
R2047	ERJ3GEYJ103V	10K 1/16W	[M]
R2048	ERJ3GEYJ221V	220 1/16W	[M]
R2049	ERJ3GEYJ473V	47K 1/16W	[M]
R2050	ERJ3GEYJ221V	220 1/16W	[M]
R2051	ERJ3GEYJ103V	10K 1/16W	[M]
R2052	ERJ3GEYJ563V	56K 1/16W	[M]
R2053	ERJ3GEYJ221V	220 1/16W	[M]
R2054	ERJ3GEYJ473V	47K 1/16W	[M]
R2055	ERJ3GEYJ221V	220 1/16W	[M]
R2056	ERJ3GEYJ221V	220 1/16W	[M]
R2057	ERJ3GEYJ221V	220 1/16W	[M]
R2058	ERJ3GEYJ221V	220 1/16W	[M]
R2060	ERJ3GEYJ221V	220 1/16W	[M]
R2061	ERJ3GEYJ221V	220 1/16W	[M]
R2062	ERJ3GEYJ221V	220 1/16W	[M]
R2064	ERJ3GEYJ221V	220 1/16W	[M]
R2065	ERJ3GEYJ221V	220 1/16W	[M]
R2067	ERJ3GEYJ473V	47K 1/16W	[M]
R2068	ERJ3GEYJ473V	47K 1/16W	[M]
R2069	ERJ3GEYJ563V	56K 1/16W	[M]
R2072	ERJ3GEYJ821V	820 1/16W	[M]
R2074	ERJ3GEYJ103V	10K 1/16W	[M]
R2075	ERJ3GEYJ103V	10K 1/16W	[M]
R2076	ERJ3GEYJ103V	10K 1/16W	[M]
R2077	ERJ3GEYJ153V	15K 1/16W	[M]
R2078	ERJ3GEYJ221V	220 1/16W	[M]
R2080	ERJ3GEYJ471V	470 1/16W	[M]
R2081	ERJ3GEYJ223V	22K 1/16W	[M]
R2082	ERJ3GEYJ473V	47K 1/16W	[M]
R2083	ERJ3GEYJ681V	680 1/16W	[M]
R2084	ERJ3GEYJ473V	47K 1/16W	[M]
R2085	ERJ3GEYJ272V	2.7K 1/16W	[M]
R2086	ERJ3GEYJ221V	220 1/16W	[M]
R2088	ERJ3GEYJ221V	220 1/16W	[M]
R2092	ERJ3GEYJ472V	4.7K 1/16W	[M]
R2093	ERJ3GEYJ223V	22K 1/16W	[M]
R2094	ERJ3GEYJ223V	22K 1/16W	[M]
R2095	ERJ3GEYJ121V	120 1/16W	[M]
R2096	ERJ3GEYJ151V	150 1/16W	[M]
R2097	ERJ3GEYJ331V	330 1/16W	[M]
R2098	ERJ3GEYJ331V	330 1/16W	[M]
R2099	ERJ3GEYJ472V	4.7K 1/16W	[M]
R2100	ERJ3GEYJ102V	1K 1/16W	[M]
R2101	ERJ3GEYJ473V	47K 1/16W	[M]
R2106	ERJ3GEYJ332V	3.3K 1/16W	[M]
R2107	ERJ3GEYJ104V	100K 1/16W	[M]
R2108	ERJ3GEYJ272V	2.7K 1/16W	[M]
R2111	ERJ3GEYJ333V	33K 1/16W	[M]
R2112	ERJ3GEYJ103V	10K 1/16W	[M]
R2113	ERJ3GEYJ103V	10K 1/16W	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
R2114	ERJ3GEYJ103V	10K 1/16W	[M]
R2115	ERJ3GEYJ273V	27K 1/16W	[M]
R2116	ERJ3GEYJ104V	100K 1/16W	[M]
R2117	ERJ3GEYJ104V	100K 1/16W	[M]
R2127	ERJ3GEYJ104V	100K 1/16W	[M]
R2128	ERJ3GEYJ102V	1K 1/16W	[M]
R2129	ERJ3GEYJ123V	12K 1/16W	[M]
R2130	ERJ3GEYJ103V	10K 1/16W	[M]
R2131	ERJ3GEYJ103V	10K 1/16W	[M]
R2132	ERJ3GEYJ103V	10K 1/16W	[M]
R2133	ERJ3GEYJ103V	10K 1/16W	[M]
R2134	ERJ3GEYJ103V	10K 1/16W	[M]
R2135	ERJ3GEYJ103V	10K 1/16W	[M]
R2144	ERJ3GEYJ332V	3.3K 1/16W	[M]
R2145	ERJ3GEYJ472V	4.7K 1/16W	[M]
R2146	ERJ3GEYJ333V	33K 1/16W	[M]
R2147	ERJ3GEYJ220V	22 1/16W	[M]
R2148	ERJ3GEYJ220V	22 1/16W	[M]
R2149	ERJ3GEYJ220V	22 1/16W	[M]
R2150	ERJ3GEYJ220V	22 1/16W	[M]
R2151	ERJ3GEYJ472V	4.7K 1/16W	[M]
R2152	ERJ3GEYJ272V	2.7K 1/16W	[M]
R2153	ERJ3GEYJ100V	10 1/16W	[M]
R2154	ERJ3GEYJ222V	2.2K 1/16W	[M]
R2155	ERJ3GEYJ104V	100K 1/16W	[M]
R2156	ERJ3GEYJ103V	10K 1/16W	[M]
R2157	ERJ3GEYJ123V	12K 1/16W	[M]
R2160	ERJ3GEYJ103V	10K 1/16W	[M]
R2161	ERJ3GEYJ223V	22K 1/16W	[M]
R2162	ERJ3GEYJ272V	2.7K 1/16W	[M]
R2163	ERJ3GEYJ102V	1K 1/16W	[M]
R2164	ERJ3GEYJ183V	18K 1/16W	[M]
R2165	ERJ3GEYJ682V	6.8K 1/16W	[M]
R2166	ERJ3GEYJ122V	1.2K 1/16W	[M]
R2167	ERJ3GEYJ123V	12K 1/16W	[M]
R2168	ERJ3GEYJ223V	22K 1/16W	[M]
R2169	ERJ3GEYJ562V	5.6K 1/16W	[M]
R2170	ERJ3GEYJ392V	3.9K 1/16W	[M]
R2172	ERJ3GEY0R00V	0 1/16W	[M]
R2178	ERJ3GEYJ183V	18K 1/16W	[M]
R2179	ERJ3GEYJ224V	220K 1/16W	[M]
R2181	ERJ3GEYJ222V	2.2K 1/16W	[M]
R2183	ERJ3GEYJ184V	180K 1/16W	[M]
R2200	ERJ3GEYJ102V	1K 1/16W	[M]
R2201	ERJ3GEYJ473V	47K 1/16W	[M]
R2206	ERJ3GEYJ332V	3.3K 1/16W	[M]
R2207	ERJ3GEYJ104V	100K 1/16W	[M]
R2208	ERJ3GEYJ272V	2.7K 1/16W	[M]
R2211	ERJ3GEYJ333V	33K 1/16W	[M]
R2212	ERJ3GEYJ103V	10K 1/16W	[M]
R2213	ERJ3GEYJ103V	10K 1/16W	[M]
R2214	ERJ3GEYJ103V	10K 1/16W	[M]
R2215	ERJ3GEYJ273V	27K 1/16W	[M]
R2216	ERJ3GEYJ104V	100K 1/16W	[M]
R2217	ERJ3GEYJ104V	100K 1/16W	[M]
R2227	ERJ3GEYJ104V	100K 1/16W	[M]
R2228	ERJ3GEYJ102V	1K 1/16W	[M]
R2229	ERJ3GEYJ103V	10K 1/16W	[M]
R2230	ERJ3GEYJ103V	10K 1/16W	[M]
R2231	ERJ3GEYJ103V	10K 1/16W	[M]
R2232	ERJ3GEYJ103V	10K 1/16W	[M]
R2233	ERJ3GEYJ103V	10K 1/16W	[M]
R2234	ERJ3GEYJ103V	10K 1/16W	[M]
R2235	ERJ3GEYJ123V	12K 1/16W	[M]
R2244	ERJ3GEYJ332V	3.3K 1/16W	[M]
R2245	ERJ3GEYJ472V	4.7K 1/16W	[M]
R2246	ERJ3GEYJ333V	33K 1/16W	[M]
R2247	ERJ3GEYJ220V	22 1/16W	[M]
R2248	ERJ3GEYJ220V	22 1/16W	[M]
R2249	ERJ3GEYJ220V	22 1/16W	[M]
R2250	ERJ3GEYJ220V	22 1/16W	[M]
R2251	ERJ3GEYJ472V	4.7K 1/16W	[M]
R2252	ERJ3GEYJ272V	2.7K 1/16W	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
R2253	ERJ3GEYJ100V	10 1/16W	[M]
R2254	ERJ3GEYJ222V	2.2K 1/16W	[M]
R2255	ERJ3GEYJ104V	100K 1/16W	[M]
R2256	ERJ3GEYJ103V	10K 1/16W	[M]
R2257	ERJ3GEYJ123V	12K 1/16W	[M]
R2260	ERJ3GEYJ103V	10K 1/16W	[M]
R2261	ERJ3GEYJ272V	2.7K 1/16W	[M]
R2262	ERJ3GEYJ223V	22K 1/16W	[M]
R2263	ERJ3GEYJ102V	1K 1/16W	[M]
R2264	ERJ3GEYJ183V	18K 1/16W	[M]
R2265	ERJ3GEYJ682V	6.8K 1/16W	[M]
R2266	ERJ3GEYJ182V	1.8K 1/16W	[M]
R2267	ERJ3GEYJ563V	56K 1/16W	[M]
R2268	ERJ3GEYJ273V	27K 1/16W	[M]
R2269	ERJ3GEYJ562V	5.6K 1/16W	[M]
R2271	ERJ3GEY0R00V	0 1/16W	[M]
R2278	ERJ3GEYJ183V	18K 1/16W	[M]
R2279	ERJ3GEYJ224V	220K 1/16W	[M]
R2281	ERJ3GEYJ222V	2.2K 1/16W	[M]
R2283	ERJ3GEYJ184V	180K 1/16W	[M]
R2300	ERJ3GEYJ103V	10K 1/16W	[M]
R2301	ERJ3GEYJ682V	6.8K 1/16W	[M]
R2302	ERJ3GEYJ223V	22K 1/16W	[M]
R2303	ERJ3GEYJ303V	30K 1/16W	[M]
R2304	ERJ3GEYJ472V	4.7K 1/16W	[M]
R2305	ERJ3GEYJ102V	1K 1/16W	[M]
R2306	ERJ3GEYJ104V	100K 1/16W	[M]
R2307	ERJ3GEYJ101V	100 1/16W	[M]
R2308	ERJ3GEYJ182V	1.8K 1/16W	[M]
R2309	ERJ3GEYJ563V	56K 1/16W	[M]
R2310	ERJ3GEYJ273V	27K 1/16W	[M]
R2311	ERJ3GEYJ222V	2.2K 1/16W	[M]
R2312	ERJ3GEYJ222V	2.2K 1/16W	[M]
R2323	ERJ3GEYJ182V	1.8K 1/16W	[M]
R2325	ERJ3GEYJ273V	27K 1/16W	[M]
R2328	ERJ3GEYJ102V	1K 1/16W	[M]
R2330	ERJ3GEYJ123V	12K 1/16W	[M]
R2333	ERJ3GEYJ563V	56K 1/16W	[M]
R2400	ERJ3GEYJ103V	10K 1/16W	[M]
R2401	ERJ3GEYJ682V	6.8K 1/16W	[M]
R2402	ERJ3GEYJ223V	22K 1/16W	[M]
R2403	ERJ3GEYJ303V	30K 1/16W	[M]
R2404	ERJ3GEYJ472V	4.7K 1/16W	[M]
R2405	ERJ3GEYJ102V	1K 1/16W	[M]
R2406	ERJ3GEYJ104V	100K 1/16W	[M]
R2407	ERJ3GEYJ101V	100 1/16W	[M]
R2428	ERJ3GEYJ102V	1K 1/16W	[M]
R2430	ERJ3GEYJ123V	12K 1/16W	[M]
R2500	ERJ3GEYJ103V	10K 1/16W	[M]
R2501	ERJ3GEYJ333V	33K 1/16W	[M]
R2502	ERJ3GEYJ472V	4.7K 1/16W	[M]
R2503	ERJ3GEYJ332V	3.3K 1/16W	[M]
R2504	ERJ3GEYJ123V	12K 1/16W	[M]
R2505	ERJ3GEYJ102V	1K 1/16W	[M]
R2506	ERJ3GEYJ333V	33K 1/16W	[M]
R2507	ERJ3GEYJ103V	10K 1/16W	[M]
R2508	ERJ3GEYJ182V	1.8K 1/16W	[M]
R2509	ERJ3GEYJ563V	56K 1/16W	[M]
R2510	ERJ3GEYJ273V	27K 1/16W	[M]
R2511	ERJ3GEYJ222V	2.2K 1/16W	[M]
R2600	ERJ3GEYJ103V	10K 1/16W	[M]
R2603	ERJ3GEYJ123V	12K 1/16W	[M]
R2604	ERJ3GEYJ333V	33K 1/16W	[M]
R2605	ERJ3GEYJ122V	1.2K 1/16W	[M]
R2606	ERJ3GEYJ103V	10K 1/16W	[M]
R2607	ERJ3GEYJ273V	27K 1/16W	[M]
R2608	ERJ3GEYJ124V	120K 1/16W	[M]
R2609	ERJ3GEYJ563V	56K 1/16W	[M]
R2610	ERJ3GEYJ222V	2.2K 1/16W	[M]
R2611	ERJ3GEYJ683V	68K 1/16W	[M]
R2612	ERJ3GEYJ103V	10K 1/16W	[M]
R2613	ERJ3GEYJ332V	3.3K 1/16W	[M]
R2614	ERJ3GEYJ102V	1K 1/16W	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
R2615	ERJ3GEYJ104V	100K 1/16W	[M]
R2616	ERJ3GEYJ153V	15K 1/16W	[M]
R2617	ERJ3GEYJ333V	33K 1/16W	[M]
R2618	ERJ3GEYJ102V	1K 1/16W	[M]
R2619	ERJ3GEYJ222V	2.2K 1/16W	[M]
R2620	ERJ3GEYJ182V	1.8K 1/16W	[M]
R2621	ERJ3GEYJ563V	56K 1/16W	[M]
R2622	ERJ3GEYJ273V	27K 1/16W	[M]
R2623	ERJ3GEYJ104V	100K 1/16W	[M]
R2624	ERJ3GEYJ104V	100K 1/16W	[M]
R2625	ERJ3GEYJ562V	5.6K 1/16W	[M]
R2626	ERJ3GEYJ563V	56K 1/16W	[M]
R2627	ERJ3GEYJ182V	1.8K 1/16W	[M]
R2628	ERJ3GEYJ273V	27K 1/16W	[M]
R2629	ERJ3GEYJ104V	100K 1/16W	[M]
R2630	ERJ3GEYJ822V	8.2K 1/16W	[M]
R2631	ERJ3GEYJ102V	1K 1/16W	[M]
R2632	ERJ3GEY0R00V	0 1/16W	[M]
R2633	ERJ3GEYJ104V	100K 1/16W	[M]
R2634	ERJ3GEYJ103V	10K 1/16W	[M]
R2635	ERJ3GEYJ103V	10K 1/16W	[M]
R2636	ERJ3GEYJ103V	10K 1/16W	[M]
R2637	ERJ3GEYJ472V	4.7K 1/16W	[M]
R2638	ERJ3GEYJ332V	3.3K 1/16W	[M]
R2639	ERJ3GEYJ103V	10K 1/16W	[M]
R2640	ERJ3GEYJ563V	56K 1/16W	[M]
R2641	ERJ3GEYJ333V	33K 1/16W	[M]
R2642	ERJ3GEYJ393V	39K 1/16W	[M]
R2643	ERJ3GEYJ104V	100K 1/16W	[M]
R2644	ERJ3GEYJ273V	27K 1/16W	[M]
R2645	ERJ3GEYJ563V	56K 1/16W	[M]
R2646	ERJ3GEYJ182V	1.8K 1/16W	[M]
R2647	ERJ3GEYJ104V	100K 1/16W	[M]
R2648	ERJ3GEYJ222V	2.2K 1/16W	[M]
R2649	ERJ3GEYJ222V	2.2K 1/16W	[M]
R2650	ERJ3GEYJ223V	22K 1/16W	[M]
R2651	ERJ3GEYJ123V	12K 1/16W	[M]
R2652	ERJ3GEYJ224V	220K 1/16W	[M]
R2653	ERJ3GEYJ102V	1K 1/16W	[M]
R2654	ERJ3GEYJ104V	100K 1/16W	[M]
R2655	ERJ3GEYJ104V	100K 1/16W	[M]
R2656	ERJ3GEYJ103V	10K 1/16W	[M]
R2657	ERJ3GEYJ152V	1.5K 1/16W	[M]
R2658	ERJ3GEYJ392V	3.9K 1/16W	[M]
R2659	ERJ3GEYJ182V	1.8K 1/16W	[M]
R2660	ERJ3GEYJ152V	1.5K 1/16W	[M]
R2661	ERJ3GEYJ152V	1.5K 1/16W	[M]
R2700	ERJ3GEYJ103V	10K 1/16W	[M]
R2706	ERJ3GEYJ331V	330 1/16W	[M]
R2707	ERJ3GEYJ8R2V	8.2 1/16W	[M]
R2800	ERJ3GEYJ331V	330 1/16W	[M]
R2801	ERJ3GEYJ1R0V	1 1/16W	[M]
R2802	ERJ3GEYJ103V	10K 1/16W	[M]
R2805	ERJ3GEYJ1R0V	1 1/16W	[M]
R2806	ERJ3GEYJ1R0V	1 1/16W	[M]
R2808	ERJ3GEYJ1R0V	1 1/16W	[M]
R2811	ERJ3GEYJ103V	10K 1/16W	[M]
R2812	ERJ3RBD182V	1.8K 3W	[M]
R2813	ERJ3GEYJ471V	470 1/16W	[M]
R2814	ERJ3GEYJ102V	1K 1/16W	[M]
R2815	ERJ3GEYJ472V	4.7K 1/16W	[M]
R2816	ERJ3GEYJ102V	1K 1/16W	[M]
R2817	ERJ3GEYJ102V	1K 1/16W	[M]
R2818	ERJ3RBD182V	1.8K 3W	[M]
R2819	ERJ3GEYJ471V	470 1/16W	[M]
R2820	ERJ3GEYJ222V	2.2K 1/16W	[M]
R2821	ERJ3GEYJ182V	1.8K 1/16W	[M]
R2822	ERJ3GEYJ222V	2.2K 1/16W	[M]
R2823	ERJ3GEYJ222V	2.2K 1/16W	[M]
R2824	ERJ3GEYJ821V	820 1/16W	[M]
R2825	ERD2FCVJ4R7T	4.7 1/4W	[M]
R2826	ERJ3GEYJ681V	680 1/16W	[M]
R2827	ERJ3GEYJ471V	470 1/16W	[M]



Ref. No.	Part No.	Part Name & Description	Remarks
R2828	ERJ3GEYJ272V	2.7K 1/16W	[M]
R2829	ERJ3GEYJ102V	1K 1/16W	[M]
R2830	ERJ3GEYJ272V	2.7K 1/16W	[M]
R2831	ERJ3GEYJ472V	4.7K 1/16W	[M]
R2832	ERJ3GEYJ151V	150 1/16W	[M]
R2833	ERJ3GEYJ102V	1K 1/16W	[M]
R2834	ERJ3GEYJ222V	2.2K 1/16W	[M]
R2835	ERJ3GEYJ222V	2.2K 1/16W	[M]
R2836	ERJ3GEYJ821V	820 1/16W	[M]
R2837	ERJ3GEYJ561V	560 1/16W	[M]
R2838	ERJ3GEYJ272V	2.7K 1/16W	[M]
R2839	ERJ3GEYJ821V	820 1/16W	[M]
R2840	ERJ3GEYJ151V	150 1/16W	[M]
R2841	ERD2FCVJ4R7T	4.7 1/4W	[M]
R2842	ERJ3GEYJ182V	1.8K 1/16W	[M]
R2843	ERJ3GEYJ471V	470 1/16W	[M]
R2849	ERJ3GEYJ472V	4.7K 1/16W	[M]
R2850	ERJ3GEYJ393V	39K 1/16W	[M]
R2851	ERJ3GEYJ153V	15K 1/16W	[M]
R2855	ERJ3GEYJ102V	1K 1/16W	[M]
R2856	ERJ3GEYJ823V	82K 1/16W	[M]
R2858	ERJ3GEYJ102V	1K 1/16W	[M]
R2864	ERJ3GEYJ681V	680 1/16W	[M]
R2872	ERJ3GEYJ102V	1K 1/16W	[M]
R2873	ERJ3GEYJ273V	27K 1/16W	[M]
R2874	ERJ3GEYJ563V	56K 1/16W	[M]
R2878	ERJ3GEYJ1R0V	1 1/16W	[M]
R2879	ERJ3GEYJ1R0V	1 1/16W	[M]
R2880	ERJ3GEYJ1R0V	1 1/16W	[M]
R2881	ERJ3GEYJ1R0V	1 1/16W	[M]
R2882	ERJ3GEYJ1R0V	1 1/16W	[M]
R2883	ERJ3GEYJ1R0V	1 1/16W	[M]
R2884	ERJ3GEYJ1R0V	1 1/16W	[M]
R2885	ERJ3GEYJ1R0V	1 1/16W	[M]
R2886	DOHB750ZA003	75 3W	[M]
R2887	DOHB750ZA003	75 3W	[M]
R2888	DOHB750ZA003	75 3W	[M]
R2889	DOHB750ZA003	75 3W	[M]
R2890	DOHB750ZA003	75 3W	[M]
R2891	DOHB750ZA003	75 3W	[M]
R2892	ERJ3GEYJ102V	1K 1/16W	[M]
R2893	ERJ3GEYJ223V	22K 1/16W	[M]
R2894	ERJ3GEYJ224V	220K 1/16W	[M]
R2895	ERJ3GEYJ103V	10K 1/16W	[M]
R2897	ERJ3GEYJ102V	1K 1/16W	[M]
R2898	ERJ3GEYJ331V	330 1/16W	[M]
R2899	ERJ3GEYJ472V	4.7K 1/16W	[M]
R2901	ERJ3GEYJ224V	220K 1/16W	[M]
R2902	ERJ3GEY0R00V	0 1/16W	[M]
R2905	ERJ3GEYJ1R0V	1 1/16W	[M]
R2971	ERJ3GEY0R00V	0 1/16W	[M]
R2973	ERJ3GEY0R00V	0 1/16W	[M]
R2978	ERJ3GEYJ123V	12K 1/16W	[M]
R2980	ERJ3GEYJ103V	10K 1/16W	[M]
R2982	ERJ3GEYJ103V	10K 1/16W	[M]
R2987	ERJ3GEY0R00V	0 1/16W	[M]
R2990	ERJ3GEYJ473V	47K 1/16W	[M]
R2991	ERJ3GEY0R00V	0 1/16W	[M]
R6801	ERJ3GEYJ272V	2.7K 1/16W	[M]
R6802	ERJ3GEYJ222V	2.2K 1/16W	[M]
R6803	ERJ3GEYJ122V	1.2K 1/16W	[M]
R6804	ERJ3GEYJ102V	1K 1/16W	[M]
R6805	ERJ3GEYJ102V	1K 1/16W	[M]
R6806	ERJ3GEYJ470V	47 1/16W	[M]
R6807	ERJ3GEYJ223V	22K 1/16W	[M]
R6808	ERJ3GEYJ472V	4.7K 1/16W	[M]
R6809	ERJ3GEYJ223V	22K 1/16W	[M]
R6810	ERJ3GEYJ682V	6.8K 1/16W	[M]
R6811	ERJ3GEYJ470V	47 1/16W	[M]
R6812	ERJ3GEYJ182V	1.8K 1/16W	[M]
R6813	ERJ3GEYJ151V	150 1/16W	[M]
R6814	ERJ3GEYJ103V	10K 1/16W	[M]
R6903	ERJ3GEYJ221V	220 1/16W	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
R6904	ERJ3GEYJ221V	220 1/16W	[M]
R6905	ERJ3GEY0R00V	0 1/16W	[M]
R6906	ERJ3GEYJ221V	220 1/16W	[M]
R6907	ERJ3GEYJ221V	220 1/16W	[M]
R6908	ERJ3GEYJ221V	220 1/16W	[M]
R6909	ERJ3GEYJ221V	220 1/16W	[M]
R6910	ERJ3GEYJ221V	220 1/16W	[M]
R6914	ERJ3GEYJ183V	18K 1/16W	[M]
R6915	ERJ3GEYJ102V	1K 1/16W	[M]
R6916	ERJ3GEYJ680V	68 1/16W	[M]
R6917	ERJ3GEYJ102V	1K 1/16W	[M]
R6918	ERJ3GEYJ223V	22K 1/16W	[M]
R6922	ERJ3GEYJ102V	1K 1/16W	[M]
R6923	ERJ3GEYJ102V	1K 1/16W	[M]
R6924	ERJ3GEYJ122V	1.2K 1/16W	[M]
R6925	ERJ3GEYJ182V	1.8K 1/16W	[M]
R6926	ERJ3GEYJ222V	2.2K 1/16W	[M]
R6927	ERJ3GEYJ332V	3.3K 1/16W	[M]
R6928	ERJ3GEYJ472V	4.7K 1/16W	[M]
R6929	ERJ3GEYJ682V	6.8K 1/16W	[M]
R6930	ERJ3GEYJ103V	10K 1/16W	[M]
R6931	ERJ3GEYJ223V	22K 1/16W	[M]
R6934	ERJ3GEYJ470V	47 1/16W	[M]
R6935	ERJ3GEYJ151V	150 1/16W	[M]
R6936	ERJ3GEYJ151V	150 1/16W	[M]
R6938	ERJ3GEYJ272V	2.7K 1/16W	[M]
R6939	ERJ3GEY0R00V	0 1/16W	[M]
R6940	ERJ3GEY0R00V	0 1/16W	[M]
R6941	ERJ3GEYJ221V	220 1/16W	[M]
R6942	ERJ3GEYJ221V	220 1/16W	[M]
R6943	ERJ3GEYJ221V	220 1/16W	[M]
R6944	ERJ3GEYJ221V	220 1/16W	[M]
R6945	ERJ3GEYJ221V	220 1/16W	[M]
R8011	ERJ2GEJ220X	22 2W	[M]
R8021	ERJ2GEJ103X	10K 2W	[M]
R8022	ERJ2GEJ103X	10K 2W	[M]
R8023	ERJ2GEJ473X	47K 2W	[M]
R8041	ERJ2GEJ330X	33 2W	[M]
R8111	ERJ2GEJ223X	22K 2W	[M]
R8112	ERJ2GEJ223X	22K 2W	[M]
R8201	ERJ2GEJ222X	2.2K 2W	[M]
R8231	ERJ2GEJ103X	10K 2W	[M]
R8233	ERJ2GEJ153X	15K 2W	[M]
R8235	ERJ2GEJ822X	8.2K 2W	[M]
R8236	ERJ2GEJ822X	8.2K 2W	[M]
R8241	ERJ2GEJ223X	22K 2W	[M]
R8242	ERJ2GEJ752X	7.5K 2W	[M]
R8243	ERJ2GEJ103X	10K 2W	[M]
R8251	ERJ6GEYJ6R8V	6.8 1/10W	[M]
R8261	ERJ2GEJ823X	82K 2W	[M]
R8262	ERJ2GEJ472X	4.7K 2W	[M]
R8263	ERJ2GEJ823X	82K 2W	[M]
R8264	ERJ2GEJ472X	4.7K 2W	[M]
R8265	ERJ2GE0R00X	0 2W	[M]
R8311	ERJ2RHD242X	2.4K 2W	[M]
R8312	ERJ2RHD102X	1K 2W	[M]
R8313	ERJ2RHD243X	24K 2W	[M]
R8314	ERJ2GE0R00X	0 2W	[M]
R8315	ERJ2GEJ6R8X	6.8 2W	[M]
R8321	ERJ3RBD161V	160 3W	[M]
R8322	ERJ2RKD100X	10 2W	[M]
R8325	ERJ3RBD161V	160 3W	[M]
R8326	ERJ2GEJ100X	10 2W	[M]
R8331	ERJ3RBD161V	160 3W	[M]
R8332	ERJ2RKD100X	10 2W	[M]
R8335	ERJ3RED820V	82 3W	[M]
R8341	ERJ3RED820V	82 3W	[M]
R8401	ERJ2GEJ473X	47K 2W	[M]
R8402	ERJ2GEJ101X	100 2W	[M]
R8404	ERJ2GEJ101X	100 2W	[M]
R8407	ERJ2GEJ101X	100 2W	[M]
R8420	ERJ2GEJ222X	2.2K 2W	[M]
R8421	ERJ2GE0R00X	0 2W	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
R8501	ERJ2GEOR00X	0 2W	[M]
R8505	ERJ2GEJ222X	2.2K 2W	[M]
R8506	ERJ2GEJ152X	1.5K 2W	[M]
R8550	ERJ2GEJ752X	7.5K 2W	[M]
R8551	ERJ2GEOR00X	0 2W	[M]
R8552	ERJ2GEJ102X	1K 2W	[M]
R8553	ERJ2GEJ102X	1K 2W	[M]
R8554	ERJ2GEJ680X	68 2W	[M]
R8555	ERJ2GEJ2R2X	2.2 2W	[M]
R8556	ERJ3GEYJ560V	56 1/16W	[M]
R8557	ERJ3GEYJ510V	51 1/16W	[M]
R8558	ERJ2GEJ473X	47K 2W	[M]
R8559	ERJ2GEJ153X	15K 2W	[M]
R8560	ERJ2GEJ102X	1K 2W	[M]
R8561	ERJ2GEOR00X	0 2W	[M]
R8562	ERJ2GEJ102X	1K 2W	[M]
R8563	ERJ2GEJ102X	1K 2W	[M]
R8564	ERJ2GEJ220X	22 2W	[M]
R8565	ERJ2GEJ2R2X	2.2 W	[M]
R8566	ERJ3GEYJ560V	56 1/16W	[M]
R8567	ERJ3GEYJ510V	51 1/16W	[M]
R8568	ERJ2GEJ473X	47K 2W	[M]
R8569	ERJ2GEJ123X	12K 2W	[M]
R8570	ERJ2GEJ104X	100K 2W	[M]
R8601	ERJ2GEJ102X	1K 2W	[M]
R8606	ERJ2GEJ104X	100K 2W	[M]
R8607	ERJ2GEJ103X	10K 2W	[M]
R8611	ERJ2GEJ101X	100 2W	[M]
R8621	ERJ2GEJ105X	1M 2W	[M]
R8622	ERJ2RHD102X	1K 2W	[M]
K8001	ERJ2GEOR00X	CHIP RESISTOR	[M]
K8006	ERJ2GEOR00X	CHIP RESISTOR	[M]
K8031	ERJ2GEOR00X	CHIP RESISTOR	[M]
K8106	ERJ3GEY0R00V	CHIP RESISTOR	[M]
K8421	ERJ3GEY0R00V	CHIP RESISTOR	[M]
RX8011	D1H88204A024	CHIP RESISTOR	[M]
RX8012	D1H88204A024	CHIP RESISTOR	[M]
RX8013	D1H88204A024	CHIP RESISTOR	[M]
RX8014	D1H88204A024	CHIP RESISTOR	[M]
RX8015	D1H422020001	CHIP RESISTOR	[M]
RX8016	D1H88204A024	CHIP RESISTOR	[M]
RX8017	D1H88204A024	CHIP RESISTOR	[M]
RX8018	D1H88204A024	CHIP RESISTOR	[M]
RX8021	D1H410320002	CHIP RESISTOR	[M]
RX8031	D1H447220001	CHIP RESISTOR	[M]
RX8032	D1H447220001	CHIP RESISTOR	[M]
RX8401	D1H410120001	CHIP RESISTOR	[M]
RX8402	D1H410120001	CHIP RESISTOR	[M]
RX8501	D1H456020001	CHIP RESISTOR	[M]
RX8502	D1H85604A024	CHIP RESISTOR	[M]
RX8503	D1H456020001	CHIP RESISTOR	[M]
RX8504	D1H456020001	CHIP RESISTOR	[M]
RX8611	D1H447220001	CHIP RESISTOR	[M]
		CAPACITORS	
C2003	ECEA1AKA220B	22 10V	[M]
C2004	ECJ1VB1E103K	0.01 25V	[M]
C2005	ECA1AM102B	1000 10V	[M]
C2006	ECEA1HKA2R2B	2.2 50V	[M]
C2007	ECJ1VB1C104K	0.1 16V	[M]
C2008	ECJ1VB1C104K	0.1 16V	[M]
C2009	ECEA0JKA101B	100 6.3V	[M]
C2019	ECJ1VB1H331K	330P 50V	[M]
C2020	ECJ1VB1H331K	330P 50V	[M]
C2021	ECJ1VB1H331K	330P 50V	[M]
C2022	ECJ1VB1H223K	0.022 50V	[M]
C2023	ECJ1VB1C104K	0.1 16V	[M]
C2024	ECEA1CKA470B	47 16V	[M]
C2026	ECJ1VB1H103K	0.01 50V	[M]
C2027	ECJ1VB1H103K	0.01 50V	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
C2028	ECJ1VB1A105K	1 10V	[M]
C2029	ECJ1VB1A105K	1 10V	[M]
C2030	ECJ1VB1A105K	1 10V	[M]
C2031	ECJ1VB1A105K	1 10V	[M]
C2032	ECJ1VB1C104K	0.1 16V	[M]
C2033	ECJ1VB1H103K	0.01 50V	[M]
C2034	ECJ1VB1C104K	0.1 16V	[M]
C2035	ECJ1VB1H103K	0.01 50V	[M]
C2036	ECEA1HKA220I	22 50V	[M]
C2037	ECJ1VB1H103K	0.01 50V	[M]
C2038	ECEA1AKA221I	220 10V	[M]
C2039	ECJ1VB1H103K	0.01 50V	[M]
C2040	ECA0JM102B	1000 6.3V	[M]
C2042	ECA0JM102B	1000 6.3V	[M]
C2044	ECA0JM102B	1000 6.3V	[M]
C2046	ECA0JM331I	330 6.3V	[M]
C2047	ECA0JM331I	330 6.3V	[M]
C2049	ECJ1VC1H101K	100P 50V	[M]
C2050	ECJ1VC1H101K	100P 50V	[M]
C2051	ECJ1VC1H101K	100P 50V	[M]
C2052	ECJ1VC1H101K	100P 50V	[M]
C2053	ECJ1VB1E103K	0.01 25V	[M]
C2090	ECJ1VB1E103K	0.01 25V	[M]
C2099	ECEA1HKN4R7B	4.7 50V	[M]
C2100	ECJ1VB1C393K	0.039 16V	[M]
C2101	ECJ1VB1H332K	3300P 50V	[M]
C2106	ECEA1HKA4R7I	4.7 50V	[M]
C2107	ECEA1HKA3R3I	3.3 50V	[M]
C2120	ECJ1VB1A105K	1 10V	[M]
C2121	ECJ1VC1H151K	150P 50V	[M]
C2122	ECJ1VB1H391K	390P 50V	[M]
C2123	ECEA1HKA100I	10 50V	[M]
C2124	ECJ1VC1H101K	100P 50V	[M]
C2125	ECJ1VC1H330J	33P 50V	[M]
C2126	ECJ1VB1E103K	0.01 25V	[M]
C2127	ECEA1HKA4R7I	4.7 50V	[M]
C2128	ECJ1VB1A225K	2.2 10V	[M]
C2130	ECJ1VB1A154K	0.15 10V	[M]
C2131	ECJ1VB1H332K	3300P 50V	[M]
C2136	ECJ1VB1H221K	220P 50V	[M]
C2137	ECJ1VB1H104K	0.1 50V	[M]
C2138	ECJ1VC1H221J	220P 50V	[M]
C2139	ECJ1VC1H101K	100P 50V	[M]
C2140	ECJ1VB1H681K	680P 50V	[M]
C2141	ECJ1VC1H101K	100P 50V	[M]
C2149	ECJ1VB1A105K	1 10V	[M]
C2150	ECEA1HKA010I	1 50V	[M]
C2151	ECJ1VC1H101K	100P 50V	[M]
C2152	ECJ1VC1H470J	47P 50V	[M]
C2153	ECA1CM101B	100 16V	[M]
C2154	ECJ1VB1E103K	0.01 25V	[M]
C2155	ECJ1VB1H102K	1000P 50V	[M]
C2156	ECJ1VB1A105K	1 10V	[M]
C2157	ECEA1HKA100B	10 50V	[M]
C2160	ECJ1VB1H471K	470P 50V	[M]
C2161	ECJ1VB1C104K	0.1 16V	[M]
C2162	ECJ1VB1A154K	0.15 10V	[M]
C2163	ECEA1HKA3R3B	3.3 50V	[M]
C2164	ECJ1VB1H272K	2700P 50V	[M]
C2165	ECJ1VB1A124K	0.12 10V	[M]
C2166	ECJ1VB1A124K	0.12 10V	[M]
C2167	ECEA1HKA4R7I	4.7 50V	[M]
C2168	ECEA1HKA3R3I	3.3 50V	[M]
C2169	ECJ1VB1H471K	470P 50V	[M]
C2170	ECEA1HKA4R7I	4.7 50V	[M]
C2175	ECJ1VB1A124K	0.12 10V	[M]
C2176	ECJ1VB1H471K	470P 50V	[M]
C2177	ECJ1VB1H471K	470P 50V	[M]
C2178	ECJ1VB1H331K	330P 50V	[M]
C2179	EEUFM1A681B	680P 10V	[M]
C2200	ECJ1VB1C393K	0.039 16V	[M]
C2201	ECJ1VB1H332K	3300P 50V	[M]
C2206	ECEA1HKA4R7I	4.7 50V	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
C2207	ECEA1HKA3R3I	3.3 50V	[M]
C2210	ECJ1VB1H223K	0.022 50V	[M]
C2211	ECJ1VB1C823K	0.082 16V	[M]
C2218	ECJ1VB1A105K	1 10V	[M]
C2219	ECJ1VB1A124K	0.12 10V	[M]
C2220	ECJ1VB1A124K	0.12 10V	[M]
C2221	ECJ1VC1H151K	150P 50V	[M]
C2222	ECJ1VB1H391K	390P 50V	[M]
C2223	ECEA1HKA100I	10 50V	[M]
C2224	ECJ1VC1H101K	100P 50V	[M]
C2225	ECJ1VC1H330J	33P 50V	[M]
C2226	ECJ1VB1E103K	0.01 25V	[M]
C2227	ECEA1HKA4R7I	4.7 50V	[M]
C2228	ECJ1VB1A154K	0.15 10V	[M]
C2229	ECJ1VB1A225K	2.2 10V	[M]
C2232	ECJ1VB1H332K	3300P 50V	[M]
C2236	ECJ1VC1H221J	220P 50V	[M]
C2237	ECJ1VB1H104K	0.1 50V	[M]
C2238	ECJ1VC1H221J	220P 50V	[M]
C2239	ECJ1VC1H101K	100P 50V	[M]
C2240	ECJ1VB1H681K	680P 50V	[M]
C2241	ECJ1VC1H101K	100P 50V	[M]
C2249	ECJ1VB1A105K	1 10V	[M]
C2250	ECEA1HKA010I	1 50V	[M]
C2251	ECJ1VC1H101K	100P 50V	[M]
C2252	ECJ1VC1H470J	47P 50V	[M]
C2253	ECA1CM101B	100 16V	[M]
C2254	ECJ1VB1E103K	0.01 25V	[M]
C2255	ECJ1VB1H102K	1000P 50V	[M]
C2256	ECJ1VB1A105K	1 10V	[M]
C2257	ECEA1HKA100B	10 50V	[M]
C2260	ECJ1VB1H471K	470P 50V	[M]
C2261	ECJ1VB1C104K	0.1 16V	[M]
C2262	ECJ1VB1A154K	0.15 10V	[M]
C2263	ECEA1HKA3R3I	3.3 50V	[M]
C2264	ECEA1HKA100I	10 50V	[M]
C2265	ECJ1VB1H272K	2700P 50V	[M]
C2266	ECEA1HKA4R7I	4.7 50V	[M]
C2267	ECEA1HKA4R7I	4.7 50V	[M]
C2270	ECJ1VB1A124K	0.12 10V	[M]
C2278	ECJ1VB1H331K	330P 50V	[M]
C2300	ECEA1CKA100B	10 16V	[M]
C2301	ECJ1VB1H471K	470P 50V	[M]
C2302	ECJ1VB1A105K	1 10V	[M]
C2303	ECEA1HKA3R3B	3.3 50V	[M]
C2310	ECJ1VB1H223K	0.022 50V	[M]
C2312	ECEA1HKA4R7I	4.7 50V	[M]
C2320	ECJ1VB1A124K	0.12 10V	[M]
C2400	ECEA1HKA100B	10 50V	[M]
C2401	FLK1A4750013	4.7 10V	[M]
C2402	ECJ1VB1H471K	470P 50V	[M]
C2403	ECJ1VB1A105K	1 10V	[M]
C2404	ECEA1HKA3R3B	3.3 50V	[M]
C2405	FLK1A4750013	4.7 10V	[M]
C2500	ECEA1CKA100B	10 16V	[M]
C2501	FLK1A4750013	4.7 10V	[M]
C2502	ECEA1HKA010I	1 50V	[M]
C2503	ECJ1VB1C333K	0.033 16V	[M]
C2504	ECJ1VB1C683K	0.068 16V	[M]
C2505	ECEA1HKA010I	1 50V	[M]
C2506	ECJ1VB1E103K	0.01 25V	[M]
C2507	ECJ1VC1H101K	100P 50V	[M]
C2508	ECEA1HKA4R7I	4.7 50V	[M]
C2511	ECJ1VB1A105K	1 10V	[M]
C2521	ECJ1VB1A105K	1 10V	[M]
C2522	ECJ1VB1A105K	1 10V	[M]
C2600	ECJ1VB1A105K	1 10V	[M]
C2602	ECEA1HKA100I	10 50V	[M]
C2603	ECEA1HKA100I	10 50V	[M]
C2604	ECJ1VB1H222K	2200P 50V	[M]
C2605	FIH1A334A025	0.33 10V	[M]
C2606	ECUV1C224KBV	0.22 16V	[M]
C2607	ECUV1C224KBV	0.22 16V	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
C2608	ECJ1VB1H104K	0.1 50V	[M]
C2609	ECJ1VB1H562K	5600P 50V	[M]
C2610	ECEA1HKA100B	10 50V	[M]
C2611	ECEA1HKA4R7I	4.7 50V	[M]
C2612	ECEA1HKA4R7I	4.7 50V	[M]
C2613	ECJ1VB1E103K	0.01 25V	[M]
C2615	ECJ1VB1H562K	5600P 50V	[M]
C2616	ECEA1CKA100I	10 16V	[M]
C2617	ECEA1HKA4R7I	4.7 50V	[M]
C2618	ECJ1VB1A124K	0.12 10V	[M]
C2619	ECJ1VB0J474K	0.47 6.3V	[M]
C2620	ECJ1VB1C683K	0.068 16V	[M]
C2621	ECJ1VC1H221J	220P 50V	[M]
C2623	ECJ1VB1C563K	0.056 16V	[M]
C2627	ECEA1HKA100I	10 50V	[M]
C2628	ECEA1HKA100I	10 50V	[M]
C2629	ECEA1HKA4R7I	4.7 50V	[M]
C2631	ECEA1HKA4R7I	4.7 50V	[M]
C2632	ECJ1VC1H101K	100P 50V	[M]
C2633	ECJ1VB1H223K	0.022 50V	[M]
C2634	ECEA1HKA4R7I	4.7 50V	[M]
C2635	ECJ1VC1H221J	220P 50V	[M]
C2636	ECEA1HKA4R7B	0.47 50V	[M]
C2801	ECJ1VC1H101K	100P 50V	[M]
C2802	ECA1EM221B	220 25V	[M]
C2803	ECJ1VC1H101K	100P 50V	[M]
C2804	ECJ1VC1H101K	100P 50V	[M]
C2805	ECJ1VC1H101K	100P 50V	[M]
C2806	EEUF0J821B	820P 6.3V	[M]
C2807	ECJ1VC1H101K	100P 50V	[M]
C2808	ECJ1VC1H101K	100P 50V	[M]
C2809	ECEA1EKA330B	33 25V	[M]
C2810	ECJ1VC1H101K	100P 50V	[M]
C2811	ECJ1VB1H103K	0.01 50V	[M]
C2812	ECJ1VC1H101K	100P 50V	[M]
C2814	ECJ1VC1H101K	100P 50V	[M]
C2815	ECJ1VB1H103K	0.01 50V	[M]
C2816	ECJ1VB1H221K	220P 50V	[M]
C2817	ECEA0JKA221B	220 6.3V	[M]
C2818	ECJ1VB1H221K	220P 50V	[M]
C2819	ECJ1VB1A105K	1 10V	[M]
C2820	ECJ1VB1E103K	0.01 25V	[M]
C2821	ECEA0JKA470B	47 6.3V	[M]
C2822	ECJ1VB1E103K	0.01 25V	[M]
C2823	ECJ1VB1A105K	1 10V	[M]
C2824	ECJ1VB1A105K	1 10V	[M]
C2825	ECEA0JKA331B	330 6.3V	[M]
C2826	ECQB1H104JF4	0.1 50V	[M]
C2827	ECEA1HKA100I	10 50V	[M]
C2828	ECA1JM101B	100 63V	[M]
C2829	ECA1HM101B	100 50V	[M]
C2830	F2A1E1020065	1000P 25V	[M]
C2831	ECEA1CKA470B	47 16V	[M]
C2832	F2A1E1020065	1000P 25V	[M]
C2833	ECEA1CKA470B	47 16V	[M]
C2834	ECA1HM101B	100 50V	[M]
C2835	ECA1JM101B	100 63V	[M]
C2836	ECA1CM101B	100 16V	[M]
C2837	ECJ1VB1H103K	0.01 50V	[M]
C2838	ECJ1VB1H103K	0.01 50V	[M]
C2839	ECEA1AKA330B	33 10V	[M]
C2840	ECJ1VB1C104K	0.1 16V	[M]
C2841	ECA1EM472B	4700 25V	[M]
C2842	ECJ1VB1H103K	0.01 50V	[M]
C2843	ECEA1EKA330B	33 25V	[M]
C2844	ECJ1VB1H103K	0.01 50V	[M]
C2845	ECJ1VB1C104K	0.1 16V	[M]
C2846	ECA1EM101B	100 25V	[M]
C2847	ECJ1VB1H103K	0.01 50V	[M]
C2848	ECA1EM101B	100 25V	[M]
C2853	ECEA1HKN4R7B	4.7 50V	[M]
C2856	ECA1HM101B	100 50V	[M]
C2857	ECJ1VB1A225K	2.2 10V	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
C2858	ECJ1VB1A225K	2.2 10V	[M]
C2859	ECJ1VB1E103K	0.01 25V	[M]
C2862	ECJ1VB1C104K	0.1 16V	[M]
C2863	ECEA1CKA221B	220 16V	[M]
C2866	ECJ1VB1A105K	1 10V	[M]
C6101	ECJ1VB1H473K	0.047 50V	[M]
C6201	ECJ1VB1H473K	0.047 50V	[M]
C6801	ECJ1VB1H102K	1000P 50V	[M]
C6805	ECJ1VC1H101K	100P 50V	[M]
C6806	ECJ1VC1H101K	100P 50V	[M]
C6903	ECEA1HKA220B	22 50V	[M]
C6904	ECJ1VB1H102K	1000P 50V	[M]
C6905	ECEA1HKA220B	22 50V	[M]
C6906	ECJ1VC1H390K	39P 50V	[M]
C6909	ECJ1VB1H103K	0.01 50V	[M]
C6910	ECEA0JKS101B	100 6.3V	[M]
C6911	ECJ1VB1H103K	0.01 50V	[M]
C6912	ECJ1VB1C104K	0.1 16V	[M]
C6913	ECEA1HKS3R3B	3.3 50V	[M]
C6914	ECUV1C224KBV	0.22 16V	[M]
C6915	ECJ1VC1H101K	100P 50V	[M]
C6916	ECJ1VC1H101K	100P 50V	[M]
C6917	ECJ1VC1H101K	100P 50V	[M]
C6918	ECEA1AKA470B	47 10V	[M]
C6919	ECJ1VB1H103K	0.01 50V	[M]
C8001	F2G0J101A066	100 6.3V	[M]
C8002	F2G0G331A012	330 4V	[M]
C8003	ECJOEB1E222K	2200P 25V	[M]
C8004	ECJOEF1C104Z	0.1 16V	[M]
C8005	ECJOEF1C104Z	0.1 16V	[M]
C8006	ECJOEF1C104Z	0.1 16V	[M]
C8007	ECJOEF1C104Z	0.1 16V	[M]
C8008	ECJOEF1C104Z	0.1 16V	[M]
C8009	ECJOEF1C104Z	0.1 16V	[M]
C8010	ECJOEF1C104Z	0.1 16V	[M]
C8011	ECJ1VB0J105K	1 6.3V	[M]
C8012	ECJOEF1C104Z	0.1 16V	[M]
C8013	ECJOEF1C104Z	0.1 16V	[M]
C8014	ECJOEF1C104Z	0.1 16V	[M]
C8015	ECJ1VB0J105K	1 6.3V	[M]
C8016	ECJ1VB0J105K	1 6.3V	[M]
C8017	ECJOEF1C104Z	0.1 16V	[M]
C8018	ECJOEF1C104Z	0.1 16V	[M]
C8019	ECJ1VB0J105K	1 6.3V	[M]
C8020	ECJOEF1C104Z	0.1 16V	[M]
C8021	ECJOEF1C104Z	0.1 16V	[M]
C8022	ECJOEF1C104Z	0.1 16V	[M]
C8023	ECJ1VB0J105K	1 6.3V	[M]
C8024	ECJ1VB0J105K	1 6.3V	[M]
C8025	ECJOEF1C104Z	0.1 16V	[M]
C8026	ECJOEB1E222K	2200P 25V	[M]
C8027	ECJOEF1C104Z	0.1 16V	[M]
C8028	ECJ1VB0J105K	1 6.3V	[M]
C8031	ECJOEF1C104Z	0.1 16V	[M]
C8051	ECJ1VB0J105K	1 6.3V	[M]
C8052	ECJOEF1C104Z	0.1 16V	[M]
C8053	ECJOEC1H221J	220 50V	[M]
C8054	ECJ1VB0J105K	1 6.3V	[M]
C8055	ECJ1VB0J105K	1 6.3V	[M]
C8056	ECJOEF1C104Z	0.1 16V	[M]
C8057	ECJOEB1E222K	2200P 25V	[M]
C8111	ECJOEB1A104K	0.1 10V	[M]
C8112	ECJ1VB0J105K	1 6.3V	[M]
C8113	ECJOEB1E471K	470 25V	[M]
C8201	F2H0J101A003	100 6.3V	[M]
C8202	F2G0J101A066	100 6.3V	[M]
C8203	ECJOEF1C104Z	0.1 16V	[M]
C8204	ECJOEF1C104Z	0.1 16V	[M]
C8205	ECJOEF1C104Z	0.1 16V	[M]
C8206	ECJ1VB0J105K	1 6.3V	[M]
C8207	ECJ1VF1C104Z	0.1 16V	[M]
C8208	ECJOEF1C104Z	0.1 16V	[M]
C8211	ECJOEB1A333K	0.033 10V	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
C8212	ECJOEF1C104Z	0.1 16V	[M]
C8213	ECJOEF1C104Z	0.1 16V	[M]
C8214	ECJOEF1C104Z	0.1 16V	[M]
C8215	ECJOEB1E562K	5600P 25V	[M]
C8216	ECJOEB1C183K	0.018 16V	[M]
C8217	ECJ1VB0J105K	1 6.3V	[M]
C8218	ECJ1VB0J105K	1 6.3V	[M]
C8221	ECJOEB1A104K	0.1 10V	[M]
C8222	ECJOEB1A104K	0.1 10V	[M]
C8223	ECJOEB1A104K	0.1 10V	[M]
C8224	ECJOEB1A104K	0.1 10V	[M]
C8225	ECJOEF1C104Z	0.1 16V	[M]
C8226	ECJOEF1C104Z	0.1 16V	[M]
C8227	ECJOEF1C104Z	0.1 16V	[M]
C8228	ECJ1VB0J105K	1 6.3V	[M]
C8229	ECJ1VB0J105K	1 6.3V	[M]
C8232	ECJ1VF1C104Z	0.1 16V	[M]
C8233	ECJOEB1E472K	4700P 25V	[M]
C8234	ECJOEF1C104Z	0.1 16V	[M]
C8235	ECJOEB1H102K	1000P 50V	[M]
C8236	ECJOEB1H102K	1000P 50V	[M]
C8237	ECJOEB1H102K	1000P 50V	[M]
C8238	ECJOEB1H821K	820P 50V	[M]
C8241	ECJOEB1A104K	0.1 10V	[M]
C8242	ECJOEB1A104K	0.1 10V	[M]
C8251	F2G0J221A065	220P 6.3V	[M]
C8252	F2G1C470A076	47P 16V	[M]
C8253	F2H1C220A003	22P 16V	[M]
C8254	ECJOEF1C104Z	0.1 16V	[M]
C8255	ECJOEF1C104Z	0.1 16V	[M]
C8256	ECJOEF1C104Z	0.1 16V	[M]
C8257	ECJOEF1C104Z	0.1 16V	[M]
C8261	ECJOEF1C104Z	0.1 16V	[M]
C8262	ECJOEF1C104Z	0.1 16V	[M]
C8301	F2H0J2210006	220P 6.3V	[M]
C8302	F2H0J330A003	33 6.3V	[M]
C8303	ECJOEF1C104Z	0.1 16V	[M]
C8304	ECJ1VB0J105K	1 6.3V	[M]
C8307	ECJOEF1C104Z	0.1 16V	[M]
C8308	ECJOEC1H150J	15 50V	[M]
C8311	ECJOEF1C104Z	0.1 16V	[M]
C8312	ECJ1VB0J105K	1 6.3V	[M]
C8421	F2G0J101A083	100P 6.3V	[M]
C8422	ECJOEF1C104Z	0.1 16V	[M]
C8423	F2G0J330A083	33P 6.3V	[M]
C8424	ECJOEF1C104Z	0.1 16V	[M]
C8426	ECJOEF1C104Z	0.1 16V	[M]
C8427	ECJOEF1C104Z	0.1 16V	[M]
C8428	ECJOEF1C104Z	0.1 16V	[M]
C8501	ECJ3YB1A106M	10 10V	[M]
C8502	ECJOEF1C104Z	0.1 16V	[M]
C8503	ECJOEF1C104Z	0.1 16V	[M]
C8504	ECJOEF1C104Z	0.1 16V	[M]
C8505	ECJOEC1H221J	220P 50V	[M]
C8506	ECJOEC1H101J	100P 50V	[M]
C8550	F2H0J330A003	33P 6.3V	[M]
C8551	ECJOEF1C104Z	0.1 16V	[M]
C8552	F2G1C100A072	10P 16V	[M]
C8553	F2H0J470A003	47P 6.3V	[M]
C8554	ECJ1VB0J105K	1 6.3V	[M]
C8561	ECJOEF1C104Z	0.1 16V	[M]
C8562	F2G1C100A072	10P 16V	[M]
C8563	F2H0J470A003	47P 6.3V	[M]
C8564	ECJ1VB0J105K	1 6.3V	[M]
C8601	ECJOEF1C104Z	0.1 16V	[M]
C8606	ECJOEF1C104Z	0.1 16V	[M]
C8607	ECJOEB0J224K	0.22 6.3V	[M]
C8611	ECJOEF1C104Z	0.1 16V	[M]
C8621	ECJOEC1H120J	12 50V	[M]
C8622	ECJOEC1H120J	12 50V	[M]
C8651	ECJOEF1C104Z	0.1 16V	[M]
C8652	ECJOEF1C104Z	0.1 16V	[M]
C8691	ECJOEF1C104Z	0.1 16V	[M]


Ref. No.	Part No.	Part Name & Description	Remarks
C8695	ECJ0EF1C104Z	0.1 16V	[M]

### 27.3. Packing Materials & Accessories Parts List

Ref. No.	Part No.	Part Name & Description	Remarks
		PACKING MATERIALS	
P1	RPGX1403	PACKING CASE	[M]
P2	RPNX0302	POLYFOAM	[M]
P3	RPFX0058	MIRAMAT SHEET	[M]
		ACCESSORIES	
A1	EUR7722XE0	REMOTE CONTROLLER	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
A1-1	UR76EC3103A	R/C BATTERY COVER	[M]
A2	K2CQ2CA00002	AC CORD	[M] △
A3	RQT8223-R	O/I BOOK (UR, RU)	[M]
A4	RSA0007-L	FM INDOOR ANTENNA	[M]
A5	K1HA25HA0001	SYSTEM CABLE	[M]
A6	K2KA2BA00001	VIDEO CABLE	[M]
A7	N1DAAA00001	AM LOOP ANTENNA	[M]
A9	REE1203A-1J	SPEAKER CABLE	[M]
A10	RQCA1029	SPEAKER LABEL	[M]


### 27.4. Packaging

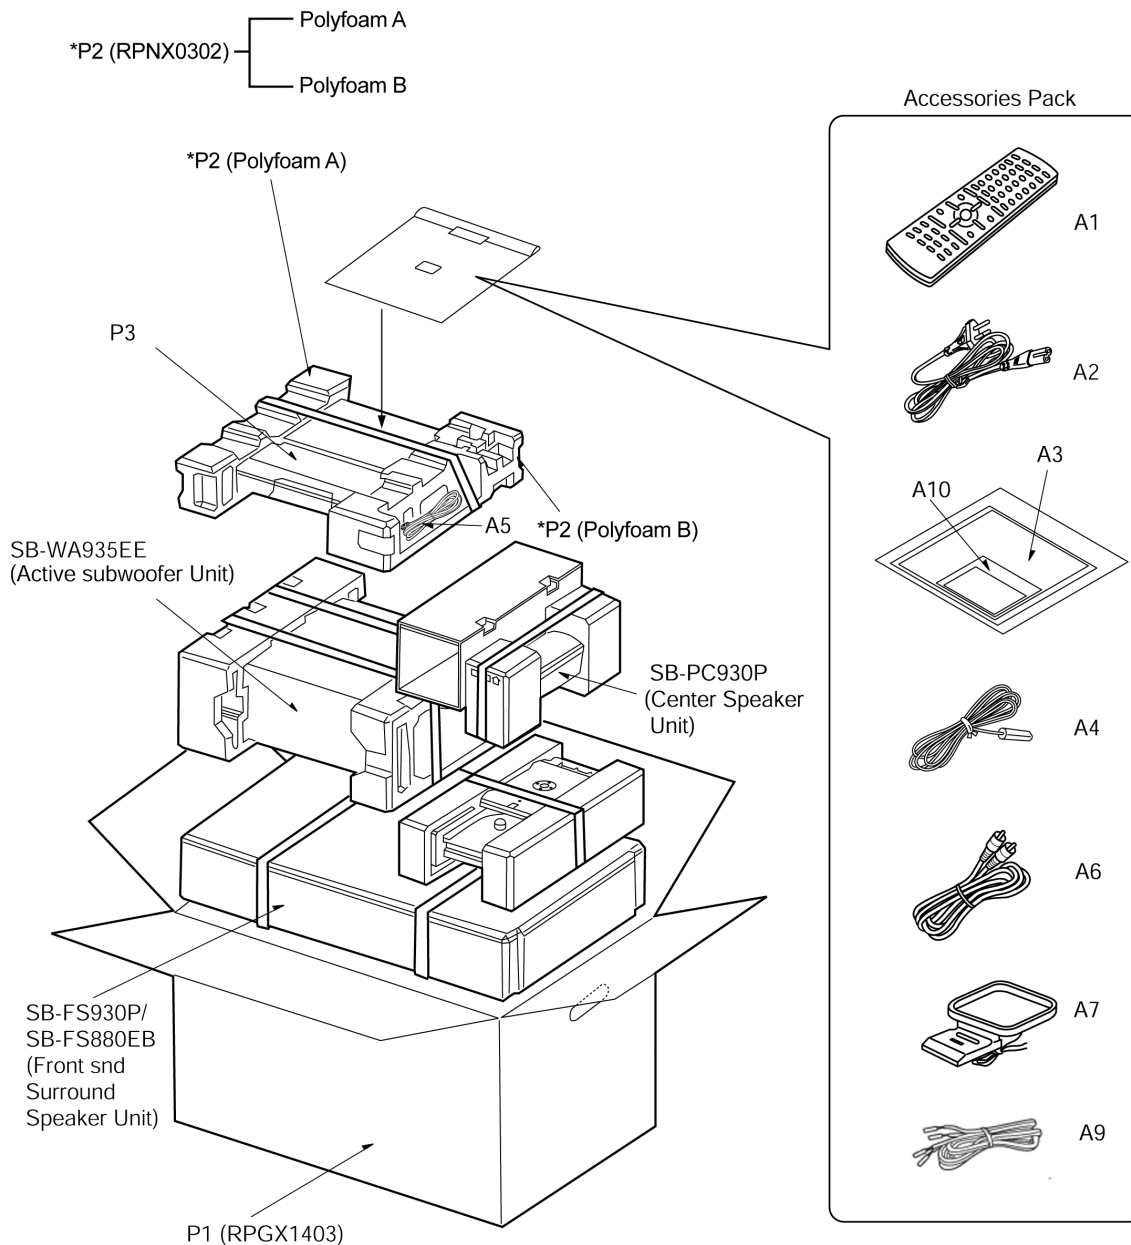

## 28 Schematic Diagram for printing with letter size






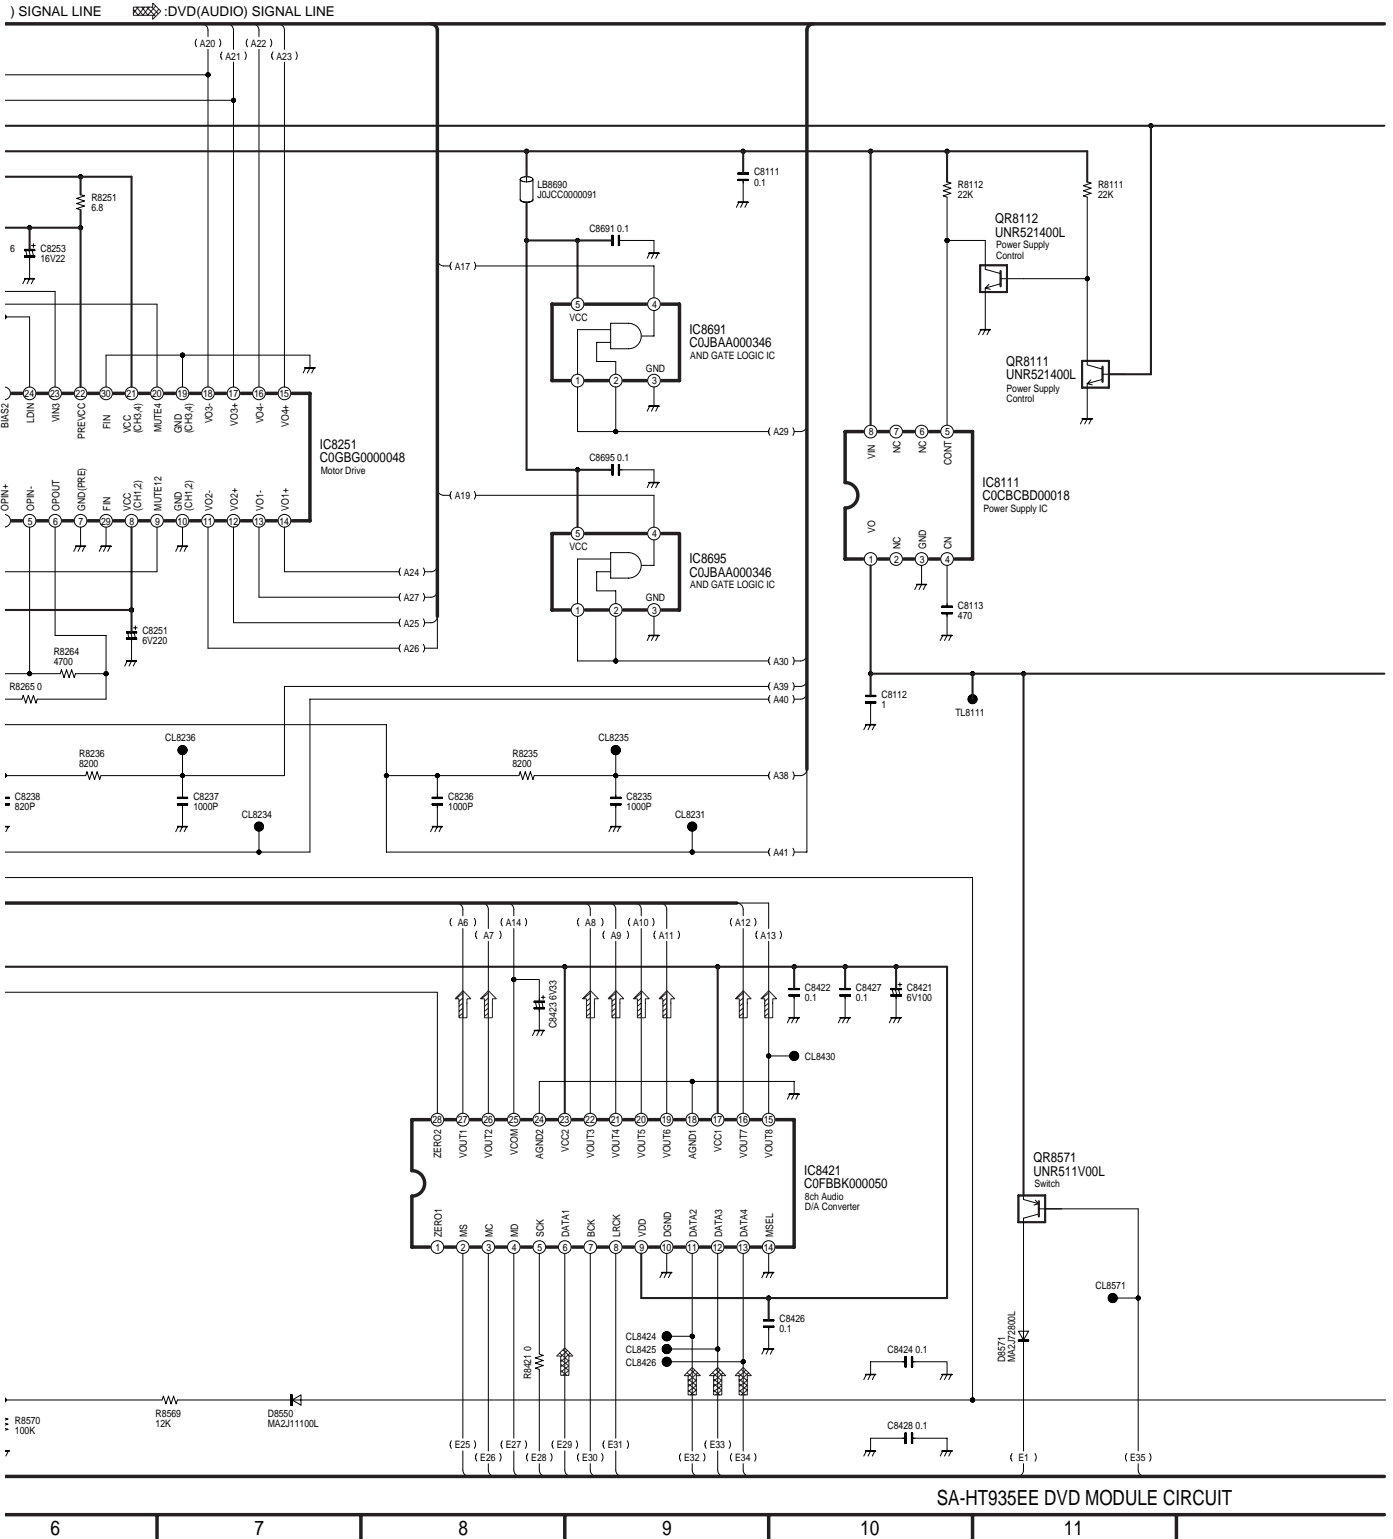




IO) SIGNAL LINE

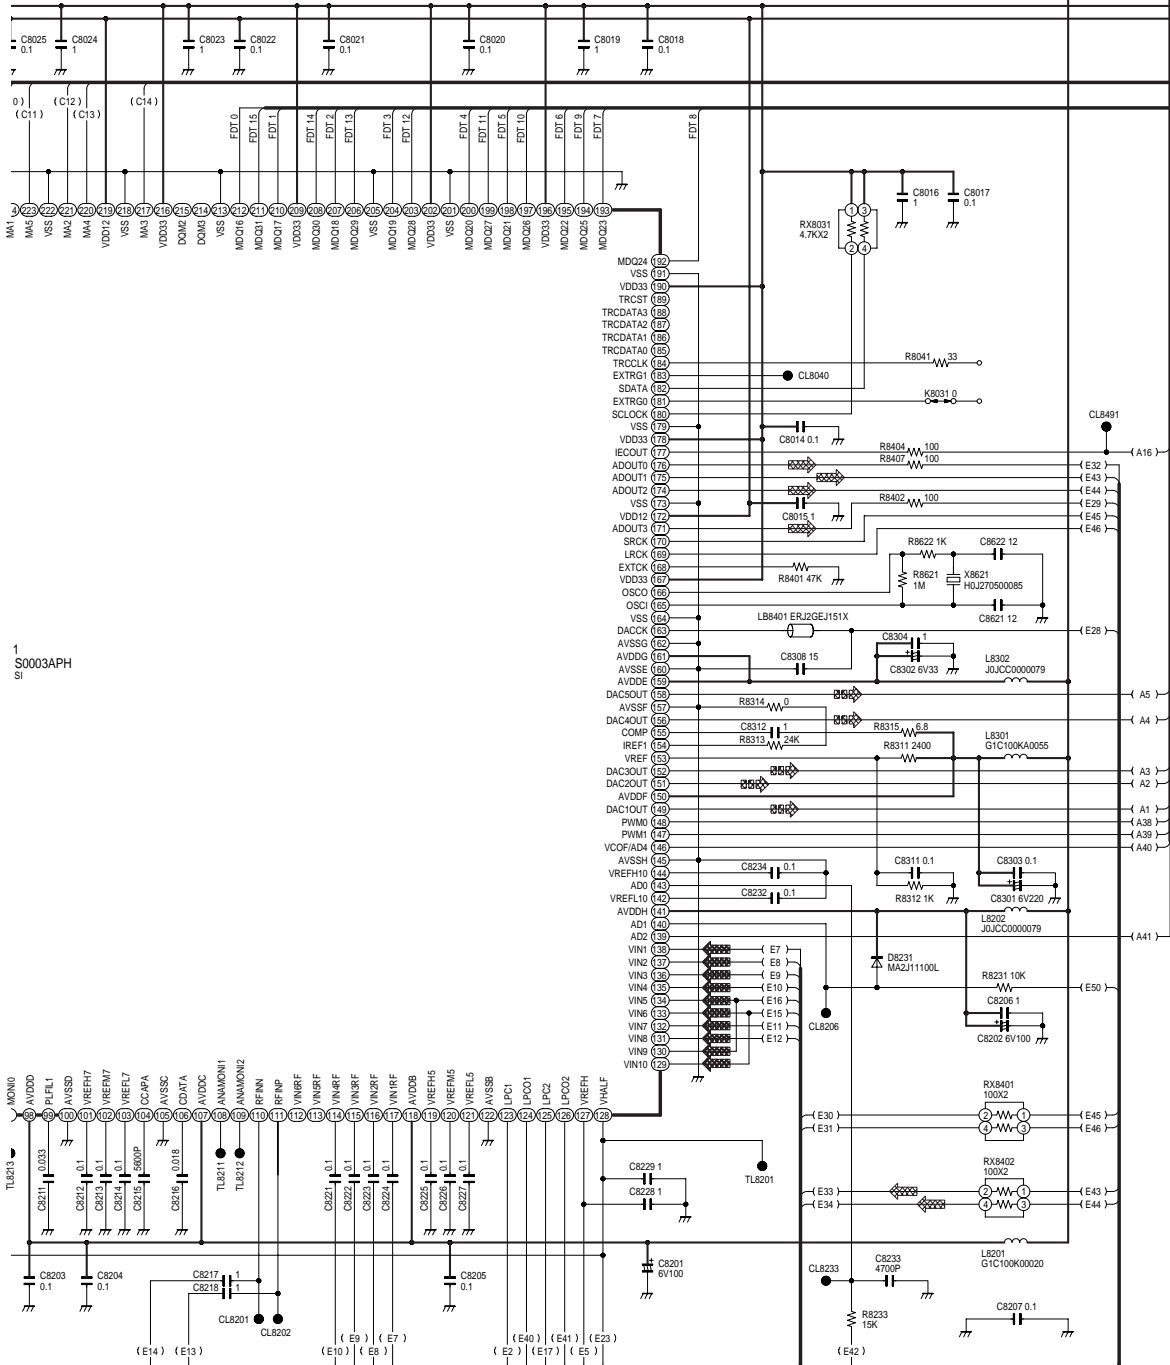




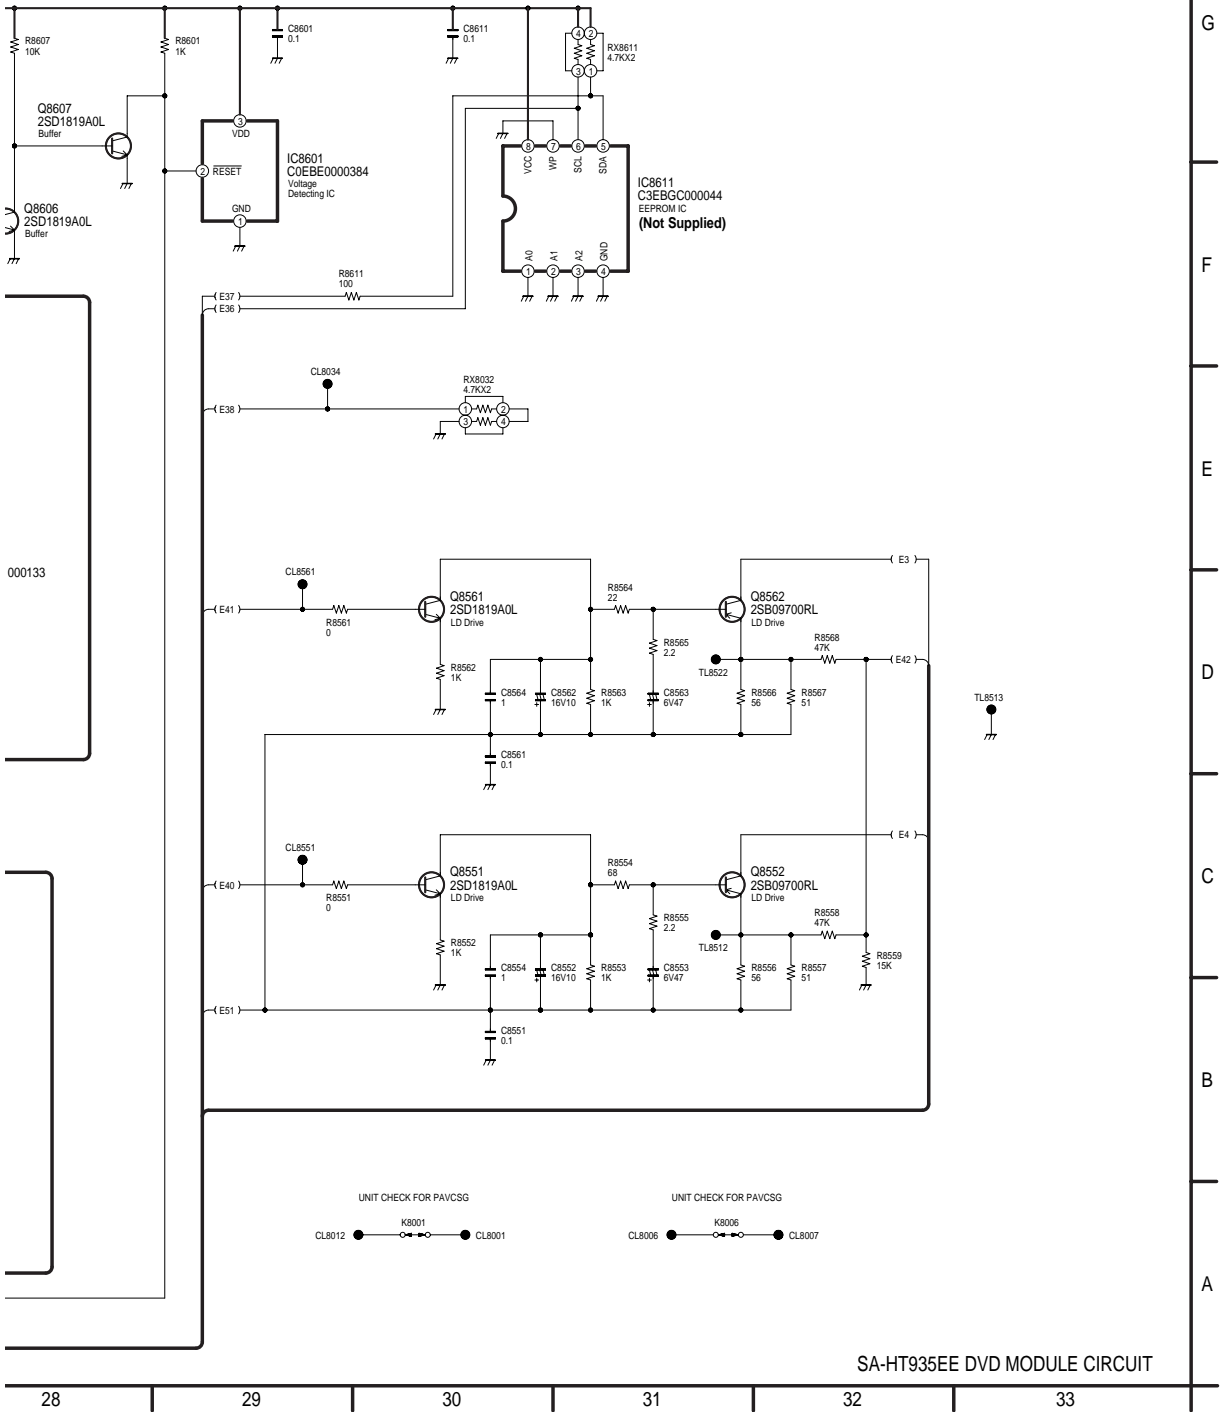

SA-HT935EE DVD MODULE CIRCUIT



LINE → :FM/AM SIGNAL LINE

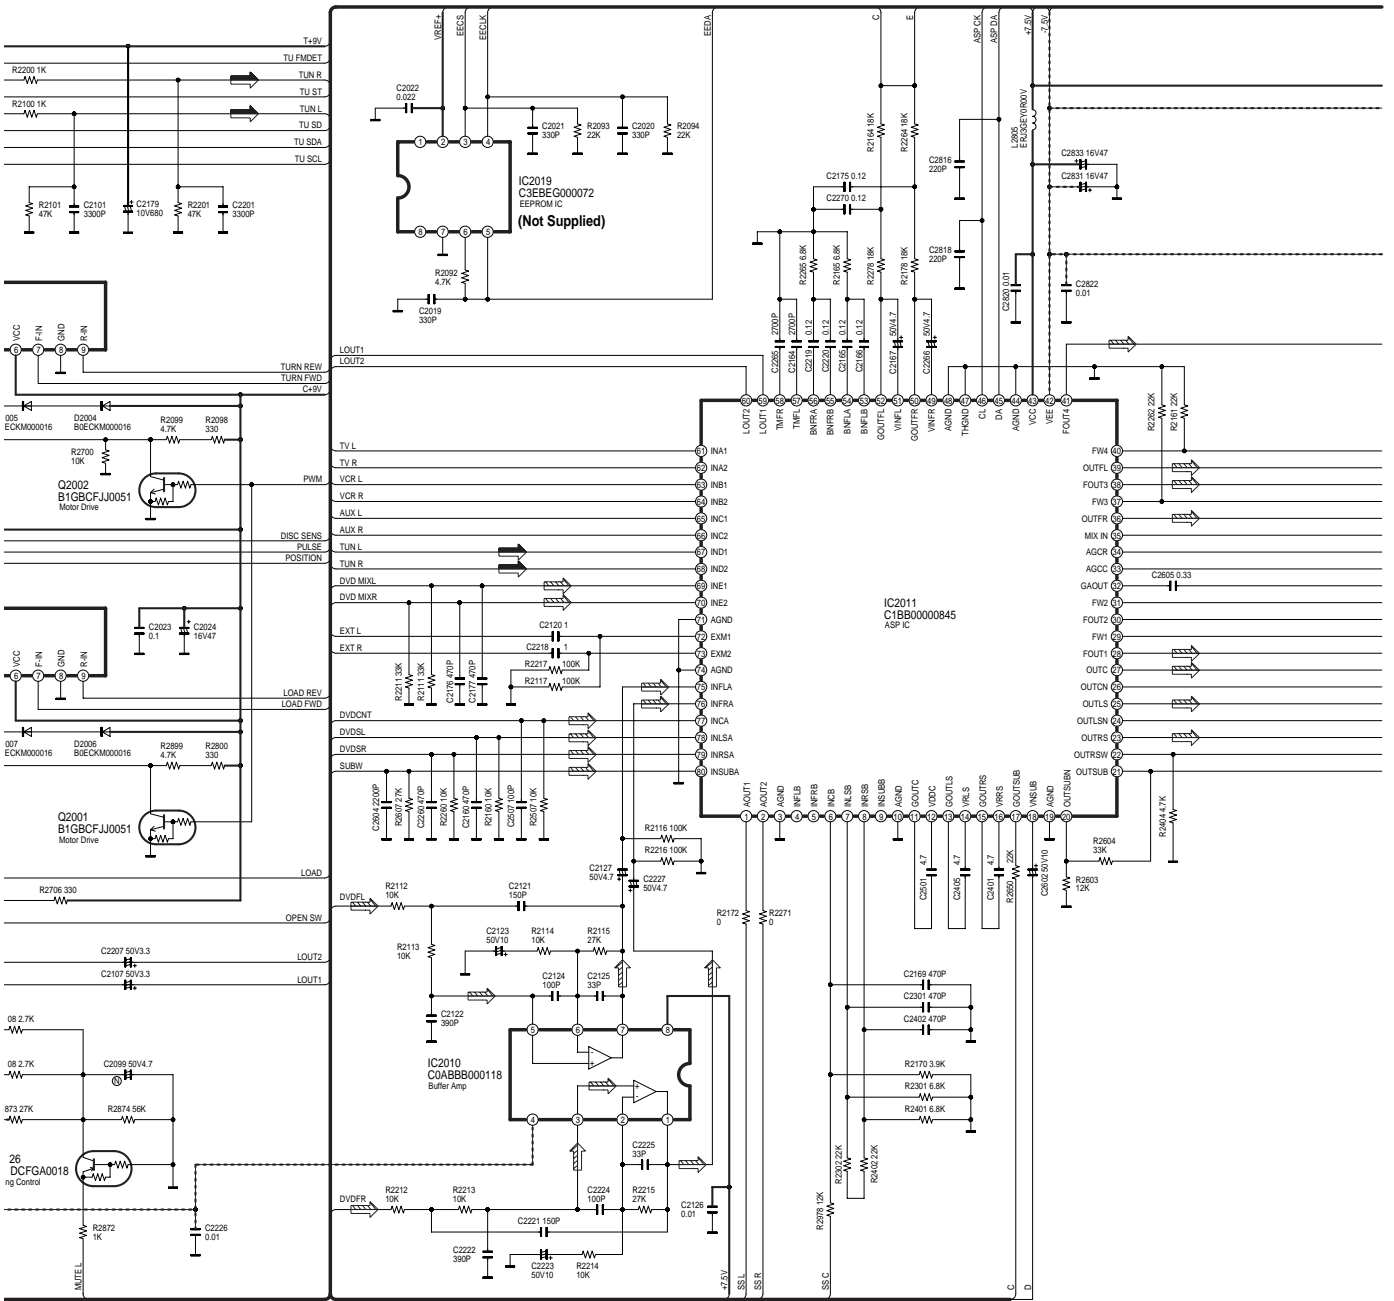


SA-HT935EE MAIN CIRCUIT




SCHEMATIC DIAGRAM-5

**B** MAIN CIRCUIT

—:B SIGNAL LINE    - - - :B SIGNAL LINE    ⇨ :MAIN SIGNAL LINE

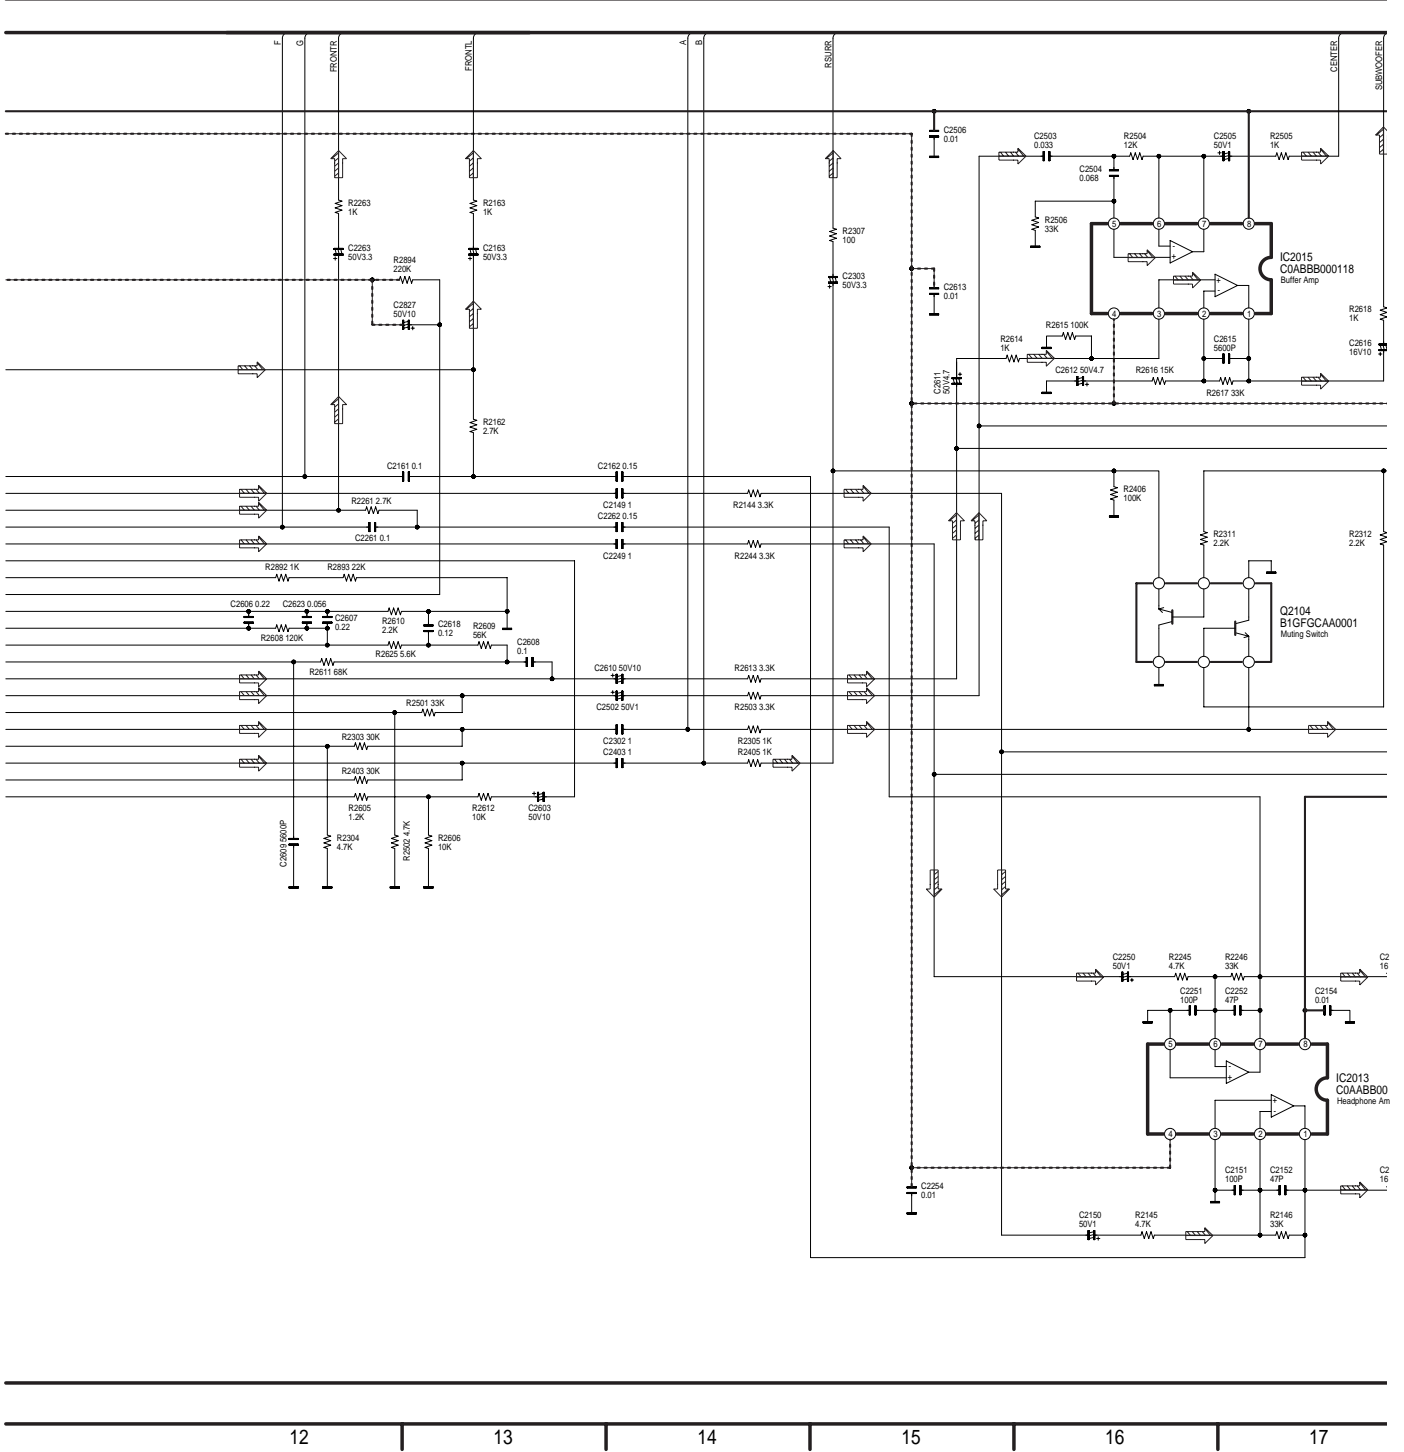




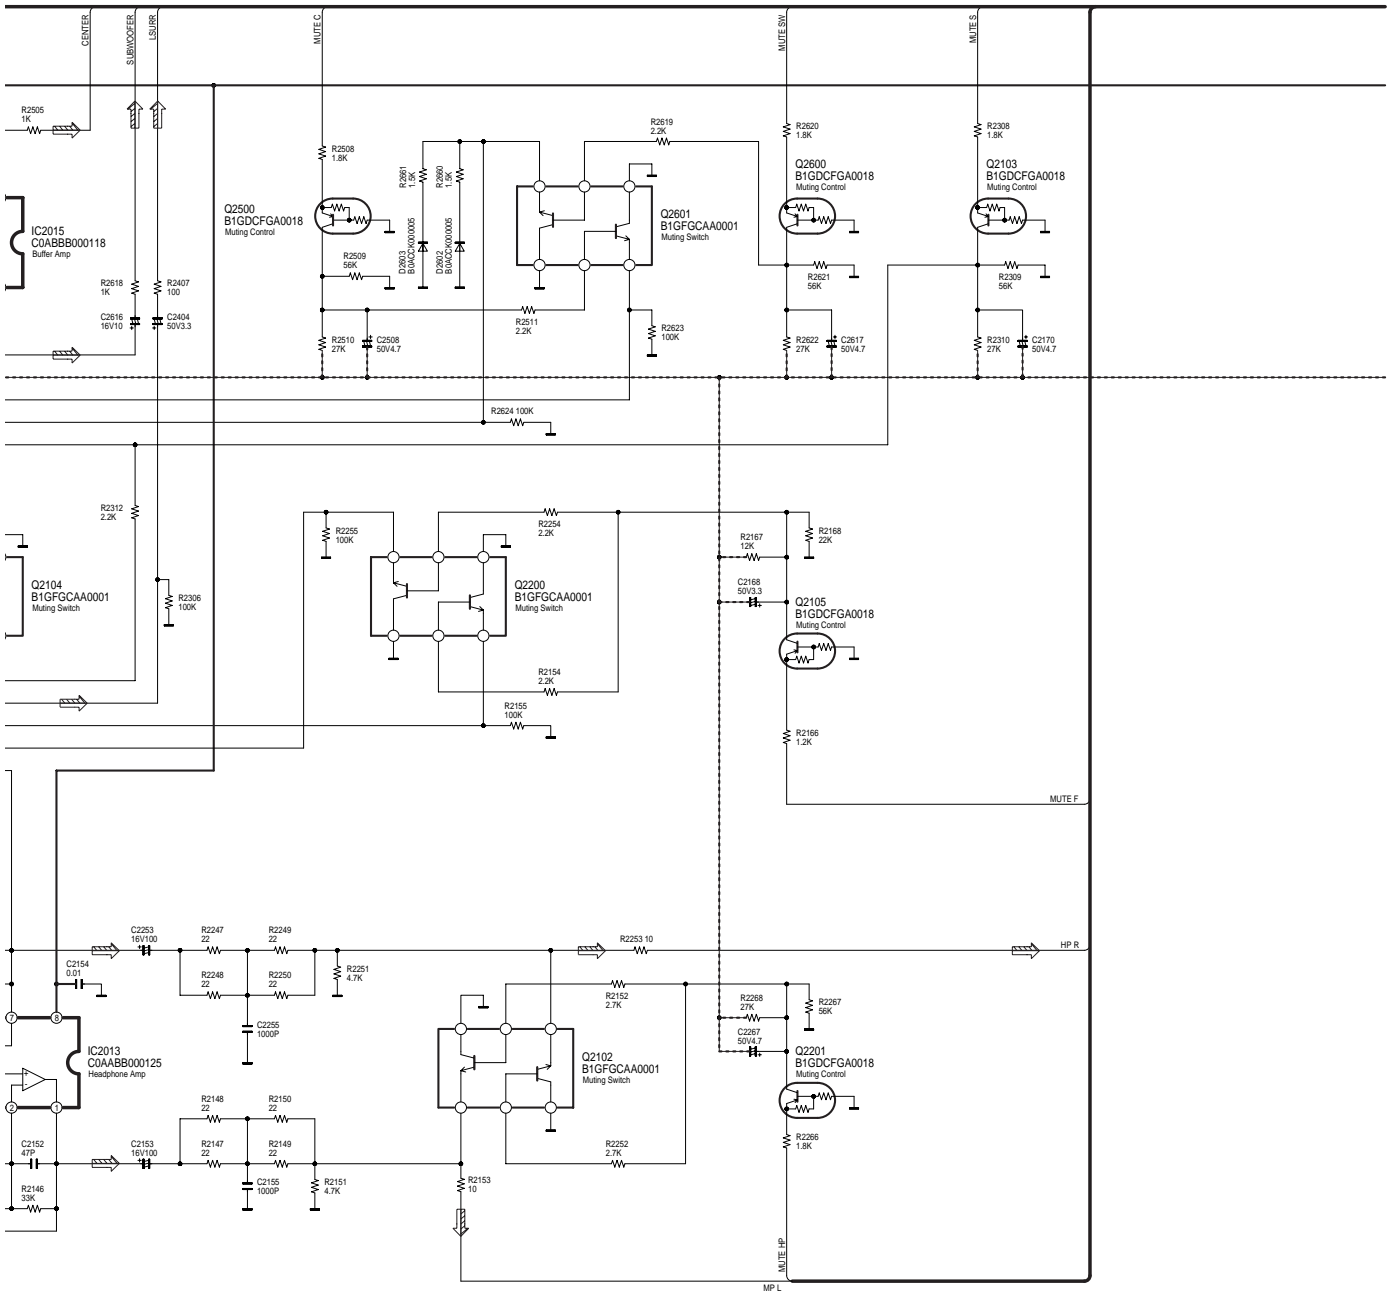

SA-HT935EE MAIN CIRCUIT



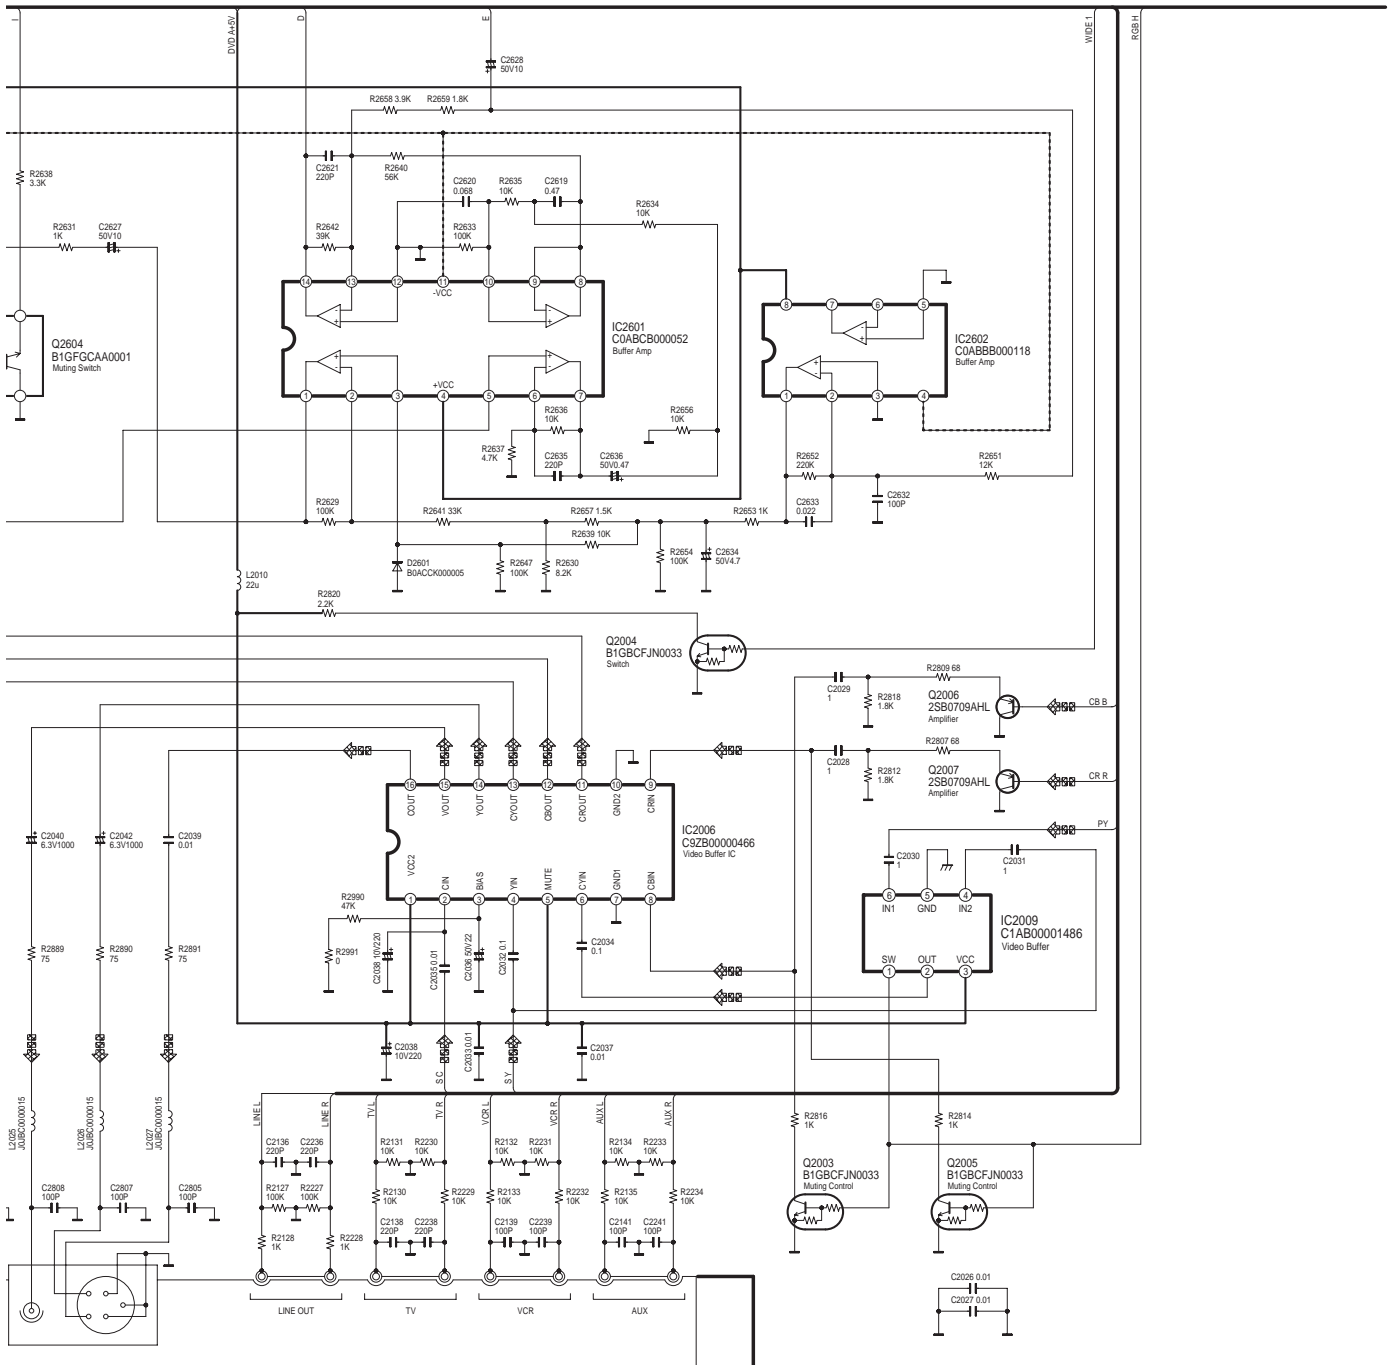

SA-HT935EE MAIN CIRCUIT

28

29

30

31


32


33

SCHEMATIC DIAGRAM-7

**B** MAIN CIRCUIT

— :+B SIGNAL LINE    - - - :B SIGNAL LINE    ⇨ :MAIN SIGNAL LINE

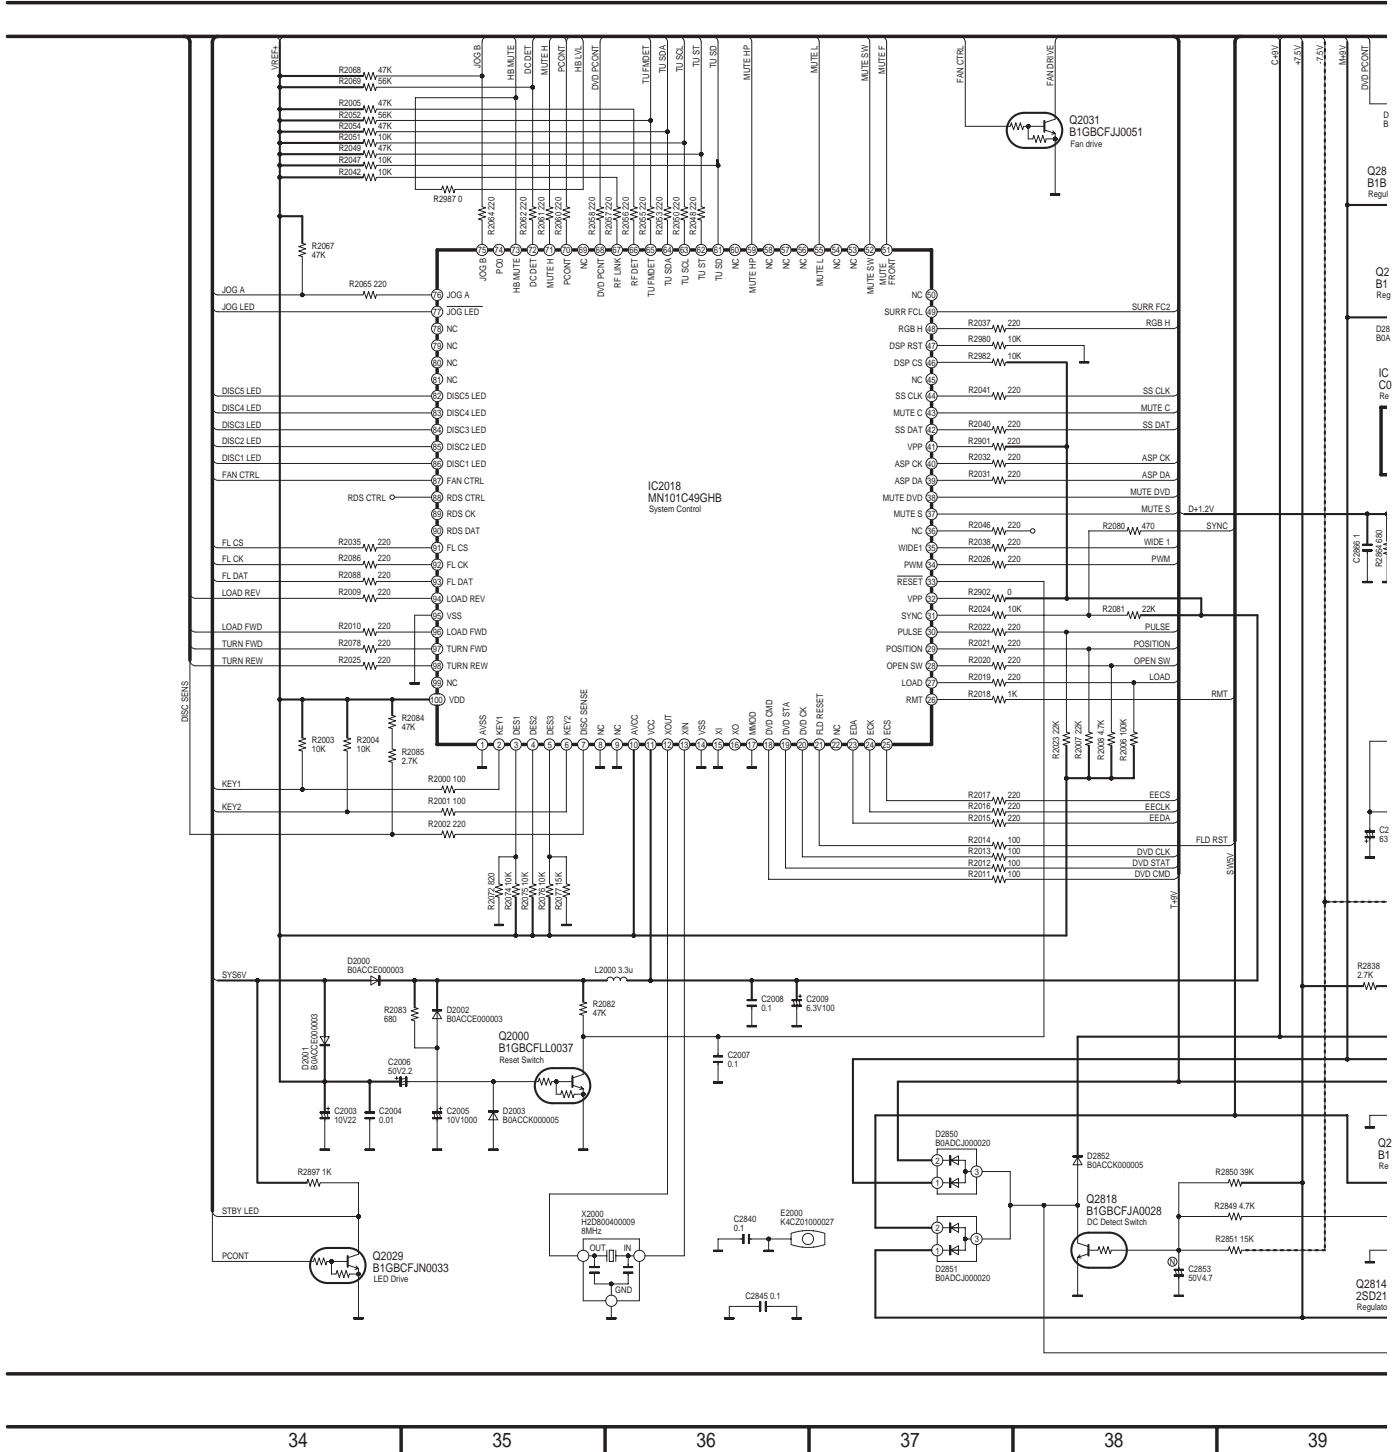


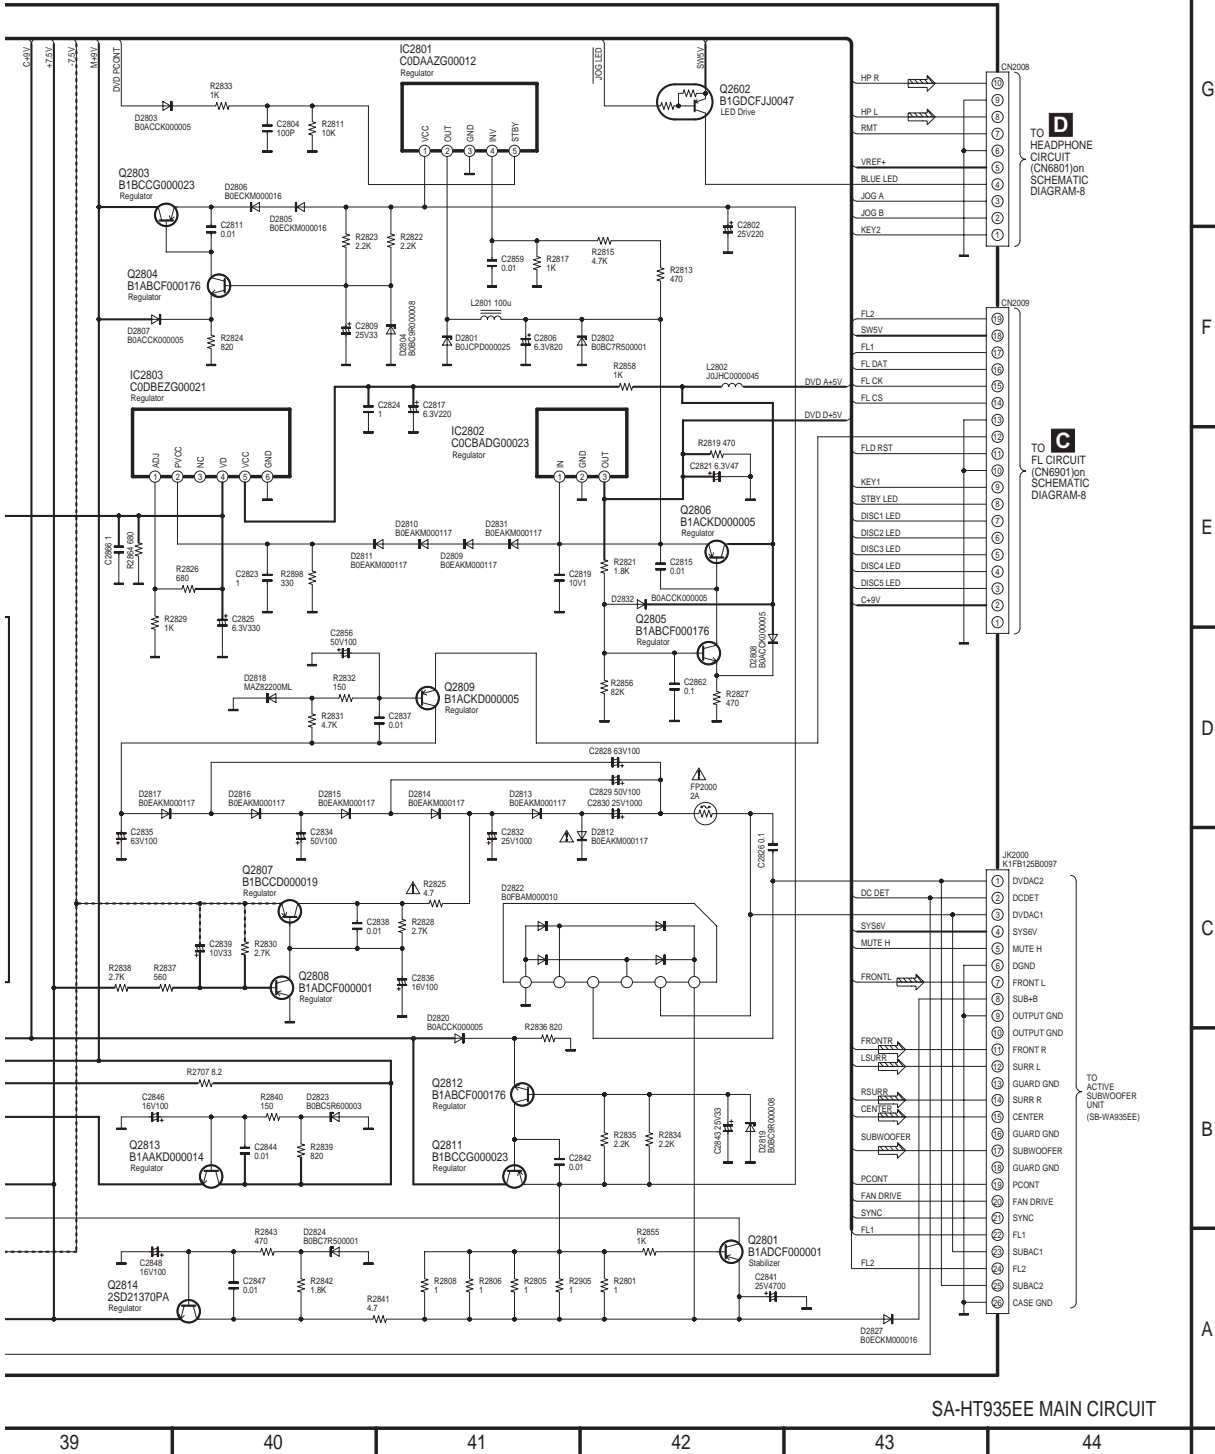

SA-HT935EE MAIN CIRCUIT


SCHEMATIC DIAGRAM-8

C FL CIRCUIT

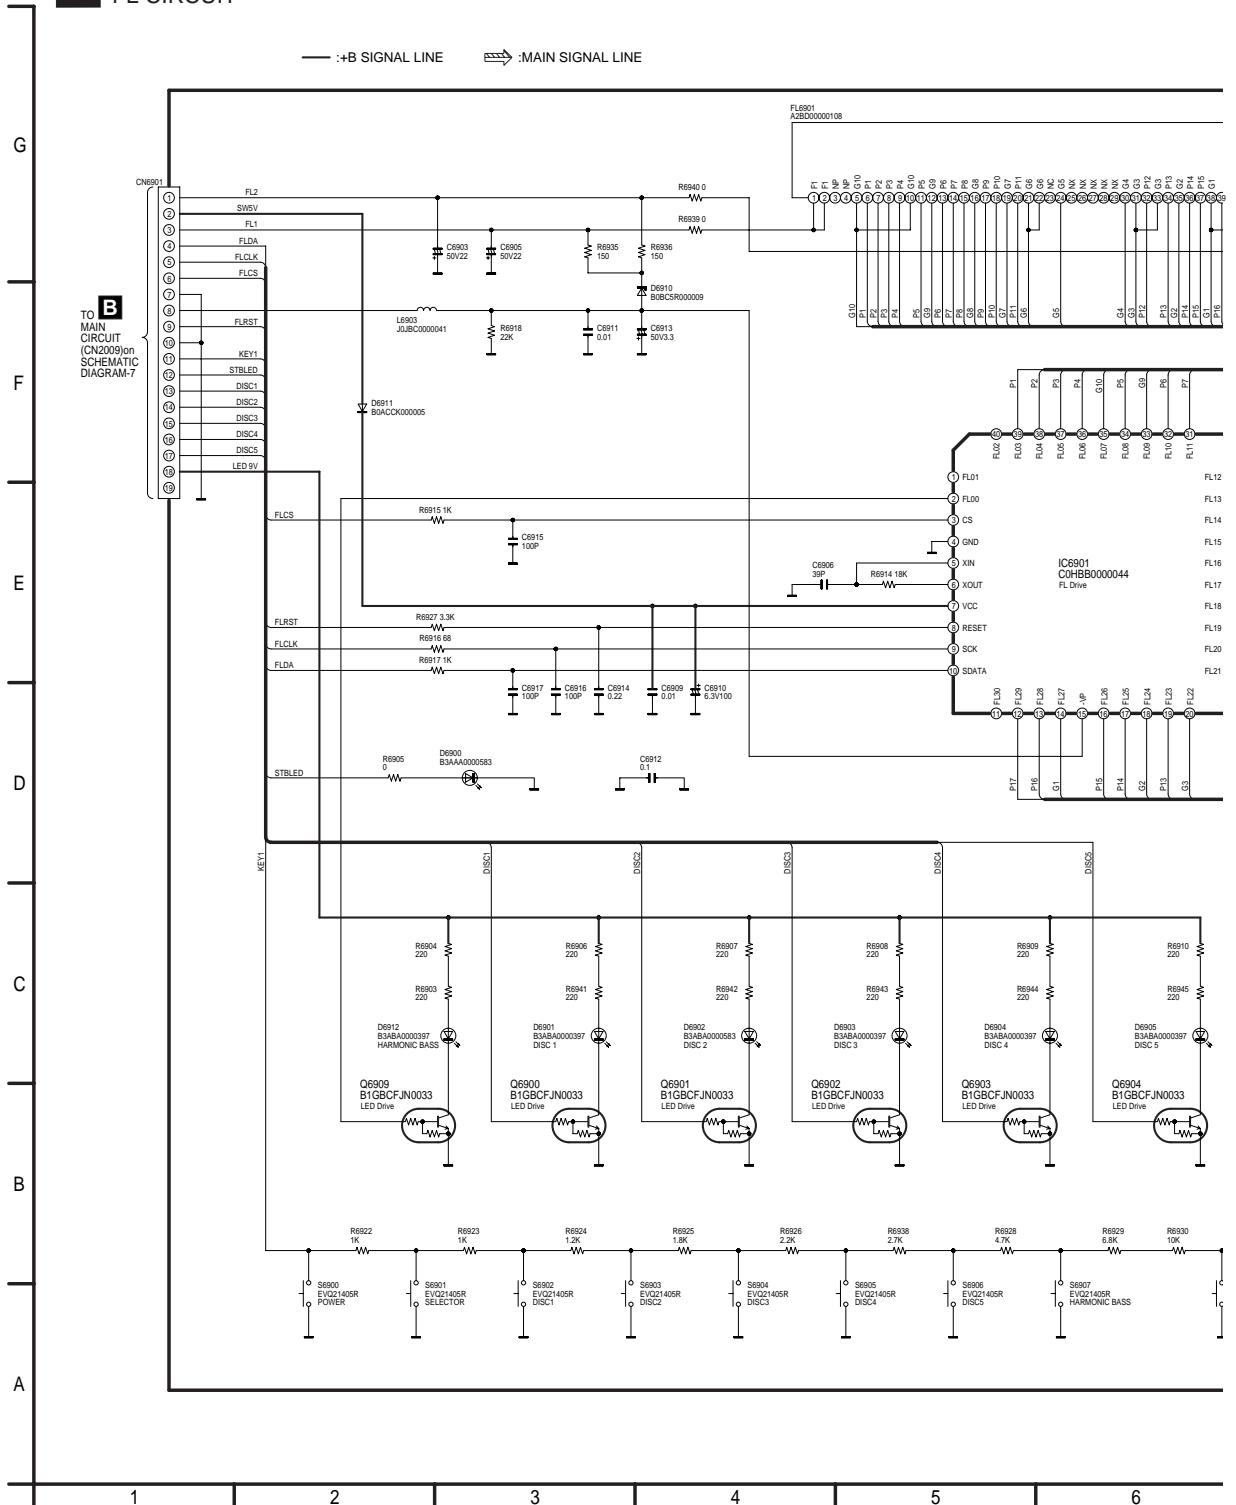




**D** HEADPHONE CIRCUIT

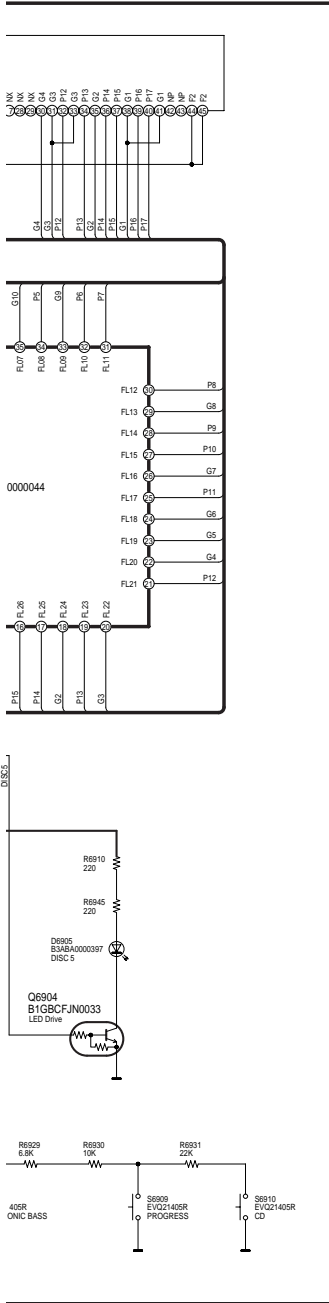

**B** TO MAIN CIRCUIT (CN2008) on SCHEMATIC DIAGRAM-7



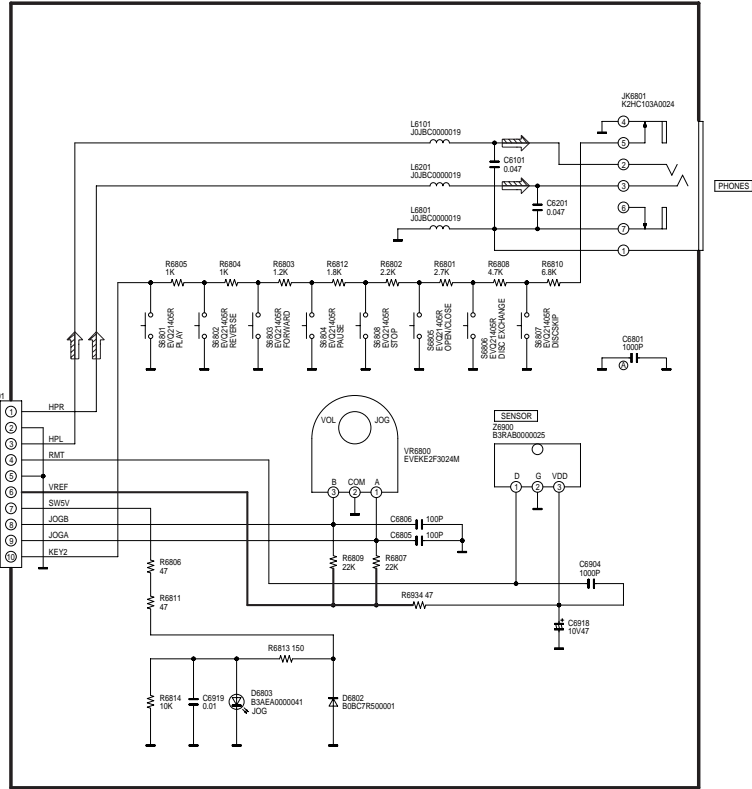


SA-HT935EE FL/HEADPHONE CIRCUIT



6 | 7 | 8 | 9 | 10 | 11



SCHEMATIC DIAGRAM-9

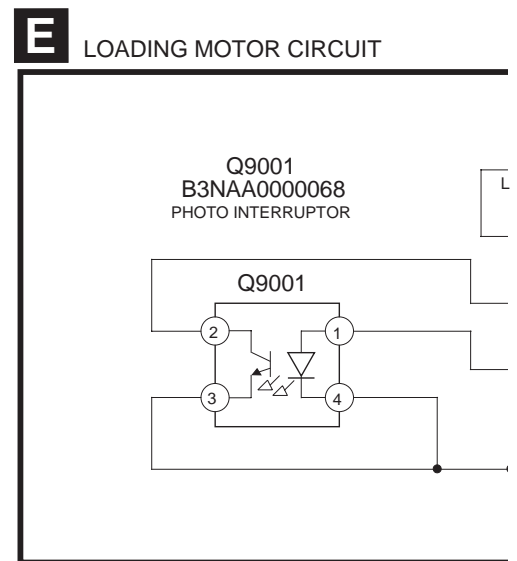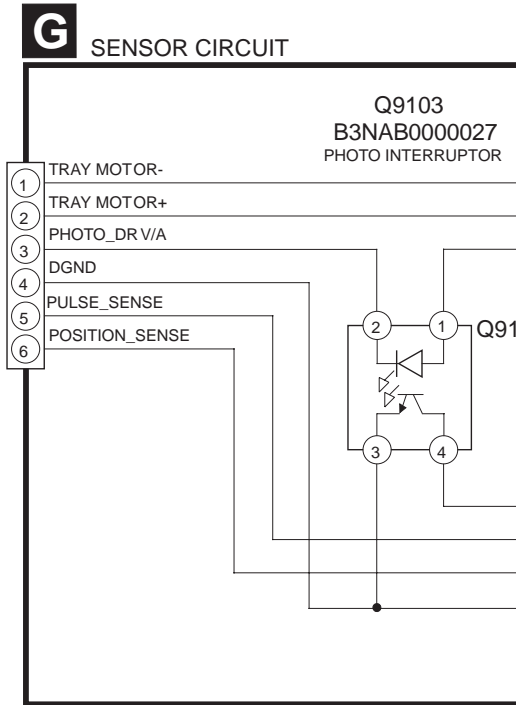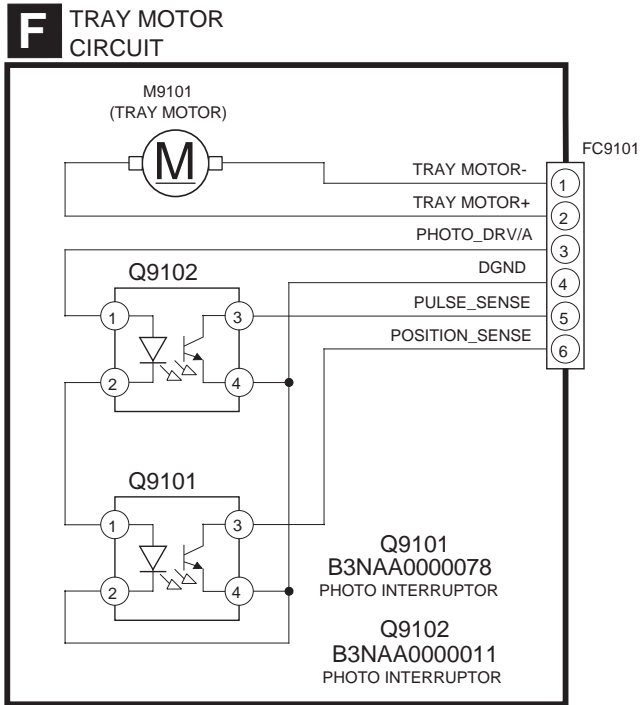



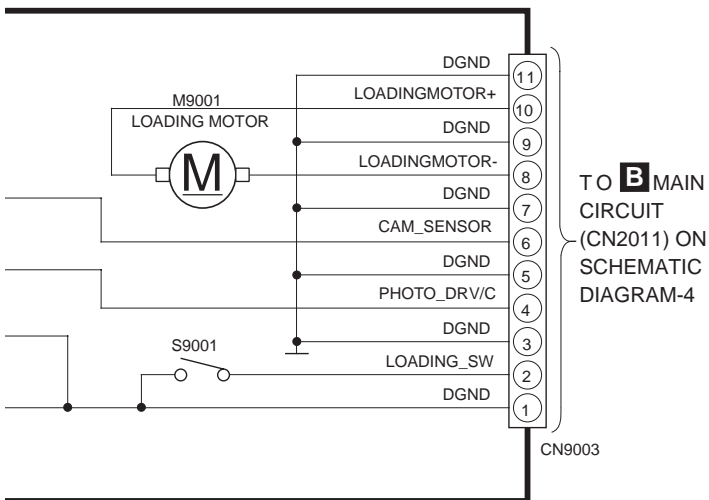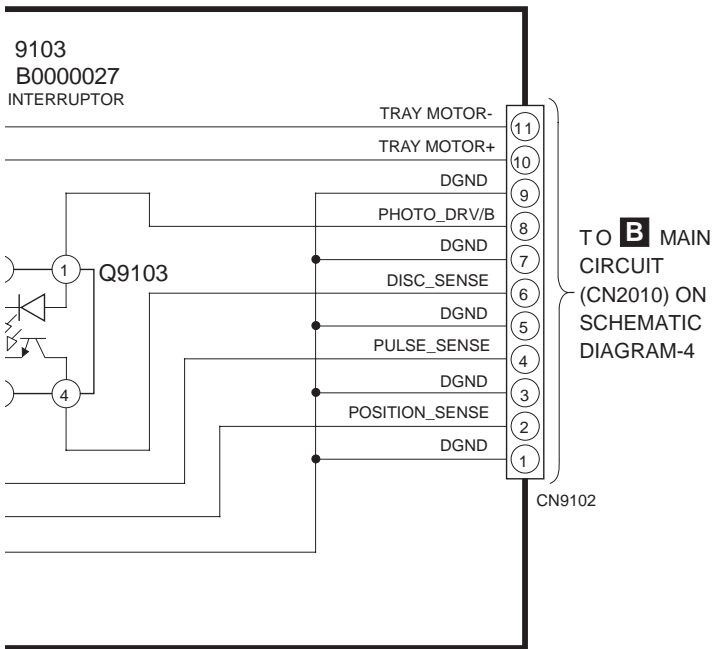

SA-HT935EE LOADING MOTOR/TRAY MOTOR/SENSOR CIRCUIT