


Service Manual

Stereo Integrated Amplifier

Amplifier

SU-V45A

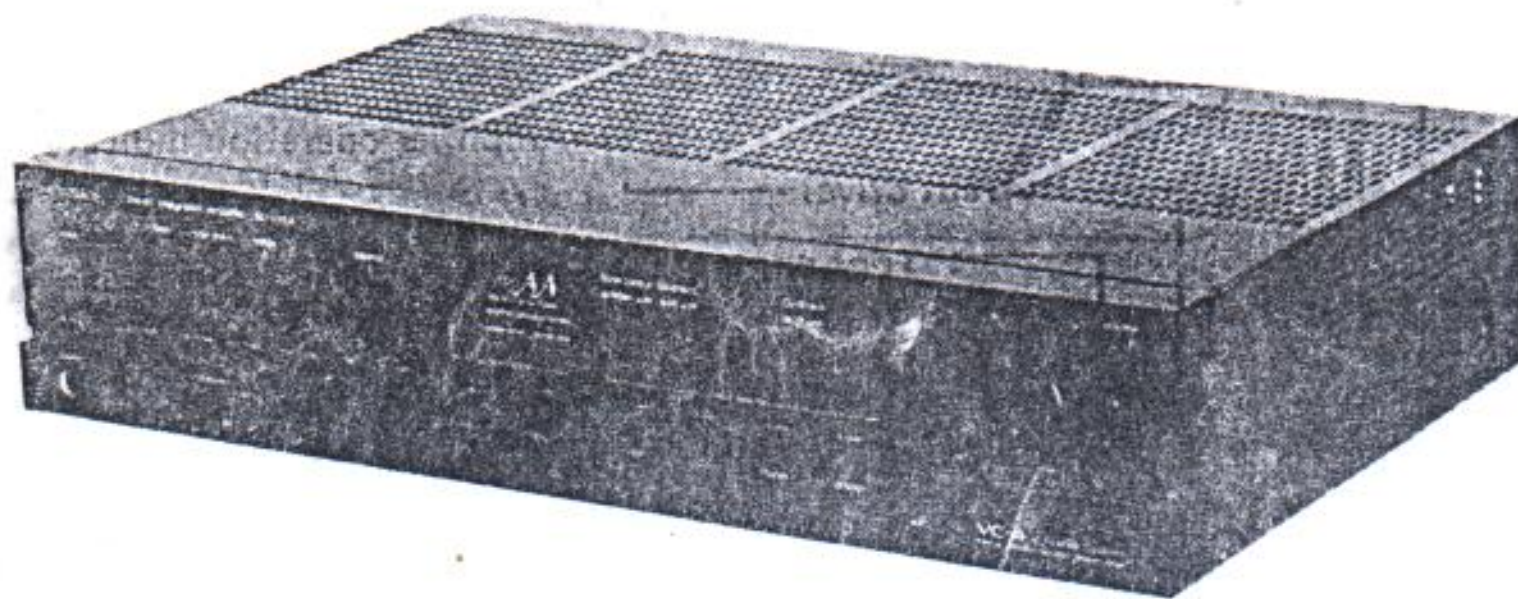

Color

(S)Silver Type
(K)Black Type

Area

Color	Area
(S)(K)	(E)Continental Europe.
(S)(K)	(Ei)Italy.
(S)(K)	(EG)F.R.Germany.
(S)(K)	(EB)Belgium.
(S)(K)	(EK)United Kingdom.
(S)(K)	(EF)France.
(S)(K)	(EH)Holland.
(S)(K)	(XL)Australia.
(S)(K)	(XA)Asia, Latin America, Middle Near East, Africa and Oceania.

SPECIFICATIONS (DIN 45 500)

■ AMPLIFIER SECTION

1 kHz continuous power output both channels driven	2×85 W (4Ω)
20 Hz~20 kHz continuous power output both channels driven	2×45 W (8Ω)
Total harmonic distortion	
rated power at 20 Hz~20 kHz	0.003% (8Ω)
rated power at 1 kHz	0.005% (4Ω)
	0.0009% (8Ω)
half power at 20 Hz~20 kHz	0.003% (8Ω)
half power at 1 kHz	0.002% (4Ω)
	0.0008% (8Ω)
Intermodulation distortion	
rated power at 250 Hz: 8 kHz=4:1, 8Ω	0.007%
rated power at 60 Hz: 7 kHz=4:1, SMPTE, 8Ω	0.007%
Power bandwidth	
both channels driven, -3 dB	5 Hz~60 kHz (4Ω, 0.08%) 5 Hz~65 kHz (8Ω, 0.05%)
Residual hum and noise	0.8 mV
Damping factor	30 (4Ω), 60 (8Ω)
Input sensitivity and impedance	
PHONO	2.5 mV/47 kΩ
TUNER, CD, AUX, TAPE 1/DA TAPE, TAPE 2/EXT	150 mV/22 kΩ
PHONO maximum input voltage (1 kHz, RMS)	160 mV
S/N	
rated power (4Ω)	
PHONO	76 dB (81 dB: IHF, A)
TUNER, CD, AUX, TAPE 1/DA TAPE, TAPE 2/EXT	91 dB (100 dB: IHF, A)
Frequency response	
PHONO	RIAA standard curve ±0.8 dB (30 Hz~15 kHz)
TUNER, CD, AUX, TAPE 1/DA TAPE, TAPE 2/EXT	5 Hz~120 kHz (-3 dB) +0, -0.2 dB (20 Hz~20 kHz)

Tone controls

BASS 50 Hz, +10 dB~-10 dB

TREBLE 20 kHz, +10 dB~-10 dB

Loudness control (volume at -30 dB) 50 Hz, +9 dB

Output voltage

TAPE 1, 2 REC OUT 150 mV

Channel balance, AUX 250 Hz~6,300 Hz ±1 dB

Channel separation, AUX 1 kHz 60 dB

Headphones output level and impedance 450 mV/330Ω

Load impedance

MAIN or REMOTE 4Ω~16Ω

MAIN and REMOTE 8Ω~16Ω

■ GENERAL

Power consumption 420 W

Power supply

For United Kingdom and Australia AC 50 Hz/60 Hz,
240 V

For continental Europe AC 50 Hz/60 Hz, 220 V

For others AC 50 Hz/60 Hz,
110 V/127 V/220 V/240 V

Dimensions (W×H×D)

430 × 104 × 290 mm
(16-15/16" × 4-3/32" × 11-7/16")

Weight

6.7 kg (14.8 lb.)

Notes:

- Specifications are subject to change without notice.
Weight and dimensions are approximate.
- Total harmonic distortion is measured by the digital
spectrum analyzer (H P 3045 system).

Technics



Matsushita Electric Trading Co., Ltd.
P.O. Box 288, Central Osaka Japan

CONTENTS

LOCATION OF CONTROLS	2
PROTECTION CIRCUITRY	3
BEFORE REPAIR AND ADJUSTMENT	3
DISASSEMBLY INSTRUCTIONS	4, 5
MEASUREMENTS AND ADJUSTMENTS	6

PRINTED CIRCUIT BOARDS AND WIRING CONNECTION DIAGRAM	7 ~ 10
SCHEMATIC DIAGRAM	11 ~ 15
BLOCK DIAGRAM	16, 17
REPLACEMENT PARTS LIST	18 ~ 20
EXPLODED VIEW	21, 22

LOCATION OF CONTROLS

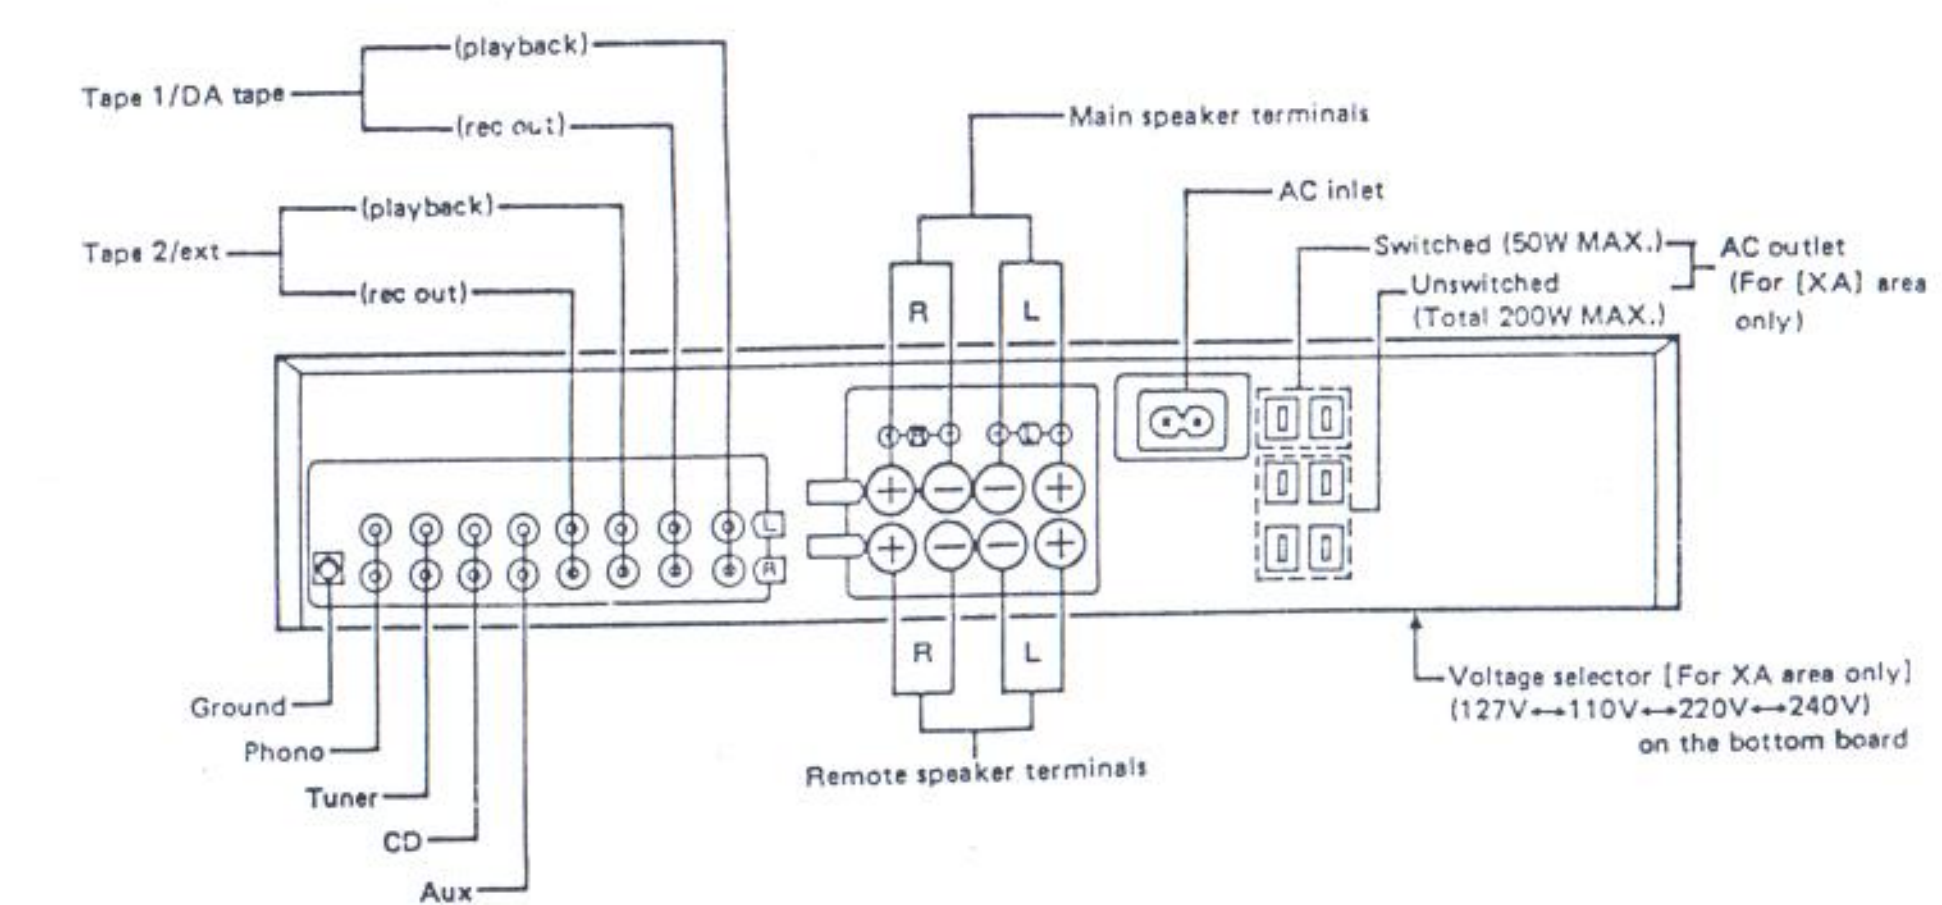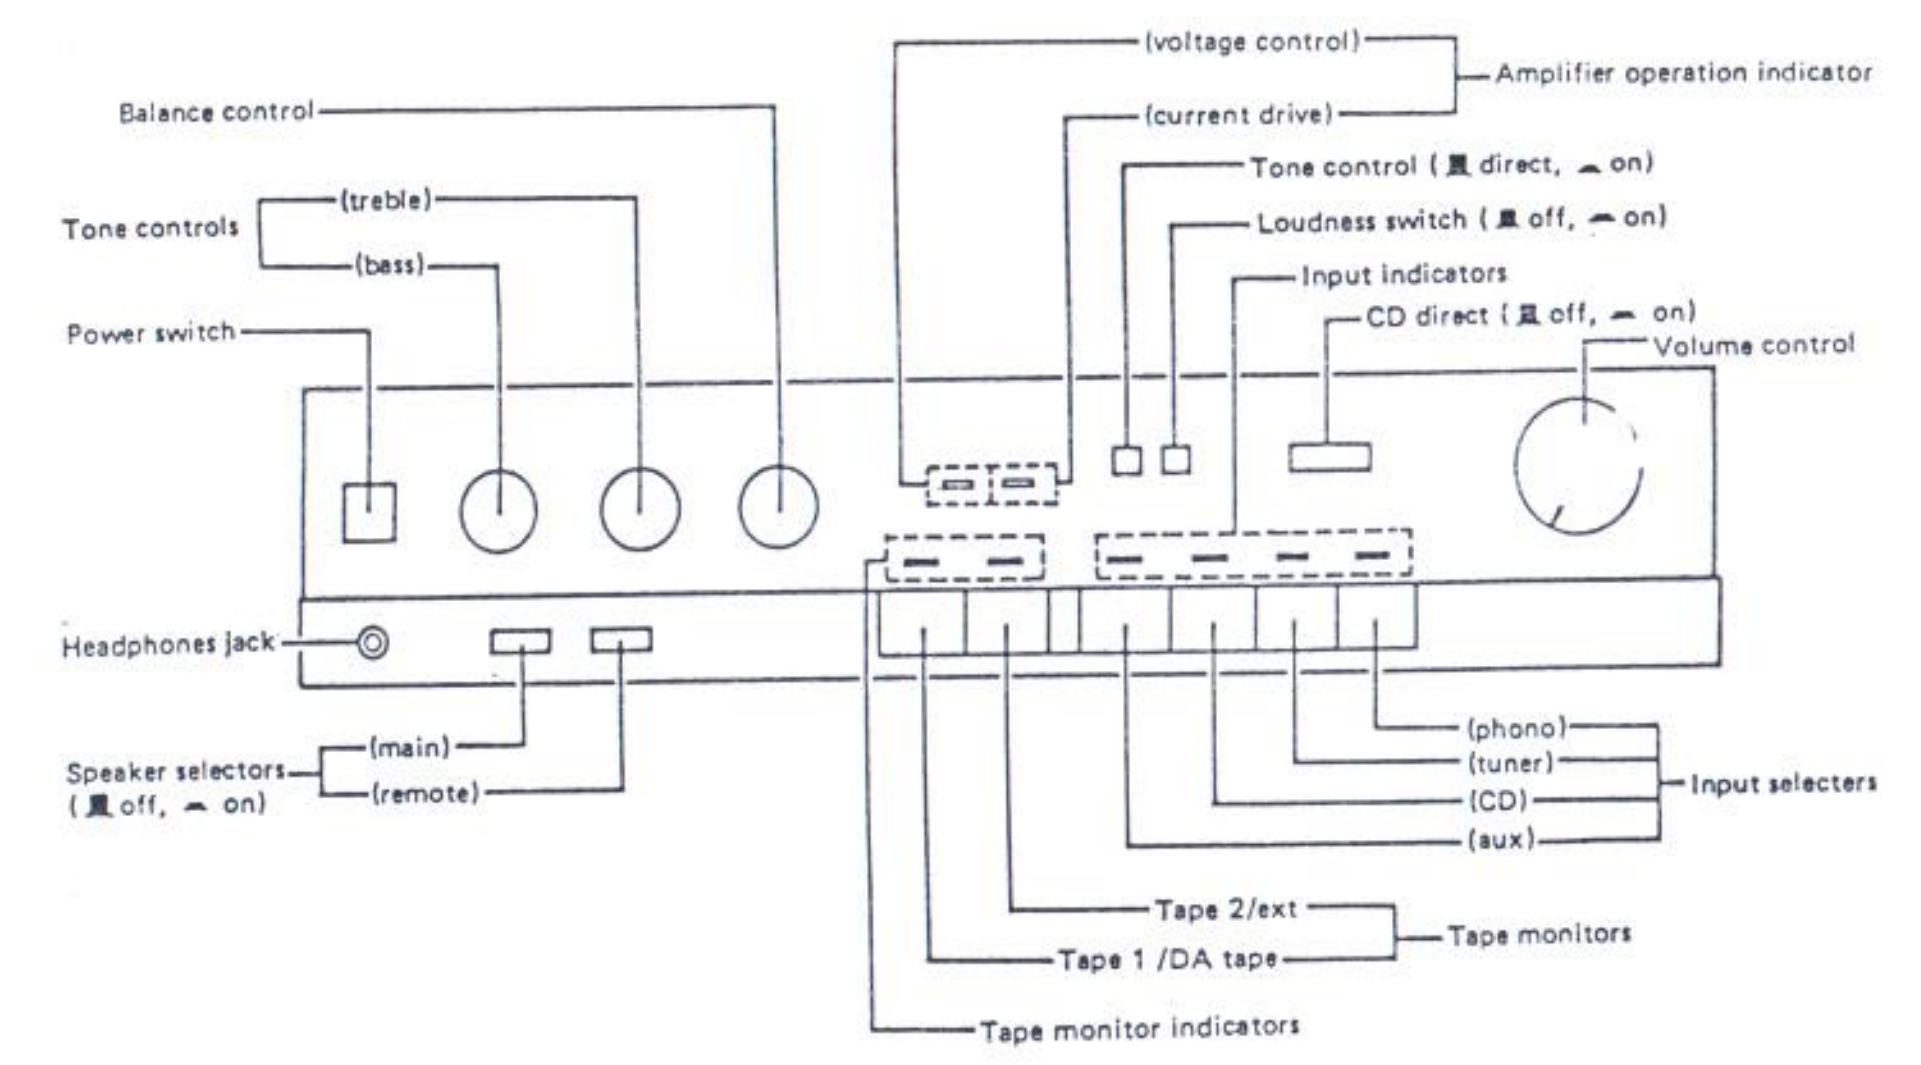

- The power supply for this unit varies depending upon the areas. Also, the parts used for power supply are different. So, refer to the circuit diagram and replacement parts list.
- [XA] area is provided with voltage selector and AC outlets.
- 240V (50/60Hz) for Australia and United Kingdom.
- 220V (50/60Hz) for Continental Europe.
- 110V/127V/220V/240V (50/60Hz) for other [XA] area.
- Phono input capacitance is about 100pF.

Suggestions

- If noise is very annoying while listening to an FM or AM broadcast, switch OFF the video disc player, compact-disc player and turntable.
- Switch OFF the video disc player power if noise is excessive while listening to an audio tape, compact disc or regular phono disc.

Notes:

- To record sounds from a compact disc, press the input selector marked "CD". The compact-disc-direct switch is for listening only; it cannot be used to select the compact disc as a recording source.
- Do not press the left tape-monitor selector to the "tape 1/DA tape" position while two tape decks are being used for recording or while tape deck 2 is being used for recording. This will cause interruptions in the sound and change the recorded signal.

PROTECTION CIRCUITRY

The protection circuitry may have operated if either of the following conditions is noticed:

- No sound is heard when the power is switched ON.
- Sound stops during a performance.

The function of this circuitry is to prevent circuitry damage if, for example, the positive and negative speaker connection wires are "shorted", or if speaker systems with an impedance less than the indicated rated impedance of this unit are used.

If this occurs, follow the procedure outlined below:

1. Switch OFF the power.
2. Determine the cause of the problem and correct it.
3. Switch ON the power once again.

Note:

When the protection circuitry functions, the unit will not operate unless the power is first switched OFF and then ON again.

BEFORE REPAIR AND ADJUSTMENT

- (1) Turn off the power supply. Using a 10Ω, 5W resistor, shortcircuit both ends of power supply capacitors (C503, C504, 6800μF) in order to discharge the voltage.
- (2) Before turning the power supply on, after completion of repair, slowly apply the primary voltage by using a power supply voltage controller to make sure that the consumed current at 50/60 Hz in NO SIGNAL mode should be shown below with respect to supply voltage 110V/127V/220V/240V.




Power supply voltage	AC110V	AC127V	AC220V	AC240V
Consumed current 50/60Hz	260 ~ 380mA	230 ~ 350mA	110 ~ 230mA	80 ~ 200mA

DISASSEMBLY INSTRUCTIONS


"ATTENTION SERVICER"
SOME CHASSIS COMPONENTS MAY HAVE SHARP EDGES.
BE CAREFUL WHEN DISASSEMBLING AND SERVICING.

Ref. No. 1	How to remove the cabinet
Procedure 1	Remove the 5 screws.



Ref. No. 2	How to remove the front panel
Procedure 1 → 2	

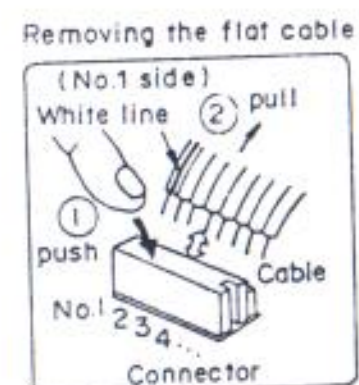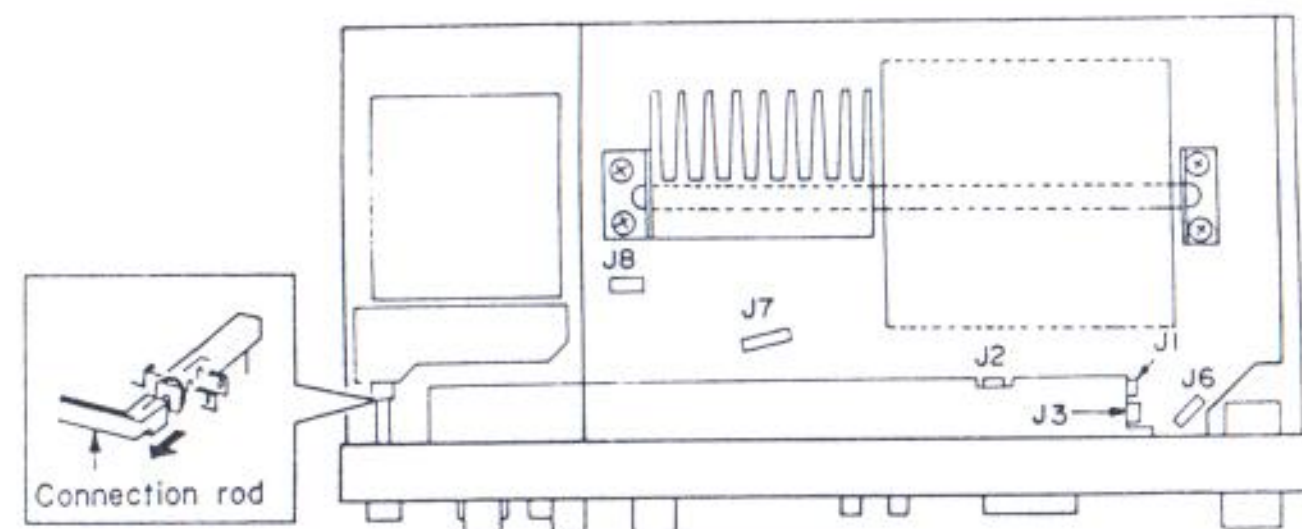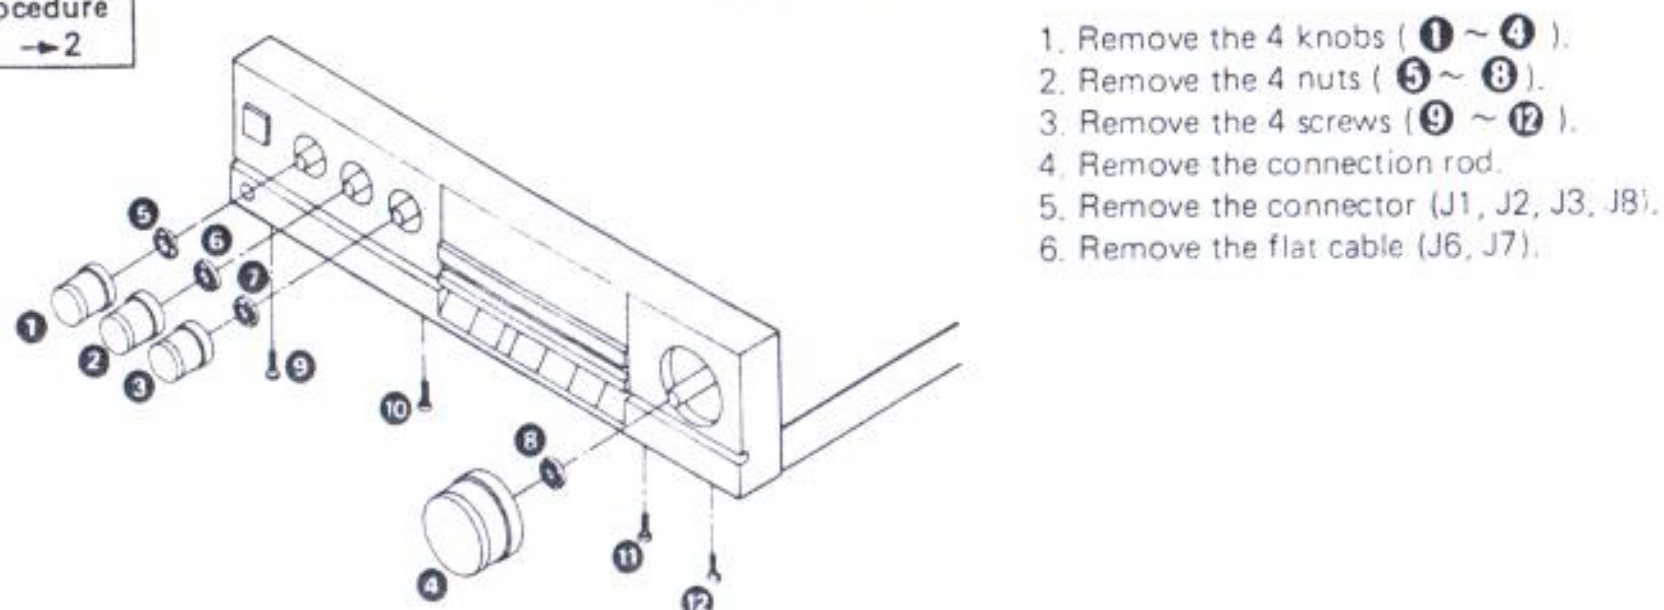


Ref. No. 3	How to remove the P.C.B.
Procedure 1 → 2 → 3	- Remove the 2 screws (1, 2). - Remove the tone control and volume P.C.B. - Remove the 3 screws (3 ~ 5). - Remove the LED P.C.B. - Remove the 1 screw (6). - Push the 2 tabs (7, 8). - Remove the speakers/headphones P.C.B.

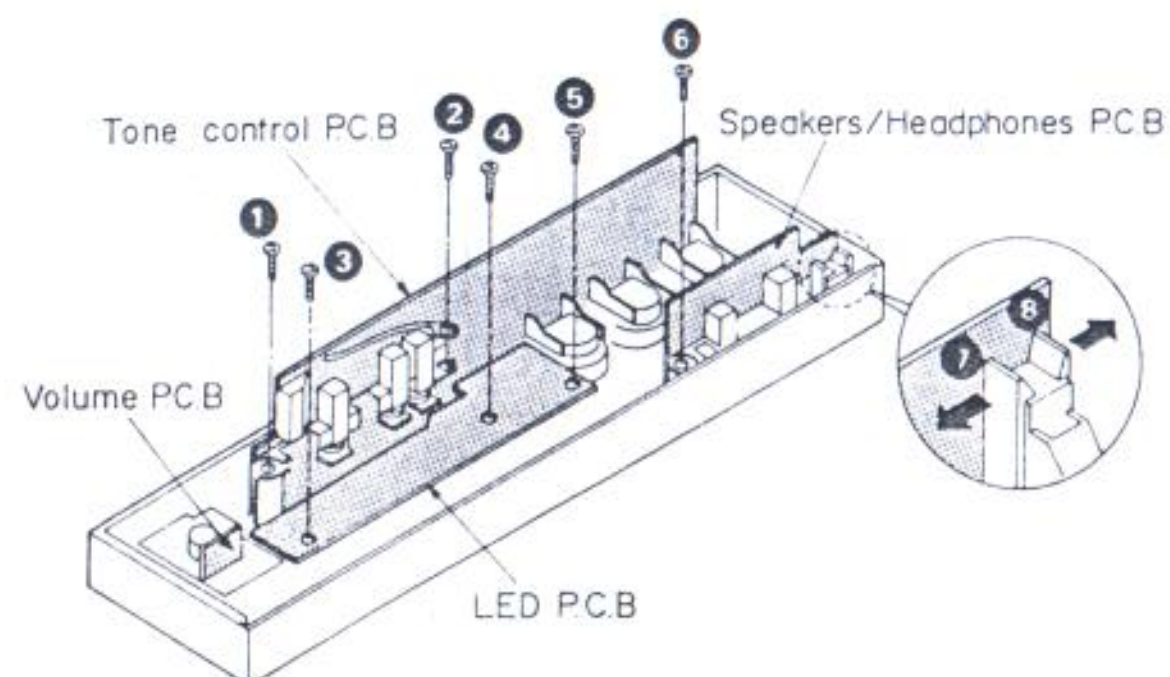

Ref. No. 4	How to remove the main P.C.B.
Procedure 1 → 4	- Remove the 13 screws (1 ~ 13). - Remove the connection rod. - Remove the main P.C.B.

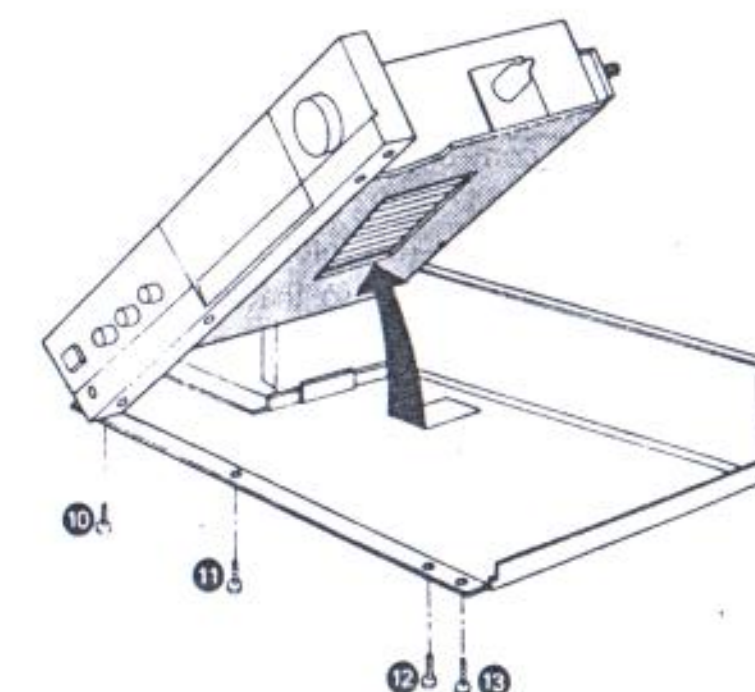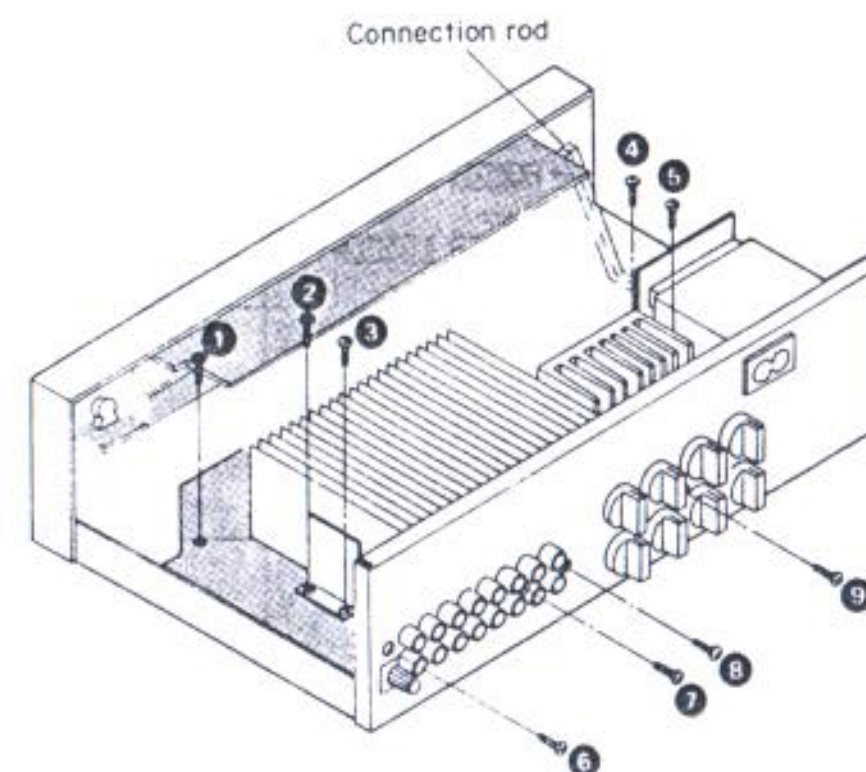

Ref. No. 5	How to remove the power IC.
Procedure 1 → 4 → 5	

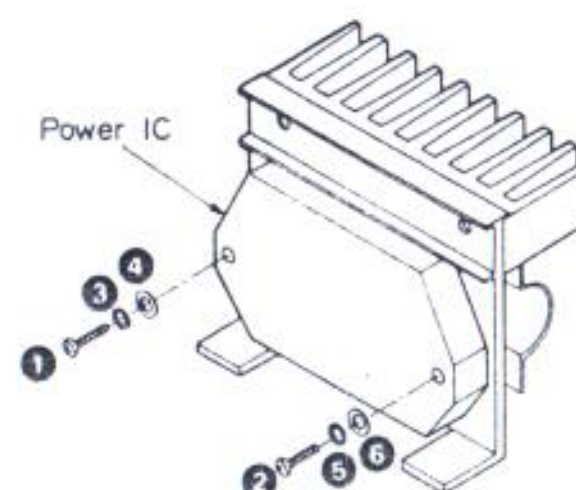

- Unsolder the power IC.
- Remove the 2 screws (1, 2).
- Remove the 4 washer (3 ~ 6).

• When mounting the power IC, apply silicon thermal compound (SZZ0L15 or equivalent) to the rear of the power IC.


MEASUREMENTS AND ADJUSTMENTS

Control positions and equipment used.



- Volume knob 0 (Minimum)
- Main speaker selector off
- Remote speaker selector off
- DC electronic voltmeter (EVM)

IDLING (ICQ) ADJUSTMENT






1. Test equipment connection is shown in figure. Connect the DC EVM on both channels.
2. Turn the ICQ control volume (VR301, VR302) counter-clockwise.
3. Turn ON the set when it is cold, and 15 sec. later, adjust VR301 and VR302 so that the voltage is 30mV. Also, check that the voltage is 18 – 47mV (standard: 44mV) after lapse of 10 – 15 minutes. (Below 50mV after lapse of 60 min.).

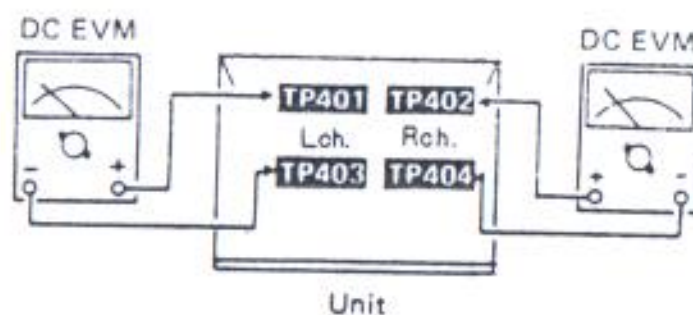

• Adjustment points

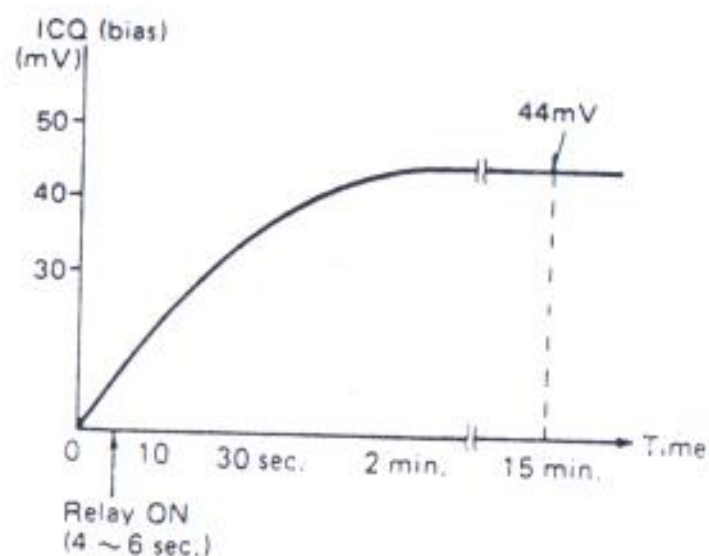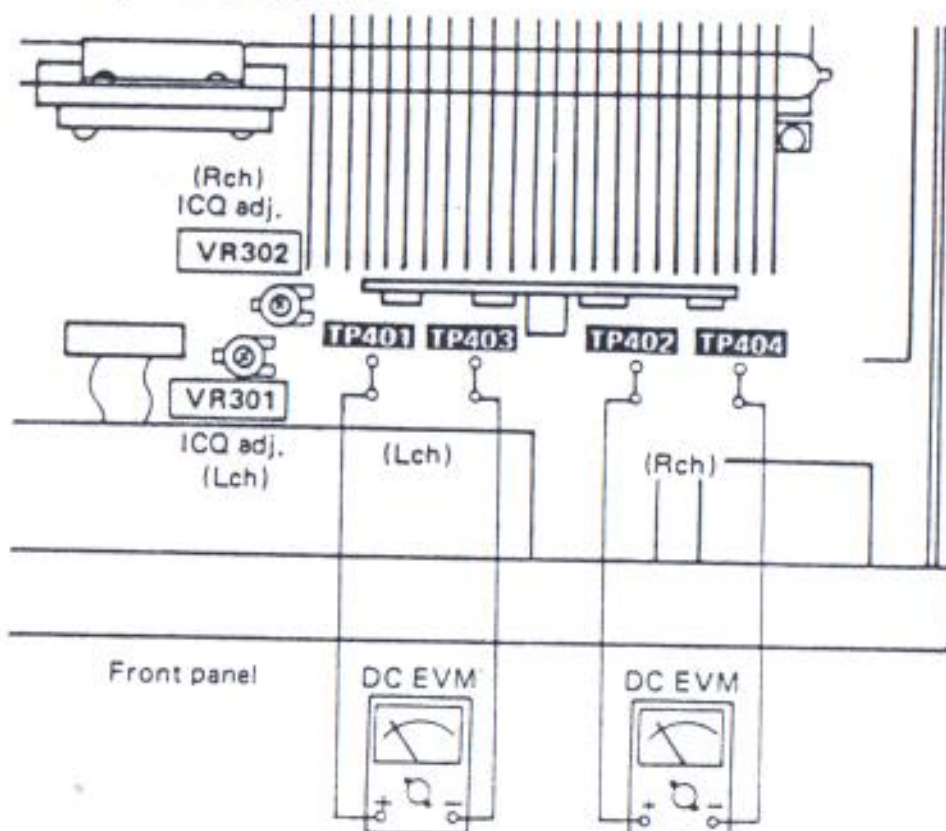

• Terminal guide of IC, transistor and diodes

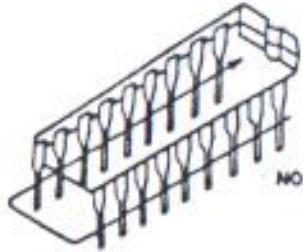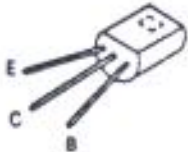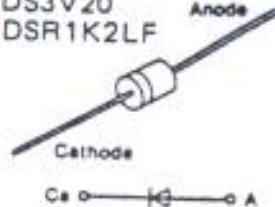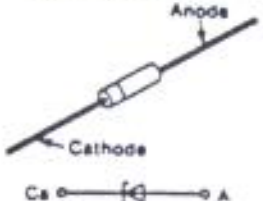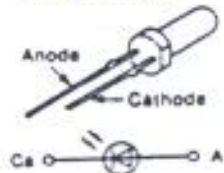 NO.1 <table border="1" data-bbox="449 2106 780 2237"><tr><td>SVINJM2043DD</td><td>8pin</td></tr><tr><td>μPC4570C</td><td>8pin</td></tr><tr><td>AN7062N</td><td>18pin</td></tr></table>	SVINJM2043DD	8pin	μPC4570C	8pin	AN7062N	18pin	SVI4004 24pin 	AN7073 9pin  No.1	2SA1123, 2SA992 2SC1683, 2SC2631 
SVINJM2043DD	8pin								
μPC4570C	8pin								
AN7062N	18pin								
2SA1309 2SC3311 	2SA1306 2SC3298 	MA165, MA162 MA29WA SVDS3V20 SVDSR1K2LF 	MA4062M MA2150B 	LN021315P LN014314PH1 LN064316P 					

REPLACEMENT PARTS LIST

Notes: * Important safety notice:

Components identified by Δ mark have special characteristics important for safety. When replacing any of these components use only manufacturer's specified parts.

* Bracketed indications in Ref. No. columns specify the area.

Parts without these indications can be used for all areas.

Numbering System of Resistor

Example

ERD	25	F	J	102
Type	Wattage	Shape	Tolerance	Value
ERX	2	AN	J	471
Type	Wattage	Shape	Tolerance	Value
				47×10^1 (ohm)

Numbering System of Capacitor

Example

ECKD	1H	102	Z	F
Type	Voltage	Value	Tolerance	Peculiarity
ECEA	50		M	330
Type	Voltage		Peculiarity	Value
				$(33 \times 10^0 \text{ microfarad})$

Resistor Type	Wattage	Tolerance
ERD : Carbon	10 : 1/8W	J : $\pm 5\%$
ERG : Metal Oxide	12 : 1/2W	F : $\pm 1\%$
ERX : Metal Film	25 : 1/4W	G : $\pm 2\%$
ERQ : Fuse Type Metal	1A : 1W	K : $\pm 10\%$
ERD [] L : Carbon (chip)	18 : 1/8W	
ERO [] K : Metal Film (chip)	S2 : 1/4W	
ERC : Solid	S1 : 1/2W	
	2F : 1/4W	
	50 : 1/2W	
	2A : 2W	

Capacitor Type	Voltage	Tolerance
ECE : Electrolytic	0J : 6.3V	C : $\pm 0.25\text{pF}$
ECCD : Ceramic	1A : 10V	J : $\pm 5\%$
ECKD : Ceramic	1C : 16V	K : $\pm 10\%$
ECQM : Polyester	1E : 25V	Z : $\pm 80\%$
	1H : 50V	-20%
ECQP : Polypropylene	1V : 35V	P : $\pm 100\%$
	50 : 50V	-0%
ECG : Ceramic	05 : 50V	M : $\pm 20\%$
ECEAD [] N : Non Polar	2H : 500V	
	2A : 100V	D : $\pm 0.5\text{pF}$
QCU [] : Ceramic (Chip Type)	1 : 100V	G : $\pm 2\%$
ECUX : Ceramic (Chip Type)	KC : 400V AC	
ECF : Semiconductor	KC : 125VAC (UL)	
	1J : 63V	
EECW : Liquid electrolyte double layer capacitor		

Ref. No.	Part No.	Part Code	Ref. No.	Part No.	Part Code	Ref. No.	Part No.	Part Code
RESISTORS			R401, R402	FSR25TJ102T2		C101, C102	ECEA1HPS3R3	001 120 6064 3
R101, R102	ERDS2TJ391	001 152 2360 6	R403, R404	ERDS2TJ823	001 152 2456 9	C103, C104	ECCD1H101K	001 103 0341 2
R103, R104	ERDS2TJ224	001 152 2433 6	R405, R406	ERDS2TJ561	001 152 2364 2	C105	ECKD1H102KB	001 103 1414 8
R105, R106	ERDS2TJ563	001 152 2446 1	R407, R408	FSR25TJ272T2		(EG)		
R107, R108	ERDS2TJ271	001 152 2435 4	R409, R410	FSR25TJ823T2		C106	ECKD1H391KB	001 103 1544 9
R109, R110	ERDS2TJ680	001 152 2448 9	R413, R414	ERD25FJ470	001 152 0309 7	(E, EK, EF)		
R111, R112	ERDS2TJ184	001 152 2588 8	R415, R416	ERDS2TJ182	001 152 2352 6	(EH, EB, EI)		
R113, R114	ERDS2TJ123	001 152 2424 7	R417, R418	ERDS2TJ391	001 152 2360 6	(XL, XA)		
R115, R116	ERDS2TJ563	001 152 2446 1	R419, R420	ERD25FJ332	001 152 0287 6	C106	ECKD1H102KB	001 103 1414 8
R117, R118	ERDS2TJ102	001 152 2346 4	R421, R422	ERDS2TJ332	001 152 2357 1	(EG)		
R201, R202	ERDS2TJ471	001 152 2361 5	R423, R424	ERDS2TJ223	001 152 2432 7	C106	ECKD1H391KB	001 103 1544 9
(EG)			R425, R426	ERDS2TJ223	001 152 2432 7	(E, EK, EF)		
R203, R204	ERDS2TJ102	001 152 2346 4	R427, R428	ERD25FJ101	001 152 0214 3	(EH, EB, EI)		
(EG)			R429, R430	ERD25FJ101	001 152 0214 3	(XL, XA)		
R205, R206	ERDS2TJ102	001 152 2346 4	R431, R432	ERDS2TJ332	001 152 2357 1	C107, C108	ECQM1H223JZ	001 106 0739 9
(EG)			R433, R434	ERD25FJ2R2	001 152 0251 8	C109, C110	ECQM1H632JZ	001 106 0832 3
R207, R208	ERDS2TJ102	001 152 2346 4	R435, R436	ERD25FJ2R2	001 152 0251 8	C111, C112	ECEA1HPS010	001 120 6063 4
(EG)			R437, R438	ERDS2TKF4220	001 151 5327 2	C113, C114	ECEA0JU330	001 120 3162 4
R209, R210	ERDS2TJ102	001 152 2346 4	R441, R442	ERDS2TJ101	001 152 2421 0	C115, C116	ECKD1H103PF	001 103 1449 7
(EG)			R443, R444	ERDS2TJ101	001 152 2421 0	C201, C202	ECCD1H180KC	001 103 0448 2
R211, R212	ERDS2TJ102	001 152 2346 4	R445, R446	ERD2FCG271	001 152 6537 3	(EG)		
(EG)			R447, R448	ERDS2TJ271	001 152 2436 4	C203, C204	ECCD1H181K	001 103 0466 0
R221, R222	ERDS2TJ224	001 152 2433 6	R449, R450	ERD25FJ100	001 152 0213 4	(EG)		
R230, R231	ERDS2TJ331	001 152 2356 2	R451, R452	ERDS1FJ100	001 152 2612 5	C205, C206	ECCD1H101K	001 103 0341 2
R232	ERDS2TJ331	001 152 2356 2	R453, R454	ERDS2TJ153	001 152 2351 7	(EG)		
R233, R234	ERDS2TJ391	001 152 2360 6	R455, R456	ERDS2TJ472	001 152 2362 4	C207, C208	ECCD1H101K	001 103 0341 2
R235	ERDS2TJ331	001 152 2356 2	R457, R458	ERG2SJ331	001 151 3570 9	(EG)		
R301, R302	FSR25TJ272T2		R461, R462	ERDS2TJ562	001 152 2445 2	C209, C210	ECCD1H101K	001 103 0341 2
R303, R304	ERDS2TJ473	001 152 2363 3	R470	ERDS2TJ473	001 152 2363 3	(EG)		
R305, R306	ERDS2TJ183	001 152 2429 2	R481, R482	ERDS2TJ824	001 152 2457 8	C211, C212	ECCD1H101K	001 103 0341 2
R307, R308	FSR25TJ561T2		R501 Δ	ERG2SJ681	001 151 3164 9	(EG)		
R309, R310	ERDS2TJ154	001 152 2427 4	R502 Δ	ERG1ANJ471	001 151 0071 5	C213, C214	ECCD1H101K	001 103 0341 2
R311, R312	ERDS2TJ224	001 152 2433 6	R503, R504	ERDS2TJ473	001 152 2363 3	(EG)		
R313, R314	ERDS2TJ224	001 152 2433 6	R506	ERDS2TJ153	001 152 2361 7	C301, C302	ECQM1H563JZ	001 106 0827 0
R315, R316	FSR25TJ223T2		R507	ERDS2TJ684	001 152 2451 4	C303, C304	ECEA1HPS3R3	001 120 6064 3
R317, R318	FSR25TJ392T2		R508	ERDS2TJ822	001 152 2455 0	C305, C306	ECCD1H101K	001 103 0341 2
R319, R320	ERDS2TJ223	001 152 2432 7	R509	ERG2SJ821	001 151 4940 9	C307, C308	ECCD1H820K	001 103 0703 6
R321, R322	ERDS2TJ392	001 152 2439 0	R510	ERD2FCG470	001 152 0197 7	C309, C310	ECEA1VPS4R7	
R323, R324	ERDS2TJ183	001 152 2429 2	R521, R522 Δ	ERG2SJ561	001 151 3163 0	C311, C312	ECEA1CPS100	001 120 6006 7
R325, R326	ERDS2TJ562	001 152 2445 2	R523, R524 Δ	ERD25FJ1R0	001 152 0208 1	C313, C314	ECCD1H390K	001 103 0597 0
R327, R328	ERDS2TJ102	001 152 2346 4	R531	ERDS2TJ154	001 152 2427 4	C315, C316	ECQM1H153JZ	001 106 0704 0
R329, R330	ERDS2TJ334	001 152 2438 1	CAPACITORS			C317, C318	ECQM1H823JZ	001 106 0852 9
						C319, C320	ECQM1H272JZ	001 106 0753 1


Ref. No.	Part No.	Part Code	Ref. No.	Part No.	Part Code	Ref. No.	Part No.	Part Code
C321, C322	ECQM1H183JZ	001 106 0723 7	C449	ECKD1H331KB	001 103 1523 4	C471, C472	ECKD1H333PF	001 103 1539 6
C323, C324	ECKD1H333PF	001 103 1539 6	(E, EK, EF)			C481, C482	ECKD1H331KB	001 103 1523 4
C351	ECEA0JU101	001 120 2829 8	(EH, EB, EI)			C483, C484	ECEA1HU010	001 120 2842 1
C401, C402	ECEA1HPS3R3	001 120 6064 3	(XL, XA)			C485, C486	ECEA1HU010	001 120 2842 1
C403, C404	ECKD1H271KB	001 103 1515 4	C450	ECKD1H223PF	001 103 1510 9	C501	ECKD2H103PE	001 103 1626 8
C405, C406	ECCD1H820K	001 103 0703 6	(EG)			(E, EK, EF)		
C407, C408	ECKD1H681K	001 103 1580 5	C450	ECKD1H331KB	001 103 1523 4	(EH, EB, EI)		
C409, C410	ECEA1CPS220	001 120 6060 7	(E, EK, EF)			(XL, XA)		
C411, C412	ECCD1H070CC	001 103 0271 9	(EH, EB, EI)			C501	ECQE2104MS	001 106 2217 2
C413, C414	ECKD1H102KB	001 103 1414 8	(XL, XA)			(EG)		
C415, C416	ECCD1H120KC	001 103 0370 7	C451	ECKD1H223PF	001 103 1510 9	C502	ECEA16V1000	001 120 2545 7
C419, C420	ECEA1VU330	001 120 3273 8	(EG)			C503, C504	ECES1HV682UM	
C421, C422	ECKD1H333PF	001 103 1539 6	C451	ECKD1H331KB	001 103 1523 4	C505, C506	ECEA1CU100	001 120 2905 3
C423, C424	ECCD1H680K	001 103 0682 4	(E, EK, EF)			C507	ECEA0JS331	001 120 2975 9
C425, C426	ECCD1H680K	001 103 0682 4	(EH, EB, EI)			C508	ECFTD223KXL	001 108 0342 6
C427, C428	ECCD1H330K	001 103 0567 6	(XL, XA)			C509	ECEA0JU330	001 120 3162 4
C429, C430	ECCD1H560K	001 103 0660 0	C452	ECKD1H223PF	001 103 1510 9	C510	ECEA1CU100	001 120 2905 3
C431, C432	ECQM1H382JZ	001 106 0790 6	(EG)			C511	ECEA1JU220	001 120 3779 7
C433, C434	ECEA1AU101	001 120 2830 5	C452	ECKD1H331KB	001 103 1523 4	C513, C514	ECKD1H223PF	001 103 1510 9
C435, C436	ECEA1AU101	001 120 2830 5	(E, EK, EF)			C601	ECKD1H223PF	001 103 1510 9
C437, C438	ECCD1H330K	001 103 0567 6	(EH, EB, EI)			C1001	ECKDNS103ZV	001 103 6921 4
C439, C440	ECKD1H333PF	001 103 1539 6	(XL, XA)			(EK)		
C441, C442	ECQM1H473JZ	001 106 0810 9	C453, C455	ECEA1HU010	001 120 2842 1	C1001	ECKWNS103ZVS	001 103 9317 6
C443, C444	ECQM1H473JZ	001 106 0810 9	C456	ECEA1HU010	001 120 2842 1	(E, EG, EF)		
C449	ECKD1H223PF	001 103 1510 9	C457	ECKD1H333PF	001 103 1539 6	(EH, EB, EI)		
(EG)			C461, C462	ECKD1H561KB	001 103 1576 1	(XL, XA)		

Ref. No.	Part No.	Part Code	Description	Ref. No.	Part No.	Part Code	Description
INTEGRATED CIRCUITS				L403, L404	SLQY18G-10	001 211 2185 5	CHOCK COIL
IC101	SVINJM20430D	001 060 4244 2	I.C., EQUALIZER	L405, L406	SLQY07G-40	001 211 2149 9	CHOKE COIL
IC301	SVIUPC4570C	001 060 8992 7	I.C., EQUALIZER, TONE AMP	(EG)			
IC401	AN7062N	001 060 8240 0	I.C., AMP	L407, L408	SLQY07G-40	001 211 2149 9	CHOKE COIL
IC402	SVI4003	001 061 0887 4	I.C., POWER AMP	(EG)			
IC501	AN7073	001 060 8241 9	I.C., PROTECTION	L501	SLQZ650MH49	001 210 7126 1	COIL
TRANSISTORS				(EG)			
Q401, Q402	2SA1123-R	001 030 0242 8	TRANSISTOR	T1	SLT5N464	001 202 9075 3	POWER TRANSFORMER
Q403, Q404	2SC1685-QNC	001 030 2729 2	TRANSISTOR	(E, EG, EF)			
Q405, Q406	2SC3311A-Q	001 030 5279 5	TRANSISTOR	(EH, EB, EI)			
Q407, Q408	2SA1309Q	001 030 4058 0	TRANSISTOR	T1	SLT5N465	001 202 9076 2	POWER TRANSFORMER
Q409, Q410	2SC2631-Q	001 030 2505 6	TRANSISTOR	(EK, XL)			
Q411, Q412	2SA1123R	001 030 0242 8	TRANSISTOR	T1	SLT5N466	001 202 9101 8	POWER TRANSFORMER
Q413, Q414	2SC3298AY	001 030 4986 9	TRANSISTOR	(XA)			
Q415, Q416	2SA1306AY	001 030 4845 1	TRANSISTOR	FUSES			
Q417, Q418	2SC2631-Q	001 030 2505 6	TRANSISTOR	F1	XBA2C16TB0	002 380 1377 1	FUSE, T1.6A250V
Q419, Q420	2SA1123R	001 030 0242 8	TRANSISTOR	(EK)			
Q421, Q422	2SA982E	001 030 0513 4	TRANSISTOR	F1	XBA2C16TR0	002 380 0408 5	FUSE, T1.6A250V
Q501	2SA982E	001 030 0513 4	TRANSISTOR	(E, EG, EF)			
DIODES				(EH, EB, EI)			
D12	MA4033M	001 032 5623 9	DIODE	(XL, XA)			
D401, D402	MA162A	001 032 0493 1	DIODE	F2	XBA2C31TR0	002 380 0415 6	FUSE 250V, T3.15A
D403, D404	MA165	001 032 0494 0	DIODE	(XA)			
D405, D406	MA165	001 032 0494 0	DIODE	SWITCHES			
D407, D408	MA4062-M	001 032 7211 7	DIODE	S1	ESE37263	003 430 2327 2	SWITCH
D409, D410	MA165	001 032 0494 0	DIODE	S1	SSH4102	003 435 5648 1	SWITCH, INPUT
D411, D413	MA29WA	001 032 7250 0	DIODE	S2	SSH2111	003 435 5644 5	SWITCH, INPUT
D414	MA29WA	001 032 7250 0	DIODE	S3, S4	SSH3703	003 435 5647 2	SWITCH, CD
D501, D502	SVDS3V40	001 032 1347 6	RECTIFIER	S5	SSH3703	003 435 5647 2	SWITCH, TONE
D503, D504	SVDS3V40	001 032 1347 6	RECTIFIER	S6-1, S6-2	SSH2112	003 435 5645 4	SWITCH, SPEAKER
D505	SVDSR1K2	001 032 1343 0	DIODE	S8	ESB8215V	003 435 4958 4	PUSH SWITCH
(E, EG, EF)				S701	ESE37263	003 430 2327 2	SWITCH, AC VOLT
(EH, EB, EI)				(XA)			
(XL, XA)				RELAYS			
D505	SVDS2V20	001 032 1343 0	RECTIFIER	LY501	SSY126	003 450 2686 0	RELAY
(EK)				CABINET AND CHASSIS			
D507, D508	MA2150B	001 032 0499 5	DIODE	1	SBC666	016 702 5545 6	BUTTON, POWER
D509, D510	MA165	001 032 0494 0	DIODE	1	SBC666-5	016 702 6679 9	BUTTON, POWER
D513	MA165	001 032 0494 0	DIODE	2	SBN1206	016 700 1846 2	KNOB
VARIABLE RESISTORS				2	SBN1207-1	016 700 1845 3	KNOB
VR201	EWJ0XA090B15	001 174 8555 1	VARIABLE RESISTOR, MAIN	3	SBN1227	016 700 2002 4	KNOB
VR202	EWJ0XAA008G15	001 174 8553 3	VARIABLE RESISTOR, BALANCE	3	SBN1227-1	016 700 2003 3	KNOB
VR203, VR204	EWCEA020C15	001 174 8552 4	VARIABLE RESISTOR, BASS	4	SGWUV45A-KE	016 840 7886 0	FRONT PANEL
VR301, VR302	EYVKGAA008B52	001 180 0496 1	VARIABLE RESISTOR, CONTROL	4	SGWUV45A-SE	016 840 7884 1	FRONT PANEL
THERMISTORS AND VARISTORS				5	SGX7913	016 846 3858 9	ORNAMENT
TH201, TH202	ERTD2WHL104S		THERMISTOR	6	SGL246	016 846 3894 5	ORNAMENT
TH401, TH402	ERTD2WHL104S		THERMISTOR	7	SGXUV45A-KE	016 846 3305 9	ORNAMENT
COILS AND TRANSFORMERS				7	SGXUV45A-SE		ORNAMENT
L401, L402	SLQY07G-40	001 211 2149 9	CHOKE COIL	8	SMC6407-1	016 601 0633 9	SHIELD COVER


Ref. No.	Part No.	Part Code	Description	Ref. No.	Part No.	Part Code	Description
9	Ⓢ	SBC439	016 702 0595 6 BUTTON	35		SJF4818-1	003 410 7347 0 TERMINAL BOARD
9	Ⓚ	SBC439-2	016 702 6011 7 BUTTON	36		SMX477-1	016 600 0501 5 SHIELD SPACER
10		SJJ126B	003 400 5920 7 JACK	(EG)			
11		LN064316P	001 032 8373 6 DIODE, GAASP	37		SJF3057-5N	003 410 6144 3 TERMINAL BOARD
12		LN021315P	001 032 8371 8 DIODE, GAASP	38		SJF3062N	003 410 6082 0 TERMINAL BOARD
13	Ⓢ	SBC719	016 702 6143 6 BUTTON	39		SHR415	016 652 0088 7 LOCK PIN
13	Ⓚ	SBC719-1	016 702 1277 3 BUTTON	40		SNE4021	005 507 0372 5 NUT
14	Ⓚ	SBC820	016 702 6431 1 BUTTON	41		XTBS3+10JFZ1	005 501 3413 1 TAPPING SCREW
14	Ⓢ	SBC820-1	016 702 6432 0 BUTTON	42		XTB3+10GFR	005 501 3126 5 SCREW
15		LN14314PH	001 032 8375 4 DIODE, GAASP	43		XTW3+10T	005 501 0996 9 SCREW
16		SUB253	016 712 0317 0 ROD	44	Ⓢ	SNE2129	005 500 8058 5 SCREW
17		SJT388	003 410 6092 8 LUG TERMINAL	44	Ⓚ	SNE2129-1	005 500 7938 6 SCREW
(E, EG, EK)				45		XTBS3+10JFZ1	005 501 3413 1 TAPPING SCREW
(EF, EH, EB)				46		XTB3+8FFZ	005 501 2531 0 TAPPING SCREW
(EI, XL)				47		XTB3+16J	005 501 2648 8 SCREW
18		SJS305-1	JACK, SOCKET	48		XTBS3+16F1	005 501 2606 8 TAPPING SCREW
(E, EG, EK)				49		XYN3+F14	005 503 0346 7 TAPPING SCREW
(EF, EH, EB)				50		XYN3+F8	005 503 0513 0 SCREW
(EI, XL)				(XA)			
19	Ⓚ	SKC1910K991	016 800 2546 0 CABINET	51		XTW3+8T	005 501 1358 9 SCREW
19	Ⓢ	SKC1910S981	016 800 2548 8 CABINET	52		SXE1159	HEAT SINK
20		SUB254	016 712 0318 9 ROD	54		SHR301	016 645 0044 0 CLAMPER
21		SKL308	016 828 0330 0 FOOT	55		SJS5531	003 400 4285 5 SOCKET 5P
22		SKL309	016 828 0329 3 FOOT	56		SJT3513	003 410 6952 9 POST(5P)
23		SKU11280-3	016 802 1927 5 BOTTOM BOARD	57		SJT30940LX-V	003 410 6150 5 LUG TERMINAL
(XA)				58		SJT783	003 410 6001 7 CONTACT
23		SKU11280-4	016 802 1889 4 BOTTOM BOARD	59		SJS5531	003 400 5924 3 CONNECTOR
(E, EG, EK)				59		SJS5715	003 400 6034 4 SOCKET(7P)
(EF, EH, EB)				60		SJT3321	003 410 5999 8 POST(3P)
(EI, XL)				60		SJT3709	003 403 4232 3 CONNECTOR
24		SHE185	016 918 0330 9 SPACER	PACKINGS			
25		SMX911	016 600 0488 5 SHIELD SPACER	P1	Ⓚ	SPG5955	016 971 5121 5 CARTON BOX
(XA)				(E, EG, EK)			
26		SJS227	016 727 0111 1 SPRING	(EH, EB, EI)			
27		SJT347	003 410 1830 8 FUSE HOLDER	(XL, XA)			
(XA)				P1	Ⓢ	SPG5956	CARTON BOX
28		SJS702-1	JACK, SOCKET	(E, EG, EK)			
(XA)				(EH, EB, EI)			
29		SGP6780-4A	016 840 8021 6 REAR PANEL	(XL, XA)			
(E)				P1		SPG5957	016 971 5143 9 CARTON BOX
29		SGP6780-4B	016 840 7907 1 REAR PANEL	(EF)			
(EG, EF, EH)				P2		SPS4459-3	016 977 3352 0 PAD
(EB, EI)				P3		SPS4460-8	016 977 3353 9 PAD
29		SGP6780-4C	016 840 7868 1 REAR PANEL	P4		SPS4613-1	016 977 2865 4 PAD
(EK)				P5	Ⓚ	SPP723	016 978 0207 5 PROTECTION COVER
29		SGP6780-4D	016 840 7967 8 REAR PANEL	ACCESSORIES			
(XL)				A1	△	SJP9215	003 402 1437 9 AC PLUG ADAPTOR
29		SGP6780-5A	016 840 7832 3 REAR PANEL	(XA)			
(XA)				A2	△	SFDAC05E03	003 490 4809 5 POWER CORD
30		SMX909	016 600 0482 1 SHIELD SPACER	(E, EG, EF)			
31	△	SJS9328B	003 410 6976 1 SOCKET	(EH, EB, EI)			
(XA)				A2	△	SFDAC05G02	003 490 2613 3 POWER CORD
32		SJS9328A	003 410 6975 2 SOCKET COVER	(EK)			
(XA)				A2	△	SJA168-1	003 490 4122 9 POWER CORD
33	△	SJS9231-1B	003 400 7442 8 SOCKET	(XA)			
(E, EG, EK)				A2	△	SJA173	003 490 4161 2 POWER CORD
(EF, EH, EB)				(XL)			
(EI, XA)				A3		SQF12876	016 963 5262 7 INSTRUCTION BOOK
33	△	SJS9234B	003 400 5922 5 AC INLET	(E, EK, EF)			
(XL)				(EH, EB, EI)			
34		SJS9231A	003 410 5984 5 SOCKET COVER	(XL)			
(E, EG, EK)				A3		SQF12877	016 963 5351 7 INSTRUCTION BOOK
(EF, EH, EB)				(EG)			
(EI, XA)				A3		SQF12878	016 963 5287 8 INSTRUCTION BOOK
34		SJS9234A	003 400 5921 6 AC INLET COVER	(XA)			
(XL)							

A PHONO EQUALIZER/POWER AMP/ CURRENT DRIVE AMP/MUTING/ PROTECTION CIRCUIT

IC101
SVINJM2043DD
EQUALIZER AMP.

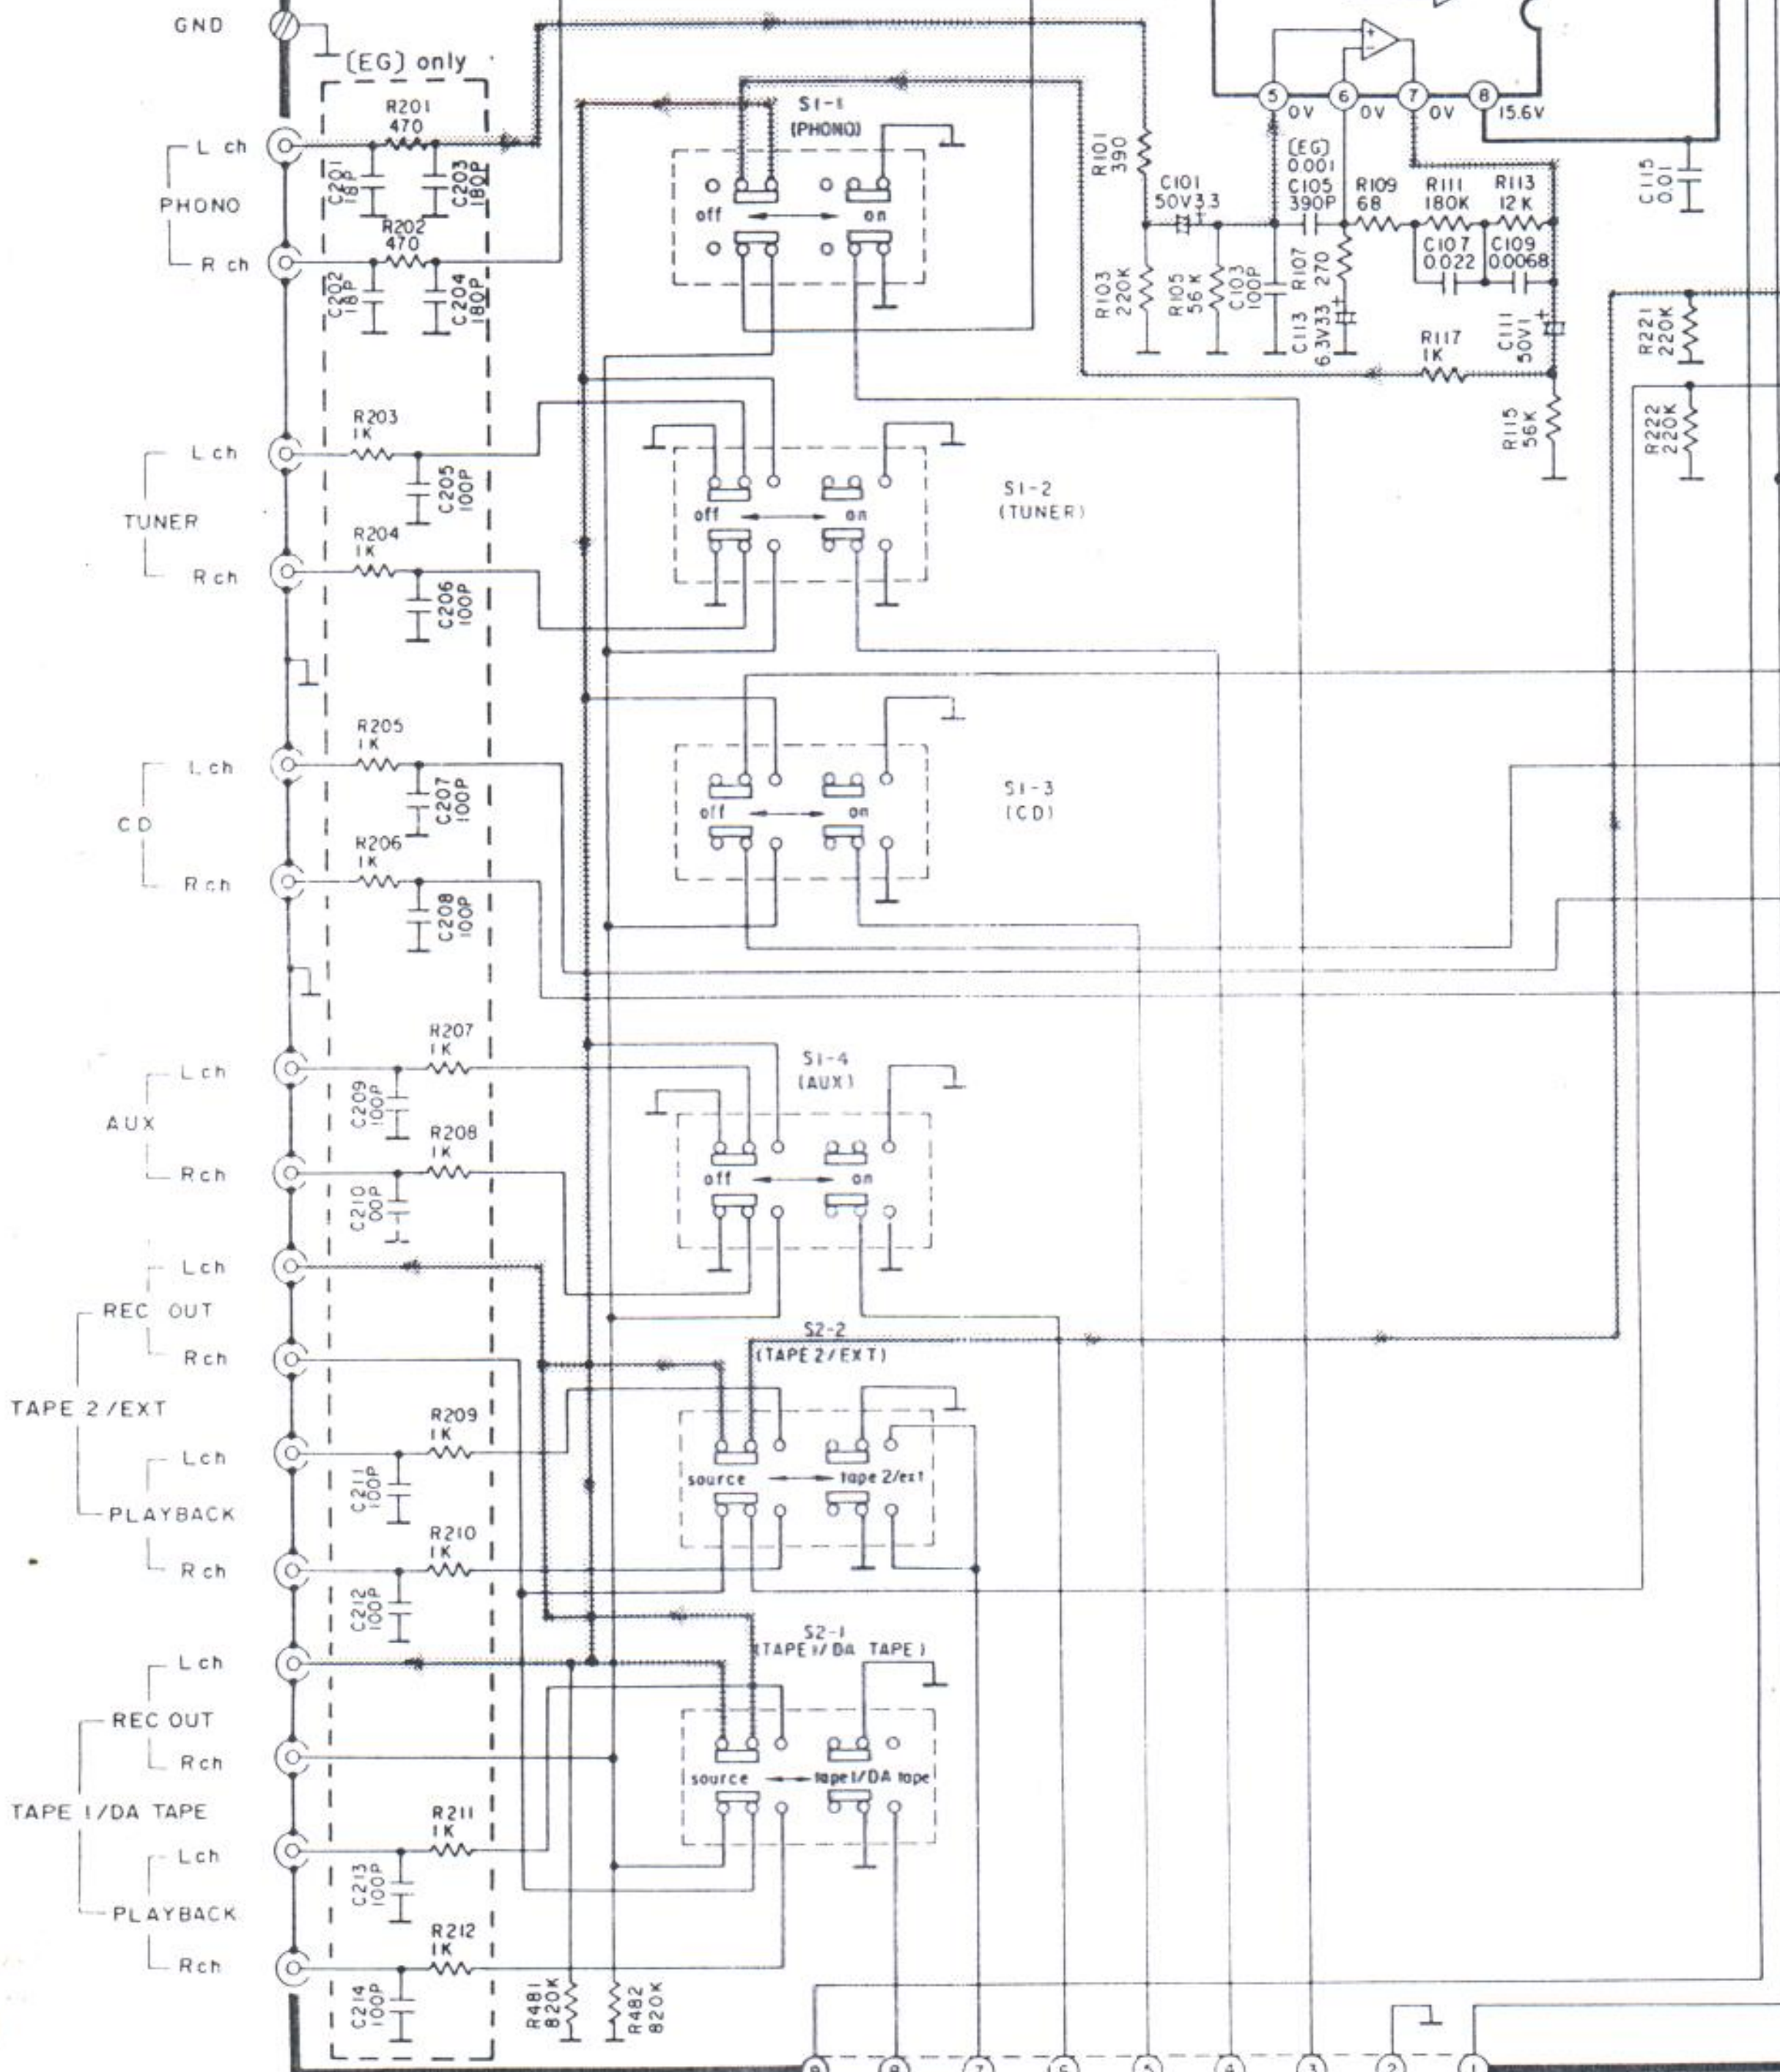


B LED INDICATOR CIRCUIT

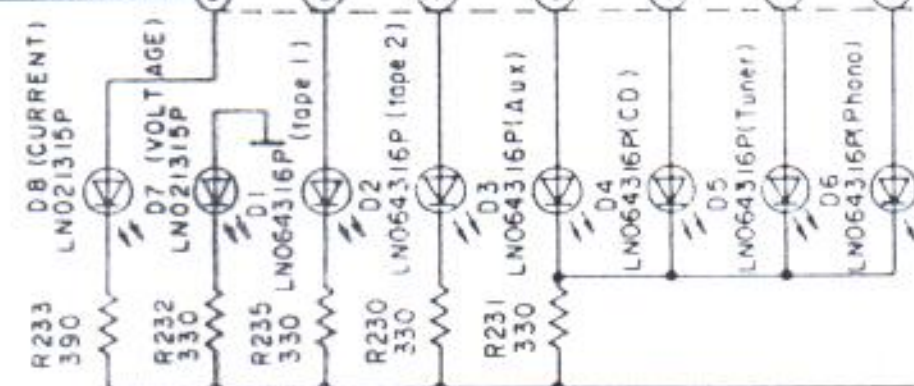

C VOLUME CONTROL

D TONE CONTROL VOLTAGE CONTROL AMP CIRCUIT

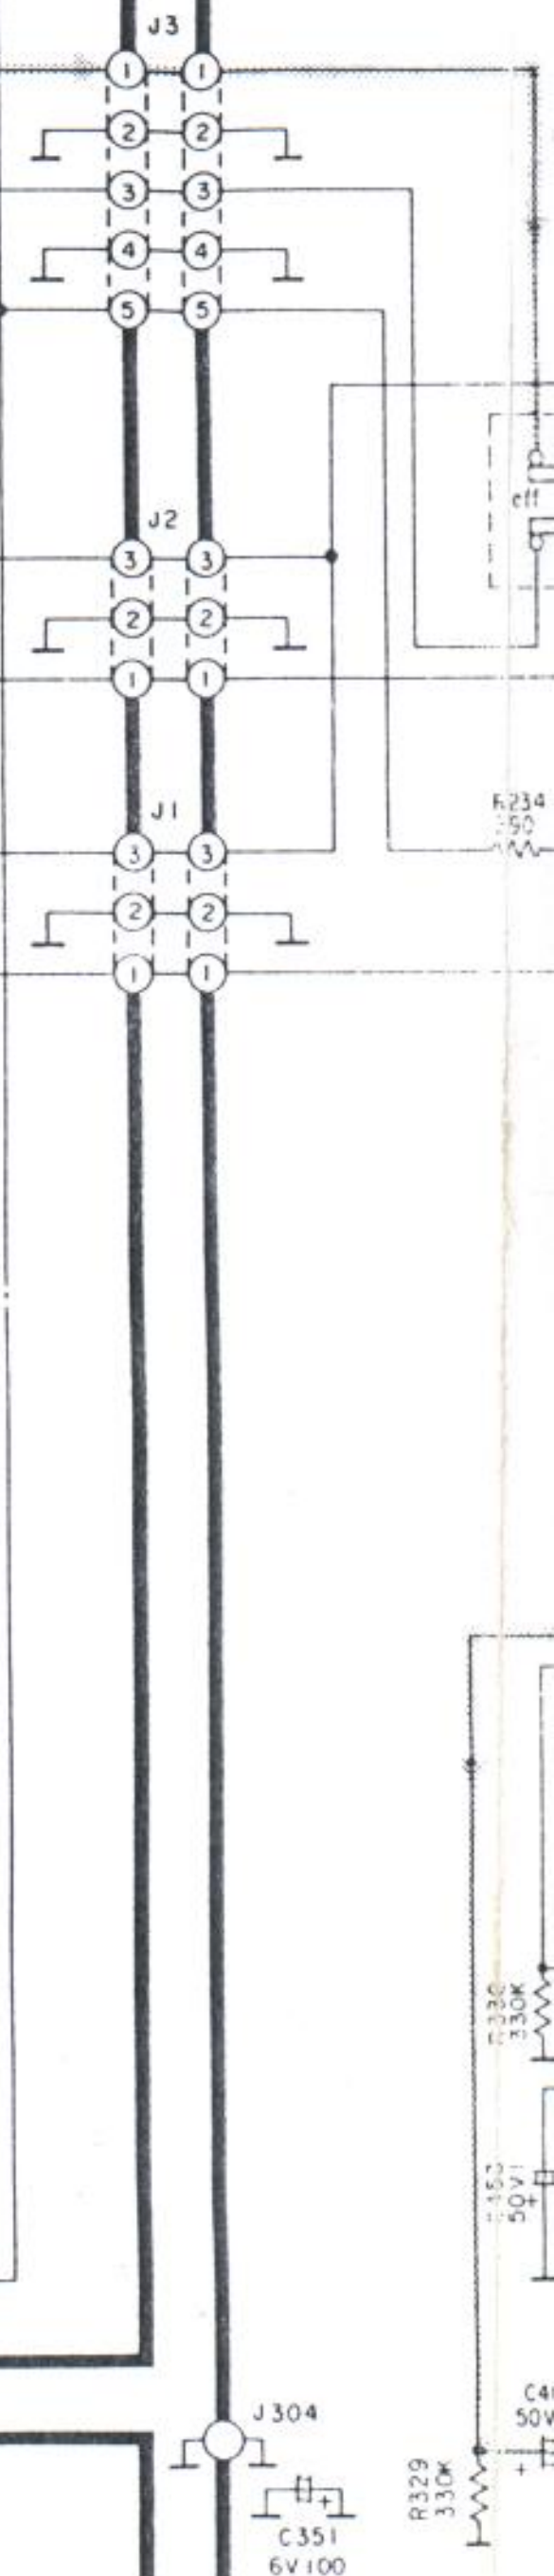

VOLUME CIRCUIT

TONE CONTROL/
VOLTAGE
CONTROL
CIRCUIT

TONE CONTROL

IC401
AN7062N
VOLTAGE AMP.

μPC4570C
TONE AMP


VOLTAGE CONTROL AMP.

BRIDGE NETWORK


VOLT

Q405, 406
2SC3311A
LIMITER


2407,408
2SA1309A
LIMITER

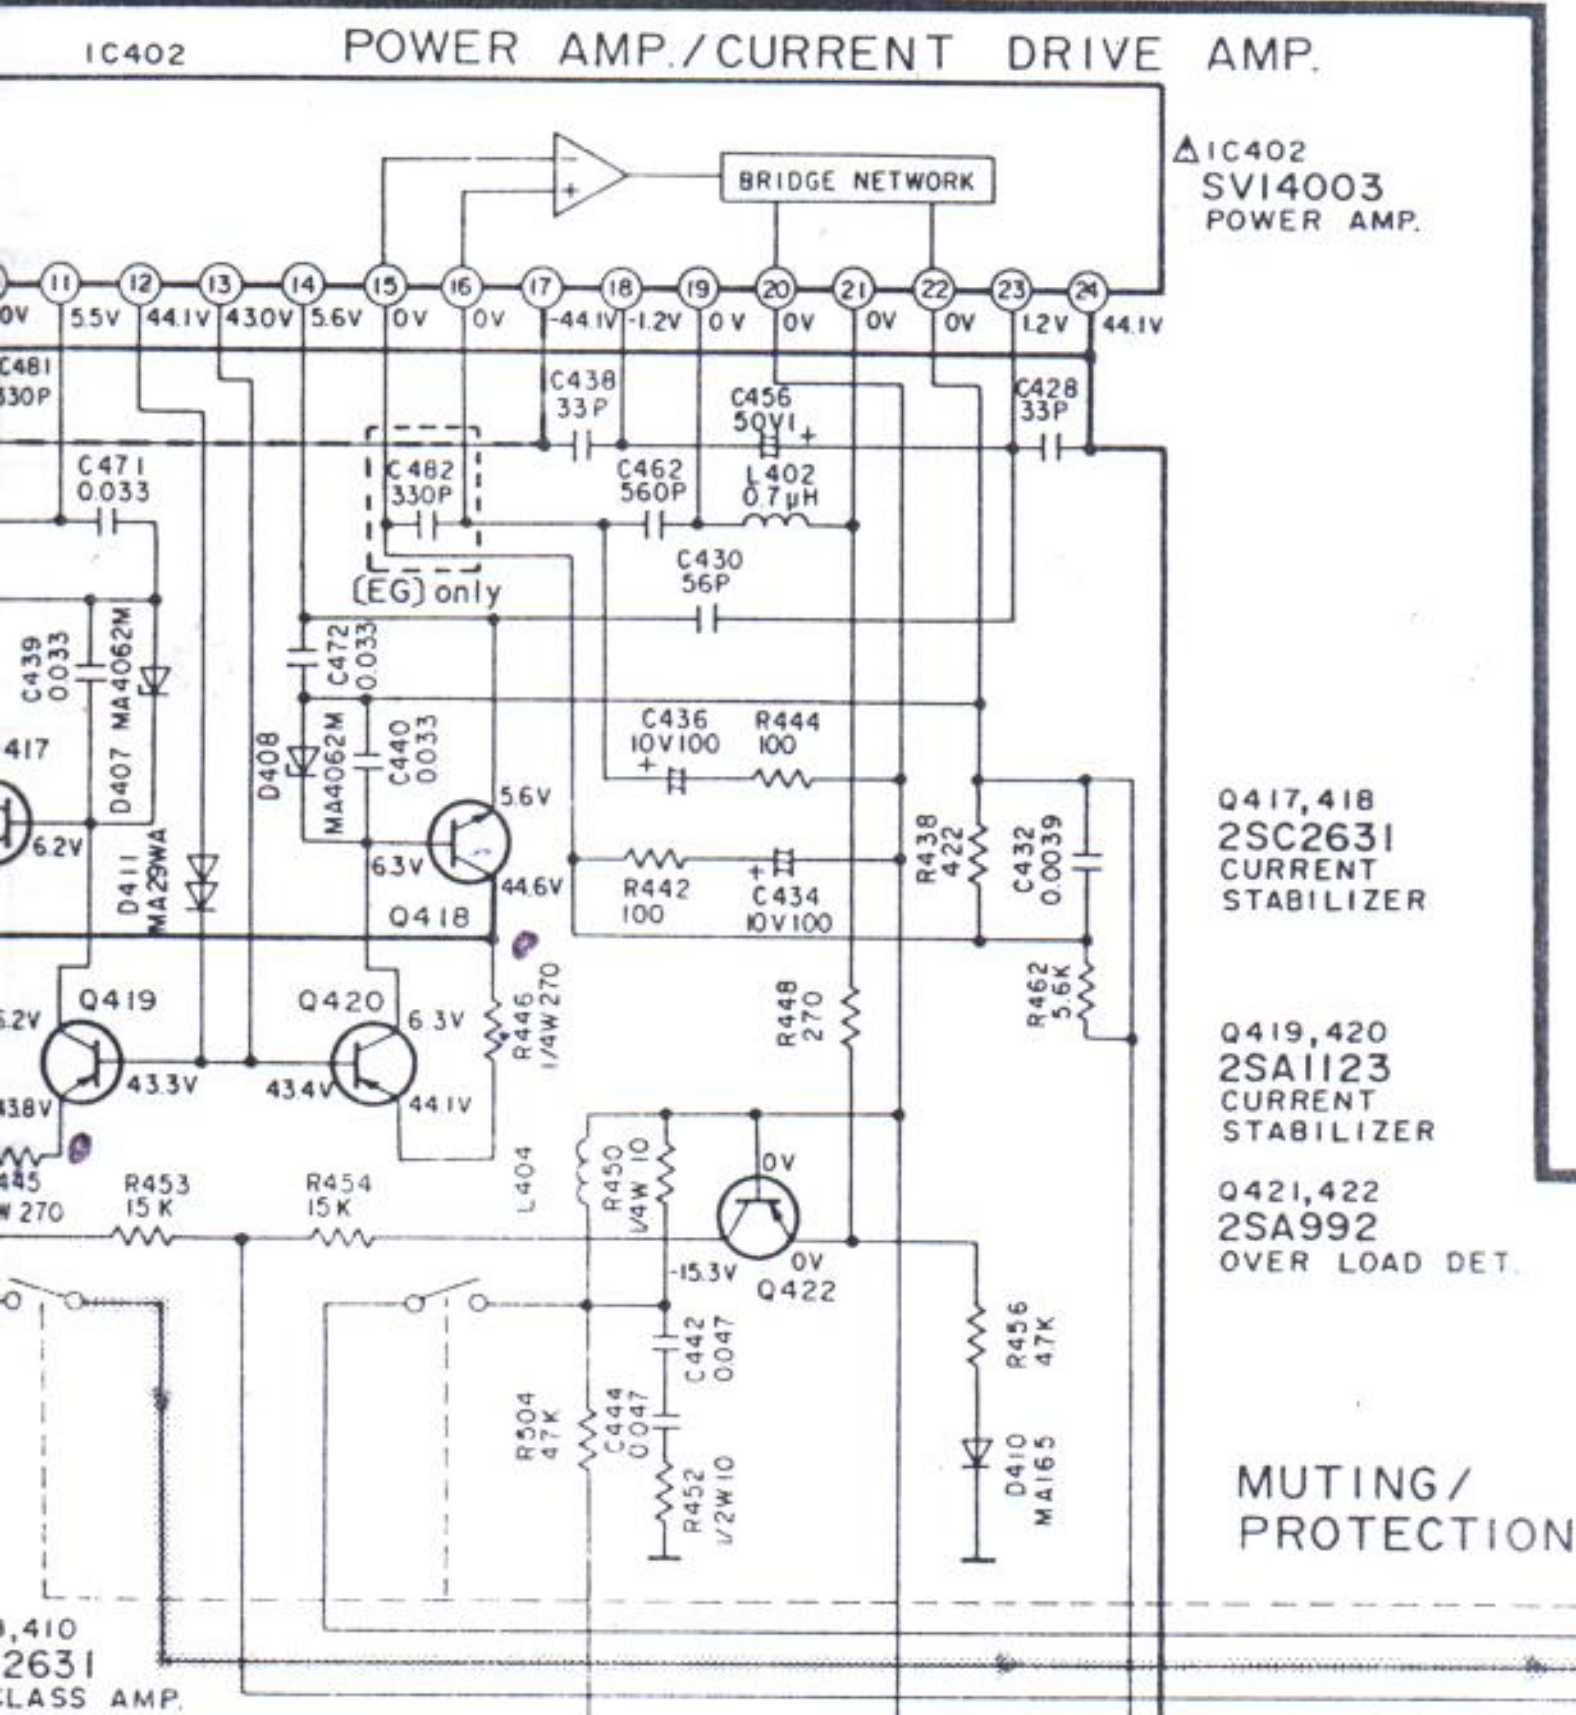

E SPEAKER SELECTOR CIRCUIT

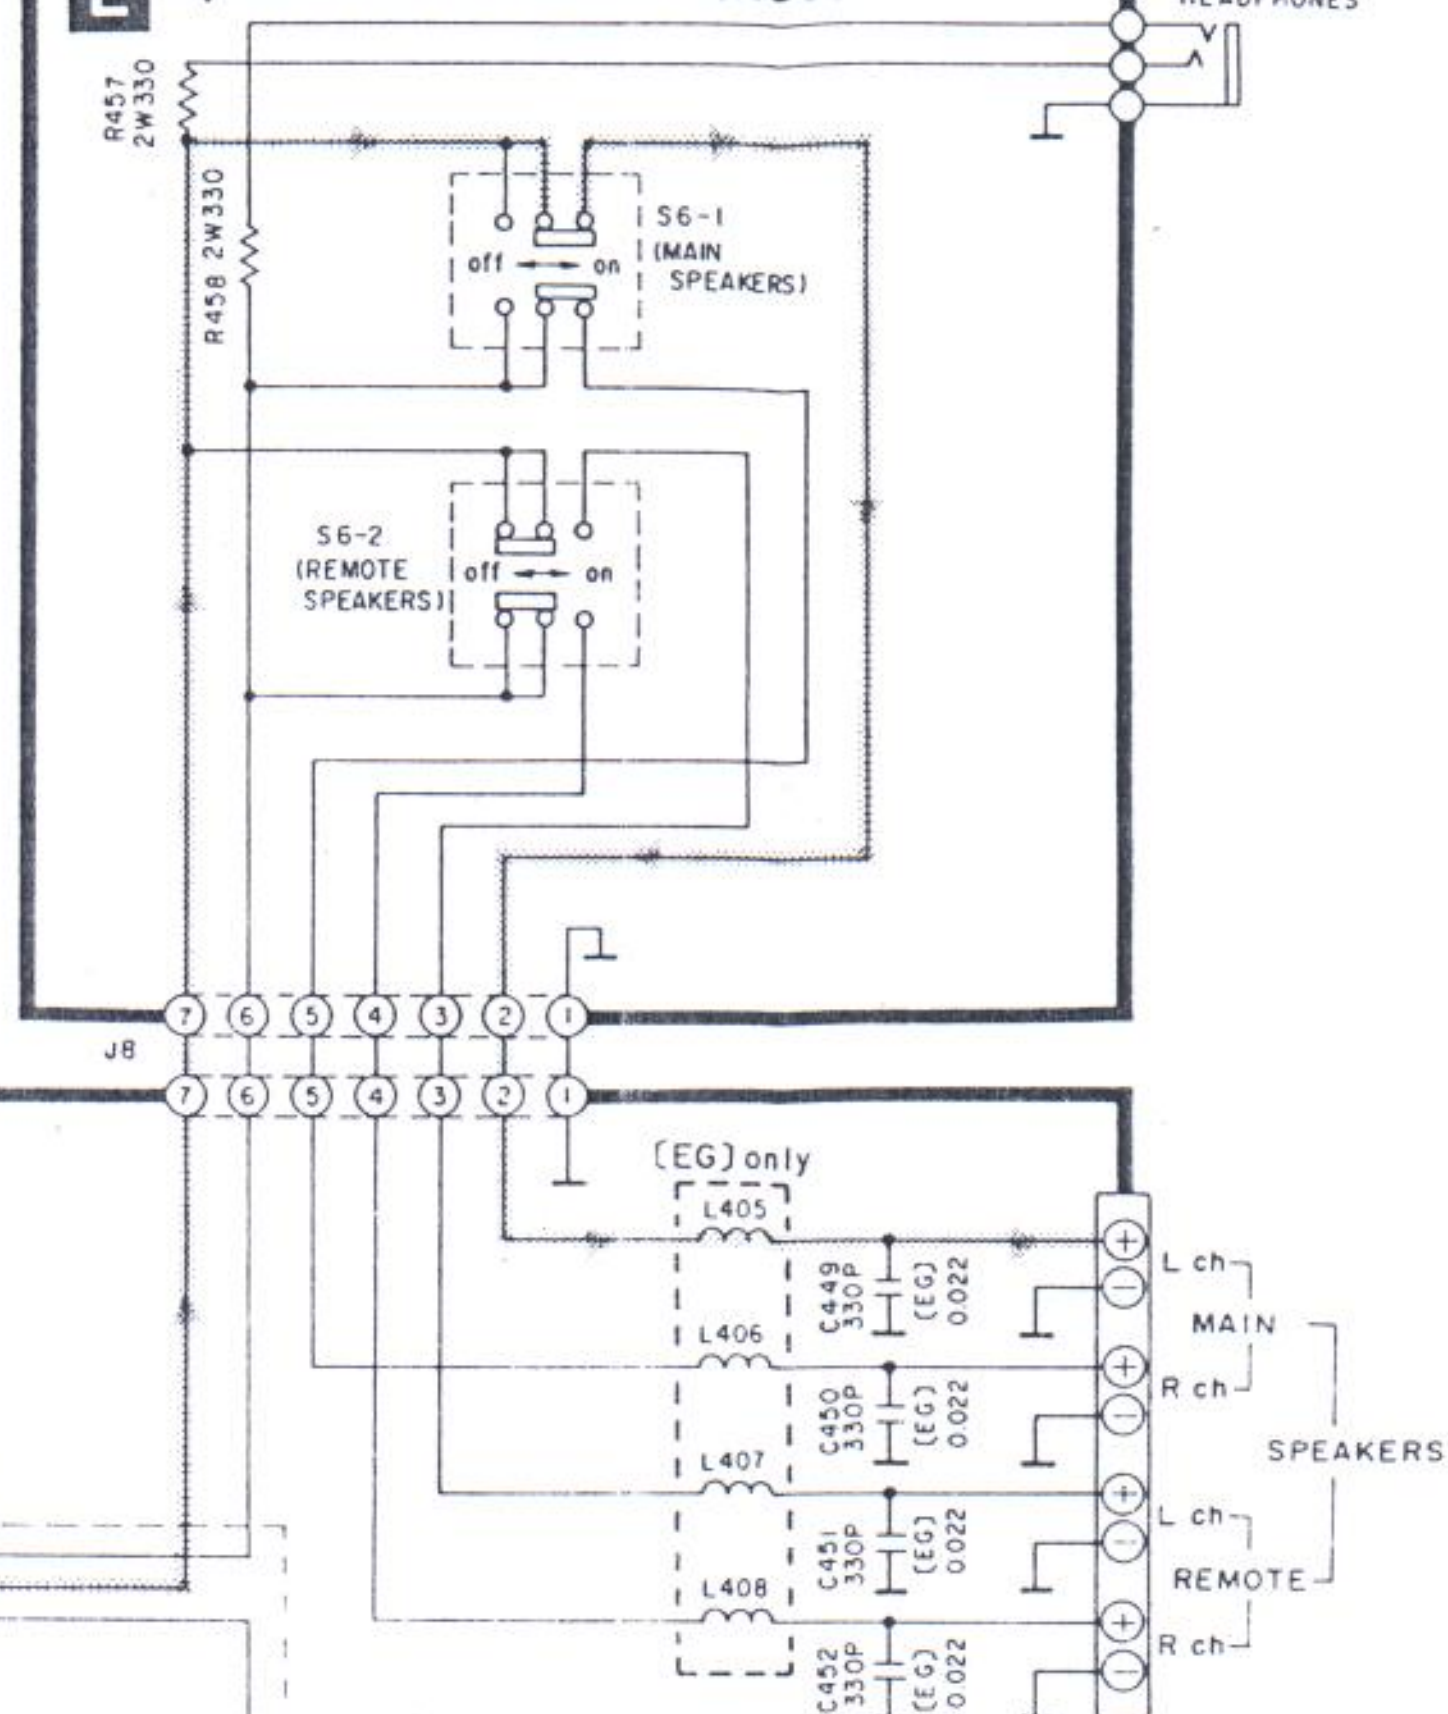


VOLTAGE CONTROL AMP.

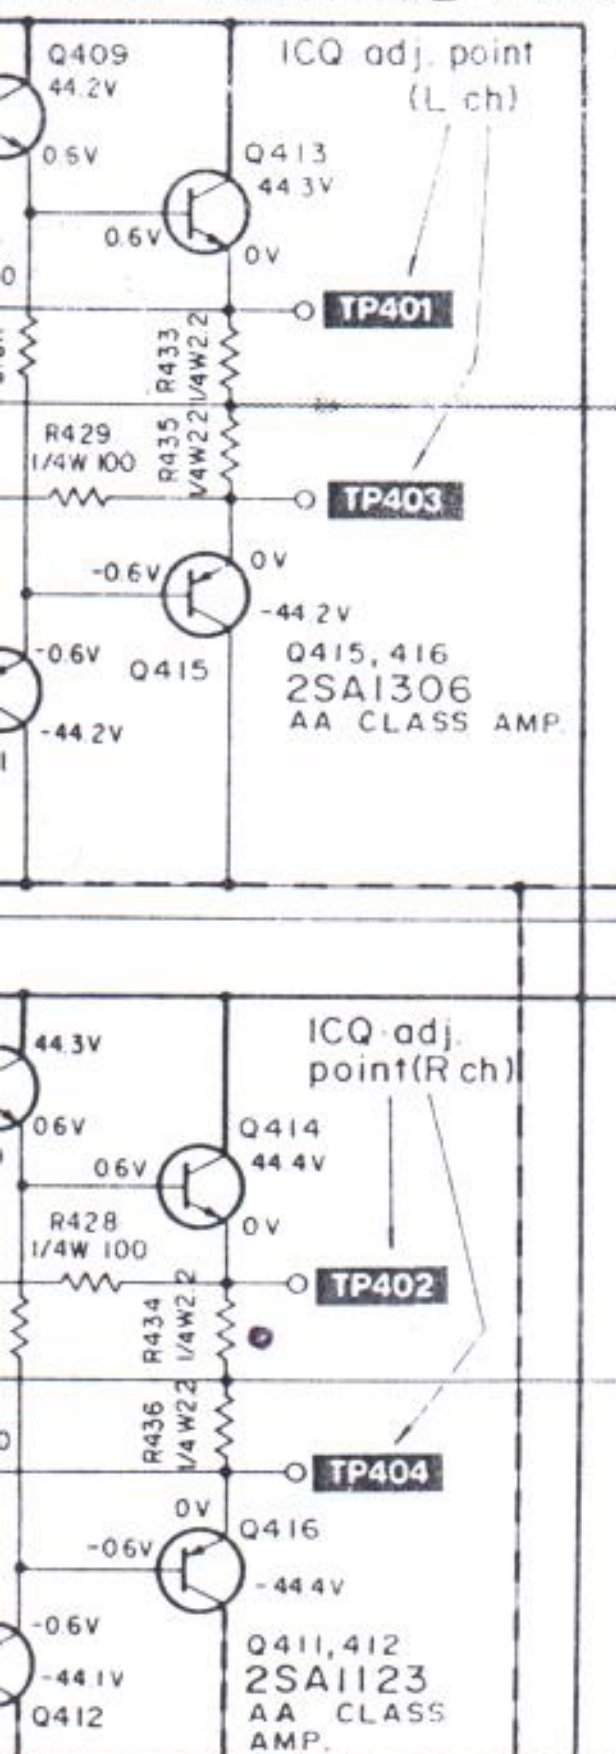

[illegible]

The diagram shows a power supply circuit. It begins with a transformer (T1) connected to a fuse (F1, 1.6A) and a switch (S8, POWER). A capacitor (C1001, 0.01) is connected in parallel with the switch. The output of the switch is connected to a transformer (L501) which is connected to an AC 220V (50/60Hz) source. The circuit is labeled with various components and their ratings.

EXPLODED VIEW


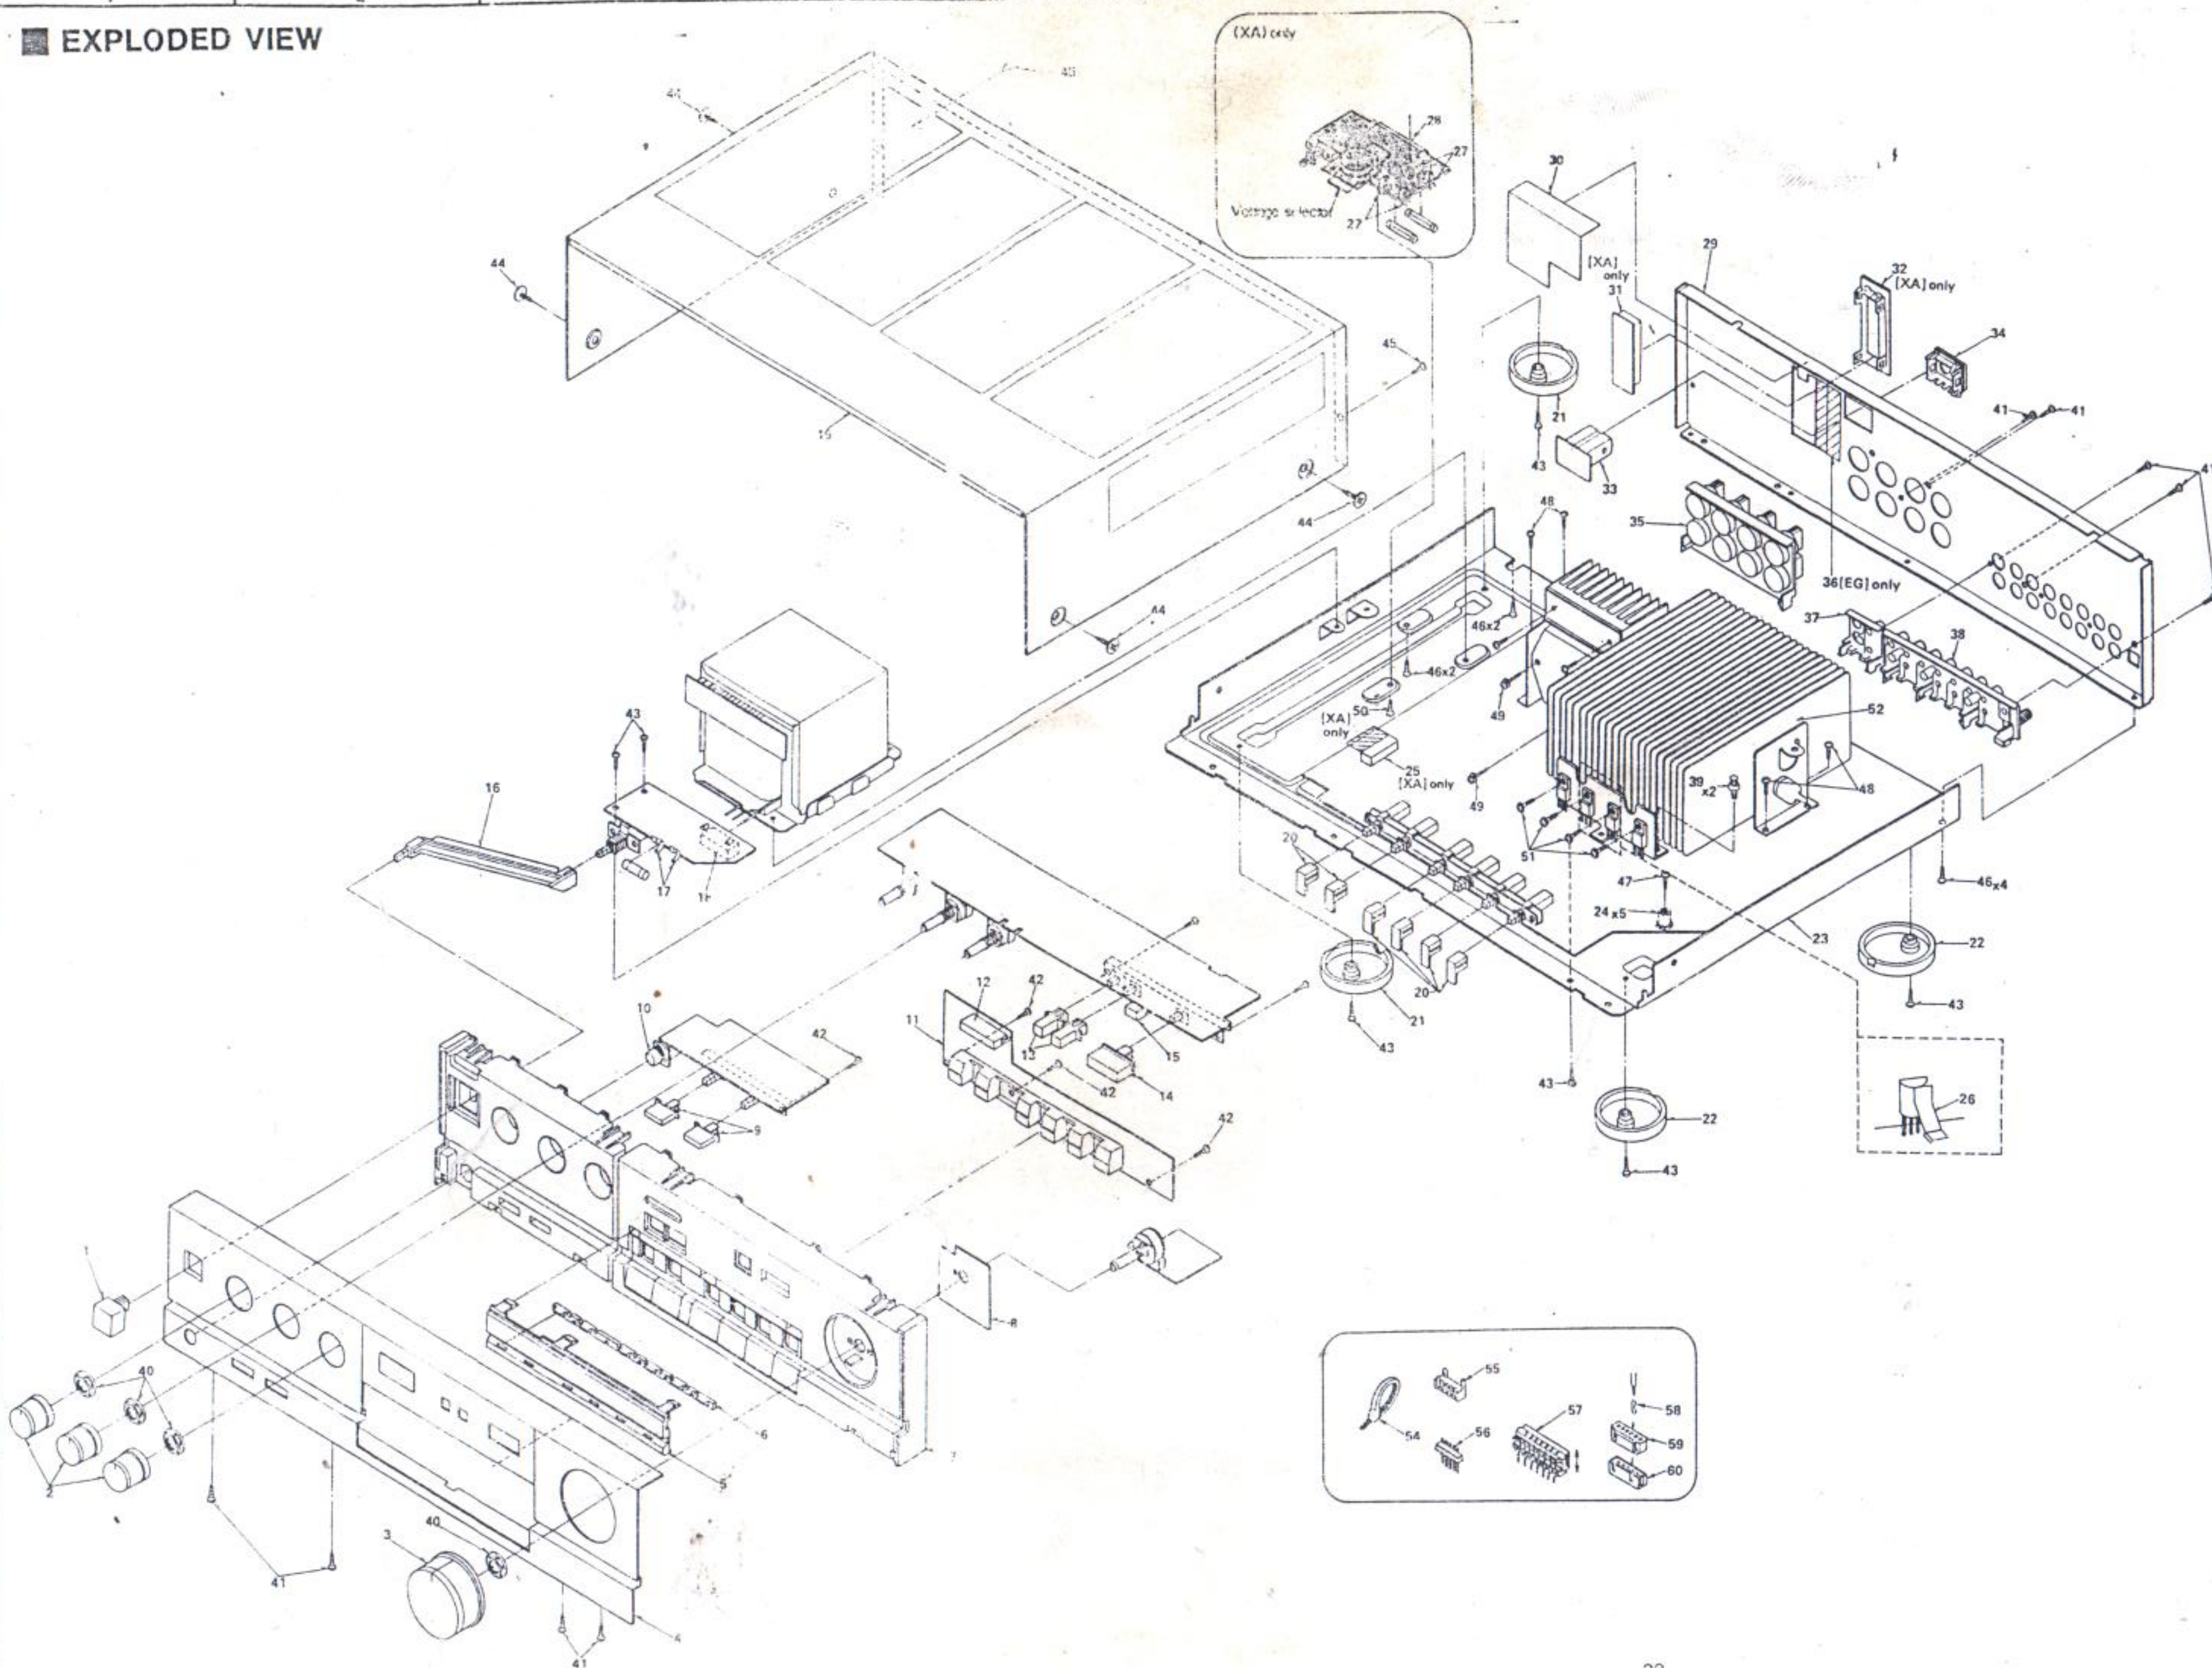


CONTENTS

LOCATION OF CONTROLS	2
PROTECTION CIRCUITRY	3
BEFORE REPAIR AND ADJUSTMENT	3
DISASSEMBLY INSTRUCTIONS	4, 5
MEASUREMENTS AND ADJUSTMENTS	6

PRINTED CIRCUIT BOARDS AND WIRING CONNECTION DIAGRAM	7 ~ 10
SCHEMATIC DIAGRAM	11 ~ 15
BLOCK DIAGRAM	16, 17
REPLACEMENT PARTS LIST	18 ~ 20
EXPLODED VIEW	21, 22

LOCATION OF CONTROLS

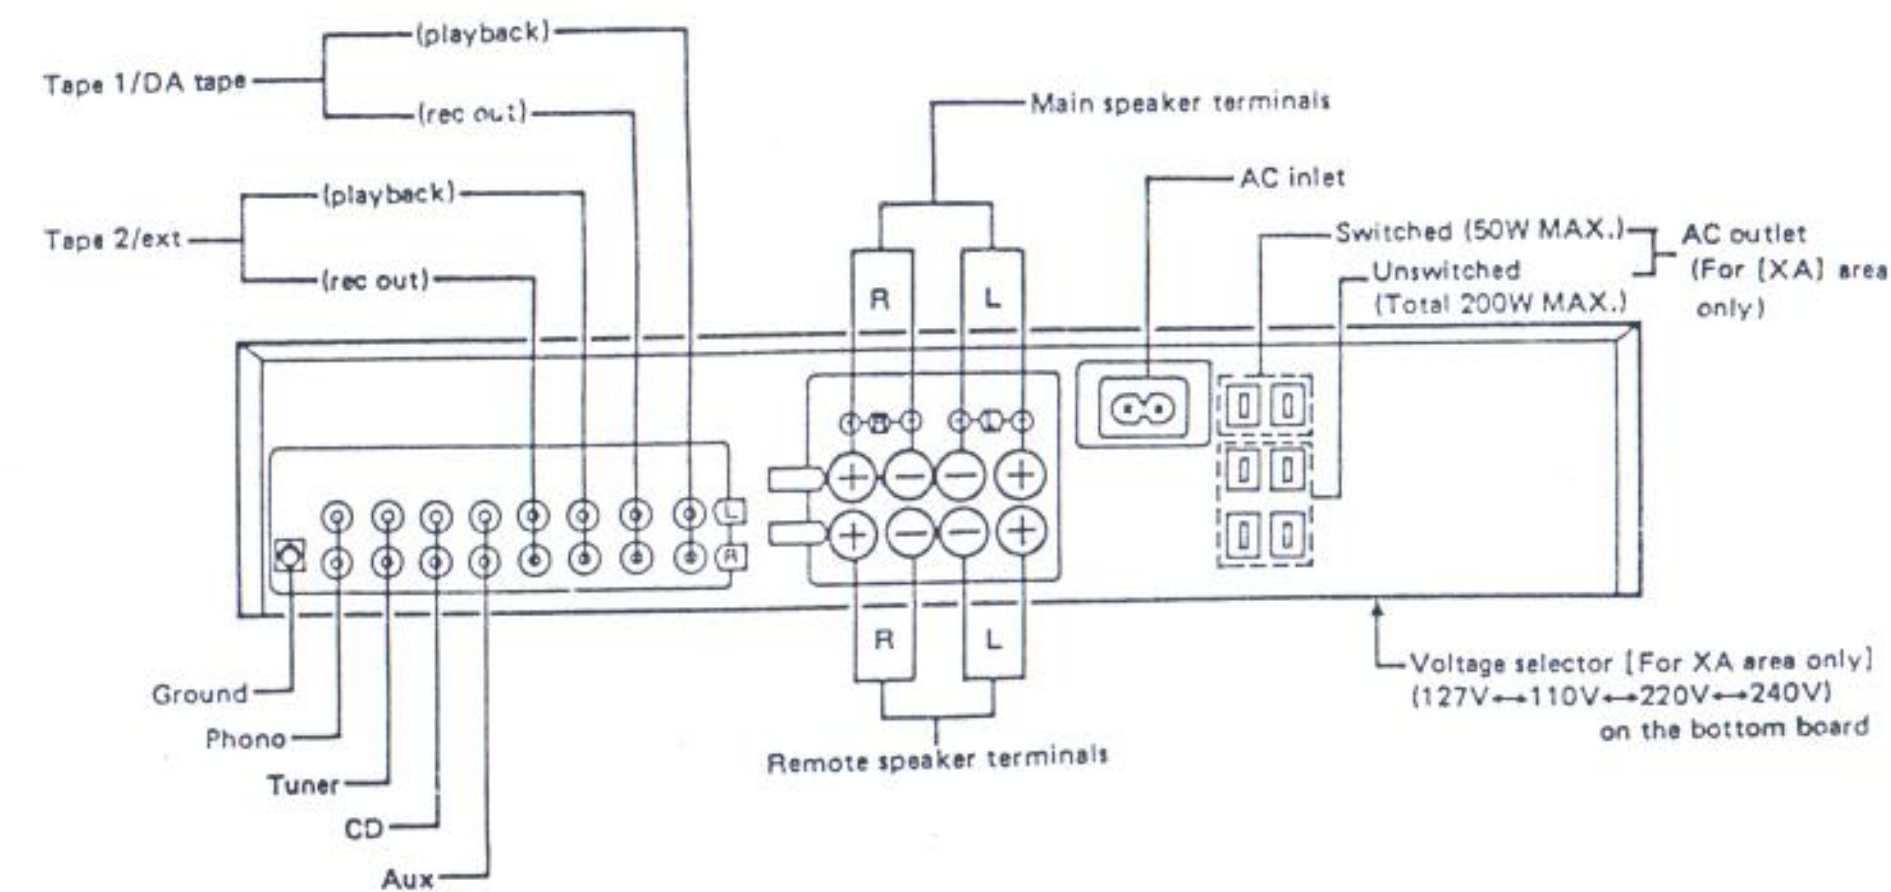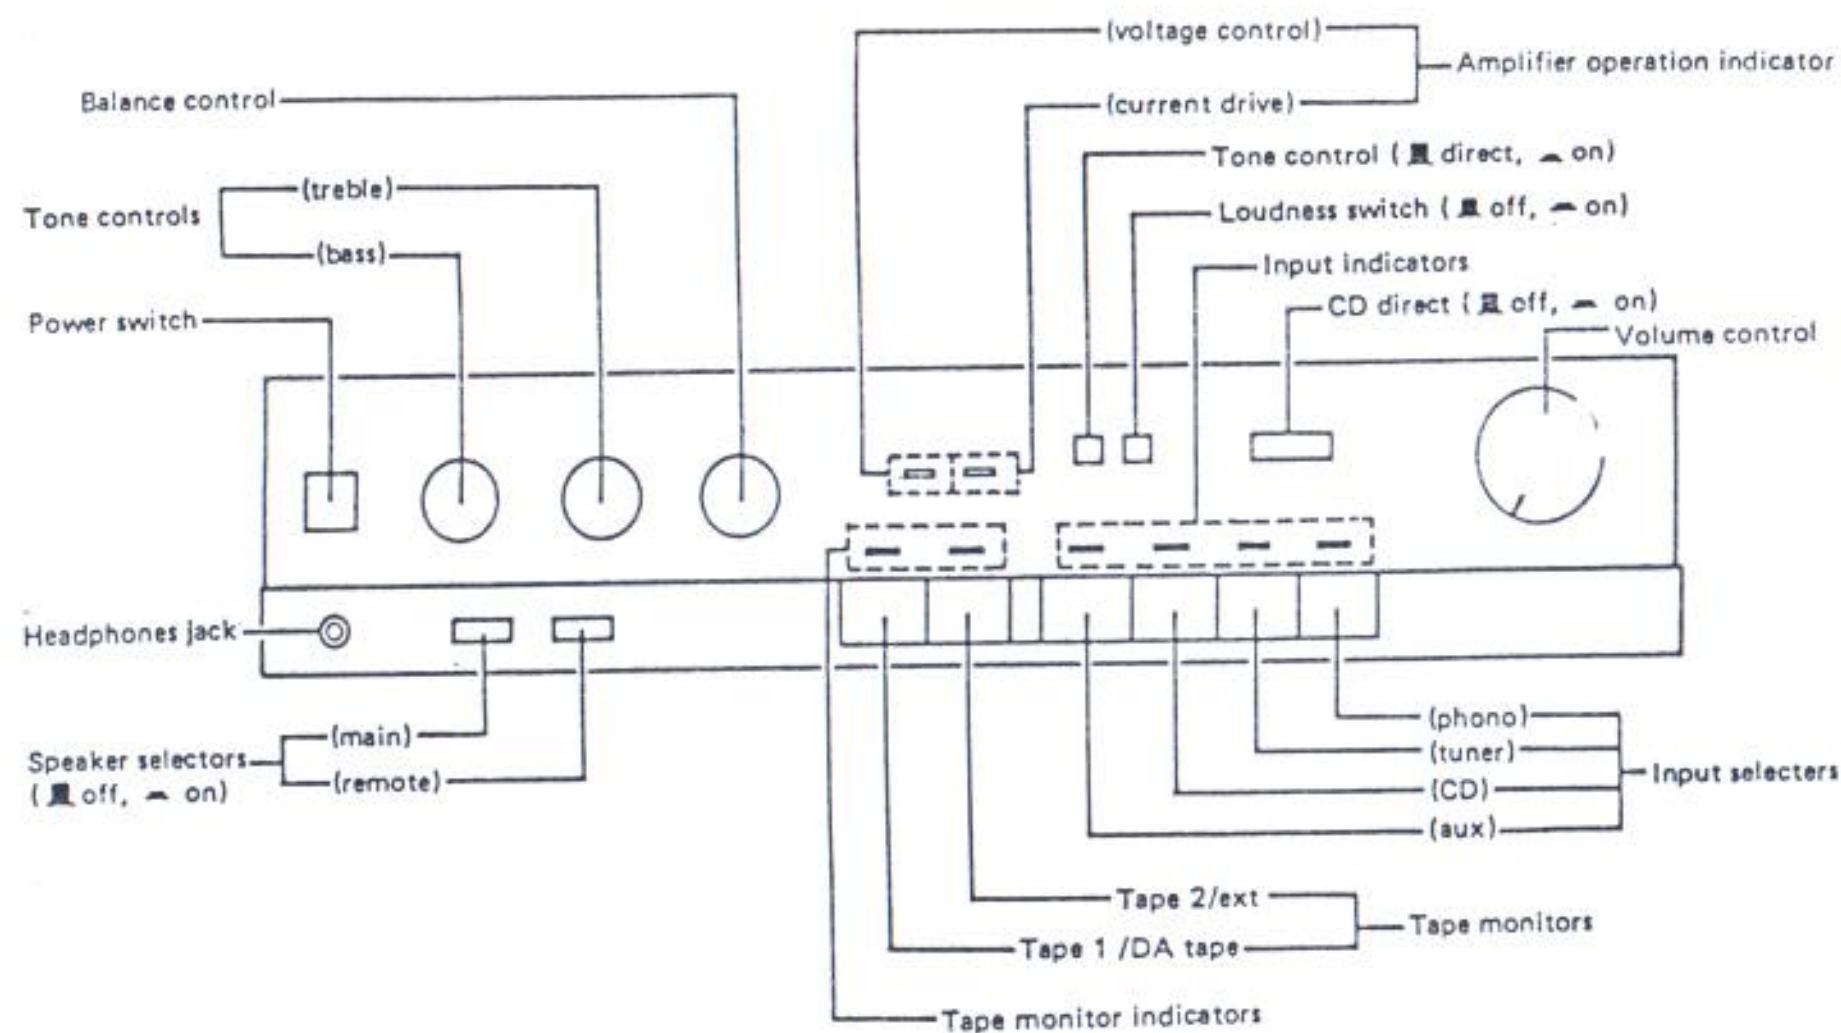

- The power supply for this unit varies depending upon the areas. Also, the parts used for power supply are different. So, refer to the circuit diagram and replacement parts list.
- [XA] area is provided with voltage selector and AC outlets.
- 240V (50/60Hz) for Australia and United Kingdom.
- 220V (50/60Hz) for Continental Europe.
- 110V/127V/220V/240V (50/60Hz) for other [XA] area.
- Phono input capacitance is about 100pF.

Suggestions

- If noise is very annoying while listening to an FM or AM broadcast, switch OFF the video disc player, compact-disc player and turntable.
- Switch OFF the video disc player power if noise is excessive while listening to an audio tape, compact disc or regular phono disc.

Notes:

- To record sounds from a compact disc, press the input selector marked "CD". The compact-disc-direct switch is for listening only; it cannot be used to select the compact disc as a recording source.
- Do not press the left tape-monitor selector to the "tape 1/DA tape" position while two tape decks are being used for recording or while tape deck 2 is being used for recording. This will cause interruptions in the sound and change the recorded signal.

PROTECTION CIRCUITRY

The protection circuitry may have operated if either of the following conditions is noticed:

- No sound is heard when the power is switched ON.
- Sound stops during a performance.

The function of this circuitry is to prevent circuitry damage if, for example, the positive and negative speaker connection wires are "shorted", or if speaker systems with an impedance less than the indicated rated impedance of this unit are used.

If this occurs, follow the procedure outlined below:

1. Switch OFF the power.
2. Determine the cause of the problem and correct it.
3. Switch ON the power once again.

Note:

When the protection circuitry functions, the unit will not operate unless the power is first switched OFF and then ON again.

BEFORE REPAIR AND ADJUSTMENT

- (1) Turn off the power supply. Using a 10Ω, 5W resistor, shortcircuit both ends of power supply capacitors (C503, C504, 6800μF) in order to discharge the voltage.
- (2) Before turning the power supply on, after completion of repair, slowly apply the primary voltage by using a power supply voltage controller to make sure that the consumed current at 50/60 Hz in NO SIGNAL mode should be shown below with respect to supply voltage 110V/127V/220V/240V.

Power supply voltage	AC110V	AC127V	AC220V	AC240V
Consumed current 50/60Hz	260 ~ 380mA	230 ~ 350mA	110 ~ 230mA	80 ~ 200mA

DISASSEMBLY INSTRUCTIONS




"ATTENTION SERVICER"
SOME CHASSIS COMPONENTS MAY HAVE SHARP EDGES.
BE CAREFUL WHEN DISASSEMBLING AND SERVICING.

Ref. No. 1 How to remove the cabinet

Procedure 1
• Remove the 5 screws.


Ref. No. 2 How to remove the front panel

Procedure 1 → 2
1. Remove the 4 knobs (1 ~ 4).
2. Remove the 4 nuts (5 ~ 8).
3. Remove the 4 screws (9 ~ 12).
4. Remove the connection rod.
5. Remove the connector (J1, J2, J3, J8).
6. Remove the flat cable (J6, J7).

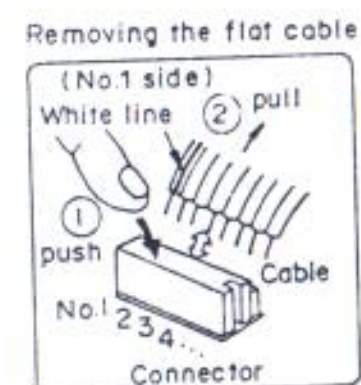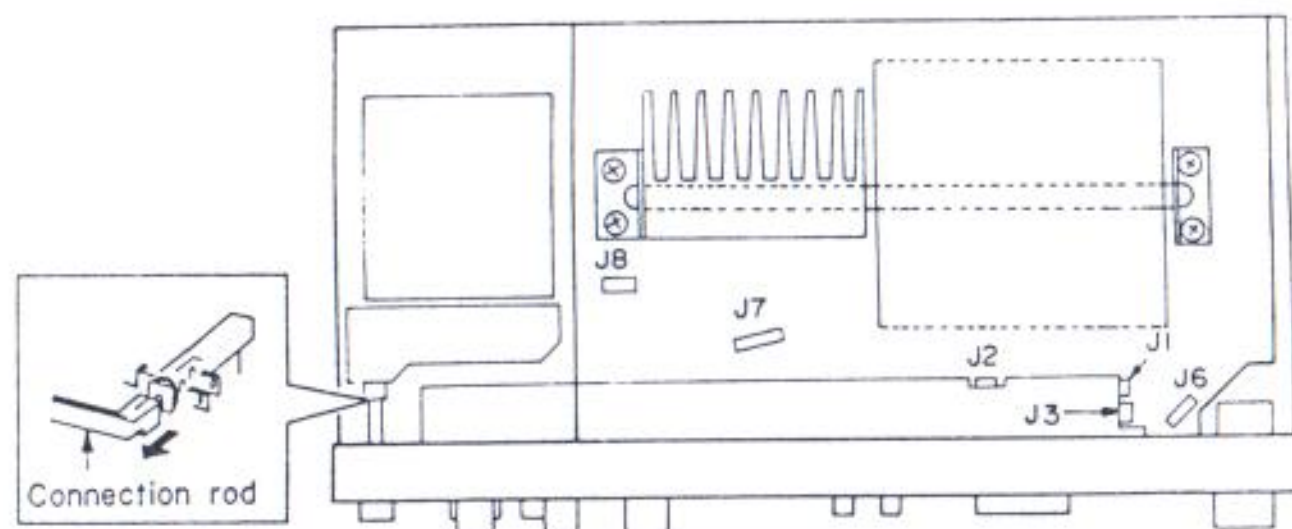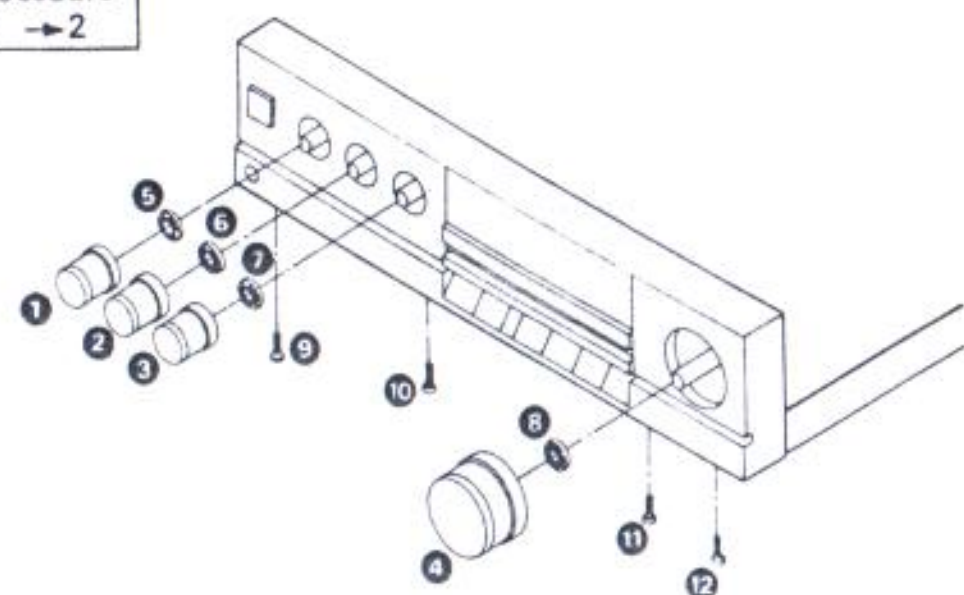



Ref. No. 3 How to remove the P.C.B.

Procedure 1 → 2 → 3
1. Remove the 2 screws (1, 2).
2. Remove the tone control and volume P.C.B.
3. Remove the 3 screws (3 ~ 5).
4. Remove the LED P.C.B.
5. Remove the 1 screw (6).
6. Push the 2 tabs (7, 8).
7. Remove the speakers/headphones P.C.B.

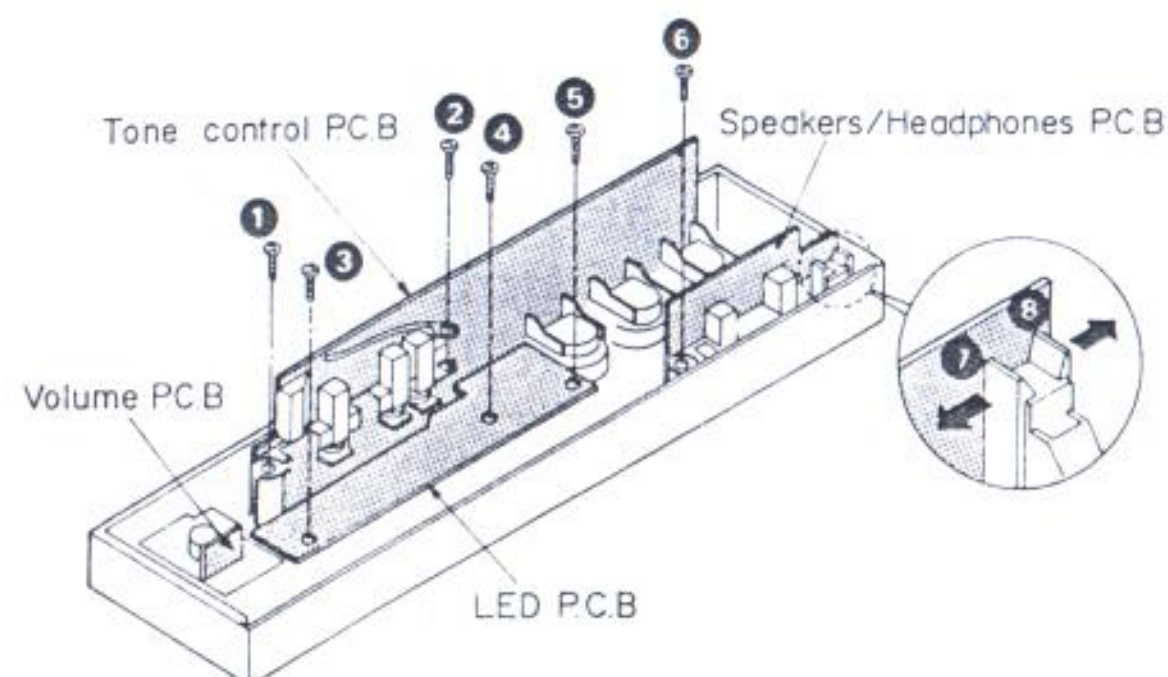


Ref. No. 4 How to remove the main P.C.B.

Procedure 1 → 4
1. Remove the 13 screws (1 ~ 13).
2. Remove the connection rod.
3. Remove the main P.C.B.

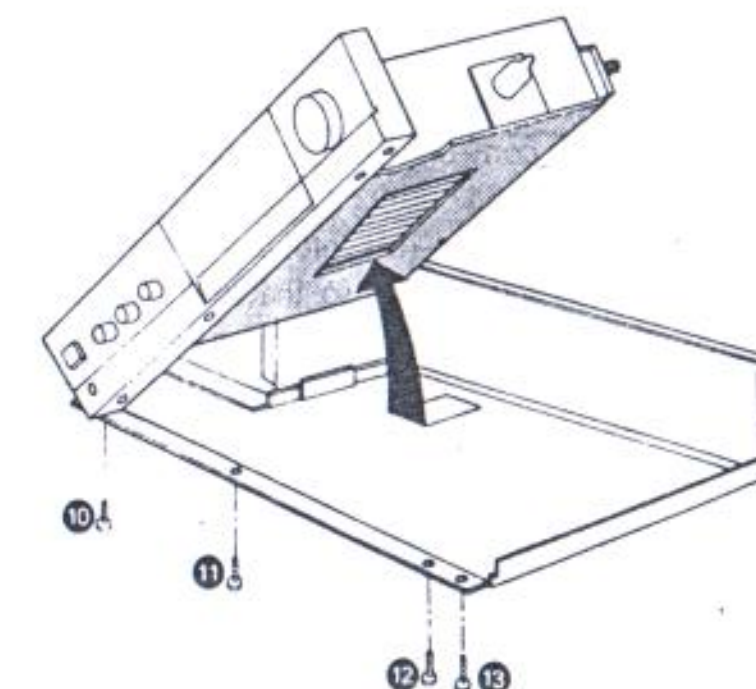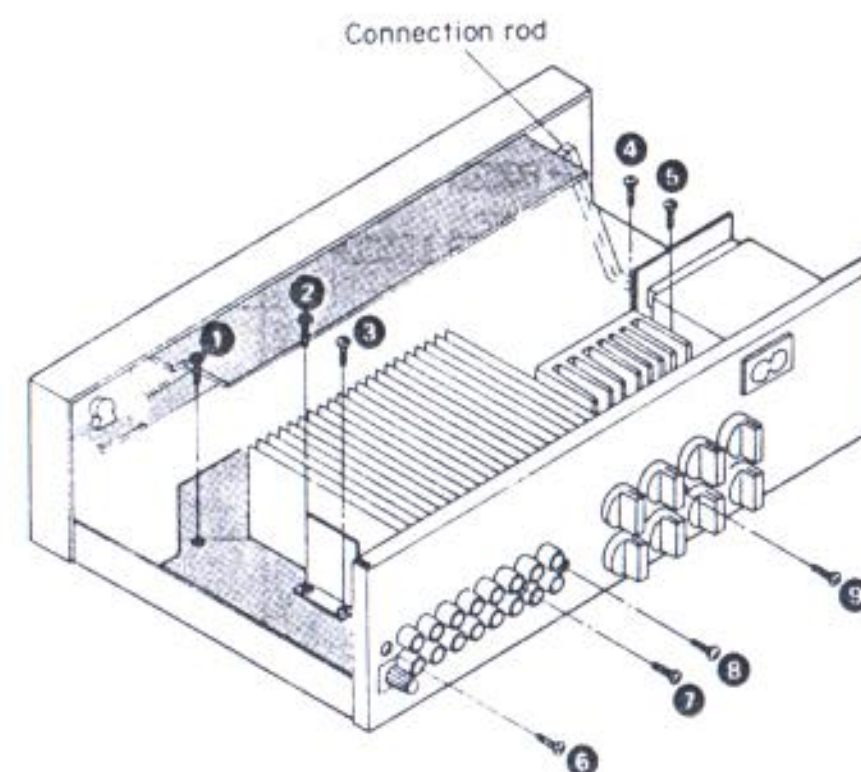

Ref. No. 5 How to remove the power IC.

Procedure 1 → 4 → 5

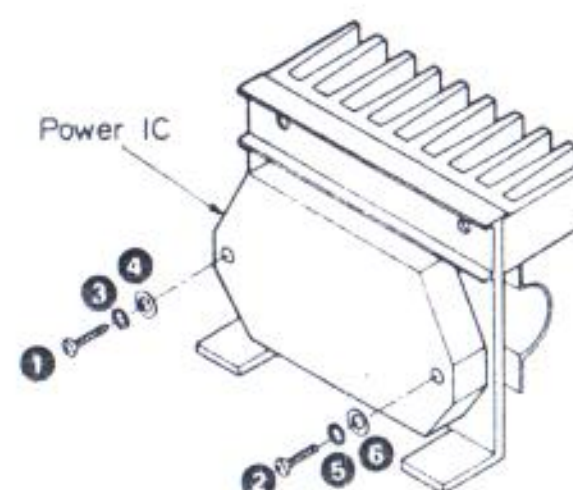

1. Unsolder the power IC.
2. Remove the 2 screws (1, 2).
3. Remove the 4 washer (3 ~ 6).

• When mounting the power IC, apply silicon thermal compound (SZZ0L15 or equivalent) to the rear of the power IC.

Supplement

Amplifier

SU-V45A

Color

(S) Silver Type

(K) Black Type

Area


Color	Area
(S) (K)	(EG) . . . F.R. Germany

Note: This supplement has been issued to inform you that the rec out and headphones terminal circuits have been changed in units having serial number suffixes "B" or later.


CHANGES

■ SCHEMATIC DIAGRAM

- C215 ~ C218 have been added to improve the interference radiation characteristics.

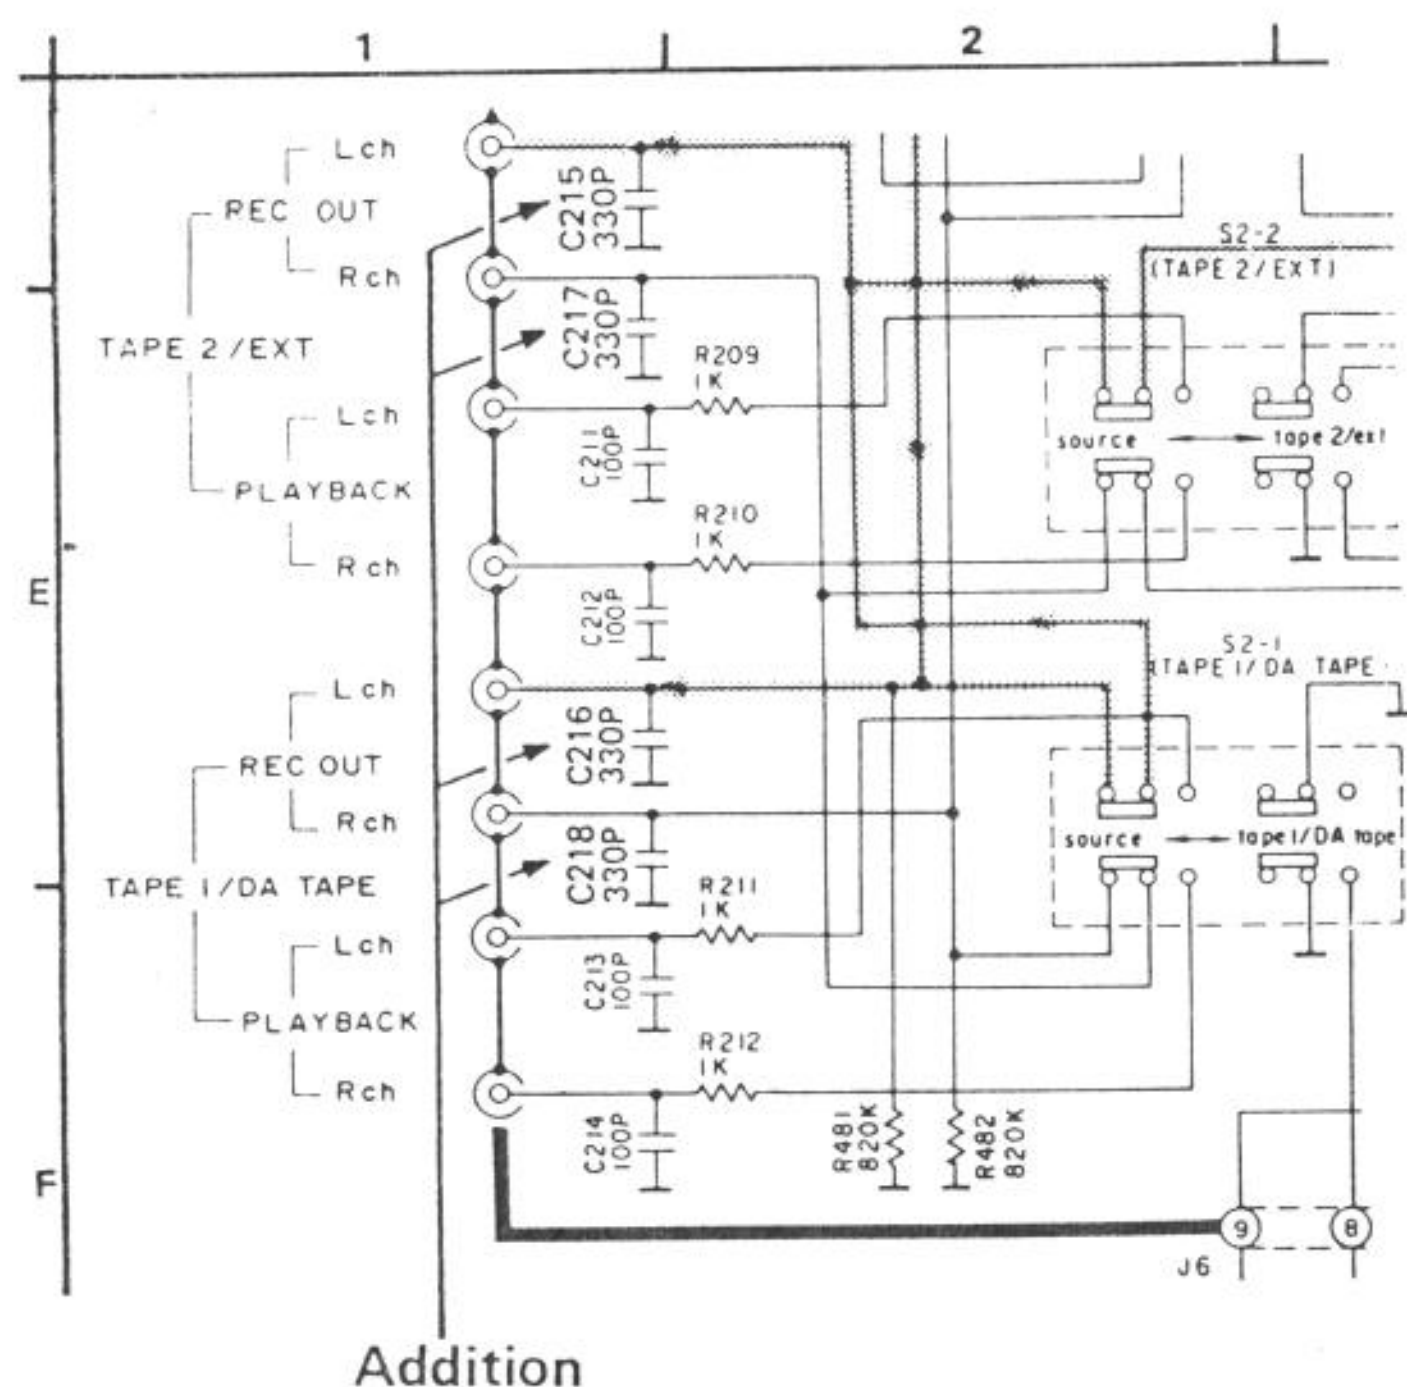

- C487 and C488 have been added to improve the interference radiation characteristics.

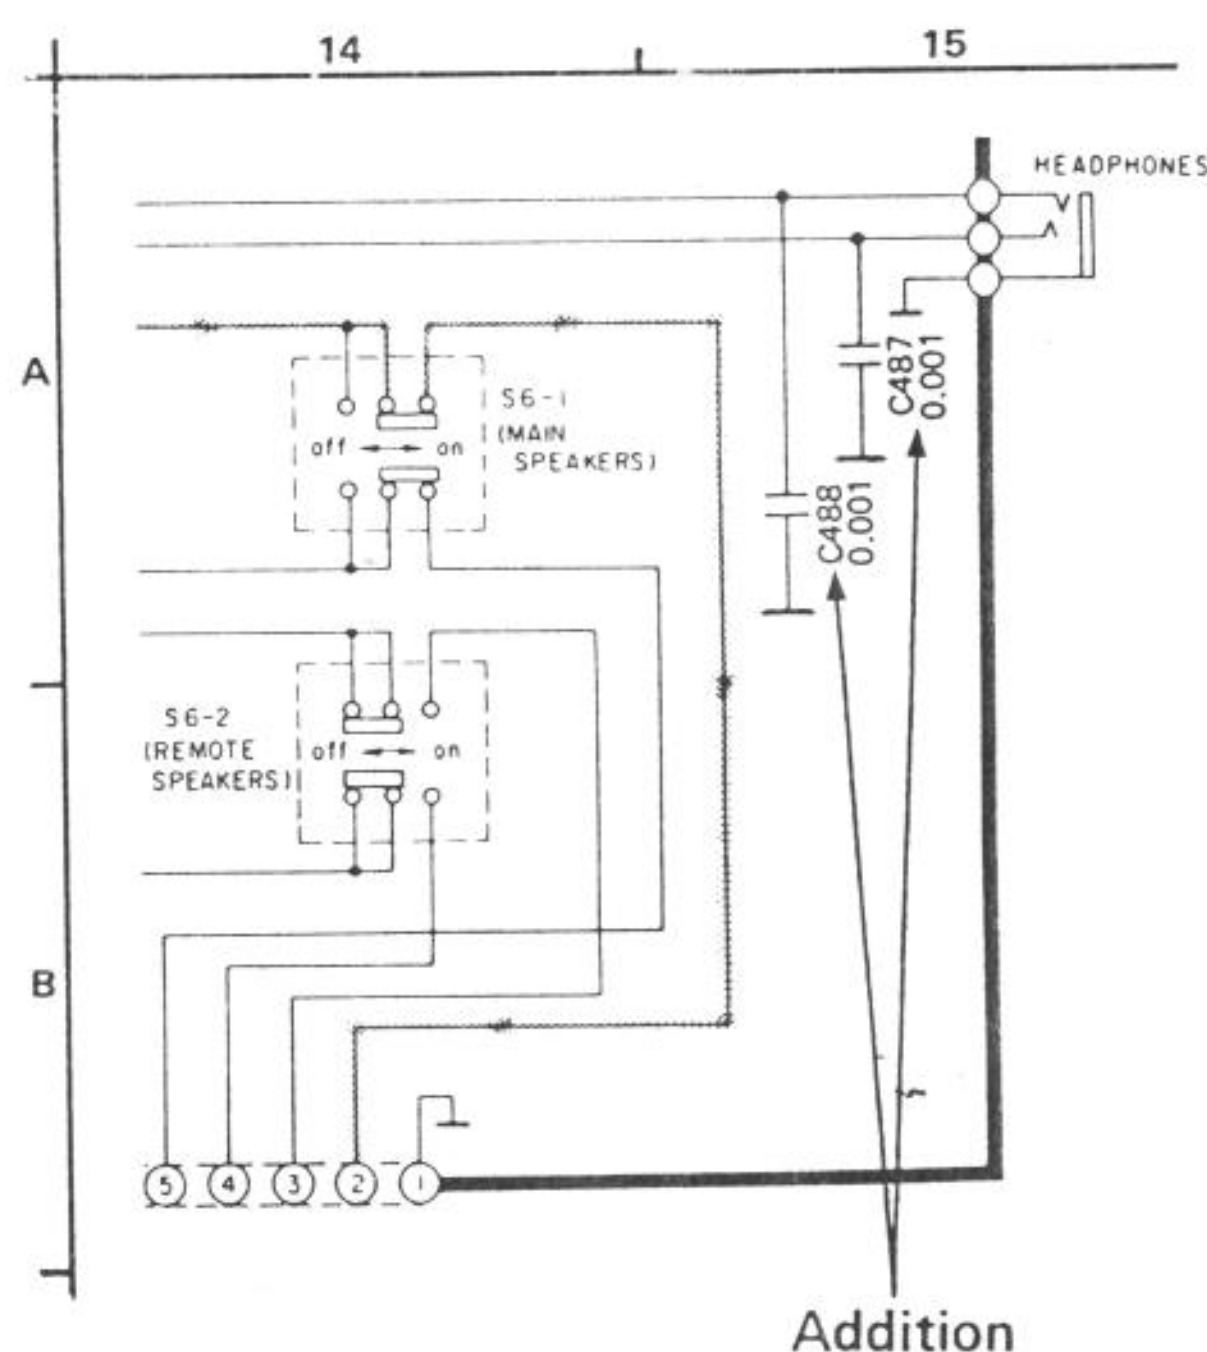

Technics

Matsushita Electric Industrial Co., Ltd.
Central P.O. Box 288, Osaka 530-91, Japan

