

TVP-221H

VoIP Gateway
4 Port (2FXS +2FXO)

System Integrator's User Manual Command Line Interface Reference



FCC Notice

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed in accordance with the instruction manual, may cause harmful interference to radio communication. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at the user's own expense.



CE Declaration of conformity

This equipment complies with the requirements relating to electromagnetic compatibility, EN 55022 class A for ITE and EN 50082-1. This meets the essential protection requirements of the European Council Directive 89/336/EEC on the approximation of the laws of the Member States relating to electromagnetic compatibility.



Trademarks

All brand, company and product names are trademarks or registered trademarks of their respective companies.

How to Use This Manual

This manual was designed for the technical users / system integrators of the VoIP Gateway (TVP-221H). It introduces the more advanced command line interface, firmware upgrade and appendix information. Read this section carefully for important information about the manual's organization.

Chapter Overview

Chapter 1: Product Overview

Overview of product features, including Networking Protocols, Package Contents as well as a physical explanation of the Front and Rear Panels.

Chapter 2: Command Line Interface

This chapter describes how to access the command line interface. It also contains information about the commands used to configure the TVP-221H.

Chapter 3: Upgrading the TVP-221H

This chapter explains how to download new revision software and upgrade the TVP-221H.

Appendix A: Technical Specifications

This appendix lists the TVP-221H specifications and the assignment of pins of all the interface ports.

Appendix B: CLI Commands

This appendix provides a short description of each CLI command with a reference to the pages that contain detailed information on the command.

Appendix C: Factory Default Settings

This appendix lists factory settings of the TVP-221H.

Appendix D: Worksheets

This appendix provides some work sheets that you may use before configuring the TVP-221H.

Important Safety Instructions

Before you plug the TVP-221H into an electrical outlet, carefully read all the installation instructions in Chapter 2.

For your own safety and the safety of your equipment, always take the following precautions:

- Follow instructions and warnings in the documentation.
- Never push any object through the fan vent or other openings in the equipment. Such action may produce a short circuit, causing fire, electric shock, or equipment damage.
- Keep the TVP-221H away from all chemicals and sources of liquids.

Warning

- Connection of the RJ45 connector from a TVP-221H to TNV circuits can cause permanent damage to the TVP-221H.
- Incorrectly connecting telephony devices to the RJ11 port on the Telephony Interface Module can cause permanent damage to the module.

Documentation Abbreviations

Throughout this guide, the user will come across a number of abbreviations that are common throughout the industry. The user should be familiar with the following abbreviations:

ATPM	Address Translation and Parsing Manager
CLI	Command Line Interface
DSP	Digital Signal Processor
DTMF	Dual Tone Multi-Frequency
FXO	Foreign Exchange Office
FXS	Foreign Exchange Station
H.323	ITU specification for multimedia transmission over IP networks
ICMP	Internet Control Message Protocol
IMTC	International Multimedia Telecommunications Consortium
IP	Internet Protocol
TVP-221H	4-port VoIP Gateway
TVP-224HR	4-port VoIP Gateway Router
KTS	Key Telephone System
LAN	Local Area Network
NVS	Non-Volatile Storage
LED	Light Emitting Diode
PBX	Private Branch Exchange
PSTN	Public Switched Telephone Network
RTP	Real-Time Transport
TCID	Telephony Channel Identifier
TFTP	Trivial File Transfer Protocol
TIM	Telephony Interface Modules
TNV	Telephone Network Voltage
UDP	User Datagram Protocol
UTP	Unshielded Twisted Pair
VAD	Voice Activity Detection
WAN	Wide Area Network

Notation Conventions

Throughout this guide, different type styles and characters are used. These serve a variety of purposes as described below:

Convention	Description
boldface	Commands and keywords are in boldface .
<i>italic</i>	Arguments for which you supply values are in <i>italics</i> .
courier	Messages that the TVP-221H CLI displays are in plain courier font .
[]	Elements in square brackets are optional.
{ x y z }	Alternative but required elements are grouped in braces ({ }) and separated by vertical bars ().
[x y z]	Optional alternative keywords are grouped in brackets ([]) and separated by vertical bars ().
string	A non-quoted set of characters. Do not use quotation marks around the string or the string will include the quotation marks.
key	A key on the VT-100 terminal of terminal emulator. For example <Enter> denotes the Enter key

Table of Contents

How to Use This Manual	3
Important Safety Instructions.....	4
Documentation Abbreviations	5
Notation Conventions.....	6
CHAPTER 1	10
OVERVIEW	10
1.1 Features.....	10
1.2 Networking Protocols.....	10
1.3 Package Contents	11
1.4 Front Panel.....	11
LED Indicators	11
Reset Button	12
1.5 Rear Panel.....	12
LAN / Console Ports	12
CHAPTER 2	14
COMMAND LINE INTERFACE.....	14
2.1 Connection through Serial Port	14
2.2 Connection through Telnet.....	16
2.3 Command Help.....	17
2.4 Designating IP Address.....	17
2.5 Designating Port Number	17
2.6 Command Reference.....	17
Utility Commands	18
4 clrscr	18
5 download	18
6 help	18
7 ping.....	19
Network Commands	20

8	net reset	20
9	net set gateway <i>ip_addr</i>	20
10	net set http {on off}	20
11	net set ip <i>ip_addr</i>	20
12	net set ip_preced <i>ip_preced</i>	21
13	net set mask <i>ip_mask</i>	21
14	net set speed {10 100 auto}	21
15	net set user_pw <i>password password</i>	21
16	net show	21
17	net show hwstat	22
Configuration Management Commands.....		23
18	config {activate store erase}	23
19	show h323	24
20	show version.....	24
21	set h323 alias {add del} { <i>alias</i> all}.....	24
22	set h323 allow_call_wo_gk {true false}.....	25
23	set h323 display_name <i>display_name</i>	25
24	set h323 dtmf_duration <i>duration</i>	25
25	set h323 endpoint_reg_type {gw terminal}.....	26
26	set h323 gk_addr <i>ip_addr</i>	26
27	set h323 gk_max_tries <i>count</i>	26
28	set h323 gk_mode {off manual auto}	26
29	set h323 h245_term_type <i>terminal type</i>	27
30	set h323 imtc_dtmf {add del} <i>ip_addr</i>	27
31	set h323 in_fast_start {on off}	28
32	set h323 nat_call {on off}.....	28
33	set h323 out_fast_start {on off}	28
34	set h323 rtp_port_base <i>port_base</i>	28
Dial Plan Management Commands.....		29
35	Database Update Control Commands	30
36	atpm done	30
37	atpm erase.....	30
38	atpm purge {all addr dest hunt}	30
39	atpm req.....	30
40	atpm restore	30
41	atpm store [erase]	31
Destination Table Management Commands.....		31
43	atpm dadd <i>dest_id</i> port <i>port#</i>	31
44	atpm dadd dest_id h323 dest_ip_addr [<i>ip_port</i>].....	31
45	atpm ddel <i>dest_id</i>	32
46	atpm dfind <i>dest_id</i>	32
47	atpm dlist.....	32
48	Hunt Group Table Management Commands.....	33
49	atpm hadd hunt_group_id {1 2} dest_id [<i>desi_id2</i>]	33
50	atpm hdel hunt_group_id	33
51	atpm hfind hunt_group_id.....	33
52	atpm hlist.....	34
Address Table Management Commands		34
53	atpm aadd tel# min_digits max_digits hunt_group_id prefix_strip_len [<i>prefix#</i>]..	34
54	atpm adel <i>tel#</i>	34
55	atpm afind <i>tel#</i>	35

56	atpm alist	35
System Commands		35
57	atpm slist	35
58	atpm sys dial_time 1st_digit_wait inter_digit_wait [dial_term_digit].....	36
Tel Commands.....		36
36	36
59	36
	tel show tel_id	36
60	tel show port [port#]	36
61	tel show ring_freq.....	37
62	tel set tel_id {1~10}	37
63	tel set ring_freq {1 2 3 4}	37
64	Obsolete Commands.....	38
 UPGRADING THE TVP-221H.....		39
3.1	Entering Download Mode.....	39
3.2	CLI Commands in Download Mode.....	40
37	help	40
38	quit.....	40
39	set ip <i>ip_addr</i>	40
40	set gateway <i>ip_addr</i>	41
41	set mask <i>ip_mask</i>	41
42	start	41
3.3	Appendix A - Technical Specifications	42
	TVP-221H Technical Specifications	42
	Console Port	44
	LAN Port.....	44
	FXO Port Pin Assignments	45
	FXS Port Pin Assignments	45
3.4	Appendix B - CLI Commands.....	46
	Normal Mode Commands	46
	Download Mode Commands	47
3.5	Appendix C - Factory Default Settings.....	48
3.6	Appendix D - Worksheets.....	50
	IP Parameters.....	50
	ATPM Destination Table	50
	ATPM Hunt Group Table	52
	ATPM Address Table.....	53
Index.....		54

Chapter 1

Overview

This chapter gives an overview of the 4 ports desktop version VoIP Gateway (TVP-221H) and a detailed description of its front panel and rear panel.

1.1 Features

The TVP-221H is a cost-effective and highly reliable analog Voice over IP (VoIP) Gateway that offers toll quality voice and real-time fax data over IP networks. With its embedded architecture, the gateway is ideal for VoIP applications associated with Remote Office and Branch Office (ROBO) environments. With its built-in user-friendly interface, the gateway may be installed easily and conveniently to yield immediate cost savings. One VoIP Gateway supports up to four voice or Fax communications simultaneously.

Implemented with an efficient Real-Time Operating System (RTOS) and flash memory, the TVP-221H provides upgradeable capabilities, so it may be programmed with updated firmware locally or via the network at any time. It comes equipped with remote management capabilities, configurable signaling to work with PBX, KTS, and/or telephone. The TVP-221H utilizes advanced VoIP related technology. It includes various voice codecs and fax algorithms, echo cancellation, Voice Activity Detection (VAD), Comfort Noise Generation (CNG), and lost packet recovery algorithms.

1.2 Networking Protocols

The TVP-221H supports several industry-standard networking protocols required for voice communication. The following table describes these protocols.

Networking Protocol	Description
Internet Protocol (IP)	IP is a messaging protocol that addresses and sends packets across the network. To enable IP protocol, the TVP-221H must have a Real IP address, subnet, and gateway assigned to it.
Voice over IP Protocol (VoIP)	VoIP enables the TVP-221H to transfer voice communications over an IP network. The TVP-221H employs ITU-T H.323 protocol for setting up calls with one another.
Trivial File Transfer Protocol (TFTP)	TFTP allows you to transfer files over the network. The TVP-221H implements a TFTP client allowing you to download new revision firmware from a TFTP server. The TFTP client requires a TFTP server in your network.
Real-Time Transport (RTP)	RTP is a standard for transporting real-time data over IP network. The TVP-221H uses RTP protocol to send

digitized and compressed voice packets.


1.3 Package Contents

The contents of your product should contain the following items:

- TVP-221H VoIP Gateway 4 port desk top version
- 100-240V Power Adapter
- 9-pin straight through RS-232 cable
- Printed Quick Installation Guide
- User's guide (CD)
- RJ45 Cable

1.4 Front Panel

The front panel of the TVP-221H contains a push button and LED indicators. The following figure illustrates the front panel of the TVP-221H.

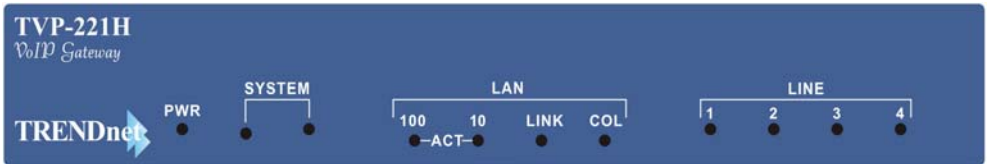

4-port TVP-221H Front Panel

LED Indicators

When the TVP-221H powers on, it switches the state of COL, LNK, 100 and ACT LED indicators in red color per 200 ms in a manner shown in the following table

ACT	100	LNK	COL	Boot loader State
solid on	solid on	solid on	solid on	Execution start
blink	off	off	solid on	Memory test
blink	blink	off	solid on	Loading application code
blink	blink	blink	solid on	Loading TFTP loader code
blink	blink	blink	blink	Failed loading application code and TFTP loader
off	off	blink	off	Memory test fail

The LED indicators on the front panel display the current status of the TVP-221H as described in the following table:

Indicator	Color	Activity	Indication
PWR	Green	On	Power is supplied to the gateway.
SYSTEM	Green	Blinking	The system is running. (Heartbeat LED)

LAN • ACT • 100M • LNK • COL	Green Green Green Green	On On Off On On	Data is being transferred on the LAN. The gateway is connected to LAN at 100Mb/s. The gateway is connected to LAN at 10Mb/s. The gateway is connected to LAN. Data collision is occurring on the network connection.
LINE Channels 1-4	Green	Off On Blinking	The line is idle. The line is being used. The line is ringing.

Reset Button

There is a recessed push button located next to the SYSTEM LED. This button allows you to reset the TVP-221H or force the TVP-221H to enter firmware upgrade mode.

To reset the gateway, push a small, stiff object into the hole until the SYSTEM LED stops blinking, then release the button.

Powering on the gateway while pressing down the button for 5 seconds forces the TVP-221H to enter download mode

1.5 Rear Panel

The rear panel of the TVP-221H has four analog telephony ports, two FXO and two FXS ports offering flexible telephony interface usage. The FXS telephony interface ports may be connected to Subscriber Equipment, such as Telephones, Fax Machines, Cordless Phones, and Modems. FXO ports can be connected to PBX and local phone company Central Office (CO) lines. In addition to analog telephony interface ports, there is a power jack for power adapter connection on the rear panel.



4-port TVP-221H Rear Panel

LAN / Console Ports

The TVP-221H is equipped with an Ethernet interface with 10/100 Mbps auto-negotiation, auto MDIX capability. The Ethernet interface port is located on the rear panel. In addition to the Ethernet interface port, there is a 9-pin RS-232 interface port on the rear panel. Their functions are described below:

Port	Label	Function
RJ45	LAN	Connecting the TVP-221H to 10/100 Mbps Ethernet network
9-pin RS-232	User Console	Connecting the TVP-221H to a VT-100 terminal or terminal emulator for configuring the TVP-221H

Command Line Interface

The TVP-221H has a built-in command line interface and provides users a Command Line Interface (CLI). You can configure TVP-221H by entering commands from the CLI.

You can access the CLI from a VT-100 terminal or terminal emulator connected to the RS-232 port on the front panel or through a Telnet session.

2.1 Connection through Serial Port

The serial port of the TVP-221H is fixed at the following settings:

Baud rate	19,200
Number of data bit	8
Parity check	None
Number of stop bit	1
Flow control	None

To access the TVP-221H through the RS-232 serial port, follow the steps below:

1. Insert one end of the serial cable that came with the TVP-221H into the 9-pin RS-232 port (labeled User Console) on the front panel.
2. Insert the other end of the cable into your terminal's serial port.
3. Configure the terminal so that settings for baud rate, number of data bit, parity check, number of stop bit and flow control capability exactly match TVP-221H's serial interface. (Refer to your terminal documentation for more information about setting up these features).
4. Press <Return> from the terminal.
5. When HyperTerminal Screen appears type "123"
6. The TVP-221H displays the following prompts on the terminal and you are ready to access the CLI then.

Console>

Task	Prompt	Type
In the event that you forget your administration password, you can gain console access to the TVP using the super password. The super password is the last six digits of your MAC		

<p>address located on the bottom of your TVP (00-50-2d-xx-xx-xx). At the Console prompt enter the super password without hyphens. The password is all lower case. After gaining access, at the console prompt type in</p> <pre>net set user_pw <pw> <pw></pre> <p>If entry of new password is successful, the console will list "OK, USER Password Changed". You will now be able to gain Web Access from a PC in the same local segment using the TVP-221H IP Address (Only applicable if GW and a PC are setup under a router in the same LAN Segment). If Web and / or Telnet Access are enabled, you will also be able to remote access the TVP-221H by entering http:// followed by the WAN IP or domain name.</p>		
<p>When the TVP-221H is directly connected to the ADSL / Cable Modem and remote access to the TVP-221H is not possible because you do not have an second line for Internet Access, it becomes difficult to verify that the TVP-221H has established Internet Access. In order to confirm Internet Access, at the console prompt:</p> <pre>Console> Enter ping xxx.xxx.xxx.xxx</pre> <p>The following dialogue indicates that Internet Access is successful. (xxx.xxx.xxx.xxx is a know public IP)</p> <pre>ping (xxx.xxx.xxx.xxx): 56 data bytes xxx.xxx.xxx.xxx is alive</pre> <p>If the ping times out, you do not have Internet Access or the Public IP Address you used is incorrect. Please try another Public IP address. If you confirm that you do not have Internet Access, please refer to the trouble shooting section of the User Manual or consult your ISP to make sure your Internet Access Data is correct and accurately entered into the TVP-221H.</p>	<pre>Console></pre>	<pre>ping xxx.xxx.xxx</pre>
<p>The following commands enable / disable web and telnet access respectively.</p> <pre>Net set http <on/off> Net set telnet <on/off></pre>	<pre>Console></pre>	<pre>on / off</pre>
<p>To reset to Factory Default settings, please perform the following commands to:</p> <p>Erase all 'port', 'codec' & 'h323' configuration</p>		

<pre> config erase Then access dial plan edit mode by entering atpm req Purge the dial plan from the database atpm purge all Store the changes atpm store Reset the network configuration to default net set fac_default Key in "yes" to re-boot. </pre>		
--	--	--

2.2 Connection through Telnet

To use Telnet, Internet Access must have been previously setup so that the gateway is visible on the internet (See User Guide for More Information). Alternatively, you can use Telnet to locally access the TVP-221H, if you are under a router or switch and the TVP-221H and your computer are in the same network segment.

Up to two sessions through Telnet are possible. To access the TVP-221H from a remote host with Telnet, perform the following tasks:

To access the TVP-221H Gateway from a remote location / or from the same LAN Segment using Telnet, perform the following tasks:

Task	Prompt	Type
Open the windows command prompt and enter the telnet command followed by the IP address of the TVP-221H Gateway you want to access.	None	telnet xxx.xxx.xxx
When the TVP-221H Gateway prompts you to Login , enter the user name "admin"	Login:	admin
When the TVP-221H Gateway prompts you for the Password , enter the password. The default password is "123" but it is recommended that the password be changed for security considerations. The password can be changed from the Web UI Administration / Password submenu page.	Password :	123
Type in "ping xxx.xxx.xxx", where xxx.xxx.xxx is your ISP provided DNS Server IP or any known Public Internet Address. The following dialogue confirms Internet Access <pre> Console>ping 168.95.1.1 ping <168.95.1.1>: 56 data bytes 168.95.1.1 is alive </pre> If the ping times out, you do not have Internet Access or the Public IP Address you pinged is incorrect. Try another IP Address. If you confirm that you do not have Internet Access, please refer to the trouble shooting section of the User Manual or consult your ISP to make sure your	Console>	ping xxx.xxx.xxx

Internet Access Data is correct and accurately entered into the TVP-221H.		
---	--	--

2.3 Command Help

Help commands are provided by the CLI. Type **help** to see a listing of the top-level commands. On most cases, if you enter a command using the wrong number of arguments or inappropriate arguments, the CLI will give further usage.

2.4 Designating IP Address

Some commands require an IP address, which must be designated in a standard format. The IP address format is 32 bits, written as four octets separated by periods (dotted decimal format) that are made up of a network section, an optional subnet section, and a host section, as shown in the following example:

192.168.0.1

2.5 Designating Port Number

Some commands require a telephony port number. The TVP-221H designates the first port as port number 0, the 2nd port as port number 1 and so on.

2.6 Command Reference

The following table lists the CLI command in alphabetic order.

Command	Description
atpm	Dial plan management command
clrscr	Clear screen
config	Configuration management command
download	Download new revision code image from TFTP server
help	Display help screen
net	Set or display network parameters
ping	Ping another Internet host
set	Set system configuration
tel	Set or display telephony port options

For the ease of understanding and explaining these commands, the commands are categorized into the following command sets and the following sections explaining each set of the commands.

Command Set	Commands	Function
Utility	clrscr download help ping	General purpose utility commands
Network	net	Commands for setting or displaying network related parameters
Configuration management	config show set	Commands for configuring the TVP-221H or displaying configuration
Dial plan management	atpm	Commands for setting or displaying dial plan
Telephony	tel	Commands for setting or displaying telephony related options

Utility Commands

4 clrscr

The **clrscr** command to clear the screen

Syntax Description

This command has no arguments or keywords

5 download

Use the **download** command to enter download mode for reading code image from a TFTP server and program it to flash memory. Refer to 0 for detailed information on how to upgrade the system software.

Syntax Description

This command has no arguments or keywords

Note

This command is available from serial interface. It is not available from Telnet unless the TFTP loader is version 3.00 or higher.

6 help

The **help** command lists the top-level commands.

Syntax Description

This command has no arguments or keywords

7 ping

The **ping** command sends Internet Control Message Protocol (ICMP) echo request packets to another node on the network.

ping *host_ip_addr*

ping -s *host_ip_addr count/timeout*

Syntax description

-s	Causes ping to send one data gram per second, printing one line of output for every response received.
<i>host_ip_addr</i>	The IP address or IP alias of the host.
<i>count</i>	(Optional) The number of packets to send
<i>timeout</i>	(Optional) Timeout value for the ping in millisecond

Network Commands

8 **net reset**

Use the **net reset** command to reset the TVP-221H. The CLI will prompt you to confirm the command before resetting the TVP-221H.

Syntax Description

This command has no arguments or keywords

9 **net set gateway *ip_addr***

Use the **net set gateway** command to assign a default gateway (router) for the TVP-221H. The default gateway routes packet data outside of your IP subnet.

Syntax description

ip_addr The IP address of the default gateway. IP address of 0.0.0.0 stands for no default gateway.

Note

The new setting will not take effect until the TVP-221H is reset.

10 **net set http {on|off}**

The TVP-221H allows you enable or disable its built-in HTTP server. Use the **net set http** command to enable or disable the HTTP server.

Syntax description

on Enable HTTP server. This allows users to access the TVP-221H from web browser.

off Disable HTTP server.

11 **net set ip *ip_addr***

Use the **net set ip** command to assign a Static IP address to the TVP-221H.

Syntax description

ip_addr The IP address of the TVP-221H.

Note

The new IP address will not take effect until the TVP-221H is reset.

12 net set ip_preced ip_preced

The TVP-221H allows you to set the 3-bit IP precedence field in the IP header for all the voice packets it sends out. Use the **net set ip_preced** to set the IP precedence field.

Syntax description

ip_preced The IP precedence to be assigned to all the voice packets sent by the TVP-221H. The IP precedence must be in the range of 0 through 7.

Note: The new setting will not take effect until the TVP-221H is reset.

13 net set mask ip_mask

Use the **net set mask** command to set the IP subnet mask for the TVP-221H.

Syntax description

ip_mask The subnet mask of your network.

Note: The new setting will not take effect until the TVP-221H is reset.

14 net set speed {10|100|auto}

The TVP-221H allows you set the link speed for its Ethernet interface. Use the **net set speed** command to set the Ethernet link speed.

Syntax description

10 Fixed the Ethernet speed at 10 Mbps
100 Fixed the Ethernet speed at 100 Mbps
auto Enable the 10/100 Mbps auto-negotiation capability.

15 net set user_pw password password

Use the **net set user_pw** command to change the password for Telnet user.

Syntax description

password The new password. The password must be equal to or less than 7 alphanumeric characters. It must be identically typed twice for the TVP-221H to be certain about the new password.

16 net show

The **net show** command displays all the network settings.

Syntax Description

This command has no arguments or keywords

Example

The following example shows how to display network settings:

```
Console> net show <Enter>
***** Net Parameters *****
PPPoE =                disabled
DYN DNS =              disabled
DHCP client =          disabled
Configured IP address = 210.243.230.173.
Configured IP subnet mask = 255.255.255.248.
Default gateway IP address = 210.243.230.129.
Current active IP address = 210.243.230.173.
Current active subnet mask = 255.255.255.248.
IP precedence =        0 0 0 0
Ethernet MAC address =  00-50-2d-00-08-9d
Ethernet speed setting = 10/100 Mbps auto-negotiation
USER password =        123
HTTP server state =    disabled
Telnet server =        enabled
*****
Console>
```

17 net show hwstat

The **net show hwstat** command displays the hardware configuration of the TVP-221H.

Syntax Description

This command has no arguments or keywords

Example

The following example shows how to display hardware configuration:

```
Console>net show hwstat <Enter>
***** Hardware Configuration *****

Flash:  type-Am29LV160DB 32 sectors 64 KB/sector
RAM:    8 MB 512K x 16
LAN:    10 Mbps half duplex. Link UP

TIM slot A: type-FXO2S2 DSP-C549 codec-PEB2466 Diag-OK
*****
Console>
```

Configuration Management Commands

The configuration management commands allow the user to set values for system configuration parameters. In addition, it provides mechanisms to allow a user to control when new parameter values are put in use.

The CLI maintains three areas where the parameters are stored:

- Temporary
- Active
- Non-volatile Storage (NVS)

When a **set** command is entered and processed, it changes the parameter value in the Temporary area. This does not affect current operation of the TVP-221H, which is using the values in the Active area. The **config activate** command moves configuration data from the Temporary area to the Active area, where it can actually be used. Thus a user can make multiple changes in the Temporary area using **set** commands, then put them into use with a single **config activate** command. (Note that the **config activate** command may only be used between calls, and will usually tear down any in-progress calls when invoked.)

Configuration data in the Active area is only available while the TVP-221H remains in operation. If the TVP-221H is reset, the Active area is reloaded from the data stored in NVS. Data in the Active area may be saved to NVS by entering the **config store** command.

For most of the H.323 parameter, settings won't take effect until the TVP-221H reset. To ensure the H.323 setting to take effect, it is recommended to reset the TVP-221H after changing the settings using the **set** command.

In summary:

- Use **set** commands to make configuration parameters changes in the Temporary area
- Use the **config activate** command to move the new values into the Active area, available for use
- Use the **config store** command to save the new Active values in NVS
- Reset the TVP-221H after changing H.323 settings and storing the setting to NVS.

18 **config {activate|store|erase}**

Use the **activate** command to manage the configuration data. A sequence of **set** command is typically preceded by and/or followed by the **config** command for the **set** command to become active.

Syntax description

activate	Move the configuration from temporary area to active area.
store	Store the active configuration data into non-volatile storage.
erase	Erase the configuration from non-volatile storage.

19 **show h323**

The **show h323** command displays the settings of the parameter that are related to H323 signaling protocol.

Syntax Description

This command has no arguments or keywords

Example

The following example shows how to display the H323 parameters:

```
Console>show h323 <Enter>
h323 display_name = 'Customer'
h323 h245_term_type = 60
h323 rtp_port_base = 30000
h323 out_fast_start = off
h323 in_fast_start = off
h323 h245_tunneling = off
h323 cisco_t38 = on
h323 callSignalPort = 1720
h323 nat_call = on
h323 call_name =
h323 local_alert = off
h323 default_dtmf = H323 V2 Signal
No IMTC IP Defined!
h323 dns_ip = 0
h323 gk_mode = off
h323 h245_timeout = 30000
h323 term_id =
h323 wan_refresh = 120
h323 nat_name =
h323 wan_mode = off
h323 wan_port_gk = 0
h323 wan_port_gw = 0
h323 wan_max_retries = 10
h323 wan_lost_timer = 1
h323 wan_serv_ip = 0.0.0.0
Console>
```

20 **show version**

The **show version** command displays the version of various software components of the TVP-221H.

Syntax Description

This command has no arguments or keywords

21 **set h323 alias {add | del} {alias|all}**

The **set h323 endpoint_prefix** command is used to create and delete aliases that are registered with the Gatekeeper.

Syntax Description

add	Create an alias <i>alias</i>
del	Delete a previously created alias <i>alias</i>
<i>alias</i>	Alias to be created or deleted
all	Delete all previously created alias. This optional applies to del only

22 set h323 allow_call_wo_gk {true|false}

The **set h323 allow_call_wo_gk** command is used to inform the H.323 stack to allow incoming calls from a remote TVP-221H which is not registered with a gatekeeper.

Syntax Description

true	Allow calls from TVP-221H that is not registered with a gatekeeper.
false	Do not allow calls from TVP-221H that is not registered with a gatekeeper.

Default

The TVP-221H allows calls from TVP-221H that is not registered with a gatekeeper.

23 set h323 display_name *display_name*

The **set h323 display_name** command is used to set the display name information that is carried in the H.323 setup messages.

Syntax Description

<i>display_name</i>	The string to be is inserted into the Q.931 display information field and in the sourceAddress field 2 of the H.323 setup-UUIE .
---------------------	--

Example

The following example sets the h323 display name as “customer”.

```
Console> set h323 display_name customer
```

24 set h323 dtmf_duration *duration*

When sending DTMF, by default, the gateway will use H323 Version II standard DTMF signal except other specified (ex: IMTC_dtmf). User may specify the duration of the DTMF tone.

Syntax Description

<i>duration</i>	Duration for the DTMF tone in millisecond.
-----------------	--

Default

The default setting is 300 milliseconds.

25 **set h323 endpoint_reg_type {gw | terminal}**

The **set h323 endpoint_reg_type** command is used to set the H.323 registration type. This should not be confused with the H.245 terminal type, although the two parameters should be programmed consistently. This parameter specifies how the TVP-221H will register itself with the gatekeeper, and has nothing to do with master/slave determination.

Syntax Description

gw	The TVP-221H registers itself to gatekeeper as a H.323 Gateway
terminal	The TVP-221H registers itself to gatekeeper as a H.323 Terminal

Default

The TVP-221H registers to gatekeeper as a H.323 Gateway.

26 **set h323 gk_addr ip_addr**

The **set h323 gk_addr** command is used to specify the address of the gatekeeper when configured for manual mode.

Syntax Description

ip_addr	IP address of the H.323 gatekeeper
----------------	------------------------------------

27 **set h323 gk_max_tries count**

The **set h323 allow_call_wo_gk** command is used to control how many registration attempts will be made before the TVP-221H considers itself to have failed registration. Once this number of unsuccessful attempts has been made, the TVP-221H will only be able to place calls if **allow_calls_wo_gk** is true.

Syntax Description

count	Number of registration attempt
--------------	--------------------------------

Default

The default number of registration attempt is 2.

28 **set h323 gk_mode {off | manual}**

The H.323 protocol allows calls to be established through H.323 gatekeeper. The **set h323 gk_mode** command is used to specify if call is establishment through a gatekeeper.

Syntax Description

off	Disables gatekeeper operation
manual	Enables gatekeeper in manual discovery mode. The <code>gk_addr</code> must be set appropriately.

Default

The gatekeeper operation is disabled.

29 **set h323 h245_term_type** *terminal type*

The **set h323 h245_term_type** command is used to set the H.245 terminal type. The terminal type is used as part of the master/slave determination process of H.245.

Syntax Description

<i>termmal_type</i>	A numerical value designating the H245 terminal type. Typically, setting the H.245 terminal type to a value less than 50 will force slave operation, and a value greater than 200 will force master operation
---------------------	---

Example

The following example sets the h245 terminal type to 60.

```
Console> set h323 h245_term_type 60
```

30 **set h323 imtc_dtmf** {add|del} *ip_addr*

There are two ways VoIP gateway handles DTMF relay, per H.323 and IMTC specifications. By default, the TVP-221H conveys DTMF digits in H.323 format. The **set h323 imtc_dtmf** command is used to specify how DTMF digits are to be conveyed to a remote VoIP device.

Syntax Description

add	TVP-221H sends DTMF digit to the remote VoIP device designated by IP address <i>ip_addr</i> in IMTC conforming format.
del	TVP-221H sends DTMF digit to the remote VoIP device designated by IP address <i>ip_addr</i> in H.323 format.
<i>ip_addr</i>	IP address of the remote TVP-221H

Default

The TVP-221H sends DTMF digits in H.323 format, unless the call is destined for a remote VoIP device whose IP address has been **set h323 imtc_dtmf added**.

31 **set h323 in_fast_start {on|off}**

The **set h323 in_fast_start** command is used to select the H.323 Fast start mode on for calls initiated from remote TVP-221Hs.

Syntax Description

on Set H323 Fast start mode on

off Set H323 Fast start mode off

The default setting is off.

32 **set h323 nat_call {on|off}**

When the TVP-221H is installed in a network that connects to WAN via a router with Network Address Translation (NAT) feature, the NAT might block calls. The **set h323 nat_call** command is used to enables the TVP-221H to connect to remote TVP-221Hs connecting to WAN via NAT capable router.

Syntax Description

on Enable.

off Disable.

The default setting is on.

33 **set h323 out_fast_start {on|off}**

The **set h323 out_fast_start** command is used to select the H.323 Fast start mode on for calls making toward remote TVP-221Hs.

Syntax Description

on Set H323 Fast start mode on

off Set H323 Fast start mode off

The default setting is off.

34 **set h323 rtp_port_base *port_base***

The **set h323 rtp_port_base** command is used to select the starting port number for assignment of RTP ports. When a calls are made to remote TVP-221Hs, an RTP port is opened for each call. The TVP-221H uses the *port_base* as the RTP port number for the first call, the next call uses the next successive port, and so on.

Syntax Description

port_base The starting port number for the assignment of RTP port. If rtp_port_base is assigned a value of 0, the assignment of port number will be dynamic. The port number can be specified from 0 to 32767. Typically, numbers from 0 to 1023 are reserved on most systems. The recommended value is 30000.

Example

The following example sets RTP base port number to 30000.

```
Console> set h323 rtp_port_Base 30000
```

Dial Plan Management Commands

Among the command sets supported by the CLI, the dial plan management commands are the most sophisticated. Some of the dial plan management commands are only allowed when the TVP-221H is in the atpm table update state. For ease of explaining, this command set is further categorized into several sub command sets.

Sub command set	Purposes	Commands	atpm table update state required?
Database update control	<ul style="list-style-type: none">• Instruct the TVP-221H to start or stop atpm table update state.• Store/restore atpm tables to/from non-volatile storage• Purge atpm tables• Erase dial plan database from non-volatile storage	atpm req atpm done atpm restore atpm store atpm purge atpm erase	No No Yes No Yes No
Destination table management	Manage atpm destination table	atpm dadd atpm ddel atpm dfind atpm dlist	Yes Yes No No
Hunt group table management	Manage atpm hunt group table	atpm hadd atom hdel atpm hfind atpm hlist	Yes Yes No No
Address table management	Manage atpm address table	atpm aadd atpm adel atpm afind atpm alist	Yes Yes No No
System	Manage atpm system configuration	atpm slist atpm sys	No Yes

The following sections describe each sub command set and the commands.

35 Database Update Control Commands

36 **atpm done**

The **atpm done** command ends the atpm table update session and re-enables the address translation.

Syntax description

This command has no arguments or keywords

37 **atpm erase**

The **atpm erase** command erases the dial plan database from the non-volatile memory.

Syntax description

This command has no arguments or keywords

38 **atpm purge {all|addr|dest|hunt}**

Use the **atpm purge** command to delete all entries from the atpm tables.

Syntax description

all	Delete all entries from atpm address, destination and hunt group tables.
addr	Delete all entries from atpm address table.
dest	Delete all entries from atpm destination table.
hunt	Delete all entries from atpm hunt group table.

39 **atpm req**

The **atpm req** command starts the atpm table update session. Upon starting the atpm table update session, the ATPM address translation is disabled, hence no phone call can be made, until a **atpm done** command is issued.

Syntax description

This command has no arguments or keywords

40 **atpm restore**

The **atpm restore** command restores the whole dial plan from non-volatile storage to the atpm address, destination and hunt group tables.

Syntax description

This command has no arguments or keywords

41 **atpm store [erase]**

The **atpm store** command store all atpm tables into non-volatile memory.

Syntax description

erase (Optional) Erase the non-volatile before storing the dial plan database. This option is not recommended except the very first time you use the **atpm store** command.

Destination Table Management Commands

43 **atpm dadd *dest_id* port *port#***

The **atpm dadd *dest_id* port** command adds a local destination entry into the atpm destination table. A local destination entry is one of the telephony ports on the TVP-221H.

Syntax description

dest_id Destination ID. For each destination, you need to assign it a unique identifier between 1 and 65536.

port# The number of the telephony port.

Example

The following example shows how to assign ID 1 to the first telephone port and add an entry in the destination table designating it.

```
Console>atpm dadd 1 port 0 <Enter>
```

44 **atpm dadd *dest_id* h323 *dest_ip_addr* [*ip_port*]**

The **atpm dadd *dest_id* h323** command adds a h323 type remote destination entry into the atpm destination table. A remote destination entry is typically another TVP-221H or H323 gateway.

Syntax description

dest_id Destination ID. For each destination, need to assign it a unique identifier between 1 and 65536.

dest_ip_addr The IP address of the remote destination.

ip_port (Optional) Base port number the TVP-221H uses to establish voice with that remote destination.

Example

The following example shows how to add a remote destination whose IP address is 192.168.0.3 to the destination table and assign an ID 200 to that destination.

```
Console>atpm dadd 200 h323 192.168.0.3 <Enter>
```

45 **atpm ddel *dest_id***

The **atpm ddel** command deletes an entry from the atpm destination table.

Syntax description

dest_id ID of a previously added destination entry to be deleted from destination table.

46 **atpm dfind *dest_id***

The **atpm dfind** finds and display an entry in the destination table.

Syntax description

dest_id ID of a previously added destination entry to be displayed.

Example

The following example shows how to display a destination whose ID is 200.

```
Console>atpm dfind 200 <Enter>
Dest id  Mode  Destination
-----
   200  H.323  Dest = 192.168.0.3/1720 TCP
OK
Console>
```

47 **atpm dlist**

The **atpm dlist** displays all entries in the destination table.

Syntax description

This command has no arguments or keywords

Example

```
Console>atpm dlist
Dest id  Mode  Destination
-----
   1  Local  PORT = 0
   2  Local  PORT = 1
   3  Local  PORT = 2
   4  Local  PORT = 3
```



```
11 H.323 Dest = 210.243.230.167/1720 TCP
```

```
OK  
Console>
```

48 Hunt Group Table Management Commands

49 **atpm hadd hunt_group_id {1|2} dest_id [desi_id2] ...**

Use the **atpm hadd** command to add an entry into the atpm hunt group table.

Syntax description

<i>hunt_group_id</i>	Hunt group ID. For each hunt group, you need to assign it a unique identifier between 1 and 65536.
<i>1</i>	Hunt type 1. Hunt type 1 hunts destination within a hunt group starting from the destination member just after the last used member.
<i>2</i>	Hunt type 2. Hunt type 2 hunts destination within a hunt group starting from the first destination member.
<i>dest_id1</i>	ID of the first destination member in the hunt group.
<i>dest_id2</i> <i>dest_id3 ...</i>	(Optional)List of ID's of additional destination members in the hunt group.

Example

The following example shows how to group destination 1, 2, 3 and 4 into a hunt group, assign it hunt group ID 10, and specify hunt type 2 for this hunt group.

```
Console>atpm hadd 10 2 1 2 3 4<Enter>
```

50 **atpm hdel hunt_group_id**

The **atpm hdel** command deletes an entry from the atpm hunt group table.

Syntax description

hunt_group_id ID of the hunt group to be deleted from the hunt group table.

51 **atpm hfind hunt_group_id**

The **atpm hfind** finds and display an entry in the hunt group table.

Syntax description

hunt_group_id ID of the hunt group to be displayed.

52 atpm hlist

The **atpm hlist** display all entries in the hunt group table.

Syntax description

This command has no arguments or keywords

Example

```
Console>atpm hlist
Group id  Type  #Members  Member ids
-----
   1     2     1     1
   2     2     1     2
   3     2     1     3
   4     2     1     4
  11     2     1    11

OK
Console>
```

Address Table Management Commands

53 atpm add tel# min_digits max_digits hunt_group_id prefix_strip_len [prefix#]

Use the **atpm add** command to add an entry into the atpm address table.

Syntax description

tel#	Telephone number to match. This is only part of the total dialed string.
min_digits	Minimum number of digits to be collected before the ATPM starting matching the dialed string with entries in the address table.
max_digits	Maximum number of digits to be collected before the ATPM starting matching the dialed string with entries in the address table.
hunt_group_id	Hung group ID for this telephone number
prefix_strip_len	The number of digits to be stripped at the beginning of the collected dial string before forwarding the string to the destination.
prefix#	(Optional) Digit to be added before the beginning of the collected dial string before forwarding it to the destination.

54 atpm adel tel#

The **atpm adel** command deletes an entry from the atpm address table.

Syntax description

tel# Number of a previously added entry to be deleted from the atpm address table.

55 **atpm afind *tel#***

The **atpm afind** finds and display an entry in the address table.

Syntax description

tel# Number of a previously added entry in the atpm table to be displayed.

56 **atpm alist**

The **atpm alist** displays all entries in the address table.

Syntax description

This command has no arguments or keywords

Example

```
Console>atpm alist
Address      Hunt  Min  Max  Prefix Prefix
Entry        Grp_Id Digits Digits strip Address
103          3    0   16   0   None
104          4    0   16   0   None
201          1    1    3    3   None
202          2    1    3    3   None
203          3    1    3    3   None
204          4    1    3    3   None
666          11   3    3    0   None

OK
Console>
```

System Commands

57 **atpm slist**

The **atpm slist** displays the atpm system table.

Syntax description

This command has no arguments or keywords

Example

```
Console>atpm slist
System Info: Total dial time = 30000ms, First digit wait = 10000ms,
             Interdigit wait = 5000ms, Dial term digit = None

OK
Console>
```

58 atpm sys dial_time 1st_digit_wait inter_digit_wait [dial_term_digit]

Use the **atpm sys** command to set the time constraints for collection of dial digits.

Syntax description

<i>dial_time</i>	The maximum time, in millisecond, allowed for entry of the entire string of dial digits. At expiration, ATPM starts address lookup.
<i>1st_digit_wait</i>	The maximum time, in millisecond, allowed between off-hook and when the first dial digit is entered. At expiration, ATPM considers address lookup to fail.
<i>inter_digit_wait</i>	The maximum time allowed between entries of each digit after the previous digit. At expiration, ATPM starts address lookup.
<i>dial_term_digit</i>	(Optional) End of the dial string is declared when the digit is entered.

Tel Commands

59 tel show tel_id

The **tel show tel_id** command to display the line impedance setting of the line interface

Syntax Description

This command has no arguments or keywords

60 tel show port [port#]

The **tel show port** command displays the hook state of a telephony port.

Syntax Description

port# Number of the port.

Default: If the port number is not specified, the CLI displays hook state of all telephony ports.

61 **tel show ring_freq**

The **tel show ring_freq** command displays the frequency of the ring signal that the TVP-221H sends to FXS ports..

Syntax Description

This command has no arguments or keywords

62 **tel set tel_id {1~10}**

The FXO ports might be connected to different transmission media e.g.(central office switch or PBX) via local loop which may have different line impedance, For compatible the line impedance in the local loop, the **tel set tel_id** command is used to set the Line impedance for GW line interface .

Syntax Description

1	600 ohms
2	900 ohms
3	220+820//115nF (Germany)
4	200+680//100nF (China)
5	370+620//310nF (UK)
6	180+910//150nF (France)
7	270+750//150nF (Sweden)
8	120+820//110nF (Norway)
9	150+830//72nF (Belgium)
10	400+500//330nF (Denmark)

Default

The default setting is 1.

63 **tel set ring_freq {1|2|3|4}**

Use the **tel set ring_freq** command to set the frequency of the ringer TVP-221H uses to ring a FXS port.

Syntax Description

1	Set ring freq to 17 Hz
2	Set ring freq to 20 Hz
3	Set ring freq to 25 Hz
4	Set ring freq to 50 Hz

64 Obsolete Commands

Some of the CLI commands previously supported by version 2.0x software or older versions are no longer supported. The following table lists the obsolete commands and commands CLI current supports that serve the equivalent functions:

<u>Obsolete Command</u>	<u>New Command</u>
activate	config activate
commit	config store
flash clean config	config erase
flash clean dial_plan	atpm erase

Upgrading the TVP-221H

This chapter explains how to upgrade your TVP-221H when new revision software becomes available. Upgrades may improve system functionality or add new features to your TVP-221H.

The TVP-221H offers two operation modes. Under normal conditions, the TVP-221H operates in regular operational mode. When software upgrade is required, the TVP-221H may be operated in download mode. Under download mode, the CLI will support limited commands allowing users to read new revision codes from a remote TFTP server and write it to the built-in flash non-volatile storage.

The CLI under download differs from normal in the prompts and that it supports less commands.

3.1 Entering Download Mode

To switch from normal operation mode to download mode, use the **download** CLI command.

```
Console>download<Enter>
```

Note: To be able to switch to download mode from Telnet session, the TFTP loader on the TVP-221H must be version 3.00 or higher.

The TVP-221H will terminate all on-going calls, shut down itself, reset and enter download mode. If you enter download mode from Telnet session. The Telnet session will be terminated too. You need to connect to the TVP-221H from Telnet client again to be able to access the CLI commands. Refer to Section Connection through Telnet in Chapter 8 for detailed information on how to connect to TVP-221H from Telnet client.

Upon entering the download mode, the CLI will show the following prompt.

```
ETVP-221HLoader>
```

3.2 CLI Commands in Download Mode

Under download mode, the CLI supports the following commands:

Command	Description
help	Display help screen
quit	Terminate download mode, switch to normal operation mode.
set	Change IP parameter
start	Start downloading code from TFTP server

The following section describes each of the commands.

37 help

The **help** command lists the top-level commands.

Syntax Description

This command has no arguments or keywords

38 quit

The **quit** command is used to terminate the download mode and return to normal operation mode.

Syntax Description

This command has no arguments or keywords

Note

Switching mode from Telnet session will terminate current active session. You'll need to connect to TVP-221H again to be able to access the CLI.

39 set ip *ip_addr*

Use the **set ip** command to assign a static IP address to the TVP-221H.

Syntax description

ip_addr The IP address of the TVP-221H.

Note

The new IP address will not take effect until the TVP-221H is reset.

40 **set gateway *ip_addr***

Use the **set gateway** command to assign a default gateway (router) for the TVP-221H. The default gateway routes packet data outside of your IP subnet.

Syntax description

ip_addr The IP address of the default gateway. IP address of 0.0.0.0 stands for no default gateway.

Note

The new setting will not take effect until the TVP-221H is reset.

41 **set mask *ip_mask***

Use the **set mask** command to set the IP subnet mask for the TVP-221H.

Syntax description

ip_mask The subnet mask of your network.

Note

The new setting will not take effect until the TVP-221H is reset.

42 **start**

Use the **start** command to start downloading code from TFTP server. The TVP-221H will prompt you for the IP address of the TFTP server and the file to download.

Syntax description

This command has no arguments or keywords



3.3 Appendix A - Technical Specifications

TVP-221H Technical Specifications

Telephony Interface	
Physical interface	Desktop with 4 Analog Ports <ul style="list-style-type: none">• Loop start 2 x FXO (RJ-11)• Loop start 2 x FXS (RJ-11)
Programmable line interfaces	Complex line impedance
Protocols	H.323v3 (Normal/fast-start mode) Supports gateway-gateway direct routing and gateway-gatekeeper assisted routing mode
Voice coders support	ITU-T G.711 u-law, G.723.1, and G.729A/B, auto-switching (Frame-rate/packet: 1 – 8)
Fax	Supports T.30 G3 fax on PSTN Interface; ITU-T T.30 fax spoofing; ITU-T T.38
Simultaneous connections	4 channels voice/fax
Media processing	Gain control; G.168 echo cancellation (16 ms); Voice activity detection (VAD); Comfort noise generation (CNG); Call progress detection; DTMF detection/filtering/regeneration (H.323v3/IMTCv1)
Data Network Interface	
Physical interface	LAN: 1 (10Base-T/100Base-TX, Auto-Negotiation, Auto MDIX)
Protocols	TCP/IP, DHCP, HTTP, DNS
Advanced functions	IP Precedence, PLAR, DDNS

System	
Call Control	Built-in three-tier dialing plan and destination hunting Supports gatekeeper authorization and accounting Supports gatekeeper call routing control and gateway mapping Call accounting information on gateway (via RS-232) or gatekeeper
Management	RS-232 (DCE mode) Built-in HTTP Web-based remote management Telnet remote management
System upgrade	Flash memory and built-in TFTP allowing firmware and feature upgrade via network
LED Indicators	System: 2 Power, System LAN: 4, Link/ACT, Speed, Collision Voice: 2 per channel (Ringing, Active)
Interoperability	Microsoft NetMeeting*; Cisco AS5300, 3600; RADVISION gatekeeper; Cisco gatekeeper
Dimensions (L X W X H)	241 x 135 x 45 mm (9.5 x 4.3 x 1.8 inches)
Weight	1.9 kg (4.2 lb)
Input Voltage, AC	90-260 VAC, auto ranging, 50-60 Hz
Power Requirement	12V DC, 2.0A
Operating environment	Operating temperature: 0° ~ 50° C (32° ~ 122° F) Humidify: 90% (non-condensing)
Certifications	CE; FCC, UL

Telephony Line Module Specifications

FXO Ports	
Signaling	Loop start/DTMF
Number of channels	2
Interface connectors	2 RJ-11 2-pin modular jacks
Line impedance	600Ω □ 900 Ω □ Complex line impedance
Insertion loss	2 dB nominal
Frequency response	300 Hz ~ 3400 Hz +/- 2 dB w.r.t. 1004 Hz
Return loss	□ 18 dB
Input level adjustment	-6 dB to +6 dB
Output attenuation	0 dB to 13 dB
Longitudinal balance	□ 45 dB
Disconnect detection	Loop current; Customizable tone detection
FXS Ports	
Signaling	Loop start/DTMF
Number of channels	2
Interface connectors	2 RJ-11 2-pin modular jacks
Line impedance	600Ω □ 900 Ω □ Complex line impedance
Insertion loss	2 dB nominal
Frequency response	300 Hz ~ 3400 Hz +/- 2 dB w.r.t. 1004 Hz
Return loss	□ 18 dB
Input level adjustment	-6 dB to +6 dB
Output attenuation	0 dB to 13 dB
Longitudinal balance	□ 45 dB
Loop current	25 mA nominal
Ring voltage	40 Vrms nominal
Ringing tone	16.67 Hz, 20 Hz (default), 25 Hz or 50 Hz
Disconnect detection	Loop current

Console Port


The console port uses a DB-9 RS-232 connector. The supplied straight through RS-232 cable connects the console port of the TVP-221H to a console PC or terminal. Pin assignment for the port is described in the following table.

DB-9 pin	Signal
1	Not connected
2	TxD
3	RxD
4	Not connected
5	Ground
6	Not connected
7	Not connected
8	Not connected
9	Not connected

LAN Port

The 10/100 LAN port use standard RJ-45 connector and Ethernet pin assignment. The following diagram and table show the pin assignment on the port connector. When connecting the LAN port to switches or repeaters, you must use a straight-through cable.


RJ45 pin	Signal
1	RxD+
2	RxD-
3	TxD+
4	Not connected
5	Not connected
6	TxD-
7	Not connected
8	Not connected

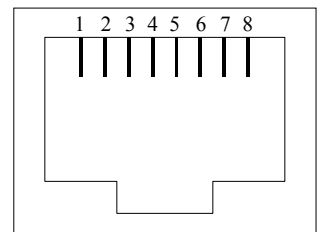

FXO Port Pin Assignments

The FXO Telephony Interface Module has 2 RJ11C/W modular jacks. The following diagram and table show the assignments of the pin for the RJ11 port.


RJ-11 pin	Signal
1	Not connected
2	Tip
3	Ring
4	Not connected

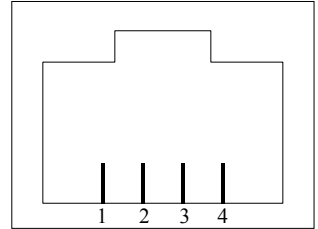

FXS Port Pin Assignments

The FXS Telephony Interface Module has 2 RJ11C/W modular jacks. The following diagram and table show the assignments of the pin for the RJ11 port.

RJ-11 pin	Signal
1	Not connected
2	Tip
3	Ring
4	Not connected

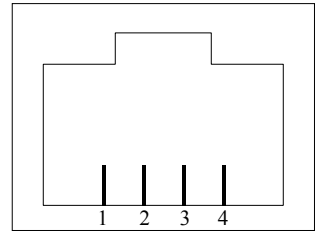

3.4 Appendix B - CLI Commands

Normal Mode Commands

Command	Description	Page
atpm aadd	Add an entry to the address table	34
atpm adel	Delete an entry from the address table	34
atpm afind	Find and display an entry in the address table	35
atpm alist	Display all entries in the address table	35
atpm dadd	Add an entry to the destination table	31
atpm ddel	Delete an entry from the destination table	32
atpm dfind	Find and display an entry in the destination table	32
atpm dlist	Display all entries in the address table	32
atpm hadd	Add an entry to the hunt group table	33
atpm hdel	Delete an entry from the hunt group table	33
atpm hfind	Find and display an entry in the hunt group table	33
atpm hlist	Display all entries in the hunt group table	34
atpm done	End the atpm table update session	30
atpm erase	Erase all atpm tables from NVS	30
atpm purge	Purge entries from atpm table(s)	30
atpm req	Start atpm table update session	30
atpm restore	Restore atpm tables from NVS	30
atpm store	Store atpm tables into NVS	31
atpm slist	Display atpm system parameters	35
atpm sys	Set atpm system parameters	36
config activate	Move the configuration from temporary area to active area.	23
config erase	Erase the configuration from NVS	23
config store	Store the active configuration data into NVS	23
clrscr	Clear screen	18
download	Switch to download mode	18

help	Display help screen	18
net reset	Reset the system	20
net set gateway	Set default gateway's IP address	20
net set http	Turn on/off HTTP server	20
net set ip	Set IP address	20
net set ip_preced	Set IP precedence bits	21
net set mask	Set IP subnet mask	21
net set speed	Select Ethernet link speed	21
net set user_pw	Set password	21
net show	Display IP parameters	21
net show hwstat	Display hardware status	22
ping	Send ICMP echo request to another host	19
show h323	Display H.323 parameter settings	24
show version	Show software versions	24
set h323	Set H.323 parameters	24 - 28
tel show tel_id	Display line impedance setting.	36
tel show port	Display hook state for a telephony port	36
tel show ring_freq	Show ringer's frequency	37
tel set tel_id	Set line impedance for GW line interface	36
tel set ring_freq	Set ringer's frequency	37

Download Mode Commands

Command	Description	Page
Help	Display help screen	40
Quit	Switch to normal operation mode	40
set gateway	Set default gateway 's IP address	40
set ip	Set IP address	40
set mask	Set IP subnet mask	41
start	Start downloading file	41

3.5 Appendix C - Factory Default Settings

The following table lists the settings of certain parameters before the TVP-221H is shipped.

Parameter	Default Setting
Network	
PPPoE	disabled
DYN DNS	disabled
DHCP client	disabled
Configured IP address	192.168.0.1
Configured IP subnet mask	255.255.255.0
Default gateway IP address	0.0.0.0
Current active IP address	192.168.0.1
Current active subnet mask	255.255.255.0
IP precedence	0 0 0 0
Ethernet MAC address	00-50-2d-xx-xx-xx
Ethernet link speed	10/100 auto-negotiation
User ID for HTTP browser and Telnet client login	admin
Password for HTTP browser and Telnet access login	123
HTTP server	enabled
Telnet server	enabled
Serial port (Fixed)	
Baud rate	19,200
Number of data bit	8
Parity check	None
Number of stop bit	1
Flow control	None
H.323	
h323 display_name	customer
h323 h245_term_type	60
h323 rtp_port_base	30,000

h323 out_fast_start	Off
h323 in_fast_start	Off
h323 h245_tunneling	Off
h323 cisco_t38	Off
h323 callSignalPort	1720
h323 call_name	None
h323 local_alert	Off
h323 default_dtmf	H323 V2 Signal
h323 gk_mode	Off
h323 h245_timeout	30000
h323 term_id	None
Voice codec	
Preferred voice codec	G.723 6.3kbps
Telephony	
PCM codec receiver gain for FXO ports	-1 dB

3.6 Appendix D - Worksheets

IP Parameters

Consult your network manager to obtain a static IP address for the TVP-221H, and the information about the IP subnet mask and the default gateway for your network. Fill out the following work sheet before configuring the TVP-221H.

IP address _____

IP subnet mask _____

Default gateway _____

ATPM Destination Table

Local Destinations

Each telephony port of the TVP-221H must be assigned a unique destination ID. Fill out the worksheet for local destinations by designating each port a unique destination ID, then use the CLI command **atpm dadd dest_id port port#** for each entry in the worksheet to add it to the destination table. The *dest_id* in the command corresponds to the Destination ID in the worksheet, while the *port#* corresponds to the Port#. You may alternatively use the web browser to add local destinations to the destination table.

Port#	Mode	Destination ID
0	port	
1	port	
2	port	
3	port	

Remote Destinations

Index

A

- Address Table Management
 - Commands.....35
- ATPM.....5, 14, 51

B

- Baud rate16

C

- Command Line Interface.....
 - See* CLI
- CLI5, 16,41,47
- clrscr.....18
- CNG11
- Command Help17
- Command Reference17
- config18
- Configuration Management
 - Commands.....24
- Console.....45

D

- Database Update Control
 - Commands.....31
- Designating IP Address.....17
- Designating Port Num.....17
- Dial Plan Management
 - Commands.....30
- Download Mode.....40, 48
- DSP5
- DTMF....., 14, 28

F

- Factory Default Settings.....49
- Front Panel12, 13
- FXO.....5
- FXO Port Pin Assignments46
- FXS5
- FXS Port Pin Assignments46

G

- Gateway.....11

H

- H.3235, 14
- help.....14, 18, 41

I

- ICMP5
- IMTC.....5

- Internet Telephony Gateway11
- IP Parameters51

K & L

- KTS5, 11
- LAN Port.....45
- LED.....5, 12

N

- Network Commands.....21
- NVS.....5

P

- PBX.....5,11
- PSTN.....5

R

- real-time11
- Rear Panel13
- Reset Button.....13
- RTOS11
- RTP5,12

S

- Serial Port.....
 - See* Console
- System Commands.....37

T

- TCID6
- Technical Specifications43
- Tel Commands38
- Telnet16
- TFTP6
- TIM6
- TNV6

U

- UDP.....6
- Upgrading40
- Utility Command.....19
- UTP6

V

- VAD.....6, 11
- VoIP11

W

- WAN6
- Worksheet51



Product Warranty Registration

Please take a moment to register your product online.
Go to TRENDware's website at <http://www.TRENDNET.com>

TRENDnet Technical Support

US/Canada Support Center	European Support Center
Contact Telephone: 1(310) 626-6252 Fax: 1(310) 626-6267 Email: support@trendnet.com	Contact Telephone Deutsch : +49 (0) 6331 / 268-460 Français : +49 (0) 6331 / 268-461 Español : +49 (0) 6331 / 268-462 English : +49 (0) 6331 / 268-463 Italiano : +49 (0) 6331 / 268-464 Dutch : +49 (0) 6331 / 268-465 Fax: +49 (0) 6331 / 268-466
Tech Support Hours 7:30am - 6:00pm Pacific Standard Time Monday - Friday	Tech Support Hours 8:00am - 6:00pm Middle European Time Monday - Friday

TRENDware International, Inc.
3135 Kashiwa Street. Torrance, CA 90505
<http://www.TRENDNET.com>