


Service Manual

Pioneer

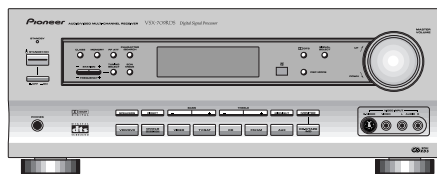

ORDER NO.
RRV2274

AUDIO/VIDEO MULTI-CHANNEL RECEIVER

VSX-709RDS VSX-609RDS

THIS MANUAL IS APPLICABLE TO THE FOLLOWING MODEL(S) AND TYPE(S).

Type	Model		Power Requirement	Remarks
	VSX-709RDS	VSX-609RDS		
MYXJIEW	○	○	AC220-230V	
MYXJIGR	○	○	AC220-230V	
MVXJI	○	○	AC230V	

CONTENTS

1. SAFETY INFORMATION	2	7. GENERAL INFORMATION	49
2. EXPLODED VIEWS AND PARTS LIST	3	7.1 DISASSEMBLY	49
3. BLOCK DIAGRAM AND SCHEMATIC DIAGRAM	8	7.2 PARTS	50
4. PCB CONNECTION DIAGRAM	28	7.2.1 IC	50
5. PCB PARTS LIST	43	7.2.2 DISPLAY	55
6. ADJUSTMENT	48	8. PANEL FACILITIES AND SPECIFICATIONS	57

PIONEER CORPORATION 4-1, Meguro 1-chome, Meguro-ku, Tokyo 153-8654, Japan
PIONEER ELECTRONICS SERVICE, INC. P.O. Box 1760, Long Beach, CA 90801-1760, U.S.A.
PIONEER EUROPE N.V. Haven 1087, Keetberglaan 1, 9120 Melsele, Belgium
PIONEER ELECTRONICS ASIACENTRE PTE. LTD. 253 Alexandra Road, #04-01, Singapore 159936
 ©PIONEER CORPORATION 2000

1. SAFETY INFORMATION

This service manual is intended for qualified service technicians ; it is not meant for the casual do-it-yourselfer. Qualified technicians have the necessary test equipment and tools, and have been trained to properly and safely repair complex products such as those covered by this manual. Improperly performed repairs can adversely affect the safety and reliability of the product and may void the warranty. If you are not qualified to perform the repair of this product properly and safely, you should not risk trying to do so and refer the repair to a qualified service technician.

WARNING

This product contains lead in solder and certain electrical parts contain chemicals which are known to the state of California to cause cancer, birth defects or other reproductive harm.

Health & Safety Code Section 25249.6 – Proposition 65

NOTICE

(FOR CANADIAN MODEL ONLY)

Fuse symbols  (fast operating fuse) and/or  (slow operating fuse) on PCB indicate that replacement parts must be of identical designation.

REMARQUE

(POUR MODÈLE CANADIEN SEULEMENT)

Les symboles de fusible  (fusible de type rapide) et/ou  (fusible de type lent) sur CCI indiquent que les pièces de remplacement doivent avoir la même désignation.


(FOR USA MODEL ONLY)

1. SAFETY PRECAUTIONS

The following check should be performed for the continued protection of the customer and service technician.

LEAKAGE CURRENT CHECK

Measure leakage current to a known earth ground (water pipe, conduit, etc.) by connecting a leakage current tester such as Simpson Model 229-2 or equivalent between the earth ground and all exposed metal parts of the appliance (input/output terminals, screwheads, metal overlays, control shaft, etc.). Plug the AC line cord of the appliance directly into a 120V AC 60Hz outlet and turn the AC power switch on. Any current measured must not exceed 0.5mA.

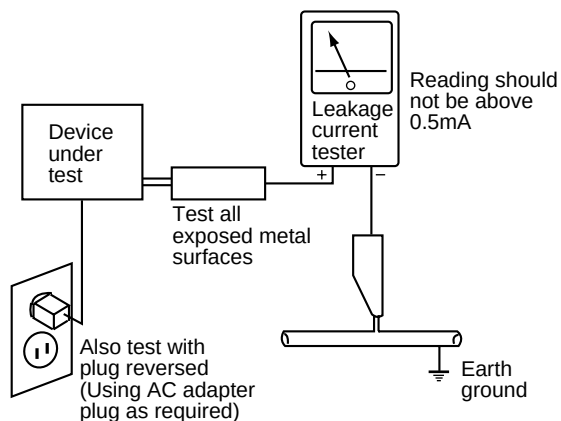

AC Leakage Test

ANY MEASUREMENTS NOT WITHIN THE LIMITS OUTLINED ABOVE ARE INDICATIVE OF A POTENTIAL SHOCK HAZARD AND MUST BE CORRECTED BEFORE RETURNING THE APPLIANCE TO THE CUSTOMER.

2. PRODUCT SAFETY NOTICE

Many electrical and mechanical parts in the appliance have special safety related characteristics. These are often not evident from visual inspection nor the protection afforded by them necessarily can be obtained by using replacement components rated for voltage, wattage, etc. Replacement parts which have these special safety characteristics are identified in this Service Manual.

Electrical components having such features are identified by marking with a Δ on the schematics and on the parts list in this Service Manual.


The use of a substitute replacement component which does not have the same safety characteristics as the PIONEER recommended replacement one, shown in the parts list in this Service Manual, may create shock, fire, or other hazards.

Product Safety is continuously under review and new instructions are issued from time to time. For the latest information, always consult the current PIONEER Service Manual. A subscription to, or additional copies of, PIONEER Service Manual may be obtained at a nominal charge from PIONEER.

2. EXPLODED VIEWS AND PARTS LIST

NOTES: ● Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.
 ● The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
 ● Screws adjacent to ∇ mark on the product are used for disassembly.

2.1 PACKING

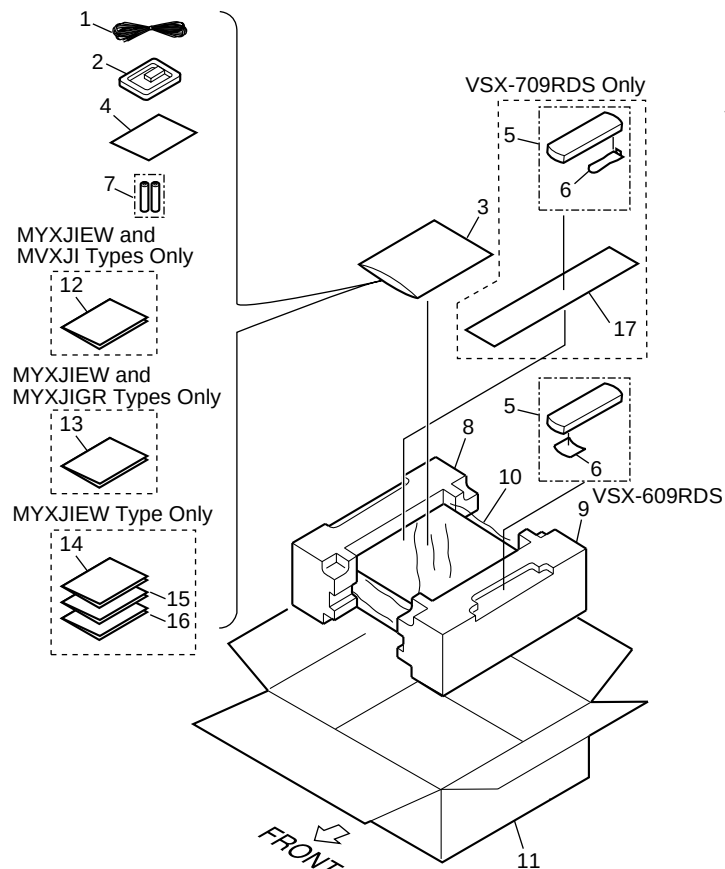

(1) PACKING PARTS LIST


Mark	No.	Description	Part No.
	1	FM Wire Antenna	ADH7005
	2	AM Loop Antenna	ATB7009
	3	Polyethylene Bag (0.03 × 230 × 340)	Z21-038
NSP	4	Warranty Card	ARY7022
	5	Remote Control Unit	See Contrast table (2)
NSP	6	Battery Cover	See Contrast table (2)
	7	Dry Cell Battery	See Contrast table (2)
	8	Left Pad	AHA7263
	9	Right Pad	AHA7264
	10	Packing Sheet	AHG7069
	11	Packing Case	See Contrast table (2)
	12	Operating Instructions (English)	See Contrast table (2)
	13	Operating Instructions (German)	See Contrast table (2)
	14	Operating Instructions (Spanish/Portuguese)	See Contrast table (2)
	15	Operating Instructions (Italian/French)	See Contrast table (2)
	16	Operating Instructions (Dutch/Swedish)	See Contrast table (2)
	17	RC Holder	See Contrast table (2)

(2) CONTRAST TABLE

VSX-709RDS/MYXJIEW, MYXJIGR, MVXJI, VSX-609RDS/MYXJIEW, MYXJIGR and MVXJI are constructed the same except for the following :

Mark	No.	Symbol and Description	Part No.						Remarks
			VSX-709RDS			VSX-609RDS			
			/MYXJIEW/	/MYXJIGR/	/MVXJI/	/MYXJIEW/	/MYXJIGR/	/MVXJI/	
NSP NSP	5	Remote Control Unit	AXD7249	AXD7249	AXD7249	AXD7247	AXD7247	AXD7247	
	6	Battery Cover	AZN7826	AZN7826	AZN7826	AZA7378	AZA7378	AZA7378	
	7	Dry Cell Battery (LR6, AA)	VEM1021	VEM1021	VEM1021	Not used	Not used	Not used	
	7	Dry Cell Battery (R6P, AA)	Not used	Not used	Not used	VEM-013	VEM-013	VEM-013	
	11	Packing Case	AHD7832	AHD7832	AHD7832	AHD7831	AHD7831	AHD7831	
	12	Operating Instructions (English)	ARB7215	Not used	ARB7215	ARB7215	Not used	ARB7215	
	13	Operating Instructions (German)	ARC7273	ARC7273	Not used	ARC7273	ARC7273	Not used	
	14	Operating Instructions (Spanish/Portuguese)	ARC7274	Not used	Not used	ARC7274	Not used	Not used	
	15	Operating Instructions (Italian/French)	ARC7275	Not used	Not used	ARC7275	Not used	Not used	
	16	Operating Instructions (Dutch/Swedish)	ARC7276	Not used	Not used	ARC7276	Not used	Not used	
	17	RC Holder	AHB7035	AHB7035	AHB7035	Not used	Not used	Not used	

2.2 EXTERIOR SECTION

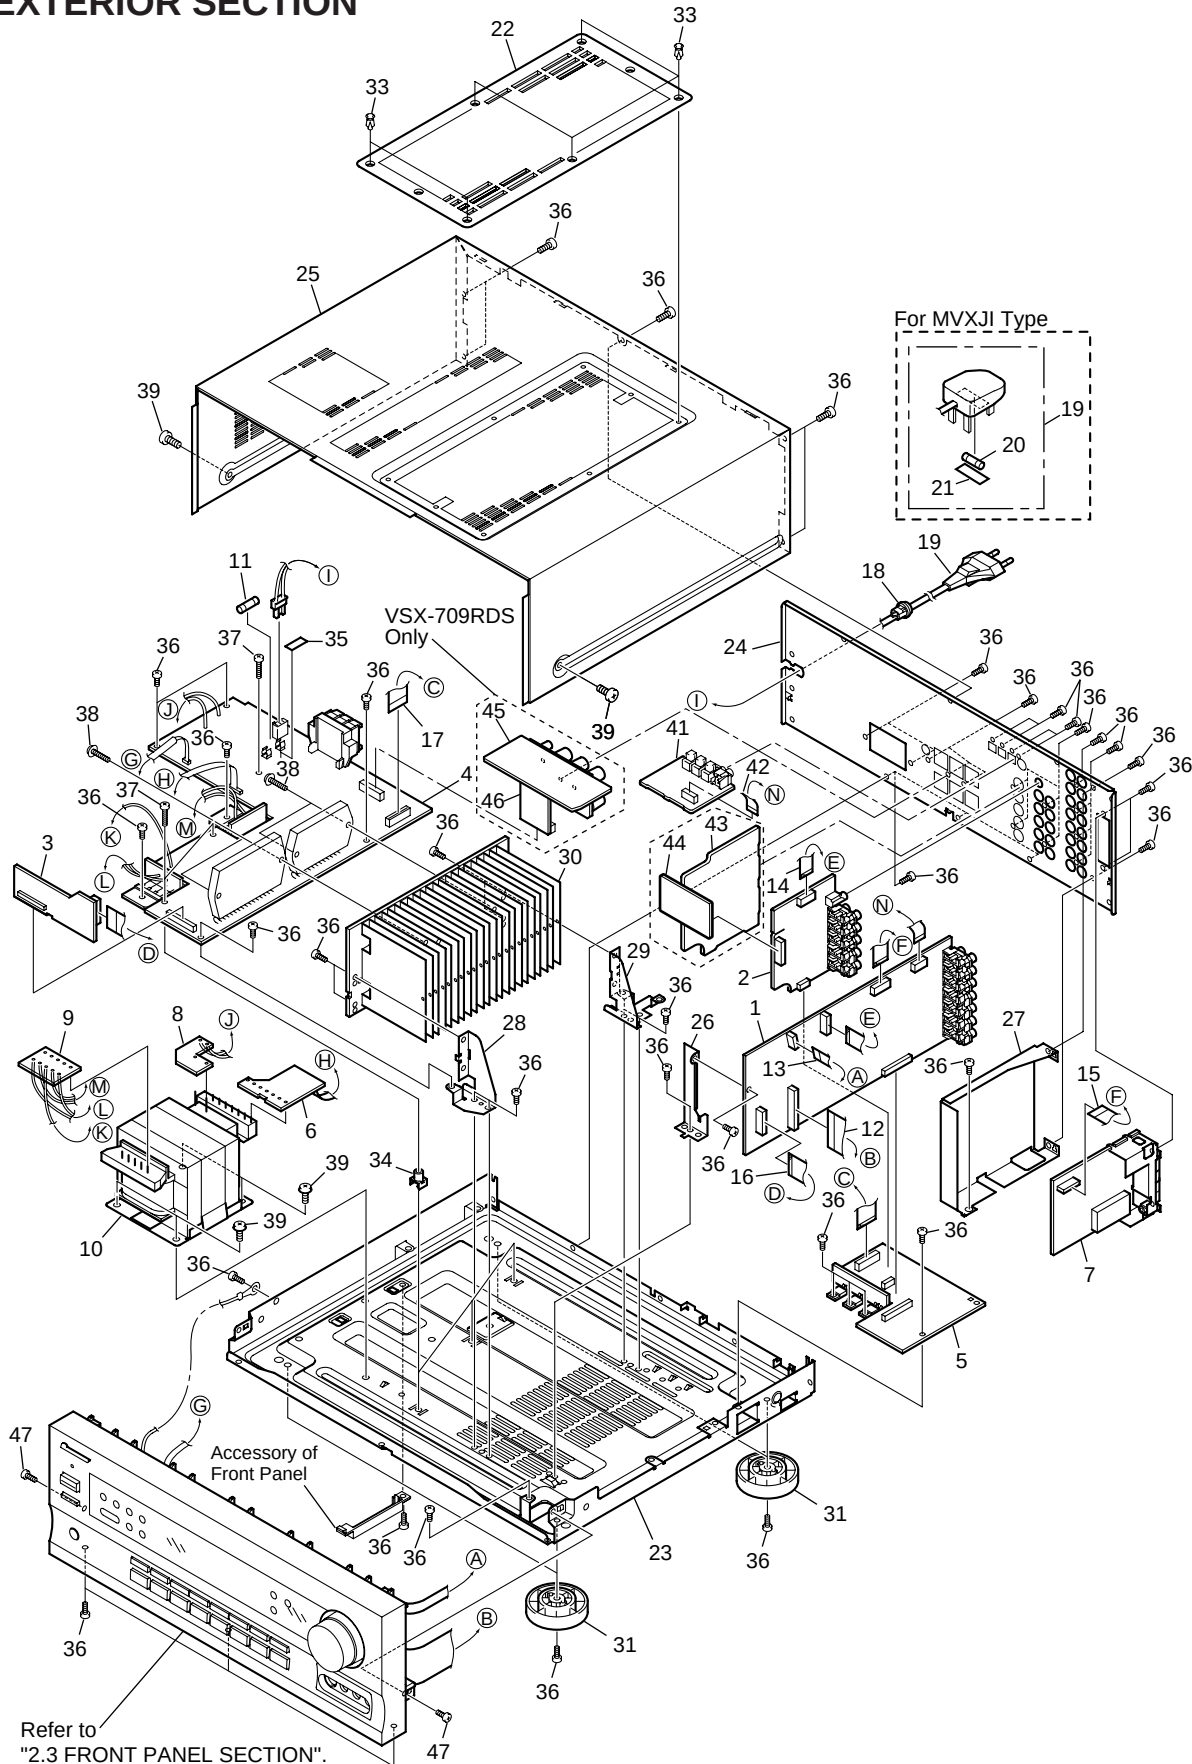

(1) EXTERIOR SECTION PARTS LIST


Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
NSP	1	D.D & INPUT Assy	See Contrast table (2)	NSP	21	Fuse Holder	See Contrast table (2)
	2	VIDEO&6CH IN Assy	See Contrast table (2)		22	Top Cover 808	AME7375
	3	AMP INPUT Assy	AWX7382		23	Under Base 409	ANA7094
	4	AMP&PRIMARY Assy	See Contrast table (2)		24	Rear Panel	See Contrast table (2)
	5	REGULATOR Assy	AWX7467		25	Bonnet Case	AZN7779
NSP	6	TRANS 2 Assy	AWX7468	NSP	26	PCB Angle	ANG7253
	7	FM/AM TUNER Unit	AXX7048		27	Shield R3	ANG7277
	8	TRANS 1 Assy	AWX7390		28	Heat Sink Angle F	ANG7251
NSP	9	TRANS 3 Assy	AWX7392	NSP	29	Heat Sink Angle R	ANG7252
△	10	Power Transformer (AC230V)	ATS7259		30	Heat Sink 0.8	ANH7110
△	11	Fuse (FU1 : T2.5A)	REK1026		31	Insulator	PNW2766
	12	FFC (J31 : 32P/180 BD 60V) (D.D & INPUT CN102 ↔ FRONT CN402)	ADD7222	NSP	32	•••••	
	13	FFC (J32 : 19P/200 BD 60V) (D.D & INPUT CN103 ↔ FRONT CN401)	ADD7221		33	Push Rivet	AEC7025
	14	FFC (J33 : 13P/200 BD 60V) (D.D & INPUT CN104 ↔ VIDEO&6CH IN CN303)	ADD7220		34	PCB Mold	AMR2533
	15	FFC (J34 : 13P/80 BD 60V) (D.D & INPUT CN105 ↔ FM/AM TUNER CN1)	ADD7189		35	Fuse Card	AAX7277
	16	FFC (J35 : 17P/90 BD 60V) (D.D & INPUT CN106 ↔ AMP INPUT CN290)	ADD7219		36	Screw	BBZ30P080FMC
△	17	FFC (J36 : 22P/80 BD 60V) (REGULATOR CN801 ↔ AMP&PRIMARY CN53)	ADD7224		37	Screw	BBZ30P200FMC
	18	Strain Relief	CM-22B		38	Screw	ABA7043
	19	AC Power Cord	See Contrast table (2)		39	Screw	FBT40P080FZK
△	20	Fuse (T5A)	See Contrast table (2)		40	•••••	
					41	DIGITAL IN Assy	See Contrast table (2)
					42	FFC (J37 : 6P/150 BD 60V) (D.D & INPUT CN1501 ↔ DIGITAL IN CN1901)	ADD7223
					43	S. VIDEO Assy	See Contrast table (2)
					44	BOARD TO BOARD Assy	See Contrast table (2)
					45	LARGE SP Assy	See Contrast table (2)
					46	LARGE SP CONNECTION Assy	See Contrast table (2)
					47	Screw	IBZ30P080FMC

(2) CONTRAST TABLE

VSX-709RDS/MYXJIEW, MYXJIGR, MVXJI, VSX-609RDS/MYXJIEW, MYXJIGR and MVXJI are constructed the same except for the following :

Mark			No.	Symbol and Description	Part No.						Remarks
					VSX-709RDS			VSX-609RDS			
					/MYXJIEW	/MYXJIGR	/MVXJI	/MYXJIEW	/MYXJIGR	/MVXJI	
△	1	D.D & INPUT Assy	AWX7464	AWX7464	AWX7464	AWX7497	AWX7497	AWX7497			
	2	VIDEO&6CH IN Assy	AWX7458	AWX7458	AWX7458	AWX7474	AWX7474	AWX7474			
	4	AMP&PRIMARY Assy	AWX7484	AWX7484	AWX7484	AWX7478	AWX7478	AWX7478			
	19	AC Power Cord	VDG1061	VDG1061	VDG1063	VDG1061	VDG1061	VDG1063			
	20	Fuse (T5A)	Not used	Not used	PEK1003	Not used	Not used	PEK1003			
	21	Fuse Holder	Not used	Not used	VKR1003	Not used	Not used	VKR1003			
	24	Rear Panel	ANC7897	ANC7897	ANC7897	ANC7896	ANC7896	ANC7896			
	41	DIGITAL IN Assy	AWX7461	AWX7461	AWX7461	AWX7505	AWX7505	AWX7505			
	43	S. VIDEO Assy	AWX7462	AWX7462	AWX7462	Not used	Not used	Not used			
	44	BOARD TO BOARD Assy	AWX7463	AWX7463	AWX7463	Not used	Not used	Not used			
	45	LARGE SP Assy	AWX7510	AWX7510	AWX7510	Not used	Not used	Not used			
	46	LARGE SP CONNECTION Assy	AWX7504	AWX7504	AWX7504	Not used	Not used	Not used			

2.3 FRONT PANEL SECTION

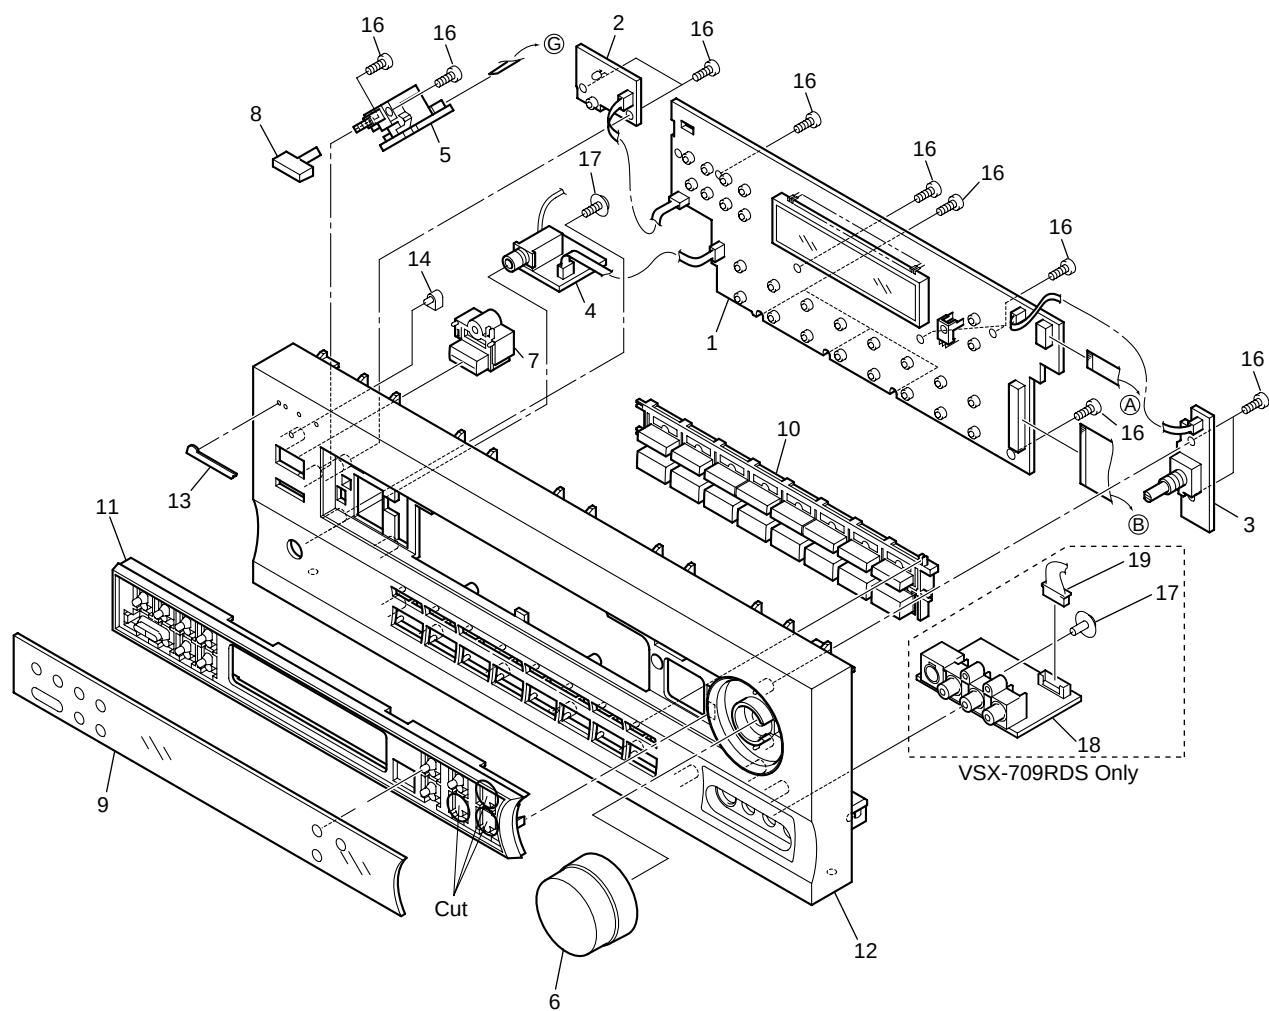

(1) FRONT PANEL SECTION PARTS LIST

Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
	1	FRONT Assy	See Contrast table (2)		11	Sub Panel	AAD7552
	2	POWER SW Assy	AWX7385		12	F Panel	See Contrast table (2)
NSP	3	R. ENCODER Assy	AWX7386		13	Name Plate	PAM1776
NSP	4	H.P. Assy	AWX7556		14	LED Lens	PNW2019
	5	MECHA SW Assy	AWX7443		15	•••••	
	6	Volume Knob	AAB7179		16	Screw	PPZ30P080FMC
	7	Power Button	AAD7440		17	Screw	ABA7009
	8	Power Button M	AAD7442		18	FRONT VIDEO Assy	See Contrast table (2)
	9	Window	AAK7721		19	8P Shield Cable	See Contrast table (2)
	10	F Button	See Contrast table (2)				


(2) CONTRAST TABLE

VSX-709RDS/MYXJIEW, MYXJIGR, MVXJI, VSX-609RDS/MYXJIEW, MYXJIGR and MVXJI are constructed the same except for the following :


Mark	No.	Symbol and Description	Part No.						Remarks
			VSX-709RDS			VSX-609RDS			
			/MYXJIEW	/MYXJIGR	/MVXJI	/MYXJIEW	/MYXJIGR	/MVXJI	
	1	FRONT Assy	AWX7459	AWX7459	AWX7459	AWX7477	AWX7477	AWX7477	
	10	F Button	AAD7564	AAD7564	AAD7564	AAD7562	AAD7562	AAD7562	
	12	F Panel	AMB7677	AMB7677	AMB7677	AMB7675	AMB7675	AMB7675	
	18	FRONT VIDEO Assy	AWX7460	AWX7460	AWX7460	Not used	Not used	Not used	
	19	8P Shield Cable	ADX7306	ADX7306	ADX7306	Not used	Not used	Not used	

3. BLOCK DIAGRAM AND SCHEMATIC DIAGRAM


3.1 BLOCK DIAGRAM

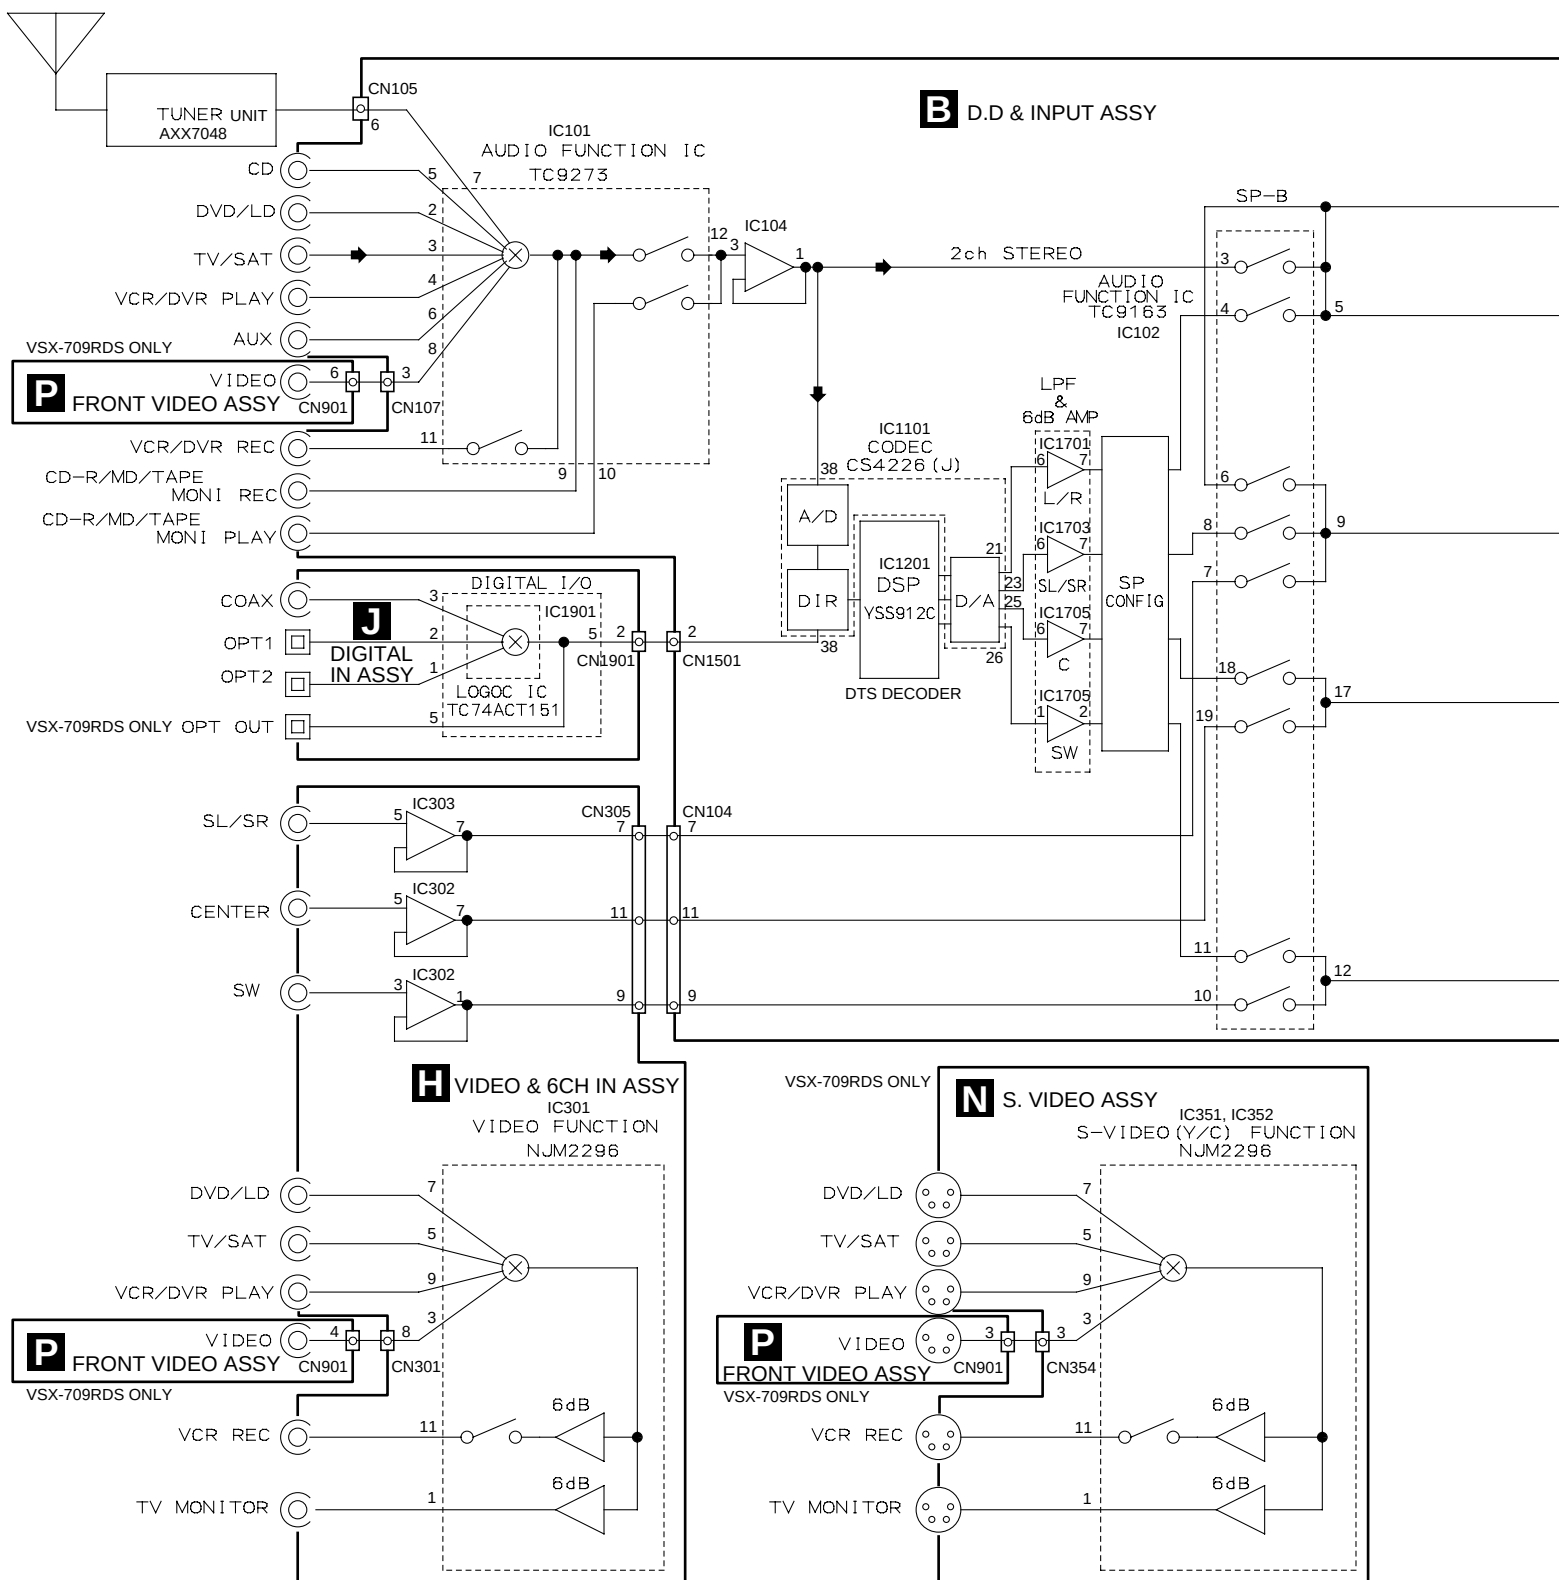

3.2 OVERALL WIRING CONNECTION DIAGRAM and AMP INPUT ASSY

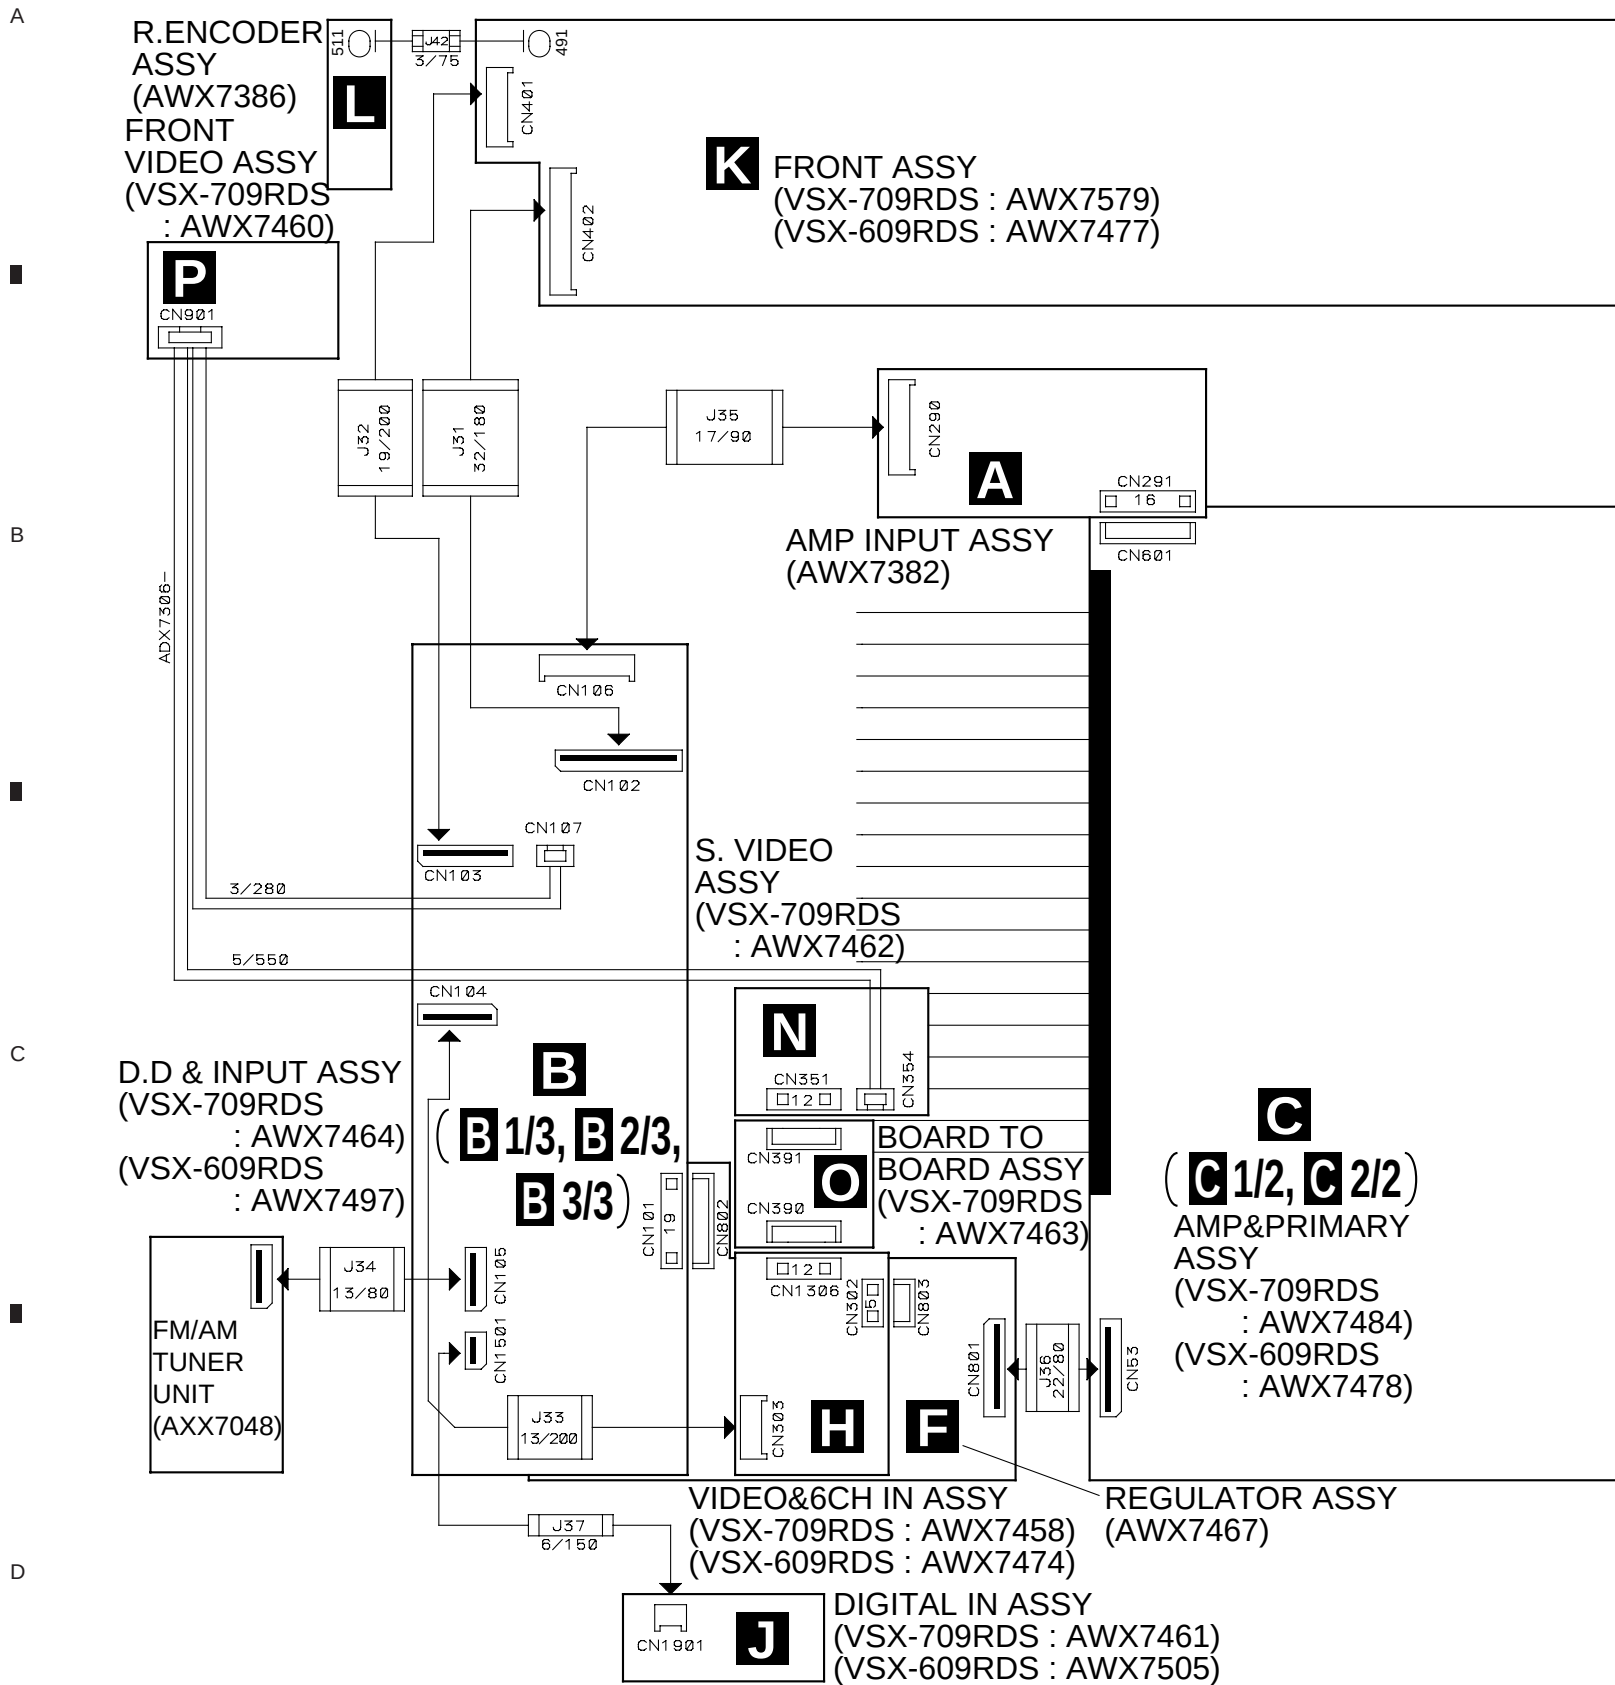

Note : When ordering service parts, be sure to refer to "EXPLODED VIEWS and PARTS LIST" or "PCB PARTS LIST".

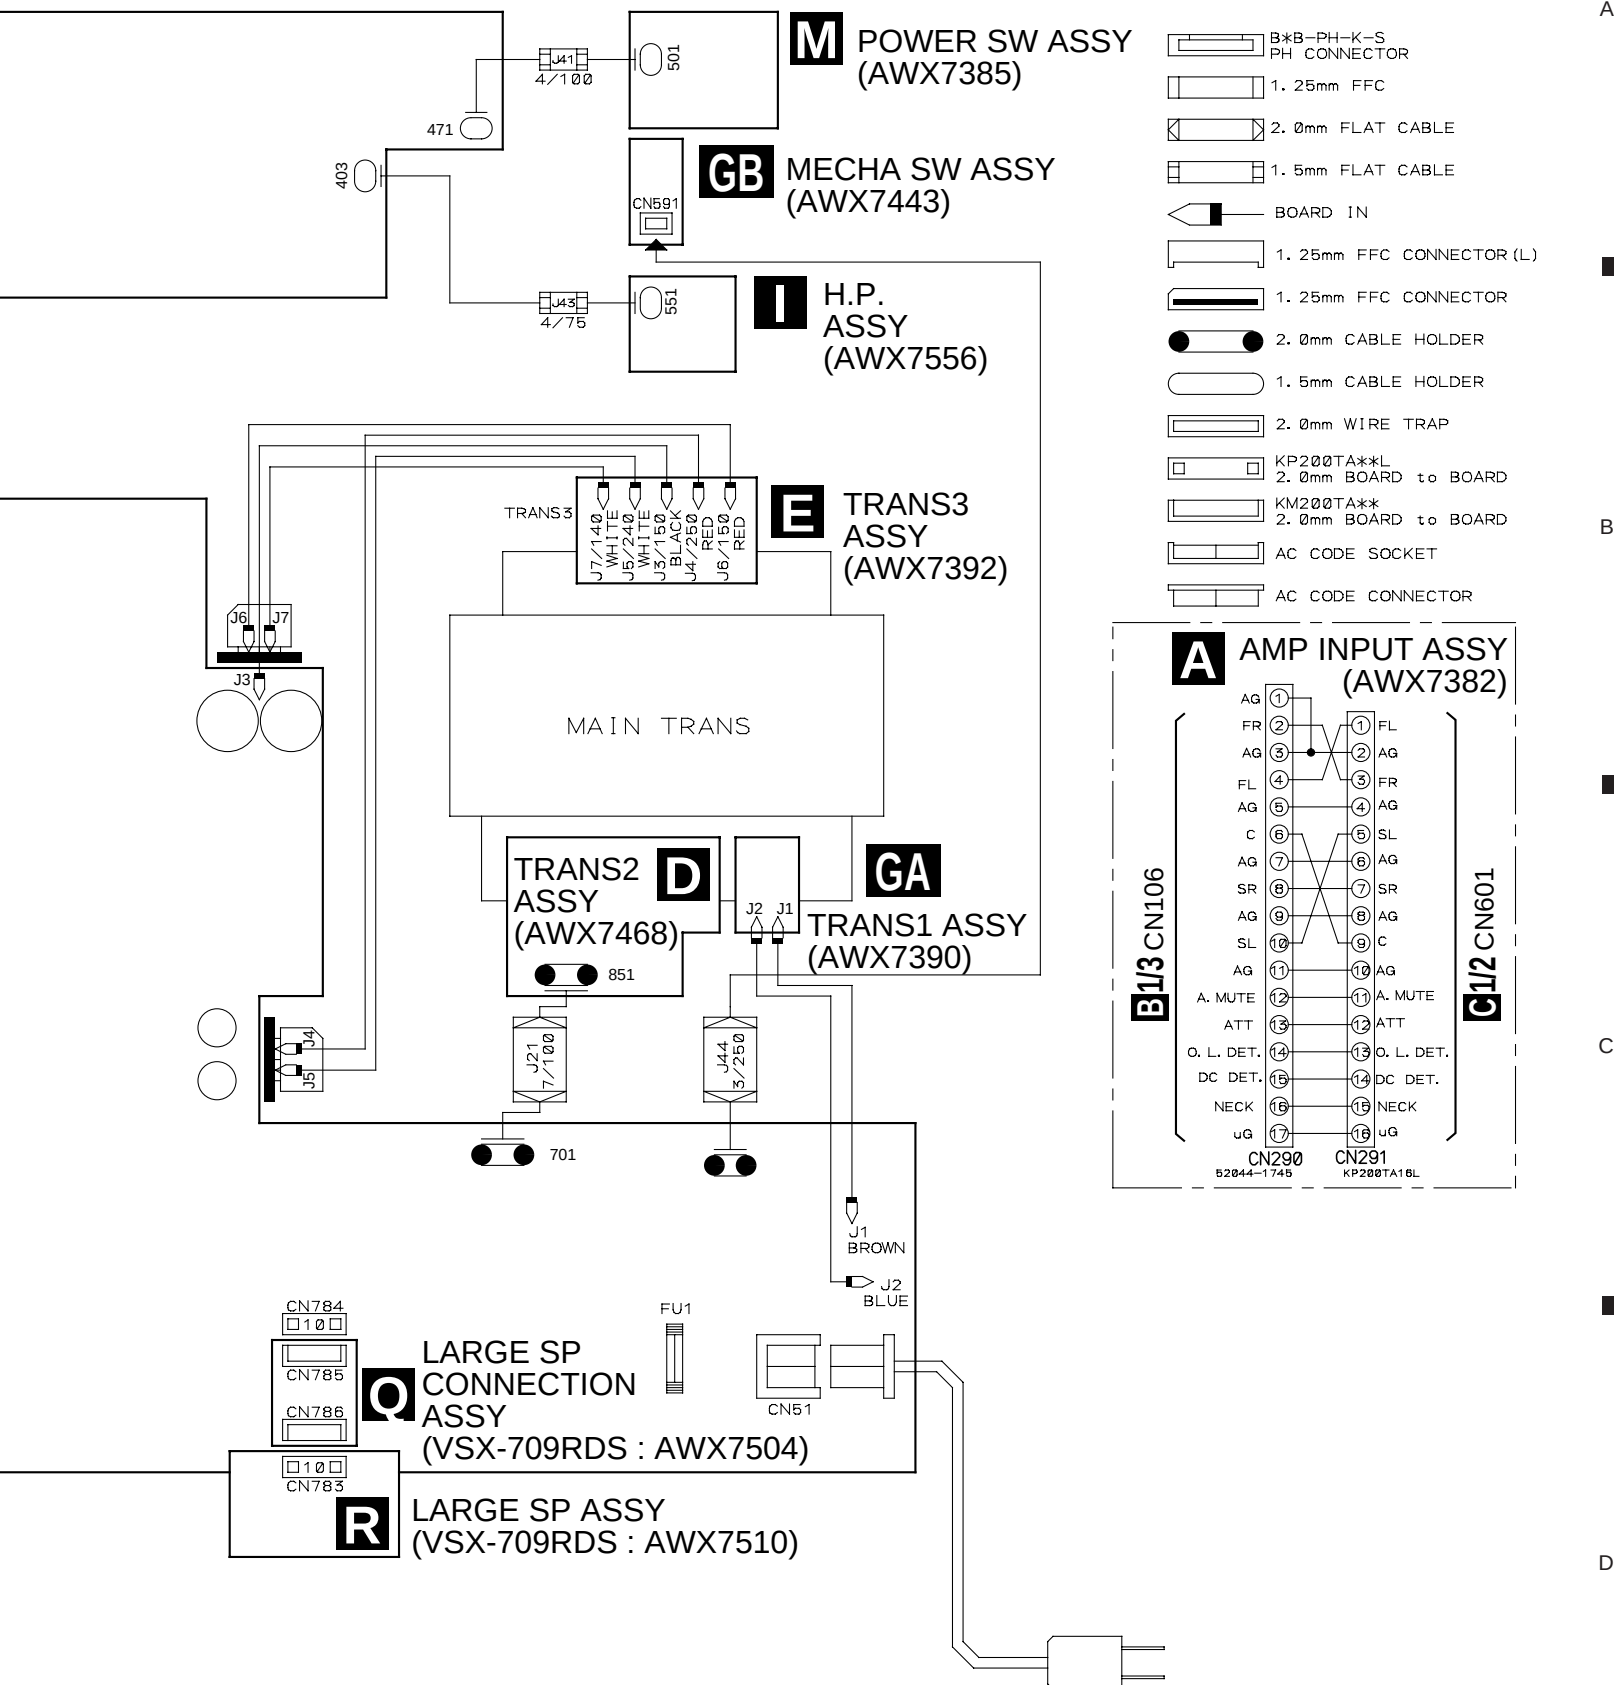


3.3 D.D & INPUT (1/3) ASSY

A

B

C

D

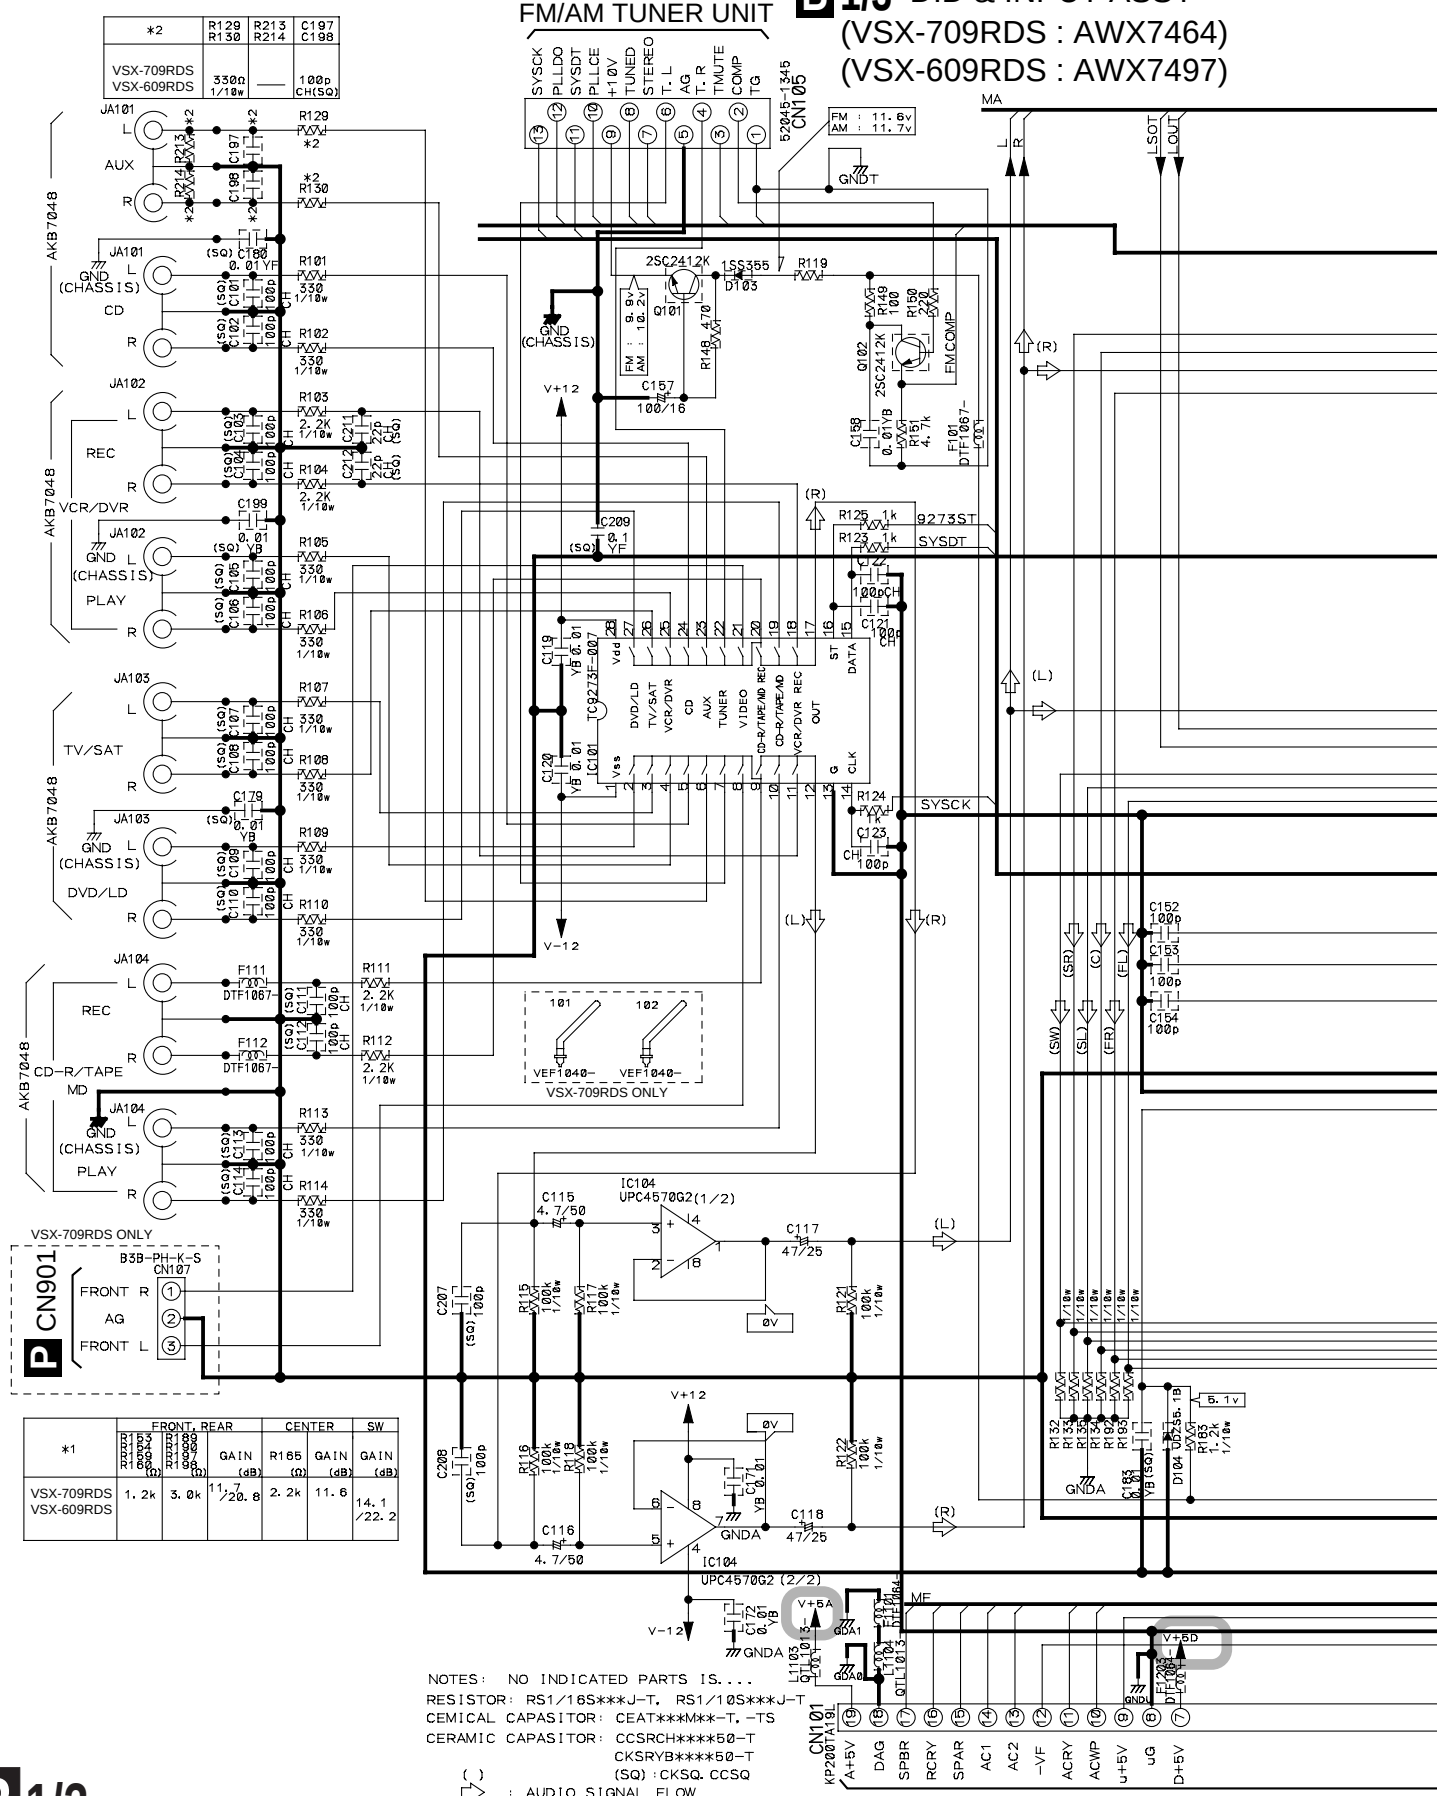

NOTES: NO INDICATED PARTS IS...
RESISTOR: RS1/16S***J-T, RS1/10S***J-T
CEMICAL CAPASITOR: CEAT***M*-T, -TS
CERAMIC CAPASITOR: CSRCH***50-T
CKSRBY***50-T
(SQ):CKSQ.CCSQ
□ : AUDIO SIGNAL FLOW

O : The power supply is shown with the marked box.

H CN303

B3/3

FROM OUTPUT FILTER & MUTE BLOCK

MA

B2/3

B3/3

MC

CN103

52045-1945

V1

V2

V3

SCK

SO

S1

SS

SSB

TC

CDCC

CDCCI

CDCCO

CDCCS

CDCCST

OVL/ER

DMUTE

9275T

DSPMUTE

PREGAIN

K CN401


A CN290

K CN402

B2/3

B3/3

B1/3

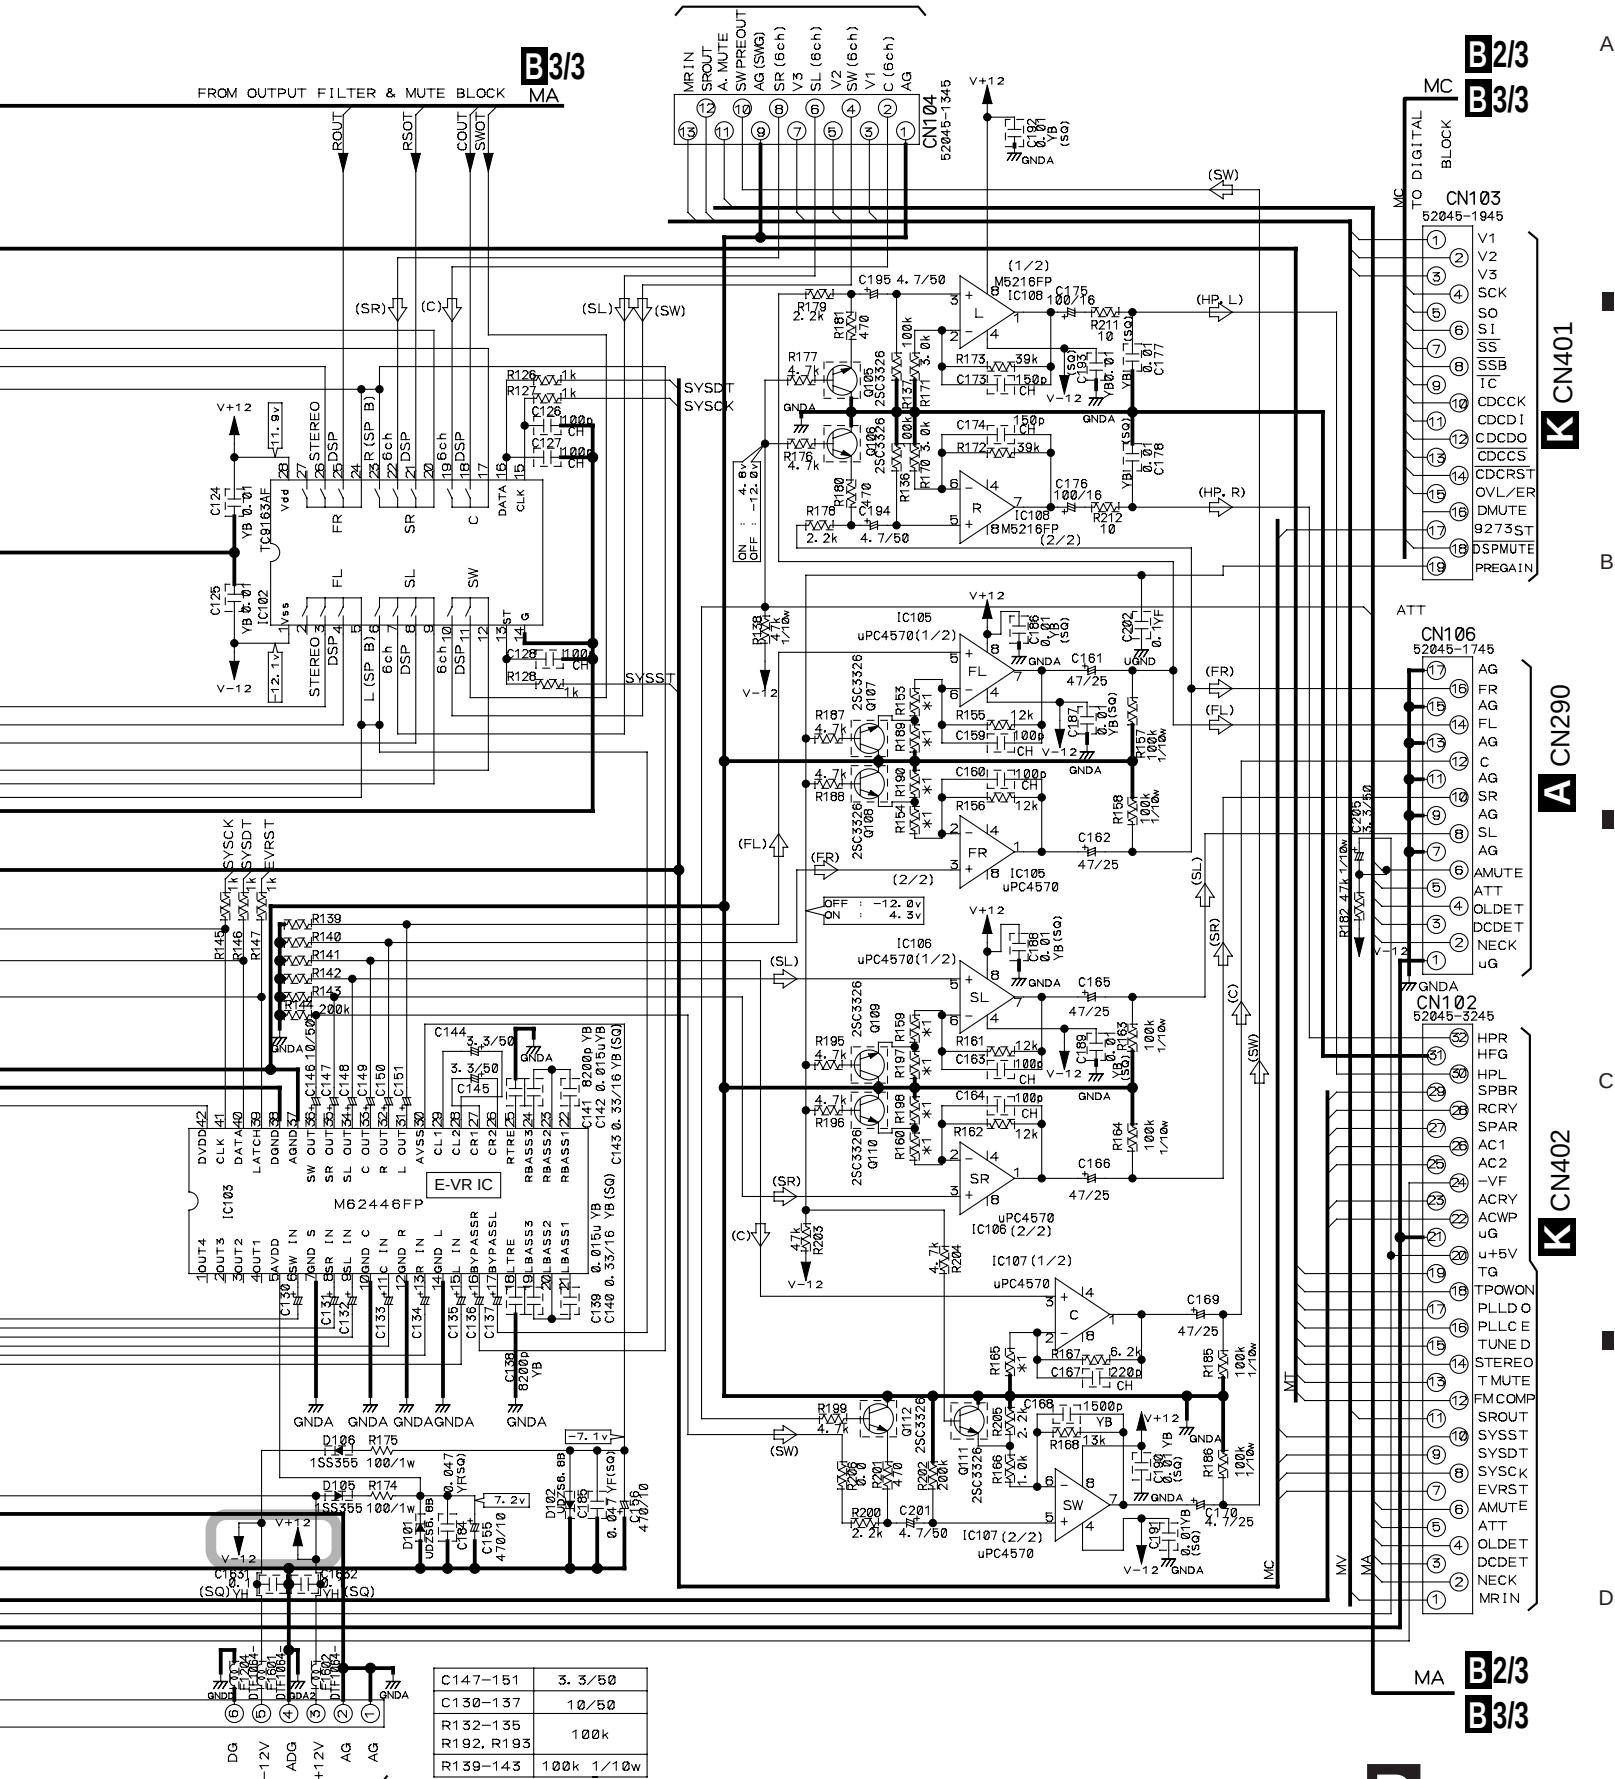

C147-151	3.3/50
C130-137	10/50
R132-135	100k
R192, R193	
R139-143	100k 1/10w



B




D

3.5 D.D & INPUT ASSY (3/3)

B 3/3 D.D & INPUT ASSY
(VSX-709RDS : AWX7464)
(VSX-609RDS : AWX7497)

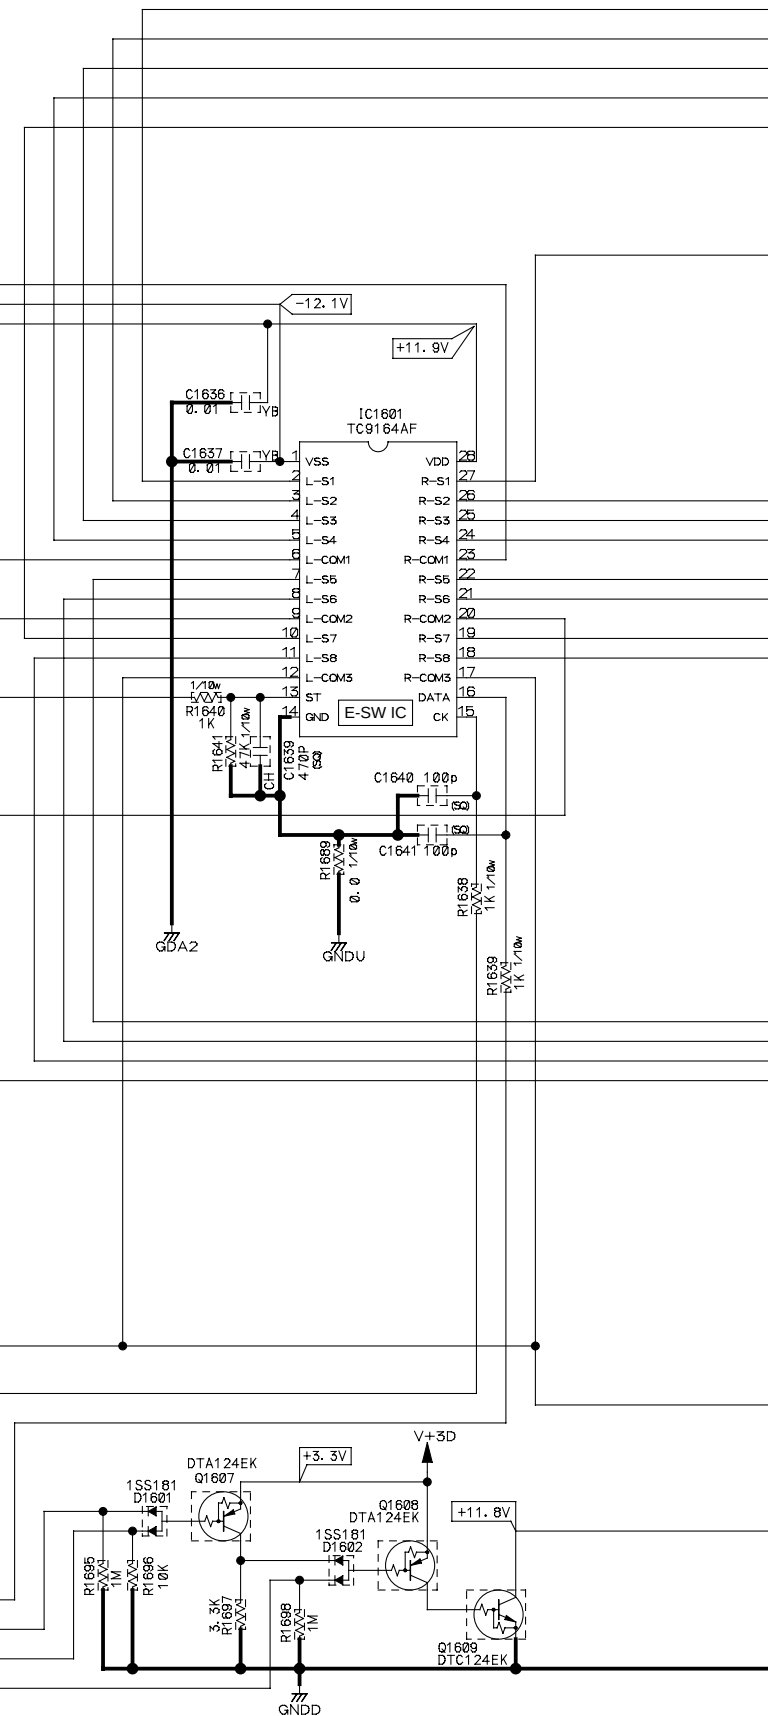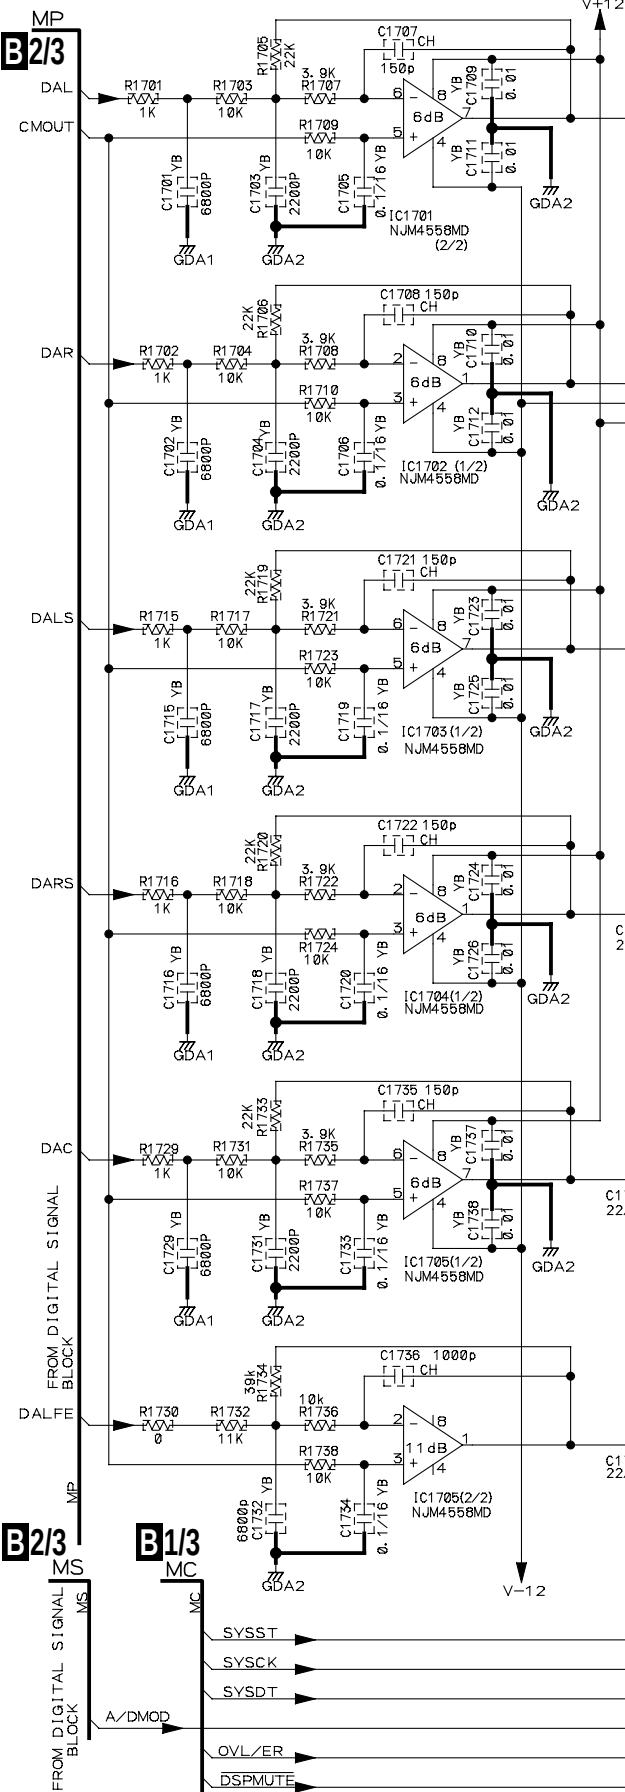


VSX-709RDS, VSX-609RDS

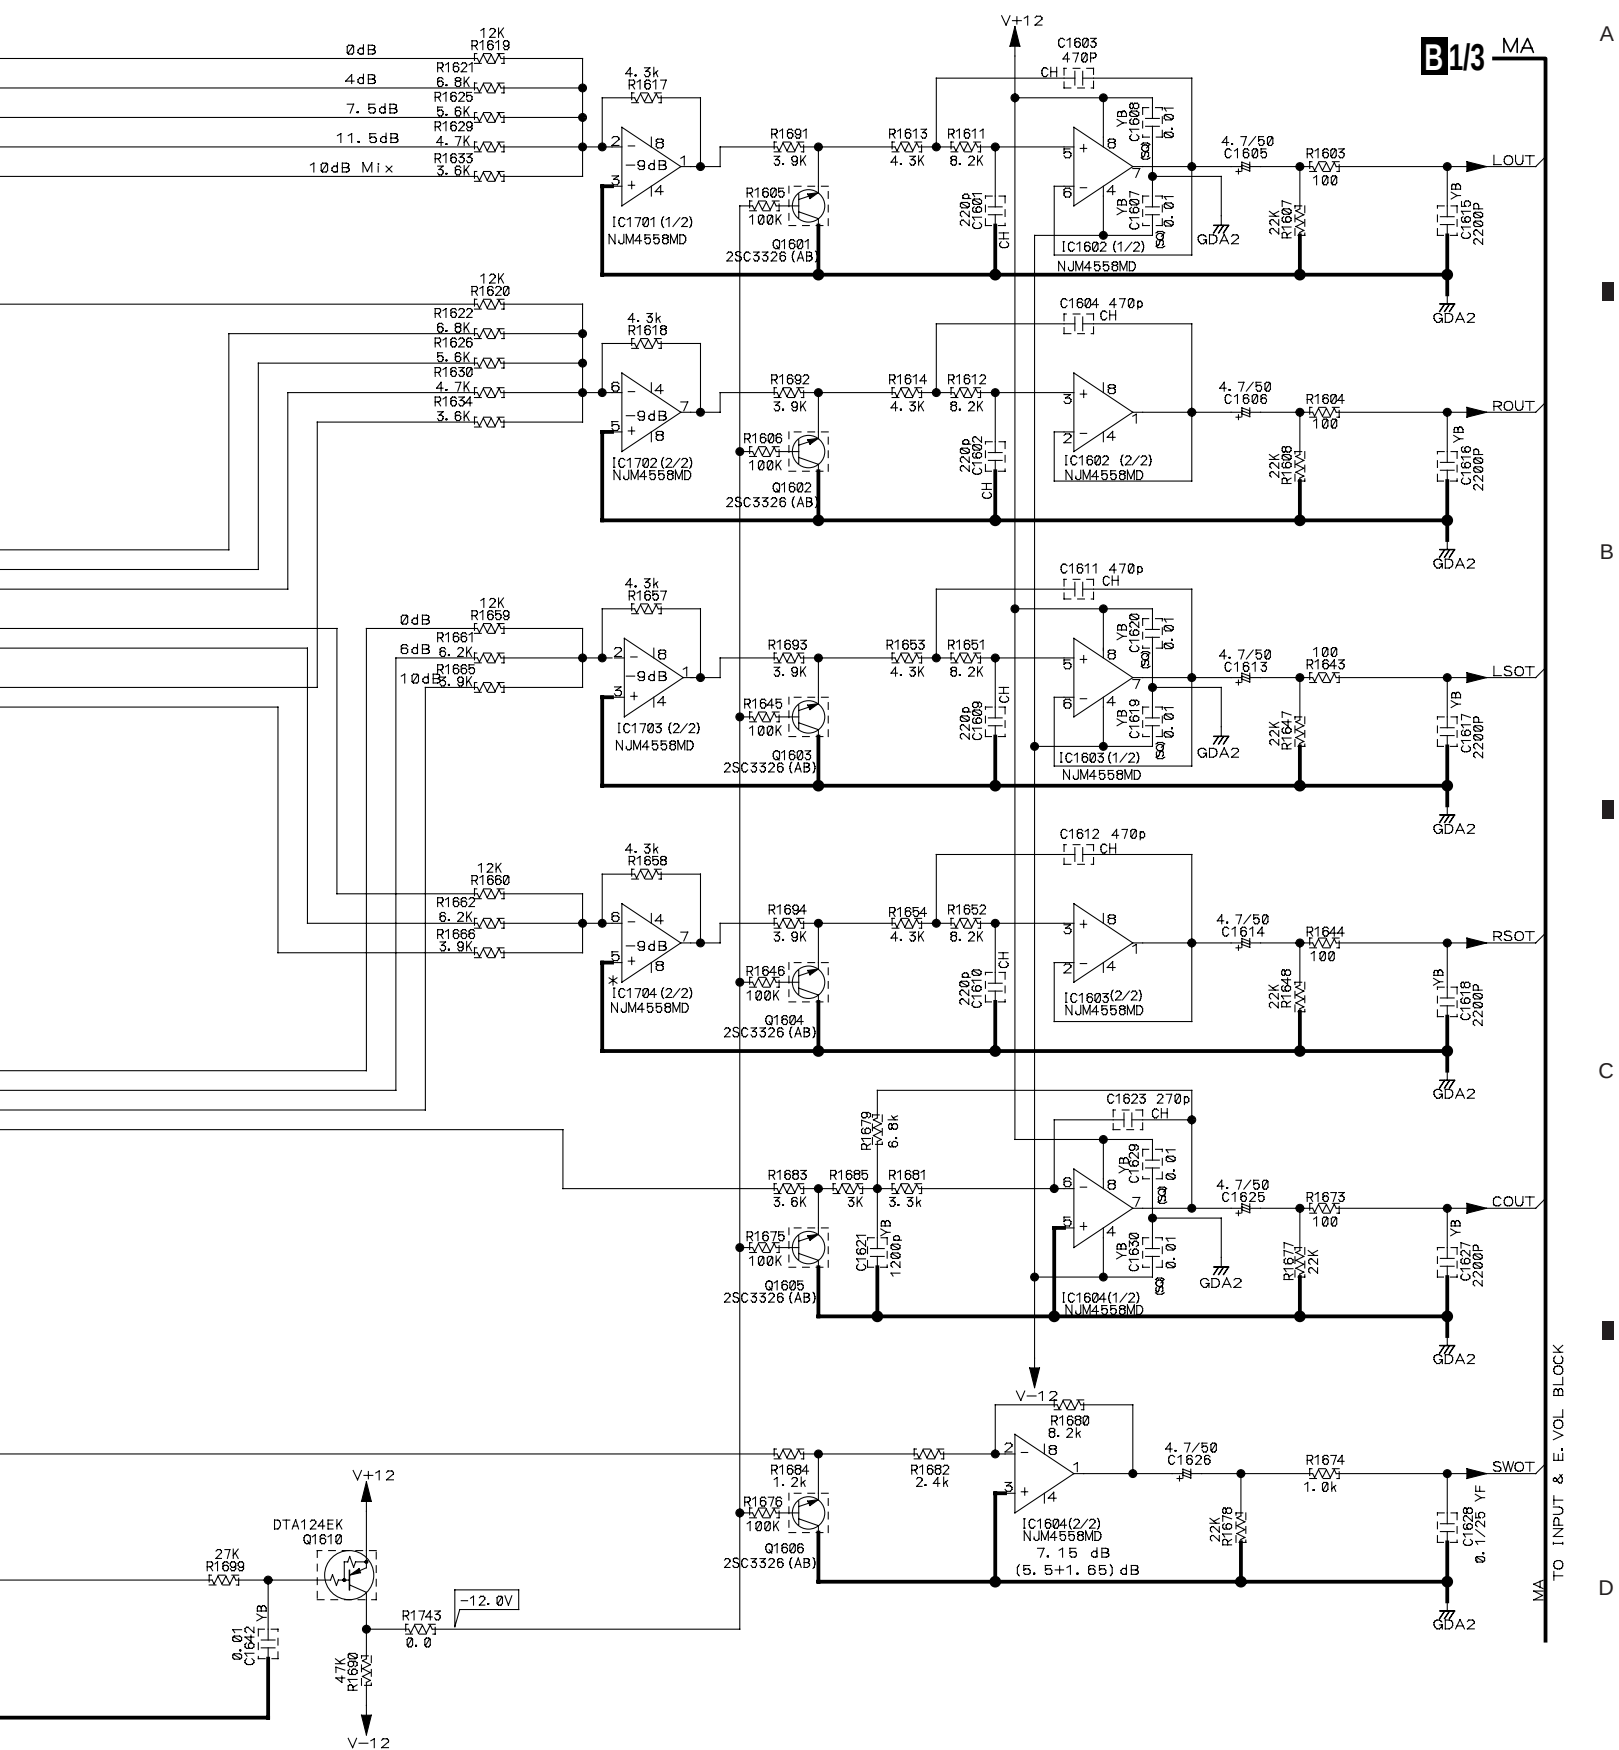


3.6 AMP&PRIMARY (1/2), TRANS2 and TRANS3 ASSYS

C 1/2 AMP&PRIMARY (VSX-709RDS : AWX7484)
ASSY (VSX-609RDS : AWX7478)


A CN291

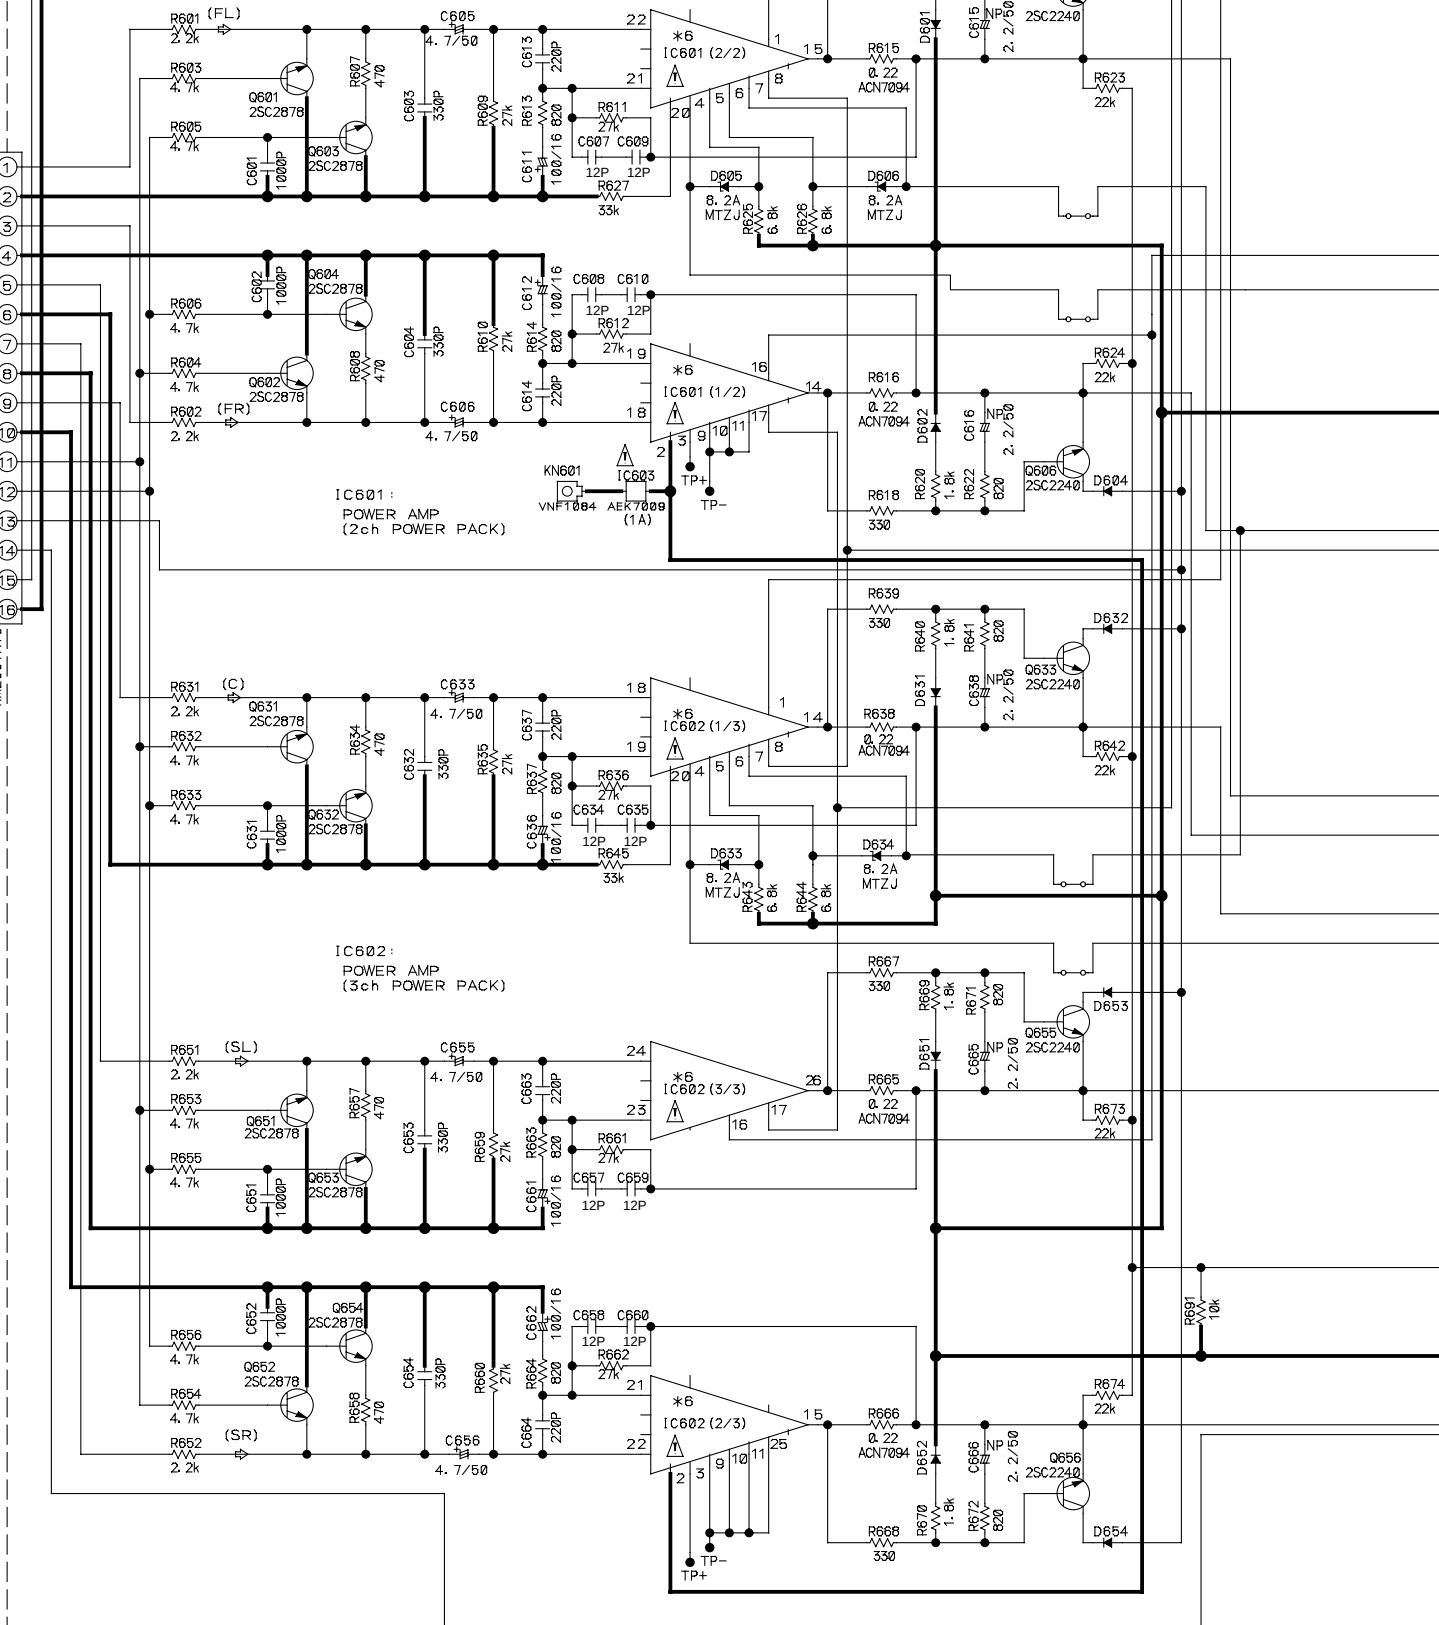

*4 R751, 752, 755 . 761, 762 100 1/4W		*6 IC601 PAC010A IC602 PAC011A	
*5 C751, 752, 755, 761, 762 0.22 Y/A C753, 754, 758, 763, 764 0.22 Y/A D751, 753, 755, 757 1SS133-T		*7 VSX-609RDS C757, 758, 759 C785, 786, 787, 788 VSX-709RDS C765, 766, 767, 768 C781, 782, 783 CQMB4 472J50-T	

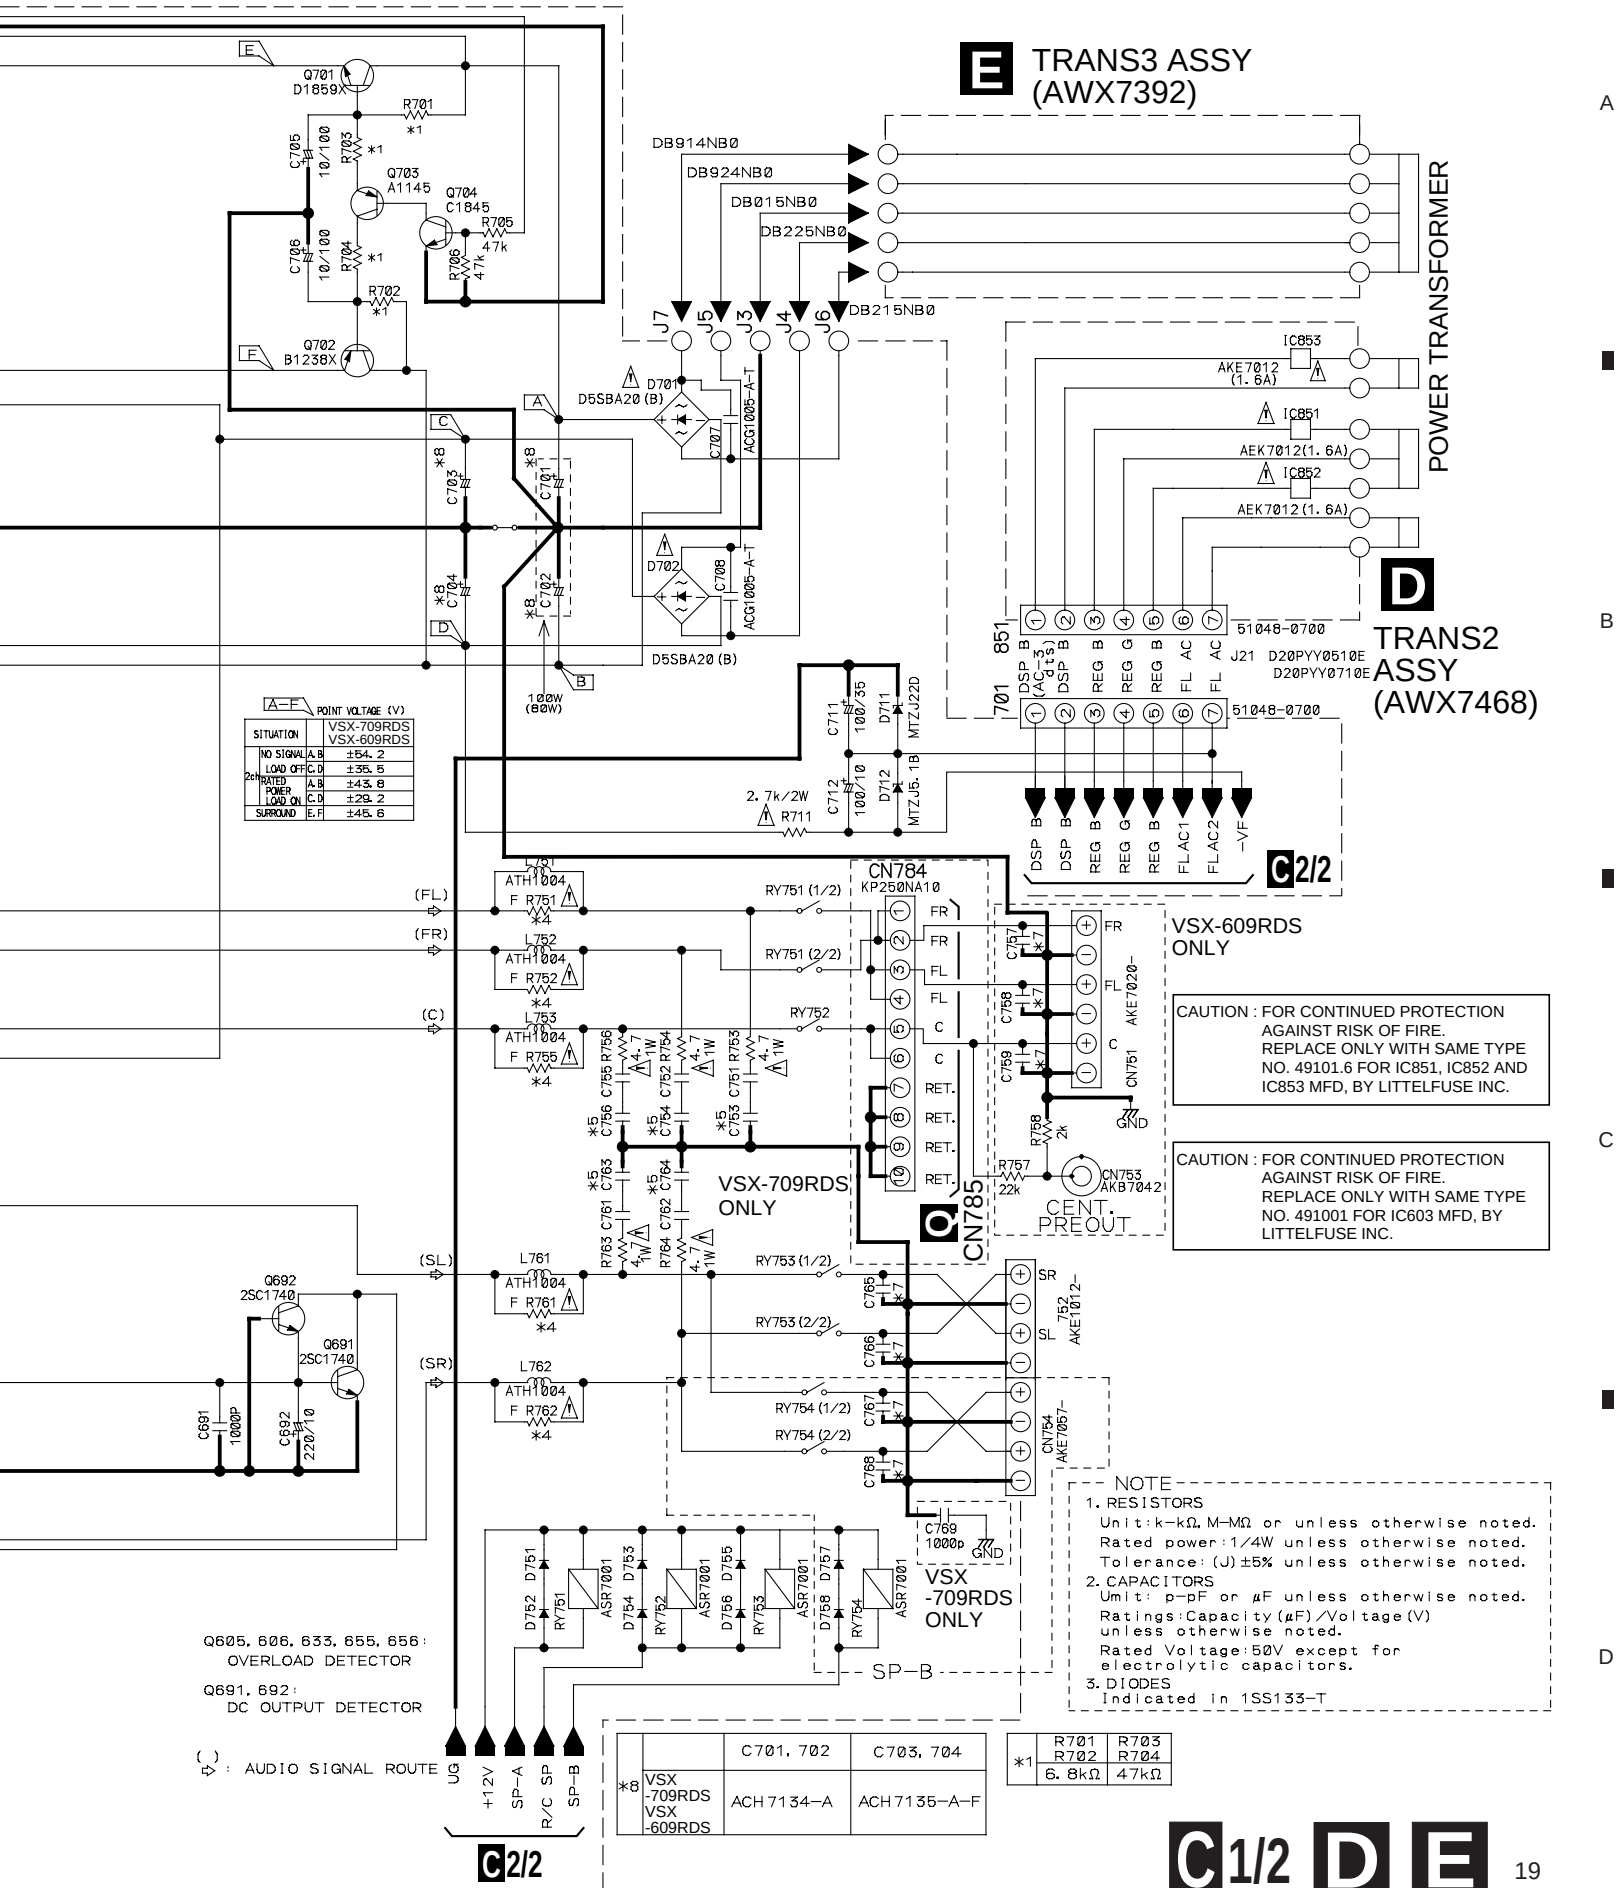

3.7 AMP&PRIMARY (2/2), REGULATOR, TRANS1 and MECHA SW ASSYS

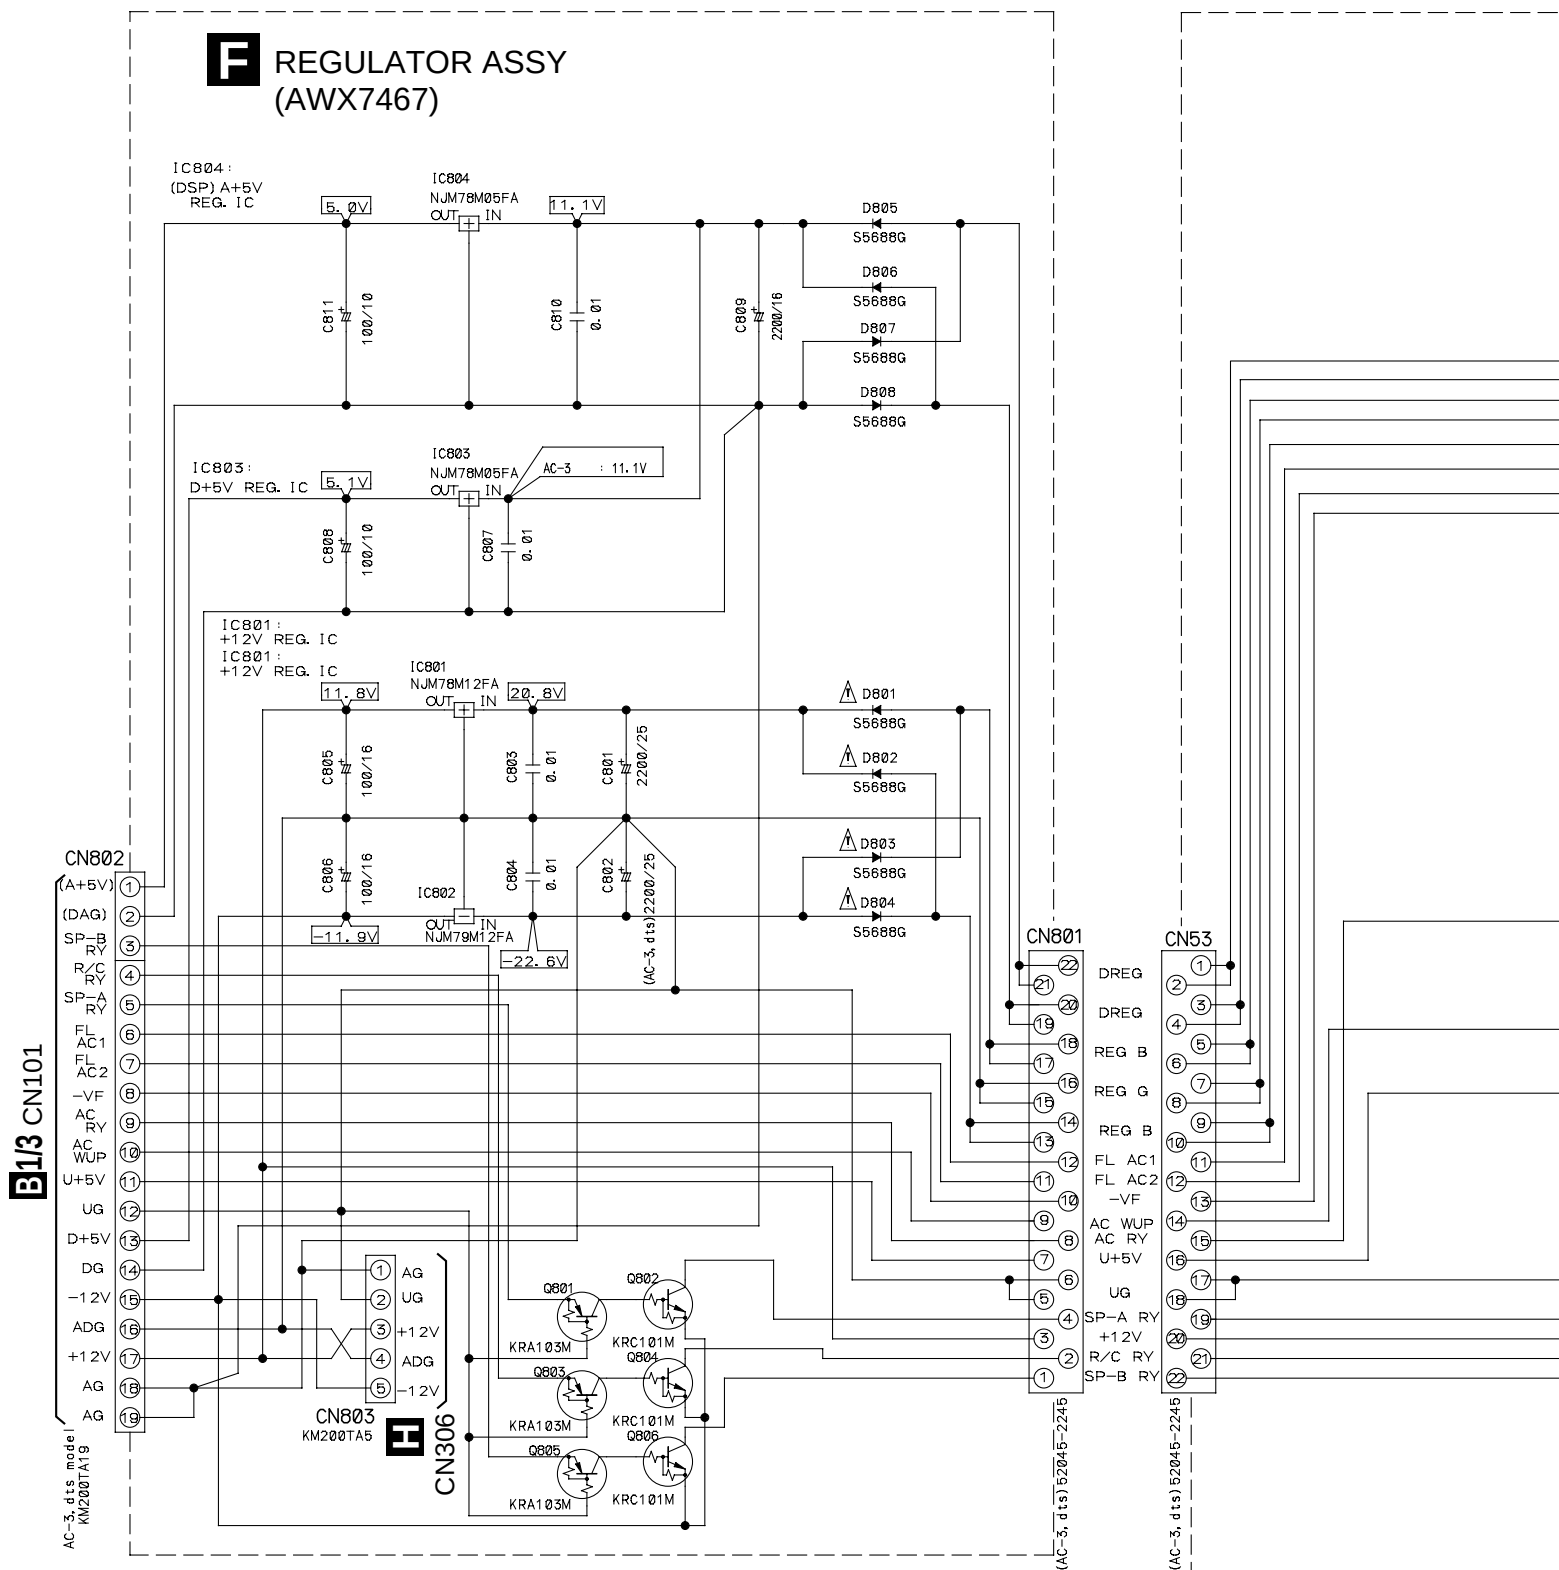

C2/2 AMP&PRIMARY ASSY
(VSX-709RDS : AWX7484)
(VSX-609RDS : AWX7478)


GB
MECHA SW ASSY
(AWX7443)

C1/2

CAUTION : FOR CONTINUED PROTECTION
AGAINST RISK OF FIRE.
REPLACE ONLY WITH SAME TYPE
NO. 491.315 FOR IC52 MFD, BY
LITTELFUSE INC.

GA
TRANS1 ASSY
(AWX7390)


POWER TRANSFORMER

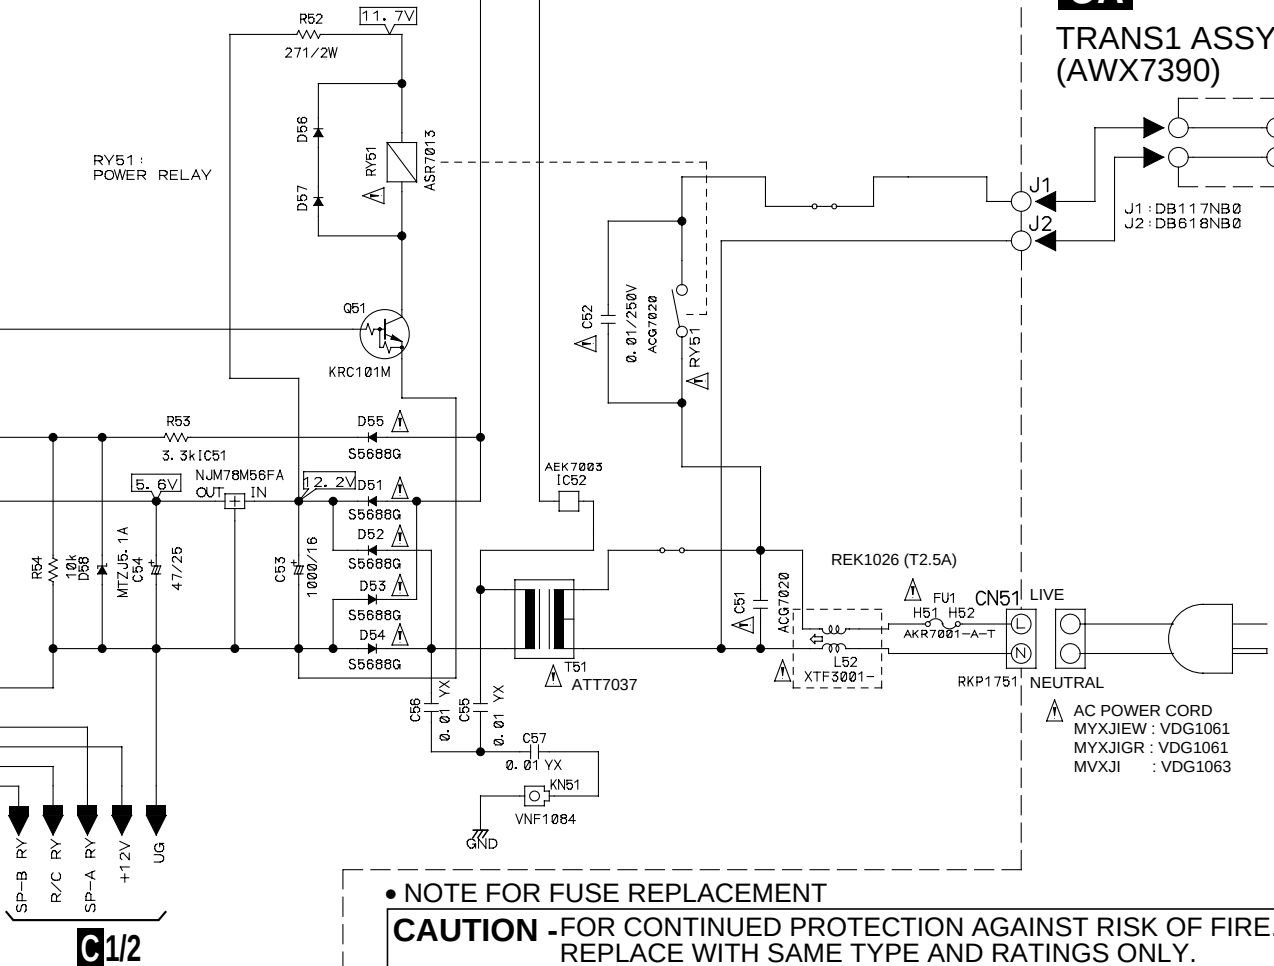

3.8 VIDEO&6CH IN, H. P. and DIGITAL IN ASSYS



VIDEO&6CH IN ASSY
(VSX-709RDS : AWX7458)
(VSX-609RDS : AWX7474)

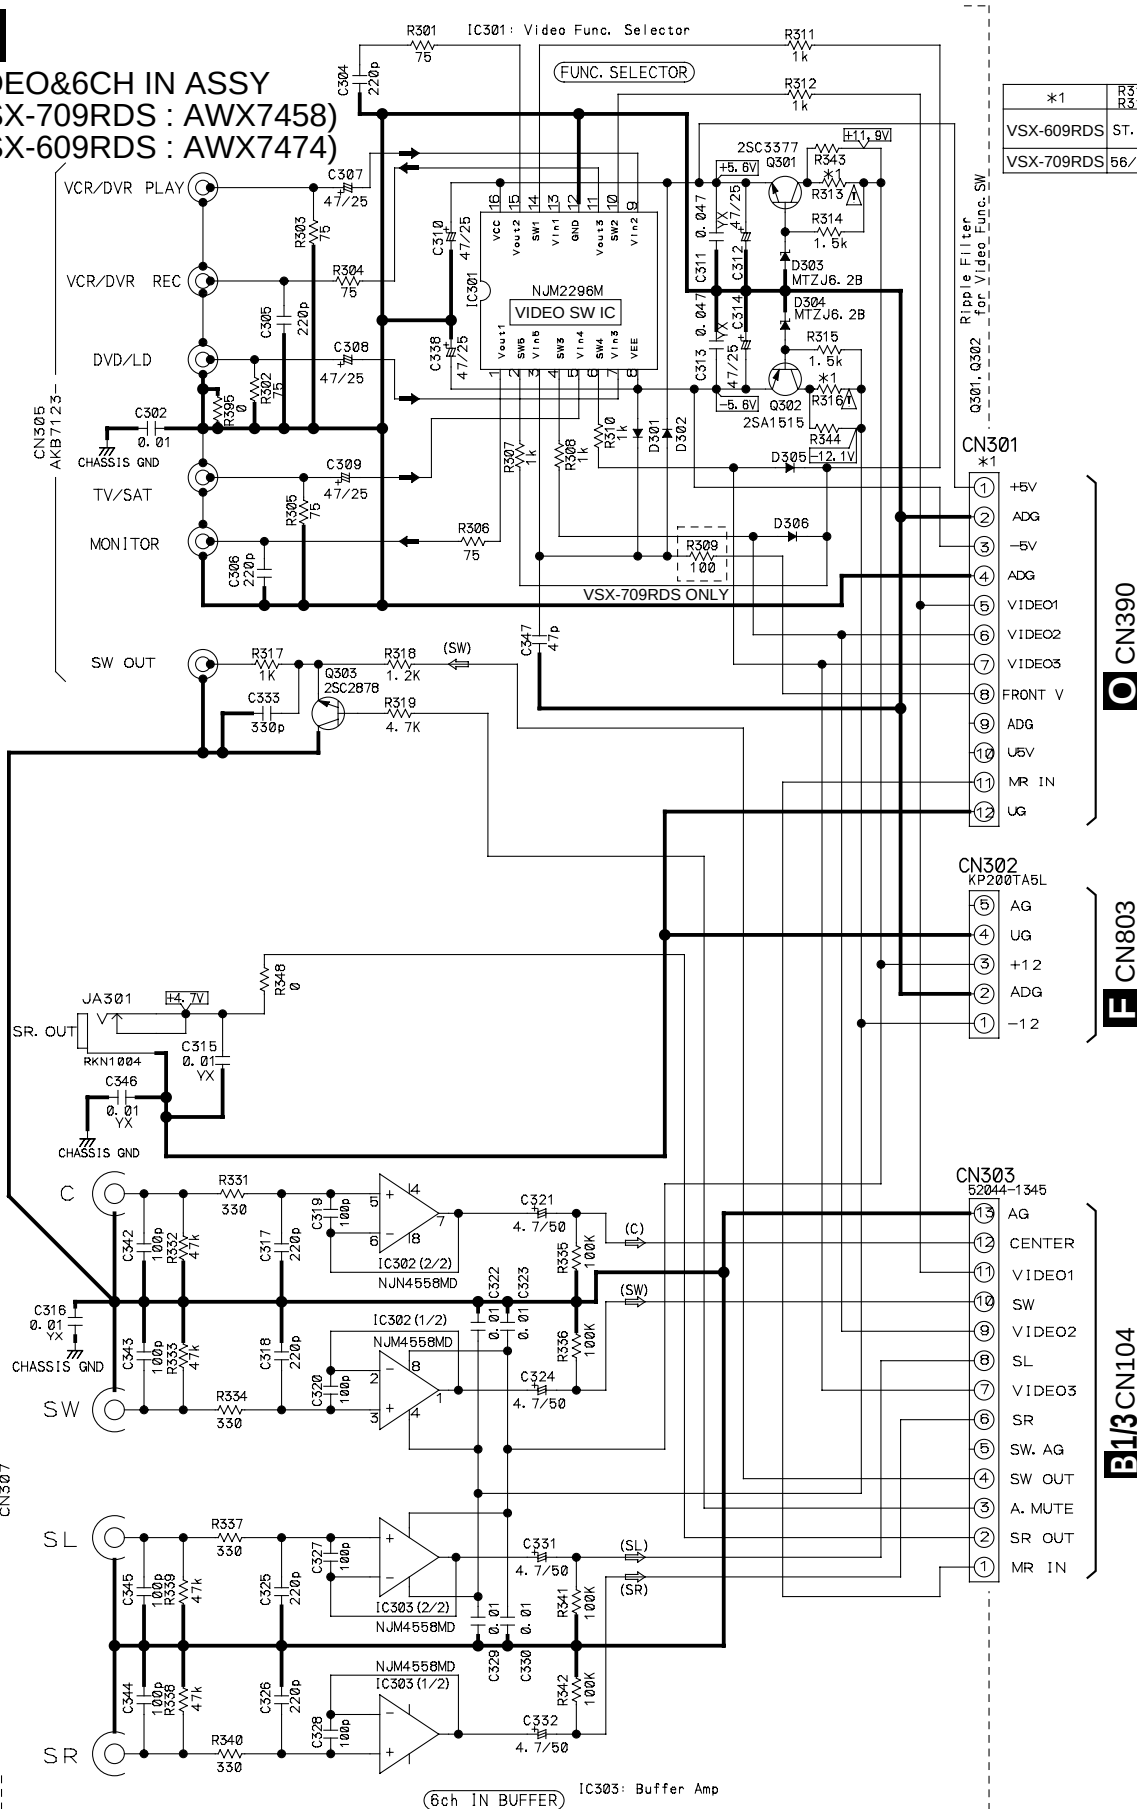


*1	R313 R316	R343 R344	CN301
VSX-609RDS	ST. BY	B2/1W	ST. BY
VSX-709RDS	56/2W	ST. BY	KP200 TA12

○ CN390

F CN803

B1/3 CN104



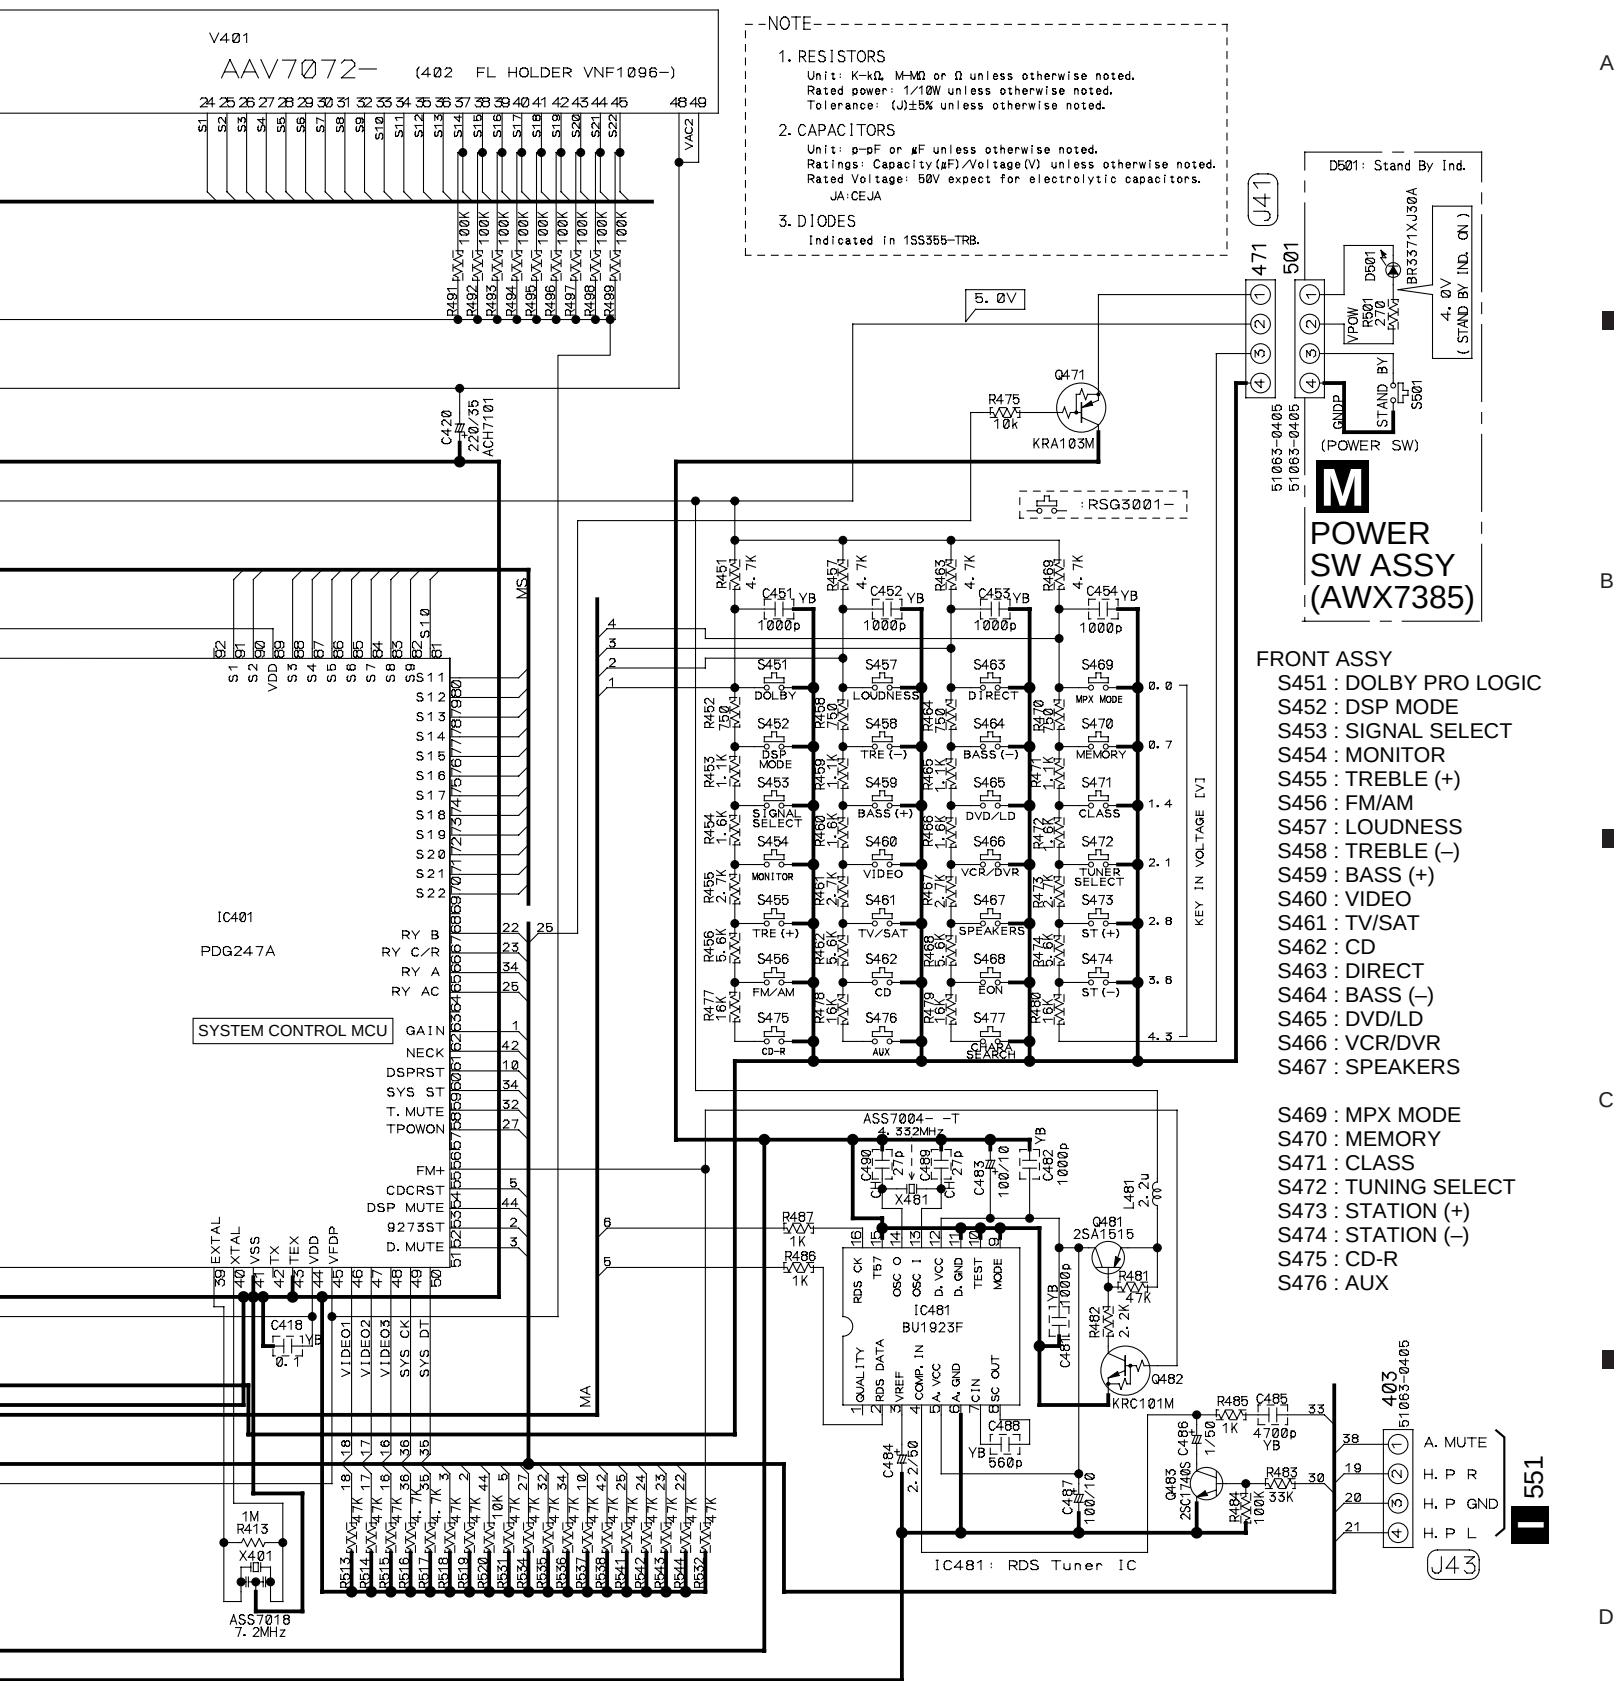

3.10 S. VIDEO, BOARD TO BOARD, FRONT VIDEO, LARGE SP CONNECTION and LARGE SP ASSYS

NJM2296D control port status

SW1	SW2	SW3	SW4	SW5	Vout1	Vout2	Vout3
1	0	(1)	0	1	Vin2	Vin2	mute
1	1	(1)	0	1	Vin3	Vin3	Vin3
1	1	0	1	1	Vin4	Vin4	Vin4
1	1	1	1	1	Vin5	Vin5	Vin5
0	0	(0)	(0)	0	mute	mute	mute

VIN 2. VCR/DVR Vout1. MONITOR out
VIN 3. DVD/LD Vout2. MR out
VIN 4. TV/SAT Vout5. VCR/DVR out
VIN 5. FRONT VIDEO

O BOARD TO BOARD ASSY (VSX-709RDS : AWX7463)

P CN901


CN354
B5B-PH-K-S

CN351
KP200TA12L

H CN301

CN390
or CN391
KM200TA12

CN391
or CN390
KM200TA12

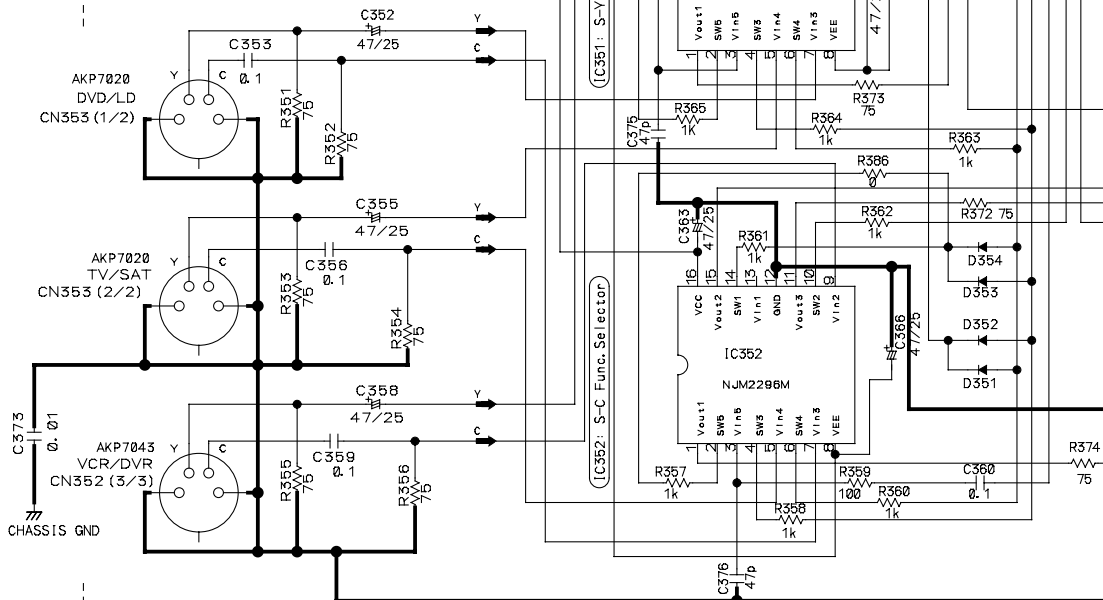

Video Signal Flow
Audio Signal Flow

NOTE

1. RESISTORS

Unit: k- Ω , M- Ω or Ω unless otherwise noted.
 Rated power: 1/10W unless otherwise noted.
 Tolerance: (J) $\pm 5\%$ unless otherwise noted.



2. CAPACITORS

Unit: p-pF or μ F unless otherwise noted.
 Ratings: Capacity(μ F)/Voltage(V) unless otherwise noted.
 Rated Voltage: 50V except for electrolytic capacitors.

3. DIODES


Indicated in 1SS355-TRB

N

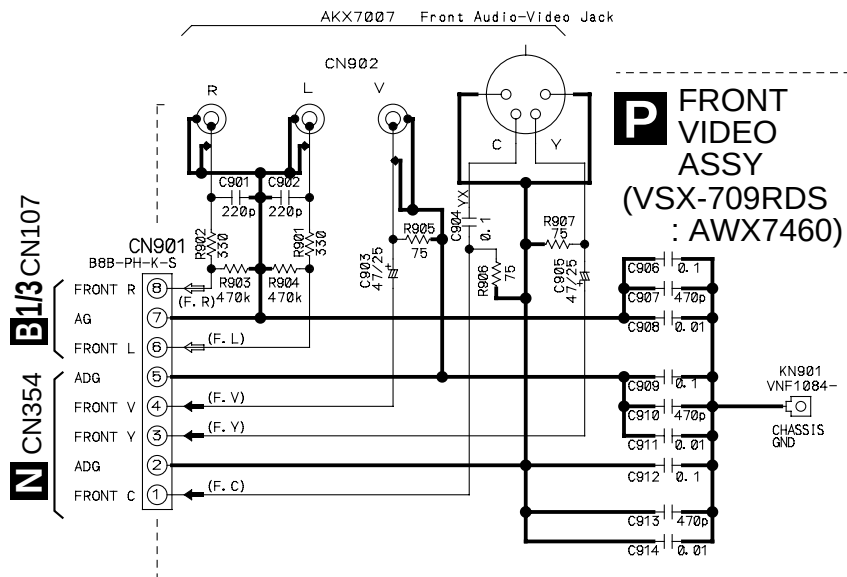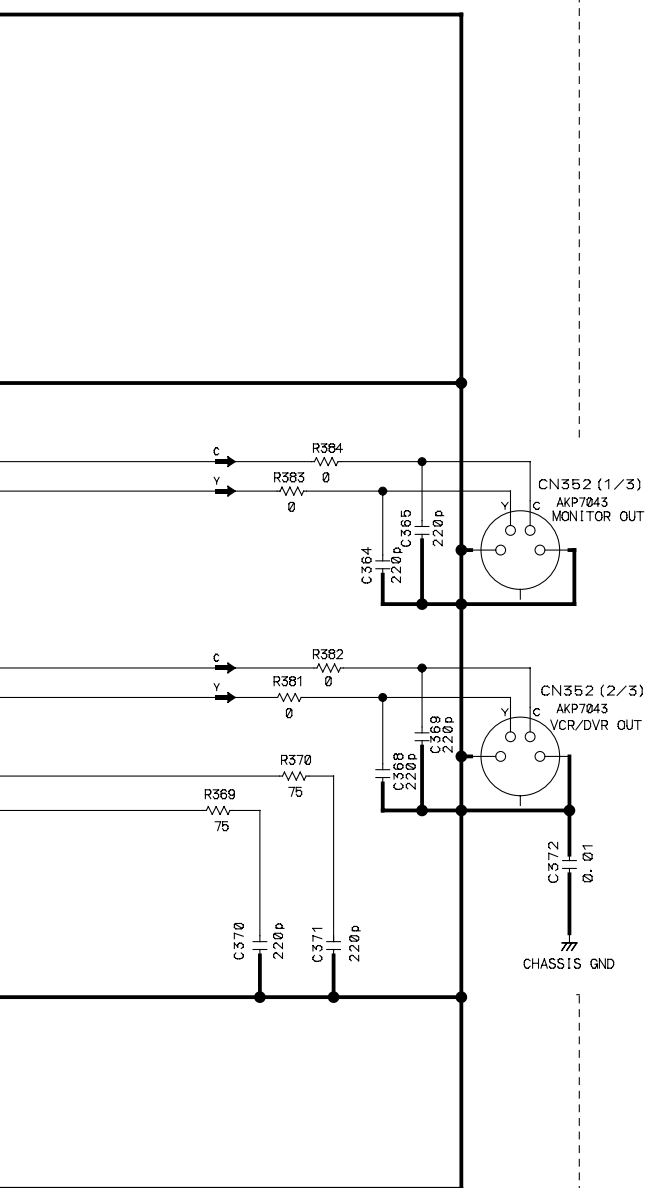 S. VIDEO ASSY
 (VSX-709RDS
 : AWX7462)


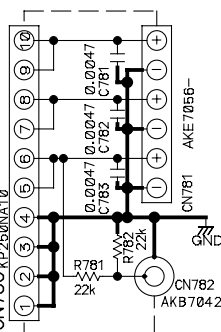
Q

Q

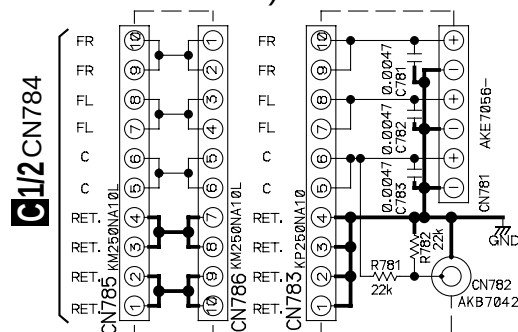 LARGE SP
 CONNECTION
 ASSY
 (VSX-709RDS
 : AWX7504)


R

R

 LARGE SP
 ASSY
 (VSX-709RDS
 : AWX7510)


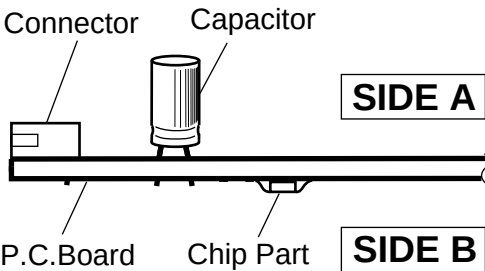
4. PCB CONNECTION DIAGRAM

NOTE FOR PCB DIAGRAMS :

- 1. Part numbers in PCB diagrams match those in the schematic diagrams.
- 2. A comparison between the main parts of PCB and schematic diagrams is shown below.


Symbol In PCB Diagrams	Symbol In Schematic Diagrams	Part Name
		Transistor
		Transistor with resistor
		Field effect transistor
		Resistor array
		3-terminal regulator

- 3. The parts mounted on this PCB include all necessary parts for several destinations.
- For further information for respective destinations, be sure to check with the schematic diagram.
- 4. View point of PCB diagrams.




4.1 DIGITAL IN ASSY

J DIGITAL IN ASSY

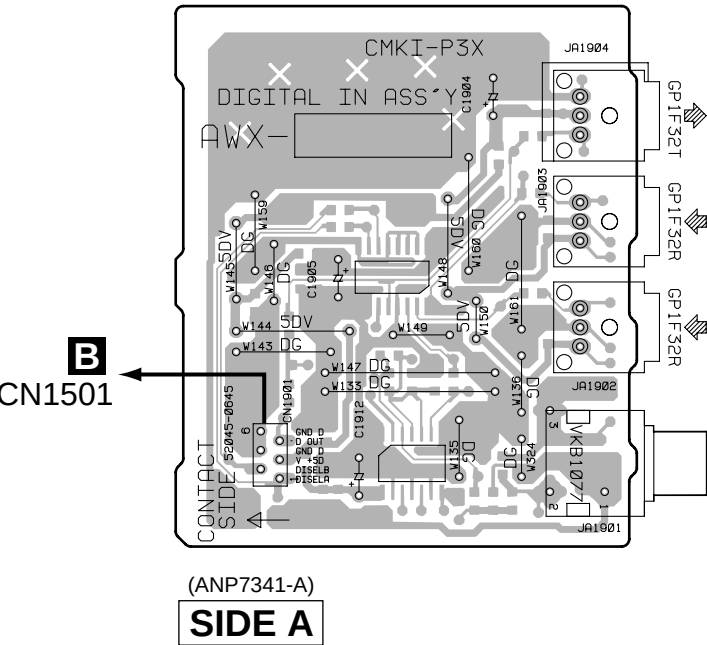

4.2 TRANS2, TRANS3, REGULATOR and TRANS1 ASSYS


F REGULATOR ASSY

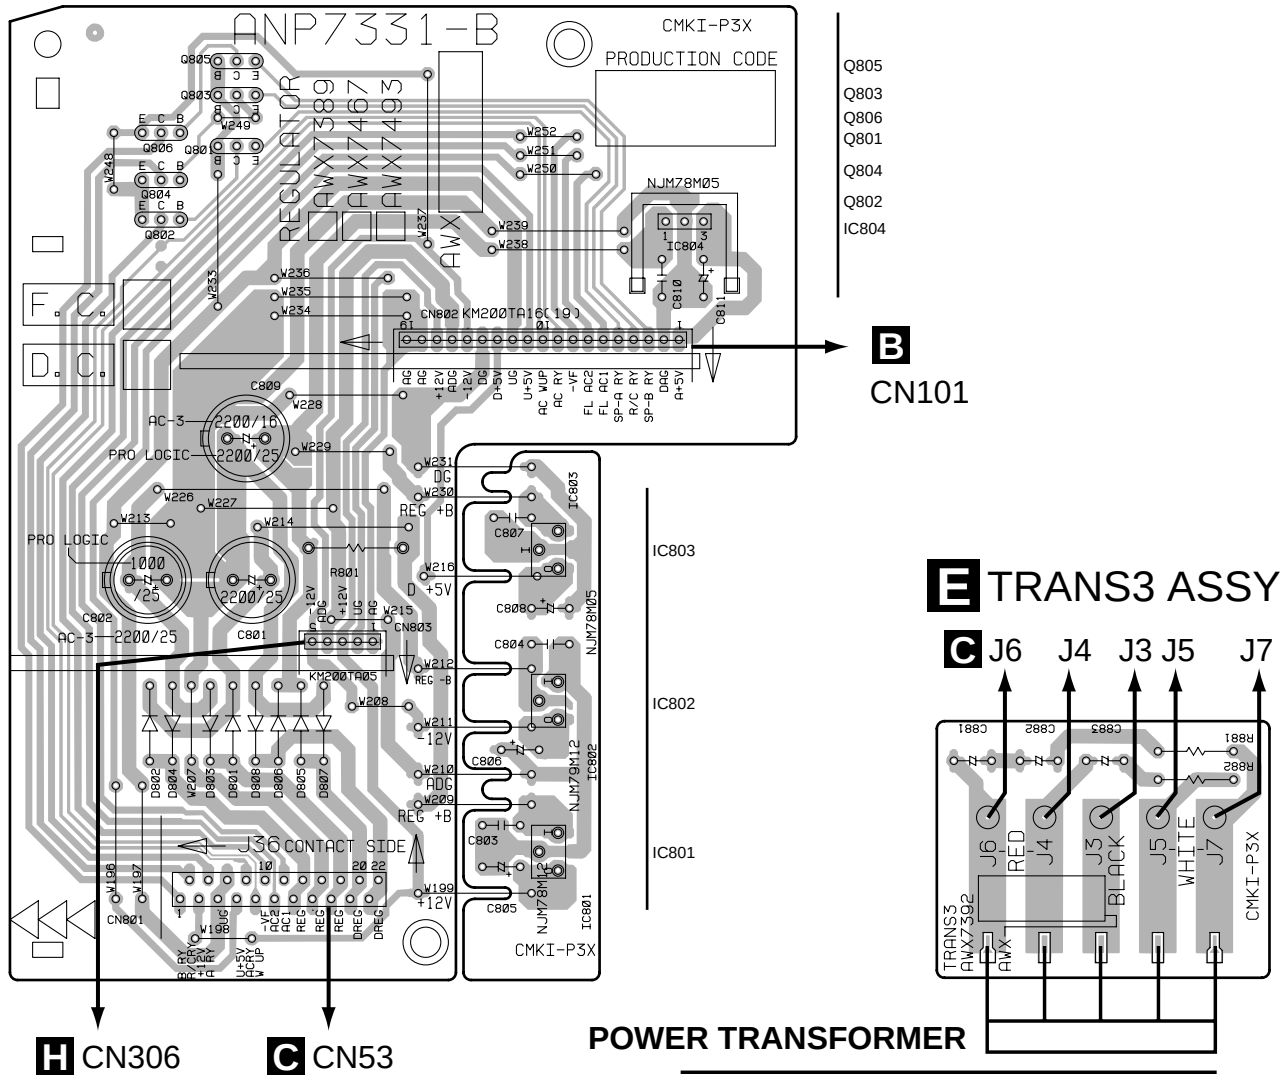

GA TRANS1 ASSY



(ANP7331-B)

SIDE A

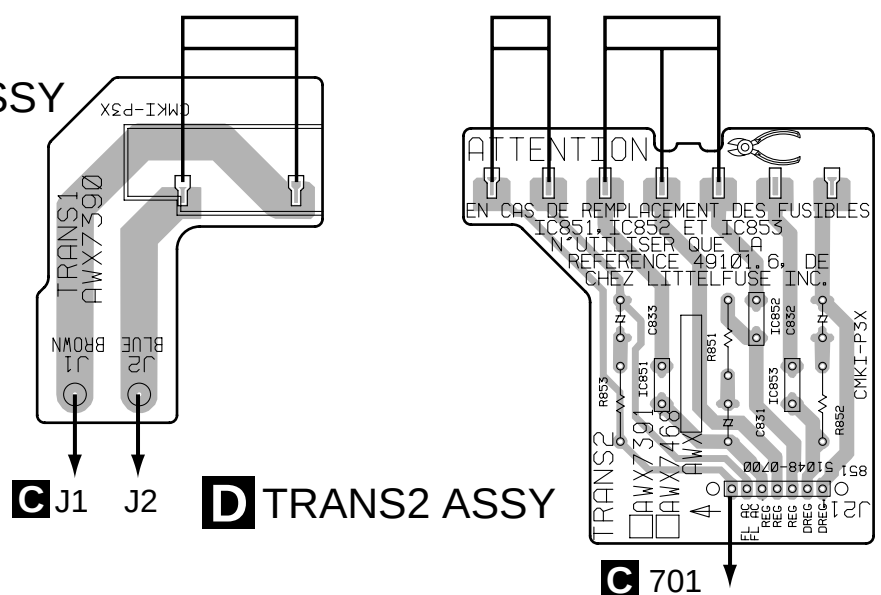



4.3 AMP INPUT and AMP&PRIMARY ASSYS

GB MECHA SW ASSY

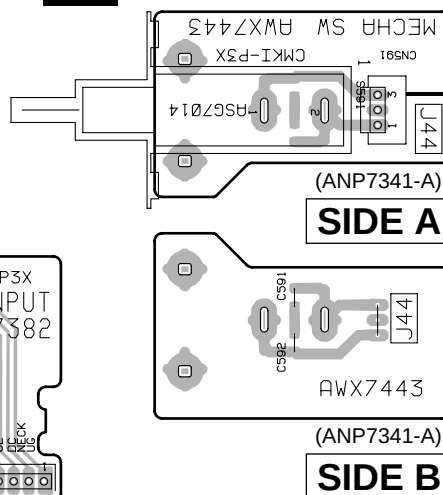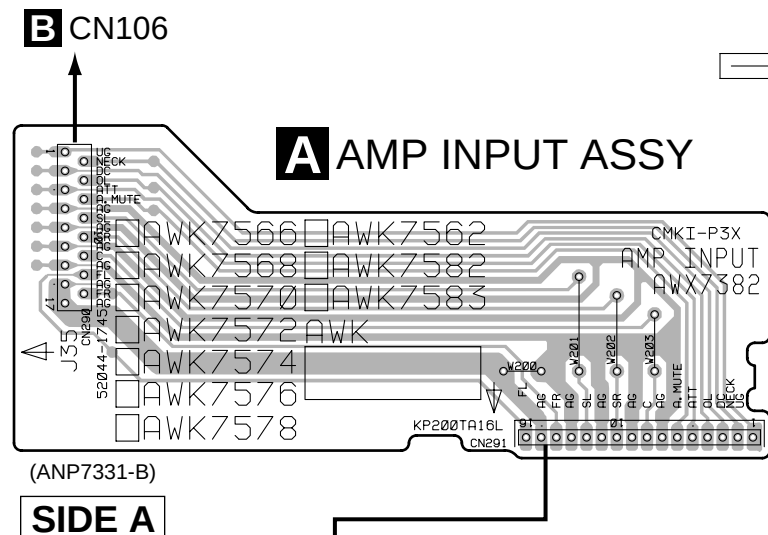

CAMP&PRIMARY ASSY

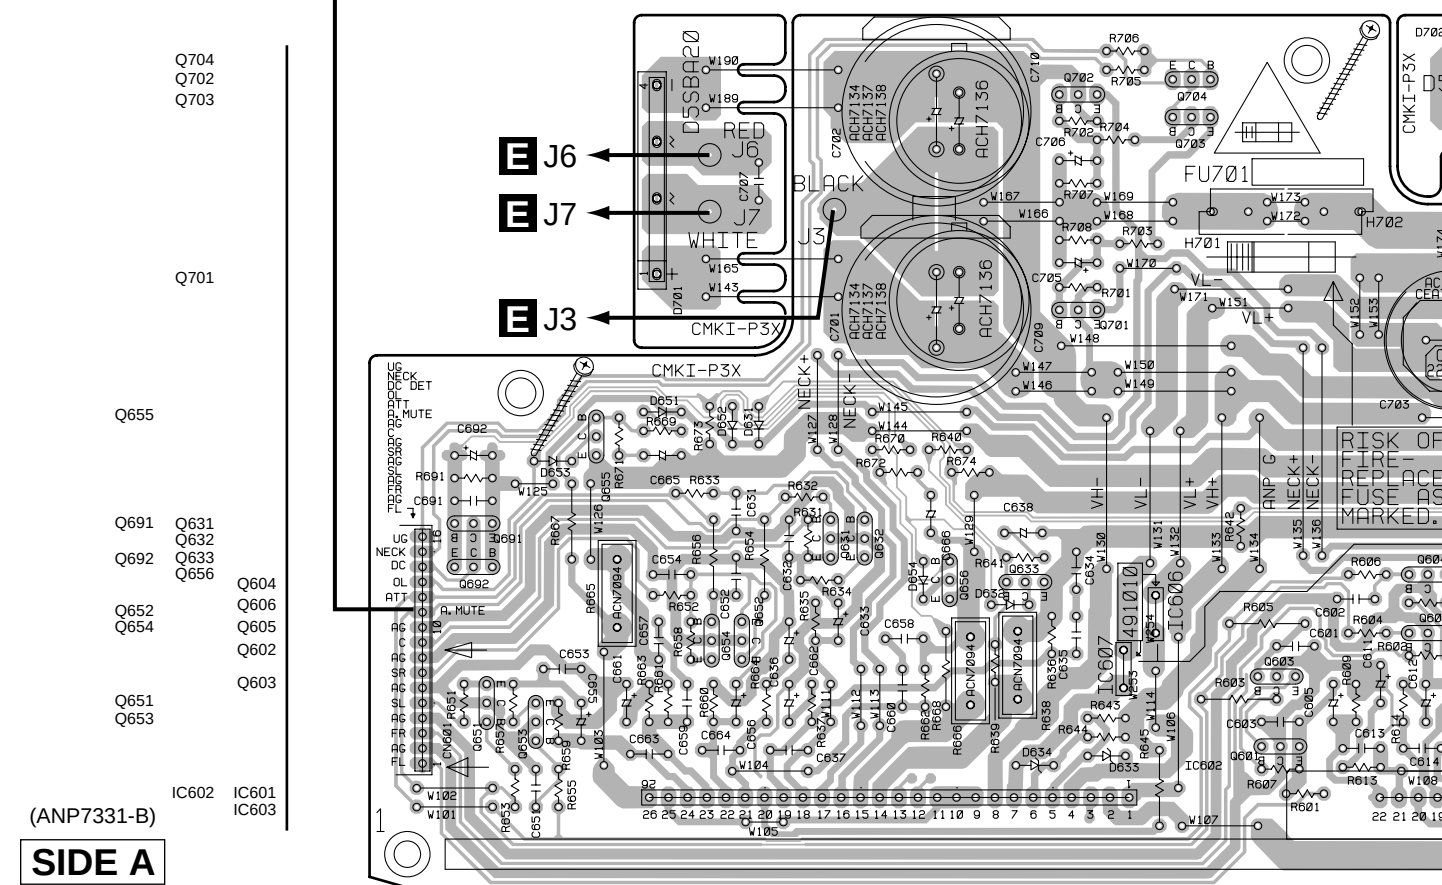


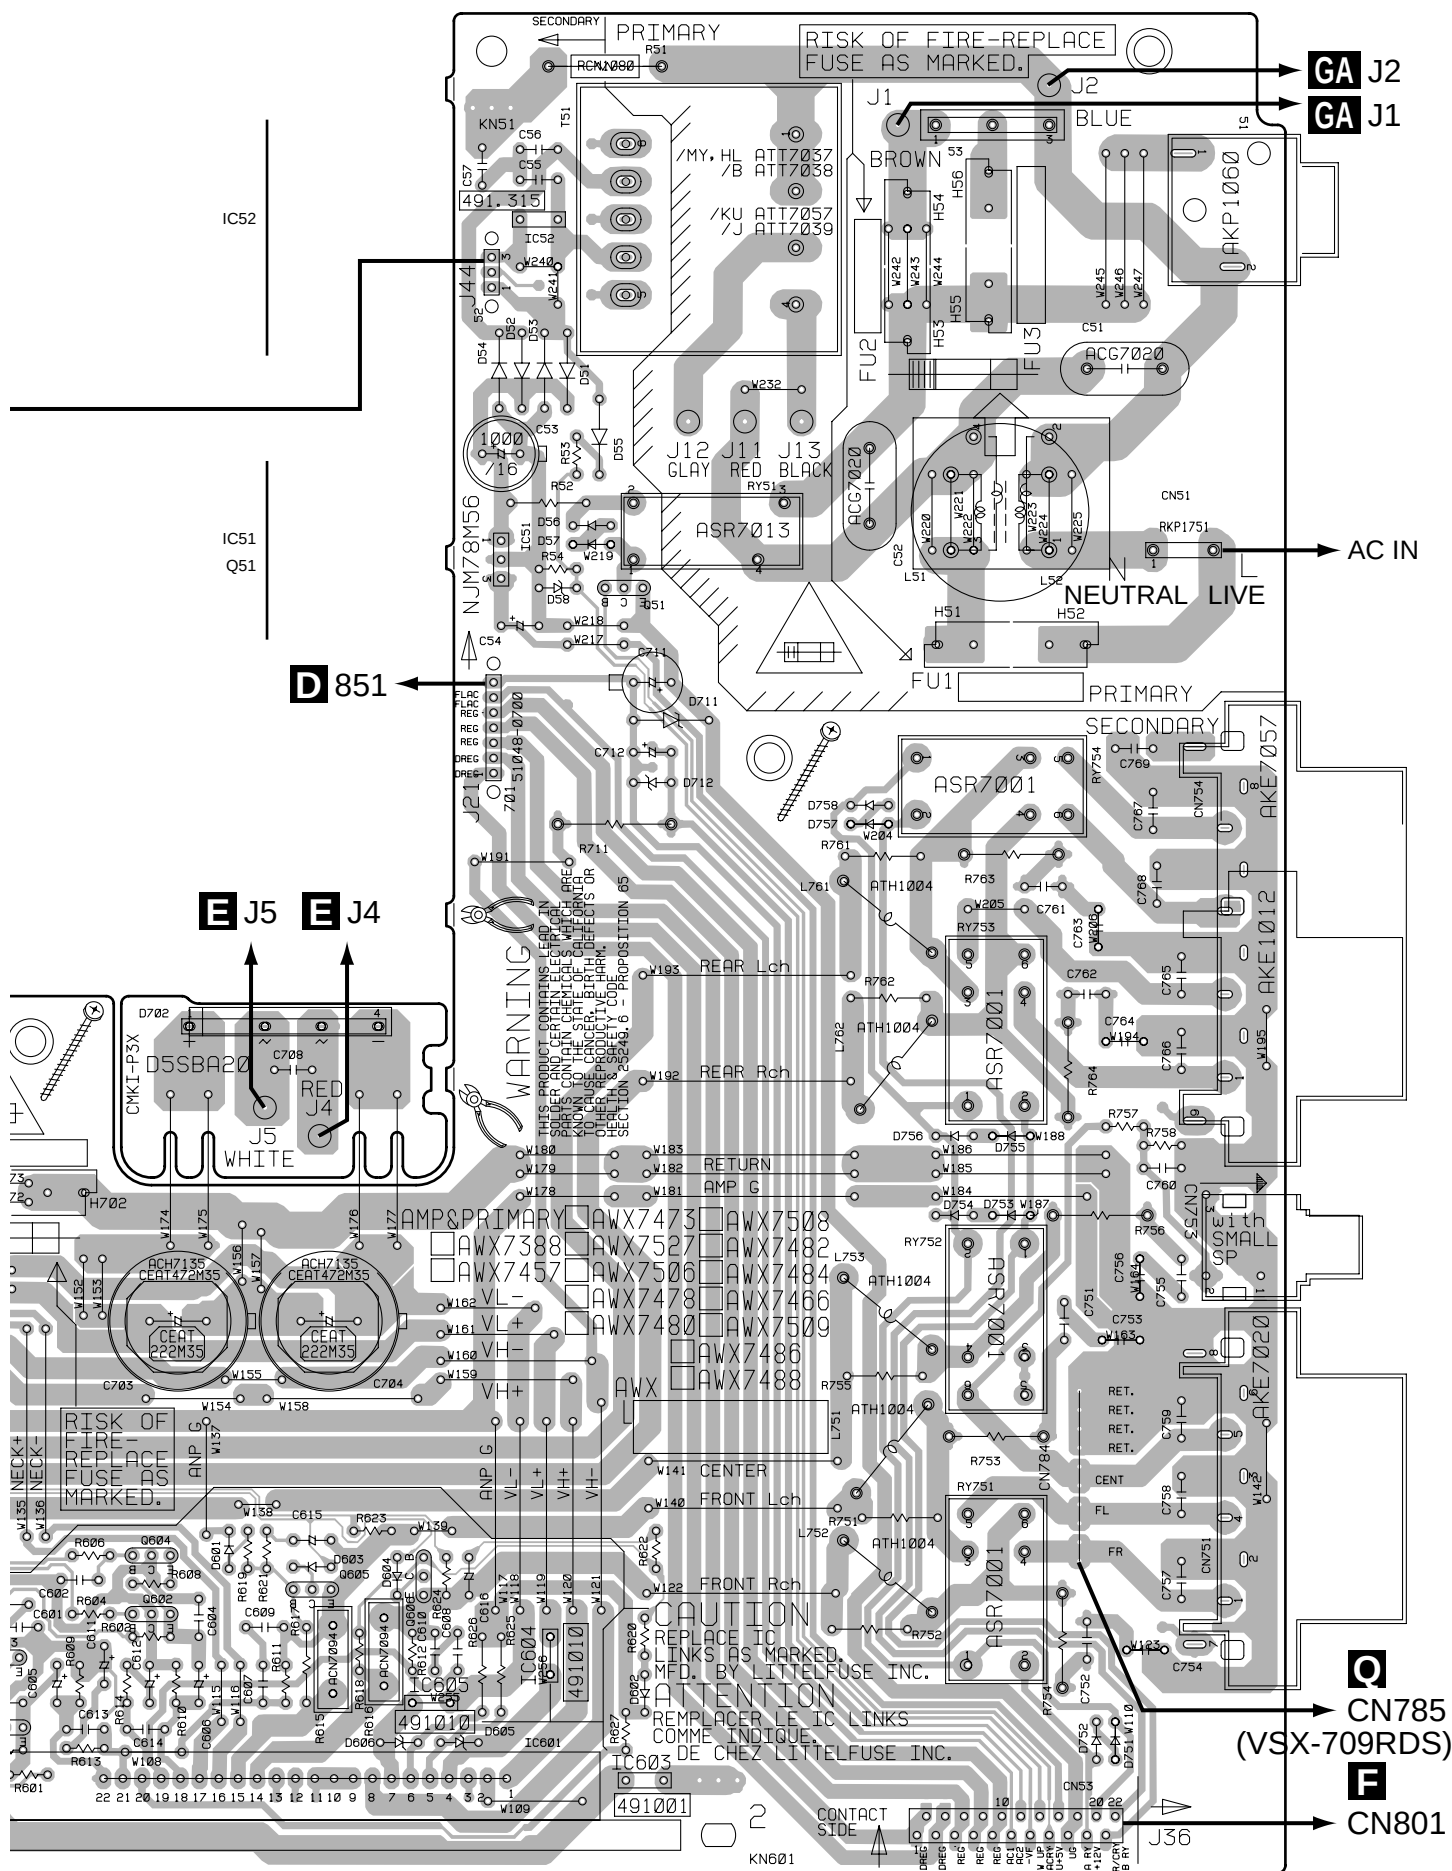

4.4 D.D & INPUT ASSY


B D.D & INPUT ASSY

K CN401 H CN303 P CN901 (VSX-70

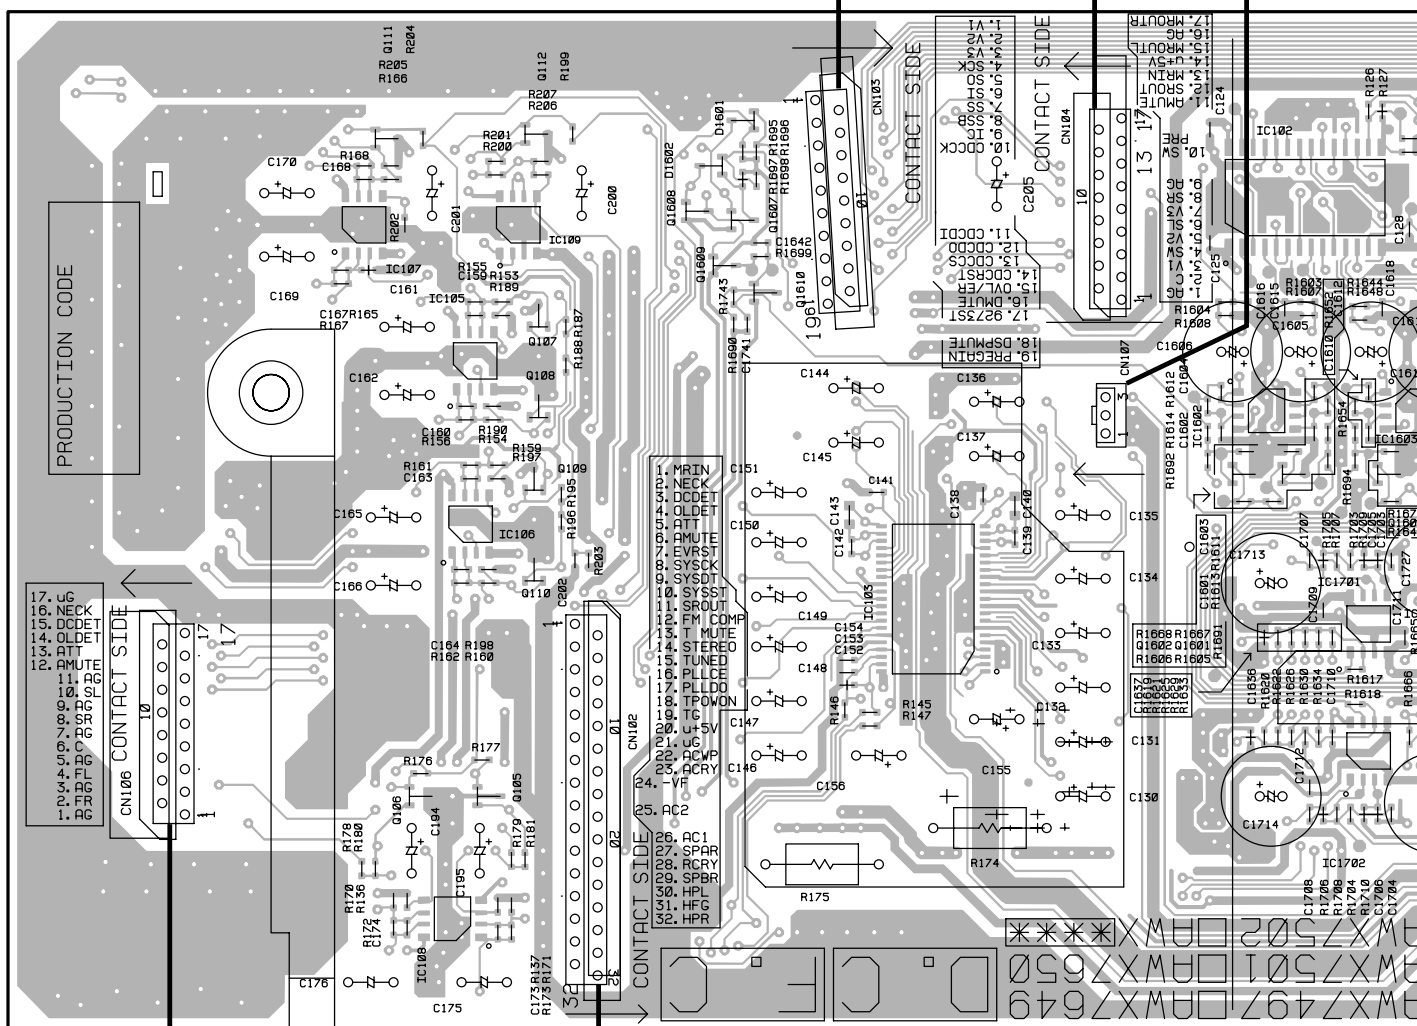


A CN290

K CN402

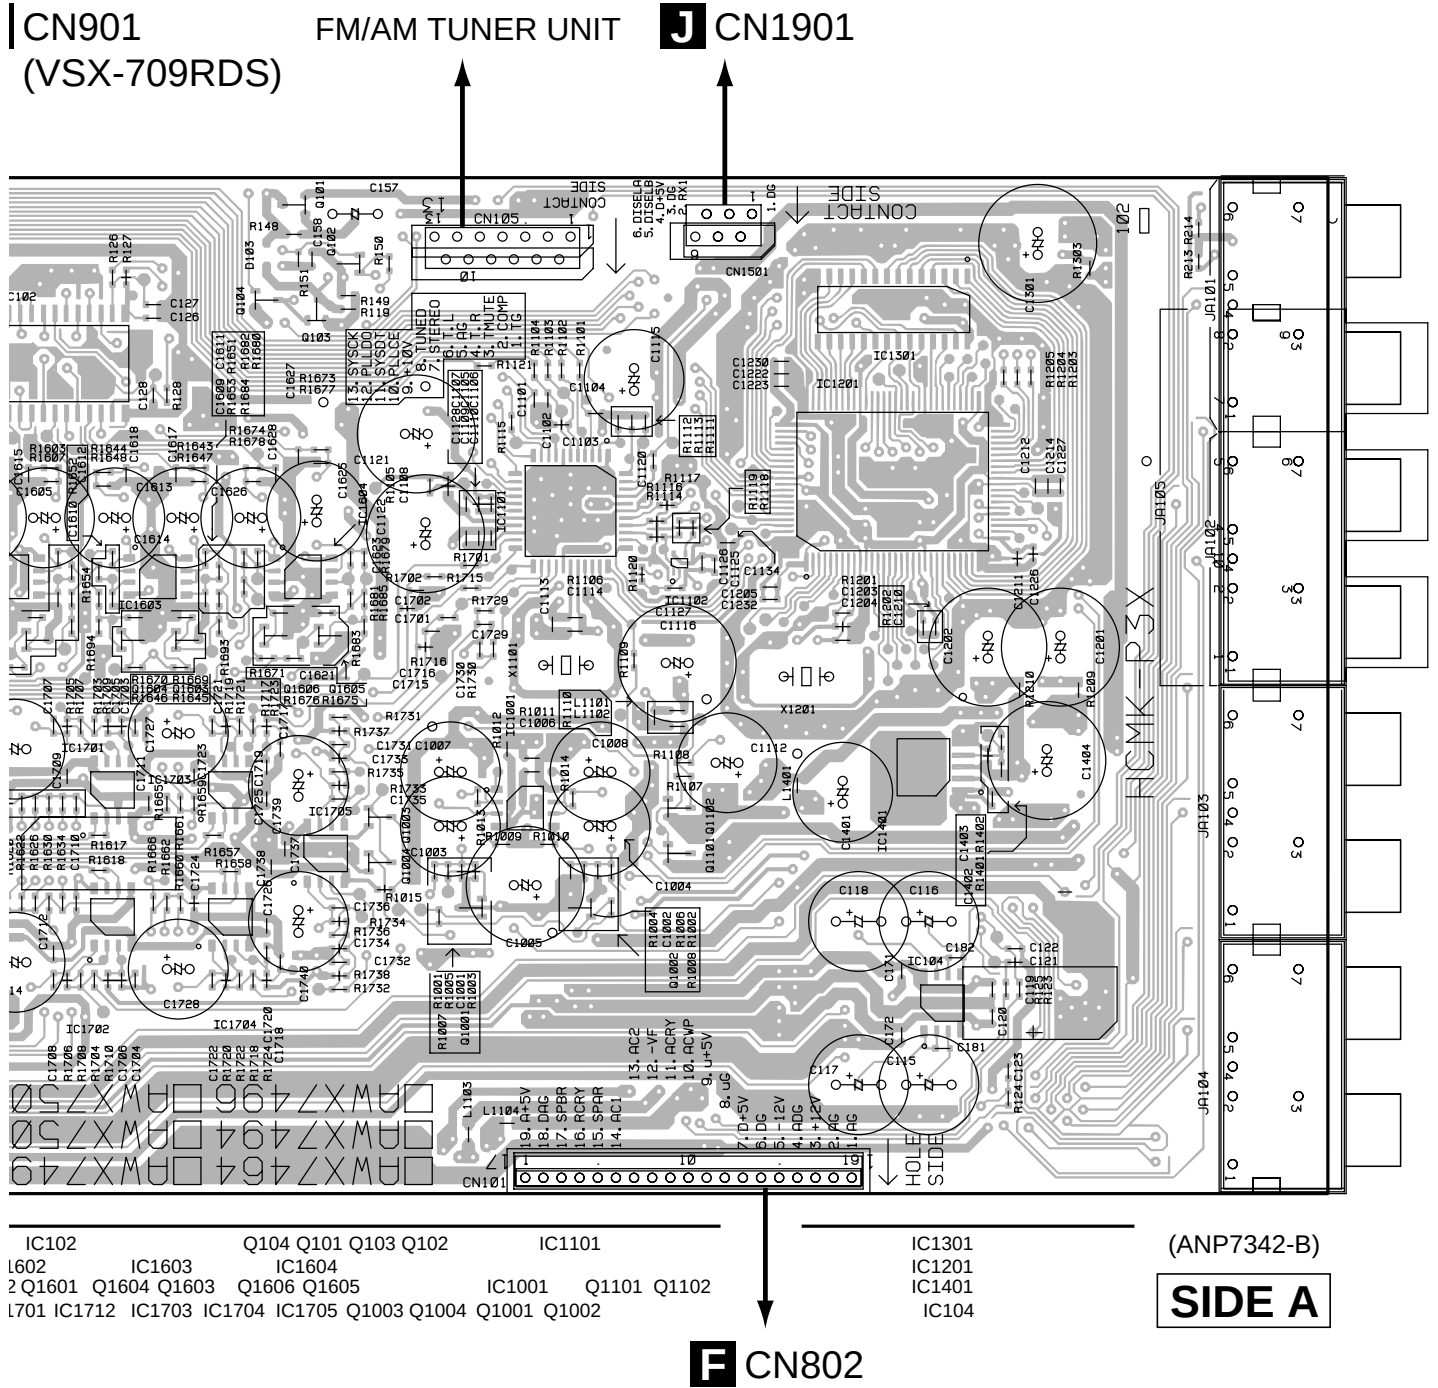


B D.D & INPUT ASSY

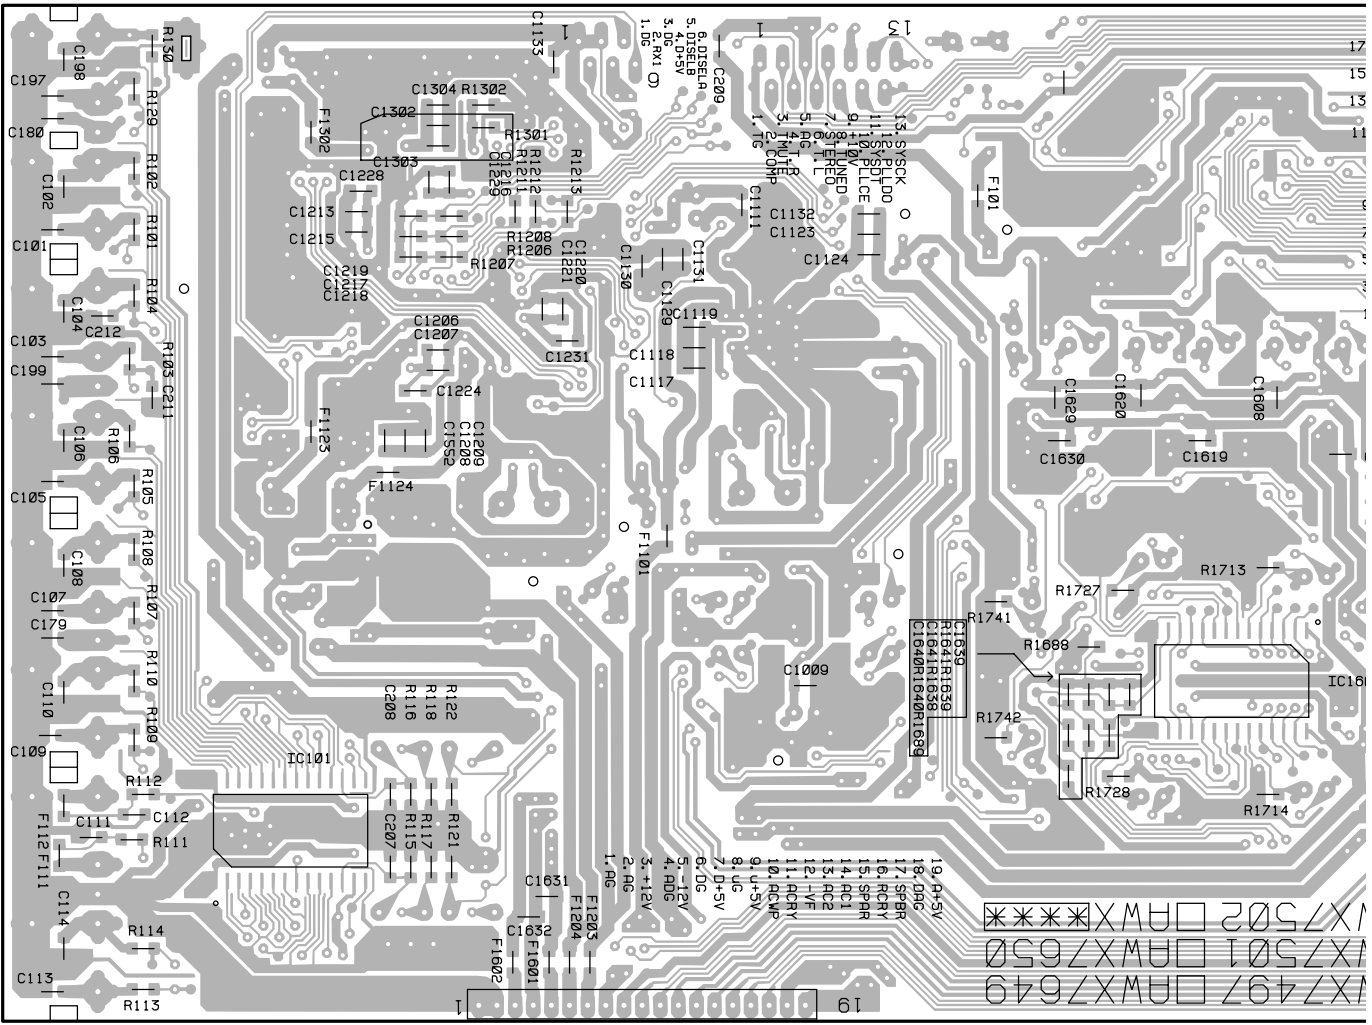

IC101

IC1801

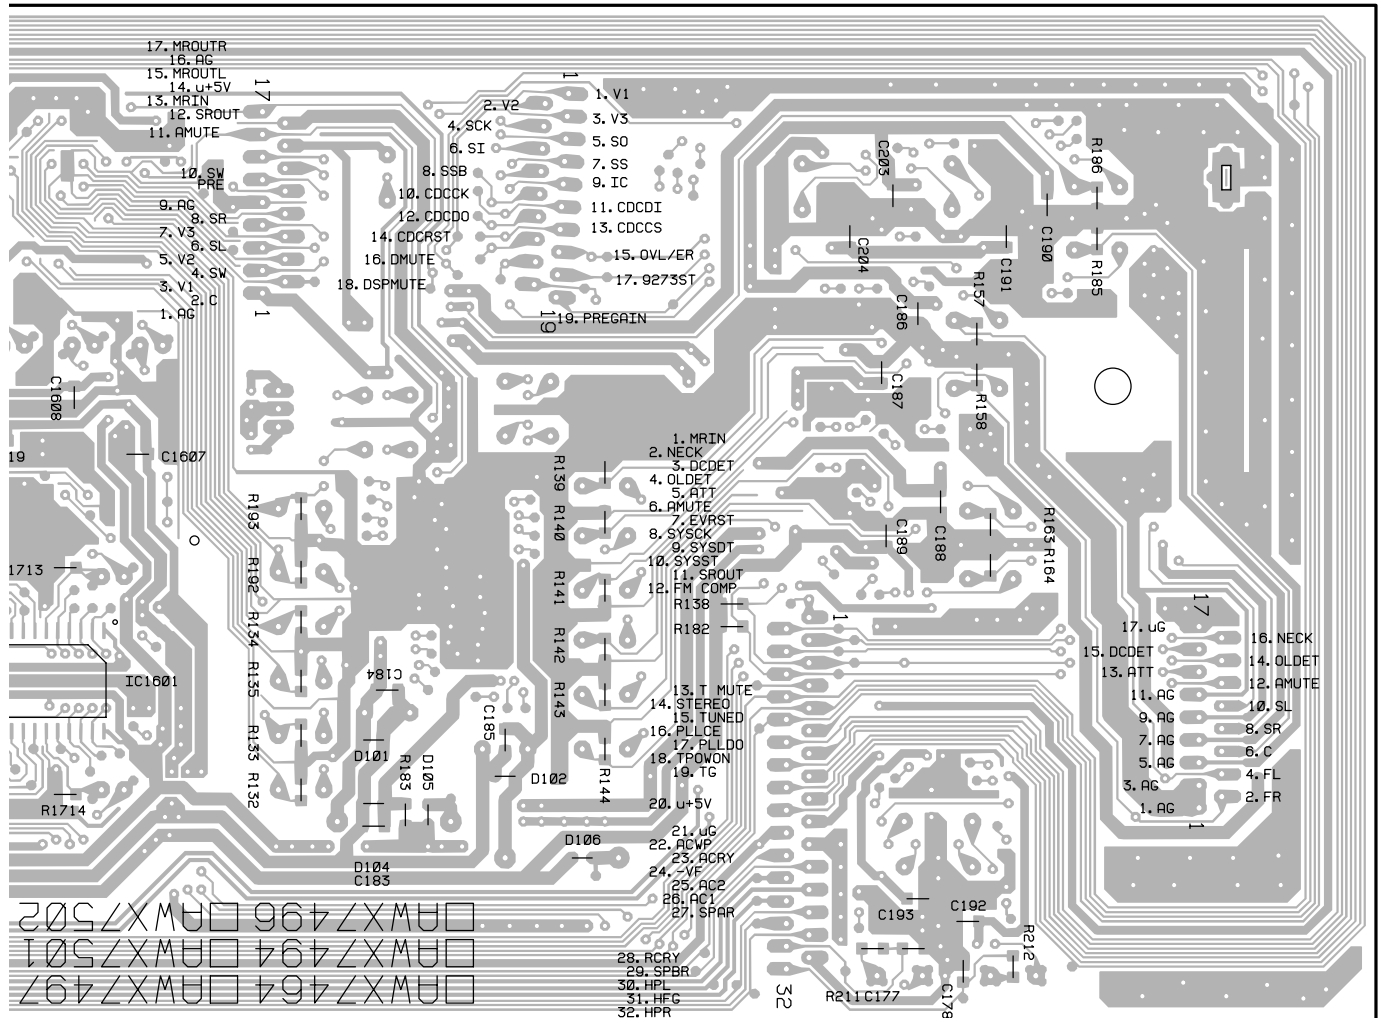



:1801

(ANP7342-B)


SIDE B

4.5 H.P., FRONT, R.ENCODER and POWER SW ASSYS


K FRONT ASSY

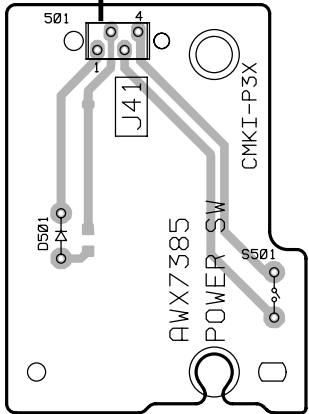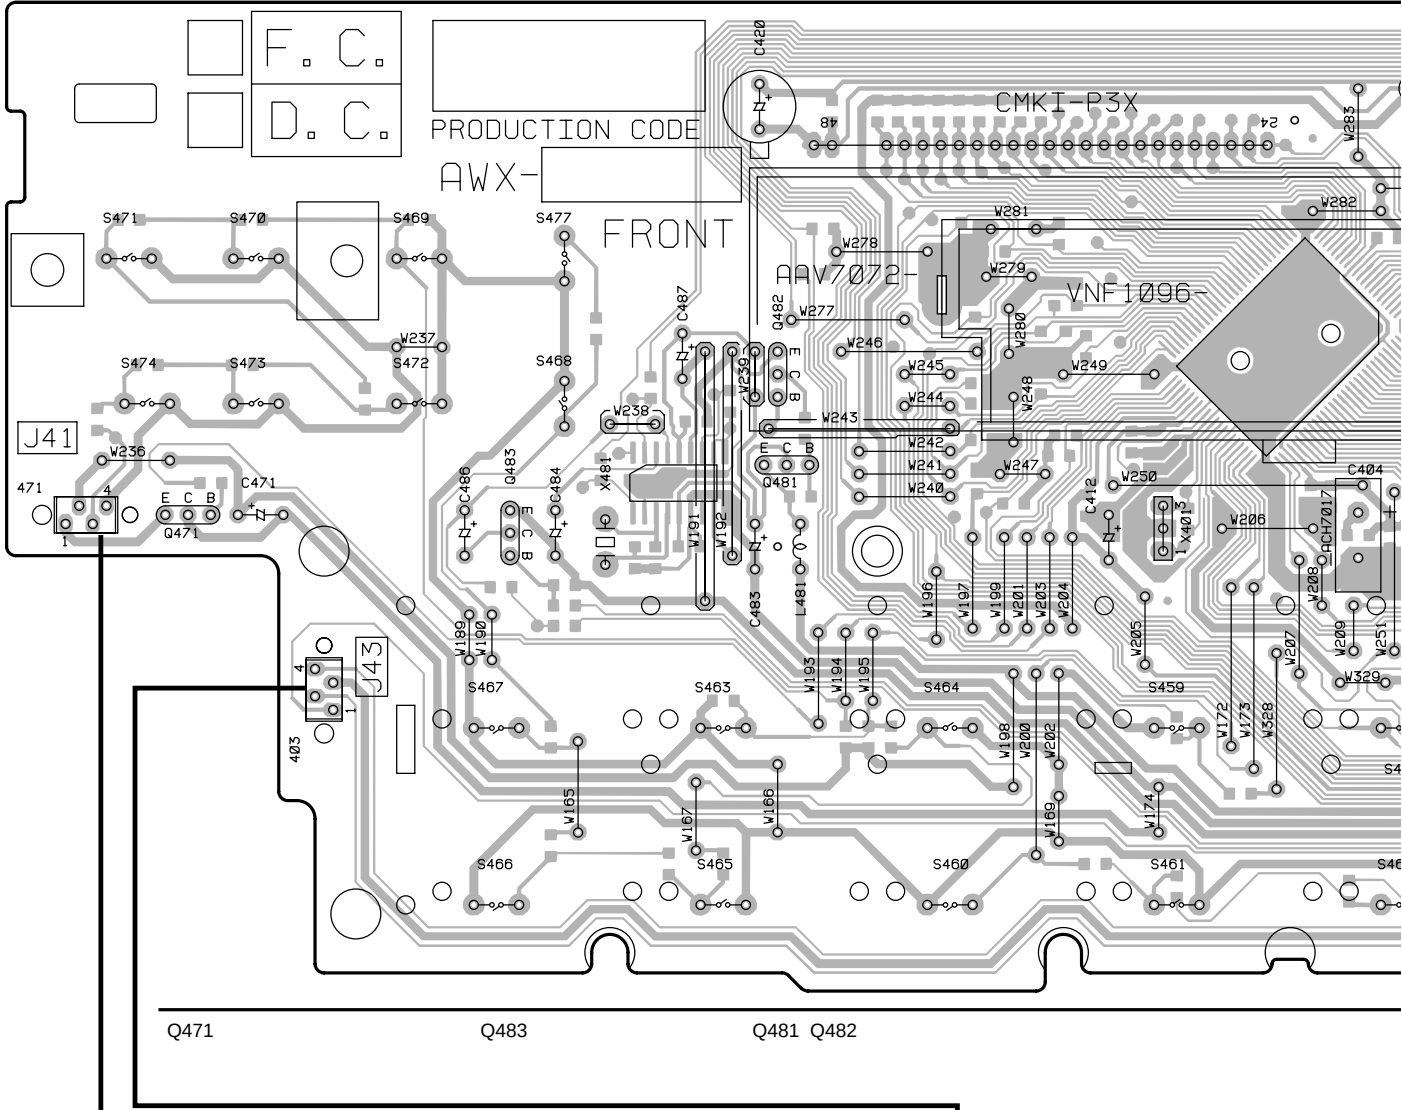

M POWER SW ASSY

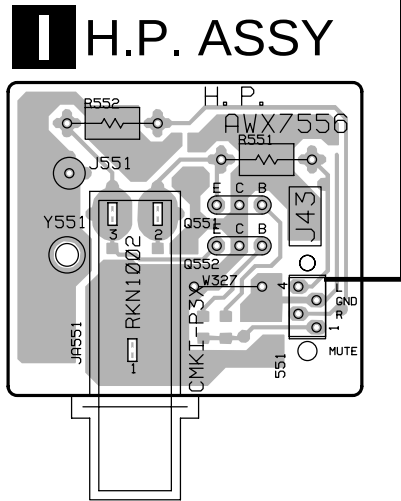

I H.P. ASSY

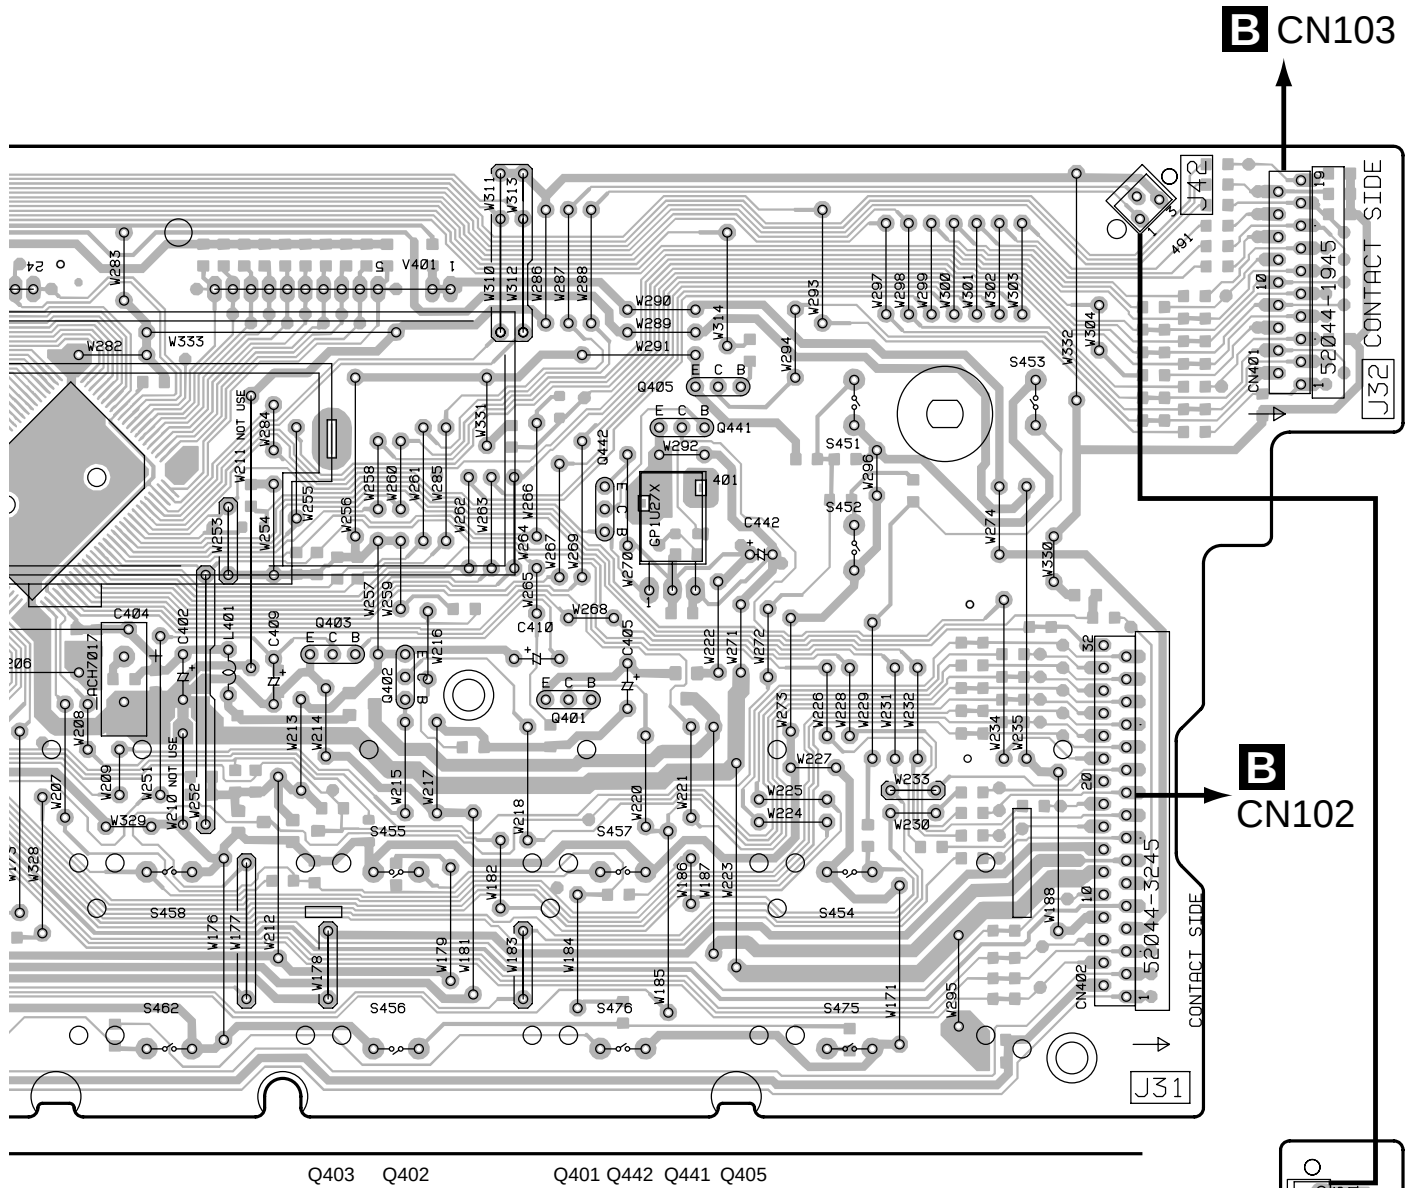


Q403 Q402 Q401 Q442 Q441 Q405

L R.ENCODER ASSY


(ANP7341-A)

SIDE A

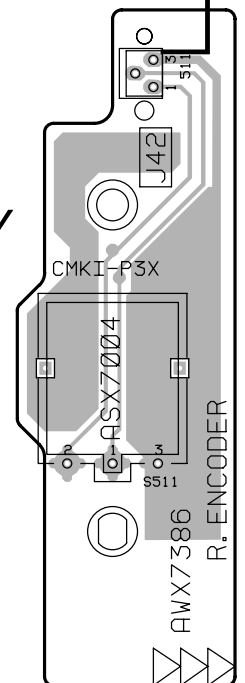


K L

K FRONT ASSY

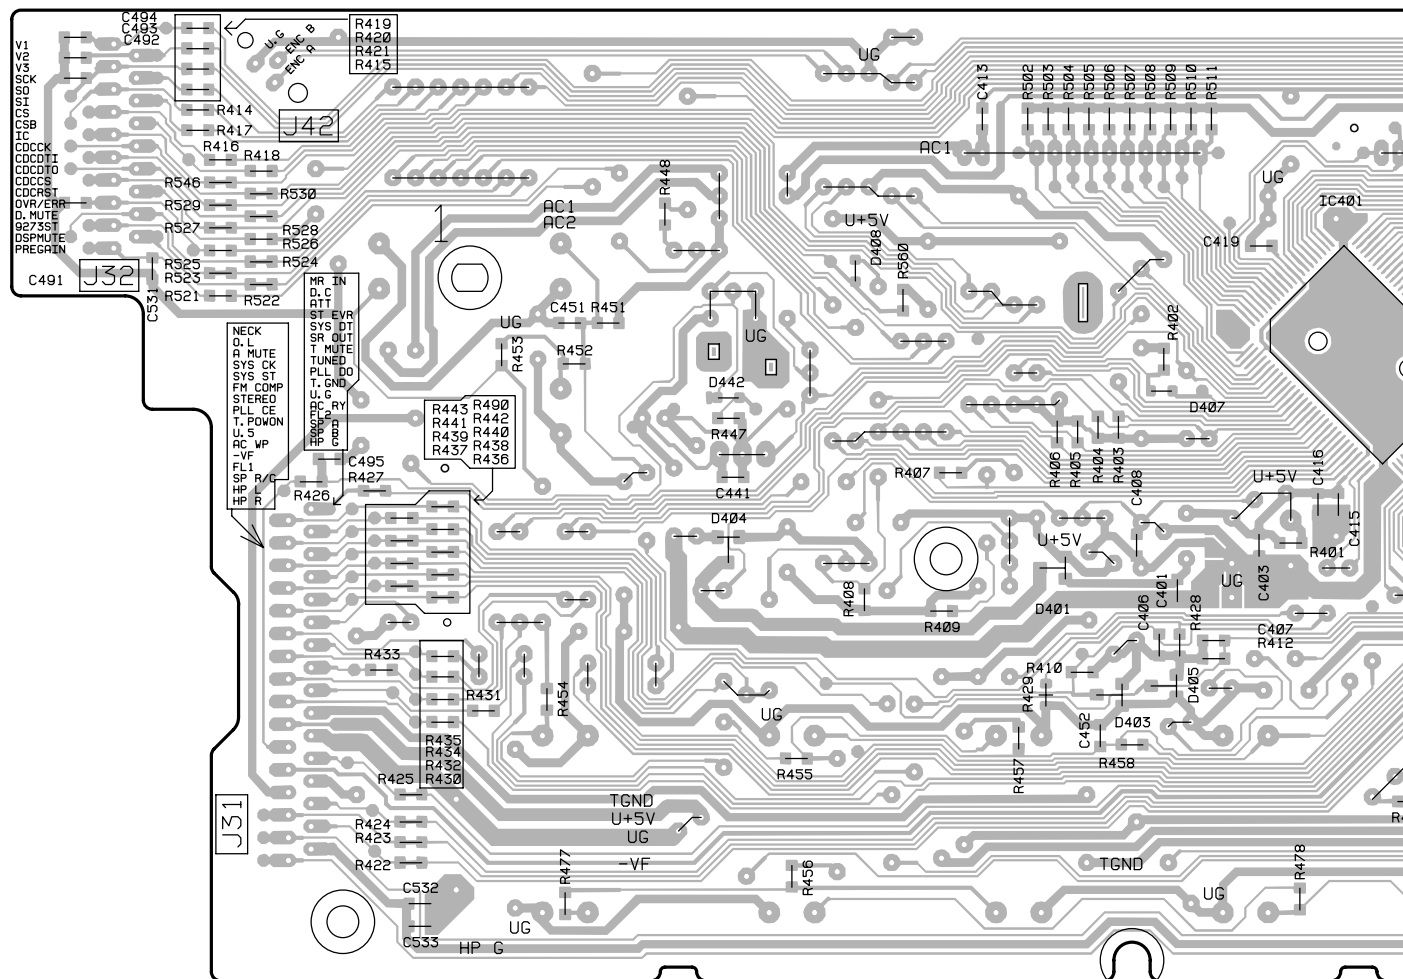

IC401

LR.ENCODER ASSY

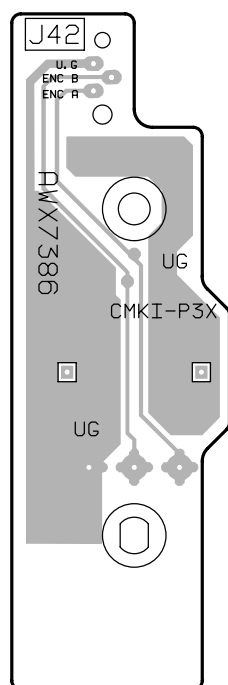


(ANP7341-A)

SIDE B


4.7 S.VIDEO, BOARD TO BOARD and FRONT VIDEO ASSYS

P FRONT VIDEO ASSY

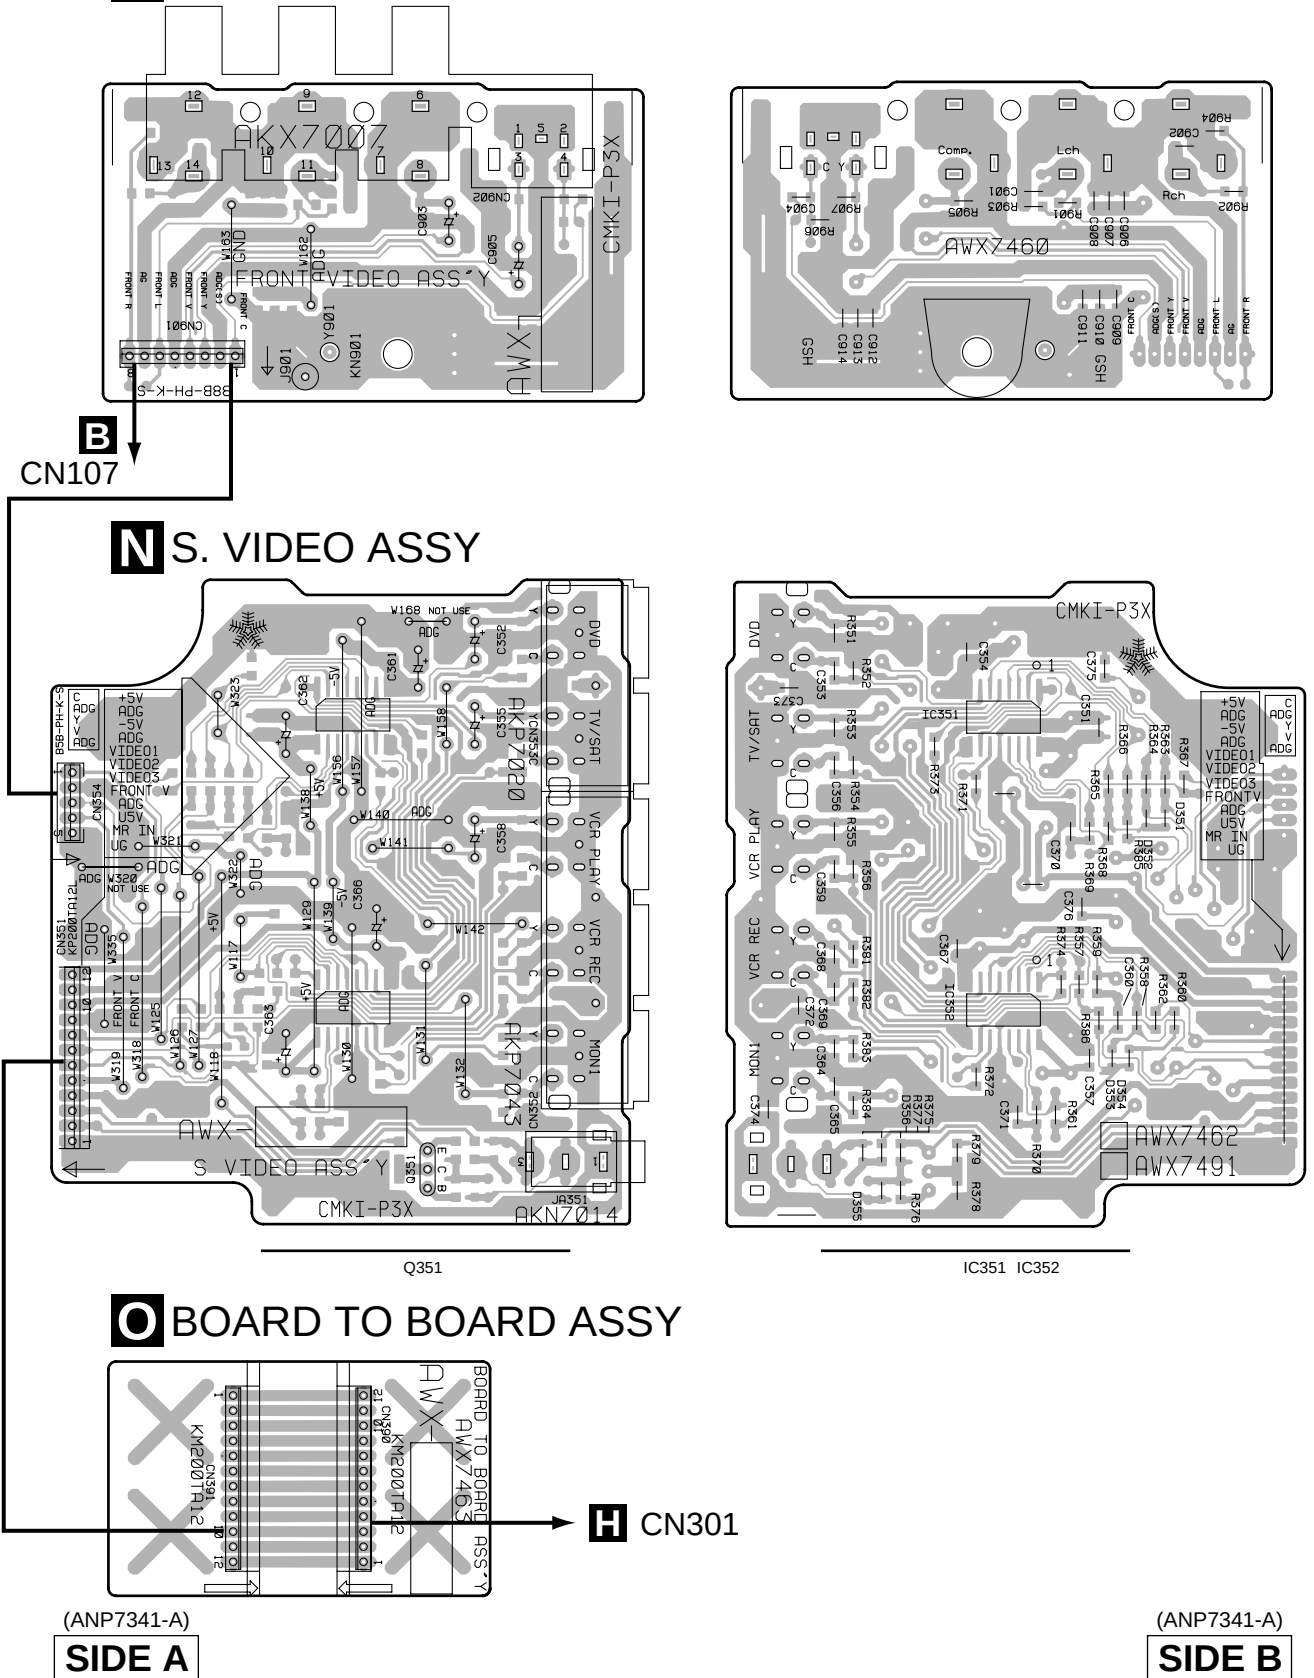


4.8 LARGE SP CONNECTION and LARGE SP ASSYS

R LARGE SP ASSY

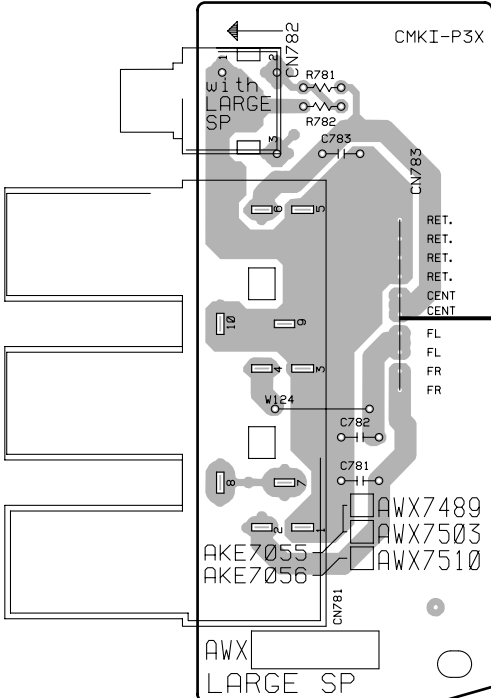

Q LARGE SP CONNECTION ASSY

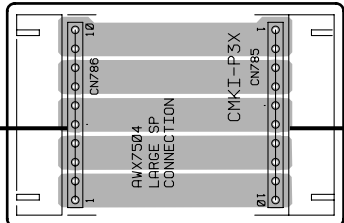

C CN784

(ANP7331-B)
SIDE A

5. PCB PARTS LIST

NOTES: ● The Δ mark found on some component parts indicates the importance of the safety factor of the part.

Therefore, when replacing, be sure to use parts of identical designation.

- When ordering resistors, first convert resistance values into code form as shown in the following examples.

Ex.1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47k ohm (tolerance is shown by J=5%, and K=10%).

560 Ω $\rightarrow$ 56×10^1 $\rightarrow$ 561 RD1/4PU 5 6 1 J

47k Ω $\rightarrow$ 47×10^3 $\rightarrow$ 473 RD1/4PU 4 7 3 J

0.5 Ω $\rightarrow$ R50 RN2H R 5 0 K

1 Ω $\rightarrow$ 1R0 RS1P 1 R 0 K

Ex.2 When there are 3 effective digits (such as in high precision metal film resistors).

5.62k Ω $\rightarrow$ 562×10^1 $\rightarrow$ 5621 RN1/4PC 5 6 2 1 F

■ CONTRAST OF PCB ASSEMBLIES

Mark	Symbol and Description	Part No.		Remarks
		VSX-709RDS /MYXJIEW, MYXJIGR, MVXJI	VSX-609RDS /MYXJIEW, MYXJIGR, MVXJI	
NSP	COMPLEX ASSY	AWK7573	AWK7567	
NSP	— POWER SW ASSY	AWX7385	AWX7385	
	— R.ENCODER ASSY	AWX7386	AWX7386	
	— MECHA SW ASSY	AWX7443	AWX7443	
	— VIDEO&6CH IN ASSY	AWX7458	AWX7474	
	— FRONT ASSY	AWX7459	AWX7477	
	— FRONT VIDEO ASSY	AWX7460	Not used	
	— DIGITAL IN ASSY	AWX7461	AWX7505	
	— S. VIDEO ASSY	AWX7462	Not used	
	— BOARD TO BOARD ASSY	AWX7463	Not used	
NSP	— H.P. ASSY	AWX7556	AWX7556	
NSP	AMP&PS ASSY	AWK7574	AWK7568	
NSP	— AMP INPUT ASSY	AWX7382	AWX7382	
	— REGULATOR ASSY	AWX7467	AWX7467	
	— TRANS2 ASSY	AWX7468	AWX7468	
NSP	— TRANS1 ASSY	AWX7390	AWX7390	
NSP	— TRANS3 ASSY	AWX7392	AWX7392	
	— AMP&PRIMARY ASSY	AWX7484	AWX7478	
	— LARGE SP CONNECTION ASSY	AWX7504	Not used	
	— LARGE SP ASSY	AWX7510	Not used	
	D.D & INPUT ASSY	AWX7464	AWX7497	

B D.D & INPUT ASSY

AWX7497 and AWX7464 are constructed the same except for the following :

Mark	Symbol and Description	Part No.		Remarks
		AWX7464	AWX7497	
	CN107 3P CONNECTOR POST	B3B-PH-K-S	Not used	
	101, 102 PCB BINDER	VEF1040	Not used	

H VIDEO&6CH IN ASSY

AWX7474 and AWX7458 are constructed the same except for the following :

Mark	Symbol and Description	Part No.		Remarks
		AWX7458	AWX7474	
	R309	RS1/10S101J	Not used	
	R313, R316	RS2LMF560J	Not used	
	R343, R344	Not used	RS1LMF820J	
	CN301 12P SOCKET	KP200TA12L	Not used	

VSX-709RDS, VSX-609RDS

C AMP&PRIMARY ASSY

AWX7478 and AWX7484 are constructed the same except for the following :

Mark	Symbol and Description	Part No.		Remarks
		AWX7484	AWX7478	
	C757-C759 C769 R757 R758 CN751 SPEAKER TERMINAL 6-P	Not used CKCYB102K50 Not used Not used Not used	CQMB4472J50 Not used RD1/4PU223J RD1/4PU222J AKE7020	
	CN753 PIN JACK 1-P CN784 10P SOCKET	Not used KP250NA10	AKB7042 Not used	

J DIGITAL IN ASSY

AWX7505 and AWX7461 are constructed the same except for the following :

Mark	Symbol and Description	Part No.		Remarks
		AWX7461	AWX7505	
	C1903 R1903 JA1904 OPTICAL LINK OUT	CKSQYB104K25 RS1/10S101J GP1F32T	Not used Not used Not used	

K FRONT ASSY

AWX7477 and AWX7459 are constructed the same except for the following :

Mark	Symbol and Description	Part No.		Remarks
		AWX7459	AWX7477	
	R428 R429	Not used RS1/10S0R0J	RS1/10S472J RS1/10S751J	

■ PCB PARTS LIST FOR VSX-709RDS UNLESS OTHERWISE NOTED

Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
------	-----	-------------	----------	------	-----	-------------	----------

A AMP INPUT ASSY

OTHERS

CN290	17P CONNECTOR	52044-1745
CN291	16P SOCKET	KP200TA16L

Q1003, Q1101, Q1607, Q1608, Q1610	DTA124EK
Q1004, Q1102, Q1609	DTC124EK
D1601, D1602	1SS181
D103, D105, D106	1SS355
D104	UDZS5.1B
D101, D102	UDZS6.8B

B D.D & INPUT ASSY

SEMICONDUCTORS

IC1101	CS4226-KQ(J)
IC1301	KM68257EJ-15
IC108	M5216FP
IC103	M62446FP
IC1001	NJM2100M
IC1602-IC1604, IC1701-IC1705	NJM4558MD
IC1401	PQ20WZ51
IC102	TC9163AF
IC1601	TC9164AF
IC101	TC9273F-007
IC104-IC107	UPC4570G2
IC1201	YSS912C
Q101, Q102	2SC2412K
Q1001, Q1002, Q105-Q112	2SC3326
Q1601-Q1606	2SC3326

COILS AND FILTERS

L1401 CHIP SOLID INDUCTOR	ATL7002
F1101, F1123, F1124, F1203, F1204	DTF1064
F1302, F1601, F1602 CHIP BEAD	DTF1064
F101, F111, F112 CHIP BEAD	DTF1067
L1101-L1104	QTL1013
CHIP SOLID INDUCTOR	

CAPACITORS

C101-C114, C1207, C1209, C1213	CCSQCH101J50
C1217, C1218, C1221, C1303	CCSQCH101J50
C1640, C1641, C197, C198	CCSQCH101J50
C207, C208	CCSQCH101J50
C211, C212	CCSQCH220J50
C1119	CCSQCH271J50
C1123, C1124	CCSQCH331J50
C1118, C1130, C1639	CCSQCH471J50
C1001, C1002, C121, C1212, C122	CCSRCH101J50
C1223, C123, C126-C128	CCSRCH101J50

Mark	No.	Description	Part No.
	C152–C154, C159, C160 C163, C164 C1102, C1736 C1707, C1708, C1721, C1722, C173 C1735, C174	CCSRCH101J50 CCSRCH101J50 CCSRCH102J50 CCSRCH151J50 CCSRCH151J50	
	C1113, C1114 C1203, C1204 C1601, C1602, C1609, C1610, C167 C1623 C1103, C1104	CCSRCH180J50 CCSRCH200J50 CCSRCH221J50 CCSRCH271J50 CCSRCH390J50	
	C1101, C1106, C1110, C1210 C1603, C1604, C1611, C1612 C130–C137, C146 C1116, C1121, C1122, C1201, C1404 C157, C175, C176	CCSRCH471J50 CCSRCH471J50 CEAT100M50 CEAT101M10 CEAT101M16	
	C1112 C1713, C1714, C1727, C1728 C1739, C1740 C1005, C1202 C144, C145, C147–C151, C205	CEAT1R0M50 CEAT220M25 CEAT220M25 CEAT221M6R3 CEAT3R3M50	
	C117, C118, C161, C162 C165, C166, C169 C155, C156 C1003, C1004, C115, C116, C1401 C1605, C1606, C1613, C1614	CEAT470M25 CEAT470M25 CEAT471M10 CEAT4R7M50 CEAT4R7M50	
	C1625, C1626, C170, C194, C195 C201 C1115 C1301 C1007, C1008	CEAT4R7M50 CEAT4R7M50 CEATR47M50 CEJA101M10 CEJANP100M10	
	C1129, C1132, C1206, C1208 C1215, C1216, C1220, C1302 C1607, C1608, C1619, C1620 C1629, C1630, C177–C180, C183 C186–C193, C199	CKSQYB103K50 CKSQYB103K50 CKSQYB103K50 CKSQYB103K50 CKSQYB103K50	
	C1108 C140, C143 C1009, C1111, C1117, C1133, C1219 C1224, C1225, C1228, C1229, C1231 C1304, C1631, C1632, C209	CKSQYB224K16 CKSQYB334K16 CKSQYF104Z25 CKSQYF104Z25 CKSQYF104Z25	
	C184, C185 C1006, C1128, C1134, C119, C120 C1205, C1211, C1214, C1222 C124, C125, C158, C1636, C1637 C1642, C1709, C171, C1710–C1712	CKSQYF473Z50 CKSRYB103K50 CKSRYB103K50 CKSRYB103K50 CKSRYB103K50	
	C172, C1723–C1726, C1737, C1738 C1705, C1706, C1719, C1720 C1733, C1734 C1621 C168	CKSRYB103K50 CKSRYB104K16 CKSRYB104K16 CKSRYB122K50 CKSRYB152K50	
	C139, C142 C1615–C1618, C1627, C1703, C1704 C1717, C1718, C1731 C1107 C1701, C1702, C1715, C1716, C1729	CKSRYB153K50 CKSRYB222K50 CKSRYB222K50 CKSRYB223K50 CKSRYB682K50	
	C1732 C138, C141 C1105, C1109, C1226, C1227, C1230 C1232, C202 C1628	CKSRYB682K50 CKSRYB822K50 CKSRYF104Z16 CKSRYF104Z16 CKSRYF104Z50	

Mark	No.	Description	Part No.
RESISTORS			
	R1302, R1689		RS1/10S0R0J
	R211, R212		RS1/10S100J
	R1206-R1208, R1638-R1640		RS1/10S102J
	R115-R118, R121, R122		RS1/10S104J
	R132-R135, R139-R143		RS1/10S104J
	R157, R158, R163, R164		RS1/10S104J
	R185, R186, R192, R193		RS1/10S104J
	R183		RS1/10S122J
	R144		RS1/10S204J
	R103, R104, R111, R112		RS1/10S222J
	R101, R102, R105-R110		RS1/10S331J
	R113, R114, R129, R130		RS1/10S331J
	R1211-R1213		RS1/10S472J
	R138, R1641, R1713, R1714		RS1/10S473J
	R1727, R1728, R1741, R1742, R182		RS1/10S473J
△	R174, R175		RS1LMF101J
	Other Resistors		RS1/16S□□□J
OTHERS			
	CN1501 CONNECTOR 6P		52045-0645
	CN104, CN105 13P CONNECTOR		52045-1345
	CN106 17P CONNECTOR		52045-1745
	CN103 19P CONNECTOR		52045-1945
	CN102 32P CONNECTOR		52045-3245
	JA101-JA104 PIN JACK(4P)		AKB7048
	CN107 3P CONNECTOR POST		B3B-PH-K-S
	CN101 19P SOCKET		KP200TA19L
	101, 102 PCB BINDER		VEF1040
	X1101 CRYSTAL RESONATOR (18.432MHz)		RSS1052
	X1201 CRYSTAL RESONATOR (12.288MHz)		VSS1140
C AMP&PRIMARY ASSY			
SEMICONDUCTORS			
△	IC52 PROTECTOR (315mA)		AEK7003
△	IC603 PROTECTOR (1A)		AEK7009
	IC51		NJM78M56FA
△	IC601		PAC010A
△	IC602		PAC011A
	Q703		2SA1145
	Q702		2SB1238X
	Q691, Q692		2SC1740S
	Q704		2SC1845
	Q605, Q606, Q633, Q655, Q656		2SC2240
	Q601-Q604, Q631, Q632		2SC2878
	Q651-Q654		2SC2878
	Q701		2SD1859X
	Q51		KRC101M
	D56, D57, D601-D604		1SS133
	D631, D632, D651-D654		1SS133
	D751-D758		1SS133
△	D701, D702		D5SBA20(B)
	D711		MTZJ22D
	D58		MTZJ5.1A
	D712		MTZJ5.1B
	D605, D606, D633, D634		MTZJ8.2A
△	D51-D55		S5688G

VSX-709RDS, VSX-609RDS

Mark	No.	Description	Part No.
COILS AND FILTERS			
△	L751–L753, L761, L762 L52		ATH1004 XTF3001
SWITCHES AND RELAYS			
△	RY751–RY754 RY51		ASR7001 ASR7013
CAPACITORS			
△	C707, C708 (0.01μF/AC250V) C51, C52 (10000pF/AC250V) C701, C702 (4700μF/63V) C703, C704 (3300μF/42V) C607–C610, C634, C635		ACG1005 ACG7020 ACH7134 ACH7135 CCCSL120J50
	C657–C660 C613, C614, C637, C663, C664 C615, C616, C638, C665, C666 C705, C706 C712		CCCSL120J50 CCCSL221J50 CEANP2R2M50 CEAT100M2A CEAT101M10
	C611, C612, C636, C661, C662 C711 C53 C692 C54		CEAT101M16 CEAT101M35 CEAT102M16 CEAT221M10 CEAT470M25
	C605, C606, C633, C655, C656 C751–C756, C761–C764 C55–C57 C601, C602, C631, C651, C652 C691, C769		CEAT4R7M50 CFTYA224J50 CGCYX103M25 CKCYB102K50 CKCYB102K50
	C603, C604, C632, C653, C654 C765–C768		CKCYB331K50 CQ MBA472J50
RESISTORS			
△	R615, R616, R638, R665, R666 (0.22Ω/5W)		ACN7094
△	R52		RD1/2PM270J
△	R751, R752, R755, R761, R762		RD1/4PMF101J
△	R753, R754, R756, R763, R764		RS1LMF4R7J
△	R711 Other Resistors		RS2LMF272J RD1/4PU□□□J
OTHERS			
	53 3P CABLE HOLDER 701 7P CABLE HOLDER CN53 22P CONNECTOR CN754 SPEAKER TERMINAL 8-P H51, H52 FUSE CLIP		51048-0300 51048-0700 52045-2245 AKE7057 AKR7001
△	T51 STANDBY TRANSFORMER J44 3P JUMPER WIRE CN601 16P PLUG CN784 10P SOCKET CN51 AC CODE SOCKET	ATT7037 D20PYY0325E KM200TA16 KP250NA10 RKP1751	
	KN51, KN601 EARTH METAL FITTING	VNF1084	
D TRANS2 ASSY			
SEMICONDUCTORS			
△	IC851–IC853 PROTECTOR (1.6A)	AEK7012	
OTHERS			
	851 7P CABLE HOLDER	51048-0700	

Mark	No.	Description	Part No.
E TRANS3 ASSY			
TRANS3 ASSY has no service part.			
F REGULATOR ASSY			
SEMICONDUCTORS			
	IC803, IC804 IC801 IC802 Q801, Q803, Q805 Q802, Q804, Q806		NJM78M05FA NJM78M12FA NJM79M12FA KRA103M KRC101M
△	D801–D808		S5688G
CAPACITORS			
	C808, C811 C805, C806 C809 C801, C802 C803, C804, C807, C810		CEAT101M10 CEAT101M16 CEAT222M16 CEAT222M25 CGCYX103M25
OTHERS			
	CN801 22P CONNECTOR CN802 19P PLUG CN803 5P PLUG		52045-2245 KM200TA19 KM200TA5
GA TRANS1 ASSY			
TRANS1 ASSY has no service part.			
GB MECHA SW ASSY			
SWITCHES AND RELAYS			
	S591		ASG7014
CAPACITORS			
	C591, C592		CKSQYF103Z50
OTHERS			
	CN591		52151-0310
H VIDEO&6CH IN ASSY			
SEMICONDUCTORS			
	IC301 IC302, IC303 Q302 Q303 Q301		NJM2296M NJM4558MD 2SA1515 2SC2878 2SC3377
	D301, D302, D305, D306 D303, D304		1SS355 UDZS6.2B
CAPACITORS			
	C319, C320, C327, C328 C342–C345 C347 C307–C310, C312, C314, C338 C321, C324, C331, C332		CCSQCH101J50 CCSQCH101J50 CCSQCH470J50 CEAT470M25 CEAT4R7M50

Mark	No.	Description	Part No.
	C302, C315, C316, C322, C323 C329, C330 C346 C304–C306, C317, C318 C325, C326	CKSQYB103K50 CKSQYB103K50 CKSQYB104K16 CKSQYB221K50 CKSQYB221K50	
	C333 C311, C313	CKSQYB331K50 CKSQYB473K50	

RESISTORS

△	R313, R316 Other Resistors	RS2LMF560J RS1/10S□□□J
---	-------------------------------	---------------------------

OTHERS

CN303	13P CONNECTOR	52044-1345
CN307	PIN JACK(4P)	AKB7087
CN305	6P PIN JACK	AKB7123
CN301	12P SOCKET	KP200TA12L
CN302	5P SOCKET	KP200TA5L
JA301	JACK	RKN1004

I H.P. ASSY**SEMICONDUCTORS**

Q551, Q552	2SC2878
------------	---------

CAPACITORS

C553	CCSQCH471J50
C552	CKSQYB103K50
C551	CKSQYB104K16
C555, C556	CKSQYB223K50

RESISTORS

△	R551, R552 Other Resistors	RS1/2LMF121J RS1/10S□□□J
---	-------------------------------	-----------------------------

OTHERS

551	CABLE HOLDER(4P)	51063-0405
JA551	JACK	RKN1002

J DIGITAL IN ASSY**SEMICONDUCTORS**

IC1901	TC74ACT151F
IC1902	TC74HCU04AF

COILS AND FILTERS

F1901–F1904	CHIP BEAD	DTF1067
-------------	-----------	---------

CAPACITORS

C1917	CCSQCH220J50
C1918	CCSQCH221J50
C1907, C1914	CCSQCH271J50
C1916	CCSQCH471J50
C1911	CCSQCH560J50
C1904, C1905, C1912	CEAT101M10
C1915	CKSQYB102K50
C1906, C1910, C1913, C1919, C1920	CKSQYB103K50
C1922	CKSQYB103K50
C1901–C1903, C1908, C1909, C1921	CKSQYB104K25

RESISTORS

All Resistors	RS1/10S□□□J
---------------	-------------

Mark	No.	Description	Part No.
OTHERS			
	CN1901	CONNECTOR 6P	52045-0645
	JA1902, JA1903	OPTICAL RECEIV MOD.	GP1F32R
	JA1904	OPTICAL LINK OUT	GP1F32T
	JA1901	JACK	VKB1077

K FRONT ASSY**SEMICONDUCTORS**

IC481	BU1923F
IC401	PDG247B
Q481	2SA1515
Q405	2SA933S
Q483	2SC1740S
Q401, Q402, Q442, Q471	KRA103M
Q403, Q441, Q482	KRC101M
D407, D408, D442	1SS355
D403, D405	DAN217
D401, D404	DAP202K

COILS AND FILTERS

L401, L481	LFEA2R2J
------------	----------

SWITCHES AND RELAYS

S451–S477	XSG3001
-----------	---------

CAPACITORS

C404	(0.047F/5.5V)	ACH7017
C420	(220μF/35V)	ACH7101
C489, C490		CCSQCH270J50
C483, C487		CEAT101M10
C486		CEAT1R0M50
C402, C405		CEAT221M6R3
C409, C410, C484		CEAT2R2M50
C412		CEAT470M50
C442		CEJA470M10
C451–C454, C481, C482, C495		CKSQYB102K50
C401, C403, C411, C441, C531		CKSQYB103K50
C408, C416, C418, C491–C494		CKSQYB104K16
C532		CKSQYB223K25
C485		CKSQYB472K50
C406, C407		CKSQYB473K16
C488		CKSQYB561K50

RESISTORS

All Resistors	RS1/10S□□□J
---------------	-------------

OTHERS

491	CABLE HOLDER(3P)	51063-0305
403, 471	CABLE HOLDER(4P)	51063-0405
CN401	19P CONNECTOR	52044-1945
CN402	32P CONNECTOR	52044-3245
V401	FL TUBE	AAV7072
X481	CRYSTAL RESONATOR (4.332MHz)	ASS7004
X401	CERAMIC RESONATOR (7.2MHz)	ASS7018
401	REMOTE RECEIVER UNIT	GP1U27X

VSX-709RDS, VSX-609RDS

Mark	No.	Description	Part No.
L		R.ENCODER ASSY	
		SWITCHES AND RELAYS	
	S511		ASX7004
OTHERS			
	511	CABLE HOLDER(3P)	51063-0305
M		POWER SW ASSY	
		SEMICONDUCTORS	
	D501		BR3371XJ30A
		SWITCHES AND RELAYS	
	S501		XSG3001
RESISTORS			
	All Resistors		RS1/10S□□□J
OTHERS			
	501	CABLE HOLDER(4P)	51063-0405
N		S. VIDEO ASSY	
		SEMICONDUCTORS	
	IC351, IC352 D351–D354		NJM2296M 1SS355
CAPACITORS			
	C375, C376 C352, C355, C358, C361–C363 C366 C372, C373 C353, C356, C359, C360		CCSQCH470J50 CEAT470M25 CEAT470M25 CKSQYB103K50 CKSQYB104K25
	C364, C365, C368–C371		CKSQYB221K50
RESISTORS			
	All Resistors		RS1/10S□□□J
OTHERS			
	CN353 MINI DIN SOCKET 2P CN352 MINI DIN SOCKET 3P CN354 CONNECTOR POST CN351 12P SOCKET		AKP7020 AKP7043 B5B-PH-K-S KP200TA12L

O BOARD TO BOARD ASSY

OTHERS		
	CN390, CN391 12P PLUG	KM200TA12

P FRONT VIDEO ASSY

CAPACITORS		
	C903, C905 C908, C911, C914 C904, C906, C909, C912 C901, C902 C907, C910, C913	CEAT470M25 CKSQYB103K50 CKSQYB104K25 CKSQYB221K50 CKSQYB471K50

Mark	No.	Description	Part No.
RESISTORS			
	All Resistors		RS1/10S□□□J
OTHERS			
	CN902 PIN JACK(4P) CN901 EARTH METAL FITTING		AKX7007 VNF1084
Q		LARGE SP CONNECTION ASSY	
OTHERS			
	CN785, CN786 10P PLUG		KM250NA10L
R		LARGE SP ASSY	
CAPACITORS			
	C781–C783		CQMBA472J50
RESISTORS			
	All Resistors		RD1/4PU□□□J
OTHERS			
	CN782 PIN JACK 1P CN781 SPEAKER TERMINAL 6P CN783 10P SOCKET		AKB7042 AKE7056 KP250NA10

6. ADJUSTMENT



There is no information to be shown in this chapter.

7. GENERAL INFORMATION


7.1 DISASSEMBLY

■ Diagnosis


① Remove the Bonnet (seven screws).

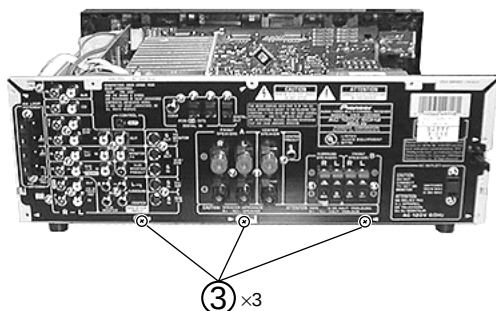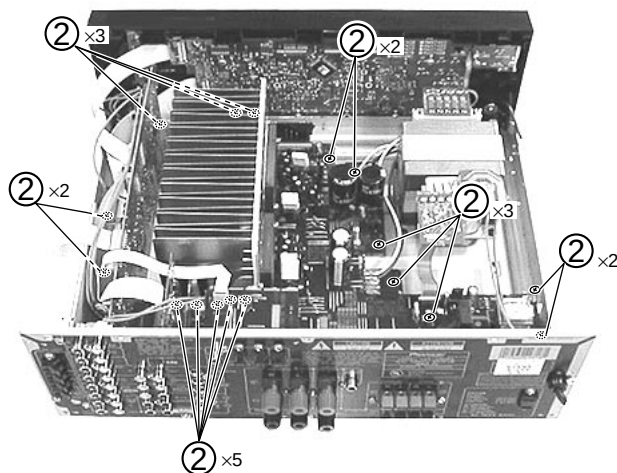

Note : This photograph shows other models.
However, the work method is the same.

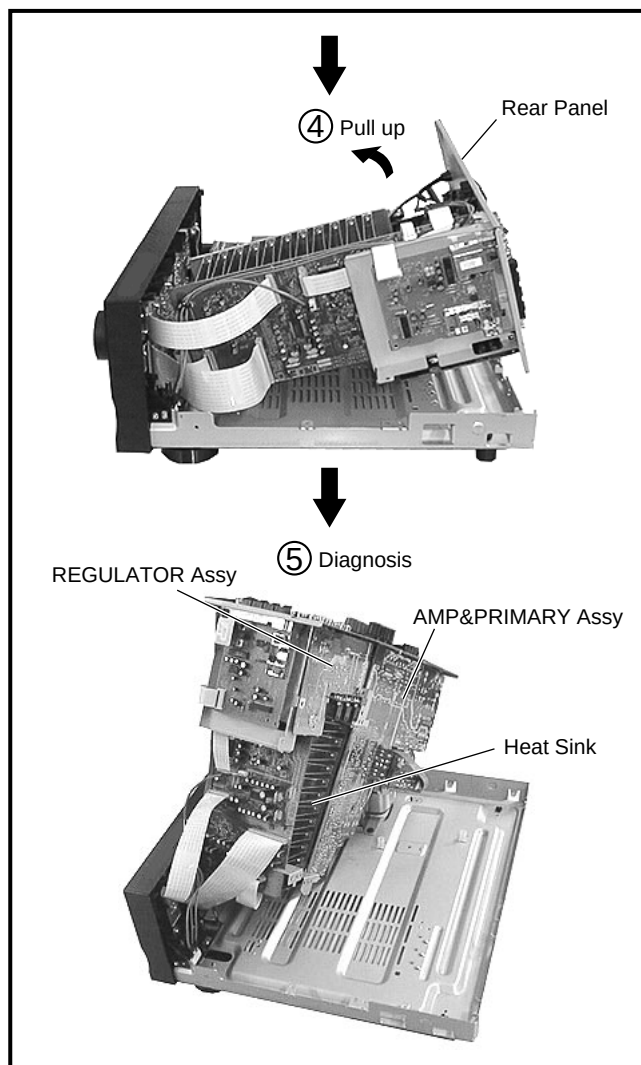

■ PCB Location

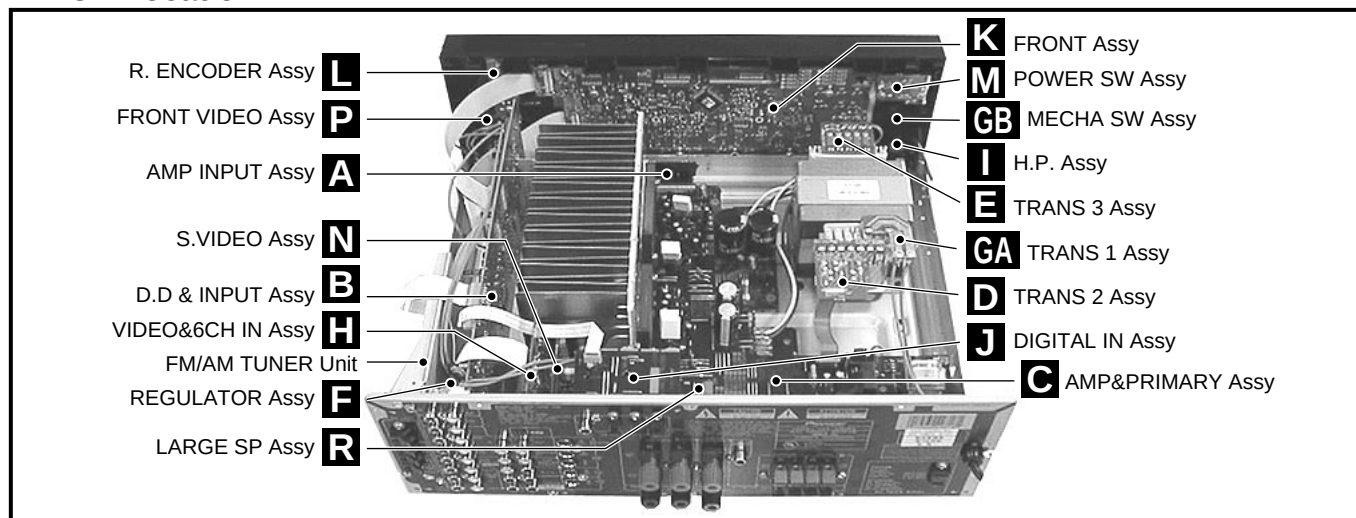


7.2 PARTS

7.2.1 IC

• The information shown in the list is basic information and may not correspond exactly to that shown in the schematic diagrams.

■ PDG247A (FRONT ASSY : IC401)

- System Control MCU
- Pin Arrangement (Top View)

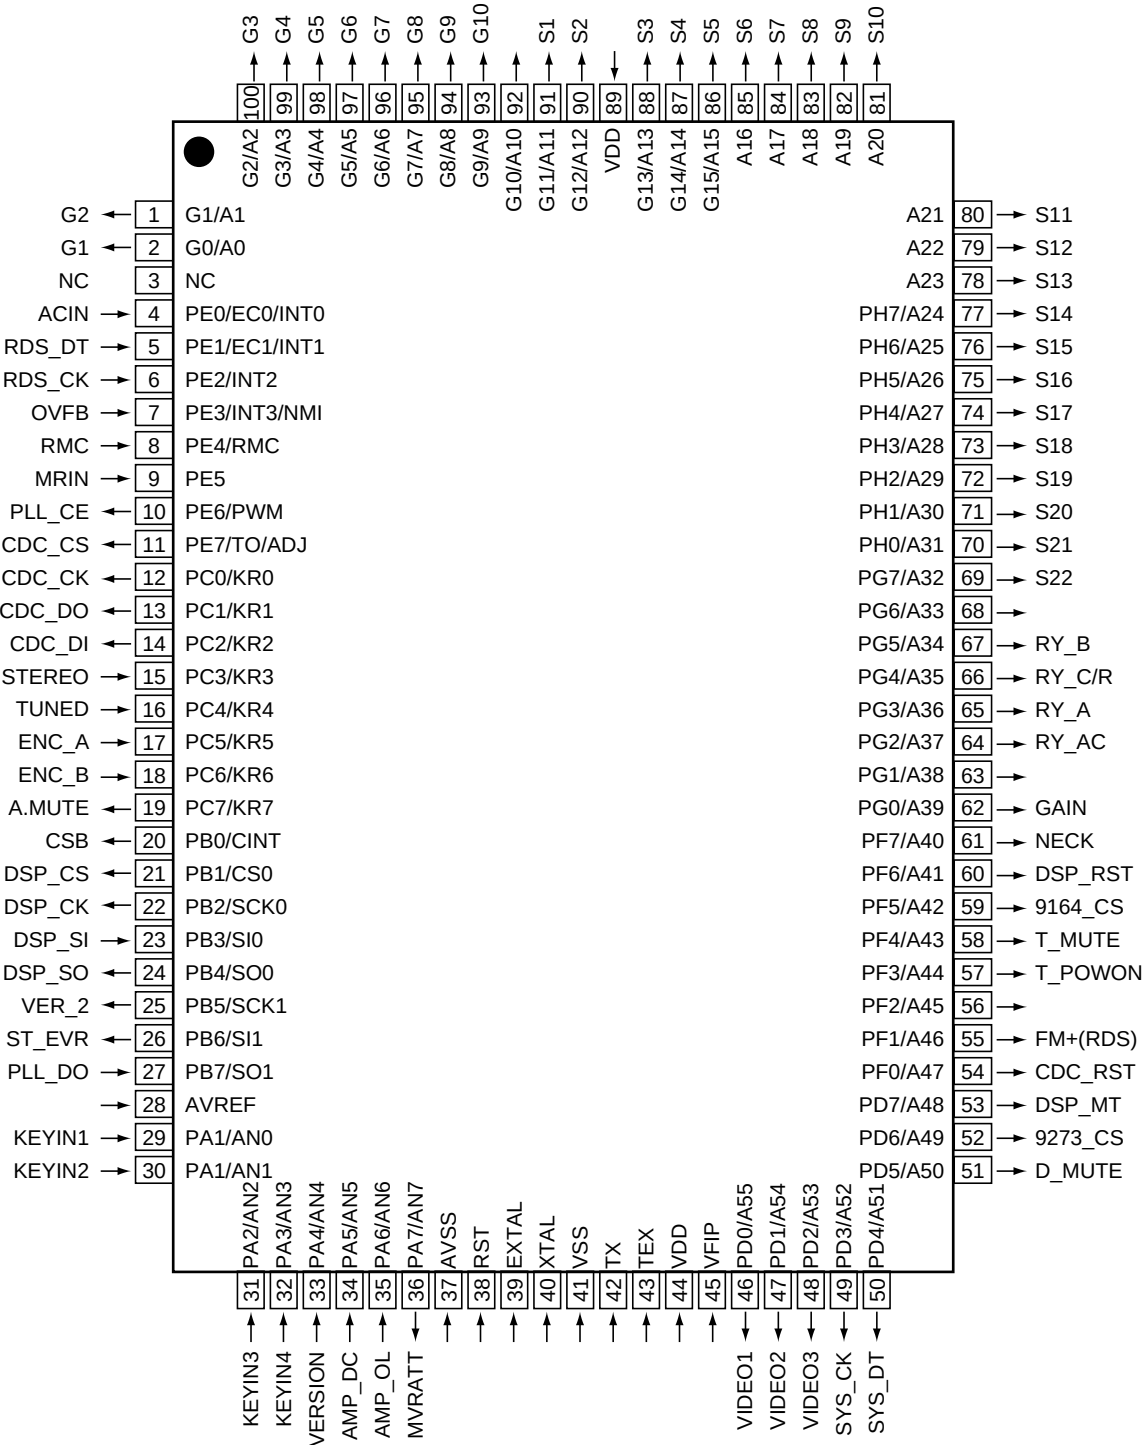

● Pin Function

No.	Pin Name	I/O	Pin Function	Active
1	G2	O	Grid output 2	H
2	G1	O	Grid output 1	H
3	NC	–	Connect to VDD	
4	ACIN	I	AC pulse input	
5	RDS_DT	I	Serial control DATA signal of RDS communication	
6	RDS_CK	I	Serial control CLOCK signal of RDS communication	
7	DIRLOCK	I	ERR/OVER input from CODEC	
8	RMC	I	Remote control signal input (no-carrier signal)	
9	MRIN	I	MULTI-ROOM input	
10	PLL_CE	O	Chip select signal for communication with LC72131 (tuner)	H
11	CDC_CS	O	CODEC chip select	
12	CDC_CK	O	CODEC, TC9164 control clock	
13	CDC_DO	O	CODEC, TC9164 control data output	
14	CDC_DI	I	Data input from CODEC	
15	STEREO	I	Stereo/Monoral signal judgment signal	
16	TUNED	I	TUNED information	
17	ENC_A	I	Rotary encoder signal input A	
18	ENC_B	I	Rotary encoder signal input B	
19	AMUTE	O	Audio mute	L
20	CSB	O	Chip select for control of YSS912 sub DSP	L
21	DSP_CS	O	Chip select for control of YSS912 main DSP	L
22	DSP_CK	O	Clock signal for communication with YSS912	H
23	DSP_SI	I	DATA input for communication with YSS912	
24	DSP_SO	O	DATA output signal for communication with YSS912	H
25	VER_2	I	Destination switch 2	
26	ST_EVR	O	Strobe signal for communication with electric volume IC	H
27	PLL_DO	I	Data input signal for communication with LC72131 (tuner)	
28	AVref	–	Connect to VDD	
29	KEYIN1	I	Key input A/D conversion port 1	
30	KEYIN2	I	Key input A/D conversion port 2	
31	KEYIN3	I	Key input A/D conversion port 3	
32	KEYIN4	I	Key input A/D conversion port 4	
33	VER_1	I	Destination switch (A/D input)	
34	AMP_DC	I	DC abnormality detection of protection circuit (L : Abnormality detection)	L
35	AMP_OL	I	Over-load detection of protection circuit (L : Abnormality detection)	L
36	MVRATT	O	ATT control of master volume (L : Less than -15dB)	H
37	AVSS	–	Connect to VSS	
38	RST	–	Reset	
39	EXTAL	–	Connect to the oscillator (7.2MHz)	
40	XTAL	–		
41	VSS	–	Connect to VSS	
42	TX	–	Open	
43	TEX	–	Connect to VSS	
44	VDD	–	+5V	
45	VFDP	–	-30V	
46	VIDEO1	O	NJM2296D control	H
47	VIDEO2			
48	VIDEO3			
49	SYS_DT	O	Data signal for communication with M62446, TC9163, TC9164 and PLL	H
50	SYS_CK	O	Clock signal for communication with M62446, TC9163, TC9164 and PLL	H


VSX-709RDS, VSX-609RDS

No.	Pin Name	I/O	Pin Function	Active
51	D_MUTE	O	Digital mute (Not used)	H
52	9273_CS	O	TC9273 Chip select	H
53	DSP_MT	O	DSP mute (ASSY mute)	H
54	CDC_RST	O	CODEC reset	H
55	FM+(RDS)	O	Tr switch ON/OFF for power supply of RDS decoder (L : AM, power OFF , H : Other)	H
56		O	Not used	
57	T_POWON	O	Tuner module ON/OFF (North America model only)	H
58	T_MUTE	O	Tuner mute	H
59	9164_CS	O	TC9163, TC9164 Chip select	H
60	DSP_RST	O	YSS912 reset	
61	NECK_SEL	O	5.1ch, surround mode and A+B Stereo : H / Stereo : L	H/L
62	GAIN_SEL	O	Gain select (5.1ch and Stereo of analog input : H)	H
63		O	Not used	H
64	RY_AC	O	AC relay ON/OFF	H
65	RY_A	O	Speaker A relay ON/OFF	H
66	RY_C/R	O	Rear/Center Speaker relay ON/OFF	H
67		O	Not used	H
68		O	Not used	H
69	S22	O	Segment output 22	H
70	S21		Segment output 21	
71	S20		Segment output 20	
72	S19		Segment output 19	
73	S18		Segment output 18	
74	S17		Segment output 17	
75	S16		Segment output 16	
76	S15		Segment output 15	
77	S14		Segment output 14	
78	S13		Segment output 13	
79	S12		Segment output 12	
80	S11		Segment output 11	
81	S10		Segment output 10	
82	S9		Segment output 9	
83	S8		Segment output 8	
84	S7		Segment output 7	
85	S6		Segment output 6	
86	S5		Segment output 5	
87	S4		Segment output 4	
88	S3		Segment output 3	
89	VDD	–	5V	
90	S2	O	Segment output 2	H
91	S1		Segment output 1	
92			Not used (Fixed Vfdp)	
93	G10	O	Grid output 10	H
94	G9		Grid output 9	
95	G8		Grid output 8	
96	G7		Grid output 7	
97	G6		Grid output 6	
98	G5		Grid output 5	
99	G4		Grid output 4	
100	G3		Grid output 3	

■ M62446FP (D.D & INPUT ASSY : IC103)

• Sound Controller IC (Volume and Tone Control)

● Block Diagram

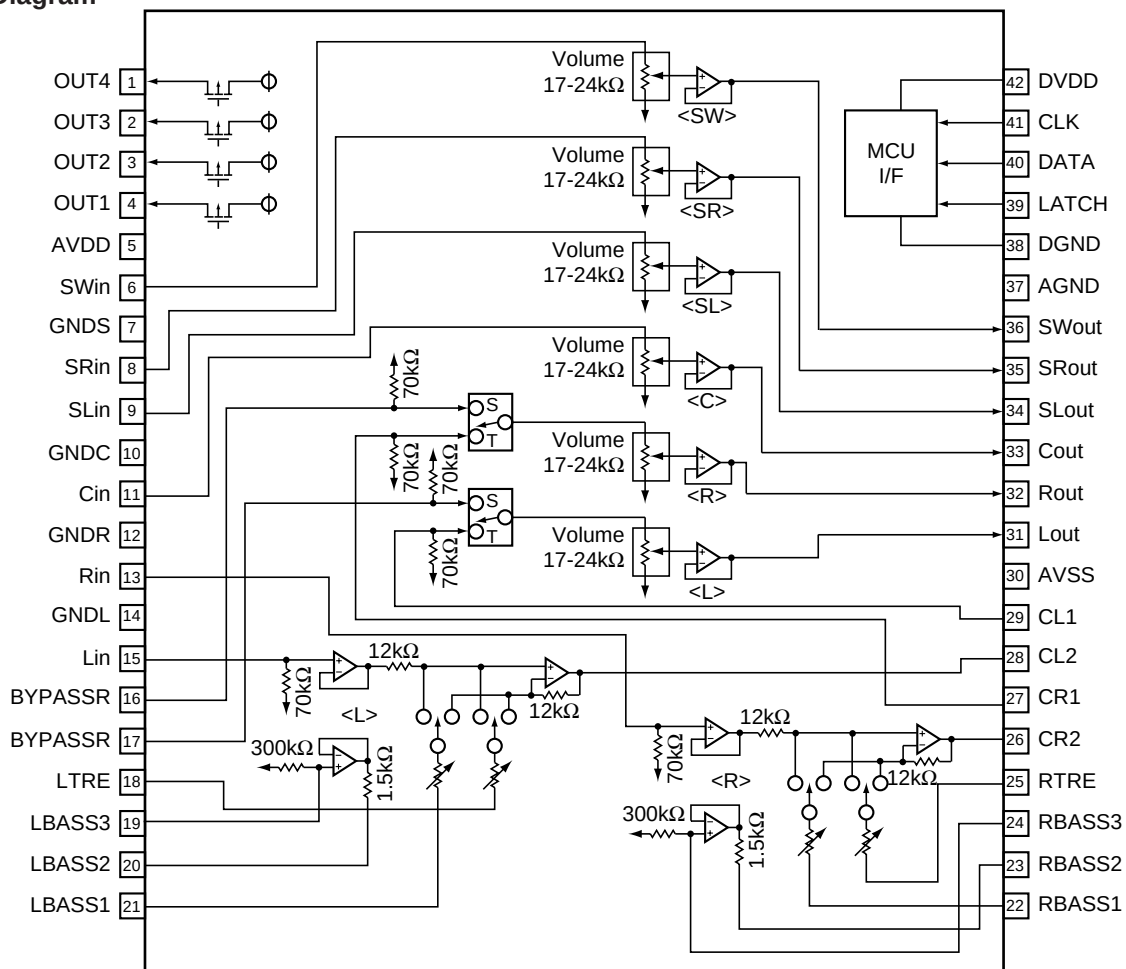

● Pin Function


No.	Pin Name	Function
1	OUT4	Output port (open drain of PchTr)
2	OUT3	
3	OUT2	
4	OUT1	
5	AVDD	Analog positive power supply port
7	GNDS	GND (connect to analog ground)
10	GNDC	
12	GNDR	
14	GNDL	
6	SWin	Volume input
8	SRin	
9	SLin	
11	Cin	Volume output
36	SWout	
35	SRout	
34	SLout	
33	Cout	L and R volume input
32	Rout	
31	Lout	L output
30	AVSS	Analog negative power supply port
29	CL1	TONE output port
28	CL2	
27	CR1	L and R volume input
26	CR2	
25	RTRE	TONE TREBLE frequency control port
24	RBASS3	
23	RBASS2	
22	RBASS1	
21	LBASS1	TONE BASS frequency control port
20	LBASS2	
19	LBASS3	
18	LTRE	
42	DVDD	Digital power supply port
41	CLK	Clock input port for data transmission
40	DATA	Data input port
39	LATCH	Latch input port
38	DGND	Digital ground port
37	AGND	Analog ground port

No.	Pin Name	Function
18	LTRE	TONE TREBLE frequency control port
25	RTRE	
19	LBASS3	
24	RBASS3	
20	LBASS2	TONE BASS frequency control port
23	RBASS2	
21	LBASS1	
22	RBASS1	
26	CR2	TONE output port
28	CL2	
27	CR1	L and R volume input
29	CL1	
31	Lout	L output
32	Rout	R output
30	AVSS	Analog negative power supply port
37	AGND	Analog ground port
38	DGND	Digital ground port
39	LATCH	Latch input port
40	DATA	Data input port
41	CLK	Clock input port for data transmission
42	DVDD	Digital power supply port

■ W24257AJ-12 (D.D & INPUT ASSY : IC1301)

• 32K × 8 High-Speed CMOS Static RAM

● Block Diagram

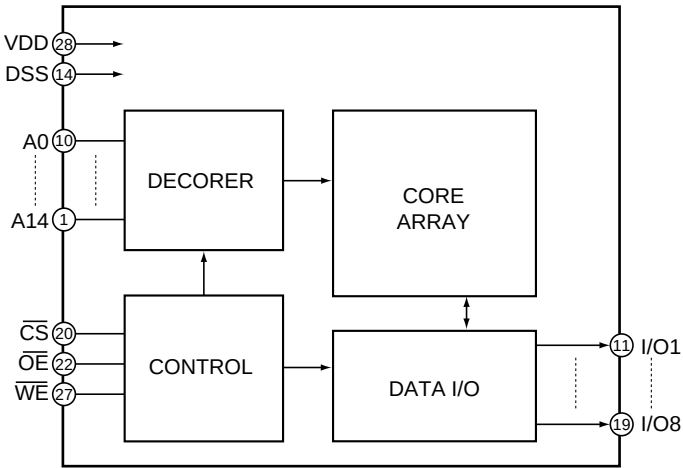


● Pin Function

No.	Pin Name	Function
1	A14	Addres Inputs
2	A12	
3	A7	
4	A6	
5	A5	
6	A4	
7	A3	
8	A2	
9	A1	
10	A0	
21	A10	Data Inputs/Outputs
23	A11	
24	A9	
25	A8	
26	A13	
11	I/O1	
12	I/O2	
13	I/O3	
15	I/O4	
16	I/O5	
17	I/O6	Ground
18	I/O7	
19	I/O8	
14	Vss	
20	CS	Chip Select Input
22	OE	Output Enable Input
27	WE	Write Enable Input
28	Vdd	Power Supply

■ TC9273F-007 (D.D & INPUT ASSY : IC101)

• Analog Switch Array

● Block Diagram

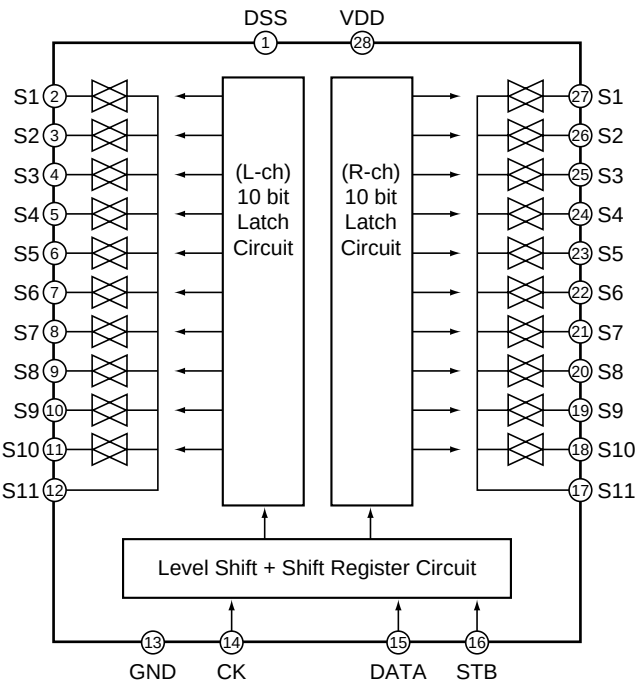

● Pin Function


No.	Pin Name	Function
1	VSS	Minus Power Supply
2, 27	S1	Input and Output
3, 26	S2	
4, 25	S3	
5, 24	S4	
6, 23	S5	
7, 22	S6	
8, 21	S7	
9, 20	S8	
10, 19	S9	
21, 18	S10	
26, 17	S11	Digital Ground
13	GND	
14	CK	Clock Input
15	DATA	Data Input
16	STB	Strobe Input
28	VDD	Plus Power Supply

7.2.2 DISPLAY

■ AAV7072 (FRONT ASSY : V401)

• FL DISPLAY

• Pin Assignment

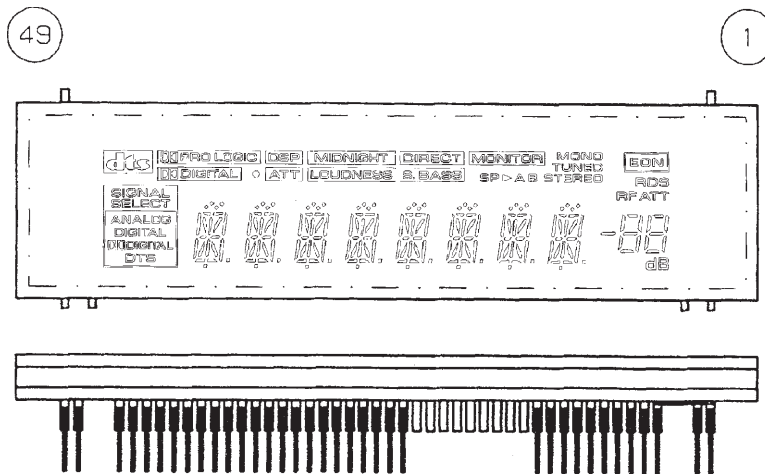


• Pin Connection

PIN NO.	4	4	4	4	4	4	4	4	3	3	3	3	3	3	3	2	2	2	2	2	2	2	2	2	1	1	1	1	1	1	1	1	1	0	9	8	7	6	5	4	3	2	1			
CONNECTION	F	F	N	N	2	2	1	1	1	1	1	1	1	1	1	P	P	P	P	P	P	P	P	N	N	N	N	N	N	N	N	N	0	9	8	7	6	5	4	3	2	1	N	N	F	F

NOTE 1) F1, F2 --- Filament
 2) NP ----- No pin
 3) NX ----- No extend pin
 4) DL ----- Datum Line
 5) 1G~10G --- Grid

• Grid Assignment

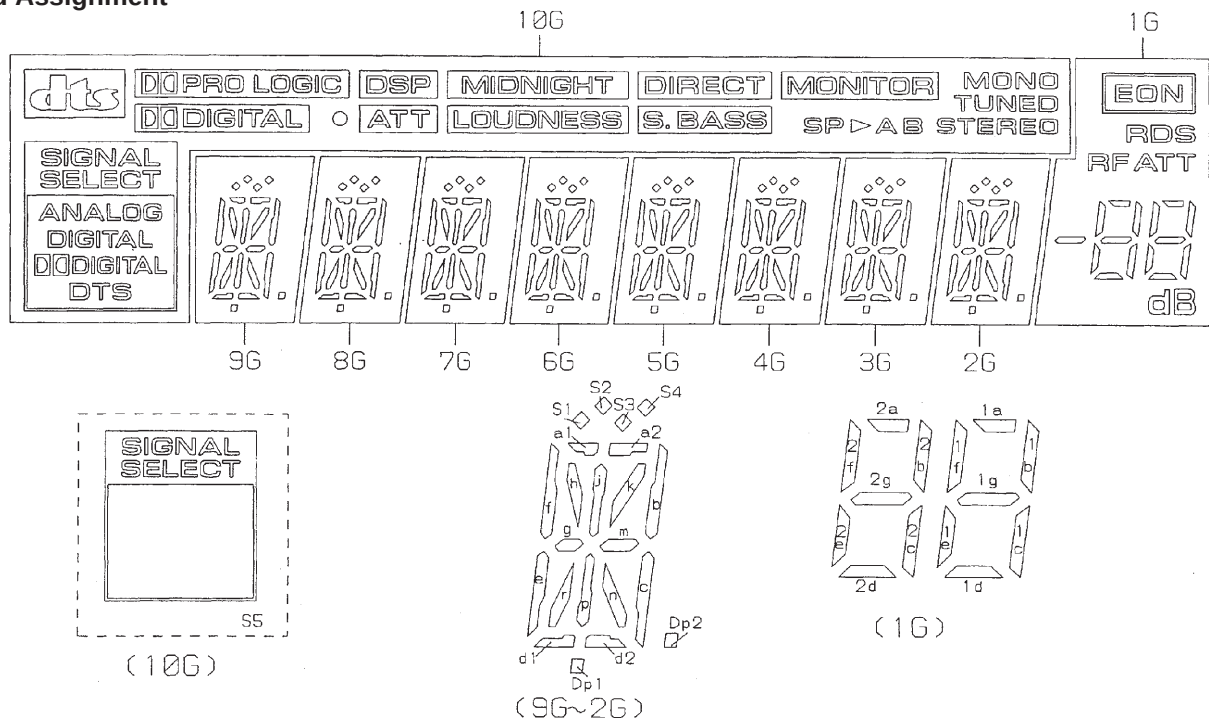

VSX-709RDS, VSX-609RDS

● Anode Connection


	10G	9G	8G	7G	6G	5G	4G	3G	2G	1G
P1	STEREO	a1	a1	a1	a1	a1	a1	a1	a1	dB
P2	TUNED	a2	a2	a2	a2	a2	a2	a2	a2	2a
P3	MONO	h	h	h	h	h	h	h	h	2b
P4	B	j	j	j	j	j	j	j	j	2f
P5	A	k	k	k	k	k	k	k	k	2g
P6	SP ►	b	b	b	b	b	b	b	b	2c
P7	MONITOR	f	f	f	f	f	f	f	f	2e
P8	S. BASS	m	m	m	m	m	m	m	m	2d
P9	DIRECT	g	g	g	g	g	g	g	g	1a
P10	LOUDNESS	c	c	c	c	c	c	c	c	1b
P11	MIDNIGHT	e	e	e	e	e	e	e	e	1f
P12	ATT	r	r	r	r	r	r	r	r	1g
P13	DSP	p	p	p	p	p	p	p	p	1c
P14	○	n	n	n	n	n	n	n	n	1e
P15	DIGITAL	d1	d1	d1	d1	d1	d1	d1	d1	1d
P16	PRO LOGIC	d2	d2	d2	d2	d2	d2	d2	d2	
P17	DTS	Dp2	Dp2	Dp2	Dp2	Dp2	Dp2	Dp2	Dp2	RDS
P18	DIGITAL	Dp1	Dp1	Dp1	Dp1	Dp1	Dp1	Dp1	Dp1	RFATT
P19	DIGITAL	S1	S1	S1	S1	S1	S1	S1	S1	EON
P20	ANALOG	S4	S4	S4	S4	S4	S4	S4	S4	(EON)
P21	S5	S2	S2	S2	S2	S2	S2	S2	S2	-
P22	dB	S3	S3	S3	S3	S3	S3	S3	S3	-

8. PANEL FACILITIES AND SPECIFICATIONS

8.1 PANEL FACILITIES

Front Panel

This illustration shows the VSX-709RDS model.

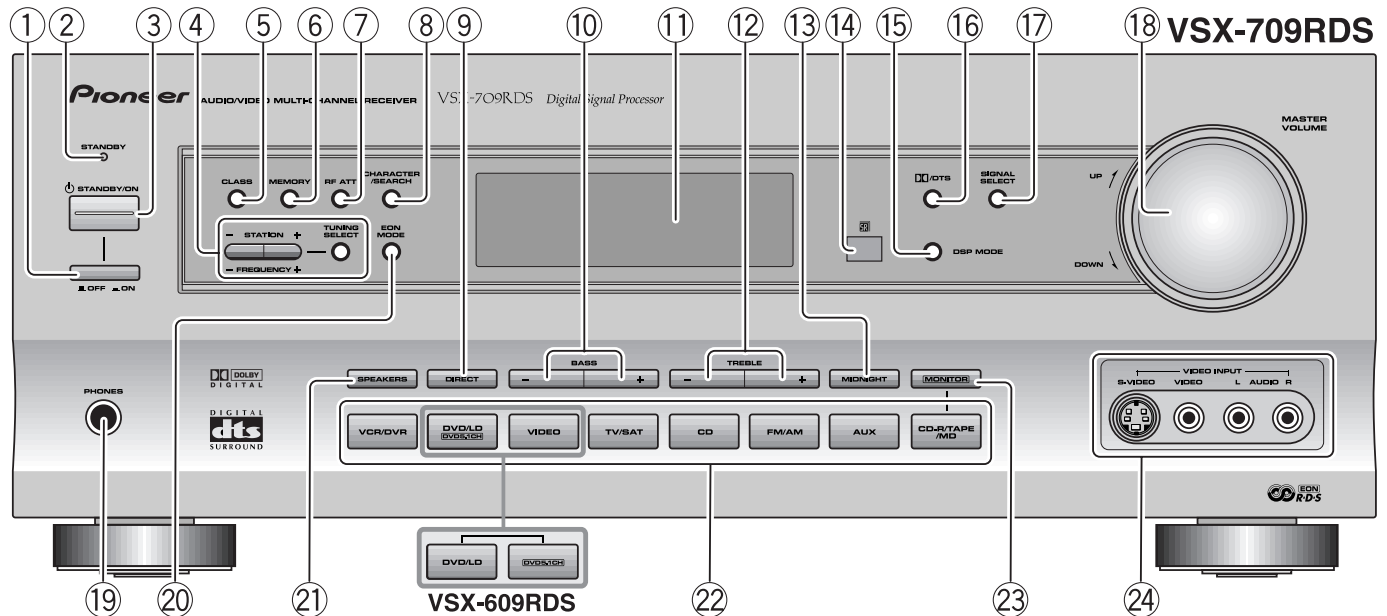

① **■ OFF/ ■ ON (Main power) button**

If the button is OFF (■), the power of the receiver is shut off and the STANDBY/ON button (③) on the receiver or the remote control do not function. Pressing the button again will turn the receiver ON (■) and the receiver enters the standby mode. In the standby mode, you can turn on the receiver using the STANDBY/ON button (③) on the receiver or the remote control.

② **STANDBY indicator**

Lights when the receiver is in standby mode (note that the receiver consumes a small amount of power (1 W) in standby mode).

③ **STANDBY/ON button**

Switches the receiver between on and standby (note that the receiver consumes a small amount of power (1 W) in standby mode).

④ **TUNING SELECT button**

Switches between station memory and frequency select modes.

STATION (+/-) buttons

Selects station memories when using the tuner.

FREQUENCY (+/-) buttons

Selects the frequency when using the tuner.

⑤ **CLASS button**

Switches between the three banks (classes) of station memories.

⑥ **MEMORY button**

Press to memorize a station for recall using the STATION (+/-) buttons.

⑦ **RF ATT button**

Use to lower the input level of a radio signal that is too powerful or contain interference thus causing the receiver to distort

⑧ **CHARACTER/SEARCH button**

Use to search for different program types in RDS mode. It is also used to input station names.

⑨ **DIRECT button**

Use to switch Direct playback on or off. This mode bypasses the tone controls and channel levels for the most accurate reproduction of a program source.

⑩ **BASS (+/-) buttons**

Use to increase/decrease bass (within a range of -6 dB to 6 dB in 2 dB steps).

⑪ **Display**

⑫ **TREBLE (+/-) buttons**

Use to increase/decrease treble (within a range of -6 dB to 6 dB in 2 dB steps).

⑬ **MIDNIGHT button**

Use when listening to movie soundtracks at low volume. This feature will enable you to hear quiet sounds and not get jolted by loud or sudden sound effects.

⑭ **Remote sensor**

Receives the signals from the remote control.

⑮ **DSP MODE button**

Use to switch between the various DSP modes available (HALL1, HALL 2, JAZZ, DANCE, THEATER1, THEATER 2) and DSP off. Use to create different surround sound effects from any stereo source.

⑯ **DOLBY/DTS button**

Use to switch between the various Dolby/DTS surround modes.

⑰ **SIGNAL SELECT button**

Use to select between an analog or digital signal.

⑱ **MASTER VOLUME**

Use to set the overall listening volume.

VSX-709RDS, VSX-609RDS

⑲ PHONES jack

Use to connect headphones but this does not switch the speakers off.

⑳ EON MODE button

Use to search for different programs that are transmitting traffic or news information (this search method is called EON).

㉑ SPEAKERS button

Use to switch the speaker system A → B → A+B → off.

㉒ Function buttons

Use to select a source for playback or recording.


㉓ MONITOR button

Press to switch tape monitoring on/off.

㉔ VIDEO INPUT jacks (VSX-709RDS only)

Connect a video camera, video game system, etc. to the VIDEO INPUT jacks.

Display

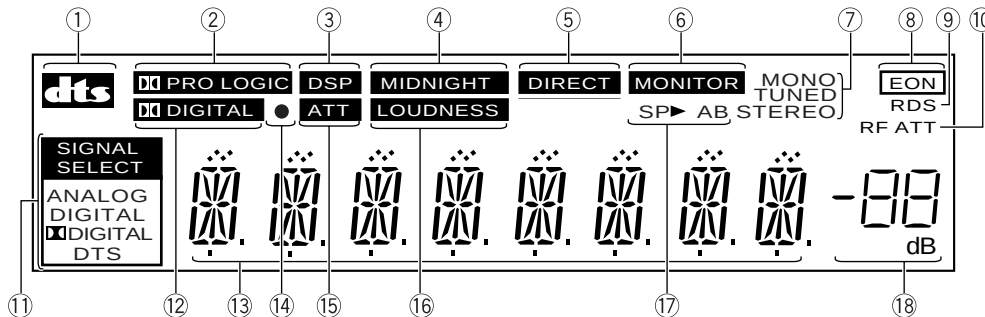

① DTS indicator

Lights when DTS mode is being used.

② PRO LOGIC indicator

When the PRO LOGIC (Dolby)/DTS mode of the receiver is on, this lights to indicate playback of a two channel source.

③ DSP indicator

Lights when any Advanced Theater or DSP mode is selected.

④ MIDNIGHT indicator

Lights when Midnight listening mode is in use.

⑤ DIRECT indicator

Lights when Direct playback is ON. This function bypasses all tone, balance, DSP and Dolby Surround effects.

⑥ MONITOR indicator

Lights when MONITOR is selected to hear a recording as it's being made.

⑦ Tuner indicators

MONO:

Lights when the mono mode is set using the MPX button.

TUNED:

Lights when a broadcast is being received.

STEREO:

Lights when a stereo FM broadcast is being received in Auto stereo mode.

⑧ EON indicator

The box around EON indicator lights to inform you that the currently tuned station carries the EON data service. When the EON mode is set, the EON indicator lights, but during actual reception of an EON broadcast the EON indicator will flash. An empty box in the EON indicator spot means it is possible to pick up an EON broadcast but the receiver has not been set to do so (this will only appear when RDS is switched on).

⑨ RDS indicator

Lights when an RDS broadcast is received.

⑩ RF ATT indicator

Lights when the RF ATT is on.

⑪ SIGNAL SELECT indicators

Light to indicate the type of input signal assigned for the current component (see "Front Panel", ⑪, SIGNAL SELECT).

ANALOG : Lights when an analog signal is selected.

DIGITAL : Lights when a digital audio signal is selected.

DOLBY DIGITAL : Lights when a Dolby Digital signal is played.

DTS : Lights when a source with DTS audio signals is played.

⑫ DIGITAL indicator

When the DIGITAL (Dolby)/DTS mode of the receiver is on, this lights to indicate playback of a Dolby Digital signal. However, PRO LOGIC lights during 2 channel playback of Dolby Digital.

⑬ Character display

Shows the radio frequency or function (DVD/LD, CD, etc.) receiver is using .

⑭ (Overload) indicator

This lights when an analog signal is too strong (the SIGNAL SELECT needs to be on ANALOG). It indicates the sound is distorting and the signal should be reduced.

⑮ ATT indicator

Lights when ATT is used to attenuate (reduce) the level of the input signal (can only be used in ANALOG mode).

⑯ LOUDNESS indicator

Lights when the LOUDNESS, used to boost the bass and treble in quiet listening, is on.

⑰ SP ► AB (Speakers) indicator


Shows if the speaker system is on or not. SP ► A and/or B means speakers are switched on. SP ► means speakers are switched off.

⑱ Master volume level display

Shows the overall volume level. Volume level is maintained even when the power is off. --- dB indicates the minimum level, and 0 dB indicates the maximum level.

- Depending on the level settings you make for individual channels, the MAX level can range between -10 dB and 0 dB.

Remote Control (VSX-709RDS)

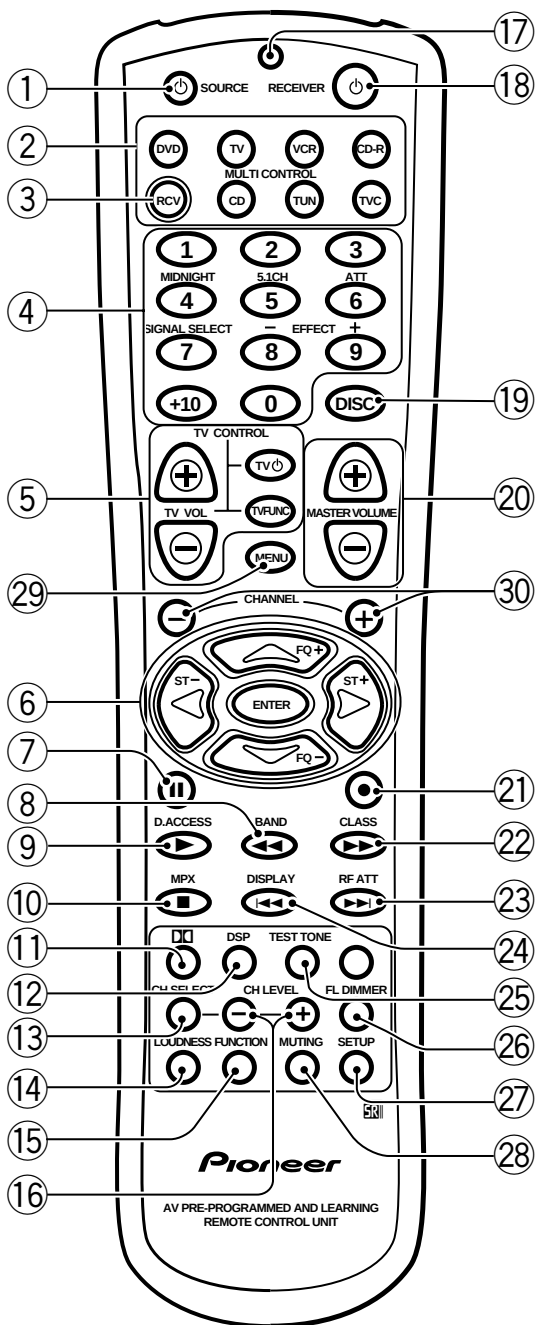

① SOURCE button

Use to turn on/off other components connected to the receiver.

② MULTI CONTROL buttons

Use to put the receiver/remote control in the stated mode. For other equipment controls, see Controlling the Rest of Your System.

③ RCV button

Use this button when setting up the surround sound for the receiver.

④ Number/Mode buttons

Use the number buttons to select the radio frequency in tuner Direct access mode or the tracks in CD, DVD mode etc.

Also, buttons marked with the following names have special functions. If you try to use one of these functions but the display flashes it means that function cannot be used in the current mode (for example DSP modes cannot be used when 5.1 CH setting is on).

MIDNIGHT

Use to put receiver in Midnight mode. To use first press the RCV button then operate this button.

5.1 CH

When the DVD/LD or DVD 5.1 CH function is selected each press switches the DVD/LD input between DVD/LD and DVD 5.1 CH. To use first press the RCV button then operate this button.

ATT

Use to attenuate (lower) the level of an analog input signal and prevent distortion. To use first press the RCV button then operate this button.

SIGNAL SELECT

Use to select the proper signal (analog, digital) for the source you are inputting. To use first press the RCV button then operate this button.

EFFECT +/- buttons

Use to adjust the amount of effect in different DSP sound modes or advanced listening modes. To use, first press the RCV button then operate this button.

⑤ TV CONTROL buttons

The following five sets of buttons are dedicated TV controls.

TV VOL +/- buttons

Use to adjust the volume on your TV.

TV button

Use to turn on the power of the TV.

TV FUNC button

Use select the TV function.

⑥ ◀ ▶ ▲ ▼ (FQ +/-, ST +/-) & ENTER buttons

Use these arrow buttons when setting up your surround sound system (see pages 15 – 20). These buttons are also used to control DVD menus/options. The FQ +/- buttons can be used to find radio frequencies. The ST +/- buttons can be used to select the stations of memorized radio frequencies.

⑦ II button

Use to pause other components.

⑧ **◀◀ button (BAND)**

Use to fast reverse search on CD etc.
Also use to switch between the AM and FM band when in TUNER mode.

⑨ **▶ button (D. ACCESS)**

Use to play other components. Also use to directly access a radio station by pressing the number of the station you want.

⑩ **■ button (MPX)**

Use to stop other components. Also use to switch between auto stereo and mono reception of FM broadcasts. If the signal is weak then switching to MONO will improve the sound quality.

⑪ **□□ button**

Use to put receiver in Dolby Digital, Dolby Surround and DTS modes. To use first press the RCV button then operate this button.

⑫ **DSP button**

Use to put receiver in one of the DSP modes. To use first press the RCV button then operate this button.

⑬ **CH SELECT**

Use to select a speaker when setting up the surround sound of the receiver. To use, first press the RCV button, then operate this button.

⑭ **LOUDNESS button**

Use to switch on the loudness. This feature is useful for getting good bass and treble sounds listening at low volumes.

⑮ **FUNCTION button**

Use to select the playback or recording source. This button lets you cycle through the different functions of the receiver in the following order: CD, tuner (FM/AM), AUX, CD-R/TAPE/MD, VCR/DVR, DVD/LD, VIDEO and TV/SAT.

⑯ **CH LEVEL +/- buttons**

Use to adjust the output level of the selected channel(s).

⑰ **LED display**

This display flashes when a command is sent from the remote control to the receiver. It also flashes at other times, for example, when teaching the receiver preset codes.

⑱ **RECEIVER ⏻ button**

This switches the receiver between STANDBY mode and power ON.

⑲ **DISC button**

Only used when controlling other components.

⑳ **MASTER VOLUME +/- buttons**

Use to set the overall listening volume.

㉑ **● button**

Use to record with other components.

㉒ **▶▶ button (CLASS)**

Use to fast forward search on CDs etc. Also use the CLASS feature to switch between the three banks (classes) of station memories.

㉓ **▶▶| button (RF ATT)**

Use to skip forward tracks on CD players etc. Also use to lower the input level of a radio signal.

㉔ **◀◀ button (DISPLAY)**

Use to skip backward tracks on CD players etc. Also use to display the RDS information.

㉕ **TEST TONE**

Use to sound the TEST TONE when setting up the surround sound of the receiver. To use, first press the RCV button, then operate this button.

㉖ **FL DIMMER button**

Use to make the fluorescent display (FL) dimmer or brighter. There are three brightness settings as well as an off setting.

㉗ **SETUP button**

Use this button when setting up the remote control to control other components.

㉘ **MUTING button**

Use to mute the sound or restore the sound if it has been muted.


㉙ **MENU button**

Use to access different menus associated with your DVD player.

㉚ **CHANNEL +/- buttons**

Use to change channels on your TV.

Remote Control (VSX-609RDS)

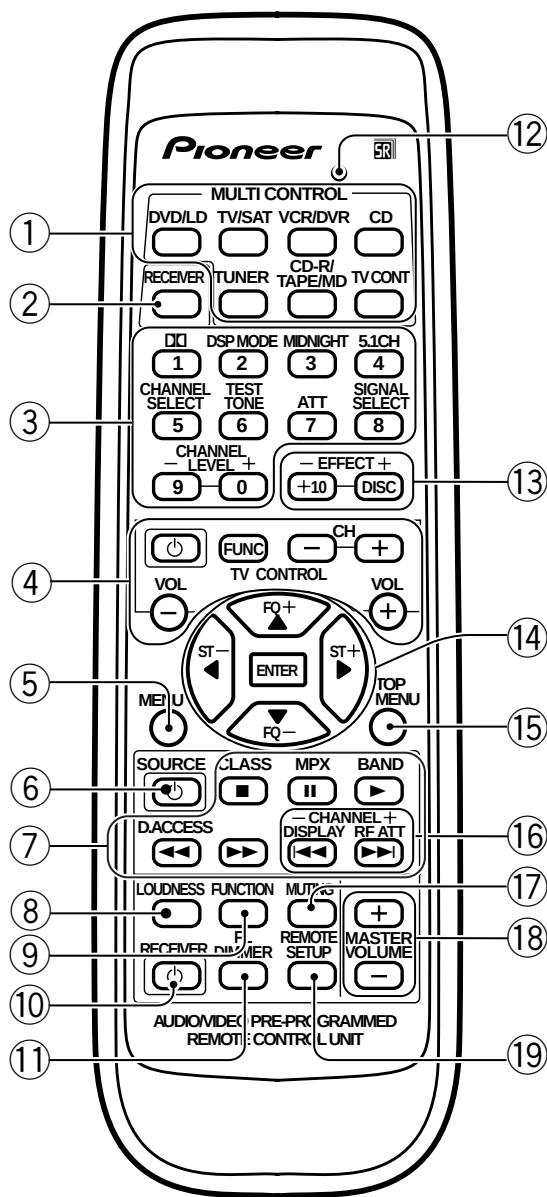

① MULTI CONTROL buttons

Use to put the receiver/remote control in the stated mode. For other equipment controls, see Controlling the Rest of Your System.

② RECEIVER button

Use this button when setting up the surround sound for the receiver.

③ Number/Mode buttons

Use the number buttons to select the radio frequency in tuner Direct access mode or the tracks in CD, DVD mode etc.

Also, buttons marked with the following names have special functions. If you try to use one of these functions but the display flashes it means that function cannot be used in the current mode (for example DSP modes cannot be used when 5.1 CH setting is on).

DISC

Use to put receiver in Dolby Digital, Dolby Surround and DTS modes. To use first press the RECEIVER button then operate this button.

DSP MODE

Use to put receiver in one of the DSP modes. To use first press the RECEIVER button then operate this button.

MIDNIGHT

Use to put receiver in Midnight mode. To use, first press the RECEIVER button, then operate this button.

5.1 CH

When the DVD/LD or DVD 5.1 CH function is selected each press switches the DVD/LD input between DVD/LD and DVD 5.1 CH. To use, first press the RECEIVER button, then operate this button.

CHANNEL SELECT

Use to select a speaker when setting up the surround sound of the receiver. To use, first press the RECEIVER button, then operate this button.

TEST TONE

Use to sound the TEST TONE when setting up the surround sound of the receiver. To use, first press the RECEIVER button, then operate this button.

ATT

Use to attenuate (lower) the level of an analog input signal and prevent distortion. To use, first press the RECEIVER button, then operate this button.

CHANNEL LEVEL +/-

Use to set up the levels of the surround sound of the receiver. To use, first press the RECEIVER button, then operate this button.

SIGNAL SELECT

Use to select the proper signal (analog, digital) for the source your are inputting. To use, first press the RECEIVER button, then operate this button.

④ TV CONTROL buttons

The following four sets of buttons are dedicated TV controls.

FUNC button

Use to select the TV function.

⏻ button

Use to turn on the power of the TV.

CH +/- buttons

Use to change channels on your TV.

VOL +/- buttons

Use to adjust the volume on your TV.

⑤ MENU button

Use to access different menus associated with your DVD player.

⑥ SOURCE ⏻ button

Use to turn on/off other components connected to the receiver.

⑦ The following buttons are both controls for other components (like a DVD player) and dedicated tuner controls. The tuner controls are explained here. You can use them after you have pushed the TUNER MULTI CONTROL button.

CLASS button

Use to switch between the three banks (classes) of station memories.

MPX button

Use to switch between auto stereo and mono reception of FM broadcasts. If the signal is weak then switching to MONO will improve the sound quality. Also, this is the pause button for CDs, tapes, DVDs, etc.

BAND button

Use to switch between the AM and FM band when in TUNER mode.

D. ACCESS button

Use to directly access a radio station by pressing the number of the station you want.

⑧ LOUDNESS button

Use to switch on the loudness. This feature is useful for getting good bass and treble sounds listening at low volumes.

⑨ FUNCTION button

Use to select the playback or recording source. This button lets you cycle through the different functions of the receiver in the following order: CD, tuner (FM/AM), AUX, CDR/TAPE/MD, VCR/DVR, DVD/LD, DVD 5.1 CH., and TV/SAT.

⑩ RECEIVER ⏻ button

This switches the receiver between STANDBY mode and power ON.

⑪ FL DIMMER button

Use this button to make the fluorescent display (FL) dimmer or brighter. There are three brightness settings as well as an off setting.

⑫ LED display

This display flashes when a command is sent from the remote control to the receiver. It also flashes at other times, for example when teaching the receiver preset codes.

⑬ EFFECT +/- buttons

Use to adjust the amount of effect in different DSP sound modes or advanced listening modes.

⑭ ◀▶ ▲▼ (FQ +/-, ST +/-) & ENTER buttons

Use these arrow buttons when setting up your surround sound system (see pages 15 – 20). These buttons are also used to control DVD menus/options and for deck 1 of a double cassette deck player. The FQ +/- buttons can be used to find radio frequencies. The ST +/- buttons can be used to select the stations of memorized radio frequencies.

⑮ TOP MENU button

In DVD mode this button brings you to the top or most fundamental menu.

⑯ CHANNEL +/- buttons (◀◀/DISPLAY, ▶▶/RF ATT)

Use to select the stations of memorized radio frequencies. Also use to skip tracks backward or forward on CDs, DVDs, etc. Also use to display the RDS information (DISPLAY) and use to lower the input level of a radio signal (RF ATT).

⑰ MUTING button

Use to mute the sound or restore the sound if it has been muted.

⑱ MASTER VOLUME +/- buttons

Use to set the overall listening volume.

⑲ REMOTE SETUP button

Use this button when setting up the remote control to control other components.


Audio Components

To begin set up connect your audio components to the jacks as shown below. These are all analog connections and your analog audio components (cassette deck etc.) use these jacks. Remember that for components you want to record with you need to hook up four plugs (a set of stereo ins and a set of stereo outs), but for components that only play you only need to hook up one set of stereo plugs (two plugs). To use Digital sources features you must hook up your digital components to the digital inputs, but it is also a good idea to hook up your digital components to analog audio jacks. If you want to record to/from digital components (like an MD) to/from analog components you must hook up your digital equipment with these analog connections.




- Only the VSX-709RDS has S-video jacks and optical digital out jack.
- The arrows indicate the direction of the audio signal.

VSX-709RDS

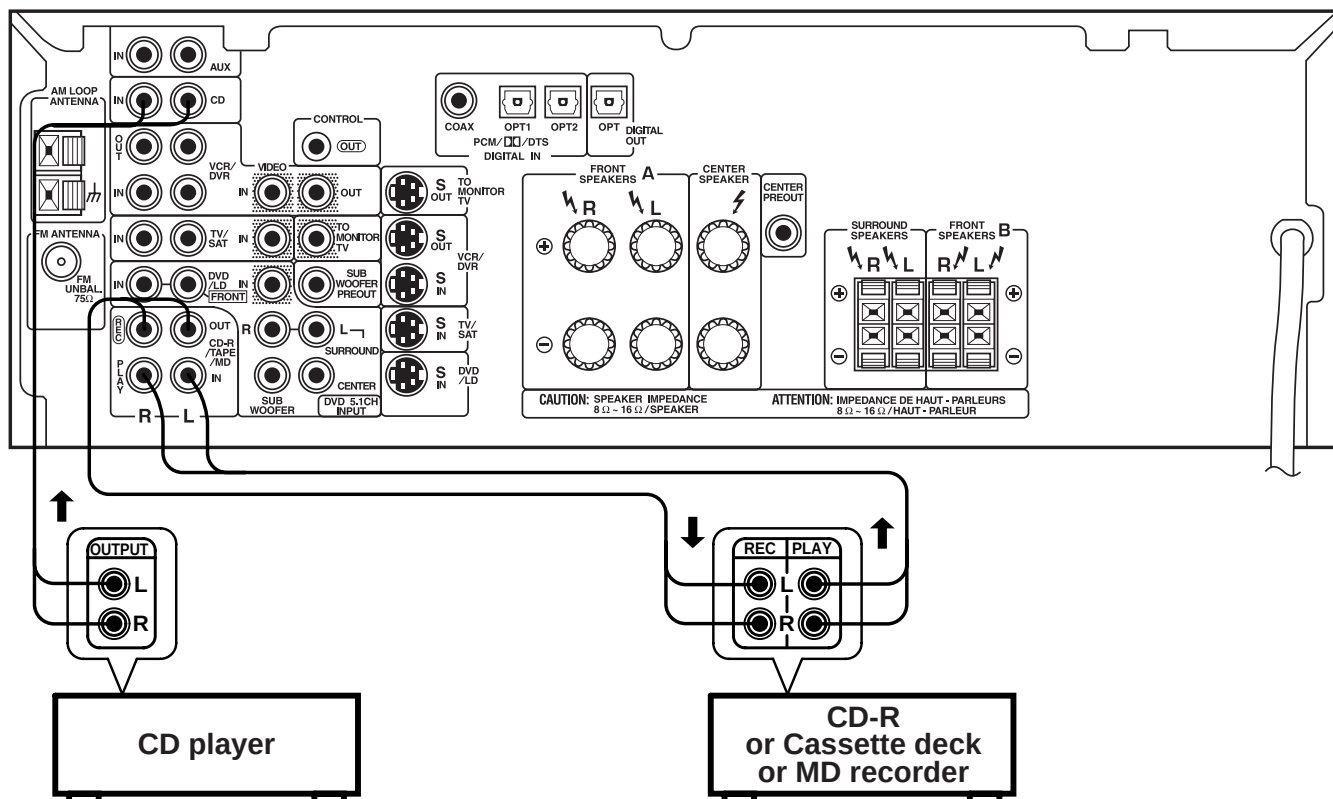

■ Audio cords

Use audio cords (not supplied) to connect the audio components.

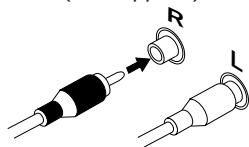

Connect red plugs to R (right) and white plugs to L (left). Be sure to insert completely.

Cassette deck placement

Depending on where the cassette deck is placed, noise may occur during playback of your cassette deck which is caused by leakage flux from the transformer in the receiver. If you experience noise, move the cassette deck farther away from the receiver.

8.2 SPECIFICATIONS

Amplifier Section

Continuous Power Output (STEREO MODE)
FRONT 80 W + 80 W (DIN 1 kHz, THD 0.9 %, 8Ω)

Continuous Power Output (SURROUND MODE)
FRONT 80 W/ch (1 kHz, THD 0.9 %, 8Ω)
CENTER 80 W (1 kHz, THD 0.9 %, 8Ω)
SURROUND 80 W/ch (1 kHz, THD 0.9 %, 8Ω)

- Above specifications are applicable when the power supply is 230V.

Input (Sensitivity/Impedance)
VCR/DVR, DVD/LD, TV/SAT, CD, AUX,
CD-R/TAPE/MD (, VIDEO) 200 mV/47 kΩ

Frequency Response
VCR/DVR, DVD/LD, TV/SAT, CD, AUX,
CD-R/TAPE/MD (, VIDEO) 5 Hz to 100,000 Hz ± 3 dB

Output (Level/Impedance)
VCR/DVR, CD-R/TAPE/MD 200 mV/2.2 kΩ

Tone Control
BASS ± 6 dB (100 Hz)
TREBLE ± 6 dB (10 kHz)
LOUDNESS +9 dB/+9 dB (100 Hz/10 kHz)

Signal-to-Noise Ratio
[DIN (Continuous rated power output/50 mW)]
VCR/DVR, DVD/LD, TV/SAT, CD, AUX,
CD-R/TAPE/MD (, VIDEO) 88 dB/64 dB

VIDEO Section

Input (Sensitivity/Impedance)
VCR/DVR, TV/SAT, DVD/LD (, VIDEO) 1 Vp-p/75 Ω

Output (Level/Impedance)
VCR/DVR, TO MONITOR TV 1 Vp-p/75 Ω

Frequency Response
VCR/DVR, TV/SAT, DVD/LD (, VIDEO)
→ TO MONITOR TV 5 Hz to 7 MHz ± 3 dB

Signal-to-Noise Ratio 55 dB

FM Tuner Section

Frequency Range 87.5 MHz to 108 MHz
Usable Sensitivity Mono: 15.2 dBf, IHF (1.6 μV/75 Ω)
50 dB Quieting Sensitivity Mono: 20.2 dBf
Stereo: 41.2 dBf

Sensitivity (DIN) Mono: 1.1 μV (S/N 26 dB)
Stereo: 50 μV (S/N 46 dB)

Signal-to-Noise Ratio Mono: 76 dB (at 85 dBf)
Stereo: 72 dB (at 85 dBf)

Signal-to-Noise Ratio (DIN) Mono: 62 dB
Stereo: 58 dB

Distortion Stereo: 0.6 % (1 kHz)

Alternate Channel Selectivity 70 dB (400 kHz)

Stereo Separation 40 dB (1 kHz)

Frequency Response 30 Hz to 15 kHz (± 1 dB)

Antenna Input 75 Ω unbalanced

AM Tuner Section

Frequency Range 531 kHz to 1,602 kHz

Sensitivity (IHF, Loop antenna) 350 μV/m

Selectivity 30 dB

Signal-to-Noise Ratio 50 dB

Antenna Loop antenna

Miscellaneous

Power Requirements

UK model AC 230 V, 50/60 Hz

European model AC 220 – 230 V, 50/60 Hz

Power Consumption 220 W

Power Consumption in Standby mode 1.0 W

Dimensions

VSX-709RDS 420 (W) × 158 (H) × 401 (D) mm

VSX-609RDS 420 (W) × 158 (H) × 391 (D) mm

Weight (without package)

VSX-709RDS 8.4 kg

VSX-609RDS 8.4 kg

Furnished Parts

FM Antenna 1

AM Loop Antenna 1

Dry Cell Batteries

VSX-709RDS (SIZE "AA" (IEC LR6)) 2

VSX-609RDS (SIZE "AA" (IEC R6P)) 2

Remote Control Unit 1

Operating Instructions 1


NOTE:

Specifications and the design are subject to possible modifications without notice, due to improvements.

Manufactured under license from Digital Theater Systems, Inc. US Pat. No. 5,451,942 and other worldwide patents issues and pending. "DTS" and "DTS Digital Surround" are trademarks of Digital Theater Systems, Inc. © 1996 Digital Theater Systems, Inc. All right reserved.

Manufactured under license from Dolby Laboratories. "Dolby", "Pro Logic" and the double-D symbol are trademarks of Dolby Laboratories. Confidential unpublished works. © 1992 - 1997 Dolby Laboratories. All rights reserved.


Accessories

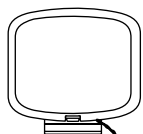


AM loop antenna
(ATB7009)




FM wire antenna
(ADH7005)



VSX-609RDS:
AA size IEC R6P batteries (x2)
VSX-709RDS:
AA size IEC LR6 batteries (x2)



VSX-709RDS
Remote control unit
(AXD7249)



VSX-609RDS
Remote control unit
(AXD7247)