

notebook



P170EM
SERVICE
MANUAL

Notebook Computer

P170EM

Service Manual

Notice

The company reserves the right to revise this publication or to change its contents without notice. Information contained herein is for reference only and does not constitute a commitment on the part of the manufacturer or any subsequent vendor. They assume no responsibility or liability for any errors or inaccuracies that may appear in this publication nor are they in anyway responsible for any loss or damage resulting from the use (or misuse) of this publication.

This publication and any accompanying software may not, in whole or in part, be reproduced, translated, transmitted or reduced to any machine readable form without prior consent from the vendor, manufacturer or creators of this publication, except for copies kept by the user for backup purposes.

Brand and product names mentioned in this publication may or may not be copyrights and/or registered trademarks of their respective companies. They are mentioned for identification purposes only and are not intended as an endorsement of that product or its manufacturer.

Version 1.0
April 2012

Trademarks

Intel and **Intel Core** are trademarks of Intel Corporation.

Windows[®] is a registered trademark of Microsoft Corporation.

Other brand and product names are trademarks and/or registered trademarks of their respective companies.

About this Manual

This manual is intended for service personnel who have completed sufficient training to undertake the maintenance and inspection of personal computers.

It is organized to allow you to look up basic information for servicing and/or upgrading components of the *PI70EM* series notebook PC.

The following information is included:

Chapter 1, Introduction, provides general information about the location of system elements and their specifications.

Chapter 2, Disassembly, provides step-by-step instructions for disassembling parts and subsystems and how to upgrade elements of the system.

Appendix A, Part Lists

Appendix B, Schematic Diagrams

Appendix C, Updating the FLASH ROM BIOS

IMPORTANT SAFETY INSTRUCTIONS

Follow basic safety precautions, including those listed below, to reduce the risk of fire, electric shock and injury to persons when using any electrical equipment:

1. Do not use this product near water, for example near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement or near a swimming pool.
2. Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electrical shock from lightning.
3. Do not use the telephone to report a gas leak in the vicinity of the leak.
4. Use only the power cord and batteries indicated in this manual. Do not dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions.
5. This product is intended to be supplied by a Listed Power Unit with an AC Input of 100 - 240V, 50 - 60Hz, DC Output of 19V, 11.57A (**220** Watts) minimum AC/DC Adapter.

CAUTION

This Computer's Optical Device is a Laser Class 1 Product


Instructions for Care and Operation

The notebook computer is quite rugged, but it can be damaged. To prevent this, follow these suggestions:

1. **Don't drop it, or expose it to shock.** If the computer falls, the case and the components could be damaged.



2. **Keep it dry, and don't overheat it.** Keep the computer and power supply away from any kind of heating element. This is an electrical appliance. If water or any other liquid gets into it, the computer could be badly damaged.

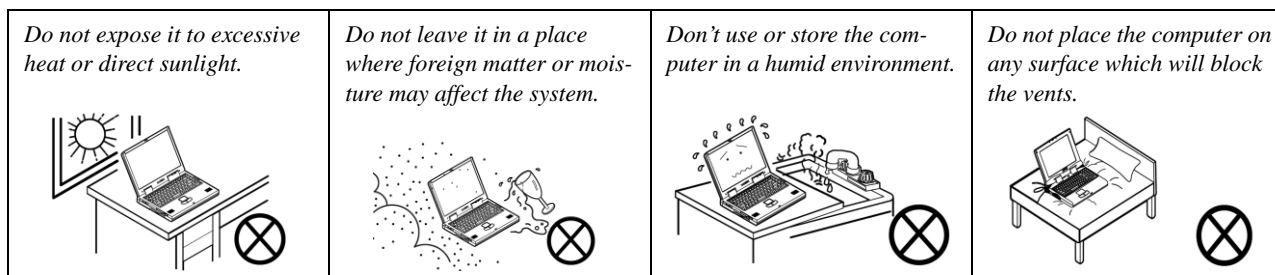

3. **Follow the proper working procedures for the computer.** Shut the computer down properly and don't forget to save your work. Remember to periodically save your data as data may be lost if the battery is depleted.



Preface



Removal Warning

When removing any cover(s) and screw(s) for the purposes of device upgrade, remember to replace the cover(s) and screw(s) before restoring power to the system.

Also note the following when the cover is removed:


- Hazardous moving parts.
- Keep away from moving fan blades

Power Safety Warning


Before you undertake any upgrade procedures, make sure that you have turned off the power, and disconnected all peripherals and cables (including telephone lines and power cord). You must also remove your battery in order to prevent accidentally turning the machine on.

4. **Avoid interference.** Keep the computer away from high capacity transformers, electric motors, and other strong magnetic fields. These can hinder proper performance and damage your data.
5. **Take care when using peripheral devices.**

Use only approved brands of peripherals.

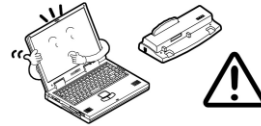

Unplug the power cord before attaching peripheral devices.

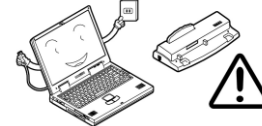

Power Safety


The computer has specific power requirements:

- Only use a power adapter approved for use with this computer.
- Your AC adapter may be designed for international travel but it still requires a steady, uninterrupted power supply. If you are unsure of your local power specifications, consult your service representative or local power company.
- The power adapter may have either a 2-prong or a 3-prong grounded plug. The third prong is an important safety feature; do not defeat its purpose. If you do not have access to a compatible outlet, have a qualified electrician install one.
- When you want to unplug the power cord, be sure to disconnect it by the plug head, not by its wire.
- Make sure the socket and any extension cord(s) you use can support the total current load of all the connected devices.
- Before cleaning the computer, make sure it is disconnected from any external power supplies.


Do not plug in the power cord if you are wet.



Do not use the power cord if it is broken.

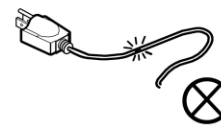

Do not place heavy objects on the power cord.

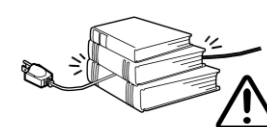

Battery Precautions

- Only use batteries designed for this computer. The wrong battery type may explode, leak or damage the computer.
- Do not continue to use a battery that has been dropped, or that appears damaged (e.g. bent or twisted) in any way. Even if the computer continues to work with a damaged battery in place, it may cause circuit damage, which may possibly result in fire.
- Recharge the batteries using the notebook's system. Incorrect recharging may make the battery explode.
- Do not try to repair a battery pack. Refer any battery pack repair or replacement to your service representative or qualified service personnel.
- Keep children away from, and promptly dispose of a damaged battery. Always dispose of batteries carefully. Batteries may explode or leak if exposed to fire, or improperly handled or discarded.
- Keep the battery away from metal appliances.
- Affix tape to the battery contacts before disposing of the battery.
- Do not touch the battery contacts with your hands or metal objects.

Battery Guidelines

The following can also apply to any backup batteries you may have.

- If you do not use the battery for an extended period, then remove the battery from the computer for storage.
- Before removing the battery for storage charge it to 60% - 70%.
- Check stored batteries at least every 3 months and charge them to 60% - 70%.





Battery Disposal

The product that you have purchased contains a rechargeable battery. The battery is recyclable. At the end of its useful life, under various state and local laws, it may be illegal to dispose of this battery into the municipal waste stream. Check with your local solid waste officials for details in your area for recycling options or proper disposal.

Caution

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Discard used battery according to the manufacturer's instructions.

Battery Level

Click the battery icon   in the taskbar to see the current battery level and charge status. A battery that drops below a level of 10% will not allow the computer to boot up. Make sure that any battery that drops below 10% is recharged within one week.

Related Documents

You may also need to consult the following manual for additional information:

User's Manual on Disc

This describes the notebook PC's features and the procedures for operating the computer and its ROM-based setup program. It also describes the installation and operation of the utility programs provided with the notebook PC.

System Startup

1. Remove all packing materials.
2. Place the computer on a stable surface.
3. Insert the battery and tighten the screws.
4. Securely attach any peripherals you want to use with the computer (e.g. keyboard and mouse) to their ports.
5. Attach the AC/DC adapter to the DC-In jack at the rear of the computer, then plug the AC power cord into an outlet, and connect the AC power cord to the AC/DC adapter.
6. Use one hand to raise the lid/LCD to a comfortable viewing angle (do not to exceed **130** degrees); use the other hand (as illustrated in Figure 1) to support the base of the computer (**Note: Never** lift the computer by the lid/LCD).
7. Press the power button to turn the computer "on".

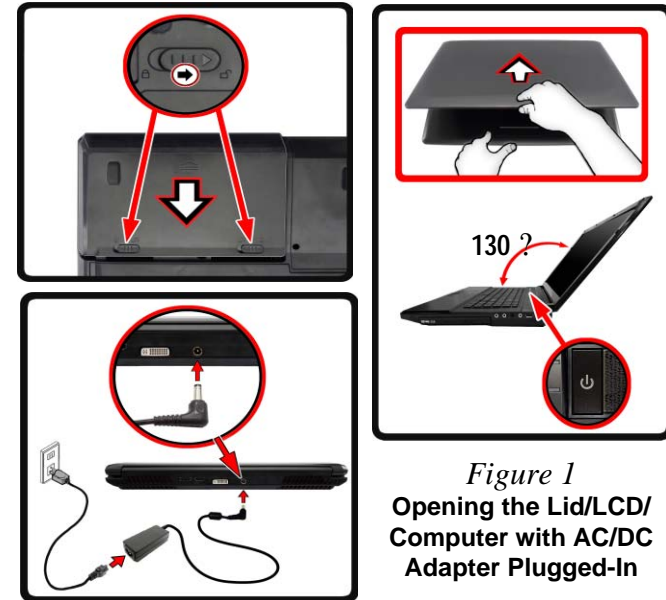


Figure 1
Opening the Lid/LCD/
Computer with AC/DC
Adapter Plugged-In

Contents

Introduction1-1

Overview	1-1
External Locator - Top View with LCD Panel Open	1-4
External Locator - Front & Right side Views	1-5
External Locator - Left Side & Rear View	1-6
External Locator - Bottom View	1-7
Mainboard Overview - Top (Key Parts)	1-8
Mainboard Overview - Bottom (Key Parts)	1-9
Mainboard Overview - Top (Connectors)	1-10
Mainboard Overview - Bottom (Connectors)	1-11

Disassembly2-1

Overview	2-1
Maintenance Tools	2-2
Connections	2-2
Maintenance Precautions	2-3
Disassembly Steps	2-4
Removing the Battery	2-5
Removing the Hard Disk Drive	2-6
Removing the Optical (CD/DVD) Device	2-9
Removing the Hard Disk from the Secondary HDD Bay	2-10
Removing the Primary System Memory (RAM)	2-12
Removing the Secondary System Memory (RAM)	2-14
Removing the Wireless LAN Module	2-16
Removing and Installing the Processor	2-17
Removing and Installing the Video Card	2-20
Removing the Microphone	2-22

Part ListsA-1

Part List Illustration Location	A-2
Top with Fingerprint	A-3

Top without Fingerprint	A-4
Bottom	A-5
LCD	A-6
HDD	A-7
COMBO	A-8
DVD-Dual Drive	A-9

Schematic Diagrams.....B-1

System Block Diagram	B-2
TPM	B-3
Processor 1/7	B-4
Processor 2/7	B-5
Processor 3/7	B-6
Processor 4/7	B-7
Processor 5/7	B-8
Processor 6/7	B-9
Processor 7/7	B-10
DDRIII CHA SO-DIMM_0	B-11
DDRIII CHA SO-DIMM_1	B-12
DDRIII CHB SO-DIMM_0	B-13
DDRIII CHB SO-DIMM_1	B-14
MXM PCI-E	B-15
Panel, Inverter, CRT	B-16
1394_JMB380C	B-17
DVI	B-18
Display Port	B-19
HDMI	B-20
PCH 1/9 - RTC, HDA, SATA	B-21
PCH 2/9 - PCIE, SMBUS, CLK	B-22
PCH3/9 - DMI, FDI, PWRGD	B-23
PCH 4/9 - LVDS, DDI, CRT	B-24

Preface


PCH 5/9 - PCI, USB, RSVD	B-25	P170 LED Board	B-57
PCH 6/9 - GPIO, CPU	B-26	P170 Click Board	B-58
PCH 7/9 - Power	B-27	P170 Fingerprint Board	B-59
PCH 8/9 - Power	B-28	P150 HDD Board	B-60
PCH 9/9 - GND	B-29	P150 LED Board_L	B-61
USB+eSATA, USB Charging	B-30	P150 LED Board_R	B-62
USB 2.0, CCD, Mini PCIE, LID	B-31	Power on Sequence	B-63
LED, Hotkey, LID SW, Fan	B-32	Updating the FLASH ROM BIOS..... C-1	
RJ 45	B-33		
Codec Realtek ALC892	B-34		
APA2607-TPA2008D2	B-35		
KBC-ITE IT8518E	B-36		
Backlight Keyboard	B-37		
mSATA, FAN, TP, FP, MULTI-CON	B-38		
Card Reader RTL8411	B-39		
USB 3.0	B-40		
VDD3, VDD5	B-41		
5VS, 3.3VS, 1.5VS	B-42		
Power 1.05VS	B-43		
Power 1.5V/VTT_MEM	B-44		
Power 1V, 1.8VS	B-45		
Power V-Core 1	B-46		
Power V-Core 2	B-47		
AC_In, Charger	B-48		
Power 0.85VS	B-49		
Audio Board	B-50		
P150 ODD Board	B-51		
P150 Click Board	B-52		
P150 LED 1 Board	B-53		
P150 LED 2 Board	B-54		
P150 LED 3 Board	B-55		
P170 HDD & ODD Board	B-56		

Chapter 1: Introduction

Overview

This manual covers the information you need to service or upgrade the **PI70EM** series notebook computer. Information about operating the computer (e.g. getting started, and the *Setup* utility) is in the *User's Manual*. Information about drivers (e.g. VGA & audio) is also found in *User's Manual*. That manual is shipped with the computer.

Operating systems (e.g. *Windows 7*, etc.) have their own manuals as do application software (e.g. word processing and database programs). If you have questions about those programs, you should consult those manuals.

The **PI70EM** series notebook is designed to be upgradeable. See [Disassembly on page 2 - 1](#) for a detailed description of the upgrade procedures for each specific component. Please note the warning and safety information indicated by the “” symbol.

The balance of this chapter reviews the computer's technical specifications and features.

Introduction

Specifications



Latest Specification Information

The specifications listed here are correct at the time of sending them to the press. Certain items (particularly processor types/speeds) may be changed, delayed or updated due to the manufacturer's release schedule. Check with your service center for more details.



CPU

The CPU is not a user serviceable part. Accessing the CPU in any way may violate your warranty.

Processor Options

Intel® Core™ i7 Processor

i7-3920XM (2.90GHz)

8MB L3 Cache, 22nm, DDR3-1600MHz, TDP 55W

Intel® Core™ i7 Processor

i7-3820QM (2.70GHz)

8MB L3 Cache, 22nm, DDR3-1600MHz, TDP 45W

i7-3720QM (2.60GHz) , i7-3610QM (2.30GHz)

6MB L3 Cache, 22nm, DDR3-1600MHz, TDP 45W

i7-3520M (2.90GHz)

4MB L3 Cache, 22nm, DDR3-1600MHz, TDP 35W

Intel® Core™ i5 Processor

i5-3360M (2.80GHz), i5-3320M (2.60GHz), i5-3210M (2.50GHz)

3MB L3 Cache, 22nm, DDR3-1600MHz, TDP 35W

Intel® Core™ i7 Processor

i7-2960XM (2.70GHz)

8MB L3 Cache, 32nm, DDR3-1600MHz, TDP 55W

Intel® Core™ i7 Processor

i7-2760QM (2.40GHz)

6MB L3 Cache, 32nm, DDR3-1600MHz, TDP 45W

i7-2670QM (2.20GHz)

4MB L3 Cache, 32nm, DDR3-1333MHz, TDP 45W

i7-2640M (2.80GHz)

4MB L3 Cache, 32nm, DDR3-1333MHz, TDP 35W

Intel® Core™ i5 Processor

i5-2540M (2.60GHz), i5-2520M (2.50GHz)

3MB L3 Cache, 32nm, DDR3-1333MHz, TDP 35W

Memory

*Four 204 Pin SO-DIMM Sockets Supporting DDR3 1333/1600** MHz Memory Modules

Memory Expandable up to 16GB

Compatible with 2GB or 4GB Modules

*Note: Four SO-DIMMs are only supported by Quad-Core CPUs; Dual-Core CPUs support two SO-DIMMs maximum

**Note: 1600 MHz Memory Modules are only supported by Quad-Core CPUs to a maximum of two SO-DIMMs

LCD

17.3" (46.94cm) FHD (1920 * 1080)

BIOS

AMI BIOS (48Mb SPI Flash-ROM)

Storage

One Changeable 2.5" (6cm) 9.5mm (h) **SATA** (Serial) Hard Disk Drives

(**Factory Option**) One 12.7mm(h) Optical Device Type Drive (Super Multi Drive/Blu-Ray Combo Drive/Blu-Ray Writer Drive)

(**Factory Option**) One mSATA Solid State Drive (SSD)

(**Factory Option**) Up to Two Changeable 2.5" (6cm) 9.5mm (h) **SATA** (Serial) Hard Disk Drives supporting RAID level 0/1/ Recovery

Core Logic

Intel® HM77 Chipset

Video Adapter

Intel® Integrated GPU and NVIDIA® Discrete GPU

Supports NVIDIA® Optimus Technology

Intel Integrated GPU (GPU is Dependent on Processor)

Intel® HD Graphics 3000

Dynamic Frequency (Intel Dynamic Video Memory Technology for up to **1.7GB**)

Microsoft DirectX®10 Compatible

Intel® HD Graphics 4000

Dynamic Frequency (Intel Dynamic Video Memory Technology for up to **1.7GB**)

Microsoft DirectX®11 Compatible

nVIDIA® GeForce GTX 675M PCIe Video Card

2GB GDDR5 Video RAM on board

Microsoft DirectX® 11 Compatible

nVIDIA® GeForce GTX 670M PCIe Video Card

1.5GB GDDR5 Video RAM on board

Microsoft DirectX® 11 Compatible

Security

Security (Kensington® Type) Lock Slot
 BIOS Password
 (Factory Option) Fingerprint Reader Module

Audio

High Definition Audio Compliant Interface
 THX TruStudio Pro
 S/PDIF Digital Output
 One (3W) Sub Woofer
 Built-In Microphone
 2 Speakers

Pointing Device

Built-in Touchpad (scrolling key functionality integrated)

Keyboard

Full-size “WinKey” keyboard with numeric keypad

Communication

Built-In Giga Base-TX Ethernet LAN
 (Factory Option) 2.0M Pixel FHD PC Camera Module

WLAN/ Bluetooth Half Mini-Card Modules:

(Factory Option) Intel® Centrino® Ultimate-N 6300 Wireless LAN (802.11a/g/n)
 (Factory Option) Intel® Centrino® Advanced-N 6235 Wireless LAN (802.11a/g/n) + Bluetooth 4.0
 (Factory Option) Intel® Centrino® Wireless-N 2230 Wireless LAN (802.11a/g/n) + Bluetooth 4.0
 (Factory Option) Wireless LAN (802.11b/g/n) + Bluetooth 3.0
 (Factory Option) Wireless LAN (802.11b/g/n) + Bluetooth 4.0

Card Reader

Embedded Multi-In-1 Card Reader
 MMC (MultiMedia Card) / RS MMC
 SD (Secure Digital) / Mini SD / SDHC/ SDXC
 MS (Memory Stick) / MS Pro / MS Duo

Mini Card Slots

Slot 1 for WLAN Module or Combo WLAN and Bluetooth Module
 (Factory Option) Slot 2 for mSATA SSD

Interface

Three USB 3.0 Ports (Including one AC/DC Powered USB/eSATA port)
 One USB 2.0 Port
 One eSATA Port (USB 3.0 Port Combined)
 One HDMI-Out (1.4a) Port
 One DVI-Out Port
 One S/PDIF Out Jack
 One Headphone/Speaker-Out Jack
 One Microphone-In Jack
 One Line-In Jack
 One Mini-IEEE1394b Port
 One RJ-45 LAN Jack
 One Display (1.1a) Port
 One DC-In Jack

Note: External 7.1CH Audio Output Supported by Headphone, Microphone, Line-In and Surround-Out Jacks

Environmental Spec**Temperature**

Operating: 5°C - 35°C
 Non-Operating: -20°C - 60°C

Relative Humidity

Operating: 20% - 80%
 Non-Operating: 10% - 90%

Power

Removable 8-cell cylinder battery, 76.96Wh (5200mAh)
 Full Range AC/DC Adapter
 AC Input: 100 - 240V, 50 - 60Hz
 DC Output: 19V, 11.57A (220W)

Dimensions & Weight

412mm (w) * 276mm (d) * 41.8 - 45.4mm (h)
 Around 3.9kg with Battery and ODD

Introduction

External Locator - Top View with LCD Panel Open

Figure 1
Top View

1. PC Camera
2. LCD
3. LED Status Indicators
4. Power Button
5. Speakers
6. Keyboard
7. Built-In Microphone
8. TouchPad and Buttons
9. Fingerprint Reader (Optional)



External Locator - Front & Right side Views



Figure 2
Front Views

1. LED Power Indicators



Figure 3
Right Side Views

1. Optical Device Drive Bay
2. Emergency Eject Hole
3. Headphone Jack
4. Microphone Jack
5. S/PDIF-Out Jack
6. Line-In Jack
7. USB 2.0 Port

Introduction

External Locator - Left Side & Rear View

Figure 4

Left Side View

1. Mini-IEEE 1394a Port
2. RJ-45 LAN Jack
3. USB 3.0 Port / USB Charge
4. USB 3.0 Port
5. Combined eSATA/ Powered USB 3.0 Port
6. Multi-in-1 Card Reader



Figure 5

Rear View

1. Vent/Fan Intake
2. Display Port
3. HDMI-Out Port
4. DVI-Out Port
5. DC-In Jack
6. Security Lock Slot



External Locator - Bottom View

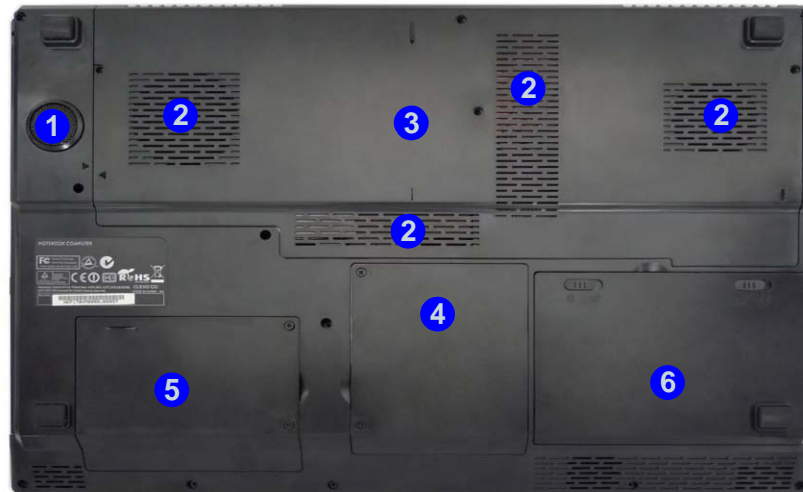


Figure 6
Bottom View

1. Sub Woofer
2. Fan Outlet/Intake
3. Component Bay Cover
4. Primary HDD Bay
5. Secondary HDD Bay
6. Battery



Overheating


To prevent your computer from overheating make sure nothing blocks the vent/fan intakes while the computer is in use.

Introduction

Figure 7
**Mainboard Top
Key Parts**


1. Platform
Controller Hub
2. Audio Codec
3. KBC ITE IT8519E

Mainboard Overview - Top (Key Parts)

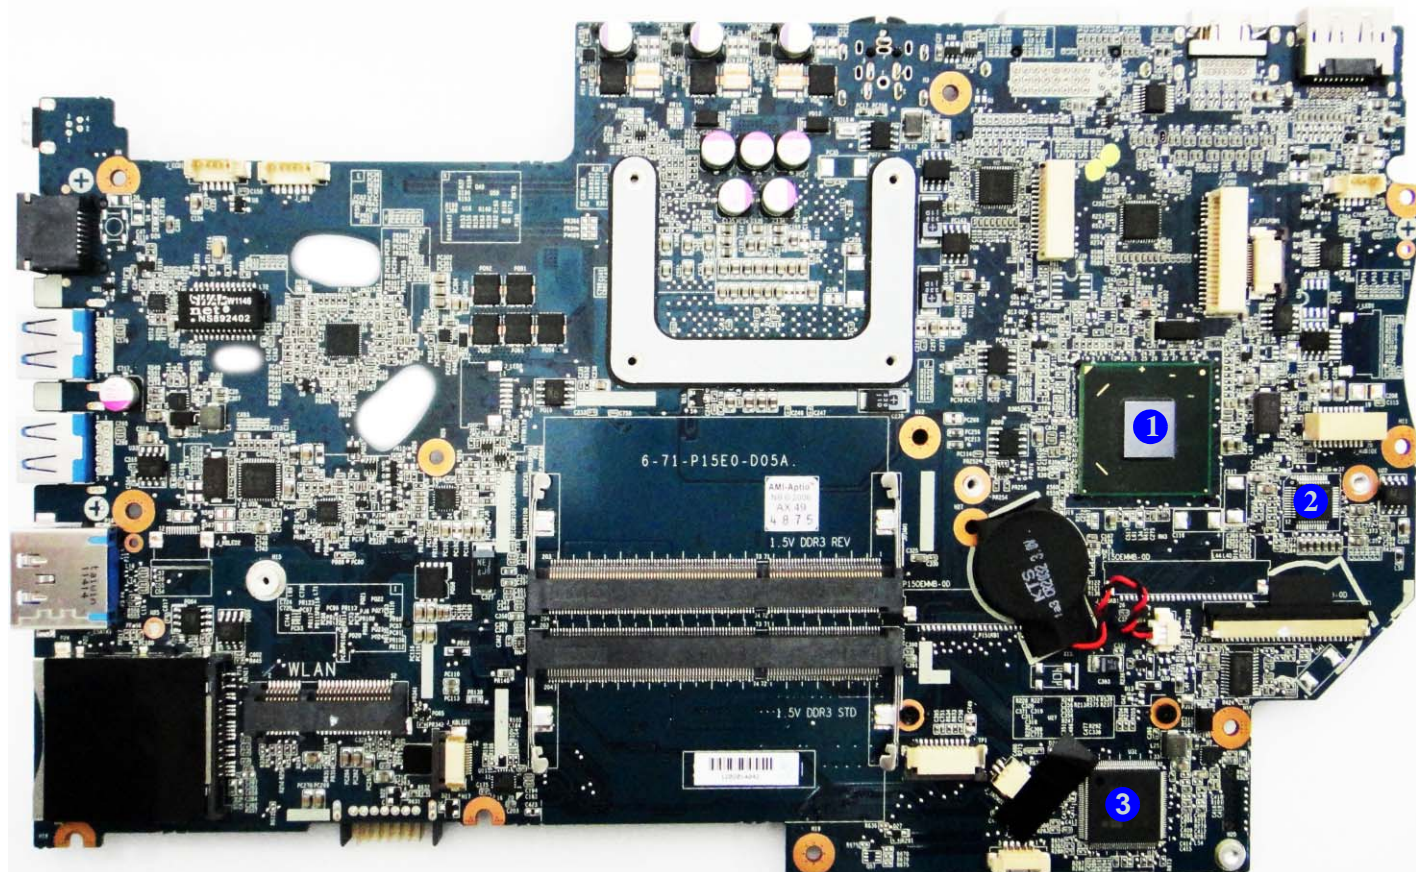

Mainboard Overview - Bottom (Key Parts)

Figure 8
Mainboard Bottom
Key Parts

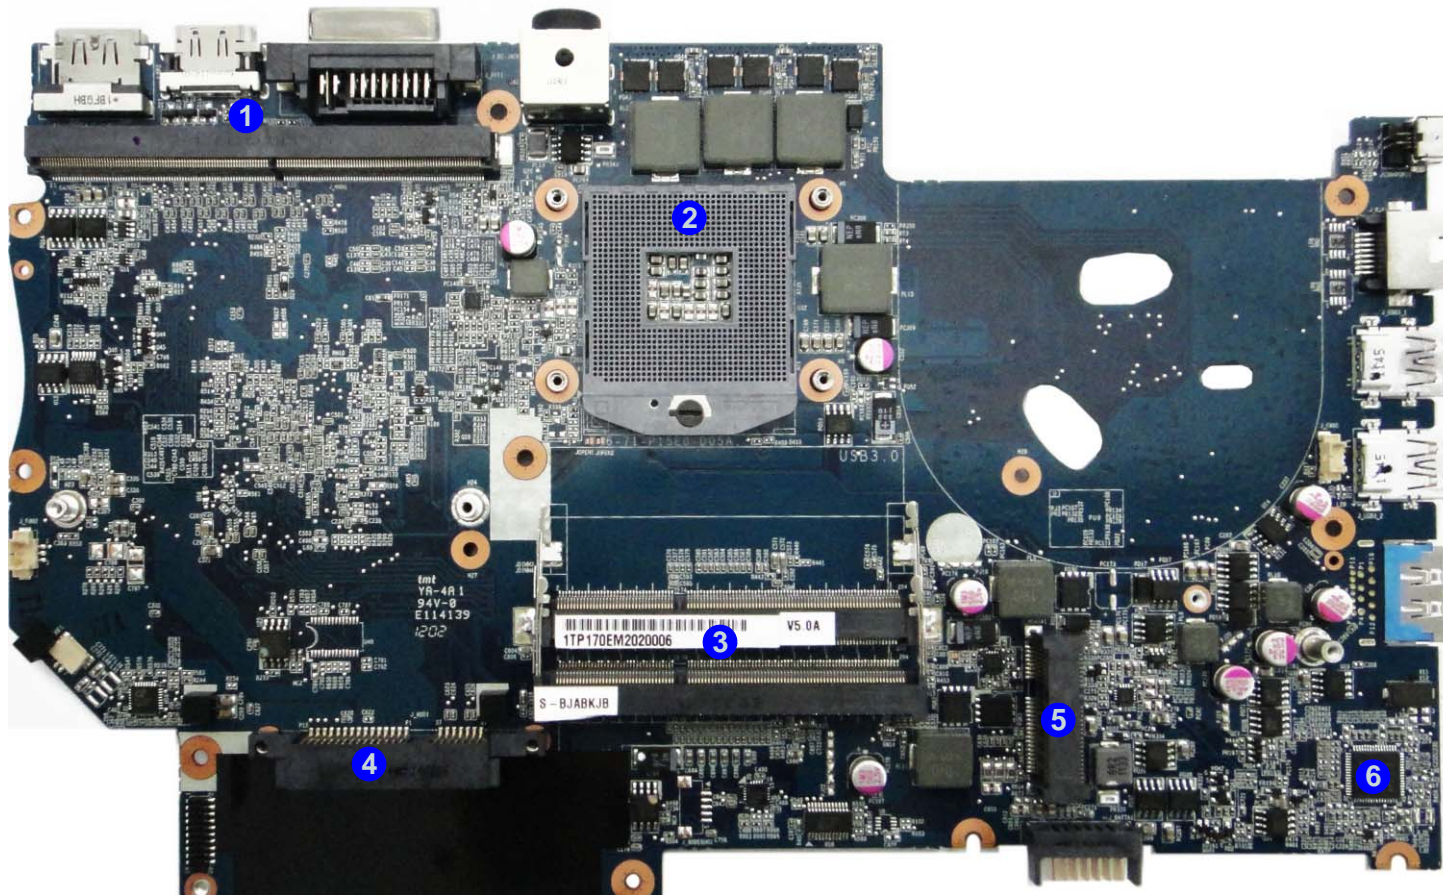


1. VGA-Card Connector
2. CPU Socket (no CPU installed)
3. Memory Slots DDR3 SO-DIMM
4. Hard Disk Connector
5. Mini-Card MSATA Connector
6. RTL8411

Introduction

Figure 9
Mainboard Top
Connectors


Mainboard Overview - Top (Connectors)

1. CCD Connector
2. USB 3.0 Port / eSATA
3. Multi-in-1 Card Reader
4. TouchPad Cable Connector
5. Microphone Cable Connector
6. Keyboard Cable Connector
7. CMOS Battery Connector
8. Audio Cable Connector
9. LCD Cable Connector 2
10. LCD Cable Connector 1
11. Speaker Connector

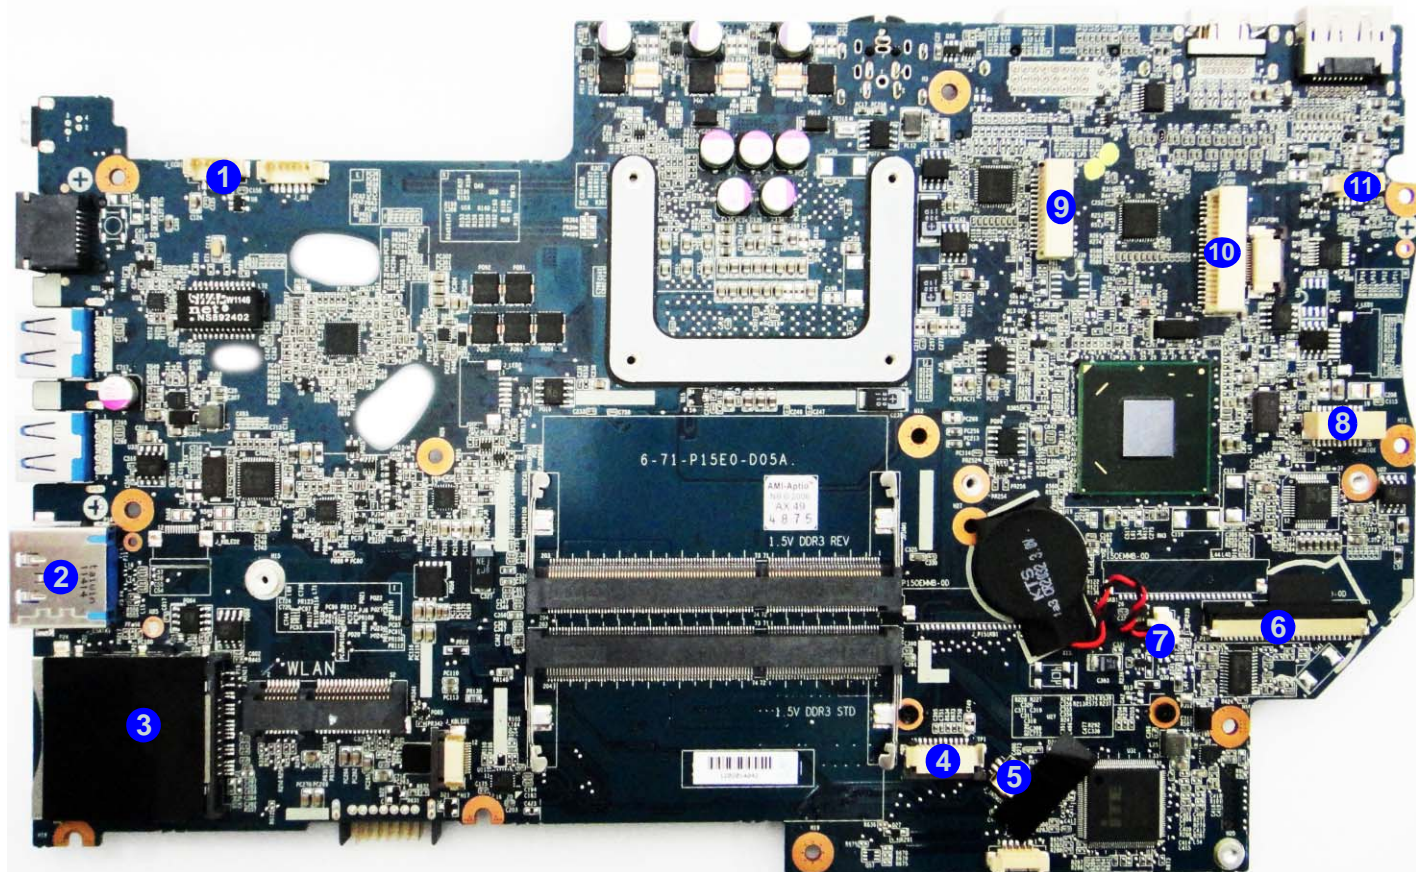

Mainboard Overview - Bottom (Connectors)

Figure 10
Mainboard Bottom
Connectors

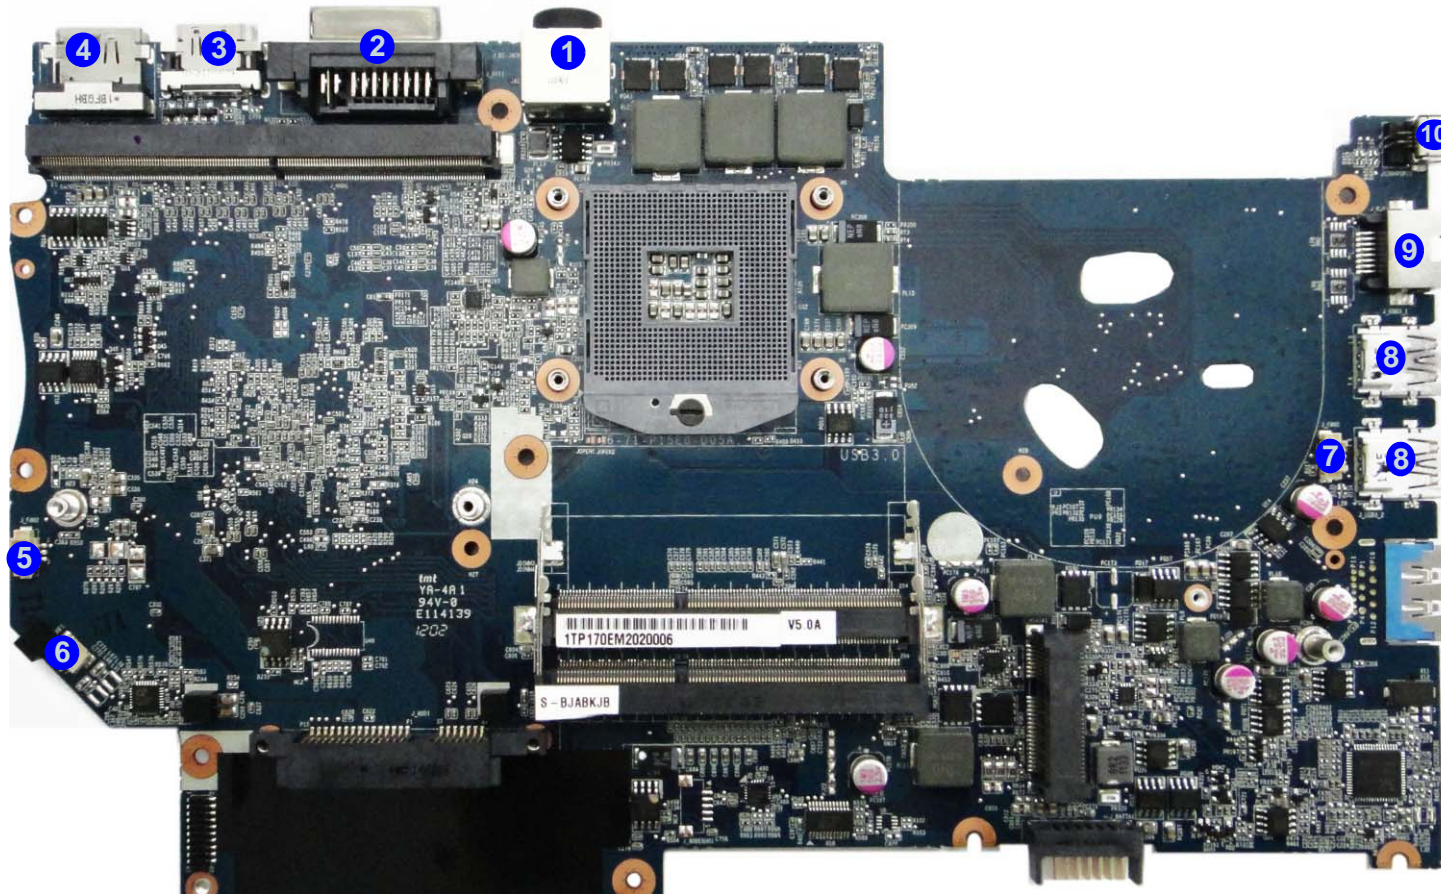

1. DC-In Jack
2. DVI-Out Port
3. HDMI-Out Port
4. Display Port
5. VGA Fan Cable Connector
6. Sub Woofer Cable Connector
7. CPU Fan Cable Connector
8. USB 3.0 Ports
9. RJ-45 LAN Jack
10. Mini-IEEE 1394a Port


Chapter 2: Disassembly

Overview

This chapter provides step-by-step instructions for disassembling the *PI70EM* series notebook's parts and subsystems. When it comes to reassembly, reverse the procedures (unless otherwise indicated).

We suggest you completely review any procedure before you take the computer apart.

Procedures such as upgrading/replacing the RAM, optical device and hard disk are included in the User's Manual but are repeated here for your convenience.

To make the disassembly process easier each section may have a box in the page margin. Information contained under the figure # will give a synopsis of the sequence of procedures involved in the disassembly procedure. A box with a  lists the relevant parts you will have after the disassembly process is complete. **Note:** The parts listed will be for the disassembly procedure listed ONLY, and not any previous disassembly step(s) required. Refer to the part list for the previous disassembly procedure. The amount of screws you should be left with will be listed here also.

A box with a  will also provide any possible helpful information. A box with a  contains warnings.

An example of these types of boxes are shown in the sidebar.



Disassembly

NOTE: All disassembly procedures assume that the system is turned **OFF**, and disconnected from any power supply (the battery is removed too).

Maintenance Tools

The following tools are recommended when working on the notebook PC:

- M3 Philips-head screwdriver
- M2.5 Philips-head screwdriver (magnetized)
- M2 Philips-head screwdriver
- Small flat-head screwdriver
- Pair of needle-nose pliers
- Anti-static wrist-strap

Connections

Connections within the computer are one of four types:

Locking collar sockets for ribbon connectors	To release these connectors, use a small flat-head screwdriver to gently pry the locking collar away from its base. When replacing the connection, make sure the connector is oriented in the same way. The pin1 side is usually not indicated.
Pressure sockets for multi-wire connectors	To release this connector type, grasp it at its head and gently rock it from side to side as you pull it out. Do not pull on the wires themselves. When replacing the connection, do not try to force it. The socket only fits one way.
Pressure sockets for ribbon connectors	To release these connectors, use a small pair of needle-nose pliers to gently lift the connector away from its socket. When replacing the connection, make sure the connector is oriented in the same way. The pin1 side is usually not indicated.
Board-to-board or multi-pin sockets	To separate the boards, gently rock them from side to side as you pull them apart. If the connection is very tight, use a small flat-head screwdriver - use just enough force to start.

Maintenance Precautions

The following precautions are a reminder. To avoid personal injury or damage to the computer while performing a removal and/or replacement job, take the following precautions:

1. **Don't drop it.** Perform your repairs and/or upgrades on a stable surface. If the computer falls, the case and other components could be damaged.
2. **Don't overheat it.** Note the proximity of any heating elements. Keep the computer out of direct sunlight.
3. **Avoid interference.** Note the proximity of any high capacity transformers, electric motors, and other strong magnetic fields. These can hinder proper performance and damage components and/or data. You should also monitor the position of magnetized tools (i.e. screwdrivers).
4. **Keep it dry.** This is an electrical appliance. If water or any other liquid gets into it, the computer could be badly damaged.
5. **Be careful with power.** Avoid accidental shocks, discharges or explosions.
 - Before removing or servicing any part from the computer, turn the computer off and detach any power supplies.
 - When you want to unplug the power cord or any cable/wire, be sure to disconnect it by the plug head. Do not pull on the wire.
6. **Peripherals** – Turn off and detach any peripherals.
7. **Beware of static discharge.** ICs, such as the CPU and main support chips, are vulnerable to static electricity. Before handling any part in the computer, discharge any static electricity inside the computer. When handling a printed circuit board, do not use gloves or other materials which allow static electricity buildup. We suggest that you use an anti-static wrist strap instead.
8. **Beware of corrosion.** As you perform your job, avoid touching any connector leads. Even the cleanest hands produce oils which can attract corrosive elements.
9. **Keep your work environment clean.** Tobacco smoke, dust or other air-borne particulate matter is often attracted to charged surfaces, reducing performance.
10. **Keep track of the components.** When removing or replacing any part, be careful not to leave small parts, such as screws, loose inside the computer.

Cleaning

Do not apply cleaner directly to the computer, use a soft clean cloth.

Do not use volatile (petroleum distillates) or abrasive cleaners on any part of the computer.



Power Safety Warning

Before you undertake any upgrade procedures, make sure that you have turned off the power, and disconnected all peripherals and cables (including telephone lines and power cord). You must also remove your battery in order to prevent accidentally turning the machine on.

Disassembly Steps

The following table lists the disassembly steps, and on which page to find the related information. **PLEASE PERFORM THE DISASSEMBLY STEPS IN THE ORDER INDICATED.**

To remove the Battery:

1. Remove the battery [page 2 - 5](#)

To remove the HDD from the Primary Bay:

1. Remove the battery [page 2 - 5](#)
2. Remove the HDD [page 2 - 6](#)

To remove the Optical Device:

1. Remove the battery [page 2 - 5](#)
2. Remove the Optical device [page 2 - 9](#)

To remove the HDD from the Secondary Bay:

1. Remove the battery [page 2 - 5](#)
2. Remove the HDD [page 2 - 10](#)

To remove the Primary System Memory:

1. Remove the battery [page 2 - 5](#)
2. Remove the system memory [page 2 - 12](#)

To remove the Secondary System Memory:

1. Remove the battery [page 2 - 5](#)
2. Remove the keyboard [page 2 - 14](#)
3. Remove the system memory [page 2 - 15](#)

To remove the WLAN Module:

1. Remove the battery [page 2 - 5](#)
2. Remove the keyboard [page 2 - 14](#)
3. Remove the wireless LAN [page 2 - 16](#)

To remove and install a Processor:

1. Remove the battery [page 2 - 5](#)
2. Remove the processor [page 2 - 17](#)
3. Install the processor [page 2 - 19](#)

To remove and install a Video Card:

1. Remove the battery [page 2 - 5](#)
2. Remove the video card [page 2 - 20](#)
3. Install the video card [page 2 - 21](#)

To remove the Microphone:



1. Remove the battery [page 2 - 5](#)
2. Remove the HDD [page 2 - 6](#)
3. Remove the Optical device [page 2 - 9](#)
4. Remove the HDD [page 2 - 10](#)
5. Remove the system memory [page 2 - 12](#)
6. Remove the processor [page 2 - 17](#)
7. Remove the video card [page 2 - 20](#)
8. Remove the microphone [page 2 - 22](#)

Removing the Battery

1. Turn the computer **off**, and turn it over.
2. Slide the latch **1** in the direction of the arrow (*Figure 1a*).
3. Slide the latch **2** in the direction of the arrow, and hold it in place (*Figure 1a*).
4. The battery may be levered up at point **3** (*Figure 1b*).
5. Lift the battery **4** out of the compartment (*Figure 1c*).

Figure 1
Battery Removal

- a. Slide the latch and hold in place.
- b. Slide the battery out in the direction of the arrow.
- c. Lift the battery out.

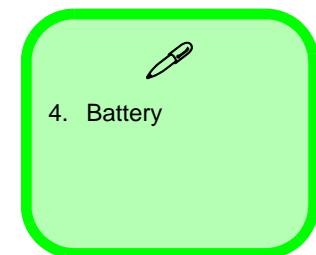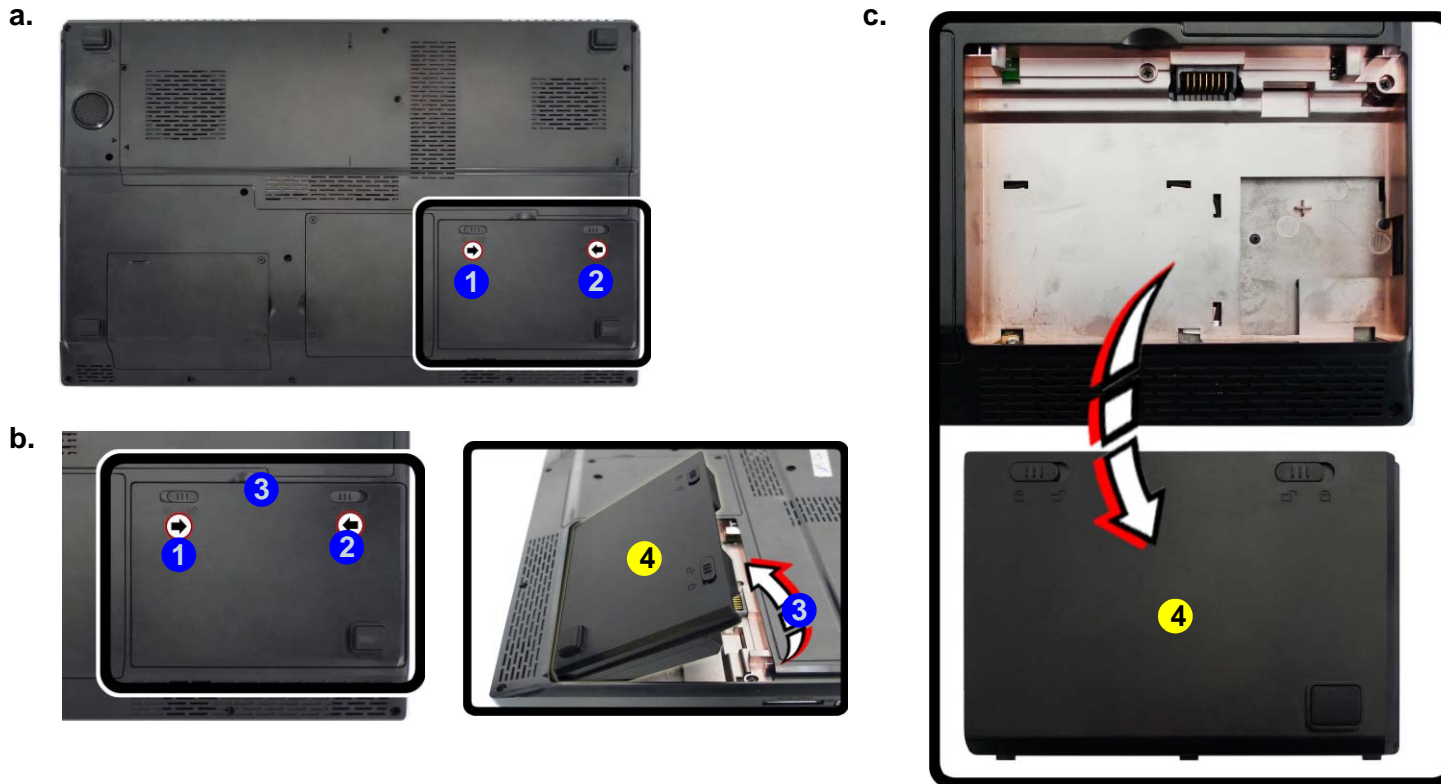

Disassembly

Figure 2
**HDD Assembly
Removal**


- Locate the HDD bay cover and remove the screws.
- Remove the hard disk bay cover by levering the cover at point ③.

Removing the Hard Disk Drive

The hard disk drive can be taken out to accommodate other 2.5" serial (SATA) hard disk drives with a height of 9.5mm (h). Follow your operating system's installation instructions, and install all necessary drivers and utilities (as outlined in **Chapter 4 of the User's Manual**) when setting up a new hard disk.

Hard Disk Upgrade Process

- Turn **off** the computer, and remove the battery ([page 2 - 5](#)).
- Locate the hard disk bay cover and remove screws ① - ② ([Figure 2a](#)).
- Remove the hard disk bay cover ④ by levering the cover at point ③ ([Figure 2b](#)).

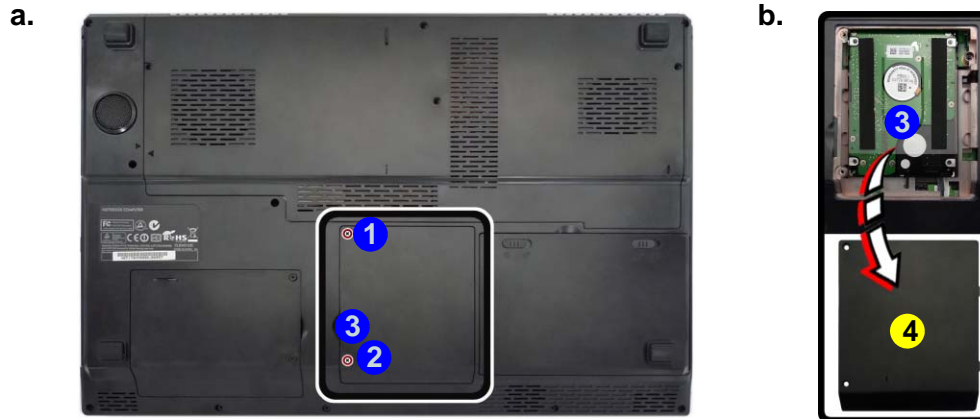

4. Hard Disk Bay Cover

- 2 Screws



HDD System Warning


New HDD's are blank. Before you begin make sure:

You have backed up any data you want to keep from your old HDD.


You have all the CD-ROMs and FDDs required to install your operating system and programs.

If you have access to the internet, download the latest application and hardware driver updates for the operating system you plan to install. Copy these to a removable medium.

4. Slide the HDD assembly in the direction of the arrow **4** (*Figure 3c*).
5. Remove the hard disk assembly **5** (*Figure 3d*).
6. Remove screws **6** & **7** and the insulation plate **8** (*Figure 3e*).
7. Reverse the process to install a new hard disk (do not forget to replace all the screws and covers).

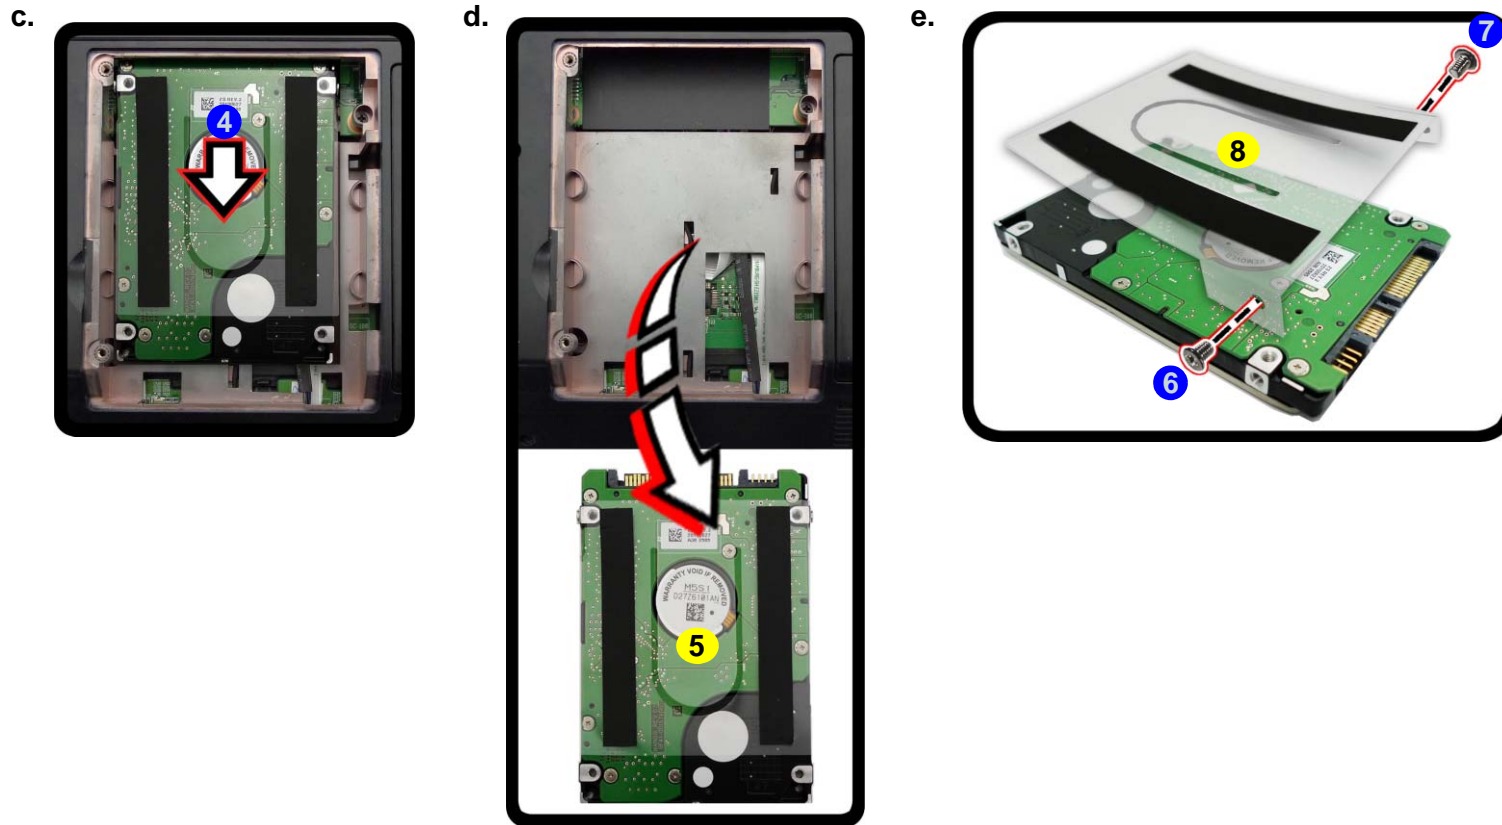

- Figure 3*
HDD Assembly Removal (cont'd.)
- c. Slide the HDD assembly in the direction of the arrow.
 - d. Remove the hard disk assembly.
 - e. Remove the screws and the insulation plate.

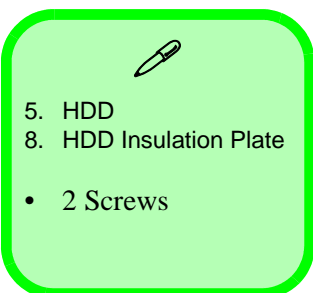

Disassembly



Figure 4
Inserting the Hard Disk Into the HDD Bay

a. Make sure the HDD assembly is aligned with the black taped area. When aligned, carefully insert the HDD assembly into the case so that the connectors line up.

Inserting the Hard Disk Into the HDD Bay

1. Make sure the HDD assembly is aligned with the black taped area **1** (*Figure 4a*).
2. When aligned, carefully insert the HDD assembly **2** into the case so that the connectors line up (*Figure 4a*).
3. Replace the hard disk bay covers and screws.


a.

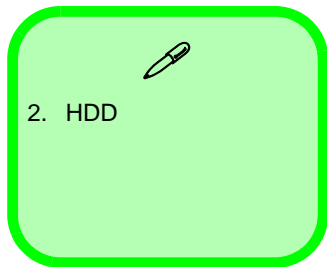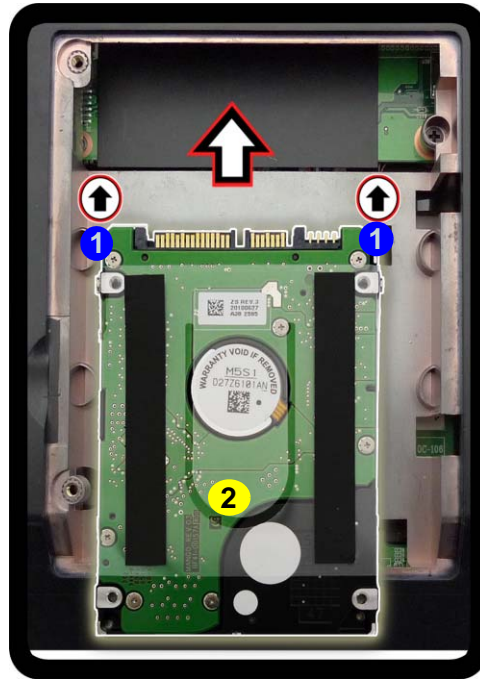

Removing the Optical (CD/DVD) Device

1. Turn **off** the computer, and remove the battery ([page 2 - 5](#)).
2. Locate the **secondary** hard disk bay cover and remove screws **1** & **2** ([Figure 5a](#)).
3. Remove the hard disk bay cover **3** ([Figure 5b](#)).
4. Remove the screw at point **4** ([Figure 5c](#)), and use a screwdriver to carefully push out the optical device **5** out of the bay at point **6** ([Figure 5d](#)).
5. Reverse the process to install any new optical (CD/DVD) device.


a.

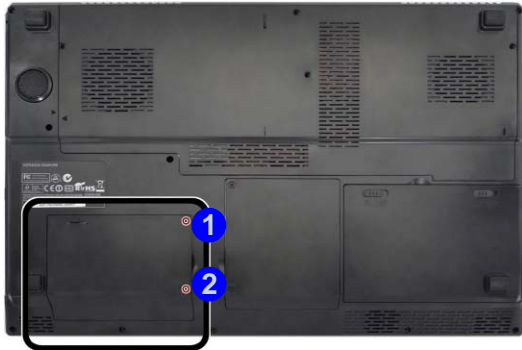

c.



b.

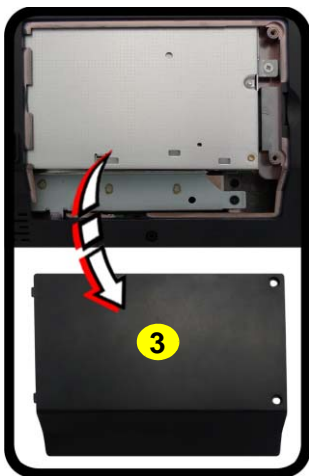

d.

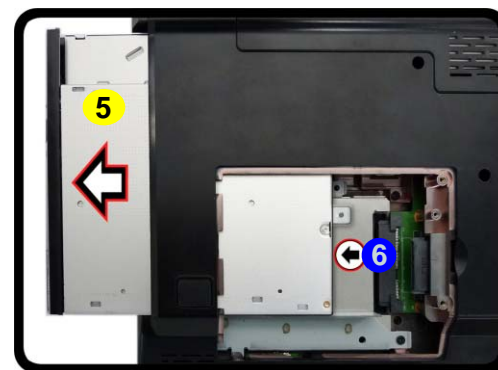


Figure 5
Optical Device Removal

- a. Locate the secondary hard disk bay cover and remove the screws.
- b. Remove the cover.
- c. Remove the screw.
- d. Push the optical device out off the computer at point 6.

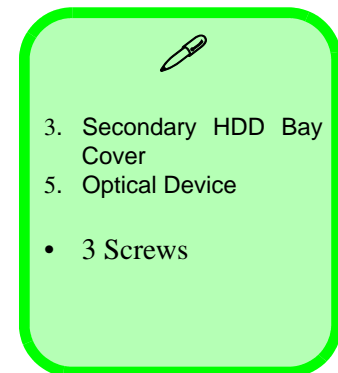


Figure 6



Secondary HDD Assembly Removal

- Remove the screws from the secondary HDD assembly.
- Slide the secondary HDD assembly in the direction of the arrow.
- Lift the secondary HDD assembly up and out of the bay.

Removing the Hard Disk from the Secondary HDD Bay

Note that the **secondary** hard disk (if installed) is located under the optical device bay (CD/DVD).

- Turn **off** the computer, and turn it over, remove the battery ([page 2 - 5](#)) and optical device ([page 2 - 9](#)).
- Remove screws ① - ③ from the secondary HDD assembly ([Figure 6a](#)).
- Slide the secondary HDD assembly in the direction of the arrow ④ (it will not move fully out of the bay [Figure 6a](#)).
- Lift the secondary HDD assembly ⑤ up and out of the bay (in the reverse direction of the arrow ④ [Figure 6c](#)).

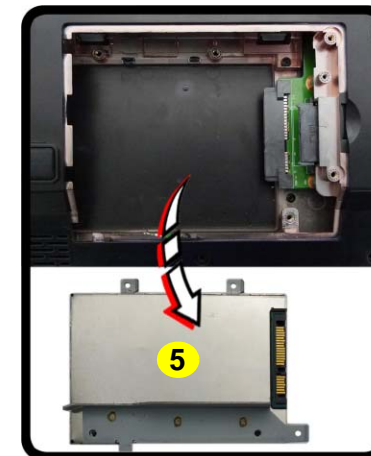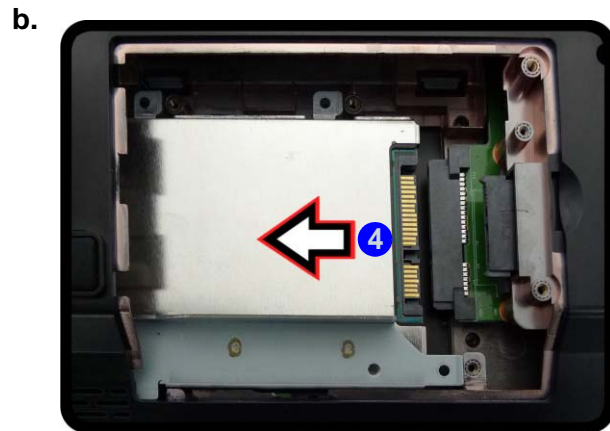


5. Hard Disk Assembly



- 3 Screws

- Remove screws 6 - 9 and the insulation plate 10 (Figure 7d).

d.

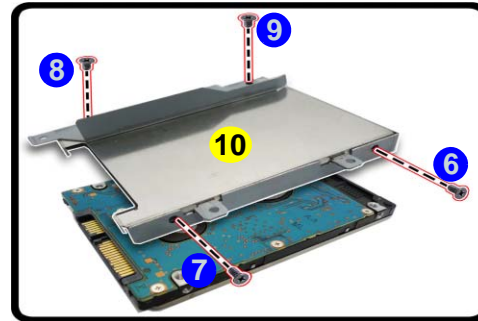

- Reverse the process to install a new disk (make sure you install the insulation plate).
- Slide the HDD assembly into the bay at an angle as illustrated.
- Make sure the insulation plate slides under the HDD bay guide at point 11.
- Slide the assembly in the direction of the arrow 12 and secure the assembly with the screws.

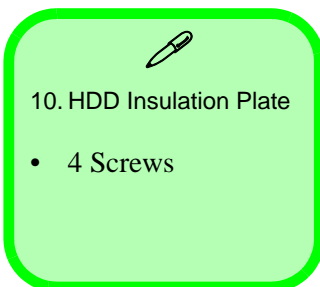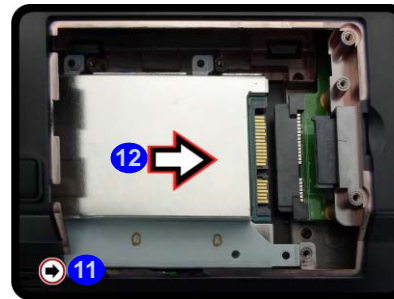

Disassembly

Figure 8
RAM Module Removal

- a. Remove the screws.
- b. Slide the bottom cover until the cover and case indicators are aligned.

Removing the Primary System Memory (RAM)

The computer has **four** memory sockets for 204 pin Small Outline Dual In-line (SO-DIMM) **DDR III (DDR3)** type memory modules (see *“Memory” on page 1 - 2*). The total memory size is automatically detected by the POST routine once you turn on your computer.

Note that **four SO-DIMMs are only supported by Quad-Core CPUs; Dual-Core CPUs support two SO-DIMMs maximum** (see *“Memory” on page 1 - 2* for full details).


Two primary memory sockets are located under component bay cover (the bottom case cover), and two secondary memory sockets are located under the keyboard (not user upgradable). If you are installing only two RAM modules then they should be installed in the primary memory sockets under the component bay cover.

Note that the RAM located under the keyboard is not user upgradable. Contact your service center for more information if you wish to upgrade the memory in the secondary memory sockets.

Memory Upgrade Process

1. Turn **off** the computer, and turn it over, remove the battery (*page 2 - 5*).
2. Remove screws **1 - 4** (*Figure 8a*).
3. Slide the bottom cover until the cover and case indicators **5** are aligned (*Figure 8b*).

a.

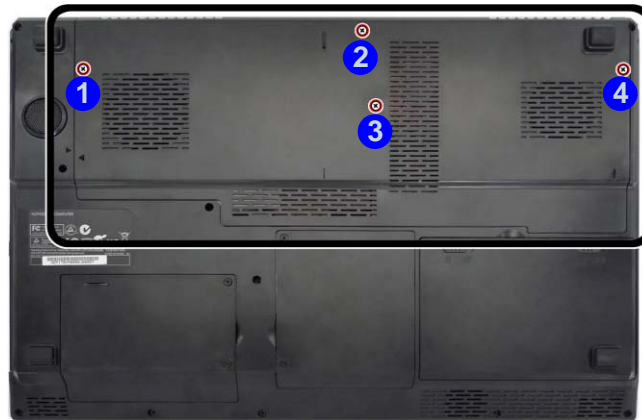

b.



- 4 Screws

4. Lift the component bay cover **6** off the computer case. The modules will be visible at point **7** (*Figure 9c*).
5. Gently pull the two release latches (**8** & **9**) on the sides of the memory socket(s) in the direction indicated below (*Figure 9d*).
6. The RAM module **10** will pop-up, and you can remove it (*Figure 9e*).
7. Pull the latches to release the second module if necessary.
8. Insert a new module holding it at about a 30° angle and fit the connectors firmly into the memory slot.
9. The module's pin alignment will allow it to only fit one way. Make sure the module is seated as far into the slot as it will go. DO NOT FORCE the module; it should fit without much pressure.
10. Press the module in and down towards the mainboard until the slot levers click into place to secure the module.
11. Replace the bay cover and screws.
12. Restart the computer to allow the BIOS to register the new memory configuration as it starts up.

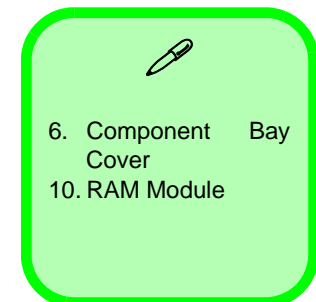
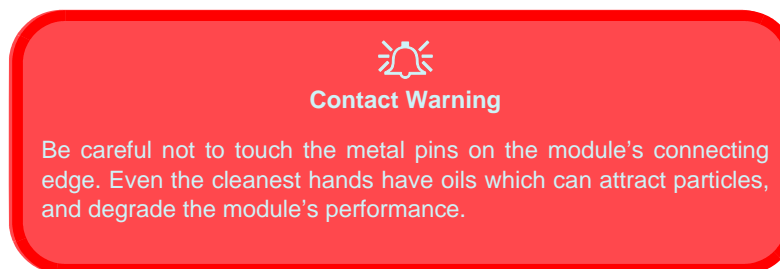
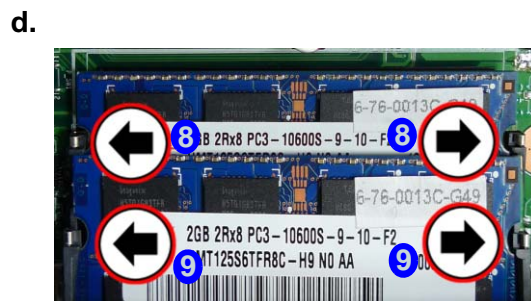
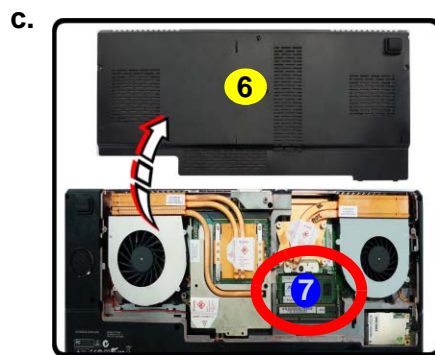


Figure 9
RAM Module Removal (cont'd.)

- c. Lift the component bay cover off the computer case. The modules will be visible at point **7**.
- d. Gently pull the two release latches on the sides of the memory socket(s) in the direction indicated below.
- e. The RAM module will pop-up, and you can remove it.

Disassembly



Figure 10
RAM Module
Removal

- Remove the top cover module.
- Remove the screws.
- Carefully lift the keyboard up, being careful not to bend the keyboard ribbon cable.

Removing the Secondary System Memory (RAM)

Memory Upgrade Process




- Turn **off** the computer, and turn it over, remove the battery ([page 2 - 5](#)) and the component bay cover.
- Remove the top cover module **A** ([Figure 10a](#)).
- Remove screws **1 - 5** ([Figure 10a](#)).
- Carefully lift the keyboard **B** up, being careful not to bend the keyboard ribbon cable **6** ([Figure 10c](#)).

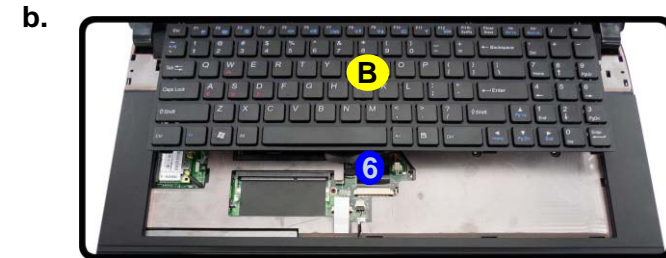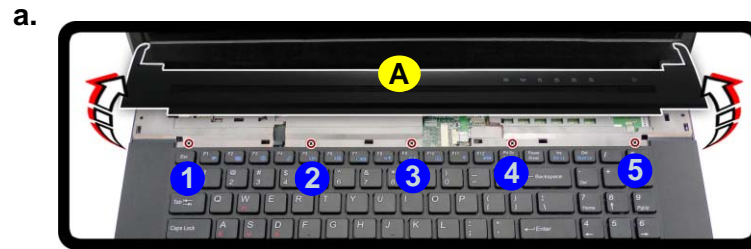


- A. Top Cover Module
- B. Keyboard
- 5 Screws

5. Disconnect the keyboard ribbon cable **6** from the locking collar socket **7** by using a small flat-head screwdriver to pry the locking collar pins **8** away from the base. (*Figure 11e*).
6. Remove the keyboard and the memory sockets **9** & **10** will be visible (*Figure 11f*).
7. Gently pull the two release latches (**11** & **12**) on the sides of the memory socket(s) in the direction indicated below (*Figure 11g*).
8. The RAM module **13** will pop-up, and you can remove it.
9. Pull the latches to release the second module if necessary.
10. Insert a new module holding it at about a 30° angle and fit the connectors firmly into the memory slot.
11. The module's pin alignment will allow it to only fit one way. Make sure the module is seated as far into the slot as it will go. DO NOT FORCE the module; it should fit without much pressure.
12. Press the module in and down towards the mainboard until the slot levers click into place to secure the module.
13. Replace the bay cover and screws.
14. Restart the computer to allow the BIOS to register the new memory configuration as it starts up.

- e. Disconnect the keyboard ribbon cable from the locking collar socket by using a small flat-head screwdriver to pry the locking collar pins away from the base.
- f. Remove the keyboard and the memory sockets will be visible.
- g. Gently pull the two release latches on the sides of the memory socket(s) in the direction indicated below.

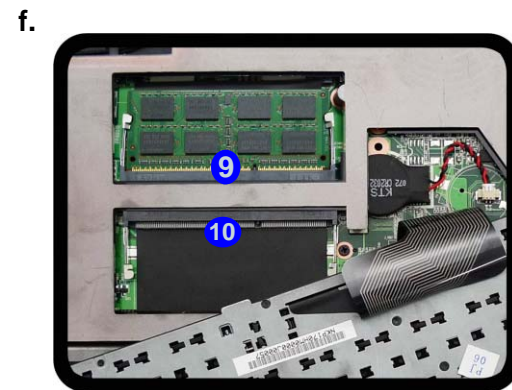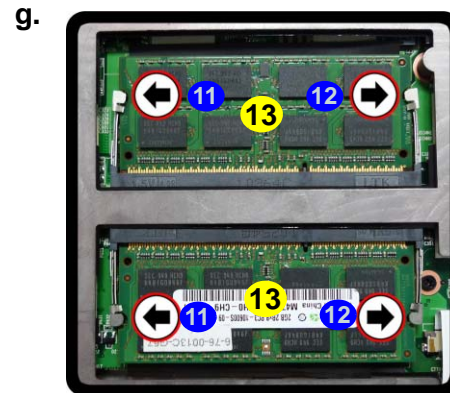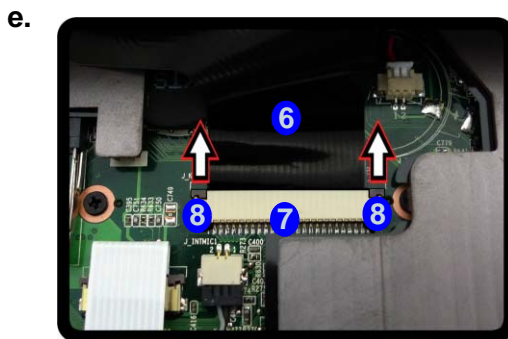


Contact Warning

Be careful not to touch the metal pins on the module's connecting edge. Even the cleanest hands have oils which can attract particles, and degrade the module's performance.



 13. RAM Modules

Figure 11
RAM Module Removal (cont'd.)


Disassembly

Figure 12
Wireless LAN
Module Removal

- The Wireless LAN module will be visible at point ① under the keyboard
- Disconnect the cables and remove the screw.
- The WLAN module will pop up.
- Lift the WLAN module out.

Removing the Wireless LAN Module

- Turn off the computer, remove the battery (page 2 - 5) and the keyboard (page 2 - 10).
- The Wireless LAN module will be visible at point ① under the keyboard (Figure 12a).
- Carefully disconnect cables ② - ③, then remove screw ④ from the module socket (Figure 12b).
- The Wireless LAN module ⑤ will pop-up (Figure 12c).
- Lift the Wireless LAN module (Figure 12d) up and off the computer.

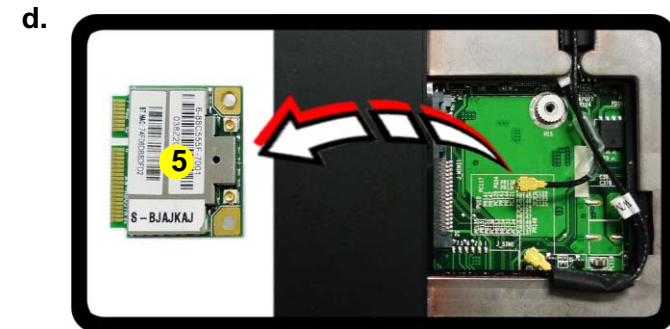


5. WLAN Module

- 1 Screw

Removing and Installing the Processor

Processor Removal Procedure

1. Turn **off** the computer, remove the battery ([page 2 - 5](#)), and component bay cover ([page 2 - 10](#)).
2. Remove screws **1** - **4** from the heat sink unit in the order indicated on the label (i.e screw 4 first through to screw 1 last [Figure 13a](#)).
3. Carefully (it may be hot) remove the heat sink unit **5** ([Figure 13b](#)).

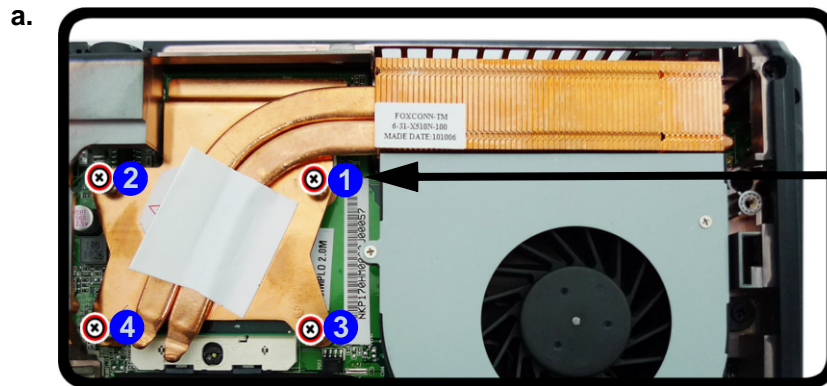

Note: Loosen the screws in the reverse order 4-3-2-1 as indicated on the label.

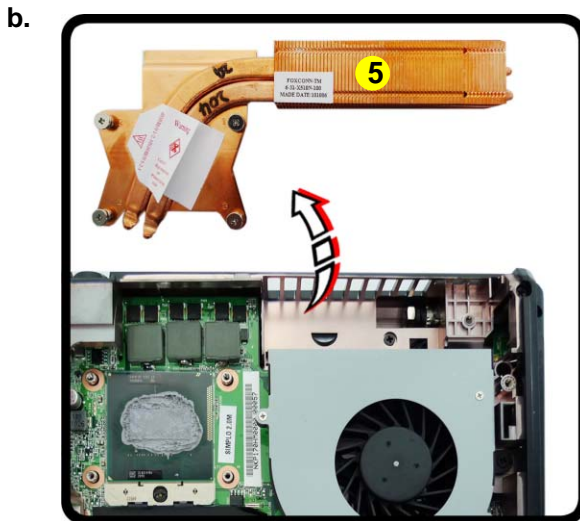




Figure 13
**Processor
Removal
Procedure**

- a. Remove the screws in the correct order.
- b. Carefully remove the heat sink unit.


CPU Warning

In order to prevent damaging the contact pins when removing the CPU, it is necessary to first remove the WLAN module from the computer.




5. Heat Sink Unit

- 4 Screws


Disassembly

Figure 14 Processor Removal (cont'd)

- c. Turn the release latch to unlock the CPU.
- d. Lift the CPU out of the socket.

4. Turn the release latch **6** towards the unlock symbol , to release the CPU (**Figure 14c**).
5. Carefully (it may be hot) lift the CPU **A** up out of the socket (**Figure 14d**).
6. See [page 2 - 19](#) for information on inserting a new CPU.
7. When re-inserting the CPU, pay careful attention to the pin alignment, it will fit only one way (DO NOT FORCE IT!).

c.

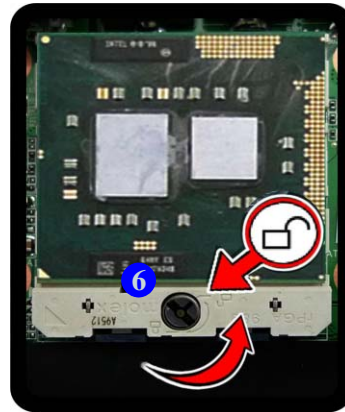


Unlock



Lock

d.

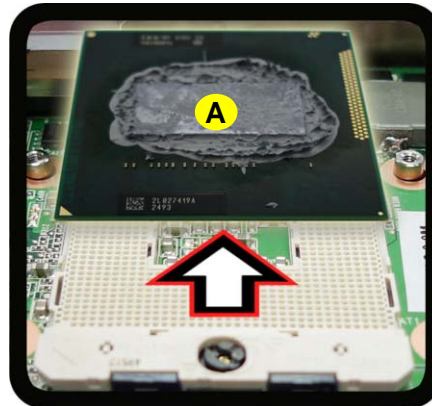

Caution

The heat sink, and CPU area in general, contains parts which are subject to high temperatures. Allow the area time to cool before removing these parts.



A. CPU

Processor Installation Procedure


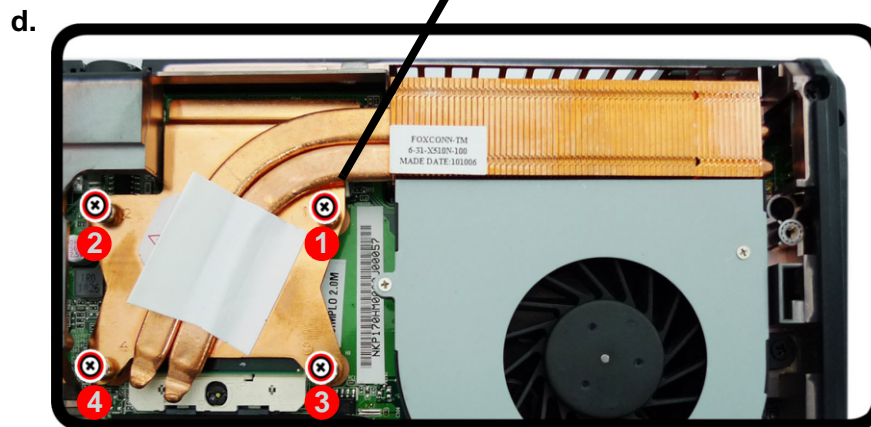
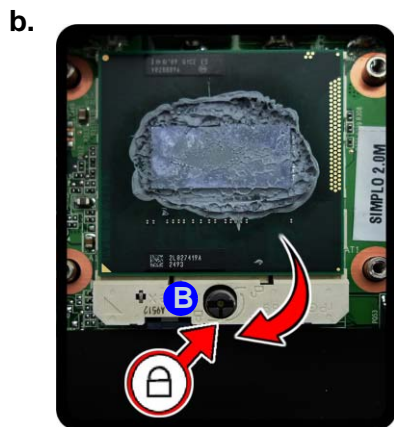
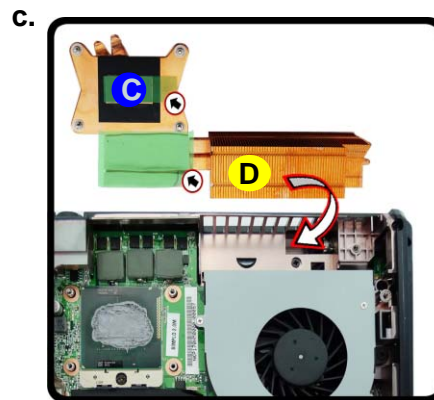
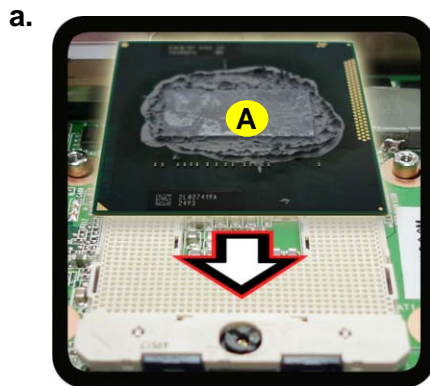
1. Insert the CPU **A**, pay careful attention to the pin alignment (*Figure 15a*), it will fit only one way (DO NOT FORCE IT!), and turn the release latch **B** towards the lock symbol  (*Figure 15b*).
2. **Remove the sticker** **C** (*Figure 15c*) from the heat sink unit.
3. Insert the heat sink unit **D** as indicated in *Figure 15c*.
4. Tighten the CPU heat sink screws in the order **1**, **2**, **3** & **4** (the order as indicated on the label and *Figure 15d*).
5. Replace the CPU fan, component bay cover and tighten the screws (*page 2 - 17*).


Figure 15
Processor Installation

- a. Insert the CPU.
- b. Turn the release latch towards the lock symbol.
- c. Remove the sticker from the heat sink unit and insert the heat sink.
- d. Tighten the screws.



Note:

Tighten the screws in the order 1-2-3-4 as indicated on the label.



A. CPU
D. Heat Sink

- 4 Screws

Disassembly

Figure 16

Video Card
Removal Procedure

- Remove the screws in the correct order.
- Carefully remove the heat sink units.
- Remove the video card screws. The video card will pop up.
- Remove the video card.



Caution

The heat sink, and video card area in general, contains parts which are subject to high temperatures. Allow the area time to cool before removing these parts.



8 & 9. Heat Sink Units
12. Video Card


- 9 Screws

Removing and Installing the Video Card



Video Card Removal Procedure

- Turn off the computer, turn it over and remove the battery ([page 2 - 5](#)) and component cover ([page 2 - 10](#)).
- Remove screws **1** - **7** from the heat sink unit in the order indicated on the label (i.e screw **7** first through to screw **1** last) ([Figure 16a](#)).
- Carefully (**they may be hot**) remove the heat sink units **8** & **9** ([Figure 16b](#)).
- Remove screws **10** & **11** from the video card and the video card **12** will pop up ([Figure 16c](#)).
- Remove the video card **12** ([Figure 16d](#)).

a.

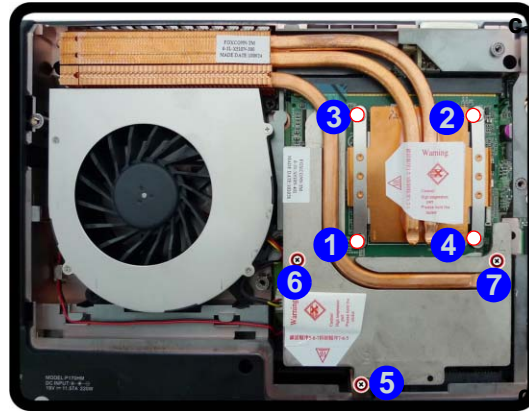



c.

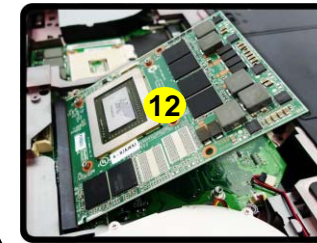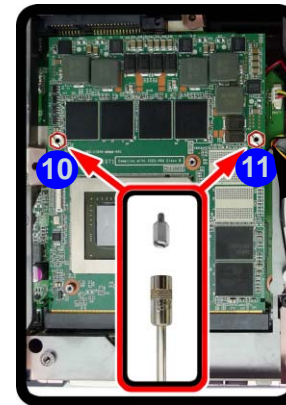

Note:

Please use a flat head screwdriver to remove screws **10** & **11**.

b.

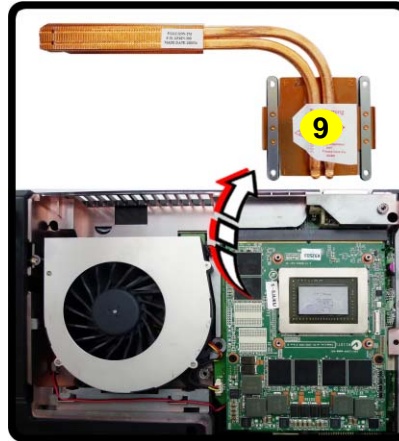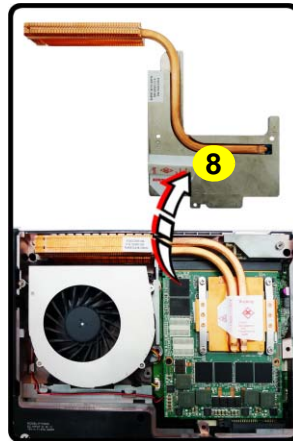

d.



Heat Sink Screw Removal
and Insertion

Remove the screws from the heat sink in the order indicated here: 7-6-5-4-3-2-1.

When tightening the screws, make sure that they are tightened in the order: 1-2-3-4-5-6-7.

Installing a New Video Card

1. Prepare to fit the video card **12** into the slot by holding it at about a 30° angle (*Figure 17e*).
2. The card needs to be fully into the slot, and the video card and socket have a guide-key and pin which align to allow the card to fit securely (*Figure 17f*).
3. Fit the connectors firmly into the socket, straight and evenly.

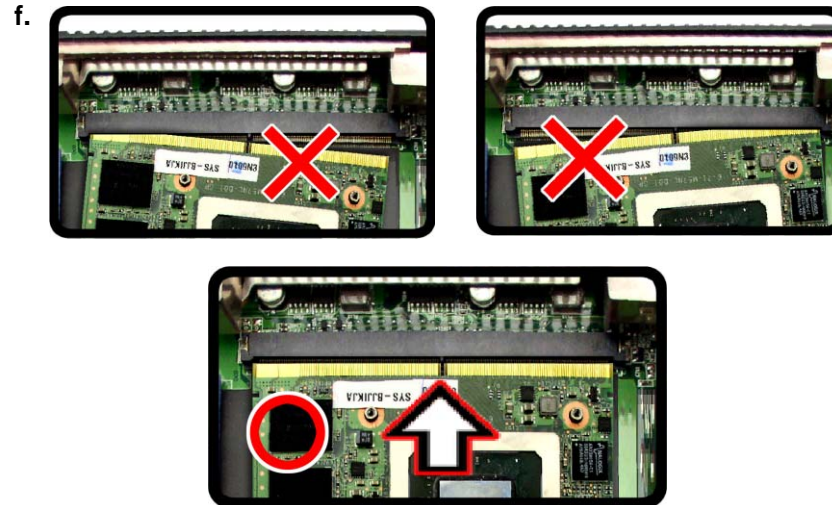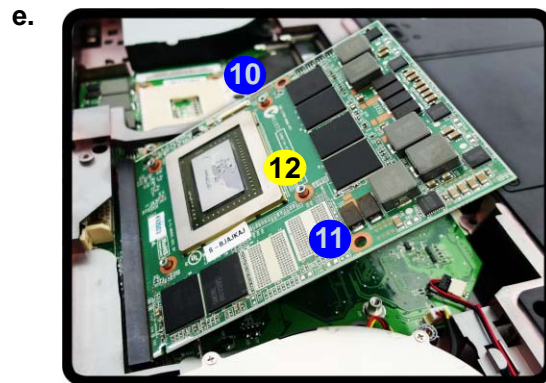

4. DO NOT attempt to push one end of the card in ahead of the other.
5. The card's pin alignment will allow it to only fit one way. **Make sure the module is seated as far into the socket as it will go** (none of the gold colored contact should be showing). DO NOT FORCE the card; it should fit without much pressure.
6. Secure the card with screws **10** & **11** (*Figure 17 on page 2 - 21*).
7. Place the heat sink back on the card, and secure the screws in the order indicated in *Figure 17 on page 2 - 21*.
8. Attach the video card fan and secure with the screws as indicated in *Figure 16 on page 2 - 20*.
9. Reinsert the component bay cover, and secure with the screws as indicated in *Figure 10 on page 2 - 14*.

Figure 17
Installing a New Video Card

- e. Insert the video card at a 30 degree angle.
- f. Fit the connectors straight and even.



Caution

The heat sink, and video card area in general, contains parts which are subject to high temperatures. Allow the area time to cool before removing these parts.



12. Video Card

- 2 Screws


Disassembly

Figure 18
Microphone Removal

- Remove the screws.
- Lift the top case up, keeping it level (do not tilt it).
- Disconnect the microphone cable.
- Remove the microphone.

Removing the Microphone

- Turn **off** the computer, and remove the battery ([page 2 - 5](#)), component bay cover ([page 2 - 10](#)), processor ([page 2 - 17](#)), hard disk ([page 2 - 6](#)) ([page 2 - 10](#)), optical device ([page 2 - 9](#)), and video card ([page 2 - 20](#)).
- Remove screws ① - ⑱ and carefully push the bottom of the top case at point ⑳ ([Figure 18a](#)).
- Lift the top case ㉑ up, keeping it level (do not tilt it) [Figure 18b](#).
- Disconnect the microphone cable ㉒ ([Figure 18c](#)).
- Remove the microphone ㉓ ([Figure 18d](#)).

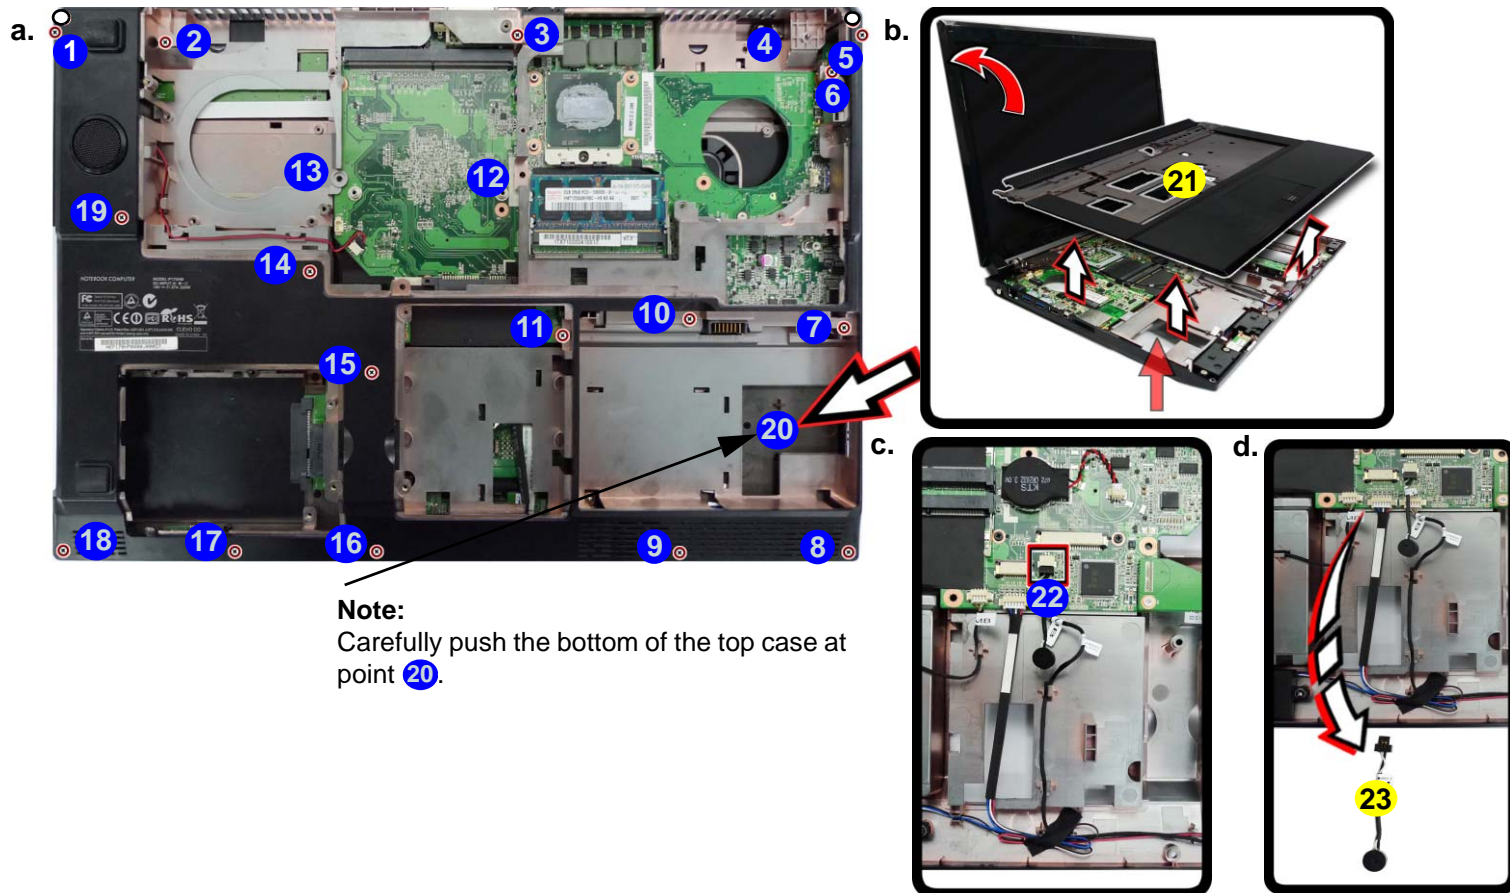

21. Top Case
23. Microphone

- 19 Screws

Appendix A: Part Lists

This appendix breaks down the *PI70EM* series notebook's construction into a series of illustrations. The component part numbers are indicated in the tables opposite the drawings.

Note: This section indicates the *manufacturer's* part numbers. Your organization may use a different system, so be sure to cross-check any relevant documentation.

Note: Some assemblies may have parts in common (especially screws). However, the part lists DO NOT indicate the total number of duplicated parts used.

Note: Be sure to check any update notices. The parts shown in these illustrations are appropriate for the system at the time of publication. Over the product life, some parts may be improved or re-configured, resulting in *new* part numbers.

Part List Illustration Location

The following table indicates where to find the appropriate part list illustration.

Table A-1
**Part List Illustration
Location**

Parts	
Top with Fingerprint	<i>page A - 3</i>
Top without Fingerprint	<i>page A - 4</i>
Bottom	<i>page A - 5</i>
LCD	<i>page A - 6</i>
HDD	<i>page A - 7</i>
COMBO	<i>page A - 8</i>
DVD-Dual Drive	<i>page A - 9</i>

Top with Fingerprint


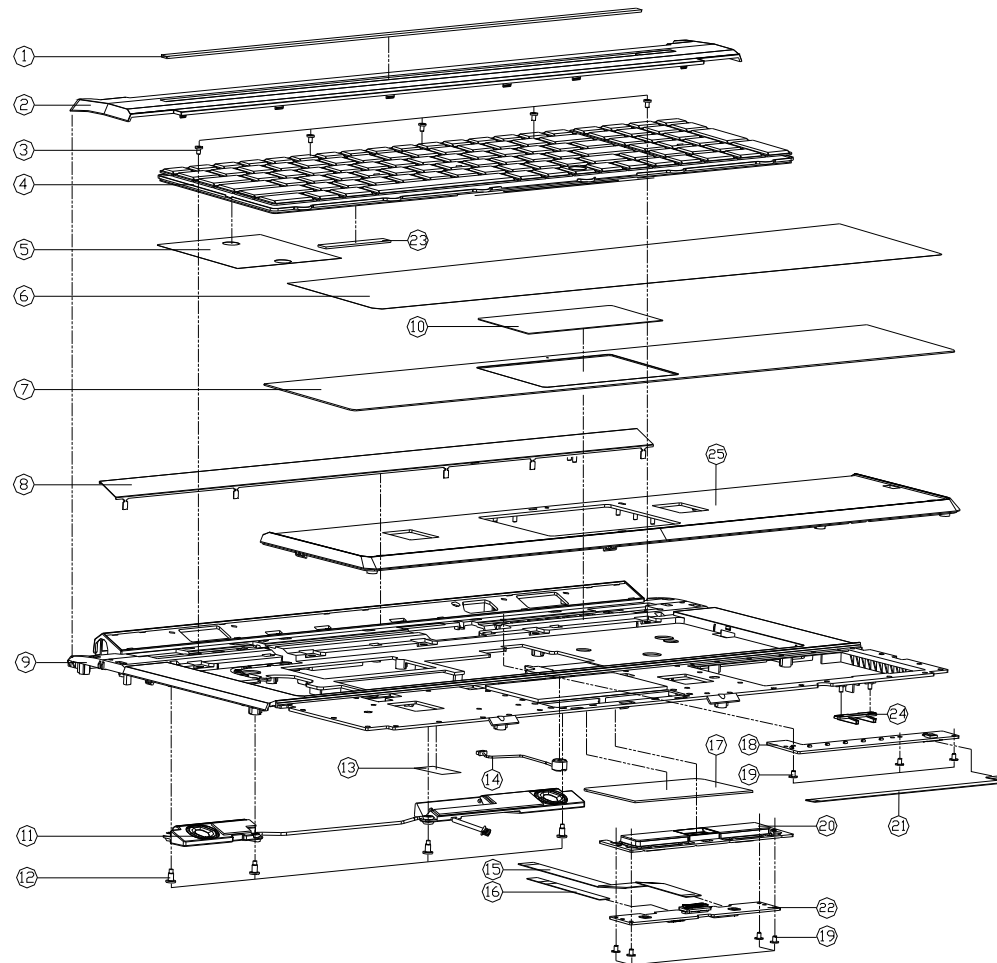


Figure A - 1
Top with
Fingerprint

ITEM	PART NAME	PART NO	REMARK
1	TOP COSMETIC PLATE PMMA P170HM	6-42-P1702-022	
2	CENTER COVER MODULE (KAPAK PRINT) (M) (D) P170EM	6-42-P17E2-502-N	
3	SCREW METAL KI NI ICT NY (100-#4.5,DT-0.4)	6-35-B1120-3RE	
4	K/8 USA VIBRISAKI P270M BLACK BACKLIGHT WITH GAMING	6-80-P2700-010-3	
5	KEYBOARD MYLAR (75*70*0.1) P170EM	6-40-P17E2-010	
6	TOP CASE PROTECT NYLARPET13891S P170HM	6-40-P1702-020	
7	AL PLATE FOR PALM REST(PV12) P170HM	6-33-P1702-021	
8	TOP SPEAKER MESH SUS304 P170EM	6-33-P17E2-010	
9	TOP CASE MODULE (MP11) P170EM	6-39-P17E2-012	
10	TP MYLAR P170HM	6-40-P1702-030	
11	SPK CABLE FRONT R/L SH20 152 20W K1 (E0998A) P170EM	6-23-SP15E-0S1	
12	SCREW M2*6.2L NI ICT NY FOR SPEAKER	6-35-Z1120-6R2	
13	AL FOIL (40*15*0.25T) P170HM	6-47-P1702-010	
14	WIRE (M) (S) (C) (S) (T) (L) (R) (N) (Y) (Z) (V) (C) (H) (G) (D) (L) (R) (N) (K) (I) (T) (E) (M) (P) (I) (1) (7) (0) (E) (M)	6-23-ER130-010-1	
15	FFC CABLE FOR CLOCK IN TO W/8 SPIN PITCH=4 L=60MM ODD P170M	6-43-P1700-022	
16	FFC CABLE FOR TOUCH PAD 6PIN C4500	6-43-C4502-010	
17	TOUCH PAD SYNAPTICS TM-0146-003 MULTI-GE5	6-49-C4802-010	
18	LED BOARD V3.0 P170EM	6-77-P17E4-D03	
19	SCREW METAL KI NI ICT NY (100-#4.0,DT-0.5)	6-35-B1120-4RA	
20	CLICK MODULE W-FP (MP11) P170EM	6-42-P17E2-202	
21	FFC CABLE FOR POWER IN TO W/8 SPIN PITCH=4 L=60MM ODD P170M	6-43-P1700-012	
22	CLOCK BOARD V3.0 FINGERPRINT BOARD V2.0 ASSY P170EM	6-77-P17EA-N03	
23	SPONGE CR 45*6*0.5T P170EM	6-47-0019A-007	
24	FRONT LED LENS ABS(PA75B) P170HM	6-42-P1702-030	
25	PALM REST COVER (KAPAK) (UV) (MP11) P170EM	6-42-P17E2-042-1	


Top without Fingerprint

Figure A - 2
Top without
Fingerprint

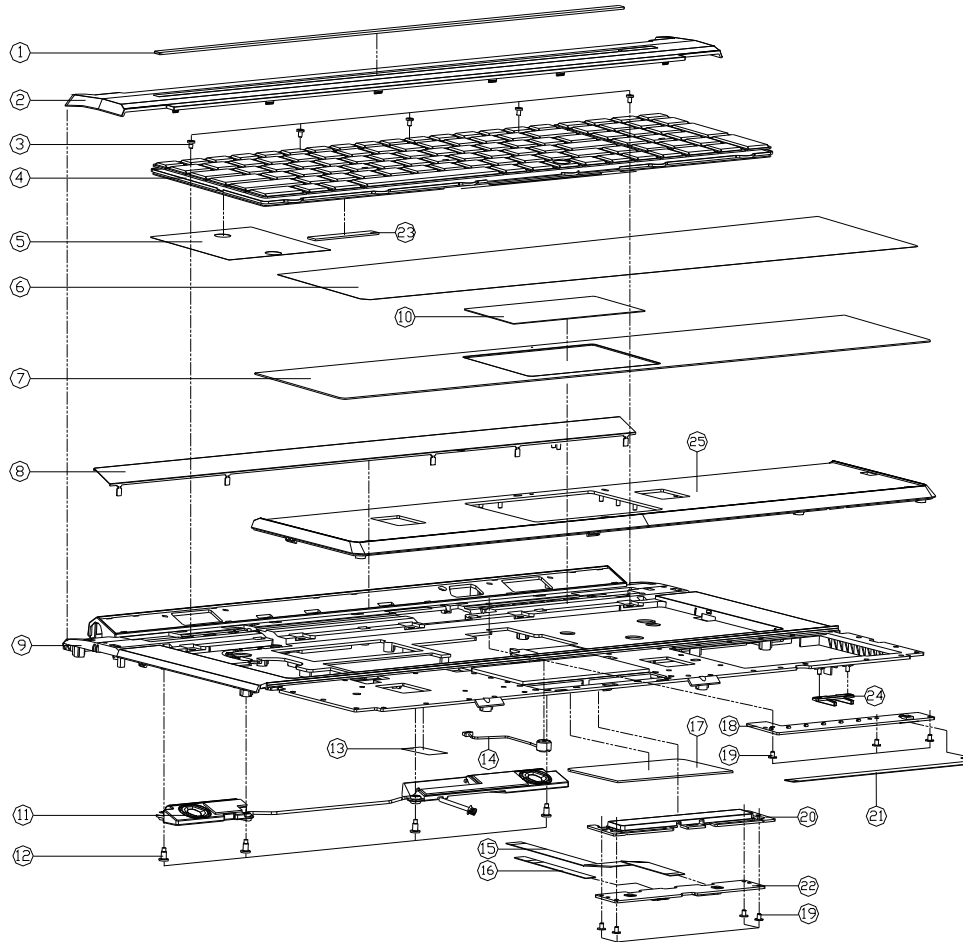

ITEM	PART NAME	PART NO	REMARK
1	TOP COSMETIC PLATE PHMA P170HM	6-42-P1702-022	
2	CENTER COVER MODULE KAPOK PRINT ONYX ICNO P170EM	6-42-P17E2-502-N	
3	SCREW M2*3L KI NI ICT NY (D0=045,D1=04)	6-35-B1120-3RE	
4	K/8 USA V32P0AM1 P270M BLACK BACKLIGHT WITH GAMING	6-80-P2700-010-3	
5	KEYBOARD MYLAR (75*70*0.1) P170EM	6-40-P17E2-010	
6	TOP CASE PROTECT MYLAR(PET13061S) P170HM	6-40-P1702-020	
7	AL PLATE FOR PALM REST(PV12) P170HM	6-33-P1702-021	
8	TOP SPEAKER MESH SUS304 P170EM	6-33-P17E2-010	
9	TOP CASE MODULE (MPI1) P170EM	6-39-P17E2-012	
10	TP MYLAR P170HM	6-40-P1702-030	
11	SPEAKER FRONT PL SH08 152 22W 41 E00180A P170EM	6-23-5P15E-0S1	
12	SCREW M2*6.2L NI ICT NY FOR SPEAKER	6-35-Z1120-6R2	
13	AL FOIL (40*15*0.25) P170HM	6-47-P1702-010	
14	MC 000300025-TL-0 2V-1W 22K 1/4W(0.001) L-4MM 170EM	6-23-ER130-010-1	
15	FFC CABLE FOR CLICK BU TO M3 15PIN P170-H L-62MM 010 P170EM	6-43-P1700-022	
16	FFC CABLE FOR TOUCH PAD 6PIN C4500	6-43-C4502-010	
17	TOUCH PAD SYNAPTICS TM-01146-003 MULTI-GE5	6-49-C4802-010	
18	LED BOARD V3.0 P170EM	6-77-P17E4-003	
19	SCREW M2*4L KI NI ICT NY (D0=040,D1=05)	6-35-B1120-4RA	
20	CLICK BUTTON WD-FP MODULE P170HM	6-42-P1702-102	
21	FFC CABLE FOR PINGER BU TO M3 15PIN P170-H L-62MM 010 P170EM	6-43-P1700-012	
22	CLICK BOARD V4.0 (W/D FP) P170EM	6-77-P17E2-004-1	
23	SPONGE CR 45*6*0.5T P170EM	6-47-0019A-007	
24	FRONT LED LENS ABS(PA758) P170HM	6-42-P1702-030	
25	PALM REST COVER (KAPOK UVXMP1) P170EM	6-42-P17E2-042-1	

Bottom

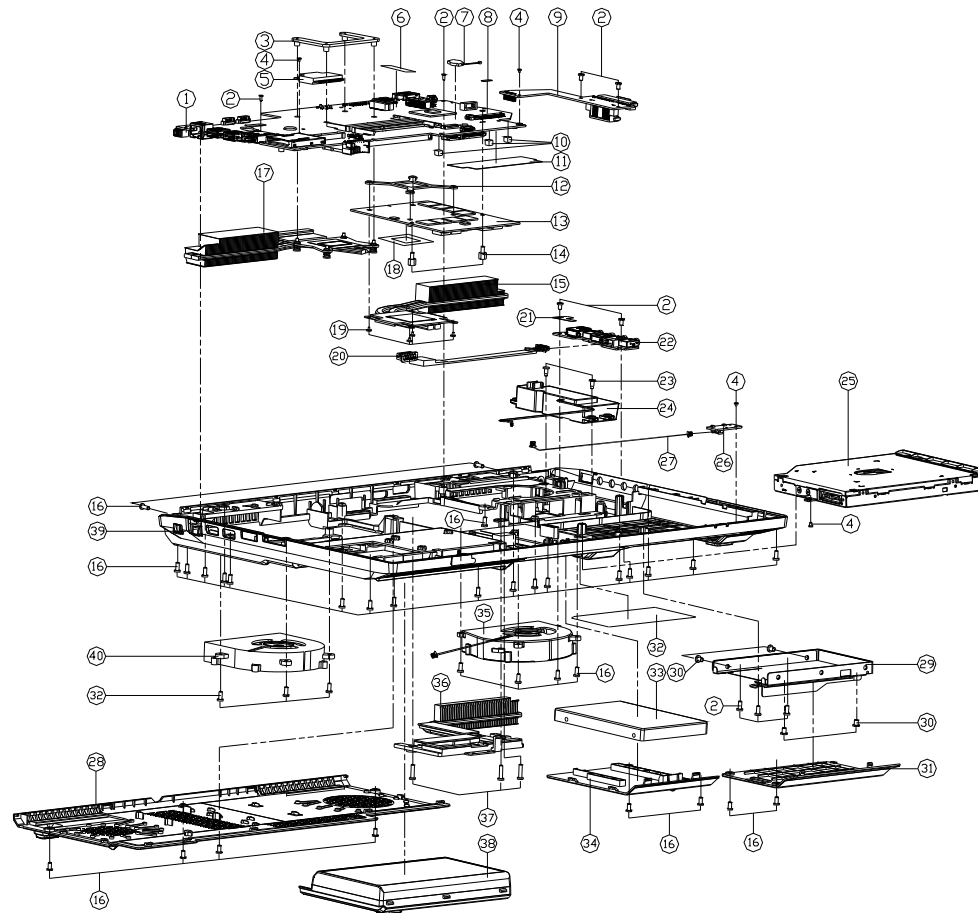


ITEM	PART NAME	PART NO	REMARK
1	MAIN BOARD V5.0A P170EM	6-77-P17E0-D05A	
2	SCREW M2.5*4L KI BK/D ICT NY	6-35-B4125-4RA	
3	CPU SUPPORT BRACKET SECC T15 P150HM	6-33-X510S-011	
4	SCREW M2*3L KI NI ICT NY (00-045,01-04)	6-35-B1120-3RE	
5	VLAN BT COMBO CASTLENET R188RCEBT-095	6-88-M77C2-4220	(OPTION)
5	VLAN BT COMBO CASTLENET R188RCEBT-095	6-88-C555F-5300	(OPTION)
5	VLAN BT COMBO ADDRESS AV-NBS5TH R8211G	6-88-C555F-7001	(OPTION)
5	VLAN BT COMBO ADDRESS AV-NBS5TH R8211G	6-88-P17EF-4200	(OPTION)
5	VLAN BT COMBO ADDRESS AV-NBS5TH R8211G	6-88-W255F-4200	(OPTION)
6	TAPE MYLAR (C)MYLAR M550J	6-40-M55J2-030	
7	BAT 2000 3V 220MH V/CABLE 55MM B02R322V5	6-23-P2015-TC0	
8	M/B KEYBOARD MYLAR PET M810L	6-40-M810S-011	
9	HDD/ODD BOARD V2.0 P170EM	6-77-P17EJ-D02	
10	VGA SUPPORT RUBBER & SILICONE P150HM	6-47-X510S-010	
11	MYLAR GASBARNETS FOR THE SATA AND COMBO CPU P150HM	6-40-X510S-010	
12	VGA SUPPORTER SUS430 X7200	6-33-X720S-040	
13	HEAT SINK FOR CPU P170EM	6-77-X510L-101-2	
13	HEAT SINK FOR CPU P170EM	6-77-X510L-201-2	
13	HEAT SINK FOR CPU P170EM	6-77-X510L-101-3	
13	HEAT SINK FOR CPU P170EM	6-77-X510L-201-3	
14	SCREW M2.5*4L T15 P150HM ICT NY FOR VGA CARD	6-35-Z1125-4RB-1	
15	GPU/IO HEATSINK MODULE CHANGE P150HM	6-31-X510N-303	FOR CN2E-GTX
16	SCREW M2.5*6L K BZ ICT NY	6-35-B2125-6RA	
17	CPU HEATSINK MODULE/CPU FAN FOR P170HM	6-31-P170N-101	
18	MYLAR VGA CHIP NY P270WM	6-40-P270S-030	
19	SCREW M1.6*3.5L K1+L2 D+4S BZ ICT NY	6-35-B2116-3RS	
20	WIRE CABLE FOR AUDIO BOARD TO MB ZPP P170HM	6-43-P1700-032-1	
21	AUDIO MYLAR FRB3 P150HM	6-40-X510S-030	
22	AUDIO BOARD V2.0 P150EM	6-77-P15E8-D02	
23	SCREW M2*6.2L NI ICT NY FOR SPEAKER	6-35-Z1120-6R2	
24	SPK/CABLE SUBWOOFER 26MM 25W AT PRESBA P150EM	6-23-SP15E-0W1	
25	W/O ODD ASS'Y P170HM	6-79-P170HM02-000	
25	SATA DVD SUPER MULTI ASS'Y (OPTION)	6-79-P170M00-010	
25	SATA BLU-RAY COMBO ASS'Y (OPTION)	6-79-P170M0W-010	
25	SATA BLU-RAY WRITER ASS'Y (OPTION)	6-79-P170M0W-011	
26	LED BOARD V2.0 P150EM	6-77-P15E4-D02	
27	WIRE CABLE FOR LED BOARD TO MB SP P170HM	6-43-P1700-041	
28	CPU COVER MODULE (MODIFY RIB) P170HM	6-42-P1708-106	
29	SECOND HDD BRACKET SEC 081-SP1E (3.5" INCH) P170HM	6-33-P170J-013	
30	SCREW M3*4L KI NI ICT NY	6-35-B1130-4RB	
31	SECOND HDD COVER SABC C7230P-TWICE P170HM	6-42-P170J-021	
32	PRODUCT LABEL FOR P170EM/CHANGE ADHESIVE	6-45-P170EM03-012	
33	W/O HDD ASS'Y P170HM	6-79-P170HM0J-020	
33	W/O HDD ASS'Y P170HM	6-79-P170HM0J-010	
33	W/O 2ND HDD ASS'Y P170HM	6-79-P170HM0J-030	
33	W/O 2ND HDD ASS'Y P170HM	6-79-P170HM0J-040	
34	MAIN HDD COVER SABC C7230P-TWICE (RIB) MODIFY RIB P170HM	6-42-P170J-013	
35	HEAT SINK BRACKET FOR CPU P170EM	6-31-X720S-101	
36	VRAM/IOE-GSD HEATSINK MODULE P150HM	6-31-P15EN-300	
37	SCREW M2*3L K1+L2 D+4S BZ ICT NY	6-35-B6120-5R0	
38	HEAT SINK BRACKET FOR CPU P170EM	6-87-X710S-4J72	(OPTION)
38	HEAT SINK BRACKET FOR CPU P170EM	6-87-X710S-4272	(OPTION)
39	BOTTOM CASE MODULE (MPL) P170EM	6-39-P17E3-012	
40	WIRE CABLE FOR LED BOARD TO MB ZPP P170HM	6-23-AX510-012	

Figure A - 3
Bottom

A. Part Lists


LCD

Figure A - 4
LCD

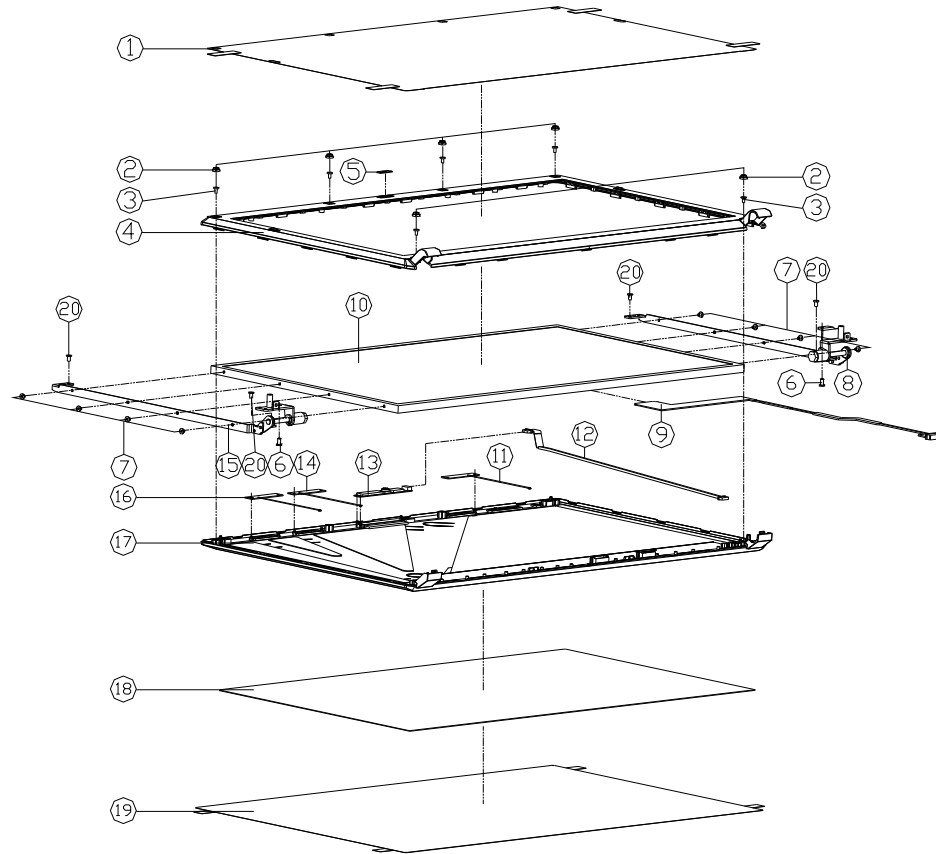

ITEM	PART NAME	PART NO	REMARK
1	FRONT PROTECTION NYLAR (Ø11.3Ø8.95) P170M	6-40-P1701-010	
2	LCD FRONT COVER UP RUBBER P170M	6-47-P1701-042	
3	SCREW M2.5xL K11T+0.8 B-40 BK/Z ICT NY	6-35-B6120-5R0	
4	LCD FRONT COVER MODULE CHAMEL SUE RUBBERP170M	6-39-P1701-013	
5	CCD LENS PMMA P170HM	6-42-P1701-010	
5	W/D CCD LENS PMMA P170EM	6-42-P17E1-010	
6	SCREW M2.5x6L K BZ ICT NY	6-35-B2125-6RA	
7	SCREW M2xL KI NI ICT NY (Ø0+0.5,DT+0.4)	6-35-B1120-3RE	
8	LCD HINGE R SECC (PVT1) P170EM	6-33-P17E1-0R1	
9	WIRE CABLE FOR LED TO W/ALU/PEX CONDUCTOR P170M	6-43-P1701-012-3H	
10	LCD 17.3" FHD CHINEE A70304E-L11 (LED) 6.0 MM	6-50-NB260-D01	
10	LCD 17.3" FHD CHINEE A70304E-L11 (LED) 6.0 MM	6-50-NB260-D00	
10	LCD 17.3" FHD LG LPT70E1-F183 QLED (40/60/80) 6.0MM	6-50-NB260-L05	
11	GT WIRE PCB HUBMM 2.6G/350K/5G L+H0.5MM P170M	6-23-7P170-021	
12	WIRE CABLE FOR CCD 5P P170HM (GHL)	6-43-P170T-010	
13	WIRE CABLE FROM THE PROCESSOR TO THE CAMERA P170M	6-88-P17EC-4900	
14	ALUMI NYLAR VET W/ PEI HUBMM 2.6G/350K/5G L+H0.5MM P170M	6-23-7P170-031	
15	LCD HINGE L SECC (PVT1) P170EM	6-33-P17E1-0L1	
16	ALUMI NYLAR VET W/ PEI HUBMM 2.6G/350K/5G L+H0.5MM P170M	6-23-7P170-011	
17	LCD BACK COVER MODULE QUVA P170HM (ØAPD0)	6-39-P1701-023-1	
18	LCD ALUMINIUM PLATE P170HM	6-33-P1701-031	
19	BACK PROTECTION NYLAR (Ø8.25-Ø8.95) P170M	6-40-P1701-020	
20	SCREW M2.5x4L KI BK/D ICT NY	6-35-B4125-4RA	

HDD

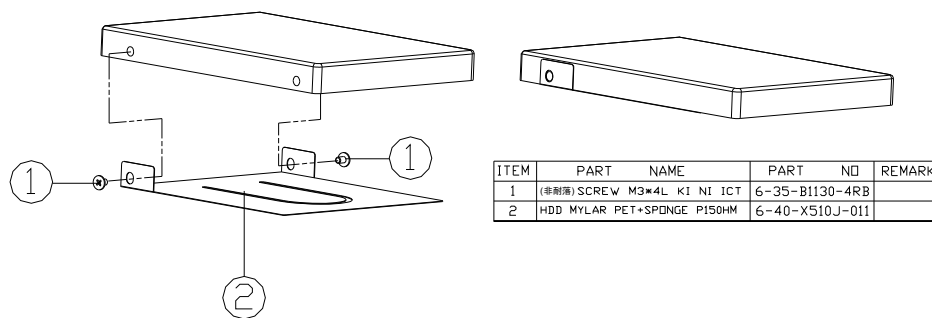


ITEM	PART NAME	PART NO	REMARK
1	(非耐滑)SCREW M3*4L KI NI ICT	6-35-B1130-4RB	
2	HDD MYLAR PET+SPONGE P150HM	6-40-X510J-011	

Figure A - 5
HDD


COMBO

Figure A - 6
COMBO

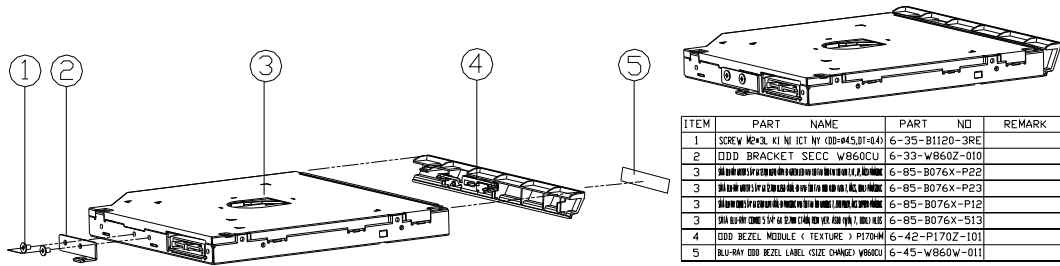

ITEM	PART NAME	PART NO	REMARK
1	SCREW M4x3. KI NE ICT NY (00=845,01=84)	6-35-B1120-3RE	
2	DDD BRACKET SECC W860CU	6-33-W860Z-010	
3	SHU BAY COMB'S I/F AT 2MM (1MM) FOR DVD-RW, DVD-R, DVD-R DL, DVD-R DL, DVD-R DL, DVD-R DL	6-85-B076X-P22	
3	SHU BAY COMB'S I/F AT 2MM (1MM) FOR DVD-RW, DVD-R, DVD-R DL, DVD-R DL, DVD-R DL, DVD-R DL	6-85-B076X-P12	
3	SHU BAY COMB'S I/F AT 2MM (1MM) FOR DVD-RW, DVD-R, DVD-R DL, DVD-R DL, DVD-R DL, DVD-R DL	6-85-B076X-S12	
4	DDD BEZEL MODULE (TEXTURE) P1704H	6-42-P170Z-101	
5	BLU-RAY DDD BEZEL LABEL (SIZE CHANGE) W860U	6-45-W860W-011	

DVD-Dual Drive

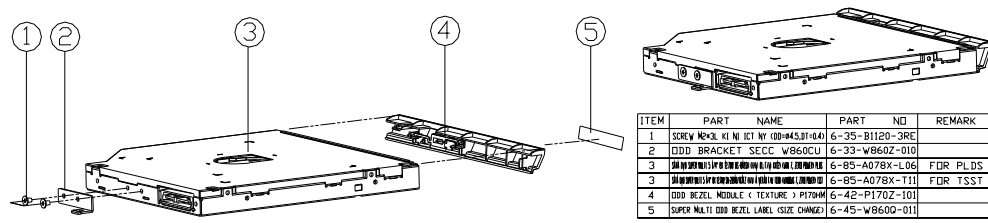

ITEM	PART NAME	PART NO	REMARK
1	SCREW NPK3. X1.5 (1) NY 00045.01-04	6-35-B1120-3RE	
2	DDD BRACKET SECC WB60CU	6-33-WB60Z-010	
3	DDD BEZEL MODULE (TEXTURE) P170W	6-85-A078X-L06	FOR PLDS
4	DDD BEZEL MODULE (TEXTURE) P170W	6-85-A078X-T11	FOR TSST
5	SUPER MULTI DDD BEZEL LABEL (SIZE CHANGE)	6-42-P170Z-101	

Figure A - 7
DVD-Dual Drive

Appendix B: Schematic Diagrams

This appendix has circuit diagrams of the *PI70EM* notebook's PCB's. The following table indicates where to find the appropriate schematic diagram.

Diagram - Page	Diagram - Page	Diagram - Page
<i>System Block Diagram - Page B - 2</i>	<i>PCH3/9 - DMI, FDI, PWRGD - Page B - 23</i>	<i>Power 1.5V/VTT_MEM - Page B - 44</i>
<i>TPM - Page B - 3</i>	<i>PCH 4/9 - LVDS, DDI, CRT - Page B - 24</i>	<i>Power IV, 1.8VS - Page B - 45</i>
<i>Processor 1/7 - Page B - 4</i>	<i>PCH 5/9 - PCI, USB, RSVD - Page B - 25</i>	<i>Power V-Core 1 - Page B - 46</i>
<i>Processor 2/7 - Page B - 5</i>	<i>PCH 6/9 - GPIO, CPU - Page B - 26</i>	<i>Power V-Core 2 - Page B - 47</i>
<i>Processor 3/7 - Page B - 6</i>	<i>PCH 7/9 - Power - Page B - 27</i>	<i>AC_In, Charger - Page B - 48</i>
<i>Processor 4/7 - Page B - 7</i>	<i>PCH 8/9 - Power - Page B - 28</i>	<i>Power 0.85VS - Page B - 49</i>
<i>Processor 5/7 - Page B - 8</i>	<i>PCH 9/9 - GND - Page B - 29</i>	<i>Audio Board - Page B - 50</i>
<i>Processor 6/7 - Page B - 9</i>	<i>USB+eSATA, USB Charging - Page B - 30</i>	<i>PI50 ODD Board - Page B - 51</i>
<i>Processor 7/7 - Page B - 10</i>	<i>USB 2.0, CCD, Mini PCIE, LID - Page B - 31</i>	<i>PI50 Click Board - Page B - 52</i>
<i>DDRIII CHA SO-DIMM_0 - Page B - 11</i>	<i>LED, Hotkey, LID SW, Fan - Page B - 32</i>	<i>PI50 LED 1 Board - Page B - 53</i>
<i>DDRIII CHA SO-DIMM_1 - Page B - 12</i>	<i>RJ 45 - Page B - 33</i>	<i>PI50 LED 2 Board - Page B - 54</i>
<i>DDRIII CHB SO-DIMM_0 - Page B - 13</i>	<i>Codec Realtek ALC892 - Page B - 34</i>	<i>PI50 LED 3 Board - Page B - 55</i>
<i>DDRIII CHB SO-DIMM_1 - Page B - 14</i>	<i>APA2607-TPA2008D2 - Page B - 35</i>	<i>PI70 HDD & ODD Board - Page B - 56</i>
<i>MXM PCI-E - Page B - 15</i>	<i>KBC-ITE IT8518E - Page B - 36</i>	<i>PI70 LED Board - Page B - 57</i>
<i>Panel, Inverter, CRT - Page B - 16</i>	<i>Backlight Keyboard - Page B - 37</i>	<i>PI70 Click Board - Page B - 58</i>
<i>1394_JMB380C - Page B - 17</i>	<i>mSATA, FAN, TP, FP, MULTI-CON - Page B - 38</i>	<i>PI70 Fingerprint Board - Page B - 59</i>
<i>DVI - Page B - 18</i>	<i>Card Reader RTL8411 - Page B - 39</i>	<i>PI70 Fingerprint Board - Page B - 59</i>
<i>Display Port - Page B - 19</i>	<i>USB 3.0 - Page B - 40</i>	<i>PI50 HDD Board - Page B - 60</i>
<i>HDMI - Page B - 20</i>	<i>VDD3, VDD5 - Page B - 41</i>	<i>PI50 LED Board_L - Page B - 61</i>
<i>PCH 1/9 - RTC, HDA, SATA - Page B - 21</i>	<i>5VS, 3.3VS, 1.5VS - Page B - 42</i>	<i>PI50 LED Board_R - Page B - 62</i>
<i>PCH 2/9 - PCIE, SMBUS, CLK - Page B - 22</i>	<i>Power 1.05VS - Page B - 43</i>	<i>Power on Sequence - Page B - 63</i>

Table B - 1
Schematic
Diagrams




Version Note

The schematic diagrams in this chapter are based upon version 6-7P-P15EE-002. If your mainboard (or other boards) are a later version, please check with the Service Center for updated diagrams (if required).

System Block Diagram


Sheet 1 of 61
System Block
Diagram

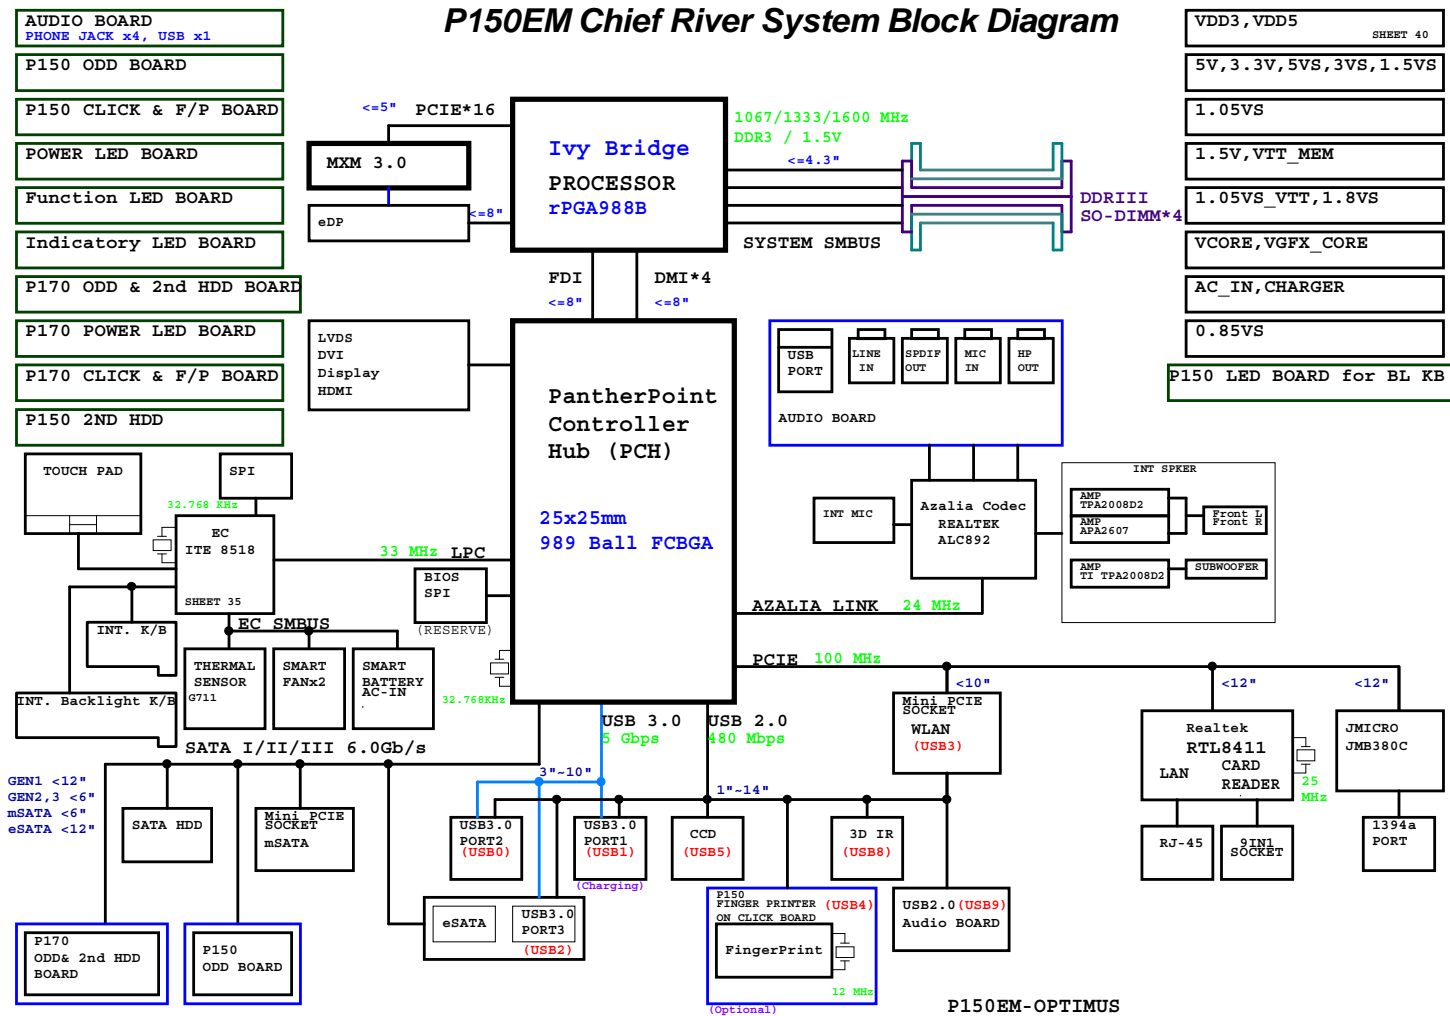

TPM

TPM 1.2

TPM Function 接続図

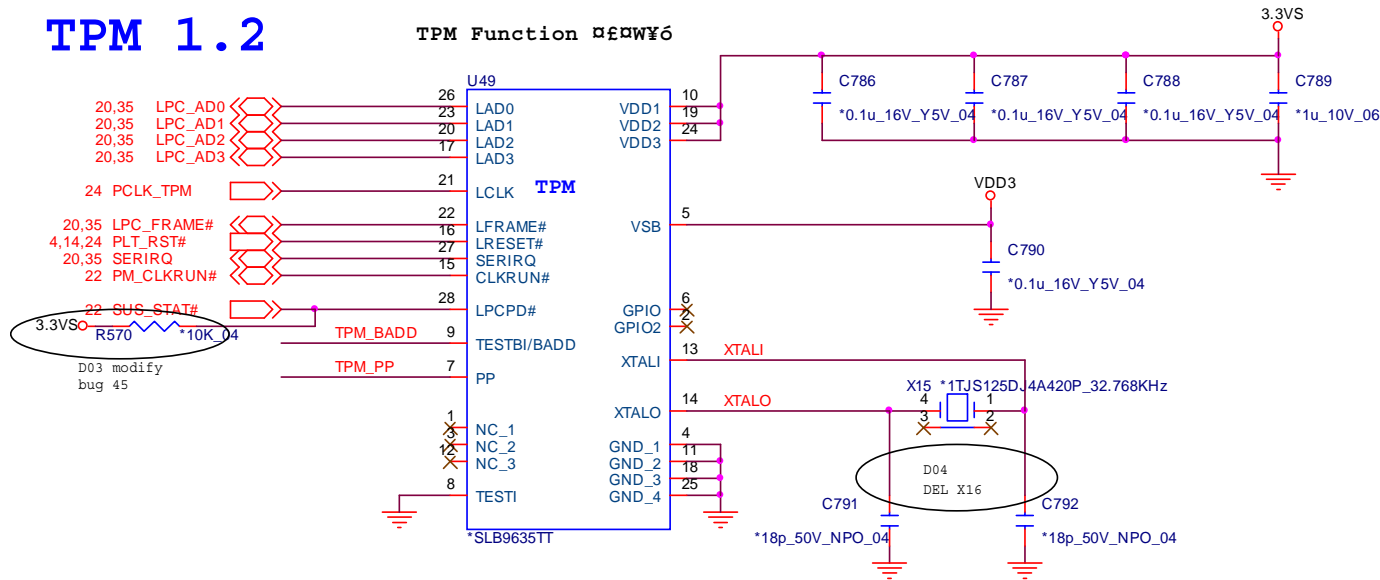


Asserted before entering S3

LPC reset timing:

LPCPD# inactive to LRST# inactive 32~96us

TPM_PP	Hi: ACCESS Low: NORMAL (Internal PD)
TPM_BADD	Hi: 4E/ 4F H Low: 2E/ 2F H

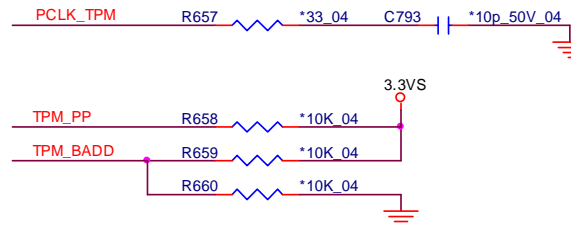

20,30,35,37,38,40,41,47 VDD3
4,10,11,12,13,14,15,16,17,18,19,20,21,22,23,24,25,26,27,29,30,31,33,34,35,36,37,38,41,45,48 3.3VS


Sheet 2 of 61
TPM

Processor 1/7

Ivy Bridge Processor 1/7 (DMI, PEG, FDI)


B.Schematic Diagrams

Sheet 3 of 61
Processor 1/7

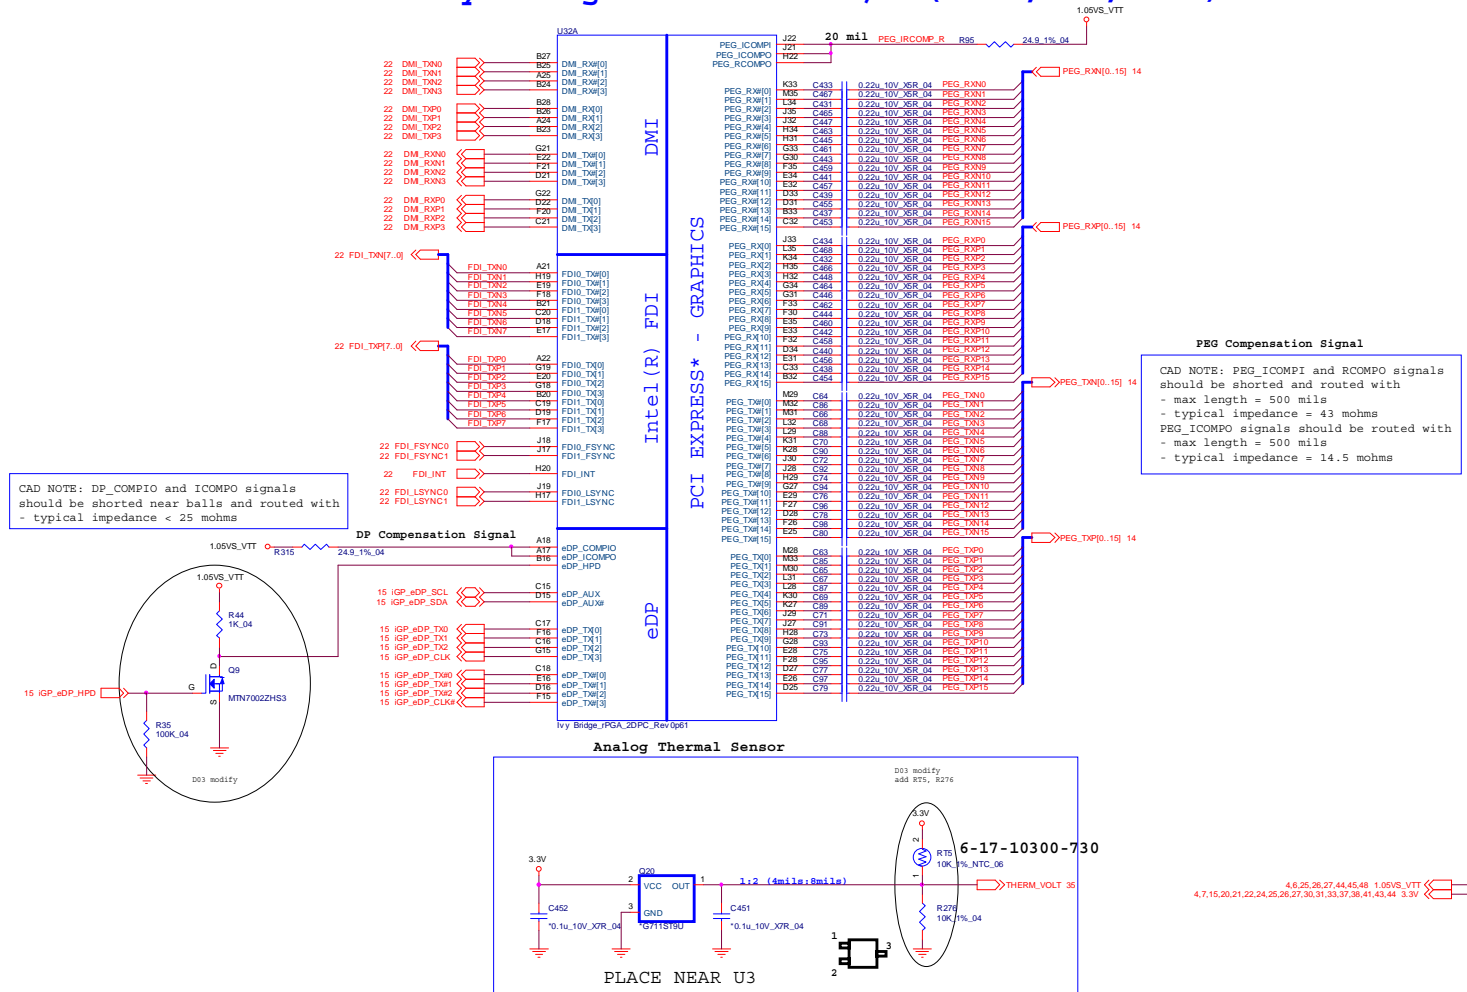



Processor 2/7

Ivy Bridge Processor 2/7 (CLK,MISC,JTAG)

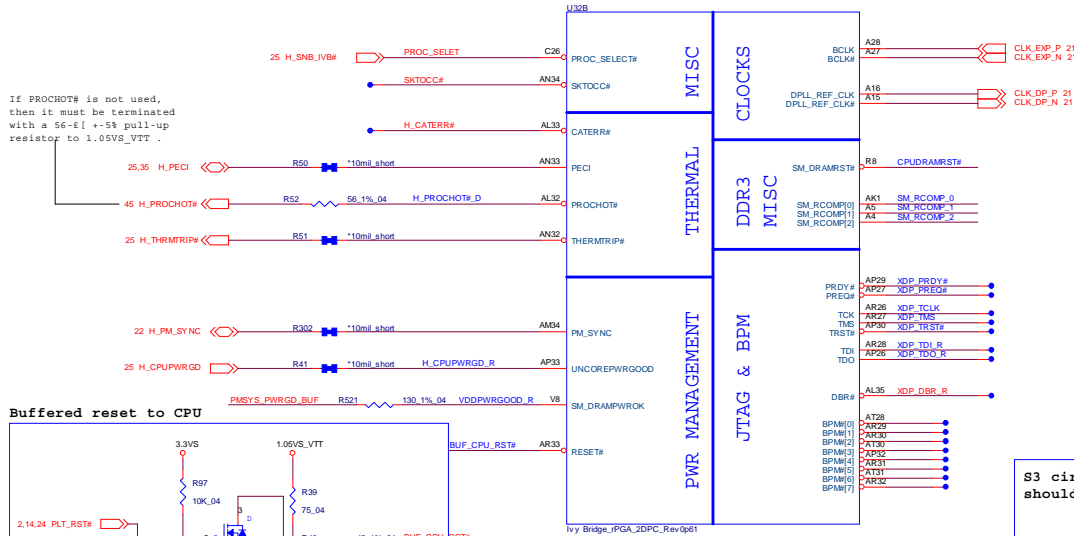






If PROCHOT# is not used, then it must be terminated with a 56- Ω +/-5% pull-up resistor to 1.05V_{S_VTT}.

Buffered reset to CPU

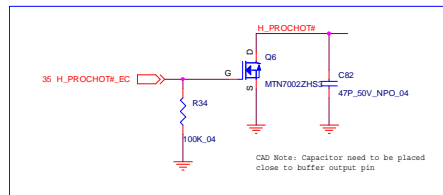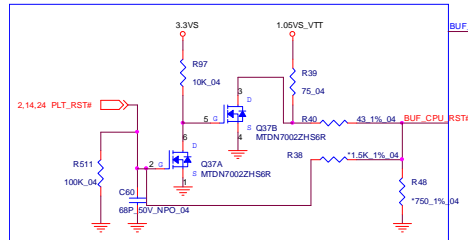

CAD Note: Capacitor need to be placed close to buffer output pin

S3 circuit:- DRAM PWR GOOD logic

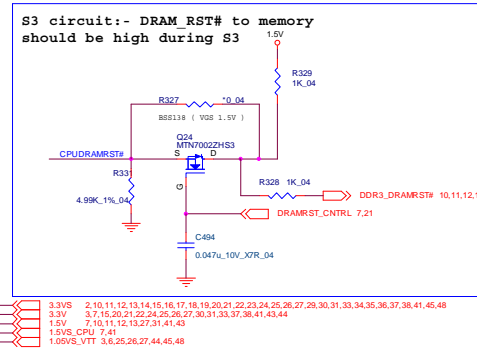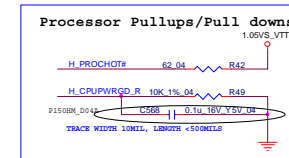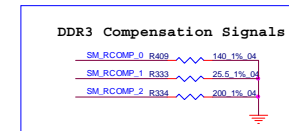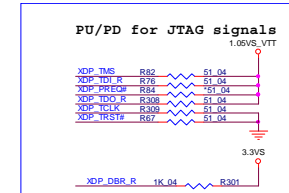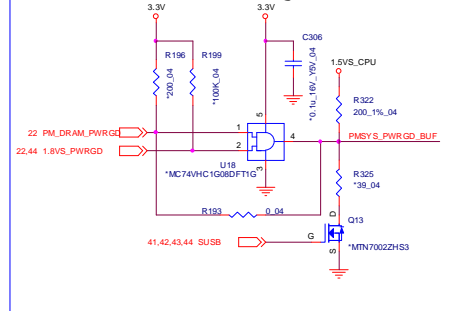


- 3.3VS 2,10,11,12,13,14,15,16,17,18,19,20,21,22,23,24,25,26,27,29,30,31,33,34,35,36,37,38,41,45,48
- 3.3V 3,7,15,20,21,22,24,25,26,27,30,31,33,37,38,41,43,44
- 1.5V 7,10,11,12,13,27,31,41,43
- 1.5VS_CPU 7,41
- 1.05VS_VTT 3,6,25,26,27,44,45,48

Processor 3/7

Ivy Bridge Processor 3/7 (DDR3)


B.Schematic Diagrams

Sheet 5 of 61
Processor 3/7

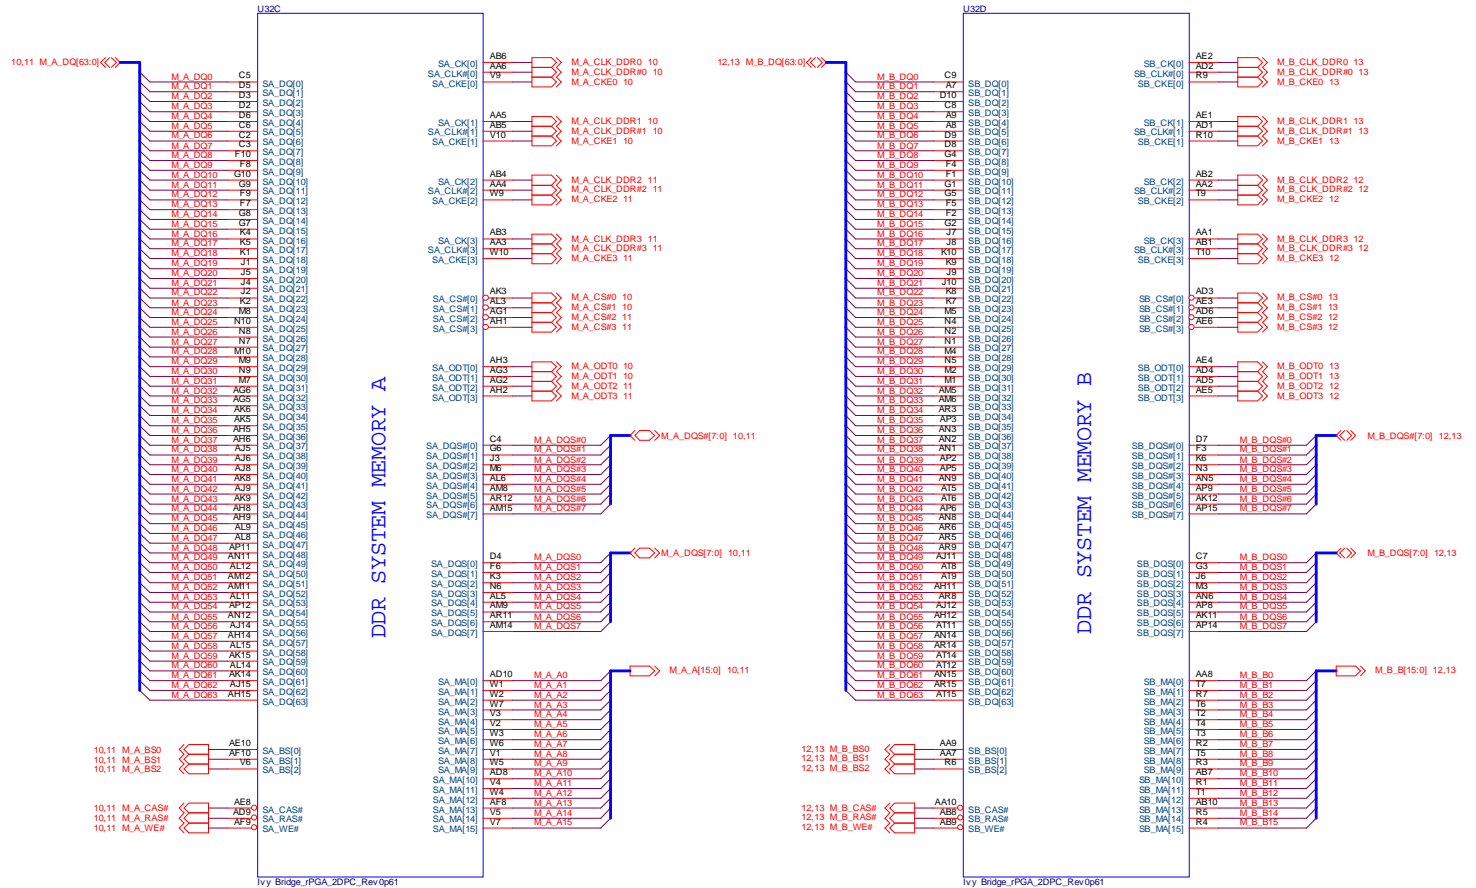

Processor 4/7


Ivy Bridge Processor 4/7 (POWER)

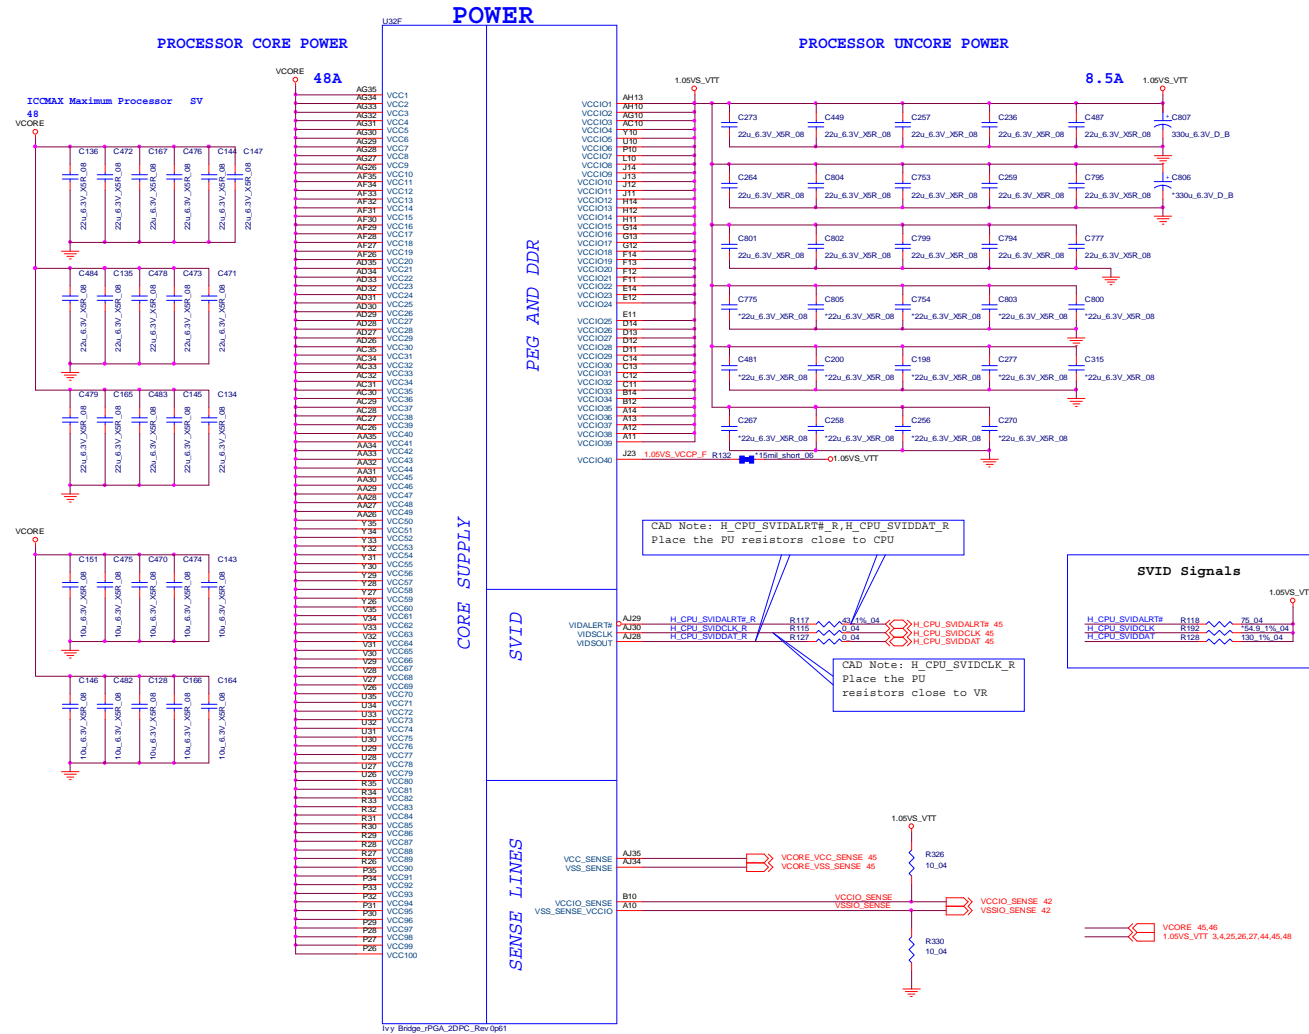

Sheet 6 of 61
Processor 4/7


Processor 5/7

Ivy Bridge Processor 5/7 (GRAPHICS POWER)

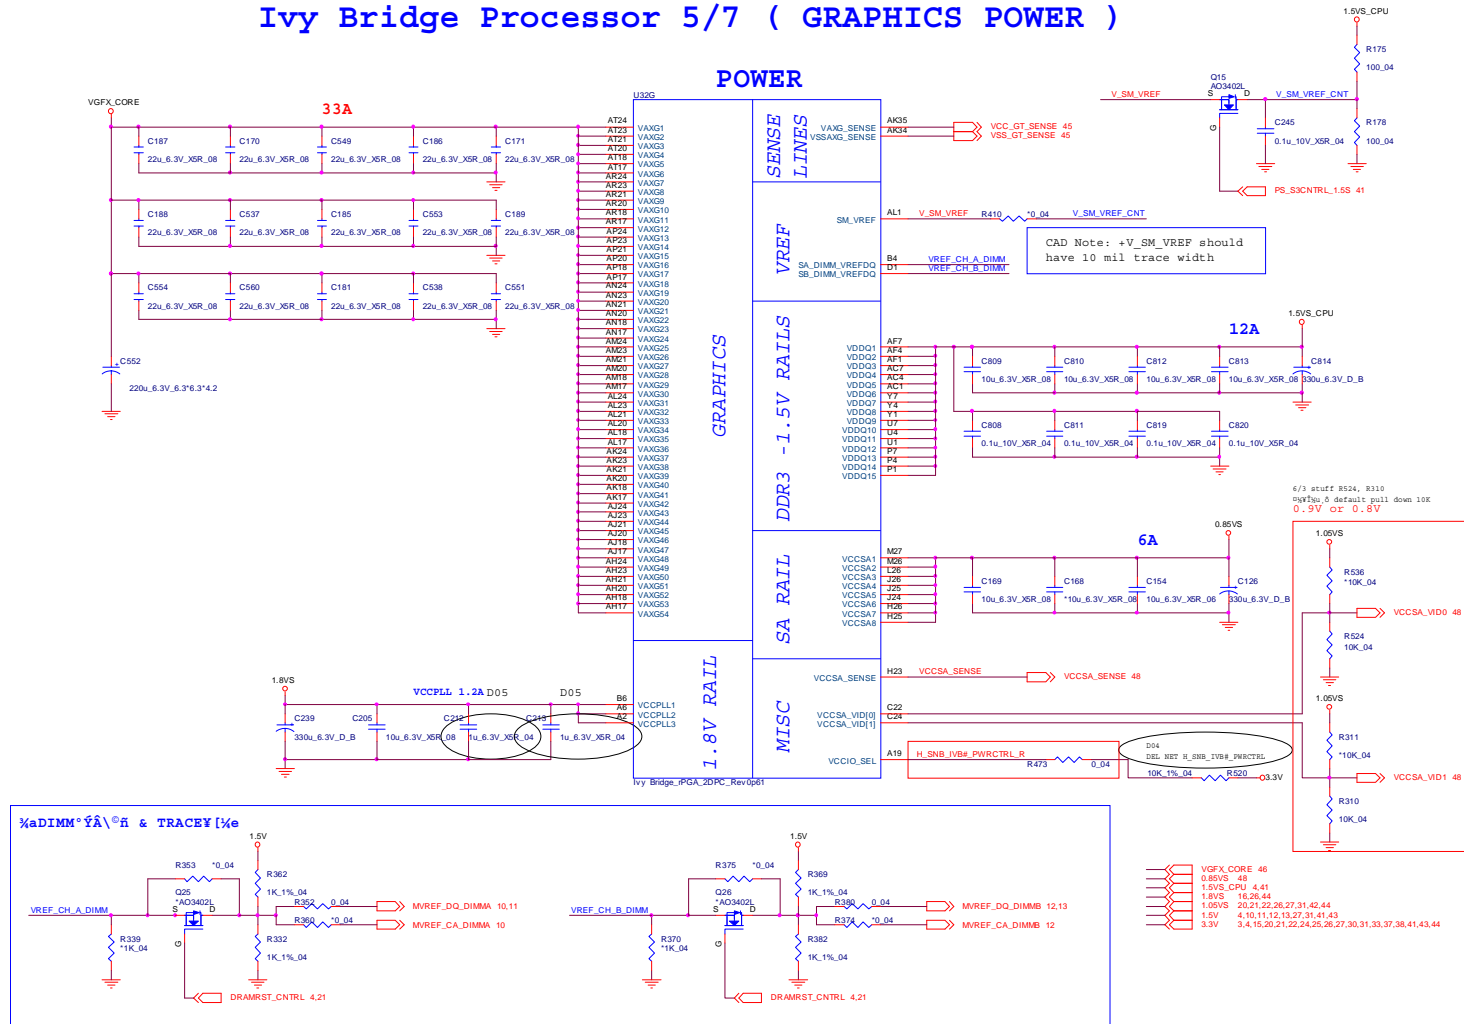

Processor 6/7

Ivy Bridge Processor 6/7 (GND)

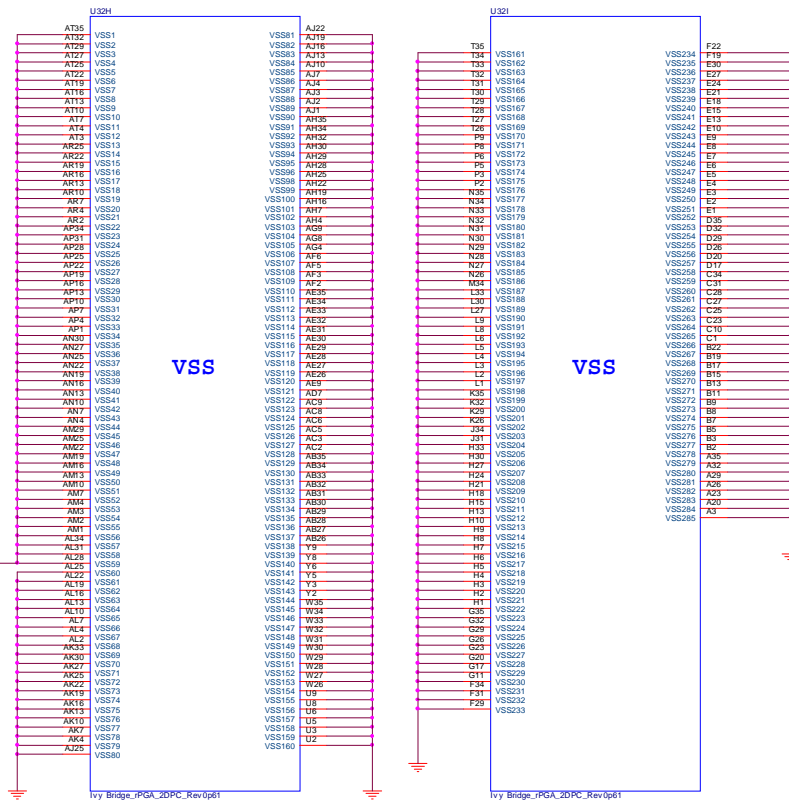

Sheet 8 of 61
Processor 6/7

B.Schematic Diagrams

28,37,41 1.5V@
2,4,10,11,12,13,14,15,16,17,18,19,20,21,22,23,24,25,26,27,29,30,31,33,34,35,36,37,38,41,45,48 3.3V@


Processor 7/7

Ivy Bridge Processor 7/7 (RESERVED)


Sheet 9 of 61
Processor 7/7

CFG Straps for Processor

PEG Static Lane Reversal - CFG2 is for the 16x	
CFG2	1: (Default) Normal Operation; Lane # definition matches socket pin map definition 0: Lane Reversed




Display Port Presence Strap	
CFG4	1: (Default) Disabled; No Physical Display Port attached to Embedded Display Port 0: Enabled; An external Display Port device is connected to the Embedded Display Port





D04 Add net PANEL_SEL

PCIe Port Bifurcation Straps	
CFG [6 : 5]	11: (Default) x16 - Device 1 functions 1 and 2 disabled 10: x8, x8 - Device 1 function 1 enabled ; function 2 disabled 01: Reserved - (Device 1 function 1 disabled ; function 2 enabled) 00: x8,x4,x4 - Device 1 functions 1 and 2 enabled



PEG DEFER TRAINING	
CFG7	1: (Default) PEG Train immediately following xxRESETB de assertion 0: PEG Wait for BIOS for training

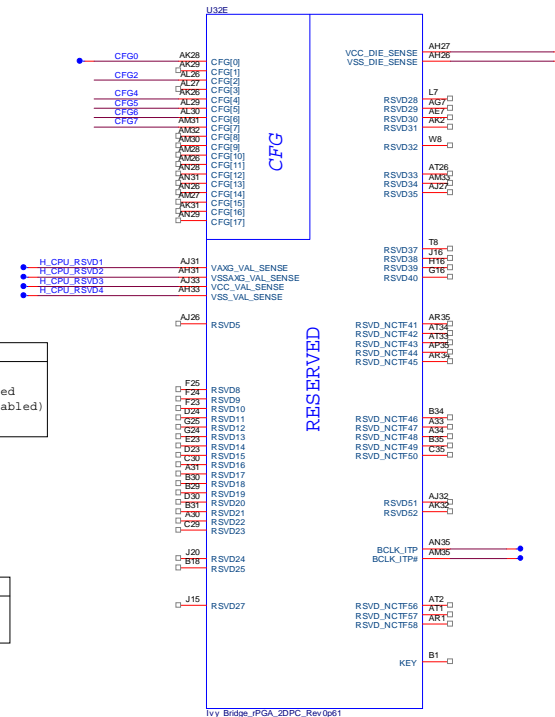


Ivy Bridge_IPGA_2DPC_Rev0p61

DDRIII CHA SO-DIMM_0

Channel A SO-DIMM 0

CHANGE TO STANDARD

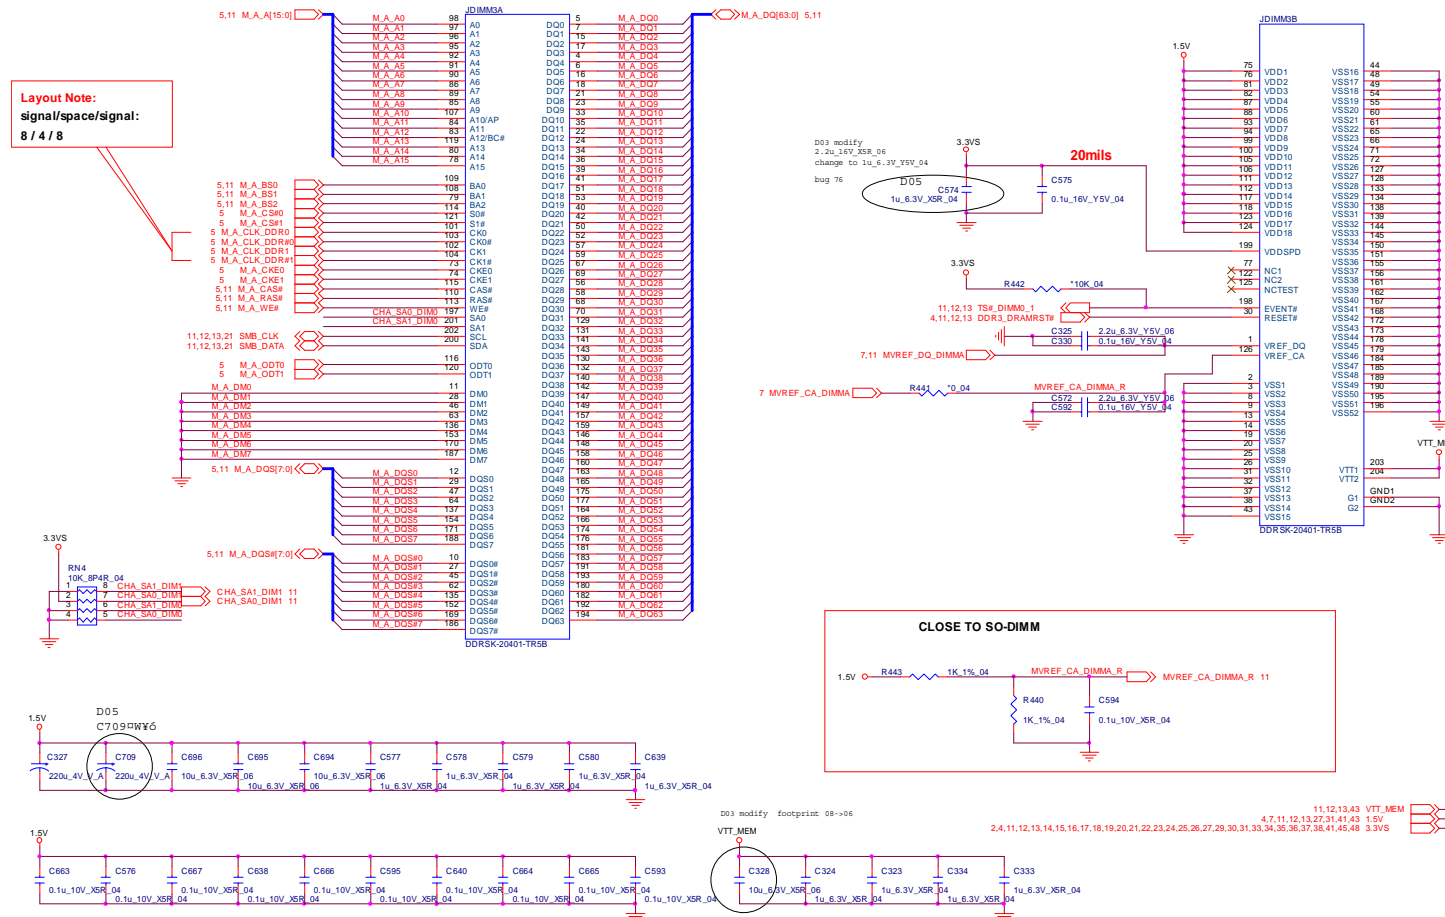

Sheet 10 of 61
DDRIII CHA SO-DIMM_0

Schematic Diagrams


DDRIII CHA SO-DIMM_1

Channel A SO-DIMM 1

CHANGE TO STANDARD


B.Schematic Diagrams

Sheet 11 of 61
DDRIII CHA SO-DIMM_1

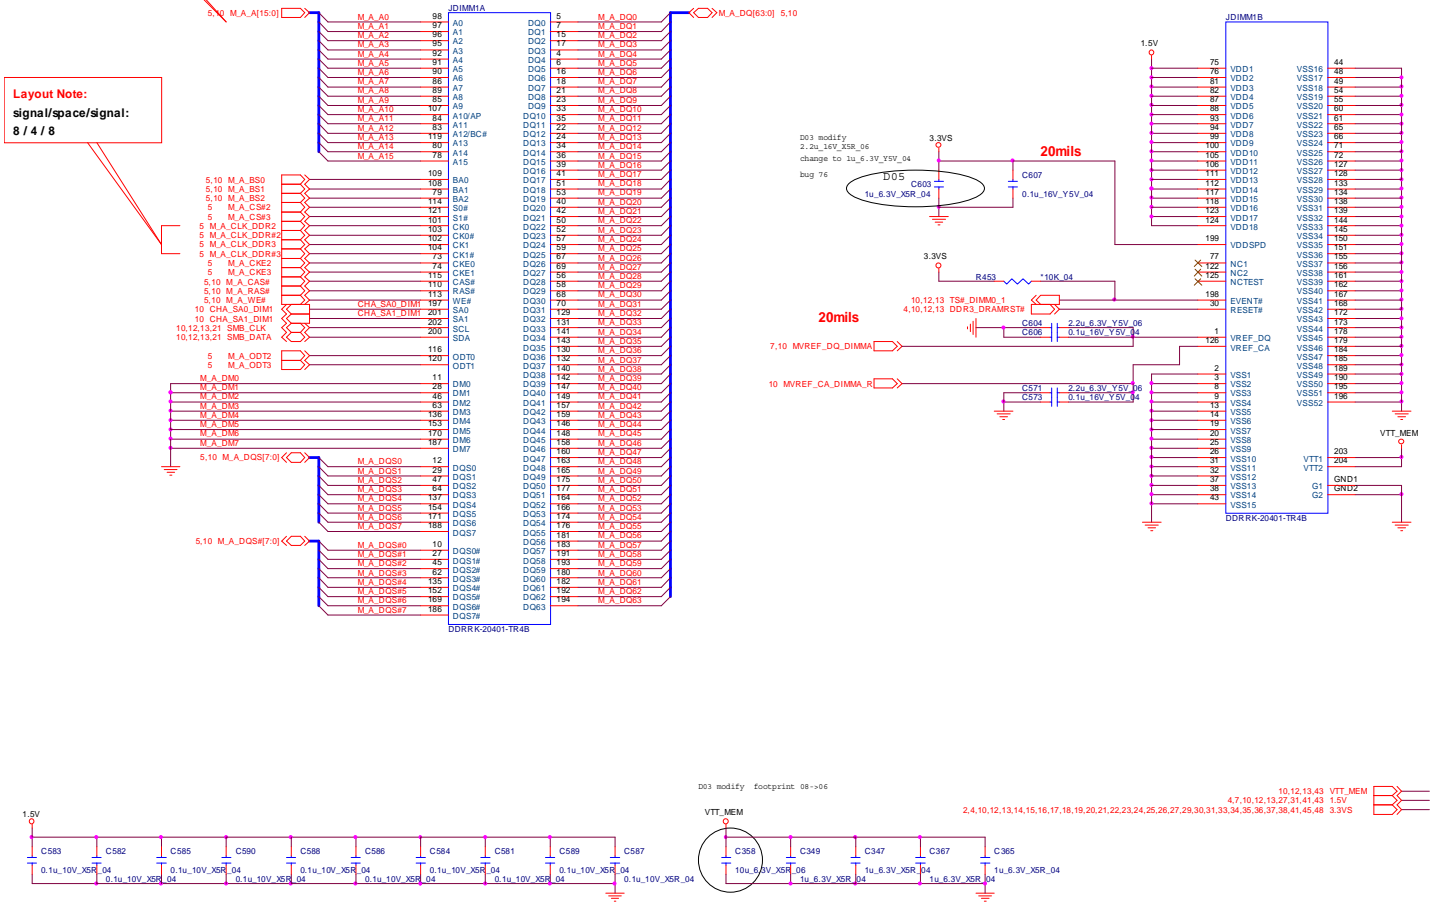

DDRIII CHB SO-DIMM_0

Channel B SO-DIMM 0

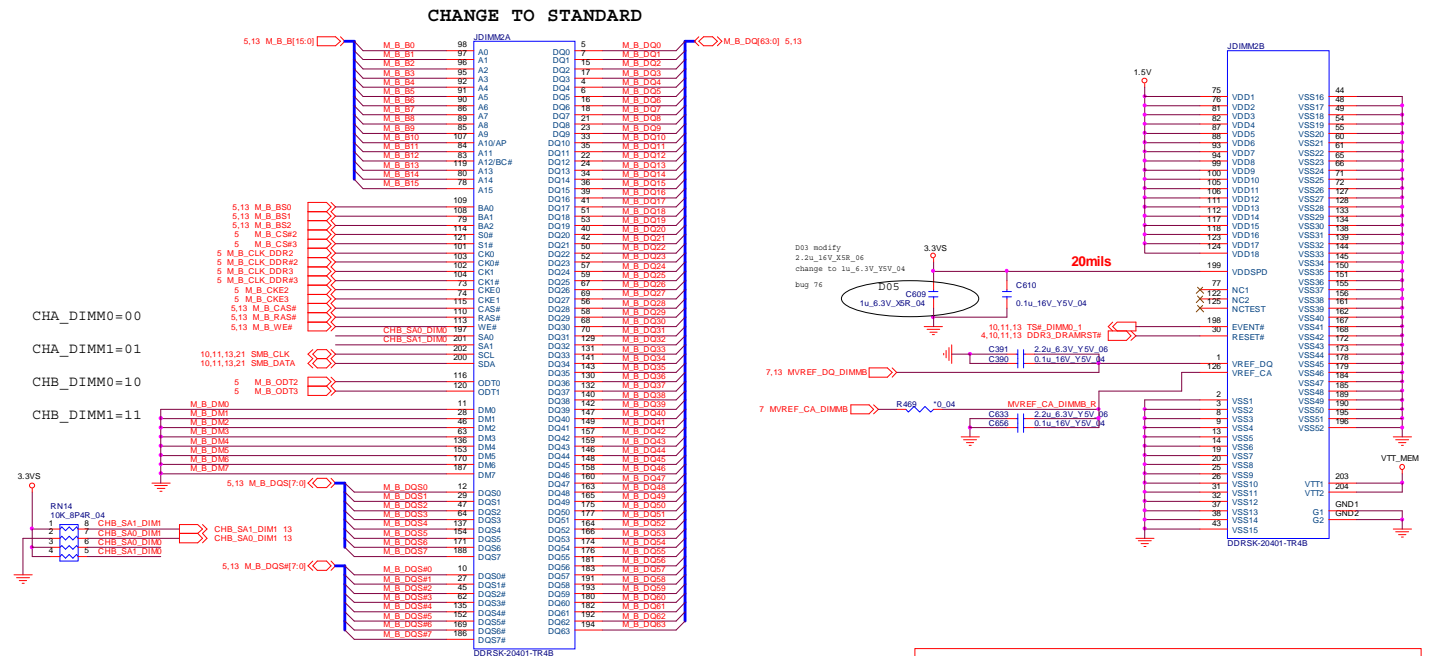

Sheet 12 of 61
DDRIII CHB SO-DIMM_0


B.Schematic Diagrams

DDRIII CHB SO-DIMM_1


Channel B SO-DIMM 1

CHANGE TO STANDARD


Sheet 13 of 61
DDRIII CHB SO-DIMM_1

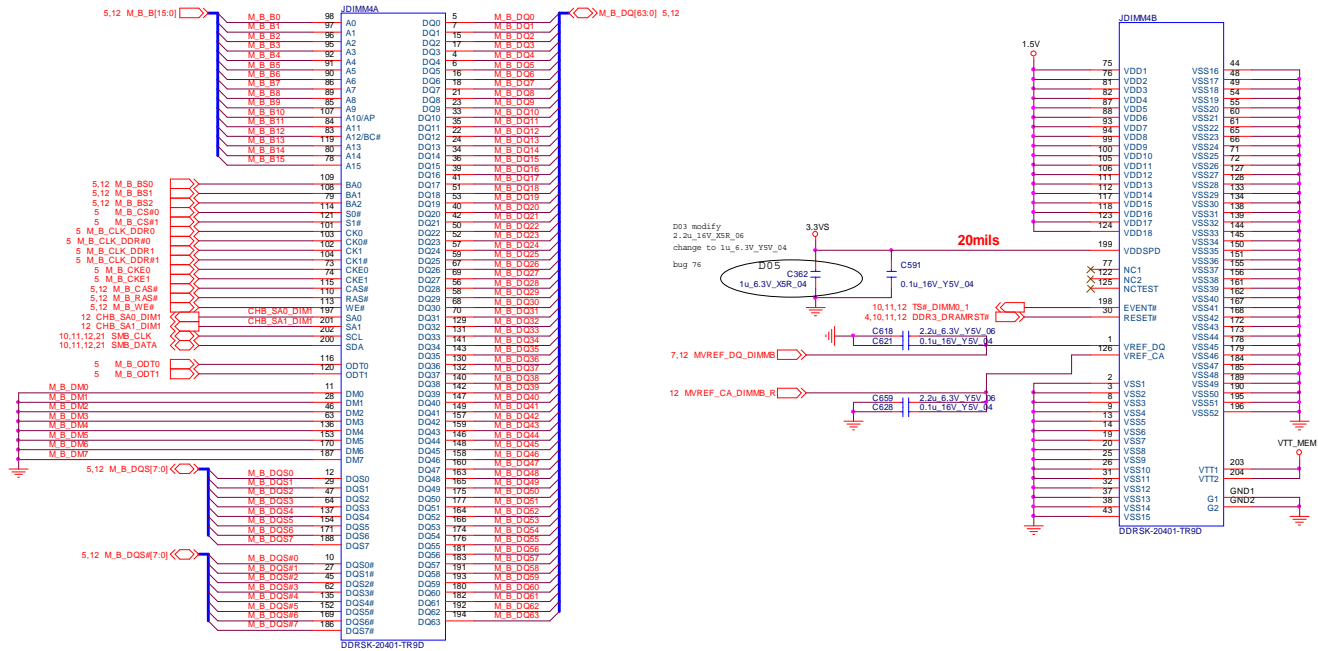

Layout Note:
SO-DIMM_1 is placed farther from the GMCH than SO-DIMM_0



MXM PCI-E


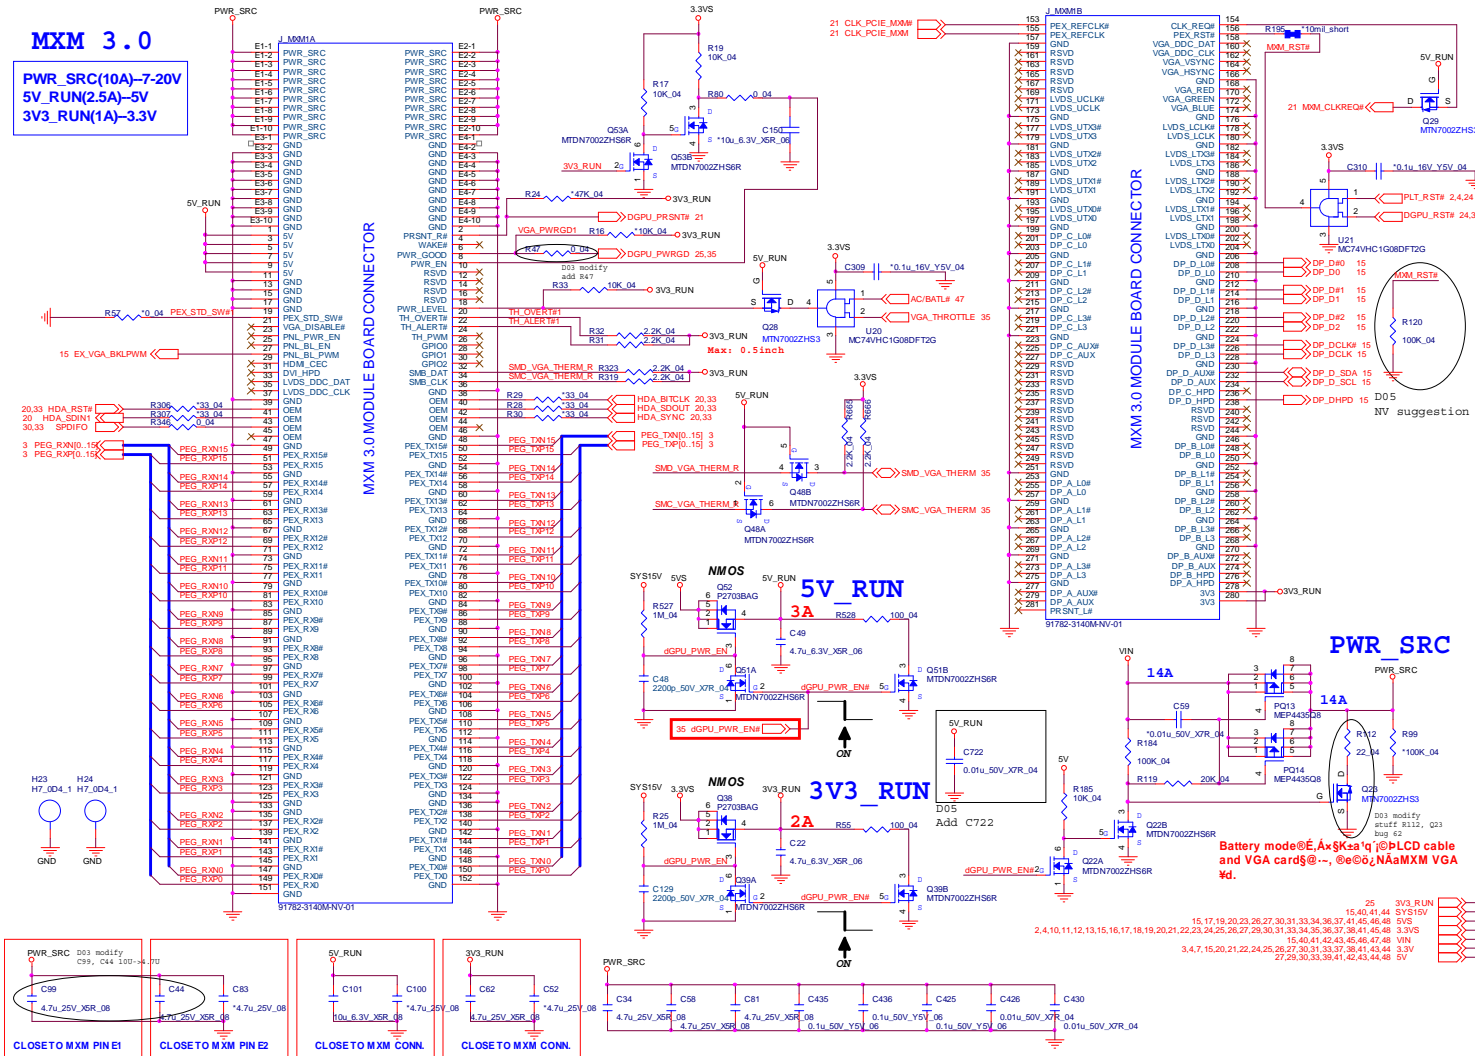


Sheet 14 of 61
MXM PCI-E





B.Schematic Diagrams

Schematic Diagrams

Panel, Inverter, CRT

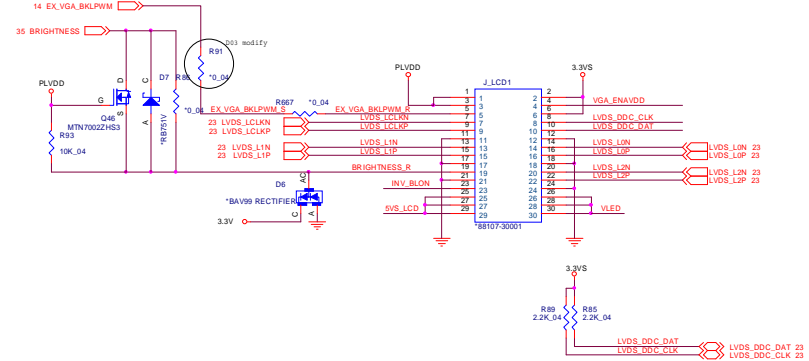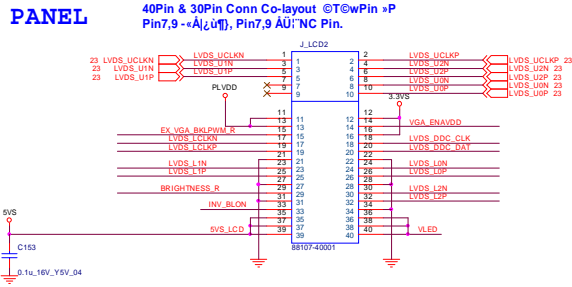


Sheet 15 of 61
Panel, Inverter,
CRT

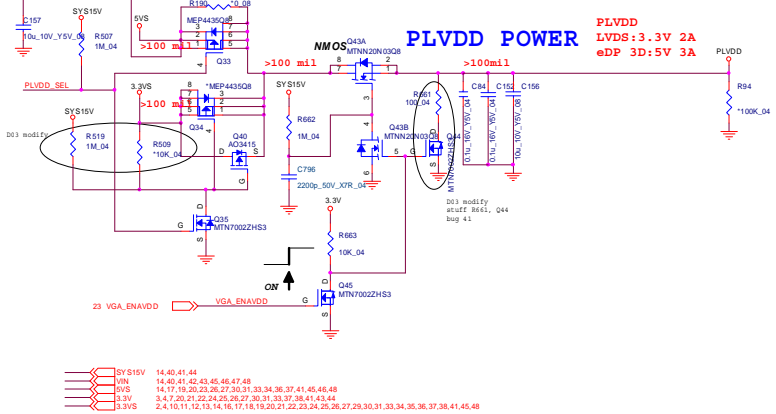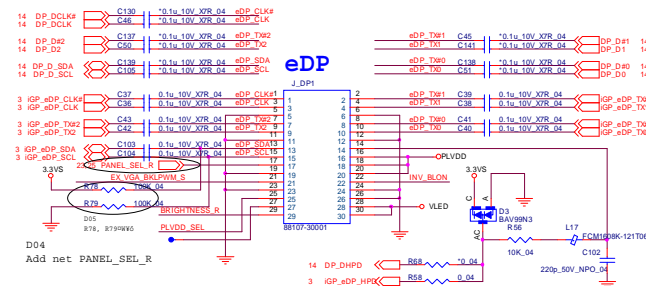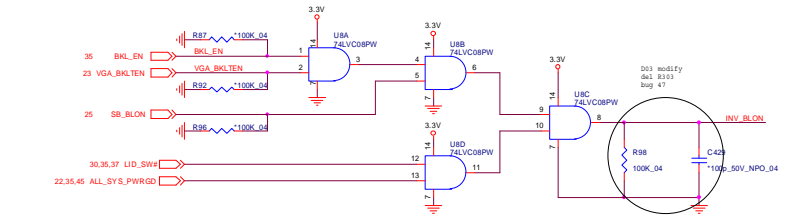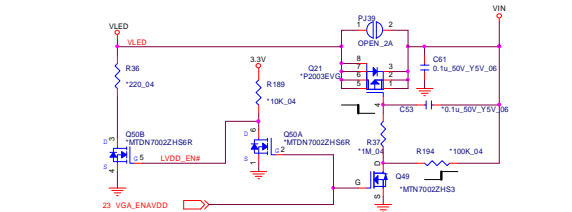

B.Schematic Diagrams

1394_JMB380C

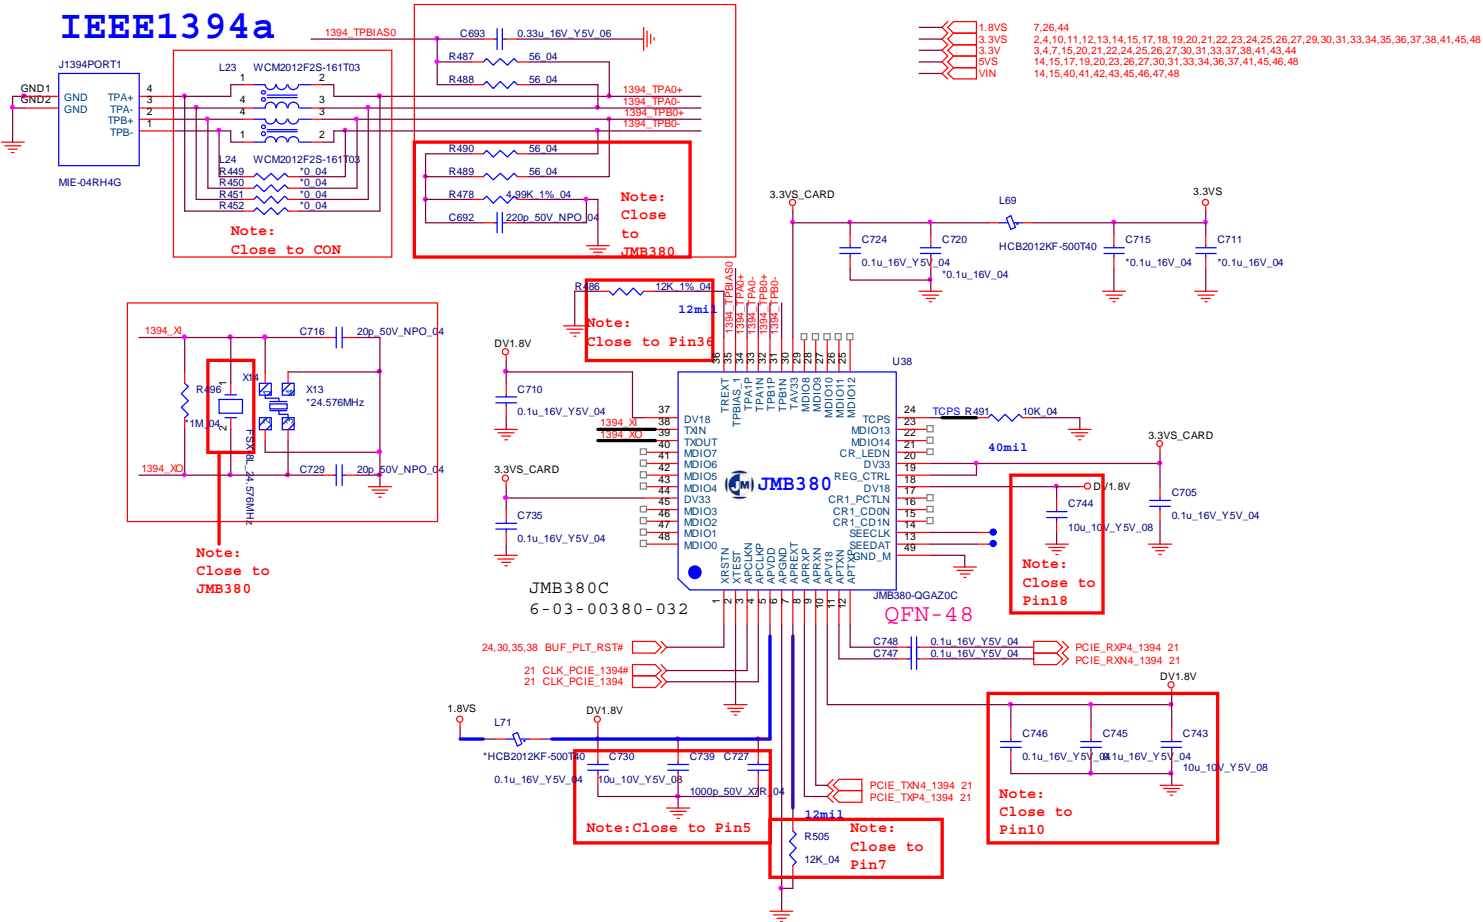


Sheet 16 of 61
1394_JMB380C


B.Schematic Diagrams

Schematic Diagrams




DVI

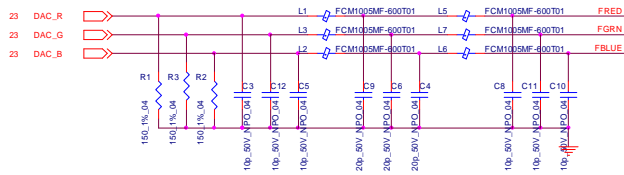

PLEASE CLOSE TO CONNECTOR

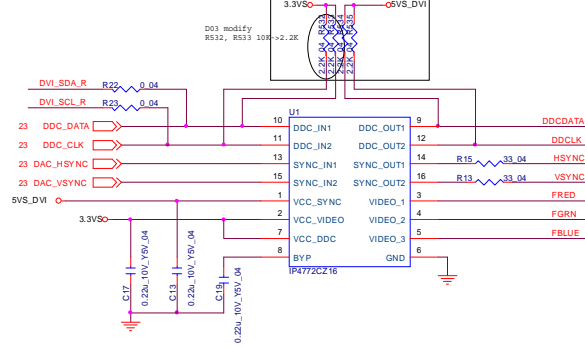

PLEASE CLOSE TO CONNECTOR

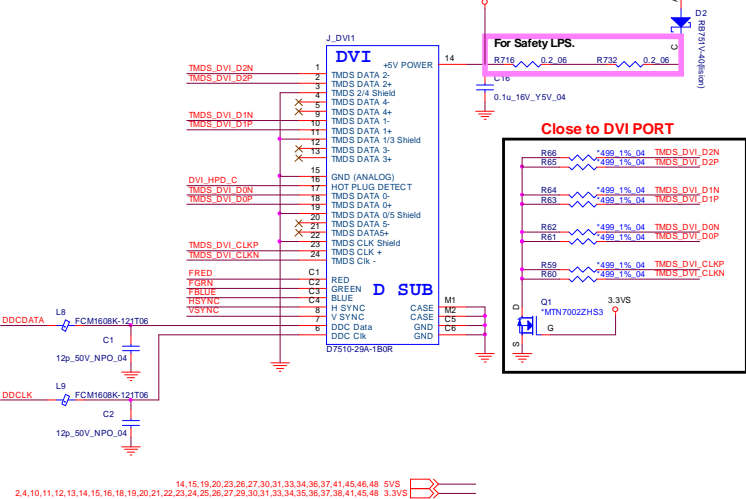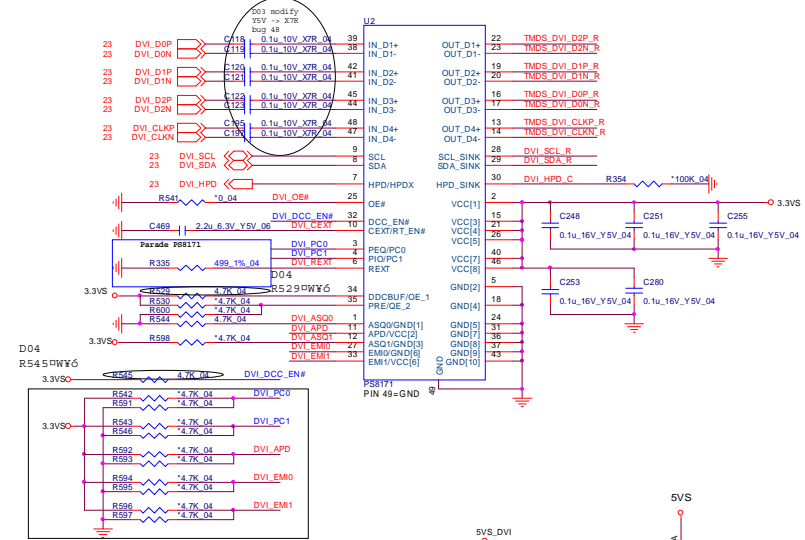
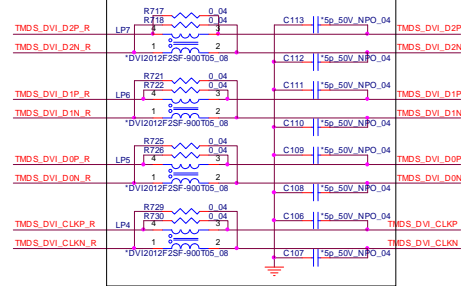


B.Schematic Diagrams

Sheet 17 of 61
DVI

Display Port

dGPU DISPLAY PORT

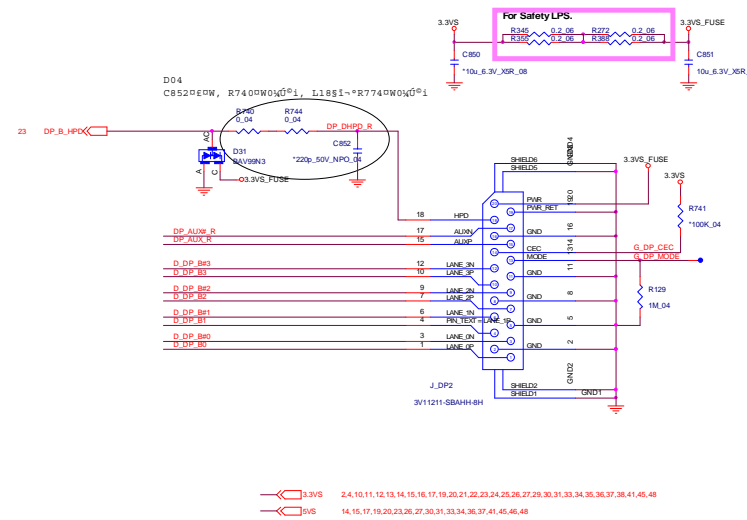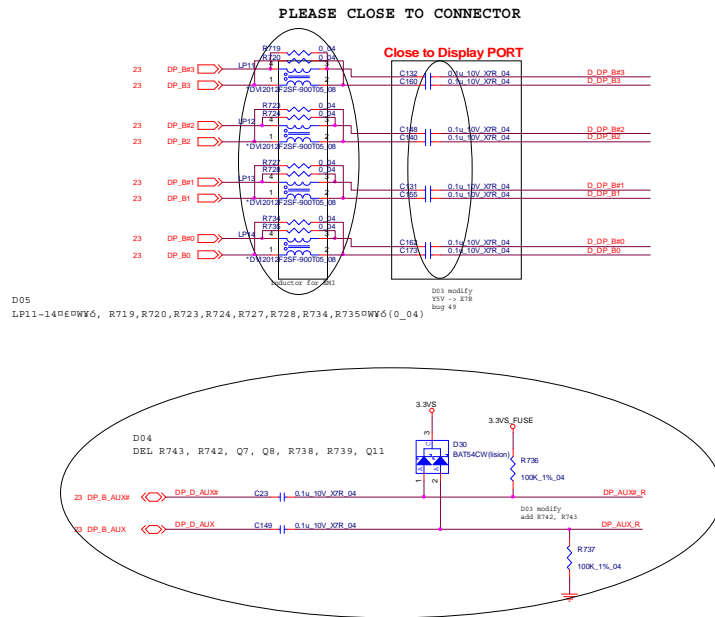


Sheet 18 of 61
Display Port

B.Schematic Diagrams

Schematic Diagrams


HDMI

HDMI CONNECTOR

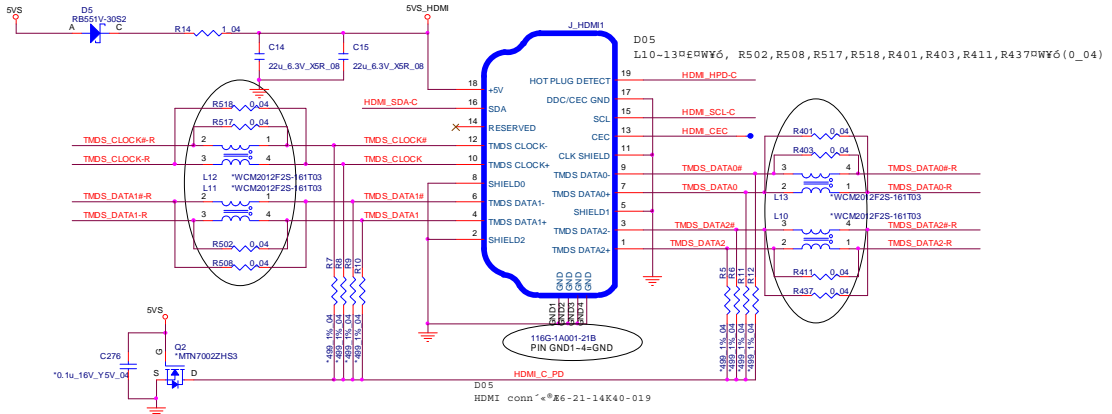


Sheet 19 of 61
HDMI

B.Schematic Diagrams

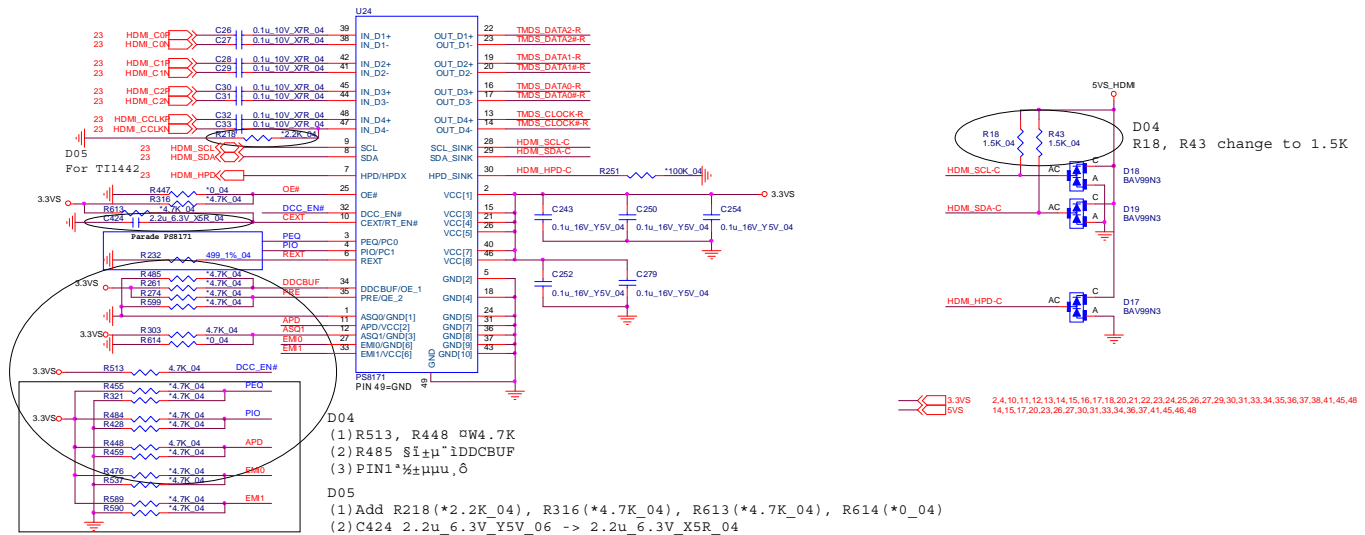

PCH 1/9 - RTC, HDA, SATA

PantherPoint - M (HDA, JTAG, SPI, SATA)

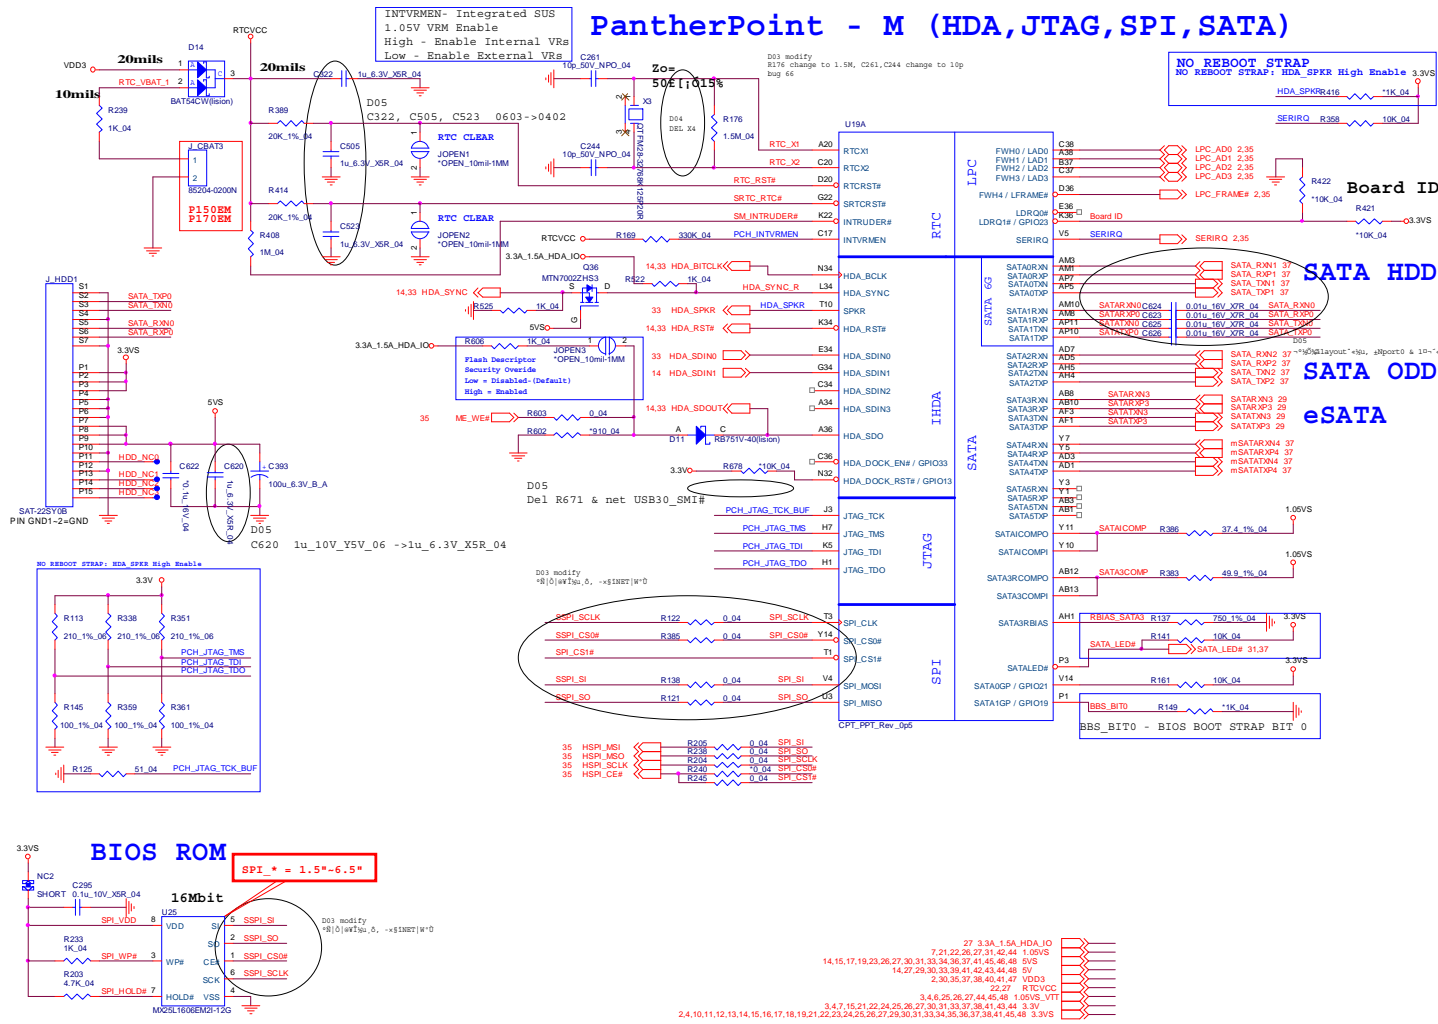


Sheet 20 of 61
PCH 1/9 - RTC,
HDA, SATA

B.Schematic Diagrams


PCH 2/9 - PCIE, SMBUS, CLK

Sheet 21 of 61
PCH 2/9 - PCIE,
SMBUS, CLK

PCI-E x1	Usage
Lane 1	
Lane 2	GLAN / CARD READER
Lane 3	WLAN
Lane 4	1394
Lane 5	X
Lane 6	X
Lane 7	X
Lane 8	X


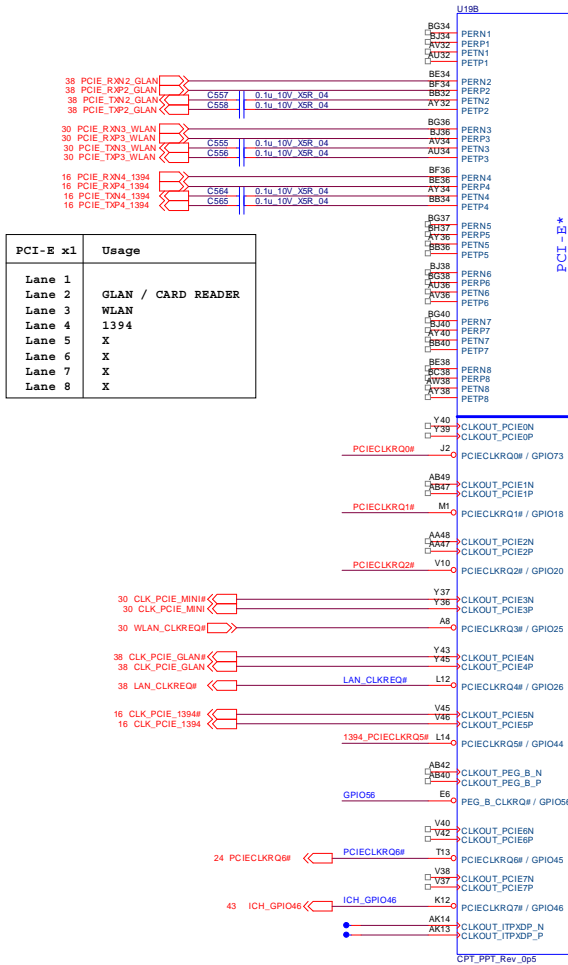


PantherPoint - H (PCI-E, SMBUS, CLK)

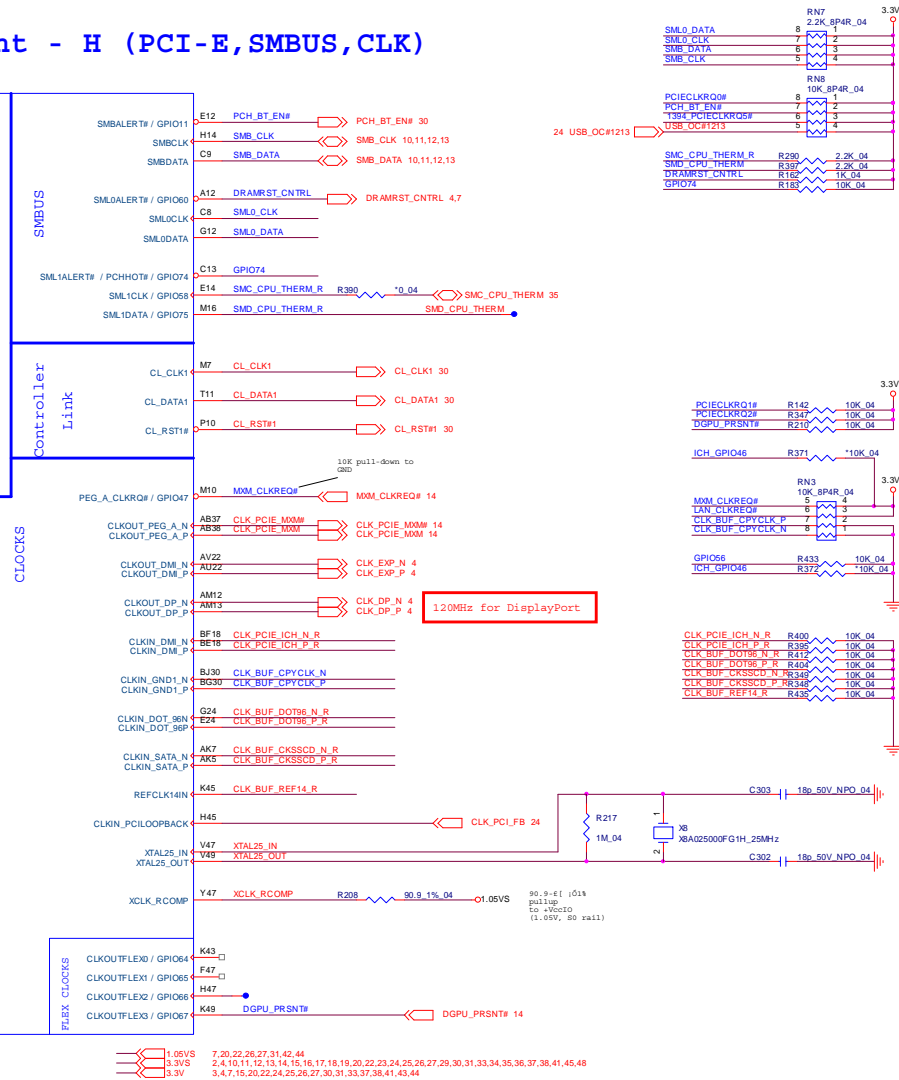

PCH3/9 - DMI, FDI, PWRGD

PantherPoint - H (DMI, FDI, GPIO)

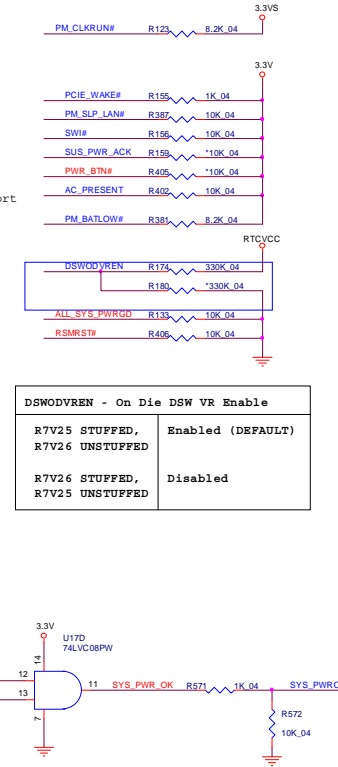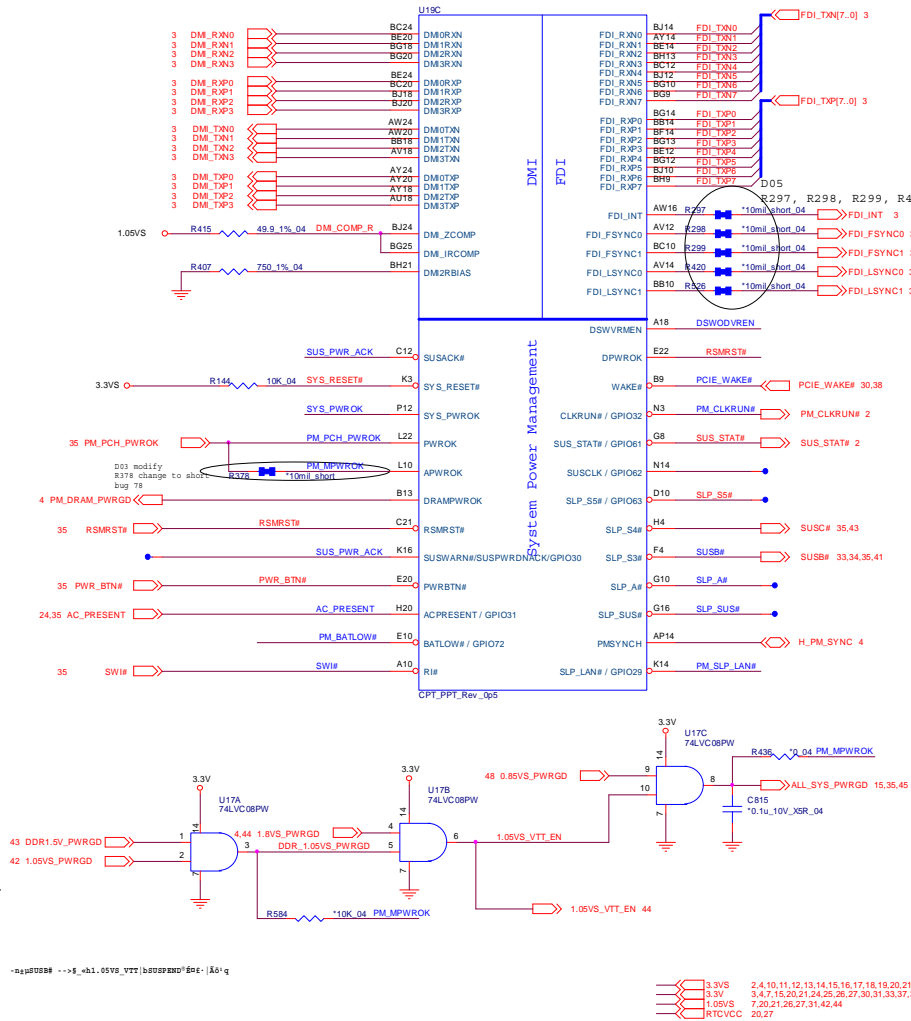

Sheet 22 of 61
PCH 3/9 - DMI, FDI,
PWRGD


Schematic Diagrams

PCH 4/9 - LVDS, DDI, CRT

PantherPoint - H (LVDS, DDI)

B.Schematic Diagrams

Sheet 23 of 61
PCH 4/9 - LVDS,
DDI, CRT

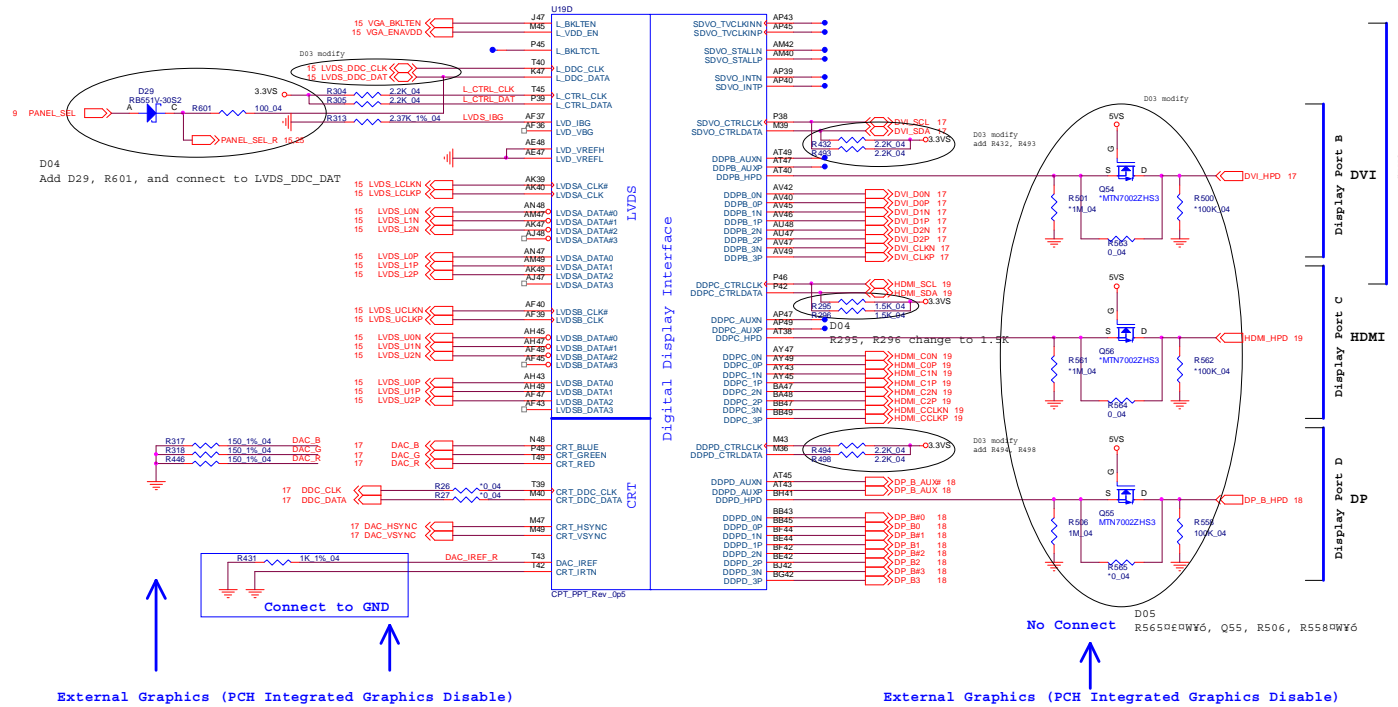

14, 15, 17, 19, 20, 26, 27, 30, 31, 33, 34, 36, 37, 41, 45, 46, 48 5V5
2, 4, 10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 24, 25, 26, 27, 29, 30, 31, 33, 34, 35, 36, 37, 38, 41, 45, 48 3.3V5

PCH 5/9 - PCI, USB, RSVD

Boot BIOS Strap		
BBS_BIT1	BBS_BIT0	Boot BIOS Location
0	0	LPC
0	1	Reserved (NAND)
1	0	PCI
1	1	SPI




Flash Descriptor security override strap	
PCI_GNT#3	LOW = PCI_GNT#3 swap override HIGH = Default




Understand the RED FONT define


MPC Switch Control
MPC OFF -- 0 DEFAULT
MPC ON -- 1

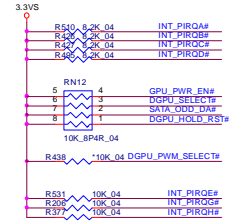

PIN PLT_RST# to Buffer

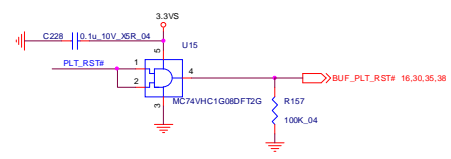

PantherPoint - H (PCI,USB,NVRAM)

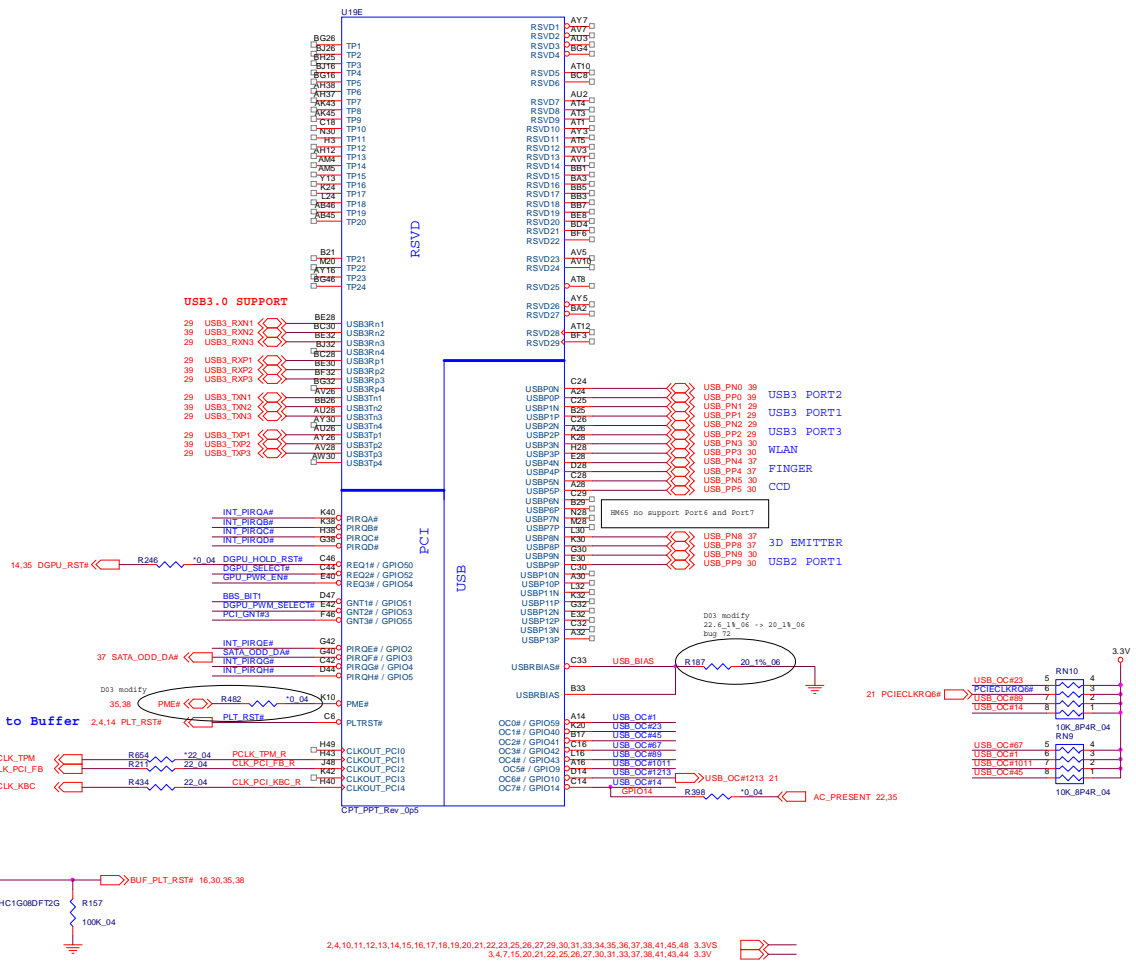

2,4,10,11,12,13,14,15,16,17,18,19,20,21,22,23,25,26,27,29,30,31,33,34,35,36,37,38,41,45,48 3.3V
3,4,7,15,20,21,22,25,26,27,30,31,33,37,38,41,43,44 3.3V

Sheet 24 of 61
PCH 5/9 - PCI, USB,
RSVD


Schematic Diagrams

PCH 6/9 - GPIO, CPU

Sheet 25 of 61
PCH 6/9 - GPIO,
CPU


PantherPoint - H (GPIO,VSS_NCTF,RSVD)

	HIGH	LOW
PANEL_SEL_R	LVDS	eDP

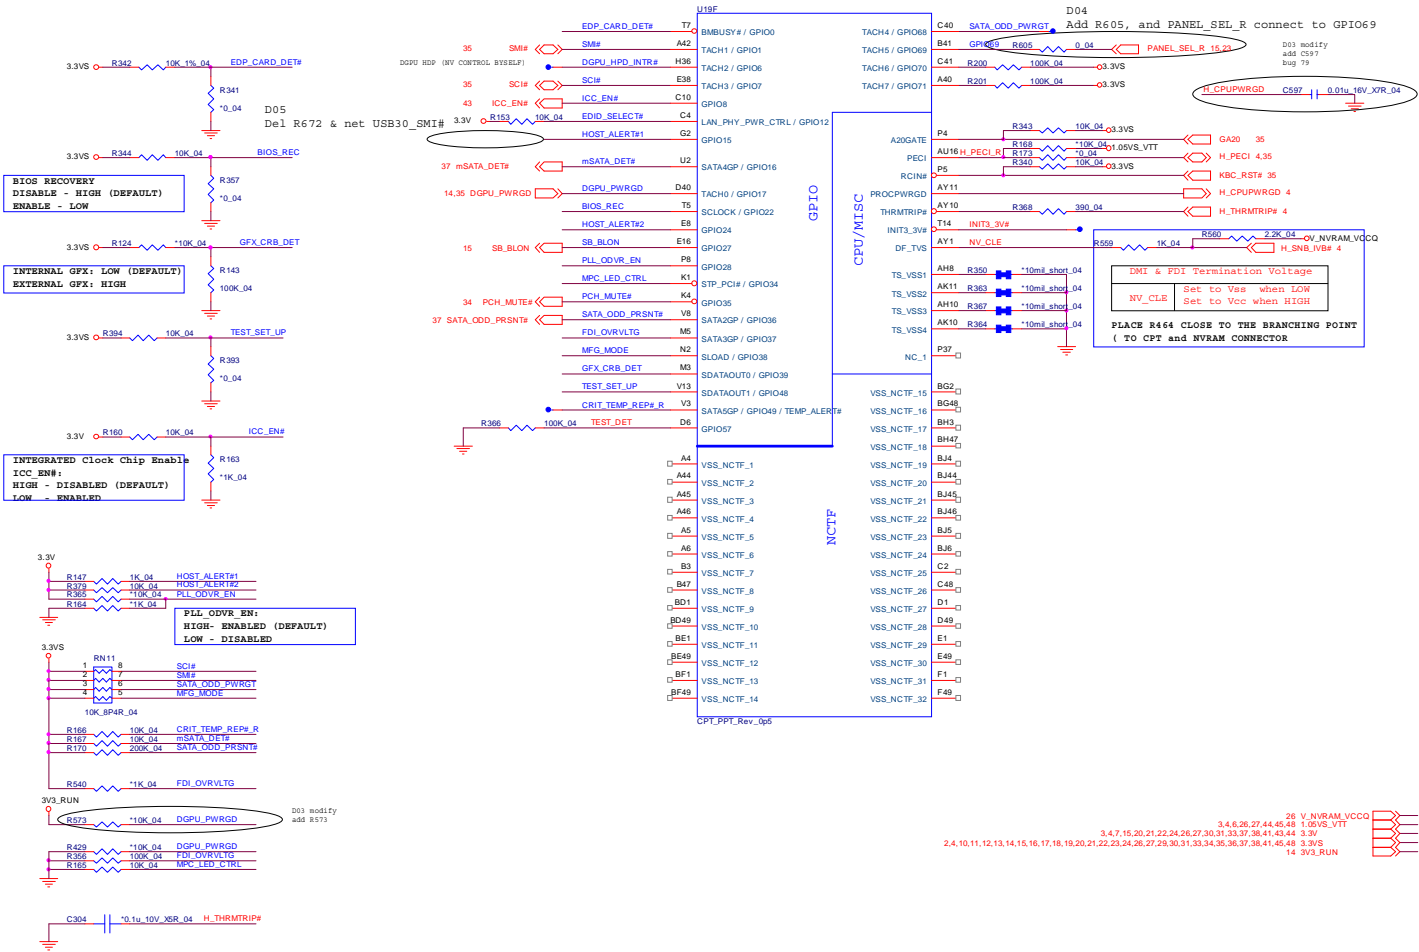

PCH 7/9 - Power

PantherPoint - H (POWER)

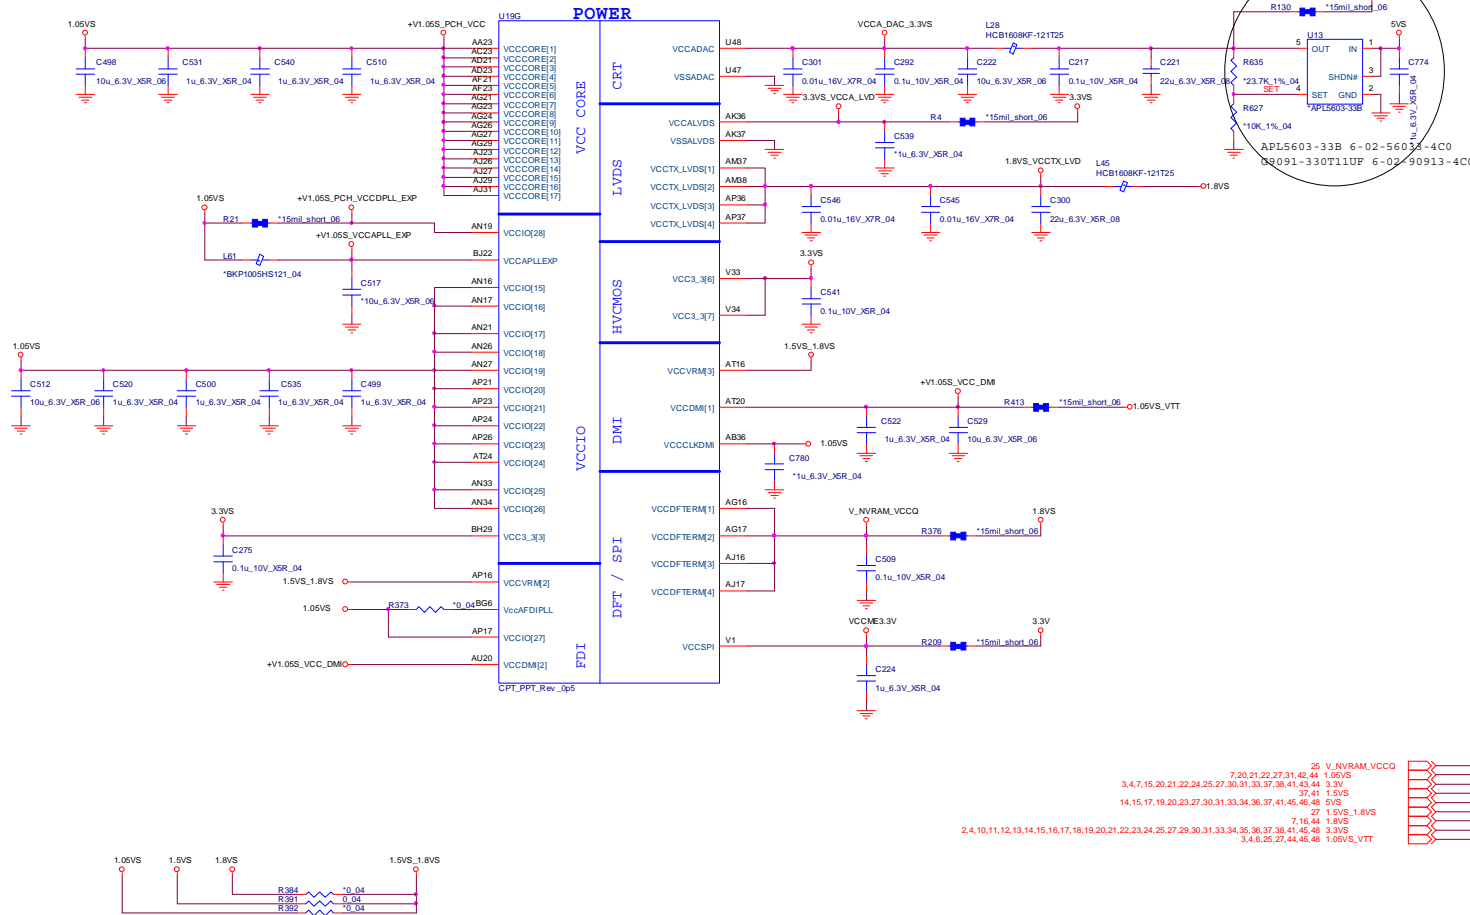


Sheet 26 of 61
PCH 7/9 - Power

B.Schematic Diagrams


PCH 8/9 - Power

Sheet 27 of 61
PCH 8/9 - Power

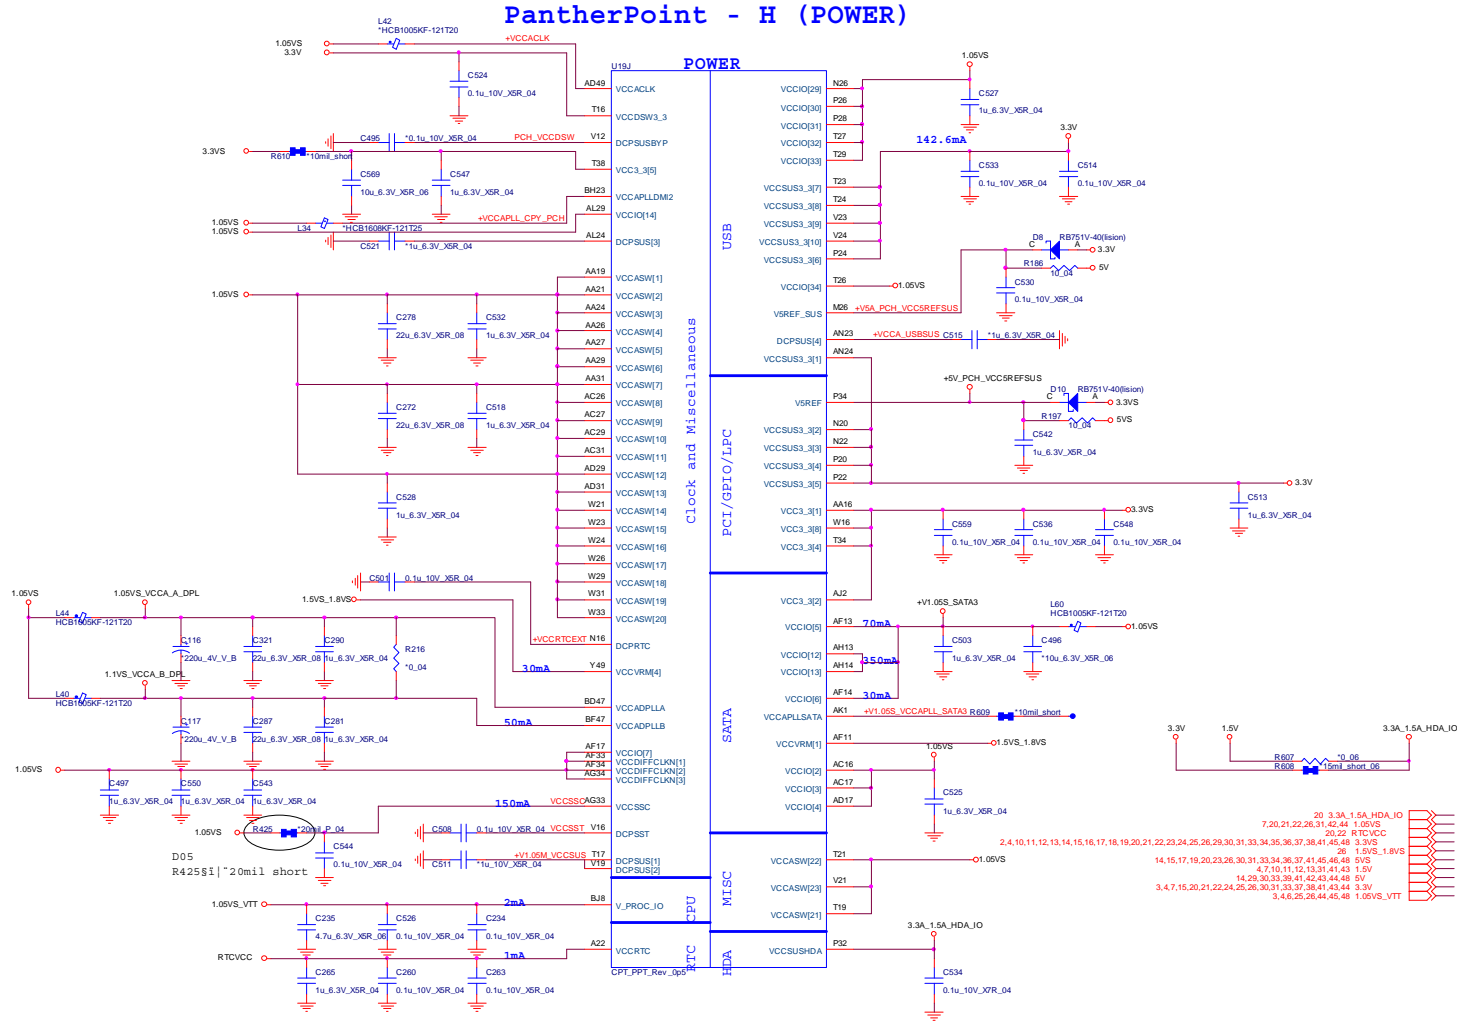

PCH 9/9 - GND

PantherPoint - H (GND)

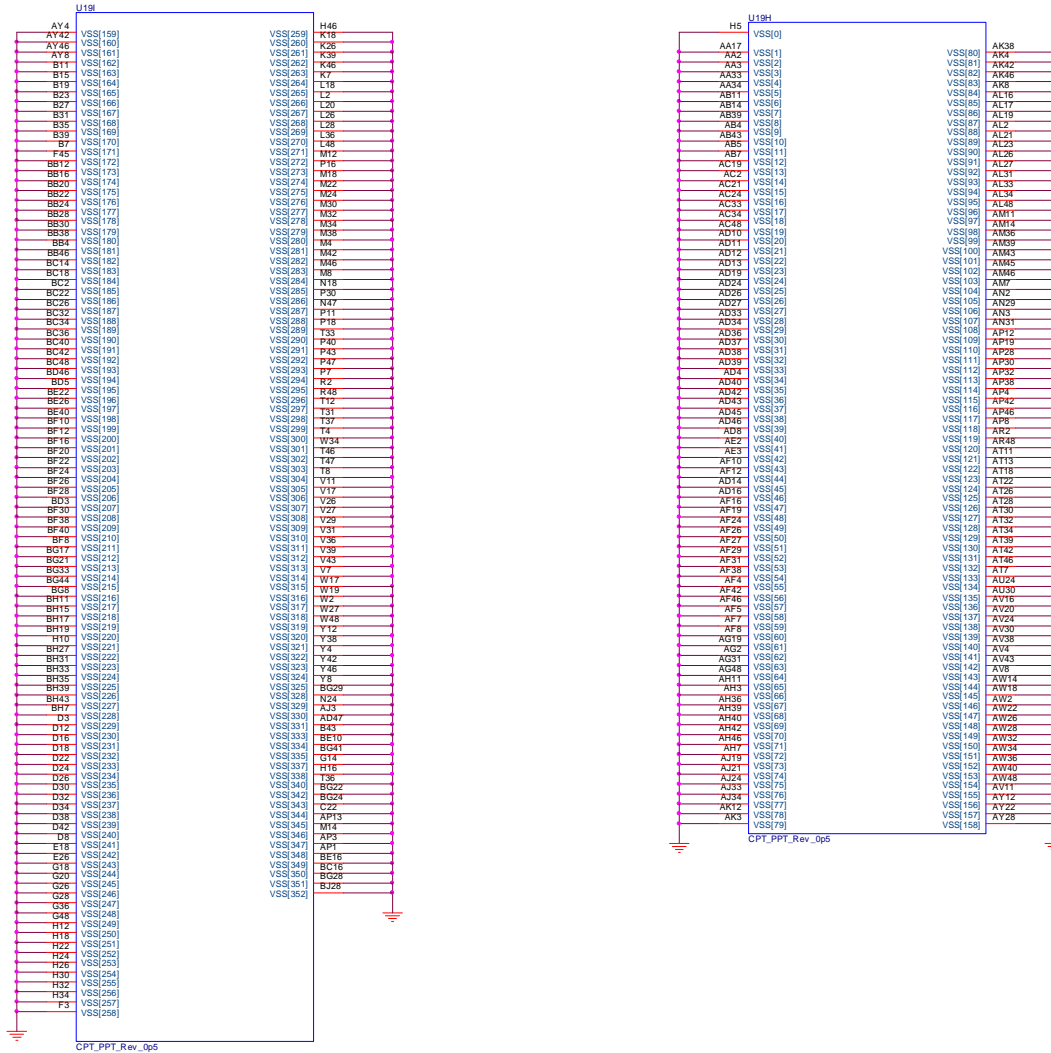


Sheet 28 of 61
PCH 9/9 - GND




B.Schematic Diagrams

USB+eSATA, USB Charging


Sheet 29 of 61
USB+eSATA, USB
Charging

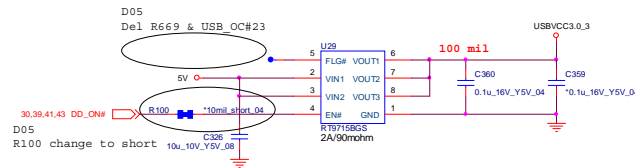

USB3.0 PORT3 + eSATA

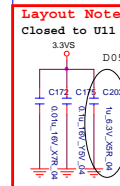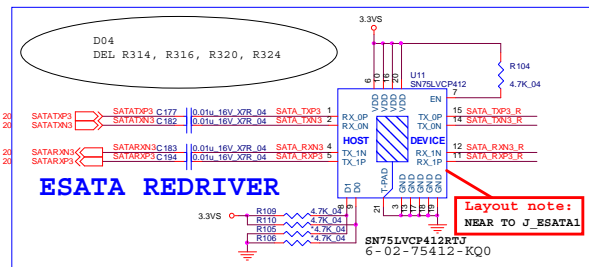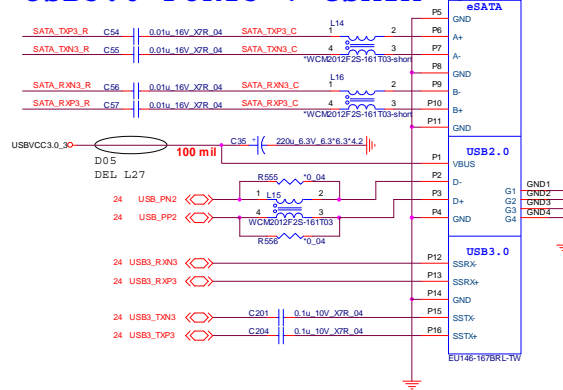


TPS2540 USB CHARGING PORT

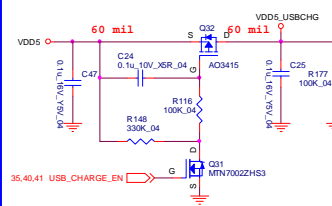


		(DD_ON) CTL1	(VDD5) CTL2	(VDD5) CTL3
Mode 1	Power off & Discharge	0	0	0
Mode 2	Power off & Charge	0	1	1
Mode 3	Power off & Charge	1	0	1
Mode 4	Power on & Charge	1	1	1

CTL1 CTL2 CTL3: 0 0 0----> Out discharge, power switch Off
 CTL1 CTL2 CTL3: 0 x 1----> Dedicated charging port, auto-detect
 CTL1 CTL2 CTL3: 1 0 1----> Dedicated charging port, Divider Mode only
 CTL1 CTL2 CTL3: 1 1 1----> Charging downstream port, BC1.2.

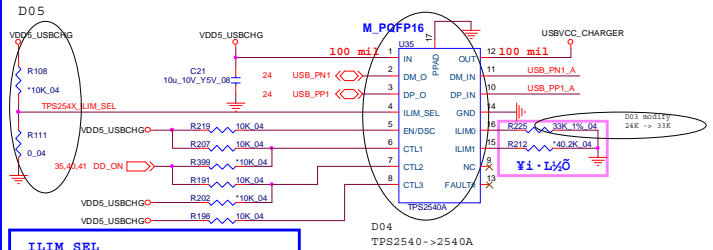


ILIM SEL
 (FOR TPS2543/TPS2540 | 3 | 0 | 0 | P)
 ILIM SEL=HI , FOR TPS2543
 ILIM SEL=LOW, FOR TPS2540A

USB3.0 PORT1

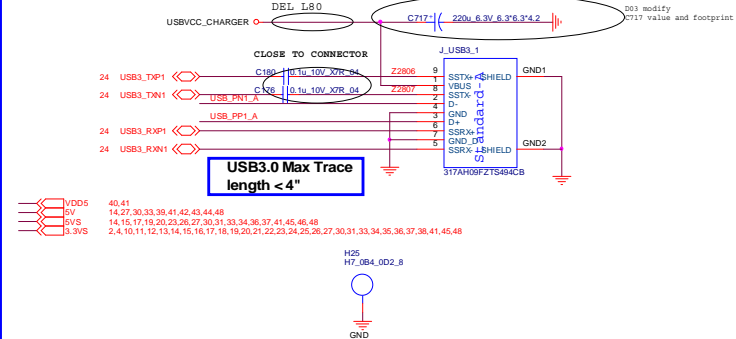


USB 2.0, CCD, Mini PCIE, LID


USB2.0 PORT

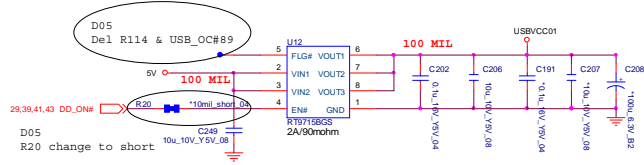

FOR Audio JACK BOARD
P17&P15|@Yf

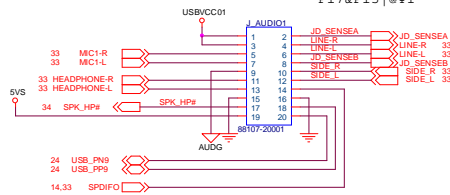

CCD

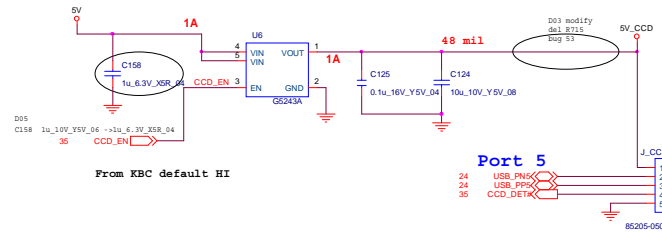


From KBC default HI

Port 5

24 USB_PN5K
24 USB_PP5K
35 CCD_DET#

VDD3	2,20,35,37,38,40,41,47
5V	14,27,29,33,39,41,42,43,44,48
3VS	14,15,17,19,20,23,29,27,31,33,34,36,37,41,45,46,48
3.3V	3,4,7,15,20,21,22,24,25,26,27,31,33,37,38,41,43,44
1.5V	2,4,10,11,12,13,14,15,16,17,18,19,20,21,22,23,24,25,26,27,29,31,33,34,35,36,37,38,41,45,48


MINI CARD

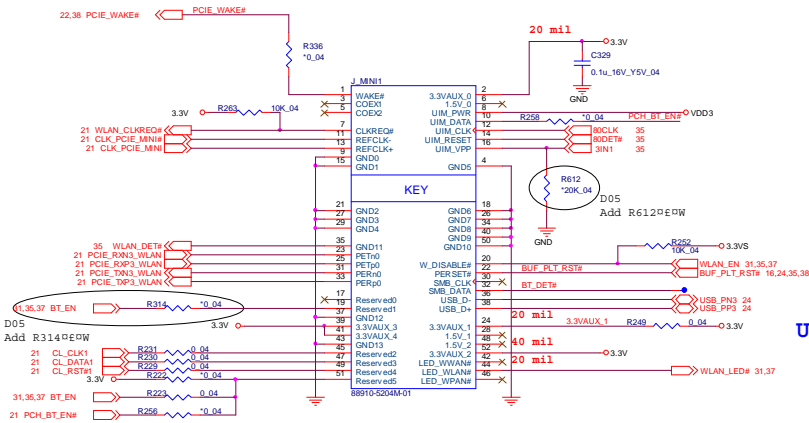

USB_P3




LID SWITCH IC

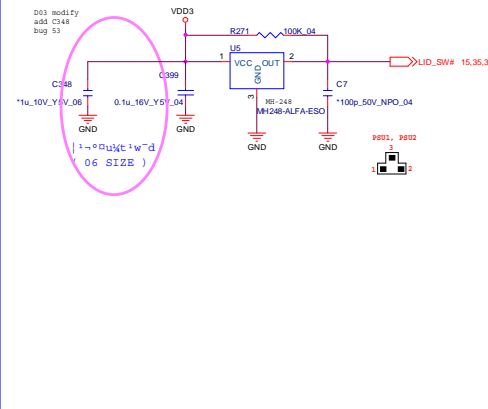


LED, Hotkey, LID SW, Fan

CPU FAN CONTROL

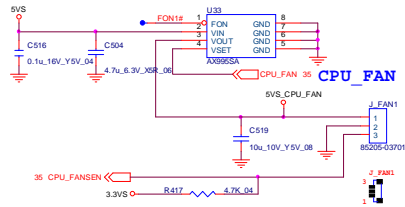


VGA FAN CONTROL


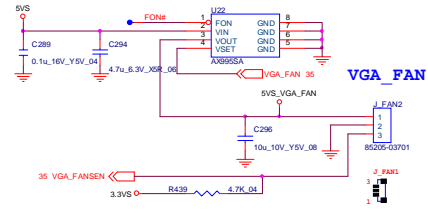


B.Schematic Diagrams

Sheet 31 of 61
LED, Hotkey, LID
SW, Fan




P150 only



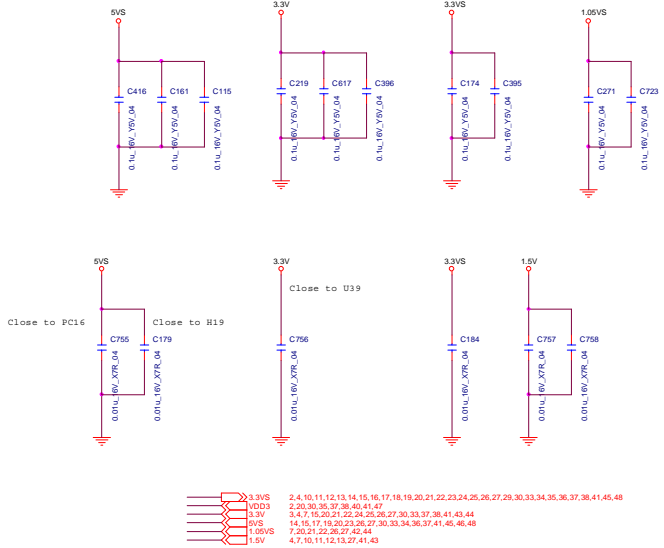
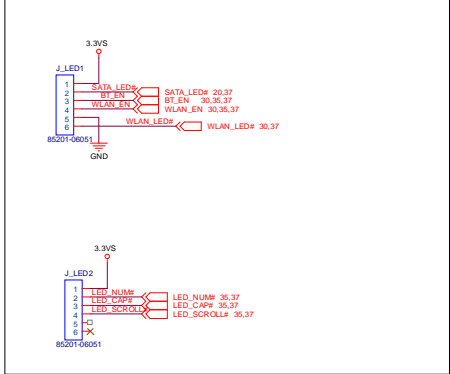


RJ 45

GIGA LAN

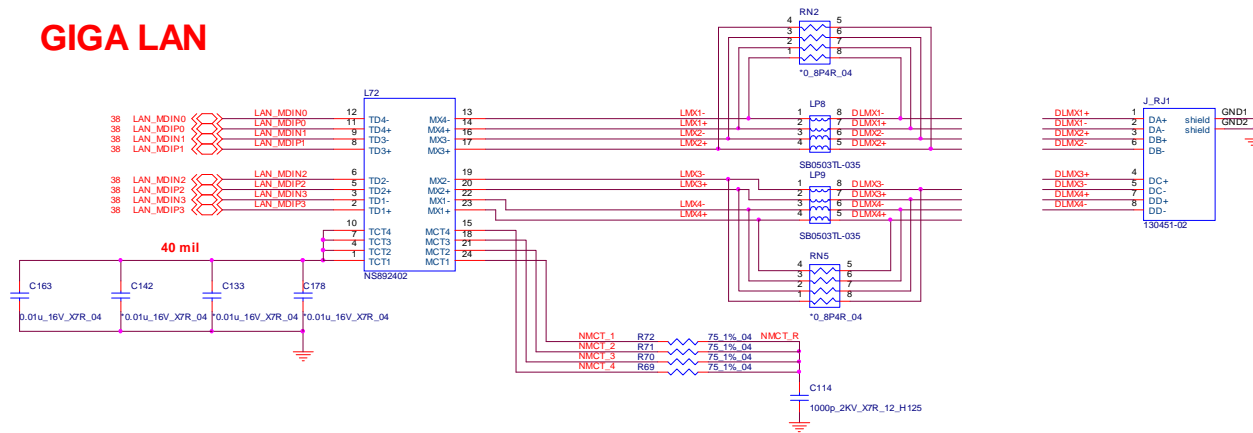


Sheet 32 of 61
RJ 45

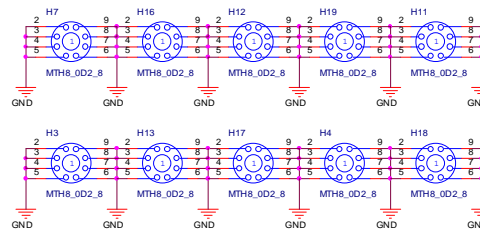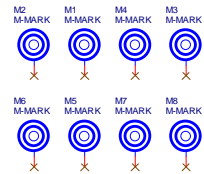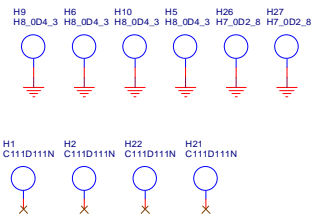


3.3V 3, 4, 7, 15, 20, 21, 22, 24, 25, 26, 27, 30, 31, 33, 37, 38, 41, 43, 44

Codec Realtek ALC892

Sheet 33 of 61
 Codec Realtek
 ALC892

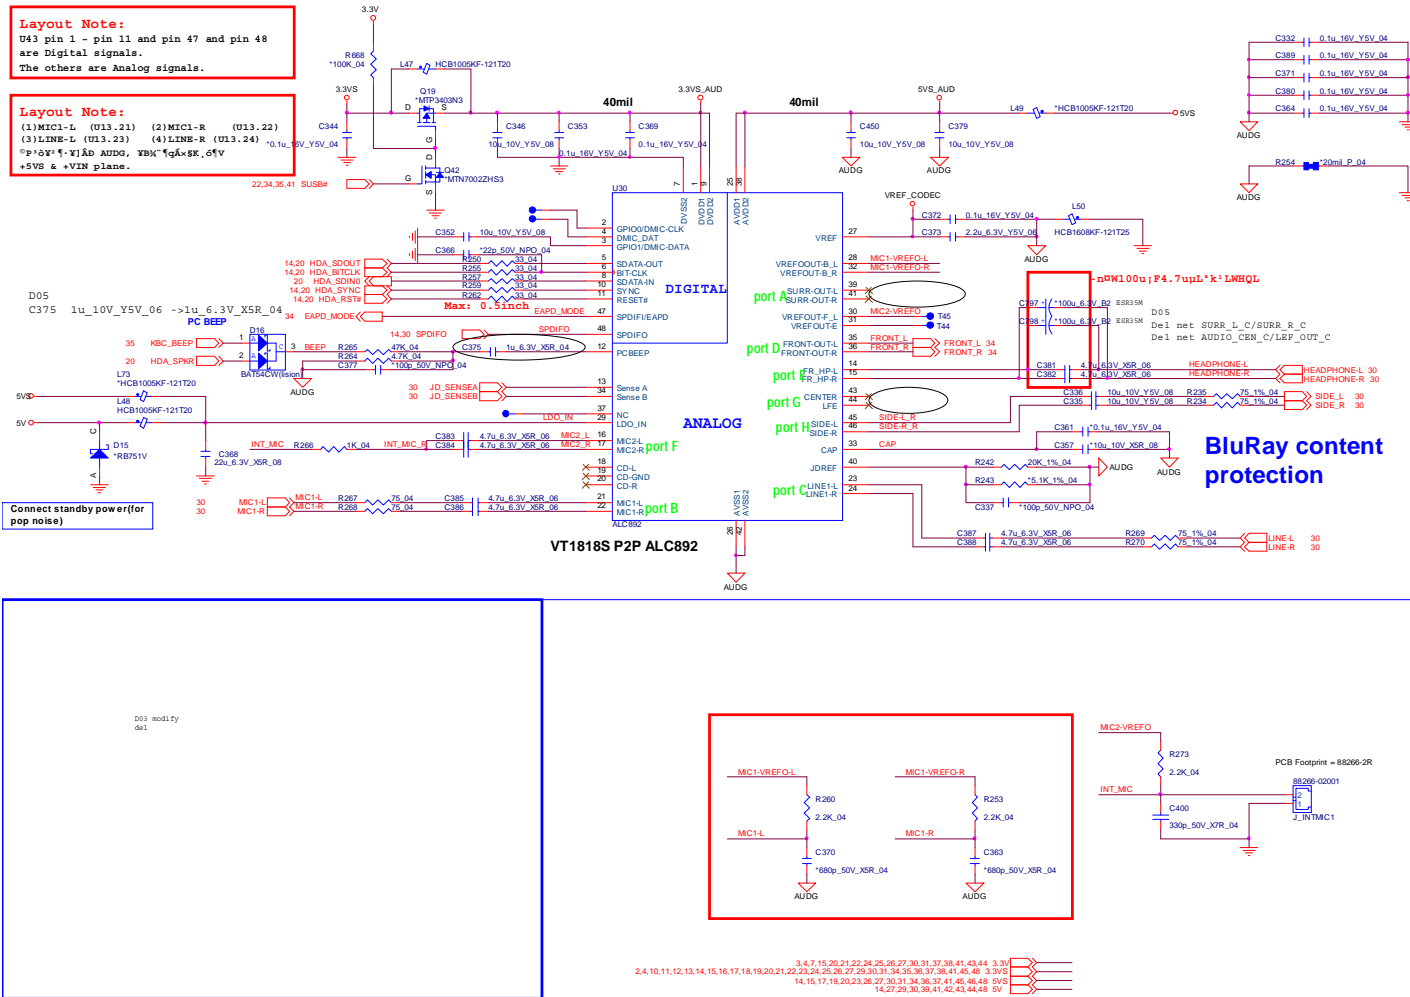

APA2607-TPA2008D2

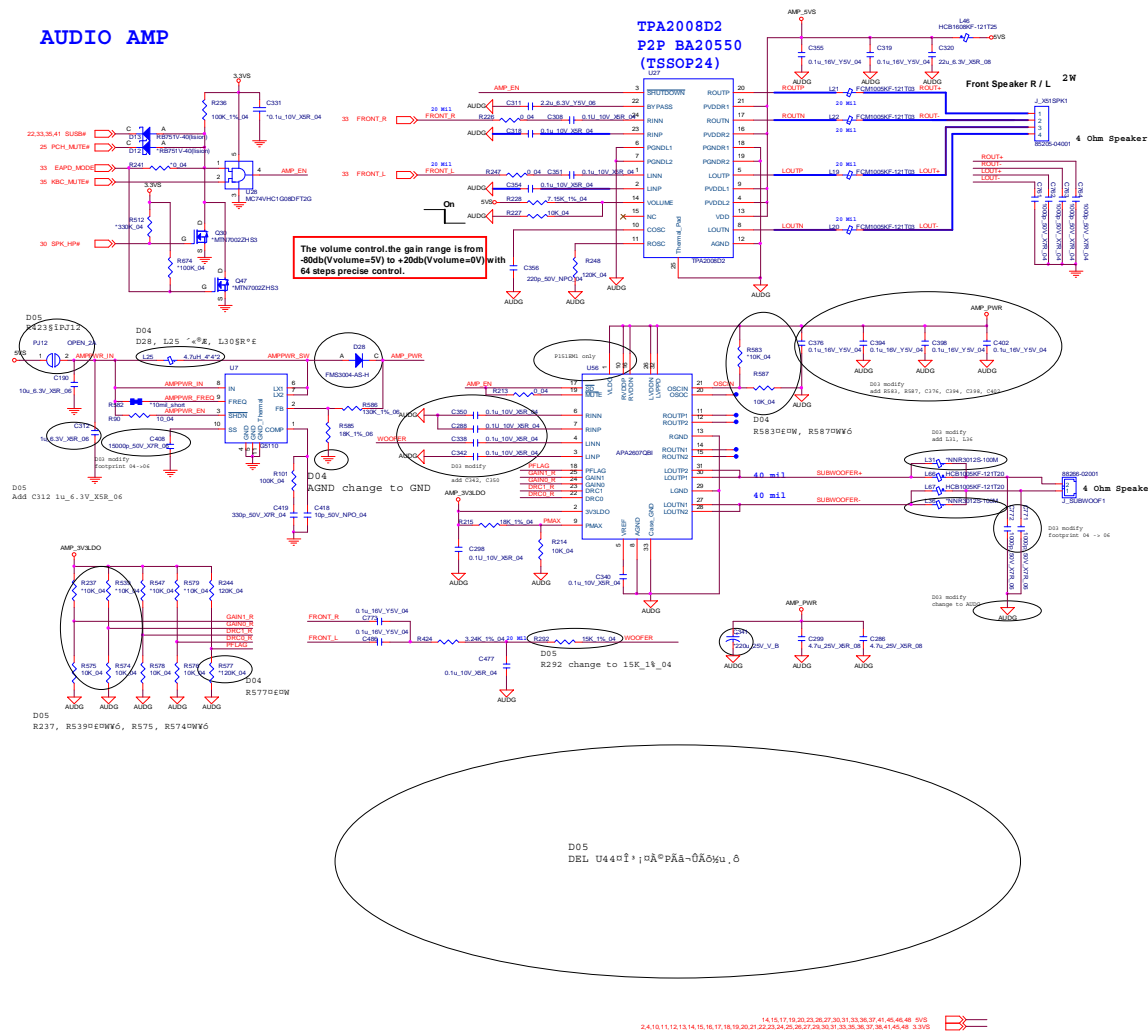


Sheet 34 of 61
 APA2607-
 TPA2008D2

B.Schematic Diagrams


KBC-ITE IT8518E

Sheet 35 of 61
KBC-ITE IT8518E


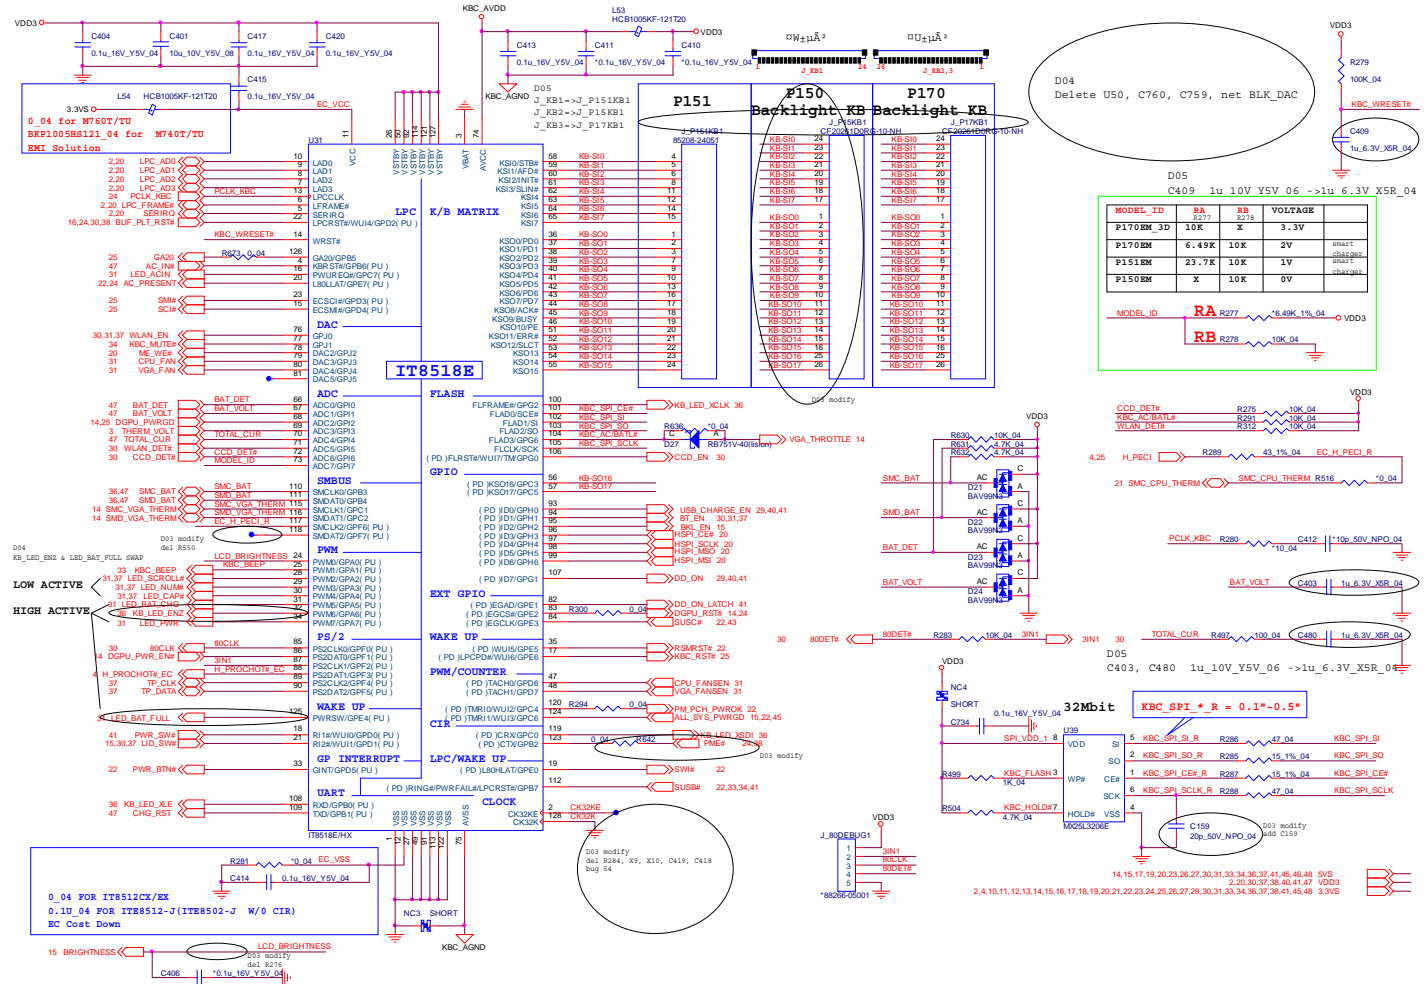


Backlight Keyboard

B.Schematic Diagrams

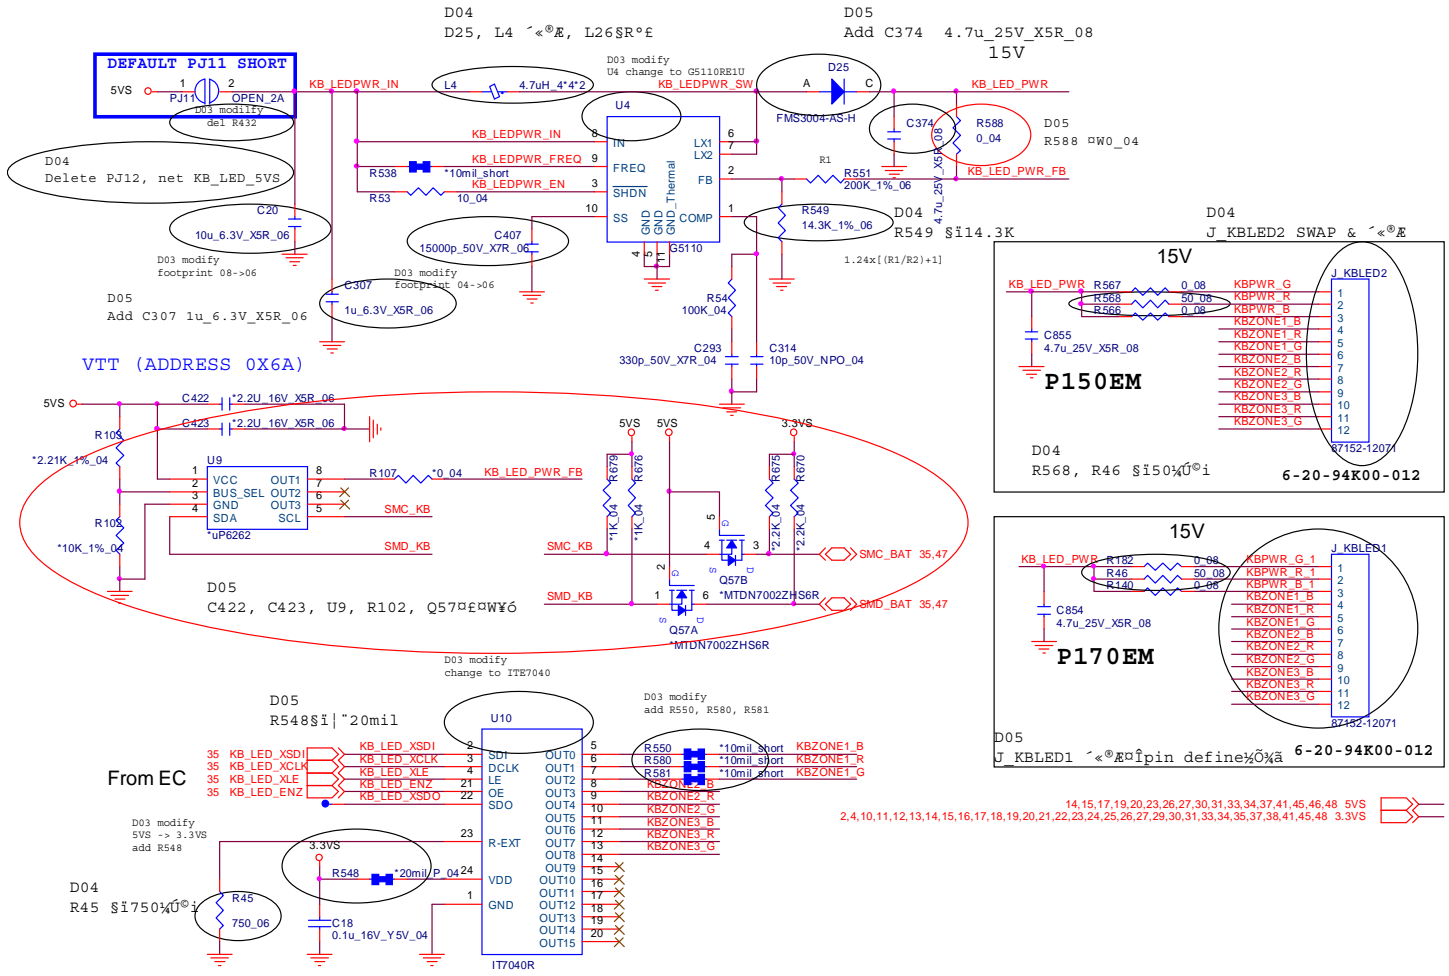

Sheet 36 of 61
Backlight
Keyboard




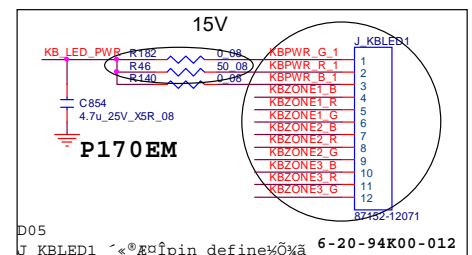
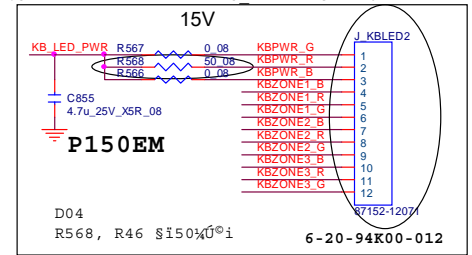


Schematic Diagrams

mSATA, FAN, TP, FP, MULTI-CON

B.Schematic Diagrams



Sheet 37 of 61
mSATA, FAN, TP,
FP, MULTI-CON

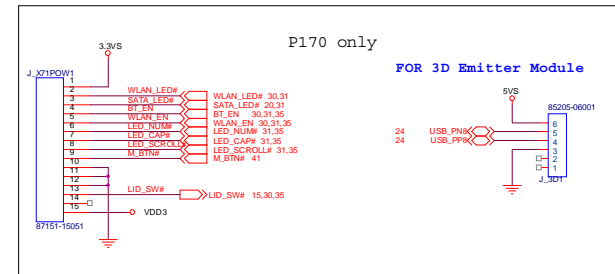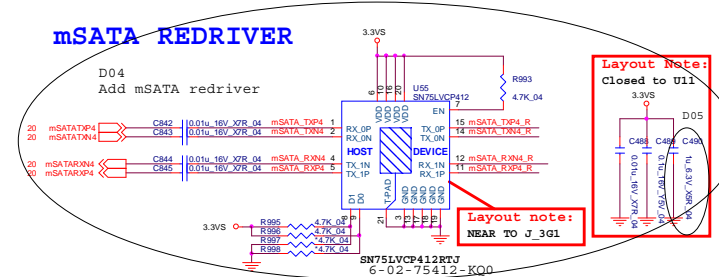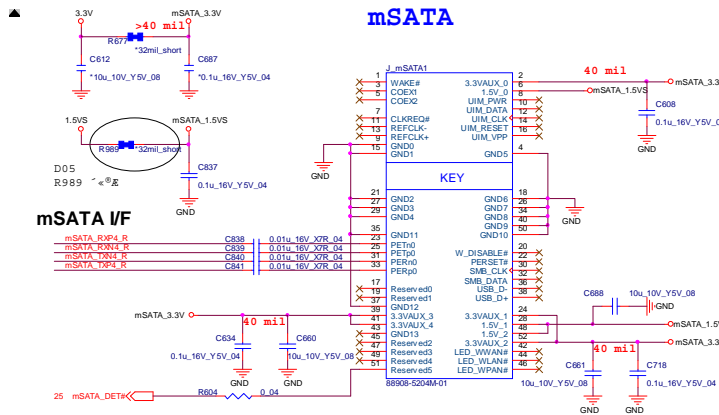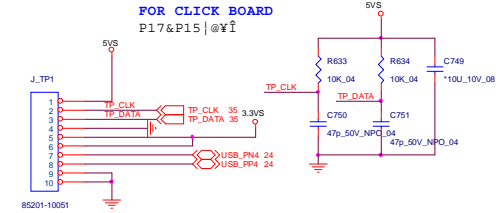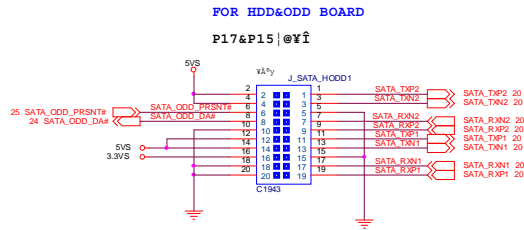

VDD3	2,20,30,35,38,40,41,47
3.3VS	2,4,10,11,12,13,14,15,16,17,18,19,20,21,22,23,24,25,26,27,29,30,31,33,34,35,36,38,41,45,48
3.3V	3,4,7,15,20,21,22,24,25,26,27,30,31,33,38,41,43,44
5VS	14,15,17,19,20,23,26,27,30,31,33,34,36,41,45,46,48
1.5VS	26,41

Card Reader RTL8411

LAN (RTL8411)

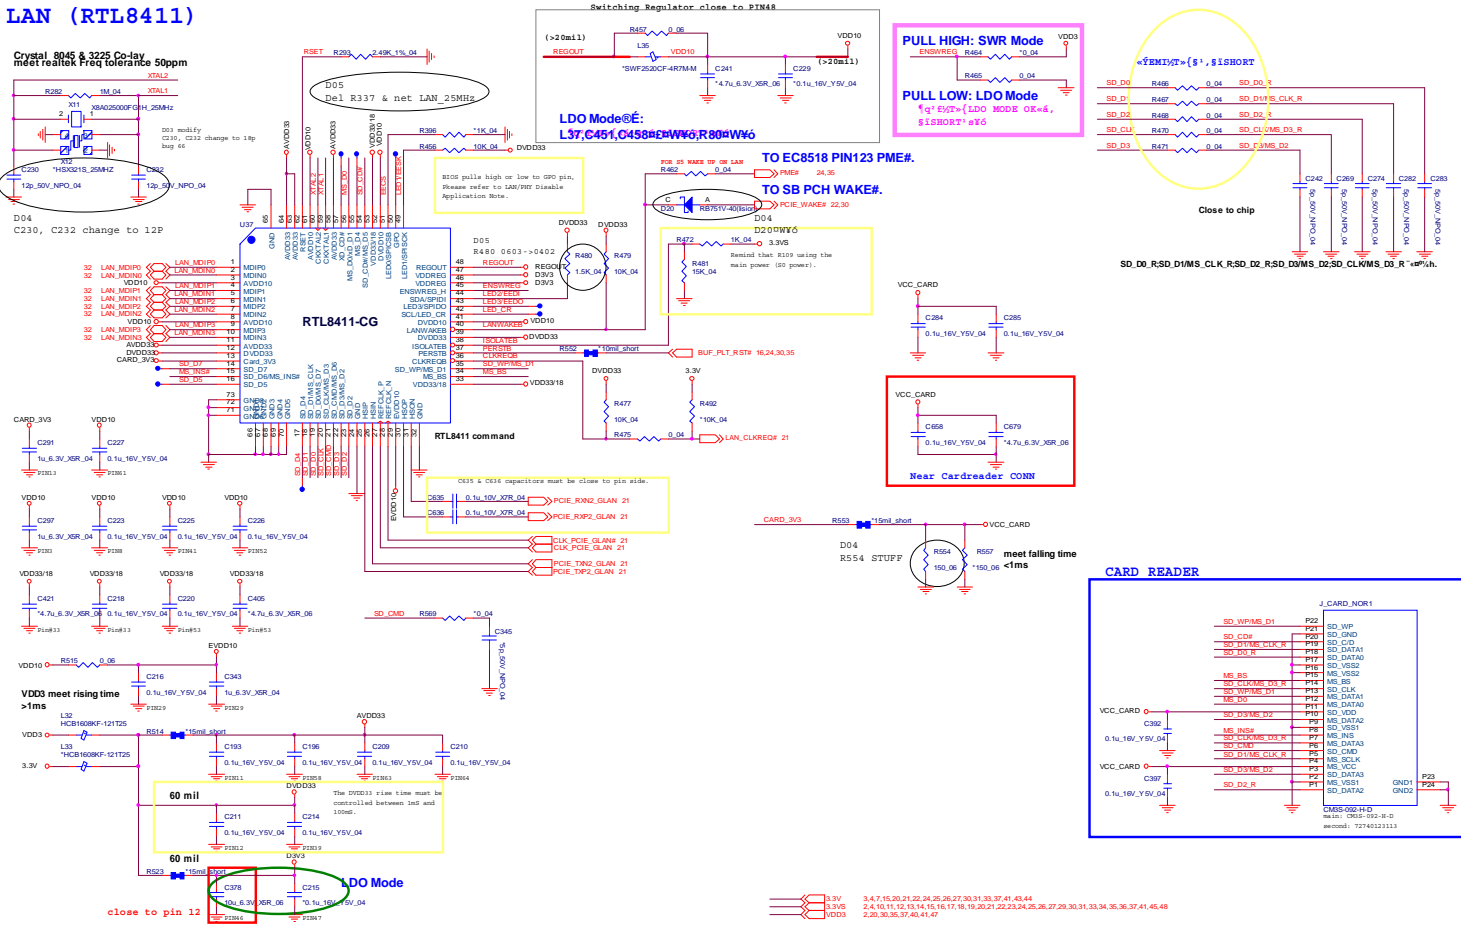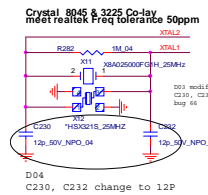

3.3V 3.4,7,15,20,21,22,24,25,26,27,30,31,33,37,41,43,44
3.3V 2,4,10,11,12,13,14,15,16,17,18,19,20,21,22,23,24,25,26,27,29,30,31,33,34,36,37,41,45,48
VDD03 2,30,30,36,37,45,41,47


Sheet 38 of 61
Card Reader
RTL8411

B.Schematic Diagrams

USB 3.0


Sheet 39 of 61
USB 3.0

USB3.0 PORT2

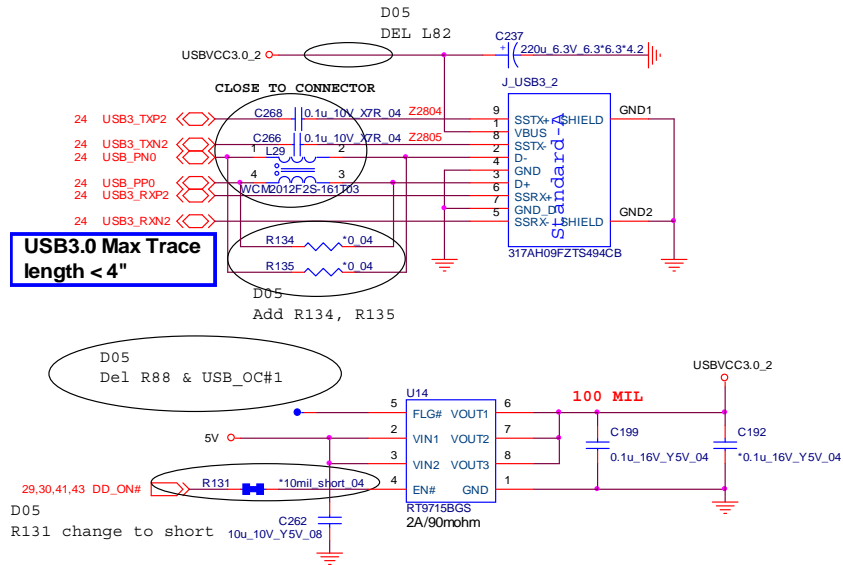

14,27,29,30,33,41,42,43,44,48 5V

VDD3, VDD5

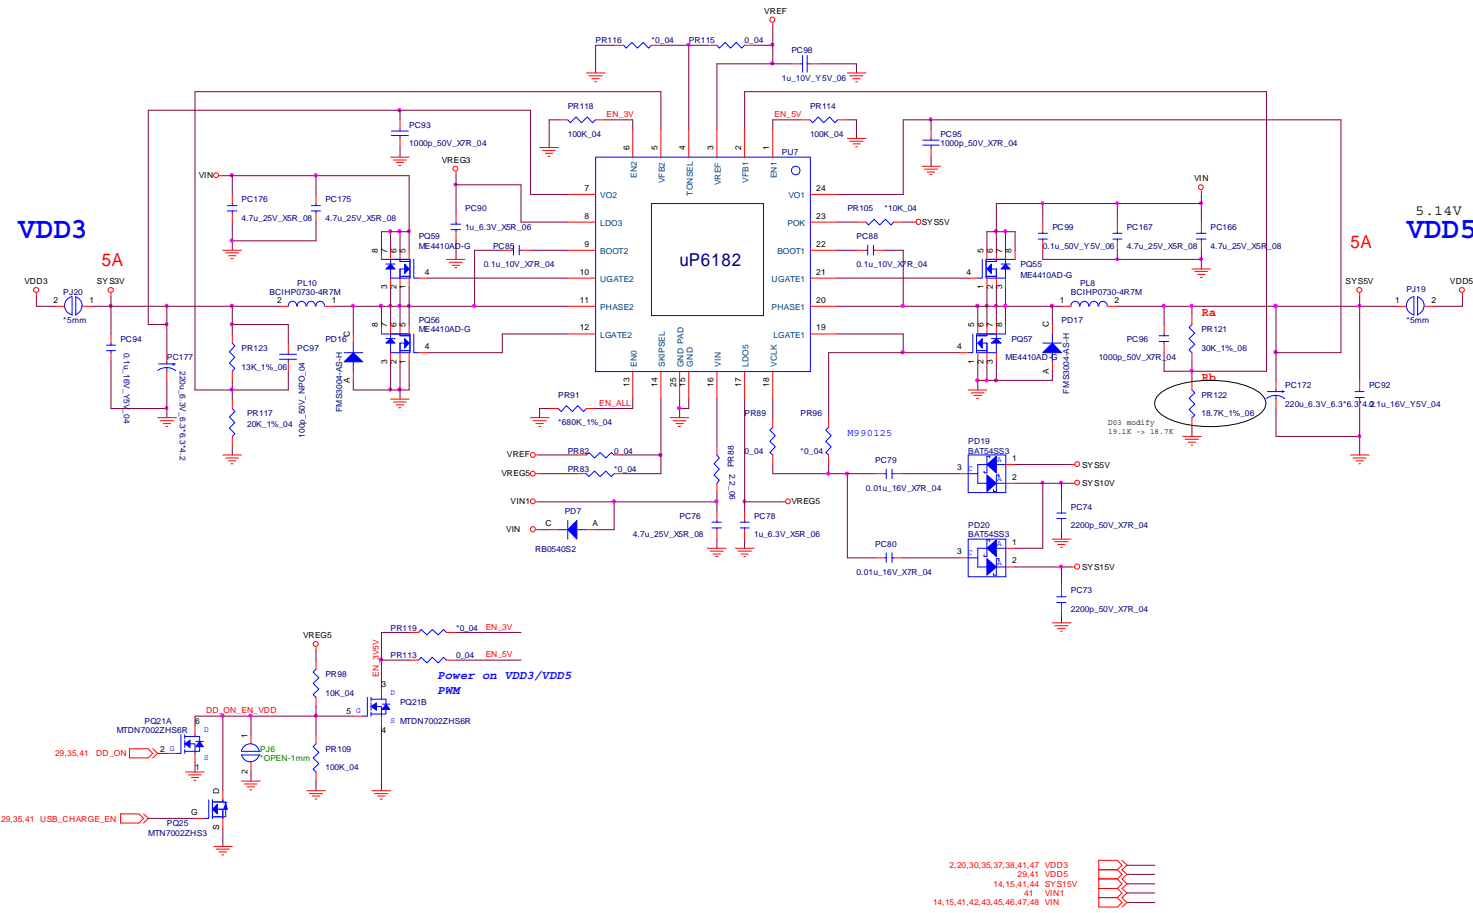




Sheet 40 of 61
VDD3, VDD5

B.Schematic Diagrams


Schematic Diagrams

5VS, 3.3VS, 1.5VS







Sheet 41 of 61
5VS, 3.3VS, 1.5VS

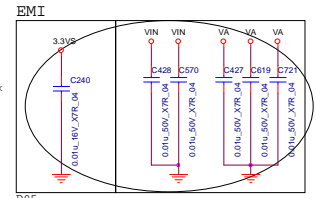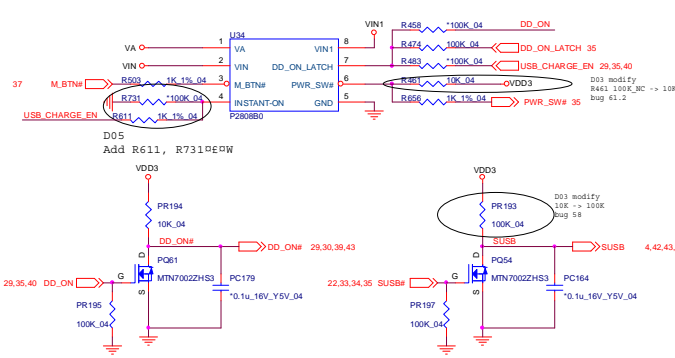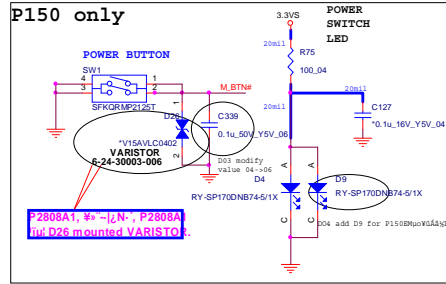

D05
C240: 0.1u_16V_Y5V_04 -> 0.01u_16V_X7R_04
C428, C570, C427, C619, C721:
0.1u_50V_Y5V_06 -> 0.01u_50V_X7R_04




D05
Add C600, C491, C627 0.01u_50V_X7R_04

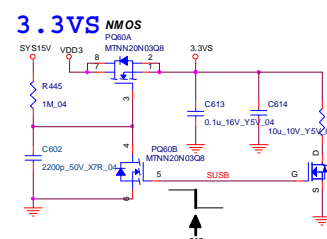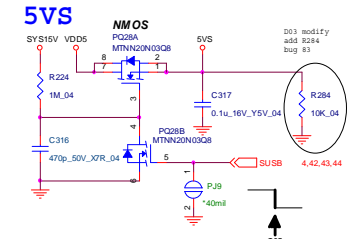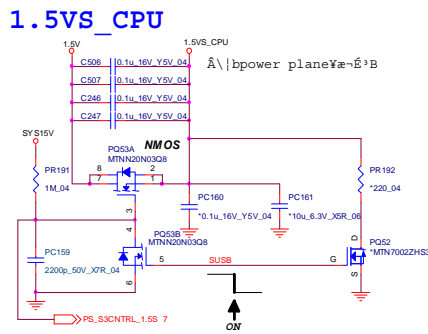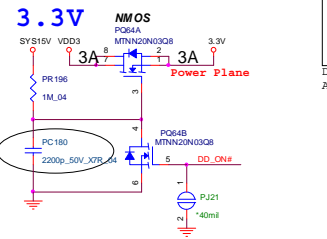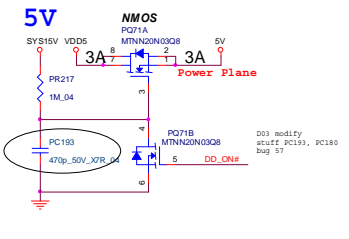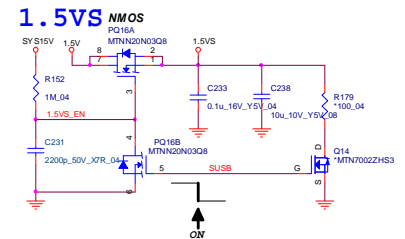

40	VIN1
47	VIN
14,15,40,42,43,45,46,47,48	VIN
47	1.5VS_CPU
4,7,10,11,12,13,27,31,43	1.5VS
26,37	1.5VS
14,15,40,44	SY515V
29,40	VDD5
2,30,35,37,38,40,47	VDD3
14,15,17,18,20,23,26,27,30,31,33,34,36,37,45,46,48	5V
3,4,7,15,20,21,22,24,25,26,27,30,31,33,37,38,43,44	3.3V
2,4,10,11,12,13,14,15,16,17,18,19,20,21,22,23,24,25,26,27,29,30,31,33,34,35,36,37,38,45,46	3.3VS

Power 1.05VS

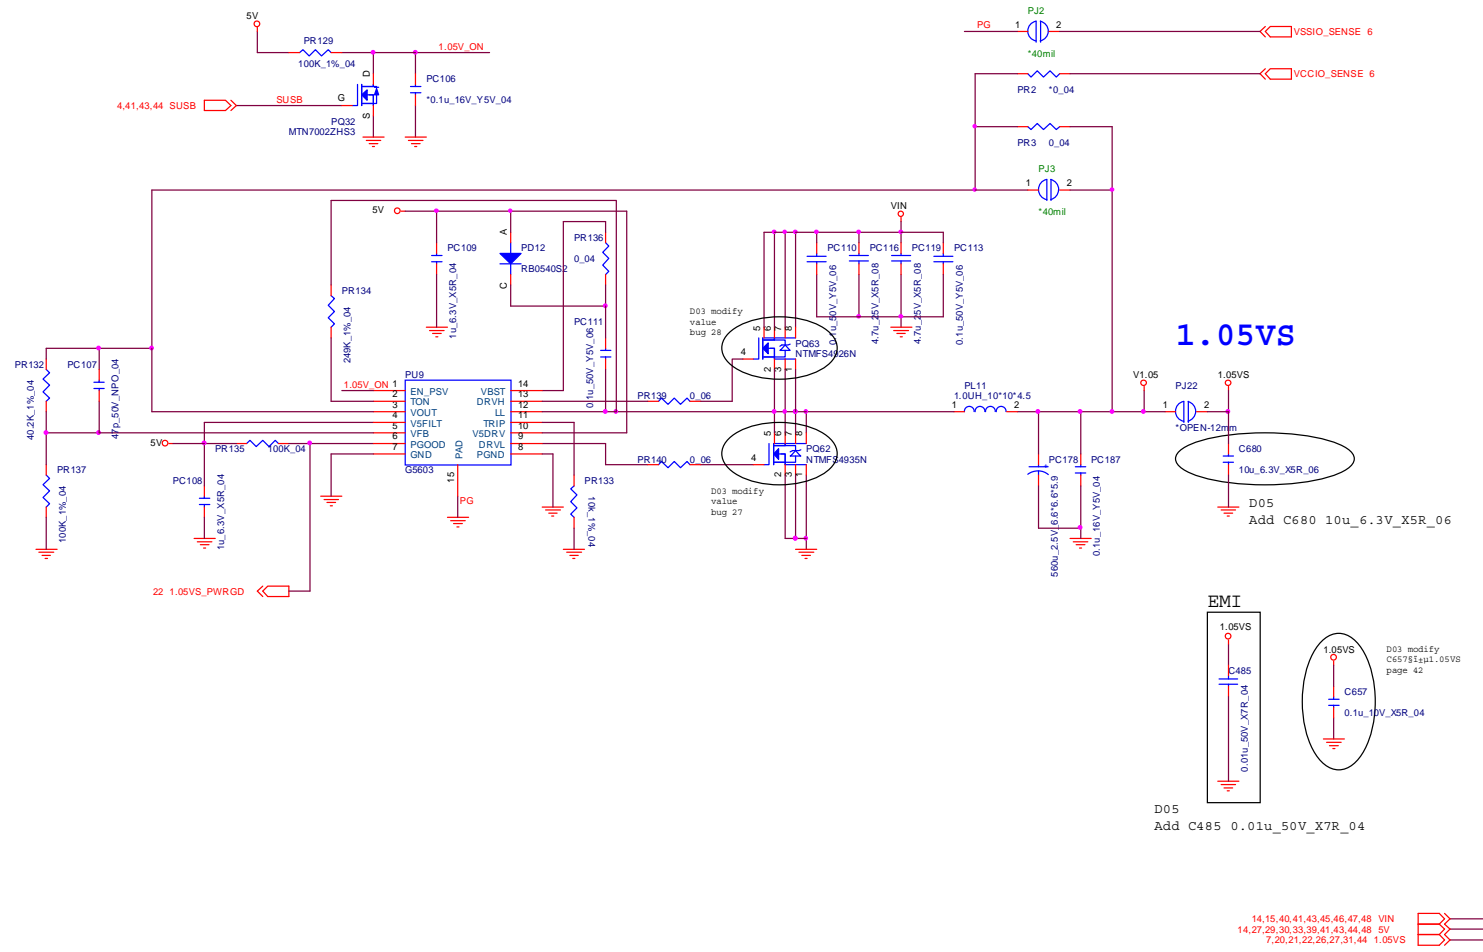



Sheet 42 of 61
Power 1.05VS

Schematic Diagrams


Power 1.5V/VTT_MEM

B.Schematic Diagrams

Sheet 43 of 61
Power 1.5V/
VTT_MEM

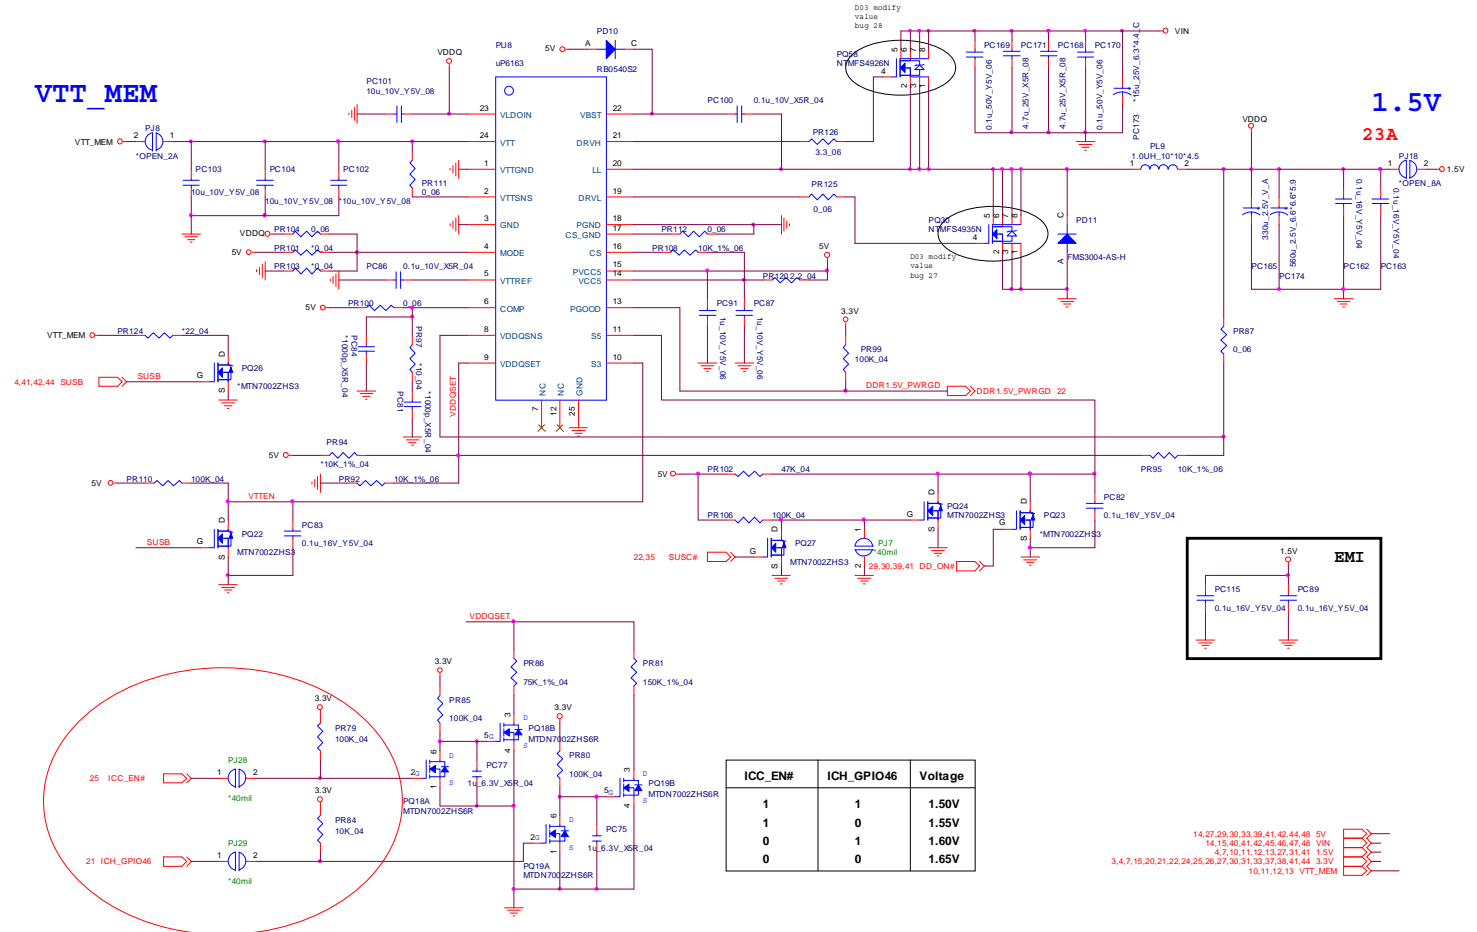


Power 1V, 1.8VS

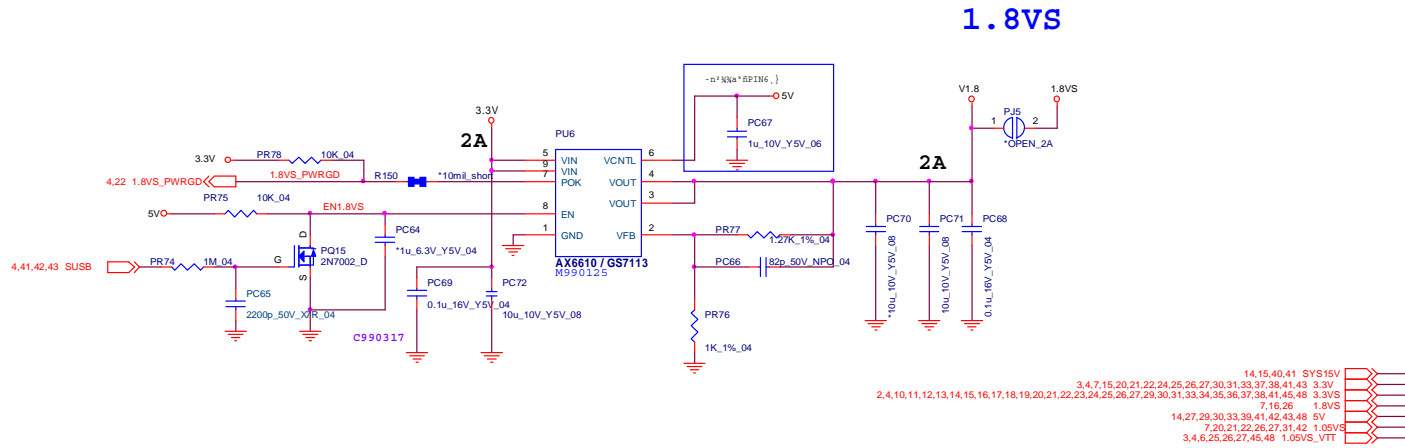


Sheet 44 of 61
 Power 1V, 1.8VS

B.Schematic Diagrams

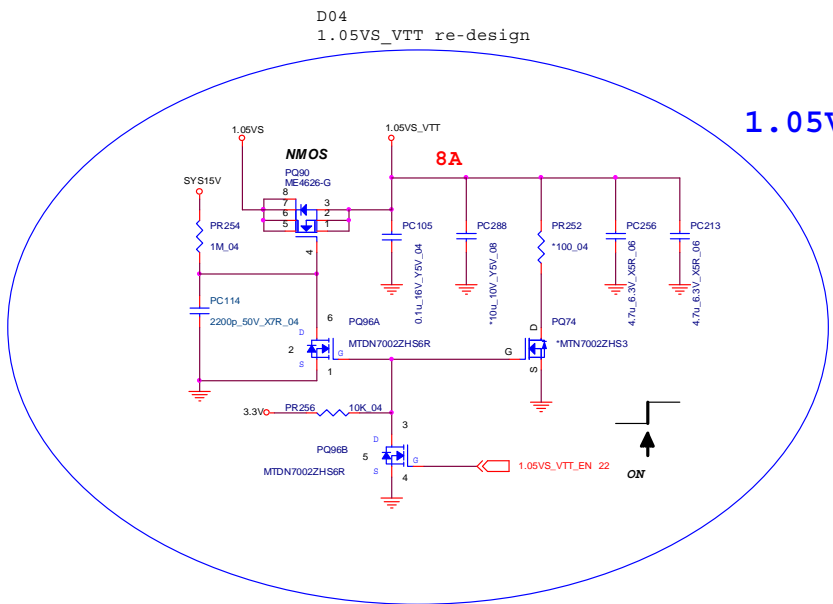


Power V-Core 1

Sheet 45 of 61
Power V-Core 1

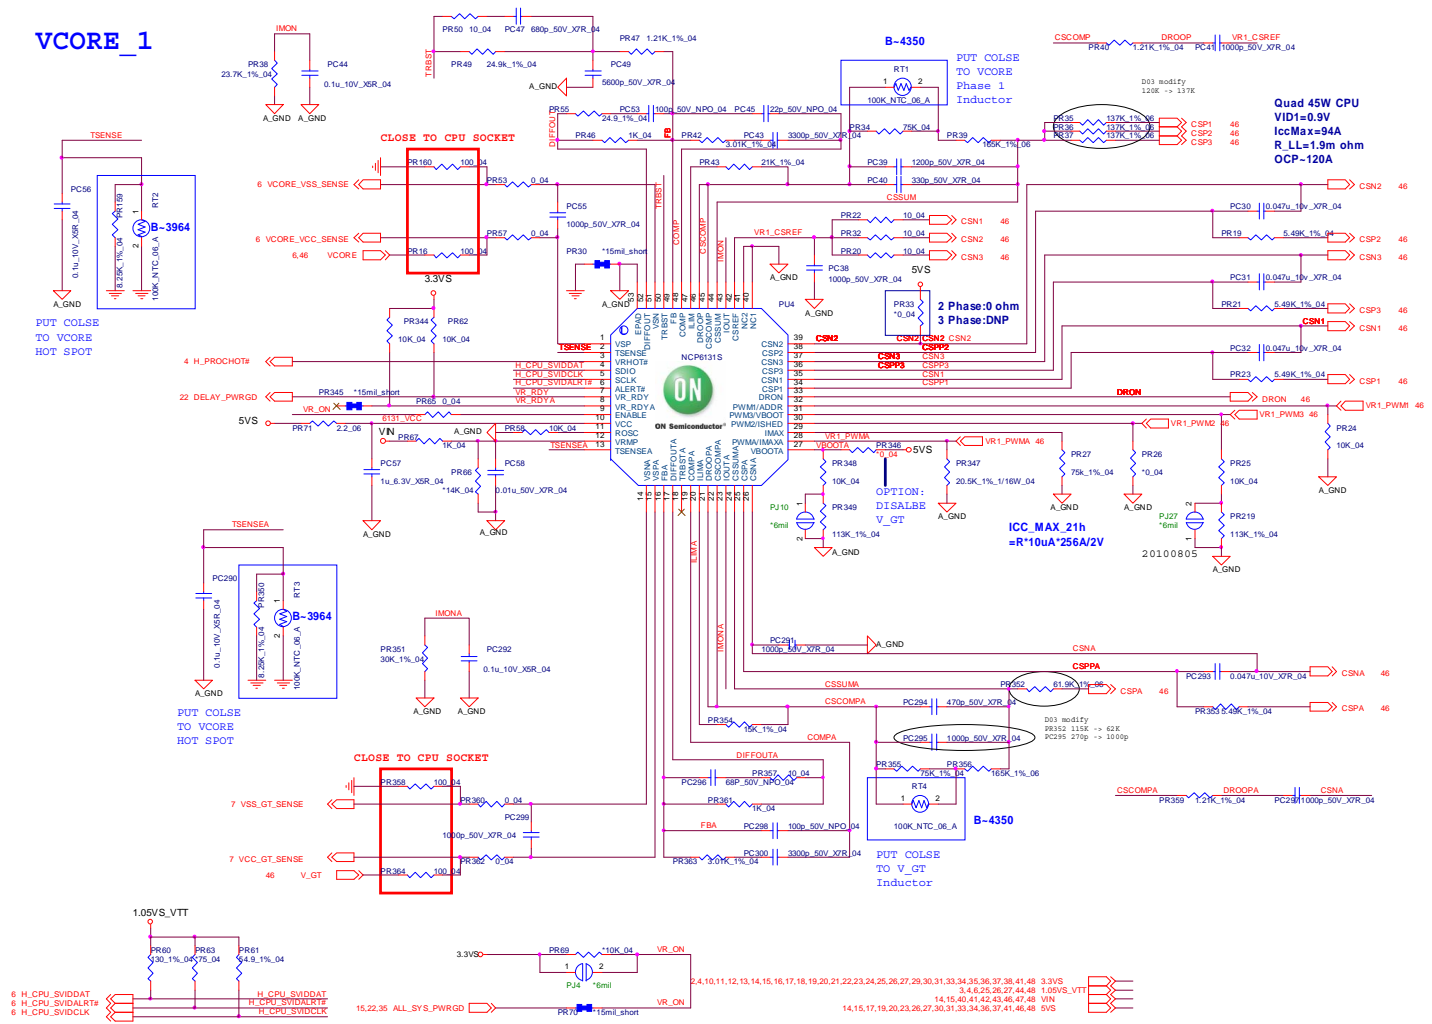

Power V-Core 2

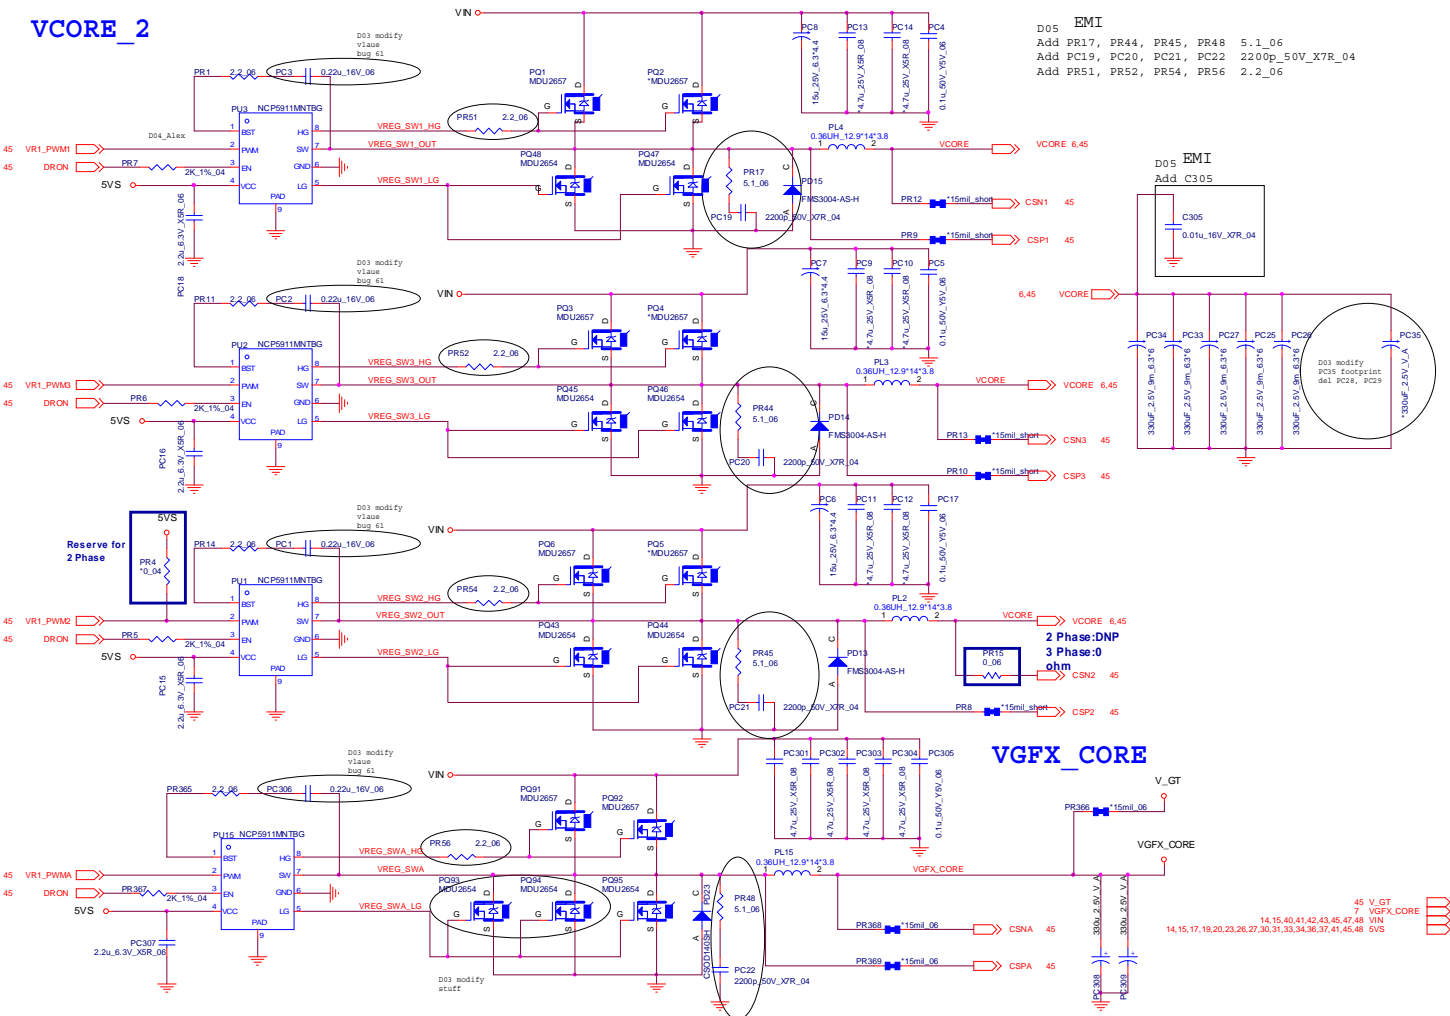

D05 EMI
 Add PR17, PR44, PR45, PR48 5.1_06
 Add PC19, PC20, PC21, PC22 2200p_50V_X7R_04
 Add PR51, PR52, PR54, PR56 2.2_06

D05 EMI
 Add C305
 0.01u_16V_X7R_04

Sheet 46 of 61
 Power V-Core 2

B.Schematic Diagrams

2 Phase:DNP
 3 Phase:0
 ohm


VGFX_CORE

45 V_GT
 7 VGFX_CORE
 14,15,17,19,20,23,26,27,30,31,33,34,36,37,41,45,48 VVS

Schematic Diagrams

AC_In, Charger


Sheet 47 of 61
AC_In, Charger

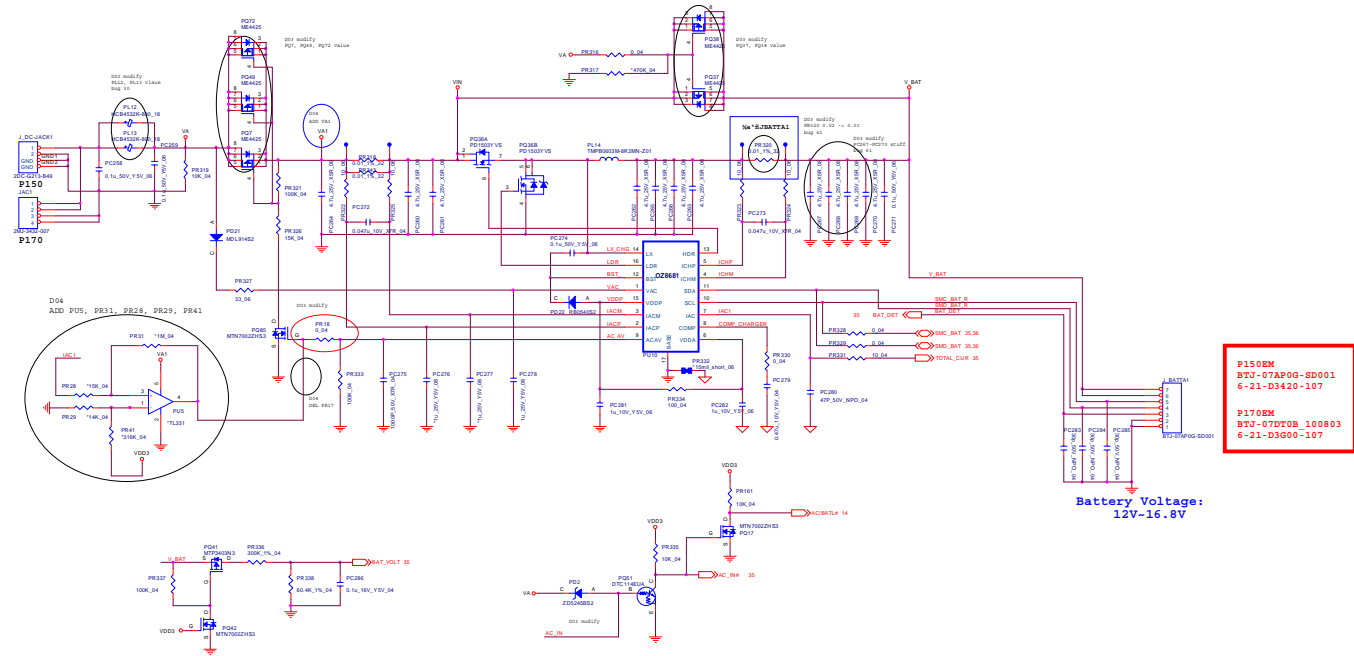

P150EM
BTJ-07AP0G-SD001
6-21-D3420-107

P170EM
BTJ-07DFOB_100803
6-21-D3G00-107



Battery Voltage:
12V-16.8V

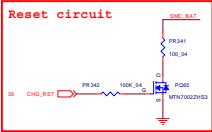

- PCB Layout notes**
- 1) All power traces should be routed on the outer layers
GNDP, VAD, VBT, VLS, LX, VCHG, VBATT
 - 2) Use Kelvin connections for R1, R6
(separated force and measurement traces)
 - 3) R23 and R24 are dummy resistors, for layout purposes only
(serves as single point connection between GNDP & GNDN)
 - 4) Footprint TO-236 is equivalent to SOT-23
 - 5) Footprint SRF1P is a single hole axial pad
 - 6) All resistors, capacitors and semiconductors are SMD
 - 7) Potentiometers, and test points are axial devices



Power 0.85VS

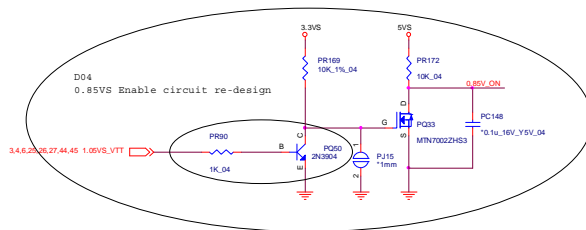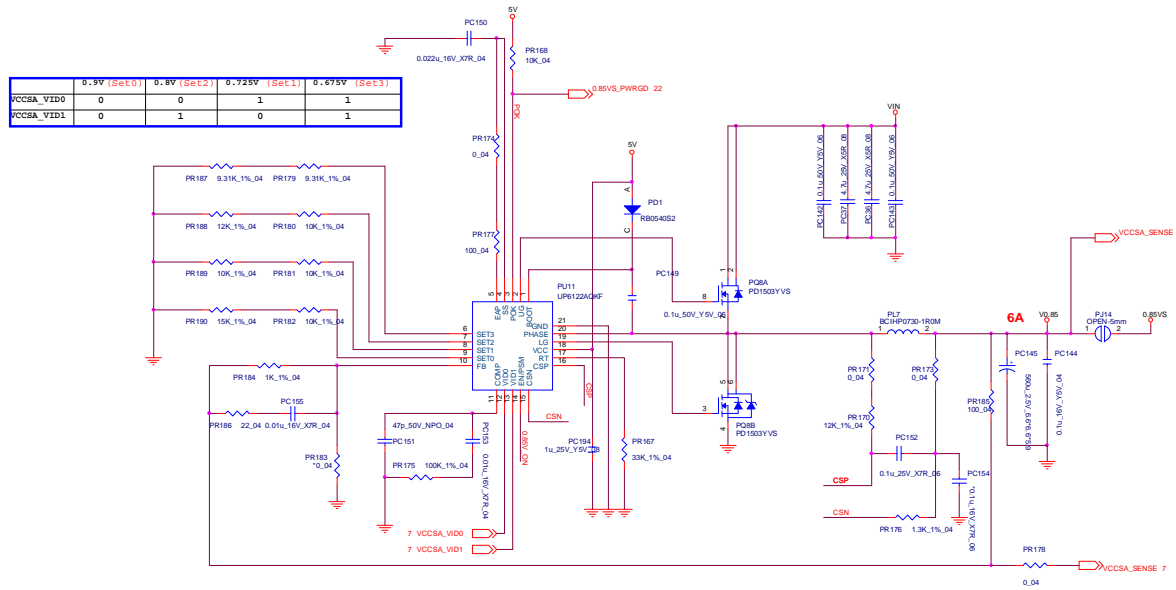

- 5V 14,16,17,18,20,23,26,27,30,31,33,34,36,37,41,46,48
- 3.3V 2,4,10,11,12,13,14,15,16,17,18,19,20,21,22,23,24,25,26,27,29,30,31,33,34,35,36,37,38,41,46
- 5V 14,27,29,30,33,39,41,42,43,44
- 0.85VS 7
- VIN 14,15,40,41,42,43,46,48,47


Sheet 48 of 61
Power 0.85VS

B.Schematic Diagrams


Audio Board

Sheet 49 of 61
Audio Board


USB PORT

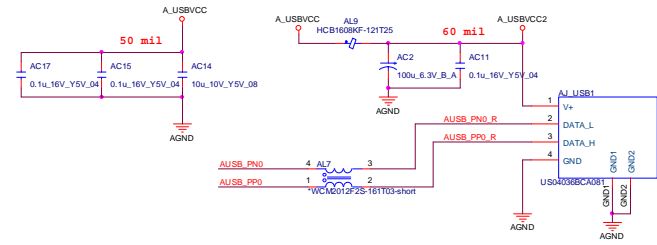


AUDIO JACK

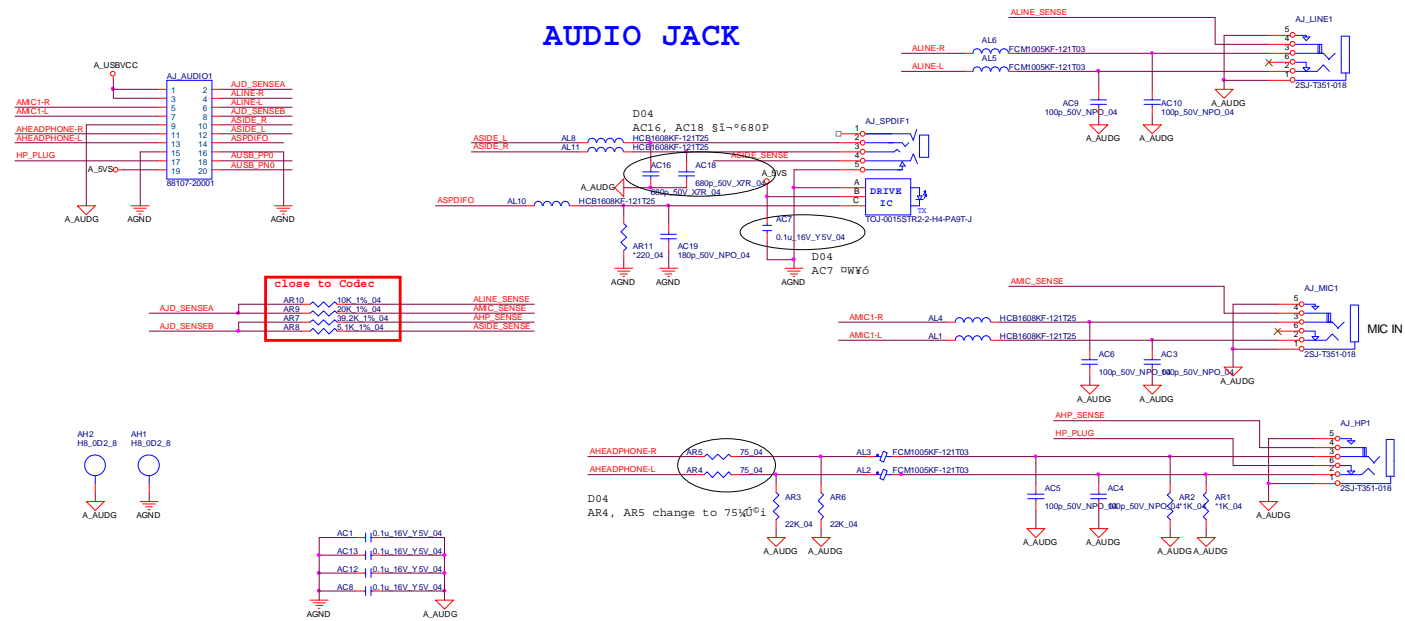

P150 ODD Board

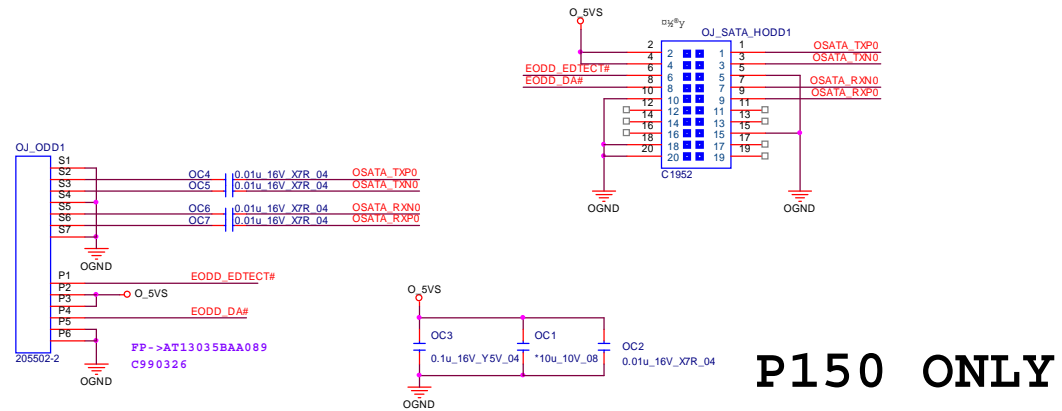

P150 ONLY

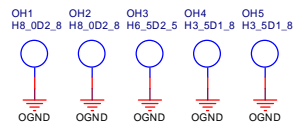


Sheet 50 of 61
P150 ODD Board


B.Schematic Diagrams

Schematic Diagrams

P150 Click Board



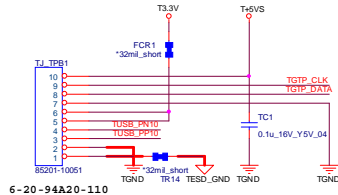


It is strongly recommended that the TESD_GND has a dedicated connection to the system chassis or cable shield.

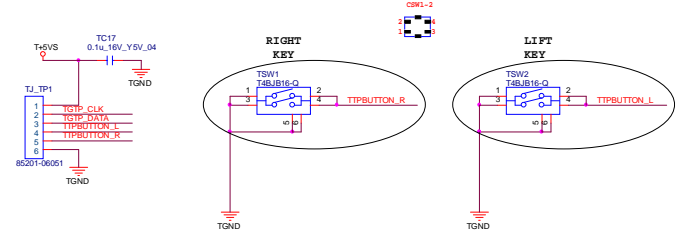

B.Schematic Diagrams

Sheet 51 of 61
P150 Click Board


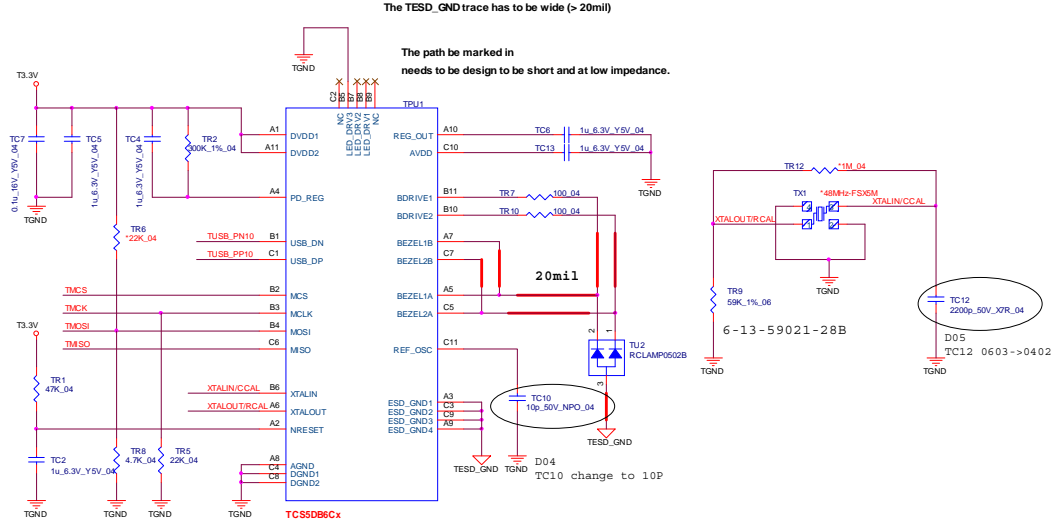
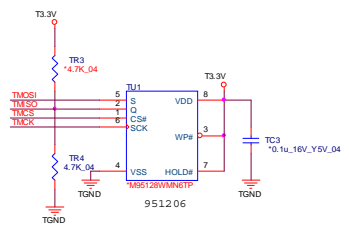


P150 ONLY

W/O finger printer P/N: 6-71-P15E2-D01-1

P150 LED 1 Board






P17&P15

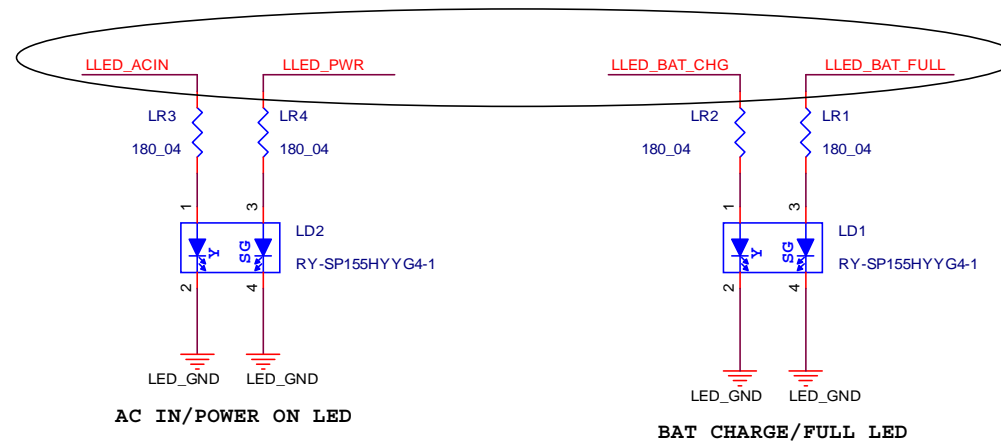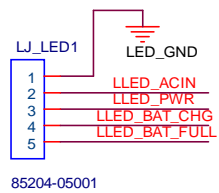

Sheet 52 of 61
 P150 LED 1 Board





P150 LED 2 Board

Sheet 53 of 61
P150 LED 2 Board

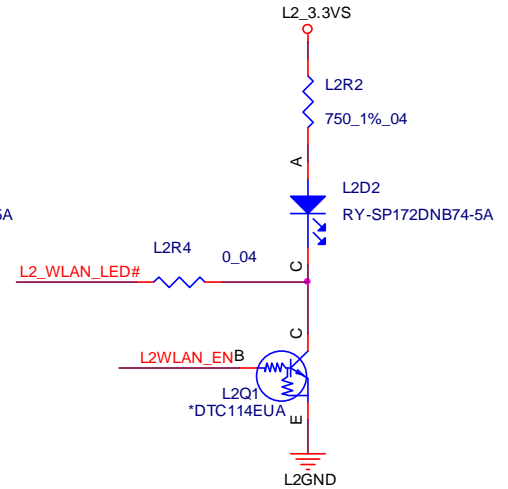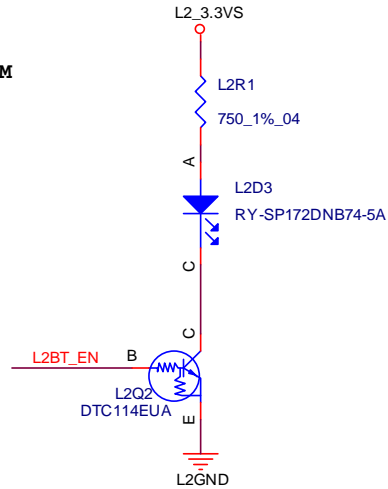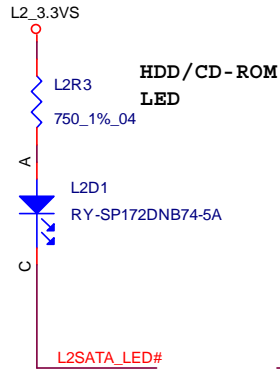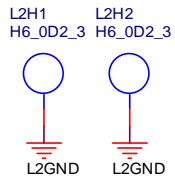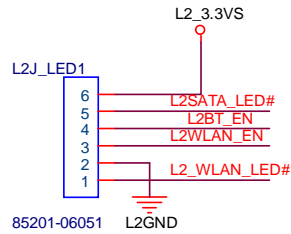


LED

P150 LED 3 Board

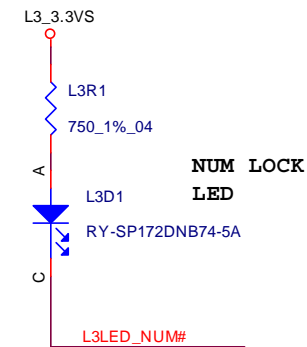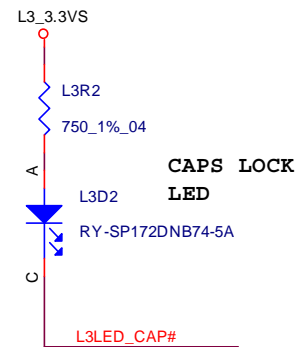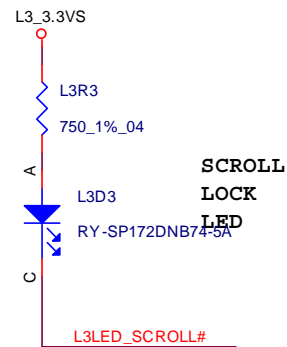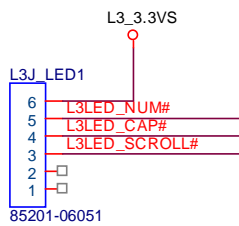



Sheet 54 of 61
 P150 LED 3 Board

B.Schematic Diagrams

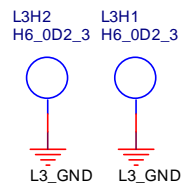

Schematic Diagrams



P170 HDD & ODD Board

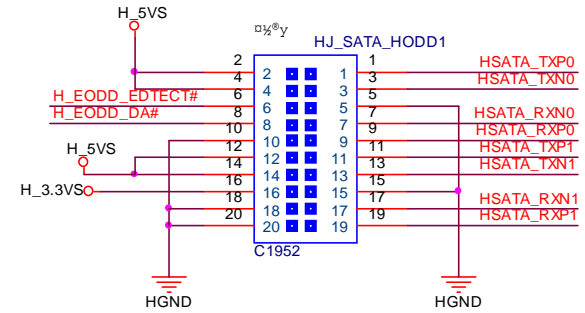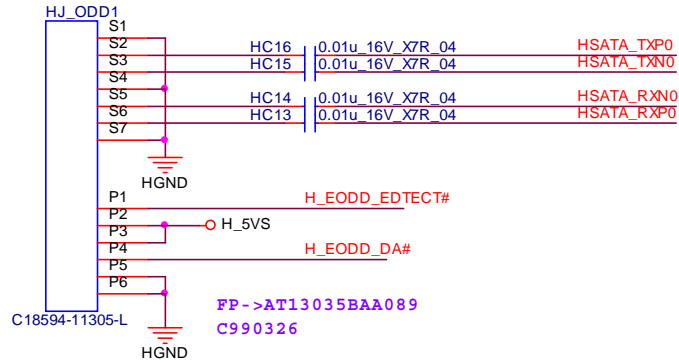




B.Schematic Diagrams

Sheet 55 of 61
P170 HDD& ODD
Board








P170 ONLY

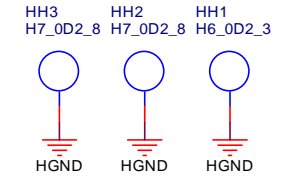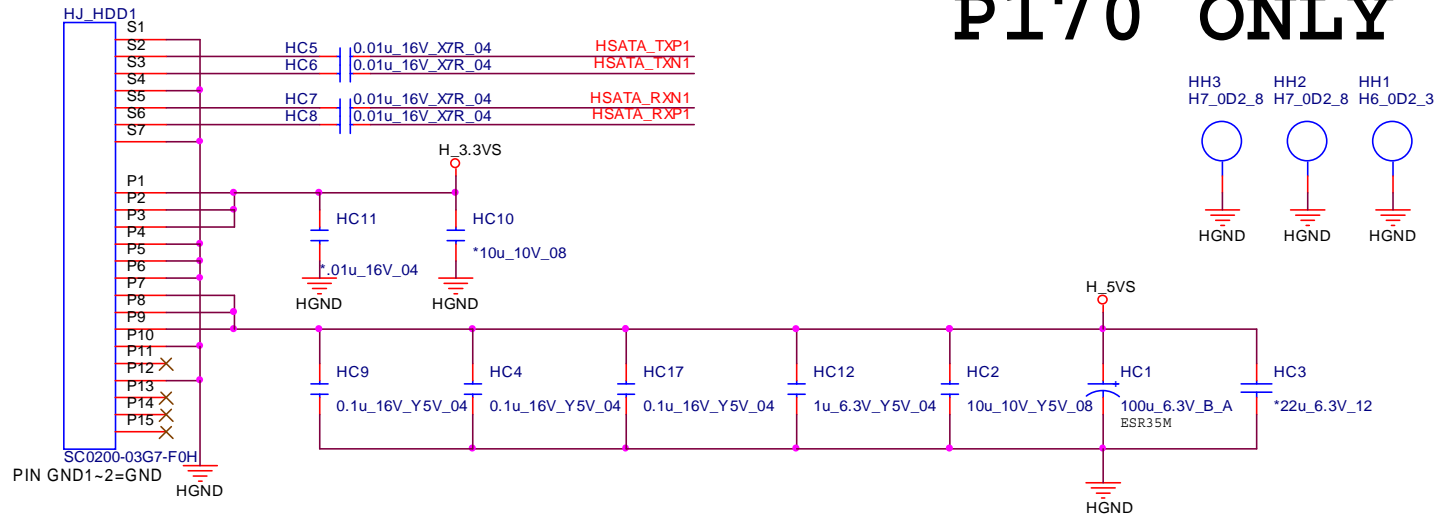

P170 LED Board

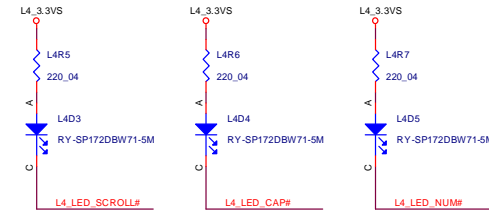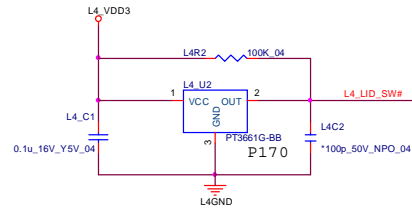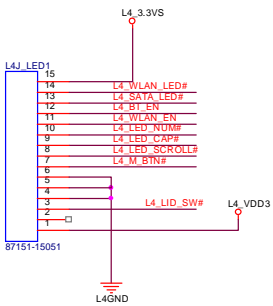


Sheet 56 of 61
P170 LED Board

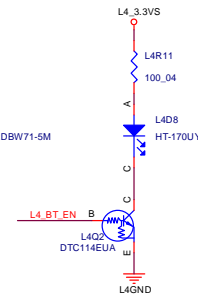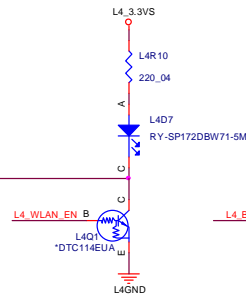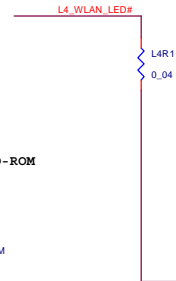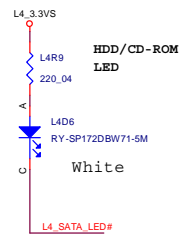
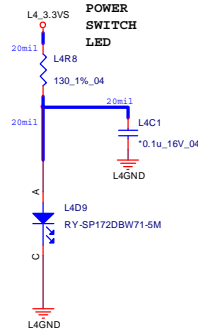
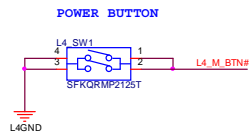


Schematic Diagrams

P170 Click Board

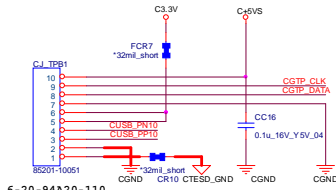


It is strongly recommended that the **TESD_GND** has a dedicated connection to the system chassis or cable shield.

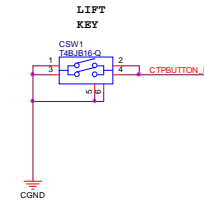
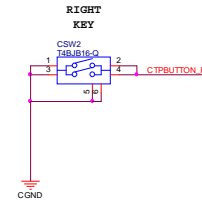
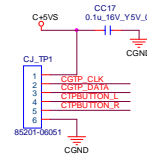


P170 ONLY




Sheet 57 of 61
P170 Click Board

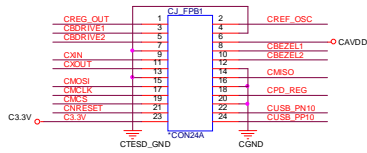



Place Button

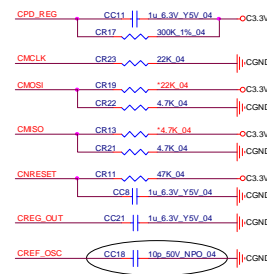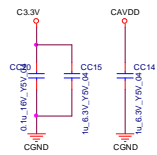


D04
CC18 change to 10P

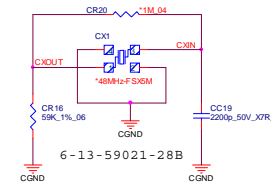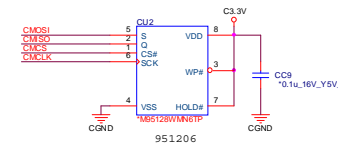

P170 Fingerprint Board

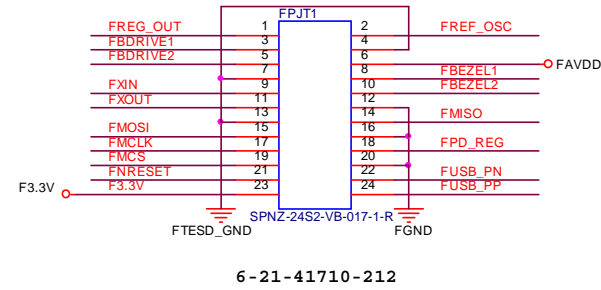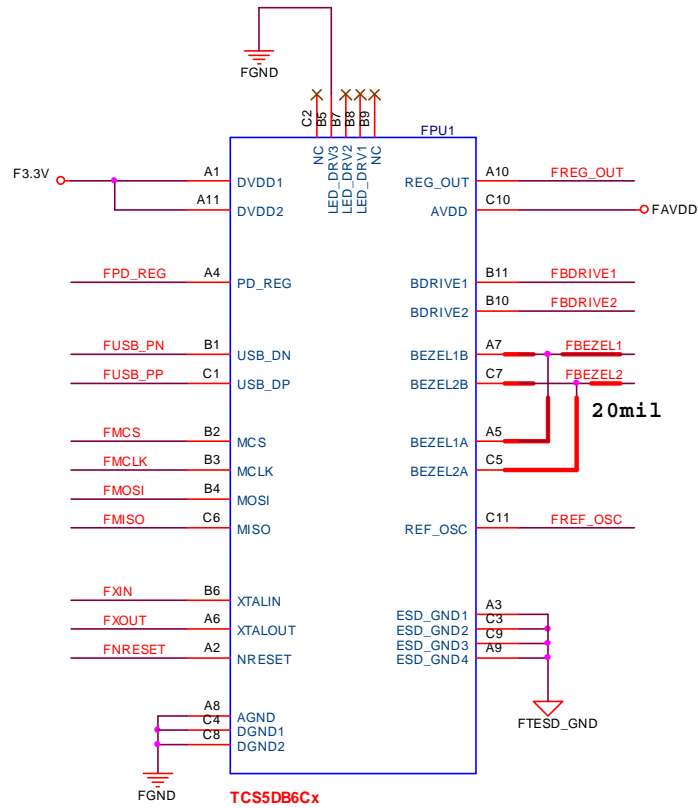


P170 ONLY








Sheet 58 of 61
P170 Fingerprint Board

P150 HDD Board

Sheet 59 of 61
P150 HDD Board

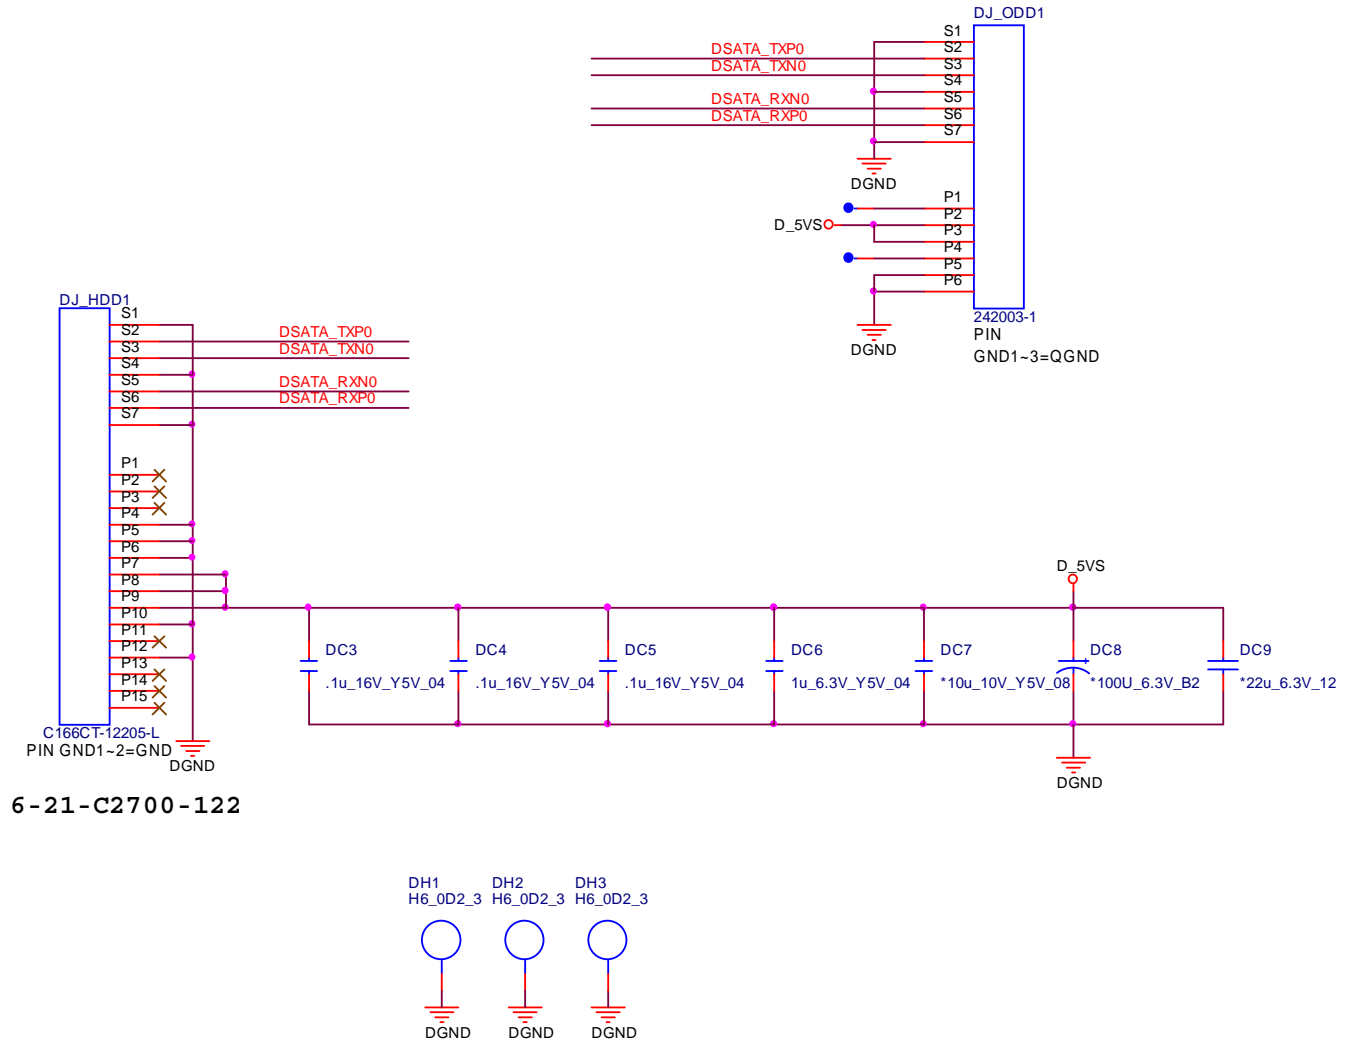






P150 LED Board_L

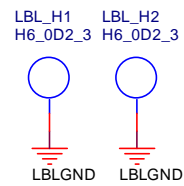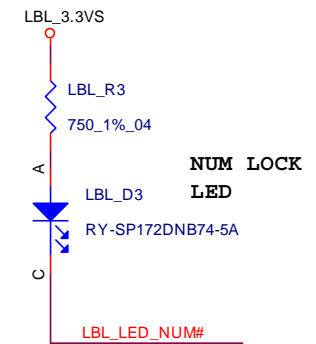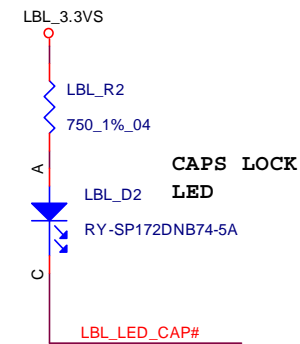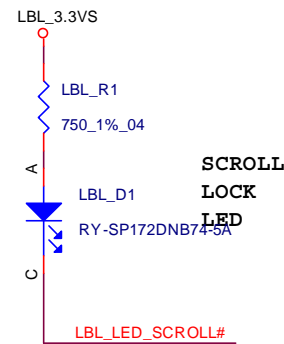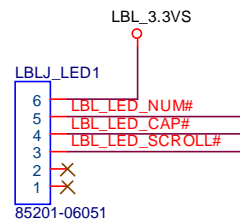

B.Schematic Diagrams
Sheet 60
P150 LED

P150 LED Board_R


Sheet 61 of 61
P150 LED Board_R

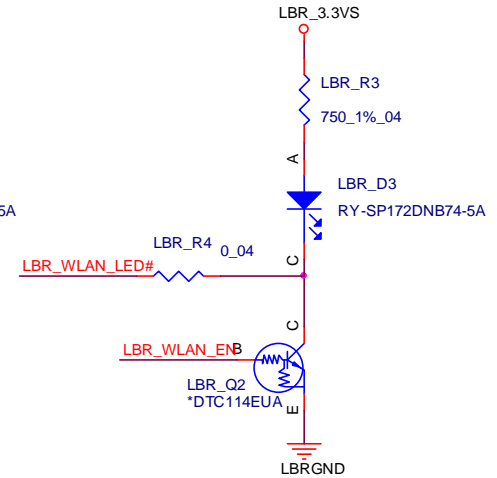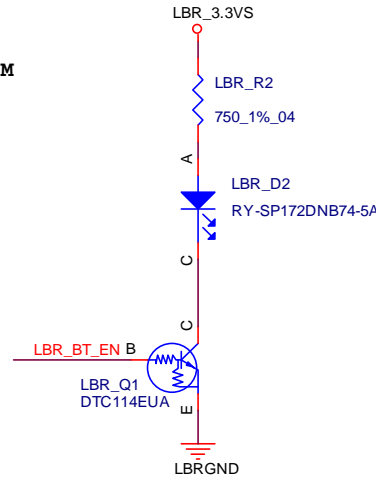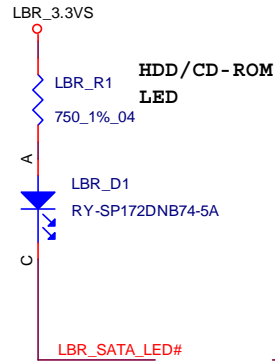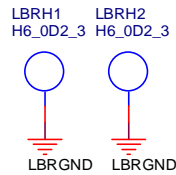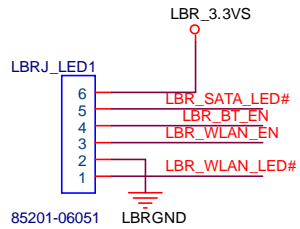

LED

Power on Sequence

P150EM_D02 POWER on SEQUENCE

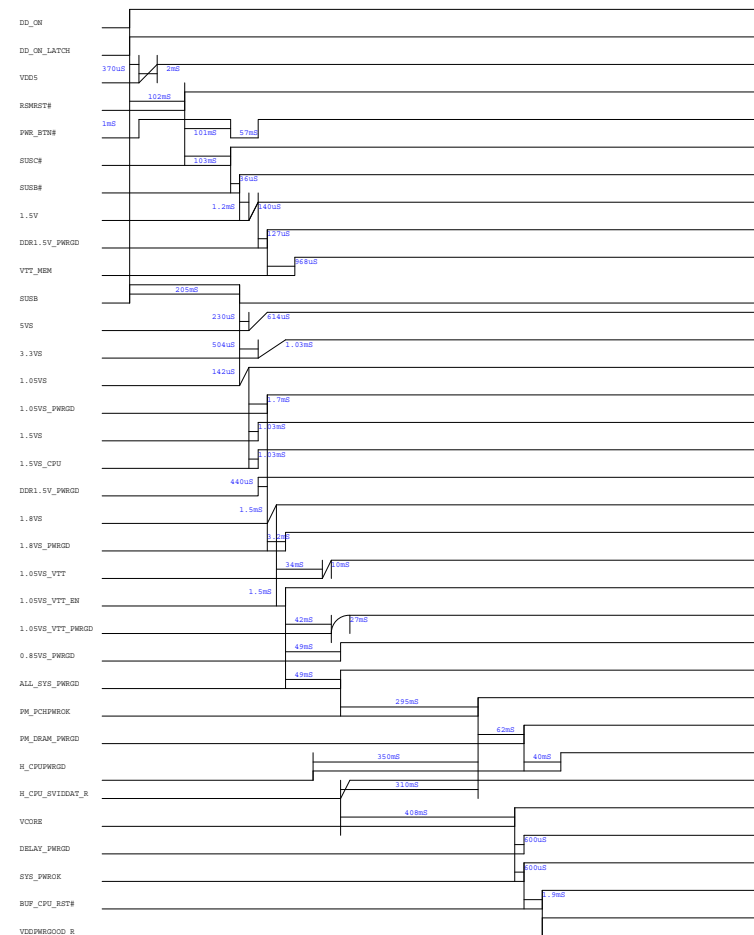

B. Schematic Diagrams
Sheet 62
Power on Sequence

Schematic Diagrams

Appendix C: Updating the FLASH ROM BIOS

To update the FLASH ROM BIOS, you must:

- Download the BIOS update from the web site.
- Unzip the files onto a bootable CD/DVD/USB Flash Drive.
- Reboot your computer from an external CD/DVD/USB Flash Drive.
- Use the flash tools to update the flash BIOS using the commands indicated below.
- Restart the computer booting from the HDD and press **F2** at startup enter the BIOS.
- Load setup defaults from the BIOS and save the default settings and exit the BIOS to restart the computer.
- After rebooting the computer you may restart the computer again and make any required changes to the default BIOS settings.

Download the BIOS

1. Go to www.clevo.com.tw and point to **E-Services** and click **E-Channel**.
2. Use your user ID and password to access the appropriate download area (BIOS), and download the latest BIOS files (the BIOS file will be contained in a batch file that may be run directly once unzipped) for your computer model (see sidebar for important information on BIOS versions).

Unzip the downloaded files to a bootable CD/DVD or USB Flash drive

1. Insert a bootable CD/DVD/USB flash drive into the CD/DVD drive/USB port of the computer containing the downloaded files.
2. Use a tool such as Winzip or Winrar to unzip all the BIOS files and refresh tools to your bootable CD/DVD/USB flash drive (you may need to create a bootable CD/DVD with the files using a 3rd party software).

Set the computer to boot from the external drive

1. With the bootable CD/DVD/USB flash drive containing the BIOS files in your CD/DVD drive/USB port, restart the computer and press **F2** (in most cases) to enter the BIOS.
2. Use the arrow keys to highlight the **Boot** menu.
3. Use the “+” and “-” keys to move boot devices up and down the priority order.
4. Make sure that the CD/DVD drive/USB flash drive is set first in the boot priority of the BIOS.
5. Press **F4** to save any changes you have made and exit the BIOS to restart the computer.



BIOS Version

Make sure you download the latest correct version of the BIOS appropriate for the computer model you are working on.

You should only download BIOS versions that are **V1.01.XX or higher** as appropriate for your computer model.

Note that BIOS versions are not backward compatible and therefore you may not downgrade your BIOS to an older version after upgrading to a later version (e.g if you upgrade a BIOS to ver 1.01.05, you **MAY NOT** then go back and flash the BIOS to ver 1.01.04).

BIOS Update

Use the flash tools to update the BIOS

1. Make sure you are not loading any memory management programs such as HIMEM by holding the **F8** key as you see the message “**Starting MS-DOS**”. You will then be prompted to give “**Y**” or “**N**” responses to the programs being loaded by DOS. Choose “**N**” for any memory management programs.
2. You should now be at the DOS prompt e.g: DISK C:\> (C is the designated drive letter for the CD/DVD drive/USB flash drive).
3. **Type the following command** at the DOS prompt:

C:\> Flash.bat

4. The utility will then proceed to flash the BIOS.
5. You should then be prompted to press any key to restart the system or turn the power off, and then on again but make sure you remove the CD/DVD/USB flash drive from the CD/DVD drive/USB port before the computer restarts.

Restart the computer (booting from the HDD)

1. With the CD/DVD/USB flash drive removed from the CD/DVD drive/USB port the computer should restart from the HDD.
2. Press **F2** as the computer restarts to enter the BIOS.
3. Use the arrow keys to highlight the **Exit** menu.
4. Select **Load Setup Defaults** (or press **F3**) and select “**Yes**” to confirm the selection.
5. Press **F4** to save any changes you have made and exit the BIOS to restart the computer.

Your computer is now running normally with the updated BIOS

You may now enter the BIOS and make any changes you require to the default settings.

www.s-manuals.com