

Shenzhen Balway Electronic Technology Co., Ltd.





BY8301-16P voice module manual

1, Overview

BY8301-16P Shenzhen Balway Electronic Technology Co., Ltd. is a self-developed a new type of high-quality MP3 compact module, using BY8301-SSOP24 MP3 main chip, support MP3, WAV format double decoding. SPI-FLASH module built as a storage medium, with a Microc USB interface, no PC software, you can connect your computer free replacement FLASH audio content via data cable. And withinSet 3W amplifier, can directly drive 3W speakers, easier to use.

2、 Product Features


- supports MP3, WAV audio formats with high quality, beautiful sound.
- 24-bit DAC output, support dynamic range 90dB, SNR support 85dB.
- Micro USB interface to update the voice files, without having to install the PC software. Support XP and WIN7 system.
- supports 21 voice segment one trigger playback, 3 IO port select eight kinds of hardware trigger wider application.
- support asynchronous serial UART Control: Support play, pause, and down song, volume addition and subtraction, playing selections, advertising spots and so on.
- built-in volume, track, EQ down memory function.
- maximum support 16M byte capacity SPI FLASH. For example GD25Q16 [2M bytes], GD25Q128 [16M bytes]
- comes with 3W amplifier, external speakers directly to complete the play; customers can also add a single, dual-channel amplifier.
- standard 2.54mm pin spacing DIP16 package, compact appearance.

3、 Technical Specifications

| Name | Parameter |
|--------------------------|---|
| MP3, WAV file format | supports sample rates 8 \sim 48K, the bit rate of 8 \sim 320Kbps audio files |
| USB 2.0 interface | standard (Micro USB interface to connect a computer to download the voice can also be read U disk contents) |
| UART interface | standard serial port, 3.3V TTL level, baud rate 9600 |
| Input voltage | 3.6V-5V (recommended value 4.2V) |
| Quiescent current | 15MA (entire module) |
| Power amplifier | connected 3W / 4 Ω or 2W / 8 Ω speaker |
| Size | 21mm * 18mm |
| Operating temperature | -40 °C∼70 °C |
| Humidity | 5%~95% |

4. Module pin map


67

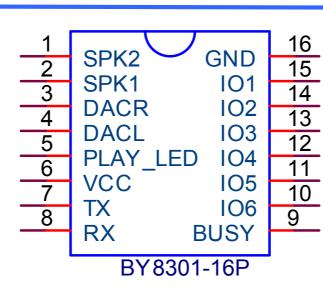

| Pin No. | Pin Name | Function Description | Remarks |
|---------|----------|---|---|
| 1 | SPK2 | external mono speaker | then 3W / 4Ω or 2W / 8Ω, passive speaker |
| 2 | SPK1 | external mono speaker | then 3W / 4Ω or 2W / 8Ω, passive speaker |
| 3 | DACR | DAC right channel output | external amplifier, headphones |
| 4 | DACL | DAC left channel output | external amplifier, headphones |
| 5 | PLAY_LED | play indicator | standby light is playing flashes |
| 6 | VCC | the positive power supply | 3.6-5V |
| 7 | ТХ | UART asynchronous serial data output | 3.3V TTL level |
| 8 | RX | UART asynchronous serial data input | 3.3V TTL level |
| 9 | BUSY | when playing high output, low stop | busy signal |
| 10 | 106 | trigger input port 6 | grounding trigger |
| 11 | 105 | trigger input port 5 | grounding trigger |
| 12 | 104 | trigger input port 4 | grounding trigger |
| 13 | 103 | trigger input port 3 | grounding trigger |
| 14 | 102 | trigger input port 2 | grounding trigger |
| 15 | 101 | trigger input port 1 | grounding trigger |
| 16 | GND | negative power | systematically |


5. Module package size



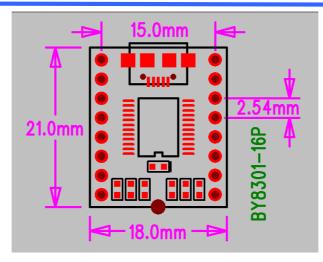

6、 IO port button trigger Description

This module has six Trigger IO ports, supports up to 21 segments one trigger button to play. By three IO ports through 3.3K resistor to ground or not connected to eight kinds of control mode selection for a variety of applications. Resistor settings control mode in front of the module, marked with ABC character defaults module 010, the customer can go back voluntarily modify:

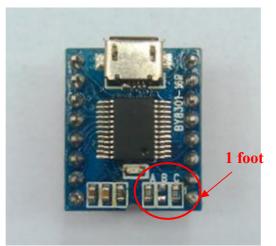

Section 21 key one application:

| | - | | | | | | | |
|----------|---|--|---------------------------|----------|-------------------|--|--|--|
| I | 101 | | One play, song 1 | 102* 103 | One play, song 12 | | | |
| I | 102 | | One play, song 2 | 102* 104 | One play, song 13 | | | |
| I | 103 | | One play, song 3 | 102* 105 | One play, song 14 | | | |
| I | 104 | | One play, song 4 | 102* 106 | One play, song 15 | | | |
| I | 105 | | One play, song 5 | 103* 104 | One play, song 16 | | | |
| I | 106 | | One play, song 6 IO3* IO5 | | One play, song 17 | | | |
| 101 | l* 102 | | One play, song 7 | 103* 106 | One play, song 18 | | | |
| 101 | l* 103 | | One play, song 8 | 104* 105 | One play, song 19 | | | |
| 101 | l* 104 | | One play, song 9 | 104* 106 | One play, song 20 | | | |
| 101 | l* 105 | | One play, song 10 | 105* 106 | One play, song 21 | | | |
| 101 | IO1* IO6 One play, song 11 | | | | | | | |
| 3 IO por | 3 IO port selection control mode application (3.3K ground zero, to float a), the default value 010: | | | | | | | |
| IOA | IOAIOBIOCOne key trigger function (the button is pressed both effective without release) | | | | | | | |
| | | | | | | | | |



BY8301-16P voice module manual V1.2

| | 0 | 0 | 0 | | Key grounded, triggering stop playing again, half-way trigger is invalid; long time | | | | |
|---|---|---|---|-----------|---|--|--|--|--|
| | | | | exceed | exceed the current song, loop, finished playing again in the middle lift stop | | | | |
| | 0 | 0 | 1 | Key gro | unding, ON / OFF function. Click the play, during playback, the trigger again to | | | | |
| | | | | stop, ar | nd then trigger the stop state is played from the beginning, once you finish | | | | |
| | | | | playing | the current song stops | | | | |
| | 0 | 1 | 0 | Ground | button, click on the ring, ring in the process, the press will be interrupted, | | | | |
| | | | | and the | n re-start play, finished play once then stop | | | | |
| | 0 | 1 | 1 | Ground | button, click on the ring, then the process can not be interrupted in the ring | | | | |
| | | | | until the | e ring have been exhausted, then finished only effective response | | | | |
| Γ | 1 | 0 | 0 | Hold tr | gger level, has been pressing the play button again, lift the stop button | | | | |
| | | | | halfway | (not for serial control in this mode) | | | | |
| | 1 | 0 | 1 | Trigger | level to maintain circulation, has been pressing the button loop, lift the stop | | | | |
| | | | | button l | nalfway (not for serial control in this mode) | | | | |
| | 1 | 1 | 0 | Standar | d MP3 mode | | | | |
| | | | | 101 | Play / Pause / long press 2 seconds to stop the current song | | | | |
| | | | | 102 | Under a (short press) / Volume + (long press) | | | | |
| | | | | 103 | Under a (short press) / Volume + (long press) | | | | |
| | | | | 104 | Volume + | | | | |
| | | | | 105 | Volume - | | | | |
| | | | | 106 | Hold trigger level, has been pressing the play button, lift the stop button | | | | |
| | | | | | (this function is not down song) | | | | |
| | 1 | 1 | 1 | Applicat | ion-specific features | | | | |
| | | | | 101 | Key grounded, triggering stop playing again, half-way trigger is invalid; long | | | | |
| | | | | | time exceed the current song, loop, finished playing again in the middle lift | | | | |
| | | | | | stop | | | | |
| | | | | 102 | Press a short / long press the volume + | | | | |
| | | | | 103 | On a short press / long press volume - | | | | |
| | | | | 104 | Volume + | | | | |
| | | | | 105 | Volume - | | | | |
| | | | | 106 | PLAY button, press play, during playback, then will break, and then went | | | | |
| | | | | | heavy head start playing, once you finish playing stops | | | | |
| | | | 1 | | | | | | |

7. Applications

- industrial control areas: industrial control equipment;
- Intelligent Transportation Equipment: toll stations, car parks, car voice prompts;
- advertising industry: advertising language broadcast;
- access control, time and attendance: The door has been opened, such as voice prompts;
- security industry: the human body sensors prompt, safe and voice prompts, Tips;
- advanced toys: Swing machine, hit the crash, game consoles;
- Medical Electronics: Equipment voice prompts;
- Communication Education: Educational equipment, electronic communications;

8、 Serial Control Protocol

BY8301 built-in standard asynchronous serial UART interface, are 3.3V TTL level interface. Can be converted to RS232 level through the MAX3232 chip. Communication data format is: Start bit: 1; data bits: 8; Parity: None; Stop Bits: 1. Using the computer serial debugging assistant, you need to set the correct serial port parameters, settings shown:



Protocol command format:

| Start code | length | opcodes | parameters | check code | end code |
|------------|-----------|-----------|------------|------------|----------|
| 0X7E | see below | see below | see below | see below | OXEF |

Note: all the data as a hexadecimal number."Length" refers to the length of the + operator code +

Parameter Length + checksum,"Checksum" refers to the value of the length of the operation code, parameters negated, customers can get through checksum calculator.

For example, playing instructions for 7E 03 01 02 EF checksum 02 is obtained by:

First, open the calculator programmer mode selection;

Then select the hex, double word;

Finally, click to calculate 3 Xor 1 = 2

| 📓 计算器 | | | | | | _ 🗆 🗙 | 📓 计算 | 器 | | | | | | | | _ 🗆 🗙 |
|--|------|------------|-----|------|-----|-------|--------------------------------------|------------|-------|-------|------|------------|-----|------|----|-------|
| 查看(V)编辑(E)帮助(H) | | | | | | | 查看 (V) |)编辑 | (E) 耕 | 1助(H) | | | | | | |
| 标准型(T) Alt+1 科学型(G) Alt+2 •程序员(P) Alt+3 统计信息(A) Alt+4 | | | | | | 0 | | | | | | | | | | 0 |
| 历史记录 (Y) Ctr1+H 数字分组 (I) | 0000 | 0000 15 | 000 | a 00 | 900 | 0000 | 0000 31 | 9 00 | 90 0 | 000 | 0000 | 0000 15 | 000 | 0 00 | 00 | 0000 |
| ● 基本 (B) Ctrl+F4 单位转换 (U) Ctrl+U | A | МС | MR | MS | M+ | M- | • + | 六进制 | | Mod | А | МС | MR | MS | M+ | M- |
| 日期计算 (D) Ctrl+E 工作表 (W) | В | | CE | с | ± | V | 01 | ·进制 、进制 | (|) | В | ← | CE | С | ± | V |
| LIF表 (9) C 二进制 RoL RoR | С | 7 | 8 | 9 | 1 | % | 0 = | 进制 | RoL | RoR | С | 7 | 8 | 9 | 1 | % |
| C 四字 Or Xor | D | 4 | 5 | 6 | * | 1/x | C Z | | Or | Xor | D | 4 | 5 | 6 | * | 1/x |
| ● 双字 C 字 Lsh Rsh | E | 1 | 2 | 3 | - | | ○ 双 ○ ⇒ | | Lsh | Rsh | E | 1 | 2 | 3 | - | |
| C 字节 Not And | F | 0 | | 16 | + | | C \$ | 节 | Not | And | F | (|) c | 10 | + | = |

Command sent successfully returned OK, stop the song finishes playing return STOP.

8.1 Instruction List

Communications Control Instructions (Another company a BY8001-16P TF card card voice module)



BY8301-16P voice module manual V1.2

| Detailed | Corresponding function | Parameters | | | |
|----------|------------------------------------|---|--|--|--|
| CMD | | | | | |
| 0x01 | Play | no | | | |
| 0x02 | Pause | no | | | |
| 0x03 | Under | no | | | |
| 0x04 | On | no | | | |
| 0x05 | Volume increase | no | | | |
| 0x06 | Volume reduction | no | | | |
| 0x07 | Standby / work | no, enters standby current 10MA | | | |
| 0x09 | Reset, no | no | | | |
| 0x0A | Fast-forward, | no, FLASH no function | | | |
| 0x0B | Rewind | no, FLASH no function | | | |
| 0x0E | Stop | no | | | |
| 0x31 | Set the volume | 0-30 adjustable (off memory) | | | |
| 0x32 | Setting EQ | 0-5 (NO\POP\ROCK\JAZZ\CLASSIC\BASS) (off memory) | | | |
| 0x33 | Setting cycle mode | 0-4 (All/Folder/single player/random/broadcast again) | | | |
| 0x34 | Folder switching | 0 (a folder), 1 (next folder) | | | |
| 0x35 | Device switching | 0 (U), 2 (FLASH) | | | |
| 0x41 | Choose to play tracks | 1-255 first (off memory) | | | |
| 0x42 | Specify a folder track is playing | high eight for the folder number (00-99), the low eight | | | |
| | | song name (001-255), FLASH no function | | | |
| 0x43 | Spots feature | 1-65536, FLASH no function | | | |
| 0x44 | Spots designated folder inside the | high eight for the folder number (00-99), the low eight | | | |
| | songs | song name (001-255), FLASH no function | | | |
| | Combination play | Combination play different tracks will be sent | | | |
| | | continuously aired stop, maximum support 10 segments | | | |

Communications query

| Detailed | Corresponding function | Parameter |
|----------|-----------------------------------|---|
| CMD | | |
| 0x 10 | Query playing status | 0 (stop) 1 (Play) 2 (Pause) 3 (fast forward) 4 (rewind) |
| 0x 11 | Query volume. | 0-30 (off memory) |
| 0x 12 | Query the current EQ | 0-5 (NO\POP\ROCK\JAZZ\CLASSIC\BASS) (off memory) |
| 0x 13 | Query the current play mode | 0-4 (All/Folder/single player/random/broadcast again) |
| 0x 14 | Query version | 1.0 |
| 0x 16 | Query U disk total file totals | 1-65535 |
| 0x 17 | The total number of files query | 1-255 |
| | FLASH | |
| 0x 18 | Query the current playback device | 0:USB 2:SPI |
| 0x 1A | Current track queries U disk | 1-65536 |
| 0x 1B | The current track queries FLASH | 1-255 |
| 0x 1C | Query the currently playing song | Anti-back time (in seconds) |
| | time | |



BY8301-16P voice module manual V1.2

| 0x 1D | Query the current total time playing | Anti-back time (in seconds) |
|-------|--------------------------------------|--|
| | songs | |
| 0x 1E | | In return the song name (SPI internal songs can not be |
| | song | anti-back) |
| 0x 1F | Query the current playback folder | 0-65536(SPI internal songs can not be anti-back) |
| | within the total number of | |

8.2 Control instructions detailed instructions

8.2.1 Play

| Startcode | Length | Opcode | Checksum | End code |
|-----------|--------|--------|----------|----------|
| 7E | 03 | 01 | 02 | EF |

Send the command to Play music, pause or stop state to start playback.

8.2.2 Pause

| Startcode | Length | Opcode | Checksum | End code |
|-----------|--------|--------|----------|----------|
| 7E | 03 | 02 | 01 | EF |

Send the command to pause playback music.

8.2.3 Next song

| Startcode | Length | Opcode | Checksum | End code |
|-----------|--------|--------|----------|----------|
| 7E | 03 | 03 | 00 | EF |

This command can trigger the next song Play music while playing the last piece of music, send the command to trigger the first song Play music.

8.2.4 On song

| Startcode | Length | Opcode | Checksum | End code |
|-----------|--------|--------|----------|----------|
| 7E | 03 | 04 | 07 | EF |

This command can trigger the next song Play music while playing the first song to music, send the command can be triggered to play the last piece of music.

8.2.5 Volume +

| Startcode | Length | Opcode | Checksum | End code |
|-----------|--------|--------|----------|----------|
| 7E | 03 | 05 | 06 | EF |

Chip has 30 adjustable volume, send a command, a volume increase.

8.2.6 Volume -

| Startcode | Length | Opcode | Checksum | End code |
|-----------|--------|--------|----------|----------|
| 7E | 03 | 06 | 05 | EF |

Chip has 30 adjustable volume, send a command, a volume reduction.

8.2.7 Standby / normal operation

| Startcode | Length | Opcode | Checksum | End code |
|-----------|--------|--------|----------|----------|
| 7E | 03 | 07 | 04 | EF |

Send this instruction chip into standby status at work, in the standby state needs to send commands to wake the chip to work properly again.

8.2.8 Reset

| Startcode | Length | Opcode | Checksum | End code |
|-----------|--------|--------|----------|----------|
| 7E | 03 | 09 | 0A | EF |

Send this instruction resets the chip.

8.2.9 Fast Forward



BY8301-16P voice module manual V1.2

| Startcode | Length | Opcode | Checksum | End code |
|-----------|--------|--------|----------|----------|
| 7E | 03 | 0A | 09 | EF |

Sends a command to fast forward the music for some time.

Note: FALSH not have this feature.

8.2.9 Rewind

| Startcode | Length | Opcode | Checksum | End code |
|-----------|--------|--------|----------|----------|
| 7E | 03 | OB | 08 | EF |

Sends a command to rewind the music for some time.

Note: FALSH not have this feature.

8.2.10 Stop

| Startcode | Length | Opcode | Checksum | End code |
|-----------|--------|--------|----------|----------|
| 7E | 03 | 0E | 0D | EF |

Send this instruction in music Play or pause state can stop the music.

8.2.11 Set Volume

| Startcode | Length | Opcode | Volume Level | Checksum | End code |
|-----------|--------|--------|--------------|----------|----------|
| 7E | 04 | 31 | 19 | 2C | EF |

0-30 adjustable volume, real-time modification of the directive can adjust the volume, the volume can be powered down memory paradigm hair

Send volume level is 25.

8.2.12 Setting EQ

| Startcode | Length | Opcode | Parameters | Checksum | End code |
|-----------|--------|--------|------------|----------|----------|
| 7E | 04 | 32 | 00 | 36 | EF |

Send this instruction can change EQ.

8.2.13 Setting cycle mode

| Startcode | Length | Opcode | Parameters | Checksum | End code |
|-----------|--------|--------|------------|----------|----------|
| 7E | 04 | 33 | 02 | 35 | EF |
| | | | | | |

Send this instruction cycle mode can be set, for example to set single cycle mode.

8.2.14 Folder Switching

| Startcode | Length | Opcode | Parameters | Checksum | End code |
|-----------|--------|--------|------------|----------|----------|
| 7E | 04 | 34 | 01 | 31 | EF |

Send the command to switch folders Play, sending one to the next folder, and 0 on a folder.

Note: FALSH not have this feature.

8.2.15 Switching equipment

| Startcode | Length | Opcode | Parameters | Checksum | End code |
|-----------|--------|--------|------------|----------|----------|
| 7E | 04 | 35 | 01 | 30 | EF |

When the system has multiple devices, you can send the command to select the device to be read, for example select TF card player.

8.2.16 Select a track Play

| Startcode | Length | Opcode | Opcode Tracks high Tr | | Checksum | End code | |
|-----------|--------|--------|-----------------------|----|----------|----------|--|
| 7E | 05 | 41 | 00 | 01 | 45 | EF | |

Send this command to specify the corresponding storage track is playing, play the first example of a song. Note: Tracks for 1-65536

8.2.17 Specify the folder track playback



BY8301-16P voice module manual V1.2

| Startcode | Length | Opcode | Tracks high | Tracks low | Checksum | End code |
|-----------|--------|--------|-------------|------------|----------|----------|
| 7E | 05 | 42 | 00 | 02 | 45 | EF |

Sowing the corresponding tracks corresponding instruction can specify a folder within a folder 8 high number, low 8 to the song title.Examples for the specified folder 00 in the first two Play.

Note: If you want to use this feature, the folder must be named 00-99, songs must be named 001-255, No Mistakes will not be played. FALSH not have this feature.

8.2.18 Spots feature

| Startcode | Length | Opcode | Tracks high | Tracks low | Checksum | End code | |
|-----------|--------|--------|-------------|------------|----------|----------|--|
| 7E | 05 | 43 | 00 | 03 | 45 | EF | |

When receiving the instruction of this article, we pause a track, and then to implement this directive specified Play tracks, When finished playing, then Play the original Pause tracks.

Note: FALSH not have this feature.

8.2.19 Spots designated folder songs

| Startcode | Length | Opcode | Tracks high | Tracks low | Checksum | End code | |
|-----------|--------|--------|-------------|------------|----------|----------|--|
| 7E | 05 | 44 | 01 | 06 | 46 | EF | |

When receiving the instruction of this article, we pause a track, and then to implement this directive specified in the file.Corresponding track is playing, when finished playing, then Play the original Pause tracks. High eight for the folder number, the lower 8 bitsThe song title.

Note: If you want to use this feature, the folder must be named 00-99, songs must be named 001-255, NoMistakes will not be played. FALSH not have this feature.

8.2.20 Combination Play

Continuous transmission:


7E 05 41 00 01 45 EF 7E 05 41 00 02 46 EF 7E 05 41 00 03 47 EF 7E 05 41 00 40 EF Play 1,2,3,4 song aired stop, up to 10 continuous playback.

8.3 Query command Description

After sending the query command returns the corresponding value, not described in detail.


Note that all the main chip IO port voltage is 3.3V, note that the voltage matches other microcontrollers connected!

9.1 . 21 Road buttons control application circuit K1-K21 corresponding voice segment 1-21

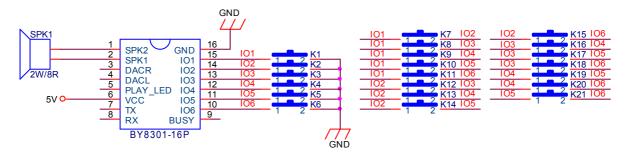


21-way switch button is equivalent to the amount of control.

9.2 . Microcontroller serial control application circuit

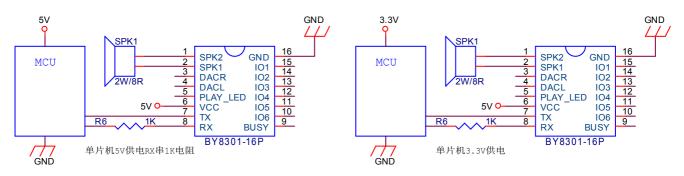

The above is a standard UART asynchronous serial connectivity applications, this application is quite flexible, including play, pause, up and down the song, volume addition and subtraction, Play selections, advertising spots and so on. Available microcontroller, computer serial port control 485 can also be controlled by TTL to RS485 adapter plate.


9.3 . MCU IO port directly connected to the control application circuit

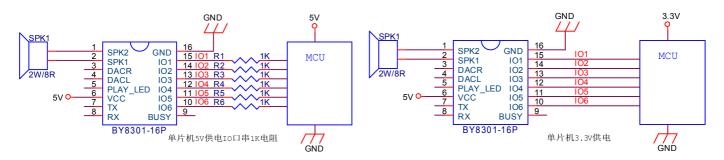


By the microcontroller through a low pulse signal (equivalent to pressing the lift button) can trigger IO1-IO6, achieve one Play six segments voice, and above 3IO selectable control modes.

9.4 . For some customers may use the trigger level to play, you can use the relay control can also be used optocoupler control, providing connection diagram below:

Relay

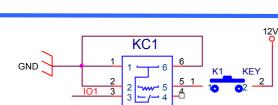


HK4100F-DC12V

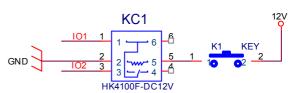

Left IO port down play, the figure for the Play in the first paragraph; right is IO combination play, the relay is energized IO1, IO2 short-circuit Play in paragraph 6.


Optocoupler

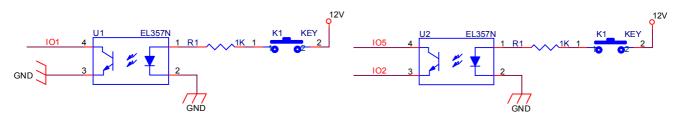

Left IO port down play, the figure for the Play in the first paragraph; right is IO combination play, the rules of connections is the low number of connections IO port optocoupler 3 feet, 4 feet high number of connections, the figure for the first 14 Play segment.

Given above is 12V trigger level can also be converted to a single-chip high-low trigger.

9.5 . External amplifier application circuit

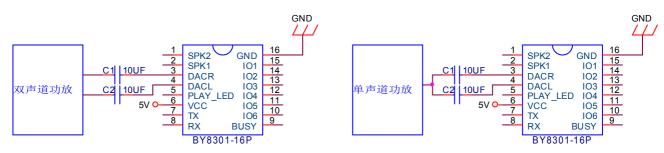

The module power is mainly the customer can own an external amplifier.

 10_{\times} Copy MP3 to store FLASH

Our modules can use the MICRO USB phone lines directly on the computer to update voice, convenient and flexible. ComputerThe first time you plug in the product, installation requires some time, please be patient, wait for the next time very quicklyNo need to plug in the power supply direct phone line. The computer will pop up the following screen, and then the computer 360 software, or kill,Virus software off, or after the following window pops up choose USB plug allows the program to run:



The computer will pop up the following screen:



▲ 有可移动存储的设备 (3)



CD 驱动器 (H:) BALWAY 0 字节可用,共126 KB CDFS 可移动磁盘 (I:)

10.1. Open the "CD Drive", the computer will enter the following interface. Then open the application, it will pop up "10.2" in the interface.



10.2. Select "Load Zone 1" folder, as shown above and click "Load File" will pop up a window to load voice, As shown below:

| Music Update tool V1.0 | 🐥 Music Update tool V1.0 |
|------------------------|--------------------------|
| 下载区 加载区1 2 3 4 5 | 下载区 加载区1 2 3 4 5 |
| BALWAY_MP3 | 加载文件 |

10.3. At this point you need to load the selected voice, you need to put on a one-time multi-stage election finished, the entire sequence can be selected into a loading area (area 2-5 are reserved function without load), and then click "Open" to add the software in the. Voice document proposes naming 0001XXX.mp3,0002XXX.mp3

| 查抄 | (范围 (I): 🕕 语 | 音文件 | | | - 🕝 🧊 🖻 | • 🛄 🕶 | | 下载区 | 加载区1 | 2 | 3 | 4 | 5 | 5 | |
|--------------|--|--------------------|----------|----------------|----------------|-----------------|----|-----|------|---------------------|------------|----------------------|---------|---------|------|
| V10 (| 名称 | - | # | 标题 | 参与创作的. | 唱片 集 | | | | | | | | | |
| | 问的位置 🗐 0 | 001.mp3 | | | | | | | | CAL | owe \ d de | inistre | tor P | C-20130 | 1324 |
| | (回)0 | 002.mp3 | | | | | | | | | | inistra | | | |
| | | 003.mp3 | | | | | | | | | | inistra | | | |
| | | 004.mp3 | | | _ | | -= | | | | | ninistra | | | |
| | | 005.mp3 | | | | | | 加 | 1载文件 | | | ninistra | | | |
| | | 006.mp3 007.mp3 | | | | | | | | | | ninistra ninistra | | | |
| | | 007.mp3 | | | | | | | | | | inistra | | | |
| 5 | and the second s | 009.mp3 | | | | | | | | | | inistra | | | |
| | | 010.mp3 | | | | | | | | | | ninistra | | | |
| | (0) 0 | 011.mp3 | | | | | | | | C:\Users\Administra | | | | | |
| | | 0100 | | | | | | | | | | inistra | | | |
| | 网络 | | | (00000 of (00 | 00 OF 5000 | | | | | C: 105 | sers\Ad | ninistra | ator. P | J-2013L | 1524 |
| | 文件名 | 5,0#): "U | UU1.mp3" | "0002.mp3" "00 | U3.mp3" "UUU • | 打开《 | | | | | | | | | |

10.4. Finally, back to the "Downloads" screen, click on the "Download" button, the following screen will appear. From



left to right, three windows, a window displays the last "check success", on behalf of the update is complete, close the window directly to unplug the USB cable on it.

| Subscription Music Update tool V1.0 | Ausic Update tool V1.0 | 🗧 Music Update tool V1.0 |
|-------------------------------------|-----------------------------|--------------------------|
| 下载区 加载区1 2 3 4 5 | 下载区 加载区1 2 3 4 5 | 下载区 加载区1 2 3 4 5 |
| BALWAY_MP3 | BALWAY_MP3 正在写flesh 点击下载 | BALWAY_MP3 校验成功: |

11, Manual version

| Version | Date | Description | | | |
|---------|--|---------------------|--|--|--|
| V1.0 | 2014-3-20 | The initial version | | | |
| V1.1 | V1.1 2014-6-28 Perfect serial control instructions | | | | |
| V1.2 | V1.2 2014-10-9 Add some application circuit | | | | |

Shenzhen Electronic Balway Technology Co., Ltd. is a set of voice solutions, voice semi-finished speech development, production and service in one of technology-based enterprises, the main research has been focused on speech technology, voice chip solution, MP3 module, voice prompts board, voice finished products such as software and hardware design, development and customization. And to undertake electronic product development and small batch production, post-production and mature manner using OEM supplier, the business scope of automotive electronics, security, home security, communications, home appliances, medical equipment, industrial automation and control, education, equipment, toys and gifts consumer products and other fields.

Shenzhen Best Electronic Technology specializes in the development, design, production and sales of voice products. The main circuit board for research and development of products BY series of voice, voice chip solution, MP3 voice module, greeting module, TF card MP3 module, USB MP3 module, 12V playback boards, high-power multi-channel playback control panels, door voice Reminder, advertising tips, a truck speed limiter, as well as customers with special needs to develop a voice product development programs, and implement the program, to complete product development, testing, until the actual application of the guidance products and other services. After years of development, the company has formed a complete system of technology development process, can quickly develop customer demand for products, uphold the high degree of enthusiasm and sophisticated technology, has always been to serve our customers for the purpose, committed to market strategy. For the needs of the market, in the company's meticulous efforts of all staff, the products will be comprehensive, thorough, to meet customer demand,



improve efficiency, and cost-effective. We adhere to the people-oriented service attitude, to reach a two-way communication with customers, providing high-quality products and excellent service of the people.

Shenzhen Electronic Technology Co., Ltd. is currently the sales and service strategy to enhance customer service quality, to help develop the most competitive end products, we uphold a positive innovation, courage, customer satisfaction, teamwork, the market has been gradually from China extended to all regions of the globe. The company's competitive advantages include the following four points:

(A) professional and innovative research and development capabilities, high-quality research and development and engineering and technical teams;

(B) the strong long-term relationship market, the price has the absolute advantage;

(C) the full range of technical support and improve the marketing system;

(D) stable product delivery and quality assurance.

Shenzhen Balway Electronic Technology Co., Ltd.
Website: www.balway.com
E-mail: balway@163.com
TEL: 0755-33142633
Rm.303, Huafujin Mansion, No.81 building, Baishilong,
New Yixiu village, Minzhi Street, Bao'an District, Shenzhen, 518131