

Maintenance Manual
M-PD™ SYSTEM
136-174 MHz
PERSONAL TWO-WAY FM
RADIO COMBINATION



INCLUDES

SERVICE SECTION LBI-31677

TABLE OF CONTENTS

| | <u>Page</u> |
|--|-------------|
| SPECIFICATIONS | 1 |
| OPTIONS AND ACCESSORIES | 2 |
| COMBINATION NOMENCLATURE | 2 |
| DESCRIPTION | 2 |
| OPERATION | 3 |
| SYSTEM ANALYSIS | 4 |
| MAINTENANCE | 9 |
| INTRINSICALLY SAFE USAGE | 12 |
| BATTERIES | 12 |
| ACCESSORIES | 12 |
| MEMORY EFFECT IN NICKEL-CADMIUM BATTERIES: | 12 |
| REDUCED CAPACITY IN NICKEL- CADMIUM BATTERIES: | 13 |
| INTERCONNECTION DIAGRAMS | 14 |
| OUTLINE DIAGRAMS: | |
| Radio Board | 15 |
| Controller Board | 17 |
| Signaling Board | 19 |
| LCD Board | 20 |
| Battery Packs | 22 |
| SCHEMATIC DIAGRAMS: | |
| Radio Board | 16 |
| Controller Board | 18 |
| Signaling Board | 19 |
| LCD Board | 21 |
| Battery Packs | 22 |
| MECHANICAL PARTS BREAKDOWN | 23 |
| PARTS LISTS: | |
| M-PD Radio Chassis | 13 |
| Mechanical Parts | 24 |
| Radio Board | 25 |
| Controller Board | 26 |
| Signaling Board | 27 |
| LCD Board | 27 |

SPECIFICATIONS

SYSTEM





| | |
|--|---|
| <u>Frequency Range</u> 136 MHz to 160 MHz 150 MHz to 174 MHz | FCC Identification Number AXA9WNTR-145-A AXA9WNTR-145-B |
| <u>Frequency Stability</u> | 5 PPM |
| <u>Battery Drain</u> (at 7.5 VDC) | |
| Standby | 65 Milliamperes |
| Receiver (Rated Audio) | 195 Milliamperes |
| Transmitter | 1.9 amperes |
| <u>Dimensions (H x W x D)</u> | |
| (With Standard Capacity) | 183 x 69 x 43 mm |
| (With High Capacity (short) Battery) | 183 x 69 x 43 mm |
| (With High Capacity (long) Battery) | 219 x 69 x 43 mm |
| (With Extra High Capacity Battery) | 219 x 69 x 43 mm |
| <u>Weight</u> | |
| (With Standard Capacity Battery) | 24 ounces |
| (With High Capacity (short) Battery) | 24 ounces |
| (With High Capacity (long) Battery) | 29 ounces |
| (With Extra High Capacity Battery) | 29 ounces |
| <u>Operable Temperature Range</u> | -30°C to +60°C |

TRANSMIT

| | |
|---|--|
| <u>RF Power Output</u> | 0.5 to 5 Watts |
| <u>Spurious Emissions</u> | -37 dBm |
| <u>Maximum Deviation</u> | 5 kHz |
| <u>FM Hum & Noise (EIA)</u> | -45 dB |
| <u>Audio Distortion (60% MOD)</u> | 3% |
| <u>Frequency Stability</u> (-30°C to + 60°C) | 5 PPM |
| <u>RF Load Impedance</u> | 50 ohms |
| <u>Microphone Sensitivity</u> (EIA 60% MOD) | Less than 90 dB SPL |
| <u>Maximum Attack Time</u> (PTT Pushed) | 25 milliseconds |
| <u>Audio Frequency Response</u> | Within +1 and -3 dB of a 6 dB/octave pre-emphasis from 300 Hz to 3000 Hz. |

RECEIVE

| | |
|-------------------------------------|---|
| <u>Sensitivity (12 dB SINAD)</u> | -116 dBm |
| <u>Spurious Emissions</u> | -57 dBm |
| <u>Spurious Response Rejection</u> | 72 dB (Minimum) |
| <u>IM Distortion Rejection</u> | 70 dB (Minimum) |
| <u>Adjacent Channel Selectivity</u> | 70 dB (30 kHz) |
| <u>Squelch Sensitivity</u> | 6 dB SINAD (Minimum) Adjustable |
| <u>Distortion (EIA 0.5 Watt)</u> | 5% (Maximum) |
| <u>Audio Frequency Response</u> | Within +1 and -3 dB of a 6 dB/octave de-emphasis from 300 Hz to 3000 Hz. |

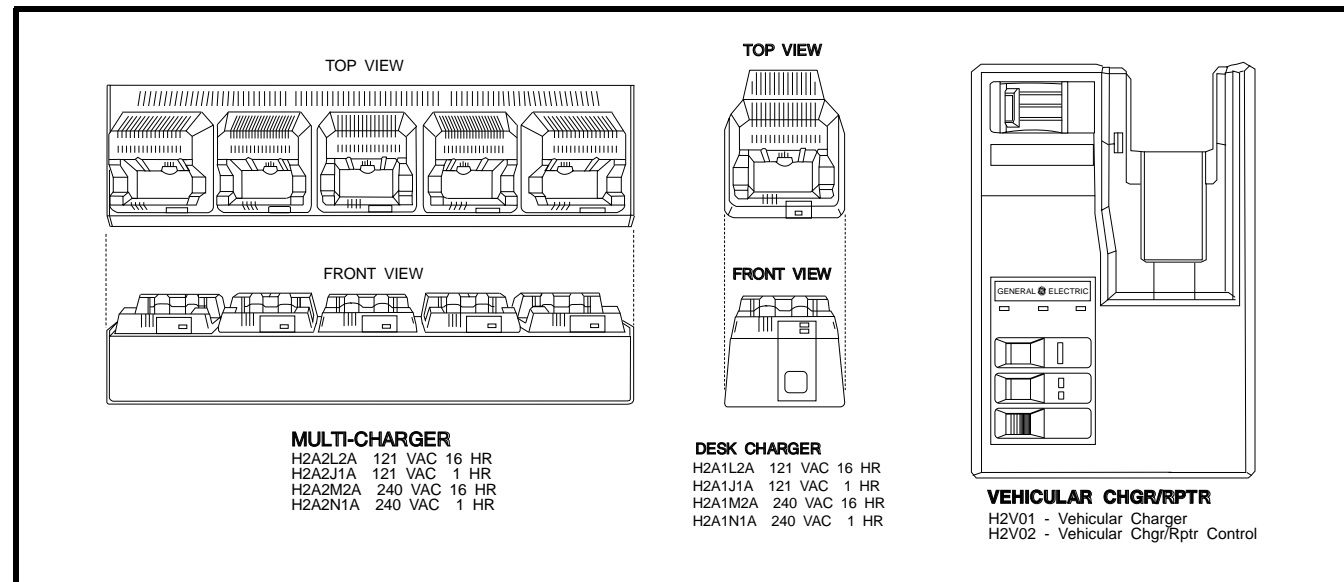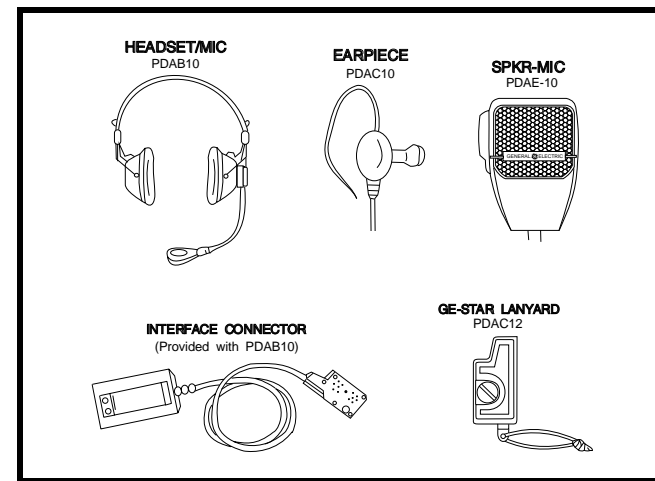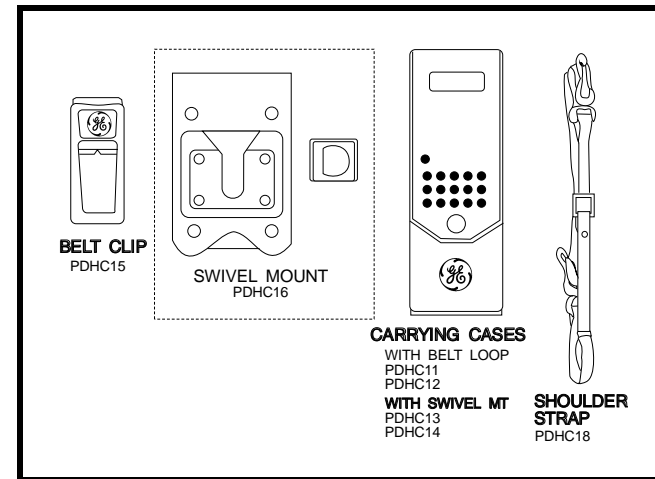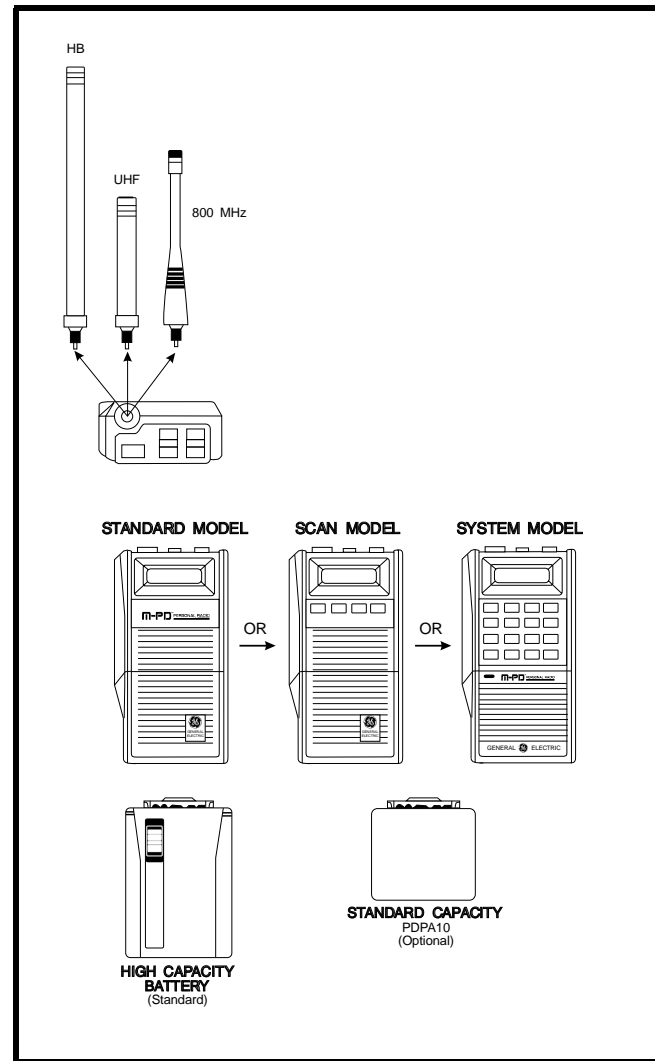

COMBINATION NOMENCLATURE

| Digits 1 & 2 | Digit 3 | Digit 4 | Digit 5 | Digit 6 | Digit 7 |
|--------------|-------------------------|--------------------|----------------------|-------------------|------------------------------|
| Product Code | Frequency Range | Controller | Selectivity | Stability | Power Source |
| PD | G 136-160 MHz | C System | S Standard | 5 5 PPM | M HIGH CAP. NICD |
| | H 150-174 MHz | | | | N STD CAP. NICD |
| | | | | | P X HIGH CAP. NICD |
| | | | | | X No Battery |

DESCRIPTION

Ericsson GE's M-PD System Personal Radio is a high-quality, high-performance, two-way, FM, communications unit consisting of a transmit/receive circuit with a frequency synthesizer controlled by a microprocessor. The M-PD Personal Radio is ideal for use in public services by providing the following features:

- **48 Channel Capability:** Channel designation can be a mixture of numerics (0 - 48) and alphanumerics through the eight characters in the LCD display. Channel control can come from either the up/down channel ramping buttons, front keypad entry or the "Home" Channel feature.
- **Eight Programmable Modes:** Up to eight modes are programmable with any number of channels in each mode: the sum of channels and blank channels in all modes equal to 48.
- **Programmable Multi-Tone Channel Guard (CTCSS) Encode/Decode:** Channel Guard tone frequencies within the range of 67 Hz to 210.7 Hz, including all of the standard EIA frequencies, may be programmed. Different encode/decode, encode only and with/without Channel Guard frequencies are also programmable into the radio.

The same channel is used with and without Channel Guard by programming two different radio channels with the same frequency information but only one with Channel Guard capability.

- **Programmable Multi-Code Digital Channel Guard Encode/Decode:** Similar capability as with Tone Channel Guard is provided.
- **Programmable Carrier Control Timer:** Personality information includes an optional period of transmit time from 15 to 120 seconds, after which the unit will automatically unkey and provide an alerting tone. This feature is reinitiated on every PTT and the alert tone is removed upon release of the PTT.
- **Minimum Volume Level:** Personality information includes a minimum volume level below which the radio controls cease to reduce the volume.
- **Squelch Tail Elimination:** Squelch and audio circuits are designed so that annoying squelch pops which may occur at the end of received messages are minimized, both with and without Channel Guard. This system is compatible with an existing GE system.
- **Programmable Squelch:** The noise squelch opening threshold can be programmed for each channel.

- **Channel Busy Lock Out:** Personality information includes the capability to prevent the transmitter from operating on a channel where carrier activity is present. The "Channel Busy" indicator (BSY) is active during this time.
- **Automatic/Manual Power Levels:** The desired power level on each channel can be programmed into the radio personality such that it is automatically selected channel-by-channel or selected manually.
- **Home Channel Feature:** A "Home" channel can be programmed into the radio which is selected by pressing the "Home" button. This allows a user to quickly reach a reference channel.
- **Surveillance Feature:** In addition to the ability to program the display lighting on or off per channel, the sidetone beep related to the operation of a radio control is capable of being disabled on a channel by channel basis.
- **Eight Character Alphanumeric Liquid Crystal Display:** This display is used to exhibit the condition of the radio. It shows: Channel Designation, Signaling ON/OFF, Transmit, Volume Level, Battery Condition, Channel Busy, High/Low Power output, SCAN ON/OFF and Priority 1 & 2.
- **Simple Remote Control Capability:** By connection through the UDC (Universal Devices Connector) a simple speaker/ microphone can be operated which can also control PTT and Volume level.
- **Push Button Controls Only:** All control functions on the radio, with the exception of the power ON/OFF switch, are operated through push button controls on the top and sides of the radio.
- **Programmable through UDC:** The entire personality of the radio is programmed into the radio through the UDC through four connections. The Ericsson GE TQ2310 Universal programmer is one method of programming the radio, while the capability exists to interface to an RS-232 device at a maximum of 1200 baud.
- **Keyboard Enable:** Pressing two keypad keys (Secondary Function and KEY BD) in sequence activates the front DTMF keyboard. The user can then change radio functions as required. The top keypad is not protected in this manner for ease of using the frequently switched functions (volume, channel, Signaling On/Off, . . .etc.).
- **Two-Tone Sequential Encode/Decode:** Selective calling encode, decode or encode/decode is enabled or disabled on each individual channel. Three simultaneous unique decodes are available for each channel to allow large systems the capability for individual and group calls.

Compatibility with Channel Guard, Digital Channel Guard, GE-STAR, DTMF, Dual Priority and Scan are maintained. Various audible alerting signals are available on choice when programming the radio.

- **DTMF Encode Reperatory Dialing:** When enabled by the information programmed into the personality of the radio, the DTMF encode function can be used by either manually dialing from the keypad or by recalling a complete number stored in memory. Ten stored numbers, including the last number dialed, up to 16 digits are easily recalled to the display for viewing. A convenient display overflow and shift mechanism is incorporated into the display control procedure.
- It is not necessary to press the PTT switch while dialing. Features needed for over dialing, autopatch and paging terminals, including programmed delays, pauses and the generation of the "*" and "#" DTMF pairs are included.
- **Programmable Dual-Priority Scan:** The radio is programmed to listen to a selected channel while scanning back to two priority channels. The radio reverts to the priority level channels should any activity occur on those channels. There are two levels of priority. The first priority channel takes precedence over the second priority channel and the second priority channel takes precedence over the user selected channel.
 - **Manual High/Low Power Selection:** If programmed into the radio, the user will be able to manually select either high or low RF power output through the front panel keyboard.

Physically an M-PD radio consists of three printed wire board assemblies and a battery pack as follows:

- A printed wire board specially shielded with zinc alloy on which the radio assembly (transmit/receive/synthesizer) is assembled.
- A Logic control board containing the microprocessor.
- A Display board carrying various display and indicating circuits.
- A battery pack that fits the M-PD main unit.
- Light weight metal front and back housing.

Radio Assembly

Transmit:

The transmit circuit is made up of four major circuits as follows:

- Wideband Hybrid Exciter: Amplifies the signal from the frequency synthesizer with about 21 dB gain.
- Wideband Power Amplifier: Amplifies the output signal of the exciter (13 dB to 18 dB) to the desired output level for transmission.
- Wideband Power Control Hybrid IC: Can reduce the transmitter output level by 10 dB.
- Output Low pass Filter (LPF): Consists of a three stage LPF to eliminate higher harmonics.

The transmitter completely covers the band within the split with no adjustments except for the RF power control voltage from the controller.

Receive Circuit:

The receiver consists of three major circuits as follows:

- Front End Circuit: Consists of single stage pre-amplifier with about 12 dB gain and the pre BPFs and the post-BPFs of the pre-amplifier.
- First Mixer and IF Circuit: A special double balanced mixer provide a 45 MHz first IF, which is coupled through band pass filter (BPF) and an IF amplifier to get the desired first IF signal.
- Second IF (455 kHz): Consists of one IC and one BPF, containing the second mixer, second IF amplifier and FM detector. The second IF output provides the Logic section with audio output.

Frequency Synthesizer:

The frequency synthesizer is made up of three major modules as follows:

- VCO Module: The VHF band frequency synthesizer has two VCO's, one for transmitting and one for receiving. The transmitter is modulated at both the VCO and the VCTCXO.

- VCTCXO Module: The VCTCXO is a temperature compensated crystal oscillator to provide a 13.2 MHz reference frequency and has modulation capability.
- Phase Lock Loop: Consists of a frequency divider and a low current drain C-MOS IC for phase comparison.

Logic Circuit

The Logic circuit consists of a LCD board, a signaling board and a control board with an audio IC as follows:

- LCD Board: Includes LCD driver circuits for the display.
- Signaling Board: Includes a CMOS microcomputer, an audio amplifier and a comparator circuit. This board provides DTMF and GE STAR encoding, sequential Two Tone decoding and control for the SCAN operation.
- Control Board: Carries a microprocessor, a battery backed RAM, audio circuit and I/O interconnections with the frequency synthesizer and the display. Thus, this board commands all the functions and operation of the M-PD radio.
- Audio IC: Includes transmitter and receiver audio circuits.

Power Supply

The M-PD battery pack connects to the bottom of the M-PD radio to supply 7.5 Volts DC to the unit. The battery packs are available in three capacities: standard, high and extra high. To charge these battery packs, charges are available in three different styles: a desk charger, a wall mount multi-charger and a vehicular charger.

OPERATION

The M-PD Personal Radio is delivered disassembled into three parts:

- M-PD Radio (Main Unit)
- Antenna
- Battery Pack

Assemble these parts into one unit according to the following procedure and as shown in Figure 1 - M-PD Operating Controls and Accessories.

NOTE

Either the antenna or the RF connector should be connected to the M-PD radio main unit, as desired. If the RF connector is inserted in the receptacle, located in the side of the unit, the antenna connector circuit will become open.

1. Screw the antenna **2** or the RF test connector **4** in its receptacle. A clockwise turn will insert the antenna or RF test connector, while a counter clockwise turn will remove them.
2. Slide the battery pack along the bottom of the M-PD main unit from the arrow-marked direction, shown in Figure 1, until the battery pack locks into place.

Operating Procedure (Refer to Figure 1)


To Receive a Message:

1. Slide the Power switch **8** on the side of the battery pack up to turn on the radio.
2. Select a desired channel within a selected mode by pressing the ▲ mark side or ▼ mark side, of the CHAN switch **6** while watching the indication in the display window.

An operating channel may also be selected by pressing the **CHAN** key on the front keypad. Pressing this **CHAN** key displays the current operating channel. To select a different channel, key in the channel number, then press the **CHAN** key. The display will indicate the new channel name or number and update the display flags.

An operating mode may be selected by pressing the **MODE** key, also located on the front keypad. Pressing the **MODE** key displays the current mode. To select a different mode, key in the desired mode number, then press the **MODE** key. The new mode will be displayed.

3. To monitor the channel for idle or busy, watch for the "BSY" symbol to be illuminated in the display or audibly monitor the channel by simultaneously depressing both the ▲ and ▼ volume buttons.

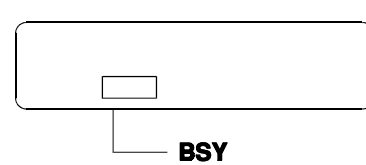


Display
If BSY If BSY lights, it means that the channel is busy.

4. Adjust the audio volume to the desired level by pressing the ▲ mark side (to turn the volume up) or the ▼ mark side (to turn the volume down) of the VOL switch **5**. As the VOL switch is operated, the indication in the display window changes 1 through 31 (about 45 dB). The volume level cannot be set lower than the level programmed in the minimum volume option.

To Send a Message:

Hold the radio so that the antenna is vertical. Then, press the Push-to-Talk (PTT) bar **9** on the left side of the main unit an speak directly into the microphone in a clear and distinctive voice. Always release the PTT bar as soon as you stop talking.

Upon pressing the PTT bar, an indication will appear in the display window **7**.

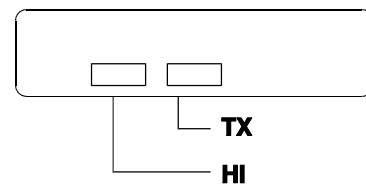

Lights while you are speaking.
Lights for high power.


NOTE

The M-PD unit is provided with an optional timer which inhibits continuous transmission beyond about 120 seconds. When transmission is interrupted due to "time-out", you can resume transmission by releasing and then pressing the PTT bar again.

To Make a Telephone Call:

You can make a telephone call by direct entry through the DTMF keypad or through the **Recall Telephone Number** feature.

1. Turn the radio on, adjust the audio level and select the desired operating channel as covered in **TO RECEIVE A MESSAGE**.

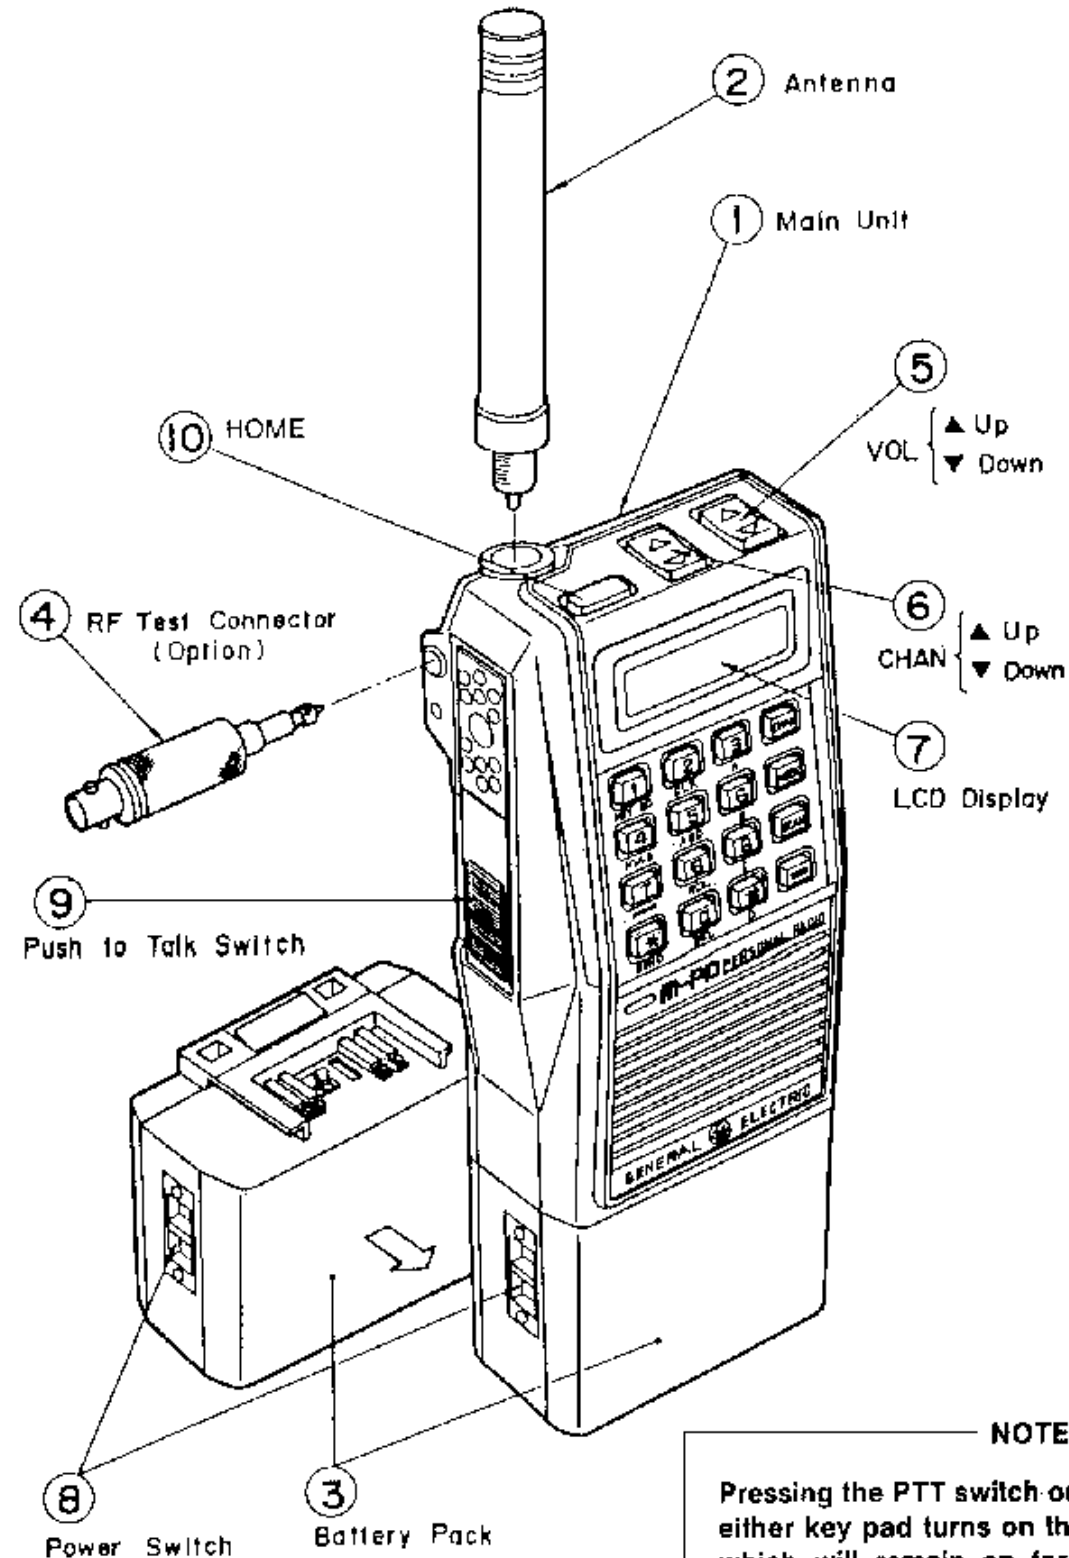

NOTE

Pressing the PTT switch or any other button on either key pad turns on the LCD back lighting which will remain on for a pre-programmed period of time.

Figure 1 - M-PD Operating Controls and Accessories






Figure 2 - Block Diagram

2. Use the DTMF keypad or use the Recall Telephone Number key (RCL) to enter the digits of the telephone number.
3. Press the secondary key  and then press the **SEND** key. An optional tone (sidetone) may be heard as each digit is transmitted.
4. When someone answers, press the **PTT** bar and speak directly into the grille on the radio, or across the face of an external microphone. Release the **PTT** bar as soon as you stop talking. Messages can not be received when the **PTT** bar is pressed.
5. When the conversation is completed, press the (#) key to disconnect from the telephone system.


To Recall a Telephone Number:

The **RCL** button is used to recall the last number dialed or to recall one of the ten 16-digit numbers that can be stored in memory.

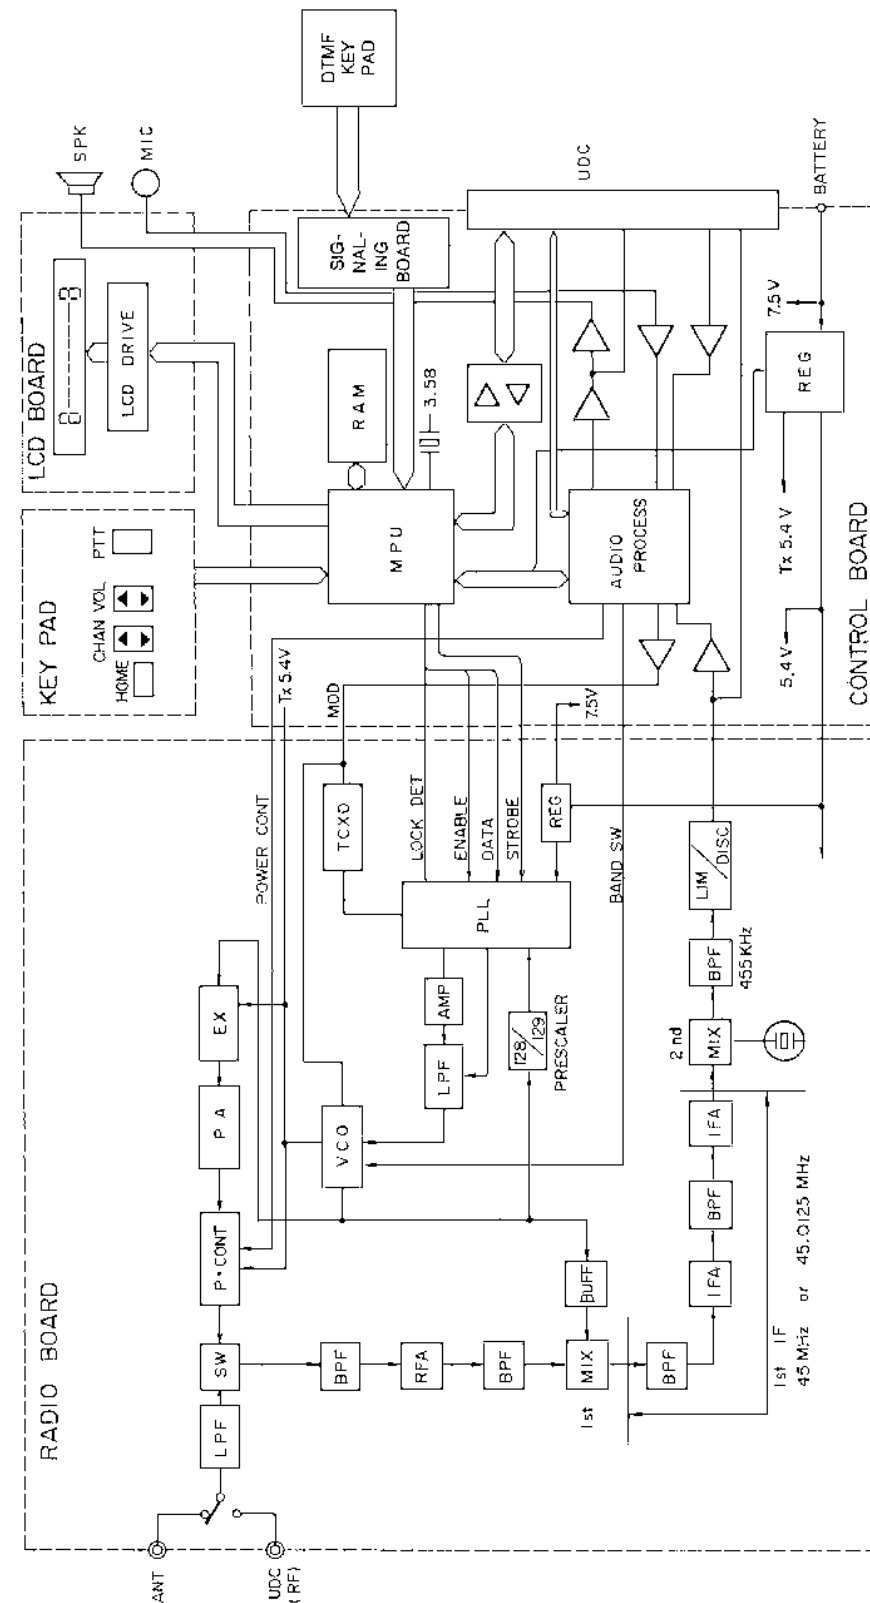To Recall the Last Number Dialed:

1. Press the secondary key  and then the RCL button.
2. Then press the secondary key and then the **SEND** key as in Step 3 of **To Make a Telephone Call**.

To Recall a Telephone Number Stored in Memory:

1. Press the key number of the memory location (1 through 9).
2. Press the secondary key  and then the **RCL** key.
3. Press the secondary key and the **SEND** key as in Step 3 of **To Make a Telephone Call**.

SYSTEM ANALYSIS

Ericsson GE M-PD Personal radios are two-way, FM radios designed for public communications. The M-PD System radio consists of four printed wire boards as follows:

- **Radio Board:** carries the transmit, receive and frequency synthesizer circuits
- **Control Board:** supports logic, control and audio processor circuits
- **Display Board:** carries LCD displays

- **Signaling Board:** provides additional software controlled signaling functions

Interconnection of the control board with other boards and control circuits is made with flexible circuit boards and connectors. All control leads which are "barred", such as PTT, mean that the function indicated occurs when the lead is in a low voltage condition.

Circuit illustrations shown in the following text are simplified representatives of actual circuits. They are intended only to illustrate basic circuit functions.

RADIO BOARD

Transmit Circuits

The M-PD transmit circuit, as shown in Figure 2 - Block Diagram, consists of the following integrated circuit modules:

- Amplifier (TX-Amp)
- Power Amplifier (PA)
- Power Controller (PC)
- Antenna Switch (AS)
- Filter Network (FN)

Amplifier Module (A201):

Amplifier module (TX-Amp) A201 is a single stage RF amplifier hybrid IC. A 0 dBm RF signal on the input will produce a +23 dBm signal on the output (refer to Figure 3). This module is broadband and does not require tuning.

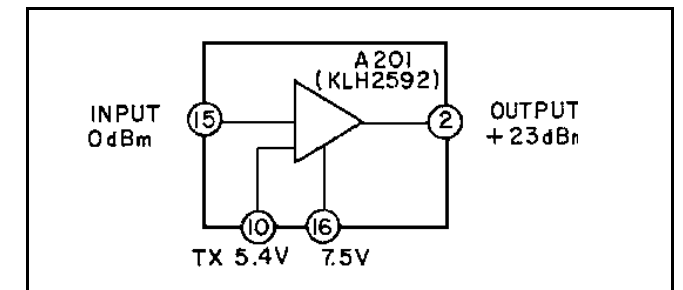


Figure 3 - Amplifier Module (TX-Amp)

Power Amplifier Module (A202):

Power Amplifier (PA) A202 is a three stage, wide band amplifier module with an input and an output impedance of 50 ohms (refer to Figure 4). The first stage of the PA module has the DC power supplied by power control transistor

Q202. The RF power output from Pin 2 of the TX-Amp module A201 is connected through a resistor attenuator to Pin 1 of the PA module where it is applied to the input of the RF power amplifier stages. The RF power amplifier stages amplify the input from the TX-Amp module to a typical power output level of 6 watts at Pin 5. The output at Pin 5 is connected through the power control hybrid IC A203 (PC) and TX-RX switching diode CR201 to low pass filter network FN. A minimum power level of 5 watts is on the output of the filter network.

Power Control Module (A203):

The RF power output of the radio is regulated by sensing variations in the RF power output of the transmit PA module to control the supply voltage to the first stage of the PA module (refer to Figure 5). Supply voltage cannot be applied to the first stage of the PA module until the transmit circuit is keyed, applying 5.4 Volts to Pin 11 of Power Control (PC) hybrid IC A203. When the transmit circuit is keyed, the output of a reference amplifier, determined by the High-Low power control, is applied to the positive (+) input of a comparator circuit.

The output of the final PA is connected to Pin 1 of the PC module and to the 50 ohm coupled line. The detected voltage of the CM coupled output is applied to the negative (-) input of the comparator circuit. The amplifier is enabled when the transmit circuit is keyed, until then, the output of the amplifier is low and transistor Q202 is held off. As the PA module begins to increase output power, the detected voltage causes the series regulator circuit to regulate the supply voltage to maintain constant RF output power.

Filter Network (FN):

The output of the PA module is connected to filter network FN through TX-RX switching diode CR201. The FN network is a passive LC low pass filter with an insertion loss of less than 0.5 dB in the pass band. It also has a rejection greater than 45 dB in the stop band. The output of the FN is connected to the system antenna or to the UDC connector.

Receive Circuit

The M-PD receive circuit, as shown in Figure 2, consists of the following circuits:

- RF Amplifier/Mixer
- First IF Amplifier
- Second IF Amplifier/Discriminator

RF Amplifier/Mixer:

The RF Amplifier/Mixer circuit contains two third order band pass filters (FL301 and FL302), an RF amplifier circuit (Q301) and a double balanced diode mixer circuit (A301). Refer to Figure 6 - RF Amplifier/Mixer. RF from the antenna or UDC connector is coupled through transmit low pass filter FN and RF switching diode CR201 to the input of the RF amplifier circuit. Low pass filter FN is used in the receive circuit to provide additional receive selectivity. The RF signal on the input of the RF amplifier is first coupled through band pass filter FL301 to the input of grounded emitter, broad band RF amplifier transistor Q301. This amplifier provides 12 dB of power gain to reduce thermal noise. The output of the RF amplifier is coupled through band pass filter FL302 to drive double balanced mixer A301.

The RF signal from the RF amplifier and the injection frequency from the synthesizer circuit, provide a difference of 45 MHz IF on the output of the mixer. The double balanced Mixer has a typical conversion loss of 6 dB between the RF input and IF output. All inputs and the output of the RF Amplifier/Mixer one 50 ohms impedance. The +7 dBm injection frequency level, provided by the synthesizer and amplifier circuit transistor Q106, is connected to the injection frequency input through a 50 ohms matching circuit. The output of the Mixer circuit is connected to the input of the first IF Amplifier.

First IF Amplifier:

The first IF amplifier contains two amplifier circuits and two crystal filters of two and four poles respectively (refer to Figure 7). The first IF signal (45 MHz) from the first mixer circuit connects to the input of pre-amplifier transistor Q302 through pre-crystal filter FL303 with an impedance of approximately 3K ohms. Pre-amplifier Q302 provides a 17 dB power gain. The output is connected to the input of IF amplifier transistor Q303 through crystal filter FL304. IF amplifier Q303 has a 13 dB power gain, an input impedance of approximately 3K ohms and an output impedance of approximately 2.2K ohms.

Second IF Amplifier/Discriminator (A302):

The Second IF Amplifier/Discriminator circuit contains FM IF IC A302 (HA12442V) and 455 kHz ceramic filter FL305 (refer to Figure 8). The FM IF IC contains a local oscillator, mixer, IF amplifier, FM detector and an audio amplifier. The 45 MHz IF output from the first IF amplifier is connected to the input of second IF amplifier A302a, Pin 2 of HA12442V and converted to the second IF frequency (455 kHz). The second IF output is connected to Pin 7 of HA12442V through the 455 kHz ceramic filter to the IF amplifier and FM detector circuits. The recovered audio from the FM IF IC is connected to J102-4.

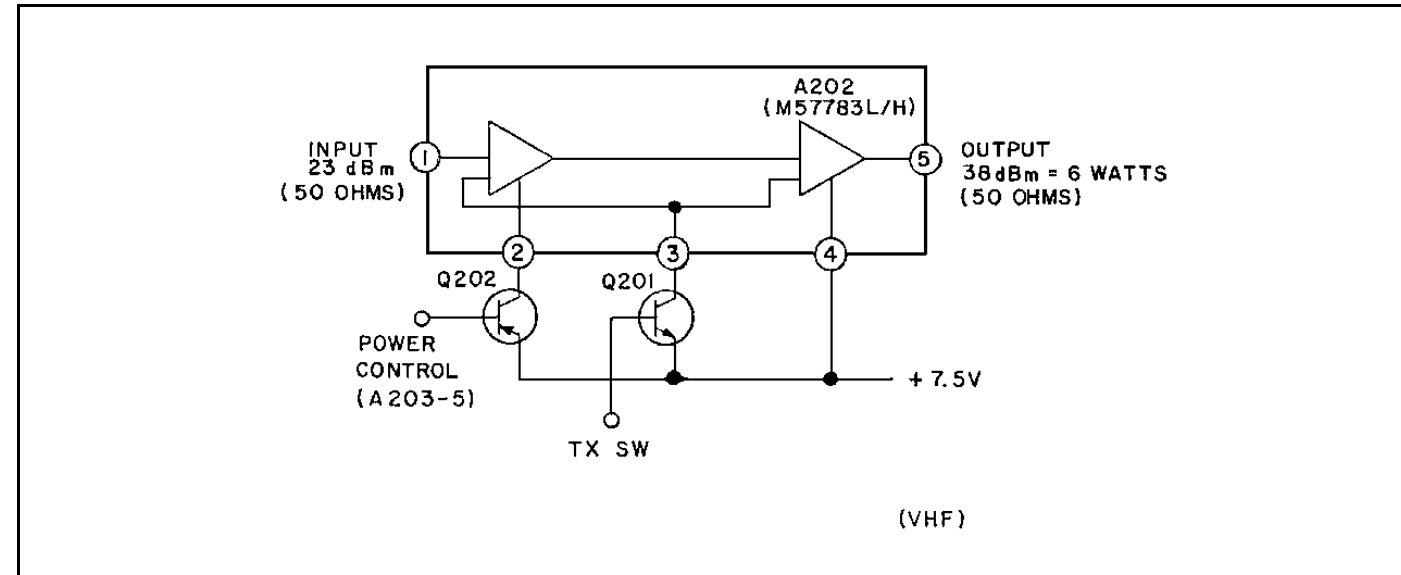


Figure 4 - Power Amplifier

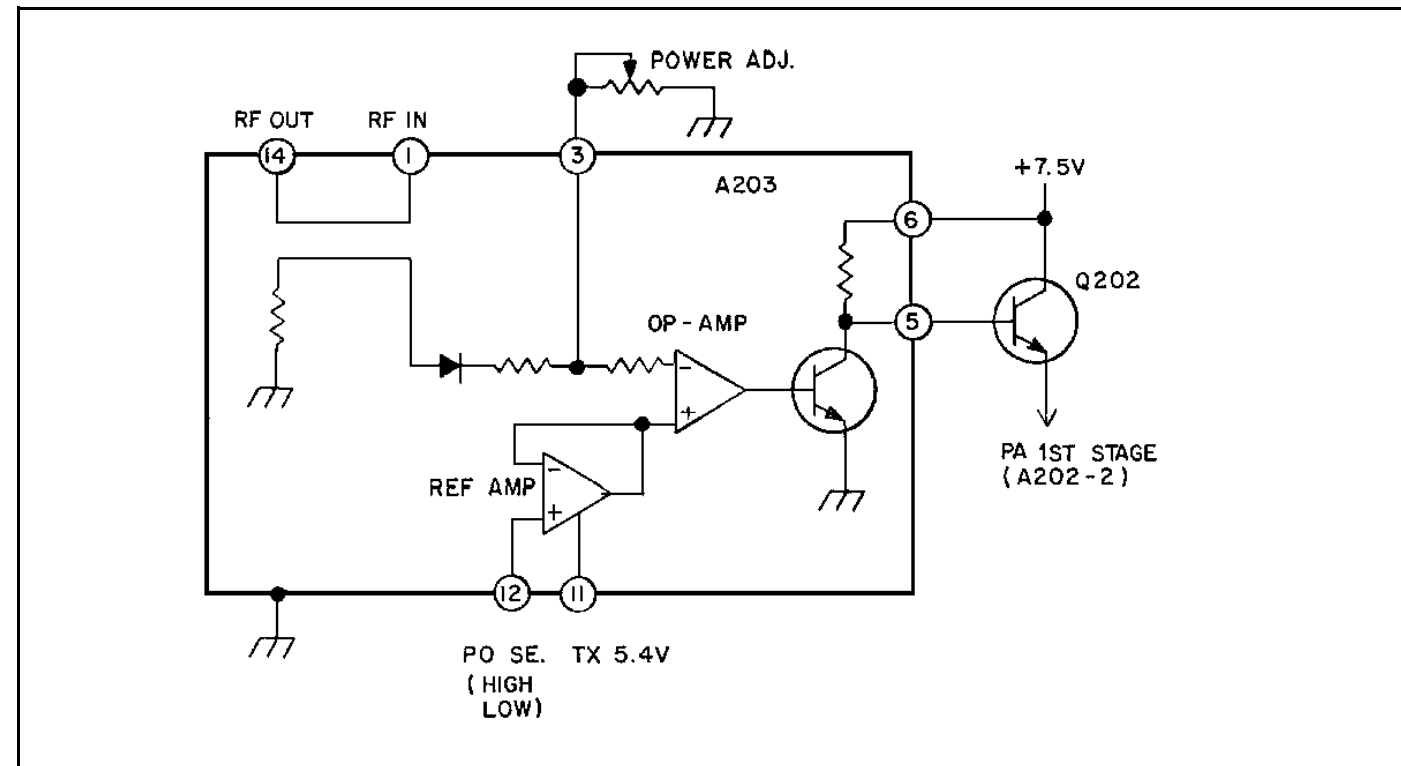


Figure 5 - Power Control Module

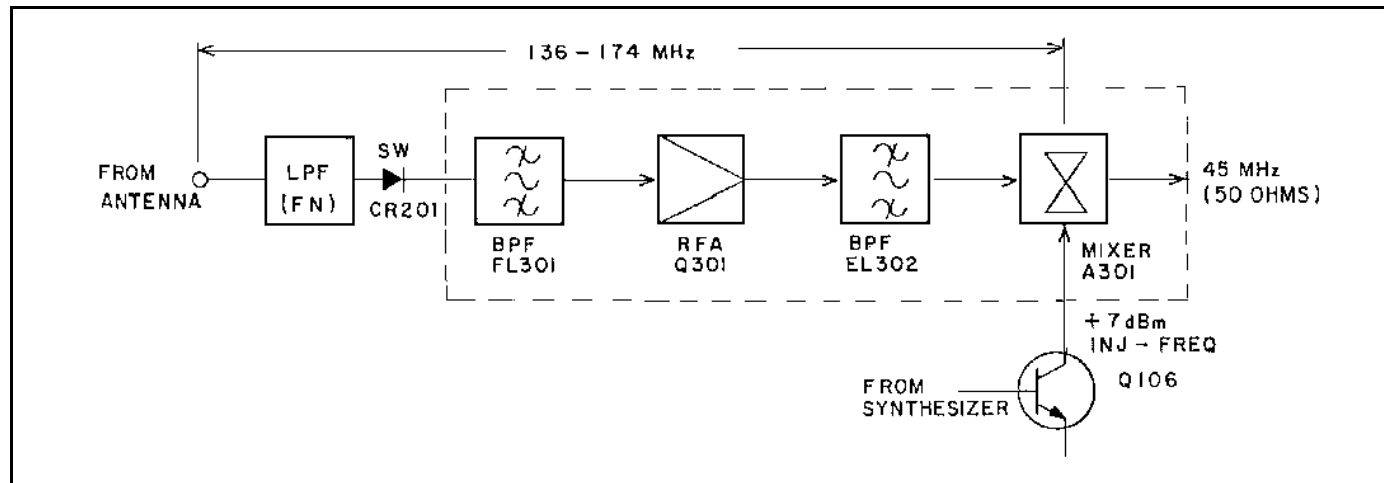


Figure 6 - RF Amplifier/Mixer

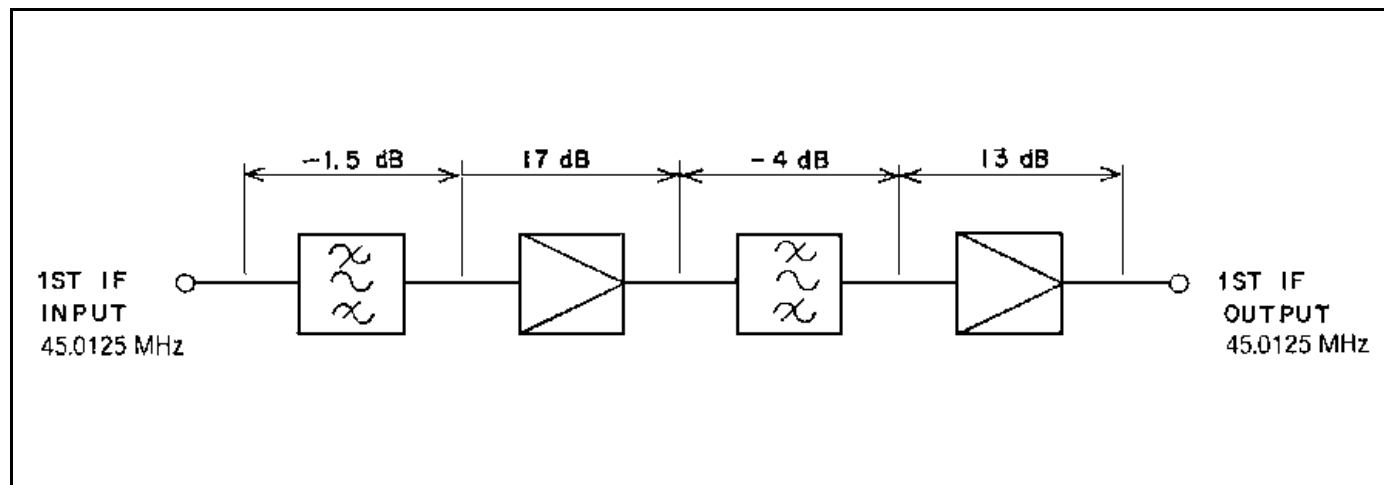


Figure 7 - First IF Amplifier

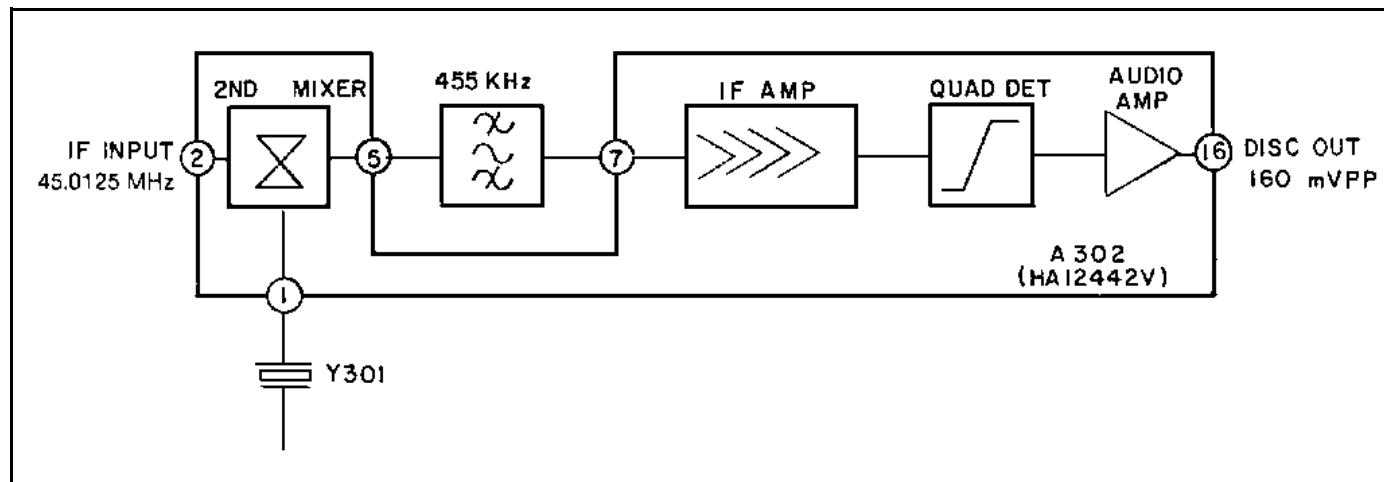


Figure 8 - Second IF Amplifier/Discriminator

Synthesizer Circuit

The Synthesizer circuit contains Phase-Lock-loop module (PLL) A102, VCTCXO Reference Oscillator module A103, TX/RX Voltage Controlled Oscillator module (VCO) A106 and a Low Pass Filter amplifier (LPF). Refer to Figure 9 - Synthesizer. The VCO used to generate the receive and transmit reference frequencies is phase locked to a stable VCTCXO reference oscillator through the use of the PLL. This feedback loop divides the VCO frequency down to a signal in the range of 7 MHz - 10 MHz; divides this signal with a programmable divider to 5/6.25 kHz and generates a VCO control signal by comparing the 5/6.25 kHz feedback with a 5/6.25 kHz signal derived by dividing a 13.5 MHz VCTCXO by 1056. As the least significant bit in the programming is changed, the VCO is forced to change by 5/6.25 kHz.

The synthesizer circuitry is contained on two modules, the VCO module A106 and the VCTCXO reference Oscillator module A103.

Phase-Lock-Loop Module (A102):

The PLL module A102 contains a reference frequency, divider, phase detector and a programmable divider. The phase detector DC voltage output signal is filtered with a passive low pass filter followed by a 6.25 kHz filter to reduce the level of reference modulation on the VCO. This DC output represents the error between the VCO frequency

(phase) and the reference (VCTCXO) and is applied to the VCO on frequency. A lock detect output is developed from Pin 9 output of A102. This output is checked by the micro-computer to prevent transmission before the VCO is on frequency.

Serial data from the microcomputer is shifted into the PLL to set the division parameter which establishes the frequency. A clock signal is provided on another input and the data is latched with the enable input.

Voltage Controlled Oscillator A106:

The VCO uses a low noise, high gain transistor as the basic oscillator. The resonant circuit, which determines the frequency of oscillation, is formed by a High Q coil which is used to set the center frequency at the factory. The output of each VCO (TX and RX) is coupled into a cascade amplifier which produces +3 dBm. The output of the RX-VCO amplifier is coupled into the receive first double balanced mixer circuit A301 through buffered amplifier Q106. The TX-VCO amplifier output is directly connected to the TX-Amp input through attenuator circuit R201, R202 and R203.

VCTCXO Reference Oscillator A103:

The A103 oscillator module is self contained, fully temperature compensated and operates at a frequency of 13.2 MHz. The oscillator also has modulation capability. Frequency is adjusted by a trimmer while monitoring the transmit circuit output at the antenna jack.

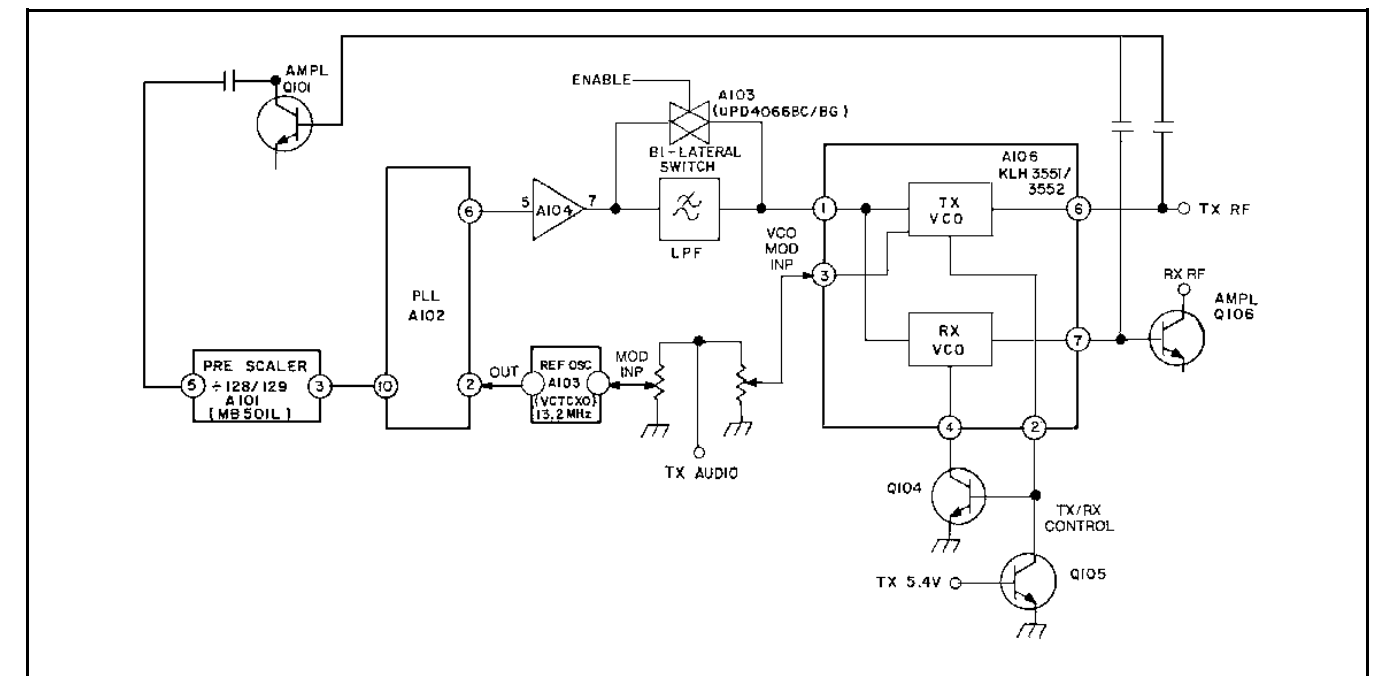


Figure 9 - Synthesizer

CONTROLLER CIRCUIT

This controller circuit consists of control circuits and audio circuits. Physically, this circuit consists of three circuit boards as follows:

- Control Board
- Signaling Board
- LCD Board

Control Board

The Control board consists of the following circuits (see Figure 2):

- CMOS Microcomputer (A1)
- RAM with Lithium Battery (A2 plus BT1)
- Audio Processor (A3)
- Audio Amplifier (A4, A6)
- Voltage Regulator Circuits (A7, A9, Q2, Q3, Q10 and Q11)
- External Data Buffer (A5)

Microcomputer (A1):

The microcomputer provides various software for controlling the radio unit as follows:

- Loading data to the frequency synthesizer
- Fetching and processing the PTT, monitor, channel selection and volume control
- Loading data to the LCD display
- Controlling the audio circuit (Processor)
- Encoding/decoding the Channel Guard and digital Channel Guard
- Controlling the loading interface for the radio data (channel number and signaling)

RAM (A2):

RAM has a capacity of 2K bits X 8 for storing various data for controlling the radio. The data is entered from the outside to the microcomputer through the UDC connector and then to the RAM. The data mainly consist of the following:

- Channel Frequency Data
- CG/DCG data

- TX Power, TX Modulation Data
- Squelch Data
- Display Data ...etc.

Audio Processor (A3):

The Audio processor consists of a one-chip IC accommodating almost all of the audio functions. The audio functions are under control of the microcomputer in compliance with the function of the radio unit. The functions of the audio processor are as follows:

- Tone Reject Filter
- Limiter Amplifier
- Volume and Modulation Level Control
- Post Limiter Filter
- Squelch Filter and Rectifier
- CG/DCG Encode/Decode Filter and Limiter
- D/A Converter and comparator
- OSC Circuit and Digital Interface for Microcomputer

All of these functions are made up of switched, capacitor filters, amplifiers and timing logic. The timing for this logic is derived from the 3.579545 MHz clock generator. The clock signal is also applied to the microcomputer.

Audio Amplifier (A4 and A6):

The audio amplifier is located between the audio processor and the microphone or the speaker. Amplifier A6 provides pre-emphasis and amplification for transmit audio and de-emphasis for the receive audio. Amplifier A4 amplifies the output signal of A6 to the level adequate for driving the speaker and VDC audio output.

Voltage Regulator Circuits (A7, A9, Q2, Q3, Q10 and Q11):

Voltage Regulator Circuit A9 provides a regulated +2.5 VDC. Using the 2.5 VDC as a reference voltage, A9, Q2 and Q3, in combination, generate 5.4 VDC for the radio unit. The control Transistors Q10 and Q11 are used for current-limiting to avoid break down.

External Data Buffer (A5):

The External Data Buffer is located between the UDC connector and the microcomputer for protection of the internal circuits.

Signaling Board

The Signaling Board consists of the following circuits:

- CMOS Microcomputer (A301)
- Audio Amplifier (A302)
- Comparator (A303)

Microcomputer (A301):

The microcomputer provides various software for signaling the radio unit as follows:

- Encoding the DTMF and GE Star
- Decoding the sequential Two Tone
- Providing control for SCAN operation

Audio Amplifier (A302):

The audio amplifier is located between the audio processor and the microcomputer (A301). Amplifier (A302b and A302a) provides a Low Pass Filter, resistors R310-R312 and capacitors C303-C305, for tone encoding.

Comparator (A303):

The comparator converts the audio signal from the DISC output into a signal which can decode the microcomputer (A301).

LCD Board

The LCD board is composed of the following items:

- LCD Drive IC (A1)
- LCD
- Back Lighting Circuit (Q1, Q2 and CR1 - 6)

The LCD driver converts data from the microcomputer into a signal which can drive the LCD display. The LCD display is equipped with 8 character, 14 segments each and eight status displays. Microcomputer signals drive the LCD driver and the driver turns the LCD on. Also this board has a back lighting circuit enabled upon receiving a signal from the microcomputer when any of the control switches (VOL, PTT, ...etc.) are operated.

Key Pad

The key pad, used with the standard M-PD Personal Radio, is located on the top of the housing. This key pad consists of

flexible cable and rubber contacts. The cable connects with the microcomputer.

UDC Connector

The UDC connector is located on the side of the radio housing so that various kinds of external equipment connections can be made. External equipment connecting signals are as follows:

- | | | |
|----------------|---|-------------------------|
| • TX Data | } | For Data Loader |
| • RX Data | | |
| • CTS | | |
| • PTT | } | For External MIC & SPKR |
| • EXT MIC | | |
| • RX Audio Out | | |
| • T/R | | |
| • Mute | | |
| • Disc Out | | |
| • +7.5 Volts | | |
| • Switch Out | } | GE Star Lanyard |
| • EMER | | |
| • UDC | | |

The radio control microprocessor senses the value of voltage at the UDC line and switches the appropriate audio circuits to provide proper radio/ accessory operation. The UDC voltage is set by two resistors within the UDC connector.

Battery Packs

The battery packs are available in three capacities: standard, high and extra high. All battery packs provide a nominal 7.5 Volt DC output.

To protect the battery pack from external short circuits, the positive (+) charging contact is diode protected.

An internal thermistor senses variations in battery pack temperature to automatically control a charger and provide a maximum charge without overheating the battery pack. All battery packs can be charged in one hour.

The battery is shipped fully charged to the customer, ready for use. However, if the battery pack is stored for any length of time it should be fully charged before placing into service.

Charger combinations for charging the battery packs are available with charge times of 1 hour, 3 hours and 16 hours. A combination can be a single unit desk or a vehicular charger. It can also be a wall mounted multiple charger.

Charge Level

A fully charged battery pack should provide a terminal voltage greater than 7.5V. A fully discharged battery pack should provide a reading of no less than 6V.

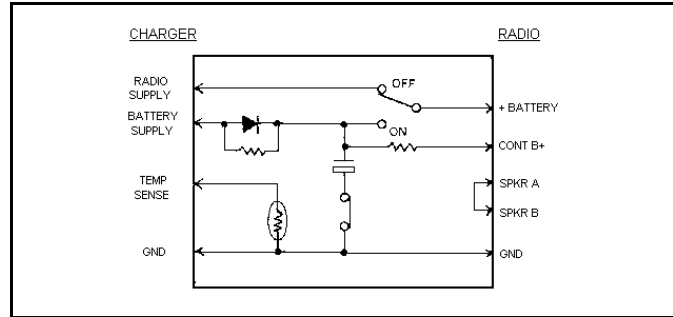


Figure 10 - Battery Pack

MAINTENANCE

This Maintenance section provides information on adjustments of the radio (transmit, receive and synthesizer), preventive maintenance and a Disassembly Procedure. Information is also provided for removing and replacing chip components and module replacement. The Service Section, listed in the Table Of Contents, provides a more complete set of alignment procedures for the radio plus a detailed Troubleshooting Procedure.

INITIAL ADJUSTMENT

After the radio has been programmed, as described in Programming Instructions (LBI-31635), the following adjustments should be made by a certified electronics technician.

Transmit Circuit Alignment:

The transmit circuit is factory tuned and should not require any readjustment. The frequency and modulation should be measured and recorded for future reference.

Receive Circuit:

No initial adjustments to the receive circuit are required.

Synthesizer Circuit:

No initial adjustments to the synthesizer are required.

PREVENTIVE MAINTENANCE

To ensure a high operating efficiency and to prevent mechanical and electrical failures, routine checks should be performed of all mechanical and electrical parts at regular intervals. Preventive maintenance should include the following checks:

Antenna:

The antenna and antenna contact should be kept clean, free from dirt or corrosion. If the antenna or contact should become dirty or corroded, loss of radiation and a weak signal will result.

Mechanical Inspection:

Since portable radio units are subject to shock and vibration, check for loose plugs, nuts, screws and other parts to make sure that nothing is working loose.

Alignment:

The transmit and receive circuit meter readings should be checked periodically and the alignment "touched up" when necessary. Refer to the applicable alignment procedure and troubleshooting sheet, found in Service Section LBI-31677, for typical voltage readings.

Frequency Check:

Check transmit frequency and deviation. Normally, these checks are made when the unit is first put into operation. They should be repeated after the first month of operation, then again one time each year.

WARNING

To prevent loss of memory in RAM A2 on the Controller Board, lithium battery BT1 should be replaced at three years. A procedure for changing BT1 is provided in Service Section LBI-31677.

DISASSEMBLY

To gain access to the Radio board (transmit, receive and synthesizer circuits) or Control Board for servicing, disassemble as follows:

- Radio Board: Step 1 through Step 4
- Controller Board: Step 5 through Step 7

Disassembly Procedure (See Figure 11):

CAUTION

ALWAYS remove the battery pack before removing any component board to avoid blowing the fuse.

Equipment Required:

- Small Phillips-head screwdriver
- Small flat-blade screwdriver
- Needlenose pliers
- Allen-head wrench for removing set screws
- Pencil-type soldering iron (25-40 Watts) with a fine tip

Step 1:

To gain access to the radio, loosen, but do not remove, the four captive screws shown at **A** and **B**. Carefully remove the back cover. For normal radio alignment, the back cover is all that needs to be removed. When tightening the captive screws, they should be no tighter than 4 0.5 inch-pounds. (See Figure 12)

Step 2:

To remove the Radio Board, unscrew and remove the antenna at **C** and RF connector at **D**. Remove the six screws at **E** using the Phillips-head screwdriver. The radio portion can now be detached from the rear cover. (See Figure 13)

Step 3:

Remove the shield cover **F** from the eggcrate. (See Figure 14)

Step 4:

To remove the antenna changeover switch, remove the tap screw at **G** using the Phillips-head screwdriver. Unsolder the antenna switch lead connection at **H**. The antenna switch assembly can now readily be removed by hand. (See Figure 15)

Step 5:

To remove the Controller Board remove the five screws at **I** from the Controller board. Use the Phillips-head screwdriver. (See Figure 16)

Step 6:

Unplug the LCD control flex circuit at **J** from the connector at **K**. The Controller Board can now readily be removed from the LCD board. (See Figure 17)

Step 7:

To remove the LCD Board, pull the contact Pins at **L** out of the socket in the MIC flex circuit. Remove the seven screws at **M**, using the Phillips-head screwdriver. The LCD board can now be readily removed. (See Figure 18)

REPLACEMENT

The major components of the M-PD Personal Radio are the PA, TX-AMP (driving amplifier), PC (Power Control Module), VCO (Voltage Controlled Oscillator) and the VCTCXO (Ref. Osc.). These are very reliable devices and will not normally need to be replaced. Before replacing any of these modules, always check out the associated circuitry carefully.

To remove any of these major components, refer to the applicable replacement procedure found in the Service Section (LBI-31677).

TROUBLESHOOTING PROCEDURE

Maintenance of the M-PD Personal Radio is facilitated by using the Troubleshooting Procedures and service techniques unique to this radio. The Troubleshooting procedures are designed to quickly lead the serviceman to the defective circuit or component. These procedures are found in the Service Section.

WEATHERPROOF INTEGRITY

The M-PD radio is designed to meet MI-810-D specification for Blowing Rain. All access to the M-PD radio are protected from water entry by suitable gaskets and seals. However, degradation due to use, or disassembly during repairs, may affect the integrity of the seals as provided by factory assembly. A maintenance procedure is provided in the Service Section (LBI-31677) to assure that the radio housing will continue to meet the weatherproof features as designed.

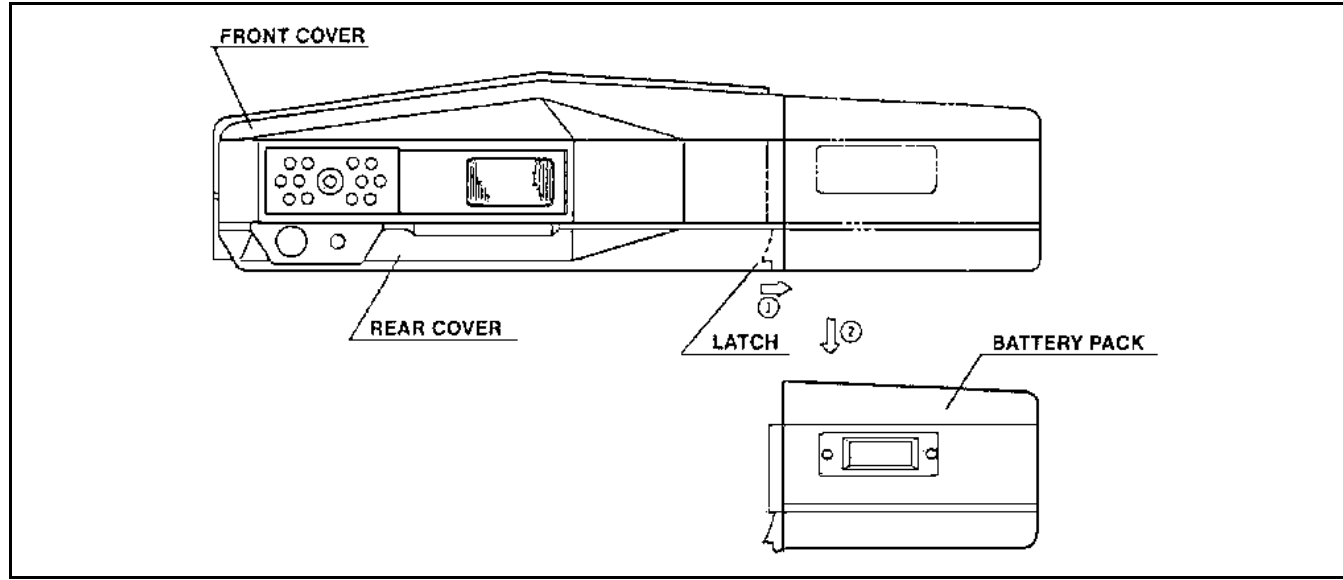


Figure 11 - Disassembly

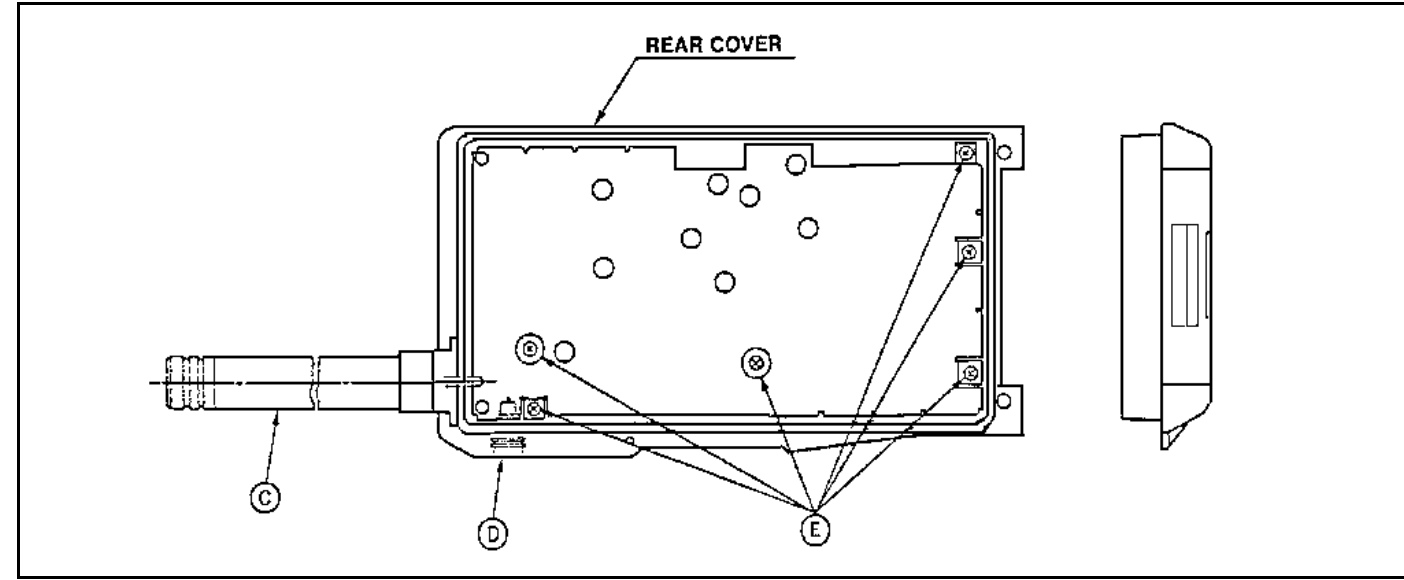


Figure 13 - Disassembly Step 2

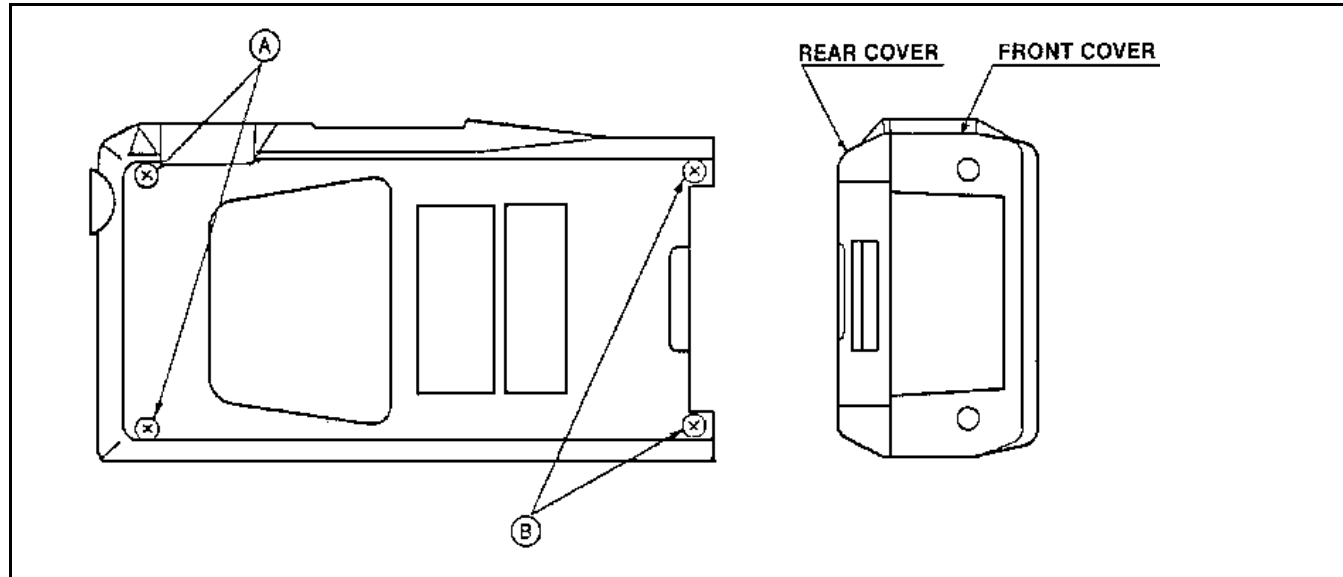


Figure 12 - Disassembly Step 1

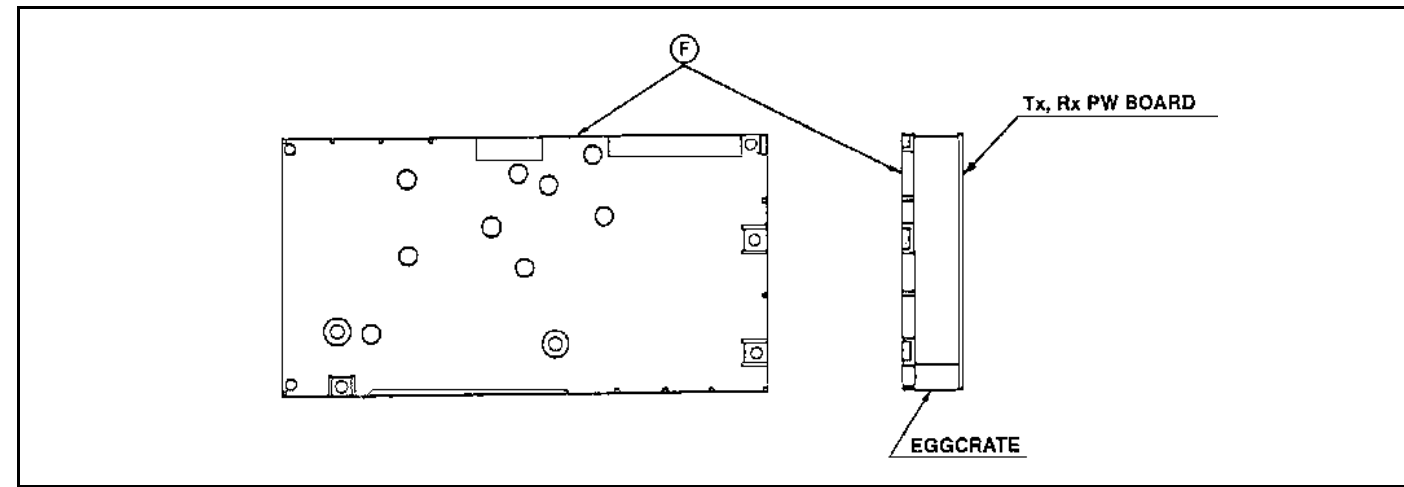


Figure 14 - Disassembly Step 3

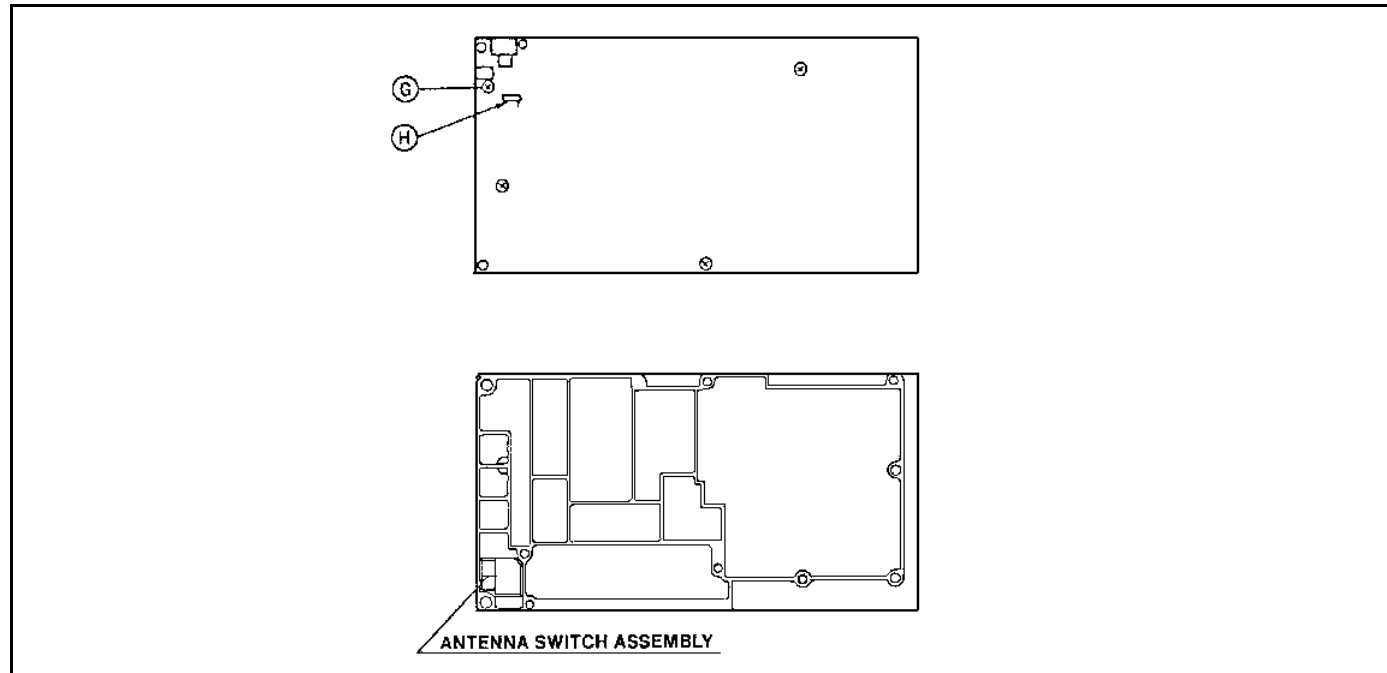


Figure 15 - Disassembly Step 4

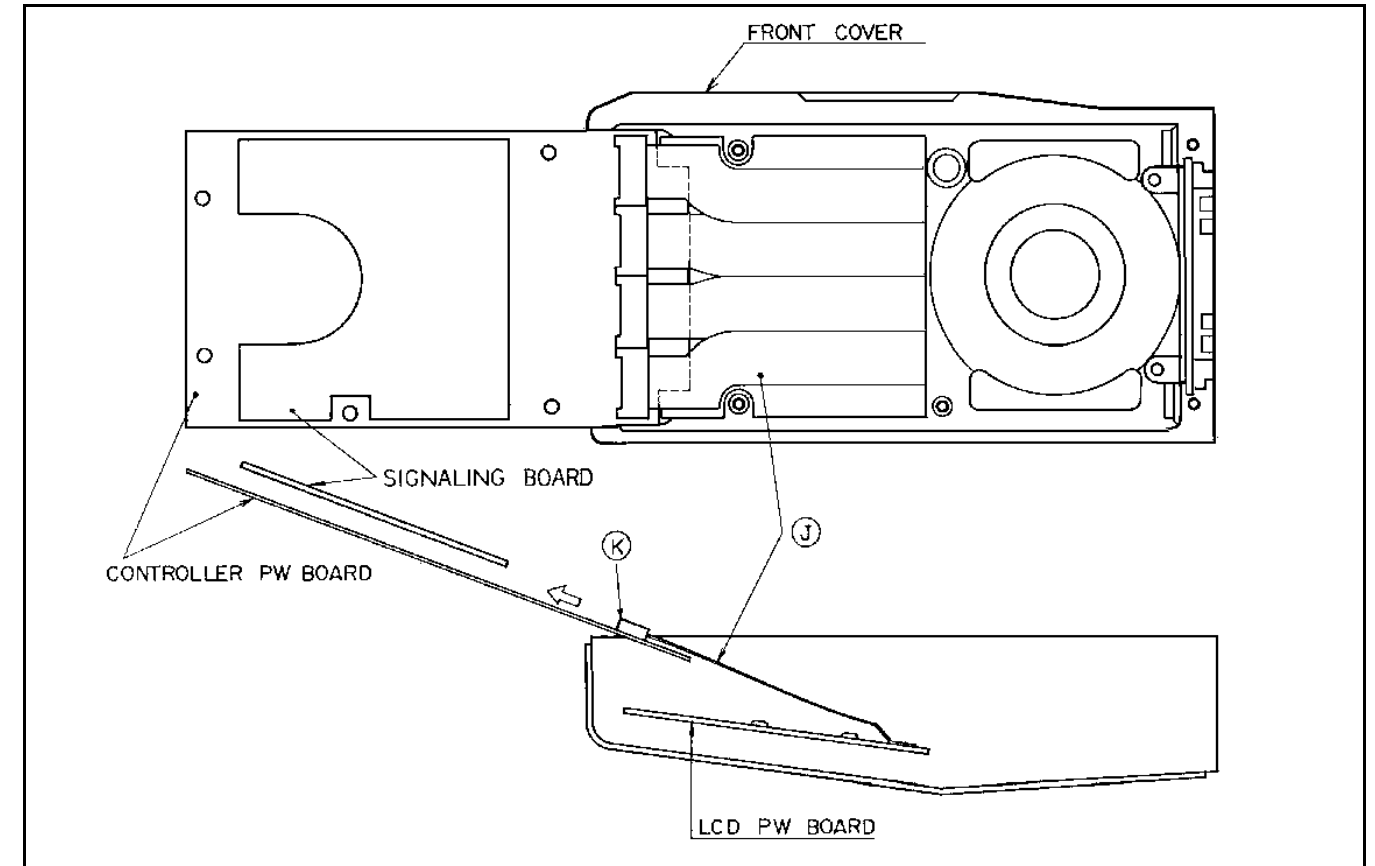


Figure 17 - Disassembly Step 6

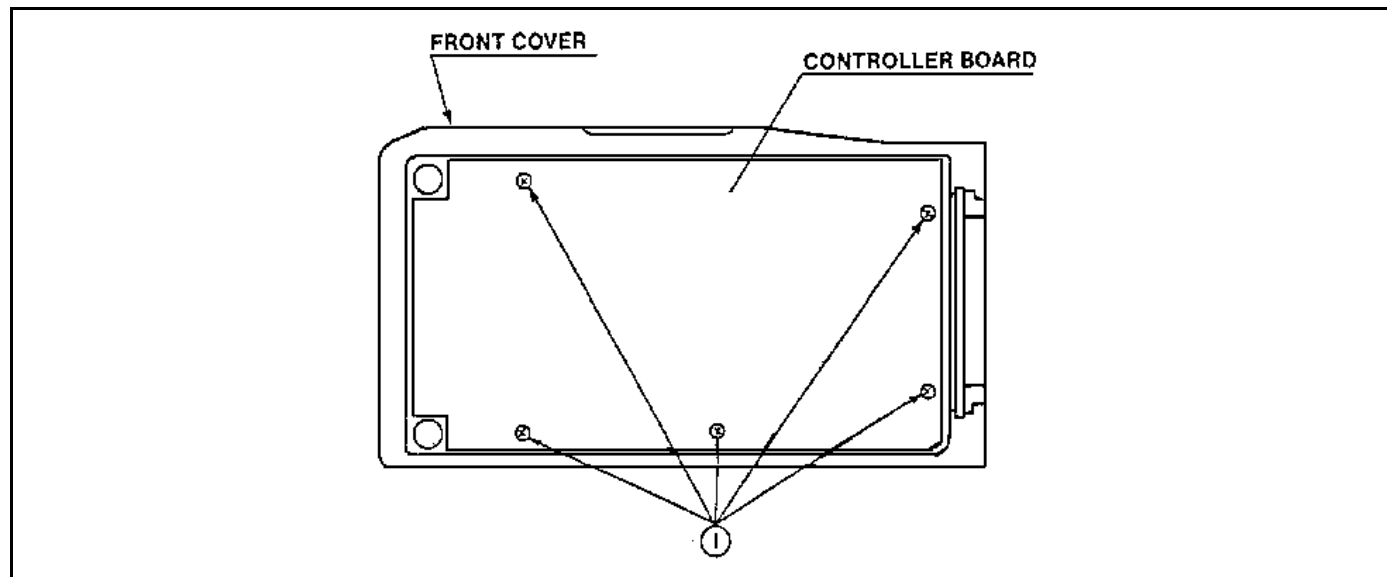


Figure 16 - Disassembly Step 5

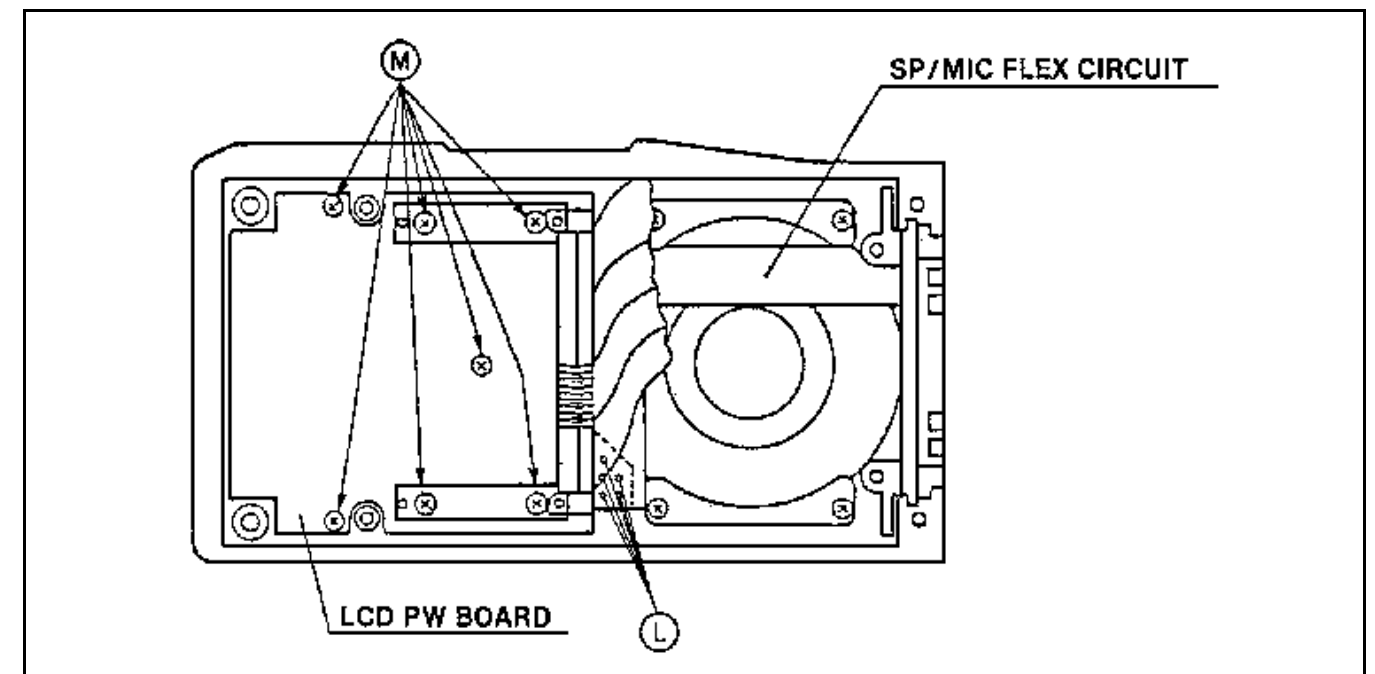


Figure 18 - Disassembly Step 7

—IMPORTANT NOTICE—

DO NOT USE FRICTION PAD KIT ON RADIO UNITS WHICH WILL BE USED IN VEHICULAR CHARGERS.


APPLICATION OF PADS AS SPECIFIED MAKES THE RADIO HOUSING UNSUITABLE FOR USE IN VEHICULAR CHARGERS DUE TO LIMITED CLEARANCE IN CHARGER POCKET.

THESE INSTRUCTIONS COVER THE INSTALLATION OF FRICTION PAD KIT 19A7055B5G1

1. MOUNTING SURFACES OF HOUSING TO BE CLEAN, DRY AND FREE OF GREASE. SURFACE MAY BE WIPED CLEAN WITH ISOPROPYL ALCOHOL.

CAUTION: AVOID CONTACT OF CLEANING LIQUIDS WITH PLASTIC PARTS OF RADIO ASSEMBLY.

2. REMOVE PROTECTIVE LINER AND APPLY FRICTION PADS IN POSITION SHOWN.
3. APPLY PRESSURE TO PAD TO SQUEEZE OUT ALL TRAPPED AIR AND ASSURE ALL EDGES ARE IN FULL CONTACT WITH CASE.

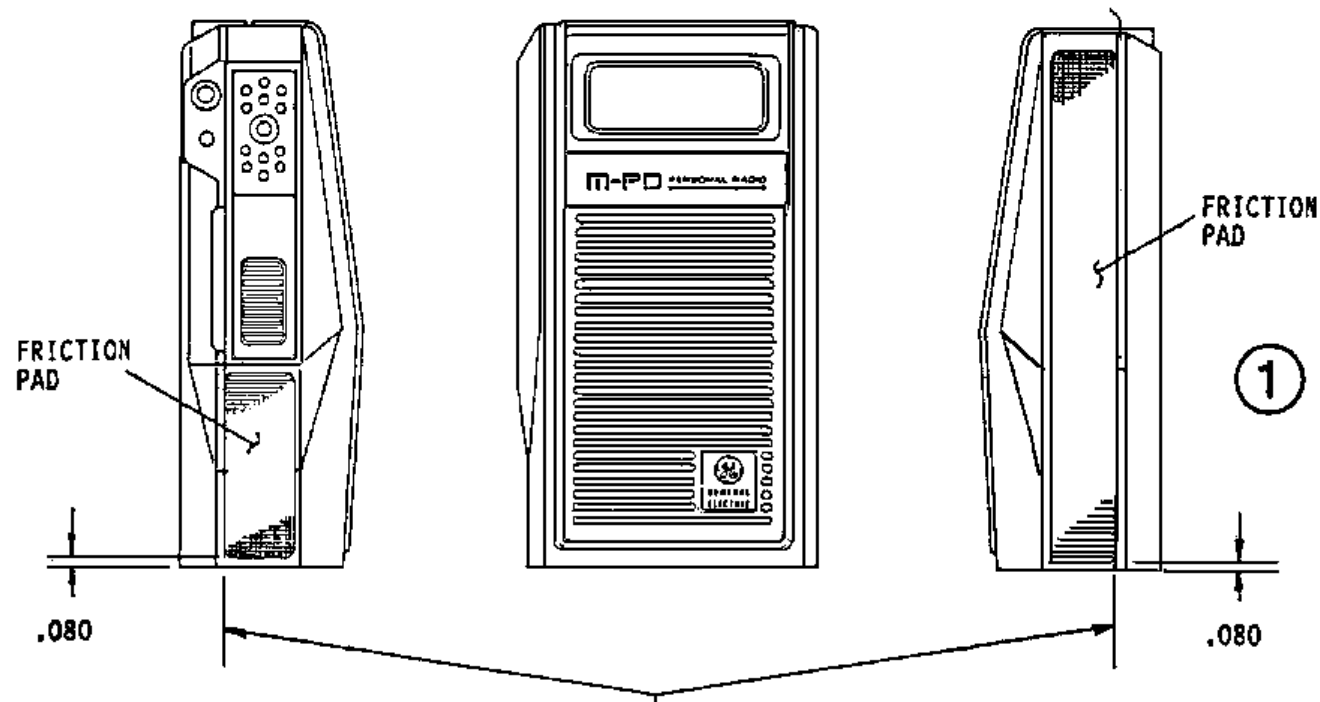

ALIGN EDGE OF PAD AND EDGE OF FRONT COVER
CAUTION: DO NOT OVERLAP PAD ONTO SURFACE OF REAR COVER.

INTRINSICALLY SAFE USAGE

Selected personal radios with appropriate factory installed F4 Options are certified as Intrinsically Safe by the Factory Mutual Research Corporation for use in Class 1, Division 1 or 2, hazardous locations in the presence of Groups C and D atmospheres; Non-incendive Class 1, Division 2, hazardous locations in the presence of Groups A, B, C and D atmospheres.

Hazardous locations are defined in the National Electrical Code Useful standards NFPA 437A and NFPA 437M for the classifications of hazardous areas may be ordered from the National Fire Protection Association, Batterymarch Park, Quincy, MA 02269.

BATTERIES

Only batteries with a green latch shall be used with a personal radio that is rated and labeled as Factory Mutual Intrinsically Safe. Use of non-specified batteries voids Factory Mutual approval. The following battery options are approved for use in intrinsically safe radios:

- PDPA1C (19A704850P4) Rechargeable battery, standard capacity
- PDPA1D (19A704860P4) Rechargeable battery, high capacity
- PDPA1F (19A704860P6) Rechargeable battery, extra high capacity

ACCESSORIES

The accessories listed below are approved for use with intrinsically safe radios. Use of accessories other than those listed voids Factory Mutual approval.

- PDAB1A (19B801508P3) Headset/Microphone
- PDAC1A (19B801508P2) Earpiece kit
- PDAC1B (19B801508P8) GE-STAR Lanyard
- PDAE1A (19B801508P1) Speaker/Microphone
- PDAE1B (19B801508P4) Speaker/Microphone with GE-STAR Lanyard
- PDAE1C (19B801508P6) Speaker/Microphone/Antenna
- PDNC1A (19B234804P21) Antenna, 150-174 MHz, Helical, WB
- PDNC1B (19B234804P1) Antenna, 136-151 MHz, Helical
- PDNC1C (19B234804P2) Antenna, 150-162 MHz, Helical

- PDNC1D (19B234804P3) Antenna, 162-174 MHz, Helical
- PDNC1E (19B234804P11) Antenna, 403-440 MHz, Helical
- PDNC1F (19B234804P12) Antenna, 440-470 MHz, Helical
- PDNC1G (19B234804P13) Antenna, 470-512 MHz, Helical
- PDNC1L (19A149061P10) Antenna, 403-440 MHz, Whip
- PDNC1M (19A149061P11) Antenna, 440-470 MHz, Whip
- PDNC1N (19A149061P12) Antenna, 470-512 MHz, Whip
- PDNC1H (19B235043P1) Antenna, 806-870 MHz, Elevated Feed
- PDNC1J (19A149061P2) Antenna, 806-870 MHz, Short Flex
- PDNC1K (19A149061P1) Antenna, 806-870 MHz, Flex
- PDHC1C (19A144704G1) Belt Clip
(19B233241G1)
- PDHC1D (19B226627G2) Swivel Mount
(19A144704G1)
(19B233243G1)
- PDHC1P (19D901765P2) Case & Belt Loop
(19D901765P5)
(19D901765P13)
- PDHC1R (19D901765P4) Case & Belt Loop for radio w/high capacity battery
(19D901765P5)
(19D901765P13)
- PDHC1S (19D901765P1) Case/Swivel Mount/Belt Loop
(19D901765P5)
(19D901765P13)
(19B226627G2)
- PDHC1T (19D901765P3) Case/Swivel Mount/Belt Loop for radio w/high capacity battery
(19D901765P5)
(19D901765P13)
(19B226627G2)
- PDHC1K (19B233236G1) Shoulder Strap
(19B216496P3)

MEMORY EFFECT IN NICKEL-CADMIUM BATTERIES:

Nickel-Cadmium batteries can develop a condition called "Memory Effect" or reduced battery capacity. This condition occurs when:

1. The battery is continuously overcharged for long periods of time.
2. A regularly performed duty cycle which allows the battery to expend only a limited portion of its capacity.

If the nickel-cadmium battery is only sparingly or seldom used and is left on continuous charge for one or two months at a time, it could develop the "Memory Effect." On the first discharging cycle, the output voltage could be sufficiently lowered to reduce the battery's hours of useful service.

The most common method of causing the "Memory Effect" is regularly performing short duty cycles. This is when the battery is operated so that only a portion (50%) of its capacity is expended. This type of operation can cause the battery to become temporarily inactive and show a severe decrease in the ability to deliver at full rated capacity.

Any nickel-cadmium battery showing signs of reduced capacity should be checked for the "Memory Effect" before being returned under warranty or scrapped. If the "Memory Effect" is a fact, a procedure for reconditioning it should be performed as follows:

1. A complete discharge (deep discharge). This can be accomplished by turning the radio on and allowing the battery to discharge overnight.
2. A full charge cycle using an appropriate Ericsson GE charger.
3. This procedure should be repeated again. Performing the deep discharge and charge cycle at least twice should sufficiently restore the battery.

REDUCED CAPACITY IN NICKEL-CADMIUM BATTERIES:

Nickel-Cadmium batteries in some applications can develop a condition of reduced capacity, sometimes called "Memory Effect". This condition may occur when:

1. The battery is continuously overcharged for long periods of time.
2. A regularly performed duty cycle which allows the battery to expend only a limited portion of its capacity.

If the nickel-cadmium battery is only sparingly or seldom used and is left on continuous charge for one or two months at a time, it could experience reduced capacity. On the first discharging cycle, the output voltage could be sufficiently lowered to reduce the battery's hours of useful service.

The most common method of causing this limited capacity is regularly performing short duty cycles; when the battery is operated so that only a portion (< 50%) of its capacity is expended. This type of operation can cause the battery to become temporarily inactive and show a severe decrease in the ability to deliver at full rated capacity.

Any nickel-cadmium battery showing signs of reduced capacity should be carefully checked before being returned under warranty or scrapped. If **reduced capacity** is a fact, the following procedure may restore capacity:

1. Discharge the multicell battery at the normal discharge rate until the output voltage is approximately 1 Volt per cell. This equals 6 Volts output for current Ericsson GE M-PD personal radio batteries.

Refer to the typical Ni-Cd cell discharge curve in Figure 19. Note the flatness of the discharge voltage. Discharging below the knee of the curve does not give added service. Experience shows discharging below 1.0 Volt is not necessary for reconditioning a cell.

2. A full charge cycle using an appropriate Ericsson GE charger.
3. This procedure should be repeated again. Performing the rated discharge and charge cycle at least twice should sufficiently restore the battery.

NOTE

The above procedure is easily done when using the discharge analyzer (19B801506P9) with the Ericsson GE Rapid Multi-Charger (19B801506P16 or P18).

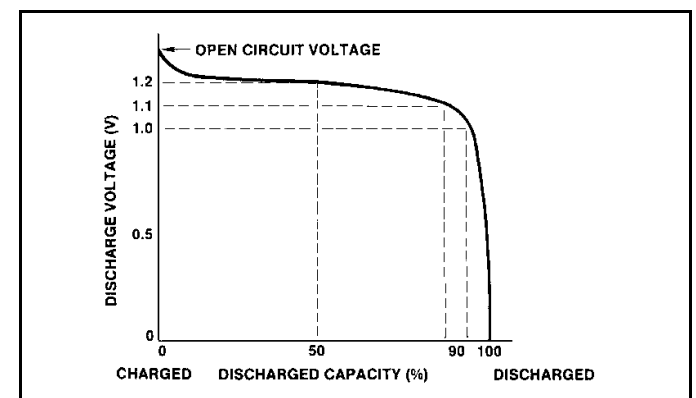



Figure 19 - Typical Ni-Cd Voltage Discharge Curve

PARTS LIST


M-PD SYSTEM RADIO CHASSIS
A4WE03897
ISSUE 3

| SYMBOL | GE PART NO. | DESCRIPTION |
|-----------------------------|----------------|-------------------------------|
| MPDD1 | A4WE03737 | LCD Board |
| MPDC3 | A4WE04023 | Controller Board |
| MPDSIG | A4WE04084 | Signaling Board |
| ----- SOCKETS ----- | | |
| J1 and J2 | SL-101-T-12 | Socket |
| ----- FUSSES ----- | | |
| F1 | K19/2DDB010043 | 275005 5A |
| ----- PLUGS ----- | | |
| P1 | K19/2PDA023150 | 68908-006P |
| ----- SPEAKER ----- | | |
| SPKR1 | K19/2SDA001286 | VS-50W-24ohm 0.5W |
| ----- MICROPHONE UNIT ----- | | |
| MIC | K19/2SAA006109 | EM-78 |
| ----- CAPACITORS ----- | | |
| C1 thru C5 | K19/2CAR011196 | Ceramic chip, 1000 pF, 50 WV |
| ASSOCIATED PARTS | | |
| | 19B234804P1 | Antenna 136-150 MHz. |
| | 19B234804P2 | Antenna 150-162 MHz. |
| | 19B234804P21 | Antenna 150-174 MHz. |
| | 19B234804P3 | Antenna 162-174 MHz. |
| | 19B234804P11 | Antenna 403-440, 406-460 MHz. |
| | 19B234804P12 | Antenna 440-492 MHz. |
| | 19B234804P13 | Antenna 470-512 MHz. |
| | 19A148061P1 | Antenna 806-870 MHz. |


*COMPONENTS ADDED, DELETED OR CHANGED BY PRODUCTION CHANGES.

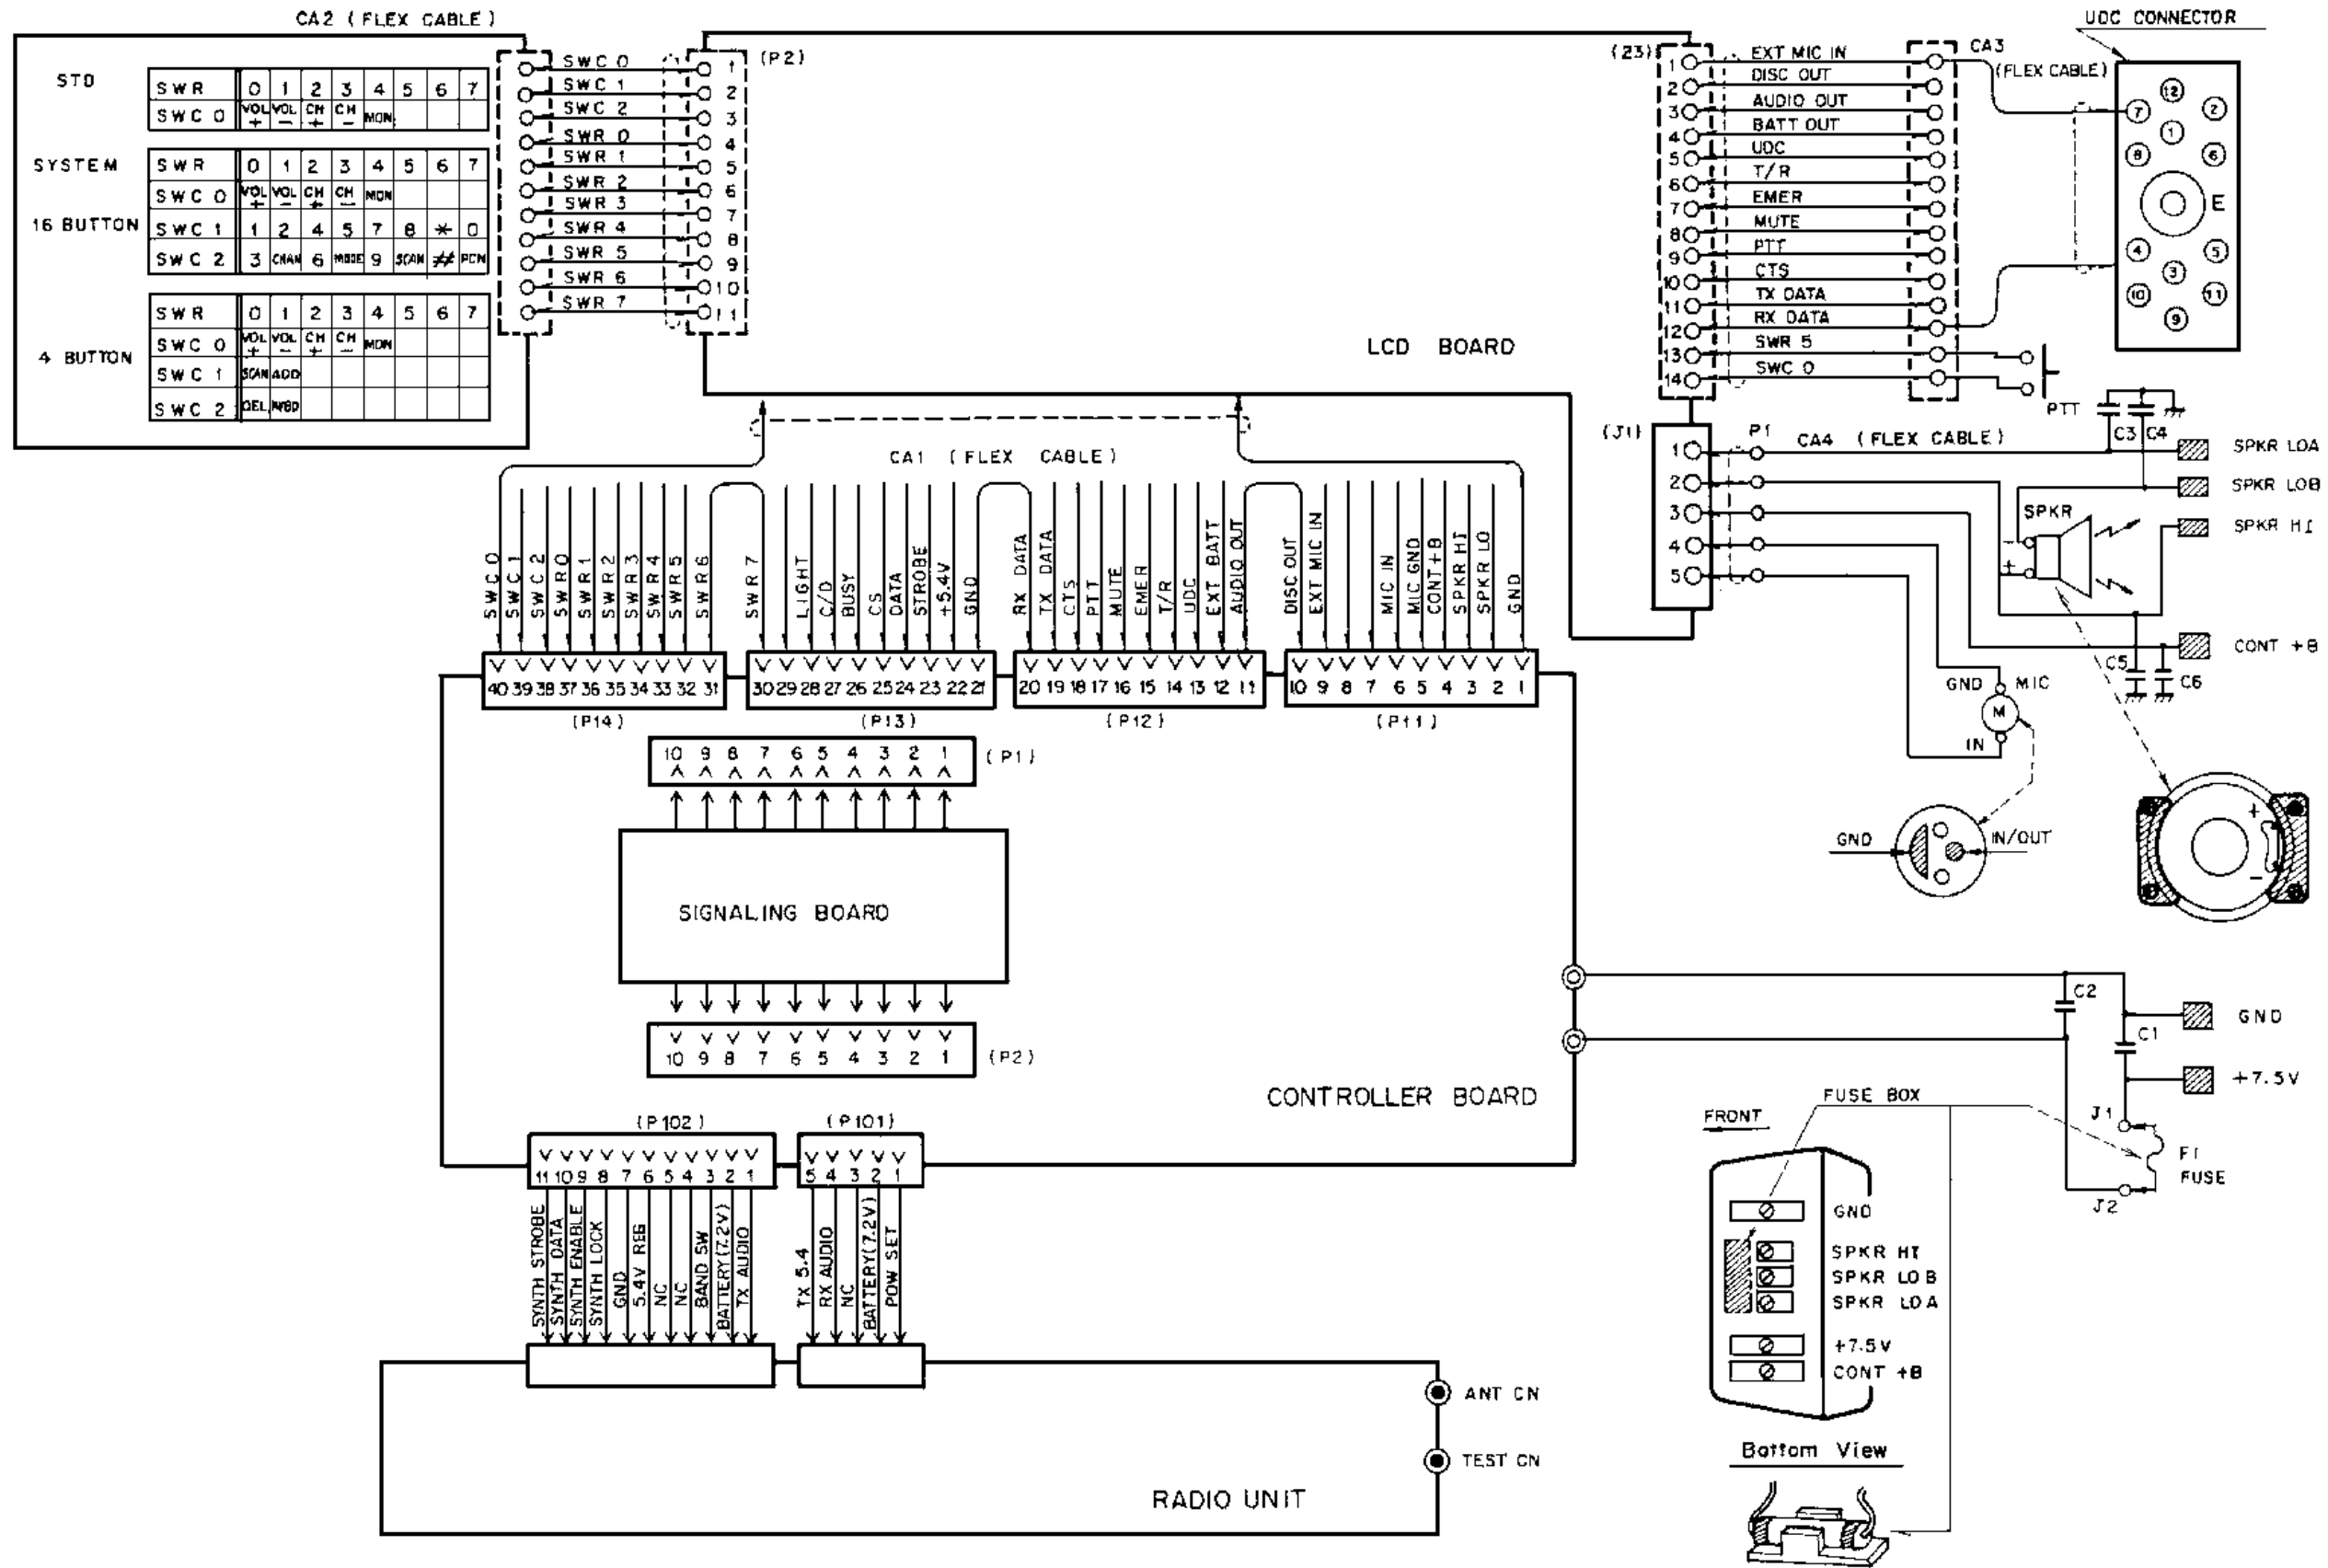

COMPONENT SIDE

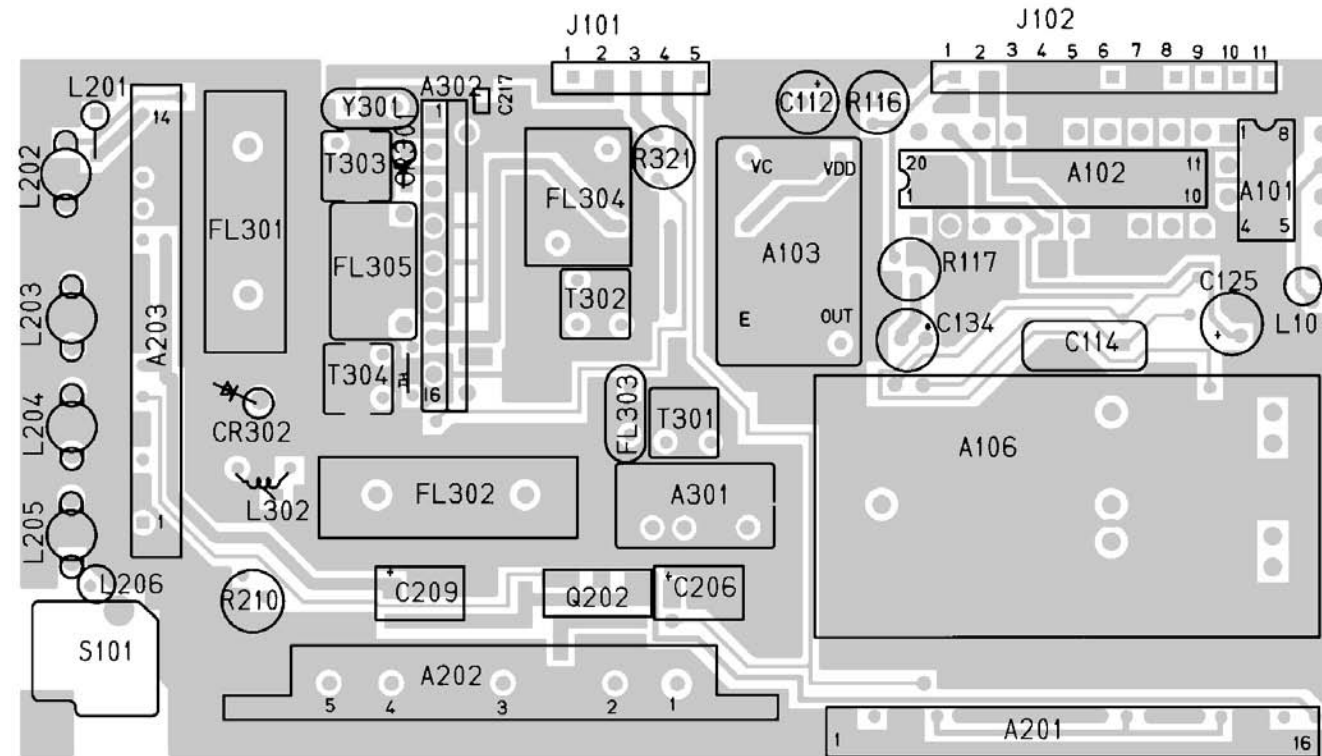


SOLDER SIDE

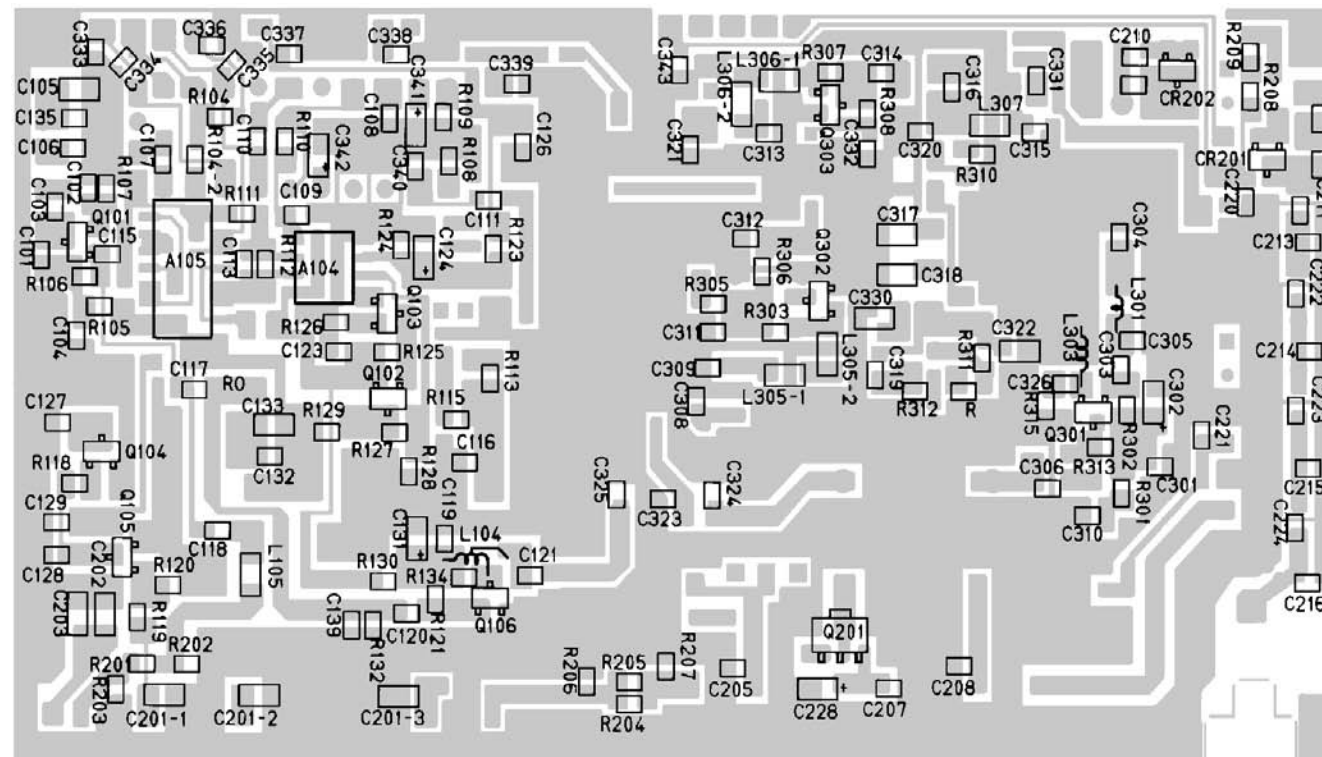


RADIO BOARD
A4WE03739/40


COMPONENT SIDE

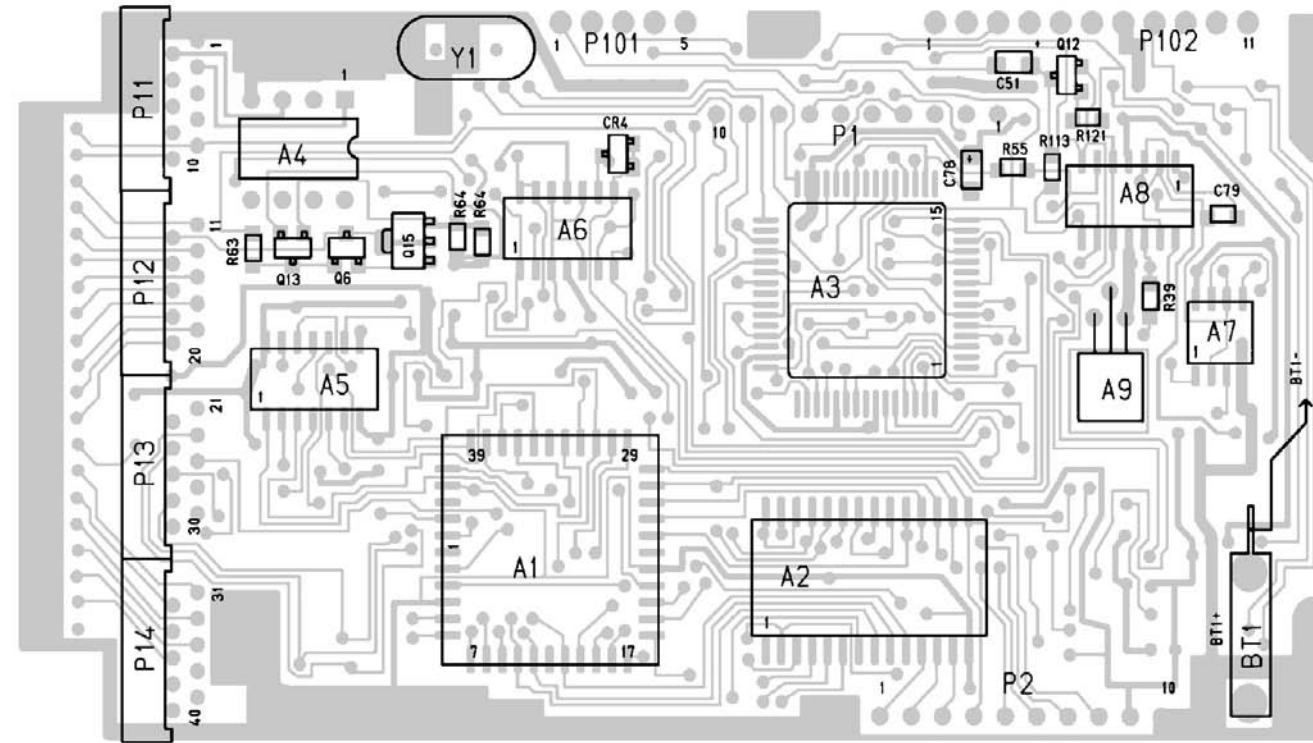

SOLDER SIDE

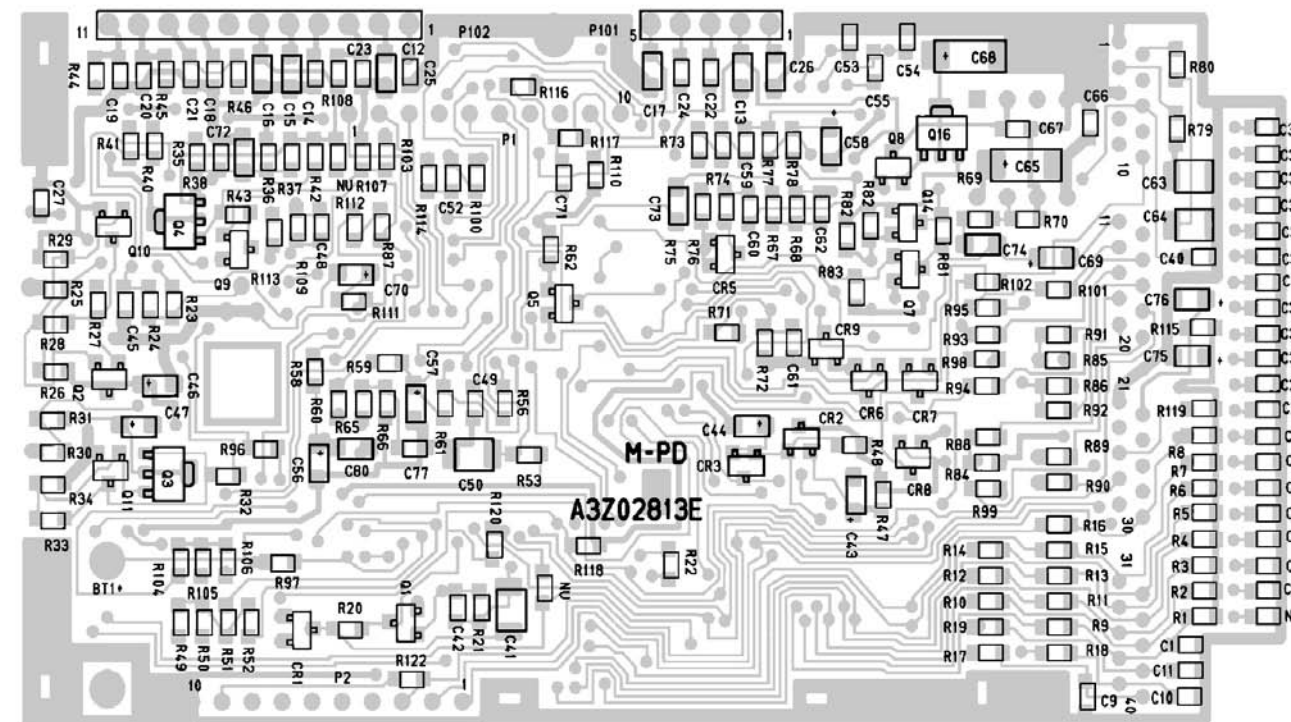


Controller Board
A4WE04023


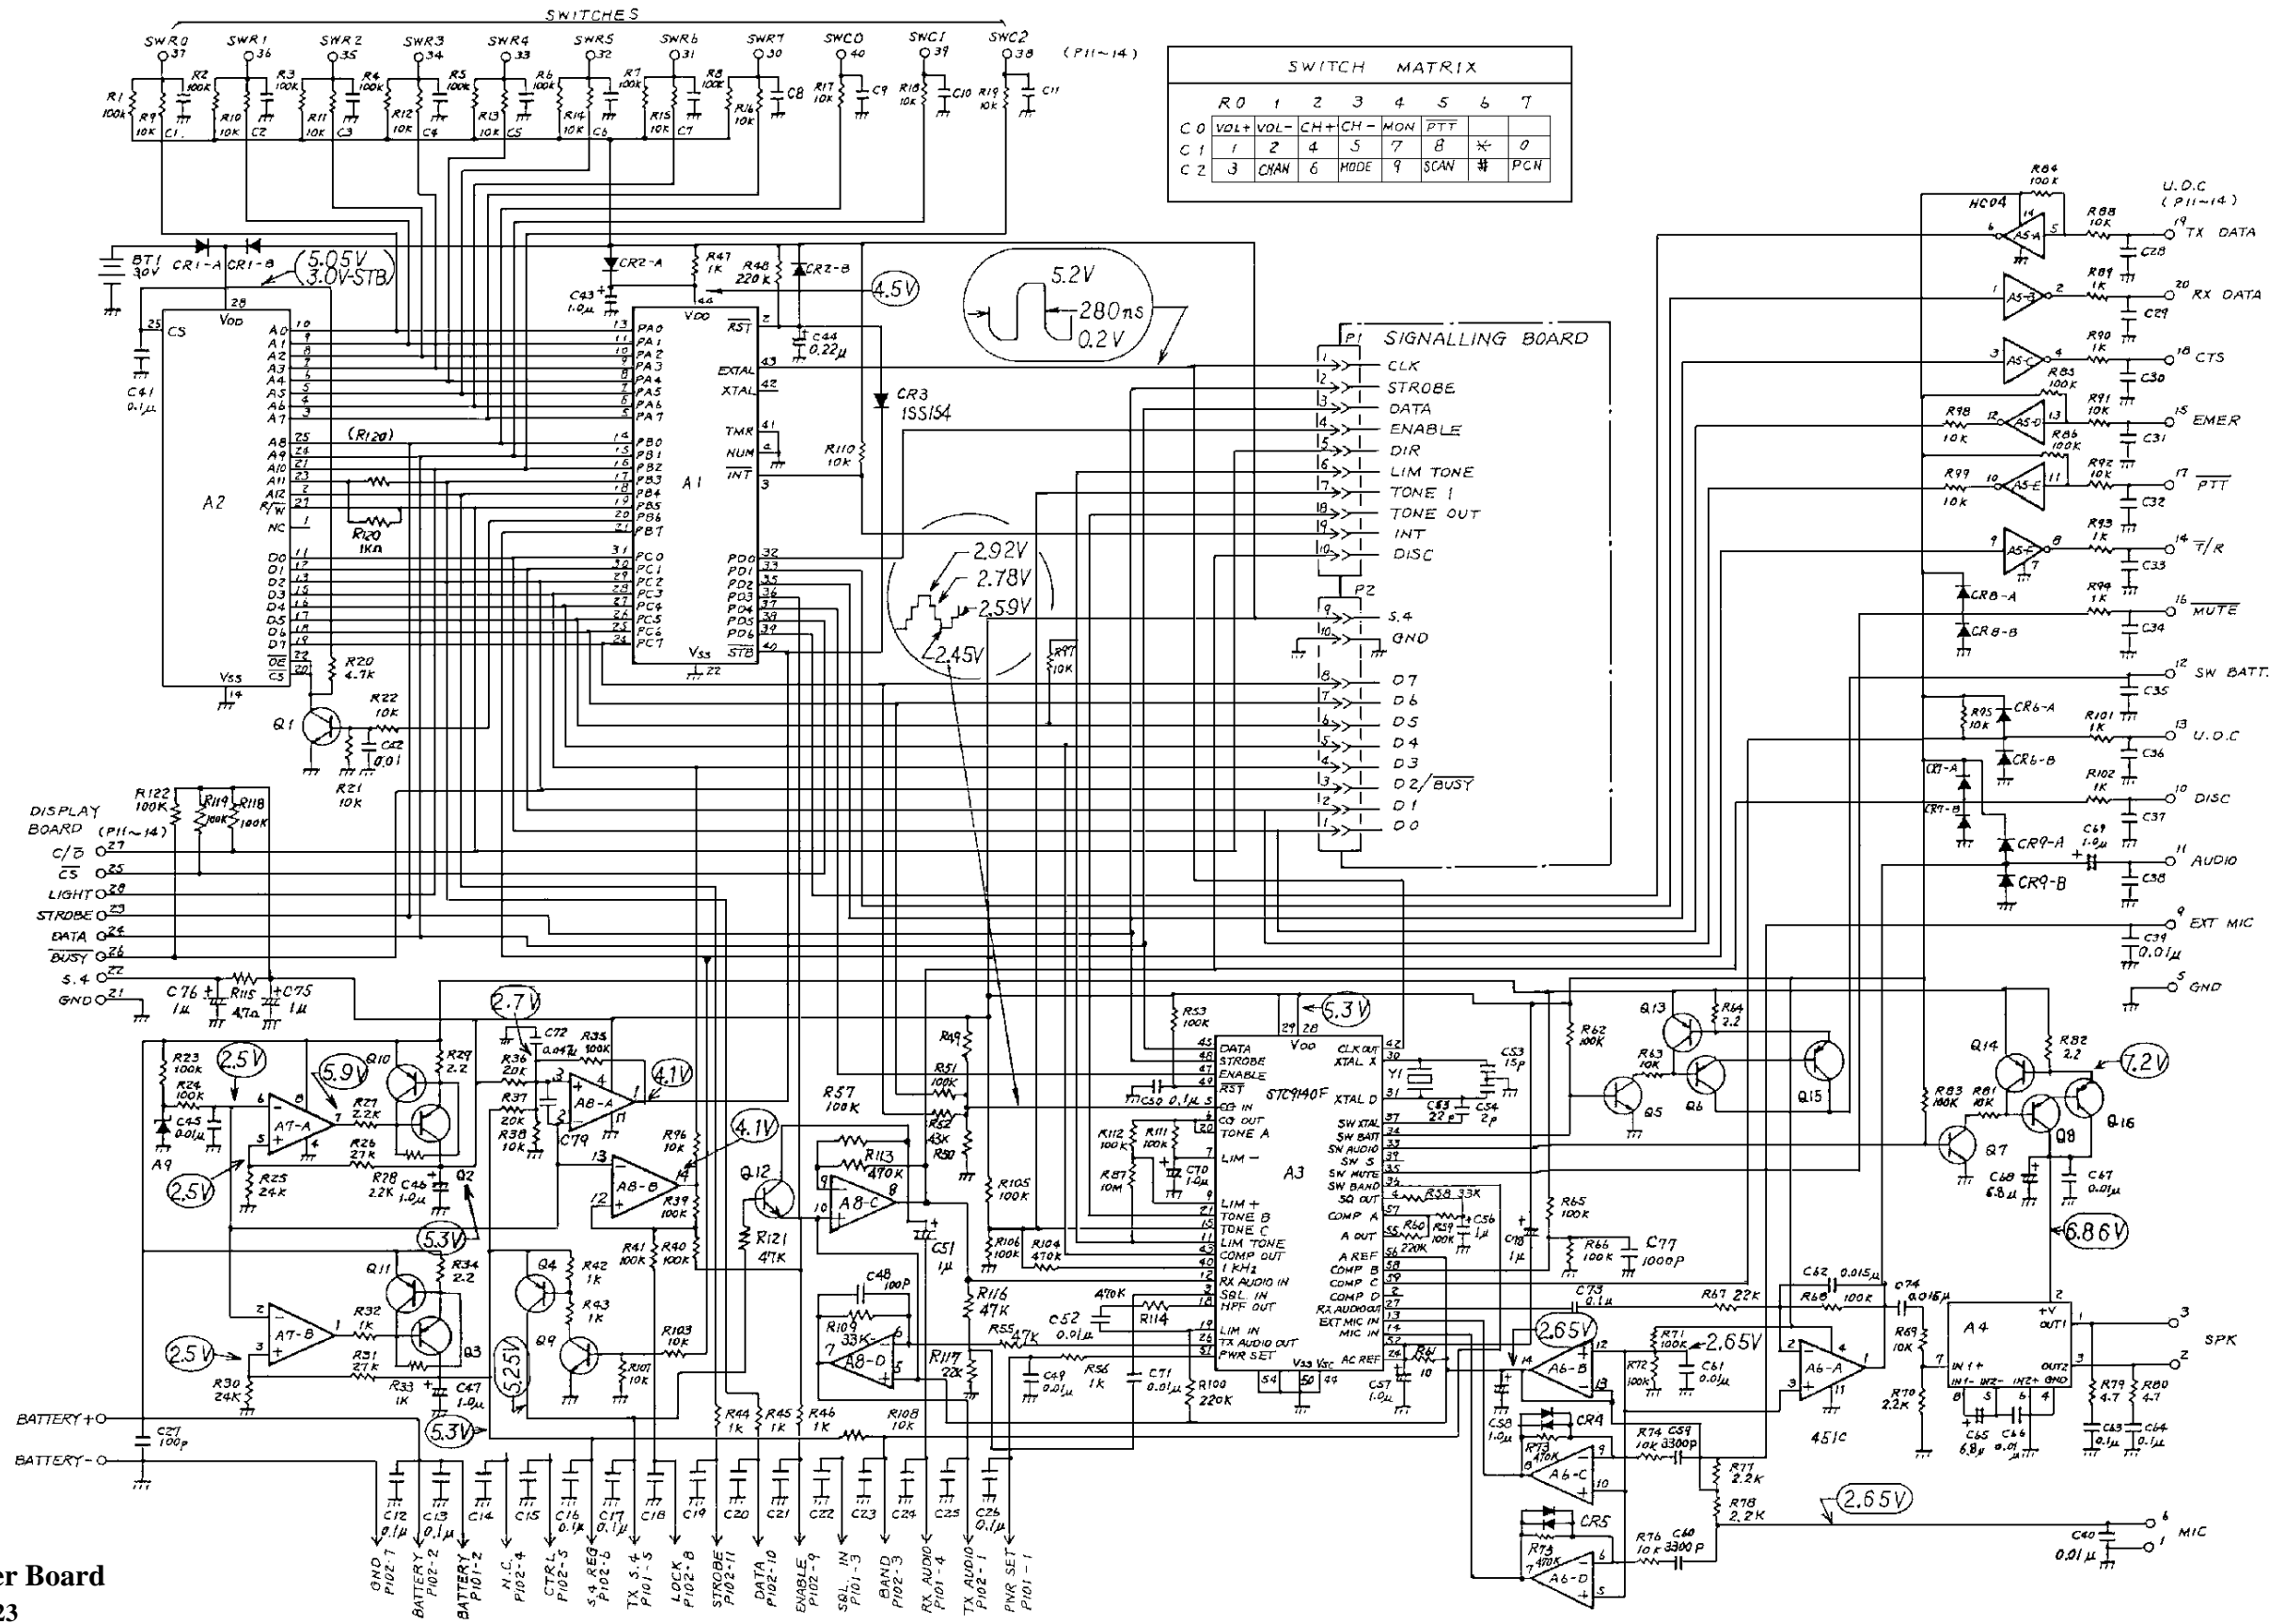


Controller Board
A4WE04023

COMPONENT SIDE

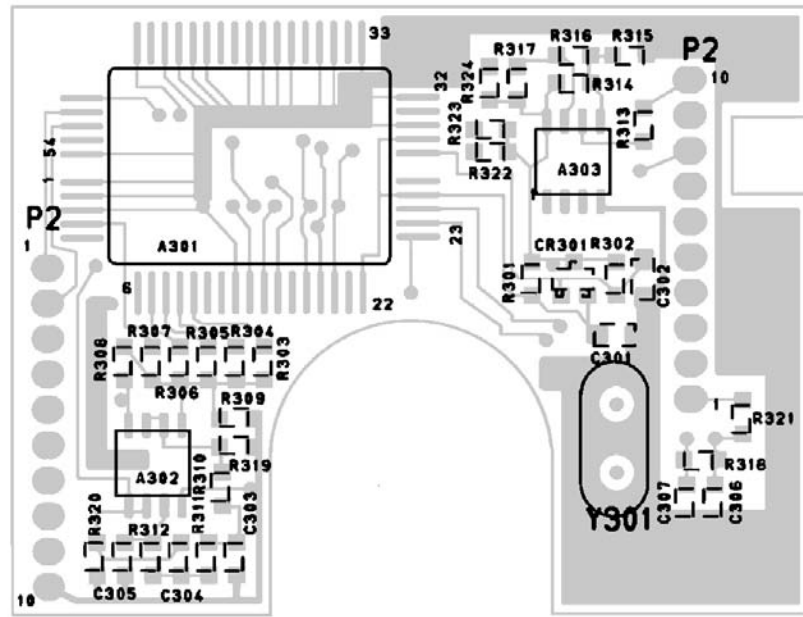


SOLDER SIDE

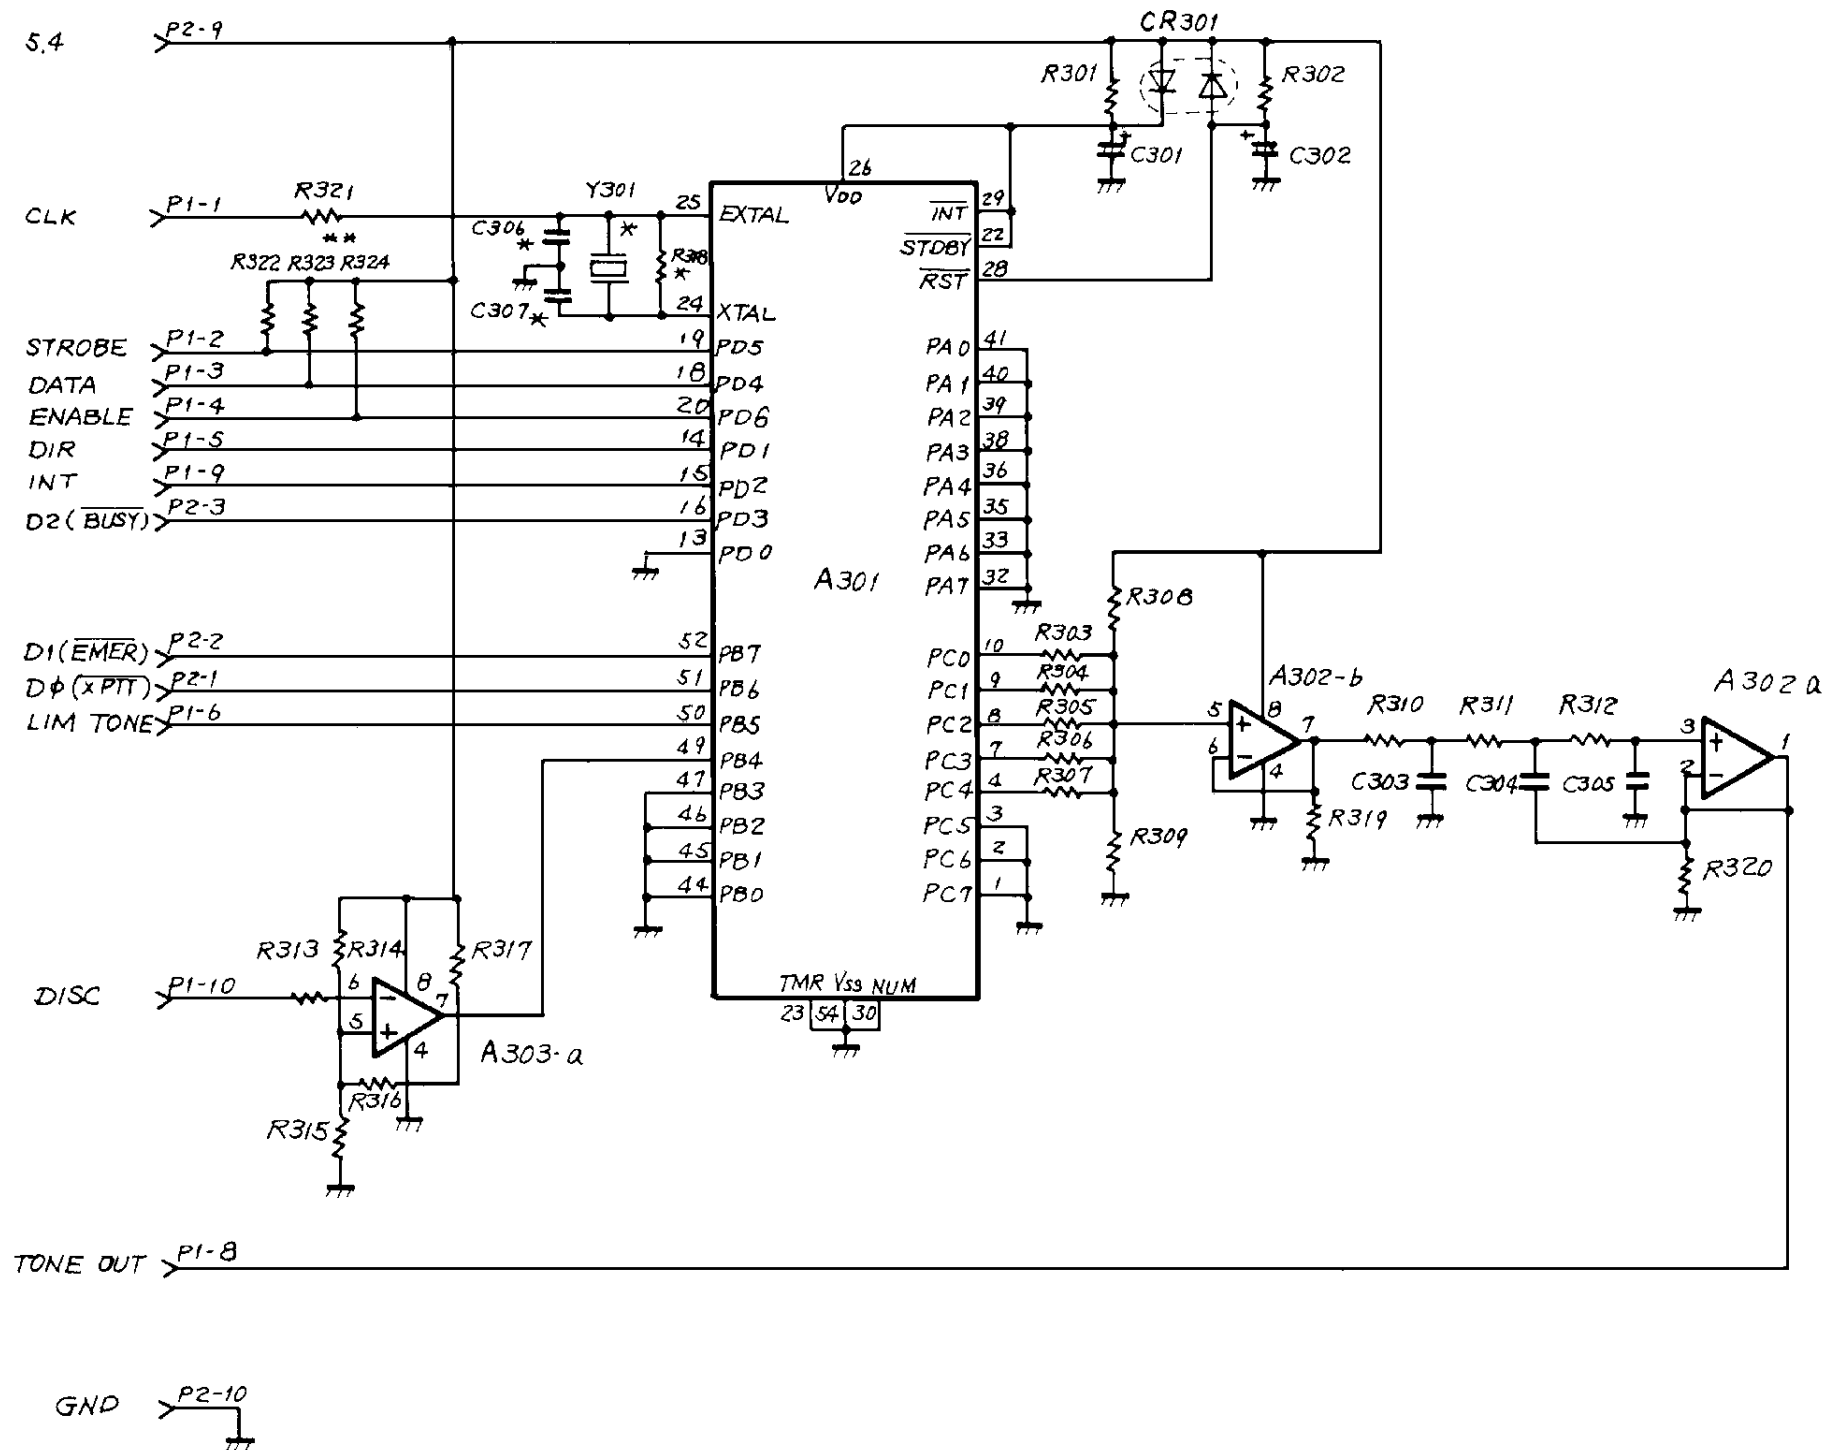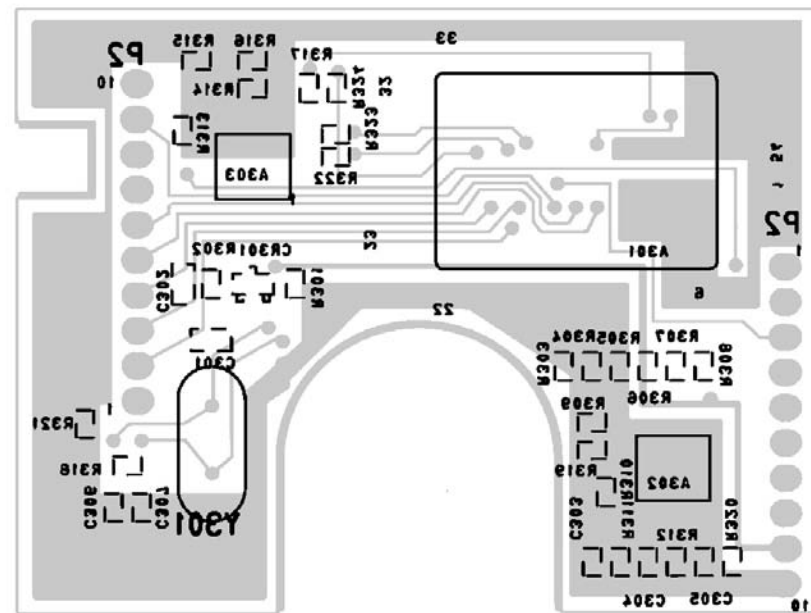



Note * : PARTS NOT ON STANDARD BOARD
 BUT LAYOUT MUST INCLUDE PROVISIONS.
 ** : CONNECTION MADE FOR STANDARD BOARD
 REMOND FOR OPTION .

COMPONENT SIDE

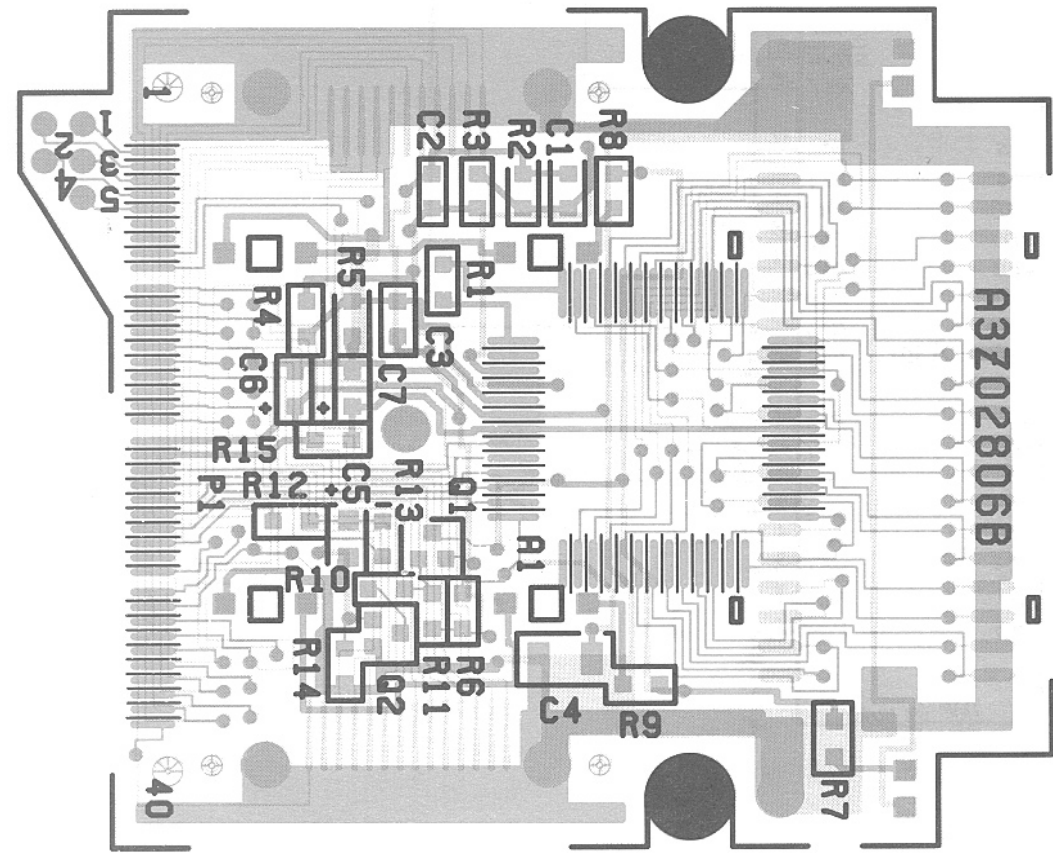


SOLDER SIDE

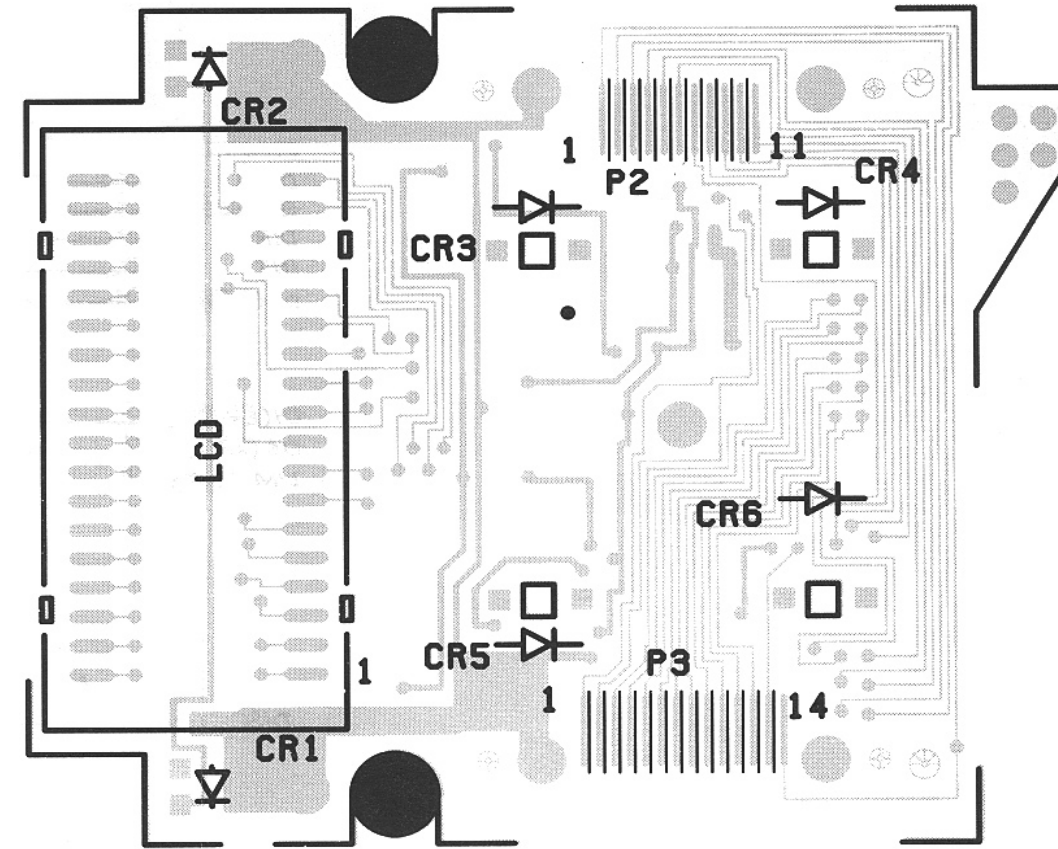


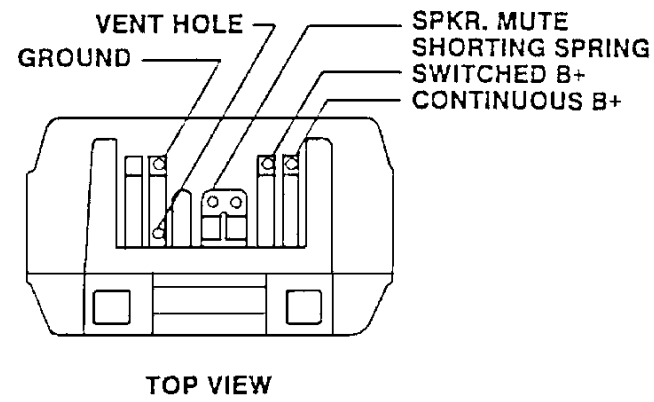

TOP VIEW

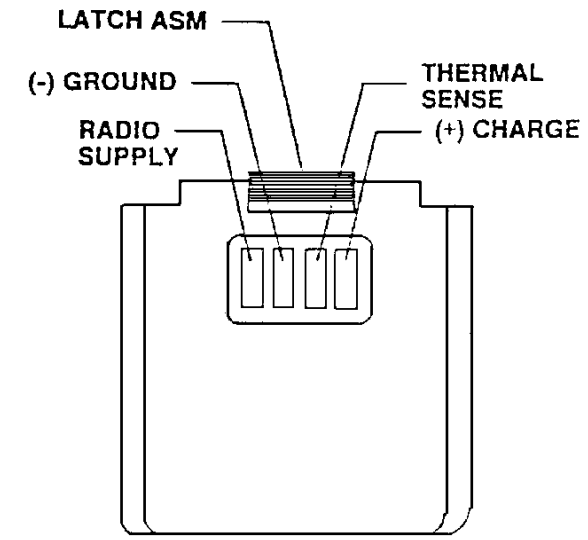




REAR VIEW

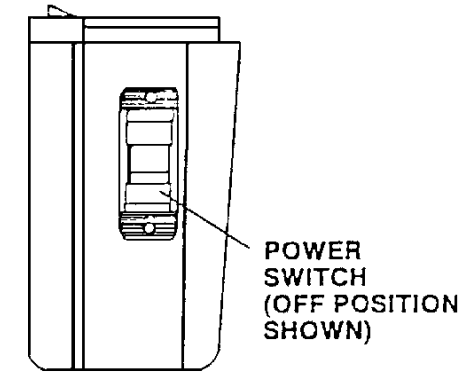


SIDE VIEW

- 19A704850P5 STANDARD CAPACITY
- 19A704850P4 STANDARD CAPACITY INTRINSICALLY SAFE
- 19A704850P7 HIGH CAPACITY (SHORT)
- 19A704850P6 HIGH CAPACITY INTRINSICALLY SAFE (SHORT)

TYPICAL SCHEMATICS

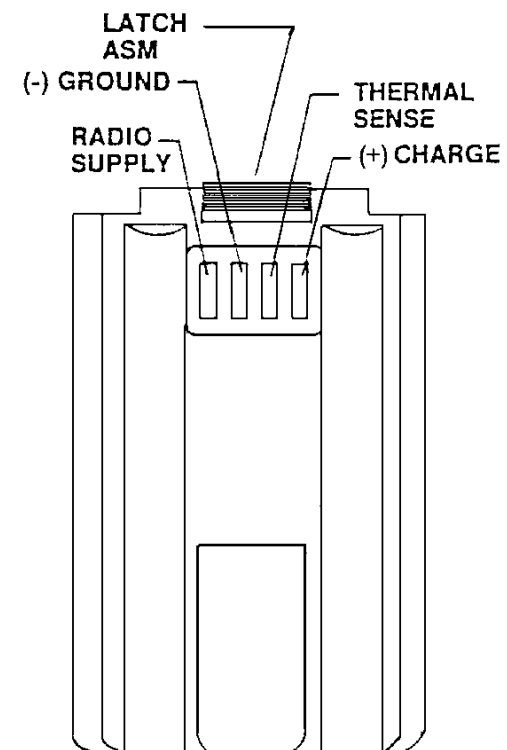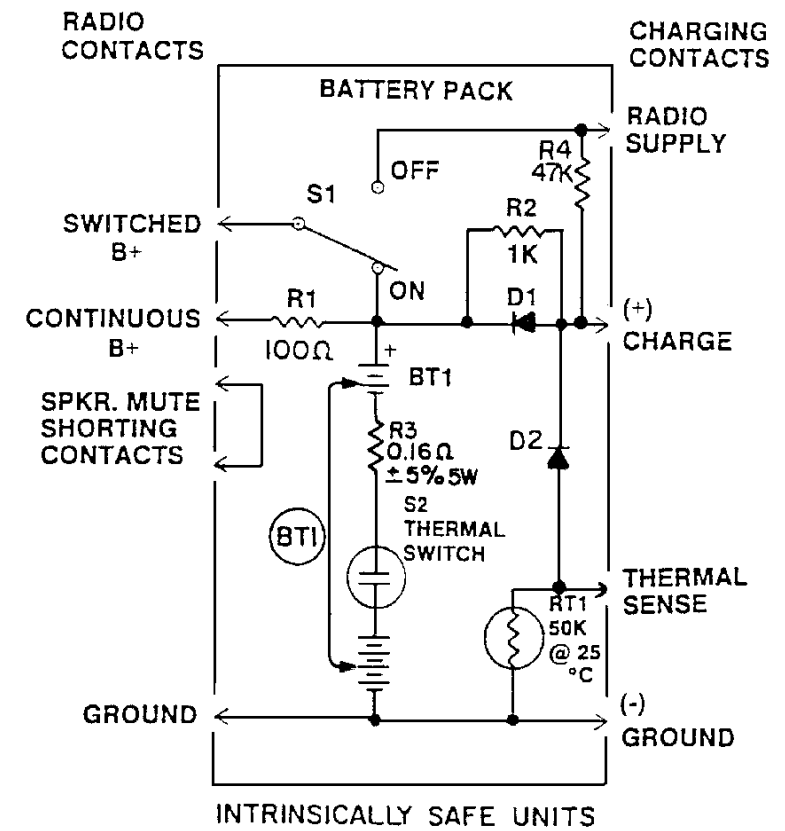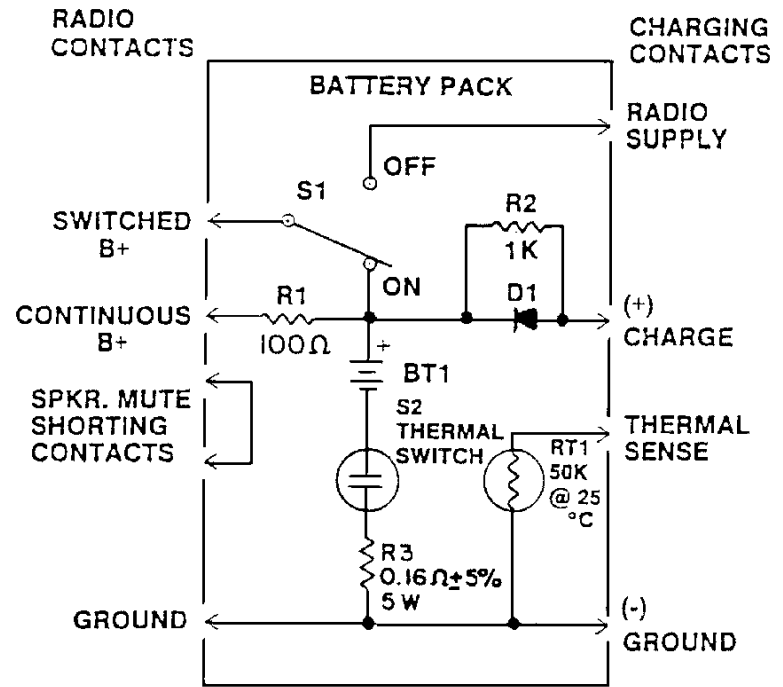


REAR VIEW

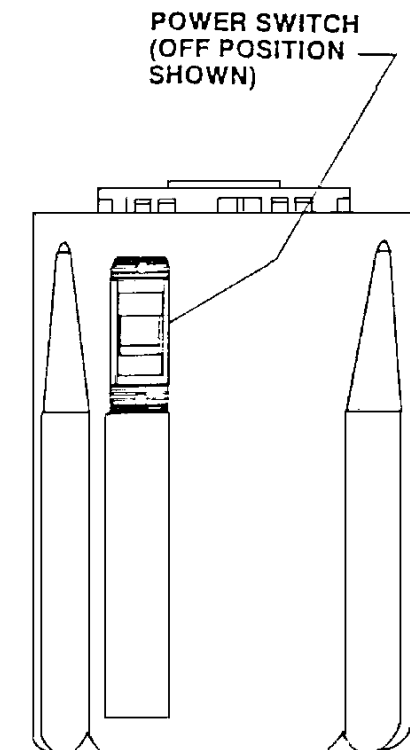

FRONT VIEW

- 19A704860P5 HIGH CAPACITY (LONG)
- 19A704860P4 HIGH CAPACITY INTRINSICALLY SAFE (LONG)
- 19A704860P7 EXTRA HIGH CAPACITY
- 19A704860P6 EXTRA HIGH CAPACITY INTRINSICALLY SAFE

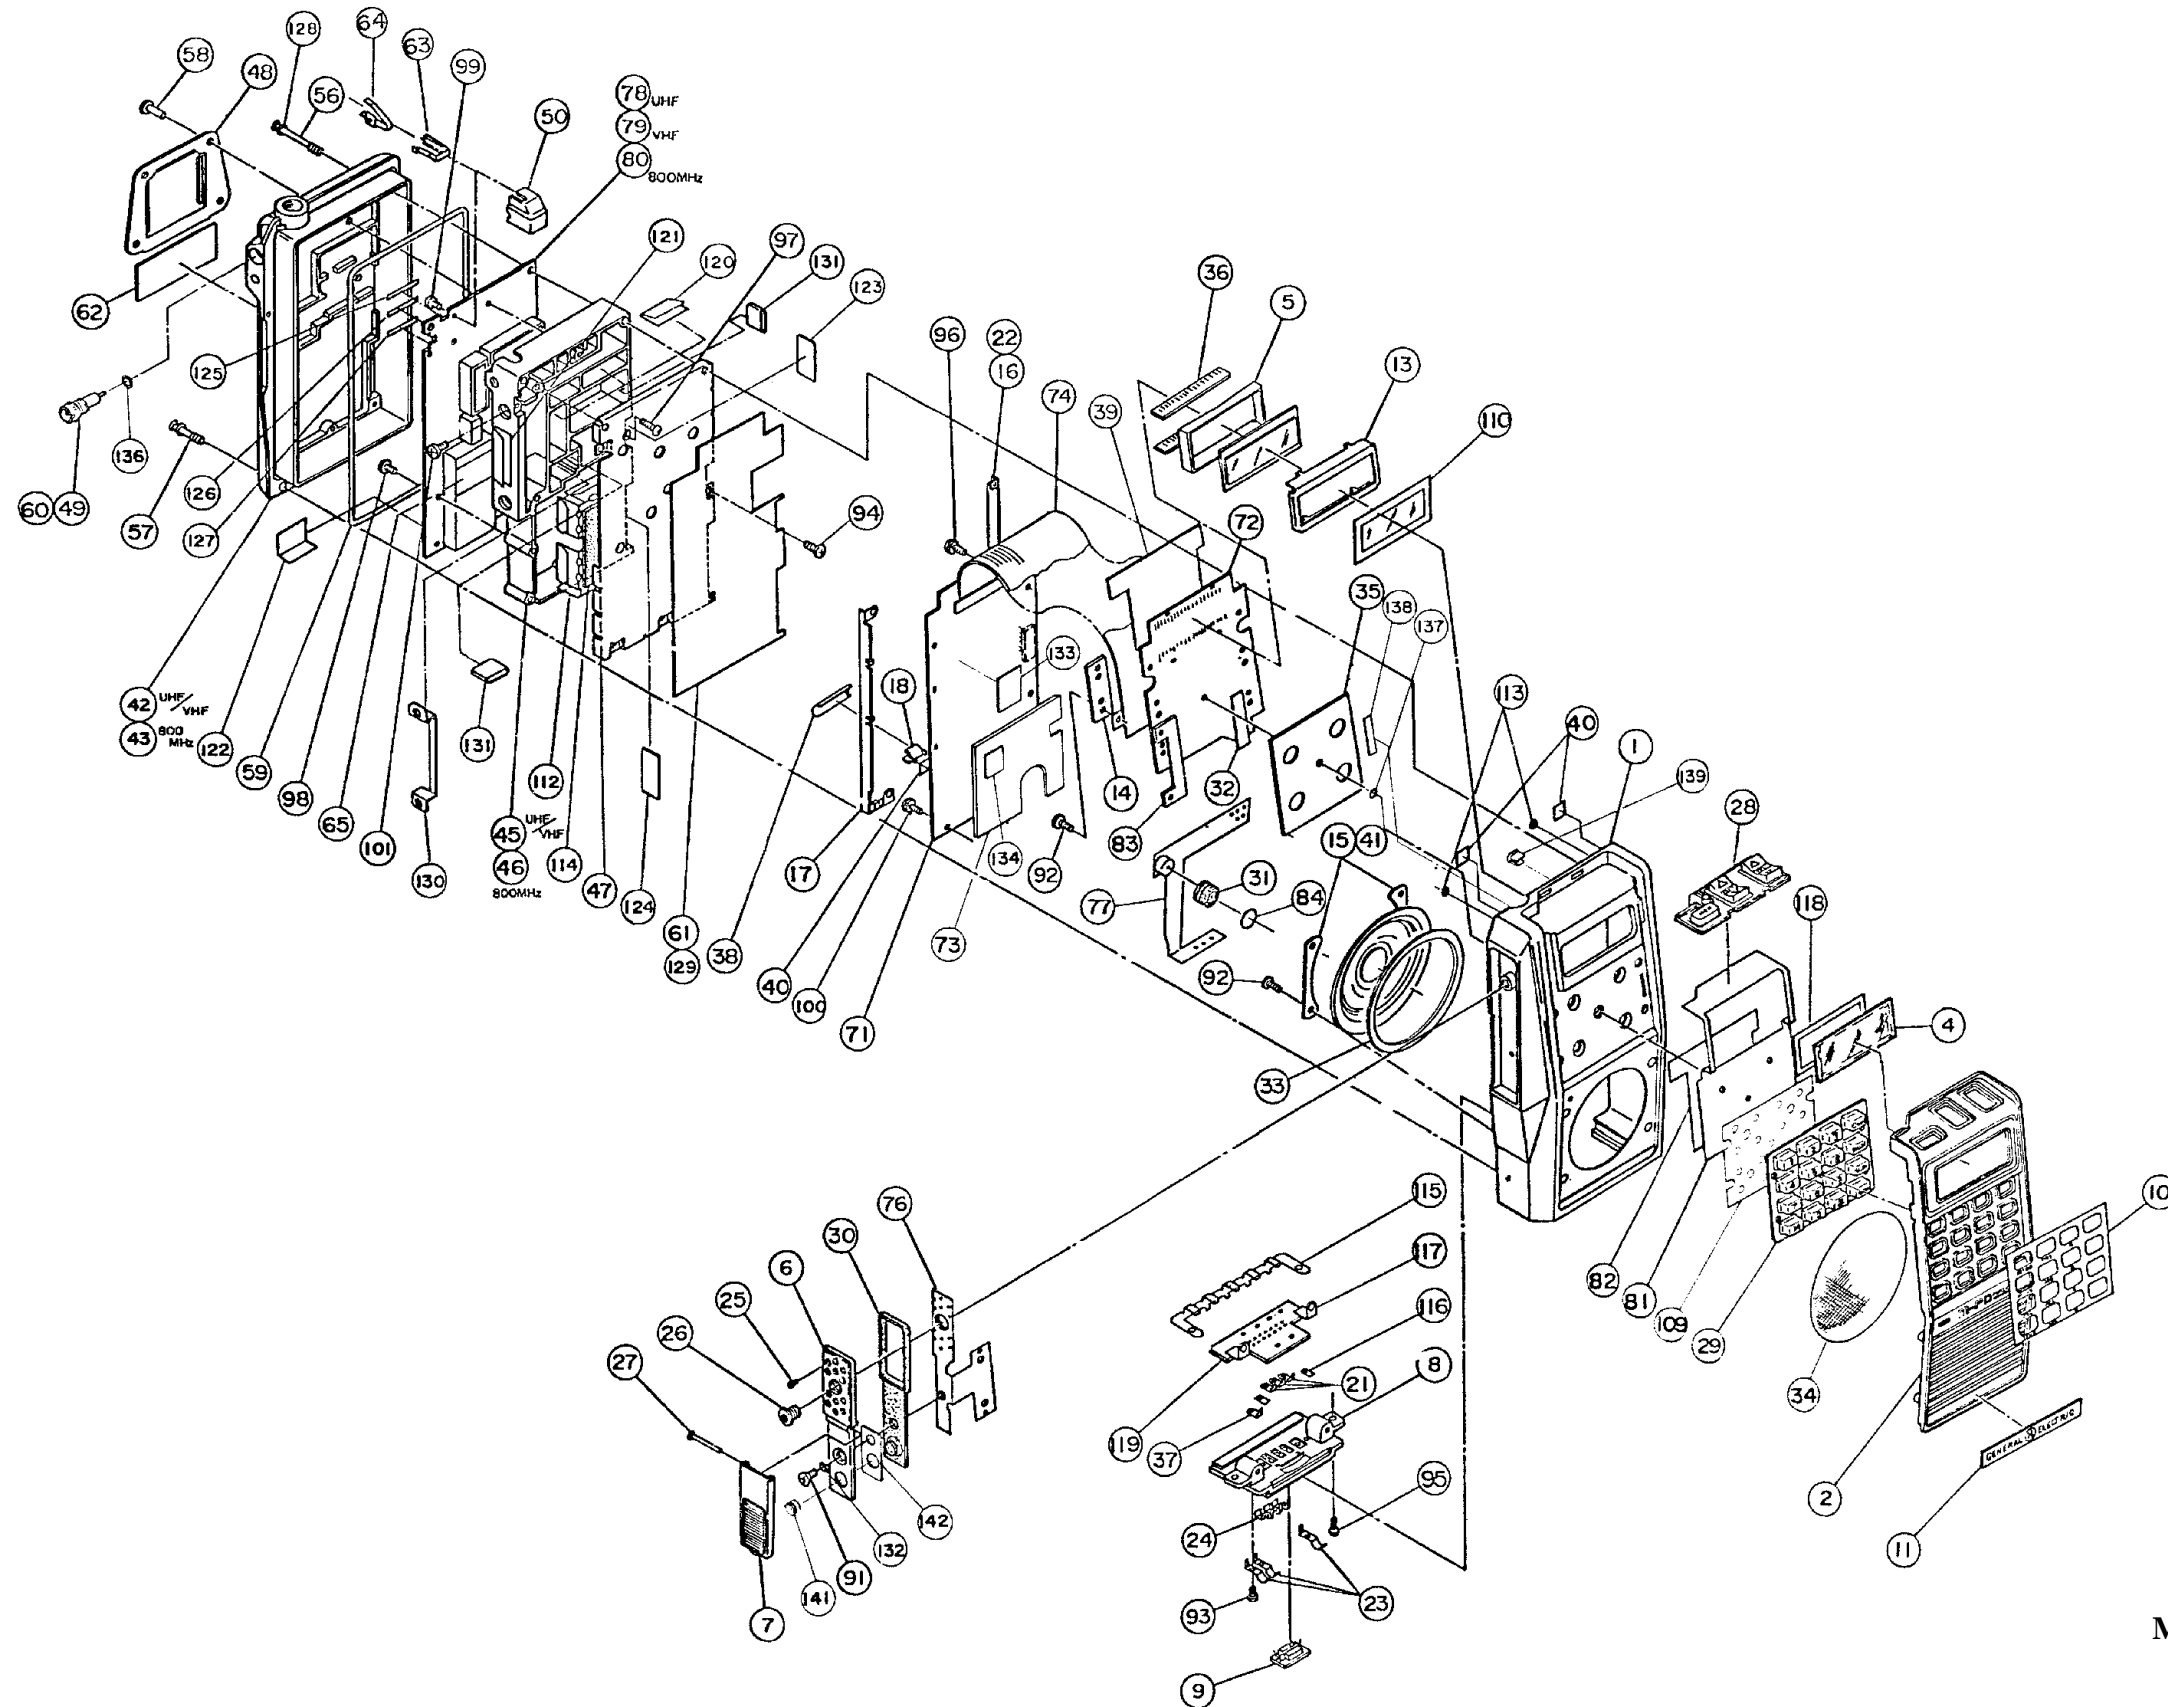

M-PD EXPLODED VIEW
SYSTEM TYPE
A1WL09006

PARTS LIST

M-PD RADIO SYSTEM TYPE
A4WLO8999
(MECHANICAL PARTS)
ISSUE 3

| SYMBOL | GE PART NO. | DESCRIPTION |
|--------|-----------------|---------------------------|
| 1 | K19/A1WLO7558 | Front Cover |
| 2 | K19/A1WLO7568 | Front Escutcheon (SYS) |
| 3 | NOT USED | |
| 4 | K19/A3WLO7574 | Window |
| 5 | K19/A3WLO7601 | Light Diffuser |
| 6 | K19/A3WLO7576 | UDC PTT Plate |
| 7 | K19/A3WLO7575 | PTT Lever |
| 8 | K19/A2WLO7573 | Base Plate |
| 9 | K19/A3WLO7577 | Fuse Cover |
| 10 | K19/A4WLO7451 | Key Pad Name Plate |
| 11 | K19/A4WLO7661 | Nameplate (GE) |
| 12 | NOT USED | |
| 13 | K19/A3WLO7614 | LCD Frame |
| 14 | K19/A4WLO7692 | Plates |
| 15 | K19/A4WLO7607 | SPKR Mounting Brackets |
| 16 | K19/A3WLO7295 | B+ Strap |
| 17 | K19/A3WLO7296 | Ground Strap |
| 18 | K19/A4WLO7514 | Battery Holder |
| 19 | NOT USED | |
| 20 | NOT USED | |
| 21 | K19/A4WLO7610 | Contact Lugs |
| 22 | K19/A4WLO8244 | B+ Strap Sheet |
| 23 | K19/A4WLO7611 | Battery Connector Springs |
| 24 | K19/A4WLO7608 | SPKR/Mute Contacts |
| 25 | K19/A4WLO7604 | UDC Contacts |
| 26 | K19/A4WLO7605 | UDC Nut |
| 27 | K19/A4WLO7434 | Pivot Pin |
| 28 | K19/A3WLO7579 | Top Switch Pad |
| 29 | K19/A3WLO7578 | 16 Key Pad |
| 30 | K19/A3WLO7580 | PTT Switch Pad |
| 31 | K19/A4WLO7594 | MIC Gasket |
| 32 | K19/A4WLO7882 | Elastic Rubber |
| 33 | K19/A4WLO7910 | SPKR Gasket |
| 34 | K19/A4WLO7435 | SPKR Dust Screen |
| 35 | K19/A4WLO7606 | Insulator (LCD HD). |
| 36 | K19/A4WLO7685 | Zebra Contacts |
| 37 | K19/A4WLO8007 | Contact Lug B |
| 38 | K19/A4WLO7863 | LI-Battery Cover |
| 39 | K19/A4WLO8445 | LCD Sheet |
| 40 | K19/A4WLO7684 | Insulator Sheet |
| 41 | K19/A4WLO8708 | SPKR Mounting Rubber |
| 42 | K19/A1WLO7561 | Rear Cover, (UHF/VHF) |
| 43 | K19/A1WLO7560 | Rear Cover, (800 MHz) |
| 44 | NOT USED | |
| 45 | K19/A1WLO7570P2 | Castng, (UHF/VHF) |
| 46 | K19/A1WLO7570P1 | Castng, (800 MHz) |
| 47 | K19/A2WLO7512 | Tx/Rx Shield Cover |
| 48 | K19/A3WLO7509 | Receptacle Plate |
| 49 | K19/A4WLO8826 | RF Connector |
| 50 | K19/A3WLO7654 | Antenna Switch Housing |
| 51 | NOT USED | |
| 52 | NOT USED | |
| 53 | NOT USED | |
| 54 | NOT USED | |
| 55 | NOT USED | |
| 56 | K19/A4WLO7499P2 | Captive Screws |
| 57 | K19/A4WLO7499P1 | Captive Screws |
| 58 | K19/A4WLO7694 | Rivets |
| 59 | K19/A4WLO8383 | Housing Gasket |
| 60 | K19/A4WLO7880 | RF Connector Gasket |
| 61 | K19/A3WLO7513 | Insulator |
| 62 | K19/A4WLO8694 | Label |

| SYMBOL | GE PART NO. | DESCRIPTION |
|--------|-----------------|----------------------------------|
| 63 | K19/A4WLO7655 | ANT Switch Spring B |
| 64 | K19/A4WLO7656 | ANT Switch Spring A |
| 65 | K19/A4WLO7727 | Shield Plate |
| 66 | NOT USED | |
| 67 | NOT USED | |
| 68 | NOT USED | |
| 69 | NOT USED | |
| 70 | NOT USED | |
| 71 | K19/A3WLO7897 | Controller P.W. Board |
| 72 | K19/A3WLO7895 | LCD P.W. Board |
| 73 | K19/A3WLO8505 | Signal P.W. Board |
| 74 | K19/A3WLO8833 | LCD-Cont Flex. Circuit |
| 75 | K19/A3WLO8837 | Top Flex. Circuit (SYS) |
| 76 | K19/A3WLO8834 | UCU/PTT Flex. Circuit |
| 77 | K19/A3WLO8835 | SPKR/MIC Flex. Circuit |
| 78 | K19/A3WLO8693 | Tx/Rx P.W. Board, (UHF) |
| 79 | K19/A3WLO8695 | Tx/Rx P.W. Board, (VHF) |
| 80 | K19/A3WLO8696 | Tx/Rx P.W. Board, (800 MHz) |
| 81 | NOT USED | |
| 82 | K19/A4WLO8068 | Adhesion Sheet |
| 83 | K19/A4WLO8409 | Rubber Sheet |
| 84 | K19/A4WLO8385 | MIC Film |
| 85 | NOT USED | |
| 86 | NOT USED | |
| 87 | NOT USED | |
| 88 | NOT USED | |
| 89 | NOT USED | |
| 90 | NOT USED | |
| 91 | K19/A4WLO8827P1 | Flush Head Screw, M2.6 x 3 |
| 92 | K19/A4WLO8828P2 | Pan Head Tapping Screw, M2 x 6 |
| 93 | K19/A4WLO8827P2 | Pan Head Screw, M1.7 x 4 |
| 94 | K19/A4WLO8827P3 | Pan Head Screw with SW, M2 x 4 |
| 95 | K19/A4WLO8828P3 | Pan Head Tapping Screw, M2 x 10 |
| 96 | K19/A4WLO8827P4 | Pan Head Screw with SW, M2 x 6 |
| 97 | K19/A4WLO8827P6 | Pan Head Screw with SW, M2 x 15 |
| 98 | K19/A4WLO8827P5 | Pan Head Screw, M2 x 4 |
| 99 | K19/A4WLO8828P1 | Pan Head Tapping Screw, M2 x 4 |
| 100 | K19/A4WLO8827P5 | Pan Head Screw with SW, M2 x 8 |
| 101 | K19/A4WLO8827P8 | Pan Head Screw with SW, M2.6 x 6 |
| 102 | NOT USED | |
| 103 | NOT USED | |
| 104 | NOT USED | |
| 105 | NOT USED | |
| 106 | NOT USED | |
| 107 | NOT USED | |
| 108 | NOT USED | |
| 109 | K19/A4WLO7909 | Front Sheet |
| 110 | K19/A4WLO8437 | Window Sheet |
| 111 | K19/A4WLO8438 | STD Rubber Plate |
| 112 | K19/A4WLO7595 | Shield Cover |
| 113 | K19/A4WLO8730 | Nylon Washer |
| 114 | K19/A4WLO8494 | VCO Rubber |
| 115 | K19/A4WLO8628 | Base Shield Spring |
| 116 | K19/A4WLO8629 | Contact Lug C |
| 117 | K19/A4WLO8630 | Base Contact |
| 118 | K19/A4WLO8673 | Window Gasket |
| 119 | K19/A3WLO8672 | Base P.W. Board |
| 120 | K19/A4WLO8829 | RF Spring A |
| 121 | K19/A4WLO8630 | RF Spring B |
| 122 | K19/A4WLO8832 | RF Spring Plate (800 MHz only) |
| 123 | K19/A4WLO8495P1 | Connector Spacer A |
| 124 | K19/A4WLO8495P2 | Connector Spacer B |
| 125 | K19/A4WLO8831P1 | RF PWB Contact A |
| 126 | K19/A4WLO8831P2 | RF PWB Contact B |
| 127 | K19/A4WLO8831P3 | RF PWB Contact C |
| 128 | K19/A4WLO8802 | Nylon Washer |
| 129 | K19/A4WLO8698 | Tracking Data Label |
| 130 | K19/A4WLO7963 | Power Pack Bracket |
| 131 | K19/A4ZLO5484 | Crystal Protection Tube |
| 132 | K19/A4WLO8802 | Nylon Washer |

| SYMBOL | GE PART NO. | DESCRIPTION |
|--------|---------------|-------------------------------|
| 133 | K19/A4WLO8710 | Yellow Label (For Cont. P/B) |
| 134 | K19/A4WLO8709 | Yellow Label (For Signal P/B) |
| 135 | NOT USED | |
| 136 | K19/A4WLO8848 | RF Connector Washer |
| 137 | K19/A4WLO8711 | LCD P/B Washer |
| 138 | K19/A4WLO8712 | LCD P/B Spacer |
| 139 | K19/A4WLO9046 | Cap |
| 140 | NOT USED | |
| 141 | K19/A4WLO8422 | Coil Spring |
| 142 | K19/A4WLO8662 | PTT Spacer |

*COMPONENTS ADDED, DELETED OR CHANGED BY PRODUCTION CHANGES

PARTS LIST

VHF M-PD PERSONAL RADIO RF BOARDS
 K19/A4WE03739 136-160 MHz RF Board
 K19/A4WE03740 150-174 MHz RF Board
 ISSUE 1

| SYMBOL | GE PART NO. | DESCRIPTION |
|---------------------------------|-----------------|---|
| ----- INTEGRATED CIRCUITS ----- | | |
| A101 | K19/2ABD004124 | Prescaler MC12018L |
| A102 | K19/2AAJ004062 | PLL MC145159P1 |
| A103 | K19/2YBA106090 | VCTCXO A4WX01328-2.5 ppm |
| | K19/2YBA106082 | VCTCXO A4WX01328-5 ppm |
| A104 | K19/2AAB004243 | GP AMP UPCI251BG |
| A105 | K19/2ABC0039105 | Analog Switch UPD4066BG |
| A106 | K19/200KLH3551 | VCO A4WX01391 #4-1 KLM3552, 150-174 MHz |
| | K19/200KLH3552 | VCO A4WX01391 #4-2 KLM3551, 136-160 MHz |
| A201 | K19/200KLH2592 | Gain Hybrid KLM2592 |
| A202 | K19/2AAA013112 | PA Pack A4WX01422-1H, 150-174 MHz |
| | K19/2AAA013104 | PA Pack A4WX01422-1L, 136-160 MHz |
| A203 | K19/200KLH8516 | PWR-Coet KLM8516 |
| A301 | K19/2EDG002028 | Mixer UST-2L A4WX01378 |
| A302 | K19/2AAJ008089 | IF HA12442V |
| ----- CAPACITORS ----- | | |
| C101 | K19/2CAK009034 | Ceramic chip 3 pF ±0.25 pF 50V |
| C102 | K19/2CAK009208 | Ceramic chip 1000 pF ±10% 50V |
| C103 | K19/2CAK009257 | Ceramic chip 10 pF ±0.5 pF 50V |
| C104 | K19/2CAK009206 | Ceramic chip 1000 pF ±10% 50V |
| C105 | K19/2CCP004086 | Tantalum 1 uF 16V |
| C106 | K19/2CAK009208 | Ceramic chip 1000 pF ±10% 50V |
| C107 | K19/2CAK009216 | Ceramic chip 0.01 uF ±10% 50V |
| C108 | K19/2CAK009190 | Ceramic chip 330 pF ±5% 50V |
| C109 | K19/2CAK009216 | Ceramic chip 0.01 uF ±10% 50V |
| C110 | K19/2CAK009331 | Ceramic chip 4700 pF ±10% 50V |
| C111 | K19/2CAK009182 | Ceramic chip 100 pF ±5% 50V |
| C112 | K19/2CB8034121 | Electrolytic 22 uF 16V |
| C113 | K19/2CAK009216 | Ceramic chip 0.01 uF ±10% 50V |
| C114 | K19/2CDA055016 | MET POLY-PROP Film 0.56 uF 50V |
| C115 | K19/2CAK009034 | Ceramic chip 3 pF ±0.25 pF 50V |
| C116 | K19/2CAK009331 | Ceramic chip 4700 pF ±10% 50V |
| C117 | K19/2CAK009018 | Ceramic chip 1 pF ±0.25 pF 50V |
| C118 | K19/2CAK009059 | Ceramic chip 5 pF ±0.25 pF 50V |
| C119 | K19/2CAK009216 | Ceramic chip 0.01 uF ±10% 50V |
| C120 | K19/2CAK009206 | Ceramic chip 1000 pF ±10% 50V |
| C121 | K19/2CAK009125 | Ceramic chip 15 pF ±5% 50V |
| C123 | K19/2CAK009216 | Ceramic chip 0.01 uF ±10% 50V |
| C124 | K19/2CCP004086 | Tantalum 1 uF 16V |
| C125 | K19/2CB8062171 | Electrolytic 100 uF 16V |
| C126 | K19/2CAK009216 | Ceramic chip 0.01 uF ±10% 50V |
| C127 thru C129 | K19/2CAK009208 | Ceramic chip 1000 pF ±10% 50V |
| C131 | K19/2CCP004086 | Tantalum 1 uF 16V |
| C132 | K19/2CAK009216 | Ceramic chip 0.01 uF ±10% 50V |
| C133 | K19/2CCP004086 | Tantalum 1 uF 16V |
| C134 | K19/2CB8034121 | Electrolytic 22 uF 16V |
| C135 | K19/2CAK009208 | Ceramic chip 1000 pF ±10% 50V |

*COMPONENTS ADDED, DELETED OR CHANGED BY PRODUCTION CHANGES

| SYMBOL | GE PART NO. | DESCRIPTION |
|----------------|----------------|--------------------------------|
| C201 and C202 | K19/2CAK009208 | Ceramic chip 1000 pF ±10% 50V |
| C203 | K19/2CCP004086 | Tantalum 1 uF 16V |
| C205 | K19/2CAK009208 | Ceramic chip 1000 pF ±10% 50V |
| C206 | K19/2CC8028018 | Tantalum 10uF 16V |
| C207 and C208 | K19/2CAK009208 | Ceramic chip 1000 pF ±10% 50V |
| C209 | K19/2CC8028018 | Tantalum 10 uF 16V |
| C210 | K19/2CAK009216 | Ceramic chip 0.01 uF ±10% 50V |
| C211 | K19/2CAK009206 | Ceramic chip 1000 pF ±10% 50V |
| C212 | K19/2CAK009141 | Ceramic chip 22 pF ±5% 50V |
| C213 | K19/2CAK009109 | Ceramic chip 12 pF ±5% 50V |
| C214 and C215 | K19/2CAK009372 | Ceramic chip 27 pF ±5% 50V |
| C216 | K19/2CAK009109 | Ceramic chip 12 pF ±5% 50V |
| C217 | K19/2CAK009208 | Ceramic chip 1000 pF ±10% 50V |
| C219 | K19/2CAK009141 | Ceramic chip 22 pF ±5% 50V |
| C220 and C221 | K19/2CAK009208 | Ceramic chip 1000 pF ±10% 50V |
| C222 | K19/2CAK009398 | Ceramic chip 11 pF ±5% 50V |
| C223 | K19/2CAK009281 | Ceramic chip 6 pF ±0.5 pF 50V |
| C224 | K19/2CAK009398 | Ceramic chip 11 pF ±5% 50V |
| C228 | K19/2CCP004086 | Tantalum 1 uF 16V |
| C301 | K19/2CAK009208 | Ceramic chip 1000 pF ±10% 50V |
| C302 | K19/2CCP004086 | Tantalum 1 uF 16V |
| C303 | K19/2CAK009182 | Ceramic chip 100 pF ±5% 50V |
| C304 | K19/2CAK009307 | Ceramic chip 8 pF ±0.5 pF 50V |
| C305 | K19/2CAK009281 | Ceramic chip 6 pF ±0.5 pF 50V |
| C306 | K19/2CAK009158 | Ceramic chip 33 pF ±5% 50V |
| C308 | K19/2CAK009109 | Ceramic chip 12 pF ±5% 50V |
| C309 | K19/2CAK009034 | Ceramic chip 3 pF ±0.25 pF 50V |
| C310 | K19/2CAK009216 | Ceramic chip 0.01 uF ±10% 50V |
| C311 | K19/2CAK009216 | Ceramic chip 0.01 uF ±10% 50V |
| C312 | K19/2CAK009109 | Ceramic chip 12 pF ±5% 50V |
| C313 | K19/2CAK009034 | Ceramic chip 3 pF ±0.25 pF 50V |
| C314 and C315 | K19/2CAK009216 | Ceramic chip 0.01 uF ±10% 50V |
| C316 | K19/2CAK009125 | Ceramic chip 15 pF ±5% 50V |
| C317 and C318 | K19/2CCP004086 | Tantalum 1 uF 16V |
| C319 | K19/2CAK009190 | Ceramic chip 330 pF ±5% 50V |
| C320 | K19/2CAK009166 | Ceramic chip 47 pF ±5% 50V |
| C321 | K19/2CAK009208 | Ceramic chip 1000 pF ±10% 50V |
| C322 | K19/2CCP004086 | Tantalum 1 uF 16V |
| C323 | K19/2CAK009109 | Ceramic chip 12 pF ±5% 50V |
| C324 | K19/2CAK009257 | Ceramic chip 10 pF ±0.5 pF 50V |
| C325 | K19/2CAK009125 | Ceramic chip 15 pF ±5% 50V |
| C326 | K19/2CAK009026 | Ceramic chip 2 pF ±0.25 pF 50V |
| C330 | K19/2CCP004086 | Tantalum 1 uF 16V |
| C331 | K19/2CAK009158 | Ceramic chip 33 pF ±5% 50V |
| C332 | K19/2CAK009216 | Ceramic chip 0.01 uF ±10% 50V |
| C333 thru C336 | K19/2CAK009182 | Ceramic chip 100 pF ±5% 50V |
| C337 and C338 | K19/2CAK009208 | Ceramic chip 1000 pF ±10% 50V |
| C339 | K19/2CAK009182 | Ceramic chip 100 pF ±5% 50V |
| C340 | K19/2CAK009257 | Ceramic chip 10 pF ±0.5 pF 50V |

| SYMBOL | GE PART NO. | DESCRIPTION |
|-------------------------|----------------|---------------------------------|
| C341 and C342 | K19/2CCP004086 | Tantalum 1 uF 16V |
| C343 | K19/2CAK009208 | Ceramic chip 1000 pF ±10% 50V |
| ----- DIODES ----- | | |
| CR201 and CR202 | K19/2QBA012024 | MA57 |
| CR301 and CR302 | K19/2QBA006166 | 1S2075K |
| ----- FILTERS ----- | | |
| FL301 | K19/2FB001471 | A3FX01829 #1, 136-160 MHz |
| | K19/2FB001489 | A3FX01829 #2, 150-174 MHz |
| FL302 | K19/2FB001471 | A3FX01829 #1, 136-160 MHz |
| | K19/2FB001489 | A3FX01829 #2, 150-174 MHz |
| FL303 | K19/2FAA103041 | A4WX01308 |
| FL304 | K19/2FAA103058 | A4WX01307 |
| FL305 | K19/2FAD001242 | CPX455E |
| ----- JACKS ----- | | |
| J101 | K19/2PDA023036 | 69775-005 |
| J102 | K19/2PDA023044 | 69775-011 |
| ----- COILS ----- | | |
| L101 | K19/2LAA001149 | FLSHR68M |
| L104 | K19/2EDD001014 | A4WX01364 |
| L105 | K19/2LAD001112 | NL322522T-068M |
| L201 | K19/2LAA001743 | LAL02KRR47M |
| L202 | K19/2LAB014943 | A4WX01369-4.5t |
| L203 | K19/2LAB014935 | A4WX01340-38mH |
| L204 | K19/2LAB014943 | A4WX01369 |
| L205 | K19/2LAB014935 | A4WX01340 |
| L206 | K19/2LAA001743 | LAL02KRR47M |
| L301 | K19/2LAD001070 | NL322522T-R10M |
| L302 | K19/2RDR001014 | A4WX01364 |
| L303 | K19/2LAB024140 | A4FX01878 #5 |
| L305 and L306 | K19/2LAD001062 | MLF3216D1R0K |
| L307 | K19/2LAD001021 | MLF3216DR68K |
| ----- TRANSISTORS ----- | | |
| Q101 | K19/2QAD004020 | 2SC3368R22 |
| Q102 | K19/2QAD004067 | 2SB624B43 |
| Q103 thru Q105 | K19/2QAD004046 | 2SD596D43 |
| Q106 | K19/2QAD001133 | 2SC2820QC |
| Q201 | K19/2QAD004053 | 2SD999 |
| Q202 | K19/2QAB015077 | 2SB1169 |
| Q301 thru Q303 | K19/2QAD004020 | 2SC3368R22 |
| ----- RESISTORS ----- | | |
| R104-1 and R104-2 | K19/2RGC003110 | Square chip 1/16W 1K ohms ±5% |
| R105 | K19/2RGC003383 | Square chip 1/16W 47 ohms ±5% |
| R106 | K19/2RGC003243 | Square chip 1/16W 150K ohms ±5% |
| R107 | K19/2RGC003060 | Square chip 1/16W 220 ohms ±5% |
| R108 and R109 | K19/2RGC003227 | Square chip 1/16W 100K ohms ±5% |
| R110 | K19/2RGC003110 | Square chip 1/16W 1K ohms ±5% |

| SYMBOL | GE PART NO. | DESCRIPTION |
|----------------------------|----------------|---------------------------------|
| R111 and R112 | K19/2RGC003177 | Square chip 1/16W 10K ohms ±5% |
| R113 | K19/2RGC003276 | Square chip 1/16W 470K ohms ±5% |
| R115 | K19/2RGC003185 | Square chip 1/16W 15K ohms ±5% |
| R116 and R117 | K19/2RFB003253 | Variable GP04W 10K ohms |
| R118 thru R120 | K19/2RGC003219 | Square chip 1/16W 47K ohms ±5% |
| R121 | K19/2RGC003409 | Square chip 1/16W 68K ohms ±5% |
| R123 and R124 | K19/2RGC003219 | Square chip 1/16W 47K ohms ±5% |
| R125 | K19/2RGC003151 | Square chip 1/16W 4.7K ohms ±5% |
| R126 | K19/2RGC003110 | Square chip 1/16W 1K ohms ±5% |
| R127 and R128 | K19/2RGC003219 | Square chip 1/16W 47K ohms ±5% |
| R129 | K19/2RGC003383 | Square chip 1/16W 4.7 ohms ±5% |
| R130 | K19/2RGC003045 | Square chip 1/16W 150 ohms ±5% |
| R132 | K19/2RGC003045 | Square chip 1/16W 150 ohms ±5% |
| R134 | K19/2RGC003110 | Square chip 1/16W 1K ohms ±5% |
| R201 | K19/2RGC003326 | Square chip 1/16W 10 ohms ±5% |
| R202 and R203 | K19/2RGC003094 | Square chip 1/16W 470 ohms ±5% |
| R204 and R205 | K19/2RGC003334 | Square chip 1/16W 23 ohms ±5% |
| R206 and R207 | K19/2RGC003094 | Square chip 1/16W 470 ohms ±5% |
| R208 | K19/2RGC003037 | Square chip 1/16W 100 ohms ±5% |
| R209 | K19/2RGC003342 | Square chip 1/16W 47 ohms ±5% |
| R210 | K19/2RFB003253 | Variable GP04W 10K ohms |
| R301 | K19/2RGC003060 | Square chip 1/16W 220 ohms ±5% |
| R302 and R303 | K19/2RGC003243 | Square chip 1/16W 150K ohms ±5% |
| R305 | K19/2RGC003045 | Square chip 1/16W 150 ohms ±5% |
| R306 | K19/2RGC003177 | Square chip 1/16W 10K ohms ±5% |
| R307 | K19/2RGC003243 | Square chip 1/16W 150K ohms ±5% |
| R308 | K19/2RGC003045 | Square chip 1/16W 150 ohms ±5% |
| R310 | K19/2RGC003144 | Square chip 1/16W 3.3K ohms ±5% |
| R311 | K19/2RGC003201 | Square chip 1/16W 33K ohms ±5% |
| R312 | K19/2RGC003177 | Square chip 1/16W 10K ohms ±5% |
| R313 | K19/2RGC003094 | Square chip 1/16W 470 ohms ±5% |
| R315 | K19/2RGC003342 | Square chip 1/16W 47 ohms ±5% |
| R321 | K19/2RFB003261 | Variable GP04W 100K ohms |
| R322 | K19/2RGC003193 | Square chip 1/16W 22K ohms ±5% |
| ----- TRANSFORMERS ----- | | |
| T301 and T302 | K19/2LAB014993 | A4WX01333 |
| T303 | K19/2LAB014901 | A4WX01334 |
| T304 | K19/2LAB014919 | A4WX01335 |
| ----- THERMISTOR ----- | | |
| TH301 | K19/2QBD016139 | NTCD30183HG103HC |
| ----- CRYSTALS ----- | | |
| YS01 | K19/2YAA181657 | 44.545 MHz A4WX01304 |
| ----- ANTENNA SWITCH ----- | | |
| S101 | K19/2A3WL07654 | VHF Antenna |

PARTS LIST

K-PD CONTROLLER BOARD
A4#E04023-B
ISSUE 1

| SYMBOL | GE PART NO. | DESCRIPTION |
|---------------------------------|----------------|-----------------------------|
| ----- INTEGRATED CIRCUITS ----- | | |
| A1 | K19/2ADA004313 | Micro Processor HD63705VOCF |
| A2 | K19/2CAA017382 | RAM TC5517AFL-2 |
| A3 | K19/86041901A0 | Audio Processor STC8140F |
| A4 | K19/2AAJ010036 | NJM2073D |
| A5 | K19/2ABD025012 | uPD74HC04G-T1 |
| A6 | K19/2AAB004250 | uPC451G2-T1 |
| A7 | K19/2AAB004243 | uPC1251G2-T1 |
| A8 | K19/2AAB004250 | uPC451G2-T1 |
| A9 | K19/2AAZ001060 | LM385Z-2.5 |
| ----- LITHIUM BATTERY ----- | | |
| BT1 | K19/5PBA004058 | BR425 |
| ----- CAPACITORS ----- | | |
| C1 thru C11 | K19/2CAK011253 | Ceramic chip 100 pF 50 WV |
| C12 and C13 | K19/2CAK005511 | Ceramic chip 0.1 uF 25 WV |
| C14 and C15 | K19/2CAK00265 | Ceramic chip 220 pF 50 WV |
| C16 and C17 | K19/2CAK005511 | Ceramic chip 0.1 uF 25 WV |
| C18 thru C25 | K19/2CAK00265 | Ceramic chip 220 pF 50 WV |
| C26 | K19/2CAK005511 | Ceramic chip 0.1 uF 25 WV |
| C27 thru C38 | K19/2CAK011253 | Ceramic chip 100 pF 50 WV |
| C39 and C40 | K19/2CAK011188 | Ceramic chip 0.01 uF 50 WV |
| C41 | K19/2CAK005511 | Ceramic chip 0.1 uF 25 WV |
| C42 | K19/2CAK011188 | Ceramic chip 0.01 uF 50 WV |
| C43 | K19/2CCF004102 | Tantalum 1 uF 15 WV |
| C44 | K19/2CCF004185 | Tantalum 0.22 uF 50 WV |
| C45 | K19/2CAK011188 | Ceramic chip 0.01 uF 50 WV |
| C46 and C47 | K19/2CCF004102 | Tantalum 1 uF 15 WV |
| C48 | K19/2CAK011253 | Ceramic chip 100 pF 50 WV |
| C49 | K19/2CAK011188 | Ceramic chip 0.01 uF 50 WV |
| C50 | K19/2CAK005511 | Ceramic chip 0.1 uF 25 WV |
| C51 | K19/2CCF004102 | Tantalum 1 uF 15 WV |
| C52 | K19/2CAK011188 | Ceramic chip 0.01 uF 50 WV |
| C53 | K19/2CAK011261 | Ceramic chip 15 pF 50 WV |
| C54 | K19/2CAK011055 | Ceramic chip 2 pF 50 WV |
| C55 | K19/2CAK011220 | Ceramic chip 22 pF 50 WV |
| C56 thru C58 | K19/2CCF004102 | Tantalum 1 uF 15 WV |

| SYMBOL | GE PART NO. | DESCRIPTION |
|-------------------------|----------------|---------------------------------|
| C59 and C60 | K19/2CAK011380 | Ceramic chip 3300 pF 50 WV |
| C61 | K19/2CAK011188 | Ceramic chip 0.01 uF 50 WV |
| C62 | K19/2CAK011295 | Ceramic chip 0.015 uF 50 WV |
| C63 and C64 | K19/2CAK005511 | Ceramic chip 0.1 uF 25 WV |
| C65 | K19/2CCF006024 | Tantalum 6.8 uF 10 WV |
| C66 and C67 | K19/2CAK011188 | Ceramic chip 0.01 uF 50 WV |
| C68 | K19/2CCF006024 | Tantalum 6.8 uF 10 WV |
| C69 and C70 | K19/2CCF004102 | Tantalum 1 uF 15 WV |
| C71 | K19/2CAK011188 | Ceramic chip 0.01 uF 50 WV |
| C72 | K19/2CAK005586 | Ceramic chip 0.047 uF 50 WV |
| C73 | K19/2CAK005511 | Ceramic chip 0.1 uF 25 WV |
| C74 | K19/2CAK011295 | Ceramic chip 0.015 uF 25 WV |
| C75 and C76 | K19/2CCF004102 | Tantalum 1 uF 15 WV |
| C77 | K19/2CAK011196 | Ceramic chip 1000 pF 50 WV |
| C78 | K19/2CCF004102 | Tantalum 1 uF 15 WV |
| C79 | K19/2CAJ023037 | Ceramic chip 330 pF 50 WV |
| ----- DIODES ----- | | |
| CR1 | K19/2QB8005016 | DAN202KT-96 |
| CR2 | K19/2QB8005032 | DA204KT-96 |
| CR3 | K19/2QB8005127 | 155154 |
| CR4 thru CR8 | K19/2QB8005032 | DAN204KT-96 |
| CR9 | K19/2QB8005032 | DA204KT-96 |
| ----- PINHEADER ----- | | |
| P101 | K19/2PDA023093 | 65646-205 |
| P102 | K19/2PDA023101 | 65646-211 |
| ----- TRANSISTORS ----- | | |
| Q1 | K19/2QAD001133 | NPN, 2SC2462QCTL |
| Q2 | K19/2QAD004095 | PNP, 2SB624T1BBV3 |
| Q3 and Q4 | K19/2QAD004103 | PNP, 2SB798T1DL |
| Q5 | K19/2QAD001034 | NPN, 2SC2462LCTL |
| Q6 | K19/2QAD004095 | PNP, 2SB624T1BBV3 |
| Q7 | K19/2QAD001034 | NPN, 2SC2462LCTL |
| Q8 | K19/2QAD004095 | PNP, 2SB624T1BBV3 |
| Q9 | K19/2QAD001034 | NPN, 2SC2462LCTL |
| Q10 and Q11 | K19/2QAD004095 | PNP, 2SB624T1BBV3 |
| Q12 | K19/2QAD001034 | NPN, 2SC2462LCTL |
| Q13 and Q14 | K19/2QAD004095 | PNP, 2SB624T1BBV3 |
| Q15 | K19/2QAD004103 | PNP, 2SB798T1DL |
| Q16 | K19/2QAD004095 | PNP, 2SB624T1BBV3 |
| ----- RESISTORS ----- | | |
| R1 thru R6 | K19/2RGC001643 | Square chip 1/10W 100 K ohm ±5% |

| SYMBOL | GE PART NO. | DESCRIPTION |
|--------------|----------------|---------------------------------|
| R9 thru R19 | K19/2RGC001627 | Square chip 1/10W 10 K ohm ±5% |
| R20 | K19/2RGC001619 | Square chip 1/10W 4.7 K ohm ±5% |
| R21 and R22 | K19/2RGC001627 | Square chip 1/10W 10 K ohm ±5% |
| R23 and R24 | K19/2RGC001643 | Square chip 1/10W 100 K ohm ±5% |
| R25 | K19/2RGC001908 | Square chip 1/10W 24 K ohm ±1% |
| R26 | K19/2RGC001616 | Square chip 1/10W 27 K ohm ±1% |
| R27 and R28 | K19/2RGC001593 | Square chip 1/10W 2.2 K ohm ±5% |
| R29 | K19/2RGC001833 | Square chip 1/10W 2.2 ohm ±10% |
| R30 | K19/2RGC001908 | Square chip 1/10W 24 K ohm ±1% |
| R31 | K19/2RGC001916 | Square chip 1/10W 27 K ohm ±1% |
| R32 and R33 | K19/2RGC001585 | Square chip 1/10W 1 K ohm ±5% |
| R34 | K19/2RGC001833 | Square chip 1/10W 2.2 ohm ±10% |
| R35 | K19/2RGC001643 | Square chip 1/10W 100 K ohm ±5% |
| R36 and R37 | K19/2RGC001890 | Square chip 1/10W 20 K ohm ±1% |
| R38 | K19/2RGC001874 | Square chip 1/10W 10 K ohm ±1% |
| R39 thru R41 | K19/2RGC001643 | Square chip 1/10W 100 K ohm ±5% |
| R42 thru R47 | K19/2RGC001585 | Square chip 1/10W 1 K ohm ±5% |
| R48 | K19/2RGC001825 | Square chip 1/10W 220 K ohm ±5% |
| R49 and R50 | K19/2RGC004019 | Square chip 1/10W 8.2 K ohm ±1% |
| R51 | K19/2RGC001932 | Square chip 1/10W 100 K ohm ±1% |
| R52 | K19/2RGC001924 | Square chip 1/10W 43 K ohm ±1% |
| R53 | K19/2RGC001643 | Square chip 1/10W 100 K ohm ±5% |
| R55 | K19/2RGC001726 | Square chip 1/10W 47 K ohm ±5% |
| R56 | K19/2RGC001585 | Square chip 1/10W 1 K ohm ±5% |
| R57 | K19/2RGC001643 | Square chip 1/10W 100 K ohm ±5% |
| R58 | K19/2RGC001817 | Square chip 1/10W 33 K ohm ±5% |
| R59 | K19/2RGC001643 | Square chip 1/10W 100 K ohm ±5% |
| R60 | K19/2RGC001825 | Square chip 1/10W 220 K ohm ±5% |
| R61 | K19/2RGC001502 | Square chip 1/10W 10 ohm ±5% |
| R62 | K19/2RGC001643 | Square chip 1/10W 100 K ohm ±5% |
| R63 | K19/2RGC001827 | Square chip 1/10W 10 K ohm ±5% |
| R64 | K19/2RGC001833 | Square chip 1/10W 2.2 ohm ±10% |
| R65 and R66 | K19/2RGC001932 | Square chip 1/10W 100 K ohm ±1% |
| R67 | K19/2RGC001635 | Square chip 1/10W 22 K ohm ±5% |
| R68 | K19/2RGC001932 | Square chip 1/10W 100 K ohm ±1% |
| R69 | K19/2RGC001827 | Square chip 1/10W 10 K ohm ±5% |
| R70 | K19/2RGC001585 | Square chip 1/10W 1 K ohm ±5% |
| R71 and R72 | K19/2RGC001932 | Square chip 1/10W 100 K ohm ±1% |
| R73 | K19/2RGC004076 | Square chip 1/10W 470 K ohm ±1% |
| R74 | K19/2RGC001874 | Square chip 1/10W 10 K ohm ±1% |
| R75 | K19/2RGC004076 | Square chip 1/10W 470 K ohm ±1% |
| R76 | K19/2RGC001874 | Square chip 1/10W 10 K ohm ±1% |

| SYMBOL | GE PART NO. | DESCRIPTION |
|---------------------------|----------------|---------------------------------|
| R77 and R78 | K19/2RGC001858 | Square chip 1/10W 2 K ohm ±1% |
| R79 and R80 | K19/2RGC001841 | Square chip 1/10W 4.7 ohm ±10% |
| R81 | K19/2RGC001627 | Square chip 1/10W 10 K ohm ±5% |
| R82 | K19/2RGC001833 | Square chip 1/10W 2.2 ohm ±10% |
| R83 thru R88 | K19/2RGC001643 | Square chip 1/10W 100 K ohm ±5% |
| R87 | K19/2RGC001791 | Square chip 1/10W 10 K ohm ±10% |
| R88 | K19/2RGC001627 | Square chip 1/10W 10 K ohm ±5% |
| R89 and R90 | K19/2RGC001585 | Square chip 1/10W 1 K ohm ±5% |
| R91 and R92 | K19/2RGC001627 | Square chip 1/10W 10 K ohm ±5% |
| R93 and R94 | K19/2RGC001585 | Square chip 1/10W 1 K ohm ±5% |
| R95 | K19/2RGC001874 | Square chip 1/10W 10 K ohm ±1% |
| R96 thru R99 | K19/2RGC001827 | Square chip 1/10W 10 K ohm ±5% |
| R100 | K19/2RGC001825 | Square chip 1/10W 220 K ohm ±5% |
| R101 and R102 | K19/2RGC001585 | Square chip 1/10W 1 K ohm ±5% |
| R103 | K19/2RGC001827 | Square chip 1/10W 10 K ohm ±5% |
| R104 | K19/2RGC001759 | Square chip 1/10W 470 K ohm ±5% |
| R105 and R106 | K19/2RGC001643 | Square chip 1/10W 100 K ohm ±5% |
| R107 and R108 | K19/2RGC001627 | Square chip 1/10W 10 K ohm ±5% |
| R109 | K19/2RGC001817 | Square chip 1/10W 33 K ohm ±5% |
| R110 | K19/2RGC001627 | Square chip 1/10W 10 K ohm ±5% |
| R111 and R112 | K19/2RGC001643 | Square chip 1/10W 100 K ohm ±5% |
| R113 and R114 | K19/2RGC001759 | Square chip 1/10W 470 K ohm ±5% |
| R115 | K19/2RGC001841 | Square chip 1/10W 4.7 ohm ±10% |
| R116 | K19/2RGC001726 | Square chip 1/10W 47 K ohm ±5% |
| R117 | K19/2RGC001635 | Square chip 1/10W 22 K ohm ±5% |
| R118 and R119 | K19/2RGC001643 | Square chip 1/10W 100 K ohm ±5% |
| R120 | K19/2RGC001585 | Square chip 1/10W 1 K ohm ±5% |
| R121 | K19/2RGC001726 | Square chip 1/10W 47 K ohm ±5% |
| R122 | K19/2RGC001643 | Square chip 1/10W 100 K ohm ±5% |
| ----- RUBBER BUMPER ----- | | |
| XT1 | K19/2YYZ001062 | NB-0252-0.6t |
| ----- CRYSTALS ----- | | |
| Y1 | K19/2YAA181665 | A7-41 3.579545 MHz |

*COMPONENTS ADDED, DELETED OR CHANGED BY PRODUCTION CHANGES

PARTS LIST

M-PD LCD BOARD
A4#E03737B
ISSUE 3

| SYMBOL | GE PART NO. | DESCRIPTION |
|----------------------|----------------|---------------------------------|
| | | ----- INTEGRATED CIRCUITS ----- |
| A1 | K19/2ADC003107 | uPD7225G |
| | | ----- CAPACITORS ----- |
| C1 thru C3 | K19/2CAK011196 | Ceramic chip 1000 pF |
| C4 | K19/2CAK005586 | Ceramic chip 0.047 uF |
| C5 | K19/2CCF004193 | Tantalum 0.47 uF |
| C6 and C7 | K19/2CCF004102 | Tantalum 1 uF |
| | | ----- LED ----- |
| CR1 thru CR6 | K19/2HAA010202 | HLMP-0500 |
| | | ----- TRANSISTORS ----- |
| Q1 | K19/2QAD001026 | Silicon, 2SA1121SRTL |
| Q2 | K19/2QAD001034 | Silicon, 2SC2462LCTL |
| | | ----- RESISTORS ----- |
| R1 | K19/2RGC001734 | Square chip 1/10W 180 K ohm ±5% |
| R2 thru R4 | K19/2RGC001627 | Square chip 1/10W 10 K ohm ±5% |
| R5 | K19/2RGC001528 | Square chip 1/10W 100 ohm ±5% |
| R6 | K19/2RGC001643 | Square chip 1/10W 100 K ohm ±5% |
| R7 | K19/2RGC001528 | Square chip 1/10W 100 ohm ±5% |
| R8 and R9 | K19/2RGC001544 | Square chip 1/10W 220 ohm ±5% |
| R10 | K19/2RGC001700 | Square chip 1/10W 1.5 K ohm ±5% |
| R11 | K19/2RGC001601 | Square chip 1/10W 3.3 K ohm ±5% |
| R12 and R13 | K19/2RGC001726 | Square chip 1/10W 47 K ohm ±5% |
| R14 | K19/2RGC001635 | Square chip 1/10W 22 K ohm ±5% |
| R15 | K19/2RGC001569 | Square chip 1/10W 470 ohm ±5% |
| | | ----- LCD DISPLAY ----- |
| LCD | K19/2DCA005020 | T164003A |
| | | ----- PINHEADER ----- |
| J1-1 thru J1-5 | K19/2PDA023143 | Minisert 76693-001 |

*COMPONENTS ADDED, DELETED OR CHANGED BY PRODUCTION CHANGES

PARTS LIST

SIGNALING BOARD
A4#E04024
ISSUE 2

| SYMBOL | GE PART NO. | DESCRIPTION |
|----------------------|----------------|---------------------------------|
| | | ----- INTEGRATED CIRCUITS ----- |
| A301 | K19/2ADA004404 | Micro Processor; HD63705VDF |
| A302 | K19/2AAS004292 | OP-AMP, uPC1251G2-T1 |
| A303 | K19/2AAC004135 | Comparator, uPC393 |
| | | ----- CAPACITORS ----- |
| C301 and C302 | K19/2CCF004102 | Tantalum, 1 uF |
| C303 | K19/2CAK013101 | Ceramic chip, 390 pF |
| C304 | K19/2CAK013044 | Ceramic chip, 1500 pF |
| C305 | K19/2CAK005818 | Ceramic chip, 22 pF |
| | | ----- DIODES ----- |
| CR301 | K19/2QBE005032 | DA204KT-06 |
| | | ----- PLUGS ----- |
| P1 and P2 | K19/2PDA023143 | 76693-001 |
| | | ----- RESISTORS ----- |
| R301 | K19/2RGC001585 | Square chip, 1/10W, 1 KohmJ |
| R302 | K19/2RGC001643 | Square chip, 1/10W, 100 KohmJ |
| R303 | K19/2RGC004472 | Square chip, 1/10W, 620 KohmJ |
| R304 | K19/2RGC001742 | Square chip, 1/10W, 330 KohmJ |
| R305 | K19/2RGC004480 | Square chip, 1/10W, 160 KohmJ |
| R306 | K19/2RGC004407 | Square chip, 1/10W, 82 KohmJ |
| R307 | K19/2RGC004316 | Square chip, 1/10W, 39 KohmJ |
| R308 and R309 | K19/2RGC001627 | Square chip, 1/10W, 10 KohmJ |
| R310 thru R312 | K19/2RGC001825 | Square chip, 1/10W, 220 KohmJ |
| R313 thru R315 | K19/2RGC001627 | Square chip, 1/10W, 10 KohmJ |
| R316 | K19/2RGC001775 | Square chip, 1/10W, 1 KohmJ |
| R317 | K19/2RGC001627 | Square chip, 1/10W, 10 KohmJ |
| R319 and R320 | K19/2RGC001827 | Square chip, 1/10W, 10 KohmJ |
| R321 | K19/2RGC001833 | Square chip, 1/10W, 2.2 ohmK |
| R322 thru R324 | K19/2RGC001643 | Square chip, 1/10W, 100 KohmJ |
| | | ----- CRYSTALS ----- |
| Y1 | K19/2YAA181665 | Not Used |

*COMPONENTS ADDED, DELETED OR CHANGED BY PRODUCTION CHANGES