




---

## User Manual

---

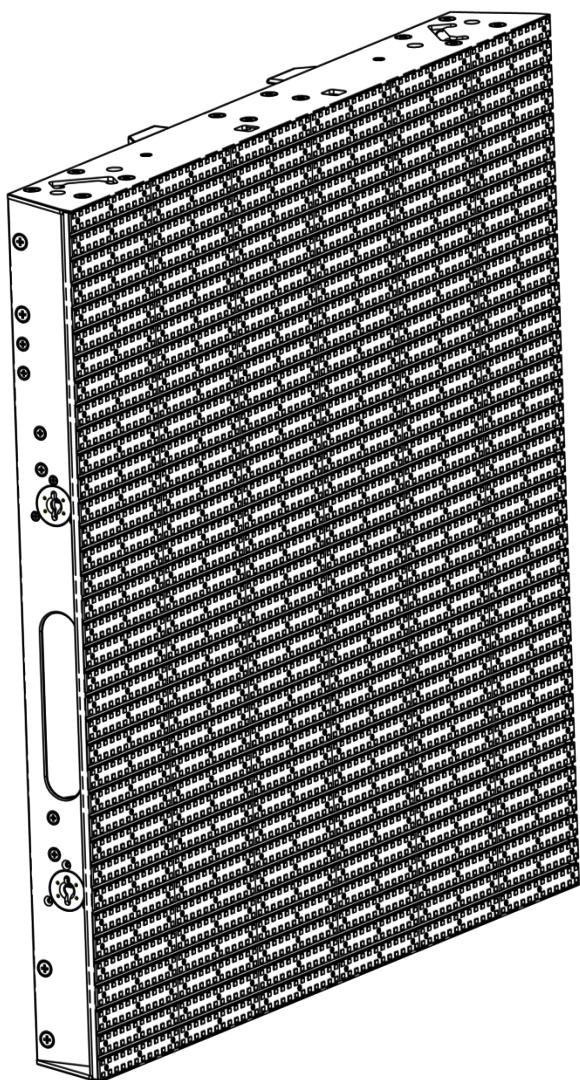

CHAUVENT<sup>®</sup>  
It's  
Green Thinking.<sup>™</sup>

## **Edition Notes**

This User Manual covers the description, safety precautions, setup, installation, operation, and maintenance for the MVP™ Ta8 Curve video panels offered by CHAUVENT®. This edition was published in October 2012.

## **Trademarks**

CHAUVENT® is a registered trademark of CHAUVENT & Sons Inc. (d/b/a CHAUVENT® or Chauvet). The CHAUVENT® logo in its entirety including the Chauvet name and the dotted triangle, and all other trademarks on this manual pertaining to services, products, or marketing statements (example: It's Green Thinking™) are owned or licensed by CHAUVENT®. Any other product names, logos, brands, company names, and other trademarks featured or referred to within this document are the property of their respective trademark holders.

## **Copyright Notice**

CHAUVENT® owns the content of this user manual in its entirety, including but not limited to pictures, logos, trademarks, and resources.

**© Copyright 2012 CHAUVENT®. All rights reserved.**

Electronically published by CHAUVENT® in the United States of America.

## **Manual Usage**

CHAUVENT® authorizes its customers to download and print this manual for professional information purposes only. CHAUVENT® expressly prohibits the usage, copy, storage, distribution, modification, or printing of this manual or its content for any other purpose without its written consent.

## **Document Printing**

For best results, print this document in color, on letter size paper (8.5 x 11 in), double sided. If using A4 paper (210 x 297 mm), configure your printer to scale the content accordingly.

## **Disclaimer**

CHAUVENT® believes that the information contained in this manual is accurate in all respects. However, CHAUVENT® assumes no responsibility for any error or omissions in this document. CHAUVENT® reserves the right to revise this document and to make changes from time to time in the content hereof without obligation of CHAUVENT® to notify any person or company of such revision or changes. This does not constitute in any way a commitment by CHAUVENT® to make such changes. CHAUVENT® may issue a revision of this manual or a new edition of it to incorporate such changes.

## **Document Revision**

The MVP™ Ta8 Curve User Manual, Rev. 1, supersedes all previous versions of this manual. Please discard any older versions of this manual you may have, whether in printed or electronic format, and replace them with this version.

Author	Date	Editor	Date
D. Couppe	10/9/12	S. Diaz	10/15/12

# Table of Contents

Edition Notes .....	ii
Trademarks .....	ii
Copyright Notice .....	ii
Manual Usage .....	ii
Document Printing .....	ii
Disclaimer .....	ii
Document Revision .....	ii
<b>1. Before You Begin .....</b>	<b>1</b>
What Is Included .....	1
Unpacking Instructions .....	1
Claims .....	1
Typographic Conventions .....	1
Symbols .....	1
Safety Notes .....	2
Expected LED Lifespan .....	2
<b>2. Introduction .....</b>	<b>3</b>
Product Description .....	3
Features .....	3
Additional Features .....	3
Additional Products .....	3
Optional Accessories .....	3
Available Signal and Power Cables (optional) .....	3
Overview .....	4
Dimensions .....	5
Pixels Per Panel .....	5
<b>3. Setup .....</b>	<b>6</b>
AC Power .....	6
AC Plug .....	6
Power Linking .....	6
<b>4. Mounting the MVPs .....</b>	<b>7</b>
Orientation .....	7
Truss Installation .....	7
Rig Kit Installation Procedure .....	7
<b>5. Joining Each MVP™ (Creating a Modular Design) .....</b>	<b>8</b>
Vertically Joining the Panels .....	8
Vertical Joining Procedure .....	8
Horizontally Joining Panels .....	9
Horizontal Joining Procedure (90°) .....	9
Horizontal Joining Procedure (+/- 18°) .....	10
<b>6. Connecting (Cabling) Each MVP™ .....</b>	<b>11</b>
Testing Signal and Power Connections .....	11
Using the MVP™ Ta8 Curve Test Button .....	11
Connecting the Signal Input .....	12
Connecting Power and Signal Cables .....	13
Connecting the Signal Between Joined Panels .....	13
Connecting the Power Between Joined Panels .....	15
<b>7. Typical MVP™ Installation .....</b>	<b>16</b>

## Table of Contents

---

Step 1 .....	16
Step 2 .....	16
Step 3 .....	16
Step 4 .....	16
Step 5 .....	16
Step 6 .....	16
Step 7 .....	16
Step 8 .....	16
VIP™ Sample Video Wall System Setup.....	17
<b>8. Operation .....</b>	<b>18</b>
Additional Hardware and Software .....	18
About CHAUVENT® LED Studio.....	19
Description .....	19
<b>9. Technical Information .....</b>	<b>20</b>
MVP™ Ta8 Curve Maintenance.....	20
Troubleshooting Guide .....	20
Returns .....	21
<b>10. Technical Specifications.....</b>	<b>22</b>
Contact Us .....	23

# 1. Before You Begin

## What Is Included

- 2 or 6 MVPs (Modular Video Panel) Ta8 Curve
- Neutrik® etherCON® Signal Cable per MVP™ Ta8 Curve 0.65 m/25.2 in
- Neutrik® powerCON® Power Cable per MVP™ Ta8 Curve 0.65 m/25.2 in
- 2- or 6-Pack Flight Case (based on the number of MVPs included)
- Warranty Card
- User Manual

## Unpacking Instructions

### Claims

Upon receipt, if the box or contents (the product and included accessories) appear damaged from shipping, or show signs of mishandling, notify the carrier immediately, not CHAUVEAU®. Failure to do so in a timely manner may invalidate your claim with the carrier. In addition, keep the container and all the packing material for inspection.

For other issues such as missing components or parts, damage not related to shipping, or concealed damage, file a claim with CHAUVEAU® within 7 days of receiving the merchandise.

## Typographic Conventions

Convention	Meaning
1~512	A range of values in the text
50/60	A set of mutually exclusive values in the text
Italics	A reference to a section, chapter, or external document
<b>&lt;SET&gt;</b>	A button on the product's control panel
Settings	A product function or a menu option
<b>MENU&gt;Settings</b>	A sequence of menu options
1~10	A range of menu values from which to choose in a menu
Yes/No	A set of two mutually exclusive menu options in a menu
ON	A unique value to be entered or selected in a menu

## Symbols

Symbol	Meaning
	Critical installation, configuration, or operation information. Failure to comply with this information may render the product partially or completely inoperative, damage third-party equipment, or cause harm to the user.
	Important installation or configuration information. Failure to follow these notes may prevent the product from working properly.
	Useful information.

## Safety Notes



Please read the following Safety Notes carefully before working with the product. These notes provide important safety information about installation, usage, and maintenance.



**This product contains no user-serviceable parts. Any reference to servicing in this User Manual will only apply to properly trained CHAUVENT® certified technicians. Do not open the housing or attempt any repairs.**



**If product is being used in a mobile or touring application, the VIP™ Media System must be mounted in a shock resistant (or shock mount) road case. This will help prevent damage to the hard drives.**



**Please refer to all applicable local codes and regulations for the proper installation of the product.**

- Always connect the product to a grounded circuit to avoid the risk of electrocution.
- The product is rated IP54 and should only be used in environments meeting that criteria.
- When hanging the product, always secure to a fastening device using a safety cable.
- The maximum ambient temperature is 122° F (50° C). Do not operate the product at higher temperatures.
- Do not operate the product if you see damage on the housing, LEDs, or cables. In any of these cases, have the damaged parts replaced by an authorized technician.
- Do not open or modify the product.
- Make sure the product is connected to the proper voltage provided in this manual's specifications and/or the specification sticker on the product.
- Never try to repair the product. Repairs carried out by unskilled people can lead to damage or malfunction. Please contact CHAUVENT® Technical Support.



**Any damages caused by manual modifications are not subject to warranty. CHAUVENT® will not accept liability for any resulting damages caused by unauthorized modifications or not observing the safety warnings and instructions in the manual.**



**In the unlikely event that your CHAUVENT® product may require service, contact CHAUVENT® Technical Support.**

## Expected LED Lifespan

LEDs gradually decline in brightness over time, mostly because of heat. Packaged in clusters, LEDs exhibit higher operating temperatures than in ideal, single-LED conditions. For this reason, using clustered LEDs at their fullest intensity significantly reduces the LEDs' lifespan. The electrical, thermal management design of the MVP™ Ta8 Curve panel aims to provide the longest LED lifespan possible. Under normal operating conditions, this lifespan can be 50,000 hours or longer. If extending this lifespan is vital, lower the operational temperature by improving ventilation around the fixture and reducing the ambient temperature to an optimal operating range. In addition, limiting the overall projection intensity may also help to extend the LEDs' lifespan.

## 2. Introduction

### Product Description

The MVP™ Ta8 Curve is a Modular Video Panel. Each video panel consists of multiple SMD3528 tri-color LEDs. The number in the model name indicates the pixel pitch (distance, in millimeters, between the LEDs). When multiple panels are assembled and connected (signal and power), the entire configuration becomes a modular video wall design.

The outer dimensions of each panel are identical. The difference between each model is the vertical and horizontal spacing between the LEDs and the number of LED pixels. Both of these values determine the total number of LED pixels provided on each panel. Each pixel is one SMD3528 tri-color LED.

The aluminum alloy and stainless steel construction make the MVP™ Ta8 Curve reliable and solid, as well as easy to install and dismantle. Multiple panels can be assembled horizontally or vertically, and each model is interchangeable with the others. This flexibility provides numerous modular design possibilities.

The VIP™ video wall system is addressed using a PC and CHAUVENT® LED Studio software. Refer to the CHAUVENT® LED Studio User Manual for detailed information and instructions on using CHAUVENT® LED Studio.

### Features

- 8-mm pixel pitch panels with integrated hardware allows units be hung straight or in convex/concave curves
- Innovative rigging hardware lets the panels curve +/-18 degrees, without losing pixel pitch
- Superb contrast through the use of blackface SMD LEDs
- Tight binning of LEDs ensures consistent color rendering across panels
- Durable and modular system for high-resolution graphics
- Easy installation and connectivity using Neutrik® powerCON® and etherCON® connectors
- Solid construction makes these a perfect product for both touring and long term installation
- Tight pixel pitch allows for equally effective close range and long range viewing
- Designed for temporary outdoors use and can be viewed during daylight operation
- Works with VIP™ Driver and VIP™ Signal Distributor
- Compatible mounting options: MVP™ Curve Rig Kits (truss mounting), or M10 bolt/clamp (rear mounting)

### Additional Features

- Neutrik® etherCON® signal cable per MVP™ Ta8 Curve 0.4 m/15.8 in
- Neutrik® powerCON® power cable per MVP™ Ta8 Curve 0.4 m/15.8 in

### Additional Products

- VIP™ Driver (required)

### Optional Accessories






- VIP™ Signal Distributor (required when using 25 MVPs or more in your video wall)
- MVP™ Curve Rig Kit (required when you hang panels from a truss or truss structure)

### Available Signal and Power Cables (optional)

- Signal cables (Neutrik® etherCON® Signal Extensions)
  - MVPU-SIG5FT
  - MVPU-SIG10FT
  - MVPU-SIG25FT
- Power cables (Neutrik® powerCON® Extension)
  - PCEXT5FT
  - PCEXT10FT
  - PCEXT25FT
  - PCLEAD50FT


## Introduction

## Overview

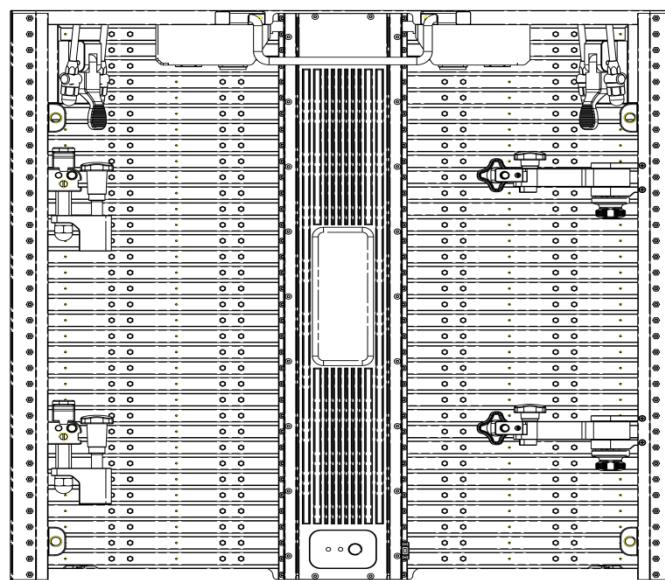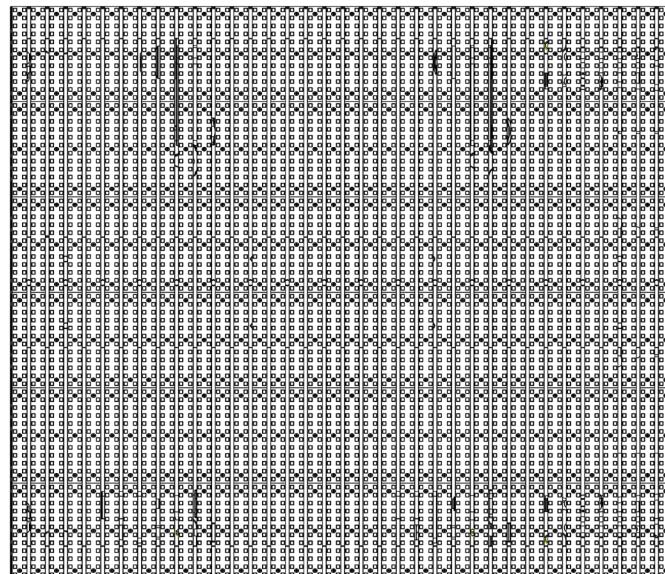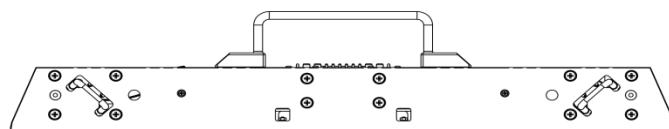

## Introduction

### Dimensions

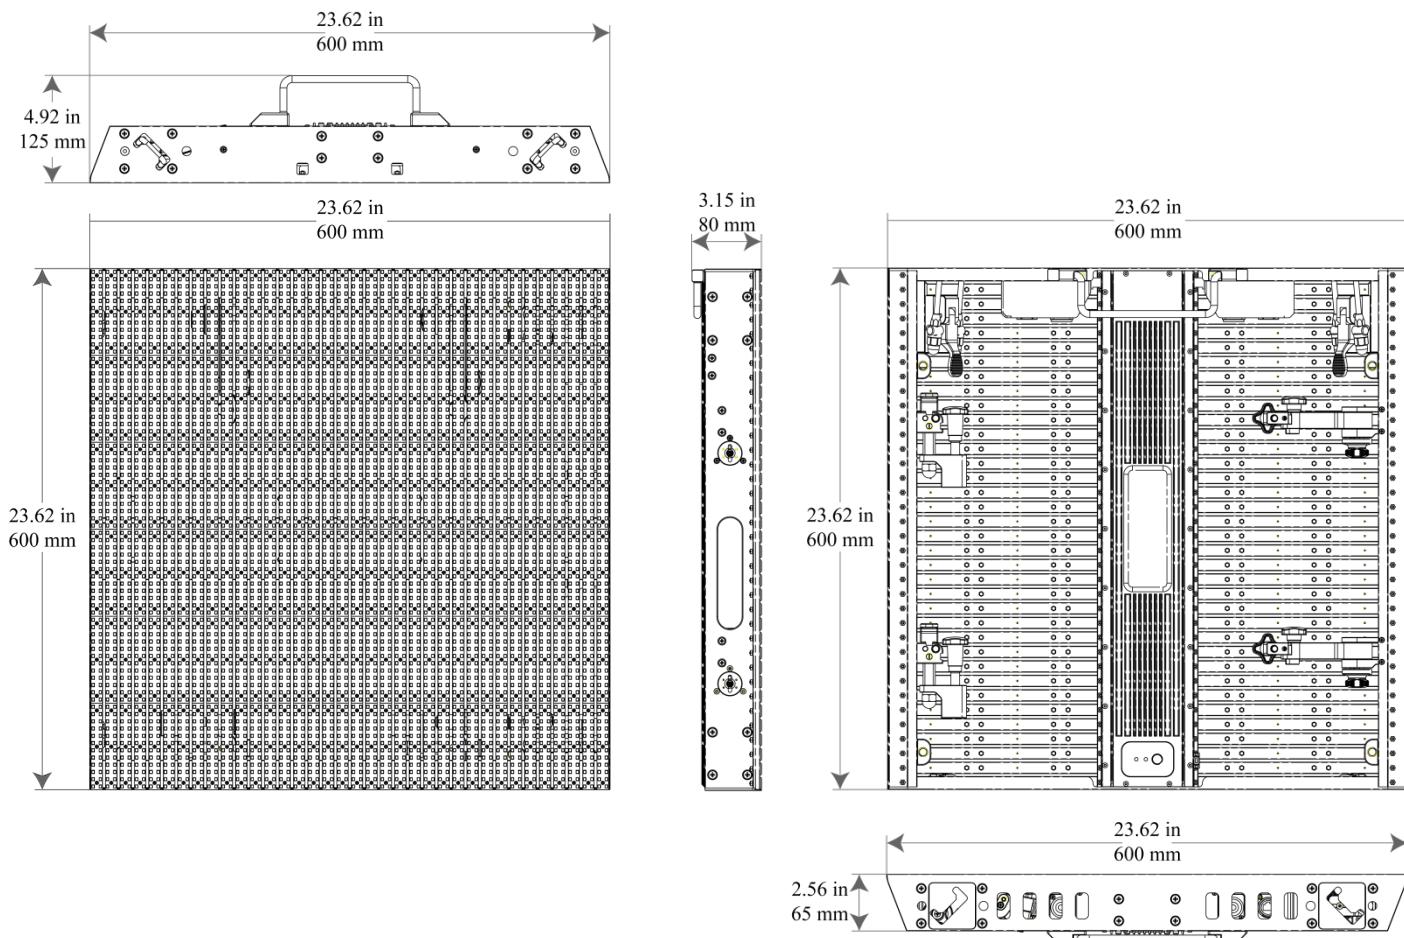

### Pixels Per Panel

Each pixel is one SMD3528 LED. For detailed specifications, refer to the [Technical Specifications](#).

MVP™ Ta8 Curve	
Pixels per Panel	72 x 72
Total Pixels	5,184



You will use the number of pixels per panel and the screen resolution you would like to use for your video wall display to calculate the number of panels, horizontally and vertically, supported by a single VIP™ Driver. This Driver is required to operate a CHAUVENT® VIP™ video wall system. Diagrams of how the MVP™ Ta8 Curve panels and the VIP™ Driver operate together follow later in this manual. For details about the VIP™ Driver and panel calculation examples, refer to the VIP™ Driver Quick Reference Guide.

## 3. Setup

### AC Power

Each MVP™ Ta8 Curve has an auto-ranging power supply that works with an input voltage range of 100~240 VAC, 50/60 Hz.

Make sure that you are connecting the MVPs to the proper voltage, as specified in this User Manual and on the product's specification sticker.



**Always connect this product to a protected circuit with an appropriate electrical ground to avoid the risk of electrocution or fire.**

To determine the power requirements for each MVP™ Ta8 Curve in the series, refer to the label affixed to the product. You can also refer to the [Technical Specifications](#) chart in this manual.

The listed current rating indicates the maximum current draw during normal operation. For more information, you may download Sizing Circuit Breakers from the CHAUVENT® website: [www.chauvetpro.com](http://www.chauvetpro.com).



**Never connect this product to a rheostat (variable resistor) or dimmer circuit, even if the rheostat or dimmer channel serves only as a 0% to 100% switch.**

### AC Plug

Each MVP™ Ta8 Curve comes with a power linking cord to connect power between panels; however, the power input cord is only included with the 6-pack flight case.

This cable has a powerCON® connector to connect to the MVP™ Ta8 Curve and an Edison plug for power input. References to wire a new plug:

Connection	Wire (U.S.)	Wire (Europe)	Screw Color
AC Live	Black	Brown	Yellow or Brass
AC Neutral	White	Blue	Silver
AC Ground	Green/Yellow	Green/Yellow	Green

### Power Linking

All panels in the VIP™ Series support power linking. Refer to the following table for specifications for the MVP™ Ta8 Curve.

	MVP™ Ta8 Curve
@ 120 V, 60 Hz	9
@ 208 V, 60 Hz	15
@ 230 V, 50 Hz	16



**Please refer to all applicable local codes and regulations for the proper installation of this product.**

## 4. Mounting the MVPs

### Orientation

Each MVP™ Ta8 Curve is a solid frame constructed of aluminum alloy and stainless steel. This ensures each panel is stable and easy to install. Each panel also has a convenient pop-out handle located on the top, outside, of the panel. This handle enables you to easily pick up and securely hold each panel while mounting and working with the panels.

The MVPs can be assembled to provide any number of modular designs. The panels on the top can be securely hung from a truss or other stable surface. Always hang in a safe position with adequate space for ventilation, configuration, and maintenance.


CHAUVENT® recommends following the general guidelines below.

- When selecting an installation location, consider ease of access for operation and routine maintenance.
- Make sure to hang away from any flammable material, as indicated in the [Safety Notes](#).
- Never mount in places where rain, extreme temperature changes, or restricted ventilation may affect the panels.
- Make sure that the structure to which you are hanging the panels can support the weight.

Please see the [Technical Specifications](#) section of this manual for the weight requirement of each MVP™ Ta8 Curve.

### Truss Installation

Refer to the following diagram for truss installation. CHAUVENT® offers the MVP™ Ta Rig Kits (sold separately) specifically designed for hanging the panels. Each clamp is designed and labeled for mounting on a specific side.

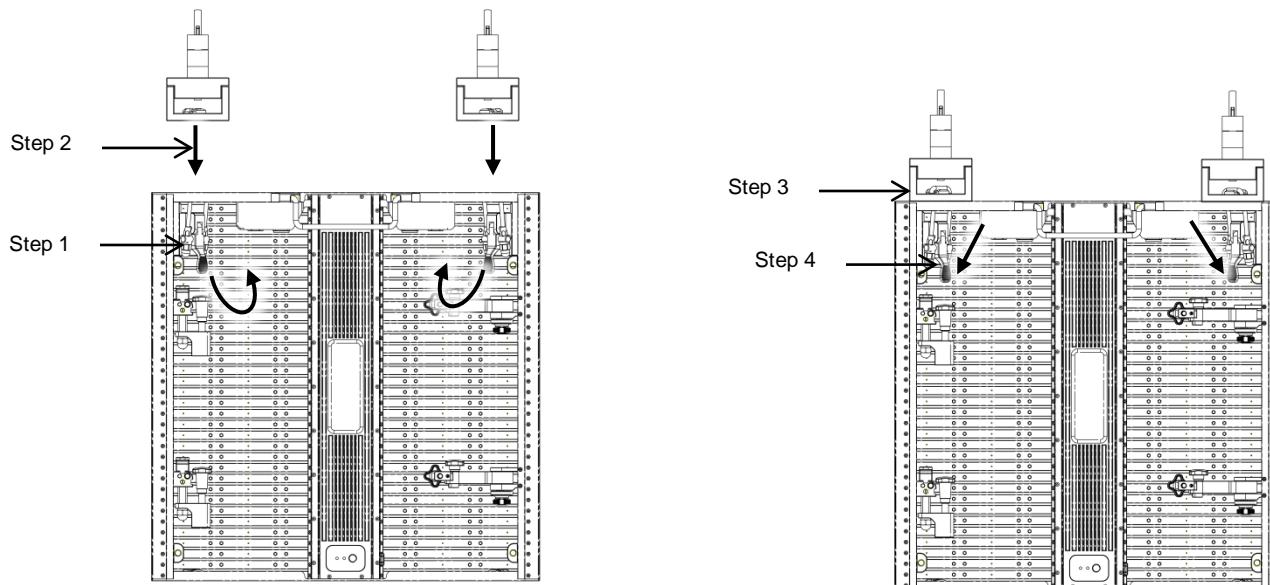

MVP™ Ta Rig Kit sold separately.

### Rig Kit Installation Procedure

Use the following instructions to join your panels to a truss using a MVP™ Ta RKR/RKL rig kit. Each step corresponds to the number in the diagram.


1. Release quick lock lever as shown in step 1. Using the block behind the lever, push up on the mechanism revealing the nipple.
2. Place the clamp on top of the panel aligning the slot with the loop rod and the nipple on the top of the panel.
3. Allow looped rod to fit over rig clamp tab.
4. Push down on fast lock lever to securely lock clamp in place.

## 5. Joining Each MVP™ (Creating a Modular Design)

Each MVP™ Ta8 Curve is joined together to create a modular designed video wall. Because the panels are interchangeable, you can create a video wall by joining several of the same model or joining different models to create a larger or more complex video wall.

### Vertically Joining the Panels

Each MVP™ Ta8 Curve can be easily joined vertically using the 2 fast locks located at the top corner of each panel and the vertical rigging located on the bottom of the panel at each corner. These connectors can be recessed if not being used.

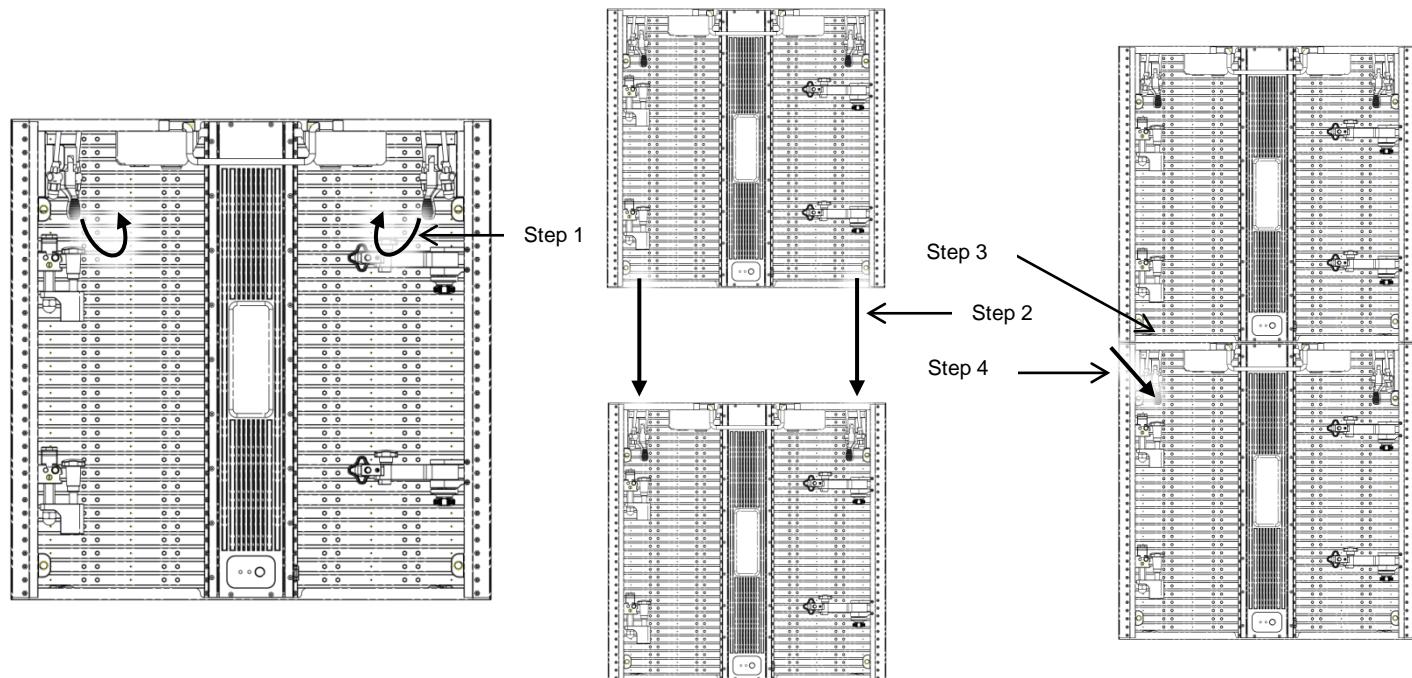

### Vertical Joining Procedure


Use the following instructions to join your panels vertically. Each step corresponds to the number in the diagram.

1. Release fast lock lever as shown in step 1. Using the block behind the lever, push up on the mechanism revealing the nipple.
2. Place the panel on top of the panel aligning the slot with the loop rod and the nipple on the top of the panel.
3. Allow looped rod to fit over rig tab on the panel.
4. Push down on fast lock lever to securely lock the panel in place.

## Joining Each MVP™ (Creating a Modular Design)

### Horizontally Joining Panels


Each MVP™ Ta8 Curve can be easily joined horizontally using the 2 horizontal locking knobs on the inside left-hand top and bottom of each panel to connect them in a straight 90° orientation or they can be joined using the adjustable locking arms on the inside right-hand top and bottom of each panel. Using the adjustable locking arms allows the panels to be curved +/- 18°.

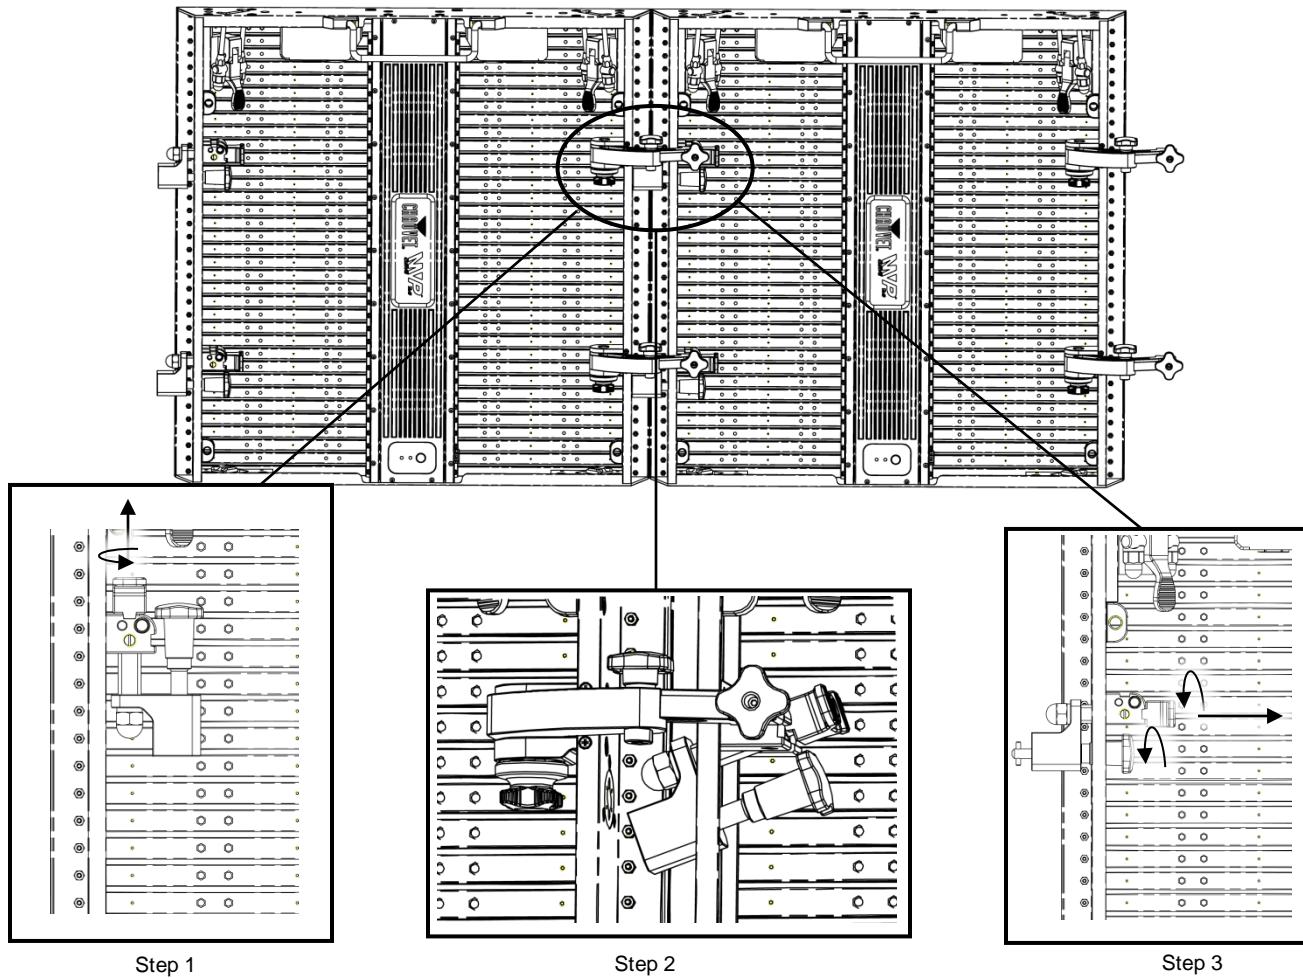

### Horizontal Joining Procedure (90°)

Use the following instructions to join your panels horizontally.

1. Lift and turn knob as shown in step 1.
2. Pull adjoining panel and start the alignment process with the mechanism.
3. Lock the mechanism in place by turning both knobs as indicated in step 3.

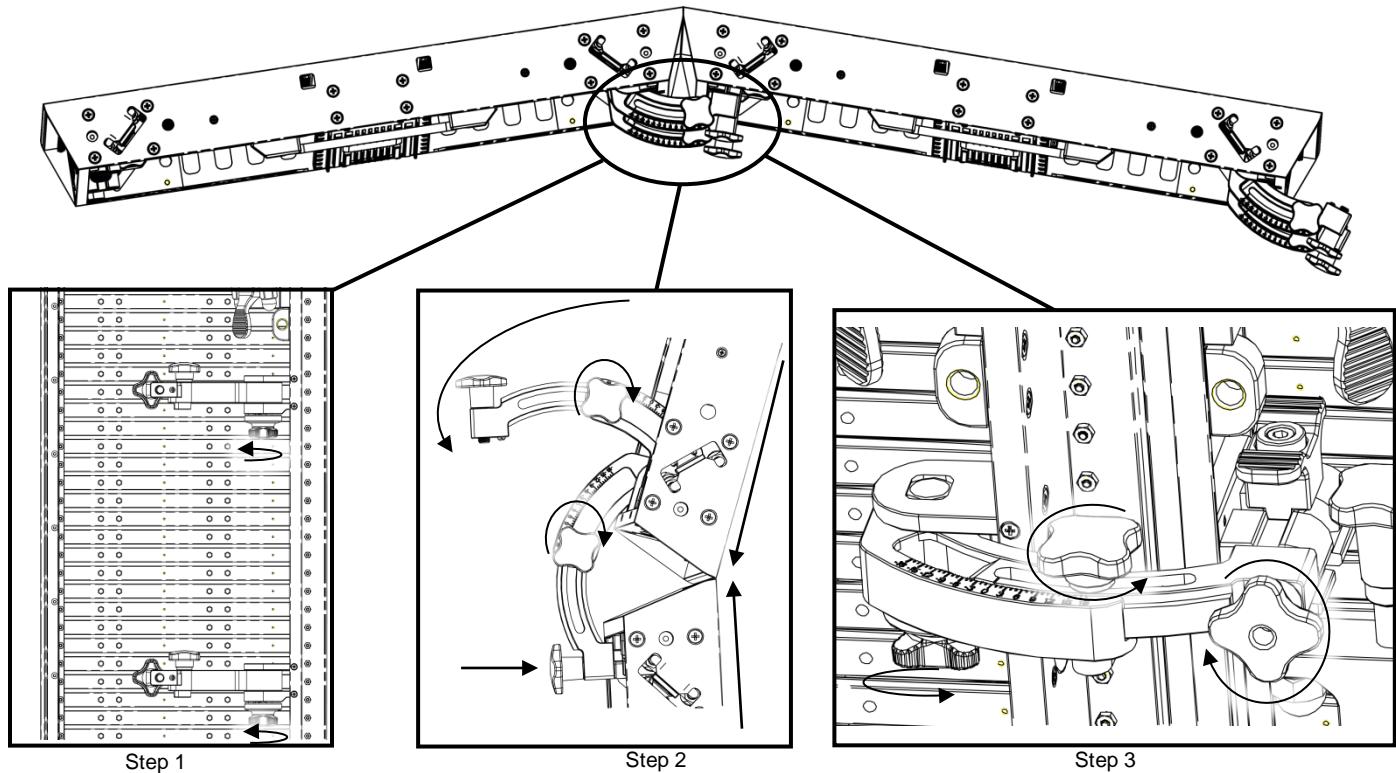

### Horizontal Joining Procedure (+/- 18°)

Use the following instructions to join your panels horizontally.

1. Loosen locking/adjustment knobs and pull arms out as shown in step 1 and 2.
2. Pull together adjoining panel, set the same angle on both arms and lightly tighten adjustment knobs as shown in step 2. (This is for connection only and can be re-adjusted later.)
3. Attach outer end of arms to adjoining panel and tighten all the locking knobs as shown in step 3.
4. Set the adjustment knobs to the desired angle and tighten in place.

## 6. Connecting (Cabling) Each MVP™


### Testing Signal and Power Connections

Each MVP™ Ta8 Curve has two (2) power supply sockets and two (2) signal sockets.

- The Power and Signal **IN** are located on the upper right-hand side of each panel.
- The Power and Signal **OUT** are located on the upper left-hand side of each panel.
- The Signal **IN** and **OUT** may be used interchangeably.

Each MVP™ Ta8 Curve has LED indicator lights.

- Each panel indicates a successful power connection when the Power indicator light remains red.
- Each panel indicates video signal reception when the Link LED indicator light displays green. This light should be blinking rapidly to indicate good reception.

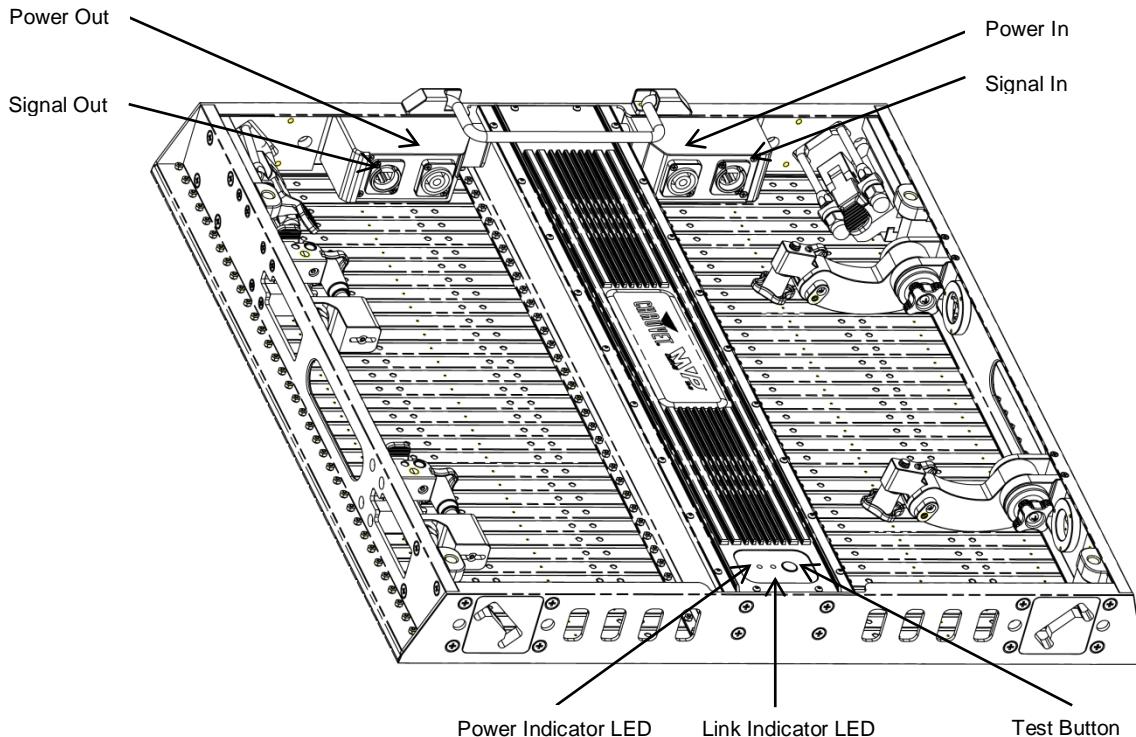

### Using the MVP™ Ta8 Curve Test Button

Each MVP™ Ta8 Curve also has a Test button, used to ensure all LEDs in each panel are functional. Use the Test Button on each panel to perform a self-test. If self-testing, you must perform the test individually for each MVP™ Ta8 Curve. You do not need to connect to a signal or use software.



**When using the Test button, make sure the MVP™ Ta8 Curve is not connected to the VIP™ Driver.**

To use the Test button, you must connect the power, but **do not** connect the signal cables. Press the Test button to toggle through various LED light display configurations.


## Connecting the Signal Input

The VIP™ video wall system uses 2 basic setup configurations to connect the signal to the video wall:

1. A configuration using 24 or less panels.
2. A configuration using more than 24 panels.

The next section, [Connecting Power and Signal Cables](#), gives information on connecting power and signal between joined panels and to the rest of the VIP™ system.

The following configuration of 24 panels shows a direct connection from the signal to the VIP™ Driver into the first panel's Signal Input socket. Refer to the VIP™ Driver Quick Reference Guide for information and instructions on the VIP™ Driver.

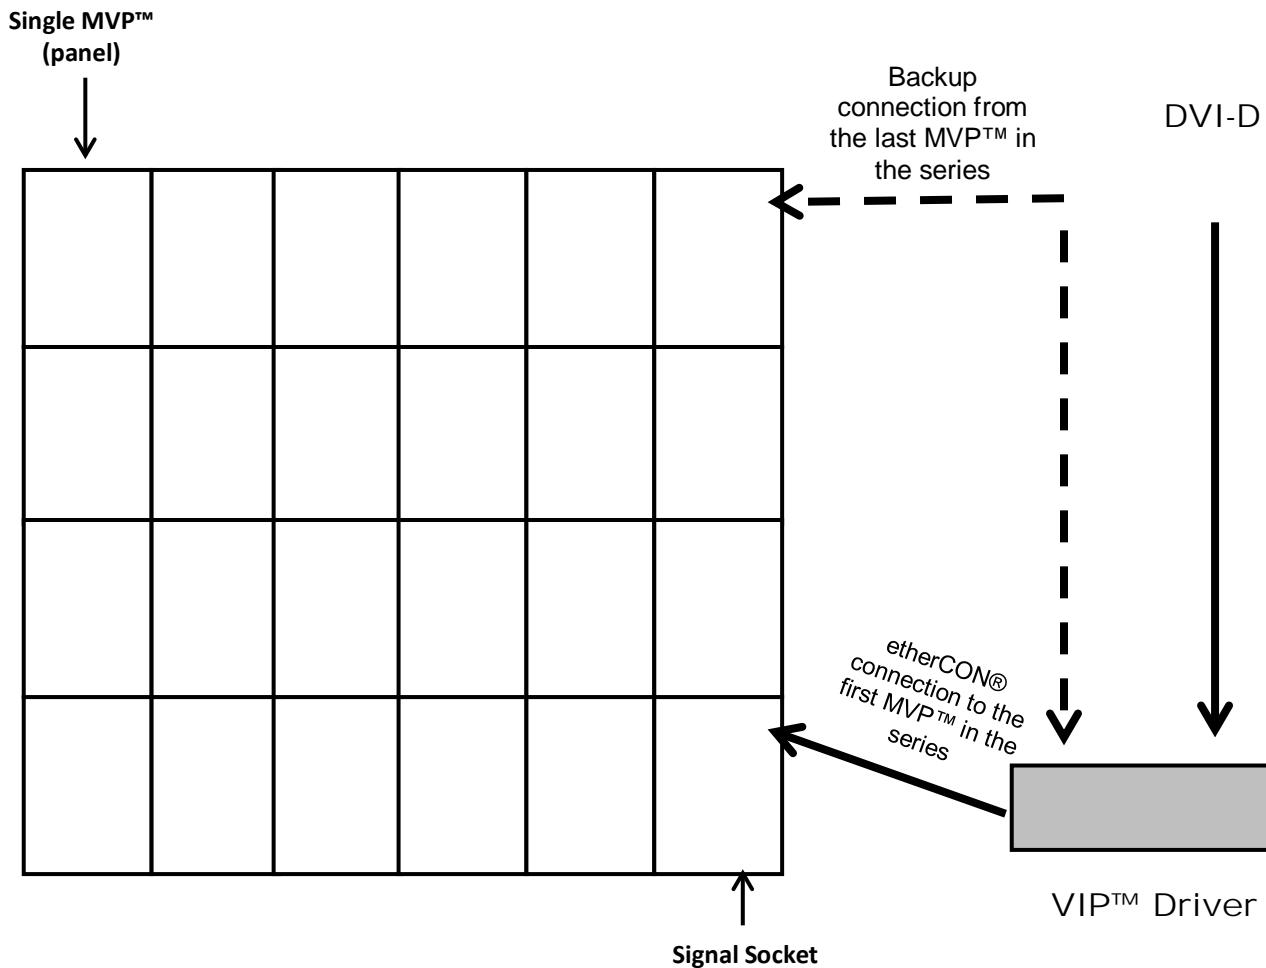

The VIP™ system's maximum signal load is 24 or less panels on a single signal cable connection. When using more than 24 panels in a video wall design, you will need a VIP™ Signal Distributor and additional signal cables to accommodate the number of panels over 24. A VIP™ Signal Distributor output supports up to 8 signal output lines, providing up to 192 total panels that can be connected from the VIP™ Signal Distributor. You also can add more VIP™ Signal Distributors to a VIP™ video wall system. Refer to the VIP™ Signal Distributor Quick Reference Guide for more information.



Pixel limitation may limit to less than 192 panels.

## Connecting Power and Signal Cables

### Connecting the Signal Between Joined Panels

The following sections provide information and diagrams on connecting signal and power between panels.

Refer to the [Introduction](#) or [Operation](#) sections in this User Manual for available cables and item numbers.


Signal cable panel connections can use several different configurations. The basic configuration to connect the signal from one panel to the next is as follows.

- The source signal is connected to the first panel.
- A signal cable is then connected from the first panel.
- The connections continue to daisy-chain until all panels are connected.
- The route of the cables used to make the signal connections can vary.

The following diagrams are recommended suggestions for signal connections between 24 or less panels, and more than 24 panels.

Refer to [Connecting Signal Input](#) for information and instructions on connecting the signal from the source.

This diagram shows an example of a simple signal connection using 24 or less MVPs.

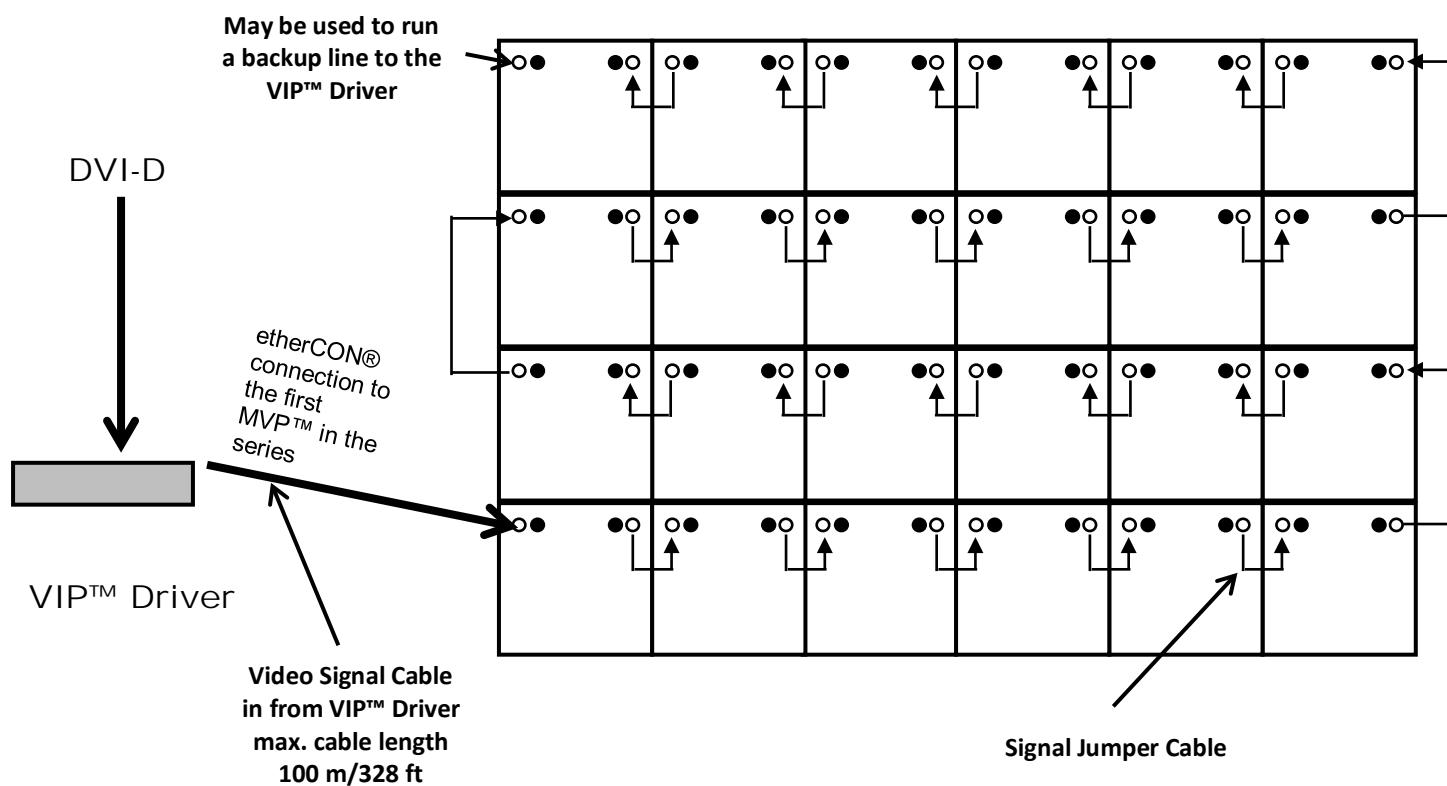


The following diagram shows an example of a signal connection configuration using more than 24 panels. A video wall design with more than 24 panels requires:

- Incoming signal connection to the VIP™ Driver.
- VIP™ Driver connection to the VIP™ Signal Distributor.
- Signal cable connections as determined by the number of panels in the video wall design and the desired layout, for ease of setup.



**Every group of 24 panels will require another signal cable from the VIP™ Signal Distributor. Eight signal cables can be connected to a single VIP™ Signal Distributor.**

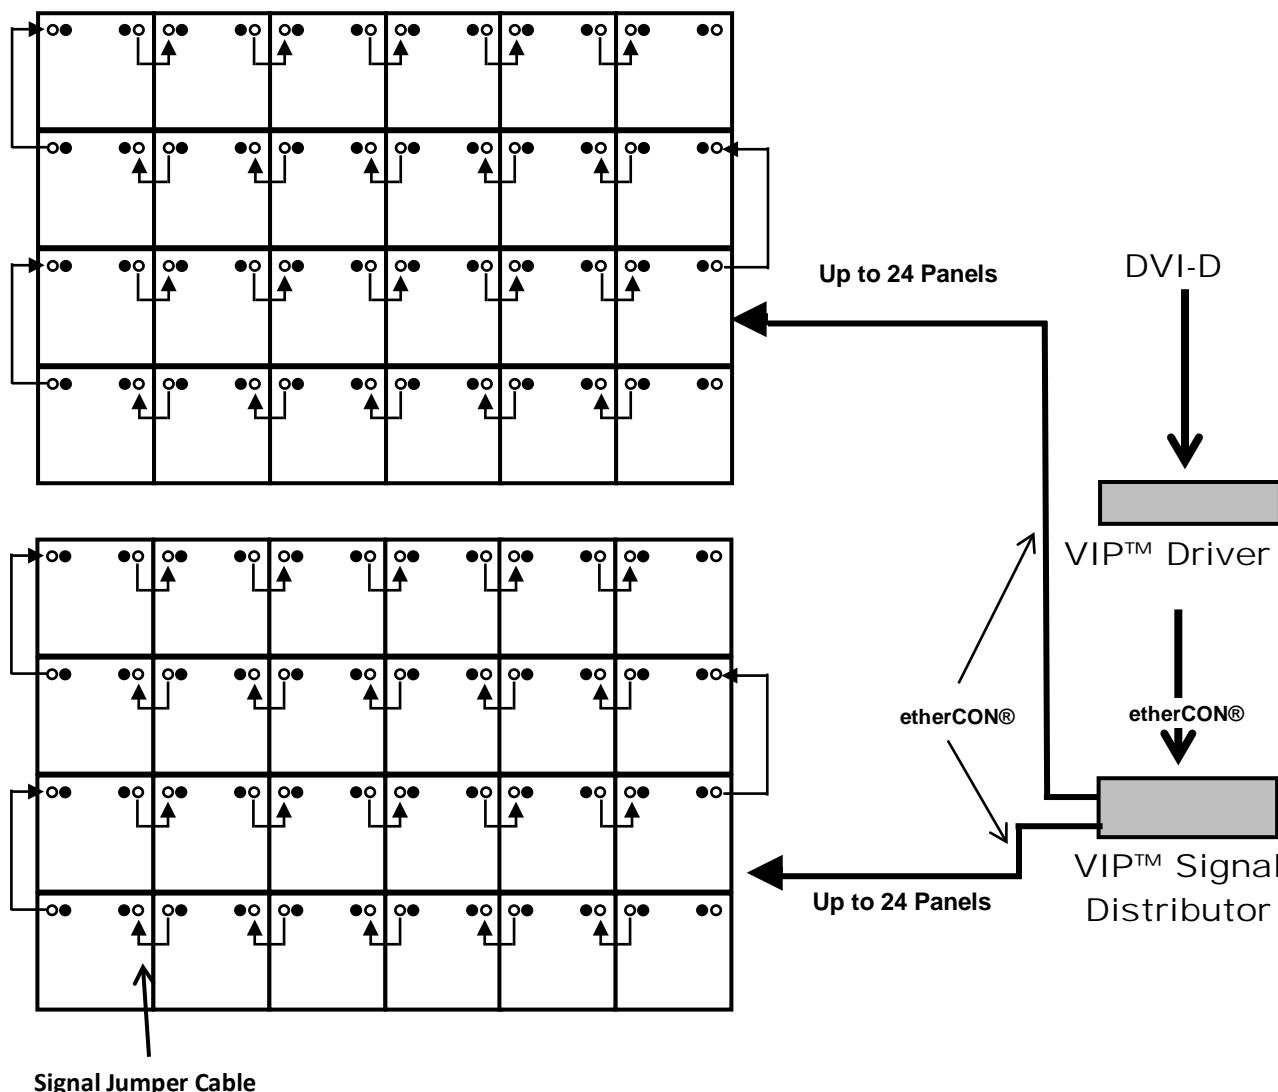

**In this configuration, the backup from the driver may be connected to the last panel in any group of panels, or to any free connection to the VIP™ Signal Distributor, including input "B."**

## Connecting (Cabling) Each MVP™

### Connecting the Power Between Joined Panels



Power cable panel connections can also use different configurations. The basic configuration to connect the main power supply from one panel to the next is:

- The main power is connected to the first panel's Power Input or Output.
- A powerCON® cable is then connected to the first panel's Power Output and connected to the next panel's Power Input.
- The connections continue until all panels are connected.

**The power input cord for the main is included when purchasing an 6-pack flight case ONLY. CHAUVENT® recommends the Neutrik® powerCON® extension cable, item number PCLEAD50FT, available from CHAUVENT®, if additional cables are required.**

Connect power between the panels using the same procedure as the signal only using the Power Input and Power Output connectors. You must adhere to the power-linking specifications for each MVP™ model.


Refer to the [Power Linking](#) section for details on the number of panels that can be linked based on voltage from a single power connection.



**Power linking more panels than recommended will void your warranty and increase the risk electrocution or fire!**

Refer to the following diagram for an example of power connection from the main and to each connected panel.

This example is using an MVP™ Ta8 Curve power linking 7 panels horizontally @ 120 V.

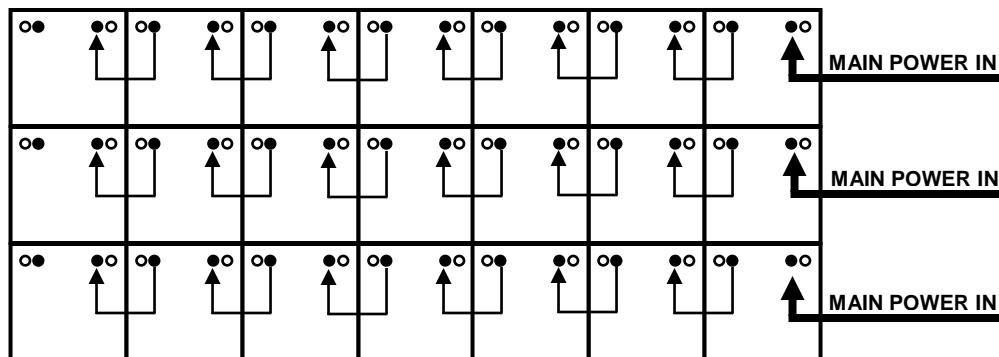

## 7. Typical MVP™ Installation

Because a video wall system can include different components to provide a simple to complex modular wall design, use the following steps as a general guide to get started.


- Step 1** Open and examine the MVP™ Ta8 Curve flight case to make sure you have received all products and accessories and that each one is in good condition.
- Step 2** Apply power and run the self-test for each MVP™ Ta8 Curve to ensure all LEDs and inside connections in each panel are working (optional).
- Step 3** Create a stable mounting surface (i.e., truss or other stable surface) for MVP™ Ta8 Curve mounting.
- Step 4** Mount the top row of the MVP™ Ta8 Curves first. Refer to the [Mounting](#) section in this User Manual.
- Step 5** Adjust the alignment of the first row using the speego connectors.
- Step 6** Connect the signal source to the VIP™ Driver. Connect the VIP™ Driver to the VIP™ Signal Distributor (if applicable).
- Step 7** Connect either VIP™ Driver or VIP™ Signal Distributor (if being used) to the Input Signal socket of the first panel in your connection chain.
- Step 8** Based on your video wall configuration (design), join each panel, either horizontally or vertically, using the instructions in the section, [Joining Each MVP™ \(Creating a Modular Design\)](#).  
Refer to the instructions and information in the section of this User Manual, [Connecting \(Cabling\) Each MVP™](#).

## Typical MVP™ Installation

### VIP™ Sample Video Wall System Setup

The following diagram provides a sample setup for a CHAUVENT® VIP™ video wall system. This system setup includes an optional signal processor for additional video sources, and the VIP™ Signal Distributor to support more than 24 panels. Note that the two-driver setup shown here allows for simultaneous playback of pre-recorded and live content, all directed from a single PC.

Refer to the signal processor User Manual and the VIP™ Signal Distributor Quick Reference Guide for information on those video wall components.

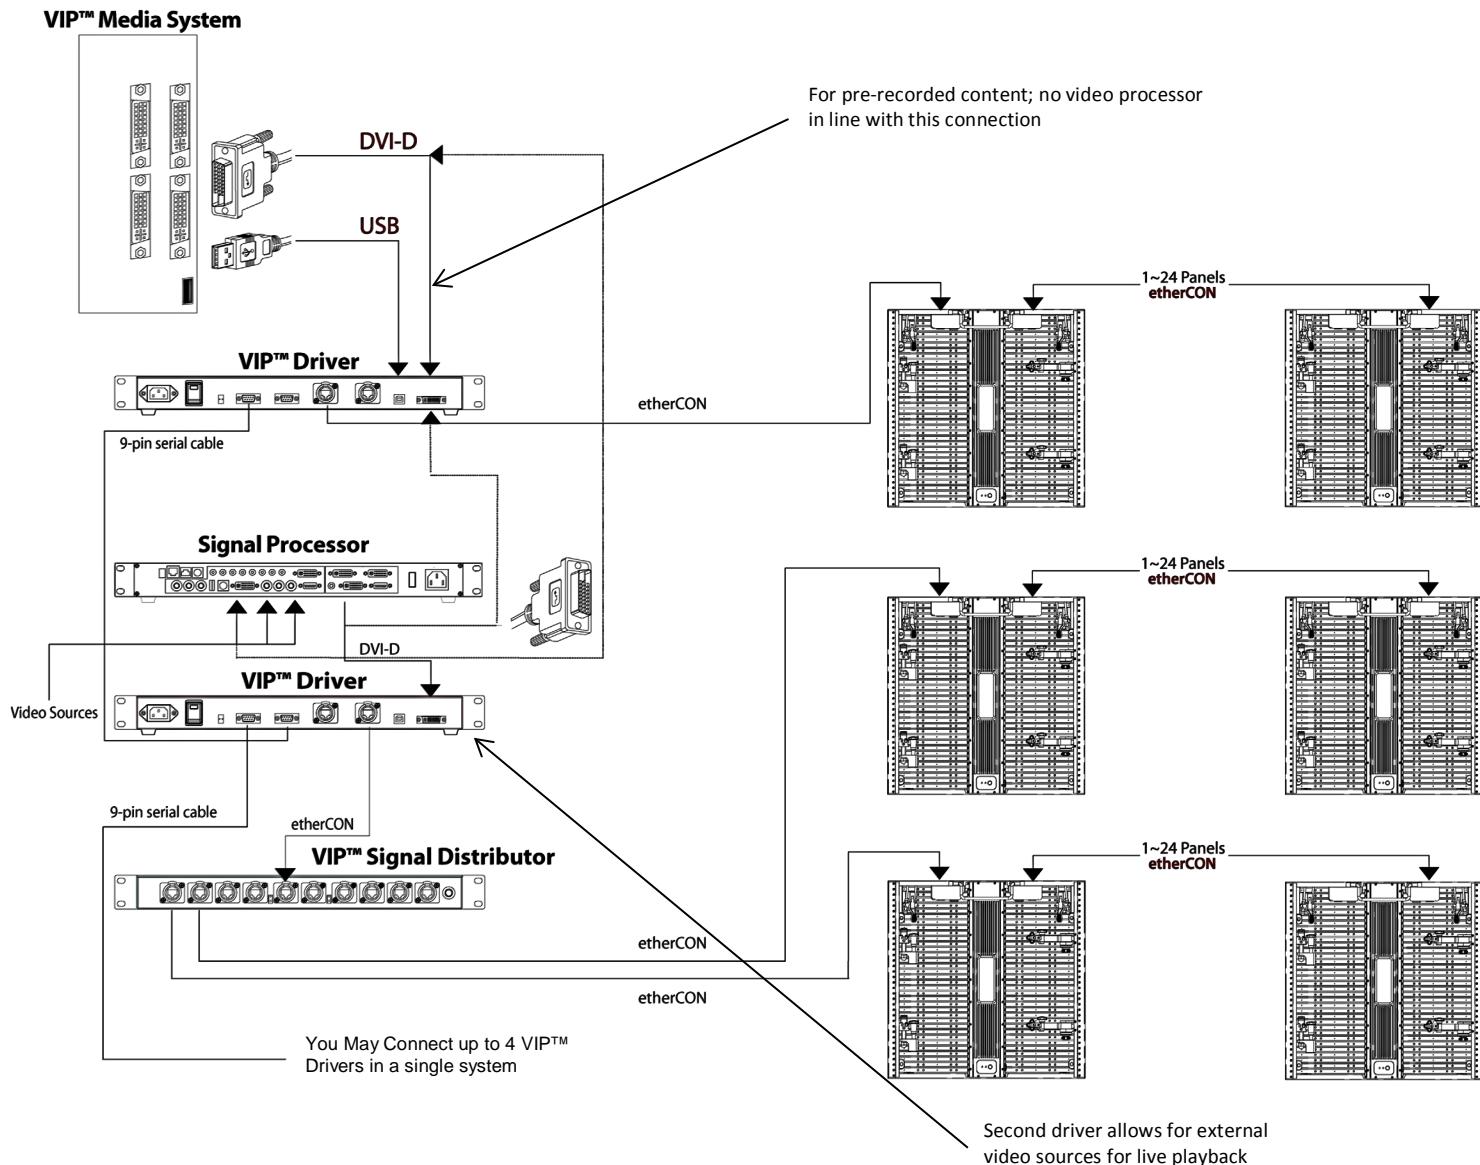

## 8. Operation

### Additional Hardware and Software

In addition to the panels, you will need other hardware and software to design, build, and operate your VIP™ video wall system. The following table summarizes these additional items—some are required and others are optional.

Item	Description	Item Code	Item Number
<b>VIP™ Driver</b>	Interface between the signal source, LED Studio, and the MVP™ Ta8 Curve being used	99090575	VIPDRIVER
<b>LED Studio</b>	Software application used to design and run the MVPs comprising the video wall. A PC is needed		
<b>VIP™ Signal Distributor</b> (optional up to 24 panels)	Connects between the VIP™ Driver and the MVPs to distribute the source signal from the VIP™ Driver to the video wall when using more than 24 panels	99090576	VIPSIGDISTRO
<b>MVP™Ta RKL/RKR Rigging Kit</b> (optional)	Left side rigging kit	12090647	MVP-RKL
	Right side rigging kit	12090646	MVP-RKR
<b>Neutrik® etherCON® Signal Extension</b> (optional)	etherCON® Signal Extension, 18 in etherCON® Signal Extension, 5 ft etherCON® Signal Extension, 10 ft	19090363 19090364 19090365	MVPU-SIG18IN MVPU-SIG5FT MVPU-SIG10FT
<b>Neutrik® powerCON® Extension</b> (optional)	powerCON® Extension, 18 in powerCON® Extension, 5 ft powerCON® Extension, 10 ft powerCON® Extension, 25 ft powerCON® Extension, 50 ft powerCON® Bare Wire Lead, 50 ft	19110372 19110373 19110374 19110375 19110376 19110377	PCEXT18IN PCEXT5FT PCEXT10FT PCEXT25FT PCEXT50FT PCLEAD50FT
<b>MVP™ Ta8 Curve 2-pack and 6-pack</b>	MVP™ Ta8 Curve Ta8 2-Pack MVP™ Ta8 Curve Ta8 6-Pack	12090645 12090644	MVPTA8CURVEX2 MVPTA8CURVEX6
<b>VIP™ Media System and one VIP™ Driver</b>	Rack mountable, video computer system with the VIP™ Driver and LED Studio software		MVPU-MS
<b>VIP™ Media System with ArKaos Media Master Express + KN and One VIP™ Driver</b>	Rack mountable, video computer system with the VIP™ Driver and LED Studio software, as well as ArKaos Media Master Express		MVPU-MSMME
<b>ArKaos Media Master Express + KN</b>	Video playback software + KN control		MVPU-MSPRO

## About CHAUVENT® LED Studio

CHAUVENT® LED Studio is a powerful and easy-to-learn software application used to design and run the VIP™ video wall system. The following is some introductory information about this software.

Refer to the CHAUVENT® LED Studio User Manual for detailed information and instructions on setting up and using CHAUVENT® LED Studio with your CHAUVENT® VIP™ video wall system.

## Description

CHAUVENT® LED Studio enables you to create and control your video wall by addressing the panels included in your video wall including pixel pitch and layout.

Once you have physically created your modular video wall design by joining the panels, connecting power, signals, and the VIP™ Media System, you recreate that design within LED Studio.

Detailed information and instructions are in the CHAUVENT® LED Studio User Manual.



**CHAUVENT® does not recommend using CHAUVENT® LED Studio for live show playback. For this purpose, CHAUVENT® offers ArKaos MediaMaster, which offers numerous playback triggers, including DMX, Art-Net, MA-net, MIDI, and QWERTY.**

## 9. Technical Information

### MVP™ Ta8 Curve Maintenance

To maintain optimum performance and minimize wear, the user should clean this product regularly. Usage and environment are contributing factors in determining the cleaning frequency.

As a rule, clean this product at least twice a month. Dust build-up reduces light output performance and can cause overheating. This can lead to reduced light source life and increased mechanical wear.

To clean an MVP™ Ta8 Curve, follow the recommendations below:

- Unplug the panel from power.
- Wait until the unit is cold.
- Use a soft brush to remove dust collected on the external components.
- Wipe the outside of the LED strips with a soft, lint-free cloth dampened with a solution of water and detergent. Apply gentle pressure only.
- Make sure all connections are thoroughly dry before reconnecting power and signal cables.



**Always dry the external surfaces carefully after cleaning them.**

### Troubleshooting Guide

Symptom	Cause(s)	Action(s)
All LEDs are blinking	Contact failure	Fix the loose LEDs or try re-plugging
LEDs on a specific circuit are not lit/working	Power output cable may be connected incorrectly Power cables may be plugged in reverse	Remove and connect correctly
All LEDs do not light	Output cables connected incorrectly	Find the incorrectly connected cables and reconnect properly
MVP™ Ta8 Curve does not power up (LED power indicator does not light during "self-test")	No power Loose or damaged power cord Faulty power connection inside the MVP™ Ta8 Curve Faulty external power supply	Check for voltage on outlet Check power cord Send for repair
MVP™ Ta8 Curve displays no images or spotted images		Disconnect and reconnect the signal cable, or replace the cable



**If you still experience technical problems after trying the above solutions or if you need to send the unit for repair, contact CHAUVENT® Technical Support.**

## Returns

Send the merchandise prepaid, in the original box, and with its original packing and accessories. CHAUVENT® will not issue call tags.

Call CHAUVENT® and request a Return Merchandise Authorization (RMA) number before shipping the product. Be prepared to provide the model number, serial number, and a brief description of the cause(s) for the return.

Clearly label the package with an RMA number. CHAUVENT® will refuse any product returned without an RMA number.



**DO NOT write the RMA number directly on the box. Instead, write it on a properly affixed label.**

Once you have received the RMA number please include the following information on a piece of paper inside the box:

- Your name
- Your address
- Your phone number
- The RMA number
- A brief description of the problem(s)

Be sure to pack the product properly. Any shipping damage resulting from inadequate packaging will be the customer's responsibility. FedEx packing or double-boxing are recommended.



**CHAUVENT® reserves the right to use its own discretion to repair or replace returned product(s).**

## 10. Technical Specifications

MVP™ Ta8 Curve	
<b>Light Source</b>	Tri-color SMD3528 LED
<b>Pixels per Panel</b>	72 x 72 (5,184 total)
<b>Pixel Pitch (between LEDs)</b>	8.33 mm
<b>Pixel Density</b>	14,400/m <sup>2</sup>
<b>Display Refresh Rate</b>	720 Hz (flicker-free)
<b>Video Refresh Rate</b>	60 Hz
<b>Viewing Angle</b>	140°
<b>Luminance</b>	4,800 NIT
<b>Color Wavelengths:</b>	
<b>Red</b>	622~627 nm
<b>Green</b>	520~525 nm
<b>Blue</b>	465~470 nm
<b>Power Supply Type</b>	Switching
<b>AC Voltage Range</b>	100~240 VAC, 50/60 Hz
<b>Voltage Selection</b>	Auto-ranging
<b>Power Consumption 120 V, 60 Hz</b>	231 W; 1.92 A
<b>Power Consumption 208 V, 60 Hz</b>	238 W; 1.17 A
<b>Power Consumption 230 V, 50 Hz</b>	247 W; 1.12 A
<b>Power Linking @ 120 V, 60 Hz</b>	9 units
<b>Power Linking @ 208 V, 60 Hz</b>	15 units
<b>Power Linking @ 230 V, 50 Hz</b>	16 units
<b>Dimensions</b>	23.6 x 23.6 x 2.6 in (600 x 600 x 66 mm)
<b>Weight</b>	27 lbs (12.25 kg)
<b>Transparency</b>	12.5%
<b>Mounting Design</b>	Modular (horizontal and vertical)
<b>Housing Material</b>	Aluminum alloy
<b>Power Connection</b>	Neutrik® powerCON®
<b>Control Connection</b>	Neutrik® etherCON®

---

## Contact Us World Headquarters

CHAUVENT®

### General Information

Address: 5200 NW 108th Avenue  
Sunrise, FL 33351  
Voice: (954) 929-1115  
Fax: (954) 929-5560  
Toll free: (800) 762-1084

### Technical Support

Voice: (954) 929-1115 (Press 4)  
Fax: (954) 756-8015  
Email: [tech@chauvetlighting.com](mailto:tech@chauvetlighting.com)

**World Wide Web**  
[www.chauvetlighting.com](http://www.chauvetlighting.com)

## United Kingdom and Ireland

CHAUVENT® Europe Ltd.

### General Information

Address: Unit 1C  
Brookhill Road Industrial Estate  
Pinxton, Nottingham, UK  
NG16 6NT  
Voice: +44 (0)1773 511115  
Fax: +44 (0)1773 511110

### Technical Support

Email: [uktech@chauvetlighting.com](mailto:uktech@chauvetlighting.com)

**World Wide Web**  
[www.chauvetlighting.co.uk](http://www.chauvetlighting.co.uk)

**RoHS**

