

Nokia Customer Care

Service Manual

RM-188; RM-198 (Nokia 6085; Nokia 6086)

Mobile Terminal

Part No: 9254881 (Issue 2)

COMPANY CONFIDENTIAL

NOKIA

Copyright © 2007 Nokia. All rights reserved.

Amendment Record Sheet

Amendment No	Date	Inserted By	Comments
Issue 1	10/2006	ET	
Issue 2	02/2007	ET	Added the RM-188 information.

Copyright

Copyright © 2007 Nokia. All rights reserved.

Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of Nokia is prohibited.

Nokia, Nokia Connecting People, and Nokia X and Y are trademarks or registered trademarks of Nokia Corporation. Other product and company names mentioned herein may be trademarks or tradenames of their respective owners.

Nokia operates a policy of continuous development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice.

Under no circumstances shall Nokia be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. Nokia reserves the right to revise this document or withdraw it at any time without prior notice.

The availability of particular products may vary by region.

IMPORTANT

This document is intended for use by qualified service personnel only.

Warnings and cautions

Warnings

- IF THE DEVICE CAN BE INSTALLED IN A VEHICLE, CARE MUST BE TAKEN ON INSTALLATION IN VEHICLES FITTED WITH ELECTRONIC ENGINE MANAGEMENT SYSTEMS AND ANTI-SKID BRAKING SYSTEMS. UNDER CERTAIN FAULT CONDITIONS, EMITTED RF ENERGY CAN AFFECT THEIR OPERATION. IF NECESSARY, CONSULT THE VEHICLE DEALER/MANUFACTURER TO DETERMINE THE IMMUNITY OF VEHICLE ELECTRONIC SYSTEMS TO RF ENERGY.
- THE PRODUCT MUST NOT BE OPERATED IN AREAS LIKELY TO CONTAIN POTENTIALLY EXPLOSIVE ATMOSPHERES, FOR EXAMPLE, PETROL STATIONS (SERVICE STATIONS), BLASTING AREAS ETC.
- OPERATION OF ANY RADIO TRANSMITTING EQUIPMENT, INCLUDING CELLULAR TELEPHONES, MAY INTERFERE WITH THE FUNCTIONALITY OF INADEQUATELY PROTECTED MEDICAL DEVICES. CONSULT A PHYSICIAN OR THE MANUFACTURER OF THE MEDICAL DEVICE IF YOU HAVE ANY QUESTIONS. OTHER ELECTRONIC EQUIPMENT MAY ALSO BE SUBJECT TO INTERFERENCE.
- BEFORE MAKING ANY TEST CONNECTIONS, MAKE SURE YOU HAVE SWITCHED OFF ALL EQUIPMENT.

Cautions

- Servicing and alignment must be undertaken by qualified personnel only.
- Ensure all work is carried out at an anti-static workstation and that an anti-static wrist strap is worn.
- Ensure solder, wire, or foreign matter does not enter the telephone as damage may result.
- Use only approved components as specified in the parts list.
- Ensure all components, modules, screws and insulators are correctly re-fitted after servicing and alignment.
- Ensure all cables and wires are repositioned correctly.
- During testing never activate the GSM transmitter without a proper antenna load, otherwise GSM PA may be damaged.

ESD protection

Nokia requires that service points have sufficient ESD protection (against static electricity) when servicing the phone.

Any product of which the covers are removed must be handled with ESD protection. The SIM card can be replaced without ESD protection if the product is otherwise ready for use.

To replace the covers ESD protection must be applied.

All electronic parts of the product are susceptible to ESD. Resistors, too, can be damaged by static electricity discharge.

All ESD sensitive parts must be packed in metallized protective bags during shipping and handling outside any ESD Protected Area (EPA).

Every repair action involving opening the product or handling the product components must be done under ESD protection.

ESD protected spare part packages **MUST NOT** be opened/closed out of an ESD Protected Area.

For more information and local requirements about ESD protection and ESD Protected Area, contact your local Nokia After Market Services representative.

Care and maintenance

This product is of superior design and craftsmanship and should be treated with care. The suggestions below will help you to fulfil any warranty obligations and to enjoy this product for many years.

- Keep the phone and all its parts and accessories out of the reach of small children.
- Keep the phone dry. Precipitation, humidity and all types of liquids or moisture can contain minerals that will corrode electronic circuits.
- Do not use or store the phone in dusty, dirty areas. Its moving parts can be damaged.
- Do not store the phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the phone in cold areas. When it warms up (to its normal temperature), moisture can form inside, which may damage electronic circuit boards.
- Do not drop, knock or shake the phone. Rough handling can break internal circuit boards.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the phone.
- Do not paint the phone. Paint can clog the moving parts and prevent proper operation.
- Use only the supplied or an approved replacement antenna. Unauthorised antennas, modifications or attachments could damage the phone and may violate regulations governing radio devices.

All of the above suggestions apply equally to the product, battery, charger or any accessory.

Company Policy

Our policy is of continuous development; details of all technical modifications will be included with service bulletins.

While every endeavour has been made to ensure the accuracy of this document, some errors may exist. If any errors are found by the reader, NOKIA MOBILE PHONES Business Group should be notified in writing/e-mail.

Please state:

- Title of the Document + Issue Number/Date of publication
- Latest Amendment Number (if applicable)
- Page(s) and/or Figure(s) in error

Please send to:

NOKIA CORPORATION

Nokia Mobile Phones Business Group

Nokia Customer Care

PO Box 86

FIN-24101 SALO

Finland

E-mail: Service.Manuals@nokia.com

Battery information

Note: A new battery's full performance is achieved only after two or three complete charge and discharge cycles!

The battery can be charged and discharged hundreds of times but it will eventually wear out. When the operating time (talk-time and standby time) is noticeably shorter than normal, it is time to buy a new battery.

Use only batteries approved by the phone manufacturer and recharge the battery only with the chargers approved by the manufacturer. Unplug the charger when not in use. Do not leave the battery connected to a charger for longer than a week, since overcharging may shorten its lifetime. If left unused a fully charged battery will discharge itself over time.

Temperature extremes can affect the ability of your battery to charge.

For good operation times with Ni-Cd/NiMh batteries, discharge the battery from time to time by leaving the product switched on until it turns itself off (or by using the battery discharge facility of any approved accessory available for the product). Do not attempt to discharge the battery by any other means.

Use the battery only for its intended purpose.

Never use any charger or battery which is damaged.

Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object (coin, clip or pen) causes direct connection of the + and - terminals of the battery (metal strips on the battery) for example when you carry a spare battery in your pocket or purse. Short-circuiting the terminals may damage the battery or the connecting object.

Leaving the battery in hot or cold places, such as in a closed car in summer or winter conditions, will reduce the capacity and lifetime of the battery. Always try to keep the battery between 15°C and 25°C (59°F and 77°F). A phone with a hot or cold battery may temporarily not work, even when the battery is fully charged. Batteries' performance is particularly limited in temperatures well below freezing.

Do not dispose of batteries in a fire!

Dispose of batteries according to local regulations (e.g. recycling). Do not dispose as household waste.

Nokia 6085; Nokia 6086 Service Manual Structure

- 1 General Information
- 2 Parts Lists and Component Layouts
- 3 Service Software Instructions
- 4 Service Tools and Service Concepts
- 5 Disassembly / Reassembly Instructions
- 6 BB Troubleshooting and Manual Tuning Guide
- 7 RF Troubleshooting and Manual Tuning Guide
- 8 System Module
- 9 RM-188/198 schematics
- Glossary

(This page left intentionally blank.)

Nokia Customer Care

1 — General Information

(This page left intentionally blank.)

Table of Contents

RM-188/198 product selection	1-5
RM-188/198 product features and sales package	1-5
Product and module list	1-7
Mobile enhancements	1-7
Technical specifications	1-9
Transceiver general specifications	1-9
Main RF characteristics for GSM850/900/1800/1900 (quadband) and EDGE phones	1-9
Battery endurance	1-10
Environmental conditions	1-10

List of Tables

Table 1 RM-188/198	1-7
Table 2 Audio	1-7
Table 3 Battery and chargers	1-8
Table 4 Car	1-8
Table 5 Carrying	1-8
Table 6 Data	1-8
Table 7 Music	1-9

List of Figures

Figure 1 View of RM-188/198	1-5
-----------------------------------	-----

(This page left intentionally blank.)

■ RM-188/198 product selection

Nokia RM-188/198 supports 850/900/1800/1900 MHz bands. RM-188/198 will support EGPRS packet data connection (EDGE) in all these bands. Supported multislots for both GPRS and EGPRS is MSC 10. RM-188/198 is based on G3.1S, RAP GSM engine.

Note: The RM-188 also supports WLAN 802.11 b/g 2.4 Ghz for UMA (Unlicensed Mobile Access), with automatic switching between WLAN and cellular networks.

According to GSM standard 05.05, it responds to class 4 (max. 2W) in EGSM 900, class 1 (1W) in GSM 1800 and class 1 in GSM 1900. It also supports Bluetooth 2.0 + EDR standard. The handset has a full phase 2 Type Approval and it complies with the GSM Type Approval. RM-188/198 also has a full CE approval and FCC approval.

The main handset display is a 1.8" CSTN passive LCD display that supports up to 262,144 colors (128 x 160 pixels). The mini cover display is a 1" FSTN black-and-white screen with blue LEDs (96 x 68 pixels). The device also has a VGA camera with a 4x digital post zoom.

RM-188/198 has a FM stereo radio and music player, and it supports microSD card with hotswap possibility.

The MMS implementation follows the OMA MMS 1.2, AMR and SMIL.

WAP 2.0 compatible XHTML browser over HTTP/TCP/IP stack communicates with a gateway in network.

The supported user interface is S40, that is, RM-188/198 software is based on ISA platform.



Figure 1 View of RM-188/198

■ RM-188/198 product features and sales package

Imaging

- VGA camera (resolution 648 X 488 pixels) with dedicated camera button, and 4x digital zoom
- Phone main display used as viewfinder: use to take normal pictures and videos.

- Standard, night, and sequential shot modes; self-timer
- Gallery for storing and editing images
- Three image-quality options: high, normal, basic
- Integrated video recorder: 3GPP spec (H.263 video and AMR audio packed in .3gp format)
- Video resolution: QCIF (176 x 144 Pixel), 15 frames per second
- Video capture time: Up to 5 min

Bearers & transport

- Quadband GSM/EDGE 850/900/1800/1900
- Automatic switching between bands

Software platform

- SW platform: Nokia Series 40

Connectivity

- WLAN 802.11 b/g 2.4 Ghz for UMA, with automatic switching between WLAN and cellular networks
Note: RM-188 only.

- USB 2.0 full-speed
- Bluetooth 2.0
- Pop-Port™ connector with ACI
- Support for SIM Access Profile (SAP)
- Remote or local synchronization with a PC or other compatible device

Productivity

- PIM (Calendar & Contacts)
- XHTML browser over TCP/IP
- Video streaming (3GPP)
- Logs (last calls , timers and history list)
- Audio messaging
- Java™ MIDP 2.0, CLDC 1.1.3D API, PIM API, File access API
- MP3
- Data Transfer
- Settings Wizard/Access Point Configurator

Sales package

- Transceiver RM-188/198
- Nokia BL-5C battery
- Nokia compact charger AC-3
- Nokia headset HS-5
- User guide and quick guide

■ **Product and module list**

Table 1 RM-188/198

Module name	Type code	Notes
Upper Module	1WJ	Connectors for display, UI PWB, HWA camera, and earpiece.
Lower Module	1VZ	Main PWB with components.
Flex Cable	1WK	The flex between the upper and lower module.

■ **Mobile enhancements**

Table 2 Audio

Enhancement	Type
Audio adapter	AD-46
Display headset	HS-69
Wired headset	HDB-4
	HS-23
	HS-3
	HS-31
	HS-5
	HS-8
Wireless headset	HDW-3
	HS-12W
	HS-13W
	HS-24W
	HS-25W
	HS-26W
	HS-34W
	HS-38W
	HS-39W
	HS-50W
	HS-51W
	HS-57W
	HS-58W
HS-59W	
HS-71W	

Table 3 Battery and chargers

Type	Name
Note: This phone is charged through the smaller Nokia standard interface (2.0 mm plug). The 3.5 mm standard charger can be used together with the CA-44 charger adapter.	
Battery 970 mAh Li-Ion	BL-5C
Charger adapter (from 3.5 mm -> 2 mm)	CA-44
Compact charger	AC-3
Travel charger	AC-4, AC-5

Table 4 Car

Enhancement	Type
Car kit	CK-1W
	CK-7Wi
	CK-20W
	N610
	N616
Car handsfree	BHF-3
	HF-3
	HF-33
	HF-6W
Microphone	MP-2
Mobile charger	DC-4
Mobile holder	CR-39
Mobile holder easy mount	HH-12

Table 5 Carrying

Enhancement	Type
Carrying case	CP-57
	CP-109
	CP-145

Table 6 Data

Enhancement	Type
Connectivity cable	CA-53
128 MB µSD card	MU-26

Enhancement	Type
256 MB μ SD card	MU-27
512 MB μ SD card	MU-28
1 GB μ SD card	MU-22

Table 7 Music

Enhancement	Type
Audio gateway	AD-42W
Mini speakers	MD-2
	MD-4

■ Technical specifications

Transceiver general specifications

Unit	Dimensions (L x W x T)	Weight (g)	Volume (cm ³)
Transceiver with BL-5C battery	92x46x23mm	84g (without battery)	84

Main RF characteristics for GSM850/900/1800/1900 (quadband) and EDGE phones

Parameter	Unit
Cellular system	GSM850, EGSM900, GSM1800/1900 and EDGE
Rx frequency band	GSM850: 869 - 890 MHz
	EGSM900: 925 - 960 MHz
	GSM1800: 1805 - 1880 MHz
	GSM1900: 1930 - 1990 MHz
Tx frequency band	GSM850: 824 - 849 MHz
	EGSM900: 880 - 915 MHz
	GSM1800: 1710 - 1785 MHz
	GSM1900: 1850 - 1910 MHz
Output power	GSM850: +5 ... +33dBm/3.2mW ... 2W
	GSM900: +5 ... +33dBm/3.2mW ... 2W
	GSM1800: +0 ... +30dBm/1.0mW ... 1W
	GSM1900: +0 ... +30dBm/1.0mW ... 1W

Parameter	Unit
EDGE output power	EDGE850: +5 ... +29dBm/3.2mW ... 2W
	EDGE900: +5 ... +29dBm/3.2mW ... 2W
	EDGE1800: +0 ... +26dBm/1.0mW ... 1W
	EDGE1900:+0 ... +26dBm/1.0mW ... 1W
Number of RF channels	GSM850: 124
	GSM900: 194
	GSM1800: 374
	GSM1900: 299
Channel spacing	200 kHz
Number of Tx power levels	GSM850: 15
	GSM900: 15
	GSM1800: 16
	GSM1900: 16
Number of EDGE Tx power levels	GSM850 EDGE: 12
	GSM900 EDGE: 12
	GSM1800 EDGE: 14
	GSM1900 EDGE: 14

Battery endurance

Battery	Capacity (mAh)	Talk time	Stand-by
BL-5C	970mAh	Pure GSM: up to 5h. UMA: up to 6h.	Pure GSM: up to 10 days. UMA: up to 4 days.

Charging times

AC-3
Up to 3hrs 30 mins

Environmental conditions

Environmental condition	Ambient temperature	Notes
Normal operation	-15°C...+55°C	Specifications fulfilled
Reduced performance	-25°C...-15°C +55°C...+70°C	Operational for shorts periods only
Intermittent operation	-40°C...-15°C +70°C...+85 °C	Operation not guaranteed but an attempt to operate does not damage the phone.

Environmental condition	Ambient temperature	Notes
No operation or storage	<-40°C...>+85°C	No storage or operation: an attempt may damage the phone.
Charging allowed	-25°C...+50°C	
Long term storage conditions	0°C...+85°C	

(This page left intentionally blank.)

2 — Parts Lists and Component Layouts

(This page left intentionally blank.)

Table of Contents


Exploded view.....	2-5
Exploded view	2-5
General recycling recommendation	2-6
Mechanical spare parts overview	2-6
Parts lists.....	2-7
RM-188 mechanical spare parts list.....	2-7
RM-198 mechanical spare parts list.....	2-10
Lower (engine) block.....	2-12
RM-188 lower block component parts list (1VZ_12d)	2-12
RM-198 lower block component parts list (1VZ_12b)	2-32
Upper block.....	2-50
RM-188/198 upper block component parts list (1WJ_10b)	2-50
RM-198 upper block component parts list with HAC (1WJ_10c)	2-52
Component layouts.....	2-54
Lower (engine) block.....	2-54
RM-188 lower block component layout - top (1VZ_12d)	2-54
RM-188 lower block component layout - bottom (1VZ_12d)	2-54
RM-198 lower block component layout - top (1VZ_12b)	2-56
RM-198 lower block component layout - bottom (1VZ_12b)	2-57
Upper block.....	2-58
RM-188/198 upper block component layout - top (1WJ_10b)	2-58
RM-188/198 upper block component layout - bottom (1WJ_10b)	2-59
RM-198 upper block component layout with HAC - top (1WJ_10c)	2-60
RM-198 upper block component layout with HAC - bottom (1WJ_10c)	2-61

(This page left intentionally blank.)

■ Exploded view

Exploded view

6085 RM-198 / 6086 RM-188 Exploded view

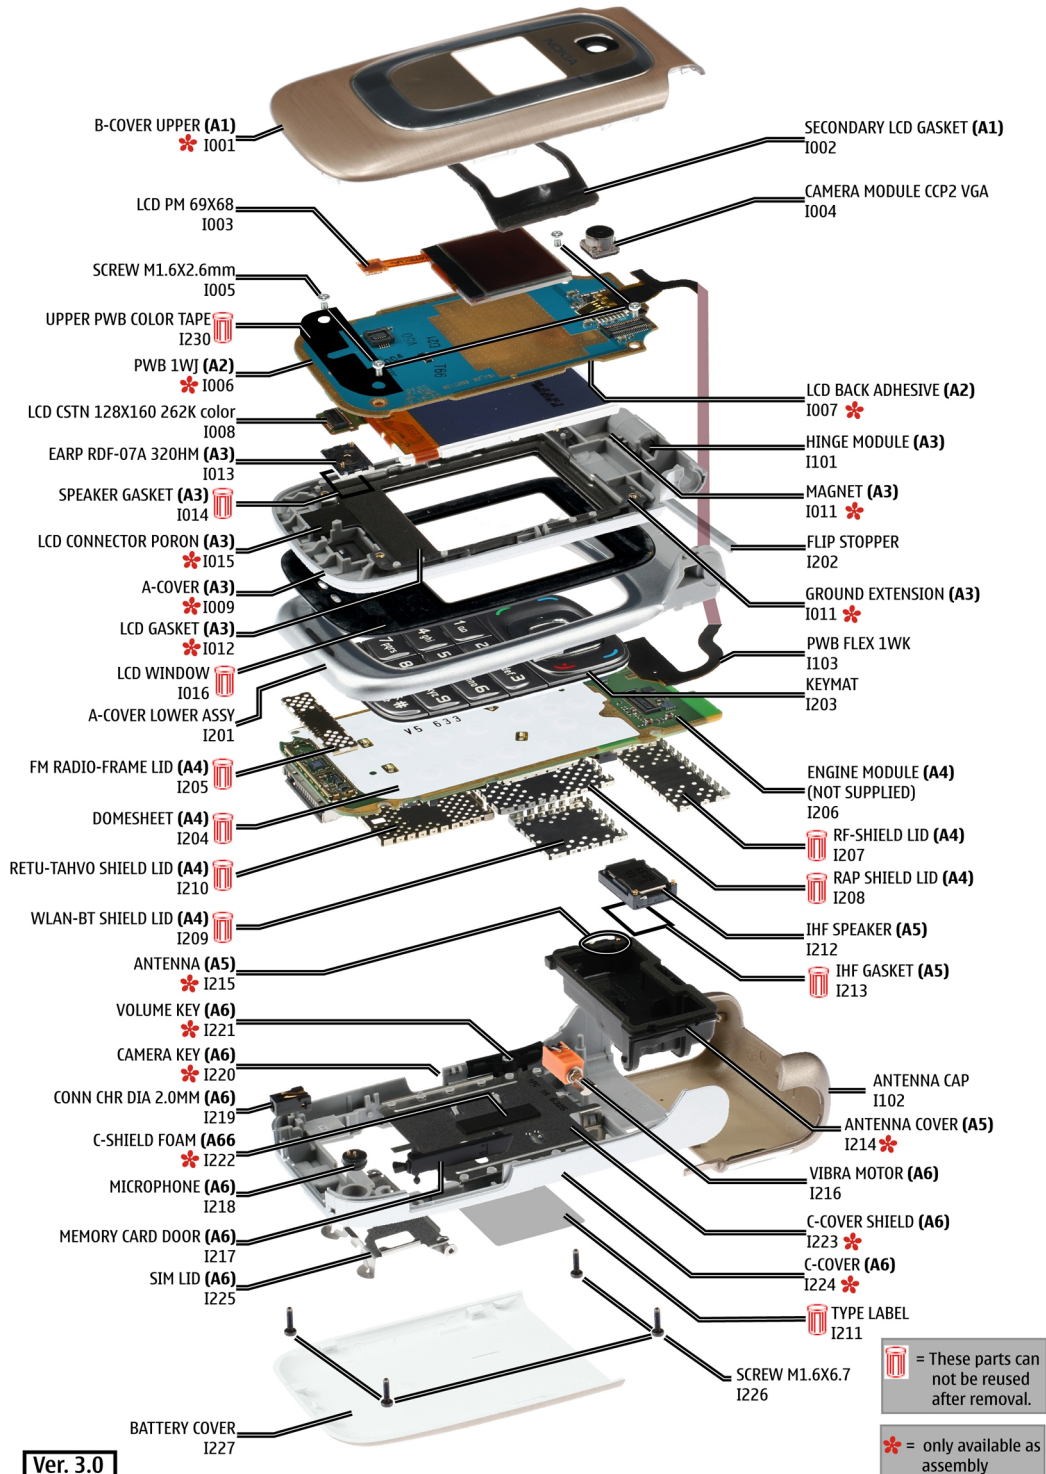

General recycling recommendation

General Recycling recommendation

100% - only one Material
(Example components)

METAL

PLASTIC

Mixed components
(Example components)

ELECTRO-MIX

ELECTRO-MIX: Most components made of Glass, Ceramics, Glassfiberreinforced epoxy.
ALL fractions containing any copper should send to ELECTRO-MIX!!!

METAL - MIX

METAL-MIX: Most components made of Metal

BATTERY

BATTERY: Chemicals, Plastic and Ceramics

PLASTIC-MIX

PLASTIC-MIX: Most components made of Plastic


Some of these options can be utilized directly and some need pretreatment as for instance dismantling, grinding, milling, etc.
For sorting the waste into fractions for recycling, your recycler will offer you more specific information, but a **GENERAL RULE** is:
Electronic Equipment: There are recyclers that can process this "multimaterial" for high recycling yields.
Metals: Fractions containing metals must always be collected and sent for (metal) material recycling.
Plastics: Pure plastics fractions (i.e. covers) can be sent for (plastics) materials recycling.
Mixed Plastic/Metals: A metal fraction contaminated with plastics does not represent a problem for metal recycling/recovery whereas recycling/recovery of plastics is generally sensitive for contamination by other materials.

● ELECTRO ● METAL ● PLASTIC ● BATTERY

Ver. 3.0

Mechanical spare parts overview

6085 RM-198 / 6086 RM-188 Spare Parts over view

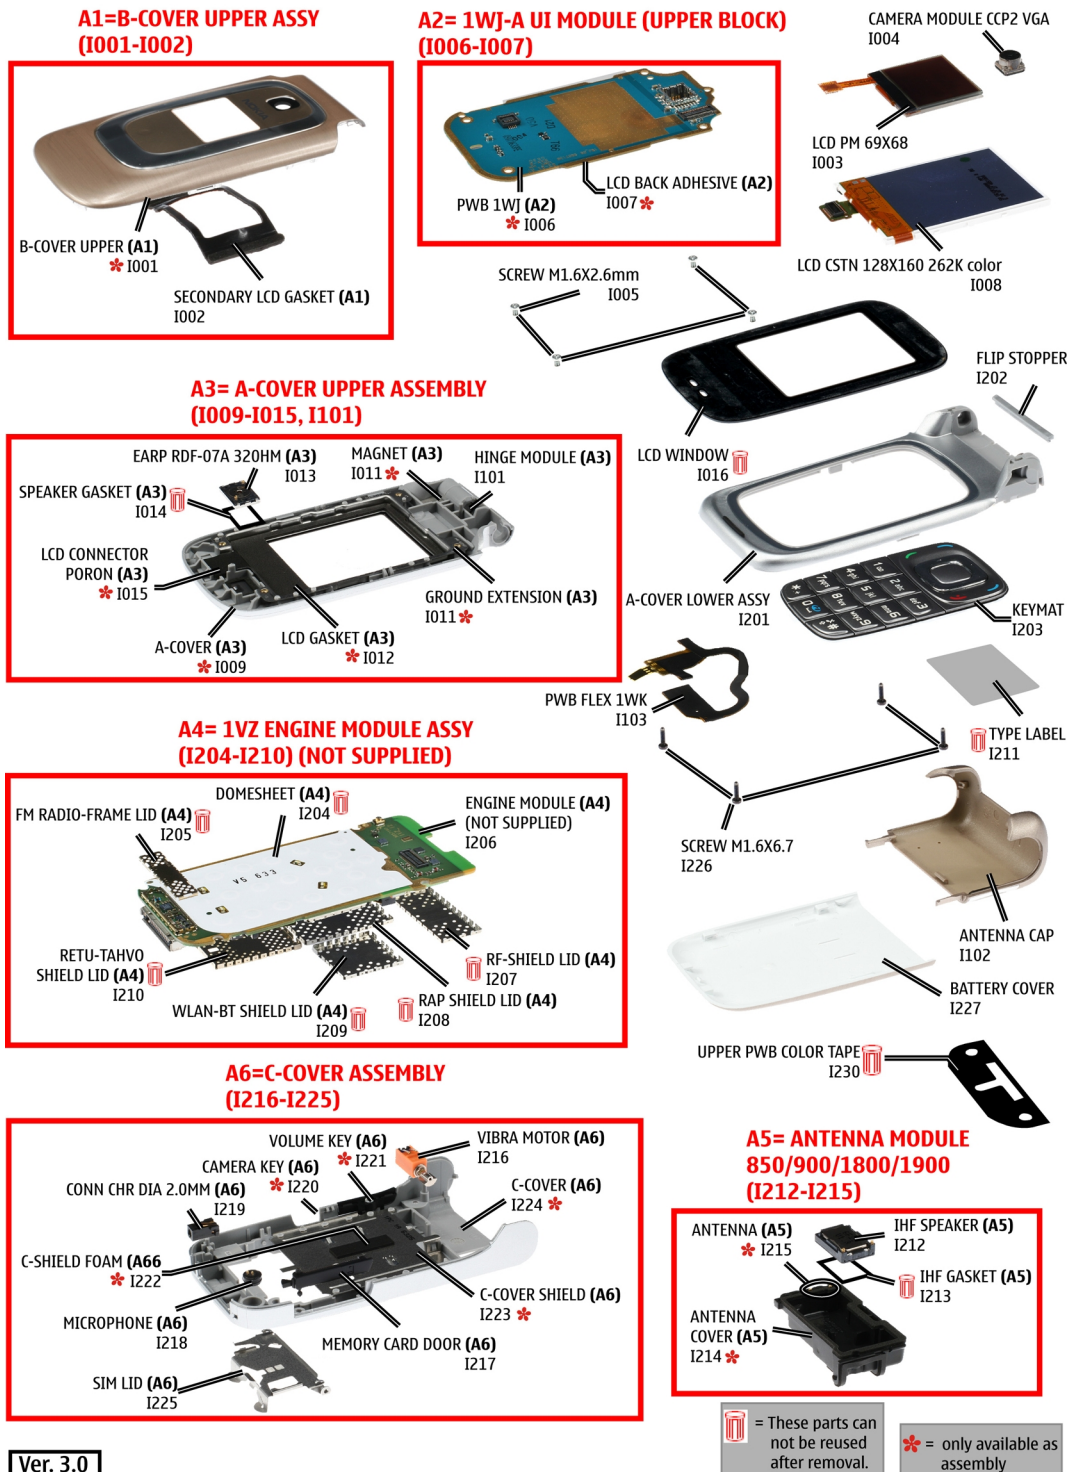

Ver. 3.0

Parts lists

RM-188 mechanical spare parts list

Note: For Nokia product codes, please refer to the latest Service Bulletins on the Partner Website (PWS).

To ensure you are always using the latest codes, please check the PWS on a daily basis.

Ax and in bold = ASSY

"-" = NOT AVAILABLE

"XXXXXXX" = VARIANTS

"???????" = Code available in Bulletin

I0xx = ITEM codes for upper or mono block

I1xx = ITEM codes for hinge block

I2xx = ITEM codes for lower block

I3xx = ITEM codes for soldered spare parts on the upper, hinge or lower block and not exchangeable

ITEM/ CIRCUIT REF.	QTY	SPARE PART DESCRIPTION	NOTE	ACTIVITY	LEVEL
A1	1	B-COVER UPPER ASSY (I001 - I002)		-	1
I001	1	B-COVER		MR	-
I002	1	SECONDARY LCD GASKET	Cannot be reused when removed	MR	1
I003	1	LCD PM 69X68		MR	1
I004	1	CAMERA MODULE CCP2 VGA		MR	1
I005	4	SCREWS M1,6 x 2,6mm		MR	1
A2	1	1WJ-A UI MODULE (UPPER BLOCK) (I006 - I007)		-	1
I006	1	PWB 1WJ		MR	-
I007	1	LCD BACK ADHESIVE		MR	-
I008	1	LCD CSTN 128x160 262Kcolor		MR	1
A3	1	A-COVER UPPER ASSEMBLY (I009 - I015, I101)		-	1
I009	1	A-COVER		MR	-
I010	1	MAGNET		MR	-
I011	1	GROUND EXTENSION		MR	-
I101	1	HINGE MODULE		MR	1
I012	1	LCD GASKET		MR	-
I013	1	EARP RDF-07A 320HM		MR	1
I014	1	SPEAKER GASKET	Cannot be reused when removed	MR	1
I015	1	LCD CONNECTOR PORON		MR	-
I016	1	LCD WINDOW	Cannot be reused when removed	MR	1

ITEM/ CIRCUIT REF.	QTY	SPARE PART DESCRIPTION	NOTE	ACTIVITY	LEVEL
I102		ANTENNA CAP		MR	1
I103	1	PWB FLEX 1WK		MR	1
I201	1	A-COVER LOWER ASSY		MR	1
I202	1	FLIP STOPPER		MR	1
I203	1	KEYMAT		MR	1
A4	1	1VZ ENGINE MODULE ASSY (I204 - I210)		-	-
I204	1	DOME SHEET	Cannot be reused when removed	MR	1
I205	1	FM RADIO-FRAME LID	Cannot be reused when removed	MR	1
I206	1	ENGINE MODULE		MR	-
I207	1	RF-SHIELD LID	Cannot be reused when removed	MR	1
I208	1	RAP SHIELD LID	Cannot be reused when removed	MR	1
I209	1	WLAN-BT SHIELD LID	Cannot be reused when removed	MR	1
I210	1	RETU-TAHVO SHIELD LID	Cannot be reused when removed	MR	1
I211	1	TYPE LABEL	Cannot be reused when removed	MR	3
A5	1	ANTENNA MODULE 850/900/1800/1900 (I212 - I215)		-	1
I212	1	IHF SPEAKER		MR	1
I213	1	IHF GASKET	Cannot be reused when removed	MR	1
I214	1	ANTENNA COVER		MR	-
I215	1	ANTENNA		MR	-
A6	1	C-COVER ASSEMBLY (I216 - I225)		-	3
I216	1	VIBRA MOTOR		MR	1
I217	1	MEMORY CARD DOOR		MR	1
I218	1	MICROPHONE		MR	1
I219	1	CONN CHR DIA 2.0MM		MR	1

ITEM/ CIRCUIT REF.	QTY	SPARE PART DESCRIPTION	NOTE	ACTIVITY	LEVEL
I220	1	CAMERA KEY		MR	-
I221	1	VOLUME KEY		MR	-
I222	1	C-SHIELD FOAM		MR	-
I223	1	C-COVER SHIELD		MR	-
I224	1	C-COVER		MR	-
I225	1	SIM LID		MR	1
I226	4	SCREW M1.6X6.7	Cannot be reused when removed	MR	1
I227	1	BATTERY COVER		MO	1
I230	1	UPPER PWB COLOR TAPE	Cannot be reused when removed	MR	1

RM-198 mechanical spare parts list

Note: For Nokia product codes, please refer to the latest Service Bulletins on the Partner Website (PWS).

To ensure you are always using the latest codes, please check the PWS on a daily basis.

Ax and in bold = ASSY

"-" = NOT AVAILABLE

"XXXXXXX" = VARIANTS

"???????" = Code available in Bulletin

I0xx = ITEM codes for upper or mono block

I1xx = ITEM codes for hinge block

I2xx = ITEM codes for lower block

I3xx = ITEM codes for soldered spare parts on the upper, hinge or lower block and not exchangeable

ITEM/ CIRCUIT REF.	QTY	SPARE PART DESCRIPTION	NOTE	ACTIVITY	LEVEL
A1	1	B-COVER UPPER ASSY (I001 - I002)		-	1
I001	1	B-COVER		MR	-
I002	1	SECONDARY LCD GASKET	Cannot be reused when removed	MR	1
I003	1	LCD PM 69X68		MR	1
I004	1	CAMERA MODULE CCP2 VGA		MR	1
I005	4	SCREWS M1,6 x 2,6mm		MR	1
A2	1	1WJ-A UI MODULE (UPPER BLOCK) (I006 - I007)		-	1
I006	1	PWB 1WJ		MR	-

ITEM/ CIRCUIT REF.	QTY	SPARE PART DESCRIPTION	NOTE	ACTIVITY	LEVEL
I007	1	LCD BACK ADHESIVE		MR	-
I008	1	LCD CSTN 128x160 262Kcolor		MR	1
A3	1	A-COVER UPPER ASSEMBLY (I009 - I015, I101)		-	1
I009	1	A-COVER		MR	-
I010	1	MAGNET		MR	-
I011	1	GROUND EXTENSION		MR	-
I101	1	HINGE MODULE		MR	1
I012	1	LCD GASKET		MR	-
I013	1	EARP RDF-07A 320HM		MR	1
I014	1	SPEAKER GASKET	Cannot be reused when removed	MR	1
I015	1	LCD CONNECTOR PORON		MR	-
I016	1	LCD WINDOW	Cannot be reused when removed	MR	1
I102		ANTENNA CAP		MR	1
I103	1	PWB FLEX 1WK		MR	1
I201	1	A-COVER LOWER ASSY		MR	1
I202	1	FLIP STOPPER		MR	1
I203	1	KEYMAT		MR	1
A4	1	1VZ ENGINE MODULE ASSY (I204 - I210)		-	-
I204	1	DOME SHEET	Cannot be reused when removed	MR	1
I205	1	FM RADIO-FRAME LID	Cannot be reused when removed	MR	1
I206	1	ENGINE MODULE		MR	-
I207	1	RF-SHIELD LID	Cannot be reused when removed	MR	1
I208	1	RAP SHIELD LID	Cannot be reused when removed	MR	1
I209	1	WLAN-BT SHIELD LID	Cannot be reused when removed	MR	1
I210	1	RETU-TAHVO SHIELD LID	Cannot be reused when removed	MR	1

ITEM/ CIRCUIT REF.	QTY	SPARE PART DESCRIPTION	NOTE	ACTIVITY	LEVEL
I211	1	TYPE LABEL	Cannot be reused when removed	MR	3
A5	1	ANTENNA MODULE 850/900/1800/1900 (I212 - I215)		-	1
I212	1	IHF SPEAKER		MR	1
I213	1	IHF GASKET	Cannot be reused when removed	MR	1
I214	1	ANTENNA COVER		MR	-
I215	1	ANTENNA		MR	-
A6	1	C-COVER ASSEMBLY (I216 - I225)		-	3
I216	1	VIBRA MOTOR		MR	1
I217	1	MEMORY CARD DOOR		MR	1
I218	1	MICROPHONE		MR	1
I219	1	CONN CHR DIA 2.0MM		MR	1
I220	1	CAMERA KEY		MR	-
I221	1	VOLUME KEY		MR	-
I222	1	C-SHIELD FOAM		MR	-
I223	1	C-COVER SHIELD		MR	-
I224	1	C-COVER		MR	-
I225	1	SIM LID		MR	1
I226	4	SCREW M1.6X6.7	Cannot be reused when removed	MR	1
I227	1	BATTERY COVER		MO	1
I230	1	UPPER PWB COLOR TAPE	Cannot be reused when removed	MR	1

Lower (engine) block

RM-188 lower block component parts list (1VZ_12d)

Item	Side	Grid		Description and value			
A2000	Top	I	6	SHIELD_040_0 27333	RAP SHIELD ASSY P3046	~	~
A2100	Top	D	1	1WN_RIGID	PWB RIGID 1WN 11.9X2.5X2.1 D2	~	~

Item	Side	Grid		Description and value			
A2102	Top	E	7	PWB_1QD	PWB 1QD 10X4.6X1.5	~	~
A2400	Top	N	6	SHIELD_040_0 13002	RETU-TAHVO AHIELD ASSEMBLY	~	~
A6000	Top	J	3	SHIELD_040_0 27328	WLAN-BT SHIELD ASSY P3046	~	~
A6100	Bottom	R	5	SHIELD_040_0 08558	FM RADIO ASSY 040-008558 P2348	~	~
A7000	Top	C	5	SHIELD_040_0 13089	RF SHIELD ASSEMBLY WITH TAPE P3046	~	~
B2200	Top	P	6	CRYSTAL_3.3X 1.6_H0.9	CRYSTAL 32.768KHZ +-30PPM 12.5PF	32.768kHz	~
C2000	Top	N	8	0402C	Chipcap 5% NP0	27p	50V
C2002	Bottom	R	4	0603C	CHIPCAP X5R 2U2 K 6V3 0603	2u2	6V3
C2003	Bottom	R	4	0402C	CHIPCAP X7R 33N K 10V 0402	33n	10V
C2004	Bottom	R	4	0402C	CHIPCAP X7R 33N K 10V 0402	33n	10V
C2005	Bottom	R	3	0402C	Chipcap X7R 10% 16V 0402	10n	16V
C2006	Bottom	R	3	0402C	Chipcap X7R 10% 16V 0402	10n	16V
C2007	Top	Q	2	0402C	Chipcap X7R 10% 16V 0402	10n	16V
C2008	Top	Q	3	0402C	Chipcap X7R 10% 16V 0402	10n	16V
C2009	Top	Q	3	0402C	Chipcap X7R 10% 16V 0402	10n	16V
C2010	Top	Q	3	0402C	Chipcap X7R 10% 16V 0402	10n	16V
C2011	Bottom	R	3	0402C	Chipcap 5% NP0	10p	50V
C2012	Bottom	R	3	0402C	Chipcap 5% NP0	10p	50V
C2013	Bottom	R	3	0402C	Chipcap 5% NP0	10p	50V
C2014	Bottom	R	3	0402C	Chipcap 5% NP0	10p	50V
C2015	Top	Q	4	0402C	CHIPCAP NP0 220P J 25V 0402	220p	25V

Item	Side	Grid		Description and value			
C2016	Top	P	8	0603C_H0.95	CHIPCAP X5R 470N K 25V 0603	470n	25V
C2071	Top	G	3	0402C	Chipcap 5% NPO	27p	50V
C2072	Top	P	2	0402C	Chipcap 5% NPO	27p	50V
C2073	Top	E	5	TANT_C_6.2X3. 4_H1.7	CHIPTCAP 150U M 10V 6X3.2X1.5	150u_10V	10V
C2074	Top	F	2	0402C	Chipcap 5% NPO	10p	50V
C2100	Top	Q	2	0402C	CHIPCAP X7R 33N K 10V 0402	33n	10V
C2101	Top	Q	2	0402C	CHIPCAP X7R 33N K 10V 0402	33n	10V
C2102	Top	Q	2	0603C	CHIPCAP X5R 2U2 K 6V3 0603	2u2	6V3
C2103	Top	E	8	0402C	Chipcap 5% NPO	10p	50V
C2104	Top	E	8	0402C	Chipcap 5% NPO	10p	50V
C2105	Bottom	D	2	0402C	Chipcap 5% NPO	27p	50V
C2106	Bottom	C	2	0402C	Chipcap 5% NPO	27p	50V
C2200	Top	O	5	0603C	CHIPCAP X5R 1U K 6V3 0603	1u0	6.3V
C2201	Top	P	7	0603C	CHIPCAP X5R 1U K 6V3 0603	1u0	6.3V
C2202	Top	P	8	0402C	Chipcap X7R 10% 50V 0402	1n0	50V
C2203	Top	P	6	0402C	Chipcap X7R 10% 50V 0402	1n0	50V
C2204	Top	P	6	0402C	Chipcap X7R 10% 50V 0402	1n0	50V
C2205	Top	P	5	0402C	Chipcap X7R 10% 50V 0402	1n0	50V
C2206	Top	P	6	0402C	Chipcap X7R 10% 50V 0402	1n0	50V
C2207	Top	P	7	0402C	Chipcap X7R 10% 50V 0402	1n0	50V
C2208	Top	Q	6	0402C	Chipcap 5% NPO	27p	50V
C2209	Top	Q	6	0402C	Chipcap 5% NPO	22p	50V
C2210	Top	N	7	0603C	CHIPCAP X5R 1U K 16V 0603	1u0	16V
C2211	Top	N	7	0805C	CHIPCAP X5R 4U7 K 10V 0805	4u7	10V

Item	Side	Grid		Description and value			
C2212	Top	N	6	0402C	CHIPCAP X5R 1U5 K 4V 0402	1u5	4V
C2213	Top	0	7	0402C	CHIPCAP X5R 1U5 K 4V 0402	1u5	4V
C2214	Top	0	7	0402C	CHIPCAP X5R 1U5 K 4V 0402	1u5	4V
C2215	Top	0	7	0402C	CHIPCAP X5R 1U5 K 4V 0402	1u5	4V
C2216	Top	0	7	0402C	CHIPCAP X5R 1U5 K 4V 0402	1u5	4V
C2217	Top	P	7	0402C	CHIPCAP X5R 1U5 K 4V 0402	1u5	4V
C2218	Top	P	6	0402C	Chipcap X7R 10% 50V 0402	1n0	50V
C2219	Top	P	7	0402C	CHIPCAP X5R 1U5 K 4V 0402	1u5	4V
C2220	Top	N	6	0402C	CHIPCAP X5R 1U5 K 4V 0402	1u5	4V
C2221	Top	N	8	0603C	CHIPCAP X5R 1U K 6V3 0603	1u0	6.3V
C2222	Top	N	7	0603C	CHIPCAP X5R 1U K 6V3 0603	1u0	6.3V
C2223	Top	0	5	0402C	Chipcap X7R 10% 16V 0402	10n	16V
C2224	Top	P	5	0402C	Chipcap X7R 10% 16V 0402	10n	16V
C2225	Top	P	7	0603C	CHIPCAP X5R 1U K 6V3 0603	1u0	6.3V
C2226	Top	0	7	0603C	CHIPCAP X5R 1U K 6V3 0603	1u0	6.3V
C2227	Top	N	6	0603C	CHIPCAP X5R 1U K 6V3 0603	1u0	6.3V
C2228	Top	0	7	0603C	CHIPCAP X5R 1U K 6V3 0603	1u0	6.3V
C2230	Top	P	7	0603C	CHIPCAP X5R 1U K 6V3 0603	1u0	6.3V
C2231	Top	N	5	0603C	CHIPCAP X5R 10UF 6V3 0603	10u	4V
C2232	Top	0	7	0603C	CHIPCAP X5R 1U K 6V3 0603	1u0	6.3V

Item	Side	Grid		Description and value			
C2233	Top	G	4	0603C	CHIPCAP X5R 10UF 6V3 0603	10u	4V
C2270	Top	O	5	0402C	Chipcap X7R 10% 50V 0402	1n0	50V
C2271	Top	O	5	0402C	Chipcap X7R 10% 50V 0402	1n0	50V
C2272	Top	O	5	0402C	Chipcap X7R 10% 50V 0402	1n0	50V
C2273	Top	N	6	0402C	Chipcap X7R 10% 50V 0402	1n0	50V
C2274	Top	N	6	0402C	Chipcap 5% NP0	27p	50V
C2275	Top	N	5	0402C	Chipcap 5% NP0	27p	50V
C2281	Top	O	8	0603C	CHIPCAP X5R 1U K 6V3 0603	1u0	6.3V
C2300	Top	M	5	0402C	Chipcap X7R 10% 16V 0402	10n	16V
C2301	Top	L	5	0805C	CHIPCAP X5R 22U M 6V3 0805	22u	6V3
C2302	Top	N	5	0805C	CHIPCAP X5R 22U M 6V3 0805	22u	6V3
C2303	Top	L	7	0603C	CHIPCAP X5R 1U K 6V3 0603	1u0	6.3V
C2304	Top	N	6	0402C	Chipcap X7R 10% 16V 0402	10n	16V
C2305	Top	L	8	0603C	CHIPCAP X5R 1U K 6V3 0603	1u0	6.3V
C2306	Top	M	4	0603C	CHIPCAP X5R 1U K 6V3 0603	1u0	6.3V
C2307	Top	L	6	0603C	CHIPCAP X5R 1U K 6V3 0603	1u0	6.3V
C2309	Top	L	5	0805C	CHIPCAP X5R 22U M 6V3 0805	22u	6V3
C2310	Top	L	6	0603C	CHIPCAP X5R 10UF 6V3 0603	10u	4V
C2312	Top	L	6	0603C	CHIPCAP X5R 1U K 6V3 0603	1u0	6.3V
C2313	Top	L	7	0603C	CHIPCAP X5R 1U K 6V3 0603	1u0	6.3V
C2314	Top	M	7	0805C	CHIPCAP X5R 4U7 K 10V 0805	4u7	10V

Item	Side	Grid		Description and value			
C2315	Top	N	8	0805C	CHIPCAP X5R 4U7 M 25V 0805	4u7	25V
C2317	Top	O	8	0402C	Chipcap 5% NP0	27p	50V
C2400	Top	N	4	0402C	Chipcap 5% NP0	22p	50V
C2401	Top	N	4	0402C	Chipcap 5% NP0	22p	50V
C2402	Bottom	D	7	0402C	Chipcap X7R 10% 16V 0402	10n	16V
C2406	Bottom	C	3	0603C	CHIPCAP X5R 1U K 6V3 0603	1u0	6.3V
C2407	Bottom	D	3	0603C	CHIPCAP X5R 1U K 6V3 0603	1u0	6.3V
C2412	Top	N	6	0402C	Chipcap 5% NP0	27p	50V
C2413	Bottom	C	7	0402C	Chipcap X7R 10% 16V 0402	10n	16V
C2700	Top	Q	3	0402C_H0.6	CHIPCAP X5R 100N K 16V 0402	100n	16V
C2800	Top	H	8	0402C_H0.6	CHIPCAP X5R 100N K 16V 0402	100n	16V
C2801	Top	F	7	0402C_H0.6	CHIPCAP X5R 100N K 16V 0402	100n	16V
C2803	Top	H	8	0402C_H0.6	CHIPCAP X5R 100N K 16V 0402	100n	16V
C2805	Top	F	7	0402C_H0.6	CHIPCAP X5R 100N K 16V 0402	100n	16V
C2806	Top	F	8	0402C_H0.6	CHIPCAP X5R 100N K 16V 0402	100n	16V
C2807	Top	I	5	0603C	CHIPCAP X5R 1U K 6V3 0603	1u0	6.3V
C2808	Top	G	8	0402C_H0.6	CHIPCAP X5R 100N K 16V 0402	100n	16V
C2809	Top	G	8	0402C_H0.6	CHIPCAP X5R 100N K 16V 0402	100n	16V
C2812	Top	H	8	0402C_H0.6	CHIPCAP X5R 100N K 16V 0402	100n	16V
C2813	Top	F	5	0402C_H0.6	CHIPCAP X5R 100N K 16V 0402	100n	16V
C2814	Top	G	8	0402C_H0.6	CHIPCAP X5R 100N K 16V 0402	100n	16V
C2816	Top	I	5	0402C_H0.6	CHIPCAP X5R 100N K 16V 0402	100n	16V

Item	Side	Grid		Description and value			
C2819	Top	I	5	0402C_H0.6	CHIPCAP X5R 100N K 16V 0402	100n	16V
C2820	Top	F	6	0402C_H0.6	CHIPCAP X5R 100N K 16V 0402	100n	16V
C2822	Top	F	5	0402C_H0.6	CHIPCAP X5R 100N K 16V 0402	100n	16V
C2823	Top	I	6	0402C_H0.6	CHIPCAP X5R 100N K 16V 0402	100n	16V
C2824	Top	J	5	0402C_H0.6	CHIPCAP X5R 100N K 16V 0402	100n	16V
C2825	Top	F	7	0402C	Chipcap X7R 10% 50V 0402	1n0	50V
C2826	Top	I	7	0402C_H0.6	CHIPCAP X5R 100N K 16V 0402	100n	16V
C2828	Top	I	7	0402C	Chipcap 5% NPO	27p	50V
C2829	Top	G	8	0402C_H0.6	CHIPCAP X5R 100N K 16V 0402	100n	16V
C2830	Top	H	5	0402C_H0.6	CHIPCAP X5R 100N K 16V 0402	100n	16V
C2831	Top	I	7	0402C	Chipcap 5% NPO	27p	50V
C2833	Top	I	6	0402C_H0.6	CHIPCAP X5R 100N K 16V 0402	100n	16V
C3000	Top	K	5	0402C_H0.6	CHIPCAP X5R 100N K 16V 0402	100n	16V
C3001	Top	J	5	0402C	Chipcap X7R 10% 16V 0402	10n	16V
C3002	Top	K	5	0402C_H0.6	CHIPCAP X5R 100N K 16V 0402	100n	16V
C3003	Top	J	8	0402C	Chipcap X7R 10% 16V 0402	10n	16V
C3004	Top	J	8	0402C_H0.6	CHIPCAP X5R 100N K 16V 0402	100n	16V
C3005	Top	J	8	0402C_H0.6	CHIPCAP X5R 100N K 16V 0402	100n	16V
C3006	Top	K	8	0402C_H0.6	CHIPCAP X5R 100N K 16V 0402	100n	16V
C3007	Top	K	8	0402C	Chipcap X7R 10% 16V 0402	10n	16V
C3008	Top	J	8	0402C_H0.6	CHIPCAP X5R 100N K 16V 0402	100n	16V

Item	Side	Grid		Description and value			
C3009	Top	K	8	0402C_H0.6	CHIPCAP X5R 100N K 16V 0402	100n	16V
C3200	Top	L	2	0402C_H0.6	CHIPCAP X5R 100N K 16V 0402	100n	16V
C3201	Top	G	2	0603C	CHIPCAP X5R 1U K 6V3 0603	1u0	6.3V
C3202	Top	G	3	0402C	Chipcap X7R 10% 16V 0402	10n	16V
C3203	Top	H	3	0603C	CHIPCAP X5R 1U K 6V3 0603	1u0	6.3V
C3204	Top	L	4	0402C_H0.6	CHIPCAP X5R 100N K 16V 0402	100n	16V
C3205	Top	G	3	0402C	Chipcap 5% NP0	27p	50V
C6031	Top	I	2	0402C	CHIPCAP N150 18P J 50V 0402	18p	50V
C6032	Top	H	2	0402C	Chipcap 5% NP0	100p	50V
C6033	Top	H	4	0402C	Chipcap X7R 10% 16V 0402	10n	16V
C6034	Top	H	3	0402C	Chipcap X7R 10% 16V 0402	10n	16V
C6035	Top	I	4	0402C	Chipcap X7R 10% 16V 0402	10n	16V
C6036	Top	H	4	0402C	Chipcap X7R 10% 16V 0402	10n	16V
C6037	Top	H	4	0402C	CHIPCAP X5R 1U5 K 4V 0402	1u5	4V
C6038	Top	H	4	0402C	Chipcap X7R 10% 16V 0402	10n	16V
C6039	Top	H	3	0402C	CHIPCAP N150 18P J 50V 0402	18p	50V
C6040	Top	I	4	0402C	CHIPCAP X5R 1U K 6V3 0402	1u0	6.3V
C6051	Top	H	3	0402C	Chipcap +-0.25pF NP0	2p7	50V
C6052	Top	I	3	0402C	Chipcap +-0.25pF NP0	2p7	50V
C6055	Top	H	2	0402C	CHIPCAP X5R 1U K 6V3 0402	1u0	6.3V
C6157	Bottom	Q	4	0402C	Chipcap X7R 10% 16V 0402	10n	16V

Item	Side	Grid		Description and value			
C6158	Bottom	Q	5	0402C_H0.6	CHIPCAP X5R 100N K 16V 0402	100n	16V
C6164	Bottom	Q	5	0402C_H0.6	CHIPCAP X5R 100N K 16V 0402	100n	16V
C6165	Bottom	R	6	0402C_H0.6	CHIPCAP X5R 100N K 16V 0402	100n	16V
C6168	Bottom	Q	6	0402C_H0.6	CHIPCAP X5R 100N K 16V 0402	100n	16V
C6170	Bottom	R	5	0402C	CHIPCAP X5R 1U5 K 4V 0402	1u5	4V
C6176	Bottom	R	6	0402C	Chipcap 5% NPO	100p	50V
C6178	Bottom	R	6	0402C	Chipcap 5% NPO	27p	50V
C6179	Bottom	Q	6	0402C	Chipcap 5% NPO	47p	50V
C6188	Bottom	Q	6	0402C_H0.6	CHIPCAP X5R 100N K 16V 0402	100n	16V
C6189	Bottom	Q	6	0402C_H0.6	CHIPCAP X5R 100N K 16V 0402	100n	16V
C6190	Top	P	5	0402C_H0.6	CHIPCAP X5R 100N K 16V 0402	100n	16V
C6191	Top	P	5	0402C_H0.6	CHIPCAP X5R 100N K 16V 0402	100n	16V
C6300	Top	K	4	0603C	CHIPCAP X5R 10UF 6V3 0603	10u	4V
C6301	Top	K	3	0402C	CHIPCAP X5R 1U5 K 4V 0402	1u5	4V
C6303	Top	K	4	0603C	CHIPCAP X5R 2U2 K 6V3 0603	2u2	6V3
C6307	Top	J	2	0402C	CHIPCAP X5R 1U K 6V3 0402	1u0	6.3V
C6308	Top	J	4	0402C	Chipcap +-0.25pF NPO	6p8	50V
C6329	Top	J	1	0402C	Chipcap +-0.25pF NPO	6p8	50V
C6330	Top	I	1	0603C	CHIPCAP X5R 2U2 K 6V3 0603	2u2	6V3
C6331	Top	K	4	0402C	CHIPCAP X5R 1U5 K 4V 0402	1u5	4V
C6335	Top	J	1	0402C	CHIPCAP NPO 220P J 25V 0402	220p	25V
C6338	Top	I	1	0402C	Chipcap 5% NPO	47p	50V

Item	Side	Grid		Description and value			
C6341	Top	I	2	0402C	Chipcap +-0.25pF NPO	6p8	50V
C6343	Top	I	2	0402C	Chipcap +-0.25pF NPO	6p8	50V
C6381	Top	K	3	0402C	CHIPCAP X5R 1U5 K 4V 0402	1u5	4V
C6382	Top	K	3	0402C	CHIPCAP X5R 1U5 K 4V 0402	1u5	4V
C6383	Top	I	2	0402C	CHIPCAP X5R 1U5 K 4V 0402	1u5	4V
C6396	Top	I	2	0402C	Chipcap +-0.25pF NPO	6p8	50V
C6397	Top	I	2	0402C	Chipcap +-0.25pF NPO	6p8	50V
C6398	Top	J	2	0402C	Chipcap +-0.25pF NPO	6p8	50V
C6399	Top	J	2	0402C	Chipcap +-0.25pF NPO	6p8	50V
C7501	Top	B	4	0402C	Chipcap +-0.25pF NPO	2p7	50V
C7502	Top	D	4	0402C	Chipcap 5% NPO	10p	50V
C7503	Top	D	3	0603C	CHIPCAP X5R 1U K 6V3 0603	1u0	6.3V
C7504	Top	B	4	0603C	CHIPCAP X5R 1U K 6V3 0603	1u0	6.3V
C7505	Top	D	3	0402C	CHIPCAP X5R 1U K 6V3 0402	1u0	6.3V
C7506	Top	D	3	0603C	CHIPCAP X5R 1U K 6V3 0603	1u0	6.3V
C7507	Top	D	3	0402C	Chipcap X7R 10% 16V 0402	10n	16V
C7508	Top	D	3	0402C	Chipcap 5% NPO	18p	50V
C7509	Top	D	3	0402C	Chipcap 5% NPO	10p	50V
C7510	Top	D	4	0402C	Chipcap 5% NPO	27p	50V
C7511	Top	C	3	0603C	CHIPCAP NPO 2N2 G 16V 0603	2n2	16V
C7513	Top	D	3	0402C	Chipcap X7R 10% 16V 0402	10n	16V
C7514	Top	D	3	0402C	CHIPCAP X7R 33N K 10V 0402	33n	10V

Item	Side	Grid		Description and value			
C7515	Top	B	3	0402C	Chipcap +-0.25pF NPO	4p7	50V
C7516	Top	C	3	0402C	CHPCAP NPO 470P J 50V 0402	470p	50V
C7518	Top	D	4	0402C	CHIPCAP X5R 100N K 10V 0402	100n	10V
C7520	Top	B	7	0402C	Chipcap +-0.25pF NPO	3p3	50V
C7522	Top	D	6	0402C	Chipcap +-0.25pF NPO	1p8	50V
C7524	Top	D	6	0402C	Chipcap +-0.25pF NPO	1p8	50V
C7525	Top	D	8	0402C	Chipcap 5% NPO	18p	50V
C7586	Top	D	5	0402C	Chipcap X7R 10% 16V 0402	10n	16V
C7590	Top	K	1	0402C	Chipcap 5% NPO	100p	50V
C7592	Top	J	1	0402C	CHIPCAP X5R 100N K 10V 0402	100n	10V
D2200	Top	O	6	TFBGA_108	RETU 3.02 TSA1GJWE TFBGA108	~	~
D2420	Top	G	4	PDSO_G5	OR-GATE 2INPUT 74LVC1G32 SC70-5	~	~
D2800	Top	H	6	uBGA_289	RAPGSM V1.1 PA uBGA289	~	~
D3000	Top	J	6	FBGA133_11.1 X10.1	COMBO 256M NOR + 128M DDR DRAM FBGA133	256MNOR +128MDDR	~
F2000	Top	P	8	0603_FUSE_AV X2MATS	SM FUSE F 2.0A 32V	2A	~
G2200	Top	G	4	BATTER_EECEP	RTC BACUP CAPAC 311 SIZE FOR 2.6V 4UAH	2.6V	~
G7500	Top	B	3	VCO_DCS02733	VCO 3296-3980MHZ 4-BAND MATSUSHITA	3296-3980M Hz	~
G7501	Top	D	2	NKG3176B_H1 .0	VCTCXO 38.4MHZ 2.5V 2MA	38.4MHz	~

Item	Side	Grid		Description and value			
L2000	Top	O	8	0603_BLM	FERR.BEAD 220R/ 100M 2A 0R05 0603	220R/ 100MHz	~
L2001	Bottom	Q	3	0405_2_H1.0	CHIP BEAD ARRAY 2X1000R 0405	2x1000R/ 100MHz	~
L2002	Bottom	Q	3	0405_2_H1.0	CHIP BEAD ARRAY 2X1000R 0405	2x1000R/ 100MHz	~
L2003	Bottom	R	3	0405_2_H1.0	CHIP BEAD ARRAY 2X1000R 0405	2x1000R/ 100MHz	~
L2004	Bottom	R	3	COIL_LK_1608	CHIP COIL 68NH J Q12/100MHZ 0603	68nH	~
L2100	Bottom	D	2	COIL_LQW160 8	CHIP COIL 56N J Q38/200MHZ 0603	56nH	~
L2101	Bottom	C	2	COIL_LQW160 8	CHIP COIL 56N J Q38/200MHZ 0603	56nH	~
L2202	Top	P	8	0603_BLM	FERR.BEAD 220R/ 100M 2A 0R05 0603	220R/ 100MHz	~
L2205	Top	P	8	0603_BLM	FERR.BEAD 220R/ 100M 2A 0R05 0603	220R/ 100MHz	~
L2211	Top	N	5	0603_BLM	FERR.BEAD 220R/ 100M 2A 0R05 0603	220R/ 100MHz	~
L2212	Top	N	6	0603_BLM	FERR.BEAD 220R/ 100M 2A 0R05 0603	220R/ 100MHz	~
L2270	Top	O	5	0603_BLM	FERR.BEAD 220R/ 100M 2A 0R05 0603	220R/ 100MHz	~
L2271	Top	O	5	0603_BLM	FERR.BEAD 220R/ 100M 2A 0R05 0603	220R/ 100MHz	~
L2301	Top	L	5	0603_BLM	FERR.BEAD 220R/ 100M 2A 0R05 0603	220R/ 100MHz	~
L2302	Top	M	5	CHOKE_SER400 _H1.2	INDUCT WW 10UH 0A65 0R35 4X4X1.2	10uH	~

Item	Side	Grid		Description and value			
L2304	Top	M	7	CHOKE_SER300_H1.5	CHOKE 22U M 0R7 0.35A 3.0x3.0x1.5	22uH	~
L2305	Top	L	7	0603_BLM	FERRITE BEAD 0R5 600R/ 100MHZ 0603	600R/ 100MHZ	~
L2306	Top	M	4	0603_BLM	FERRITE BEAD 0R5 600R/ 100MHZ 0603	600R/ 100MHZ	~
L2401	Bottom	B	3	FERRITE_0402	FERRITE BEAD 0.6R 600R/ 100MHZ 0402	600R/ 100MHZ	~
L2402	Bottom	D	2	FERRITE_0402	FERRITE BEAD 0.6R 600R/ 100MHZ 0402	600R/ 100MHZ	~
L2406	Top	I	8	0402L	FERRITE BEAD 0.6R 33R/ 100MHZ 0402	33R/100MHZ	~
L2407	Top	I	8	0402L	FERRITE BEAD 0.6R 33R/ 100MHZ 0402	33R/100MHZ	~
L2408	Top	I	8	0402L	FERRITE BEAD 0.6R 33R/ 100MHZ 0402	33R/100MHZ	~
L2409	Top	I	8	0402L	FERRITE BEAD 0.6R 33R/ 100MHZ 0402	33R/100MHZ	~
L3200	Top	L	2	FERRITE_0402	FERRITE BEAD 0.6R 600R/ 100MHZ 0402	600R/ 100MHZ	~
L6030	Top	H	3	0402L	CHIP COIL 2N7 +-0N3 Q29/800M 0402	2n7H	~
L6031	Top	I	3	0402L	CHIP COIL 2N7 +-0N3 Q29/800M 0402	2n7H	~
L6032	Top	I	4	0402L	CHIP COIL 22N J Q28/800M 0402	22nH	~
L6156	Bottom	R	5	0402LQW	CHIP COIL 47N +-3% Q25/200MHZ 0402	47nH	~

Item	Side	Grid		Description and value			
L6176	Bottom	R	6	COIL_LQW160 8	CHIP COIL 120N J Q32/150MHZ 0603	120nH	~
L7500	Top	C	5	0402L	CHIP COIL 12N J Q31/800M 0402	12nH	~
L7501	Top	C	5	0402L	CHIP COIL 8N2 J Q28/800MHZ 0402	8n2H	~
L7502	Top	D	4	FERRITE_0402	FERRITE BEAD 0.6R 600R/ 100MHZ 0402	600R/ 100MHz	~
L7504	Top	C	5	0402L	CHIP COIL 22N J Q28/800M 0402	22nH	~
L7505	Top	C	5	0402L	CHIP COIL 22N J Q28/800M 0402	22nH	~
L7515	Top	C	3	0402L	CHIP COIL 15N J Q30/800M 0402	15nH	~
N2300	Top	M	6	TFBGA_84_6.1 5X6.15	TAHVO V5.2 LF TFBGA84	~	~
N2301	Top	M	8	USMD8_1.69X 1.69	WHITE LED DRIVER 4LEDS 500MW 8BUMP USMD8	~	~
N2402	Bottom	D	7	SENSOR_MR10	MAGNETO RESISTIVE SENSOR MRUS71D SOT4	~	~
N3200	Top	G	3	USMD16_2.03 X2.03	VREG & LEVEL SHIFT LP3928 USMD16	~	2.8V
N6030	Top	H	3	CSP_47_3.85X 4.05	BC4-ROM1.0RDL	~	~
N6156	Bottom	Q	5	WLCSP25_3.1X 2.9	FM RECEIVER TEA5760 N1C	~	~
N6300	Top	J	3	LFBGA240	WLAN MCM STLC4550 LFBGA240	~	~
N6301	Top	J	1	RF5924	WLAN RF5924 ES3.5	~	~
N7505	Top	C	4	TFBGA144	AHNE401A TRANCEIVER TFBGA144	~	~

Item	Side	Grid		Description and value			
N7520	Top	C	7	RF9282E3.6	PA RF9282E6.5 GSM/EDGE 850/900/1800/1 900	~	~
R2000	Bottom	Q	4	0402R	Resistor 5% 63mW	220R	~
R2001	Bottom	Q	4	uBGA11_2.15X 1.65	ASIP MIC W/ESD RES+CAP+ZDI BGA11	~	~
R2002	Top	Q	3	0402R	Resistor 5% 63mW	10R	~
R2003	Top	Q	3	0402R	Resistor 5% 63mW	10R	~
R2004	Top	Q	2	0402R	Resistor 5% 63mW	10R	~
R2005	Top	Q	3	0402R	Resistor 5% 63mW	10R	~
R2006	Bottom	Q	3	uBGA5	ASIP 4XESD **PB- FREE** BGA5	~	~
R2007	Top	Q	4	uBGA11_1.6X2 .15	ASIP SILIC USB OTG / ESD BGA11	~	~
R2008	Top	Q	4	0404_RP	RES NETWORK 0W06 220K/ 120K J 0404	220k/120k	~
R2009	Top	Q	4	0402R	Resistor 5% 63mW	220R	~
R2070	Top	P	2	0402_NTH5	NTC RES 47K J B=4050+-3% 0402	47k	~
R2071	Top	E	3	0402_VAR	CHIP VARISTOR VWM14V VC50V 0402	14V/50V	~
R2100	Top	Q	2	FLIP_CHIP_8_1. 7X1.7	ASIP SINGLE ENDED MICROPHONE INTERF BGA8	~	~
R2101	Top	P	2	0402R	Resistor 5% 63mW	220R	~
R2200	Top	P	8	0402R	Resistor 5% 63mW	100k	~
R2201	Top	P	7	0402R	Resistor 5% 63mW	120k	~

Item	Side	Grid		Description and value			
R2212	Top	O	5	0402R	Resistor 5% 63mW	470R	~
R2213	Top	P	7	0402R	Resistor 5% 63mW	4k7	~
R2214	Top	P	8	0402R	Resistor 5% 63mW	4k7	~
R2216	Top	Q	7	0402R	CHIPRES 0W06 2M2 J 0402	2M2	~
R2301	Top	M	8	0402R	Resistor 5% 63mW	3k3	~
R2307	Top	L	4	0402R	Resistor 5% 63mW	100R	~
R2402	Bottom	D	7	0402R	Resistor 5% 63mW	100k	~
R2403	Top	N	6	0402R	Resistor 5% 63mW	4k7	~
R2409	Top	N	8	0402R	Resistor 5% 63mW	390R	~
R2410	Bottom	D	4	0402R	Resistor 5% 63mW	39R	~
R2411	Top	N	7	0402R	Resistor 5% 63mW	390R	~
R2416	Bottom	B	3	0402R	Resistor 5% 63mW	1k0	~
R2420	Top	H	4	0402R	Resistor 5% 63mW	100k	~
R2421	Top	G	4	0402R	Resistor 5% 63mW	100k	~
R2700	Top	Q	4	uBGA8_1.47X1 .47	ASIP SIM INTERFACE **LOW CAP**BGA8	~	~
R2801	Bottom	D	3	0402R	Resistor 5% 63mW	1k0	~
R2802	Bottom	D	3	0402R	Resistor 5% 63mW	1k0	~
R2803	Top	I	8	0402R	Resistor 5% 63mW	100R	~
R2804	Top	H	8	0402R	Resistor 5% 63mW	100R	~
R2806	Top	F	6	0402R	Resistor 5% 63mW	68k	~

Item	Side	Grid		Description and value			
R3000	Top	J	5	0402R	Resistor 5% 63mW	4k7	~
R3002	Top	H	8	0402R	Resistor 5% 63mW	10R	~
R3003	Top	I	8	0402R	Resistor 5% 63mW	4k7	~
R3004	Top	K	7	0402R	Resistor 5% 63mW	4k7	~
R3200	Top	L	1	uBGA11_1.62X 2.12	ASIP EMIF04- MMC02F2**PB- FREE**	~	~
R3201	Top	G	4	0402R	Resistor 5% 63mW	100k	~
R3202	Top	G	3	0402R	Resistor 5% 63mW	22k	~
R3203	Top	K	5	0402R	Resistor 5% 63mW	100k	~
R3204	Top	L	4	0402R	Resistor 5% 63mW	2k2	~
R3205	Top	G	3	0402R	Resistor 5% 63mW	33R	~
R3206	Top	G	4	0402R	Resistor 5% 63mW	33R	~
R6030	Top	H	4	0402R	Resistor 5% 63mW	10k	~
R6031	Top	H	4	0402R	Resistor 5% 63mW	10k	~
R6032	Top	I	4	0402R	CHIPRES 0W06 2R2 J 0402	2R2	~
R6034	Top	H	3	0402R	Resistor 5% 63mW	10k	~
R6035	Top	H	4	0402R	Resistor 5% 63mW	100k	~
R6156	Bottom	Q	4	0402R	Resistor 5% 63mW	10R	~
R6157	Bottom	R	6	0402R	Resistor 5% 63mW	22R	~
R6159	Bottom	R	5	0402R	Resistor 5% 63mW	10k	~
R6160	Bottom	R	4	0402R	Resistor 5% 63mW	100k	~

Item	Side	Grid		Description and value			
R6300	Top	J	2	0402R	CHIPRES 0W06 1M F 100PPM 0402	1M0	~
R6301	Top	K	3	0402R	Resistor 5% 63mW	10k	~
R6302	Top	J	4	0402R	Resistor 5% 63mW	100R	~
R6303	Top	G	5	0402R	Resistor 5% 63mW	100R	~
R6304	Top	I	4	0402R	Resistor 5% 63mW	100R	~
R6305	Top	J	2	0402R	Resistor 5% 63mW	68R	~
R7501	Top	C	3	0402R	Resistor 5% 63mW	2k2	~
R7502	Top	B	4	0402R	CHIPRES 0W06 10K F 0402	10k	~
R7503	Top	D	4	0402R	Resistor 5% 63mW	4k7	~
R7505	Top	C	3	0402R	CHIPRES 0W06 8K2 F 0402	8k2	~
R7506	Top	D	3	0402R	Resistor 5% 63mW	10R	~
R7507	Top	B	4	0402R	Resistor 5% 63mW	10R	~
R7508	Top	D	3	0402R	Resistor 5% 63mW	10R	~
R7509	Top	D	3	0402R	Resistor 5% 63mW	22k	~
R7510	Top	D	7	0402R	Resistor 5% 63mW	15R	~
R7522	Top	D	7	0402R	CHIPRES 0W06 27K F 0402	27k	~
R7590	Top	K	1	0402R	Resistor 5% 63mW	22k	~
R7591	Top	K	1	0402R	Resistor 5% 63mW	68k	~
R7592	Top	K	2	0402R	Resistor 5% 63mW	1k0	~
R7593	Top	J	1	0402R	Chipres 0W06 jumper 0402	0R	~

Item	Side	Grid		Description and value			
S2416	Top	F	8	SWITCH_EVQ5 P701K	SM SW TACT SPST 12V SIDE KEY 3N	~	~
S2417	Top	H	8	SWITCH_EVQ5 P701K	SM SW TACT SPST 12V SIDE KEY 3N	~	~
S2423	Top	K	8	SWITCH_EVQ5 P701K	SM SW TACT SPST 12V SIDE KEY 3N	~	~
S3200	Top	O	1	SWITCH_SPVM 110201	SWITCH SPST NO 5V 1MA	~	~
T6030	Top	H	2	TRANS_LDB10	BALUN 2450 +-50MHZ 1DB 1.7X0.9	~	~
T7501	Top	C	2	TRANS_HHM15 17A2	TRANSF BALUN 3800+-550MHZ 0805	~	~
T7520	Top	B	7	TRANS_LDB15	TRANSF BALUN 1800+-100mhz 2x1.25	~	~
V2000	Top	O	8	BGA_4	ASIP TVS BGA4	~	~
V2302	Top	L	4	SOD323F	SCH DI 30V 2A SOD323F	~	~
V2400	Bottom	O	6	LED_48_21SYG C	LED WHITE 140MCD 5MA 0603	~	~
V2401	Bottom	I	6	LED_48_21SYG C	LED WHITE 140MCD 5MA 0603	~	~
V2402	Bottom	I	3	LED_48_21SYG C	LED WHITE 140MCD 5MA 0603	~	~
V2403	Bottom	O	3	LED_48_21SYG C	LED WHITE 140MCD 5MA 0603	~	~
V2404	Top	N	7	SOT_666	TRX2+RX4 N 4K7/47K SOT666	~	~
V7590	Top	K	1	SOT323	Tr NPN 12V 35mA SOT323	~	~
X2000	Top	R	4	SYSCON_MQ20 2_NK_14R3	SM SYSTEM CONNECTOR 14POL	~	~
X2060	Bottom	B	6	TRACEABILITY_ PAD	MODULE ID COMPONENT 2.8X1.8X0.3	~	~

Item	Side	Grid		Description and value			
X2070	Top	F	3	LYNX_BATT_CO NN_H7.0	SM BATTERY CONN 3POL SPR 12V 2A	~	~
X2400	Bottom	C	3	CON_DF30FC_4 ODS_0.4V	SM B2B 2X20 P0.4 F 30V 0.3A DF30FC-40DS-0.4 V	~	~
X2701	Top	P	3	SIM_CONN_470 192001	SM SIM CONN 6POL P2.54	~	~
X3200	Top	M	2	MOLEX_50087 3_0801	CONN TRF/ MICROSD 12POL P0.5 10V	~	~
X6300	Top	G	2	RF_SWITCH_MS _156	SM CONN RF JACK 50R 2W 6GHZ	~	~
X7505	Bottom	C	8	RF_SWITCH_MS _156	SM CONN RF JACK 50R 2W 6GHZ	~	~
Z2000	Top	Q	5	FERRITE_0402	FERRITE BEAD 0.6R 600R/ 100MHZ 0402	600R/ 100MHZ	~
Z2001	Top	Q	4	FERRITE_0402	FERRITE BEAD 0.6R 600R/ 100MHZ 0402	600R/ 100MHZ	~
Z2003	Top	Q	5	FERRITE_0402	FERRITE BEAD 0.6R 600R/ 100MHZ 0402	600R/ 100MHZ	~
Z2400	Bottom	D	6	uBGA25_2.47X 2.47	ASIP 10-CH ESD EMI FILTER BGA25	~	~
Z2403	Bottom	C	4	uBGA25_2.47X 2.47	ASIP 10-CH ESD EMI FILTER BGA25	~	~
Z2404	Bottom	C	2	uBGA25_2.47X 2.47	ASIP 10-CH ESD EMI FILTER BGA25	~	~
Z6300	Top	H	2	LFB2H2G45SG FB868	CER FILT 2450 +-50MHZ 2.5X2.0	2450MHz	~
Z6302	Top	F	1	ANT_RENM050 41	BT/WLAN 1.0 TP ANTENNA RELEASE	~	~
Z7501	Top	C	6	FILTER_2.1X1. 7_10P_H0.6	DUAL RX SAW FILTER 1800/1900MHZ 2016	1800/1900M Hz	~

Item	Side	Grid		Description and value			
Z7503	Top	D	5	MODULE_SP_L MZ_137	TX SAW MODULE GSM 850/900MHZ 4.5X3.2	850/900MHZ	~
Z7504	Top	C	6	FILTER_2.1X1. 7_10P_H0.65	DUAL RX SAW FILTER 850/900MHZ 2016	850/900MHZ	~
Z7520	Top	B	6	FERRITE_FBMJ 1608	FERRITE BEAD 0R01 28R/ 100MHZ 0603	28R/100MHZ	~
Z7521	Top	B	7	FILTER_LFTC10 N	CER FILT LFL181699TC1 2400-2483MHZ 1.6	2400-2483M Hz	~

RM-198 lower block component parts list (1VZ_12b)

Item	Side	Grid		Description and value			
A2000	Top	I	6	SHIELD_040_0 27333	RAP SHIELD ASSY P3046	~	~
A2100	Top	D	1	1WN_RIGID	PWB RIGID 1WN 11.9X2.5X2.1 D2	~	~
A2102	Top	E	7	PWB_1QD	PWB 1QD 10X4.6X1.5	~	~
A2400	Top	N	6	SHIELD_040_0 13002	RETU-TAHVO AHIELD ASSEMBLY	~	~
A6000	Top	J	3	SHIELD_040_0 27328	WLAN-BT SHIELD ASSY P3046	~	~
A6100	Bottom	R	5	SHIELD_040_0 08558	FM RADIO ASSY 040-008558 P2348	~	~
A7000	Top	C	5	SHIELD_040_0 13089	RF SHIELD ASSEMBLY WITH TAPE P3046	~	~
B2200	Top	P	6	CRYSTAL_3.3X 1.6_H0.9	CRYSTAL 32.768KHZ +-30PPM 12.5PF	32.768kHz	~
C2000	Top	N	8	0402C	Chipcap 5% NP0	27p	50V
C2002	Bottom	R	4	0603C	CHIPCAP X5R 2U2 K 6V3 0603	2u2	6V3
C2003	Bottom	R	4	0402C	CHIPCAP X7R 33N K 10V 0402	33n	10V

Item	Side	Grid		Description and value			
C2004	Bottom	R	4	0402C	CHIPCAP X7R 33N K 10V 0402	33n	10V
C2005	Bottom	R	3	0402C	Chipcap X7R 10% 16V 0402	10n	16V
C2006	Bottom	R	3	0402C	Chipcap X7R 10% 16V 0402	10n	16V
C2007	Top	Q	2	0402C	Chipcap X7R 10% 16V 0402	10n	16V
C2008	Top	Q	3	0402C	Chipcap X7R 10% 16V 0402	10n	16V
C2009	Top	Q	3	0402C	Chipcap X7R 10% 16V 0402	10n	16V
C2010	Top	Q	3	0402C	Chipcap X7R 10% 16V 0402	10n	16V
C2011	Bottom	R	3	0402C	Chipcap 5% NP0	10p	50V
C2012	Bottom	R	3	0402C	Chipcap 5% NP0	10p	50V
C2013	Bottom	R	3	0402C	Chipcap 5% NP0	10p	50V
C2014	Bottom	R	3	0402C	Chipcap 5% NP0	10p	50V
C2015	Top	Q	4	0402C	CHIPCAP NP0 220P J 25V 0402	220p	25V
C2016	Top	P	8	0603C_H0.95	CHIPCAP X5R 470N K 25V 0603	470n	25V
C2071	Top	G	3	0402C	Chipcap 5% NP0	27p	50V
C2072	Top	P	2	0402C	Chipcap 5% NP0	27p	50V
C2073	Top	E	5	TANT_C_6.2X3. 4_H1.7	CHIPTCAP 150U M 10V 6X3.2X1.5	150u_10V	10V
C2074	Top	F	2	0402C	Chipcap 5% NP0	10p	50V
C2100	Top	Q	2	0402C	CHIPCAP X7R 33N K 10V 0402	33n	10V
C2101	Top	Q	2	0402C	CHIPCAP X7R 33N K 10V 0402	33n	10V
C2102	Top	Q	2	0603C	CHIPCAP X5R 2U2 K 6V3 0603	2u2	6V3
C2103	Top	E	8	0402C	Chipcap 5% NP0	10p	50V
C2104	Top	E	8	0402C	Chipcap 5% NP0	10p	50V
C2105	Bottom	D	2	0402C	Chipcap 5% NP0	27p	50V
C2106	Bottom	C	2	0402C	Chipcap 5% NP0	27p	50V
C2200	Top	O	5	0603C	CHIPCAP X5R 1U K 6V3 0603	1u0	6.3V

Item	Side	Grid		Description and value			
C2201	Top	P	7	0603C	CHIPCAP X5R 1U K 6V3 0603	1u0	6.3V
C2202	Top	P	8	0402C	Chipcap X7R 10% 50V 0402	1n0	50V
C2203	Top	P	6	0402C	Chipcap X7R 10% 50V 0402	1n0	50V
C2204	Top	P	6	0402C	Chipcap X7R 10% 50V 0402	1n0	50V
C2205	Top	P	5	0402C	Chipcap X7R 10% 50V 0402	1n0	50V
C2206	Top	P	6	0402C	Chipcap X7R 10% 50V 0402	1n0	50V
C2207	Top	P	7	0402C	Chipcap X7R 10% 50V 0402	1n0	50V
C2208	Top	Q	6	0402C	Chipcap 5% NPO	27p	50V
C2209	Top	Q	6	0402C	Chipcap 5% NPO	22p	50V
C2210	Top	N	7	0603C	CHIPCAP X5R 1U K 16V 0603	1u0	16V
C2211	Top	N	7	0805C	CHIPCAP X5R 4U7 K 10V 0805	4u7	10V
C2212	Top	N	6	0402C	CHIPCAP X5R 1U5 K 4V 0402	1u5	4V
C2213	Top	O	7	0402C	CHIPCAP X5R 1U5 K 4V 0402	1u5	4V
C2214	Top	O	7	0402C	CHIPCAP X5R 1U5 K 4V 0402	1u5	4V
C2215	Top	O	7	0402C	CHIPCAP X5R 1U5 K 4V 0402	1u5	4V
C2216	Top	O	7	0402C	CHIPCAP X5R 1U5 K 4V 0402	1u5	4V
C2217	Top	P	7	0402C	CHIPCAP X5R 1U5 K 4V 0402	1u5	4V
C2218	Top	P	6	0402C	Chipcap X7R 10% 50V 0402	1n0	50V
C2219	Top	P	7	0402C	CHIPCAP X5R 1U5 K 4V 0402	1u5	4V
C2220	Top	N	6	0402C	CHIPCAP X5R 1U5 K 4V 0402	1u5	4V
C2221	Top	N	8	0603C	CHIPCAP X5R 1U K 6V3 0603	1u0	6.3V

Item	Side	Grid		Description and value			
C2222	Top	N	7	0603C	CHIPCAP X5R 1U K 6V3 0603	1u0	6.3V
C2223	Top	O	5	0402C	Chipcap X7R 10% 16V 0402	10n	16V
C2224	Top	P	5	0402C	Chipcap X7R 10% 16V 0402	10n	16V
C2225	Top	P	7	0603C	CHIPCAP X5R 1U K 6V3 0603	1u0	6.3V
C2226	Top	O	7	0603C	CHIPCAP X5R 1U K 6V3 0603	1u0	6.3V
C2227	Top	N	6	0603C	CHIPCAP X5R 1U K 6V3 0603	1u0	6.3V
C2228	Top	O	7	0603C	CHIPCAP X5R 1U K 6V3 0603	1u0	6.3V
C2230	Top	P	7	0603C	CHIPCAP X5R 1U K 6V3 0603	1u0	6.3V
C2231	Top	N	5	0603C	CHIPCAP X5R 10UF 6V3 0603	10u	4V
C2232	Top	O	7	0603C	CHIPCAP X5R 1U K 6V3 0603	1u0	6.3V
C2233	Top	G	4	0603C	CHIPCAP X5R 10UF 6V3 0603	10u	4V
C2270	Top	O	5	0402C	Chipcap X7R 10% 50V 0402	1n0	50V
C2271	Top	O	5	0402C	Chipcap X7R 10% 50V 0402	1n0	50V
C2272	Top	O	5	0402C	Chipcap X7R 10% 50V 0402	1n0	50V
C2273	Top	N	6	0402C	Chipcap X7R 10% 50V 0402	1n0	50V
C2274	Top	N	6	0402C	Chipcap 5% NP0	27p	50V
C2275	Top	N	5	0402C	Chipcap 5% NP0	27p	50V
C2281	Top	O	8	0603C	CHIPCAP X5R 1U K 6V3 0603	1u0	6.3V
C2300	Top	M	5	0402C	Chipcap X7R 10% 16V 0402	10n	16V
C2301	Top	L	5	0805C	CHIPCAP X5R 22U M 6V3 0805	22u	6V3
C2302	Top	N	5	0805C	CHIPCAP X5R 22U M 6V3 0805	22u	6V3

Item	Side	Grid		Description and value			
C2303	Top	L	7	0603C	CHIPCAP X5R 1U K 6V3 0603	1u0	6.3V
C2304	Top	N	6	0402C	Chipcap X7R 10% 16V 0402	10n	16V
C2305	Top	L	8	0603C	CHIPCAP X5R 1U K 6V3 0603	1u0	6.3V
C2306	Top	M	4	0603C	CHIPCAP X5R 1U K 6V3 0603	1u0	6.3V
C2307	Top	L	6	0603C	CHIPCAP X5R 1U K 6V3 0603	1u0	6.3V
C2309	Top	L	5	0805C	CHIPCAP X5R 22U M 6V3 0805	22u	6V3
C2310	Top	L	6	0603C	CHIPCAP X5R 10UF 6V3 0603	10u	4V
C2312	Top	L	6	0603C	CHIPCAP X5R 1U K 6V3 0603	1u0	6.3V
C2313	Top	L	7	0603C	CHIPCAP X5R 1U K 6V3 0603	1u0	6.3V
C2314	Top	M	7	0805C	CHIPCAP X5R 4U7 K 10V 0805	4u7	10V
C2315	Top	N	8	0805C	CHIPCAP X5R 4U7 M 25V 0805	4u7	25V
C2317	Top	O	8	0402C	Chipcap 5% NPO	27p	50V
C2400	Top	N	4	0402C	Chipcap 5% NPO	22p	50V
C2401	Top	N	4	0402C	Chipcap 5% NPO	22p	50V
C2402	Bottom	D	7	0402C	Chipcap X7R 10% 16V 0402	10n	16V
C2406	Bottom	C	3	0603C	CHIPCAP X5R 1U K 6V3 0603	1u0	6.3V
C2407	Bottom	D	3	0603C	CHIPCAP X5R 1U K 6V3 0603	1u0	6.3V
C2412	Top	N	6	0402C	Chipcap 5% NPO	27p	50V
C2413	Bottom	C	7	0402C	Chipcap X7R 10% 16V 0402	10n	16V
C2700	Top	Q	3	0402C_H0.6	CHIPCAP X5R 100N K 16V 0402	100n	16V
C2800	Top	H	8	0402C_H0.6	CHIPCAP X5R 100N K 16V 0402	100n	16V
C2801	Top	F	7	0402C_H0.6	CHIPCAP X5R 100N K 16V 0402	100n	16V

Item	Side	Grid		Description and value			
C2803	Top	H	8	0402C_H0.6	CHIPCAP X5R 100N K 16V 0402	100n	16V
C2805	Top	F	7	0402C_H0.6	CHIPCAP X5R 100N K 16V 0402	100n	16V
C2806	Top	F	8	0402C_H0.6	CHIPCAP X5R 100N K 16V 0402	100n	16V
C2807	Top	I	5	0603C	CHIPCAP X5R 1U K 6V3 0603	1u0	6.3V
C2808	Top	G	8	0402C_H0.6	CHIPCAP X5R 100N K 16V 0402	100n	16V
C2809	Top	G	8	0402C_H0.6	CHIPCAP X5R 100N K 16V 0402	100n	16V
C2812	Top	H	8	0402C_H0.6	CHIPCAP X5R 100N K 16V 0402	100n	16V
C2813	Top	F	5	0402C_H0.6	CHIPCAP X5R 100N K 16V 0402	100n	16V
C2814	Top	G	8	0402C_H0.6	CHIPCAP X5R 100N K 16V 0402	100n	16V
C2816	Top	I	5	0402C_H0.6	CHIPCAP X5R 100N K 16V 0402	100n	16V
C2819	Top	I	5	0402C_H0.6	CHIPCAP X5R 100N K 16V 0402	100n	16V
C2820	Top	F	6	0402C_H0.6	CHIPCAP X5R 100N K 16V 0402	100n	16V
C2822	Top	F	5	0402C_H0.6	CHIPCAP X5R 100N K 16V 0402	100n	16V
C2823	Top	I	6	0402C_H0.6	CHIPCAP X5R 100N K 16V 0402	100n	16V
C2824	Top	J	5	0402C_H0.6	CHIPCAP X5R 100N K 16V 0402	100n	16V
C2825	Top	F	7	0402C	Chipcap X7R 10% 50V 0402	1n0	50V
C2826	Top	I	7	0402C_H0.6	CHIPCAP X5R 100N K 16V 0402	100n	16V
C2828	Top	I	7	0402C	Chipcap 5% NP0	27p	50V
C2829	Top	G	8	0402C_H0.6	CHIPCAP X5R 100N K 16V 0402	100n	16V
C2830	Top	H	5	0402C_H0.6	CHIPCAP X5R 100N K 16V 0402	100n	16V
C2831	Top	I	7	0402C	Chipcap 5% NP0	27p	50V

Item	Side	Grid		Description and value			
C2833	Top	I	6	0402C_H0.6	CHIPCAP X5R 100N K 16V 0402	100n	16V
C3000	Top	K	5	0402C_H0.6	CHIPCAP X5R 100N K 16V 0402	100n	16V
C3001	Top	J	5	0402C	Chipcap X7R 10% 16V 0402	10n	16V
C3002	Top	K	5	0402C_H0.6	CHIPCAP X5R 100N K 16V 0402	100n	16V
C3003	Top	J	8	0402C	Chipcap X7R 10% 16V 0402	10n	16V
C3004	Top	J	8	0402C_H0.6	CHIPCAP X5R 100N K 16V 0402	100n	16V
C3005	Top	J	8	0402C_H0.6	CHIPCAP X5R 100N K 16V 0402	100n	16V
C3006	Top	K	8	0402C_H0.6	CHIPCAP X5R 100N K 16V 0402	100n	16V
C3007	Top	K	8	0402C	Chipcap X7R 10% 16V 0402	10n	16V
C3008	Top	J	8	0402C_H0.6	CHIPCAP X5R 100N K 16V 0402	100n	16V
C3009	Top	K	8	0402C_H0.6	CHIPCAP X5R 100N K 16V 0402	100n	16V
C3200	Top	L	2	0402C_H0.6	CHIPCAP X5R 100N K 16V 0402	100n	16V
C3201	Top	G	2	0603C	CHIPCAP X5R 1U K 6V3 0603	1u0	6.3V
C3202	Top	G	3	0402C	Chipcap X7R 10% 16V 0402	10n	16V
C3203	Top	H	3	0603C	CHIPCAP X5R 1U K 6V3 0603	1u0	6.3V
C3204	Top	L	4	0402C_H0.6	CHIPCAP X5R 100N K 16V 0402	100n	16V
C3205	Top	G	3	0402C	Chipcap 5% NP0	27p	50V
C6031	Top	I	2	0402C	CHIPCAP N150 18P J 50V 0402	18p	50V
C6032	Top	H	2	0402C	Chipcap 5% NP0	100p	50V
C6033	Top	H	4	0402C	Chipcap X7R 10% 16V 0402	10n	16V
C6034	Top	H	3	0402C	Chipcap X7R 10% 16V 0402	10n	16V

Item	Side	Grid		Description and value			
C6035	Top	I	4	0402C	Chipcap X7R 10% 16V 0402	10n	16V
C6036	Top	H	4	0402C	Chipcap X7R 10% 16V 0402	10n	16V
C6037	Top	H	4	0402C	CHIPCAP X5R 1U5 K 4V 0402	1u5	4V
C6038	Top	H	4	0402C	Chipcap X7R 10% 16V 0402	10n	16V
C6039	Top	H	3	0402C	CHIPCAP N150 18P J 50V 0402	18p	50V
C6040	Top	I	4	0402C	CHIPCAP X5R 1U K 6V3 0402	1u0	6.3V
C6051	Top	H	3	0402C	Chipcap +-0.25pF NPO	2p7	50V
C6052	Top	I	3	0402C	Chipcap +-0.25pF NPO	2p7	50V
C6055	Top	H	2	0402C	CHIPCAP X5R 1U K 6V3 0402	1u0	6.3V
C6157	Bottom	Q	4	0402C	Chipcap X7R 10% 16V 0402	10n	16V
C6158	Bottom	Q	5	0402C_H0.6	CHIPCAP X5R 100N K 16V 0402	100n	16V
C6164	Bottom	Q	5	0402C_H0.6	CHIPCAP X5R 100N K 16V 0402	100n	16V
C6165	Bottom	R	6	0402C_H0.6	CHIPCAP X5R 100N K 16V 0402	100n	16V
C6168	Bottom	Q	6	0402C_H0.6	CHIPCAP X5R 100N K 16V 0402	100n	16V
C6170	Bottom	R	5	0402C	CHIPCAP X5R 1U5 K 4V 0402	1u5	4V
C6176	Bottom	R	6	0402C	Chipcap 5% NPO	100p	50V
C6178	Bottom	R	6	0402C	Chipcap 5% NPO	27p	50V
C6179	Bottom	Q	6	0402C	Chipcap 5% NPO	47p	50V
C6188	Bottom	Q	6	0402C_H0.6	CHIPCAP X5R 100N K 16V 0402	100n	16V
C6189	Bottom	Q	6	0402C_H0.6	CHIPCAP X5R 100N K 16V 0402	100n	16V
C6190	Top	P	5	0402C_H0.6	CHIPCAP X5R 100N K 16V 0402	100n	16V
C6191	Top	P	5	0402C_H0.6	CHIPCAP X5R 100N K 16V 0402	100n	16V

Item	Side	Grid		Description and value			
C6340	Top	I	2	0402C	Chipcap +-0.25pF NPO	6p8	50V
C6342	Top	I	2	0402C	Chipcap +-0.25pF NPO	6p8	50V
C7501	Top	B	4	0402C	Chipcap +-0.25pF NPO	2p7	50V
C7502	Top	D	4	0402C	Chipcap 5% NPO	10p	50V
C7503	Top	D	3	0603C	CHIPCAP X5R 1U K 6V3 0603	1u0	6.3V
C7504	Top	B	4	0603C	CHIPCAP X5R 1U K 6V3 0603	1u0	6.3V
C7505	Top	D	3	0402C	CHIPCAP X5R 1U K 6V3 0402	1u0	6.3V
C7506	Top	D	3	0603C	CHIPCAP X5R 1U K 6V3 0603	1u0	6.3V
C7507	Top	D	3	0402C	Chipcap X7R 10% 16V 0402	10n	16V
C7508	Top	D	3	0402C	Chipcap 5% NPO	18p	50V
C7509	Top	D	3	0402C	Chipcap 5% NPO	10p	50V
C7510	Top	D	4	0402C	Chipcap 5% NPO	27p	50V
C7511	Top	C	3	0603C	CHIPCAP NPO 2N2 G 16V 0603	2n2	16V
C7513	Top	D	3	0402C	Chipcap X7R 10% 16V 0402	10n	16V
C7514	Top	D	3	0402C	CHIPCAP X7R 33N K 10V 0402	33n	10V
C7515	Top	B	3	0402C	Chipcap +-0.25pF NPO	4p7	50V
C7516	Top	C	3	0402C	CHPCAP NPO 470P J 50V 0402	470p	50V
C7518	Top	D	4	0402C	CHIPCAP X5R 100N K 10V 0402	100n	10V
C7520	Top	B	7	0402C	Chipcap +-0.25pF NPO	3p3	50V
C7522	Top	D	6	0402C	Chipcap +-0.25pF NPO	1p8	50V
C7524	Top	D	6	0402C	Chipcap +-0.25pF NPO	1p8	50V
C7525	Top	D	8	0402C	Chipcap 5% NPO	18p	50V

Item	Side	Grid		Description and value			
C7586	Top	D	5	0402C	Chipcap X7R 10% 16V 0402	10n	16V
C7590	Top	K	1	0402C	Chipcap 5% NP0	100p	50V
C7592	Top	J	1	0402C	CHIPCAP X5R 100N K 10V 0402	100n	10V
D2200	Top	O	6	TFBGA_108	RETU 3.02 TSA1GJWE TFBGA108	~	~
D2800	Top	H	6	uBGA_289	RAPGSM V1.1 PA uBGA289	~	~
D3000	Top	J	6	FBGA133_11.1 X10.1	COMBO 256M NOR + 128M DDR DRAM FBGA133	256MNOR +128MDDR	~
F2000	Top	P	8	0603_FUSE_AV X2MATS	SM FUSE F 2.0A 32V	2A	~
G2200	Top	G	4	BATTER_EECEP	RTC BACUP CAPAC 311 SIZE FOR 2.6V 4UAH	2.6V	~
G7500	Top	B	3	VCO_DCS02733	VCO 3296-3980MHZ 4-BAND MATSUSHITA	3296-3980M Hz	~
G7501	Top	D	2	NKG3176B_H1 .0	VCTCXO 38.4MHZ 2.5V 2MA	38.4MHZ	~
L2000	Top	O	8	0603_BLM	FERR.BEAD 220R/ 100M 2A 0R05 0603	220R/ 100MHZ	~
L2001	Bottom	Q	3	0405_2_H1.0	CHIP BEAD ARRAY 2X1000R 0405	2x1000R/ 100MHZ	~
L2002	Bottom	Q	3	0405_2_H1.0	CHIP BEAD ARRAY 2X1000R 0405	2x1000R/ 100MHZ	~
L2003	Bottom	R	3	0405_2_H1.0	CHIP BEAD ARRAY 2X1000R 0405	2x1000R/ 100MHZ	~
L2004	Bottom	R	3	COIL_LK_1608	CHIP COIL 68NH J Q12/100MHZ 0603	68nH	~
L2100	Bottom	D	2	COIL_LQW160 8	CHIP COIL 56N J Q38/200MHZ 0603	56nH	~
L2101	Bottom	C	2	COIL_LQW160 8	CHIP COIL 56N J Q38/200MHZ 0603	56nH	~

Item	Side	Grid		Description and value			
L2202	Top	P	8	0603_BLM	FERR.BEAD 220R/ 100M 2A 0R05 0603	220R/ 100MHZ	~
L2205	Top	P	8	0603_BLM	FERR.BEAD 220R/ 100M 2A 0R05 0603	220R/ 100MHZ	~
L2211	Top	N	5	0603_BLM	FERR.BEAD 220R/ 100M 2A 0R05 0603	220R/ 100MHZ	~
L2212	Top	N	6	0603_BLM	FERR.BEAD 220R/ 100M 2A 0R05 0603	220R/ 100MHZ	~
L2270	Top	0	5	0603_BLM	FERR.BEAD 220R/ 100M 2A 0R05 0603	220R/ 100MHZ	~
L2271	Top	0	5	0603_BLM	FERR.BEAD 220R/ 100M 2A 0R05 0603	220R/ 100MHZ	~
L2301	Top	L	5	0603_BLM	FERR.BEAD 220R/ 100M 2A 0R05 0603	220R/ 100MHZ	~
L2302	Top	M	5	CHOKE_SER400 _H1.2	INDUCT WW 10UH 0A65 0R35 4X4X1.2	10uH	~
L2304	Top	M	7	CHOKE_SER300 _H1.5	CHOKE 22U M 0R7 0.35A 3.0x3.0x1.5	22uH	~
L2305	Top	L	7	0603_BLM	FERRITE BEAD 0R5 600R/ 100MHZ 0603	600R/ 100MHZ	~
L2306	Top	M	4	0603_BLM	FERRITE BEAD 0R5 600R/ 100MHZ 0603	600R/ 100MHZ	~
L2401	Bottom	B	3	FERRITE_0402	FERRITE BEAD 0.6R 600R/ 100MHZ 0402	600R/ 100MHZ	~
L2402	Bottom	D	2	FERRITE_0402	FERRITE BEAD 0.6R 600R/ 100MHZ 0402	600R/ 100MHZ	~
L2406	Top	I	8	0402L	FERRITE BEAD 0.6R 33R/ 100MHZ 0402	33R/100MHZ	~

Item	Side	Grid		Description and value			
L2407	Top	I	8	0402L	FERRITE BEAD 0.6R 33R/ 100MHZ 0402	33R/100MHZ	~
L2408	Top	I	8	0402L	FERRITE BEAD 0.6R 33R/ 100MHZ 0402	33R/100MHZ	~
L2409	Top	I	8	0402L	FERRITE BEAD 0.6R 33R/ 100MHZ 0402	33R/100MHZ	~
L3200	Top	L	2	FERRITE_0402	FERRITE BEAD 0.6R 600R/ 100MHZ 0402	600R/ 100MHZ	~
L6030	Top	H	3	0402L	CHIP COIL 2N7 +-0N3 Q29/800M 0402	2n7H	~
L6031	Top	I	3	0402L	CHIP COIL 2N7 +-0N3 Q29/800M 0402	2n7H	~
L6032	Top	I	4	0402L	CHIP COIL 22N J Q28/800M 0402	22nH	~
L6156	Bottom	R	5	0402LQW	CHIP COIL 47N +-3% Q25/200MHZ 0402	47nH	~
L6176	Bottom	R	6	COIL_LQW160 8	CHIP COIL 120N J Q32/150MHZ 0603	120nH	~
L7500	Top	C	5	0402L	CHIP COIL 12N J Q31/800M 0402	12nH	~
L7501	Top	C	5	0402L	CHIP COIL 8N2 J Q28/800MHZ 0402	8n2H	~
L7502	Top	D	4	FERRITE_0402	FERRITE BEAD 0.6R 600R/ 100MHZ 0402	600R/ 100MHZ	~
L7504	Top	C	5	0402L	CHIP COIL 22N J Q28/800M 0402	22nH	~
L7505	Top	C	5	0402L	CHIP COIL 22N J Q28/800M 0402	22nH	~
L7515	Top	C	3	0402L	CHIP COIL 15N J Q30/800M 0402	15nH	~
N2300	Top	M	6	TFBGA_84_6.1 5X6.15	TAHVO V5.2 LF TFBGA84	~	~

Item	Side	Grid		Description and value			
N2301	Top	M	8	USMD8_1.69X 1.69	WHITE LED DRIVER 4LEDS 500MW 8BUMP USMD8	~	~
N2402	Bottom	D	7	SENSOR_MR10	MAGNETO RESISTIVE SENSOR MRUS71D SOT4	~	~
N3200	Top	G	3	USMD16_2.03 X2.03	VREG & LEVEL SHIFT LP3928 USMD16	~	2.8V
N6030	Top	H	3	CSP_47_3.85X 4.05	BC4-ROM1.0RDL	~	~
N6156	Bottom	Q	5	WLCSP25_3.1X 2.9	FM RECEIVER TEA5760 N1C	~	~
N7505	Top	C	4	TFBGA144	AHNE401A TRANCEIVER TFBGA144	~	~
N7520	Top	C	7	RF9282E3.6	PA RF9282E6.5 GSM/EDGE 850/900/1800/1 900	~	~
R2000	Bottom	Q	4	0402R	Resistor 5% 63mW	220R	~
R2001	Bottom	Q	4	uBGA11_2.15X 1.65	ASIP MIC W/ESD RES+CAP+ZDI BGA11	~	~
R2002	Top	Q	3	0402R	Resistor 5% 63mW	10R	~
R2003	Top	Q	3	0402R	Resistor 5% 63mW	10R	~
R2004	Top	Q	2	0402R	Resistor 5% 63mW	10R	~
R2005	Top	Q	3	0402R	Resistor 5% 63mW	10R	~
R2006	Bottom	Q	3	uBGA5	ASIP 4XESD **PB- FREE** BGA5	~	~
R2007	Top	Q	4	uBGA11_1.6X2 .15	ASIP SILIC USB OTG / ESD BGA11	~	~
R2008	Top	Q	4	0404_RP	RES NETWORK 0W06 220K/ 120K J 0404	220k/120k	~

Item	Side	Grid		Description and value			
R2009	Top	Q	4	0402R	Resistor 5% 63mW	220R	~
R2070	Top	P	2	0402_NTH5	NTC RES 47K J B=4050+-3% 0402	47k	~
R2071	Top	E	3	0402_VAR	CHIP VARISTOR VWM14V VC50V 0402	14V/50V	~
R2100	Top	Q	2	FLIP_CHIP_8_1. 7X1.7	ASIP SINGLE ENDED MICROPHONE INTERF BGA8	~	~
R2101	Top	P	2	0402R	Resistor 5% 63mW	220R	~
R2200	Top	P	8	0402R	Resistor 5% 63mW	100k	~
R2201	Top	P	7	0402R	Resistor 5% 63mW	120k	~
R2212	Top	O	5	0402R	Resistor 5% 63mW	470R	~
R2213	Top	P	7	0402R	Resistor 5% 63mW	4k7	~
R2214	Top	P	8	0402R	Resistor 5% 63mW	4k7	~
R2216	Top	Q	7	0402R	CHIPRES 0W06 2M2 J 0402	2M2	~
R2301	Top	M	8	0402R	Resistor 5% 63mW	3k3	~
R2307	Top	L	4	0402R	Resistor 5% 63mW	100R	~
R2402	Bottom	D	7	0402R	Resistor 5% 63mW	100k	~
R2403	Top	N	6	0402R	Resistor 5% 63mW	4k7	~
R2409	Top	N	8	0402R	Resistor 5% 63mW	390R	~
R2410	Bottom	D	4	0402R	Resistor 5% 63mW	39R	~
R2411	Top	N	7	0402R	Resistor 5% 63mW	390R	~
R2416	Bottom	B	3	0402R	Resistor 5% 63mW	1k0	~

Item	Side	Grid		Description and value			
R2420	Top	H	4	0402R	Resistor 5% 63mW	100k	~
R2422	Top	G	4	0402R	Chipres 0W06 jumper 0402	0R	~
R2700	Top	Q	4	uBGA8_1.47X1 .47	ASIP SIM INTERFACE **LOW CAP**BGA8	~	~
R2801	Bottom	D	3	0402R	Resistor 5% 63mW	1k0	~
R2802	Bottom	D	3	0402R	Resistor 5% 63mW	1k0	~
R2803	Top	I	8	0402R	Resistor 5% 63mW	100R	~
R2804	Top	H	8	0402R	Resistor 5% 63mW	100R	~
R2806	Top	F	6	0402R	Resistor 5% 63mW	68k	~
R3000	Top	J	5	0402R	Resistor 5% 63mW	4k7	~
R3002	Top	H	8	0402R	Resistor 5% 63mW	10R	~
R3003	Top	I	8	0402R	Resistor 5% 63mW	4k7	~
R3004	Top	K	7	0402R	Resistor 5% 63mW	4k7	~
R3200	Top	L	1	uBGA11_1.62X 2.12	ASIP EMIF04- MMC02F2**PB- FREE**	~	~
R3201	Top	G	4	0402R	Resistor 5% 63mW	100k	~
R3202	Top	G	3	0402R	Resistor 5% 63mW	22k	~
R3203	Top	K	5	0402R	Resistor 5% 63mW	100k	~
R3204	Top	L	4	0402R	Resistor 5% 63mW	2k2	~
R3205	Top	G	3	0402R	Resistor 5% 63mW	33R	~
R3206	Top	G	4	0402R	Resistor 5% 63mW	33R	~

Item	Side	Grid		Description and value			
R6030	Top	H	4	0402R	Resistor 5% 63mW	10k	~
R6031	Top	H	4	0402R	Resistor 5% 63mW	10k	~
R6032	Top	I	4	0402R	CHIPRES 0W06 2R2 J 0402	2R2	~
R6034	Top	H	3	0402R	Resistor 5% 63mW	10k	~
R6035	Top	H	4	0402R	Resistor 5% 63mW	100k	~
R6156	Bottom	Q	4	0402R	Resistor 5% 63mW	10R	~
R6157	Bottom	R	6	0402R	Resistor 5% 63mW	22R	~
R6159	Bottom	R	5	0402R	Resistor 5% 63mW	10k	~
R6160	Bottom	R	4	0402R	Resistor 5% 63mW	100k	~
R7501	Top	C	3	0402R	Resistor 5% 63mW	2k2	~
R7502	Top	B	4	0402R	CHIPRES 0W06 10K F 0402	10k	~
R7503	Top	D	4	0402R	Resistor 5% 63mW	4k7	~
R7505	Top	C	3	0402R	CHIPRES 0W06 8K2 F 0402	8k2	~
R7506	Top	D	3	0402R	Resistor 5% 63mW	10R	~
R7507	Top	B	4	0402R	Resistor 5% 63mW	10R	~
R7508	Top	D	3	0402R	Resistor 5% 63mW	10R	~
R7509	Top	D	3	0402R	Resistor 5% 63mW	22k	~
R7510	Top	D	7	0402R	Resistor 5% 63mW	15R	~
R7522	Top	D	7	0402R	CHIPRES 0W06 27K F 0402	27k	~
R7590	Top	K	1	0402R	Resistor 5% 63mW	22k	~

Item	Side	Grid		Description and value			
R7591	Top	K	1	0402R	Resistor 5% 63mW	68k	~
R7592	Top	K	2	0402R	Resistor 5% 63mW	1k5	~
R7593	Top	J	1	0402R	Chipres 0W06 jumper 0402	0R	~
S2416	Top	F	8	SWITCH_EVQ5 P701K	SM SW TACT SPST 12V SIDE KEY 3N	~	~
S2417	Top	H	8	SWITCH_EVQ5 P701K	SM SW TACT SPST 12V SIDE KEY 3N	~	~
S2423	Top	K	8	SWITCH_EVQ5 P701K	SM SW TACT SPST 12V SIDE KEY 3N	~	~
S3200	Top	O	1	SWITCH_SPVM 110201	SWITCH SPST NO 5V 1MA	~	~
T6030	Top	H	2	TRANS_LDB10	BALUN 2450 +-50MHZ 1DB 1.7X0.9	~	~
T7501	Top	C	2	TRANS_HHM15 17A2	TRANSF BALUN 3800+-550MHZ 0805	~	~
T7520	Top	B	7	TRANS_LDB15	TRANSF BALUN 1800+-100mhz 2x1.25	~	~
V2000	Top	O	8	BGA_4	ASIP TVS BGA4	~	~
V2302	Top	L	4	SOD323F	SCH DI 30V 2A SOD323F	~	~
V2400	Bottom	O	6	LED_48_21SYG C	LED WHITE 140MCD 5MA 0603	~	~
V2401	Bottom	I	6	LED_48_21SYG C	LED WHITE 140MCD 5MA 0603	~	~
V2402	Bottom	I	3	LED_48_21SYG C	LED WHITE 140MCD 5MA 0603	~	~
V2403	Bottom	O	3	LED_48_21SYG C	LED WHITE 140MCD 5MA 0603	~	~
V2404	Top	N	7	SOT_666	TRX2+RX4 N 4K7/47K SOT666	~	~
V7590	Top	K	1	SOT323	Tr NPN 12V 35mA SOT323	~	~

Item	Side	Grid		Description and value			
X2000	Top	R	4	SYSCON_MQ20 2_NK_14R3	SM SYSTEM CONNECTOR 14POL	~	~
X2060	Bottom	B	6	TRACEABILITY_ PAD	MODULE ID COMPONENT 2.8X1.8X0.3	~	~
X2070	Top	F	3	LYNX_BATT_CO NN_H7.0	SM BATTERY CONN 3POL SPR 12V 2A	~	~
X2400	Bottom	C	3	CON_DF30FC_4 ODS_0.4V	SM B2B 2X20 P0.4 F 30V 0.3A DF30FC-40DS-0.4 V	~	~
X2701	Top	P	3	SIM_CONN_470 192001	SM SIM CONN 6POL P2.54	~	~
X3200	Top	M	2	MOLEX_50087 3_0801	CONN TRF/ MICROSD 12POL P0.5 10V	~	~
X6300	Top	G	2	RF_SWITCH_MS _156	SM CONN RF JACK 50R 2W 6GHZ	~	~
X7505	Bottom	C	8	RF_SWITCH_MS _156	SM CONN RF JACK 50R 2W 6GHZ	~	~
Z2000	Top	Q	5	FERRITE_0402	FERRITE BEAD 0.6R 600R/ 100MHZ 0402	600R/ 100MHz	~
Z2001	Top	Q	4	FERRITE_0402	FERRITE BEAD 0.6R 600R/ 100MHZ 0402	600R/ 100MHz	~
Z2003	Top	Q	5	FERRITE_0402	FERRITE BEAD 0.6R 600R/ 100MHZ 0402	600R/ 100MHz	~
Z2400	Bottom	D	6	uBGA25_2.47X 2.47	ASIP 10-CH ESD EMI FILTER BGA25	~	~
Z2403	Bottom	C	4	uBGA25_2.47X 2.47	ASIP 10-CH ESD EMI FILTER BGA25	~	~
Z2404	Bottom	C	2	uBGA25_2.47X 2.47	ASIP 10-CH ESD EMI FILTER BGA25	~	~
Z6300	Top	H	2	LFB2H2G45SG FB868	CER FILT 2450 +-50MHZ 2.5X2.0	2450MHz	~

Item	Side	Grid		Description and value			
Z6302	Top	F	1	ANT_RENM050 41	BT/WLAN 1.0 TP ANTENNA RELEASE	~	~
Z7501	Top	C	6	FILTER_2.1X1. 7_10P_H0.6	DUAL RX SAW FILTER 1800/1900MHZ 2016	1800/1900M Hz	~
Z7503	Top	D	5	MODULE_SP_L MZ_137	TX SAW MODULE GSM 850/900MHZ 4.5X3.2	850/900MHz	~
Z7504	Top	C	6	FILTER_2.1X1. 7_10P_H0.65	DUAL RX SAW FILTER 850/900MHZ 2016	850/900MHz	~
Z7520	Top	B	6	FERRITE_FBMJ 1608	FERRITE BEAD 0R01 28R/ 100MHZ 0603	28R/100MHz	~
Z7521	Top	B	7	FILTER_LFTC10 N	CER FILT LFL181699TC1 2400-2483MHZ 1.6	2400-2483M Hz	~

Upper block

RM-188/198 upper block component parts list (1WJ_10b)

Note

This component parts list applies to all RM-188 units and those RM-198 units, which are assembled without the HAC (Hearing Aid Coil). Note that the RM-198 can be assembled with or without the HAC.

Item	Side	Grid		Description and value			
C1000	Top	D	6	0603C	CHIPCAP X5R 4U7 K 6V3 0603	4u7	6.3V
C1001	Top	D	8	0603C	CHIPCAP X5R 4U7 K 6V3 0603	4u7	6.3V
C1600	Top	N	5	0402C	Chipcap 5% NPO	27p	50V
C2000	Top	N	4	0603C	CHIPCAP X5R 4U7 K 6V3 0603	4u7	6.3V
C2001	Top	N	4	0402C	CHIPCAP X5R 100N K 10V 0402	100n	10V
C2100	Top	L	3	0402C	CHIPCAP X5R 100N K 10V 0402	100n	10V

Item	Side	Grid		Description and value			
C2101	Top	M	3	0402C	CHIPCAP X5R 100N K 10V 0402	100n	10V
C3000	Top	D	3	0402C	Chipcap X5R 10% 6.3V 0402	220n	6.3V
C3001	Top	D	6	0402C	CHIPCAP X5R 100N K 10V 0402	100n	10V
C3002	Top	D	3	0603C	CHIPCAP X5R 4U7 K 6V3 0603	4u7	6.3V
C3010	Top	C	3	0402C	Chipcap 5% NP0	10p	50V
C3011	Top	C	6	0402C	Chipcap 5% NP0	10p	50V
L1010	Top	D	6	FERRITE_0402	FERRITE BEAD 600R 300MA 0.6R 0402	600R/300mA	~
L1011	Top	C	8	FERRITE_0402	FERRITE BEAD 600R 300MA 0.6R 0402	600R/300mA	~
L1600	Top	N	6	0405_2_H1.0	CHIP BEAD ARRAY 2X1000R 0405	2x1000R/ 100MHZ	~
R1101	Top	K	5	0402R	Resistor 5% 63mW	22k	~
R1600	Top	N	5	0402_VAR	CHIP VARISTOR VWM14V VC50V 0402	14V/50V	~
R1601	Top	N	5	0402_VAR	CHIP VARISTOR VWM14V VC50V 0402	14V/50V	~
R1701	Top	N	6	0402R	Resistor 5% 63mW	10R	~
V1101	Top	L	6	SOT_666	TRX2+RX4 N 4K7/47K SOT666	~	~
V1102	Top	L	5	VMT3_R	TRANS N 30V 0A2 0W15 2K2/10K HFE140 VMT3	~	~
X1000	Top	C	7	CON_DF30FC_4 0DS_0.4V	SM B2B 2X20 P0.4 F 30V 0.3A DF30FC-40DS-0. 4V	~	~
X2000	Bottom	O	4	CON_DF23NC_2 2DS	SM CONN 2X11F P0.5 30V 0.3A PWB/PWB	~	~
X2100	Top	M	3	CON_DF23C_10 DS	SM CONN BTB 2X5 F P0.5	~	~

Item	Side	Grid		Description and value			
X3000	Top	C	5	SOCKET_T_051 104_TB3	SOCKET SMIA65 THROUGH BOARD P0.95	~	~

RM-198 upper block component parts list with HAC (1WJ_10c)

Note							
This component parts list applies to those RM-198 units, which are assembled with the HAC (Hearing Aid Coil). Note that the RM-198 can be assembled with or without the HAC.							


C1000	Top	D	6	0603C	CHIPCAP X5R 4U7 K 6V3 0603	4u7	6.3V
C1001	Top	D	8	0603C	CHIPCAP X5R 4U7 K 6V3 0603	4u7	6.3V
C1600	Top	N	5	0402C	Chipcap 5% NPO	27p	50V
C2000	Top	N	4	0603C	CHIPCAP X5R 4U7 K 6V3 0603	4u7	6.3V
C2001	Top	N	4	0402C	CHIPCAP X5R 100N K 10V 0402	100n	10V
C2100	Top	L	3	0402C	CHIPCAP X5R 100N K 10V 0402	100n	10V
C2101	Top	M	3	0402C	CHIPCAP X5R 100N K 10V 0402	100n	10V
C3000	Top	D	3	0402C	Chipcap X5R 10% 6.3V 0402	220n	6.3V
C3001	Top	D	6	0402C	CHIPCAP X5R 100N K 10V 0402	100n	10V
C3002	Top	D	3	0603C	CHIPCAP X5R 4U7 K 6V3 0603	4u7	6.3V
C3010	Top	C	3	0402C	Chipcap 5% NPO	10p	50V
C3011	Top	C	6	0402C	Chipcap 5% NPO	10p	50V
L1010	Top	D	6	FERRITE_0402	FERRITE BEAD 600R 300MA 0.6R 0402	600R/300mA	~
L1011	Top	C	8	FERRITE_0402	FERRITE BEAD 600R 300MA 0.6R 0402	600R/300mA	~
L1600	Top	N	6	0405_2_H1.0	CHIP BEAD ARRAY 2X1000R 0405	2x1000R/ 100MHz	~

L1700	Bottom	P	4	INDUCTOR_HA C_MS20K	CASE SYMBOL FOR INDUCTOR PRINTED IN PWB	~	~
R1101	Top	K	5	0402R	Resistor 5% 63mW	22k	~
R1600	Top	N	5	0402_VAR	CHIP VARISTOR VWM14V VC50V 0402	14V/50V	~
R1601	Top	N	5	0402_VAR	CHIP VARISTOR VWM14V VC50V 0402	14V/50V	~
V1101	Top	L	6	SOT_666	TRX2+RX4 N 4K7/47K SOT666	~	~
V1102	Top	L	5	VMT3_R	TRANS N 30V 0A2 0W15 2K2/10K HFE140 VMT3	~	~
X1000	Top	C	7	CON_DF30FC_4 0DS_0.4V	SM B2B 2X20 P0.4 F 30V 0.3A DF30FC-40DS-0.4 V	~	~
X2000	Bottom	O	4	CON_DF23NC_ 22DS	SM CONN 2X11F P0.5 30V 0.3A PWB/PWB	~	~
X2100	Top	M	3	CON_DF23C_10 DS	SM CONN BTB 2X5 F P0.5	~	~
X3000	Top	C	5	SOCKET_T_051 104_TB3	SOCKET SMIA65 THROUGH BOARD P0.95	~	~


■ Component layouts

Lower (engine) block


RM-188 lower block component layout - top (1VZ_12d)

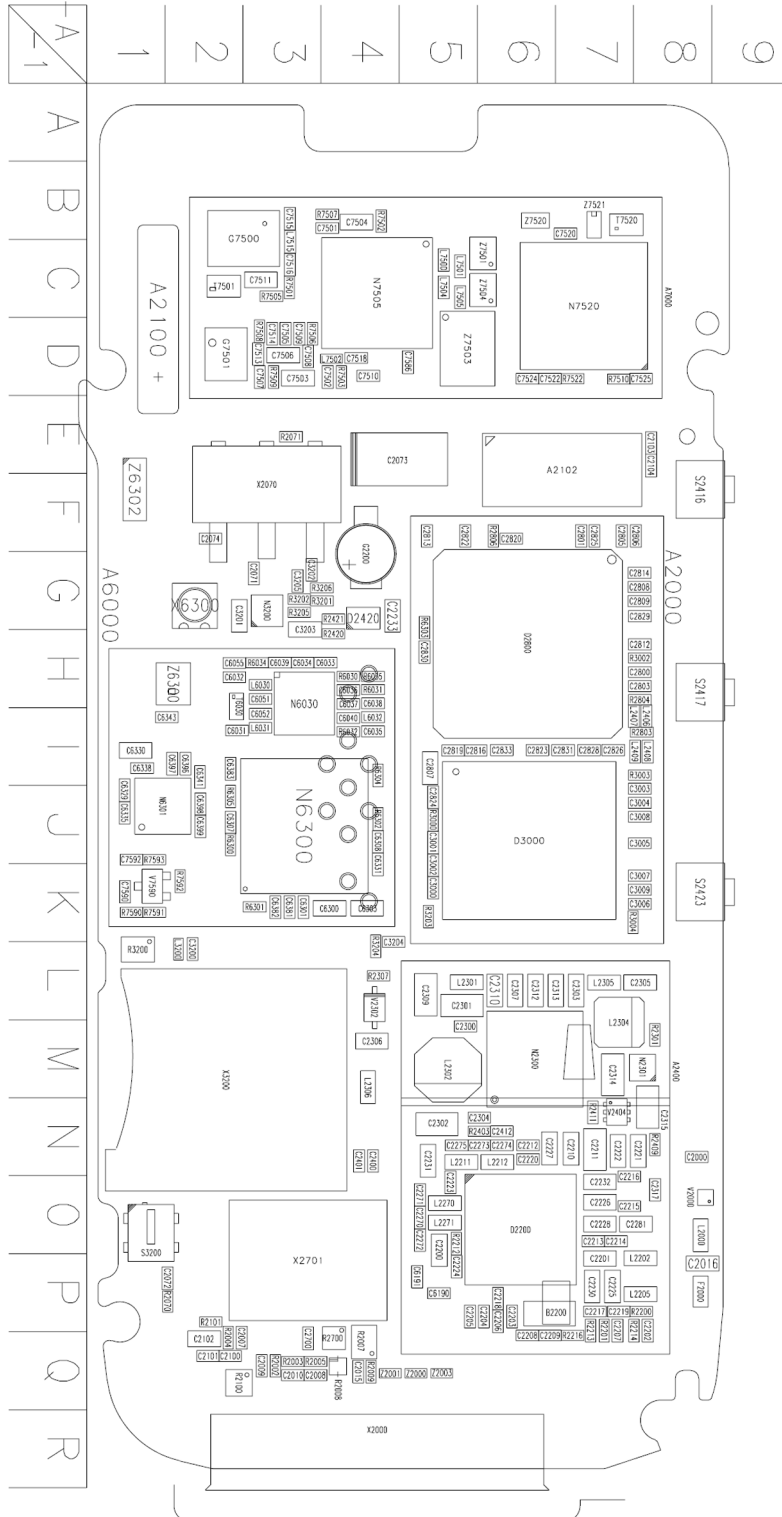

RM-188 lower block component layout - bottom (1VZ_12d)

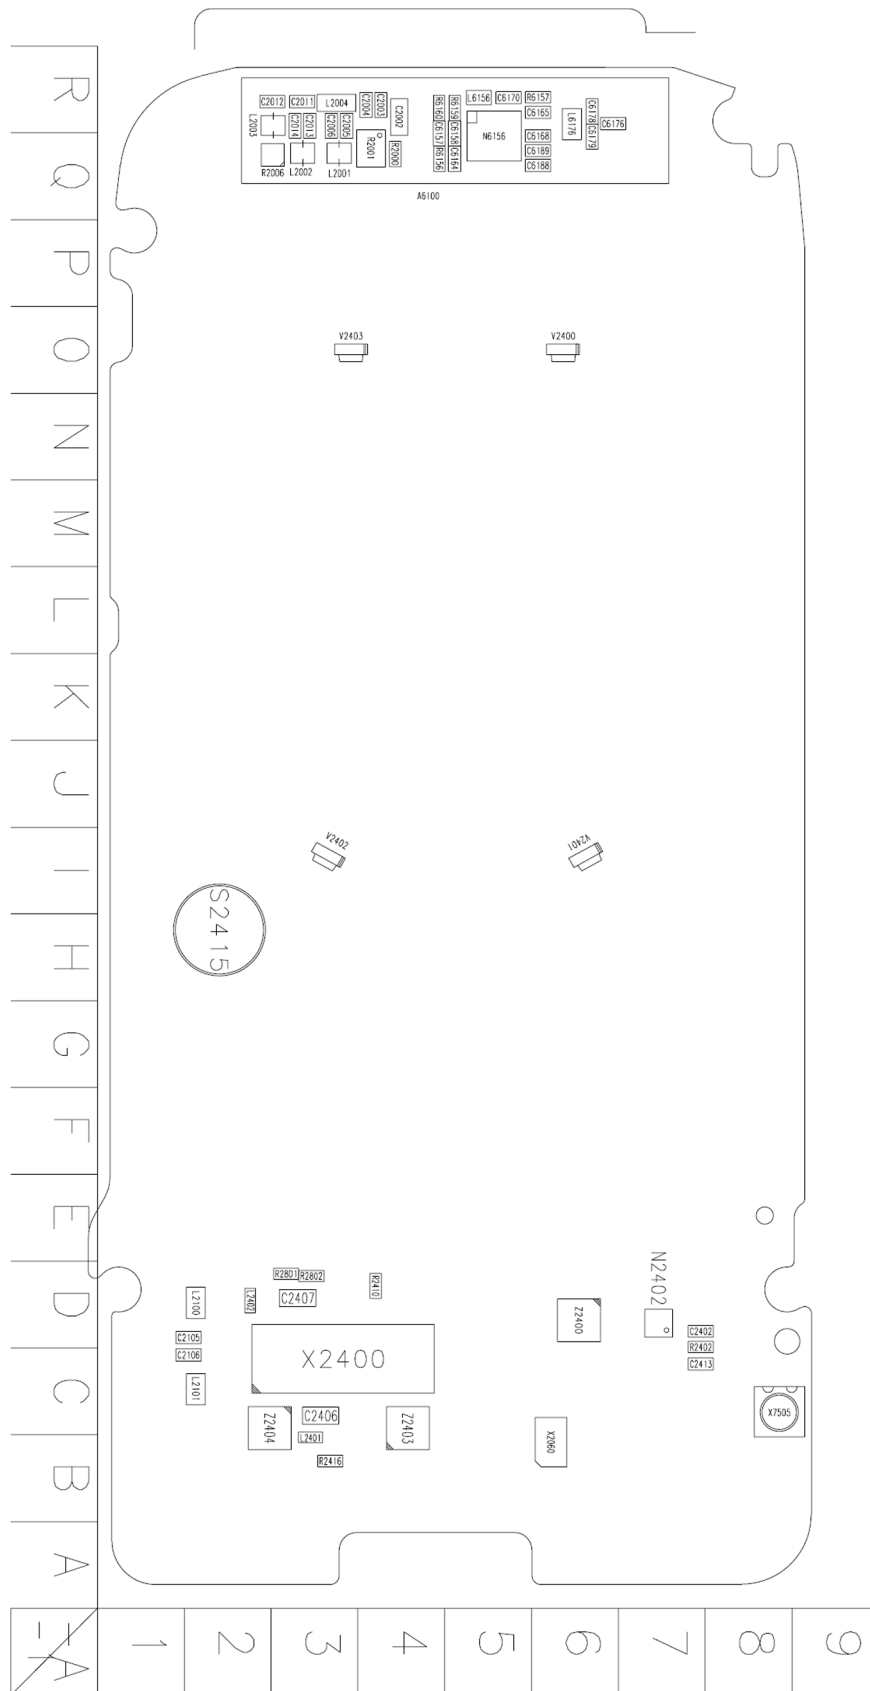


RM-198 lower block component layout - top (1VZ_12b)

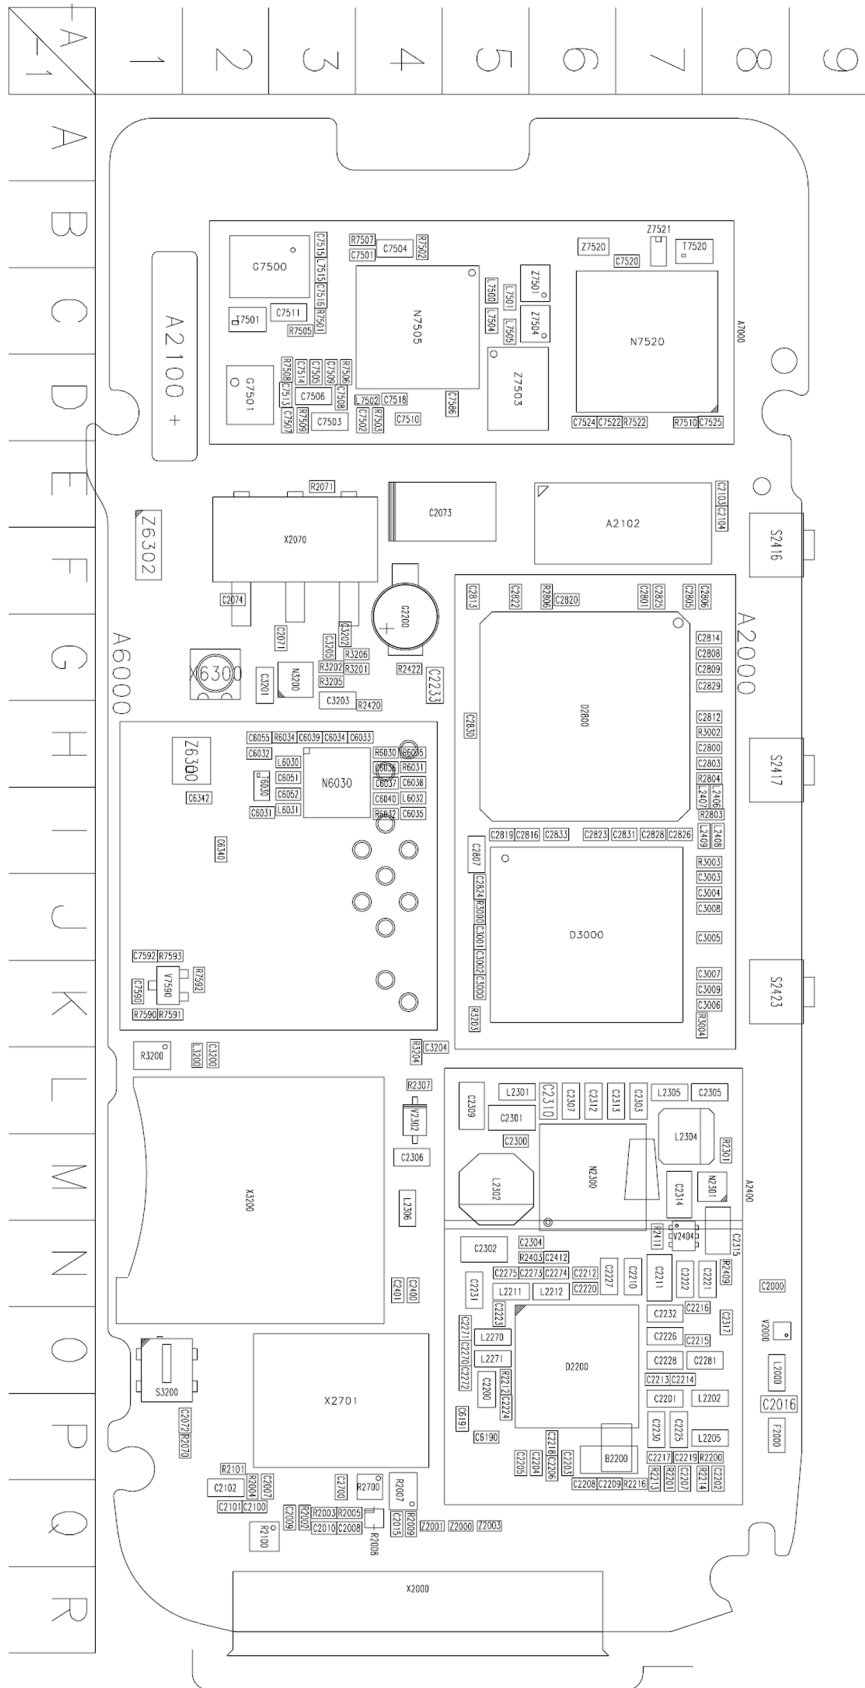

Upper block


RM-188/198 upper block component layout - top (1WJ_10b)

Note: This component layout applies to all RM-188 units and those RM-198 units, which are assembled without the HAC (Hearing Aid Coil). Note that the RM-198 can be assembled with or without the HAC.

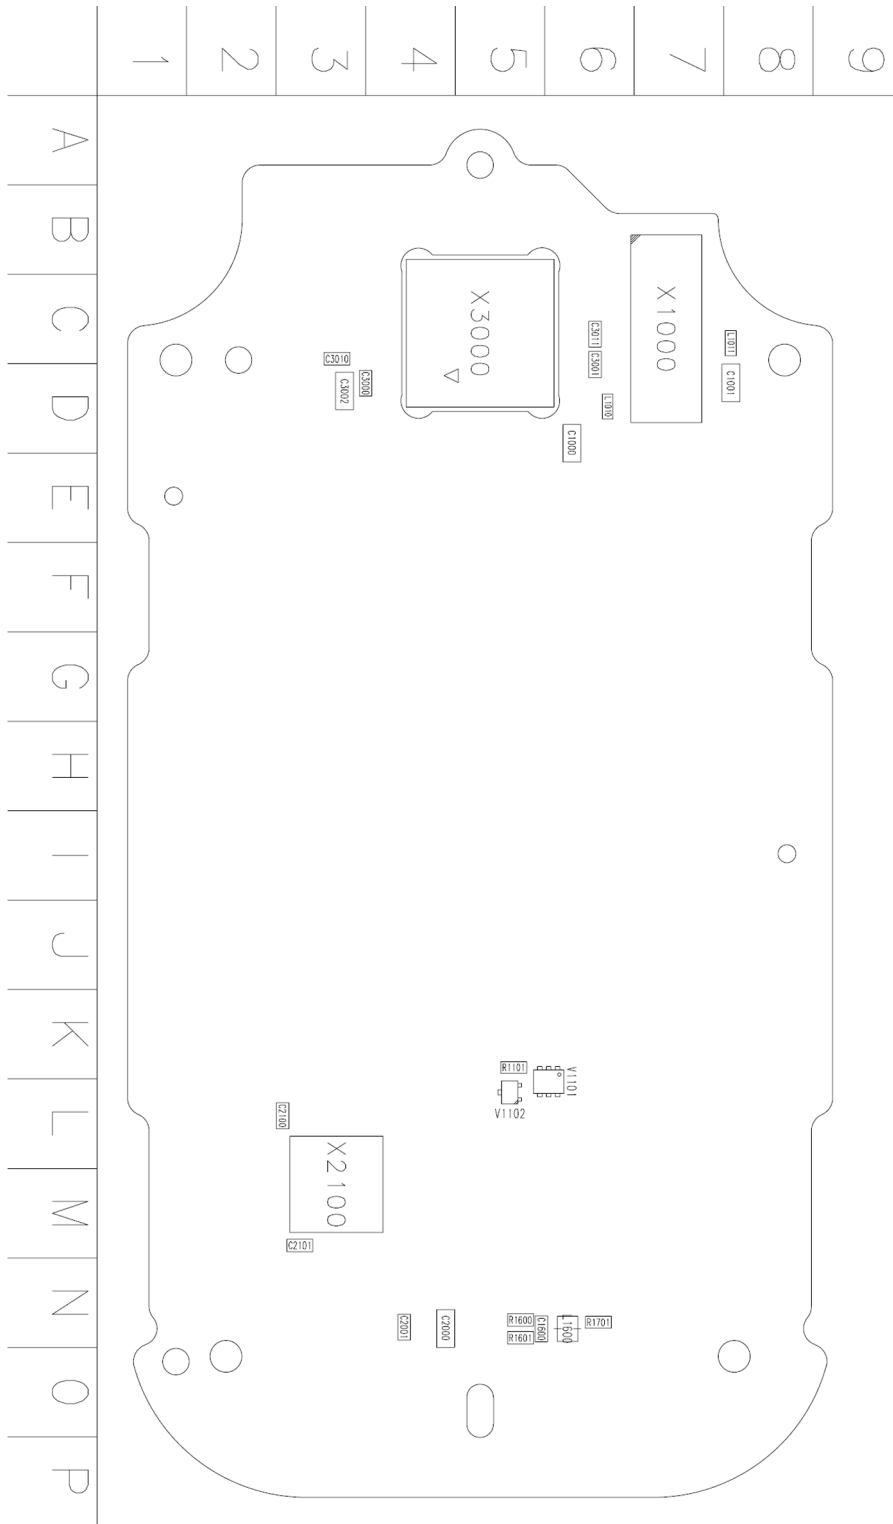


RM-188/198 upper block component layout - bottom (1WJ_10b)

Note: This component layout applies to all RM-188 units and those RM-198 units, which are assembled without the HAC (Hearing Aid Coil). Note that the RM-198 can be assembled with or without the HAC.

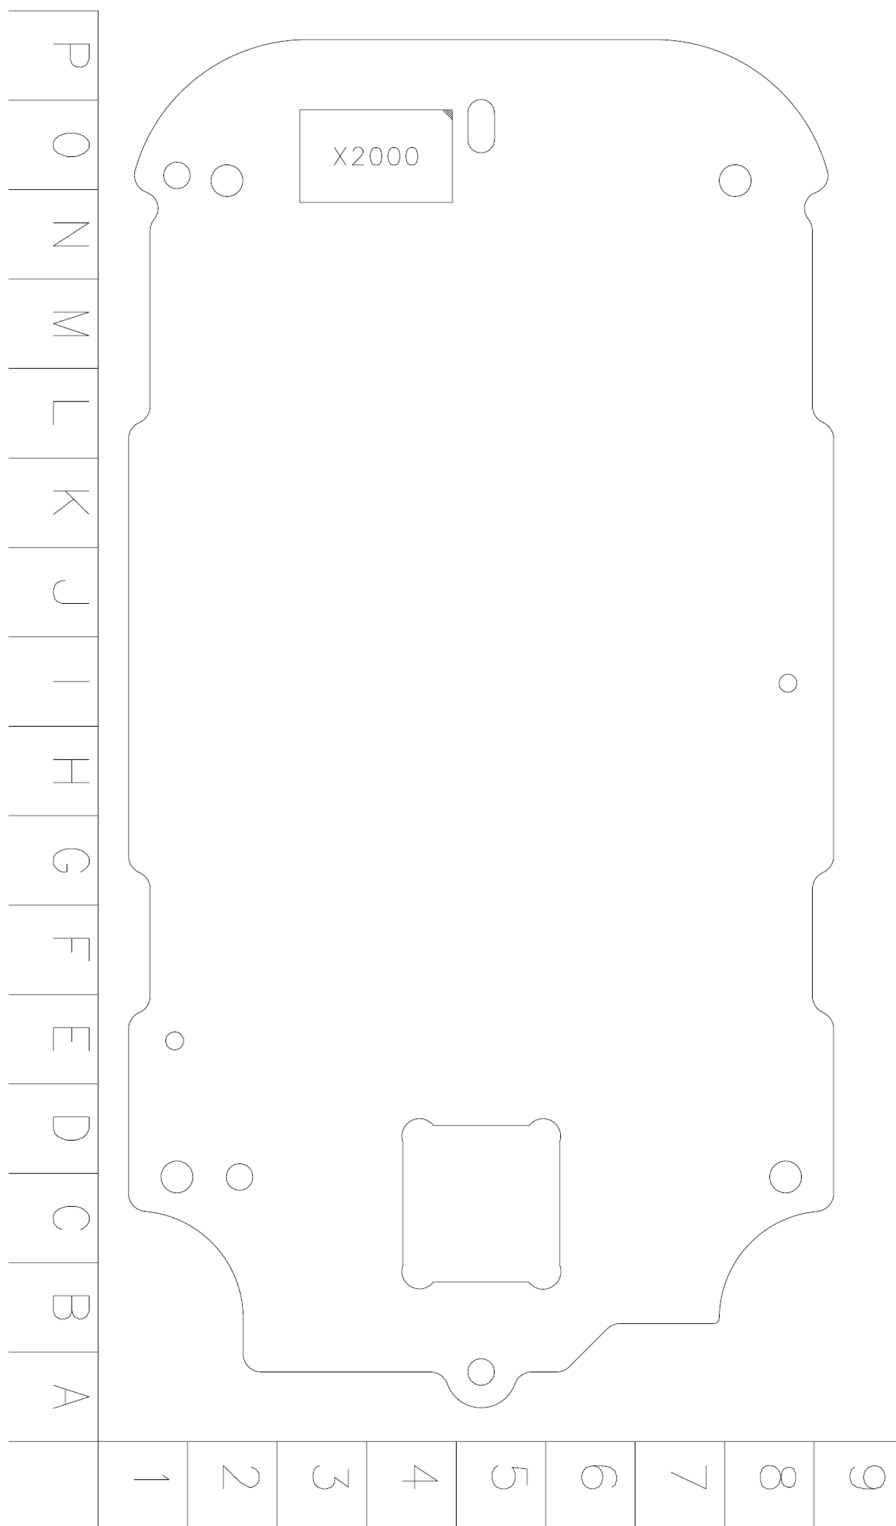


RM-198 upper block component layout with HAC - top (1WJ_10c)

Note: This component layout applies to those RM-198 units, which are assembled with the HAC (Hearing Aid Coil). Note that the RM-198 can be assembled with or without the HAC.

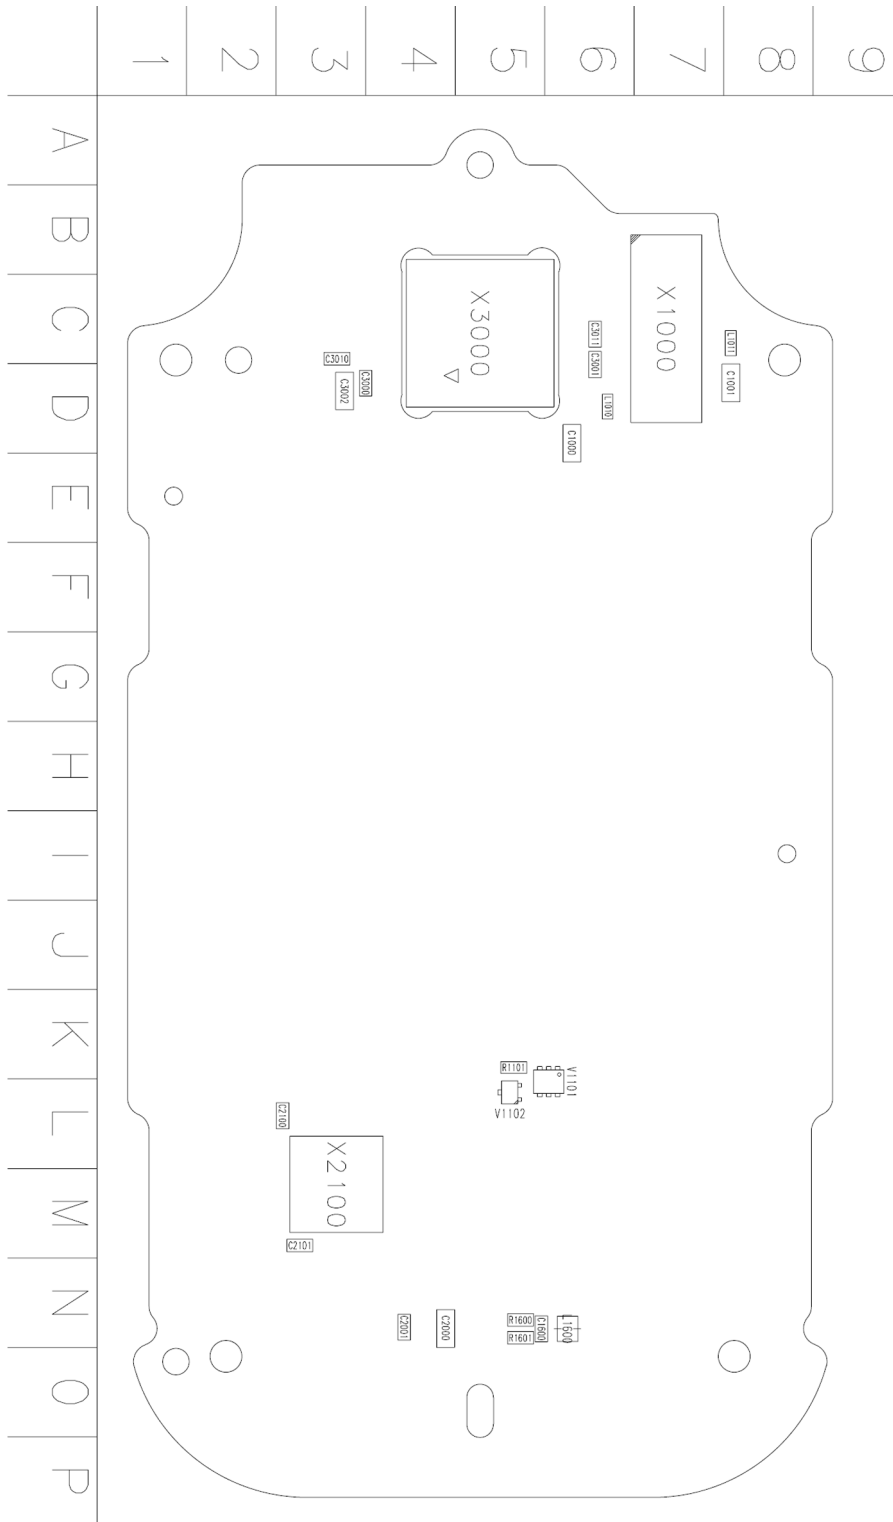

RM-198 upper block component layout with HAC - bottom (1WJ_10c)

Note: This component layout applies to those RM-198 units, which are assembled with the HAC (Hearing Aid Coil). Note that the RM-198 can be assembled with or without the HAC.

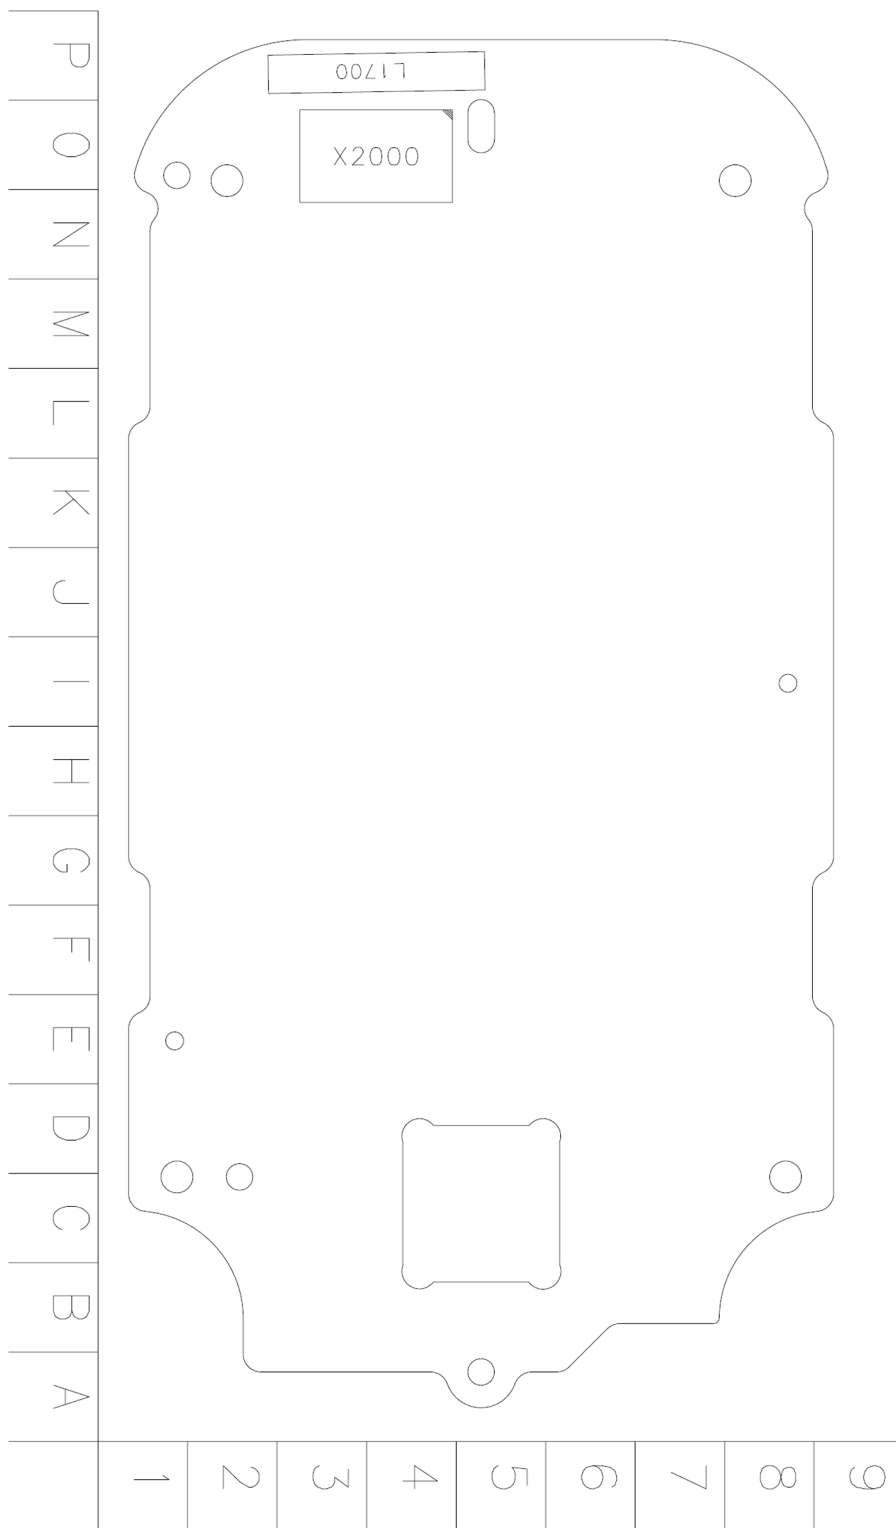

(This page left intentionally blank.)

Nokia Customer Care

3 — Service Software Instructions

(This page left intentionally blank.)

Table of Contents

Phoenix installation steps in brief	3-5
Installing Phoenix	3-6
Updating Phoenix installation	3-8
Uninstalling Phoenix	3-9
Repairing Phoenix installation	3-11
Phone data package overview	3-11
Installing phone data package	3-12
Uninstalling phone data package	3-15
Configuring users in Phoenix	3-17
Managing connections in Phoenix	3-17
Installing flash support files for FPS-10	3-19
Updating FPS-10 flash prommer software	3-22

List of Figures

Figure 2 Dongle not found	3-6
Figure 3 Disclaimer text	3-7
Figure 4 InstallShield Wizard Complete	3-8
Figure 5 Installation interrupted	3-9
Figure 6 Remove program	3-10
Figure 7 Finish uninstallation	3-10
Figure 8 Repair program	3-11
Figure 9 Data package setup information	3-13
Figure 10 Data package destination folder	3-14
Figure 11 InstallShield Wizard Complete	3-15
Figure 12 Uninstalling phone data package	3-16
Figure 13 Finishing data package uninstallation	3-16
Figure 14 Phoenix login	3-17
Figure 15 New user configured	3-17
Figure 16 Select mode: Manual	3-18
Figure 17 Connections list	3-19
Figure 18 Connection information	3-19
Figure 19 Product support module information (example from RM-1)	3-19
Figure 20 Flash update welcome dialog	3-20
Figure 21 Flash installation interrupted	3-20
Figure 22 Flash destination folder	3-21
Figure 23 Finish flash update	3-22
Figure 24 Prommer SW update finished	3-23
Figure 25 Prommer maintenance window	3-23
Figure 26 Flash directory window	3-24

(This page left intentionally blank.)

■ *Phoenix* installation steps in brief

Prerequisites

Recommended hardware requirements:

- Computer processor: Pentium 700 MHz or higher
- RAM 256 MB
- Disk space 100-300 MB

Supported operating systems:

- *Windows 2000* Service Pack 3 or higher
- *Windows XP* Service Pack 1 or higher

Context

Phoenix is a service software for reprogramming, testing and tuning phones.

Phoenix installation contains:

- Service software support for all phone models included in the package
- Flash update package files for programming devices
- All needed drivers for:
 - PKD-1 (DK2) dongle
 - DKU-2 USB cable

Note: Separate installation packages for flash update files and drivers are also available, but it is not necessary to use them unless there are updates between *Phoenix* service software releases. If separate update packages are used, they should be used after *Phoenix* and data packages have been installed.

The phone model specific data package includes all changing product specific data:

- Product software binary files
- Files for type label printing
- Validation file for the faultlog repair data reporting system
- All product specific configuration files for *Phoenix* software components

Note: *Phoenix* and phone data packages should only be used as complete installation packages. Uninstallation should be made from the *Windows* Control Panel.

To use *Phoenix*, you need to:

Steps

1. Connect a PKD-1 (DK2) dongle to the computer parallel port.
2. Install *Phoenix*.
3. Install the phone-specific data package.
4. Configure users.
5. Manage connection settings (depends on the tools you are using).
 - Update FPS-10 software

Note: There is no need to activate FPS-10.

- Activate SX-4 smart card, if you need tuning and testing functions.

Note: When FPS-10 is used only for product software updates, SX-4 smart card is not needed.

Results

Phoenix is ready to be used with FPS-10 flash prommer and other service tools.

■ Installing *Phoenix*

Prerequisites

- Check that a dongle is attached to the parallel port of your computer.
- Download the *Phoenix* installation package (for example, *phoenix_service_sw_2004_39_x_xx.exe*) to your computer (in *C:|TEMP*, for instance).
- Close all other programs.
- Depending on your operating system, administrator rights may be required to install *Phoenix*.
- If uninstalling or rebooting is needed at any point, you will be prompted by the InstallShield program.

Context

At some point during the installation procedure, you may get the following message:

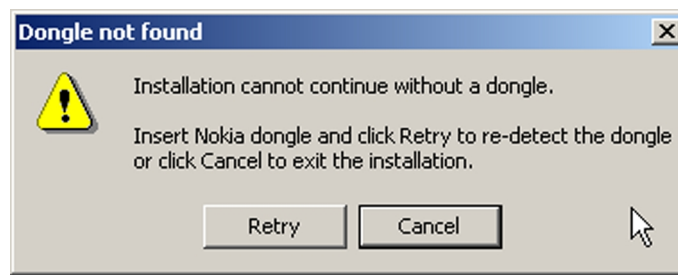


Figure 2 Dongle not found

This may be a result of a defective or too old PKD-1 dongle.

Check the COM/parallel ports used. After correcting the problem, you can restart the installation.

For more detailed information, please refer to *Phoenix* Help files.

Tip: Each feature in *Phoenix* has its own Help function, which can be activated while running the program. Press the **F1** key or the feature's **Help** button to activate a Help file.

Steps

1. To start the installation, run the application file (for example, *phoenix_service_sw_2004_39_x_xx.exe*).
2. In the *Welcome* dialogue, click **Next**.

3. Read the disclaimer text carefully and click **Yes**.

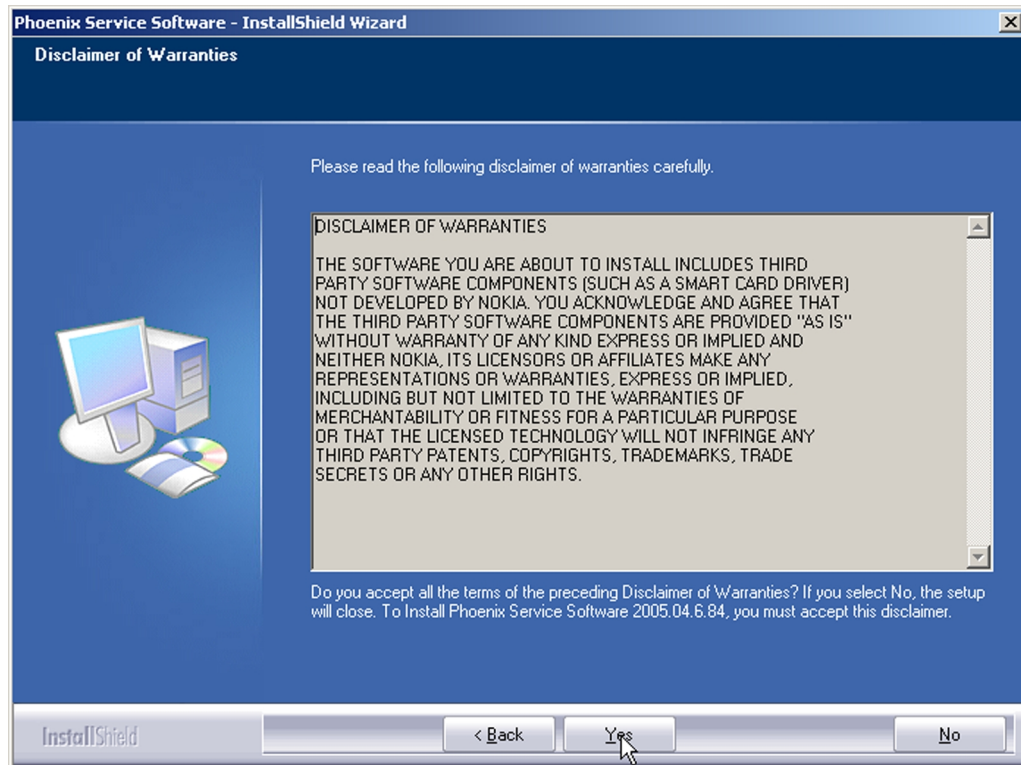


Figure 3 Disclaimer text

4. Choose the destination folder.
The default folder *C:\ProgramFiles\Nokia\Phoenix* is recommended.
5. To continue, click **Next**.
To choose another location, click **Browse** (not recommended).
6. Wait for the components to be copied.
The progress of the installation is shown in the *Setup Status* window.
7. Wait for the drivers to be installed and updated.
The process may take several minutes to complete.
If the operating system does not require rebooting, the PC components are registered right away.
If the operating system requires restarting your computer, the Install Shield Wizard will notify about it.
Select **Yes...** to reboot the PC immediately or **No...** to reboot the PC manually afterwards.
After the reboot, all components are registered.
Note: *Phoenix* does not work, if the components have not been registered.

8. To end the installation, click **Finish**.

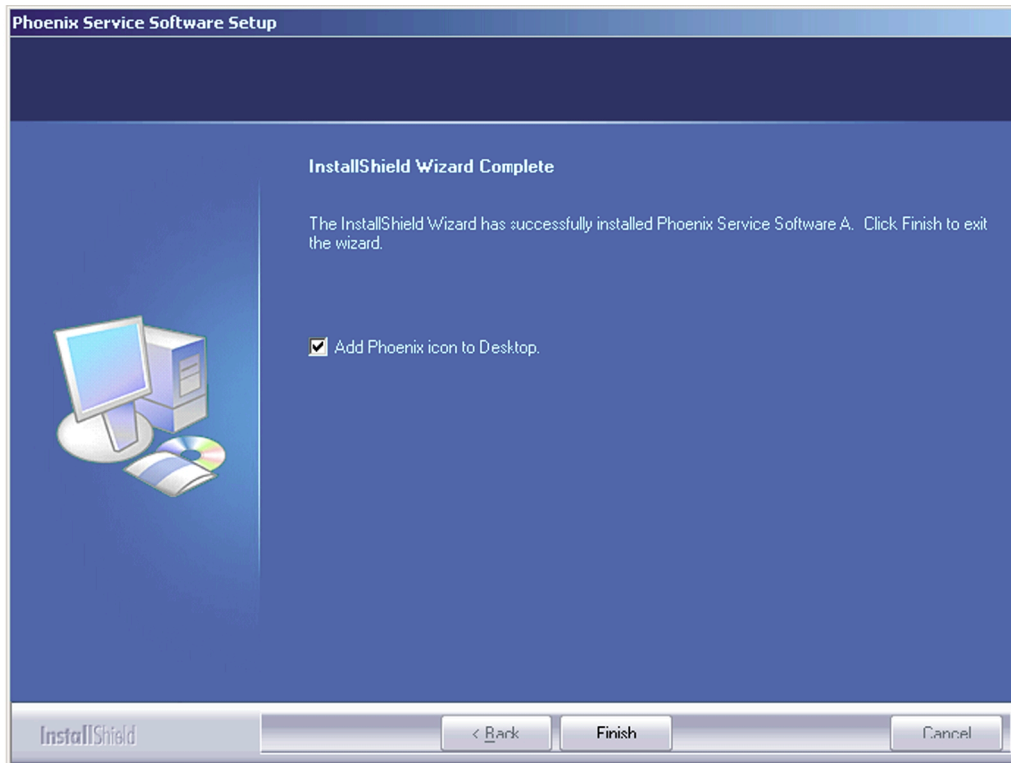


Figure 4 InstallShield Wizard Complete

Next actions

After the installation, *Phoenix* can be used after:

- installing phone model specific data package for *Phoenix*
- configuring users and connections

FPS-10 flash prommer can be used after updating their flash update package files.

■ Updating *Phoenix* installation

Context

- If you already have the *Phoenix* service software installed on your computer, you need to update the software when new versions are released.
- To update *Phoenix*, you need to follow the same steps as when installing it for the first time.
- When you are updating, for example, from version **a14_2004_16_4_47** to **a15_2004_24_7_55**, the update will take place automatically without uninstallation.
- Always use the latest available versions of both *Phoenix* and the phone-specific data package. Instructions can be found in the phone model specific Technical Bulletins and phone data package *readme.txt* files (shown during installation).
- If you try to update *Phoenix* with the same version you already have (for example, **a15_2004_24_7_55** to **a15_2004_24_7_55**), you are asked if you want to uninstall the existing version. In this case you can choose between a total uninstallation or a repair installation in a similar way when choosing to uninstall the application from the *Windows* Control Panel.
- If you try to install an older version (for example, downgrade from **a15_2004_24_7_55** to **a14_2004_16_4_47**), installation will be interrupted.

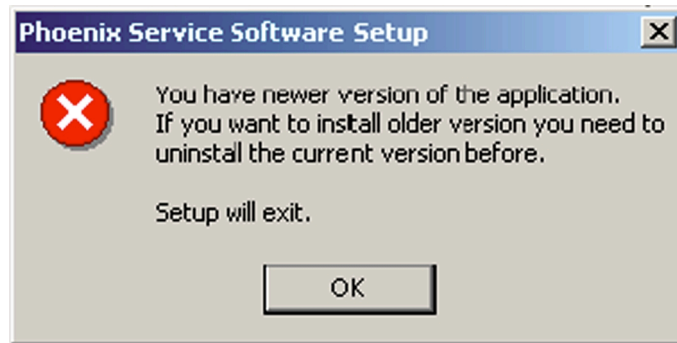


Figure 5 Installation interrupted

- Always follow the instructions on the screen.

Steps

1. Download the installation package to your computer hard disk.
2. Close all other programs.
3. Run the application file (for example, *phoenix_service_sw_2004_39_x_xx.exe*).

Results

A new *Phoenix* version is installed and driver versions are checked and updated.

■ Uninstalling *Phoenix*

Context

You can uninstall *Phoenix* service software manually from the *Windows* Control Panel.

Steps

1. Open the **Windows Control Panel**, and choose **Add/Remove Programs**.

2. To uninstall *Phoenix*, choose **Phoenix Service Software**→**Change/Remove**→**Remove** .

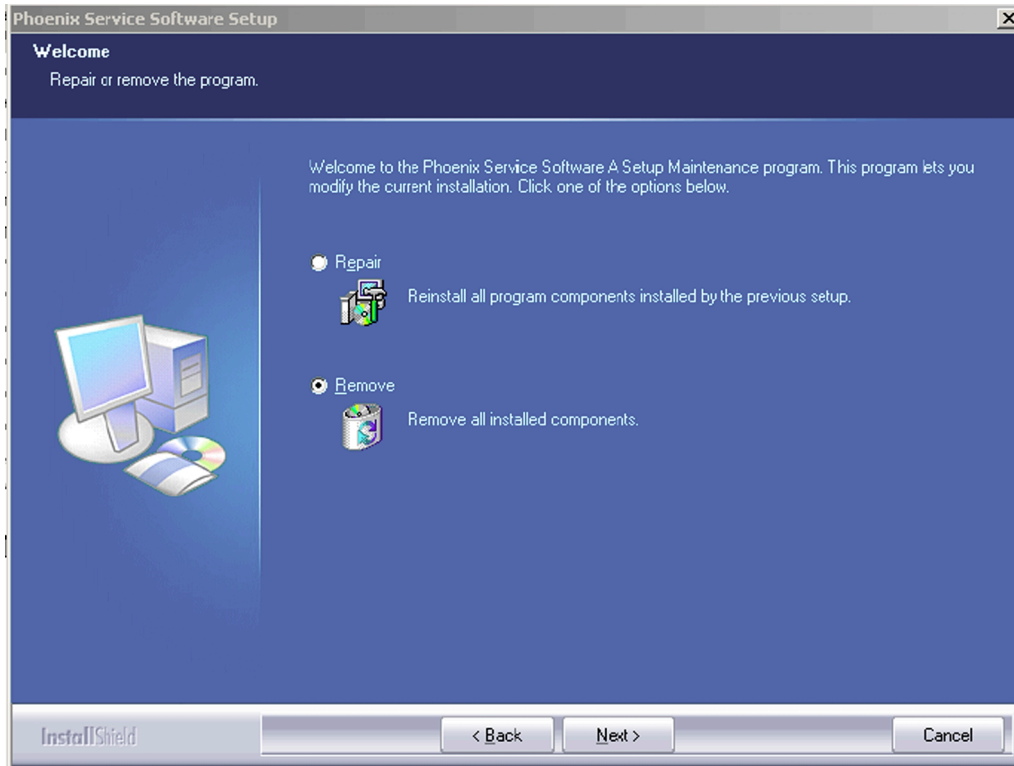


Figure 6 Remove program

The progress of the uninstallation is shown.

3. If the operating system does not require rebooting, click **Finish** to complete.

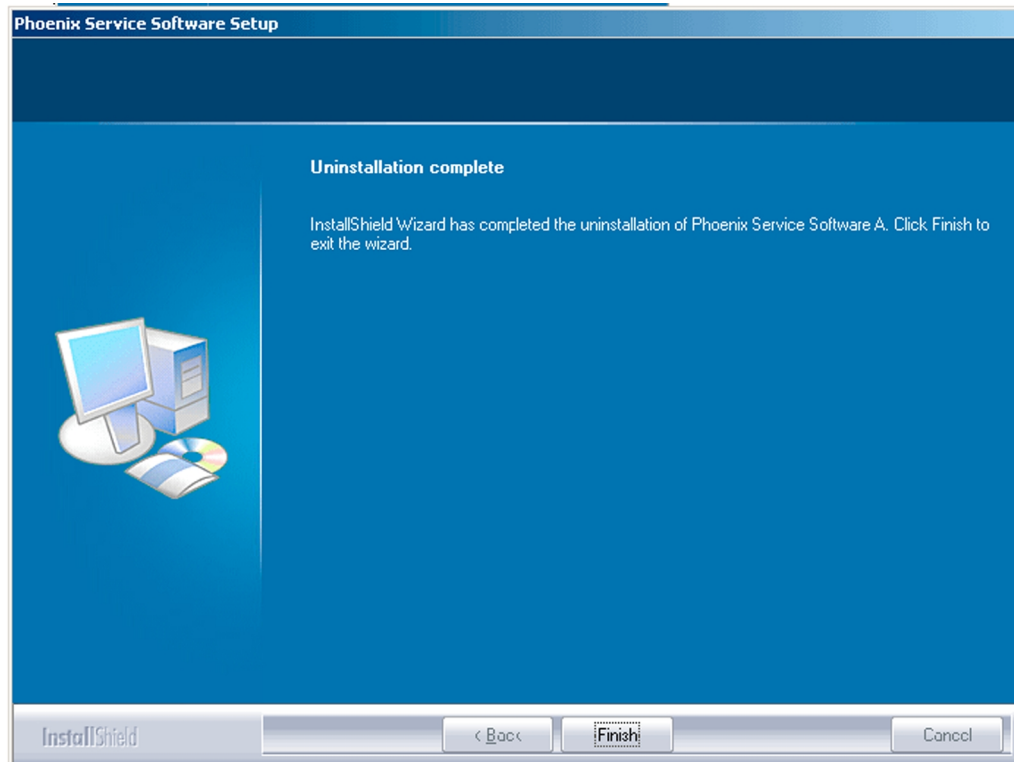


Figure 7 Finish uninstallation

If the operating system requires rebooting, InstallShield Wizard will notify you. Select **Yes...** to reboot the PC immediately and **No...** to reboot the PC manually afterwards.

■ Repairing *Phoenix* installation

Context

If you experience any problems with the service software or suspect that files have been lost, use the repair function before completely reinstalling *Phoenix*.

Note: The original installation package (for example, *phoenix_service_sw_a15_2004_24_7_55.exe*) must be found on your PC when you run the repair setup.

Steps

1. Open **Windows Control Panel**→**Add/Remove Programs** .
2. Choose **Phoenix Service Software**→**Change/Remove** .
3. In the following view, select **Repair**.

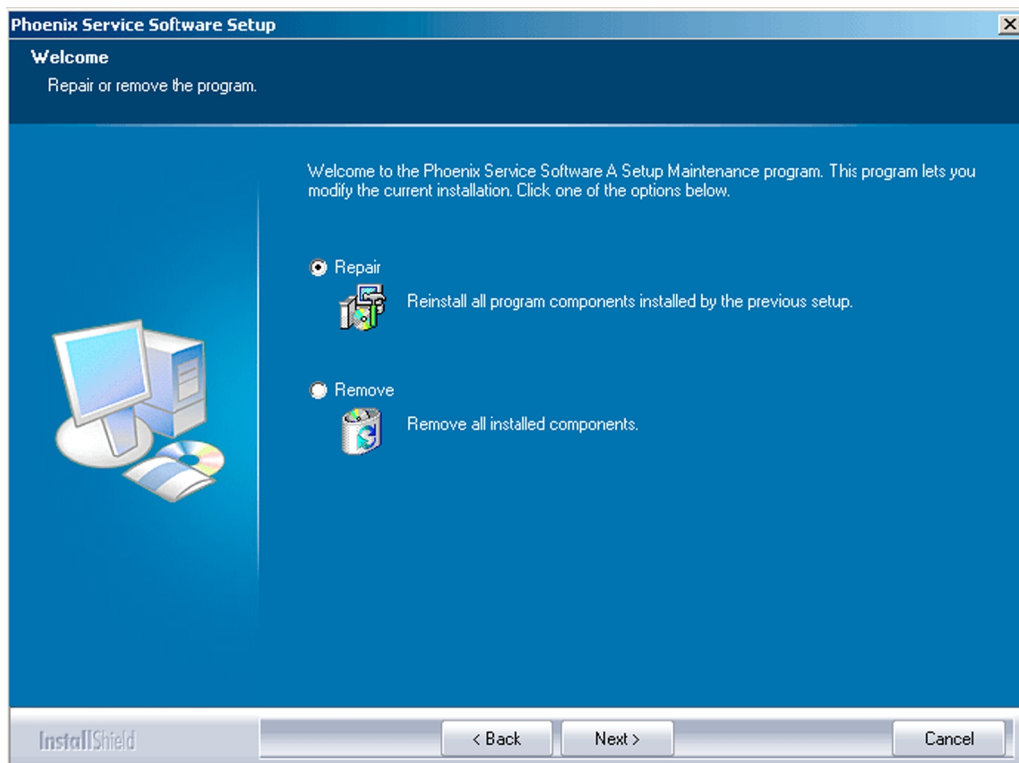


Figure 8 Repair program

Phoenix reinstalls components and registers them.

The procedure is the same as when updating *Phoenix*.

4. To complete the repair, click **Finish**.

■ Phone data package overview

Each product has its own data package (DP). The product data package contains all product-specific data files to make the Phoenix service software and tools usable with a certain phone model.

The phone data package contains the following:

- Product software binary files

- Files for type label printing
- Validation file for the fault log repair data reporting system
- All product-specific configuration files for Phoenix software components

Data files are stored in **C:\Program Files\Nokia\Phoenix** (default).

■ Installing phone data package

Prerequisites

- A phone-specific data package contains all data required for the *Phoenix* service software and service tools to be used with a certain phone model.
- Check that a dongle is attached to the parallel port of your computer.
- Install *Phoenix* service software.
- Download the installation package (for example, *XX-XX_dp_EA_v_1_0.exe*) to your computer (for example, in C:\TEMP).
- Close all other programs.

(XX-XX = type designator of the product)


If you already have *Phoenix* installed on your computer, you will need to update it when a new version is released.

Note: Often *Phoenix* and the phone-specific data package come in pairs, meaning that a certain version of *Phoenix* can only be used with a certain version of a data package. Always use the latest available versions of both. Instructions can be found in phone-specific Technical Bulletins and *readme.txt* files of data packages.

Steps

1. To start the installation, run the application file (for example, *XX-XX_dp_EA_v_1_0.exe*),
Wait for the installation files to be extracted.

2. Click **Next**.

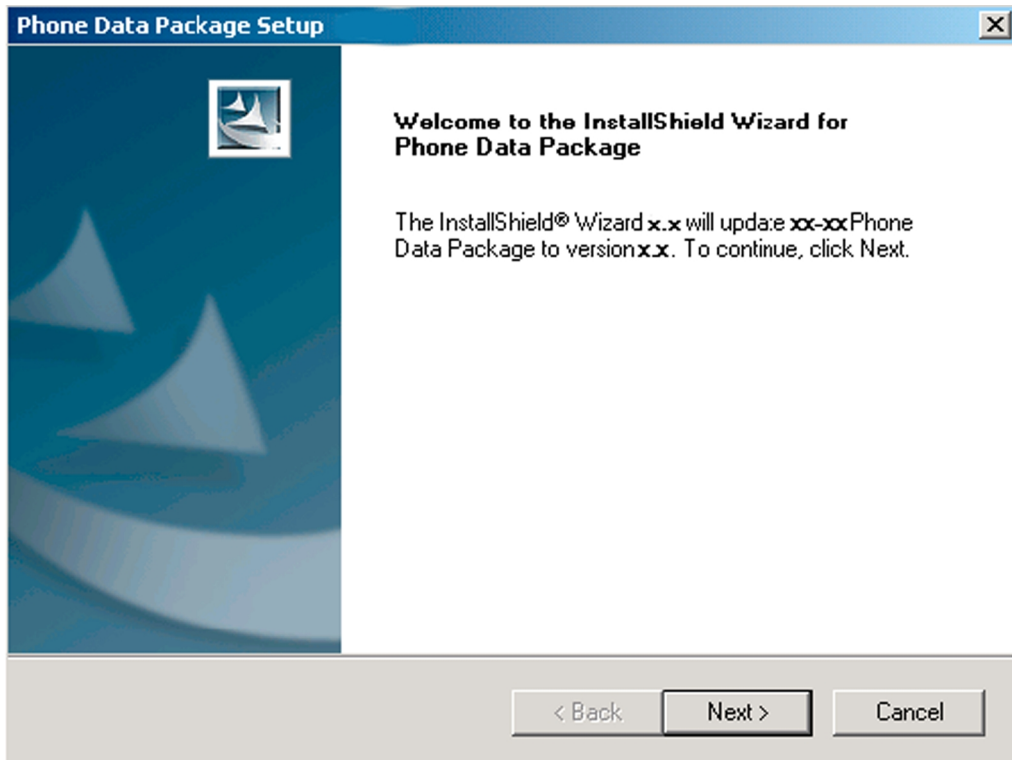

3. In the following view you can see the contents of the data package. Read the text carefully. There is information about the *Phoenix* version required with this data package.

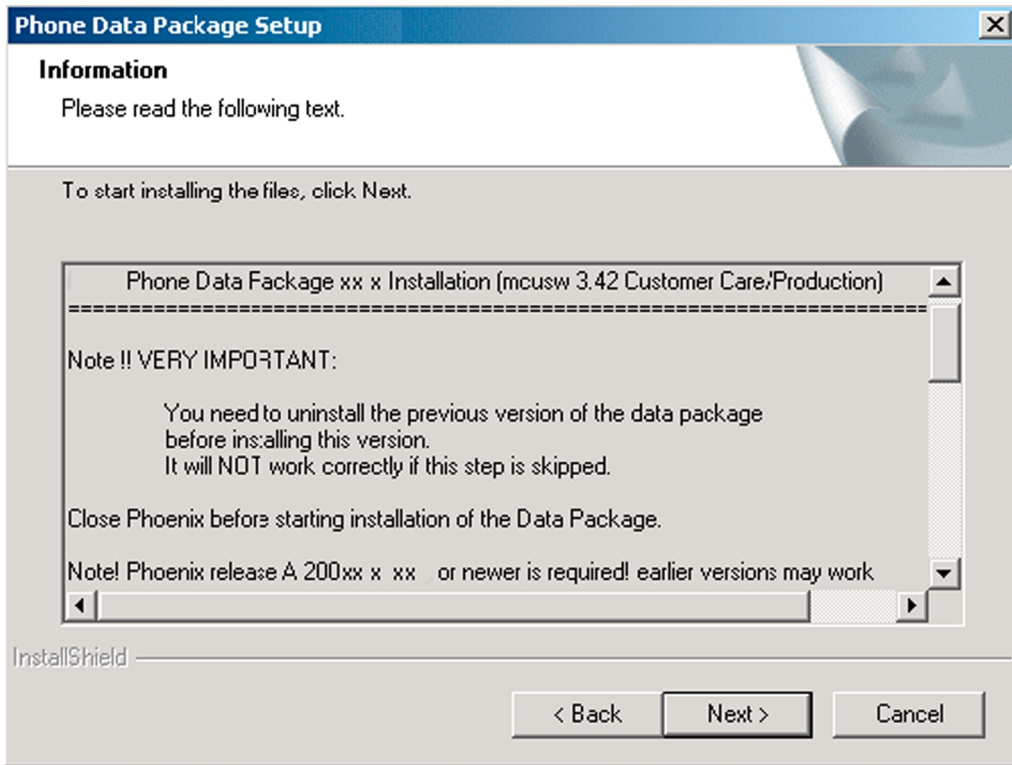


Figure 9 Data package setup information

4. To continue, click **Next**.

5. Choose the destination folder, and click **Next** to continue.


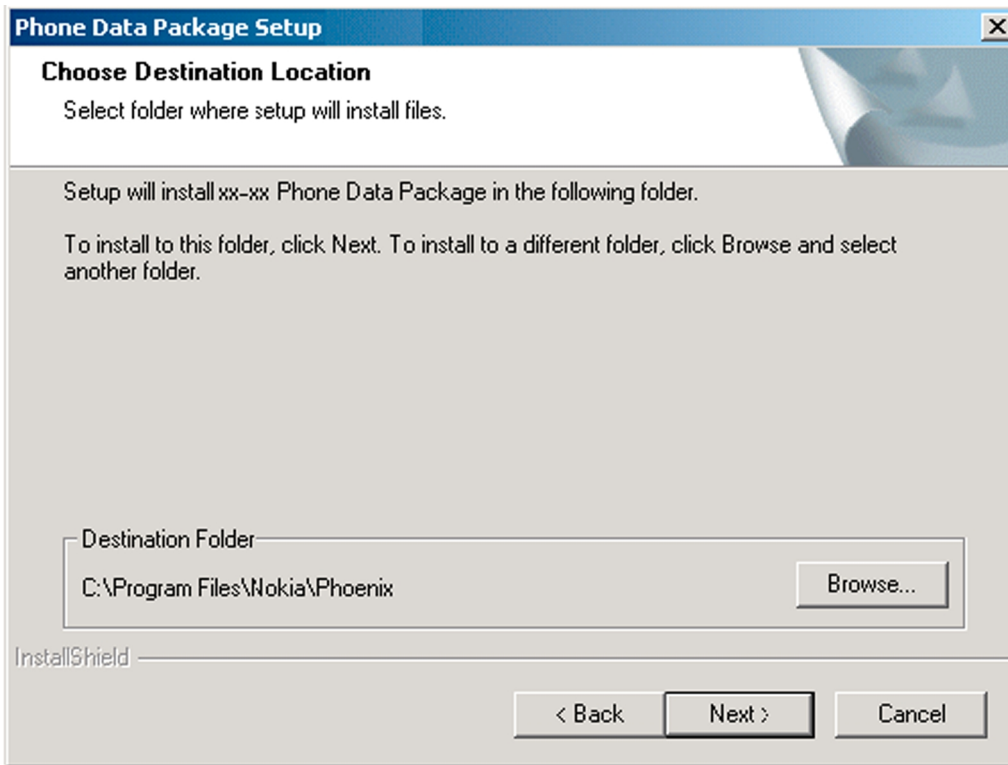


Figure 10 Data package destination folder

The InstallShield Wizard checks where *Phoenix* is installed, and the directory is shown.

6. To start copying the files, click **Next**.

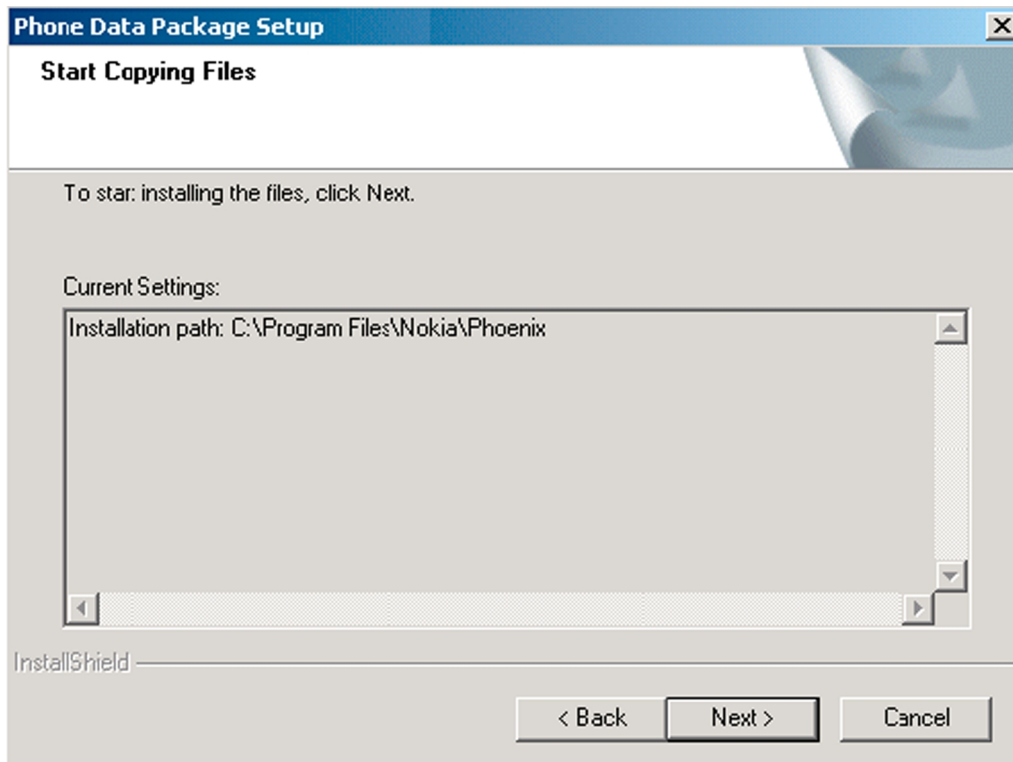

Phone model specific files are installed. Please wait.

7. To complete the installation, click **Finish**.

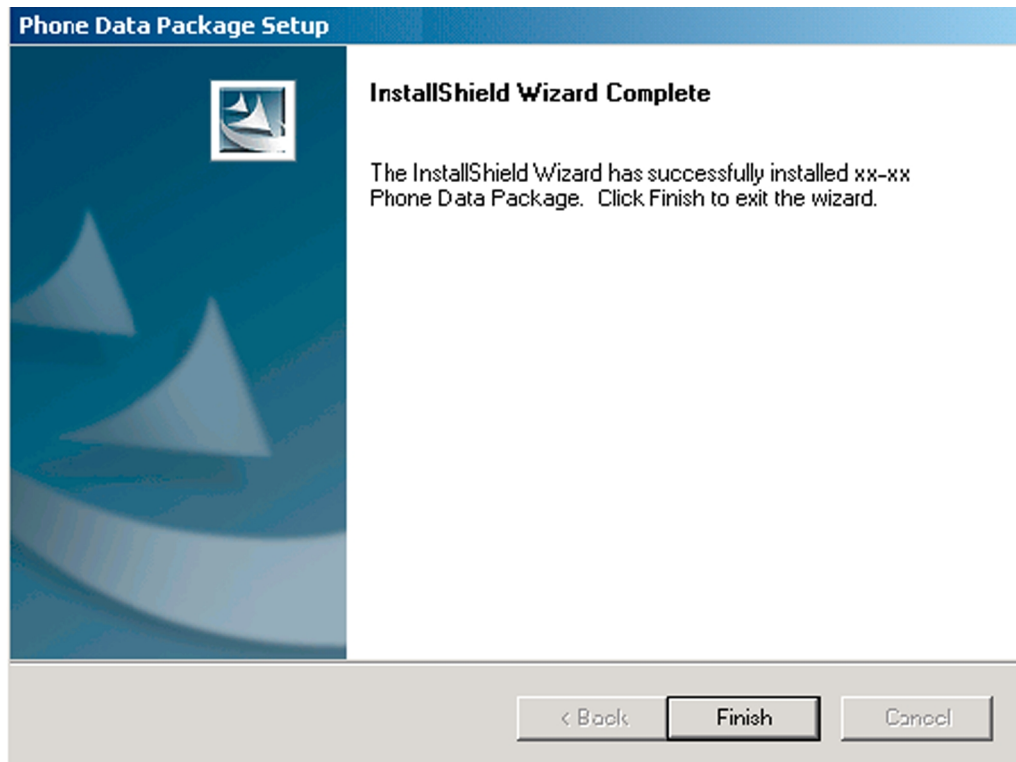


Figure 11 InstallShield Wizard Complete

Next actions

Phoenix can be used for flashing phones and printing type labels after:

- Configuring users
- Managing connections

FPS-10 can be used after updating their flash update package files.

■ Uninstalling phone data package

Context

There is no need to uninstall an older version of a data package, unless instructions to do so are given in the *readme.txt* file of the data package and bulletins related to the release.

Please read all related documents carefully.

Steps

1. Locate the data package installation file (e.g. *XX-XX_dp_EA_v_1_0.exe*) from your computer.
2. To start the uninstallation procedure, double-click the data package installation file.

3. To uninstall the data package, click **OK** or to interrupt the uninstallation, click **Cancel**.

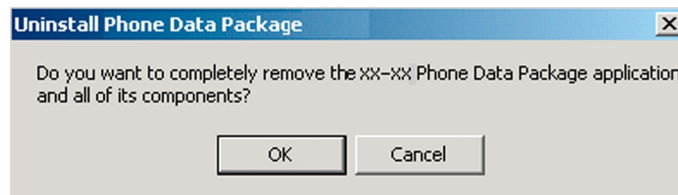


Figure 12 Uninstalling phone data package

4. When the data package is uninstalled, click **Finish**.

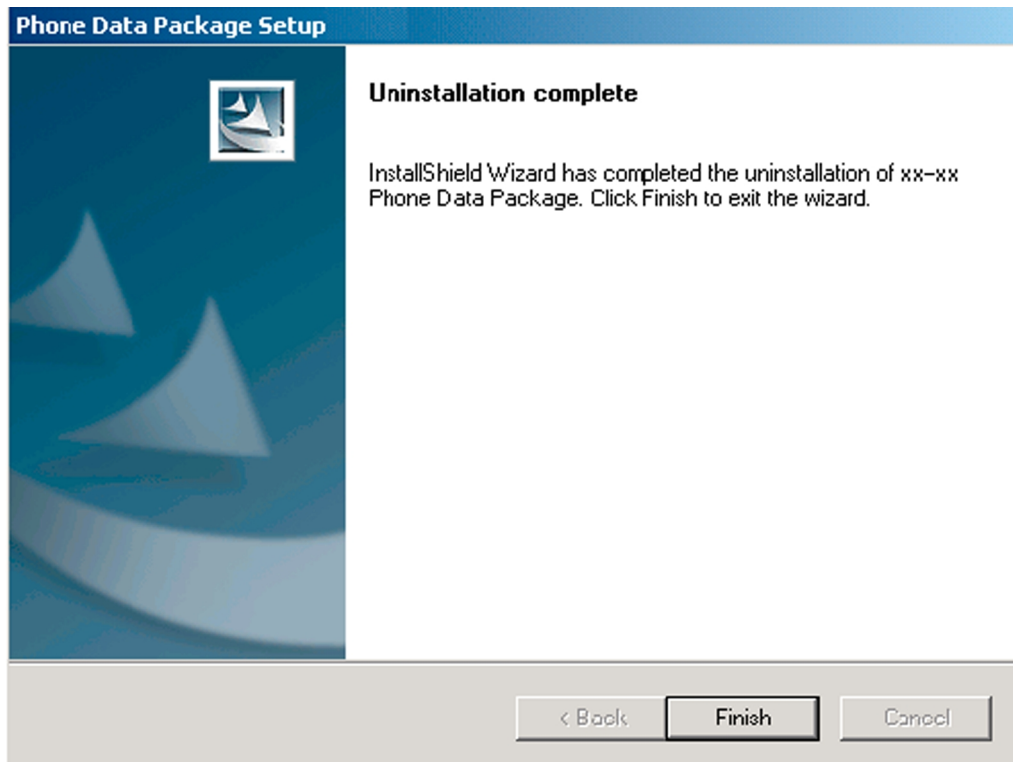


Figure 13 Finishing data package uninstallation

Alternative steps

- You can also uninstall the data package manually from **Control Panel**→**Add/Remove Programs**→**xx-xx* Phone Data Package** . (*= type designator of the phone).

■ Configuring users in *Phoenix*

Steps

1. Start *Phoenix* service software, and log in.

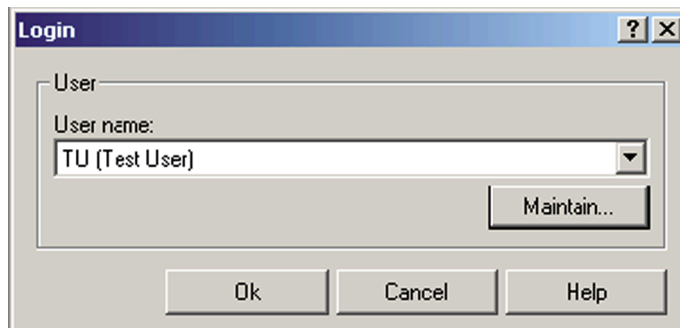


Figure 14 Phoenix login

- If the user ID is already configured, select s/he from the *User name* drop-down list, and click **OK**.
2. To add a new user, or to edit existing ones, click **Maintain**.
 3. To add a new user, click **New**.
 4. Type in the name and initials of the user, and click **OK**.
The user is added to the user name list.
 5. Select the desired user from the *User name* drop-down list, and click **OK**.

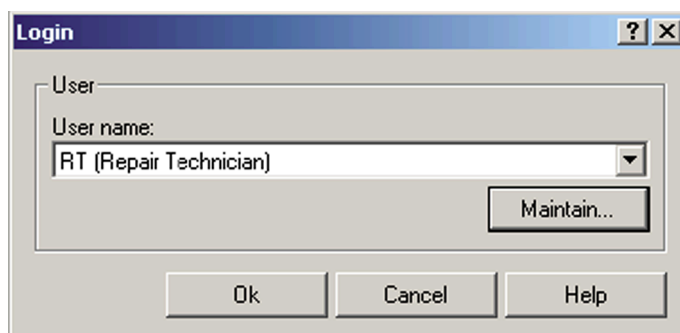


Figure 15 New user configured

■ Managing connections in *Phoenix*

Context

With the **Manage Connections** feature you can edit and delete existing connections or create new ones.


Note: After choosing the desired connection, and connecting the phone to a PC for the first time, allow the PC to install the USB device drivers first. Please note that this may take some time to complete.

If there are problems after the driver installation, check that the USB connection is active from the **Windows Control Panel**. If the problem persists, contact the local PC support.

Steps

1. Start *Phoenix*, and log in.
2. Choose **File**→**Manage Connections...**

3. To add a new connection, click **Add**.

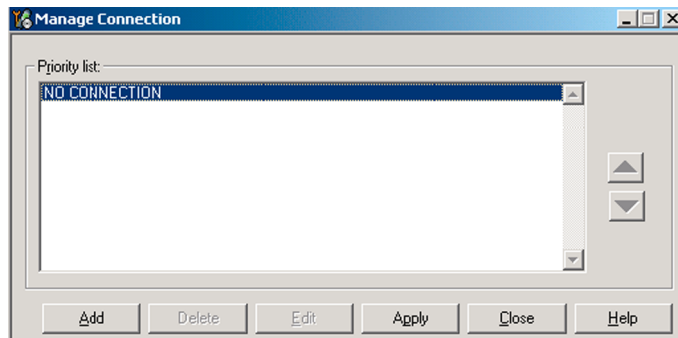

4. Select **Manual** mode, and click **Next** to continue.

If you want to create the connection using the Connection Wizard, connect the tools and a phone to your PC. The wizard will automatically try to configure the correct connection.

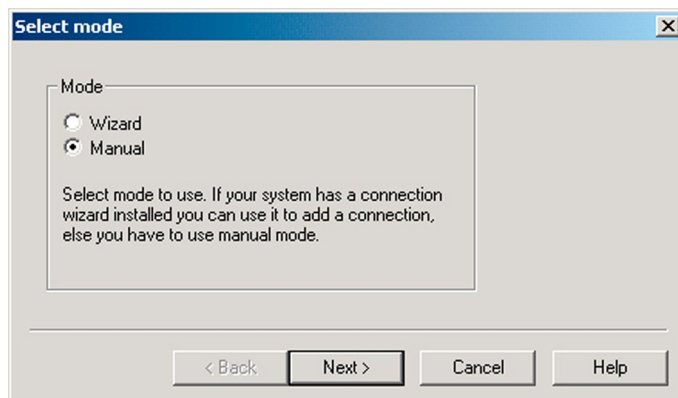


Figure 16 Select mode: Manual

- i For an FPS-10 flash prommer with a **USB Connection**, choose the following connection settings:
 - Media: **FPS-10 USB**
 - DEVICE_INDEX: **0**
 - SERIAL_NUM: See Serial No from the label attached to the bottom of FPS-10
 - ACTIVE_MEDIA: **USB**
- ii For an FPS-10 flash prommer with a **LAN connection**, choose the following connection settings:
 - Media: **FPS-10 TCP/IP**
 - NET_SERV_NAME: Click **Scan....** Choose your own FPS-10 device based on the correct MAC address. See Serial No from the label attached to the bottom of your FPS-10.
 - PORT_NUM: Use the default value, and click **Next**.
 - PROTOCOL_FAMILY: Use the default value, and click **Next**.
 - SOCKET_TYPE: Use the default value, and click **Next**.
 - TX_BUFFER_SIZE: Use the default value, and click **Next**.
 - RX_BUFFER_SIZE: Use the default value, and click **Next**.
- iii For an FPS-8 flash prommer, choose the following connection settings:
 - Media: FPS-8
 - PORT_NUM: COM Port where FPS-8 is connected
 - COMBOX_DEF_MEDIA: **FBUS**

- iv For a plain **USB connection**, choose the following connection settings:
- **Note:** First connect the DKU-2 USB cable between the PC USB port and phone.
 - Media: USB
5. To complete the configuration, click **Finish**.
6. Click the connection you want to activate. Use the up/down arrows located on the right hand side to move it on top of the list, then click **Apply**.

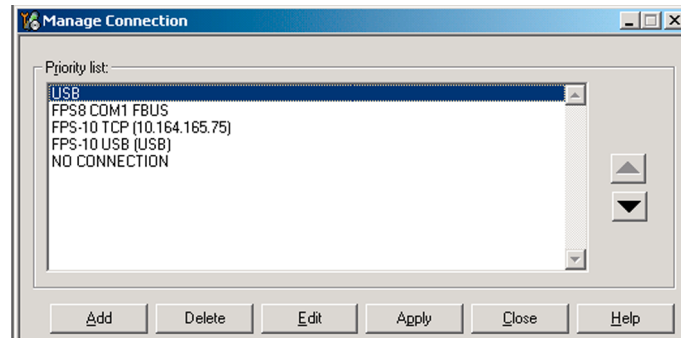


Figure 17 Connections list

The connection is activated, and it can be used after closing the *Manage Connection* window. The connection information is shown at the right hand bottom corner of the screen.



Figure 18 Connection information

7. To use the connection, connect the phone to your PC with correct service tools. Make sure the phone is switched on, and then choose **File**→**Scan Product**.

Results

The product support module information appears in the status bar:

V 2.0436v19.1 , 18-10-04 , RM-1 , (c) NOKIA. / V 2.39.126 , 18-10-04 , RM-1 , (c)

Figure 19 Product support module information (example from RM-1)

■ Installing flash support files for FPS-10

Prerequisites

Note: You need to install flash support files for FPS-10 only, if you don't have the latest Phoenix available or the flash support files have changed after the latest Phoenix release.

- Flash support files are installed automatically, when you install Phoenix. Use Phoenix packages later than June 2006.
- Normally it is enough to install Phoenix and the phone-specific data package because the Phoenix installation always includes the latest flash update package files for FPS-10.
- A separate installation package for flash support files is available, and the files can be updated according to this instruction, if updates appear between new Phoenix / data package releases

Context

If you are not using a separate installation package, you can skip this section and continue with updating FPS-10 flash prommer software after installing a new phone data package.

Steps

1. To begin installation, double-click *flash_update_x.yy.exe*.

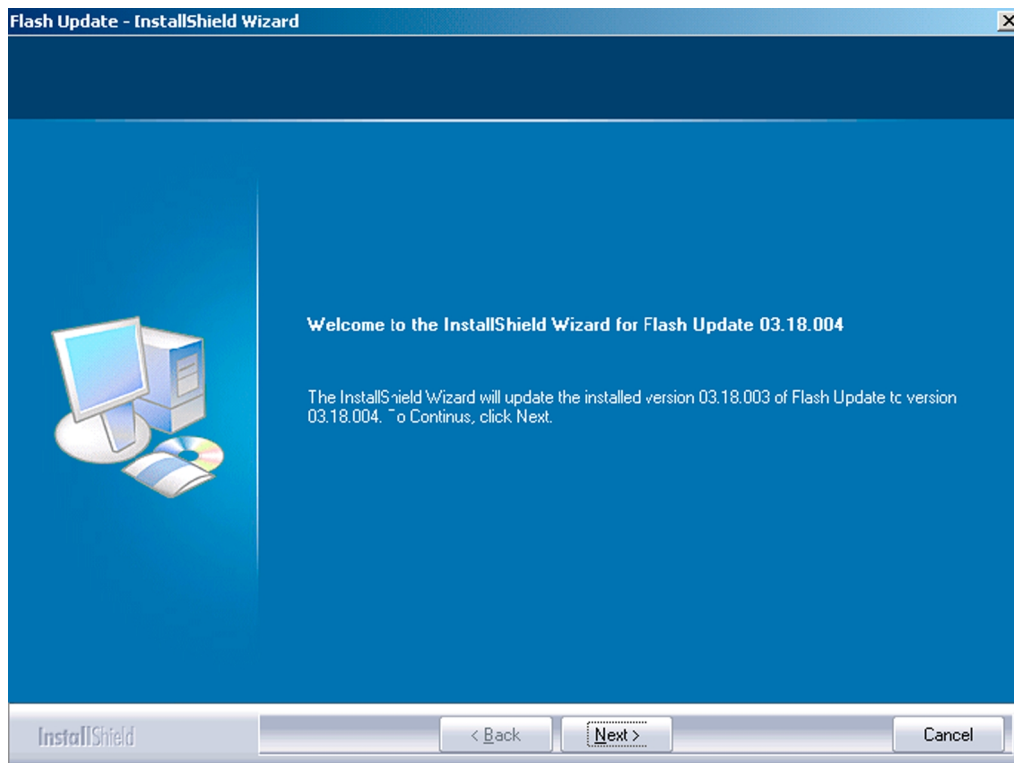


Figure 20 Flash update welcome dialog

- If the same version of Flash Update package already exists, and you want to reinstall it, the previous package is first uninstalled. Restart installation again after that.
2. If you try to downgrade the existing version to older ones, the setup will be aborted. If you really want to downgrade, uninstall newer files manually from **Control Panel** and then rerun the installation again.

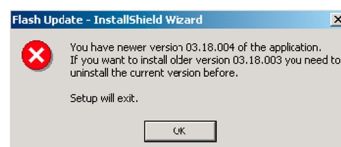


Figure 21 Flash installation interrupted

If an older version exists on your PC and it needs to be updated, click **Next** to continue installation.

3. It is highly recommended to install the files to the default destination folder *C:\Program Files\Nokia\Phoenix*. Click **Next** to continue.

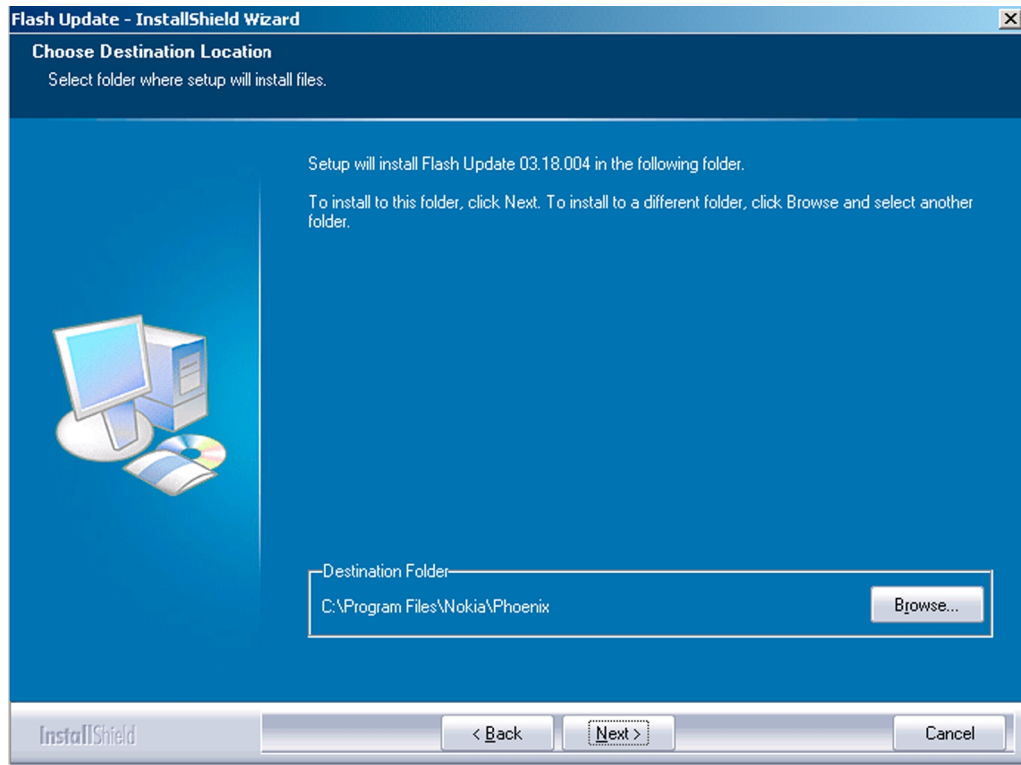


Figure 22 Flash destination folder

When installing the flash update files for the first time you may choose another location by selecting **Browse**. However, this is not recommended.

4. To complete the installation procedure, click **Finish** .

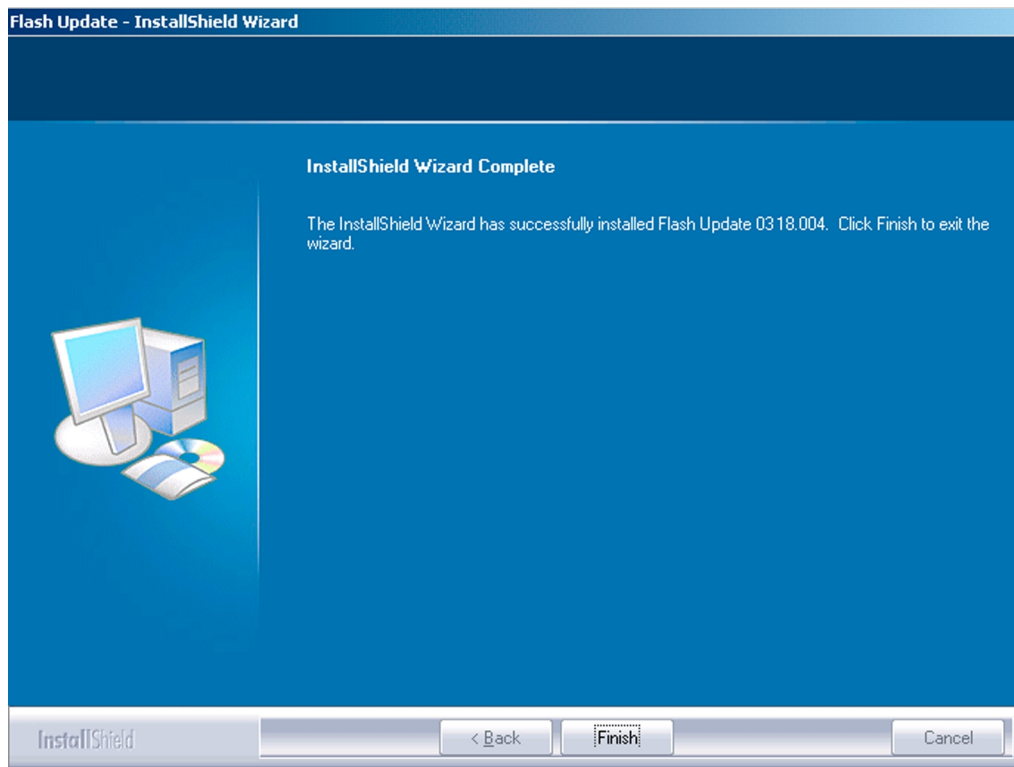


Figure 23 Finish flash update

Next actions

FPS-10 flash prommers must be updated using Phoenix!

■ Updating FPS-10 flash prommer software

Steps

1. Start *Phoenix Service Software* and log in, manage connection correctly for your flash prommer.
2. Choose **Flashing**→**Prommer maintenance** .
3. When the new flash update package is installed to the computer you will be asked to update the files to your Prommer. To update the files, click **Yes**. Click **OK** if the computer informs you about an unsafe removal of the device.
4. Alternatively you can update the FPS-10 flash prommer software by clicking the **Update** button.

- Wait until you are notified that update has been successful; the procedure will take a couple of minutes. Click **OK** to close the *Update Done* window.

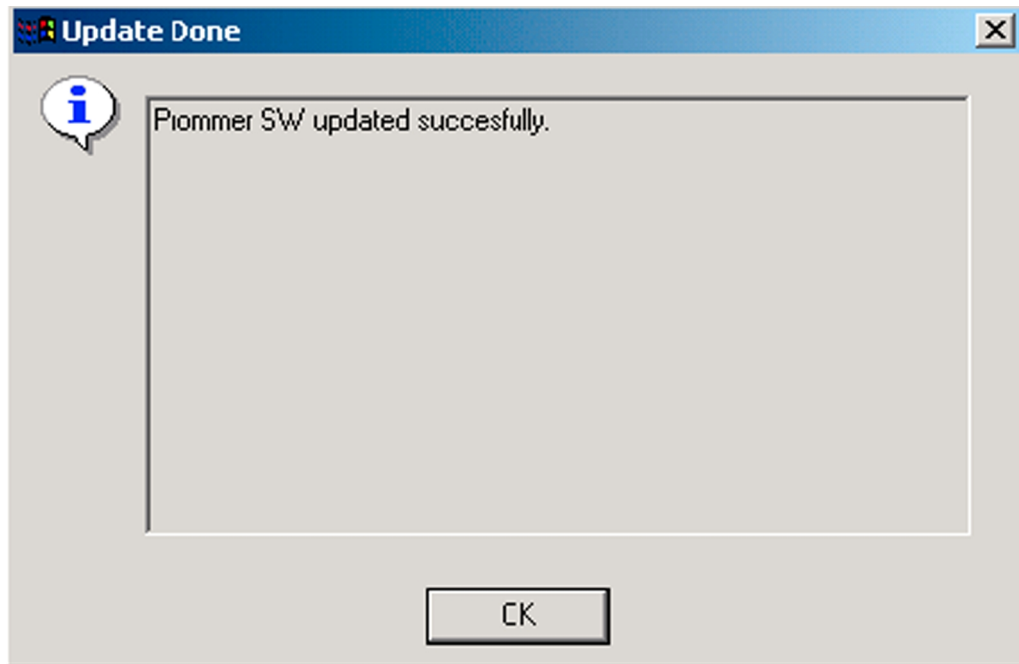


Figure 24 Prommer SW update finished

- If you are using the FPS-10 flash prommer, check that it is detected from the progress info. Check also the status leds in the FPS-10. The MODE2 led (green), VBAT and POWER leds (red) should be lit. If you are using LAN connection, the LAN led (yellow) should be blinking.
- Check that your FPS-10 flash prommer has enough memory. Flashing the SU-18 with FPS-10 needs at least 128 MB of SRAM memory in the prommer.

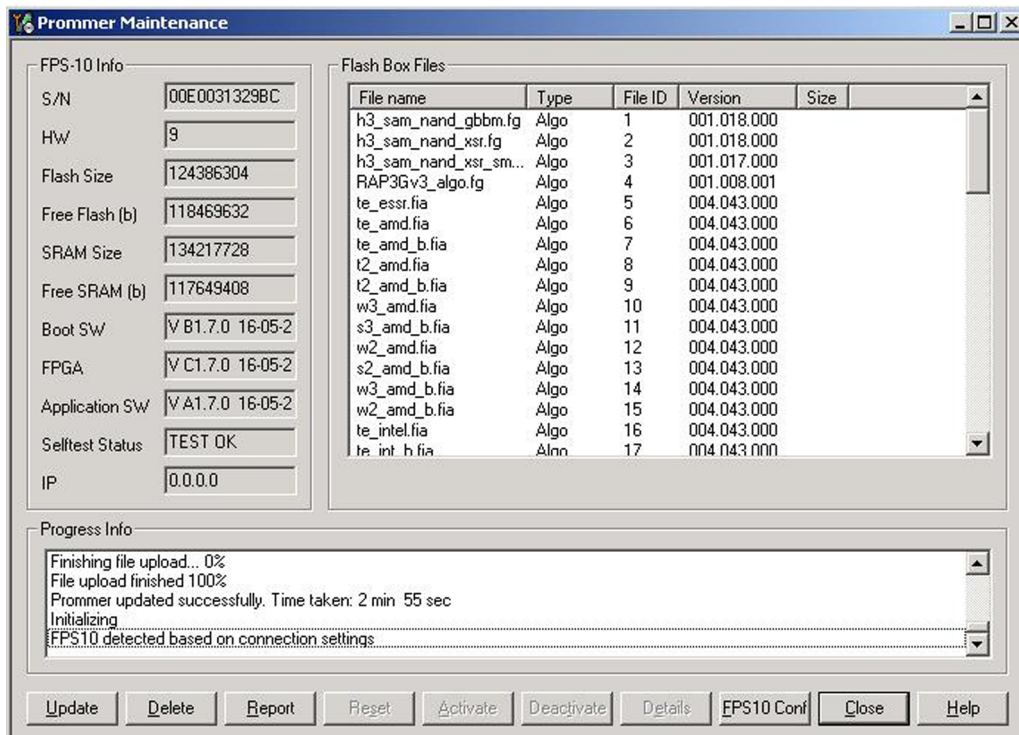


Figure 25 Prommer maintenance window

Alternative steps

- You can update FPS-10 SW by clicking the **Update** button and selecting the appropriate fpsxupd.ini file in *C:\Program Files\Nokia\Phoenix\Flash*.

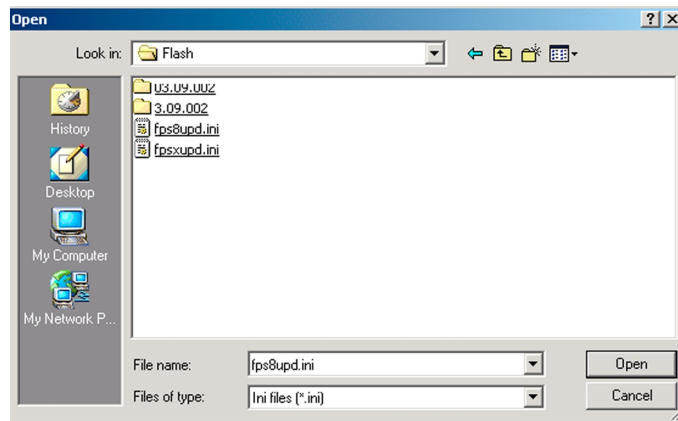


Figure 26 Flash directory window

- All files can be loaded separately to the prommer used. To do this, click the right mouse button in the *Flash box files* window and select the file type to be loaded.
More information can be found in Phoenix **Help**.

4 — Service Tools and Service Concepts

(This page left intentionally blank.)

Table of Contents

Service tools.....	4-5
Product specific tools.....	4-5
FS-10.....	4-5
MJ-111.....	4-5
RJ-154.....	4-5
SA-87.....	4-6
SA-94.....	4-6
SS-104.....	4-7
General tools.....	4-7
ACP-8E.....	4-7
CU-4.....	4-8
FLS-4S.....	4-9
FPS-10.....	4-9
PKD-1.....	4-9
SS-46.....	4-9
SS-62.....	4-10
SS-88.....	4-10
SX-4.....	4-10
Cables.....	4-10
CA-35S.....	4-10
CA-53.....	4-11
DAU-9S.....	4-11
PCS-1.....	4-11
XCS-4.....	4-11
XRS-6.....	4-12
Service concepts.....	4-12
POS (Point of Sale) flash concept.....	4-12
Flash concept with FPS-10.....	4-13
CU-4 flash concept with FPS-10.....	4-14
Module jig service concept.....	4-15
RF testing concept with RF coupler.....	4-16
Service concept for RF testing and RF/BB tuning.....	4-17

List of Tables

Table 8 Attenuation values for inductive RF coupler SA-94 - fold open.....	4-6
Table 9 Attenuation values for inductive RF coupler SA-94 - fold closed.....	4-6

List of Figures


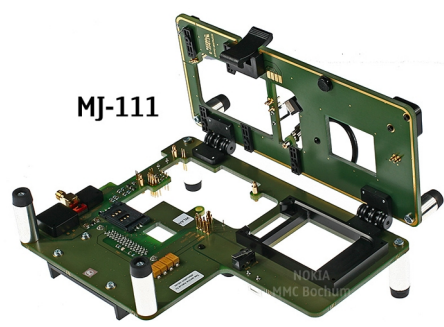

Figure 27 POS flash concept.....	4-12
Figure 28 Basic flash concept with FPS-10.....	4-13
Figure 29 CU-4 flash concept with FPS-10.....	4-14
Figure 30 Module jig service concept.....	4-15
Figure 31 RF testing concept with RF coupler.....	4-16
Figure 32 Service concept for RF testing and RF/BB tuning.....	4-17



(This page left intentionally blank.)


■ Service tools

Product specific tools

The table below gives a short overview of service tools that can be used for testing, error analysis and repair of product RM-188; RM-198, refer to various concepts.


	FS-10	product specific adapter	
<p>Flash adapter FS-10 is used for phone testing and flashing. FS-10 is used with the generic flash adapter base and control Unit CU-4 or interface adapter.</p> <p>When flashing or system testing the phone, the adapter is attached to replace the phone own battery. All functions (as well as the calibration voltages, current and the protections for over voltages, over current and voltage polarity), are performed by CU-4.</p>			
	MJ-111	Module jig	
<p>MJ-111 is meant for component level troubleshooting.</p>			
	RJ-154	Soldering jig	
<p>RJ-154 is used as a soldering jig for the engine module.</p>			

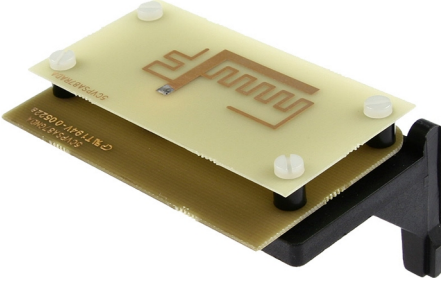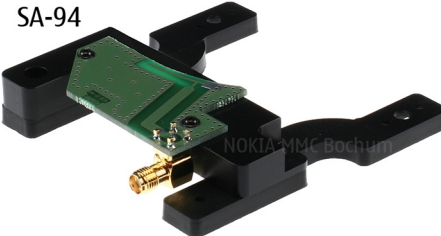	SA-87	RF coupler																																																															
SA-87 is a coupler for GSM RF testing. It is used together with FS-10 flash adapter.																																																																	
<ul style="list-style-type: none"> <table border="1" data-bbox="603 344 1430 1077"> <thead> <tr> <th colspan="6">Attenuation values for inductive RF coupler SA-87</th> </tr> <tr> <th>Band</th> <th>Channel</th> <th>Att. RX</th> <th>Tolerance RX</th> <th>Att. TX</th> <th>Tolerance TX</th> </tr> </thead> <tbody> <tr> <td rowspan="3">GSM 850</td> <td>Low</td> <td>4,8</td> <td rowspan="3">+/-2dB</td> <td>5,4</td> <td rowspan="3">+/-2dB</td> </tr> <tr> <td>Mid</td> <td>5,0</td> <td>5,0</td> </tr> <tr> <td>High</td> <td>5,3</td> <td>4,8</td> </tr> <tr> <td rowspan="3">GSM 900</td> <td>Low</td> <td>5,0</td> <td rowspan="3">+/-2dB</td> <td>5,0</td> <td rowspan="3">+/-2dB</td> </tr> <tr> <td>Mid</td> <td>5,3</td> <td>5,5</td> </tr> <tr> <td>High</td> <td>5,8</td> <td>6,2</td> </tr> <tr> <td rowspan="3">GSM 1800</td> <td>Low</td> <td>10,3</td> <td rowspan="3">+/-3dB</td> <td>11,3</td> <td rowspan="3">+/-3dB</td> </tr> <tr> <td>Mid</td> <td>9,3</td> <td>11,5</td> </tr> <tr> <td>High</td> <td>9,3</td> <td>10,8</td> </tr> <tr> <td rowspan="3">GSM 1900</td> <td>Low</td> <td>10,0</td> <td rowspan="3">+/-3dB</td> <td>9,5</td> <td rowspan="3">+/-3dB</td> </tr> <tr> <td>Mid</td> <td>9,5</td> <td>9,8</td> </tr> <tr> <td>High</td> <td>9,5</td> <td>9,5</td> </tr> </tbody> </table> 						Attenuation values for inductive RF coupler SA-87						Band	Channel	Att. RX	Tolerance RX	Att. TX	Tolerance TX	GSM 850	Low	4,8	+/-2dB	5,4	+/-2dB	Mid	5,0	5,0	High	5,3	4,8	GSM 900	Low	5,0	+/-2dB	5,0	+/-2dB	Mid	5,3	5,5	High	5,8	6,2	GSM 1800	Low	10,3	+/-3dB	11,3	+/-3dB	Mid	9,3	11,5	High	9,3	10,8	GSM 1900	Low	10,0	+/-3dB	9,5	+/-3dB	Mid	9,5	9,8	High	9,5	9,5
Attenuation values for inductive RF coupler SA-87																																																																	
Band	Channel	Att. RX	Tolerance RX	Att. TX	Tolerance TX																																																												
GSM 850	Low	4,8	+/-2dB	5,4	+/-2dB																																																												
	Mid	5,0		5,0																																																													
	High	5,3		4,8																																																													
GSM 900	Low	5,0	+/-2dB	5,0	+/-2dB																																																												
	Mid	5,3		5,5																																																													
	High	5,8		6,2																																																													
GSM 1800	Low	10,3	+/-3dB	11,3	+/-3dB																																																												
	Mid	9,3		11,5																																																													
	High	9,3		10,8																																																													
GSM 1900	Low	10,0	+/-3dB	9,5	+/-3dB																																																												
	Mid	9,5		9,8																																																													
	High	9,5		9,5																																																													
	SA-94	RF coupler																																																															
SA-94 is a coupler for Bluetooth and WLAN testing.																																																																	
<ul style="list-style-type: none"> <table border="1" data-bbox="603 1240 1414 1525"> <thead> <tr> <th colspan="6">Attenuation values for inductive RF coupler SA-94 - fold open</th> </tr> <tr> <th>Band</th> <th>Channel</th> <th>Att. RX</th> <th>Tolerance RX</th> <th>Att. TX</th> <th>Tolerance TX</th> </tr> </thead> <tbody> <tr> <td rowspan="3">WLAN/ BT</td> <td>Low</td> <td>17,0</td> <td rowspan="3">+/-3dB</td> <td>17,0</td> <td rowspan="3">+/-3dB</td> </tr> <tr> <td>Mid</td> <td>17,0</td> <td>17,0</td> </tr> <tr> <td>High</td> <td>17,0</td> <td>17,0</td> </tr> </tbody> </table> <table border="1" data-bbox="603 1581 1414 1865"> <thead> <tr> <th colspan="6">Attenuation values for inductive RF coupler SA-94 - fold closed</th> </tr> <tr> <th>Band</th> <th>Channel</th> <th>Att. RX</th> <th>Tolerance RX</th> <th>Att. TX</th> <th>Tolerance TX</th> </tr> </thead> <tbody> <tr> <td rowspan="3">WLAN/ BT</td> <td>Low</td> <td>18,0</td> <td rowspan="3">+/-3dB</td> <td>18,0</td> <td rowspan="3">+/-3dB</td> </tr> <tr> <td>Mid</td> <td>18,0</td> <td>18,0</td> </tr> <tr> <td>High</td> <td>18,0</td> <td>18,0</td> </tr> </tbody> </table> 						Attenuation values for inductive RF coupler SA-94 - fold open						Band	Channel	Att. RX	Tolerance RX	Att. TX	Tolerance TX	WLAN/ BT	Low	17,0	+/-3dB	17,0	+/-3dB	Mid	17,0	17,0	High	17,0	17,0	Attenuation values for inductive RF coupler SA-94 - fold closed						Band	Channel	Att. RX	Tolerance RX	Att. TX	Tolerance TX	WLAN/ BT	Low	18,0	+/-3dB	18,0	+/-3dB	Mid	18,0	18,0	High	18,0	18,0												
Attenuation values for inductive RF coupler SA-94 - fold open																																																																	
Band	Channel	Att. RX	Tolerance RX	Att. TX	Tolerance TX																																																												
WLAN/ BT	Low	17,0	+/-3dB	17,0	+/-3dB																																																												
	Mid	17,0		17,0																																																													
	High	17,0		17,0																																																													
Attenuation values for inductive RF coupler SA-94 - fold closed																																																																	
Band	Channel	Att. RX	Tolerance RX	Att. TX	Tolerance TX																																																												
WLAN/ BT	Low	18,0	+/-3dB	18,0	+/-3dB																																																												
	Mid	18,0		18,0																																																													
	High	18,0		18,0																																																													

	SS-104	Domesheet and display alignment jig	
	SS-104 is used for domesheet and display alignment.		

General tools

The table below gives a short overview of service tools that can be used for testing, error analysis and repair of product RM-188; RM-198, refer to various concepts.

	ACP-8E	Charger	0675195
	Charger (for Europe) Output: 5.3V DC, 500 mA.		



CU-4	Control unit	
------	--------------	--

CU-4 is a general service tool used with a module jig and/or a flash adapter. It requires an external 12 V power supply.


The unit has the following features:

- software controlled via USB
- EM calibration function
- Forwards FBUS/Flashbus traffic to/from terminal
- Forwards USB traffic to/from terminal
- software controlled BSI values
- regulated VBATT voltage
- 2 x USB2.0 connector (Hub)
- FBUS and USB connections supported

When using CU-4, note the special order of connecting cables and other service equipment:



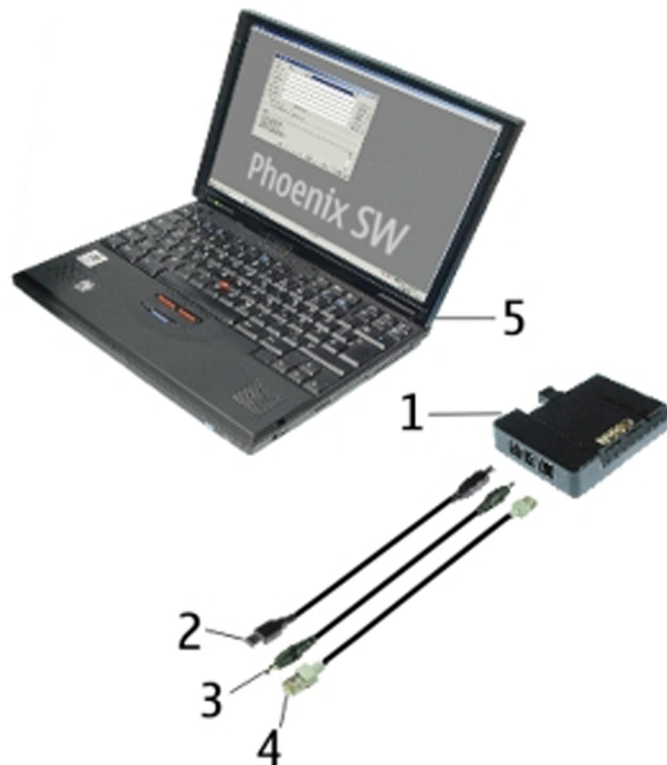

Instructions


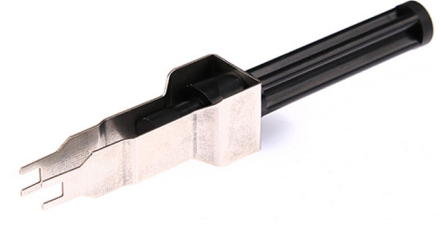

- 1 Connect a service tool (jig, flash adapter) to CU-4.
- 2 Connect CU-4 to your PC with a USB cable.
- 3 Connect supply voltage (12 V)
- 4 Connect an FBUS cable (if necessary).
- 5 Start Phoenix service software.



Note: Phoenix enables CU-4 regulators via USB when it is started.


Reconnecting the power supply requires a Phoenix restart.





	FLS-45	Flash device	
<p>FLS-45 is a dongle and flash device incorporated into one package, developed specifically for POS use.</p>			
	FPS-10	Flash prommer	
<p>FPS-10 interfaces with:</p> <ul style="list-style-type: none"> • PC • Control unit • Flash adapter • Smart card <p>FPS-10 flash prommer features:</p> <ul style="list-style-type: none"> • Flash functionality for BB5 and DCT-4 terminals • Smart Card reader for SX-2 or SX-4 • USB traffic forwarding • USB to FBUS/Flashbus conversion • LAN to FBUS/Flashbus and USB conversion • Vusb output switchable by PC command <p>FPS-10 sales package includes:</p> <ul style="list-style-type: none"> • FPS-10 prommer • Power Supply with 5 country specific cords • USB cable 			
	PKD-1	SW security device	
<p>SW security device is a piece of hardware enabling the use of the service software when connected to the parallel (LPT) port of the PC. Without the device, it is not possible to use the service software. Printer or any such device can be connected to the PC through the device if needed.</p>			
	SS-46	Interface adapter	
<p>SS-46 acts as an interface adapter between the flash adapter and FPS-10.</p>			


	SS-62	Flash adapter base	
<p>Generic base for flash adapters and couplers.</p>			
	SS-88	Camera removal tool	
<p>The camera removal tool SS-88 is used to remove/attach the front camera module from/to the socket.</p>			
	SX-4	Smart card	
<p>SX-4 is a BB5 security device used to protect critical features in tuning and testing. SX-4 is also needed together with FPS-10 when DCT-4 phones are flashed.</p>			

Cables

The table below gives a short overview of service tools that can be used for testing, error analysis and repair of product RM-188; RM-198, refer to various concepts.

	CA-35S	Power cable	
<p>CA-35S is a power cable for connecting, for example, the FPS-10 flash prommer to the Point-Of-Sales (POS) flash adapter.</p>			

	CA-53	USB connectivity cable	
<p>USB to system connector cable.</p>			
	DAU-9S	MBUS cable	
<p>The MBUS cable DAU-9S has a modular connector and is used, for example, between the PC's serial port and module jigs, flash adapters or docking station adapters.</p> <p>Note: Docking station adapters valid for DCT4 products.</p>			
	PCS-1	Power cable	
<p>The PCS-1 power cable (DC) is used with a docking station, a module jig or a control unit to supply a controlled operating voltage.</p>			
	XCS-4	Modular cable	
<p>XCS-4 is a shielded (one specially shielded conductor) modular cable for flashing and service purposes.</p>			

	XRS-6	RF cable
	<p>The RF cable is used to connect, for example, a module repair jig to the RF measurement equipment.</p> <p>SMA to N-Connector approximately 610 mm.</p> <p>Attenuation for:</p> <ul style="list-style-type: none"> • GSM850/900: 0.3+-0.1 dB • GSM1800/1900: 0.5+-0.1 dB • WLAN: 0.6+-0.1dB 	

■ Service concepts

POS (Point of Sale) flash concept

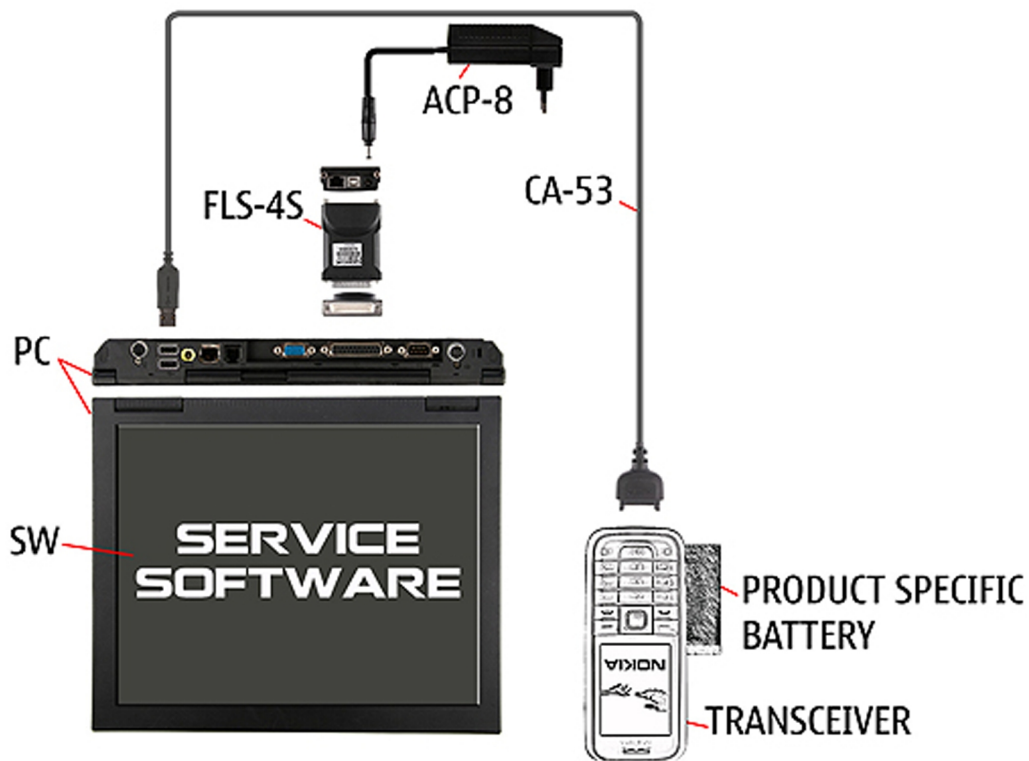


Figure 27 POS flash concept

Type	Description
Product specific tools	
BL-5C	Battery
Other tools	
ACP-8	Power adapter
FLS-4S	POS flash dongle

Type	Description
	PC with Phoenix service software
Cables	
CA-53	USB connectivity cable

Flash concept with FPS-10

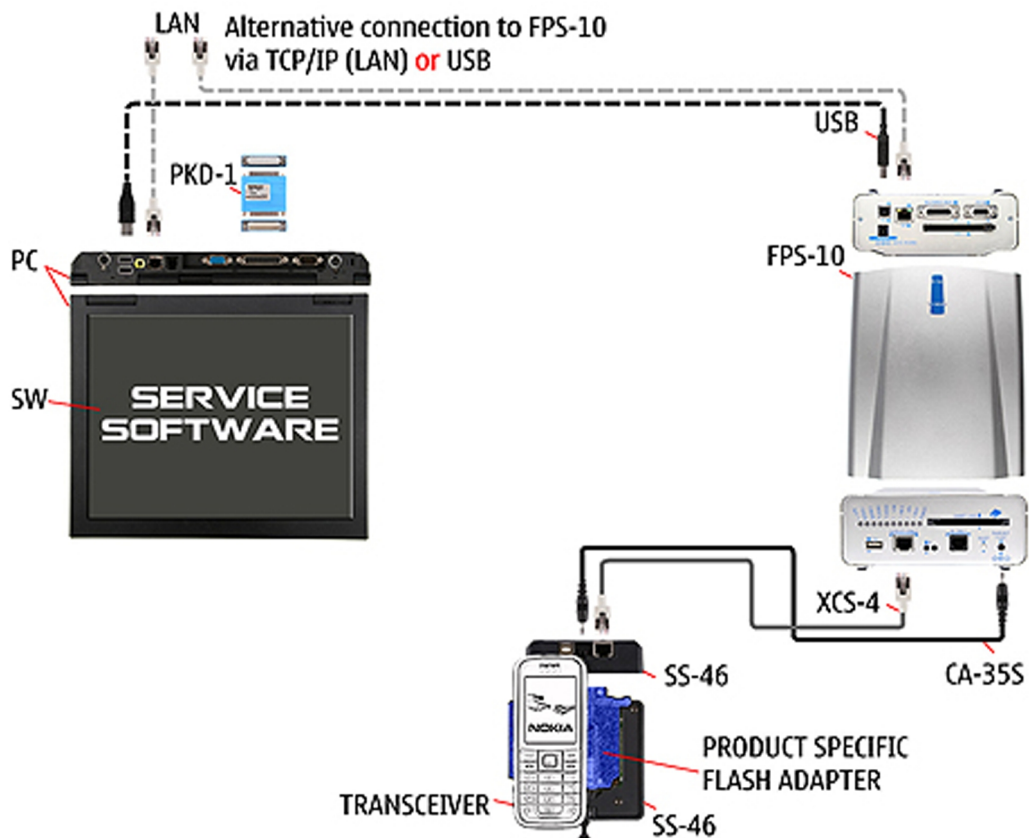


Figure 28 Basic flash concept with FPS-10

Type	Description
Product specific tools	
FS-10	Flash adapter
Other tools	
FPS-10	Flash prommer box
PKD-1/PK-1	SW security device
SS-46	Interface adapter
	PC with Phoenix service software
Cables	
XCS-4	Modular cable
CA-35S	Power cable

Type	Description
	USB cable

CU-4 flash concept with FPS-10

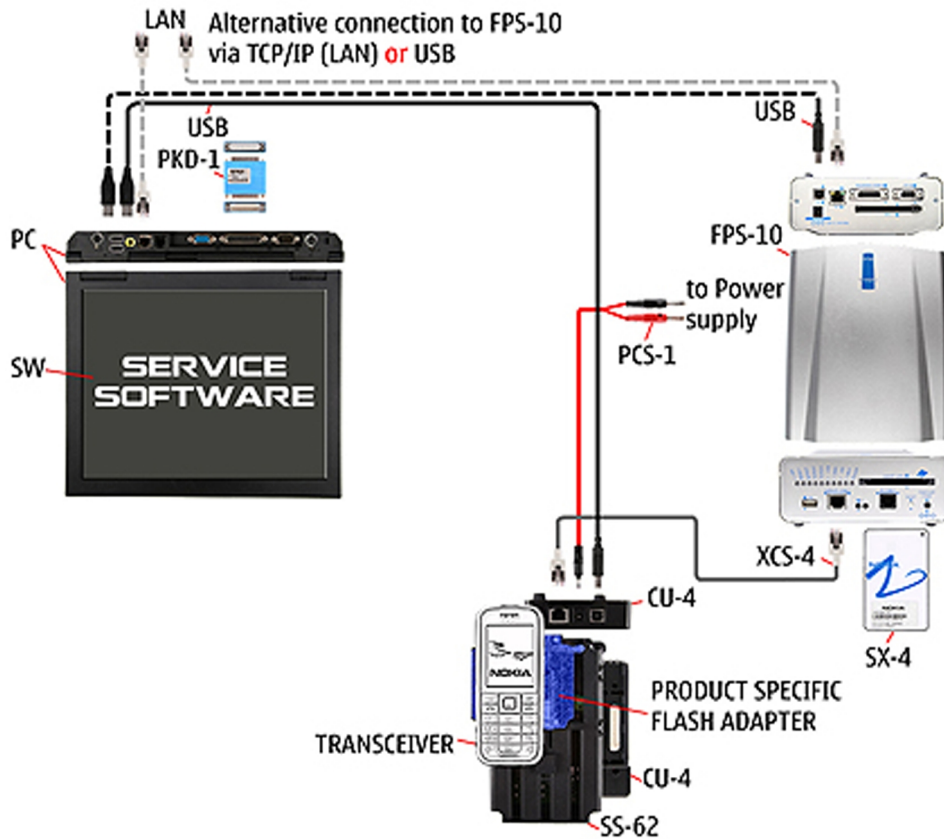


Figure 29 CU-4 flash concept with FPS-10

Type	Description
Product specific tools	
FS-10	Flash adapter
Other tools	
CU-4	Control unit
FPS-10	Flash prommer box
PKD-1/PK-1	SW security device
SS-62	Flash adapter base
SX-4	Smart card
	PC with Phoenix service software
Cables	
PCS-1	Power cable
XCS-4	Modular cable
	Standard USB cable

Type	Description
	USB cable

Module jig service concept

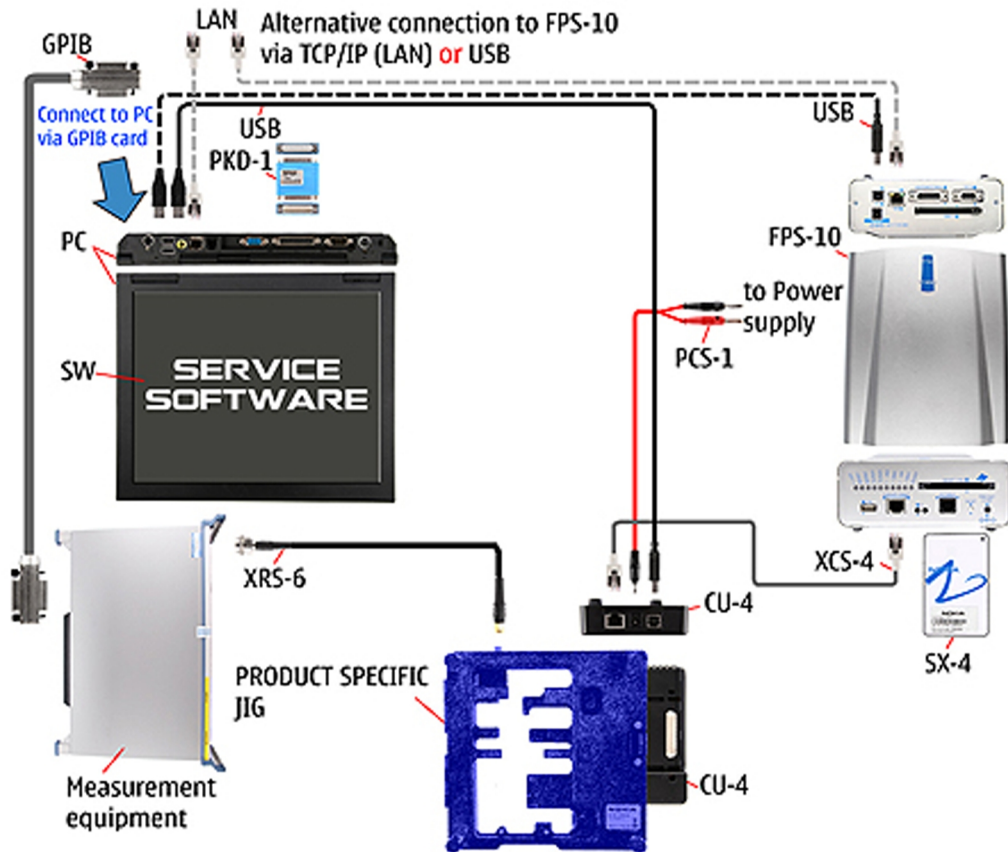


Figure 30 Module jig service concept

Type	Description
Phone specific tools	
MJ-111	Module jig
Other tools	
CU-4	Control unit
FPS-10	Flash prommer box
PKD-1/PK-1	SW security device
SX-4	Smart card
	PC with Phoenix service software
	Measurement equipment
Cables	
PCS-1	DC power cable
XCS-4	Modular cable

Type	Description
XRS-6	RF cable
	USB cable
	GPIB control cable

RF testing concept with RF coupler

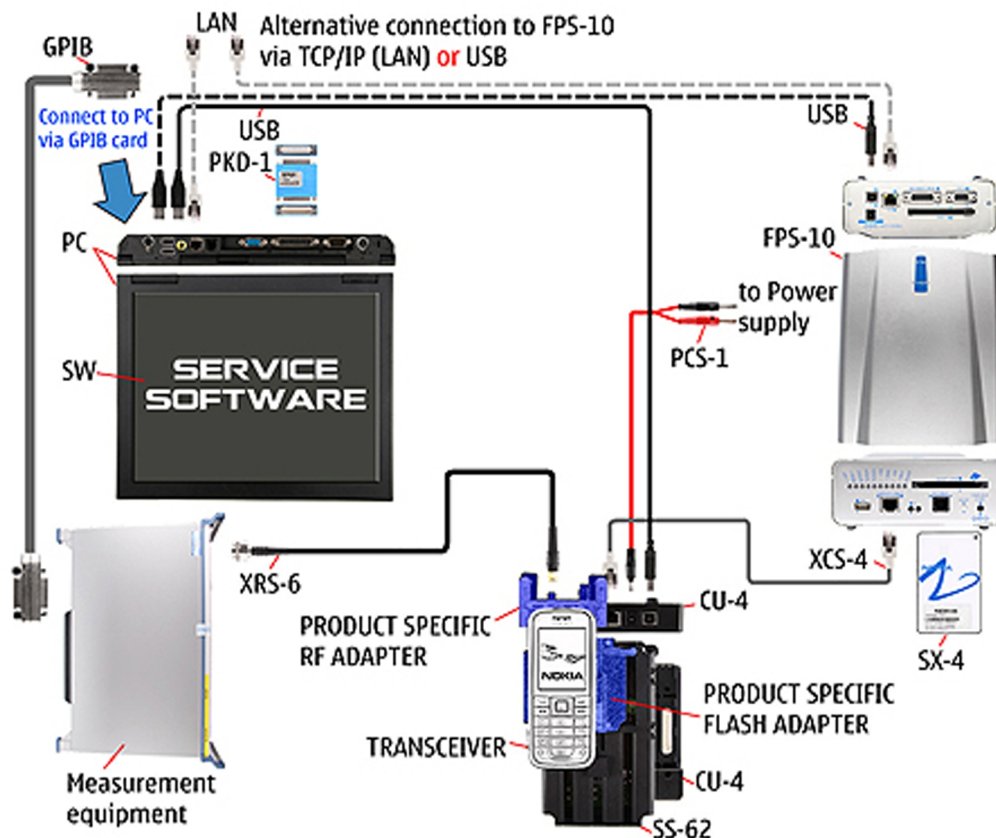


Figure 31 RF testing concept with RF coupler

Type	Description
Product specific tools	
FS-10	Flash adapter
SA-87	RF coupler
Other tools	
CU-4	Control unit
SX-4	Smart card
FPS-10	Flash prommer box
PKD-1/PK-1	SW security device
SS-62	Flash adapter base
	Measurement equipment
	PC with Phoenix service software

Type	Description
Cables	
PCS-1	Power cable
XCS-4	Modular cable
XRS-6	RF cable
	GPIB control cable
	USB cable

Service concept for RF testing and RF/BB tuning

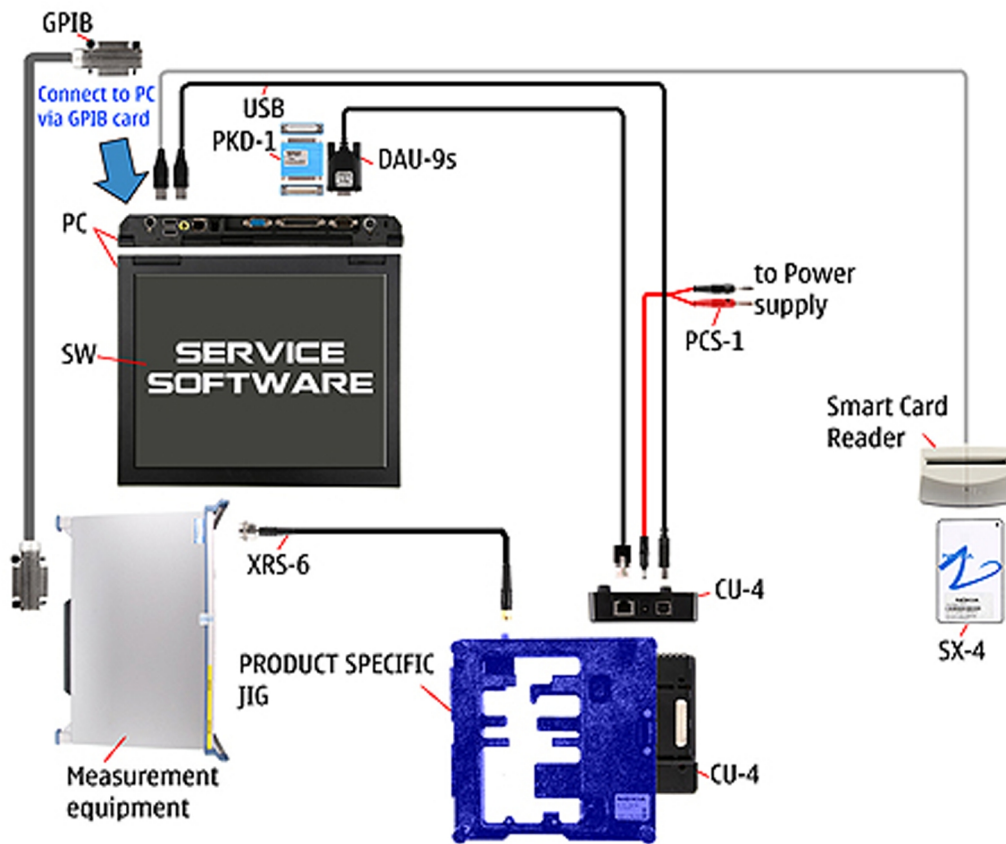


Figure 32 Service concept for RF testing and RF/BB tuning

Type	Description
Product specific tools	
MJ-111	Module jig
Other tools	
CU-4	Control unit
PKD-1/PK-1	SW security device
SX-4	Smart card
	Measurement equipment

Type	Description
	Smart card reader
	PC with Phoenix service software
Cables	
DAU-9s	MBUS cable
PCS-1	DC power cable
XRS-6	RF cable
	GPIB control cable
	USB cable

5 — Disassembly / Reassembly Instructions


(This page left intentionally blank.)

Table of Contents


Upper block disassembly	5-5
Upper block assembly	5-10
Lower block disassembly	5-18
Lower block assembly	5-22

(This page left intentionally blank.)

■ Upper block disassembly

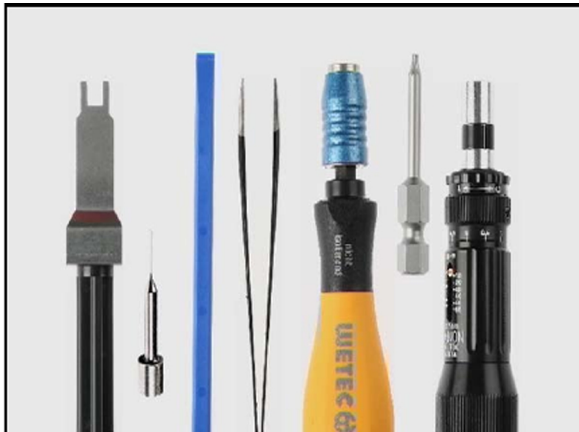

1. Needed tools: SS-88 camera removal tool, the SS-6, the SS-93, metal tweezers, a bit holder with a Torx Plus size 6 bit, a torque driver...

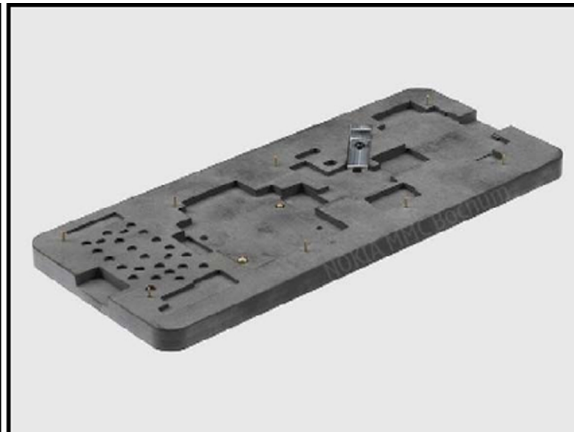

2. ... and the SS-104 for fitting the adhesives and displays.



3. Always cover the windows with a protective film.



4. Remove the battery if it is still inserted.



5. Use the SRT-6 to pry open the B-COVER UPPER ASSEMBLY, starting at the top.




6. Release the clips shown, on both sides.




7. Shift the A-Cover to the hinge direction and lift it up.




8. Cover the LCD PM with a protective film.

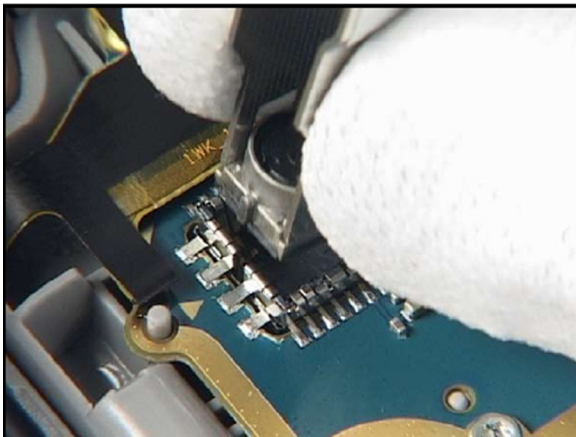


9. Carefully release and remove the CAMERA MODULE with the SS-88 Camera removal tool.

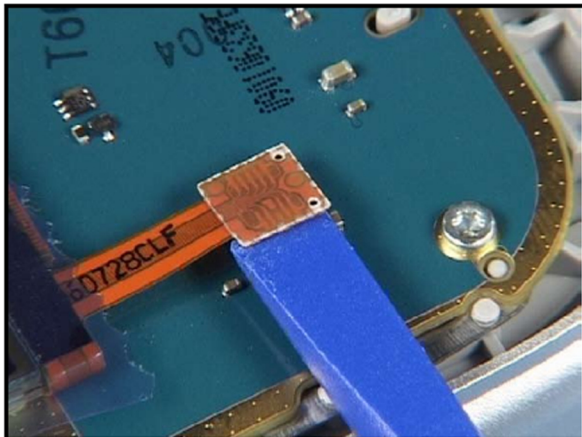


10. Disconnect the flex connector.

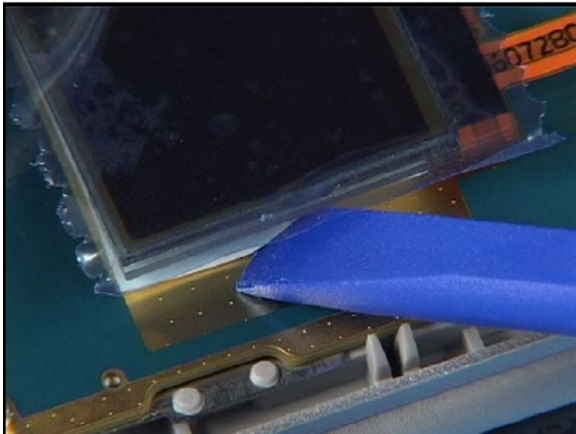

11. Carefully release the adhesive of the LCD PM with the SS-93.

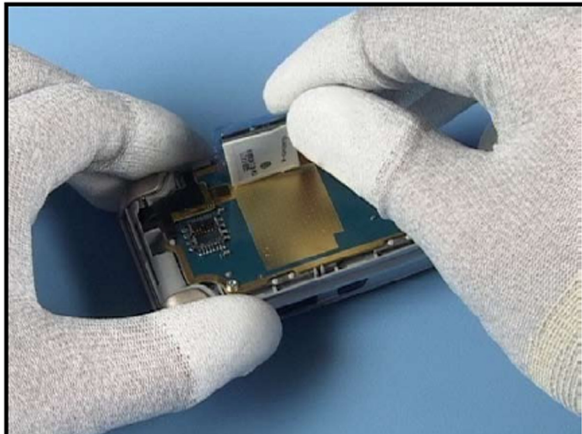


12. Remove the LCD PM.

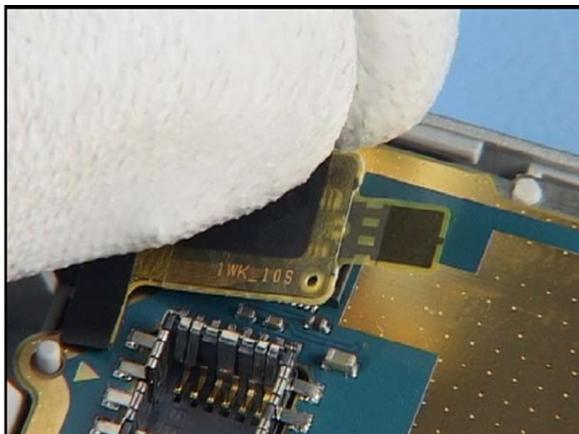


13. Disconnect the flex connector.



14. Fit the Torx Plus size 6 bit.

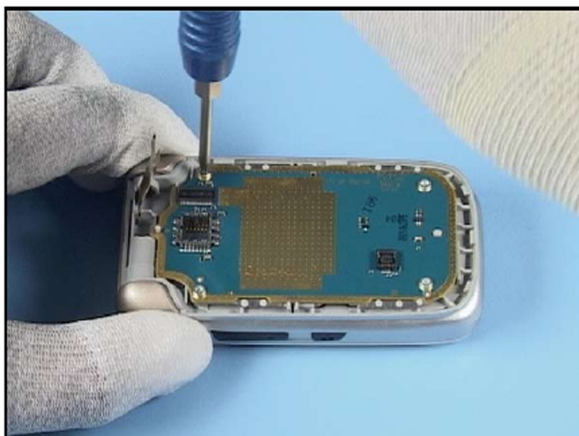


15. Unscrew the four screws and remove them.

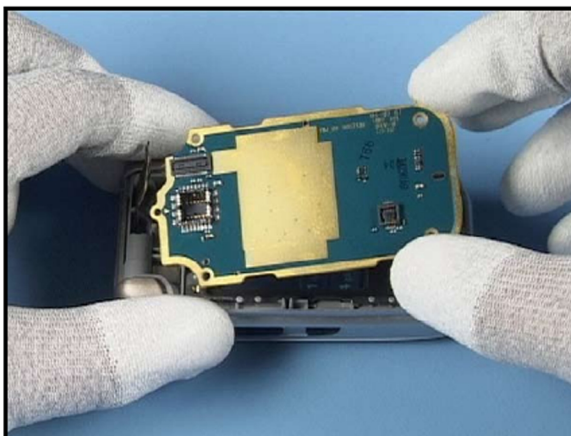

16. Lift out the PWB 1WJ.




17. Cover the innerside window with a plastic film.

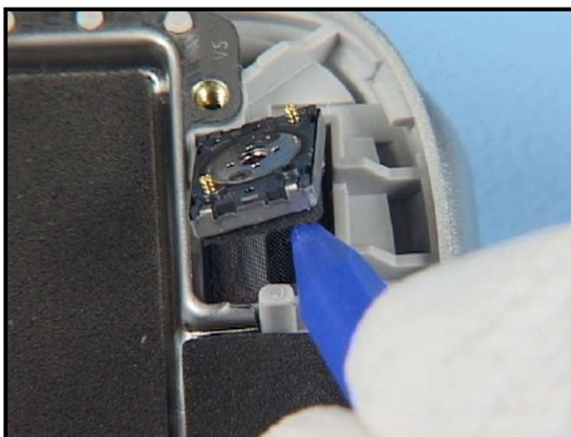

18. Carefully lift out the EARPIECE. Note that the Speaker Gasket will be destroyed during the removal, and must be replaced when reassemble.




19. Cover the display with a plastic film.

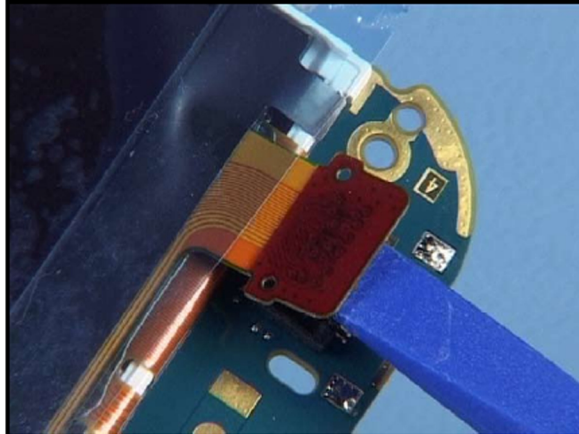

20. Release the flex connector.



21. Release the LCD BACK ADHESIVE with the SS-93.

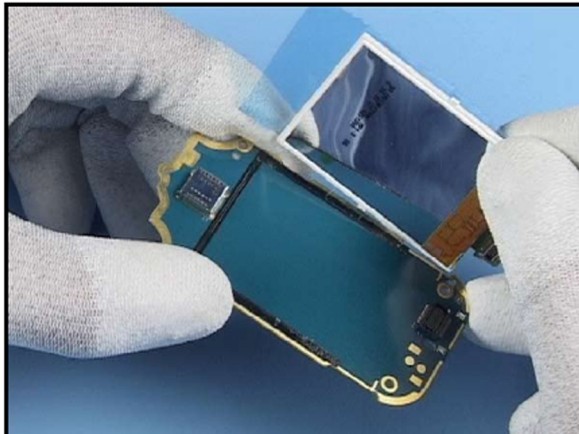

22. Carefully remove the LCD CSDN.



23. Push out the glued in LCD WINDOW.



24. Unlock the clips of the ANTENNA CAP.



25. Remove the cap as shown.



26. Bend down the hinge module with the SS-6 first. Note that the SS-6 is very delicate and can be break easily.



27. Now lock the HINGE with a torx bit size 6 or similar.



28. Now, the A-COVER UPPER ASSEMBLY can be removed easily. Mind the flex foil. Do not remove the tool, that locks the hinge yet.



29. The disassembly procedure is now completed

■ **Upper block assembly**



1. Assembly




2. Place the A-COVER UPPER ASSEMBLY.




3. Mind the flex foil.




4. Now expand the HINGE MODULE by removing the tool.

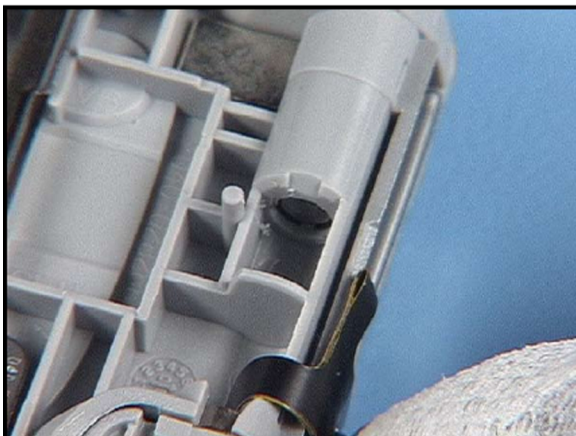


5. Ensure that the hinge expands completely before going on.

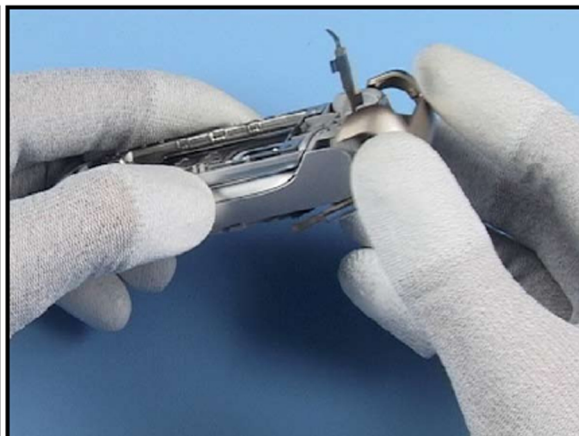


6. Place the ANTENNA CAP and click it into its place.

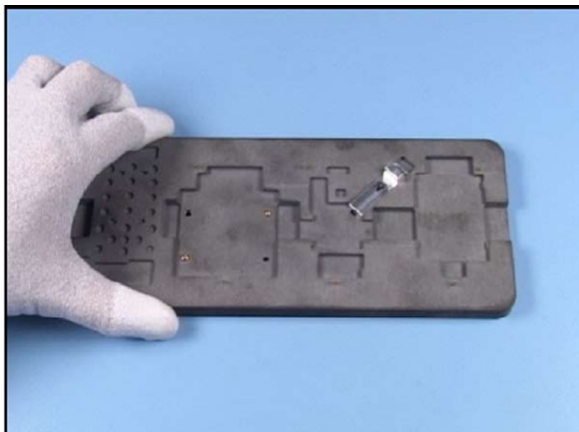


7. Use the SS-104 jig for positioning the displays and gasket correctly.

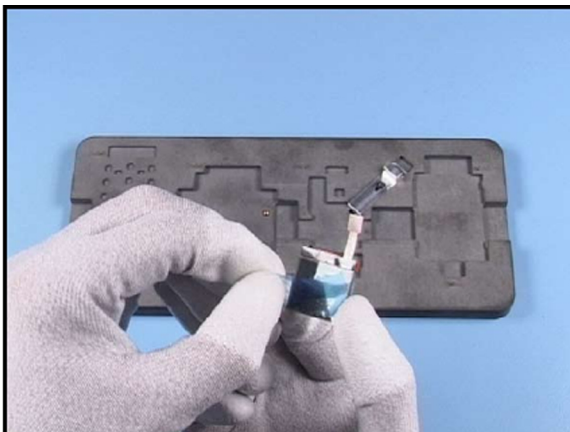


8. Peel up the protective films from the displays

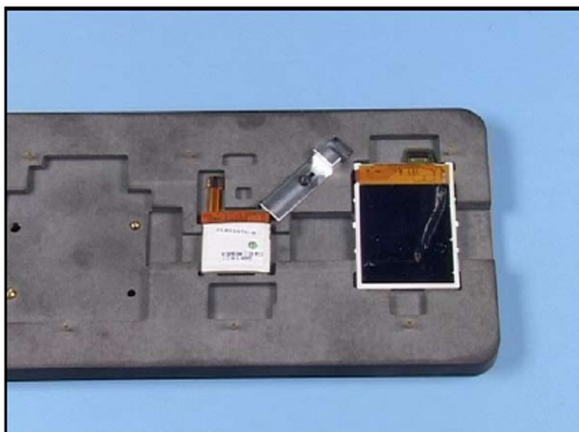


9. Place the displays into their compartments as shown.

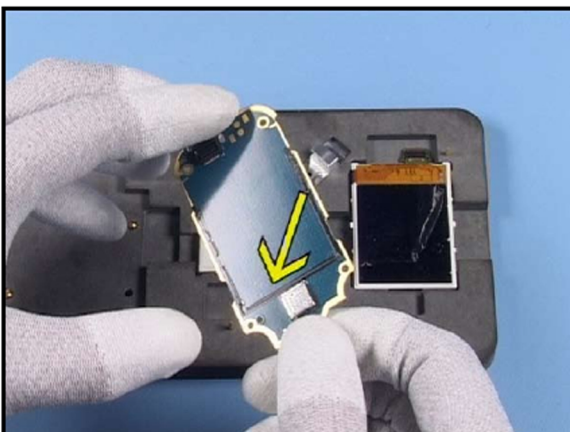


10. Fit new gaskets on the PWB 1WJ for both displays and new adhesives on the PWB.

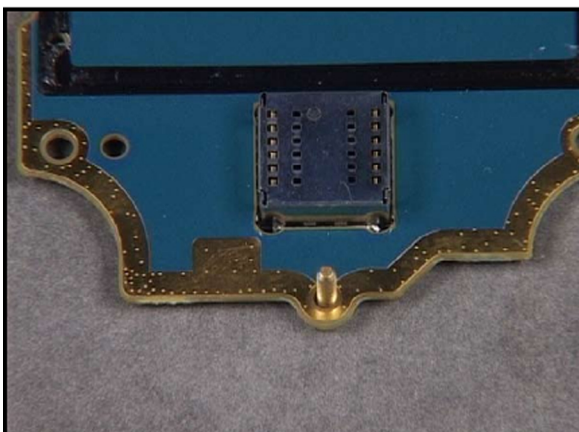


11. Now position the PWB to the guides of the jig.

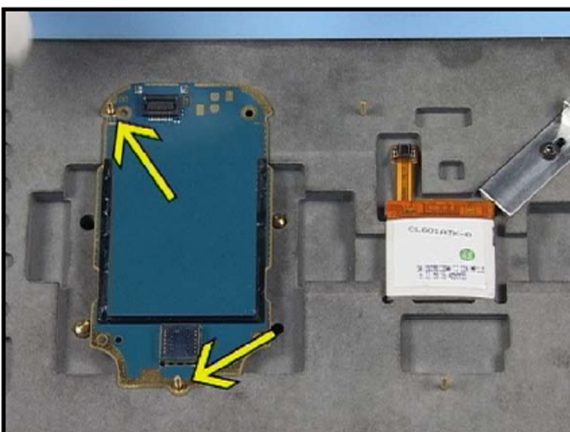


12. Both guides must be fitted correctly.

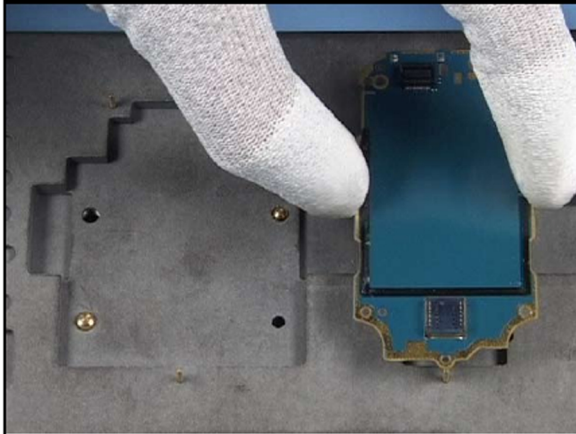


13. Place the PWB over the LCD PM first.

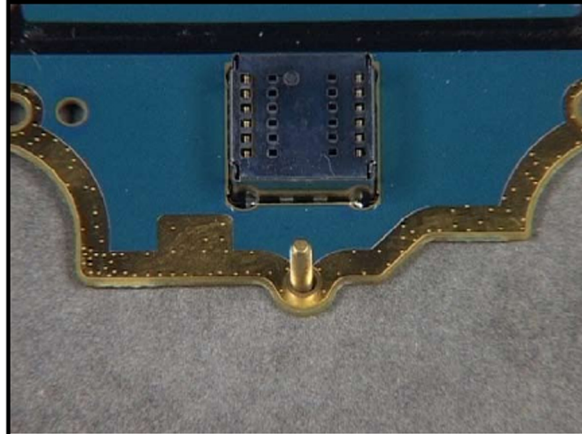


14. Mind the guides.

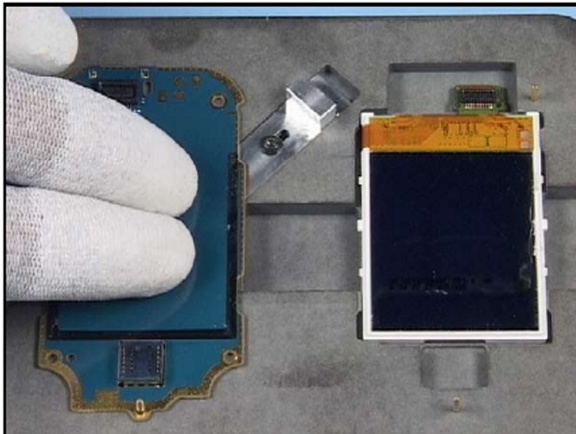


15. Push it down evenly.

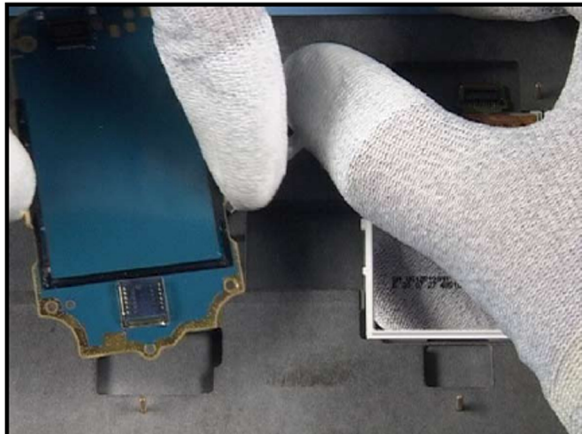


16. Release the lever and remove the PWB.

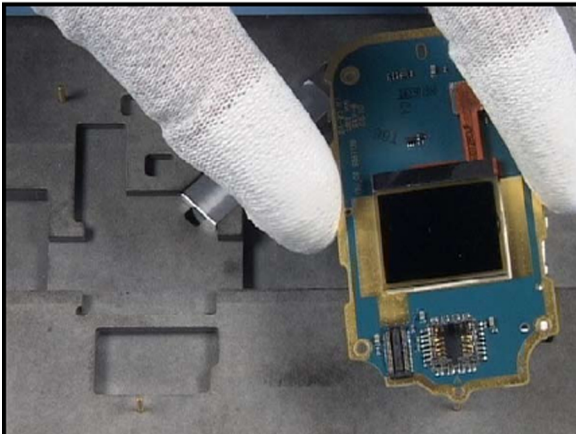


17. Position the PWB to the LCD CSTN.

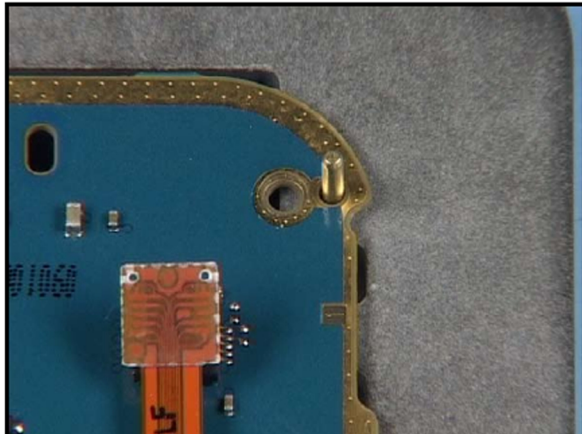

18. Again - mind the guides.

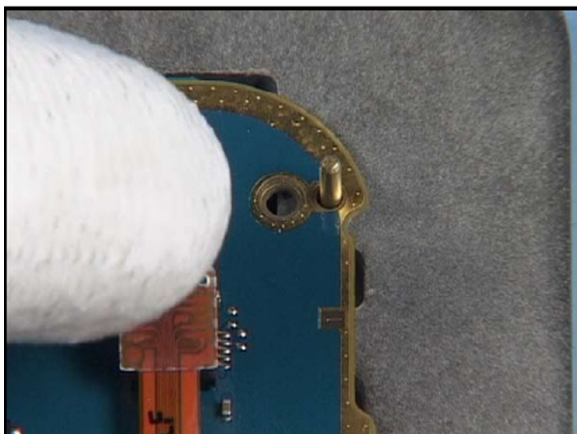


19. Close the flex connector.

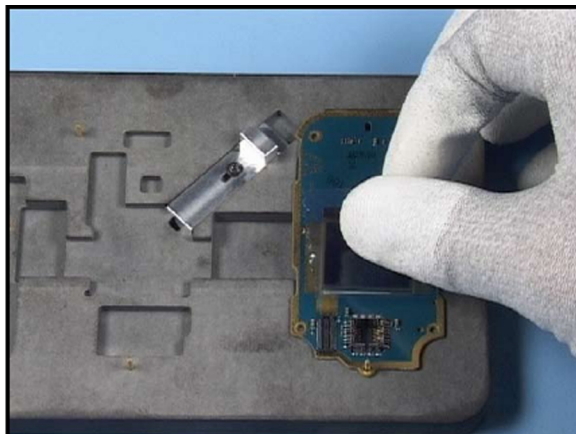


20. Cover the LCD with a protective film.



21. Smooth down the PWB evenly.

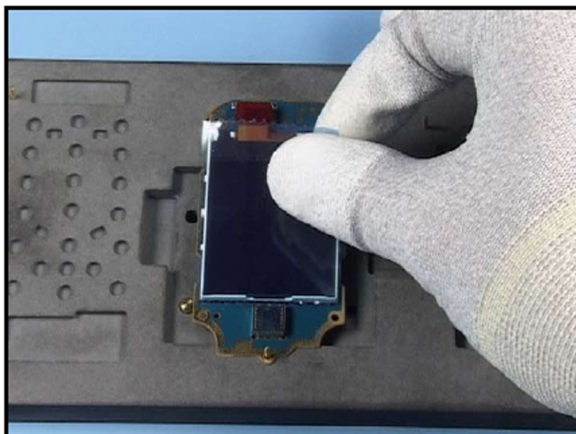

22. Cover the LCD CSTN with a protective film, too.

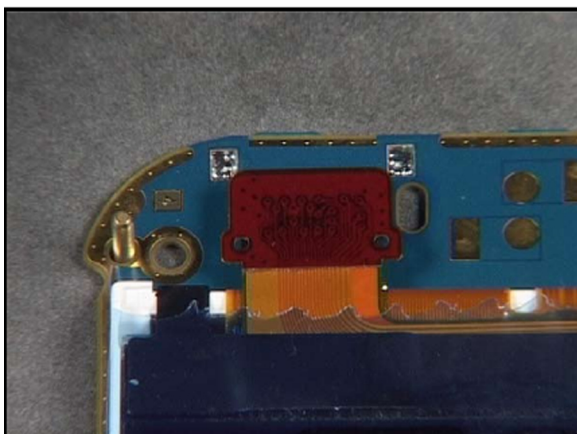

23. Close the flex connector.




24. Insert the EARPIECE into ist recess. Note that a new speaker gasket must be fitted first.




25. Push it down evenly.




26. Remove the protective film.

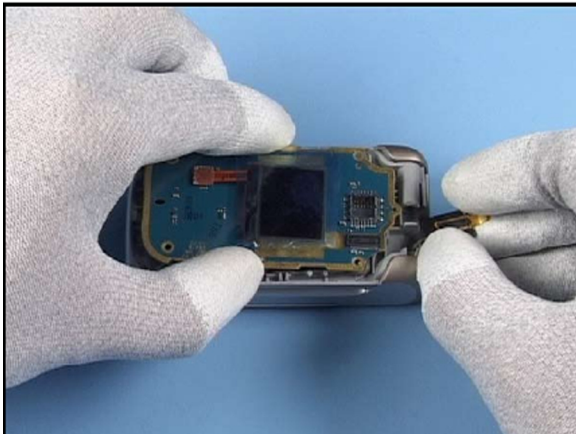

27. Place the PWB into the A-COVER ASSEMBLY.

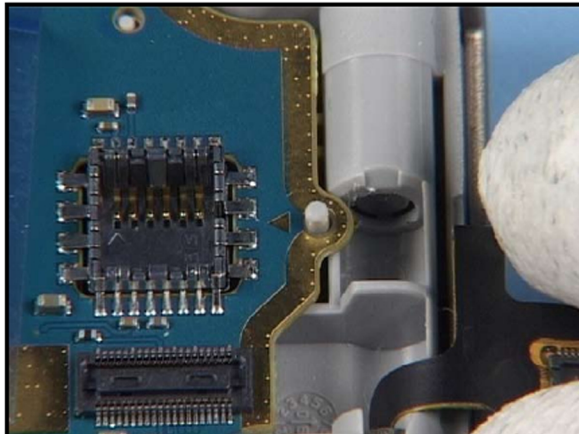


28. Mind the guides.

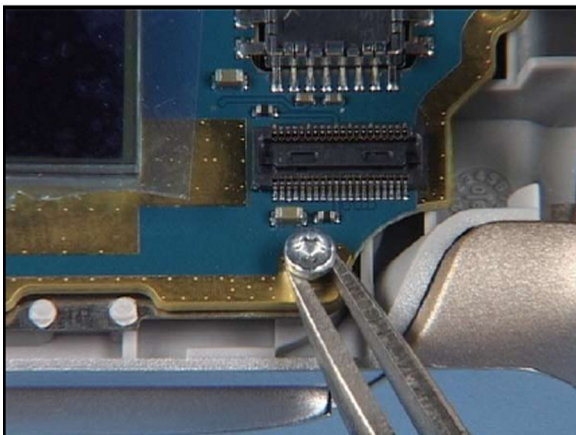


29. Insert the screws.




30. Set the correct torque.

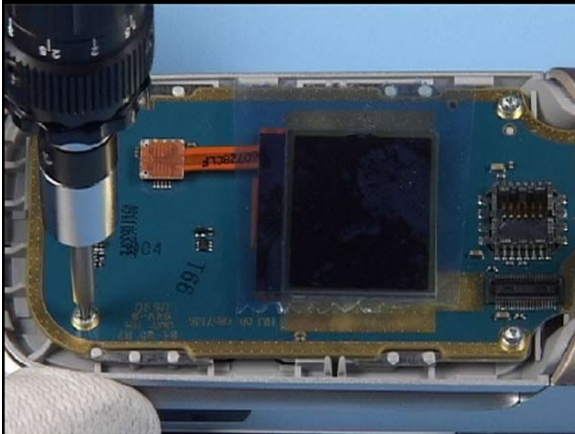


31. Tighten all screws.

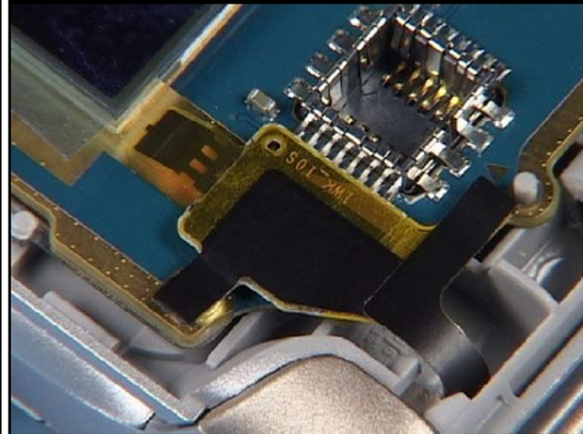


32. Close this connector.

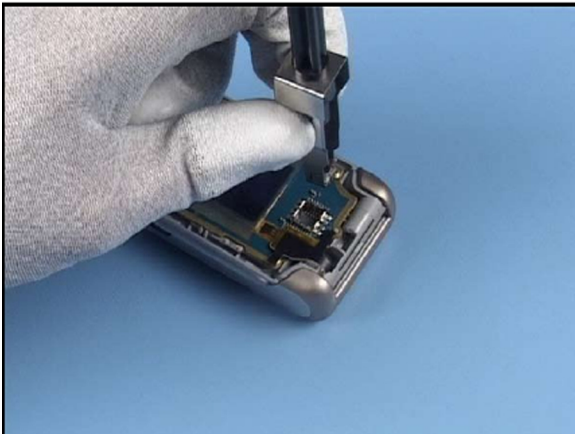

33. Insert the CAMERA MODULE with the SS-88.

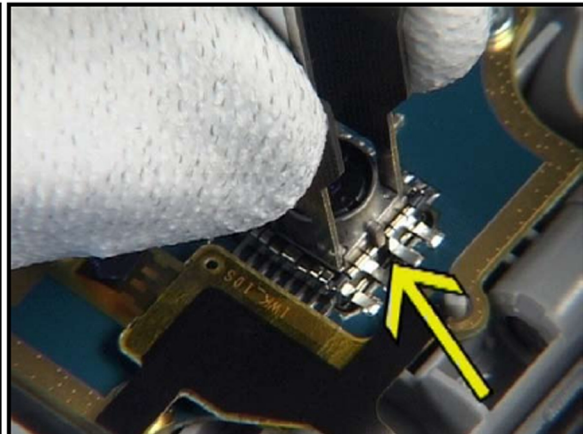

34. Note the alignment tab.

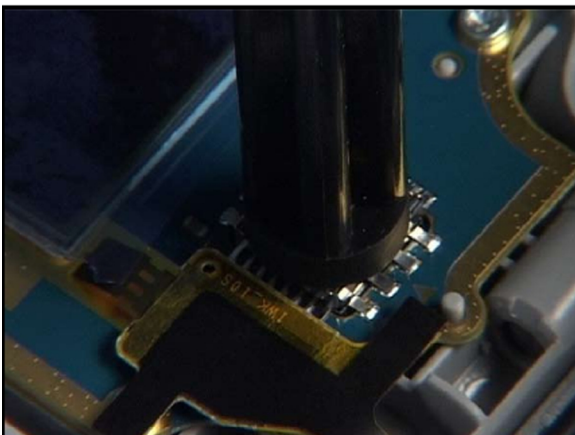

35. Push it down evenly.



36. Remove the protective film.



37. Fit a new SECONDARY GASKET to the B-COVER ASSEMBLY if not already done.



38. Place the B-COVER at the shown side first and shift it into the correct position.



39. Click all snaps into their places.



40. Note the correct positioning of the rear clips.



41. Open the unit, check the display and window for cleanness.




42. Fit the new LCD WINDOW, beginning at the hinge side.



43. Smooth it down evenly.

■ **Lower block disassembly**

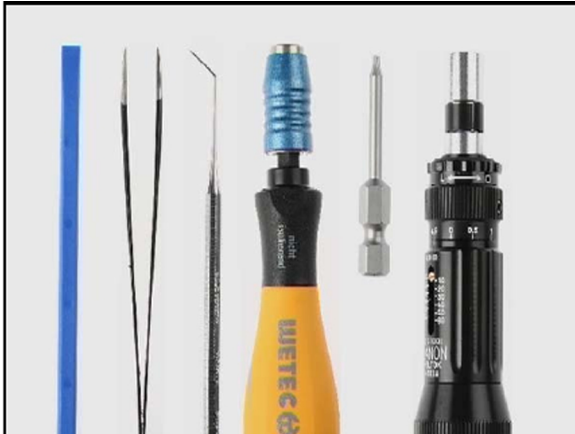

1. Needed tools: The SS-93, metall tweezers, a dental pick, a bitholder, a Torx Plus size 6 bit and a torque driver.



2. Cover the windows with a protective film.



3. Unlock both latches of the ANTENNA COVER.



4. Open the assembly, release both upper clips of the ANTENNA COVER.




5. Now, the cover can be removed easily.




6. Fit the Torx Plus size 6 bit.




7. Unscrew the four screws.

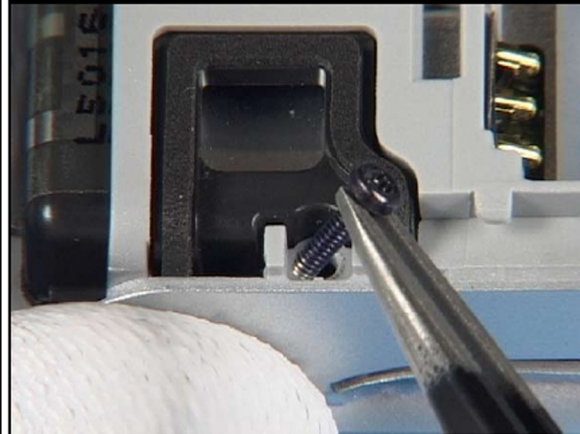


8. Remove the screws.

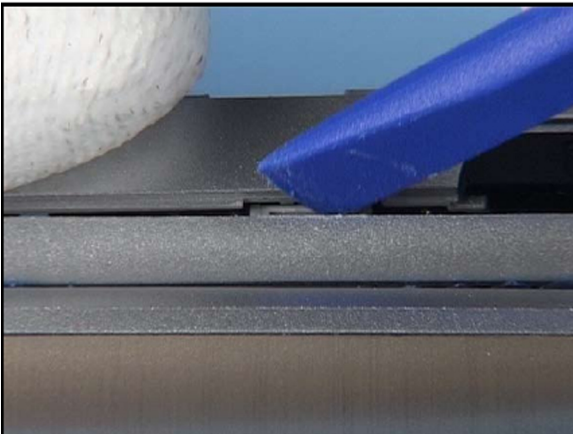


9. Gently pry open the C-COVER with the SS-93.

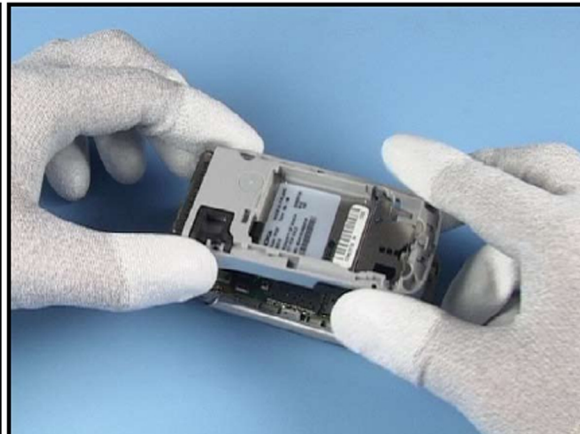

10. Carefully lift up the cover.

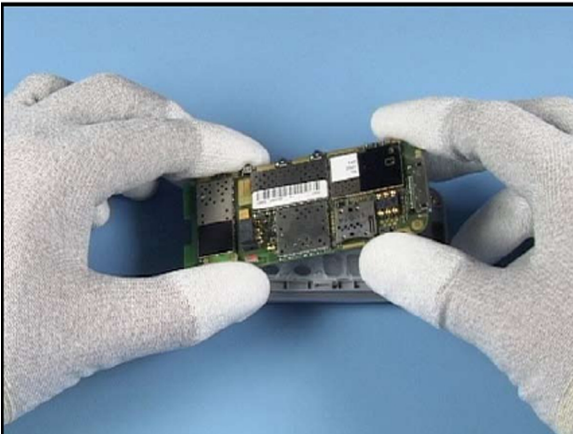


11. Lift up the ENGINE MODULE, keep in mind that the flex foil is still connected.

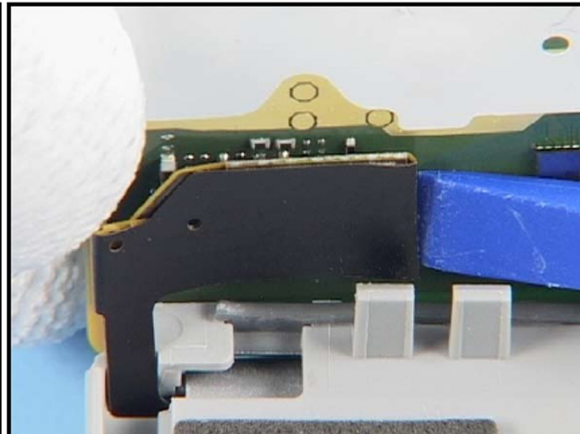


12. Open the connector with the SS-93.



13. Push out the KEYMAT.

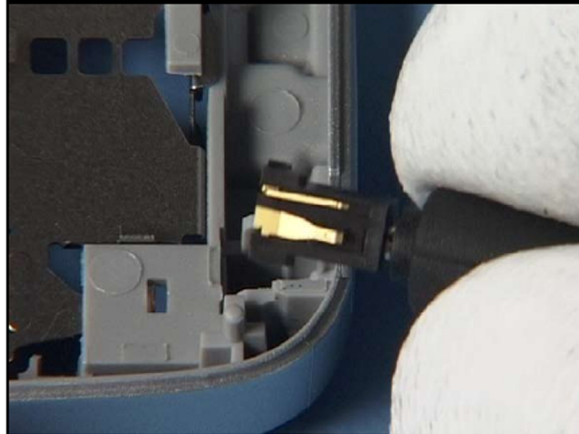


14. Remove the DC JACK with the DC PLUG.

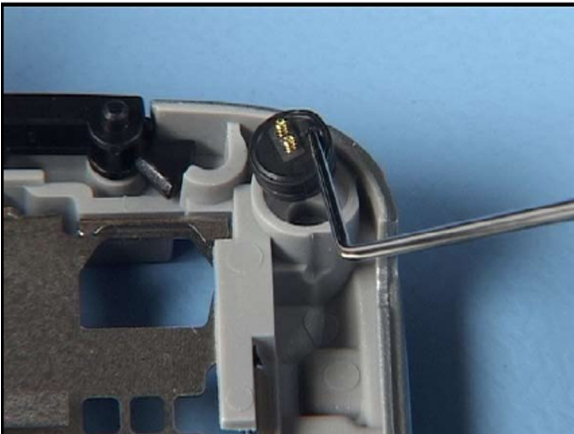


15. Ease the MICROPHONE with the dental pick.



16. Carefully bend the C-COVER as shown to release the clips holding the ANTENNA COVER.

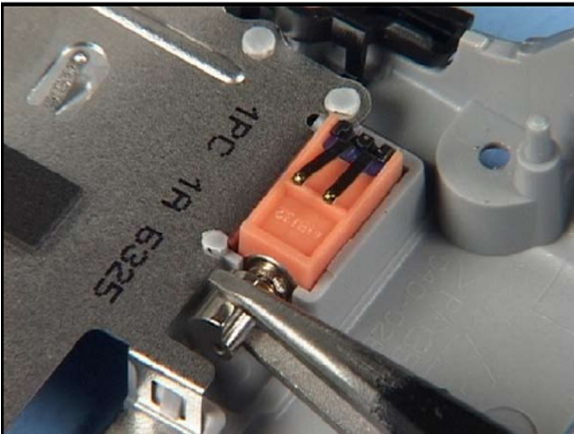


17. Lever out the VIBRA MOTOR.

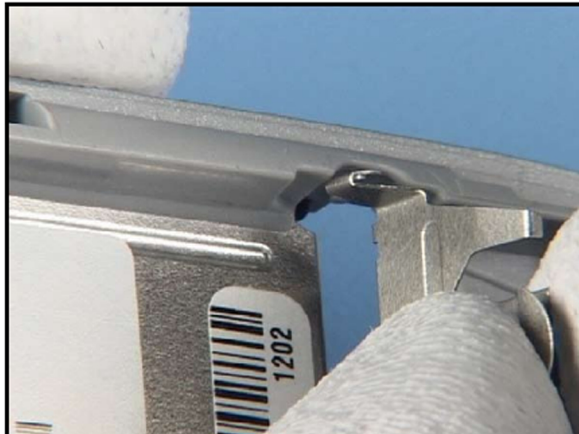

18. Release one clip of the SIM LID and remove it.



19. Lever out the IHF SPEAKER with the SS-93 first.

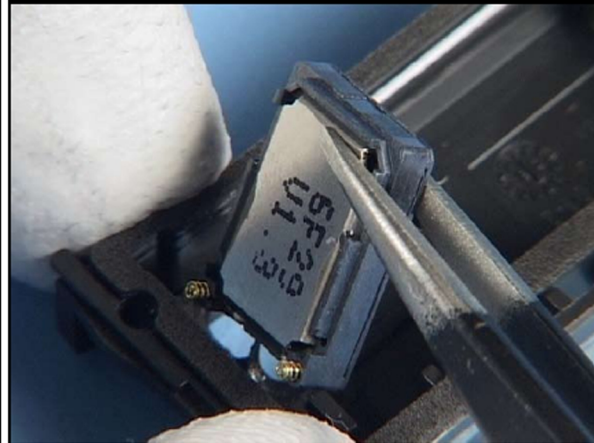

20. Remove it with tweezers now. Bear in mind that the IHF GASKET will be destroyed during the removal and must be renewed when reassembly.




21. The disassembly procedure is now finished.

■ Lower block assembly




1. Assembly

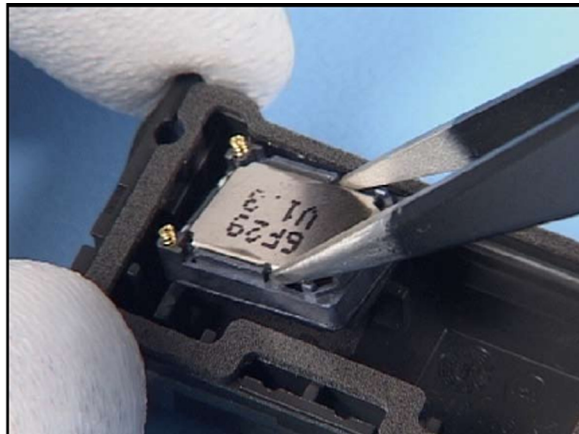


2. Fit a new IHF GASKET and place the IHF SPEAKER into the ANTENNA MODULE. Smooth it down evenly.



3. Insert the SIM LID and close it.

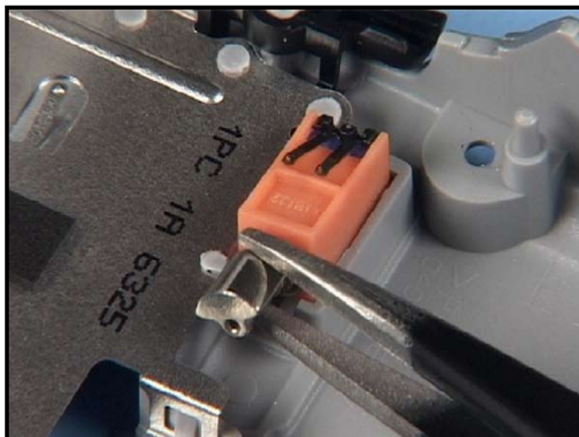

4. Place the VIBRA MOTOR. Do not bend the spring contacts.

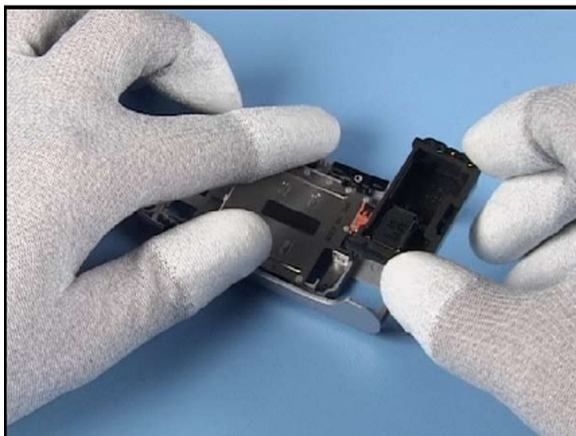


5. Click the ANTENNA MODULE into the C-COVER.



6. Ensure ist correct positioning.



7. Insert the MICROPHONE.

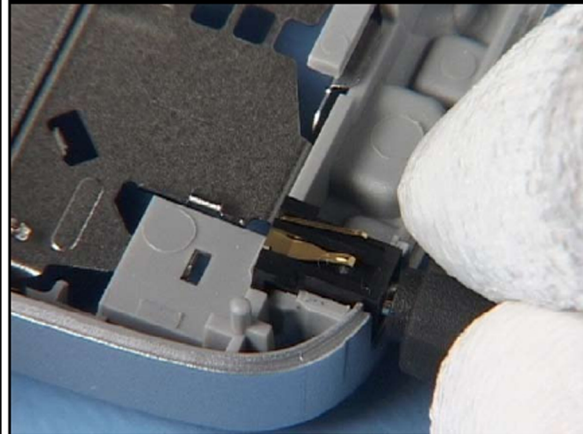

8. And the DC JACK.




9. Place the KEYMAT.




10. Mind the correct positioning.



11. Bring the ENGINE MODULE into position near the hinge.

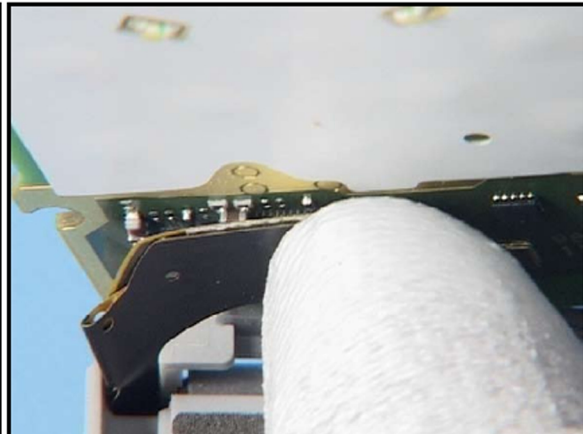


12. Close the flex connector.

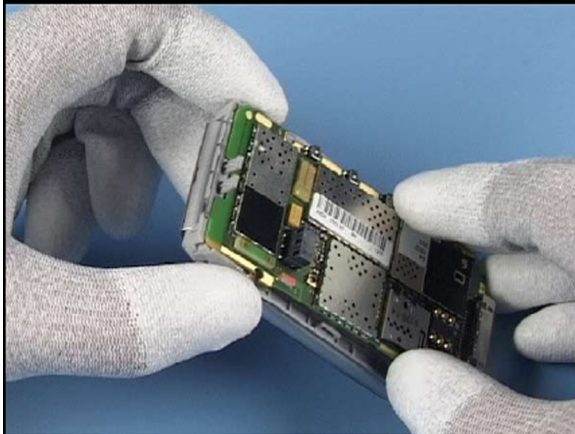

13. Position the ENGINE MODULE into the cover.



14. Now align the C-COVER above the A-COVER and push it down evenly.

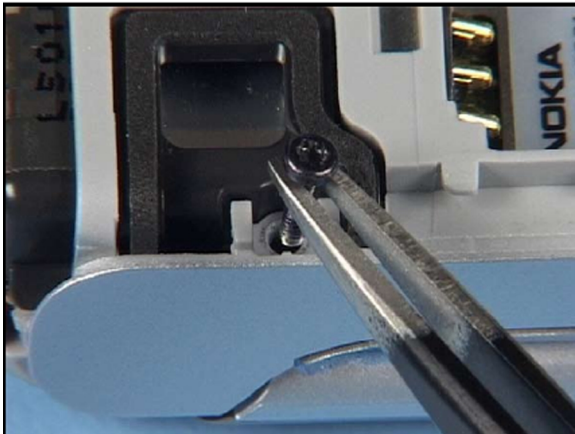


15. Insert the screws.



16. Set the correct torque.



17. Apply the torque to all screws.

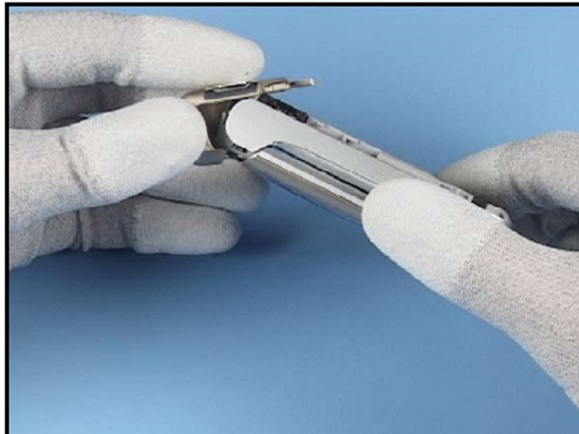

18. Fit the ANTENNA COVER.



19. Click the snaps into their places, beginning from the upper side of the ANTENNA COVER.



20. Note the correct positioning of the snaps before going on.



21. Complete the assembly with the BATTERY COVER.

(This page left intentionally blank.)

6 — BB Troubleshooting and Manual Tuning Guide

(This page left intentionally blank.)

Table of Contents

Baseband troubleshooting.....	6-5
General power checking troubleshooting.....	6-7
Clocking troubleshooting.....	6-8
Battery current measuring fault troubleshooting.....	6-10
Flash programming fault troubleshooting.....	6-11
COMBO memory troubleshooting.....	6-12
Keyboard troubleshooting.....	6-12
USB troubleshooting.....	6-14
Backup battery troubleshooting.....	6-15
Charging troubleshooting.....	6-16
Dead or jammed troubleshooting.....	6-17
MR sensor troubleshooting.....	6-18
Vibra troubleshooting.....	6-19
MicroSD troubleshooting.....	6-20
SIM troubleshooting.....	6-21
Display module troubleshooting.....	6-22
General instructions for display troubleshooting.....	6-22
Display fault troubleshooting (main and second displays).....	6-24
Displays and keyboard backlight troubleshooting.....	6-25
LED driver troubleshooting.....	6-26
Camera troubleshooting.....	6-28
Introduction to camera troubleshooting.....	6-28
Taking and evaluating test pictures.....	6-28
Camera hardware failure message troubleshooting.....	6-29
Camera hardware troubleshooting.....	6-30
Front camera viewfinder troubleshooting.....	6-31
Front camera bad image quality troubleshooting.....	6-32
Bluetooth troubleshooting.....	6-33
Introduction to Bluetooth/FM Radio troubleshooting.....	6-33
Bluetooth settings for Phoenix.....	6-34
Bluetooth self tests in Phoenix.....	6-35
Bluetooth BER failure troubleshooting.....	6-37
BT audio failure troubleshooting.....	6-39
FM Radio troubleshooting.....	6-40
Audio troubleshooting.....	6-41
Audio troubleshooting test instructions.....	6-41
Internal earpiece troubleshooting.....	6-44
Internal microphone troubleshooting.....	6-44
IHF speaker troubleshooting.....	6-46
External microphone troubleshooting.....	6-47
External earpiece troubleshooting.....	6-48
Introduction to acoustics troubleshooting.....	6-49
Earpiece troubleshooting.....	6-50
IHF troubleshooting.....	6-51
Microphone troubleshooting.....	6-52
Baseband manual tuning guide.....	6-53
Energy management calibration.....	6-53

List of Tables

Table 10 Display module troubleshooting cases	6-22
Table 11 Pixel defects	6-23
Table 12 Calibration value limits	6-53

List of Figures

Figure 33 SleepCLK	6-9
Figure 34 SYSCLK	6-9
Figure 35 Flashing pic 1. Take single trig measurement for the rise of the BSI signal.....	6-11
Figure 36 Flashing pic 2. Take single trig measurement for the rise of the BSI signal.....	6-11
Figure 37 Charging backup battery	6-15
Figure 38 Discharging backup battery	6-15
Figure 39 RM-188 Bluetooth	6-33
Figure 40 RM-198 Bluetooth	6-34
Figure 41 RM-188/198 FM radio	6-34
Figure 42 BER test result.....	6-35
Figure 43 Bluetooth self tests in Phoenix.....	6-36
Figure 44 Single-ended output waveform of the Ext_in_HP_out measurement when earpiece is connected.	6-43
Figure 45 Differential output waveform of the Ext_in_IHF_out out loop measurement when speaker is connected.	6-43
Figure 46 Single-ended output waveform of the HP_in_Ext_out loop when microphone is connected....	6-43


■ Baseband troubleshooting

Context

This section is intended to be a guide for localising and repairing electrical faults. The fault repairing is divided into troubleshooting paths.


The following main troubleshooting tree describes the different baseband troubleshooting paths to be followed in fault situations.

Troubleshooting flow

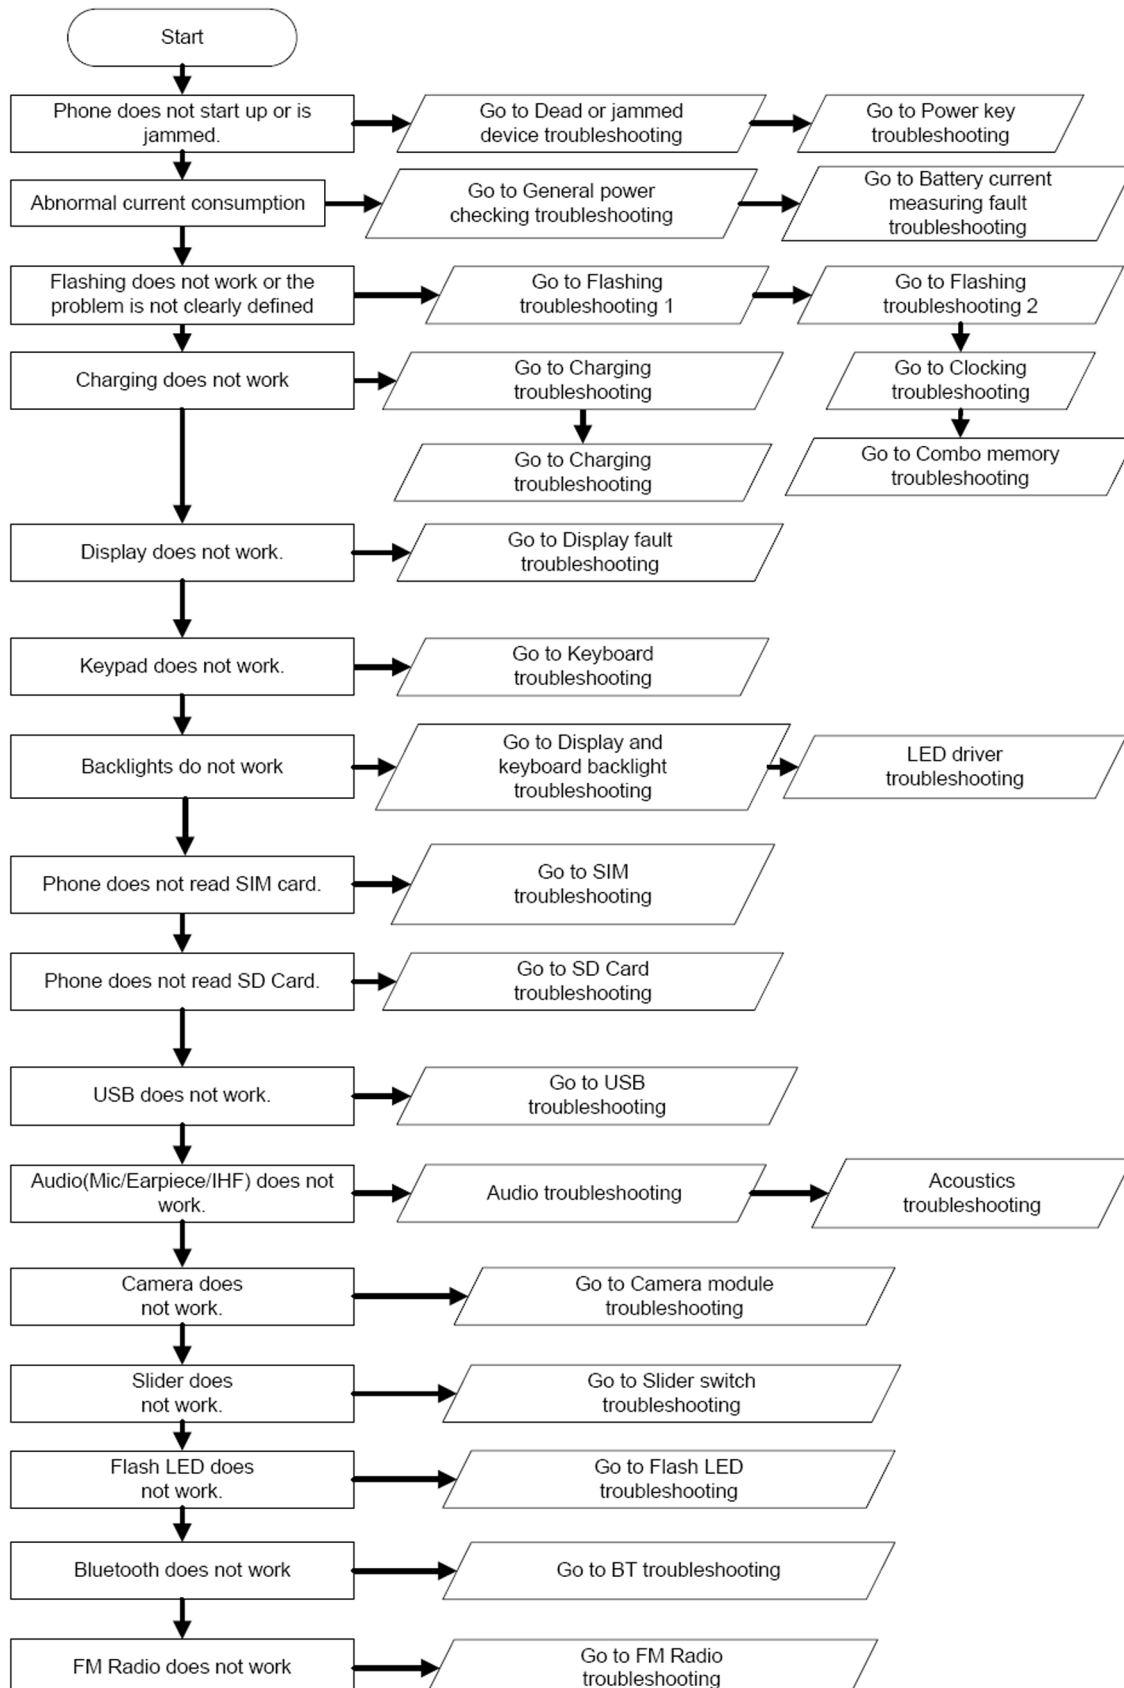


■ **General power checking troubleshooting**

Troubleshooting flow

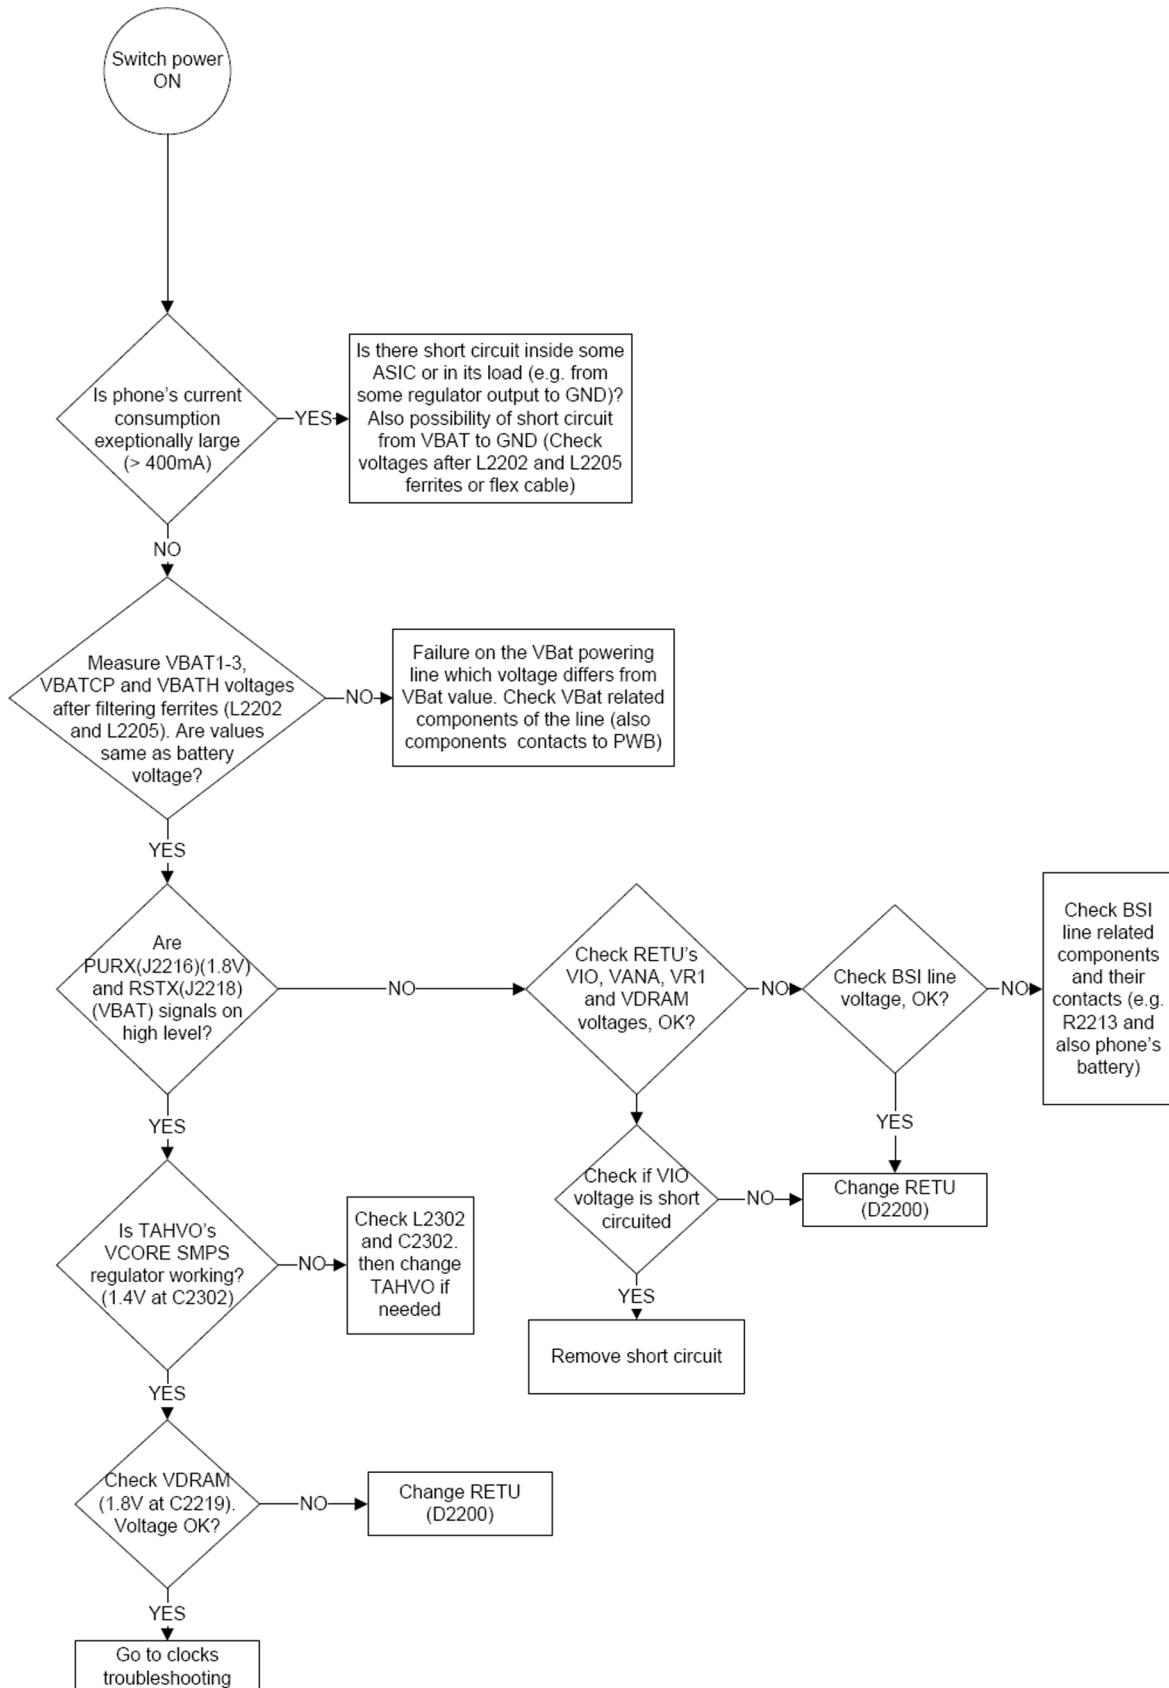

■ **Clocking troubleshooting**

Troubleshooting flow

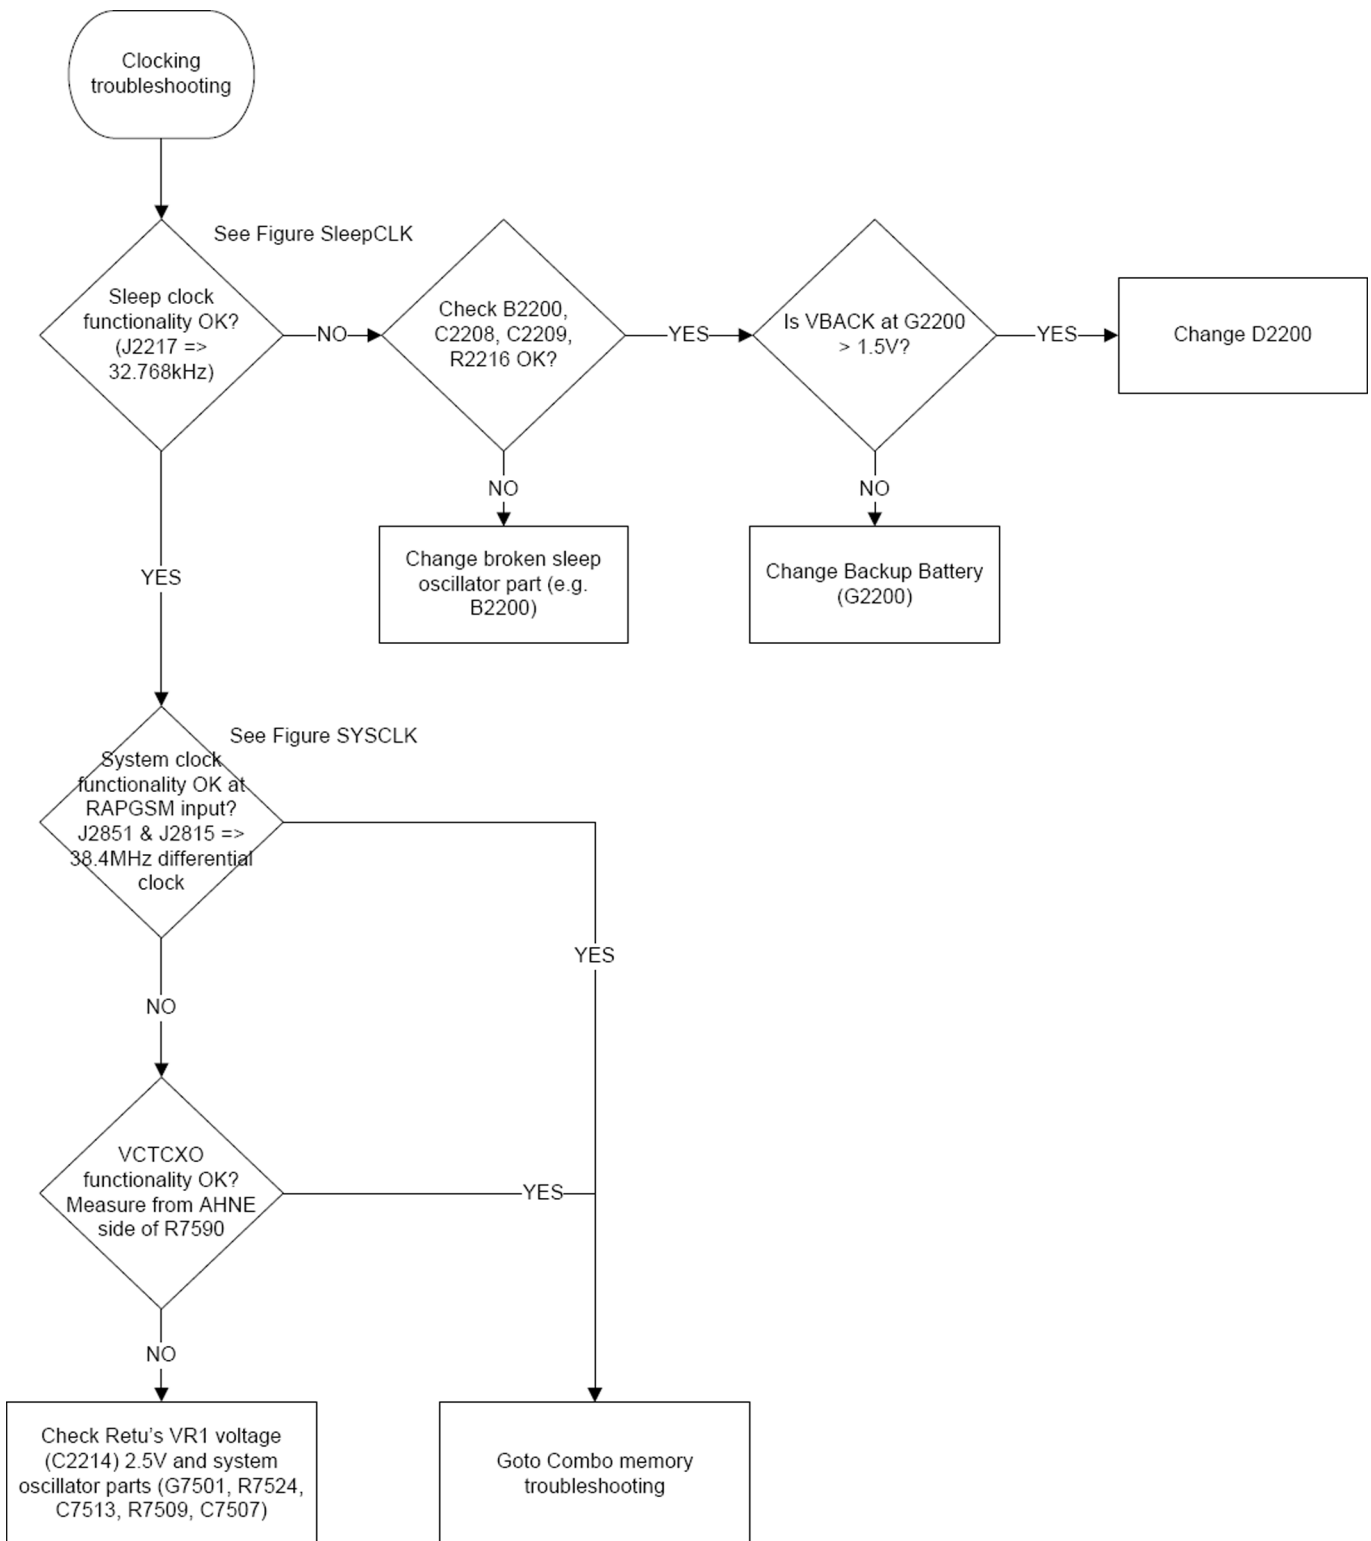

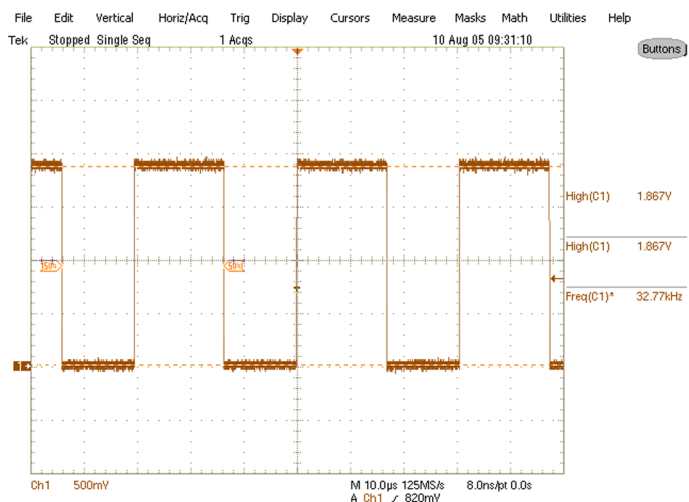


Figure 33 SleepCLK


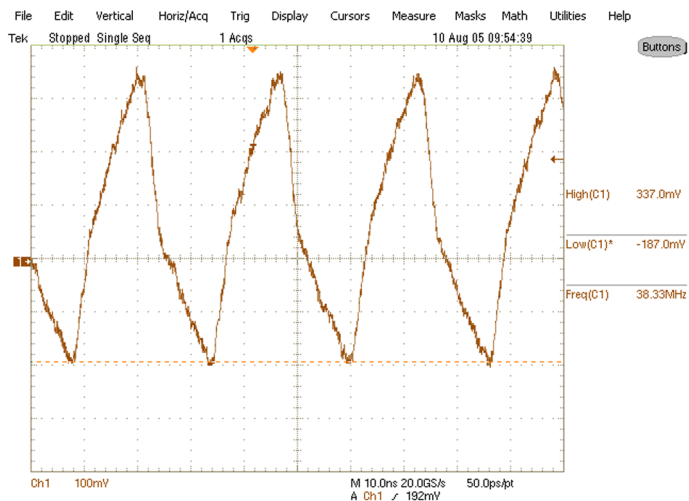


Figure 34 SYSCLK

Battery current measuring fault troubleshooting

Troubleshooting flow

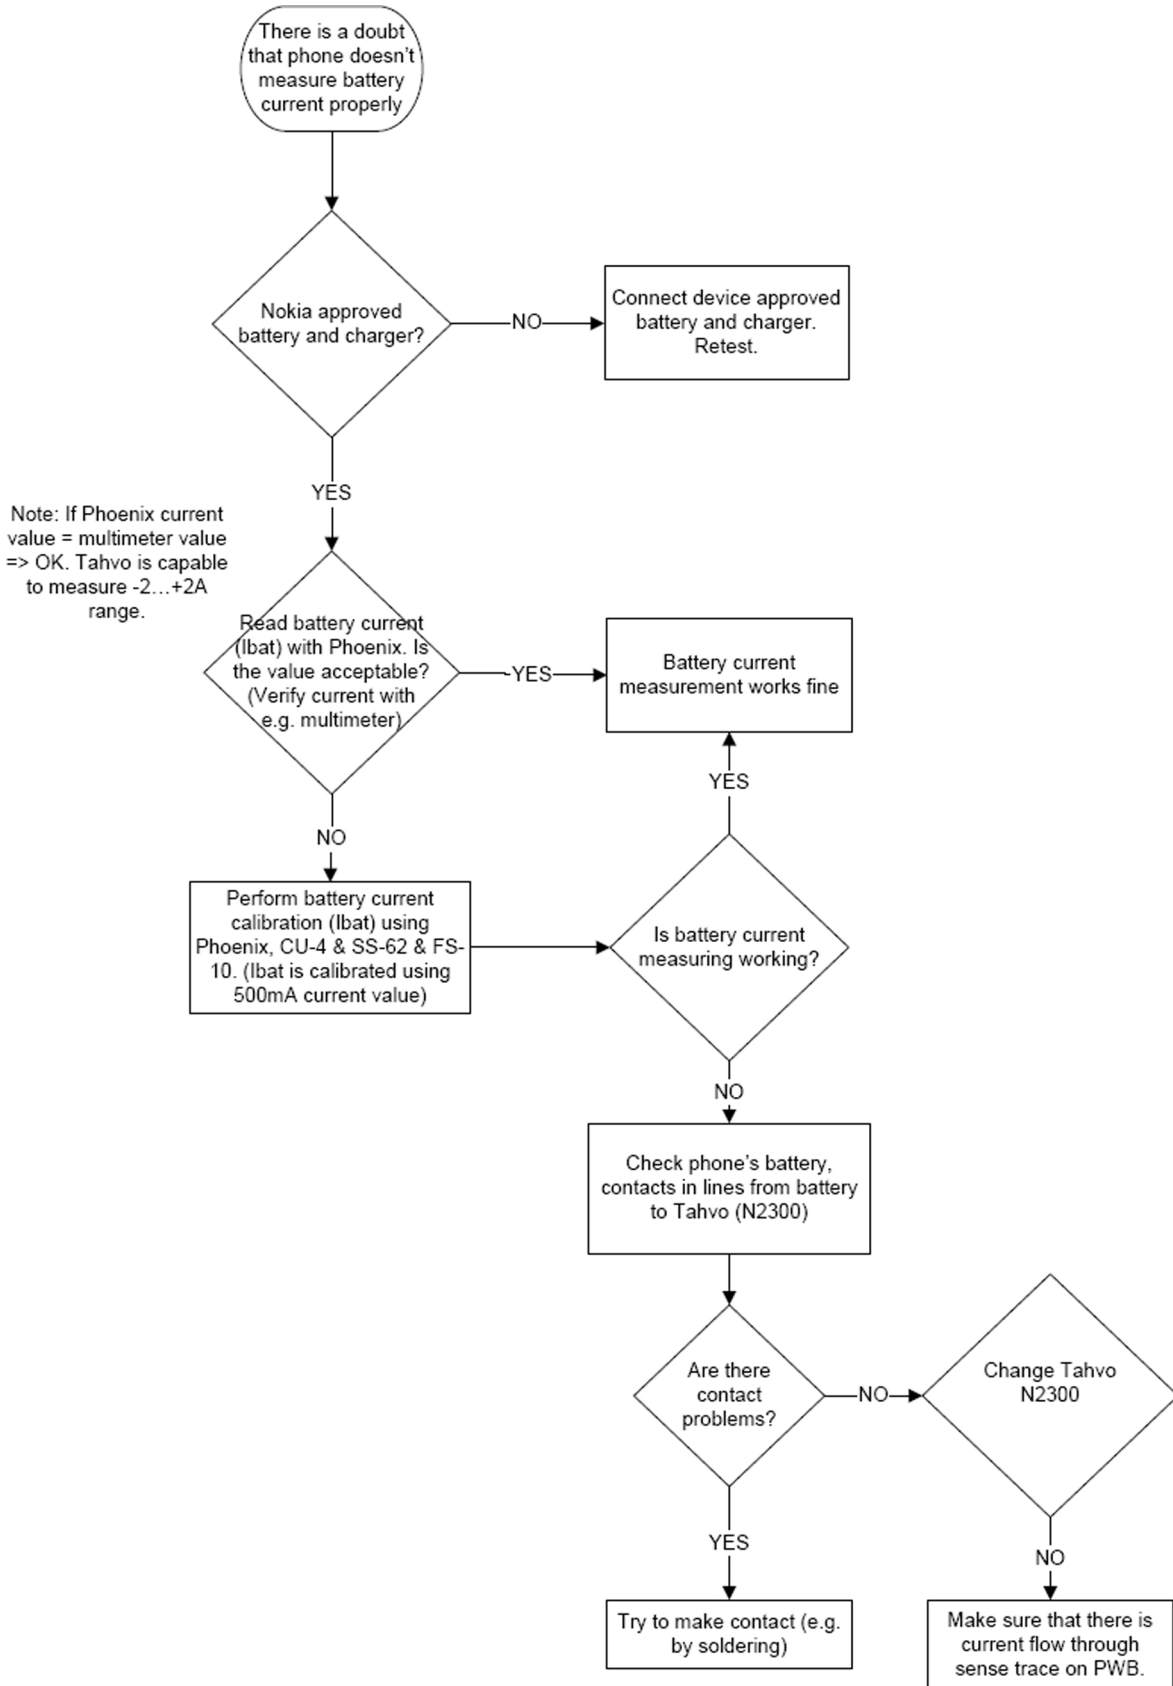

■ Flash programming fault troubleshooting

Troubleshooting flow

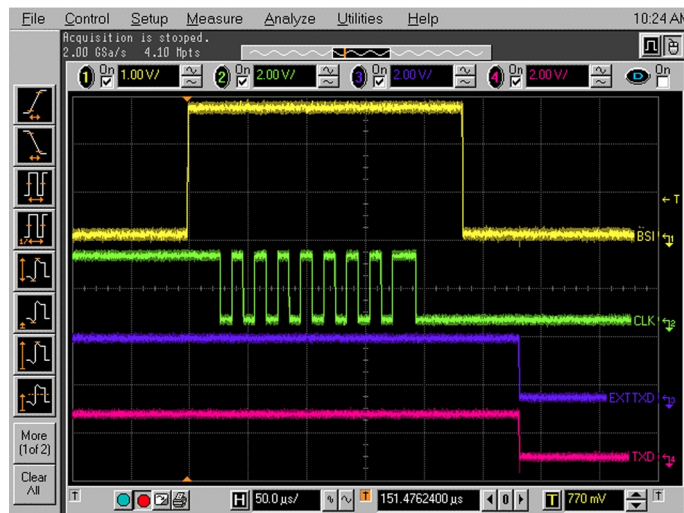


Figure 35 Flashing pic 1. Take single trig measurement for the rise of the BSI signal.


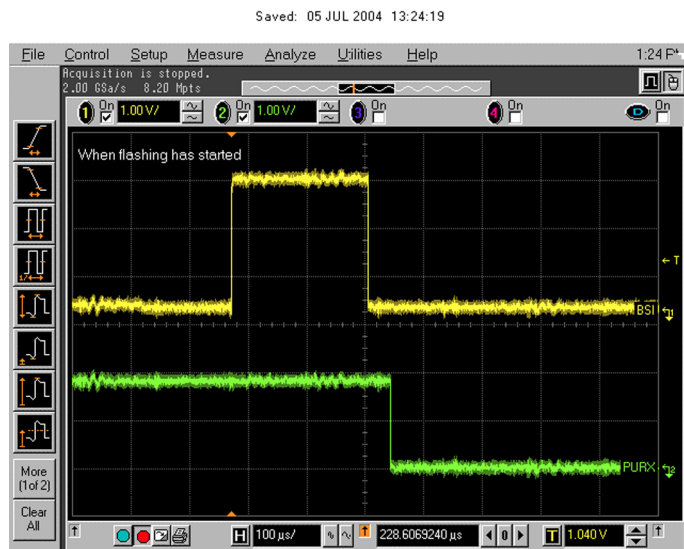


Figure 36 Flashing pic 2. Take single trig measurement for the rise of the BSI signal.

COMBO memory troubleshooting

Troubleshooting flow

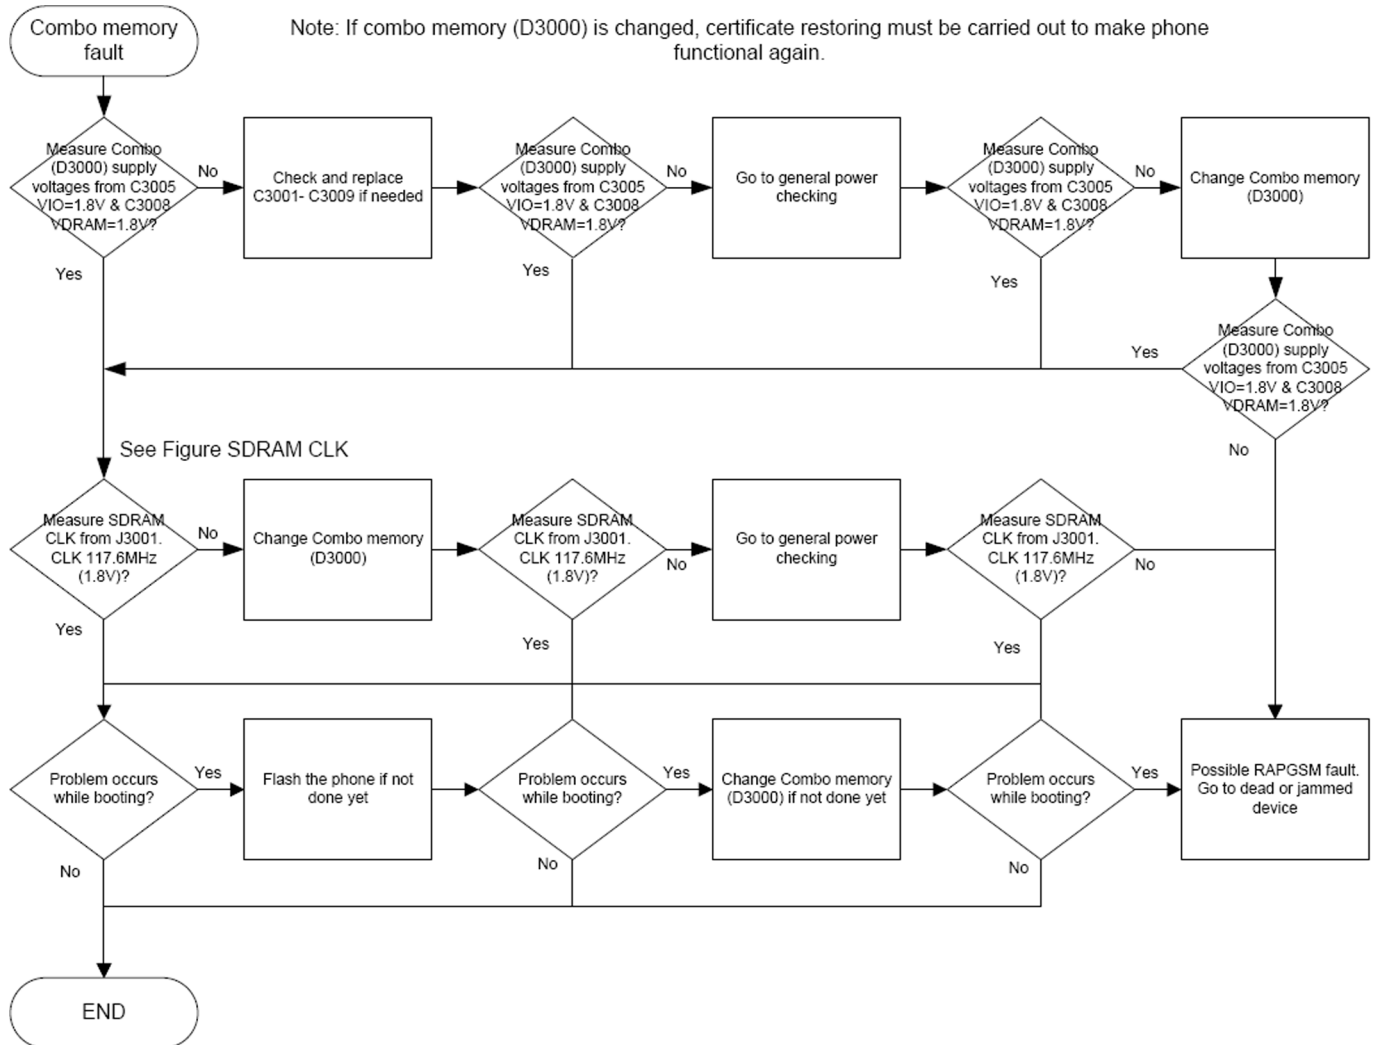


Keyboard troubleshooting

Context

There are two possible failure modes in the keyboard: a) One or more keys can be stuck, so that the key does not react when a keydome is pressed. This kind of failure is caused by mechanical reasons (dirt, rust), b) Malfunction of several keys at the same time; this happens when one or more rows or columns are failing (shortcut or open connection).


For a more detailed description of the keyboard and keymatrix, see section Keyboard. If the failure mode is not clear, start with the Keyboard Test in Phoenix.

Troubleshooting flow

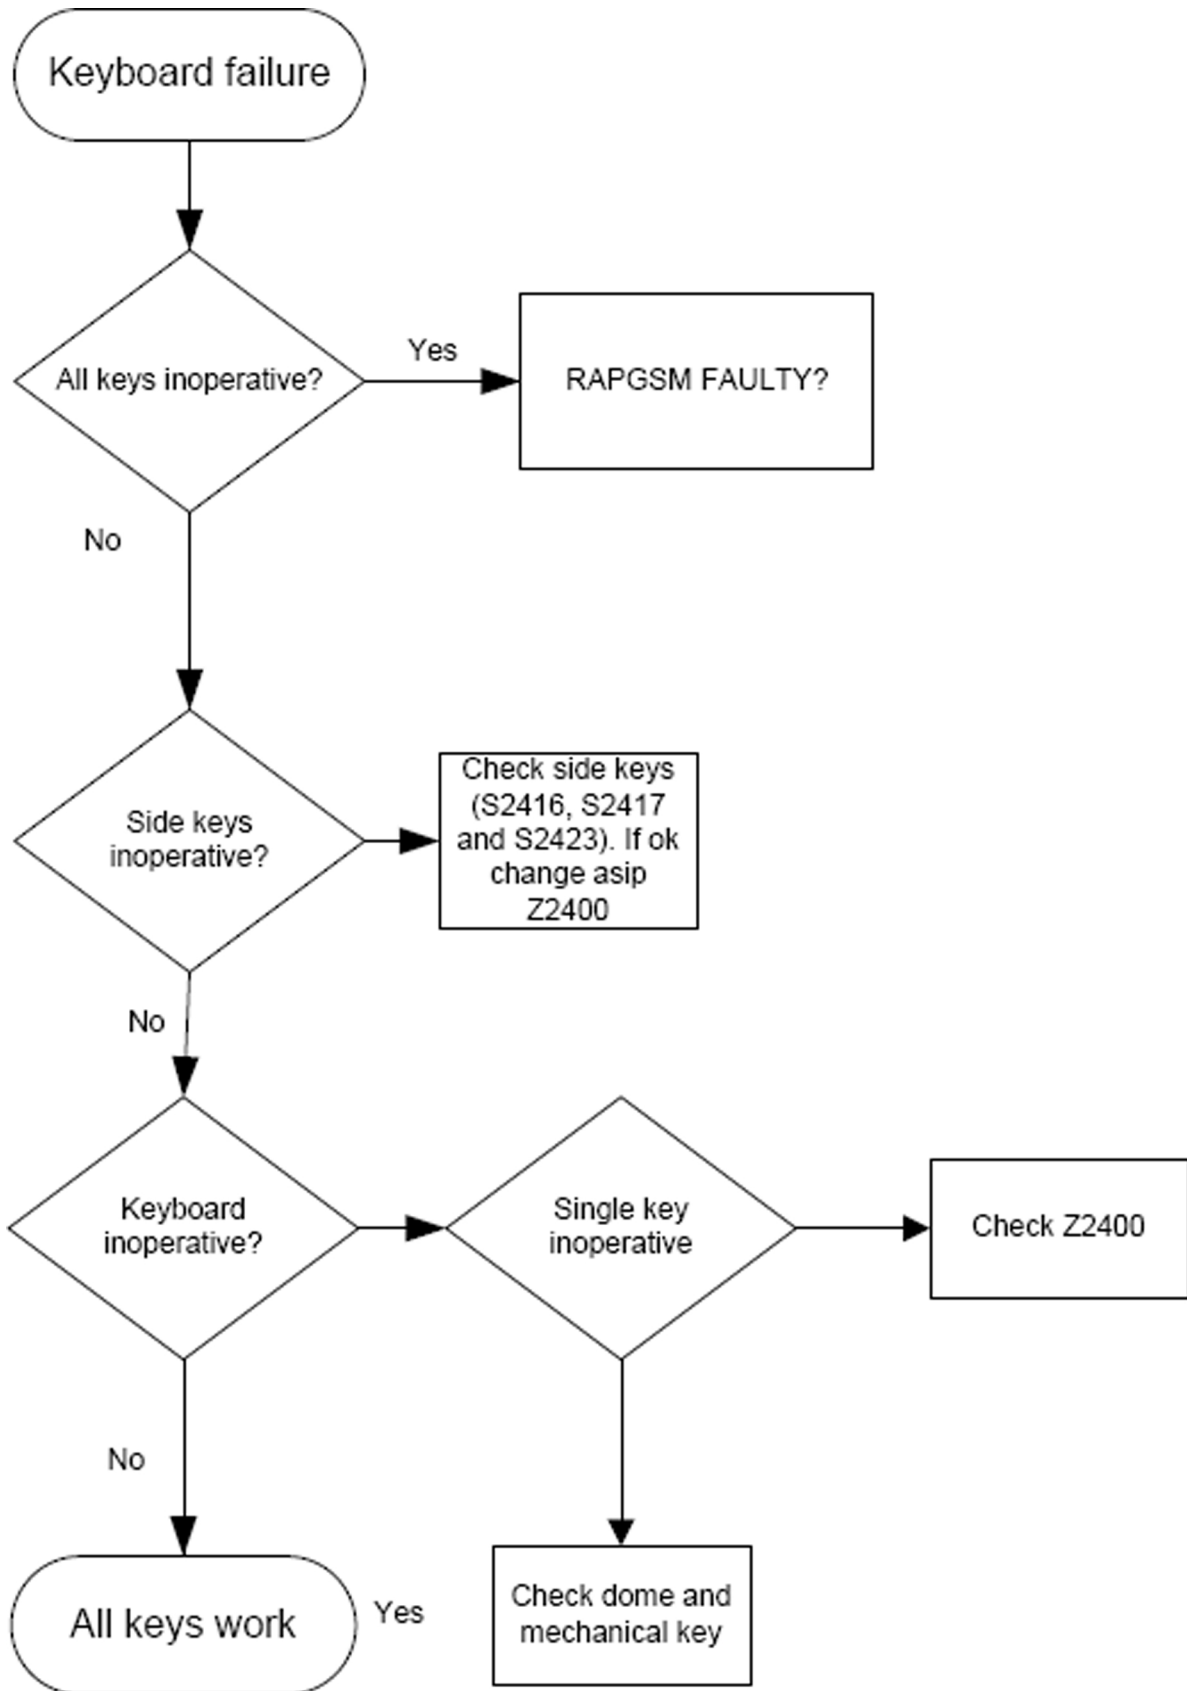

■ **USB troubleshooting**

Troubleshooting flow

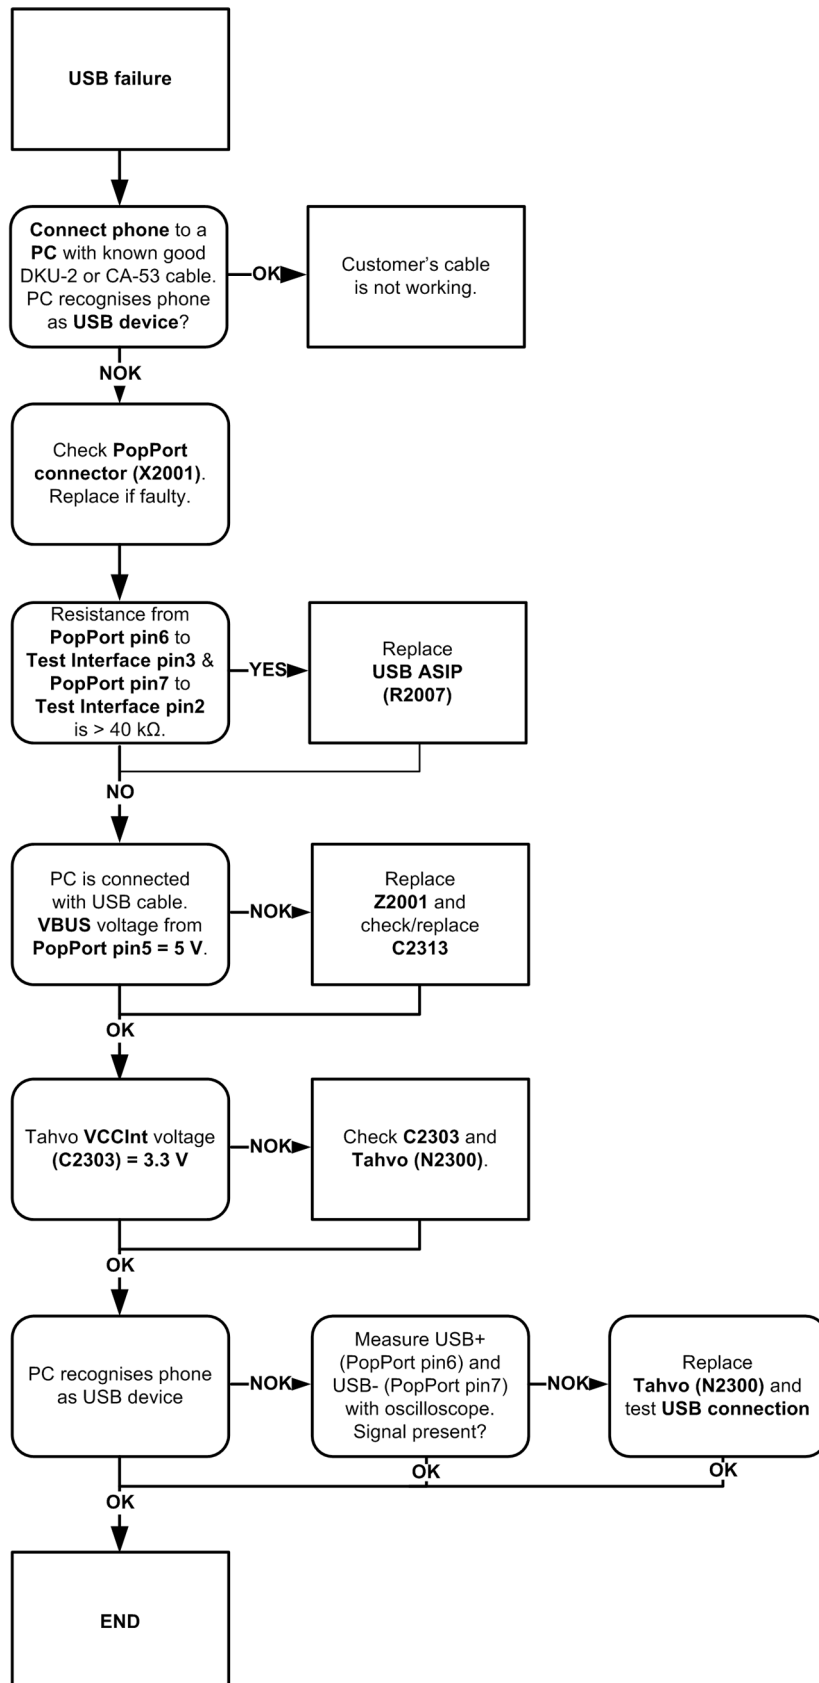

■ Backup battery troubleshooting

Verify that the backup battery is empty ($U < 1V$). Switch the phone on. Measure voltage of the battery when the main battery is connected to the phone and the phone is switched on.

Wait a few minutes and monitor that the backup battery voltage rises. Switch off the phone, disconnect the main battery and monitor that the voltage of the backup battery fills up. Normal behaviour of the voltage is described in the figures below.

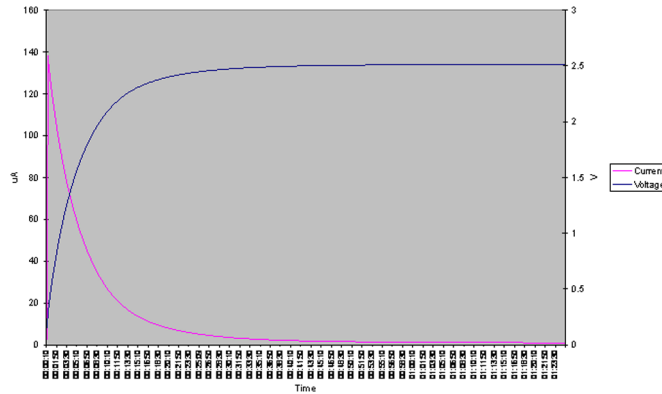


Figure 37 Charging backup battery


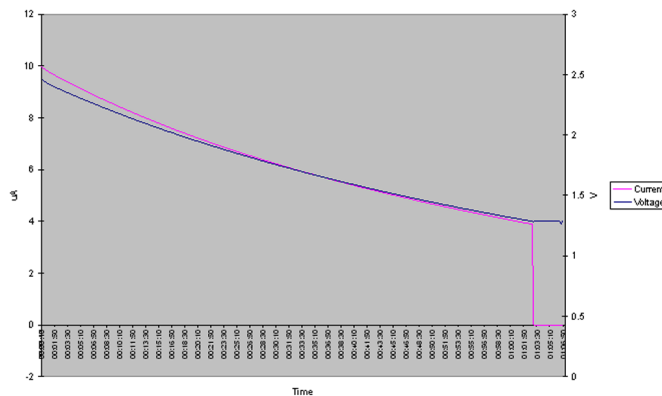


Figure 38 Discharging backup battery

If the voltage rises and falls quickly, check whether C2233 is broken or short-circuited. Backup battery can be also dead. If the voltage stays $\sim 0V$, check resistance VBACK against GND. If there is no short-circuit, RETU is faulty. Replace RETU.


■ **Charging troubleshooting**

Troubleshooting flow

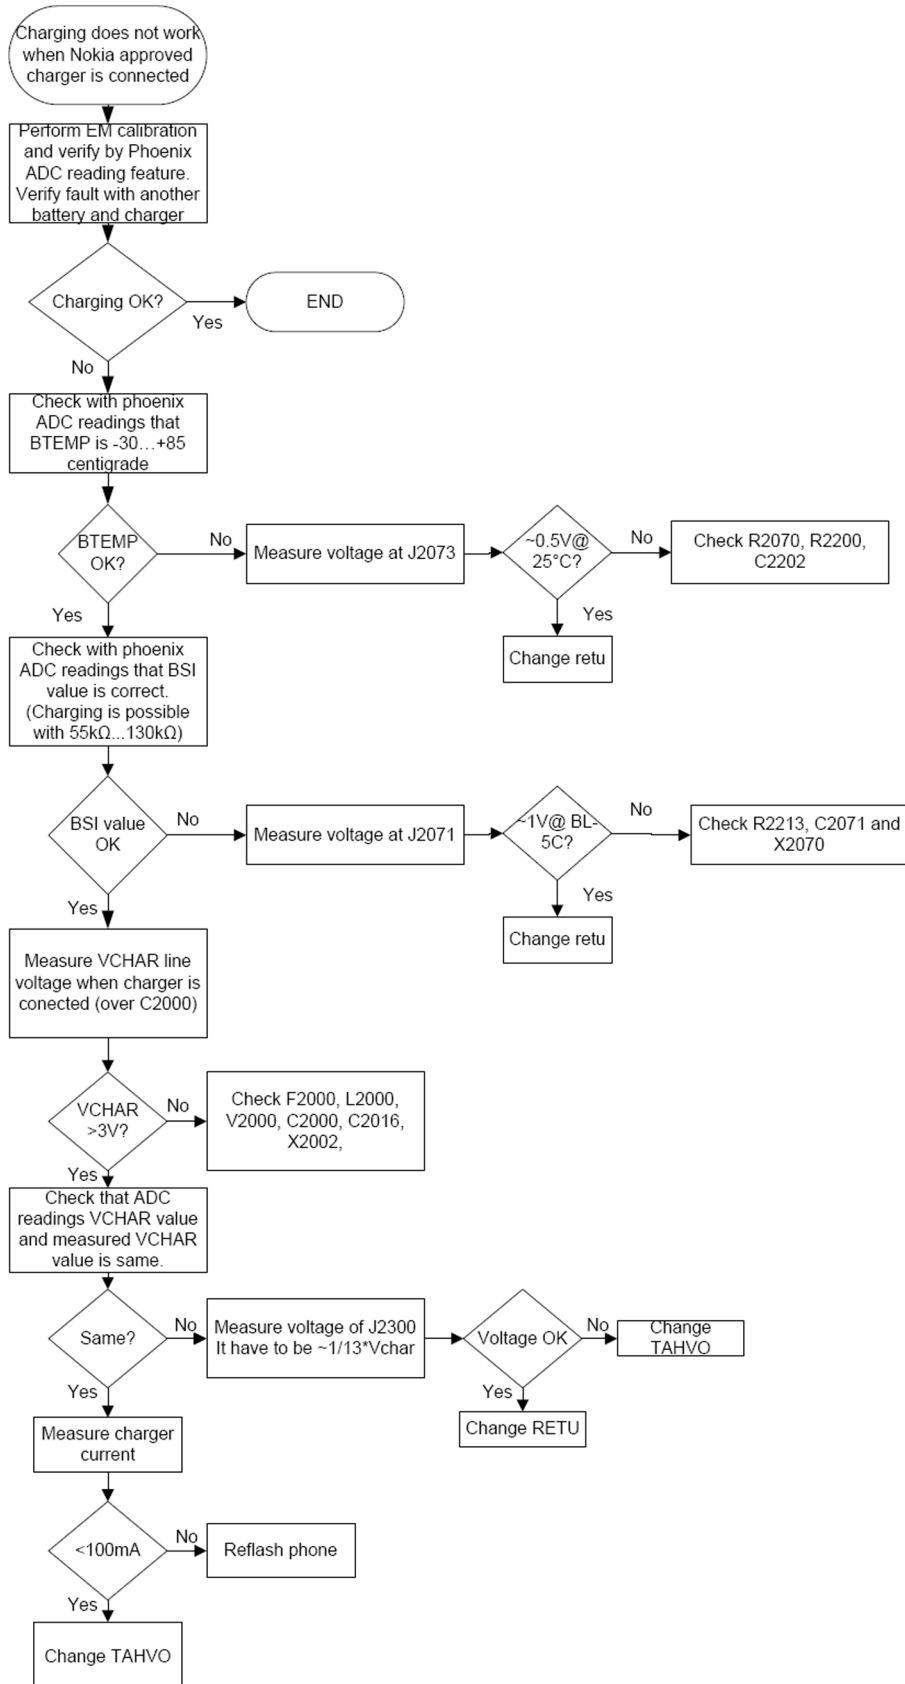


■ Dead or jammed troubleshooting

Troubleshooting flow

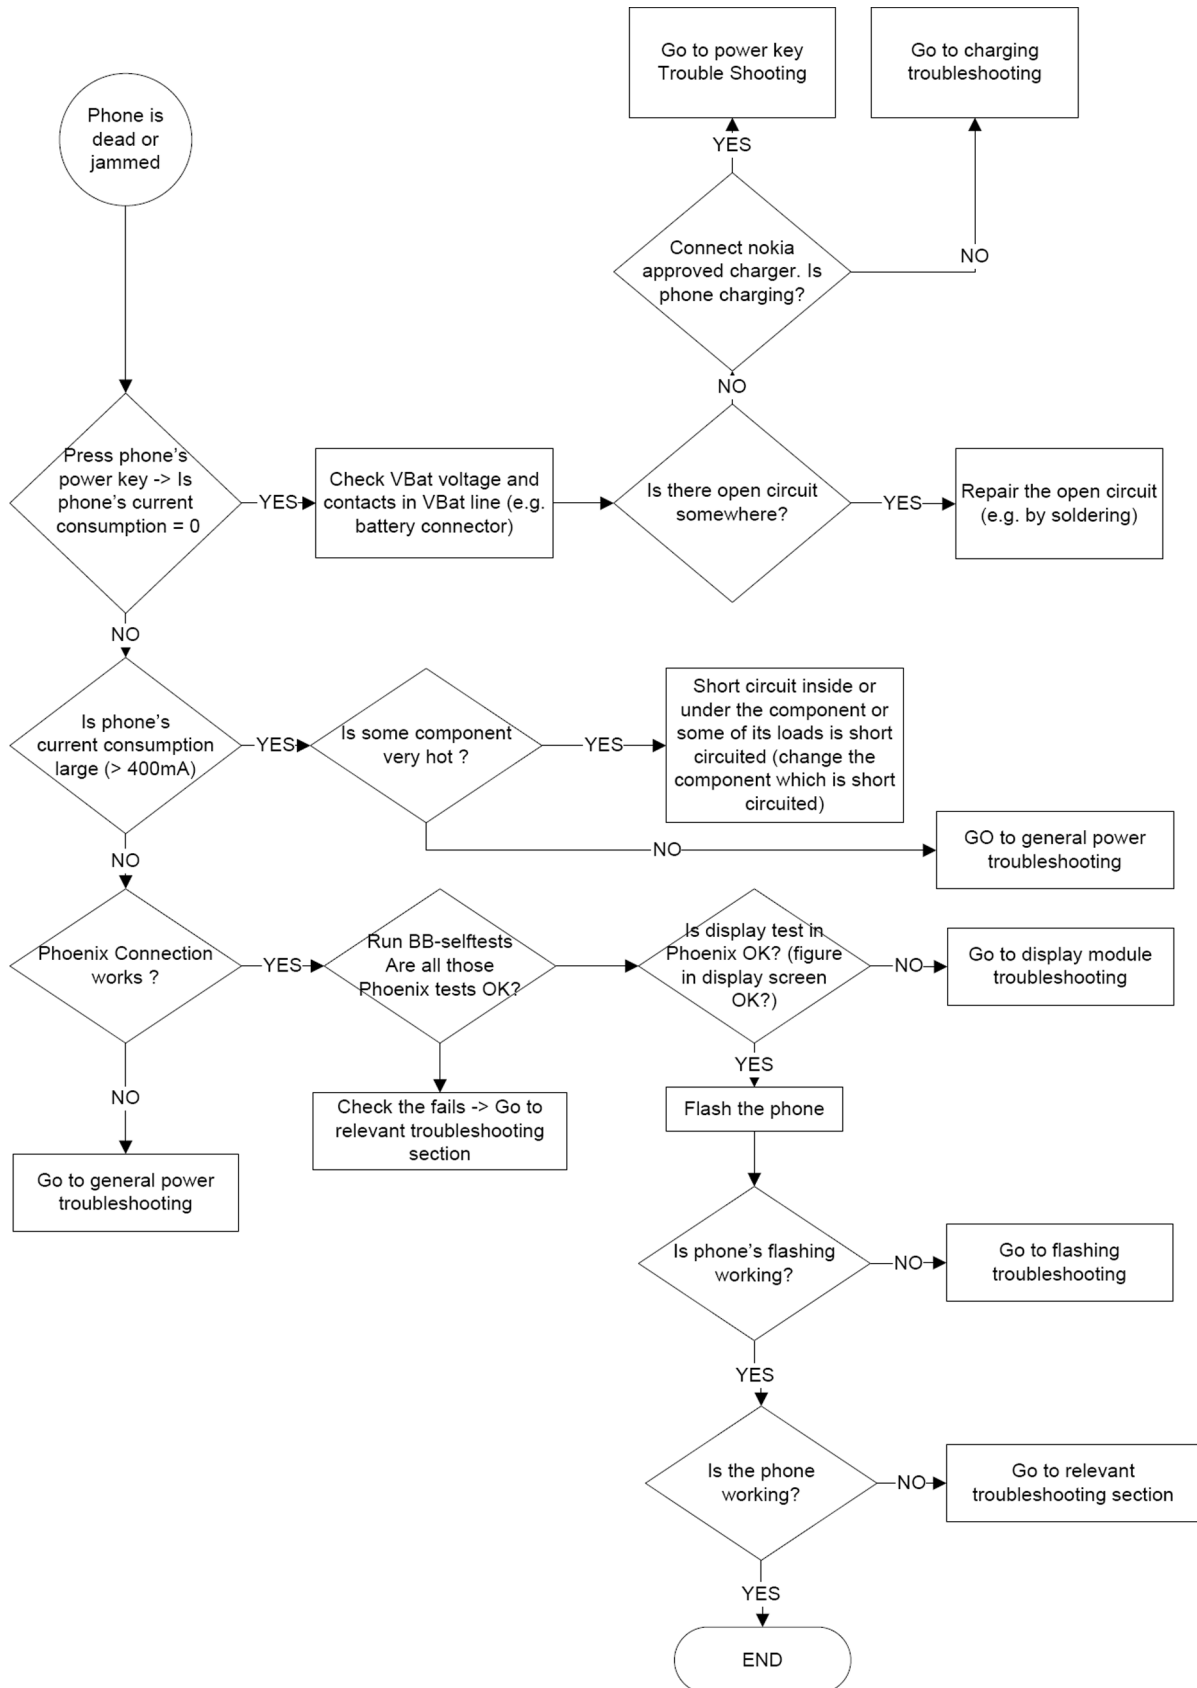


■ MR sensor troubleshooting

Troubleshooting flow

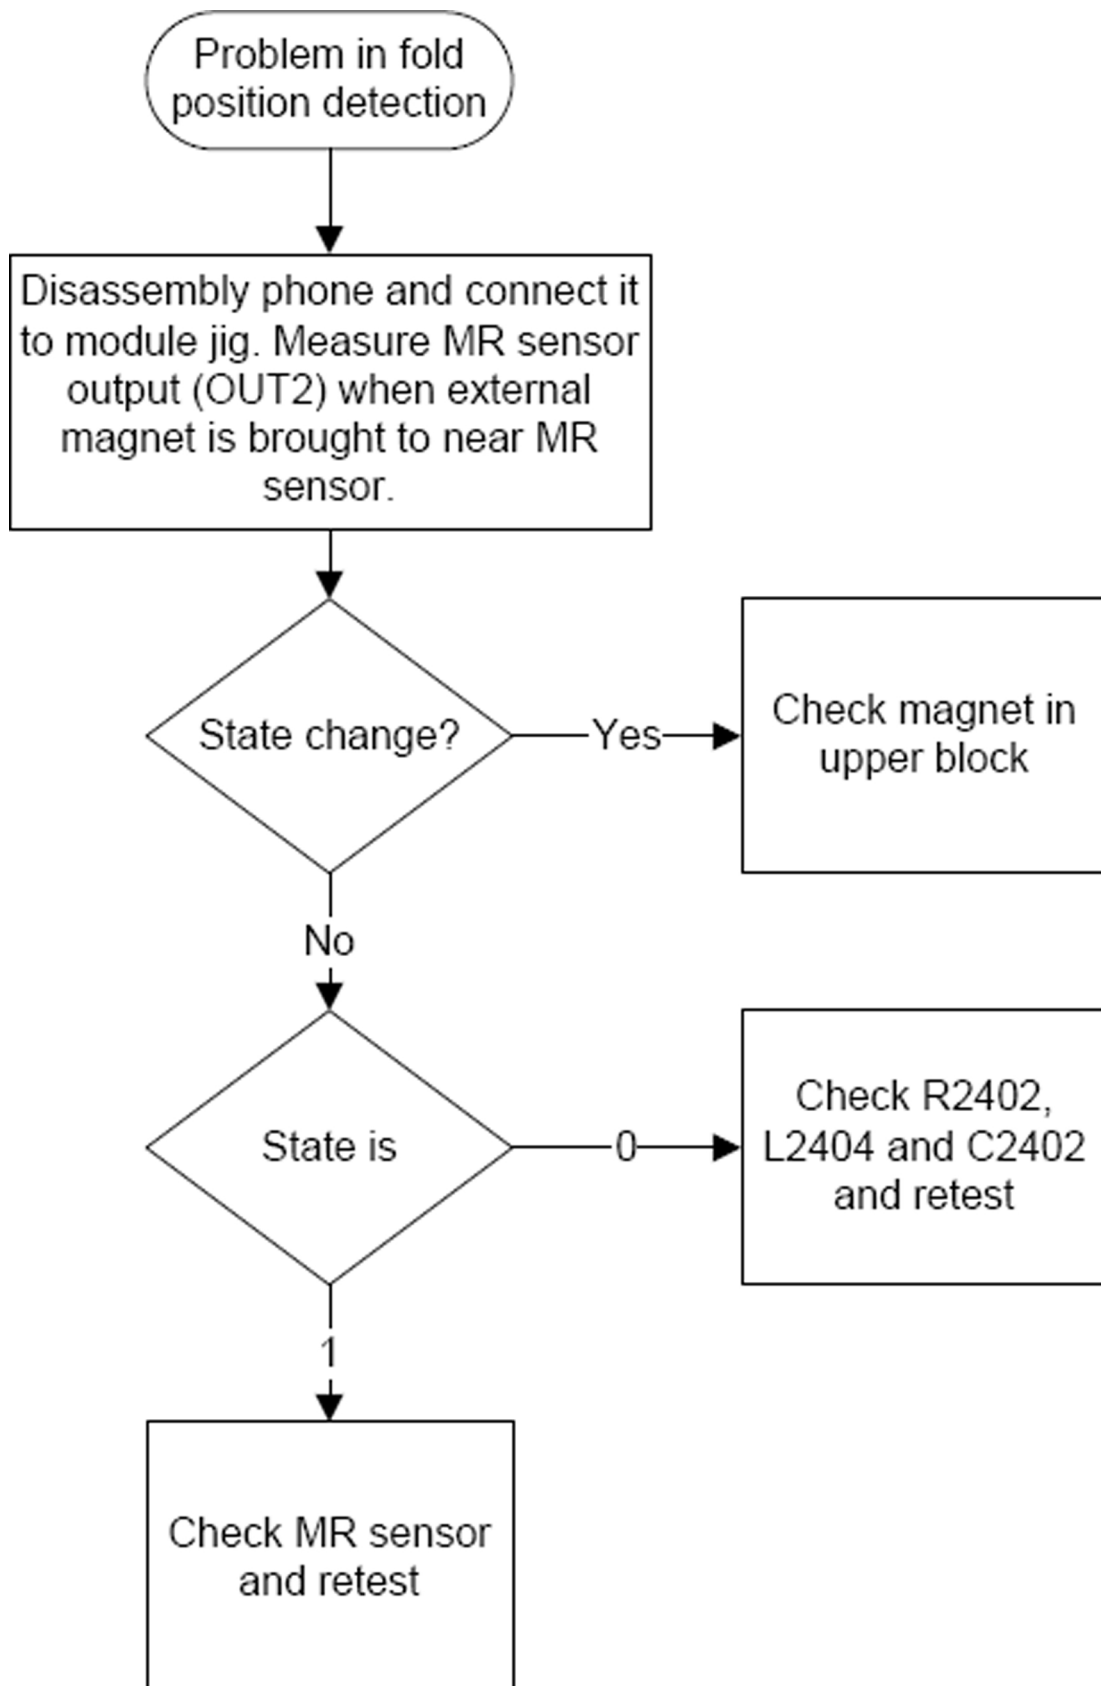


Vibra troubleshooting

Troubleshooting flow

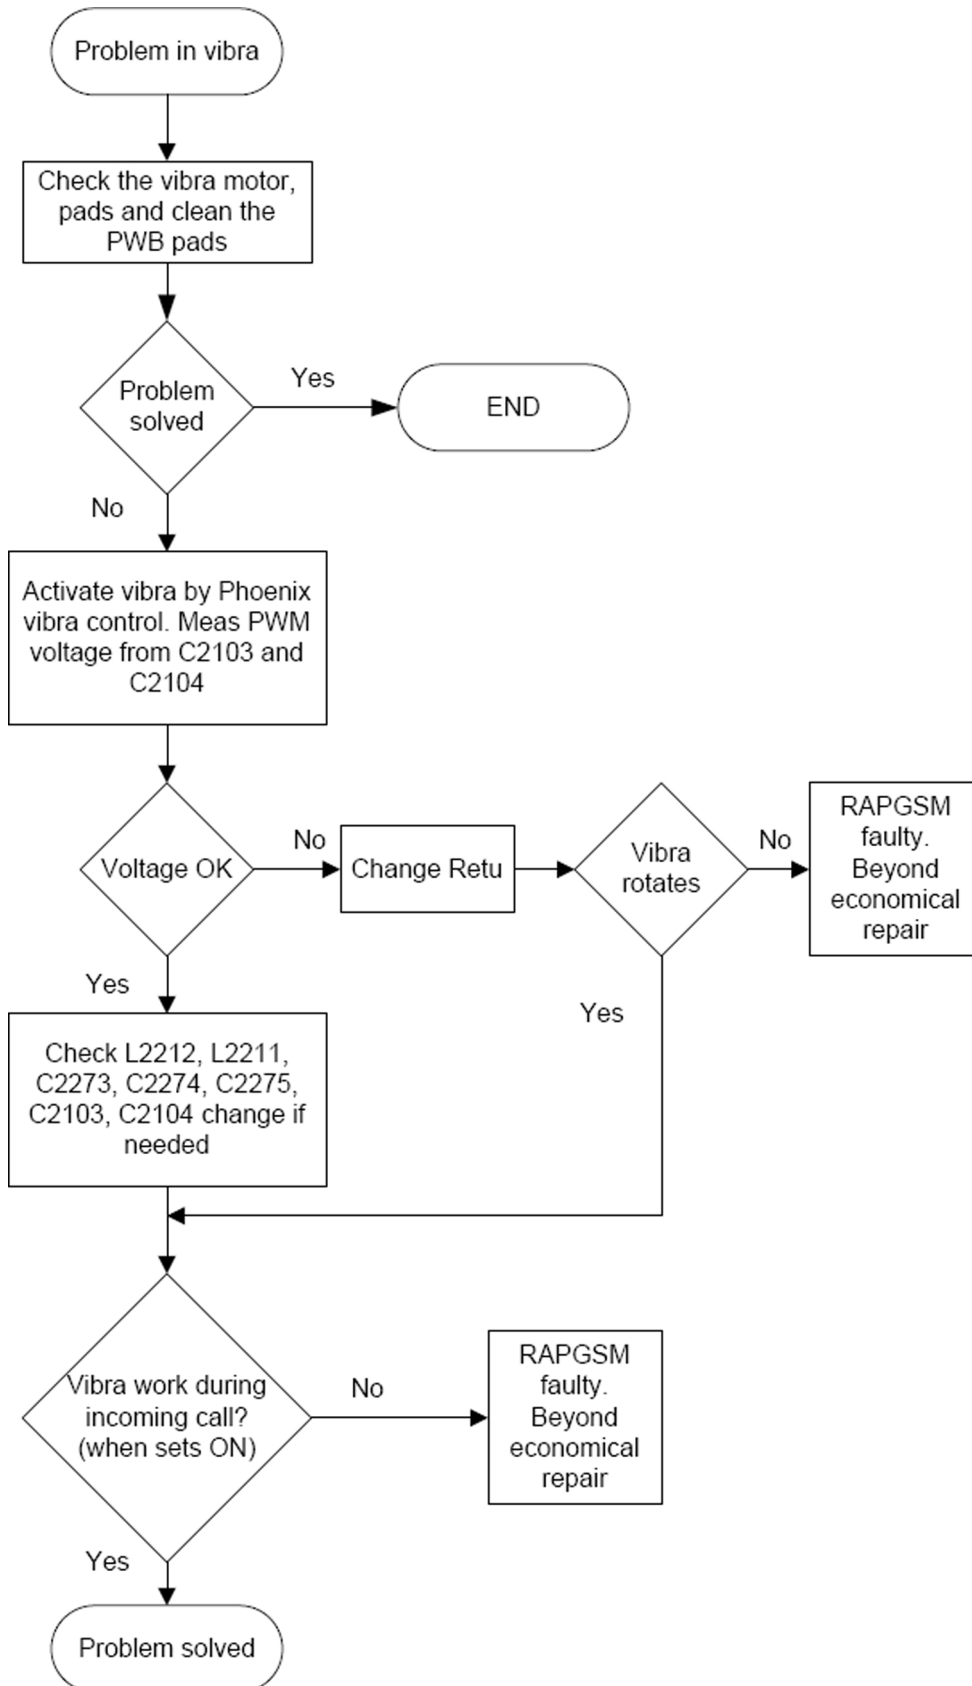


■ **MicroSD troubleshooting**

Troubleshooting flow

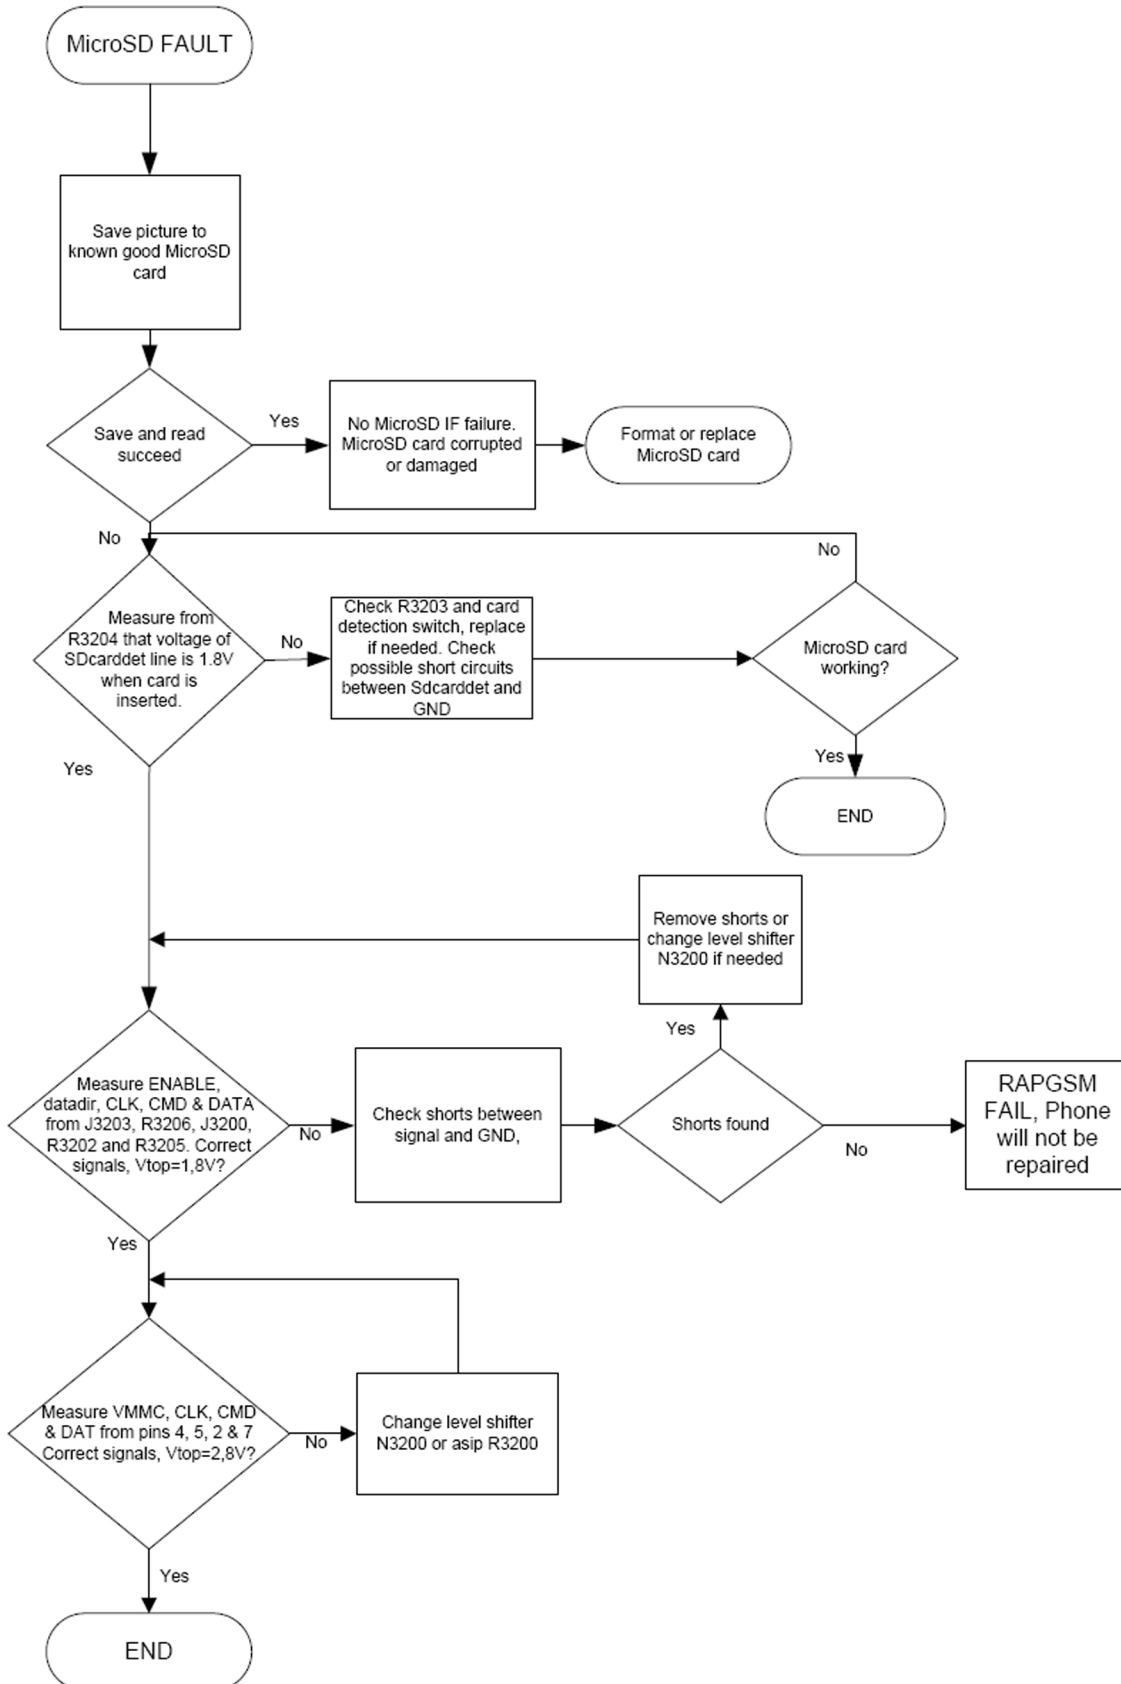

■ **SIM troubleshooting**

Troubleshooting flow

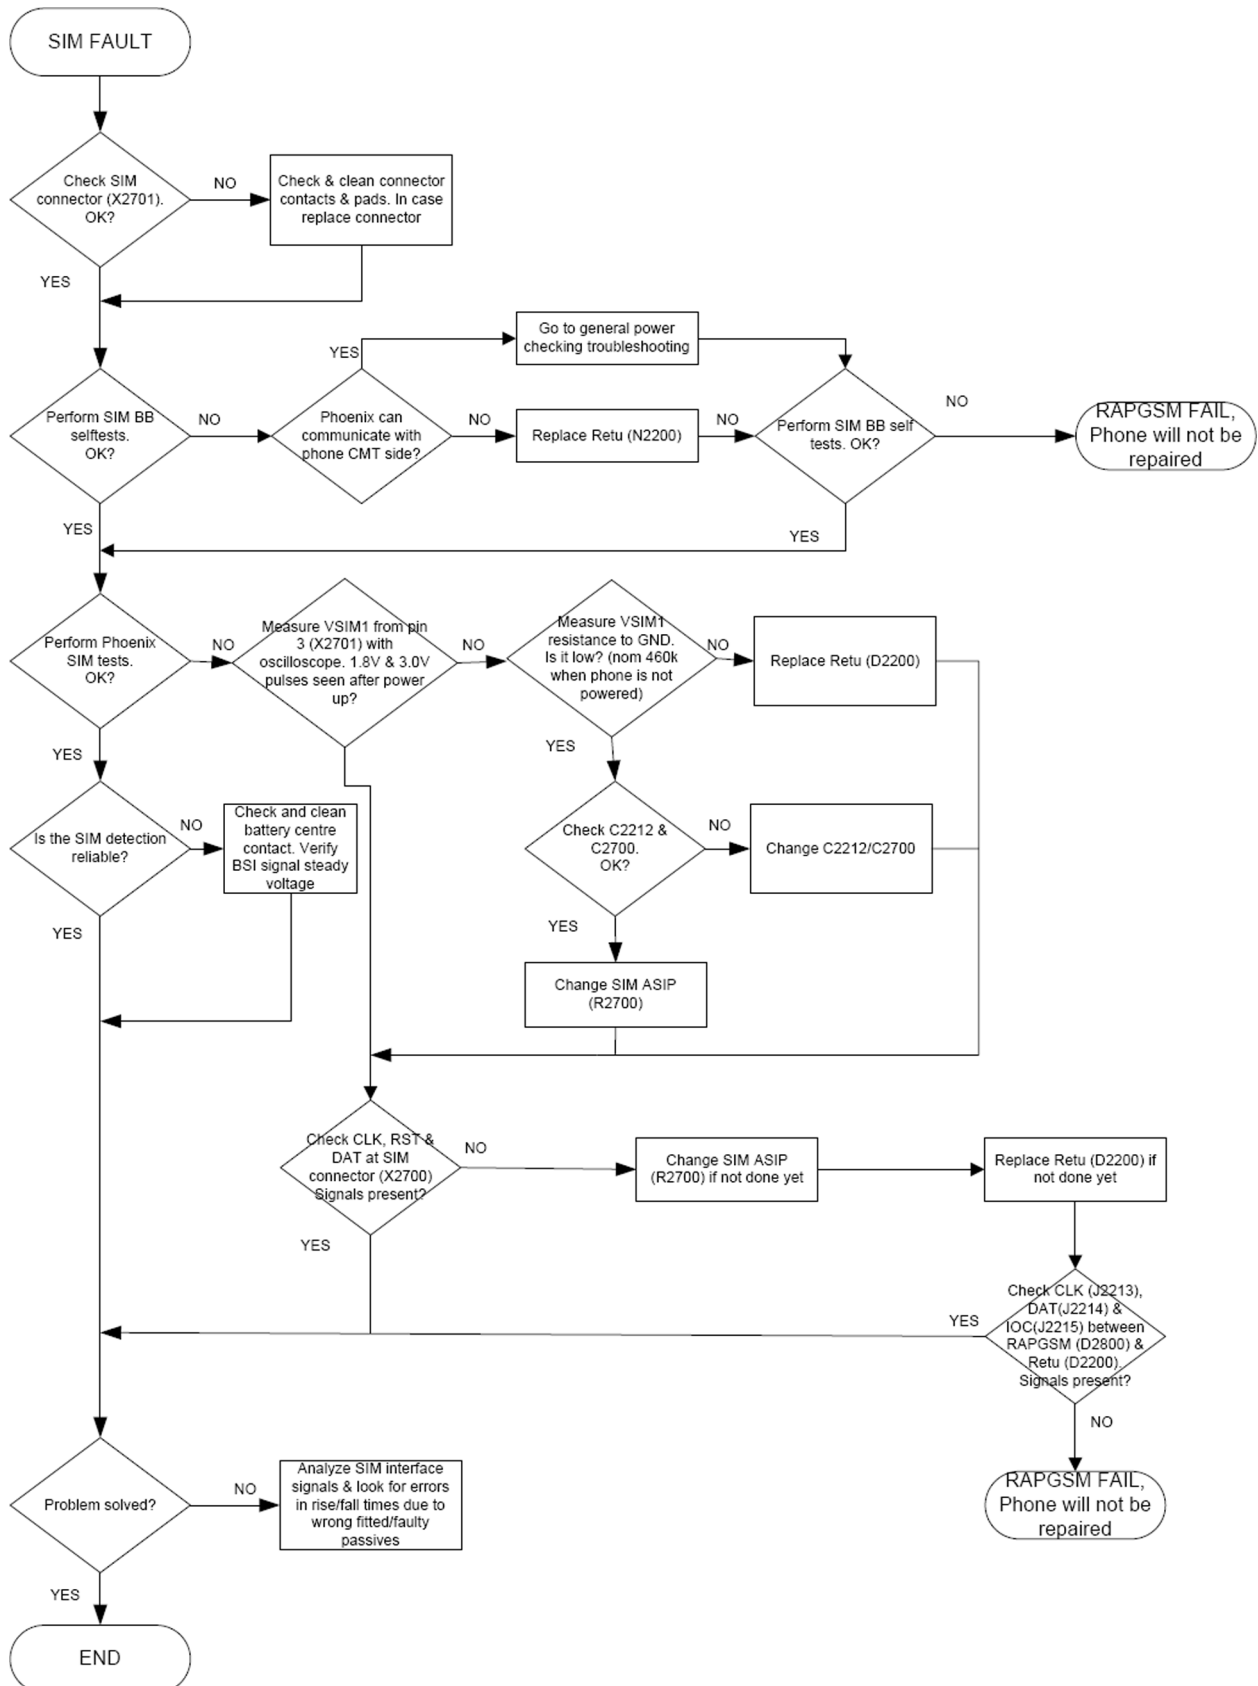

■ Display module troubleshooting

General instructions for display troubleshooting

The first step is to verify with a working display that the fault is not on the display module itself. The display module cannot be repaired.

The second step is to check that the cellular engine is working normally. This can be done by connecting the phone to a docking station and starting Phoenix service software. With the help of Phoenix read the phone information to check that also the application engine is functioning normally (you should be able to read the APE ID).

After these checks proceed to the display troubleshooting flowcharts. Use the Display Test tool in Phoenix to find the detailed fault mode.

Operating modes of the display

The display is in a normal mode when the phone is in active use.

The display is in a partial idle mode when the phone is in the screen saver mode.

The operating modes of the display can be controlled with the help of Phoenix.

Table 10 Display module troubleshooting cases

Display blank	There is no image on the display. The display looks the same when the phone is on as it does when the phone is off. Because the main display is transmissive type only, the backlight of the main display must be ON when checking the display's functionality.
Image on the display not correct	Image on the display can be corrupted or a part of the image can be missing. If a part of the image is missing, change the display module. If the image is otherwise corrupted, follow the appropriate troubleshooting diagram.
Backlight dim or not working at all	Backlight LED components are inside the display module. Backlight failure can also be in the connector or in the backlight power source in the main engine of the phone. Backlight is also controlled automatically by the ambient light sensor. This means that in case the display is working (image OK), but the backlight is not, follow the Display and Keyboard Backlight troubleshooting.
Visual defects (pixel)	Pixel defects can be checked by controlling the display with Phoenix. Use both colours, black and white, on a full screen. The display may have some random pixel defects that are acceptable for this type of display. The criteria when pixel defects are regarded as a display failure, resulting in a replacement of the display, are presented the following table.


Table 11 Pixel defects

Item		White dot defect				Black dot defect	Total
		R	G	B	White Dot Total		
1	Defect counts					1	1
		1	1	1	1		
2	Combined defect counts	Not allowed. Two single dot defects that are within 5 mm of each other should be interpreted as combined dot defect.					

Note: Blinking pixels are not allowed in normal operating temperatures and light conditions. 2nd display is two-colored, black and white with blue LEDs.

Display fault troubleshooting (main and second displays)

Troubleshooting flow

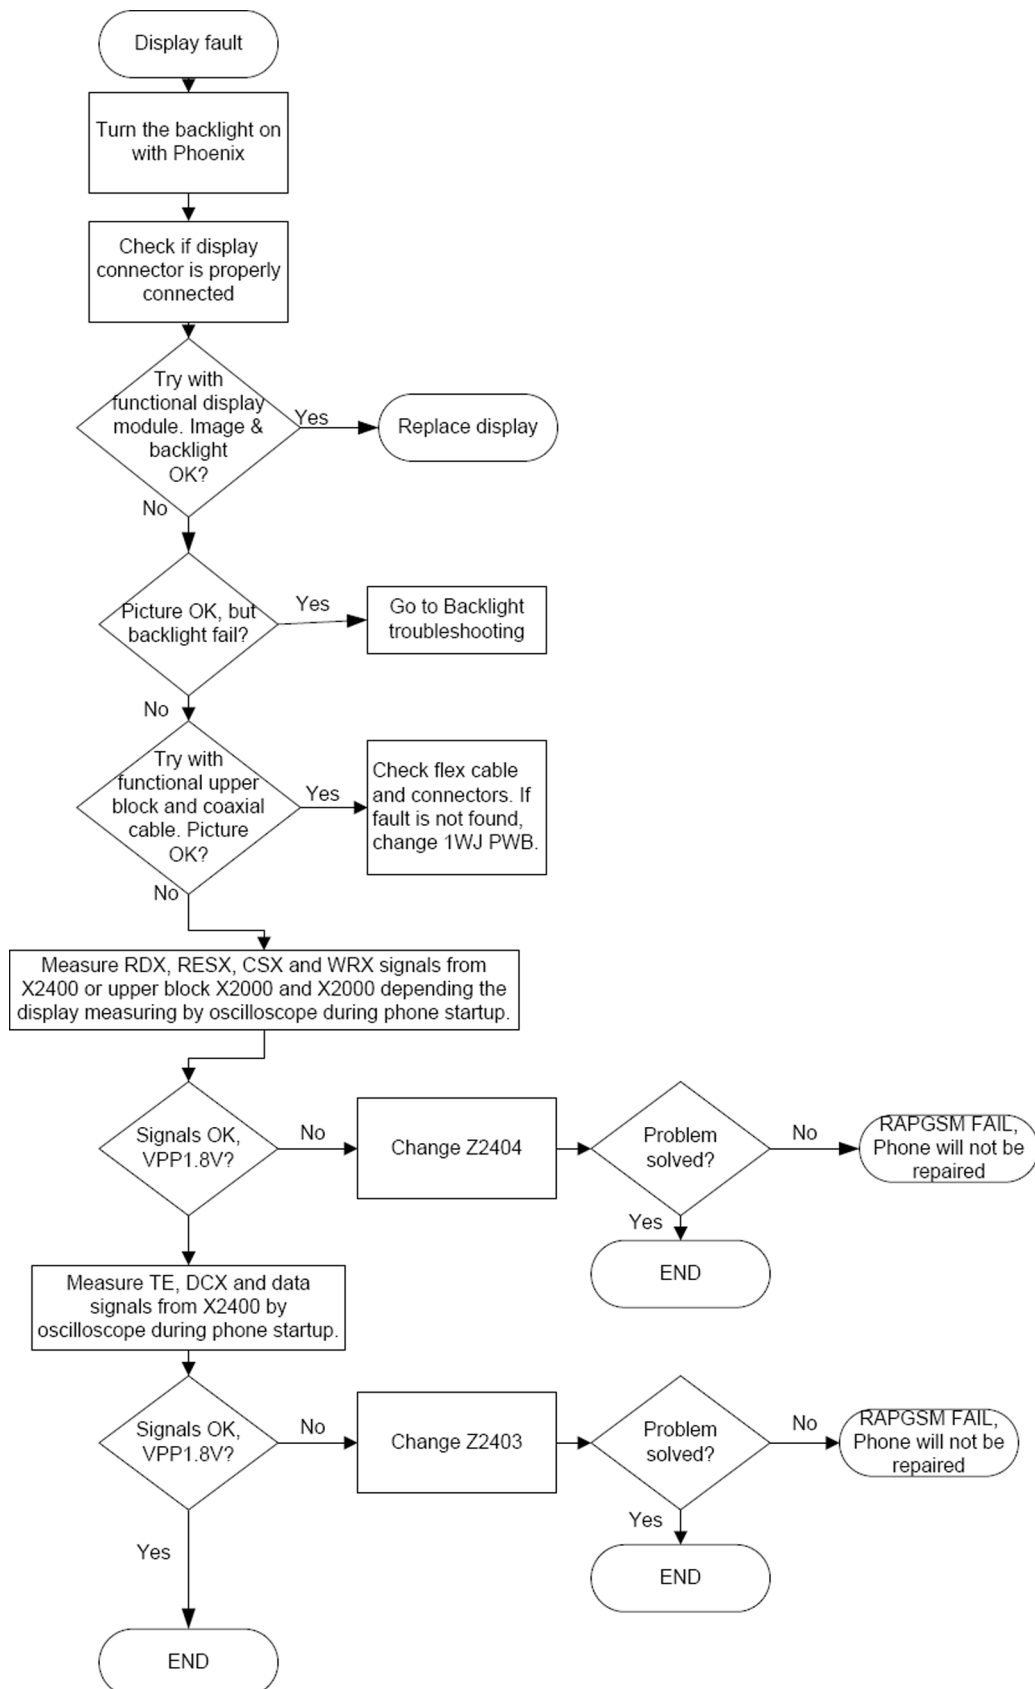


Displays and keyboard backlight troubleshooting

Context


The device has one LED driver that provides current for both displays and keyboard backlights. The driver gets the PWM signal from Tahvo. Because of the main display is transmissive, HW light dimming (controlled by TAHVO GENOUT01) is also implemented. There is also a switch for selecting which display is lit on. It is not possible to turn on both displays' lights at the same time. The backlight brightness can be adjusted manually in Phoenix.

Troubleshooting flow

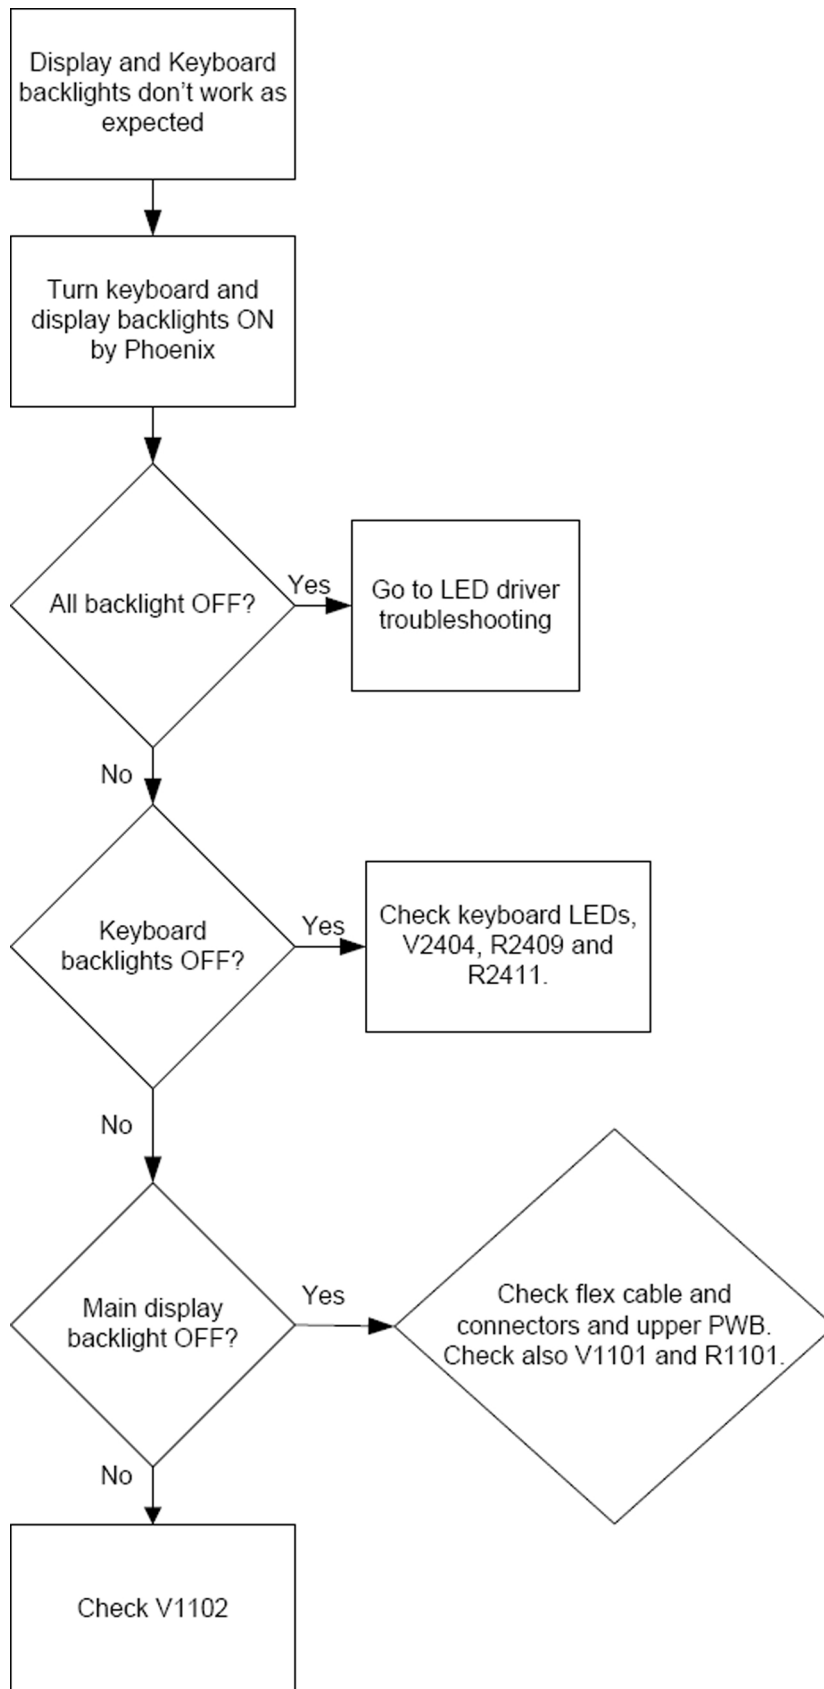

LED driver troubleshooting

Troubleshooting flow

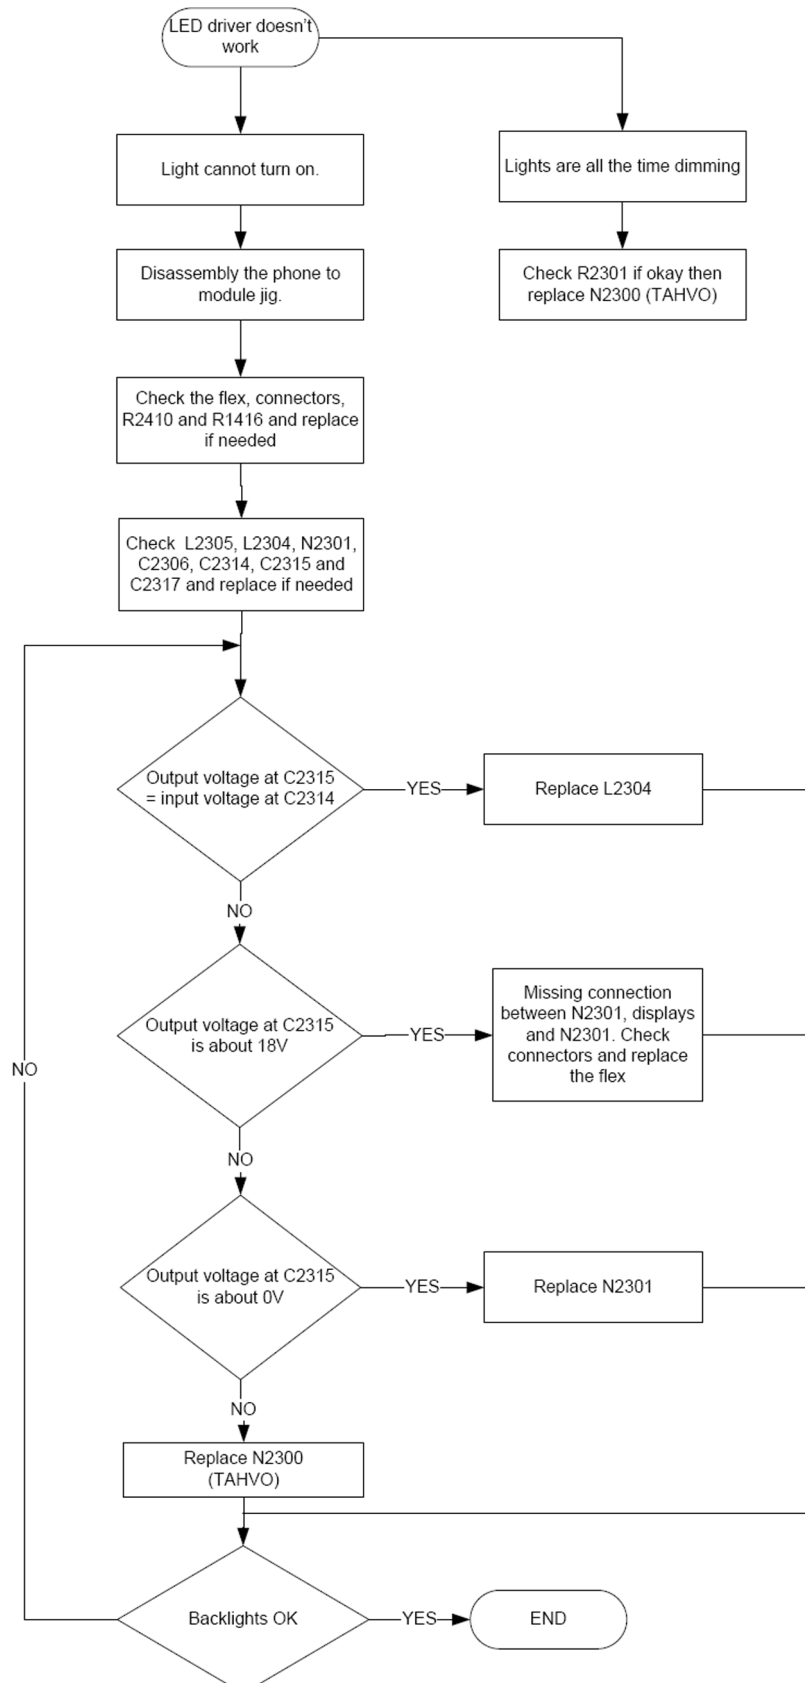

■ Camera troubleshooting

Introduction to camera troubleshooting

Bad conditions often cause bad pictures. Therefore, the camera operation has to be checked in constant conditions or by using a second, known-to-be-good Nokia device as reference. Image quality is hard to measure quantitatively, and the difference between a good and a bad picture can be small. Some training or experience may be needed to detect what is actually wrong.

When checking for possible errors in camera functionality, knowing what error is suspected significantly helps the testing by narrowing down the amount of test cases. The following types of image quality problems are common:

- Dust (black spots)
- Lack of sharpness
- Bit errors

Taking and evaluating test pictures

When *taking* a test picture, remember the following:


- Avoid bright fluorescent light, 50/60Hz electrical network or high artificial illumination levels
- If the phone is hot, let it rest for a while before taking the picture
- Make sure the optical system is clean
- Use highest possible resolution
- Make sure the light is sufficient (bright office lightning)
- Do not take the picture towards light source
- Be as still as possible when taking the picture
- Distance should be at least 40cm, 1-2m is recommended

When *evaluating* a test picture, remember the following:

- The center of the picture is sharper than the edges
- The image may be blurred, though it does not show in the viewfinder
- Analyse the picture from your PC monitor, full colour setting is recommended
- If possible, compare with a picture of the same motive taken with a similar Nokia device


Camera hardware failure message troubleshooting

Troubleshooting flow

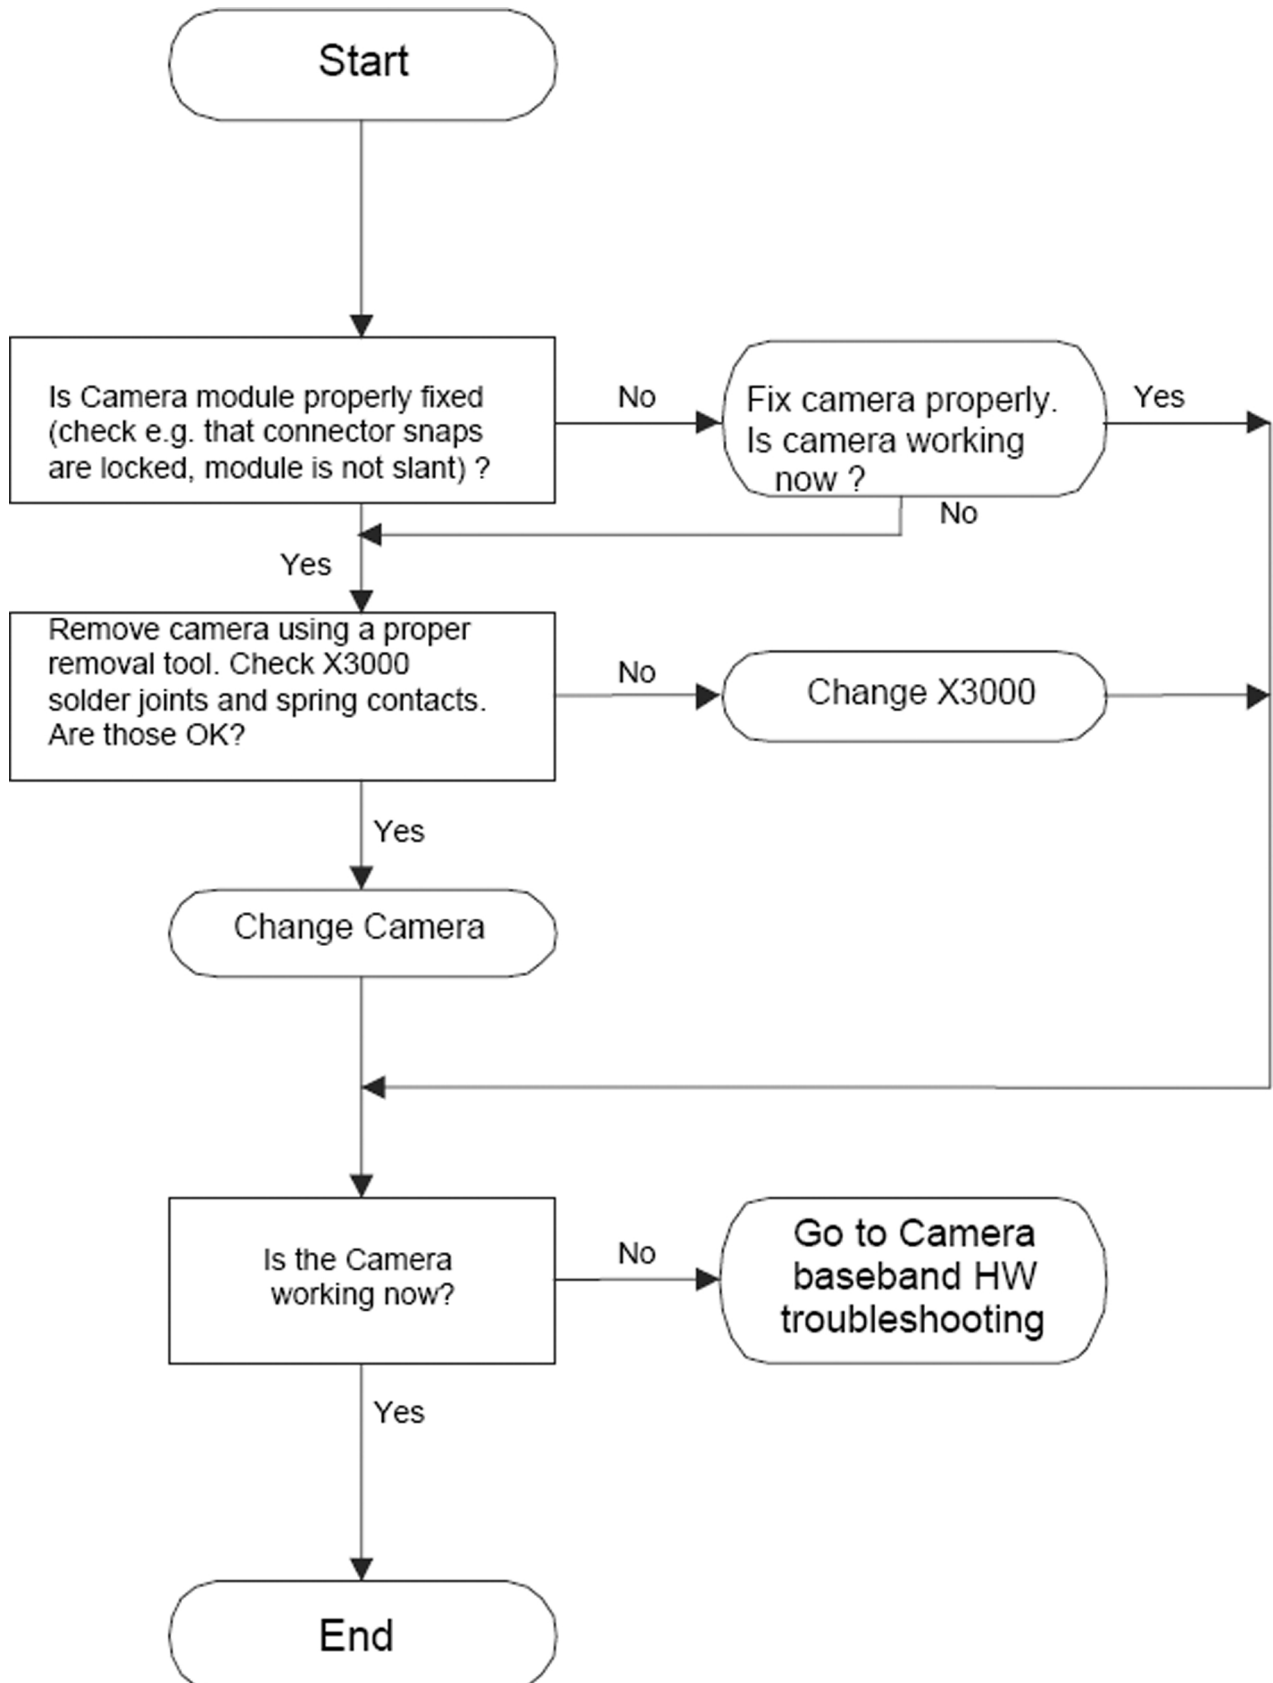


Camera hardware troubleshooting

Camera hardware troubleshooting

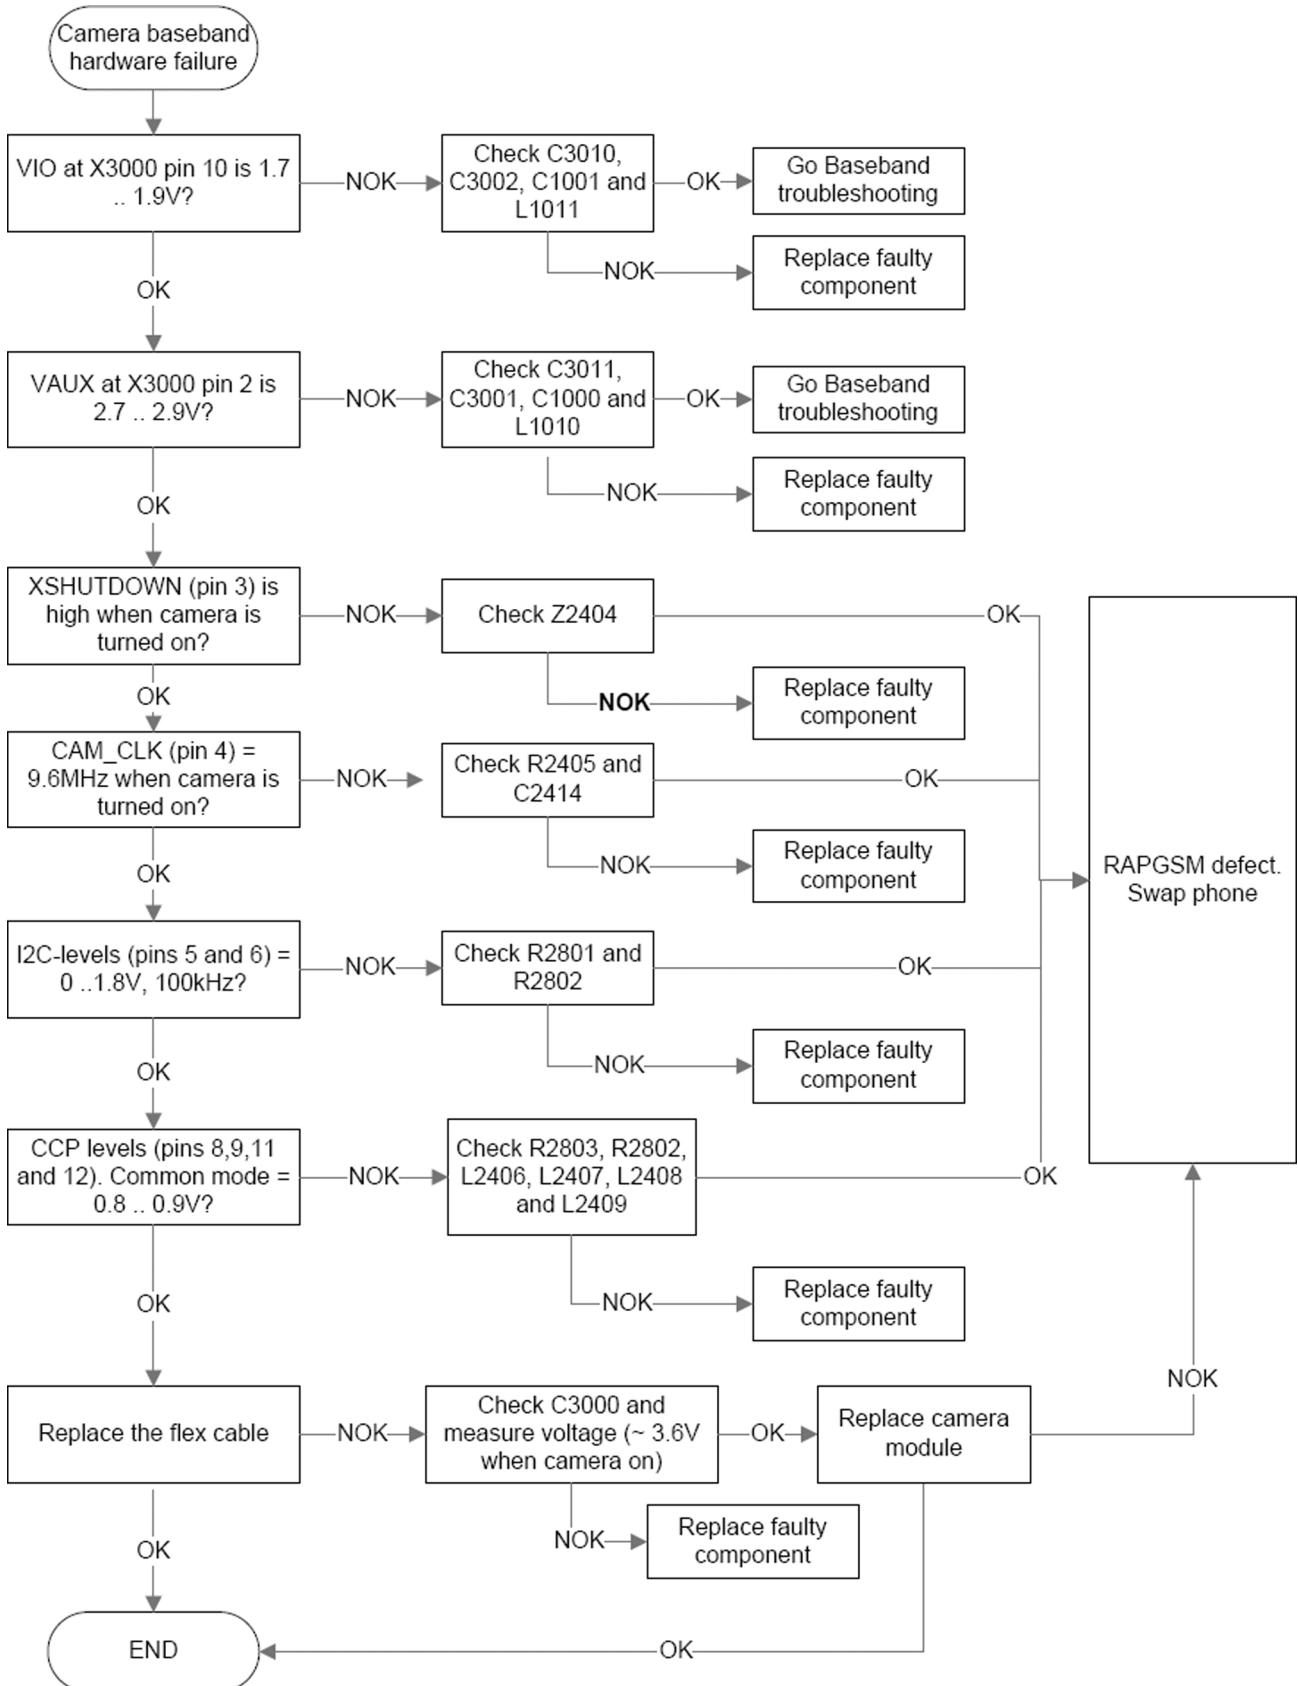


Front camera viewfinder troubleshooting

Troubleshooting flow

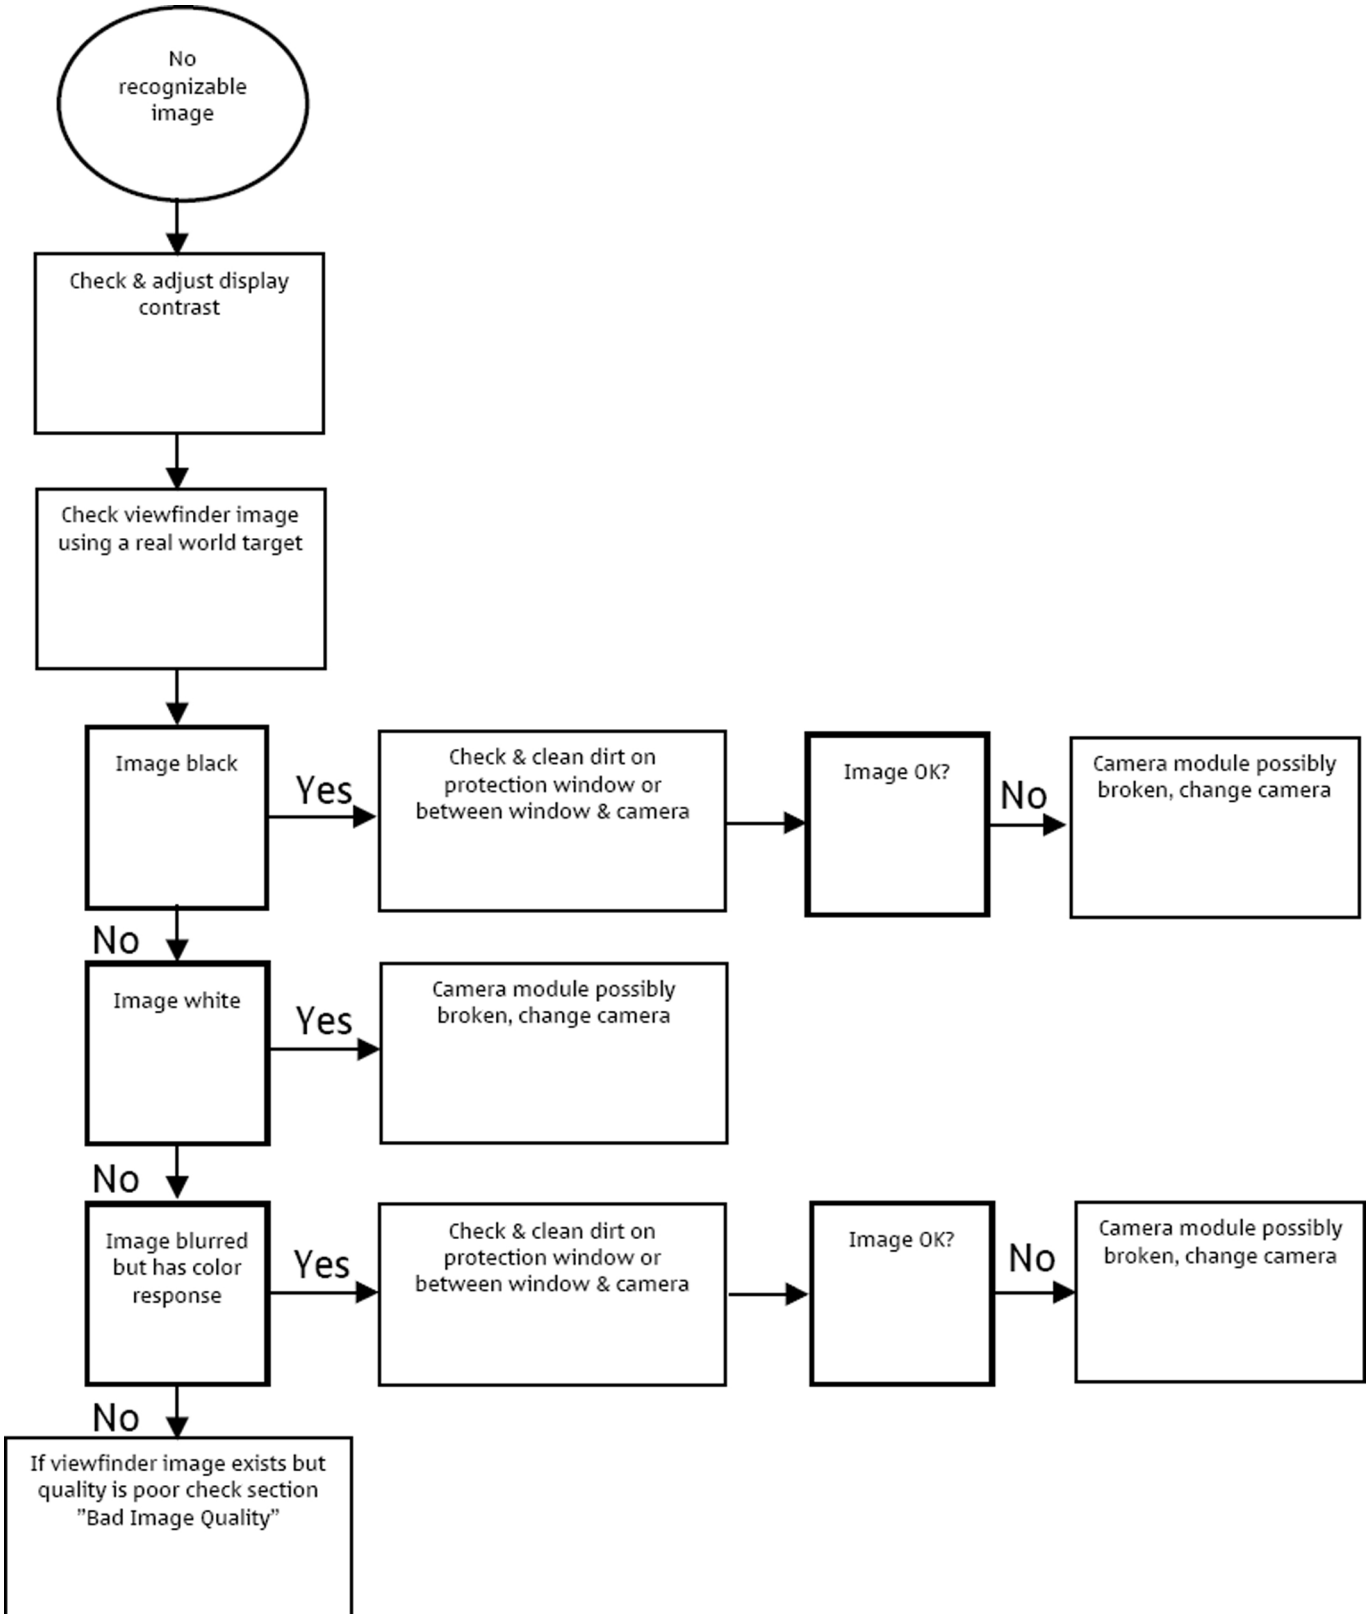

Front camera bad image quality troubleshooting

Troubleshooting flow

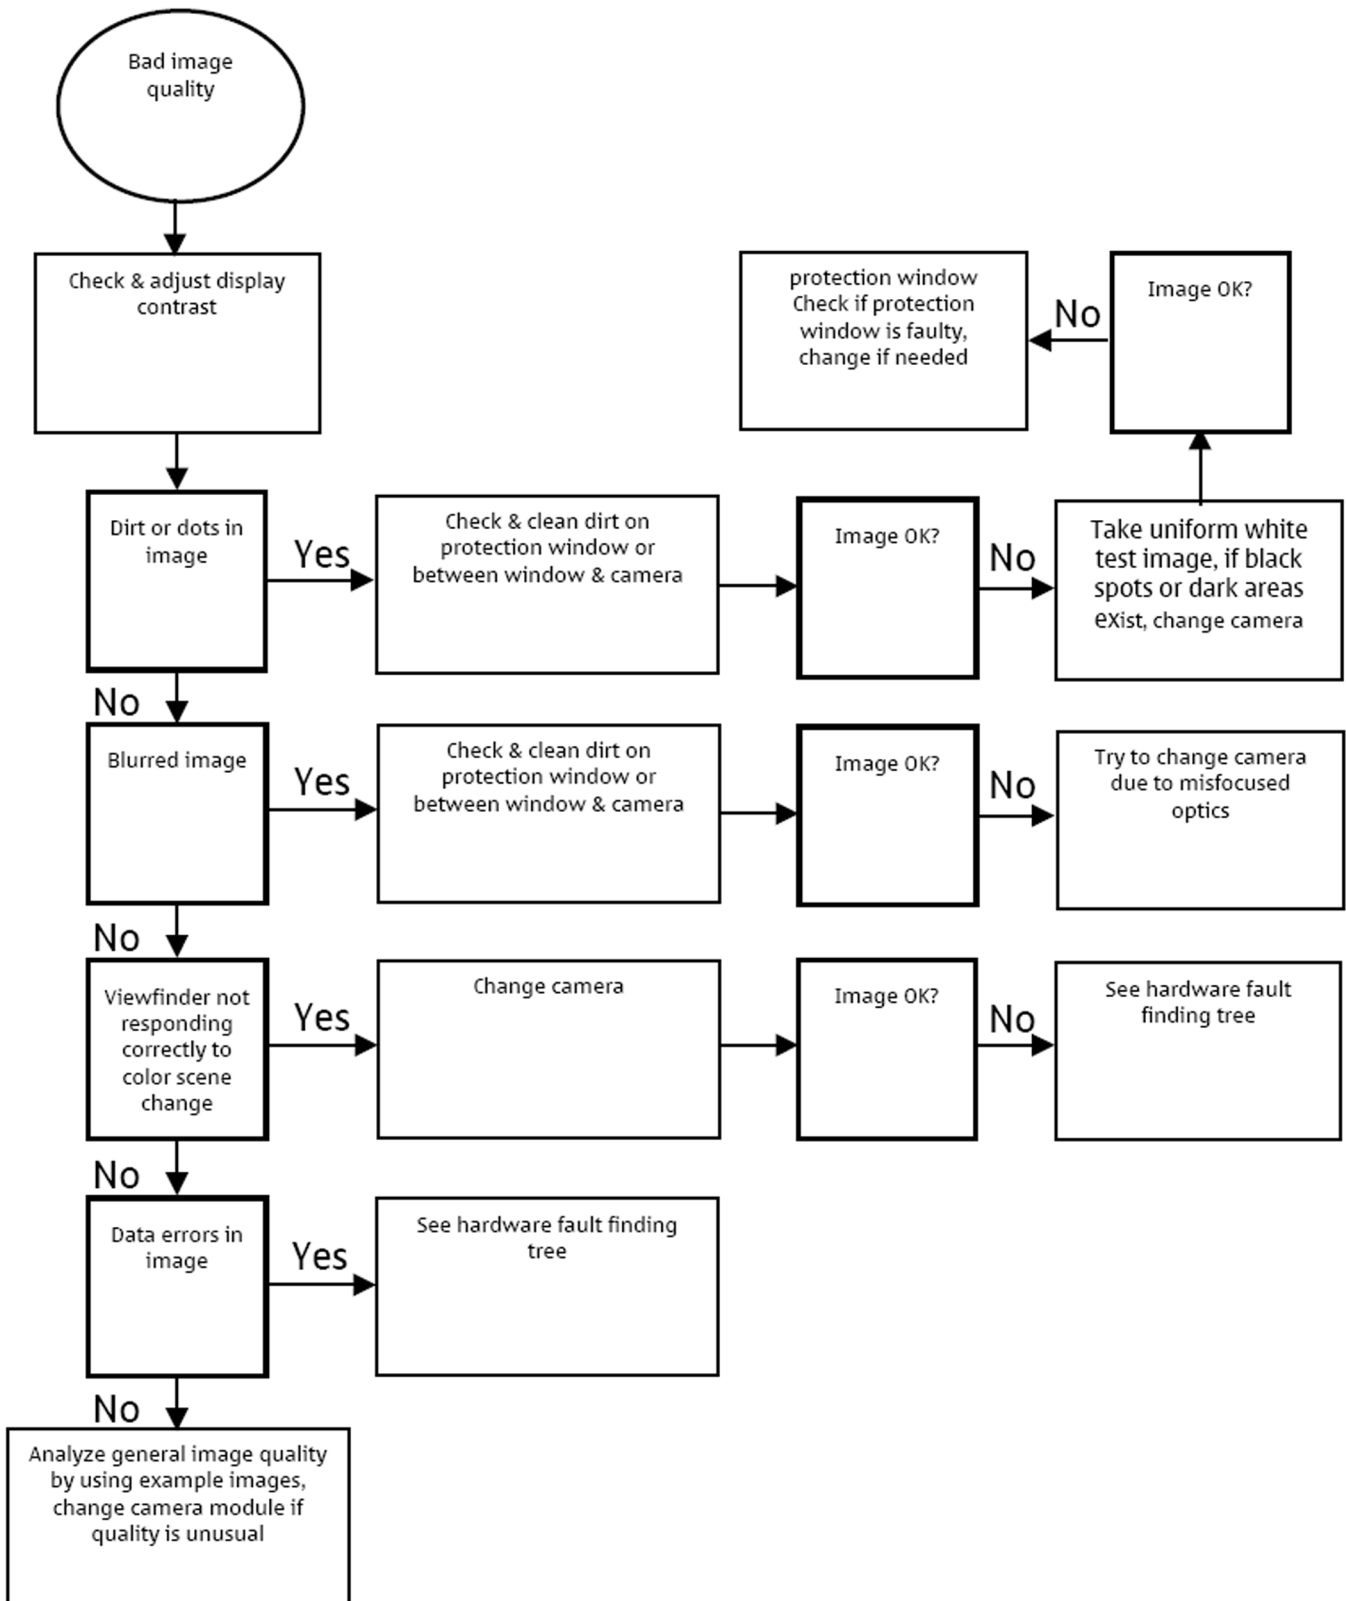

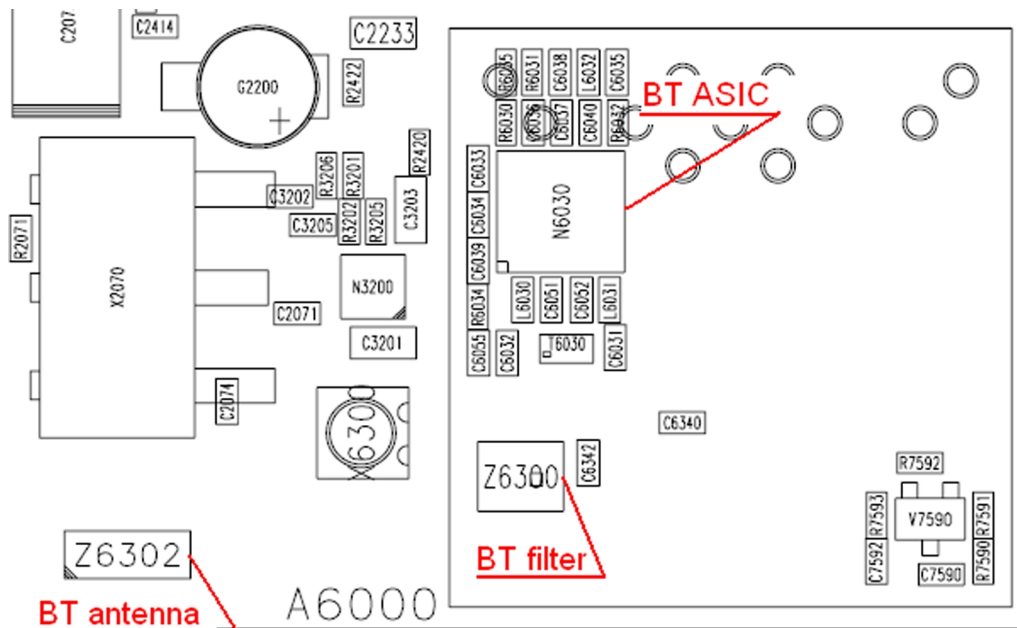


Figure 40 RM-198 Bluetooth

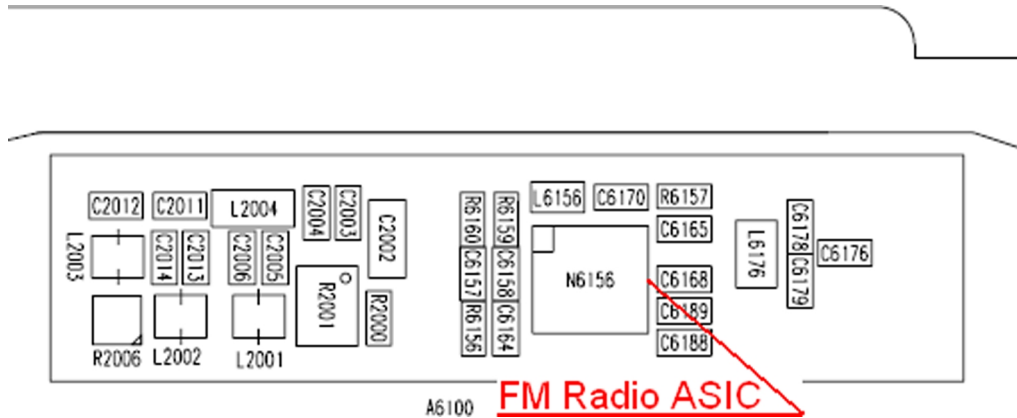


Figure 41 RM-188/198 FM radio

Bluetooth settings for Phoenix

Steps

1. Start *Phoenix* service software.
2. From the **File** menu, choose **Open Product**, and then choose the correct type designator from the **Product** list.
3. Place the phone to a flash adapter in the local mode.
4. Choose **Testing** → **Bluetooth LOCALS**.
5. Locate JBT-9's serial number (12 digits) found in the type label on the back of JBT-9.
In addition to JBT-9, also SB-6, JBT-3 and JBT-6 Bluetooth test boxes can be used.
6. In the *Bluetooth LOCALS* window, write the 12-digit serial number on the **Counterpart BT Device Address** line.
This needs to be done only once provided that JBT-9 is not changed.
7. Place the JBT-9 box near (within 10 cm) the BT antenna and click **Run BER Test**.

Results

Bit Error Rate test result is displayed in the *Bit Error Rate (BER) Tests* pane in the *Bluetooth LOCALS* window.

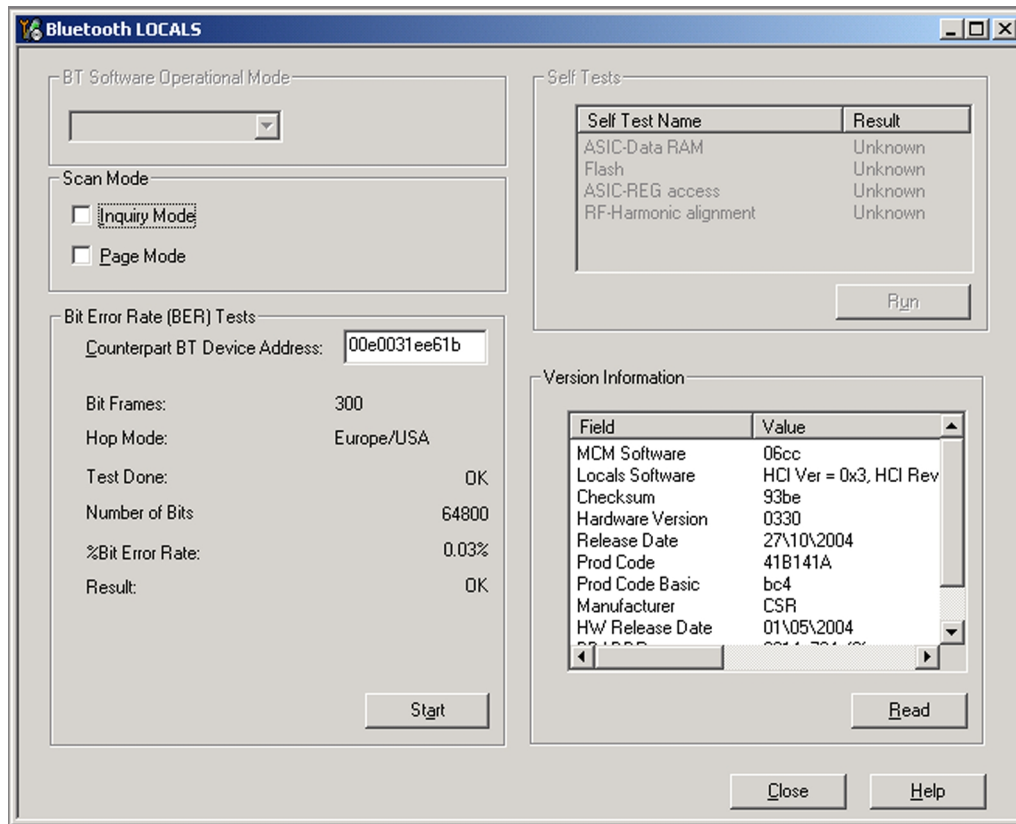


Figure 42 BER test result

Bluetooth self tests in Phoenix

Steps

1. Start *Phoenix* service software.
2. Choose **File**→**Scan Product**.
3. Place the phone to a flash adapter.
4. From the **Mode** drop-down menu, set mode to **Local**.
5. Choose **Testing**→**Self Tests**.
6. In the *Self Tests* window check the following Bluetooth related tests:
 - **ST_LPRF_IF_TEST**
 - **ST_LPRF_AUDIO_LINES_TEST**
 - **ST_BT_WAKEUP_TEST**

7. To run the tests, click **Start**.



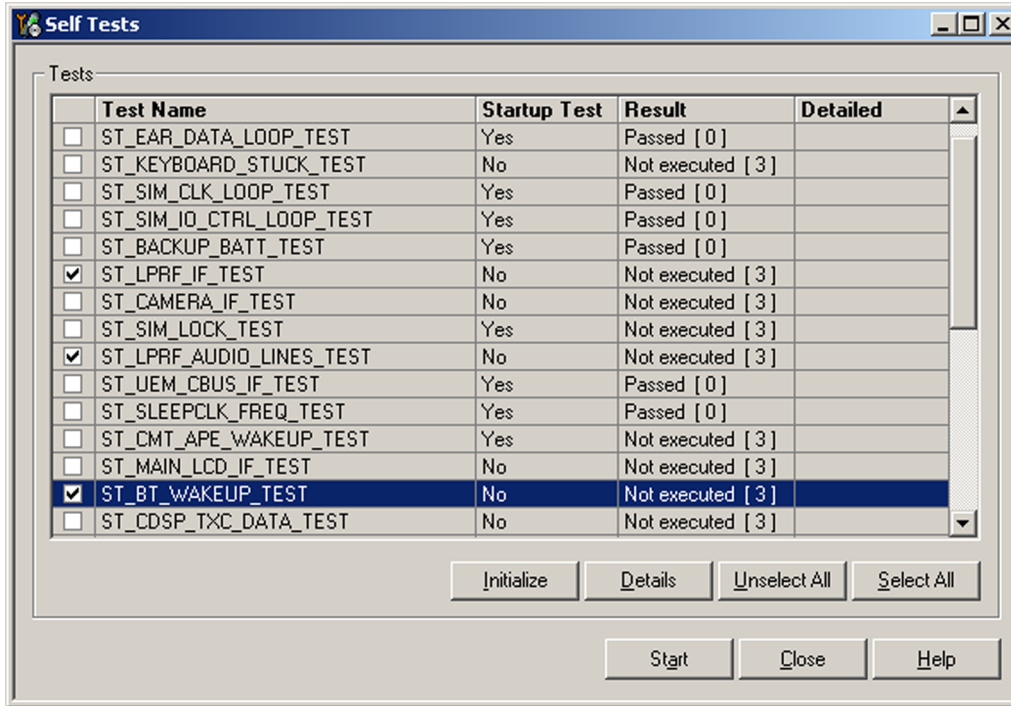


Figure 43 Bluetooth self tests in *Phoenix*

Bluetooth BER failure troubleshooting


Troubleshooting flow

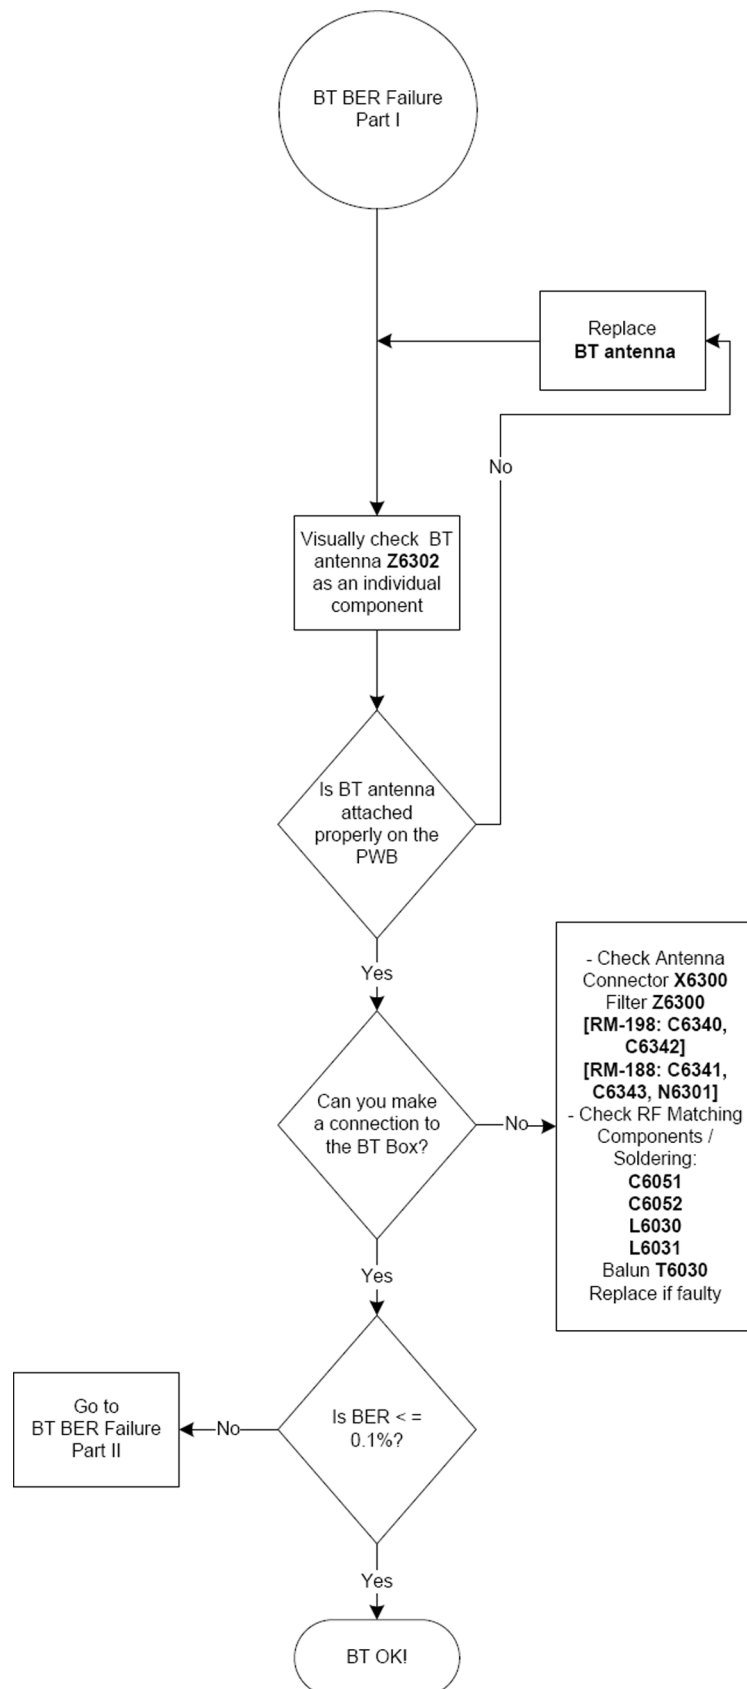

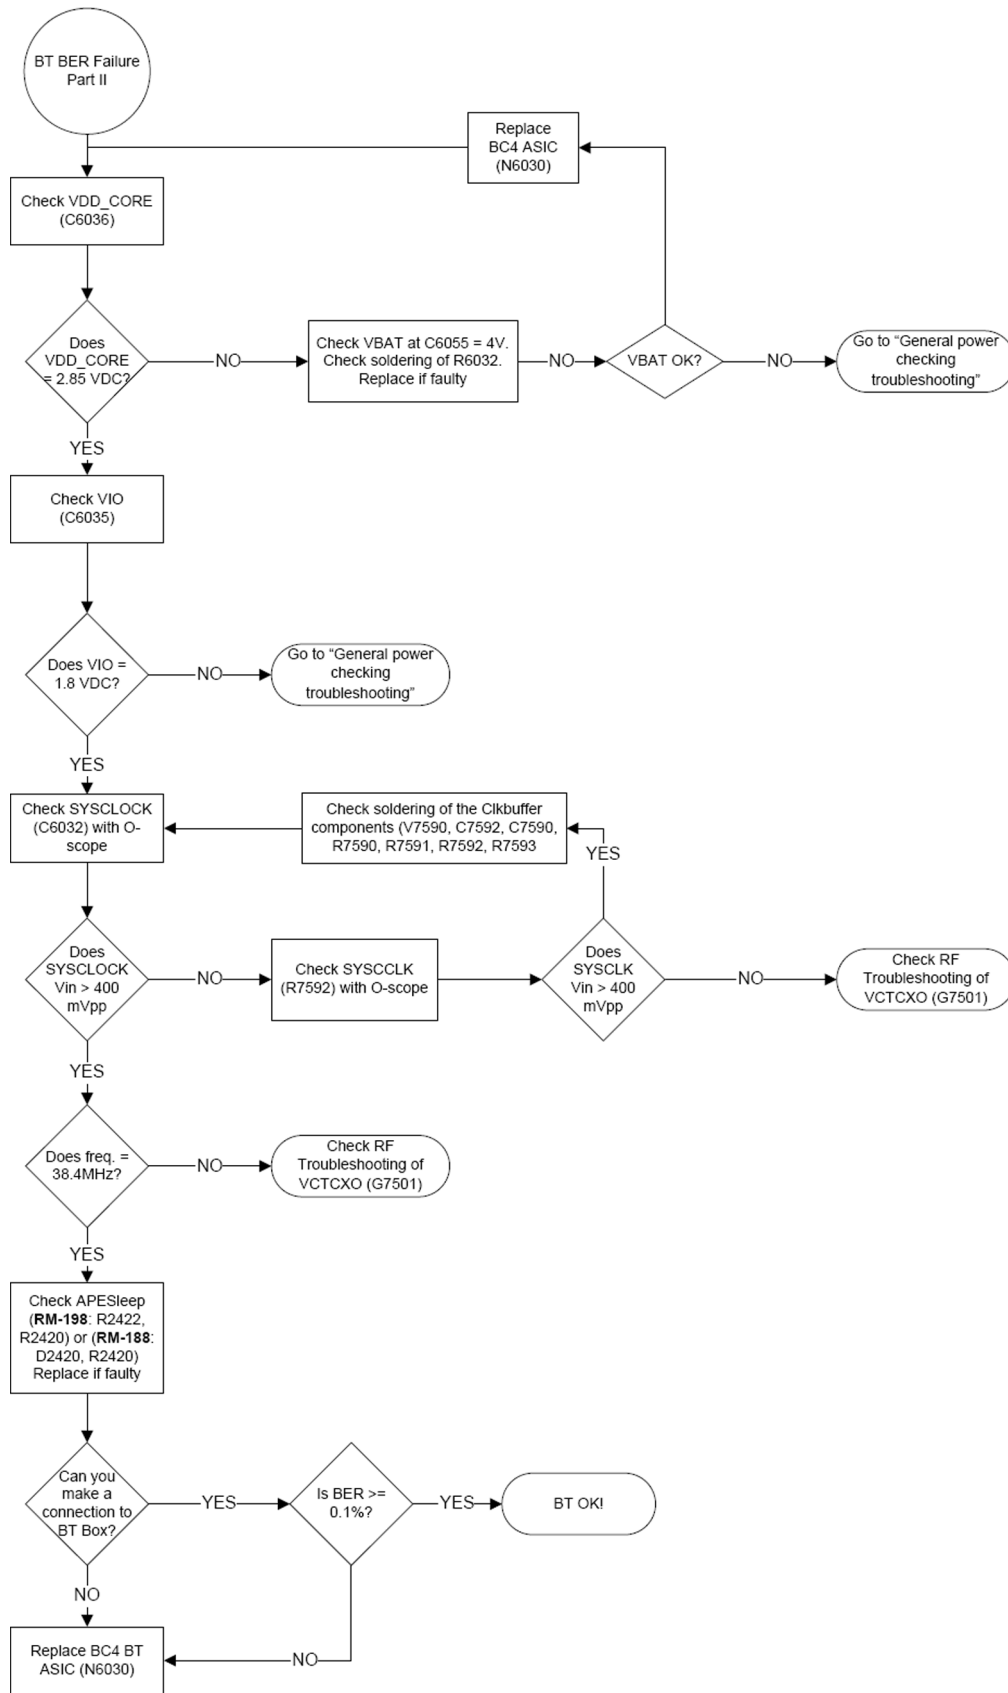


BT audio failure troubleshooting

Troubleshooting flow

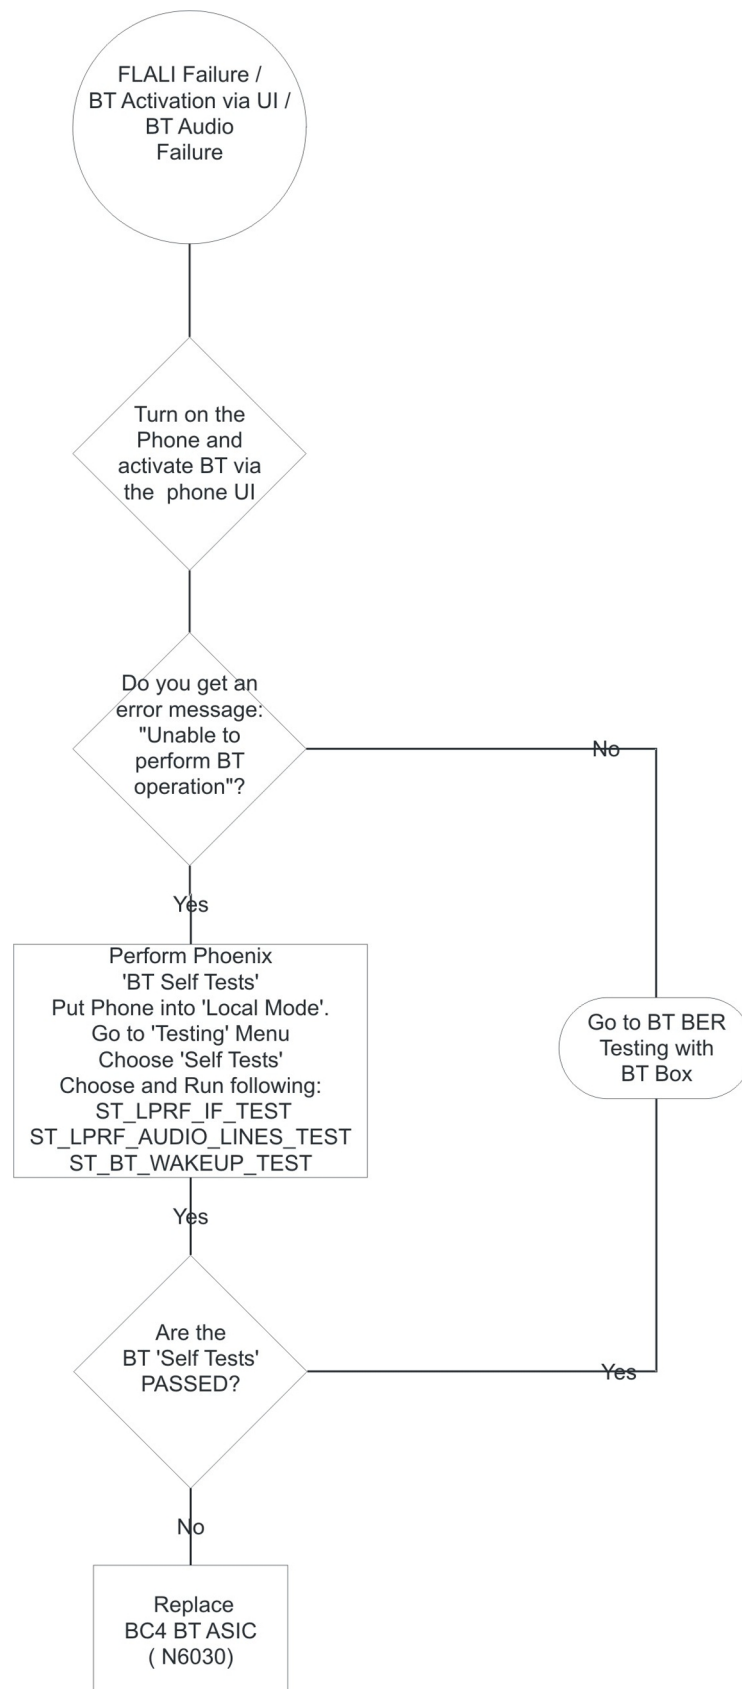

FM Radio troubleshooting

Troubleshooting flow

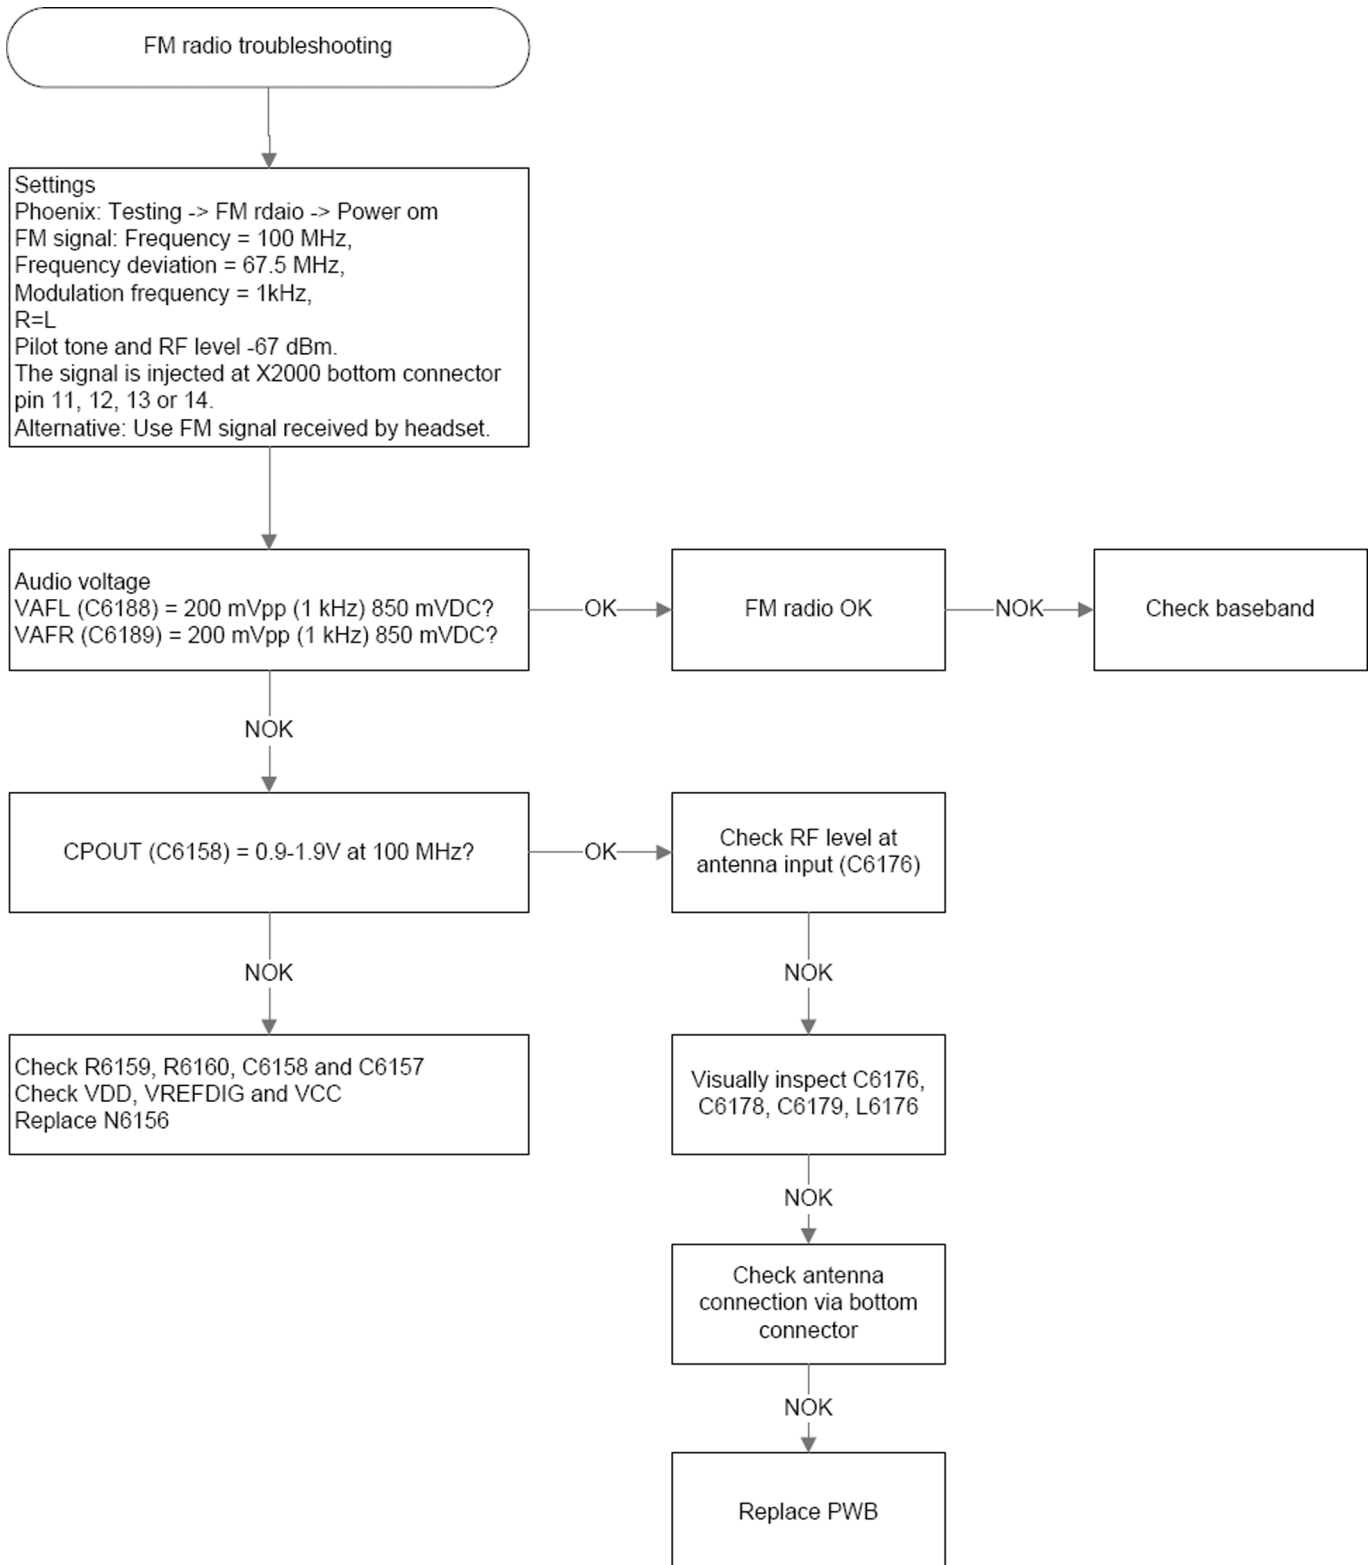

■ Audio troubleshooting

Audio troubleshooting test instructions

Differential external earpiece and internal earpiece outputs can be measured either with a single-ended or a differential probe.

When measuring with a single-ended probe each output is measured against the ground.

Internal handsfree output is measured using a current probe, if a special low-pass filter designed for measuring a digital amplifier is not available. Note also that when using a current probe, the input signal frequency must be set to 2kHz.

The input signal for each loop test can be either single-ended or differential.

Required equipment

The following equipment is needed for the tests:

- Oscilloscope
- Function generator (sine waveform)
- Current probe (Internal handsfree PWM output measurement)
- Phoenix service software
- Battery voltage 3.7V

Test procedure

Audio can be tested using the Phoenix audio routings option. Three different audio loop paths can be activated:

- External microphone to Internal earpiece
- External microphone to Internal handsfree speaker
- Internal microphone to External earpiece

Each audio loop sets routing from the specified input to the specified output enabling a quick in-out test. Loop path gains are fixed and they cannot be changed using Phoenix. Correct pins and signals for each test are presented in the following table.

Phoenix audio loop tests and test results

The results presented in the table apply when no accessory is connected and battery voltage is set to 3.7V.

Earpiece, internal microphone and speaker are in place during measurement. Applying a headset accessory during measurement causes a significant drop in measured quantities.

The gain values presented in the table apply for a differential output vs. single-ended/differential input.

Loop test	Input terminal	Output terminal	Path gain [dB] (fixed)	Input voltage [mVp-p]	Differential output voltage [mVp-p]	Output DC level [V]	Output current [mA]
External Mic to External Earpiece	XMICP and GND	HSEAR R P, HSEAR R N and GND	-2.9	1000	720	1.2	NA
		HSEAR P, HSEAR N and GND					
	XMICN and GND	HSEAR R P, HSEAR R N and GND					
		HSEAR P, HSEAR N and GND					
External Mic to Internal Earpiece	XMICP and GND	EarP and GND	-4.5	1000	600	1.2	NA
		EarN and GND					
	XMICN and GND	EarP and GND					
		EarN and GND					
External Mic to Internal handsfree	XMICP and GND	B2102 pads	-5	1000	560	0	25mA (calc.)
	XMICN and GND	B2102 pads					
Internal Mic to External Earpiece	B2100 (OUT/GND)	HSEAR R P, HSEAR R N and GND	22.7	100	1360	1.2	NA
		HSEAR P, HSEAR N and GND					
		HSEAR R P, HSEAR R N and GND					
		HSEAR P, HSEAR N and GND					

Measurement data

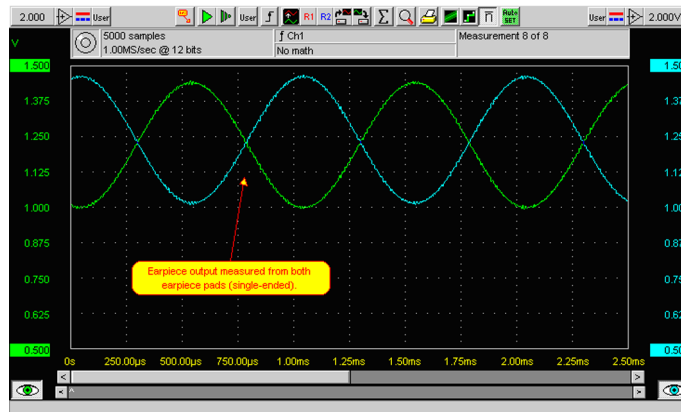


Figure 44 Single-ended output waveform of the Ext_in_HP_out measurement when earpiece is connected.



Figure 45 Differential output waveform of the Ext_in_IHF_out out loop measurement when speaker is connected.


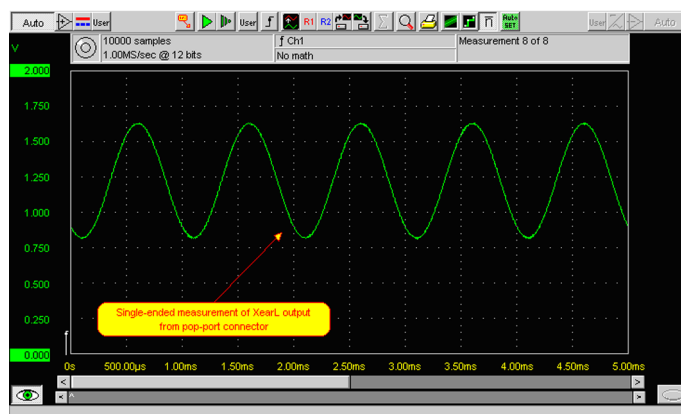


Figure 46 Single-ended output waveform of the HP_in_Ext_out loop when microphone is connected.


Internal earpiece troubleshooting

Troubleshooting flow

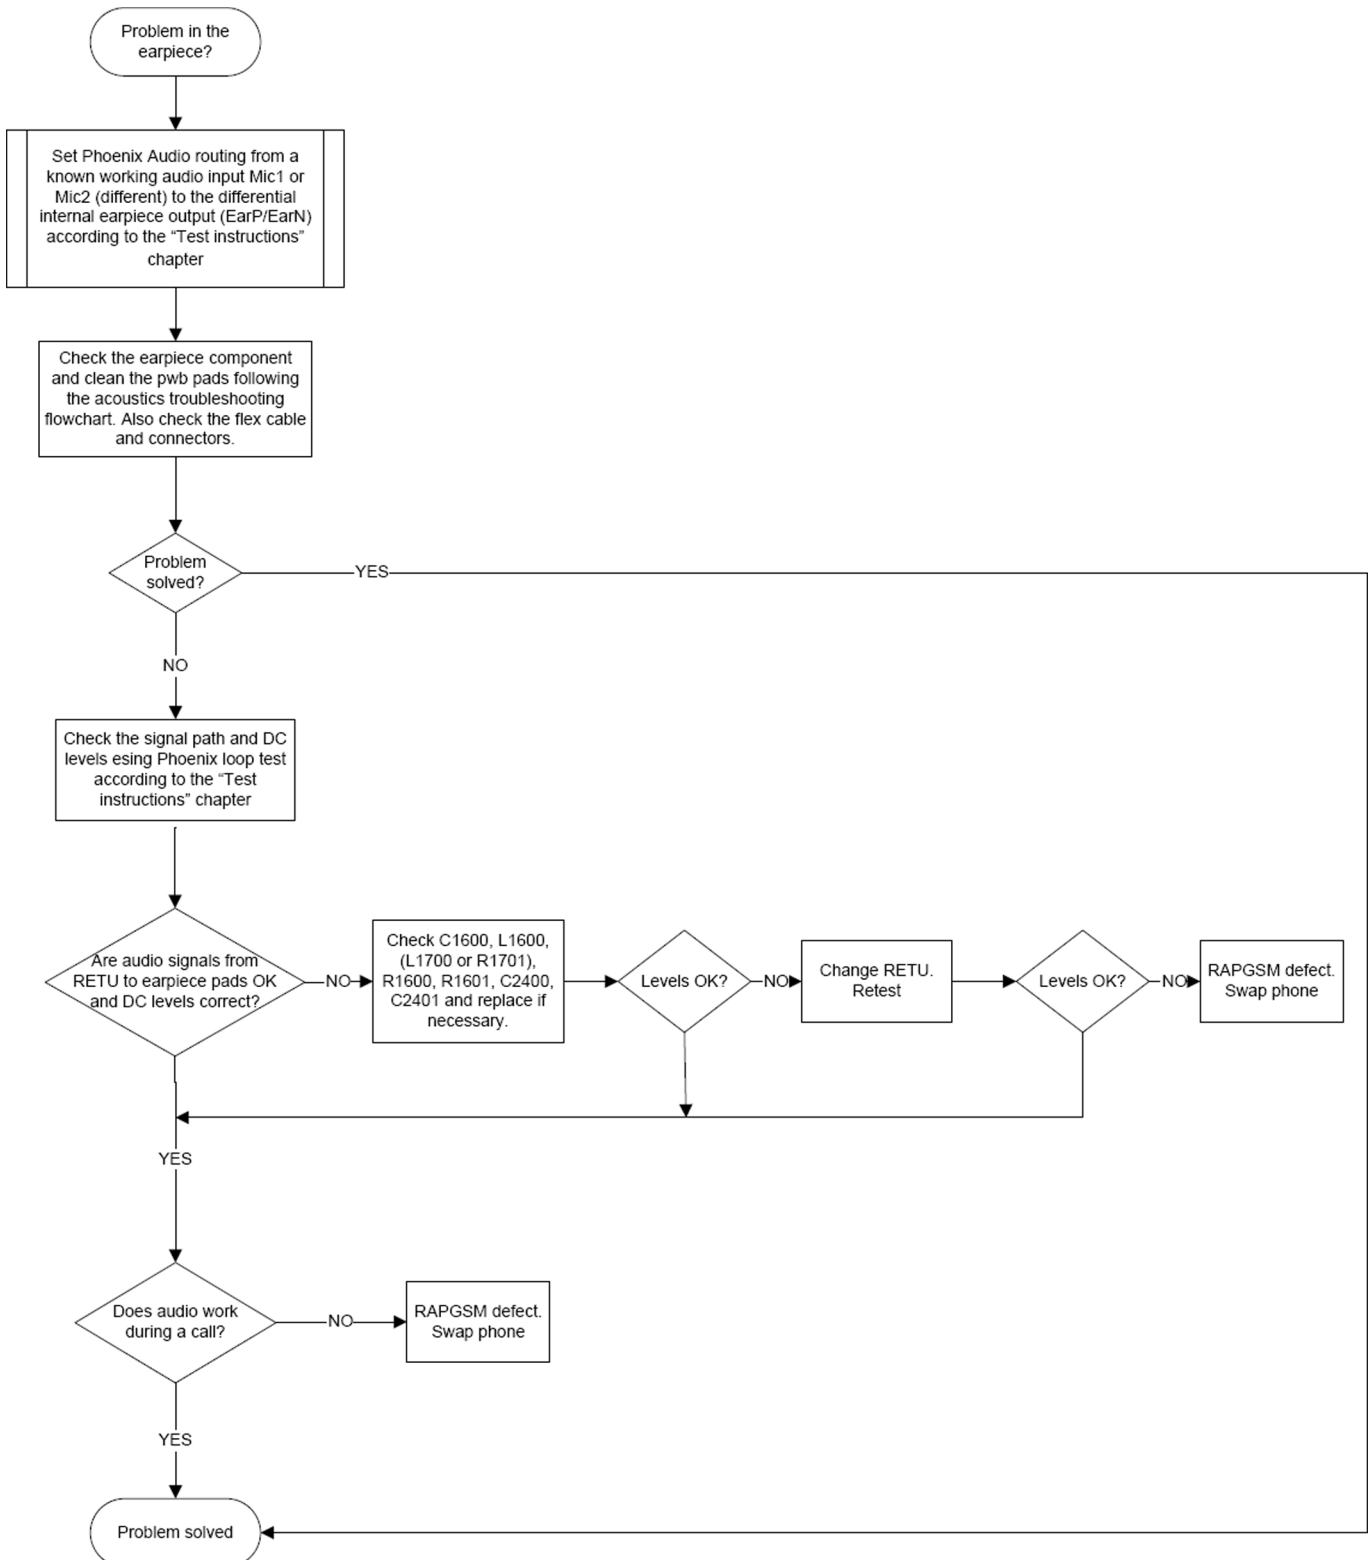


Internal microphone troubleshooting

Troubleshooting flow

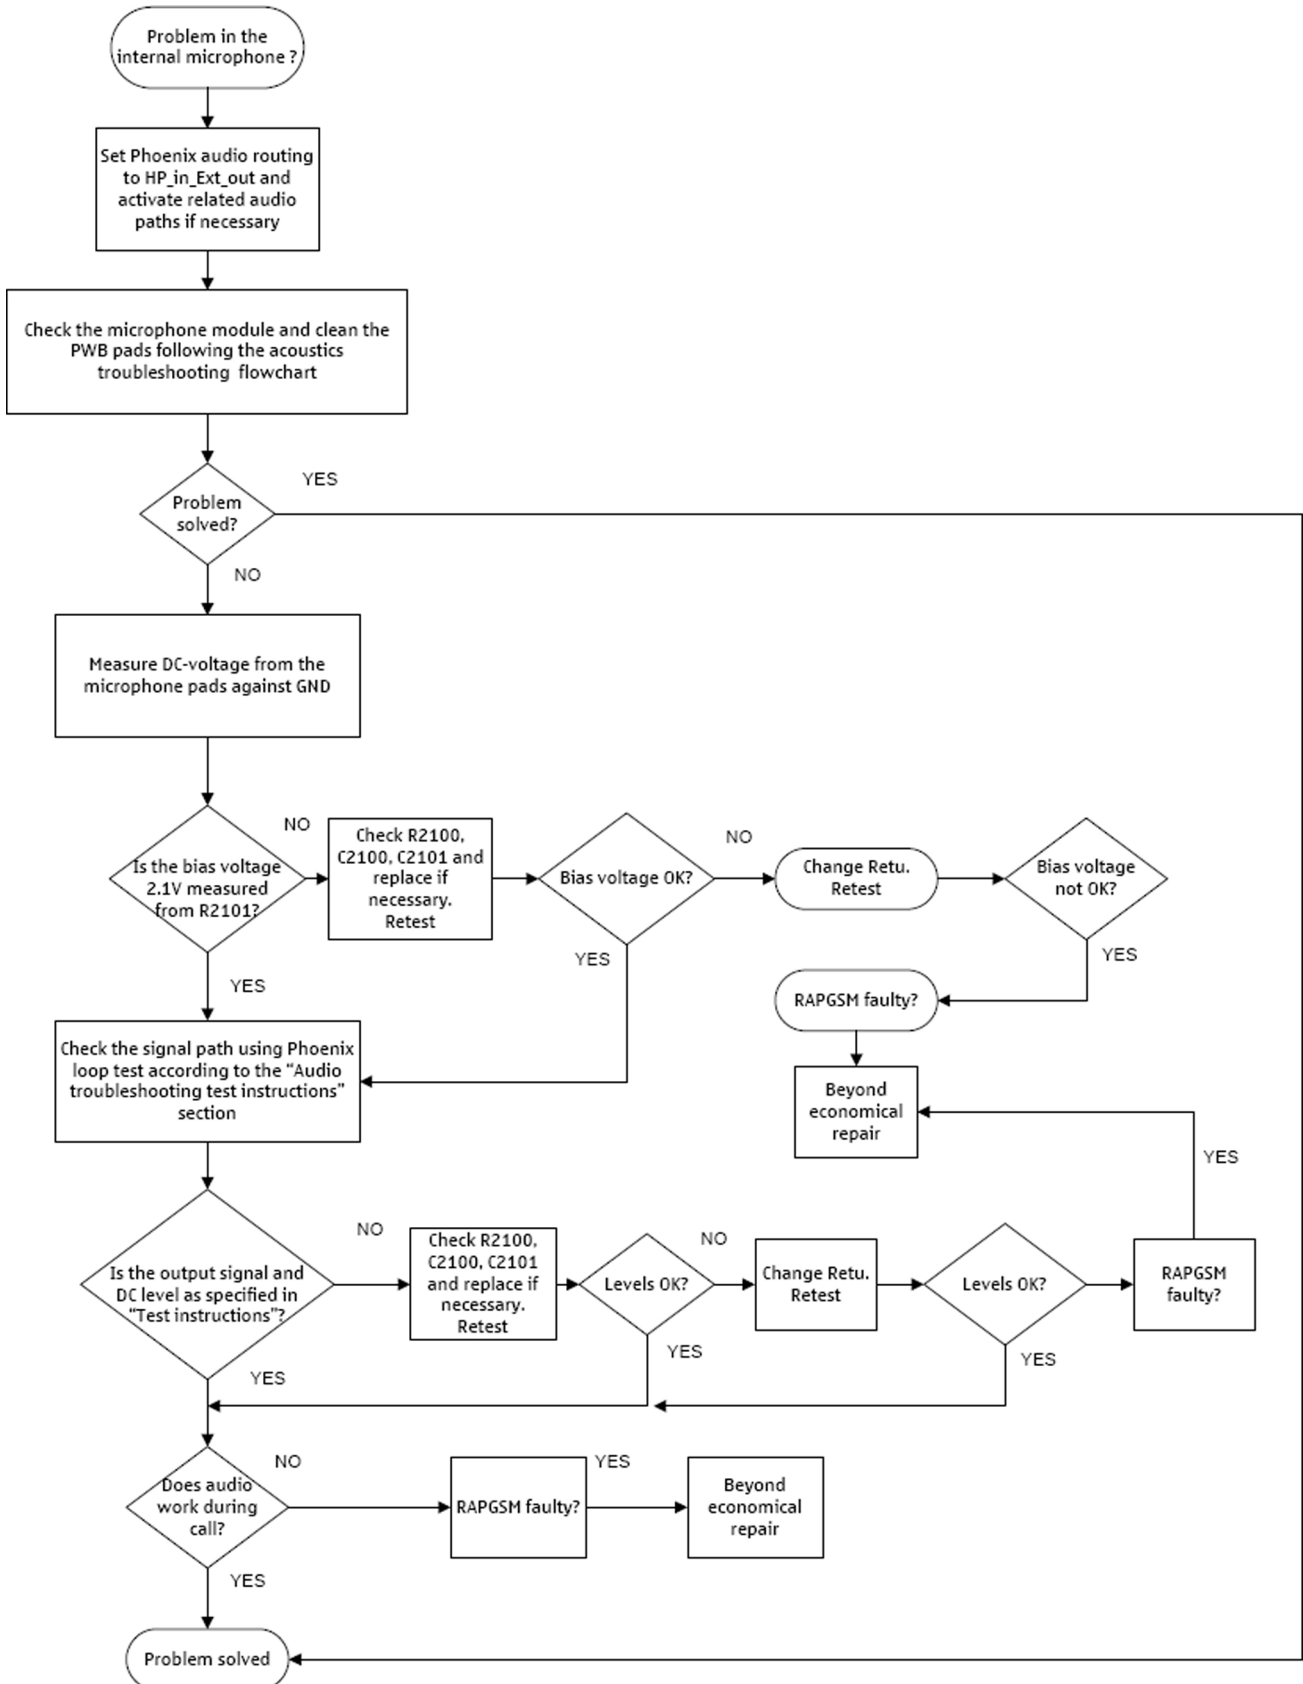


IHF speaker troubleshooting

Troubleshooting flow

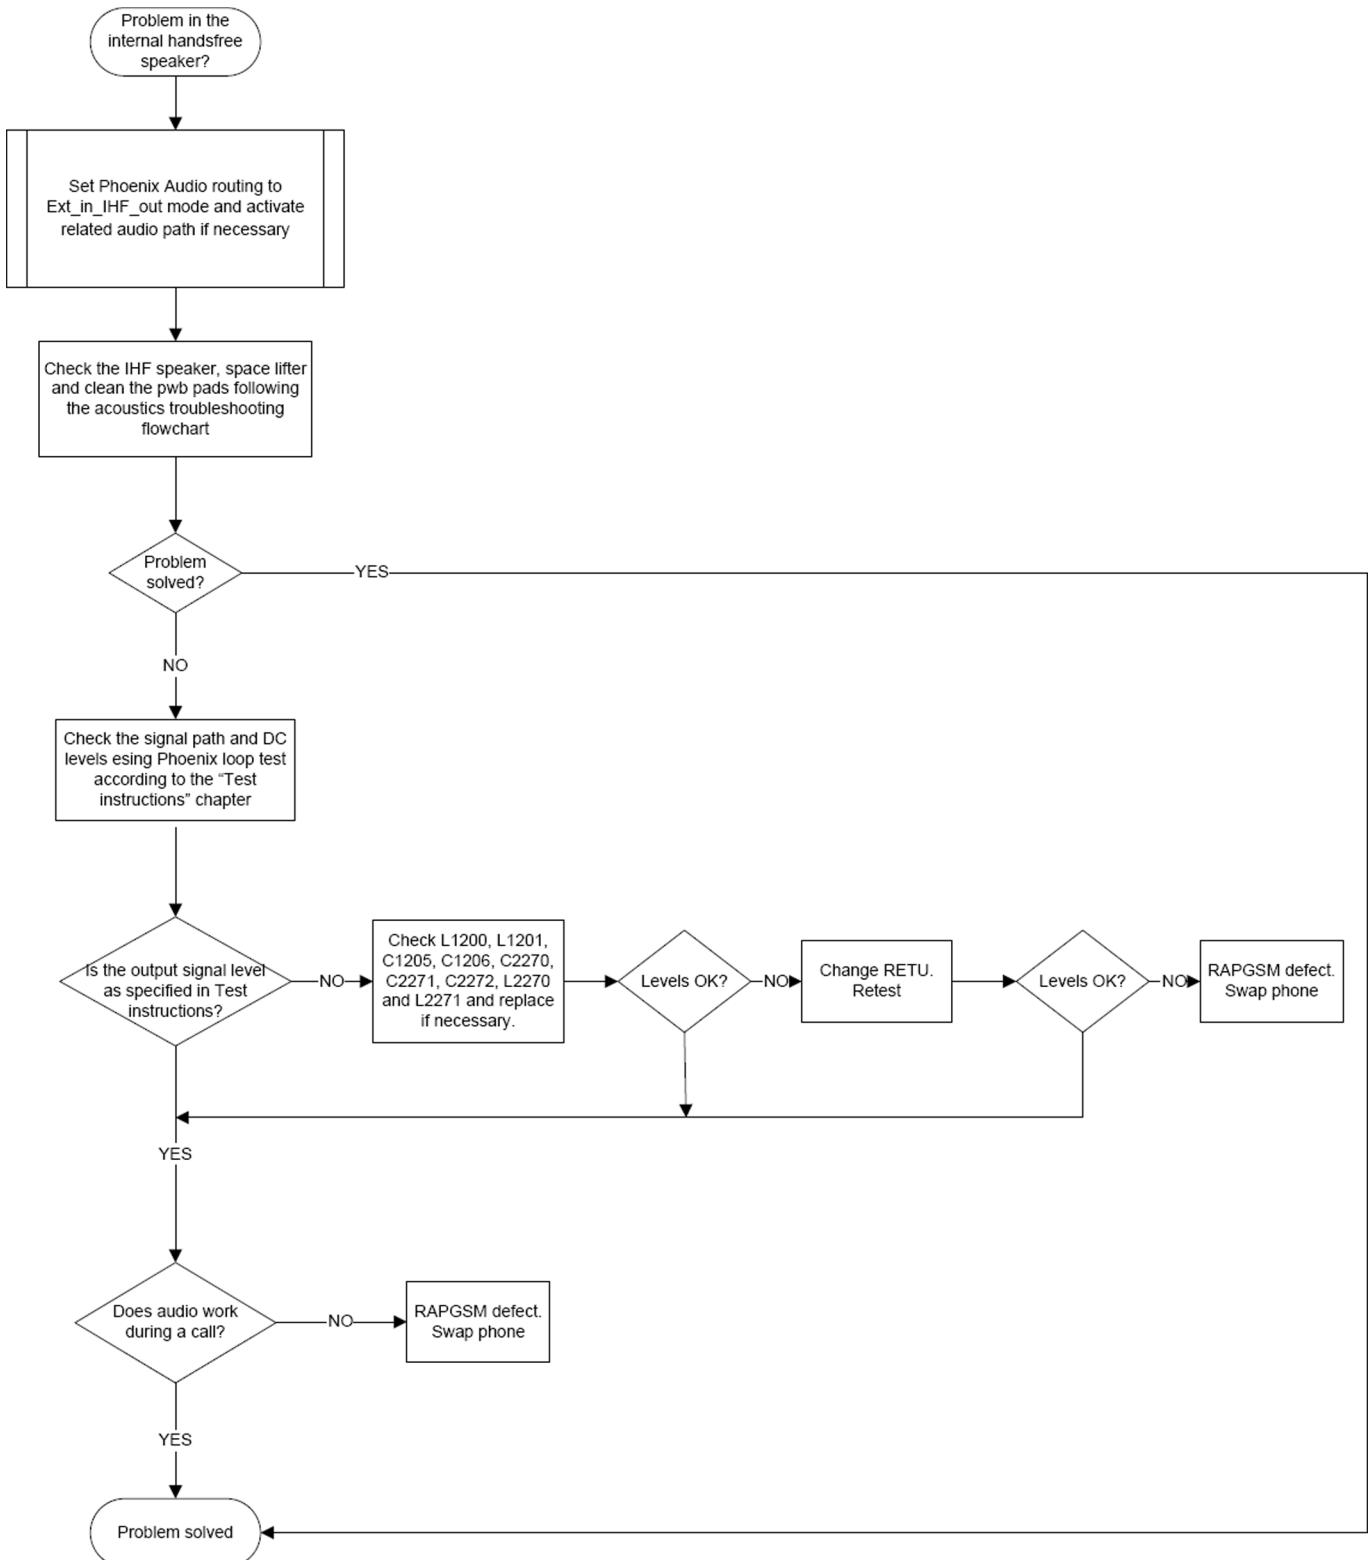


External microphone troubleshooting

Troubleshooting flow

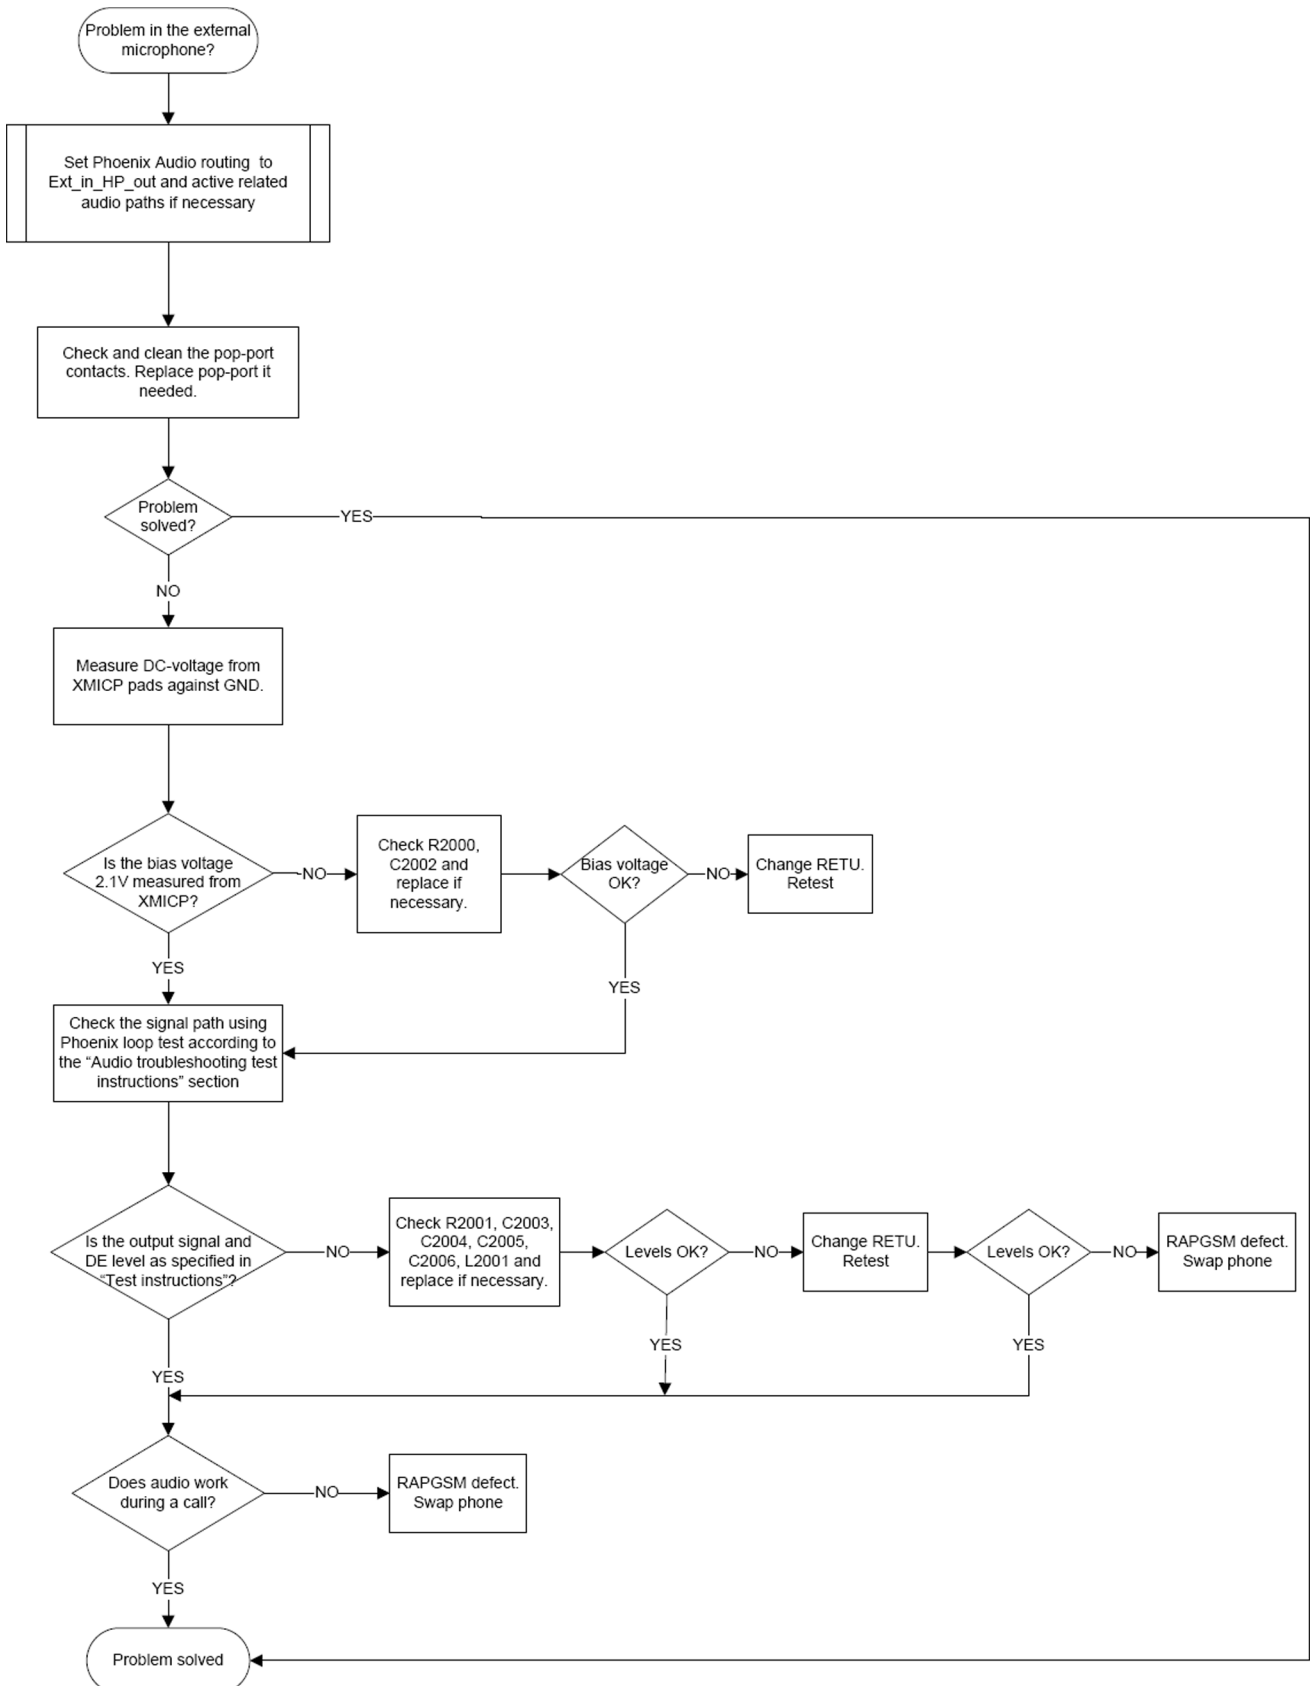

External earpiece troubleshooting

Troubleshooting flow

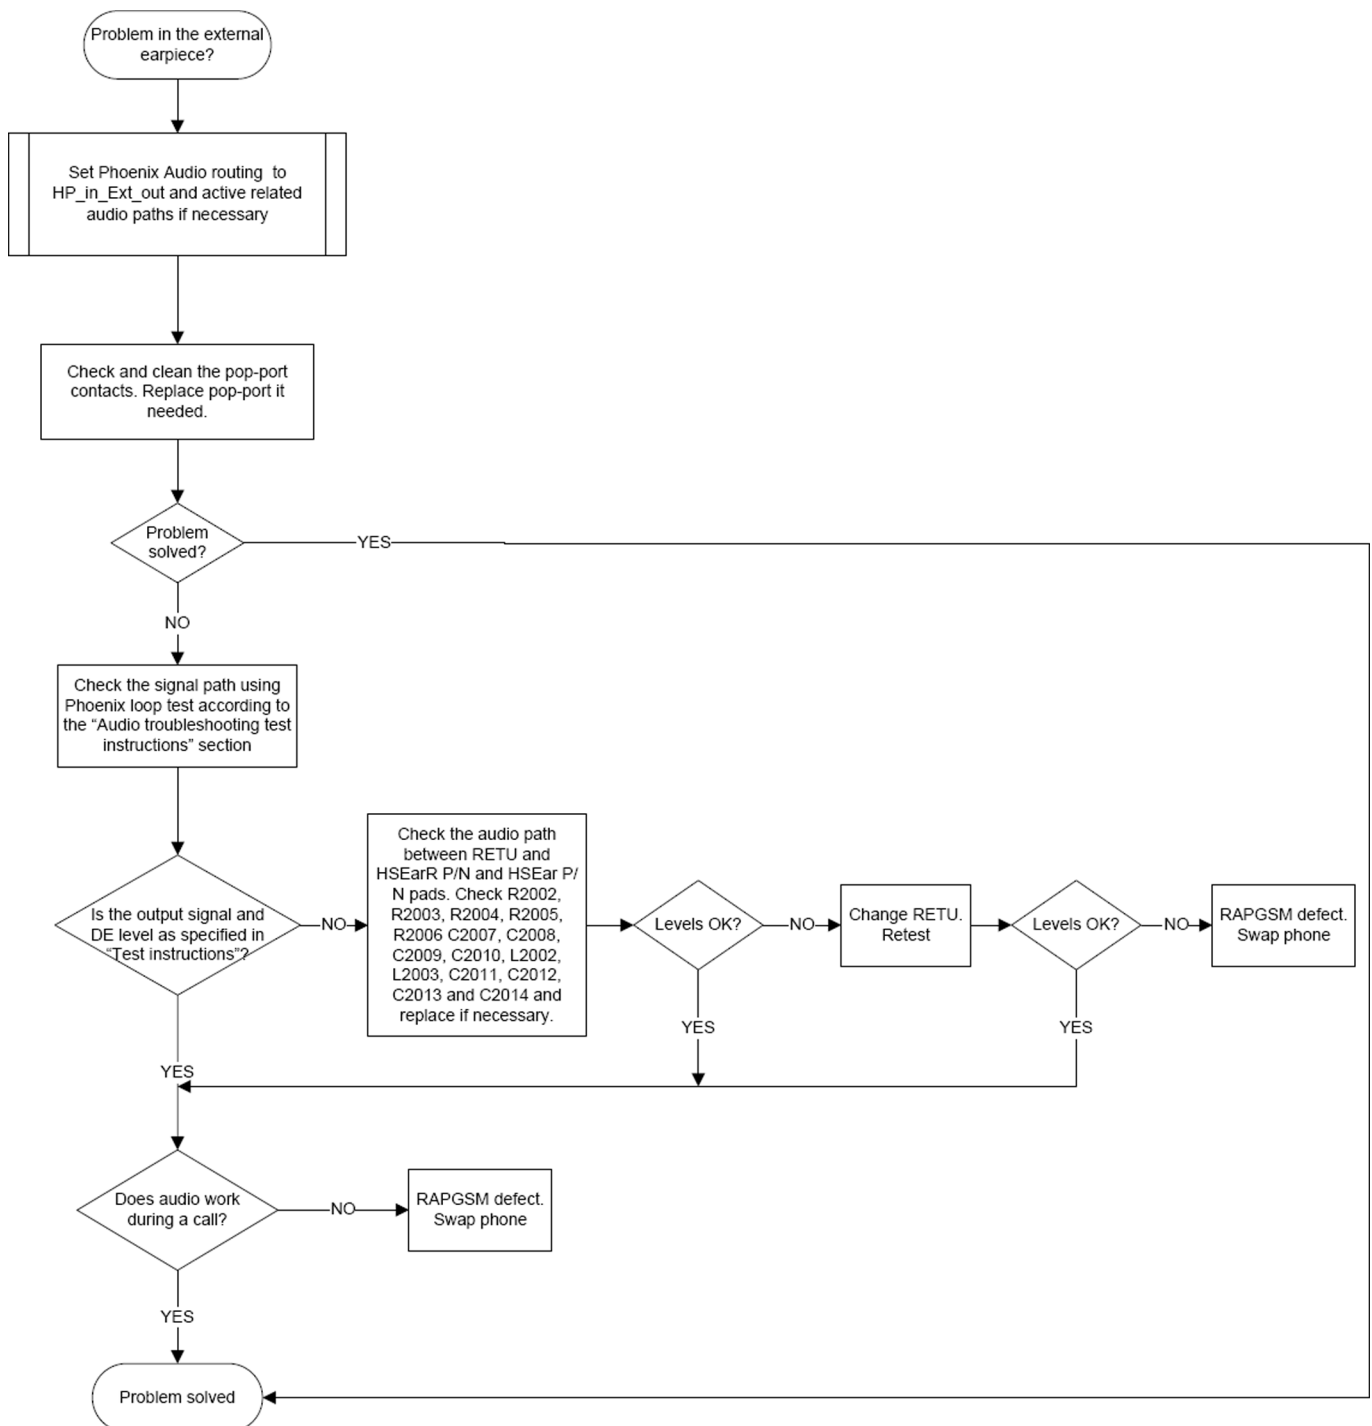

Introduction to acoustics troubleshooting

Acoustics troubleshooting


Acoustics design ensures that the sound is detected correctly with a microphone and properly radiated to the outside of the device by speaker(s). The acoustics of the phone includes three basic systems: earpiece, Integrated Hands Free (IHF) and microphone.

The sound reproduced from the earpiece radiates through a single hole on the front cover (A-cover). The sound reproduced from the IHF speakers radiates through a single hole on the Antenna cap (Antenna assy). Microphone is located at the bottom, next to the system connector.

For a correct functionality of the phone, all sound holes must be always open. When the phone is used, care must be taken not to close any of those holes with a hand or fingers. The phone should be dry and clean, and no objects must be located in such a way that they close any of the holes.


Earpiece troubleshooting

Troubleshooting flow

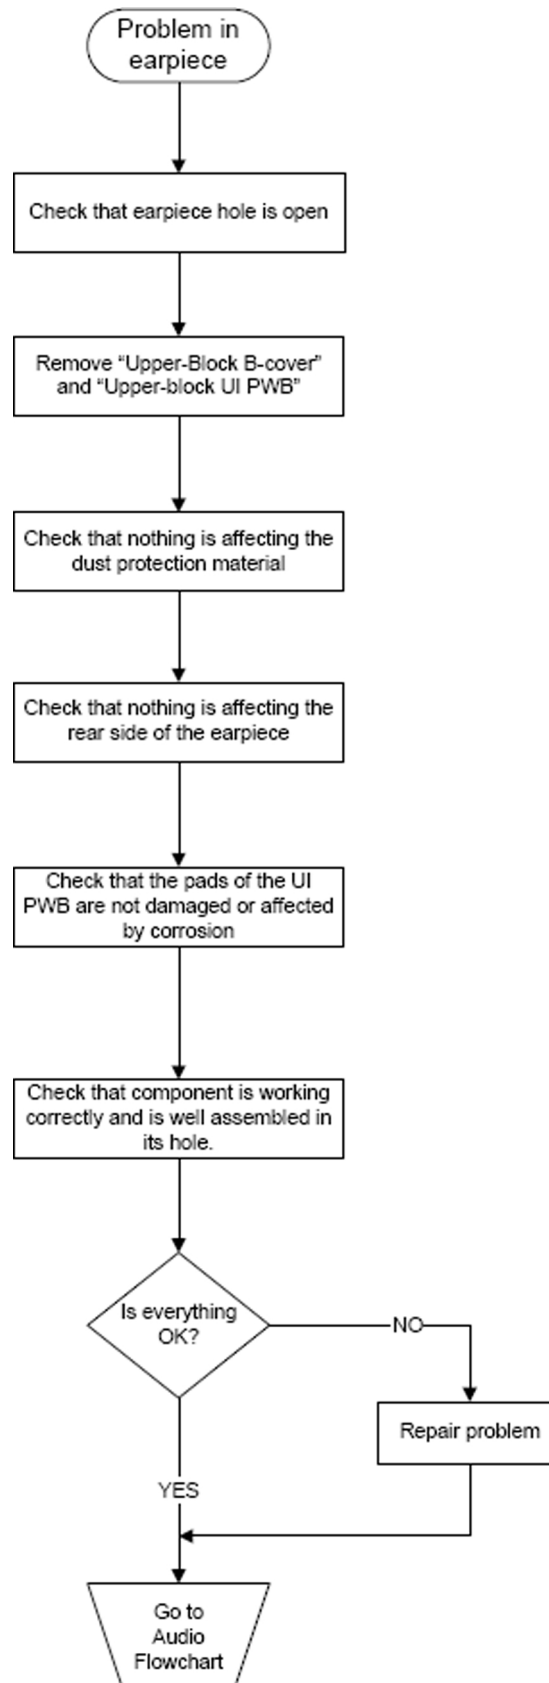


IHF troubleshooting

Troubleshooting flow

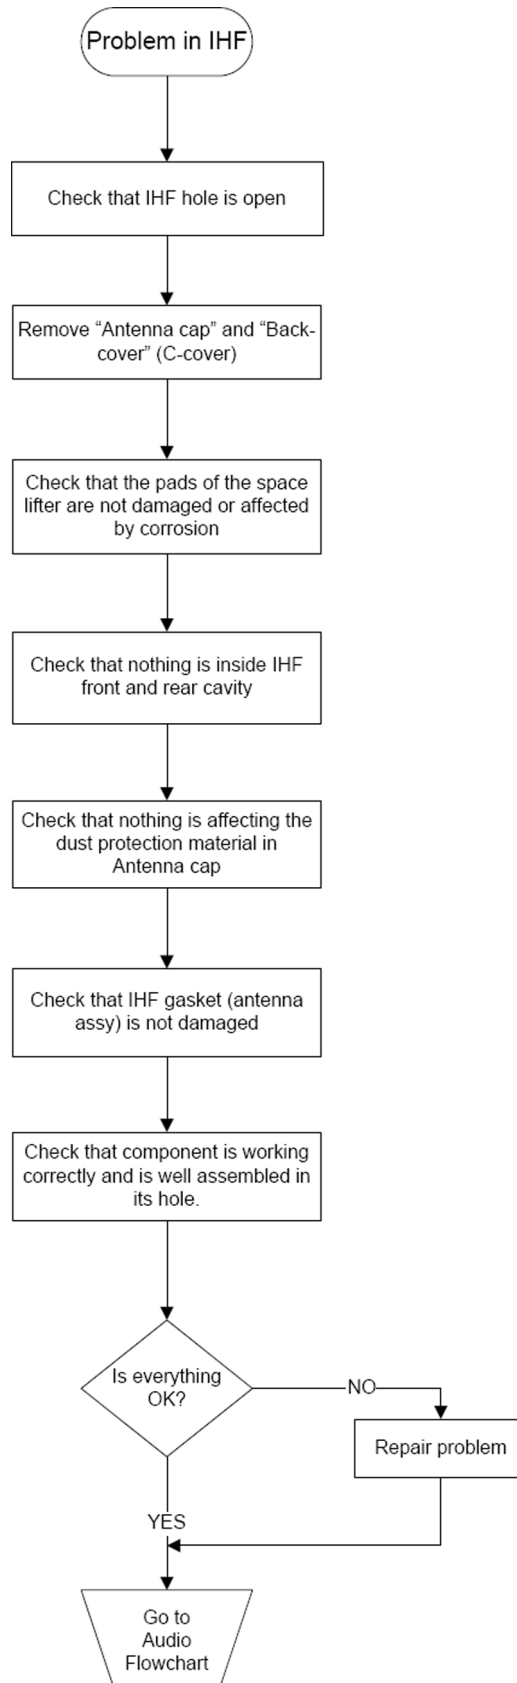

Microphone troubleshooting

Troubleshooting flow

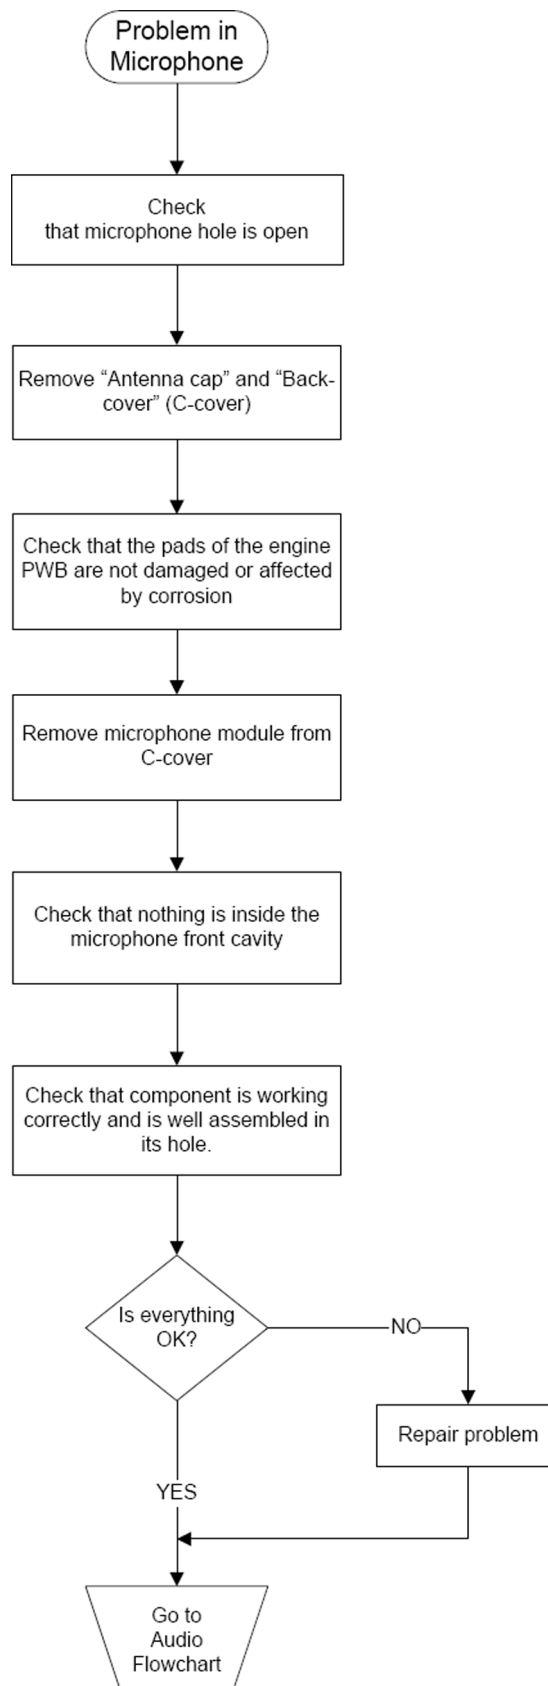

■ Baseband manual tuning guide

Energy management calibration

Prerequisites

Energy Management (EM) calibration is performed to calibrate the setting (gain and offset) of AD converters in several channels (that is, **battery voltage, BSI, battery current**) to get an accurate AD conversion result.

Hardware setup:

- An external power supply is needed.
- Supply 12V DC from an external power supply to CU-4 to power up the phone.
- The phone must be connected to a CU-4 control unit with a product-specific flash adapter.

Steps

1. Place the phone to the docking station adapter (CU-4 is connected to the adapter).
2. Start *Phoenix* service software.
3. Choose **File**→ **Scan Product**.
4. Choose **Tuning**→**Energy Management Calibration**.
5. To show the current values in the phone memory, click **Read**, and check that communication between the phone and CU-4 works.
6. Check that the **CU-4 used** check box is checked.
7. Select the item(s) to be calibrated.

Note: ADC calibration has to be performed before other item(s). However, if all calibrations are selected at the same time, there is no need to perform the ADC calibration first.

8. Click **Calibrate**.

The calibration of the selected item(s) is carried out automatically.

The candidates for the new calibration values are shown in the *Calculated values* column. If the new calibration values seem to be acceptable (please refer to the following "Calibration value limits" table), click **Write** to store the new calibration values to the phone permanent memory.

Table 12 Calibration value limits

Parameter	Min.	Max.
ADC Offset	-20	20
ADC Gain	12000	14000
BSI Gain	1100	1300
VBAT Offset	2400	2650
VBAT Gain	19000	23000
IBAT (ICal) Gain	6200	15600

9. Click **Read**, and confirm that the new calibration values are stored in the phone memory correctly. If the values are not stored to the phone memory, click **Write** and/or repeat the procedure again.
10. To end the procedure, close the *Energy Management Calibration* window.

(This page left intentionally blank.)

7 — RF Troubleshooting and Manual Tuning Guide

(This page left intentionally blank.)

Table of Contents

Introduction to RF troubleshooting	7-5
RF key component placement.....	7-5
Receiver troubleshooting	7-6
Introduction to RX troubleshooting	7-6
General instructions for RX troubleshooting.....	7-7
Synthesizer troubleshooting.....	7-9
RX GSM850 troubleshooting.....	7-10
RX GSM900 troubleshooting.....	7-11
RX GSM1800 troubleshooting.....	7-12
RX GSM1900 troubleshooting.....	7-13
GSM Rx chain activation for manual measurements / GSM RSSI measurement.....	7-14
Transmitter troubleshooting	7-14
General instructions for TX troubleshooting.....	7-14
TX 850/900 troubleshooting	7-17
TX 1800/1900 troubleshooting.....	7-18
Checking antenna functionality.....	7-19
RF tunings	7-19
Introduction to RF tunings	7-19
RF autotuning.....	7-20
System mode independent manual tunings	7-22
Rf channel filter calibration.....	7-22
PA (power amplifier) detection	7-23
GSM receiver tunings.....	7-24
Rx calibration (GSM)	7-24
Rx band filter response compensation (GSM).....	7-27
GSM transmitter tunings.....	7-32
Tx IQ tuning (GSM).....	7-32
Tx power level tuning (GSM)	7-34
RM-188 WLAN troubleshooting.....	7-38
Introduction to WLAN troubleshooting	7-38
WLAN functionality test using SB-7 and Phoenix.....	7-41
WLAN failure troubleshooting	7-42

List of Tables

Table 13 Rf channel filter calibration tuning limits.....	7-23
Table 14 RF tuning limits in Rx calibration.....	7-26

List of Figures

Figure 47 RM-188/198 RF key component placement.....	7-6
Figure 48 RF Controls window	7-8
Figure 49 RSSI Reading window	7-14
Figure 50 RF Controls window	7-16
Figure 51 BT/WLAN antenna, feed and GND spots of the main antenna.....	7-19
Figure 52 Rf channel filter calibration typical values	7-23
Figure 53 WLAN layout part 1	7-39
Figure 54 WLAN layout part 2	7-39

(This page left intentionally blank.)

■ Introduction to RF troubleshooting

All measurements should be done using:

- spectrum analyser with a high-frequency high-impedance passive probe (LO-/reference frequencies and RF power levels)
- oscilloscope with a 10:1 probe (DC-voltages and low frequency signals)

Caution: Also all measurements with an RF coupler should be performed in RF shielded environment because nearby base stations can disturb sensitive receiver measurements. If there is no possibility to use RF shielded environment, it should be checked that there are no transmissions on the same frequencies as used in the tests.

The RF section of the phone is build around one RF ASIC: ASIC N7505.

Note: Before changing N7505, please check the following things: supply voltages and serial communication coming from baseband to N7505 are OK. Please note that the grounding of the Front End Module (FEM) is directly below FEM so it is difficult to check or change.

Most RF semiconductors are static discharge sensitive! ESD protection must be taken care of during repair (ground straps and ESD soldering irons). N7505 and FEM are moisture sensitive, so parts must be pre-baked prior to soldering.

In addition to key components, there are lot of discrete components (resistors, inductors and capacitors) which troubleshooting is done mainly by checking if the soldering of the component is done properly.

Capacitor can be checked for shorts and resistors for value by means of an ohmmeter, but be aware in-circuit measurements should be evaluated carefully as other components connected to the same node can change the seen resistance.

Keep in mind that all measured voltages or RF levels depicted in the service manual are rough figures. Especially RF levels vary because of different measuring equipment or different grounding of the probe used.

When using an RF probe, use a pair of metallic tweezers to connect the probe ground to the PWB ground as close to the measurement point as possible. If measurements are performed in a product specific module jig, then "GND" pads should be used for the probe ground.


■ RF key component placement

The RF section of the phone is build around one RF ASIC: ASIC N7505.

General instructions for RX troubleshooting

Steps

1. Connect a test jig to a computer with a DKU-2 cable or to a FPS-10 flash prommer with a modular cable (XCS-4).
Make sure that you have a PKD-1 dongle connected to the computer's parallel port.
2. Connect a DC power supply to a module test jig (MJ-111).
Note: Set the DC supply voltage to 12 V and set the jumper connector on the test jig's **reg.pass** switch to "ON" position.
3. Connect an RF cable between the RF connector of the phone and measurement equipment or alternatively use a 50 ohms (at least 2W) dummy, otherwise GSM may be damaged.
Note: Make sure that all connections are made to the correct RF connector and correct type of RF probe is used.
4. Set Rx on.
 - i Set the phone module to the test jig and start *Phoenix service software*.
 - ii Initialize connection to the phone. (With FPS-10 use FBUS driver when using DKU-2 and COMBOX driver).
 - iii From the File menu, choose product: **File -> Choose Product -> xx-x*** (* = type designator of the phone, scan product).
 - iv From the toolbar, set operating mode to "Local".
5. EGSM900, GSM850/1800/1900 troubleshooting
 - i From the Testing menu, activate the *RF Controls* window: **Testing -> GSM -> RF Controls**.

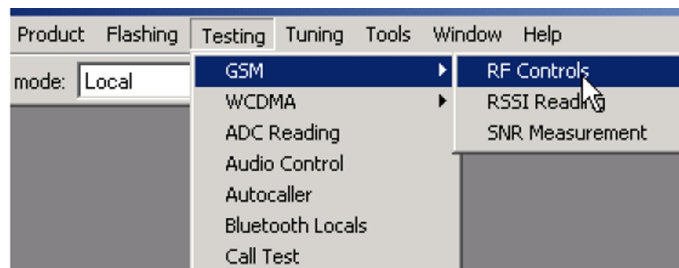

- ii In the *RF Controls* window:
 - Select band "GSM850", "GSM900" or "GSM1800" or "GSM1900" (Default = "GSM850").
 - Set Active unit to "Rx" (Default = "Rx").
 - Set Operation mode to "Burst" (Default = "Burst").
 - Set Rx/Tx channel to 190 on GSM850, 37 on GSM900 band or 700 on GSM1800 band or 661 on GSM1900 (Defaults).
 - Set Edge to "Off" (Default). (Not active in RXmode).
 - Set Tx PA mode to "Free" (Default). (Not active in RXmode).
 - Apply 942.46771 MHz (channel 37 + 67.710 kHz offset), 881.66771MHz (channel 190 + 67.710 kHz), 1842.86771 MHz (channel 700 + 67.710 kHz offset) or 1960.06771 MHz (channel 661 + 67.71 kHz) – 90 dBm signal to the RF-connector (remember to compensate for cable attenuation).

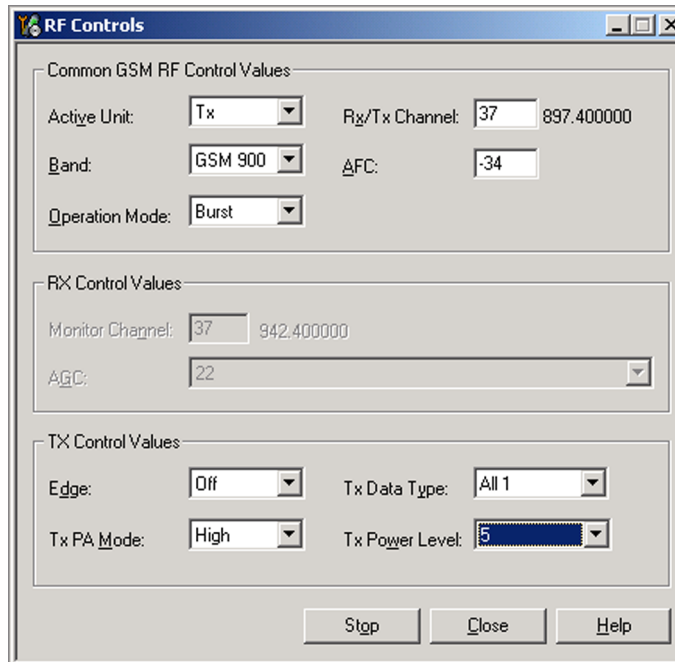


Figure 48 RF Controls window


Synthesizer troubleshooting

Troubleshooting flow




RX GSM850 troubleshooting

Troubleshooting flow

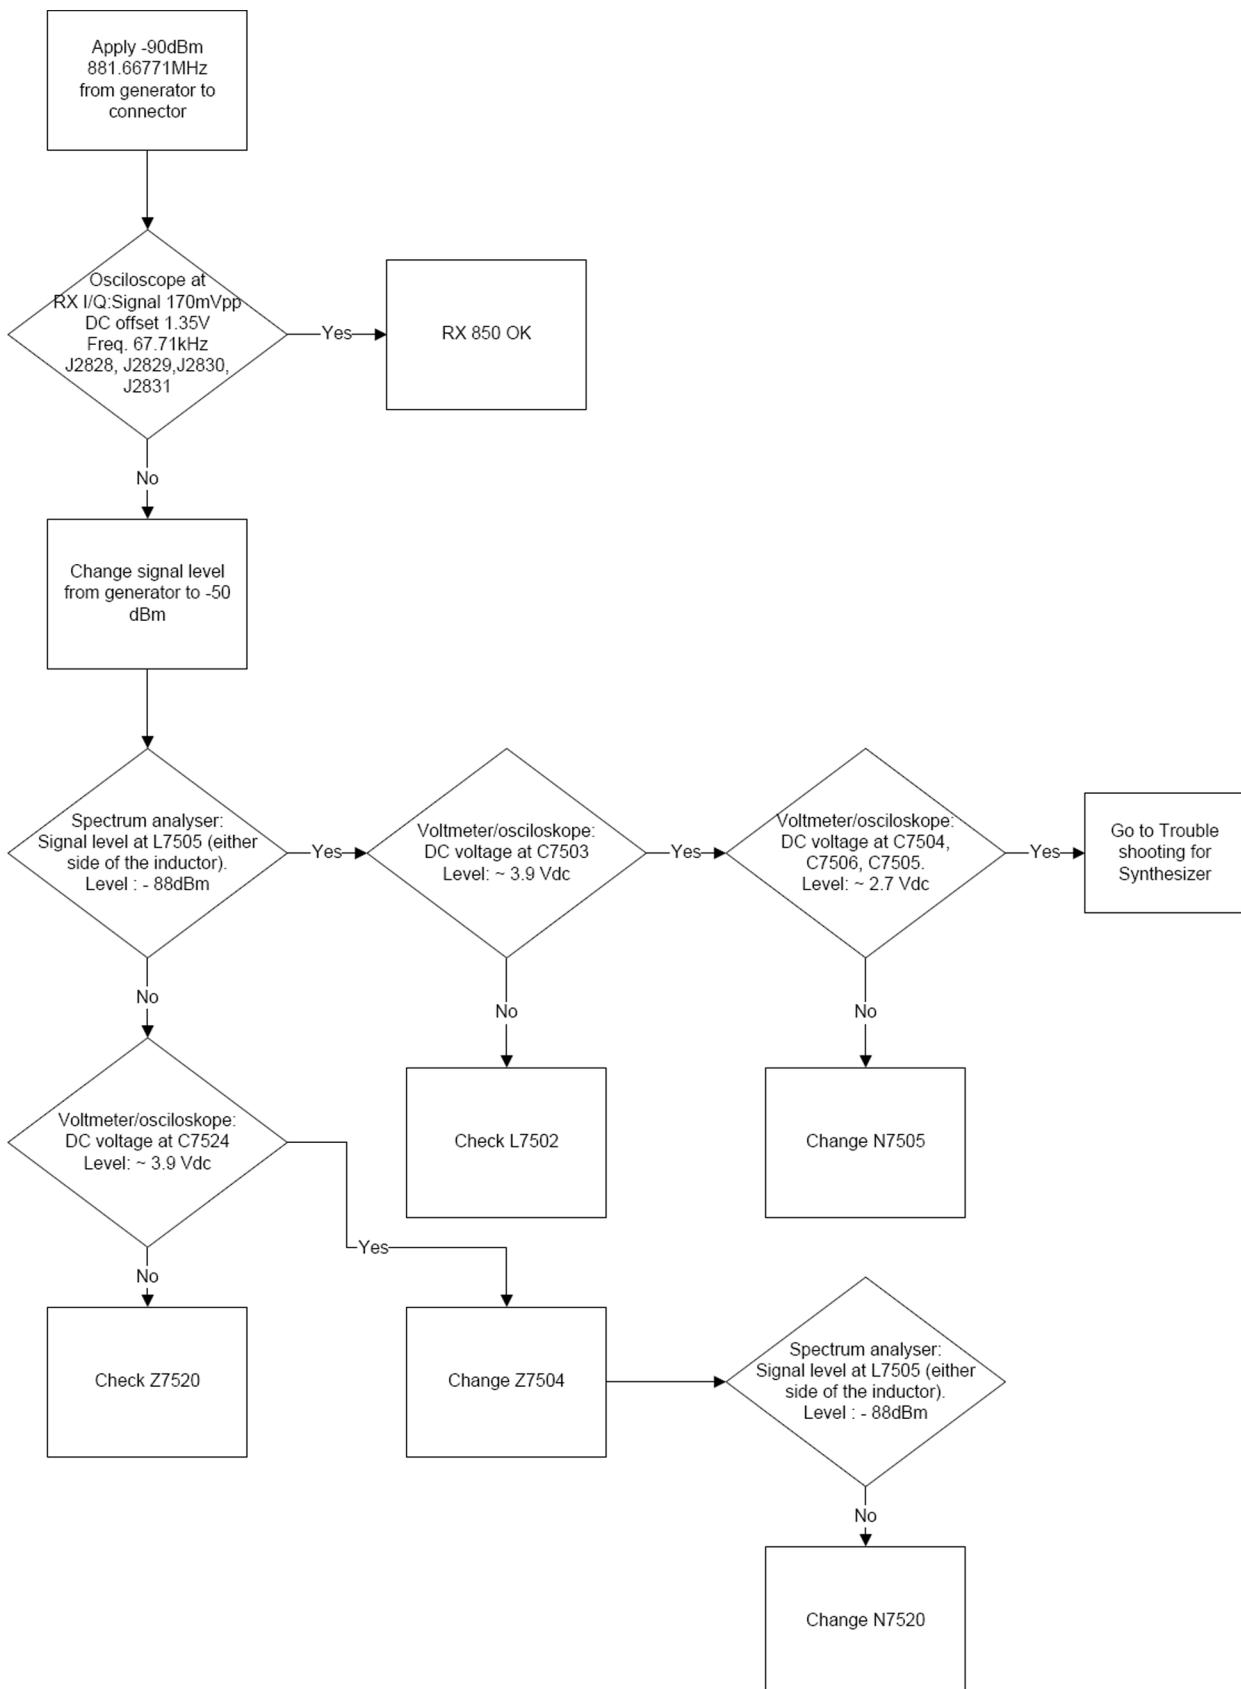


RX GSM900 troubleshooting

Troubleshooting flow

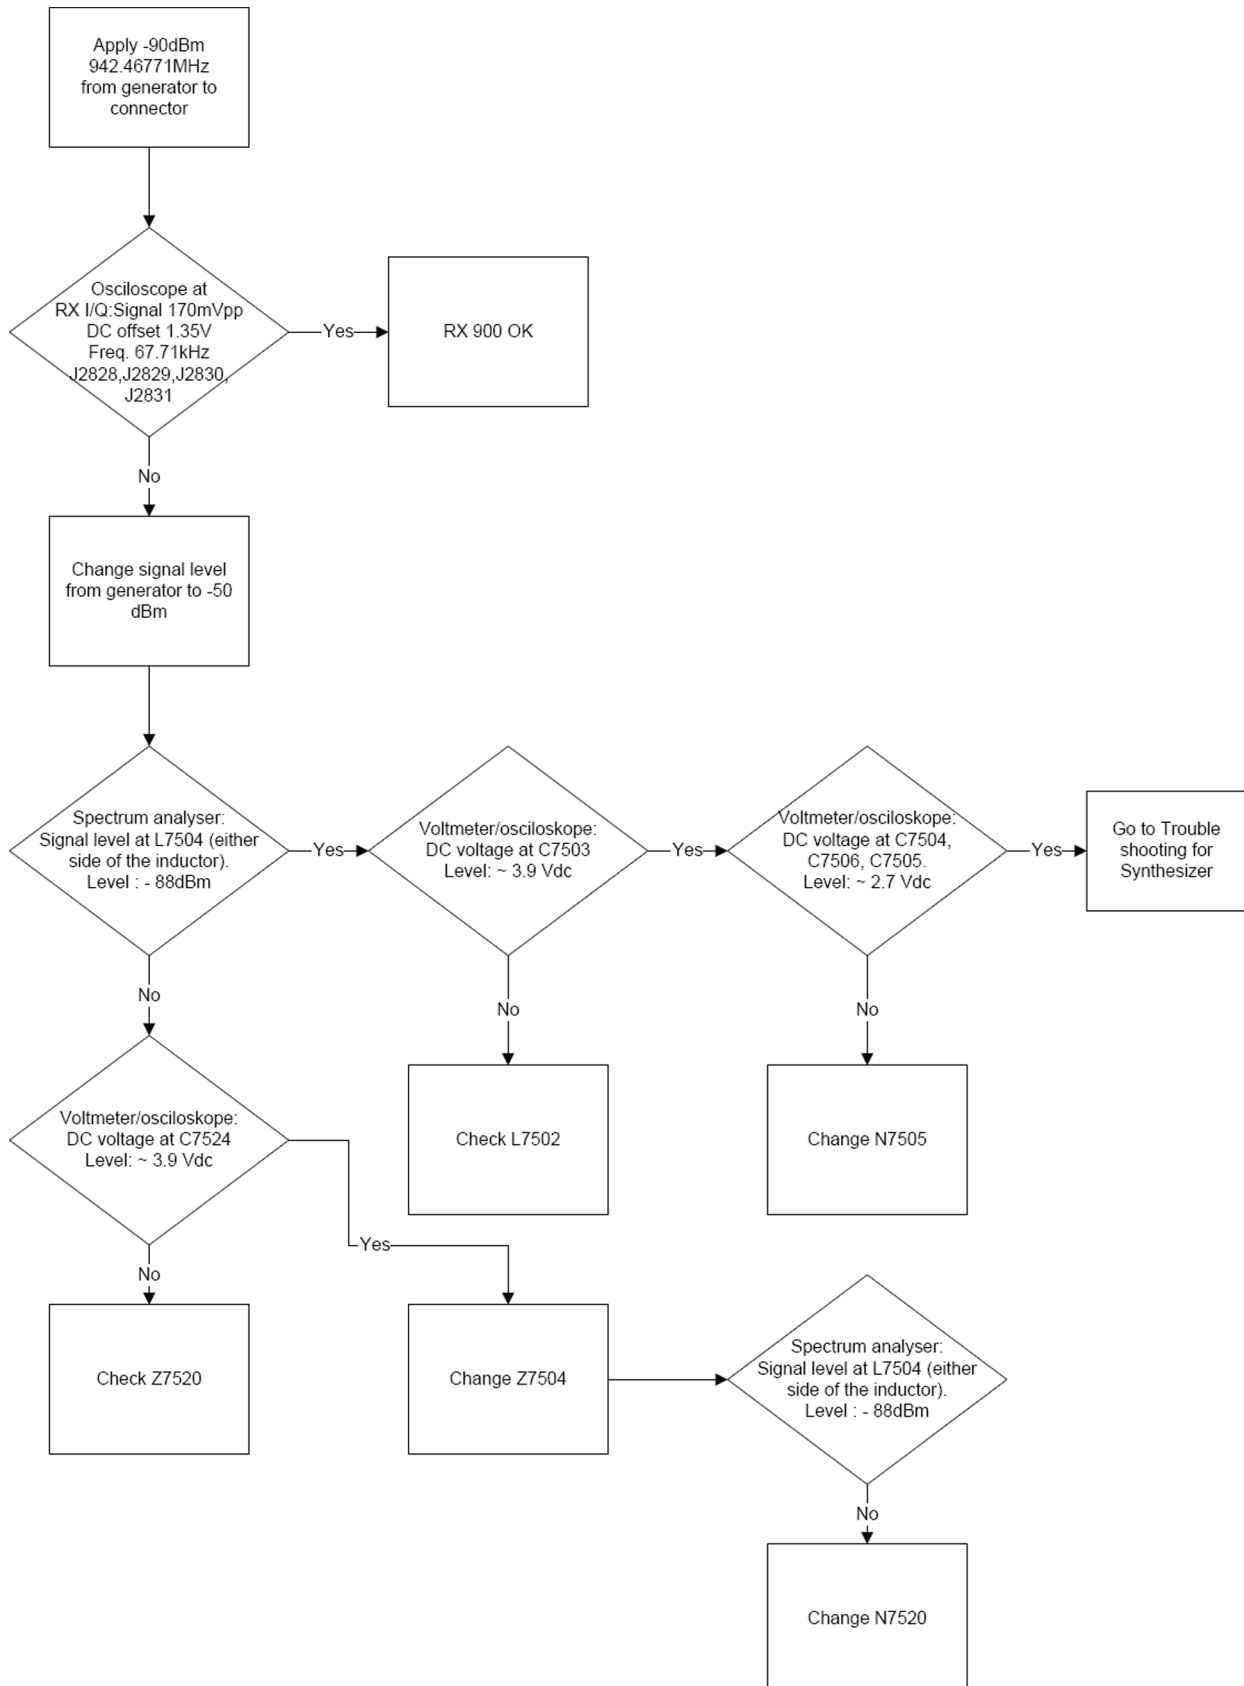


RX GSM1800 troubleshooting

Troubleshooting flow

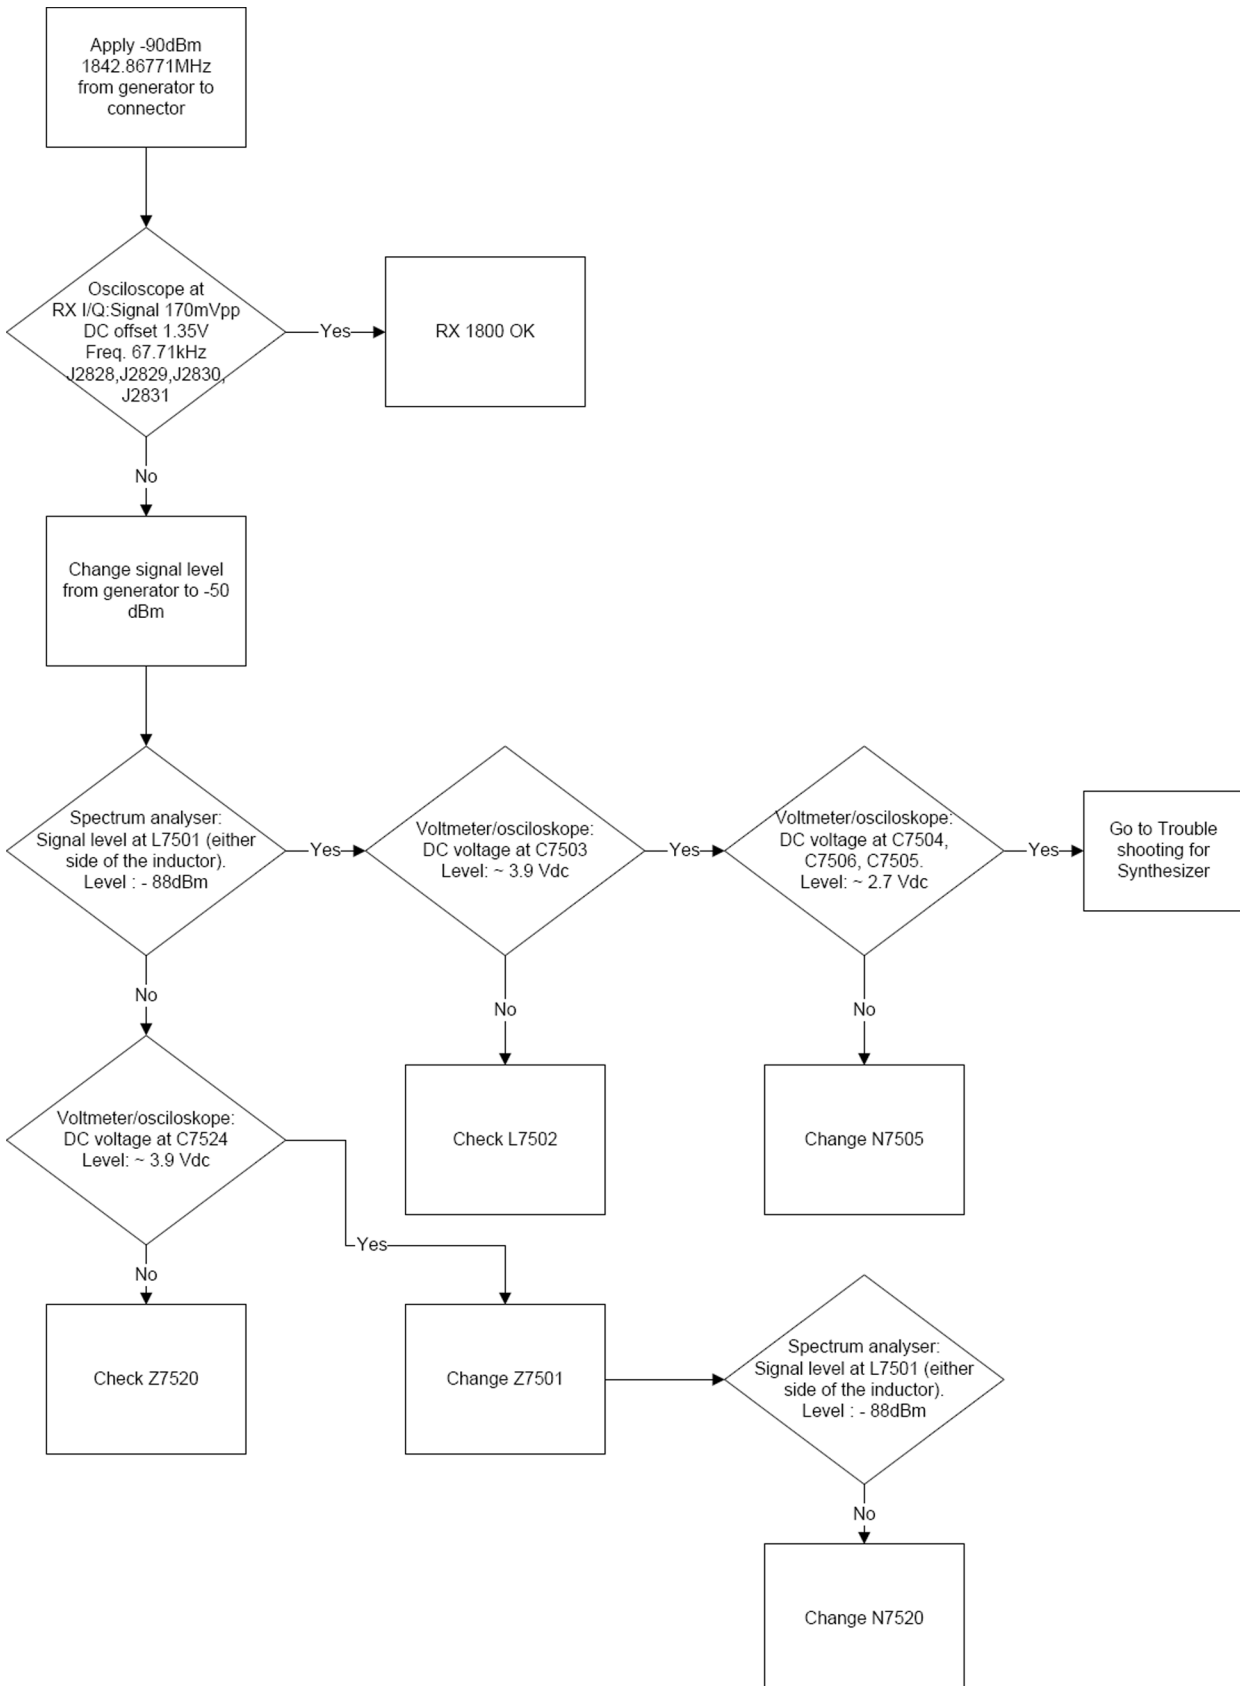

RX GSM1900 troubleshooting

Troubleshooting flow

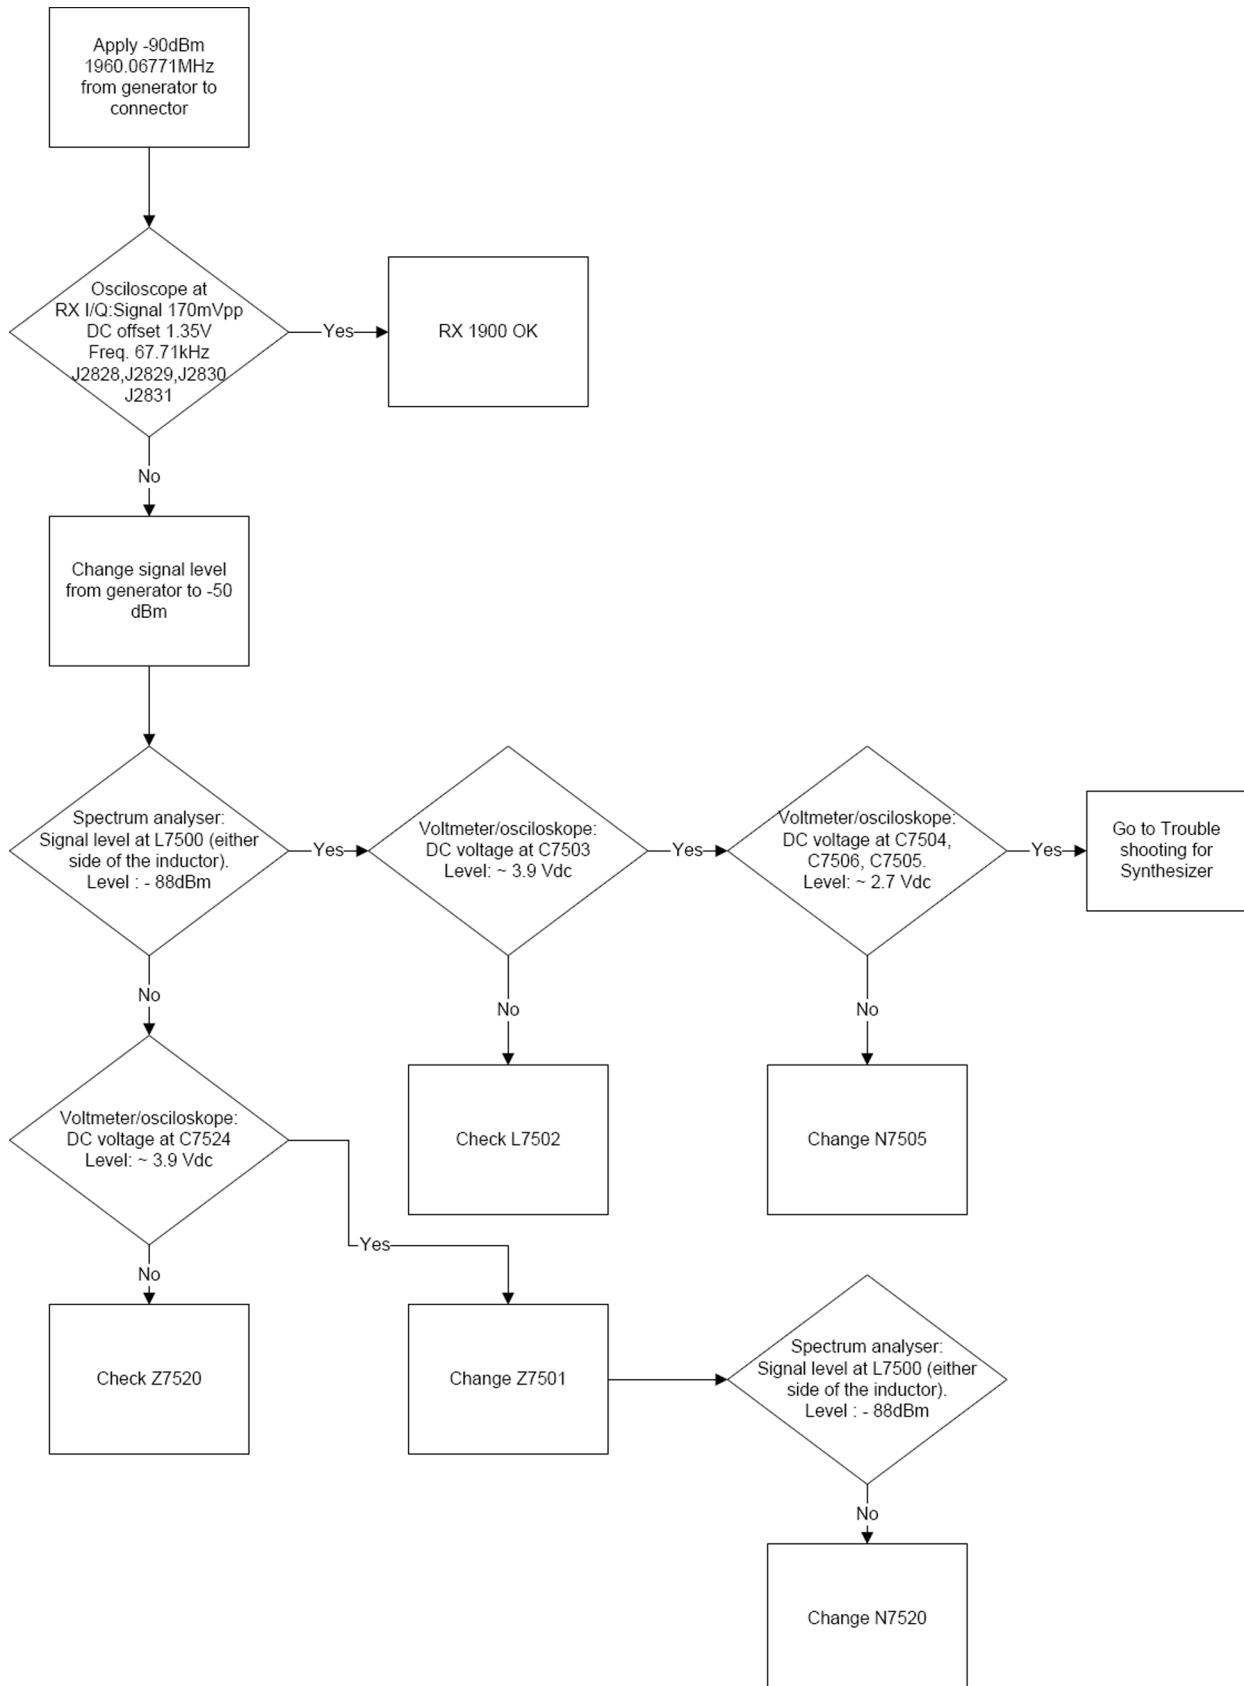

GSM Rx chain activation for manual measurements / GSM RSSI measurement

Context

RSSI signal measurement is the main Rx troubleshooting measurement. The test measures the strength of the received signal.

I and Q branches can be measured separately. In GSM, the input signal can be either a real GSM signal or a CW (Continuous Wave) signal that is 67.771 kHz above the carrier frequency.

Steps

1. Start *Phoenix* service software.
2. Choose **Testing**→**GSM**→**RSSI Reading**.
3. Set the RF signal generator for a channel frequency +67.771 kHz in CW mode with a -80 dBm signal level. Alternatively set the cellular tester downlink channel to the appropriate channel. Make sure that the tester is set to continuous mode, not to burst mode.
4. In the *RSSI Reading* window, select the appropriate band and channel.

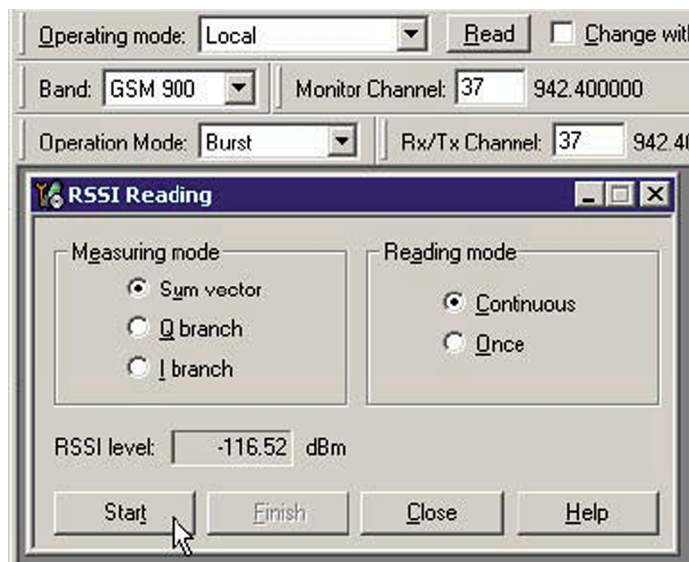


Figure 49 *RSSI Reading* window

5. To start the measurement, activate GSM Rx chain, click **Start**.

Results

RSSI reading values of the selected band and channel are displayed. The RSSI level must be the same value as that which is set at the signal generator (-80 dBm).

Transmitter troubleshooting

General instructions for TX troubleshooting

Context

- Tx troubleshooting requires Tx operation.
- Do not transmit on frequencies that are in use!
- Transmitter can be controlled in the local mode for diagnostic purposes.
- The most useful Phoenix tool for GSM transmitter testing is "RF Controls".

- Tx IQ tuning and Tx power tuning can be also used in some cases.
- Remember that retuning is not a fix! Phones are tuned correctly in production.

The first set of steps instructs how to assemble the test setup. This setup is general for all Tx troubleshooting tasks.

Alternative steps provide specific troubleshooting instructions for *Phoenix* service software.

Caution: Never activate the GSM transmitter without a proper antenna load. There should be always 50 ohm load connected to the RF connector (antenna, RF-measurement equipment or at least 2 watts dummy load), otherwise GSM PA may be damaged.

Steps

1. Connect a test jig to a computer with a DKU-2 cable or to a FPS-10 flash prommer with a modular cable (XCS-4).

Make sure that you have a PKD-1 dongle connected to the computer's parallel port.

2. Connect a DC power supply to a module jig (MJ-111).

Note: When repairing or tuning a transmitter, use an external DC supply with at least 3 A current capability.

Set the DC supply voltage to 12V and set the jumper connector on the test jig's **reg.pass** switch to "ON" position.

3. Connect an RF cable between the RF connector of the phone and measurement equipment or alternatively use a 50 ohms (at least 2 W) dummy, otherwise GSM may be damaged.

Note: Make sure that all connections are made to the correct RF connector and correct type of RF probe is used.

Normally a spectrum analyser is used as measurement equipment.

Note: The maximum input power of a spectrum analyser is +30 dBm.

To prevent any damage, it is recommended to use 10 dB attenuator on the spectrum analyzer input.

4. Set Tx on.

- i Set the phone module to the test jig and start *Phoenix service software*.
- ii Initialize connection to the phone. (With FPS-10 use FBUS driver when using DAU-9S and COMBOX driver).
- iii From the File menu, choose product: **File -> Choose Product -> xx-x*** (* = type designator of the phone).
- iv From the toolbar, set operating mode to "Local".

5. EGSM900, GSM850/1800/1900 troubleshooting

- i From the Testing menu, activate the *RF Controls* window: **Testing -> GSM -> RF Controls**.



- ii In the *RF Controls* window:

- Select band "GSM850", "GSM900" or "GSM1800" or "GSM1900" (Default = "GSM850").

- Set Active unit to "Tx" (Default = "Rx").
- Set Operation mode to "Burst" (Default = "Burst").
- Set Tx data type to "Random" (Default = "All1").
- Set Rx/Tx channel to 190 on GSM850, 37 on GSM900 band or 700 on GSM1800 band or 661 on GSM1900 (Defaults).
- Set Edge to "Off" (Default).
- Set Tx PA mode to "Free" (Default).
- Set power level to 5 (Default = 19) on GSM850/900 or to 0 (Default = 15) on GSM1800 or GSM1900.


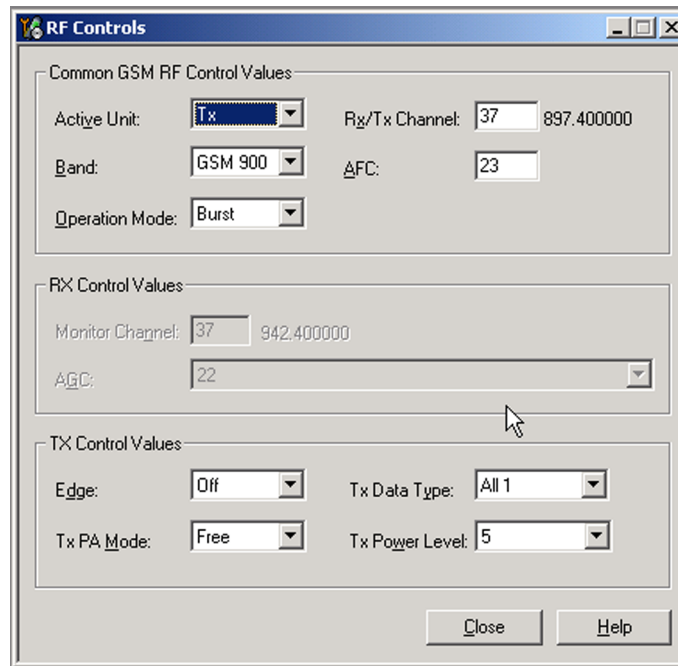


Figure 50 RF Controls window


TX 850/900 troubleshooting

Troubleshooting flow

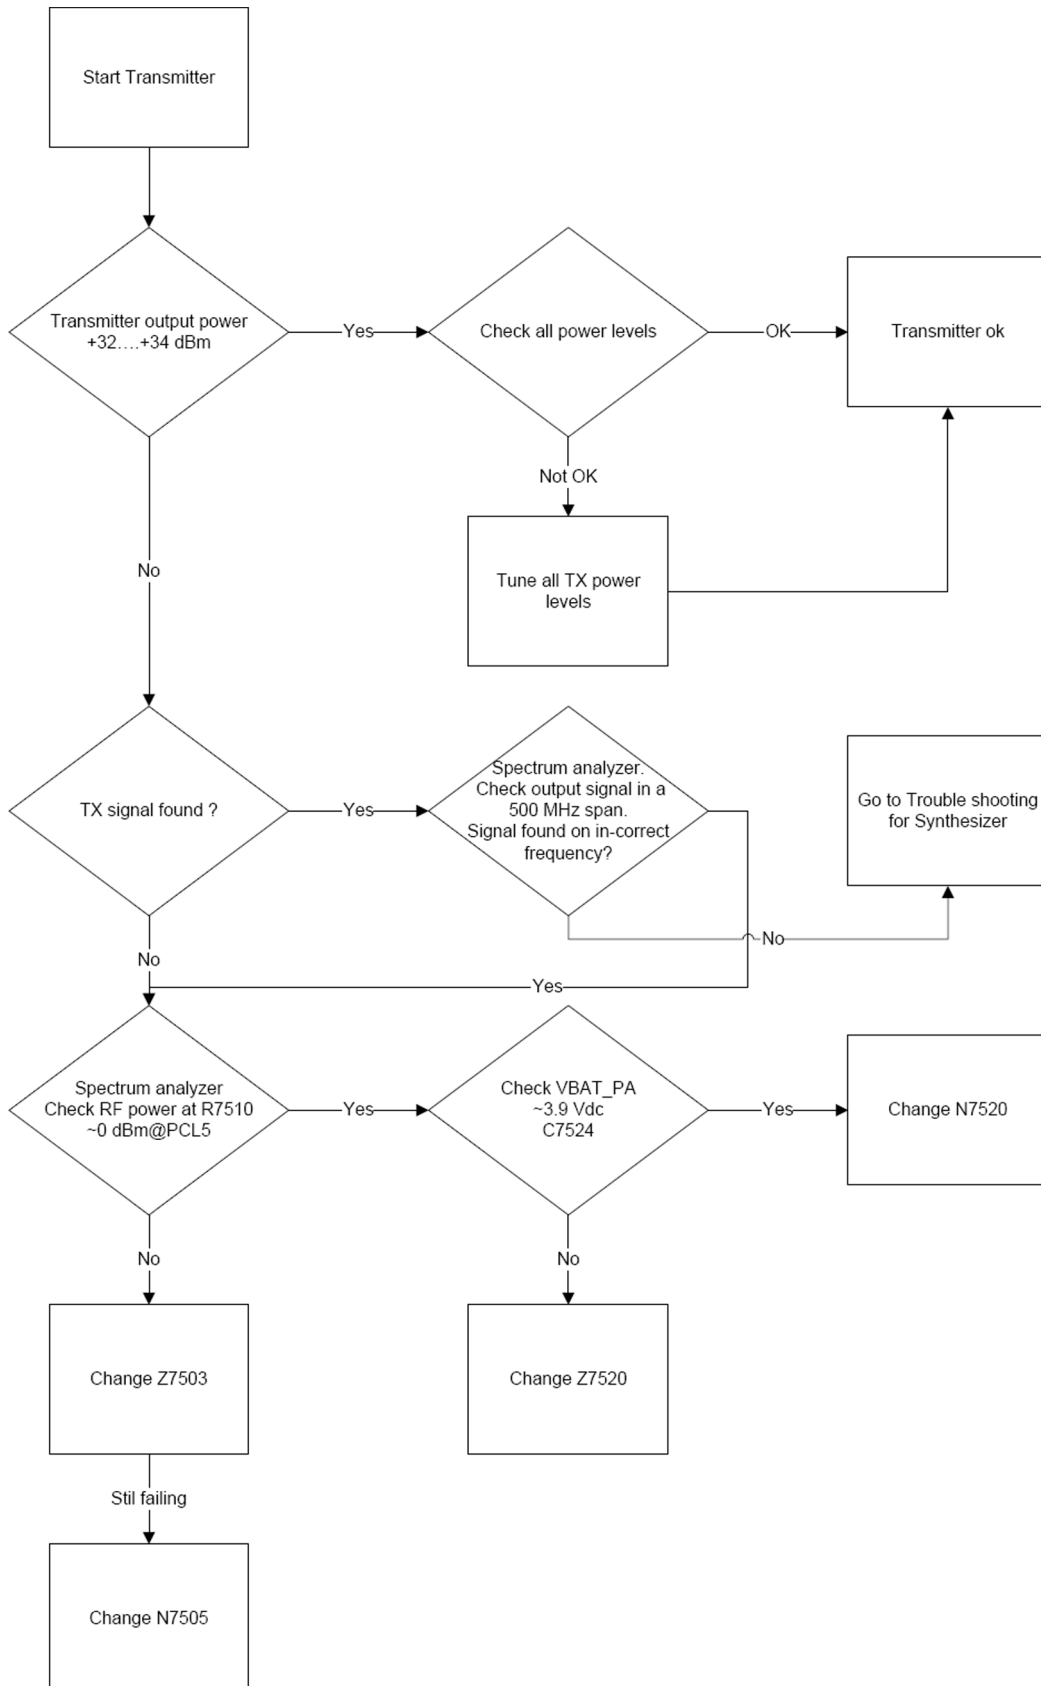

TX 1800/1900 troubleshooting

Troubleshooting flow

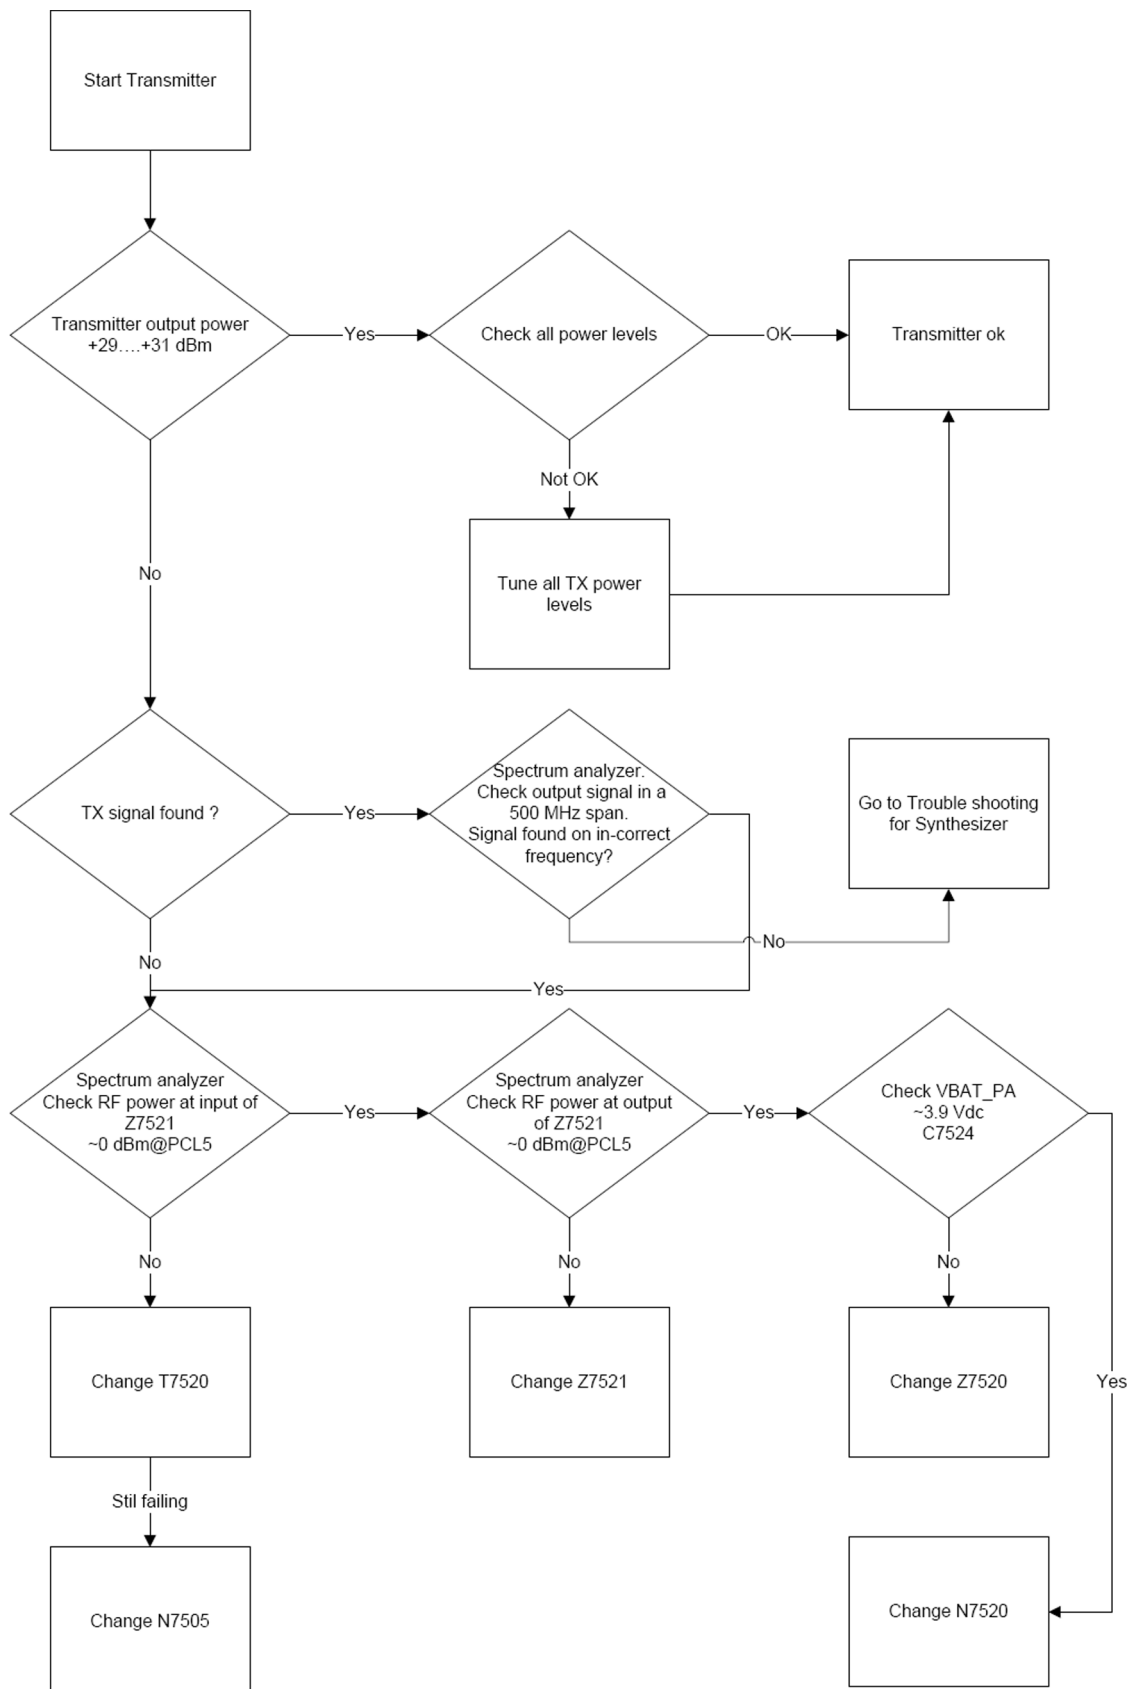

Checking antenna functionality

Main antenna

The main antenna has one antenna: GSM.

In the GSM antenna, there is one feed and one GND contact.

The antenna is functioning normally when it is visually intact and the antenna pins are intact.

BT/WLAN antenna

BT/WLAN antenna is a ceramic SMD antenna. The antenna is functioning normally when the contacts function (RDC = 0 ohm) and the antenna is visually intact.

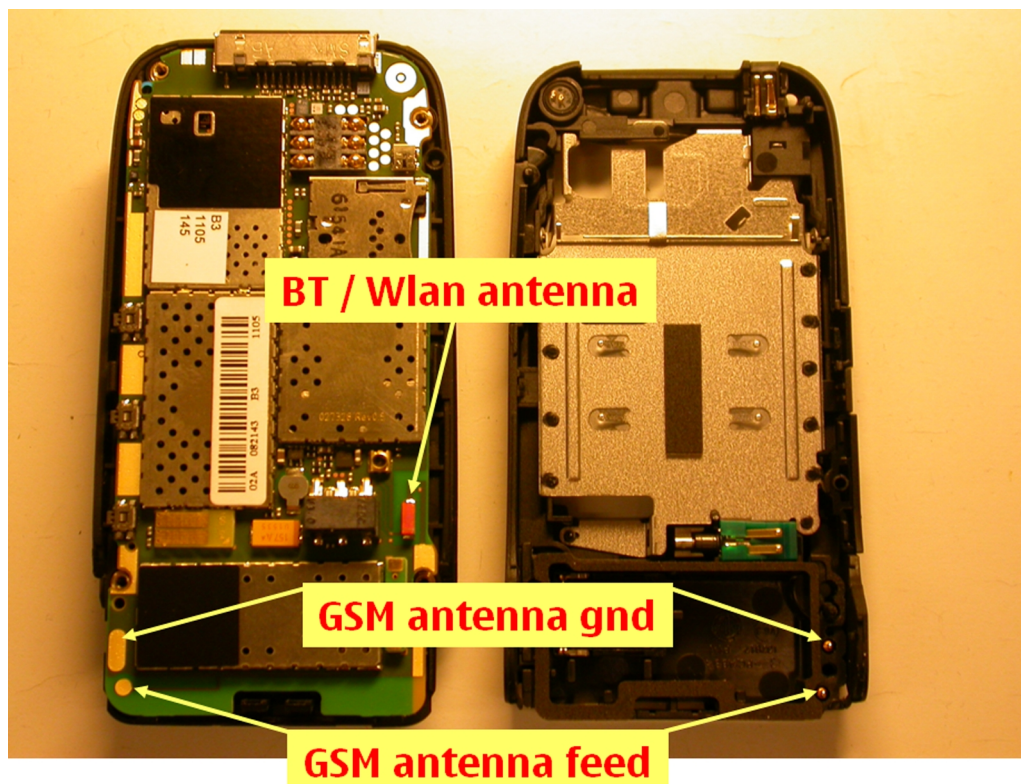


Figure 51 BT/WLAN antenna, feed and GND spots of the main antenna

■ RF tunings

Introduction to RF tunings

Important: Only perform RF tunings if:

- one or more of the RF components is changed
- flash Memory chip is changed or otherwise corrupted.

RF calibration is always performed with the help of a product-specific module jig, never with an RF coupler. Using an RF coupler in the calibration phase will cause a complete mistuning of the RF side.

Important: After RF component changes, **always** use autotuning. Manual tunings are only required in rare cases.

Cable and adapter losses

RF cables and adapters have some losses. They have to be taken in account when the phone is tuned. As all the RF losses are frequency dependent, the user have to be very careful and understand the measurement setup. In the following table there are RF attenuations of the module jig:

Band	Attenuation
GSM850	0.2 dB
GSM900	0.2 dB
GSM1800	0.3 dB
GSM1900	0.3 dB

RF autotuning

Prerequisites

For information on the recommended test set-up, refer to the corresponding information on PWS/NOL.

Before you can use the auto-tune feature, the GPIB driver from the GPIB card vendor must be installed and running.

The autotune .ini file must be in a correct place: **C:\Program Files\Nokia\Phoenix\products\xx-x*\autotune_xx-x*.ini** (*= indicates the type designator of the phone, e.g. RM-1)


Context

RF autotuning is performed with the aid of Digital Radio Communication Tester. Autotuning covers all RF tunings that are needed to perform after RF component repairs.


Note: Do not perform RF autotuning without a proper reason. Phones are tuned in production and an RF tuning may be performed only after component repairs or if the RF tuning information is lost.

Steps


1. Connect the communication tester to the GPIB bus.
2. Start Phoenix service software.
3. From the Tools menu, choose Options -> GPIB Card.

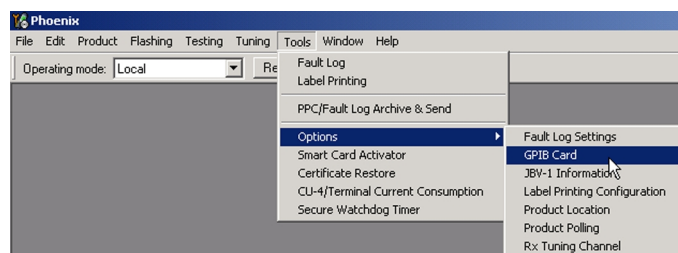


4. In the Card Type line, select CEC8Bit, then click Start.
After clicking Start, the name of the communication tester appears in the list of found Listeners.

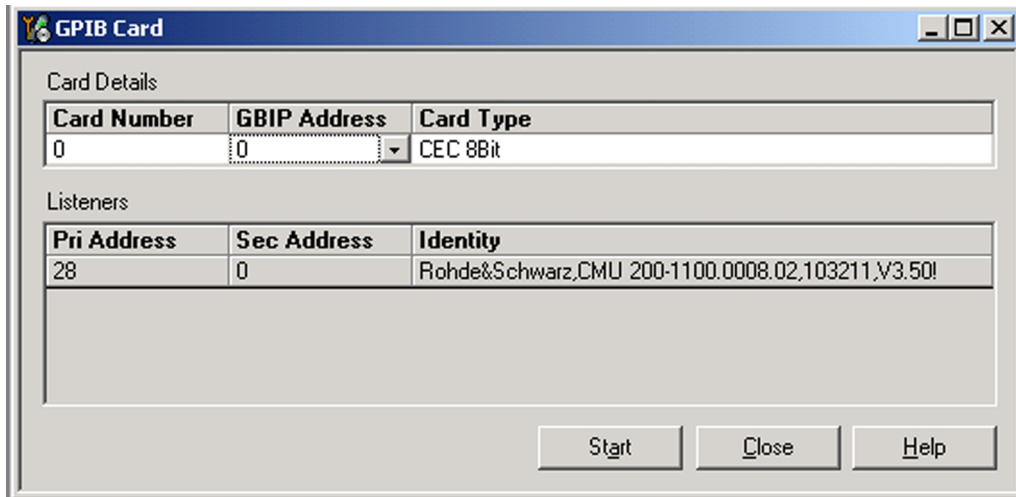


- To specify the cable loss from module jig to the communication tester, choose "Set Loss" from the Tuning menu.

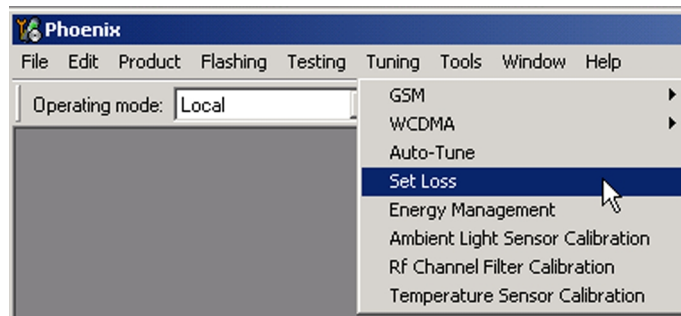

- Click the Cable tab and add the extra cable attenuation.
Note: Cable losses have to be determined on the basis of a cable used.

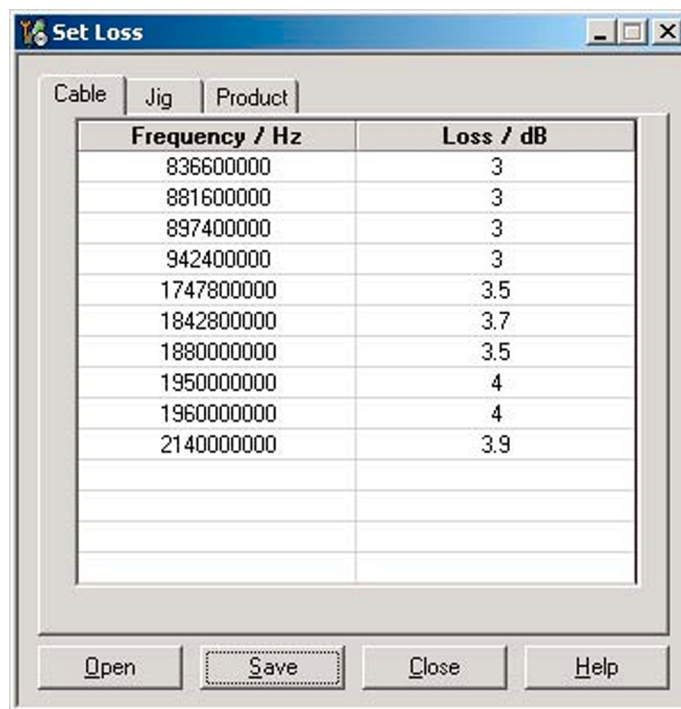


7. To start autotuning, choose Auto-Tune from the Tuning menu.

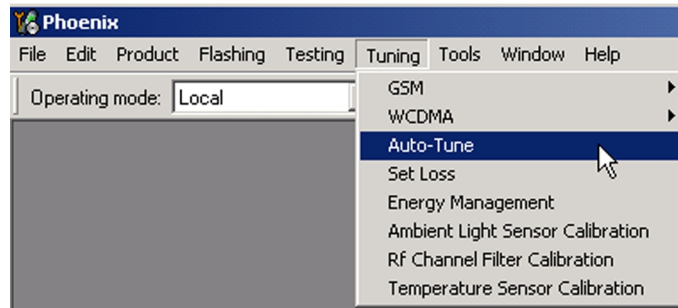

8. In the Auto-Tune window, click Options.


9. In the Auto-Tune options window, see that the "Enable showing of messages" check box is checked, then click OK.

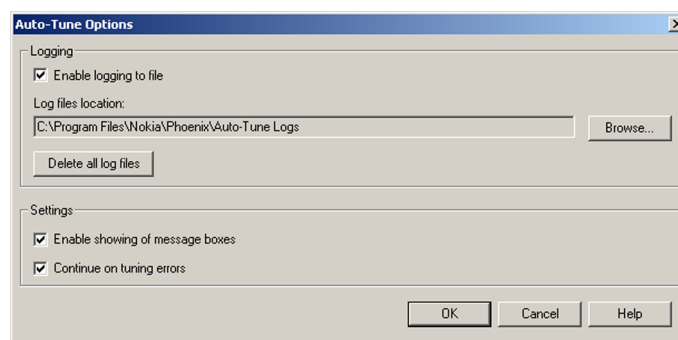

10. To complete the RF autotuning, click OK.

Results

"Autotuning completed successfully" message appears.

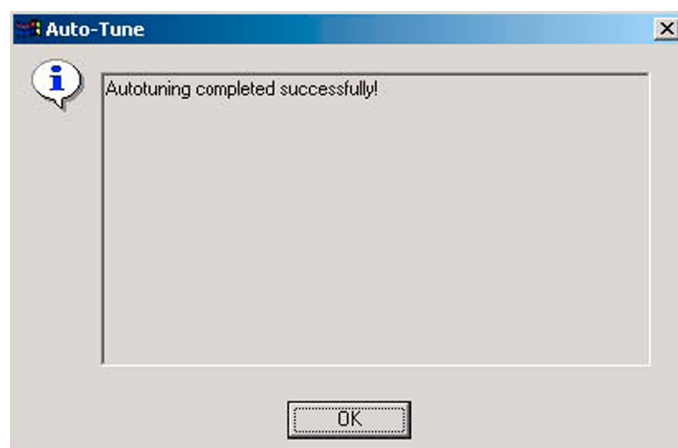

■ System mode independent manual tunings

Rf channel filter calibration

Context

Rf channel filter calibration tunes the internal low pass filters of Rx and Tx ASICs that limit the bandwidth of BB IQ signals.

One common calibration is made for GSM.

Table 13 Rf channel filter calibration tuning limits

	Min	Typ	Max
Tx filter	0	10	31
Rx filter	0	16	31

Steps

1. From the **Operating mode** drop-down menu, set mode to **Local**.
2. Choose **Tuning**→**Rf Channel Filter Calibration** .
3. Click **Tune**.
4. To save the values to the PMM (Phone Permanent Memory) area, click **Write**.
5. To close the *Rf Channel Filter Calibration* window, click **Close**.

Results

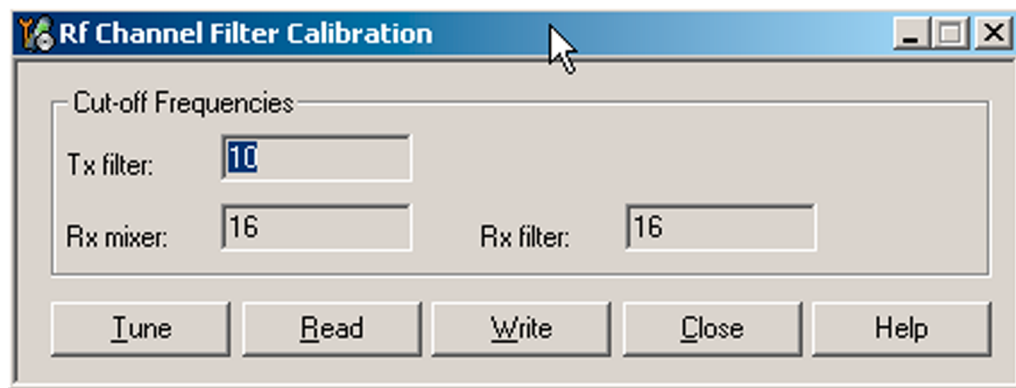


Figure 52 Rf channel filter calibration typical values

PA (power amplifier) detection

Context

The PA detection procedure detects which PA manufacturer is used for phone PAs.

If a PA is changed or if the permanent memory (PMM) data is corrupted, PA detection has to be performed before Tx tunings.

Steps

1. From the **Operating mode** drop-down menu, set mode to **Local**.
2. Choose **Tuning**→**PA Detection** .
3. Click **Tune**.
4. Check that the detected PA manufacturers are corresponding to the actual chips on the board.
5. To end the procedure, click **Close**.

■ GSM receiver tunings


Rx calibration (GSM)

Context


Rx Calibration is used to find out the real gain values of the GSM Rx AGC system and tuning response of the AFC system (AFC D/A init value and AFC slope)

Steps


1. Connect the GSM connector of the module jig to a signal generator.
2. Start *Phoenix* service software.
3. From the **Operating mode** drop-down menu, set mode to **Local**.
4. Choose **Tuning**→**GSM**→**Rx Calibration** .
5. Check the **Load from Phone** check box, and uncheck **Save to Phone**.
6. From the **Band** drop-down menu, choose e.g. **GSM900**.
7. Click **Start**.

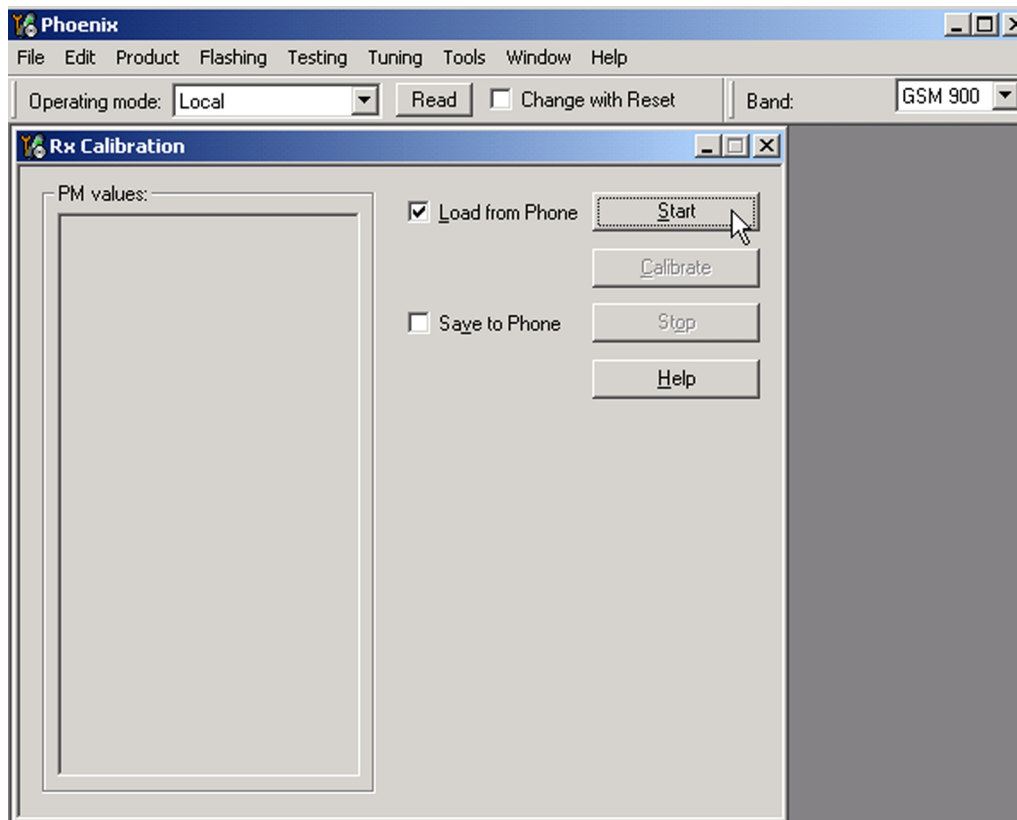

8. Click **Calibrate**.

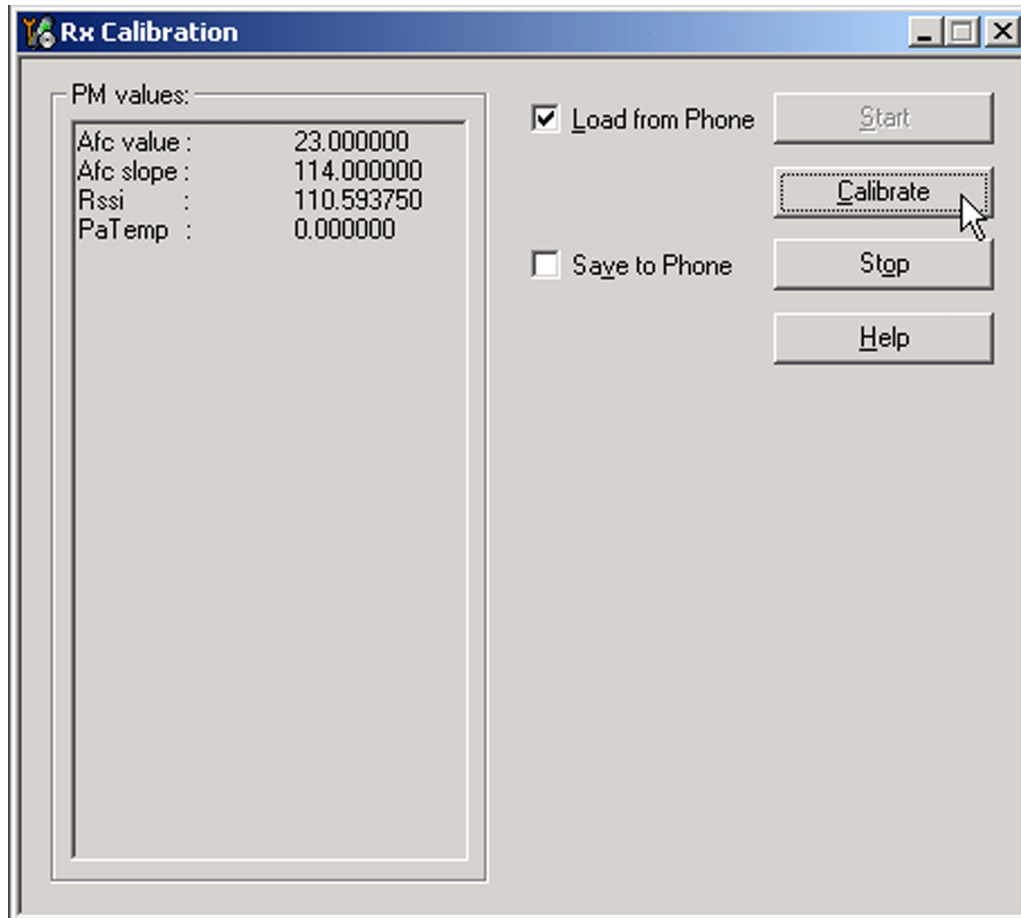

9. Connect the signal generator to the phone, and set frequency and amplitude as instructed in the **Rx Calibration with band EGSM900** pop-up window.
Important: The calibration uses a non-modulated CW signal. Increase the signal generator level by cable attenuation and module jig probe attenuation.

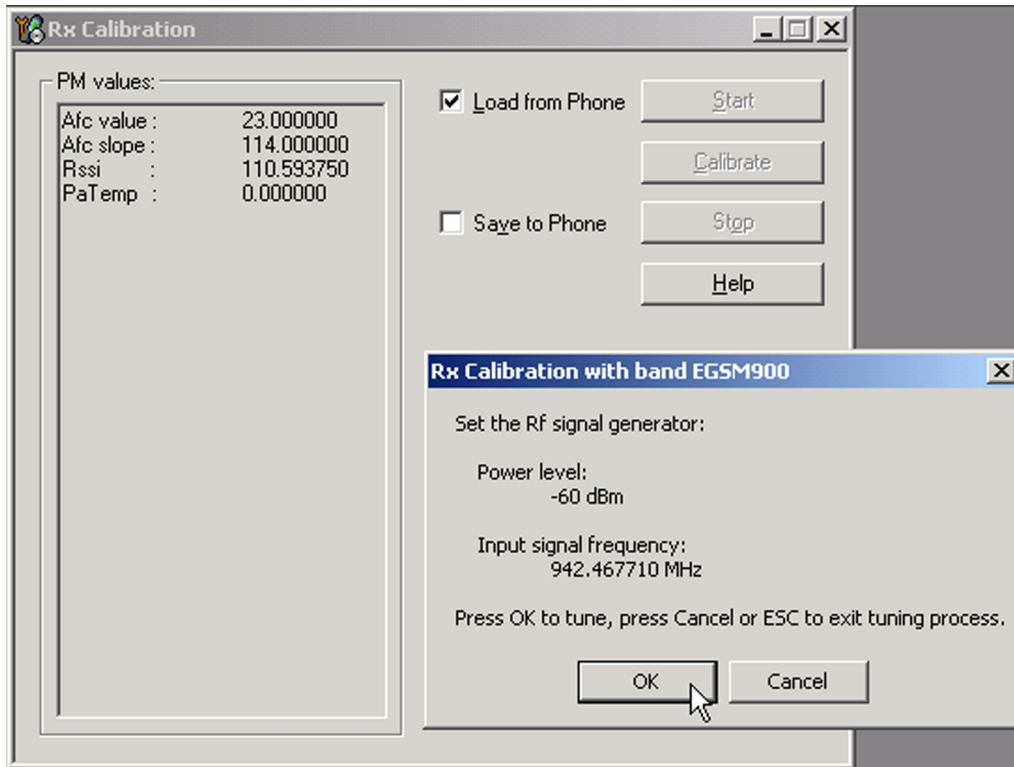


10. To perform the tuning, click **OK**.
11. Check that the tuning values are within the limits specified in the following table:

Table 14 RF tuning limits in Rx calibration

	Min	Typ	Max	Unit
GSM850				
AFC Value	-200	-105...62	200	
AFC slope	0	122	200	
RSSI0	106	107...110	114	dB
GSM900				
AFC Value	-200	-105...62	200	
AFC slope	0	122	200	
RSSI0	106	107...110	114	dB
GSM1800				
RSSI0	104	104...109	114	dB
GSM1900				
RSSI0	104	104...109	114	dB

12. To save values to the phone, check the **Save to Phone** check box, and click **Stop**.

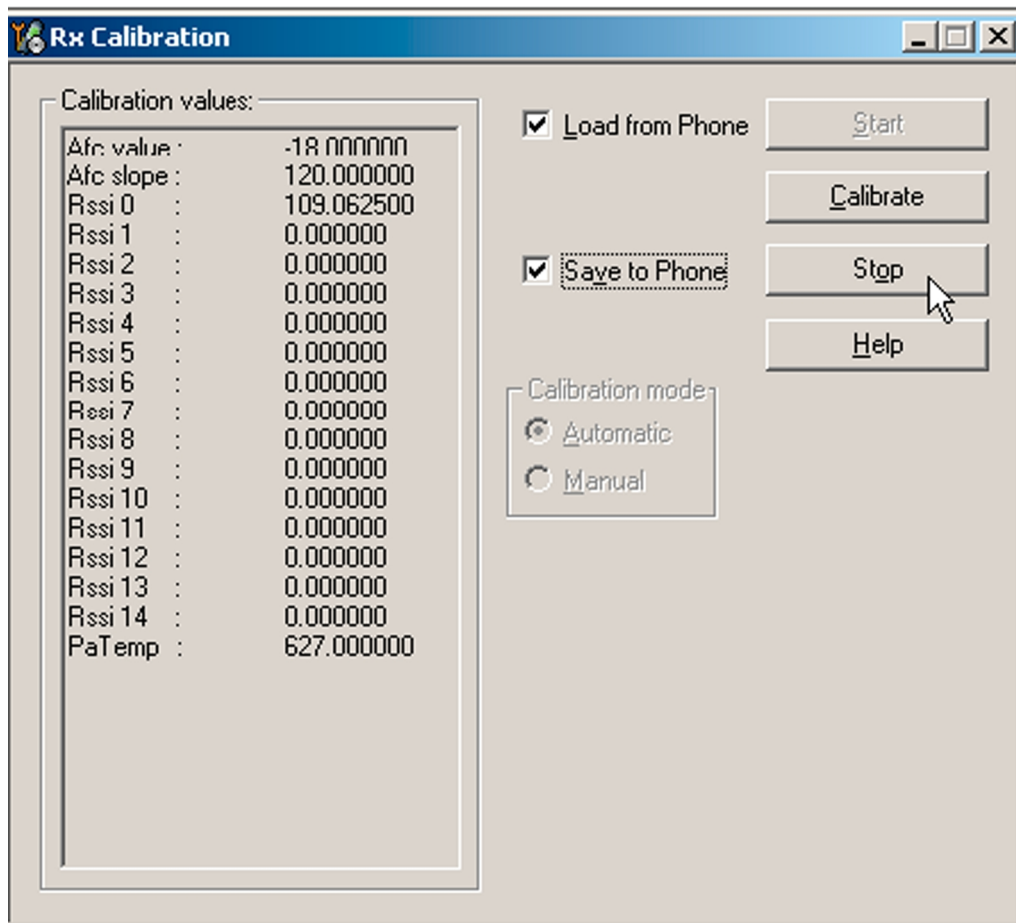

Next actions

Repeat steps 3 to 8 for GSM850, GSM1800 and GSM1900

Rx band filter response compensation (GSM)

Prerequisites

Rx calibration must be done before the Rx Band Filter Response Compensation

Context

In each GSM Rx band, there's a band rejecting filter in front of RF ASIC front end. The amplitude ripple caused by these filters causes ripple to the RSSI measurement and therefore calibration is needed.

The calibration has to be repeated for each GSM band.

Steps


1. Connect module jig's GSM connector to signal generator.
2. From the dropdown menus, set "Operating mode" to Local, "System mode" to GSM, and Band to GSM900.

10. Check that the tuning values are within the limits specified in this table:

	Min	Typ	Max	Unit
GSM850				
Ch. 118 / 867.26771 MHz	-10	-1	5	dB
Ch. 128 / 869.26771 MHz	-3	0	5	dB
Ch. 140 / 871.66771 MHz	-3	0	5	dB
Ch. 172 / 878.06771 MHz	-3	0	5	dB
Ch. 190 / 881.66771 MHz	-3	0	5	dB
Ch. 217 / 887.06771 MHz	-3	0	5	dB
Ch. 241 / 891.86771 MHz	-3	0	5	dB
Ch. 251 / 893.86771 MHz	-3	0	5	dB
Ch. 261 / 895.86771 MHz	-10	-1	5	dB
GSM900				
Ch. 965 / 923.26771 MHz	-10	-1	5	dB
Ch. 975 / 925.26771 MHz	-3	0	5	dB
Ch. 987 / 927.66771 MHz	-3	0	5	dB
Ch. 1009 / 932.06771 MHz	-3	0	5	dB
Ch. 37 / 942.46771 MHz	-3	0	5	dB
Ch. 90 / 953.06771 MHz	-3	0	5	dB
Ch. 114 / 957.86771 MHz	-3	0	5	dB
Ch. 124 / 959.86771 MHz	-3	0	5	dB
Ch. 136 / 962.26771 MHz	-10	-1	5	dB
GSM1800				

	Min	Typ	Max	Unit
Ch. 497 / 1802.26771 MHz	-10	-1	5	dB
Ch. 512 / 1805.26771 MHz	-3	0	5	dB
Ch. 535 / 1809.86771 MHz	-3	0	5	dB
Ch. 606 / 1824.06771 MHz	-3	0	5	dB
Ch. 700 / 1842.86771 MHz	-3	0	5	dB
Ch. 791 / 1861.06771 MHz	-3	0	5	dB
Ch. 870 / 1876.86771 MHz	-3	0	5	dB
Ch. 885 / 1879.86771 MHz	-3	0	5	dB
Ch. 908 / 1884.46771 MHz	-10	-1	5	dB
GSM1900				
Ch. 496 / 1927.06771 MHz	-10	-1	5	dB
Ch. 512 / 1930.26771 MHz	-3	0	5	dB
Ch. 537 / 1935.26771 MHz	-3	0	5	dB
Ch. 586 / 1945.06771 MHz	-3	0	5	dB
Ch. 661 / 1960.06771 MHz	-3	0	5	dB
Ch. 736 / 1975.06771 MHz	-3	0	5	dB
Ch. 794 / 1986.66771 MHz	-3	0	5	dB
Ch. 810 / 1989.86771 MHz	-3	0	5	dB
Ch. 835 / 1994.86771 MHz	-10	-1	5	dB

11. Check the "Save to Phone" check box and click Stop if the values are within the limits.

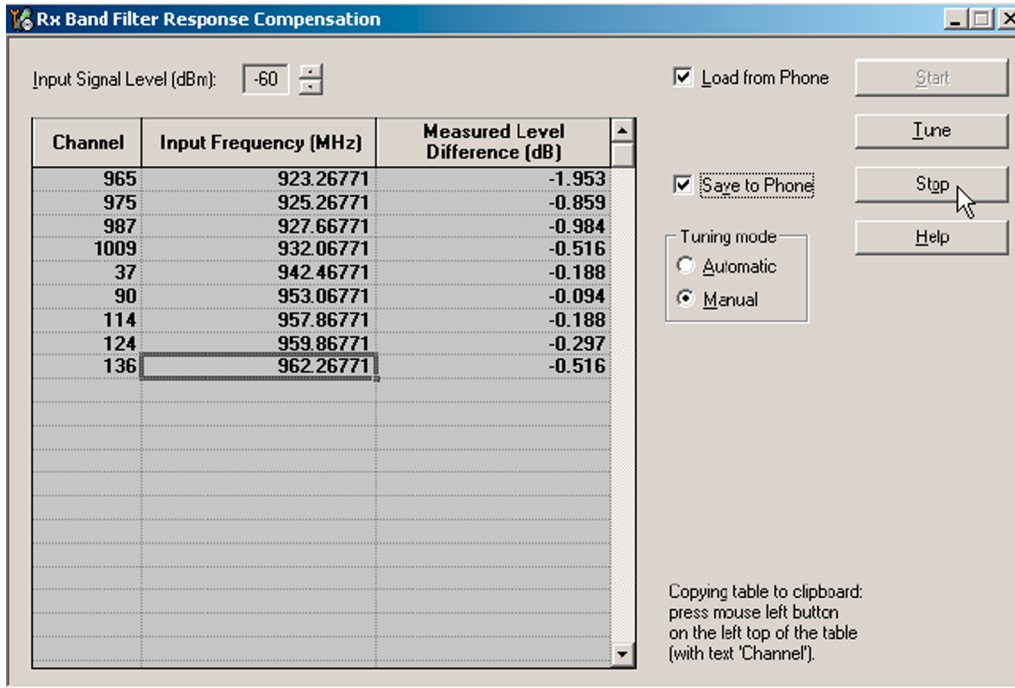

Next actions

Repeat the steps 4 to 10 for GSM850, GSM1800 and GSM1900.

GSM transmitter tunings

Tx IQ tuning (GSM)


Context

The Tx path branches to I and Q signals at RF I/Q modulator. Modulator and analog hardware located after it cause unequal amplitude and phase disturbance to I and Q signal paths. Tx IQ tuning tuning balances the I and Q branches.

Tx IQ tuning must be performed on all GSM bands. .

Steps

1. From the dropdown menus, set "Operating mode" to Local, "System mode" to GSM, and Band to GSM900.
2. From the Tuning menu, choose GSM -> Tx IQ Tuning.

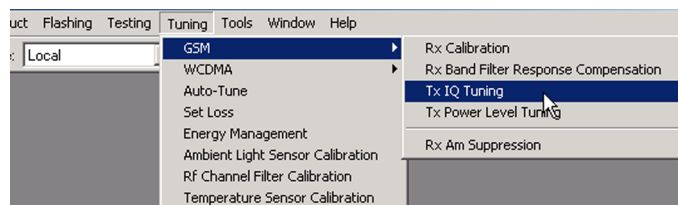


3. Set Mode to Automatic and Edge to Off.


4. Click Start.

Wait until automatic tuning has finished and moved the sliders.

Values are written to the phone memory automatically.

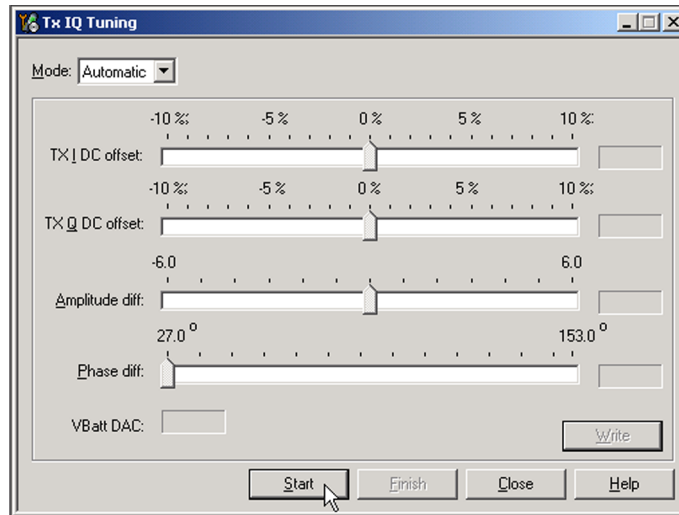

5. When the values have been written to the phone memory, click the Finish button to end the tuning.

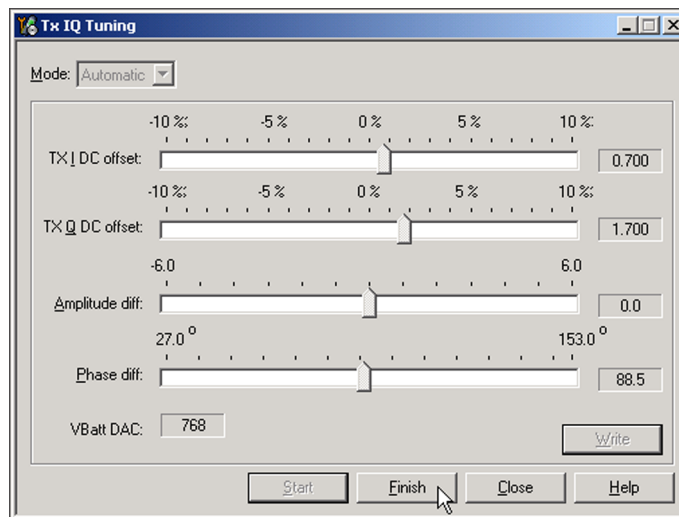

6. Change band to GSM850 and repeat steps 4 to 5.
7. Change band to GSM1800 and repeat steps 4 to 5.
8. Change band to GSM1900 and repeat steps 4 to 5.
9. To close the tuning window, click Close.

Next actions

Tuning sliders should be close to the center of the scale after the tuning and within the limits specified in the table below. If they are not within the limits, check Tx IQ quality manually.

	Min	Typ	Max	Unit
GSM850				
I DC offset / Q DC offset	-6	-4	6	%
Ampl	-1	0	1	dB
Phase	85	90	95	°
GSM900				

	Min	Typ	Max	Unit
I DC offset / Q DC offset	-6	-4	6	%
Ampl	-1	0	1	dB
Phase	85	90	95	°
GSM1800/GSM1900				
I/Q DC	-6	0.5	6	%
Ampl	-1	0	1	dB
Phase	95	100	110	°

Tx power level tuning (GSM)

Context


Because of variations at IC process and discrete component values, actual transmitter RF gain of each phone is different. Tx power level tuning is used to find out mapping factors called 'power coefficients'. These adjust the GSM transmitter output power to fulfill the specifications.

For EDGE transmission the bias settings of the FEM are adjusted in order to improve linearity. This affects the PA gain and hence the power levels have to be aligned separately for EDGE transmission.

Tx power level tuning has to be performed on all GSM bands.

Steps

1. Connect the phone to a spectrum analyzer.
2. From the dropdown menus, set "Operating mode" to Local, "System mode" to GSM, and Band to GSM900.
3. From the Tuning menu, choose GSM -> Tx Power Level Tuning.

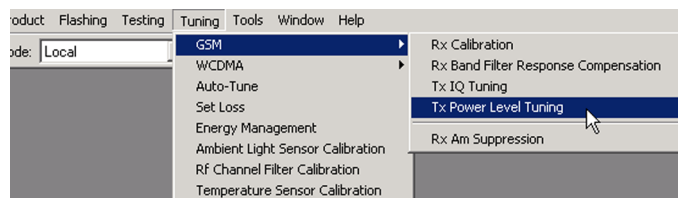


4. Set Mode to Automatic and Edge to Off.
5. Set the spectrum analyzer for power level tuning:

Frequency	channel frequency (836.6MHz GSM850, 897.4MHz GSM900, 1747.8MHz GSM1800, 1880MHz GSM1900)
Span	0 Hz
Sweep time	2ms
Trigger	Video triggering (-10dBm)
Resolution BW	3MHz
Video BW	3MHz


Reference level offset	sum cable attenuation with module jig attenuation
Reference level	33dBm

A power meter with a peak power detector can be also used. Remember to take the attenuations in the account!


- Click Start.

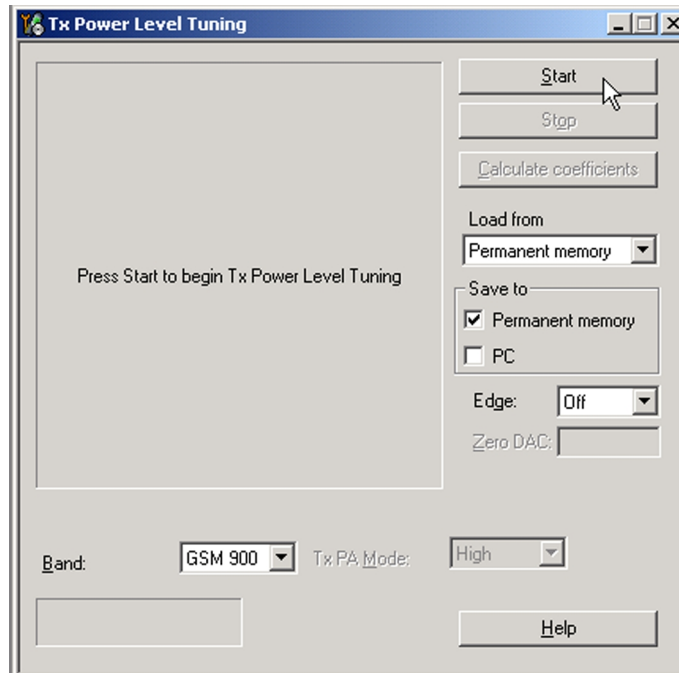

- Adjust power levels 5, 15 and 19 to correspond the "Target dBm" column by pressing + or – keys.

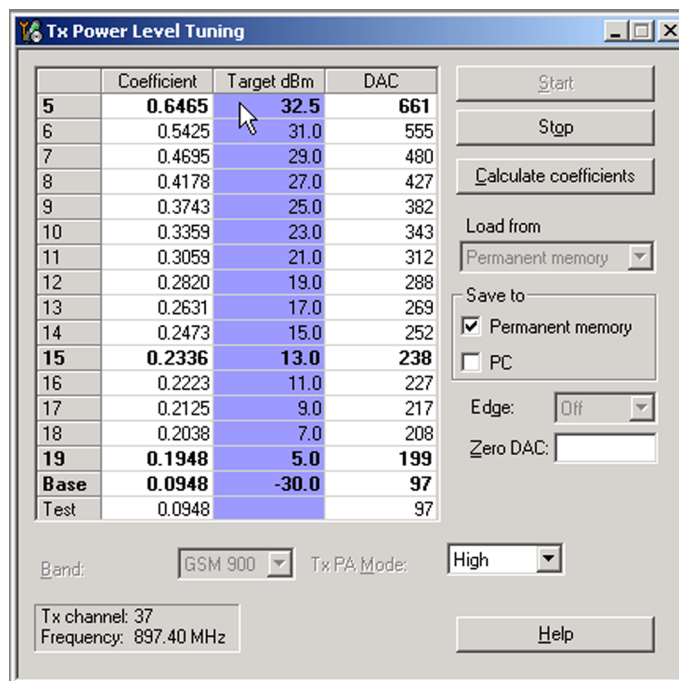

8. Click Calculate Coefficients.

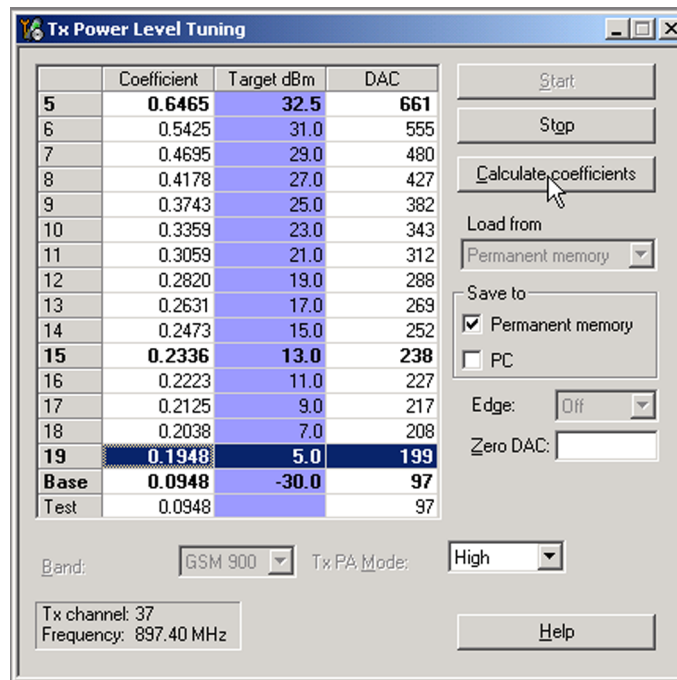


9. Check that the coefficient values are within the limits specified in the following table.


	Min	Typ	Max
GSM850 EDGE off			
PL5 coefficient	0.45	0.626	0.73
PL15 coefficient		0.234	
PL19 coefficient	0.12	0.195	0.3
GSM850 EDGE on			
PL8 coefficient	0.35	0.419	0.6
PL15 coefficient		0.247	
PL19 coefficient	0.12	0.204	0.3
GSM900 EDGE off			
PL5 coefficient	0.45	0.626	0.73
PL15 coefficient		0.234	
PL19 coefficient	0.12	0.195	0.3
GSM900 EDGE on			
PL8 coefficient	0.35	0.419	0.6
PL15 coefficient		0.247	
PL19 coefficient	0.12	0.204	0.3
GSM1800 EDGE off			
PL0 coefficient	0.45	0.51	0.7

	Min	Typ	Max
PL11 coefficient		0.219	
PL15 coefficient	0.12	0.185	0.3
GSM1800 EDGE on			
PL2 coefficient	0.35	0.394	0.6
PL11 coefficient		0.23	
PL15 coefficient	0.12	0.194	0.3
GSM1900 EDGE off			
PL0 coefficient	0.45	0.482	0.7
PL11 coefficient		0.218	
PL15 coefficient	0.12	0.184	0.3
GSM1900 EDGE on			
PL2 coefficient	0.35	0.377	0.6
PL11 coefficient		0.23	
PL15 coefficient	0.12	0.193	0.3

If the values are within the limits, check that the "Save to Phone Permanent Memory" check box is checked and click Stop.

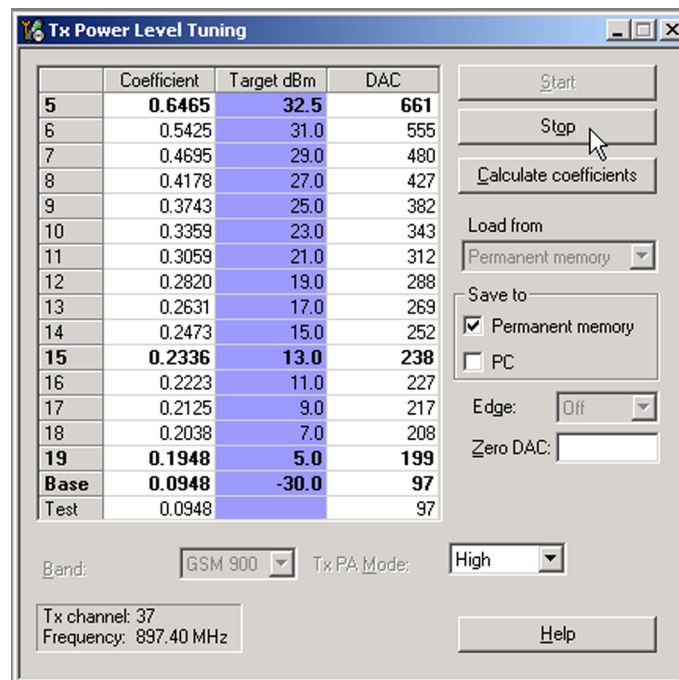

10. Set **Edge** mode on and start tuning again. Change video averaging to 50.

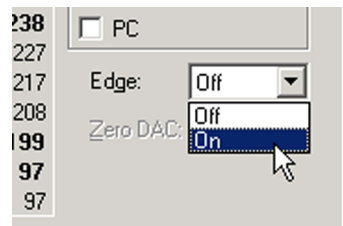

11. Tune EDGE power levels to the corresponding target power levels.
Only power levels **8, 15** and **19** are tuned in GSM900 and **2, 10** and **15** in GSM1800/1900. The rest are calculated by clicking the Calculate Coefficients button. Check the coefficients against the RF tuning limits table presented in Step 9.
12. When the tuning is completed, click Stop.

Next actions

Repeat steps 4 to 9 for GSM1800 and GSM1900. On those bands only power levels **0, 11** and **15** need to be tuned.

■ RM-188 WLAN troubleshooting

Introduction to WLAN troubleshooting

The main problem that can occur is malfunction in WLAN or WLAN ASICs or WLAN SMD components. Such problems are unpredictable and may have many causes, either HW or SW related.

Note: While WLAN power tuning is not possible without power meter especially capable for measuring WLAN wideband power, WLAN ICs (WLAN IC and WLAN front-end module) shall not be changed.


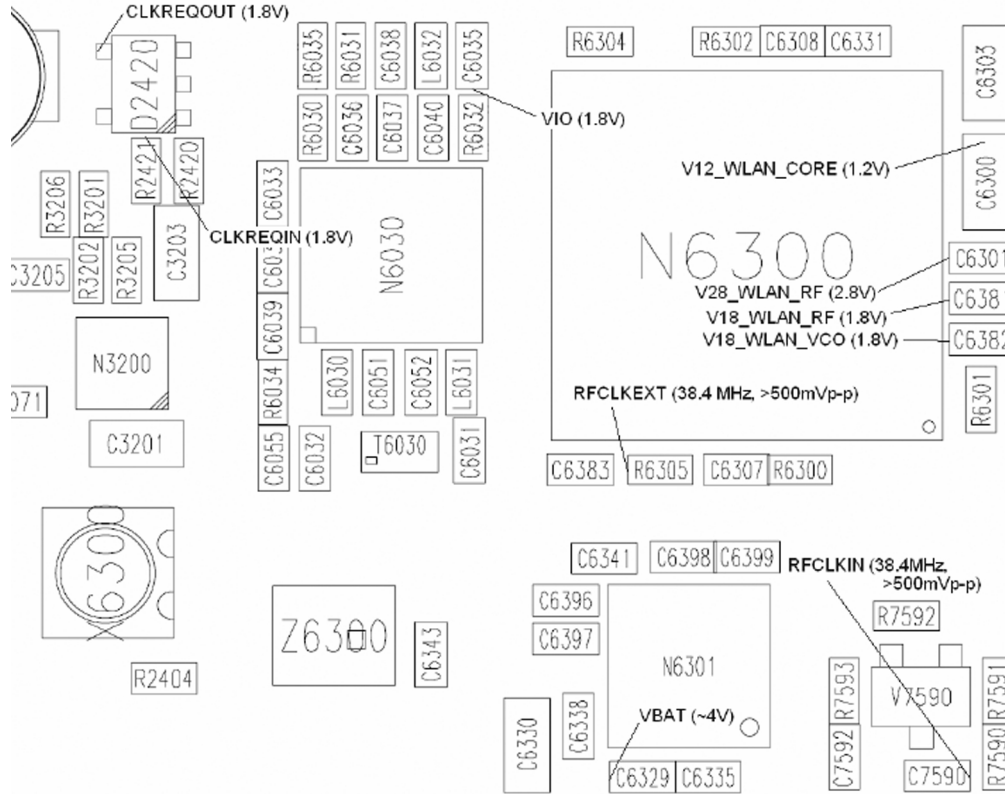


Figure 53 WLAN layout part 1

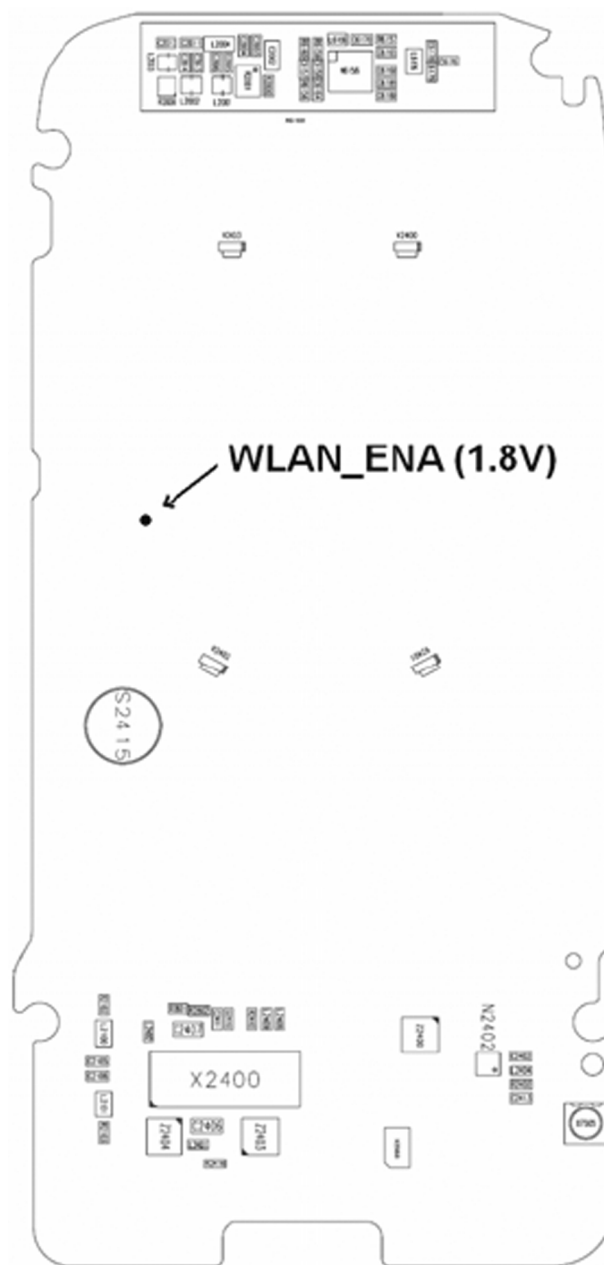


WLAN functionality test using SB-7 and Phoenix

Steps

1. Place the phone on the SB-7 WLAN test box (see figure below). The coordinates are **P1** (upper left corner of SS-62), **G1**, **O15** and **G15**.




2. Start *Phoenix* service software and turn the phone to the local mode.
3. From the **Testing** menu, choose **WLAN Configuration**. The following window should come up:

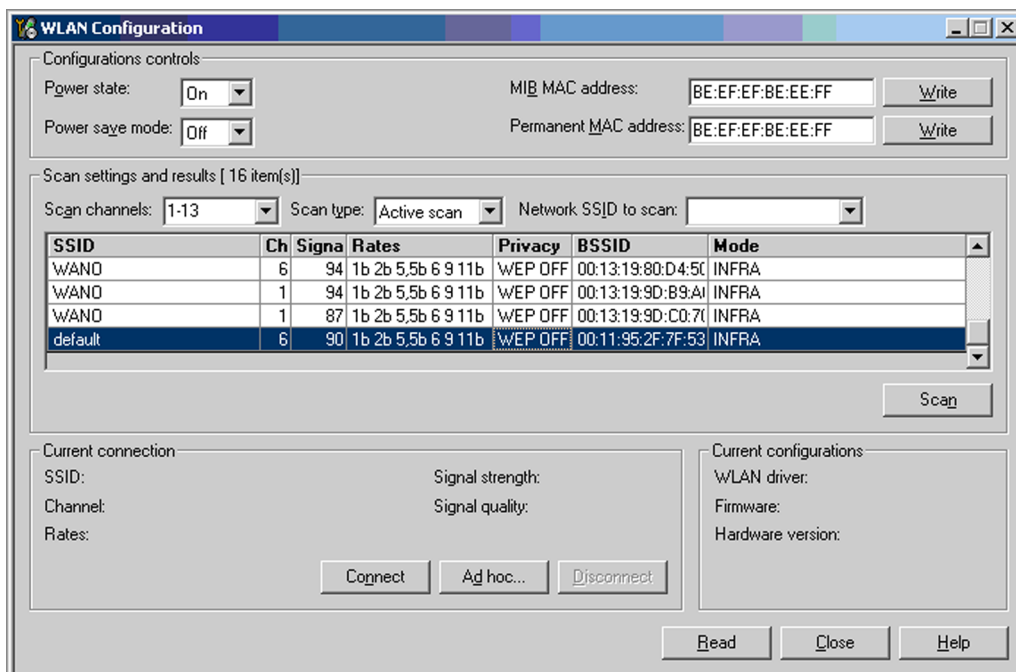

4. Turn the **Power state: On** and press **Scan**.
5. After few seconds, a list of found WLAN networks should be updated. If WLAN is working, at least a station with an SSID name **default** should be found.

WLAN failure troubleshooting

Troubleshooting flow

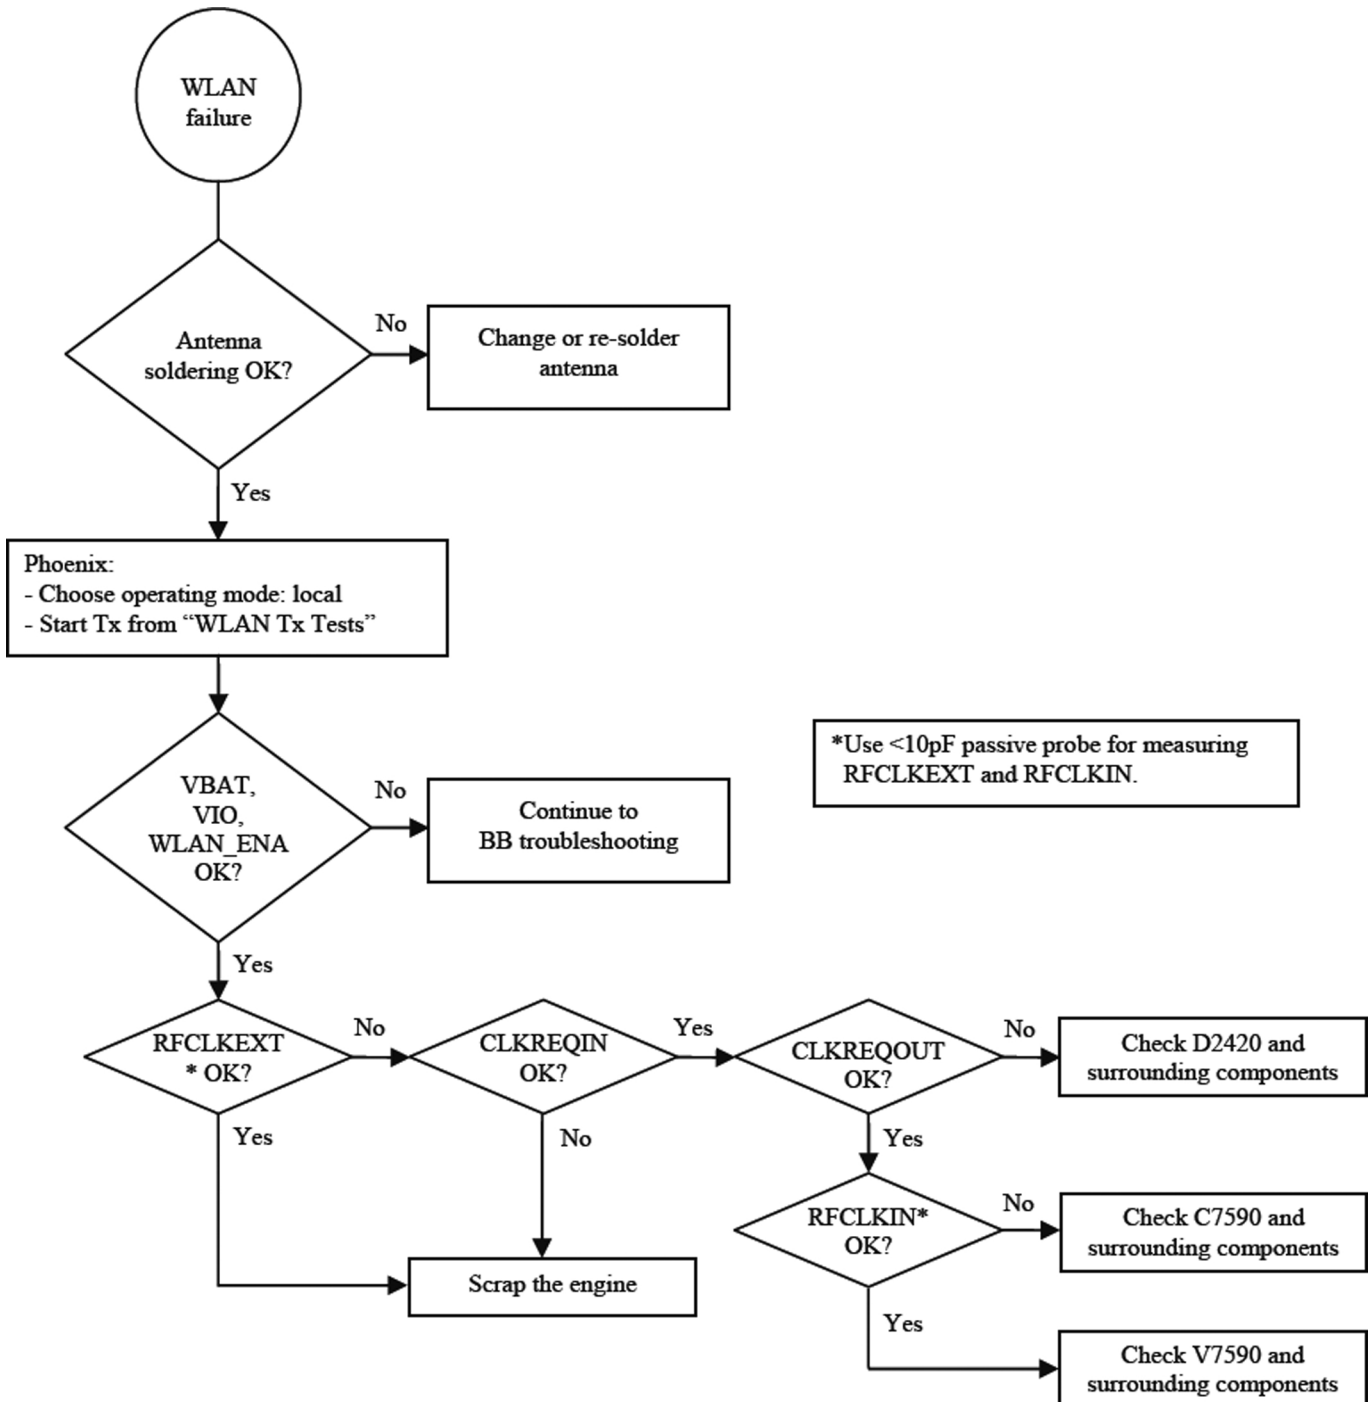

Nokia Customer Care

8 — System Module

(This page left intentionally blank.)

Table of Contents

Baseband description	8-5
System module block diagram	8-5
Baseband functional description	8-6
Absolute maximum ratings	8-7
Phone modes of operation	8-7
Power distribution	8-8
Bluetooth	8-8
USB	8-9
RM-188 WLAN	8-9
MR sensor	8-10
FM radio	8-11
Camera	8-11
Backup battery	8-11
CBUS interface	8-11
FBUS	8-11
ACI interface	8-11
VOUT interface	8-11
Charger interface	8-11
MicroSD interface	8-11
SIM/USIM	8-11
Battery interface	8-12
User interface	8-13
Main display	8-13
Cover display	8-14
Keyboard	8-14
Backlights	8-14
ASICs	8-15
RAP ASIC	8-15
EM ASIC (N2200)	8-15
EM ASIC (N2300)	8-15
Device memories	8-15
RAPGSM memories NOR flash and SDRAM	8-15
Audio concept	8-15
Audio HW architecture	8-15
Internal microphone	8-16
External microphone	8-16
Internal earpiece	8-17
Internal speakers	8-17
External earpiece	8-17
Vibra circuitry	8-18
Baseband technical specifications	8-18
External interfaces	8-18
Pop-port™ connector	8-19
VOUT electrical characteristics	8-20
CBUS connections and electrical characteristics	8-20
USB/FBUS connections and electrical characteristics	8-21
Audio signal electrical characteristics	8-21
Charger connector and charging interface connections & electrical characteristics	8-21
Battery connector and interface connections & electrical characteristics	8-22
Internal interfaces	8-22

Upper block connectors	8-23
Back-up battery interface connections and electrical characteristics	8-24
RF description	8-24
Introduction to receiver functionality.....	8-24
GSM receiver.....	8-24
Introduction to transmitter functionality.....	8-25
GSM transmitter.....	8-25
GSM FEM (front end module).....	8-26
Frequency synthesizers	8-26
Regulators.....	8-26
Frequency mappings.....	8-27
GSM850 frequencies.....	8-27
EGSM900 frequencies.....	8-27
GSM1800 frequencies.....	8-28
GSM1900 frequencies.....	8-30

List of Tables

Table 15 Battery interface connections	8-12
Table 16 Audio connector pin assignments	8-19
Table 17 Charging interface connections	8-21
Table 18 Charging IF electrical characteristics	8-22
Table 19 Battery interface connections	8-22
Table 20 Battery IF electrical characteristics	8-22
Table 21 Back-up battery connections.....	8-24
Table 22 Back-up battery electrical characteristics	8-24

List of Figures

Figure 55 System level block diagram	8-6
Figure 56 RM-188/198 functional block diagram	8-7
Figure 57 RM-188 WLAN block description	8-10
Figure 58 MR sensor connection	8-10
Figure 59 Battery pin order.....	8-12
Figure 60 Main display LCD module.....	8-13
Figure 61 Cover display LCD module.....	8-14
Figure 62 Audio block diagram.....	8-16
Figure 63 Internal microphone circuitry.....	8-16
Figure 64 Internal earpiece circuitry.....	8-17
Figure 65 Internal speaker circuitry	8-17
Figure 66 External earpiece circuitry (Pop-Port connected on the right).....	8-18
Figure 67 Vibra circuitry	8-18
Figure 68 External audio connector	8-19
Figure 69 Battery connector.....	8-22
Figure 70 GSM transmitter.....	8-25

■ Baseband description

System module block diagram

RM-188/RM-198 has two blocks, upper block and lower block. The upper block consists of upper PWB module. The lower block consists of Engine (BB/RF) PWB module.

The upper block is connected to the lower block (BB/RF module) via a 40-pin connector and a flex cable.

Most of the BB parts (also IHF, RF, WLAN and BT) are on the topside of the Engine Module. FM parts, external audio small components, MR sensor, upper block connector and keyboard are on the backside of the Engine Module. Accessories and charger can be connected via the Pop-Port™ connector and the charger connector at the bottom of the phone.

Upper PWB Module consists of two Displays, Earpiece, Camera, HWA, two DC/DC converters and one regulator and connector to Engine Module.

Note: In this description, user interface HW (UI HW) covers display, camera, keyboard and keyboard backlight.

The RM-188 includes WLAN, but it does not include the HAC (Hearing Aid Coil).

The RM-198 does not include WLAN, and it can be assembled with or without the HAC.

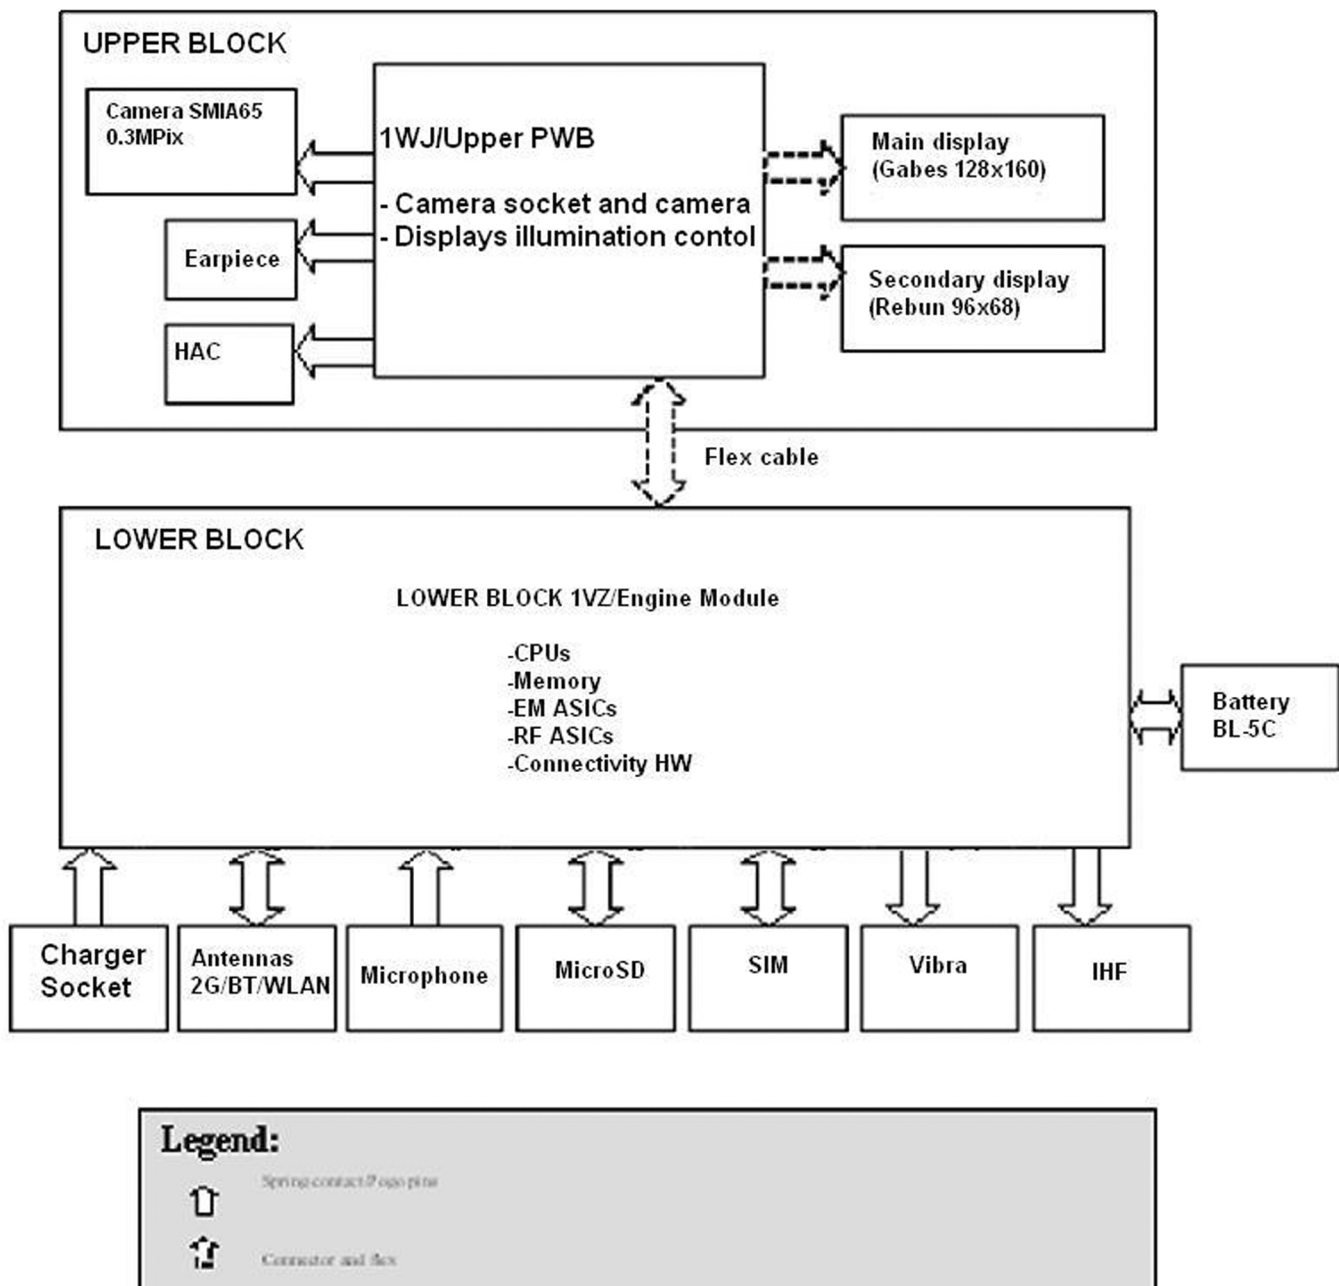


Figure 55 System level block diagram

Baseband functional description

Digital baseband consists of ISA based modem and application sections. Modem functionality is in RAPGSM ASIC.

The modem section consists of RAPGSM ASIC and NOR Flash and DRAM memory as the core. NOR Flash and DRAM memories are in one package (Combo) RAPGSM supports cellular protocols of GSM (minimum EDGE class 10, GPRS phase2). Modem DRAM memory has 128Mbits of memory and NOR flash has 256Mbits of memory. RAPGSM operates with the system clock of 38.4 MHz, which comes from the VCTCX0.

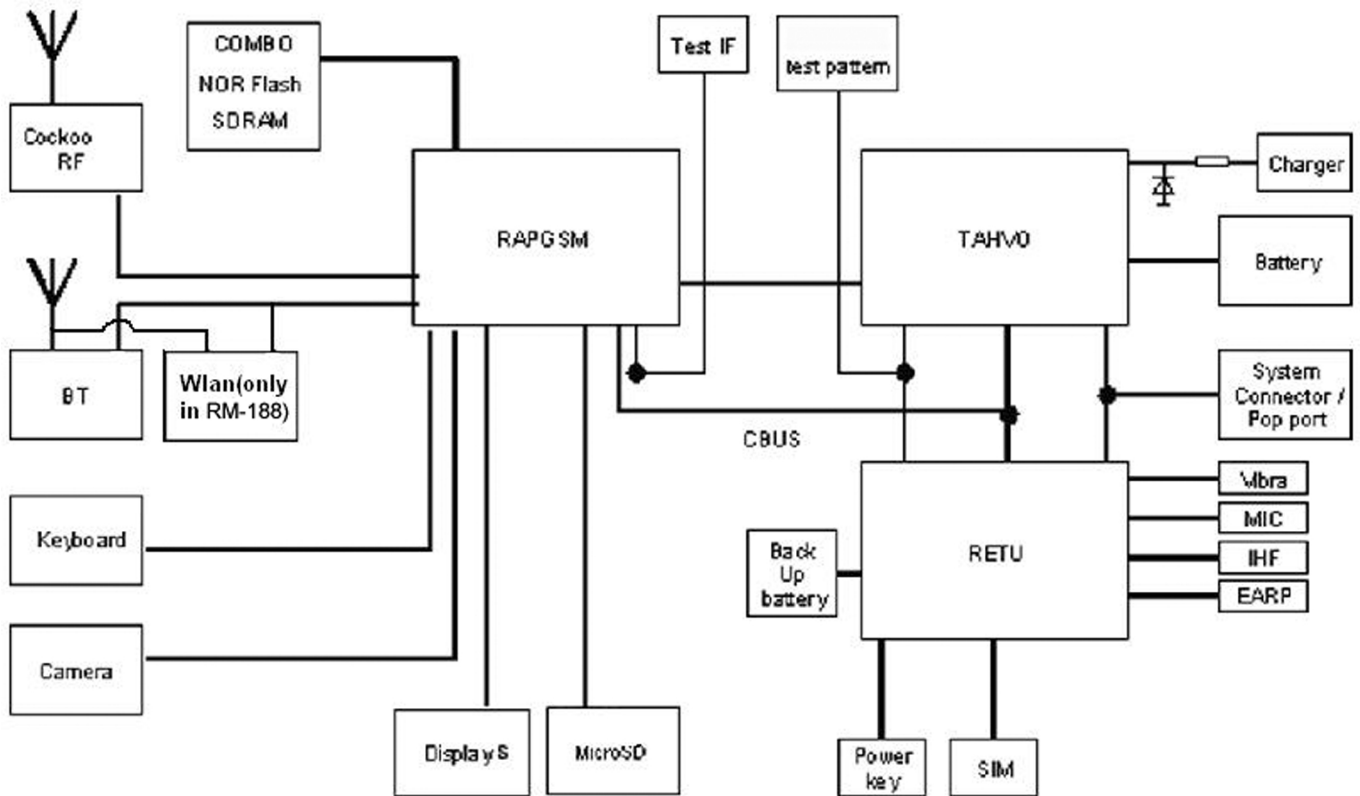


Figure 56 RM-188/198 functional block diagram

Absolute maximum ratings

Signal	Min	Nom	Max	Unit	Notes
Battery voltage (idle)	-0.3		+4.5	V	Battery voltage maximum value is specified during charging is active
Battery voltage (Call)			+4.3	V	Battery voltage maximum value is specified during charging is active
Charger input voltage	-0.3		+16V	V	
Back-Up supply voltage	0	2.5	2.7	V	Maximum capacity of the backup power supply assumed to be 4 μAh.

Phone modes of operation

Mode	Description
NO_SUPPLY	(dead) mode means that the main battery is not present or its voltage is too low (below EM ASIC (N2200) master reset threshold) and that the back-up battery voltage is too low.
BACK_UP	The main battery is not present or its voltage is too low but back-up battery voltage is adequate and the 32kHz oscillator is running (RTC is on).

Mode	Description
PWR_OFF	In this mode (warm), the main battery is present and its voltage is over EM ASIC (N2200) master reset threshold. All regulators are disabled, PurX is on low state, the RTC is on and the oscillator is on. PWR_OFF (cold) mode is almost the same as PWR_OFF (warm), but the RTC and the oscillator are off.
RESET	RESET mode is a synonym for start-up sequence. RESET mode uses 32kHz clock to count the REST mode delay (typically 16ms).
SLEEP	SLEEP mode is entered only from PWR_ON mode with the aid of SW when the system's activity is low.

Voltage limits

Parameter	Description	Value
VMSTR	Master reset threshold (EM ASIC N2200)	2.2V (typ.)
VMSTR+	Threshold for charging, rising (EM ASIC N2300)	2.1V (typ.)
VMSTR-	Threshold for charging, falling (EM ASIC N2300)	1.9V (typ.)
VCOFF+	Hardware cutoff (rising)	2.9V (typ.)
VCOFF-	Hardware cutoff (falling)	2.6V (typ.)
SWCOFF	SW cutoff limit	~3.2V

Power key

The system boots up when power key is pressed (adequate battery voltage, VBAT, present).

Power down can be initiated by pressing the power key again (the system is powered down with the aid of SW).

Power distribution

Power supply components:

- RETU
- TAHVO
- BT LDO
- MicroSD LDO
- backlight SMPSs

All the above are powered by the main battery voltage.

Battery voltage is also used on the RF side for power amplifiers (GSM PA) and for RF ASIC Ahne.

Discrete power supplies are used to generate 1.8V for the camera module, 2.85V for MicroSD card and max. 18V for backlight LEDs.

The device supports both 1.8V/3V SIM cards.

Bluetooth

Bluetooth provides a fully digital link for communication between a master unit and one or more slave units. The system provides a radio link that offers a high degree of flexibility to support various applications and product scenarios. Data and control interface for a low power RF module is provided. Data rate is regulated between the master and the slave.

The device Bluetooth is based on BC4 ROM1.0RDL BT chip.

USB

USB (Universal Serial Bus) provides a wired connectivity between host PC and peripheral devices.

USB is a differential serial bus for USB devices. USB controller (RAP) supports USB specification revision 2.0 with full speed USB (12 Mbps). The device is connected to the USB host through the system connector. The USB bus is hot plugged capable, which means that USB devices may be plugged in/out at any time.

RM-188 WLAN

WLAN is divided to STLC4550 WLAN transceiver module and radio front-end module RF5924.

STMicroelectronics STLC4550 is a three-die multichip module with passive components, partitioned to radio, baseband and energy management die.

STLC4550 implements 802.11b/g WLAN radio, which conforms to the IEEE 802.11b/g protocols operating in 2.4 GHz band and supporting OFDM data rates of 54, 48, 36, 24, 18, 12, 9, and 6 Mbps, CCK data rates of 11 and 5.5 Mbps, and legacy data rates of 2 and 1 Mbps. IEEE802.11e/i protocol extensions are included to implement Quality of Service (QoS) and security functions.

STLC4550 has a fully integrated radio chip including a direct-conversion transceiver, RF synthesizer and VCO, and high-speed data converters. Digital interface is used for transferring the sampled data between radio and baseband chip.

The baseband chip implements OFDM/CCK digital baseband processor and ARM9-based MAC with internal SRAM memories. The baseband includes required logic and interfaces to enable time-shared simultaneous use of BT and WLAN.

The energy management unit integrates the required power management functions to operate the system from VBAT (3.0 – 5.5 V). The EM unit generates 1.2 V digital core voltage, two 1.8 V supplies for RF and 2.8 V LDO for PA bias supply. The EM unit integrates the power-on reset circuitry and level-shifters for RF front-end GaAs switches.

The host interface is provided by a flexible serial interface (SPI).

The system uses 38.4 MHz reference clock. Low-power sleep mode operation is enabled by low-speed 32 kHz clock (32768 Hz), and energy management unit low-current stand-by mode.

The RFMD RF5924 Front-End Module (FEM) is a single integrated module. The FEM has integrated b/g power amplifier, power detector, RX balun and TX filtering.

FM radio

The FM radio circuitry is implemented using a highly integrated radio TEA5760 N1C.

The antenna of the FM Radio is created with the headset. The wires of the headset are used as poles of the antenna.

Camera

The device uses SMIA65 camera module. SMIA65 is 0.3Mpixel with sensor resolution of 656 x 496.

The camera is powered by using VIO(1.8V) and VAUX(2.78V) voltages from the engine board.

Backup battery

When the main battery is not attached EM ASIC (N2200) goes in backup mode using back-up battery that supplies voltage to RTC in EM ASIC (N2200).

CBUS interface

CBUS is a "main" system control bus in BB5.0. RAP controls the functionality of EM ASIC (N2200) and EM ASIC (N2300) ASICs with CBUS.

CBUS is a four-wire half-duplex master-slave interface. In BB5.0 CBUS clock frequency is 2.4 MHz.

FBUS

USB and FBUS have multiplexed interface between EM ASIC (2300) and RAP.

ACI interface

The ACI (Accessory Control Interface) is a point-to-point, bi-directional, single line serial bus.

It has two main features: the insertion and removal detection of an accessory device and acting as a data bus between phone and accessory, intended for control purposes. A third function of ACI is to identify and authenticate the accessory.

VOUT interface

Accessory power is supplied by VOUT, a linear low drop-out regulator in EM ASIC (N2300) providing 2.5V at 90mA maximum when active (0.5mA in sleep).

Charger interface

Charging control and charge switch are situated in EM ASIC (N2300).

If the temperature rises too high and the thermal protection is activated, EM ASIC (N2300) goes to protection mode.


MicroSD interface

The MicroSD card interface is electrically and functionally compatible with the SD card interface.

SIM/USIM

The device has one SIM (Subscriber Identification Module) interface and the SIM card locates under the battery. SIM interface consists of internal interface between RAP and EM ASIC (N2200) and an external interface between Retu and SIM contacts.

EM ASIC (N2200) external SIM IF connections and electrical characteristics between ASICs are shown in the picture.

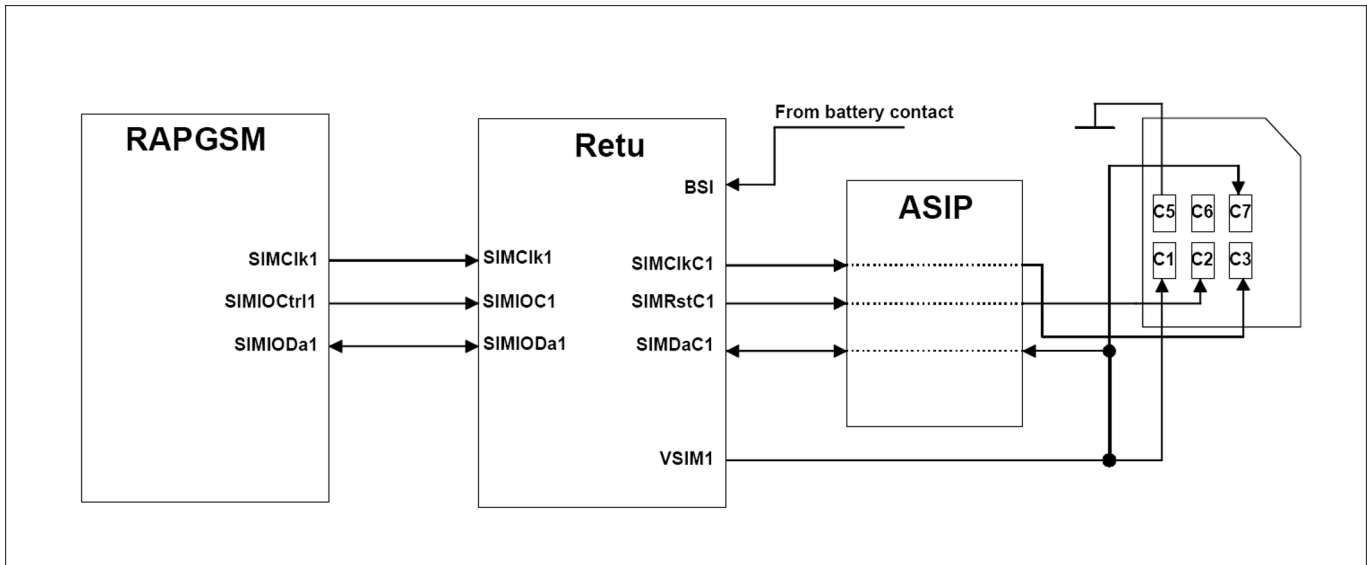

SIM interface voltage is first 1.8V when the SIM card is inserted and if the card does not response to the ATR (answer to reset) 3V interface voltage is used.

Battery interface

The battery interface supports a 3-pole battery interface. The interface consists of three connectors: VBAT, BSI and GND.

The BSI line is used to recognize the battery capacity by a battery internal pull down resistor.

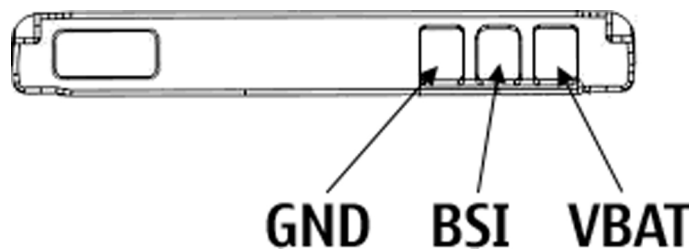


Figure 59 Battery pin order

Table 15 Battery interface connections

Pin	Signal	I/O	Engine connection		Notes
1	VBAT	->	EM ASIC N2200	VBAT	Battery voltage
2	BSI	->	EM ASIC N2200	BSI	Battery size indication (fixed resistor inside the battery pack)
3	GND		GND		Ground

Battery temperature is estimated by measuring separate battery temperature NTC via the BTEMP line, which is located on the transceiver PWB, at a place where the phone temperature is most stable.

For service purposes, the device SW can be forced into local mode by using pull down resistors connected to the BSI line.

User interface

Main display

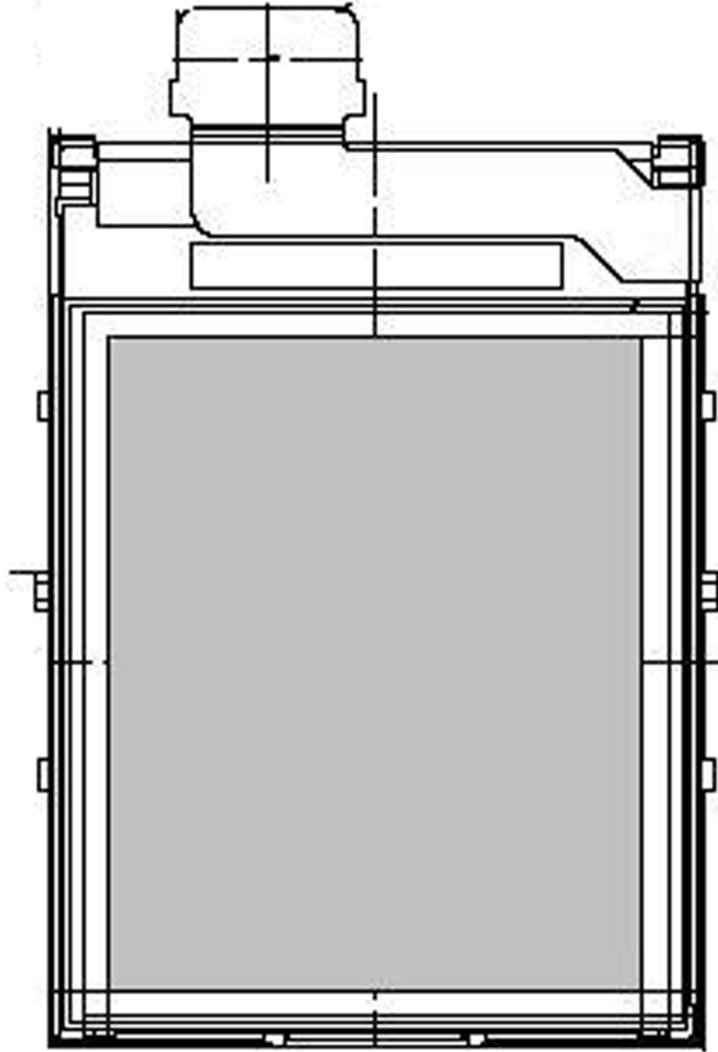


Figure 60 Main display LCD module

Display features:

- Main display: 128x160 262k CSTN passive LCD.
- Transmissive type, screen is 'black' when display illumination is OFF.
- Active area is 28.032 mm x 35.040 mm.
- Partial display function Power saving by pausing display process on part of the screen.
- Build-in RAM capacity 128x160x18bit

Cover display

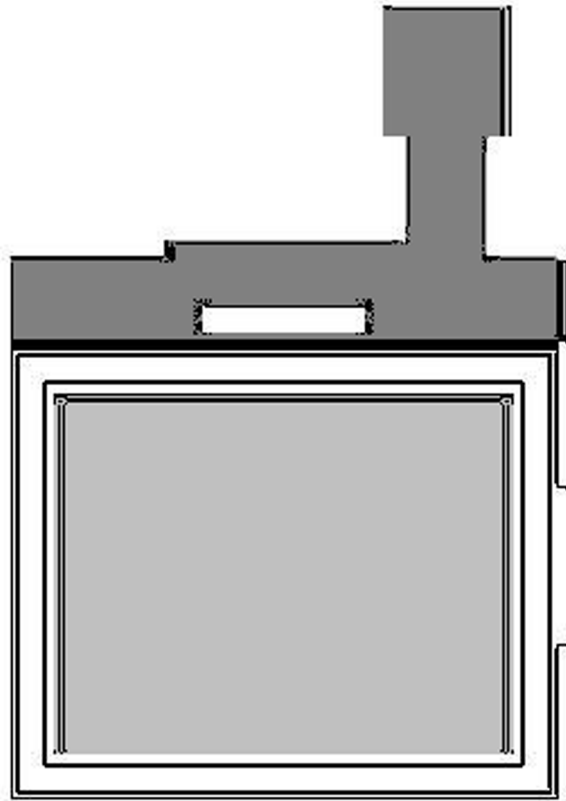


Figure 61 Cover display LCD module

Display features:

- Module size (width x height x thickness): 26.0 mm x 26.0 mm x 2.6 mm.
- 96x68 FSTN, 2 colors black & white with blue LEDs.
- Transflective, normally black, inverted.
- Partial display function; power saving by pausing display process on part of the screen.
- 68 x 96 bits RAM.

The display module does not require any tunings in service.

Keyboard

The device keyboard consists of 24 separate keys.

The keyboard is implemented as a matrix keyboard, which is connected directly to the dedicated keyboard GENIO lines. The power-on key is the same key as the "END" key (when pressed longer -> power OFF or ON).

The keymatrix has six rows and four columns.

Backlights

The main display has two white LEDs and the secondary display has two blue LEDs for display backlight inside of the display module. Voltage source for backlights is implemented using a white LED driver on the lower block, which is also used for keyboard backlight.

There is NPN digital transistor which controls which display is lighted at the time. The transistor is controlled by GENIO03. There is no possibility to turn both display backlights on in the same time.

The driver increases battery voltage up to 18V.

There are four LEDs in two series for keyboard backlight.

ASICs

RAP ASIC

RAP is a GSM EDGE chip (modem ASIC) with lots of peripheral features:

- processor subsystem (PSS) that includes ARM926 MCU as a main processor
- DSP and related functions
- ASIC clock and reset control
- MCU peripherals e.g. CBUS IF, USB IF and SIM IF
- DSP peripherals e.g. speech codec
- RF codec

EM ASIC (N2200)

EM ASIC (N2200) includes the following functional blocks:

- Start up logic and reset control
- Charger detection
- Battery voltage monitoring
- 32.768 kHz clock with external crystal
- Real time clock with external backup battery
- SIM card interface
- Stereo audio codecs and amplifiers
- A/D converter
- Regulators
- Vibra interface
- Digital interface (CBUS)

EM ASIC (N2300)

EM ASIC (N2300) is intended for energy management control, supply voltage generation and charge control of mobile phone.

Device memories

RAPGSM memories NOR flash and SDRAM

Modem memory consists of 128Mbit SDRAM and 256 Mbit NOR flash memory.

■ Audio concept

Audio HW architecture

The functional core of the audio hardware is built around two ASICs: RAPGSM engine ASIC and the mixed-signal ASIC Retu.

There are three audio transducers:

- 7x11 mm dynamic earpiece
- one 11x15 mm dynamic speaker
- electret microphone module

Note: The RM-188 does not include the HAC (Hearing Aid Coil).

The RM-198 can be assembled with or without the HAC.

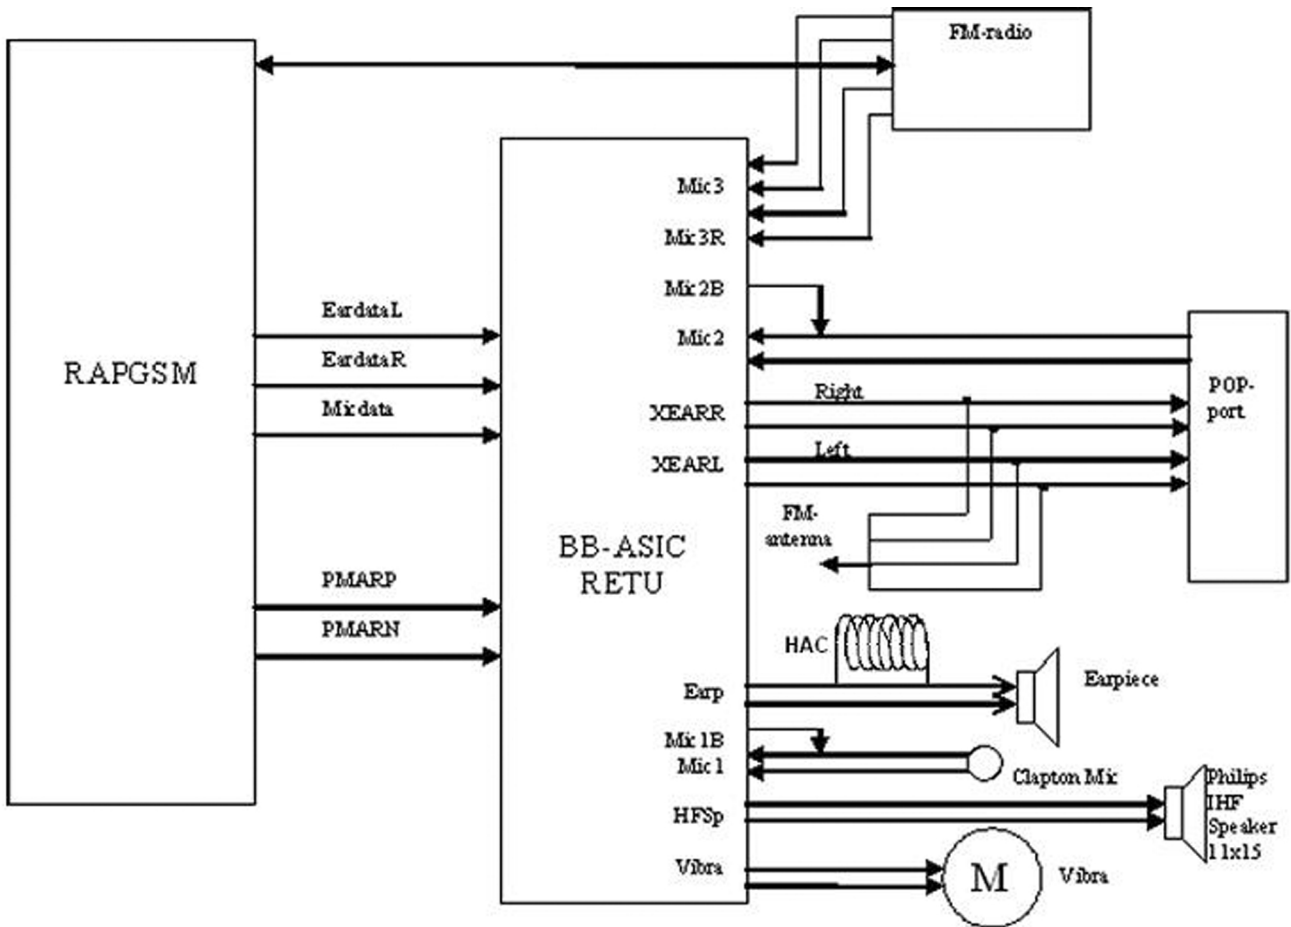


Figure 62 Audio block diagram

Internal microphone

Internal microphone is used for HandPortable (HP) and Internal HandsFree (IHF) call modes.

An analogue electret microphone is connected to N2200 Mic1P and Mic1N inputs via asymmetric electrical connection.

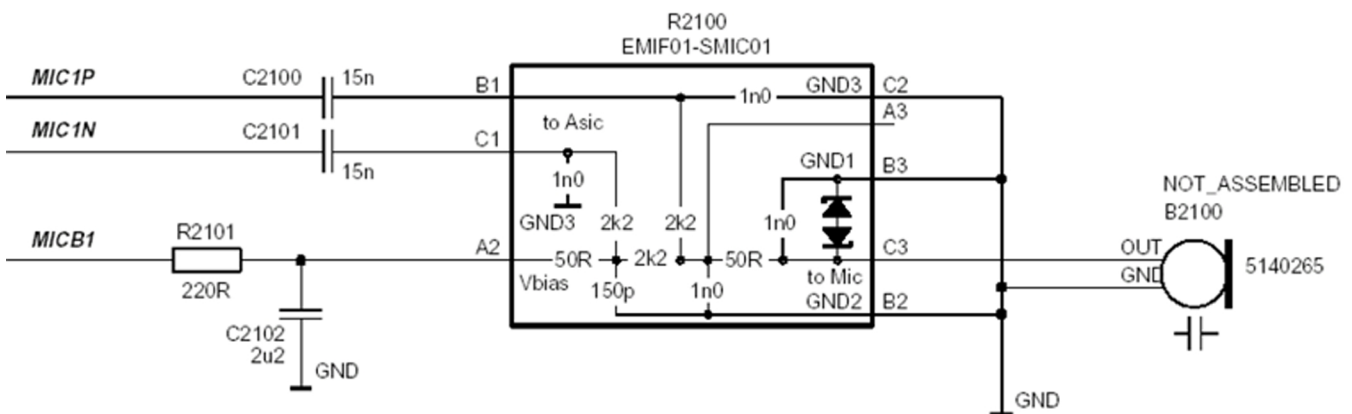


Figure 63 Internal microphone circuitry

External microphone

Galvanic accessories are connected to the system connector.

The accessory audio mode is automatically enabled/disabled during connection/disconnection of dedicated phone accessories.

Internal earpiece

Internal earpiece is used for the HandPortable (HP) call mode. A dynamic 8mm earpiece capsule is connected to EM ASIC's (N2200) differential output EarP and EarN.

Note: The RM-188 does not include the HAC (Hearing Aid Coil).
The RM-198 can be assembled with or without the HAC.

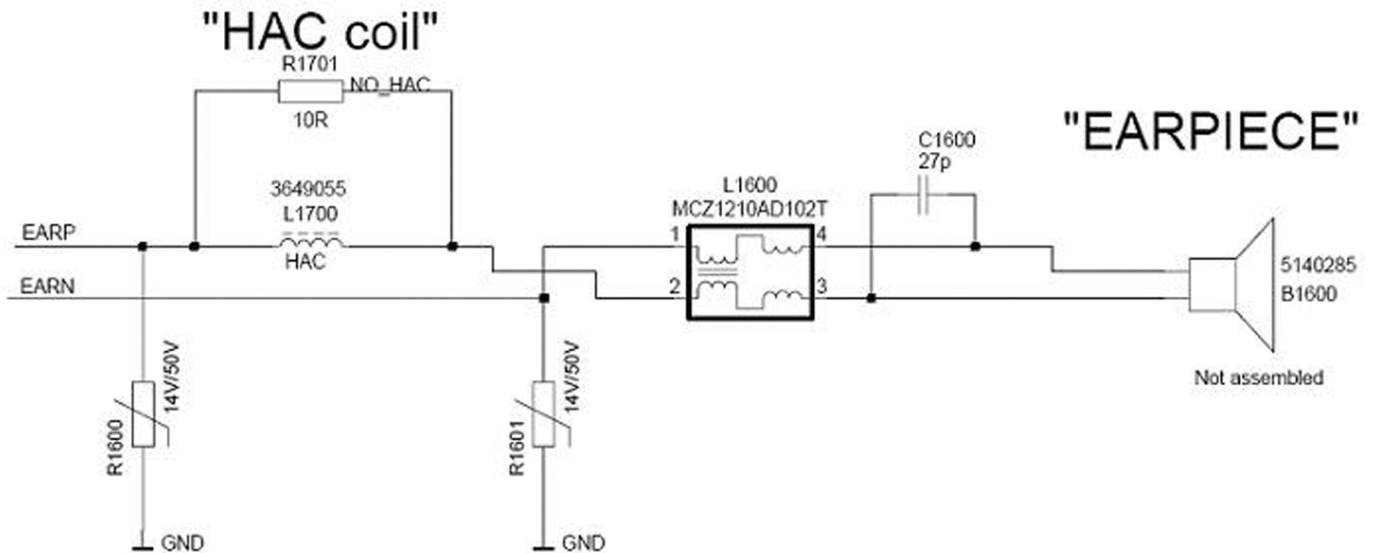


Figure 64 Internal earpiece circuitry

Internal speakers

Internal speakers are used for Internal HandsFree (IHF) call mode, ringing tones, FM-radio and music listening. The dynamic 11x15mm speaker is connected to Retu ASIC's outputs HFSp P/N.

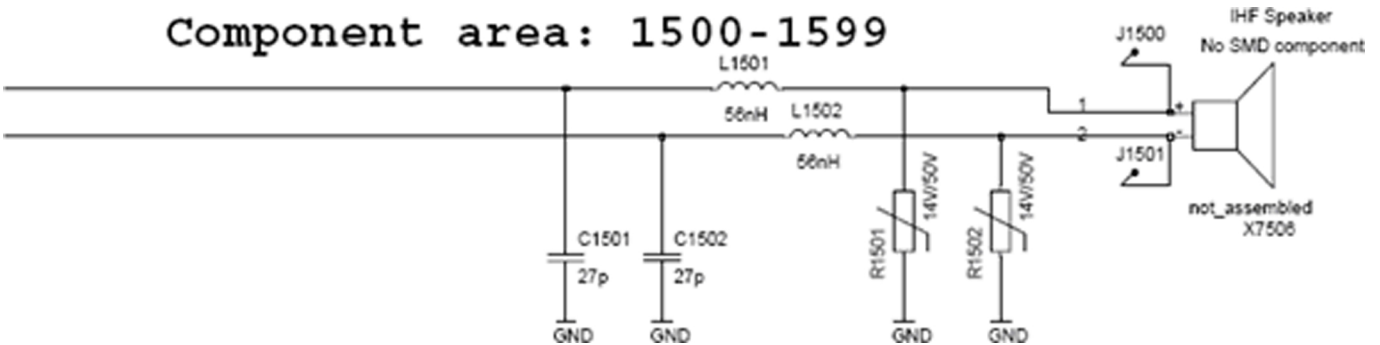


Figure 65 Internal speaker circuitry

External earpiece

All galvanic accessories are connected to the system connector (Pop-Port™).
The accessory audio mode is automatically enabled/disabled during connection/disconnection of dedicated phone accessories.
Xear lines have 10 Ω series resistors in each line.

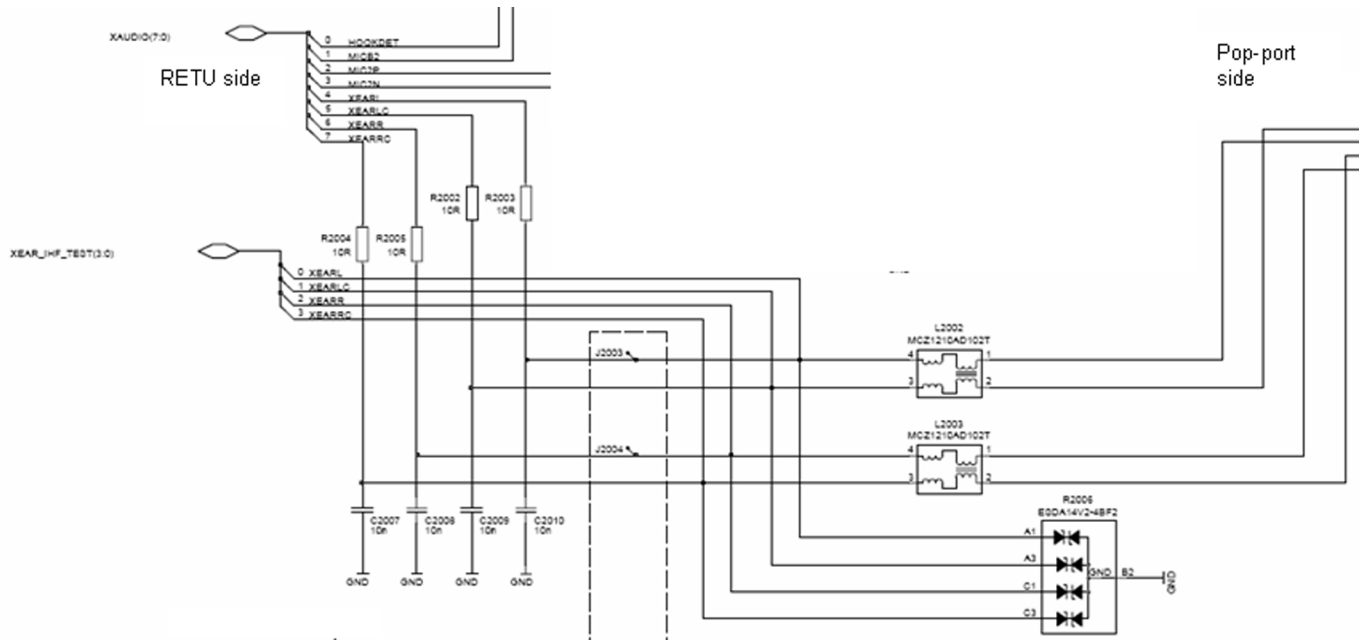


Figure 66 External earpiece circuitry (Pop-Port™ connected on the right)

Vibra circuitry

Vibra is used for vibra-alarm function.

A vibra lifter is used to connect the vibra to the main PWB. The vibra underlay is a simple PWB piece.

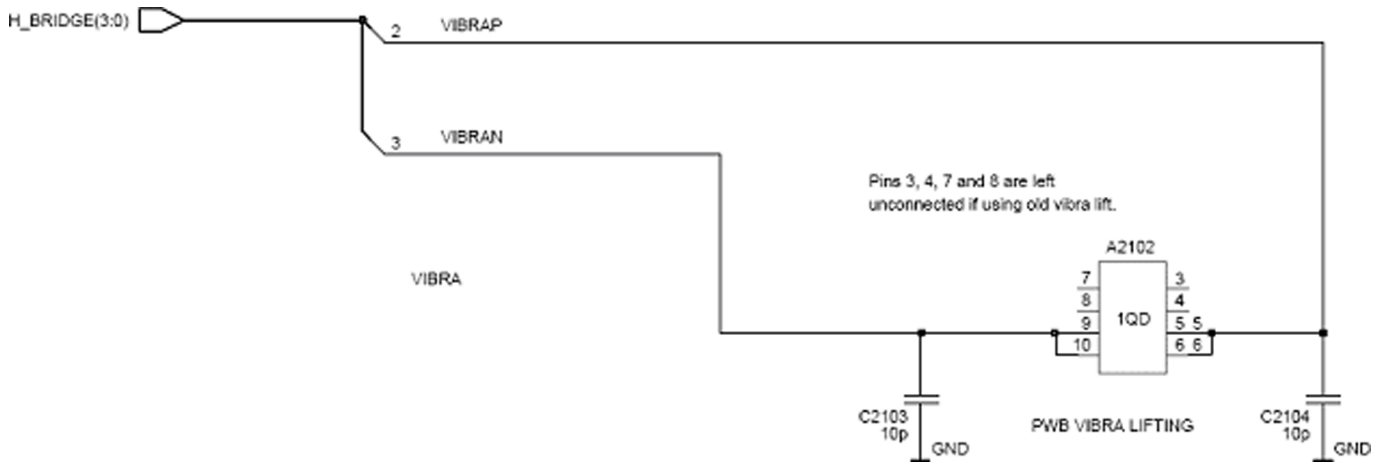


Figure 67 Vibra circuitry

■ Baseband technical specifications

External interfaces

Name of Connection	Connector reference
USB	X2000
Charger	X2002 and X2000
SIM	X2701
MicroSD	X3200
Battery connector	X2070

Name of Connection	Connector reference
SIM	X2701

Pop-port™ connector

Pop-Port™ connector provides a fully differential 4-wire stereo line-level output connection and fully differential 2-wire mono line-level or microphone level input connection.

The earpiece and headset signals are multiplexed so that the outputs cannot be used simultaneously.

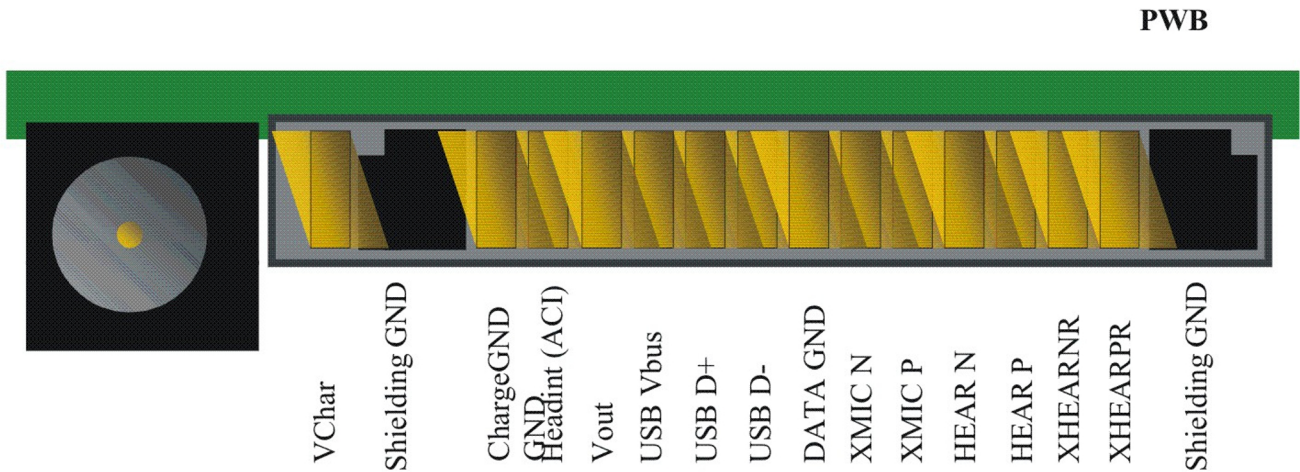


Figure 68 External audio connector

Table 16 Audio connector pin assignments

Pin #/ Signal name	Signal description	Spectral range	Voltage/ Current levels	Max or nominal serial impedance	Notes
1/ Charge	V Charge	DC	0-9V/ 0.85A		
2/ GND	Charge GND	-	0.85A	100mΩ (PWB+ conn.)	
3/ ACI	ACI	1kbits/s	Digital 0 / 2.5-2.78V	47Ω	Insertion & removal detection
4/ Vout	DC out	DC	2.78V 70 mA 2.5V 90mA	100mΩ (PWB+ conn.)	200mW
9 / XMIC N	Audio in	300-8k	1Vpp & 2.5-2.78VDC		
10 / XMIC P	Audio in	300-8k	1Vpp & 2.5-2.78VDC		
11 / HEAR N	Audio out	20-20k	1Vpp	22Ω	
12 / HEAR P	Audio out	20-20k	1Vpp	22Ω	
13 / HEAR R N	Audio out	20-20k	1Vpp	22Ω	Not conn. in mono

Pin #/ Signal name	Signal description	Spectral range	Voltage/ Current levels	Max or nominal serial impedance	Notes
14 / HEAR R P	Audio out	20-20k	1Vpp	22Ω	Not conn. in mono

VOUT electrical characteristics

Description	Parameter	Min	Max	Typical	Unit	Notes
Vout regulator for external accessories	VOUT	2.43	2.57	2.5	V	Max load 90mA

CBUS connections and electrical characteristics

CBUS connections

Pin name		I/O	Connection		Notes
RAPGSM	CbusDa	<->	Retu	Serdata	Cbus data
			Tahvo/FM-radio	CbusData	
RAPGSM	CbusClk	->	Retu	SerClk	Cbus clock, 2.4 MHz
			Tahvo/FM-radio	CbusClk	
RAPGSM	CbusEn1X	->	Retu	Sersel	Cbus enable

CBUS electrical characteristics

Description	Parameter	Min	Typ	Max	Unit	Notes
High-level input voltage (VDDS = 1.8V)	VIH	0.7 x VDDS		VDDS	V	RAPGSM specific
Low-level input voltage	VIL	0		0.3 x VDDS	V	
High-level output voltage	VOH	0.8 x VDDS		VDDS	V	
Low-level output voltage	VOL	0		0.22 x VDDS	V	
Frequency, CbusClk	f	1	2.4	2.5	MHz	

Description	Parameter	Min	Typ	Max	Unit	Notes
Rise and fall time	tR/tF					Tahvo specific
CLK, DaOut, EnX				6	ns	
DaIn				25	ns	

USB/FBUS connections and electrical characteristics

The USB operates in the low-power bus-mode only. The USB host provides VBUS voltage (5V, 100mA at maximum) to USB device.

Audio signal electrical characteristics

Description	Parameter	Typ	Unit	Notes
XMIC N	Audio in	1	V _{pp}	DC Offset 2.5-2.78V
XMIC P	Audio in	1	V _{pp}	DC Offset 2.5-2.78V
HSEAR N	Audio out	1	V _{pp}	22Ω nominal serial impedance
HSEAR P	Audio out	1	V _{pp}	22Ω nominal serial impedance
HSEAR R N	Audio out	1	V _{pp}	22Ω nominal serial impedance
				Not connected in mono
HSEAR R P	Audio out	1	V _{pp}	22Ω nominal serial impedance
				Not connected in mono

Charger connector and charging interface connections & electrical characteristics

Table 17 Charging interface connections

Pin	Signal	I/O	Engine connection		Notes
1	Vchar	In	EM ASIC (N2300)	VCharIn1, 2	Charging voltage / charger detection, Center pin
2	Charge GND		Ground		Charger ground

Table 18 Charging IF electrical characteristics

Description	Parameter	Min	Max	Unit	Notes
Vchar	V Charge	0	16	V	Center pin
Vchar	I Charge		0.95	A	Center pin
Charge GND			0.85	A	

Battery connector and interface connections & electrical characteristics

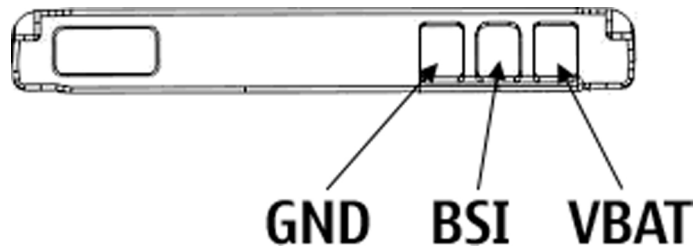


Figure 69 Battery connector

Table 19 Battery interface connections

Pin	Signal	I/O	Engine connection		Notes
1	VBAT	->	EM ASIC N2200	VBAT	Battery voltage
2	BSI	->	EM ASIC N2200	BSI	Battery size indication (fixed resistor inside the battery pack)
3	GND		GND		Ground

Table 20 Battery IF electrical characteristics

Description	Parameter	Max	Unit
Operation voltage	V_{IN}	4.23	VDC
Current rating	I_{IN}	0.9	A

Internal interfaces

Name of Connection	Connector reference	Notes
UI connector	X2400 X1000	Lower block Upper block
Display Suez	X1100	Upper block
Display Naxos	X1101	Upper block
Camera	X1470	Upper block (through hole socket)
Vibra	A2102	Lower block

Name of Connection	Connector reference	Notes
Microphone	B2100	Lower block
Earpiece	B1200	Upper block
IHF speaker	X7506	Upper block

Upper block connectors

Pin number, connector X1000	Destination	Name of the line/signal	NOTES
2-5	Main display, X2000	Messi0-3, Data lines	
7	Earpiece, B1600	EARP	
8	Earpiece, B1600	EARN	
10	Main display, X2000	LCDTE	
11	X3000, X2100, X2000	VAUX, analogue power supply	2.8V
12	Camera, X3000	CAM_ENABLE, shutdown	
12	Secondary display, X2100	LCDCS2X, Chip select	
14	Main (X2000) and secondary (X2100) display	LCD_RESX, Reset	
16	Camera, X3000	CAM_CLK, clock	9.6MHz
17	Camera, X3000	CCISCL, serial clock	
18	Camera, X3000	CCISDA, serial data	
21	Main (X2000) and secondary (X2100) display	VLEDOUT1, display lights supply	6-11V depends on display
22	Main (X2000) and secondary (X2100) display	SETCURR1, display light return current	
24	Camera, X3000	CCPDataP	Differential data line
25	Camera, X3000	CCPDataN	Differential data line
27	Camera, X3000	CCPCLKP	Differential data line
28	Camera, X3000	CCPCLKN	Differential data line

Pin number, connector X1000	Destination	Name of the line/signal	NOTES
30	X3000, X2100, X2000	VIO, digital power supply	1.8V
31	Main (X2000) and secondary (X2100) display	WRX/SDA, Clock for main and Data for secondary display	WRx 9.6Mhz
33	Main display, X2000	DIFRDx, read select	
34	Main display, X2000	DIFCSx, Chip select	
35	Main (X2000) and secondary (X2100) display	DIFDCx / SCL, data/command main and clock for secondary display	
36-39	Main display, X2000	Messi7-4, Data lines	

Back-up battery interface connections and electrical characteristics

Table 21 Back-up battery connections

Pin name	I/O	Connection	Notes
VBack	->	N2200, VBack	

Table 22 Back-up battery electrical characteristics

Description	Parameter	Min	Typ	Max	Unit
Back-Up Battery Voltage	Vback	0	2.5	2.7	V

RF description

Introduction to receiver functionality

Receiver functions are implemented in RF ASIC N7505.

The receiver is a linear direct conversion receiver consisting of separate front ends (LNA (Low Noise Amplifier) and demodulator) for each supported system. After the demodulators, the signal paths are combined to one common BB path.

GSM receiver

As GSM850, GSM900, GSM1800, GSM1900 Rx branches are functionally identical, the following description is applicable to all of them.

The received signal goes from the GSM antenna to the front end module (FEM) which includes switches from band selection. FEM is followed by dedicated SAW filters which are dual packaged so that one holds SAWs for 850 and 900 and the other for 1800 and 1900 bands. The SAW filters are followed by integrated LNAs residing in N7505.

The LNAs are followed by demodulators which downconvert the signal to baseband I and Q signals.

The channel select filter is set to 115 kHz in the GSM mode.

Introduction to transmitter functionality

Transmitter functions are implemented in the RF ASIC N7505. The ASIC contains a BB frequency low pass filter, which is tunable according to the signal bandwidth of the system in use.

GSM transmitter

N7505 receives an analogue IQ modulated signal from digital BB, which is first low pass filtered with filter corner frequency set to approximately 200 kHz. After the filter, the signal is routed to the GSM modulator. The amplifier gives 40 dB of power control dynamic range.

The appropriate routing after the modulator is selected by biasing either EGSM900 (/GSM850) or GSM1800/1900 variable gain amplifier. The amplifier gives 40 dB of power control dynamic range.

After the VGA stage the signal exits N7505. In case of GSM1800/1900 the signal goes directly to the FEM thru a balun, which converts single ended signal into balanced signal needed to feed the FEM. In case of GSM850 and EGSM900 the PA module is preceded by a SAW filter.

TX SAW Z7503 is also dual packaged so that the correct band is selected with control voltage coming from N7505. SAW also performs the unbalanced to balanced signal transformation. After the filter, the signal is fed to FEM. Finally the signal is routed to the antenna.

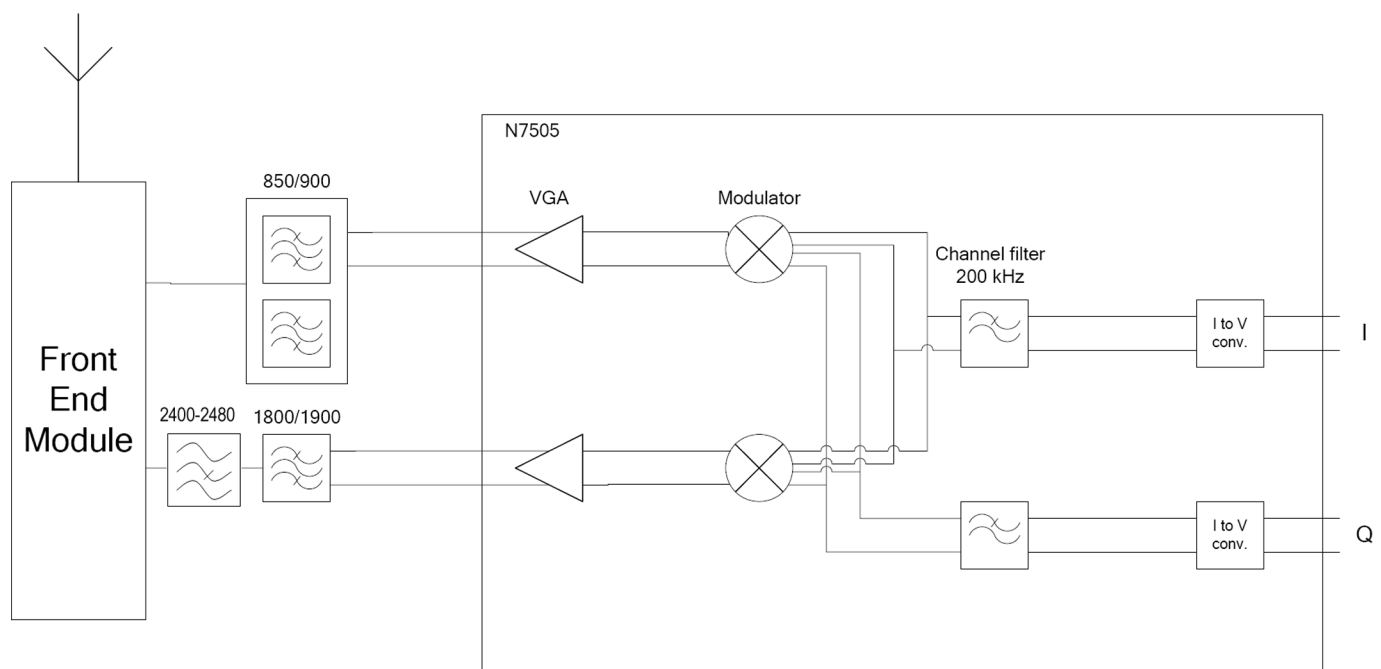


Figure 70 GSM transmitter

GSM power control

A closed control loop comprise an integrated power detector (in FEM) and an error amplifier. The error amplifier resides in N7505 and it controls the transmitter power of GSM.

GSM FEM (front end module)

A single GSM/EDGE FEM contains two separate amplifier chains, one for EGSM900 and GSM850 and another for GSM1800/1900.

Frequency synthesizers

RF ASIC N7505 has a single synthesizer that is used to generate right frequencies for both TX and RX.

Reference oscillators

A 38.4MHz VCTCX0 is used as a reference oscillator for the frequency synthesizers.

Regulators

N7505 contains integrated regulators to supply regulated voltages for their internal circuitry and other RF parts.

■ Frequency mappings

GSM850 frequencies

CH	TX	RX	VCO TX	VCO RX	CH	TX	RX	VCO TX	VCO RX	CH	TX	RX	VCO TX	VCO RX
128	824.2	869.2	3296.8	3476.8	170	832.6	877.6	3330.4	3510.4	212	841.0	886.0	3364.0	3544.0
129	824.4	869.4	3297.6	3477.6	171	832.8	877.8	3331.2	3511.2	213	841.2	886.2	3364.8	3544.8
130	824.6	869.6	3298.4	3478.4	172	833.0	878.0	3332.0	3512.0	214	841.4	886.4	3365.6	3545.6
131	824.8	869.8	3299.2	3479.2	173	833.2	878.2	3332.8	3512.8	215	841.6	886.6	3366.4	3546.4
132	825.0	870.0	3300.0	3480.0	174	833.4	878.4	3333.6	3513.6	216	841.8	886.8	3367.2	3547.2
133	825.2	870.2	3300.8	3480.8	175	833.6	878.6	3334.4	3514.4	217	842.0	887.0	3368.0	3548.0
134	825.4	870.4	3301.6	3481.6	176	833.8	878.8	3335.2	3515.2	218	842.2	887.2	3368.8	3548.8
135	825.6	870.6	3302.4	3482.4	177	834.0	879.0	3336.0	3516.0	219	842.4	887.4	3369.6	3549.6
136	825.8	870.8	3303.2	3483.2	178	834.2	879.2	3336.8	3516.8	220	842.6	887.6	3370.4	3550.4
137	826.0	871.0	3304.0	3484.0	179	834.4	879.4	3337.6	3517.6	221	842.8	887.8	3371.2	3551.2
138	826.2	871.2	3304.8	3484.8	180	834.6	879.6	3338.4	3518.4	222	843.0	888.0	3372.0	3552.0
139	826.4	871.4	3305.6	3485.6	181	834.8	879.8	3339.2	3519.2	223	843.2	888.2	3372.8	3552.8
140	826.6	871.6	3306.4	3486.4	182	835.0	880.0	3340.0	3520.0	224	843.4	888.4	3373.6	3553.6
141	826.8	871.8	3307.2	3487.2	183	835.2	880.2	3340.8	3520.8	225	843.6	888.6	3374.4	3554.4
142	827.0	872.0	3308.0	3488.0	184	835.4	880.4	3341.6	3521.6	226	843.8	888.8	3375.2	3555.2
143	827.2	872.2	3308.8	3488.8	185	835.6	880.6	3342.4	3522.4	227	844.0	889.0	3376.0	3556.0
144	827.4	872.4	3309.6	3489.6	186	835.8	880.8	3343.2	3523.2	228	844.2	889.2	3376.8	3556.8
145	827.6	872.6	3310.4	3490.4	187	836.0	881.0	3344.0	3524.0	229	844.4	889.4	3377.6	3557.6
146	827.8	872.8	3311.2	3491.2	188	836.2	881.2	3344.8	3524.8	230	844.6	889.6	3378.4	3558.4
147	828.0	873.0	3312.0	3492.0	189	836.4	881.4	3345.6	3525.6	231	844.8	889.8	3379.2	3559.2
148	828.2	873.2	3312.8	3492.8	190	836.6	881.6	3346.4	3526.4	232	845.0	890.0	3380.0	3560.0
149	828.4	873.4	3313.6	3493.6	191	836.8	881.8	3347.2	3527.2	233	845.2	890.2	3380.8	3560.8
150	828.6	873.6	3314.4	3494.4	192	837.0	882.0	3348.0	3528.0	234	845.4	890.4	3381.6	3561.6
151	828.8	873.8	3315.2	3495.2	193	837.2	882.2	3348.8	3528.8	235	845.6	890.6	3382.4	3562.4
152	829.0	874.0	3316.0	3496.0	194	837.4	882.4	3349.6	3529.6	236	845.8	890.8	3383.2	3563.2
153	829.2	874.2	3316.8	3496.8	195	837.6	882.6	3350.4	3530.4	237	846.0	891.0	3384.0	3564.0
154	829.4	874.4	3317.6	3497.6	196	837.8	882.8	3351.2	3531.2	238	846.2	891.2	3384.8	3564.8
155	829.6	874.6	3318.4	3498.4	197	838.0	883.0	3352.0	3532.0	239	846.4	891.4	3385.6	3565.6
156	829.8	874.8	3319.2	3499.2	198	838.2	883.2	3352.8	3532.8	240	846.6	891.6	3386.4	3566.4
157	830.0	875.0	3320.0	3500.0	199	838.4	883.4	3353.6	3533.6	241	846.8	891.8	3387.2	3567.2
158	830.2	875.2	3320.8	3500.8	200	838.6	883.6	3354.4	3534.4	242	847.0	892.0	3388.0	3568.0
159	830.4	875.4	3321.6	3501.6	201	838.8	883.8	3355.2	3535.2	243	847.2	892.2	3388.8	3568.8
160	830.6	875.6	3322.4	3502.4	202	839.0	884.0	3356.0	3536.0	244	847.4	892.4	3389.6	3569.6
161	830.8	875.8	3323.2	3503.2	203	839.2	884.2	3356.8	3536.8	245	847.6	892.6	3390.4	3570.4
162	831.0	876.0	3324.0	3504.0	204	839.4	884.4	3357.6	3537.6	246	847.8	892.8	3391.2	3571.2
163	831.2	876.2	3324.8	3504.8	205	839.6	884.6	3358.4	3538.4	247	848.0	893.0	3392.0	3572.0
164	831.4	876.4	3325.6	3505.6	206	839.8	884.8	3359.2	3539.2	248	848.2	893.2	3392.8	3572.8
165	831.6	876.6	3326.4	3506.4	207	840.0	885.0	3360.0	3540.0	249	848.4	893.4	3393.6	3573.6
166	831.8	876.8	3327.2	3507.2	208	840.2	885.2	3360.8	3540.8	250	848.6	893.6	3394.4	3574.4
167	832.0	877.0	3328.0	3508.0	209	840.4	885.4	3361.6	3541.6	251	848.8	893.8	3395.2	3575.2

EGSM900 frequencies

CH	TX	RX	VCO TX	VCO RX	CH	TX	RX	VCO TX	VCO RX	CH	TX	RX	VCO TX	VCO RX
975	880,2	925,2	3520,8	3700,8	1	890,2	935,2	3560,8	3740,8	63	902,6	947,6	3610,4	3790,4
976	880,4	925,4	3521,6	3701,6	2	890,4	935,4	3561,6	3741,6	64	902,8	947,8	3611,2	3791,2
977	880,6	925,6	3522,4	3702,4	3	890,6	935,6	3562,4	3742,4	65	903,0	948,0	3612,0	3792,0
978	880,8	925,8	3523,2	3703,2	4	890,8	935,8	3563,2	3743,2	66	903,2	948,2	3612,8	3792,8
979	881,0	926,0	3524,0	3704,0	5	891,0	936,0	3564,0	3744,0	67	903,4	948,4	3613,6	3793,6
980	881,2	926,2	3524,8	3704,8	6	891,2	936,2	3564,8	3744,8	68	903,6	948,6	3614,4	3794,4
981	881,4	926,4	3525,6	3705,6	7	891,4	936,4	3565,6	3745,6	69	903,8	948,8	3615,2	3795,2
982	881,6	926,6	3526,4	3706,4	8	891,6	936,6	3566,4	3746,4	70	904,0	949,0	3616,0	3796,0
983	881,8	926,8	3527,2	3707,2	9	891,8	936,8	3567,2	3747,2	71	904,2	949,2	3616,8	3796,8
984	882,0	927,0	3528,0	3708,0	10	892,0	937,0	3568,0	3748,0	72	904,4	949,4	3617,6	3797,6
985	882,2	927,2	3528,8	3708,8	11	892,2	937,2	3568,8	3748,8	73	904,6	949,6	3618,4	3798,4
986	882,4	927,4	3529,6	3709,6	12	892,4	937,4	3569,6	3749,6	74	904,8	949,8	3619,2	3799,2
987	882,6	927,6	3530,4	3710,4	13	892,6	937,6	3570,4	3750,4	75	905,0	950,0	3620,0	3800,0
988	882,8	927,8	3531,2	3711,2	14	892,8	937,8	3571,2	3751,2	76	905,2	950,2	3620,8	3800,8
989	883,0	928,0	3532,0	3712,0	15	893,0	938,0	3572,0	3752,0	77	905,4	950,4	3621,6	3801,6
990	883,2	928,2	3532,8	3712,8	16	893,2	938,2	3572,8	3752,8	78	905,6	950,6	3622,4	3802,4
991	883,4	928,4	3533,6	3713,6	17	893,4	938,4	3573,6	3753,6	79	905,8	950,8	3623,2	3803,2
992	883,6	928,6	3534,4	3714,4	18	893,6	938,6	3574,4	3754,4	80	906,0	951,0	3624,0	3804,0
993	883,8	928,8	3535,2	3715,2	19	893,8	938,8	3575,2	3755,2	81	906,2	951,2	3624,8	3804,8
994	884,0	929,0	3536,0	3716,0	20	894,0	939,0	3576,0	3756,0	82	906,4	951,4	3625,6	3805,6
995	884,2	929,2	3536,8	3716,8	21	894,2	939,2	3576,8	3756,8	83	906,6	951,6	3626,4	3806,4
996	884,4	929,4	3537,6	3717,6	22	894,4	939,4	3577,6	3757,6	84	906,8	951,8	3627,2	3807,2
997	884,6	929,6	3538,4	3718,4	23	894,6	939,6	3578,4	3758,4	85	907,0	952,0	3628,0	3808,0
998	884,8	929,8	3539,2	3719,2	24	894,8	939,8	3579,2	3759,2	86	907,2	952,2	3628,8	3808,8
999	885,0	930,0	3540,0	3720,0	25	895,0	940,0	3580,0	3760,0	87	907,4	952,4	3629,6	3809,6
1000	885,2	930,2	3540,8	3720,8	26	895,2	940,2	3580,8	3760,8	88	907,6	952,6	3630,4	3810,4
1001	885,4	930,4	3541,6	3721,6	27	895,4	940,4	3581,6	3761,6	89	907,8	952,8	3631,2	3811,2
1002	885,6	930,6	3542,4	3722,4	28	895,6	940,6	3582,4	3762,4	90	908,0	953,0	3632,0	3812,0
1003	885,8	930,8	3543,2	3723,2	29	895,8	940,8	3583,2	3763,2	91	908,2	953,2	3632,8	3812,8
1004	886,0	931,0	3544,0	3724,0	30	896,0	941,0	3584,0	3764,0	92	908,4	953,4	3633,6	3813,6
1005	886,2	931,2	3544,8	3724,8	31	896,2	941,2	3584,8	3764,8	93	908,6	953,6	3634,4	3814,4
1006	886,4	931,4	3545,6	3725,6	32	896,4	941,4	3585,6	3765,6	94	908,8	953,8	3635,2	3815,2
1007	886,6	931,6	3546,4	3726,4	33	896,6	941,6	3586,4	3766,4	95	909,0	954,0	3636,0	3816,0
1008	886,8	931,8	3547,2	3727,2	34	896,8	941,8	3587,2	3767,2	96	909,2	954,2	3636,8	3816,8
1009	887,0	932,0	3548,0	3728,0	35	897,0	942,0	3588,0	3768,0	97	909,4	954,4	3637,6	3817,6
1010	887,2	932,2	3548,8	3728,8	36	897,2	942,2	3588,8	3768,8	98	909,6	954,6	3638,4	3818,4
1011	887,4	932,4	3549,6	3729,6	37	897,4	942,4	3589,6	3769,6	99	909,8	954,8	3639,2	3819,2
1012	887,6	932,6	3550,4	3730,4	38	897,6	942,6	3590,4	3770,4	100	910,0	955,0	3640,0	3820,0
1013	887,8	932,8	3551,2	3731,2	39	897,8	942,8	3591,2	3771,2	101	910,2	955,2	3640,8	3820,8
1014	888,0	933,0	3552,0	3732,0	40	898,0	943,0	3592,0	3772,0	102	910,4	955,4	3641,6	3821,6
1015	888,2	933,2	3552,8	3732,8	41	898,2	943,2	3592,8	3772,8	103	910,6	955,6	3642,4	3822,4
1016	888,4	933,4	3553,6	3733,6	42	898,4	943,4	3593,6	3773,6	104	910,8	955,8	3643,2	3823,2
1017	888,6	933,6	3554,4	3734,4	43	898,6	943,6	3594,4	3774,4	105	911,0	956,0	3644,0	3824,0
1018	888,8	933,8	3555,2	3735,2	44	898,8	943,8	3595,2	3775,2	106	911,2	956,2	3644,8	3824,8
1019	889,0	934,0	3556,0	3736,0	45	899,0	944,0	3596,0	3776,0	107	911,4	956,4	3645,6	3825,6
1020	889,2	934,2	3556,8	3736,8	46	899,2	944,2	3596,8	3776,8	108	911,6	956,6	3646,4	3826,4
1021	889,4	934,4	3557,6	3737,6	47	899,4	944,4	3597,6	3777,6	109	911,8	956,8	3647,2	3827,2
1022	889,6	934,6	3558,4	3738,4	48	899,6	944,6	3598,4	3778,4	110	912,0	957,0	3648,0	3828,0
1023	889,8	934,8	3559,2	3739,2	49	899,8	944,8	3599,2	3779,2	111	912,2	957,2	3648,8	3828,8
0	890,0	935,0	3560,0	3740,0	50	900,0	945,0	3600,0	3780,0	112	912,4	957,4	3649,6	3829,6
					51	900,2	945,2	3600,8	3780,8	113	912,6	957,6	3650,4	3830,4
					52	900,4	945,4	3601,6	3781,6	114	912,8	957,8	3651,2	3831,2
					53	900,6	945,6	3602,4	3782,4	115	913,0	958,0	3652,0	3832,0
					54	900,8	945,8	3603,2	3783,2	116	913,2	958,2	3652,8	3832,8
					55	901,0	946,0	3604,0	3784,0	117	913,4	958,4	3653,6	3833,6
					56	901,2	946,2	3604,8	3784,8	118	913,6	958,6	3654,4	3834,4
					57	901,4	946,4	3605,6	3785,6	119	913,8	958,8	3655,2	3835,2
					58	901,6	946,6	3606,4	3786,4	120	914,0	959,0	3656,0	3836,0
					59	901,8	946,8	3607,2	3787,2	121	914,2	959,2	3656,8	3836,8
					60	902,0	947,0	3608,0	3788,0	122	914,4	959,4	3657,6	3837,6
					61	902,2	947,2	3608,8	3788,8	123	914,6	959,6	3658,4	3838,4
					62	902,4	947,4	3609,6	3789,6	124	914,8	959,8	3659,2	3839,2

GSM1800 frequencies

Ch	Tx	Rx	VCO Tx	VCO Rx	Ch	Tx	Rx	VCO Tx	VCO Rx	Ch	Tx	Rx	VCO Tx	VCO Rx	Ch	Tx	Rx	VCO Tx	VCO Rx
512	1710.2	1805.2	3420.4	3610.4	606	1729.0	1824.0	3458.0	3648.0	700	1747.8	1842.8	3495.6	3685.6	793	1766.4	1861.4	3532.8	3722.8
513	1710.4	1805.4	3420.8	3610.8	607	1729.2	1824.2	3458.4	3648.4	701	1748.0	1843.0	3496.0	3686.0	794	1766.6	1861.6	3533.2	3723.2
514	1710.6	1805.6	3421.2	3611.2	608	1729.4	1824.4	3458.8	3648.8	702	1748.2	1843.2	3496.4	3686.4	795	1766.8	1861.8	3533.6	3723.6
515	1710.8	1805.8	3421.6	3611.6	609	1729.6	1824.6	3459.2	3649.2	703	1748.4	1843.4	3496.8	3686.8	796	1767.0	1862.0	3534.0	3724.0
516	1711.0	1806.0	3422.0	3612.0	610	1729.8	1824.8	3459.6	3649.6	704	1748.6	1843.6	3497.2	3687.2	797	1767.2	1862.2	3534.4	3724.4
517	1711.2	1806.2	3422.4	3612.4	611	1730.0	1825.0	3460.0	3650.0	705	1748.8	1843.8	3497.6	3687.6	798	1767.4	1862.4	3534.8	3724.8
518	1711.4	1806.4	3422.8	3612.8	612	1730.2	1825.2	3460.4	3650.4	706	1749.0	1844.0	3498.0	3688.0	799	1767.6	1862.6	3535.2	3725.2
519	1711.6	1806.6	3423.2	3613.2	613	1730.4	1825.4	3460.8	3650.8	707	1749.2	1844.2	3498.4	3688.4	800	1767.8	1862.8	3535.6	3725.6
520	1711.8	1806.8	3423.6	3613.6	614	1730.6	1825.6	3461.2	3651.2	708	1749.4	1844.4	3498.8	3688.8	801	1768.0	1863.0	3536.0	3726.0
521	1712.0	1807.0	3424.0	3614.0	615	1730.8	1825.8	3461.6	3651.6	709	1749.6	1844.6	3499.2	3689.2	802	1768.2	1863.2	3536.4	3726.4
522	1712.2	1807.2	3424.4	3614.4	616	1731.0	1826.0	3462.0	3652.0	710	1749.8	1844.8	3499.6	3689.6	803	1768.4	1863.4	3536.8	3726.8
523	1712.4	1807.4	3424.8	3614.8	617	1731.2	1826.2	3462.4	3652.4	711	1750.0	1845.0	3500.0	3690.0	804	1768.6	1863.6	3537.2	3727.2
524	1712.6	1807.6	3425.2	3615.2	618	1731.4	1826.4	3462.8	3652.8	712	1750.2	1845.2	3500.4	3690.4	805	1768.8	1863.8	3537.6	3727.6
525	1712.8	1807.8	3425.6	3615.6	619	1731.6	1826.6	3463.2	3653.2	713	1750.4	1845.4	3500.8	3690.8	806	1769.0	1864.0	3538.0	3728.0
526	1713.0	1808.0	3426.0	3616.0	620	1731.8	1826.8	3463.6	3653.6	714	1750.6	1845.6	3501.2	3691.2	807	1769.2	1864.2	3538.4	3728.4
527	1713.2	1808.2	3426.4	3616.4	621	1732.0	1827.0	3464.0	3654.0	715	1750.8	1845.8	3501.6	3691.6	808	1769.4	1864.4	3538.8	3728.8
528	1713.4	1808.4	3426.8	3616.8	622	1732.2	1827.2	3464.4	3654.4	716	1751.0	1846.0	3502.0	3692.0	809	1769.6	1864.6	3539.2	3729.2
529	1713.6	1808.6	3427.2	3617.2	623	1732.4	1827.4	3464.8	3654.8	717	1751.2	1846.2	3502.4	3692.4	810	1769.8	1864.8	3539.6	3729.6
530	1713.8	1808.8	3427.6	3617.6	624	1732.6	1827.6	3465.2	3655.2	718	1751.4	1846.4	3502.8	3692.8	811	1770.0	1865.0	3540.0	3730.0
531	1714.0	1809.0	3428.0	3618.0	625	1732.8	1827.8	3465.6	3655.6	719	1751.6	1846.6	3503.2	3693.2	812	1770.2	1865.2	3540.4	3730.4
532	1714.2	1809.2	3428.4	3618.4	626	1733.0	1828.0	3466.0	3656.0	720	1751.8	1846.8	3503.6	3693.6	813	1770.4	1865.4	3540.8	3730.8
533	1714.4	1809.4	3428.8	3618.8	627	1733.2	1828.2	3466.4	3656.4	721	1752.0	1847.0	3504.0	3694.0	814	1770.6	1865.6	3541.2	3731.2
534	1714.6	1809.6	3429.2	3619.2	628	1733.4	1828.4	3466.8	3656.8	722	1752.2	1847.2	3504.4	3694.4	815	1770.8	1865.8	3541.6	3731.6
535	1714.8	1809.8	3429.6	3619.6	629	1733.6	1828.6	3467.2	3657.2	723	1752.4	1847.4	3504.8	3694.8	816	1771.0	1866.0	3542.0	3732.0
536	1715.0	1810.0	3430.0	3620.0	630	1733.8	1828.8	3467.6	3657.6	724	1752.6	1847.6	3505.2	3695.2	817	1771.2	1866.2	3542.4	3732.4
537	1715.2	1810.2	3430.4	3620.4	631	1734.0	1829.0	3468.0	3658.0	725	1752.8	1847.8	3505.6	3695.6	818	1771.4	1866.4	3542.8	3732.8
538	1715.4	1810.4	3430.8	3620.8	632	1734.2	1829.2	3468.4	3658.4	726	1753.0	1848.0	3506.0	3696.0	819	1771.6	1866.6	3543.2	3733.2
539	1715.6	1810.6	3431.2	3621.2	633	1734.4	1829.4	3468.8	3658.8	727	1753.2	1848.2	3506.4	3696.4	820	1771.8	1866.8	3543.6	3733.6
540	1715.8	1810.8	3431.6	3621.6	634	1734.6	1829.6	3469.2	3659.2	728	1753.4	1848.4	3506.8	3696.8	821	1772.0	1867.0	3544.0	3734.0
541	1716.0	1811.0	3432.0	3622.0	635	1734.8	1829.8	3469.6	3659.6	729	1753.6	1848.6	3507.2	3697.2	822	1772.2	1867.2	3544.4	3734.4
542	1716.2	1811.2	3432.4	3622.4	636	1735.0	1830.0	3470.0	3660.0	730	1753.8	1848.8	3507.6	3697.6	823	1772.4	1867.4	3544.8	3734.8
543	1716.4	1811.4	3432.8	3622.8	637	1735.2	1830.2	3470.4	3660.4	731	1754.0	1849.0	3508.0	3698.0	824	1772.6	1867.6	3545.2	3735.2
544	1716.6	1811.6	3433.2	3623.2	638	1735.4	1830.4	3470.8	3660.8	732	1754.2	1849.2	3508.4	3698.4	825	1772.8	1867.8	3545.6	3735.6
545	1716.8	1811.8	3433.6	3623.6	639	1735.6	1830.6	3471.2	3661.2	733	1754.4	1849.4	3508.8	3698.8	826	1773.0	1868.0	3546.0	3736.0
546	1717.0	1812.0	3434.0	3624.0	640	1735.8	1830.8	3471.6	3661.6	734	1754.6	1849.6	3509.2	3699.2	827	1773.2	1868.2	3546.4	3736.4
547	1717.2	1812.2	3434.4	3624.4	641	1736.0	1831.0	3472.0	3662.0	735	1754.8	1849.8	3509.6	3699.6	828	1773.4	1868.4	3546.8	3736.8
548	1717.4	1812.4	3434.8	3624.8	642	1736.2	1831.2	3472.4	3662.4	736	1755.0	1850.0	3510.0	3700.0	829	1773.6	1868.6	3547.2	3737.2
549	1717.6	1812.6	3435.2	3625.2	643	1736.4	1831.4	3472.8	3662.8	737	1755.2	1850.2	3510.4	3700.4	830	1773.8	1868.8	3547.6	3737.6
550	1717.8	1812.8	3435.6	3625.6	644	1736.6	1831.6	3473.2	3663.2	738	1755.4	1850.4	3510.8	3700.8	831	1774.0	1869.0	3548.0	3738.0
551	1718.0	1813.0	3436.0	3626.0	645	1736.8	1831.8	3473.6	3663.6	739	1755.6	1850.6	3511.2	3701.2	832	1774.2	1869.2	3548.4	3738.4
552	1718.2	1813.2	3436.4	3626.4	646	1737.0	1832.0	3474.0	3664.0	740	1755.8	1850.8	3511.6	3701.6	833	1774.4	1869.4	3548.8	3738.8
553	1718.4	1813.4	3436.8	3626.8	647	1737.2	1832.2	3474.4	3664.4	741	1756.0	1851.0	3512.0	3702.0	834	1774.6	1869.6	3549.2	3739.2
554	1718.6	1813.6	3437.2	3627.2	648	1737.4	1832.4	3474.8	3664.8	742	1756.2	1851.2	3512.4	3702.4	835	1774.8	1869.8	3549.6	3739.6
555	1718.8	1813.8	3437.6	3627.6	649	1737.6	1832.6	3475.2	3665.2	743	1756.4	1851.4	3512.8	3702.8	836	1775.0	1870.0	3550.0	3740.0
556	1719.0	1814.0	3438.0	3628.0	650	1737.8	1832.8	3475.6	3665.6	744	1756.6	1851.6	3513.2	3703.2	837	1775.2	1870.2	3550.4	3740.4
557	1719.2	1814.2	3438.4	3628.4	651	1738.0	1833.0	3476.0	3666.0	745	1756.8	1851.8	3513.6	3703.6	838	1775.4	1870.4	3550.8	3740.8
558	1719.4	1814.4	3438.8	3628.8	652	1738.2	1833.2	3476.4	3666.4	746	1757.0	1852.0	3514.0	3704.0	839	1775.6	1870.6	3551.2	3741.2
559	1719.6	1814.6	3439.2	3629.2	653	1738.4	1833.4	3476.8	3666.8	747	1757.2	1852.2	3514.4	3704.4	840	1775.8	1870.8	3551.6	3741.6
560	1719.8	1814.8	3439.6	3629.6	654	1738.6	1833.6	3477.2	3667.2	748	1757.4	1852.4	3514.8	3704.8	841	1776.0	1871.0	3552.0	3742.0
561	1720.0	1815.0	3440.0	3630.0	655	1738.8	1833.8	3477.6	3667.6	749	1757.6	1852.6	3515.2	3705.2	842	1776.2	1871.2	3552.4	3742.4
562	1720.2	1815.2	3440.4	3630.4	656	1739.0	1834.0	3478.0	3668.0	750	1757.8	1852.8	3515.6	3705.6	843	1776.4	1871.4	3552.8	3742.8
563	1720.4	1815.4	3440.8	3630.8	657	1739.2	1834.2	3478.4	3668.4	751	1758.0	1853.0	3516.0	3706.0	844	1776.6	1871.6	3553.2	3743.2
564	1720.6	1815.6	3441.2	3631.2	658	1739.4	1834.4	3478.8	3668.8	752	1758.2	1853.2	3516.4	3706.4	845	1776.8	1871.8	3553.6	3743.6
565	1720.8	1815.8	3441.6	3631.6	659	1739.6	1834.6	3479.2	3669.2	753	1758.4	1853.4	3516.8	3706.8	846	1777.0	1872.0	3554.0	3744.0
566	1721.0	1816.0	3442.0	3632.0	660	1739.8	1834.8	3479.6	3669.6	754	1758.6	1853.6	3517.2	3707.2	847	1777.2	1872.2	3554.4	3744.4
567	1721.2	1816.2	3442.4	3632.4	661	1740.0	1835.0	3480.0	3670.0	755	1758.8	1853.8	3517.6	3707.6	848	1777.4	1872.4	3554.8	3744.8
568	1721.4	1816.4	3442.8	3632.8	662	1740.2	1835.2	3480.4	3670.4	756	1759.0								

GSM1900 frequencies

CH	TX	RX	VCO TX	VCO RX	CH	TX	RX	VCO TX	VCO RX	CH	TX	RX	VCO TX	VCO RX	CH	TX	RX	VCO TX	VCO RX
512	1850.2	1930.2	3700.4	3860.4	606	1869.0	1949.0	3738.0	3898.0	700	1887.8	1967.8	3775.6	3935.6	794	1906.6	1986.6	3813.2	3973.2
513	1850.4	1930.4	3700.8	3860.8	607	1869.2	1949.2	3738.4	3898.4	701	1888.0	1968.0	3776.0	3936.0	795	1906.8	1986.8	3813.6	3973.6
514	1850.6	1930.6	3701.2	3861.2	608	1869.4	1949.4	3738.8	3898.8	702	1888.2	1968.2	3776.4	3936.4	796	1907.0	1987.0	3814.0	3974.0
515	1850.8	1930.8	3701.6	3861.6	609	1869.6	1949.6	3739.2	3899.2	703	1888.4	1968.4	3776.8	3936.8	797	1907.2	1987.2	3814.4	3974.4
516	1851.0	1931.0	3702.0	3862.0	610	1869.8	1949.8	3739.6	3899.6	704	1888.6	1968.6	3777.2	3937.2	798	1907.4	1987.4	3814.8	3974.8
517	1851.2	1931.2	3702.4	3862.4	611	1870.0	1950.0	3740.0	3900.0	705	1888.8	1968.8	3777.6	3937.6	799	1907.6	1987.6	3815.2	3975.2
518	1851.4	1931.4	3702.8	3862.8	612	1870.2	1950.2	3740.4	3900.4	706	1889.0	1969.0	3778.0	3938.0	800	1907.8	1987.8	3815.6	3975.6
519	1851.6	1931.6	3703.2	3863.2	613	1870.4	1950.4	3740.8	3900.8	707	1889.2	1969.2	3778.4	3938.4	801	1908.0	1988.0	3816.0	3976.0
520	1851.8	1931.8	3703.6	3863.6	614	1870.6	1950.6	3741.2	3901.2	708	1889.4	1969.4	3778.8	3938.8	802	1908.2	1988.2	3816.4	3976.4
521	1852.0	1932.0	3704.0	3864.0	615	1870.8	1950.8	3741.6	3901.6	709	1889.6	1969.6	3779.2	3939.2	803	1908.4	1988.4	3816.8	3976.8
522	1852.2	1932.2	3704.4	3864.4	616	1871.0	1951.0	3742.0	3902.0	710	1889.8	1969.8	3779.6	3939.6	804	1908.6	1988.6	3817.2	3977.2
523	1852.4	1932.4	3704.8	3864.8	617	1871.2	1951.2	3742.4	3902.4	711	1890.0	1970.0	3780.0	3940.0	805	1908.8	1988.8	3817.6	3977.6
524	1852.6	1932.6	3705.2	3865.2	618	1871.4	1951.4	3742.8	3902.8	712	1890.2	1970.2	3780.4	3940.4	806	1909.0	1989.0	3818.0	3978.0
525	1852.8	1932.8	3705.6	3865.6	619	1871.6	1951.6	3743.2	3903.2	713	1890.4	1970.4	3780.8	3940.8	807	1909.2	1989.2	3818.4	3978.4
526	1853.0	1933.0	3706.0	3866.0	620	1871.8	1951.8	3743.6	3903.6	714	1890.6	1970.6	3781.2	3941.2	808	1909.4	1989.4	3818.8	3978.8
527	1853.2	1933.2	3706.4	3866.4	621	1872.0	1952.0	3744.0	3904.0	715	1890.8	1970.8	3781.6	3941.6	809	1909.6	1989.6	3819.2	3979.2
528	1853.4	1933.4	3706.8	3866.8	622	1872.2	1952.2	3744.4	3904.4	716	1891.0	1971.0	3782.0	3942.0	810	1909.8	1989.8	3819.6	3979.6
529	1853.6	1933.6	3707.2	3867.2	623	1872.4	1952.4	3744.8	3904.8	717	1891.2	1971.2	3782.4	3942.4					
530	1853.8	1933.8	3707.6	3867.6	624	1872.6	1952.6	3745.2	3905.2	718	1891.4	1971.4	3782.8	3942.8					
531	1854.0	1934.0	3708.0	3868.0	625	1872.8	1952.8	3745.6	3905.6	719	1891.6	1971.6	3783.2	3943.2					
532	1854.2	1934.2	3708.4	3868.4	626	1873.0	1953.0	3746.0	3906.0	720	1891.8	1971.8	3783.6	3943.6					
533	1854.4	1934.4	3708.8	3868.8	627	1873.2	1953.2	3746.4	3906.4	721	1892.0	1972.0	3784.0	3944.0					
534	1854.6	1934.6	3709.2	3869.2	628	1873.4	1953.4	3746.8	3906.8	722	1892.2	1972.2	3784.4	3944.4					
535	1854.8	1934.8	3709.6	3869.6	629	1873.6	1953.6	3747.2	3907.2	723	1892.4	1972.4	3784.8	3944.8					
536	1855.0	1935.0	3710.0	3870.0	630	1873.8	1953.8	3747.6	3907.6	724	1892.6	1972.6	3785.2	3945.2					
537	1855.2	1935.2	3710.4	3870.4	631	1874.0	1954.0	3748.0	3908.0	725	1892.8	1972.8	3785.6	3945.6					
538	1855.4	1935.4	3710.8	3870.8	632	1874.2	1954.2	3748.4	3908.4	726	1893.0	1973.0	3786.0	3946.0					
539	1855.6	1935.6	3711.2	3871.2	633	1874.4	1954.4	3748.8	3908.8	727	1893.2	1973.2	3786.4	3946.4					
540	1855.8	1935.8	3711.6	3871.6	634	1874.6	1954.6	3749.2	3909.2	728	1893.4	1973.4	3786.8	3946.8					
541	1856.0	1936.0	3712.0	3872.0	635	1874.8	1954.8	3749.6	3909.6	729	1893.6	1973.6	3787.2	3947.2					
542	1856.2	1936.2	3712.4	3872.4	636	1875.0	1955.0	3750.0	3910.0	730	1893.8	1973.8	3787.6	3947.6					
543	1856.4	1936.4	3712.8	3872.8	637	1875.2	1955.2	3750.4	3910.4	731	1894.0	1974.0	3788.0	3948.0					
544	1856.6	1936.6	3713.2	3873.2	638	1875.4	1955.4	3750.8	3910.8	732	1894.2	1974.2	3788.4	3948.4					
545	1856.8	1936.8	3713.6	3873.6	639	1875.6	1955.6	3751.2	3911.2	733	1894.4	1974.4	3788.8	3948.8					
546	1857.0	1937.0	3714.0	3874.0	640	1875.8	1955.8	3751.6	3911.6	734	1894.6	1974.6	3789.2	3949.2					
547	1857.2	1937.2	3714.4	3874.4	641	1876.0	1956.0	3752.0	3912.0	735	1894.8	1974.8	3789.6	3949.6					
548	1857.4	1937.4	3714.8	3874.8	642	1876.2	1956.2	3752.4	3912.4	736	1895.0	1975.0	3790.0	3950.0					
549	1857.6	1937.6	3715.2	3875.2	643	1876.4	1956.4	3752.8	3912.8	737	1895.2	1975.2	3790.4	3950.4					
550	1857.8	1937.8	3715.6	3875.6	644	1876.6	1956.6	3753.2	3913.2	738	1895.4	1975.4	3790.8	3950.8					
551	1858.0	1938.0	3716.0	3876.0	645	1876.8	1956.8	3753.6	3913.6	739	1895.6	1975.6	3791.2	3951.2					
552	1858.2	1938.2	3716.4	3876.4	646	1877.0	1957.0	3754.0	3914.0	740	1895.8	1975.8	3791.6	3951.6					
553	1858.4	1938.4	3716.8	3876.8	647	1877.2	1957.2	3754.4	3914.4	741	1896.0	1976.0	3792.0	3952.0					
554	1858.6	1938.6	3717.2	3877.2	648	1877.4	1957.4	3754.8	3914.8	742	1896.2	1976.2	3792.4	3952.4					
555	1858.8	1938.8	3717.6	3877.6	649	1877.6	1957.6	3755.2	3915.2	743	1896.4	1976.4	3792.8	3952.8					
556	1859.0	1939.0	3718.0	3878.0	650	1877.8	1957.8	3755.6	3915.6	744	1896.6	1976.6	3793.2	3953.2					
557	1859.2	1939.2	3718.4	3878.4	651	1878.0	1958.0	3756.0	3916.0	745	1896.8	1976.8	3793.6	3953.6					
558	1859.4	1939.4	3718.8	3878.8	652	1878.2	1958.2	3756.4	3916.4	746	1897.0	1977.0	3794.0	3954.0					
559	1859.6	1939.6	3719.2	3879.2	653	1878.4	1958.4	3756.8	3916.8	747	1897.2	1977.2	3794.4	3954.4					
560	1859.8	1939.8	3719.6	3879.6	654	1878.6	1958.6	3757.2	3917.2	748	1897.4	1977.4	3794.8	3954.8					
561	1860.0	1940.0	3720.0	3880.0	655	1878.8	1958.8	3757.6	3917.6	749	1897.6	1977.6	3795.2	3955.2					
562	1860.2	1940.2	3720.4	3880.4	656	1879.0	1959.0	3758.0	3918.0	750	1897.8	1977.8	3795.6	3955.6					
563	1860.4	1940.4	3720.8	3880.8	657	1879.2	1959.2	3758.4	3918.4	751	1898.0	1978.0	3796.0	3956.0					
564	1860.6	1940.6	3721.2	3881.2	658	1879.4	1959.4	3758.8	3918.8	752	1898.2	1978.2	3796.4	3956.4					
565	1860.8	1940.8	3721.6	3881.6	659	1879.6	1959.6	3759.2	3919.2	753	1898.4	1978.4	3796.8	3956.8					
566	1861.0	1941.0	3722.0	3882.0	660	1879.8	1959.8	3759.6	3919.6	754	1898.6	1978.6	3797.2	3957.2					
567	1861.2	1941.2	3722.4	3882.4	661	1880.0	1960.0	3760.0	3920.0	755	1898.8	1978.8	3797.6	3957.6					
568	1861.4	1941.4	3722.8	3882.8	662	1880.2	1960.2	3760.4	3920.4	756	1899.0	1979.0	3798.0	3958.0					
569	1861.6	1941.6	3723.2	3883.2	663	1880.4	1960.4	3760.8	3920.8	757	1899.2	1979.2	3798.4	3958.4					
570	1861.8	1941.8	3723.6	3883.6	664	1880.6	1960.6	3761.2	3921.2	758	1899.4	1979.4	3798.8	3958.8					
571	1862.0	1942.0	3724.0	3884.0	665	1880.8	1960.8	3761.6	3921.6	759	1899.6	1979.6	3799.2	3959.2					
572	1862.2	1942.2	3724.4	3884.4	666	1881.0	1961.0	3762.0	3922.0	760	1899.8	1979.8	3799.6	3959.6					
573	1862.4	1942.4	3724.8	3884.8	667	1881.2	1961.2	3762.4	3922.4	761	1900.0	1980.0	3800.0	3960.0					
574	1862.6	1942.6	3725.2	3885.2	668	1881.4	1961.4	3762.8	3922.8	762	1900.2	1980.2	3800.4	3960.4					
575	1862.8	1942.8	3725.6	3885.6	669	1881.6	1961.6	3763.2	3923.2										

Nokia Customer Care


9 — RM-188/198 schematics

(This page left intentionally blank.)


Table of Contents

RM-188/198 system connector	9-4
RM-188/198 Retu, Tahvo, LED driver	9-5
RM-188/198 RAPGSM, memories, FM radio, microSD	9-6
RM-188/198 WLAN, Bluetooth.....	9-7
RM-188/198 user interface	9-8
RM-188/198 flip PWB	9-9
RM-188/198 RF part.....	9-10
RM-188/198 signal overview.....	9-11
RM-188/198 component finder.....	9-12


■ RM-188/198 system connector

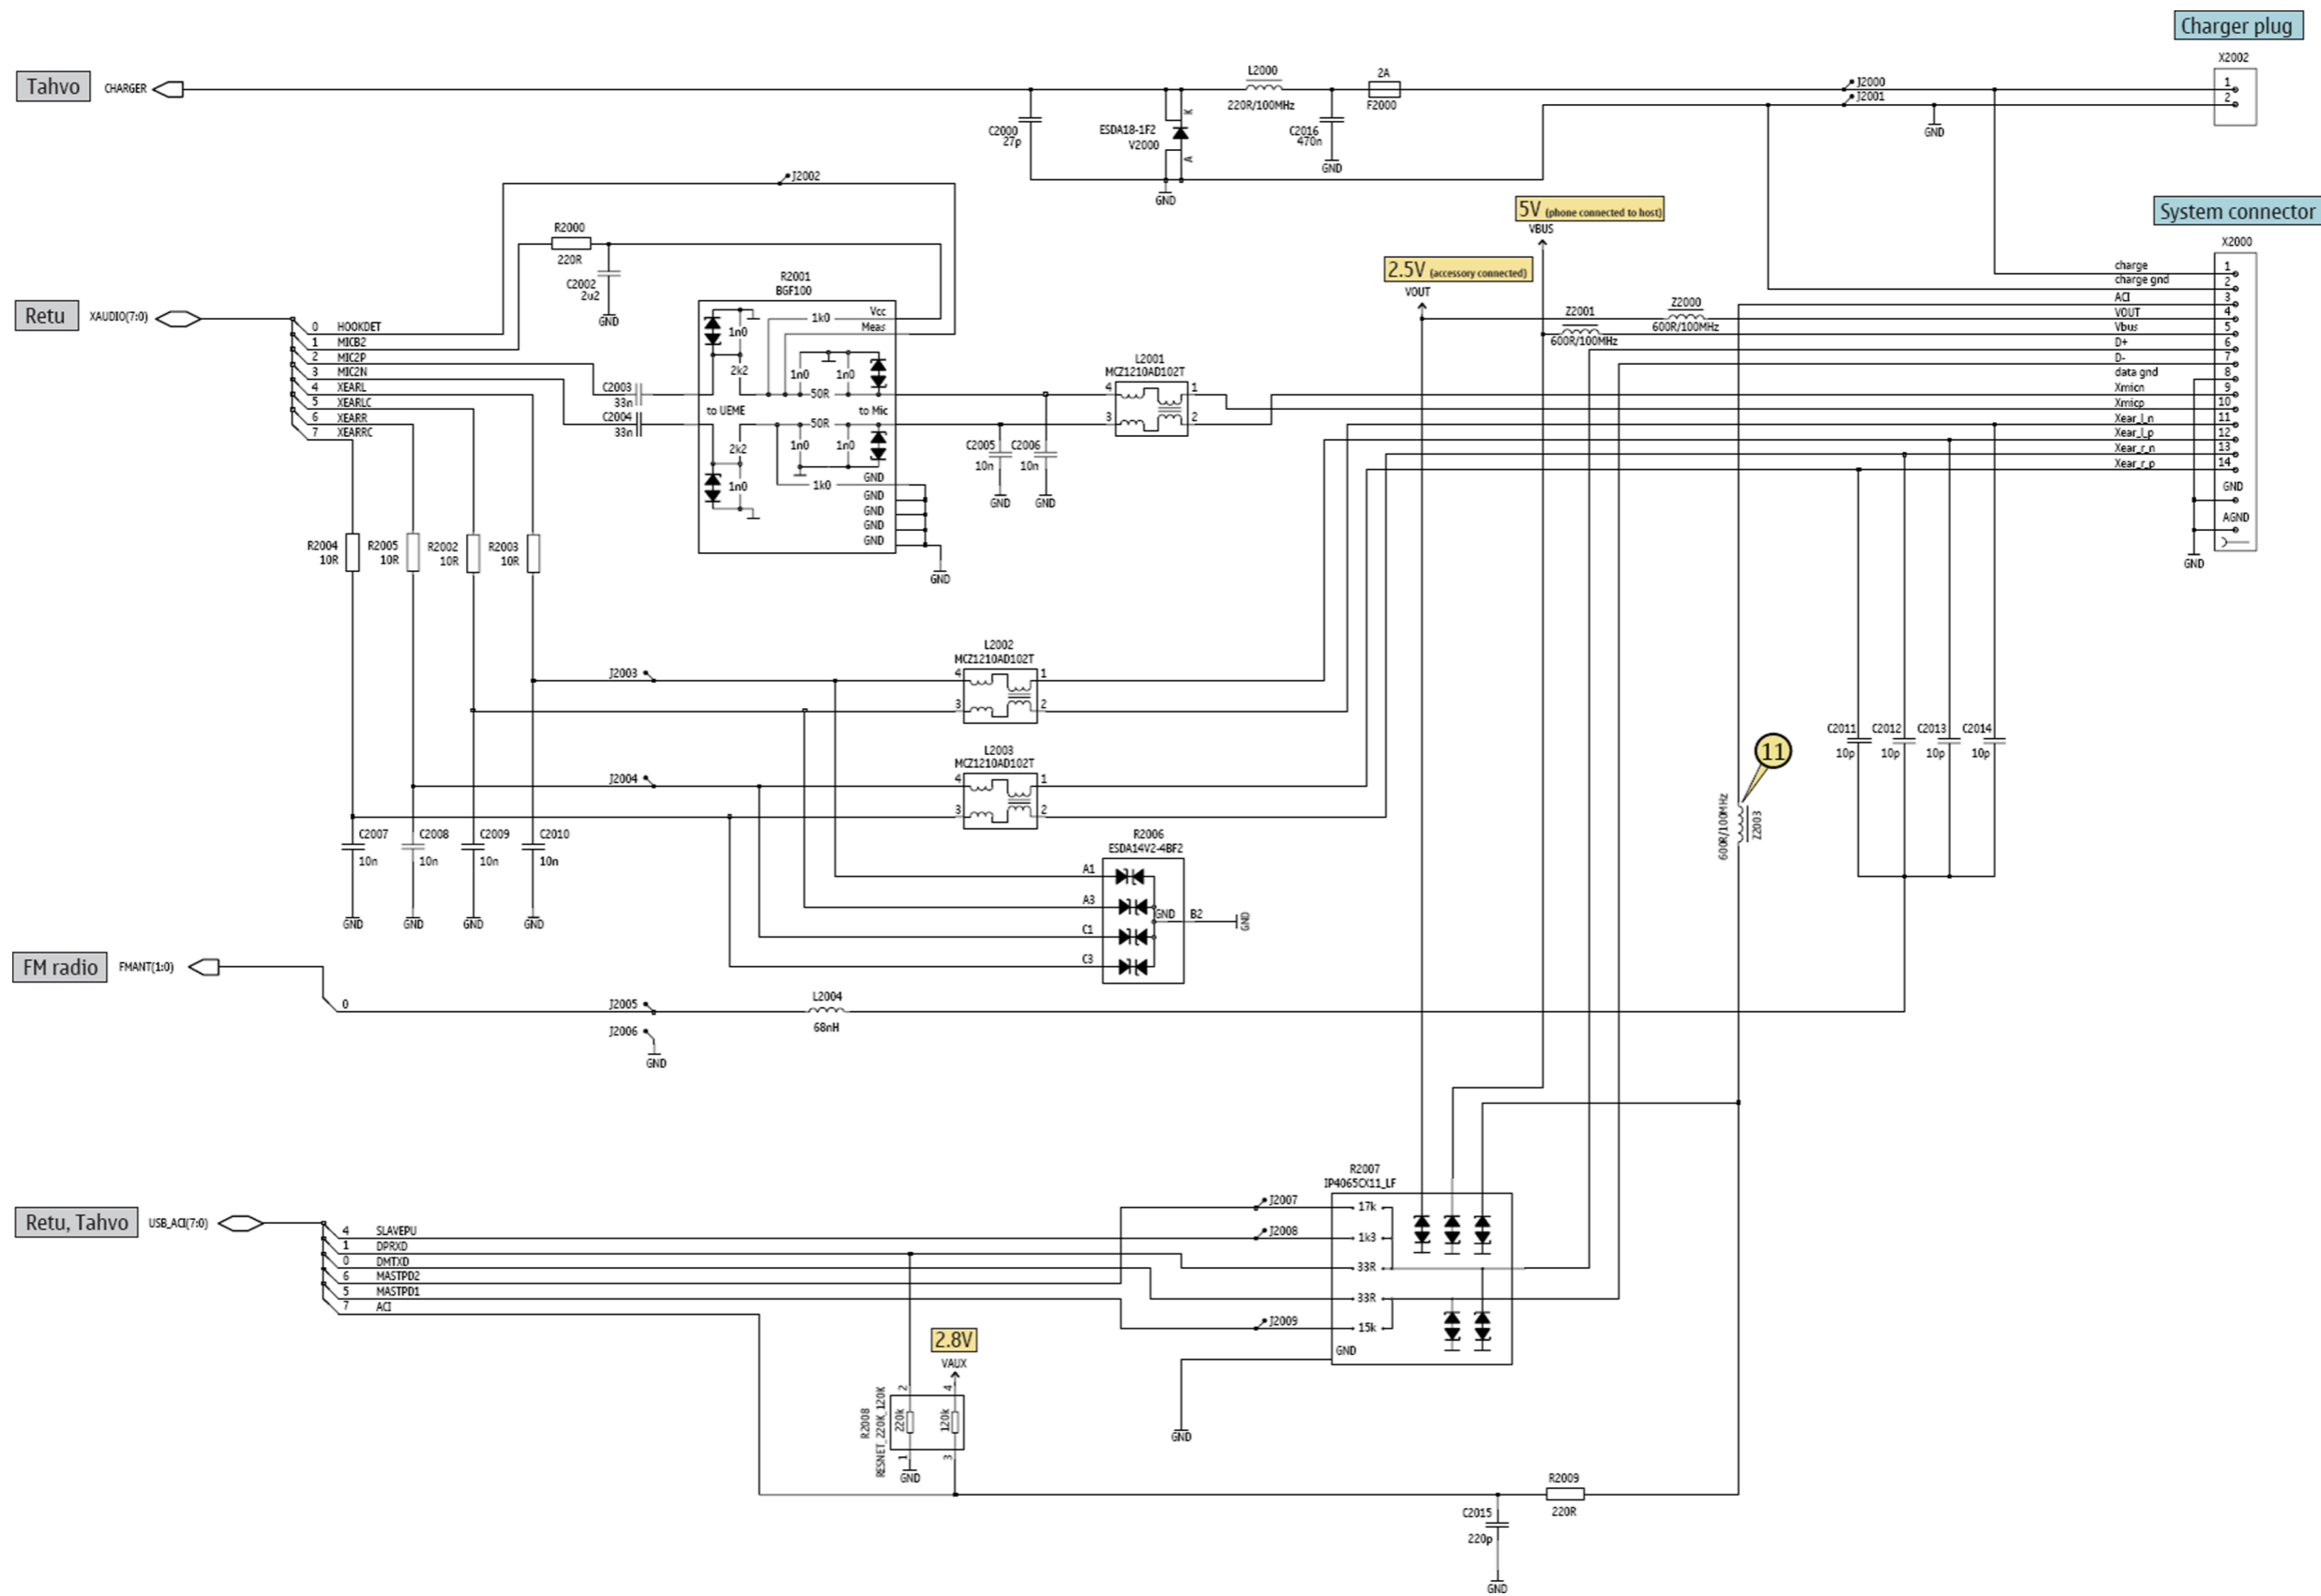


■ RM-188/198 RAPGSM, memories, FM radio, microSD

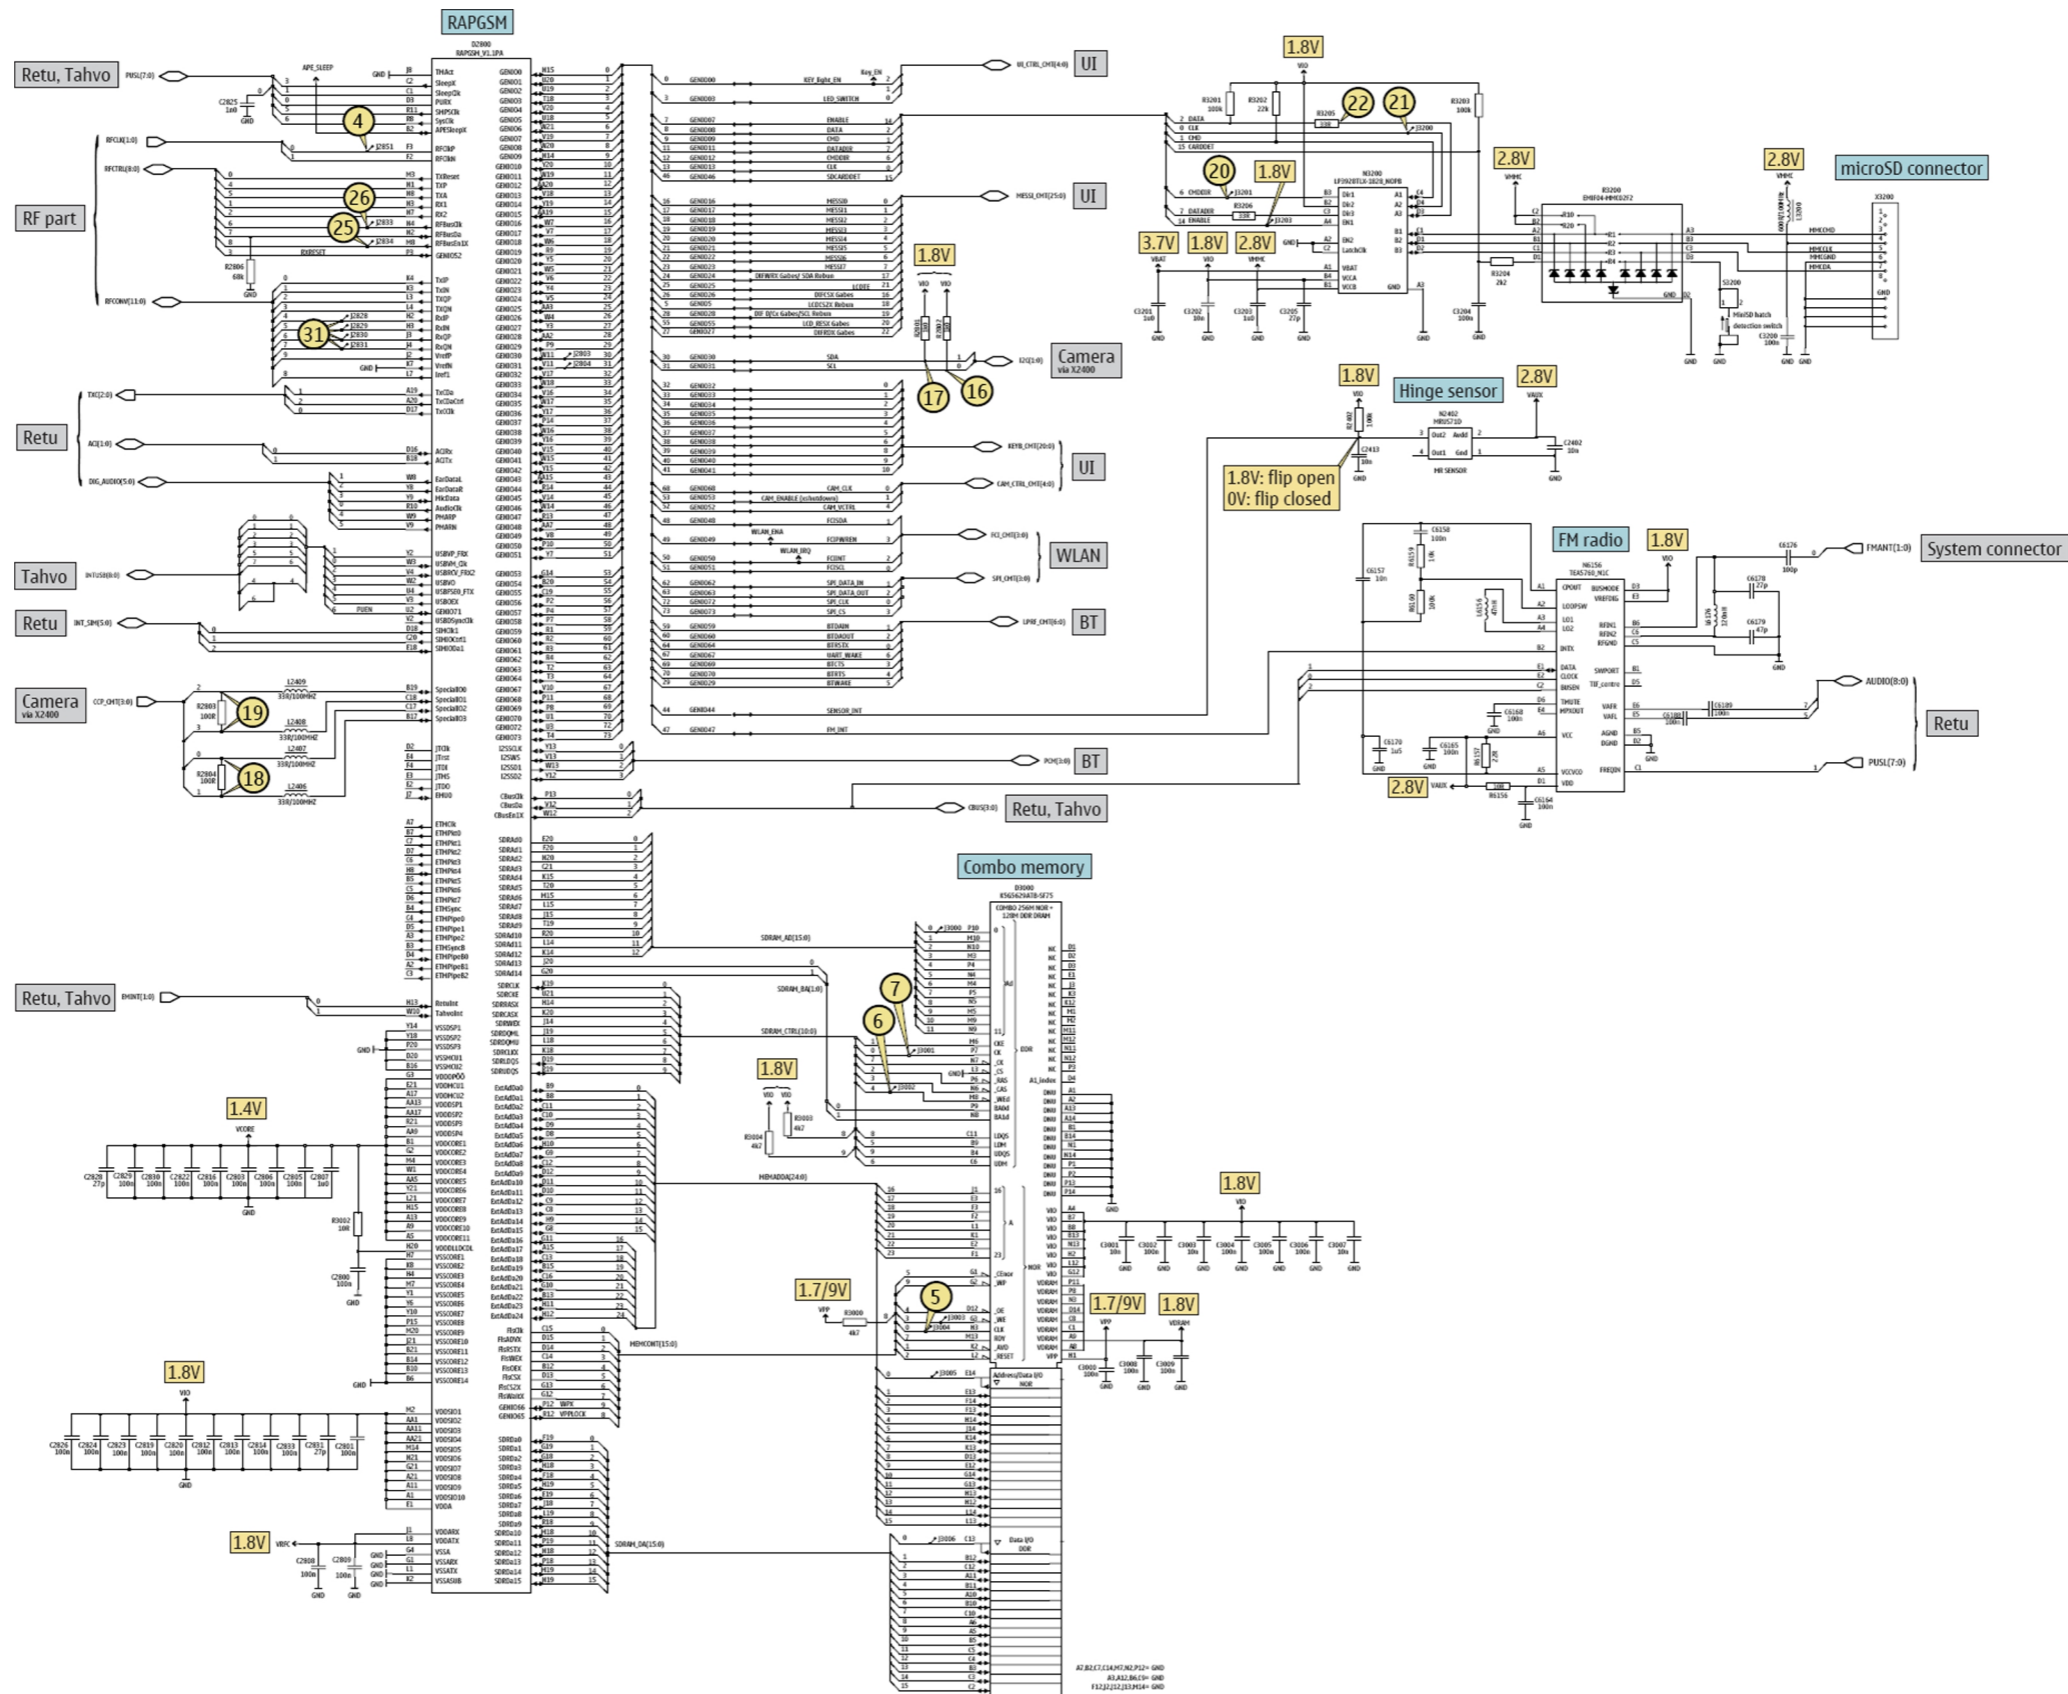


■ RM-188/198 WLAN, Bluetooth

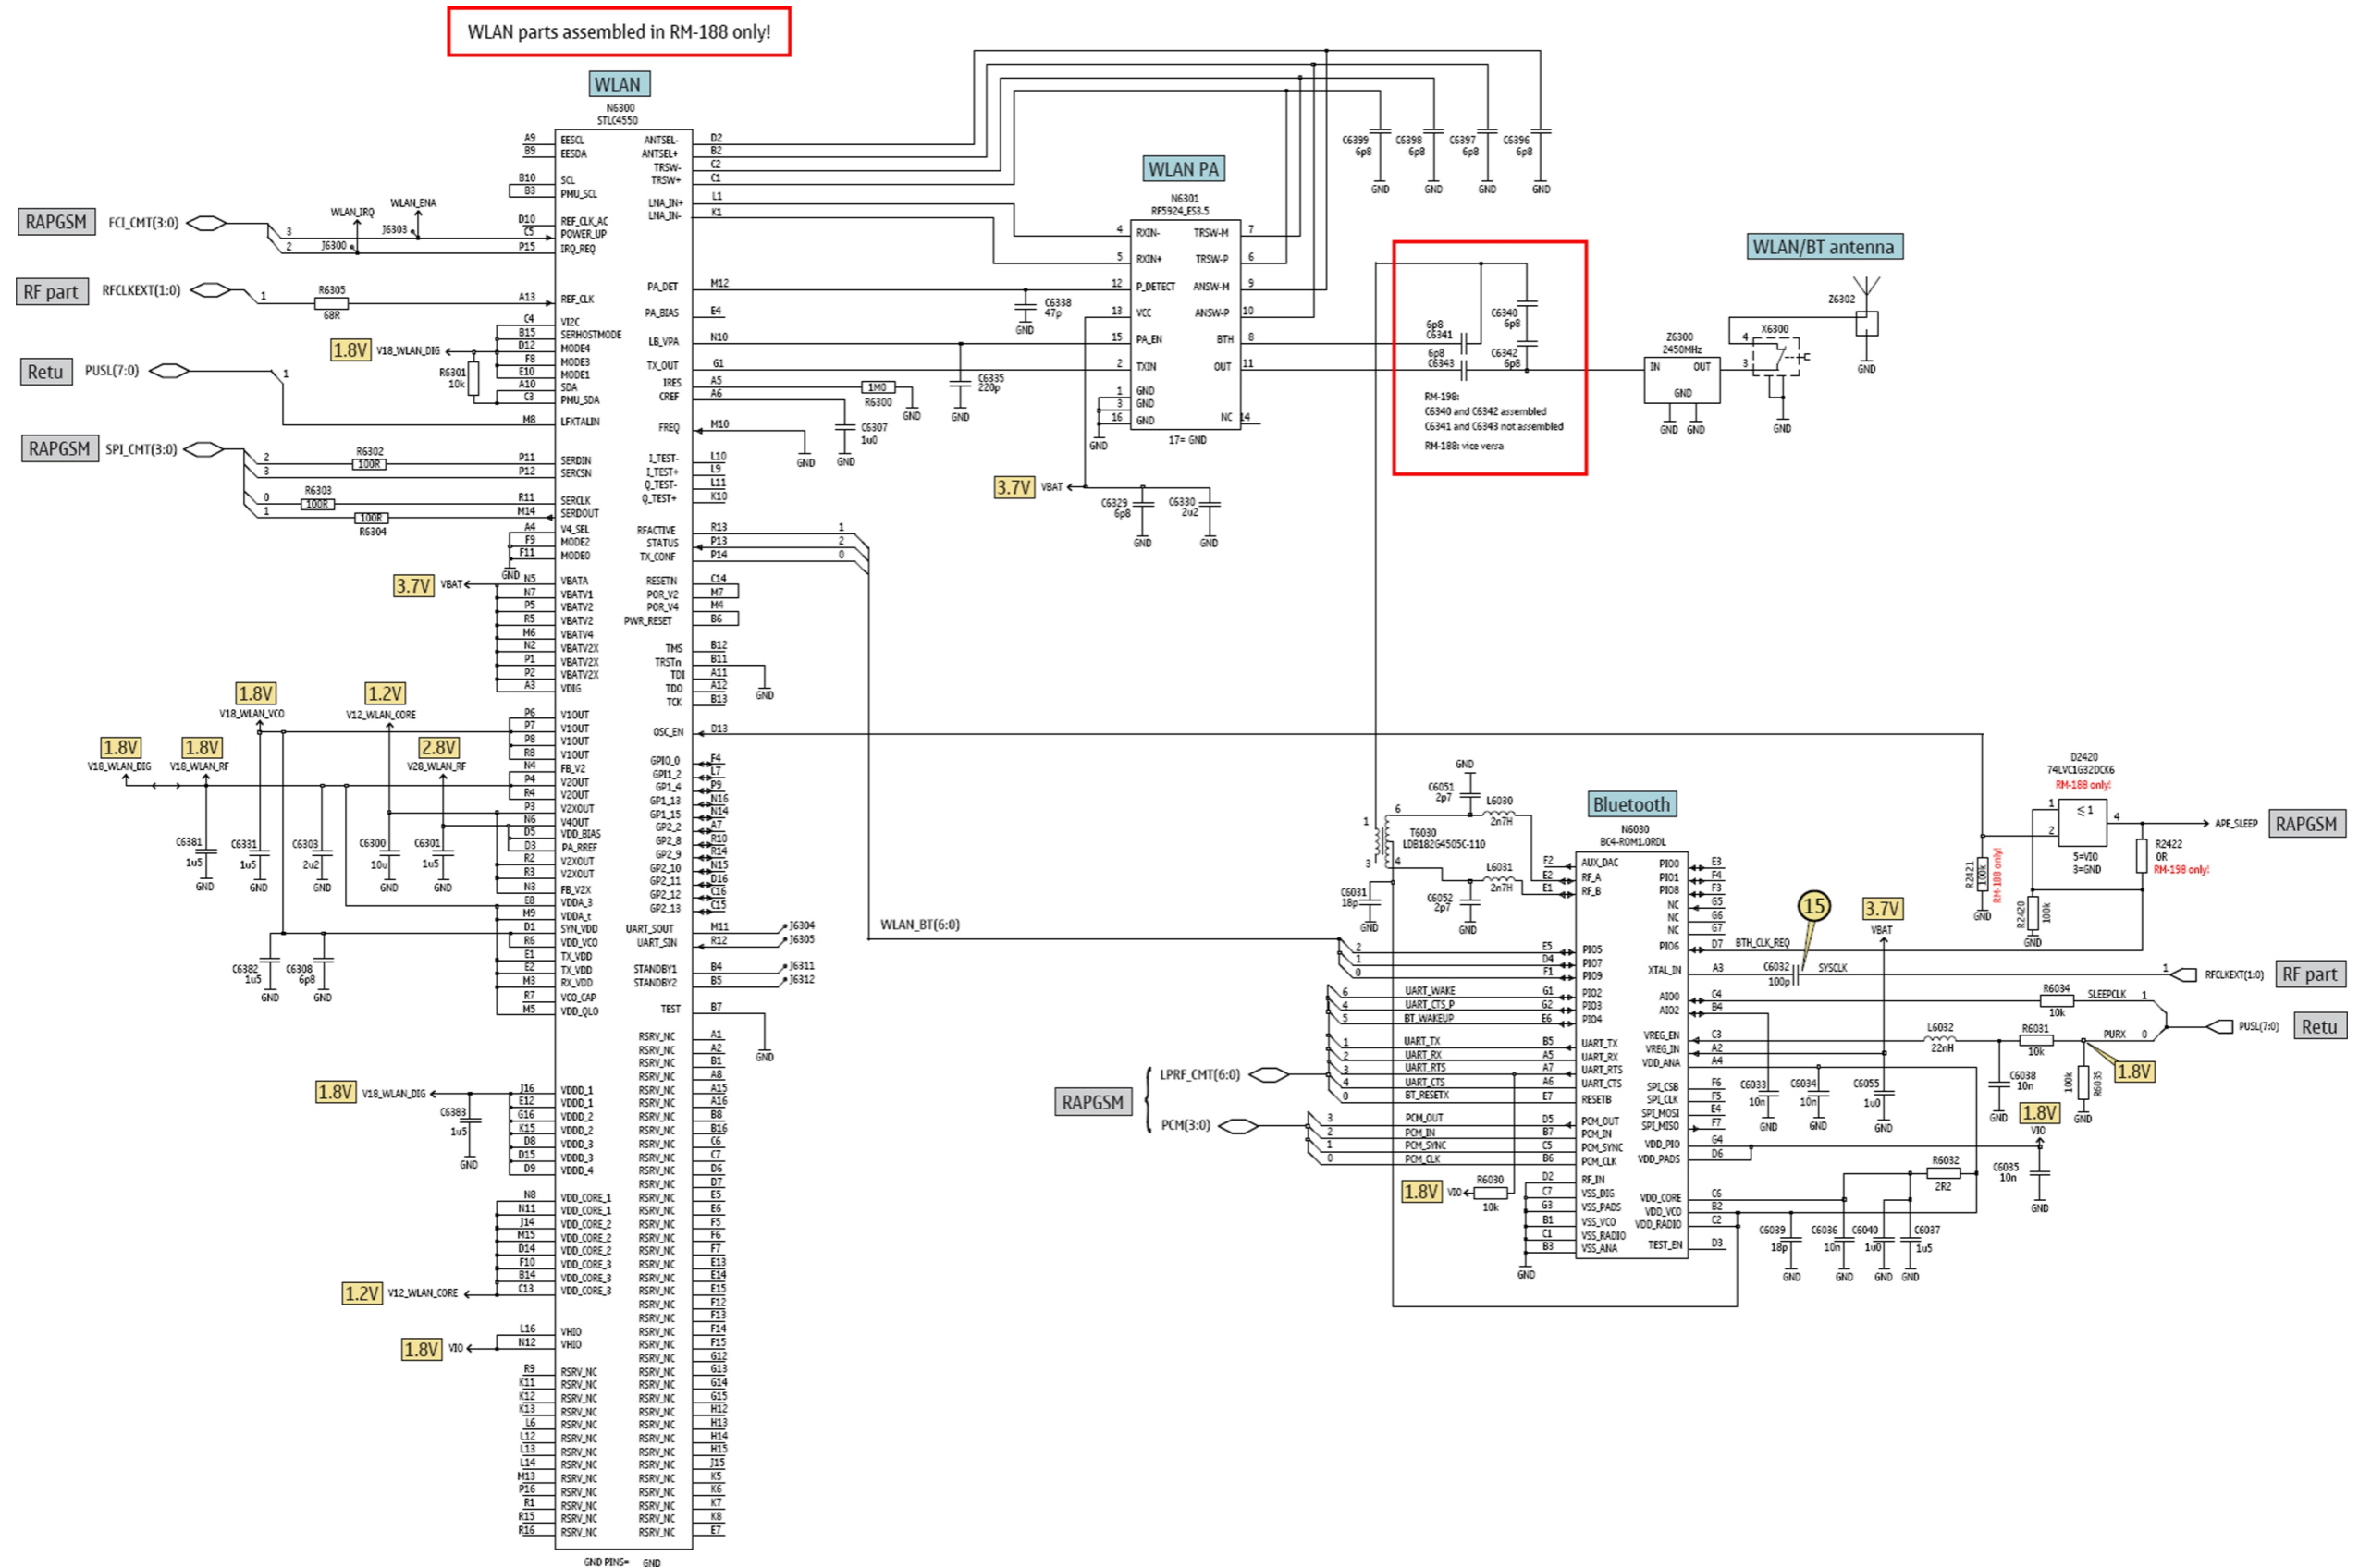


■ RM-188/198 user interface

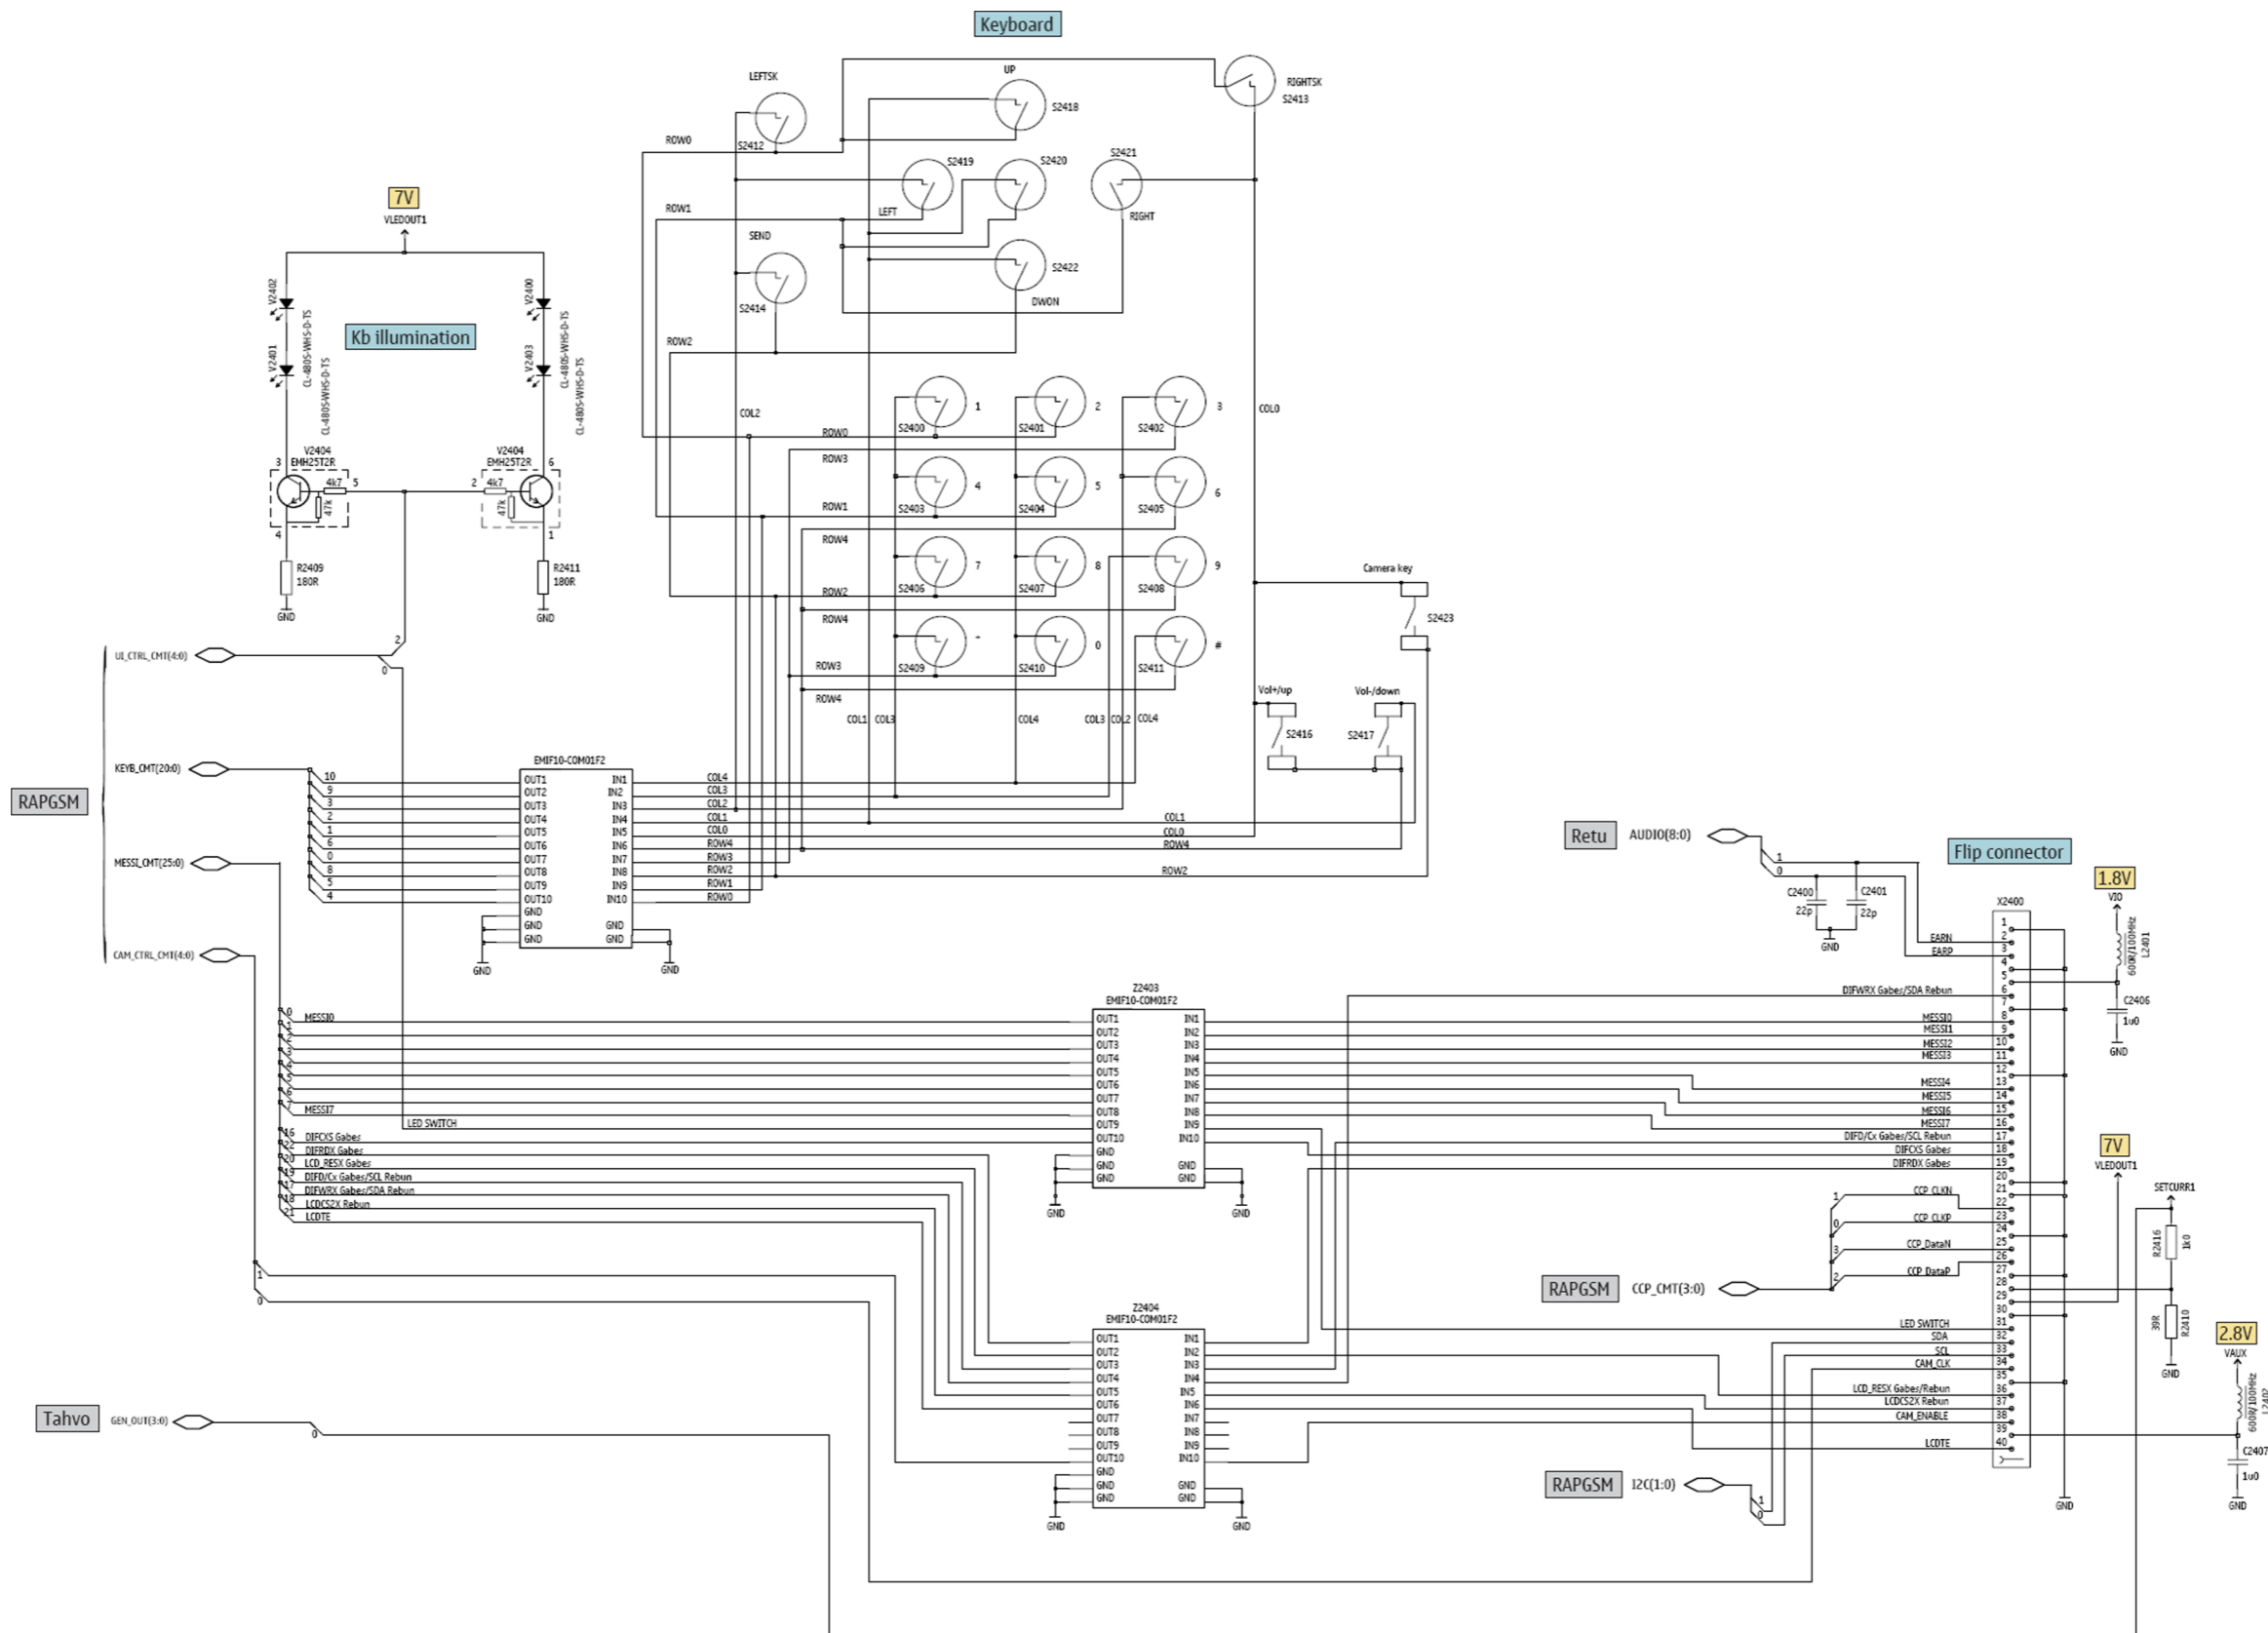




■ RM-188/198 flip PWB

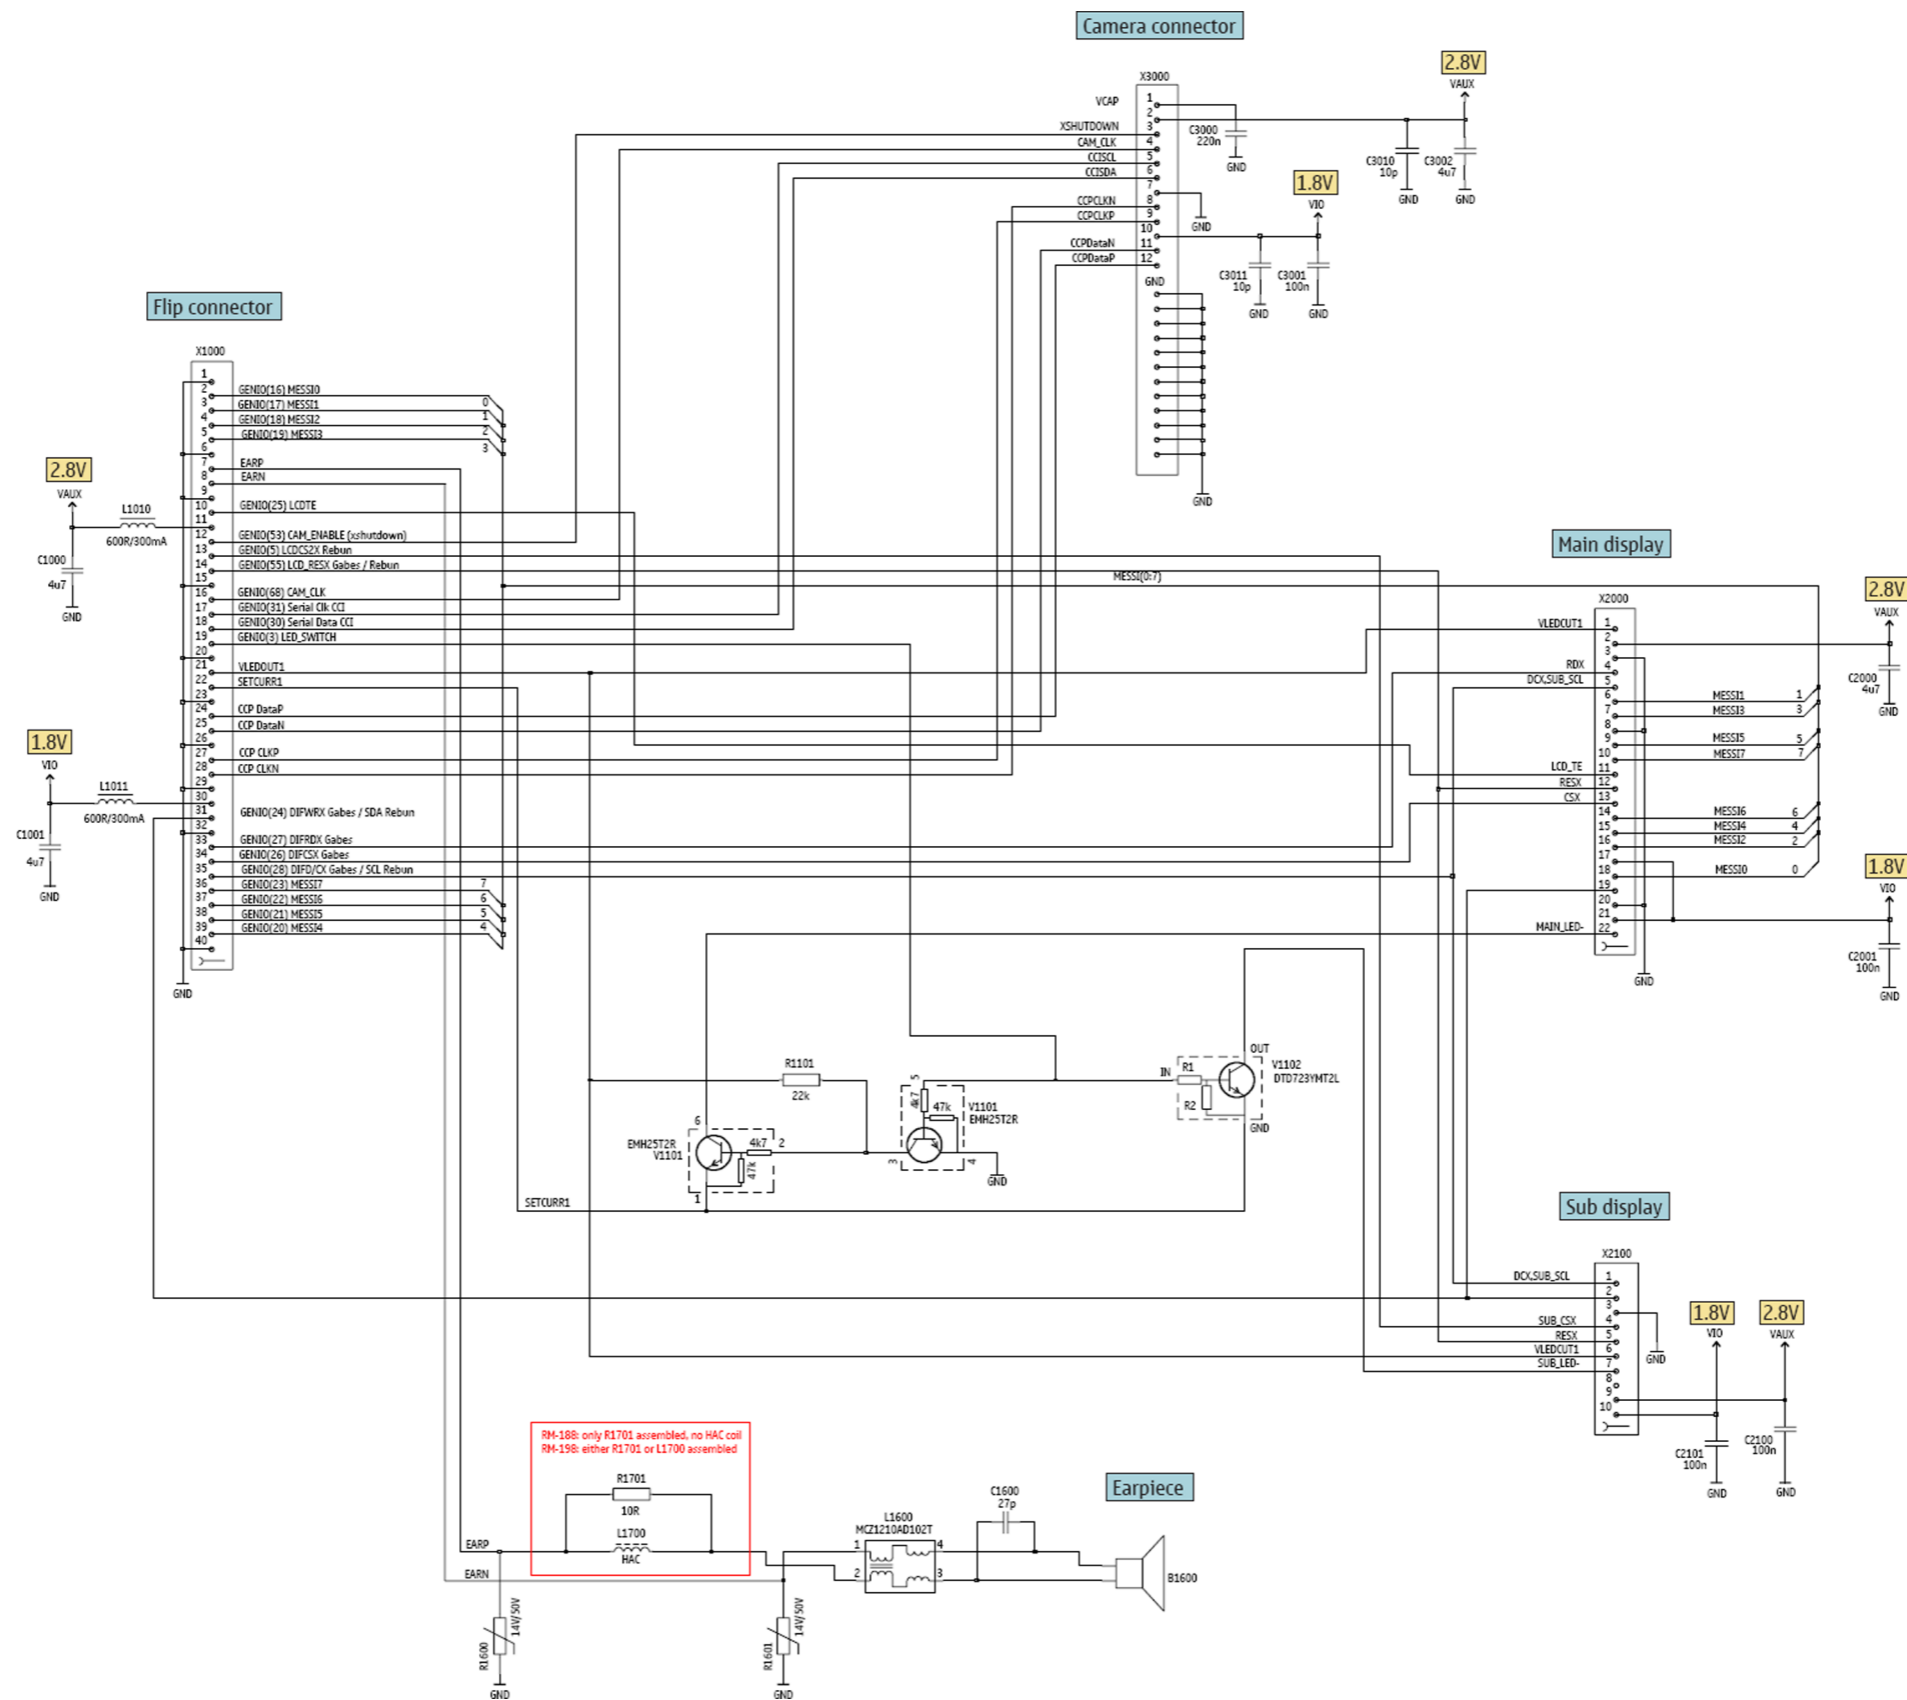

■ RM-188/198 RF part

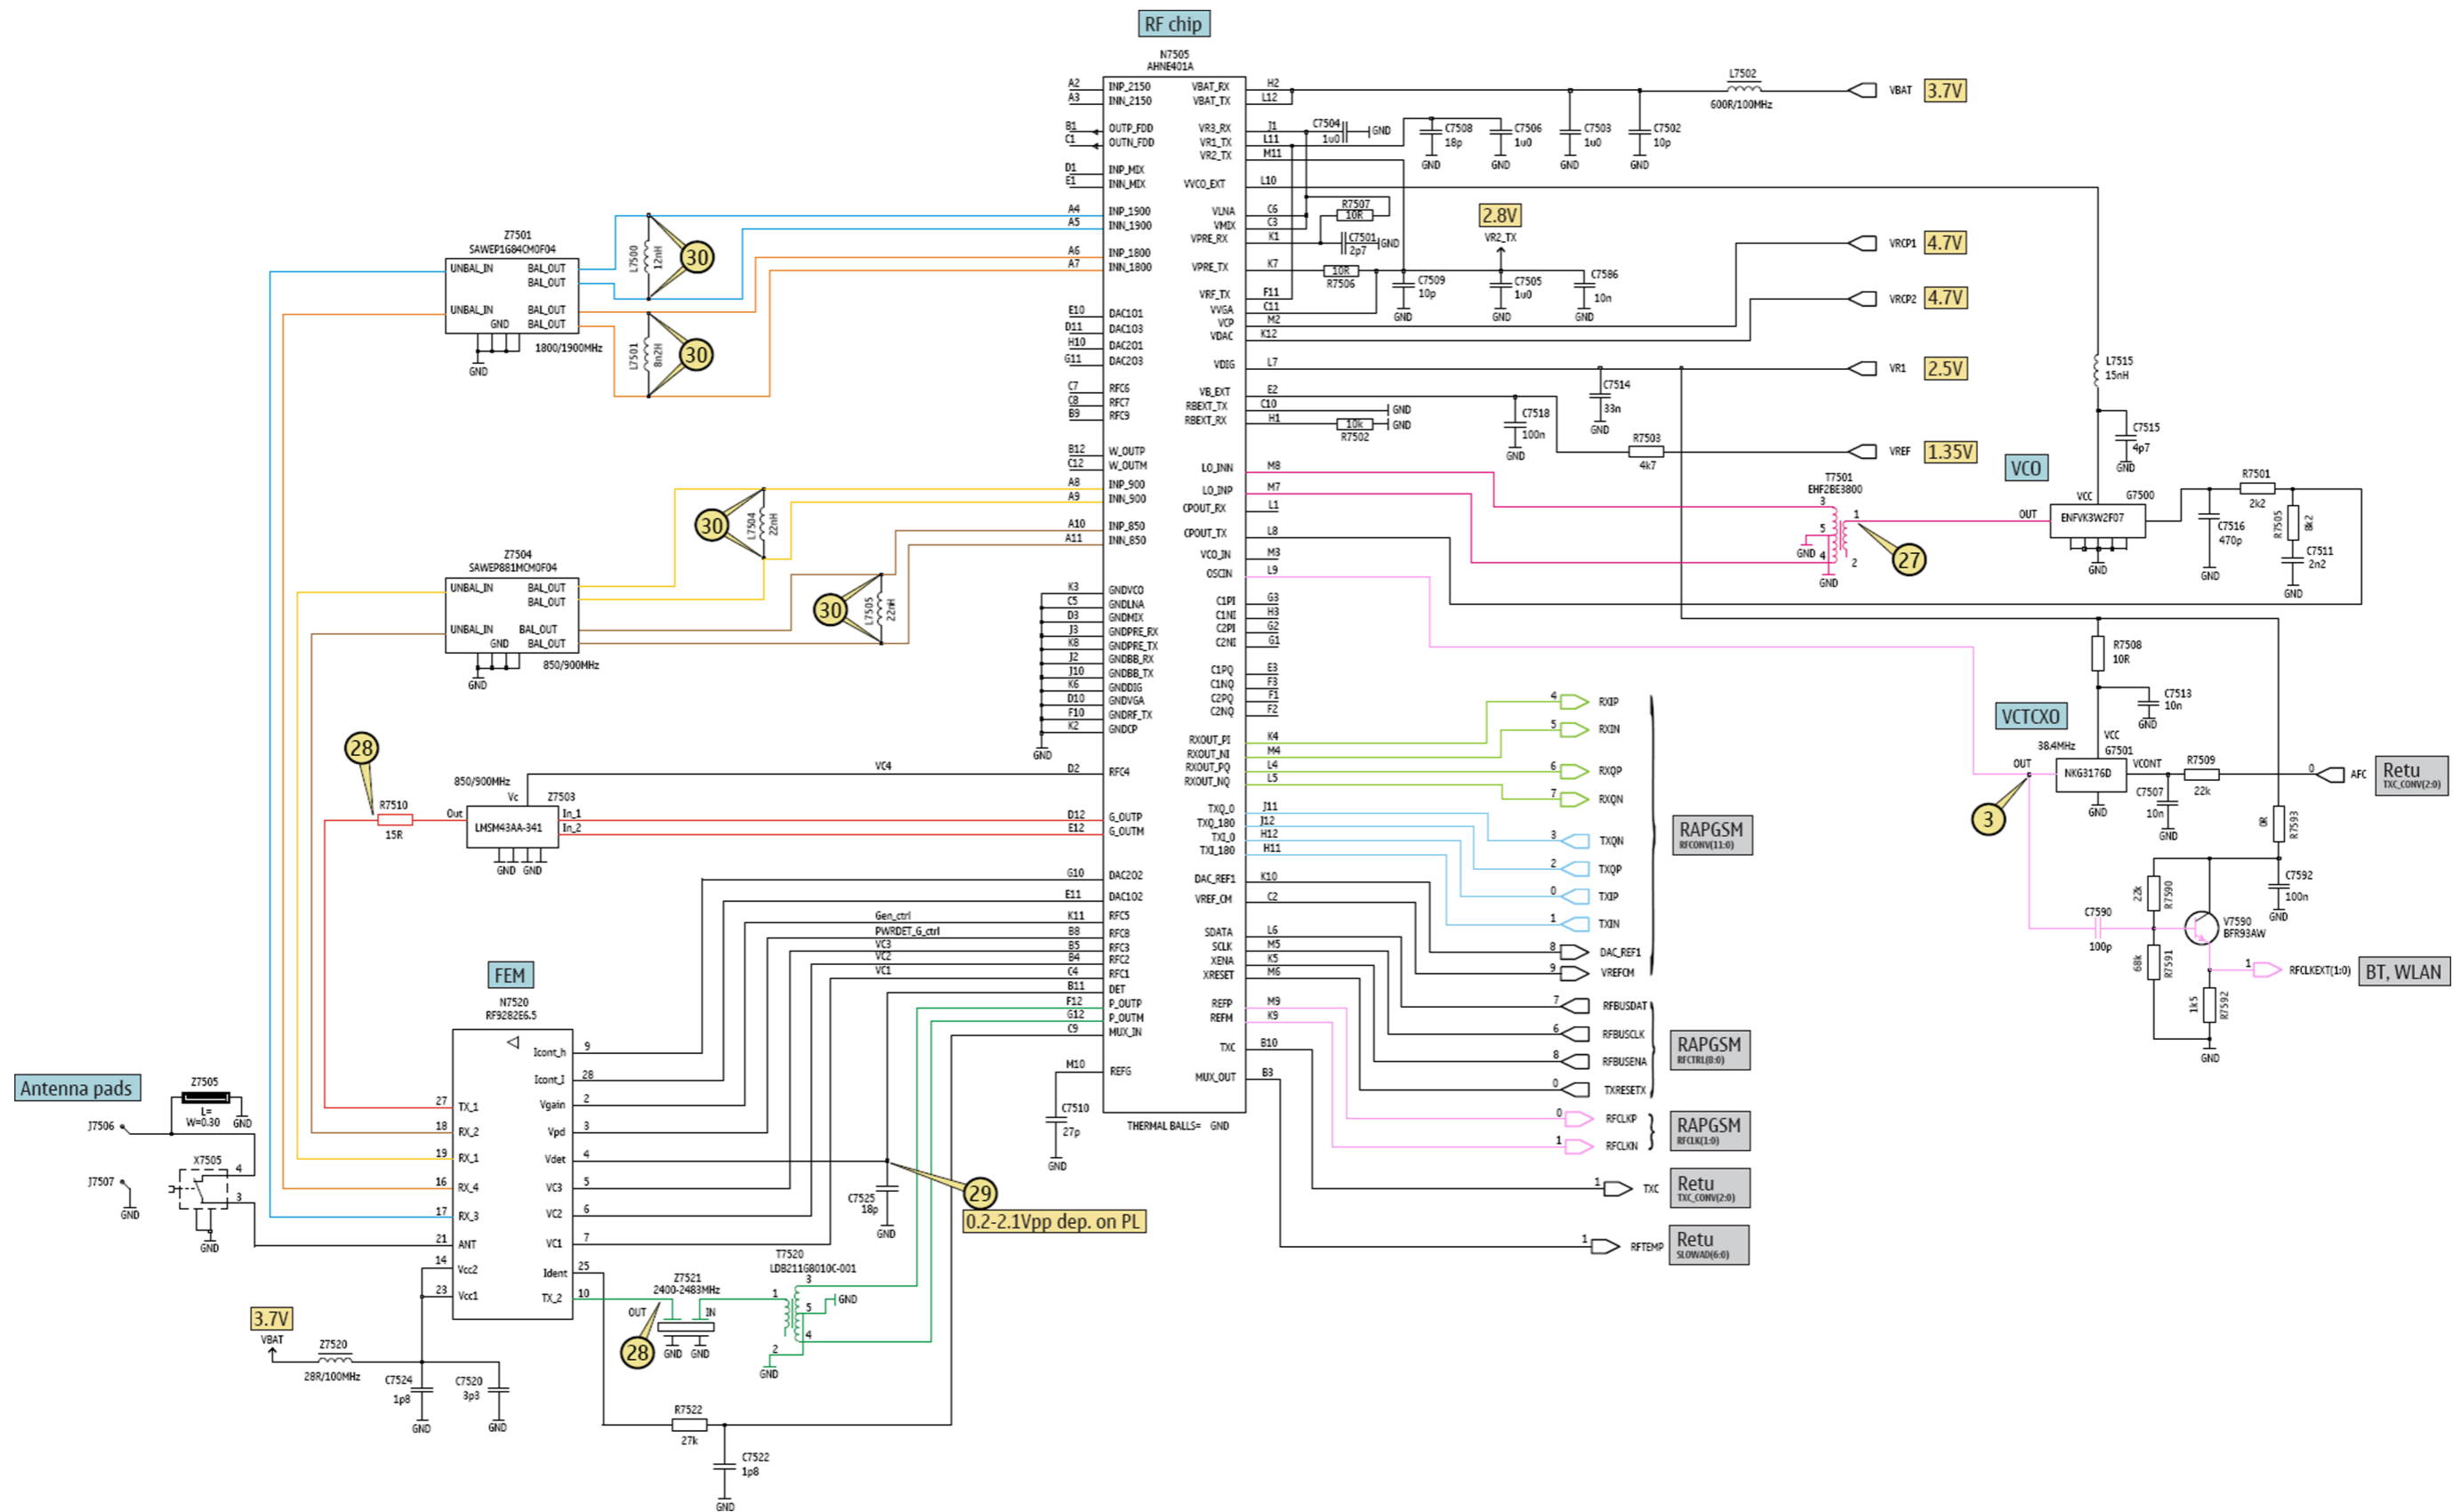


■ RM-188/198 signal overview

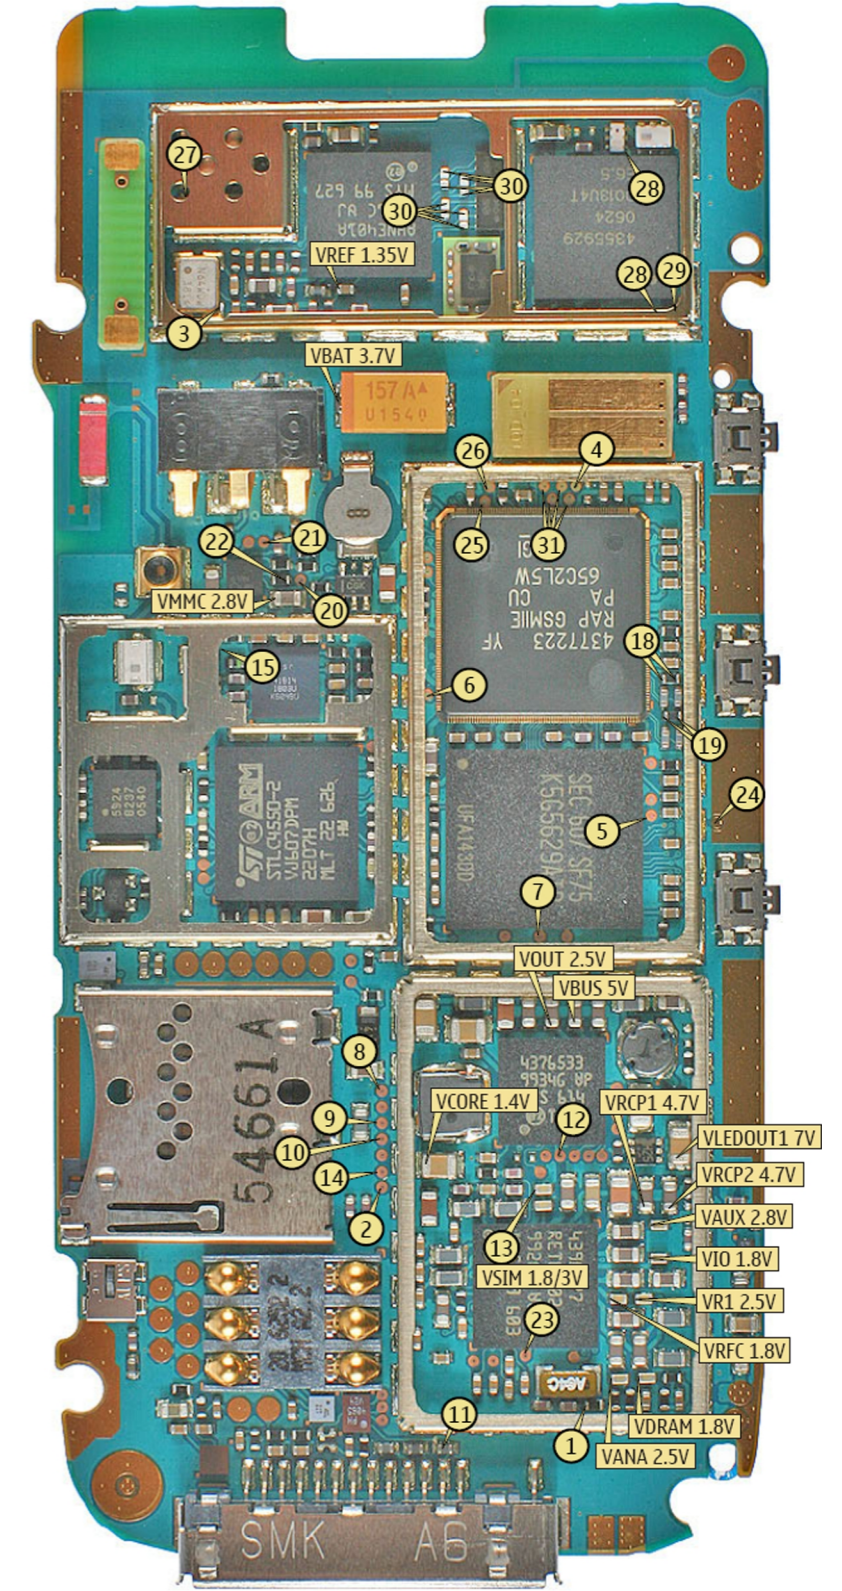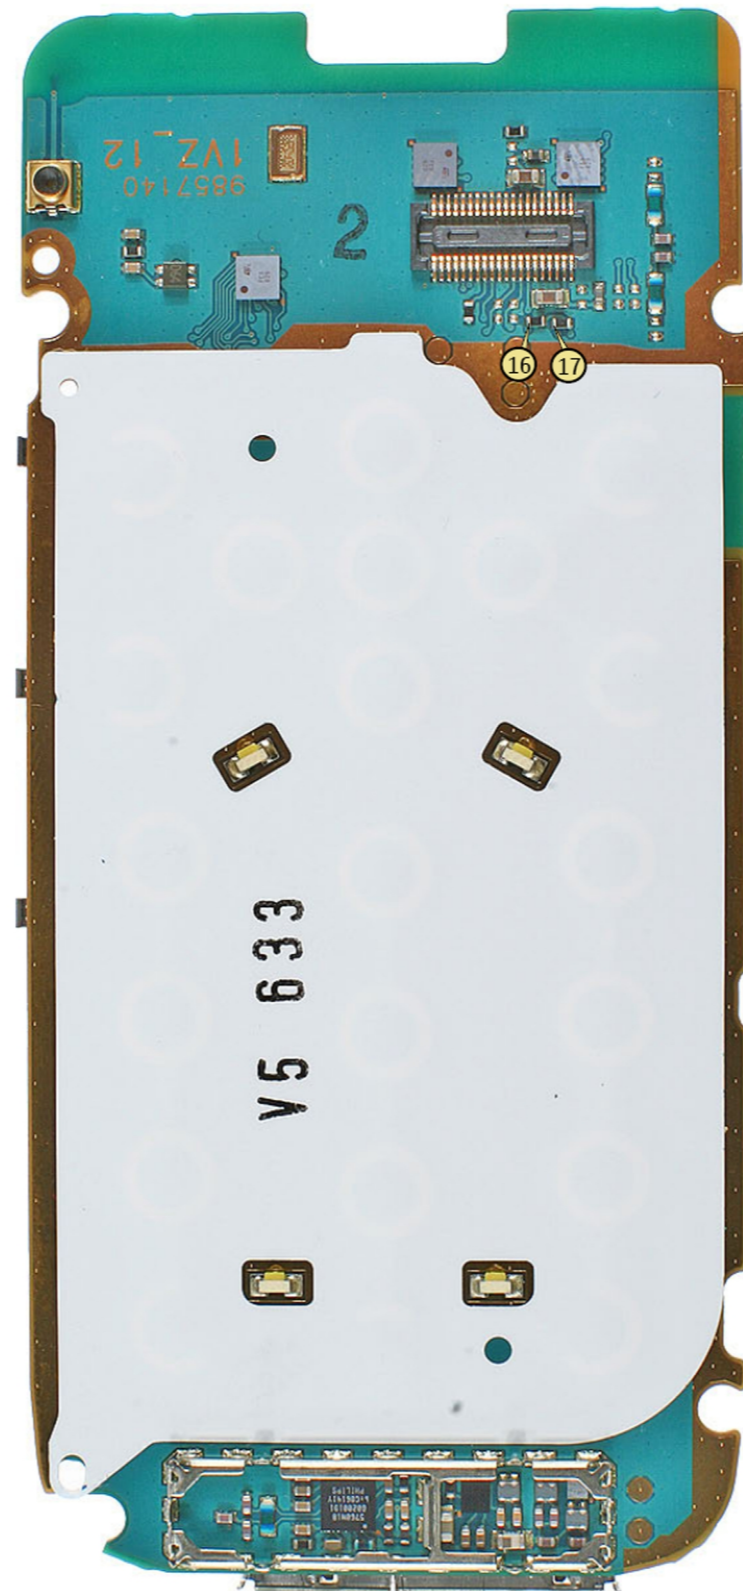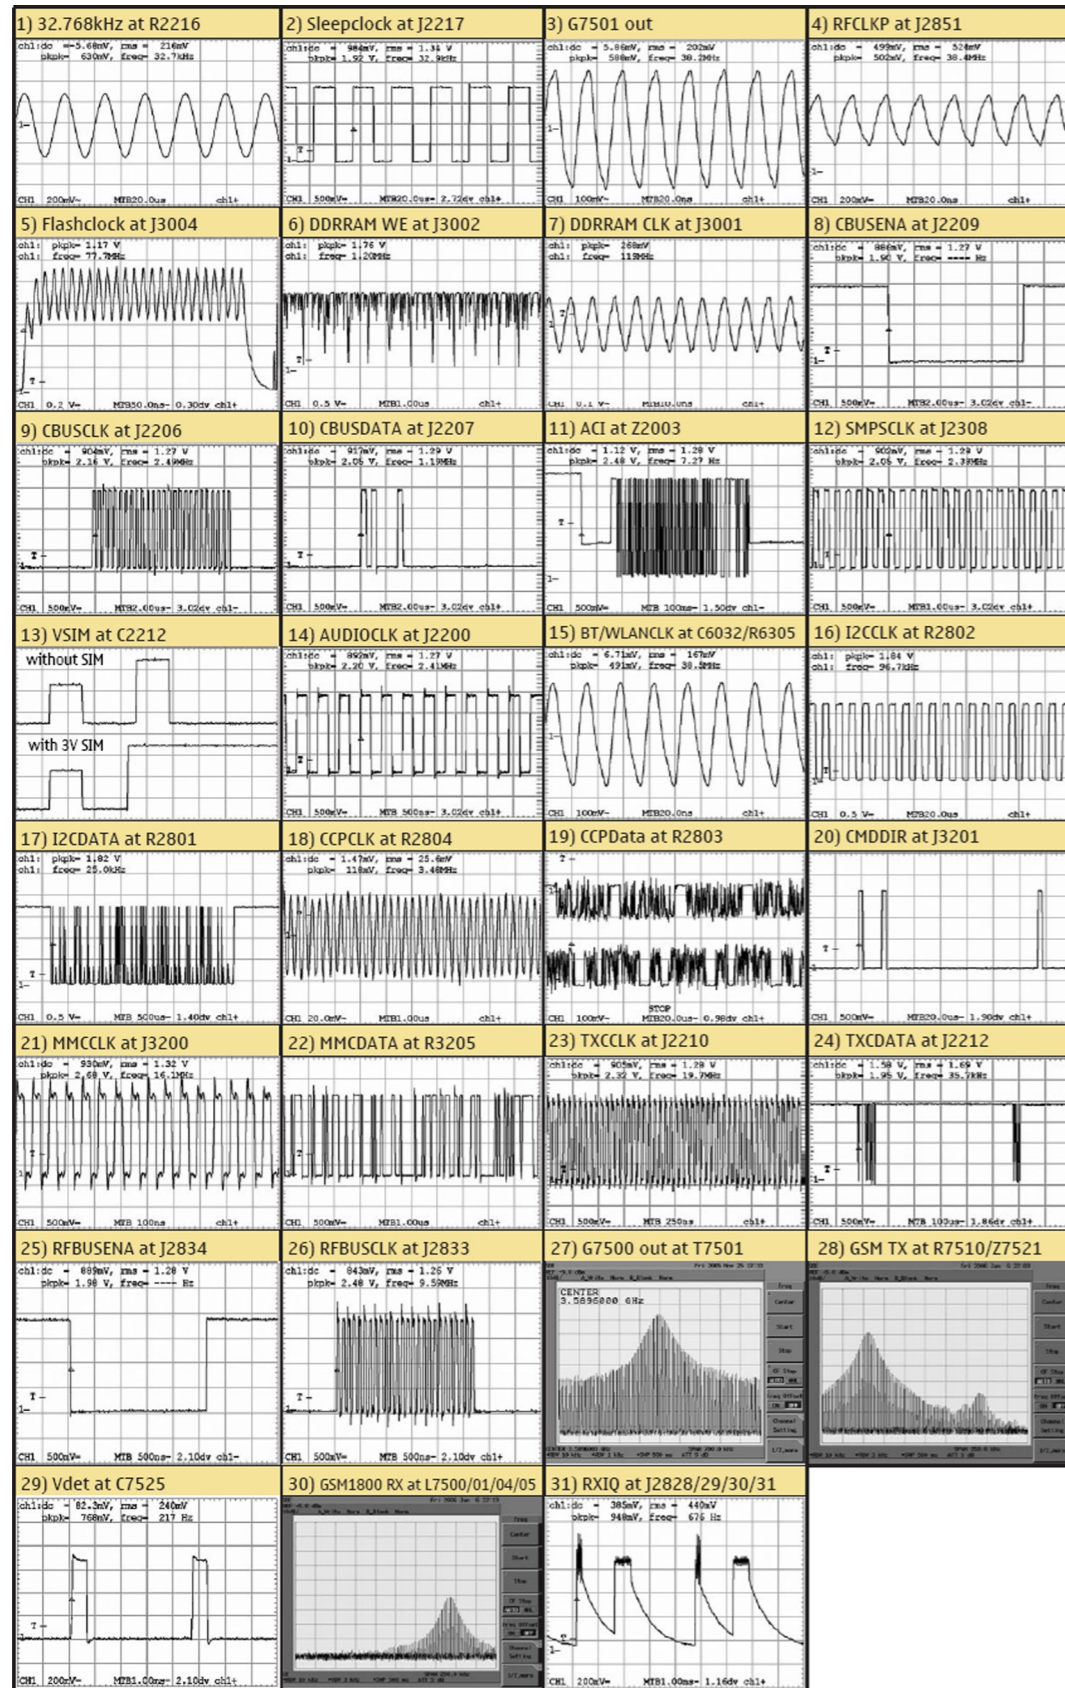

■ RM-188/198 component finder

B	C2415	B3	C7510	D4	L2003	R3	R6035	H4	
B2100	Q1	G2416	D2	C7511	C3	L2004	R3	R6156	Q4
B2200	P6	C2700	Q3	C7513	D3	L2100	D2	R6157	R6
C									
C2800	H8	C7514	D3	L2101	C2	R6159	R5		
D									
C2000	H8	C2801	F7	C7515	B3	L2202	P8	R6160	R4
C2001	H8	C2803	H8	C7516	C3	L2205	P8	R6300	J2
C2002	R4	C2805	F7	C7518	D4	L2211	M5	R6301	K3
C2003	R4	C2806	F8	C7520	B7	L2212	N6	R6302	L4
C2004	R4	C2807	I5	C7522	D6	L2270	O5	R6303	G5
C2005	R3	C2808	G8	C7523	B7	L2271	O5	R6304	I4
C2006	R3	C2809	G8	C7524	D6	L2301	L5	R6305	J2
C2007	Q2	C2812	H8	C7525	D8	L2302	M5	R7501	C3
C2008	Q3	C2813	F5	C7586	O5	L2304	M7	R7502	B4
C2009	Q3	C2814	G8	C7590	K1	L2305	L7	R7503	D4
C2010	Q3	C2815	F7	C7592	J1	L2306	M4	R7505	C3
C2011	R3	C2816	I5			L2401	B3	R7506	D3
E									
C2012	R3	C2819	I5	D2200	O5	L2402	D2	R7507	B4
C2013	R3	C2820	F6	D2200	G4	L2406	I8	R7508	D3
C2014	R3	C2822	F5	D2800	H6	L2407	I8	R7509	D3
C2015	Q4	C2823	I6	D3000	I6	L2408	I8	R7510	D7
C2016	P8	C2824	J5			L2409	I8	R7522	D7
C2017	G3	C2825	F7	F2000	F8	L3200	L2	R7590	K1
C2072	P2	C2826	I7			L6030	H3	R7591	K1
C2073	E5	C2828	I7	G2200	G4	L6031	I3	R7592	K2
C2074	F2	C2829	G8	G7500	B3	L6032	I4	R7593	J1
F									
C2100	Q2	C2830	H5	G7501	D2	L6156	R5		S
C2101	Q2	C2831	I7			L6176	R6	S2416	F8
C2102	Q2	C2833	I6	L2000	P8	L7500	C5	S2417	H8
C2103	E8	C3000	K5	L2001	Q8	L7501	C5	S2423	K8
C2104	E8	C3001	J5	L2002	P6	L7502	D4	S3200	O1
G									
C2105	D2	C3002	K5	L2003	Q3	L7503	D7		T
C2106	C2	C3003	J8	L2004	O3	L7504	C5	T6030	H2
C2200	O5	C3004	J8	L2005	R2	L7505	C5	T7501	C2
C2201	P7	C3005	J8	L2006	O2	L7515	C3	T7520	B7
H									
C2202	P8	C3006	K8	L2007	O4				V
C2203	P6	C3007	K8	L2008	O4	N2300	M6	V2000	O8
C2204	P6	C3008	J8	L2009	P4	N2301	M8	V2302	L4
C2205	P5	C3009	K8	L2060	P2	N2402	D7	V2400	O6
C2206	P6	C3200	L2	L2070	E3	N3200	G3	V2401	I6
C2207	P7	C3201	G2	L2071	E3	N6030	H3	V2402	I3
C2208	O6	C3202	G3	L2072	E4	N6156	O5	V2403	O3
C2209	O6	C3203	H3	L2200	N4	N6300	J3	V2404	N7
C2210	N7	C3204	L4	L2204	P5	N6301	J1	V7590	K1
I									
C2211	N7	C3205	G3	L2205	P6	N7505	L4		X
C2212	N6	C6031	I2	L2206	M4	N7520	C7	X2000	M4
C2213	O7	C6032	H2	L2207	M4			X2002	N7
C2214	O7	C6033	H4	L2209	M4	R2000	O4	X2000	O6
C2215	O7	C6034	H3	L2210	P6	R2001	O4	X2070	F3
C2216	O7	C6035	I4	L2212	J8	R2002	O3	X2400	C3
C2217	P7	C6036	H4	L2216	N6	R2003	O3	X2701	P3
C2218	P6	C6037	H4	L2217	N4	R2004	O2	X3200	M2
C2219	P7	C6038	H4	L2218	M4	R2005	O3	X6300	G2
C2220	N6	C6039	H3	L2219	N4	R2006	Q3	X7505	O8
J									
C2221	N8	C6040	I4	L2300	N6	R2007	O4		Z
C2222	N7	C6051	H3	L2308	N6	R2008	O4	Z2000	O5
C2223	O5	C6052	I3	L2309	M7	R2009	O4	Z2001	O4
C2224	P5	C6055	H2	L2310	M7	R2070	P2	Z2003	O5
C2225	P7	C6056	H4	L2311	N7	R2071	E3	Z2400	O6
C2226	O7	C6157	O4	L2312	N7	R2100	O2	Z2403	O4
C2227	N6	C6158	O5	L2313	N7	R2101	P2	Z2404	C2
C2228	O7	C6164	O5	L2314	N7	R2102	D2	Z6300	H2
C2229	N6	C6165	R6	L2315	M7	R2103	C2	Z6302	F1
C2230	P7	C6168	O6	L2803	G5	R2200	P8	Z7501	C6
C2231	N5	C6170	R5	L2804	G5	R2201	P7	Z7503	D5
C2232	O7	C6176	R6	L2828	F6	R2212	O5	Z7504	C6
C2233	G4	C6178	R6	L2829	F6	R2213	P7	Z7520	B6
C2270	O5	C6179	O6	L2830	F6	R2214	P8	Z7521	B7
K									
C2271	O5	C6188	O6	L2831	F6	R2216	O7		
C2272	O5	C6189	O6	L2833	F6	R2301	M8		
C2273	N6	C6190	P5	L2834	F6	R2307	L4		
C2274	N6	C6191	P5	L2851	F7	R2402	D7		
C2275	N5	C6300	K4	L3000	K6	R2403	N6		
C2281	O8	C6301	K3	L3001	K6	R2404	G1		
C2300	M5	C6303	K4	L3002	I5	R2409	N8		
C2301	L5	C6307	J2	L3003	K6	R2410	D4		
C2302	N5	C6308	I4	L3004	I7	R2411	N7		
C2303	L7	C6329	I1	L3005	I7	R2416	B3		
C2304	N6	C6330	I1	L3006	I7	R2420	H4		
C2305	L8	C6331	K4	L3112	L4	R2421	G4		
C2306	H4	C6335	J1	L3113	L3	R2422	G4		
C2307	L6	C6338	I1	L3114	L3	R2700	O4		
C2309	L5	C6340	I2	L3115	L3	R2801	D3		
C2310	L6	C6341	I2	L3116	L2	R2802	D3		
C2312	L6	C6342	I2	L3117	L2	R2803	I8		
C2313	L7	C6343	I2	L3118	L4	R2804	H8		
C2314	M7	C6381	K3	L3119	L4	R2806	F6		
C2315	N8	C6382	K3	L3200	G3	R3000	J5		
C2316	N8	C6383	I2	L3201	G3	R3002	H8		
C2317	O8	C6396	I2	L3203	G3	R3003	I8		
C2318	L8	C6397	I2	L6300	I4	R3004	K7		
C2400	N4	C6398	I2	L6303	K2	R3200	L1		
C2401	N4	C6399	J2	L6304	I4	R3201	G4		
C2402	D7	C7501	B4	L6305	I4	R3202	G3		
C2403	D2	C7502	D4	L6311	K2	R3203	K5		
C2404	D2	C7503	D3	L6312	J2	R3204	L4		
C2406	C3	C7504	B4	L7506	A8	R3205	G3		
C2407	D3	C7505	D3	L7507	C8	R3206	G4		
L									
C2410	D3	C7506	D3			R6030	H4		
C2411	D3	C7507	D3	L2000	O8	R6031	H4		
C2412	N6	C7508	D3	L2001	Q3	R6032	I4		
C2413	C7	C7509	D3	L2002	Q3	R6034	H3		

Parts marked green only are assembled in RM-198, parts marked blue only are assembled in RM-188. All other parts are for both variants!

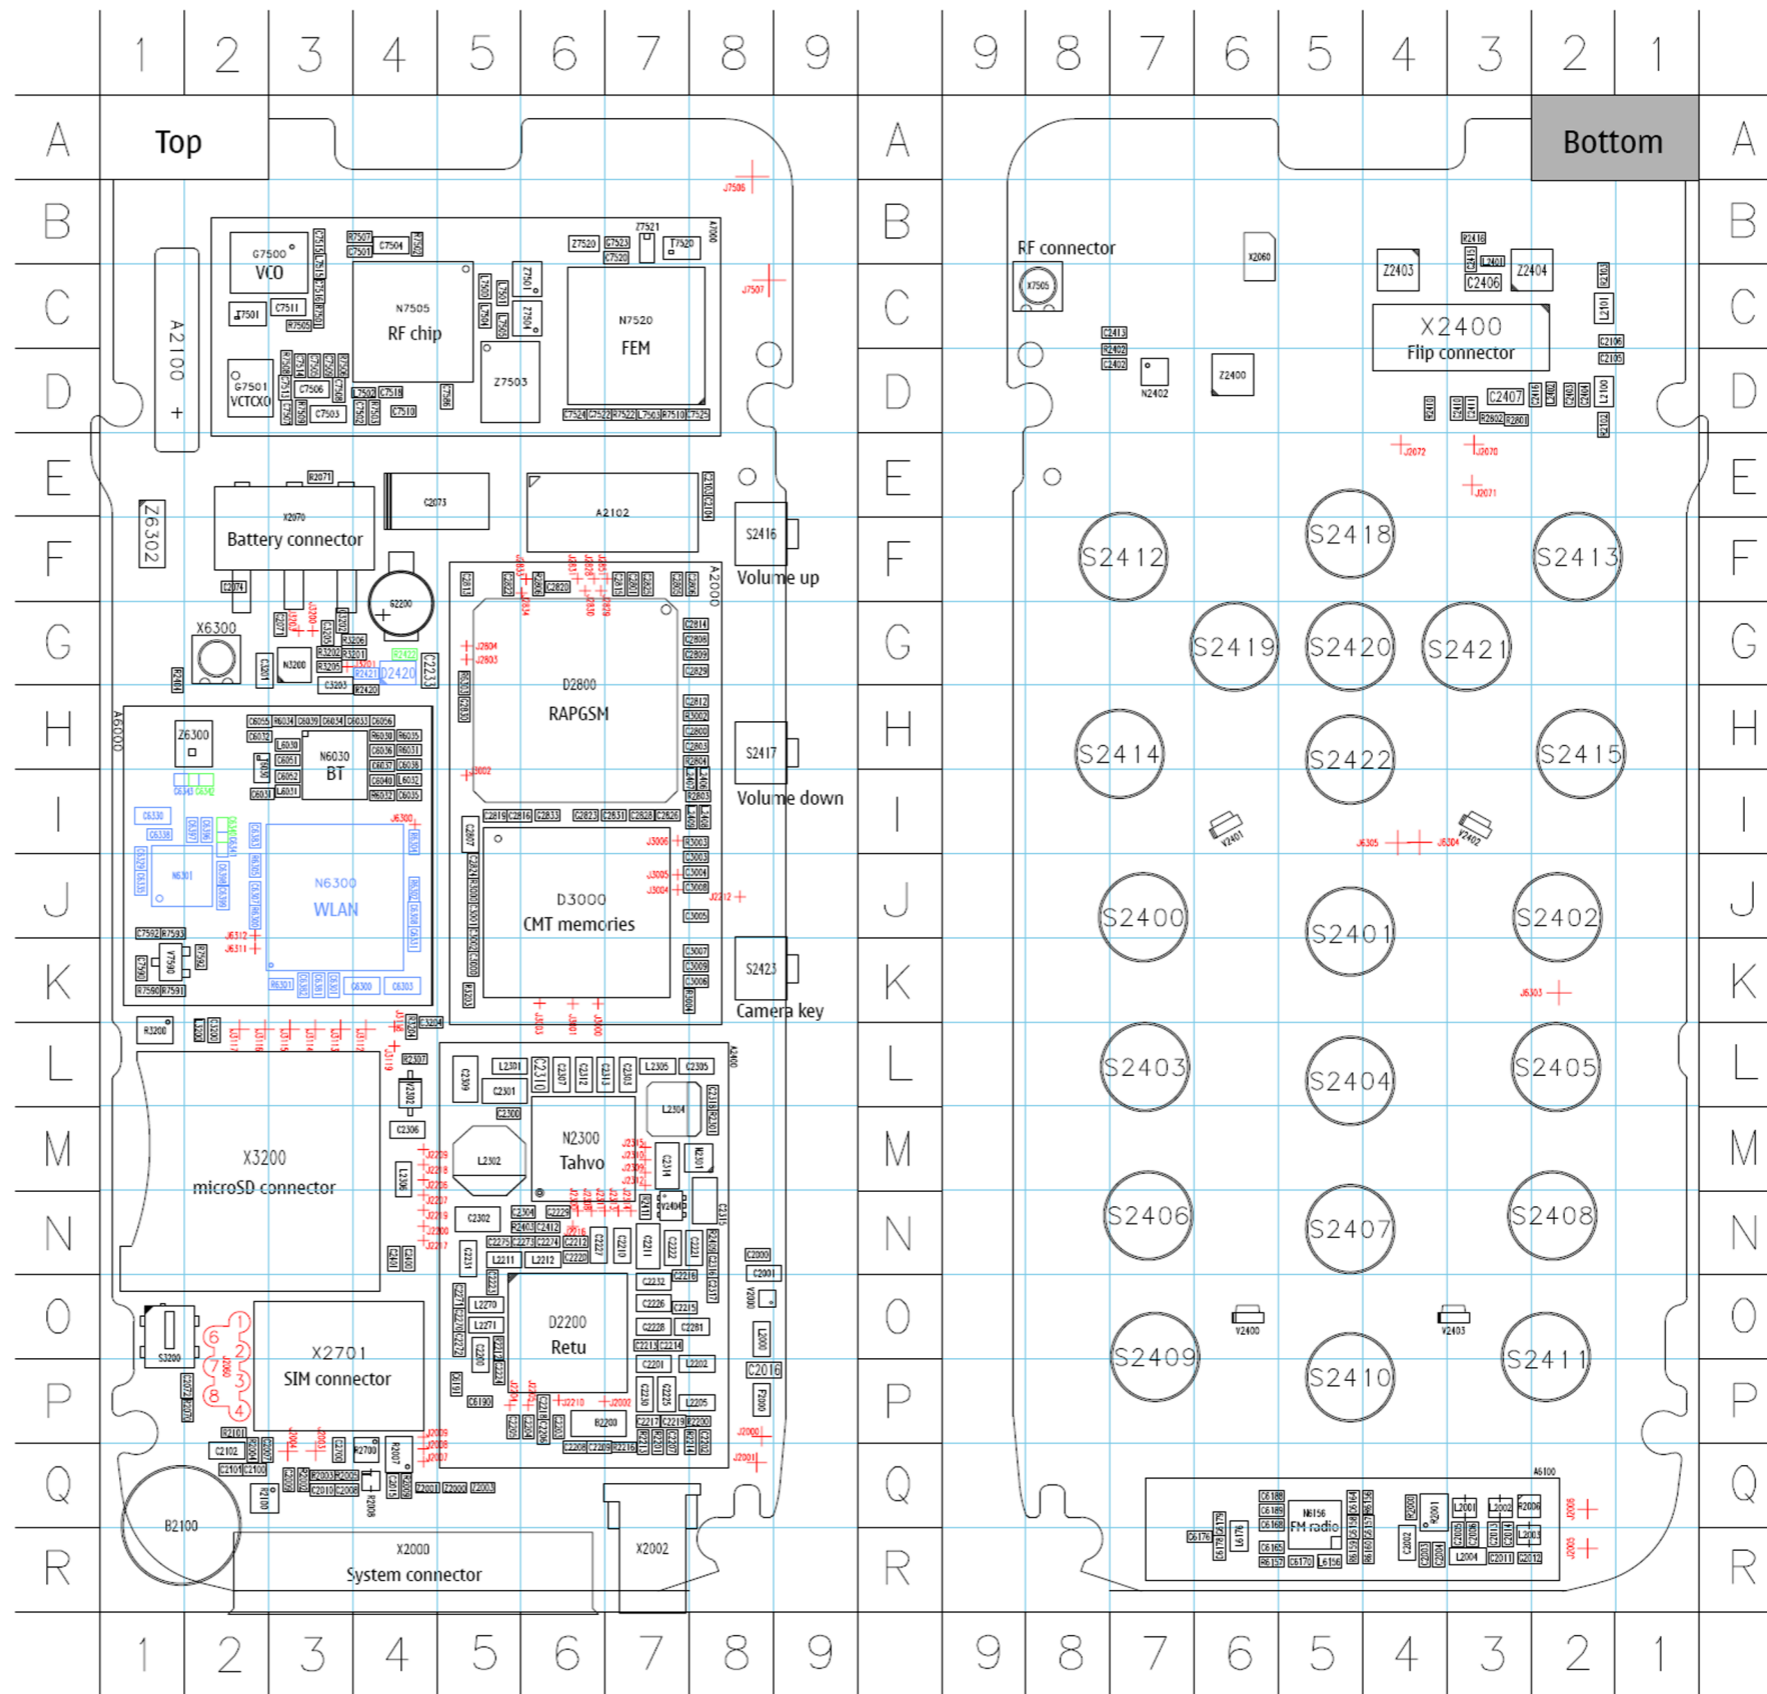

Nokia Customer Care

Glossary

(This page left intentionally blank.)

A/D-converter	Analog-to-digital converter
ACI	Accessory Control Interface
ADC	Analog-to-digital converter
ADSP	Application DPS (expected to run high level tasks)
AGC	Automatic gain control (maintains volume)
ALS	Ambient light sensor
AMSL	After Market Service Leader
ARM	Advanced RISC Machines
ARPU	Average revenue per user (per month or per year)
ASIC	Application Specific Integrated Circuit
ASIP	Application Specific Interface Protector
B2B	Board to board, connector between PWB and UI board
BB	Baseband
BC02	Bluetooth module made by CSR
BIQUAD	Bi-quadratic ,type of filter function)
BSI	Battery Size Indicator
BT	Bluetooth
CBus	MCU controlled serial bus connected to UPP_WD2,UEME and Zocus
CCP	Compact Camera Port
CDSP	Cellular DSP (expected to run at low levels)
CLDC	Connected limited device configuration
CMOS	Complimentary metal-oxide semiconductor circuit (low power consumption)
COF	Chip on Foil
COG	Chip on Glass
CPU	Central Processing Unit
CSR	cambridge silicon radio
CSTN	Color Super Twisted Nematic
CTSI	Clock Timing Sleep and interrupt block of Tiku
CW	Continuous wave
D/A-converter	Digital-to-analogue converter
DAC	Digital-to-analogue converter
DBI	Digital Battery Interface
DBus	DSP controlled serial bus connected between UPP_WD2 and Helgo
DCT-4	Digital Core Technology
DMA	Direct memory access
DP	Data Package

DPLL	Digital Phase Locked Loop
DSP	Digital Signal Processor
DtoS	Differential to Single ended
EDGE	Enhanced data rates for global/GSM evaluation
EGSM	Extended GSM
EM	Energy management
EMC	Electromagnetic compability
EMI	Electromagnetic interference
ESD	Electrostatic discharge
FCI	Functional cover interface
FPS	Flash Programming Tool
FR	Full rate
FSTN	Film compensated super twisted nematic
GND	Ground, conductive mass
GPIO	General-purpose interface bus
GPRS	General Packet Radio Service
GSM	Group Special Mobile/Global System for Mobile communication
HF	Hands free
HFCM	Handsfree Common
HS	Handset
HSCSD	High speed circuit switched data (data transmission connection faster than GSM)
HW	Hardware
I/O	Input/Output
IBAT	Battery current
IC	Integrated circuit
ICHA	Charger current
IF	Interface
IHF	Integrated hands free
IMEI	International Mobile Equipment Identity
IR	Infrared
IrDA	Infrared Data Association
ISA	Intelligent software architecture
JPEG/JPG	Joint Photographic Experts Group
LCD	Liquid Crystal Display
LDO	Low Drop Out
LED	Light-emitting diode

LPRF	Low Power Radio Frequency
MCU	Micro Controller Unit (microprocessor)
MCU	Multiport control unit
MIC, mic	Microphone
MIDP	Mobile Information Device Profile
MIN	Mobile identification number
MIPS	Million instructions per second
MMC	Multimedia card
MMS	Multimedia messaging service
NTC	Negative temperature coefficient, temperature sensitive resistor used as a temperature sensor
OMA	Object management architecture
OMAP	Operations, maintenance, and administration part
Opamp	Operational Amplifier
PA	Power amplifier
PDA	Pocket Data Application
PDA	Personal digital assistant
PDRAM	Program/Data RAM (on chip in Tiku)
Phoenix	Software tool of DCT4.x
PIM	Personal Information Management
PLL	Phase locked loop
PM	(Phone) Permanent memory
PUP	General Purpose IO (PIO), USARTS and Pulse Width Modulators
PURX	Power-up reset
PWB	Printed Wiring Board
PWM	Pulse width modulation
RC-filter	Resistance-Capacitance filter
RF	Radio Frequency
RF PopPort TM	Reduced function PopPortTM interface
RFBUS	Serial control Bus For RF
RSK	Right Soft Key
RS-MMC	Reduced size Multi Media Card
RSSI	Receiving signal strength indicator
RST	Reset Switch
RTC	Real Time Clock (provides date and time)
RX	Radio Receiver

SARAM	Single Access RAM
SAW filter	Surface Acoustic Wave filter
SDRAM	Synchronous Dynamic Random Access Memory
SID	Security ID
SIM	Subscriber Identity Module
SMPS	Switched Mode Power Supply
SNR	Signal-to-noise ratio
SPR	Standard Product requirements
SRAM	Static random access memory
STI	Serial Trace Interface
SW	Software
SWIM	Subscriber/Wallet Identification Module
TCXO	Temperature controlled Oscillator
Tiku	Finnish for Chip, Successor of the UPP
TX	Radio Transmitter
UART	Universal asynchronous receiver/transmitter
UEME	Universal Energy Management chip (Enhanced version)
UEMEK	See UEME
UI	User Interface
UPP	Universal Phone Processor
UPP_WD2	Communicator version of DCT4 system ASIC
USB	Universal Serial Bus
VBAT	Battery voltage
VCHAR	Charger voltage
VCO	Voltage controlled oscillator
VCTCXO	Voltage Controlled Temperature Compensated Crystal Oscillator
VCXO	Voltage Controlled Crystal Oscillator
Vp-p	Peak-to-peak voltage
VSIM	SIM voltage
WAP	Wireless application protocol
WD	Watchdog
XHTML	Extensible hypertext markup language
Zocus	Current sensor, (used to monitor the current flow to and from the battery)