

**Nokia Customer Care**

# ***Service Manual***

**RM-217; RM-222 (Nokia 6300; Nokia 6300b)**

## **Mobile Terminal**

***Part No: 9255319 (Issue 1)***

***COMPANY CONFIDENTIAL***

**NOKIA**

Copyright © 2007 Nokia. All rights reserved.

**Amendment Record Sheet**

| Amendment No | Date    | Inserted By | Comments |
|--------------|---------|-------------|----------|
| Issue 1      | 01/2007 | ET          |          |

## Copyright

Copyright © 2007 Nokia. All rights reserved.

Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of Nokia is prohibited.

Nokia, Nokia Connecting People, and Nokia X and Y are trademarks or registered trademarks of Nokia Corporation. Other product and company names mentioned herein may be trademarks or tradenames of their respective owners.

Nokia operates a policy of continuous development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice.

Under no circumstances shall Nokia be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. Nokia reserves the right to revise this document or withdraw it at any time without prior notice.

The availability of particular products may vary by region.

## **IMPORTANT**

This document is intended for use by qualified service personnel only.

## Warnings and cautions

### Warnings

- IF THE DEVICE CAN BE INSTALLED IN A VEHICLE, CARE MUST BE TAKEN ON INSTALLATION IN VEHICLES FITTED WITH ELECTRONIC ENGINE MANAGEMENT SYSTEMS AND ANTI-SKID BRAKING SYSTEMS. UNDER CERTAIN FAULT CONDITIONS, EMITTED RF ENERGY CAN AFFECT THEIR OPERATION. IF NECESSARY, CONSULT THE VEHICLE DEALER/MANUFACTURER TO DETERMINE THE IMMUNITY OF VEHICLE ELECTRONIC SYSTEMS TO RF ENERGY.
- THE PRODUCT MUST NOT BE OPERATED IN AREAS LIKELY TO CONTAIN POTENTIALLY EXPLOSIVE ATMOSPHERES, FOR EXAMPLE, PETROL STATIONS (SERVICE STATIONS), BLASTING AREAS ETC.
- OPERATION OF ANY RADIO TRANSMITTING EQUIPMENT, INCLUDING CELLULAR TELEPHONES, MAY INTERFERE WITH THE FUNCTIONALITY OF INADEQUATELY PROTECTED MEDICAL DEVICES. CONSULT A PHYSICIAN OR THE MANUFACTURER OF THE MEDICAL DEVICE IF YOU HAVE ANY QUESTIONS. OTHER ELECTRONIC EQUIPMENT MAY ALSO BE SUBJECT TO INTERFERENCE.
- BEFORE MAKING ANY TEST CONNECTIONS, MAKE SURE YOU HAVE SWITCHED OFF ALL EQUIPMENT.

### Cautions

- Servicing and alignment must be undertaken by qualified personnel only.
- Ensure all work is carried out at an anti-static workstation and that an anti-static wrist strap is worn.
- Ensure solder, wire, or foreign matter does not enter the telephone as damage may result.
- Use only approved components as specified in the parts list.
- Ensure all components, modules, screws and insulators are correctly re-fitted after servicing and alignment.
- Ensure all cables and wires are repositioned correctly.
- During testing never activate the GSM transmitter without a proper antenna load, otherwise the GSM PA may be damaged.

## **For your safety**

### **QUALIFIED SERVICE**

Only qualified personnel may install or repair phone equipment.

### **ACCESSORIES AND BATTERIES**

Use only approved accessories and batteries. Do not connect incompatible products.

### **CONNECTING TO OTHER DEVICES**

When connecting to any other device, read its user's guide for detailed safety instructions. Do not connect incompatible products.

## Care and maintenance

This product is of superior design and craftsmanship and should be treated with care. The suggestions below will help you to fulfil any warranty obligations and to enjoy this product for many years.

- Keep the phone and all its parts and accessories out of the reach of small children.
- Keep the phone dry. Precipitation, humidity and all types of liquids or moisture can contain minerals that will corrode electronic circuits.
- Do not use or store the phone in dusty, dirty areas. Its moving parts can be damaged.
- Do not store the phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the phone in cold areas. When it warms up (to its normal temperature), moisture can form inside, which may damage electronic circuit boards.
- Do not drop, knock or shake the phone. Rough handling can break internal circuit boards.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the phone.
- Do not paint the phone. Paint can clog the moving parts and prevent proper operation.
- Use only the supplied or an approved replacement antenna. Unauthorised antennas, modifications or attachments could damage the phone and may violate regulations governing radio devices.

All of the above suggestions apply equally to the product, battery, charger or any accessory.

## **ESD protection**

Nokia requires that service points have sufficient ESD protection (against static electricity) when servicing the phone.

Any product of which the covers are removed must be handled with ESD protection. The SIM card can be replaced without ESD protection if the product is otherwise ready for use.

To replace the covers ESD protection must be applied.

All electronic parts of the product are susceptible to ESD. Resistors, too, can be damaged by static electricity discharge.

All ESD sensitive parts must be packed in metallized protective bags during shipping and handling outside any ESD Protected Area (EPA).

Every repair action involving opening the product or handling the product components must be done under ESD protection.

ESD protected spare part packages **MUST NOT** be opened/closed out of an ESD Protected Area.

For more information and local requirements about ESD protection and ESD Protected Area, contact your local Nokia After Market Services representative.

## Battery information

**Note:** A new battery's full performance is achieved only after two or three complete charge and discharge cycles!

The battery can be charged and discharged hundreds of times but it will eventually wear out. When the operating time (talk-time and standby time) is noticeably shorter than normal, it is time to buy a new battery.

Use only batteries approved by the phone manufacturer and recharge the battery only with the chargers approved by the manufacturer. Unplug the charger when not in use. Do not leave the battery connected to a charger for longer than a week, since overcharging may shorten its lifetime. If left unused a fully charged battery will discharge itself over time.

Temperature extremes can affect the ability of your battery to charge.

For good operation times with Ni-Cd/NiMH batteries, discharge the battery from time to time by leaving the product switched on until it turns itself off (or by using the battery discharge facility of any approved accessory available for the product). Do not attempt to discharge the battery by any other means.

Use the battery only for its intended purpose.

Never use any charger or battery which is damaged.

Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object (coin, clip or pen) causes direct connection of the + and - terminals of the battery (metal strips on the battery) for example when you carry a spare battery in your pocket or purse. Short-circuiting the terminals may damage the battery or the connecting object.

Leaving the battery in hot or cold places, such as in a closed car in summer or winter conditions, will reduce the capacity and lifetime of the battery. Always try to keep the battery between 15°C and 25°C (59°F and 77°F). A phone with a hot or cold battery may temporarily not work, even when the battery is fully charged. Batteries' performance is particularly limited in temperatures well below freezing.

Do not dispose of batteries in a fire!

Dispose of batteries according to local regulations (e.g. recycling). Do not dispose as household waste.



## Company Policy

Our policy is of continuous development; details of all technical modifications will be included with service bulletins.

While every endeavour has been made to ensure the accuracy of this document, some errors may exist. If any errors are found by the reader, NOKIA MOBILE PHONES Business Group should be notified in writing/e-mail.

Please state:

- Title of the Document + Issue Number/Date of publication
- Latest Amendment Number (if applicable)
- Page(s) and/or Figure(s) in error

### **Please send to:**

NOKIA CORPORATION

Nokia Mobile Phones Business Group

Nokia Customer Care

PO Box 86

FIN-24101 SALO

Finland

E-mail: [Service.Manuals@nokia.com](mailto:Service.Manuals@nokia.com)

(This page left intentionally blank.)

## **Nokia 6300; Nokia 6300b Service Manual Structure**

- 1 General information
- 2 Parts and layouts
- 3 Service Software Instructions
- 4 Service Tools and Service Concepts
- 5 Disassembly and reassembly instructions
- 6 BB Troubleshooting and Manual Tuning Guide
- 7 RF Troubleshooting and Manual Tuning Guide
- 8 System module
- 9 Schematics
- Glossary

(This page left intentionally blank.)

# Nokia Customer Care

## 1 — General information

(This page left intentionally blank.)

## Table of Contents

|   |     |
|---|-----|
| Product selection.....                    | 1-5 |
| Features.....                             | 1-5 |
| Phone features.....                       | 1-5 |
| Hardware features.....                    | 1-6 |
| Software and User interface features..... | 1-6 |
| Accessories.....                          | 1-8 |

### List of Tables

|                                   |     |
|-----------------------------------|-----|
| Table 1 Audio.....                | 1-8 |
| Table 2 Battery and chargers..... | 1-9 |
| Table 3 Car accessories.....      | 1-9 |
| Table 4 Data.....                 | 1-9 |
| Table 5 Imaging.....              | 1-9 |

### List of Figures

|                                  |     |
|----------------------------------|-----|
| Figure 1 View of RM-217/222..... | 1-5 |
|----------------------------------|-----|

(This page left intentionally blank.)



## ■ Product selection

The RM-217 and RM-222 are class 4 (max 2W) GSM triband hand portable phones, supporting GSM 850/1800/1900 (RM-222) and 900/1800/1900 (RM-217) bands, respectively. The RM-217/222 also supports EGPRS and GPRS (Packed data). It is a class B&C terminal, supporting EGPRS multislot class 10 (4Rx + 1Tx and 3Rx + 2Tx) and GPRS multislot class 10 (4+1, 3+2).

The RM-217/222 is MMS (Multimedia Messaging Services) version 1.2 enabled phone with a QVGA 240x320 pixel, active TFT 16.7 million colour display. It also has an integrated 2 Mpix digital camera with a 8 x digital zoom.

The RM-217/222 has a 3GPP video player/recorder, FM stereo radio and a music player, and it supports Bluetooth 2.0 + EDR standard as well as microSD card with hotswap possibility.

The XHTML/WAP browser in RM-217/222 is compatible with the version 2.0 specifications and it supports HTTP/TCP/IP stack.

In addition the RM-217/222 is a Java-enabled phone (Java™ 2 Platform, Micro Edition, for embedded devices). It supports MIDP Java 2.0 with additionally APIs.

The supported user interface is S40, that is, RM-217/222 software is based on the ISA platform.



Figure 1 View of RM-217/222

## ■ Features

### Phone features

#### General features

- Demo mode (phone demo without SIM card)

## Hardware features

### Display and keypad features

- Main display: Active TFT QVGA display supporting up to 16,7 million colors (320 x 240 pixels, 2 inches active area)
- Power switch
- Side volume keys

### Hardware characteristics

- Monoblock phone
- 2-Mpix camera with 8 x digital zoom
- Hotswap  $\mu$ SD memory card slot (under the battery cover)
- Stereo FM radio and music player
- Integrated handsfree speaker
- Internal vibra
- Bluetooth
- 2.0 mm DC charger plug interface
- Mini-USB connector
- 2.5mm Nokia AV connector

## Software and User interface features

### Software features

- ISA OS 8.0s Platform
- Nokia Series 40 User interface (UI): Java™ MIDP 2.0

### UI features

|                  |  |
|------------------|--|
| Imaging          | <ul style="list-style-type: none"> <li>• 2.0-megapixel camera with 8x digital zoom (1600 x 1200 pixel resolution)</li> <li>• Full-screen viewfinder</li> <li>• PictBridge printing via USB cable</li> </ul>  |
| Multimedia       | <ul style="list-style-type: none"> <li>• MP3 player supporting formats including MP3, Midi, AAC, AAC+, enhanced AAC+, WMA</li> <li>• FM stereo radio, Visual Radio and music player</li> <li>• 3GPP video player/recorder</li> <li>• MP3 ringing tones, True tones and MIDI tones, with support of 64 polyphony</li> </ul> |
| Memory functions | <ul style="list-style-type: none"> <li>• Combo memory with 32 MB flash and 16 MB RAM – about 7 MB user memory (for gallery and applications, contacts, notes, calendar entries)</li> <li>• Hotswap microSD memory card slot supporting up to 2GB microSD memory cards (available as enhancements)</li> </ul>               |

|                       |  |
|-----------------------|--|
| <p>Messaging</p>      | <ul style="list-style-type: none"> <li>• Simplified messaging with recently used contacts log and groups</li> <li>• Email: Access your work and private email accounts; supports SMTP, POP3, and IMAP4 protocols. Support for attachments (Java version)</li> <li>• Audio messaging service (AMS): Record your own voice message and send to compatible devices</li> <li>• MMS OMA 1.2: Combine image, video, text, and voice clips and send as an MMS to a compatible phone or PC; use MMS to tell your story with a multi-slide presentation. The MMS OMA 1.2 specification allows you to send/receive messages up to 300 kB in size.</li> <li>• Text messaging: Supports concatenated SMS, picture messaging, SMS distribution list</li> <li>• Predictive text input: Support for all major languages in Europe and Asia-Pacific</li> <li>• Instant Messaging (IM)</li> </ul> |
| <p>Applications</p>   | <ul style="list-style-type: none"> <li>• Java™ MIDP 2.0 with over-the-air download</li> <li>• Pre-installed Java™-based applications and games</li> <li>• SIM Application Toolkit</li> <li>• Wireless Presenter</li> </ul>   |
| <p>Connectivity</p>   | <ul style="list-style-type: none"> <li>• Nokia PC Suite with USB and Bluetooth connectivity</li> <li>• Bluetooth wireless connectivity (SIM access, headset, and handsfree profiles) incl. stereo support for headsets</li> <li>• Nokia AV connector interface with USB</li> <li>• FOTA (Flashing over-the-air)</li> <li>• Local/remote SyncML data synchronization</li> </ul>   |
| <p>Browsing</p>       | <ul style="list-style-type: none"> <li>• Integrated XHTML browser</li> <li>• Smart content download - OMA DRM 2.0</li> </ul>   |
| <p>Data transfer</p>  | <ul style="list-style-type: none"> <li>• EDGE (EGPRS): Class 10, download up to 236.8 kbps</li> <li>• GPRS: Class 10, download up to 53.6 kbps</li> <li>• <b>Note:</b> Actual achieved speeds may vary depending on network support</li> <li>• GPRS/EDGE/HSCSD/CSD for browsing and as data modem</li> <li>• Downlink Advanced Receiver Performance (DARP)</li> </ul>  |
| <p>Voice features</p> | <ul style="list-style-type: none"> <li>• Push To Talk: Select the person or group you want to talk to and press the Push To Talk key to communicate</li> <li>• Enhanced voice dialling with SIND: Speaker-independent name dialling for easy call handling</li> <li>• Integrated handsfree speaker with a new high quality speaker for better audio experience (stereo widening effects when attaching the headset)</li> <li>• Voice commands</li> <li>• Voice recorder</li> </ul>   |

|                                       |  |
|---------------------------------------|--|
| Digital services                      | <ul style="list-style-type: none"> <li>User Interface (UI) themes including e.g. animated wallpapers, screensavers, color schemes, ringing tones</li> <li>Ringing tones: Video, MP3 ringing tones, True Tones and MIDI ringing, alert, and gaming tones with support of 64 polyphony</li> <li>OTA download possibility for: Themes, True Tones, MP3 ringing tones, MIDI ringing tones, screensavers, wallpapers, 3GPP streaming, images and videos, Series 40 Java games and applications</li> </ul> |
| Personal information management (PIM) | <ul style="list-style-type: none"> <li>Organizer with alarm clock, calendar, to-do list, notes, calculator, countdown timer, and stopwatch</li> <li>Manage your time and information with the enhanced calendar that can be synchronized, for example, with Microsoft and Lotus PIM application calendars by using the Nokia PC Suite</li> </ul>   |
| Call management                       | <ul style="list-style-type: none"> <li>Speed dialling</li> <li>Logs: Keeps lists of your dialled, received, and missed calls</li> <li>Automatic answer (works with headset or car kit only)</li> <li>Call waiting, call hold, call divert, call timer</li> </ul>   |

## ■ Accessories

Table 1 Audio

| Type   | Name                     |
|--|--------------------------|
| AD-42W   | Wireless audio gateway   |
| HS-40  | Mono headset             |
| HS-16, HS-42, HS-47  | Stereo headsets          |
| BH-300, BH-601, BH-700, BH-800, BH-900, HS-4W, HS-50W                  | Wireless mono headsets   |
| HS-21W, HS-24W, HS-25W, HS-26W, HS-34W, HS-36W, HS-37W, HS-57W, HS-58W | Wireless stereo headsets |

**Table 2 Battery and chargers**

| Type  | Name                                  |
|---|---------------------------------------|
| <b>Note:</b> This phone is charged through the smaller Nokia standard interface (2.0 mm plug). The 3.5 mm standard charger can be used together with the CA-44 charger adapter. |                                       |
| AC-3/AC-5   | Compact charger                       |
| AC-4  | Travel charger                        |
| BL-4C   | Battery 860 mAh Li-Ion                |
| CA-44   | Charger adapter (from 3.5 mm -> 2 mm) |

**Table 3 Car accessories**

| Type   | Name                    |
|--------|-------------------------|
| CK-1W  | Wireless car kit        |
| CK-7W  | Basic universal car kit |
| CK-20W | Car Installation Kit    |
| CR-39  | Universal holder        |
| DC-4   | Mobile charger          |
| HF-35W | Wireless Car Handsfree  |
| N616   | Car phone               |

**Table 4 Data**

| Type  | Name                        |
|-------|-----------------------------|
| DKE-2 | Mini USB connectivity cable |
| MU-22 | 1 GB µSD card               |
| MU-26 | 128 MB µSD card             |
| MU-27 | 256 MB µSD card             |
| MU-28 | 512 MB µSD card             |
| MU-37 | 2 GB µSD card               |

**Table 5 Imaging**

| Type | Name          |
|------|---------------|
| PT-6 | Remote camera |

(This page left intentionally blank.)

# Nokia Customer Care

## 2 — Parts and layouts

(This page left intentionally blank.)



## Table of Contents

|   |      |
|---|------|
| Exploded view.....                        | 2-5  |
| Exploded view .....                       | 2-5  |
| Mechanical spare parts overview .....     | 2-6  |
| Parts list.....                           | 2-7  |
| Mechanical spare parts list.....          | 2-7  |
| Component parts list (1ywa_32a).....      | 2-8  |
| Swap units .....                          | 2-24 |
| Component layouts.....                    | 2-25 |
| Component layout - top (1ywa_32a).....    | 2-25 |
| Component layout - bottom (1ywa_32a)..... | 2-26 |

### List of Tables


|                           |      |
|---------------------------|------|
| Table 6 Swap phones ..... | 2-24 |
| Table 7 Lightswap .....   | 2-24 |

(This page left intentionally blank.)

■ Exploded view

Exploded view


**6300 RM-217 / 6300b RM-222 EXPLODED VIEW**

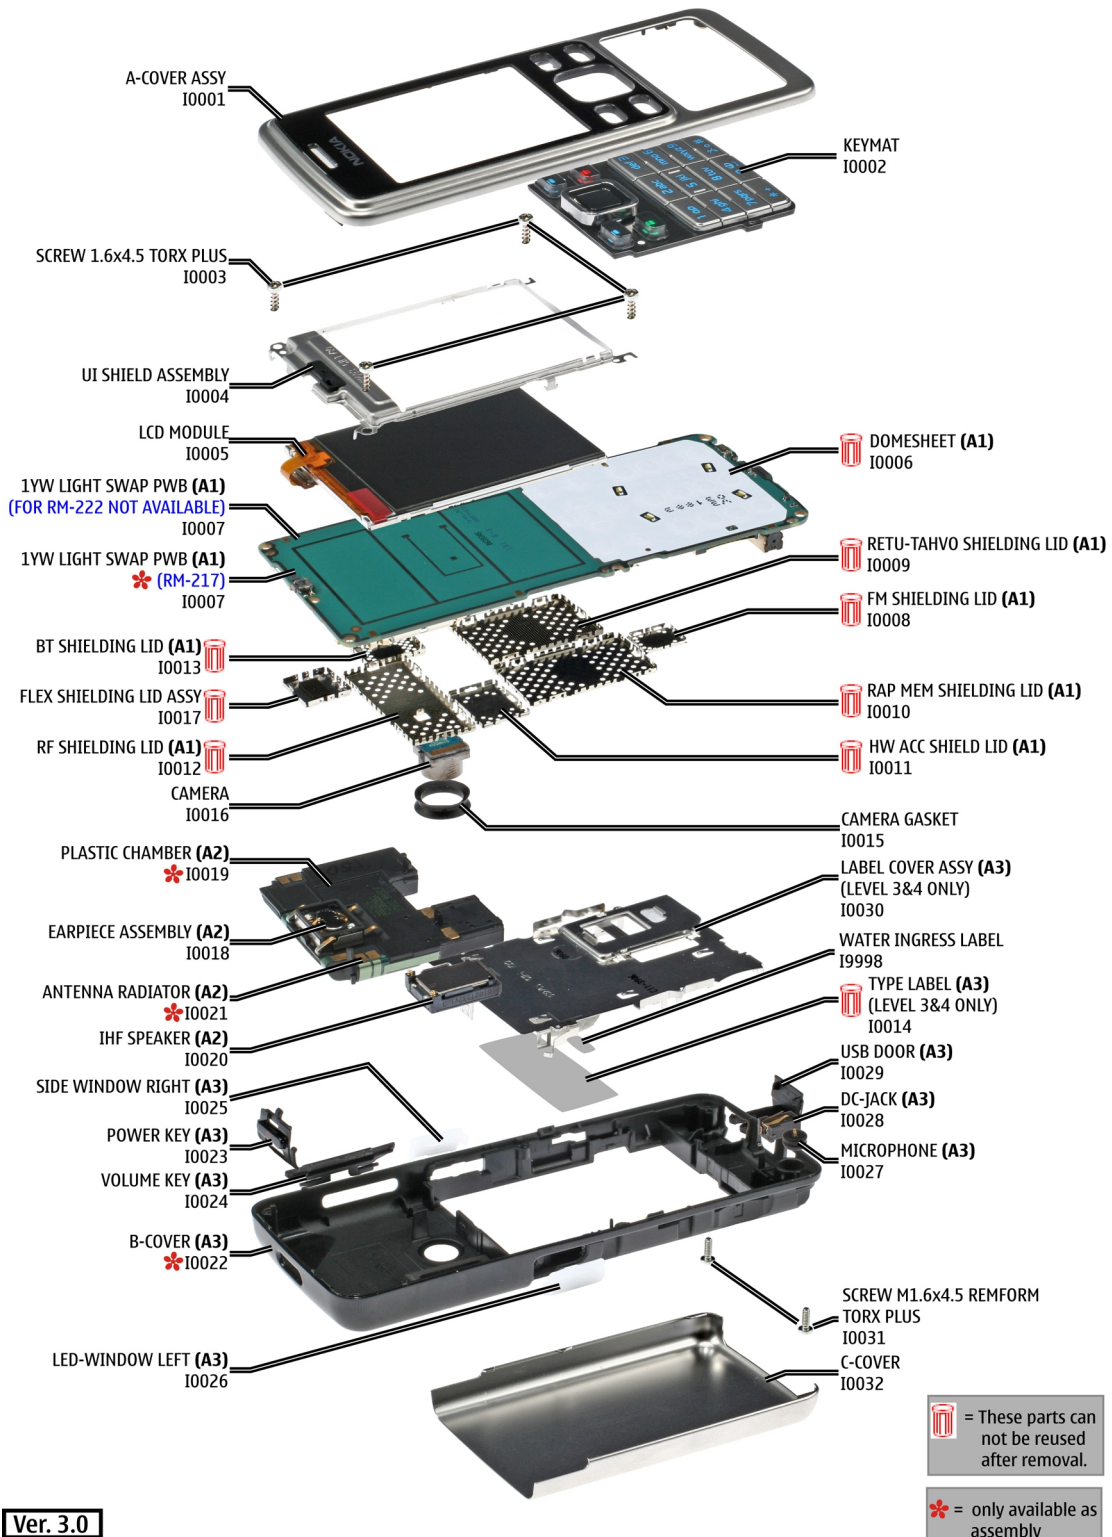

Ver. 3.0

**Mechanical spare parts overview**

**6300 RM-217 / 6300b RM-222 SPARE PARTS OVERVIEW**

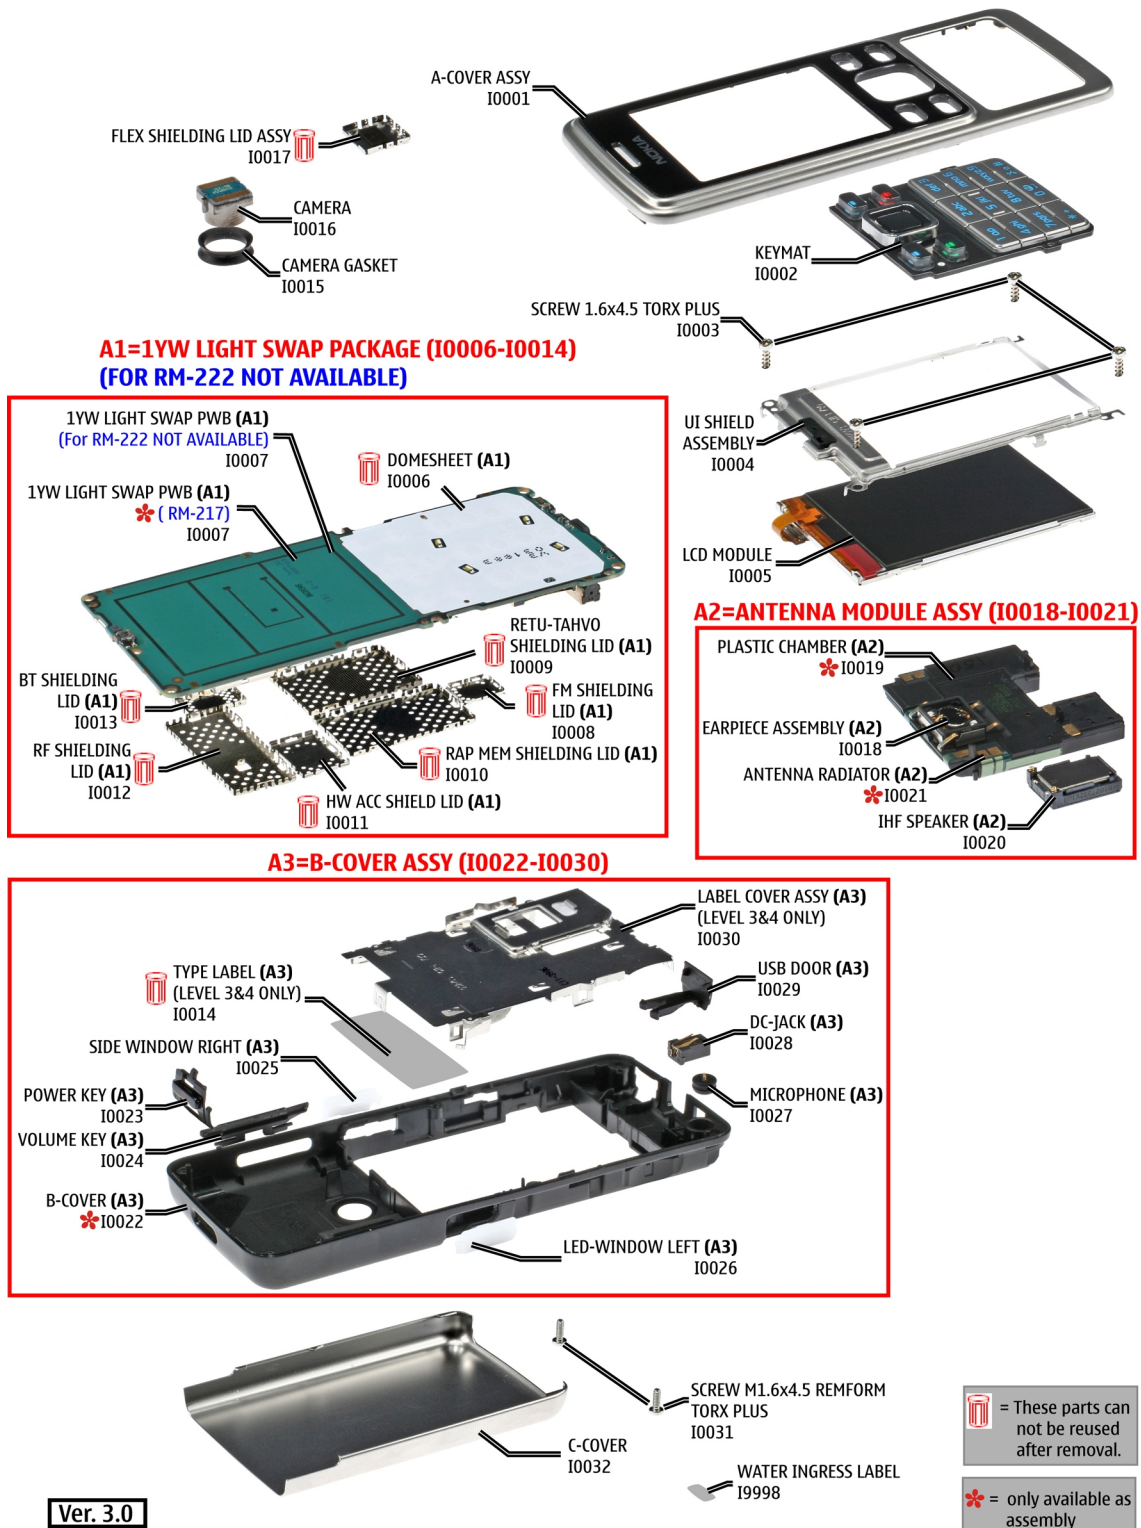

## ■ Parts list

### Mechanical spare parts list

**Note:** For Nokia product codes, please refer to the latest Service Bulletins on the Partner Website (PWS).

To ensure you are always using the latest codes, please check the PWS on a daily basis.

Ax and in bold = ASSY

"-" = NOT AVAILABLE

"XXXXXXX" = VARIANTS

"???????" = Code available in Bulletin

I0xx = ITEM codes for upper or mono block

I1xx = ITEM codes for hinge block

I2xx = ITEM codes for lower block

I3xx = ITEM codes for soldered spare parts on the upper, hinge or lower block and not exchangeable

| ITEM/<br>CIRCUIT<br>REF. | QTY      | PART NAME                                     | Note                           |
|--------------------------|----------|---|--------------------------------|
| I0001                    | 1        | A-COVER ASSY                                  |                                |
| I0002                    | 1        | KEYMAT  |                                |
| I0003                    | 4        | SCREW 1.6X4.5 TORX PLUS                       |                                |
| I0004                    | 1        | UI SHIELD ASSEMBLY                            |                                |
| I0005                    | 1        | LCD MODULE                                    |                                |
| <b>A1</b>                | <b>1</b> | <b>1YW LIGHT SWAP PACKAGE (I0006 - I0014)</b> |                                |
| I0006                    | 1        | DOMESHEET                                     | Cannot be reused when removed. |
| I0007                    | 1        | 1YW LIGHT SWAP PWB                            |                                |
| I0008                    | 1        | FM SHIELDING LID                              | Cannot be reused when removed. |
| I0009                    | 1        | RETU-TAHVO SHIELDING LID                      | Cannot be reused when removed. |
| I0010                    | 1        | RAP MEM SHIELDING LID                         | Cannot be reused when removed. |
| I0011                    | 1        | HWA SHIELDING LID                             | Cannot be reused when removed. |
| I0012                    | 1        | RF SHIELDING LID                              | Cannot be reused when removed. |
| I0013                    | 1        | BT SHIELDING LID                              | Cannot be reused when removed. |
| I0014                    | 1        | TYPE LABEL                                    | Cannot be reused when removed. |
| I0015                    | 1        | CAMERA GASKET                                 |                                |
| I0016                    | 1        | CAMERA  |                                |
| I0017                    | 1        | FLEX SHIELDING LID ASSY                       | Cannot be reused when removed. |
| <b>A2</b>                | <b>1</b> | <b>ANTENNA MODULE ASSY (I0018 - I0021)</b>    |                                |
| I0018                    | 1        | EARPIECE ASSEMBLY                             |                                |

| ITEM/<br>CIRCUIT<br>REF. | QTY      | PART NAME                           | Note |
|--------------------------|----------|-------------------------------------|------|
| I0019                    | 1        | PLASTIC CHAMBER                     |      |
| I0020                    | 1        | IHF SPEAKER                         |      |
| I0021                    | 1        | ANTENNA RADIATOR                    |      |
| <b>A3</b>                | <b>1</b> | <b>B-COVER ASSY (I0022 - I0030)</b> |      |
| I0022                    | 1        | B-COVER                             |      |
| I0023                    | 1        | POWER KEY                           |      |
| I0024                    | 1        | VOLUME KEY                          |      |
| I0025                    | 1        | SIDE WINDOW RIGHT                   |      |
| I0026                    | 1        | LED WINDOW LEFT                     |      |
| I0027                    | 1        | MICROPHONE                          |      |
| I0028                    | 1        | DC JACK                             |      |
| I0029                    | 1        | USB DOOR                            |      |
| I0030                    | 1        | LABEL COVER ASSY                    |      |
| I0031                    | 2        | SCREW 1.6 x 4.5 REMFORM TORX PLUS   |      |
| I0032                    | 1        | C-COVER                             |      |
| I9998                    | 1        | WATER INGRESS LABEL                 |      |

**Note**

Antenna Module is marked 850 or 900 to enable identification of different versions by regions.

**Component parts list (1ywa\_32a)**

| Item  | Side   | Grid |   | Description and value |  |
|-------|--------|------|---|-----------------------|--|
| A2200 | Bottom | K    | 3 | SHIELD_040_025976     | RETU TAHVO SHIELD ASSY<br>040-025976 P2912 |
| A2400 | Bottom | T    | 3 | SHIELD_0264510        | FLEX SHIELD FRAME 031886<br>P2908          |
| A2800 | Bottom | K    | 7 | SHIELD_040_025979     | RAP_MEM SHIELD ASSY<br>040-025979 P2912    |
| A3300 | Bottom | O    | 8 | SHIELD_040_025020     | HW_ACC ASSEMBLY 040-025020<br>P2912        |
| A6000 | Bottom | Q    | 2 | SHIELD_040_031454     | BT SHIELD ASSY 031454 P2908                |
| A6100 | Bottom | G    | 6 | SHIELD_040_031457     | FM SHIELD ASSY 031457 P2908                |
| A7000 | Bottom | R    | 6 | SHIELD_040_009342     | RF ASSEMBLY 040-009342 P2465               |

| Item  | Side   | Grid |   | Description and value              |                                       |
|-------|--------|------|---|------------------------------------|---------------------------------------|
| B2100 | Bottom | B    | 8 | MIC_OBE_415S42_RC3310C<br>L_CARBON | CLAPTON EMC MICROPHONE MOD<br>-42DB   |
| B2101 | Bottom | T    | 6 | SPEAKER_LTR_RDF_COMB               | EARP RDF-07A 320HM<br>10.86x7.40.2.25 |
| B2200 | Bottom | M    | 3 | CRYSTAL_3.3X1.6_H0.9               | CRYSTAL 32.768KHZ +/-30PPM<br>12.5PF  |
| C2000 | Top    | A    | 4 | 0402C                              | CHIPCAP NP0 27P J 50V 0402            |
| C2001 | Top    | A    | 3 | 0603C_H0.95                        | CHIPCAP X5R 470N K 25V 0603           |
| C2002 | Top    | A    | 5 | 0603C                              | CHIPCAP X7R 10N K 50V 0603            |
| C2008 | Bottom | C    | 2 | 0402C                              | CHIPCAP X7R 1N0 K 50V 0402            |
| C2030 | Bottom | E    | 5 | 0402C                              | CHIPCAP NP0 270P J 50V 0402           |
| C2031 | Bottom | E    | 5 | 0402C                              | CHIPCAP X7R 1N0 K 50V 0402            |
| C2032 | Bottom | D    | 5 | 0402C                              | CHIPCAP X7R 10N K 16V 0402            |
| C2033 | Bottom | E    | 4 | 0402C                              | CHIPCAP X7R 33N K 10V 0402            |
| C2034 | Bottom | E    | 4 | 0402C                              | CHIPCAP X7R 33N K 10V 0402            |
| C2035 | Bottom | C    | 5 | 0402C                              | CHIPCAP NP0 27P J 50V 0402            |
| C2040 | Bottom | H    | 5 | 0603C                              | CHIPCAP X5R 2U2 K 6V3 0603            |
| C2041 | Bottom | C    | 3 | 0603C                              | CHIPCAP X5R 2U2 K 6V3 0603            |
| C2042 | Bottom | D    | 4 | 0402C                              | CHIPCAP X7R 1N0 K 50V 0402            |
| C2043 | Bottom | C    | 4 | 0402C                              | CHIPCAP X7R 1N0 K 50V 0402            |
| C2044 | Bottom | C    | 4 | 0402C                              | CHIPCAP NP0 18P J 50V 0402            |
| C2045 | Bottom | D    | 5 | 0402C                              | CHIPCAP NP0 18P J 50V 0402            |
| C2046 | Bottom | C    | 4 | 0402C_H0.6                         | CHIPCAP X5R 100N K 16V 0402           |
| C2047 | Bottom | C    | 4 | 0603C                              | CHIPCAP X5R 4U7 K 6.3V 0603           |
| C2048 | Bottom | C    | 3 | 0603C                              | CHIPCAP X5R 2U2 K 6V3 0603            |
| C2049 | Bottom | H    | 5 | 0603C                              | CHIPCAP X5R 1U K 6V3 0603             |
| C2050 | Bottom | D    | 5 | 0402C                              | CHIPCAP X7R 10N K 16V 0402            |
| C2051 | Bottom | H    | 5 | 0603C                              | CHIPCAP X5R 1U K 6V3 0603             |
| C2052 | Bottom | C    | 5 | 0402C                              | CHIPCAP NP0 27P J 50V 0402            |
| C2071 | Bottom | Q    | 3 | 0402C                              | CHIPCAP NP0 27P J 50V 0402            |
| C2073 | Bottom | S    | 2 | TANT_C_6.2X3.4_H1.7                | CHIPTCAP 150U M 10V 6X3.2X1.5         |
| C2074 | Bottom | L    | 2 | 0402C                              | CHIPCAP X7R 10N K 16V 0402            |
| C2076 | Bottom | Q    | 4 | 0402C                              | CHIPCAP X7R 10N K 16V 0402            |
| C2077 | Bottom | M    | 2 | 0603C                              | CHIPCAP X5R 1U K 6V3 0603             |
| C2078 | Bottom | M    | 2 | 0402C                              | CHIPCAP NP0 27P J 50V 0402            |
| C2079 | Bottom | E    | 4 | 0402C                              | CHIPCAP X7R 1N0 K 50V 0402            |

| Item  | Side   | Grid |   | Description and value |                            |
|-------|--------|------|---|-----------------------|----------------------------|
| C2080 | Bottom | E    | 4 | 0402C                 | CHIPCAP X7R 10N K 16V 0402 |
| C2100 | Bottom | G    | 5 | 0402C                 | CHIPCAP X7R 33N K 10V 0402 |
| C2101 | Bottom | F    | 5 | 0402C                 | CHIPCAP X7R 33N K 10V 0402 |
| C2102 | Bottom | H    | 5 | 0603C                 | CHIPCAP X5R 2U2 K 6V3 0603 |
| C2103 | Bottom | O    | 1 | 0402C                 | CHIPCAP NP0 27P J 50V 0402 |
| C2104 | Bottom | O    | 2 | 0402C                 | CHIPCAP NP0 27P J 50V 0402 |
| C2200 | Bottom | M    | 5 | 0603C                 | CHIPCAP X5R 1U K 6V3 0603  |
| C2201 | Bottom | M    | 2 | 0603C                 | CHIPCAP X5R 1U K 6V3 0603  |
| C2202 | Bottom | N    | 2 | 0402C                 | CHIPCAP X7R 1N0 K 50V 0402 |
| C2203 | Bottom | M    | 4 | 0402C                 | CHIPCAP X7R 1N0 K 50V 0402 |
| C2204 | Bottom | M    | 4 | 0402C                 | CHIPCAP X7R 1N0 K 50V 0402 |
| C2205 | Bottom | M    | 4 | 0402C                 | CHIPCAP X7R 1N0 K 50V 0402 |
| C2206 | Bottom | M    | 4 | 0402C                 | CHIPCAP X7R 1N0 K 50V 0402 |
| C2207 | Bottom | N    | 2 | 0402C                 | CHIPCAP X7R 1N0 K 50V 0402 |
| C2208 | Bottom | N    | 3 | 0402C                 | CHIPCAP NP0 27P J 50V 0402 |
| C2209 | Bottom | N    | 3 | 0402C                 | CHIPCAP NP0 22P J 50V 0402 |
| C2210 | Bottom | K    | 3 | 0603C                 | CHIPCAP X5R 1U K 16V 0603  |
| C2211 | Bottom | K    | 3 | 0805C                 | CHIPCAP X5R 4U7 K 10V 0805 |
| C2212 | Bottom | K    | 3 | 0402C                 | CHIPCAP X5R 1U5 K 4V 0402  |
| C2213 | Bottom | L    | 3 | 0402C                 | CHIPCAP X5R 1U5 K 4V 0402  |
| C2214 | Bottom | L    | 2 | 0402C                 | CHIPCAP X5R 1U5 K 4V 0402  |
| C2215 | Bottom | L    | 2 | 0402C                 | CHIPCAP X5R 1U5 K 4V 0402  |
| C2216 | Bottom | L    | 2 | 0402C                 | CHIPCAP X5R 1U5 K 4V 0402  |
| C2217 | Bottom | M    | 3 | 0402C                 | CHIPCAP X5R 1U5 K 4V 0402  |
| C2219 | Bottom | M    | 2 | 0402C                 | CHIPCAP X5R 1U5 K 4V 0402  |
| C2220 | Bottom | K    | 3 | 0402C                 | CHIPCAP X5R 1U5 K 4V 0402  |
| C2221 | Bottom | K    | 2 | 0603C                 | CHIPCAP X5R 1U K 6V3 0603  |
| C2222 | Bottom | K    | 2 | 0603C                 | CHIPCAP X5R 1U K 6V3 0603  |
| C2223 | Bottom | L    | 4 | 0402C                 | CHIPCAP X7R 10N K 16V 0402 |
| C2224 | Bottom | M    | 4 | 0402C                 | CHIPCAP X7R 10N K 16V 0402 |
| C2225 | Bottom | M    | 2 | 0603C                 | CHIPCAP X5R 1U K 6V3 0603  |
| C2226 | Bottom | L    | 2 | 0603C                 | CHIPCAP X5R 1U K 6V3 0603  |
| C2227 | Bottom | K    | 3 | 0603C                 | CHIPCAP X5R 1U K 6V3 0603  |
| C2228 | Bottom | L    | 2 | 0603C                 | CHIPCAP X5R 1U K 6V3 0603  |
| C2230 | Bottom | M    | 3 | 0603C                 | CHIPCAP X5R 1U K 6V3 0603  |



| Item  | Side   | Grid |   | Description and value |                             |
|-------|--------|------|---|-----------------------|-----------------------------|
| C2231 | Bottom | K    | 5 | 0805C                 | CHIPCAP X5R 10U M 6V3 0805  |
| C2232 | Bottom | L    | 2 | 0603C                 | CHIPCAP X5R 1U K 6V3 0603   |
| C2270 | Bottom | L    | 5 | 0402C                 | CHIPCAP X7R 1N0 K 50V 0402  |
| C2271 | Bottom | L    | 5 | 0402C                 | CHIPCAP X7R 1N0 K 50V 0402  |
| C2272 | Bottom | L    | 5 | 0402C                 | CHIPCAP X7R 1N0 K 50V 0402  |
| C2273 | Bottom | K    | 4 | 0402C                 | CHIPCAP X7R 1N0 K 50V 0402  |
| C2274 | Bottom | K    | 4 | 0402C                 | CHIPCAP X7R 1N0 K 50V 0402  |
| C2275 | Bottom | K    | 4 | 0402C                 | CHIPCAP X7R 1N0 K 50V 0402  |
| C2281 | Bottom | L    | 2 | 0603C                 | CHIPCAP X5R 1U K 6V3 0603   |
| C2300 | Bottom | J    | 4 | 0402C                 | CHIPCAP X7R 10N K 16V 0402  |
| C2301 | Bottom | I    | 4 | 0805C                 | CHIPCAP X5R 22U M 6V3 0805  |
| C2302 | Bottom | K    | 5 | 0805C                 | CHIPCAP X5R 22U M 6V3 0805  |
| C2303 | Bottom | I    | 3 | 0603C                 | CHIPCAP X5R 1U K 6V3 0603   |
| C2304 | Bottom | K    | 4 | 0402C                 | CHIPCAP X7R 10N K 16V 0402  |
| C2305 | Bottom | I    | 2 | 0603C                 | CHIPCAP X5R 1U K 6V3 0603   |
| C2306 | Bottom | I    | 4 | 0603C                 | CHIPCAP X5R 1U K 6V3 0603   |
| C2307 | Bottom | I    | 4 | 0603C                 | CHIPCAP X5R 1U K 6V3 0603   |
| C2309 | Bottom | I    | 5 | 0805C                 | CHIPCAP X5R 22U M 6V3 0805  |
| C2312 | Bottom | I    | 3 | 0603C                 | CHIPCAP X5R 1U K 6V3 0603   |
| C2313 | Bottom | I    | 3 | 0603C                 | CHIPCAP X5R 1U K 6V3 0603   |
| C2314 | Bottom | J    | 2 | 0805C                 | CHIPCAP X5R 4U7 K 10V 0805  |
| C2315 | Bottom | K    | 2 | 0805C                 | CHIPCAP X5R 4U7 M 25V 0805  |
| C2317 | Bottom | J    | 2 | 0402C                 | CHIPCAP NP0 27P J 50V 0402  |
| C2403 | Bottom | N    | 2 | 0402C                 | CHIPCAP NP0 47P J 50V 0402  |
| C2404 | Bottom | T    | 2 | 0402C                 | CHIPCAP X7R 4N7 K 25V 0402  |
| C2405 | Bottom | T    | 4 | 0402C_H0.6            | CHIPCAP X5R 100N K 16V 0402 |
| C2413 | Bottom | I    | 2 | 0402C                 | CHIPCAP NP0 27P J 50V 0402  |
| C2414 | Bottom | T    | 2 | 0402C                 | CHIPCAP NP0 27P J 50V 0402  |
| C2415 | Bottom | T    | 4 | 0402C                 | CHIPCAP NP0 27P J 50V 0402  |
| C2416 | Bottom | T    | 3 | 0402C_H0.6            | CHIPCAP X5R 100N K 16V 0402 |
| C2417 | Bottom | T    | 3 | 0402C_H0.6            | CHIPCAP X5R 100N K 16V 0402 |
| C2418 | Bottom | T    | 3 | 0402C                 | CHIPCAP NP0 27P J 50V 0402  |
| C2700 | Bottom | H    | 2 | 0402C_H0.6            | CHIPCAP X5R 100N K 16V 0402 |
| C2701 | Bottom | H    | 2 | 0402C                 | CHIPCAP NP0 27P J 50V 0402  |
| C2800 | Bottom | L    | 8 | 0402C_H0.6            | CHIPCAP X5R 100N K 16V 0402 |

| Item  | Side   | Grid |   | Description and value |                             |
|-------|--------|------|---|-----------------------|-----------------------------|
| C2801 | Bottom | N    | 8 | 0402C_H0.6            | CHIPCAP X5R 100N K 16V 0402 |
| C2802 | Bottom | M    | 8 | 0402C_H0.6            | CHIPCAP X5R 100N K 16V 0402 |
| C2803 | Bottom | L    | 8 | 0402C_H0.6            | CHIPCAP X5R 100N K 16V 0402 |
| C2804 | Bottom | N    | 8 | 0402C_H0.6            | CHIPCAP X5R 100N K 16V 0402 |
| C2805 | Bottom | K    | 6 | 0402C_H0.6            | CHIPCAP X5R 100N K 16V 0402 |
| C2807 | Bottom | N    | 8 | 0603C                 | CHIPCAP X5R 1U K 6V3 0603   |
| C2808 | Bottom | M    | 8 | 0402C_H0.6            | CHIPCAP X5R 100N K 16V 0402 |
| C2809 | Bottom | M    | 8 | 0402C_H0.6            | CHIPCAP X5R 100N K 16V 0402 |
| C2810 | Bottom | K    | 8 | 0402C_H0.6            | CHIPCAP X5R 100N K 16V 0402 |
| C2811 | Bottom | K    | 6 | 0402C_H0.6            | CHIPCAP X5R 100N K 16V 0402 |
| C2812 | Bottom | L    | 8 | 0402C_H0.6            | CHIPCAP X5R 100N K 16V 0402 |
| C2813 | Bottom | N    | 6 | 0402C_H0.6            | CHIPCAP X5R 100N K 16V 0402 |
| C2814 | Bottom | M    | 8 | 0402C_H0.6            | CHIPCAP X5R 100N K 16V 0402 |
| C2815 | Bottom | K    | 8 | 0402C_H0.6            | CHIPCAP X5R 100N K 16V 0402 |
| C2816 | Bottom | K    | 8 | 0402C                 | CHIPCAP NP0 27P J 50V 0402  |
| C2818 | Bottom | K    | 6 | 0402C_H0.6            | CHIPCAP X5R 100N K 16V 0402 |
| C2819 | Bottom | K    | 8 | 0402C_H0.6            | CHIPCAP X5R 100N K 16V 0402 |
| C2820 | Bottom | N    | 6 | 0402C_H0.6            | CHIPCAP X5R 100N K 16V 0402 |
| C2821 | Bottom | N    | 6 | 0402C                 | CHIPCAP NP0 27P J 50V 0402  |
| C2831 | Bottom | N    | 7 | 0402C                 | CHIPCAP NP0 1P0 C 50V 0402  |
| C3000 | Bottom | I    | 6 | 0402C_H0.6            | CHIPCAP X5R 100N K 16V 0402 |
| C3001 | Bottom | J    | 6 | 0402C                 | CHIPCAP X7R 10N K 16V 0402  |
| C3002 | Bottom | J    | 6 | 0402C_H0.6            | CHIPCAP X5R 100N K 16V 0402 |
| C3003 | Bottom | K    | 8 | 0402C                 | CHIPCAP X7R 10N K 16V 0402  |
| C3004 | Bottom | K    | 8 | 0402C_H0.6            | CHIPCAP X5R 100N K 16V 0402 |
| C3005 | Bottom | J    | 8 | 0402C_H0.6            | CHIPCAP X5R 100N K 16V 0402 |
| C3006 | Bottom | I    | 8 | 0402C_H0.6            | CHIPCAP X5R 100N K 16V 0402 |
| C3007 | Bottom | J    | 8 | 0402C                 | CHIPCAP X7R 10N K 16V 0402  |
| C3008 | Bottom | J    | 8 | 0402C_H0.6            | CHIPCAP X5R 100N K 16V 0402 |
| C3009 | Bottom | I    | 8 | 0402C_H0.6            | CHIPCAP X5R 100N K 16V 0402 |
| C3010 | Bottom | N    | 5 | 0402C_H0.6            | CHIPCAP X5R 100N K 16V 0402 |
| C3013 | Bottom | K    | 7 | 0402C                 | CHIPCAP NP0 27P J 50V 0402  |
| C3014 | Bottom | K    | 7 | 0402C                 | CHIPCAP NP0 68P J 50V 0402  |
| C3100 | Bottom | E    | 2 | 0402C                 | CHIPCAP NP0 27P J 50V 0402  |
| C3115 | Bottom | O    | 7 | 0402C                 | CHIPCAP X5R 1U K 6V3 0402   |

| Item  | Side   | Grid |   | Description and value |                              |
|-------|--------|------|---|-----------------------|------------------------------|
| C3116 | Bottom | O    | 7 | 0402C                 | CHIPCAP X7R 10N K 16V 0402   |
| C3200 | Bottom | G    | 8 | 0402C_H0.6            | CHIPCAP X5R 100N K 16V 0402  |
| C3201 | Bottom | H    | 8 | 0402C                 | CHIPCAP X5R 1U K 6V3 0402    |
| C3202 | Bottom | H    | 7 | 0402C                 | CHIPCAP X7R 10N K 16V 0402   |
| C3203 | Bottom | G    | 8 | 0402C                 | CHIPCAP X5R 1U K 6V3 0402    |
| C3204 | Bottom | H    | 7 | 0402C_H0.6            | CHIPCAP X5R 100N K 16V 0402  |
| C3210 | Bottom | G    | 8 | 0402C                 | CHIPCAP NP0 27P J 50V 0402   |
| C3211 | Top    | D    | 8 | 0402C                 | CHIPCAP NP0 27P J 50V 0402   |
| C3300 | Bottom | P    | 6 | 0402C_H0.6            | CHIPCAP X5R 100N K 16V 0402  |
| C3301 | Bottom | N    | 5 | 0402C_H0.6            | CHIPCAP X5R 100N K 16V 0402  |
| C3302 | Bottom | N    | 4 | 0402C                 | CHIPCAP X5R 220N K 6.3V 0402 |
| C3303 | Bottom | O    | 8 | 0402C_H0.6            | CHIPCAP X5R 100N K 16V 0402  |
| C3304 | Bottom | O    | 8 | 0402C                 | CHIPCAP X7R 10N K 16V 0402   |
| C3305 | Bottom | O    | 6 | 0603C                 | CHIPCAP X5R 4U7 K 6.3V 0603  |
| C3306 | Bottom | O    | 8 | 0603C                 | CHIPCAP X5R 4U7 K 6.3V 0603  |
| C3307 | Bottom | O    | 8 | 0603C                 | CHIPCAP X5R 10UF 6V3 0603    |
| C3308 | Bottom | N    | 5 | 0402C                 | CHIPCAP X5R 1U K 6V3 0402    |
| C3309 | Bottom | N    | 5 | 0402C                 | CHIPCAP NP0 27P J 50V 0402   |
| C3310 | Bottom | P    | 6 | 0402C                 | CHIPCAP NP0 27P J 50V 0402   |
| C3313 | Bottom | O    | 8 | 0402C                 | CHIPCAP X7R 10N K 16V 0402   |
| C3314 | Bottom | P    | 8 | 0402C                 | CHIPCAP X7R 10N K 16V 0402   |
| C6020 | Bottom | T    | 2 | 0402C                 | CHIPCAP NP0 1P5 C 50V 0402   |
| C6031 | Bottom | R    | 1 | 0402C                 | CHIPCAP NP0 18P J 50V 0402   |
| C6032 | Bottom | P    | 2 | 0402C                 | CHIPCAP NP0 100P J 50V 0402  |
| C6033 | Bottom | P    | 2 | 0402C                 | CHIPCAP X7R 10N K 16V 0402   |
| C6034 | Bottom | P    | 2 | 0402C                 | CHIPCAP X7R 10N K 16V 0402   |
| C6035 | Bottom | P    | 1 | 0402C                 | CHIPCAP X7R 10N K 16V 0402   |
| C6036 | Bottom | P    | 2 | 0402C                 | CHIPCAP X7R 10N K 16V 0402   |
| C6037 | Bottom | P    | 2 | 0402C                 | CHIPCAP X5R 1U5 K 4V 0402    |
| C6038 | Bottom | Q    | 1 | 0402C                 | CHIPCAP X7R 10N K 16V 0402   |
| C6039 | Bottom | Q    | 2 | 0402C                 | CHIPCAP NP0 18P J 50V 0402   |
| C6040 | Bottom | P    | 2 | 0402C                 | CHIPCAP X5R 1U K 6V3 0402    |
| C6051 | Bottom | Q    | 2 | 0402C                 | CHIPCAP NP0 2P7 C 50V 0402   |
| C6052 | Bottom | Q    | 2 | 0402C                 | CHIPCAP NP0 2P7 C 50V 0402   |
| C6055 | Bottom | Q    | 2 | 0603C                 | CHIPCAP X5R 1U K 6V3 0603    |

| Item  | Side   | Grid |   | Description and value |                                  |
|-------|--------|------|---|-----------------------|----------------------------------|
| C6100 | Bottom | G    | 7 | 0402C_H0.6            | CHIPCAP X5R 100N K 16V 0402      |
| C6101 | Bottom | H    | 6 | 0402C_H0.6            | CHIPCAP X5R 100N K 16V 0402      |
| C6102 | Bottom | G    | 7 | 0402C                 | CHIPCAP X7R 10N K 16V 0402       |
| C6103 | Bottom | G    | 7 | 0402C_H0.6            | CHIPCAP X5R 100N K 16V 0402      |
| C6104 | Bottom | H    | 6 | 0402C                 | CHIPCAP NP0 47P J 50V 0402       |
| C6105 | Bottom | G    | 6 | 0402C                 | CHIPCAP NP0 100P J 50V 0402      |
| C6106 | Bottom | H    | 6 | 0402C                 | CHIPCAP NP0 27P J 50V 0402       |
| C6107 | Bottom | H    | 6 | 0405_2_P0.65_AVX      | CHIP ARRAY X5R 2X100N M 10V 0405 |
| C6108 | Bottom | H    | 6 | 0405_2_P0.65_AVX      | CHIP ARRAY X5R 2X100N M 10V 0405 |
| C6109 | Bottom | G    | 6 | 0402C                 | CHIPCAP X5R 1U5 K 4V 0402        |
| C7000 | Bottom | U    | 8 | 0402C                 | CHIPCAP NP0 1P5 C 50V 0402       |
| C7001 | Bottom | T    | 8 | 0402C                 | CHIPCAP NP0 1P5 C 50V 0402       |
| C7010 | Bottom | N    | 5 | 0402C_H0.6            | CHIPCAP X5R 100N K 16V 0402      |
| C7011 | Bottom | N    | 4 | 0402C_H0.6            | CHIPCAP X5R 100N K 16V 0402      |
| C7012 | Bottom | N    | 5 | 0402C_H0.6            | CHIPCAP X5R 100N K 16V 0402      |
| C7013 | Bottom | N    | 4 | 0402C_H0.6            | CHIPCAP X5R 100N K 16V 0402      |
| C7501 | Bottom | S    | 5 | 0402C                 | CHIPCAP NP0 2P7 C 50V 0402       |
| C7502 | Bottom | Q    | 5 | 0402C                 | CHIPCAP NP0 0P5 C 50V 0402       |
| C7503 | Bottom | Q    | 4 | 0603C                 | CHIPCAP X5R 1U K 6V3 0603        |
| C7504 | Bottom | S    | 5 | 0603C                 | CHIPCAP X5R 1U K 6V3 0603        |
| C7505 | Bottom | Q    | 4 | 0402C                 | CHIPCAP X5R 1U K 6V3 0402        |
| C7506 | Bottom | Q    | 4 | 0402C                 | CHIPCAP X5R 1U K 6V3 0402        |
| C7507 | Bottom | Q    | 4 | 0402C                 | CHIPCAP X7R 10N K 16V 0402       |
| C7508 | Bottom | Q    | 5 | 0402C                 | CHIPCAP NP0 18P J 50V 0402       |
| C7509 | Bottom | R    | 4 | 0402C                 | CHIPCAP X7R 10N K 16V 0402       |
| C7511 | Bottom | R    | 4 | 0603C                 | CHIPCAP NP0 2N2 G 16V 0603       |
| C7513 | Bottom | Q    | 4 | 0402C                 | CHIPCAP X7R 10N K 16V 0402       |
| C7515 | Bottom | S    | 4 | 0402C                 | CHIPCAP NP0 4P7 C 50V 0402       |
| C7516 | Bottom | S    | 4 | 0402C                 | CHIPCAP NP0 470P J 50V 0402      |
| C7518 | Bottom | Q    | 5 | 0402C_H0.6            | CHIPCAP X5R 100N K 16V 0402      |
| C7520 | Bottom | S    | 8 | 0402C                 | CHIPCAP NP0 3P3 C 50V 0402       |
| C7521 | Bottom | S    | 8 | 0402C                 | CHIPCAP NP0 1P5 C 50V 0402       |
| C7522 | Bottom | Q    | 8 | 0402C                 | CHIPCAP NP0 1P8 C 50V 0402       |

| Item  | Side   | Grid |   | Description and value |   |
|-------|--------|------|---|-----------------------|---|
| C7523 | Bottom | S    | 8 | 0402C                 | CHIPCAP X5R 1U K 6V3 0402                 |
| C7524 | Bottom | Q    | 7 | 0402C                 | CHIPCAP X5R 1U K 6V3 0402                 |
| C7525 | Bottom | Q    | 9 | 0402C                 | CHIPCAP NP0 18P J 50V 0402                |
| C7560 | Bottom | R    | 3 | 0402C                 | CHIPCAP NP0 1P2 C 50V 0402                |
| C7561 | Bottom | R    | 4 | 0402C                 | CHIPCAP X7R 820P J 50V 0402               |
| C7562 | Bottom | Q    | 6 | 0402C                 | CHIPCAP NP0 39P J 50V 0402                |
| C7563 | Bottom | Q    | 5 | 0402C                 | CHIPCAP NP0 47P J 50V 0402                |
| C7564 | Bottom | S    | 4 | 0402C                 | CHIPCAP X7R 10N K 16V 0402                |
| C7565 | Bottom | Q    | 5 | 0402C                 | CHIPCAP NP0 47P J 50V 0402                |
| C7566 | Bottom | R    | 4 | 0402C                 | CHIPCAP NP0 4P7 C 50V 0402                |
| D2200 | Bottom | L    | 3 | TFBGA_108             | RETU 3.02 LF TSA1GJWE<br>TFBGA108         |
| D2800 | Bottom | L    | 7 | UBGA_289              | RAPGSM PA v1.1 LF C027<br>uBGA289         |
| D3000 | Bottom | J    | 7 | FBGA133_11.1X10.1     | COMBO 256M NOR + 128M DDR<br>DRAM FBGA133 |
| D3300 | Bottom | O    | 7 | TFBGA84               | HW ACCELERATOR STV0984N                   |
| E2001 | Bottom | D    | 4 | PICK_PLACE_9900821    | No description in PDM                     |
| E2002 | Bottom | A    | 6 | PICK_PLACE_9900821    | No description in PDM                     |
| E2003 | Bottom | D    | 4 | PICK_PLACE_9900821    | No description in PDM                     |
| E2010 | Bottom | A    | 7 | PICK_PLACE_9900821    | No description in PDM                     |
| E2070 | Bottom | P    | 3 | PICK_PLACE_9900821    | No description in PDM                     |
| E2071 | Bottom | P    | 3 | PICK_PLACE_9900821    | No description in PDM                     |
| E2075 | Bottom | P    | 4 | PICK_PLACE_9900821    | No description in PDM                     |
| E2101 | Bottom | Q    | 6 | CLIP_040_034164       | No description in PDM                     |
| E2102 | Bottom | Q    | 9 | CLIP_040_034164       | No description in PDM                     |
| E2103 | Bottom | U    | 6 | BT_PAD_9900503        | No description in PDM                     |
| E2104 | Bottom | T    | 6 | BT_PAD_9900503        | No description in PDM                     |
| E2105 | Bottom | U    | 7 | BT_PAD_9900503        | No description in PDM                     |
| E2106 | Bottom | T    | 6 | BT_PAD_9900503        | No description in PDM                     |
| E2401 | Top    | C    | 9 | PICK_PLACE_9900821    | No description in PDM                     |
| E2402 | Top    | C    | 1 | PICK_PLACE_9900821    | No description in PDM                     |
| E2403 | Top    | N    | 1 | PICK_PLACE_9900821    | No description in PDM                     |
| E2405 | Top    | T    | 9 | PICK_PLACE_9900821    | No description in PDM                     |
| E2407 | Top    | N    | 9 | PICK_PLACE_9900821    | No description in PDM                     |
| E2506 | Top    | T    | 1 | PICK_PLACE_9900821    | No description in PDM                     |

| Item  | Side   | Grid |   | Description and value |   |
|-------|--------|------|---|-----------------------|---|
| E6001 | Bottom | T    | 1 | CLIP_040_034164       | No description in PDM                   |
| E6003 | Bottom | T    | 1 | CLIP_040_034164       | No description in PDM                   |
| E7000 | Bottom | U    | 8 | PICK_PLACE_9900821    | No description in PDM                   |
| E7001 | Bottom | U    | 5 | PICK_PLACE_9900821    | No description in PDM                   |
| E7501 | Bottom | T    | 9 | CLIP_040_034164       | No description in PDM                   |
| E7502 | Bottom | T    | 9 | CLIP_040_034164       | No description in PDM                   |
| E7503 | Bottom | U    | 8 | CLIP_040_034164       | No description in PDM                   |
| F2000 | Top    | A    | 5 | 0402_FUSE_AVX_H0.5    | SM FUSE FF 2A 32V 0402                  |
| G2200 | Bottom | C    | 2 | BATTER_EECEP          | RTC BACKUP CAPAC 311 SIZE FOR 2.6V 4UAH |
| G7500 | Bottom | S    | 4 | VCO_DCS02733          | VCO 3296-3980MHZ 4-BAND                 |
| G7501 | Bottom | Q    | 3 | NKG3176B_H1.0         | VCTCX0 38.4MHZ 2.5V 2MA                 |
| L2000 | Top    | A    | 5 | 0603_BLM              | FERR.BEAD 220R/100M 2A 0R05 0603        |
| L2030 | Bottom | C    | 5 | FERRITE_0402          | FERRITE BEAD 0.6R 600R/100MZ 0402       |
| L2031 | Bottom | C    | 4 | FERRITE_0402          | FERRITE BEAD 0.6R 600R/100MZ 0402       |
| L2032 | Bottom | D    | 5 | COIL_LK_1608          | CHIP COIL 68NH J Q12/100MHZ 0603        |
| L2033 | Bottom | D    | 5 | FERRITE_0402          | FERRITE BEAD 0.6R 600R/100MZ 0402       |
| L2034 | Bottom | D    | 5 | FERRITE_0402          | FERRITE BEAD 0.6R 600R/100MZ 0402       |
| L2035 | Bottom | C    | 5 | FERRITE_0402          | FERRITE BEAD 0.6R 600R/100MZ 0402       |
| L2102 | Bottom | Q    | 7 | COIL_LQW1608          | CHIP COIL 56N J Q38/200MHZ 0603         |
| L2103 | Bottom | Q    | 8 | COIL_LQW1608          | CHIP COIL 56N J Q38/200MHZ 0603         |
| L2104 | Top    | A    | 7 | 0405_2_H1.0           | CHIP BEAD ARRAY 2X1000R 0R75 0405       |
| L2105 | Bottom | O    | 2 | 0402L                 | FERR.BEAD 240R/100M 0.4A 0R4 0402       |
| L2106 | Bottom | O    | 2 | 0402L                 | FERR.BEAD 240R/100M 0.4A 0R4 0402       |
| L2202 | Bottom | M    | 2 | 0603_BLM              | FERR.BEAD 220R/100M 2A 0R05 0603        |
| L2207 | Bottom | N    | 4 | 0402L                 | FERR.BEAD 240R/100M 0.4A 0R4 0402       |

| Item  | Side   | Grid |   | Description and value |                                   |
|-------|--------|------|---|-----------------------|-----------------------------------|
| L2208 | Bottom | N    | 4 | 0402L                 | FERR.BEAD 240R/100M 0.4A 0R4 0402 |
| L2209 | Bottom | M    | 5 | 0402L                 | FERR.BEAD 240R/100M 0.4A 0R4 0402 |
| L2210 | Bottom | M    | 5 | 0402L                 | FERR.BEAD 240R/100M 0.4A 0R4 0402 |
| L2211 | Bottom | M    | 4 | 0402L                 | FERR.BEAD 240R/100M 0.4A 0R4 0402 |
| L2212 | Bottom | M    | 4 | 0402L                 | FERR.BEAD 240R/100M 0.4A 0R4 0402 |
| L2270 | Bottom | L    | 4 | 0603_BLM              | FERR.BEAD 220R/100M 2A 0R05 0603  |
| L2271 | Bottom | L    | 4 | 0603_BLM              | FERR.BEAD 220R/100M 2A 0R05 0603  |
| L2272 | Bottom | K    | 4 | 0603_BLM              | FERR.BEAD 220R/100M 2A 0R05 0603  |
| L2273 | Bottom | K    | 4 | 0603_BLM              | FERR.BEAD 220R/100M 2A 0R05 0603  |
| L2301 | Bottom | I    | 4 | 0603_BLM              | FERR.BEAD 220R/100M 2A 0R05 0603  |
| L2302 | Bottom | J    | 4 | CHOKE_SER400_H1.2     | INDUCT WW 10U 0A65 0R35 4X4X1.2   |
| L2304 | Bottom | J    | 2 | CHOKE_SER300_H1.5     | CHOKE 22U M 0R7 0.35A 3.0X3.0X1.5 |
| L2305 | Bottom | I    | 3 | FERRITE_0402          | FERRITE BEAD 0.6R 600R/100MZ 0402 |
| L2306 | Bottom | I    | 3 | FERRITE_0402          | FERRITE BEAD 0.6R 600R/100MZ 0402 |
| L2402 | Bottom | T    | 3 | FERRITE_0402          | FERRITE BEAD 0.6R 600R/100MZ 0402 |
| L2403 | Bottom | J    | 2 | 0402L                 | FERR.BEAD 240R/100M 0.4A 0R4 0402 |
| L2404 | Bottom | T    | 3 | FERRITE_0402          | FERRITE BEAD 0.6R 600R/100MZ 0402 |
| L2405 | Bottom | O    | 2 | FERRITE_0402          | FERRITE BEAD 0.6R 600R/100MZ 0402 |
| L3200 | Bottom | G    | 8 | FERRITE_0402          | FERRITE BEAD 0.6R 600R/100MZ 0402 |
| L3301 | Bottom | N    | 6 | FERRITE_0402          | FERRITE BEAD 0.6R 600R/100MZ 0402 |

| Item  | Side   | Grid |   | Description and value |   |
|-------|--------|------|---|-----------------------|---|
| L3303 | Bottom | P    | 8 | CHOKE_SER300          | INDUCT WW 2.2UH 1A2 0R168<br>310 case size  |
| L3304 | Bottom | O    | 9 | FERRITE_0402          | FERRITE BEAD 0.6R 600R/100MZ<br>0402        |
| L6030 | Bottom | Q    | 2 | 0402L                 | CHIP COIL 2N7 +-0N3 Q29/800M<br>0402        |
| L6031 | Bottom | Q    | 2 | 0402L                 | CHIP COIL 2N7 +-0N3 Q29/800M<br>0402        |
| L6032 | Bottom | Q    | 1 | 0402L                 | CHIP COIL 22N J Q28/800MHZ<br>0402          |
| L6077 | Bottom | R    | 2 | 0402L                 | FERR.BEAD 240R/100M 0.4A 0R4<br>0402        |
| L6100 | Bottom | G    | 7 | 0402LQW               | CHIP COIL 47N +-3%<br>Q25/200MHz 0402       |
| L6101 | Bottom | H    | 6 | 0402L_POL2            | CHIP COIL 120NH J Q8/100MHZ<br>0402         |
| L7010 | Bottom | N    | 5 | 0402L                 | FERR.BEAD 240R/100M 0.4A 0R4<br>0402        |
| L7011 | Bottom | N    | 4 | 0402L                 | FERR.BEAD 240R/100M 0.4A 0R4<br>0402        |
| L7500 | Bottom | S    | 6 | 0402L                 | CHIP COIL 12N J Q31/800MHZ<br>0402          |
| L7501 | Bottom | S    | 6 | 0402L                 | CHIP COIL 12N J Q31/800MHZ<br>0402          |
| L7502 | Bottom | Q    | 5 | FERRITE_0402          | FERRITE BEAD 0.6R 600R/100MZ<br>0402        |
| L7503 | Bottom | Q    | 8 | 0402L                 | CHIP COIL 27N J Q27/800MHZ<br>0402          |
| L7504 | Bottom | R    | 6 | 0402L                 | CHIP COIL 22N J Q28/800MHZ<br>0402          |
| L7505 | Bottom | R    | 6 | 0402L                 | CHIP COIL 22N J Q28/800MHZ<br>0402          |
| L7515 | Bottom | S    | 4 | 0402L                 | CHIP COIL 15N J Q30/800MHZ<br>0402          |
| L7561 | Bottom | Q    | 6 | COIL_HK_1608          | CHIP COIL 470NH J 0603                      |
| M2100 | Bottom | C    | 8 | VIBRA_M_KHN4NX1RA     | SMD VIBRA MOTOR 1.3V 90MA<br>9000RPM        |
| N2030 | Bottom | D    | 5 | CSP_8_2.118X1.118     | IC ANALOG SWITCH SPDT LOW<br>THRESHOLD CSP8 |
| N2031 | Bottom | C    | 3 | XBGA_N14              | ST HEADPHONE AMPLIFIER<br>LM4920 uSMD14     |



| Item  | Side   | Grid |   | Description and value  |   |
|-------|--------|------|---|------------------------|---|
| N2300 | Bottom | J    | 3 | TFBGA_84_6.15X6.15     | TAHVO v5.2 LF TFBGA84                       |
| N2301 | Bottom | J    | 2 | USMD8_1.69X1.69        | WHITE LED DRIVER 4LEDS<br>500mW 8bump USMD8 |
| N2401 | Bottom | G    | 5 | SOT_666                | TRX2+RX4 PEMD9 N&P 10K/47K<br>0W12 SOT666   |
| N3200 | Bottom | G    | 8 | USMD16_2.03X2.03       | VREG & LEVELSHIFT(LP3928)<br>USMD16         |
| N3300 | Bottom | O    | 8 | USMD5_1.417X1.087      | DC/DC CONV LM3671TLX-1.82V<br>uSMD5         |
| N3301 | Bottom | O    | 6 | USMD5_1.47X1.04_H0.675 | VREG LP3985ITLX-2.8 NOPB<br>USMD5           |
| N6030 | Bottom | P    | 2 | CSP_47_3.85X4.05       | BC4-ROM1.0RDL                               |
| N6100 | Bottom | H    | 7 | WLCSP25_3.1X2.9        | FM RECEIVER TEA5760 N1C                     |
| N7505 | Bottom | R    | 5 | TFBGA144               | AHNE401A TRANSCEIVER<br>TFBGA144            |
| N7520 | Bottom | R    | 8 | RF9282E3.6             | PA RF9282E6.5 GSM/EDGE<br>850/900/1800/1900 |
| R2007 | Bottom | C    | 2 | UBGA11_1.6X2.15        | ASIP SILIC USB OTG / ESD BGA11              |
| R2008 | Bottom | C    | 2 | 0402R                  | CHIPRES 0W06 220K J 0402                    |
| R2033 | Bottom | E    | 5 | 0402R                  | CHIPRES 0W06 10K J 0402                     |
| R2034 | Bottom | E    | 5 | 0402R                  | CHIPRES 0W06 100R J 0402                    |
| R2035 | Bottom | D    | 5 | 0402R                  | CHIPRES 0W06 100K J 0402                    |
| R2036 | Bottom | D    | 5 | 0402R                  | CHIPRES 0W06 10K J 0402                     |
| R2044 | Bottom | H    | 5 | 0402R                  | CHIPRES 0W06 220R J 0402                    |
| R2045 | Bottom | E    | 5 | 0402R                  | CHIPRES 0W06 2K2 J 0402                     |
| R2049 | Bottom | D    | 4 | 0402R                  | CHIPRES 0W06 15R J 0402                     |
| R2050 | Bottom | C    | 4 | 0402R                  | CHIPRES 0W06 15R J 0402                     |
| R2051 | Bottom | C    | 5 | FC5_1.1X1.1            | ASIP TVS 4-CH BI ESD 14V 15pF<br>400um BGA5 |
| R2052 | Bottom | C    | 4 | 0402R                  | CHIPRES 0W06 100K J 0402                    |
| R2070 | Bottom | E    | 2 | 0402_NTH5              | NTC RES 0W1 47K J B 4050+-3%<br>0402        |
| R2071 | Bottom | N    | 2 | 0402_VAR               | CHIP VARISTOR VWM14V VC50V<br>0402          |
| R2072 | Bottom | E    | 4 | 0402R                  | CHIPRES 0W06 2K2 J 0402                     |
| R2074 | Bottom | E    | 5 | 0402R                  | CHIPRES 0W06 100R J 0402                    |
| R2100 | Bottom | H    | 5 | FLIP_CHIP_8_1.7X1.7    | ASIP SINGLE ENDED MICROPHONE<br>INTERF BGA8 |

| Item  | Side   | Grid |   | Description and value |                                 |
|-------|--------|------|---|-----------------------|---------------------------------|
| R2101 | Bottom | H    | 5 | 0402R                 | CHIPRES 0W06 220R J 0402        |
| R2102 | Bottom | T    | 5 | 0402R                 | CHIPRES 0W06 10R J 0402         |
| R2103 | Bottom | T    | 5 | 0402R                 | CHIPRES 0W06 10R J 0402         |
| R2104 | Top    | A    | 8 | 0402R                 | CHIPRES JUMPER 0R0 0402         |
| R2105 | Top    | A    | 8 | 0402R                 | CHIPRES JUMPER 0R0 0402         |
| R2106 | Bottom | N    | 5 | 0402_VAR              | CHIP VARISTOR VWM14V VC50V 0402 |
| R2107 | Bottom | N    | 5 | 0402_VAR              | CHIP VARISTOR VWM14V VC50V 0402 |
| R2200 | Bottom | M    | 2 | 0402R                 | CHIPRES 0W06 100K J 0402        |
| R2201 | Bottom | N    | 2 | 0402R                 | CHIPRES 0W06 120K J 0402        |
| R2202 | Bottom | M    | 5 | 0402R                 | CHIPRES JUMPER 0R0 0402         |
| R2203 | Bottom | M    | 5 | 0402R                 | CHIPRES JUMPER 0R0 0402         |
| R2204 | Bottom | M    | 5 | 0402R                 | CHIPRES JUMPER 0R0 0402         |
| R2205 | Bottom | M    | 5 | 0402R                 | CHIPRES JUMPER 0R0 0402         |
| R2212 | Bottom | L    | 4 | 0402R                 | CHIPRES 0W06 470R J 0402        |
| R2213 | Bottom | N    | 3 | 0402R                 | CHIPRES 0W06 4K7 J 0402         |
| R2216 | Bottom | N    | 3 | 0402R                 | CHIPRES 0W06 2M2 J 0402         |
| R2250 | Bottom | N    | 2 | 0402R                 | CHIPRES 0W06 100K J 0402        |
| R2251 | Bottom | N    | 2 | 0402R                 | CHIPRES 0W06 100K J 0402        |
| R2303 | Bottom | H    | 3 | 0603R                 | CHIPRES JUMPER 0R0 0603         |
| R2400 | Bottom | G    | 4 | 0603R                 | CHIPRES JUMPER 0R0 0603         |
| R2406 | Bottom | N    | 2 | 0402R                 | CHIPRES 0W06 27K J 0402         |
| R2407 | Bottom | H    | 5 | 0402R                 | CHIPRES 0W06 47R J 0402         |
| R2408 | Bottom | G    | 4 | 0402R                 | CHIPRES 0W06 22K J 0402         |
| R2418 | Bottom | H    | 4 | 0402R                 | CHIPRES 0W06 470R J 0402        |
| R2419 | Bottom | H    | 5 | 0402R                 | CHIPRES 0W06 470R J 0402        |
| R2421 | Bottom | K    | 2 | 0402R                 | CHIPRES 0W06 33R J 0402         |
| R2422 | Bottom | G    | 5 | 0402R                 | CHIPRES JUMPER 0R0 0402         |
| R2423 | Bottom | G    | 5 | 0402R                 | CHIPRES 0W06 22K J 0402         |
| R2424 | Bottom | I    | 4 | 0402R                 | CHIPRES 0W06 27R J 0402         |
| R2425 | Bottom | G    | 4 | 0402R                 | CHIPRES 0W06 1K0 J 0402         |
| R2426 | Bottom | N    | 9 | 0402R                 | CHIPRES 0W06 47R J 0402         |
| R2427 | Bottom | L    | 1 | 0402R                 | CHIPRES 0W06 47R J 0402         |
| R2430 | Bottom | G    | 4 | 0402R                 | CHIPRES 0W06 22K J 0402         |

| Item  | Side   | Grid |   | Description and value |                                 |
|-------|--------|------|---|-----------------------|---------------------------------|
| R2803 | Bottom | L    | 8 | 0402R                 | CHIPRES 0W06 100R J 0402        |
| R2804 | Bottom | L    | 8 | 0402R                 | CHIPRES 0W06 100R J 0402        |
| R3000 | Bottom | J    | 6 | 0402R                 | CHIPRES 0W06 4K7 J 0402         |
| R3002 | Bottom | L    | 8 | 0402R                 | CHIPRES 0W06 10R J 0402         |
| R3003 | Bottom | K    | 6 | 0402R                 | CHIPRES 0W06 4K7 J 0402         |
| R3004 | Bottom | K    | 7 | 0402R                 | CHIPRES 0W06 4K7 J 0402         |
| R3200 | Bottom | G    | 8 | UBGA11_1.62X2.12      | ASIP MMC FILTER *** PB-FREE *** |
| R3201 | Bottom | H    | 8 | 0402R                 | CHIPRES 0W06 100K J 0402        |
| R3202 | Bottom | H    | 8 | 0402R                 | CHIPRES 0W06 100K J 0402        |
| R3203 | Bottom | H    | 7 | 0402R                 | CHIPRES 0W06 100K J 0402        |
| R3204 | Bottom | H    | 7 | 0402R                 | CHIPRES 0W06 2K2 J 0402         |
| R3205 | Bottom | G    | 8 | 0402R                 | CHIPRES 0W06 680R J 0402        |
| R3206 | Bottom | G    | 8 | 0402R                 | CHIPRES 0W06 1K2 J 0402         |
| R3300 | Bottom | P    | 7 | 0402R                 | CHIPRES 0W06 4K7 J 0402         |
| R3301 | Bottom | P    | 8 | 0402R                 | CHIPRES 0W06 4K7 J 0402         |
| R3305 | Bottom | O    | 7 | 0402R                 | CHIPRES JUMPER 0R0 0402         |
| R3306 | Bottom | P    | 7 | 0402R                 | CHIPRES 0W06 100R J 0402        |
| R3307 | Bottom | P    | 7 | 0402R                 | CHIPRES 0W06 100R J 0402        |
| R3312 | Bottom | I    | 8 | 0402R                 | CHIPRES 0W06 1K0 J 0402         |
| R3313 | Bottom | I    | 8 | 0402R                 | CHIPRES 0W06 1K0 J 0402         |
| R3314 | Bottom | O    | 6 | 0402R                 | CHIPRES 0W06 47R J 0402         |
| R6005 | Bottom | N    | 2 | 0402R                 | CHIPRES 0W06 100K J 0402        |
| R6020 | Bottom | T    | 2 | FERRIT_0402           | CHIPRES JUMPER 0R0 0402         |
| R6030 | Bottom | P    | 2 | 0402R                 | CHIPRES 0W06 10K J 0402         |
| R6031 | Bottom | Q    | 1 | 0402R                 | CHIPRES 0W06 10K J 0402         |
| R6032 | Bottom | P    | 2 | 0402R                 | CHIPRES 0W06 2R2 J 0402         |
| R6034 | Bottom | Q    | 2 | 0402R                 | CHIPRES 0W06 10K J 0402         |
| R6037 | Bottom | Q    | 1 | 0402R                 | CHIPRES 0W06 100K J 0402        |
| R6100 | Bottom | G    | 7 | 0402R                 | CHIPRES 0W06 100K J 0402        |
| R6101 | Bottom | G    | 7 | 0402R                 | CHIPRES 0W06 10K J 0402         |
| R6102 | Bottom | H    | 7 | 0402R                 | CHIPRES JUMPER 0R0 0402         |
| R6103 | Bottom | G    | 6 | 0402R                 | CHIPRES 0W06 22R J 0402         |
| R6104 | Bottom | G    | 7 | 0402R                 | CHIPRES JUMPER 0R0 0402         |
| R6105 | Bottom | G    | 6 | 0402R                 | CHIPRES JUMPER 0R0 0402         |
| R7001 | Bottom | T    | 8 | 0402R                 | CHIPRES JUMPER 0R0 0402         |

| Item  | Side   | Grid |   | Description and value |   |
|-------|--------|------|---|-----------------------|---|
| R7002 | Bottom | T    | 8 | 0402R                 | CHIPRES JUMPER 0R0 0402                 |
| R7501 | Bottom | R    | 4 | 0402R                 | CHIPRES 0W06 2K2 J 0402                 |
| R7502 | Bottom | S    | 5 | 0402R                 | CHIPRES 0W06 10K F 0402                 |
| R7503 | Bottom | Q    | 5 | 0402R                 | CHIPRES 0W06 4K7 J 0402                 |
| R7505 | Bottom | R    | 4 | 0402R                 | CHIPRES 0W06 8K2 F 0402                 |
| R7506 | Bottom | R    | 5 | 0402R                 | CHIPRES 0W06 10R J 0402                 |
| R7507 | Bottom | S    | 5 | 0402R                 | CHIPRES 0W06 10R J 0402                 |
| R7508 | Bottom | R    | 4 | 0402R                 | CHIPRES 0W06 10R J 0402                 |
| R7509 | Bottom | Q    | 4 | 0402R                 | CHIPRES 0W06 22K J 0402                 |
| R7510 | Bottom | Q    | 8 | 0402R                 | CHIPRES 0W06 15R J 0402                 |
| R7522 | Bottom | Q    | 8 | 0402R                 | CHIPRES 0W06 27K J 0402                 |
| R7523 | Bottom | S    | 8 | 0402R                 | CHIPRES JUMPER 0R0 0402                 |
| R7560 | Bottom | Q    | 6 | 0402R                 | CHIPRES 0W06 100R J 0402                |
| S2401 | Bottom | O    | 1 | SWITCH_EVQP7A01K      | SM SW TACT SPST 12V SIDE KEY 2.2N       |
| S2402 | Bottom | S    | 1 | SWITCH_EVQP7A01K      | SM SW TACT SPST 12V SIDE KEY 2.2N       |
| S2403 | Top    | U    | 5 | SWITCH_EVQP7A01K      | SM SW TACT SPST 12V SIDE KEY 2.2N       |
| T7501 | Bottom | R    | 3 | TRANS_HHM1517A2       | TRANSF BALUN 3800 +/- 550MHZ 0805       |
| T7520 | Bottom | S    | 9 | TRANS_LDB15           | TRANSF BALUN 1800+-100MHZ 2X1.25        |
| V2000 | Top    | A    | 4 | BGA_4                 | ASIP TVS BGA4                           |
| V2401 | Bottom | H    | 4 | SOT_666               | TRX2 BIPOLAR 2XPNP 40V 0A1 0W12 SOT666  |
| V2402 | Bottom | G    | 5 | SOT_666               | TRX2+RX4 N 4K7/47K SOT666               |
| V2405 | Top    | G    | 4 | LED_48_21SYGC         | LED WHITE 140MCD 5MA 0603               |
| V2406 | Top    | G    | 6 | LED_48_21SYGC         | LED WHITE 140MCD 5MA 0603               |
| V2407 | Top    | C    | 6 | LED_48_21SYGC         | LED WHITE 140MCD 5MA 0603               |
| V2409 | Top    | C    | 4 | LED_48_21SYGC         | LED WHITE 140MCD 5MA 0603               |
| V2410 | Bottom | H    | 4 | SC79                  | SCH DI 1PS79SB31 200MA 30V SOD523       |
| V2411 | Bottom | H    | 4 | SOT_666               | TRX2 BIPOLAR 2XPNP 40V 0A1 0W12 SOT666  |
| V2412 | Bottom | M    | 1 | LED_CL_194WH_D_BIG    | LED TOP BLUE 5MA min30mcd 0603 max0.4mm |

| Item  | Side   | Grid |   | Description and value            |   |
|-------|--------|------|---|----------------------------------|---|
| V2413 | Bottom | M    | 9 | LED_CL_194WH_D_BIG               | LED TOP BLUE 5MA min30mcd<br>0603 max0.4mm  |
| X1001 | Bottom | U    | 3 | CON_24R_JANK_P0.4                | CONN BTB 2X12 F P0.4 30V 0.2A               |
| X2000 | Bottom | A    | 7 | CON_JACK_HR33NK_2DJA_2<br>S      | CONN CHR DIA 2.0MM COMPRESS                 |
| X2002 | Bottom | B    | 3 | CON_UX60SC_MB_5ST_1.2L           | CONN USB 5POL MINI-USB B TYPE<br>P0.8       |
| X2030 | Bottom | B    | 5 | CON_T389093_A1                   | SMD CONN AUD/VID 4POL 30V 2A,<br>2.5mm DIA  |
| X2060 | Top    | A    | 3 | TRACEABILITY_PAD                 | MODULE ID COMPONENT<br>2.8X1.8X0.3          |
| X2070 | Bottom | O    | 3 | LYNX_BATT_CONN_H7.0              | SM BATTERY CONN 3POL SPR 12V<br>2A          |
| X2700 | Bottom | G    | 3 | SIM_CONN_M_SK_2005001<br>65_H1.7 | CONN SIM SM 6POL P2.54 H1.05                |
| X3200 | Bottom | E    | 7 | MOLEX_RSD_501885                 | CONN SMC TRANSFLASH MMC                     |
| X3300 | Bottom | P    | 5 | SMIA85                           | SMIA85 SOCKET                               |
| X7000 | Bottom | T    | 8 | RF_SWITCH_MS_156                 | SM CONN RF JACK 50R 2W 6GHZ                 |
| Z2001 | Bottom | C    | 2 | FERRITE_0402                     | FERRITE BEAD 0.6R 600R/100MZ<br>0402        |
| Z2400 | Bottom | H    | 4 | BGA24_P0.4_H0.67                 | ASIP 10-CH LCD FILTER W/ESD<br>BGA24        |
| Z2401 | Top    | U    | 4 | SWLP_18_2.01X1.66                | ASIP 7-CH LCD FILTER W/ESD<br>BGA18         |
| Z2402 | Bottom | R    | 2 | SWLP_18_2.01X1.66                | ASIP 7-CH LCD FILTER W/ESD<br>BGA18         |
| Z2700 | Bottom | H    | 2 | SWLP8_1.21X1.21                  | ASIP SIM ESD/EMI FILT 400UM<br>BGA8         |
| Z6030 | Bottom | R    | 2 | EZVQ42NM61S                      | LTCC FILT 2441.75+-41.75MHZ<br>2.5X2        |
| Z7001 | Bottom | T    | 8 | DEA101910DT                      | PHASESHIFTER-60°@1850<br>GSM850...1900 0402 |
| Z7002 | Bottom | T    | 8 | DEA101910DT                      | PHASESHIFTER-60°@1850<br>GSM850...1900 0402 |
| Z7501 | Bottom | S    | 7 | FILTER_2.1X1.7_10P_H0.6          | DUAL RX SAW FILTER 1800/1900<br>MHz 2016    |
| Z7503 | Bottom | Q    | 6 | MODULE_SP_LMZ_137                | SAW MODULE TX GSM<br>850/900MHz 4.5x3.2     |
| Z7504 | Bottom | R    | 7 | FILTER_2.1X1.7_10P_H0.65         | DUAL RX SAW FILTER 850/900<br>MHz 2016      |

| Item  | Side   | Grid |   | Description and value |                                   |
|-------|--------|------|---|-----------------------|-----------------------------------|
| Z7520 | Bottom | S    | 7 | FERRITE_FBMJ1608      | FERRITE BEAD 0R01 28R/100MHZ 0603 |

## Swap units

**Table 6 Swap phones**

**Note:** For product codes, please refer to the latest Service bulletin.

| Swap phones                              |
|--|
| <b>EMEA</b>                              |
| RM-217 SWAP TRX EURO-C BLKSILVER LATIN   |
| RM-217 SWAP TRX EURO-C FR BLKSILV LATIN  |
| RM-217 SWAP TRX EURO-C TR BLKSILV LATIN  |
| RM-217 SWAP TRX EURO-I UKRAIN BLKSLV CYR |
| RM-217 SWAP TRX EURO-I RU BLKSILV CYR    |
| RM-217 SWAP TRX MEA-13 BLKSILVER LATIN   |
| RM-217 SWAP TRX EURO-F BLKSILVER HEBREW  |
| RM-217 SWAP TRX EURO-H BLKSILVER GREEK   |
| RM-217 SWAP TRX MEA-1 BLKSILVER ARABIC   |


**Table 7 Lightswap**

**Note:** For product codes, please refer to the latest Service bulletin.


| Lightswap                                |
|--|
| <b>EMEA</b>                              |
| RM-217 LIGHTSWAP ENGINE EURO-C           |
| RM-217 LIGHTSWAP ENGINE EURO-C FR        |
| RM-217 LIGHTSWAP ENGINE EURO-C TR LATIN  |
| RM-217 LIGHTSWAP ENGINE EURO-I UKRAI CYR |
| RM-217 LIGHTSWAP ENGINE EURO-I RU CYR    |
| RM-217 LIGHTSWAP ENGINE MEA-13 LATIN     |
| <b>APAC</b>                              |
| RM-217 LIGHTSWAP ENGINE APAC-U           |
| RM-217 LIGHTSWAP ENG APAC-T PHILLIP LAT  |
| <b>China</b>                             |
| RM-217 LIGHTSWAP ENGINE APAC-R           |
| RM-217 LIGHTSWAP ENGINE APAC-P           |
| RM-217 LIGHTSWAP ENGINE CHINA-Q HONGKONG |

■ **Component layouts**

**Component layout - top (1ywa\_32a)**

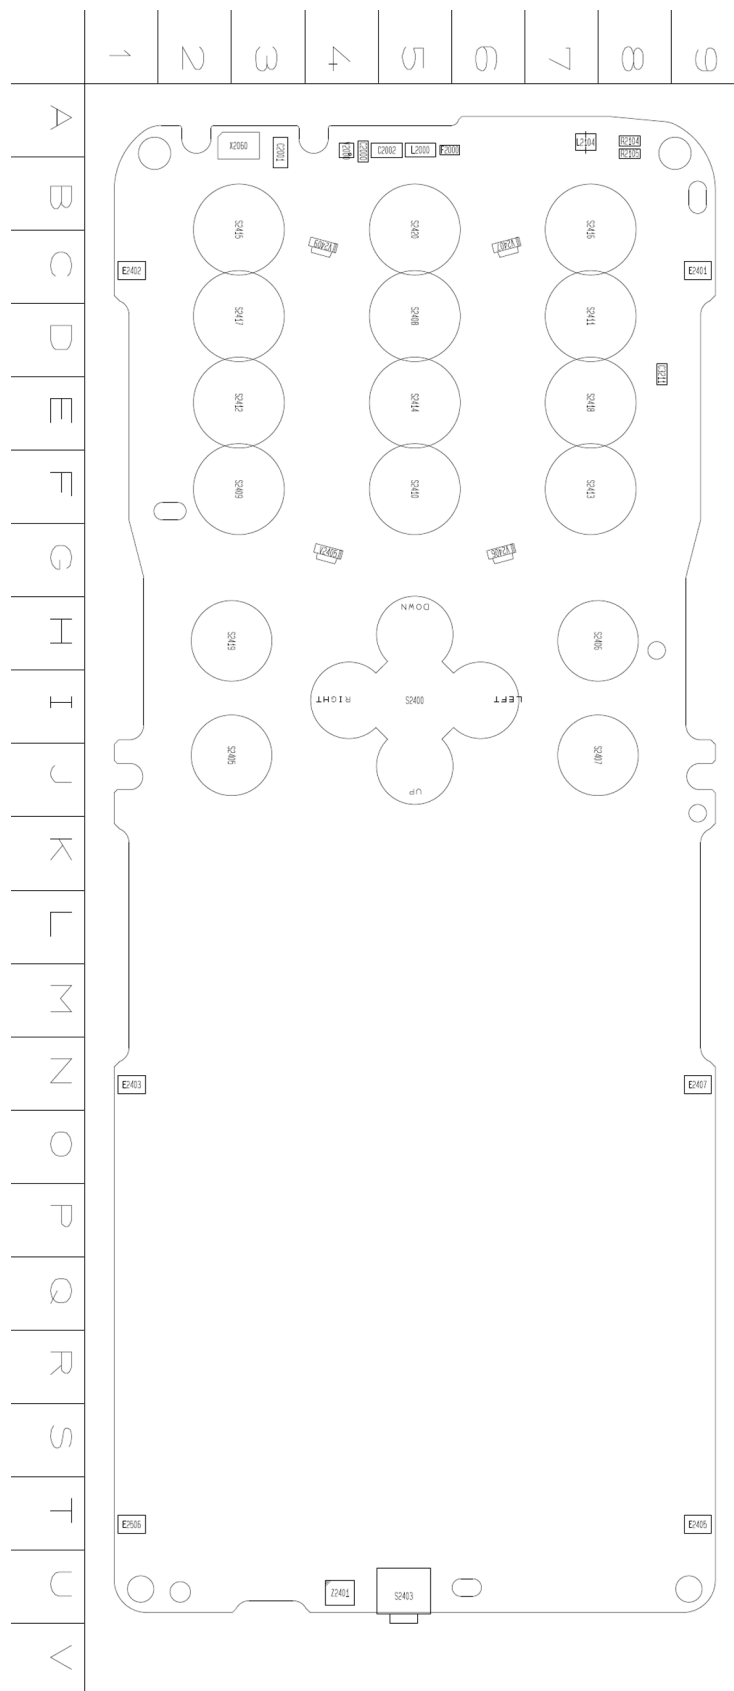

**Component layout - bottom (1ywa\_32a)**

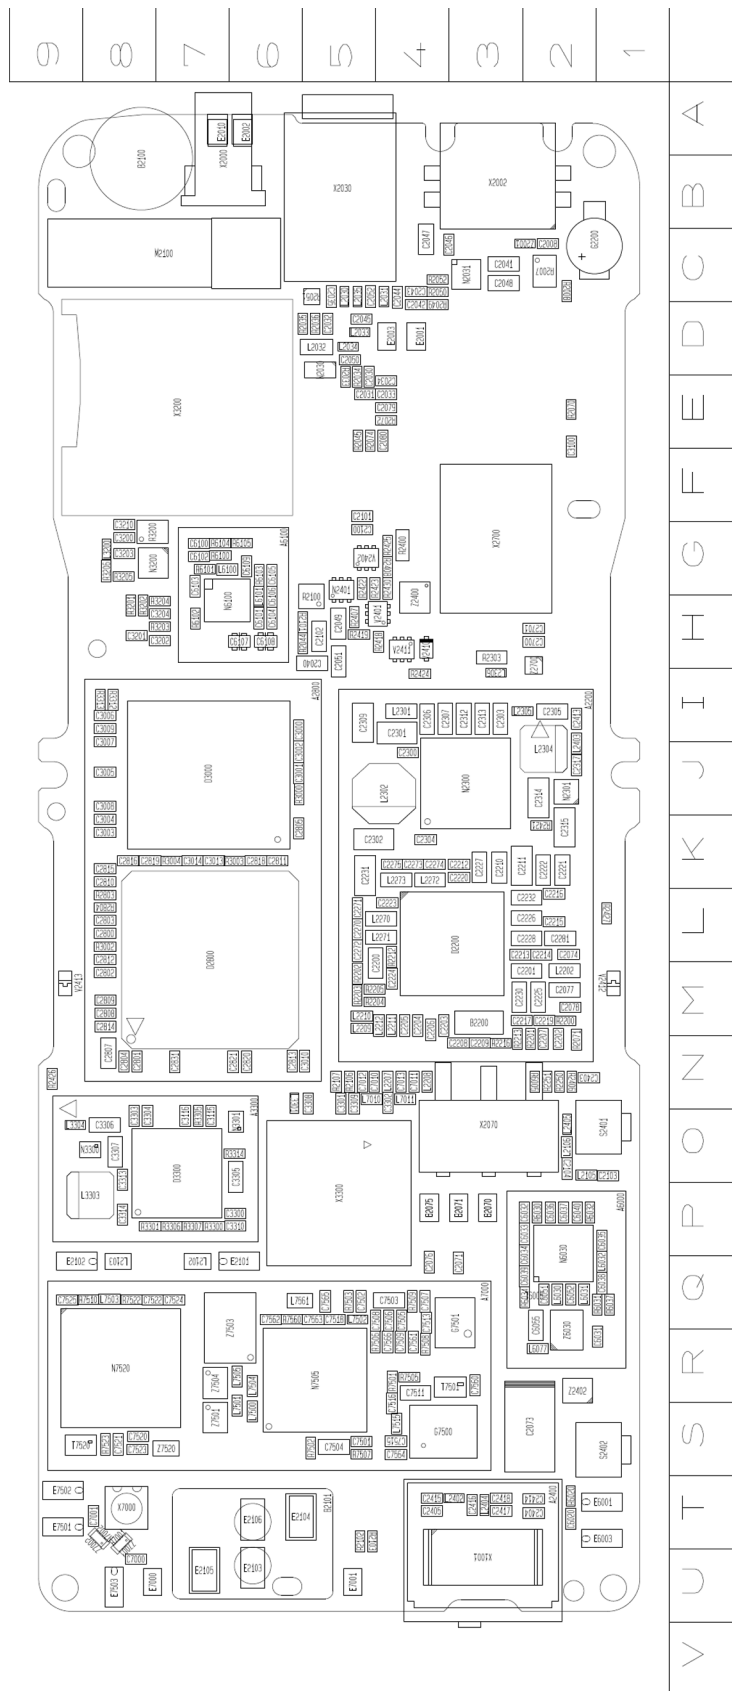



## **3 — Service Software Instructions**

(This page left intentionally blank.)

## Table of Contents

|   |      |
|---|------|
| Phoenix installation steps in brief .....       | 3-5  |
| Installing Phoenix .....                        | 3-6  |
| Updating Phoenix installation .....             | 3-8  |
| Uninstalling Phoenix .....                      | 3-9  |
| Repairing Phoenix installation .....            | 3-11 |
| Phone data package overview .....               | 3-11 |
| Installing phone data package .....             | 3-12 |
| Uninstalling phone data package .....           | 3-15 |
| Configuring users in Phoenix .....              | 3-17 |
| Managing connections in Phoenix .....           | 3-17 |
| Installing flash support files for FPS-10 ..... | 3-19 |
| Updating FPS-10 flash prommer software .....    | 3-22 |

## List of Figures

|  |      |
|--|------|
| Figure 2 Dongle not found .....  | 3-6  |
| Figure 3 Disclaimer text .....   | 3-7  |
| Figure 4 InstallShield Wizard Complete .....                           | 3-8  |
| Figure 5 Installation interrupted .....                                | 3-9  |
| Figure 6 Remove program .....  | 3-10 |
| Figure 7 Finish uninstallation .....                                   | 3-10 |
| Figure 8 Repair program .....  | 3-11 |
| Figure 9 Data package setup information .....                          | 3-13 |
| Figure 10 Data package destination folder .....                        | 3-14 |
| Figure 11 InstallShield Wizard Complete .....                          | 3-15 |
| Figure 12 Uninstalling phone data package .....                        | 3-16 |
| Figure 13 Finishing data package uninstallation .....                  | 3-16 |
| Figure 14 Phoenix login .....  | 3-17 |
| Figure 15 New user configured .....                                    | 3-17 |
| Figure 16 Select mode: Manual .....                                    | 3-18 |
| Figure 17 Connections list .....                                       | 3-19 |
| Figure 18 Connection information .....                                 | 3-19 |
| Figure 19 Product support module information (example from RM-1) ..... | 3-19 |
| Figure 20 Flash update welcome dialog .....                            | 3-20 |
| Figure 21 Flash installation interrupted .....                         | 3-20 |
| Figure 22 Flash destination folder .....                               | 3-21 |
| Figure 23 Finish flash update .....                                    | 3-22 |
| Figure 24 Prommer SW update finished .....                             | 3-23 |
| Figure 25 Prommer maintenance window .....                             | 3-23 |
| Figure 26 Flash directory window .....                                 | 3-24 |

(This page left intentionally blank.)

## ■ *Phoenix* installation steps in brief

### Prerequisites

Recommended hardware requirements:

- Computer processor: Pentium 700 MHz or higher
- RAM 256 MB
- Disk space 100-300 MB

Supported operating systems:

- *Windows 2000* Service Pack 3 or higher
- *Windows XP* Service Pack 1 or higher

### Context

*Phoenix* is a service software for reprogramming, testing and tuning phones.

*Phoenix* installation contains:

- Service software support for all phone models included in the package
- Flash update package files for programming devices
- All needed drivers for:
  - PKD-1 (DK2) dongle
  - DKU-2 USB cable

**Note:** Separate installation packages for flash update files and drivers are also available, but it is not necessary to use them unless there are updates between *Phoenix* service software releases. If separate update packages are used, they should be used after *Phoenix* and data packages have been installed.

The phone model specific data package includes all changing product specific data:

- Product software binary files
- Files for type label printing
- Validation file for the faultlog repair data reporting system
- All product specific configuration files for *Phoenix* software components

**Note:** *Phoenix* and phone data packages should only be used as complete installation packages. Uninstallation should be made from the *Windows* Control Panel.

To use *Phoenix*, you need to:

### Steps

1. Connect a PKD-1 (DK2) dongle to the computer parallel port.
2. Install *Phoenix*.
3. Install the phone-specific data package.
4. Configure users.
5. Manage connection settings (depends on the tools you are using).
  - Update FPS-10 software
  - Activate SX-4 smart card, if you need tuning and testing functions.

**Note:** When FPS-10 is used only for product software updates, SX-4 smart card is not needed.

## Results

*Phoenix* is ready to be used with FPS-10 flash prommer and other service tools.


### ■ Installing *Phoenix*

#### Prerequisites

- Check that a dongle is attached to the parallel port of your computer.
- Download the *Phoenix* installation package (for example, *phoenix\_service\_sw\_2004\_39\_x\_xx.exe*) to your computer (in *C:|TEMP*, for instance).
- Close all other programs.
- Depending on your operating system, administrator rights may be required to install *Phoenix*.
- If uninstalling or rebooting is needed at any point, you will be prompted by the InstallShield program.

#### Context

At some point during the installation procedure, you may get the following message:

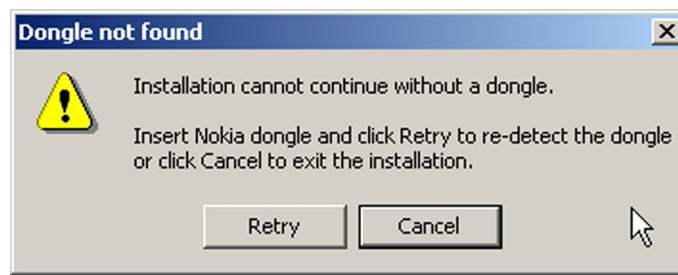

**Figure 2 Dongle not found**

This may be a result of a defective or too old PKD-1 dongle.

Check the COM/parallel ports used. After correcting the problem, you can restart the installation.

For more detailed information, please refer to *Phoenix* Help files.

**Tip:** Each feature in *Phoenix* has its own Help function, which can be activated while running the program. Press the **F1** key or the feature's **Help** button to activate a Help file.

#### Steps

1. To start the installation, run the application file (for example, *phoenix\_service\_sw\_2004\_39\_x\_xx.exe*).
2. In the *Welcome* dialogue, click **Next**.

3. Read the disclaimer text carefully and click **Yes**.

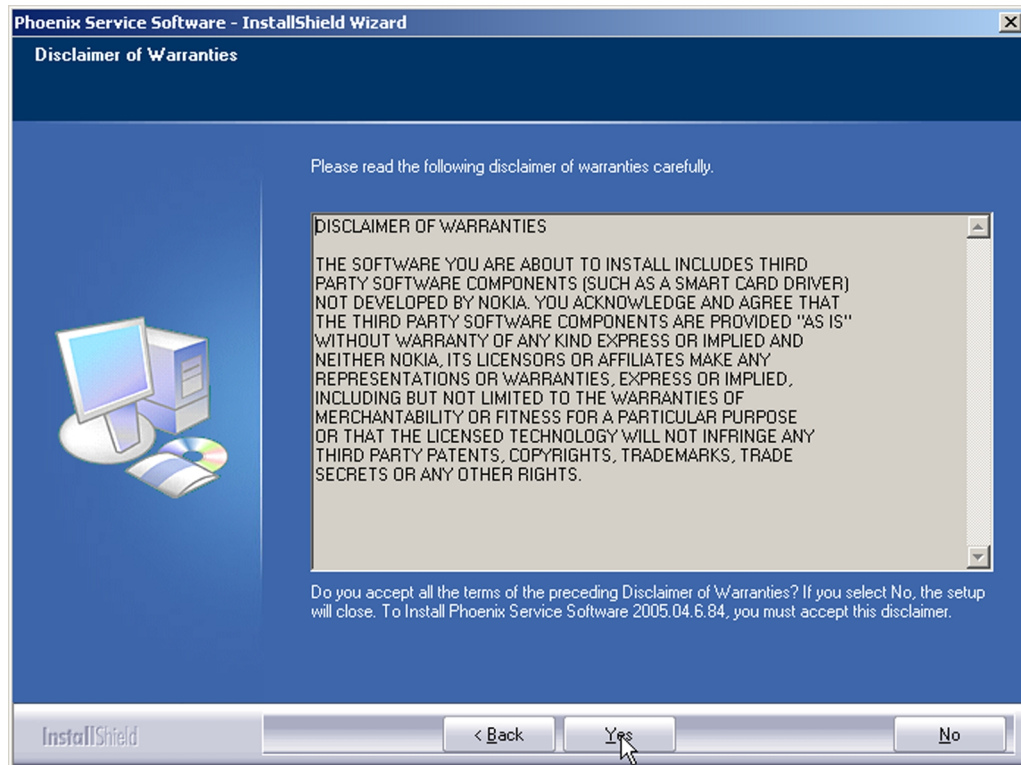


Figure 3 Disclaimer text

4. Choose the destination folder.

The default folder *C:\ProgramFiles\Nokia\Phoenix* is recommended.

5. To continue, click **Next**.

To choose another location, click **Browse** (not recommended).

6. Wait for the components to be copied.

The progress of the installation is shown in the *Setup Status* window.

7. Wait for the drivers to be installed and updated.

The process may take several minutes to complete.

If the operating system does not require rebooting, the PC components are registered right away.

If the operating system requires restarting your computer, the Install Shield Wizard will notify about it.

Select **Yes...** to reboot the PC immediately or **No...** to reboot the PC manually afterwards.

After the reboot, all components are registered.

**Note:** *Phoenix* does not work, if the components have not been registered.

8. To end the installation, click **Finish**.

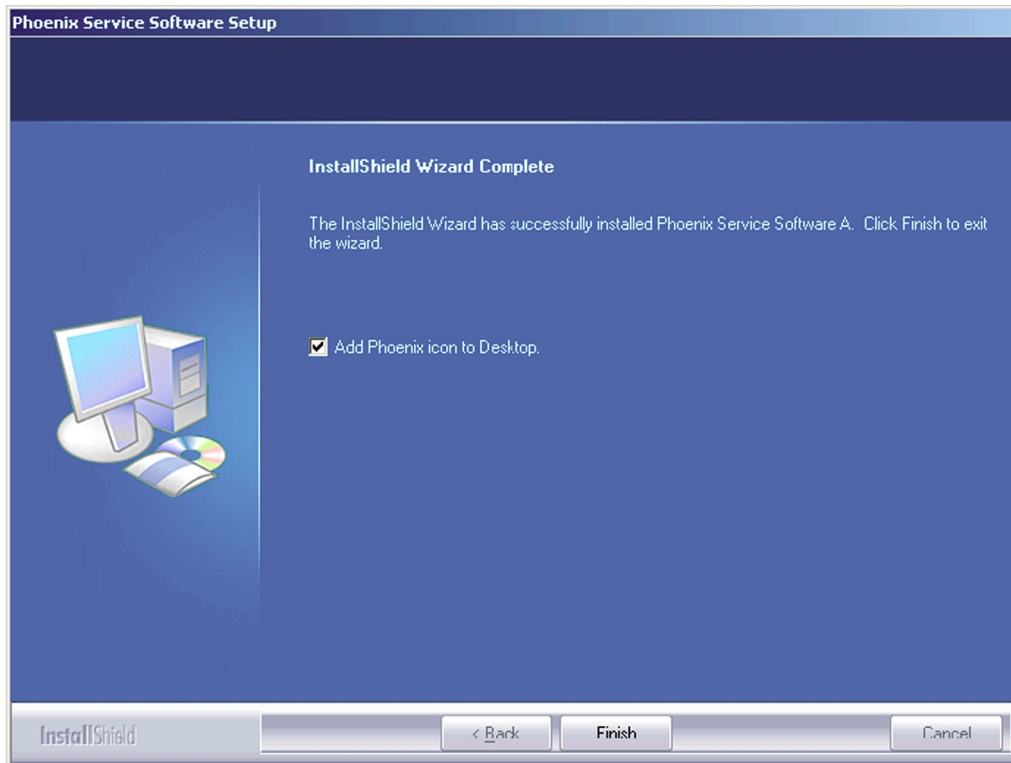


Figure 4 InstallShield Wizard Complete

## Next actions

After the installation, *Phoenix* can be used after:

- installing phone model specific data package for *Phoenix*
- configuring users and connections


FPS-10 flash prommer can be used after updating their flash update package files.

## ■ Updating *Phoenix* installation

### Context

- If you already have the *Phoenix* service software installed on your computer, you need to update the software when new versions are released.
- To update *Phoenix*, you need to follow the same steps as when installing it for the first time.
- When you are updating, for example, from version **a14\_2004\_16\_4\_47** to **a15\_2004\_24\_7\_55**, the update will take place automatically without uninstallation.
- Always use the latest available versions of both *Phoenix* and the phone-specific data package. Instructions can be found in the phone model specific Technical Bulletins and phone data package *readme.txt* files (shown during installation).
- If you try to update *Phoenix* with the same version you already have (for example, **a15\_2004\_24\_7\_55** to **a15\_2004\_24\_7\_55**), you are asked if you want to uninstall the existing version. In this case you can choose between a total uninstallation or a repair installation in a similar way when choosing to uninstall the application from the *Windows* Control Panel.
- If you try to install an older version (for example, downgrade from **a15\_2004\_24\_7\_55** to **a14\_2004\_16\_4\_47**), installation will be interrupted.



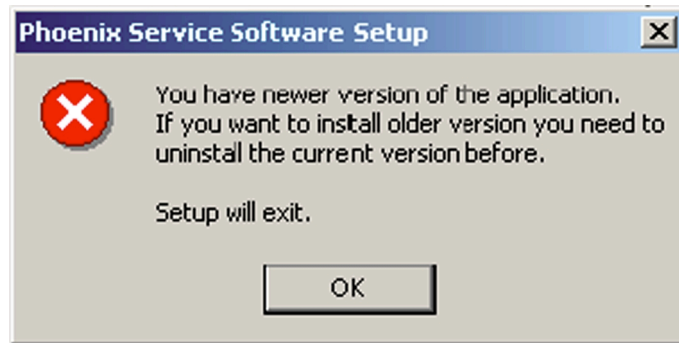

**Figure 5 Installation interrupted**

- Always follow the instructions on the screen.

## Steps

1. Download the installation package to your computer hard disk.
2. Close all other programs.
3. Run the application file (for example, *phoenix\_service\_sw\_2004\_39\_x\_xx.exe*).

## Results

A new *Phoenix* version is installed and driver versions are checked and updated.

## ■ Uninstalling *Phoenix*


### Context

You can uninstall *Phoenix* service software manually from the *Windows* Control Panel.

### Steps

1. Open the **Windows Control Panel**, and choose **Add/Remove Programs**.


2. To uninstall *Phoenix*, choose **Phoenix Service Software**→**Change/Remove**→**Remove**.

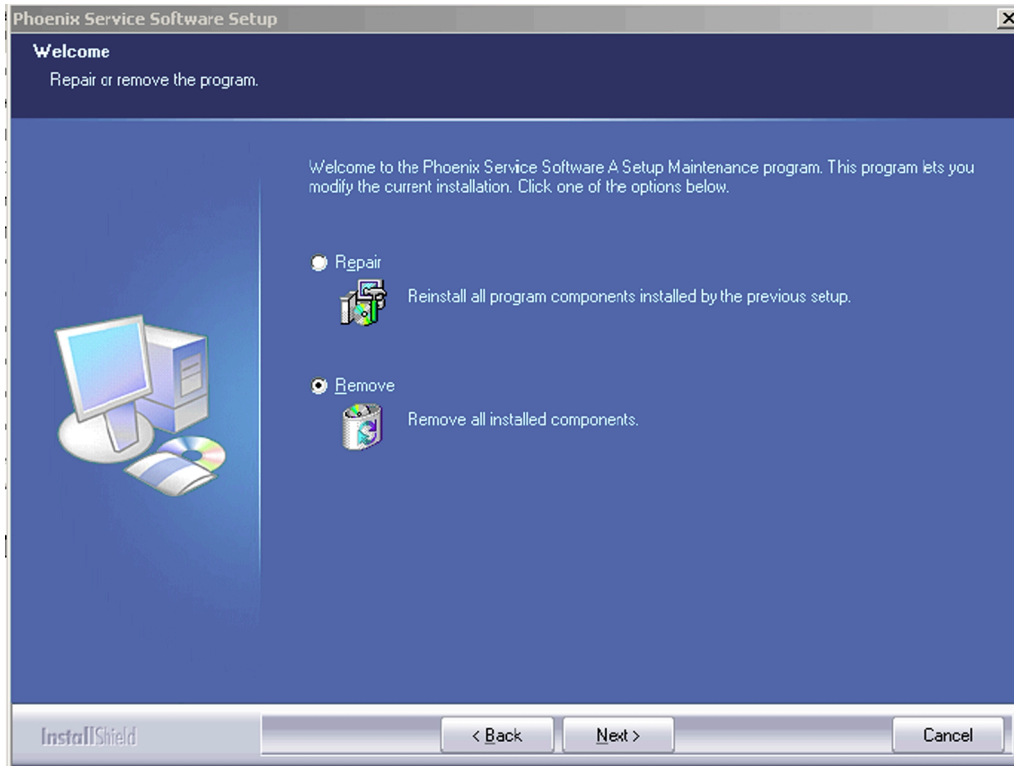

**Figure 6 Remove program**

The progress of the uninstallation is shown.

3. If the operating system does not require rebooting, click **Finish** to complete.

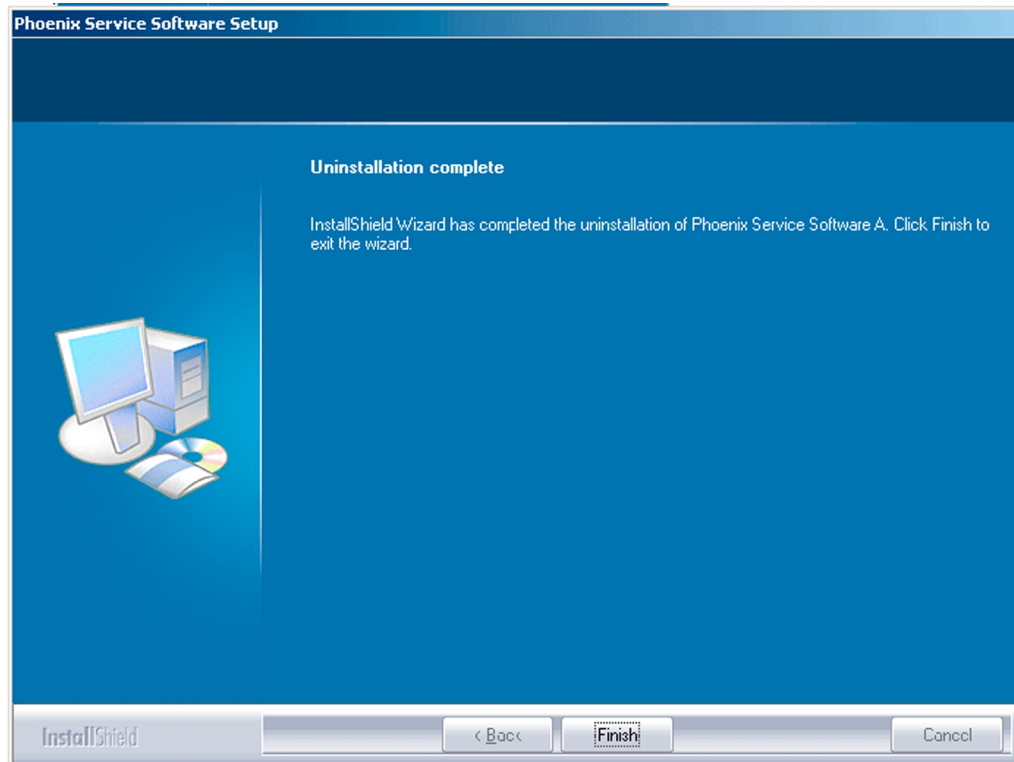

**Figure 7 Finish uninstallation**

If the operating system requires rebooting, InstallShield Wizard will notify you. Select **Yes...** to reboot the PC immediately and **No...** to reboot the PC manually afterwards.

## ■ Repairing *Phoenix* installation


### Context

If you experience any problems with the service software or suspect that files have been lost, use the repair function before completely reinstalling *Phoenix*.

**Note:** The original installation package (for example, *phoenix\_service\_sw\_a15\_2004\_24\_7\_55.exe*) must be found on your PC when you run the repair setup.

### Steps

1. Open **Windows Control Panel**→**Add/Remove Programs** .
2. Choose **Phoenix Service Software**→**Change/Remove** .
3. In the following view, select **Repair**.

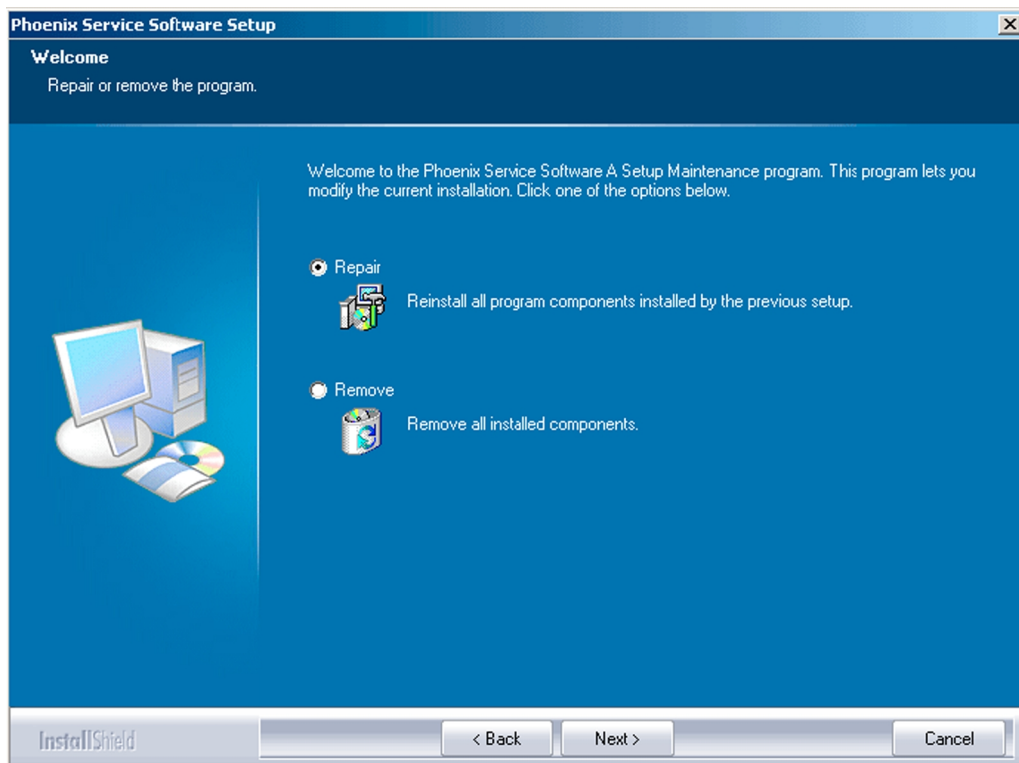

**Figure 8 Repair program**

*Phoenix* reinstalls components and registers them.

The procedure is the same as when updating *Phoenix*.

4. To complete the repair, click **Finish**.

## ■ Phone data package overview

Each product has its own data package (DP). The product data package contains all product-specific data files to make the Phoenix service software and tools usable with a certain phone model.

The phone data package contains the following:

- Product software binary files

- Files for type label printing
- Validation file for the fault log repair data reporting system
- All product-specific configuration files for Phoenix software components

Data files are stored in **C:\Program Files\Nokia\Phoenix** (default).

## ■ Installing phone data package

### Prerequisites

- A phone-specific data package contains all data required for the *Phoenix* service software and service tools to be used with a certain phone model.
- Check that a dongle is attached to the parallel port of your computer.
- Install *Phoenix* service software.
- Download the installation package (for example, *XX-XX\_dp\_EA\_v\_1\_0.exe*) to your computer (for example, in C:\TEMP).
- Close all other programs.

(XX-XX = type designator of the product)


If you already have *Phoenix* installed on your computer, you will need to update it when a new version is released.

**Note:** Often *Phoenix* and the phone-specific data package come in pairs, meaning that a certain version of *Phoenix* can only be used with a certain version of a data package. Always use the latest available versions of both. Instructions can be found in phone-specific Technical Bulletins and *readme.txt* files of data packages.


### Steps

1. To start the installation, run the application file (for example, *XX-XX\_dp\_EA\_v\_1\_0.exe*),  
Wait for the installation files to be extracted.

2. Click **Next**.

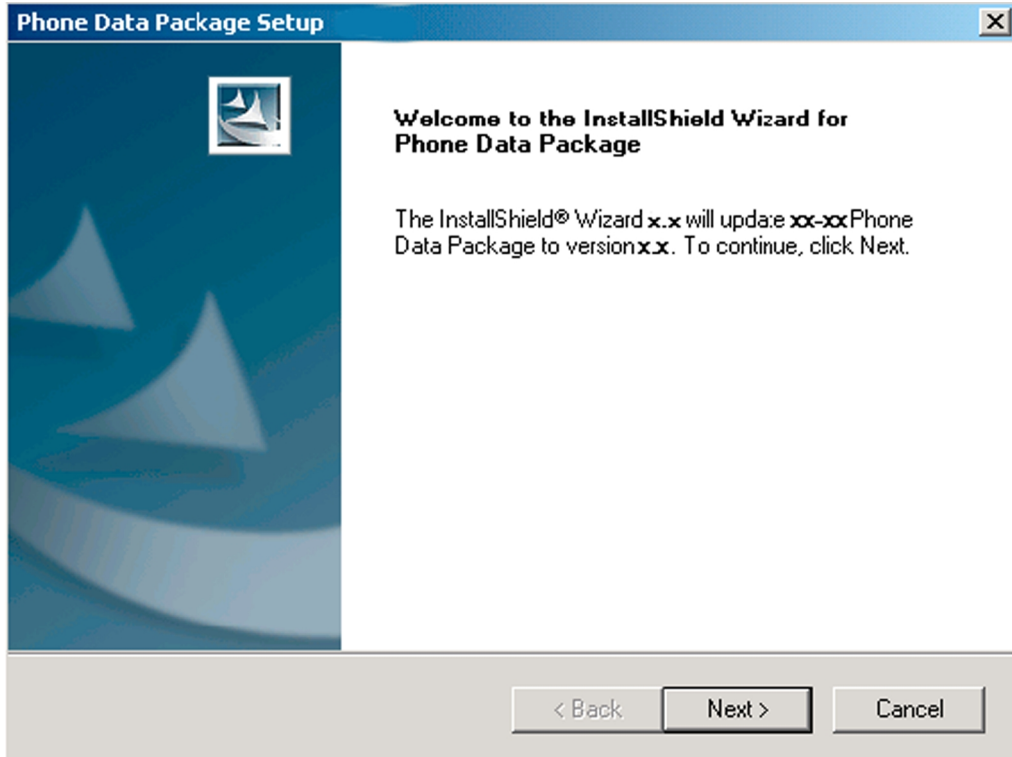

3. In the following view you can see the contents of the data package. Read the text carefully. There is information about the *Phoenix* version required with this data package.

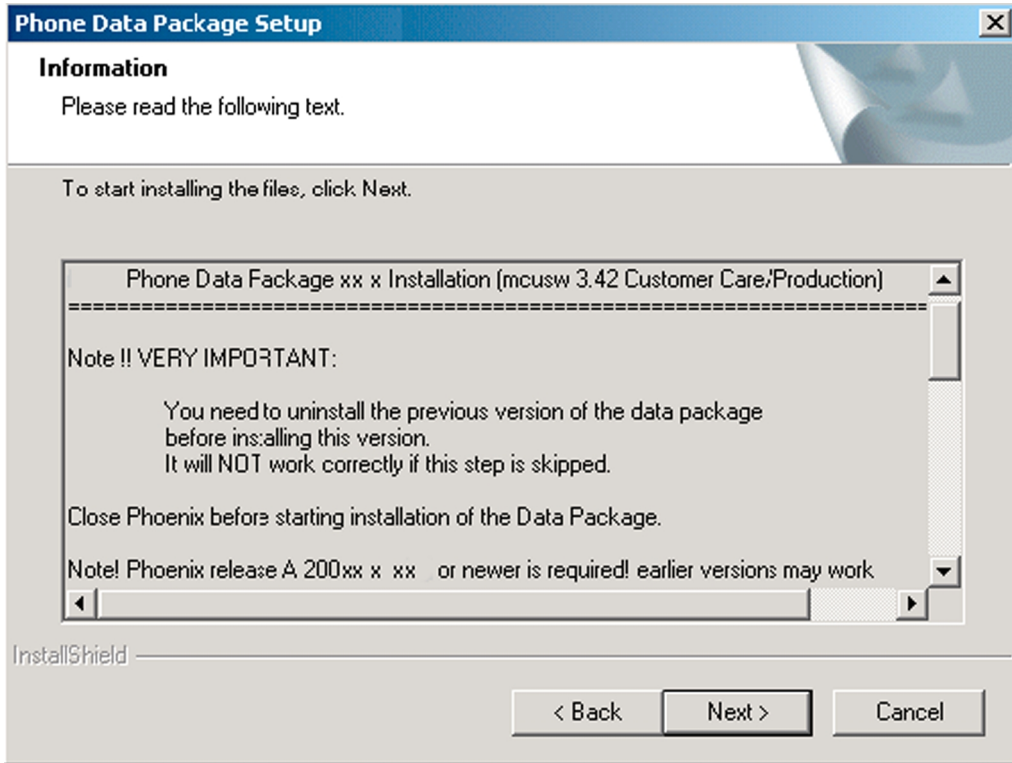

**Figure 9 Data package setup information**

4. To continue, click **Next**.

5. Choose the destination folder, and click **Next** to continue.


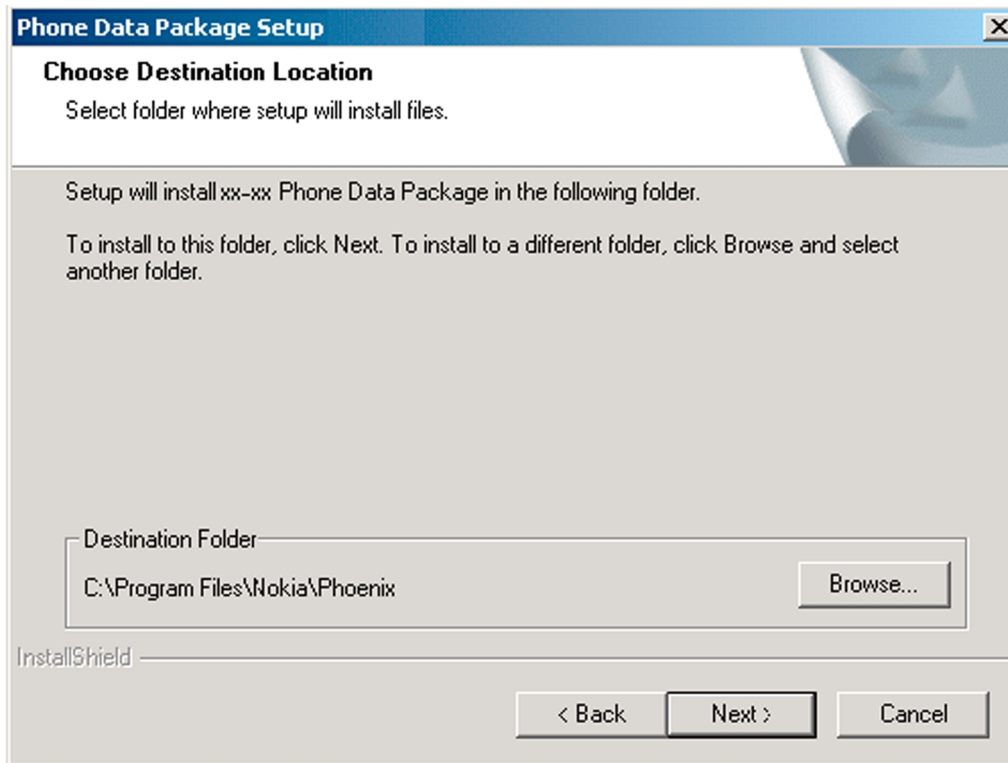


Figure 10 Data package destination folder


The InstallShield Wizard checks where *Phoenix* is installed, and the directory is shown.

6. To start copying the files, click **Next**.

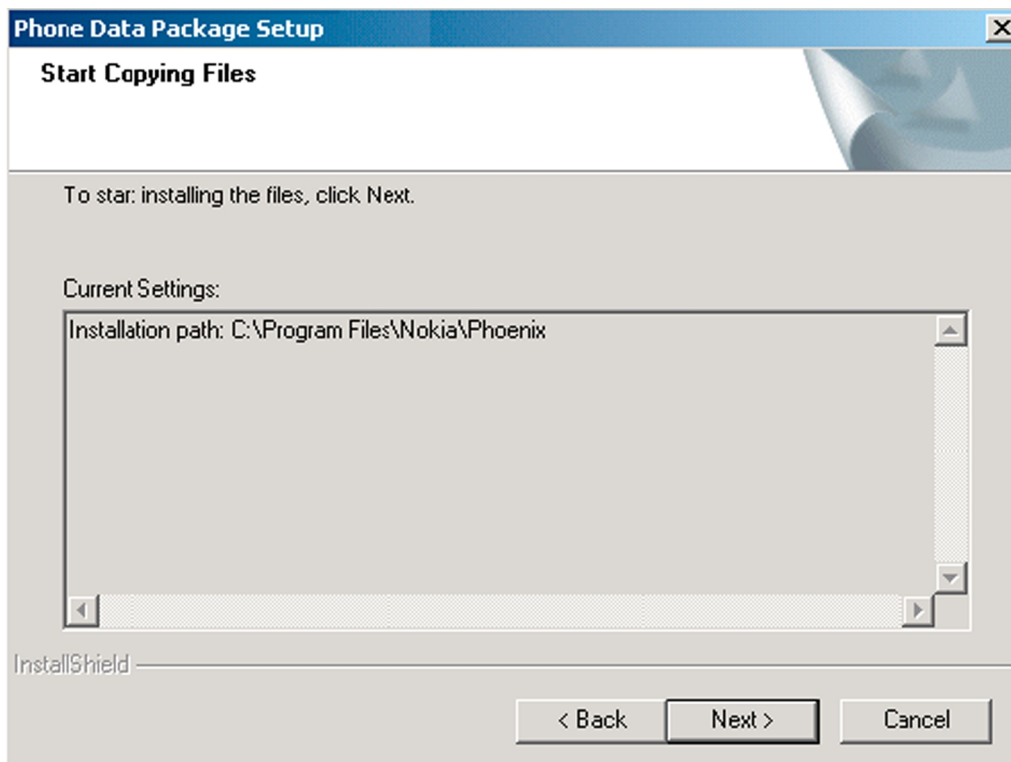

Phone model specific files are installed. Please wait.

7. To complete the installation, click **Finish**.

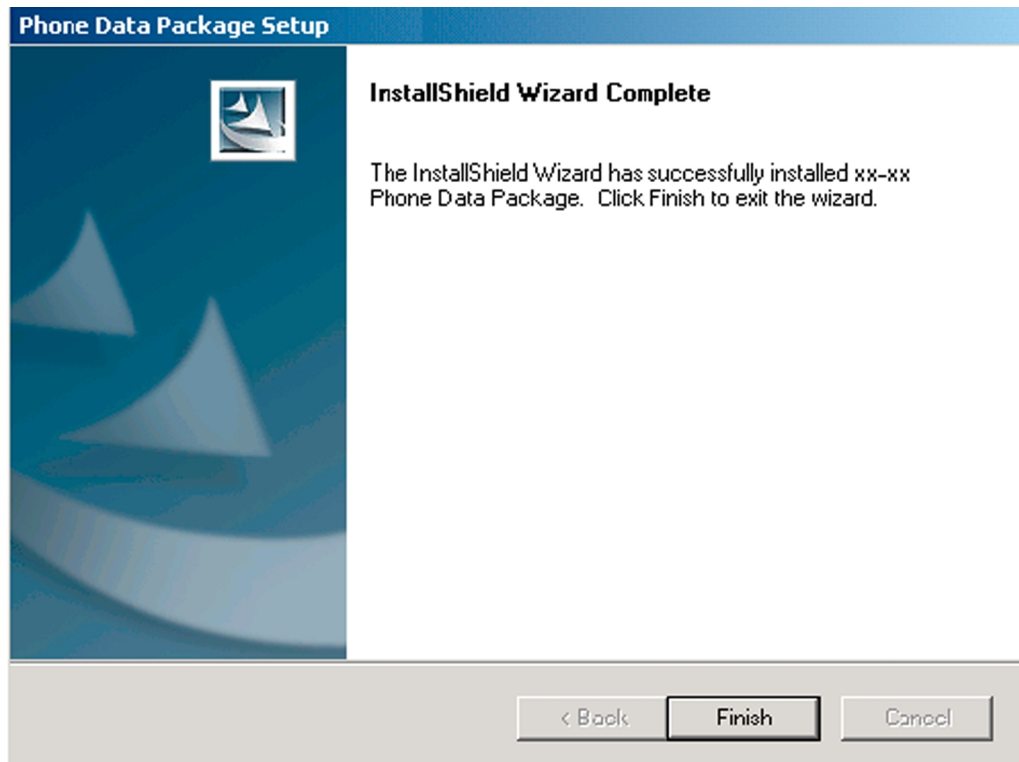

**Figure 11 InstallShield Wizard Complete**

## Next actions

*Phoenix* can be used for flashing phones and printing type labels after:

- Configuring users
- Managing connections

FPS-10 can be used after updating their flash update package files.

## ■ Uninstalling phone data package

### Context


There is no need to uninstall an older version of a data package, unless instructions to do so are given in the *readme.txt* file of the data package and bulletins related to the release.

Please read all related documents carefully.

### Steps


1. Locate the data package installation file (e.g. *XX-XX\_dp\_EA\_v\_1\_0.exe*) from your computer.
2. To start the uninstallation procedure, double-click the data package installation file.

3. To uninstall the data package, click **OK** or to interrupt the uninstallation, click **Cancel**.

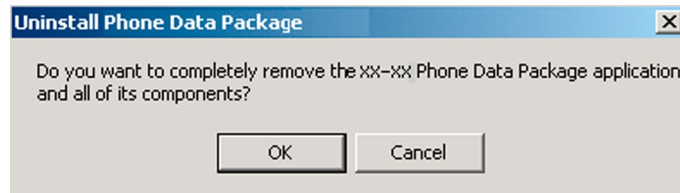

**Figure 12 Uninstalling phone data package**

4. When the data package is uninstalled, click **Finish**.

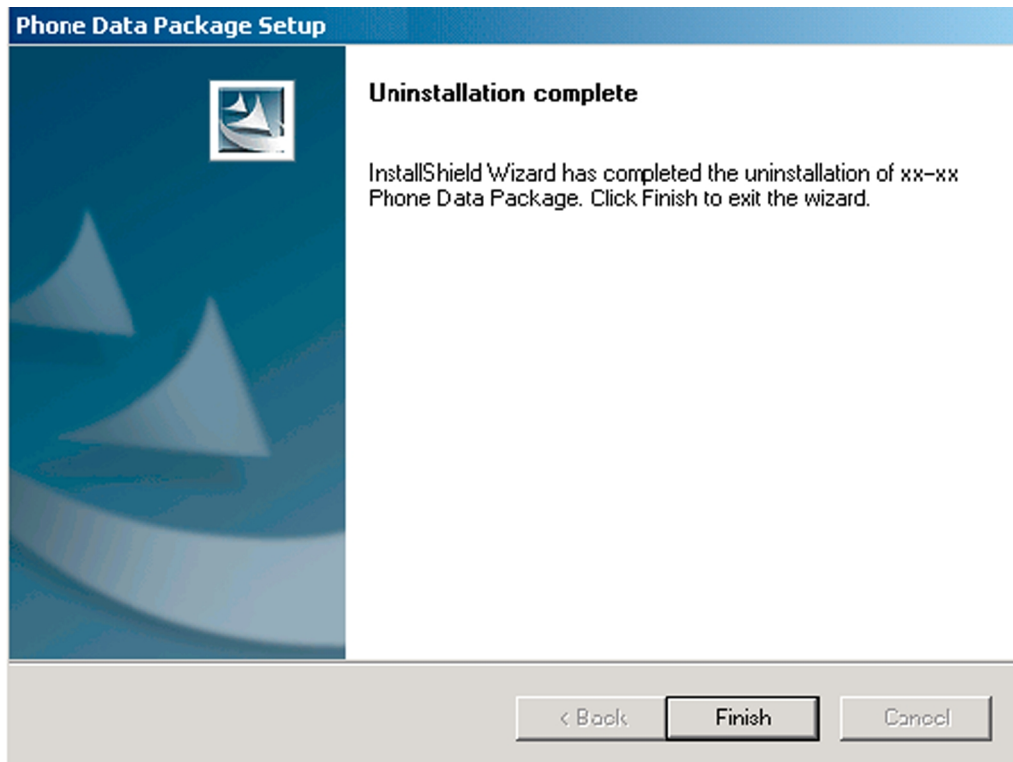

**Figure 13 Finishing data package uninstallation**

### Alternative steps

- You can also uninstall the data package manually from **Control Panel**→**Add/Remove Programs**→**xx-xx\* Phone Data Package** . (\*= type designator of the phone).



## ■ Configuring users in *Phoenix*

### Steps

1. Start *Phoenix* service software, and log in.

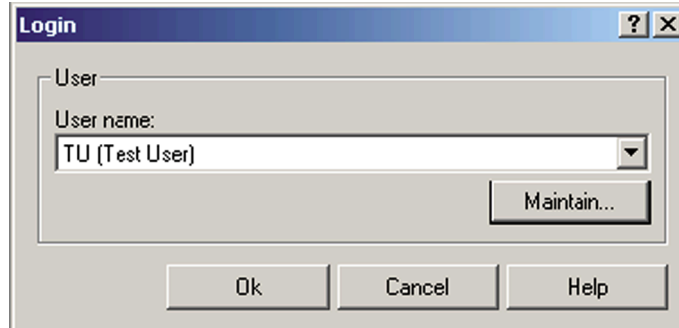


Figure 14 Phoenix login

- If the user ID is already configured, select s/he from the *User name* drop-down list, and click **OK**.
2. To add a new user, or to edit existing ones, click **Maintain**.
  3. To add a new user, click **New**.
  4. Type in the name and initials of the user, and click **OK**.  
The user is added to the user name list.
  5. Select the desired user from the *User name* drop-down list, and click **OK**.

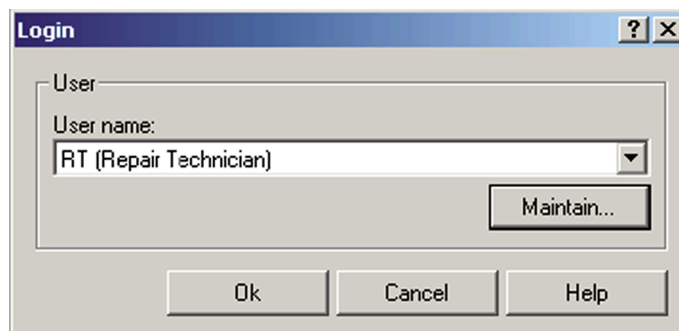


Figure 15 New user configured

## ■ Managing connections in *Phoenix*

### Context

With the **Manage Connections** feature you can edit and delete existing connections or create new ones.


**Note:** After choosing the desired connection, and connecting the phone to a PC for the first time, allow the PC to install the USB device drivers first. Please note that this may take some time to complete.

If there are problems after the driver installation, check that the USB connection is active from the **Windows Control Panel**. If the problem persists, contact the local PC support.

### Steps


1. Start *Phoenix*, and log in.
2. Choose **File**→**Manage Connections...**

3. To add a new connection, click **Add**.

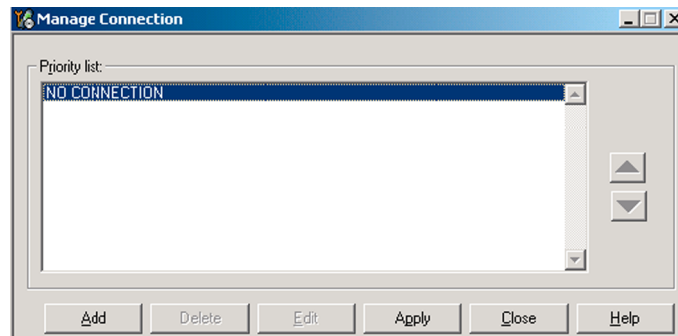

4. Select **Manual** mode, and click **Next** to continue.

If you want to create the connection using the Connection Wizard, connect the tools and a phone to your PC. The wizard will automatically try to configure the correct connection.

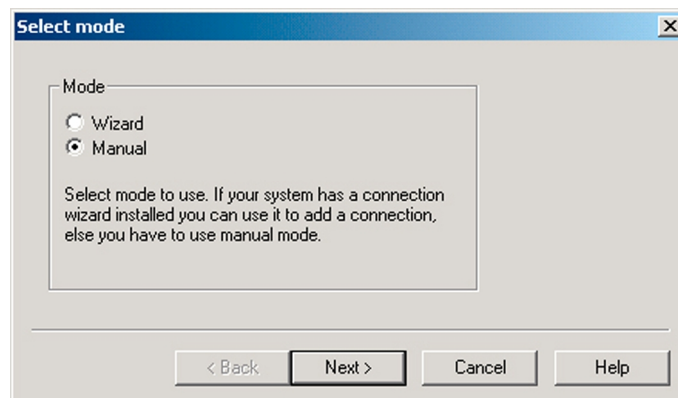

**Figure 16 Select mode: Manual**

- i For an FPS-10 flash prommer with a **USB Connection**, choose the following connection settings:
  - Media: **FPS-10 USB**
  - DEVICE\_INDEX: **0**
  - SERIAL\_NUM: See Serial No from the label attached to the bottom of FPS-10
  - ACTIVE\_MEDIA: **USB**
- ii For an FPS-10 flash prommer with a **LAN connection**, choose the following connection settings:
  - Media: **FPS-10 TCP/IP**
  - NET\_SERV\_NAME: Click **Scan....** Choose your own FPS-10 device based on the correct MAC address. See Serial No from the label attached to the bottom of your FPS-10.
  - PORT\_NUM: Use the default value, and click **Next**.
  - PROTOCOL\_FAMILY: Use the default value, and click **Next**.
  - SOCKET\_TYPE: Use the default value, and click **Next**.
  - TX\_BUFFER\_SIZE: Use the default value, and click **Next**.
  - RX\_BUFFER\_SIZE: Use the default value, and click **Next**.
- iii For an FPS-8 flash prommer, choose the following connection settings:
  - Media: FPS-8
  - PORT\_NUM: COM Port where FPS-8 is connected
  - COMBOX\_DEF\_MEDIA: **FBUS**

- iv For a plain **USB connection**, choose the following connection settings:  
**Note:** First connect the DKU-2 USB cable between the PC USB port and phone.
- Media: USB

5. To complete the configuration, click **Finish**.
6. Click the connection you want to activate. Use the up/down arrows located on the right hand side to move it on top of the list, then click **Apply**.

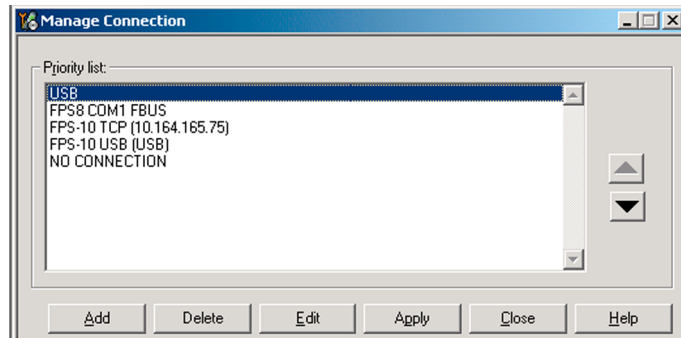


Figure 17 Connections list

The connection is activated, and it can be used after closing the *Manage Connection* window. The connection information is shown at the right hand bottom corner of the screen.



Figure 18 Connection information

7. To use the connection, connect the phone to your PC with correct service tools. Make sure the phone is switched on, and then choose **File**→**Scan Product**.

## Results

The product support module information appears in the status bar:

V 2.0436v19.1 , 18-10-04 , RM-1 , (c) NOKIA. / V 2.39.126 , 18-10-04 , RM-1 , (c)

Figure 19 Product support module information (example from RM-1)

## ■ Installing flash support files for FPS-10

### Prerequisites

**Note:** You need to install flash support files for FPS-10 only, if you don't have the latest Phoenix available or the flash support files have changed after the latest Phoenix release.


- Flash support files are installed automatically, when you install Phoenix. Use Phoenix packages later than June 2006.
- Normally it is enough to install Phoenix and the phone-specific data package because the Phoenix installation always includes the latest flash update package files for FPS-10.
- A separate installation package for flash support files is available, and the files can be updated according to this instruction, if updates appear between new Phoenix / data package releases

### Context

If you are not using a separate installation package, you can skip this section and continue with updating FPS-10 flash prommer software after installing a new phone data package.


## Steps

1. To begin installation, double-click *flash\_update\_x.yy.exe*.

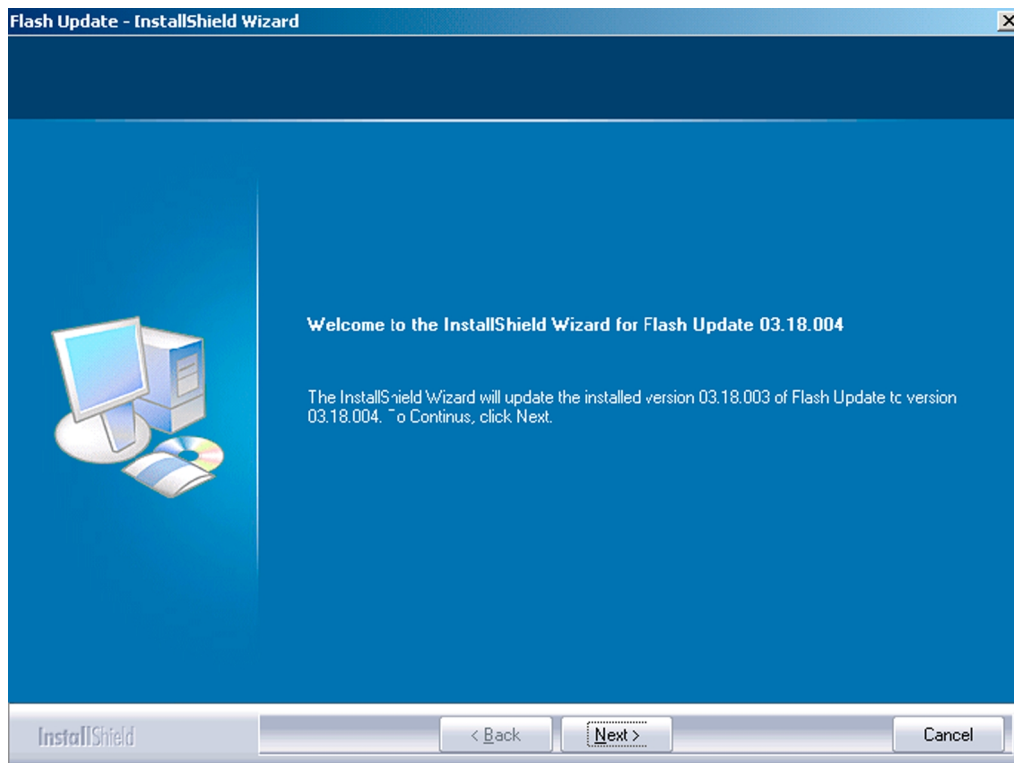

**Figure 20 Flash update welcome dialog**


- If the same version of Flash Update package already exists, and you want to reinstall it, the previous package is first uninstalled. Restart installation again after that.
2. If you try to downgrade the existing version to older ones, the setup will be aborted. If you really want to downgrade, uninstall newer files manually from **Control Panel** and then rerun the installation again.

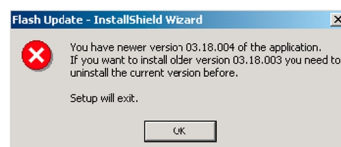

**Figure 21 Flash installation interrupted**

If an older version exists on your PC and it needs to be updated, click **Next** to continue installation.


3. It is highly recommended to install the files to the default destination folder *C:\Program Files\Nokia\Phoenix*. Click **Next** to continue.

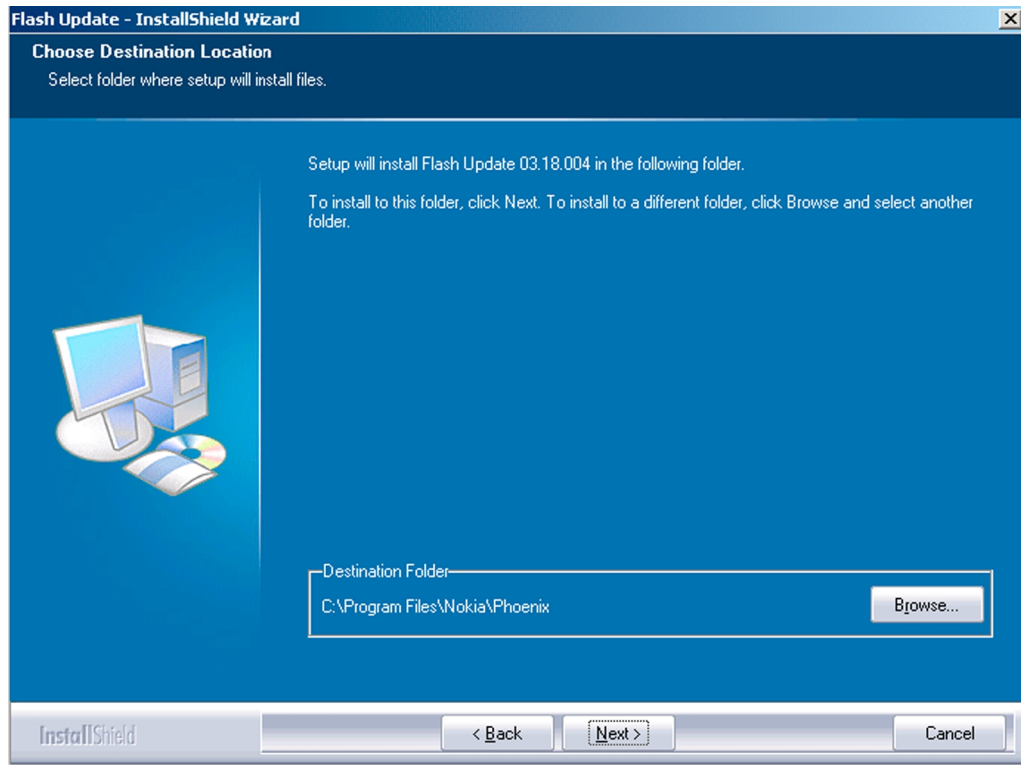

**Figure 22 Flash destination folder**

When installing the flash update files for the first time you may choose another location by selecting **Browse**. However, this is not recommended.

4. To complete the installation procedure, click **Finish** .

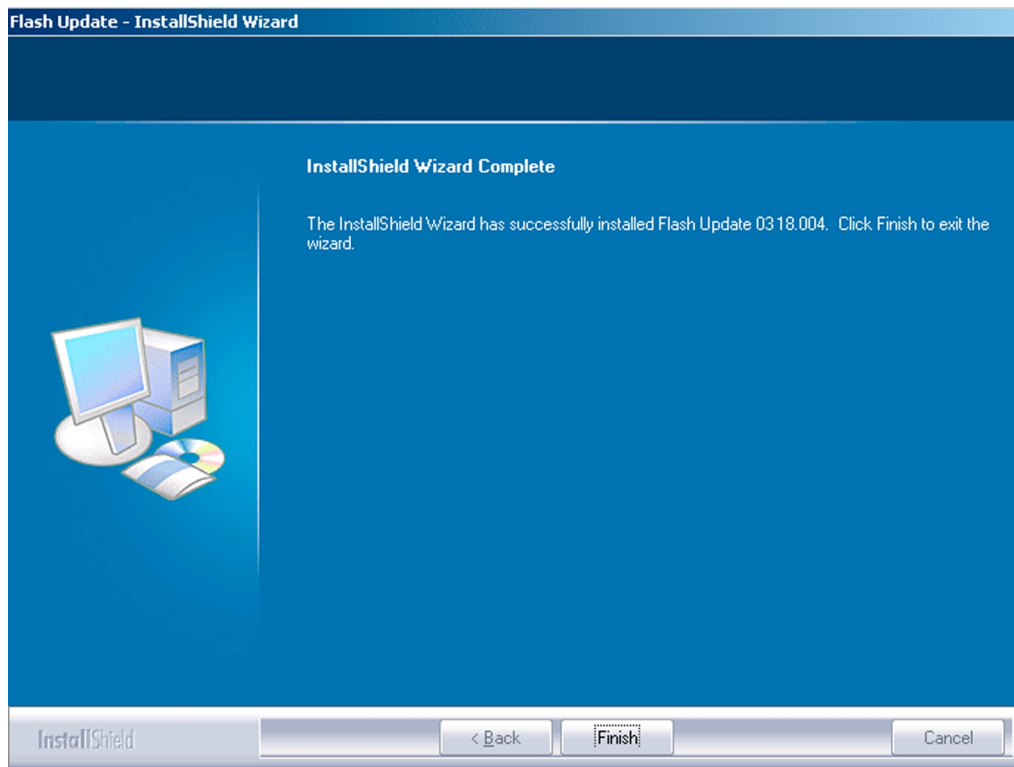

**Figure 23 Finish flash update**

## Next actions


FPS-10 flash prommers must be updated using Phoenix!

### ■ Updating FPS-10 flash prommer software

#### Steps


1. Start *Phoenix Service Software* and log in, manage connection correctly for your flash prommer.
2. Choose **Flashing**→**Prommer maintenance** .
3. When the new flash update package is installed to the computer you will be asked to update the files to your Prommer. To update the files, click **Yes**. Click **OK** if the computer informs you about an unsafe removal of the device.
4. Alternatively you can update the FPS-10 flash prommer software by clicking the **Update** button.

- Wait until you are notified that update has been successful; the procedure will take a couple of minutes. Click **OK** to close the *Update Done* window.

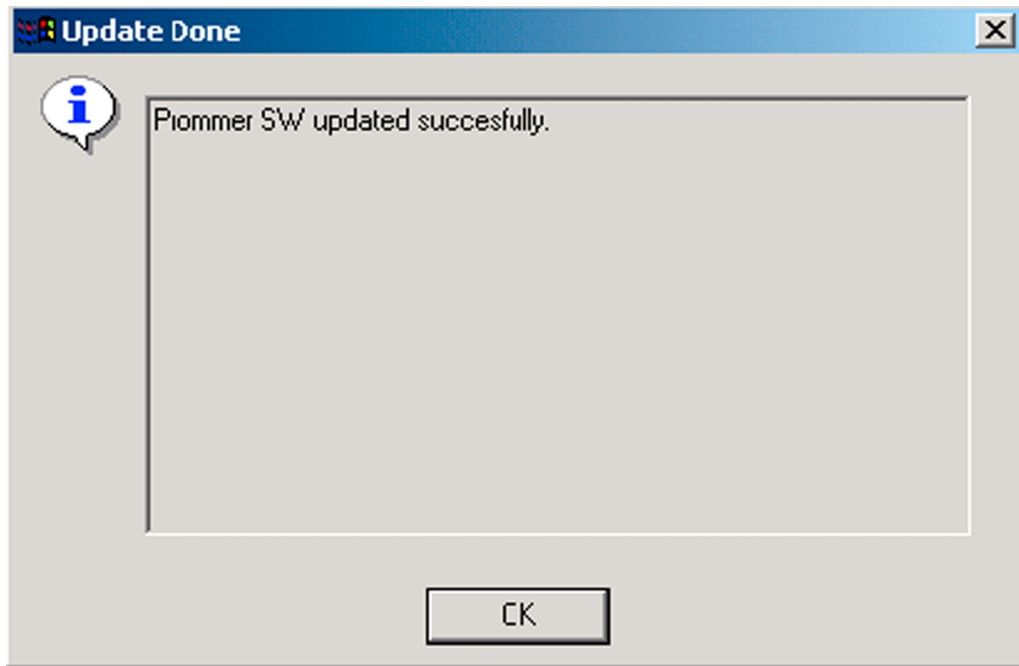

**Figure 24 Prommer SW update finished**


- If you are using the FPS-10 flash prommer, check that it is detected from the progress info. Check also the status leds in the FPS-10. The MODE2 led (green), VBAT and POWER leds (red) should be lit. If you are using LAN connection, the LAN led (yellow) should be blinking.
- Check that your FPS-10 flash prommer has enough memory. Flashing the SU-18 with FPS-10 needs at least 128 MB of SRAM memory in the prommer.

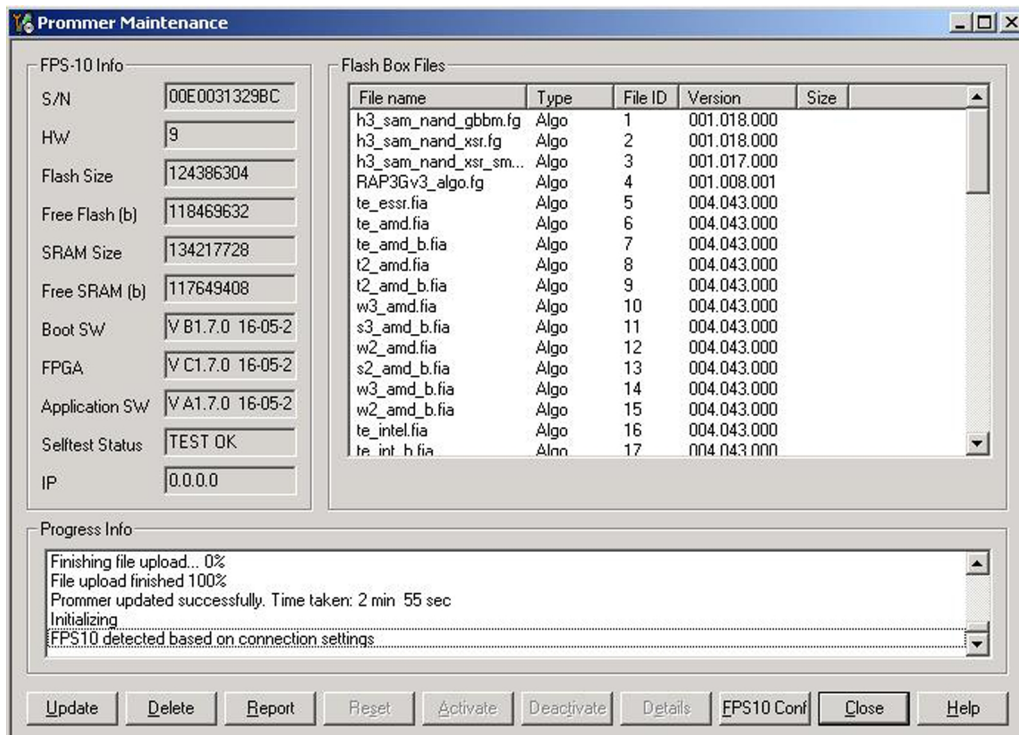

**Figure 25 Prommer maintenance window**

## Alternative steps

- You can update FPS-10 SW by clicking the **Update** button and selecting the appropriate fpsxupd.ini file in *C:\Program Files\Nokia\Phoenix\Flash*.

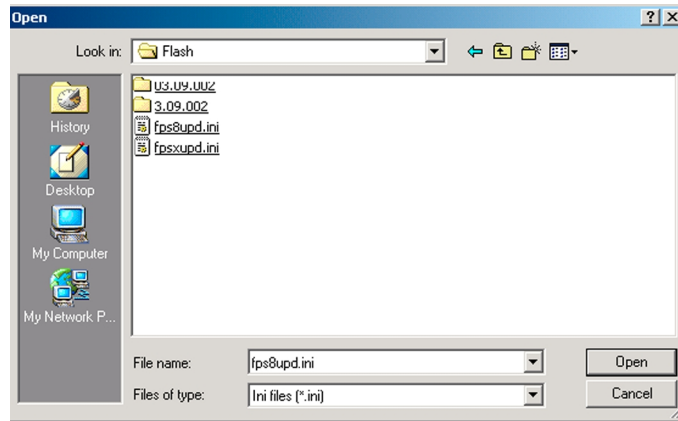

**Figure 26 Flash directory window**

- All files can be loaded separately to the prommer used. To do this, click the right mouse button in the *Flash box files* window and select the file type to be loaded.  
More information can be found in Phoenix **Help**.



## 4 — Service Tools and Service Concepts

(This page left intentionally blank.)

## Table of Contents

|  |      |
|--|------|
| Service tools.....                                   | 4-5  |
| Product specific tools.....                          | 4-5  |
| FS-47.....   | 4-5  |
| MJ-122.....  | 4-5  |
| RJ-148.....  | 4-5  |
| SA-123.....  | 4-6  |
| SS-101.....  | 4-7  |
| General tools.....                                   | 4-7  |
| CU-4.....  | 4-8  |
| FLS-4S.....  | 4-9  |
| FLS-5.....   | 4-9  |
| FPS-10.....  | 4-9  |
| JBT-9.....   | 4-10 |
| PK-1.....  | 4-10 |
| PKD-1.....   | 4-10 |
| RJ-93.....   | 4-10 |
| SPS-1.....   | 4-10 |
| SRT-6.....   | 4-11 |
| SS-45.....   | 4-11 |
| SS-46.....   | 4-11 |
| SS-62.....   | 4-11 |
| ST-40.....   | 4-11 |
| SX-4.....  | 4-12 |
| Cables.....  | 4-12 |
| CA-31D.....  | 4-12 |
| CA-35S.....  | 4-12 |
| DAU-9S.....  | 4-12 |
| DKE-2.....   | 4-13 |
| PCS-1.....   | 4-13 |
| XCS-4.....   | 4-13 |
| XRE-2.....   | 4-13 |
| XRS-6.....   | 4-14 |
| Service concepts.....                                | 4-14 |
| POS (Point of Sale) flash concept.....               | 4-14 |
| Flash concept with FPS-10.....                       | 4-15 |
| CU-4 flash concept with FPS-10.....                  | 4-16 |
| Module jig service concept.....                      | 4-17 |
| RF testing concept with RF coupler.....              | 4-18 |
| Service concept for RF testing and RF/BB tuning..... | 4-19 |

### List of Figures

|  |      |
|--|------|
| Figure 27 POS flash concept.....                               | 4-14 |
| Figure 28 Basic flash concept with FPS-10.....                 | 4-15 |
| Figure 29 CU-4 flash concept with FPS-10.....                  | 4-16 |
| Figure 30 Module jig service concept.....                      | 4-17 |
| Figure 31 RF testing concept with RF coupler.....              | 4-18 |
| Figure 32 Service concept for RF testing and RF/BB tuning..... | 4-19 |

(This page left intentionally blank.)

■ Service tools

Product specific tools

The table below gives a short overview of service tools that can be used for testing, error analysis and repair of product RM-217; RM-222, refer to various concepts.

|  | FS-47          | Flash adapter  |                |      |                |                |                |        |     |     |     |        |    |     |     |         |     |      |      |         |     |      |      |
|--|----------------|----------------|----------------|------|----------------|----------------|----------------|--------|-----|-----|-----|--------|----|-----|-----|---------|-----|------|------|---------|-----|------|------|
| <p>For flashing (also dead phones) with SS-64. RF testing and tuning, and EM calibration on ATO level with SS-62 (mechanical locking concept), CU-4 supported.</p>   |                |                |                |      |                |                |                |        |     |     |     |        |    |     |     |         |     |      |      |         |     |      |      |
|  | MJ-122         | Module jig     |                |      |                |                |                |        |     |     |     |        |    |     |     |         |     |      |      |         |     |      |      |
| <p>MJ-122 is meant for troubleshooting, testing, tuning and flashing on the engine level (CU-4 supported).<br/>The jig includes an RF interface for GSM and Bluetooth.<br/>The following table shows the attenuation values for galvanic RF connection:</p> <table border="1" data-bbox="639 1059 1469 1346"> <thead> <tr> <th>Band</th> <th>Tuning channel</th> <th>Attenuation RX</th> <th>Attenuation TX</th> </tr> </thead> <tbody> <tr> <td>GSM850</td> <td>190</td> <td>0,1</td> <td>0,1</td> </tr> <tr> <td>GSM900</td> <td>37</td> <td>0,1</td> <td>0,1</td> </tr> <tr> <td>GSM1800</td> <td>700</td> <td>0,15</td> <td>0,15</td> </tr> <tr> <td>GSM1900</td> <td>661</td> <td>0,15</td> <td>0,15</td> </tr> </tbody> </table> |                |                |                | Band | Tuning channel | Attenuation RX | Attenuation TX | GSM850 | 190 | 0,1 | 0,1 | GSM900 | 37 | 0,1 | 0,1 | GSM1800 | 700 | 0,15 | 0,15 | GSM1900 | 661 | 0,15 | 0,15 |
| Band   | Tuning channel | Attenuation RX | Attenuation TX |      |                |                |                |        |     |     |     |        |    |     |     |         |     |      |      |         |     |      |      |
| GSM850   | 190            | 0,1            | 0,1            |      |                |                |                |        |     |     |     |        |    |     |     |         |     |      |      |         |     |      |      |
| GSM900   | 37             | 0,1            | 0,1            |      |                |                |                |        |     |     |     |        |    |     |     |         |     |      |      |         |     |      |      |
| GSM1800  | 700            | 0,15           | 0,15           |      |                |                |                |        |     |     |     |        |    |     |     |         |     |      |      |         |     |      |      |
| GSM1900  | 661            | 0,15           | 0,15           |      |                |                |                |        |     |     |     |        |    |     |     |         |     |      |      |         |     |      |      |
|  | RJ-148         | Soldering jig  |                |      |                |                |                |        |     |     |     |        |    |     |     |         |     |      |      |         |     |      |      |
| <p>RJ-148 is a soldering jig used for soldering and as a rework jig for the engine module.</p>   |                |                |                |      |                |                |                |        |     |     |     |        |    |     |     |         |     |      |      |         |     |      |      |



SA-123

RF coupler

SA-123 is an RF coupler for GSM RF testing. It is used together with the product-specific flash adapter.

The following table shows attenuations from the antenna pads of the mobile terminal to the SMA connectors of SA-123:

- **Nokia 6300 (RM-217)**

| Band     | Channel | Tx-att. (dB) | Rx-att. (dB) |
|----------|---------|--------------|--------------|
| EGSM 900 | 975     | 5,6          | 6            |
|          | 38      | 5,2          | 7            |
|          | 124     | 5,2          | 7            |
| GSM 1800 | 512     | 7,3          | 10           |
|          | 698     | 8,2          | 10           |
|          | 885     | 8,1          | 10           |
| GSM 1900 | 512     | 8,6          | 9            |
|          | 661     | 8,7          | 7            |
|          | 810     | 9,1          | 7            |

Tx-attenuation tolerance is +/-0.5 dB


Rx-attenuation tolerance is +/-1.0dB

- **Nokia 6300b (RM-222)**

| Band     | Channel | Tx-att. (dB) | Rx-att. (dB) |
|----------|---------|--------------|--------------|
| GSM 850  | 128     | 8,1          | 9            |
|          | 190     | 7,4          | 9            |
|          | 251     | 7,7          | 10           |
| GSM 1800 | 512     | 8,6          | 7            |
|          | 698     | 8,7          | 8            |
|          | 885     | 7,5          | 6            |
| GSM 1900 | 512     | 6,7          | 8            |
|          | 661     | 6,1          | 8            |
|          | 810     | 6,8          | 8            |

Tx-attenuation tolerance is +/-0.5 dB

Rx-attenuation tolerance is +/-1.0dB

|   |   |                         |  |
|---|---|-------------------------|--|
|  | SS-101  | Domesheet alignment jig |  |
|   | The purpose of this tool is to support the placement of a domesheet to the PWB. |                         |  |

### General tools

The table below gives a short overview of service tools that can be used for testing, error analysis and repair of product RM-217; RM-222, refer to various concepts.



|      |              |  |
|------|--------------|--|
| CU-4 | Control unit |  |
|------|--------------|--|

CU-4 is a general service tool used with a module jig and/or a flash adapter. It requires an external 12 V power supply.


The unit has the following features:

- software controlled via USB
- EM calibration function
- Forwards FBUS/Flashbus traffic to/from terminal
- Forwards USB traffic to/from terminal
- software controlled BSI values
- regulated VBATT voltage
- 2 x USB2.0 connector (Hub)
- FBUS and USB connections supported

When using CU-4, note the special order of connecting cables and other service equipment:

**Instructions**

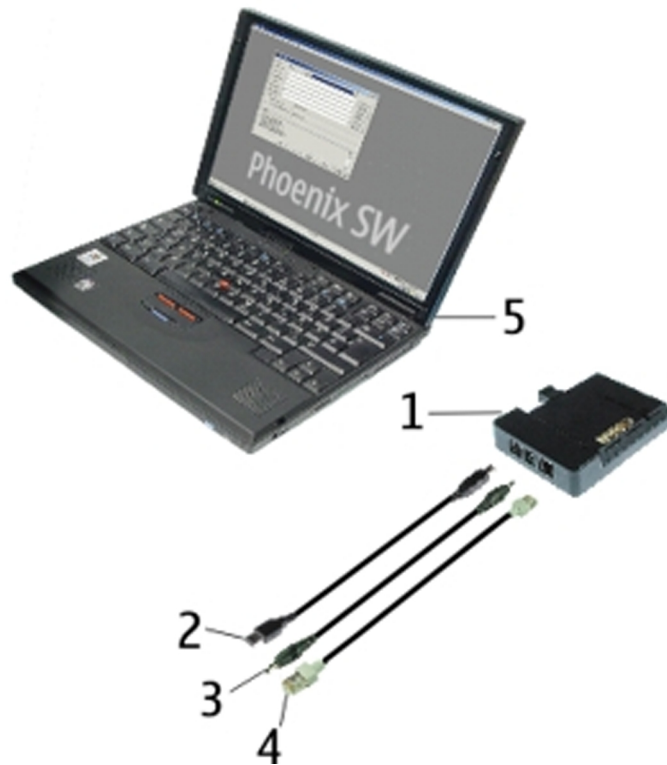


- 1 Connect a service tool (jig, flash adapter) to CU-4.
- 2 Connect CU-4 to your PC with a USB cable.
- 3 Connect supply voltage (12 V)
- 4 Connect an FBUS cable (if necessary).
- 5 Start Phoenix service software.












**Note:** Phoenix enables CU-4 regulators via USB when it is started.


Reconnecting the power supply requires a Phoenix restart.



|  |        |               |  |
|--|--------|---------------|--|
|   | FLS-4S | Flash device  |  |
| <p>FLS-4S is a dongle and flash device incorporated into one package, developed specifically for POS use.</p>  |        |               |  |
|   | FLS-5  | Flash device  |  |
| <p>FLS-5 is a dongle and flash device incorporated into one package, developed specifically for POS use.</p>   |        |               |  |
|    | FPS-10 | Flash prommer |  |
| <p>FPS-10 interfaces with:</p> <ul style="list-style-type: none"> <li>• PC</li> <li>• Control unit</li> <li>• Flash adapter</li> <li>• Smart card</li> </ul> <p>FPS-10 flash prommer features:</p> <ul style="list-style-type: none"> <li>• Flash functionality for BB5 and DCT-4 terminals</li> <li>• Smart Card reader for SX-2 or SX-4</li> <li>• USB traffic forwarding</li> <li>• USB to FBUS/Flashbus conversion</li> <li>• LAN to FBUS/Flashbus and USB conversion</li> <li>• Vusb output switchable by PC command</li> </ul> <p>FPS-10 sales package includes:</p> <ul style="list-style-type: none"> <li>• FPS-10 prommer</li> <li>• Power Supply with 5 country specific cords</li> <li>• USB cable</li> </ul> |        |               |  |



|  |  |  |  |
|--|--|--|--|
|    | JBT-9  | Bluetooth test and interface box (sales package) |  |
|  | <p>The JBT-9 test box is a generic service device used to perform Bluetooth bit error rate (BER) testing, and establishing cordless FBUS connection via Bluetooth. An ACP-8x charger is needed for BER testing and an AXS-4 cable in case of cordless interface usage testing .</p> <p>Sales package includes:</p> <ul style="list-style-type: none"> <li>• JBT-9 test box</li> <li>• Installation and warranty information</li> </ul> |  |  |
|   | PK-1   | Software protection key                          |  |
|  | <p>PK-1 is a hardware protection key with a USB interface. It has the same functionality as the PKD-1 series dongle.</p> <p>PK-1 is meant for use with a PC that does not have a series interface.</p> <p>To use this USB dongle for security service functions please register the dongle in the same way as the PKD-1 series dongle.</p>   |  |  |
|  | PKD-1  | SW security device                               |  |
|  | <p>SW security device is a piece of hardware enabling the use of the service software when connected to the parallel (LPT) port of the PC. Without the device, it is not possible to use the service software. Printer or any such device can be connected to the PC through the device if needed.</p>   |  |  |
|  | RJ-93  | Rework jig                                       |  |
|  | <p>RJ-93 is used as a rework jig for the engine module.</p> <p>This stencil takes the front end module (FEM) or power amplifier (PA) module for spreading the soldering paste to the component. Must be used together with the ST-40 stencil.</p>  |  |  |
|  | SPS-1  | Soldering Paste Spreader                         |  |





|   |  |                                    |  |
|---|--|------------------------------------|--|
|    | SRT-6  | Opening tool                       |  |
|   | SRT-6 is used to open phone covers and B-to-B connectors.  |                                    |  |
|    | SS-45  | Front camera removal tool          |  |
|   | The front camera removal tool SS-45 is used to remove/attach the front camera module from/to the socket.   |                                    |  |
|   | SS-46  | Interface adapter                  |  |
|   | SS-46 acts as an interface adapter between the flash adapter and FPS-10.   |                                    |  |
|  | SS-62  | Generic flash adapter base for BB5 |  |
|   | <ul style="list-style-type: none"> <li>• generic base for flash adapters and couplers</li> <li>• SS-62 equipped with a clip interlock system</li> <li>• provides standardised interface towards Control Unit</li> <li>• provides RF connection using galvanic connector or coupler</li> <li>• multiplexing between USB and FBUS media, controlled by VUSB</li> </ul> |                                    |  |
|  | ST-40  | rework stencil                     |  |
|   | ST-40 is a rework stencil and used with RJ-93.   |                                    |  |


|   |  |            |  |
|---|--|------------|--|
|  | SX-4   | Smart card |  |
|   | <p>SX-4 is a BB5 security device used to protect critical features in tuning and testing.</p> <p>SX-4 is also needed together with FPS-10 when DCT-4 phones are flashed.</p> |            |  |

**Cables**

The table below gives a short overview of service tools that can be used for testing, error analysis and repair of product RM-217; RM-222, refer to various concepts.

|  |  |             |  |
|--|--|-------------|--|
|  | CA-31D   | USB cable   |  |
|  | <p>The CA-31D USB cable is used to connect FPS-10 or FPS-11 to a PC. It is included in the FPS-10 and FPS-11 sales packages.</p>   |             |  |
|   | CA-35S   | Power cable |  |
|  | <p>CA-35S is a power cable for connecting, for example, the FPS-10 flash prommer to the Point-Of-Sales (POS) flash adapter.</p>  |             |  |
|  | DAU-9S   | MBUS cable  |  |
|  | <p>The MBUS cable DAU-9S has a modular connector and is used, for example, between the PC's serial port and module jigs, flash adapters or docking station adapters.</p> <p><b>Note:</b> Docking station adapters valid for DCT4 products.</p> |             |  |

|  |       |                 |  |
|--|-------|-----------------|--|
|   | DKE-2 | Mini-USB cable  |  |
| <p>USB to mini-USB connector cable.</p>  |       |                 |  |
|    | PCS-1 | Power cable     |  |
| <p>The PCS-1 power cable (DC) is used with a docking station, a module jig or a control unit to supply a controlled operating voltage.</p> |       |                 |  |
|   | XCS-4 | Modular cable   |  |
| <p>XCS-4 is a shielded (one specially shielded conductor) modular cable for flashing and service purposes.</p>                             |       |                 |  |
|   | XRE-2 | Bluetooth cable |  |
| <p>The bluetooth cable connects the bluetooth connector of the module jig to the bluetooth test box JBT-9.</p>                             |       |                 |  |

|  |  |          |
|--|--|----------|
|  | XRS-6  | RF cable |
|  | <p>The RF cable is used to connect, for example, a module repair jig to the RF measurement equipment.</p> <p>SMA to N-Connector approximately 610 mm.</p> <p>Attenuation for:</p> <ul style="list-style-type: none"> <li>• GSM850/900: 0.3+-0.1 dB</li> <li>• GSM1800/1900: 0.5+-0.1 dB</li> <li>• WLAN: 0.6+-0.1dB</li> </ul> |          |

■ Service concepts

POS (Point of Sale) flash concept

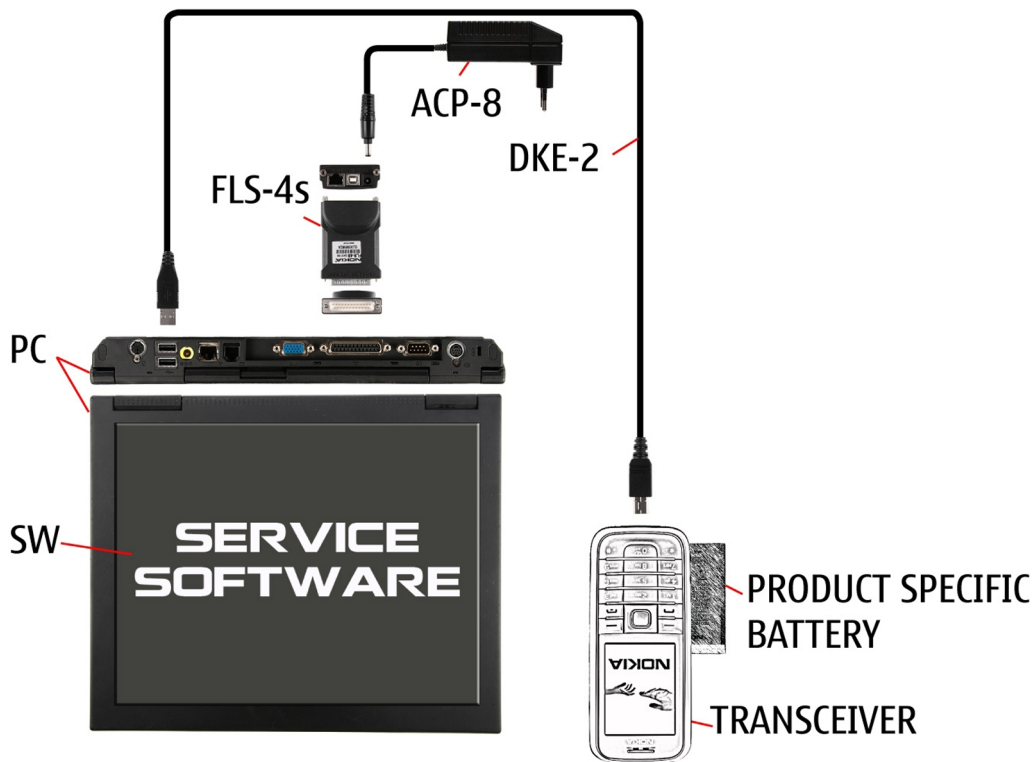


Figure 27 POS flash concept

| Type                          | Description      |
|-------------------------------|------------------|
| <b>Product specific tools</b> |                  |
| BL-4C                         | Battery          |
| <b>Other tools</b>            |                  |
| ACP-8                         | Power adapter    |
| FLS-4S or FLS-5               | POS flash dongle |

| Type          | Description                      |
|---------------|----------------------------------|
|               | PC with Phoenix service software |
| <b>Cables</b> |                                  |
| DKE-2         | USB connectivity cable           |

### Flash concept with FPS-10

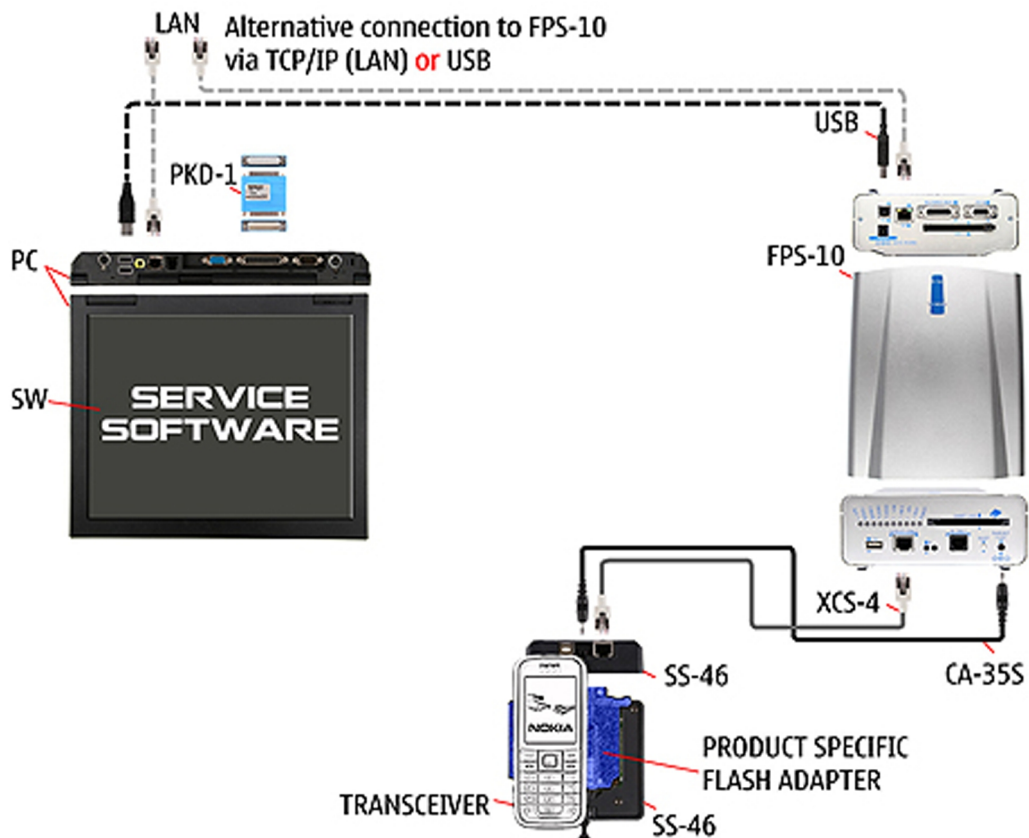


Figure 28 Basic flash concept with FPS-10

| Type                          | Description                      |
|-------------------------------|----------------------------------|
| <b>Product specific tools</b> |                                  |
| FS-47                         | Flash adapter                    |
| <b>Other tools</b>            |                                  |
| FPS-10                        | Flash prommer box                |
| PKD-1/PK-1                    | SW security device               |
| SS-46                         | Interface adapter                |
|                               | PC with Phoenix service software |
| <b>Cables</b>                 |                                  |
| XCS-4                         | Modular cable                    |
| CA-35S                        | Power cable                      |

| Type | Description |
|------|-------------|
|      | USB cable   |

**CU-4 flash concept with FPS-10**

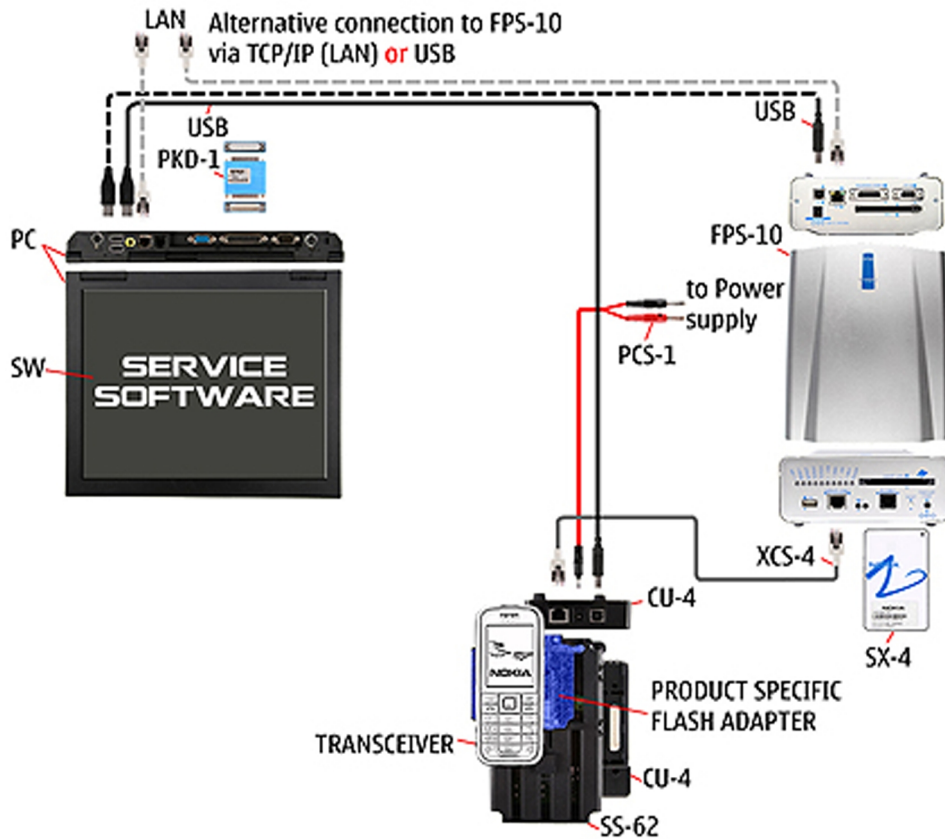


Figure 29 CU-4 flash concept with FPS-10

| Type                          | Description                      |
|-------------------------------|----------------------------------|
| <b>Product specific tools</b> |                                  |
| FS-47                         | Flash adapter                    |
| <b>Other tools</b>            |                                  |
| CU-4                          | Control unit                     |
| FPS-10                        | Flash prommer box                |
| PKD-1/PK-1                    | SW security device               |
| SS-62                         | Flash adapter base               |
| SX-4                          | Smart card                       |
|                               | PC with Phoenix service software |
| <b>Cables</b>                 |                                  |
| PCS-1                         | Power cable                      |
| XCS-4                         | Modular cable                    |
|                               | Standard USB cable               |



| Type | Description |
|------|-------------|
|      | USB cable   |

### Module jig service concept

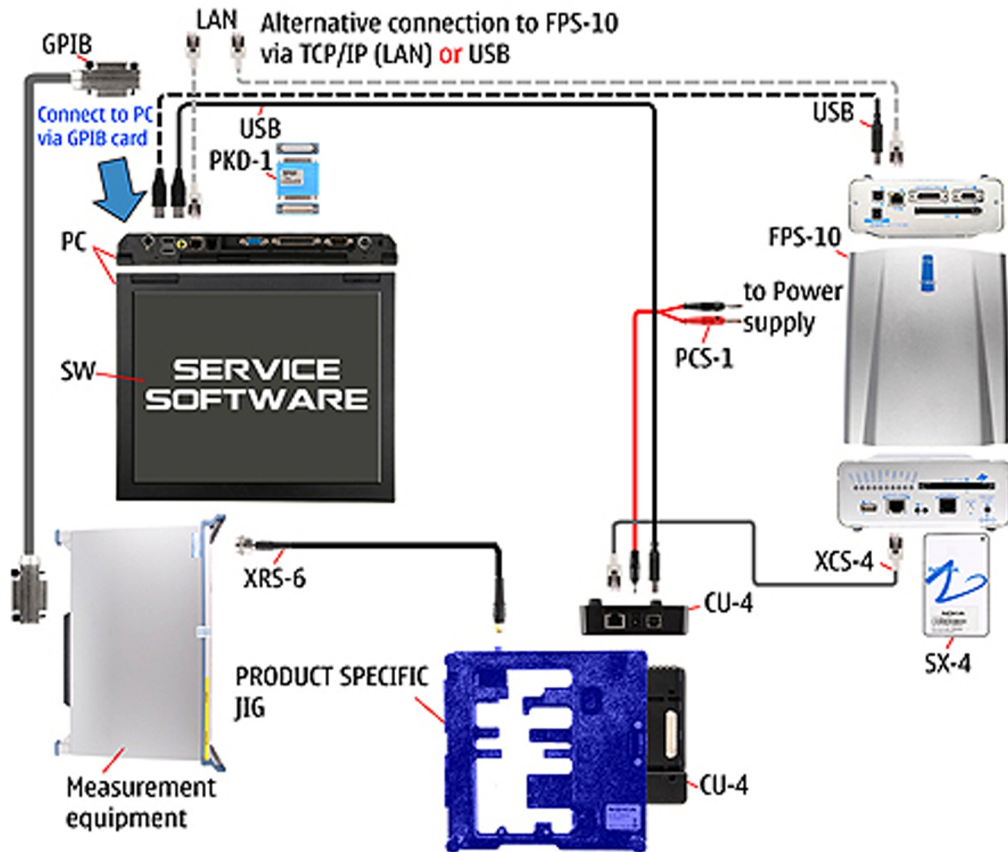


Figure 30 Module jig service concept

| Type                        | Description                      |
|-----------------------------|----------------------------------|
| <b>Phone specific tools</b> |                                  |
| MJ-122                      | Module jig                       |
| <b>Other tools</b>          |                                  |
| CU-4                        | Control unit                     |
| FPS-10                      | Flash prommer box                |
| PKD-1/PK-1                  | SW security device               |
| SX-4                        | Smart card                       |
|                             | PC with Phoenix service software |
|                             | Measurement equipment            |
| <b>Cables</b>               |                                  |
| PCS-1                       | DC power cable                   |
| XCS-4                       | Modular cable                    |

| Type  | Description        |
|-------|--------------------|
| XRS-6 | RF cable           |
|       | USB cable          |
|       | GPIB control cable |

### RF testing concept with RF coupler

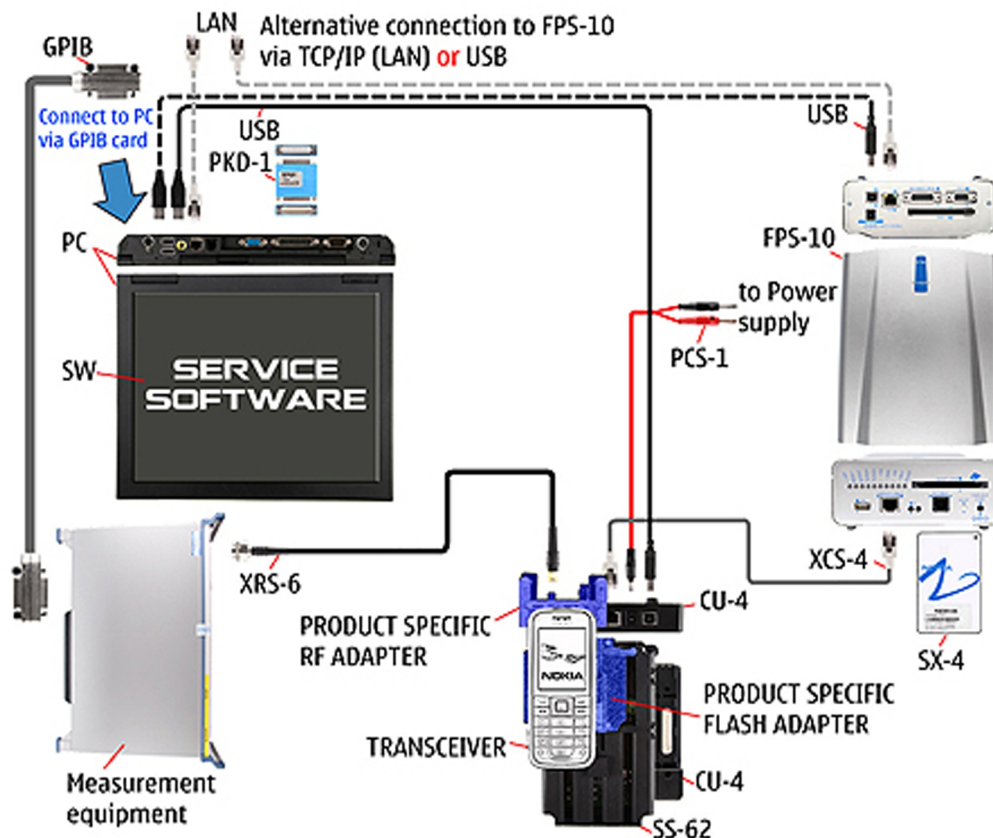


Figure 31 RF testing concept with RF coupler

| Type                          | Description                      |
|-------------------------------|----------------------------------|
| <b>Product specific tools</b> |                                  |
| FS-47                         | Flash adapter                    |
| SA-123                        | RF coupler                       |
| <b>Other tools</b>            |                                  |
| CU-4                          | Control unit                     |
| SX-4                          | Smart card                       |
| FPS-10                        | Flash prommer box                |
| PKD-1/PK-1                    | SW security device               |
| SS-62                         | Flash adapter base               |
|                               | Measurement equipment            |
|                               | PC with Phoenix service software |

| Type          | Description        |
|---------------|--------------------|
| <b>Cables</b> |                    |
| PCS-1         | Power cable        |
| XCS-4         | Modular cable      |
| XRS-6         | RF cable           |
|               | GPIB control cable |
|               | USB cable          |

**Service concept for RF testing and RF/BB tuning**

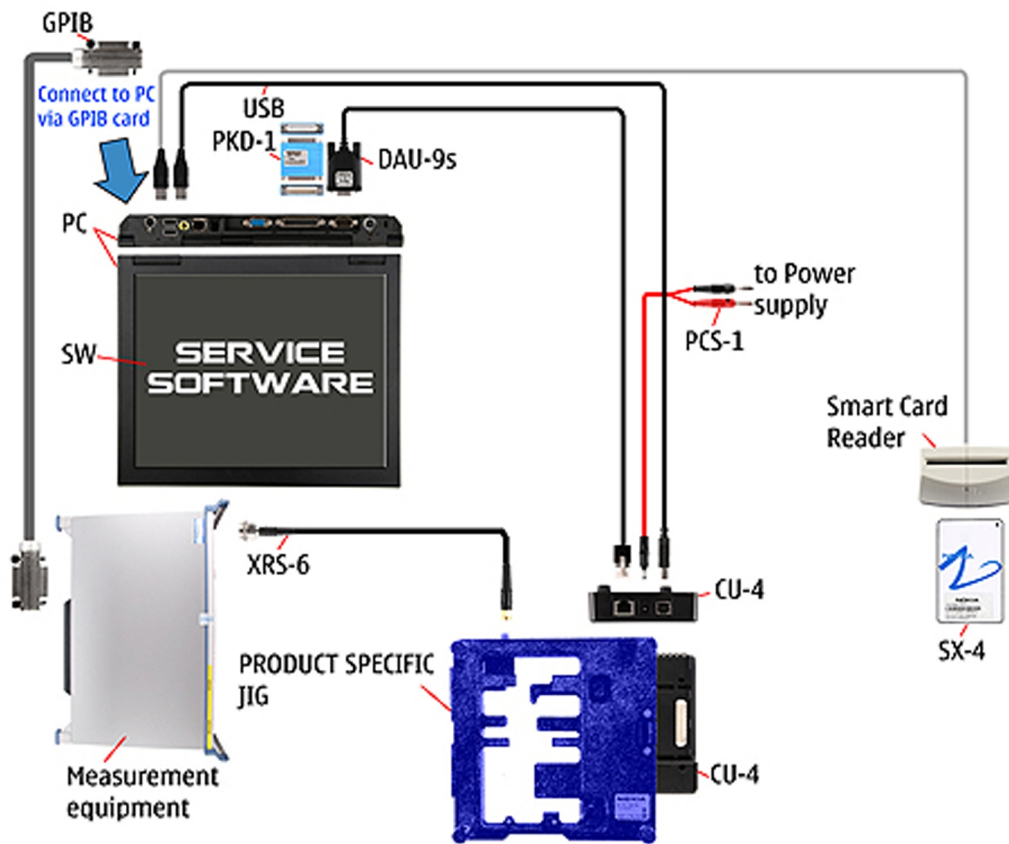


Figure 32 Service concept for RF testing and RF/BB tuning

| Type                          | Description           |
|-------------------------------|-----------------------|
| <b>Product specific tools</b> |                       |
| MJ-122                        | Module jig            |
| <b>Other tools</b>            |                       |
| CU-4                          | Control unit          |
| SX-4                          | Smart card            |
|                               | Measurement equipment |
|                               | Smart card reader     |

| Type          | Description                      |
|---------------|----------------------------------|
|               | PC with Phoenix service software |
| <b>Cables</b> |                                  |
| DAU-9s        | MBUS cable                       |
| PCS-1         | DC power cable                   |
| PKD-1/PK-1    | SW security device               |
| XRS-6         | RF cable                         |
|               | GPIB control cable               |
|               | USB cable                        |

## **5 — Disassembly and reassembly instructions**

(This page left intentionally blank.)

## Table of Contents

|                               |      |
|-------------------------------|------|
| Disassembly instructions..... | 5-5  |
| Assembly hints.....           | 5-12 |

(This page left intentionally blank.)



## ■ Disassembly instructions



1. Needed tools: SRT-6, metal tweezers, SS-93, SS-45 camera removal tool, a straight bladed screwdriver, dental pick, bit holder with a torx plus size 6 bit, a torque driver, DC plug



2. Always cover the windows with a protective film.



3. Shift out the C-COVER.



4. Remove both screws in the order shown.



5. Remove the screws.



6. Unlock the plastic clips of the A-COVER with the SRT-6...




7. ...on both sides.




8. Lift up the cover now.



9. Remove the KEYMAT

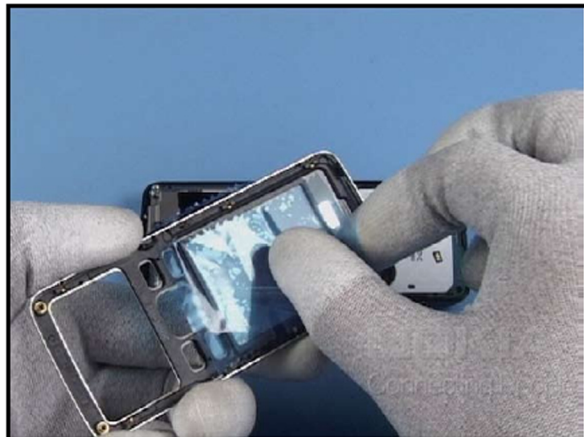

10. Protect the window from inner side.

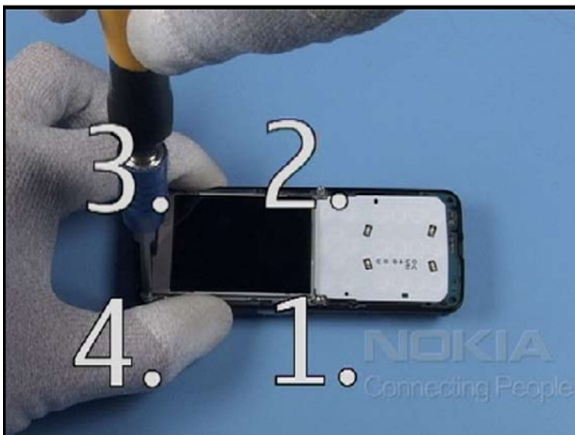

11. Unscrew the four screws in the order shown.



12. Remove the screws. Separate these screws, do not mismatch them with the others.




13. Cover the display with a film.




14. Turn the assembly, lift up the B-COVER.



15. Remove the CAMERA GASKET.

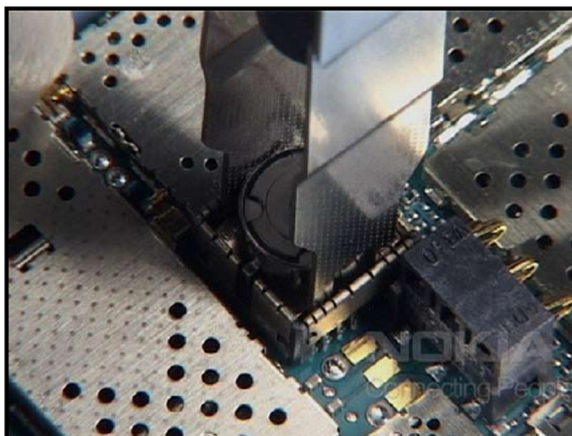

16. Unlock and remove the CAMERA with the SS-45.

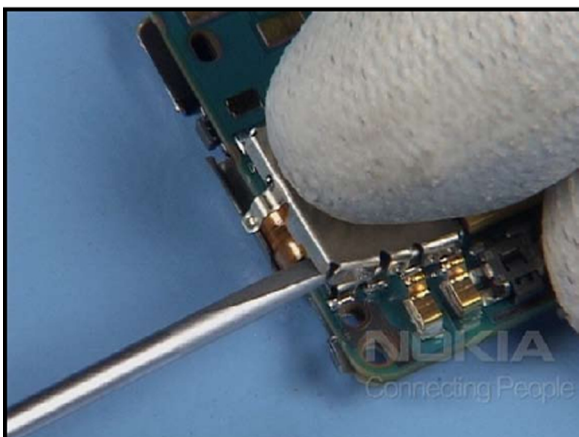


17. Release the FLEX SHIELDING LID and discard it.



18. Do not use it again.




19. Unlock both metal clips of the UI SHIELD.

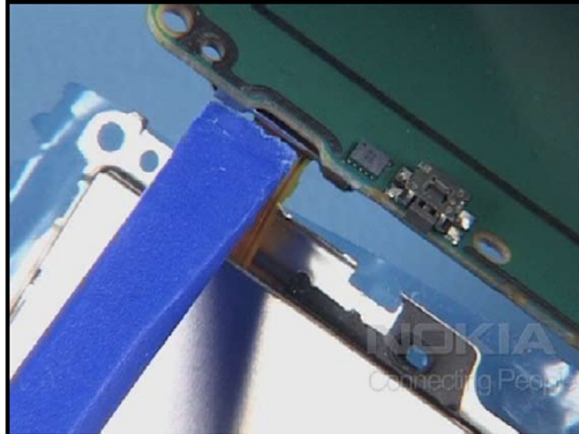

20. Carefully unlock the flex connector of the LCD MODULE.



21. Peel up the protective film.

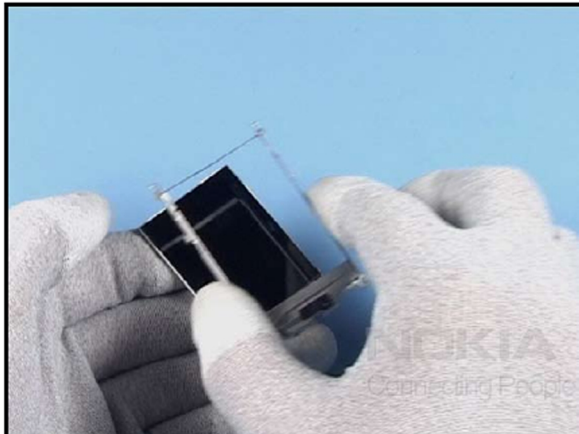

22. Now separate the parts as shown.



23. Cover the display with a film again.



24. Remove the MICROPHONE and the DC JACK.




25. Carefully lever out the EARPIECE ASSEMBLY.




26. Carefully unlock the clip securing the PLASTIC CHAMBER.



27. Now remove it.

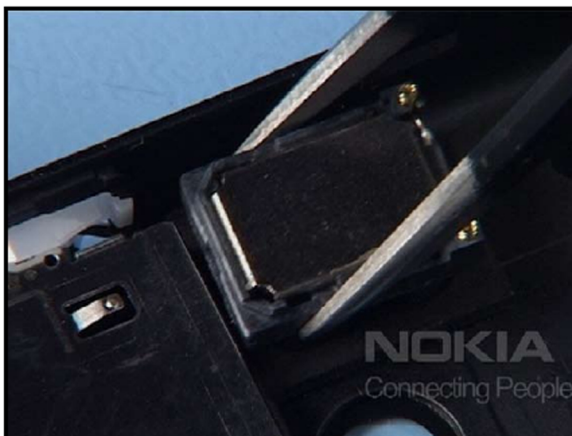

28. The IHF SPEAKER is not glued and can be removed easily.

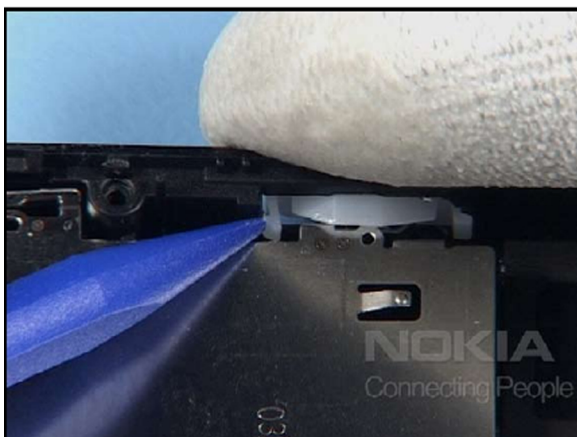


29. Carefully release the clips of the LED- and the SIDE WINDOW.




30. The POWER- and the VOLUME KEY can be removed easily.



31. Release the shown metal snaps of the LABEL COVER ASSY with the dental pick.

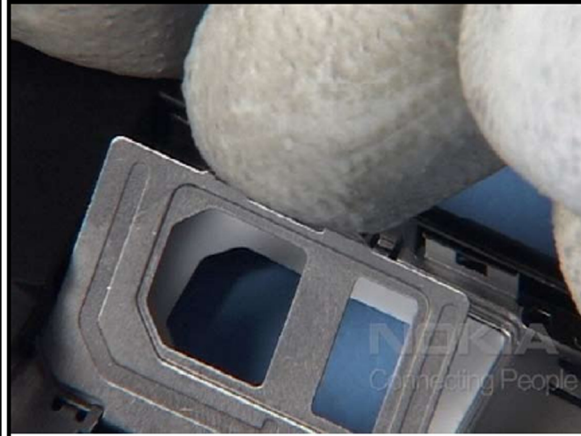

32. Turn the assembly and open the SIM lid.

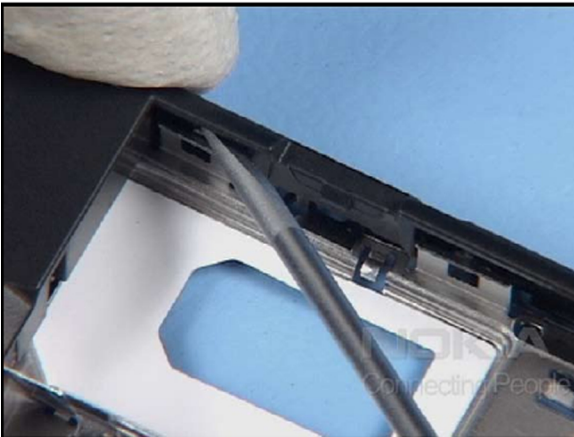

33. Now release these two latches.



34. Use the dental tool to push out the last clips.



35. Release the LABEL COVER ASSEMBLY, beginning from the bottom side.



36. Mind these clips.




37. The disassembly procedure is now completed.

Note: Antenna Module is marked 850 or 900 to enable identification of different versions by regions.

■ **Assembly hints**



1. Assembly hints:

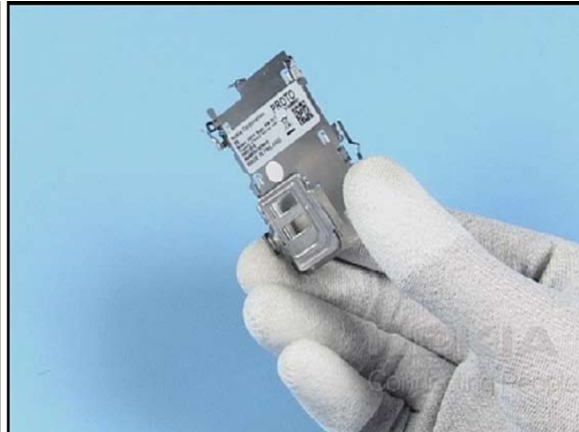

2. Keep in mind that the LABEL COVER ASSEMBLY with the TYPE LABEL must always be assembled together with the corresponding engine module.



3. Insert the LABEL COVER ASSEMBLY into the B-COVER as shown.



4. Carefully push all latches into their places.



5. Close the SIM lid.



6. Check the correct positioning of all these latches.






7. Insert the LED- and the SIDE- WINDOW. Note that they can't be interchanged.




8. Note that the IHF SPEAKER contacts belongs to their pads.




9. Secure all clips of the PLASTIC CHAMBER before going on.

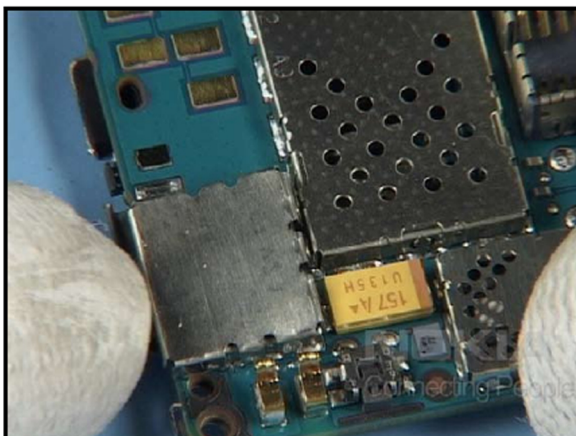

10. Always use a new FLEX SHIELDING LID.

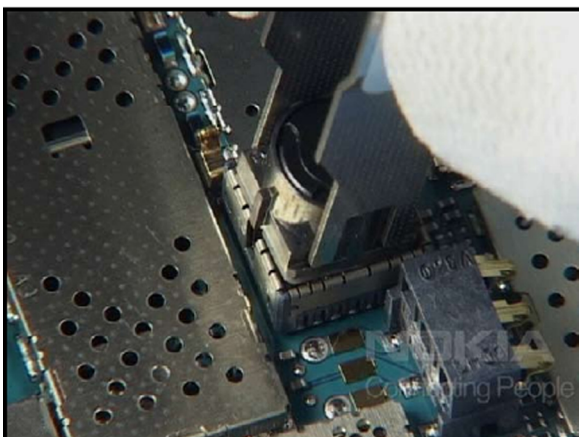


11. Mind the guiding tab while replacing the CAMERA.

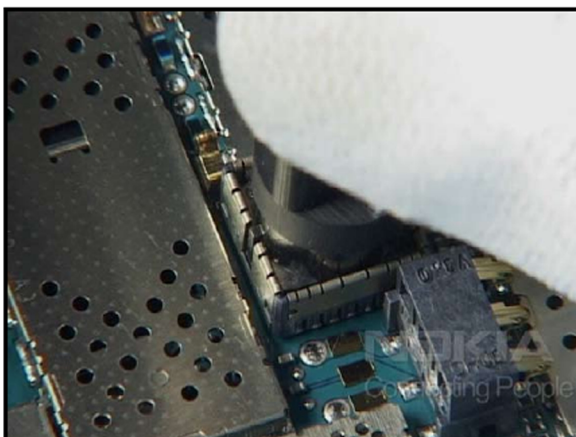


12. Push it into its place.



13. Set the correct torque.

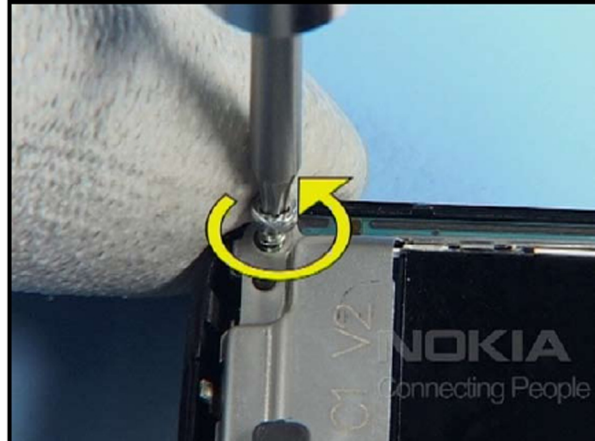

14. Turn the screws to the left first to engage the threads, then tighten them slightly.

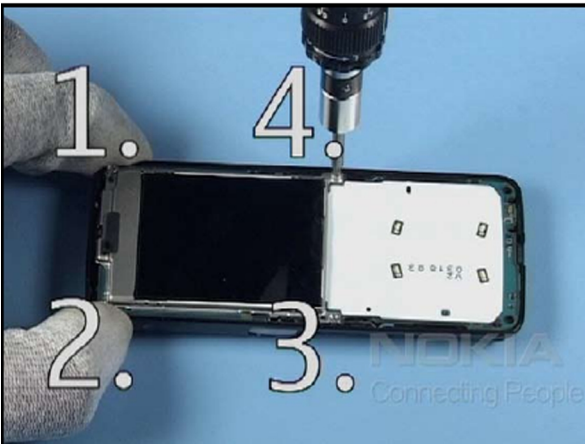

15. Apply the correct torque to all screws in the order shown.



16. Tighten both screws of the C-COVER in the order shown, too.

Note: Antenna Module is marked 850 or 900 to enable identification of different versions by regions.

## **6 — BB Troubleshooting and Manual Tuning Guide**

(This page left intentionally blank.)

## Table of Contents

|   |      |
|---|------|
| Baseband troubleshooting overview .....                 | 6-5  |
| Power and charging troubleshooting .....                | 6-6  |
| General power checking troubleshooting .....            | 6-6  |
| Battery current measuring fault troubleshooting .....   | 6-7  |
| Charging troubleshooting .....                          | 6-8  |
| Clocking troubleshooting .....                          | 6-9  |
| Interface troubleshooting .....                         | 6-10 |
| Camera failure .....                                    | 6-10 |
| Introduction to camera troubleshooting .....            | 6-10 |
| Taking and evaluating test pictures .....               | 6-10 |
| Camera hardware troubleshooting .....                   | 6-11 |
| Camera viewfinder troubleshooting .....                 | 6-12 |
| Camera: Bad image quality troubleshooting .....         | 6-13 |
| COMBO memory troubleshooting .....                      | 6-14 |
| Flash programming fault troubleshooting .....           | 6-15 |
| FM radio troubleshooting .....                          | 6-17 |
| MicroSD card troubleshooting .....                      | 6-18 |
| User interface troubleshooting .....                    | 6-20 |
| Display module troubleshooting .....                    | 6-20 |
| General instructions for display troubleshooting .....  | 6-20 |
| Display troubleshooting .....                           | 6-22 |
| Backlight troubleshooting .....                         | 6-23 |
| Reminder LED troubleshooting .....                      | 6-24 |
| LED driver troubleshooting .....                        | 6-25 |
| Audio troubleshooting .....                             | 6-26 |
| Introduction to acoustics troubleshooting .....         | 6-26 |
| Audio troubleshooting test instructions .....           | 6-26 |
| Earpiece troubleshooting .....                          | 6-29 |
| Internal earpiece troubleshooting .....                 | 6-30 |
| External headset earpiece troubleshooting .....         | 6-31 |
| IHF troubleshooting .....                               | 6-32 |
| IHF troubleshooting .....                               | 6-33 |
| Microphone troubleshooting .....                        | 6-34 |
| Internal microphone troubleshooting .....               | 6-35 |
| External headset microphone troubleshooting .....       | 6-36 |
| Connections troubleshooting .....                       | 6-37 |
| Bluetooth troubleshooting .....                         | 6-37 |
| Introduction to Bluetooth troubleshooting .....         | 6-37 |
| Bluetooth settings for Phoenix .....                    | 6-37 |
| Bluetooth self tests in Phoenix .....                   | 6-38 |
| Bluetooth BER failure troubleshooting .....             | 6-39 |
| Bluetooth audio and UI activation troubleshooting ..... | 6-42 |
| USB interface troubleshooting .....                     | 6-43 |
| Baseband manual tuning guide .....                      | 6-44 |
| Certificate restoring for BB5 products .....            | 6-44 |
| Energy management calibration .....                     | 6-49 |

### List of Tables

|  |      |
|--|------|
| Table 8 Display module troubleshooting cases ..... | 6-20 |
|--|------|

Table 9 Pixel defects ..... 6-21  
Table 10 Calibration value limits ..... 6-49

**List of Figures**

Figure 33 Flashing pic 1. Take single trig measurement for the rise of the BSI signal..... 6-16  
Figure 34 Flashing pic 2. Take single trig measurement for the rise of the BSI signal..... 6-16  
Figure 35 Location of the microSD card reader in RM-217/222..... 6-18  
Figure 36 SD card initialization from pin J3206 ..... 6-19  
Figure 37 Single-ended output waveform of the Ext\_in\_HP\_out measurement when earpiece is  
connected. .... 6-27  
Figure 38 Differential output waveform of the Ext\_in\_IHF\_out out loop measurement when speaker is  
connected. .... 6-28  
Figure 39 Single-ended output waveform of the HP\_in\_Ext\_out loop when microphone is connected....  
6-28  
Figure 40 BER test result..... 6-38  
Figure 41 Bluetooth self tests in Phoenix..... 6-39

■ **Baseband troubleshooting overview**


This section is intended to be a guide for localising and repairing electrical faults. The table below tells you what troubleshooting to go to.

| <b>Problem</b>   | <b>Troubleshooting</b>   |
|--|--|
| Abnormal current consumption                                 | 1 <a href="#">General power checking (page 6-6)</a><br>2 <a href="#">Battery current measuring fault (page 6-7)</a>  |
| Flashing does not work or the problem is not clearly defined | 1 <a href="#">Flashing (page 6-15)</a><br>2 <a href="#">Clocking (page 6-9)</a><br>3 <a href="#">Combo memory (page 6-14)</a>                                |
| Charging does not work                                       | <a href="#">Charging (page 6-8)</a>  |
| Display does not work  | <a href="#">Display fault (page 6-20)</a>  |
| Backlights do not work                                       | 1 <a href="#">Backlight (page 6-23)</a><br>2 <a href="#">LED driver (page 6-8)</a>   |
| Reminder LEDs do not work                                    | <a href="#">Reminder LED (page 6-24)</a>   |
| USB does not work  | <a href="#">USB (page 6-43)</a>  |
| Audio (mic, earpiece, IHF) does not work                     | 1 <a href="#">Audio (page 6-26)</a><br>2 <a href="#">Acoustics (page 6-26)</a>   |
| Camera does not work   | 1 <a href="#">Camera baseband hardware (page 6-11)</a><br>2 <a href="#">Camera viewfinder (page 6-12)</a><br>3 <a href="#">Bad image quality (page 6-13)</a> |
| Bluetooth does not work                                      | <a href="#">Bluetooth (BT) (page 6-37)</a>   |
| FM radio does not work                                       | <a href="#">FM radio (page 6-17)</a>   |
| MicroSD card does not work                                   | <a href="#">MicroSD card (page 6-18)</a>   |

■ Power and charging troubleshooting

General power checking troubleshooting


Troubleshooting flow

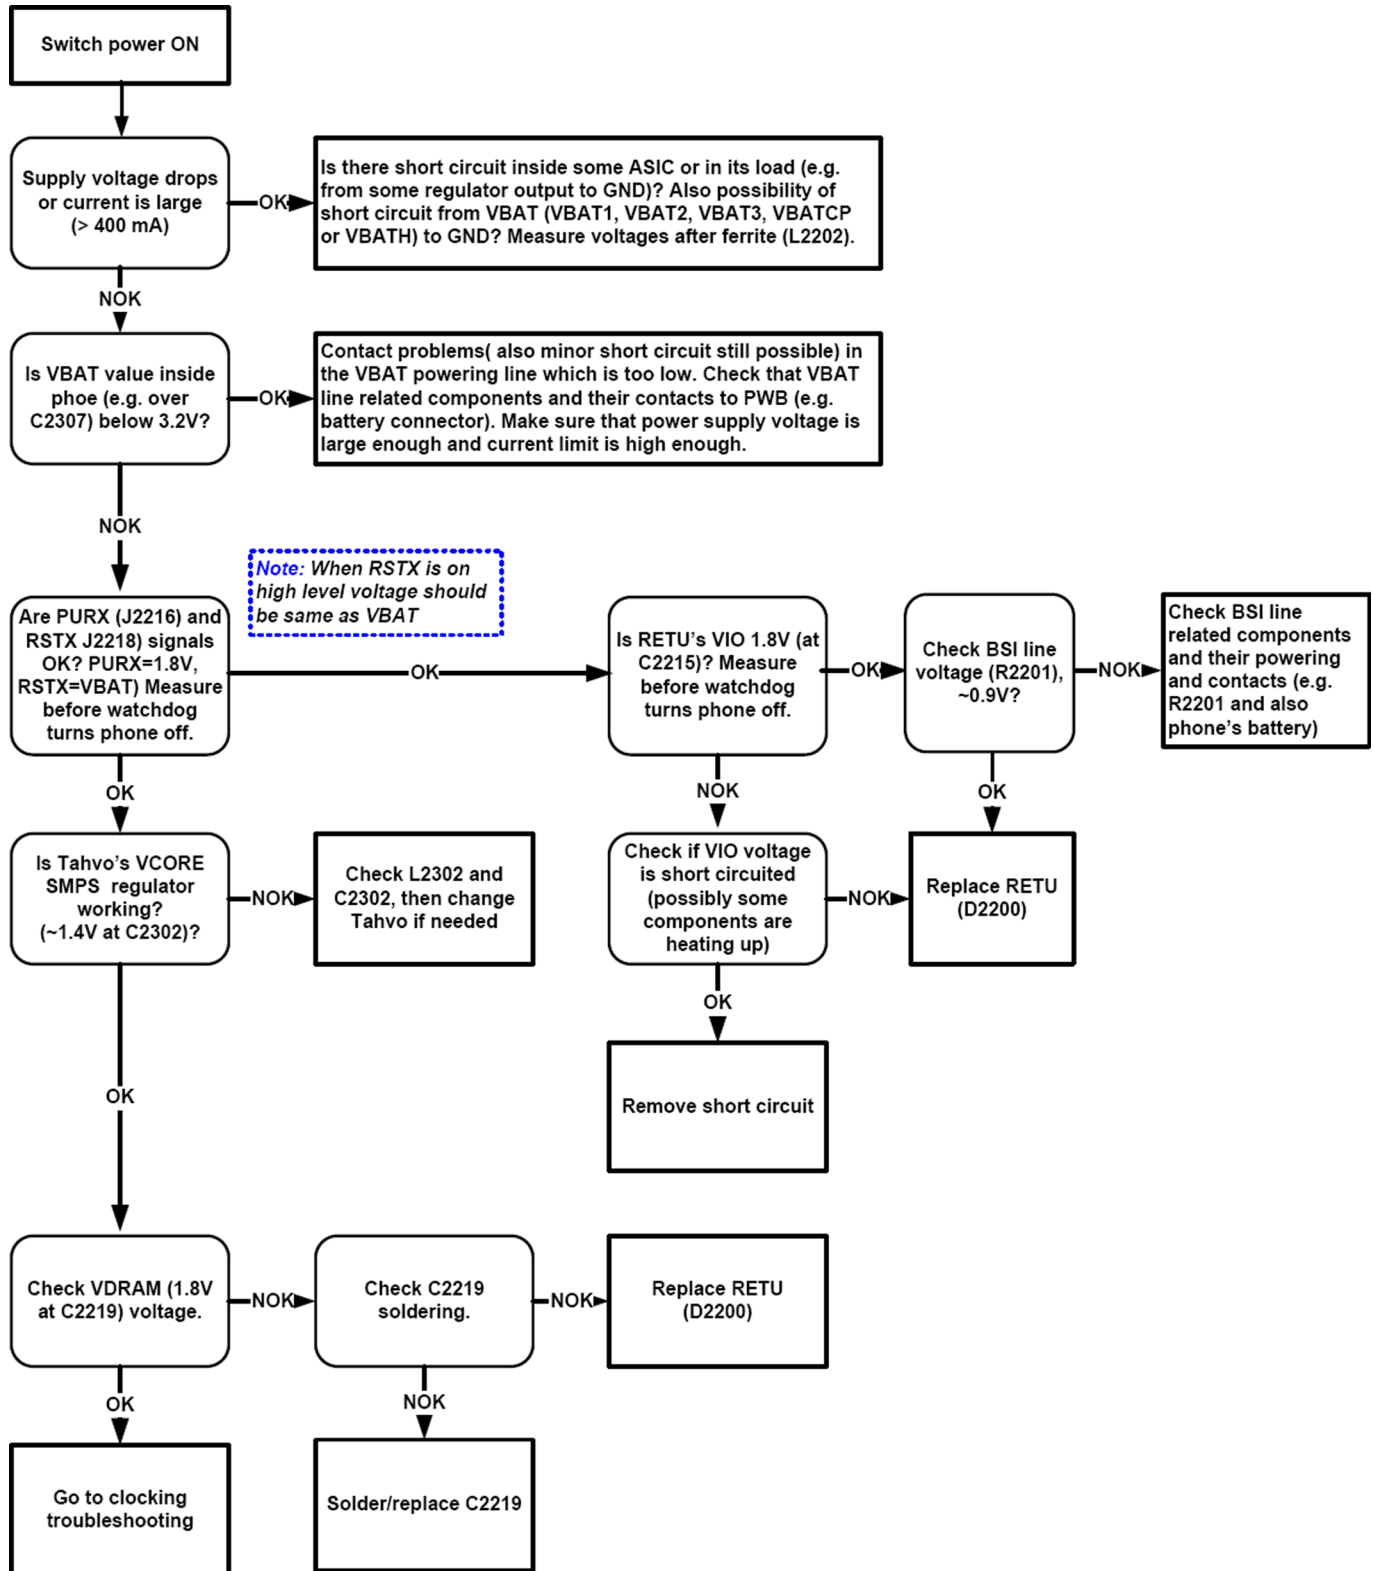




## Battery current measuring fault troubleshooting

### Troubleshooting flow

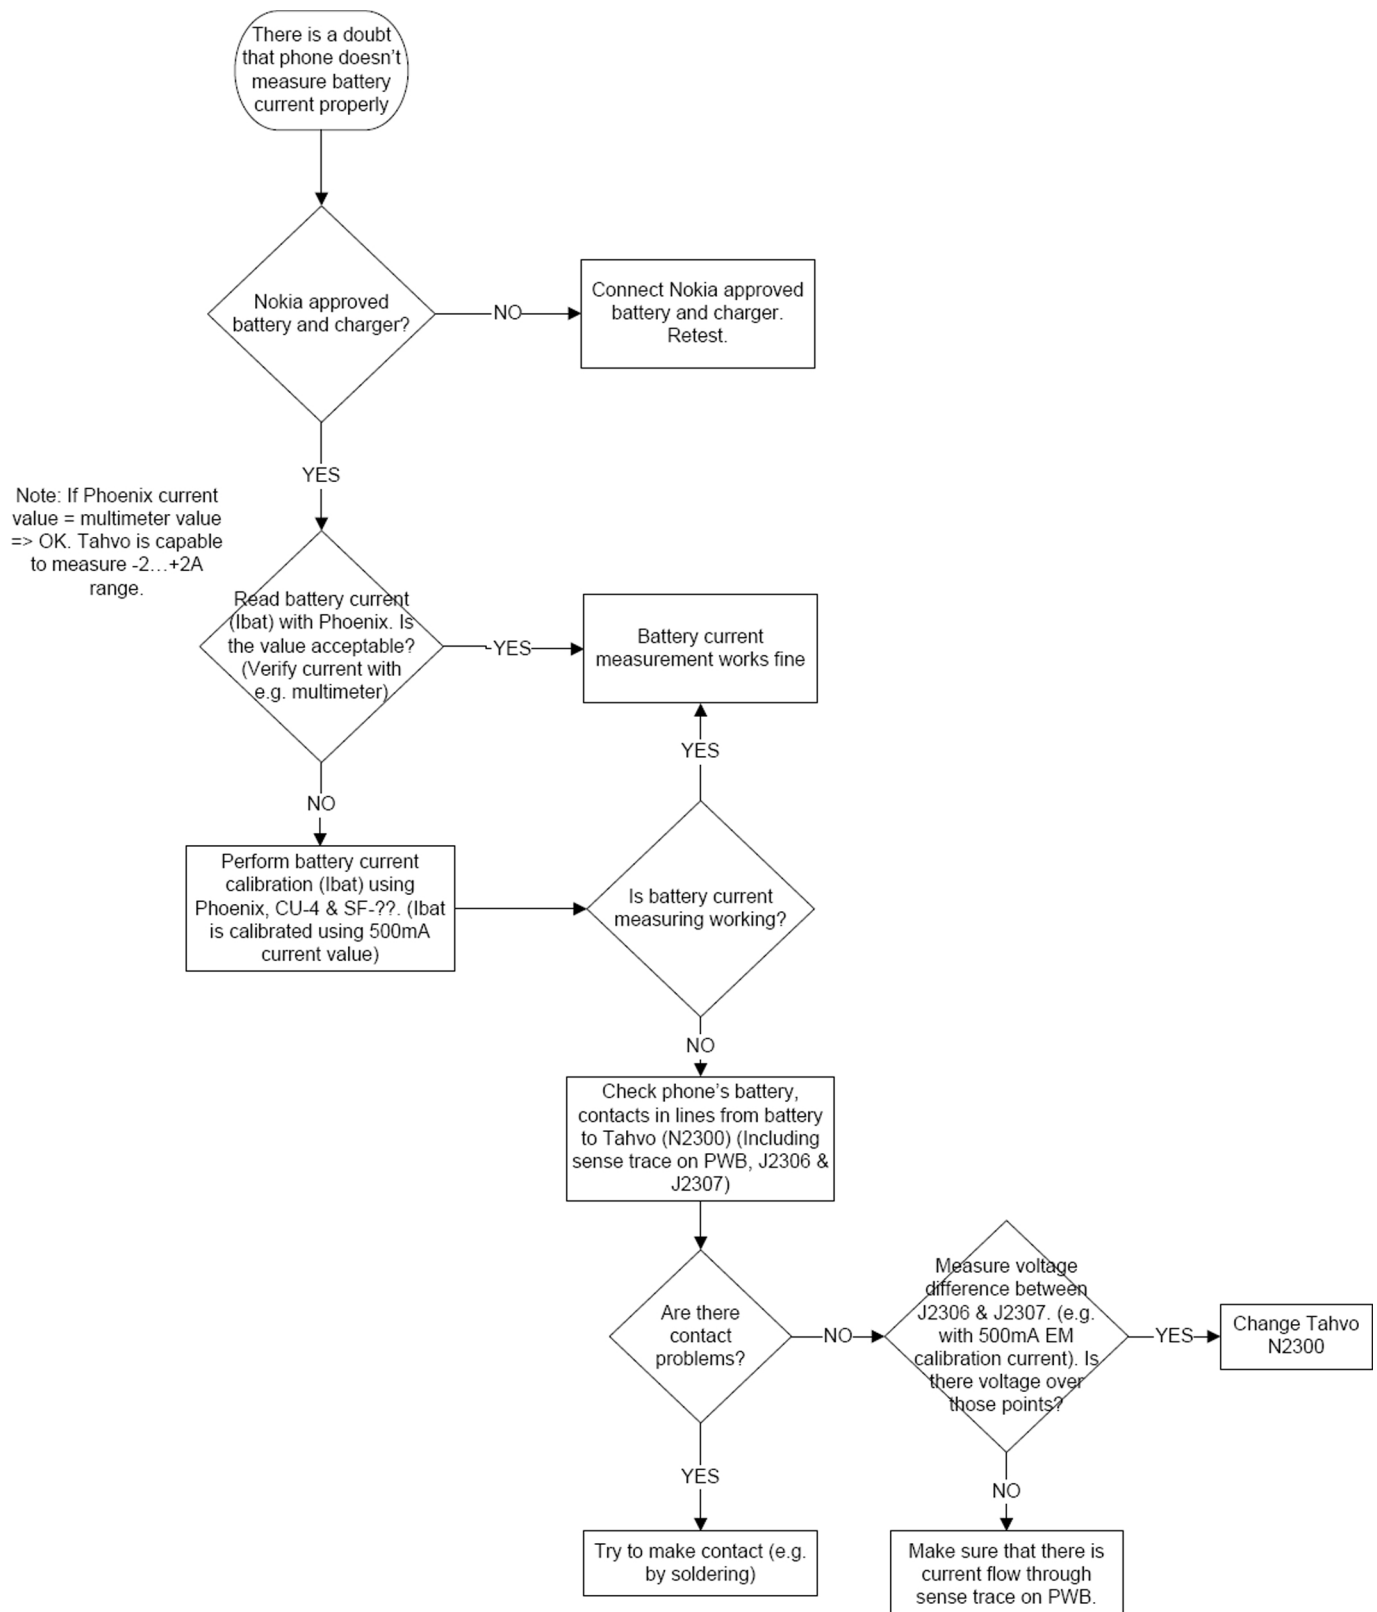


## Charging troubleshooting

### Troubleshooting flow

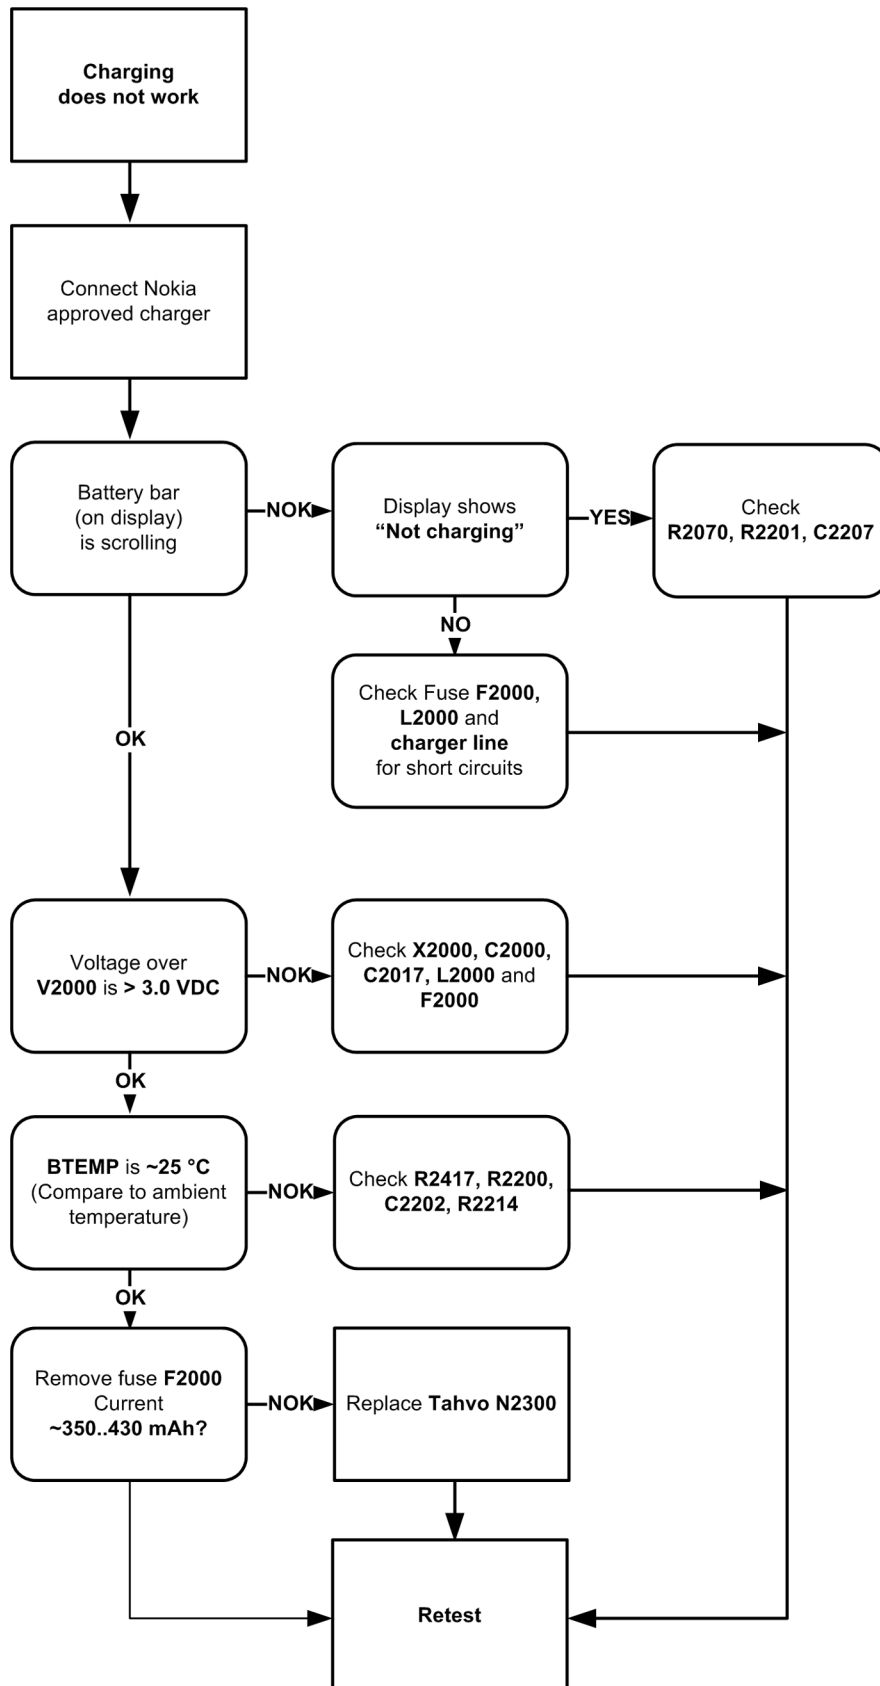

## Clocking troubleshooting

### Troubleshooting flow

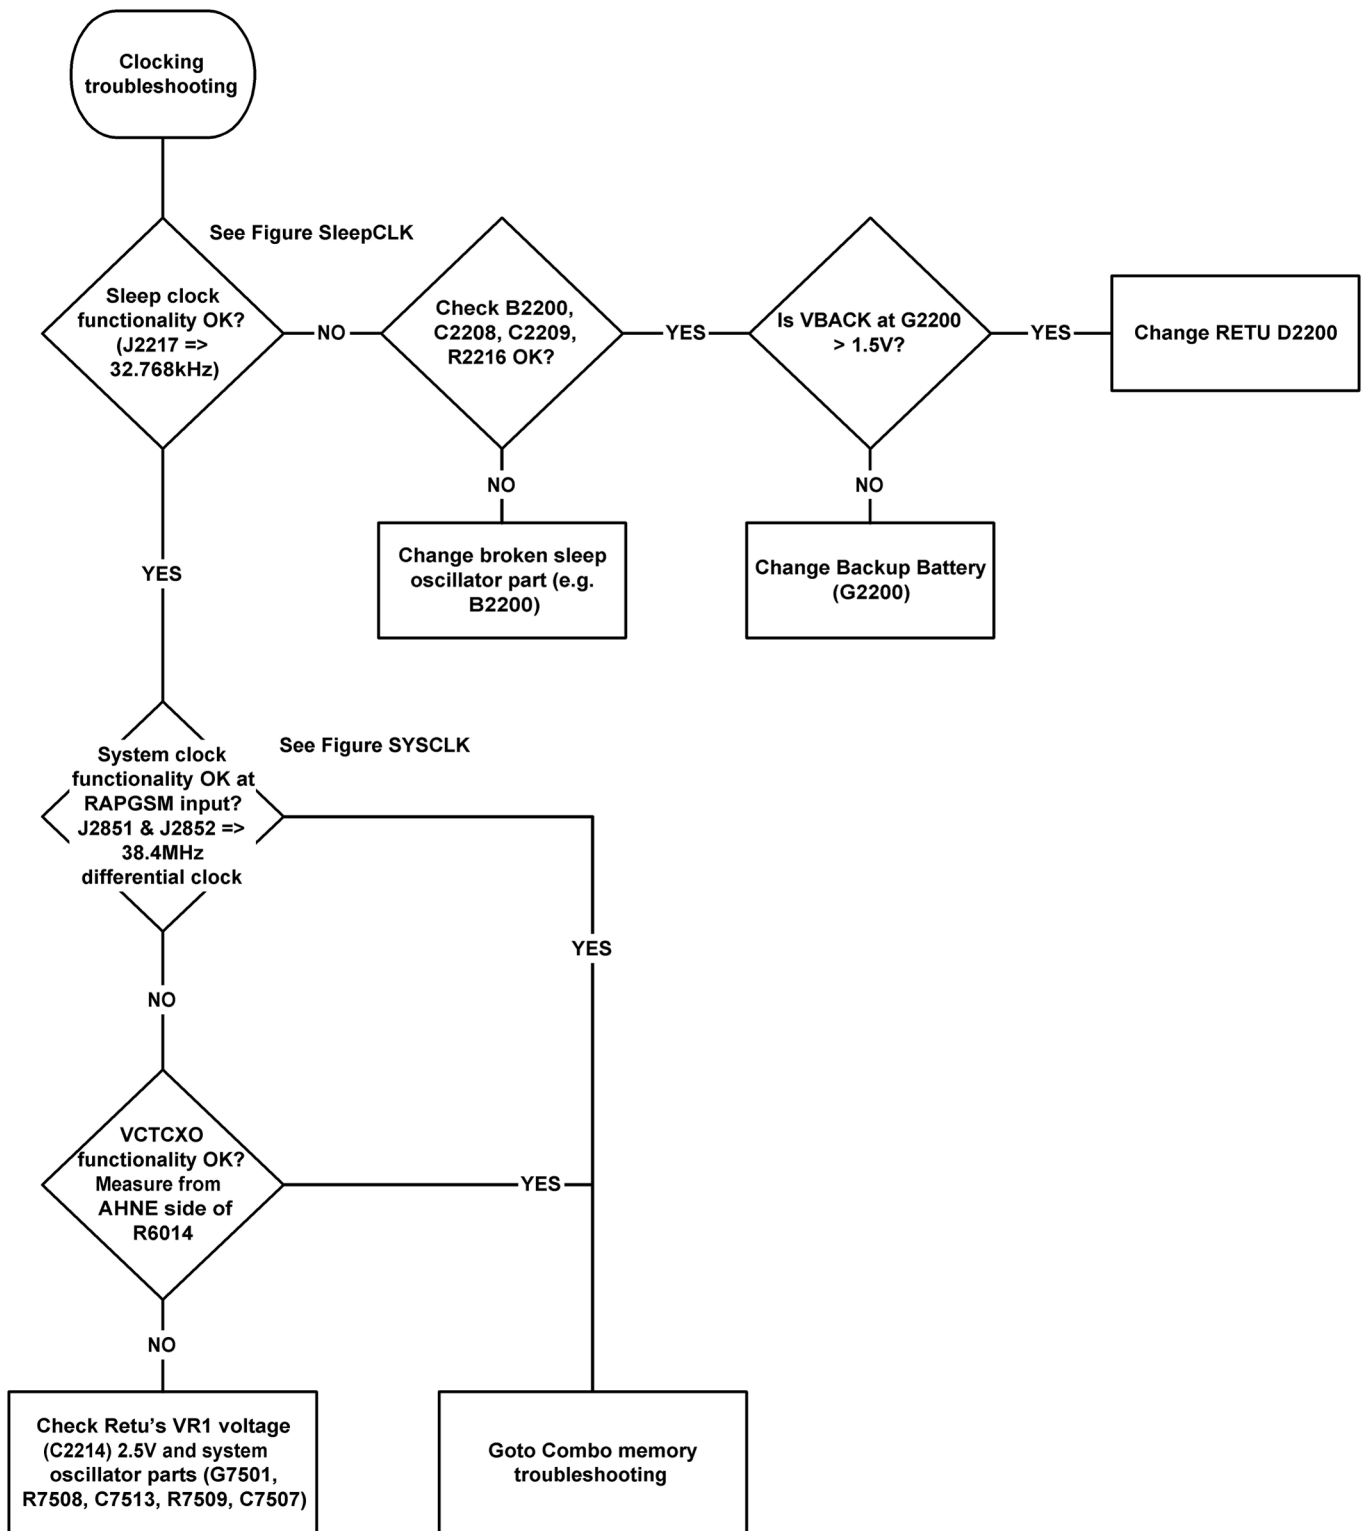

## ■ Interface troubleshooting

### Camera failure

#### *Introduction to camera troubleshooting*

Bad conditions often cause bad pictures. Therefore, the camera operation has to be checked in constant conditions or by using a second, known-to-be-good Nokia device as reference. Image quality is hard to measure quantitatively, and the difference between a good and a bad picture can be small. Some training or experience may be needed to detect what is actually wrong.

When checking for possible errors in camera functionality, knowing what error is suspected significantly helps the testing by narrowing down the amount of test cases. The following types of image quality problems are common:

- Dust (black spots)
- Lack of sharpness
- Bit errors

#### *Taking and evaluating test pictures*

When *taking* a test picture, remember the following:


- Avoid bright fluorescent light, 50/60Hz electrical network or high artificial illumination levels
- If the phone is hot, let it rest for a while before taking the picture
- Make sure the optical system is clean
- Use highest possible resolution
- Make sure the light is sufficient (bright office lightning)
- Do not take the picture towards light source
- Be as still as possible when taking the picture
- Distance should be at least 40cm, 1-2m is recommended

When *evaluating* a test picture, remember the following:

- The center of the picture is sharper than the edges
- The image may be blurred, though it does not show in the viewfinder
- Analyse the picture from your PC monitor, full colour setting is recommended
- If possible, compare with a picture of the same motive taken with a similar Nokia device


*Camera hardware troubleshooting*

**Troubleshooting flow**

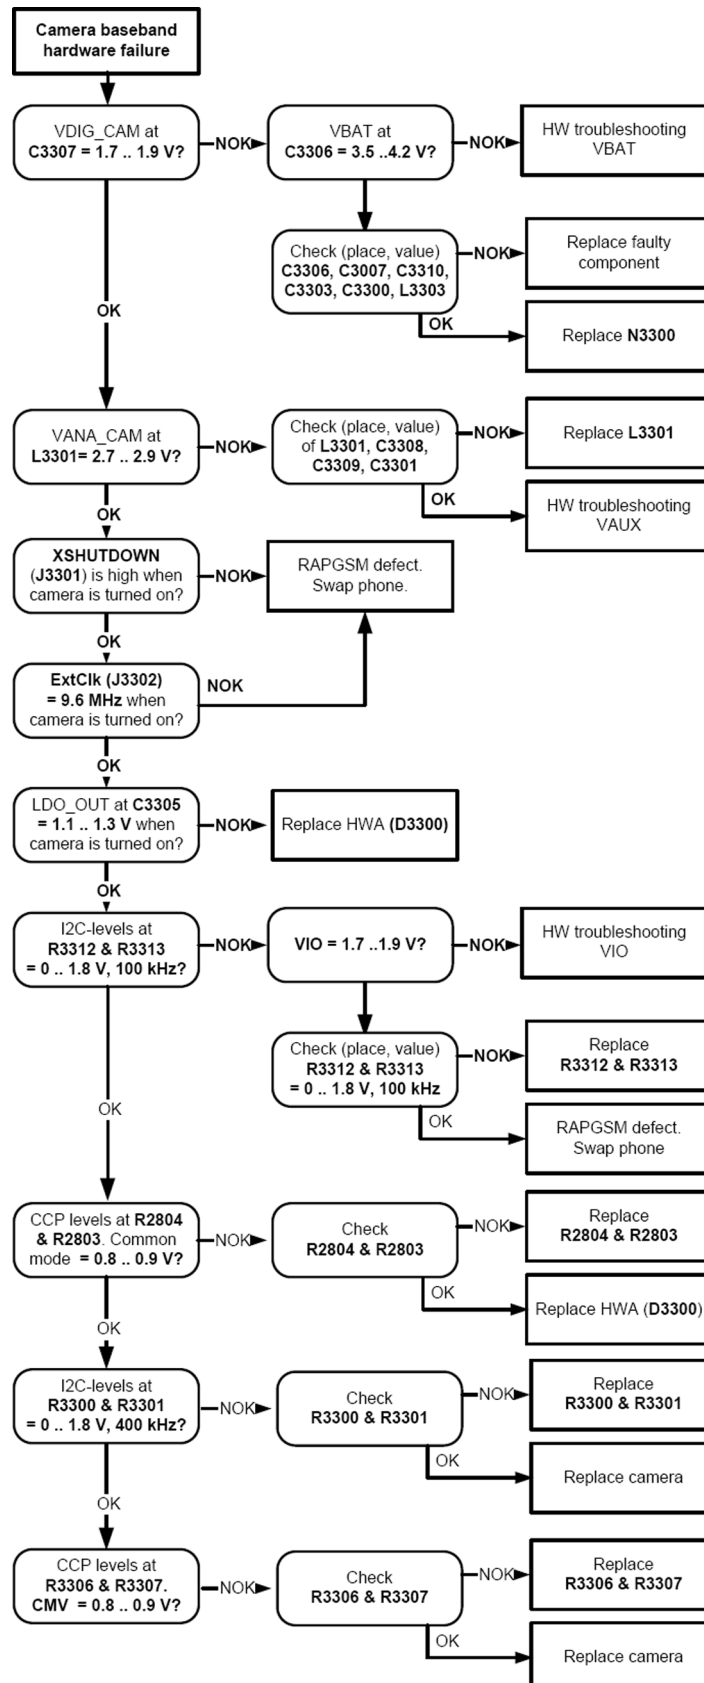


### Camera viewfinder troubleshooting

#### Troubleshooting flow

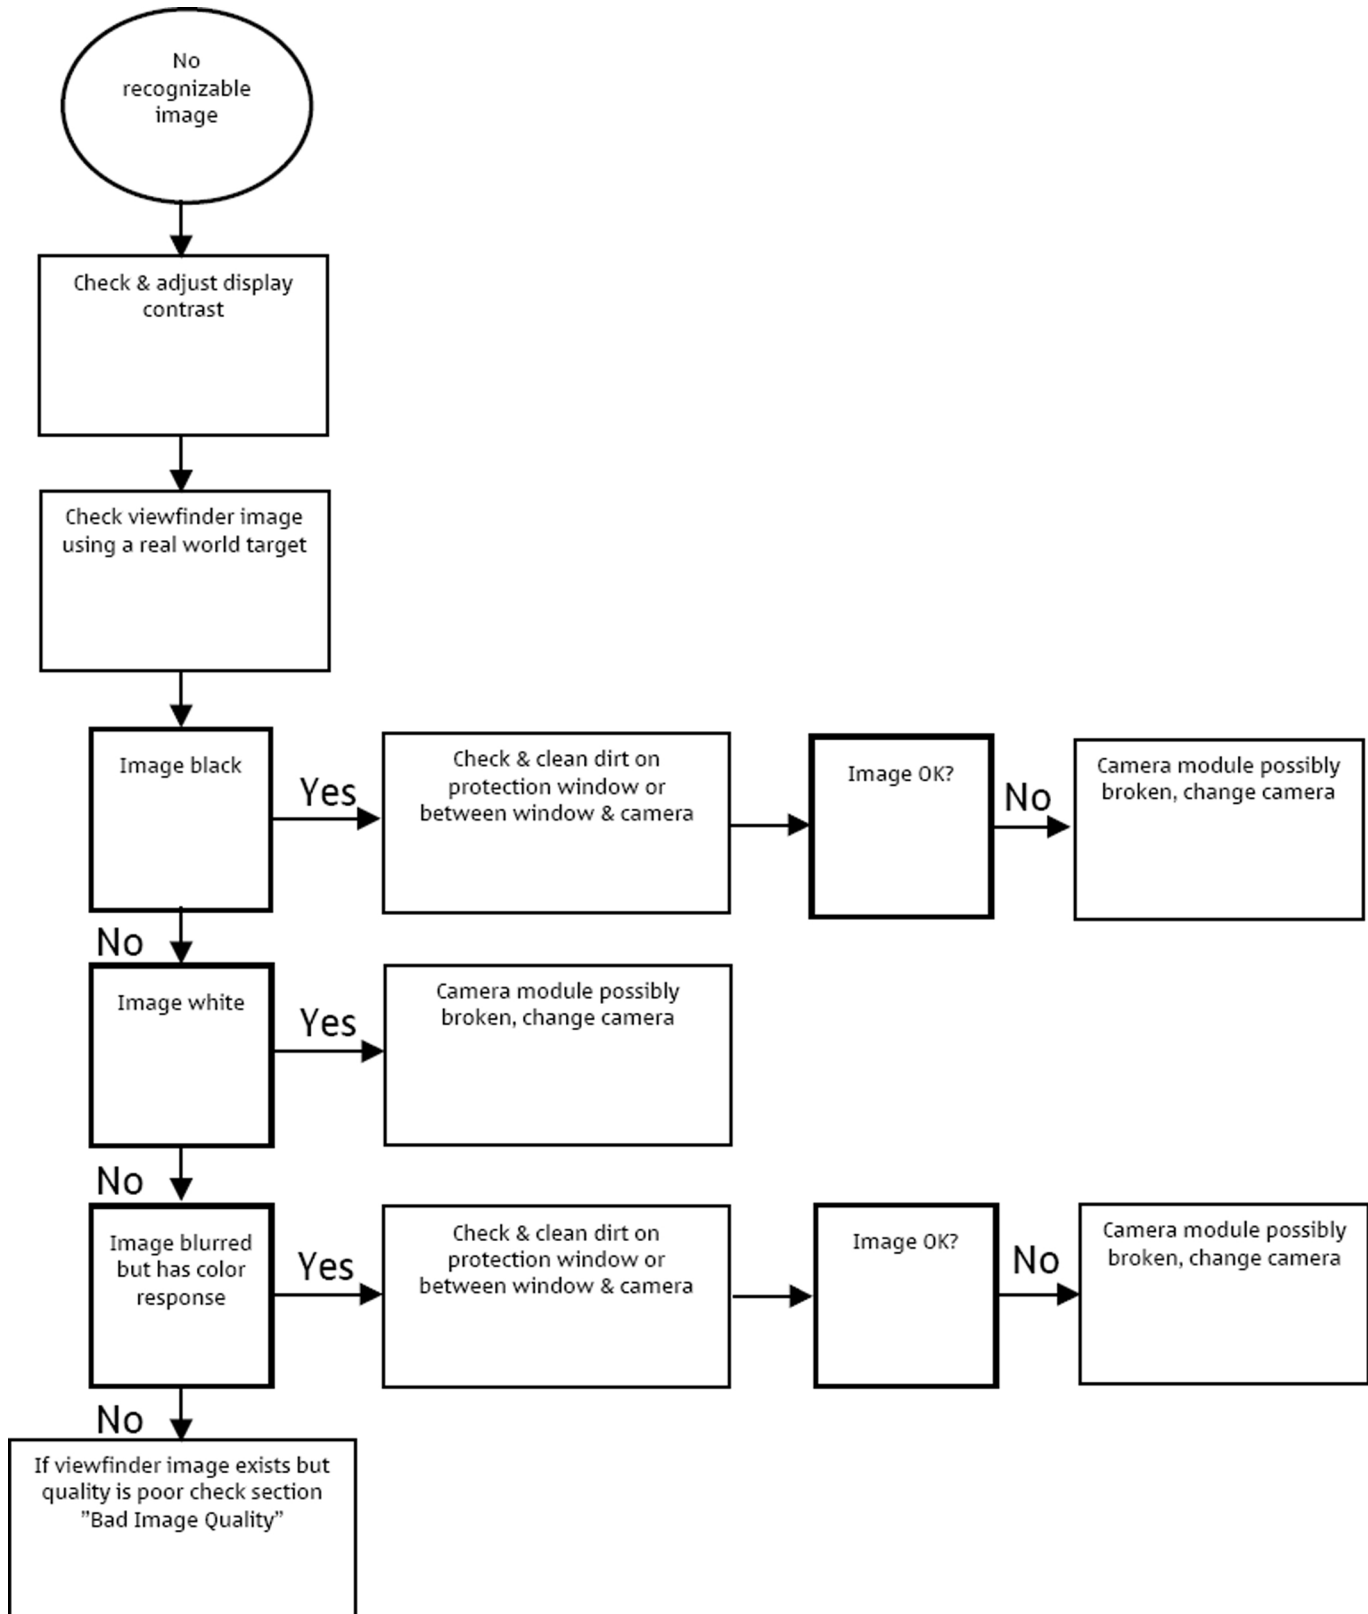


**Camera: Bad image quality troubleshooting**

**Troubleshooting flow**

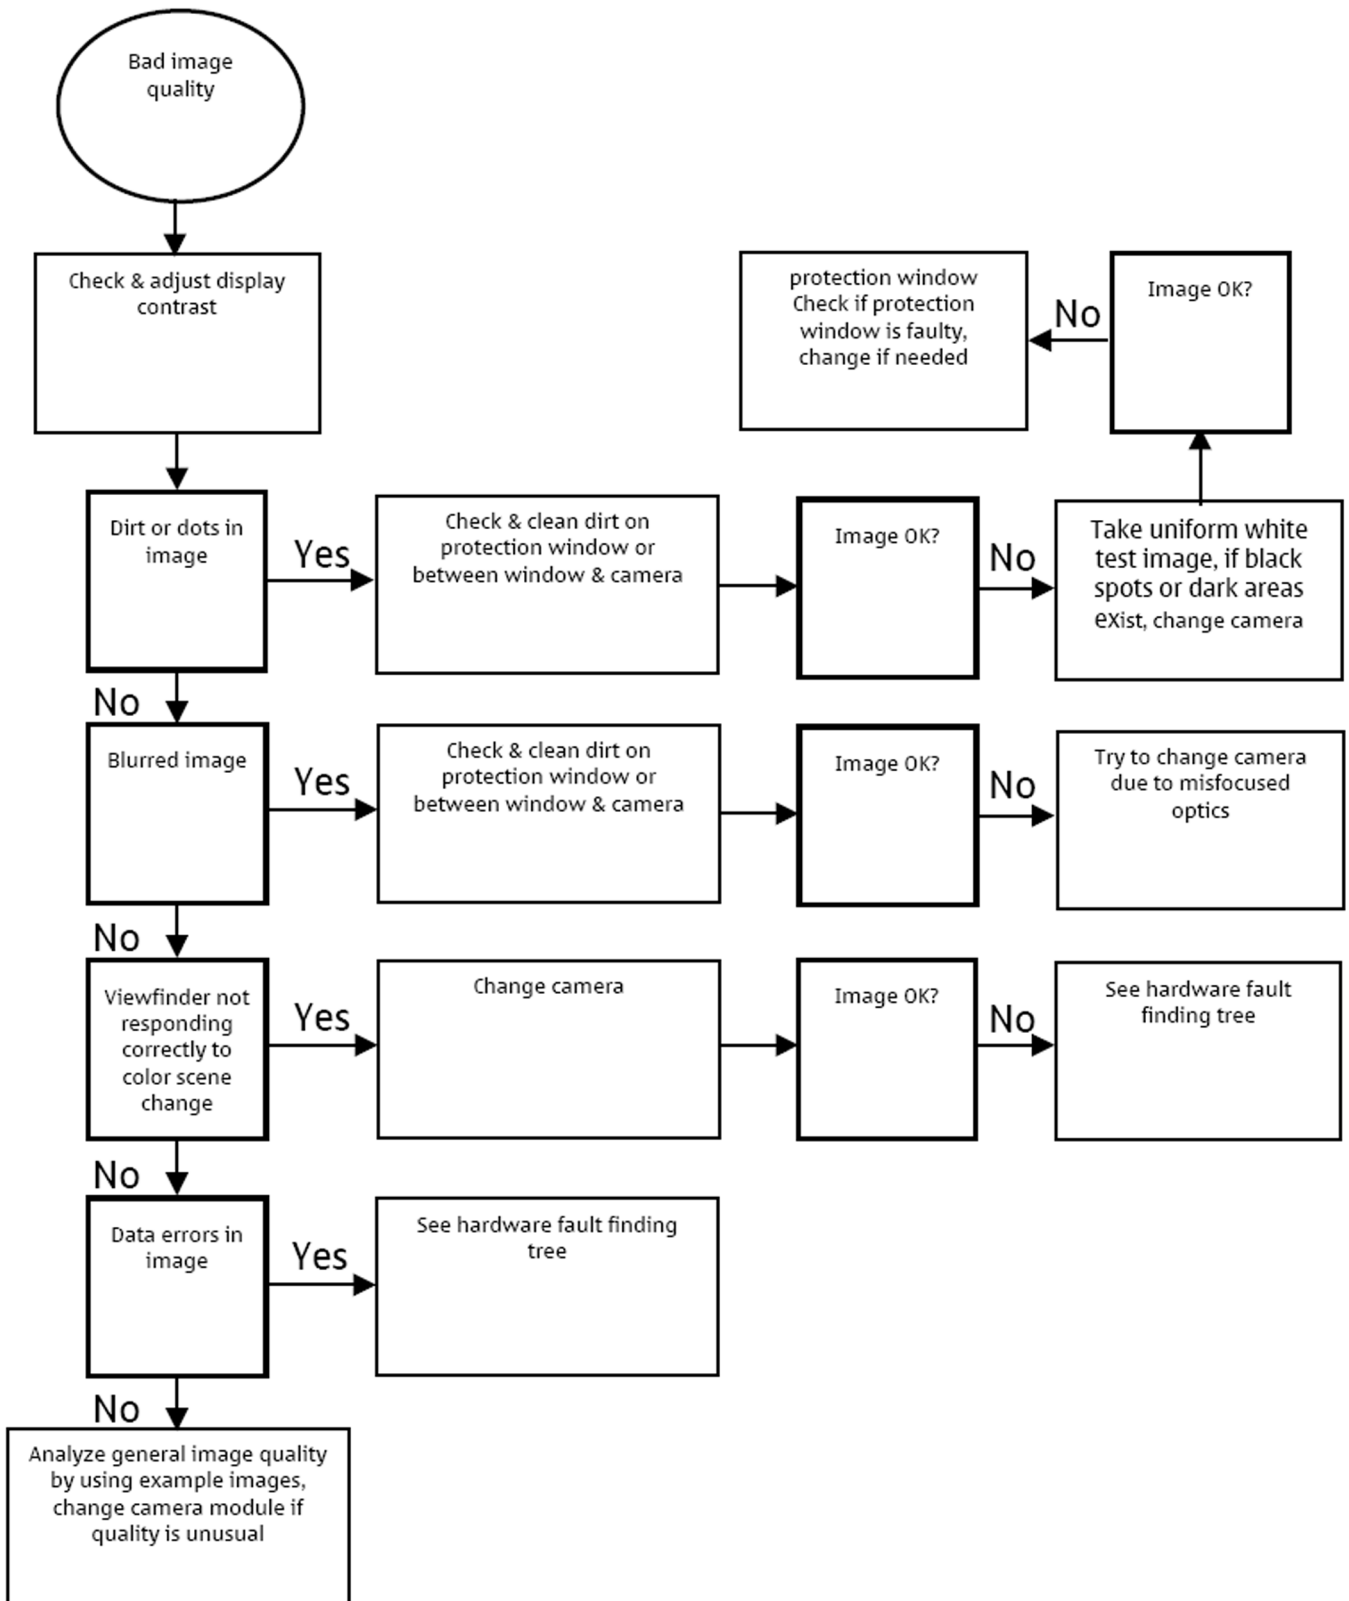

**COMBO memory troubleshooting**


**Troubleshooting flow**

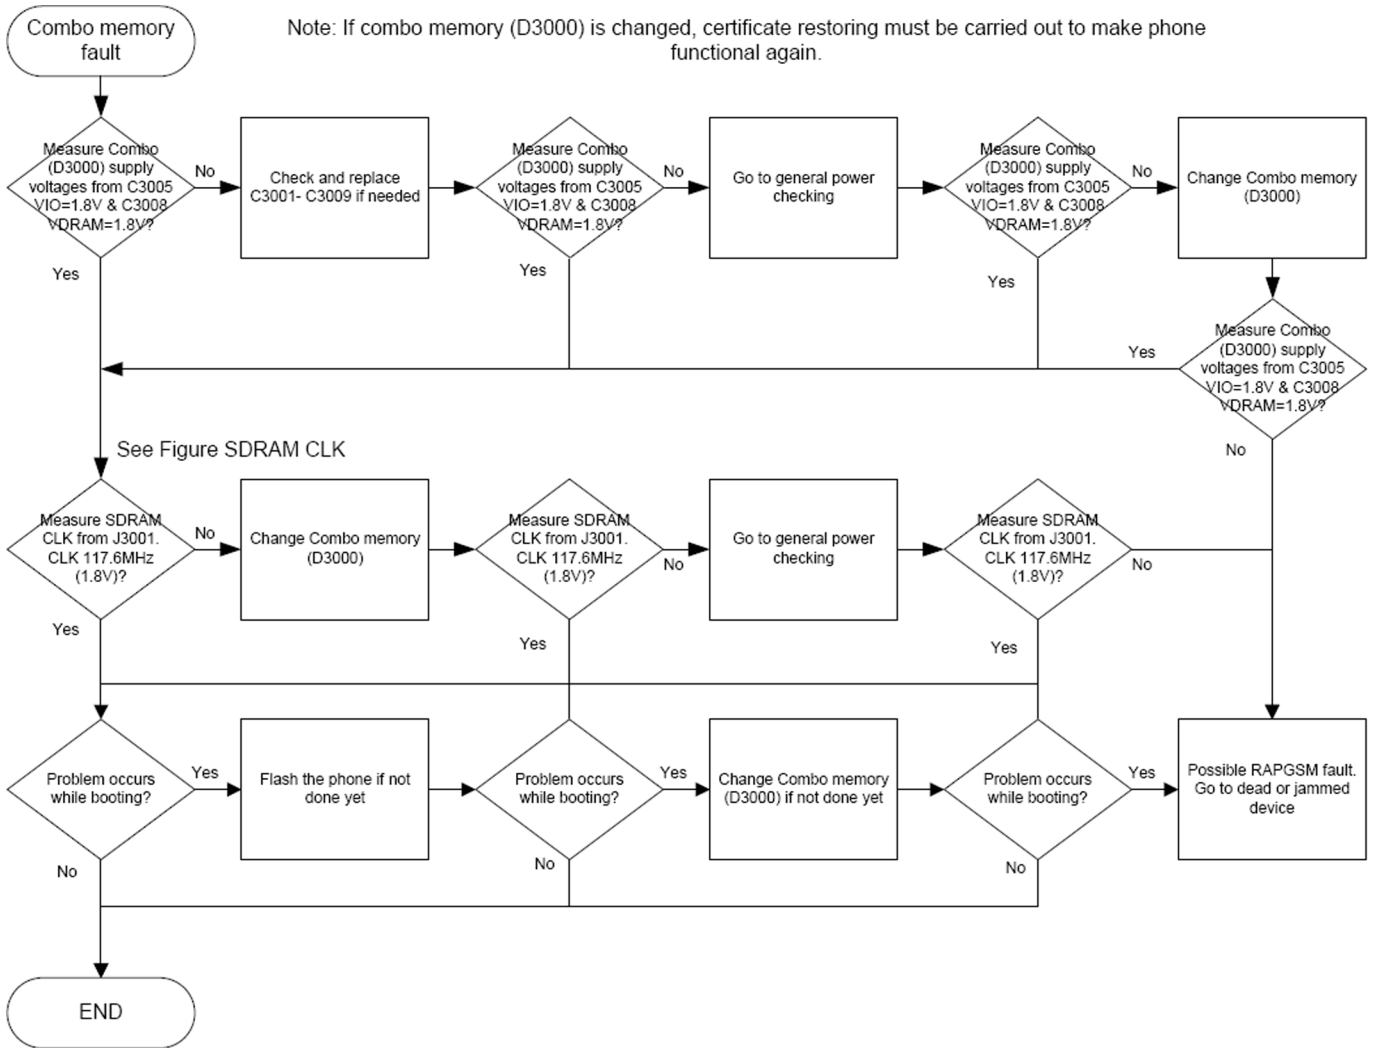



## Flash programming fault troubleshooting

### Part 1

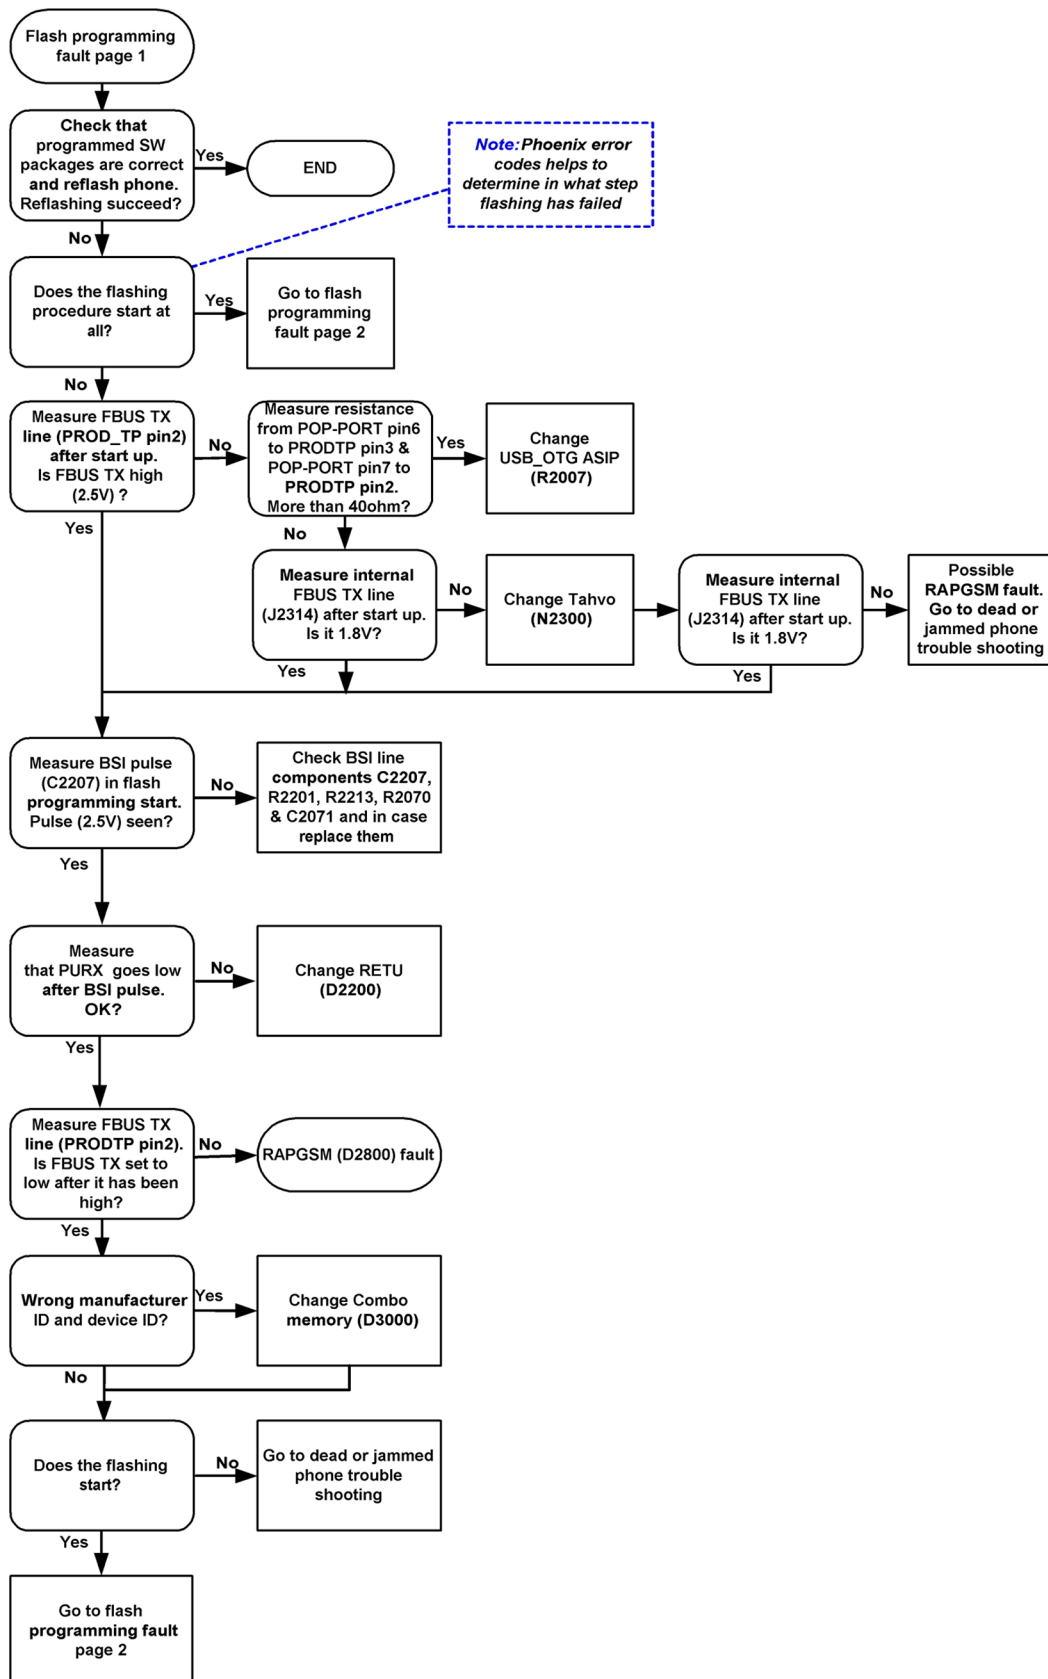

## Part 2

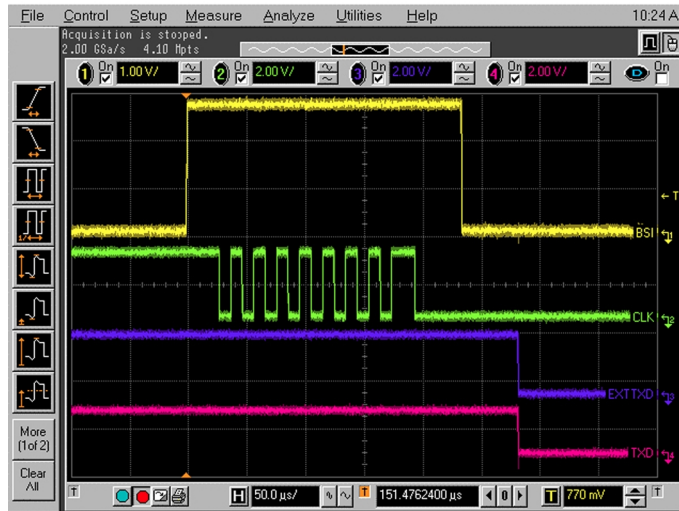


Figure 33 Flashing pic 1. Take single trig measurement for the rise of the BSI signal.


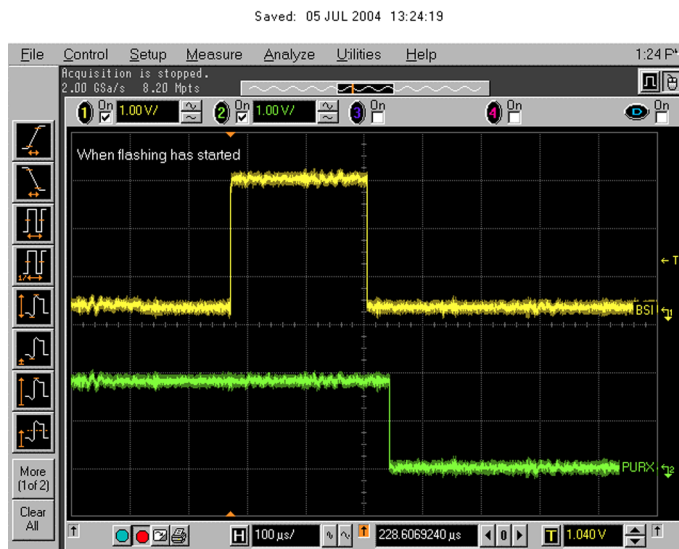


Figure 34 Flashing pic 2. Take single trig measurement for the rise of the BSI signal.

## FM radio troubleshooting


### Troubleshooting flow

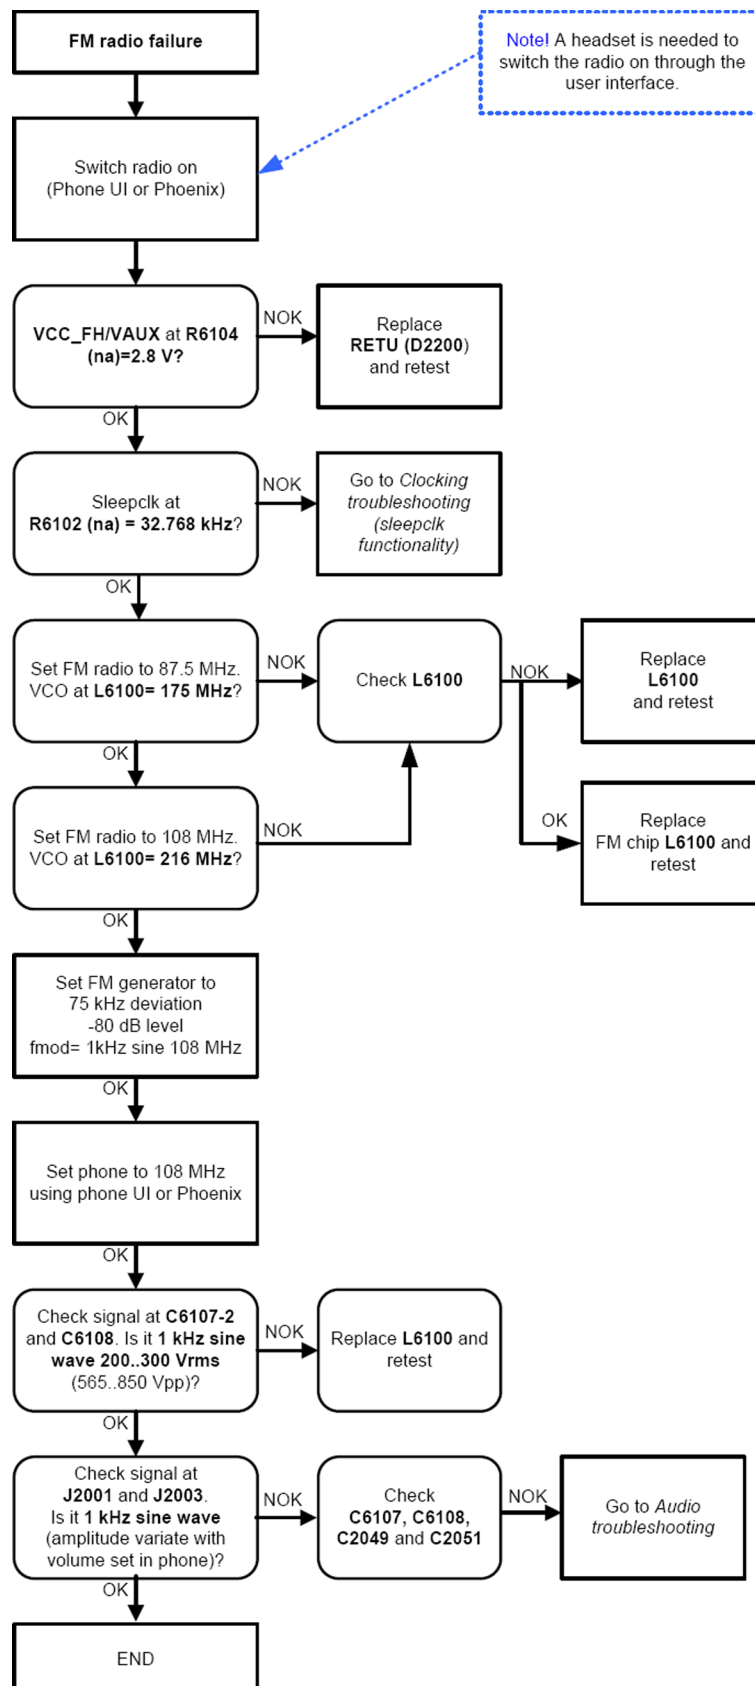

## MicroSD card troubleshooting

### Context



In the RM-217/222 the microSD card reader is located under the battery cover.

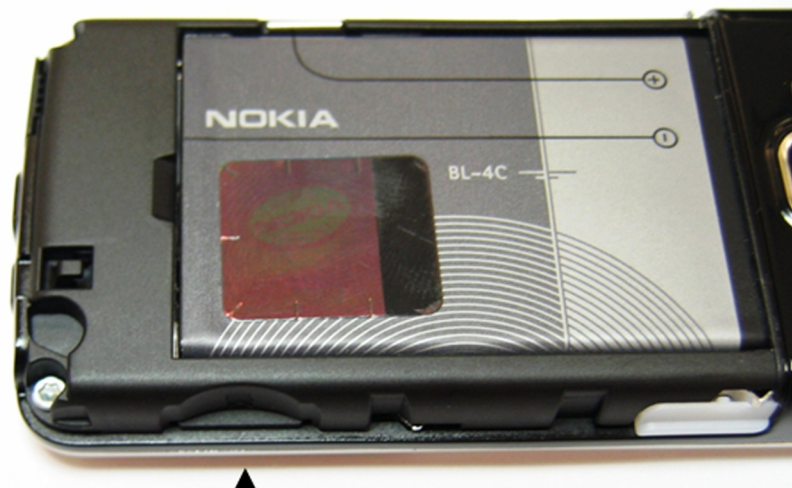


↑  
μSD card

Figure 35 Location of the microSD card reader in RM-217/222

### Troubleshooting flow

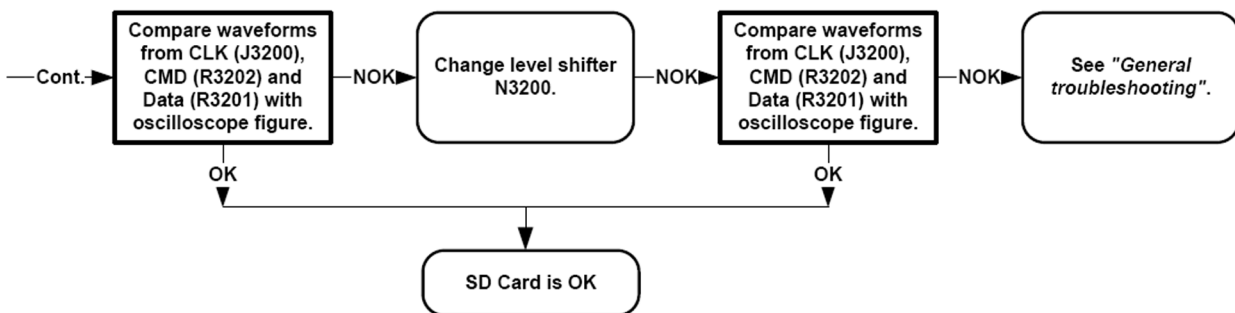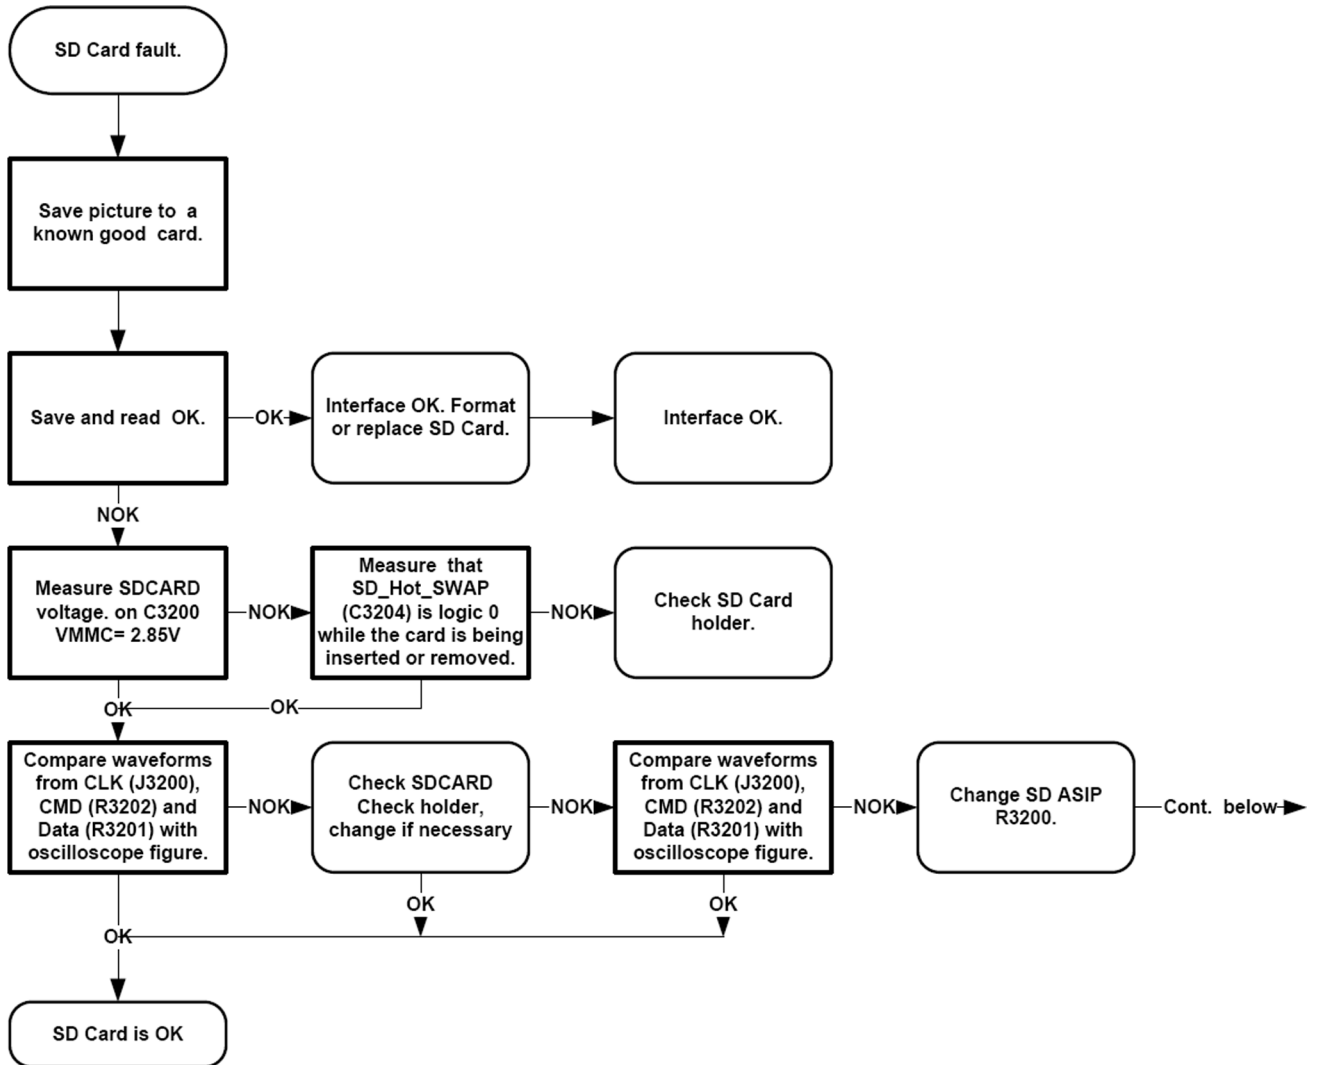

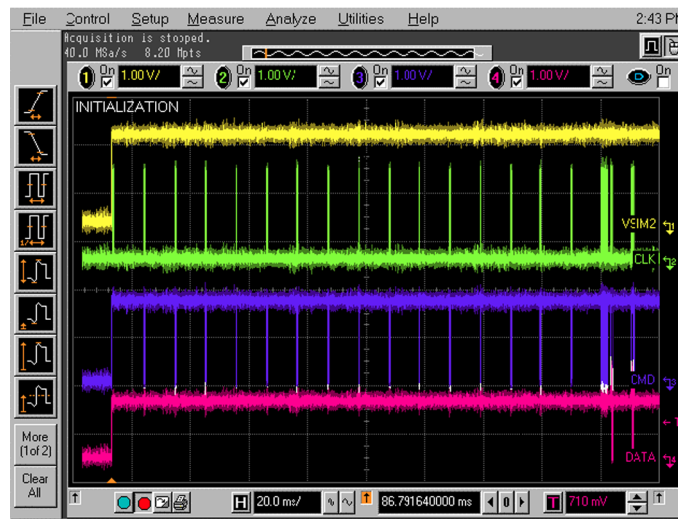

Take single trig measurement on the rising edge of the DAT signal.

**Figure 36 SD card initialization from pin J3206**

## ■ User interface troubleshooting

### Display module troubleshooting

#### *General instructions for display troubleshooting*

#### Context

The RM-217/222 has three display modes:

- *Normal mode*: The display is in normal mode when the phone is in active use.
- *Partial idle mode*: The display is in partial idle mode when the power saver is on.
- *Sleep mode*: The display has a sleep mode to conserve power. In this mode the display looks blank, but the phone is switched on. To verify if the phone display is sleeping, press a key.

The operating modes of the display can be controlled with the phone settings menu.

**Table 8 Display module troubleshooting cases**

|                                     |   |
|-------------------------------------|---|
| Display blank                       | There is no image on the display. The display looks the same when the phone is on as it does when the phone is off. The backlight can be on in some cases.  |
| Image on the display not correct    | Image on the display can be corrupted or a part of the image can be missing. If a part of the image is missing, change the display module. If the image is otherwise corrupted, follow the appropriate troubleshooting diagram.                                     |
| Backlight dim or not working at all | Backlight LED components are inside the display module. Backlight failure can also be in the connector or in the backlight power source in the main engine of the phone.<br><br>This means that in case the display is working (image OK), the backlight is faulty. |

|                               |  |
|-------------------------------|--|
| <p>Visual defects (pixel)</p> | <p>Pixel defects can be checked by controlling the display with Phoenix. Use both colours, black and white, on a full screen.</p> <p>The display may have some random pixel defects that are acceptable for this type of display. The criteria when pixel defects are regarded as a display failure, resulting in a replacement of the display, are presented the following table.</p> |
|-------------------------------|--|

**Table 9 Pixel defects**


| Item |                        | White dot defect  |   |   |                 | Black dot defect | Total |
|------|------------------------|---|---|---|-----------------|------------------|-------|
|      |                        | R   | G | B | White Dot Total |                  |       |
| 1    | Defect counts          | R   | G | B | White Dot Total | 1                | 1     |
|      |                        | 1   | 1 | 1 | 1               |                  |       |
| 2    | Combined defect counts | Not allowed.<br>Two single dot defects that are within 5 mm of each other should be interpreted as combined dot defect. |   |   |                 |                  |       |

**Steps**

1. Verify with a working display that the fault is not on the display module itself.  
 The display module cannot be repaired.
2. Check that the cellular engine is working normally.
  - i To check the functionality, connect the phone to a docking station.
  - ii Start *Phoenix* service software.
  - iii Read the phone information to check that also the application engine is functioning normally (you should be able to read the APE ID).
3. Proceed to the display troubleshooting flowcharts.  
 Use the **Display Test** tool in *Phoenix* to find the detailed fault mode.

**Display troubleshooting**

**Troubleshooting flow**

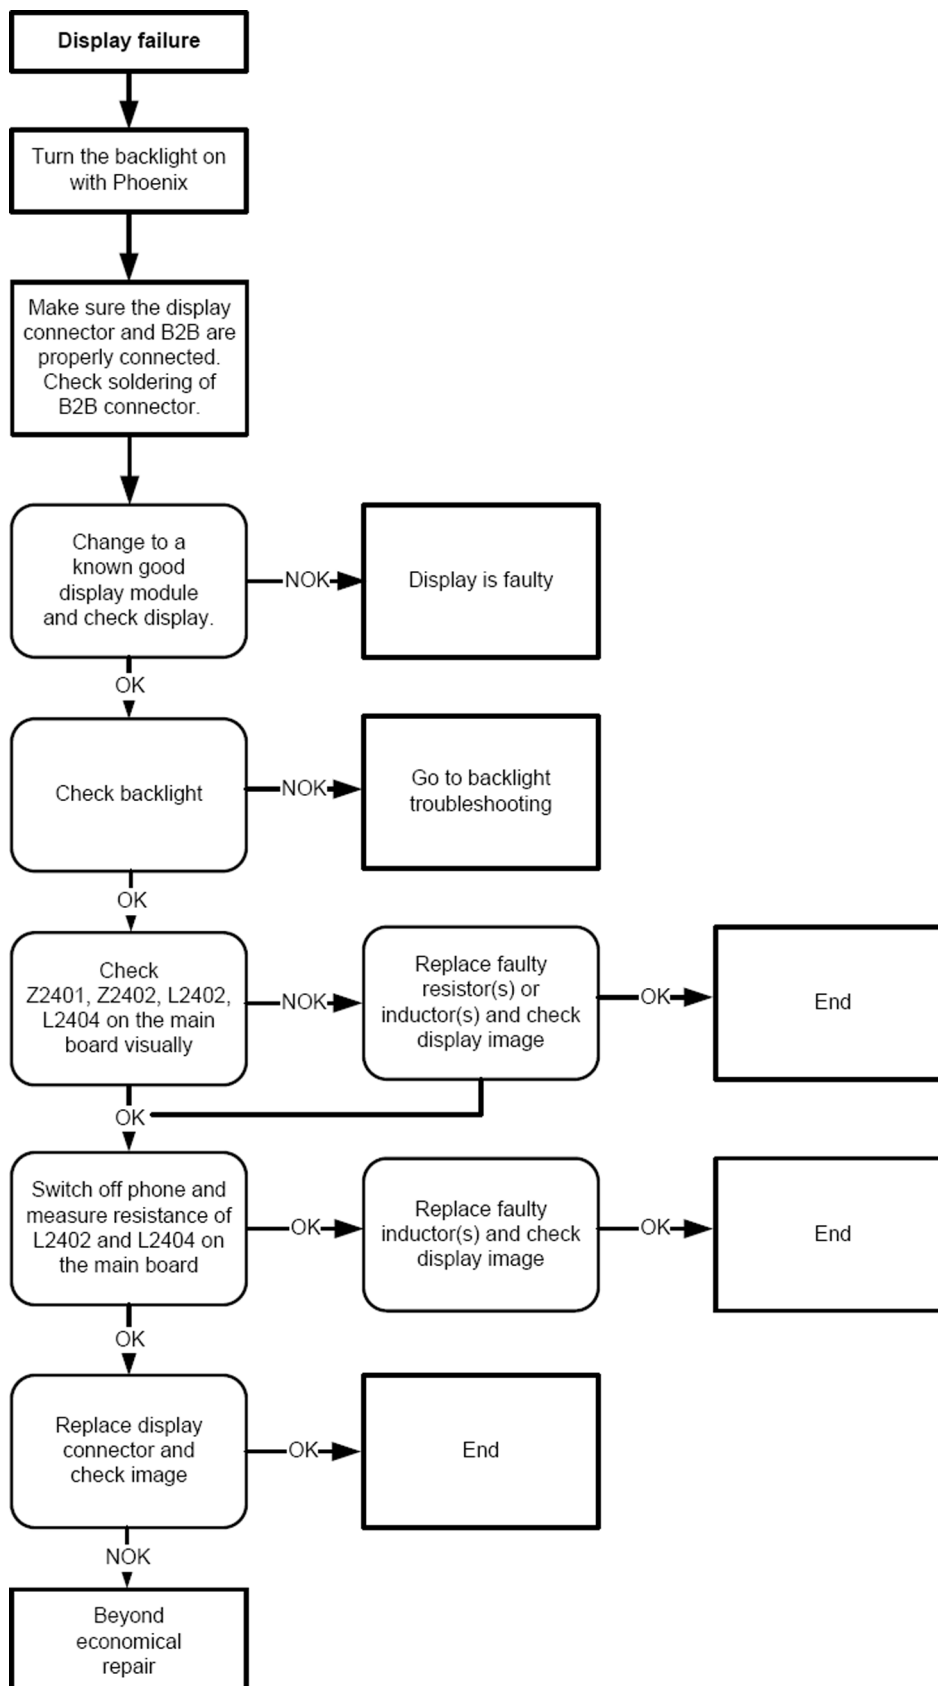




## Backlight troubleshooting

### Context


The device has one LED driver that provides current for both the display and keyboard backlights. Brightness can be adjusted manually, and it affects both the display and keypad. Keyboard backlights can be turned ON/OFF separately but not without switching on the display lights.

### Display and keyboard backlight troubleshooting

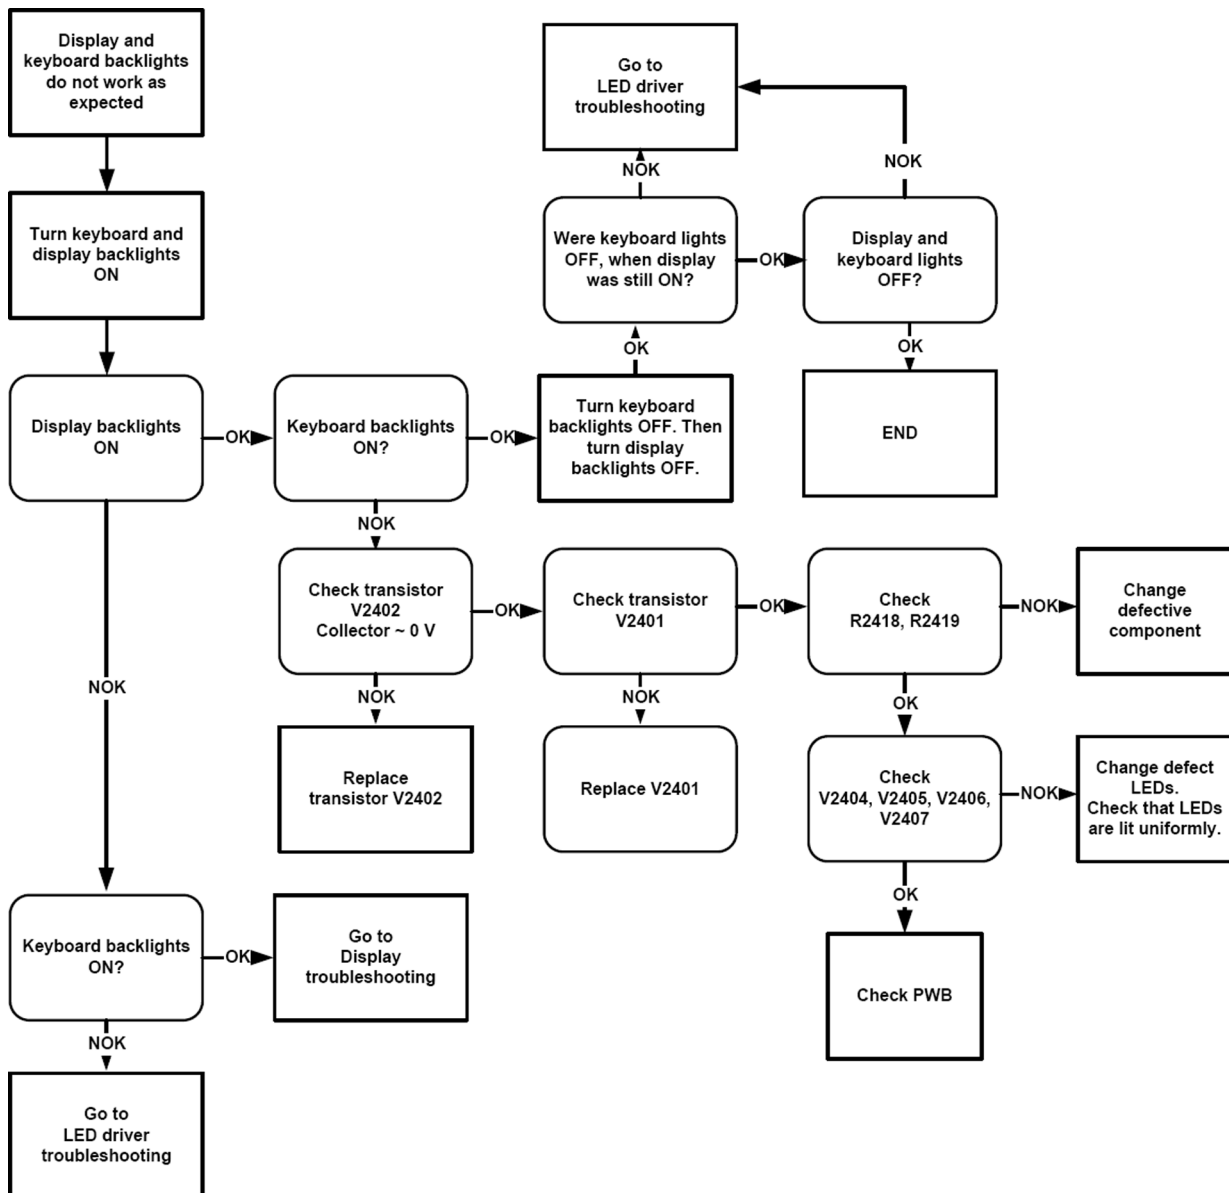


## Reminder LED troubleshooting

### Troubleshooting flow

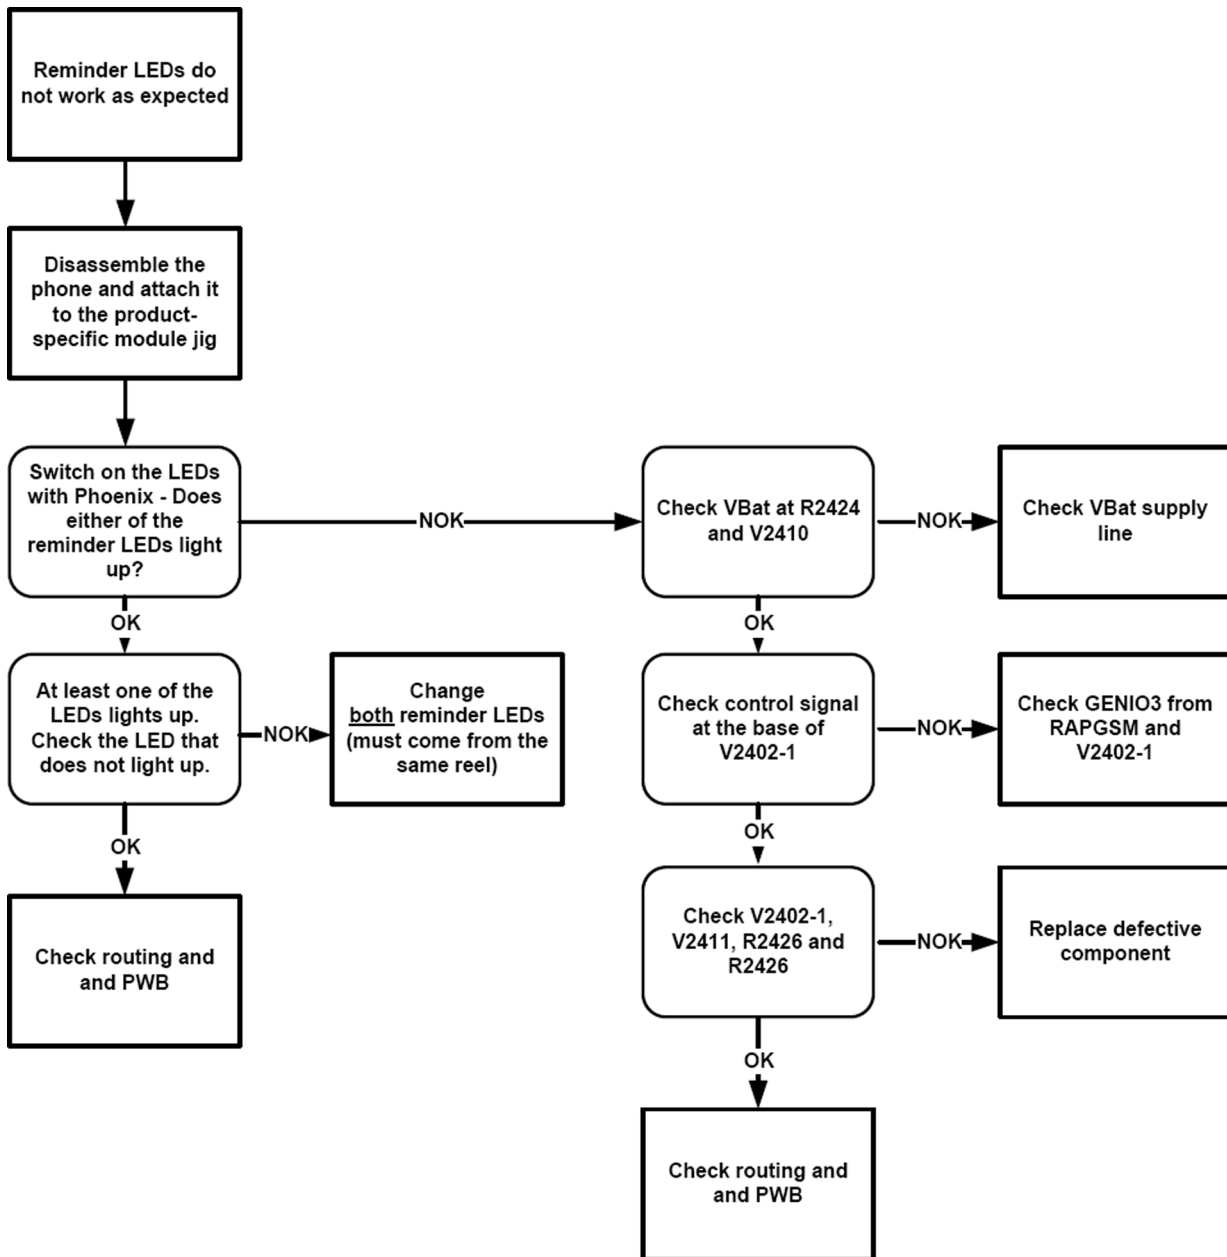

**LED driver troubleshooting**

**LED driver troubleshooting**

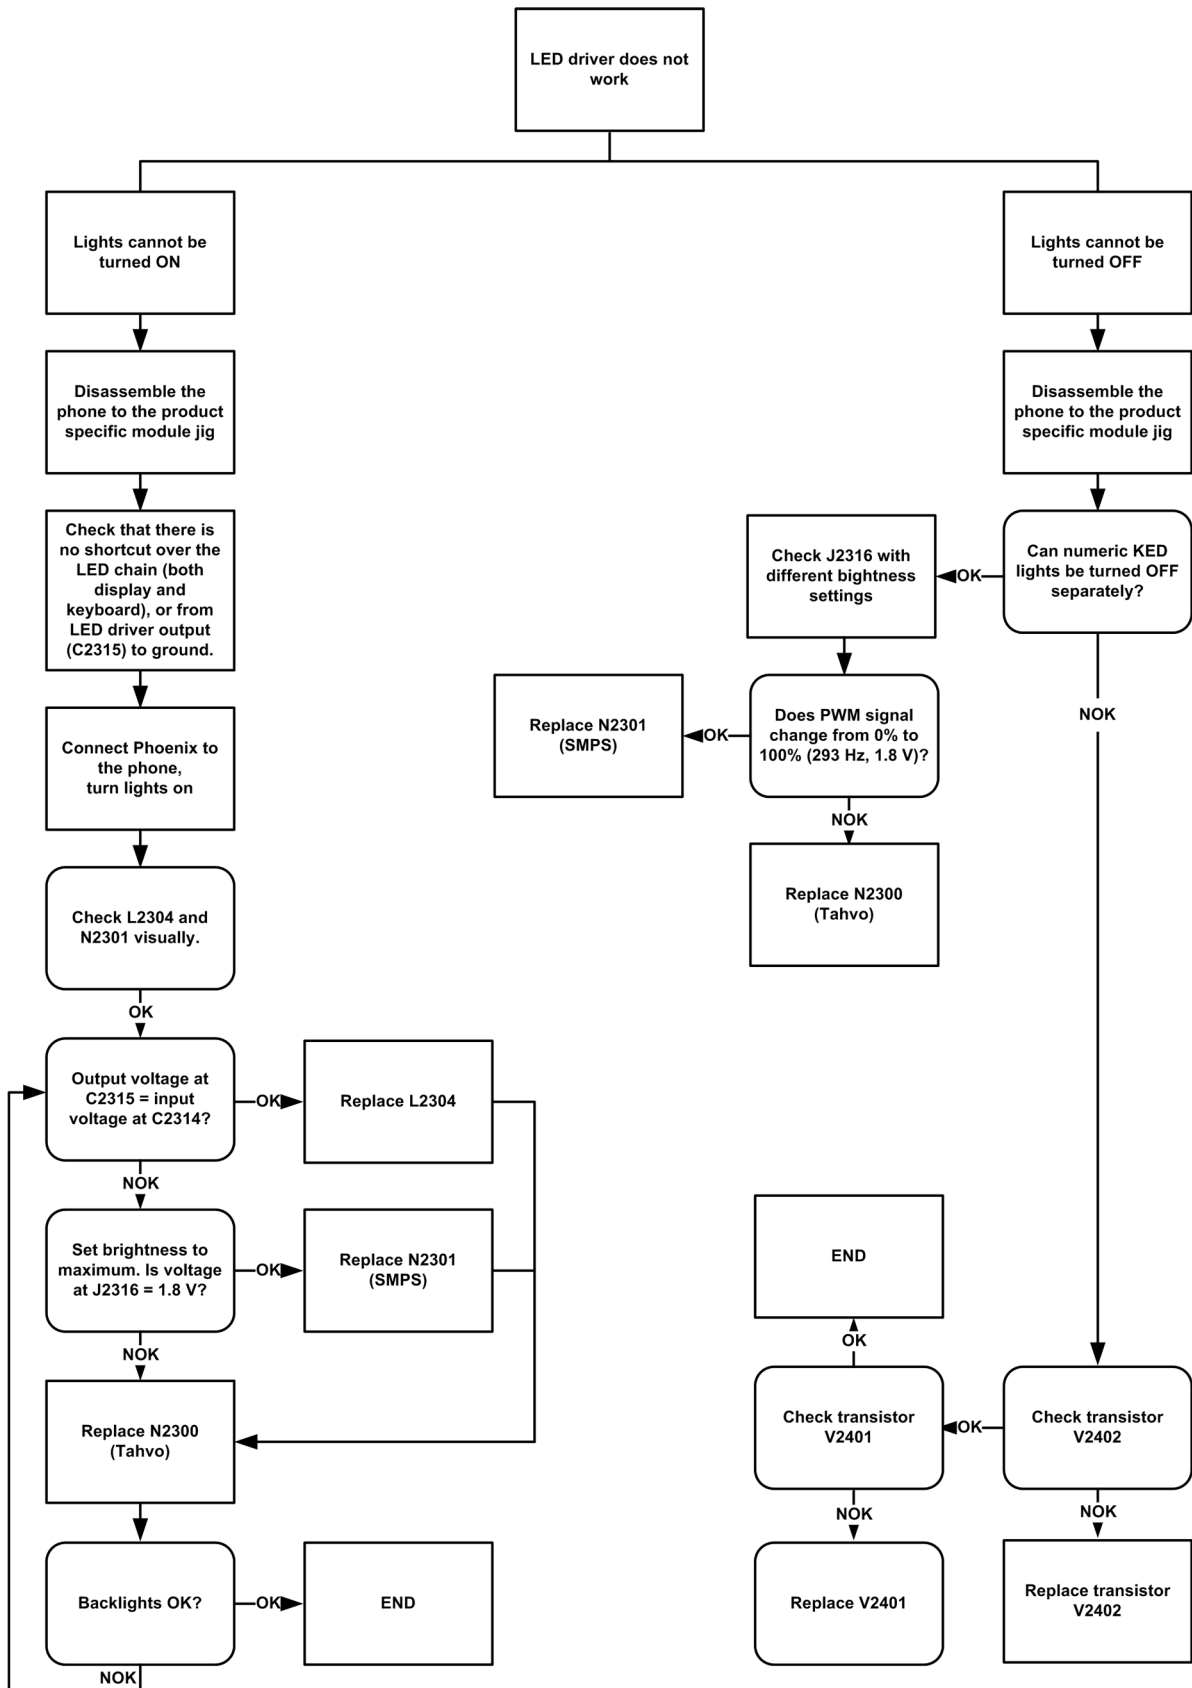

## ■ Audio troubleshooting

### Introduction to acoustics troubleshooting

**Note:** Always make sure all openings are clean and all contact pads are intact and make contact. If audio still does not work, please continue to the electronic audio troubleshooting (2nd diagram where applicable).

Acoustics design ensures that the sound is detected correctly with a microphone and properly radiated to the outside of the device by speaker(s). The acoustics of the phone includes three basic systems: earpiece, Integrated Hands Free (IHF) and microphone.

The sound reproduced from the earpiece radiates through a single hole on the front cover (A-cover). The sound reproduced from the IHF speaker radiates from a single sound hole located 3 cm below the power key. The microphone is located at the hinge, next to the system connector.

For a correct functionality of the phone, all sound holes must be always open. When the phone is used, care must be taken not to close any of those holes with a hand or fingers. The phone should be dry and clean, and no objects must be located in such a way that they close any of the holes.

### Audio troubleshooting test instructions

Differential internal earpiece outputs can be measured either with a single-ended or a differential probe.

When measuring with a single-ended probe each output is measured against the ground.

Internal handsfree output is measured using a current probe, if a special low-pass filter designed for measuring a digital amplifier is not available. Note also that when using a current probe, the input signal frequency must be set to 2kHz.

The input signal for each loop test can be single-ended.

### Required equipment

The following equipment is needed for the tests:

- Oscilloscope
- Function generator (sine waveform)
- Current probe (Internal handsfree PWM output measurement)
- Phoenix service software
- Battery voltage 3.7V

### Test procedure

Audio can be tested using the Phoenix audio routings option. Three different audio loop paths can be activated:

- External microphone to Internal earpiece
- External microphone to Internal handsfree speaker
- Internal microphone to External earpiece

Each audio loop sets routing from the specified input to the specified output enabling a quick in-out test. Loop path gains are fixed and they cannot be changed using Phoenix. Correct pins and signals for each test are presented in the following table.

### Phoenix audio loop tests and test results

The results presented in the table apply when no accessory is connected and battery voltage is set to 3.7V.

Earpiece, internal microphone and speaker are in place during measurement. Applying a headset accessory during measurement causes a significant drop in measured quantities.

The gain values presented in the table apply for a differential output vs. single-ended/differential input.

| Loop test                          | Input terminal  | Output terminal | Path gain [dB] (fixed) | Input voltage [mVp-p] | Differential output voltage [mVp-p] | Output DC level [V] | Output current [mA] |
|------------------------------------|-----------------|-----------------|------------------------|-----------------------|-------------------------------------|---------------------|---------------------|
| External Mic to External Earpiece  | XMICP and GND   | HSEAR R and GND | -2.9                   | 1000                  | 720                                 | 1.2                 | NA                  |
|                                    |                 | HSEAR L and GND |                        |                       |                                     |                     |                     |
| External Mic to Internal Earpiece  | XMICP and GND   | EarP and GND    | -4.0                   | 750                   | 490                                 | 1.2                 | NA                  |
|                                    |                 | EarN and GND    |                        |                       |                                     |                     |                     |
| External Mic to Internal handsfree | XMICP and GND   | E2101 pad       | 8.5                    | 920                   | 2520                                | 0                   | 25mA (calc.)        |
|                                    |                 | E2102 pad       |                        |                       |                                     |                     |                     |
| Internal Mic to External Earpiece  | B2100 (OUT/GND) | HSEAR R and GND | 22.7                   | 100                   | 1360                                | 1.2                 | NA                  |
|                                    |                 | HSEAR L and GND |                        |                       |                                     |                     |                     |

### Measurement data

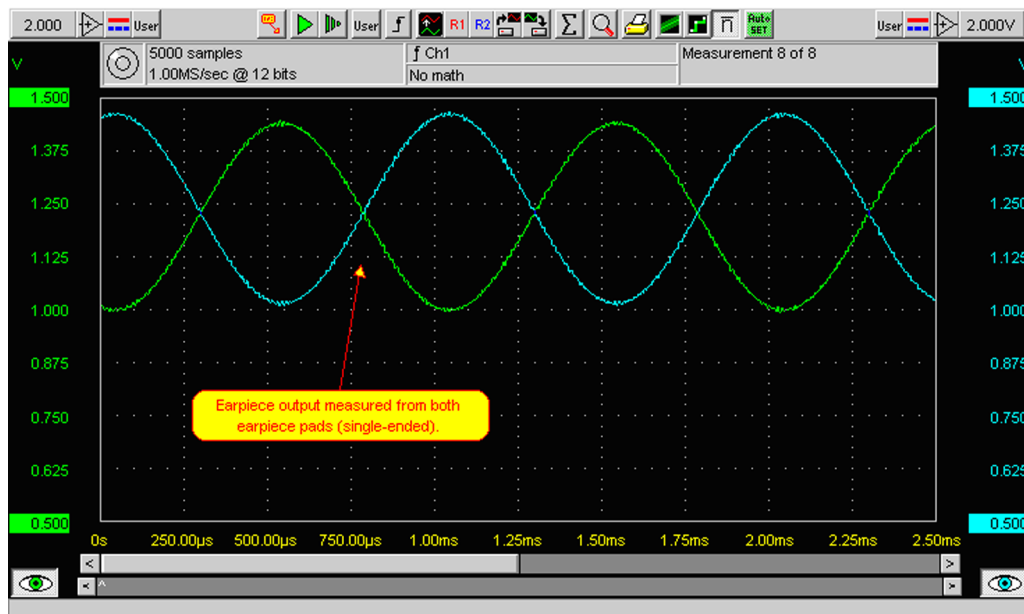


Figure 37 Single-ended output waveform of the Ext\_in\_HP\_out measurement when earpiece is connected.



Figure 38 Differential output waveform of the Ext\_in\_IHF\_out out loop measurement when speaker is connected.


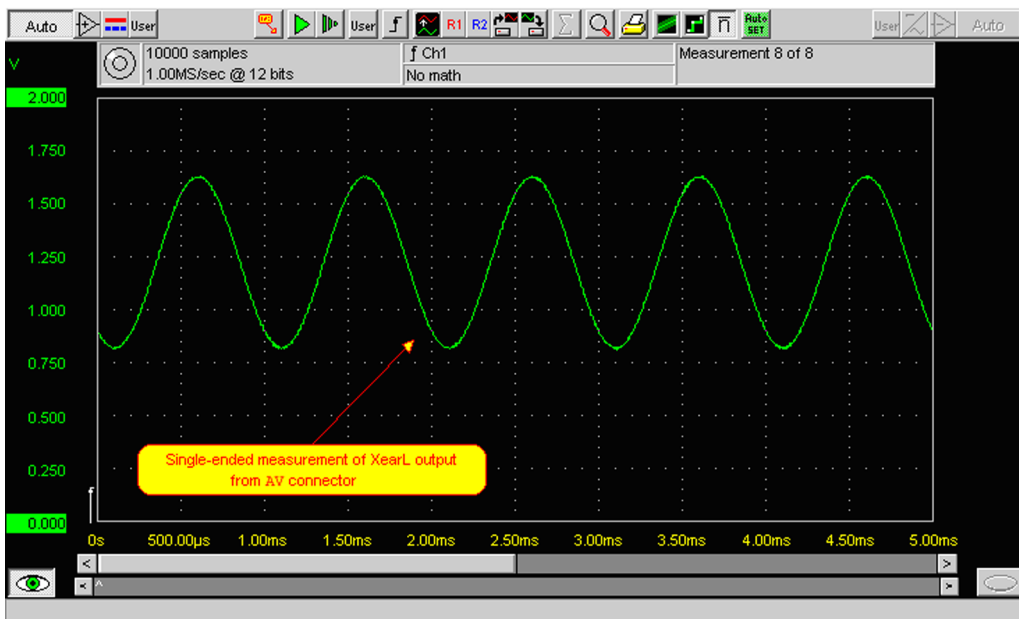


Figure 39 Single-ended output waveform of the HP\_in\_Ext\_out loop when microphone is connected.


## Earpiece troubleshooting

### Troubleshooting flow

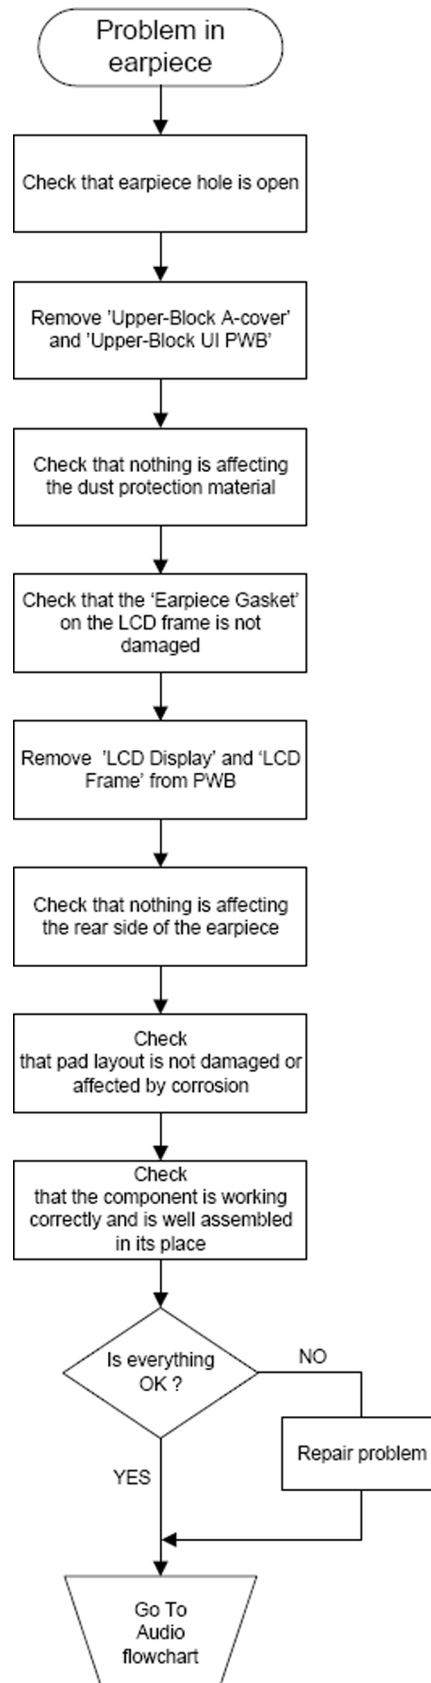

## Internal earpiece troubleshooting


### Troubleshooting flow

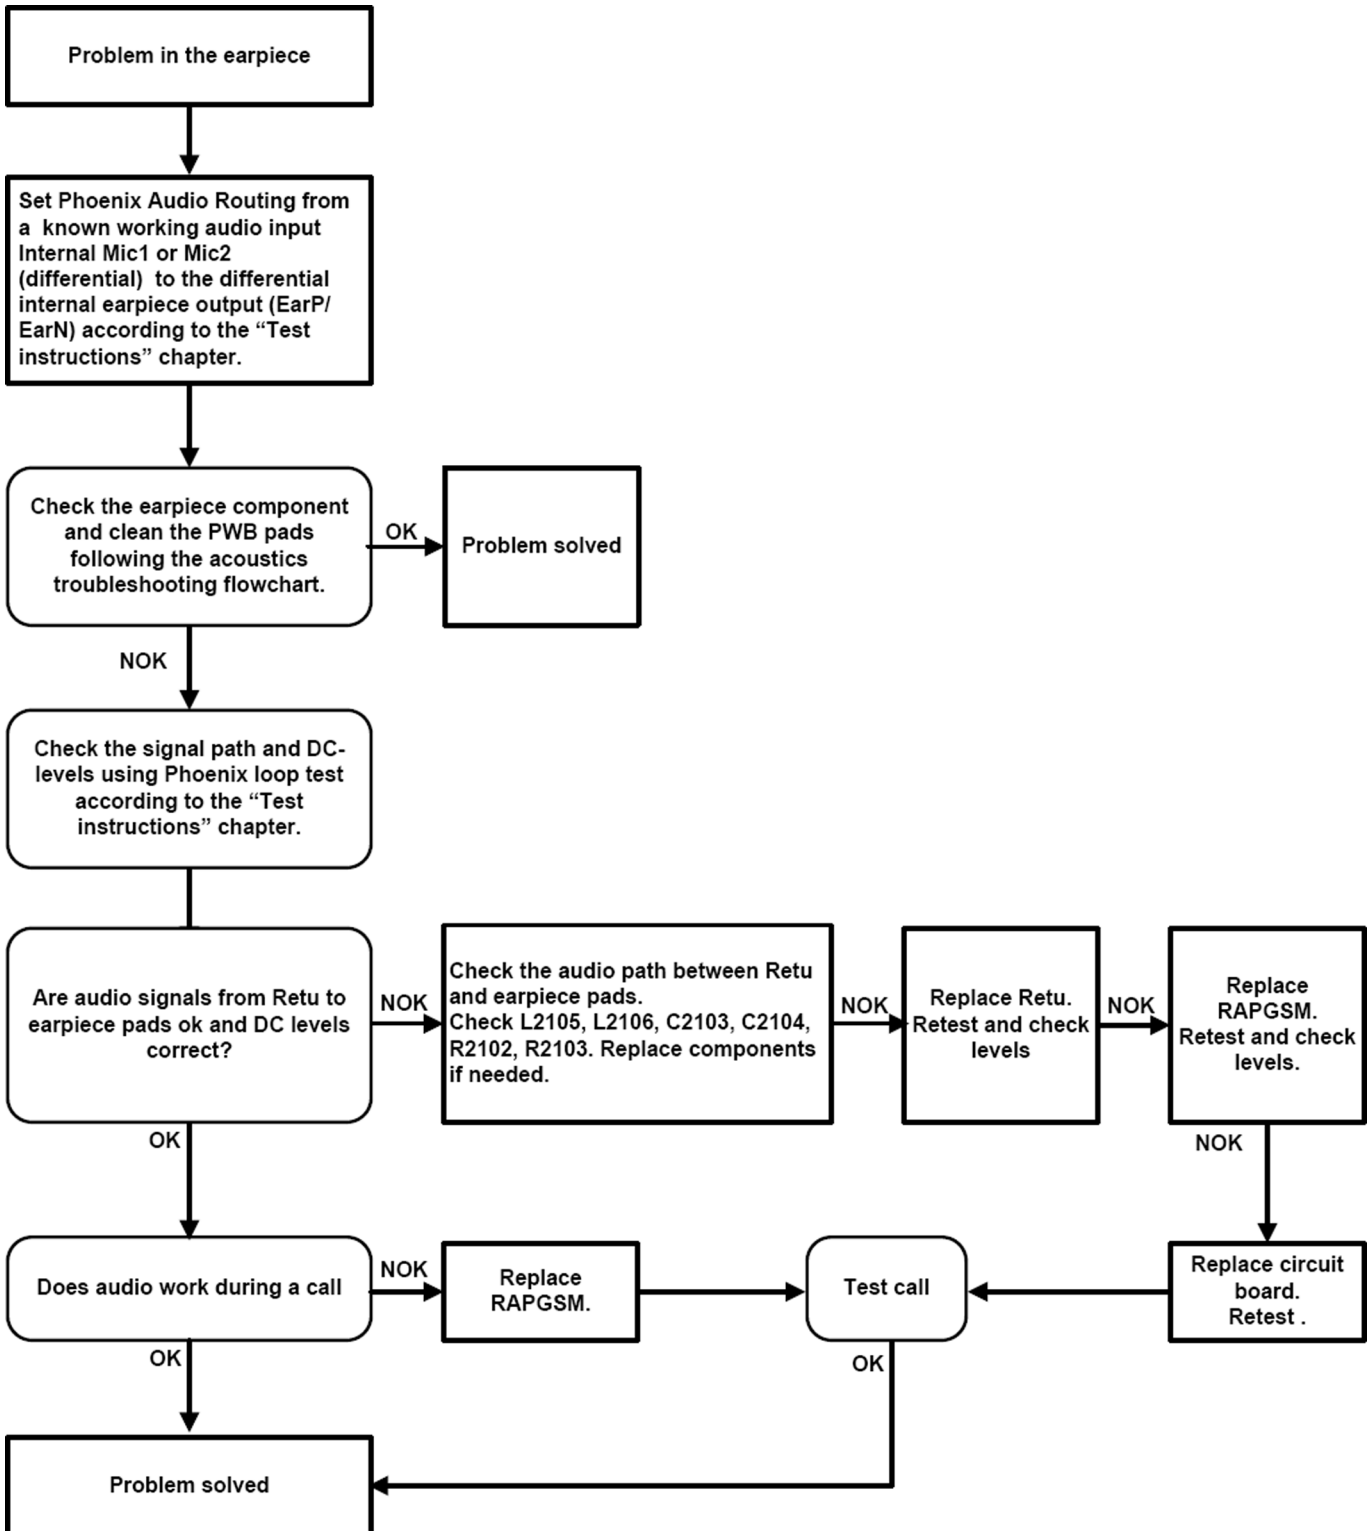




## External headset earpiece troubleshooting

### Troubleshooting flow

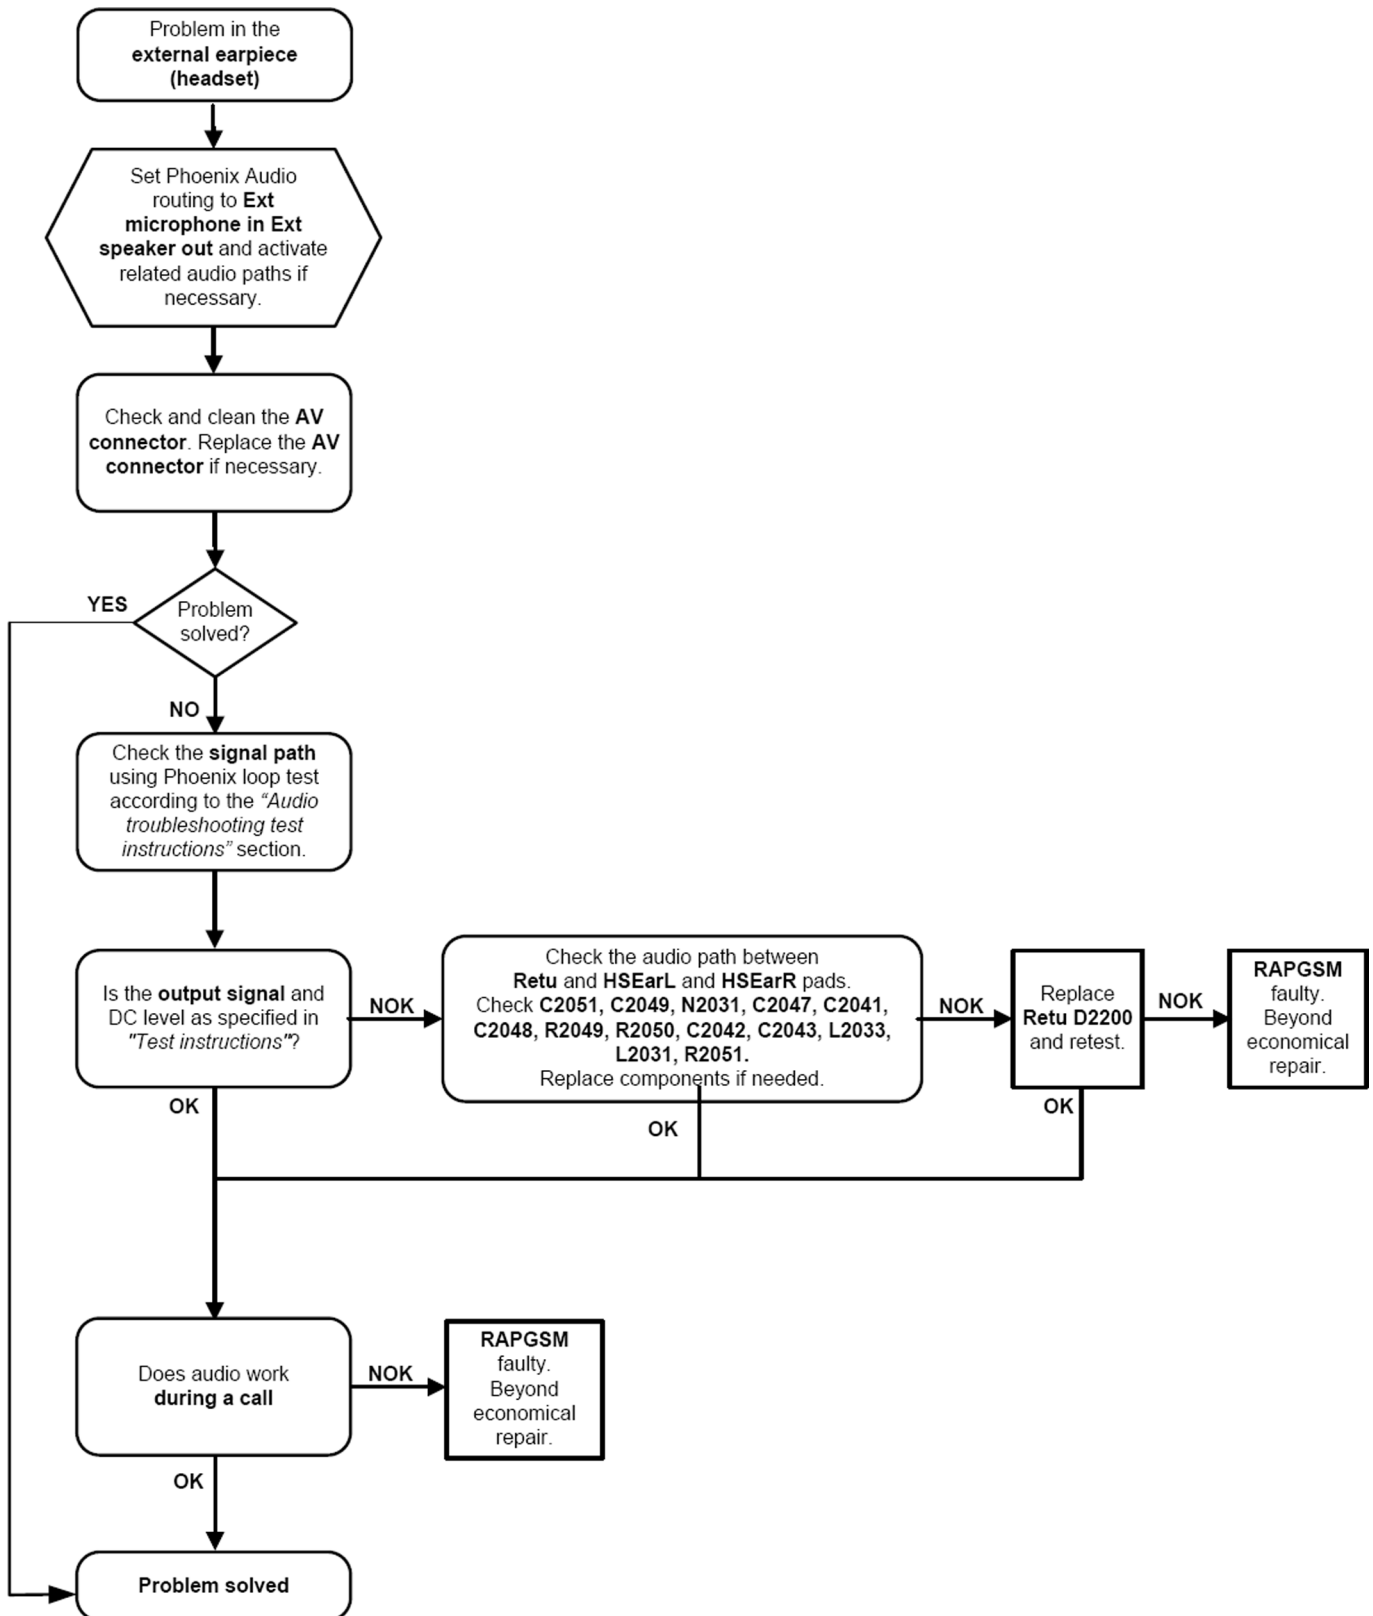


## IHF troubleshooting

### Troubleshooting flow

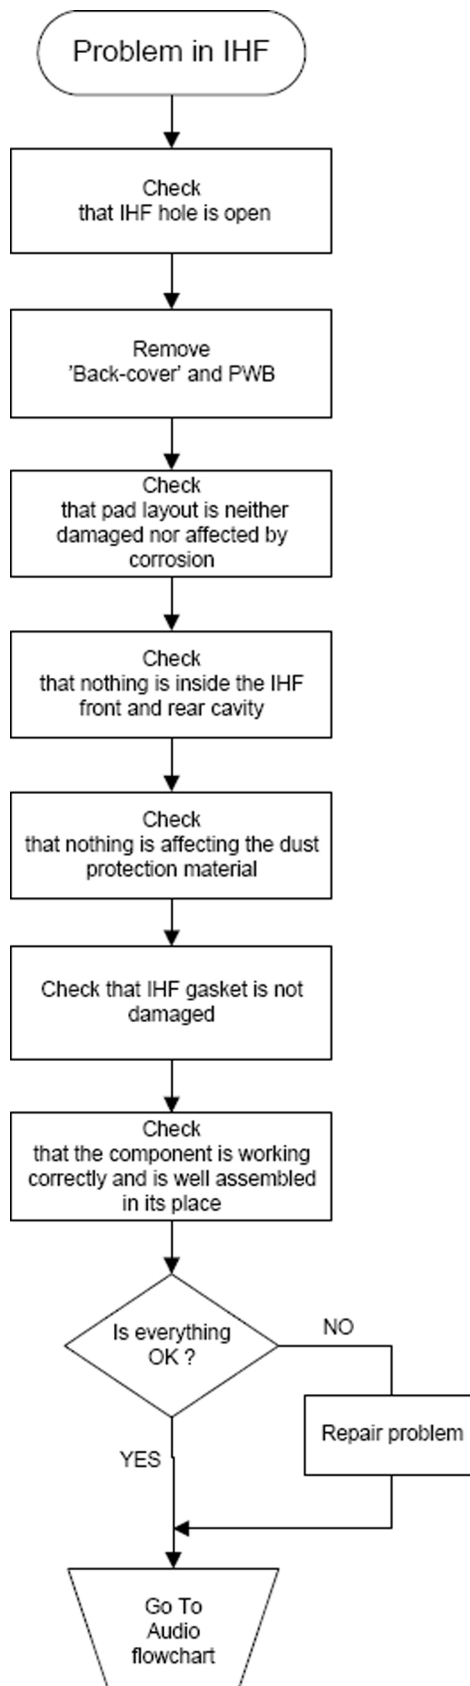


## IHF troubleshooting

### Troubleshooting flow

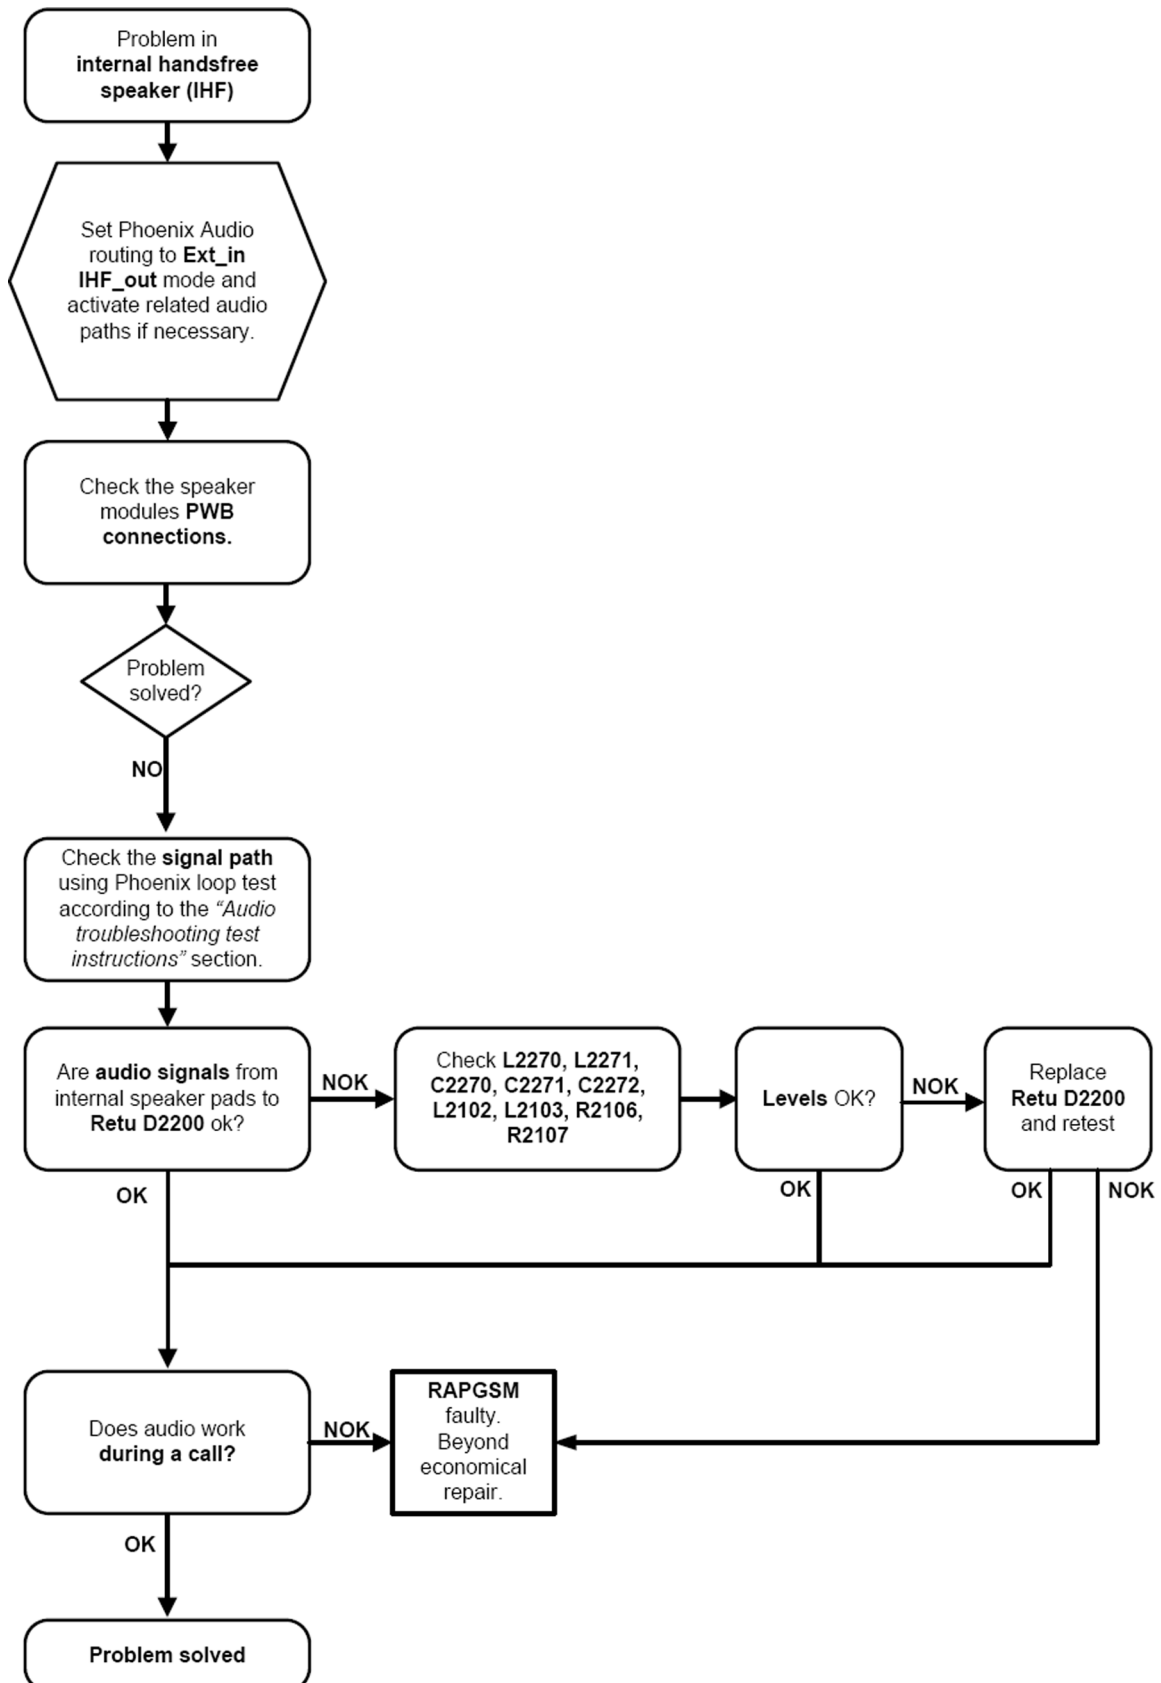


## Microphone troubleshooting

### Troubleshooting flow

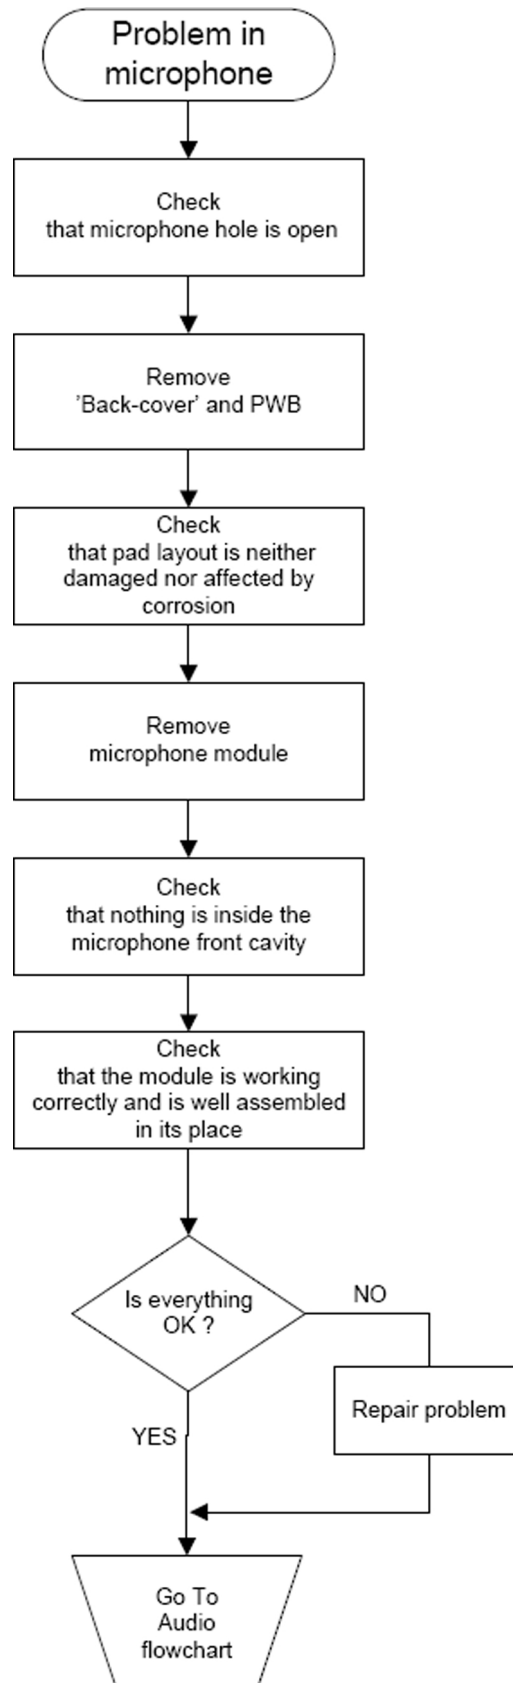


## Internal microphone troubleshooting

### Troubleshooting flow

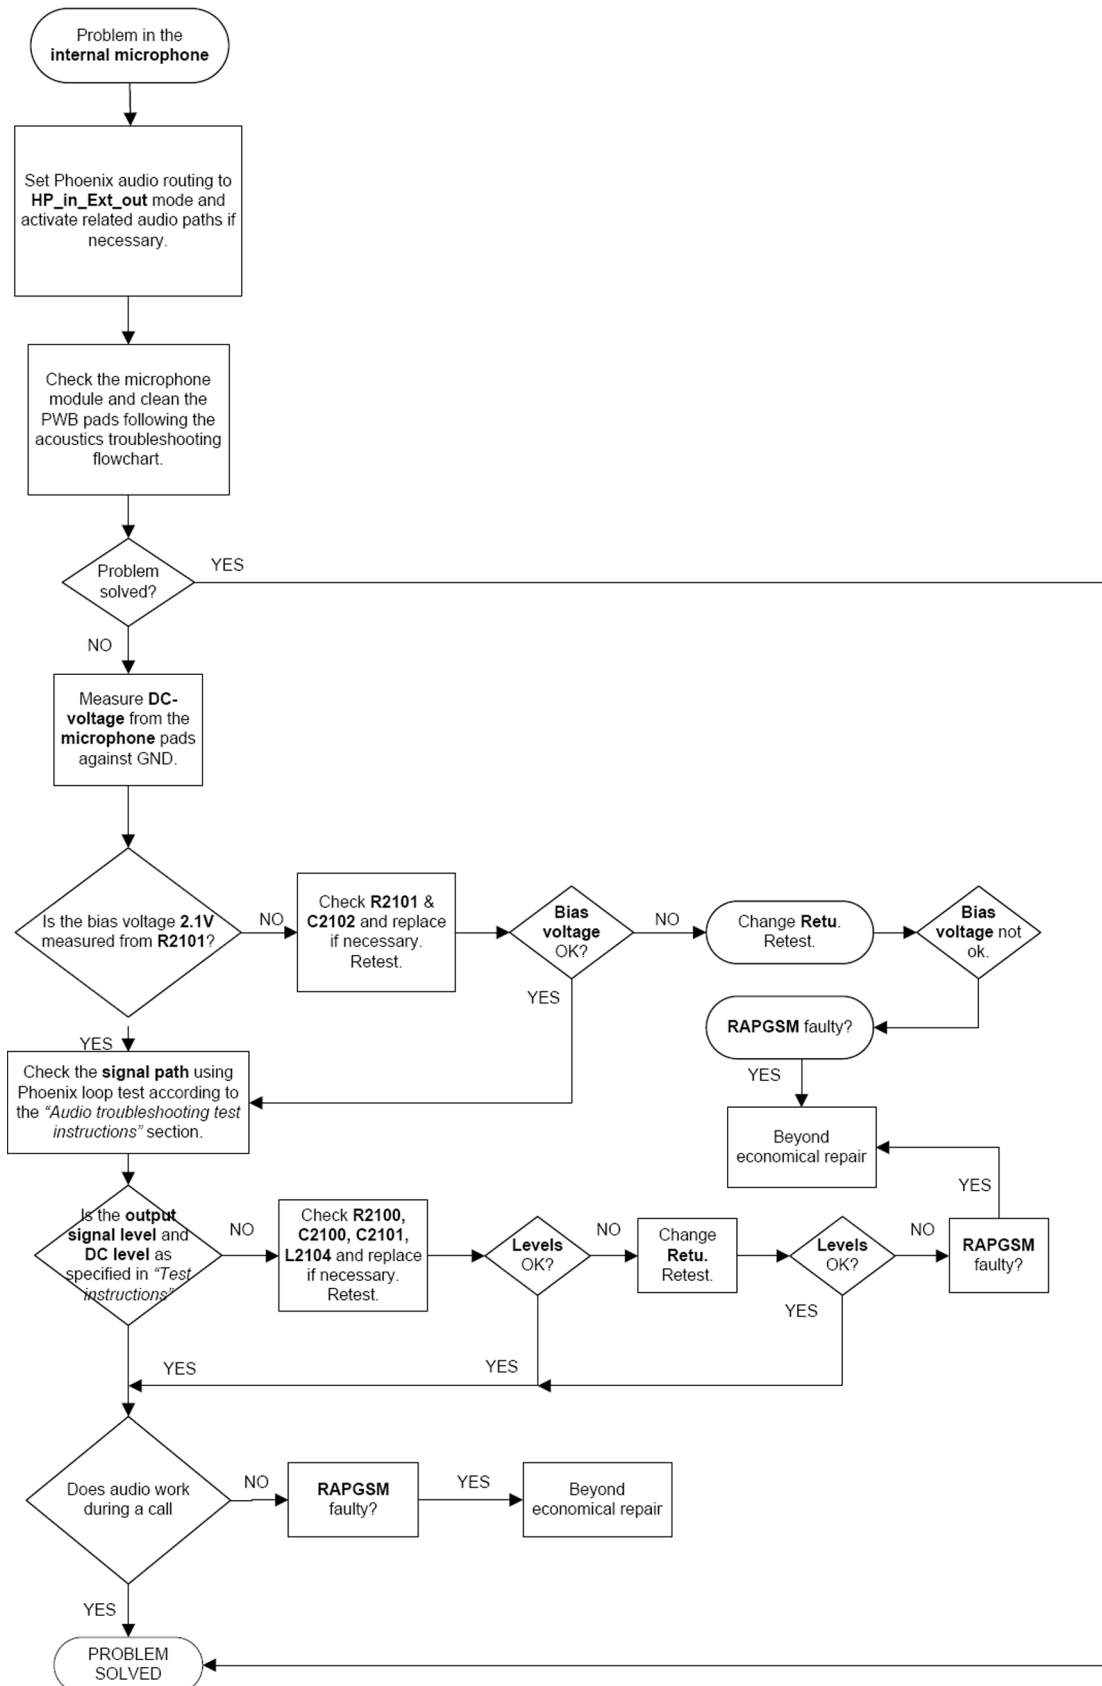

## External headset microphone troubleshooting

### Troubleshooting flow

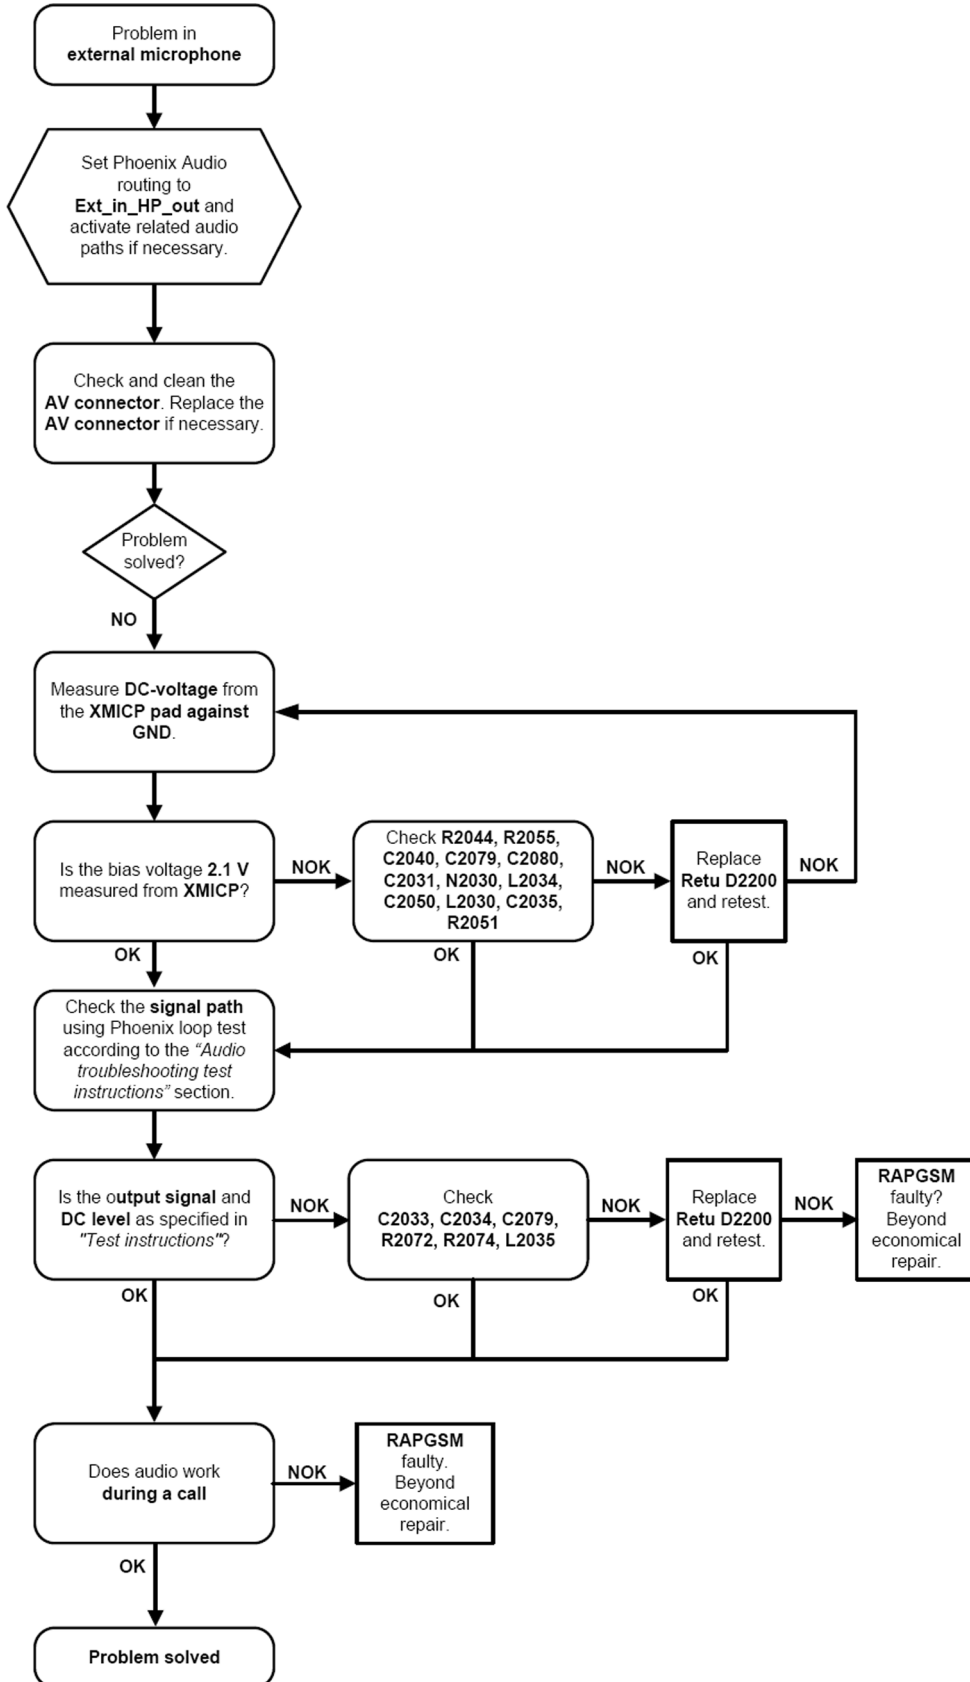

## ■ Connections troubleshooting

### Bluetooth troubleshooting

#### *Introduction to Bluetooth troubleshooting*

There are two main Bluetooth (BT) problems that can occur:

| Problem  | Description  |
|--|--|
| Detachment of the BT antenna.  | This would most likely happen if the device has been dropped repeatedly to the ground. It could cause the BT antenna to become loose or partially detached from the PWB. |
| A malfunction in the BT ASIC, BB ASICs or the phone's BT SMD components. | This is unpredictable and could have many causes i.e. SW or HW related.  |

The main issue is to find out if the problem is related to the BT antenna or related to the BT system or the phone's BB and then replace/fix the faulty component. For location of the antenna, please refer to the exploded view in the Parts and layouts section.

#### *Bluetooth settings for Phoenix*

### Steps

1. Start *Phoenix* service software.
2. From the **File** menu, choose **Open Product**, and then choose the correct type designator from the **Product** list.
3. Place the phone to a flash adapter in the local mode.
4. Choose **Testing**→**Bluetooth LOCALS**.
5. Locate JBT-9's serial number (12 digits) found in the type label on the back of JBT-9.  
In addition to JBT-9, also SB-6, JBT-3 and JBT-6 Bluetooth test boxes can be used.
6. In the *Bluetooth LOCALS* window, write the 12-digit serial number on the **Counterpart BT Device Address** line.  
This needs to be done only once provided that JBT-9 is not changed.
7. Place the JBT-9 box near (within 10 cm) the BT antenna and click **Run BER Test**.

### Results

Bit Error Rate test result is displayed in the *Bit Error Rate (BER) Tests* pane in the *Bluetooth LOCALS* window.

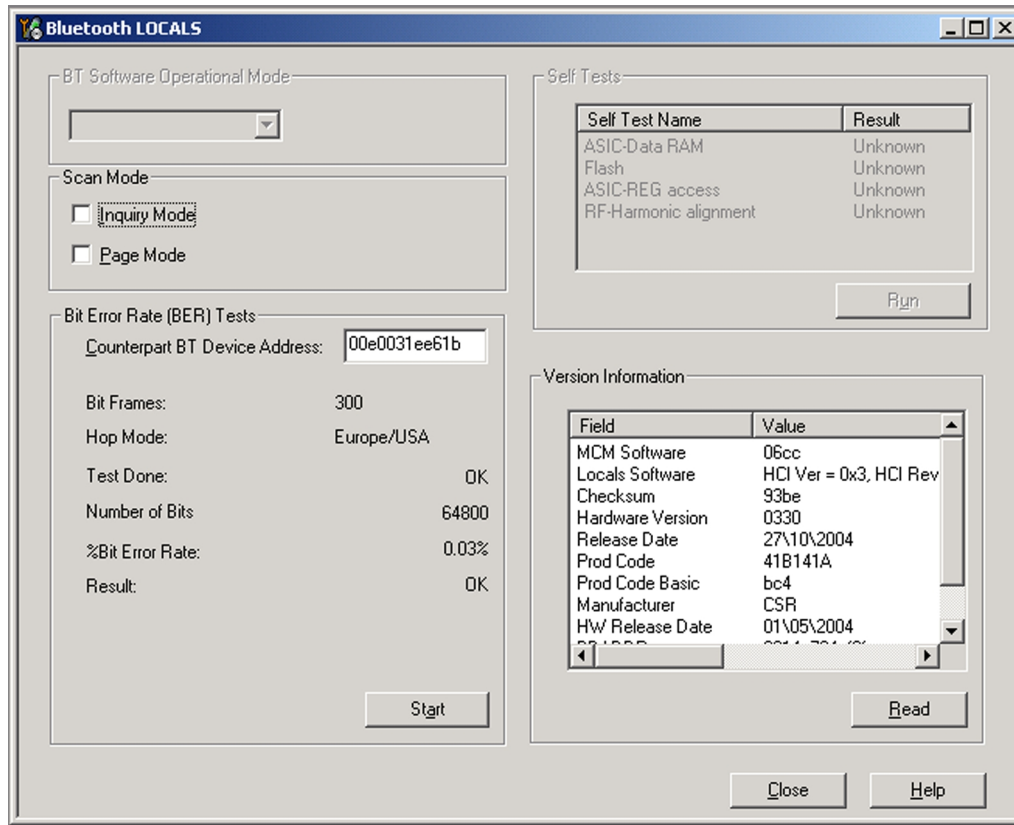


Figure 40 BER test result

### Bluetooth self tests in Phoenix

#### Steps

1. Start *Phoenix* service software.
2. Choose **File**→**Scan Product**.
3. Place the phone to a flash adapter.
4. From the **Mode** drop-down menu, set mode to **Local**.
5. Choose **Testing**→**Self Tests**.
6. In the *Self Tests* window check the following Bluetooth related tests:
  - **ST\_LPRF\_IF\_TEST**
  - **ST\_LPRF\_AUDIO\_LINES\_TEST**
  - **ST\_BT\_WAKEUP\_TEST**



7. To run the tests, click **Start**.

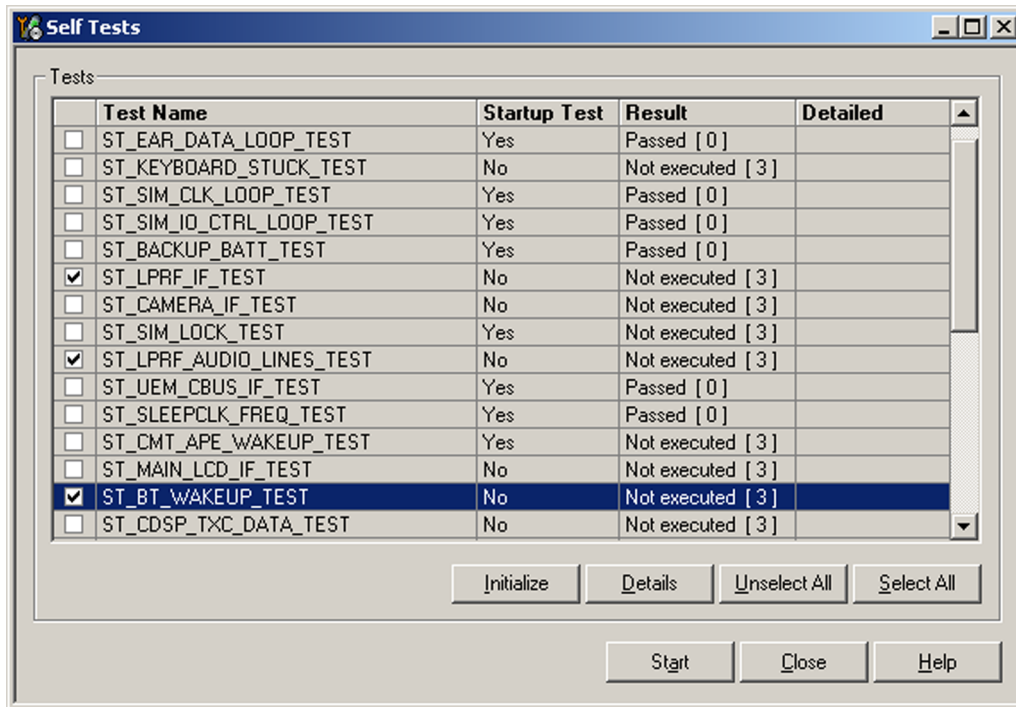



Figure 41 Bluetooth self tests in *Phoenix*

### ***Bluetooth BER failure troubleshooting***


#### **Context**

Basic encoding rules, BER, is a self-identifying and self-delimiting encoding scheme, which means that each data value can be identified, extracted and decoded individually.

### Part 1: Bluetooth self test passed but BER test failed

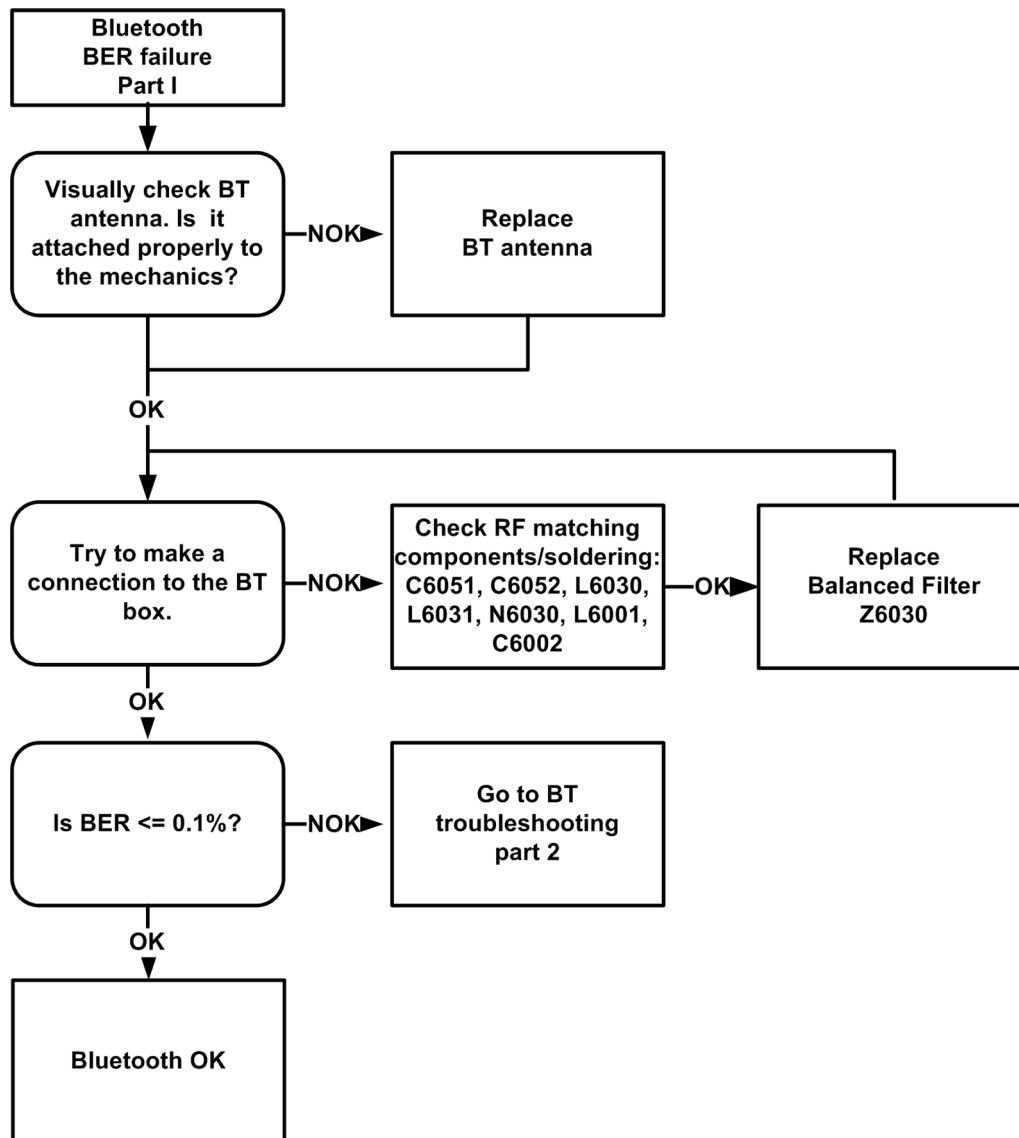


## Part 2: Bluetooth self test failed

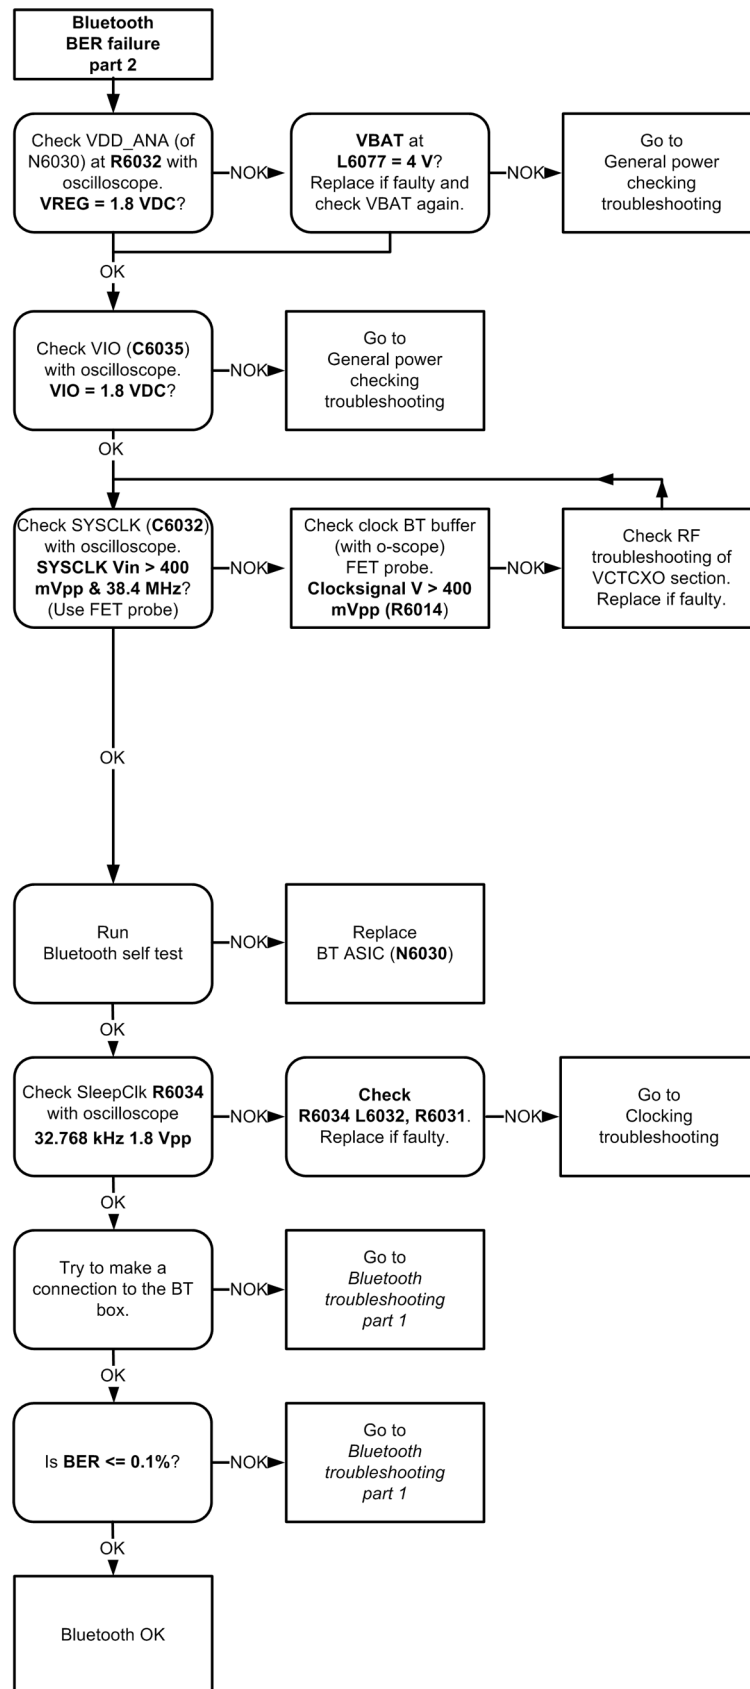



## Bluetooth audio and UI activation troubleshooting

### Troubleshooting flow

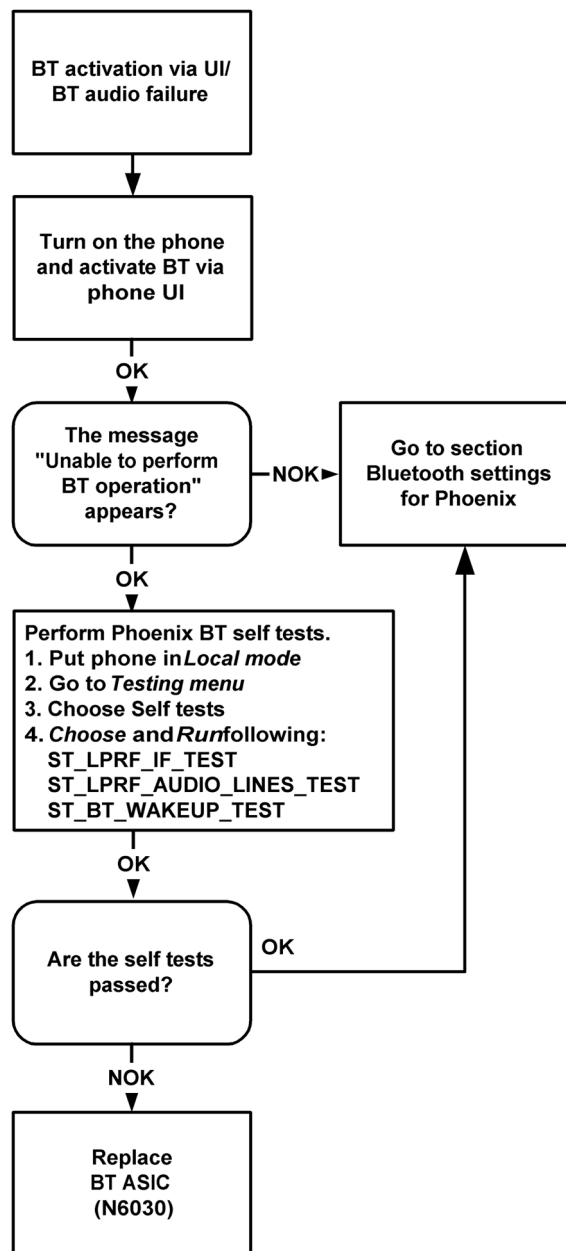

## USB interface troubleshooting

### Troubleshooting flow

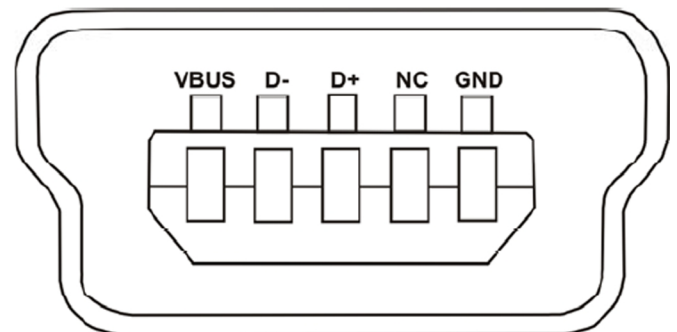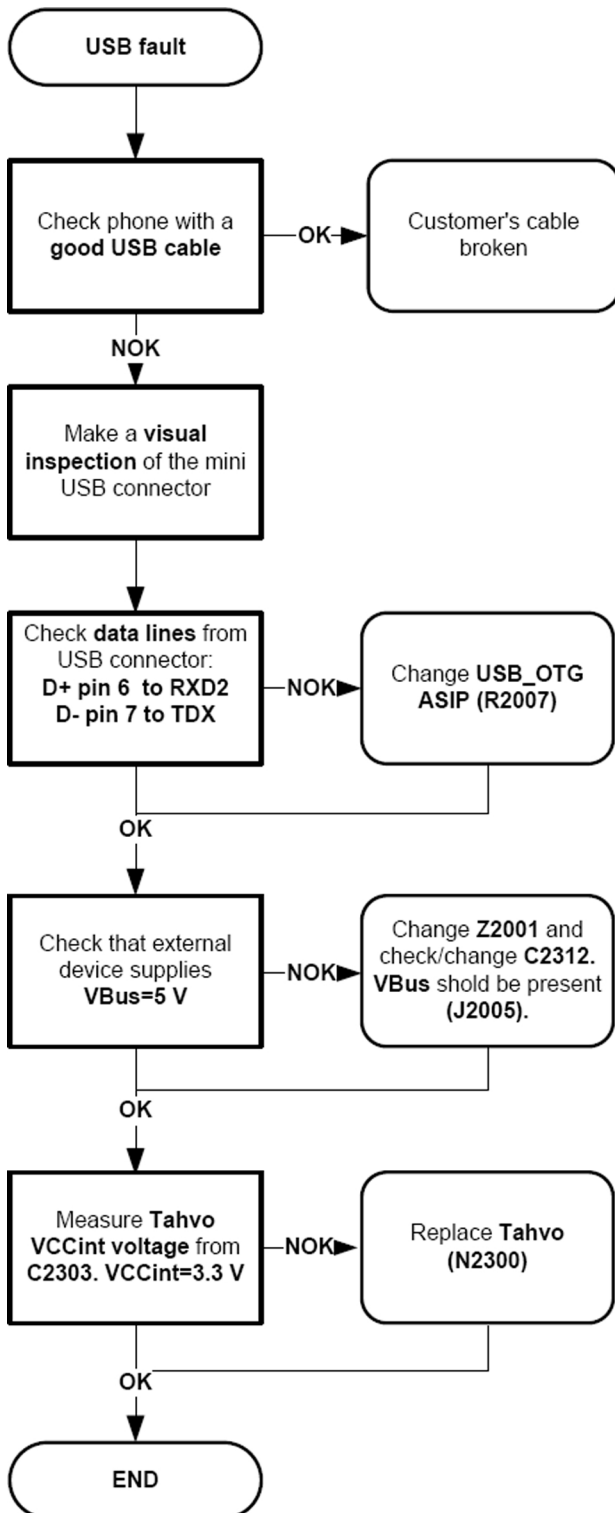

## ■ Baseband manual tuning guide

### Certificate restoring for BB5 products

#### Context

This procedure is performed when the device certificate is corrupted for some reason.

All tunings (RF & Baseband, UI) must be done after performing the certificate restoring procedure.

The procedure for certificate restoring is the following:

- Flash the phone with the latest available software using FPS-8 or FPS-10.
- Create a request file.
- Send the file to Nokia by e-mail. Use the following addresses depending on your location:
  - APAC: sydney.service@nokia.com
  - CHINA: repair.ams@nokia.com
  - E&A: salo.repair@nokia.com
  - AMERICAS: fls1.usa@nokia.com
- When you receive a reply from Nokia, carry out certificate restoring.
- Tune the phone completely.
  - Note:** SX-4 smart card is needed.
- If the phone resets after certificate restoring, reflash the phone again.


Required equipment and setup:

- *Phoenix* service software v 2004.39.7.70 or newer.
- The latest phone model specific *Phoenix* data package.
- PKD-1 dongle
- SX-4 smart card (Enables BB5 testing and tuning features)
- External smart card reader
  - Note:** The smart card reader is only needed when FPS-8 is used. FPS-10 has an integrated smart card reader.
- Activated FPS-8 flash prommer **OR** FPS-10 flash prommer
- Flash update package 03.18.004 or newer for FPS-8 or FPS-10 flash prommers
- CU-4 control unit
- USB cable from PC USB Port to CU-4 control unit
- Phone model specific adapter for CU-4 control unit
- PCS-1 cable to power CU-4 from external power supply
- XCS-4 modular cable between flash prommer and CU-4
  - Note:** CU-4 must be supplied with +12 V from an external power supply in all steps of certificate restoring.

#### Steps


1. Program the phone software.
  - i Start *Phoenix* and login. Make sure the connection has been managed correctly for FPS-8 or FPS-10.
  - ii Update the phone MCU software to the latest available version.
    - If the new flash is empty and the phone cannot communicate with *Phoenix*, reflash the phone.

- iii Choose the product manually from **File**→**Open Product** , and click **OK**.  
 Wait for the phone type designator (e.g. "RM-1" ) to be displayed in the status bar.
- iv Go to **Flashing**→**SW Update** and wait until *Phoenix* reads the product data as shown in the following picture.

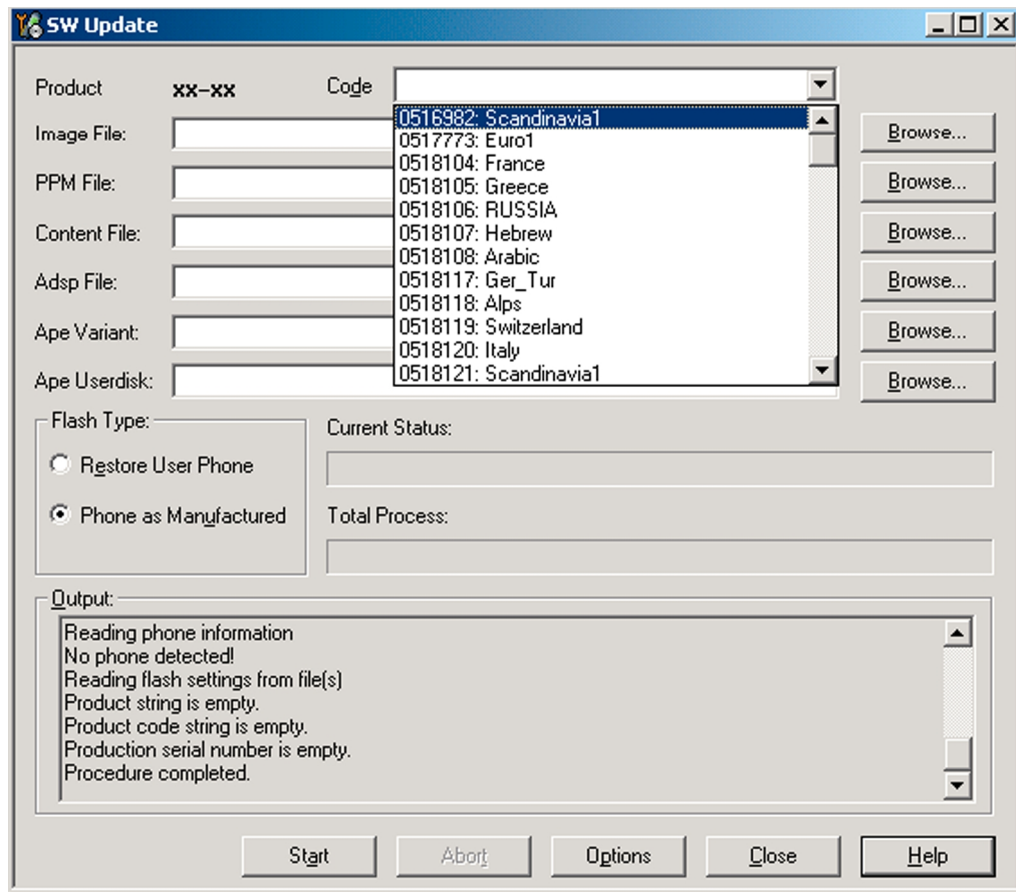

|                   |   |
|-------------------|---|
| <b>Product</b>    | is automatically set according to the phone support module which was opened manually, but the flash files cannot be found because the correct data cannot be read from the phone automatically. |
| <b>Code</b>       | must be chosen manually, it determines the correct flash files to be used. Please choose the correct product code (can be seen in the phone type label) from the dropdown list.                 |
| <b>Flash Type</b> | must be set to <b>Phone as Manufactured</b> .   |

- v To continue, click **Start**.  
 Progress bars and messages on the screen show actions during phone programming, please wait.

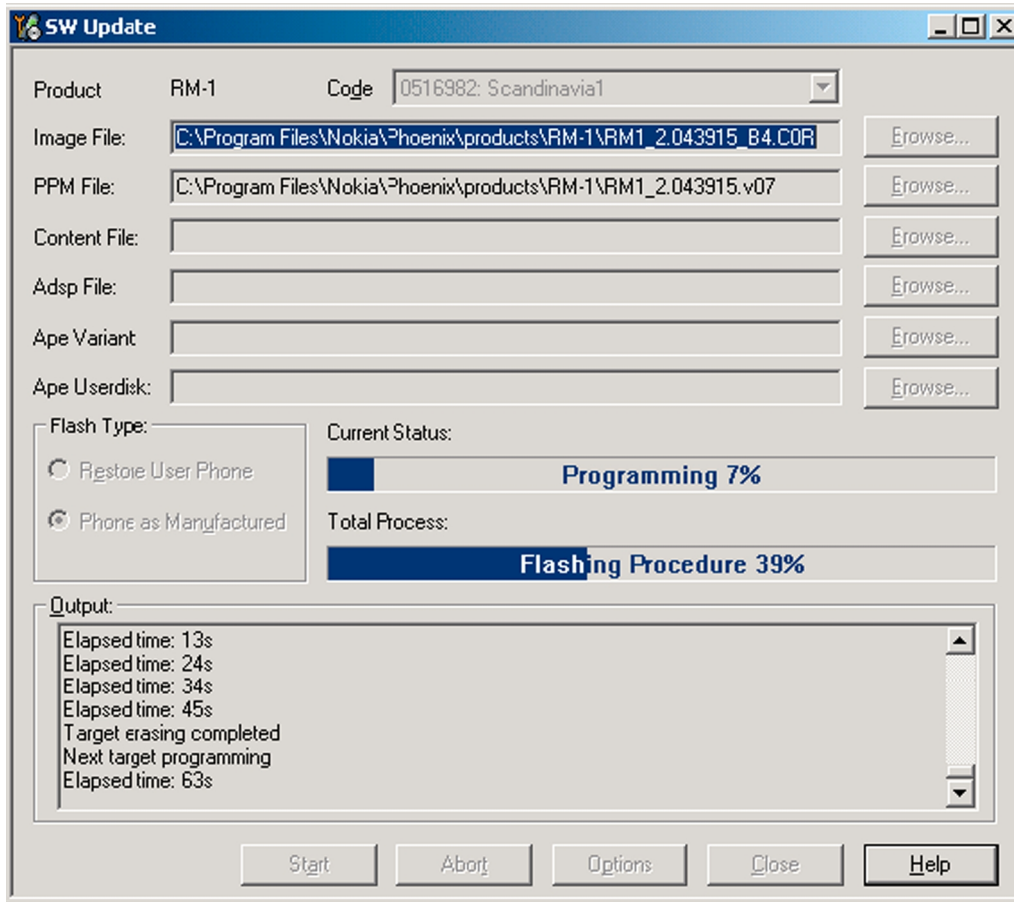

Programming is completed when *Flashing Completed* message is displayed.


The product type designator and MCU SW version are displayed in the status bar.

vi Close the *SW Update* window and then choose **File**→**Close Product** .

2. Create a *Request* file.


For this procedure, you must supply +12 V to CU-4 from an external power supply.

- i To connect the phone with *Phoenix*, choose **File**→**Scan Product** .
- ii Choose **Tools**→**Certificate Restore** .
- iii To choose a location for the request file, click **Browse**.

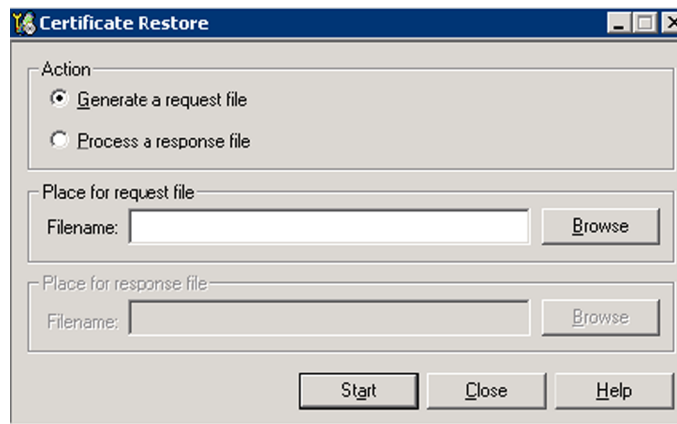




- iv Name the file so that you can easily identify it, and click **Open**.

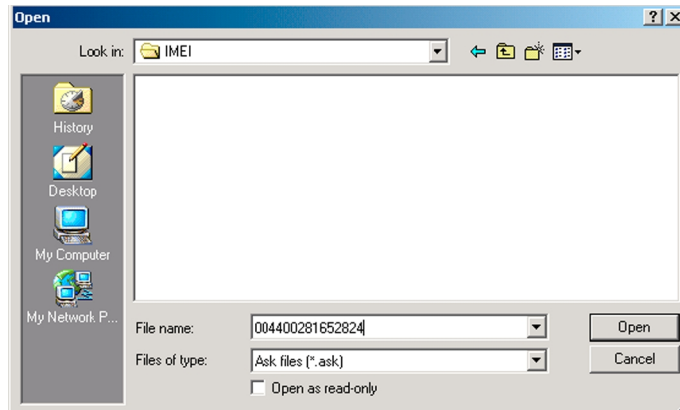


The name of the file and its location are shown.

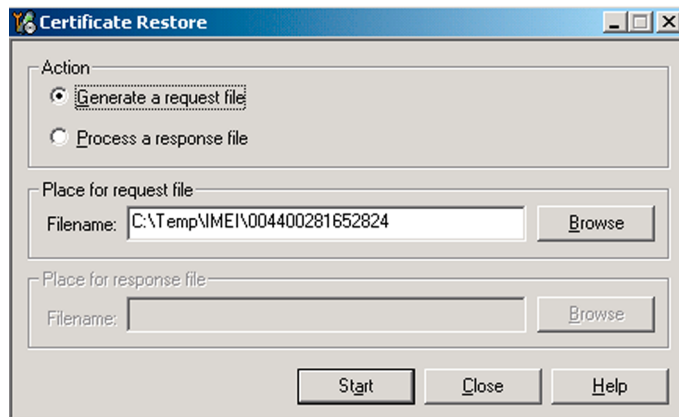


- v To create the *Request* file, click **Start**.
  - vi When the file for certificate restore has been created, send it to Nokia as an e-mail attachment.
3. Restore certificate.
- For this procedure, you must supply +12 V to CU-4 from an external power supply.
- i Save the reply file sent by Nokia to your computer.
  - ii Start *Phoenix* service software.
  - iii Choose **File**→**Scan Product**.

- iv From the **Tools** menu, choose **Certificate Restore** and select **Process a response file** in the *Action* pane.

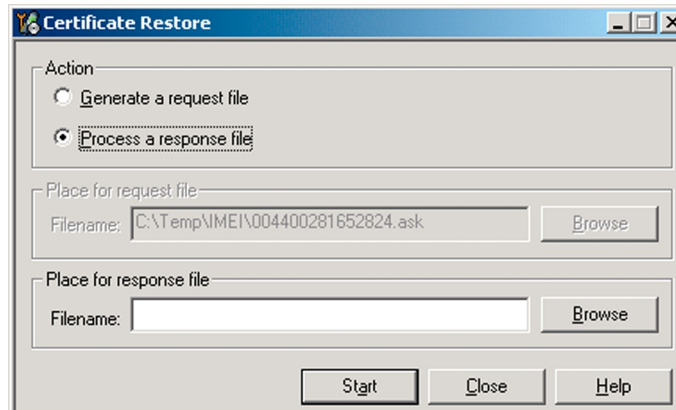


- v To choose the location where response file is saved, click **Browse**.
- vi Click **Open**.

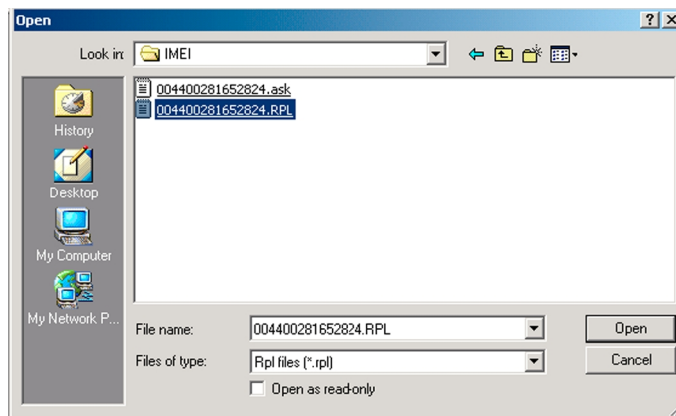

The name of the file and the path where it is located are shown.

- vii To write the file to phone, click **Start**.

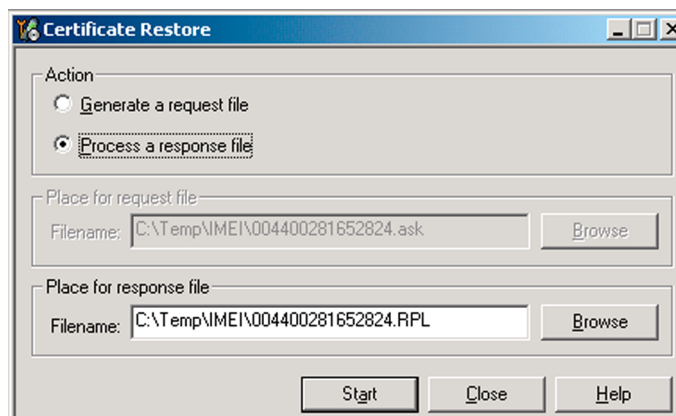

## Next actions

After a successful rewrite, you must retune the phone completely by using *Phoenix* tuning functions.

**Important:** Perform all tunings: RF, BB, and UI.

## Energy management calibration

### Prerequisites

Energy Management (EM) calibration is performed to calibrate the setting (gain and offset) of AD converters in several channels (that is, **battery voltage**, **BSI**, **battery current**) to get an accurate AD conversion result.

Hardware setup:

- An external power supply is needed.
- Supply 12V DC from an external power supply to CU-4 to power up the phone.
- The phone must be connected to a CU-4 control unit with a product-specific flash adapter.

### Steps

1. Place the phone to the docking station adapter (CU-4 is connected to the adapter).
2. Start *Phoenix* service software.
3. Choose **File**→ **Scan Product**.
4. Choose **Tuning**→**Energy Management Calibration**.
5. To show the current values in the phone memory, click **Read**, and check that communication between the phone and CU-4 works.
6. Check that the **CU-4 used** check box is checked.
7. Select the item(s) to be calibrated.

**Note:** ADC calibration has to be performed before other item(s). However, if all calibrations are selected at the same time, there is no need to perform the ADC calibration first.

8. Click **Calibrate**.

The calibration of the selected item(s) is carried out automatically.

The candidates for the new calibration values are shown in the *Calculated values* column. If the new calibration values seem to be acceptable (please refer to the following "Calibration value limits" table), click **Write** to store the new calibration values to the phone permanent memory.

Table 10 Calibration value limits

| Parameter        | Min.  | Max.  |
|------------------|-------|-------|
| ADC Offset       | -20   | 20    |
| ADC Gain         | 12000 | 14000 |
| BSI Gain         | 1100  | 1300  |
| VBAT Offset      | 2400  | 2650  |
| VBAT Gain        | 19000 | 23000 |
| VCHAR Gain       | N/A   | N/A   |
| IBAT (ICal) Gain | 7750  | 12250 |

9. Click **Read**, and confirm that the new calibration values are stored in the phone memory correctly. If the values are not stored to the phone memory, click **Write** and/or repeat the procedure again.
10. To end the procedure, close the *Energy Management Calibration* window.

(This page left intentionally blank.)

## **7 — RF Troubleshooting and Manual Tuning Guide**

(This page left intentionally blank.)

## Table of Contents

|   |      |
|---|------|
| Introduction to RF troubleshooting .....                                    | 7-5  |
| RF key components .....   | 7-6  |
| Receiver troubleshooting .....  | 7-6  |
| Introduction to RX troubleshooting .....                                    | 7-6  |
| General instructions for RX troubleshooting .....                           | 7-7  |
| Receiver (RX) troubleshooting .....   | 7-8  |
| GSM Rx chain activation for manual measurements / GSM RSSI measurement..... | 7-11 |
| Transmitter troubleshooting .....   | 7-11 |
| General instructions for TX troubleshooting .....                           | 7-11 |
| Transceiver (TX) troubleshooting .....                                      | 7-14 |
| Checking antenna functionality .....  | 7-15 |
| Synthesizer troubleshooting .....   | 7-17 |
| RF tunings .....  | 7-18 |
| Introduction to RF tunings .....  | 7-18 |
| Auto tuning for BB5.0 .....   | 7-18 |
| System mode independent manual tunings .....                                | 7-19 |
| RF channel filter calibration .....   | 7-19 |
| PA (power amplifier) detection .....  | 7-20 |
| GSM receiver tunings.....   | 7-20 |
| Rx calibration (GSM) .....  | 7-20 |
| Rx band filter response compensation (GSM).....                             | 7-23 |
| GSM transmitter tunings.....  | 7-26 |
| Tx IQ tuning (GSM).....   | 7-26 |
| Tx power level tuning (GSM) .....   | 7-28 |

### List of Tables

|  |      |
|--|------|
| Table 11 Rf channel filter calibration tuning limits ..... | 7-19 |
| Table 12 RF tuning limits in Rx calibration.....           | 7-22 |

### List of Figures

|   |      |
|---|------|
| Figure 42 RF key components, bottom side main board .....             | 7-6  |
| Figure 43 RF Controls window .....                                    | 7-8  |
| Figure 44 RSSI Reading window .....                                   | 7-11 |
| Figure 45 RF Controls window .....                                    | 7-13 |
| Figure 46 Location of the GSM and BT antenna C-clips on the PWB.....  | 7-15 |
| Figure 47 GSM and BT antenna contact pads on the antenna module ..... | 7-16 |
| Figure 48 Antenna C-clips on the PWB .....                            | 7-16 |
| Figure 49 Auto tuning concept with CMU200 .....                       | 7-18 |
| Figure 50 Rf channel filter calibration typical values .....          | 7-19 |

(This page left intentionally blank.)



## ■ Introduction to RF troubleshooting

On the following pages you will find a step-by-step troubleshooting procedure and reference measurements at the relevant signal points. For functional descriptions, please refer to the System module section.

### Notes on reference measurements

All measurements must be done using:

- spectrum analyser with a high-frequency high-impedance passive probe (LO-/reference frequencies and RF power levels)
- oscilloscope with a 10:1 probe (DC-voltages and low frequency signals)
  - Important:** All measurements with an RF coupler must be performed in an RF shielded environment, or where there are no transmissions on the same frequencies. This may disturb sensitive receiver measurements.

### Repairing this phone - important

The RF section of the phone is built around one RF ASIC. Before changing the RF ASIC, please make sure that supply voltages and serial communication coming from baseband to RF are OK.

Please note that the grounding of the FEM module is directly below the FEM module. Therefore, it is difficult to check or change the module.

Most RF semiconductors are static discharge sensitive! ESD protection must be taken care of during repair (ground straps and ESD soldering irons). The RF ASIC and FEM are moisture sensitive, so parts must be pre-baked prior to soldering.

In addition to key components, there are lot of discrete components (resistors, inductors and capacitors) which troubleshooting is done mainly by checking if the soldering of the component is done properly.

Capacitor can be checked for shorts and resistors for value by means of an ohmmeter, but be aware in-circuit measurements should be evaluated carefully.

Keep in mind that all measured voltages or RF levels depicted in the service manual are rough figures. Especially RF levels vary because of different measuring equipment or different grounding of the probe used.

When using an RF probe, use a pair of metallic tweezers to connect the probe ground to the PWB ground as close to the measurement point as possible. If measurements are performed in a product specific module jig, then "GND" pads should be used for the probe ground.


### Supported bands

The following part of the service manual contains a description of all four GSM bands. It covers both variants, RM-217 and RM-222. Both variants support three GSM bands as follows:

- **RM-217:** GSM900, GSM1800, GSM1900
- **RM-222:** GSM850, GSM1800, GSM1900

Make sure to investigate only the bands, which the phone is made for.

■ **RF key components**

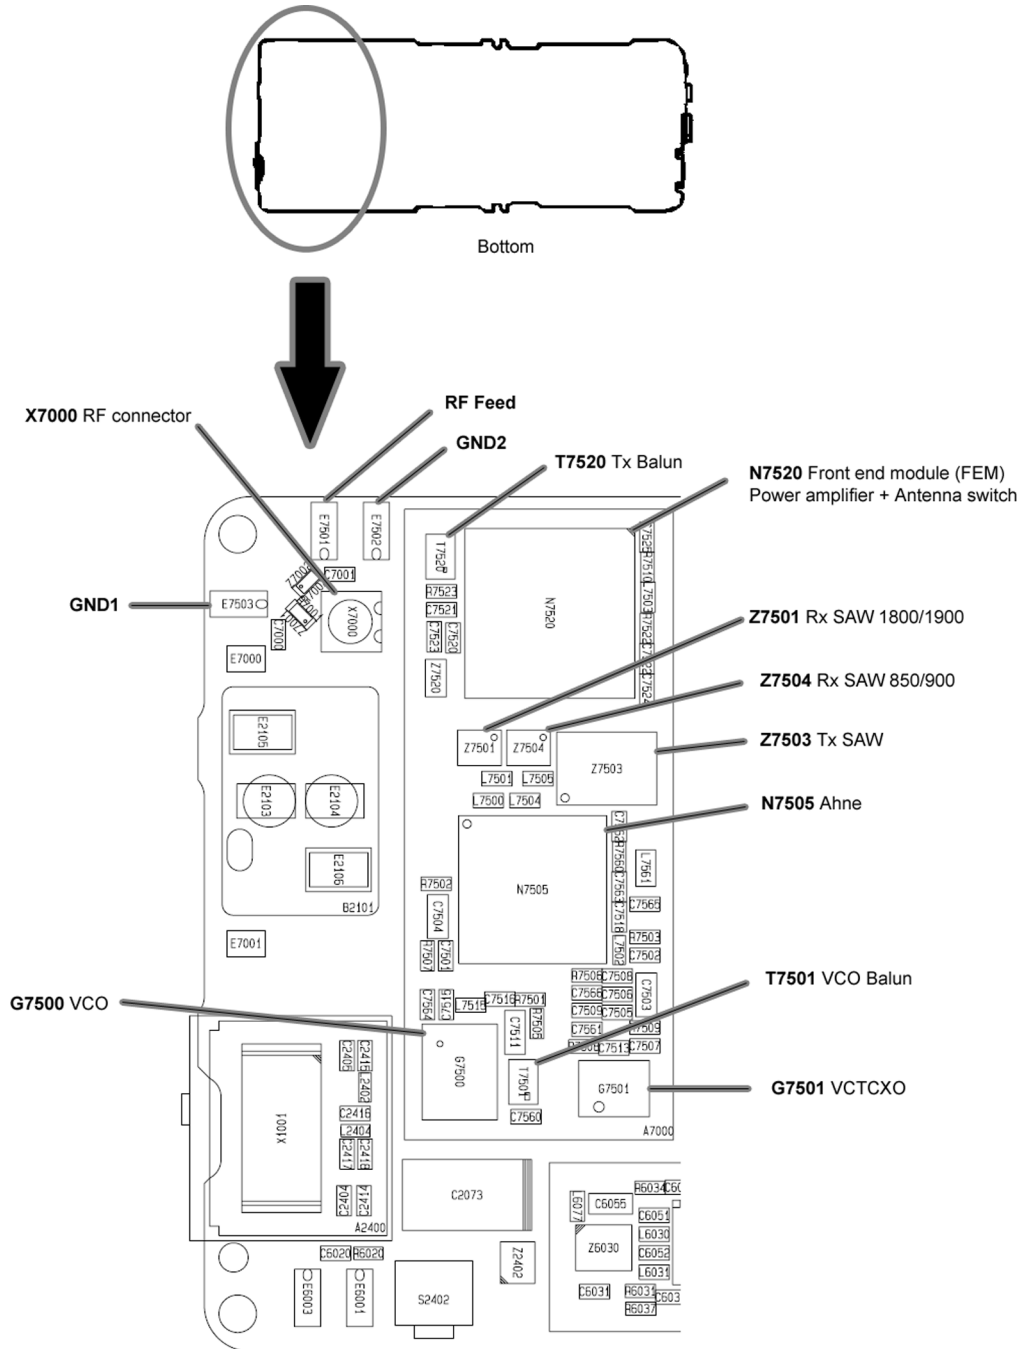

**Figure 42 RF key components, bottom side main board**

■ **Receiver troubleshooting**

**Introduction to RX troubleshooting**

Rx can be tested by making a phone call or in the local mode. For the local mode testing, use Phoenix service software.

The main Rx troubleshooting measurement is RSSI measurement. This test measures the signal strength of the received signal. I and Q branches can be measured separately.

In GSM, the input signal can be either a real GSM signal or a CW signal that is 67.771kHz up from the carrier frequency.

For service tool usage instructions, refer to section Service Tools and Service Concepts.

## General instructions for RX troubleshooting

### Steps

1. Connect a test jig to a computer with a DAU-9S cable or to a FPS-10 flash prommer with a modular cable (XCS-4).

Make sure that you have a PKD-1 dongle connected to the computer's parallel port.

2. Connect CU-4 with 12 V supply. The DC supply voltage is set to 3.7 V by default (in Phoenix).
3. Connect an RF cable between the RF connector of the module test jig (MJ-122) and measurement equipment or alternatively use a 50  $\Omega$  (at least 2 W) dummy load in the module test jig RF connector, otherwise the RF part may be damaged.

**Note:** Make sure that all connections are made to the correct RF connector.

4. Set Rx on.
  - i Set the phone module to the test jig and start *Phoenix service software*.
  - ii Initialize connection to the phone. (With the FPS-10 prommer use FPS10\_USB or FPS10\_TCP drivers, depending on connection type. When using DAU-9S select FBUS).
  - iii From the File menu, choose product: **File -> Choose Product -> xx-x\*** (\* = type designator of the phone, eg. RM-217/222), or press **Ctrl + R** to scan product.
  - iv From the toolbar, set operating mode to "Local".
5. EGSM850/900/1800/1900 troubleshooting
  - i From the Testing menu, activate the *RF Controls* window: **Testing -> GSM -> RF Controls**.



- ii In the *RF Controls* window:
  - Select band.
  - Set Active unit to "Rx" (Default).
  - Set Operation mode to "Burst" (Default).
  - Set Rx/Tx channel (see table below).
  - Apply a frequency (see table below) to the RF-connector.

**Note:** Remember to compensate for cable attenuation, specific for MJ-122. You will find the values in the Service tools section.

Apply a signal to the RF-connector (remember to compensate for cable attenuation). See values in the table below.

| Band    | Channel (RX and TX) | Input frequency (MHz) | Offset (kHz) | Power level (dBm) |
|---------|---------------------|-----------------------|--------------|-------------------|
| GSM850  | 190                 | 881.66771             | 67.710       | -90               |
| GSM900  | 37                  | 942.46771             | 67.710       | -90               |
| GSM1800 | 700                 | 1842.86771            | 67.710       | -90               |
| GSM1900 | 661                 | 1960.06771            | 67.710       | -90               |

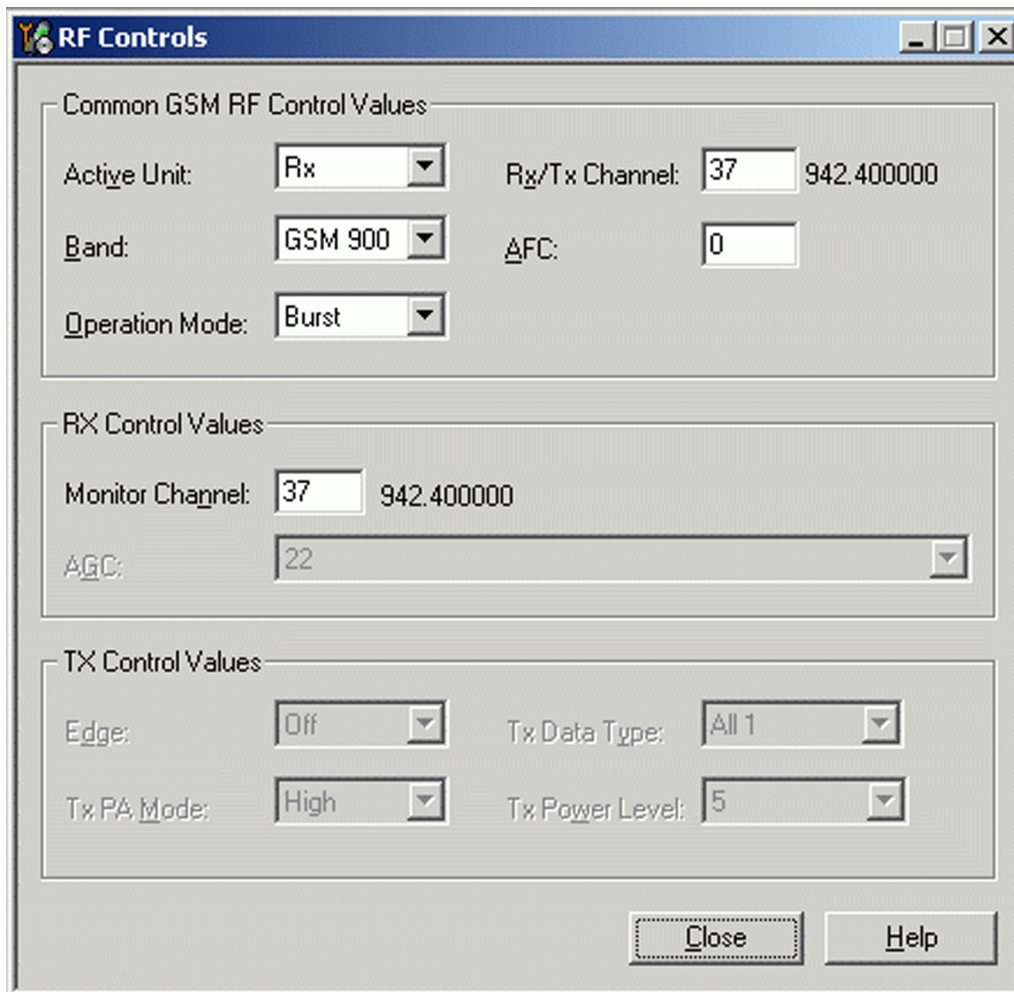


Figure 43 RF Controls window

## Receiver (RX) troubleshooting


### Context

Troubleshoot one band at a time. Start with GSM850 (RM-222) or GSM900 (RM-217), and end with GSM1900.

### Receiver troubleshooting

Apply a signal according to the table in [General instructions for RX troubleshooting \(page 7-7\)](#)


**GSM850 or GSM900**

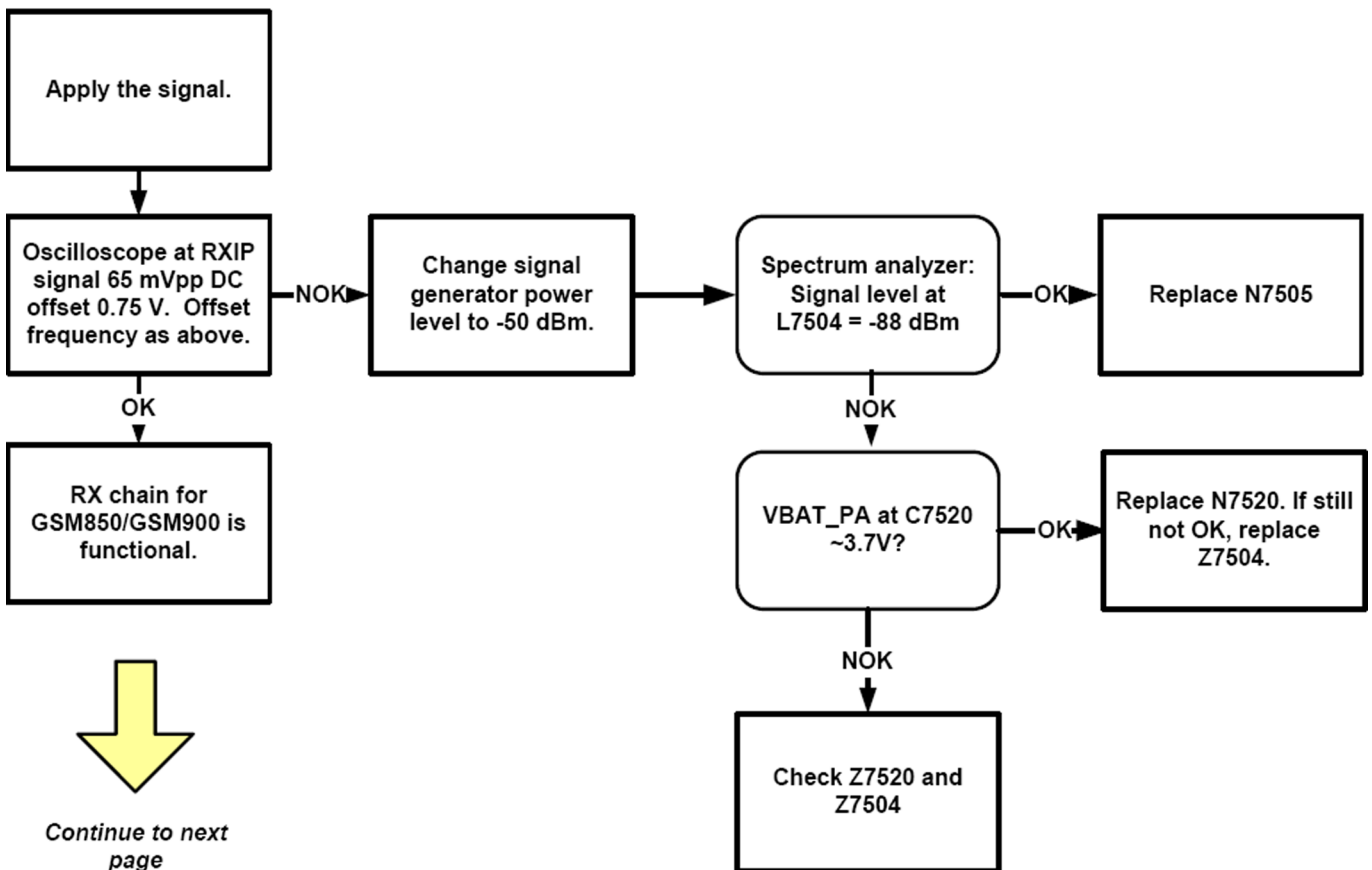


Continued from previous page



**GSM1800**

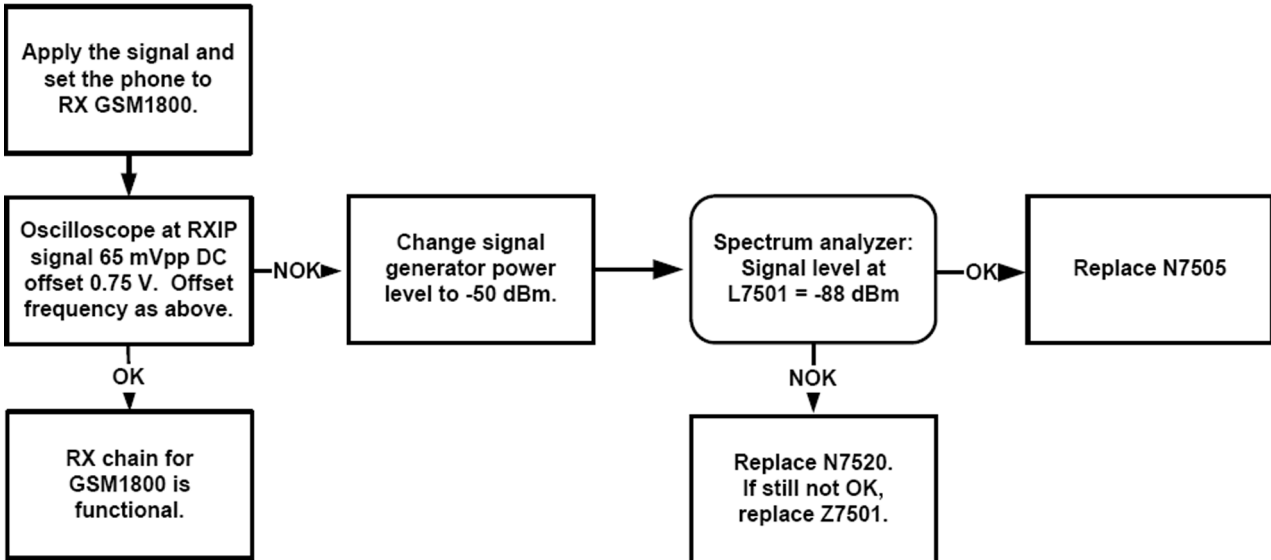

**GSM1900**

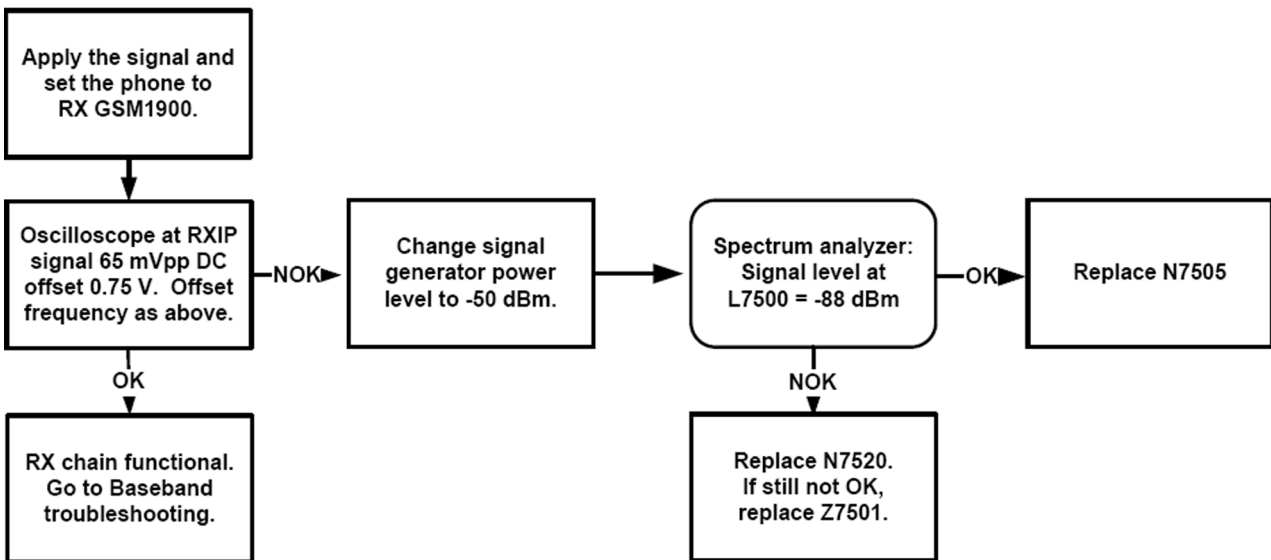

## GSM Rx chain activation for manual measurements / GSM RSSI measurement

### Context

RSSI signal measurement is the main Rx troubleshooting measurement. The test measures the strength of the received signal.

I and Q branches can be measured separately. In GSM, the input signal can be either a real GSM signal or a CW (Continuous Wave) signal that is 67.771 kHz above the carrier frequency.

### Steps

1. Start *Phoenix* service software.
2. Choose **Testing**→**GSM**→**RSSI Reading**.
3. Set the RF signal generator for a channel frequency +67.771 kHz in CW mode with a -80 dBm signal level. Alternatively set the cellular tester downlink channel to the appropriate channel. Make sure that the tester is set to continuous mode, not to burst mode.
4. In the *RSSI Reading* window, select the appropriate band and channel.

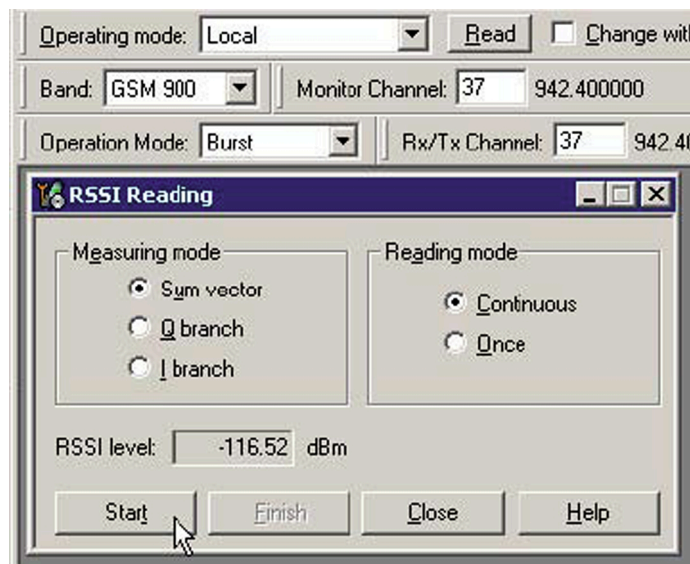


Figure 44 *RSSI Reading* window

5. To start the measurement, activate GSM Rx chain, click **Start**.

### Results

RSSI reading values of the selected band and channel are displayed. The RSSI level must be the same value as that which is set at the signal generator (-80 dBm).

## ■ Transmitter troubleshooting

### General instructions for TX troubleshooting

#### Context

- Tx troubleshooting requires Tx operation.
- Do not transmit on frequencies that are in use!
- Transmitter can be controlled in the local mode for diagnostic purposes.
- The most useful Phoenix tool for GSM transmitter testing is "RF Controls".

- Tx IQ tuning and Tx power tuning can be also used in some cases.
- Remember that retuning is not a fix! Phones are tuned correctly in production.

The first set of steps instructs how to assemble the test setup. This setup is general for all Tx troubleshooting tasks.

Alternative steps provide specific troubleshooting instructions for *Phoenix* service software.

**Caution:** Never activate the GSM transmitter without a proper antenna load. There should be always 50  $\Omega$  load connected to the RF connector (antenna, RF-measurement equipment or at least 2 W dummy load), otherwise the GSM Power amplifier may be damaged.

## Steps

1. Connect a test jig to a computer with a DAU-9S cable or to a FPS-10 flash prommer with a modular cable (XCS-4).

Make sure that you have a PKD-1 dongle connected to the computer's parallel port.

2. Connect CU-4 with 12 V supply. The DC supply voltage is set to 3.7 V by default (in Phoenix).
3. Connect an RF cable between the RF connector of the module test jig (MJ-122) and measurement equipment or alternatively use a 50  $\Omega$  (at least 2 W) dummy load in the module test jig RF connector, otherwise GSM may be damaged.

**Note:** There are two antenna connectors in the module jig:

- one for GSM
- one for Bluetooth

Make sure that all connections are made to the correct RF connector.

Normally a spectrum analyser is used as measurement equipment.

**Note:** The maximum input power of a spectrum analyser is +30 dBm.

To prevent any damage, it is recommended to use 10 dB attenuator on the spectrum analyzer input.

4. Set Tx on.
  - i Set the phone module to the test jig and start *Phoenix service software*.
  - ii Initialize connection to the phone. (With the FPS-10 prommer use FPS10\_USB or FPS10\_TCP drivers, depending on connection type. When using DAU-9S select FBUS driver).
  - iii From the File menu, choose product: **File -> Choose Product -> xx-x\*** (\* = type designator of the phone, e.g. RM-217/222), or press **Ctrl + R** to scan product.
  - iv From the toolbar, set operating mode to "Local".
5. GSM850/900/1800/1900 troubleshooting
  - i From the Testing menu, activate the *RF Controls* window: **Testing -> GSM -> RF Controls**.



- ii In the *RF Controls* window:
  - Select band "GSM850", "GSM900" or "GSM1800" or "GSM1900".
  - Set Active unit to "Tx" (Default = "Rx").



- Set Operation mode to "Burst" (Default).
- Set Tx data type to "All1" (Default).
- Set Rx/Tx channel (see table below)
- Set Edge to "Off" (Default).
- Set Tx PA mode to "High" (Default).
- Set power level (see table below)

| Band    | Channel (RX and TX) | TX power level |
|---------|---------------------|----------------|
| GSM850  | 190                 | 5              |
| GSM900  | 37                  | 5              |
| GSM1800 | 700                 | 0              |
| GSM1900 | 661                 | 0              |


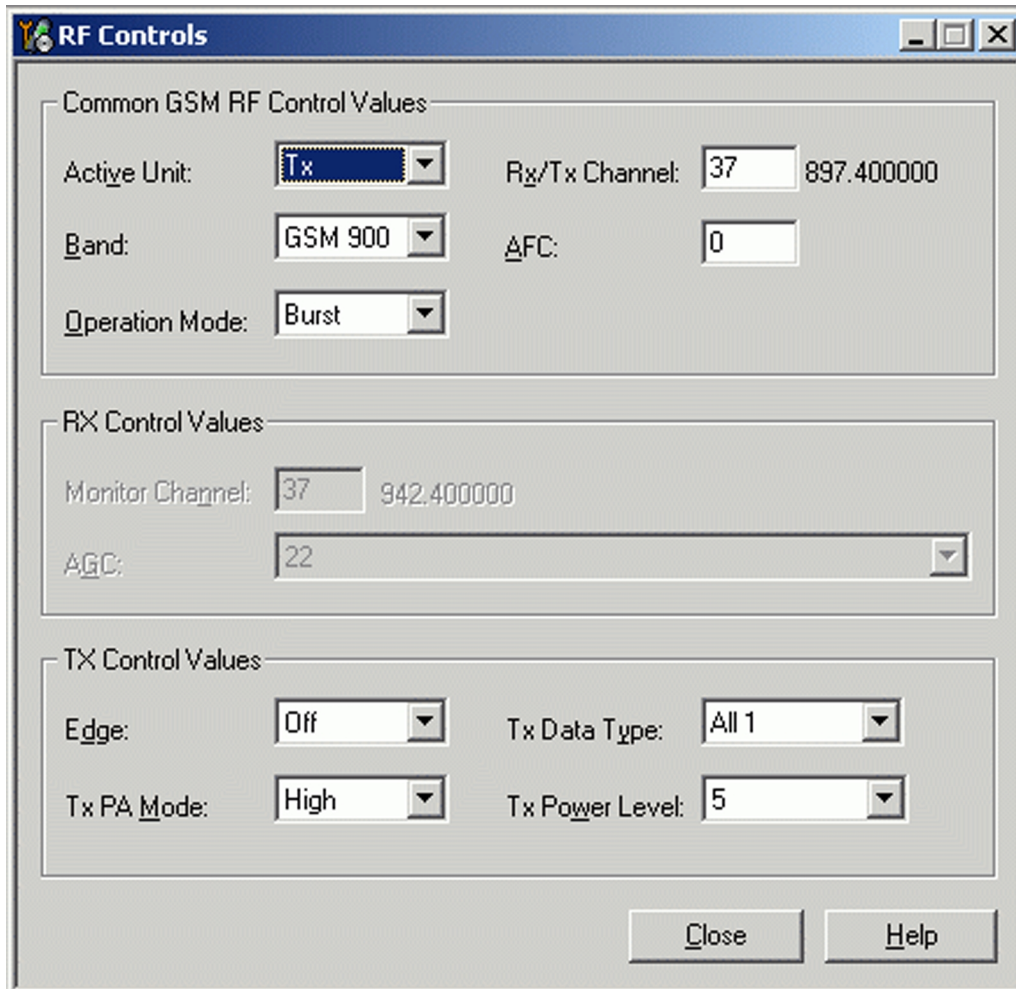


Figure 45 RF Controls window

**Transceiver (TX) troubleshooting**

**Troubleshooting flow**

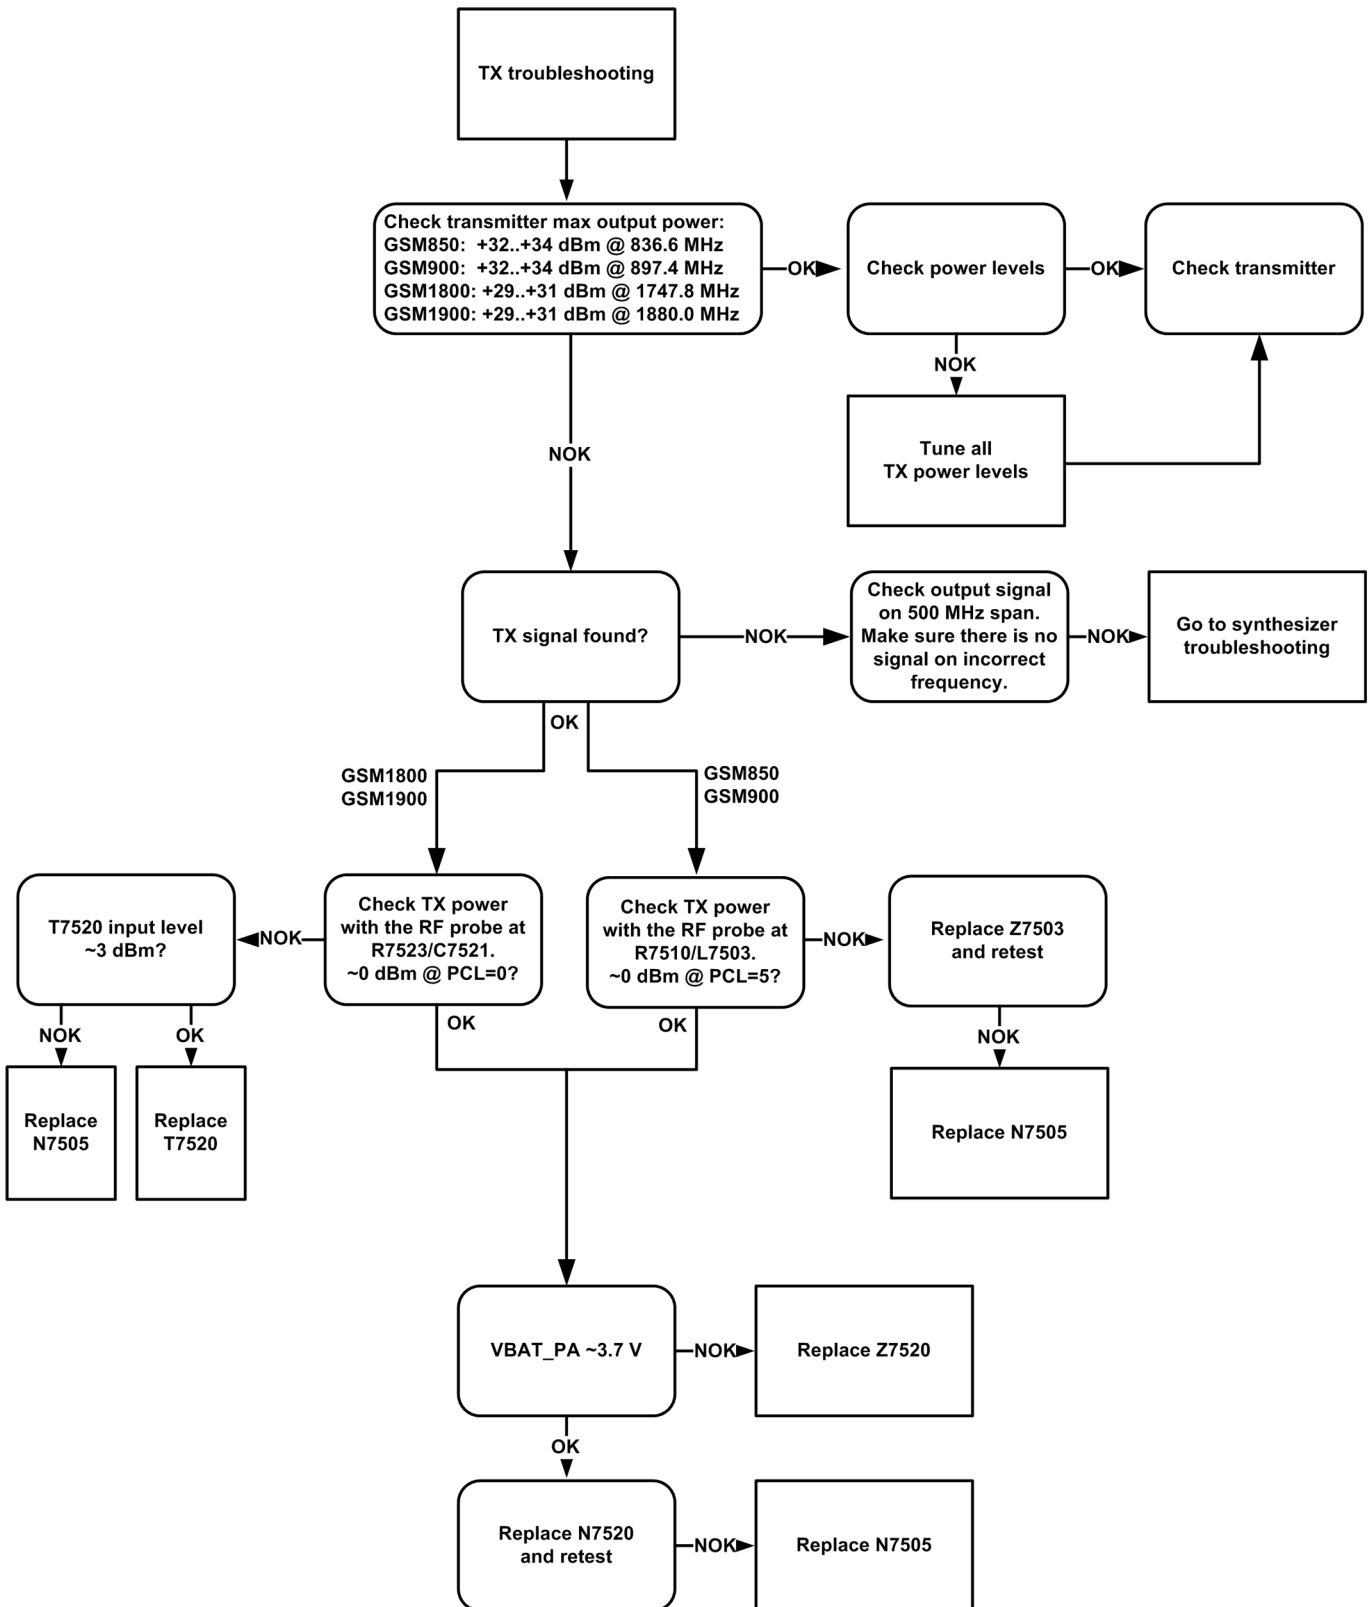

## Checking antenna functionality

### GSM antenna

In the GSM antenna, there is one feed and two GND contacts.  
Between GND1 and Feed, a DC short-circuit can be measured.  
GND2 has no DC connection to the other contacts.

The antenna is functioning normally, if the contact pads hit the antenna C-clips on the PWB and the antenna is visually intact.

### BT antenna

The BT antenna is (as the GSM antenna) placed on the flex foil on the antenna module. It has one feed and one short contact. The antenna is functioning normally, if the contact pads hit the antenna C-clips on the PWB and the antenna is visually intact.

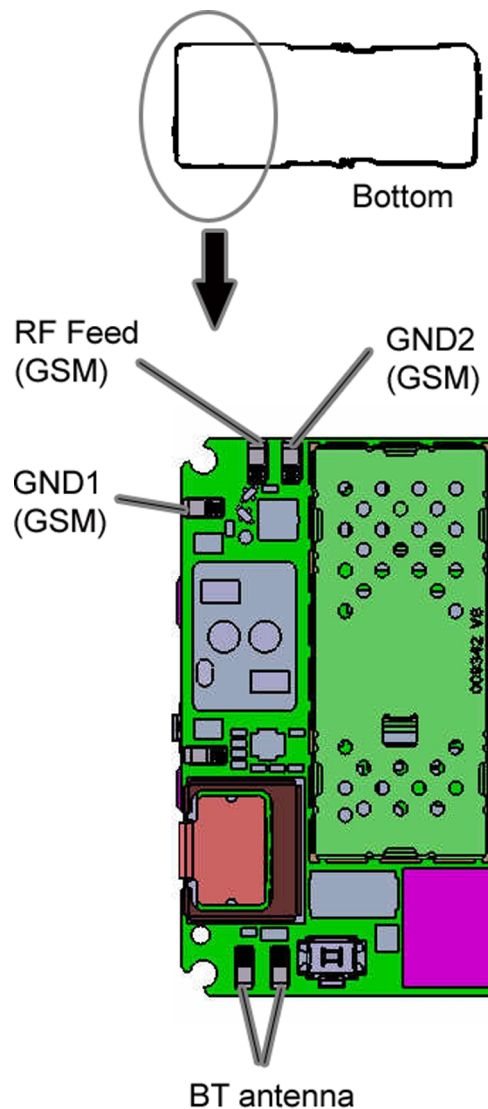


Figure 46 Location of the GSM and BT antenna C-clips on the PWB

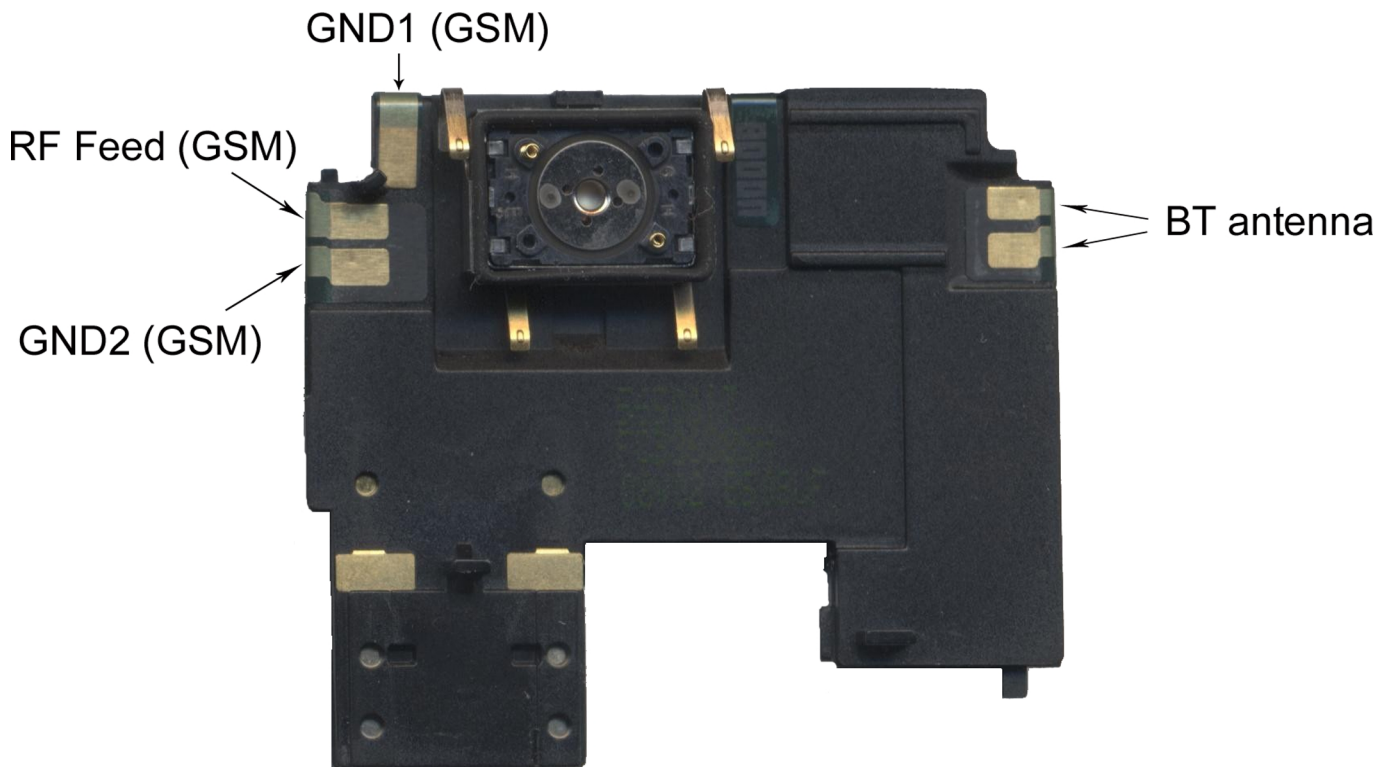


Figure 47 GSM and BT antenna contact pads on the antenna module

### Antenna C-clips

When checking the antenna functionality, you can also check that the antenna C-clips are intact (that is, there are no cracks/bends in them).


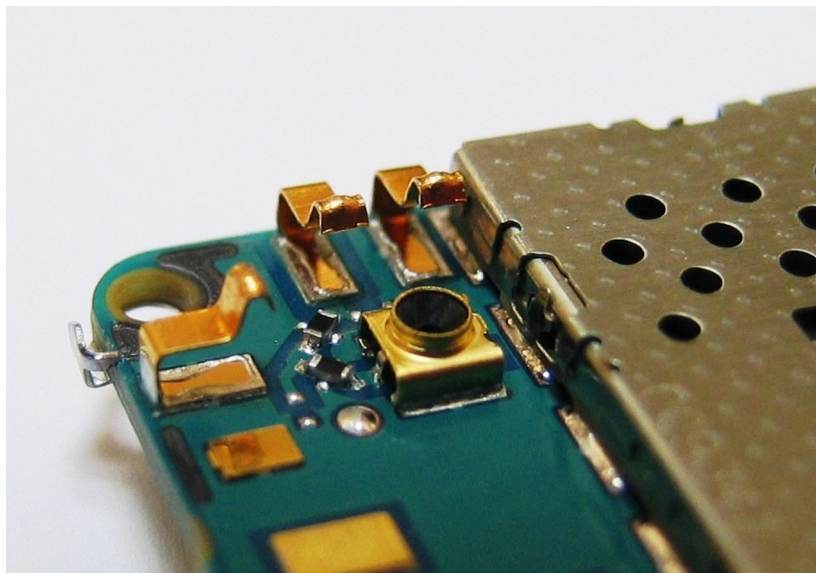


Figure 48 Antenna C-clips on the PWB

■ **Synthesizer troubleshooting**

**Synthesizer troubleshooting**

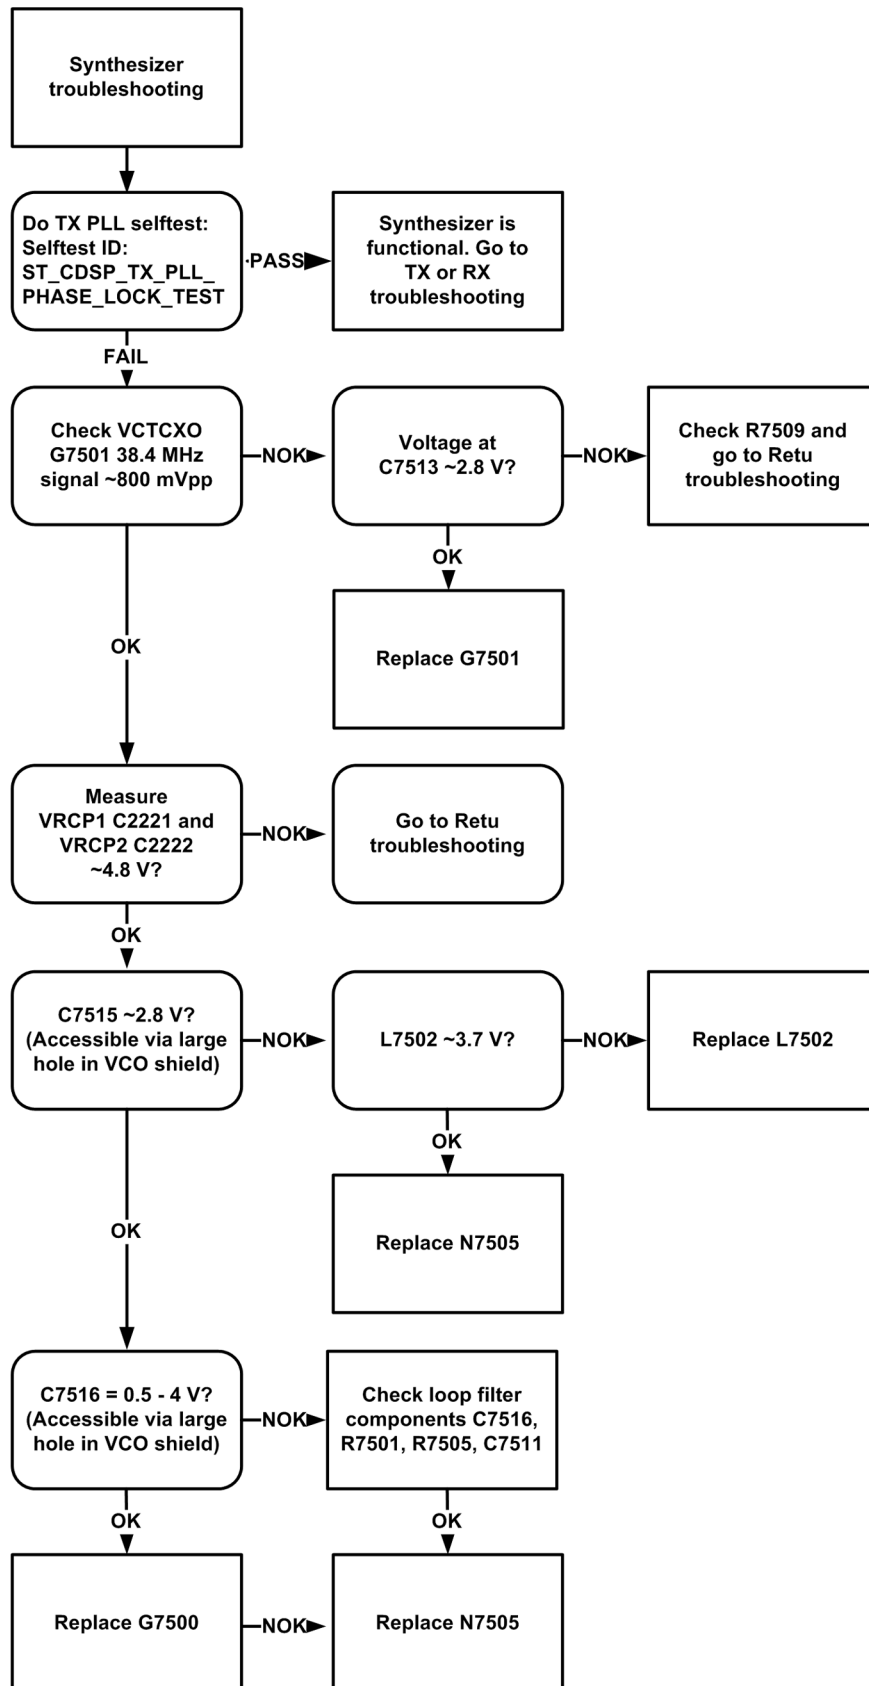

## ■ RF tunings

### Introduction to RF tunings

**Important:** Only perform RF tunings if:

- one or more of the RF components have been replaced
- flash memory chip is replaced or corrupted.

RF calibration is always performed with the help of a product-specific module jig (MJ-122), never with an RF coupler. Using an RF coupler in the calibration phase will cause a complete mistuning of the RF part.

**Important:** After RF component replacements, **always** use autotuning. Manual tunings are only required in rare cases.

### Cable and adapter losses

RF cables and adapters have some losses. They have to be taken into account when the phone is tuned. As all RF losses are frequency dependent, the user has to act very carefully and understand the measurement setup.

For RF attenuations of the module jig, please refer to the Service tools section.

### Auto tuning for BB5.0

This phone can be tuned automatically.

Autotune is designed to align the phone's RF part easier and faster. It performs calibrations, tunings and measurements of RX and TX. The results are displayed and logged in a result file, if initiated.

### Hardware set up

Hardware requirements for auto tuning:

- PC (Windows 2000/XP) with GPIB card
- Power supply
- Product specific module jig
- Cables: XRF-1 (RF cable), USB cable, GBIP cable and DAU-9S
- Signal analyser (TX), signal generator (RX) and RF-splitter *or* one device including all.

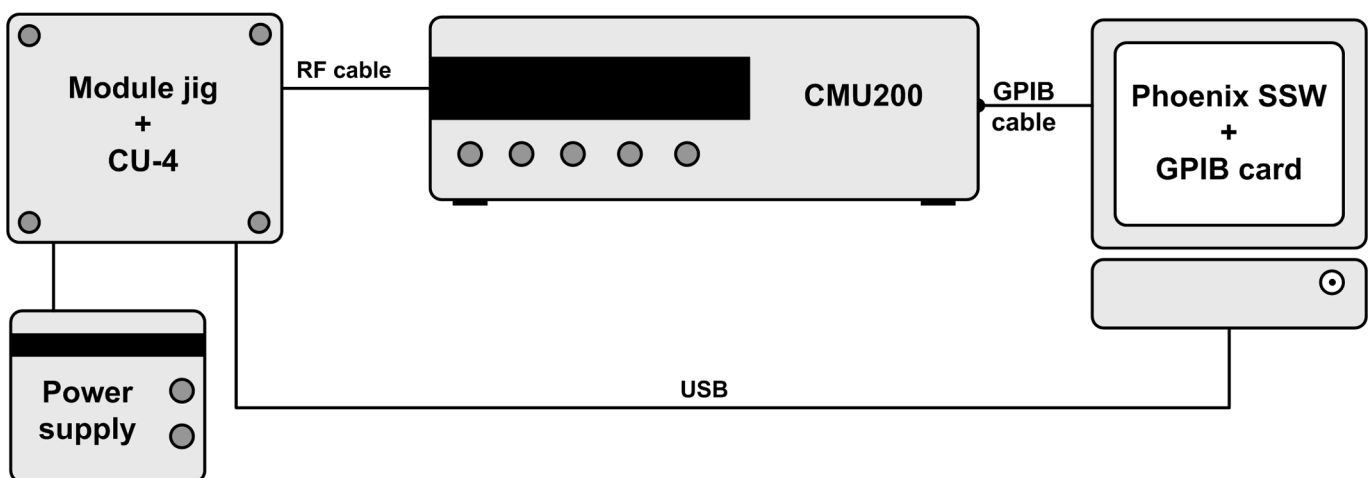


Figure 49 Auto tuning concept with CMU200

## Phoenix preparations

Install the phone specific data package, for example *RM-217/222\_dp\_1.78\_sw\_sh3.26.exe*. This defines phone specific settings..

## Auto tuning procedure

- 1 Make sure the phone (in the jig) is connected to the equipment. Else, some menus will not be shown in Phoenix.
- 2 To go to autotune, select *Tuning (Alt-U) > Auto-Tune (Alt-A)* from the menu.
- 3 Start autotuning, clicking the *Tune* button.

## ■ System mode independent manual tunings

### RF channel filter calibration

#### Context

RF channel filter calibration tunes the internal low pass filters of the RF ASIC, that limit the bandwidth of BB IQ signals.

Table 11 Rf channel filter calibration tuning limits

|           | Min | Typ | Max |
|-----------|-----|-----|-----|
| Tx filter | 0   | 10  | 31  |
| RX mixer  | 0   | 13  | 31  |
| Rx filter | 0   | 16  | 31  |

#### Steps

1. From the **Operating mode** drop-down menu, set mode to **Local**.
2. Choose **Tuning** → **Rf Channel Filter Calibration** .
3. Click **Tune**.
4. To save the values to the PMM (Phone Permanent Memory) area, click **Write**.
5. To close the *Rf Channel Filter Calibration* window, click **Close**.

#### Results

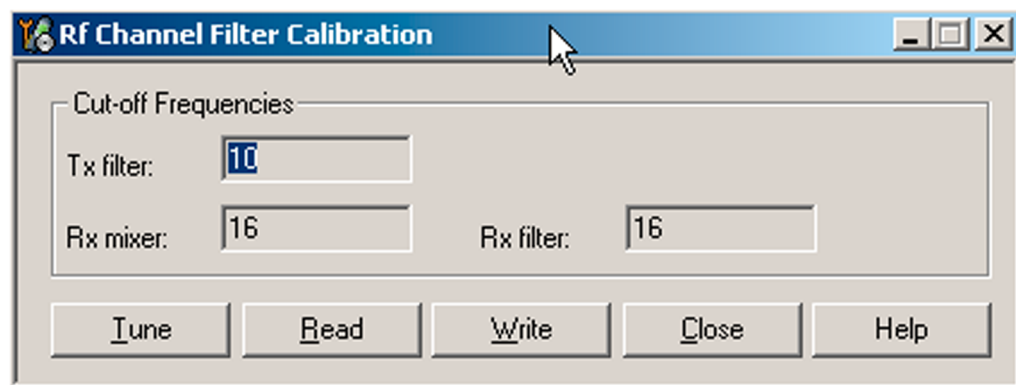


Figure 50 Rf channel filter calibration typical values

## PA (power amplifier) detection

### Context

The PA detection procedure detects which PA manufacturer is used for phone PAs.

If a PA is changed or if the permanent memory (PMM) data is corrupted, PA detection has to be performed before Tx tunings.

### Steps

1. From the **Operating mode** drop-down menu, set mode to **Local**.
2. Choose **Tuning**→**PA Detection** .
3. Click **Tune**.
4. Check that the detected PA manufacturers are corresponding to the actual chips on the board.
5. To end the procedure, click **Close**.

## ■ GSM receiver tunings

### Rx calibration (GSM)

### Context


Rx Calibration is used to find out the real gain values of the GSM Rx AGC system and tuning response of the AFC system (AFC D/A init value and AFC slope)

### Steps

1. Connect the GSM connector of the module jig to a signal generator.
2. Start *Phoenix* service software.
3. From the **Operating mode** drop-down menu, set mode to **Local**.
4. Choose **Tuning**→**GSM**→**Rx Calibration** .




5. Click **Start**.

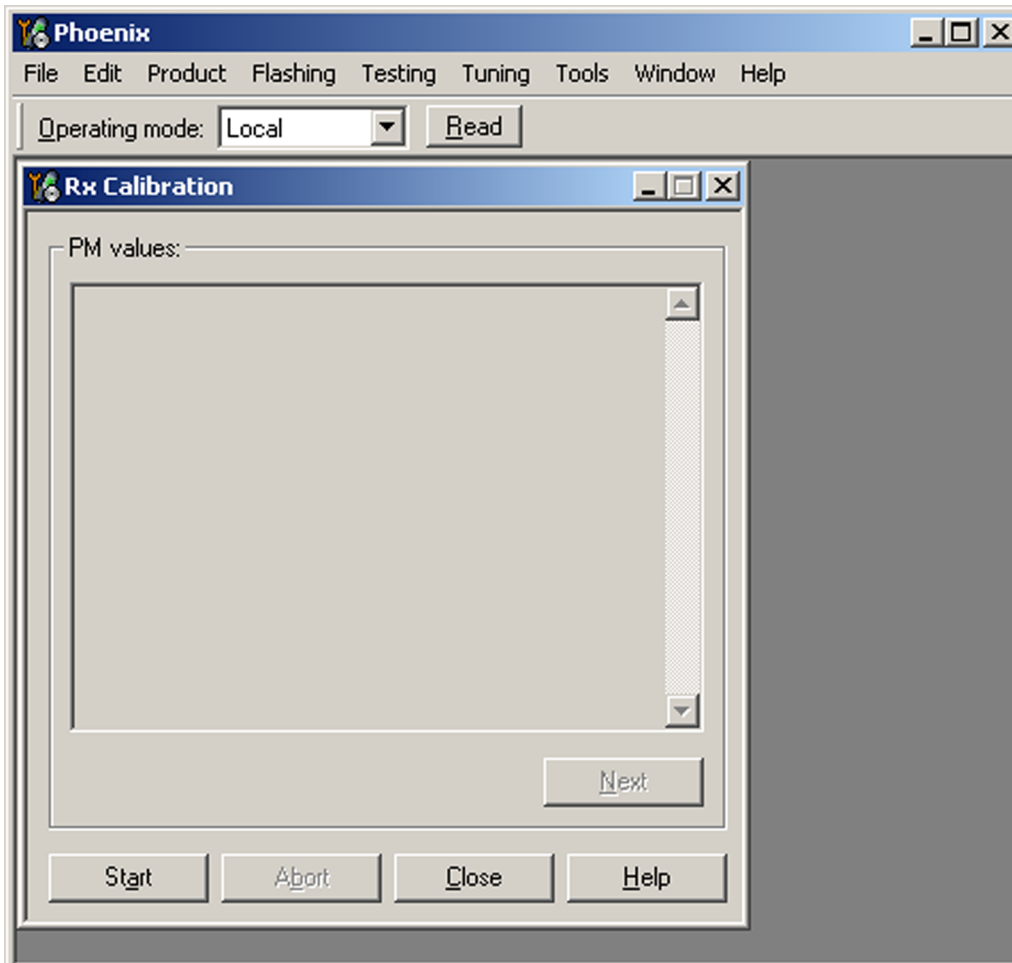

6. Connect the signal generator to the phone, and set frequency and amplitude as instructed in the **Rx Calibration with band EGSM900** (step 1-3) pop-up window.

**Important:** The calibration uses a non-modulated CW signal. Increase the signal generator level by cable attenuation and module jig probe attenuation.

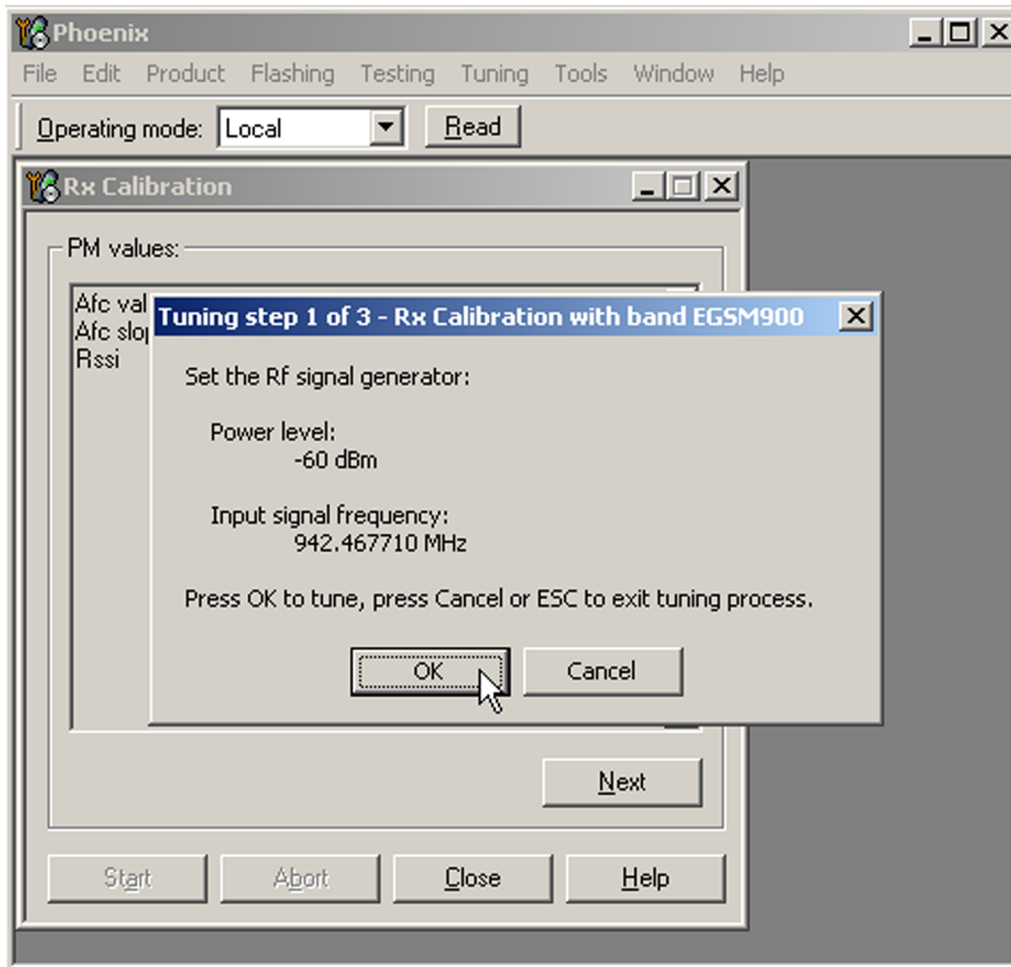


7. To perform the tuning, click **OK**.
8. Check that the tuning values are within the limits specified in the following table:

**Table 12 RF tuning limits in Rx calibration**

|                  | Min  | Typ       | Max | Unit |
|------------------|------|-----------|-----|------|
| <b>GSM850</b>    |      |           |     |      |
| AFC Value (init) | -200 | -80..40   | 200 | -    |
| AFC slope        | 0    | 108..121  | 200 | -    |
| RSSI (AGC-0)     | 106  | 107..110  | 114 | dB   |
| <b>GSM900</b>    |      |           |     |      |
| AFC Value (init) | -200 | -105..62  | 200 | -    |
| AFC slope        | 0    | 122       | 200 | -    |
| RSSI (AGC-0)     | 106  | 107...110 | 114 | dB   |
| <b>GSM1800</b>   |      |           |     |      |
| RSSI (AGC-0)     | 105  | 105...109 | 114 | dB   |
| <b>GSM1900</b>   |      |           |     |      |
| RSSI (AGC-0)     | 105  | 105...109 | 114 | dB   |

9. Click **Next** to continue with GSM1800 Rx tuning.

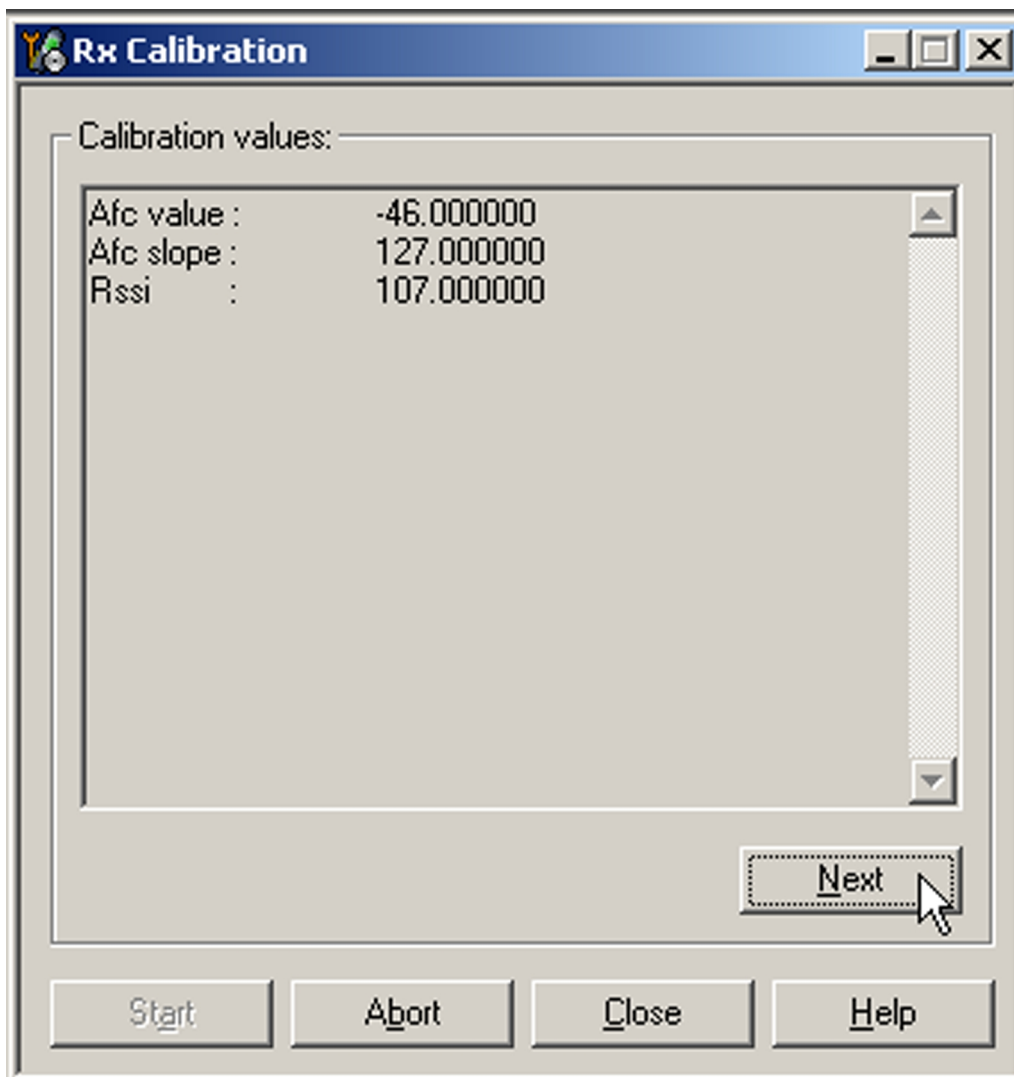

### Next actions

Repeat steps 6 to 9 for GSM1800 and GSM1900

### Rx band filter response compensation (GSM)

#### Prerequisites

Rx calibration must be performed before the Rx band filter response compensation.

#### Context


On each GSM Rx band, there is a band filter in front of the RF ASIC front end. The amplitude ripple caused by these filters causes ripple to the RSSI measurement, and therefore calibration is needed.

The calibration has to be repeated for each GSM band.


#### Steps

1. Connect the GSM connector of the module jig to a signal generator.
2. Start *Phoenix* service software.
3. From the **Operating mode** drop-down menu, set mode to **Local**.


4. Select **GSM850** or **GSM900** band.
5. Choose **Tuning**→**GSM**→**Rx Band Filter Response Compensation** .
6. Select **Tuning mode: manual**
7. Click **Start**.

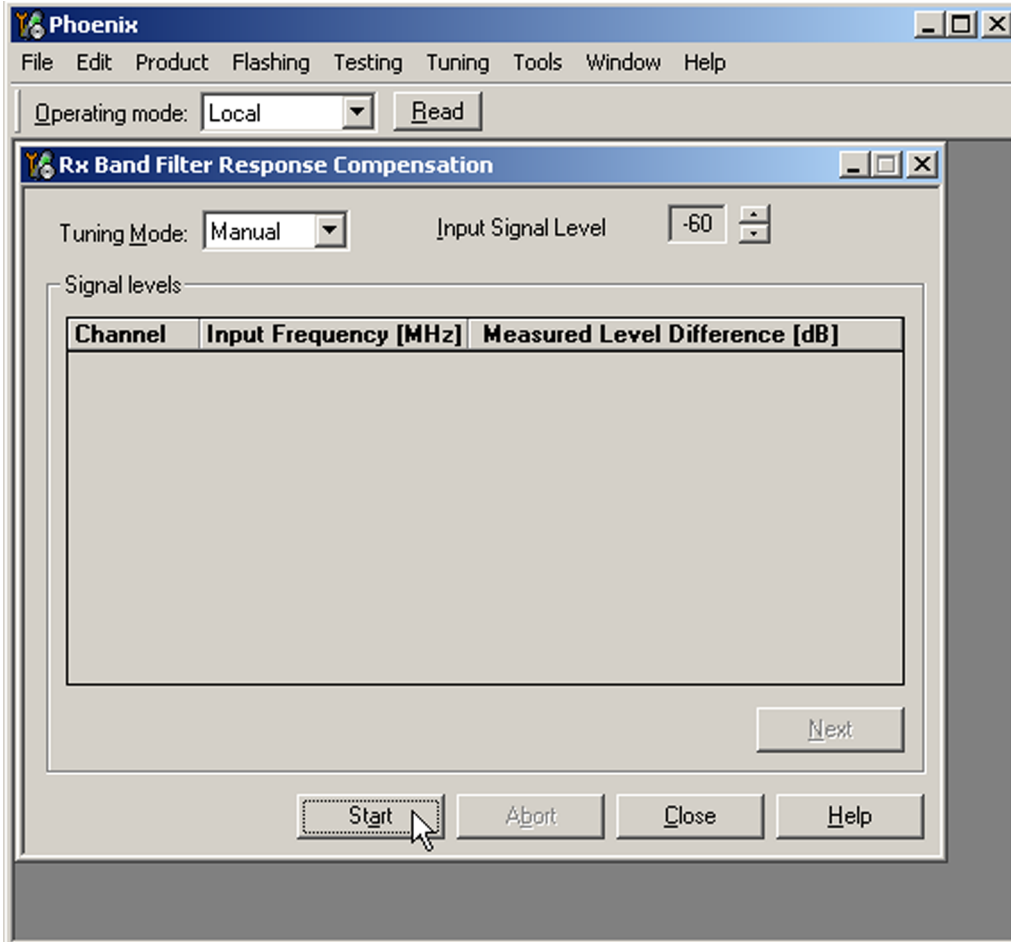

8. Connect the signal generator to the phone, and set frequency and amplitude as instructed in the *Rx Band Filter Response Compensation for EGSM850/EGSM900* pop-up window, step 1-3.

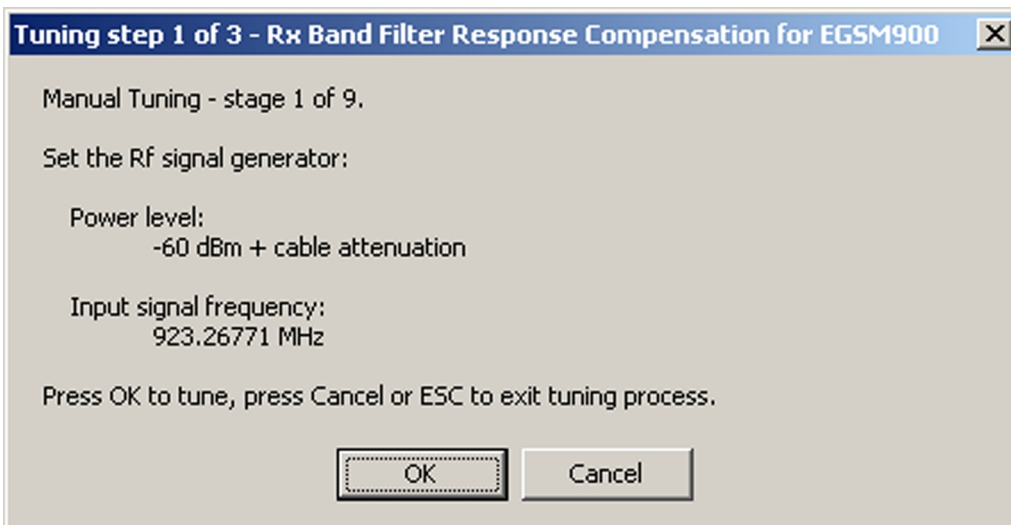

9. To perform tuning, click **OK**.
10. Go through all 9 frequencies. The following table will be shown:

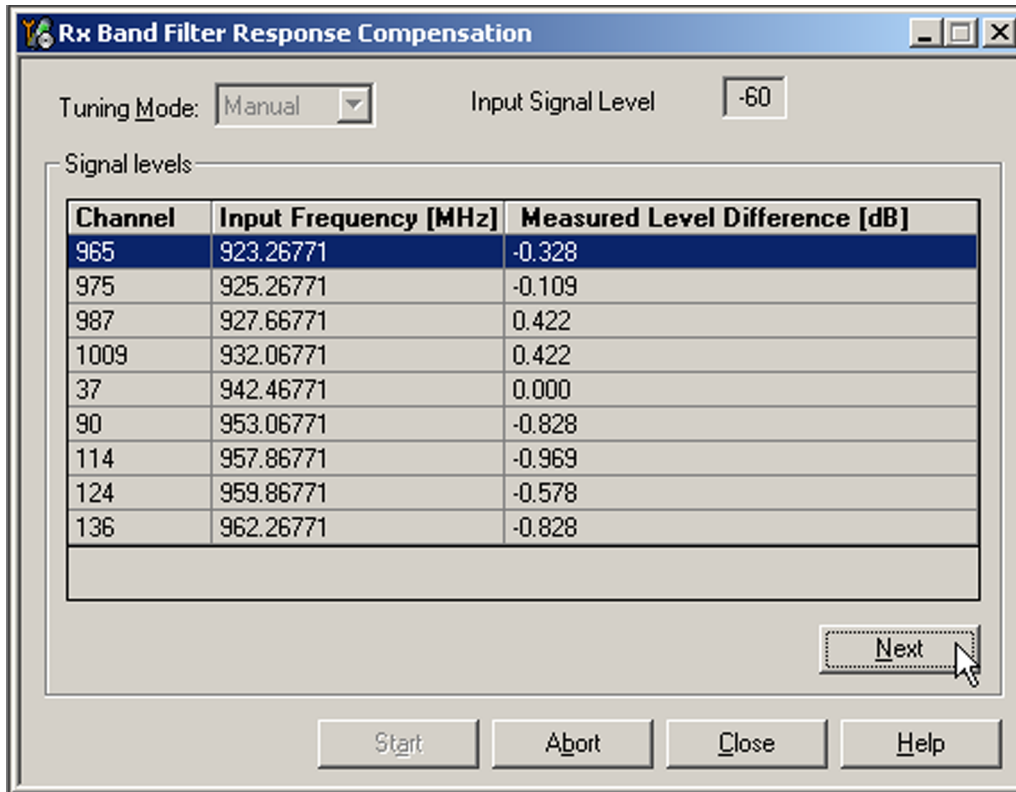

11. Check that the tuning values are within the limits specified in the following table:

|                          | Min | Typ | Max | Unit |
|--------------------------|-----|-----|-----|------|
| <b>GSM850</b>            |     |     |     |      |
| Ch. 118/867.26771 MHz    | -6  | -1  | 2   | dB   |
| Ch. 128/869.26771 MHz    | -3  | 0   | 2   | dB   |
| Ch. 140/871.66771 MHz    | -3  | 0   | 2   | dB   |
| Ch. 172/878.06771 MHz    | -2  | 0   | 2   | dB   |
| Ch. 190/881.66771 MHz    | -2  | 0   | 2   | dB   |
| Ch. 217 / 887.06771 MHz  | -2  | 0   | 2   | dB   |
| Ch. 241/891.86771 MHz    | -3  | 0   | 2   | dB   |
| Ch. 251/893.86771 MHz    | -3  | 0   | 2   | dB   |
| Ch. 261/895.86771 MHz    | -6  | -1  | -2  | dB   |
| <b>GSM900</b>            |     |     |     |      |
| Ch. 965 / 923.26771 MHz  | -6  | -1  | 2   | dB   |
| Ch. 975 / 925.26771 MHz  | -3  | 0   | 2   | dB   |
| Ch. 987 / 927.66771 MHz  | -3  | 0   | 2   | dB   |
| Ch. 1009 / 932.06771 MHz | -2  | 0   | 2   | dB   |

|                          | Min | Typ | Max | Unit |
|--------------------------|-----|-----|-----|------|
| Ch. 37 / 942.46771 MHz   | -2  | 0   | 2   | dB   |
| Ch. 90 / 953.06771 MHz   | -2  | 0   | 2   | dB   |
| Ch. 114 / 957.86771 MHz  | -3  | 0   | 2   | dB   |
| Ch. 124 / 959.86771 MHz  | -3  | 0   | 2   | dB   |
| Ch. 136 / 962.26771 MHz  | -6  | -1  | 2   | dB   |
| <b>GSM1800</b>           |     |     |     |      |
| Ch. 497 / 1802.26771 MHz | -6  | -1  | 3   | dB   |
| Ch. 512 / 1805.26771 MHz | -3  | 0   | 3   | dB   |
| Ch. 535 / 1809.86771 MHz | -3  | 0   | 3   | dB   |
| Ch. 606 / 1824.06771 MHz | -3  | 0   | 3   | dB   |
| Ch. 700 / 1842.86771 MHz | -3  | 0   | 3   | dB   |
| Ch. 791 / 1861.06771 MHz | -3  | 0   | 3   | dB   |
| Ch. 870 / 1876.86771 MHz | -3  | 0   | 3   | dB   |
| Ch. 885 / 1879.86771 MHz | -3  | 0   | 3   | dB   |
| Ch. 908 / 1884.46771 MHz | -6  | -1  | 3   | dB   |
| <b>GSM1900</b>           |     |     |     |      |
| Ch. 496 / 1927.06771 MHz | -6  | -1  | 2   | dB   |
| Ch. 512 / 1930.26771 MHz | -3  | 0   | 2   | dB   |
| Ch. 537 / 1935.26771 MHz | -3  | 0   | 2   | dB   |
| Ch. 586 / 1945.06771 MHz | -3  | 0   | 2   | dB   |
| Ch. 661 / 1960.06771 MHz | -3  | 0   | 2   | dB   |
| Ch. 736 / 1975.06771 MHz | -3  | 0   | 2   | dB   |
| Ch. 794 / 1986.66771 MHz | -3  | 0   | 2   | dB   |
| Ch. 810 / 1989.86771 MHz | -3  | 0   | 2   | dB   |
| Ch. 835 / 1994.86771 MHz | -6  | -1  | 2   | dB   |

12. If the values are within the limits, click **Next** to continue to the next band.

### Next actions

Repeat the steps 8 to 12 for GSM1800 and GSM1900.

### ■ GSM transmitter tunings

#### Tx IQ tuning (GSM)


#### Context

The Tx path branches to I and Q signals at RF I/Q modulator. Modulator and analog hardware located after it cause unequal amplitude and phase disturbance to I and Q signal paths. Tx IQ tuning balances the I and Q branches.

Tx IQ tuning must be performed for all GSM bands.

## Steps

1. Start *Phoenix* service software.
2. From the **Operating mode** drop-down menu, set mode to **Local**.
3. Choose **Tuning**→**GSM**→**Tx IQ Tuning** .
4. Select **Mode: Automatic**.

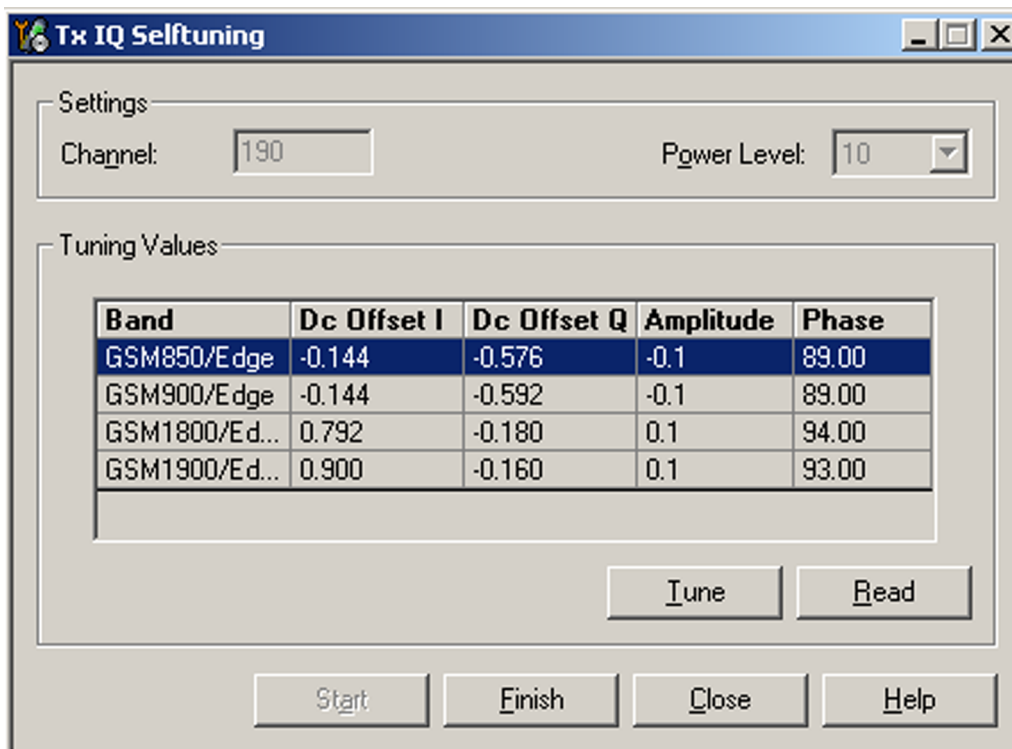

5. Select band **GSM850** or **GSM900** and click **Start**.
6. Click **Next** to start GSM1800 band TX IQ tuning.
7. Click **Next** to start GSM1900 band TX IQ tuning.
8. Click **Finish** and then **Close**.

## Next actions

Tuning sliders should be close to the center of the scale after the tuning and within the limits specified in the following table. If they are not within the limits, check Tx IQ quality manually.

|                           | Min | Typ | Max | Unit |
|---------------------------|-----|-----|-----|------|
| <b>GSM850</b>             |     |     |     |      |
| I DC offset / Q DC offset | -6  | -4  | 6   | %    |
| Ampl                      | -1  | 0   | 1   | dB   |
| Phase                     | 85  | 90  | 95  | °    |
| <b>GSM900</b>             |     |     |     |      |

|                           | Min | Typ | Max | Unit |
|---------------------------|-----|-----|-----|------|
| I DC offset / Q DC offset | -6  | -4  | 6   | %    |
| Ampl                      | -1  | 0   | 1   | dB   |
| Phase                     | 85  | 90  | 95  | °    |
| <b>GSM1800/GSM1900</b>    |     |     |     |      |
| I/Q DC                    | -6  | 0.5 | 6   | %    |
| Ampl                      | -1  | 0   | 1   | dB   |
| Phase                     | 95  | 100 | 110 | °    |

## Tx power level tuning (GSM)

### Context

Because of variations at the IC (Integrated Circuit) process and discrete component values, the actual transmitter RF gain of each phone is different. Tx power level tuning is used to find out mapping factors called 'power coefficients'. These adjust the GSM transmitter output power to fulfill the specifications.

For EDGE transmission, the bias settings of the GSM PA are adjusted in order to improve linearity. This affects the PA gain and hence the power levels have to be aligned separately for EDGE transmission.


Tx power level tuning has to be performed on all GSM bands.

### Steps

1. Connect the phone to a spectrum analyzer.
2. Start *Phoenix* service software.
3. From the **Operating mode** drop-down menu, set mode to **Local**.
4. Choose **Tuning**→**GSM**→**Tx Power Level Tuning** .



5. Click **Start**.

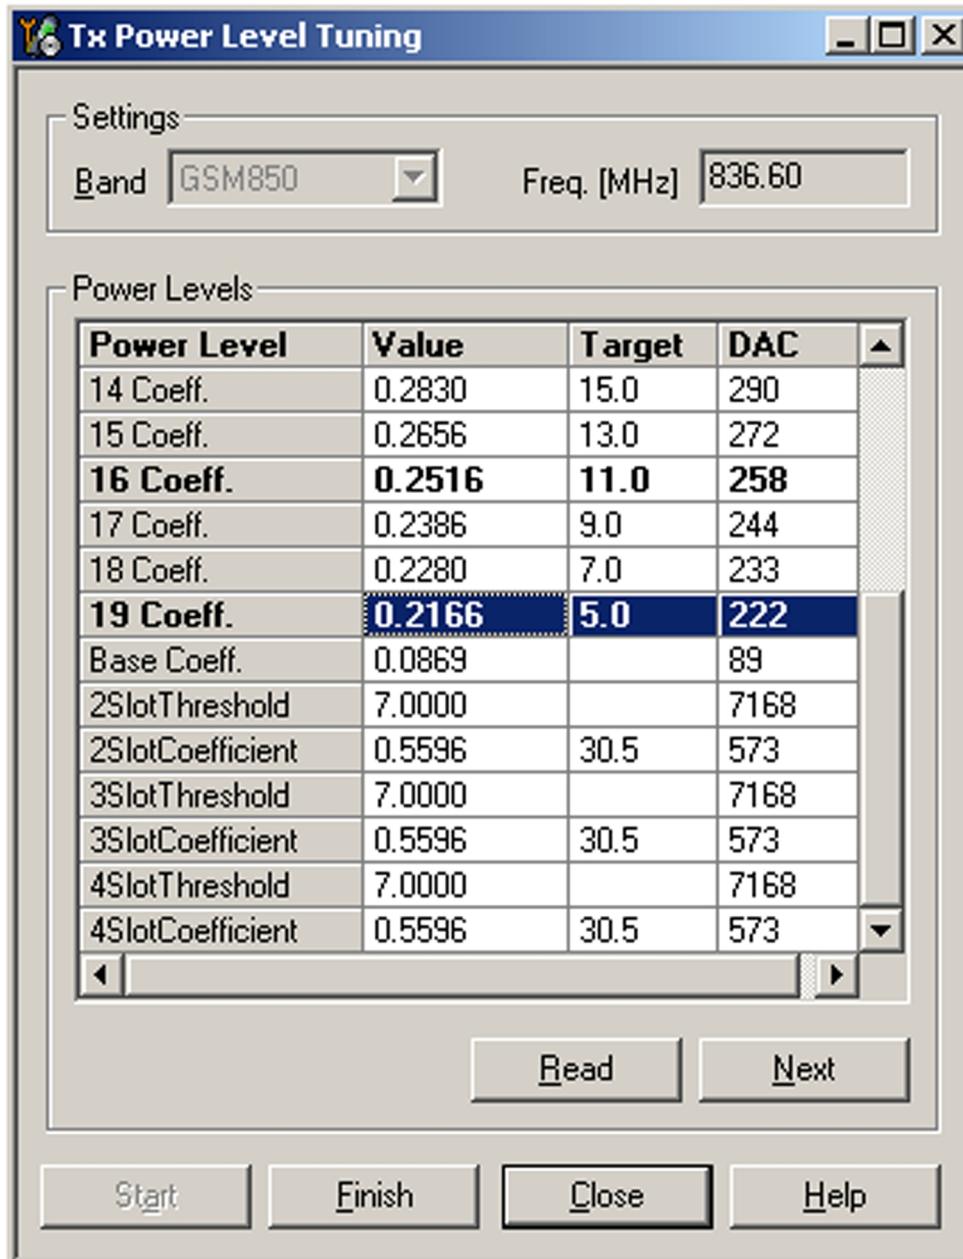

6. Set the spectrum analyzer for power level tuning:

|            |   |
|------------|---|
| Frequency  | Channel frequency:<br><ul style="list-style-type: none"> <li>• 836.6 MHz GSM850</li> <li>• 897.4MHz GSM900</li> <li>• 1747.8MHz GSM1800</li> <li>• 1880MHz GSM1900</li> </ul> |
| Span       | 0 Hz  |
| Sweep time | 2ms   |
| Trigger    | Video triggering (-10dBm)   |


|                        |   |
|------------------------|---|
| Resolution BW          | 3MHz  |
| Video BW               | 3MHz  |
| Reference level offset | sum cable attenuation with module jig attenuation |
| Reference level        | 33dBm   |

A power meter with a peak power detector can be also used. Remember to take the attenuations into account.

7. Adjust power for all bold power levels to correspond the **Target dBm** column by pressing + or – keys.
8. If all bold power levels are adjusted, click **Next** to continue with **GSM850 EDGE**.
9. Adjust power for all bold power levels to correspond the **Target dBm** column by pressing + or – keys.

### Next actions

Continue tuning the bold power levels of the GSM900, GSM1800 and GSM1900 bands. You will see this message, if finished successfully:

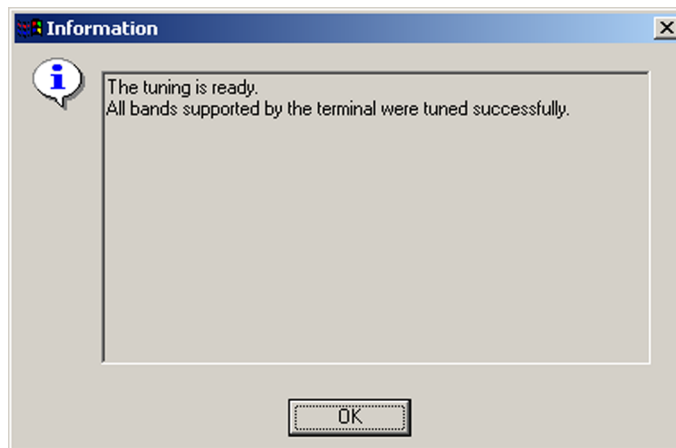

# Nokia Customer Care

## 8 — System module

(This page left intentionally blank.)

## Table of Contents

|                                    |      |
|------------------------------------|------|
| Phone description .....            | 8-5  |
| Engine .....                       | 8-8  |
| Engine modules .....               | 8-8  |
| RF engine .....                    | 8-9  |
| Main processor .....               | 8-9  |
| Energy management .....            | 8-9  |
| Battery and charging .....         | 8-10 |
| Interfaces .....                   | 8-11 |
| FM radio .....                     | 8-11 |
| Camera .....                       | 8-11 |
| SIM .....                          | 8-12 |
| µSD card interface .....           | 8-13 |
| User interface .....               | 8-13 |
| Display .....                      | 8-13 |
| Keyboard .....                     | 8-13 |
| Display and keypad backlight ..... | 8-13 |
| Reminder lights .....              | 8-13 |
| Audio concept .....                | 8-13 |
| Audio concept .....                | 8-13 |
| Connections .....                  | 8-15 |
| AV connector .....                 | 8-15 |
| USB .....                          | 8-15 |
| Bluetooth .....                    | 8-15 |
| Technical specifications .....     | 8-16 |
| General specifications .....       | 8-16 |
| Battery endurance .....            | 8-16 |
| Environmental conditions .....     | 8-16 |
| Electrical characteristics .....   | 8-16 |
| Main RF characteristics .....      | 8-17 |

### List of Tables

|  |      |
|--|------|
| Table 13 Normal and extreme voltages .....     | 8-16 |
| Table 14 Channel numbers and frequencies ..... | 8-17 |
| Table 15 Main RF characteristics .....         | 8-17 |
| Table 16 Transmitter characteristics .....     | 8-18 |
| Table 17 Receiver characteristics .....        | 8-19 |

### List of Figures

|  |      |
|--|------|
| Figure 51 System block diagram .....                     | 8-7  |
| Figure 52 Board and module connections .....             | 8-8  |
| Figure 53 Old (left) and new (right) charger plugs ..... | 8-11 |
| Figure 54 FM radio interface .....                       | 8-11 |
| Figure 55 SIM interface connections .....                | 8-12 |
| Figure 56 Audio block diagram .....                      | 8-14 |
| Figure 57 Bluetooth interface block diagram .....        | 8-15 |

(This page left intentionally blank.)

## ■ Phone description

### Introduction

This chapter describes the system module including engine, power management, interfaces, audio etc. The baseband is based on BB5.0 with a RAPGSM main processor and Retu/Tahvo energy management. All blocks that require high voltage process are in Tahvo and all other in Retu. The RF part is based on the ASIC Ahne.

RM-217/222 is a monoblock phone, in which all electrical components are assembled into one PWB.

RM-217 operates on the GSM 900/1800/1900 bands.


RM-222 operates on the GSM 850/1800/1900 bands.

### Key components


| Function          | Name   | Item           |
|-------------------|--|----------------|
| Energy management | Retu<br>Tahvo  | D2200<br>N2300 |
| Main processor    | RAPGSM   | D2800          |
| Memory            | Combo: 128 Mbit SDRAM & 256 Mbit NOR flash   | D3000          |
| RF ASIC           | Ahne   | N7505          |
| Front end module  | Power amplifier and Antenna Switch   | N7520          |
| Antenna           | Antenna module assembly <ul style="list-style-type: none"> <li>• RM-217: 900/1800/1900 MHz</li> <li>• RM-222: 850/1800/1900 MHz</li> </ul> |                |
| System connector  | AV connector<br>mini USB connector   | X2030<br>X2002 |
| Battery           | BL-4C, 3.7 V, 860 mAh  |                |
| Bluetooth         | BC4-ROM  | N6030          |
| FM radio          | TEA5760  | N6100          |
| IHF Speaker       | Donau or Aura (in antenna module assembly)   |                |
| Earpiece          | RDF-07A 320HM 10.86x7.40.2.2   | B2101          |
| Microphone        | Clapton  | B2100          |
| Vibra             | SMD VIBRA MOTOR  | M2100          |
| Charger connector | 2 mm Nokia charger interface   | X2000          |
| Camera            | 2.0 Mpix SMIA85  |                |
| HWA               | STV0984N   | D3300          |
| Display           | QVGA 240 x 320, 2"   |                |
| LED driver        | TPS 61061 YZFR   | N2301          |
| RTC battery       | 311 size   | G2200          |

**PWB overview**

**PWB placement - Top**

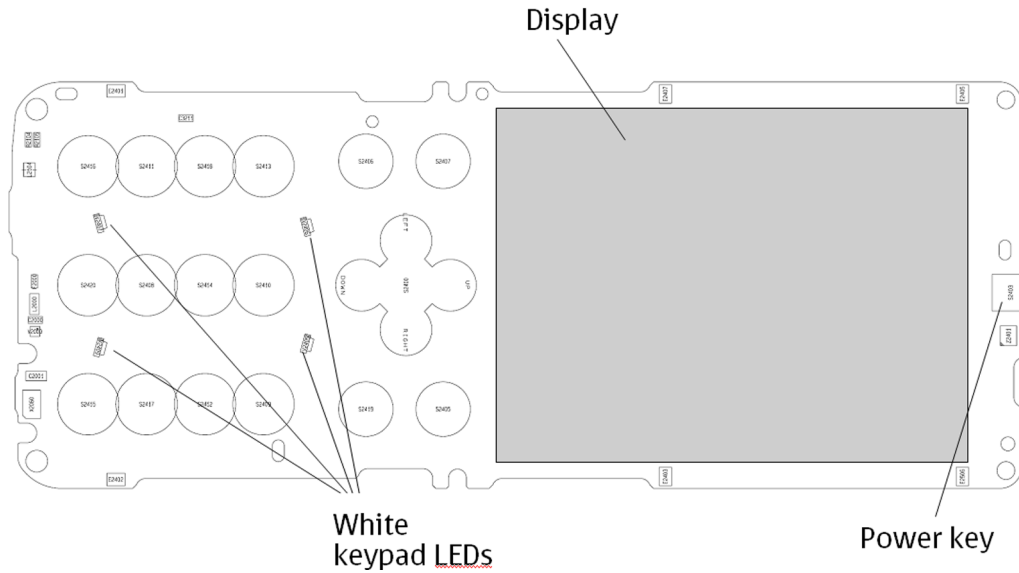

**PWB placement - Bottom**

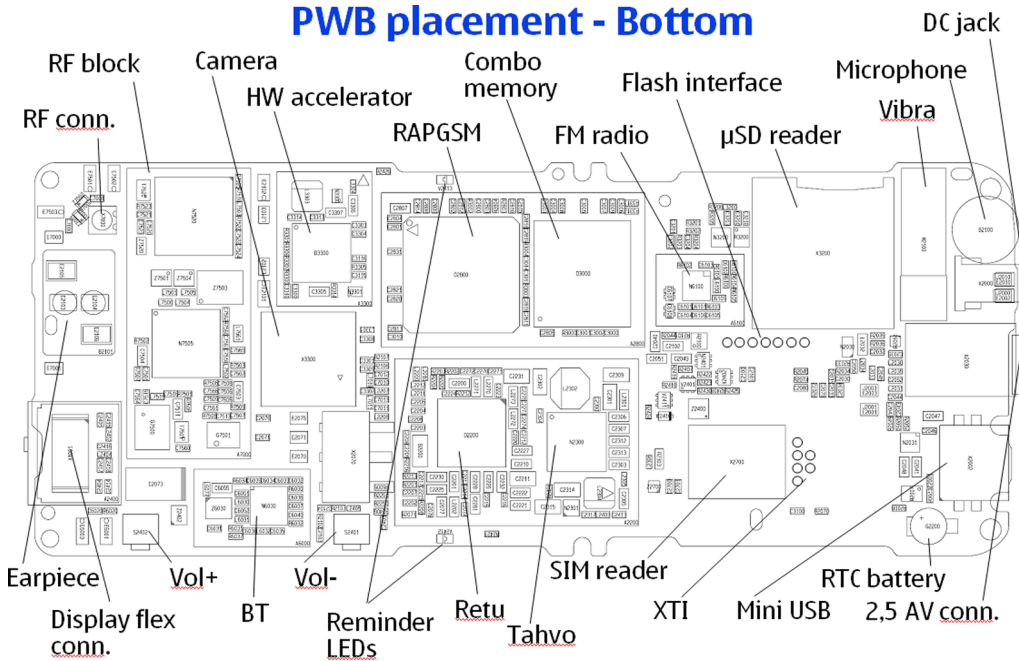



### System block diagram

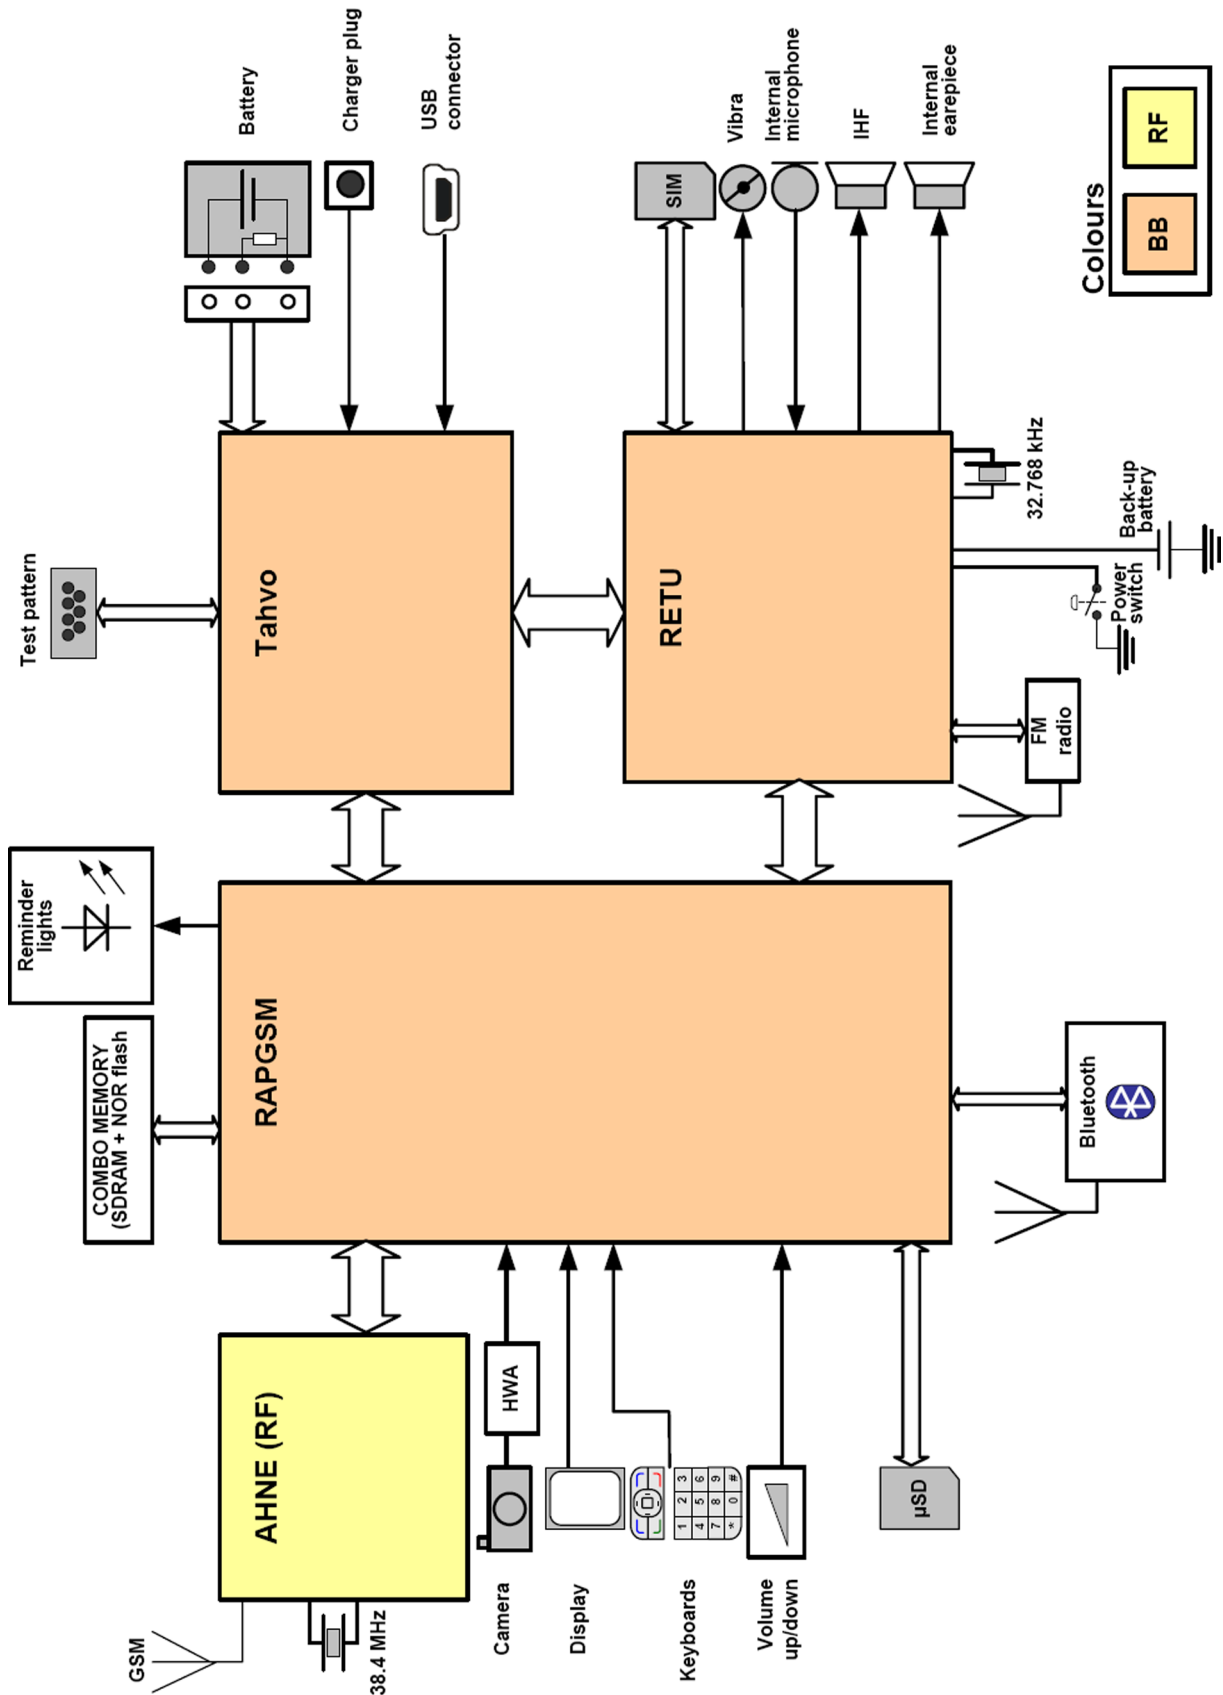


Figure 51 System block diagram

## Board and module connections

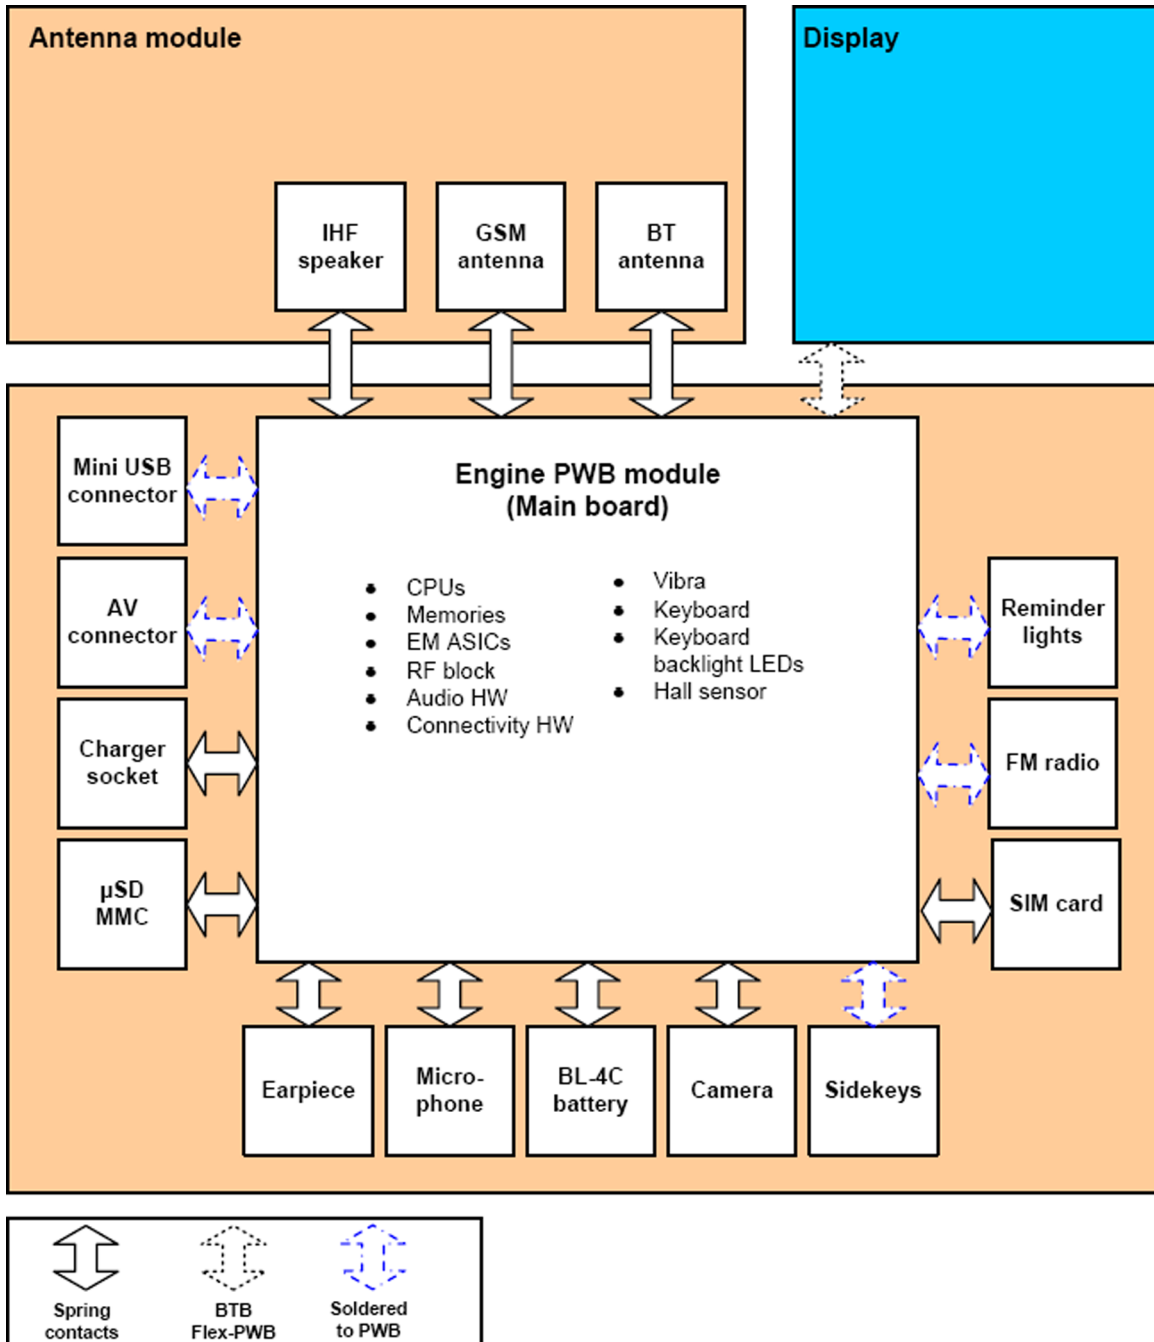


Figure 52 Board and module connections

## ■ Engine

### Engine modules

The engine contains

- RF module with Ahne ASIC
- Main processor with integrated memory (Baseband)
- Energy management - Retu and Tahvo (Baseband)

- SDRAM and NOR flash memories

## RF engine

The RF module performs the high frequency operations of the engine for GSM. In both transmitter and receiver, the modulator and demodulator operate at the channel frequency.

The core components of the RF module are:

- Ahne RF ASIC (application specific integrated circuit)
- Front end module (FEM) module (Power amplifier and Antenna switch)

The RF engine also includes:

- Voltage controlled oscillators (VCO and VCTCX0)
- SAW filters

The baseband section controls the RF module through the serial bus, RFBUS. This passes information about eg. frequency band and mode of operation. Ahne RF ASIC controls the mode of operation, and further sends control signals to the front end module.

In addition to the RFBUS there are other interface signals for the power control loop, VCTCX0 control and for the modulated waveforms.

## Main processor

The main processor in this device is RAPGSM, a BB5.0 ASIC.

Some of its interfaces, processors and controllers are:

- General purpose UARTs
- Processor modules
- I2C (between ICs) interface
- GSM coder
- Interfaces to user interface, SIM and MMC
- Accessory interface
- Handling of RF-BB interface
- I/O voltage = 1.8 V, Core voltage <1.8 V

## Energy management

Two ASICs manage the energy in the phone; Retu and Tahvo. Together they cover the analogue audio and energy management function needs.

### Tahvo

All blocks that need a special silicon process are included in Tahvo.

Tahvo's main features are:

- Energy management control
- Supply voltage generation
- Charge control
- Digital core supply
- Current control for LED supply

### Retu

The blocks that do not have special needs are included in Retu.

Retu controls for example:

- Audio block
- SIM
- FM radio

## Modes of operation

The functional behavior can be divided into seven different states. Each of these states will affect the general functionality of the phone:


- No supply
- Backup
- Power off
- Reset
- Power on
- Deep sleep

## ■ Battery and charging

### Battery

- Type: BL-4C, Li-Ion
- Capacity: 860 mAh
- BSI resistor nominal value: 75 k $\Omega$

Battery temperature is measured on the NTC on the main board.

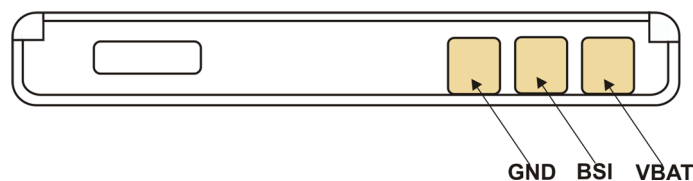

### Battery connector

The battery connector has three poles:

- BSI (Battery size indicator)
- GND (Ground)
- VBAT (Battery voltage)

The BSI line is used to recognize the battery capacity by a battery internal pull down resistor.

### Charging

This phone is charged through the smaller Nokia standard interface (2.0 mm plug). The old standard charger (3.5 mm) can be used together with the CA-44 charger adapter.



Figure 53 Old (left) and new (right) charger plugs

Charging is controlled by energy management, and external components are needed to protect the baseband module against EMC, reverse polarity and transient frequency deviation.

## ■ Interfaces

### FM radio

This phone uses a single-chip electronically tuned FM stereo radio with low voltage application.


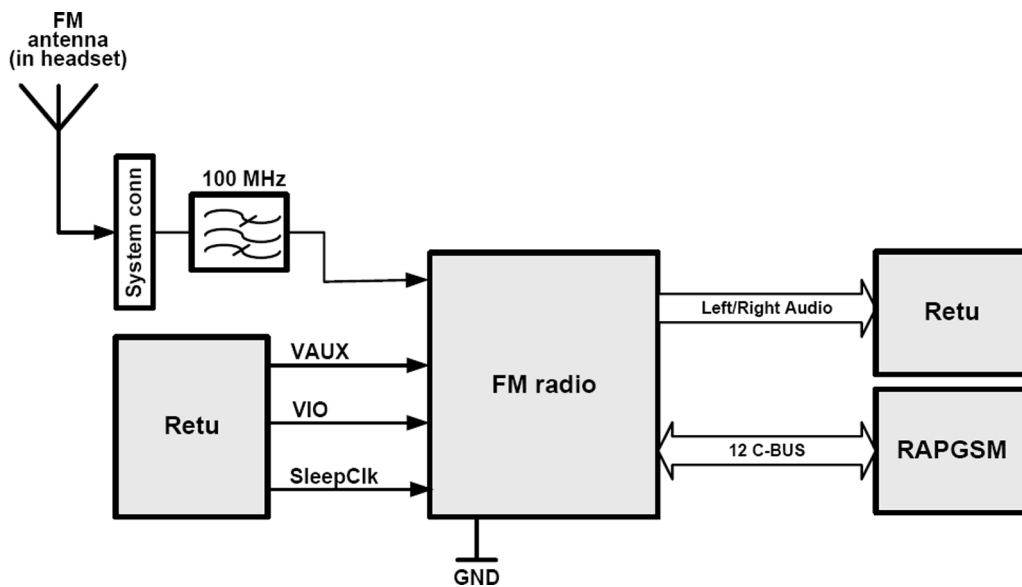


Figure 54 FM radio interface

## Camera

### Camera interface

The RM-217/222 has a **2.0 Megapixel** camera, supported by a hardware accelerator.

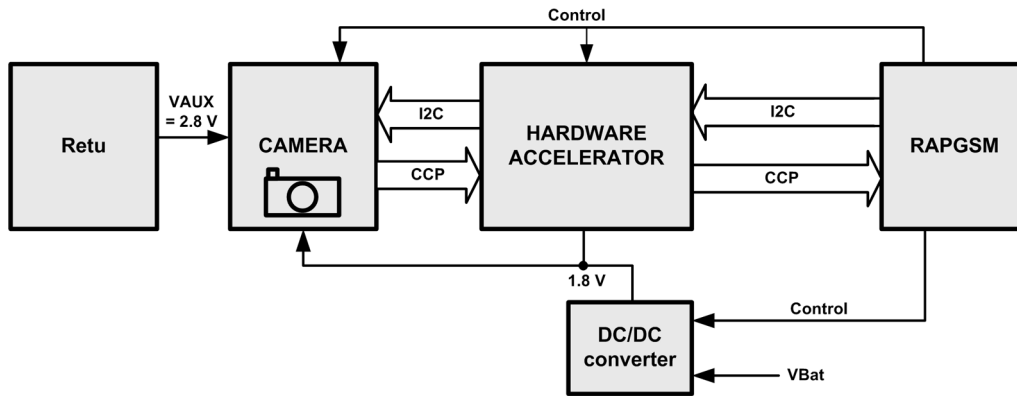

## SIM

The SIM interface is the electrical interface between the SIM card and the mobile phone engine. The data communication between the SIM card and the phone is asynchronous half duplex.

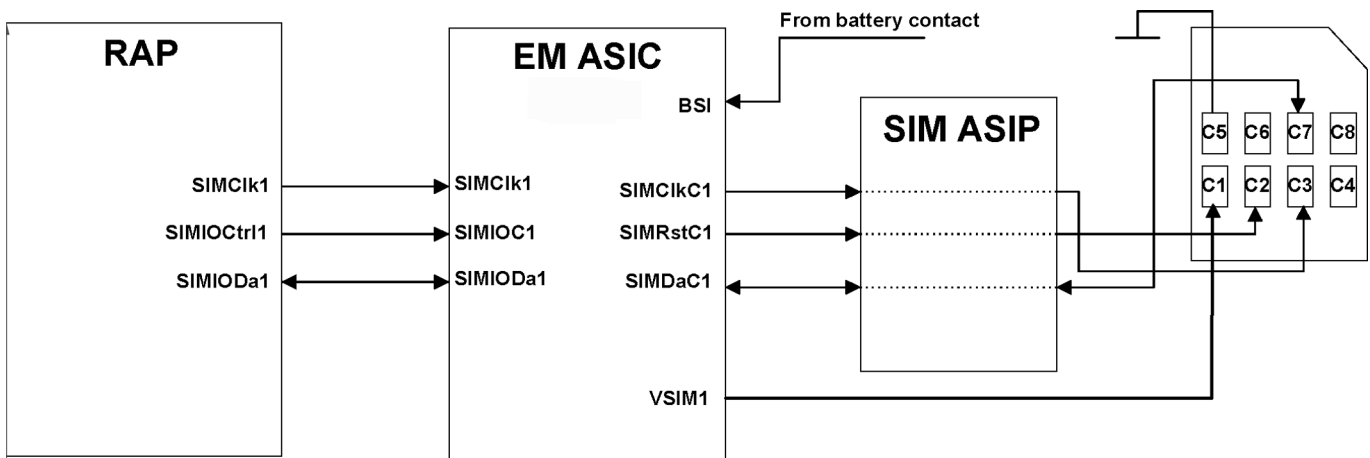


Figure 55 SIM interface connections

## SIM Logic level shifting


The SIM interface can support 3V and 1.8V SIM cards.

## SIM Power up/down

The SIM power up/down sequence is generated in Retu. This means that Retu generates the reset switch (RST) signal to the SIM. In addition, the SIMCardDet signal is connected to Retu.

The SIM interface is powered up when the SIMCardDet signal indicates "card in".

## µSD card interface

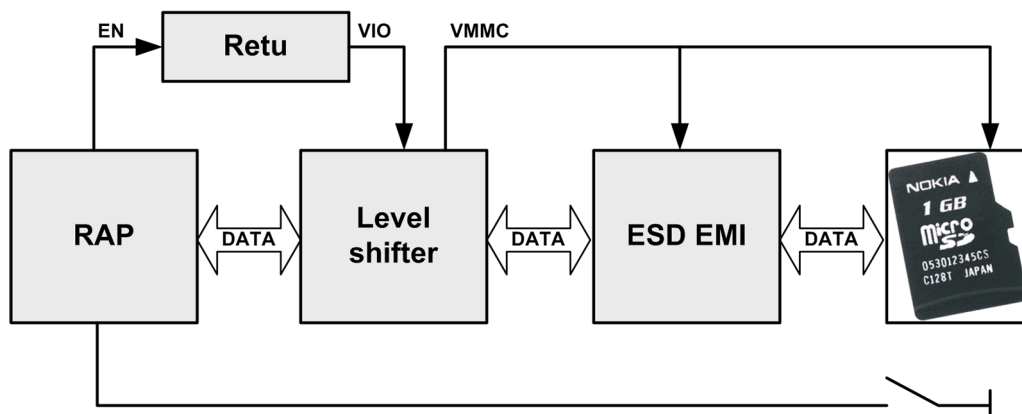

The µSD card is connected to the engine by an external level shifter and ESD protection filter. Supplied voltages:

- VMMC: 2.85 V (from level shifter)
- VIO: 1.8 V (from Retu)

The card removal is detected by a push detect switch.

## ■ User interface

### Display

The display unit comprises a parallel interface.

### Keyboard

All keys are placed on the main PWB.

- Numeric keys
- Navigation key, Soft keys, Start, and End
- Power switch
- Volume up and down switch

### Display and keypad backlight

There are two sets of LEDs illuminating the display and the keypads:

- Display LEDs, 4pcs
- Main keypad on PWB, 4 pcs, white colour

All sets share the same driver. None of the keypads can be illuminated without the LCD backlight being turned on.

### Reminder lights

Two additional blue LEDs serve as reminder lights for missed calls/text messages.

## ■ Audio concept

### Audio concept

The functional core of the audio hardware is built around two ASICs; RAP engine and Retu.

Retu provides an interface for the transducers and the AV connector.

There are three audio transducers:

- 1 dynamic earpiece
- 1 dynamic speaker
- 1 microphone module

Retu also provides an output for the vibra motor.

All external audio accessories are connected to the specific audio connector.

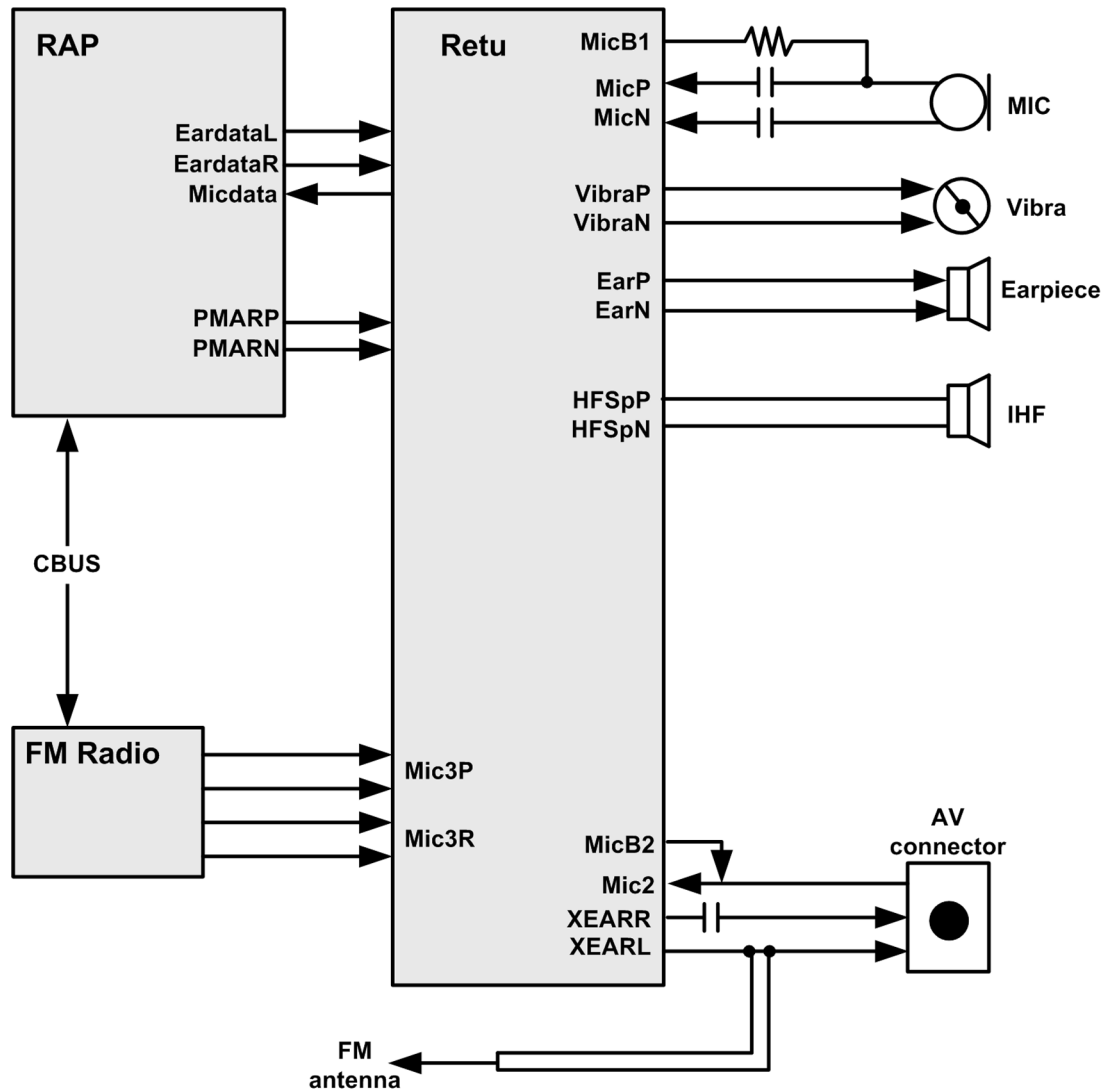


Figure 56 Audio block diagram

## Internal audio

The internal audio components are used in these modes:

|            | Hand portable (HP) mode | Internal hands free (IHF) mode |
|------------|-------------------------|--------------------------------|
| Microphone | X                       | X                              |
| Earpiece   | X                       |                                |
| Speaker    |                         | X                              |



## ■ Connections

### AV connector

Headsets and other galvanic accessories are connected to the specific audio input. The accessory mode is automatically enabled/disabled when a dedicated accessory is connected/disconnected.

**Note:** When testing external audio through the audio connector, make sure that the specific accessory can be used with this phone!


### USB

USB (Universal Serial Bus) provides a wired connectivity between a PC and peripheral devices. It is a differential serial bus.

USB 2.0 is supported with full speed (12 Mbps).

Hot swap is supported, which means that USB devices may be plugged in/out at any time.

This phone is provided with a specific connector for mini USB.

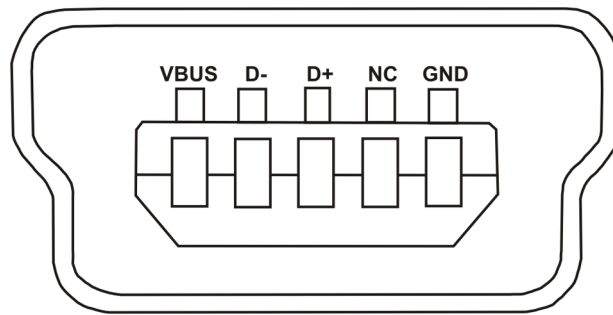

### Bluetooth

Bluetooth provides a fully digital link for communication between a master unit and one or more slave units.

This bluetooth solution is a single chip solution.

Bluetooth connects to RAPGSM on the GENIO and GPIO busses.

The Bluetooth module is provided with power from VBat.

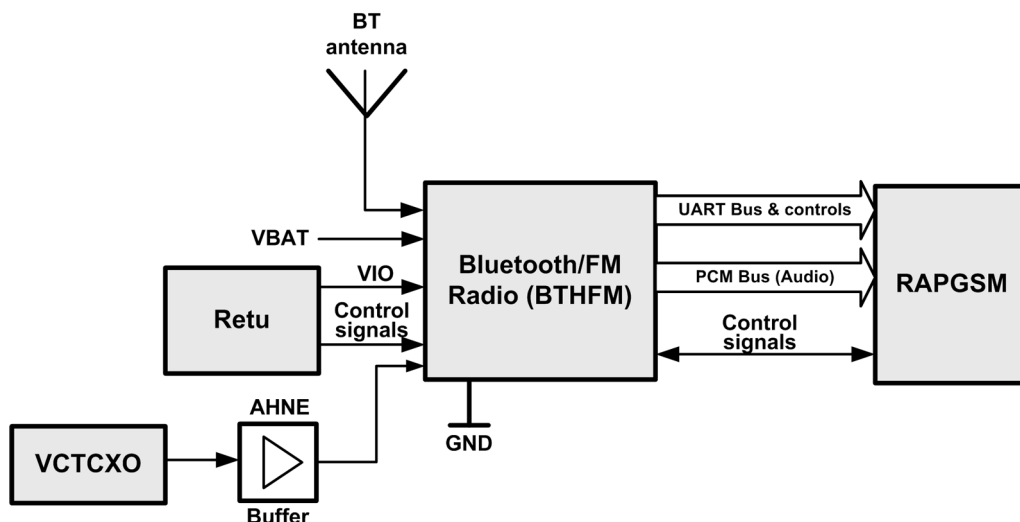


Figure 57 Bluetooth interface block diagram

## ■ Technical specifications

### General specifications

| Unit   | Dimension (mm)      | Weight (g) | Volume (cc) |
|--|---------------------|------------|-------------|
| Transceiver with BL-4C 860 mAh Li-Ion battery pack | 106,8 x 43,8 x 13,1 | 91         | 55,6        |

### Battery endurance

| Battery              | Talk time     | Standby time    | Music time |
|----------------------|---------------|-----------------|------------|
| BL-4C 860 mAh Li-ion | 3 - 3.5 hours | Up to 300 hours | > 10 hours |

**Note:** Variation in operation times will occur depending on SIM card, network settings and usage. Talk time is increased by up to 30% if half rate is active, and reduced by 5% if enhanced full rate is active.

### Environmental conditions

#### Temperature

| Temperature range                | Min °C | Max °C |
|----------------------------------|--------|--------|
| Operational (all specs met)      | -5     | +55    |
| Functional (reduced performance) | -30    | +70    |
| Storage                          | -30    | +85    |

The HW module complies with the SPR4 Operating Conditions.

#### Humidity

Relative humidity range is 5...95%.

The hardware module is not protected against water. Condensed or splashed water might cause malfunction. Any submerge of the phone will cause permanent damage. Long-term high humidity, with condensation, will cause permanent damage because of corrosion.

The hardware module complies with the SPR4 Operating Conditions.

### Electrical characteristics

Table 13 Normal and extreme voltages

| Voltage               | Voltage (V) | Condition |
|-----------------------|-------------|-----------|
| General conditions    |             |           |
| Nominal voltage       | 3.7         |           |
| Lower extreme voltage | 3.06        | a         |

| Voltage                | Voltage (V) | Condition |
|------------------------|-------------|-----------|
| Higher extreme voltage | 4.2         | b         |

a. ADC settings in the SW might shutdown the phone above this value.

b. During fast charging of an empty battery, this voltage might exceed this value. Voltages between 4.20 and 4.60 might appear for a short while.

## Main RF characteristics

Table 14 Channel numbers and frequencies

| System  | Channel number   | TX frequency                 | RX frequency               | Unit |
|---------|------------------|------------------------------|----------------------------|------|
| GSM850  | 128 <= n <= 251  | $F = 824.2 + 0.2*(n - 128)$  | $F = 869.2 + 0.2*(n-128)$  | MHz  |
| GSM900  | 0 < =n <= 124    | $F = 890 + 0.2*n$            | $F = 935 + 0.2*n$          | MHz  |
|         | 975 <= n <= 1023 | $F = 890 + 0.2*(n - 1024)$   | $F = 935 + 0.2*(n - 1024)$ | MHz  |
| GSM1800 | 512 <= n <= 885  | $F = 1710.2 + 0.2*(n - 512)$ | $F = 1805.2 + 0.2*(n-512)$ | MHz  |
| GSM1900 | 512 <= n <= 810  | $F = 1850.2 + 0.2*(n - 512)$ | $F = 1930.2 + 0.2*(n-512)$ | MHz  |

Table 15 Main RF characteristics

| Parameter          | Unit and value  |
|--------------------|---|
| Cellular systems   | <b>RM-217:</b> EGSM900/GSM1800/GSM1900<br><b>RM-222:</b> GSM850/GSM1800/GSM1900 |
| RX Frequency range | GSM850: 869 ... 894 MHz   |
|                    | EGSM900: 925 ... 960 MHz  |
|                    | GSM1800: 1805...1880 MHz  |
|                    | GSM1900: 1930...1990 MHz  |
| TX Frequency range | GSM850: 824 ... 849 MHz   |
|                    | EGSM900: 880 ... 915 MHz  |
|                    | GSM1800: 1710 ...1785 MHz   |
|                    | GSM1900: 1850...1910 MHz  |
| Duplex spacing     | GSM850: 45 MHz  |
|                    | EGSM900: 45 MHz   |
|                    | GSM1800: 95 MHz   |
|                    | GSM1900: 80 MHz   |
| Channel spacing    | 200 kHz   |

| Parameter                    | Unit and value              |
|------------------------------|-----------------------------|
| Number of RF channels        | GSM850: 124                 |
|                              | EGSM900: 174                |
|                              | GSM1800: 374                |
|                              | GSM1900: 300                |
| Output Power                 | GSM850: GSMK 5...33 dBm     |
|                              | GSM850: 8-PSK 5...26.5 dBm  |
|                              | EGSM900: GSMK 5...33 dBm    |
|                              | EGSM900: 8-PSK 5...26.5 dBm |
|                              | GSM1800: GSMK 0...30 dBm    |
|                              | GSM1800: 8-PSK 0...25.5 dBm |
|                              | GSM1900: GSMK 0...30 dBm    |
|                              | GSM1900: 8-PSK 0...25.5 dBm |
| Number of power levels GSMK  | GSM850: 15                  |
|                              | EGSM900: 15                 |
|                              | GSM1800: 16                 |
|                              | GSM1900: 16                 |
| Number of power levels 8-PSK | GSM850: 12                  |
|                              | EGSM900: 12                 |
|                              | GSM1800: 14                 |
|                              | GSM1900: 14                 |

**Table 16 Transmitter characteristics**

| Item   | Values                                  |
|--|---|
| Type   | Direct conversion, nonlinear, FDMA/TDMA |
| LO frequency range                                   | GSM850: 3296...3576 MHz (4 x TX freq)   |
|  | EGSM900: 3520...3660 MHz (4 x TX freq)  |
|  | GSM1800: 3420...3570 MHz (2 x TX freq)  |
|  | GSM1900: 3700...3820 MHz (2 x TX freq)  |
| Output power<br>(GSM850/EGSM900/GSM1800/<br>GSM1900) | GMSK 33/33/30/30 dBm                    |
|  | 8-PSK 26.5/26.5/25.5/25.5 dBm           |
| Gain control range                                   | min. 30 dB                              |
| Phase error (RMS/peak), GMSK                         | 5 deg./20 deg. peak                     |
| EVM (RMS/peak), 8-PSK                                | 10%/30%                                 |

**Table 17 Receiver characteristics**

| <b>Item</b>  | <b>Values</b>                                |
|--|--|
| Type   | Direct conversion, Linear, FDMA/TDMA         |
| LO frequencies   | GSM850: 3476..3576 MHz (4 x RX freq)         |
|  | EGSM900: 3700...3840 MHz (4 x RX freq)       |
|  | GSM1800: 3610...3760 MHz (2 x RX freq)       |
|  | GSM1900: 3860...3980 MHz (2 x RX freq)       |
| Typical 3 dB bandwidth                                       | +/- 91 kHz                                   |
| Sensitivity  | min. - 102 dBm (normal condition)            |
| Total typical receiver voltage gain (from antenna to RX ADC) | 86 dB  |
| Receiver output level (RF level -95 dBm)                     | 40 mVpp, single-ended I/Q signals to RX ADCs |

(This page left intentionally blank.)

# Nokia Customer Care

## 9 — Schematics


(This page left intentionally blank.)




## Table of Contents

|   |      |
|---|------|
| AV connector, mini USB, charger jack..... | 9-4  |
| RETU, SIM, Audio .....                    | 9-5  |
| TAHVO .....                               | 9-6  |
| RAPGSM, Combo, microSD .....              | 9-7  |
| FM radio, Bluetooth.....                  | 9-8  |
| User interface.....                       | 9-9  |
| Camera.....                               | 9-10 |
| RF part .....                             | 9-11 |
| Signal overview .....                     | 9-12 |
| Component finder .....                    | 9-13 |


■ AV connector, mini USB, charger jack

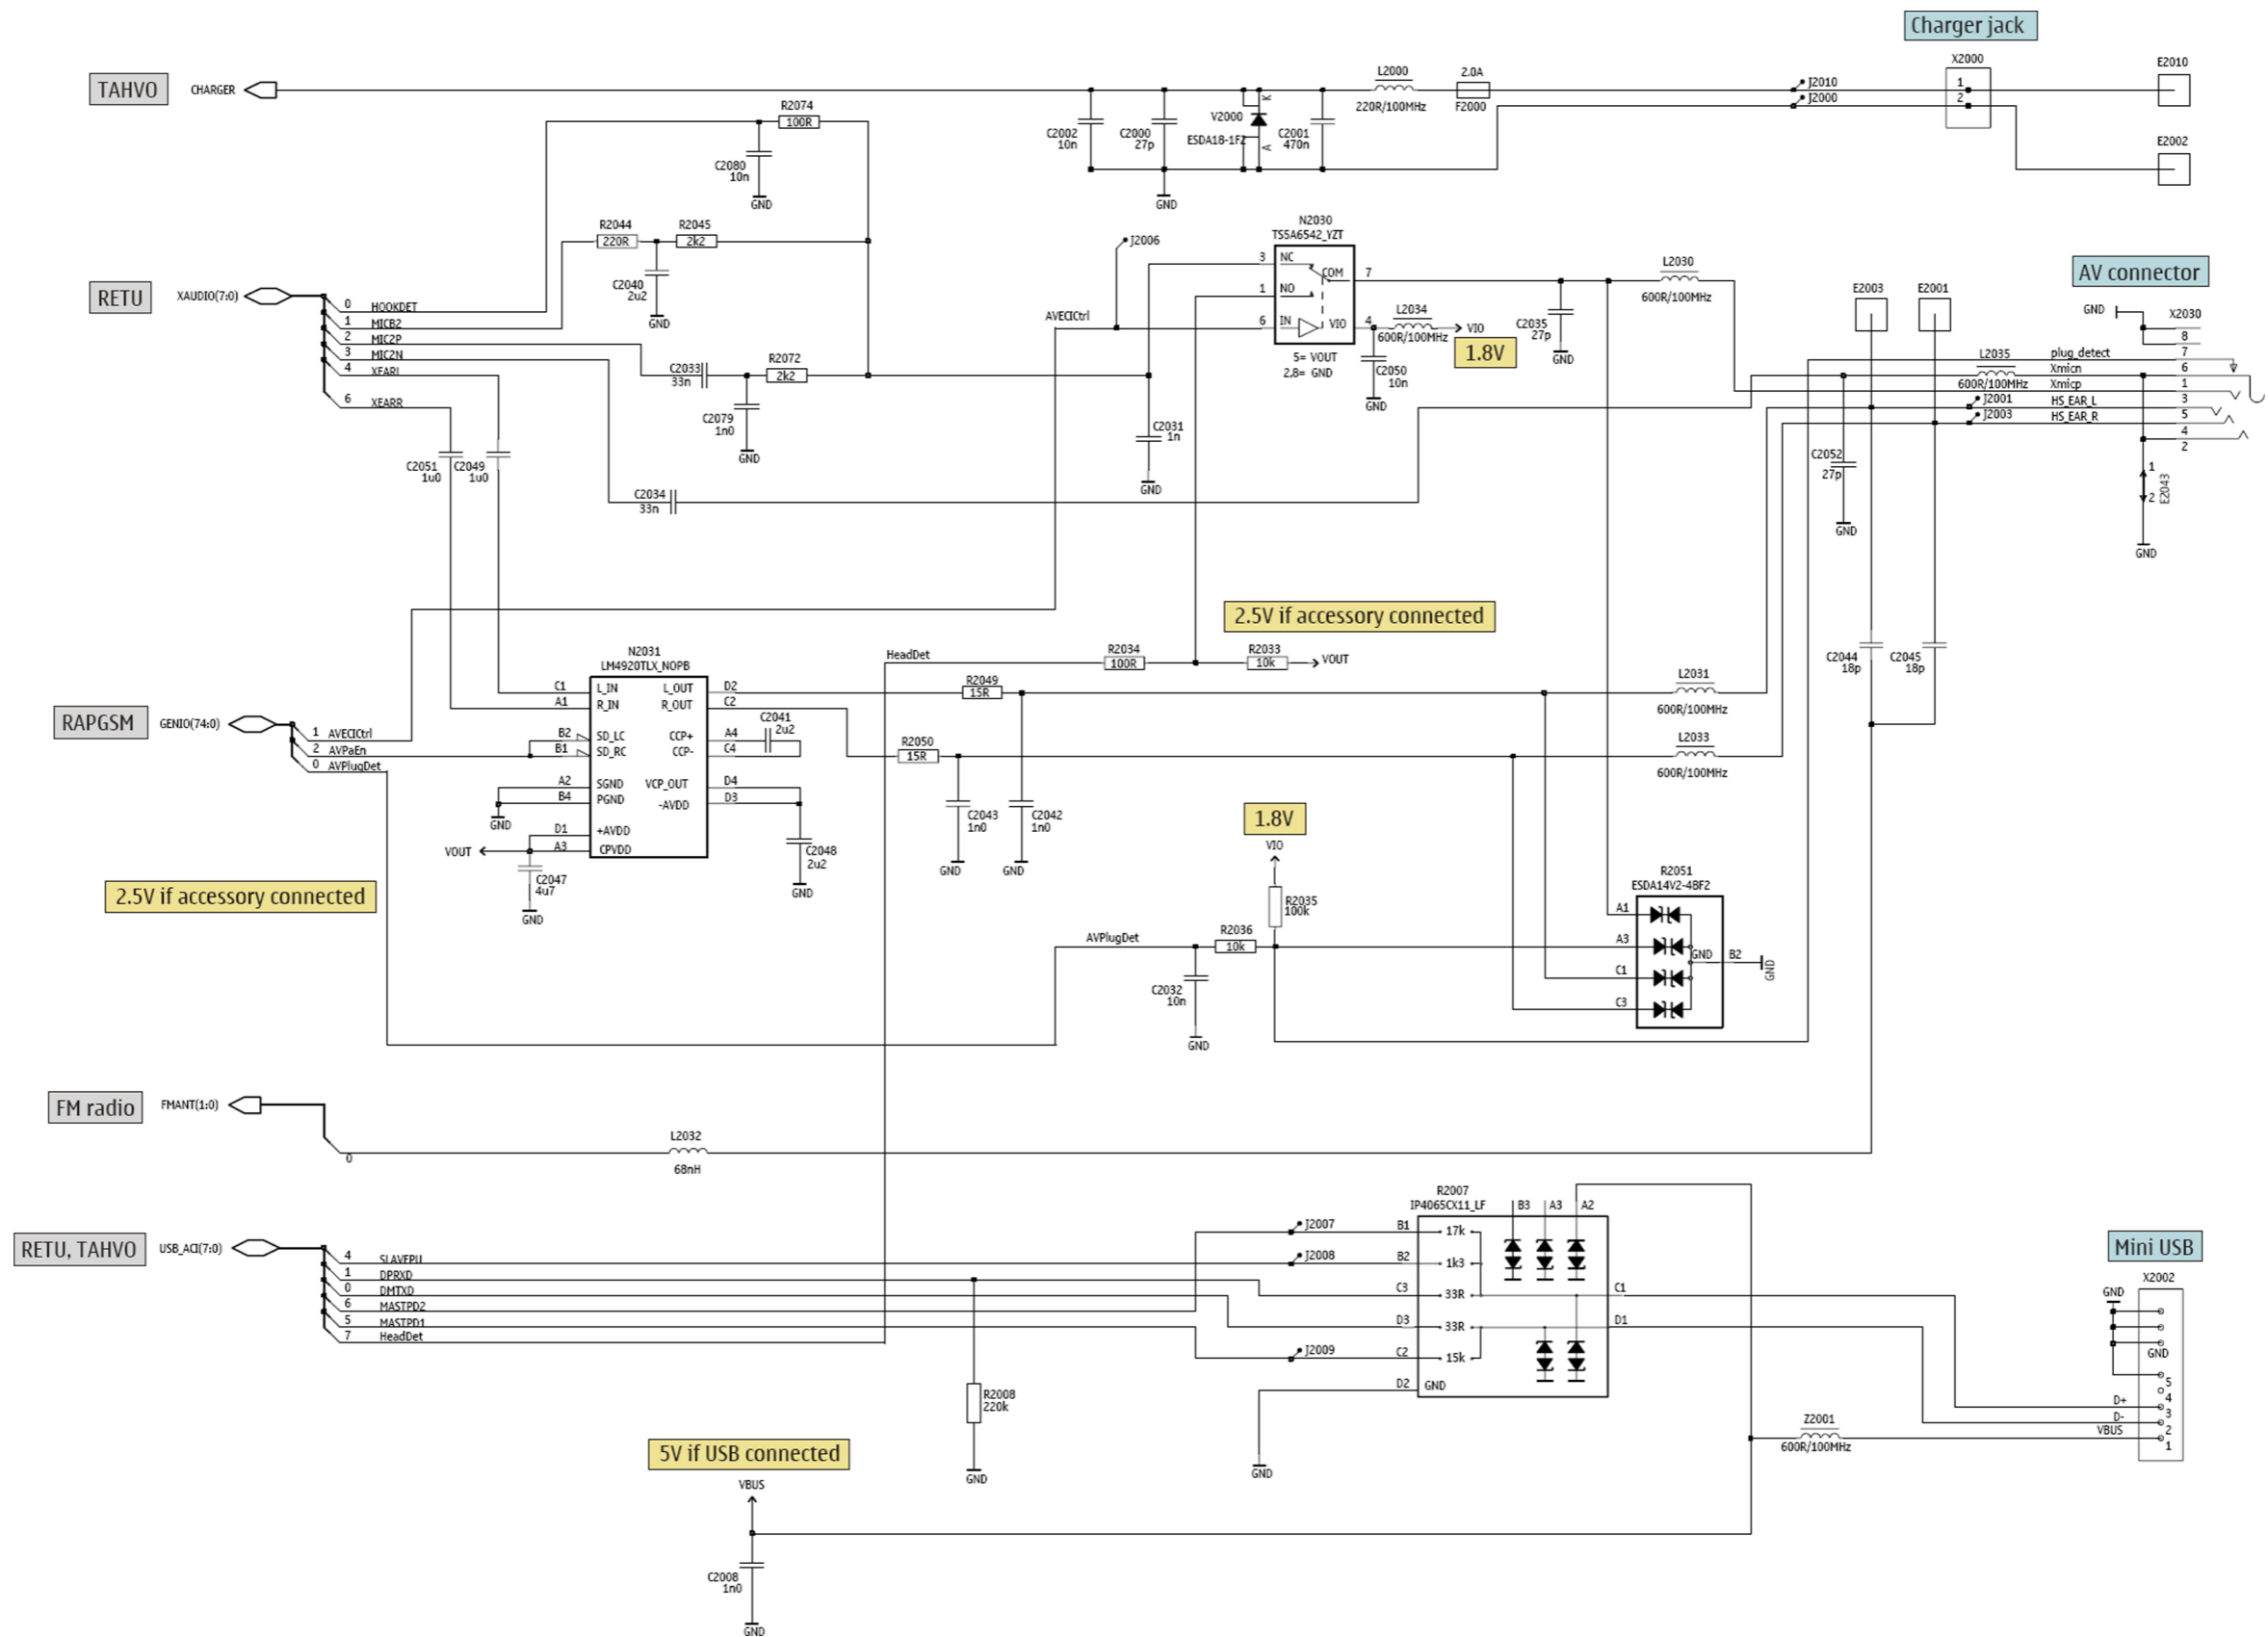


■ RETU, SIM, Audio

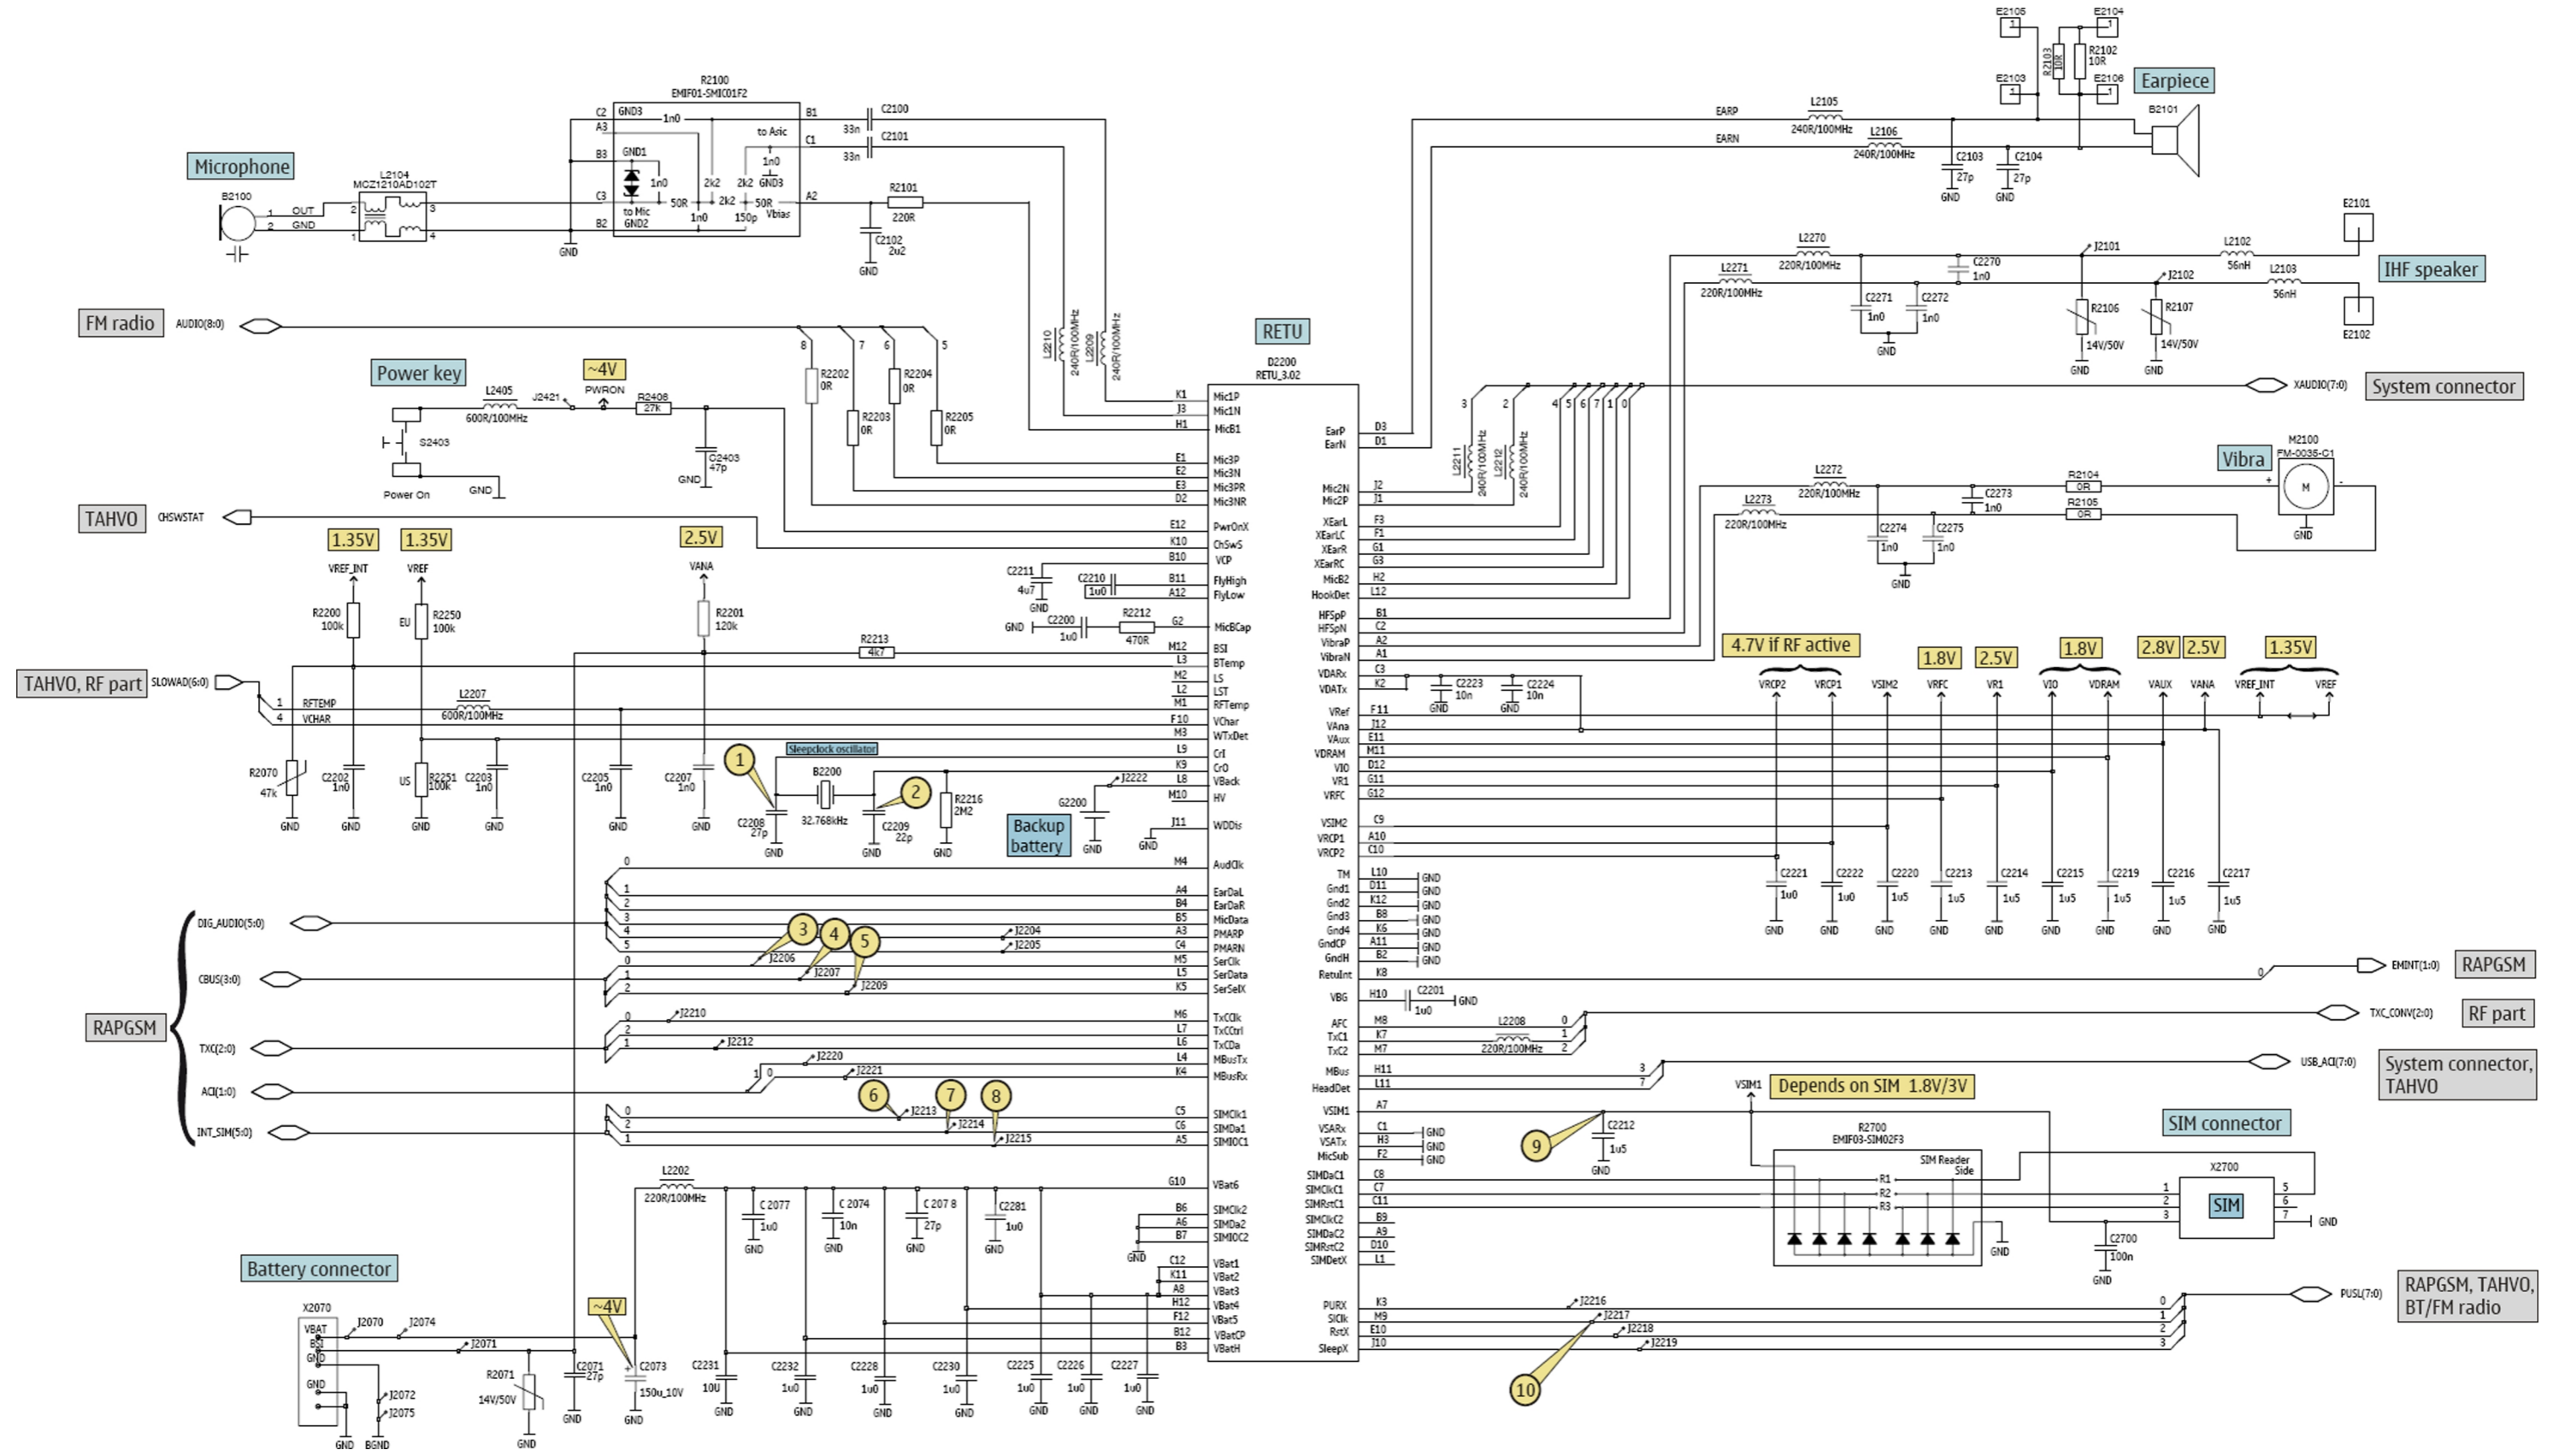


■ **TAHVO**

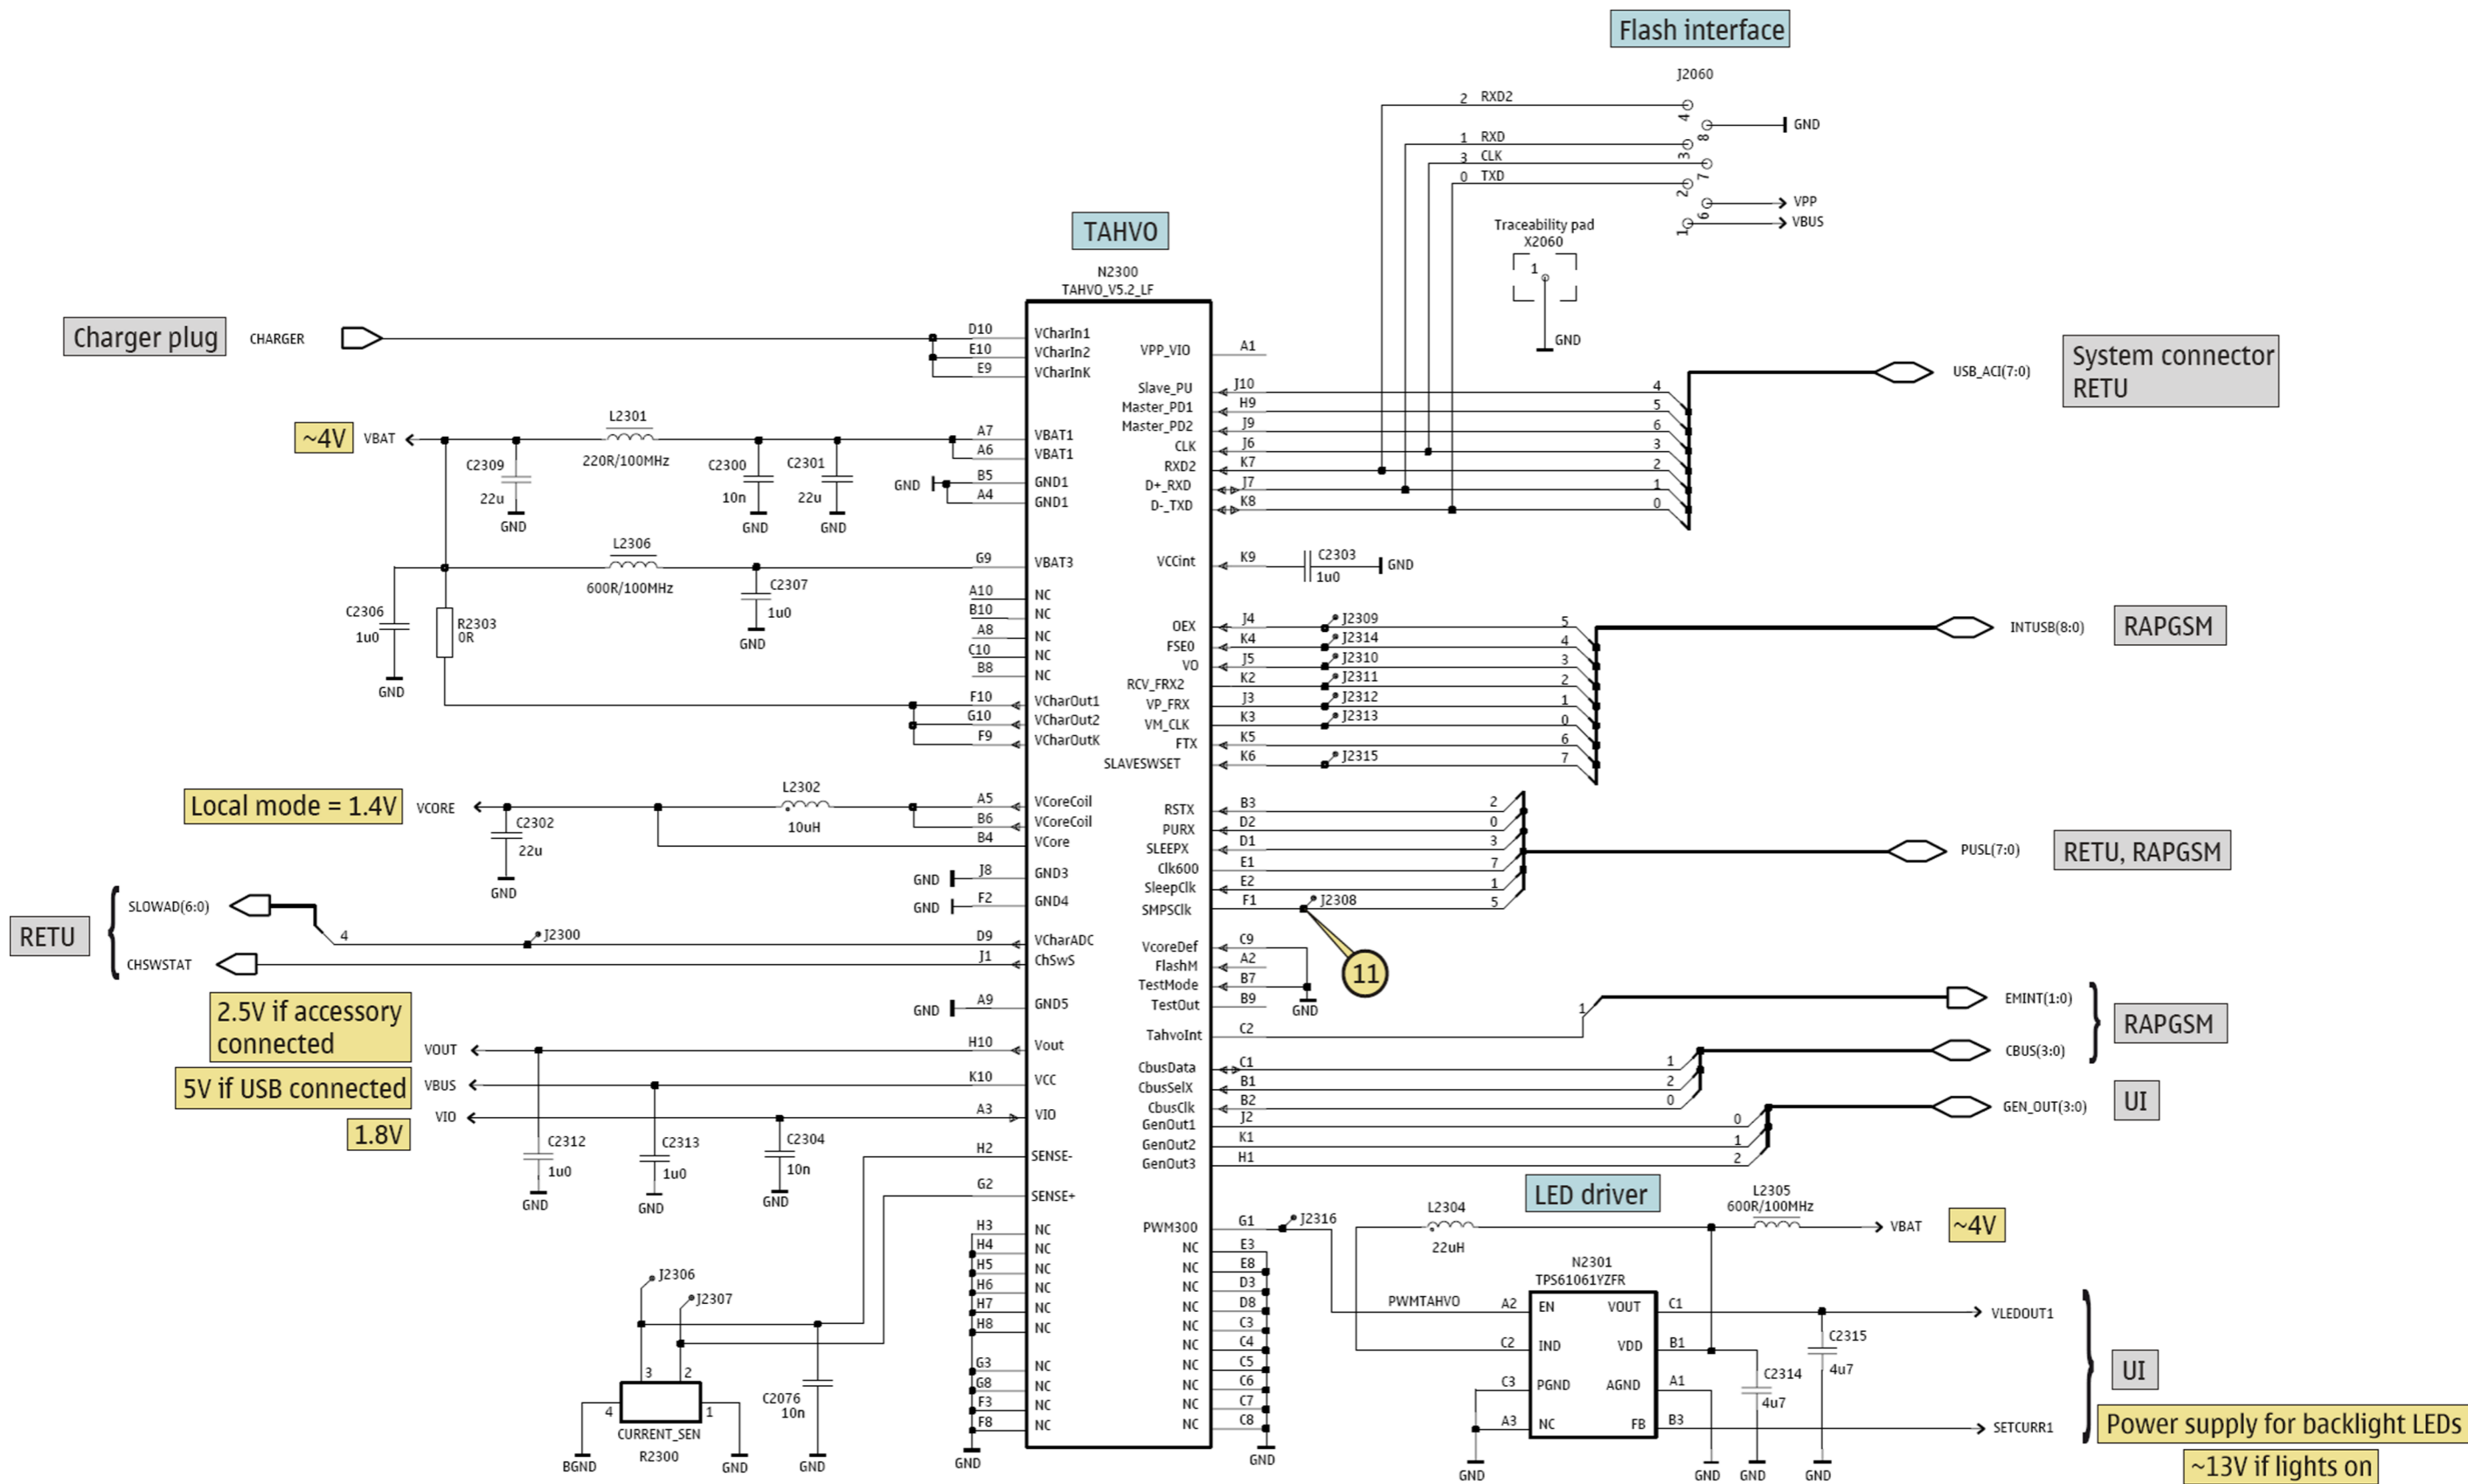


■ **RAPGSM, Combo, microSD**

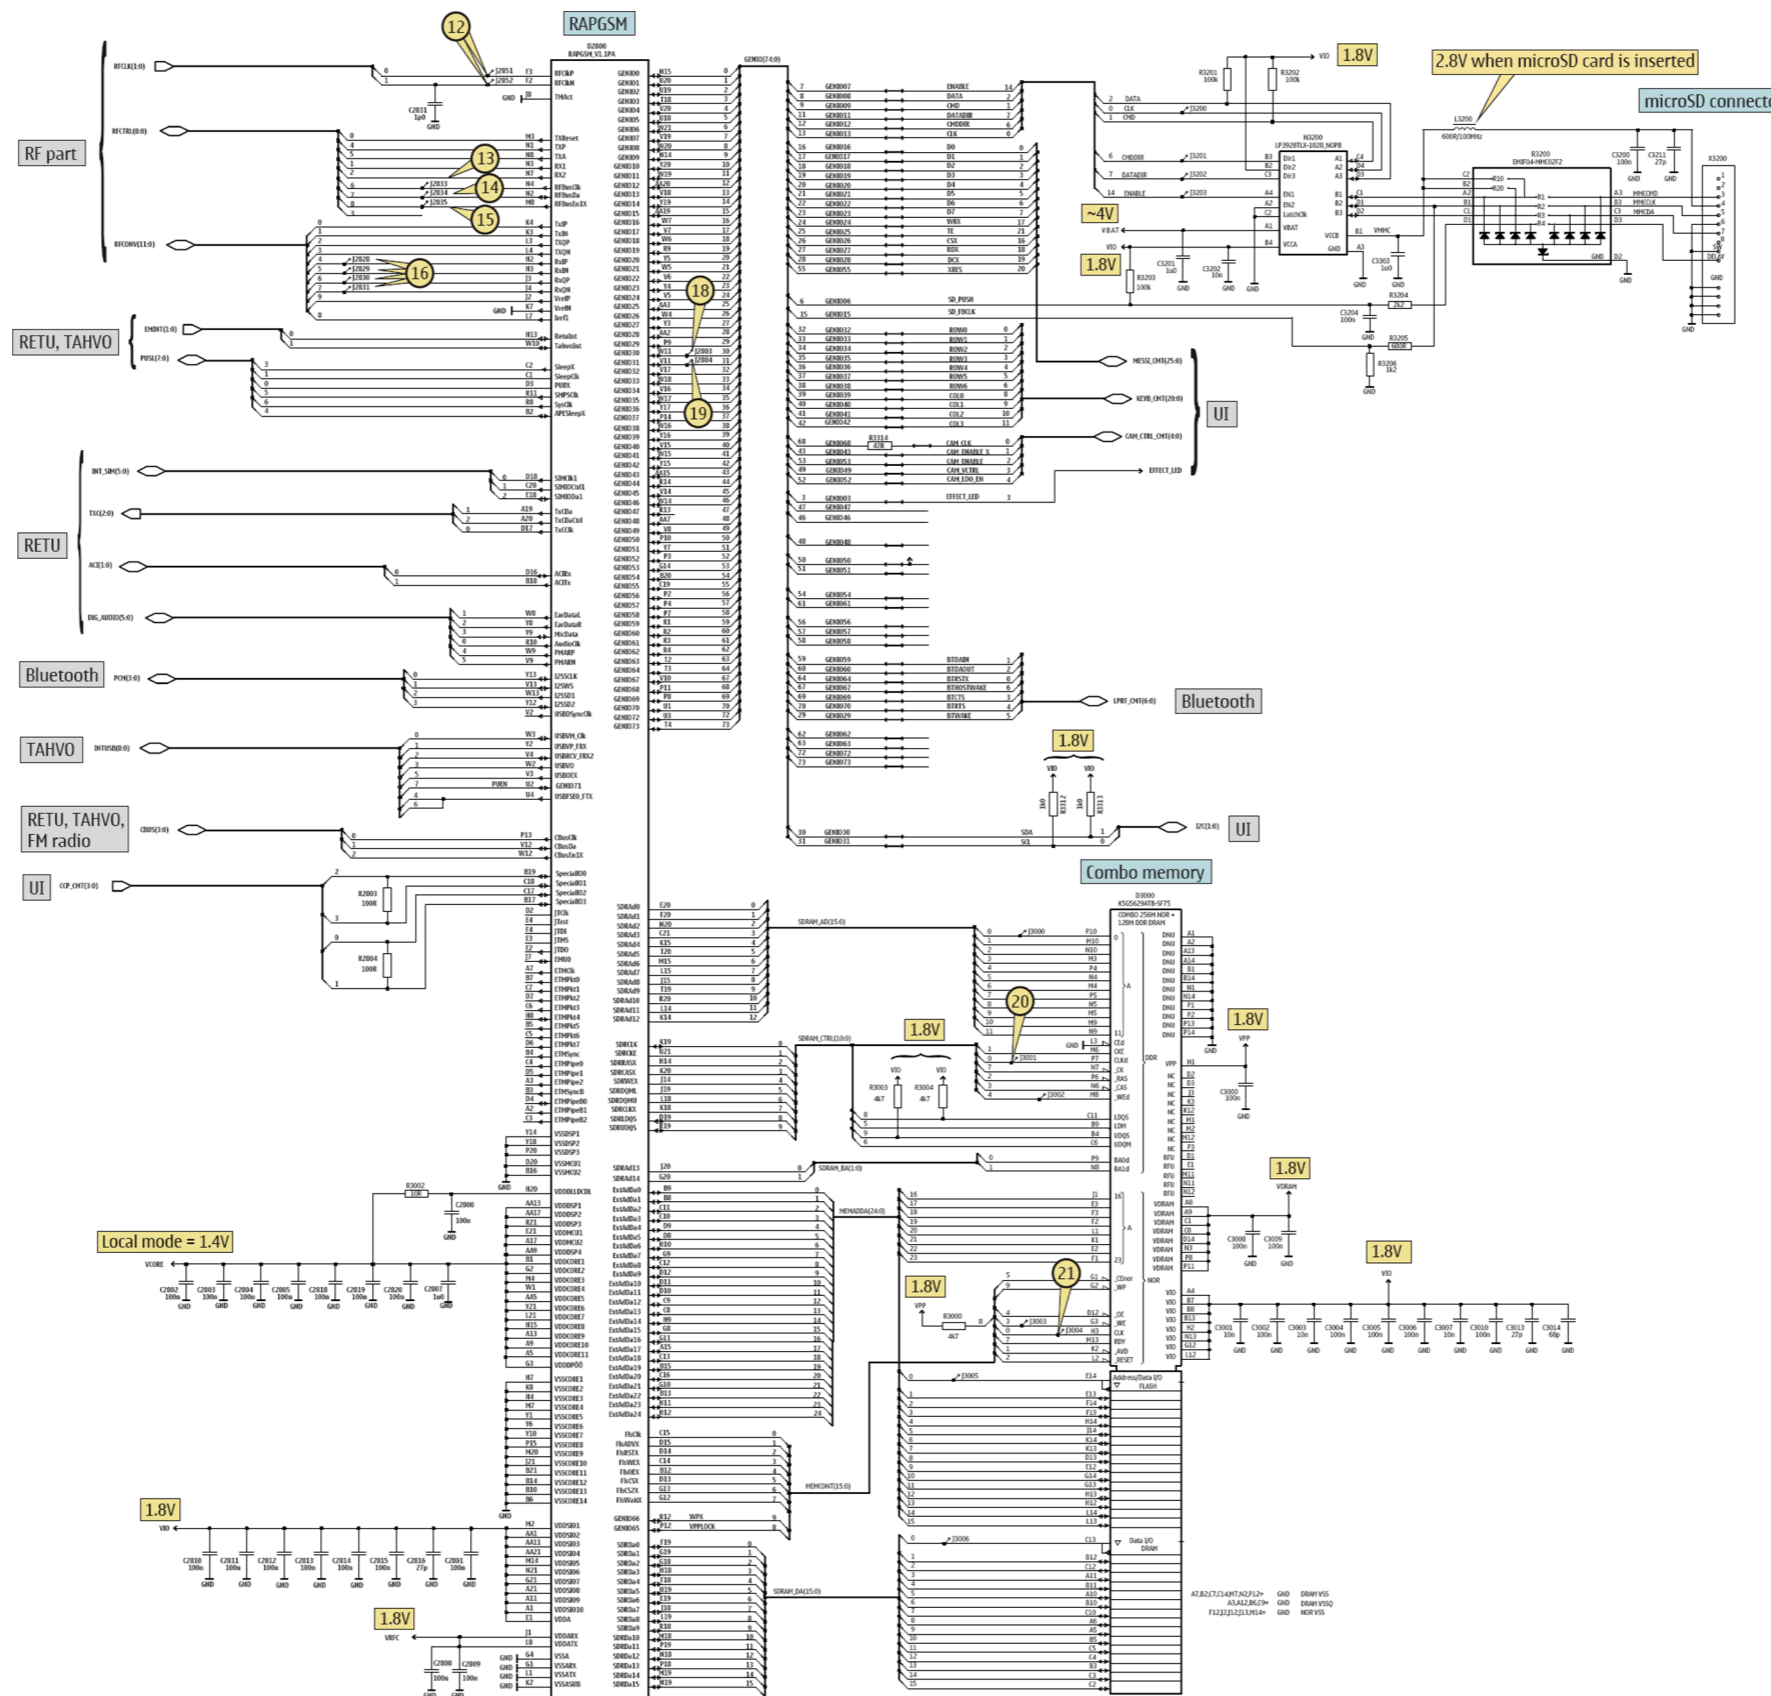


■ FM radio, Bluetooth

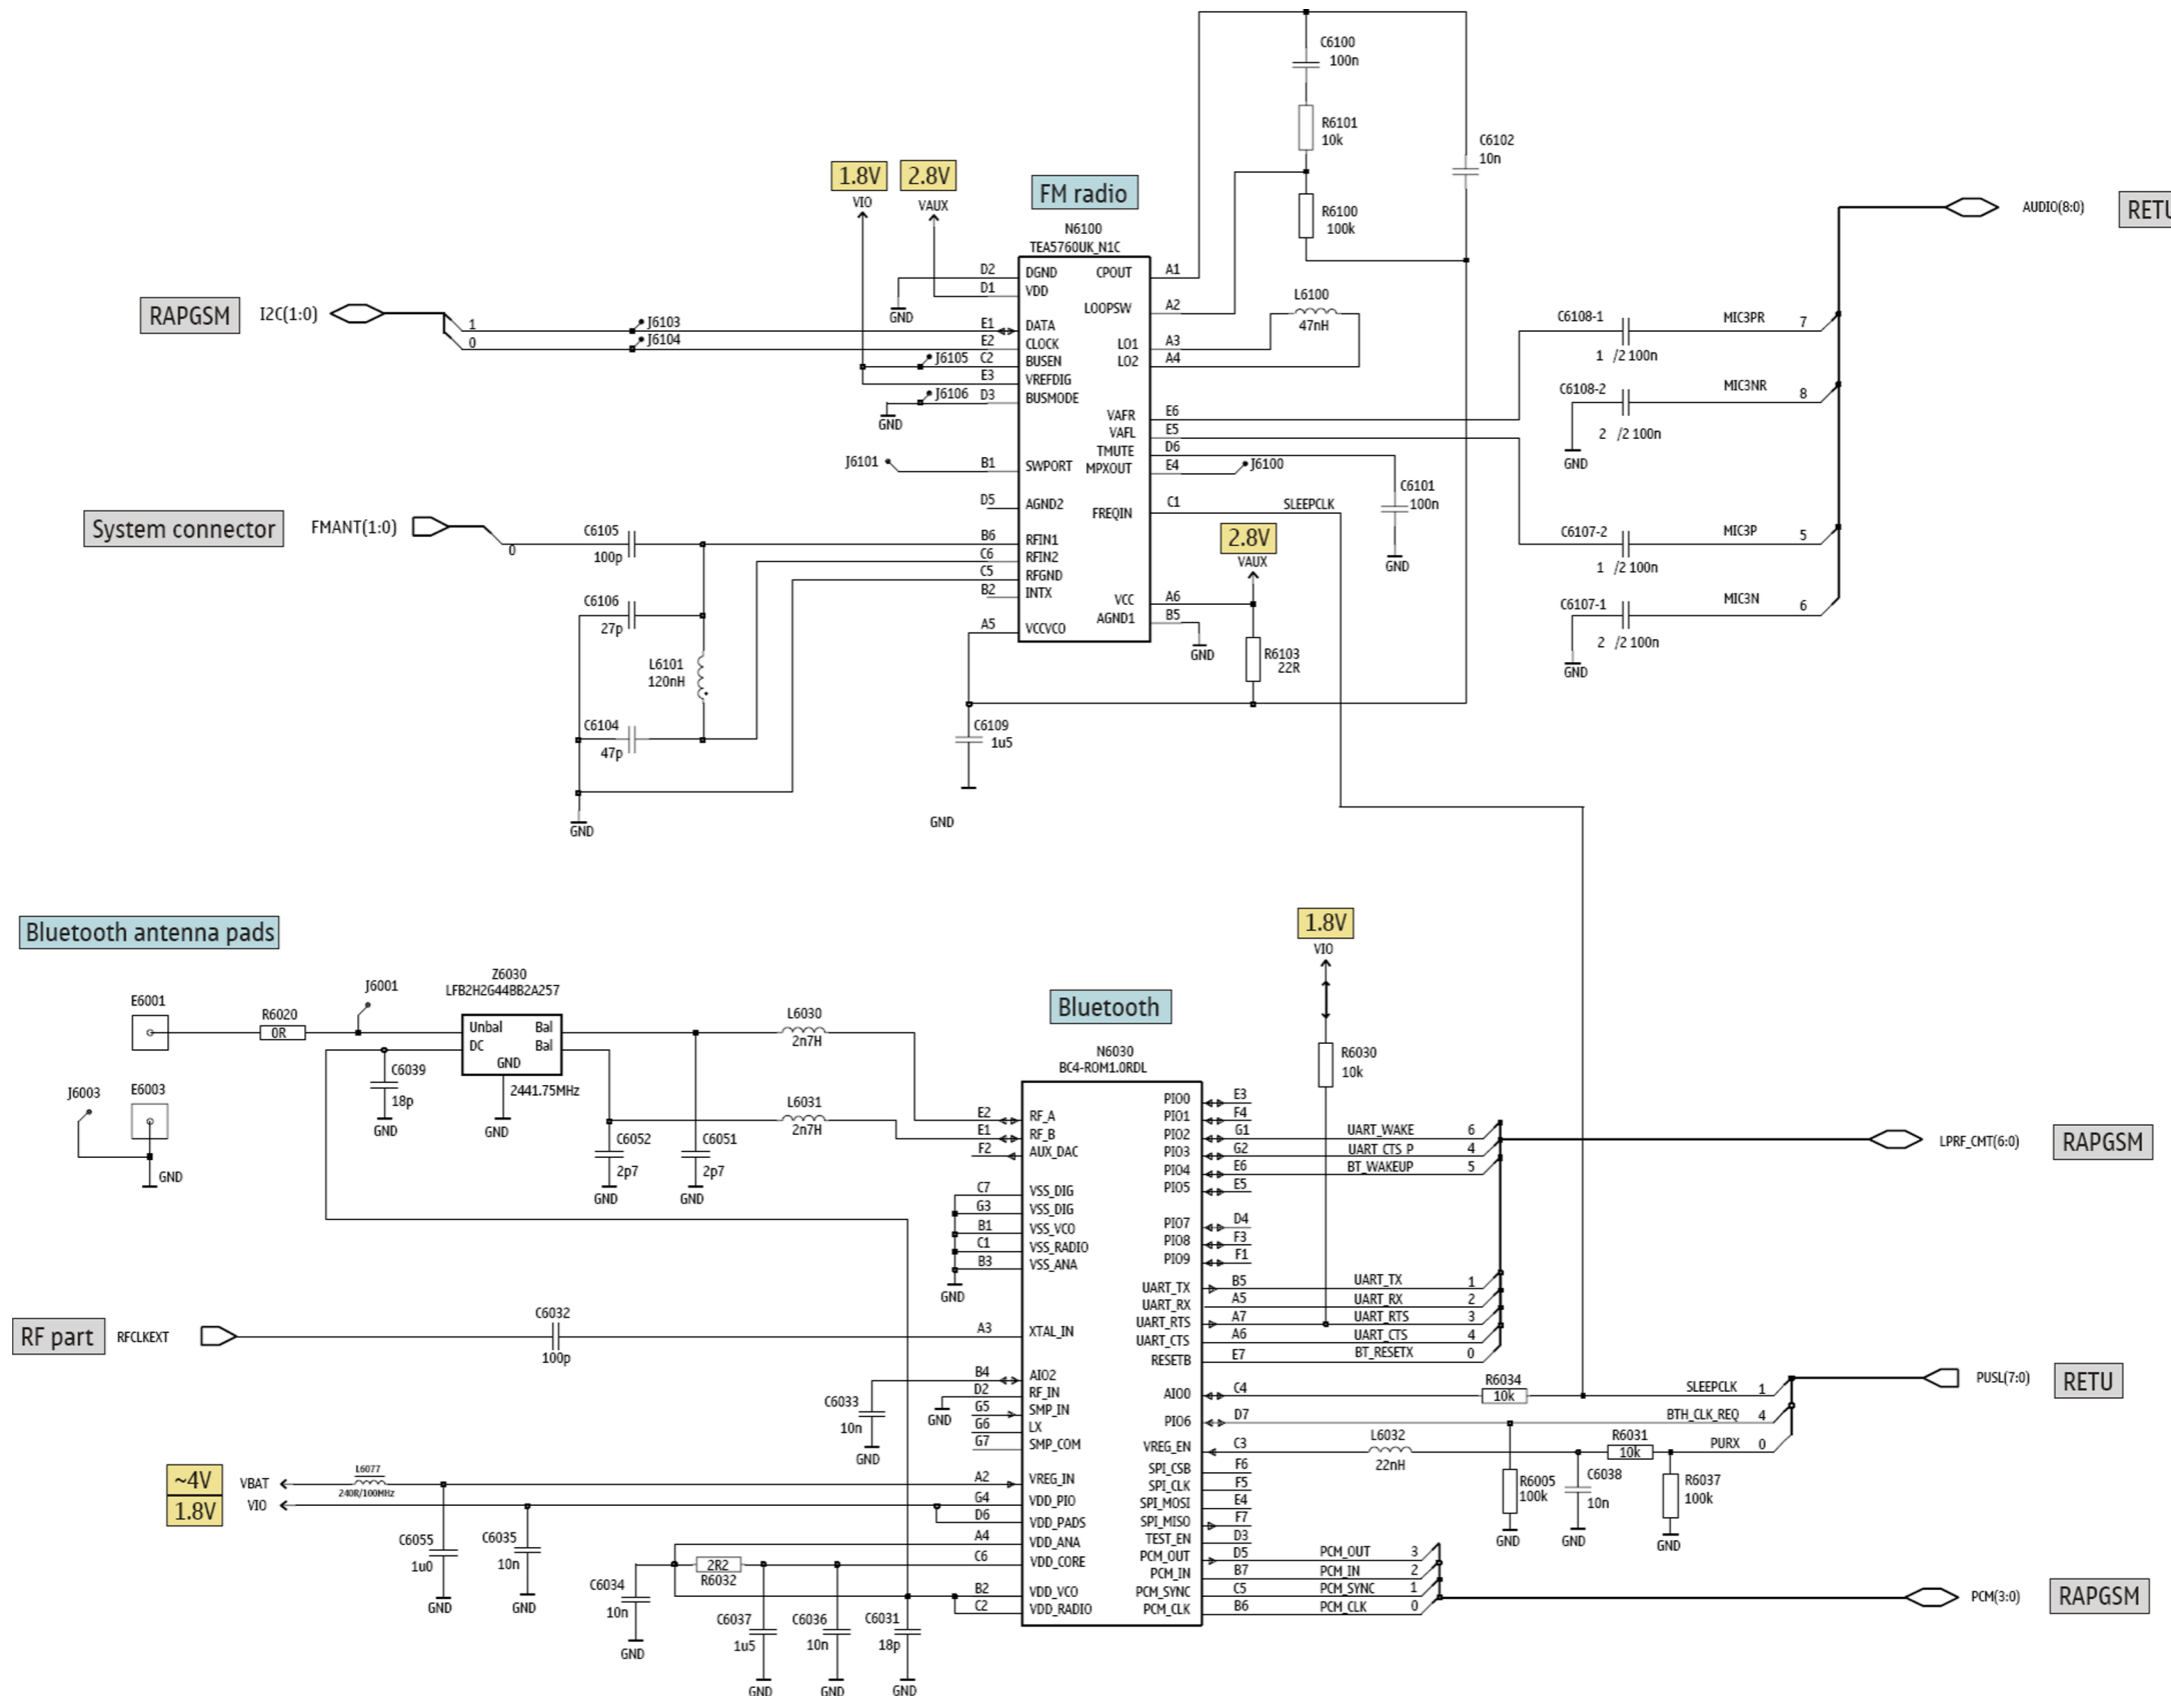

■ User interface

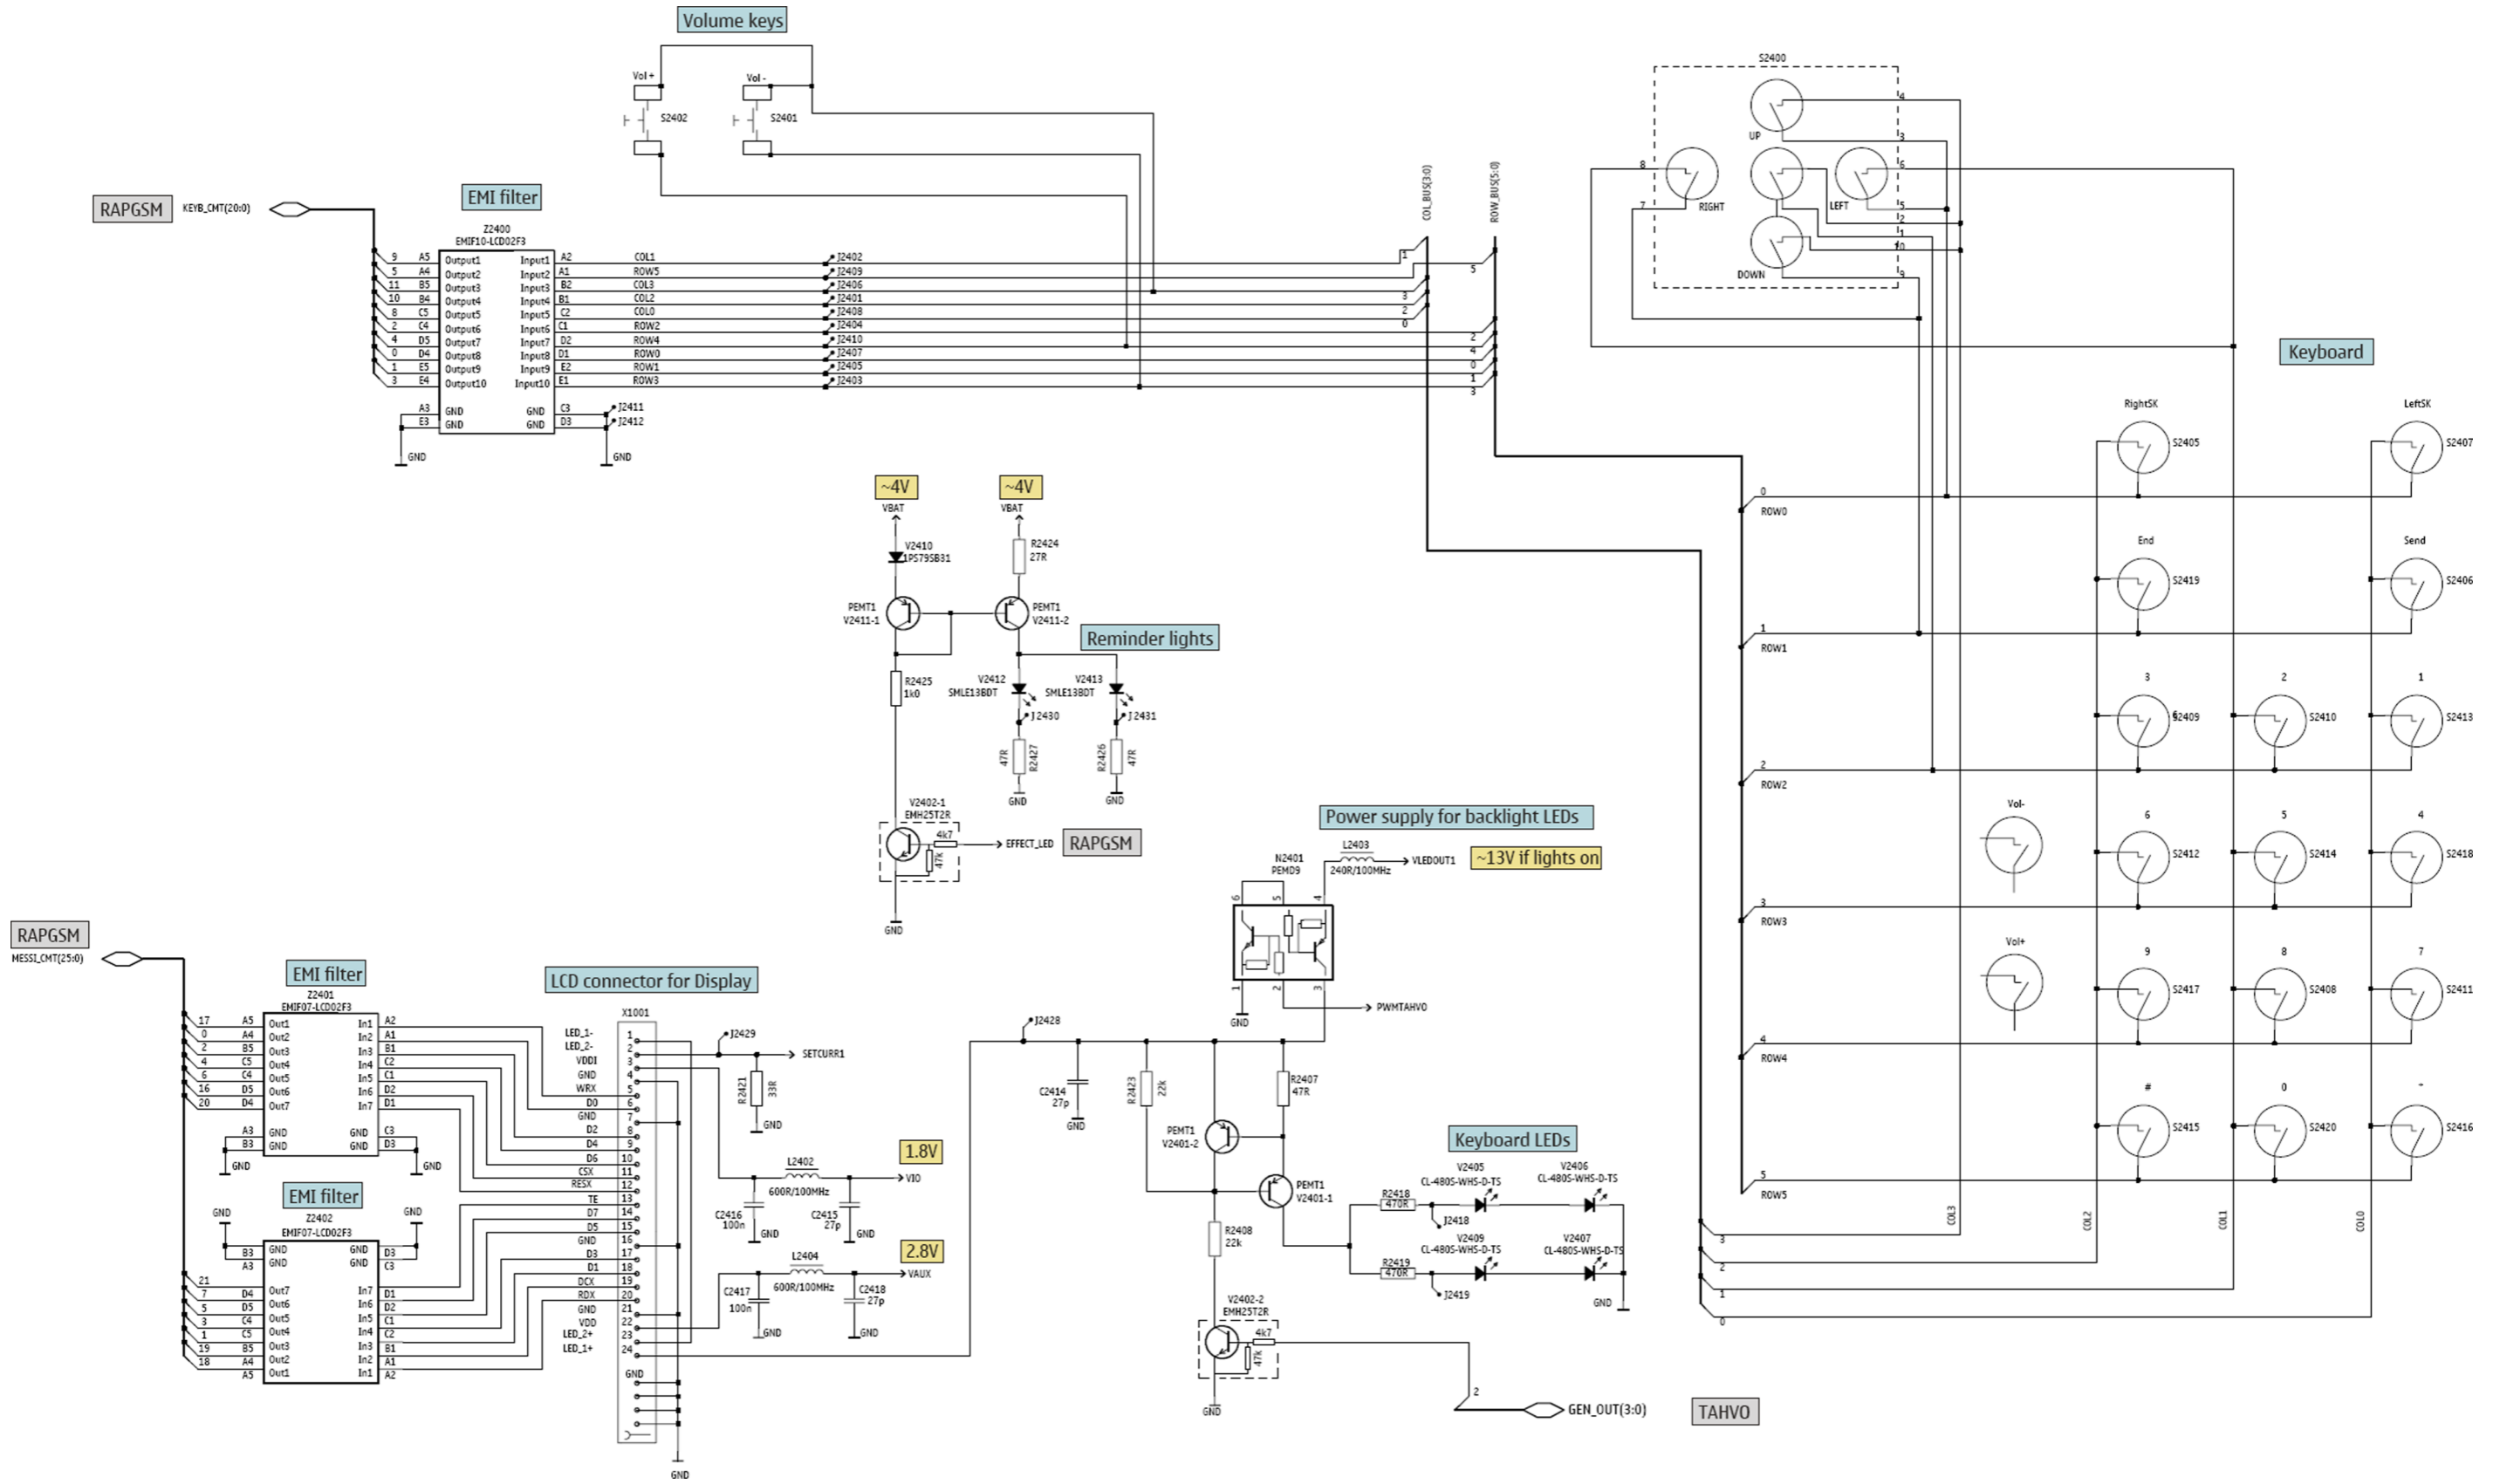


■ Camera


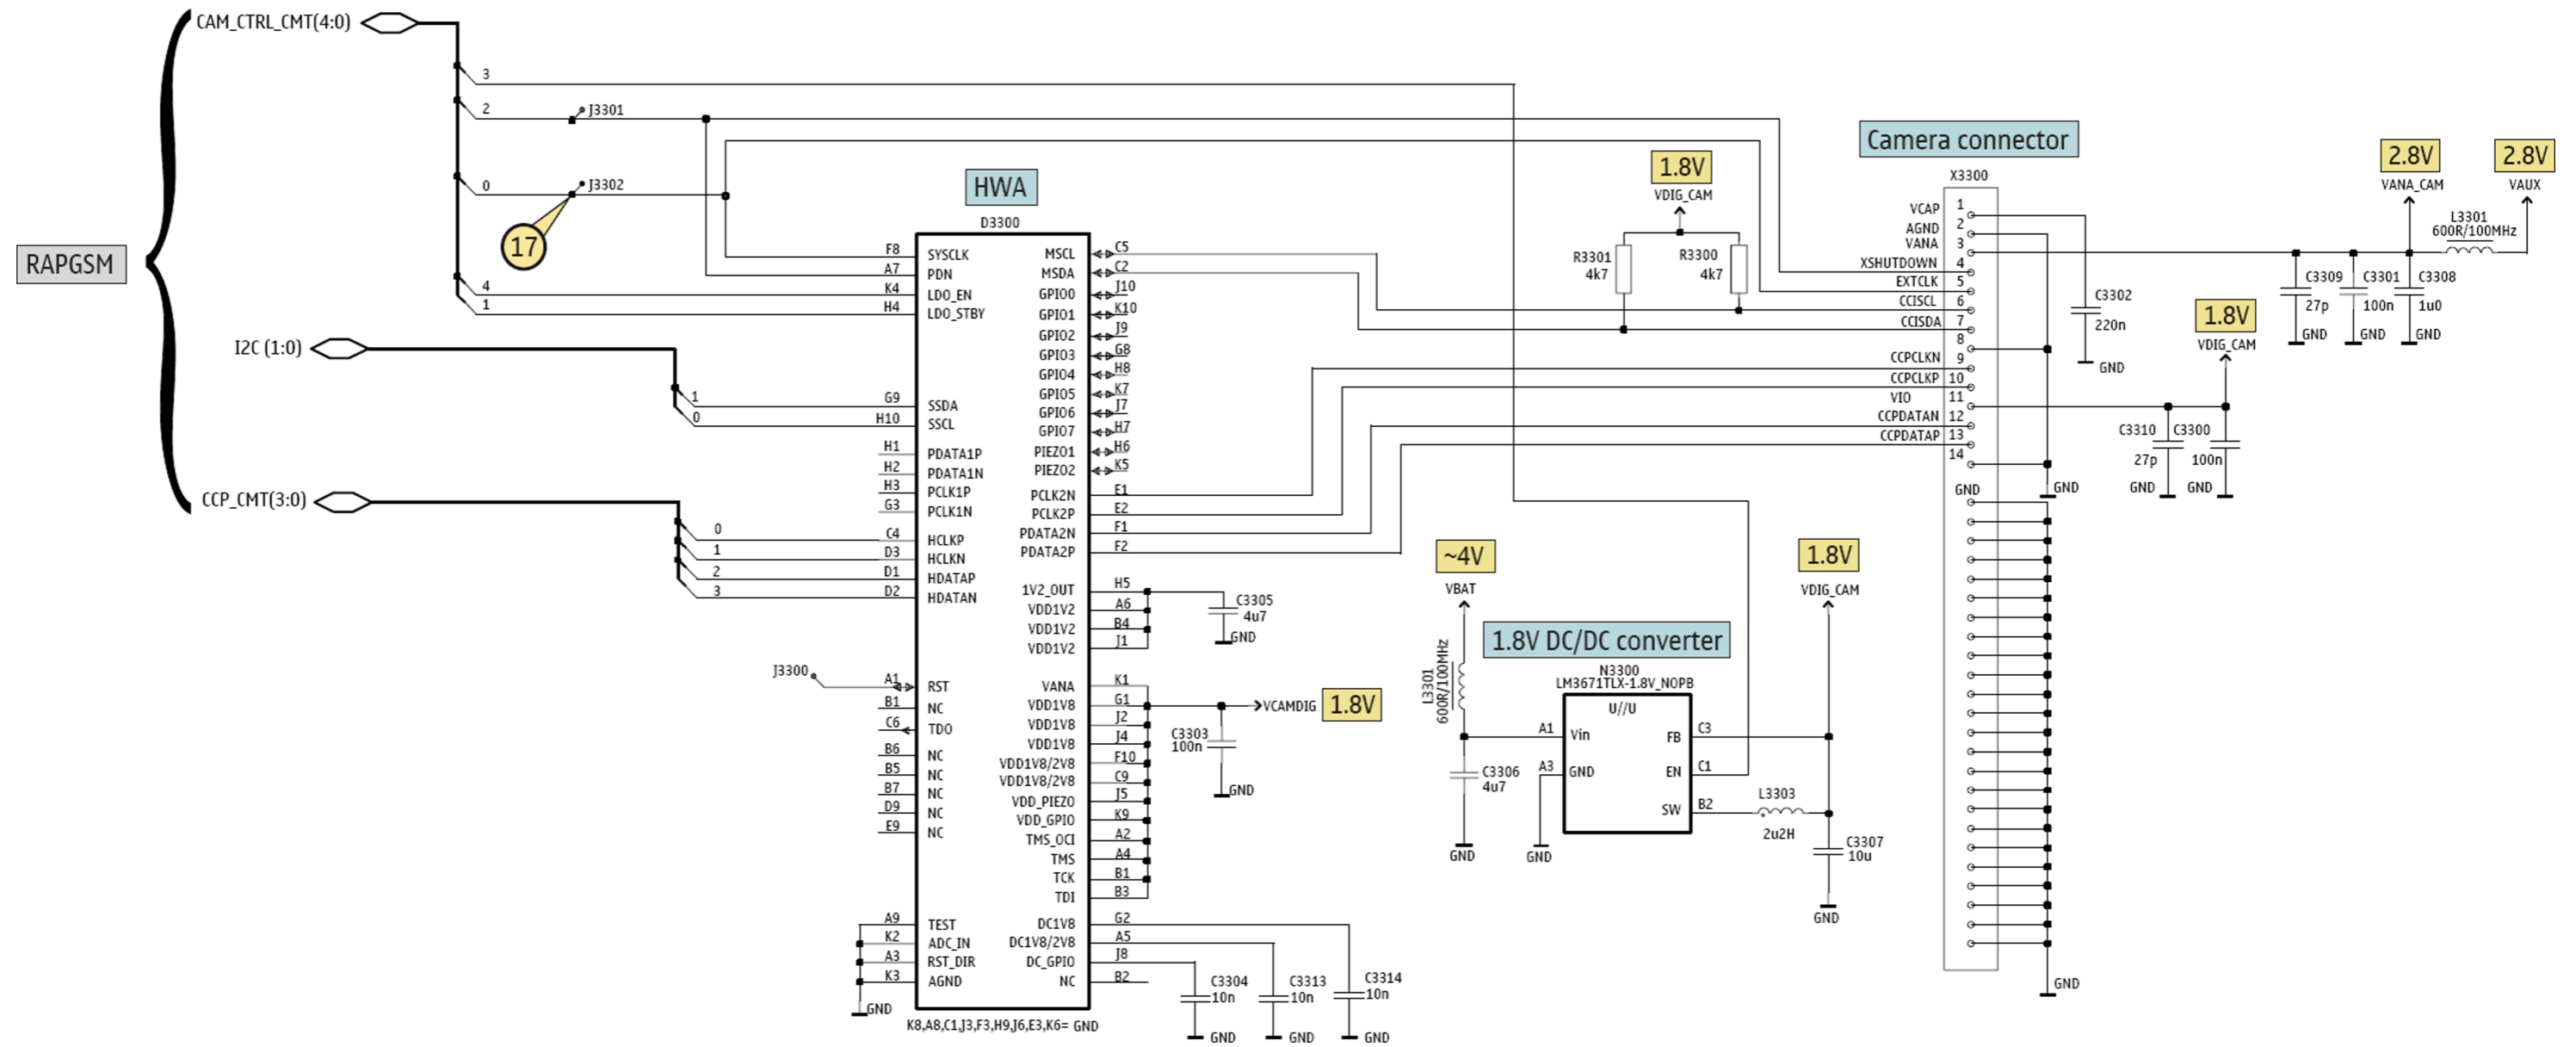




RF part

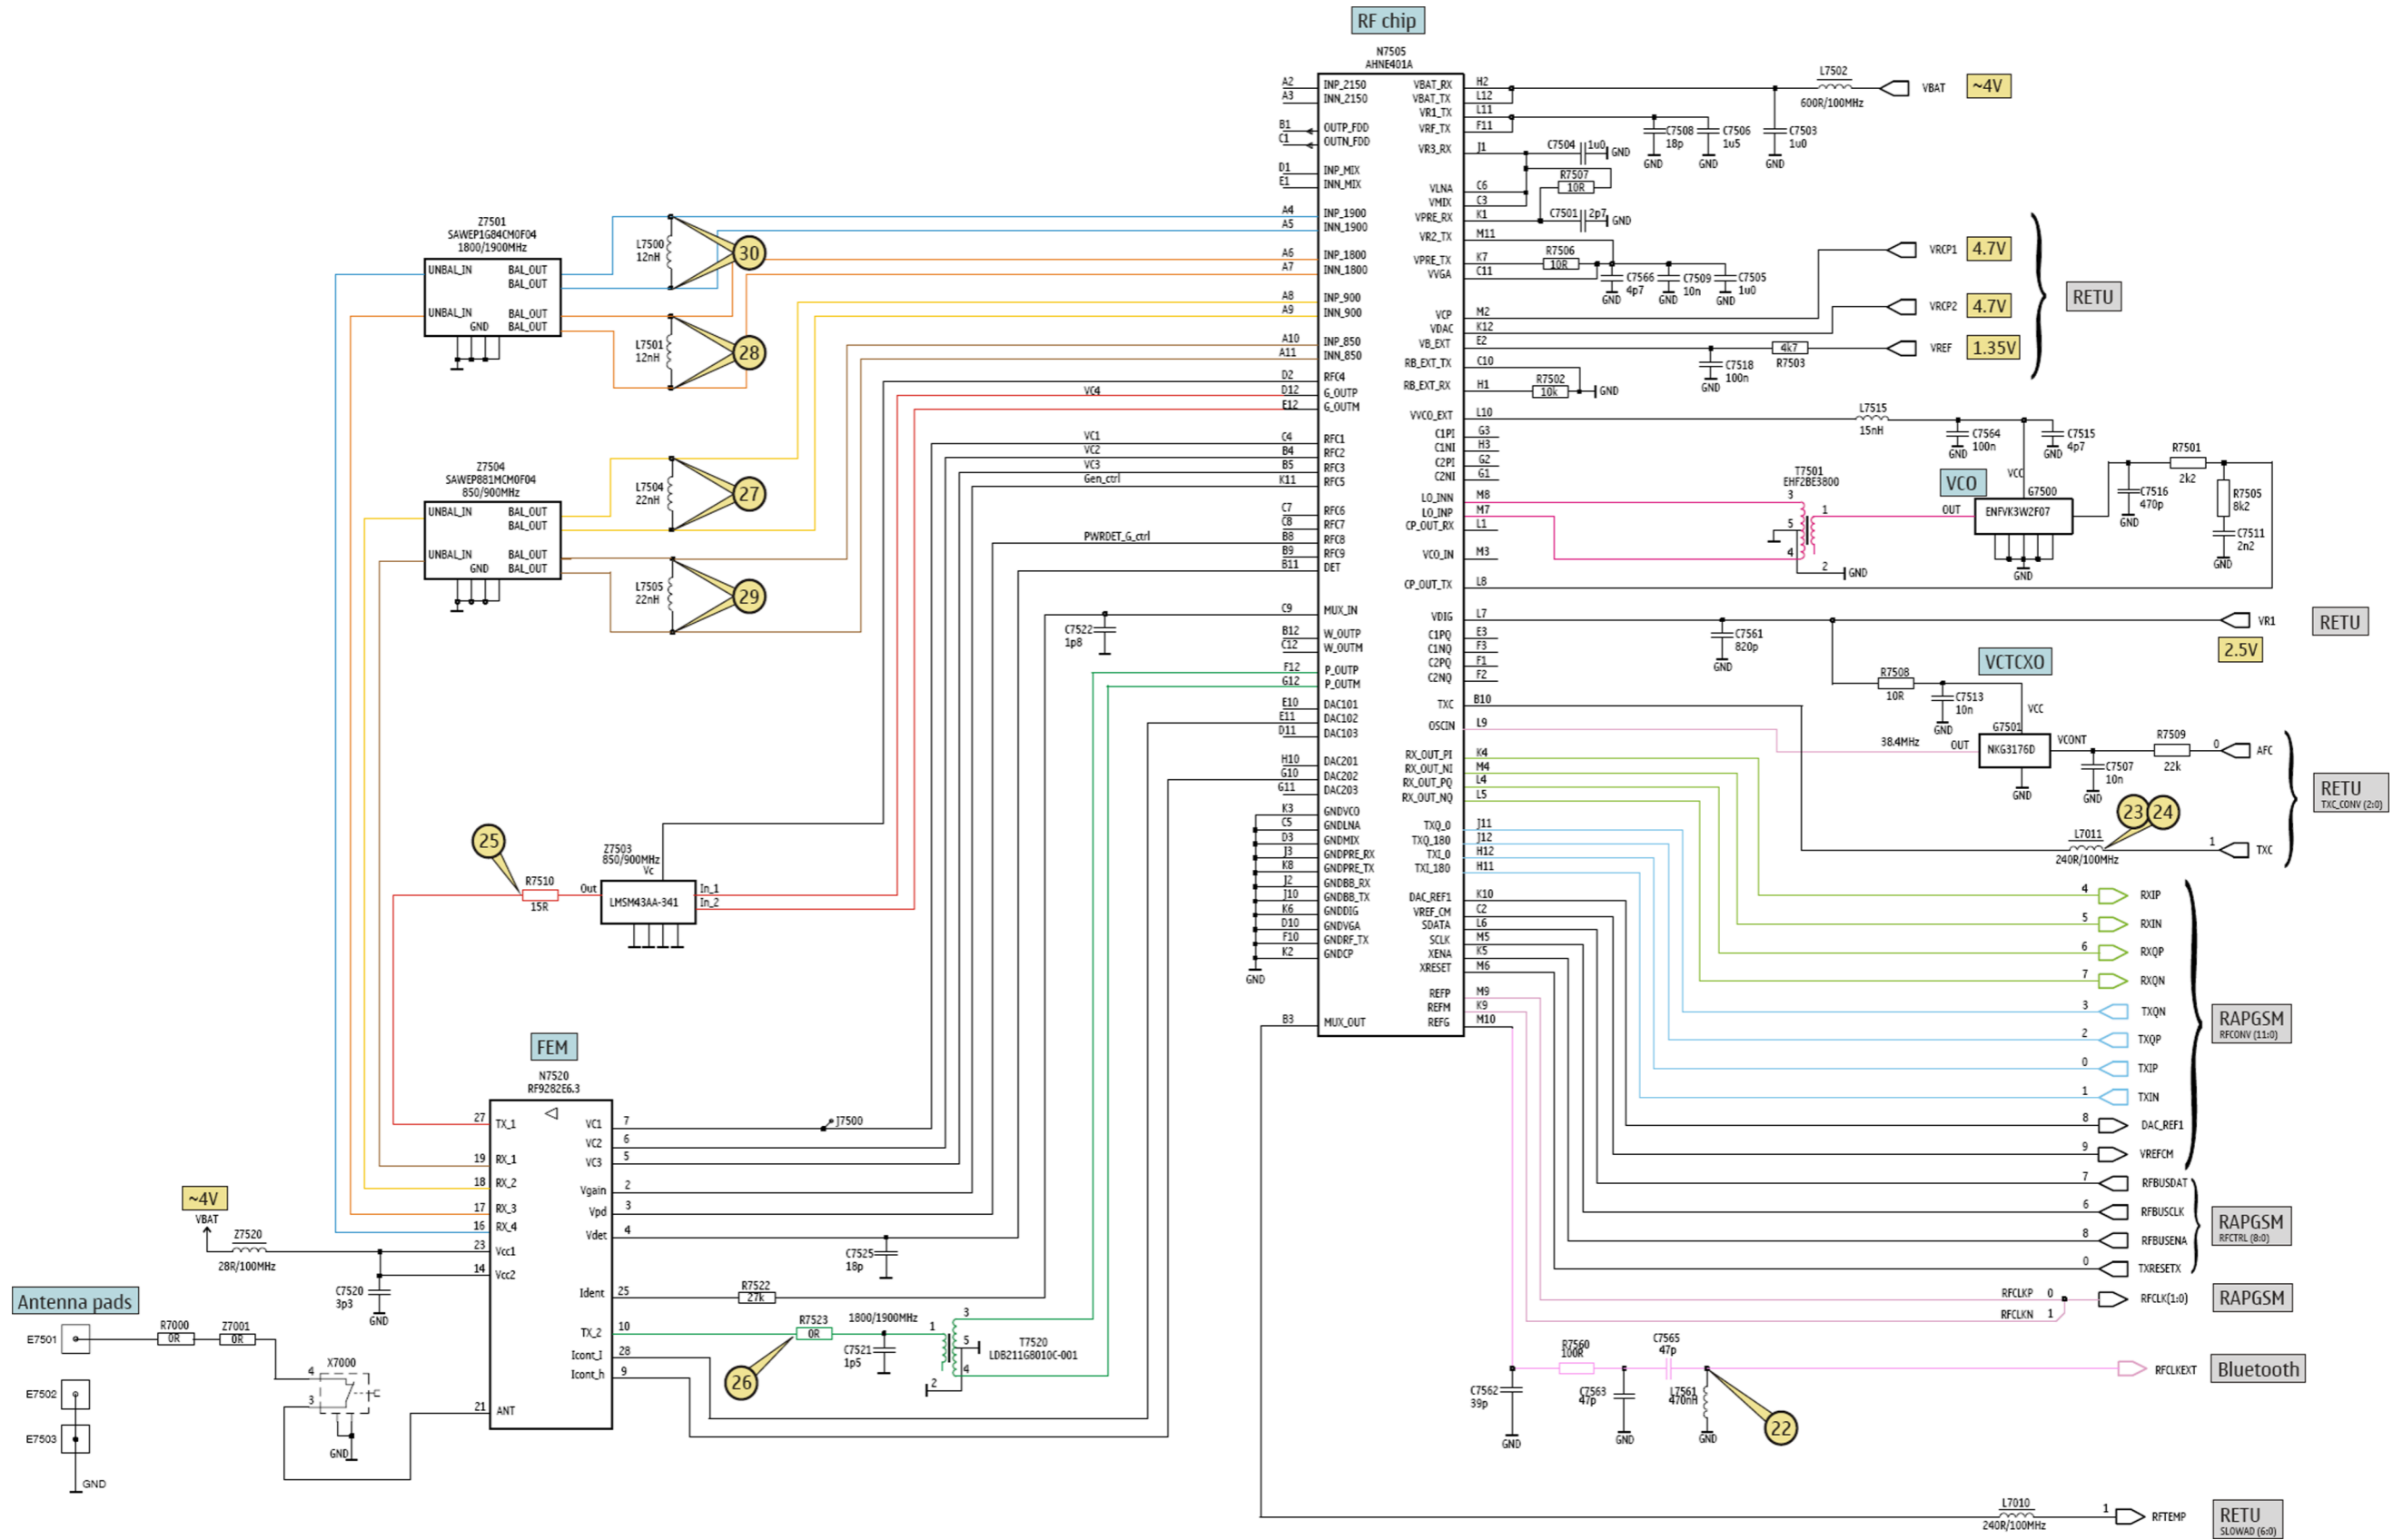


■ Signal overview

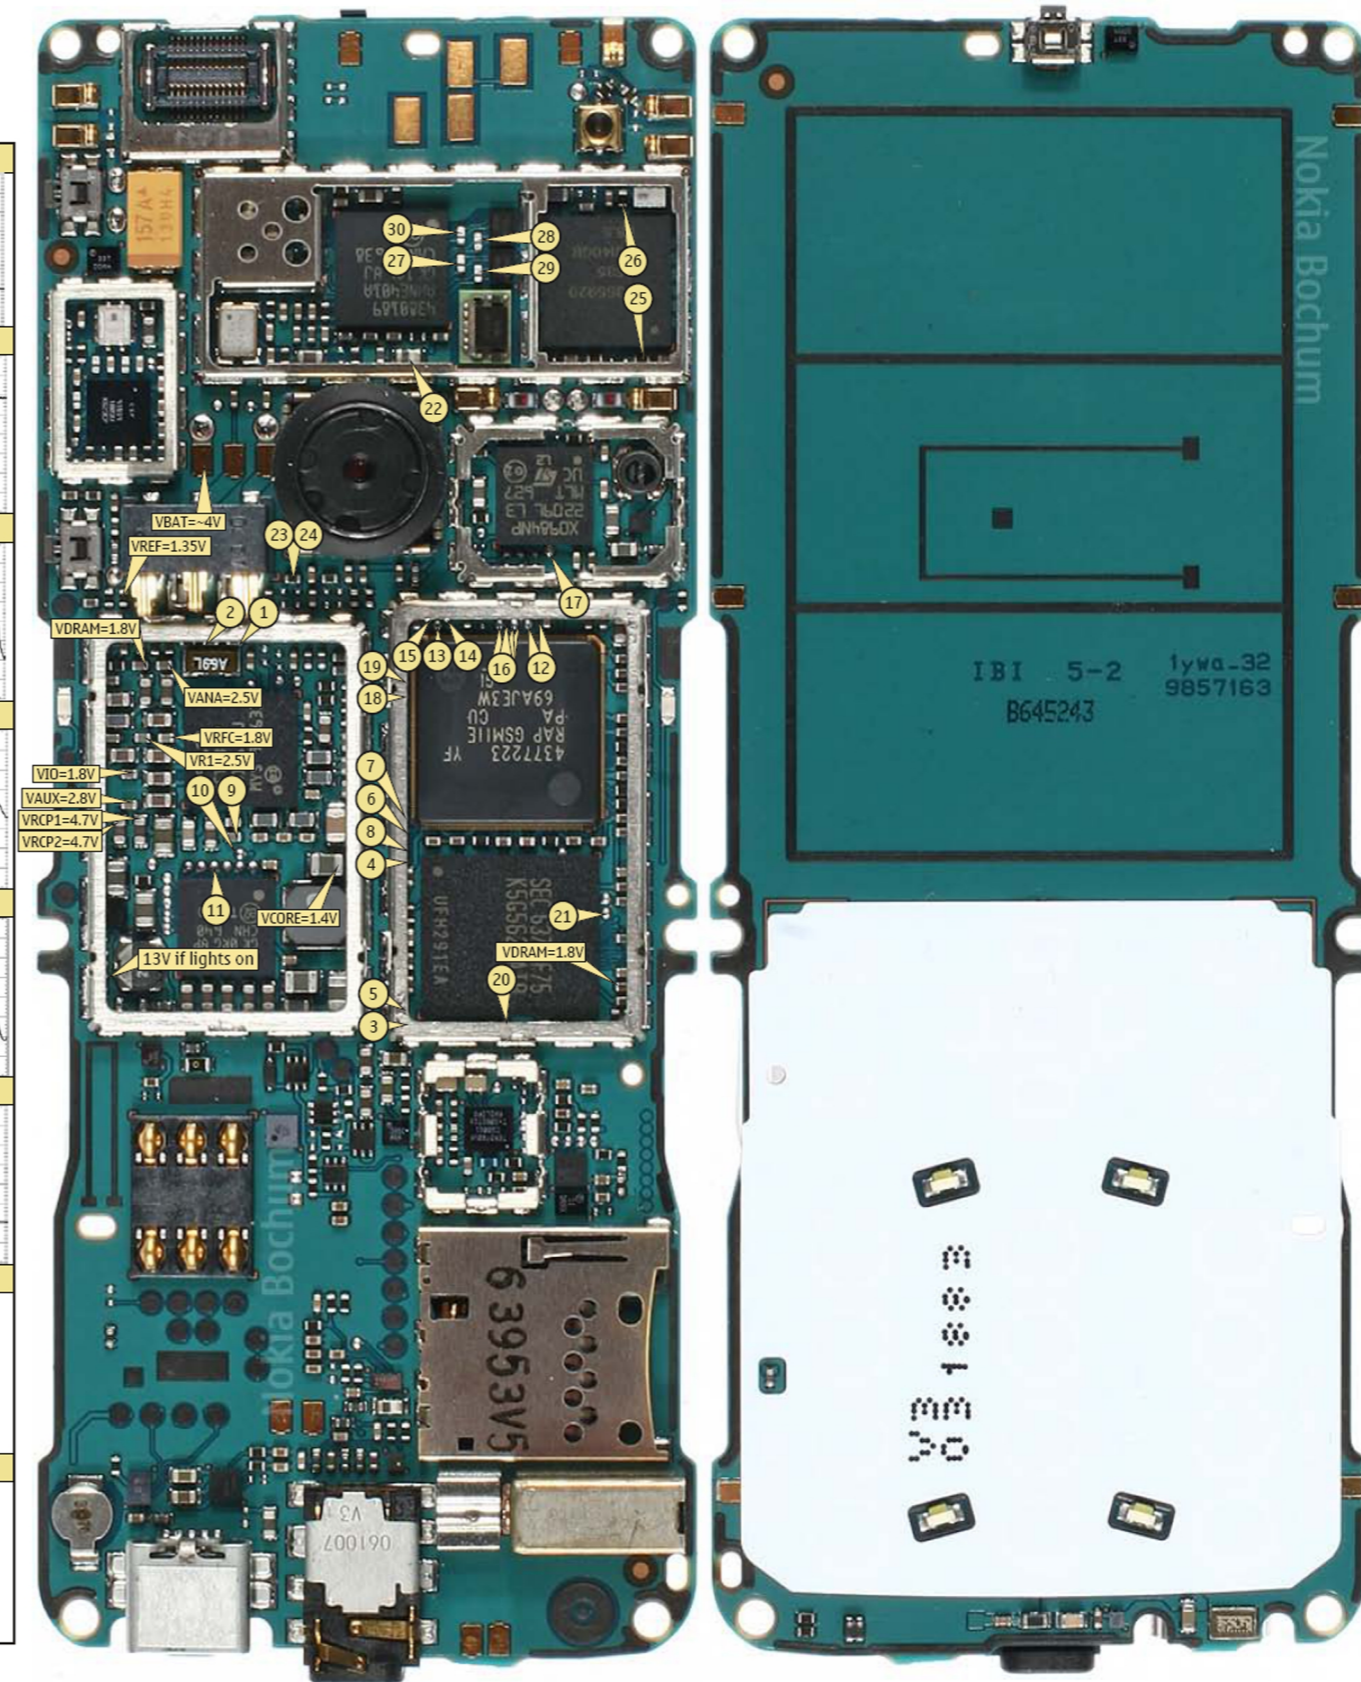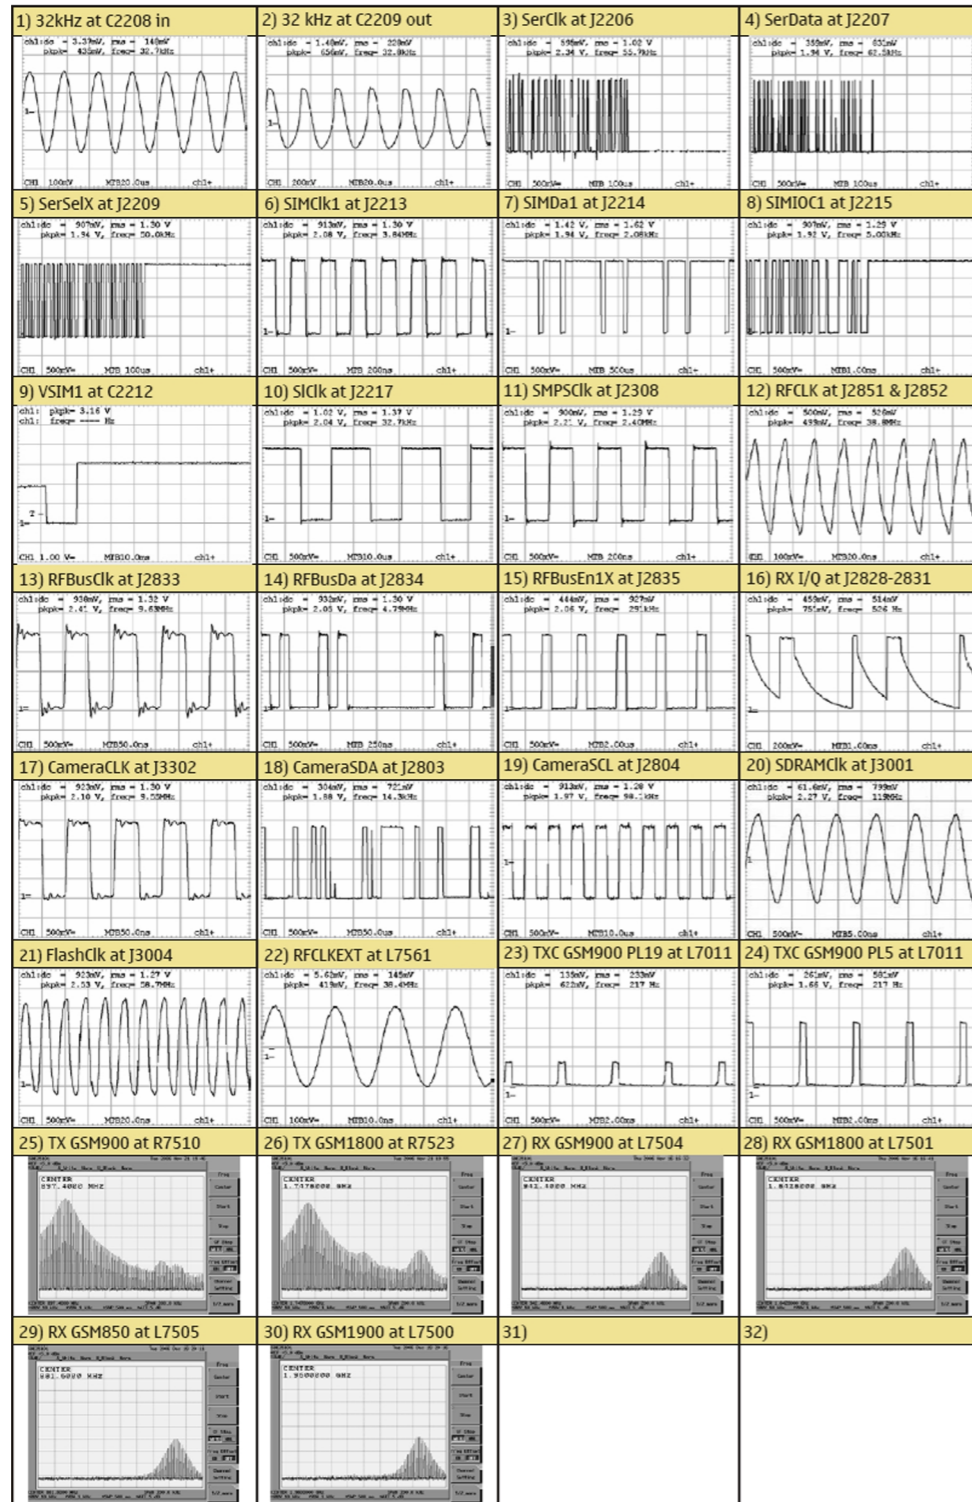

■ Component finder

| B     | C     | D     | E     | F     | G     | H     | I     | J     | K     | L     | M     | N     | O     | P     | Q  | R | S | T | U |
|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|----|---|---|---|---|
| B2100 | B8    | C2272 | K4    | C3301 | N5    | E     | J2311 | K3    | L     | R2036 | D5    | R6100 | G7    |       |    |   |   |   |   |
| B2101 | T6    | C2274 | K4    | C3302 | N4    | E2001 | D4    | J2312 | K3    | L2000 | A5    | R2044 | H5    | R6102 | H7 |   |   |   |   |
| B2200 | M3    | C2275 | K4    | C3303 | O8    | E2002 | A6    | J2313 | K3    | L2030 | C5    | R2045 | E5    | R6103 | G6 |   |   |   |   |
| C     | C2281 | L2    | C3304 | O8    | E2003 | D4    | J2314 | K3    | L2031 | C4    | R2049 | D4    | R6104 | G7    |    |   |   |   |   |
| C2000 | A4    | C2300 | J4    | C3305 | O6    | E2010 | A7    | J2315 | J3    | L2032 | D5    | R2050 | C4    | R6105 | G6 |   |   |   |   |
| C2001 | A3    | C2301 | I4    | C3306 | O8    | E2070 | P3    | J2316 | K2    | L2033 | D5    | R2051 | C5    | R7001 | T8 |   |   |   |   |
| C2002 | A5    | C2302 | K5    | C3307 | O8    | E2071 | P3    | J2401 | C2    | L2034 | D5    | R2052 | C4    | R7002 | T8 |   |   |   |   |
| C2008 | C2    | C2303 | I3    | C3308 | N5    | E2075 | P4    | J2402 | C8    | L2035 | C5    | R2070 | E2    | R7501 | R4 |   |   |   |   |
| C2030 | E5    | C2304 | K4    | C3309 | N5    | E2101 | O6    | J2403 | D2    | L2102 | Q7    | R2071 | N2    | R7502 | S5 |   |   |   |   |
| C2031 | E5    | C2305 | I2    | C3310 | P6    | E2102 | Q9    | J2404 | D2    | L2103 | Q8    | R2072 | E4    | R7503 | Q5 |   |   |   |   |
| C2032 | D5    | C2306 | I4    | C3313 | O8    | E2103 | U6    | J2405 | C8    | L2104 | A7    | R2074 | E5    | R7505 | R4 |   |   |   |   |
| C2033 | E4    | C2307 | I4    | C3314 | P8    | E2104 | T6    | J2406 | C8    | L2105 | O2    | R2100 | H5    | R7506 | R5 |   |   |   |   |
| C2034 | E4    | C2309 | I5    | C6020 | T2    | E2105 | U7    | J2407 | D8    | L2106 | O2    | R2101 | H5    | R7507 | S5 |   |   |   |   |
| C2035 | C5    | C2312 | I3    | C6031 | R1    | E2106 | T6    | J2408 | B8    | L2202 | M2    | R2102 | T5    | R7508 | R4 |   |   |   |   |
| C2040 | H5    | C2313 | I3    | C6032 | P2    | E2401 | C9    | J2409 | C2    | L2207 | N4    | R2103 | T5    | R7509 | Q4 |   |   |   |   |
| C2041 | C3    | C2314 | J2    | C6033 | P2    | E2402 | C1    | J2410 | D2    | L2208 | N4    | R2104 | A8    | R7510 | Q8 |   |   |   |   |
| C2042 | D4    | C2315 | K2    | C6034 | P2    | E2403 | N1    | J2411 | D8    | L2209 | M5    | R2105 | A8    | R7522 | Q8 |   |   |   |   |
| C2043 | C4    | C2317 | J2    | C6035 | P1    | E2405 | T9    | J2412 | C2    | L2210 | M5    | R2106 | N5    | R7523 | S8 |   |   |   |   |
| C2044 | C4    | C2403 | N2    | C6036 | P2    | E2407 | N9    | J2418 | I5    | L2211 | M4    | R2107 | N5    | R7560 | Q6 |   |   |   |   |
| C2045 | D5    | C2404 | T2    | C6037 | P2    | E2506 | T1    | J2419 | H5    | L2212 | M4    | R2200 | M2    | S     |    |   |   |   |   |
| C2046 | C4    | C2405 | T4    | C6038 | Q1    | E6001 | T1    | J2421 | N2    | L2270 | L4    | R2201 | N2    | S2401 | O1 |   |   |   |   |
| C2047 | C4    | C2413 | I2    | C6039 | Q2    | E6003 | T1    | J2428 | J1    | L2271 | L4    | R2202 | M5    | S2402 | S1 |   |   |   |   |
| C2048 | C3    | C2414 | T2    | C6040 | P2    | E7000 | U8    | J2429 | N1    | L2272 | K4    | R2203 | M5    | S2403 | U5 |   |   |   |   |
| C2049 | H5    | C2415 | T4    | C6051 | Q2    | E7001 | U5    | J2430 | L1    | L2273 | K4    | R2204 | M5    | T     |    |   |   |   |   |
| C2050 | D5    | C2416 | T3    | C6052 | Q2    | E7501 | T9    | J2431 | N9    | L2301 | I4    | R2205 | M5    | T6000 | P1 |   |   |   |   |
| C2051 | H5    | C2417 | T3    | C6055 | Q2    | E7502 | T9    | J2600 | F5    | L2302 | J4    | R2212 | L4    | T6001 | R1 |   |   |   |   |
| C2052 | C5    | C2418 | T3    | C6100 | G7    | E7503 | U8    | J2803 | M6    | L2304 | J2    | R2213 | N3    | T6002 | P1 |   |   |   |   |
| C2071 | Q3    | C2700 | H2    | C6101 | H6    | F     | J2804 | M6    | L2305 | I3    | R2216 | N3    | T6003 | P1    |    |   |   |   |   |
| C2073 | S2    | C2701 | H2    | C6102 | G7    | F2000 | A5    | J2828 | N7    | L2306 | I3    | R2250 | N2    | T6004 | Q1 |   |   |   |   |
| C2074 | L2    | C2800 | L8    | C6103 | G7    | G     | J2829 | N7    | L2402 | T3    | R2251 | N2    | T6005 | Q2    |    |   |   |   |   |
| C2076 | Q4    | C2801 | N8    | C6104 | H6    | G2200 | C2    | J2830 | N7    | L2403 | J2    | R2303 | H3    | T7501 | R3 |   |   |   |   |
| C2077 | M2    | C2802 | M8    | C6105 | G6    | G7500 | S4    | J2831 | N7    | L2404 | T3    | R2400 | G4    | T7520 | S9 |   |   |   |   |
| C2078 | M2    | C2803 | L8    | C6106 | H6    | G7501 | Q3    | J2833 | N6    | L2405 | O2    | R2406 | N2    | V     |    |   |   |   |   |
| C2079 | E4    | C2804 | N8    | C6107 | H6    | J     | J2834 | N6    | L3200 | G8    | R2407 | H5    | V2000 | A4    |    |   |   |   |   |
| C2080 | E4    | C2805 | K6    | C6108 | H6    | J1000 | E4    | J2835 | N6    | L3301 | N6    | R2408 | G4    | V2401 | H4 |   |   |   |   |
| C2100 | G5    | C2807 | N8    | C6109 | G6    | J1001 | E4    | J2851 | N7    | L3303 | P8    | R2418 | H4    | V2402 | G5 |   |   |   |   |
| C2101 | F5    | C2808 | M8    | C7000 | U8    | J2000 | A6    | J2852 | N7    | L3304 | O9    | R2419 | H5    | V2405 | G4 |   |   |   |   |
| C2102 | H5    | C2809 | M8    | C7001 | T8    | J2001 | D4    | J3000 | I7    | L6030 | Q2    | R2421 | K2    | V2406 | G6 |   |   |   |   |
| C2103 | O1    | C2810 | K8    | C7010 | N5    | J2003 | D4    | J3001 | I7    | L6031 | Q2    | R2422 | G5    | V2407 | C6 |   |   |   |   |
| C2104 | O2    | C2811 | K6    | C7011 | N4    | J2006 | E5    | J3002 | L6    | L6032 | Q1    | R2423 | G5    | V2409 | C4 |   |   |   |   |
| C2200 | M5    | C2812 | L8    | C7012 | N5    | J2007 | D2    | J3003 | I7    | L6077 | R2    | R2424 | I4    | V2410 | H4 |   |   |   |   |
| C2201 | M2    | C2813 | N6    | C7013 | N4    | J2008 | D3    | J3004 | J8    | L6100 | G7    | R2425 | G4    | V2411 | H4 |   |   |   |   |
| C2202 | N2    | C2814 | M8    | C7501 | S5    | J2009 | D3    | J3005 | J8    | L6101 | H6    | R2426 | N9    | V2412 | M1 |   |   |   |   |
| C2203 | M4    | C2815 | K8    | C7502 | O5    | J2010 | A7    | J3006 | K7    | L7010 | N5    | R2427 | L1    | V2413 | M9 |   |   |   |   |
| C2204 | M4    | C2816 | K8    | C7503 | Q4    | J2070 | P3    | J3100 | H9    | L7011 | N4    | R2430 | G4    | X     |    |   |   |   |   |
| C2205 | M4    | C2818 | K6    | C7504 | S5    | J2071 | P3    | J3101 | H9    | L7500 | S6    | R2803 | L8    | X1001 | U3 |   |   |   |   |
| C2206 | M4    | C2819 | K8    | C7505 | Q4    | J2072 | P4    | J3102 | G9    | L7501 | S6    | R2804 | L8    | X2000 | A7 |   |   |   |   |
| C2207 | N2    | C2820 | N6    | C7506 | Q4    | J2074 | P3    | J3103 | G9    | L7502 | Q5    | R3000 | J6    | X2002 | B3 |   |   |   |   |
| C2208 | N3    | C2821 | N6    | C7507 | Q4    | J2075 | P4    | J3104 | G9    | L7503 | Q8    | R3002 | L8    | X2030 | B5 |   |   |   |   |
| C2209 | N3    | C2831 | N7    | C7508 | O5    | J2101 | Q7    | J3105 | G9    | L7504 | R6    | R3003 | K6    | X2060 | A3 |   |   |   |   |
| C2210 | K3    | C3000 | I6    | C7509 | R4    | J2102 | Q8    | J3106 | G9    | L7505 | R6    | R3004 | K7    | X2070 | O3 |   |   |   |   |
| C2211 | K3    | C3001 | J6    | C7511 | R4    | J2204 | M4    | J3107 | G9    | L7515 | S4    | R3200 | G8    | X2700 | G3 |   |   |   |   |
| C2212 | K3    | C3002 | J6    | C7513 | Q4    | J2205 | M4    | J3112 | E3    | L7561 | Q6    | R3201 | H8    | X3200 | E7 |   |   |   |   |
| C2213 | L3    | C3003 | K8    | C7515 | S4    | J2206 | I6    | J3113 | E3    | M     | R3202 | H8    | X3300 | P5    |    |   |   |   |   |
| C2214 | L2    | C3004 | K8    | C7516 | S4    | J2207 | K6    | J3114 | E3    | M2100 | C8    | R3203 | H7    | X7000 | T8 |   |   |   |   |
| C2215 | L2    | C3005 | J8    | C7518 | O5    | J2209 | I6    | J3115 | E2    | N     | R3204 | H7    | Z     |       |    |   |   |   |   |
| C2216 | L2    | C3006 | I8    | C7520 | S8    | J2210 | M4    | J3116 | E3    | N2030 | D5    | R3205 | G8    | Z2001 | C2 |   |   |   |   |
| C2217 | M3    | C3007 | J8    | C7521 | S8    | J2212 | L6    | J3117 | E3    | N2031 | C3    | R3206 | G8    | Z2400 | H4 |   |   |   |   |
| C2219 | M2    | C3008 | J8    | C7522 | Q8    | J2213 | K6    | J3200 | G8    | N2300 | J3    | R3300 | P7    | Z2401 | U4 |   |   |   |   |
| C2220 | K3    | C3009 | I8    | C7523 | S8    | J2214 | K6    | J3201 | G8    | N2301 | J2    | R3301 | P8    | Z2402 | R2 |   |   |   |   |
| C2221 | K2    | C3010 | N5    | C7524 | Q7    | J2215 | K6    | J3202 | G7    | N2401 | G5    | R3305 | O7    | Z2700 | H2 |   |   |   |   |
| C2222 | K2    | C3013 | K7    | C7525 | Q9    | J2216 | K4    | J3203 | G8    | N3200 | G8    | R3306 | P7    | Z6030 | R2 |   |   |   |   |
| C2223 | L4    | C3014 | K7    | C7560 | R3    | J2217 | K4    | J3300 | P8    | N3300 | O8    | R3307 | P7    | Z7001 | T8 |   |   |   |   |
| C2224 | M4    | C3100 | E2    | C7561 | R4    | J2218 | K4    | J3301 | O6    | N3301 | O6    | R3312 | H8    | Z7002 | T8 |   |   |   |   |
| C2225 | M2    | C3115 | O7    | C7562 | Q6    | J2219 | J6    | J3302 | O7    | N6030 | P2    | R3313 | I8    | Z7501 | S7 |   |   |   |   |
| C2226 | L2    | C3116 | O7    | C7563 | Q5    | J2220 | L6    | J6001 | S2    | N6100 | H7    | R3314 | O6    | Z7503 | Q6 |   |   |   |   |
| C2227 | K3    | C3200 | G8    | C7564 | S4    | J2221 | L6    | J6003 | S2    | N7505 | R5    | R6005 | N2    | Z7504 | R7 |   |   |   |   |
| C2228 | L2    | C3201 | H8    | C7565 | Q5    | J2222 | D2    | J6100 | H7    | N7520 | R8    | R6020 | T2    | Z7520 | S7 |   |   |   |   |
| C2230 | M3    | C3202 | H7    | C7566 | R4    | J2300 | K3    | J6101 | H7    | R     | R2007 | C2    | R6030 | P2    |    |   |   |   |   |
| C2231 | K5    | C3203 | G8    | D     | J2306 | Q3    | J6103 | H7    | R2007 | C2    | R6031 | Q1    |       |       |    |   |   |   |   |
| C2232 | L2    | C3204 | H7    | D2200 | L3    | J2307 | Q3    | J6104 | H7    | R2008 | C2    | R6032 | P2    |       |    |   |   |   |   |
| C2270 | L5    | C3210 | G8    | D2800 | L7    | J2308 | K3    | J6105 | H7    | R2033 | E5    | R6034 | Q2    |       |    |   |   |   |   |
| C2271 | L5    | C3211 | D8    | D3000 | J7    | J2309 | J3    | J6106 | H7    | R2034 | E5    | R6037 | Q1    |       |    |   |   |   |   |

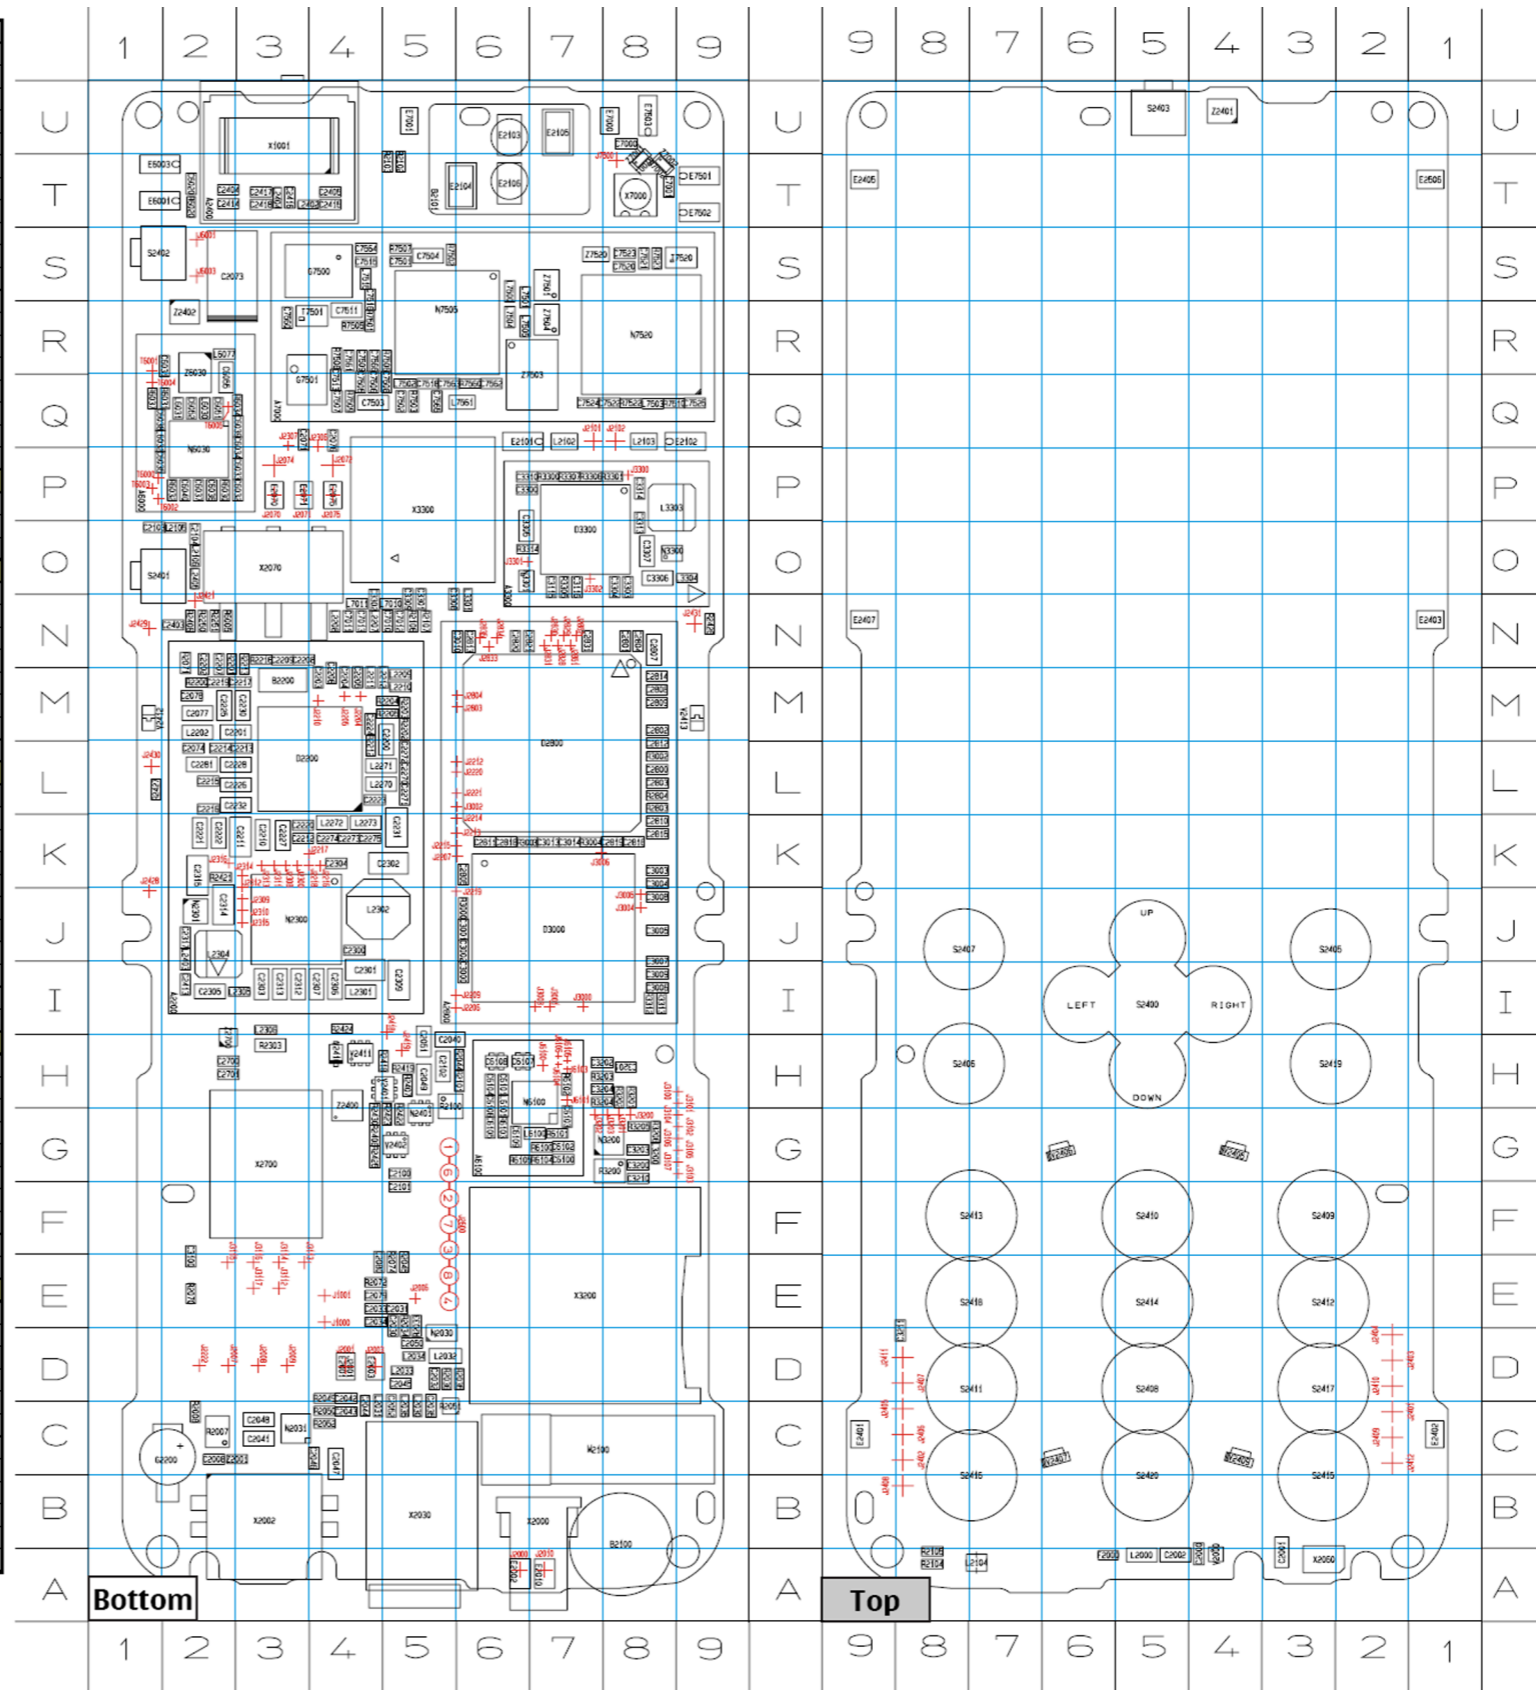



# Nokia Customer Care

## Glossary

(This page left intentionally blank.)

|               |   |
|---------------|---|
| A/D-converter | Analog-to-digital converter   |
| ACI           | Accessory Control Interface   |
| ADC           | Analog-to-digital converter   |
| ADSP          | Application DPS (expected to run high level tasks)                      |
| AGC           | Automatic gain control (maintains volume)                               |
| ALS           | Ambient light sensor  |
| AMSL          | After Market Service Leader   |
| ARM           | Advanced RISC Machines  |
| ARPU          | Average revenue per user (per month or per year)                        |
| ASIC          | Application Specific Integrated Circuit                                 |
| ASIP          | Application Specific Interface Protector                                |
| B2B           | Board to board, connector between PWB and UI board                      |
| BB            | Baseband  |
| BC02          | Bluetooth module made by CSR  |
| BIQUAD        | Bi-quadratic ,type of filter function)                                  |
| BSI           | Battery Size Indicator  |
| BT            | Bluetooth   |
| CBus          | MCU controlled serial bus connected to UPP_WD2,UEME and Zocus           |
| CCP           | Compact Camera Port   |
| CDSP          | Cellular DSP (expected to run at low levels)                            |
| CLDC          | Connected limited device configuration                                  |
| CMOS          | Complimentary metal-oxide semiconductor circuit (low power consumption) |
| COF           | Chip on Foil  |
| COG           | Chip on Glass   |
| CPU           | Central Processing Unit   |
| CSR           | cambridge silicon radio   |
| CSTN          | Color Super Twisted Nematic   |
| CTSI          | Clock Timing Sleep and interrupt block of Tiku                          |
| CW            | Continuous wave   |
| D/A-converter | Digital-to-analogue converter   |
| DAC           | Digital-to-analogue converter   |
| DBI           | Digital Battery Interface   |
| DBus          | DSP controlled serial bus connected between UPP_WD2 and Helgo           |
| DCT-4         | Digital Core Technology   |
| DMA           | Direct memory access  |
| DP            | Data Package  |

|          |   |
|----------|---|
| DPLL     | Digital Phase Locked Loop   |
| DSP      | Digital Signal Processor  |
| DtoS     | Differential to Single ended  |
| EDGE     | Enhanced data rates for global/GSM evaluation                                   |
| EGSM     | Extended GSM  |
| EM       | Energy management   |
| EMC      | Electromagnetic compability   |
| EMI      | Electromagnetic interference  |
| ESD      | Electrostatic discharge   |
| FCI      | Functional cover interface  |
| FPS      | Flash Programming Tool  |
| FR       | Full rate   |
| FSTN     | Film compensated super twisted nematic  |
| GND      | Ground, conductive mass   |
| GPIO     | General-purpose interface bus   |
| GPRS     | General Packet Radio Service  |
| GSM      | Group Special Mobile/Global System for Mobile communication                     |
| HF       | Hands free  |
| HFCM     | Handsfree Common  |
| HS       | Handset   |
| HSCSD    | High speed circuit switched data (data transmission connection faster than GSM) |
| HW       | Hardware  |
| I/O      | Input/Output  |
| IBAT     | Battery current   |
| IC       | Integrated circuit  |
| ICHA     | Charger current   |
| IF       | Interface   |
| IHF      | Integrated hands free   |
| IMEI     | International Mobile Equipment Identity   |
| IR       | Infrared  |
| IrDA     | Infrared Data Association   |
| ISA      | Intelligent software architecture   |
| JPEG/JPG | Joint Photographic Experts Group  |
| LCD      | Liquid Crystal Display  |
| LDO      | Low Drop Out  |
| LED      | Light-emitting diode  |



|             |   |
|-------------|---|
| LPRF        | Low Power Radio Frequency   |
| MCU         | Micro Controller Unit (microprocessor)  |
| MCU         | Multiport control unit  |
| MIC, mic    | Microphone  |
| MIDP        | Mobile Information Device Profile   |
| MIN         | Mobile identification number  |
| MIPS        | Million instructions per second   |
| MMC         | Multimedia card   |
| MMS         | Multimedia messaging service  |
| NTC         | Negative temperature coefficient, temperature sensitive resistor used as a temperature sensor |
| OMA         | Object management architecture  |
| OMAP        | Operations, maintenance, and administration part  |
| Opamp       | Operational Amplifier   |
| PA          | Power amplifier   |
| PDA         | Pocket Data Application   |
| PDA         | Personal digital assistant  |
| PDRAM       | Program/Data RAM (on chip in Tiku)  |
| Phoenix     | Software tool of DCT4.x   |
| PIM         | Personal Information Management   |
| PLL         | Phase locked loop   |
| PM          | (Phone) Permanent memory  |
| PUP         | General Purpose IO (PIO), USARTS and Pulse Width Modulators                                   |
| PURX        | Power-up reset  |
| PWB         | Printed Wiring Board  |
| PWM         | Pulse width modulation  |
| RC-filter   | Resistance-Capacitance filter   |
| RF          | Radio Frequency   |
| RF PopPort™ | Reduced function PopPort™ interface   |
| RFBUS       | Serial control Bus For RF   |
| RSK         | Right Soft Key  |
| RS-MMC      | Reduced size Multi Media Card   |
| RSSI        | Receiving signal strength indicator   |
| RST         | Reset Switch  |
| RTC         | Real Time Clock (provides date and time)  |
| RX          | Radio Receiver  |

|            |  |
|------------|--|
| SARAM      | Single Access RAM  |
| SAW filter | Surface Acoustic Wave filter   |
| SDRAM      | Synchronous Dynamic Random Access Memory                                   |
| SID        | Security ID  |
| SIM        | Subscriber Identity Module   |
| SMPS       | Switched Mode Power Supply   |
| SNR        | Signal-to-noise ratio  |
| SPR        | Standard Product requirements  |
| SRAM       | Static random access memory  |
| STI        | Serial Trace Interface   |
| SW         | Software   |
| SWIM       | Subscriber/Wallet Identification Module                                    |
| TCXO       | Temperature controlled Oscillator  |
| Tiku       | Finnish for Chip, Successor of the UPP, Official Tiku3G                    |
| TX         | Radio Transmitter  |
| UART       | Universal asynchronous receiver/transmitter                                |
| UEME       | Universal Energy Management chip (Enhanced version)                        |
| UEMEK      | See UEME   |
| UI         | User Interface   |
| UPP        | Universal Phone Processor  |
| UPP_WD2    | Communicator version of DCT4 system ASIC                                   |
| USB        | Universal Serial Bus   |
| VBAT       | Battery voltage  |
| VCHAR      | Charger voltage  |
| VCO        | Voltage controlled oscillator  |
| VCTCXO     | Voltage Controlled Temperature Compensated Crystal Oscillator              |
| VCXO       | Voltage Controlled Crystal Oscillator                                      |
| Vp-p       | Peak-to-peak voltage   |
| VSIM       | SIM voltage  |
| WAP        | Wireless application protocol  |
| WD         | Watchdog   |
| XHTML      | Extensible hypertext markup language                                       |
| Zocus      | Current sensor, (used to monitor the current flow to and from the battery) |

[www.s-manuals.com](http://www.s-manuals.com)