

**Nokia Customer Care**

# ***Service Manual***

**RM-612; RM-624 (Nokia C6-00; L3&4)**

## **Mobile Terminal**

***Part No: (Issue 1)***

***COMPANY CONFIDENTIAL***



**Amendment Record Sheet**

Amendment No	Date	Inserted By	Comments
Issue 1	4/2010	AP-K	



## Copyright

Copyright © 2010 Nokia. All rights reserved.

Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of Nokia is prohibited.

Nokia, Nokia Connecting People, and Nokia X and Y are trademarks or registered trademarks of Nokia Corporation. Other product and company names mentioned herein may be trademarks or tradenames of their respective owners.

Nokia operates a policy of continuous development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice.

Under no circumstances shall Nokia be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. Nokia reserves the right to revise this document or withdraw it at any time without prior notice.

The availability of particular products may vary by region.

## IMPORTANT

This document is intended for use by qualified service personnel only.

## Warnings and cautions

### Warnings

- IF THE DEVICE CAN BE INSTALLED IN A VEHICLE, CARE MUST BE TAKEN ON INSTALLATION IN VEHICLES FITTED WITH ELECTRONIC ENGINE MANAGEMENT SYSTEMS AND ANTI-SKID BRAKING SYSTEMS. UNDER CERTAIN FAULT CONDITIONS, EMITTED RF ENERGY CAN AFFECT THEIR OPERATION. IF NECESSARY, CONSULT THE VEHICLE DEALER/MANUFACTURER TO DETERMINE THE IMMUNITY OF VEHICLE ELECTRONIC SYSTEMS TO RF ENERGY.
- THE PRODUCT MUST NOT BE OPERATED IN AREAS LIKELY TO CONTAIN POTENTIALLY EXPLOSIVE ATMOSPHERES, FOR EXAMPLE, PETROL STATIONS (SERVICE STATIONS), BLASTING AREAS ETC.
- OPERATION OF ANY RADIO TRANSMITTING EQUIPMENT, INCLUDING CELLULAR TELEPHONES, MAY INTERFERE WITH THE FUNCTIONALITY OF INADEQUATELY PROTECTED MEDICAL DEVICES. CONSULT A PHYSICIAN OR THE MANUFACTURER OF THE MEDICAL DEVICE IF YOU HAVE ANY QUESTIONS. OTHER ELECTRONIC EQUIPMENT MAY ALSO BE SUBJECT TO INTERFERENCE.
- BEFORE MAKING ANY TEST CONNECTIONS, MAKE SURE YOU HAVE SWITCHED OFF ALL EQUIPMENT.

### Cautions

- Servicing and alignment must be undertaken by qualified personnel only.
- Ensure all work is carried out at an anti-static workstation and that an anti-static wrist strap is worn.
- Ensure solder, wire, or foreign matter does not enter the telephone as damage may result.
- Use only approved components as specified in the parts list.
- Ensure all components, modules, screws and insulators are correctly re-fitted after servicing and alignment.
- Ensure all cables and wires are repositioned correctly.
- Never test a mobile phone WCDMA transmitter with full Tx power, if there is no possibility to perform the measurements in a good performance RF-shielded room. Even low power WCDMA transmitters may disturb nearby WCDMA networks and cause problems to 3G cellular phone communication in a wide area.
- During testing never activate the GSM or WCDMA transmitter without a proper antenna load, otherwise GSM or WCDMA PA may be damaged.

## ESD protection

Nokia requires that service points have sufficient ESD protection (against static electricity) when servicing the phone.

Any product of which the covers are removed must be handled with ESD protection. The SIM card can be replaced without ESD protection if the product is otherwise ready for use.

To replace the covers ESD protection must be applied.

All electronic parts of the product are susceptible to ESD. Resistors, too, can be damaged by static electricity discharge.

All ESD sensitive parts must be packed in metallized protective bags during shipping and handling outside any ESD Protected Area (EPA).

Every repair action involving opening the product or handling the product components must be done under ESD protection.

ESD protected spare part packages **MUST NOT** be opened/closed out of an ESD Protected Area.

For more information and local requirements about ESD protection and ESD Protected Area, contact your local Nokia After Market Services representative.

## Care and maintenance

This product is of superior design and craftsmanship and should be treated with care. The suggestions below will help you to fulfil any warranty obligations and to enjoy this product for many years.

- Keep the phone and all its parts and accessories out of the reach of small children.
- Keep the phone dry. Precipitation, humidity and all types of liquids or moisture can contain minerals that will corrode electronic circuits.
- Do not use or store the phone in dusty, dirty areas. Its moving parts can be damaged.
- Do not store the phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the phone in cold areas. When it warms up (to its normal temperature), moisture can form inside, which may damage electronic circuit boards.
- Do not drop, knock or shake the phone. Rough handling can break internal circuit boards.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the phone.
- Do not paint the phone. Paint can clog the moving parts and prevent proper operation.
- Use only the supplied or an approved replacement antenna. Unauthorised antennas, modifications or attachments could damage the phone and may violate regulations governing radio devices.

All of the above suggestions apply equally to the product, battery, charger or any accessory.

## Company policy

Our policy is of continuous development; details of all technical modifications will be included with service bulletins.

While every endeavour has been made to ensure the accuracy of this document, some errors may exist. If any errors are found by the reader, NOKIA MOBILE PHONES Business Group should be notified in writing/e-mail.

Please state:

- Title of the Document + Issue Number/Date of publication
- Latest Amendment Number (if applicable)
- Page(s) and/or Figure(s) in error

### **Please send to:**

NOKIA CORPORATION

Nokia Mobile Phones Business Group

Nokia Customer Care

PO Box 86

FIN-24101 SALO

Finland

E-mail: [Service.Manuals@nokia.com](mailto:Service.Manuals@nokia.com)

## Battery information

**Note:** A new battery's full performance is achieved only after two or three complete charge and discharge cycles!

The battery can be charged and discharged hundreds of times but it will eventually wear out. When the operating time (talk-time and standby time) is noticeably shorter than normal, it is time to buy a new battery.

Use only batteries approved by the phone manufacturer and recharge the battery only with the chargers approved by the manufacturer. Unplug the charger when not in use. Do not leave the battery connected to a charger for longer than a week, since overcharging may shorten its lifetime. If left unused a fully charged battery will discharge itself over time.

Temperature extremes can affect the ability of your battery to charge.

For good operation times with Li-Pol batteries, discharge the battery from time to time by leaving the product switched on until it turns itself off (or by using the battery discharge facility of any approved accessory available for the product). Do not attempt to discharge the battery by any other means.

Use the battery only for its intended purpose.

Never use any charger or battery which is damaged.

Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object (coin, clip or pen) causes direct connection of the + and - terminals of the battery (metal strips on the battery) for example when you carry a spare battery in your pocket or purse. Short-circuiting the terminals may damage the battery or the connecting object.

Leaving the battery in hot or cold places, such as in a closed car in summer or winter conditions, will reduce the capacity and lifetime of the battery. Always try to keep the battery between 15°C and 25°C (59°F and 77°F). A phone with a hot or cold battery may temporarily not work, even when the battery is fully charged. Batteries' performance is particularly limited in temperatures well below freezing.

Do not dispose of batteries in a fire!

Dispose of batteries according to local regulations (e.g. recycling). Do not dispose as household waste.

## **Nokia C6-00; L3&4 Service Manual Structure**

- 1 General Information
- 2 Service Tools and Service Concepts
- 3 BB Troubleshooting and Manual Tuning Guide
- 4 RF Troubleshooting
- 5 System Module and User Interface
- Glossary

(This page left intentionally blank.)



# Nokia Customer Care

## 1 — General Information

(This page left intentionally blank.)

## Table of Contents

Product selection.....	1-5
Product features and sales package.....	1-5
Mobile enhancements.....	1-9
Technical Specifications.....	1-12
Transceiver general specifications .....	1-12
Main RF characteristics for GSM 850/900/1800/1900, WCDMA 900/1900/2100 and WCDMA 850/1900/2100 phones.....	1-12
Battery endurance.....	1-14
Environmental conditions .....	1-14

## List of Tables

Table 1 Audio .....	1-9
Table 2 Car .....	1-10
Table 3 Data .....	1-11
Table 4 Messaging .....	1-11
Table 5 Positioning .....	1-12
Table 6 Power .....	1-12

## List of Figures

Figure 1 View of RM-612/RM-624 .....	1-5
--------------------------------------	-----

(This page left intentionally blank.)

## ■ Product selection

RM-612/RM-624 is a GSM/HSDPA/WCDMA tri-mode handportable multimedia computer with a person centric touch UI, integrated GPS (A-GPS OMA SUPL), WLAN and side slide form factor. RM-612 supports EGSM 850/900/1800/1900 and WCDMA 900/1900/2100 bands. RM-624 supports EGSM 850/900/1800/1900 and WCDMA 850/1900/2100 bands. The device supports CSD/HSCSD, GPRS/EGPRS and WCDMA/HSDPA data bearers.

For WCDMA the maximum bit rate is up to 384 kbit/s for downlink and 384 kbit/s for uplink with simultaneous CS speech or CS video (max. 64 kbit/s). The HSDPA peak is 3.6 Mbit/s downlink (with limited use cases).

For 2G and 2.5G networks the device is a Class A EGPRS DTM MSC 11 which means a maximum download speed of up to 296 kbit/s with EGPRS, and up to 107kbit/s with GPRS. According to GSM standard 05.05 it responds to class 4 (max. 2W) in GSM 850 and EGSM 900 class 1 (1W) in DCS 1800 and class 1 in PCS 1900. The device supports EGPRS (EDGE) class B as well as Bluetooth 2.0 + EDR standard.

The device has a large nHD 3.2" (640 x 360 pixels) colour display (active area 39.6 mm x 70.4 mm) with 16 million colors. It also has a 5 megapixel autofocus main camera with 4 x digital zoom and an integrated LED flash and secondary camera (QCIF) for video calls. The device supports two way video calls with two integrated cameras, one on the front and one on the back.

The MMS implementation follows the OMA MMS standard release 1.3. The Browser is a highly advanced internet browser also capable of viewing operator domain XHTML Mobile Profile (MP) content.

The device uses a S60 5.0 operating system and supports the full Web Browser for S60, which brings desktop-like Web browsing experience to mobile devices. It also supports MIDP Java 2.0, providing a good platform for compelling 3rd party applications.



Figure 1 View of RM-612/RM-624

## ■ Product features and sales package

### Imaging

Main camera:

- Sensor: 5 megapixel
- Optics: Tessar TM™ lens
- F number/Aperture: F2.8

- Focal length: 4.7 mm
- Focus range: 10 cm ~ infinity
- Macro focus distance: 10-50 cm
- Shutter speed: Mechanical shutter 1/1000 ~ 2 s

**Secondary camera:**

- Sensor: QVGA (320 x 240 pixels)
- F number/Aperture: F2.8
- Focal length: 43 mm (35 mm equivalent)
- Focus range: 10 cm ~ infinity

**Video:**

- Video resolution: QHD or VGA at 30 fps
- Audio recording: AAC (AMR for MMS)
- Video stabilization
- Video clip length: 90 min or limited to MMS size
- Video file format: .mp4 (default), .3gp (for MMS)
- White balance: automatic, sunny, cloudy, incandescent, fluorescent
- Scene: Auto, Night
- Colour tone: normal, sepia, black & white, vivid, negative
- Zoom (digital): up to 4x
- Tone for video indicator

**Photo:**

- Still image resolutions: up to 5 megapixel: 2592 x 1944
- Still image file format: JPEG/EXIF
- Auto focus
- Auto exposure: center weighted AE
- Image orientation: automatic
- Exposure compensation: +2 ~ -2EV at 0.5 step
- White balance: automatic, sunny, cloudy, incandescent, fluorescent
- Scene: auto, sports, portrait, close-up, landscape, night, user defined
- Colour tone: normal, sepia, B&W, vivid, negative
- Zoom (digital): up to 4x
- LED flash

**Edit**

- On device Photo editor and Video editor (manual & automatic)

**View**

- 3.2" nHD (640 x 360 pixels) colour display (active area 39.6 mm x 70.4 mm), up to 16M colors, 16:9 aspect ratio
- Digital Ambient Light Sensor (ALS) – used to optimize display/key brightness and power consumption
- Slide show from Gallery

## Share

- Nokia XpressShare - share effortlessly from Gallery or after capture via Email, Bluetooth or MMS
- Video call and video sharing support (WCDMA services)
- Online Album: Image/Video uploading from Gallery

## Print

- Nokia XpressPrint – direct printing via USB (PictBridge), Bluetooth (BPP), and WLAN (UPnP), from memory card or via online printing

## Store

- Up to 32 GB internal user memory
- Nokia XpressTransfer – easy to transfer and organize photos and video between your device and a compatible PC
- Nokia Lifeblog (mobile & PC)

## Music

- Digital music player: supports MP3/ AAC/ AAC+/ eAAC+/ WMA with playlists, equalizer and album art.
- Synchronise music with Microsoft Windows Media Player 10 & 11
- One click CD ripping, converting and transferring music to your device using Nokia Music Manager
- Stereo FM radio (87.5-108MHz /76-90MHz) with Visual Radio™ support
- Integrated handsfree speaker
- Nokia Stereo Headset (WH-102), inbox

## Media

- Full-screen video playback to view downloaded, streamed or recorded video clips
- Supported video formats: MPEG-4 , H.264/AVC, H.263/3GPP, RealVideo 8/9/10

## Productivity

### Messaging:

- Email (SMTP, IMAP4, POP3), MMS, SMS

### Office applications:

- Viewing of email attachments – .doc, .xls, .ppt, . pdf

### PIM:

- Contacts, calendar, to-do, notes, recorder, calculator, clock, converter

### Synchronization:

- Local/Remote (using SyncML)
  - Data: Calendar, Contacts, To-do, Notes, E-mail
  - PC Applications: Microsoft Outlook (98, 2000, 2002, 2003), Outlook Express, Lotus Organizer (5.0, 6.0), Lotus Notes (5.0, 6.0)

### Call management:

- Call logs, speed dial, voice dialling (with SIND) and voice commands
- Nokia Push to Talk (PoC)

## Connectivity

- Integrated GPS (A-GPS OMA SUPL)
- WLAN - IEEE802.11 g/b with UPnP support
- Micro USB interface with USB 2.0 high speed
- Bluetooth wireless technology 2.0 + EDR + A2DP
- MicroSD memory card - support up to 16 GB
- Nokia 3.5 mm AV connector

## Add-on software framework

- Symbian 9.4 OS
- Nokia Series 60, 5th edition, feature pack 2
- Java: MIDP2.0
- C++ and Java SDKs

## Additional technical specifications

- Vibrating alert
- 3GPP Rel 5/6 WCDMA , Rel 4 EGSM compliant
- Speech codecs supported in WCDMA: AMR
- Speech codecs supported in GSM: FR AMR/HR AMR/EFR/FR/HR
- WCDMA 2 Mbps, HSDPA 7.2 Mbps
- Dual Transfer Mode (DTM) support for simultaneous voice and packet data connection in GSM/EDGE networks. Simple class A, multi slot class 11, max speed DL/UL: 118.4/118.4 kbits/s
- EGPRS class B, multi slot class 32, (5 Rx + 3 Tx / Max Sum 6), max speed DL/UL= 296 / 177.6 kbits/s
- GPRS class B, multi slot class 32 (5 Rx + 3 Tx / Max Sum 6), max speed DL/UL= 107 / 64.2 kbits/s

## Sales package

- Transceiver RM-612/RM-624
- Charger (AC-8 or AC-15)
- Battery (BL-4J)
- Stereo headset (WH-102)
- Connectivity cable (CA-101D)
- Video connectivity cable (CA-75U)
- 2 GB MicroSD card
- User Guide



## ■ Mobile enhancements

Table 1 Audio

Enhancement	Type
Stereo headset	HS-16
	HS-43
	HS-45 with AD-54 3.5 mm stereo plug
	HS-48
Mono headset	HS-41
Mini speakers	MD-6
	MD-8
	MD-9
Wireless loopset	LPS-5
Wired headsets	WH-102
	WH-201
	WH-205
	WH-500
	WH-600
	WH-601
	WH-700
	WH-701
	WH-800
	WH-900

Enhancement	Type
Bluetooth headsets	BH-102
	BH-104
	BH-105
	BH-106
	BH-108
	BH-200
	BH-201
	BH-208
	BH-212
	BH-213
	BH-215
	BH-216
	BH-504
	BH-505
	BH-602
	BH-604
	BH-606
	BH-607
	BH-703
	BH-704
	BH-803
	BH-804
	BH-900
	BH-902
	BH-903
	BH-904
	BH-905
Bluetooth speakers	MD-7W

Table 2 Car

Enhancement	Type
Nokia Universal Mobile Holder	CR-39
	CR-82
	CR-99
	CR-114

Enhancement	Type
Nokia Holder Easy Mount	HH-12
	HH-17
Speakerphone	HF-33W
	HF-200
	HF-310
	HF-510
Car kit	CK-100
	CK-200
	CK-300
	CK-600
	CK-7W
	CK-15W
Mobile charger	DC-4
	DC-8
	DC-9
	DC-11

Table 3 Data

Enhancement	Type
Connectivity cable	CA-100
	CA-101C
	CA-101
	CA-126
MicroSD card	MU-22 1 GB
	MU-37 2 GB
	MU-41 4 GB
	MU-43 8 GB
	MU-44 16 GB

Table 4 Messaging

Enhancement	Type
Stylus	STYLUS PEN ASSY

**Table 5 Positioning**

Enhancement	Type
Wireless GPS module	LD-3W
	LD-4W
Home connectivity	HD-1

**Table 6 Power**

Enhancement	Type
Battery 1200mAh Li-ion	BL-4J
Travel charger	AC-5
	AC-8
Charger adapter	CA-44

## ■ Technical Specifications

### Transceiver general specifications

Unit	Dimensions (L x W x T) (mm)	Weight (g)	Volume (cm <sup>3</sup> )
Transceiver with BL-4J 1200 mAh Li-Ion battery	113.4 x 53 x 16.8	150	101

### Main RF characteristics for GSM 850/900/1800/1900, WCDMA 900/1900/2100 and WCDMA 850/1900/2100 phones

Parameter	Unit
Cellular system	GSM850, EGSM900, GSM1800/1900, WCDMA VIII (900), WCDMA II (1900) and WCDMA I (2100)
Rx frequency band	GSM850: 869 - 894 MHz
	EGSM900: 925 - 960 MHz
	GSM1800: 1805 - 1880 MHz
	GSM1900: 1930 - 1990 MHz
	WCDMA VIII (900): 925- 960 MHz
	WCDMA V (850): 869 - 894 MHz
	WCDMA II (1900): 1930-1990MHz
	WCDMA I (2100): 2110 - 2170 MHz

Parameter	Unit
Tx frequency band	GSM850: 824 - 849 MHz
	EGSM900: 880 - 915 MHz
	GSM1800: 1710 - 1785 MHz
	GSM1900: 1850 - 1910 MHz
	WCDMA VIII (900): 880 - 915 MHz
	WCDMA V (850): 824 - 849 MHz
	WCDMA II (1900): 1850-1910MHz
	WCDMA I (2100): 1920 - 1980 MHz
Output power	GSM850: +5 ...+33dBm/3.2mW ... 2W
	GSM900: +5 ... +33dBm/3.2mW ... 2W
	GSM1800: +0 ... +30dBm/1.0mW ... 1W
	GSM1900: +0 ... +30dBm/1.0mW ... 1W
	WCDMA VIII (900): -50 ... +24 dBm/0.01μW ... 251.2mW
	WCDMA V (850): -50 ... +24 dBm/0.01μW ... 251.2mW
	WCDMA II (1900): -50 ... +24dBm/0.01μW ... 251.2mW
	WCDMA I (2100): -50 ... +24 dBm/0.01μW ... 251.2mW
EDGE output power	EDGE850: +5 ... +29dBm/3.2mW ... 794mW
	EDGE900: +5 ... +29dBm/3.2mW ... 794mW
	EDGE1800: +0 ... +26dBm/1.0mW ... 400mW
	EDGE1900:+0 ... +26dBm/1.0mW ... 400mW
Number of RF channels	GSM850: 124
	GSM900: 174
	GSM1800: 374
	GSM1900: 299
	WCDMA VIII (900): 152
	WCDMA V (850): 108
	WCDMA II (1900): 289
	WCDMA I (2100): 277
Channel spacing	200 kHz (WCDMA V and II 100/200 kHz)

Parameter	Unit
Number of Tx power levels	GSM850: 15
	GSM900: 15
	GSM1800: 16
	GSM1900: 16
	WCDMA VIII (900): 75
	WCDMA V (850): 75
	WCDMA II (1900): 75
	WCDMA I (2100): 75

### Battery endurance

Battery	Capacity (mAh)	Talk time	Stand-by time	Charging time with AC-8
BL-4J	1200	GSM: up to 7 h	GSM: up to 400 h	1 h 45 min
		WCDMA: up to 5 h	WCDMA: up to 400 h	

### Environmental conditions

Environmental condition	Ambient temperature	Notes
Normal operation	-10 °C ... +55 °C	Specifications fulfilled
Reduced performance	55 °C ... +70 °C	Operational only for short periods
Intermittent or no operation	-40 °C ... -15 °C and +70 °C ... +85 °C	Operation not guaranteed but an attempt to operate will not damage the phone
No operation or storage	<-40 °C and >+85 °C	No storage. An attempt to operate may cause permanent damage
Charging allowed	-15 °C ... +55 °C	
Long term storage conditions	0 °C ... +85 °C	
Humidity and water resistance		Relative humidity range is 5 to 95%. Condensed or dripping water may cause intermittent malfunctions. Protection against dripping water has to be implemented in (enclosure) mechanics. Continuous dampness will cause permanent damage to the module.

## **2 — Service Tools and Service Concepts**

(This page left intentionally blank.)



## Table of Contents

Service tools.....	2-5
Product specific tools.....	2-5
FS-141.....	2-5
MJ-263.....	2-5
RJ-230.....	2-5
SA-131.....	2-5
Module jig attenuation values.....	2-6
Disassembly instructions.....	2-6
QWERTY Domesheet assembly instructions.....	2-22
General tools.....	2-24
AC-35.....	2-24
CU-4.....	2-25
FLS-5.....	2-26
FPS-21.....	2-26
JXS-1.....	2-27
PK-1.....	2-27
SB-6.....	2-27
SB-7.....	2-27
SRT-6.....	2-28
SS-210.....	2-28
SS-46.....	2-28
SS-62.....	2-28
SS-93.....	2-28
SX-4.....	2-29
Cables.....	2-29
CA-101.....	2-29
CA-158RS.....	2-29
CA-31D.....	2-29
CA-89DS.....	2-30
PCS-1.....	2-30
XRS-6.....	2-30
Service concepts.....	2-31
POS (Point of Sale) flash concept.....	2-31
Flash concept with FPS-21.....	2-32
CU-4 flash concept with FPS-21.....	2-33
Flash concept with FPS-21 and SB-6.....	2-34
Flash concept with SS-46 and CA-89DS.....	2-35
Flash concept with SS-62 and CA-89DS.....	2-36
Flash concept with FPS-21, SS-62 and SB-6.....	2-37
Flash concept with FPS-21, SS-62 and SB-7.....	2-38
Module jig service concept.....	2-39
Module jig service concept with SB-6.....	2-40
Service concept for RF testing and RF/BB tuning.....	2-41

## List of Figures

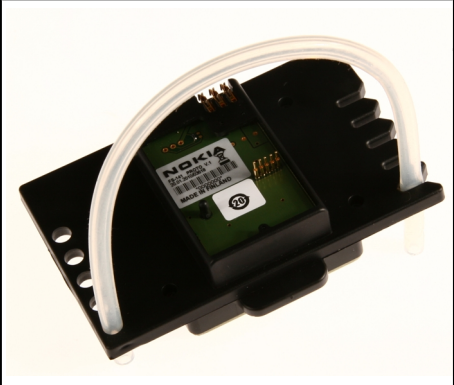
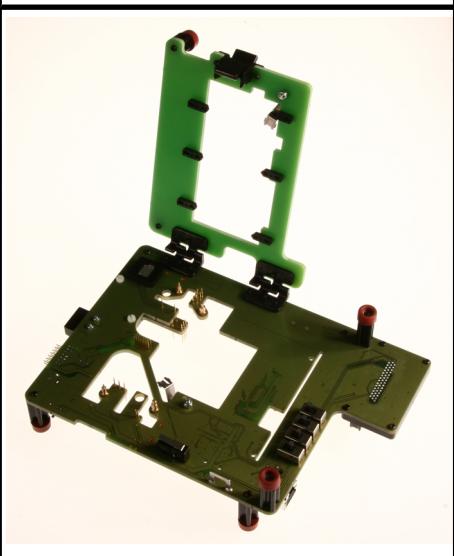

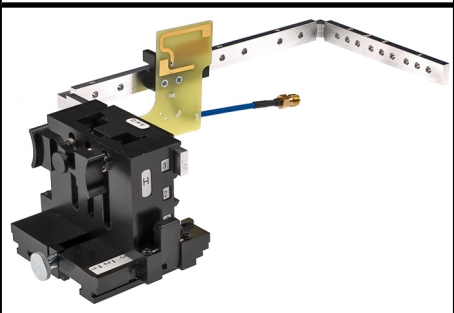
Figure 2 POS flash concept.....	2-31
Figure 3 Basic flash concept with FPS-21.....	2-32
Figure 4 CU-4 flash concept with FPS-21.....	2-33
Figure 5 Flash concept with FPS-21 and SB-6.....	2-34

Figure 6 Flash concept with SS-46 and CA-89DS .....	2-35
Figure 7 Flash concept with SS-62 and CA-89DS .....	2-36
Figure 8 Flash concept with FPS-21, SS-62 and SB-6 .....	2-37
Figure 9 Flash concept with FPS-21, SB-7 and JBT-9 .....	2-38
Figure 10 Module jig service concept .....	2-39
Figure 11 Module jig service concept with SB-6 .....	2-40
Figure 12 Service concept for RF testing and RF/BB tuning .....	2-41

## ■ Service tools

### Product specific tools

The table below gives a short overview of service devices that can be used for testing, error analysis, and repair of product RM-612; RM-624. For the correct use of the service devices, and the best effort of workbench setup, please refer to various concepts.

	FS-141	Flash adapter	
	MJ-263	Light Module Jig	<p>MJ-263 is meant for component level troubleshooting.</p> <p>The jig includes RF interface for Bluetooth, WLAN and GPS. In addition, it has the following features:</p> <ul style="list-style-type: none"> <li>• Provides mechanical interface with the engine module</li> <li>• Provides galvanic connection to all needed test pads in module</li> <li>• Multiplexing between USB and FBUS media, controlled by Vusb</li> <li>• Connector for control unit</li> <li>• Access for Audio-, MMC, and USB connectors</li> </ul> <p>For MJ-263 module jig attenuation values, see <a href="#">Module jig attenuation values (page 2-6)</a> .</p>
	RJ-230	Soldering jig	<p>The jig is used for soldering and as a rework jig for the system module. It is made of lead-free rework compatible material.</p>
	SA-131	RF coupler	<p>SA-131 is a generic device for GPS testing. It is used together with SS-62.</p>

### *Module jig attenuation values*

Band	F RX	Attenuation RX	F TX	Attenuation TX
GSM 850	881.6	-0.2	836.6	-0.2
GSM 900	942.4	-0.2	897.4	-0.2
GSM 1800	1842.8	-0.3	1747.8	-0.3
GSM 1900	1960.0	-0.3	1880.0	-0.3
WCDMA I	2140.0	-0.4	1950.0	-0.3
WCDMA II	1960.0	-0.3	1880.0	-0.3
WCDMA V	880.0	-0.2	835.0	-0.2
WCDMA VIII	942.6	-0.2	897.6	-0.2
WLAN	N/A	N/A	2442.0	-0.4

### *Disassembly instructions*

#### **Steps**

1. Open the locking mechanism of the battery cover.



2. Lift the lower end up and pull the battery cover from the phone (and remove the battery).



3. Remove 5 pcs M1.6 x 5.0 torx+ 6IP slide module screws with a Torx screwdriver.



4. Remove 3 pcs M1.4 x 3.4 torx+ 4IP press fit insert screws.





5. To avoid losing the Locking key, use the blue protection foil to fix it.



6. Open the USB door.




7. Open the QWERTY frame latches from both sides.







8. Remove the B-Cover from the QWERTY frame.

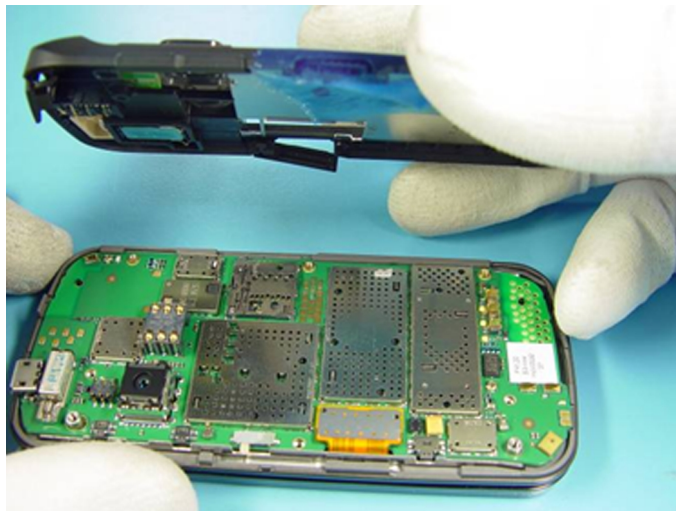


9. Open the Dynamic flex B2B connector using the SRT-6 tool.



10. Lift up the PWB to the direction shown in the pictures below and remove it.

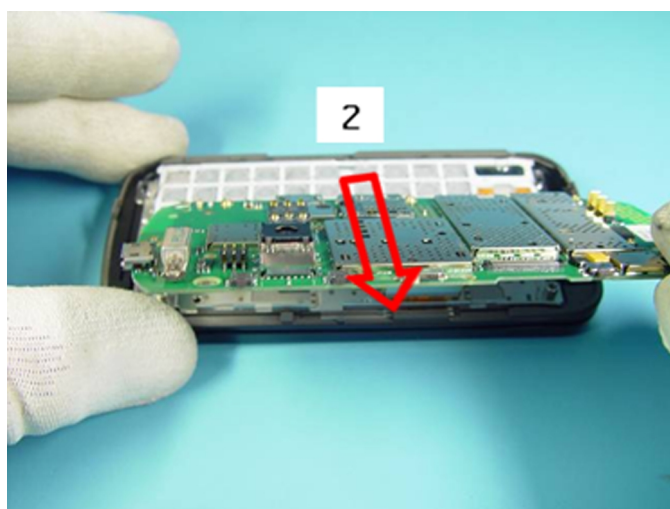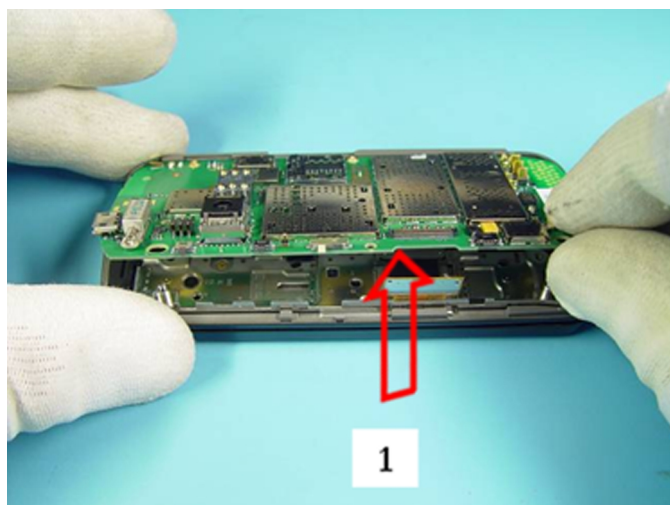


11. Remove the Camera Module using the SS-210 v2 tool.

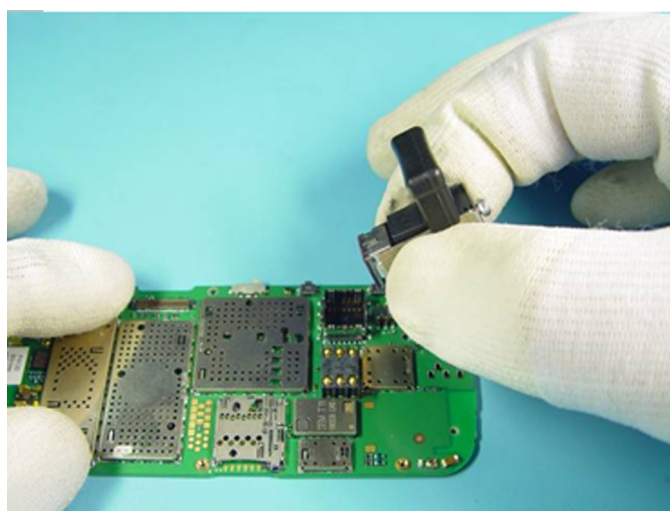



12. Remove the QWERTY Frame and QWERTY keymat.

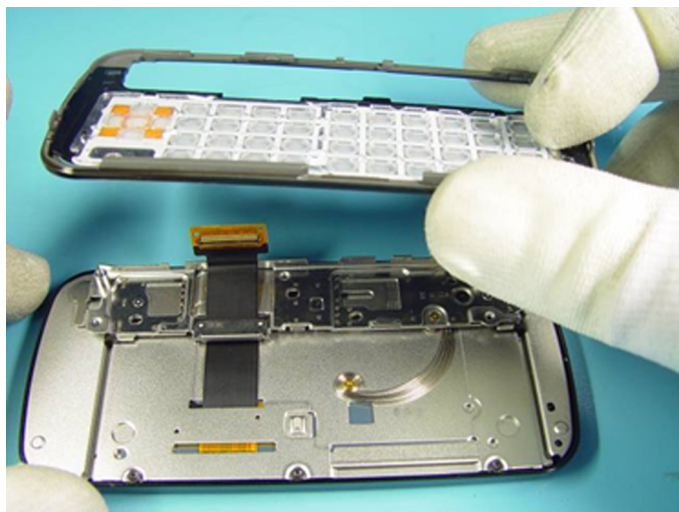


13. Separate the QWERTY frame from the QWERTY keymat.




14. Remove the Locking key.




15. Remove the DC Jack using a DC Plug.

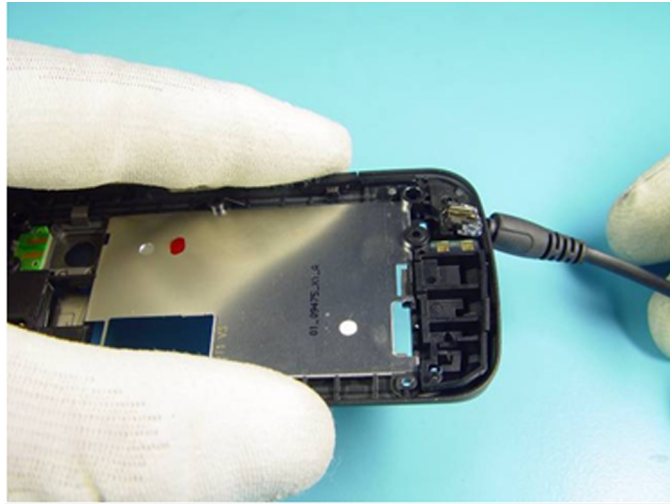

16. Remove the USB door.

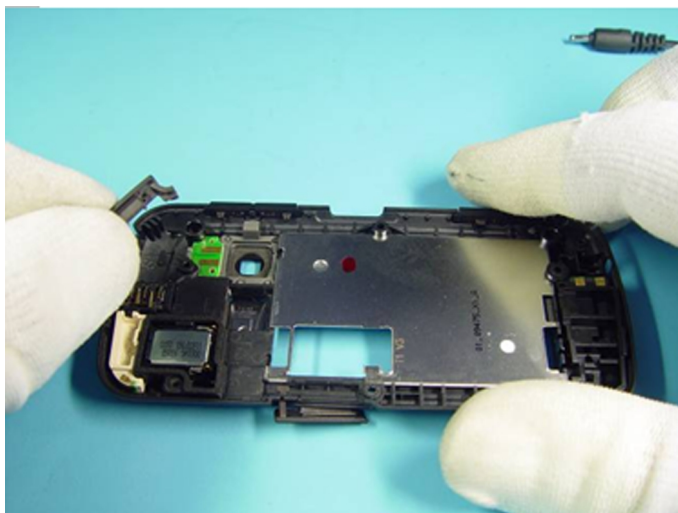


17. Lift up the AV connector using an AV plug and remove it.

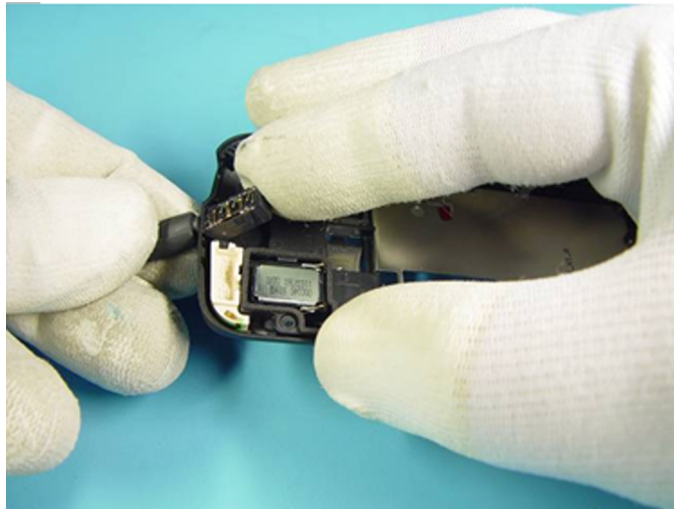


18. Remove the main Antenna.



19. Release the IHF speaker using the Dental tool and remove it.

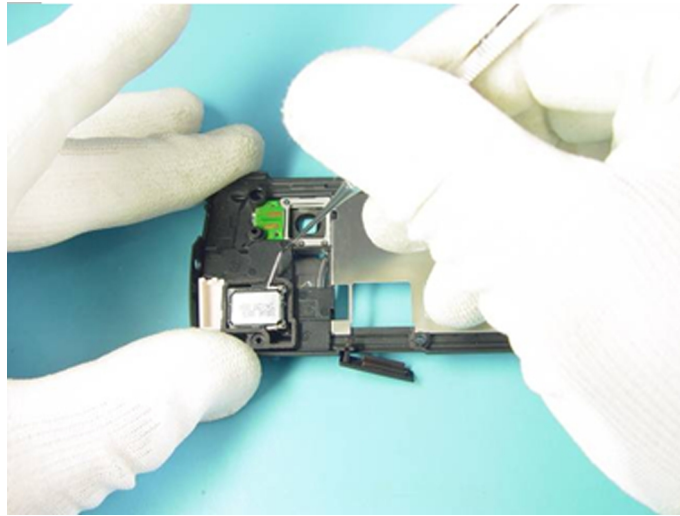

20. Remove the IHF adhesive.

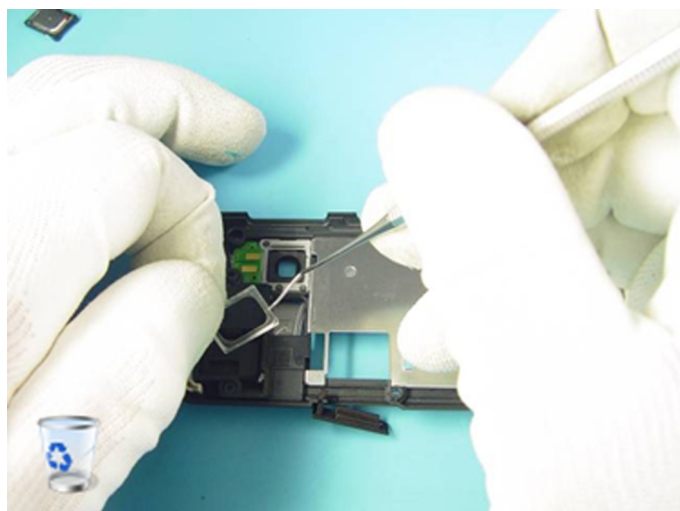




21. Separate the GPS/BT/WLAN ANTENNA.




22. Separate the SD DOOR.




23. Remove the FLASH LED ASSY from the B-COVER using tweezers.

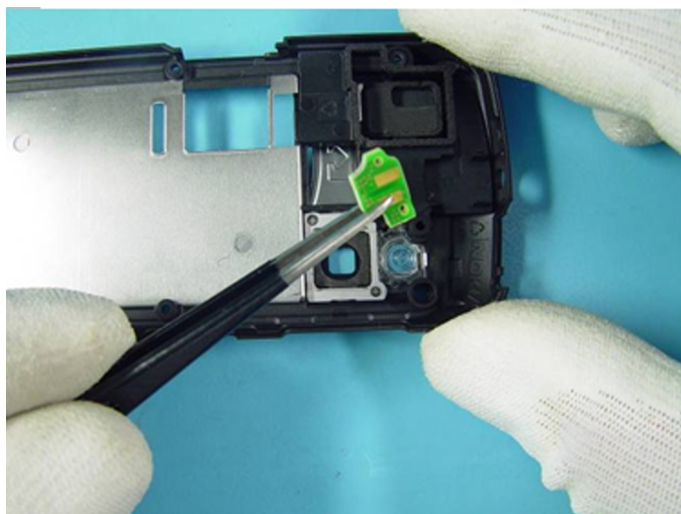


24. Separate the Volume keys.

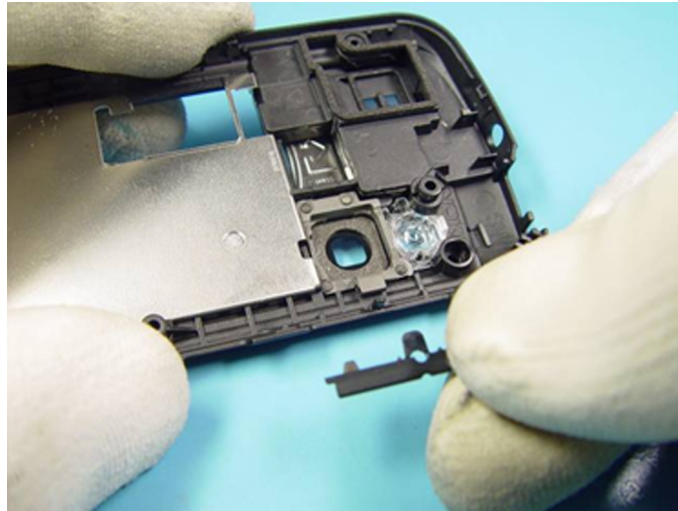


25. Remove 3 pcs lid screws M1.4 x 2.5 torx+ 4IP.

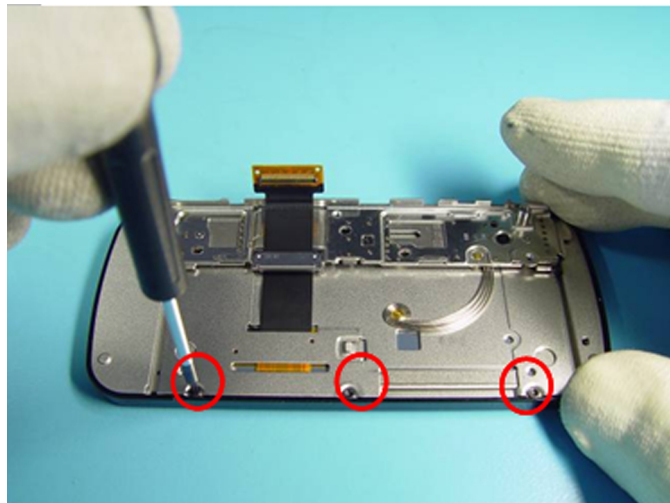


26. Open the A-Cover latches from both sides.

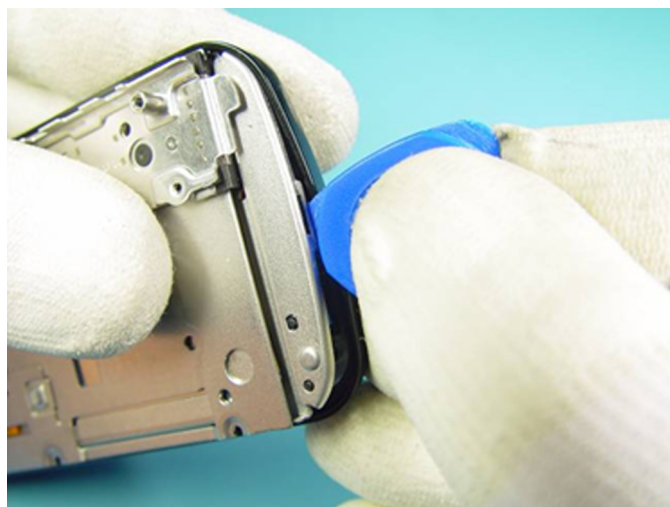

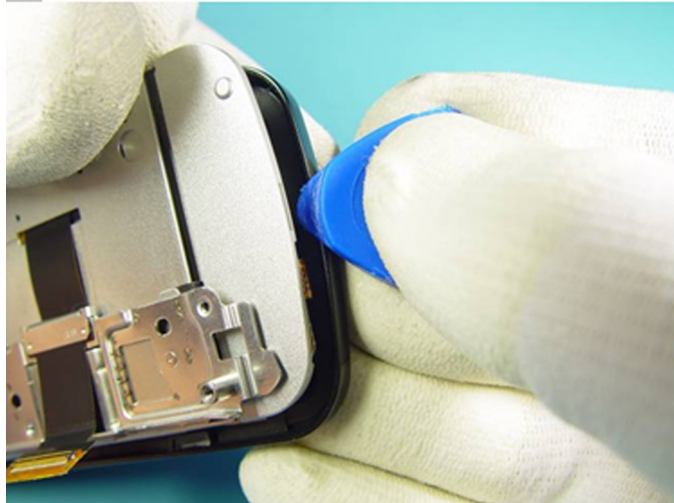

27. Release the touch connector from the UI flex assy.

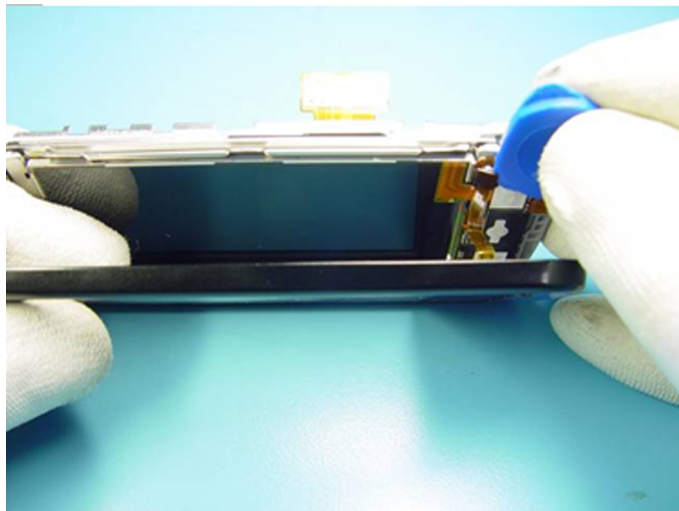


28. Separate the A-Cover from the slide module.






29. Lift up the function key support from the slide module.

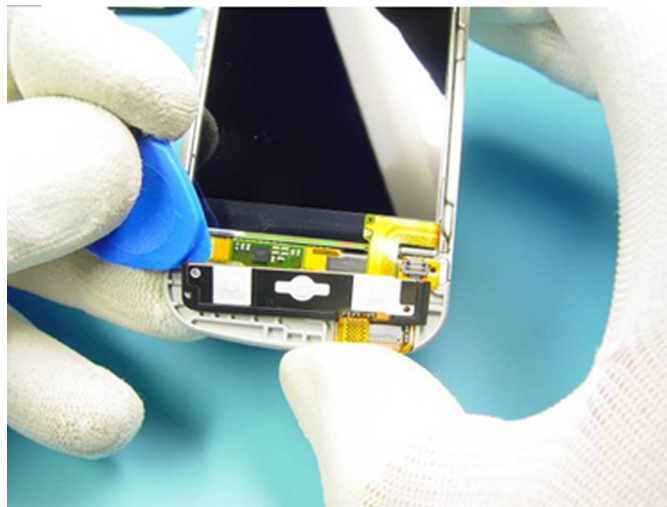


30. Open the lid from the LCD flex zif connector.


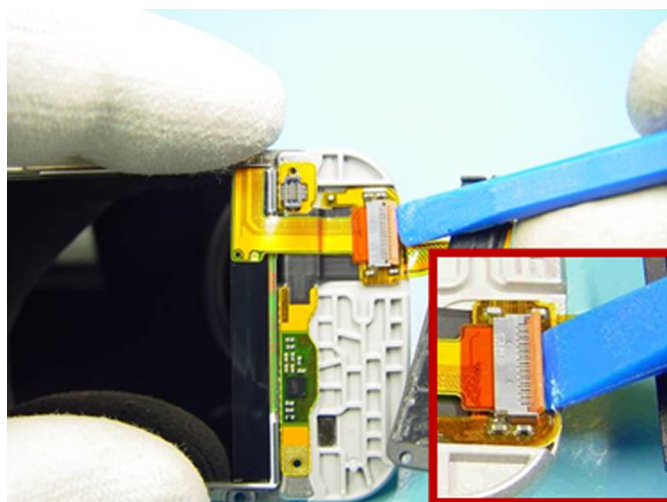




31. Lift the LCD flex from the zif connector.

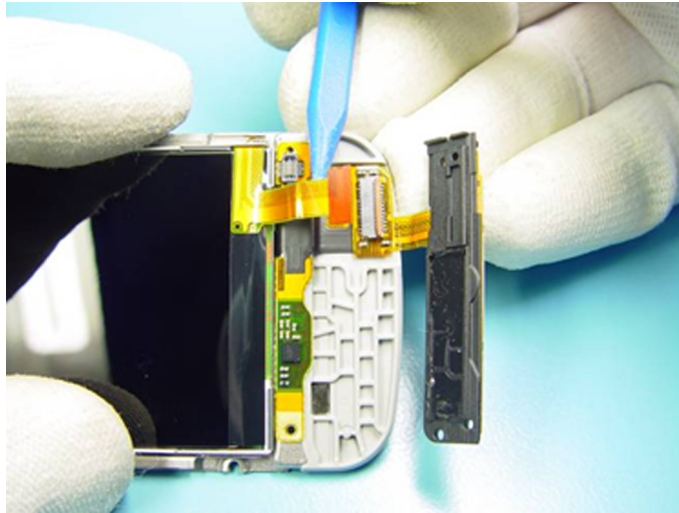


32. Fit the SS-93 tool carefully under the LCD and lift it up. Be extremely careful not to break the LCD.

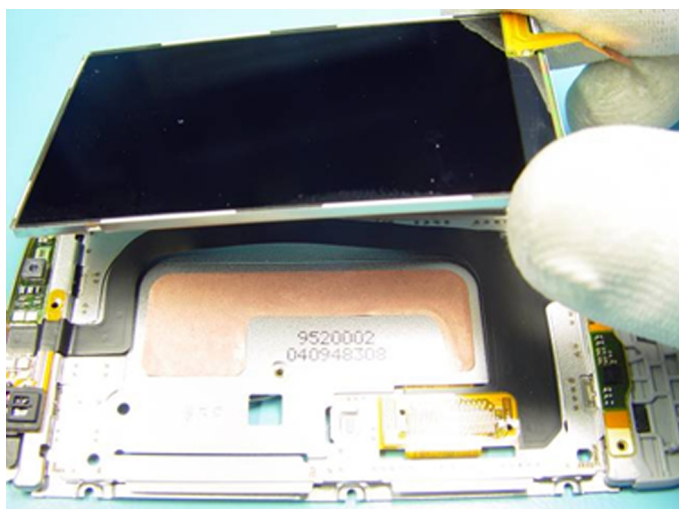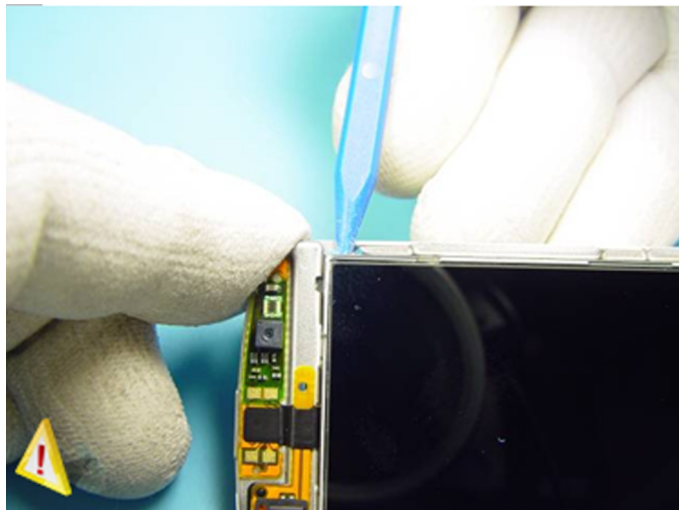



33. Protect the LCD with protection foil to avoid scratches.



34. Lift up the Earpiece using the Dental tool and remove it.

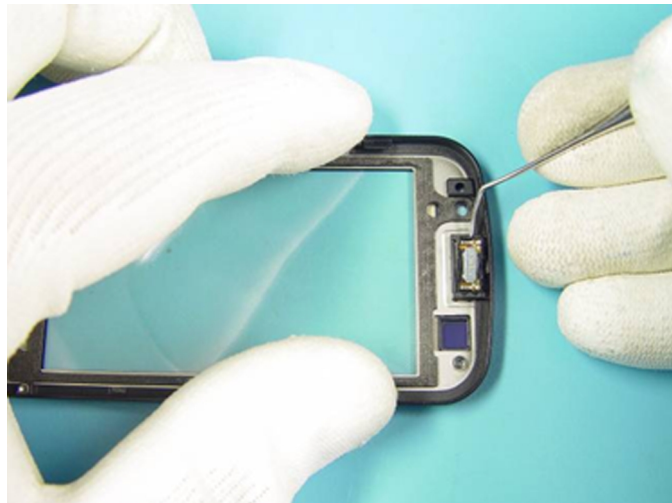


35. Use the Dental tool to lift up the Domesheet and remove it.

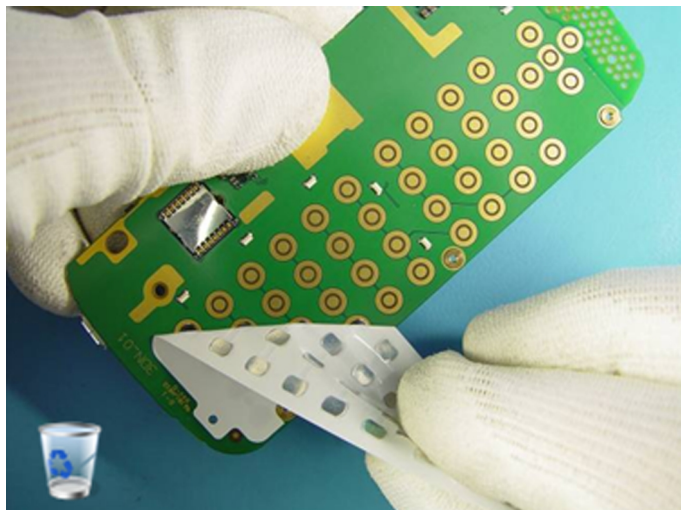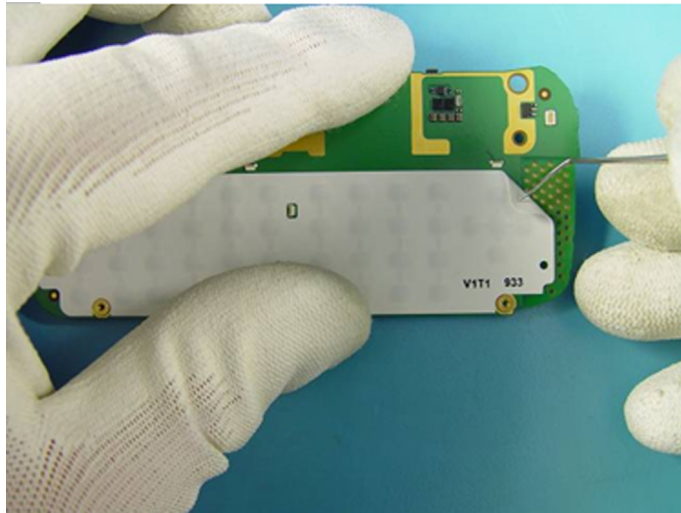


### *QWERTY Domesheet assembly instructions*

#### **Steps**

1. Take the QWERTY keymat and...

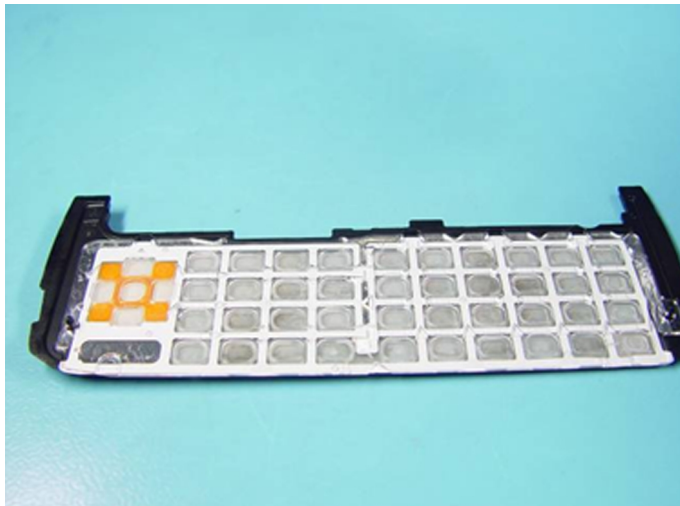


2. ...place the Domesheet on the QWERTY keymat.

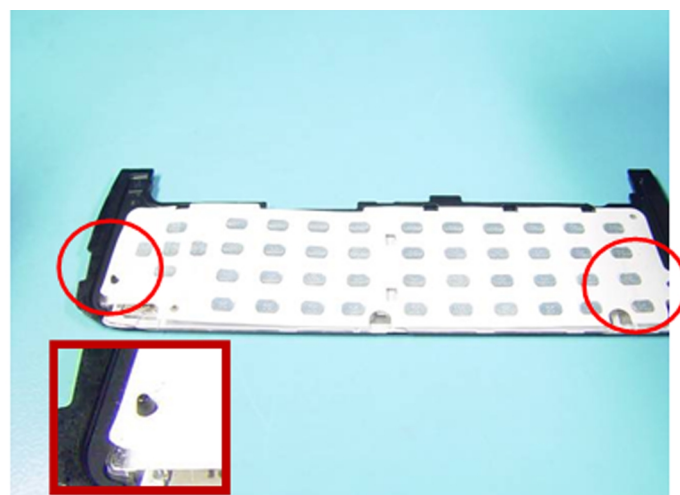





3. Place the PWB to the QWERTY/Domesheet first from the left side.

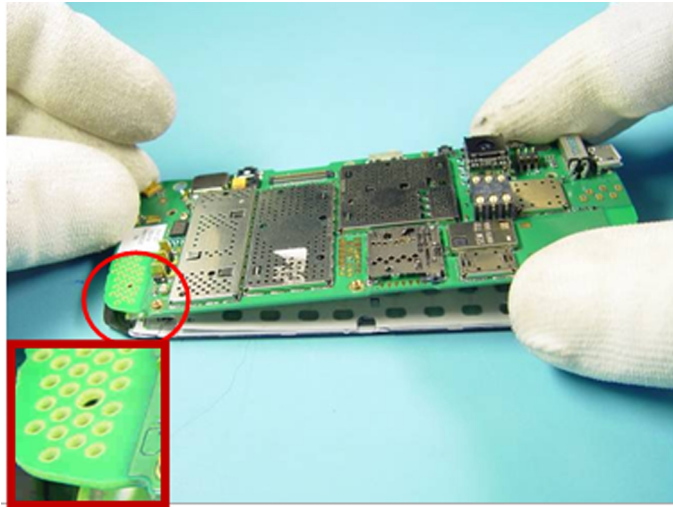


4. Then place the PWB from the right side.

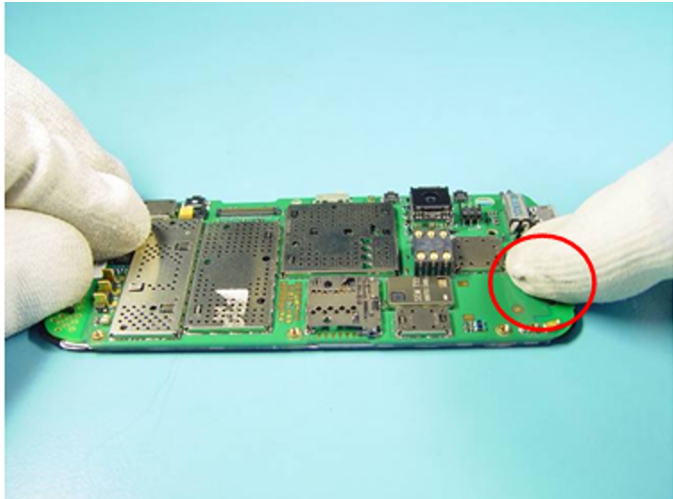

5. Lift up the PWB.

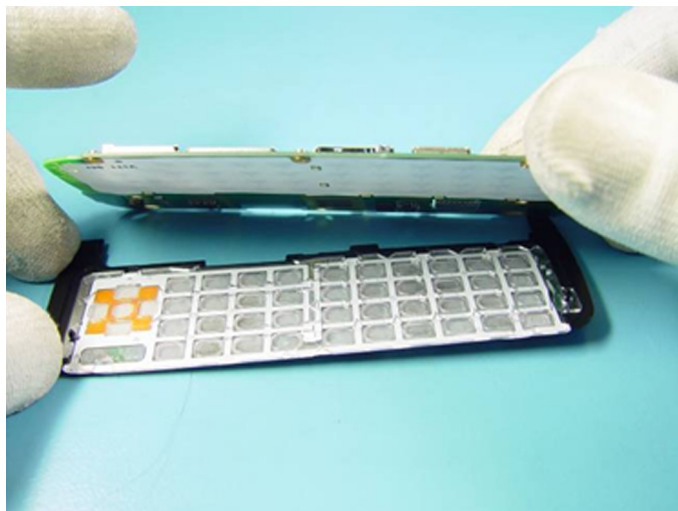

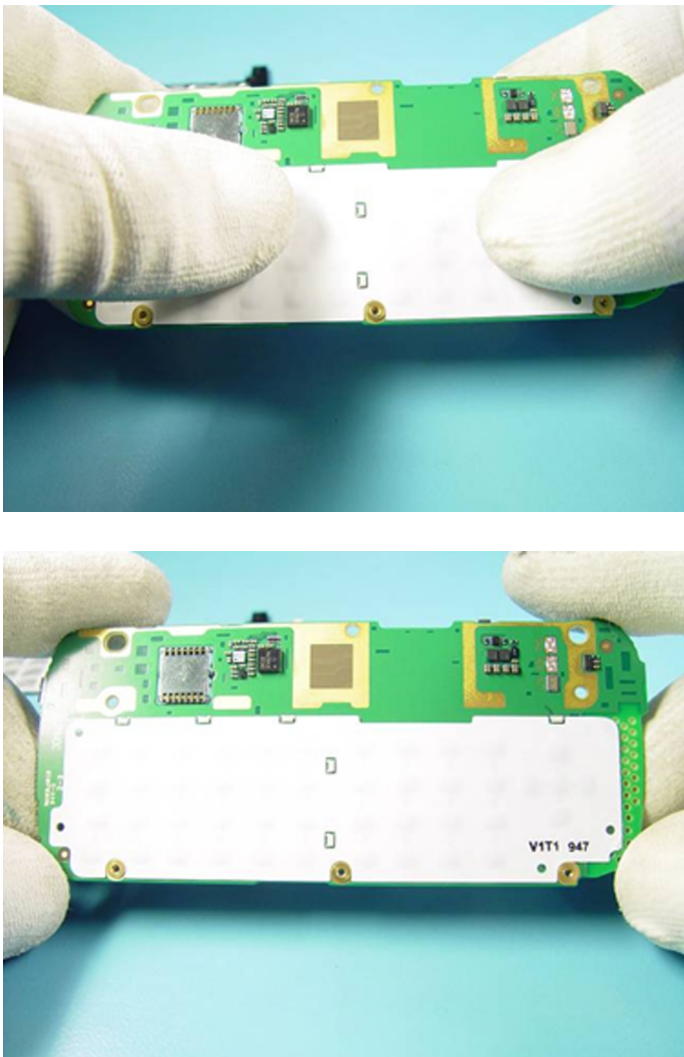


6. Make sure the Domesheet is properly attached to the PWB.





General tools





The table below gives a short overview of service devices that can be used for testing, error analysis, and repair of product RM-612; RM-624. For the correct use of the service devices, and the best effort of workbench setup, please refer to various concepts.





	AC-35	Power supply	
	Universal power supply for FPS-21; included in the FPS-21 sales package. Input 100V...230V 50Hz...60Hz, output voltage of 12 V and output current up to 3 A.		


<p><b>CU-4</b></p> 	<p>CU-4</p>	<p>Control unit</p>	<p>CU-4 is a general service tool used with a module jig and/or a flash adapter. It requires an external 12 V power supply.</p> <p>The unit has the following features:</p> <ul style="list-style-type: none"> <li>• software controlled via USB</li> <li>• EM calibration function</li> <li>• Forwards FBUS/Flashbus traffic to/from terminal</li> <li>• Forwards USB traffic to/from terminal</li> <li>• software controlled BSI values</li> <li>• regulated VBATT voltage</li> <li>• 2 x USB2.0 connector (Hub)</li> <li>• FBUS and USB connections supported</li> </ul> <p>When using CU-4, note the special order of connecting cables and other service equipment:</p> <p><b>Instructions</b></p> <ol style="list-style-type: none"> <li>1 Connect a service tool (jig, flash adapter) to CU-4.</li> <li>2 Connect CU-4 to your PC with a USB cable.</li> <li>3 Connect supply voltage (12 V)</li> <li>4 Connect an FBUS cable (if necessary).</li> <li>5 Start Phoenix service software.</li> </ol>  <p><b>Note:</b> Phoenix enables CU-4 regulators via USB when it is started.</p> <p>Reconnecting the power supply requires a Phoenix restart.</p>
--	-------------	---------------------	--

	FLS-5	Flash device	
<p><b>FPS-21</b></p> 	FPS-21	Flash prommer	
			<p><b>FLS-5</b> is a dongle and flash device incorporated into one package, developed specifically for POS use.</p> <p><b>Note:</b> FLS-5 can be used as an alternative to PK-1.</p> <p><b>FPS-21 sales package:</b></p> <ul style="list-style-type: none"> <li>• FPS-21 prommer</li> <li>• AC-35 power supply</li> <li>• CA-31D USB cable</li> </ul> <p><b>FPS-21 interfaces:</b></p> <p><i>Front</i></p> <ul style="list-style-type: none"> <li>• Service cable connector Provides Flashbus, USB and VBAT connections to a mobile device.</li> <li>• SmartCard socket A SmartCard is needed to allow DCT-4 generation mobile device programming.</li> </ul> <p><i>Rear</i></p> <ul style="list-style-type: none"> <li>• DC power input For connecting the external power supply (AC-35).</li> <li>• Two USB A type ports (USB1/USB3) Can be used, for example, for connecting external storage memory devices or mobile devices</li> <li>• One USB B type device connector (USB2) For connecting a PC.</li> <li>• Phone connector Service cable connection for connecting Flashbus/FLA.</li> <li>• Ethernet RJ45 type socket (LAN) For connecting the FPS-21 to LAN.</li> </ul> <p><i>Inside</i></p> <ul style="list-style-type: none"> <li>• Four SD card memory slots For internal storage memory.</li> </ul> <p><b>Note:</b> In order to access the SD memory card slots inside FPS-21, the prommer needs to be opened by removing the front panel, rear panel and heatsink from the prommer body.</p>






	JXS-1	RF shield box	
	PK-1	Software protection key	<p>Because the WCDMA network disturbs the RX side testing of the WCDMA phone and the Tx signal of the WCDMA phone can severely disturb the WCDMA network, a shield box is needed in all testing, tuning and fault finding which requires WCDMA RF signal.</p> <p>The shield box is not an active device, it contains only passive filtering components for RF attenuation.</p>
	SB-6	Bluetooth test and interface box (sales package)	
	SB-7	WLAN test box	<p>The SB-6 test box is a generic service device used to perform Bluetooth bit error rate (BER) testing, and establishing cordless FBUS connection via Bluetooth. An ACP-8x charger is needed for BER testing and an AXS-4 cable in case of cordless interface usage testing .</p> <p>Sales package includes:</p> <ul style="list-style-type: none"><li>• SB-6 test box</li><li>• Installation and warranty information</li></ul>
			<p>WLAN test requires defined position for the device.</p>





	SRT-6	Opening tool	
	<p>SRT-6 is used to open phone covers.</p> <p><b>Note:</b> The SRT-6 is included in the Nokia Standard Toolkit.</p>		
	SS-210	Camera removal tool	
	<p>The camera removal tool SS-210 is used to remove/attach the camera module from/to the socket.</p>		
<p><b>SS-46</b></p> 	SS-46	Interface adapter	
	<p>SS-46 acts as an interface adapter between the flash adapter and FPS-21.</p>		
	SS-62	Generic flash adapter base for BB5	
	<ul style="list-style-type: none"> <li>• generic base for flash adapters and couplers</li> <li>• SS-62 equipped with a clip interlock system</li> <li>• provides standardised interface towards Control Unit</li> <li>• multiplexing between USB and FBUS media, controlled by VUSB</li> </ul>		
	SS-93	Opening tool	
	<p>SS-93 is used for opening JAE connectors.</p> <p><b>Note:</b> The SS-93 is included in Nokia Standard Toolkit.</p>		

 <p><b>SX-4</b></p>	SX-4	Smart card	
	<p>SX-4 is a BB5 security device used to protect critical features in tuning and testing.</p> <p>SX-4 is also needed together with FPS-21 when DCT-4 phones are flashed.</p>		

## Cables

The table below gives a short overview of service devices that can be used for testing, error analysis, and repair of product RM-612; RM-624. For the correct use of the service devices, and the best effort of workbench setup, please refer to various concepts.

 <p><b>CA-101</b> 100cm</p>	CA-101	Micro USB cable	
	<p>The CA-101 is a USB-to-microUSB data cable that allows connections between the PC and the phone.</p>		
	CA-158RS	RF tuning cable	
	<p>Product-specific adapter cable for RF tuning.</p>		
	CA-31D	USB cable	
	<p>The CA-31D USB cable is used to connect FPS-21 to a PC. It is included in the FPS-21 sales package.</p>		

 <p><b>CA-89DS</b> 100cm</p> 	CA-89DS	Cable	
	PCS-1	Power cable	
	XRS-6	RF cable	

Provides VBAT and Flashbus connections to mobile device programming adapters.

The PCS-1 power cable (DC) is used with a docking station, a module jig or a control unit to supply a controlled voltage.

The RF cable is used to connect, for example, a module repair jig to the RF measurement equipment.  
SMA to N-Connector approximately 610 mm.  
Attenuation for:

- GSM850/900: 0.3+-0.1 dB
- GSM1800/1900: 0.5+-0.1 dB
- WCDMA/WLAN: 0.6+-0.1dB

## ■ Service concepts

### POS (Point of Sale) flash concept

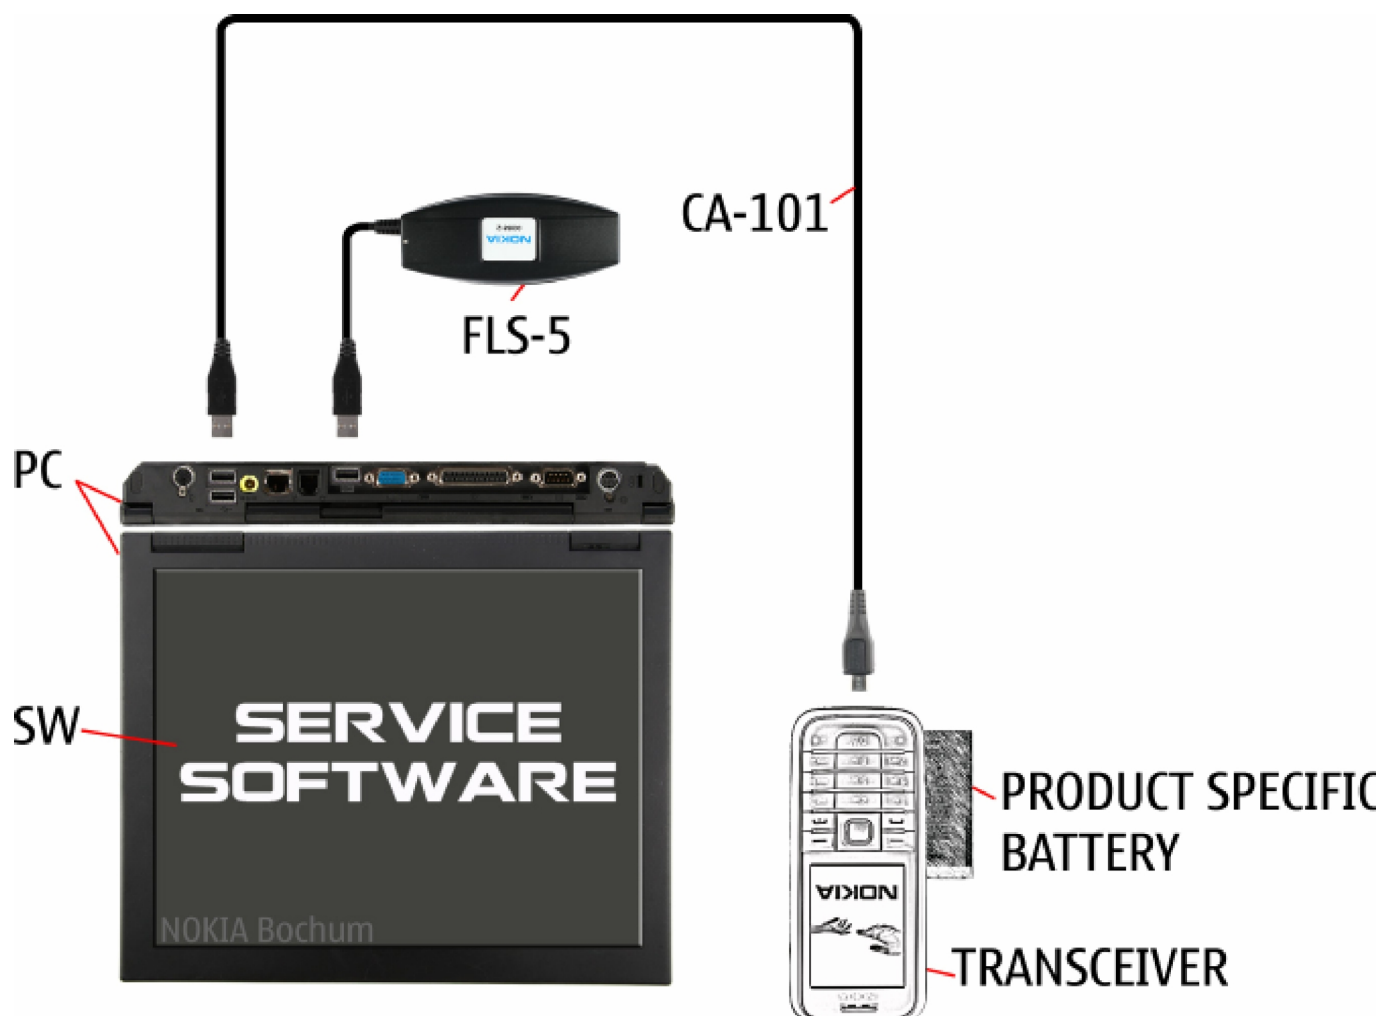


Figure 2 POS flash concept

Type	Description
<b>Product specific tools</b>	
BL-4J	Battery
<b>Other tools</b>	
FLS-5	POS flash dongle
	PC with Phoenix service software
<b>Cables</b>	
CA-101	USB connectivity cable

## Flash concept with FPS-21

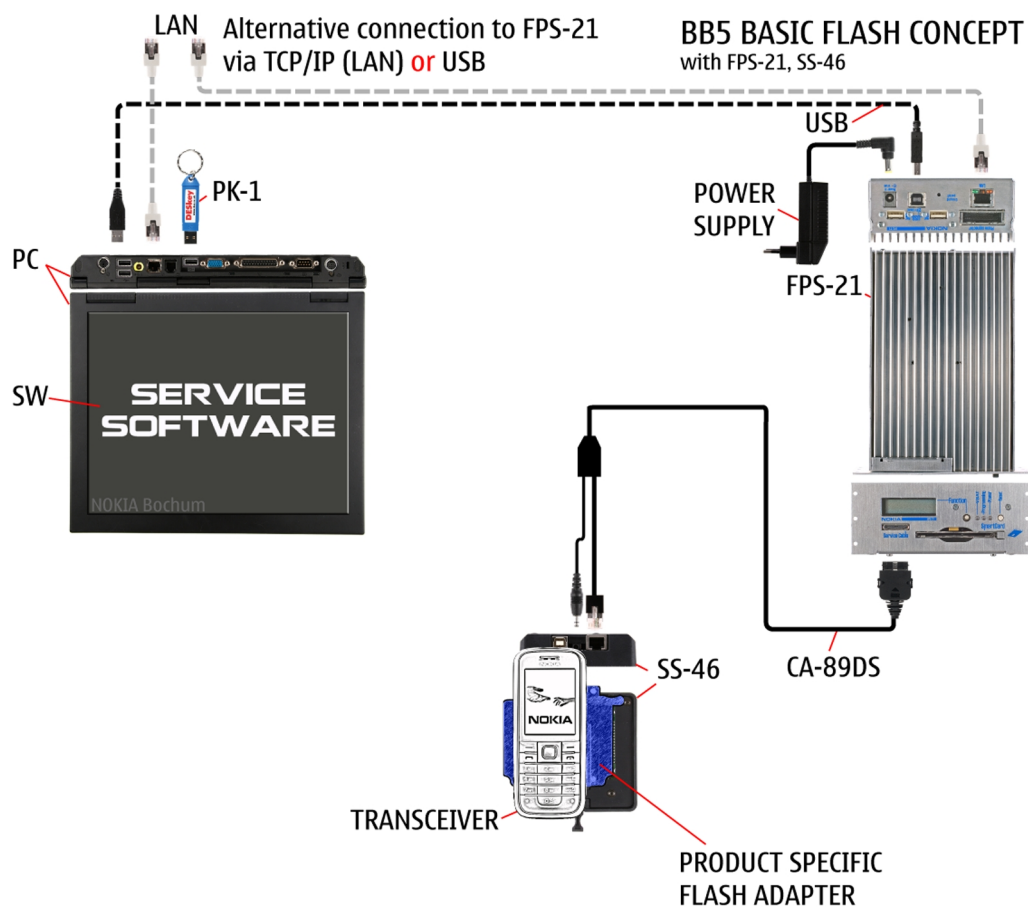


Figure 3 Basic flash concept with FPS-21

Type	Description
<b>Product specific devices</b>	
FS-141	Flash adapter
<b>Other devices</b>	
FPS-21	Flash prommer box
AC-35	Power supply
PK-1	SW security device
SS-46	Interface adapter
	PC with Phoenix service software
<b>Cables</b>	
CA-89DS	Service cable
	USB cable



## CU-4 flash concept with FPS-21

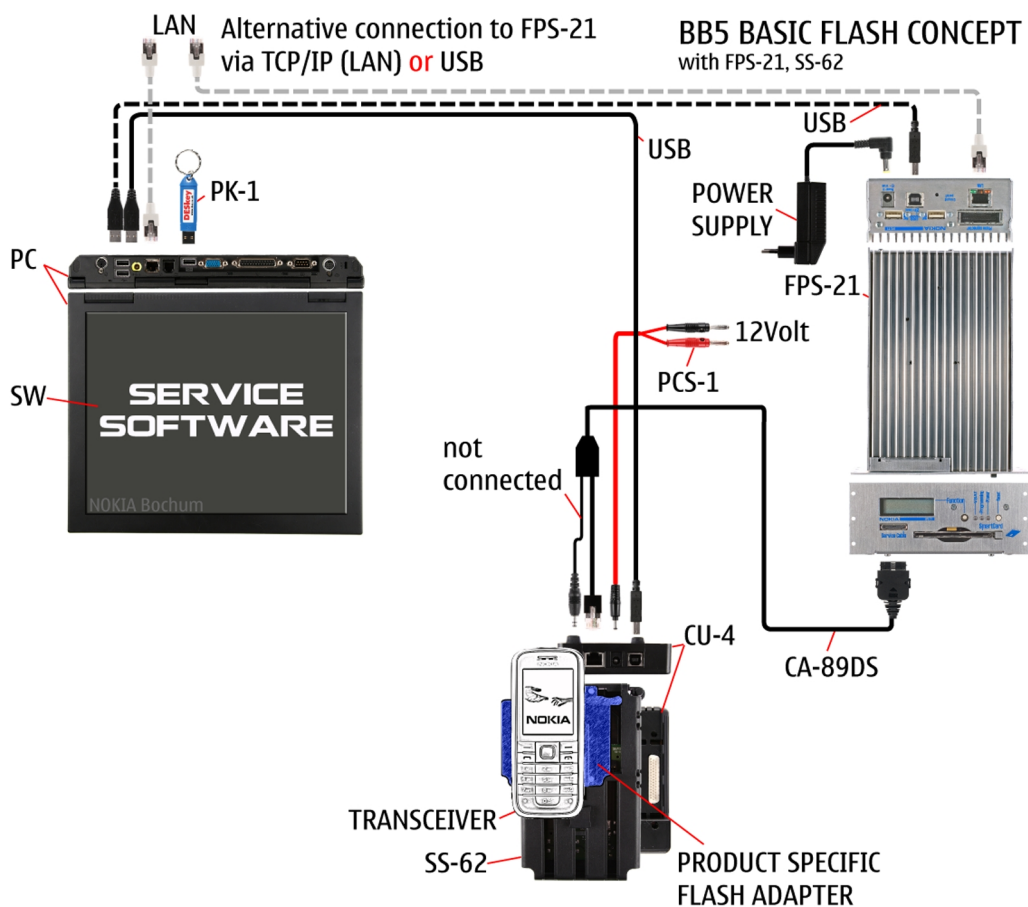


Figure 4 CU-4 flash concept with FPS-21

Type	Description
<b>Product specific devices</b>	
FS-141	Flash adapter
<b>Other devices</b>	
CU-4	Control unit
FPS-21	Flash prommer box
AC-35	Power supply
PK-1	SW security device
SS-62	Flash adapter base
SX-4	Smart card (for DCT-4 generation mobile device programming)
	PC with Phoenix service software
<b>Cables</b>	
PCS-1	Power cable
CA-89DS	Service cable
	Standard USB cable

Type	Description
	USB cable

### Flash concept with FPS-21 and SB-6

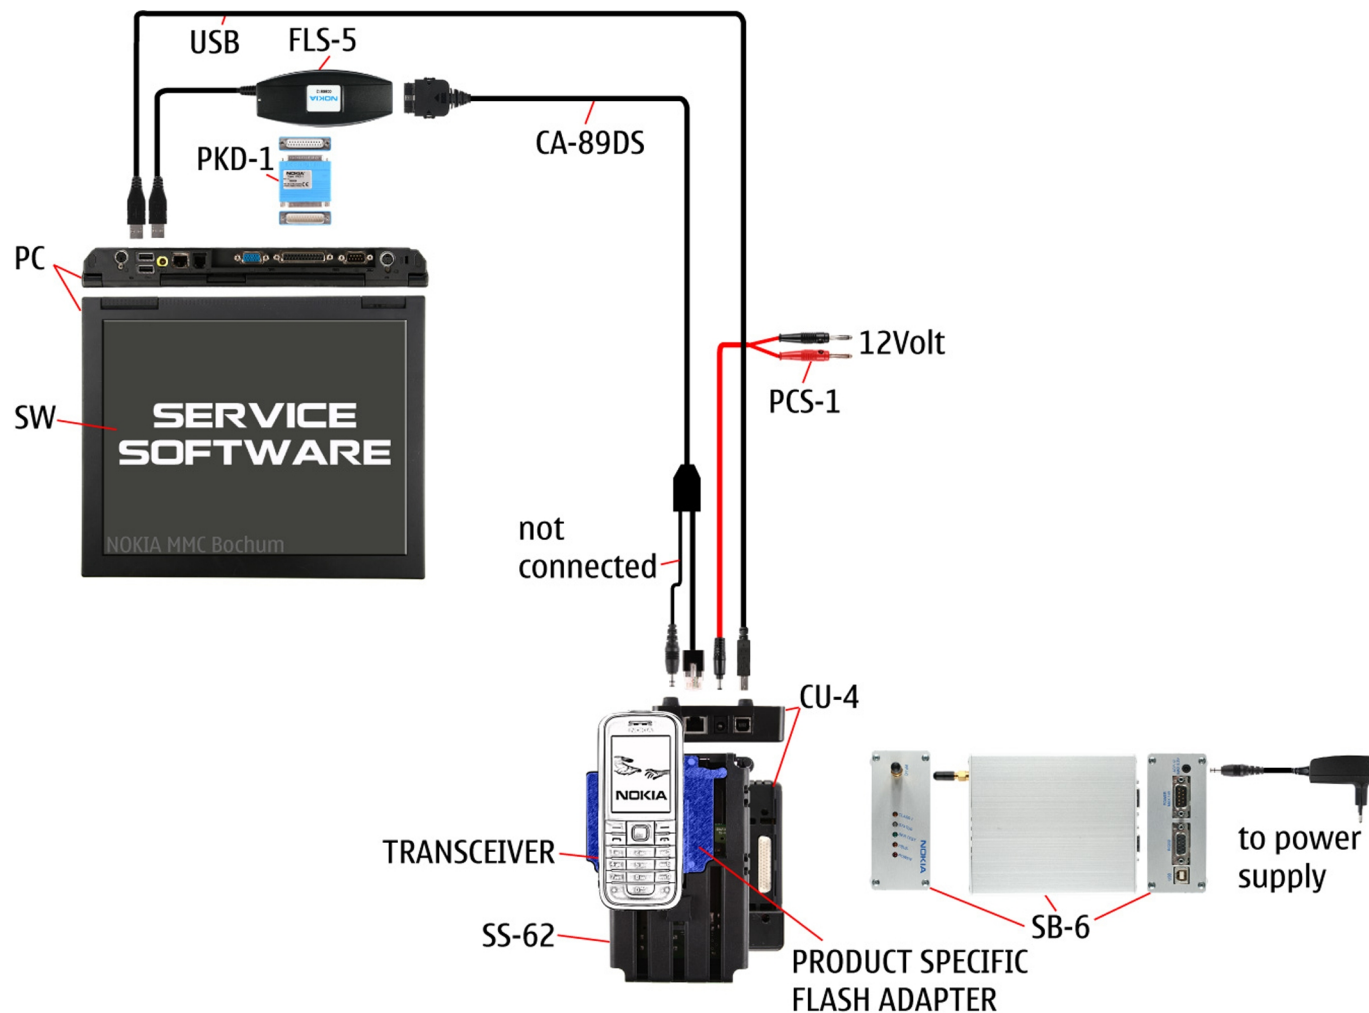


Figure 5 Flash concept with FPS-21 and SB-6

Type	Description
<b>Product specific tools</b>	
FS-141	Flash adapter
<b>Other tools</b>	
FPS-21	Flash prommer box
PKD-1/PK-1	SW security device
SS-46	Interface adapter
SB-6	Bluetooth test and interface box
	PC with Phoenix service software
<b>Cables</b>	



Type	Description
XCS-4	Modular cable
CA-35S	Power cable
	USB cable

### Flash concept with SS-46 and CA-89DS

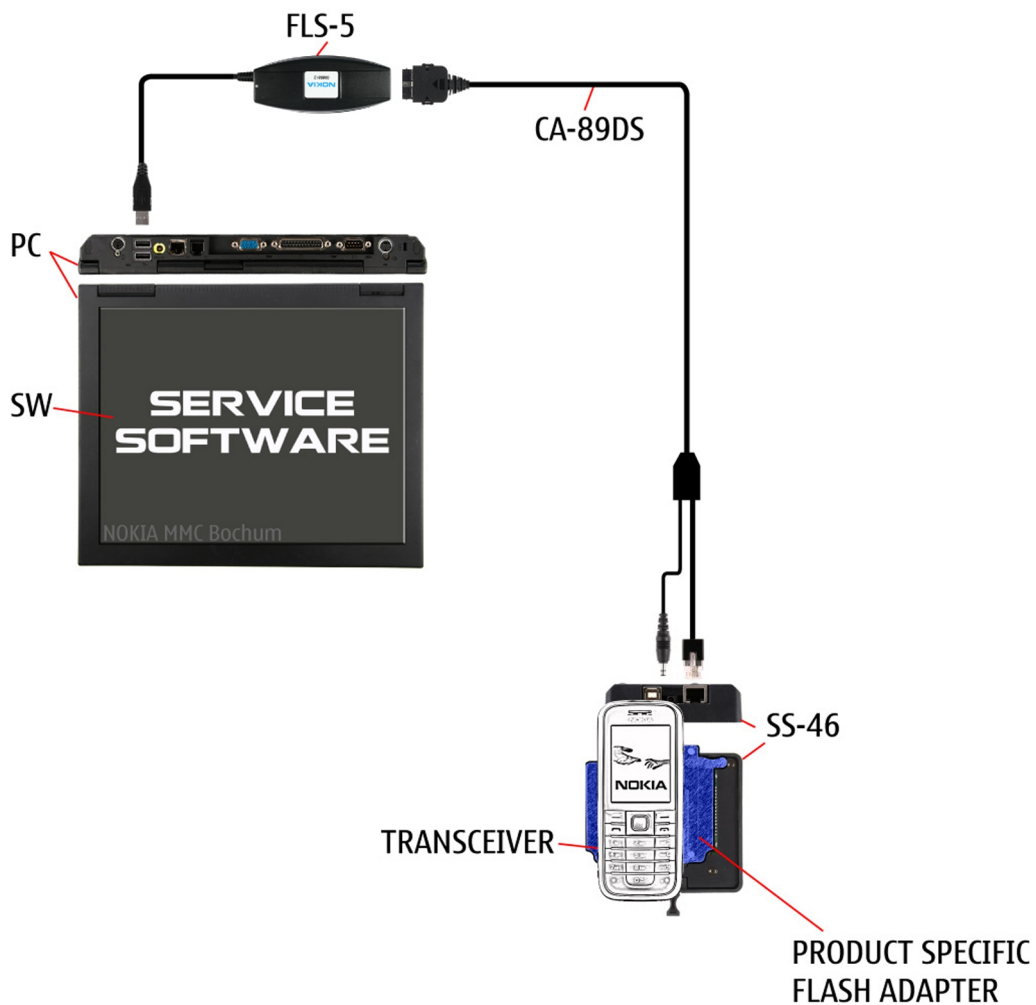


Figure 6 Flash concept with SS-46 and CA-89DS

Type	Description
<b>Product specific tools</b>	
FS-141	Flash adapter
<b>Other tools</b>	
FLS-5	Flash device
SS-46	Interface adapter
	PC with Phoenix service software
<b>Cables</b>	

Type	Description
CA-89DS	Cable

### Flash concept with SS-62 and CA-89DS

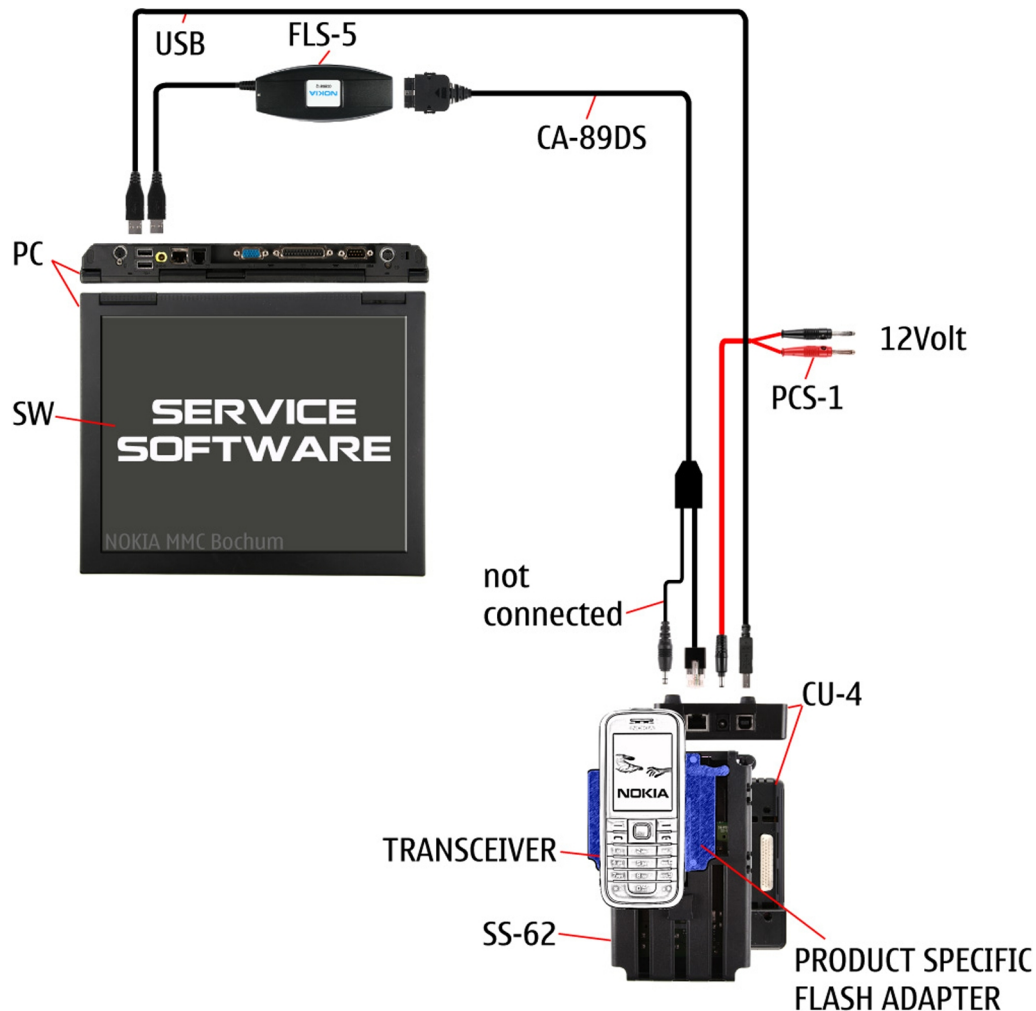


Figure 7 Flash concept with SS-62 and CA-89DS

Type	Description
<b>Product specific tools</b>	
FS-141	Flash adapter
<b>Other tools</b>	
CU-4	Control unit
FLS-5	Flash device
SS-62	Flash adapter base
	PC with Phoenix service software
<b>Cables</b>	
CA-89DS	Cable

Type	Description
PCS-1	Power cable
	USB cable

### Flash concept with FPS-21, SS-62 and SB-6

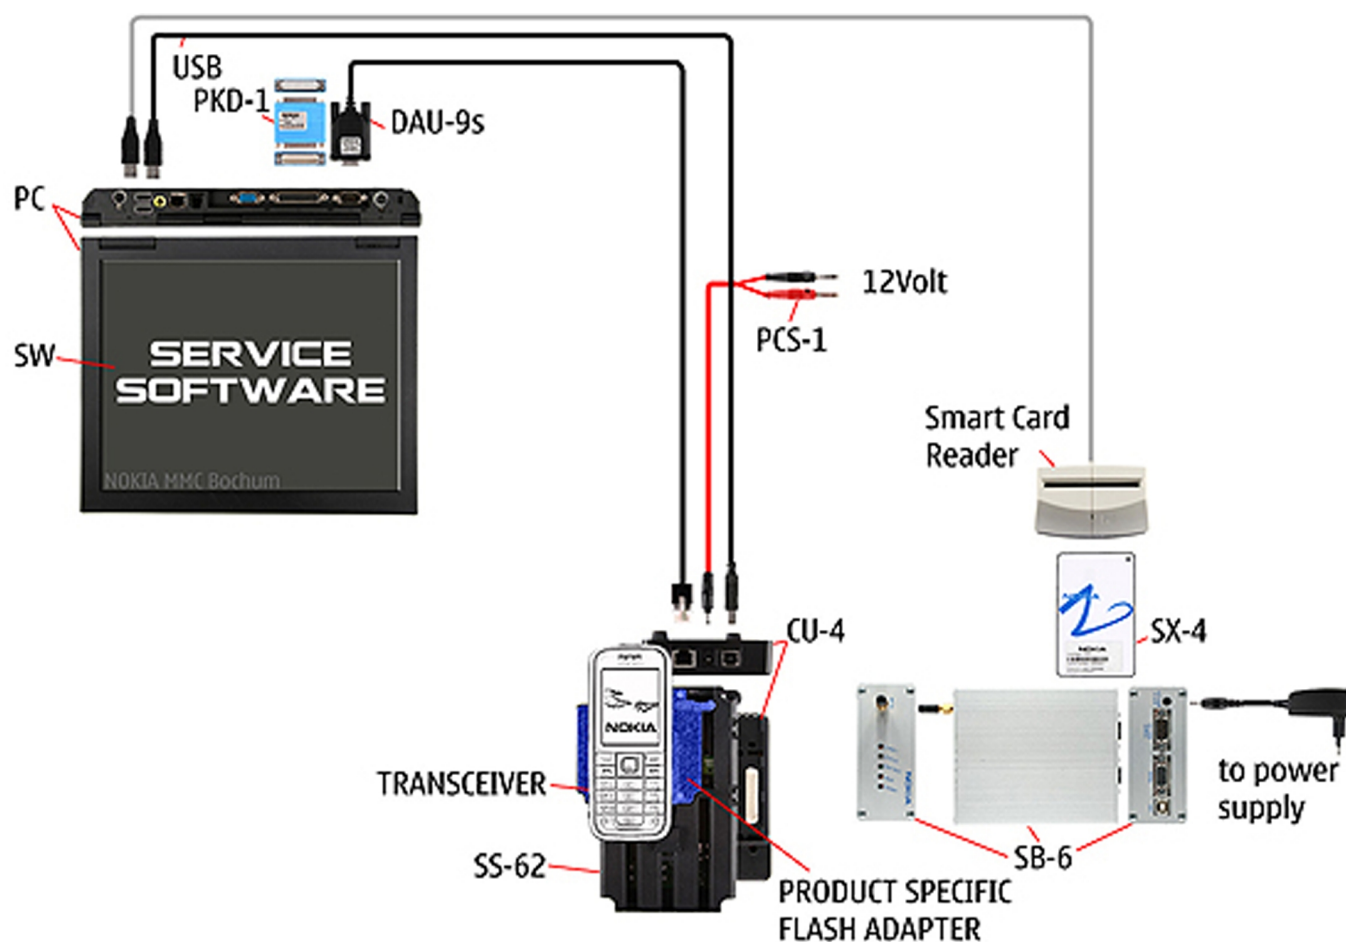


Figure 8 Flash concept with FPS-21, SS-62 and SB-6

Type	Description
<b>Product specific tools</b>	
FS-141	Flash adapter
<b>Other tools</b>	
CU-4	Control unit
FPS-21	Flash prommer box
PKD-1/PK-1	SW security device
SS-62	Flash adapter base
SB-6	Bluetooth test and interface box
SX-4	Smart card
	PC with Phoenix service software

Type	Description
<b>Cables</b>	
XCS-4	Modular cable
PCS-1	Power cable
	USB cable

### Flash concept with FPS-21, SS-62 and SB-7

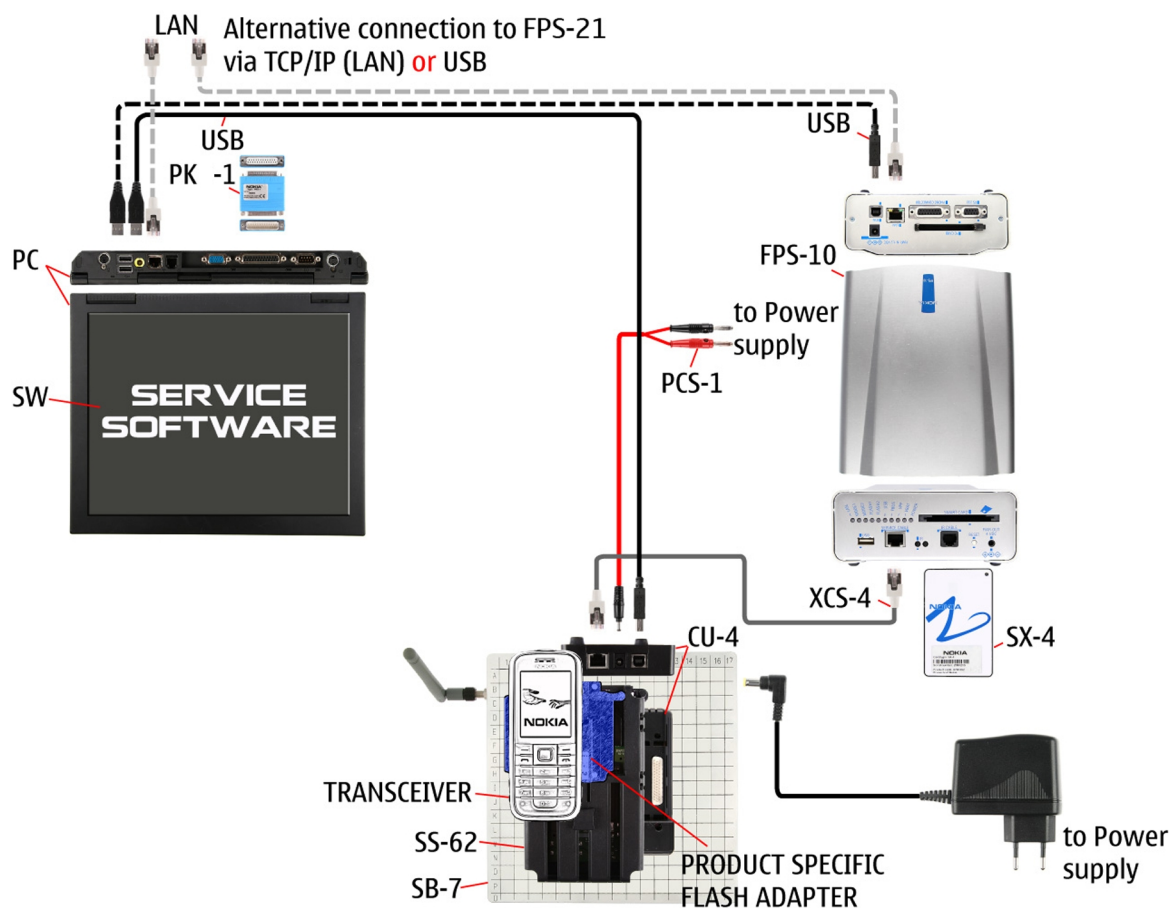


Figure 9 Flash concept with FPS-21, SB-7 and JBT-9

Type	Description
<b>Product specific tools</b>	
FS-141	Flash adapter
<b>Other tools</b>	
CU-4	Control unit
FPS-21	Flash prommer box
PK-1	SW security device
SB-7	WLAN test box
SS-62	Flash adapter base

Type	Description
SX-4	Smart card
	PC with Phoenix service software
<b>Cables</b>	
XCS-4	Modular cable
PCS-1	Power cable
	USB cable

## Module jig service concept

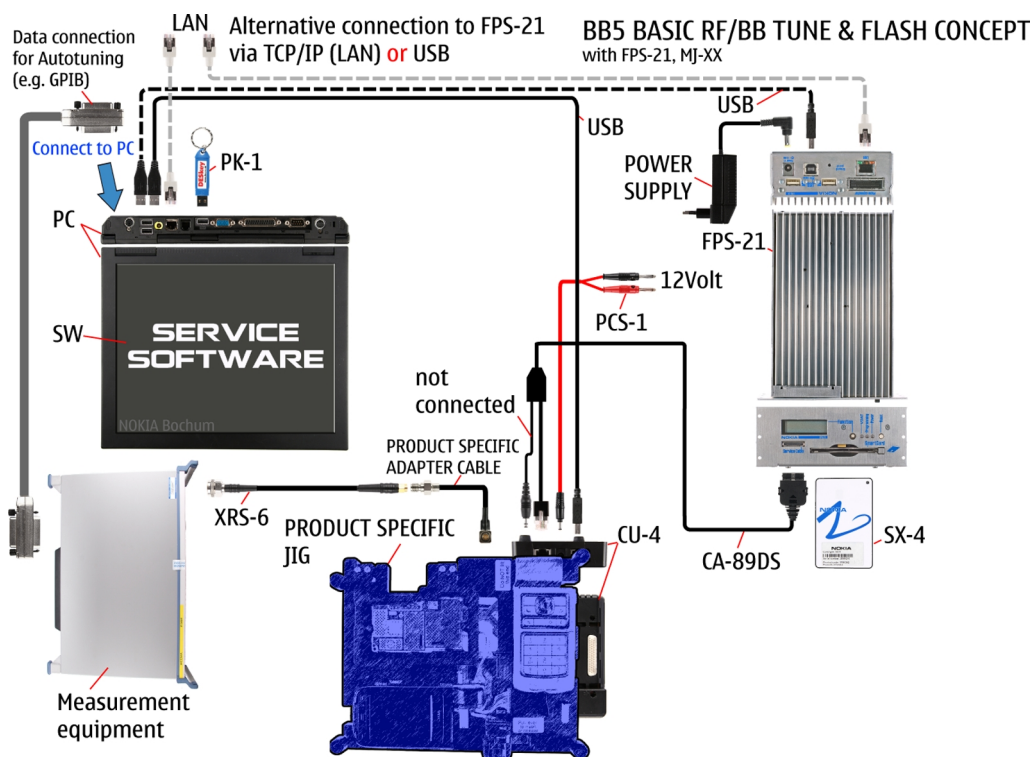


Figure 10 Module jig service concept

Type	Description
<b>Phone specific tools</b>	
MJ-263	Light Module Jig
<b>Other tools</b>	
CU-4	Control unit
FPS-21	Flash prommer box
PK-1	SW security device
SX-4	Smart card
	PC with Phoenix service software
	Measurement equipment

Type	Description
<b>Cables</b>	
CA-89DS	Service cable
PCS-1	DC power cable
XRS-6	RF cable
	USB cable
	GPIO control cable

## Module jig service concept with SB-6

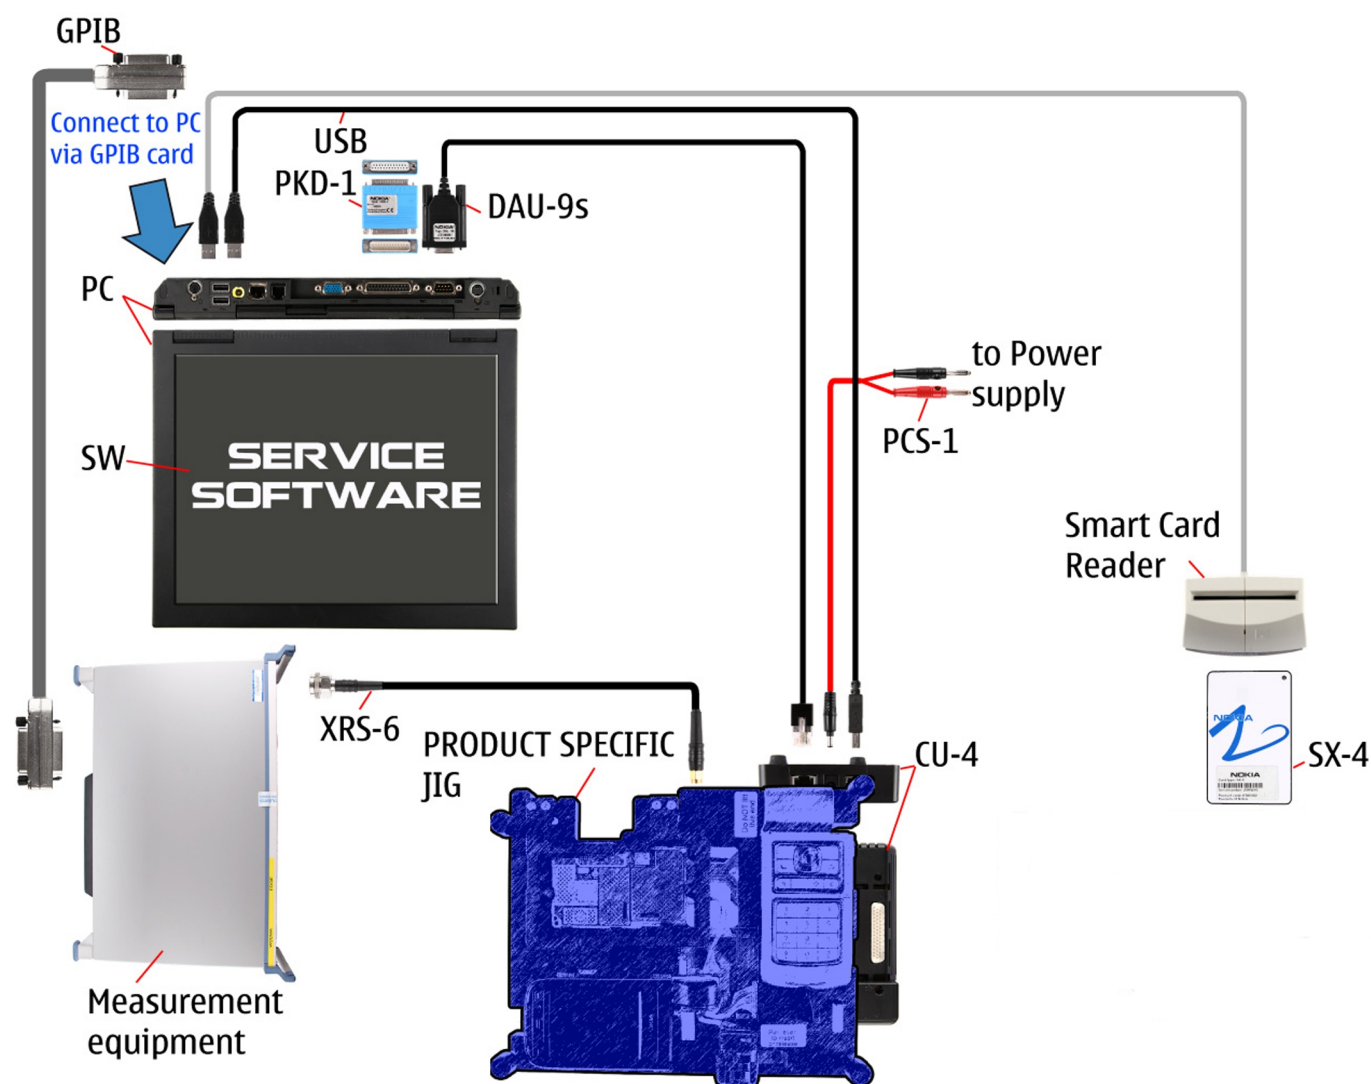


Figure 11 Module jig service concept with SB-6

Type	Description
<b>Product specific tools</b>	
MJ-263	Light Module Jig
<b>Other tools</b>	

Type	Description
CU-4	Control unit
FPS-21	Flash prommer box
SB-6	Bluetooth test and interface box
PK-1/PKD-1	SW security device
SX-4	Smart card
	Measurement equipment
	PC with Phoenix service software
<b>Cables</b>	
PCS-1	DC power cable
XCS-4	Modular cable
XRS-6	RF cable
CA-158RS	RF tuning cable
	GPIB control cable
	USB cable

### Service concept for RF testing and RF/BB tuning

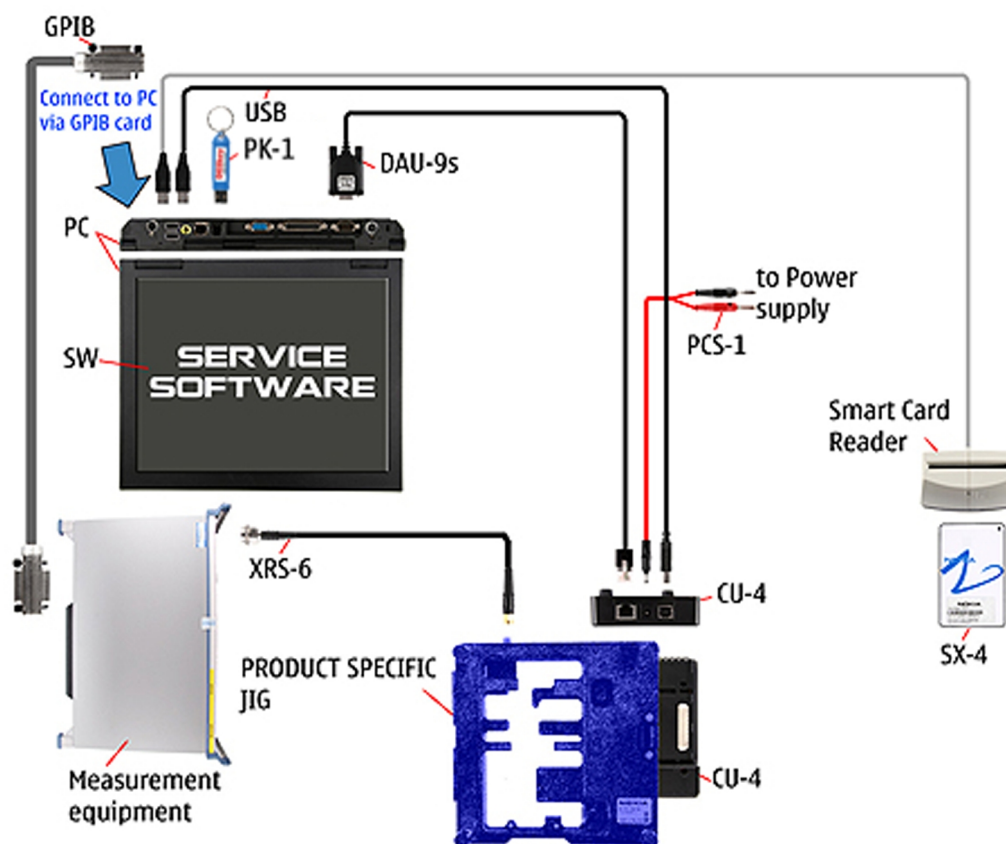


Figure 12 Service concept for RF testing and RF/BB tuning



Type	Description
<b>Product specific devices</b>	
MJ-263	Light Module Jig
<b>Other devices</b>	
CU-4	Control unit
PK-1/PKD-1	SW security device
SX-4	Smart card
	Measurement equipment
	Smart card reader
	PC with Phoenix service software
<b>Cables</b>	
DAU-9S	MBUS cable
PCS-1	DC power cable
XRS-6	RF cable
CA-158RS	RF tuning cable
	GPIB control cable
	USB cable



## **3 — BB Troubleshooting and Manual Tuning Guide**

(This page left intentionally blank.)

## Table of Contents

Baseband main troubleshooting .....	3-5
Dead or jammed device troubleshooting .....	3-8
General power checking .....	3-9
Clocking troubleshooting .....	3-11
Charging troubleshooting .....	3-12
Backup battery troubleshooting .....	3-13
Flash programming troubleshooting .....	3-15
Combo memory troubleshooting .....	3-18
MicroSD card troubleshooting .....	3-19
USB troubleshooting .....	3-21
SIM card troubleshooting .....	3-22
Power key troubleshooting .....	3-24
Vibra troubleshooting .....	3-25
Accelerometer troubleshooting .....	3-26
Touch screen troubleshooting .....	3-26
Introduction to touch screen troubleshooting .....	3-26
Proximity sensor troubleshooting .....	3-27
Resistive touch screen troubleshooting .....	3-30
Hardware keys troubleshooting .....	3-33
Display module troubleshooting .....	3-36
General instructions for display troubleshooting .....	3-36
Display troubleshooting .....	3-37
Display backlight troubleshooting .....	3-38
LED and LED driver troubleshooting .....	3-40
Ambient Light Sensor troubleshooting .....	3-42
Introduction to ALS troubleshooting .....	3-42
GPS troubleshooting .....	3-43
GPS antenna .....	3-43
GPS settings for Phoenix .....	3-44
GPS control .....	3-44
Oscillator test .....	3-45
Receiver self test .....	3-46
CW Test .....	3-47
Quick Test window .....	3-48
GPS failure troubleshooting .....	3-49
WLAN troubleshooting .....	3-50
WLAN functional description .....	3-50
WLAN settings for Phoenix .....	3-51
WLAN functional tests .....	3-53
WLAN auto tuning .....	3-56
Bluetooth and FM radio troubleshooting .....	3-58
Introduction to Bluetooth/FM radio troubleshooting .....	3-58
Bluetooth BER test .....	3-61
Bluetooth and FM radio self tests in Phoenix .....	3-62
FM radio testing .....	3-63
Audio troubleshooting .....	3-64
Audio troubleshooting test instructions .....	3-64
Internal earpiece troubleshooting .....	3-67
Internal microphone troubleshooting .....	3-68
Internal handsfree speaker troubleshooting .....	3-69

External microphone troubleshooting .....	3-70
External headset earpiece troubleshooting .....	3-71
Acoustics troubleshooting .....	3-72
Introduction to acoustics troubleshooting .....	3-72
Earpiece troubleshooting .....	3-73
IHF troubleshooting .....	3-74
Microphone troubleshooting .....	3-75
Baseband manual tuning guide .....	3-76
Certificate restoring .....	3-76
Energy management calibration .....	3-77

## List of Tables


Table 7 Display module troubleshooting cases .....	3-36
Table 8 Pixel defects .....	3-36
Table 9 Calibration value limits .....	3-77


## List of Figures

Figure 13 Proximity sensor troubleshooting - part 2 .....	3-28
Figure 14 Touch controller basic checks .....	3-32
Figure 15 Touch screen basic checks .....	3-33
Figure 16 Keymatrix .....	3-35
Figure 17 Send, End, Home LEDs .....	3-41
Figure 18 QWERTY LEDs .....	3-42
Figure 19 ALS placement .....	3-43
Figure 20 GPS antenna .....	3-43
Figure 21 C-clip and RF connector location .....	3-44
Figure 22 GPS Control dialog box .....	3-45
Figure 23 Simple Tests – Oscillator Test .....	3-46
Figure 24 Simple Tests – Receiver Self Test .....	3-47
Figure 25 CW Test window .....	3-48
Figure 26 GPS Quick Test window for GPS troubleshooting .....	3-49
Figure 27 WLAN circuitry .....	3-51
Figure 28 WLAN component placement .....	3-51
Figure 29 WLAN auto tune settings .....	3-57
Figure 30 WLAN autotuning results .....	3-58
Figure 31 WLAN/BT/GPS antenna .....	3-59
Figure 32 Bluetooth/FM radio component layout and test points .....	3-61
Figure 33 Bluetooth BER test .....	3-62
Figure 34 Bluetooth and FM radio self tests in Phoenix .....	3-63
Figure 35 Single-ended output waveform of the AV Mic to HP Ear measurement when earpiece is connected. ....	3-65
Figure 36 Single-ended output waveform of the Ext_microphone in Int handsfree out loop measurement when speaker is connected (measured at speaker pads). No filter is used. ....	3-66
Figure 37 Single-ended output waveform of the AV Mic to AV Ear loop .....	3-66
Figure 38 Single-ended output waveform of the HP Mic to AV Ear loop. ....	3-66


## ■ Baseband main troubleshooting

### Troubleshooting flow

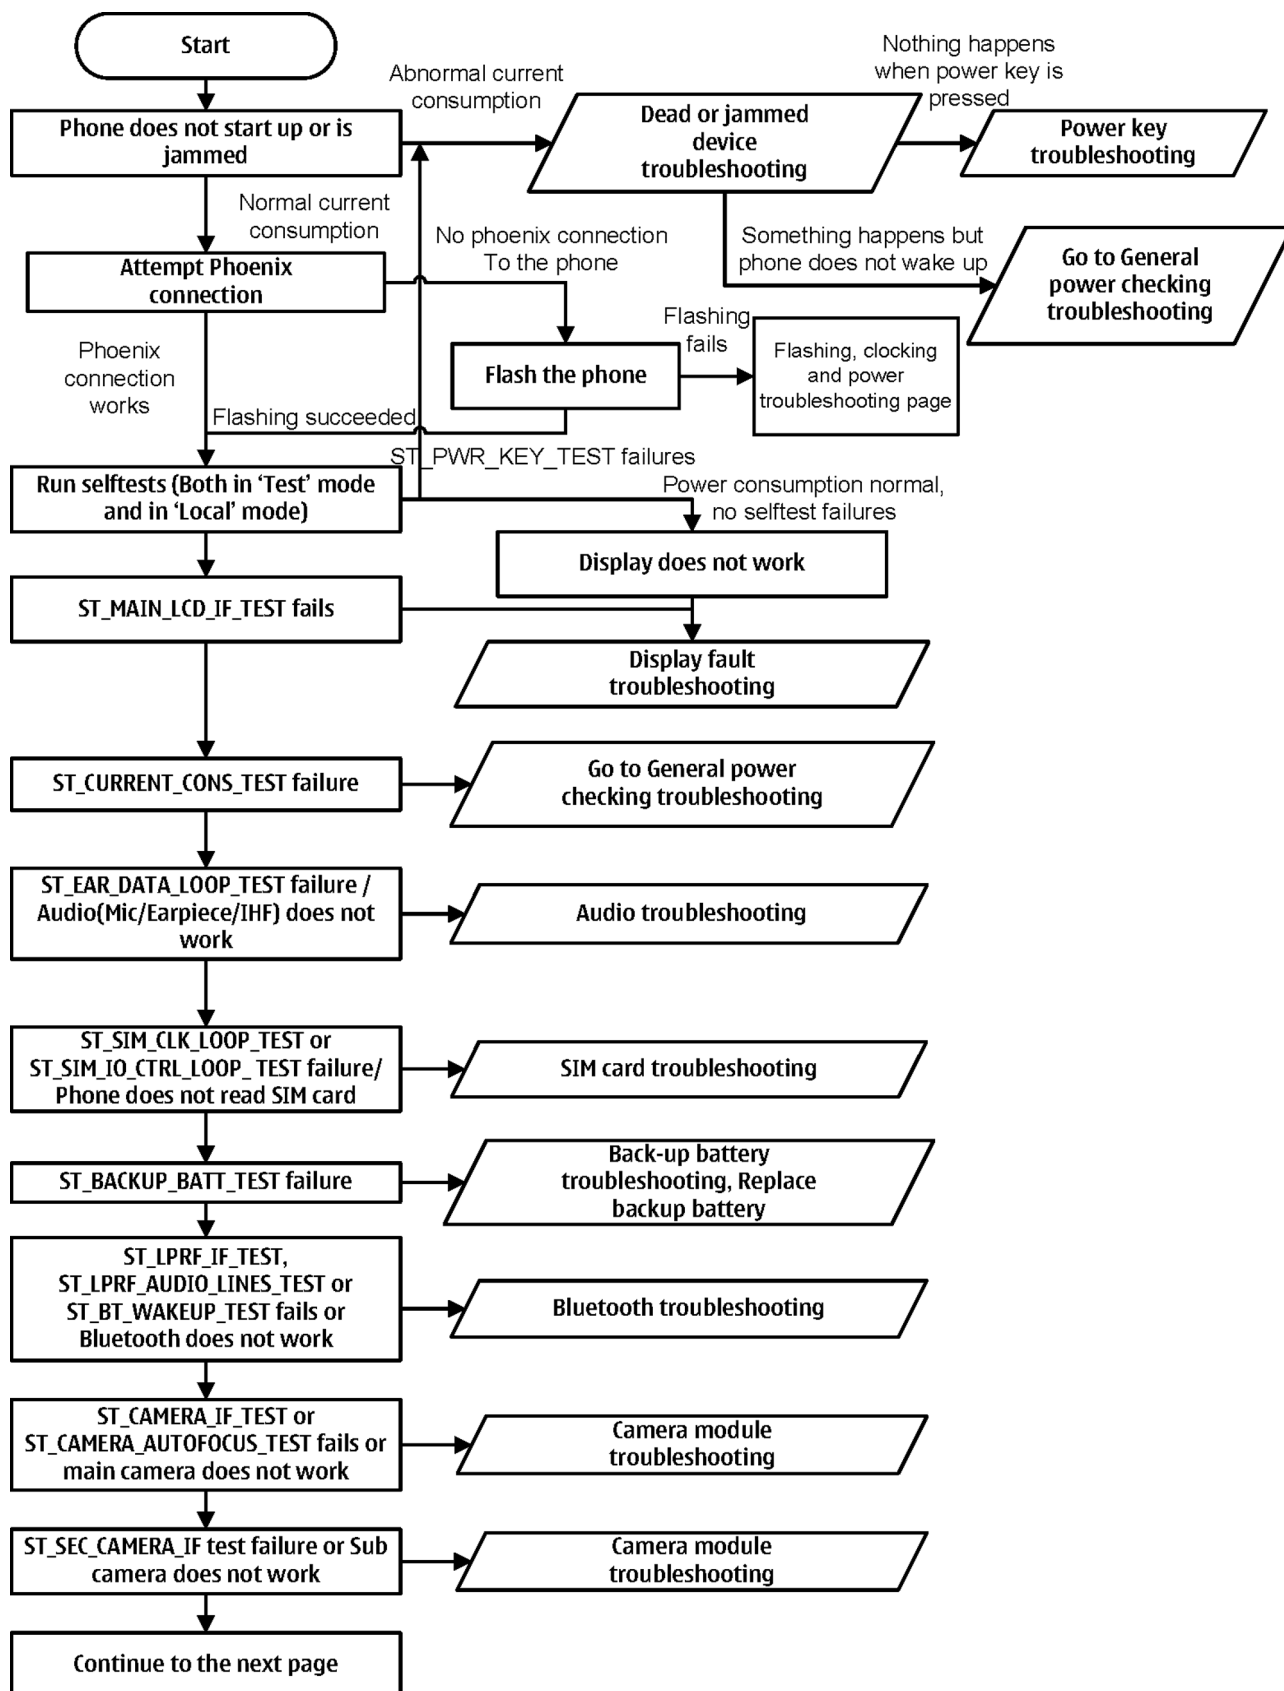

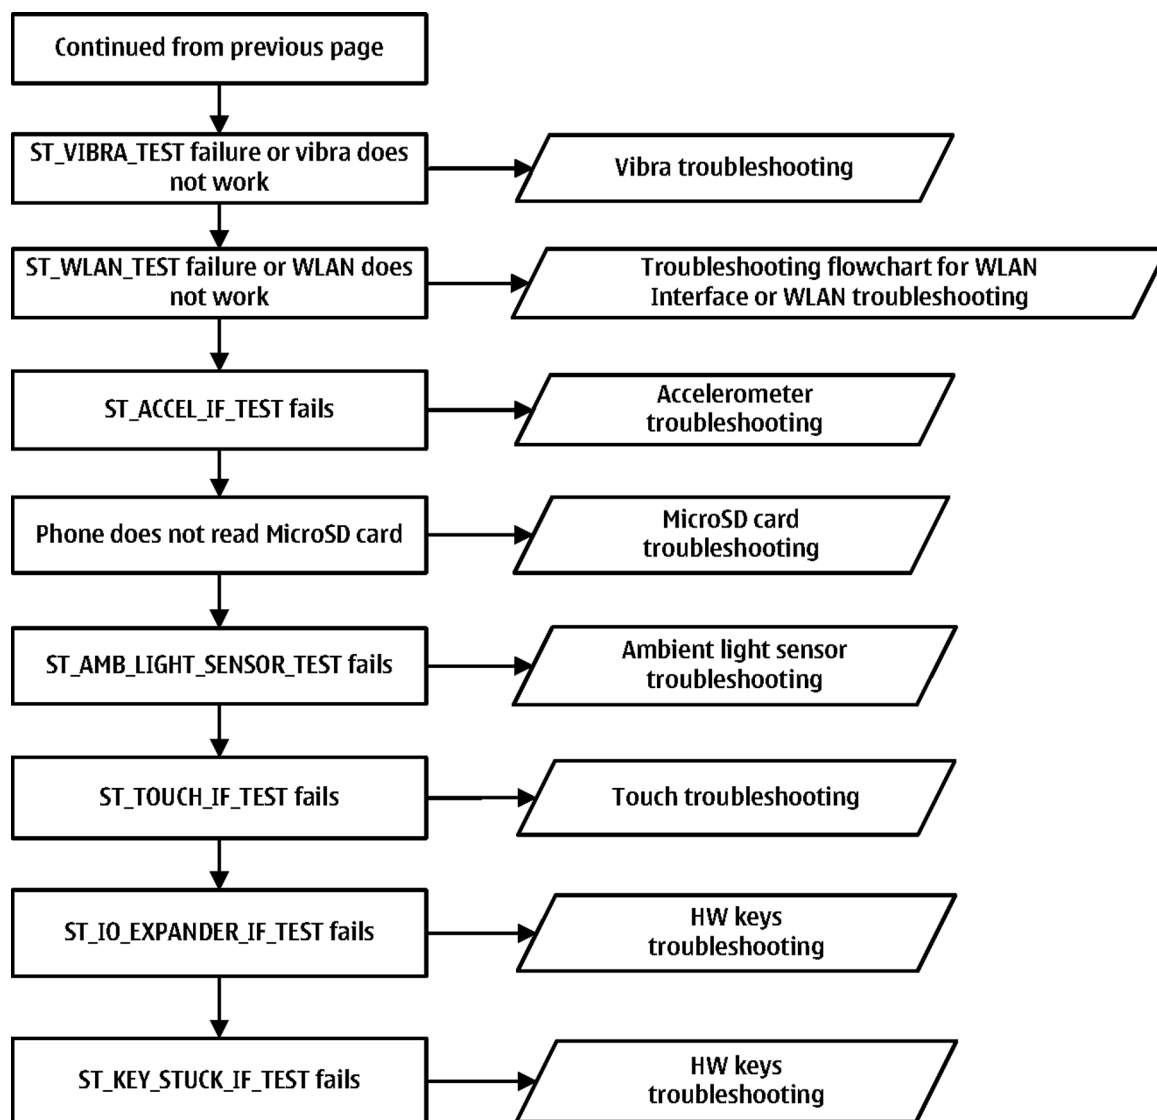


## Flashing, clocking and power troubleshooting

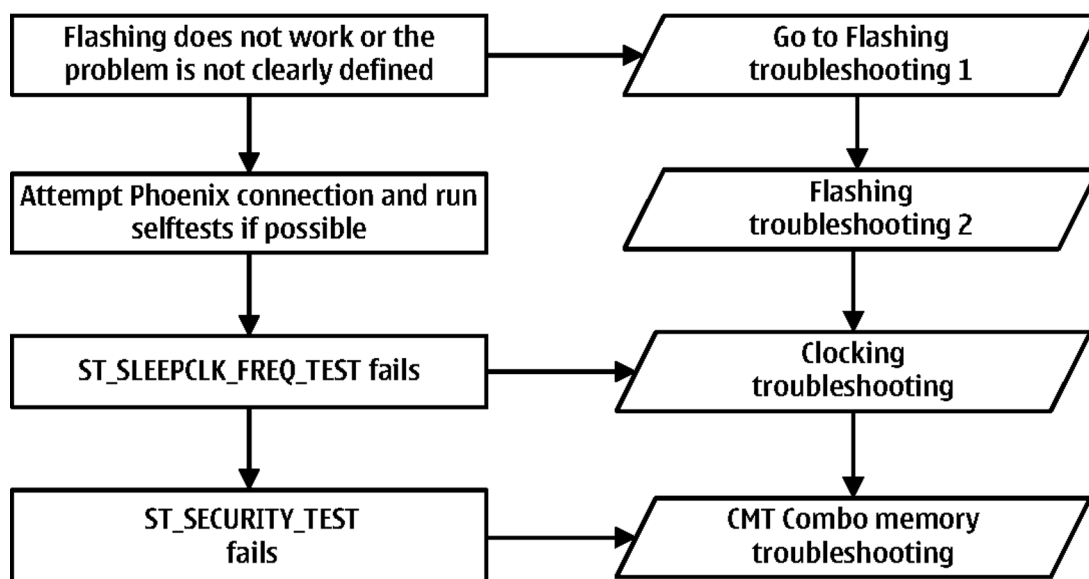



## ■ Dead or jammed device troubleshooting

### Troubleshooting flow

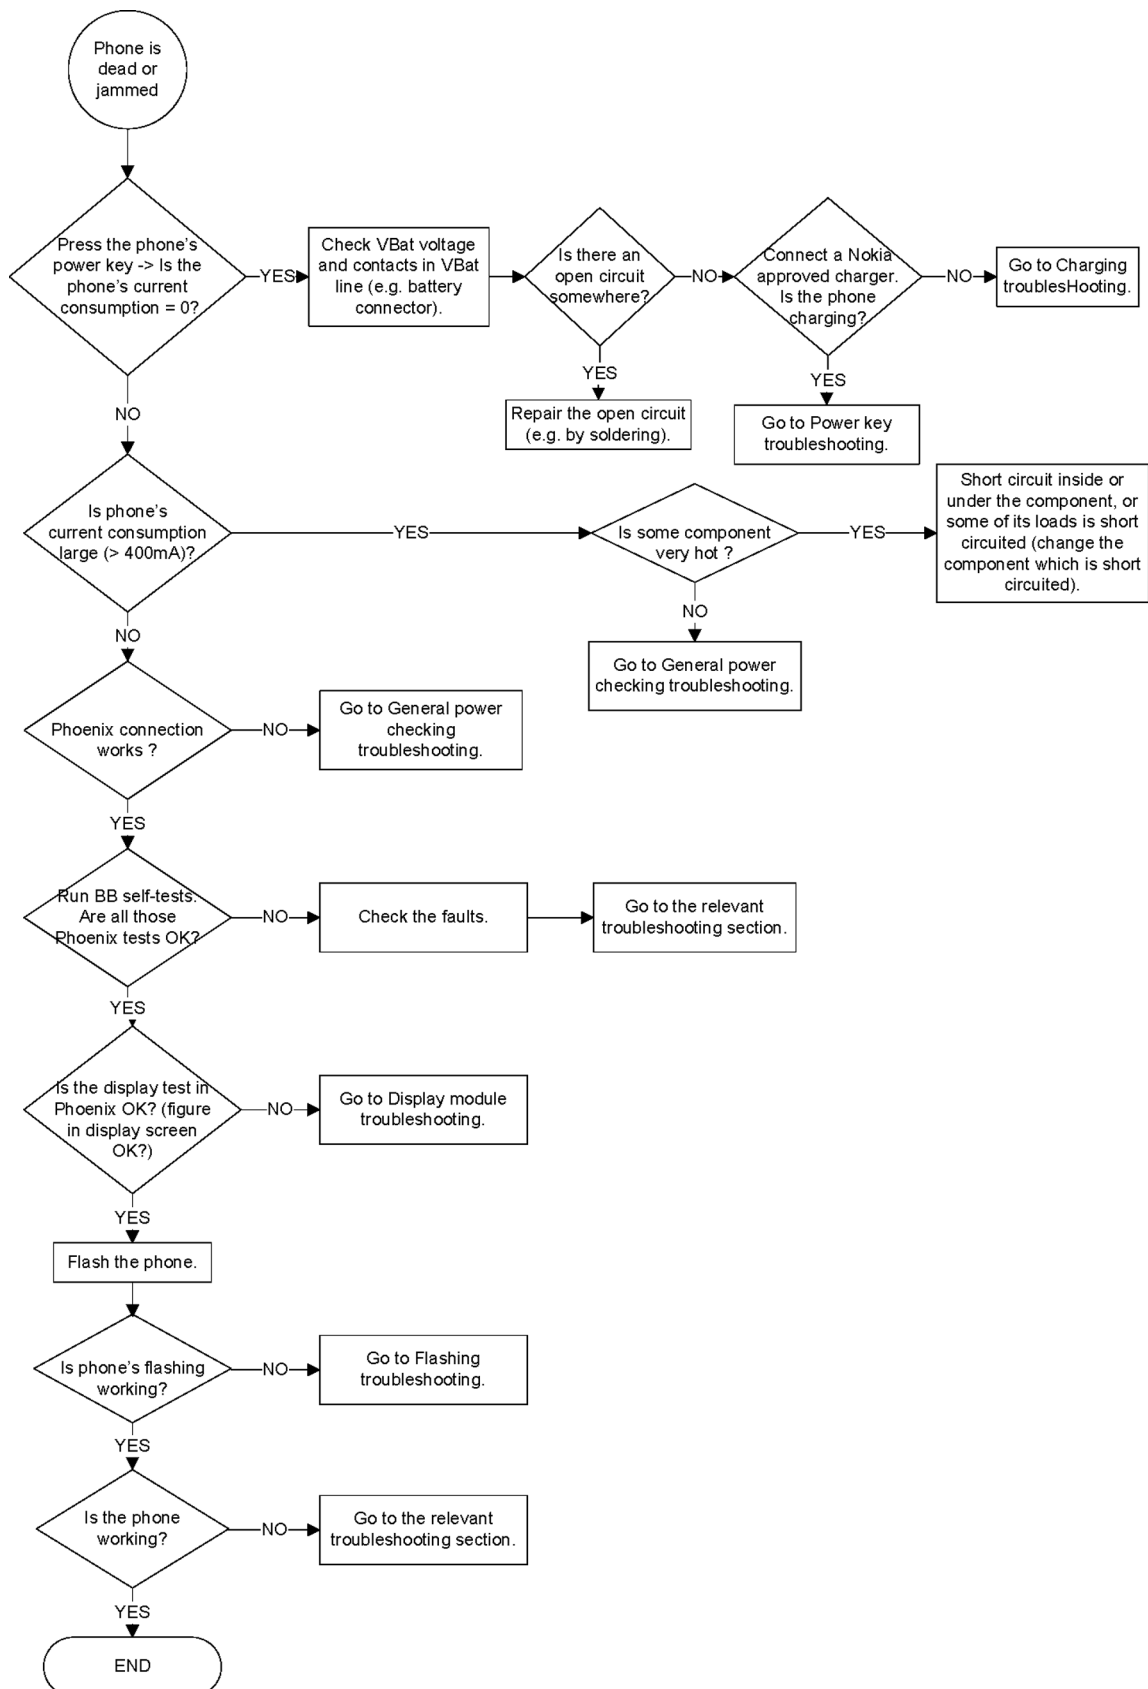

## ■ General power checking


### General power checking

Signal name	Regulator	Sleep	Idle	Nominal voltage	Main user	Notes	Supply
VIO_V	AVILMA	ON	ON	1.82	Vilma I/O		VBAT1
VBACK	AVILMA	ON	ON	2.5	RTC circuitry		
VSIM1	AVILMA	ON	ON	1.8/3.0	SIM card		VBAT3
VSIM2	AVILMA	OFF		1.0	Digital microphone		VBAT3
VAUX	AVILMA	ON	ON	2.78	Accelerometer, proximity sensor, Hall sensor, display		VBAT5
VANA	AVILMA	ON	ON	2.5	Vilma internal		VBAT4
VR1	AVILMA	OFF	ON	2.5	VCTCX0		VBAT4
VRFC	AVILMA	OFF		1.8	Rapido RF converter		
VRCP1	AVILMA	OFF		4.75	RF module		VBATCP
VOUT	BETTY	ON	ON	2.5	Audio switch		VBAT
VDAC	LP3985	ON	ON	3.0	DAC33		VBAT
VCAM_1V8	TPS62600	OFF		1.8	Camera HWA , LP5952, cameras		VBAT
VCAM_1V3	LP5952	OFF		1.3	Camera HWA core		VCAM_1V8
VCAM_2V8	BH28SA2	OFF		2.8	Cameras		VBAT
VCORE	TPS62350	ON	ON	1.2	Rapido core		VBAT
VIO	TPS62600	ON	ON	1.8	VIO, VDRAM		VBAT
VSD	SD level shifter	OFF		2.9	SD card		VBAT
SETCURR	TK65604	OFF			Display backlights		VBAT
	LP5521	OFF			QWERTY key LED		VBAT
LED End, Send, Chg, Home	LP5521	OFF			Menu key, Send/End key, BEZEL LED		VBAT
	AS3645A	OFF		4.5/5.5	Camera flash		VBAT
VBAT				3.7			

Signal name	Regulator	Sleep	Idle	Nominal voltage	Main user	Notes	Supply
VOUT (camera)	BH30SA2	OFF		3.0	Camera		VBAT


## ■ Clocking troubleshooting

### Troubleshooting flow

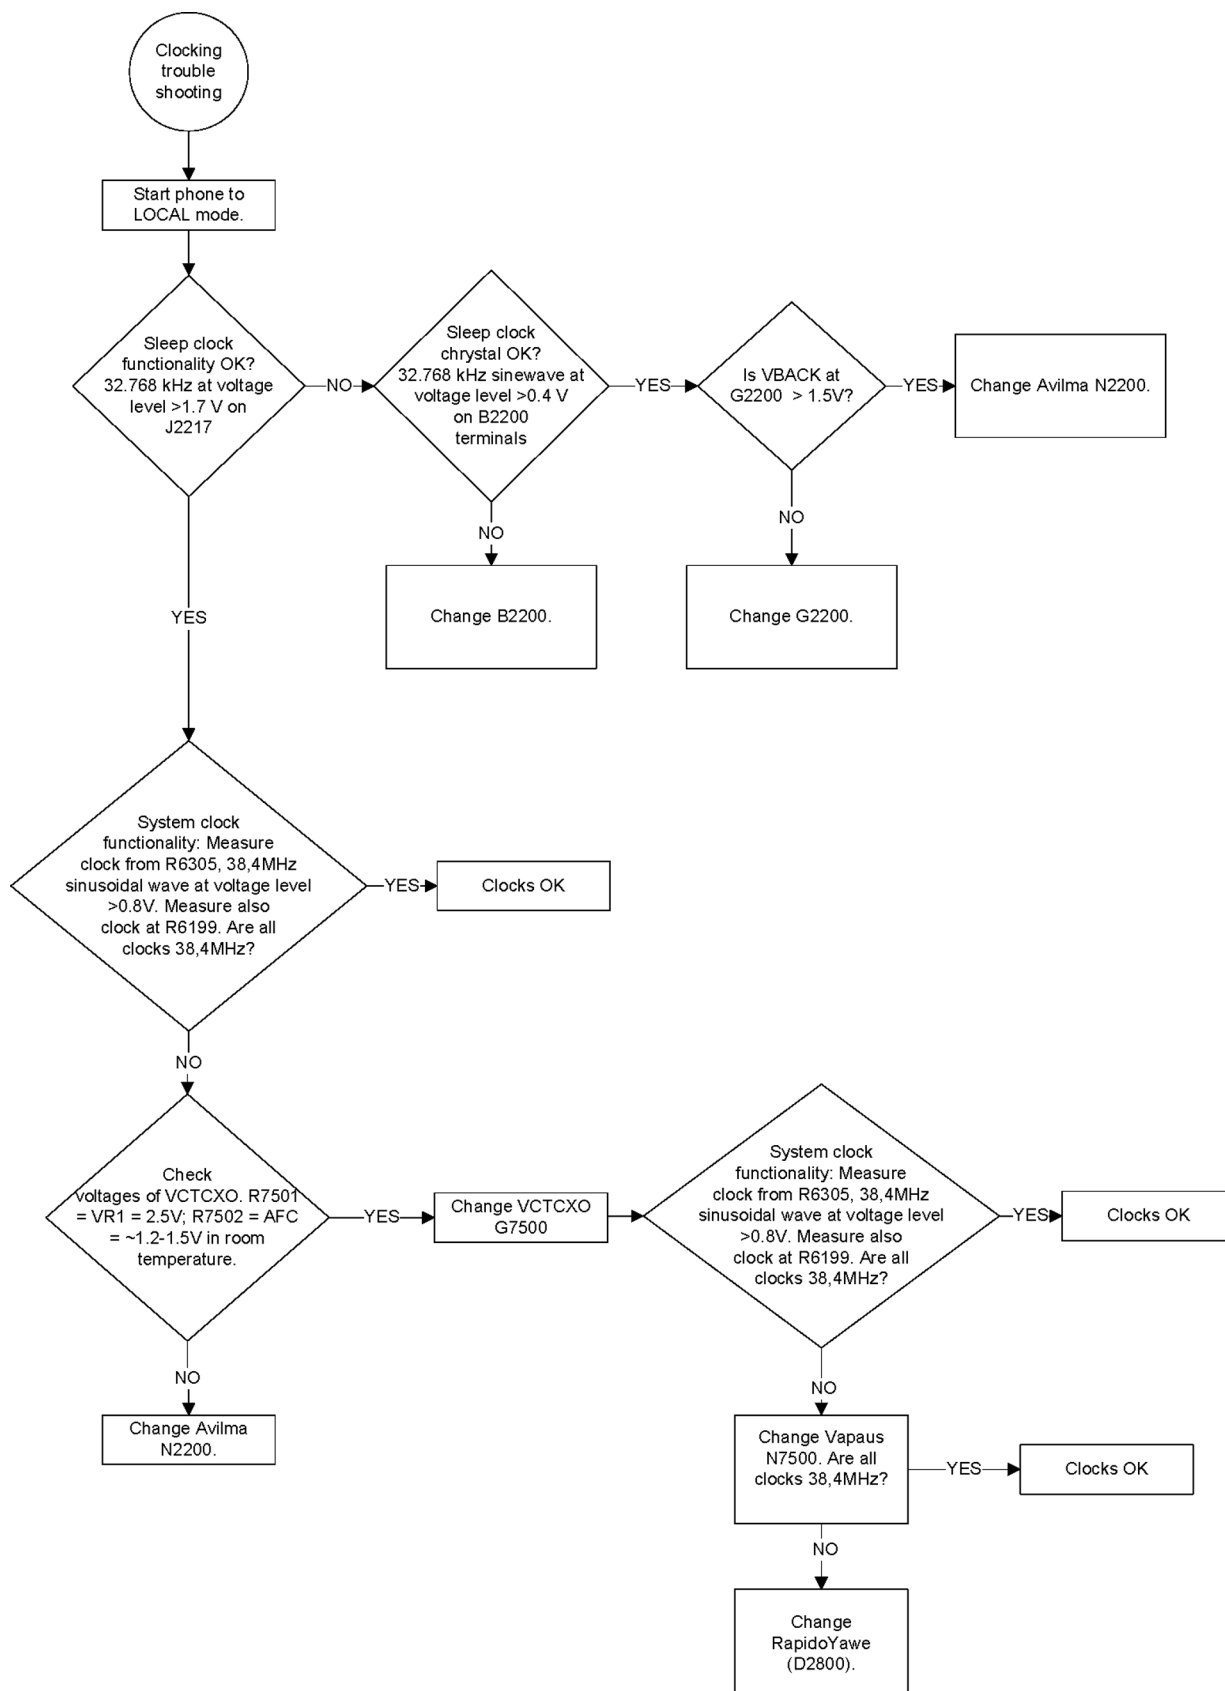


## ■ Charging troubleshooting

### Troubleshooting flow

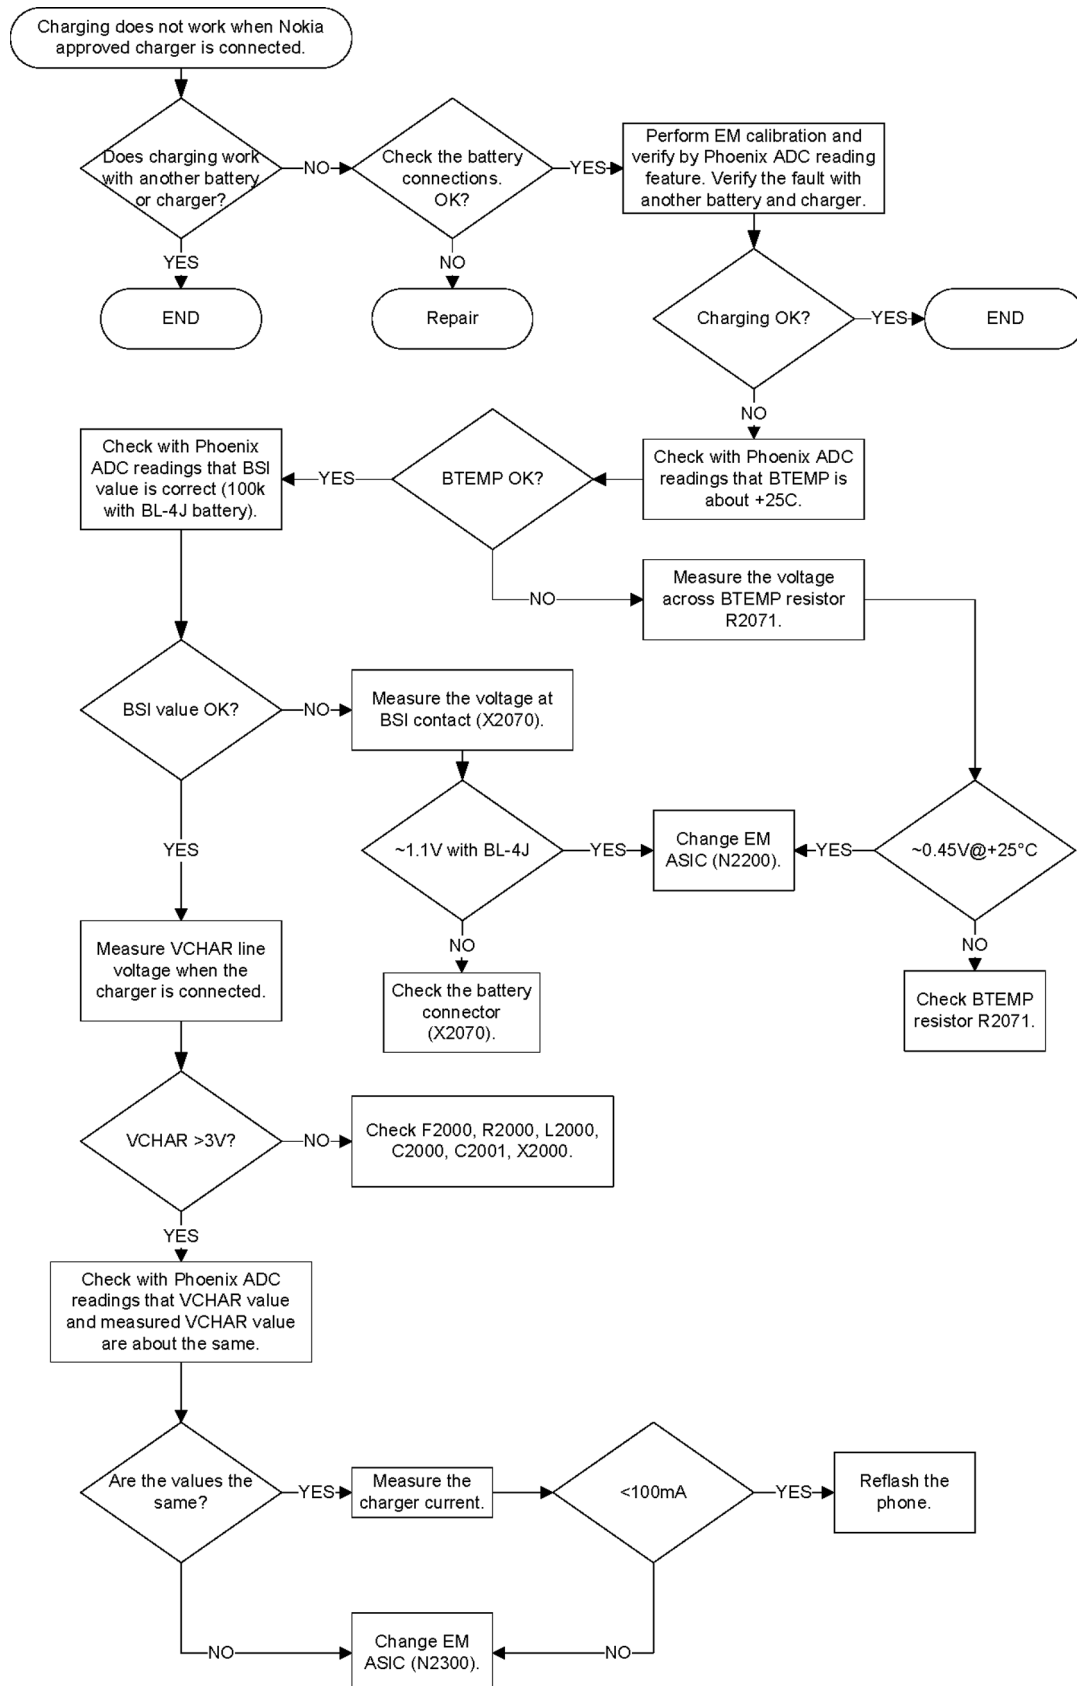

## ■ Backup battery troubleshooting

Verify that the backup battery G2200 is empty ( $U < 1V$ ). Switch the phone on. Measure voltage of the battery when the main battery is connected to the phone and the phone is switched on. Wait a few minutes and monitor that the backup battery voltage rises. Switch off the phone, disconnect the main battery and monitor that the voltage of the backup battery decreases. Normal behaviour of the voltage is described in the figures below:

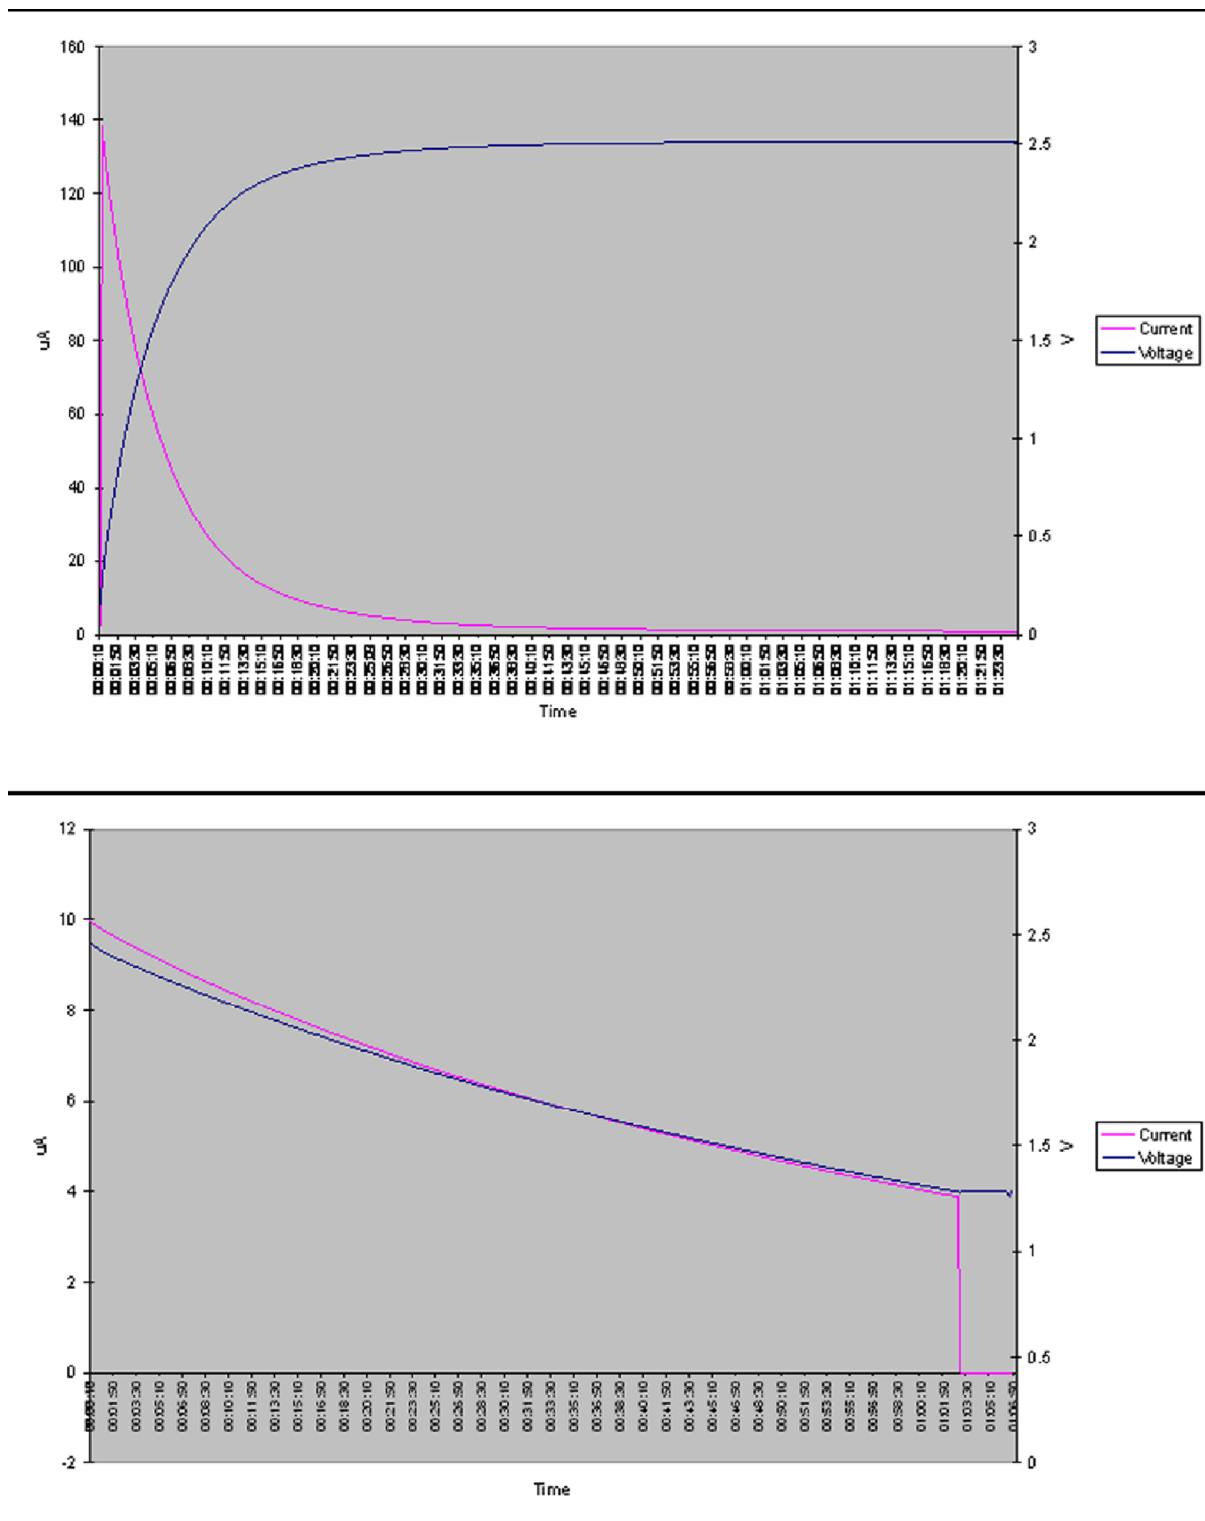



If the voltage rises and falls quickly, check the back-up battery G2200 contacts for loose soldering or short-circuit, and repair or change G2200 if necessary. If the voltage stays ~0V, check resistance VBACK against GND. If there is no shortcircuit, AVILMA N2200 is faulty. Replace N2200.




## Flash programming troubleshooting

### Troubleshooting flow




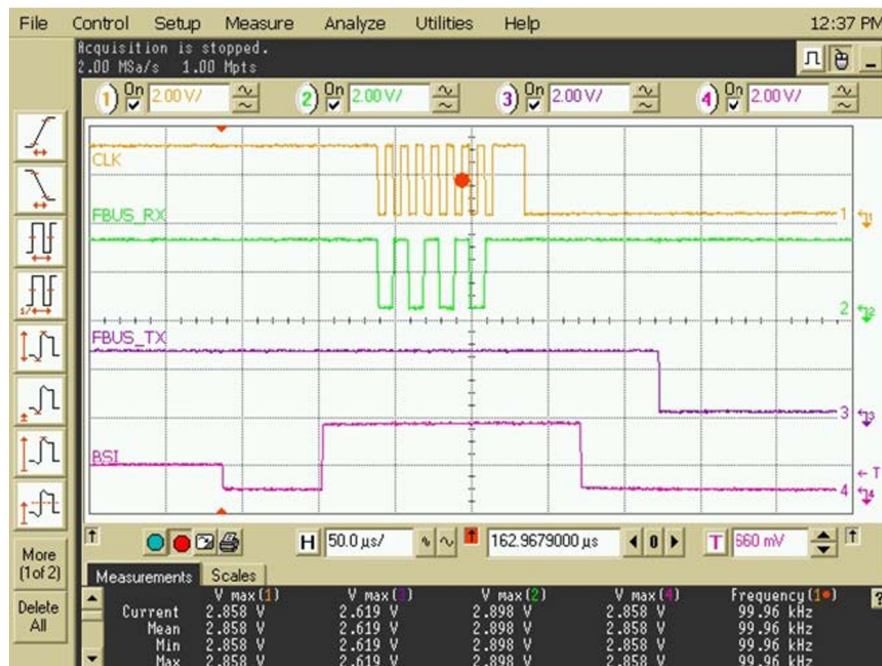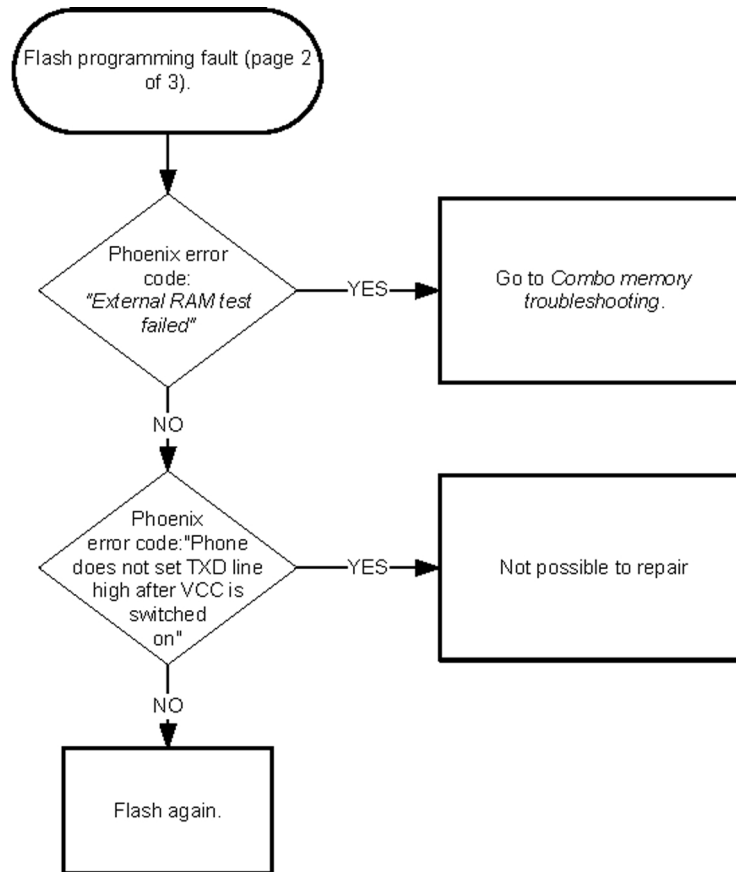

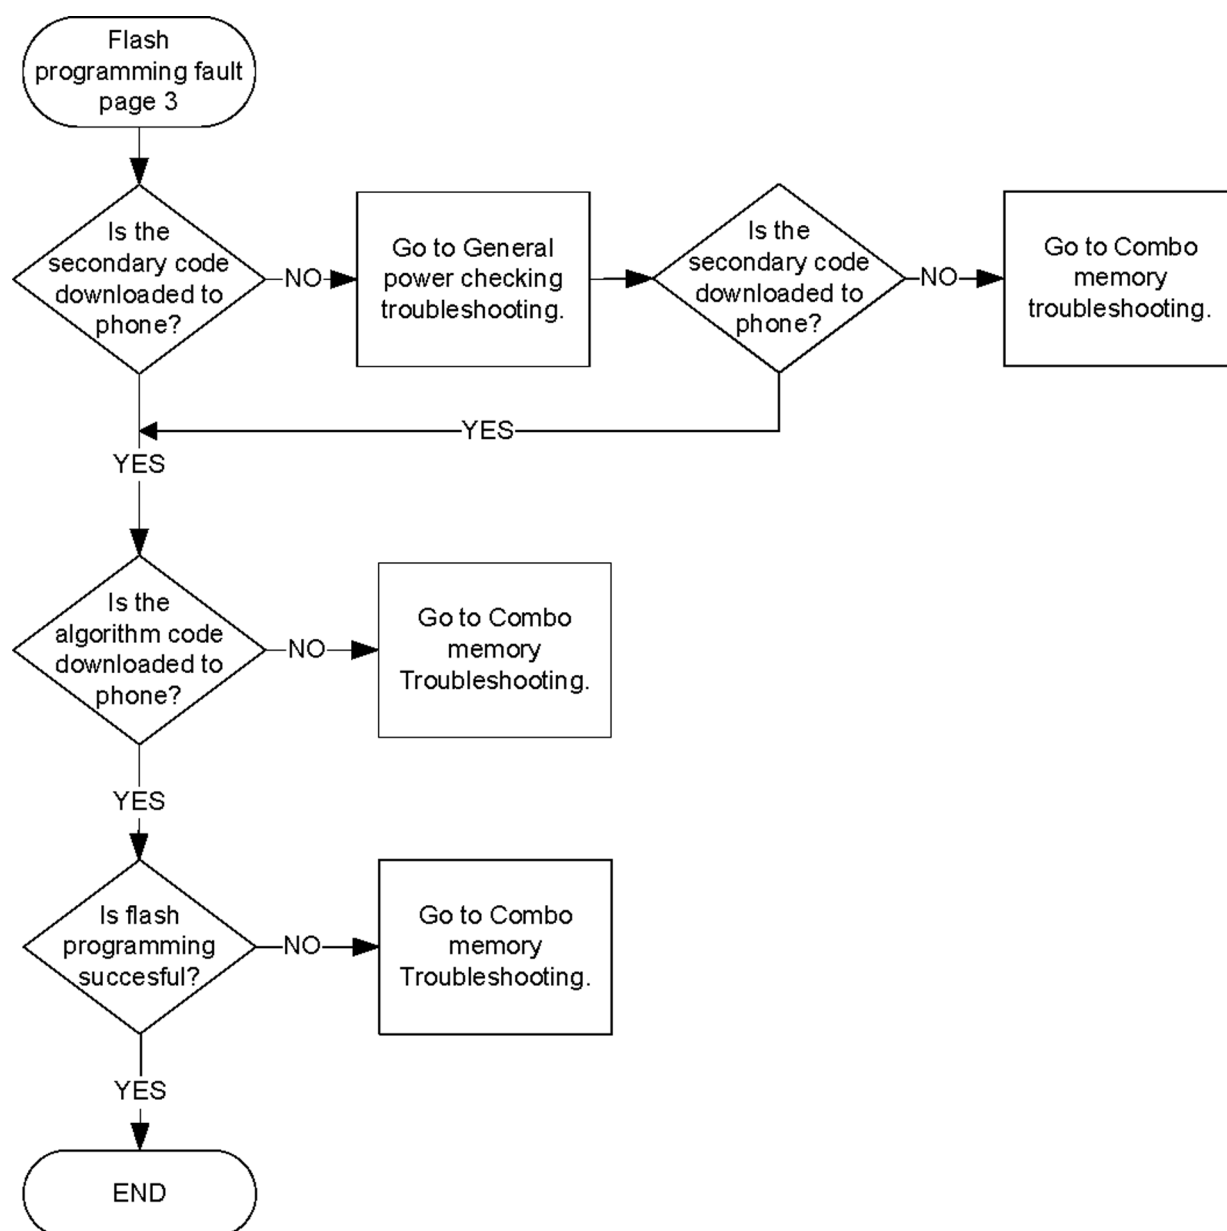


## ■ Combo memory troubleshooting

### Troubleshooting flow

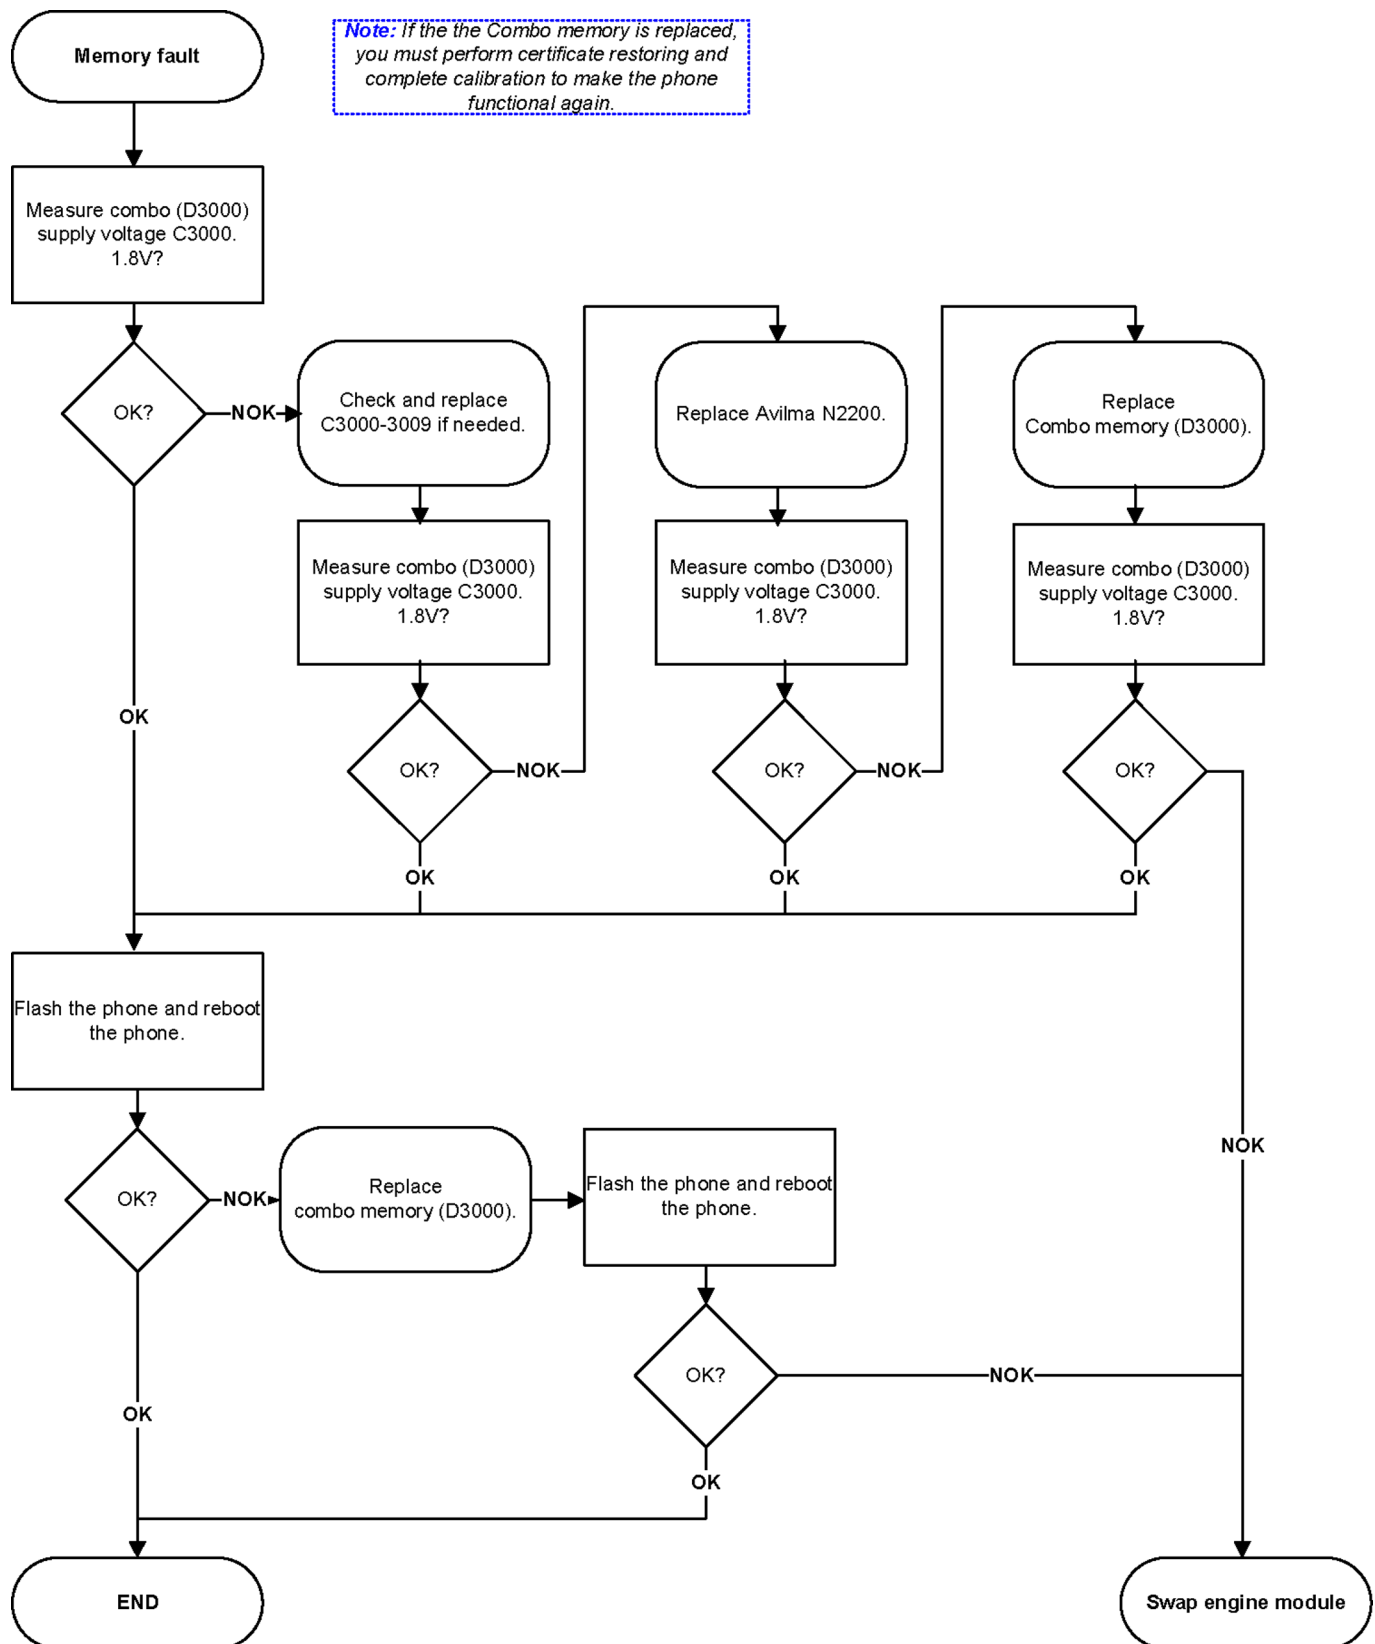


## ■ MicroSD card troubleshooting

### Troubleshooting flow

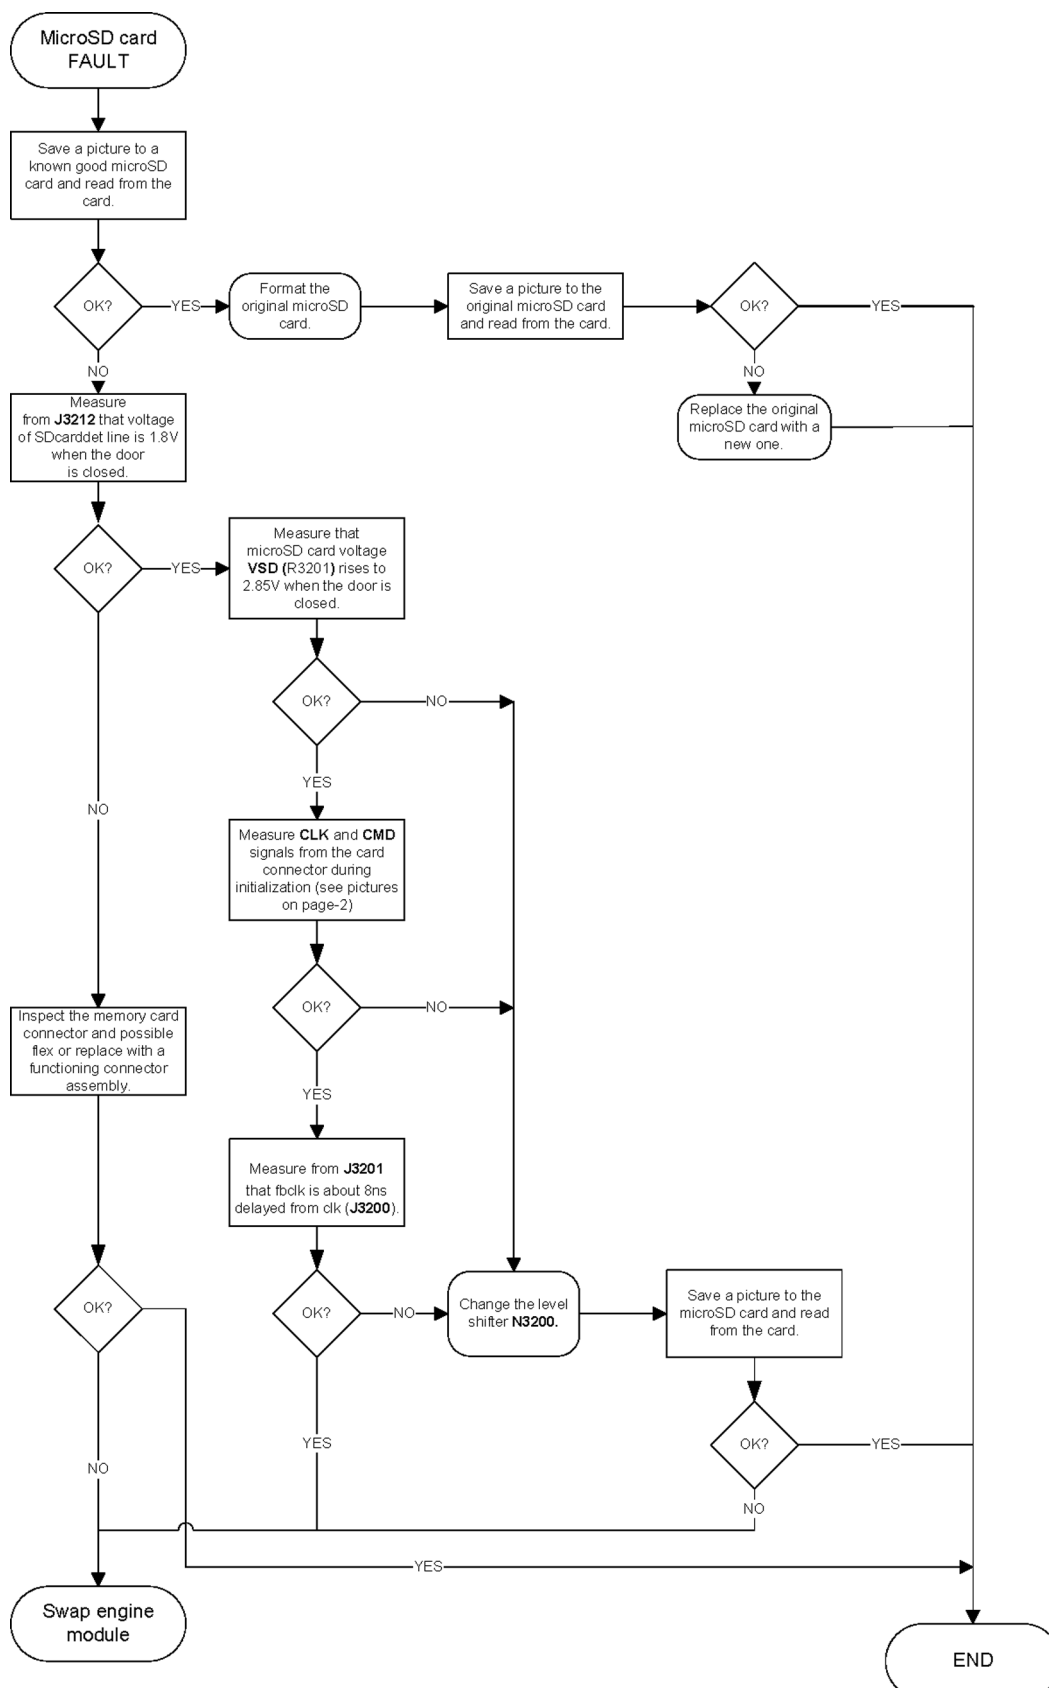





MicroSD interface signals timing when door is closed.

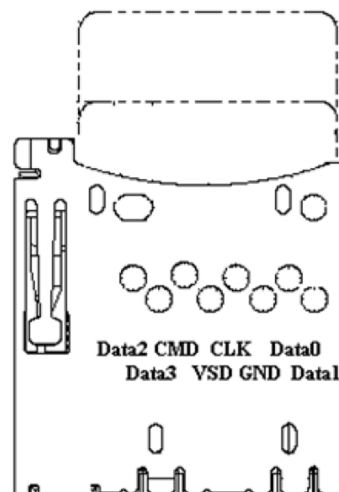

MicroSD connector

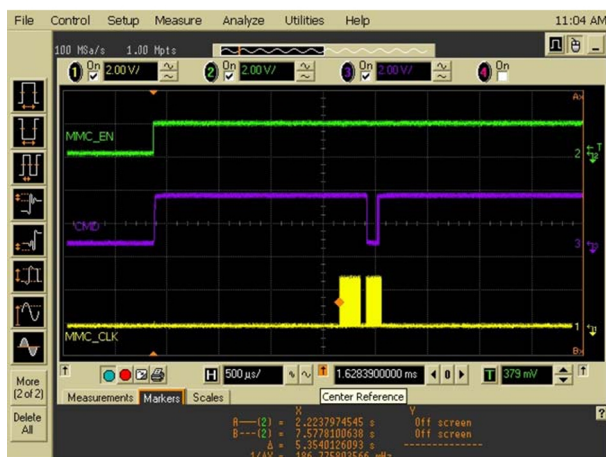


CLK and CMD signals during card initialization when card is not inserted. Measured from the microSD connector.

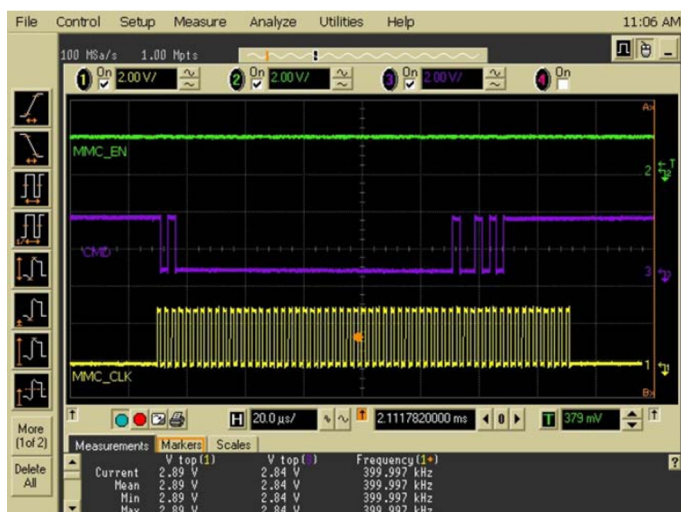

CLK and CMD signals during card initialization when card is not inserted. Measured from the microSD connector

## ■ USB troubleshooting


### Troubleshooting flow

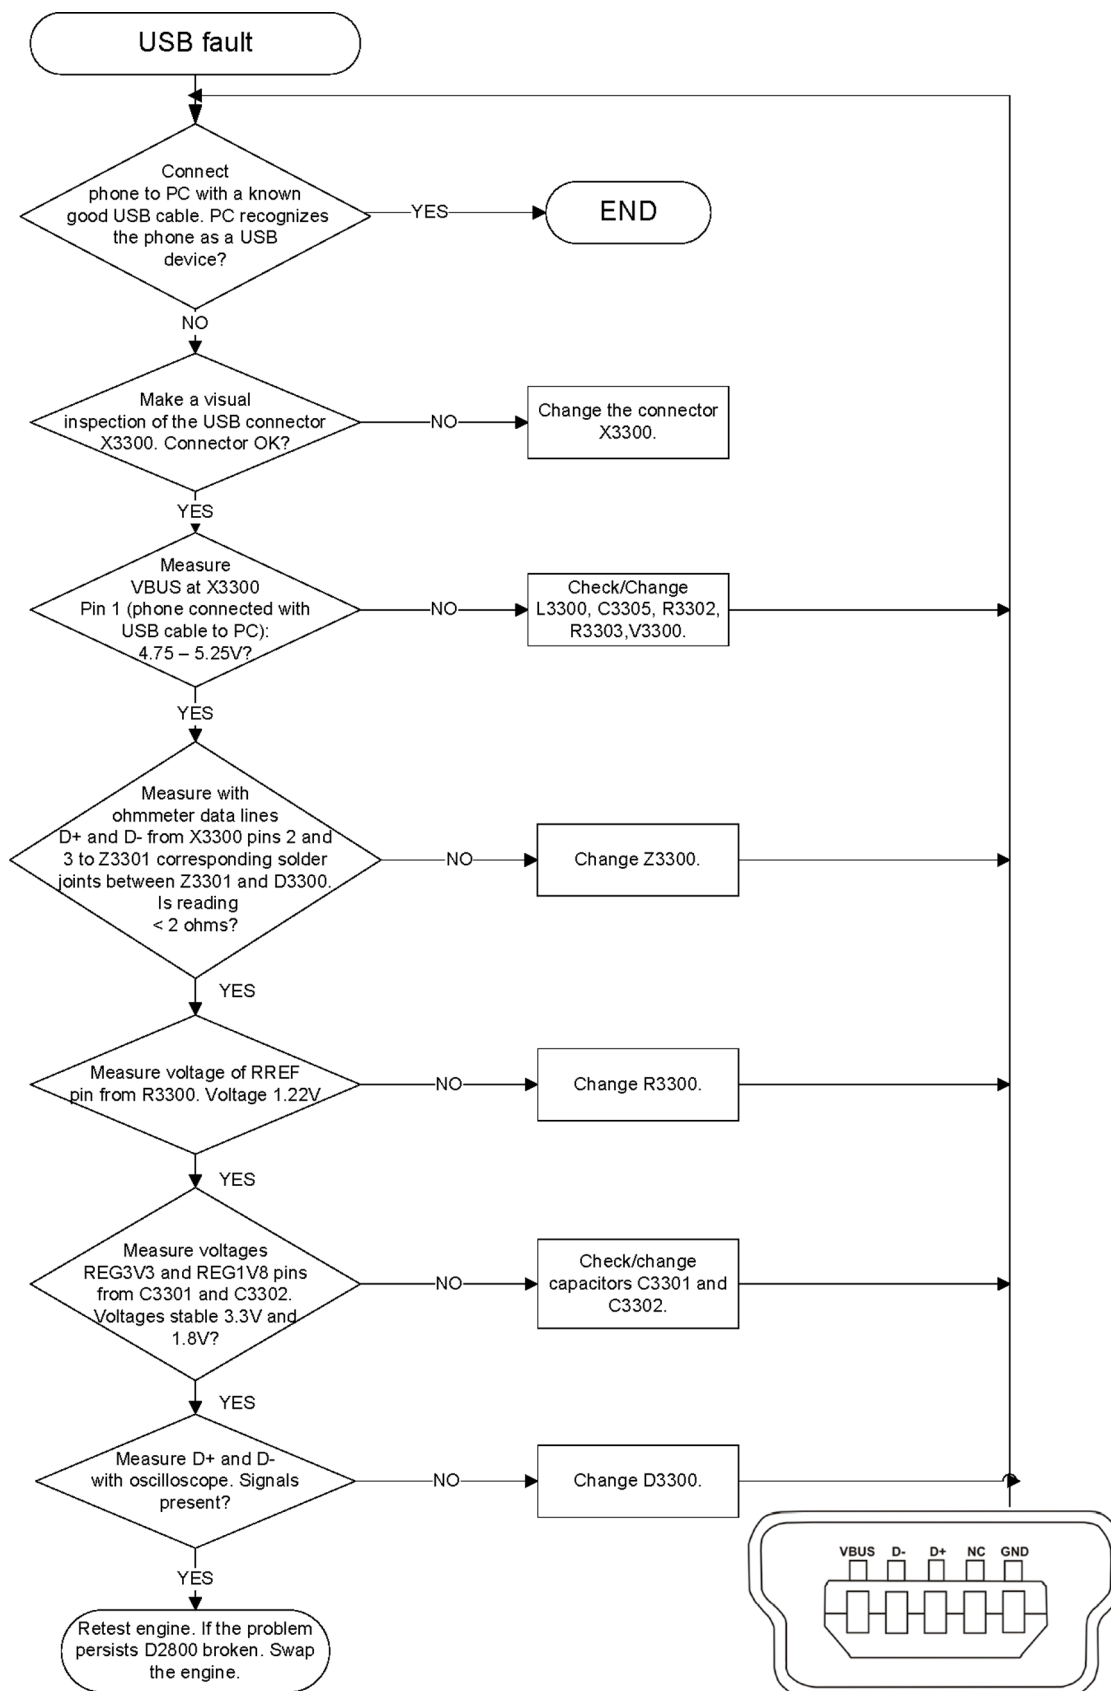




## ■ SIM card troubleshooting

### Troubleshooting flow

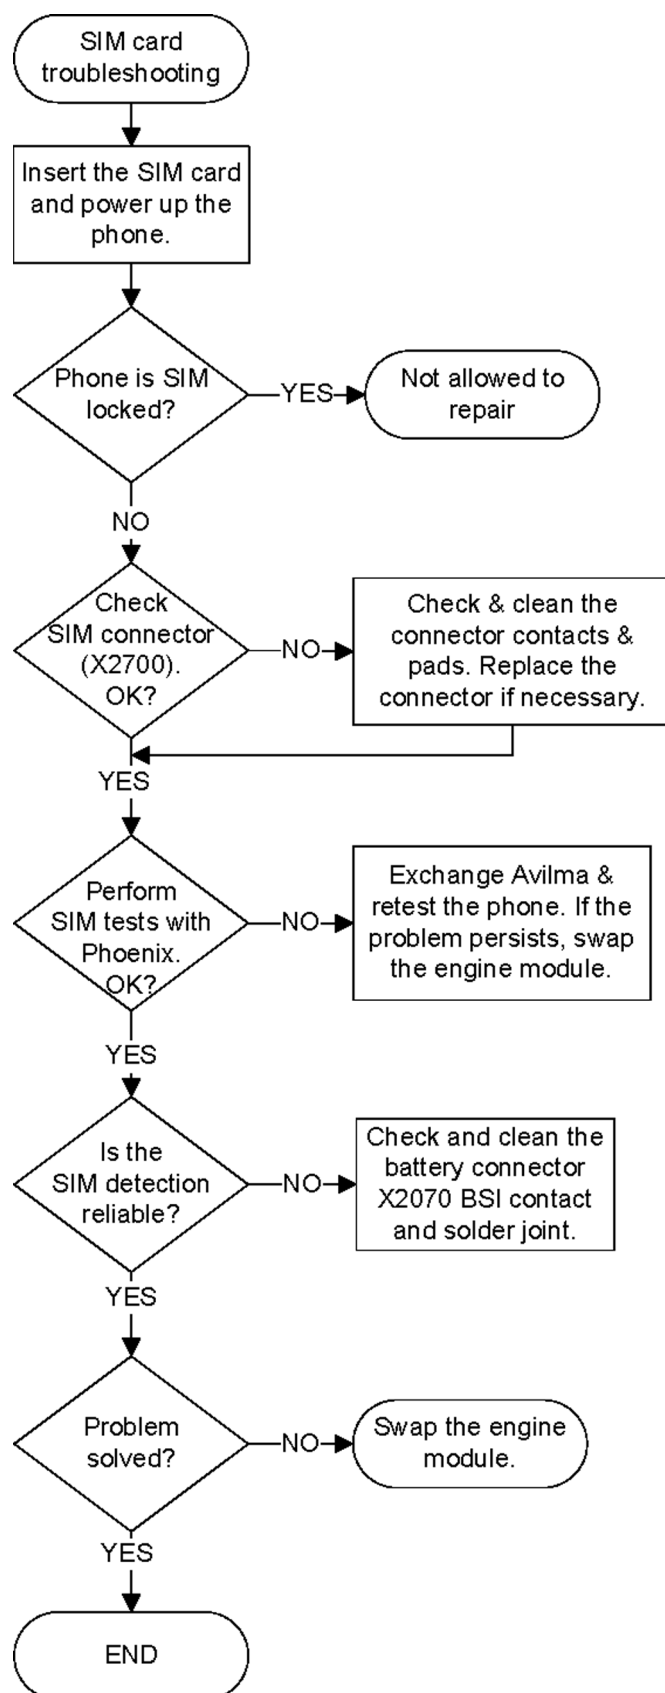


Use module jig when  
measuring SIM signals.  
The SIM connector  
X2700 pins are used as  
measuring points.

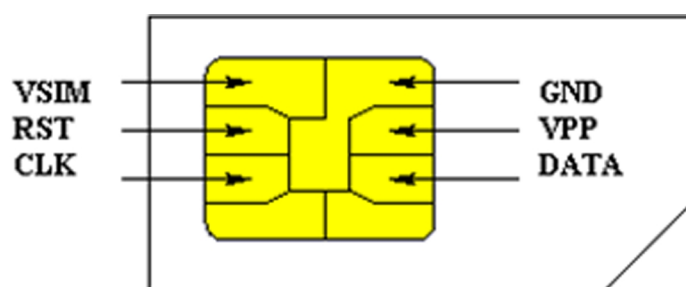

SIM contacts


## ■ Power key troubleshooting

### Troubleshooting flow

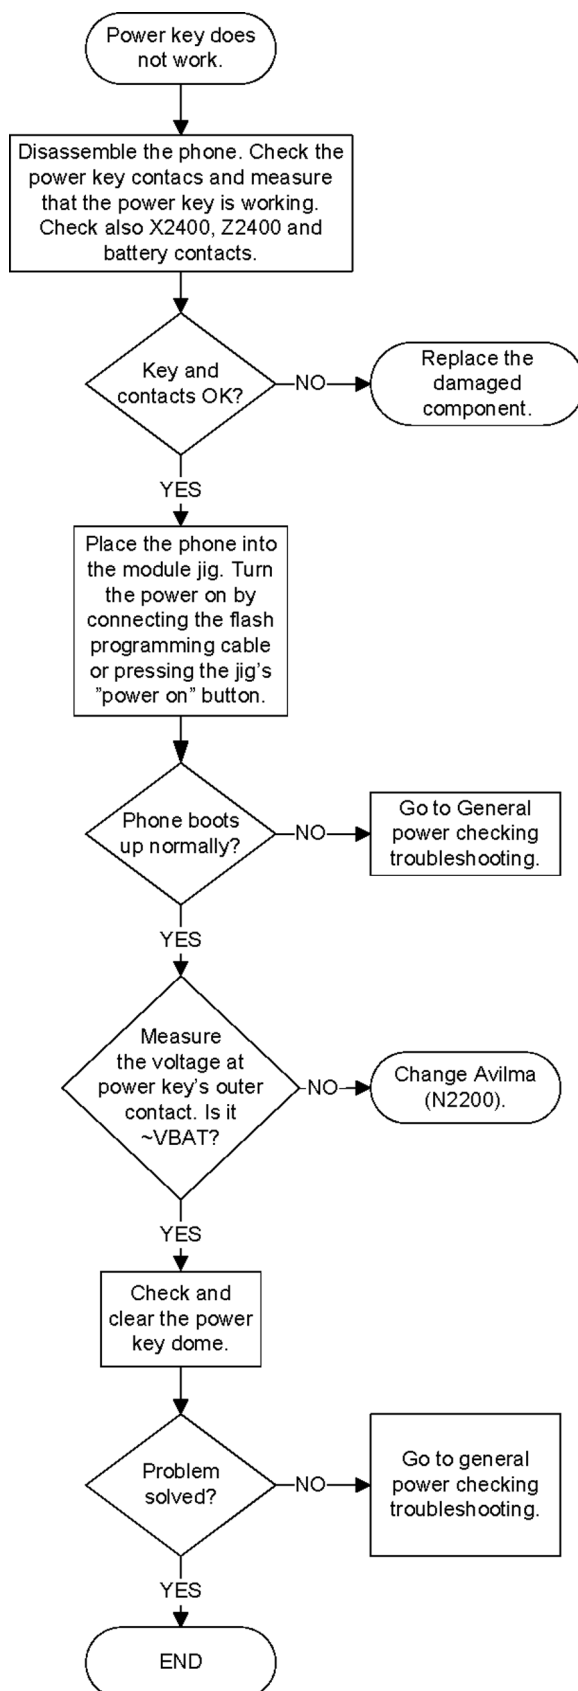

## ■ Vibra troubleshooting

### Troubleshooting flow

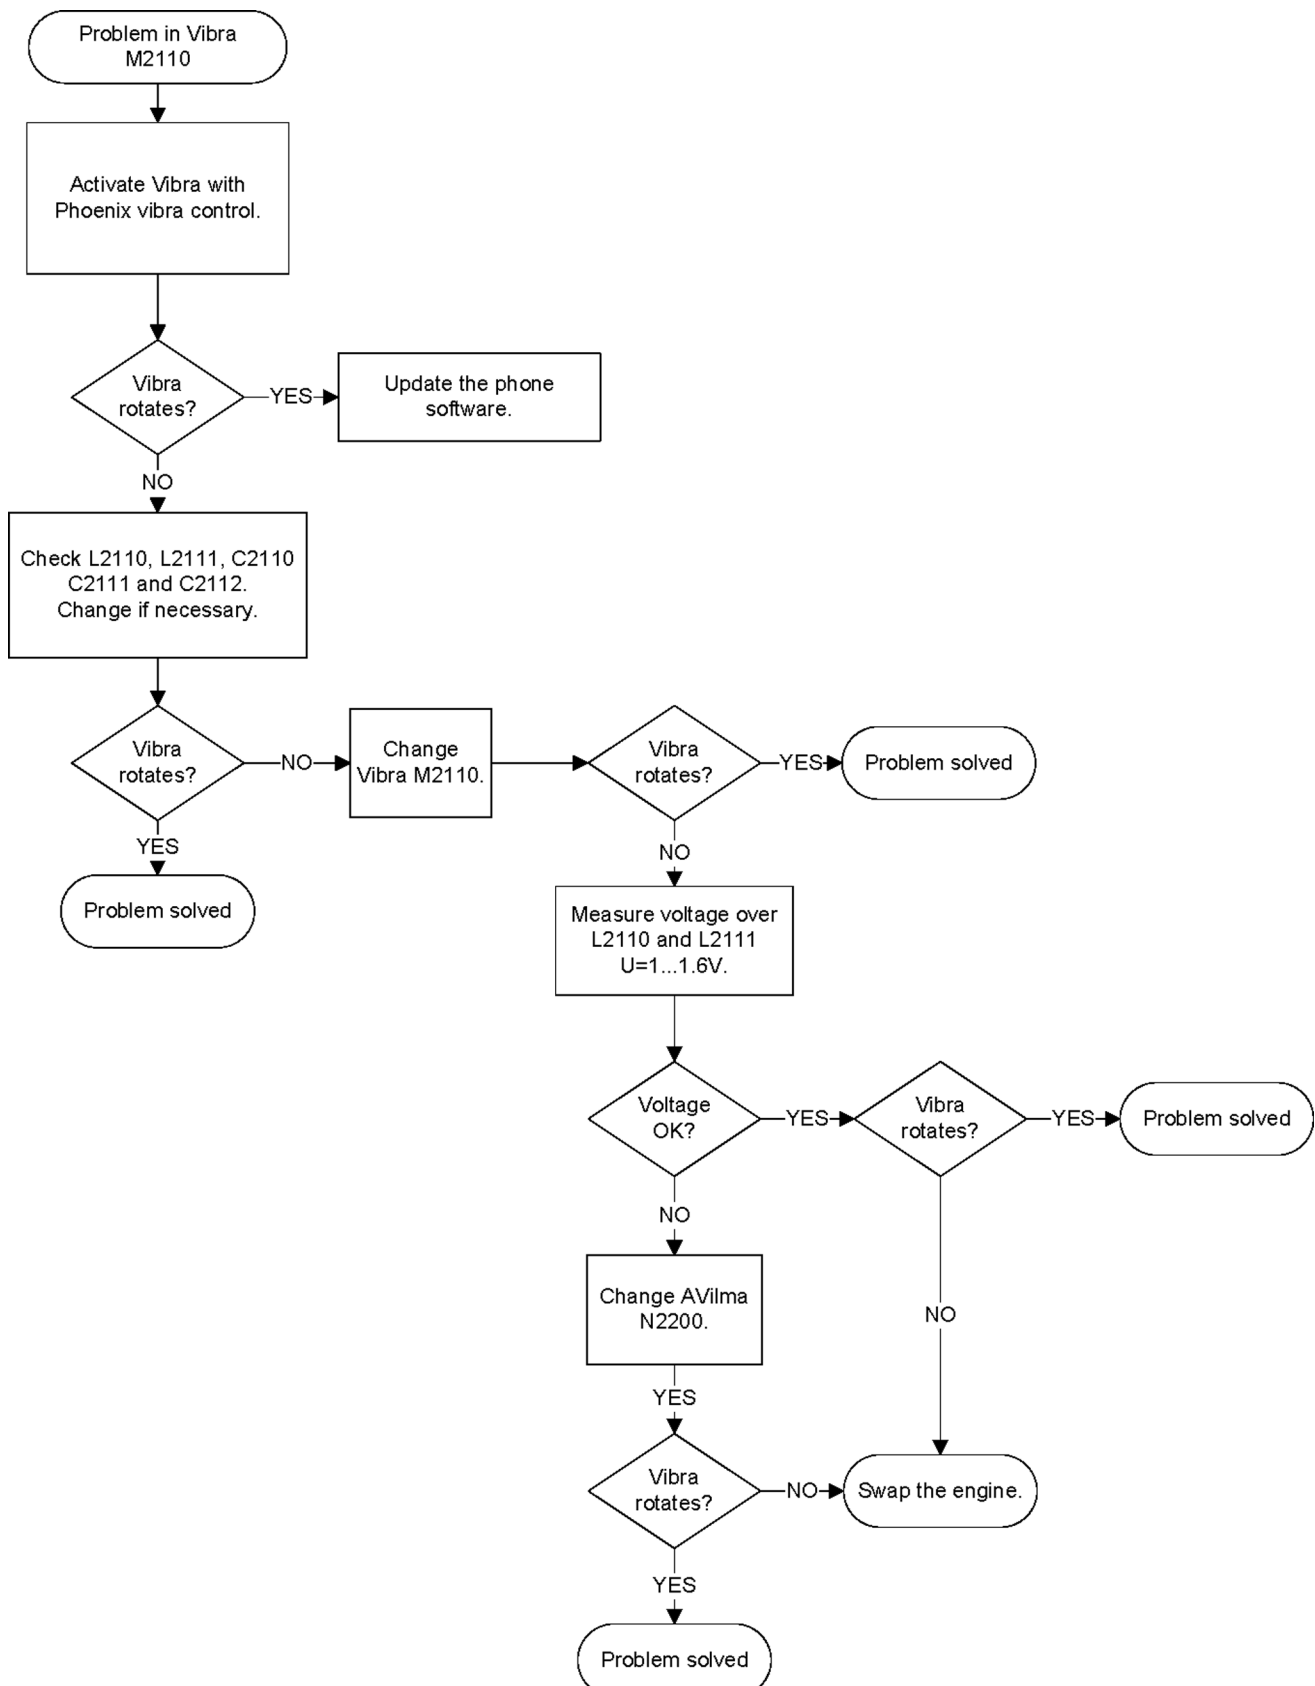


## ■ Accelerometer troubleshooting

### Troubleshooting flow

**Accelerometer selftest:**  
(ST\_ACCEL\_IF\_TEST) verifies the digital parts and the sensor elements inside the component. Selftest is available in LOCAL and TEST modes.

**Note!** The phone needs to be stable when running the selftest to get correct results. If changes in acceleration are detected by component during the test, it may cause the selftest to fail.

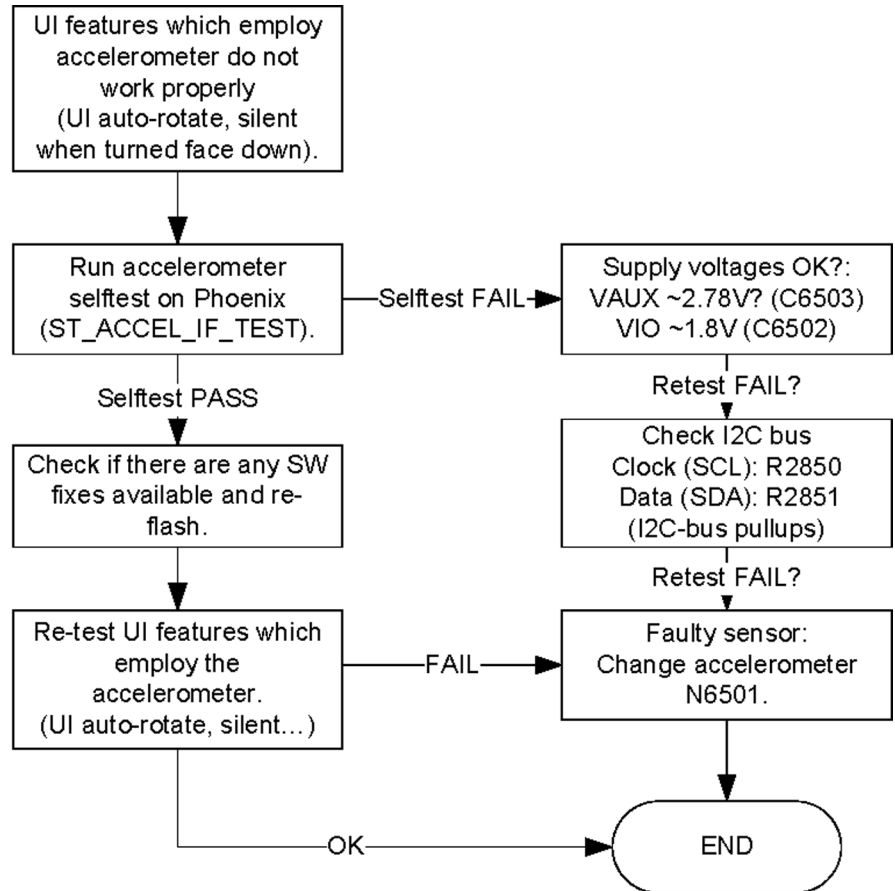

## ■ Touch screen troubleshooting

### Introduction to touch screen troubleshooting

The device has a resistive touch screen user interface, which means that the device does not have a traditional ITU-T keypad. The key components of the touch screen user interface are:

- Touch window with touch controller (TSC2004)
- Proximity sensor

The resistive touch window is located above the display. It enables finger as well as stylus touch, and it provides tactile feedback. The tactile feedback is implemented by using the same vibra that is used for alerting. The touch controller includes drivers and the control logic to measure touch pressure.


The proximity sensor is attached to the upper flex assembly. It sends out a beam of IR light, and then computes the distance to any nearby objects from the characteristics of the returned (reflected) signal. There is a booth between the sensor and the touch window, which isolates the IR transmitter from the IR receiver by preventing the reflection from the touch window surface.

## Proximity sensor troubleshooting


### Context

Proximity sensor troubleshooting is broken down into two parts. The main purpose of the automatic check is to identify the fault automatically without any manual checks. If the automatic flow does not provide enough information, a manual check can be done to narrow down the cause of the fault.

## Troubleshooting flow

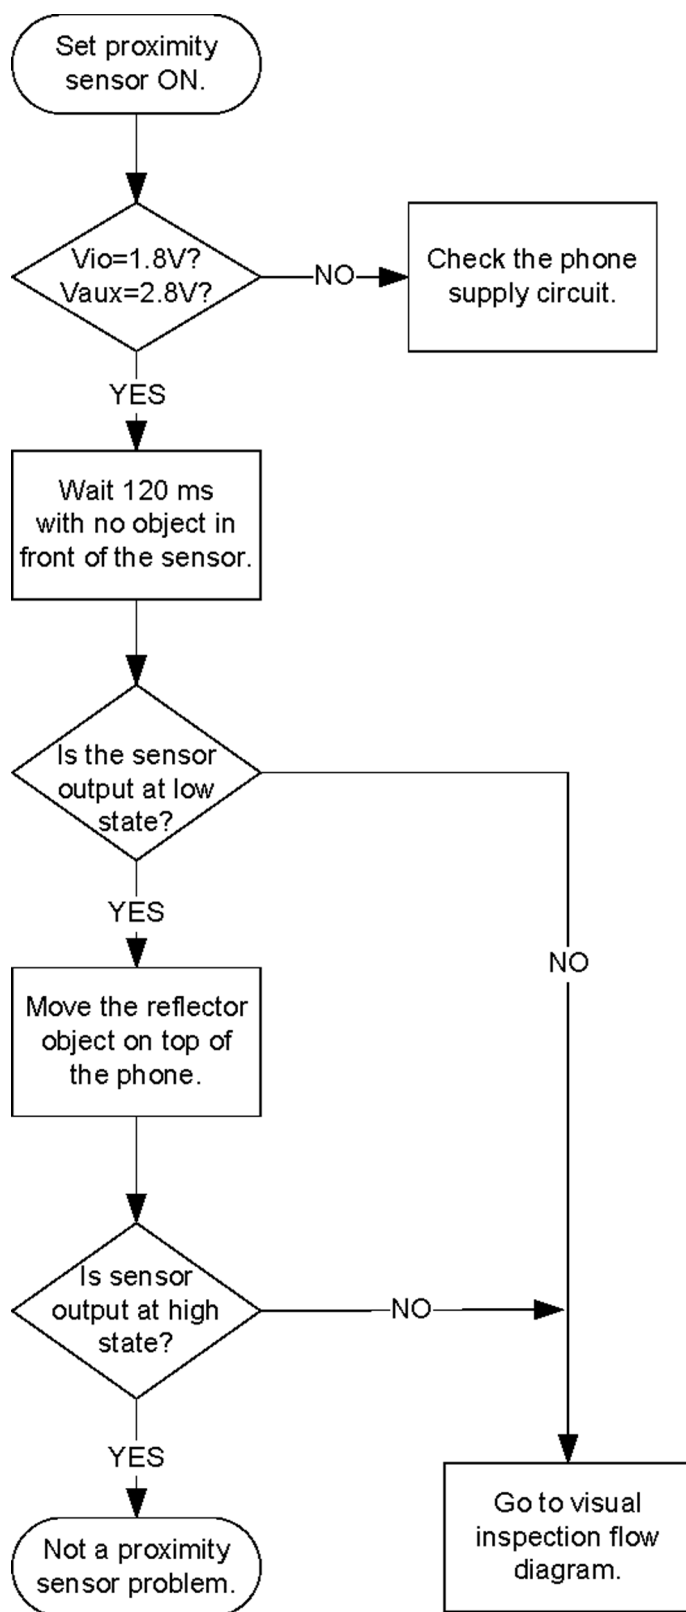




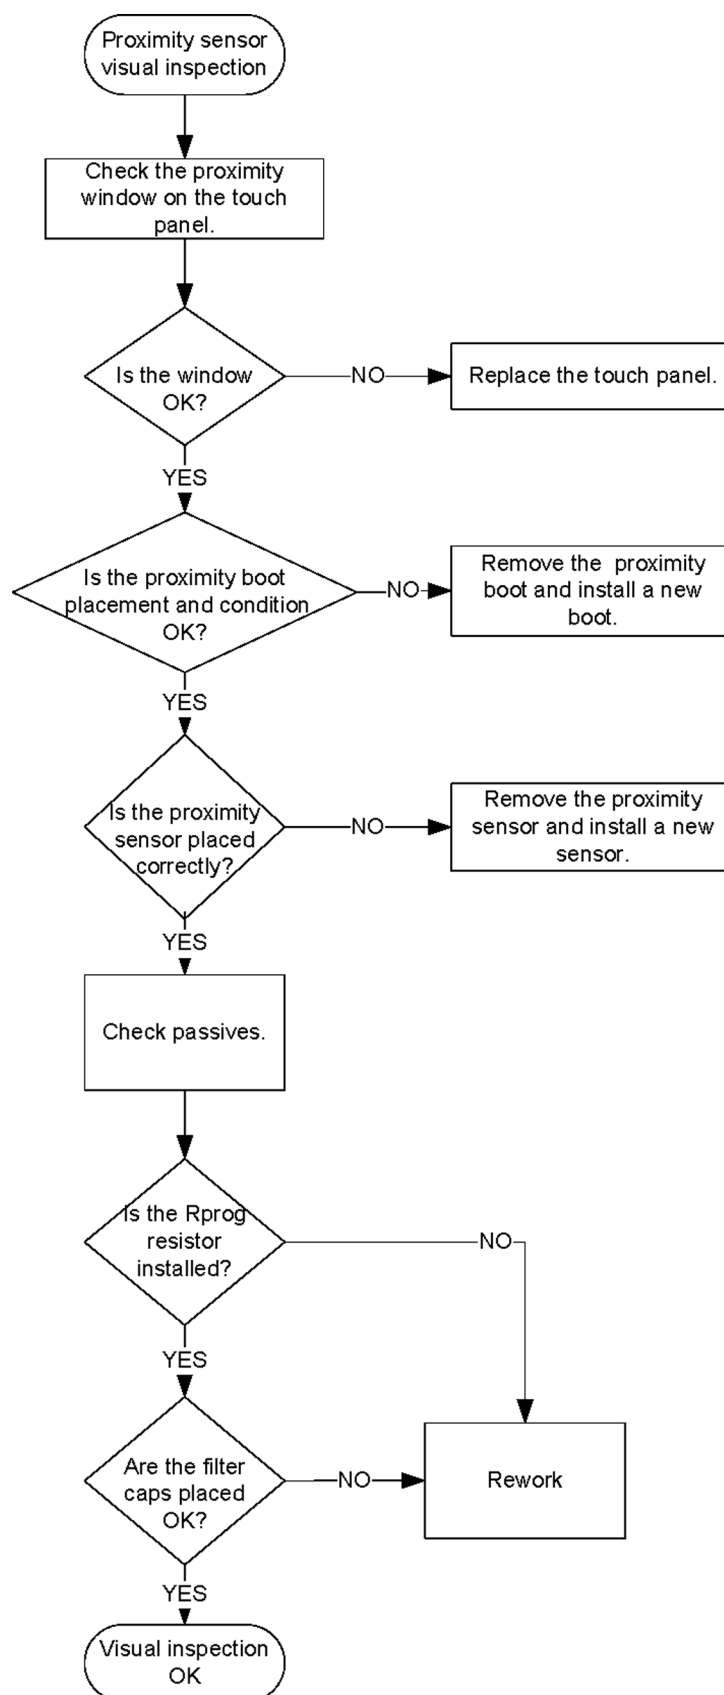



**Figure 13 Proximity sensor troubleshooting - part 2**

## Resistive touch screen troubleshooting

### Troubleshooting flow

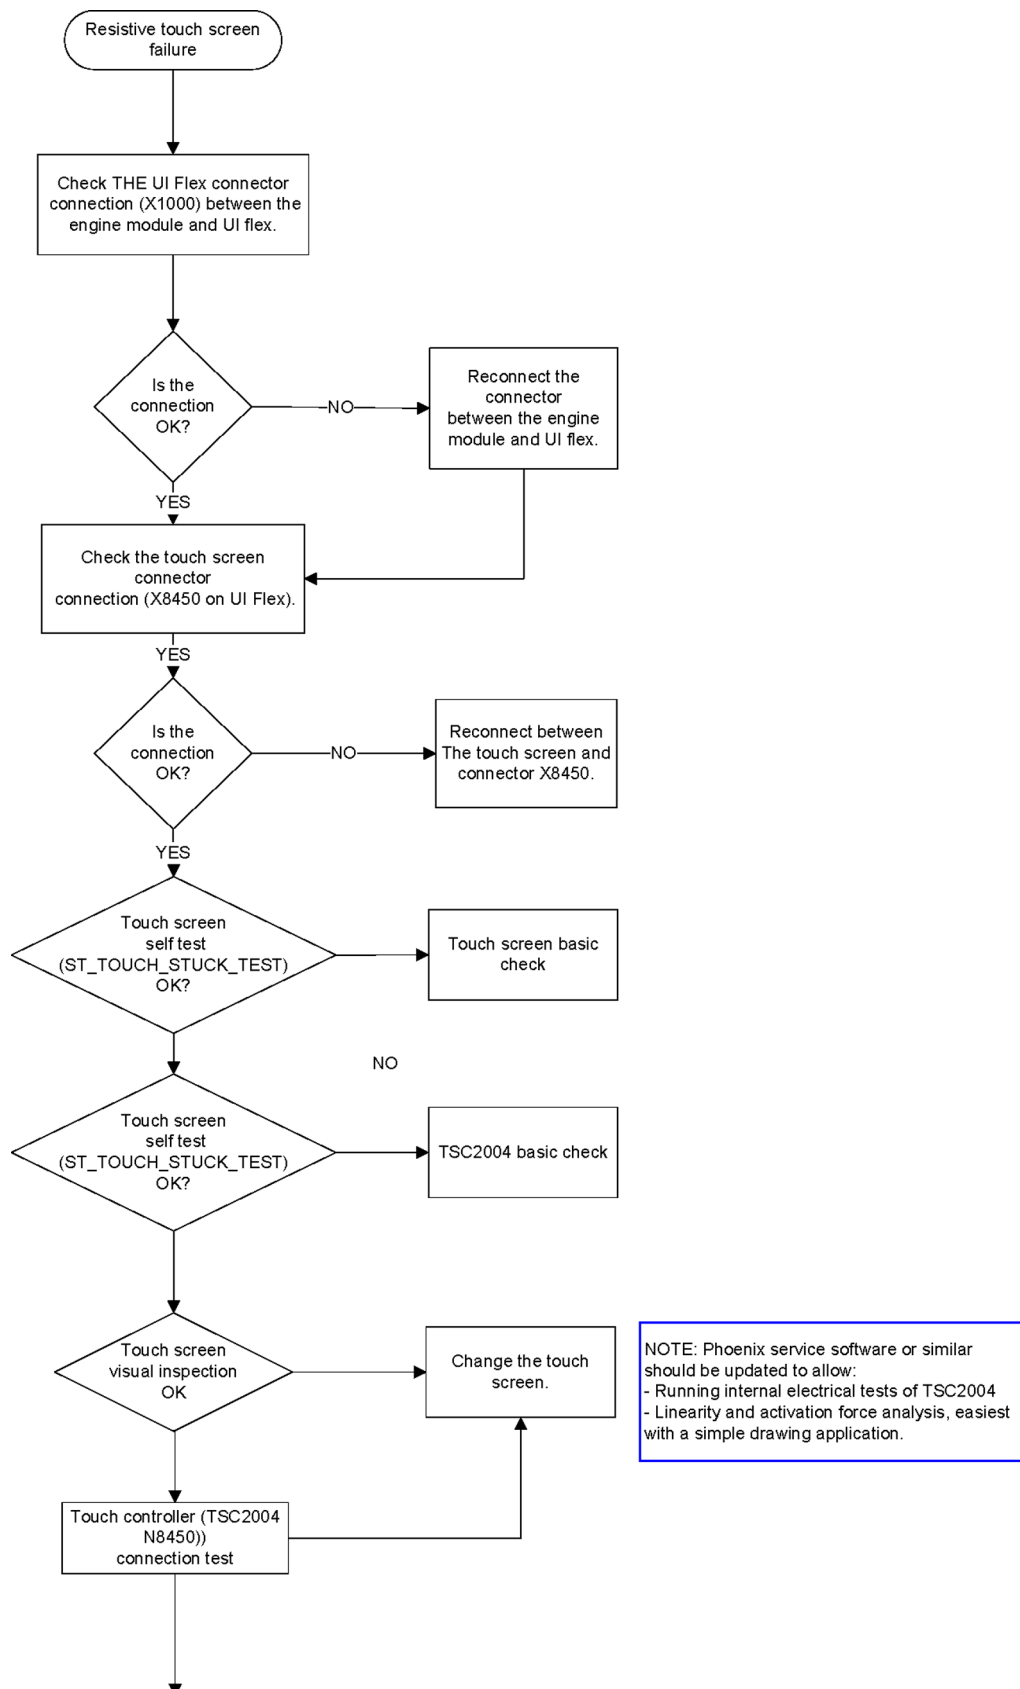

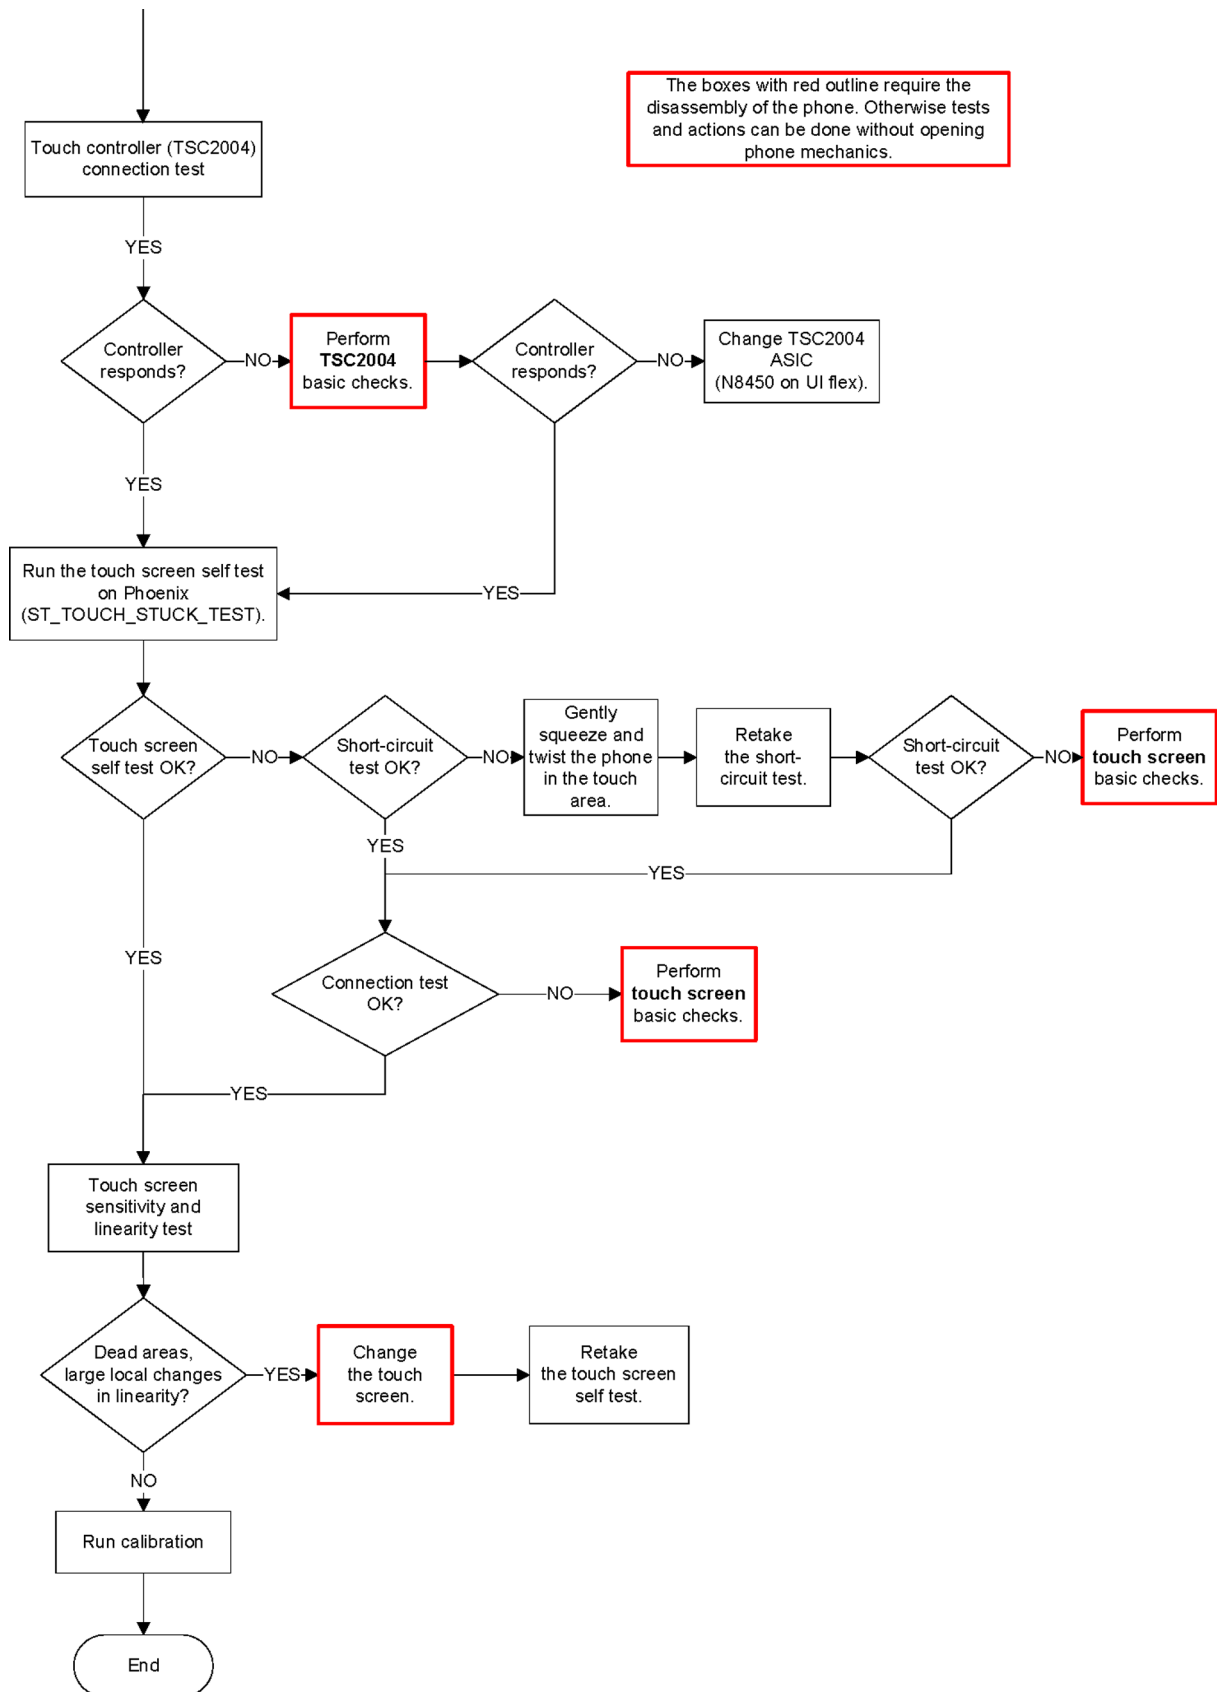

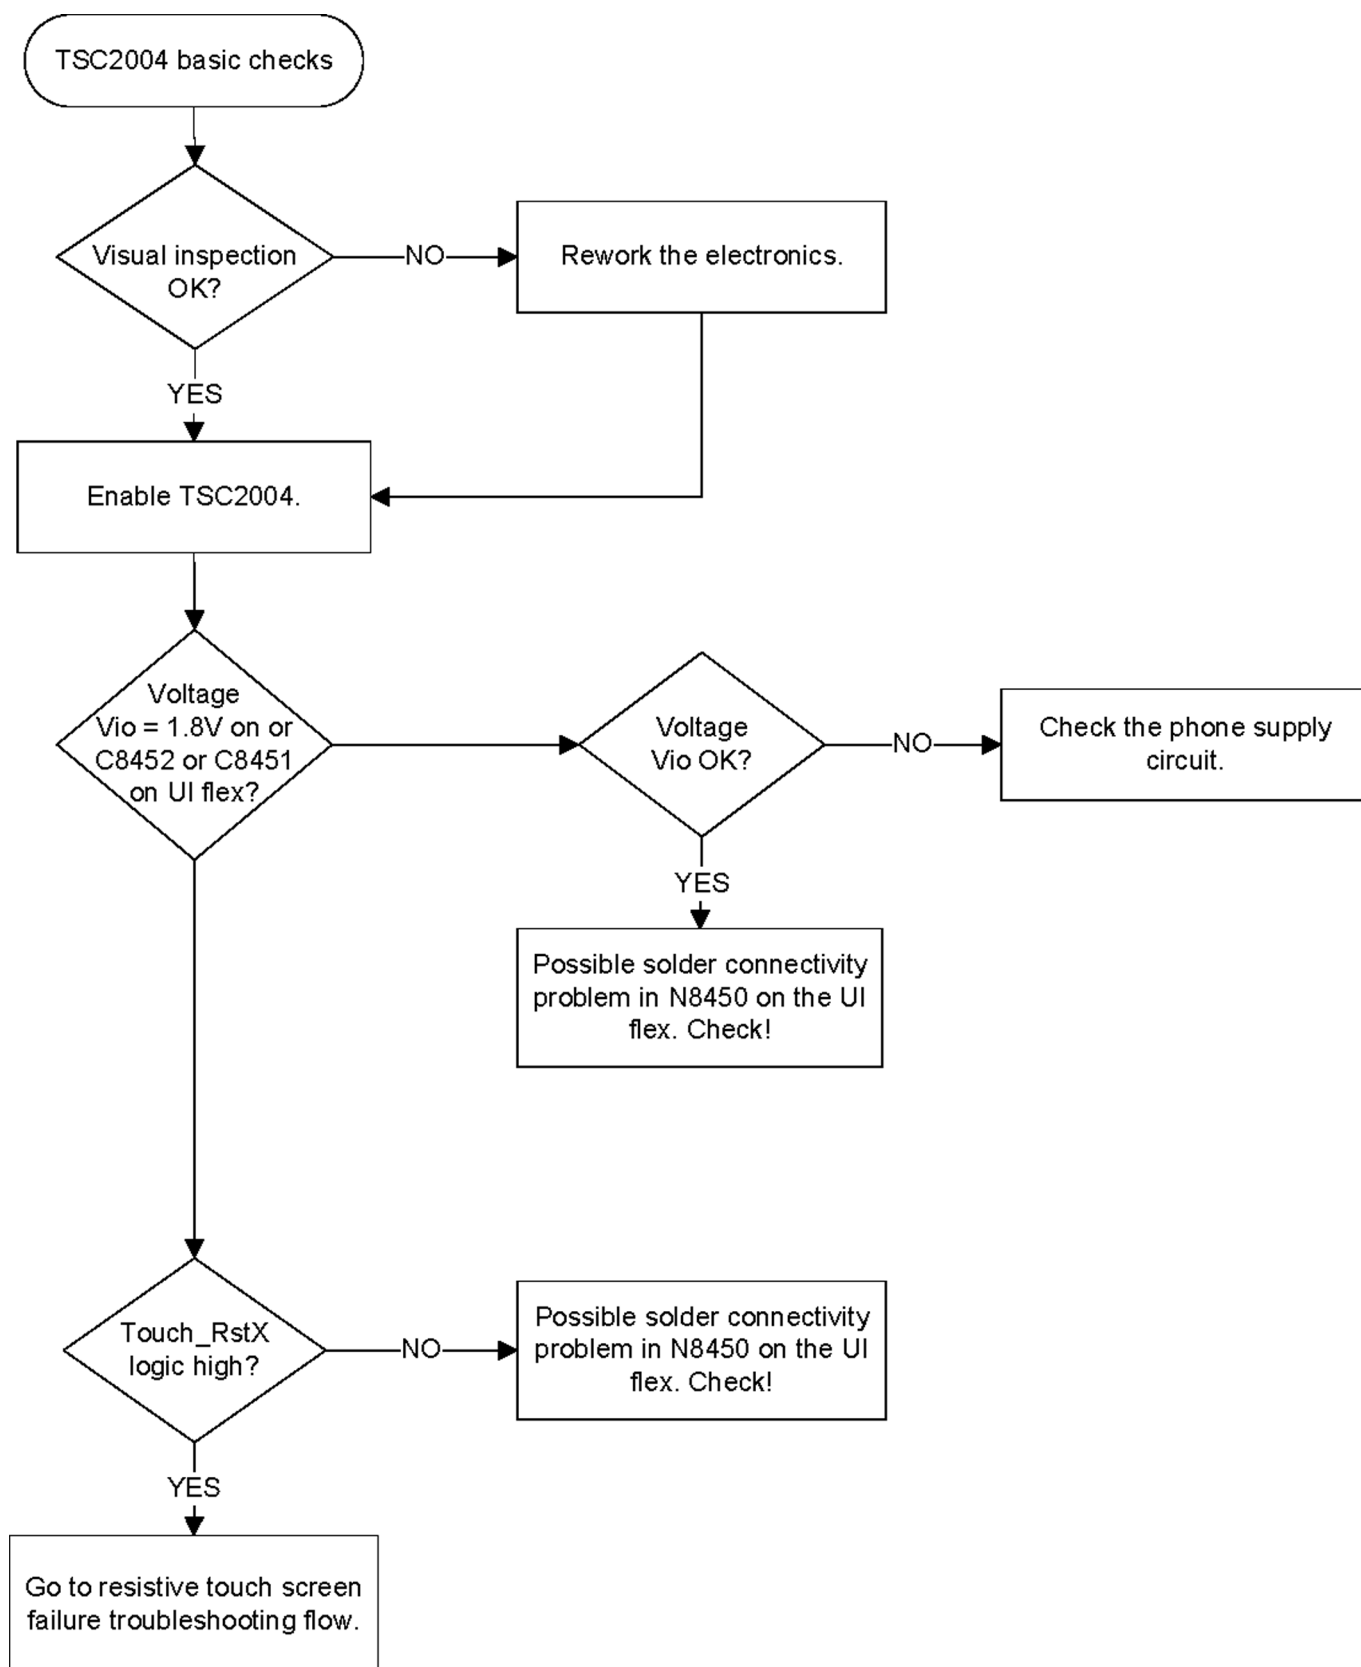

**Figure 14 Touch controller basic checks**

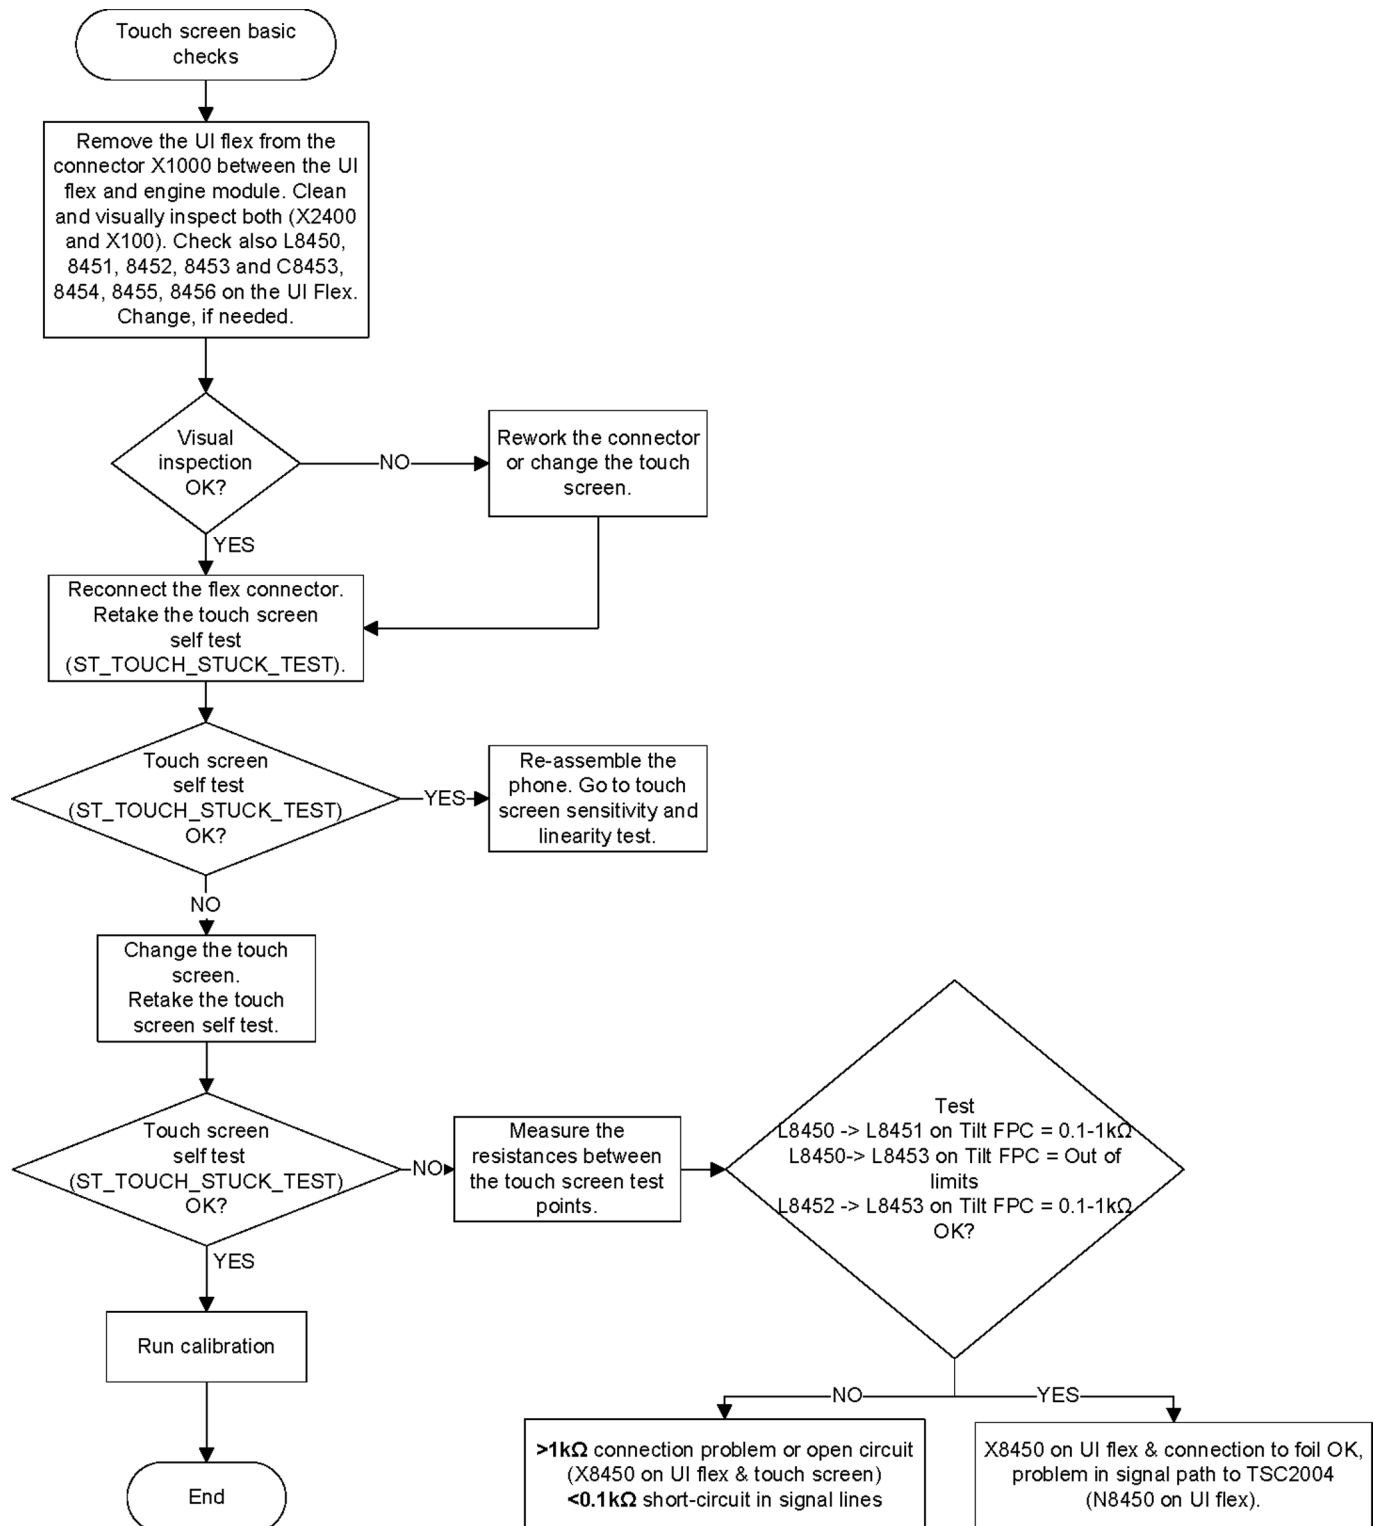


Figure 15 Touch screen basic checks

## ■ Hardware keys troubleshooting

### Context


There are two possible failure modes in the keyboard module:

- One or more keys can be stuck, so that the key does not react when a keydome is pressed. This kind of failure is caused by mechanical reasons (dirt, rust).


- Malfunction of several keys at the same time; this happens when one or more rows or columns are failing (short circuit or open connection).

If the failure mode is not clear, start with the Keyboard Test in Phoenix.

## Troubleshooting flow

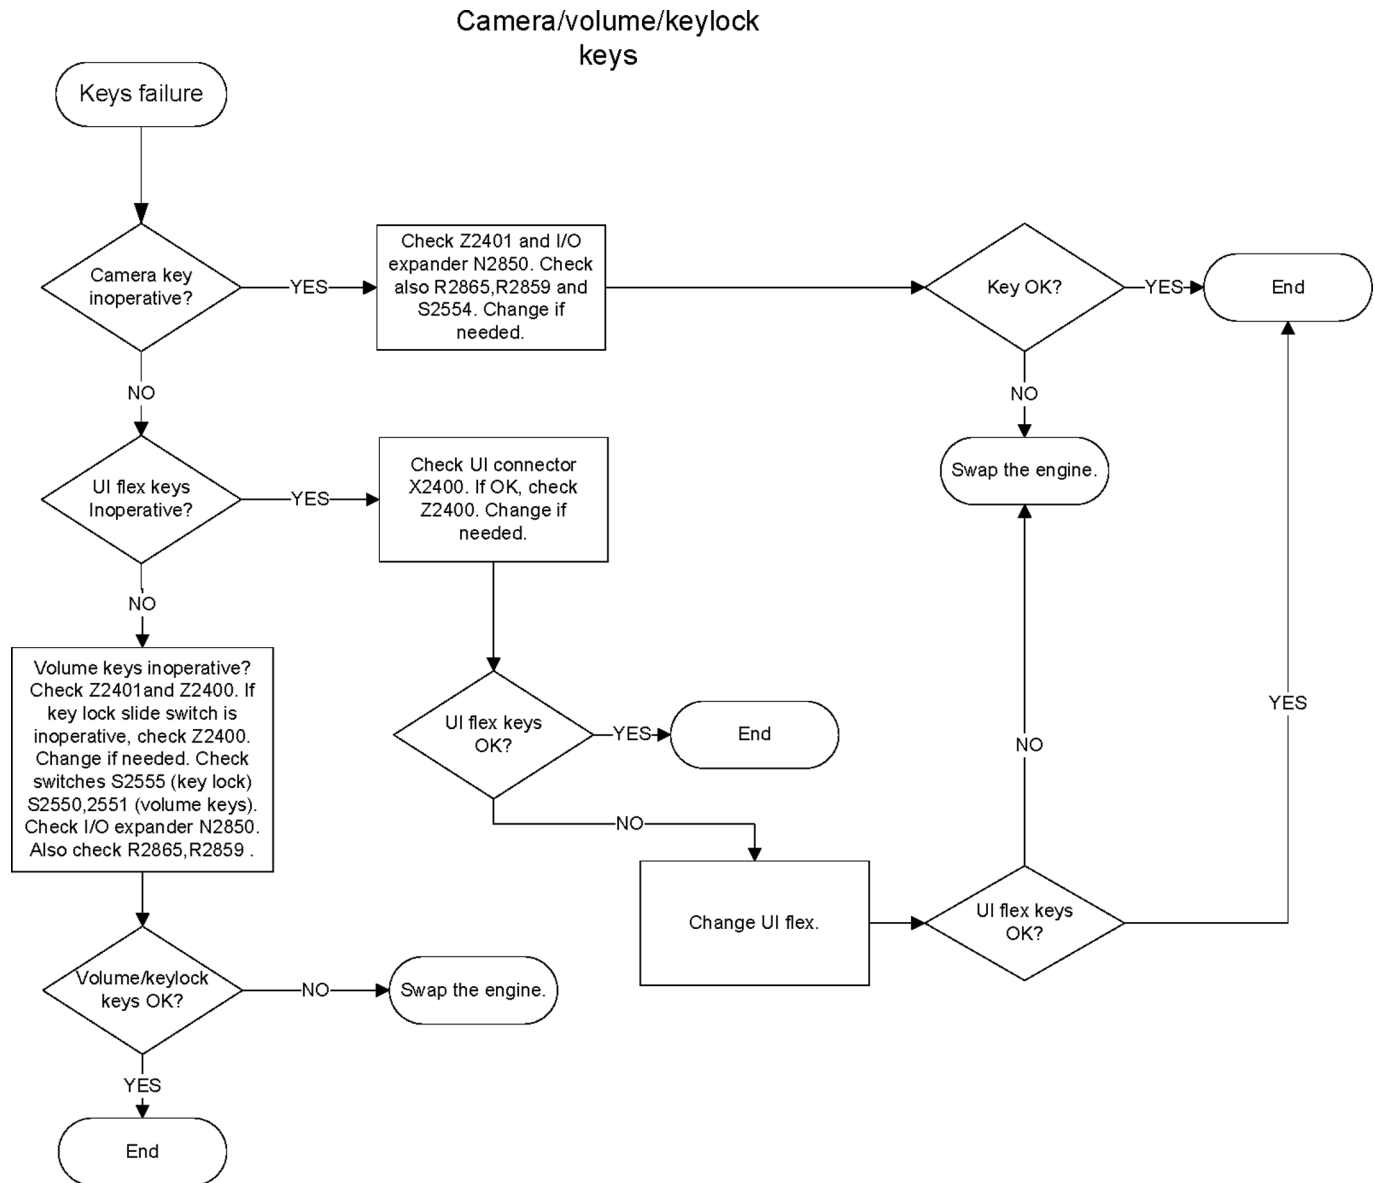

## Qwerty keyboard

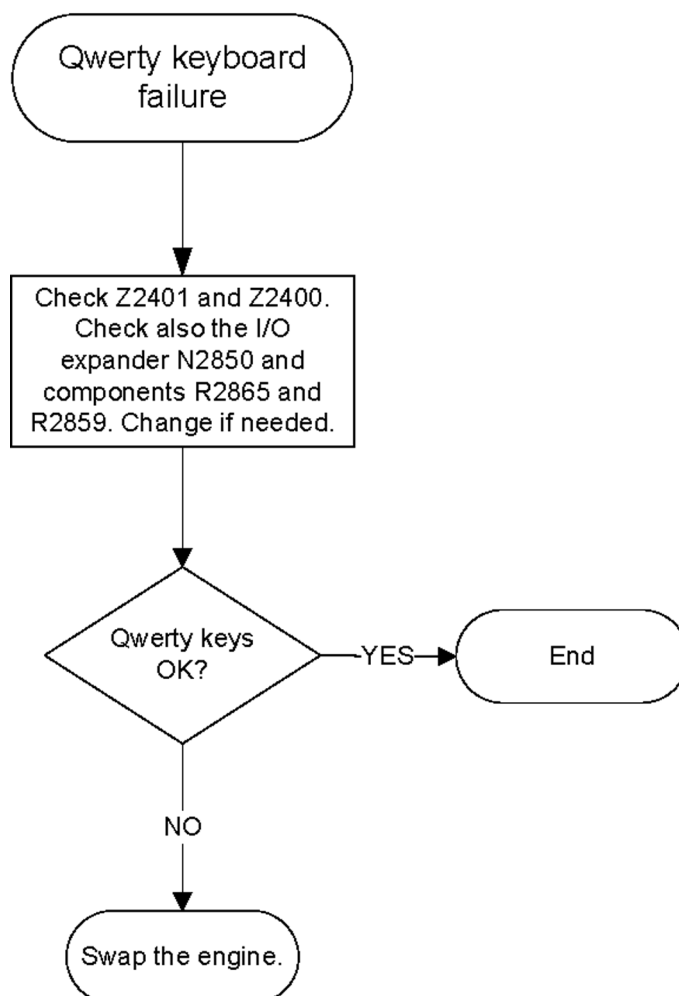

IO Expander		ZPU	ZPU	ZPU	ZPU	ZPU	ZPU	ZPU	ZPU
		KP_Y0	KP_Y1	KP_Y2	KP_Y3	KP_Y4	KP_Y5	KP_Y6	KP_Y7
		COLUMN_0	COLUMN_1	COLUMN_2	COLUMN_3	COLUMN_4	COLUMN_5	COLUMN_6	COLUMN_7
KP_X0	ROW_0	Q 1	W 2	E 3	R 4	T 5	Y 6	U 7	I 8
KP_X1	ROW_1	A	S	D	F	G	H -	J +	K #
KP_X2	ROW_2	Z	X	C	V	B	N (	M )	, ;
KP_X3	ROW_3	FN	leftSHIFT	Sym	Ctrl	@ /	SPACE	' &	? !
KP_X4	ROW_4	O 9	P 0	L *	BACKSPACE	. :	ENTER	rightSHIFT	
KP_X5	ROW_5	VOL +	VOL -	UP	DOWN	LEFT	RIGHT	SELECT	
KP_X6		AUTOFOCUS							
KP_X7		CAPTURE							

Figure 16 Keymatrix

## ■ Display module troubleshooting

### General instructions for display troubleshooting

#### Context

- The display is in a normal mode when the phone is in active use.
- Display is in a partial idle mode when the phone is in the screen saver mode.
- The operating modes of the display can be controlled with the help of *Phoenix*.

**Table 7 Display module troubleshooting cases**

Display blank	There is no image on the display. The display looks the same when the phone is on as it does when the phone is off. The backlight can be on in some cases.
Image on the display not correct	Image on the display can be corrupted or a part of the image can be missing. If a part of the image is missing, change the display module. If the image is otherwise corrupted, follow the appropriate troubleshooting diagram.
Backlight dim or not working at all	Backlight LED components are inside the display module. Backlight failure can also be in the connector or in the backlight power source in the main engine of the phone.
Visual defects (pixel)	<p>Pixel defects can be checked by controlling the display with Phoenix. Use both colours, black and white, on a full screen.</p> <p>The display may have some random pixel defects that are acceptable for this type of display. The criteria when pixel defects are regarded as a display failure, resulting in a replacement of the display, are presented the following table.</p>

**Table 8 Pixel defects**

Item		White dot defect				Black dot defect	Total
1	Defect counts	R	G	B	White Dot Total	1	1
		1	1	1	1		
2	Combined defect counts	Not allowed. Two single dot defects that are within 5 mm of each other should be interpreted as combined dot defect.					

#### Steps

1. Verify with a working display that the fault is not on the display module itself.

**Note:** The display module cannot be repaired.



2. Check that the cellular engine is working normally.
  - i To check the functionality, connect the phone to a docking station.
  - ii Start *Phoenix* service software.
  - iii Read the phone information to check that the engine is functioning normally (you should be able to read the Phone ID).
3. Proceed to the display troubleshooting flowcharts.


Use the **Display Test** tool in *Phoenix* to find the detailed fault mode.

## Display troubleshooting

### Context

Before going to display troubleshooting flow, make sure that the engine is working and starting up correctly. If the problem is in the engine, go to baseband troubleshooting.

## Troubleshooting flow

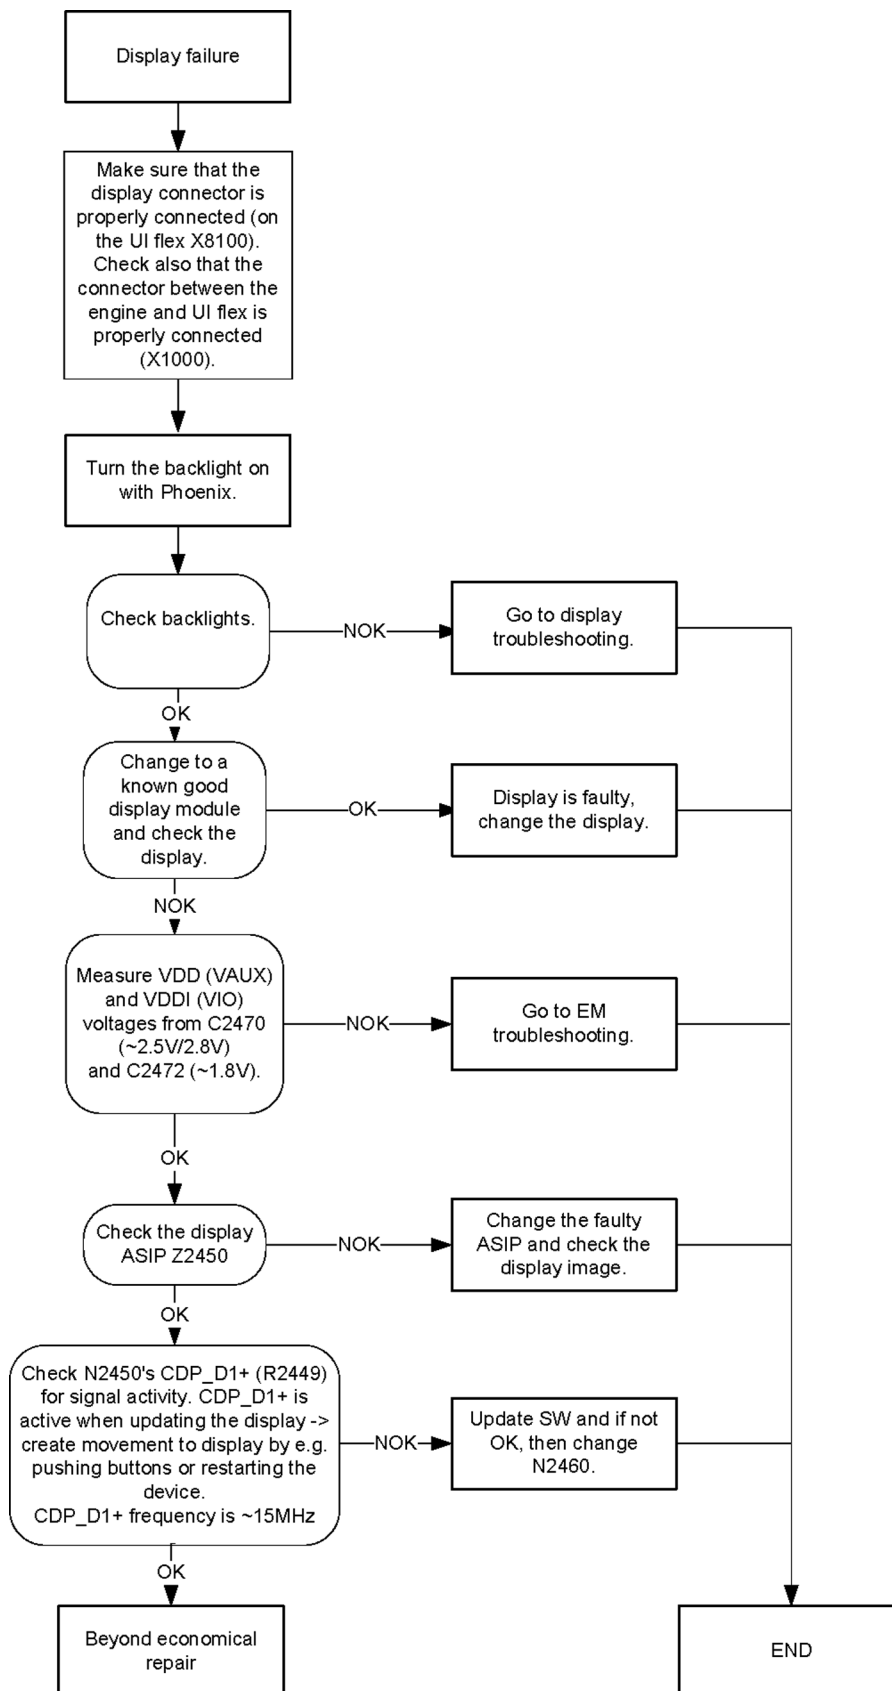


## Display backlight troubleshooting

### Context

The device has a dedicated display WLED driver whose intensity is controlled by Display itself by CAB (content adaptive backlight control) signal.

### Troubleshooting flow

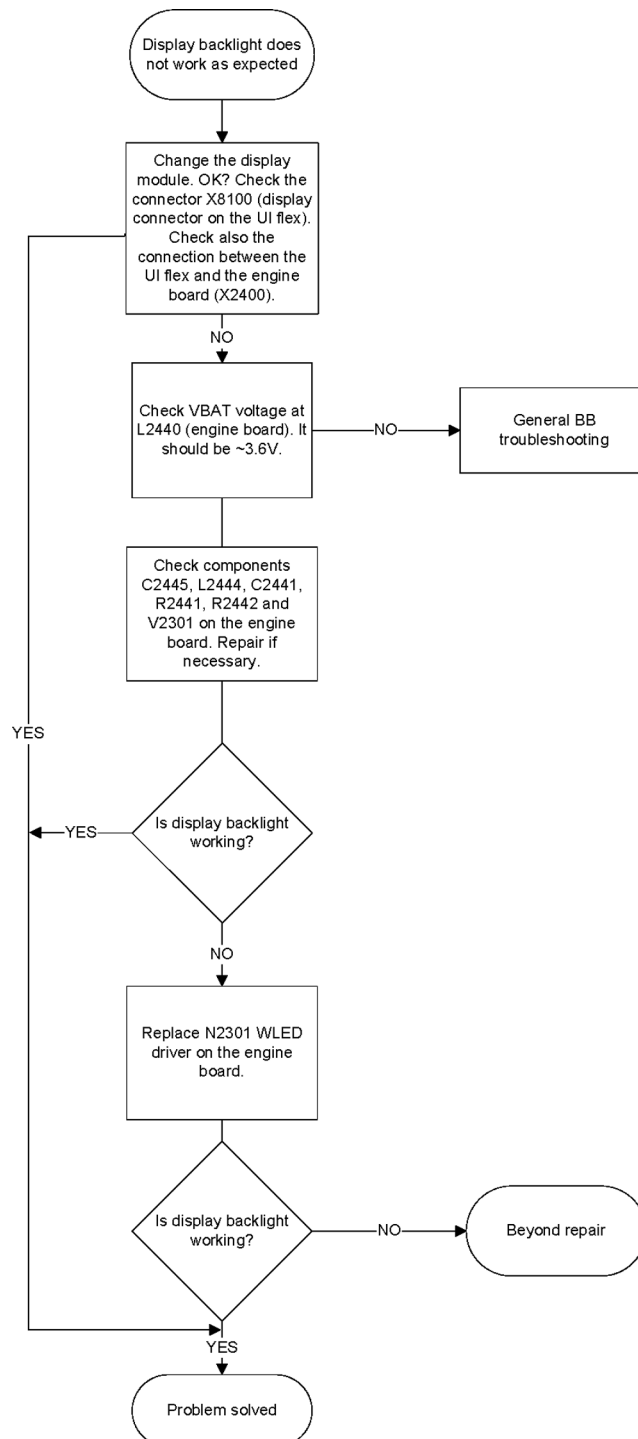

## ■ LED and LED driver troubleshooting

### Context

The device has two LED drivers that provide current for the keyboard and several LEDs (Send, End, Home) . The brightness of the backlights can be adjusted manually, and it affects the keypad. The keyboard backlights and some LEDs can be turned ON/OFF separately but not without switching on the display lights.

## Troubleshooting flow

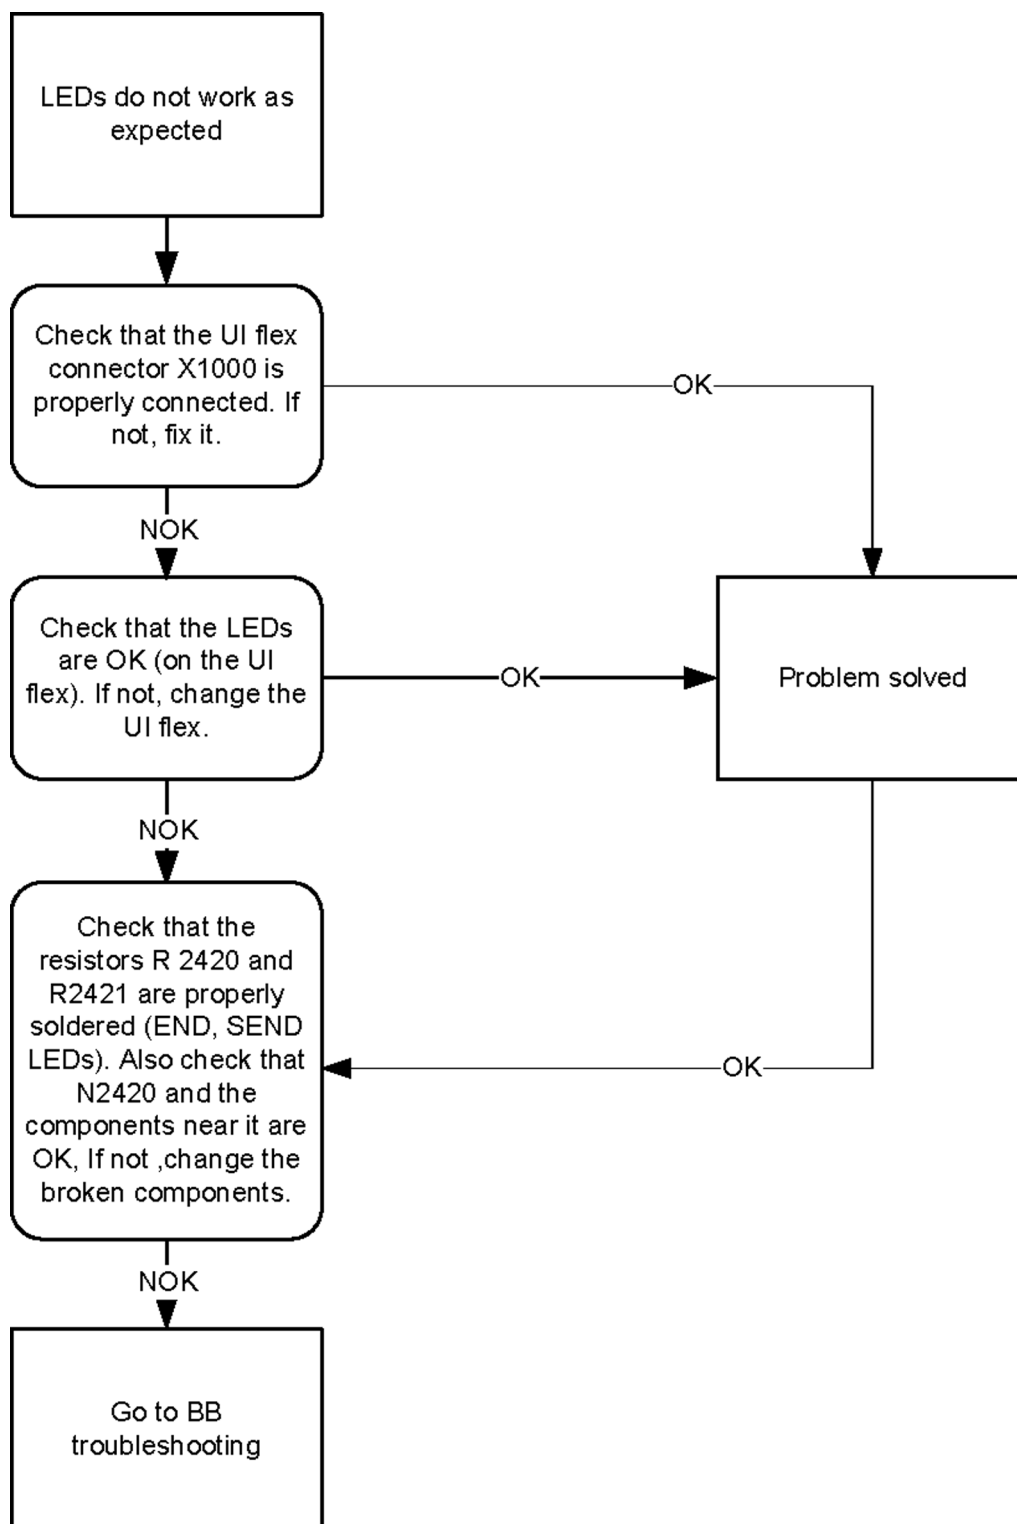


Figure 17 Send, End, Home LEDs

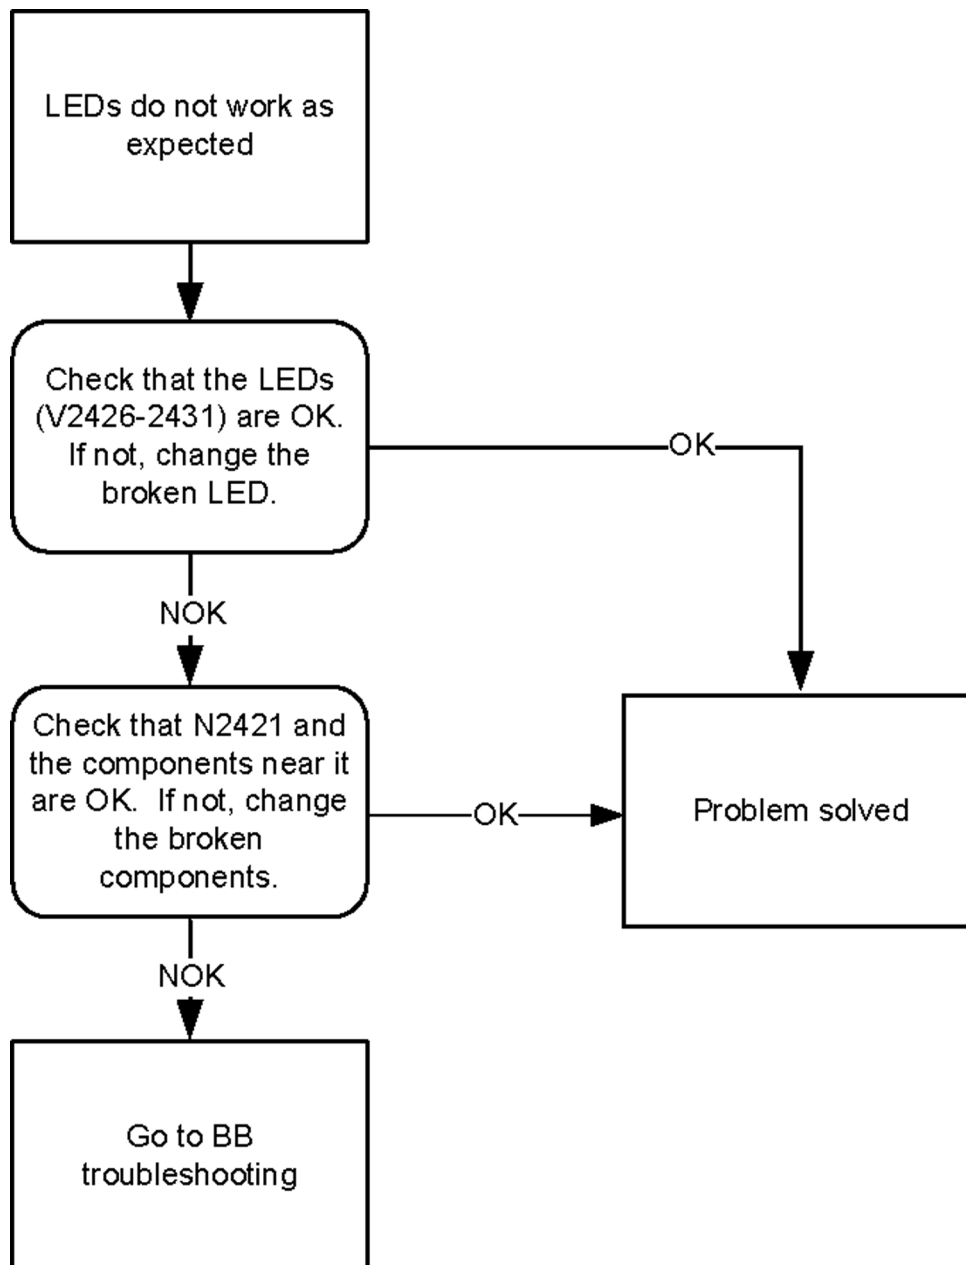


Figure 18 QWERTY LEDs

## ■ Ambient Light Sensor troubleshooting

### Introduction to ALS troubleshooting

If the Ambient Light Sensor (ALS) functionality is inoperative, check the ambient light sensor (N8104) and change it, if necessary. Also, check the capacitor C8102 (100n).

The ALS components are located at the top of the UI flex as illustrated in the figure below.



## GPS antenna



GPS antenna

The image shows the internal components of a mobile phone. A blue arrow points to a small, white, rectangular component labeled "GPS antenna". Other visible components include a large silver battery, a green circuit board, and various connectors and screws.

**Figure 20 GPS antenna**

The GPS antenna is connected to the PWB with a c-clip. The RF connector for conducted measurements and testing is located next to the c-clip.

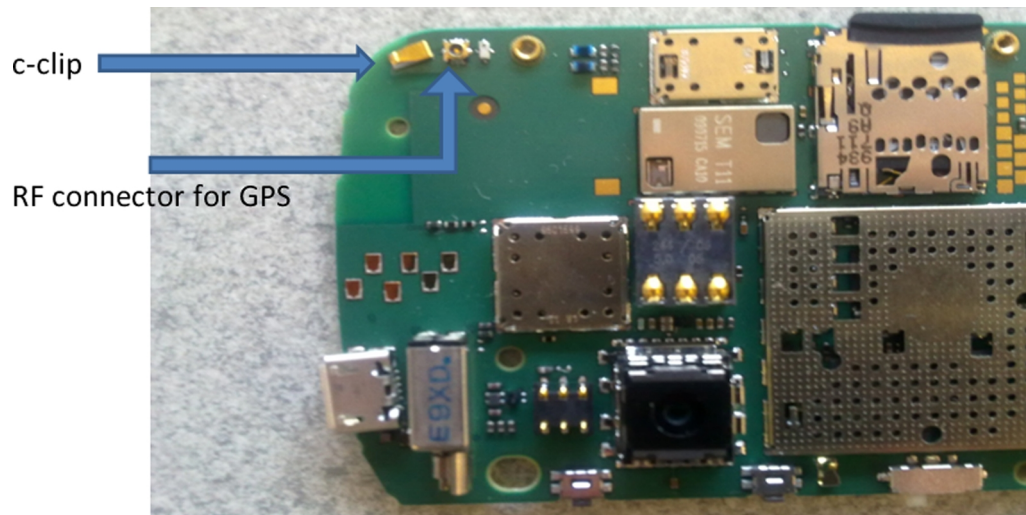


Figure 21 C-clip and RF connector location

## GPS settings for Phoenix

### *GPS control*

#### Context

Use the following to test GPS using Phoenix.

#### Steps

1. Start Phoenix service software.
2. From the **File** menu, select **Scan Product** and check that the correct product version is displayed.
3. From the **Testing** menu, select **GPS Control**. This opens up *GPS Control* dialog box, as shown in the figure below, and enables the GPS.  
Select **Idle** to confirm the GPS is enabled and is in idle mode.



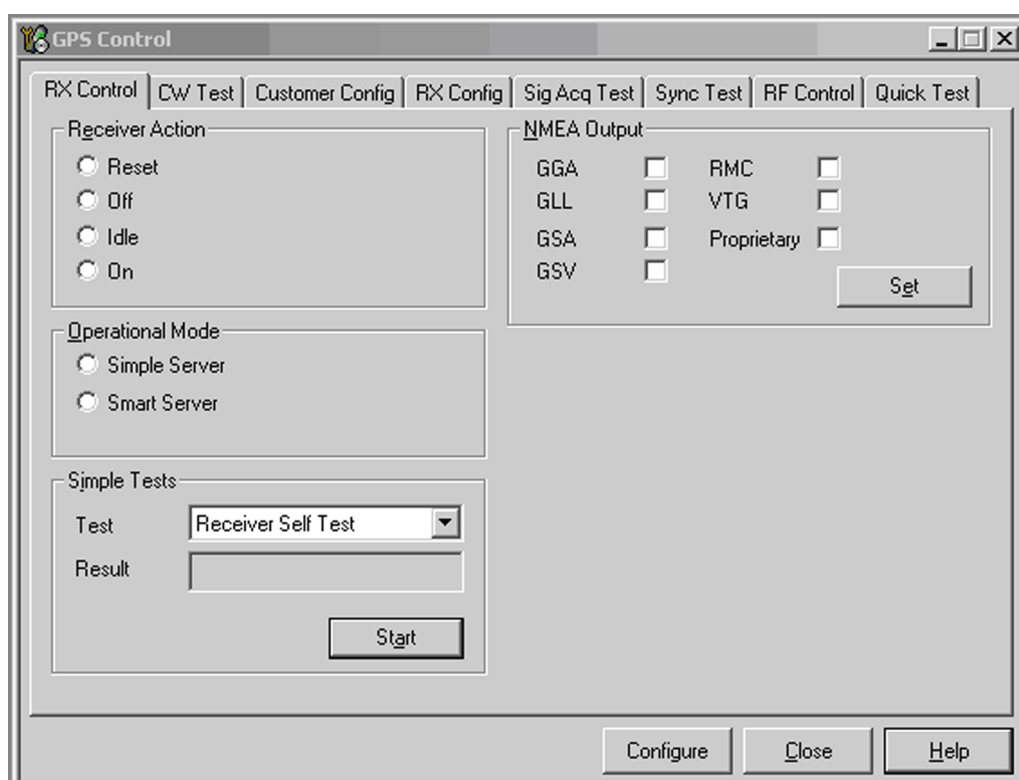


Figure 22 GPS Control dialog box

### *Oscillator test*

#### Context

The 16.368 MHz GPS Clk is compared against the CE Ref Clk and the output is the GPS Clk offset.

#### Steps

1. Start Phoenix service software.
2. From the **Testing** menu, select **GPS Control**. This opens up *GPS Control* dialogue box and enables the GPS. In the *Rx Control* window, go to the **Simple Tests** section, select **Oscillator Test** and click **Start**. The Offset result will be returned and should be within the limits of +/- 84Hz.

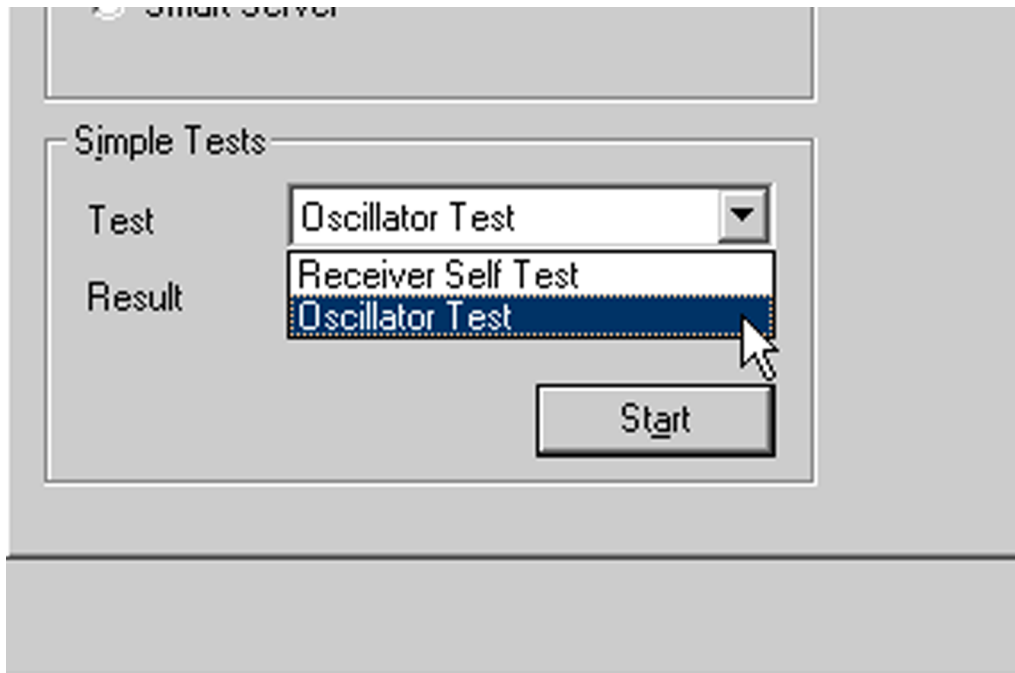


Figure 23 Simple Tests – Oscillator Test

## Receiver self test

### Context

Receiver self test can be used to check the correct functionality of the receiver core. For the test, GPS software configures internal test source to generate synthetic GPS-like data, processing it in the baseband and writing the results into the channel processor memory. The test compares the data in the channel memory against the expected value and reports a PASS/FAIL status.

### Steps

1. Start Phoenix service software.
2. From the **Testing** menu, select **GPS Control**. This opens up *GPS Control* dialogue box and enables the GPS. In the *Rx Control* window, go to the **Simple Tests** section, select **Receiver Self Test** and click **Start**. The test returns a PASS/FAIL result.

**Note:** The Oscillator Test should not be run after the Receiver Self Test. This sequence of tests may cause the Oscillator test to prolong and result in Phoenix timing out. If you are carrying out both of these tests, run the Oscillator Test first, after which you can run the Receiver Self Test.

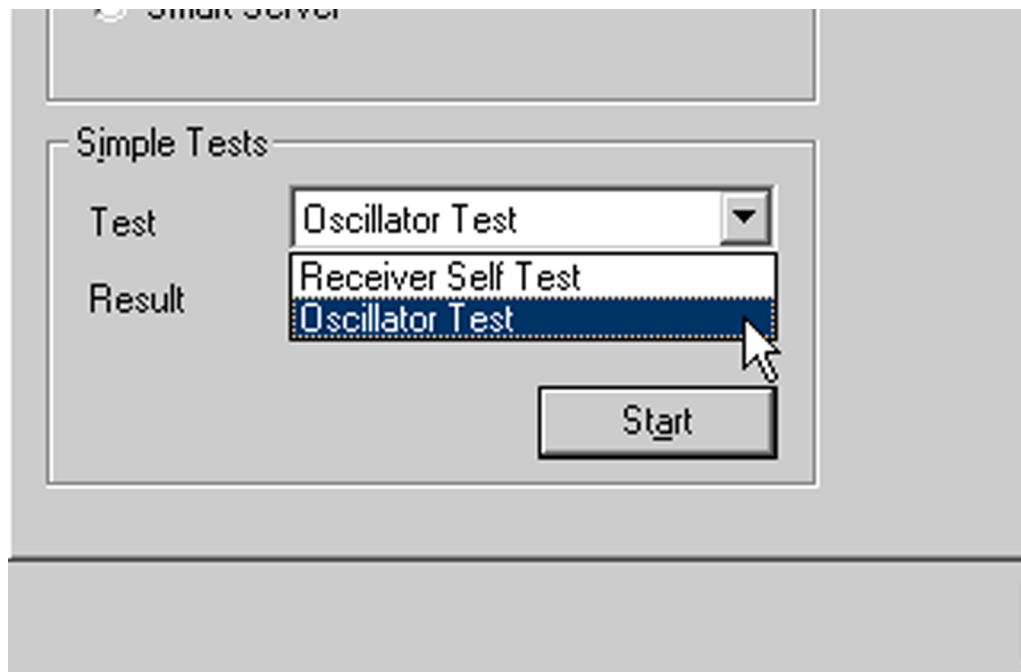


Figure 24 Simple Tests – Receiver Self Test

### *CW Test*

#### Context

This test reports the SNR of a CW signal input to the GPS antenna port.

#### Steps

1. Start Phoenix service software.
2. From the **Testing** menu, select **GPS Control**. This opens up *GPS Control* dialog box and enables the GPS.

In the *CW Test* window, ensure that the input settings are as shown in the figure below. Inject 1575.520152 MHz tone at the GPS RF connector at a level of -110dBm and click **Start**.

For Pin = -110dBm and negligible other losses, the expected result ranges are:

- Galvanic 29.8dB to 38.1dB
- Radiated 25.8dB to 38.1dB

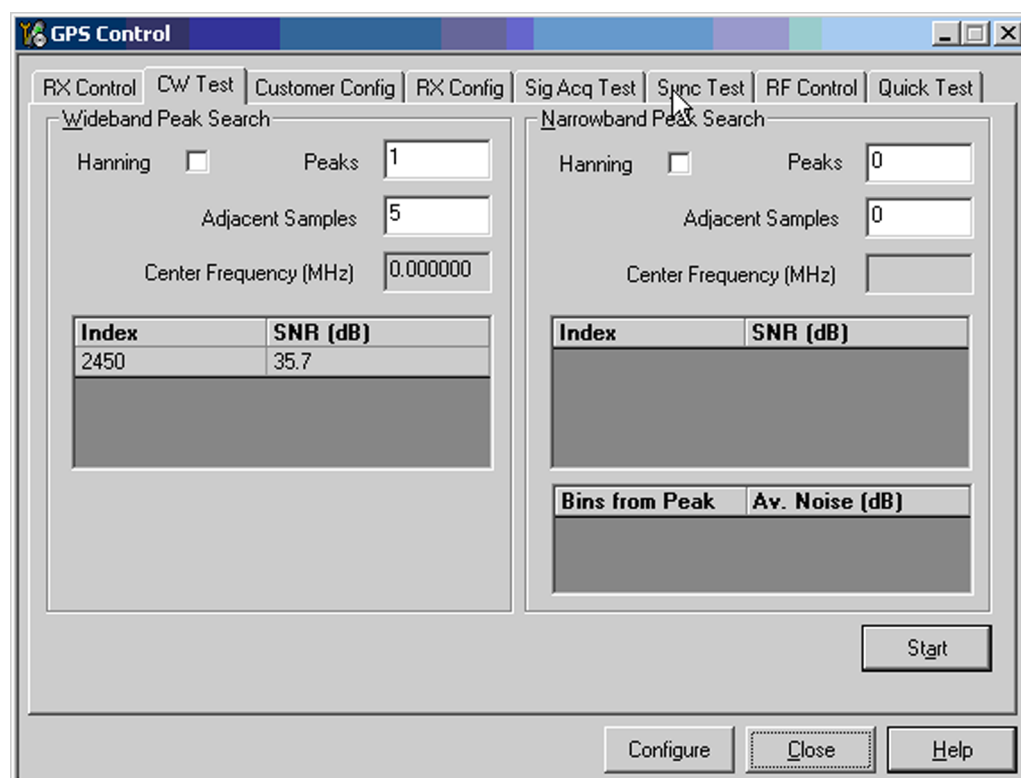


Figure 25 CW Test window

### Quick Test window

Because the *Quick Test* runs the *Receiver Self Test* before the *Oscillator Test*, it may cause a timeout on the *Oscillator Test*. It does not necessarily mean that Oscillator Test has failed, but carrying out the [Oscillator Test \(page 3-45\)](#), [Receiver Self Test \(page 3-46\)](#) and [CW Test \(page 3-47\)](#) individually will give more valid results.

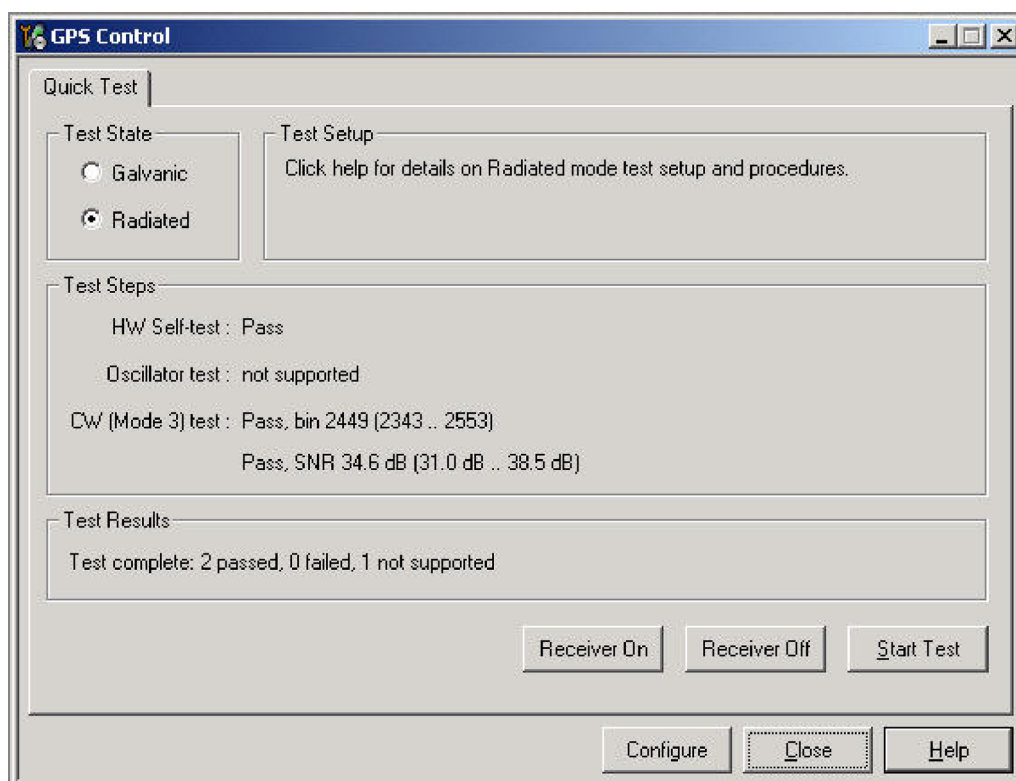



Figure 26 GPS Quick Test window for GPS troubleshooting

## GPS failure troubleshooting

### Context

The GPS failure troubleshooting flow can be followed and, where applicable, will feed into the basic checks.

## Troubleshooting flow

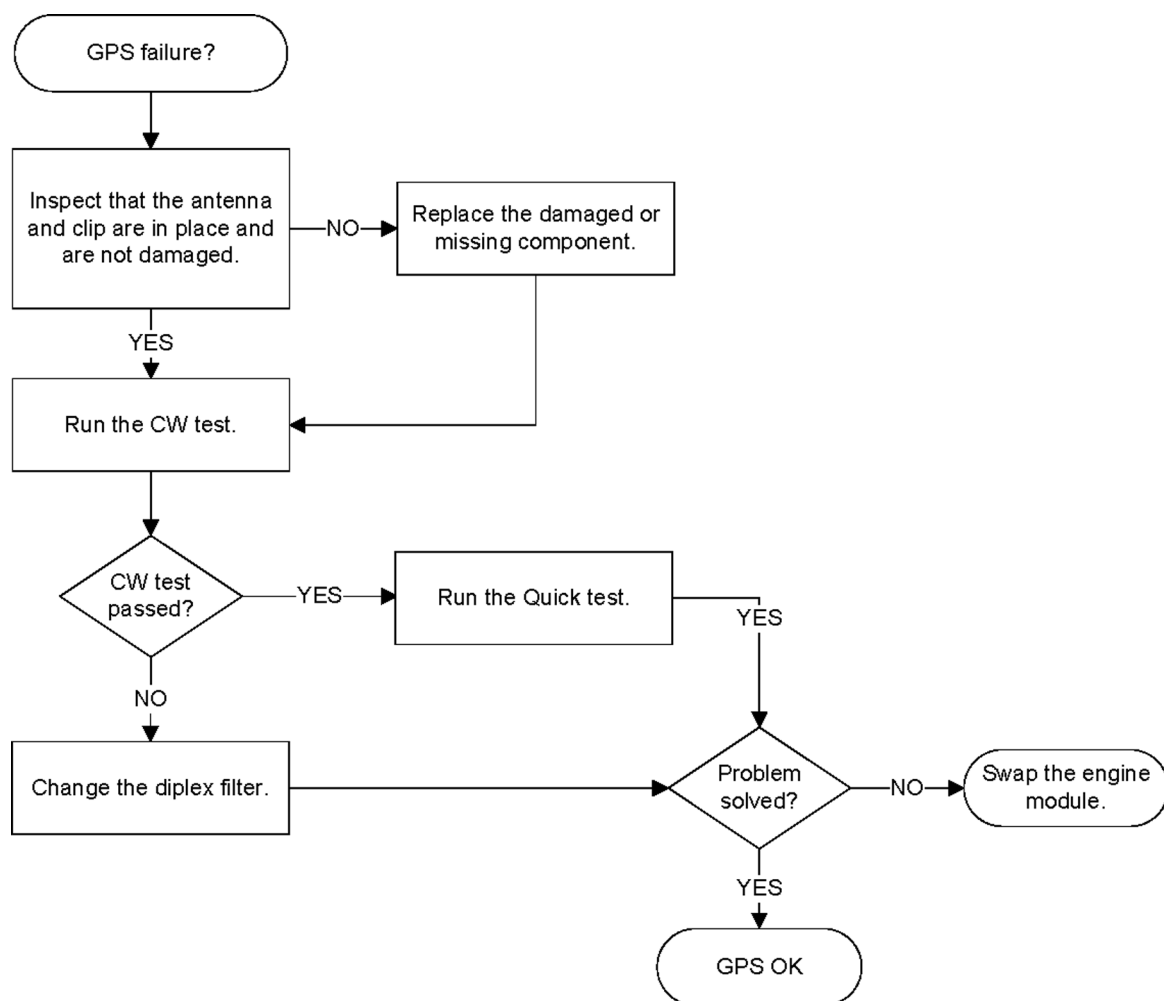

## ■ WLAN troubleshooting

### WLAN functional description

The Size 4 WLAN module is designed for use with a single antenna shared between itself and a co-located BT device. The WLAN SW is downloaded from the host engine when the WLAN is turned on over the dedicated SPI interface. The BT and WLAN engines use common reference clock from the RF engine.

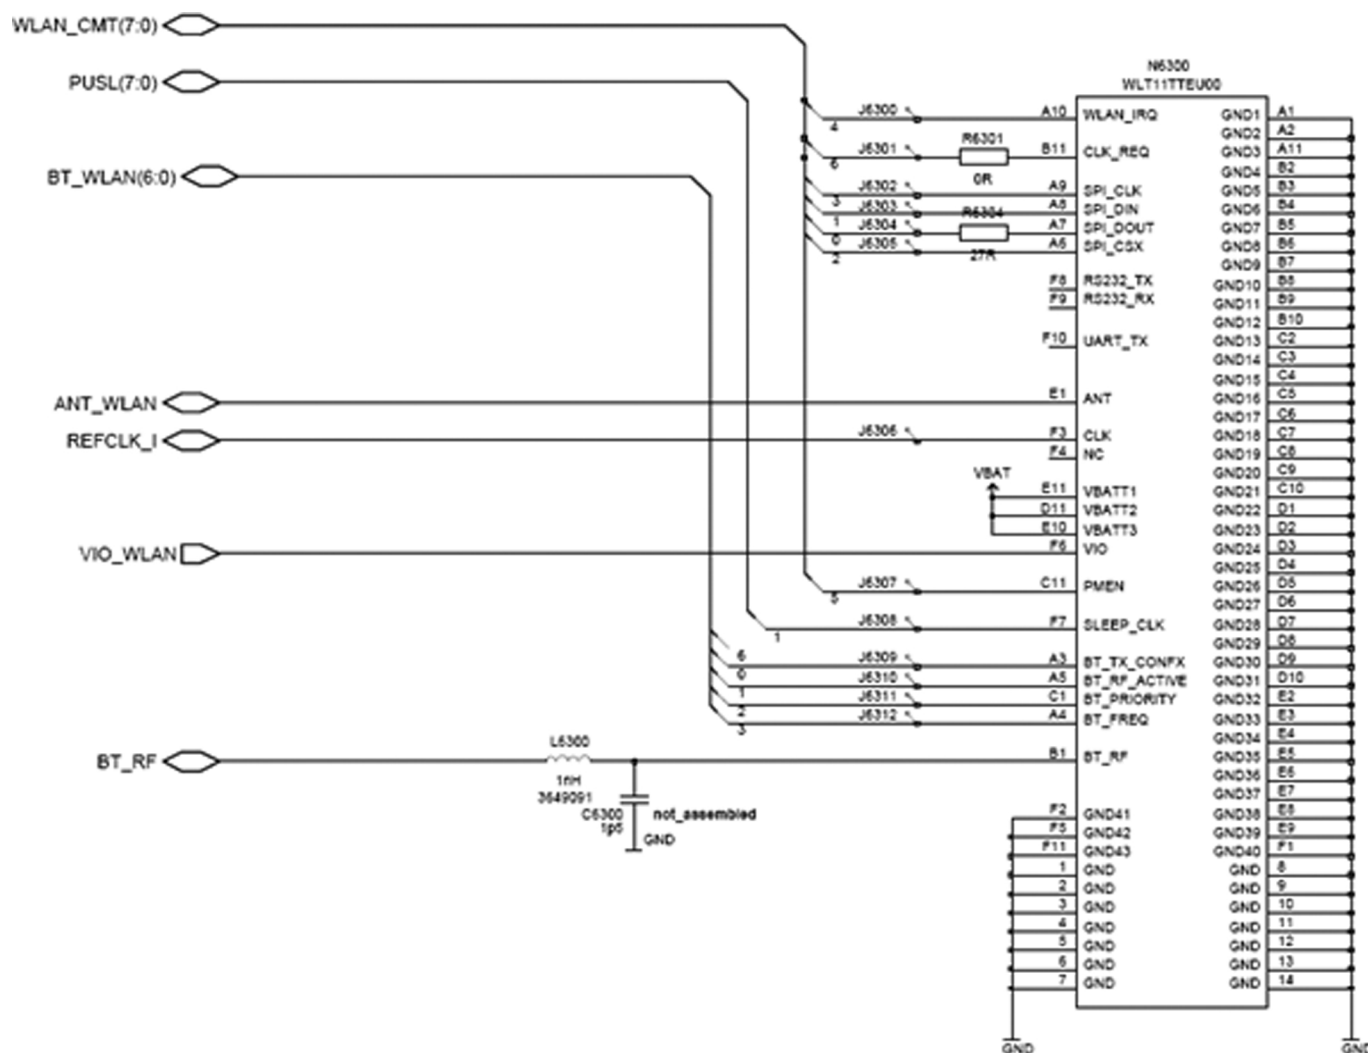


Figure 27 WLAN circuitry

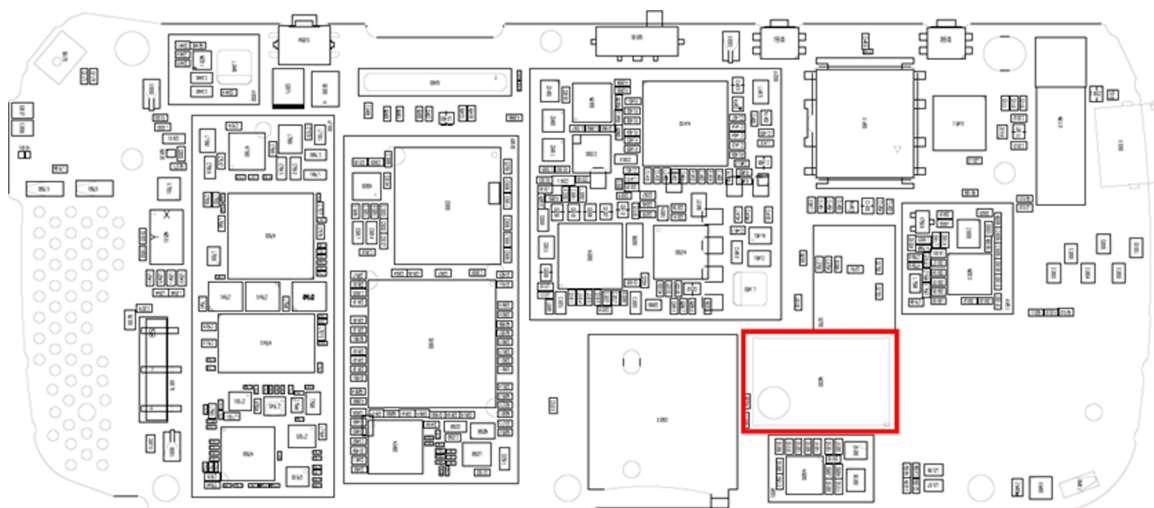


Figure 28 WLAN component placement

## WLAN settings for Phoenix


Use the following to test WLAN using Phoenix:

- 1 Set phone into Local Mode .

2 From the **File** menu, select **Scan Product** and check that the correct product version is displayed

3 From the **Testing** menu, select **Self Test**. This opens up a **Self Tests** dialog, as shown below.

Select the **ST\_WLAN\_TEST** check box as shown and then press the **Start** button. The test turns the WLAN on , sets up the SPI interface and then downloads the WLAN firmware into the WLAN module. During the download the WLAN acknowledges the data blocks and so the self test is a good way to confirm that the WLAN module is communicating with the Host. The result column changes to **Passed** after a few seconds if it is operating properly.

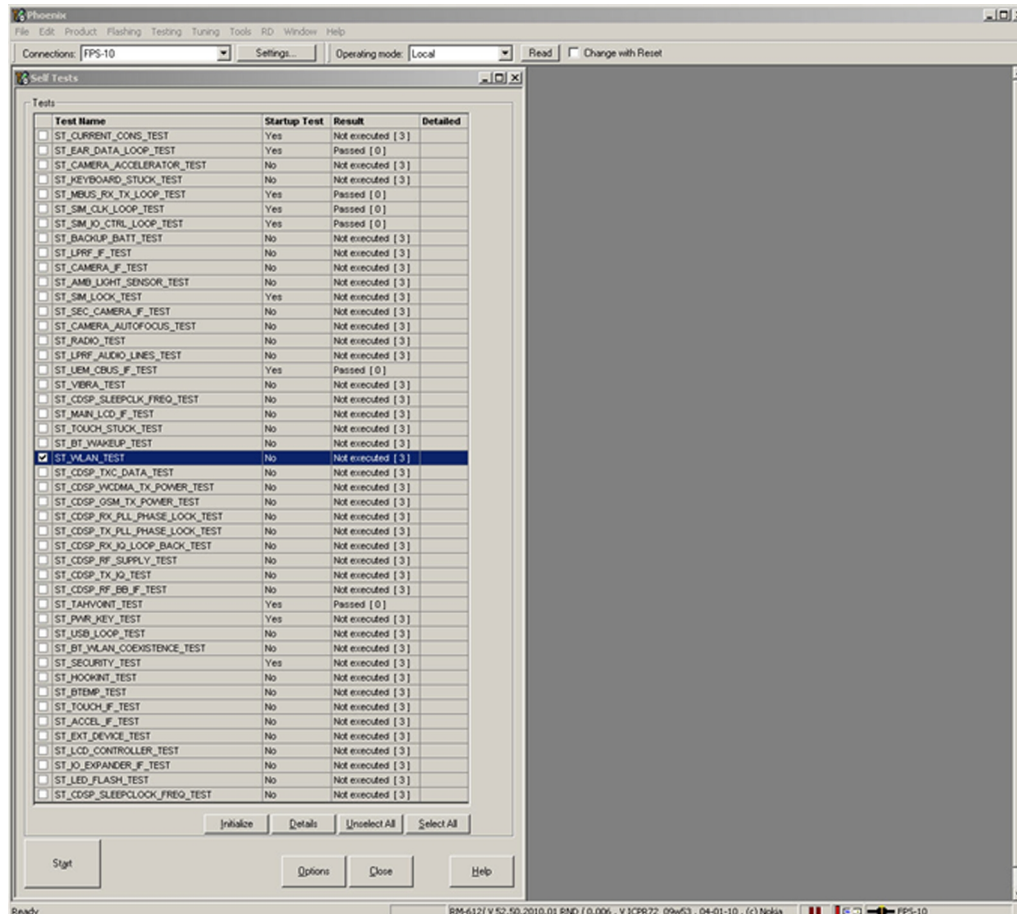


In addition, a test of the WLAN to BTH interface can be done by selecting the **ST\_BT\_WLAN\_COEXISTENCE\_TEST** check box and pressing the **Start** button.

This test verifies that the WLAN to BTH co-existence interface signals are properly connected and there are no open circuit or shorts on the four interface signals.

The co-existence interface comprises BTH Txconfig, BTH RF Active, BTH Priority, and BTH Frequency.



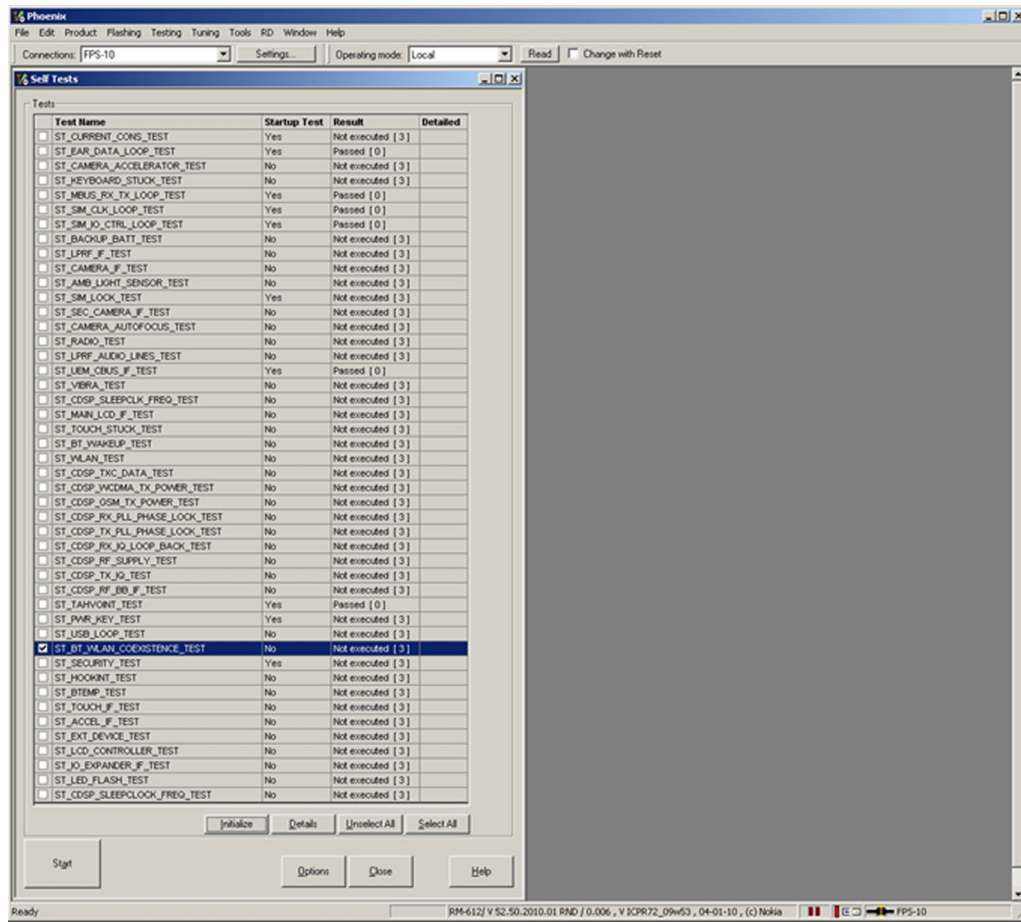

In summary these two Self Tests provide a simple means of ensuring that the Host engine is able to communicate with the WLAN module and check the interface to BTH. A more detailed WLAN performance test is covered in the [WLAN functional tests \(page 3-53\)](#) section.

## WLAN functional tests

### On/Off test


#### Prerequisites

A flash adapter connected to a PC with Phoenix service software is required.

From the **Testing** toolbar, select **WLAN Configuration** option. This opens the **WLAN Configuration** dialog as shown below. WLAN can be turned ON and OFF by selecting **On** or **Off** from the **Power state** drop-down list (as indicated in the picture below):

- 1 With **Power State** set to **Off**, measure the dc power supply current consumption of the flash adaptor.
- 2 Next return the **Power State** to **On** and re-measure the dc power supply current of the flash adaptor.

The difference between the currents in (1) and (2) should be between 190 to 220 mA. When WLAN is ON, the firmware has been downloaded and the WLAN module is in the receive state. When WLAN in OFF, WLAN is powered down.

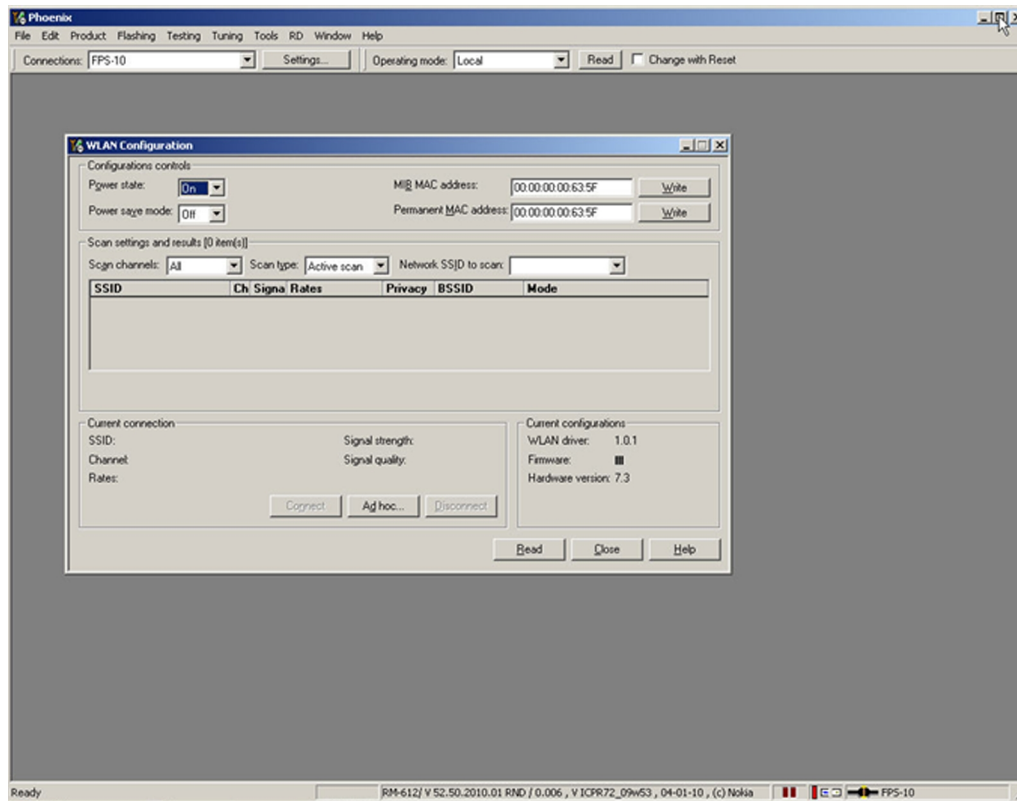

## TX tests



### Prerequisites

Connect a complete phone assembly with C-cover to a PC with Phoenix service software using a USB data cable.

From the **Testing** toolbar, select **WLAN Tx Tests** option as shown below. This test can be used to verify TX configuration and functionality. The default settings are sufficient for testing the TX operation, although other channels and data rates are equally suitable. To start the test, press the **Start** button:

- 1 Monitor the WLAN TX spectrum on a Spectrum analyser. (When making a radiated test ensure that other WLAN devices are not transmitting as these may be detected as well, confusing the result). A typical 11 Mbps TX spectrum is shown in the figure below.
- 2 To finish the test, Press the **Finish** button.

The difference between the two readings should be approximately 150 mA and measures the transmit current in 11 Mbps, 802.11b mode of operation.

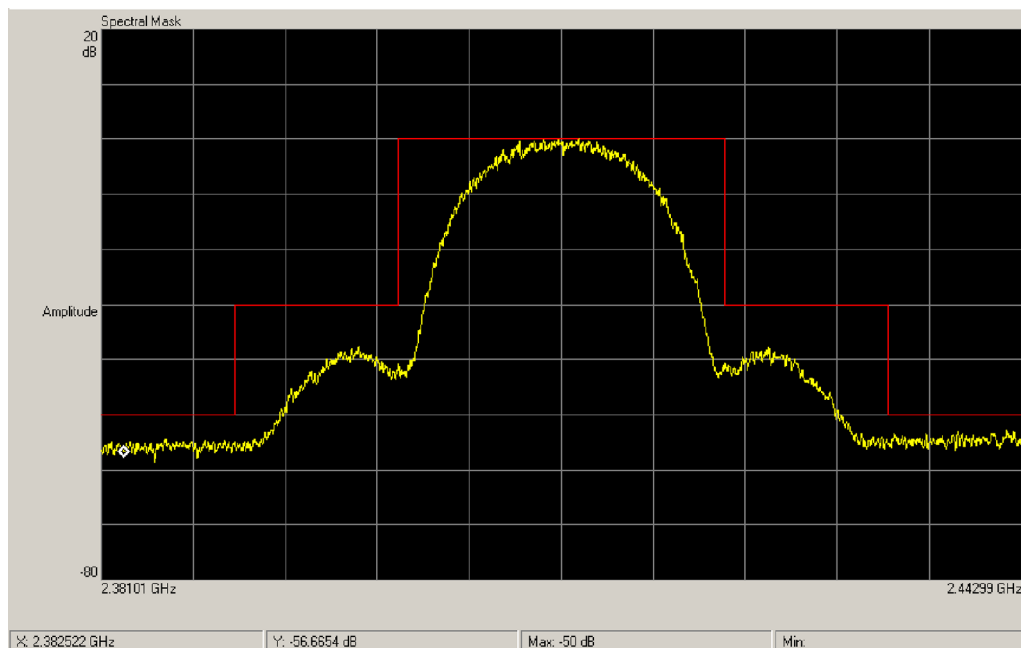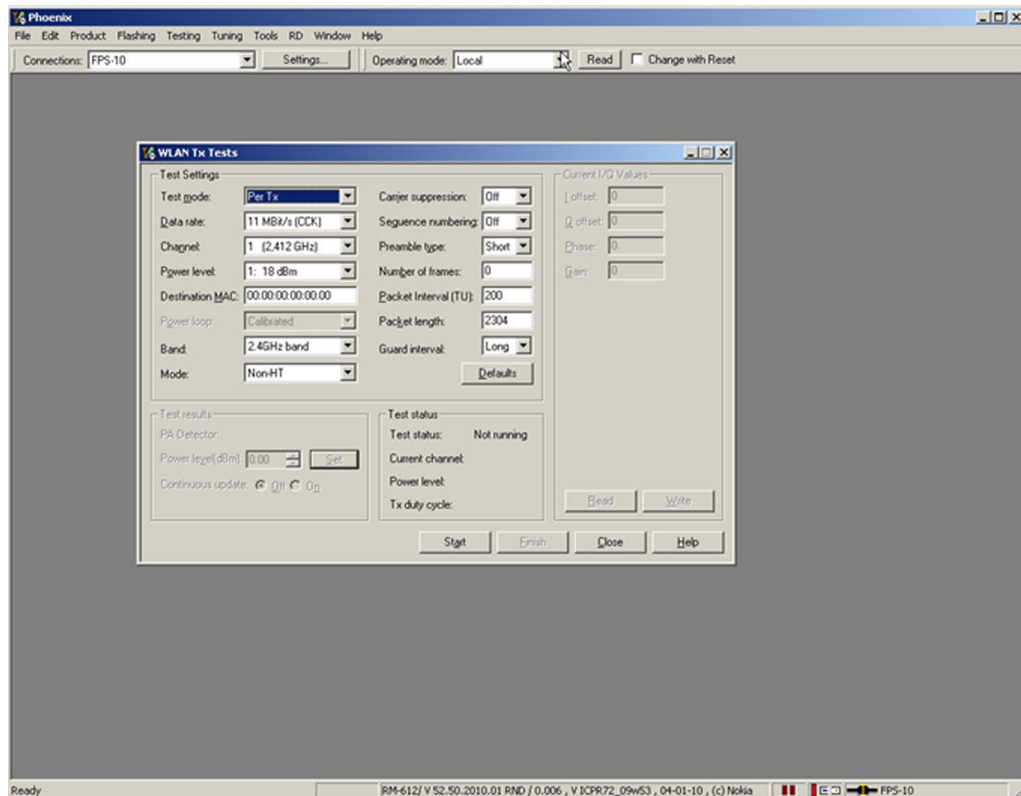

## RX Tests

### Prerequisites

Connect a complete phone assembly with C-cover to a PC with Phoenix service software using a USB data cable.


There are different options available for testing the Rx path. The simplest is to use the WLAN to report Rx packets when operating in an area where there is an active WLAN network. Simply starting an Rx test shows the number of packets detected by the WLAN module as it monitors the network. However, it requires a properly configured WLAN network.

From the **Testing** toolbar, select **WLAN Rx Tests** option as shown below. This test can be used to verify Rx configuration and functionality.

To start the test, press the **Start** button.

As the WLAN monitors an active WLAN network, the Rx test results window updates and shows the number of Frames received, as well as the Packer error rate.

Monitoring the detected frames is a simple method to verify that the WLAN antenna and receiver path are working properly.

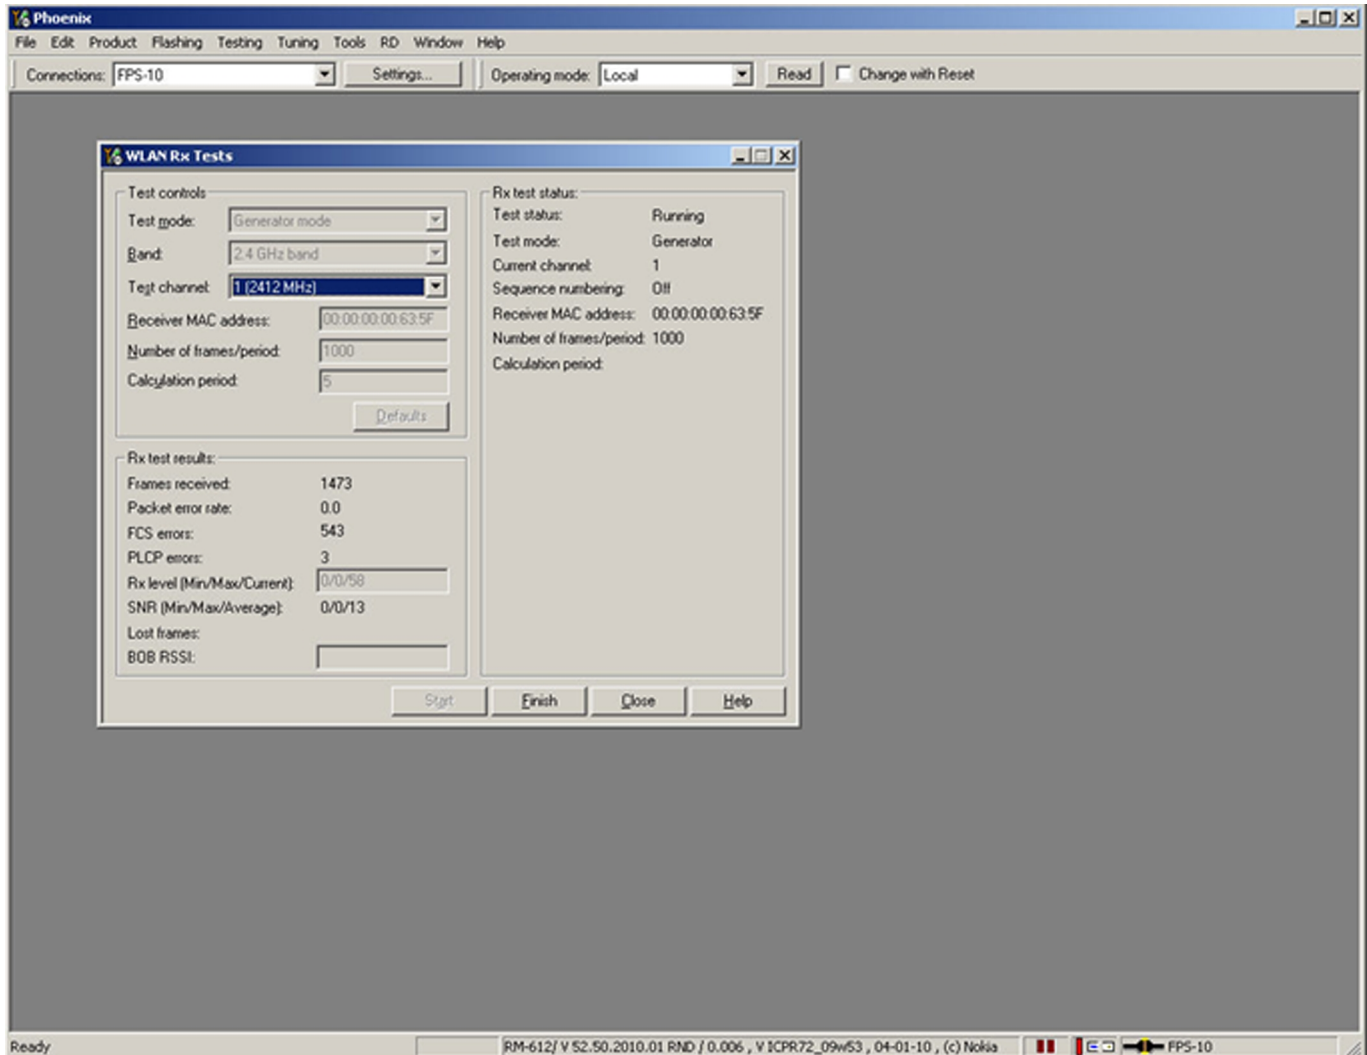


## WLAN auto tuning

In case of WLAN ASIC change, RF power auto tuning is needed. Connect WLAN RF test connector to CMU200 input using proper RF cable. Start Phoenix WLAN autotune window. Check the settings and verify your PC communicates with CMU200 via GPIB.

## Auto tuning procedure

- 1 Start tuning by pressing **Tune**.

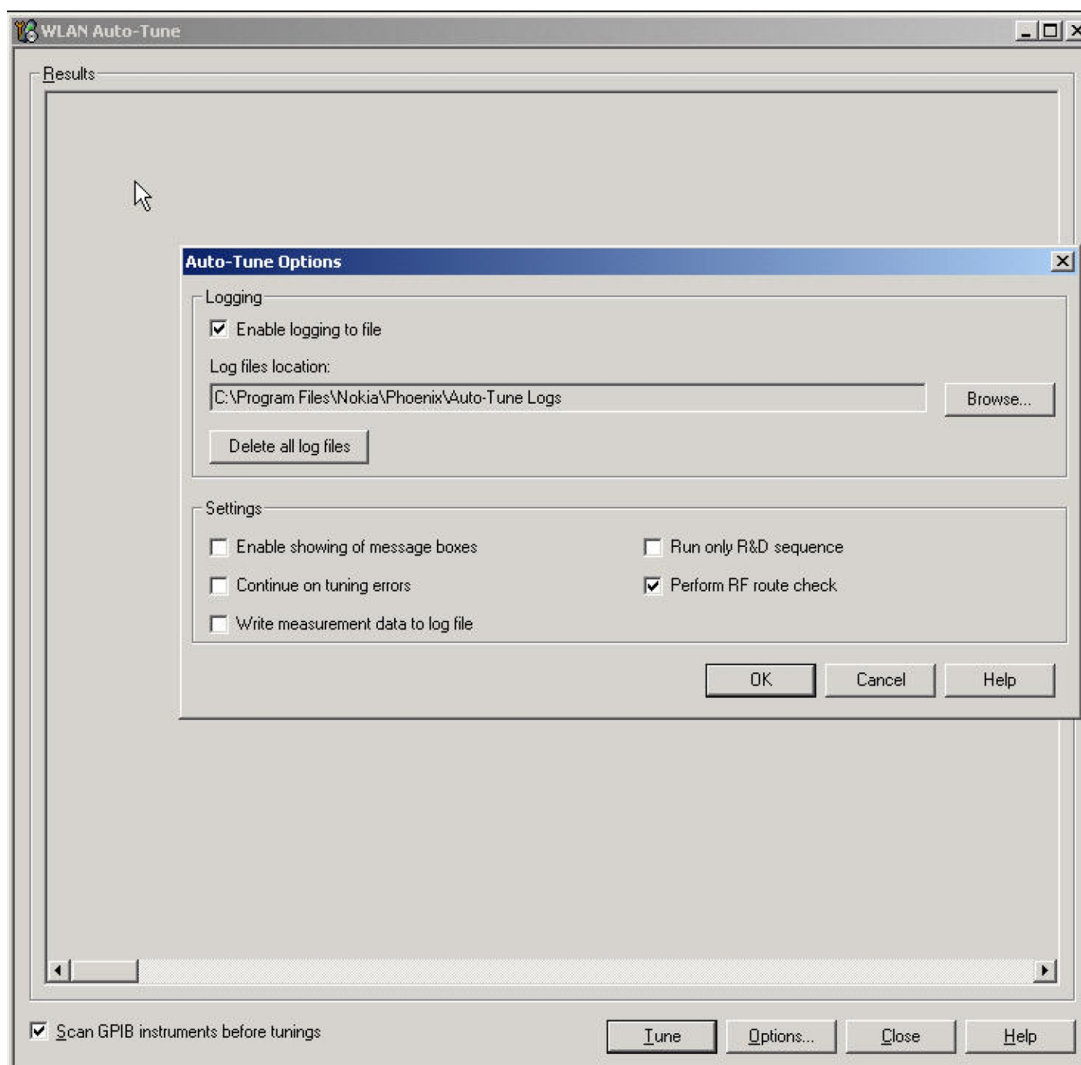

**Figure 29 WLAN auto tune settings**

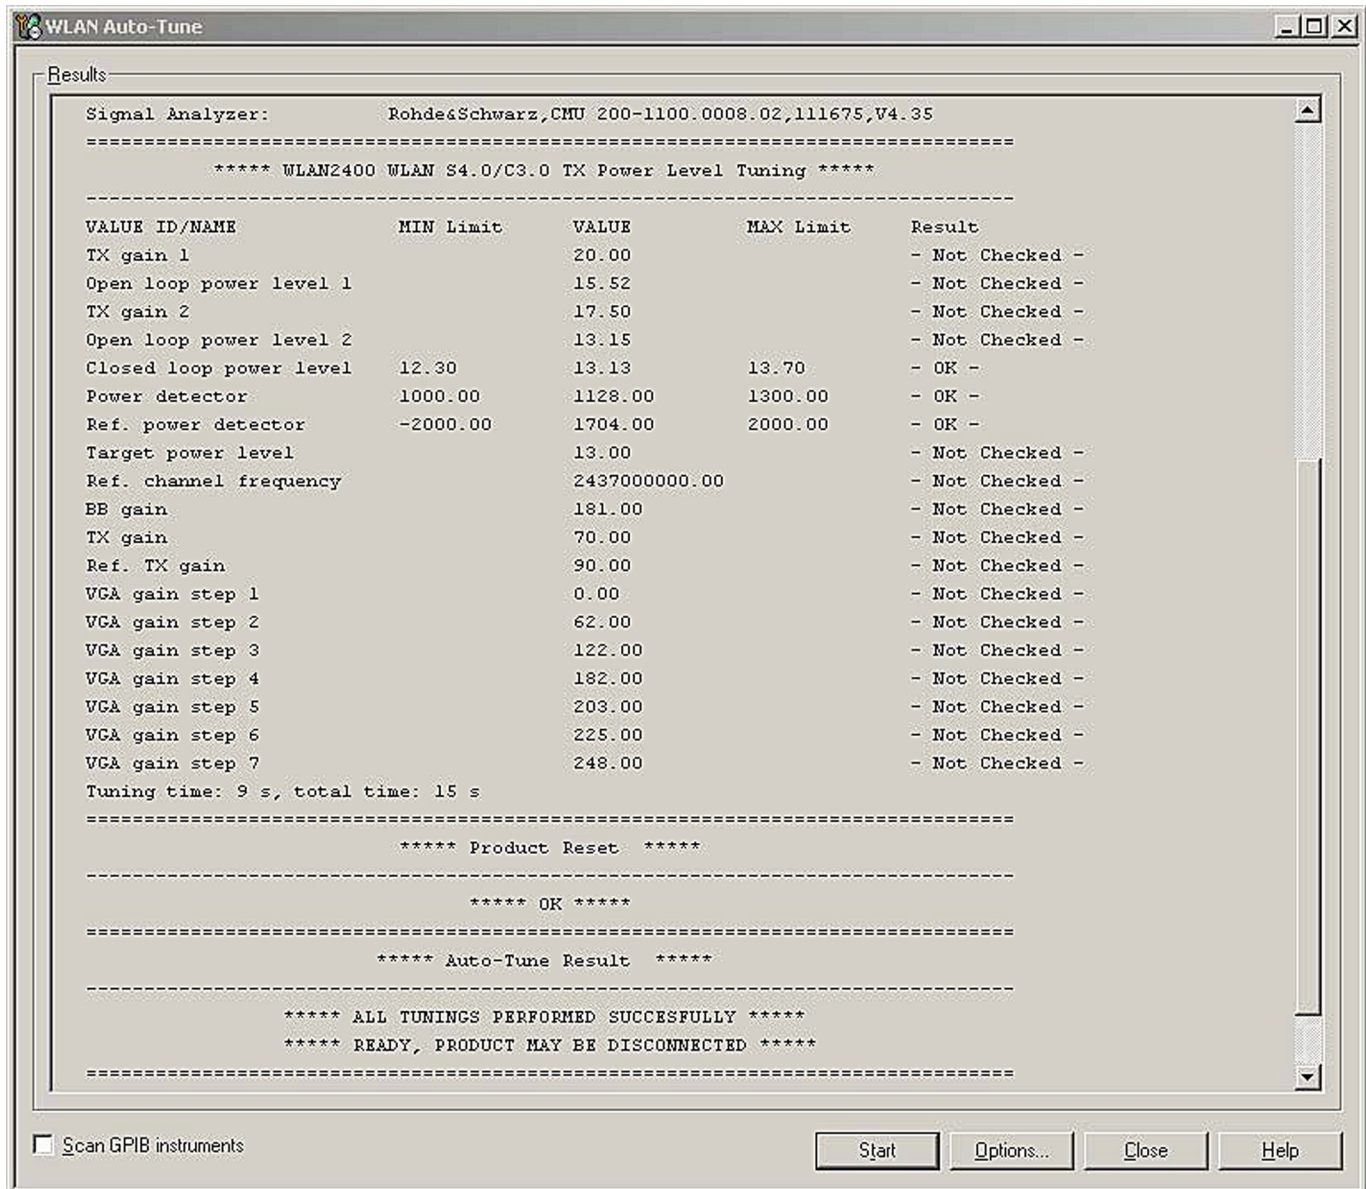


Figure 30 WLAN autotuning results

## Bluetooth and FM radio troubleshooting

### Introduction to Bluetooth/FM radio troubleshooting

#### Bluetooth/WLAN antenna

The BT RF signal is routed from BTHFMRDS2.2D through the WLAN module to the shared WLAN/BT/GPS antenna in the phone's top side on the B cover. The antenna has two resonators for BT/WLAN ISM band and also the GPS band and antenna are conducted with a feed (spring) on the PWB.



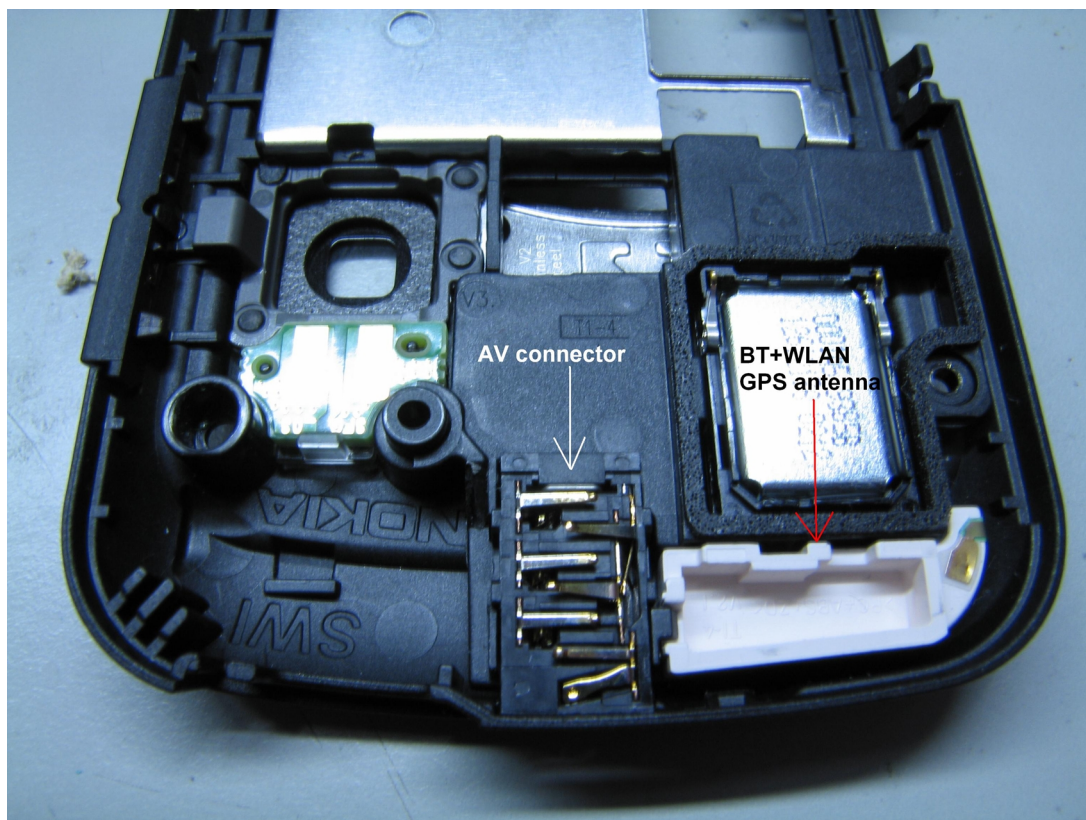


Figure 31 WLAN/BT/GPS antenna

## Introduction to Bluetooth/FM radio troubleshooting

The Bluetooth and FM radio are combined in the same ASIC, so both features are checked when troubleshooting.

The following problems can occur with the Bluetooth and FM radio hardware:

Symptom	Problem	Repair solution
Unable to switch on the Bluetooth on the phone user interface	Open circuit solder joints or component failure of BTH/FM ASIC/module BB ASICs or SMD components	Replacement of engine
Able to send a data file to another Bluetooth device, but unable to hear audio through a functional Bluetooth headset	Open circuit solder joints or component failure of BTH/FM ASIC/module BB ASICs	Replacement of engine
Able to switch on Bluetooth on the phone user interface, but unable to detect other Bluetooth devices	Open circuit solder joints or Pogo Pins not making contact with c-cover	Repair of antenna circuit or replacement of BT/WLAN/GPS antenna
Able to turn on FM radio and Bluetooth on the phone user interface, but unable to detect local FM radio stations with a Nokia headset inserted	Open circuit solder joints or detached component in FM antenna circuit	Repair of FM antenna circuit or replacement of AV connector

Symptom	Problem	Repair solution
Able to perform scans to detect local FM radio stations with a functional Nokia headset inserted, but unable to hear FM audio through the headset	Open circuit solder joints or detached component in FM audio path between Bluetooth/FM ASIC and headset	Repair or replacement of FM audio AV connector and circuits

Users may experience the following problems resulting in functional phones being returned to the repair centre:

Symptom	Problem	Repair solution
Bluetooth feature does not operate as desired with another Bluetooth device.	Bluetooth Profile implemented in a Bluetooth accessory not supported in a Nokia phone	Use a Bluetooth accessory with Bluetooth profiles supported by the phone.
Poor FM radio reception (unable to detect many radio stations)	Nokia headset not being used	Use a Nokia headset.

## Test coverage

The tests listed in the table below should be performed to verify whether the Bluetooth and FM receiver and transmitter are functional. The use of Self Tests are described in section *BT and FM Self Tests in Phoenix*

Test	Test Coverage	Repair solution
Bluetooth Self Test: ST_LPRF_IF_TEST	Bluetooth-FM ASIC UART interface (controls Bluetooth and FM receiver and transmitter)	Replacement of engine (or repair of the phone BB)
Bluetooth Self Test: ST_BT_WAKEUP_TEST	Bluetooth ASIC interrupt control interface	Replacement of engine (or repair of the phone BB)
Bluetooth Self Test: ST_LPRF_AUDIO_LINES_TEST	Bluetooth ASIC PCM interface	Replacement of engine (or repair of the phone BB)
Bluetooth Functional Test: BER test with BT-Box or functional test with another Bluetooth device	Bluetooth antenna circuit	Repair of Bluetooth antenna matching circuit or replacement of B/WLAN/GPS antenna
FM Radio Self Test: ST_RADIO_TEST	FM Radio I2C interface	Replacement of engine (or repair of the phone BB)
FM Radio Functional Test: Perform a scan for local radio stations and check the station list displayed on the phone.	FM receiver antenna circuit	Repair of FM antenna matching circuit or replacement of AV connector and flex
FM Radio Functional Test: Listen to a local radio station.	FM receiver audio circuit	Repair of FM antenna matching circuit or replacement of AV connector and flex

The self tests run from the Phoenix software are used for fault diagnosis.



If the Phoenix software is not available the functional tests with phone accessories are sufficient to verify the functionality of the Bluetooth and FM radio receiver and transmitter.

## Bluetooth/FM radio component layout and test points

The Bluetooth antenna is product specific (ceramic antenna conducted by feed on the PWB). On phones with WLAN and GPS, the Bluetooth RF signal is routed through a WLAN front-end module via diplexer and a shared Bluetooth/WLAN/GPS antenna is used.

The FM RF signal is routed through the FM antenna matching circuit to the phone headset AV connector.

The FM radio audio signal is routed to the headset AV connector through the BB ASIC shared by the phone audio functions.

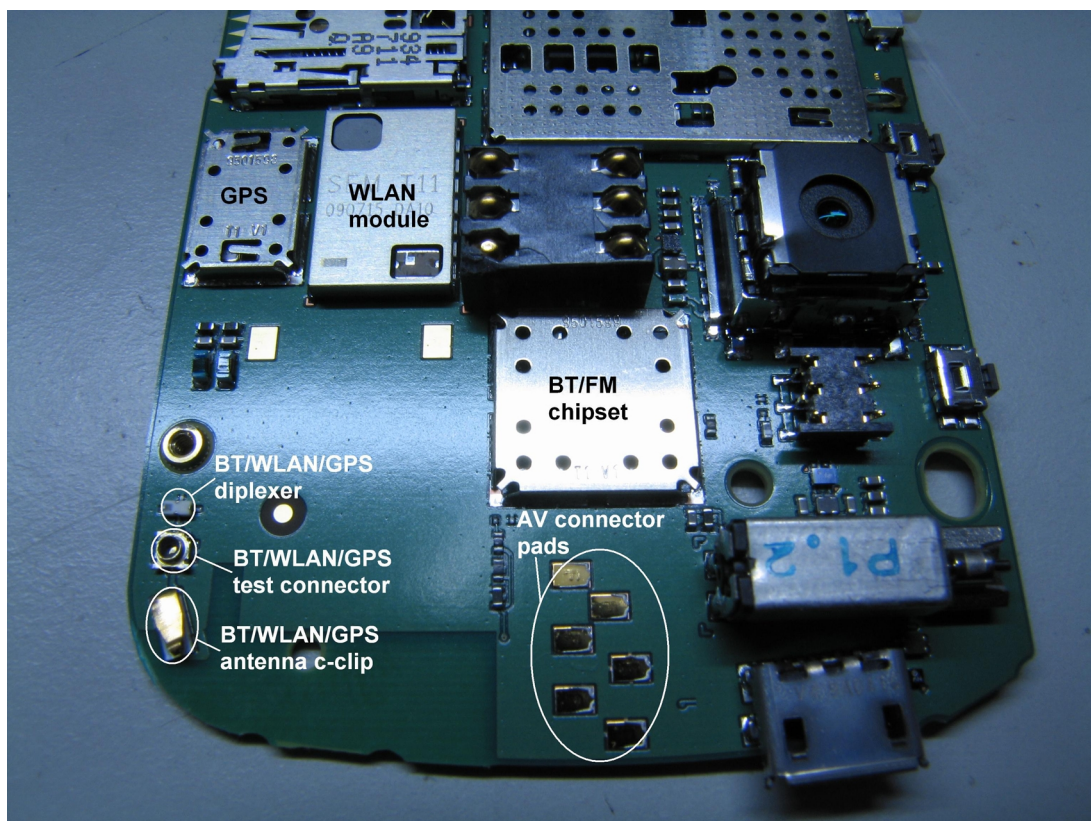


Figure 32 Bluetooth/FM radio component layout and test points

## Bluetooth BER test

### Prerequisites

JBT-9, or SB-6 Bluetooth test box (BT-box) is required to perform a BER test. If a BT-box is not available Bluetooth functionality can be checked by transferring a file to another Bluetooth phone.

### Steps

1. Place the phone in the flash adapter or connect data cable to phone.
2. Start *Phoenix* service software.
3. Choose **File** → **Scan Product**.
4. Choose **Testing** → **Bluetooth LOCALS**.
5. Locate the BT-box serial number (12 digits) found in the type label on the back of the JBT-9, or SB-6 Bluetooth test box.

6. In the Bluetooth *LOCALS* window, write the 12-digit serial number on the *Counterpart BT Device Address* line.
7. Place the BT-box near (within 10 cm) of the phone and click **Start BER Test**.

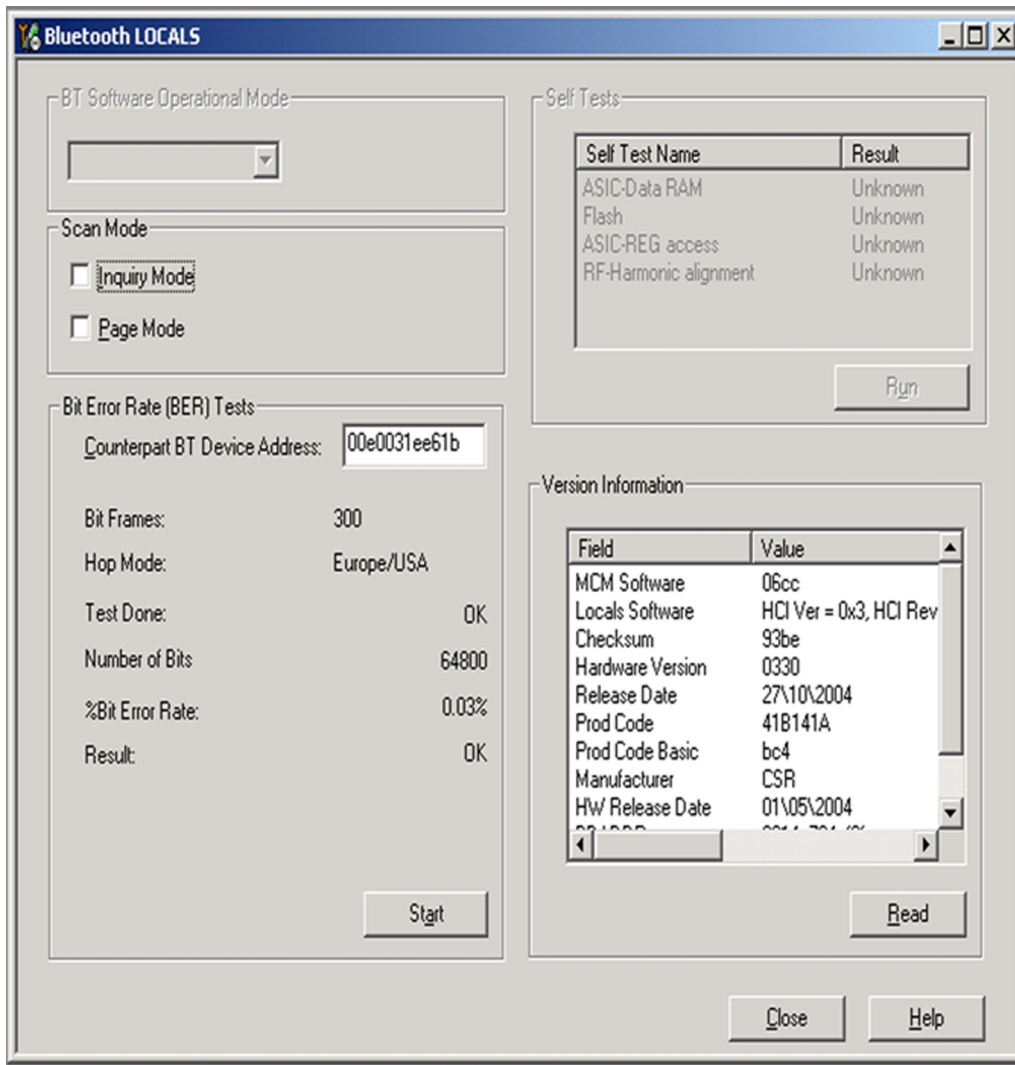


Figure 33 Bluetooth BER test

## Bluetooth and FM radio self tests in Phoenix

### Prerequisites

A flash adapter (or phone data cable) connected to a PC with Phoenix service software is required.

### Steps

1. Place the phone in the flash adapter or connect data cable to phone.
2. Start *Phoenix* service software.
3. Choose **File** → **Scan Product**.
4. From the **Mode** drop-down menu, set mode to **Local**.
5. Choose **Testing** → **Self Tests**.
6. In the *Self Tests* window check the following Bluetooth and FM radio related tests:
  - **ST\_LPRF\_IF\_TEST**

- **ST\_LPRF\_AUDIO\_LINES\_TEST**
- **ST\_BT\_WAKEUP\_TEST**
- **ST\_RADIO\_TEST**

7. To run the tests, click **Start**.

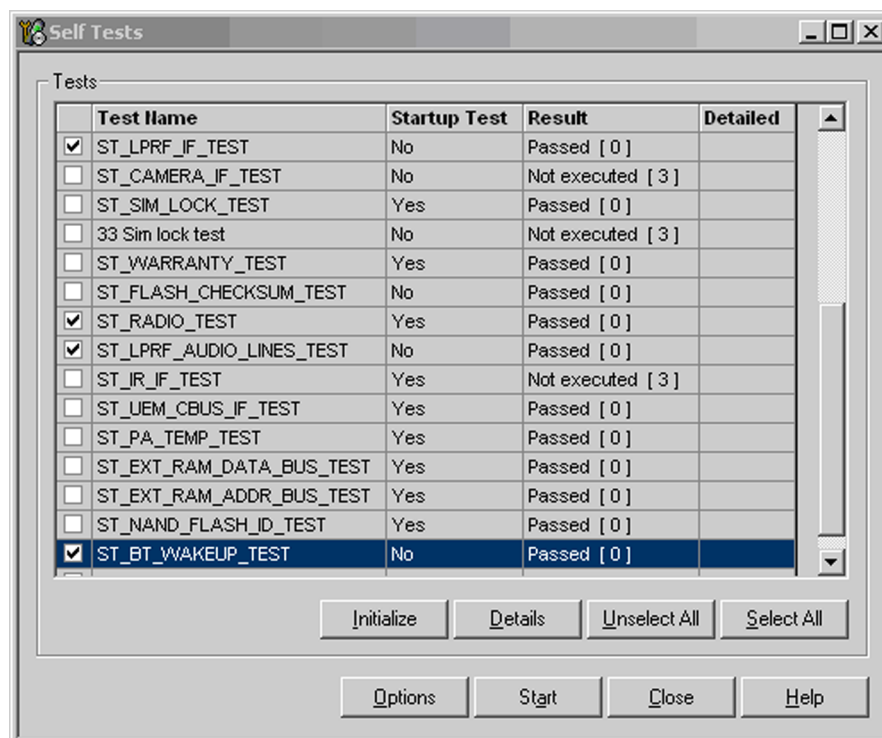


Figure 34 Bluetooth and FM radio self tests in *Phoenix*

## FM radio testing

### Steps

1. Set signal generator parameters:

- FM modulation on
- Frequency 100MHz
- FM deviation 22kHz
- Modulation frequency 1kHz
- RF level should be varied during the test to obtain good audio signal quality
- Connect suitable antenna to signal generator

**Note:** You may alternately use a known good FM radio broadcast as a test signal.

2. Attach the Nokia headset to the phone's AV connector.
3. Use Scroll button to autotune to the radio frequency.
4. Set volume to suitable level.
5. Check audio quality with a headset.

## ■ Audio troubleshooting

### Audio troubleshooting test instructions

Single-ended external earpiece and differential internal earpiece outputs can be measured either with a single-ended or a differential probe.

When measuring with a single-ended probe each output is measured against the ground.

Internal handsfree output is measured using a current probe, if a special low-pass filter designed for measuring a digital amplifier is not available. Note also that when using a current probe, the input signal frequency must be set to 2 kHz.

The input signal for each loop test can be either single-ended or differential. Exception to this is a digital microphone, which needs input signal from an external sound source (laptop speaker) to playback for example 1 kHz sine wave from 5 cm distance.

### Required equipment

The following equipment is needed for the tests:

- Oscilloscope
- Function generator (sine waveform)
- Current probe (Internal handsfree PWM output measurement)
- Phoenix service software
- Battery voltage 3.7V
- Sound source (laptop speaker or B&K type 4231 calibrator)

### Test procedure

Audio can be tested using the Phoenix audio routings option. Three different audio loop paths can be activated:

- AV microphone to AV earpiece
- AV microphone to HP earpiece
- External microphone in Internal handsfree out
- HP microphone to AV earpiece

Each audio loop sets routing from the specified input to the specified output enabling a quick in-out test. Loop path gains are fixed and they cannot be changed using Phoenix. Correct pins and signals for each test are presented in the following table.

### Phoenix audio loop tests and test results

The results presented in the table apply when no accessory is connected and battery voltage is set to 3.7V.

Earpiece, internal microphone and speaker are in place during measurement. Applying a headset accessory during measurement causes a significant drop in measured quantities.

The gain values presented in the table apply for a differential output vs. single-ended/differential input.

Loop test	Input terminal	Output terminal	Path gain [dB] (fixed)	Input voltage [mVp-p]	Output voltage [mVp-p]	Output DC level [V]	Output current [mA]
AV Mic to AV Earpiece	HS_MIC & GND	HS_EAR_L & GND		100		1.2	NA
		HS_EAR_R & GND					
AV Mic to HP Earpiece	HS_MIC & GND	EarP & GND		100		1.2	NA
		EarN & GND					
HP Mic to AV Earpiece	Acoustical input, 1kHz sine wave	HS_EAR_L & GND	NA	94 dB SPL	100		NA
		HS_EAR_R & GND					
External Mic in Internal handsfree out	HS_MIC & GND	E2002		1000			
		E2005					

## Measurement data

### Earpiece signal

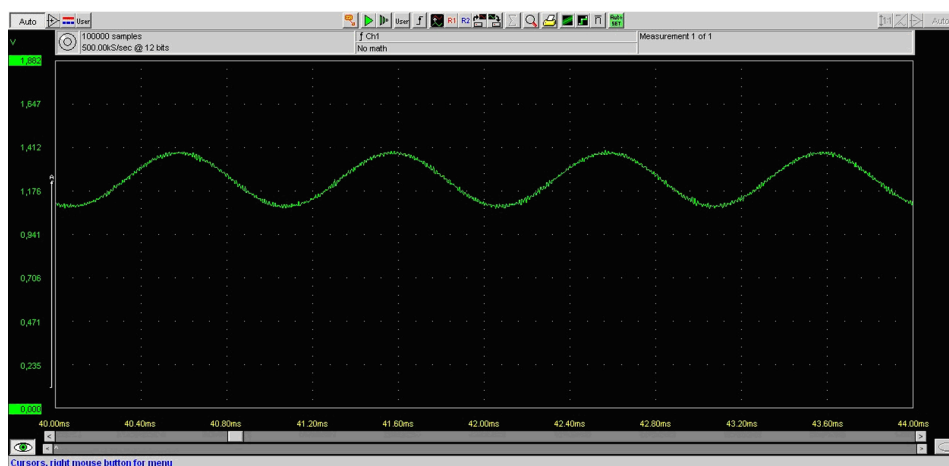



Figure 35 Single-ended output waveform of the AV Mic to HP Ear measurement when earpiece is connected.

### Integrated handsfree signal




**Figure 36 Single-ended output waveform of the Ext\_microphone in Int handsfree out loop measurement when speaker is connected (measured at speaker pads). No filter is used.**

### External output from AV

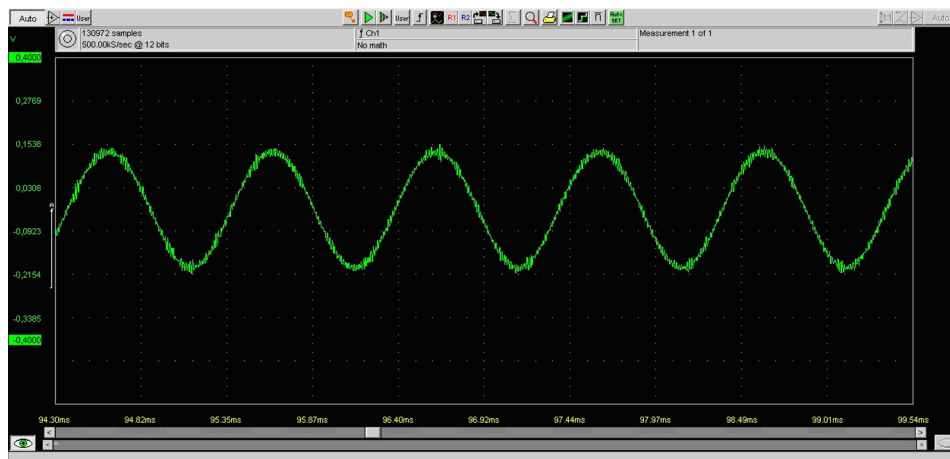

**Figure 37 Single-ended output waveform of the AV Mic to AV Ear loop.**

### External output from AV (acoustic input)

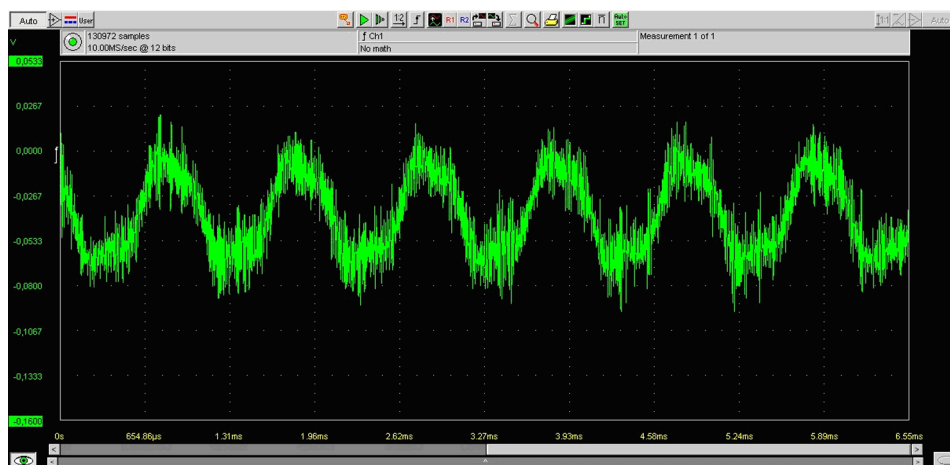


**Figure 38 Single-ended output waveform of the HP Mic to AV Ear loop.**




## Internal earpiece troubleshooting

### Troubleshooting flow

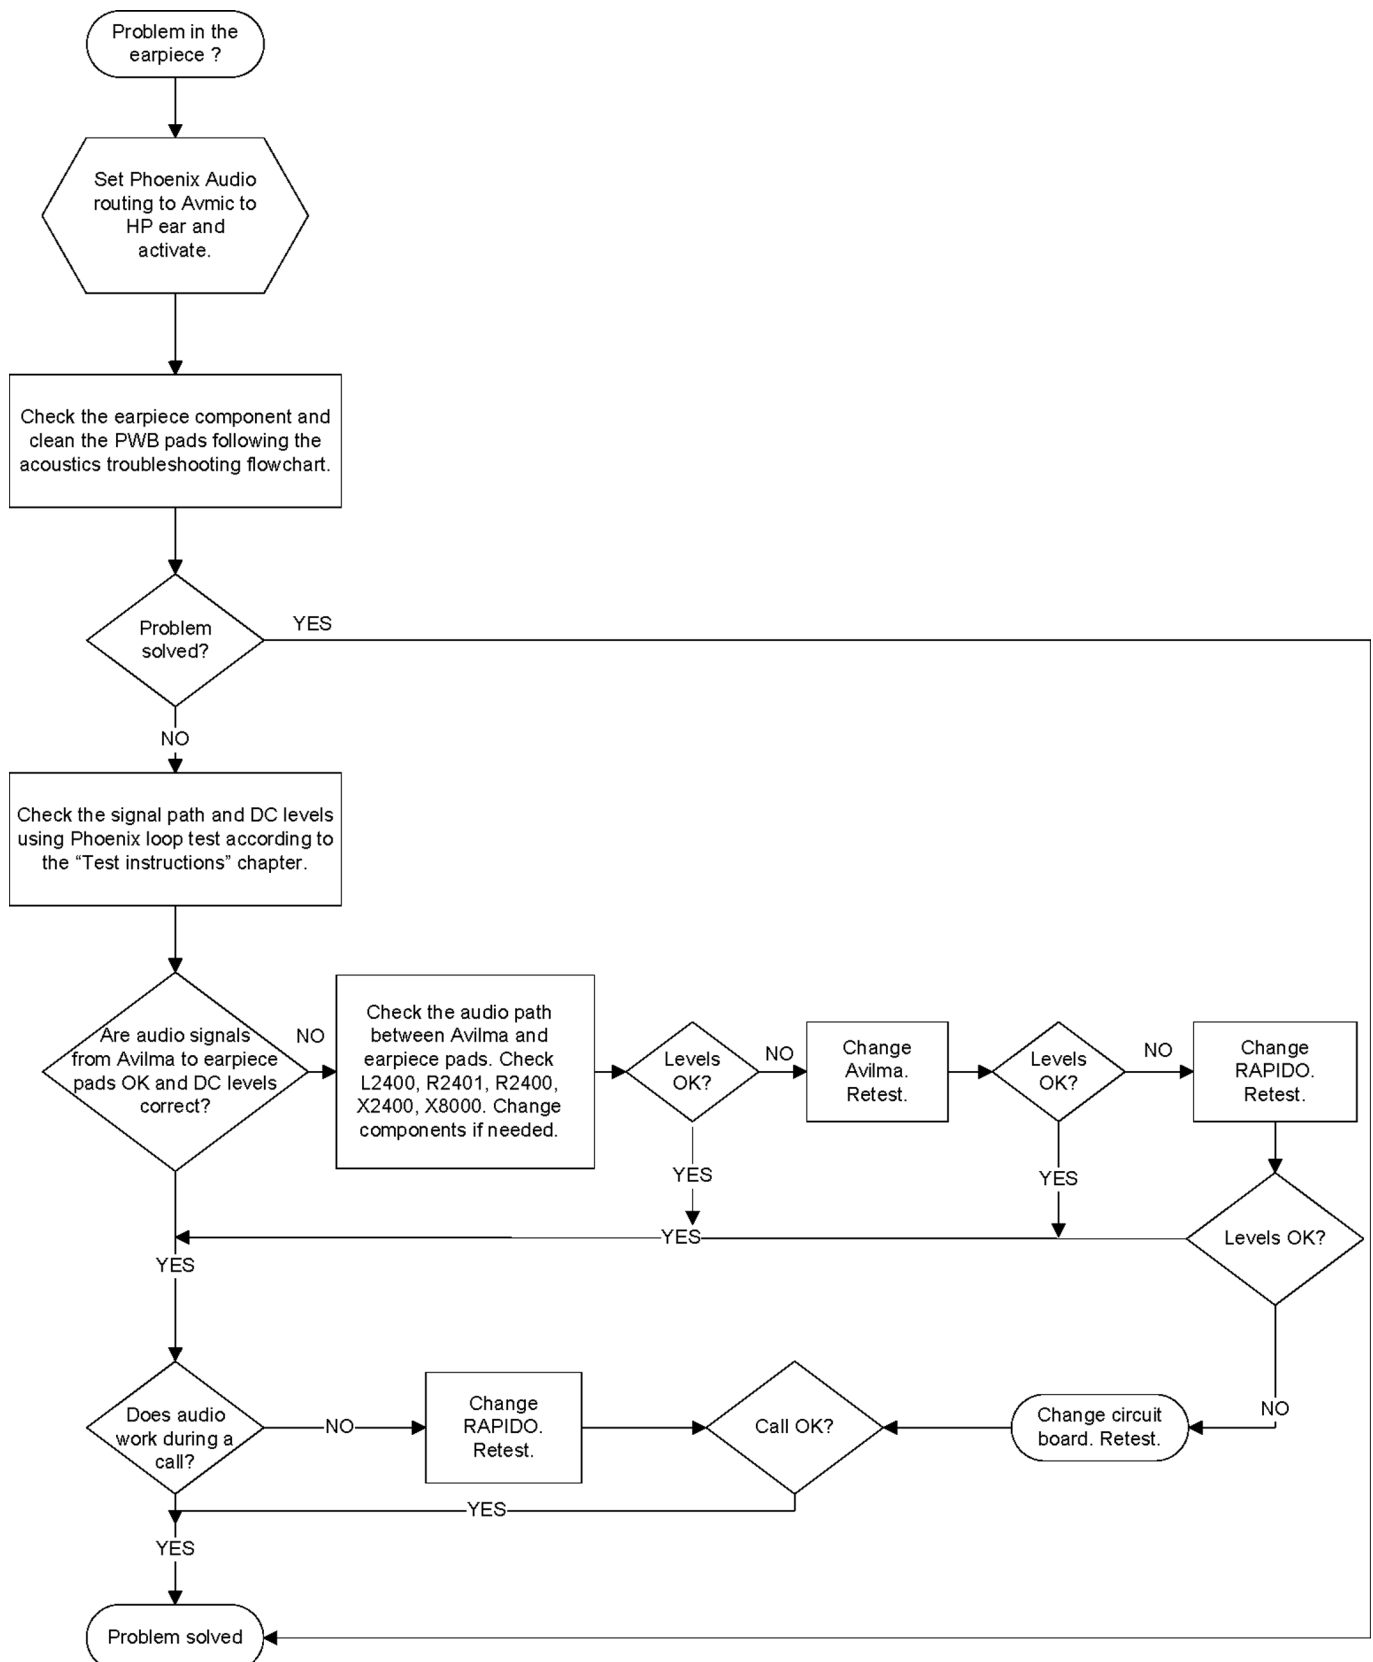

## Internal microphone troubleshooting


### Troubleshooting flow

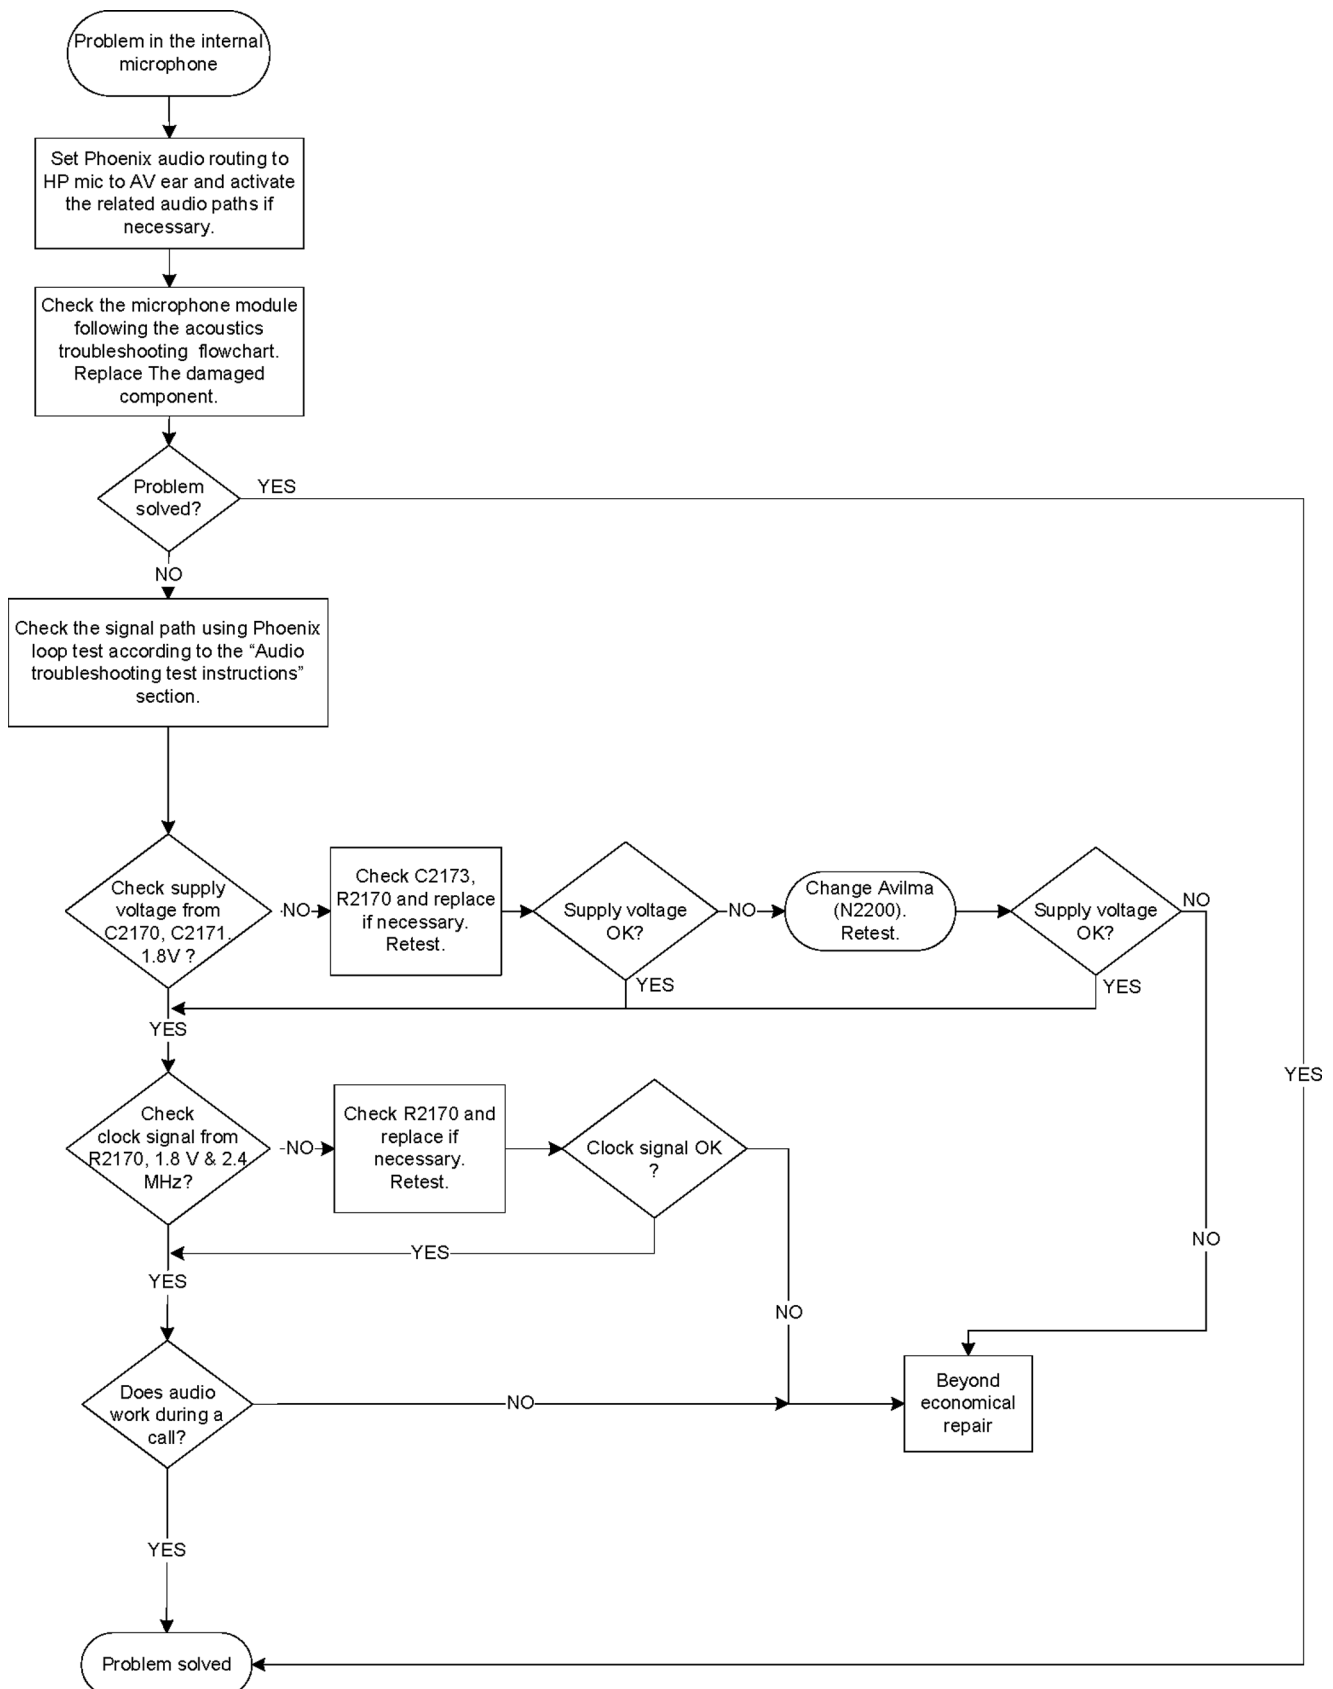




## Internal handsfree speaker troubleshooting

### Troubleshooting flow

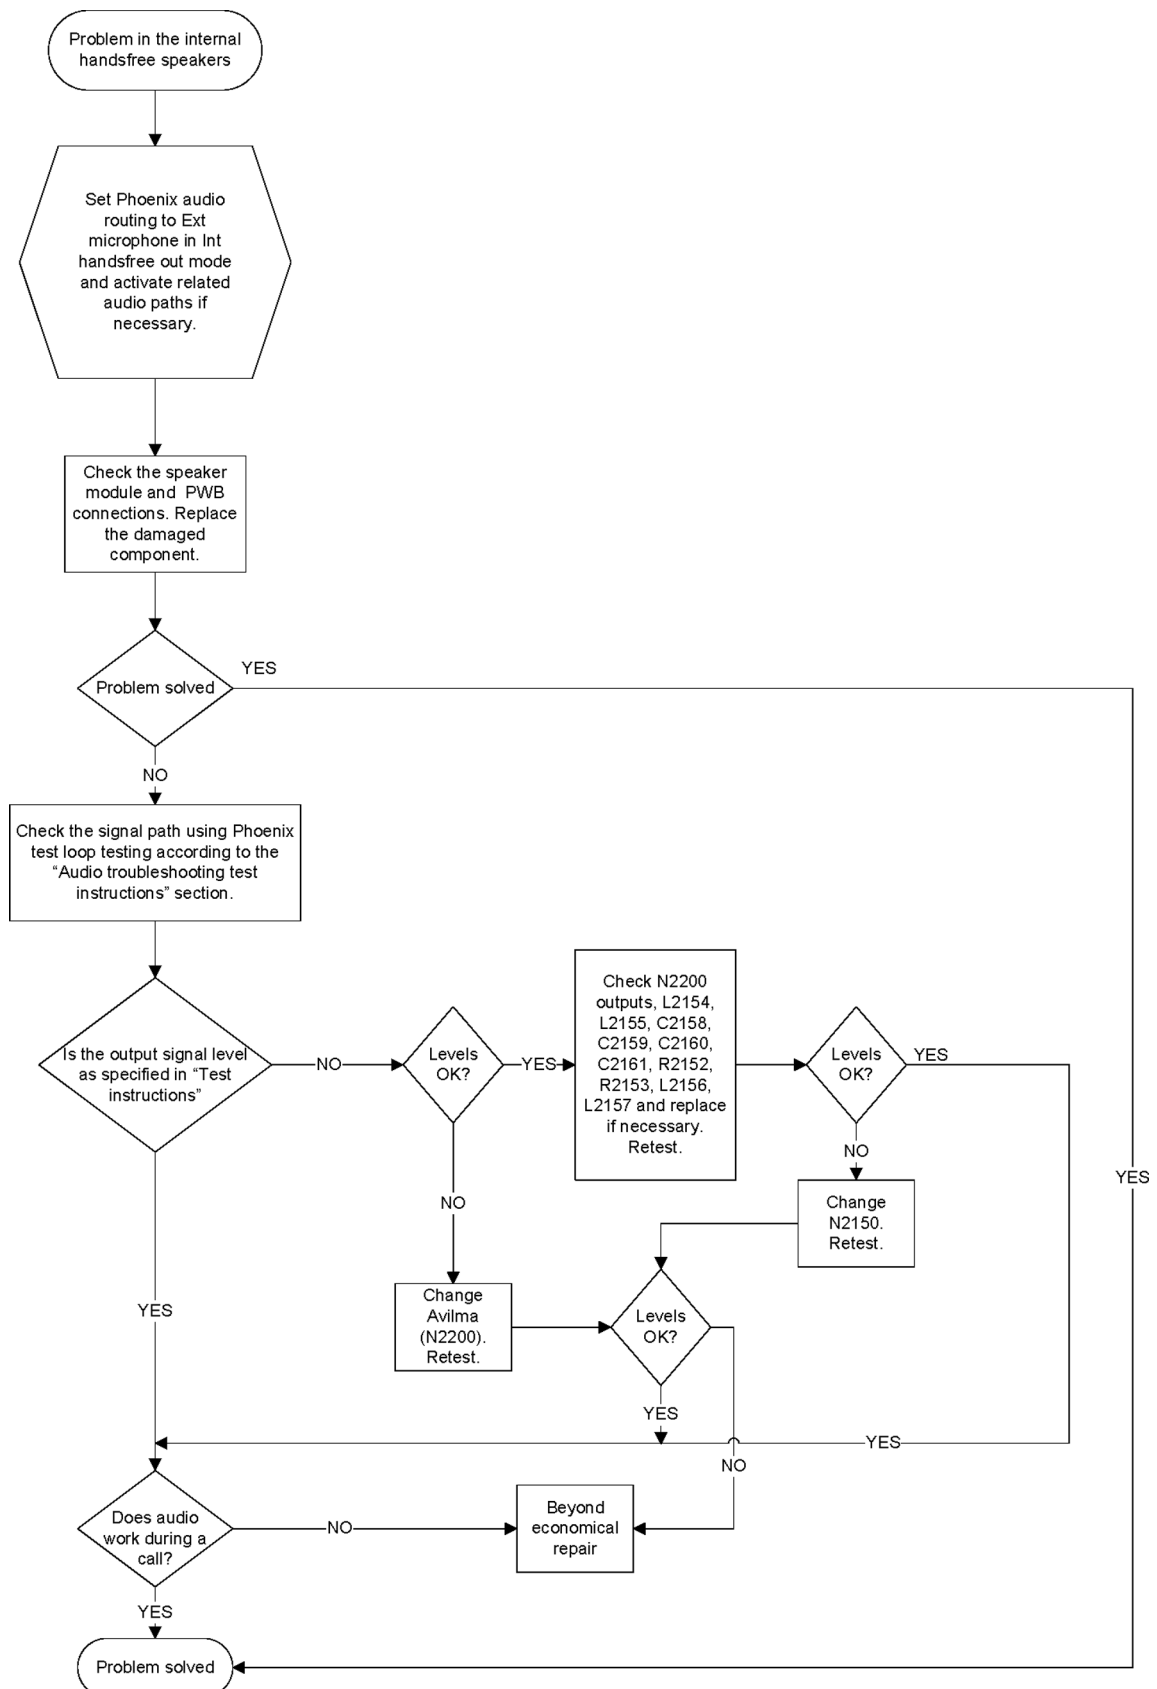


## External microphone troubleshooting

### Troubleshooting flow

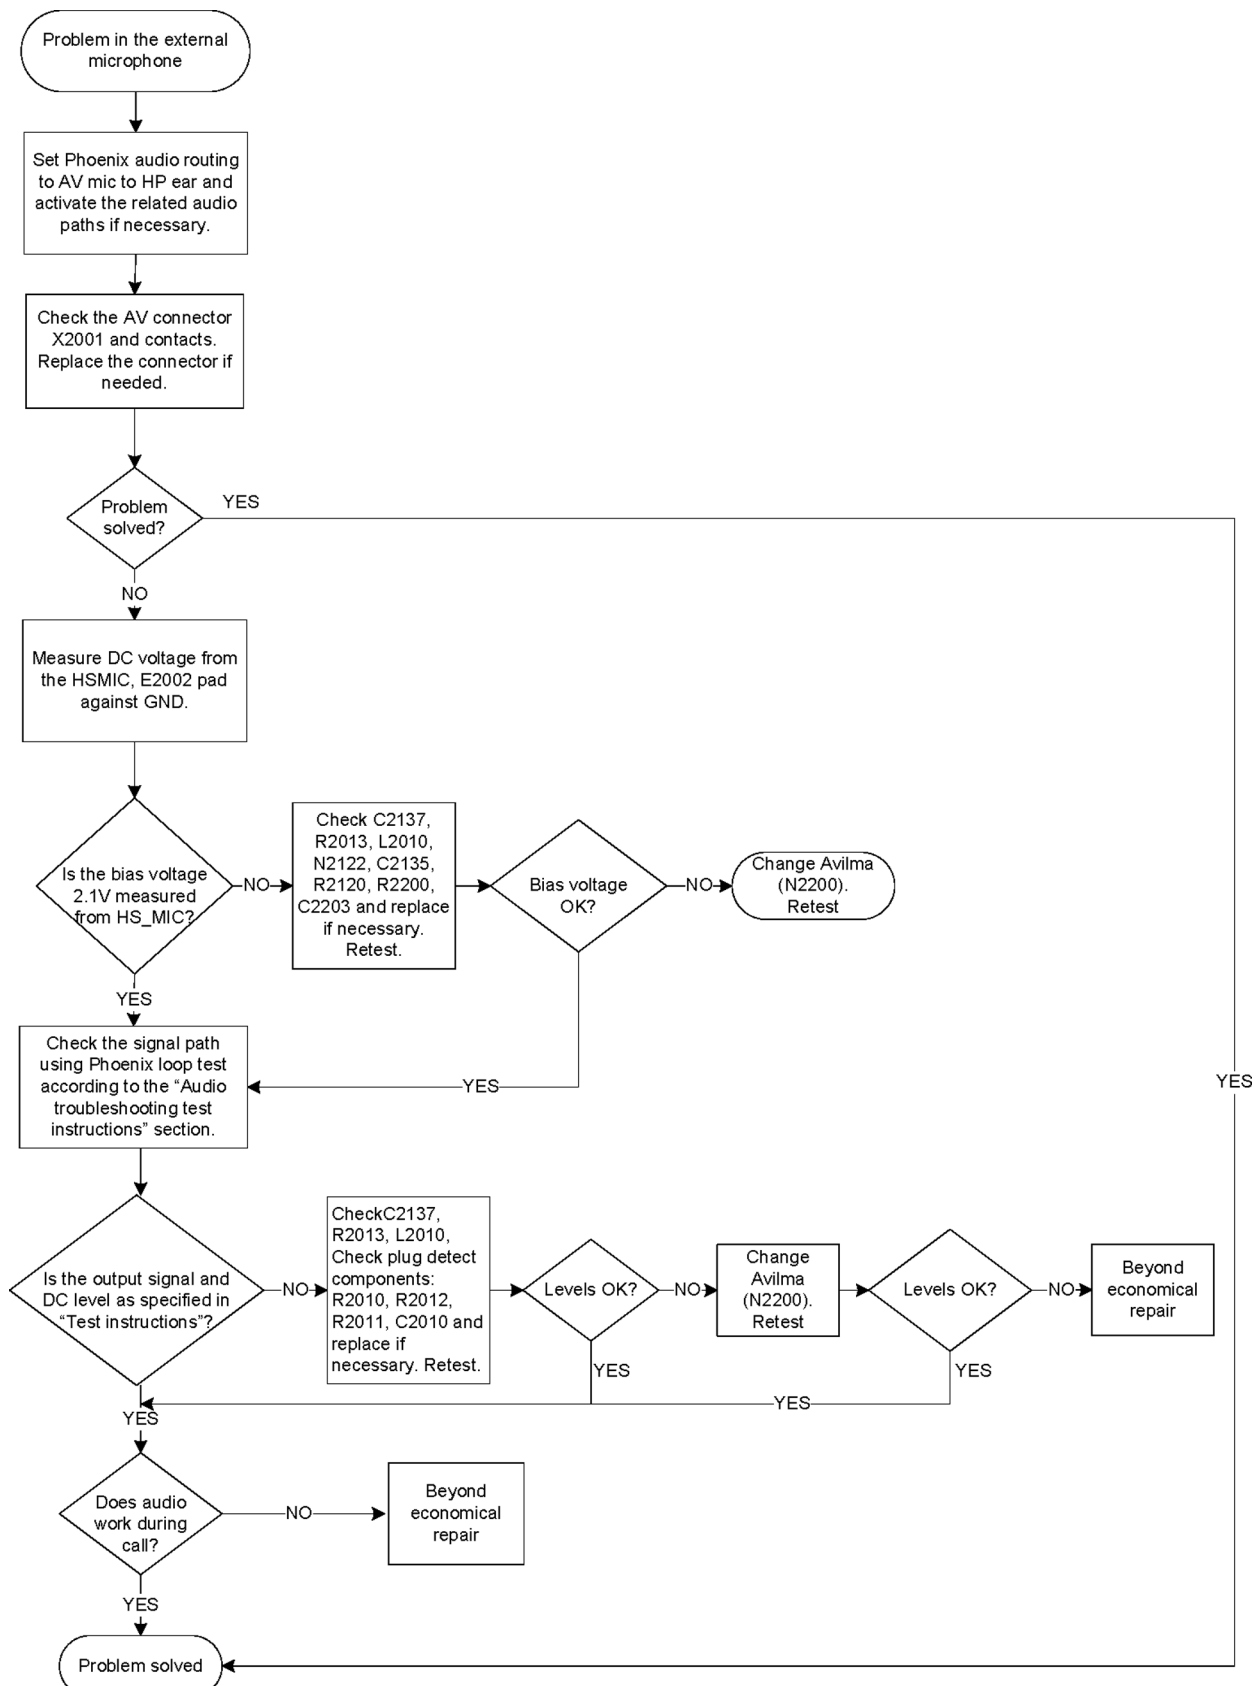

## External headset earpiece troubleshooting

### Troubleshooting flow

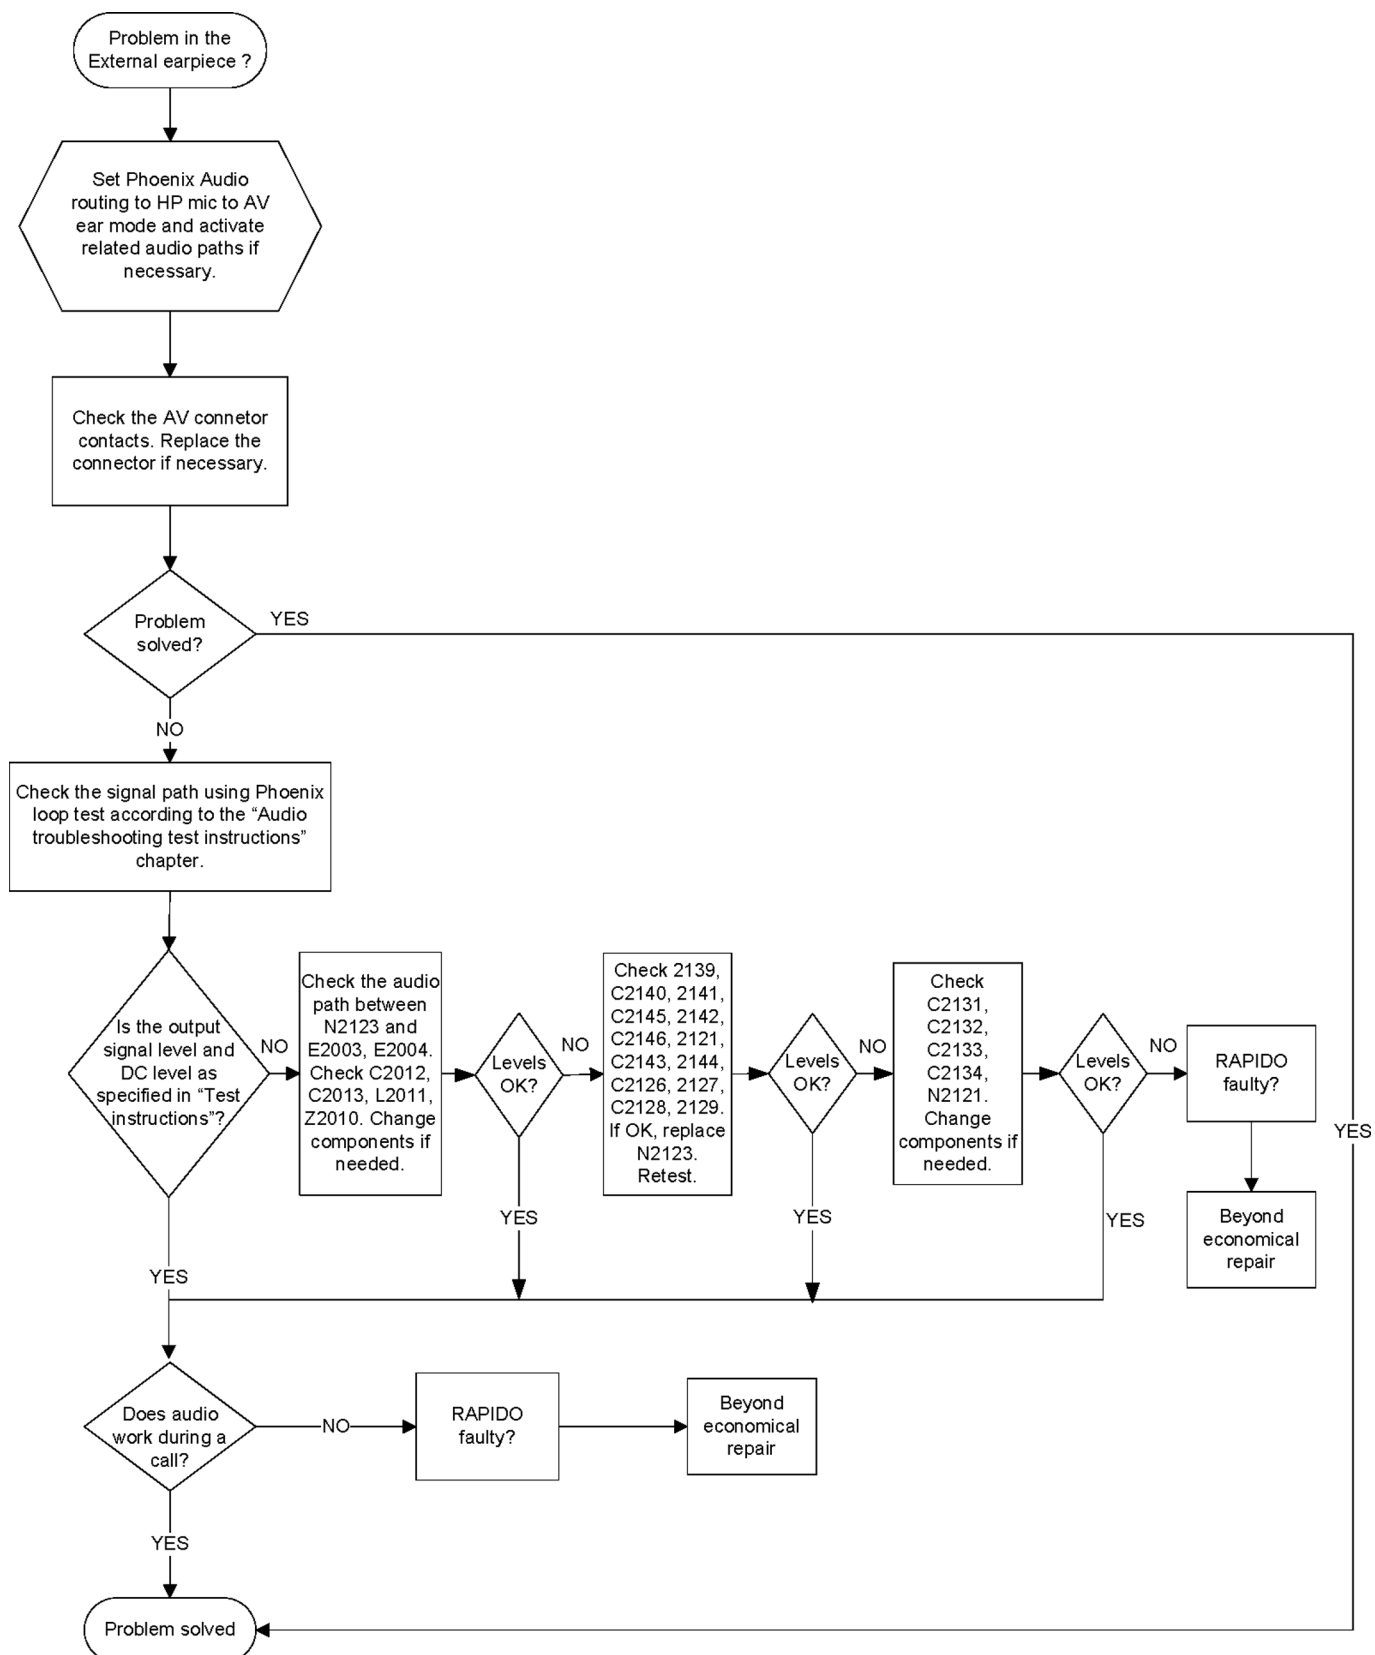

## Acoustics troubleshooting

### *Introduction to acoustics troubleshooting*


Acoustics design ensures that the sound is detected correctly with a microphone and properly radiated to the outside of the device by the speaker. The acoustics of the phone includes three basic systems: earpiece, Integrated Hands Free (IHF) and microphone.

The sound reproduced from the earpiece radiates through a single hole on the front cover (A-cover). The sound reproduced from the IHF speakers radiate through dual sound holes located at the top and bottom of the phone. The microphone is located around the 'space' key in the keymat of the phone.

For a correct functionality of the phone, all sound holes must be always open. When the phone is used, care must be taken not to close any of those holes with a hand or fingers. The phone should be dry and clean, and no objects must be located in such a way that they close any of the holes.


## *Earpiece troubleshooting*

### Troubleshooting flow

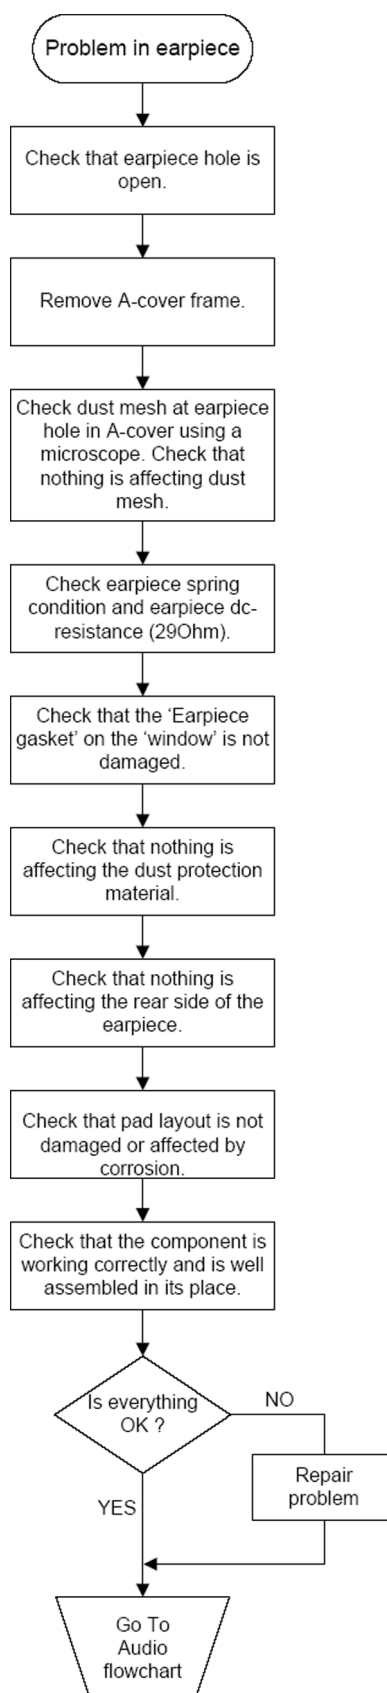


## *IHF troubleshooting*

### Troubleshooting flow

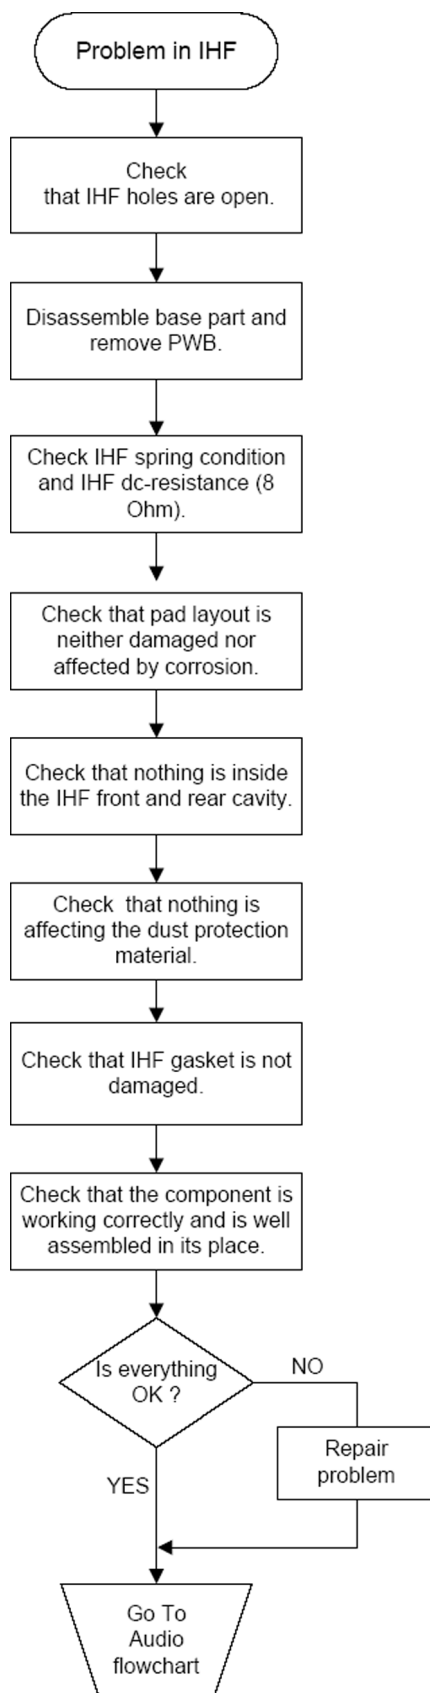

## *Microphone troubleshooting*

### Troubleshooting flow

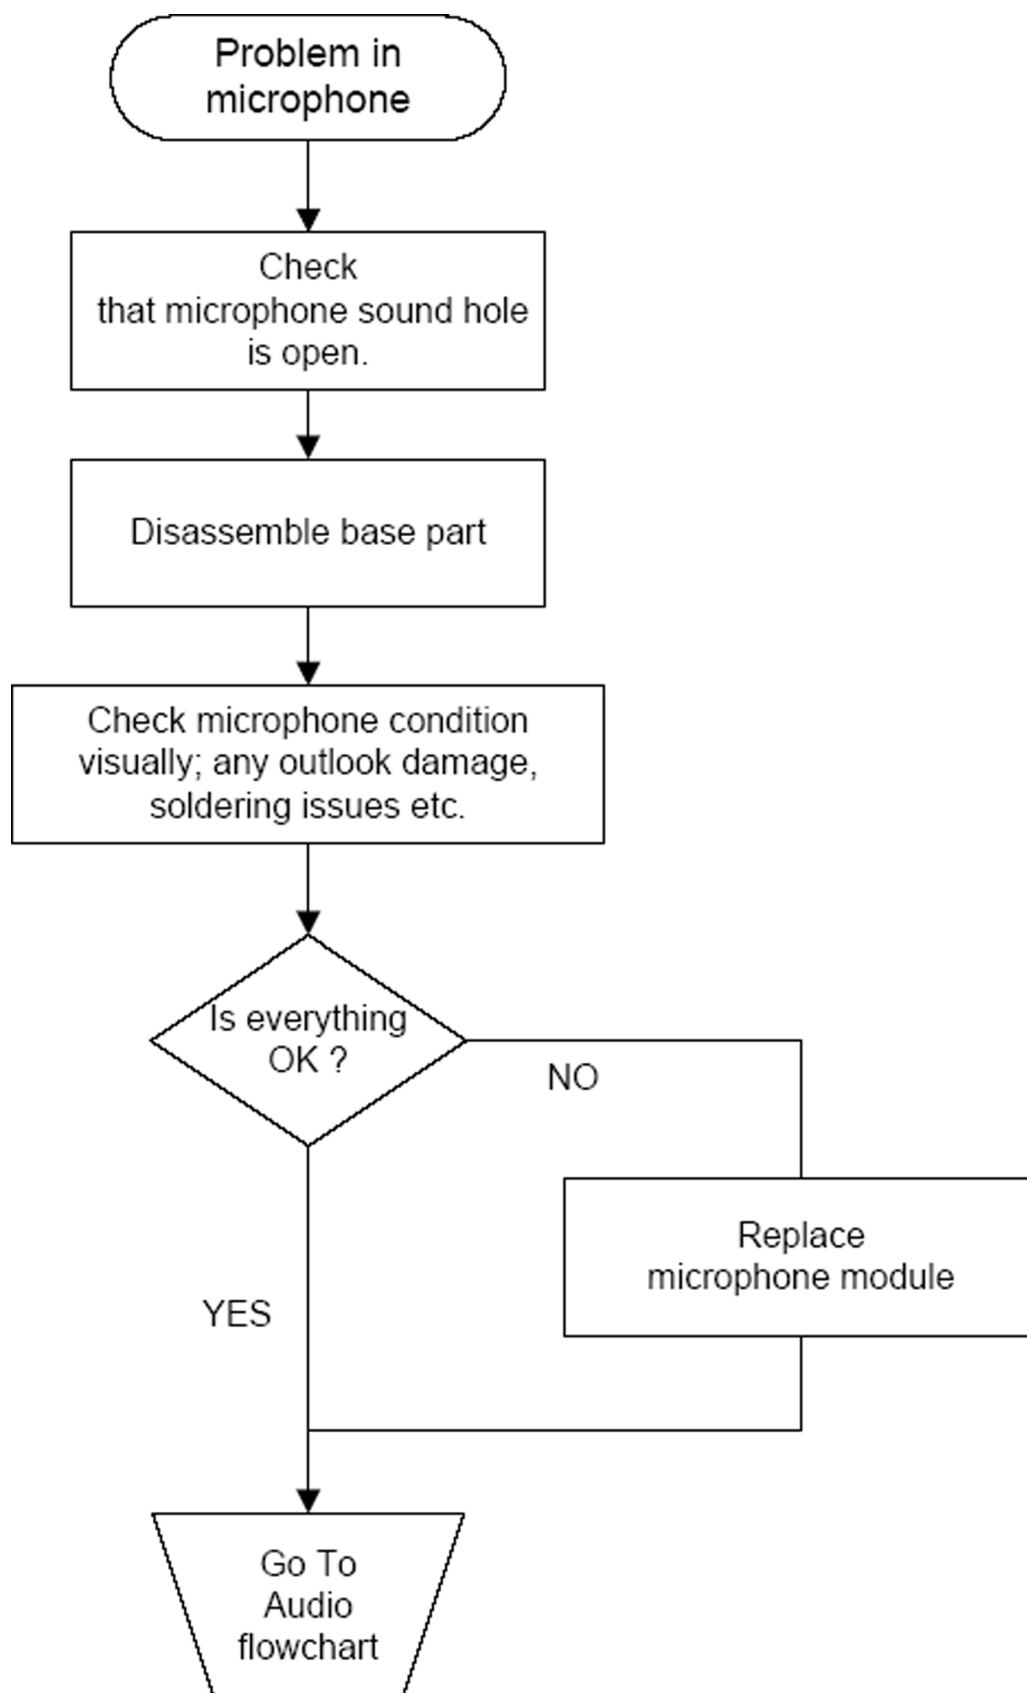

## ■ Baseband manual tuning guide

### Certificate restoring

#### Context

This procedure is performed when the device certificate is corrupted for some reason.

All tunings (RF & Baseband, UI) must be done after performing the certificate restoring procedure.

The procedure for certificate restoring is the following:

- Flash the phone with the latest available software using FPS-10 or FPS-21.  
**Note:** If the COMB0 memory of a phone is replaced, the ENO SW must be flashed first before performing the "normal" firmware flashing.
- Execute the certificate restore process in Phoenix.
- Tune the phone completely.  
**Note:** SX-4 smart card is needed.
- If the phone resets after certificate restoring, reflash the phone again.

Required equipment and setup:

- *Phoenix* service software v 2008.34.6 or newer.
- The latest phone model specific *Phoenix* data package.
- PKD-1 dongle
- SX-4 smart card (Enables testing and tuning features)
- External smart card reader
- Activated FPS-10 **OR** FPS-21 flash prommer
- Latest flash update package for FPS-10 or FPS-21 flash prommers
- CU-4 control unit
- USB cable from PC USB Port to CU-4 control unit
- Phone model specific adapter for CU-4 control unit
- PCS-1 cable to power CU-4 from external power supply
- XCS-4 modular cable between flash prommer and CU-4  
**Note:** CU-4 must be supplied with +12 V from an external power supply in all steps of certificate restoring.

#### Steps

1. Program the phone software.  
**Note:** If the COMB0 memory of a phone is replaced, the ENO SW must be flashed first before performing the "normal" firmware flashing.
2. Execute the certificate restore process in Phoenix.

#### Next actions

After a successful rewrite, you must retune the phone completely by using *Phoenix* tuning functions.

**Important:** Perform all tunings: RF, BB, and UI.



## Energy management calibration

### Prerequisites

Energy Management (EM) calibration is performed to calibrate the setting (gain and offset) of AD converters in several channels (that is, **battery voltage**, **BSI**, **battery current**) to get an accurate AD conversion result.

Hardware setup:

- An external power supply is needed.
- Supply 12V DC from an external power supply to CU-4 to power up the phone.
- The phone must be connected to a CU-4 control unit with a product-specific flash adapter.

### Steps

1. Place the phone to the docking station adapter (CU-4 is connected to the adapter).
2. Start *Phoenix* service software.
3. Choose **File** → **Scan Product**.
4. Choose **Tuning** → **Energy Management Calibration**.
5. To show the current values in the phone memory, click **Read**, and check that communication between the phone and CU-4 works.
6. Check that the **CU-4 used** check box is checked.
7. Select the item(s) to be calibrated.

**Note:** ADC calibration has to be performed before other item(s). However, if all calibrations are selected at the same time, there is no need to perform the ADC calibration first.

8. Click **Calibrate**.

The calibration of the selected item(s) is carried out automatically.

The candidates for the new calibration values are shown in the *Calculated values* column. If the new calibration values seem to be acceptable (please refer to the following "Calibration value limits" table), click **Write** to store the new calibration values to the phone permanent memory.

Table 9 Calibration value limits

Parameter	Min.	Max.
ADC Offset	-20	20
ADC Gain	12000	14000
BSI Gain	1100	1300
VBAT Offset	2400	2650
VBAT Gain	19000	23000
VCHAR Gain	N/A	N/A
IBAT (ICal) Gain	9000	11000

9. Click **Read**, and confirm that the new calibration values are stored in the phone memory correctly. If the values are not stored to the phone memory, click **Write** and/or repeat the procedure again.
10. To end the procedure, close the *Energy Management Calibration* window.

(This page left intentionally blank.)

## 4 — RF Troubleshooting

(This page left intentionally blank.)

## Table of Contents

General RF troubleshooting .....	4-5
Introduction to RF troubleshooting .....	4-5
RF key components .....	4-5
Auto tuning .....	4-6
Introduction to RF tunings .....	4-6
Auto tuning .....	4-6
Self test troubleshooting .....	4-7
Troubleshooting with RF self tests .....	4-7
Receiver troubleshooting .....	4-20
Introduction to receiver (RX) troubleshooting .....	4-20
GSM RX chain activation for manual measurements/GSM RSSI measurement .....	4-20
GSM receiver troubleshooting flowchart .....	4-22
WCDMA RX chain activation for manual measurement .....	4-22
WCDMA RSSI measurement .....	4-23
WCDMA receiver troubleshooting flowchart .....	4-25
Transmitter troubleshooting .....	4-25
General instructions for transmitter (TX) troubleshooting .....	4-25
GSM transmitter troubleshooting .....	4-26
WCDMA transmitter troubleshooting .....	4-28
Antenna troubleshooting .....	4-30
Antenna troubleshooting .....	4-30

## List of Figures

Figure 39 RF key components .....	4-6
Figure 40 Phoenix GSM RSSI reading window .....	4-21
Figure 41 Phoenix WCDMA RX Control window .....	4-23
Figure 42 WCDMA RX generator settings .....	4-24
Figure 43 Phoenix WCDMA RX power measurement window .....	4-24
Figure 44 Phoenix GSM RF controls window .....	4-26
Figure 45 Antenna contacts .....	4-30
Figure 46 Antenna contact clips and matching coil on the PWB .....	4-30

(This page left intentionally blank.)

## ■ General RF troubleshooting

### Introduction to RF troubleshooting

#### Most RF semiconductors are static discharge sensitive

ESD protection must be applied during repair (ground straps and ESD soldering irons).

#### Measuring equipment

All measurements should be done using:

- An oscilloscope for low frequency and DC measurements. Recommended probe: 10:1, 10Mohm//8pF.
- A radio communication tester including RF generator and spectrum analyser, for example Rohde & Schwarz CMU200. (Alternatively a spectrum analyser and an RF generator can be used. Some tests in this guide are not possible to perform if this solution is chosen).

**Note:** A mobile phone WCDMA transmitter should never be tested with full TX power (it is only possible to perform the measurements in a good RF-shielded room). Even low power WCDMA transmitters may disturb nearby WCDMA networks and cause problems to 3G cellular phone communication in a wide area.

**Note:** All communication Test Set Screen dumps are from CMU200. Other testers are different.

**Note:** All measurements with an RF coupler should be performed in an RF-shielded environment because nearby base stations can disturb sensitive receiver measurements. If there is no possibility to use RF shielded environment, testing at frequencies of nearby base stations should be avoided.

#### Level of repair

The scope of this guideline is to verify functionality of the cellular RF block without removing RF shield.

#### RF key components

The figure below shows the key components of RM-612 and RM-624.

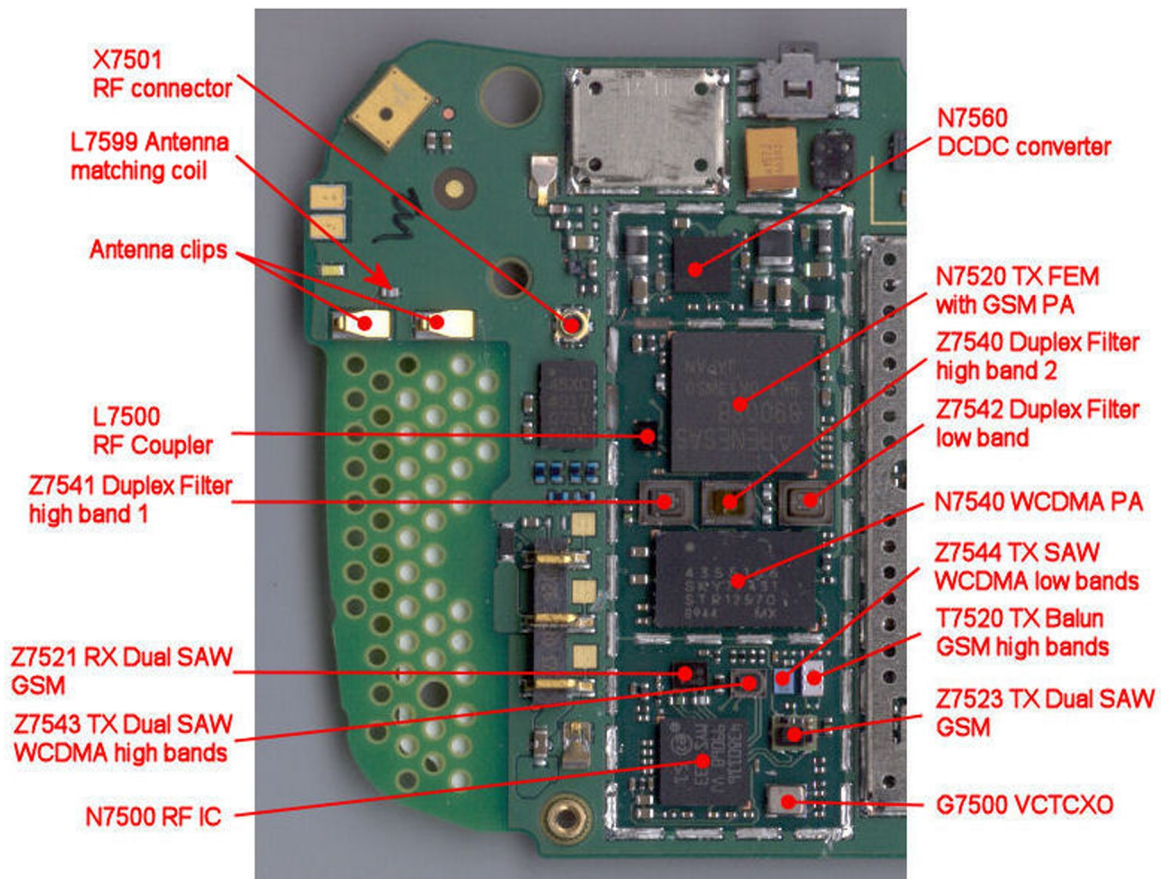


Figure 39 RF key components

## ■ Auto tuning

### Introduction to RF tunings

RF tuning is always performed with the help of a product-specific module jig, never with an RF coupler. Using an RF coupler in the tuning phase will cause a complete mistuning of the RF part.

### Cable and adapter losses

RF cables and adapters have some losses. They have to be taken into account when the phone is tuned. As all RF losses are frequency dependent, the user has to act very carefully and understand the measurement setup. For RF attenuations of the module jig and RF cable, please refer to the Service Tools section.

### Auto tuning

This phone can be tuned automatically.

Auto tuning is designed to align the phone's RF part easier and faster. It performs calibrations, tunings and measurements of RX and TX. The results are displayed and logged in a result file, if initiated.

### Hardware set up

For hardware requirements for auto tuning, please refer to [Service concept for RF testing and RF/BB tuning \(page 4–41\)](#).

### Phoenix preparations

Install the phone specific data package, for example `_dp_1.78_sw_sh3.26.exe`. This defines phone specific settings.



## Auto tuning procedure

- 1 Make sure the phone (in the jig) is connected to the equipment. Otherwise some menus will not be shown in Phoenix.
- 2 To go to autotune, select **Tuning (Alt-U)** → **Auto-Tune (Alt-A)** from the menu.
- 3 Start autotuning by clicking the *Tune* button.

## ■ Self test troubleshooting

### Troubleshooting with RF self tests

#### Context

Vapaus (N7500) RF ASIC contains test structures that can be used to detect certain RF related errors. In order to use these self tests most efficient way, it is very important that the tests are performed in a certain order, or at least that the error data is analysed in this order. The tests are designed so that by going through them in this order it is easy to find the problem component without any redundant checks. The flowchart presented in this document is based on that idea. So, if RFBUS fails, there is no need to spend time wondering why there is no power at TX, and so on.


The testing order recommended and used in this troubleshooting guide is the following:

- 1 ST\_CDSP\_RF\_BB\_IF test (86)
  - Tests the functionality of the BB/Vapaus serial interface & Reset lines.
  - If this test fails, it means that there is a problem in programming of the N7500 and all of the following tests can not give correct data.
- 2 ST\_CDSP\_RF\_SUPPLY\_TEST (83)
  - Tests the functionality of N7500 bias block, regulators, reference voltage line and, supply connections.
  - If these fail, all other N7500 tests can/will fail.
- 3 ST\_CDSP\_TX\_IQ\_TEST (85)
  - Test checks that the TXIQ lines between BB and N7500 are properly connected.
  - If this fails also power tests and RXIQ loopback will fail.
- 4 ST\_CDSP\_TXC\_DATA\_TEST (74)
  - This tests that the TXC line between AVILMAS (N2200) & Vapaus (N7500) is properly connected.
  - If this fails TX power tests will also fail.
- 5 ST\_CDSP\_RX\_PLL\_PHASE\_LOCK\_TEST (79)
  - Tests the functionality of RX PLL.
  - If this fails none of the RX related measurements can be trusted.
- 6 ST\_CDSP\_TX\_PLL\_PHASE\_LOCK\_TEST (80)
  - Tests the functionality of TX PLL.
  - If this fails the TX power tests will also fail.
- 7 ST\_CDSP\_TX\_WCDMA\_POWER\_TEST (75)
  - Checks the output power of the WCDMA transmitter.
- 8 ST\_CDSP\_RX\_IQ\_LOOPBACK (81)
  - Tests that the RXI lines and VREFCM line between BB and N7500 are connected.
- 9 ST\_CDSP\_TX\_GSM\_POWER\_TEST (77)
  - Checks the output power of the GSM transmitter.


To get the best out of these instructions you need to be have the valid schematics at hand, see Chapter 10 in this document.


## Troubleshooting flow


### Top level flowchart

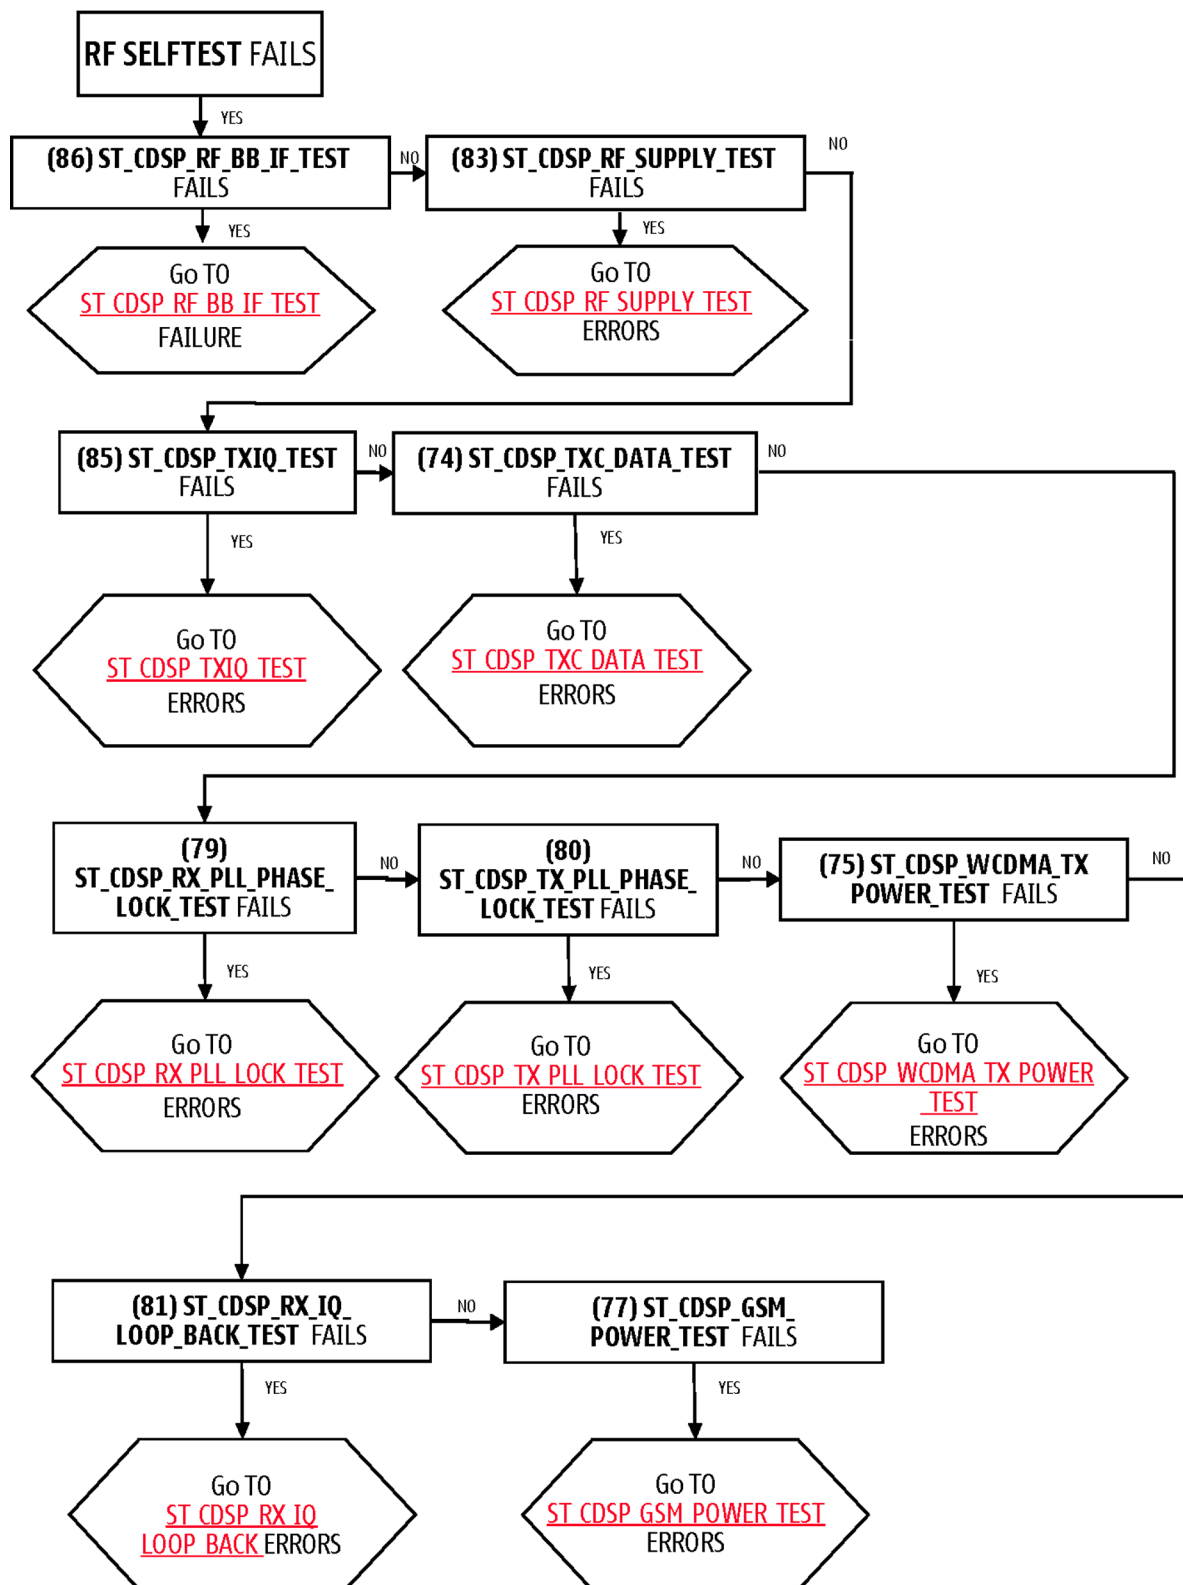



## Sub-level flowcharts

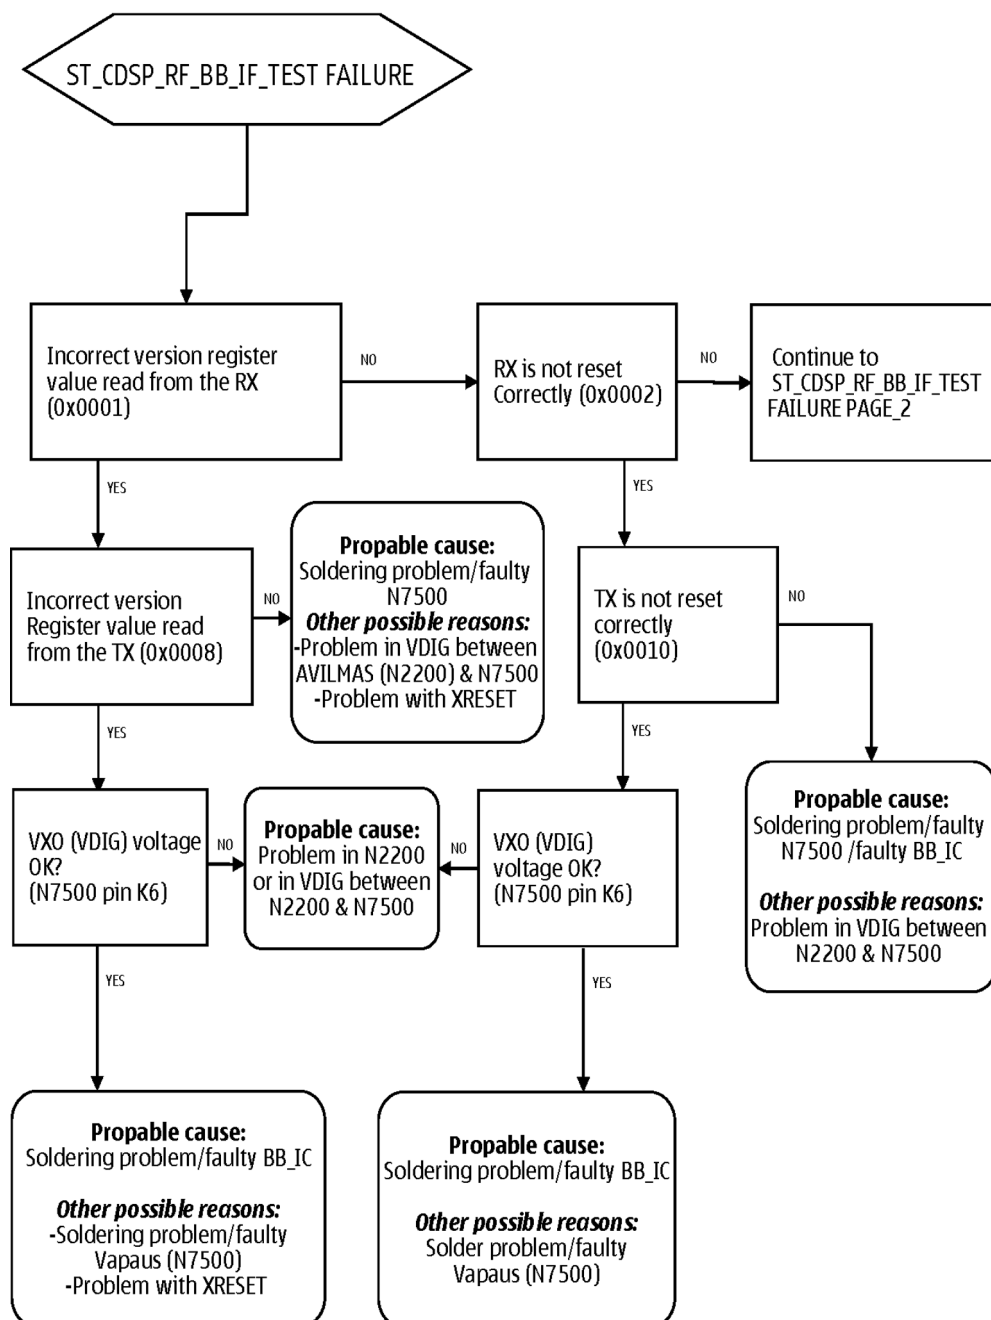

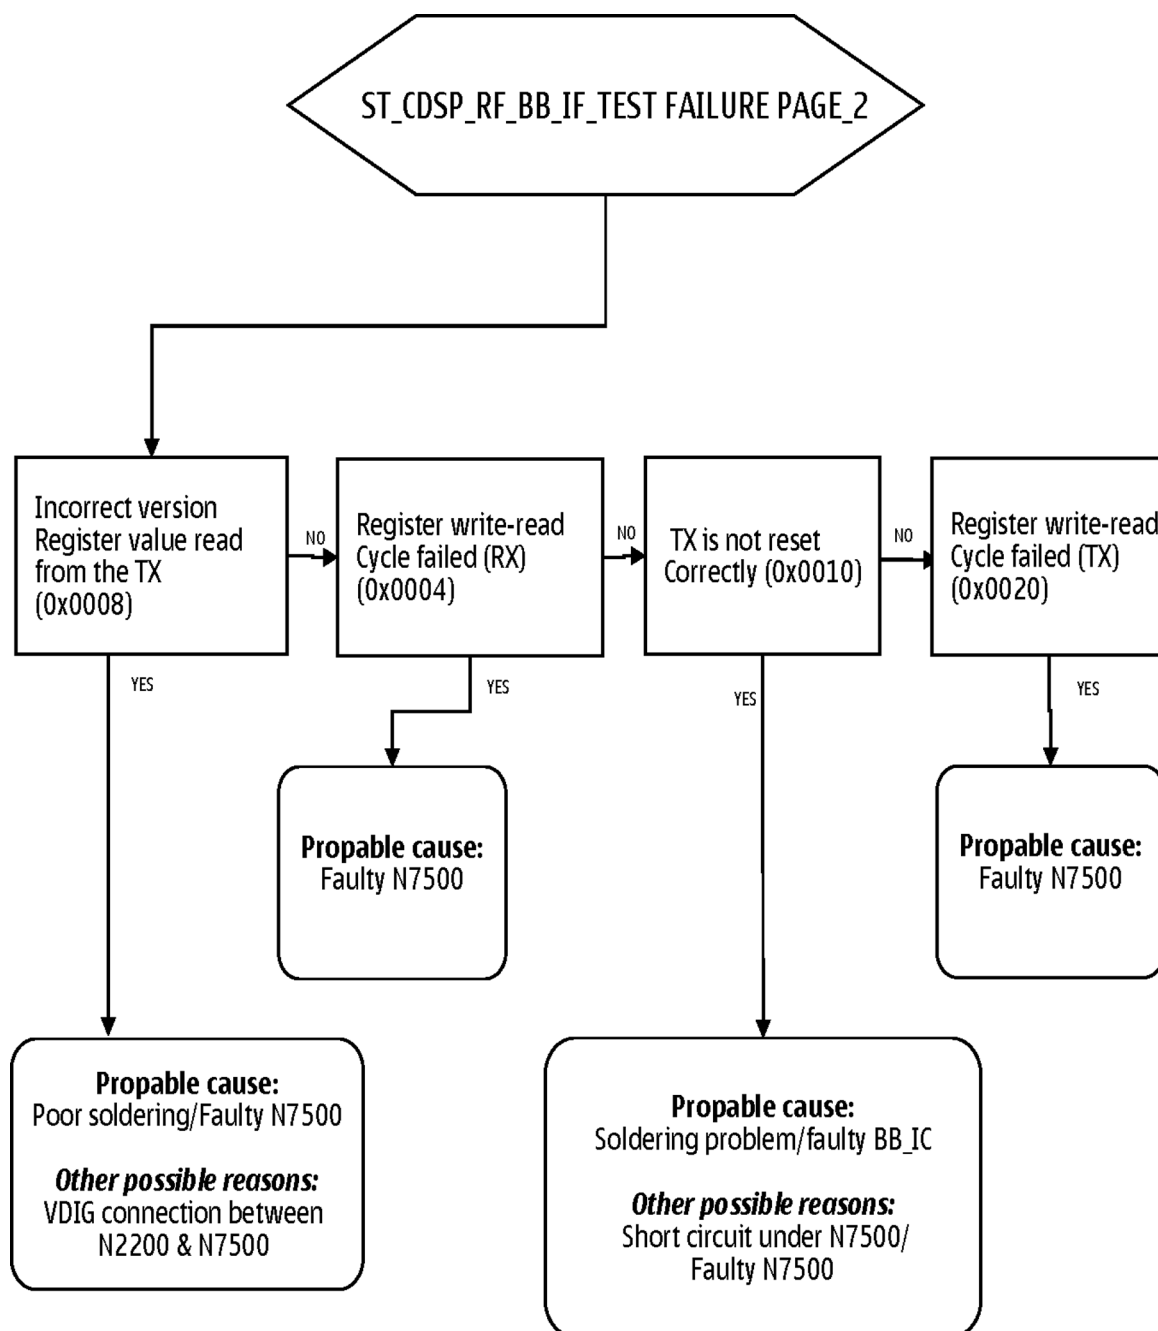


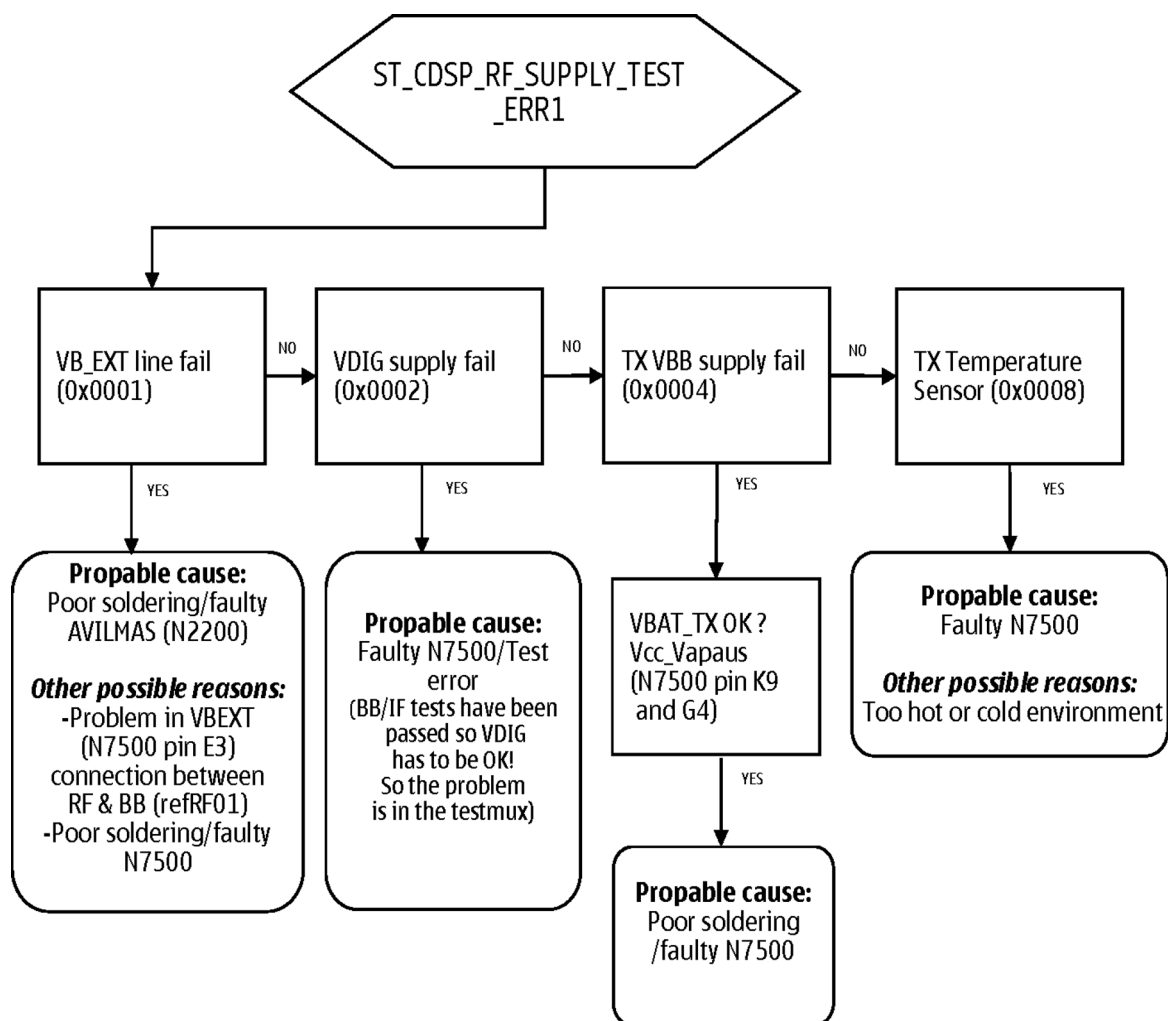


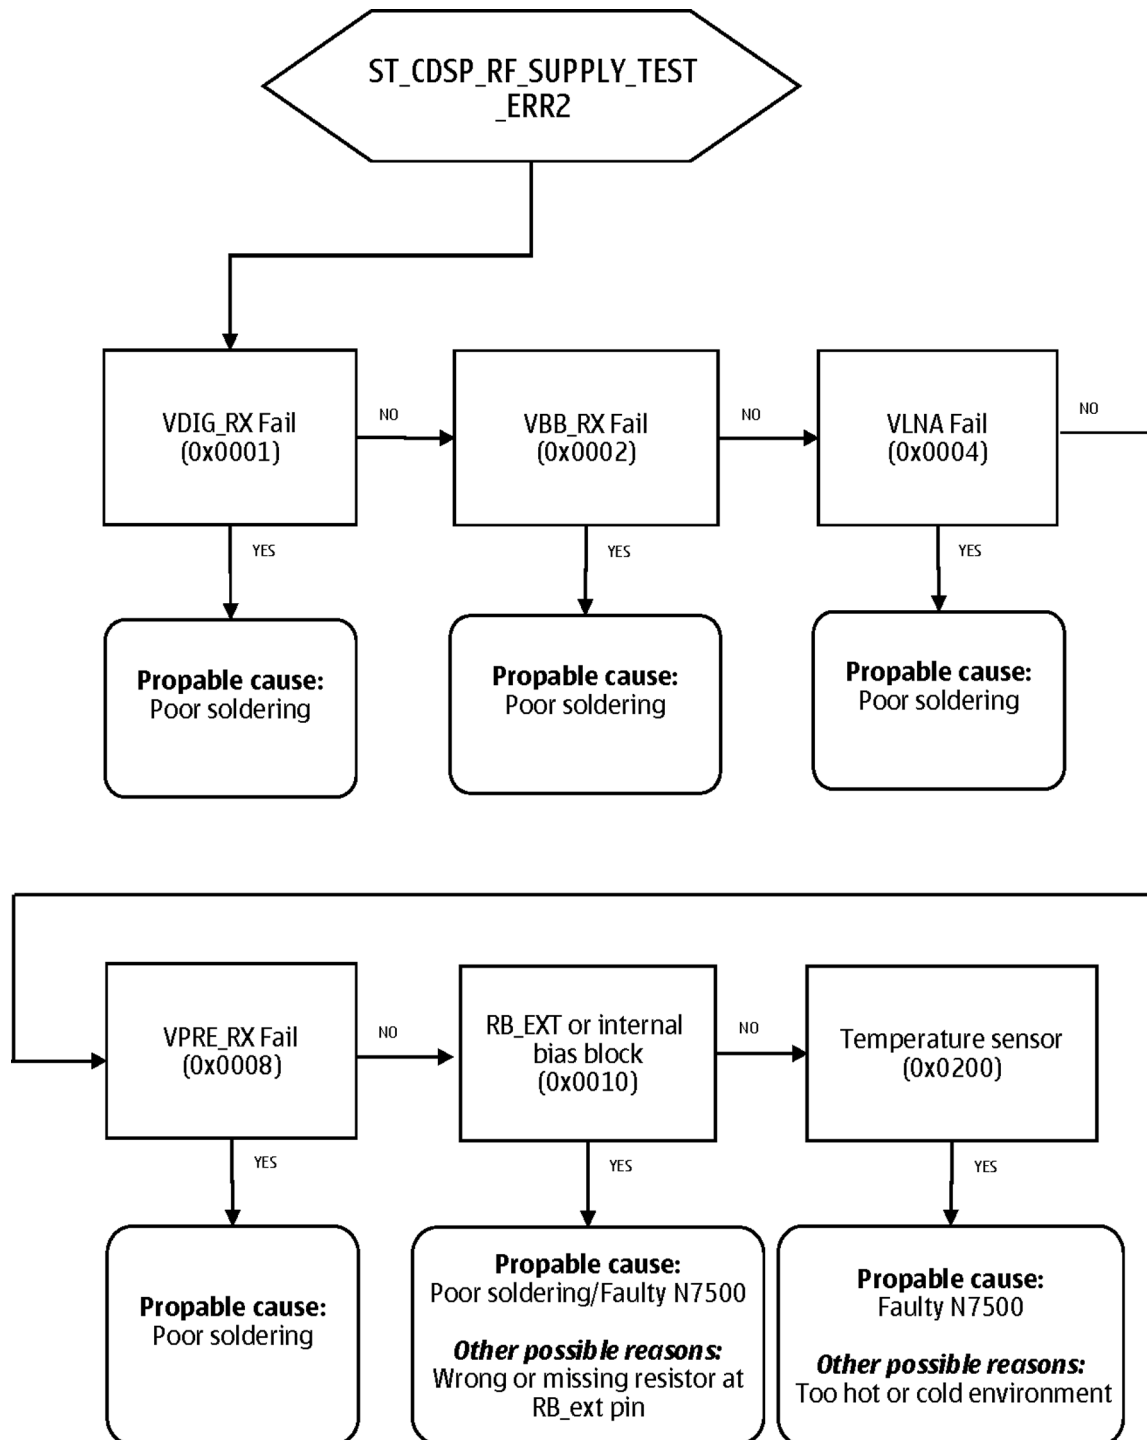


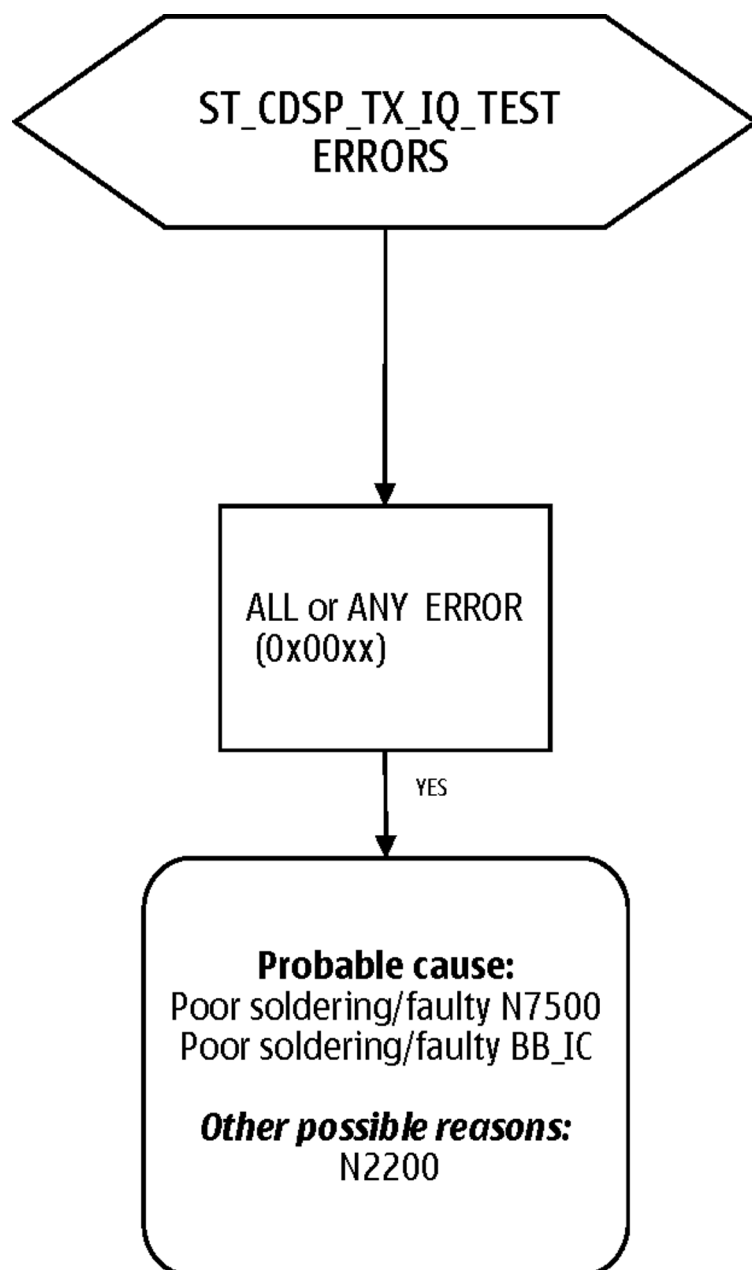





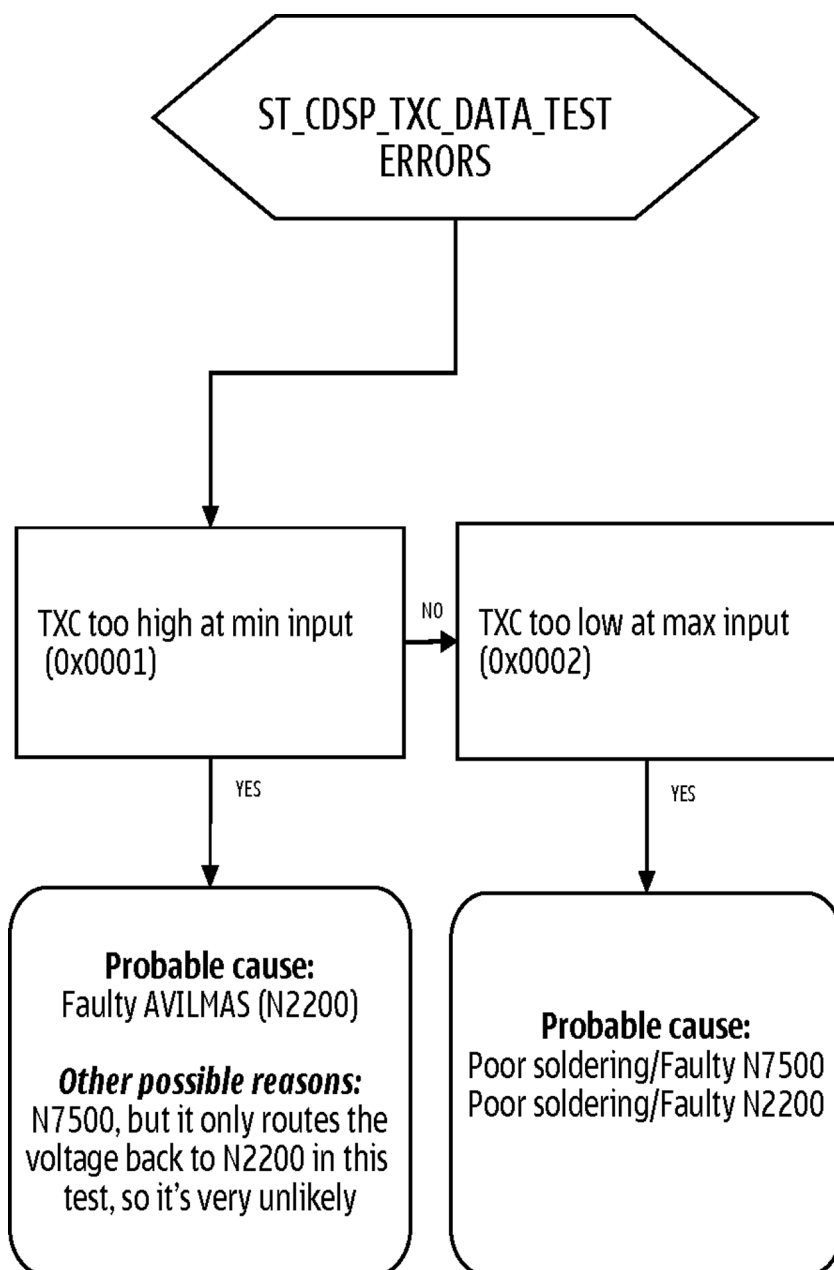


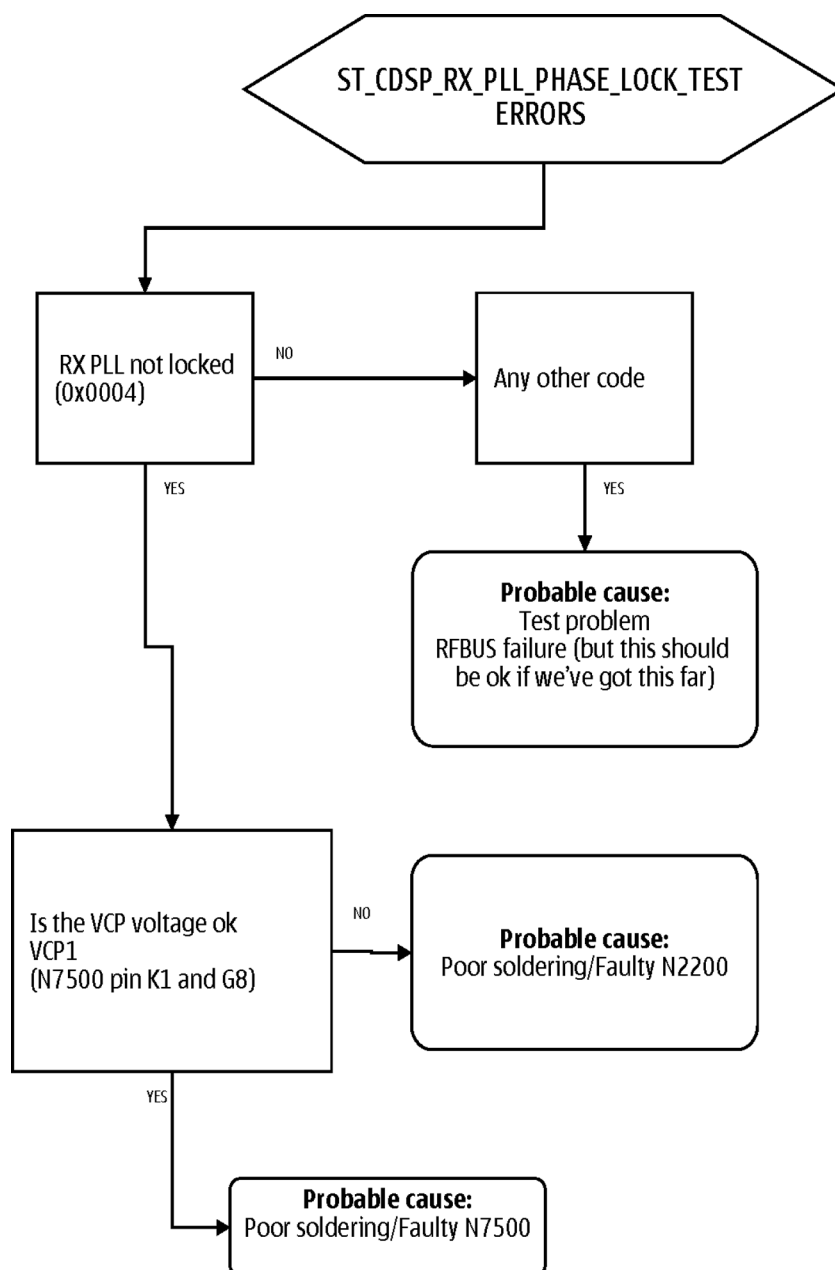

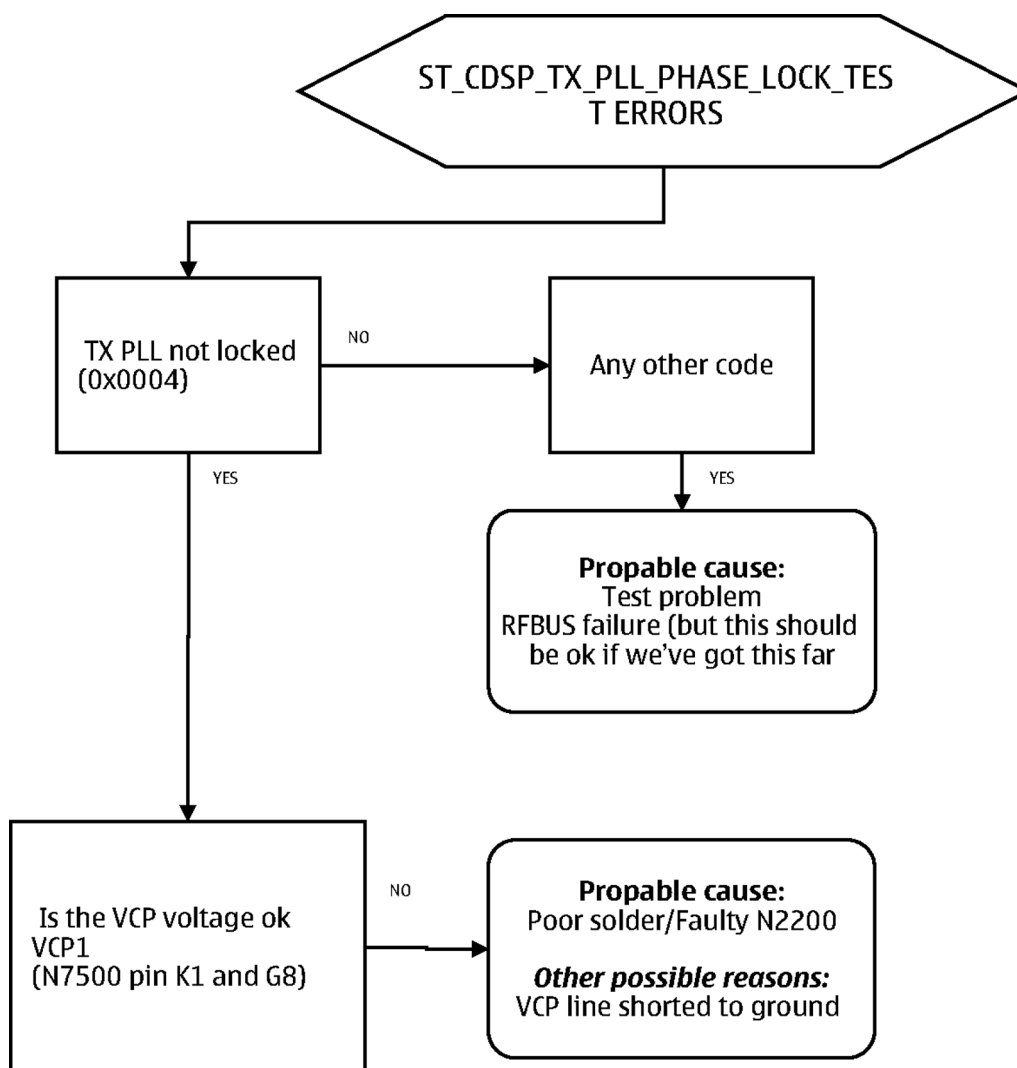

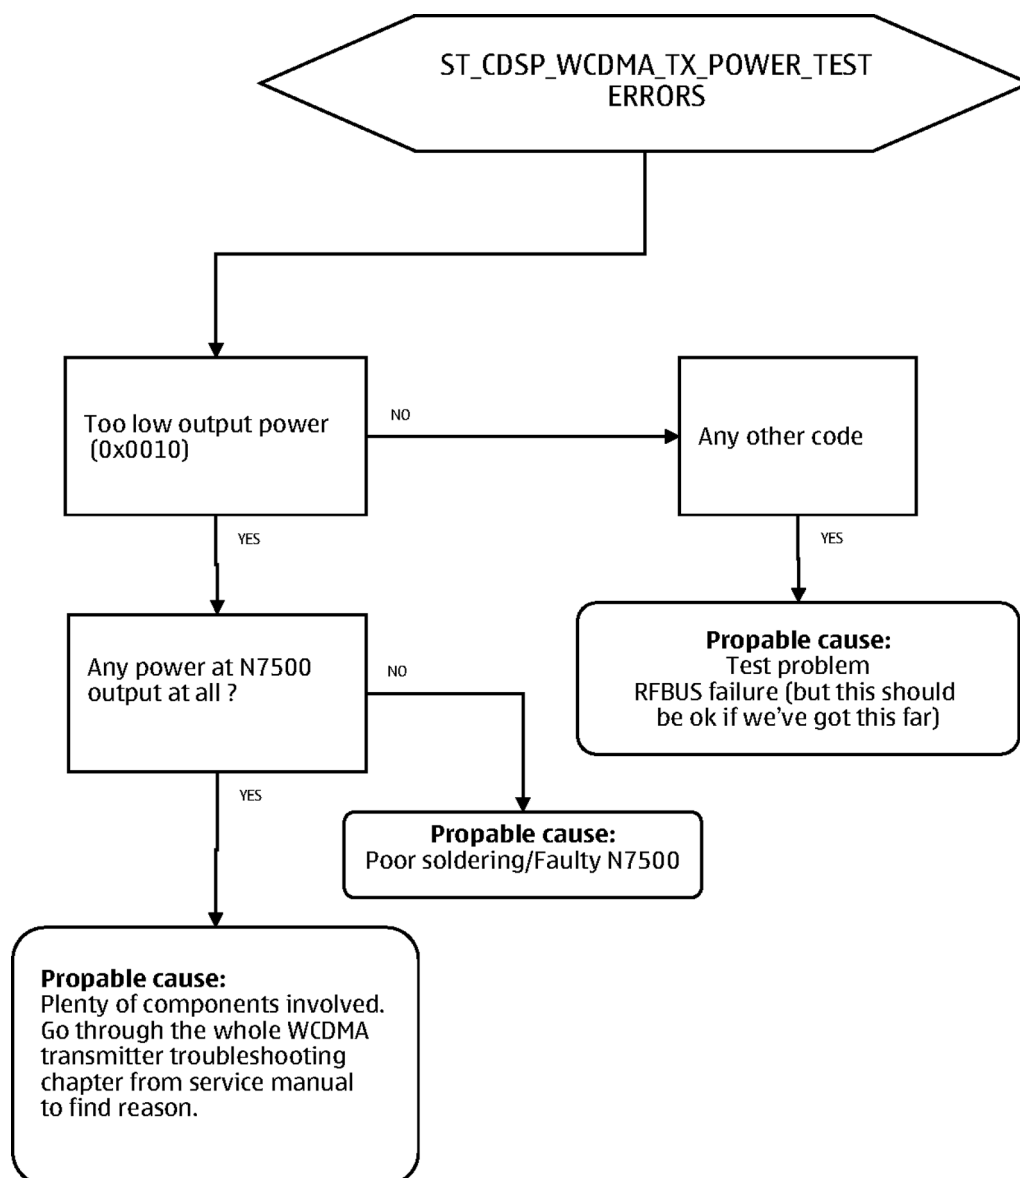

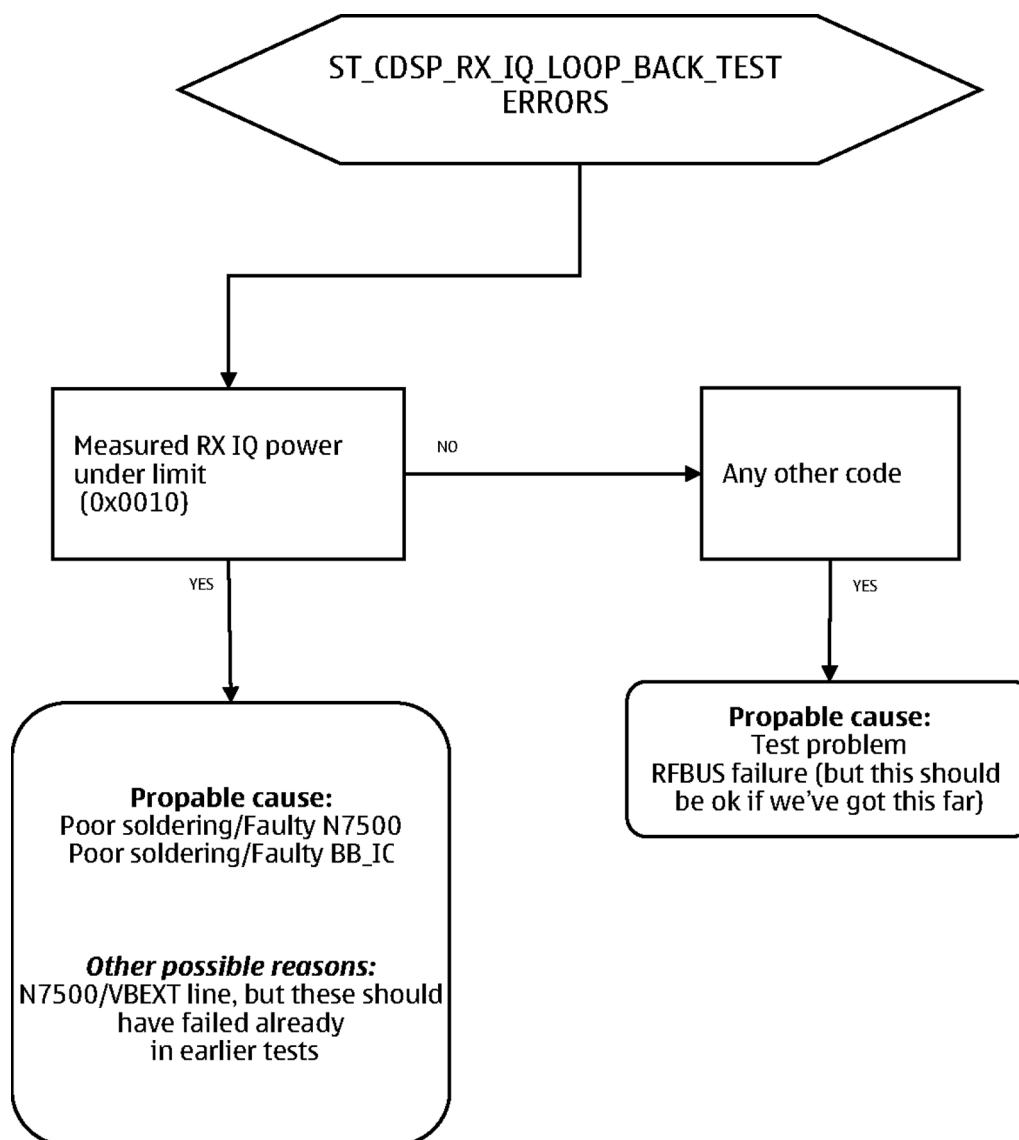

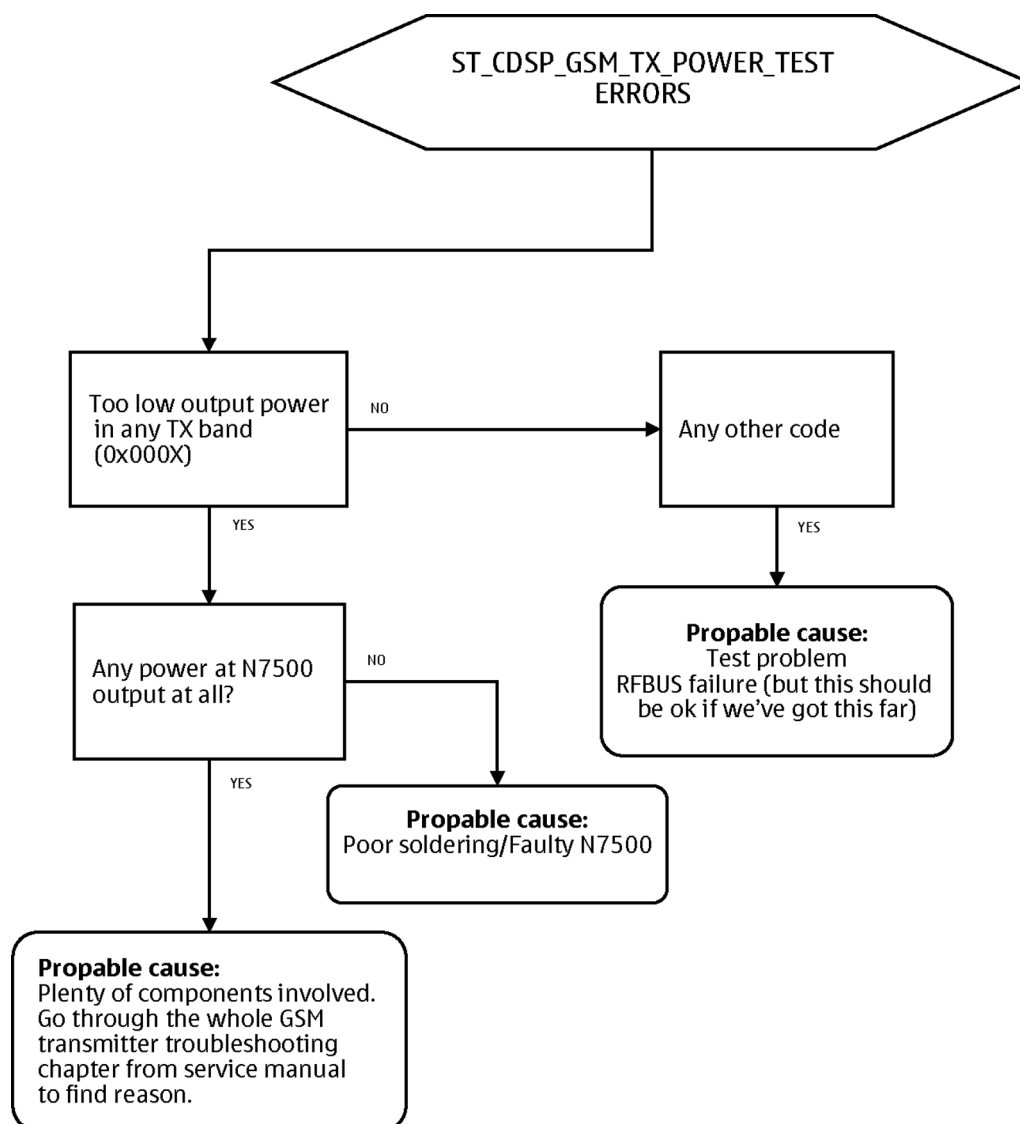

## ■ Receiver troubleshooting

### Introduction to receiver (RX) troubleshooting

RX can be tested by making a phone call or in local mode. For the local mode testing, use Phoenix service software.

The main RX troubleshooting measurement is RSSI reading. This test measures the signal strength of the received signal. For GSM RSSI measurements, see *GSM RX chain activation for manual measurements/GSM RSSI measurement*. For a similar test in WCDMA mode, see *WCDMA RSSI measurement*.

### GSM RX chain activation for manual measurements/GSM RSSI measurement

#### Prerequisites

Make the following settings in Phoenix service software:

Setting	GSM850	GSM900	GSM1800	GSM1900
Phoenix Channel	190	37	700	661

Setting	GSM850	GSM900	GSM1800	GSM1900
Signal generator to antenna connector	881.66771MHz	942.46771MHz	1842.86771MHz	1960.06771MHz
	(67.71kHz offset)	(67.71kHz offset)	(67.71kHz offset)	(67.71kHz offset)
	at -60dBm	at -60dBm	at -60dBm	at -60dBm

## Steps

1. Set the phone to local mode.
2. Activate RSSI reading in Phoenix ( **Testing** → **GSM** → **RSSI reading** )

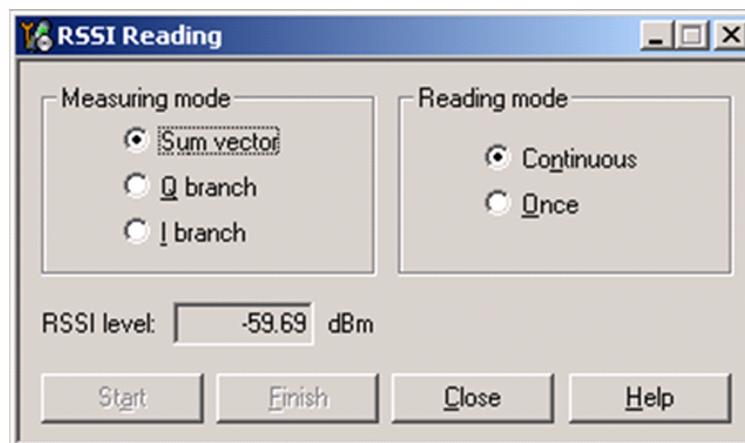


Figure 40 Phoenix GSM RSSI reading window


## Results

The reading should reflect the level of the signal generator (-losses) +/- 5 dB.

When varying the level in the range -30 to -102 dBm the reading should then follow within +/-5 dB.

## GSM receiver troubleshooting flowchart

### Troubleshooting flow

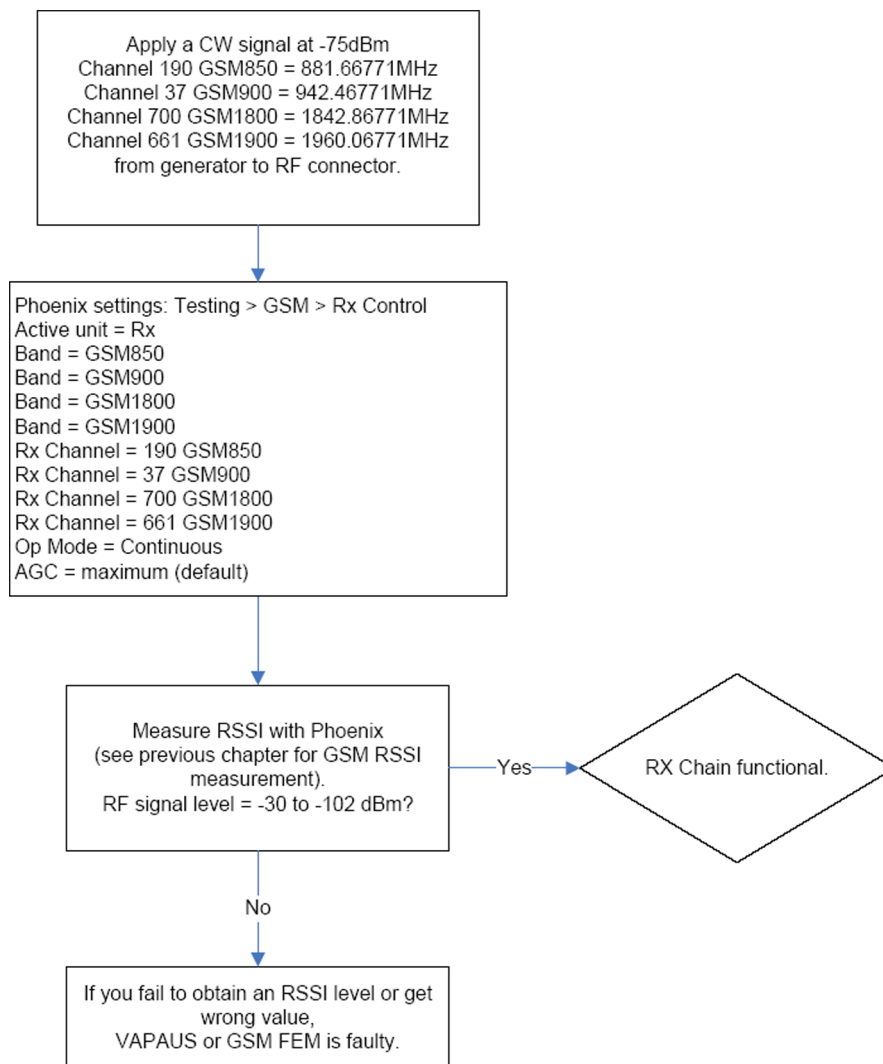

## WCDMA RX chain activation for manual measurement

### Steps

1. Via Phoenix Testing menu, choose **WCDMA/RX Control**.
2. In the RX control window, make the following settings:



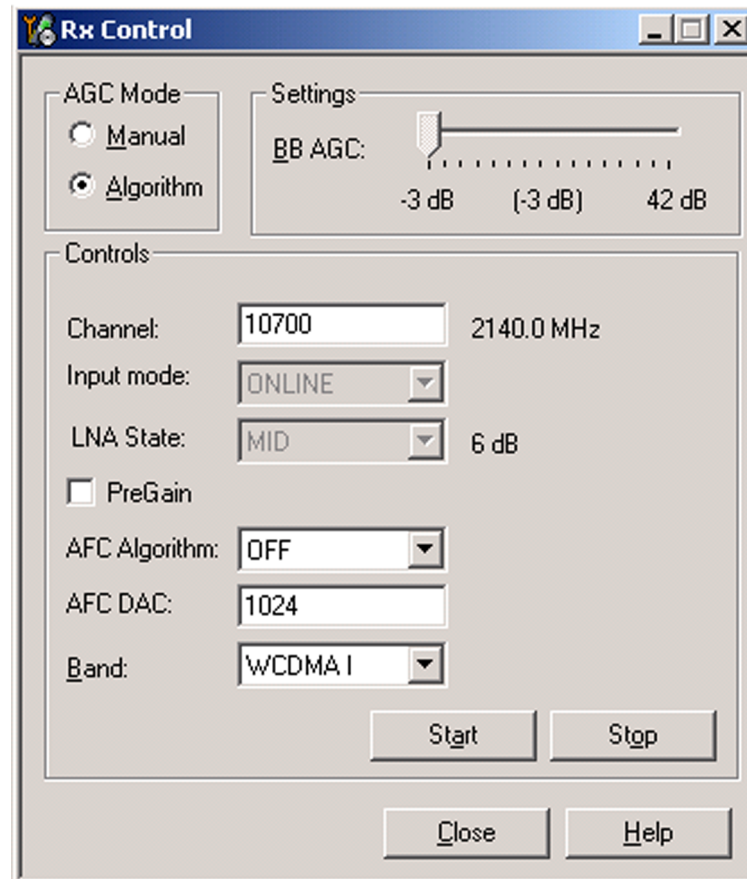


Figure 41 Phoenix WCDMA RX Control window

**Note:** Channel for band WCDMA II 9800, V 4408, VIII 3012

3. Click **Start** to activate the settings.

If the settings are changed later on (for example, change of channel) you have to click **Stop** and **Start** again.

**Note:** Clicking **Stop** also disables TX control if it was active.


## WCDMA RSSI measurement

### Prerequisites

WCDMA RX must be activated before RSSI can be measured. For instructions, please refer to WCDMA RX chain activation. Connect signal generator to RF connector and use appropriate frequency for each channel (2141MHz for channel 10700 WCDMA band I, WCDMA modulation).

### Steps


1. Set the following RF generator settings:

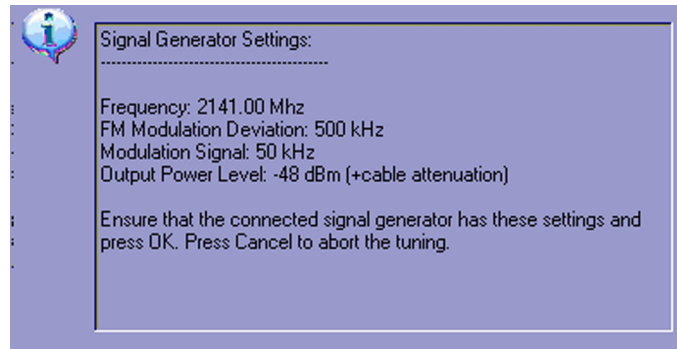

**Figure 42 WCDMA RX generator settings**

**Note:** Frequency for band WCDMA II 1961.0MHz, V 882.6MHz, VIII 943.4MHz

2. From the Phoenix testing menu, select **WCDMA** → **RX Power measurement**
3. In the RX power measurement window, make the following settings:

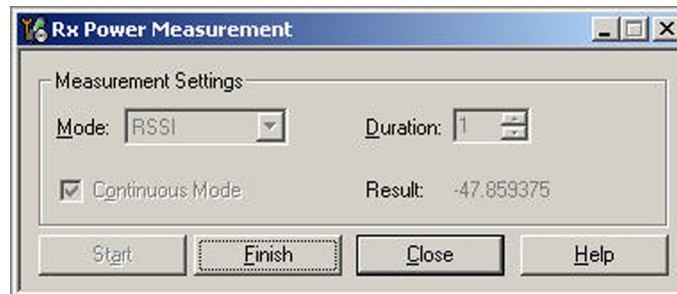


**Figure 43 Phoenix WCDMA RX power measurement window**

4. Click **Start** to perform the measurement.

**Note:** WCDMA RSSI measurement is accurate only with WCDMA modulated signal.

## WCDMA receiver troubleshooting flowchart

### Troubleshooting flow

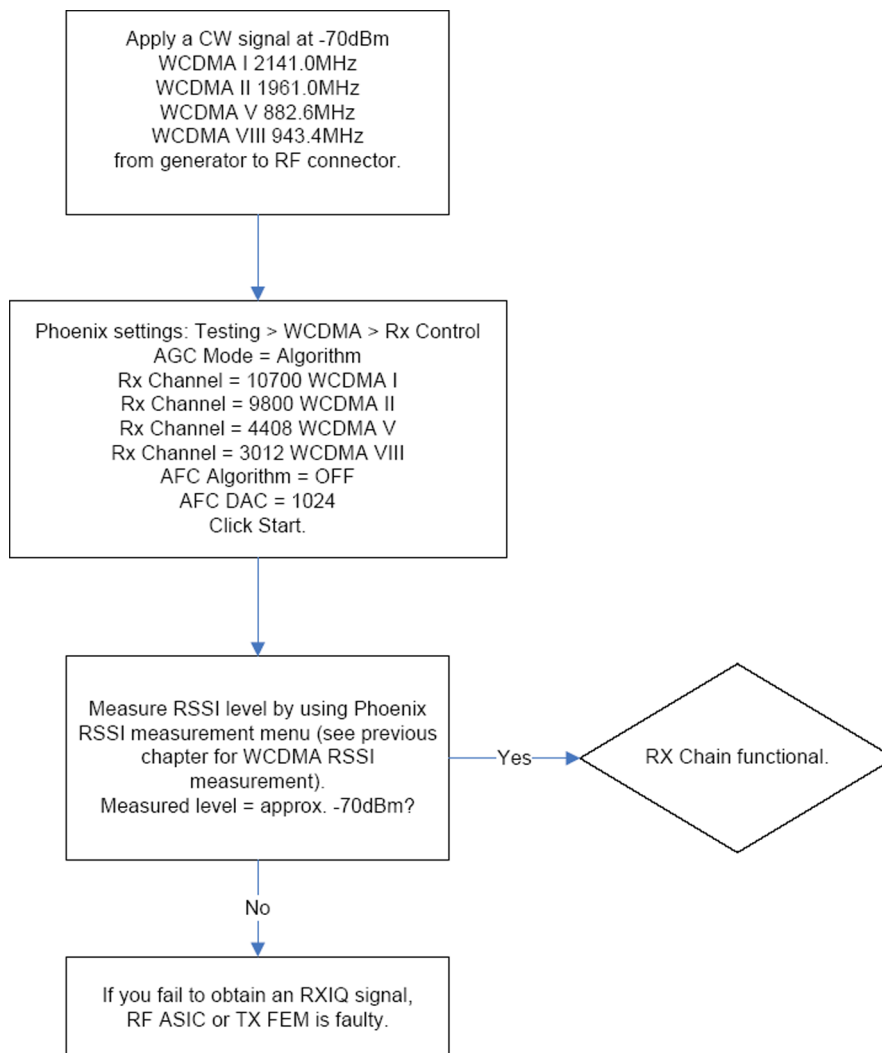

## ■ Transmitter troubleshooting

### General instructions for transmitter (TX) troubleshooting

Please note the following before performing transmitter tests:

- TX troubleshooting requires TX operation.
- Do not transmit on frequencies that are in use.
- The transmitter can be controlled in local mode for diagnostic purposes.
- The most useful Phoenix tool for GSM transmitter testing is "RF Controls", in WCDMA transmitter testing the best tool is "TX Control".
- Remember that re-tuning is not a fix! Phones are tuned correctly in production.


**Note:** Never activate the GSM or WCDMA transmitter without a proper antenna load. Always connect a 50  $\Omega$  load to the RF connector (antenna, RF-measurement equipment or at least a 2 W dummy load); otherwise the GSM or WCDMA Power amplifier (PA) may be damaged.

## GSM transmitter troubleshooting

### Steps

1. Set the phone to local mode.
2. Activate RF controls in Phoenix ( **Testing** → **GSM** → **Rf Controls** ).


Make settings as shown in the figure:

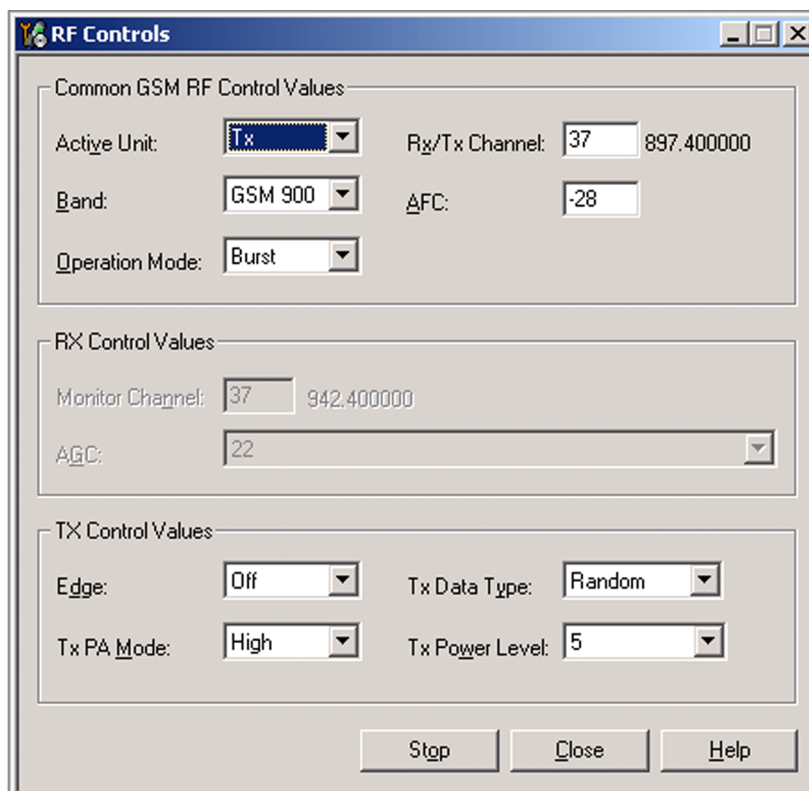


**Figure 44 Phoenix GSM RF controls window**

3. Check the basic TX parameters (i.e. power, phase error, modulation and switching spectrum), using a communication analyser (for example CMU200).


Analysers settings

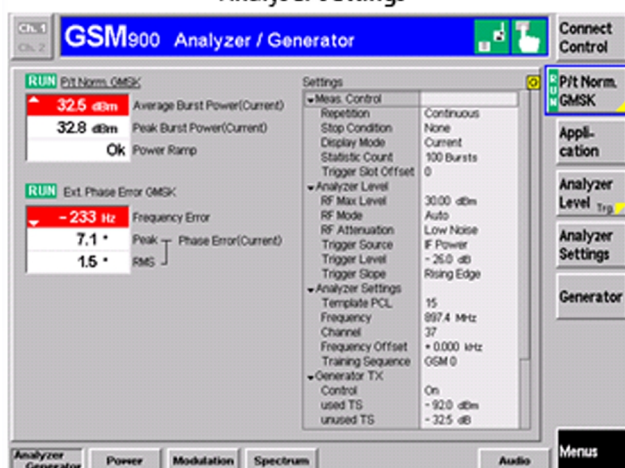


Phase error

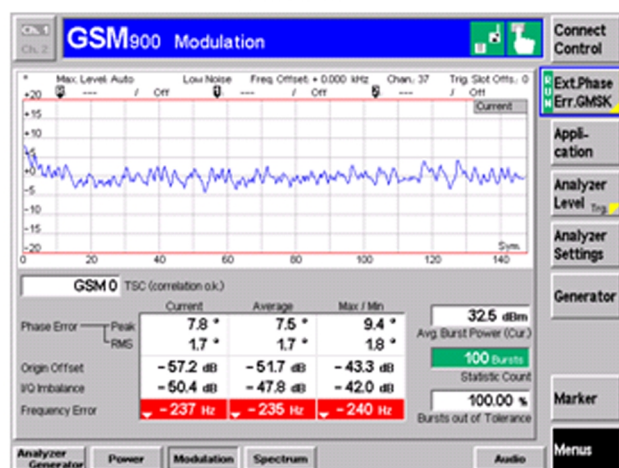

Modulation/Switching spectrum

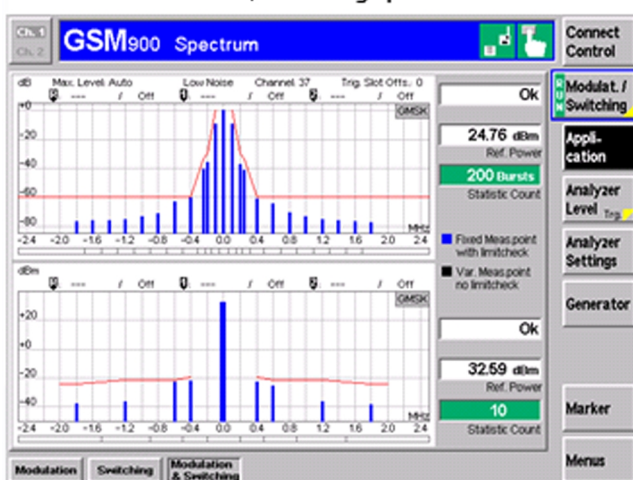

Power/Burst GSM/GPRS (GMSK)

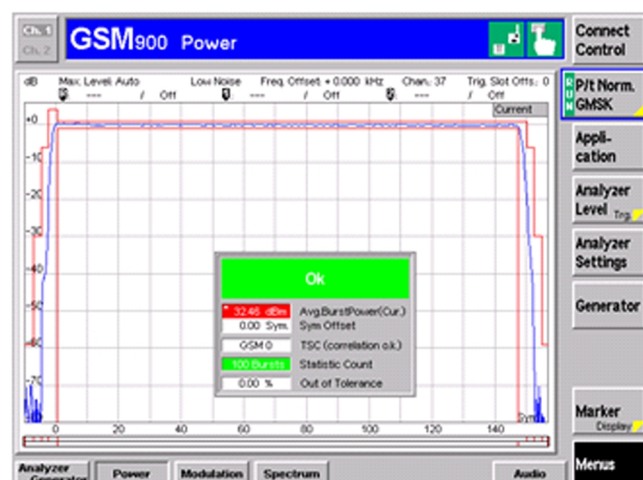

Power/Burst - EDGE (8PSK)



4. Change power level (RF controls) and make sure the power reading follows accordingly.




## Next actions

If you want to troubleshoot the other bands, change band with RF controls and set the communication analyser accordingly.

## WCDMA transmitter troubleshooting

### Steps


1. Set the phone to local mode.
2. In Phoenix, select **Testing** → **WCDMA** → **TX control**.
3. In the TX control window, make settings as in the picture:

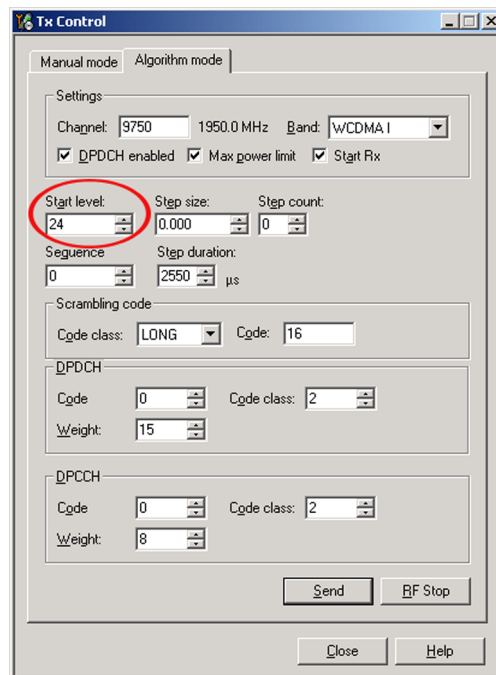


**Note:** For WCDMA TX channels: band V 4183, VIII 2787

4. Click **Send** to enable the settings and activate TX.  
If settings are changed (eg. new channel), you have to click **RF Stop** and **Send** again.
5. Check the basic TX parameters using a communication analyzer (for example CMU200).


## Power

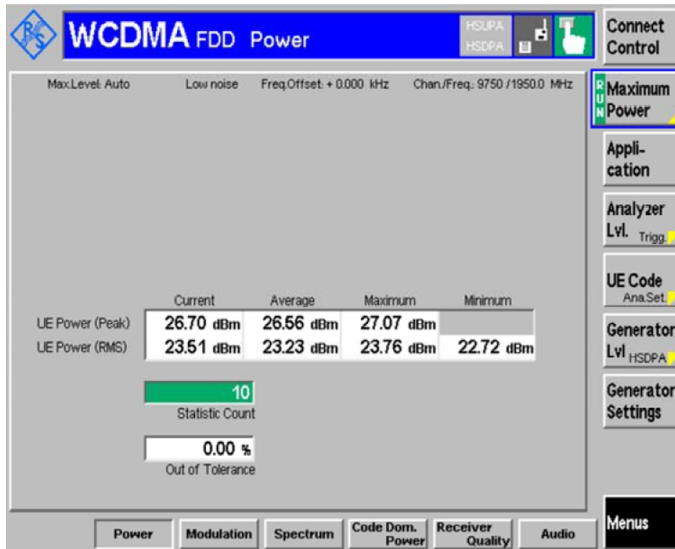


## Spectrum - Emission Mask

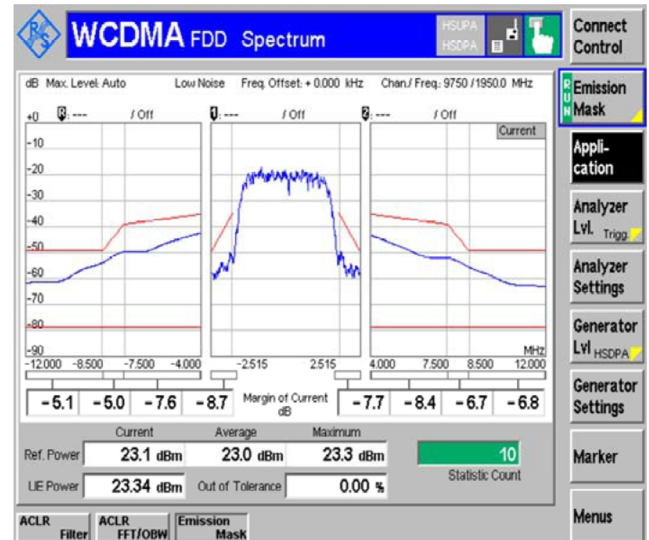

## Spectrum - ACLR (FFT/OBW)

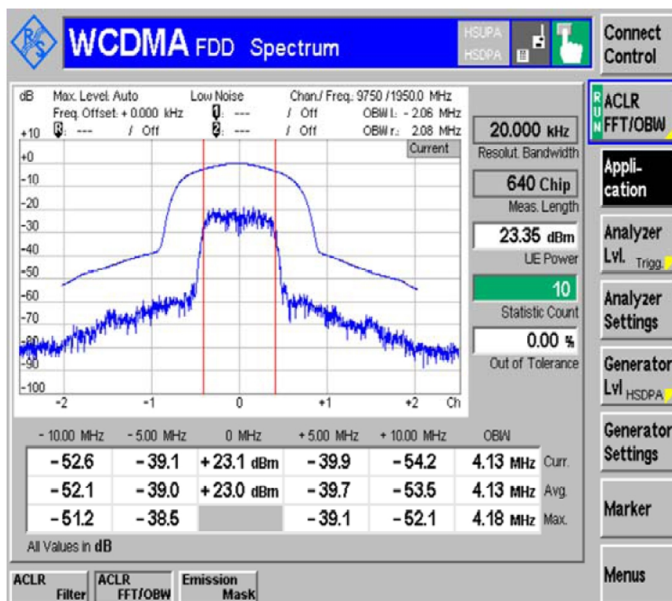

## Spectrum - ACLR (Filter)

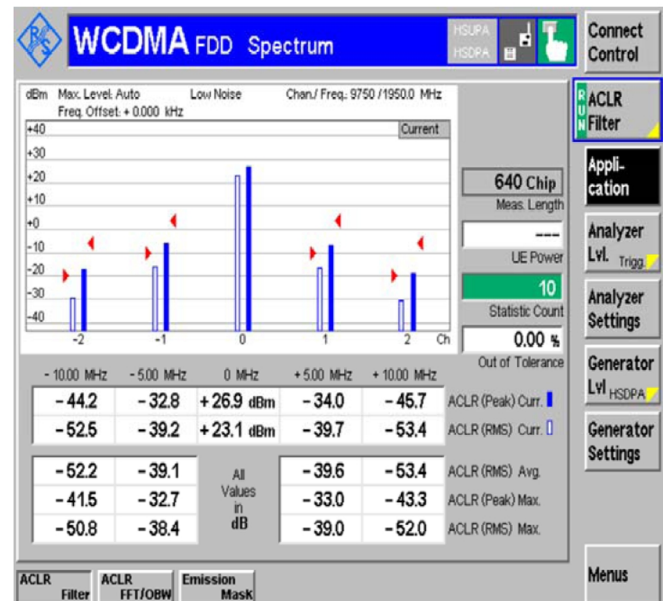

## Next actions

If you want to troubleshoot the other bands, change band with RF controls and set the communication analyser accordingly.

## ■ Antenna troubleshooting

### Antenna troubleshooting

#### Antenna contacts and matching components, visual check

In the main antenna there is one feed and one GND contact. Check that the GND and feed pads take proper contact to the C-clips on the main PWB. There is a matching coil (L7599) on the PWB. Check that it is properly soldered on the PWB. In case there is damage, you need to replace the component.

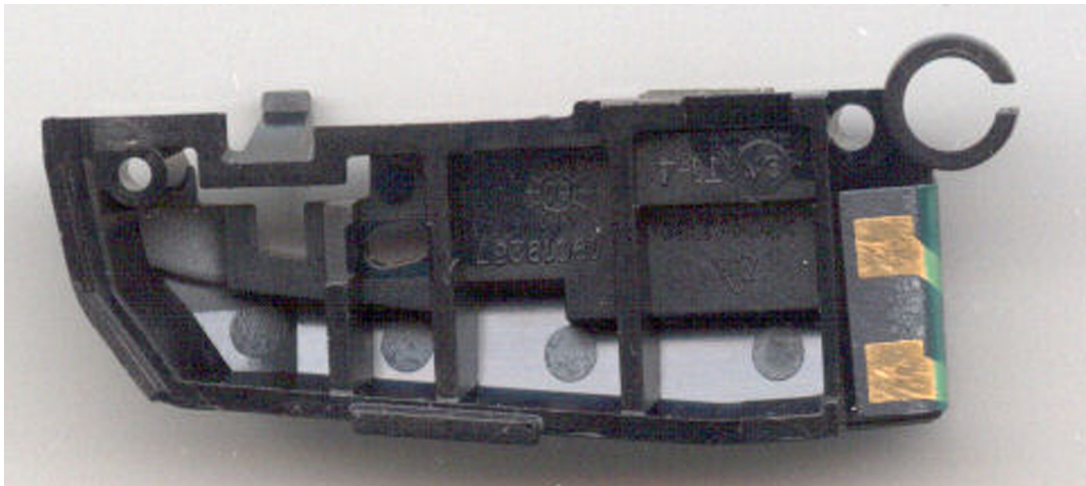


Figure 45 Antenna contacts

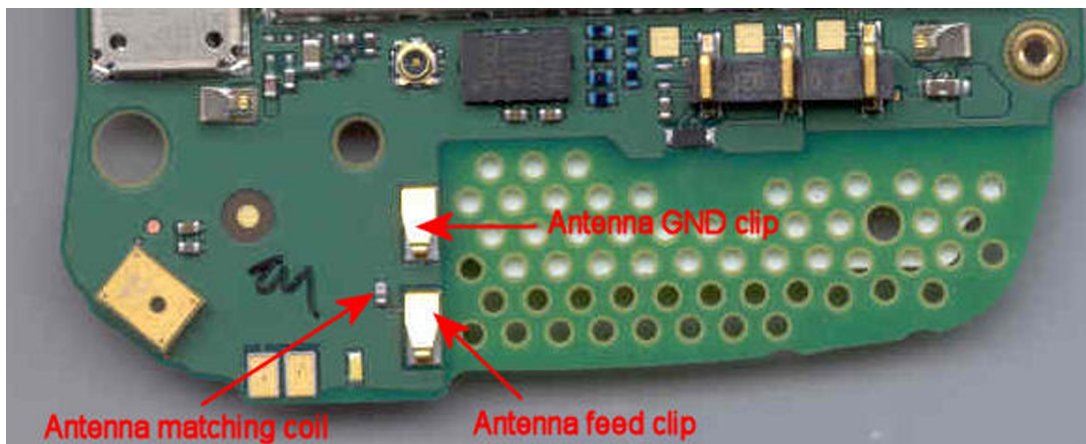


Figure 46 Antenna contact clips and matching coil on the PWB



## **5 — System Module and User Interface**

(This page left intentionally blank.)

## Table of Contents

Introduction .....	5-7
Phone description .....	5-7
Energy management .....	5-9
Battery and charging .....	5-9
Backup battery .....	5-10
Normal and extreme voltages .....	5-10
Battery drains fast troubleshooting .....	5-11
Power key and system power-up .....	5-11
Power distribution .....	5-12
Clocking scheme .....	5-13
Bluetooth and FM RDS radio module .....	5-14
I/O Expander .....	5-15
GPS interface .....	5-16
WLAN interface .....	5-19
High-speed USB .....	5-19
CBUS interface .....	5-20
FBUS interface .....	5-20
ECI interface .....	5-20
SIM interface .....	5-20
MicroSD card interface .....	5-21
Camera concept .....	5-22
Camera concept .....	5-22
User interface .....	5-23
Resistive touch screen .....	5-23
Proximity sensor .....	5-23
Touch screen controller .....	5-24
Display .....	5-25
Display .....	5-25
Backlight and illumination .....	5-26
Digital Ambient Light Sensor (ALS) .....	5-27
Hall sensor .....	5-28
ASICs .....	5-28
RAPIDOYawe .....	5-28
EM ASIC BETTY N2300 .....	5-28
EM ASIC VILMA N2200 .....	5-29
Device memories .....	5-29
Combo memory .....	5-29
Audio concept .....	5-29
Audio HW architecture .....	5-29
Internal microphone .....	5-30
Internal earpiece .....	5-30
Internal speaker .....	5-31
Vibra circuitry .....	5-31
Accessory AV connector .....	5-31
DA converter and headphone amplifier .....	5-32
Baseband technical specifications .....	5-33
External interfaces .....	5-33
SIM IF connections .....	5-33
Charging IF electrical characteristics .....	5-33
Internal interfaces .....	5-33

Back-up battery interface electrical characteristics.....	5-34
RF technical description.....	5-34
RF block diagram.....	5-34
Receiver (RX).....	5-35
Transmitter (TX).....	5-35
Frequency mappings.....	5-36
GSM850 frequencies.....	5-36
EGSM900 frequencies.....	5-36
GSM1800 frequencies.....	5-37
GSM1900 frequencies.....	5-39
WCDMA 2100 Rx frequencies.....	5-40
WCDMA 2100 Tx frequencies.....	5-41
WCDMA II (1900) frequencies.....	5-42
WCDMA VIII (900) frequencies.....	5-43
WCDMA V (850) frequencies.....	5-48

## List of Tables

Table 10 Nominal voltages.....	5-10
Table 11 Average current consumption.....	5-11
Table 12 Charging IF electrical characteristics.....	5-33
Table 13 Back-up battery electrical characteristics.....	5-34

## List of Figures

Figure 47 System module block diagram.....	5-8
Figure 48 Board and module connections.....	5-9
Figure 49 Battery pin order.....	5-9
Figure 50 Blade battery connector.....	5-10
Figure 51 Small (right) and wide (left) charger plugs.....	5-10
Figure 52 Power distribution.....	5-12
Figure 53 Clocking scheme.....	5-13
Figure 54 Bluetooth & FM radio block diagram.....	5-15
Figure 55 I/O expander.....	5-16
Figure 56 Keypad.....	5-16
Figure 57 Block diagram of the GPS system.....	5-18
Figure 58 WLAN module.....	5-19
Figure 59 HS USB block diagram.....	5-20
Figure 60 SIM interface.....	5-21
Figure 61 MicroSD card interface.....	5-21
Figure 62 Camera subsystem block diagram.....	5-23
Figure 63 Proximity sensor and boot.....	5-23
Figure 64 Proximity sensor reference design and measurement points.....	5-24
Figure 65 Touch screen controller.....	5-25
Figure 66 Display block diagram.....	5-26
Figure 67 Backlight control for HW keys.....	5-27
Figure 68 Display backlighting system.....	5-27
Figure 69 Digital Ambient Light Sensor location.....	5-28
Figure 70 Digital Ambient light sensor schematics.....	5-28
Figure 71 Audio system block.....	5-30
Figure 72 Internal microphone.....	5-30
Figure 73 Internal earpiece circuitry.....	5-31

Figure 74 Internal speaker .....	5-31
Figure 75 Vibra circuitry .....	5-31
Figure 76 Accessory (AV) connector.....	5-32
Figure 77 Accessory (AV) connector with DAC33 and TPA6130 audio enhancements .....	5-32
Figure 78 DA converter and headphone amplifier.....	5-32
Figure 79 RF block diagram using RF ASIC N7500 (with WCDMA VIII/II/I) .....	5-34
Figure 80 RF block diagram using RF ASIC N7500 (with WCDMA V/II/I) .....	5-35

(This page left intentionally blank.)

## ■ Introduction

### Phone description

RAPIDOYAWE is the main digital baseband ASIC in the HW52. It contains functionality for both WCDMA and GSM EDGE.

AVILMA is power management ASIC having voltage regulators and audio transceiver and BETTY is energy management ASIC having charging switch and FBUS transceiver.

Memory components are internal COMBO 1 Gb/2 Gb and a card reader for MicroSD.

Function	Description	Item ref
EM ASIC	AVILMAS	N2200
	BETTY	N2300
System ASIC	RAPIDOYAWE	D2800
Memory	Combo 1Gb DDR + 2Gb M3	D3000
Camera accelerator	OMAP-DM500	N1400
Display controller	Zonda	N2460
Back-up battery	RTC BACKUP CAPAC 3225	G2200
FM-radio with RDS	BTHFMRD2.2 module	N6000
Bluetooth	BTHFMRD2.2 module	N6000
WLAN	WLAN Size 4.0b	N6300
GPS	GPS5350_ROM3.0	N6200
RF ASIC	Vapaus	N7500
GSM PA	850/900/1800/1900	N7520
WCDMA PA	850/900/1900/2100	N7540
Oscillator	VCTCXO 38.4MHZ	G7500
	TCXO 38.4 MHz	G6450
	Crystal 32.768KHZ	B2200
IO-expander	BASIC IO Expander	N2850
SIM card reader		X2700
HS USB transceiver	ISP1707	D3300
Accelerometer	AHTI_A 3-AXIS	N6501

## System module block diagram

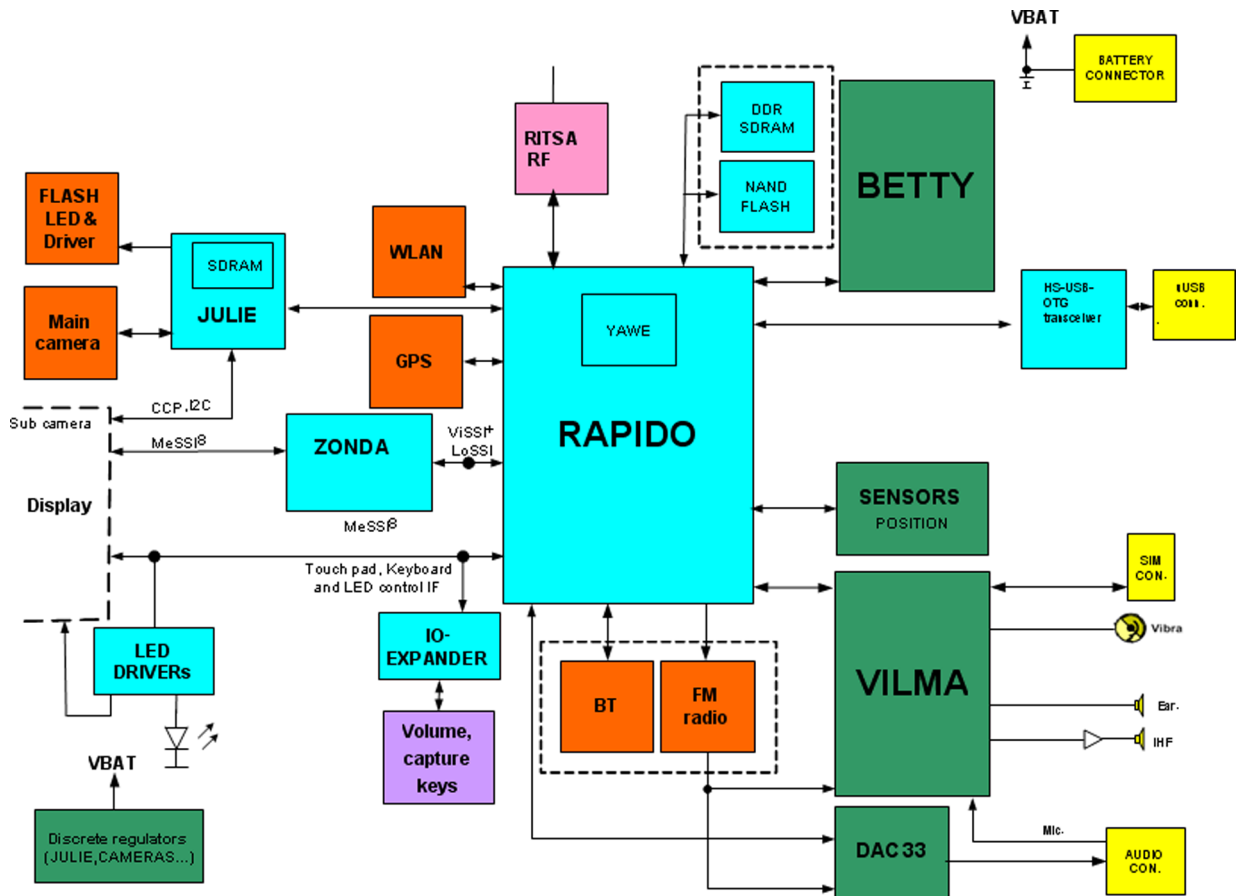


Figure 47 System module block diagram



## Board and module connections

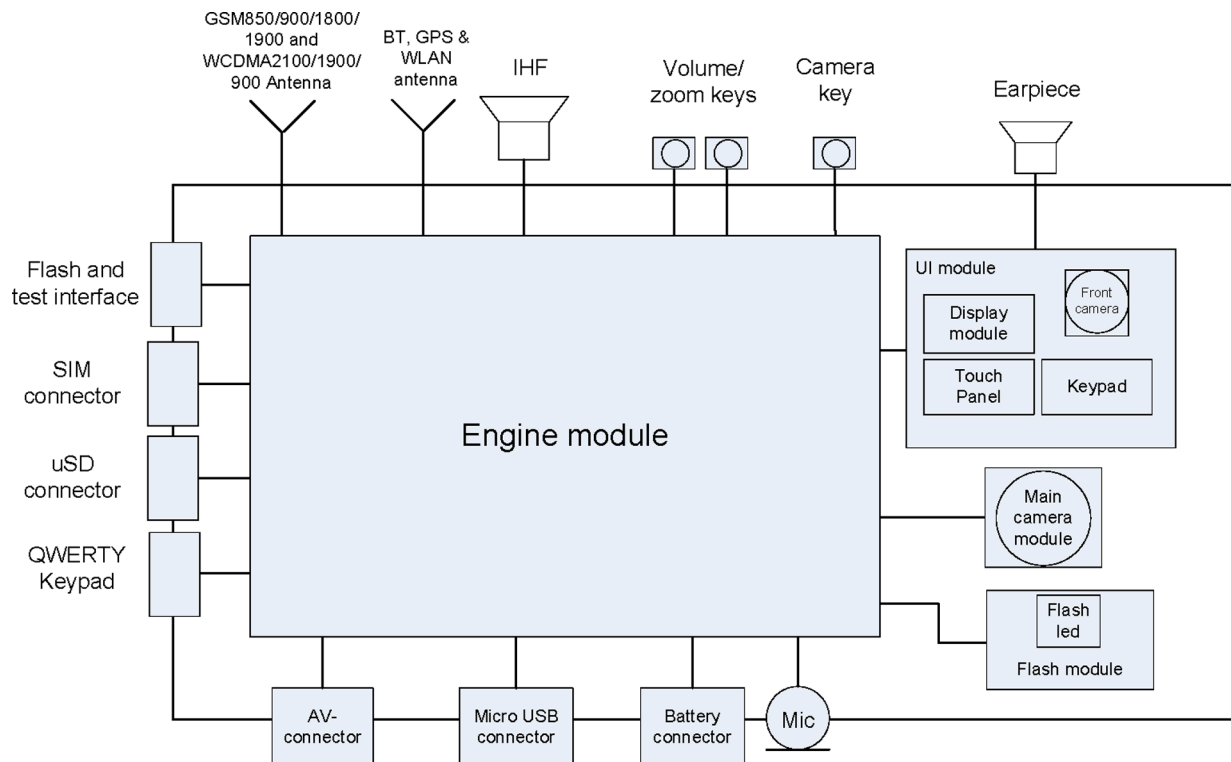


Figure 48 Board and module connections

## ■ Energy management

### Battery and charging

#### BL-4J battery

The phone is powered by a 3-pole BL-4J battery pack (1200 mAh). The three poles are named VBAT, BSI and GND where the BSI line is used to recognize the battery capacity. This is done by means of an internal battery pull down resistor.

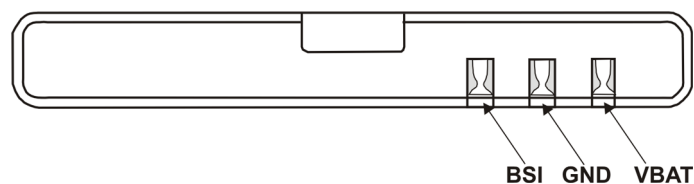


Figure 49 Battery pin order

The battery temperature is estimated by measuring separate battery temperature NTC via the BTEMP line. This is located on the main PWB, at the place where the phone temperature is closest to the battery temperature.

#### Battery connector

The battery connector is a blade connector. It has three blades;

- BSI (Battery size indicator)
- GND (Ground)

- VBAT (Battery voltage)



Figure 50 Blade battery connector

## Charging

This phone is charged through the smaller Nokia standard interface (2.0 mm plug). The wider standard charger (3.5 mm) can be used together with the CA-44 charger adapter.



Figure 51 Small (right) and wide (left) charger plugs

Charging is controlled by energy management, and external components are needed to protect the baseband module against EMC, reverse polarity and transient frequency deviation.

## Backup battery

When the main battery is not attached EM ASIC (N2200) goes in backup mode using back-up battery that supplies voltage to RTC in EM ASIC (N2200).

## Normal and extreme voltages

Energy management is mainly carried out in the two Application Specific Integrated Circuits (ASICs) BETTY and AVILMA. These two circuits contains a number of regulators. In addition there are some external regulators too.

In the table below normal and extreme voltages are shown when a BL-4J battery is used.

Table 10 Nominal voltages

Voltage	Voltage [V]	Condition
General Conditions		
Nominal voltage	3.700	
Lower extreme voltage	3.145	
Higher extreme voltage	4.230	
(fast charging)		
HW Shutdown Voltages		

Voltage	Voltage [V]	Condition
Vmstr+	2.1 ± 0.1	Off to on
Vmstr-	1.9 ± 0.1	On to off
SW Shutdown Voltages		
Sw shutdown	3.15	In call
Sw shutdown	3.3	In idle
Min Operating Voltage		
Vcoff+	2.9 ± 0.1	Off to on
Vcoff-	2.6 ± 0.1	On to off

## Battery drains fast troubleshooting

Table 11 Average current consumption

Use case	Current consumption
Video call	540mA
Video streaming HSDPA QVGA Mpeg4 30fps BT hs	510mA
Video recording 640x352 30fps	400mA
Video playback 640x352 30fps	340mA
WCDMA voice call	250mA

## Power key and system power-up

This device has no separate power key. The power key is the same as the end key. When the battery is placed in the phone, the power/end key circuits are energized. When the power/end key is pressed, the system boots up (if an adequate battery voltage is present).

Power down can be initiated by pressing the power/end key again (the system is powered down with the aid of SW). The power/end key is connected to EM ASIC N2200 (AVILMA) via PWRONX signal.

The power/end key may be disabled in certain charging cases.



## Power distribution

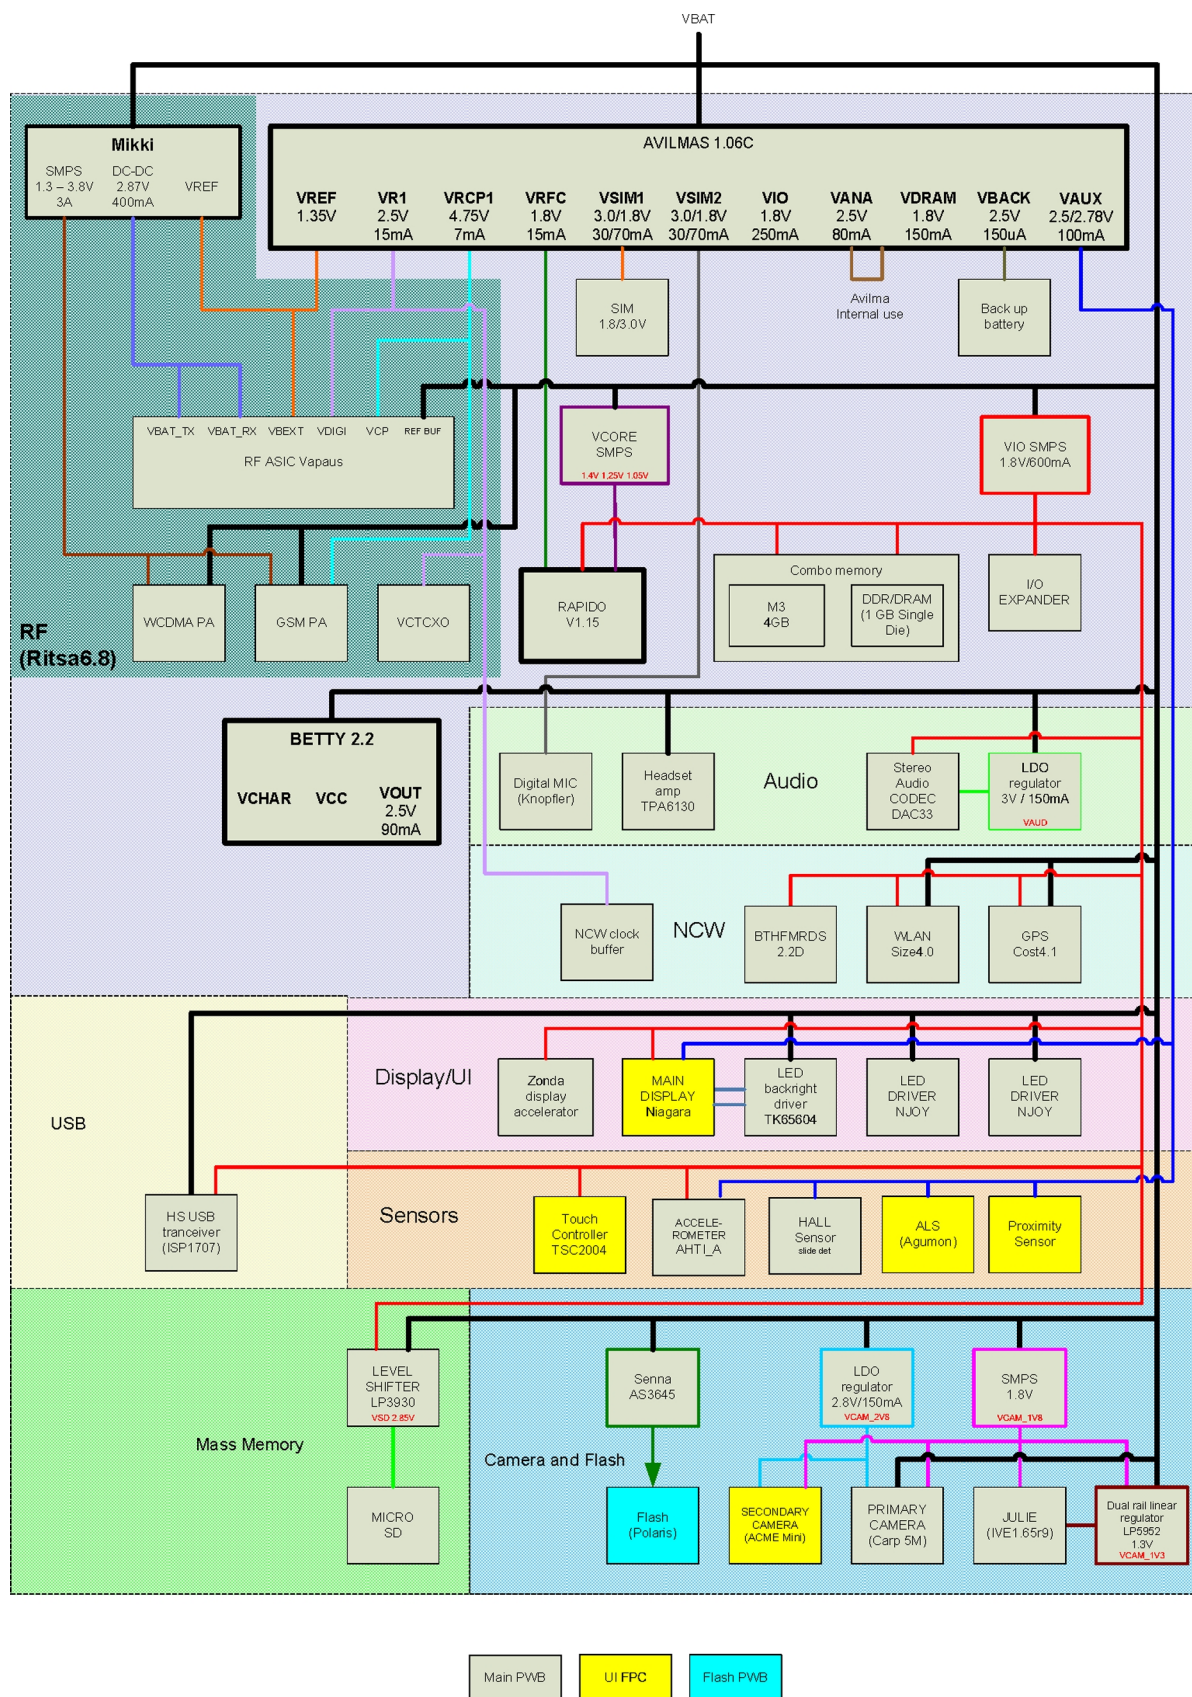


Figure 52 Power distribution

## Clocking scheme

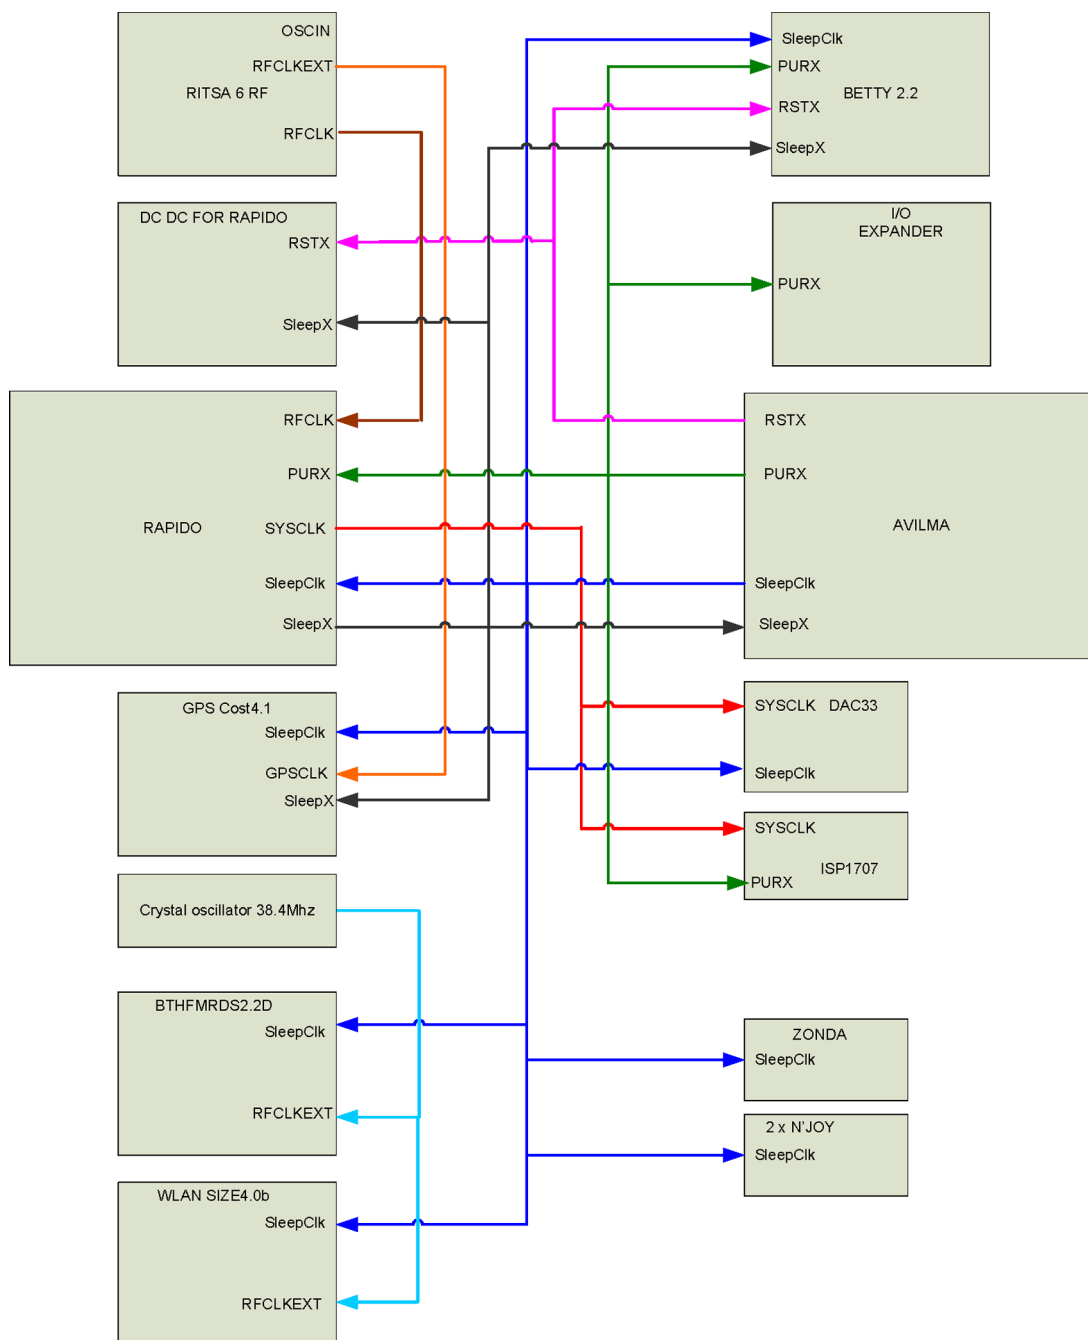


Figure 53 Clocking scheme

Engine clocks	
RFCLK	38.4 MHz
SleepClk	32.768kHz
RFCLKEXT	38.4 MHz
SYSClk	19.2 MHz

## ■ Bluetooth and FM RDS radio module

Bluetooth and FM radio receiver are provided by the same ASIC (Broadcom BCM2048). The device supports Bluetooth operation and FM radio reception in both European/USA and Japanese bands (the appropriate region-specific FM radio band is pre-configured in the phone software). The UART interface allows the device to communicate with the phone baseband engine using Bluetooth HCI commands. Commands to the FM radio can also be sent over the I2C interface.

When Bluetooth is switched on, the phone user interface the BT\_RESETX line is toggled to reset the Bluetooth device, and commands are sent over the UART interface to configure the device. If UART communication fails (due to a hardware fault) it will not be possible to switch on Bluetooth from the phone user interface.

The device has two clock signals: SYS\_CLK (19.2MHz, 26.0MHz, or 38.4MHz supported) and SLEEP\_CLK (32.768kHz). The SLEEP\_CLK is supplied all the time the phone is switched on. To maximise the phone standby time, it is only necessary to provide a SYS\_CLK signal when Bluetooth activity occurs, such as sending Bluetooth data to another device, or checking periodically if there are any other Bluetooth devices attempting to communicate with it. At other times when the Bluetooth device is in standby mode or the FM radio is switched on it is only necessary to provide a SLEEP\_CLK signal. The Bluetooth-FM ASIC is powered directly from the phone battery voltage line (VBAT). An internal regulator is enabled when Bluetooth or FM radio is switched on.

Bluetooth audio signals are sent to and from the device using a PCM interface. The Bluetooth RF signal is routed via a buried track to the Bluetooth antenna on the side of the PWB. An RF filter is needed between the Bluetooth antenna and Bluetooth ASIC to prevent interference to and from the cellular phone antenna. Phones that have both Bluetooth and WLAN use a shared antenna, as both services occupy the 2.4GHz ISM frequency band. The co-existence signaling interface between Bluetooth and WLAN ASICs controls the RF activity in the shared frequency band.

The audio signal from the FM radio is routed via the phone Audio ASIC to the phone headset or loudspeaker. The external wired headset is also used as an Antenna for the FM radio. The FM radio receiver RF signal is routed from the ASIC via a buried track to an impedance matching circuit placed near the headset connector.

The following block diagram shows how Bluetooth-FM is connected to the host engine.



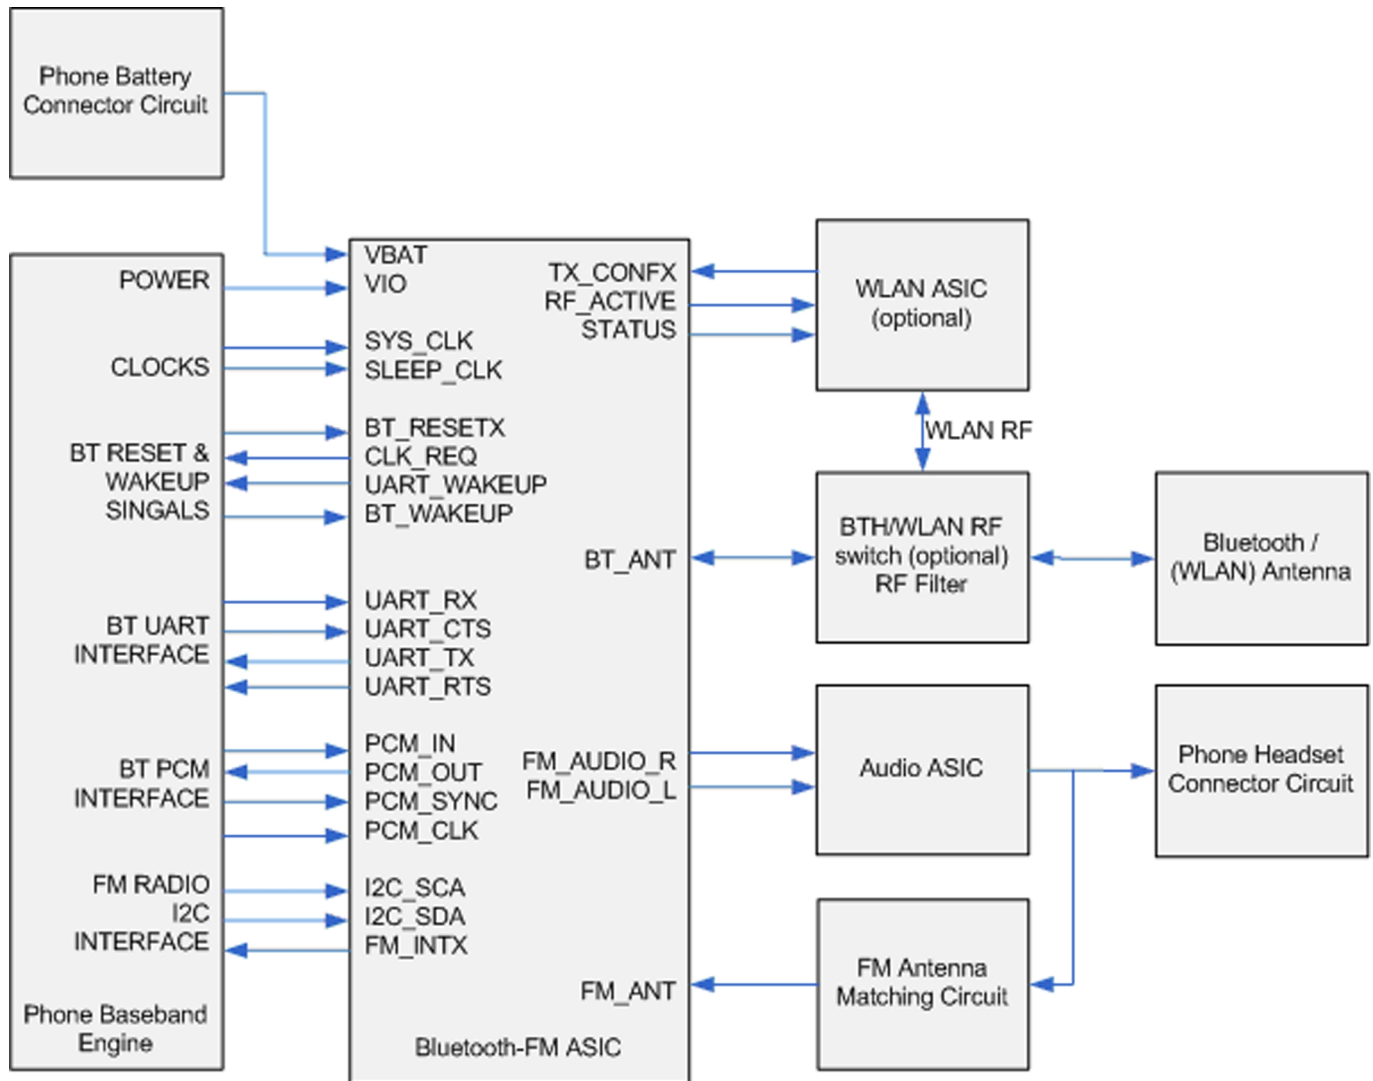


Figure 54 Bluetooth & FM radio block diagram

## ■ I/O Expander

I/O Expander is used for control signals that are not time critical, such as for keyboard inputs, enable & reset signals etc. It is connected to the I2C bus, and has its own interrupt. PURX is used as the I/O Expander's reset. The I/O Expander is powered from VIO 1.8V.

This device has a keyboard matrix. The keys are connected to the I/O expander.

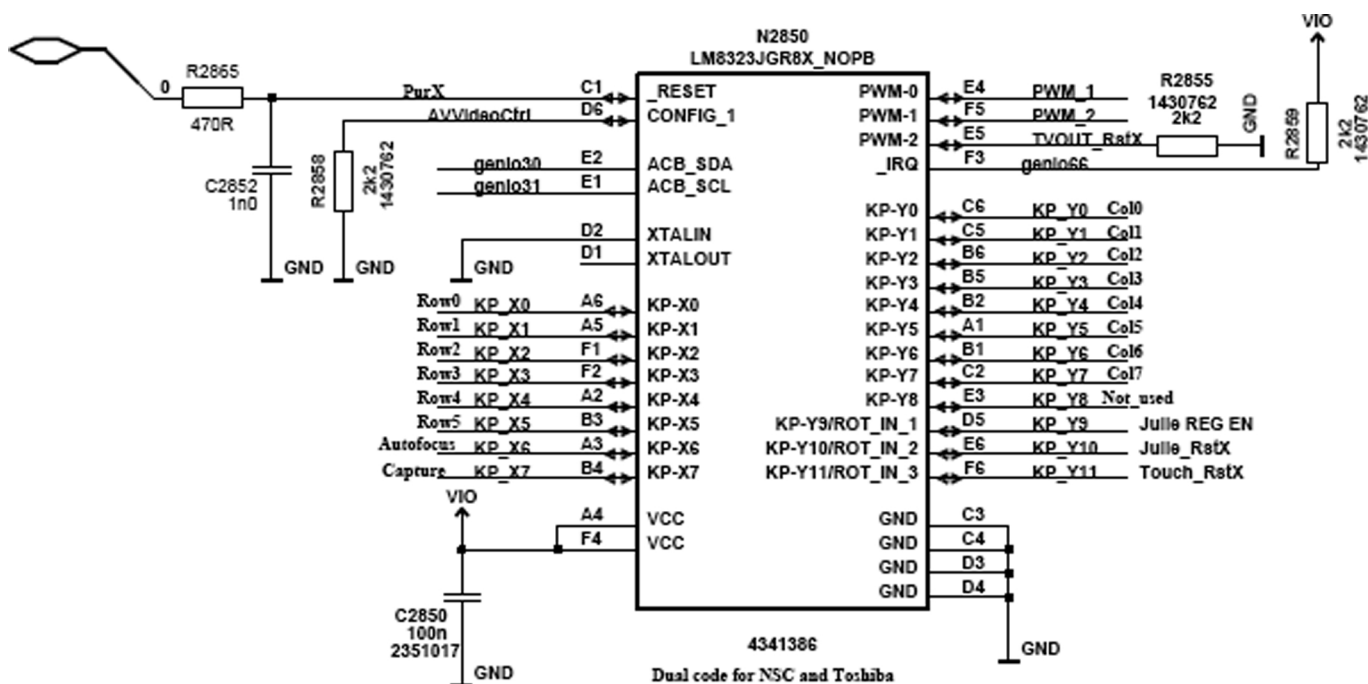


Figure 55 I/O expander

IO Expander		ZPU	ZPU	ZPU	ZPU	ZPU	ZPU	ZPU	ZPU
		KP_Y0	KP_Y1	KP_Y2	KP_Y3	KP_Y4	KP_Y5	KP_Y6	KP_Y7
		COLUMN_0	COLUMN_1	COLUMN_2	COLUMN_3	COLUMN_4	COLUMN_5	COLUMN_6	COLUMN_7
KP_X0	ROW_0	Q 1	W 2	E 3	R 4	T 5	Y 6	U 7	I 8
KP_X1	ROW_1	A	S	D	F	G	H -	J +	K #
KP_X2	ROW_2	Z	X	C	V	B	N (	M )	, ;
KP_X3	ROW_3	FN	leftSHIFT	Sym	Ctrl	@ /	SPACE	' &	? !
KP_X4	ROW_4	O 9	P 0	L *	BACKSPACE	. :	ENTER	rightSHIFT	
KP_X5	ROW_5	VOL +	VOL -	UP	DOWN	LEFT	RIGHT	SELECT	
KP_X6		AUTOFOCUS							
KP_X7		CAPTURE							

Figure 56 Keypadmatrix

## ■ GPS interface

### Functional description

The device includes an inbuilt GPS receiver and it works as a stand-alone positioning device.

The GPS solution provides a full GPS HW and SW engine for devices capable of operation in all GPS modes:

- Autonomous (standalone) - no communication with network is required for GPS fix
- MS based - the device receives aiding information from the network and computes fix internally
- MS assisted - the device receives aiding information from the network and computes pseudorange measurements. The measurements are then sent back to the network for the fix calculation.

At the heart of the GPS solution is GPS5350 GPS receiver IC, which has GPS RF receiver and GPS BB processor integrated into a single IC. RF section performs down conversion, filtering and IF sampling, whereas BB section contains an enhanced version of multimode GPS with twelve hardware matched filters, post detection logic and an ARM controller core.

The features of the GPS solution include:

- 12 channels



- Integrated regulators for RF and BB (including external LNA)
- Direct connection to a battery
- Fast clock calibration through availability of 261MHz clock from RF PLL
- Improved tracking and Hot start (TTFF) reacquisition performance
- Advanced Power Management and Host Wakeup capability.

The I2C interface handles data transfer between GPS and the Rapido. GPS uses the CE RF system clock to calibrate its own GPS Clk.

GPS has three clock sources:

- 16.368MHz clock from a dedicated TCXO (G6200)
- 38.4MHz reference clock from Ahneus RF ASIC
- 32.768kHz Sleepclk

The GPS module is powered from VIO 1.8V and VBAT.

### **Block diagram**

The following block diagram shows how the GPS module is connected to the host side.

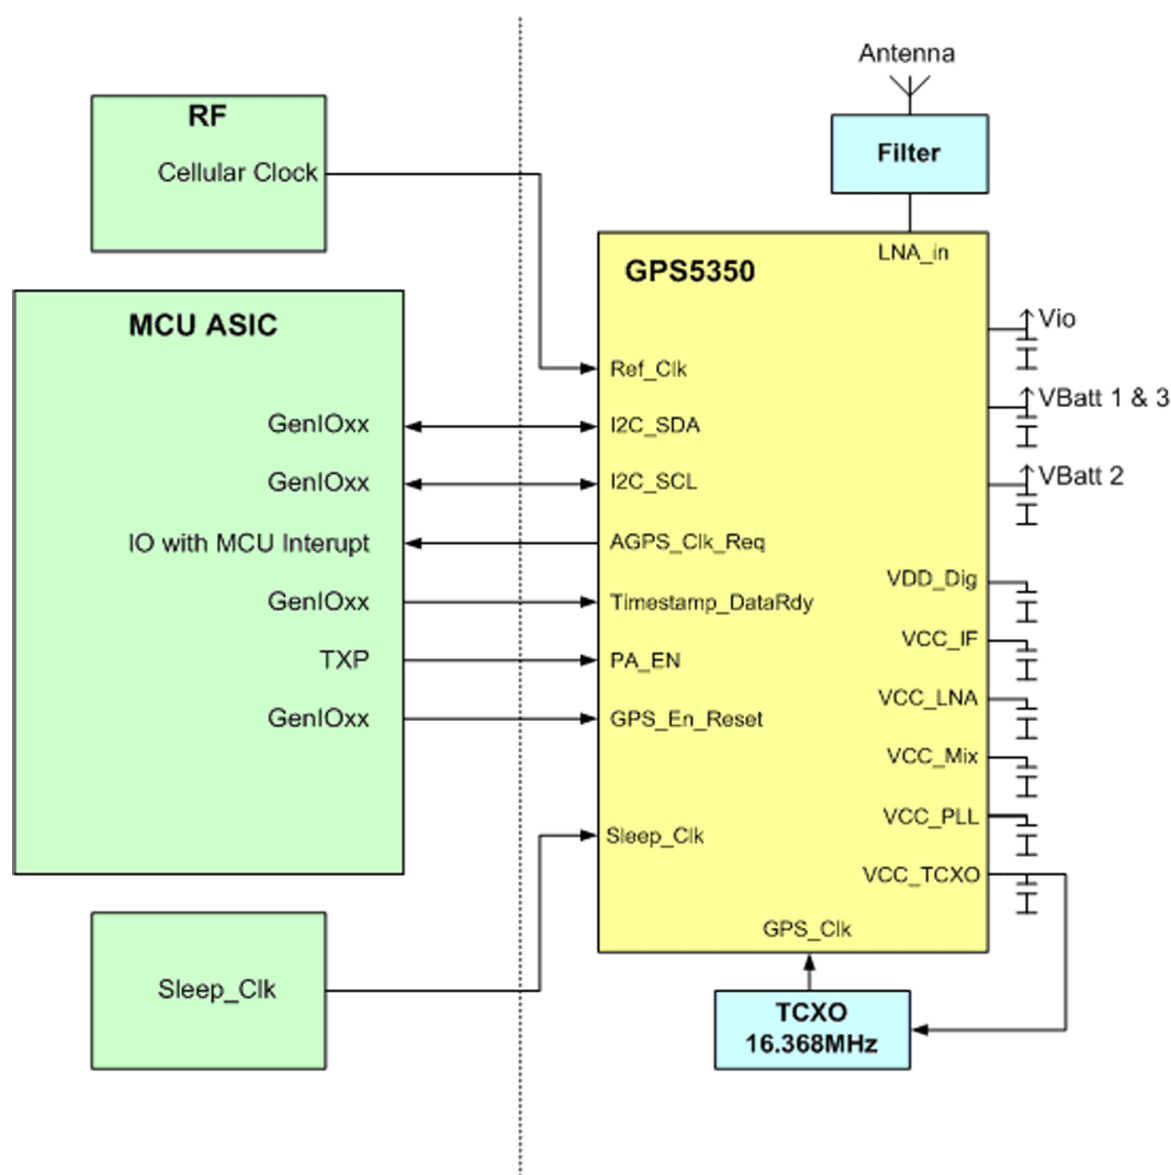


Figure 57 Block diagram of the GPS system

## Interface signals

Signal name	I/O	Function
<b>RF</b>		
ANT_GPS	I	GPS antenna port
LNA_In	I	GPS ASIC RF input
<b>Clocking</b>		
REF_CLK	I	Reference Clock = RF Cellular clock, Min 0.2V <sub>pk-pk</sub>
GPS_CLK	I	Connection of 16.368MHz GPS TCXO
RTC_CLK	I	Cellular engine 32768 Hz sleep clock
<b>Control</b>		
GPS_EN_RESET	I	GPS engine reset

Signal name	I/O	Function
AGPS_CLK_REQ	O	MCU Interrupt when GPS requires CE to be awake (Host Wakeup)
IO_TIMESTAMP_DATARDY	I	Strobe for accurately marking in real time, timing information from the cellular engine. DATARDY indication to download code through synchronous operation from cellular engine.
IO_PA_EN	I	Used to implement PA blanking when cellular PA is ON
<b>Comms</b>		
I2C_SCL_U1TX	B	I2C clk line
I2C_SDA_U1RX	B	I2C data line
<b>Power</b>		
VDDS	P	Cellular engine I/O supply
VBatt 1 & 3	P	Phone battery power or SMPS power
VBatt 2	P	Phone battery power
VSS	P	Ground plane

## ■ WLAN interface

The phone contains a WLAN transceiver that provides a fully integrated wireless radio solution. The WLAN transceiver supports the IEEE 802.11 standards for low error rate data transfer between mobiles and WLAN networks. Data rates up to 54Mbps are possible in 802.11g mode of operation. WLAN shares the antenna with Bluetooth.

The WLAN software is downloaded from the host engine when WLAN is turned on, over the dedicated SPI interface. The WLAN and Bluetooth co-existence is supported via BTH-WLAN interface.

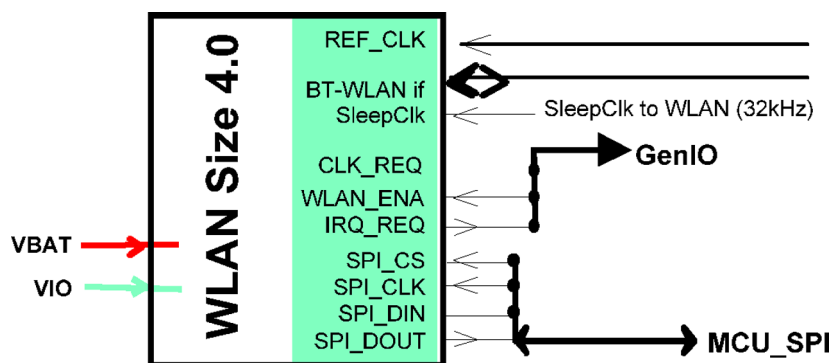


Figure 58 WLAN module

## ■ High-speed USB

### High-speed USB

The device can transmit and receive USB data at high-speed (480 Mbit/s), full-speed (12 Mbit/s) and low-speed (1.5Mbit/s). The external interface is the micro-B connector X3300. The interface between D3300 USB transceiver and micro-B receptacle is the standard USB interface specified in the Universal Serial Bus specification Rev. 2.0. The USB transfers signal and power over four-wire interface, which carries differential

data, Vbus and GND. Signalling occurs over differential data line D+ and D-. The clock is transmitted encoded along with the differential data. ESD protection is done with USB ASIP Z3300. VBUS (+5V) is provided by the host device. The circuit is protected from an overvoltage condition by reference zenner diode V3301.

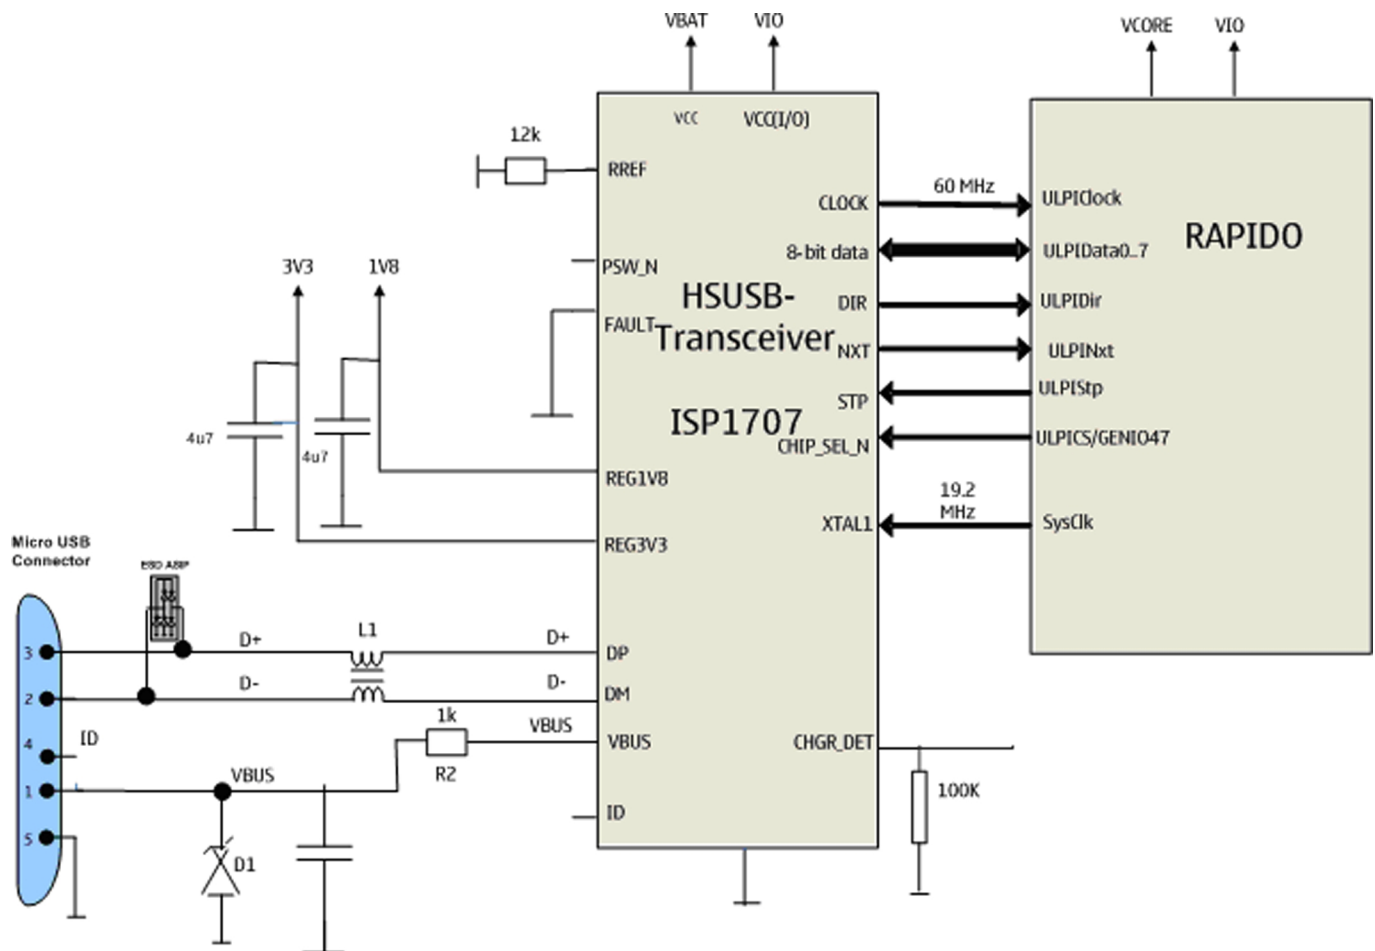


Figure 59 HS USB block diagram

## ■ CBUS interface

CBUS is a main system control bus in BB5. RAPIDO controls the functionality of EM ASICs AVilma (N2200) and Betty (N2300) with CBUS.

CBUS is a four-wire half-duplex master-slave interface. In HW52 CBUS clock frequency is 4.39 MHz.

## ■ FBUS interface

FBUS is a 2-wire serial communication bus between HW52 engine and service SW.

## ■ ECI interface

The ECI (Enhancement Control Interface) is a point-to-point, bi-directional, single line serial bus.

The purpose of the ECI is to identify and authenticate the accessory, and to act as a data bus (intended for control purposes) between the phone and the accessory .

## ■ SIM interface

The device has one SIM (Subscriber Identification Module) interface. It is only accessible if battery is removed. The SIM interface consists of an internal interface between RAPIDO and EM ASIC (N2200), and of an external interface between N2200 and SIM contacts.

The SIM IF is shown in the following figure:

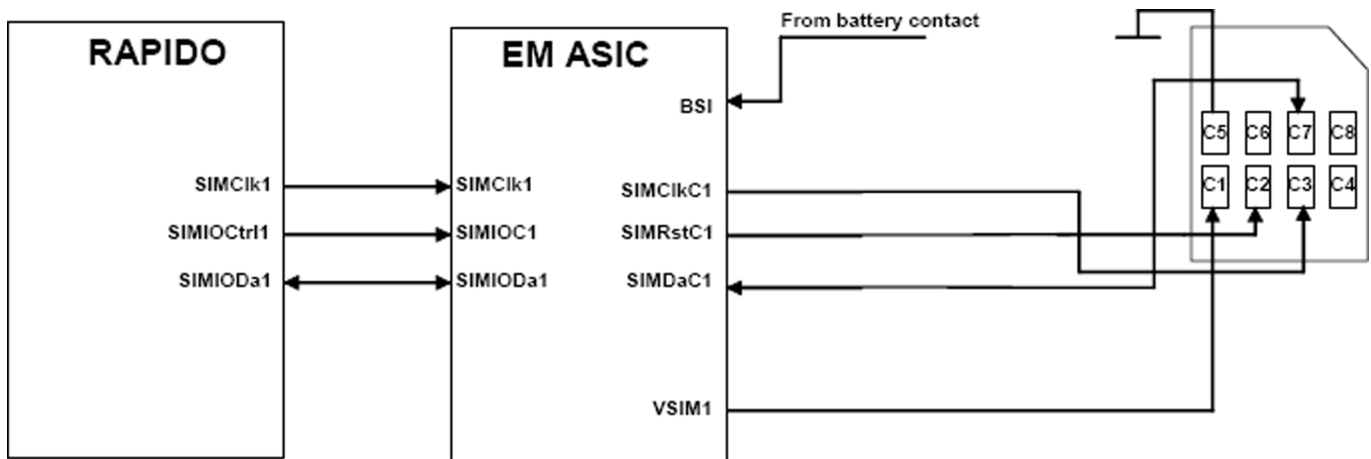


Figure 60 SIM interface

The EM ASIC handles the detection of the SIM card. The detection method is based in the BSI line. Because of the location of the SIM card, removing the battery causes a quick power down of the SIM IF.

The EM ASIC SIM1 interface supports both 1.8 V and 3.0 V SIM cards. The SIM interface voltage is first 1.8 V when the SIM card is inserted, and if the card does not response to the ATR a 3 V interface voltage is used.

## ■ MicroSD card interface

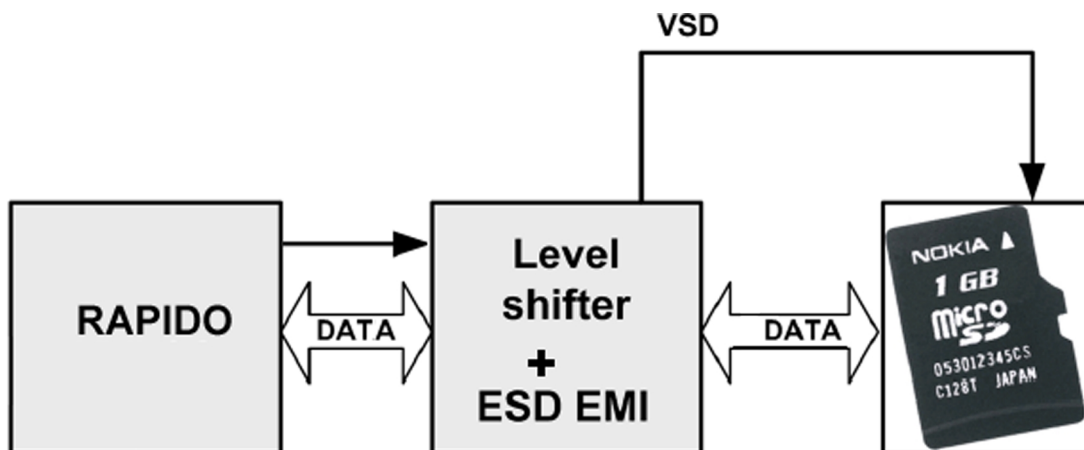


Figure 61 MicroSD card interface

The MicroSD card is connected to the engine by an external level shifter with an ESD protection filter. Supplied voltages:

- VSD: 2.85 V (from level shifter)
- VIO: 1.8 V (from VIO SMPS)

Hot swap is supported, which means that the card may be plugged in/out at any time, without removing the battery.

## ■ Camera concept

### Camera concept

#### Camera subsystem concept

The camera subsystem contains the complete imaging system for the main 5 Mpixel camera. The main features of the imaging and video baseband subsystem are

- Hardware acceleration for image processing
- Support for 5 MPixel main camera
- Support for secondary VGA camera module
- Support for flash LEDs and its driver from ADI

#### Key components

- **DM5001D processor**

Imaging Video baseband is implemented using DM5001D processor. DM5001D processor is a hardware accelerator for Imaging and Video application. This processor controls all the cameras and flashes in the system.

This processor is controlled by Rapido processors via SPI interface. Boot code is downloaded into DM5001D internal memory via the SPI interface at power on. Further application code (self-test, image capture, video capture) is transferred depending on the usage case.

Video and still image data is passed to the Rapido for display and storage after processing over a CCP bus (CCP\_CMT).

- **Primary camera module (5 Mpixel camera)**

The camera module is a SMIA95 compliant and is configured by the DM5001D using I2C control bus. Image data is transferred to the DM5001D over a CCP balanced bus (HIRES\_CCP)

- **Secondary VGA camera module**

The camera module is electrically a SMIA compliant module (not mechanically) and is configured by the DM5001D using I2C control bus. Image data is transferred to the DM5001D over a CCP balanced bus (LORES\_CCP)

- **Flash LED**

The camera flash LED is controlled from the DM5001D via the ADP1653 driver. The driver has GPIO control for STROBE/ENABLE and I2C bus control for configuring.

#### Powering

The camera subsystem is powered from 1.3V, 1.8V and 2.8V discrete regulators. The 1.3V regulator is powered from 1.8V regulator. The 1.8V and 2.8V regulators are powered from VBAT. The LED driver is powered directly from the VBAT supply. These supplies are turned off/on by the host processor using the GPIO (Julie\_REG\_EN), depending on the camera usage.

#### Block diagram

The high-level camera subsystem block diagram is presented in the following figure:

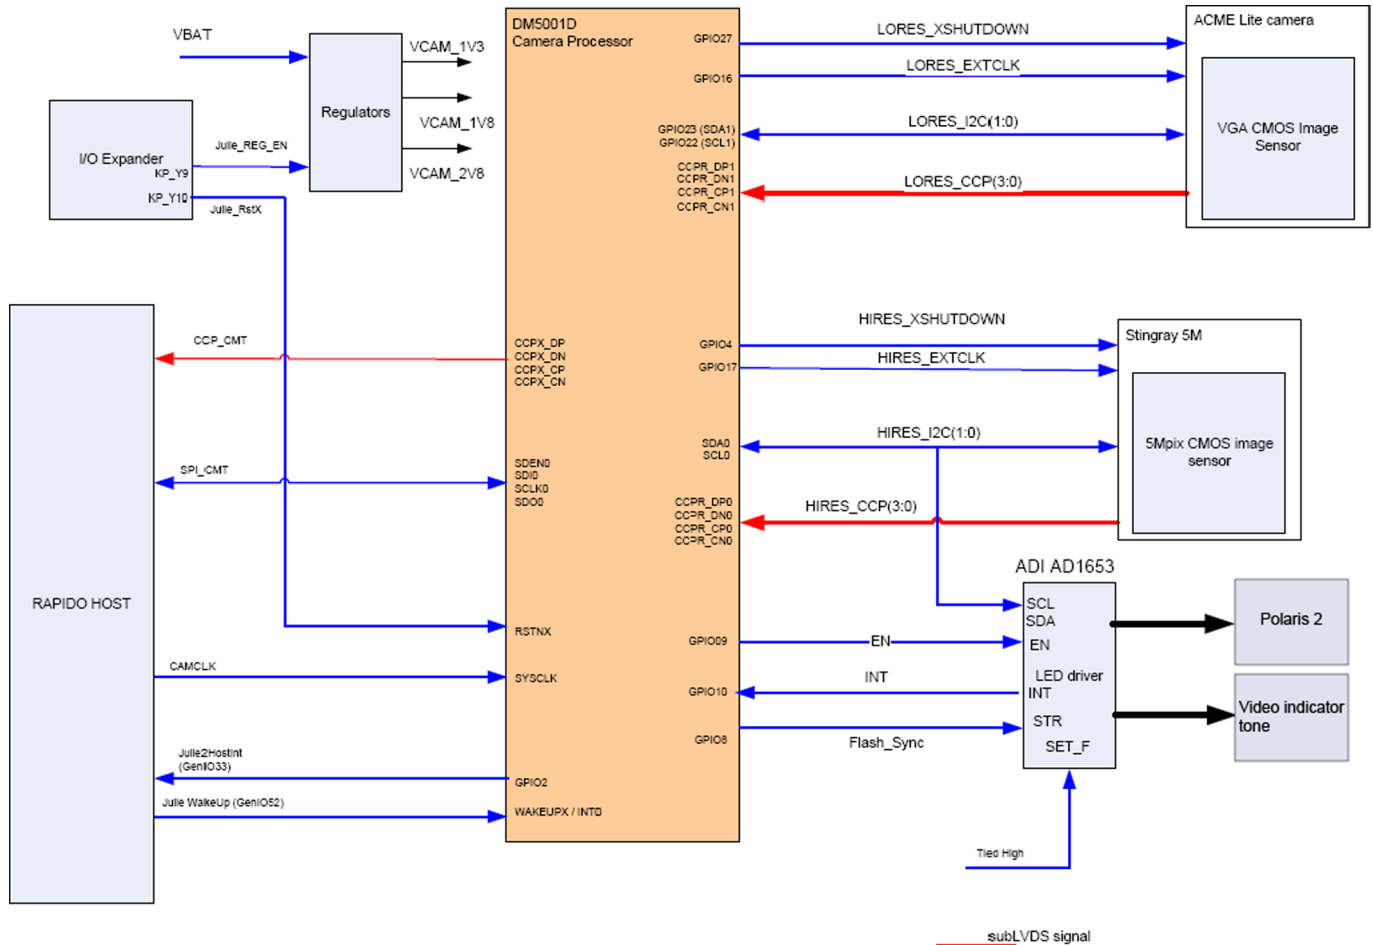


Figure 62 Camera subsystem block diagram

## User interface

### Resistive touch screen

#### Proximity sensor

The proximity sensor is used to turn off the touch input, when the phone is against user's ear during call. This prevents accidental touch signals that could happen when, for example, user's cheek touches the phone. The main parts of the proximity sensor subsystem are:

- Proximity sensor
- Proximity boot (mechanical part)

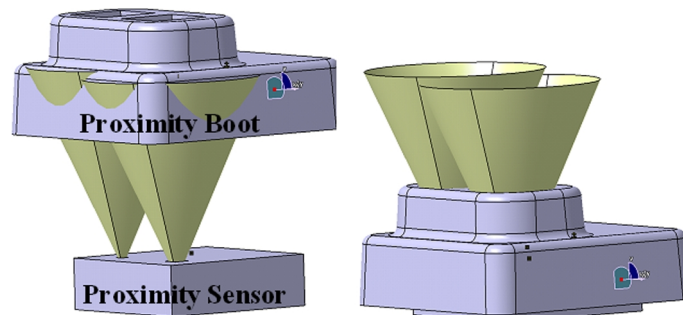


Figure 63 Proximity sensor and boot

The proximity sensor is located on the upper flex assembly.

## Features

The Proximity sensor has following features:

- 2.8V
- 1.8V compatible IOs
- Low power consumption
- 20 mm working area
- Factory calibrated, no calibration required in care
- Pb free/RoHS compliancy

The proximity sensor works by sending out a beam of IR light, and then computing the distance to any nearby objects from characteristics of the returned (reflected) signal. When the object is under 20 mm distance detection will happen and output will go to high state (1.8V).

## Reference design

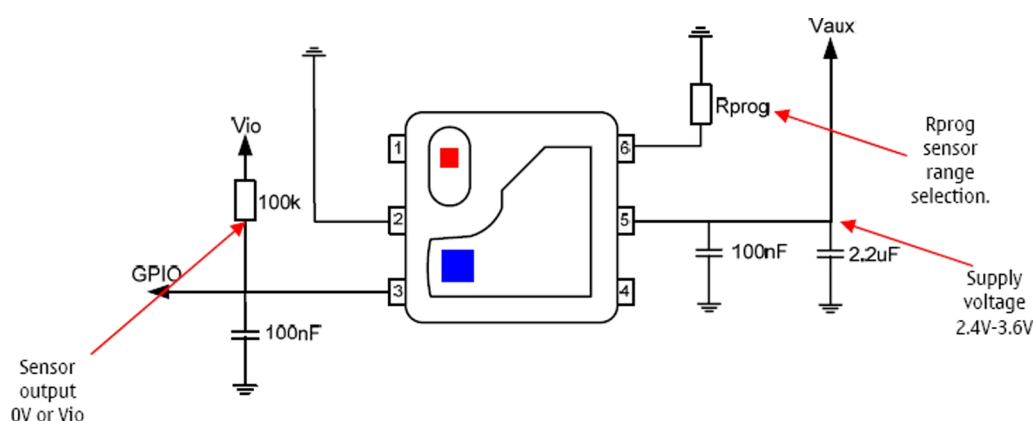


Figure 64 Proximity sensor reference design and measurement points


Pin	Signal name	Description
1	Anode LED	No connection
2	GND	Ground
3	OUT	Sensor output (0V or 1.8V Push-Pull)
4	TEST	No connection
5	VCC	Supply voltage (2.4V - 2.8V)
6	Rprog	Program resistor

## Touch screen controller

TSC2004 (N8105 0n UI-flex) is a touch screen controller for resistive touch pads. It contains a complete ultralow-power, 12-bit, analog-to-digital (A/D) resistive touch screen converter, including drivers and control logic to measure touch pressure.

It also has embedded pre-processing function to reduce the output bus load. The host interface in TSC2004 is I2C.



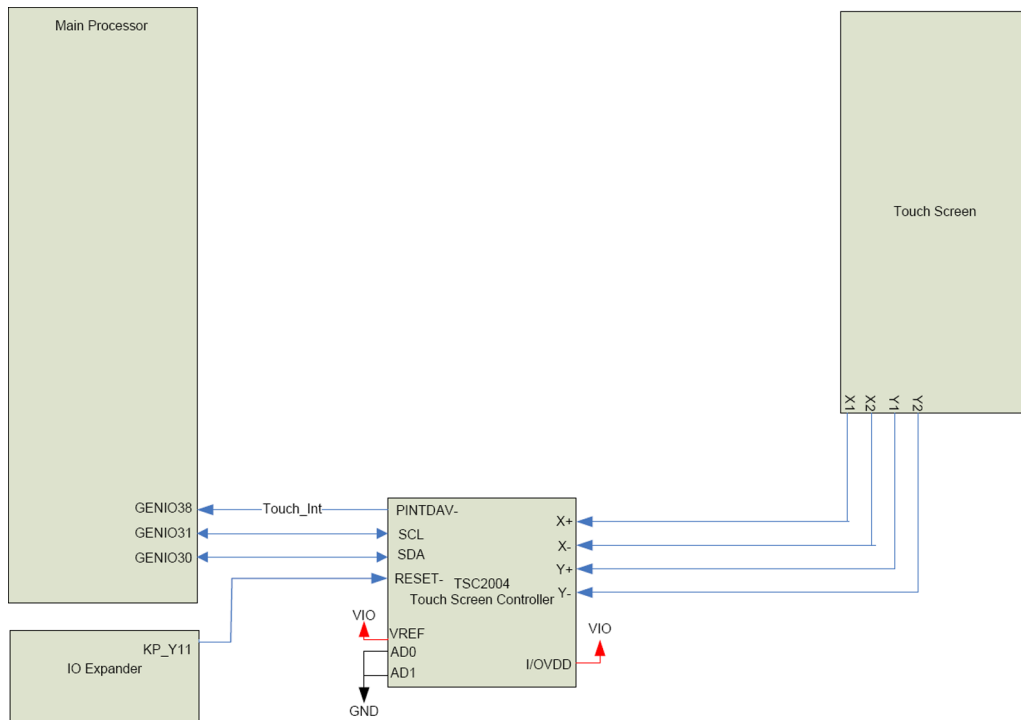

**Figure 65 Touch screen controller**

## Display

### Display

Rapido has an external display buffer with 8Mbit display RAM. The input interfaces for display buffer are ViSSI-12 for image data and LoSSI for commands.

The data interface between display buffer and display is CDP (Compact Display Port), display commands are sent by LoSSI interface. The display backlight control is controlled by the display.

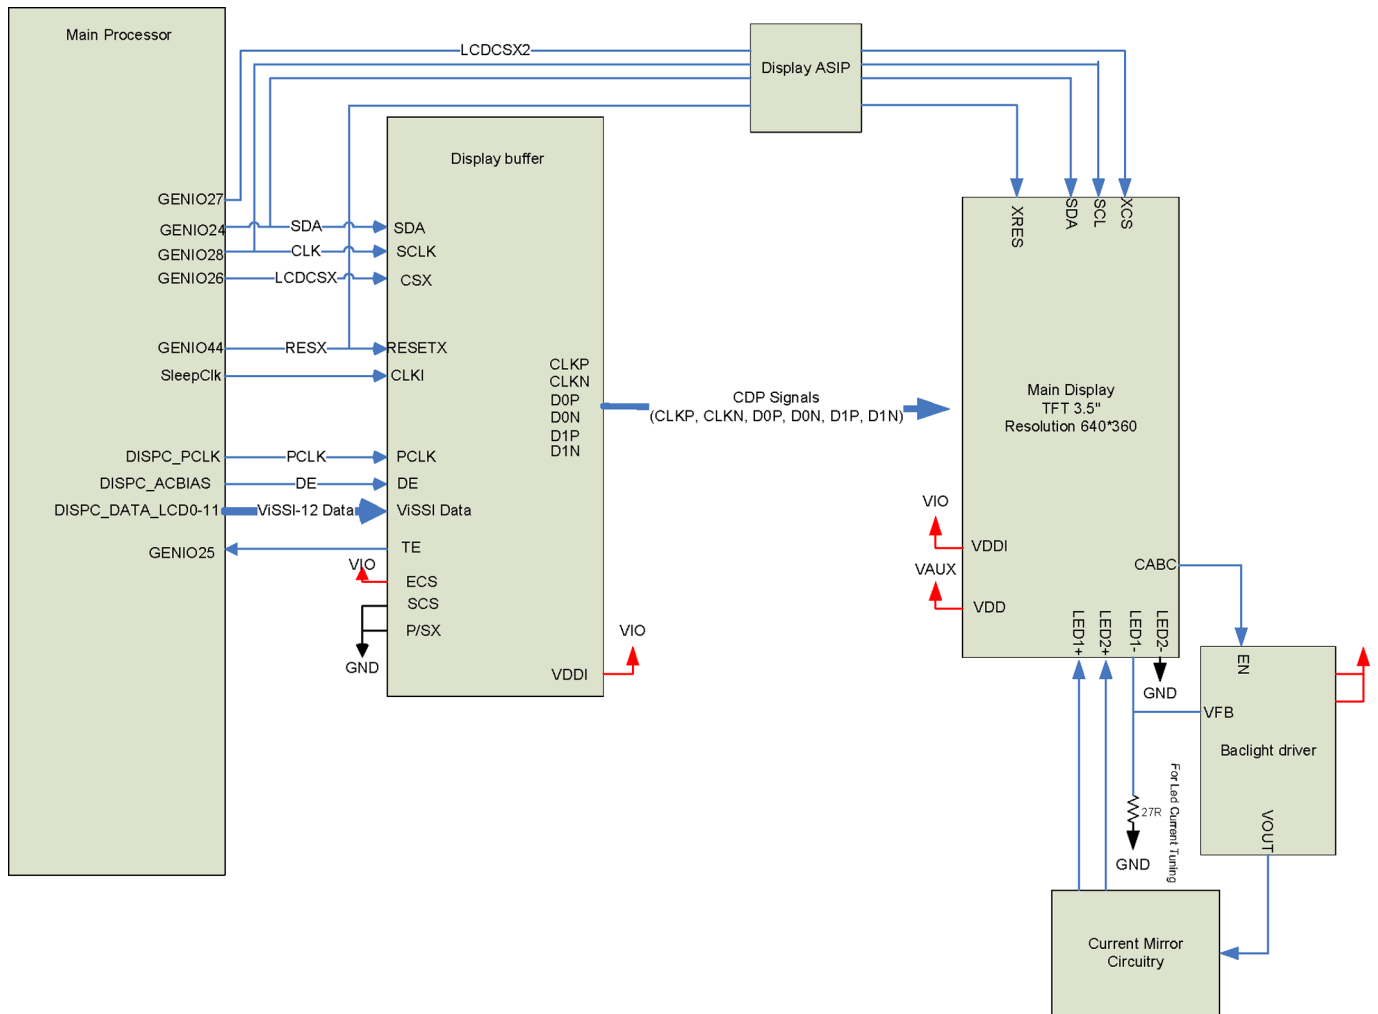


Figure 66 Display block diagram

## Backlight and illumination

This device has two backlighting systems; one for the display and one for the HW keys and other illumination zones.

### Backlighting for HW keys


The L5521 LED controller is used for backlighting the HW keys. There is one LP5521 in the reference HW making it possible to have up to three LED zones. It can also drive the RGB LED.



Display backlights consist of two LED chains, each containing three LEDs in series powered by TK65604AB switching mode power supply. Display backlight brightness is controlled by the CABC signal, and the equality of the current (and thus the brightness) through the two LED chains is ensured by a current mirror.




The Digital Ambient Light Sensor (N8104 on UI-Flex) approximates ambient light. Ambient light level together with CABC and user settings adjust the display and keyboard illumination brightness. The Ambient Light Sensor is located on the UI-Flex.

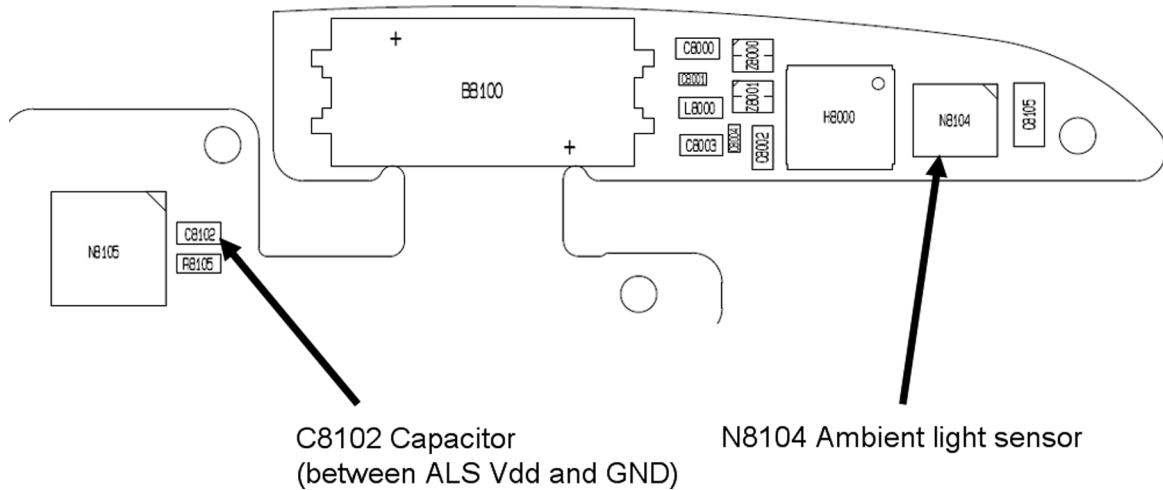

**Figure 69 Digital Ambient Light Sensor location**

It is connected to the I2C bus, and powered by the VOUT (2.5V) voltage.

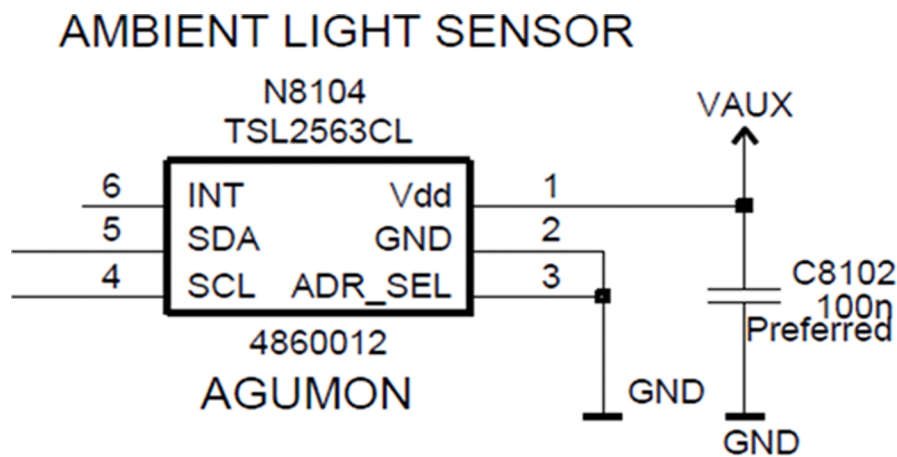

**Figure 70 Digital Ambient light sensor schematics**

## Hall sensor

The hall sensor system is comprised of a hall sensor in the lower part of the phone and a magnet in the upper sliding/pivoting part of the phone.

When the sensor detects a magnet, the output is triggered and the phone changes mode from open to closed accordingly.

## ASICs

### RAPIDOYAWE

RAPIDOYAWE ASIC (D2800) is a die-stacked Processor (RAPIDO) with 3G HSDPA logic (YAWE). RAM memory is integrated into RAPIDO.

### EM ASIC BETTY N2300

The EM ASIC (N2300) includes the following functional blocks:

- Core supply generation
- Charge control circuitry
- Level shifter and regulator for USB/FBUS

- Current gauge for battery current measuring
- LED control for display backlighting
- Digital interface (CBUS)

## **EM ASIC VILMA N2200**

The EM ASIC (N2200) includes the following functional blocks:

- Start up logic and reset control
- Charger detection
- Battery voltage monitoring
- 32.768kHz clock with external crystal
- Real time clock with external backup battery
- SIM card interface
- Stereo audio codecs and amplifiers
- A/D converter
- Regulators
- Vibra interface
- Digital interface (CBUS)

EMC ASIP (Appcation Specified Integrated Passive) have been integrated inside the ASIC. It includes biasing passives for microphone , EMC filter for SIM, microphones etc.

## ■ **Device memories**

### **Combo memory**

The memory of the device consists of stacked DDR SDRAM and MuxedMassMemory (M3). Combo memory DDR/ M3 memory has 1Gb DDR + 2Gb M3.

## ■ **Audio concept**

### **Audio HW architecture**

The functional core of the audio hardware is built around three ASICs: RAPIDOYAWE engine ASIC, mixed signal ASIC Avilma and D/A converter DAC33.

DAC33 converts the digital audio signal to analog and is routed to the FM Transmitter and amplifier TPA6130 which provides an interface for the transducers and the accessory connector.

AVilma provides analog signal for the earpiece and for the D-class audio amplifier TPA2012D2, which drives the integrated stereo handsfree speaker.

There are four audio transducers:

- 5 x 10 mm dynamic earpiece
- One 8 x 12 mm dynamic speaker
- Digital microphone

Avilma provides an output for the dynamic vibra component. All wired audio accessories are connected to the AV accessory connector. A Bluetooth audio and FM radio module, which is connected to RAPIDOYAWE, supports the Bluetooth audio and FM radio functionality.



The internal microphone is used for HandPortable (HP) and Internal HandsFree (IHF) call modes. A digital microphone data and clock line are connected to Rapidovawe and operating voltage is received from Avilma.

### Figure 72 Internal microphone

Internal earpiece is used for the HandPortable (HP) call mode. A dynamic 5 x 10 mm earpiece capsule is connected to Avilma ASIC's differential output EarP and EarN.





**Figure 78 DA converter and headphone amplifier**



## ■ Baseband technical specifications

### External interfaces

Name of connection	Connector reference
HS USB	X3300
MicroSD card	X3200 on Bezel FPC
Battery connector	X2070
SIM card reader	X2700
Accessory (AV) connector	X2001 on Audio FPC
Charging connector	X2000

### SIM IF connections

Pin	Signal	I/O	Engine connection		Notes
1	VSIM1	Out	EM ASIC N2200	VSIM1	Supply voltage to SIM card, 1.8V or 3.0V.
2	SIMRST	Out	EM ASIC N2200	SIM1Rst	Reset signal to SIM card
3	SIMCLK	Out	EM ASIC N2200	SIM1ClkC	Clock signal to SIM card
5	GND	-	GND		Ground
7	SIMDATA	In/Out	EM ASIC N2200	SIM1DaC	Data input / output

### Charging IF electrical characteristics

Table 12 Charging IF electrical characteristics

Description	Parameter	Min	Max	Unit
VCHAR	Vcharge	5.50	9.30	V
VCHAR	Icharge		0.95	A

### Internal interfaces

Name of connection	Component reference
Earpiece	B8100 on UI-Flex
Microphone	B2170
IHF speaker	B2151 on Audio FPC
Main camera	X1450

Name of connection	Component reference
Sub-camera	H8000 on UI-Flex
Main display connector	X8100 on UI-Flex
Vibra	M2110

## Back-up battery interface electrical characteristics

Table 13 Back-up battery electrical characteristics

Description	Parameter	Min	Typ	Max	Unit
Back-Up Battery Voltage	Vback	0	2.5	2.7	V

## RF technical description

### RF block diagram

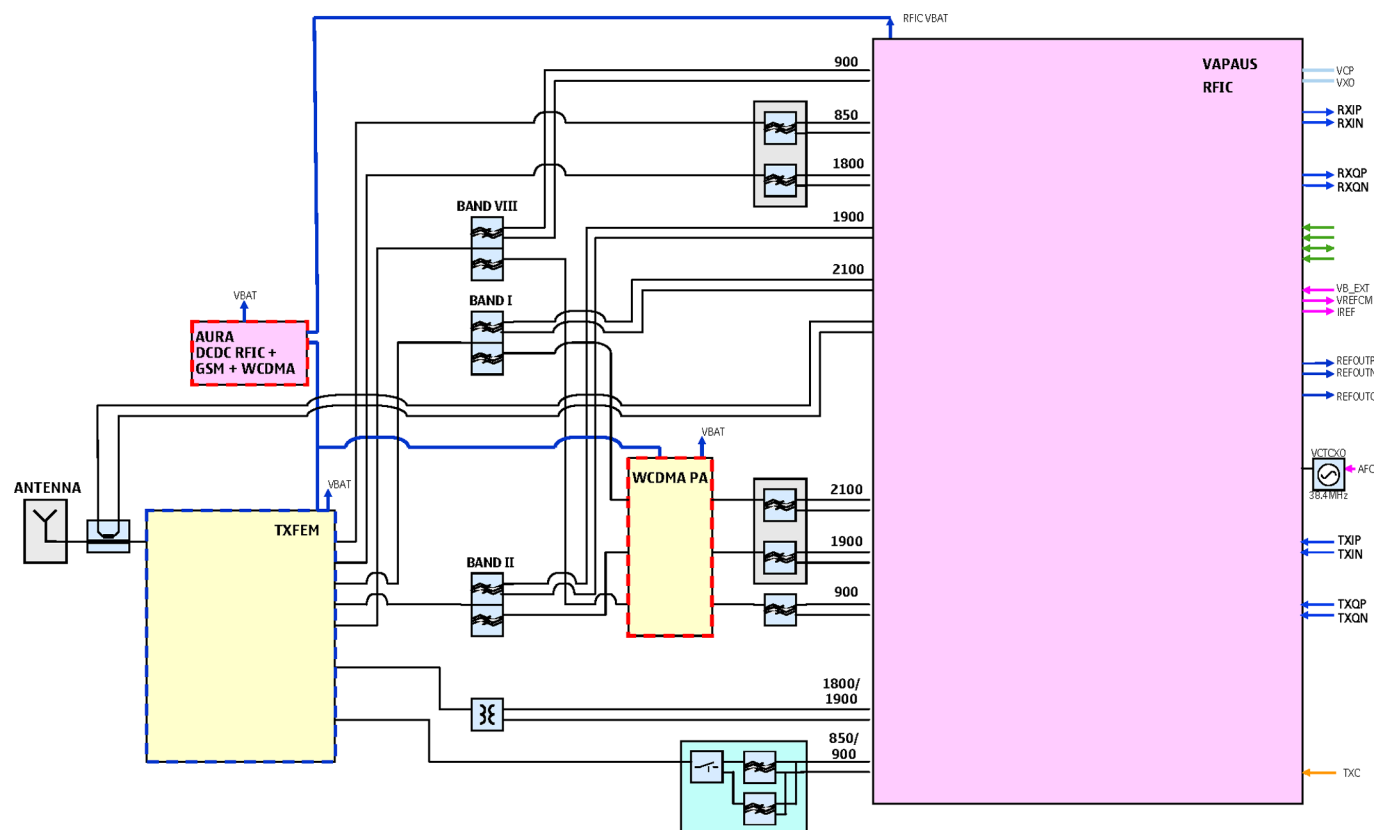


Figure 79 RF block diagram using RF ASIC N7500 (with WCDMA VIII/II/I)



## Receiver (RX)

The receiver functions are implemented in the RF ASIC.

## Transmitter (TX)

The transmitter functions are implemented in the RF ASIC.

Even though the GSM and WCDMA signals are sent via different components, the principles of the transmission is the same.

## ■ Frequency mappings

### GSM850 frequencies

CH	TX	RX	VCO TX	VCO RX	CH	TX	RX	VCO TX	VCO RX	CH	TX	RX	VCO TX	VCO RX
128	824.2	869.2	3296.8	3476.8	170	832.6	877.6	3330.4	3510.4	212	841.0	886.0	3364.0	3544.0
129	824.4	869.4	3297.6	3477.6	171	832.8	877.8	3331.2	3511.2	213	841.2	886.2	3364.8	3544.8
130	824.6	869.6	3298.4	3478.4	172	833.0	878.0	3332.0	3512.0	214	841.4	886.4	3365.6	3545.6
131	824.8	869.8	3299.2	3479.2	173	833.2	878.2	3332.8	3512.8	215	841.6	886.6	3366.4	3546.4
132	825.0	870.0	3300.0	3480.0	174	833.4	878.4	3333.6	3513.6	216	841.8	886.8	3367.2	3547.2
133	825.2	870.2	3300.8	3480.8	175	833.6	878.6	3334.4	3514.4	217	842.0	887.0	3368.0	3548.0
134	825.4	870.4	3301.6	3481.6	176	833.8	878.8	3335.2	3515.2	218	842.2	887.2	3368.8	3548.8
135	825.6	870.6	3302.4	3482.4	177	834.0	879.0	3336.0	3516.0	219	842.4	887.4	3369.6	3549.6
136	825.8	870.8	3303.2	3483.2	178	834.2	879.2	3336.8	3516.8	220	842.6	887.6	3370.4	3550.4
137	826.0	871.0	3304.0	3484.0	179	834.4	879.4	3337.6	3517.6	221	842.8	887.8	3371.2	3551.2
138	826.2	871.2	3304.8	3484.8	180	834.6	879.6	3338.4	3518.4	222	843.0	888.0	3372.0	3552.0
139	826.4	871.4	3305.6	3485.6	181	834.8	879.8	3339.2	3519.2	223	843.2	888.2	3372.8	3552.8
140	826.6	871.6	3306.4	3486.4	182	835.0	880.0	3340.0	3520.0	224	843.4	888.4	3373.6	3553.6
141	826.8	871.8	3307.2	3487.2	183	835.2	880.2	3340.8	3520.8	225	843.6	888.6	3374.4	3554.4
142	827.0	872.0	3308.0	3488.0	184	835.4	880.4	3341.6	3521.6	226	843.8	888.8	3375.2	3555.2
143	827.2	872.2	3308.8	3488.8	185	835.6	880.6	3342.4	3522.4	227	844.0	889.0	3376.0	3556.0
144	827.4	872.4	3309.6	3489.6	186	835.8	880.8	3343.2	3523.2	228	844.2	889.2	3376.8	3556.8
145	827.6	872.6	3310.4	3490.4	187	836.0	881.0	3344.0	3524.0	229	844.4	889.4	3377.6	3557.6
146	827.8	872.8	3311.2	3491.2	188	836.2	881.2	3344.8	3524.8	230	844.6	889.6	3378.4	3558.4
147	828.0	873.0	3312.0	3492.0	189	836.4	881.4	3345.6	3525.6	231	844.8	889.8	3379.2	3559.2
148	828.2	873.2	3312.8	3492.8	190	836.6	881.6	3346.4	3526.4	232	845.0	890.0	3380.0	3560.0
149	828.4	873.4	3313.6	3493.6	191	836.8	881.8	3347.2	3527.2	233	845.2	890.2	3380.8	3560.8
150	828.6	873.6	3314.4	3494.4	192	837.0	882.0	3348.0	3528.0	234	845.4	890.4	3381.6	3561.6
151	828.8	873.8	3315.2	3495.2	193	837.2	882.2	3348.8	3528.8	235	845.6	890.6	3382.4	3562.4
152	829.0	874.0	3316.0	3496.0	194	837.4	882.4	3349.6	3529.6	236	845.8	890.8	3383.2	3563.2
153	829.2	874.2	3316.8	3496.8	195	837.6	882.6	3350.4	3530.4	237	846.0	891.0	3384.0	3564.0
154	829.4	874.4	3317.6	3497.6	196	837.8	882.8	3351.2	3531.2	238	846.2	891.2	3384.8	3564.8
155	829.6	874.6	3318.4	3498.4	197	838.0	883.0	3352.0	3532.0	239	846.4	891.4	3385.6	3565.6
156	829.8	874.8	3319.2	3499.2	198	838.2	883.2	3352.8	3532.8	240	846.6	891.6	3386.4	3566.4
157	830.0	875.0	3320.0	3500.0	199	838.4	883.4	3353.6	3533.6	241	846.8	891.8	3387.2	3567.2
158	830.2	875.2	3320.8	3500.8	200	838.6	883.6	3354.4	3534.4	242	847.0	892.0	3388.0	3568.0
159	830.4	875.4	3321.6	3501.6	201	838.8	883.8	3355.2	3535.2	243	847.2	892.2	3388.8	3568.8
160	830.6	875.6	3322.4	3502.4	202	839.0	884.0	3356.0	3536.0	244	847.4	892.4	3389.6	3569.6
161	830.8	875.8	3323.2	3503.2	203	839.2	884.2	3356.8	3536.8	245	847.6	892.6	3390.4	3570.4
162	831.0	876.0	3324.0	3504.0	204	839.4	884.4	3357.6	3537.6	246	847.8	892.8	3391.2	3571.2
163	831.2	876.2	3324.8	3504.8	205	839.6	884.6	3358.4	3538.4	247	848.0	893.0	3392.0	3572.0
164	831.4	876.4	3325.6	3505.6	206	839.8	884.8	3359.2	3539.2	248	848.2	893.2	3392.8	3572.8
165	831.6	876.6	3326.4	3506.4	207	840.0	885.0	3360.0	3540.0	249	848.4	893.4	3393.6	3573.6
166	831.8	876.8	3327.2	3507.2	208	840.2	885.2	3360.8	3540.8	250	848.6	893.6	3394.4	3574.4
167	832.0	877.0	3328.0	3508.0	209	840.4	885.4	3361.6	3541.6	251	848.8	893.8	3395.2	3575.2

## EGSM900 frequencies

CH	TX	RX	VCO TX	VCO RX	CH	TX	RX	VCO TX	VCO RX	CH	TX	RX	VCO TX	VCO RX
975	880,2	925,2	3520,8	3700,8	1	890,2	935,2	3560,8	3740,8	63	902,6	947,6	3610,4	3790,4
976	880,4	925,4	3521,6	3701,6	2	890,4	935,4	3561,6	3741,6	64	902,8	947,8	3611,2	3791,2
977	880,6	925,6	3522,4	3702,4	3	890,6	935,6	3562,4	3742,4	65	903,0	948,0	3612,0	3792,0
978	880,8	925,8	3523,2	3703,2	4	890,8	935,8	3563,2	3743,2	66	903,2	948,2	3612,8	3792,8
979	881,0	926,0	3524,0	3704,0	5	891,0	936,0	3564,0	3744,0	67	903,4	948,4	3613,6	3793,6
980	881,2	926,2	3524,8	3704,8	6	891,2	936,2	3564,8	3744,8	68	903,6	948,6	3614,4	3794,4
981	881,4	926,4	3525,6	3705,6	7	891,4	936,4	3565,6	3745,6	69	903,8	948,8	3615,2	3795,2
982	881,6	926,6	3526,4	3706,4	8	891,6	936,6	3566,4	3746,4	70	904,0	949,0	3616,0	3796,0
983	881,8	926,8	3527,2	3707,2	9	891,8	936,8	3567,2	3747,2	71	904,2	949,2	3616,8	3796,8
984	882,0	927,0	3528,0	3708,0	10	892,0	937,0	3568,0	3748,0	72	904,4	949,4	3617,6	3797,6
985	882,2	927,2	3528,8	3708,8	11	892,2	937,2	3568,8	3748,8	73	904,6	949,6	3618,4	3798,4
986	882,4	927,4	3529,6	3709,6	12	892,4	937,4	3569,6	3749,6	74	904,8	949,8	3619,2	3799,2
987	882,6	927,6	3530,4	3710,4	13	892,6	937,6	3570,4	3750,4	75	905,0	950,0	3620,0	3800,0
988	882,8	927,8	3531,2	3711,2	14	892,8	937,8	3571,2	3751,2	76	905,2	950,2	3620,8	3800,8
989	883,0	928,0	3532,0	3712,0	15	893,0	938,0	3572,0	3752,0	77	905,4	950,4	3621,6	3801,6
990	883,2	928,2	3532,8	3712,8	16	893,2	938,2	3572,8	3752,8	78	905,6	950,6	3622,4	3802,4
991	883,4	928,4	3533,6	3713,6	17	893,4	938,4	3573,6	3753,6	79	905,8	950,8	3623,2	3803,2
992	883,6	928,6	3534,4	3714,4	18	893,6	938,6	3574,4	3754,4	80	906,0	951,0	3624,0	3804,0
993	883,8	928,8	3535,2	3715,2	19	893,8	938,8	3575,2	3755,2	81	906,2	951,2	3624,8	3804,8
994	884,0	929,0	3536,0	3716,0	20	894,0	939,0	3576,0	3756,0	82	906,4	951,4	3625,6	3805,6
995	884,2	929,2	3536,8	3716,8	21	894,2	939,2	3576,8	3756,8	83	906,6	951,6	3626,4	3806,4
996	884,4	929,4	3537,6	3717,6	22	894,4	939,4	3577,6	3757,6	84	906,8	951,8	3627,2	3807,2
997	884,6	929,6	3538,4	3718,4	23	894,6	939,6	3578,4	3758,4	85	907,0	952,0	3628,0	3808,0
998	884,8	929,8	3539,2	3719,2	24	894,8	939,8	3579,2	3759,2	86	907,2	952,2	3628,8	3808,8
999	885,0	930,0	3540,0	3720,0	25	895,0	940,0	3580,0	3760,0	87	907,4	952,4	3629,6	3809,6
1000	885,2	930,2	3540,8	3720,8	26	895,2	940,2	3580,8	3760,8	88	907,6	952,6	3630,4	3810,4
1001	885,4	930,4	3541,6	3721,6	27	895,4	940,4	3581,6	3761,6	89	907,8	952,8	3631,2	3811,2
1002	885,6	930,6	3542,4	3722,4	28	895,6	940,6	3582,4	3762,4	90	908,0	953,0	3632,0	3812,0
1003	885,8	930,8	3543,2	3723,2	29	895,8	940,8	3583,2	3763,2	91	908,2	953,2	3632,8	3812,8
1004	886,0	931,0	3544,0	3724,0	30	896,0	941,0	3584,0	3764,0	92	908,4	953,4	3633,6	3813,6
1005	886,2	931,2	3544,8	3724,8	31	896,2	941,2	3584,8	3764,8	93	908,6	953,6	3634,4	3814,4
1006	886,4	931,4	3545,6	3725,6	32	896,4	941,4	3585,6	3765,6	94	908,8	953,8	3635,2	3815,2
1007	886,6	931,6	3546,4	3726,4	33	896,6	941,6	3586,4	3766,4	95	909,0	954,0	3636,0	3816,0
1008	886,8	931,8	3547,2	3727,2	34	896,8	941,8	3587,2	3767,2	96	909,2	954,2	3636,8	3816,8
1009	887,0	932,0	3548,0	3728,0	35	897,0	942,0	3588,0	3768,0	97	909,4	954,4	3637,6	3817,6
1010	887,2	932,2	3548,8	3728,8	36	897,2	942,2	3588,8	3768,8	98	909,6	954,6	3638,4	3818,4
1011	887,4	932,4	3549,6	3729,6	37	897,4	942,4	3589,6	3769,6	99	909,8	954,8	3639,2	3819,2
1012	887,6	932,6	3550,4	3730,4	38	897,6	942,6	3590,4	3770,4	100	910,0	955,0	3640,0	3820,0
1013	887,8	932,8	3551,2	3731,2	39	897,8	942,8	3591,2	3771,2	101	910,2	955,2	3640,8	3820,8
1014	888,0	933,0	3552,0	3732,0	40	898,0	943,0	3592,0	3772,0	102	910,4	955,4	3641,6	3821,6
1015	888,2	933,2	3552,8	3732,8	41	898,2	943,2	3592,8	3772,8	103	910,6	955,6	3642,4	3822,4
1016	888,4	933,4	3553,6	3733,6	42	898,4	943,4	3593,6	3773,6	104	910,8	955,8	3643,2	3823,2
1017	888,6	933,6	3554,4	3734,4	43	898,6	943,6	3594,4	3774,4	105	911,0	956,0	3644,0	3824,0
1018	888,8	933,8	3555,2	3735,2	44	898,8	943,8	3595,2	3775,2	106	911,2	956,2	3644,8	3824,8
1019	889,0	934,0	3556,0	3736,0	45	899,0	944,0	3596,0	3776,0	107	911,4	956,4	3645,6	3825,6
1020	889,2	934,2	3556,8	3736,8	46	899,2	944,2	3596,8	3776,8	108	911,6	956,6	3646,4	3826,4
1021	889,4	934,4	3557,6	3737,6	47	899,4	944,4	3597,6	3777,6	109	911,8	956,8	3647,2	3827,2
1022	889,6	934,6	3558,4	3738,4	48	899,6	944,6	3598,4	3778,4	110	912,0	957,0	3648,0	3828,0
1023	889,8	934,8	3559,2	3739,2	49	899,8	944,8	3599,2	3779,2	111	912,2	957,2	3648,8	3828,8
0	890,0	935,0	3560,0	3740,0	50	900,0	945,0	3600,0	3780,0	112	912,4	957,4	3649,6	3829,6
					51	900,2	945,2	3600,8	3780,8	113	912,6	957,6	3650,4	3830,4
					52	900,4	945,4	3601,6	3781,6	114	912,8	957,8	3651,2	3831,2
					53	900,6	945,6	3602,4	3782,4	115	913,0	958,0	3652,0	3832,0
					54	900,8	945,8	3603,2	3783,2	116	913,2	958,2	3652,8	3832,8
					55	901,0	946,0	3604,0	3784,0	117	913,4	958,4	3653,6	3833,6
					56	901,2	946,2	3604,8	3784,8	118	913,6	958,6	3654,4	3834,4
					57	901,4	946,4	3605,6	3785,6	119	913,8	958,8	3655,2	3835,2
					58	901,6	946,6	3606,4	3786,4	120	914,0	959,0	3656,0	3836,0
					59	901,8	946,8	3607,2	3787,2	121	914,2	959,2	3656,8	3836,8
					60	902,0	947,0	3608,0	3788,0	122	914,4	959,4	3657,6	3837,6
					61	902,2	947,2	3608,8	3788,8	123	914,6	959,6	3658,4	3838,4
					62	902,4	947,4	3609,6	3789,6	124	914,8	959,8	3659,2	3839,2



## GSM1800 frequencies

Ch	Tx	Rx	VCO Tx	VCO Rx	Ch	Tx	Rx	VCO Tx	VCO Rx	Ch	Tx	Rx	VCO Tx	VCO Rx	Ch	Tx	Rx	VCO Tx	VCO Rx
512	1710.2	1805.2	3420.4	3610.4	606	1729.0	1824.0	3458.0	3648.0	700	1747.8	1842.8	3495.6	3685.6	793	1766.4	1861.4	3532.8	3722.8
513	1710.4	1805.4	3420.8	3610.8	607	1729.2	1824.2	3458.4	3648.4	701	1748.0	1843.0	3496.0	3686.0	794	1766.6	1861.6	3533.2	3723.2
514	1710.6	1805.6	3421.2	3611.2	608	1729.4	1824.4	3458.8	3648.8	702	1748.2	1843.2	3496.4	3686.4	795	1766.8	1861.8	3533.6	3723.6
515	1710.8	1805.8	3421.6	3611.6	609	1729.6	1824.6	3459.2	3649.2	703	1748.4	1843.4	3496.8	3686.8	796	1767.0	1862.0	3534.0	3724.0
516	1711.0	1806.0	3422.0	3612.0	610	1729.8	1824.8	3459.6	3649.6	704	1748.6	1843.6	3497.2	3687.2	797	1767.2	1862.2	3534.4	3724.4
517	1711.2	1806.2	3422.4	3612.4	611	1730.0	1825.0	3460.0	3650.0	705	1748.8	1843.8	3497.6	3687.6	798	1767.4	1862.4	3534.8	3724.8
518	1711.4	1806.4	3422.8	3612.8	612	1730.2	1825.2	3460.4	3650.4	706	1749.0	1844.0	3498.0	3688.0	799	1767.6	1862.6	3535.2	3725.2
519	1711.6	1806.6	3423.2	3613.2	613	1730.4	1825.4	3460.8	3650.8	707	1749.2	1844.2	3498.4	3688.4	800	1767.8	1862.8	3535.6	3725.6
520	1711.8	1806.8	3423.6	3613.6	614	1730.6	1825.6	3461.2	3651.2	708	1749.4	1844.4	3498.8	3688.8	801	1768.0	1863.0	3536.0	3726.0
521	1712.0	1807.0	3424.0	3614.0	615	1730.8	1825.8	3461.6	3651.6	709	1749.6	1844.6	3499.2	3689.2	802	1768.2	1863.2	3536.4	3726.4
522	1712.2	1807.2	3424.4	3614.4	616	1731.0	1826.0	3462.0	3652.0	710	1749.8	1844.8	3499.6	3689.6	803	1768.4	1863.4	3536.8	3726.8
523	1712.4	1807.4	3424.8	3614.8	617	1731.2	1826.2	3462.4	3652.4	711	1750.0	1845.0	3500.0	3690.0	804	1768.6	1863.6	3537.2	3727.2
524	1712.6	1807.6	3425.2	3615.2	618	1731.4	1826.4	3462.8	3652.8	712	1750.2	1845.2	3500.4	3690.4	805	1768.8	1863.8	3537.6	3727.6
525	1712.8	1807.8	3425.6	3615.6	619	1731.6	1826.6	3463.2	3653.2	713	1750.4	1845.4	3500.8	3690.8	806	1769.0	1864.0	3538.0	3728.0
526	1713.0	1808.0	3426.0	3616.0	620	1731.8	1826.8	3463.6	3653.6	714	1750.6	1845.6	3501.2	3691.2	807	1769.2	1864.2	3538.4	3728.4
527	1713.2	1808.2	3426.4	3616.4	621	1732.0	1827.0	3464.0	3654.0	715	1750.8	1845.8	3501.6	3691.6	808	1769.4	1864.4	3538.8	3728.8
528	1713.4	1808.4	3426.8	3616.8	622	1732.2	1827.2	3464.4	3654.4	716	1751.0	1846.0	3502.0	3692.0	809	1769.6	1864.6	3539.2	3729.2
529	1713.6	1808.6	3427.2	3617.2	623	1732.4	1827.4	3464.8	3654.8	717	1751.2	1846.2	3502.4	3692.4	810	1769.8	1864.8	3539.6	3729.6
530	1713.8	1808.8	3427.6	3617.6	624	1732.6	1827.6	3465.2	3655.2	718	1751.4	1846.4	3502.8	3692.8	811	1770.0	1865.0	3540.0	3730.0
531	1714.0	1809.0	3428.0	3618.0	625	1732.8	1827.8	3465.6	3655.6	719	1751.6	1846.6	3503.2	3693.2	812	1770.2	1865.2	3540.4	3730.4
532	1714.2	1809.2	3428.4	3618.4	626	1733.0	1828.0	3466.0	3656.0	720	1751.8	1846.8	3503.6	3693.6	813	1770.4	1865.4	3540.8	3730.8
533	1714.4	1809.4	3428.8	3618.8	627	1733.2	1828.2	3466.4	3656.4	721	1752.0	1847.0	3504.0	3694.0	814	1770.6	1865.6	3541.2	3731.2
534	1714.6	1809.6	3429.2	3619.2	628	1733.4	1828.4	3466.8	3656.8	722	1752.2	1847.2	3504.4	3694.4	815	1770.8	1865.8	3541.6	3731.6
535	1714.8	1809.8	3429.6	3619.6	629	1733.6	1828.6	3467.2	3657.2	723	1752.4	1847.4	3504.8	3694.8	816	1771.0	1866.0	3542.0	3732.0
536	1715.0	1810.0	3430.0	3620.0	630	1733.8	1828.8	3467.6	3657.6	724	1752.6	1847.6	3505.2	3695.2	817	1771.2	1866.2	3542.4	3732.4
537	1715.2	1810.2	3430.4	3620.4	631	1734.0	1829.0	3468.0	3658.0	725	1752.8	1847.8	3505.6	3695.6	818	1771.4	1866.4	3542.8	3732.8
538	1715.4	1810.4	3430.8	3620.8	632	1734.2	1829.2	3468.4	3658.4	726	1753.0	1848.0	3506.0	3696.0	819	1771.6	1866.6	3543.2	3733.2
539	1715.6	1810.6	3431.2	3621.2	633	1734.4	1829.4	3468.8	3658.8	727	1753.2	1848.2	3506.4	3696.4	820	1771.8	1866.8	3543.6	3733.6
540	1715.8	1810.8	3431.6	3621.6	634	1734.6	1829.6	3469.2	3659.2	728	1753.4	1848.4	3506.8	3696.8	821	1772.0	1867.0	3544.0	3734.0
541	1716.0	1811.0	3432.0	3622.0	635	1734.8	1829.8	3469.6	3659.6	729	1753.6	1848.6	3507.2	3697.2	822	1772.2	1867.2	3544.4	3734.4
542	1716.2	1811.2	3432.4	3622.4	636	1735.0	1830.0	3470.0	3660.0	730	1753.8	1848.8	3507.6	3697.6	823	1772.4	1867.4	3544.8	3734.8
543	1716.4	1811.4	3432.8	3622.8	637	1735.2	1830.2	3470.4	3660.4	731	1754.0	1849.0	3508.0	3698.0	824	1772.6	1867.6	3545.2	3735.2
544	1716.6	1811.6	3433.2	3623.2	638	1735.4	1830.4	3470.8	3660.8	732	1754.2	1849.2	3508.4	3698.4	825	1772.8	1867.8	3545.6	3735.6
545	1716.8	1811.8	3433.6	3623.6	639	1735.6	1830.6	3471.2	3661.2	733	1754.4	1849.4	3508.8	3698.8	826	1773.0	1868.0	3546.0	3736.0
546	1717.0	1812.0	3434.0	3624.0	640	1735.8	1830.8	3471.6	3661.6	734	1754.6	1849.6	3509.2	3699.2	827	1773.2	1868.2	3546.4	3736.4
547	1717.2	1812.2	3434.4	3624.4	641	1736.0	1831.0	3472.0	3662.0	735	1754.8	1849.8	3509.6	3699.6	828	1773.4	1868.4	3546.8	3736.8
548	1717.4	1812.4	3434.8	3624.8	642	1736.2	1831.2	3472.4	3662.4	736	1755.0	1850.0	3510.0	3700.0	829	1773.6	1868.6	3547.2	3737.2
549	1717.6	1812.6	3435.2	3625.2	643	1736.4	1831.4	3472.8	3662.8	737	1755.2	1850.2	3510.4	3700.4	830	1773.8	1868.8	3547.6	3737.6
550	1717.8	1812.8	3435.6	3625.6	644	1736.6	1831.6	3473.2	3663.2	738	1755.4	1850.4	3510.8	3700.8	831	1774.0	1869.0	3548.0	3738.0
551	1718.0	1813.0	3436.0	3626.0	645	1736.8	1831.8	3473.6	3663.6	739	1755.6	1850.6	3511.2	3701.2	832	1774.2	1869.2	3548.4	3738.4
552	1718.2	1813.2	3436.4	3626.4	646	1737.0	1832.0	3474.0	3664.0	740	1755.8	1850.8	3511.6	3701.6	833	1774.4	1869.4	3548.8	3738.8
553	1718.4	1813.4	3436.8	3626.8	647	1737.2	1832.2	3474.4	3664.4	741	1756.0	1851.0	3512.0	3702.0	834	1774.6	1869.6	3549.2	3739.2
554	1718.6	1813.6	3437.2	3627.2	648	1737.4	1832.4	3474.8	3664.8	742	1756.2	1851.2	3512.4	3702.4	835	1774.8	1869.8	3549.6	3739.6
555	1718.8	1813.8	3437.6	3627.6	649	1737.6	1832.6	3475.2	3665.2	743	1756.4	1851.4	3512.8	3702.8	836	1775.0	1870.0	3550.0	3740.0
556	1719.0	1814.0	3438.0	3628.0	650	1737.8	1832.8	3475.6	3665.6	744	1756.6	1851.6	3513.2	3703.2	837	1775.2	1870.2	3550.4	3740.4
557	1719.2	1814.2	3438.4	3628.4	651	1738.0	1833.0	3476.0	3666.0	745	1756.8	1851.8	3513.6	3703.6	838	1775.4	1870.4	3550.8	3740.8
558	1719.4	1814.4	3438.8	3628.8	652	1738.2	1833.2	3476.4	3666.4	746	1757.0	1852.0	3514.0	3704.0	839	1775.6	1870.6	3551.2	3741.2
559	1719.6	1814.6	3439.2	3629.2	653	1738.4	1833.4	3476.8	3666.8	747	1757.2	1852.2	3514.4	3704.4	840	1775.8	1870.8	3551.6	3741.6
560	1719.8	1814.8	3439.6	3629.6	654	1738.6	1833.6	3477.2	3667.2	748	1757.4	1852.4	3514.8	3704.8	841	1776.0	1871.0	3552.0	3742.0
561	1720.0	1815.0	3440.0	3630.0	655	1738.8	1833.8	3477.6	3667.6	749	1757.6	1852.6	3515.2	3705.2	842	1776.2	1871.2	3552.4	3742.4
562	1720.2	1815.2	3440.4	3630.4	656	1739.0	1834.0	3478.0	3668.0	750	1757.8	1852.8	3515.6	3705.6	843	1776.4	1871.4	3552.8	3742.8
563	1720.4	1815.4	3440.8	3630.8	657	1739.2	1834.2	3478.4	3668.4	751	1758.0	1853.0	3516.0	3706.0	844	1776.6	1871.6	3553.2	3743.2
564	1720.6	1815.6	3441.2	3631.2	658	1739.4	1834.4	3478.8	3668.8	752	1758.2	1853.2	3516.4	3706.4	845	1776.8	1871.8	3553.6	3743.6
565	1720.8	1815.8	3441.6	3631.6	659	1739.6	1834.6	3479.2	3669.2	753	1758.4	1853.4	3516.8	3706.8	846	1777.0	1872.0	3554.0	3744.0
566	1721.0	1816.0	3442.0	3632.0	660	1739.8	1834.8	3479.6	3669.6	754	1758.6	1853.6	3517.2	3707.2	847	1777.2	1872.2	3554.4	3744.4
567	1721.2	1816.2	3442.4	3632.4	661	1740.0	1835.0	3480.0	3670.0	755	1758.8	1853.8	3517.6	3707.6	848	1777.4	1872.4	3554.8	3744.8
568	1721.4	1816.4	3442.8	3632.8	662	1740.2	1835.2	3480.4	3670.4	756	1759.0	1854.0	3518.0</						

## GSM1900 frequencies

CH	TX	RX	VCO TX	VCO RX	CH	TX	RX	VCO TX	VCO RX	CH	TX	RX	VCO TX	VCO RX	CH	TX	RX	VCO TX	VCO RX
512	1850.2	1930.2	3700.4	3860.4	608	1869.0	1949.0	3738.0	3898.0	700	1887.8	1967.8	3775.6	3935.6	794	1906.6	1986.6	3813.2	3973.2
513	1850.4	1930.4	3700.6	3860.6	607	1869.2	1949.2	3738.2	3898.2	701	1888.0	1968.0	3776.0	3936.0	795	1906.8	1986.8	3813.4	3973.4
514	1850.6	1930.6	3701.2	3861.2	608	1869.4	1949.4	3738.4	3898.4	702	1888.2	1968.2	3776.2	3936.2	796	1907.0	1987.0	3814.0	3974.0
515	1850.8	1930.8	3701.6	3861.6	609	1869.6	1949.6	3739.2	3899.2	703	1888.4	1968.4	3776.4	3936.4	797	1907.2	1987.2	3814.2	3974.2
516	1851.0	1931.0	3702.0	3862.0	610	1869.8	1949.8	3739.6	3899.6	704	1888.6	1968.6	3777.2	3937.2	798	1907.4	1987.4	3814.4	3974.4
517	1851.2	1931.2	3702.4	3862.4	611	1870.0	1950.0	3740.0	3900.0	705	1888.8	1968.8	3777.6	3937.6	799	1907.6	1987.6	3815.2	3975.2
518	1851.4	1931.4	3702.8	3862.8	612	1870.2	1950.2	3740.4	3900.4	706	1889.0	1969.0	3778.0	3938.0	800	1907.8	1987.8	3815.6	3975.6
519	1851.6	1931.6	3703.2	3863.2	613	1870.4	1950.4	3740.8	3900.8	707	1889.2	1969.2	3778.4	3938.4	801	1908.0	1988.0	3816.0	3976.0
520	1851.8	1931.8	3703.6	3863.6	614	1870.6	1950.6	3741.2	3901.2	708	1889.4	1969.4	3778.8	3938.8	802	1908.2	1988.2	3816.4	3976.4
521	1852.0	1932.0	3704.0	3864.0	615	1870.8	1950.8	3741.6	3901.6	709	1889.6	1969.6	3779.2	3939.2	803	1908.4	1988.4	3816.8	3976.8
522	1852.2	1932.2	3704.4	3864.4	616	1871.0	1951.0	3742.0	3902.0	710	1889.8	1969.8	3779.6	3939.6	804	1908.6	1988.6	3817.2	3977.2
523	1852.4	1932.4	3704.8	3864.8	617	1871.2	1951.2	3742.4	3902.4	711	1890.0	1970.0	3780.0	3940.0	805	1908.8	1988.8	3817.6	3977.6
524	1852.6	1932.6	3705.2	3865.2	618	1871.4	1951.4	3742.8	3902.8	712	1890.2	1970.2	3780.4	3940.4	806	1909.0	1989.0	3818.0	3978.0
525	1852.8	1932.8	3705.6	3865.6	619	1871.6	1951.6	3743.2	3903.2	713	1890.4	1970.4	3780.8	3940.8	807	1909.2	1989.2	3818.4	3978.4
526	1853.0	1933.0	3706.0	3866.0	620	1871.8	1951.8	3743.6	3903.6	714	1890.6	1970.6	3781.2	3941.2	808	1909.4	1989.4	3818.8	3978.8
527	1853.2	1933.2	3706.4	3866.4	621	1872.0	1952.0	3744.0	3904.0	715	1890.8	1970.8	3781.6	3941.6	809	1909.6	1989.6	3819.2	3979.2
528	1853.4	1933.4	3706.8	3866.8	622	1872.2	1952.2	3744.4	3904.4	716	1891.0	1971.0	3782.0	3942.0	810	1909.8	1989.8	3819.6	3979.6
529	1853.6	1933.6	3707.2	3867.2	623	1872.4	1952.4	3744.8	3904.8	717	1891.2	1971.2	3782.4	3942.4					
530	1853.8	1933.8	3707.6	3867.6	624	1872.6	1952.6	3745.2	3905.2	718	1891.4	1971.4	3782.8	3942.8					
531	1854.0	1934.0	3708.0	3868.0	625	1872.8	1952.8	3745.6	3905.6	719	1891.6	1971.6	3783.2	3943.2					
532	1854.2	1934.2	3708.4	3868.4	626	1873.0	1953.0	3746.0	3906.0	720	1891.8	1971.8	3783.6	3943.6					
533	1854.4	1934.4	3708.8	3868.8	627	1873.2	1953.2	3746.4	3906.4	721	1892.0	1972.0	3784.0	3944.0					
534	1854.6	1934.6	3709.2	3869.2	628	1873.4	1953.4	3746.8	3906.8	722	1892.2	1972.2	3784.4	3944.4					
535	1854.8	1934.8	3709.6	3869.6	629	1873.6	1953.6	3747.2	3907.2	723	1892.4	1972.4	3784.8	3944.8					
536	1855.0	1935.0	3710.0	3870.0	630	1873.8	1953.8	3747.6	3907.6	724	1892.6	1972.6	3785.2	3945.2					
537	1855.2	1935.2	3710.4	3870.4	631	1874.0	1954.0	3748.0	3908.0	725	1892.8	1972.8	3785.6	3945.6					
538	1855.4	1935.4	3710.8	3870.8	632	1874.2	1954.2	3748.4	3908.4	726	1893.0	1973.0	3786.0	3946.0					
539	1855.6	1935.6	3711.2	3871.2	633	1874.4	1954.4	3748.8	3908.8	727	1893.2	1973.2	3786.4	3946.4					
540	1855.8	1935.8	3711.6	3871.6	634	1874.6	1954.6	3749.2	3909.2	728	1893.4	1973.4	3786.8	3946.8					
541	1856.0	1936.0	3712.0	3872.0	635	1874.8	1954.8	3749.6	3909.6	729	1893.6	1973.6	3787.2	3947.2					
542	1856.2	1936.2	3712.4	3872.4	636	1875.0	1955.0	3750.0	3910.0	730	1893.8	1973.8	3787.6	3947.6					
543	1856.4	1936.4	3712.8	3872.8	637	1875.2	1955.2	3750.4	3910.4	731	1894.0	1974.0	3788.0	3948.0					
544	1856.6	1936.6	3713.2	3873.2	638	1875.4	1955.4	3750.8	3910.8	732	1894.2	1974.2	3788.4	3948.4					
545	1856.8	1936.8	3713.6	3873.6	639	1875.6	1955.6	3751.2	3911.2	733	1894.4	1974.4	3788.8	3948.8					
546	1857.0	1937.0	3714.0	3874.0	640	1875.8	1955.8	3751.6	3911.6	734	1894.6	1974.6	3789.2	3949.2					
547	1857.2	1937.2	3714.4	3874.4	641	1876.0	1956.0	3752.0	3912.0	735	1894.8	1974.8	3789.6	3949.6					
548	1857.4	1937.4	3714.8	3874.8	642	1876.2	1956.2	3752.4	3912.4	736	1895.0	1975.0	3790.0	3950.0					
549	1857.6	1937.6	3715.2	3875.2	643	1876.4	1956.4	3752.8	3912.8	737	1895.2	1975.2	3790.4	3950.4					
550	1857.8	1937.8	3715.6	3875.6	644	1876.6	1956.6	3753.2	3913.2	738	1895.4	1975.4	3790.8	3950.8					
551	1858.0	1938.0	3716.0	3876.0	645	1876.8	1956.8	3753.6	3913.6	739	1895.6	1975.6	3791.2	3951.2					
552	1858.2	1938.2	3716.4	3876.4	646	1877.0	1957.0	3754.0	3914.0	740	1895.8	1975.8	3791.6	3951.6					
553	1858.4	1938.4	3716.8	3876.8	647	1877.2	1957.2	3754.4	3914.4	741	1896.0	1976.0	3792.0	3952.0					
554	1858.6	1938.6	3717.2	3877.2	648	1877.4	1957.4	3754.8	3914.8	742	1896.2	1976.2	3792.4	3952.4					
555	1858.8	1938.8	3717.6	3877.6	649	1877.6	1957.6	3755.2	3915.2	743	1896.4	1976.4	3792.8	3952.8					
556	1859.0	1939.0	3718.0	3878.0	650	1877.8	1957.8	3755.6	3915.6	744	1896.6	1976.6	3793.2	3953.2					
557	1859.2	1939.2	3718.4	3878.4	651	1878.0	1958.0	3756.0	3916.0	745	1896.8	1976.8	3793.6	3953.6					
558	1859.4	1939.4	3718.8	3878.8	652	1878.2	1958.2	3756.4	3916.4	746	1897.0	1977.0	3794.0	3954.0					
559	1859.6	1939.6	3719.2	3879.2	653	1878.4	1958.4	3756.8	3916.8	747	1897.2	1977.2	3794.4	3954.4					
560	1859.8	1939.8	3719.6	3879.6	654	1878.6	1958.6	3757.2	3917.2	748	1897.4	1977.4	3794.8	3954.8					
561	1860.0	1940.0	3720.0	3880.0	655	1878.8	1958.8	3757.6	3917.6	749	1897.6	1977.6	3795.2	3955.2					
562	1860.2	1940.2	3720.4	3880.4	656	1879.0	1959.0	3758.0	3918.0	750	1897.8	1977.8	3795.6	3955.6					
563	1860.4	1940.4	3720.8	3880.8	657	1879.2	1959.2	3758.4	3918.4	751	1898.0	1978.0	3796.0	3956.0					
564	1860.6	1940.6	3721.2	3881.2	658	1879.4	1959.4	3758.8	3918.8	752	1898.2	1978.2	3796.4	3956.4					
565	1860.8	1940.8	3721.6	3881.6	659	1879.6	1959.6	3759.2	3919.2	753	1898.4	1978.4	3796.8	3956.8					
566	1861.0	1941.0	3722.0	3882.0	660	1879.8	1959.8	3759.6	3919.6	754	1898.6	1978.6	3797.2	3957.2					
567	1861.2	1941.2	3722.4	3882.4	661	1880.0	1960.0	3760.0	3920.0	755	1898.8	1978.8	3797.6	3957.6					
568	1861.4	1941.4	3722.8	3882.8	662	1880.2	1960.2	3760.4	3920.4	756	1899.0	1979.0	3798.0	3958.0					
569	1861.6	1941.6	3723.2	3883.2	663	1880.4	1960.4	3760.8	3920.8	757	1899.2	1979.2	3798.4	3958.4					
570	1861.8	1941.8	3723.6	3883.6	664	1880.6	1960.6	3761.2	3921.2	758	1899.4	1979.4	3798.8	3958.8					
571	1862.0	1942.0	3724.0	3884.0	665	1880.8	1960.8	3761.6	3921.6	759	1899.6	1979.6	3799.2	3959.2					
572	1862.2	1942.2	3724.4	3884.4	666	1881.0	1961.0	3762.0	3922.0	760	1899.8	1979.8	3799.6	3959.6					
573	1862.4	1942.4	3724.8	3884.8	667	1881.2	1961.2	3762.4	3922.4	761	1900.0	1980.0	3800.0	3960.0					
574	1862.6	1942.6	3725.2	3885.2	668	1881.4	1961.4	3762.8	3922.8	762	1900.2	1980.2	3800.4	3960.4					
575	1862.8	1942.8	3725.6	3885.6	669	1881.6	1961.6	3763.2	3923.2	763	1900.4								



## WCDMA 2100 Rx frequencies

Ch	RX	VCO RX	Ch	RX	VCO RX	Ch	RX	VCO RX	Ch	RX	VCO RX	Ch	RX	VCO RX
10562	2112.4	4224.8	10625	2125	4250	10688	2137.6	4275.2	10751	2150.2	4300.4	10814	2162.8	4325.6
10563	2112.6	4225.2	10626	2125.2	4250.4	10689	2137.8	4275.6	10752	2150.4	4300.8	10815	2163	4326
10564	2112.8	4225.6	10627	2125.4	4250.8	10690	2138	4276	10753	2150.6	4301.2	10816	2163.2	4326.4
10565	2113	4226	10628	2125.6	4251.2	10691	2138.2	4276.4	10754	2150.8	4301.6	10817	2163.4	4326.8
10566	2113.2	4226.4	10629	2125.8	4251.6	10692	2138.4	4276.8	10755	2151	4302	10818	2163.6	4327.2
10567	2113.4	4226.8	10630	2126	4252	10693	2138.6	4277.2	10756	2151.2	4302.4	10819	2163.8	4327.6
10568	2113.6	4227.2	10631	2126.2	4252.4	10694	2138.8	4277.6	10757	2151.4	4302.8	10820	2164	4328
10569	2113.8	4227.6	10632	2126.4	4252.8	10695	2139	4278	10758	2151.6	4303.2	10821	2164.2	4328.4
10570	2114	4228	10633	2126.6	4253.2	10696	2139.2	4278.4	10759	2151.8	4303.6	10822	2164.4	4328.8
10571	2114.2	4228.4	10634	2126.8	4253.6	10697	2139.4	4278.8	10760	2152	4304	10823	2164.6	4329.2
10572	2114.4	4228.8	10635	2127	4254	10698	2139.6	4279.2	10761	2152.2	4304.4	10824	2164.8	4329.6
10573	2114.6	4229.2	10636	2127.2	4254.4	10699	2139.8	4279.6	10762	2152.4	4304.8	10825	2165	4330
10574	2114.8	4229.6	10637	2127.4	4254.8	10700	2140	4280	10763	2152.6	4305.2	10826	2165.2	4330.4
10575	2115	4230	10638	2127.6	4255.2	10701	2140.2	4280.4	10764	2152.8	4305.6	10827	2165.4	4330.8
10576	2115.2	4230.4	10639	2127.8	4255.6	10702	2140.4	4280.8	10765	2153	4306	10828	2165.6	4331.2
10577	2115.4	4230.8	10640	2128	4256	10703	2140.6	4281.2	10766	2153.2	4306.4	10829	2165.8	4331.6
10578	2115.6	4231.2	10641	2128.2	4256.4	10704	2140.8	4281.6	10767	2153.4	4306.8	10830	2166	4332
10579	2115.8	4231.6	10642	2128.4	4256.8	10705	2141	4282	10768	2153.6	4307.2	10831	2166.2	4332.4
10580	2116	4232	10643	2128.6	4257.2	10706	2141.2	4282.4	10769	2153.8	4307.6	10832	2166.4	4332.8
10581	2116.2	4232.4	10644	2128.8	4257.6	10707	2141.4	4282.8	10770	2154	4308	10833	2166.6	4333.2
10582	2116.4	4232.8	10645	2129	4258	10708	2141.6	4283.2	10771	2154.2	4308.4	10834	2166.8	4333.6
10583	2116.6	4233.2	10646	2129.2	4258.4	10709	2141.8	4283.6	10772	2154.4	4308.8	10835	2167	4334
10584	2116.8	4233.6	10647	2129.4	4258.8	10710	2142	4284	10773	2154.6	4309.2	10836	2167.2	4334.4
10585	2117	4234	10648	2129.6	4259.2	10711	2142.2	4284.4	10774	2154.8	4309.6	10837	2167.4	4334.8
10586	2117.2	4234.4	10649	2129.8	4259.6	10712	2142.4	4284.8	10775	2155	4310	10838	2167.6	4335.2
10587	2117.4	4234.8	10650	2130	4260	10713	2142.6	4285.2	10776	2155.2	4310.4			
10588	2117.6	4235.2	10651	2130.2	4260.4	10714	2142.8	4285.6	10777	2155.4	4310.8			
10589	2117.8	4235.6	10652	2130.4	4260.8	10715	2143	4286	10778	2155.6	4311.2			
10590	2118	4236	10653	2130.6	4261.2	10716	2143.2	4286.4	10779	2155.8	4311.6			
10591	2118.2	4236.4	10654	2130.8	4261.6	10717	2143.4	4286.8	10780	2156	4312			
10592	2118.4	4236.8	10655	2131	4262	10718	2143.6	4287.2	10781	2156.2	4312.4			
10593	2118.6	4237.2	10656	2131.2	4262.4	10719	2143.8	4287.6	10782	2156.4	4312.8			
10594	2118.8	4237.6	10657	2131.4	4262.8	10720	2144	4288	10783	2156.6	4313.2			
10595	2119	4238	10658	2131.6	4263.2	10721	2144.2	4288.4	10784	2156.8	4313.6			
10596	2119.2	4238.4	10659	2131.8	4263.6	10722	2144.4	4288.8	10785	2157	4314			
10597	2119.4	4238.8	10660	2132	4264	10723	2144.6	4289.2	10786	2157.2	4314.4			
10598	2119.6	4239.2	10661	2132.2	4264.4	10724	2144.8	4289.6	10787	2157.4	4314.8			
10599	2119.8	4239.6	10662	2132.4	4264.8	10725	2145	4290	10788	2157.6	4315.2			
10600	2120	4240	10663	2132.6	4265.2	10726	2145.2	4290.4	10789	2157.8	4315.6			
10601	2120.2	4240.4	10664	2132.8	4265.6	10727	2145.4	4290.8	10790	2158	4316			
10602	2120.4	4240.8	10665	2133	4266	10728	2145.6	4291.2	10791	2158.2	4316.4			
10603	2120.6	4241.2	10666	2133.2	4266.4	10729	2145.8	4291.6	10792	2158.4	4316.8			
10604	2120.8	4241.6	10667	2133.4	4266.8	10730	2146	4292	10793	2158.6	4317.2			
10605	2121	4242	10668	2133.6	4267.2	10731	2146.2	4292.4	10794	2158.8	4317.6			
10606	2121.2	4242.4	10669	2133.8	4267.6	10732	2146.4	4292.8	10795	2159	4318			
10607	2121.4	4242.8	10670	2134	4268	10733	2146.6	4293.2	10796	2159.2	4318.4			
10608	2121.6	4243.2	10671	2134.2	4268.4	10734	2146.8	4293.6	10797	2159.4	4318.8			
10609	2121.8	4243.6	10672	2134.4	4268.8	10735	2147	4294	10798	2159.6	4319.2			
10610	2122	4244	10673	2134.6	4269.2	10736	2147.2	4294.4	10799	2159.8	4319.6			
10611	2122.2	4244.4	10674	2134.8	4269.6	10737	2147.4	4294.8	10800	2160	4320			
10612	2122.4	4244.8	10675	2135	4270	10738	2147.6	4295.2	10801	2160.2	4320.4			
10613	2122.6	4245.2	10676	2135.2	4270.4	10739	2147.8	4295.6	10802	2160.4	4320.8			
10614	2122.8	4245.6	10677	2135.4	4270.8	10740	2148	4296	10803	2160.6	4321.2			
10615	2123	4246	10678	2135.6	4271.2	10741	2148.2	4296.4	10804	2160.8	4321.6			
10616	2123.2	4246.4	10679	2135.8	4271.6	10742	2148.4	4296.8	10805	2161	4322			
10617	2123.4	4246.8	10680	2136	4272	10743	2148.6	4297.2	10806	2161.2	4322.4			
10618	2123.6	4247.2	10681	2136.2	4272.4	10744	2148.8	4297.6	10807	2161.4	4322.8			
10619	2123.8	4247.6	10682	2136.4	4272.8	10745	2149	4298	10808	2161.6	4323.2			
10620	2124	4248	10683	2136.6	4273.2	10746	2149.2	4298.4	10809	2161.8	4323.6			
10621	2124.2	4248.4	10684	2136.8	4273.6	10747	2149.4	4298.8	10810	2162	4324			
10622	2124.4	4248.8	10685	2137	4274	10748	2149.6	4299.2	10811	2162.2	4324.4			
10623	2124.6	4249.2	10686	2137.2	4274.4	10749	2149.8	4299.6	10812	2162.4	4324.8			
10624	2124.8	4249.6	10687	2137.4	4274.8	10750	2150	4300	10813	2162.6	4325.2			



## WCDMA 2100 Tx frequencies

Ch	Tx	VCO Tx	Ch	Tx	VCO Tx	Ch	Tx	VCO Tx	Ch	Tx	VCO Tx	Ch	Tx	VCO Tx
9612	1922.4	3844.8	9671	1934.2	3868.4	9730	1946	3892	9789	1957.8	3915.6	9848	1969.6	3939.2
9613	1922.6	3845.2	9672	1934.4	3868.8	9731	1946.2	3892.4	9790	1958	3916	9849	1969.8	3939.6
9614	1922.8	3845.6	9673	1934.6	3869.2	9732	1946.4	3892.8	9791	1958.2	3916.4	9850	1970	3940
9615	1923	3846	9674	1934.8	3869.6	9733	1946.6	3893.2	9792	1958.4	3916.8	9851	1970.2	3940.4
9616	1923.2	3846.4	9675	1935	3870	9734	1946.8	3893.6	9793	1958.6	3917.2	9852	1970.4	3940.8
9617	1923.4	3846.8	9676	1935.2	3870.4	9735	1947	3894	9794	1958.8	3917.6	9853	1970.6	3941.2
9618	1923.6	3847.2	9677	1935.4	3870.8	9736	1947.2	3894.4	9795	1959	3918	9854	1970.8	3941.6
9619	1923.8	3847.6	9678	1935.6	3871.2	9737	1947.4	3894.8	9796	1959.2	3918.4	9855	1971	3942
9620	1924	3848	9679	1935.8	3871.6	9738	1947.6	3895.2	9797	1959.4	3918.8	9856	1971.2	3942.4
9621	1924.2	3848.4	9680	1936	3872	9739	1947.8	3895.6	9798	1959.6	3919.2	9857	1971.4	3942.8
9622	1924.4	3848.8	9681	1936.2	3872.4	9740	1948	3896	9799	1959.8	3919.6	9858	1971.6	3943.2
9623	1924.6	3849.2	9682	1936.4	3872.8	9741	1948.2	3896.4	9800	1960	3920	9859	1971.8	3943.6
9624	1924.8	3849.6	9683	1936.6	3873.2	9742	1948.4	3896.8	9801	1960.2	3920.4	9860	1972	3944
9625	1925	3850	9684	1936.8	3873.6	9743	1948.6	3897.2	9802	1960.4	3920.8	9861	1972.2	3944.4
9626	1925.2	3850.4	9685	1937	3874	9744	1948.8	3897.6	9803	1960.6	3921.2	9862	1972.4	3944.8
9627	1925.4	3850.8	9686	1937.2	3874.4	9745	1949	3898	9804	1960.8	3921.6	9863	1972.6	3945.2
9628	1925.6	3851.2	9687	1937.4	3874.8	9746	1949.2	3898.4	9805	1961	3922	9864	1972.8	3945.6
9629	1925.8	3851.6	9688	1937.6	3875.2	9747	1949.4	3898.8	9806	1961.2	3922.4	9865	1973	3946
9630	1926	3852	9689	1937.8	3875.6	9748	1949.6	3899.2	9807	1961.4	3922.8	9866	1973.2	3946.4
9631	1926.2	3852.4	9690	1938	3876	9749	1949.8	3899.6	9808	1961.6	3923.2	9867	1973.4	3946.8
9632	1926.4	3852.8	9691	1938.2	3876.4	9750	1950	3900	9809	1961.8	3923.6	9868	1973.6	3947.2
9633	1926.6	3853.2	9692	1938.4	3876.8	9751	1950.2	3900.4	9810	1962	3924	9869	1973.8	3947.6
9634	1926.8	3853.6	9693	1938.6	3877.2	9752	1950.4	3900.8	9811	1962.2	3924.4	9870	1974	3948
9635	1927	3854	9694	1938.8	3877.6	9753	1950.6	3901.2	9812	1962.4	3924.8	9871	1974.2	3948.4
9636	1927.2	3854.4	9695	1939	3878	9754	1950.8	3901.6	9813	1962.6	3925.2	9872	1974.4	3948.8
9637	1927.4	3854.8	9696	1939.2	3878.4	9755	1951	3902	9814	1962.8	3925.6	9873	1974.6	3949.2
9638	1927.6	3855.2	9697	1939.4	3878.8	9756	1951.2	3902.4	9815	1963	3926	9874	1974.8	3949.6
9639	1927.8	3855.6	9698	1939.6	3879.2	9757	1951.4	3902.8	9816	1963.2	3926.4	9875	1975	3950
9640	1928	3856	9699	1939.8	3879.6	9758	1951.6	3903.2	9817	1963.4	3926.8	9876	1975.2	3950.4
9641	1928.2	3856.4	9700	1940	3880	9759	1951.8	3903.6	9818	1963.6	3927.2	9877	1975.4	3950.8
9642	1928.4	3856.8	9701	1940.2	3880.4	9760	1952	3904	9819	1963.8	3927.6	9878	1975.6	3951.2
9643	1928.6	3857.2	9702	1940.4	3880.8	9761	1952.2	3904.4	9820	1964	3928	9879	1975.8	3951.6
9644	1928.8	3857.6	9703	1940.6	3881.2	9762	1952.4	3904.8	9821	1964.2	3928.4	9880	1976	3952
9645	1929	3858	9704	1940.8	3881.6	9763	1952.6	3905.2	9822	1964.4	3928.8	9881	1976.2	3952.4
9646	1929.2	3858.4	9705	1941	3882	9764	1952.8	3905.6	9823	1964.6	3929.2	9882	1976.4	3952.8
9647	1929.4	3858.8	9706	1941.2	3882.4	9765	1953	3906	9824	1964.8	3929.6	9883	1976.6	3953.2
9648	1929.6	3859.2	9707	1941.4	3882.8	9766	1953.2	3906.4	9825	1965	3930	9884	1976.8	3953.6
9649	1929.8	3859.6	9708	1941.6	3883.2	9767	1953.4	3906.8	9826	1965.2	3930.4	9885	1977	3954
9650	1930	3860	9709	1941.8	3883.6	9768	1953.6	3907.2	9827	1965.4	3930.8	9886	1977.2	3954.4
9651	1930.2	3860.4	9710	1942	3884	9769	1953.8	3907.6	9828	1965.6	3931.2	9887	1977.4	3954.8
9652	1930.4	3860.8	9711	1942.2	3884.4	9770	1954	3908	9829	1965.8	3931.6	9888	1977.6	3955.2
9653	1930.6	3861.2	9712	1942.4	3884.8	9771	1954.2	3908.4	9830	1966	3932			
9654	1930.8	3861.6	9713	1942.6	3885.2	9772	1954.4	3908.8	9831	1966.2	3932.4			
9655	1931	3862	9714	1942.8	3885.6	9773	1954.6	3909.2	9832	1966.4	3932.8			
9656	1931.2	3862.4	9715	1943	3886	9774	1954.8	3909.6	9833	1966.6	3933.2			
9657	1931.4	3862.8	9716	1943.2	3886.4	9775	1955	3910	9834	1966.8	3933.6			
9658	1931.6	3863.2	9717	1943.4	3886.8	9776	1955.2	3910.4	9835	1967	3934			
9659	1931.8	3863.6	9718	1943.6	3887.2	9777	1955.4	3910.8	9836	1967.2	3934.4			
9660	1932	3864	9719	1943.8	3887.6	9778	1955.6	3911.2	9837	1967.4	3934.8			
9661	1932.2	3864.4	9720	1944	3888	9779	1955.8	3911.6	9838	1967.6	3935.2			
9662	1932.4	3864.8	9721	1944.2	3888.4	9780	1956	3912	9839	1967.8	3935.6			
9663	1932.6	3865.2	9722	1944.4	3888.8	9781	1956.2	3912.4	9840	1968	3936			
9664	1932.8	3865.6	9723	1944.6	3889.2	9782	1956.4	3912.8	9841	1968.2	3936.4			
9665	1933	3866	9724	1944.8	3889.6	9783	1956.6	3913.2	9842	1968.4	3936.8			
9666	1933.2	3866.4	9725	1945	3890	9784	1956.8	3913.6	9843	1968.6	3937.2			
9667	1933.4	3866.8	9726	1945.2	3890.4	9785	1957	3914	9844	1968.8	3937.6			
9668	1933.6	3867.2	9727	1945.4	3890.8	9786	1957.2	3914.4	9845	1969	3938			
9669	1933.8	3867.6	9728	1945.6	3891.2	9787	1957.4	3914.8	9846	1969.2	3938.4			
9670	1934	3868	9729	1945.8	3891.6	9788	1957.6	3915.2	9847	1969.4	3938.8			

## WCDMA II (1900) frequencies

TX CH	RX CH	TX	RX	VCO TX	VCO RX	TX CH	RX CH	TX	RX	VCO TX	VCO RX	TX CH	RX CH	TX	RX	VCO TX	VCO RX
9262	9662	1852.4	1932.4	3704.8	3864.8	9355	9755	1871.0	1951.0	3742.0	3902.0	9448	9848	1889.6	1969.6	3779.2	3939.2
12	412	1852.5	1932.5	3705.0	3865.0	9356	9756	1871.2	1951.2	3742.4	3902.4	9449	9849	1889.8	1969.8	3779.6	3939.6
9263	9663	1852.6	1932.6	3705.2	3865.2	9357	9757	1871.4	1951.4	3742.8	3902.8	9450	9850	1890.0	1970.0	3780.0	3940.0
9264	9664	1852.8	1932.8	3705.6	3865.6	9358	9758	1871.6	1951.6	3743.2	3903.2	9451	9851	1890.2	1970.2	3780.4	3940.4
9265	9665	1853.0	1933.0	3706.0	3866.0	9359	9759	1871.8	1951.8	3743.6	3903.6	9452	9852	1890.4	1970.4	3780.8	3940.8
9266	9666	1853.2	1933.2	3706.4	3866.4	9360	9760	1872.0	1952.0	3744.0	3904.0	9453	9853	1890.6	1970.6	3781.2	3941.2
9267	9667	1853.4	1933.4	3706.8	3866.8	9361	9761	1872.2	1952.2	3744.4	3904.4	9454	9854	1890.8	1970.8	3781.6	3941.6
9268	9668	1853.6	1933.6	3707.2	3867.2	9362	9762	1872.4	1952.4	3744.8	3904.8	9455	9855	1891.0	1971.0	3782.0	3942.0
9269	9669	1853.8	1933.8	3707.6	3867.6	112	512	1872.5	1952.5	3745.0	3905.0	9456	9856	1891.2	1971.2	3782.4	3942.4
9270	9670	1854.0	1934.0	3708.0	3868.0	9363	9763	1872.6	1952.6	3745.2	3905.2	9457	9857	1891.4	1971.4	3782.8	3942.8
9271	9671	1854.2	1934.2	3708.4	3868.4	9364	9764	1872.8	1952.8	3745.6	3905.6	9458	9858	1891.6	1971.6	3783.2	3943.2
9272	9672	1854.4	1934.4	3708.8	3868.8	9365	9765	1873.0	1953.0	3746.0	3906.0	9459	9859	1891.8	1971.8	3783.6	3943.6
9273	9673	1854.6	1934.6	3709.2	3869.2	9366	9766	1873.2	1953.2	3746.4	3906.4	9460	9860	1892.0	1972.0	3784.0	3944.0
9274	9674	1854.8	1934.8	3709.6	3869.6	9367	9767	1873.4	1953.4	3746.8	3906.8	9461	9861	1892.2	1972.2	3784.4	3944.4
9275	9675	1855.0	1935.0	3710.0	3870.0	9368	9768	1873.6	1953.6	3747.2	3907.2	9462	9862	1892.4	1972.4	3784.8	3944.8
9276	9676	1855.2	1935.2	3710.4	3870.4	9369	9769	1873.8	1953.8	3747.6	3907.6	212	612	1892.5	1972.5	3785.0	3945.0
9277	9677	1855.4	1935.4	3710.8	3870.8	9370	9770	1874.0	1954.0	3748.0	3908.0	9463	9863	1892.6	1972.6	3785.2	3945.2
9278	9678	1855.6	1935.6	3711.2	3871.2	9371	9771	1874.2	1954.2	3748.4	3908.4	9464	9864	1892.8	1972.8	3785.6	3945.6
9279	9679	1855.8	1935.8	3711.6	3871.6	9372	9772	1874.4	1954.4	3748.8	3908.8	9465	9865	1893.0	1973.0	3786.0	3946.0
9280	9680	1856.0	1936.0	3712.0	3872.0	9373	9773	1874.6	1954.6	3749.2	3909.2	9466	9866	1893.2	1973.2	3786.4	3946.4
9281	9681	1856.2	1936.2	3712.4	3872.4	9374	9774	1874.8	1954.8	3749.6	3909.6	9467	9867	1893.4	1973.4	3786.8	3946.8
9282	9682	1856.4	1936.4	3712.8	3872.8	9375	9775	1875.0	1955.0	3750.0	3910.0	9468	9868	1893.6	1973.6	3787.2	3947.2
9283	9683	1856.6	1936.6	3713.2	3873.2	9376	9776	1875.2	1955.2	3750.4	3910.4	9469	9869	1893.8	1973.8	3787.6	3947.6
9284	9684	1856.8	1936.8	3713.6	3873.6	9377	9777	1875.4	1955.4	3750.8	3910.8	9470	9870	1894.0	1974.0	3788.0	3948.0
9285	9685	1857.0	1937.0	3714.0	3874.0	9378	9778	1875.6	1955.6	3751.2	3911.2	9471	9871	1894.2	1974.2	3788.4	3948.4
9286	9686	1857.2	1937.2	3714.4	3874.4	9379	9779	1875.8	1955.8	3751.6	3911.6	9472	9872	1894.4	1974.4	3788.8	3948.8
9287	9687	1857.4	1937.4	3714.8	3874.8	9380	9780	1876.0	1956.0	3752.0	3912.0	9473	9873	1894.6	1974.6	3789.2	3949.2
37	437	1857.5	1937.5	3715.0	3875.0	9381	9781	1876.2	1956.2	3752.4	3912.4	9474	9874	1894.8	1974.8	3789.6	3949.6
9288	9688	1857.6	1937.6	3715.2	3875.2	9382	9782	1876.4	1956.4	3752.8	3912.8	9475	9875	1895.0	1975.0	3790.0	3950.0
9289	9689	1857.8	1937.8	3715.6	3875.6	9383	9783	1876.6	1956.6	3753.2	3913.2	9476	9876	1895.2	1975.2	3790.4	3950.4
9290	9690	1858.0	1938.0	3716.0	3876.0	9384	9784	1876.8	1956.8	3753.6	3913.6	9477	9877	1895.4	1975.4	3790.8	3950.8
9291	9691	1858.2	1938.2	3716.4	3876.4	9385	9785	1877.0	1957.0	3754.0	3914.0	9478	9878	1895.6	1975.6	3791.2	3951.2
9292	9692	1858.4	1938.4	3716.8	3876.8	9386	9786	1877.2	1957.2	3754.4	3914.4	9479	9879	1895.8	1975.8	3791.6	3951.6
9293	9693	1858.6	1938.6	3717.2	3877.2	9387	9787	1877.4	1957.4	3754.8	3914.8	9480	9880	1896.0	1976.0	3792.0	3952.0
9294	9694	1858.8	1938.8	3717.6	3877.6	137	537	1877.5	1957.5	3755.0	3915.0	9481	9881	1896.2	1976.2	3792.4	3952.4
9295	9695	1859.0	1939.0	3718.0	3878.0	9388	9788	1877.6	1957.6	3755.2	3915.2	9482	9882	1896.4	1976.4	3792.8	3952.8
9296	9696	1859.2	1939.2	3718.4	3878.4	9389	9789	1877.8	1957.8	3755.6	3915.6	9483	9883	1896.6	1976.6	3793.2	3953.2
9297	9697	1859.4	1939.4	3718.8	3878.8	9390	9790	1878.0	1958.0	3756.0	3916.0	9484	9884	1896.8	1976.8	3793.6	3953.6
9298	9698	1859.6	1939.6	3719.2	3879.2	9391	9791	1878.2	1958.2	3756.4	3916.4	9485	9885	1897.0	1977.0	3794.0	3954.0
9299	9699	1859.8	1939.8	3719.6	3879.6	9392	9792	1878.4	1958.4	3756.8	3916.8	9486	9886	1897.2	1977.2	3794.4	3954.4
9300	9700	1860.0	1940.0	3720.0	3880.0	9393	9793	1878.6	1958.6	3757.2	3917.2	9487	9887	1897.4	1977.4	3794.8	3954.8
9301	9701	1860.2	1940.2	3720.4	3880.4	9394	9794	1878.8	1958.8	3757.6	3917.6	237	637	1897.5	1977.5	3795.0	3955.0
9302	9702	1860.4	1940.4	3720.8	3880.8	9395	9795	1879.0	1959.0	3758.0	3918.0	9488	9888	1897.6	1977.6	3795.2	3955.2
9303	9703	1860.6	1940.6	3721.2	3881.2	9396	9796	1879.2	1959.2	3758.4	3918.4	9489	9889	1897.8	1977.8	3795.6	3955.6
9304	9704	1860.8	1940.8	3721.6	3881.6	9397	9797	1879.4	1959.4	3758.8	3918.8	9490	9890	1898.0	1978.0	3796.0	3956.0
9305	9705	1861.0	1941.0	3722.0	3882.0	9398	9798	1879.6	1959.6	3759.2	3919.2	9491	9891	1898.2	1978.2	3796.4	3956.4
9306	9706	1861.2	1941.2	3722.4	3882.4	9399	9799	1879.8	1959.8	3759.6	3919.6	9492	9892	1898.4	1978.4	3796.8	3956.8
9307	9707	1861.4	1941.4	3722.8	3882.8	9400	9800	1880.0	1960.0	3760.0	3920.0	9493	9893	1898.6	1978.6	3797.2	3957.2
9308	9708	1861.6	1941.6	3723.2	3883.2	9401	9801	1880.2	1960.2	3760.4	3920.4	9494	9894	1898.8	1978.8	3797.6	3957.6
9309	9709	1861.8	1941.8	3723.6	3883.6	9402	9802	1880.4	1960.4	3760.8	3920.8	9495	9895	1899.0	1979.0	3798.0	3958.0
9310	9710	1862.0	1942.0	3724.0	3884.0	9403	9803	1880.6	1960.6	3761.2	3921.2	9496	9896	1899.2	1979.2	3798.4	3958.4
9311	9711	1862.2	1942.2	3724.4	3884.4	9404	9804	1880.8	1960.8	3761.6	3921.6	9497	9897	1899.4	1979.4	3798.8	3958.8
9312	9712	1862.4	1942.4	3724.8	3884.8	9405	9805	1881.0	1961.0	3762.0	3922.0	9498	9898	1899.6	1979.6	3799.2	3959.2
62	462	1862.5	1942.5	3725.0	3885.0	9406	9806	1881.2	1961.2	3762.4	3922.4	9499	9899	1899.8	1979.8	3799.6	3959.6
9313	9713	1862.6	1942.6	3725.2	3885.2	9407	9807	1881.4	1961.4	3762.8	3922.8	9500	9900	1900.0	1980.0	3800.0	3960.0
9314	9714	1862.8	1942.8	3725.6	3885.6	9408	9808	1881.6	1961.6	3763.2	3923.2	9501	9901	1900.2	1980.2	3800.4	3960.4
9315	9715	1863.0	1943.0	3726.0	3886.0	9409	9809	1881.8	1961.8	3763.6	3923.6	9502	9902	1900.4	1980.4	3800.8	3960.8
9316	9716	1863.2	1943.2	3726.4	3886.4	9410	9810	1882.0	1962.0	3764.0	3924.0	9503	9903	1900.6	1980.6	3801.2	3961.2
9317	9717	1863.4	1943.4	3726.8	3886.8	9411	9811	1882.2	1962.2	3764.4	3924.4	9504	9904	1900.8	1980.8	3801.6	3961.6
9318	9718	1863.6	1943.6	3727.2	3887.2	9412	9812	1882.4	1962.4	3764.8	3924.8	9505	9905	1901.0	1981.0	3802.0	3962.0
9319	9719	1863.8	1943.8	3727.6	3887.6	162	562	1882.5	1962.5	3765.0	3925.0	9506	9906	1901.2	1981.2	3802.4	3962.4
9320	9720	1864.0	1944.0	3728.0	3888.0	9413	9813	1882.6	1962.6	3765.2	3925.2	9507	9907	1901.4	1981.4	3802.8	3962.8
9321	9721	1864.2	1944.2	3728.4	3888.4	9414	9814	1882.8	1962.8	3765.6	3925.6	9508	9908	1901.6	1981.6	3803.2	3963.2
9322	9722	1864.4	1944.4	3728.8	3888.8</												

## WCDMA VIII (900) frequencies

Uplink CH (TX)	Freq (MHz)	VCO (MHz)	Downlink CH (RX)	Freq (MHz)	VCO (MHz)
2712	882,4	3529,6	2937	927,4	3709,6
2713	882,6	3530,4	2938	927,6	3710,4
2714	882,8	3531,2	2939	927,8	3711,2
2715	883	3532	2940	928	3712
2716	883,2	3532,8	2941	928,2	3712,8
2717	883,4	3533,6	2942	928,4	3713,6
2718	883,6	3534,4	2943	928,6	3714,4
2719	883,8	3535,2	2944	928,8	3715,2
2720	884	3536	2945	929	3716
2721	884,2	3536,8	2946	929,2	3716,8
2722	884,4	3537,6	2947	929,4	3717,6
2723	884,6	3538,4	2948	929,6	3718,4
2724	884,8	3539,2	2949	929,8	3719,2
2725	885	3540	2950	930	3720
2726	885,2	3540,8	2951	930,2	3720,8
2727	885,4	3541,6	2952	930,4	3721,6
2728	885,6	3542,4	2953	930,6	3722,4
2729	885,8	3543,2	2954	930,8	3723,2
2730	886	3544	2955	931	3724
2731	886,2	3544,8	2956	931,2	3724,8
2732	886,4	3545,6	2957	931,4	3725,6
2733	886,6	3546,4	2958	931,6	3726,4
2734	886,8	3547,2	2959	931,8	3727,2
2735	887	3548	2960	932	3728
2736	887,2	3548,8	2961	932,2	3728,8
2737	887,4	3549,6	2962	932,4	3729,6
2738	887,6	3550,4	2963	932,6	3730,4
2739	887,8	3551,2	2964	932,8	3731,2
2740	888	3552	2965	933	3732
2741	888,2	3552,8	2966	933,2	3732,8
2742	888,4	3553,6	2967	933,4	3733,6
2743	888,6	3554,4	2968	933,6	3734,4
2744	888,8	3555,2	2969	933,8	3735,2

Uplink CH (TX)	Freq (MHz)	VCO (MHz)	Downlink CH (RX)	Freq (MHz)	VCO (MHz)
2745	889	3556	2970	934	3736
2746	889,2	3556,8	2971	934,2	3736,8
2747	889,4	3557,6	2972	934,4	3737,6
2748	889,6	3558,4	2973	934,6	3738,4
2749	889,8	3559,2	2974	934,8	3739,2
2750	890	3560	2975	935	3740
2751	890,2	3560,8	2976	935,2	3740,8
2752	890,4	3561,6	2977	935,4	3741,6
2753	890,6	3562,4	2978	935,6	3742,4
2754	890,8	3563,2	2979	935,8	3743,2
2755	891	3564	2980	936	3744
2756	891,2	3564,8	2981	936,2	3744,8
2757	891,4	3565,6	2982	936,4	3745,6
2758	891,6	3566,4	2983	936,6	3746,4
2759	891,8	3567,2	2984	936,8	3747,2
2760	892	3568	2985	937	3748
2761	892,2	3568,8	2986	937,2	3748,8
2762	892,4	3569,6	2987	937,4	3749,6
2763	892,6	3570,4	2988	937,6	3750,4
2764	892,8	3571,2	2989	937,8	3751,2
2765	893	3572	2990	938	3752
2766	893,2	3572,8	2991	938,2	3752,8
2767	893,4	3573,6	2992	938,4	3753,6
2768	893,6	3574,4	2993	938,6	3754,4
2769	893,8	3575,2	2994	938,8	3755,2
2770	894	3576	2995	939	3756
2771	894,2	3576,8	2996	939,2	3756,8
2772	894,4	3577,6	2997	939,4	3757,6
2773	894,6	3578,4	2998	939,6	3758,4
2774	894,8	3579,2	2999	939,8	3759,2
2775	895	3580	3000	940	3760
2776	895,2	3580,8	3001	940,2	3760,8
2777	895,4	3581,6	3002	940,4	3761,6
2778	895,6	3582,4	3003	940,6	3762,4
2779	895,8	3583,2	3004	940,8	3763,2



Uplink CH (TX)	Freq (MHz)	VCO (MHz)	Downlink CH (RX)	Freq (MHz)	VCO (MHz)
2780	896	3584	3005	941	3764
2781	896,2	3584,8	3006	941,2	3764,8
2782	896,4	3585,6	3007	941,4	3765,6
2783	896,6	3586,4	3008	941,6	3766,4
2784	896,8	3587,2	3009	941,8	3767,2
2785	897	3588	3010	942	3768
2786	897,2	3588,8	3011	942,2	3768,8
2787	897,4	3589,6	3012	942,4	3769,6
2788	897,6	3590,4	3013	942,6	3770,4
2789	897,8	3591,2	3014	942,8	3771,2
2790	898	3592	3015	943	3772
2791	898,2	3592,8	3016	943,2	3772,8
2792	898,4	3593,6	3017	943,4	3773,6
2793	898,6	3594,4	3018	943,6	3774,4
2794	898,8	3595,2	3019	943,8	3775,2
2795	899	3596	3020	944	3776
2796	899,2	3596,8	3021	944,2	3776,8
2797	899,4	3597,6	3022	944,4	3777,6
2798	899,6	3598,4	3023	944,6	3778,4
2799	899,8	3599,2	3024	944,8	3779,2
2800	900	3600	3025	945	3780
2801	900,2	3600,8	3026	945,2	3780,8
2802	900,4	3601,6	3027	945,4	3781,6
2803	900,6	3602,4	3028	945,6	3782,4
2804	900,8	3603,2	3029	945,8	3783,2
2805	901	3604	3030	946	3784
2806	901,2	3604,8	3031	946,2	3784,8
2807	901,4	3605,6	3032	946,4	3785,6
2808	901,6	3606,4	3033	946,6	3786,4
2809	901,8	3607,2	3034	946,8	3787,2
2810	902	3608	3035	947	3788
2811	902,2	3608,8	3036	947,2	3788,8
2812	902,4	3609,6	3037	947,4	3789,6
2813	902,6	3610,4	3038	947,6	3790,4
2814	902,8	3611,2	3039	947,8	3791,2

Uplink CH (TX)	Freq (MHz)	VCO (MHz)	Downlink CH (RX)	Freq (MHz)	VCO (MHz)
2815	903	3612	3040	948	3792
2816	903,2	3612,8	3041	948,2	3792,8
2817	903,4	3613,6	3042	948,4	3793,6
2818	903,6	3614,4	3043	948,6	3794,4
2819	903,8	3615,2	3044	948,8	3795,2
2820	904	3616	3045	949	3796
2821	904,2	3616,8	3046	949,2	3796,8
2822	904,4	3617,6	3047	949,4	3797,6
2823	904,6	3618,4	3048	949,6	3798,4
2824	904,8	3619,2	3049	949,8	3799,2
2825	905	3620	3050	950	3800
2826	905,2	3620,8	3051	950,2	3800,8
2827	905,4	3621,6	3052	950,4	3801,6
2828	905,6	3622,4	3053	950,6	3802,4
2829	905,8	3623,2	3054	950,8	3803,2
2830	906	3624	3055	951	3804
2831	906,2	3624,8	3056	951,2	3804,8
2832	906,4	3625,6	3057	951,4	3805,6
2833	906,6	3626,4	3058	951,6	3806,4
2834	906,8	3627,2	3059	951,8	3807,2
2835	907	3628	3060	952	3808
2836	907,2	3628,8	3061	952,2	3808,8
2837	907,4	3629,6	3062	952,4	3809,6
2838	907,6	3630,4	3063	952,6	3810,4
2839	907,8	3631,2	3064	952,8	3811,2
2840	908	3632	3065	953	3812
2841	908,2	3632,8	3066	953,2	3812,8
2842	908,4	3633,6	3067	953,4	3813,6
2843	908,6	3634,4	3068	953,6	3814,4
2844	908,8	3635,2	3069	953,8	3815,2
2845	909	3636	3070	954	3816
2846	909,2	3636,8	3071	954,2	3816,8
2847	909,4	3637,6	3072	954,4	3817,6
2848	909,6	3638,4	3073	954,6	3818,4
2849	909,8	3639,2	3074	954,8	3819,2

Uplink CH (TX)	Freq (MHz)	VCO (MHz)	Downlink CH (RX)	Freq (MHz)	VCO (MHz)
2850	910	3640	3075	955	3820
2851	910,2	3640,8	3076	955,2	3820,8
2852	910,4	3641,6	3077	955,4	3821,6
2853	910,6	3642,4	3078	955,6	3822,4
2854	910,8	3643,2	3079	955,8	3823,2
2855	911	3644	3080	956	3824
2856	911,2	3644,8	3081	956,2	3824,8
2857	911,4	3645,6	3082	956,4	3825,6
2858	911,6	3646,4	3083	956,6	3826,4
2859	911,8	3647,2	3084	956,8	3827,2
2860	912	3648	3085	957	3828
2861	912,2	3648,8	3086	957,2	3828,8
2862	912,4	3649,6	3087	957,4	3829,6
2863	912,6	3650,4	3088	957,6	3830,4

## WCDMA V (850) frequencies

TX CH	RX CH	TX	RX	VCO TX	VCO RX	TX CH	RX CH	TX	RX	VCO TX	VCO RX
4132	4357	826.4	871.4	3305.6	3485.6	4182	4407	836.4	881.4	3345.6	3525.6
782	1007	826.5	871.5	3306.0	3486.0	4183	4408	836.6	881.6	3346.4	3526.4
4133	4358	826.6	871.6	3306.4	3486.4	4184	4409	836.8	881.8	3347.2	3527.2
4134	4359	826.8	871.8	3307.2	3487.2	4185	4410	837.0	882.0	3348.0	3528.0
4135	4360	827.0	872.0	3308.0	3488.0	4186	4411	837.2	882.2	3348.8	3528.8
4136	4361	827.2	872.2	3308.8	3488.8	4187	4412	837.4	882.4	3349.6	3529.6
4137	4362	827.4	872.4	3309.6	3489.6	837	1062	837.5	882.5	3350.0	3530.0
787	1012	827.5	872.5	3310.0	3490.0	4188	4413	837.6	882.6	3350.4	3530.4
4138	4363	827.6	872.6	3310.4	3490.4	4189	4414	837.8	882.8	3351.2	3531.2
4139	4364	827.8	872.8	3311.2	3491.2	4190	4415	838.0	883.0	3352.0	3532.0
4140	4365	828.0	873.0	3312.0	3492.0	4191	4416	838.2	883.2	3352.8	3532.8
4141	4366	828.2	873.2	3312.8	3492.8	4192	4417	838.4	883.4	3353.6	3533.6
4142	4367	828.4	873.4	3313.6	3493.6	4193	4418	838.6	883.6	3354.4	3534.4
4143	4368	828.6	873.6	3314.4	3494.4	4194	4419	838.8	883.8	3355.2	3535.2
4144	4369	828.8	873.8	3315.2	3495.2	4195	4420	839.0	884.0	3356.0	3536.0
4145	4370	829.0	874.0	3316.0	3496.0	4196	4421	839.2	884.2	3356.8	3536.8
4146	4371	829.2	874.2	3316.8	3496.8	4197	4422	839.4	884.4	3357.6	3537.6
4147	4372	829.4	874.4	3317.6	3497.6	4198	4423	839.6	884.6	3358.4	3538.4
4148	4373	829.6	874.6	3318.4	3498.4	4199	4424	839.8	884.8	3359.2	3539.2
4149	4374	829.8	874.8	3319.2	3499.2	4200	4425	840.0	885.0	3360.0	3540.0
4150	4375	830.0	875.0	3320.0	3500.0	4201	4426	840.2	885.2	3360.8	3540.8
4151	4376	830.2	875.2	3320.8	3500.8	4202	4427	840.4	885.4	3361.6	3541.6
4152	4377	830.4	875.4	3321.6	3501.6	4203	4428	840.6	885.6	3362.4	3542.4
4153	4378	830.6	875.6	3322.4	3502.4	4204	4429	840.8	885.8	3363.2	3543.2
4154	4379	830.8	875.8	3323.2	3503.2	4205	4430	841.0	886.0	3364.0	3544.0
4155	4380	831.0	876.0	3324.0	3504.0	4206	4431	841.2	886.2	3364.8	3544.8
4156	4381	831.2	876.2	3324.8	3504.8	4207	4432	841.4	886.4	3365.6	3545.6
4157	4382	831.4	876.4	3325.6	3505.6	4208	4433	841.6	886.6	3366.4	3546.4
807	1032	831.5	876.5	3326.0	3506.0	4209	4434	841.8	886.8	3367.2	3547.2
4158	4383	831.6	876.6	3326.4	3506.4	4210	4435	842.0	887.0	3368.0	3548.0
4159	4384	831.8	876.8	3327.2	3507.2	4211	4436	842.2	887.2	3368.8	3548.8
4160	4385	832.0	877.0	3328.0	3508.0	4212	4437	842.4	887.4	3369.6	3549.6
4161	4386	832.2	877.2	3328.8	3508.8	862	1087	842.5	887.5	3370.0	3550.0
4162	4387	832.4	877.4	3329.6	3509.6	4213	4438	842.6	887.6	3370.4	3550.4
812	1037	832.5	877.5	3330.0	3510.0	4214	4439	842.8	887.8	3371.2	3551.2
4163	4388	832.6	877.6	3330.4	3510.4	4215	4440	843.0	888.0	3372.0	3552.0
4164	4389	832.8	877.8	3331.2	3511.2	4216	4441	843.2	888.2	3372.8	3552.8
4165	4390	833.0	878.0	3332.0	3512.0	4217	4442	843.4	888.4	3373.6	3553.6
4166	4391	833.2	878.2	3332.8	3512.8	4218	4443	843.6	888.6	3374.4	3554.4
4167	4392	833.4	878.4	3333.6	3513.6	4219	4444	843.8	888.8	3375.2	3555.2
4168	4393	833.6	878.6	3334.4	3514.4	4220	4445	844.0	889.0	3376.0	3556.0
4169	4394	833.8	878.8	3335.2	3515.2	4221	4446	844.2	889.2	3376.8	3556.8
4170	4395	834.0	879.0	3336.0	3516.0	4222	4447	844.4	889.4	3377.6	3557.6
4171	4396	834.2	879.2	3336.8	3516.8	4223	4448	844.6	889.6	3378.4	3558.4
4172	4397	834.4	879.4	3337.6	3517.6	4224	4449	844.8	889.8	3379.2	3559.2
4173	4398	834.6	879.6	3338.4	3518.4	4225	4450	845.0	890.0	3380.0	3560.0
4174	4399	834.8	879.8	3339.2	3519.2	4226	4451	845.2	890.2	3380.8	3560.8
4175	4400	835.0	880.0	3340.0	3520.0	4227	4452	845.4	890.4	3381.6	3561.6
4176	4401	835.2	880.2	3340.8	3520.8	4228	4453	845.6	890.6	3382.4	3562.4
4177	4402	835.4	880.4	3341.6	3521.6	4229	4454	845.8	890.8	3383.2	3563.2
4178	4403	835.6	880.6	3342.4	3522.4	4230	4455	846.0	891.0	3384.0	3564.0
4179	4404	835.8	880.8	3343.2	3523.2	4231	4456	846.2	891.2	3384.8	3564.8
4180	4405	836.0	881.0	3344.0	3524.0	4232	4457	846.4	891.4	3385.6	3565.6
4181	4406	836.2	881.2	3344.8	3524.8	4233	4458	846.6	891.6	3386.4	3566.4



# Nokia Customer Care

## Glossary

(This page left intentionally blank.)

A/D-converter	Analogue-to-digital converter
ADC	Analogue-to-digital converter
ALS	Ambient light sensor
ARM	Advanced RISC Machines
ASIC	Application Specific Integrated Circuit
ASIP	Application Specific Interface Protector
B2B	Board to board, connector between PWB and UI board
BA	Board Assembly
BB	Baseband
BCM2048	Bluetooth module made by BROADCOM
BSI	Battery Size Indicator
BT	Bluetooth
CBus	MCU controlled serial bus connected to UPP_WD2, UEME and Zocus
CCP	Compact Camera Port
CDMA	Code division multiple access
CMOS	Complimentary metal-oxide semiconductor circuit (low power consumption)
COG	Chip on Glass
CPU	Central Processing Unit
CSD	Circuit-switched data
CSR	Cambridge silicon radio
CSTN	Colour Super Twisted Nematic
CTSI	Clock Timing Sleep and interrupt block of Tiku
CW	Continuous wave
D/A-converter	Digital-to-analogue converter
DAC	Digital-to-analogue converter
DMA	Direct memory access
DP	Data Package
DPLL	Digital Phase Locked Loop
DSP	Digital Signal Processor
DTM	Dual Transfer Mode
DtoS	Differential to Single ended
EDGE	Enhanced data rates for global/GSM evolution
EGSM	Extended GSM
EM	Energy management
EMC	Electromagnetic compatibility
EMI	Electromagnetic interference

ESD	Electrostatic discharge
FCI	Functional cover interface
FPS	Flash Programming Tool
FR	Full rate
FSTN	Film compensated super twisted nematic
GMSK	Gaussian Minimum Shift Keying
GND	Ground, conductive mass
GPIO	General-purpose interface bus
GPRS	General Packet Radio Service
GSM	Group Special Mobile/Global System for Mobile communication
HSDPA	High-speed downlink packet access
HF	Hands free
HFCM	Handsfree Common
HS	Handset
HSCSD	High speed circuit switched data (data transmission connection faster than GSM)
HW	Hardware
I/O	Input/Output
IBAT	Battery current
IC	Integrated circuit
ICHAR	Charger current
IF	Interface
IHF	Integrated hands free
IMEI	International Mobile Equipment Identity
IR	Infrared
ISA	Intelligent software architecture
JPEG/JPG	Joint Photographic Experts Group
LCD	Liquid Crystal Display
LDO	Low Drop Out
LED	Light-emitting diode
LPRF	Low Power Radio Frequency
MCU	Micro Controller Unit (microprocessor)
MCU	Multiport control unit
MIC, mic	Microphone
MIDP	Mobile Information Device Profile
MIN	Mobile identification number
MIPS	Million instructions per second

MMS	Multimedia messaging service
NFC	Near field communication
NTC	Negative temperature coefficient, temperature sensitive resistor used as a temperature sensor
OMA	Object management architecture
OMAP	Operations, maintenance, and administration part
Opamp	Operational Amplifier
PA	Power amplifier
PDA	Pocket Data Application
PDA	Personal digital assistant
PDRAM	Program/Data RAM (on chip in Tiku)
Phoenix	Software tool of DCT4.x and BB5
PIM	Personal Information Management
PLL	Phase locked loop
PM	(Phone) Permanent memory
PUP	General Purpose IO (PIO), USARTS and Pulse Width Modulators
PURX	Power-up reset
PWB	Printed Wiring Board
PWM	Pulse width modulation
RC-filter	Resistance-Capacitance filter
RF	Radio Frequency
RFBUS	Serial control Bus For RF
RSS	Web content Syndication Format
RSSI	Receiving signal strength indicator
RST	Reset Switch
RTC	Real Time Clock (provides date and time)
RX	Radio Receiver
SAW filter	Surface Acoustic Wave filter
SDRAM	Synchronous Dynamic Random Access Memory
SID	Security ID
SIM	Subscriber Identity Module
SMPS	Switched Mode Power Supply
SNR	Signal-to-noise ratio
SPR	Standard Product requirements
SRAM	Static random access memory
STI	Serial Trace Interface

SW	Software
TCP/IP	Transmission control protocol/Internet protocol
TCXO	Temperature controlled Oscillator
TX	Radio Transmitter
UART	Universal asynchronous receiver/transmitter
UI	User Interface
UPnP	Universal Plug and Play
USB	Universal Serial Bus
VBAT	Battery voltage
VCHAR	Charger voltage
VCO	Voltage controlled oscillator
VCTCXO	Voltage Controlled Temperature Compensated Crystal Oscillator
VCXO	Voltage Controlled Crystal Oscillator
Vp-p	Peak-to-peak voltage
VSIM	SIM voltage
WCDMA	Wideband code division multiple access
WD	Watchdog
WLAN	Wireless local area network
XHTML	Extensible hypertext markup language