CPU Specifications User Memory 50MB (Includes program, data and documentation) Memory Type Flash and Battery Backed RAM Retentive Memory 500kB Scan Time 500µs (3K Boolean, 240 I/O) OLED, 4x10 characters, 8 control buttons; OLED characters are 5x7 with a dot pitch of 0.45 mm; Display 2.25 mm x 3.15 mm USB IN: Programming, Monitoring, Debug, Firmware ETHERNET: (10/100Mbps Ethernet) Programming, Monitoring, Debug, Firmware, Email SMTP Client. Modbus TCP Client (32 Servers) and Server (16 Clients), EtherNet/IP Scanner (32 Adapters) and Adapter Communications: (4 scanners) with 8 connections per device. 5 Integrated Ports REMOTE I/O: 16 GS-EDRV100 (GS Drives), 8 Remote Base Groups RS-232: (RJ12, 1200-115.2k Baud) ASCII, Modbus RS-485: Removable Terminal Included, (1200-115.2k Baud) ASCII, Modbus RTU. Data Logging/Project Micro SD card slot Transfer **9 Base Groups:** 1 Local (P2-550) + 8 Remote (P2-RS) Hardware Limits 4,320 Hardware I/O points (All 32 point modules) of System 16 GS Series Drives as Remote I/O Application Functions PID Array Functions Program Control Counters/Timers String Functions Instruction Types Communications System Functions Data Handling Contacts **Drum Sequencers** Coils Math Functions Real Time Clock ±5s per day typical at 25°C Accuracy ±15s per day maximum at 60°C

Document Name	Edition/Revision	Date
P2-550-DS	1st Ed. Rev B	3/29/2017

Copyright 2016, AutomationDirect.com Incorporated/All Rights Reserved Worldwide.

VAUTOMATIONDIRECTS Productivity2000




P2-550 CPU

The P2-550 is a full-featured, high-performance CPU for use with the Productivity2000 system.

CPU Specifications	1
CPU Front and Bottom Panels	2
CPU Installation Procedure	2
Battery Installation Procedure	3
Micro SD Specifications	3
RS-232 Port Specifications	4
RS-485 Port Specifications	
Ethernet Port Specifications	5
Remote I/O Port Specifications	5
USB In Port Specifications	5
Front Panel OLED Message Display	6
Front Panel OLED Display Monitoring	
and Configuration	7
Warning	
CPU Status Indicators	8
CPU Run/Stop Switch Specifications	8
General Specifications	8
Hot Swap Information	8

Warranty: Thirty-day money-back guarantee. Two-year limited replacement. (See www.productivity2000.com for details).

CPU Installation Procedure

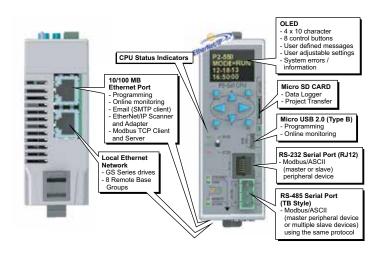



Step One:Unlock both locking tabs



Step Two:

Seat CPU on support platform and push towards base until circuit board is fully engaged into connector



Step Three:

Snap retaining tab into the locked position.

Battery Installation Procedure



+ **Step Two:**Insert battery and close compartment.



Take care to insert battery behind metal tab.


Battery (Optional)

D2-BAT-1 Coin type, 3.0 V Lithium battery, 560mA, battery number CR2354

Note: Although not needed for program backup, an uninstalled battery is included with the P2-550. Install this battery if you want the CPU to retain the Time and Date along with any Tagname values that you have set up as retentive.

Micro SD Specifications

	Port Name	MICRO SD			
	Description	Standard Mid transfer	cro SD socket	for data loggin	ig or program
	Maximum Card Capacity	32GB			
	Transfer Rate (ADATA microSDHC Class 4 memory card)	Mbps	Minimum	Typical	Maximum
		Read	14.3	14.4	14.6
		Write	4.8	4.9	5.1
	Port Status LED	Green LED is illuminated when card is inserted/ detected			



Pin	SD
1	DAT2
2	CD/DAT3
3	CMD
4	VDD
5	CLK
6	VSS
7	DAT0
8	DAT1

Note: Card not included with unit.

Port Specifications

RS-232 Specifications

Port Name	RS-232
Description	Non-isolated RS-232 DTE port connects the CPU as a Modbus/ASCII master or slave to a peripheral device. Includes ESD and built-in surge protection
Data Rates	Selectable,1200, 2400, 4800, 9600, 19200, 33600, 38400, 57600, and 115200
+5V Cable Power Source	210 mA maximum at 5V, ± 5%. Reverse polarity and overload protected
TXD	RS-232 Transmit output
RXD	RS-232 Receive input
RTS	Handshaking output for modem control
GND	Logic ground
Maximum Output Load (TXD/RTS)	3kΩ, 1000 pf
Minimum Output Voltage Swing	±5V
Output Short Circuit Protection	±15mA
Port Status LED	Green LED is illuminated when active for TXD, RXD and RTS
Cable Options	EA-MG-PGM-CBL D2-DSCBL USB-RS232 with D2-DSCBL FA-CABKIT FA-ISOCON for converting RS-232 to isolated RS-485
	•



6-pin RJ12 Female Modular Connector

Pin#		Signal
6	GND	Logic Ground
5	RTS	RS-232 Output
4	TXD	RS-232 Output
3	RXD	RS-232 Input
2	+5V	210mA Maximum
1	GND	Logic Ground

RS-485 Port Specifications

iio ioo i oit opoomoutiono		
Port Name	RS-485	
Description	Non-isolated RS-485 port connects the CPU as a Modbus/ASCII master or slave to a peripheral device. Includes ESD/EFT protection and automatic echo cancellation when transmitter is active	
Data Rates	Selectable, 1200, 2400, 4800, 9600, 19200, 33600, 38400, 57600, and 115200	
TXD+/RXD+	RS-485 transceiver high	
TXD-/RXD-	RS-485 transceiver low	
GND	Logic ground	
Input Impedance	19kΩ	
Maximum Load	50 transceivers, 19 kΩ each, 60 Ω termination	
Output Short Circuit Protection	±250mA, thermal shut-down protection	
Electrostatic Discharge Protection	±8KV per IEC1000-4-2	
Electrical Fast Transient Protection	±2KV per IEC1000-4-4	
Minimum Differential Output Voltage	1.5 V with 60Ω load	
Fail Safe Inputs	Logic high input state if inputs are unconnected	
Maximum Common Mode Voltage	-7.5 V to 12.5	
Port Status LED	Green LED illuminated when active for TXD and RXD	
Cable Options	Recommend L19827-XXX from AutomationDirect.com	



Removable connector included. Spare connectors available (part no. P3-RS485CON).




Pin#	Signal
G	GND
1	TXD-/RXD-
+	TXD+/RXD+


Port Specifications

Ethernet Specifications

۱	Ethethet Shermirations		
	Port Name	ETHERNET	REMOTE I/O
	Description	Standard transformer isolated Ethernet port with built-in surge protection for programming, online monitoring, Email (SMTP client), Modbus/TCP client/server connections (fixed IP or DHCP) and Ethernet/IP Scanner/ Apapter connections.	Standard transformer isolated Ethernet port with built-in surge protection for connection to 16 GS Series Drives and 8 Remote Base Groups.
	Transfer Rate	10 Mbps (Orange LED) and 100 Mbps (Green LED) (auto-crossove	
	Port Status LED	LED is solid when network LINK i port is active (ACT).	s established. LED flashes when

Micro USB Type B Slave Input Specifications Port Name MICRO USB Standard Micro USB Slave input for programming and Description online monitoring, with built-in surge protection. Not compatible with older full speed USB devices. Transfer Rate 480Mbps Green LED is illuminated when LINK is established to Port Status LED programming software. USB Type A to Micro USB Type B: Cables 6ft. cable part # USB-CBL-AMICB6 15ft. cable part # USB-CBL-AMICB15

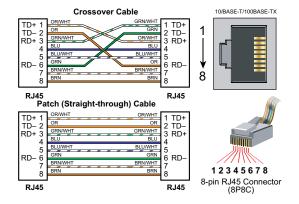

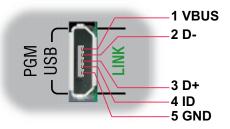

Front Panel OLED Message Display




The CPU incorporates a 4 line x 10 character OLED for system errors and information or for displaying user-defined messages.

OLED characters are 7x12 with a dot pitch of 0.245 mm; 1.72 mm x 2.94 mm.


OLED control buttons located beneath the display allow the user to navigate through a menu and arrow buttons allow for configuration of time and date settings.

Note: There is a built in time-out for the OLED of 4 hours. Only a button press or power up will turn it back on.

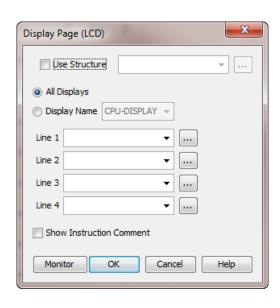

For user-defined messages, the display is configured using the Productivity2000 Programming Software. An OLED Page instruction allows the user to program text into user-defined tags and display the messages based on the ladder execution.

Front Panel OLED Display Monitoring and Configuration

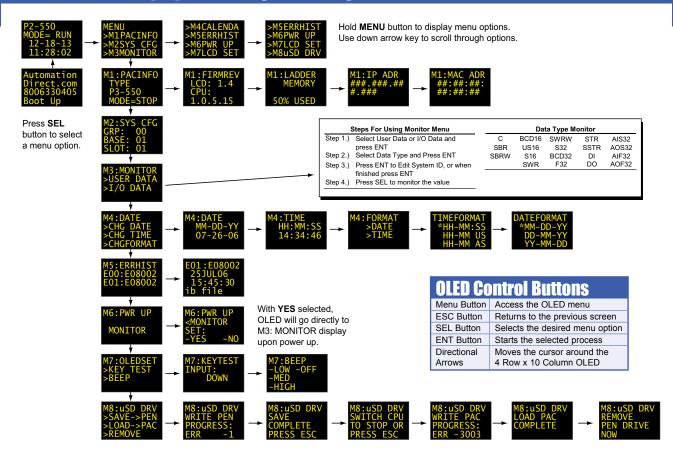

WARNING: To minimize the risk of potential safety problems, you should follow all applicable local and national codes that regulate the installation and operation of your equipment. These codes vary from area to area and it is your responsibility to determine which codes should be followed, and to verify that the equipment, installation, and operation are in compliance with the latest revision of these codes.

Equipment damage or serious injury to personnel can result from the failure to follow all applicable codes and standards. We do not guarantee the products described in this publication are suitable for your particular application, nor do we assume any responsibility for your product design, installation, or operation.

If you have any questions concerning the installation or operation of this equipment, or if you need additional information, please call Technical Support at 770-844-4200

This publication is based on information that was available at the time it was printed. At AutomationDirect.com® we constantly strive to improve our products and services, so we reserve the right to make changes to the products and/or publications at any time without notice and without any obligation. This publication may also discuss features that may not be available in certain revisions of the product.

CPU Status Indicators

PWR	Green LED is illuminated when power is ON
RUN	Green LED is illuminated when CPU is in RUN mode
CPU	Red LED is illuminated during power ON reset, power down, or watch-dog time-out.



Removable Terminal Block Specifications

Part Number	P3-RS485CON
Number of Positions	3 Screw Terminals
Pitch	5mm
Wire Range	28-12 AWG Solid Conductor 30-12 AWG Stranded Conductor
Screw Driver Width	1/8 inch (3.175 mm) Maximum
Screw Size	M2.5
Screw Torque	4.5 lb·in (0.51 N·m)

General Specifications

Operating Temperature	0° to 60°C (32° to 140°F)
Storage Temperature	-20° to 70°C (-4° to 158°F)
Humidity	5 to 95% (non-condensing)
Environmental Air	No corrosive gases permitted
Vibration	IEC60068-2-6 (Test Fc)
Shock	IEC60068-2-27 (Test Ea)
Heat Dissipation	3.81 W
Enclosure Type	Open Equipment
Agency Approvals	UL508 file E139594, Canada & USA CE (EN61131-2*)
Module Location	Controller slot in the local base in a Productivity2000 System
EU Directive	See the "EU Directive" topic in the Productivity Suite Help File. Information can also be obtained at: www.productivity2000.com
Weight	158g (5.6 oz)

^{*}Meets EMC and Safety requirements. See the D.O.C. for details.

IMPORTANT!



Hot-Swapping Information

Note: This device cannot be Hot Swapped.

CPU Run/Stop Switch Specifications

RUN position	Executes user program, run-time edits possible
STOP position	Does not execute user program, normal program load position