

XR-5790R/5800R

SERVICE MANUAL

AEP Model
UK Model



Photo: XR-5800R

Dolby noise reduction manufactured under license from Dolby Laboratories Licensing Corporation. "DOLBY" and the double-D symbol $\square\square$ are trademarks of Dolby Laboratories Licensing Corporation.

Model Name Using Similar Mechanism	NEW
Tape Transport Mechanism Type	MG-25G-136

SPECIFICATIONS

Cassette player section

Tape track	4-track 2-channel stereo
Wow and flutter	0.08 % (WRMS)
Frequency response	30 - 18,000 Hz
Signal-to-noise ratio	61 dB (TYPE II, IV) (XR-5800R only) 58 dB (TYPE I)

Tuner section

FM	
Tuning range	87.5 - 108.0 MHz
Antenna terminal	External antenna connector
Intermediate frequency	10.7 MHz
Usable sensitivity	8 dBf
Selectivity	75 dB at 400 kHz
Signal-to-noise ratio	65 dB (stereo), 68 dB (mono)
Harmonic distortion at 1 kHz	
	0.5 % (stereo), 0.3 % (mono)
Separation	35 dB at 1 kHz
Frequency response	30 - 15,000 Hz
Capture ratio	2 dB

MW/LW

Tuning range	MW: 531 - 1,602 kHz LW: 153 - 281 kHz
Antenna terminal	External antenna connector
Intermediate frequency	10.71 MHz/450 kHz
Sensitivity	MW: 30 μ V LW: 50 μ V

Power amplifier section

Outputs	Speaker outputs (sure seal connectors)
Speaker impedance	4 - 8 ohms
Maximum power output	35 W \times 4 (at 4 ohms)

General

Outputs (XR-5800R only)	Telephone ATT control lead
Tone controls	Bass \pm 8 dB at 100 Hz Treble \pm 8 dB at 40 kHz
Power requirements	12 V DC car battery (negative ground)
Dimensions	Approx. 188 \times 58 \times 181 mm (w/h/d)
Mounting dimensions	Approx. 182 \times 53 \times 164 mm (w/h/d)
Mass	Approx. 1.2 kg
Supplied accessories	Parts for installation and connections (1 set) Rotary commander RM-X4S (XR-5800R: AEP, UK, South European only) Front panel case (1)

Design and specifications are subject to change without notice.

FM/MW/LW CASSETTE CAR STEREO



SONY®

TABLE OF CONTENTS

1. GENERAL	
Location of Controls (XR-5790R)	3
Location of Controls (XR-5800R)	3
Setting the Clock	4
Using the Rotary Commander	4
Installation	5
Connection	6
Connection Diagram	8
2. DISASSEMBLY	9
3. ASSEMBLY OF MECHANISM DECK	11
4. MECHANICAL ADJUSTMENTS	14
5. ELECTRICAL ADJUSTMENTS	
Test Mode	14
Tape Deck Section	14
Tuner Section	15
6. DIAGRAMS	
6-1. Printed Wiring Boards – Main Section –	22
6-2. Schematic Diagram – Main Section –	25
6-3. Printed Wiring Board – Panel Section – (XR-5790R) ..	30
6-4. Schematic Diagram – Panel Section – (XR-5790R)	32
6-5. Printed Wiring Board – Panel Section – (XR-5800R) ..	35
6-6. Schematic Diagram – Panel Section – (XR-5800R)	37
6-7. IC Pin Function Description	39
7. EXPLODED VIEWS	42
8. ELECTRICAL PARTS LIST	46

Flexible Circuit Board Repairing

- Keep the temperature of the soldering iron around 270 °C during repairing.
- Do not touch the soldering iron on the same conductor of the circuit board (within 3 times).
- Be careful not to apply force on the conductor when soldering or unsoldering.


Notes on chip component replacement

- Never reuse a disconnected chip component.
- Notice that the minus side of a tantalum capacitor may be damaged by heat.

SECTION 1 GENERAL

This section is extracted from instruction manual.


Location of controls (XR-5790R)

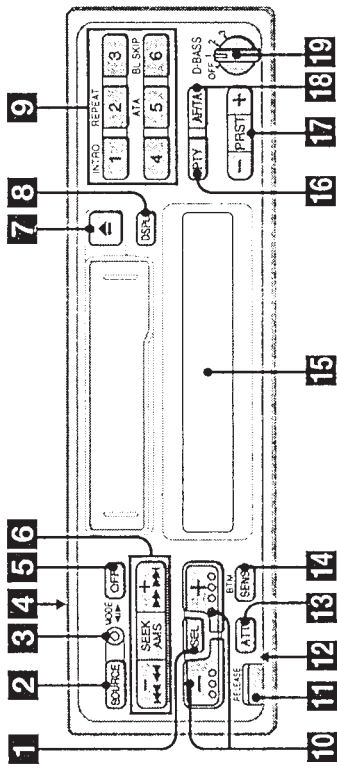

Refer to the pages for further details.

- 1** SEL (control mode select) button 4, 9, 10, 11
- 2** SOURCE button (TAPE/TUNER) 4, 6
- 3** MODE (◀▶) button
During Tuner reception:
BAND select 6
Transport direction change 4
- 4** POWER SELECT switch (located on the top of the unit)
See "POWER SELECT Switch" in the Installation/Connections manual.
- 5** OFF button 3, 4
- 6** SEEK/AMS button 4, 5, 6, 7, 8, 10
- 7** ▲ (eject) button 4
- 8** DSPL (display mode change/time set) button 4, 5, 7
- 9** During radio reception:
Preset number buttons 6
During tape playback:
① INTRO button 5
② REPEAT button 5
③ ATA (Automatic Tuner Activation) button 5
④ BL SKIP (Blank Skip) button 5
- 10** ◀ (volume/bass/treble/left-right/front-rear control) button 4, 11
- 11** RELEASE (front panel release) button 3, 13
- 12** Reset button (located on the front side of the unit hidden by the front panel)
Press this button when you use this unit for the first time, when you have changed the car battery, or when the buttons of this unit do not function properly.
- 13** ATT button 11
- 14** SENS/BTM (sensitivity adjust/Best tuning memory function) button 6, 7, 9
- 15** Display window
- 16** PTY (programme type) button 10
- 17** PRST button (preset station select) 6
- 18** AF/TA (alternative frequency/traffic announcement) button 8, 9
- 19** D-BASS control 11

Location of controls (XR-5800R)

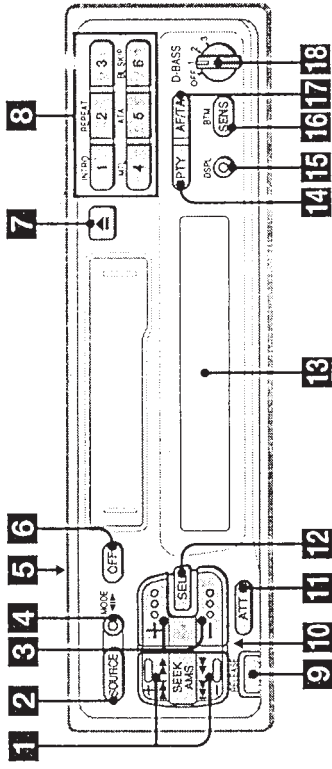

Refer to the pages for further details.


- 1** SEEK/AMS button 4, 5, 6, 7, 8, 10
- 2** SOURCE button (TAPE/TUNER) 4, 6
- 3** ◀ (volume/bass/treble/left-right/front-rear control) button 4, 12
- 4** MODE (◀▶) button
During Tuner reception:
BAND select 6
Transport direction change 4
- 5** POWER SELECT switch (located on the top of the unit)
See "POWER SELECT Switch" in the Installation/Connections manual.
- 6** OFF button 3, 4
- 7** ▲ (eject) button 4
- 8** During radio reception:
Preset number buttons 6
During tape playback:
① INTRO button 5
② REPEAT button 5
③ MTL button 5
④ ATA (Automatic Tuner Activation) button 5
⑤ BL SKIP (Blank Skip) button 5
- 9** RELEASE (front panel release) button 3, 14
- 10** Reset button (located on the front side of the unit hidden by the front panel)
Press this button when you use this unit for the first time, when you have changed the car battery, or when the buttons of this unit do not function properly.
- 11** ATT button 12
- 12** SEL (control mode select) button 4, 9, 10, 12
- 13** Display window
- 14** PTY (programme type) button 10
- 15** DSPL (display mode change/time set) button 4, 5, 7
- 16** SENS/BTM (sensitivity adjust/Best tuning memory function) button 6, 7, 9
- 17** AF/TA (alternative frequency/traffic announcement) button 8, 9
- 18** D-BASS control 12

EN Additional Information


Setting the clock

The clock has a 24-hour digital indication. For example, setting it to 10:08


- 1 Press **OFF** or **DISPL** during operation.
- 2 Press **DISPL** for two seconds.

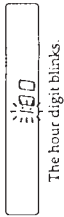


- 1 Set the hour digits.

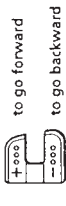

- 2 Press **SEL** momentarily.

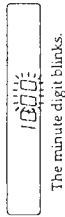

- 3 Set the minute digits.

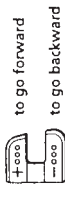

- 3 Press **DISPL** momentarily.



Note


If the **POWER SELECT** switch on the top of the unit is set to the **0** position, the clock cannot be set unless the power is turned on. Set the clock after you have turned on the radio.

Other Functions

Using the rotary commander

The rotary commander works by pressing buttons and/or rotating controls.

By pressing buttons (the SOURCE and the MODE buttons)

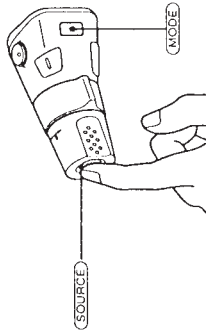

Every time you press **SOURCE**, the source changes as follows:

TAPE ↔ TUNER


Pressing **MODE** changes the operation in the following ways:

- the tape transport.
- the band, FM1 → FM2 → FM3 → MW → LW.

Tip

You can turn on this unit by pressing **SOURCE** on the rotary commander.

By rotating the control (the SEEK/AMS control)

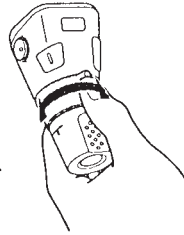

Rotate the control momentarily and release it to:

- Locate the beginnings of the tracks on the tape. Rotate and hold the control, and release it to fast-wind the tape. To playback, rotate and hold the control again, and release it.
- Tune in the stations automatically. Rotate and hold the control to tune in the specific station.

By rotating the control while pushing in (the PRESET control)



Push in and rotate the control to: Receive the stations memorized on the preset buttons.


Other operations

Rotate the VOL control to adjust the volume.



Press **ATT** to attenuate the sound.

Press **OFF** to turn off the unit.

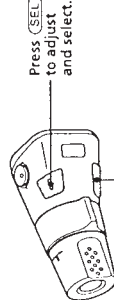


Press **SEL** to adjust and select.

Press **DISPL** to change the displayed items.

Changing the operative direction

The operative direction of controls is factory preset as in the illustration below.

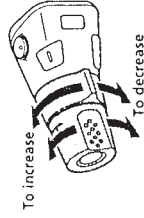

If you need to mount the rotary commander on the right side of the steering column, you can reverse the controls operative direction.



Press **SEL** for two seconds while pushing in the VOL control.

EN

RDS/Other Functions

11

Installation

Precautions

- Do not tamper with the four holes on the upper surface of the unit. They are used for tuner adjustments to be made only by service technicians.
- Choose the installation location carefully so that the unit will not interfere with driving.
- Avoid installing the unit where it would be subject to high temperatures, such as from direct sunlight or hot air from the heater, or where it would be subject to dust, dirt, or excessive vibration.
- Use only the supplied mounting hardware for safe and secure installation.

Mounting angle adjustment

Adjust the mounting angle to less than 20°.

How to Detach and Attach the Front Panel

Before installing the unit, detach the front panel.

To detach

Before detaching the front panel, be sure to turn the power off first. Then press the RELEASE button to open up the front panel, and detach the panel by pulling it towards you as illustrated.

To attach

Align parts ④ and ⑤, and push the front panel in until it clicks.

Instalación

Precauciones

- No toque los cuatro orificios de la superficie superior de la unidad. Estos orificios son para ajustes del sintonizador que solamente deberán realizar técnicos de reparación.
- Elija cuidadosamente el lugar de montaje de forma que la unidad no interfiera las funciones normales de conducción.
- Evite instalar la unidad donde pueda quedar sometida a altas temperaturas, como a la luz solar directa o al aire de calefacción, o a polvo, suciedad, o vibraciones excesivas.
- Para realizar una instalación segura y firme, utilice solamente la ferretería de montaje suministrada.

Ajuste del ángulo de montaje

Ajuste el ángulo de montaje a menos de 20°.

Forma de extraer e instalar el panel frontal

Antes de instalar la unidad, extraiga el panel frontal.

Para extraerlo

Antes de extraer el panel frontal, cerciórese de desactivar primero la alimentación. Después presione la tecla RELEASE para abrir el panel frontal, y extraiga éste tirando de él hacia usted como se muestra en la ilustración.

Para instalarlo

Alinee las partes ④ y ⑤, y presione el panel frontal hasta que chasquee.

Montering

Sökerhetsföreskrifter

- Låt de fyra hålen på bilstereons ovansida vara. De är till för radiojusteringar som endast får utföras av fackkunniga tekniker.
- Var noga när du väljer var i bilen du monterar bilstereon, så att den inte sitter i vägen när du kör.
- Montera inte bilstereon där den utsätts för värme, t ex solsken eller varmluft, eller där den utsätts för damm, smuts och/eller vibrationer.
- Använd endast de medföljande monteringsstillbehören för att vara säker på att bilstereon monteras på ett säkert och korrekt sätt.

Tillåten monteringsvinkel

Monteringsvinkeln får inte vara större än 20 grader.

Ta loss/fästa frontpanelen

Ta loss frontpanelen innan du monterar bilstereon.

Ta loss frontpanelen

Kontrollera att du har släckt av strömmen innan du tar loss panelen. Tryck därefter på RELEASE för att öppna frontpanelen. Ta loss frontpanelen genom att dra den utåt enligt illustrationen nedan.

Fästa frontpanelen

Lägg ④ och ⑤ mot varandra, kant i kant, och tryck tills du hör ett klickljud.

Instalação

Precauções

- Não altere indevidamente os quatro orifícios da superfície da parte superior do aparelho. Estes servem para regulações do sintonizador que devem ser efectuadas somente por técnicos qualificados.
- Escolha com cuidado um local apropriado para a montagem do aparelho, para que este não interfira com a condução do veículo.
- Evite instalar o aparelho onde possa estar sujeito a altas temperaturas, tais como em locais expostos directamente à luz do sol, ao ar quente dos aquecimentos, ou sujeitos a pó, sujidade ou vibração excessiva.
- Para efectuar uma instalação segura utilize unicamente o equipamento de montagem fornecido.

Ajuste do ângulo de montagem

Ajuste o ângulo de montagem para menos de 20°.

Para retirar e colocar o painel frontal


Retire o painel frontal antes de iniciar a instalação do aparelho.

Para retirar

Antes de retirar o painel frontal, desligue o aparelho. A seguir, carregue na tecla RELEASE para abrir o painel frontal e retire-o, puxando-o para fora como ilustrado.

Para colocar

Alinhe as partes ④ e ⑤, e fixe o painel frontal pressionando-o até que encaixe.

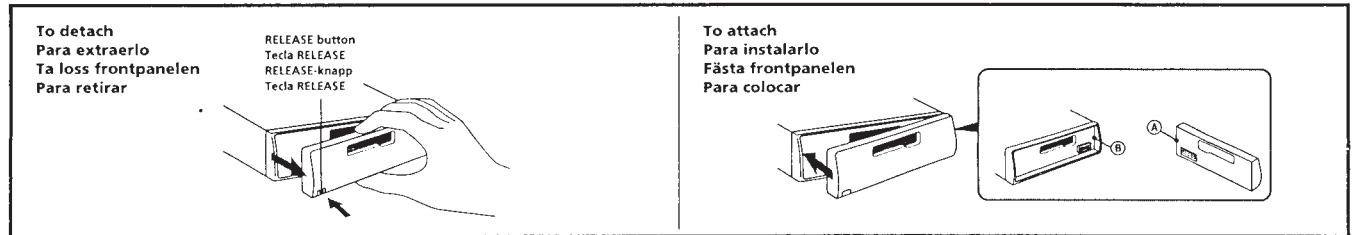

Mounting Example

Installation in the dashboard

Ejemplo de montaje


Instalación en el salpicadero

Exempel på montering

Montera på instrumentbrädan

Exemplo de montagem

Instalação no tablier

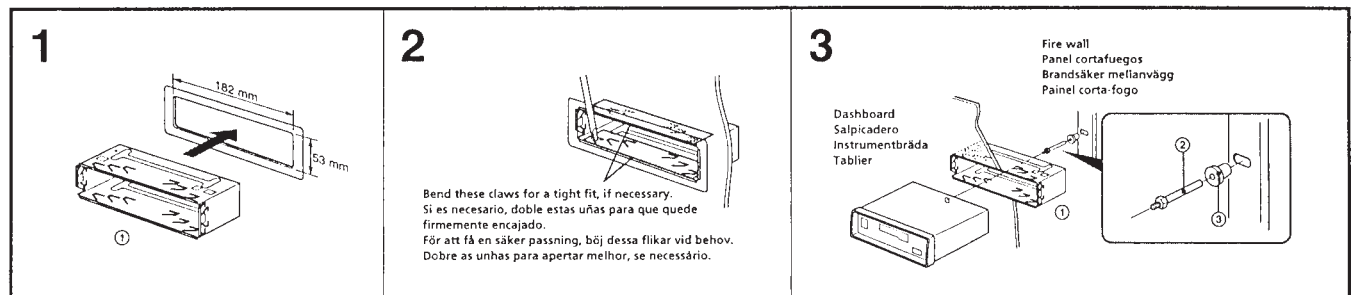

Connections

Caution

- This unit is designed for negative ground 12 V DC operation only.
- Connect the unit to the power supply of the car after all other connections are complete.
- Run all ground wires to a common ground point.
- Connect pin 4 or pin 7 of the unit's power connector to a free car circuit rated higher than the unit's fuse rating. If you connect this unit in combination with other stereo components, the car circuit they are connected to must be rated higher than the sum of the individual components' fuse rating. If there are no car circuits rated as high as the unit's fuse rating, connect the unit directly to the battery. If your car provides no circuit specifically for an audio unit, connect the unit to a car circuit rated higher than the unit's fuse rating in such a way that if the unit blows its fuse, no other circuits will be cut off.

If Your Car has No Accessory Position on the Ignition Key Switch — POWER SELECT Switch

The illumination on the front panel is factory set to be turned on even while the unit is not in use. However, this setting may cause some car battery wear if your car has no accessory position on the ignition key switch. To avoid this battery wear, set the POWER SELECT switch located on the top of the unit to the **0** position, then press the reset button. The illumination is reset to stay off while the unit is not in use.

Note
The caution alarm for the front panel is not activated when the POWER SELECT switch is set to the **0** position.

Conexiones

Precauciones

- Esta unidad ha sido diseñada para alimentarse con 12 V CC, negativo a masa, solamente.
- Conecte la unidad al suministro de alimentación del automóvil una vez realizadas todas las conexiones.
- Conecte todos los conductores de puesta a masa a un punto común.
- Conecte el terminal 4 o 7 del conector de alimentación de la unidad a un circuito libre del automóvil con una potencia nominal superior a la del fusible de la unidad. Si conecta esta en combinación con otros componentes estereo, la potencia nominal del circuito del automóvil al que se conecte debe ser superior a la suma de la de los fusibles de los componentes individuales. Si no hay ningún circuito en el automóvil con una potencia nominal tan alta como la del fusible de la unidad, conecte esta directamente a la batería. Si no hay circuitos en el automóvil destinados específicamente a la conexión de unidades de audio, conecte la unidad, conéctela a un circuito del automóvil con una potencia nominal superior a la del fusible de la unidad, de forma que si dicho fusible se funde no se vean afectados otros circuitos.

Si el automóvil no dispone de posición para accesorios en la llave de encendido — Selector POWER SELECT

La iluminación del panel frontal ha sido ajustada en fábrica para que esté activada aunque la unidad no se encuentre en reproducción. Sin embargo, este ajuste puede provocar cierta descarga de la batería del automóvil si éste no dispone de posición para accesorios en la llave de encendido. Para evitar esto, ponga el selector POWER SELECT, situado en la parte superior de la unidad, en la posición **0**, y, después, presione el botón de reposición. La iluminación estará desactivada cuando la unidad no se encuentre en reproducción.

Nota
La alarma de precaución del panel frontal no se activará cuando el selector POWER SELECT se encuentre en la posición **0**.

Anslutning

Sökerhetsföreskrifter

- Denna bilstereo är endast avsedd för anslutning till ett negativt jordat, 12 V bilbatteri.
- Anslut enheten till strömförsörjningen sedan alla andra anslutningar gjorts.
- Dra samtliga jordledningar till en och samma jordningspunkt.
- Anslut pol 4 eller pol 7 i enhetens strömanslutning till en fri krets med högre märkdata än enheten. Om du ansluter denna enhet i kombination med andra stereokomponenter måste den strömkrets de är anslutna till ha högre märkdata än summan av de enskilda komponenternas märkdata. Om det inte finns någon strömkrets med lika höga märkdata som enhetens ansluter du enheten direkt till bilbatteriet. Om det inte finns några bikretsar tillgängliga för en ljudenhet ansluter du den till en bikrets med högre märkdata än enheten så att inga andra kretsar bryts om enhetens säkring skulle gå.

Montera bilstereon i en bil vars tändlås inte har något strömläge — Omkopplaren POWER SELECT

Innan bilstereon levererades från fabriken ställdes belysningen i teckenfönstret in så att den lyser också när bilstereon inte används. Detta kan emellertid orsaka urladdning av batteriet när du använder bilstereon i en bil, vars tändlås saknar läget ACC (strömläge). Skjut omkopplaren POWER SELECT på bilstereons översidan till läge **0**, och tryck sedan på återställningsknappen för att undvika att bilbatteriet laddas ur. Nu lyser inte längre belysningen i teckenfönstret när bilstereon inte används.

Observera
Varningssignalen, som varnar om du inte har tagit loss frontpanelen, ljuder inte när omkopplaren POWER SELECT står i läge **0**.

Ligações

Advertência


- Este aparelho foi projectado para funcionar somente com corrente contínua de 12 V com massa negativa.
- Ligue o aparelho à fonte de alimentação do automóvel depois de completar todas as outras ligações.
- Ligue todos os fios de terra num ponto de massa comum.
- Ligue o pino 4 ou o pino 7 do conector de alimentação do aparelho a um circuito livre do automóvel com uma tensão superior à do fusível do aparelho. Se ligar este aparelho com outros componentes estereo, o circuito do automóvel a que estiverem ligados deve ter uma tensão superior à da soma dos fusíveis dos componentes individuais. Se nenhum circuito do automóvel tiver uma tensão tão elevada como a do fusível do aparelho, ligue-o directamente à bateria. Se nenhum circuito do automóvel se destinar especificamente à ligação deste aparelho, ligue-o a um circuito do automóvel que tenha uma tensão superior à do fusível do aparelho, de tal modo que, se o fusível rebentar, nenhum outro circuito seja afectado.

Se o seu automóvel não estiver equipado com uma chave de ignição com posição acessórios — Interruptor POWER SELECT

A iluminação do painel frontal é regulada na fábrica para se manter acesa, mesmo quando o aparelho não estiver ligado. No entanto, esta regulação pode provocar a descarga da bateria se o aparelho for utilizado em automóveis sem chave de ignição com posição acessórios. Para evitar a descarga da bateria, regule o interruptor POWER SELECT, situado na parte superior do aparelho, para a posição **0**. Em seguida, carregue no botão de reinicialização. A iluminação é regulada para ficar apagada enquanto o aparelho estiver desligado.

Nota
O alarme de advertência do painel frontal não é activado quando o interruptor POWER SELECT estiver regulado para a posição **0**.

Change the position with a jeweler's screwdriver, etc. Cambie la posición con un destornillador de relojero, etc. Använd en skruvmejsel för fimmekaniker eller ett liknande verktyg för att ändra på omkopplarläget. Altere a posição do interruptor com uma chave de fendas de precisão, etc.

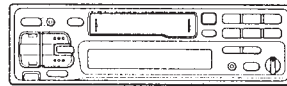

Reset Button

When the installation and connections are complete, be sure to press the reset button with a ballpoint pen etc.

Botón de reposición

Quando finalice la instalación y las conexiones, cerciórese de presionar el botón de reposición con un bolígrafo, etc.

Nollställningsknappen

Kom ihåg att använda en penna eller något annat spetsigt föremål för att trycka på nollställningsknappen när anslutningen och monteringen är klar.

Botão de reinicialização

Quando terminar a instalação e as ligações, não se esqueça de carregar no botão de reinicialização com a ponta de uma caneta, etc.



Reset button
Botón de reposición
Nollställningsknapp
Botão de reinicialização

Note on the control function
Pin 5 of the unit's power connector supplies + 12 V DC when you turn on the tuner or when you activate the ATA (Automatic Tuner Activation), AF (Alternative Frequency), or the TA (Traffic Announcement) Functions.

Memory hold connection
When pin 4 or pin 7 of the unit's power connector is connected, power will always be supplied to the memory circuit even when the ignition key is turned off.

- Notes on speaker connection**
- Before connecting the speakers, turn the unit off.
 - Use speakers with an impedance of 4 to 8 ohms, and with adequate power handling capacities. Otherwise, the speakers may be damaged.
 - Do not connect the terminals of the speaker system to the car chassis, and do not connect the terminals of the right speaker with those of the left speaker.
 - Do not attempt to connect the speakers in parallel.
 - Do not connect any active speakers (with built-in amplifiers) to the speaker terminals of the unit. Doing so may damage the active speakers. Therefore, be sure to connect passive speakers to these terminals.

Nota sobre la función de control
El terminal 5 del conector de alimentación de la unidad suministra + 12 V CC al activar el sintonizador o las funciones ATA (Activación automática del sintonizador), AF (Frecuencias alternativas) o TA (Anuncios de tráfico).

Conexión para protección de la memoria
Si se conecta el terminal 4 o 7 del conector de alimentación de la unidad, el circuito de memoria siempre recibirá alimentación aunque desactive la llave de encendido.

- Notas sobre la conexión de los altavoces**
- Antes de conectar los altavoces, desconecte la alimentación de la unidad.
 - Utilice altavoces con una impedancia de 4 a 8 ohmios, y con la potencia máxima admisible adecuada, ya que de lo contrario podría dañarlos.
 - No conecte los terminales del sistema de altavoces al chasis del automóvil, ni los del altavoz izquierdo a los del derecho.
 - No intente conectar los altavoces en paralelo.
 - No conecte altavoces activos (con amplificadores incorporados) a los terminales de altavoces de la unidad. Si lo hiciera, podría dañar tales altavoces. Por lo tanto, cerciórese de conectar altavoces pasivos a estos terminales.

Att observera angående kontrollfunktionen
Pol 5 i enhetens strömanslutning ger + 12 V likström när du slår på radion eller aktiverar någon av funktionerna ATA (Automatic Tuner Activation), AF (Alternative Frequency) eller TA (Traffic Announcement).

Anslutning för minnesstöd
När pol 4 eller pol 7 i enhetens strömanslutning är ansluten förses minneskretsen alltid med ström, även när tändningen slås av.

- Att observera angående högtalarnas anslutning**
- Slå av bilstereon innan du ansluter högtalarna.
 - Anslut endast högtalare, vars impedans varierar från 4 till 8 ohm och som har tillräcklig effekthanteringskapacitet för att skydda högtalarna mot skador.
 - Anslut inte något av högtalarnättagen till bilens chassi. Anslut inte heller uttagen på höger högtalare till uttagen på vänster högtalare.
 - Anslut inte högtalarna parallellt.
 - Anslut inte aktiva högtalare (med inbyggda slutsörg) till bilstereons högtalartuttag, eftersom de kan skada de aktiva högtalarna. Var nog med att bara ansluta passiva högtalare till dessa uttag.

Nota sobre a função do controle
O pino 5 do conector de alimentação do aparelho fornece + 12 V CC quando se liga o sintonizador ou se activam as funções ATA (Activação automática do sintonizador), AF (Frequência alternativa) ou TA (Informações sobre o trânsito).

Ligação para alimentação contínua da memória
Quando está ligada o pino 4 ou o pino 7 do conector de alimentação do aparelho, o circuito da memória recebe sempre alimentação, mesmo que não rode a chave da ignição.

- Notas sobre a ligação dos altifalantes**
- Antes de ligar os altifalantes, desligue o aparelho.
 - Utilize altifalantes com impedância de 4 a 8 ohms, e com capacidade admissível de potência adequada. Caso contrário, os altifalantes poderão sofrer avarias.
 - Não ligue os terminais do sistema de altifalantes ao chassis do automóvel, e não ligue os terminais do altifalante direito aos terminais do altifalante esquerdo.
 - Não tente ligar os altifalantes em paralelo.
 - Não ligue nenhum sistema de altifalantes activos (com amplificadores incorporados) aos terminais dos altifalantes do aparelho. Caso o faça, poderá avariar o sistema de altifalantes activos. Portanto, não se esqueça de ligar altifalantes passivos a estes terminais.

Power Connection

Power connectors may vary depending on the car. Check your car's power connector diagram to make sure the connections match correctly. There are two basic types. You may need to switch the positions of the jump connector. Before connecting the unit to the car's power supply, be sure to match the position of the jump connector to the car's pin order. If the power connector of your car does not match the connector on the unit, use the supplied connector ⑤. If you have any questions or problems connecting your unit that are not covered in this manual, please consult the car dealer.

WARNING

Jump connector

Check the pin position of the power connector of the car with the table on the below. If positions 4 and 7 are reversed, remove the jump connector and shift it to the rightmost position as shown in the illustration.

Conexión de alimentación

Los conectores de alimentación pueden variar en función del automóvil. Consulte el diagrama del conector de alimentación del automóvil para comprobar que las conexiones coinciden correctamente. Existen dos tipos básicos. Es posible que sea necesario cambiar las posiciones del conector de empalme. Antes de conectar la unidad al suministro de alimentación del automóvil, asegúrese de que la posición del conector de empalme coincide con el orden de terminales del dicho automóvil. Si el conector de alimentación del automóvil no coincide con el de la unidad, emplee el conector ⑤ suministrado. Si desea realizar alguna consulta o solucionar algún problema referentes a la conexión de la unidad que no aparezcan en este manual, póngase en contacto con el concesionario automovilístico.

ADVERTENCIA

Conector de empalme

Compruebe la posición de terminal del conector de alimentación del automóvil con la tabla que aparece más abajo. Si las posiciones 4 y 7 se invierten, retire el conector de empalme y desplácelo hasta la posición del extremo derecho como se muestra en la ilustración.

Strömanslutningsschema

Strömanslutningarna kan variera beroende på vilken bil du har. Kontrollera bilens diagram över strömanslutningar för att kontrollera att anslutningarna passar ihop. Det finns två huvudtyper. Du kan behöva ändra positionerna på överkopplingen. Innan du ansluter enheten till bilens strömförsörjning bör du kontrollera att överkopplingens placering överensstämmer med bilens polordning. Om din bils strömanslutningar inte överensstämmer med anslutningen på enheten använder du det medföljande kontaktdonet ⑤. Om du har några frågor eller problem när det gäller anslutningen av enheten som inte tas upp i denna bruksanvisning kan du kontakta bilaterförsäljaren.

VARNING

Överkoppling

Jämför bilens strömanslutning med tabellen till nedan. Om positionerna 4 och 7 är omkastade tar du bort överkopplingen och flyttar den till positionen längst till höger.


Diagrama de ligação de corrente

Os conectores de alimentação podem variar de automóvel para automóvel. Verifique o diagrama do conector de alimentação do seu automóvel, para ter a certeza de que a correspondência das ligações está correcta. Há dois tipos básicos. Pode ter que trocar as posições do conector jump. Antes de ligar o aparelho à fonte de alimentação do automóvel, não se esqueça de fazer a correspondência entre a posição do conector jump e a ordem dos pinos do automóvel. Se o conector de alimentação do seu automóvel não corresponder ao conector do aparelho, utilize os conector ⑤ fornecido. Se tiver dúvidas o problemas ao ligar o aparelho que não estejam referidos neste manual, consulte o vendedor do automóvel.

AVISO

Conector jump

Verifique a posição dos pinos do conector de alimentação do automóvel na tabela abaixo. Se as posições 4 e 7 estiverem invertidas, remova o conector jump e mude-o para a posição mais à direita, tal como se mostra na ilustração.

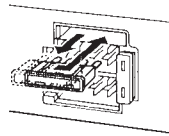

Connection example

Ejemplo de conexiones

Anslutningarna enligt exemplet

Exemplo de ligações

- **Note for the aerial connecting**
If your car aerial is an ISO (International Organization for Standardization) type, use the supplied adapter ⑤ to connect it.
- **Nota sobre la conexión de la antena**
Si la antena del automóvil es del tipo ISO (International Organization for Standardization), emplee el adaptador ⑤ suministrado para conectarla.
- **Angående antennanslutning**
Om motorantennen är av ISO-typ (International Organization for Standardization), använd den medföljande adapter ⑤ för att ansluta den.
- **Nota referente à ligação da antena**
Se a antena do automóvel for uma antena de tipo ISO (International Organization for Standardization), utilize o adaptador fornecido ⑤ para fazer a ligação respectiva.

(XR-5800R only)

from car aerial de la antena del automóvil från bilantenn à antena do automóvel

Blue Azul Blå Azul

ATT

to the interface cable of a car telephone al cable de interfaz de un teléfono para automóvil tili mobiltelefonens gränssnittskabel ao cabo de interface do telefone celular móvel


REMOTE IN

Fuse (10 A)
Fusible (10 A)
Säkring (10 A)
Fusível (10 A)

from the car's speaker connector del conector de altavoz del automóvil från bilens högtalaranslutning a partir do conector do altifalante do automóvel

Pin Pol Pino	Function Función Função	Pin Pol Pino	Function Función Função
1	+; Speaker, Rear, Right +; Altavoz, trasero, derecho +; Högtalare, bakre, höger Altifalante, Parte de trás, Direito	5	+; Speaker, Front, Left +; Altavoz, delantero, izquierdo Högtalare, främre, vänster Altifalante, Parte da frente, Esquerdo
2	-; Speaker, Rear, Right -; Altavoz, trasero, derecho Högtalare, bakre, höger Altifalante, Parte de trás, Direito	6	-; Speaker, Front, Left -; Altavoz, delantero, izquierdo Högtalare, främre, vänster Altifalante, Parte da frente, Esquerdo
3	+; Speaker, Front, Right +; Altavoz, delantero, derecho Högtalare, främre, höger Altifalante, Parte da frente, Direito	7	+; Speaker, Rear, Left +; Altavoz, trasero, izquierdo Högtalare, bakre, vänster Altifalante, Parte de trás, Esquerdo
4	continuous power supply suministro de alimentación continua kontinuerlig strömförsörjning alimentação ininterrupta de corrente	7	switched power supply suministro conmutado de alimentación switchad strömförsörjning fornecimento comutado de corrente
5	power aerial control control de antena eléctrica elektrisk antenn antena eléctrica	8	ground toma de tierra jord Terra

Connection Diagram
Diagrama de conexiones
Kopplingschema
Diagrama de ligações

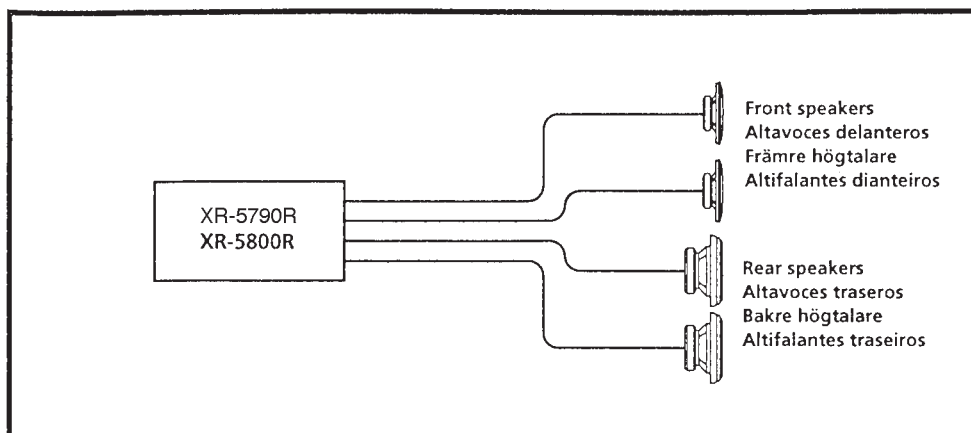

Caution


Cautionary notice for handling the bracket ①.
Handle the bracket carefully to avoid injuring your fingers.

Precaución

Advertencia sobre la manipulación del soporte ①.
Tenga mucho cuidado al manipular el soporte para evitar posibles lesiones en los dedos.

Varning

Att observera angående konsolen ①.
Hantera konsolen med största aktsamhet så att du inte skadar fingrarna.

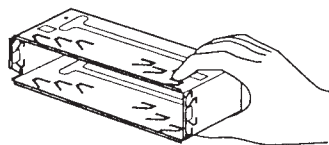


Cuidado

Aviso sobre as precauções a tomar no manuseamento do suporte ①.
Pegue no suporte com cuidado para não magoar os dedos.


SECTION 2 DISASSEMBLY

Note: Follow the disassembly procedure in the numerical order given.


FRONT PANEL ASS'Y

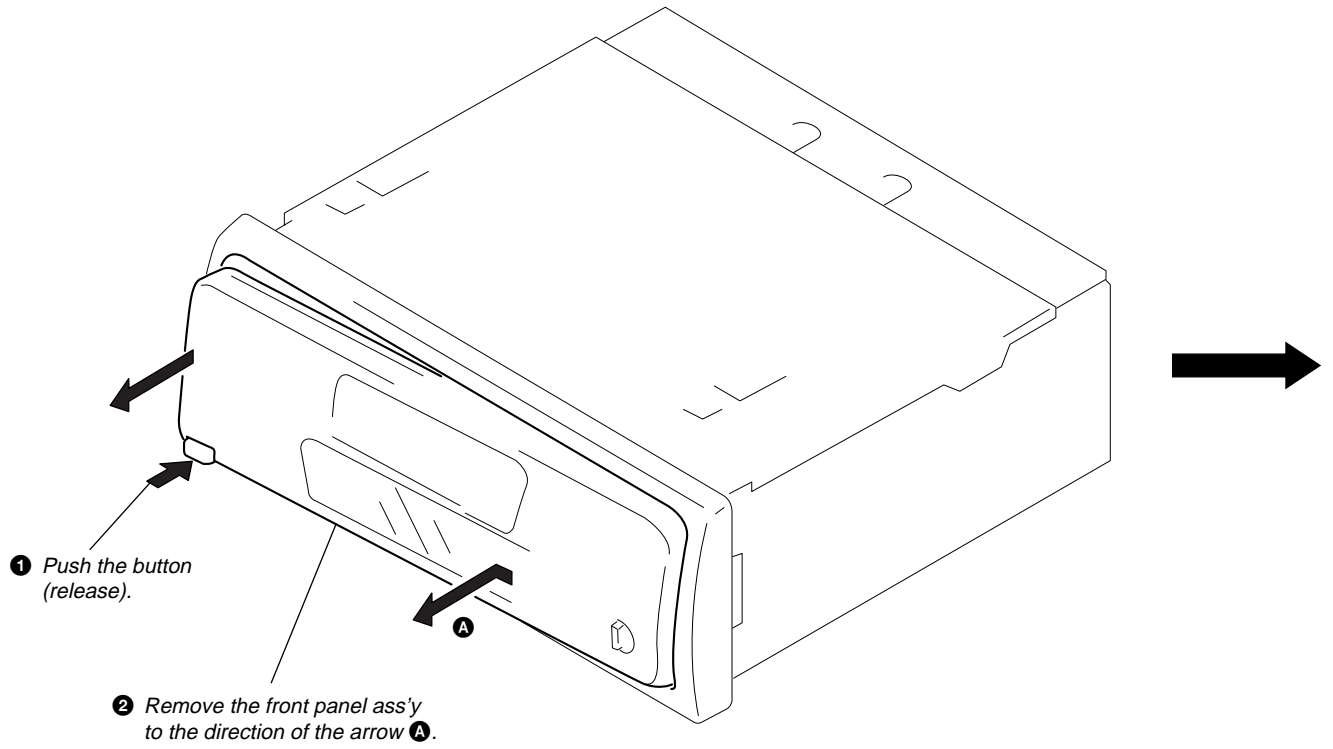


COVER ASS'Y

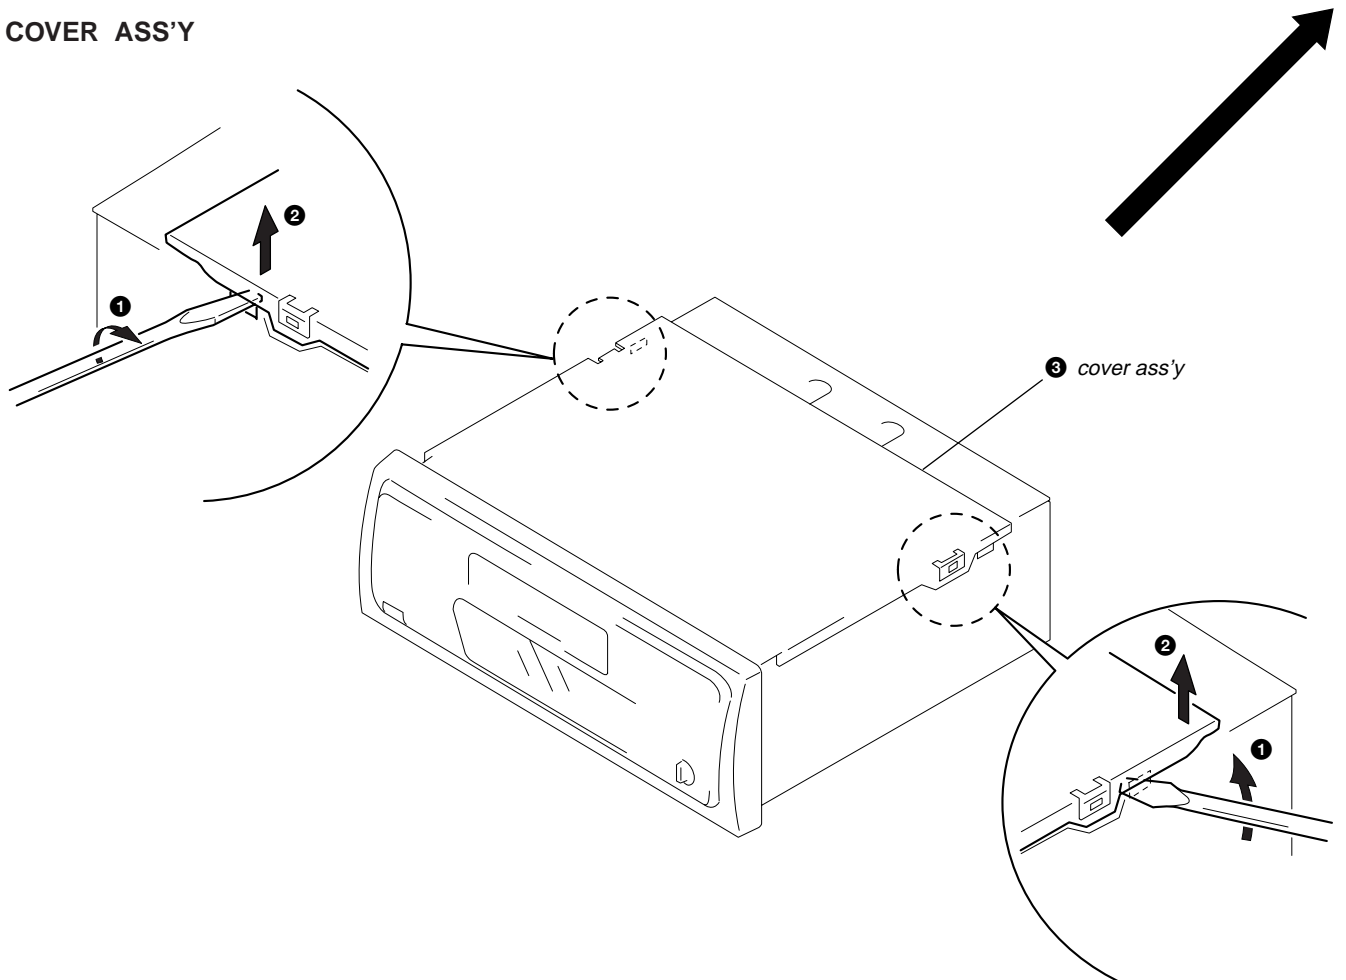

SUB PANEL, MECHANISM DECK (MG-25G-136)

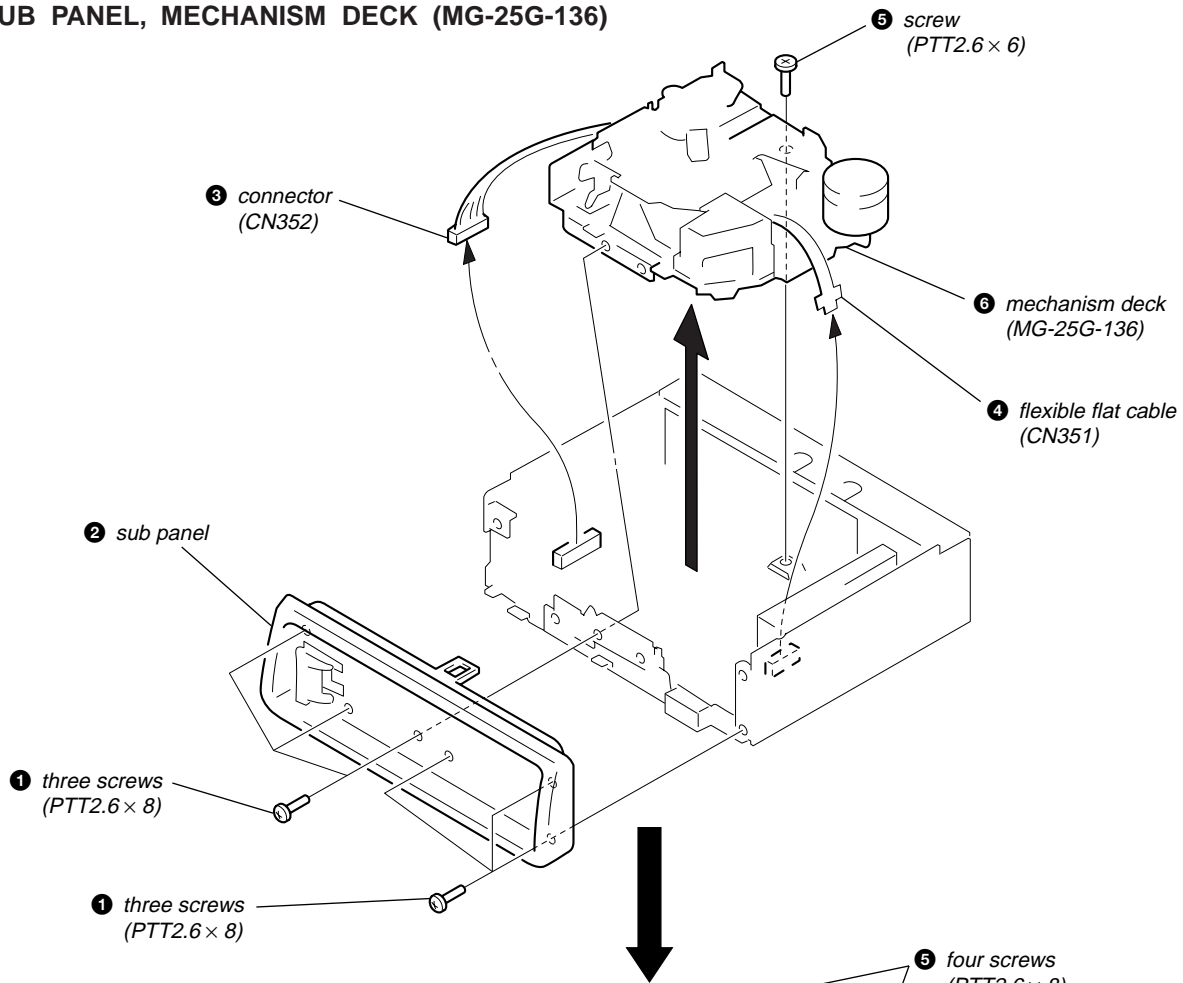


MAIN BOARD, HEAT SINK

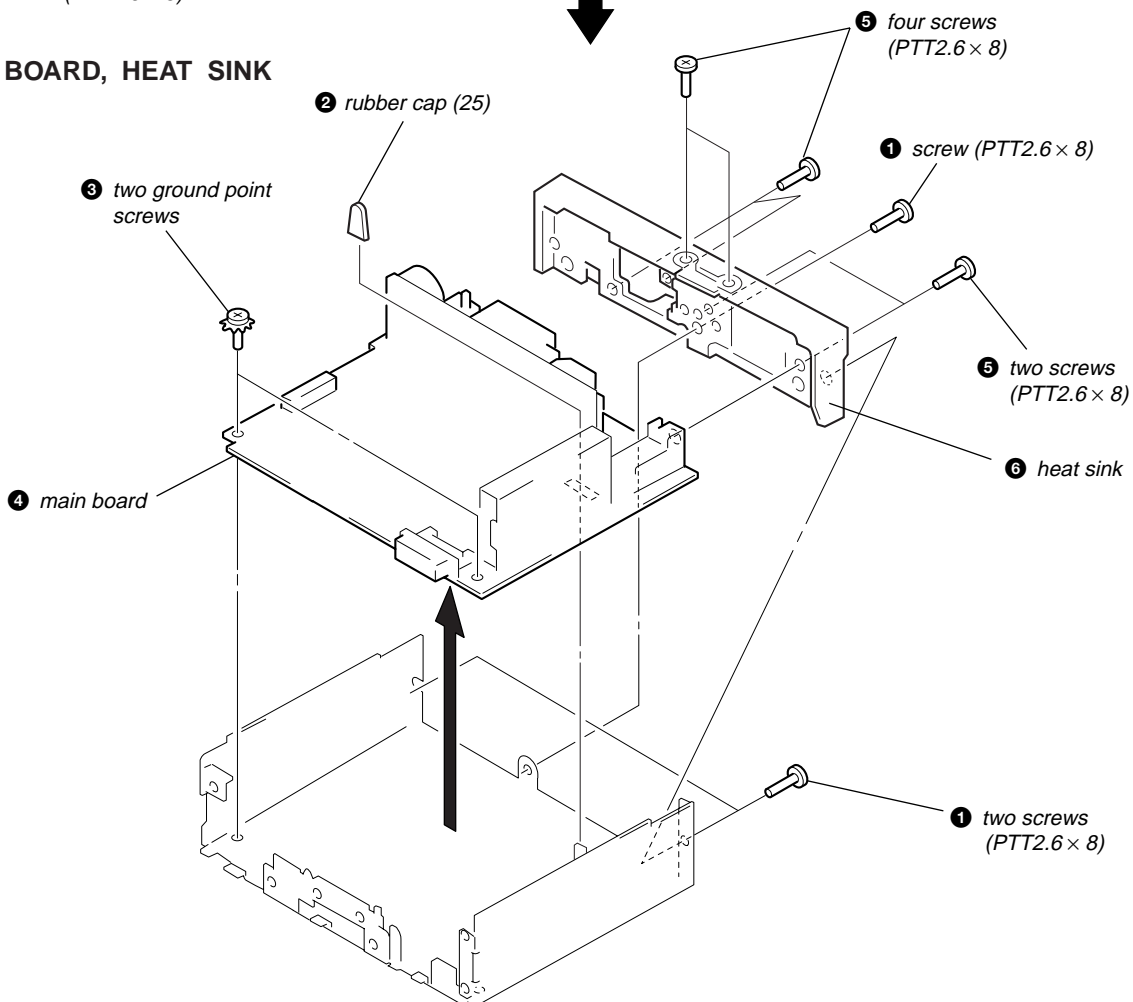


SECTION 3 ASSEMBLY OF MECHANISM DECK

Note: Follow the assembly procedure in the numerical order given.


HOUSING

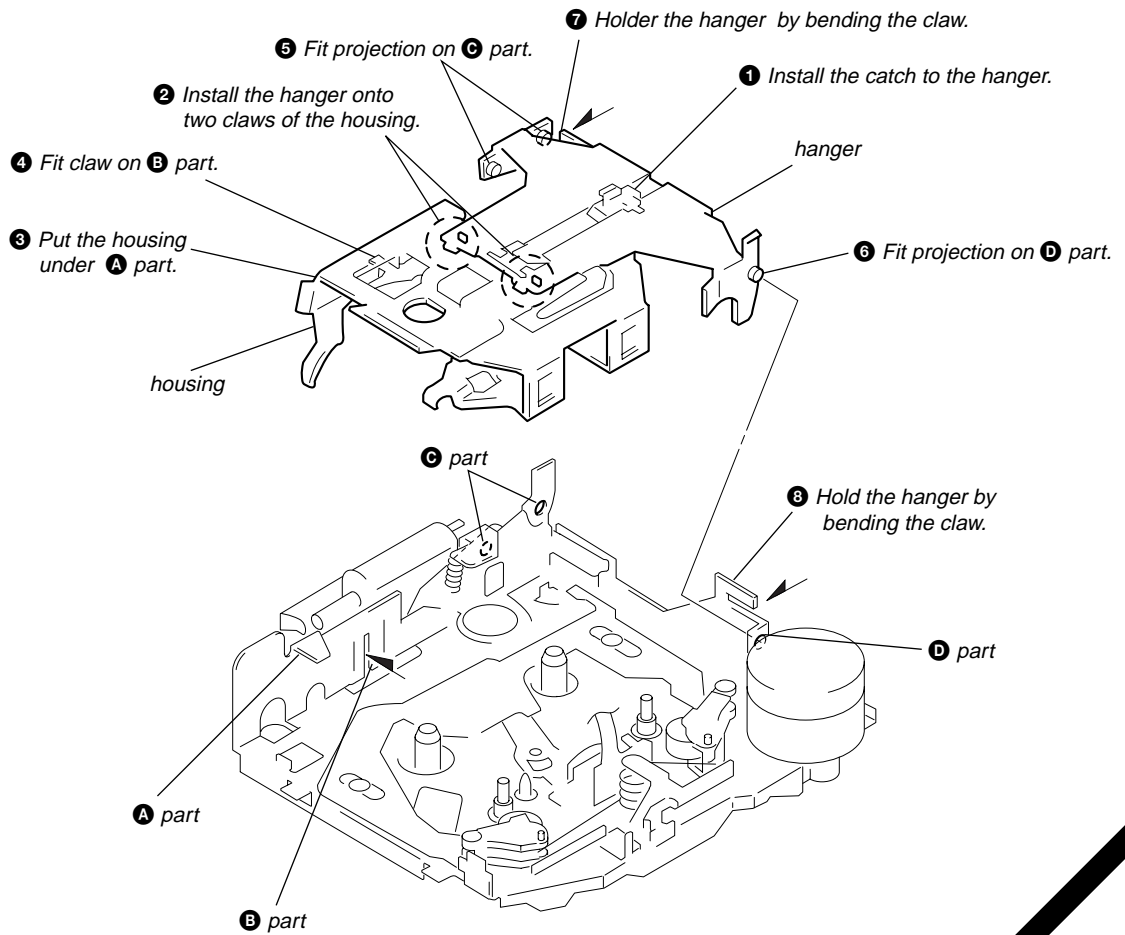



ARM (SUCTION)

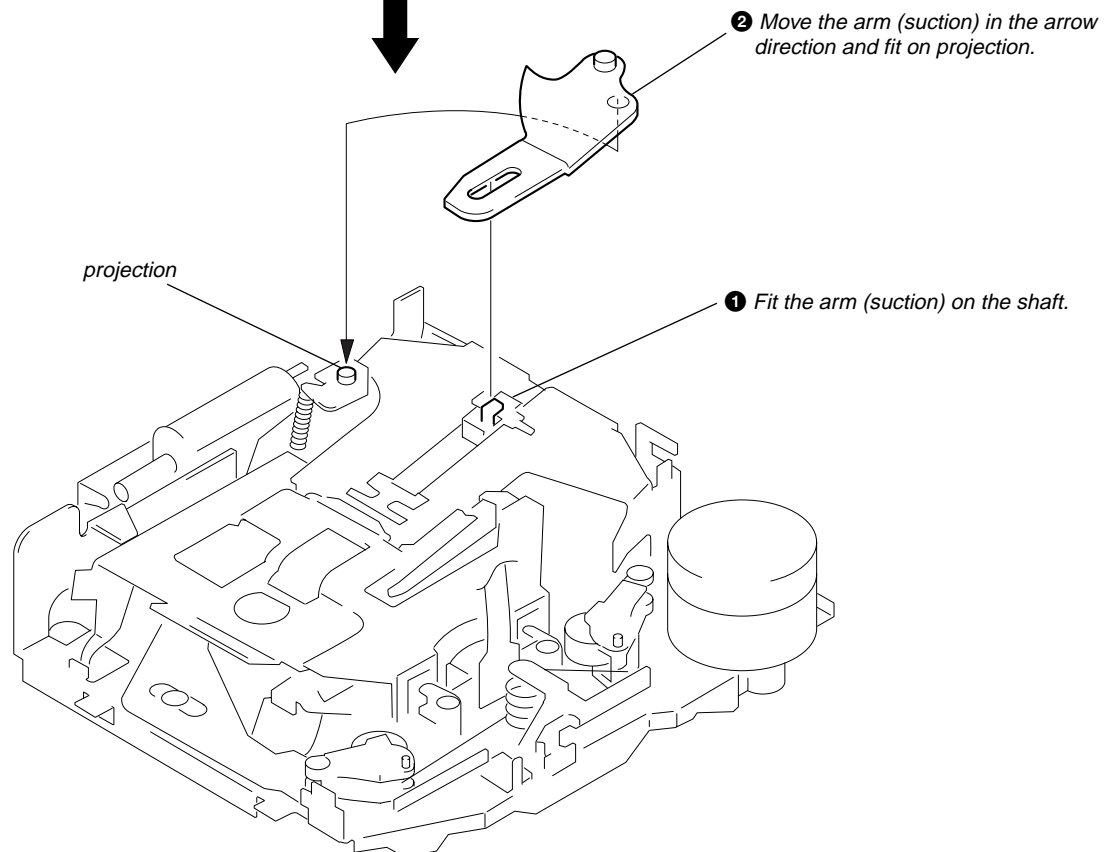

LEVER (LDG-A) / (LDG-B)

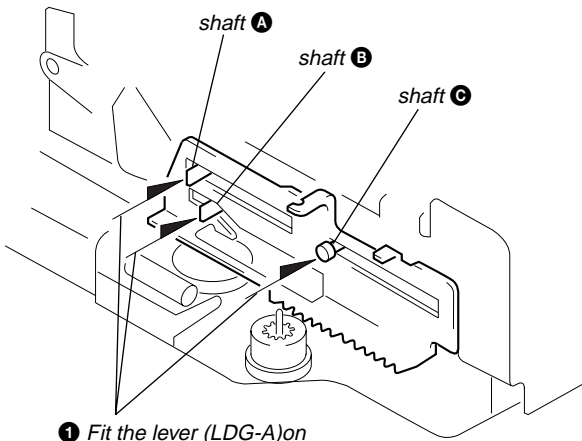


- 1 Fit the lever (LDG-A) on shafts A - C and install it.

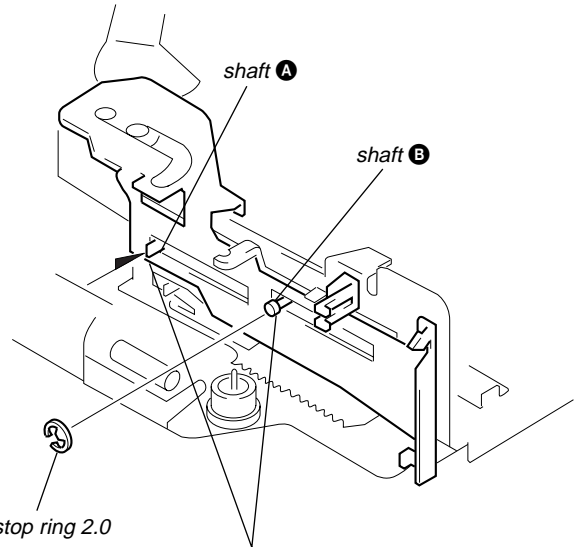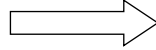


- 3 type-E stop ring 2.0


- 2 Fit the lever (LDG-B) on shafts A and B and install it.

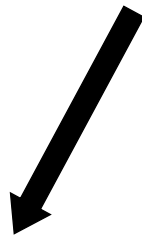

GEAR (LDG-FT)

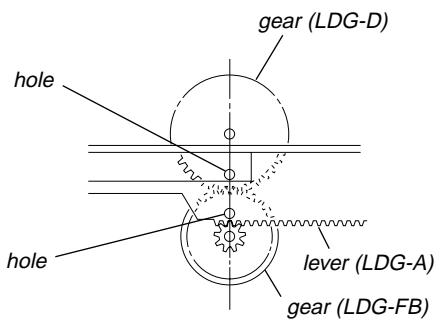

- 4 Align hole in the gear (LDG-D) with hole the lever (LDG-A)

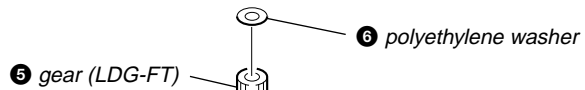

- 5 gear (LDG-FT)


- 6 polyethylene washer

- 2 tension spring (LD-2)

- 2 tension spring (LD-1)

- 3 Move the lever (LDG-B) in the arrow direction.

GUIDE (C)

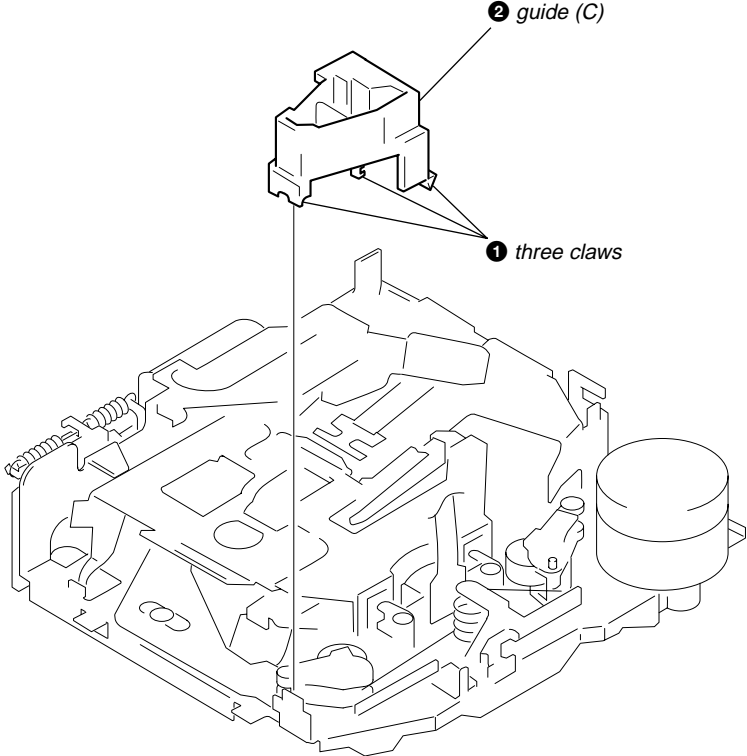

SECTION 4 MECHANICAL ADJUSTMENTS

1. Clean the following parts with a denatured-alcohol-moistened swab:

playback head	pinch roller
rubber belt	capstan
idlers	
2. Demagnetize the playback head with a head demagnetizer.
3. Do not use a magnetized screwdriver for the adjustments.
4. After the adjustments, apply suitable locking compound to the parts adjusted.
5. The adjustments should be performed with the power supply voltage unless otherwise noted.

• Torque Measurement

Mode	Torqu Meter	Meter Reading
Forward	CQ-102C	30 - 65 g•cm (0.42 - 0.90 oz•inch)
Forward Back Tension	CQ-102C	0.5 - 4.5 g•cm (0.01 - 0.06 oz•inch)
Reverse	CQ-102RC	30 - 65 g•cm (0.42 - 0.90 oz•inch)
Reverse Back Tension	CA-102RC	0.5 - 4.5 g•cm (0.01 - 0.06 oz•inch)
FF, REW	CQ-201B	60 - 200 g•cm (0.83 - 2.78 oz•inch)

• Tape Tension Measurement

Mode	Torqu Meter	Meter Reading
Forward	CQ-403A	more than 90 g (more than 3.18 oz)
Reverse	CQ-403R	more than 90 g (more than 3.18 oz)

SECTION 5 ELECTRICAL ADJUSTMENTS

TEST MODE

This set have the test mode function. In the test mode, FM Auto Scan/Stop Level and AM (MW) Auto Scan/Stop Level adjustments can be performed easier than it in ordinary procedure.

<Set the Test Mode>

1. Set the “power select” switch (S801) is “A” position.
2. Turn ON the regulated power supply. (All LEDs on the set lights up, and the clock is displayed.)

Note: Press the **[OFF]** button, if the clock is not displayed.
3. Push the preset **[4]** button.
4. Push the preset **[5]** button.
5. Press the preset **[1]** button for more than two seconds.
6. Then the display indicates all lights, the test mode is set.

<Release the Test mode>

1. Push the **[OFF]** button.
2. Return the “power select” switch (S801) to initially set position.


See the adjustment location from on page 17 for the adjustment.

TAPE DECK SECTION

0 dB=0.775 V

Tape Speed Adjustment

Setting:

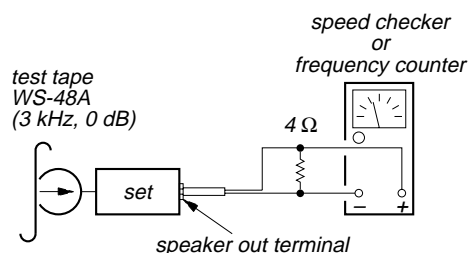

Procedure:

1. Put the set into the FWD PB mode.
2. Adjust adjustment resistor for inside capstan motor so that the reading on the speed checker or frequency counter becomes in specification.

Specification: Constant speed

Speed checker	Frequency counter
-1.5 to +2.5%	2,955 to 3,075 Hz

Adjustment Location: See page 17.

TUNER SECTION

0 dB=1 μ V

Cautions during repair

When the tuner unit is defective, replace it by a new one because its internal block is difficult to repair.

Note:


Adjust the tuner section in the sequence shown below.

1. FM Auto Scan/Stop Level Adjustment
2. FM Noise Focus Adjustment
3. FM Stereo Separation Adjustment
4. FM Signal Meter Adjustment
5. AM (MW) Auto Scan/Stop Level Adjustment

FM Auto Scan/Stop Level Adjustment

Setting:


[SOURCE] button: FM

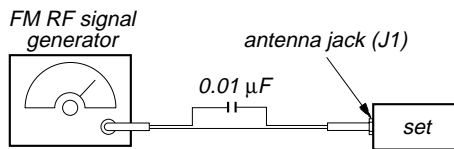


Carrier frequency : 98.0 MHz
 Output level : 22 dB (12.6 μ V)
 Mode : mono
 Modulation : 1 kHz, 22.5 kHz deviation (30%)

Procedure:

1. Set to the test mode. (See page 14).
2. Push the **[SOURCE]** button and set to FM.

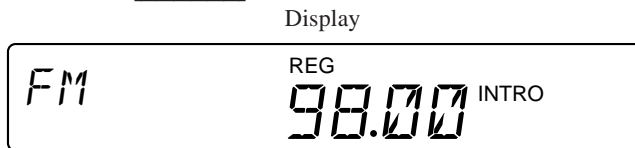

3. Adjust with the volume RV2 on TU1 so that the "FM" indication turns to "FM0" indication on the display window. But, in case of already indicated "FM0", turn the RV2 so that put out light "0" indication and adjustment.

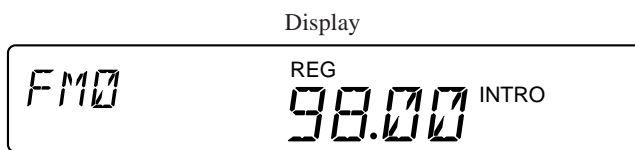


Adjustment Location: See page 17.

FM Noise Focus Adjustment

Setting:

[SOURCE] button: FM

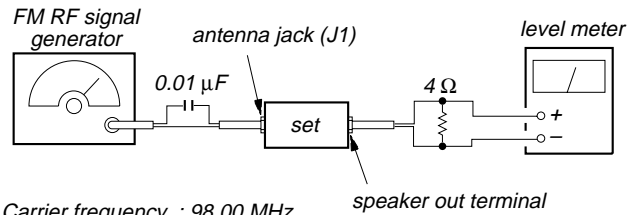

Carrier frequency : 98.00 MHz
 Output level : 60 dB (1 mV)
 Mode : stereo
 Modulation : 1 kHz, 75 kHz deviation (100%)

Procedure:


1. Tuner the 98.00 MHz.
2. The then output level is supposing that (A) dB.
3. Adjust with the volume RV3 on TU1 so that the output level is (A) -32 ± 2 dB then signal generator input set to -20 dB.

Adjustment Location: See page 17.

FM Stereo Separation Adjustment

Setting:

[SOURCE] button: FM

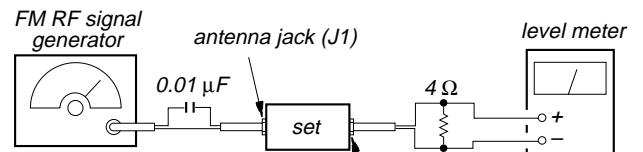

Carrier frequency : 98.0 MHz
 Output level : 70 dB (3.2 mV)
 Mode : stereo
 Modulation : main: 1 kHz, 20 kHz deviation (26.7%)
 sub: 1 kHz, 20 kHz deviation (26.7%)
 19 kHz pilot: 7.5 kHz deviation (10%)

Procedure:

FM Stereo signal generator output channel	Level meter connection	Level meter reading (dB)
L-CH	L-CH	(A)
R-CH	L-CH	(B) Adjust RV4 on TU1 for minimum reading.
R-CH	R-CH	(C)
L-CH	R-CH	(D) Adjust RV4 on TU1 for minimum reading.

L-CH Stereo separation: (A)-(B)

R-CH Stereo separation: (C)-(D)

The separations of both channels should be equal.


Specification: Separation more than 30 dB

Adjustment Location: See page 17.

FM Signal Meter Adjustment

Setting:


[SOURCE] button: FM

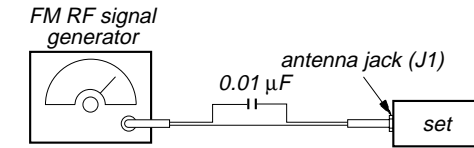


Carrier frequency : 98.00 MHz
 Output level : 35 dB (56.2 μV)
 Mode : mono
 Modulation : no modulation

Procedure:

1. Set to the test mode. (See page 14.)
2. Push the [SOURCE] button and set to FM.

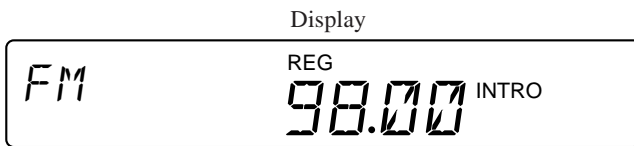

3. Push the [6] button.
4. Adjust RV1 so that the display indication is "160".

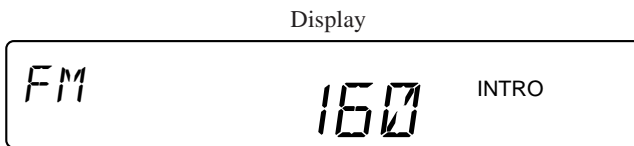

Specification: Display indication: 158 to 162


Adjustment Location: See page 17.

AM (MW) Auto Scan/Stop Level Adjustment

Make this adjustment after "FM Auto Scan/Stop Level Adjustment".

Setting:


[SOURCE] button: MW

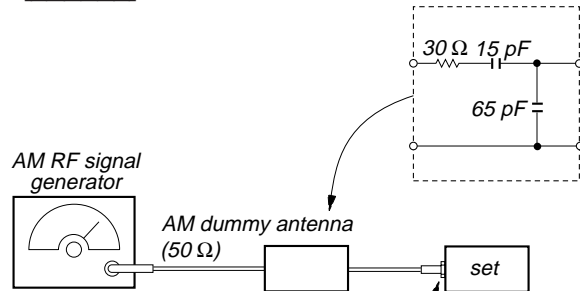


Carrier frequency : 999 kHz
 30% amplitude modulation by 1 kHz signal
 Output level : 33 dB (44.7 μV)

Procedure:

1. Set to the test mode. (See page 14.)
2. Push the [SOURCE] button and set to FM.
3. Push the [MODE] button and set to MW.

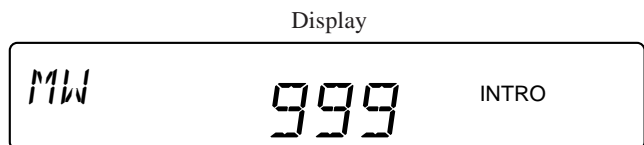


4. Adjust with the volume RV1 on TU1 so that the "MW" indication turns to "MW0" indication on the display window. But, in case of already indicated "MW0", turn the RV1 so that put out light "0" indication and adjustment.

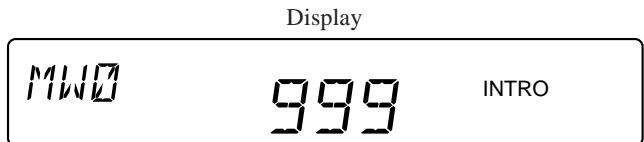

Adjustment Location: See page 17.

Adjustment Location:


– SET UPPER VIEW –

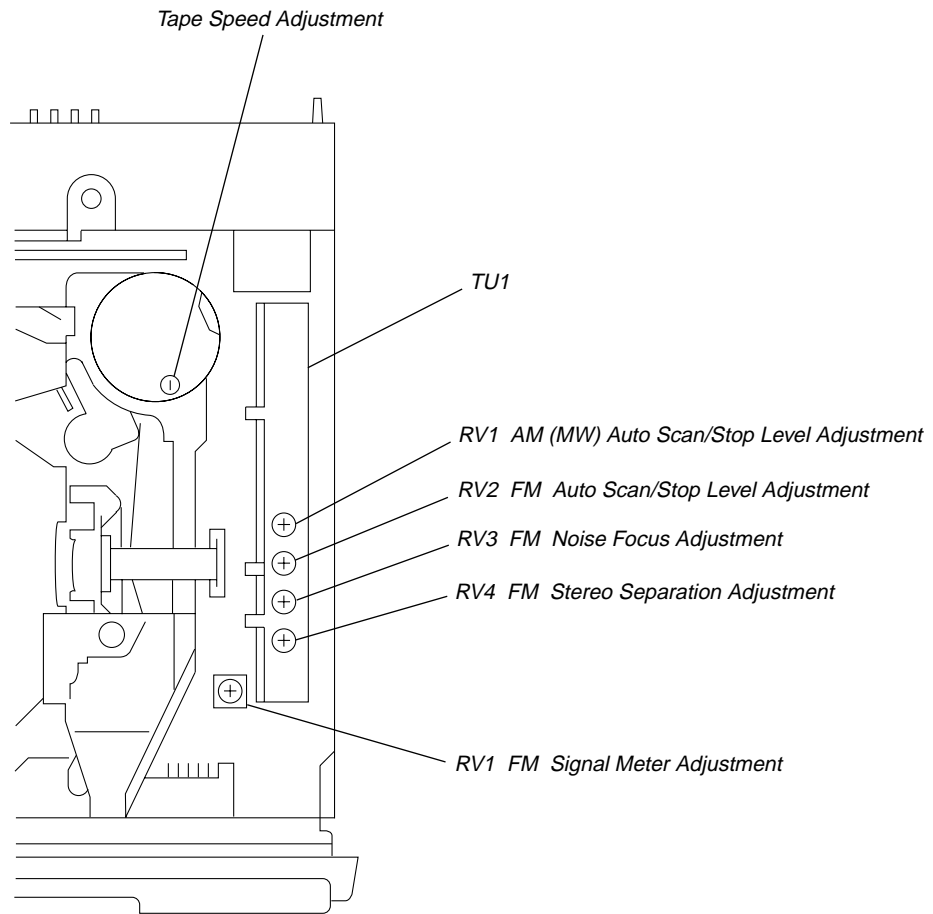


SECTION 6 DIAGRAMS

• IC Block Diagrams – MAIN Board –


IC1 TB2114F (EL)

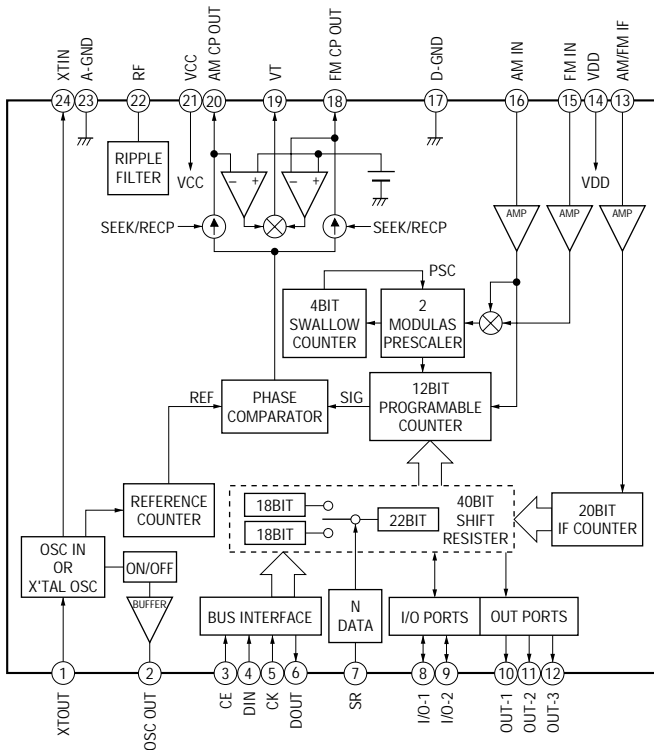


IC3 TDA7330BD-013TR

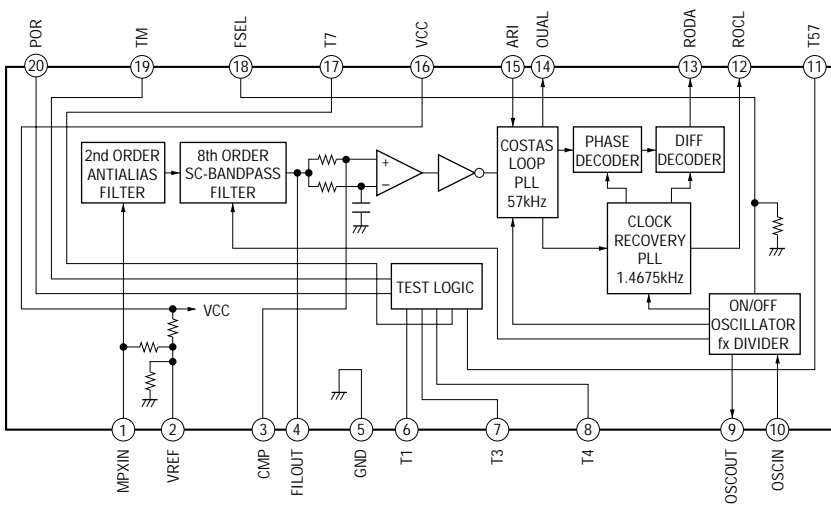


IC151 LC75373ED

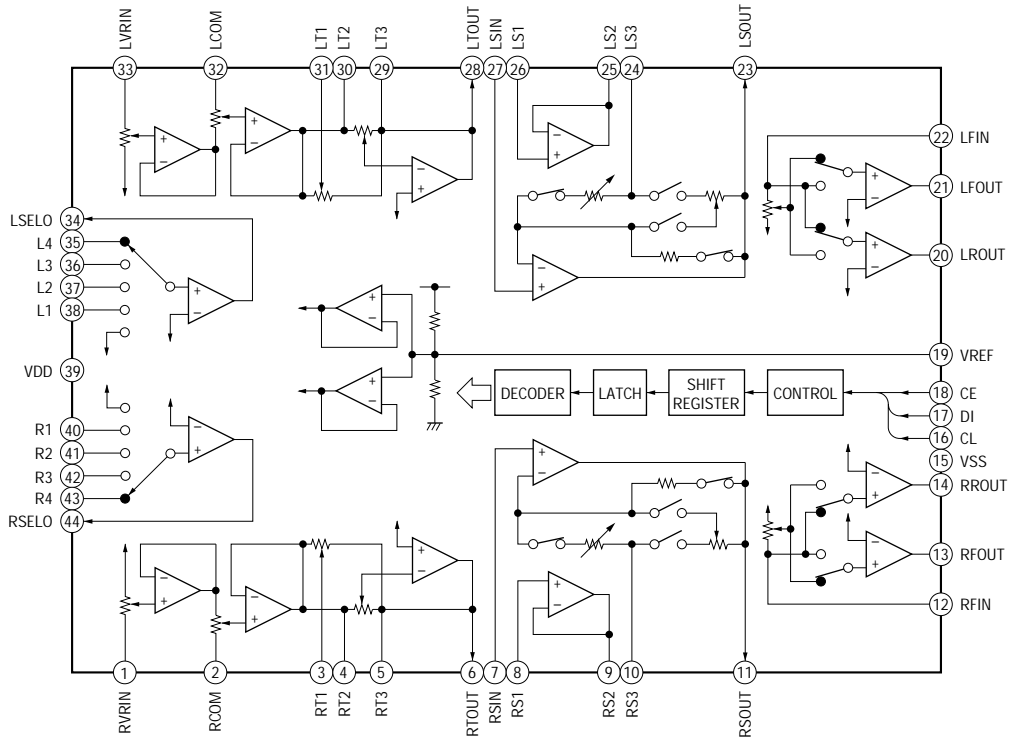


IC351 CXA2509AQ-T4

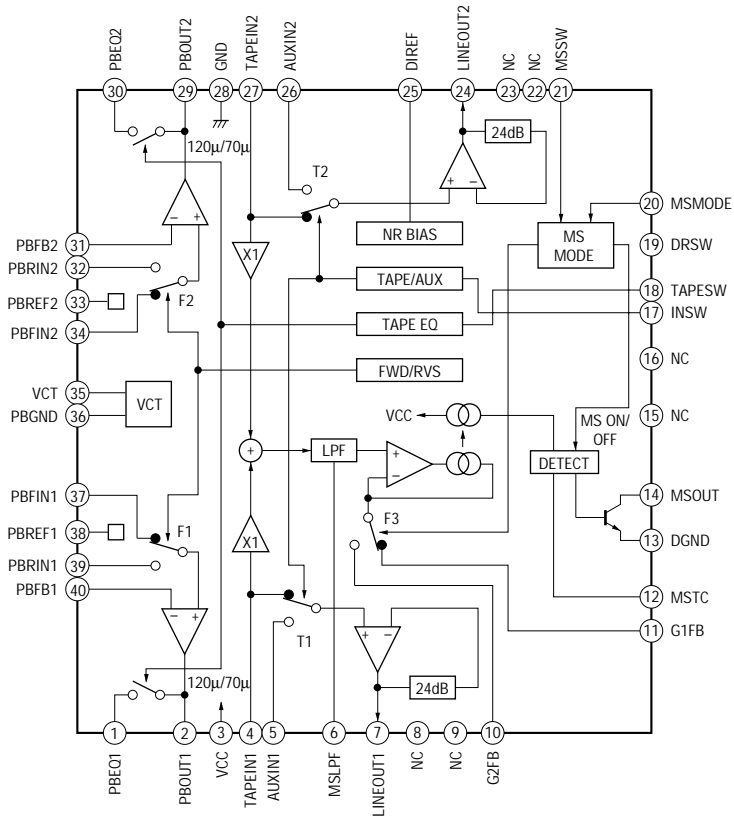

IC360 MM1322XFBE

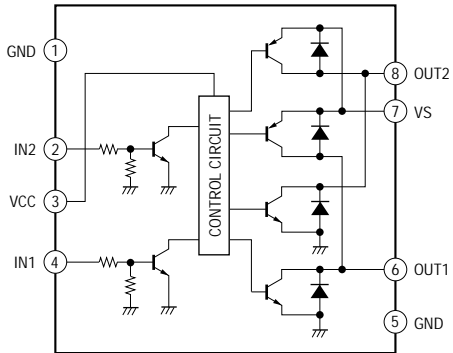


IC601 BA3918-V2

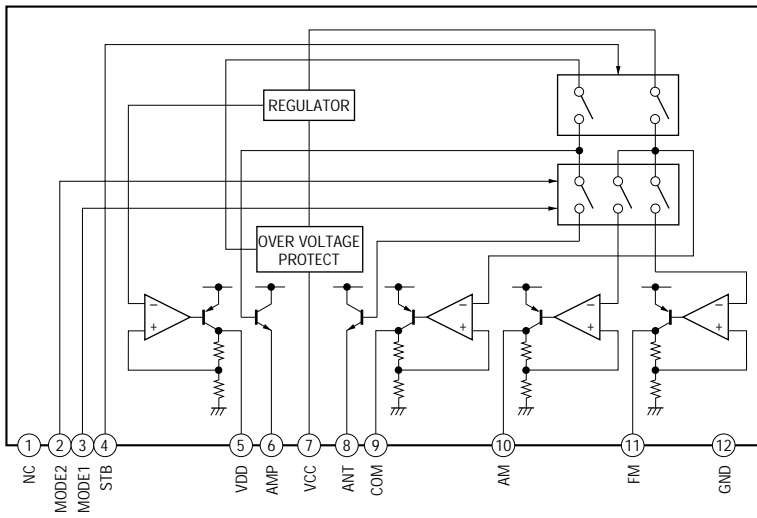


• Waveforms


1 IC1 ① XO

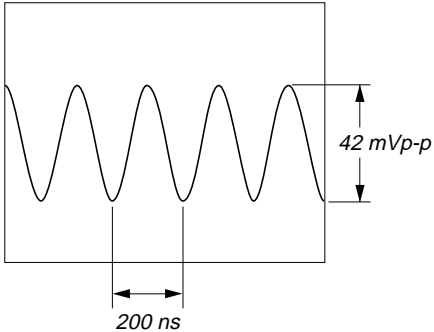


2 IC3 ⑨ XO

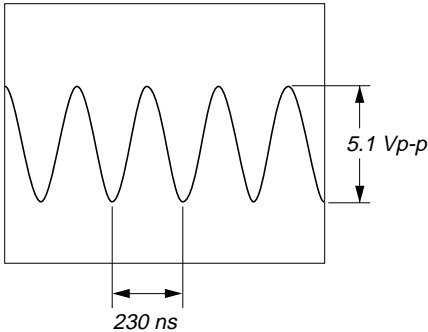


3 IC501 ⑨ X OUT

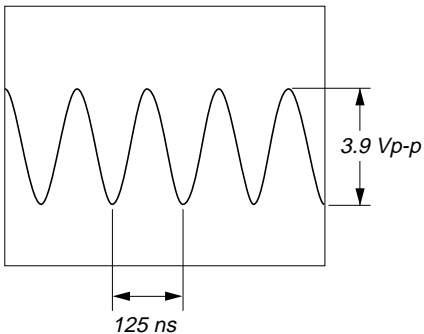

4 IC501 ⑫ XT OUT

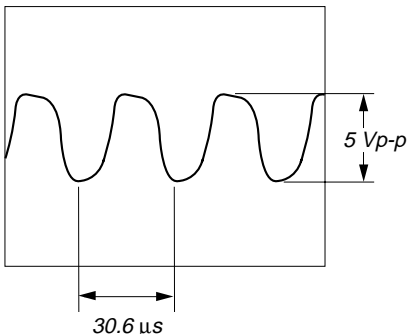

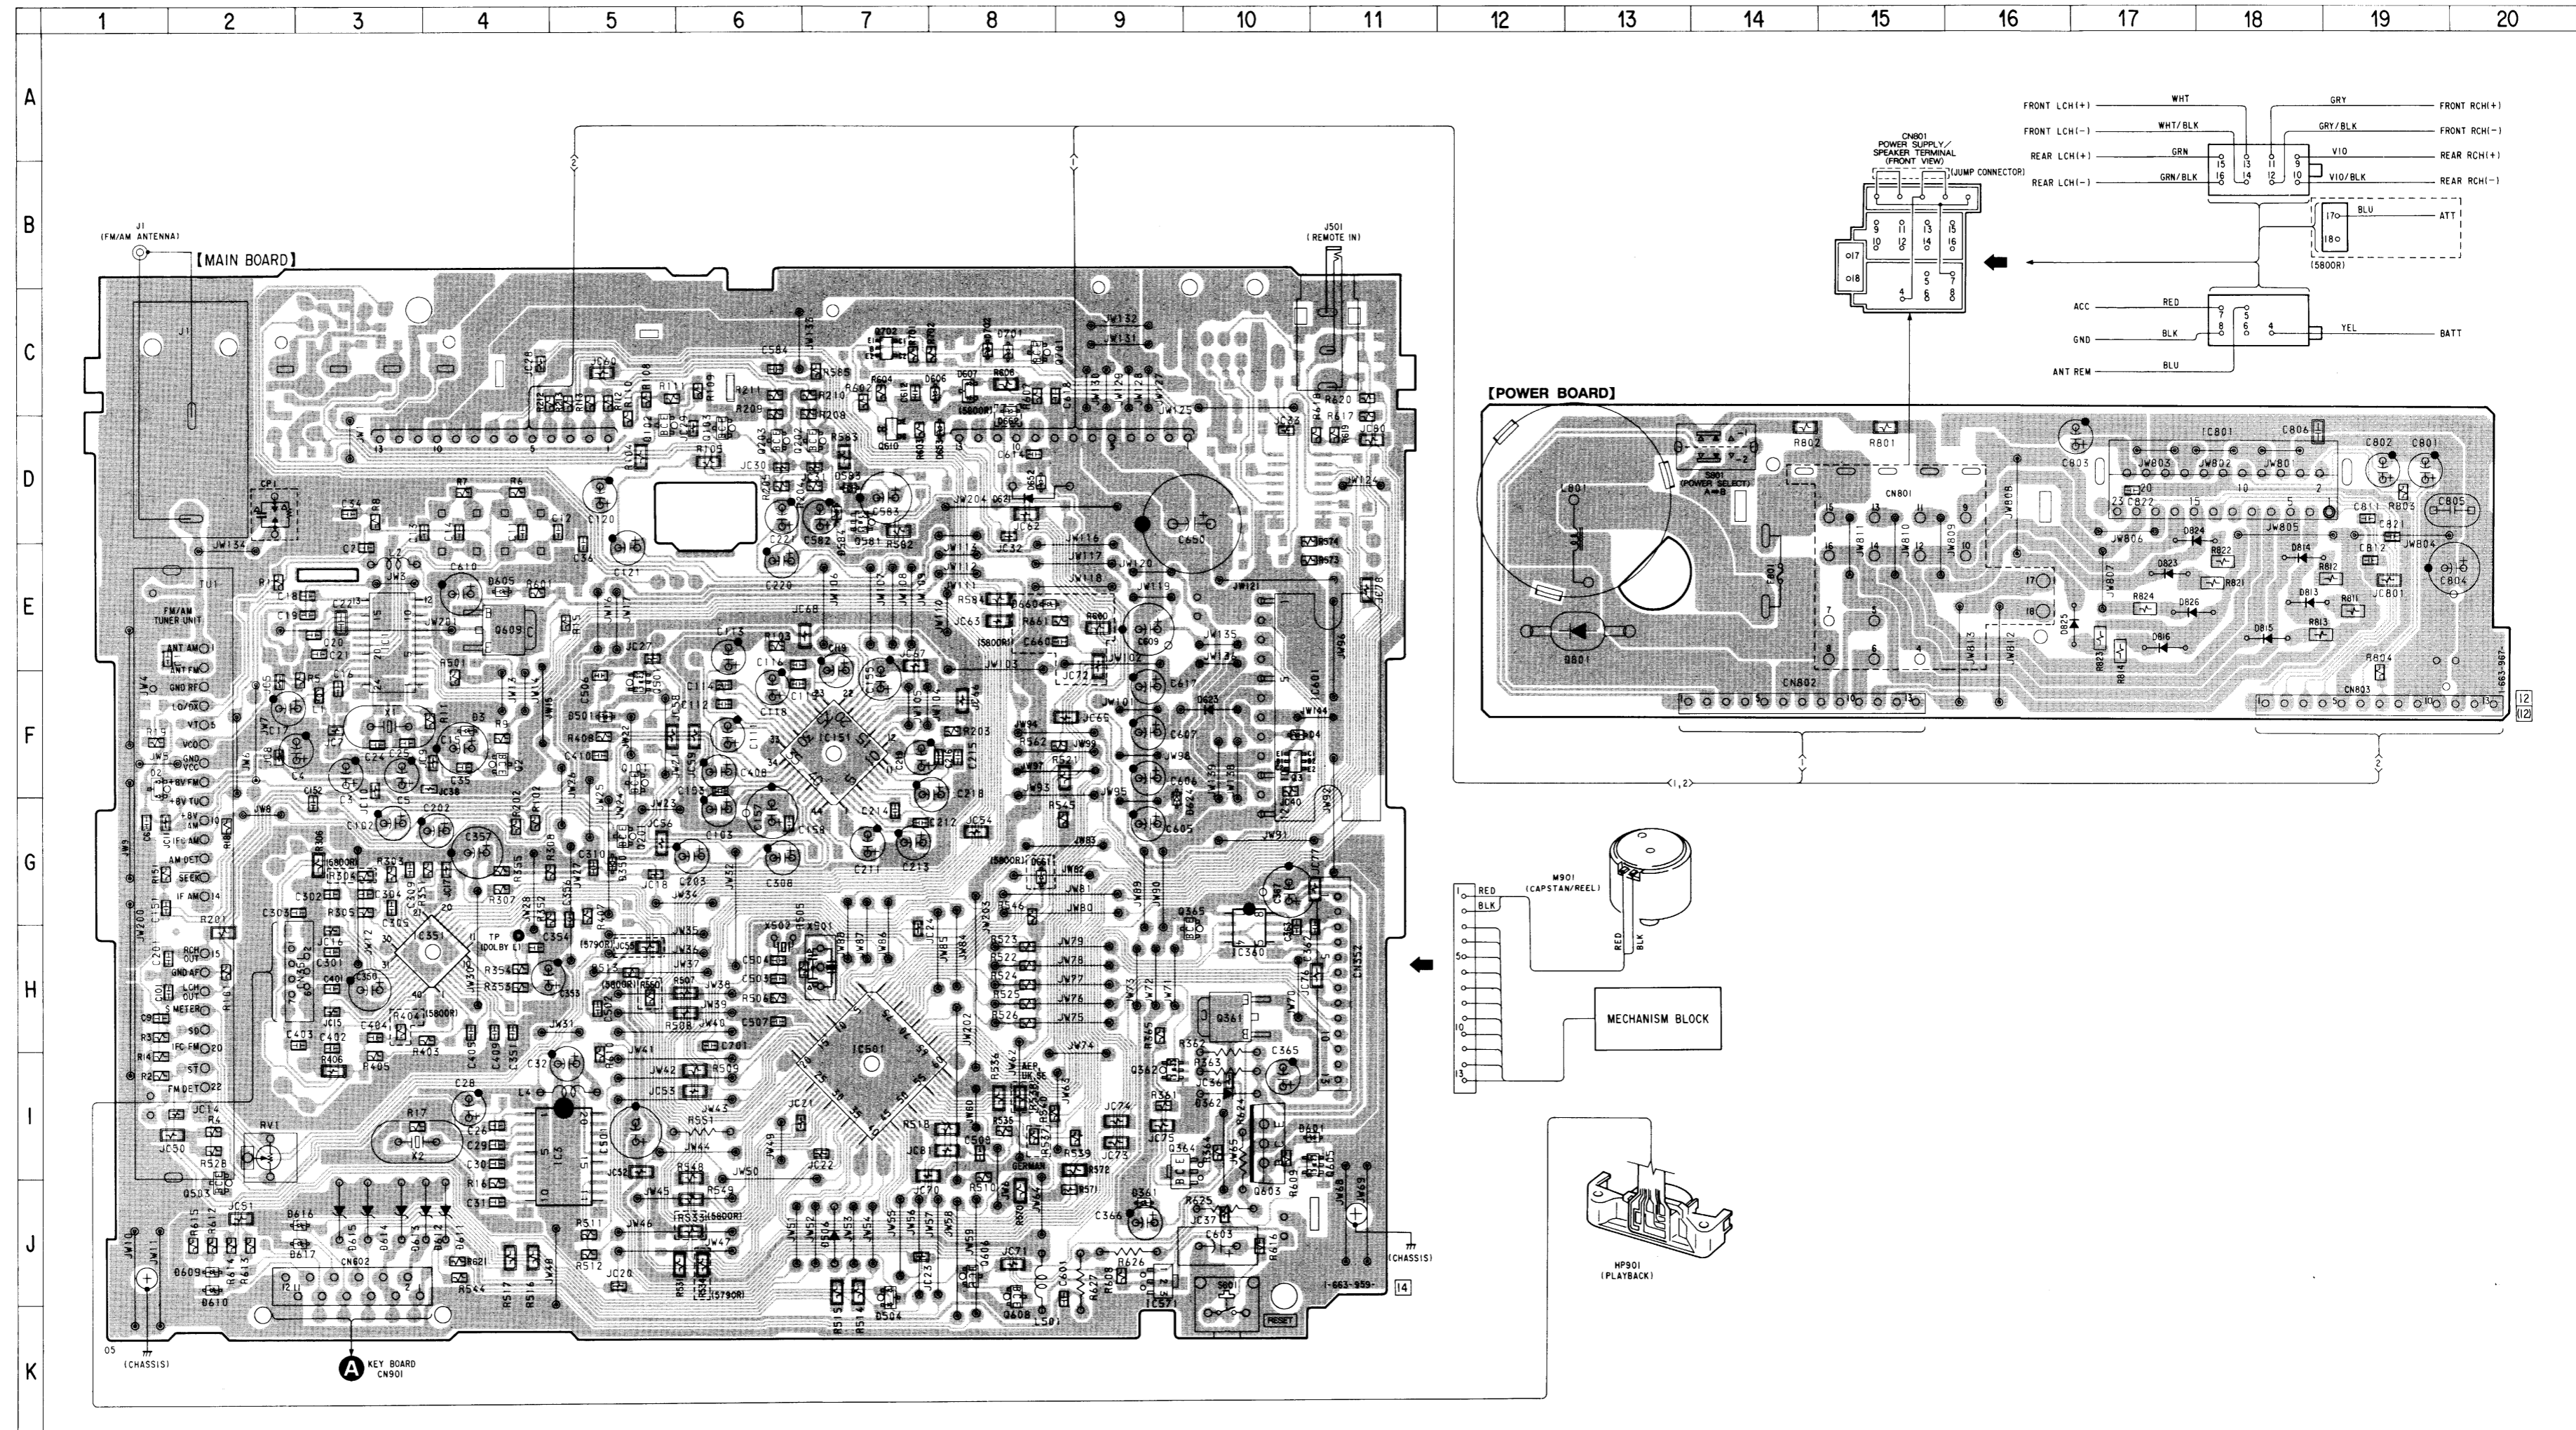


• Semiconductor Location

Ref. No.	Location	Ref. No.	Location
D2	F-1	D823	E-17
D3	F-4	D824	D-17
D4	F-10	D825	E-17
D350	G-5	D826	E-17
D361	J-9		
D362	I-10	IC1	E-3
D501	F-5	IC3	I-5
D504	J-7	IC151	F-7
D506	J-7	IC351	H-4
D583	D-7	IC360	H-10
D584	D-7	IC501	H-7
D601	I-11	IC571	J-9
D605	E-4	IC601	F-11
D606	C-8	IC801	D-18
D607	C-8		
D609	J-2	Q2	F-4
D610	J-2	Q3	F-10
D611	J-4	Q101	F-5
D612	J-4	Q102	D-5
D613	J-3	Q103	D-6
D614	J-3	Q201	G-5
D615	J-3	Q202	D-7
D616	J-3	Q203	D-6
D617	J-3	Q361	H-10
D621	D-8	Q362	I-9
D623	F-10	Q364	I-9
D624	G-9	Q365	H-10
D652	D-8	Q501	F-5
D653	D-8	Q503	J-2
D660	E-8	Q581	D-7
D661	G-8	Q603	I-10
D662	C-8	Q605	I-11
D701	C-8	Q606	J-8
D702	C-8	Q608	J-8
D801	E-13	Q609	E-4
D813	E-18	Q610	D-7
D814	E-18	Q701	C-8
D815	E-18	Q702	C-7
D816	E-17		

Note on Printed Wiring Board:

- : parts extracted from the component side.
- : parts extracted from the conductor side.
- △ : internal component.
- : Pattern from the side which enables seeing.
- Abbreviation SE : South European


6-2. SCHEMATIC DIAGRAM - MAIN Section - See page 18 for IC Block Diagrams, see page 21 for Waveforms, and see page 39 for IC Pin Function Description.

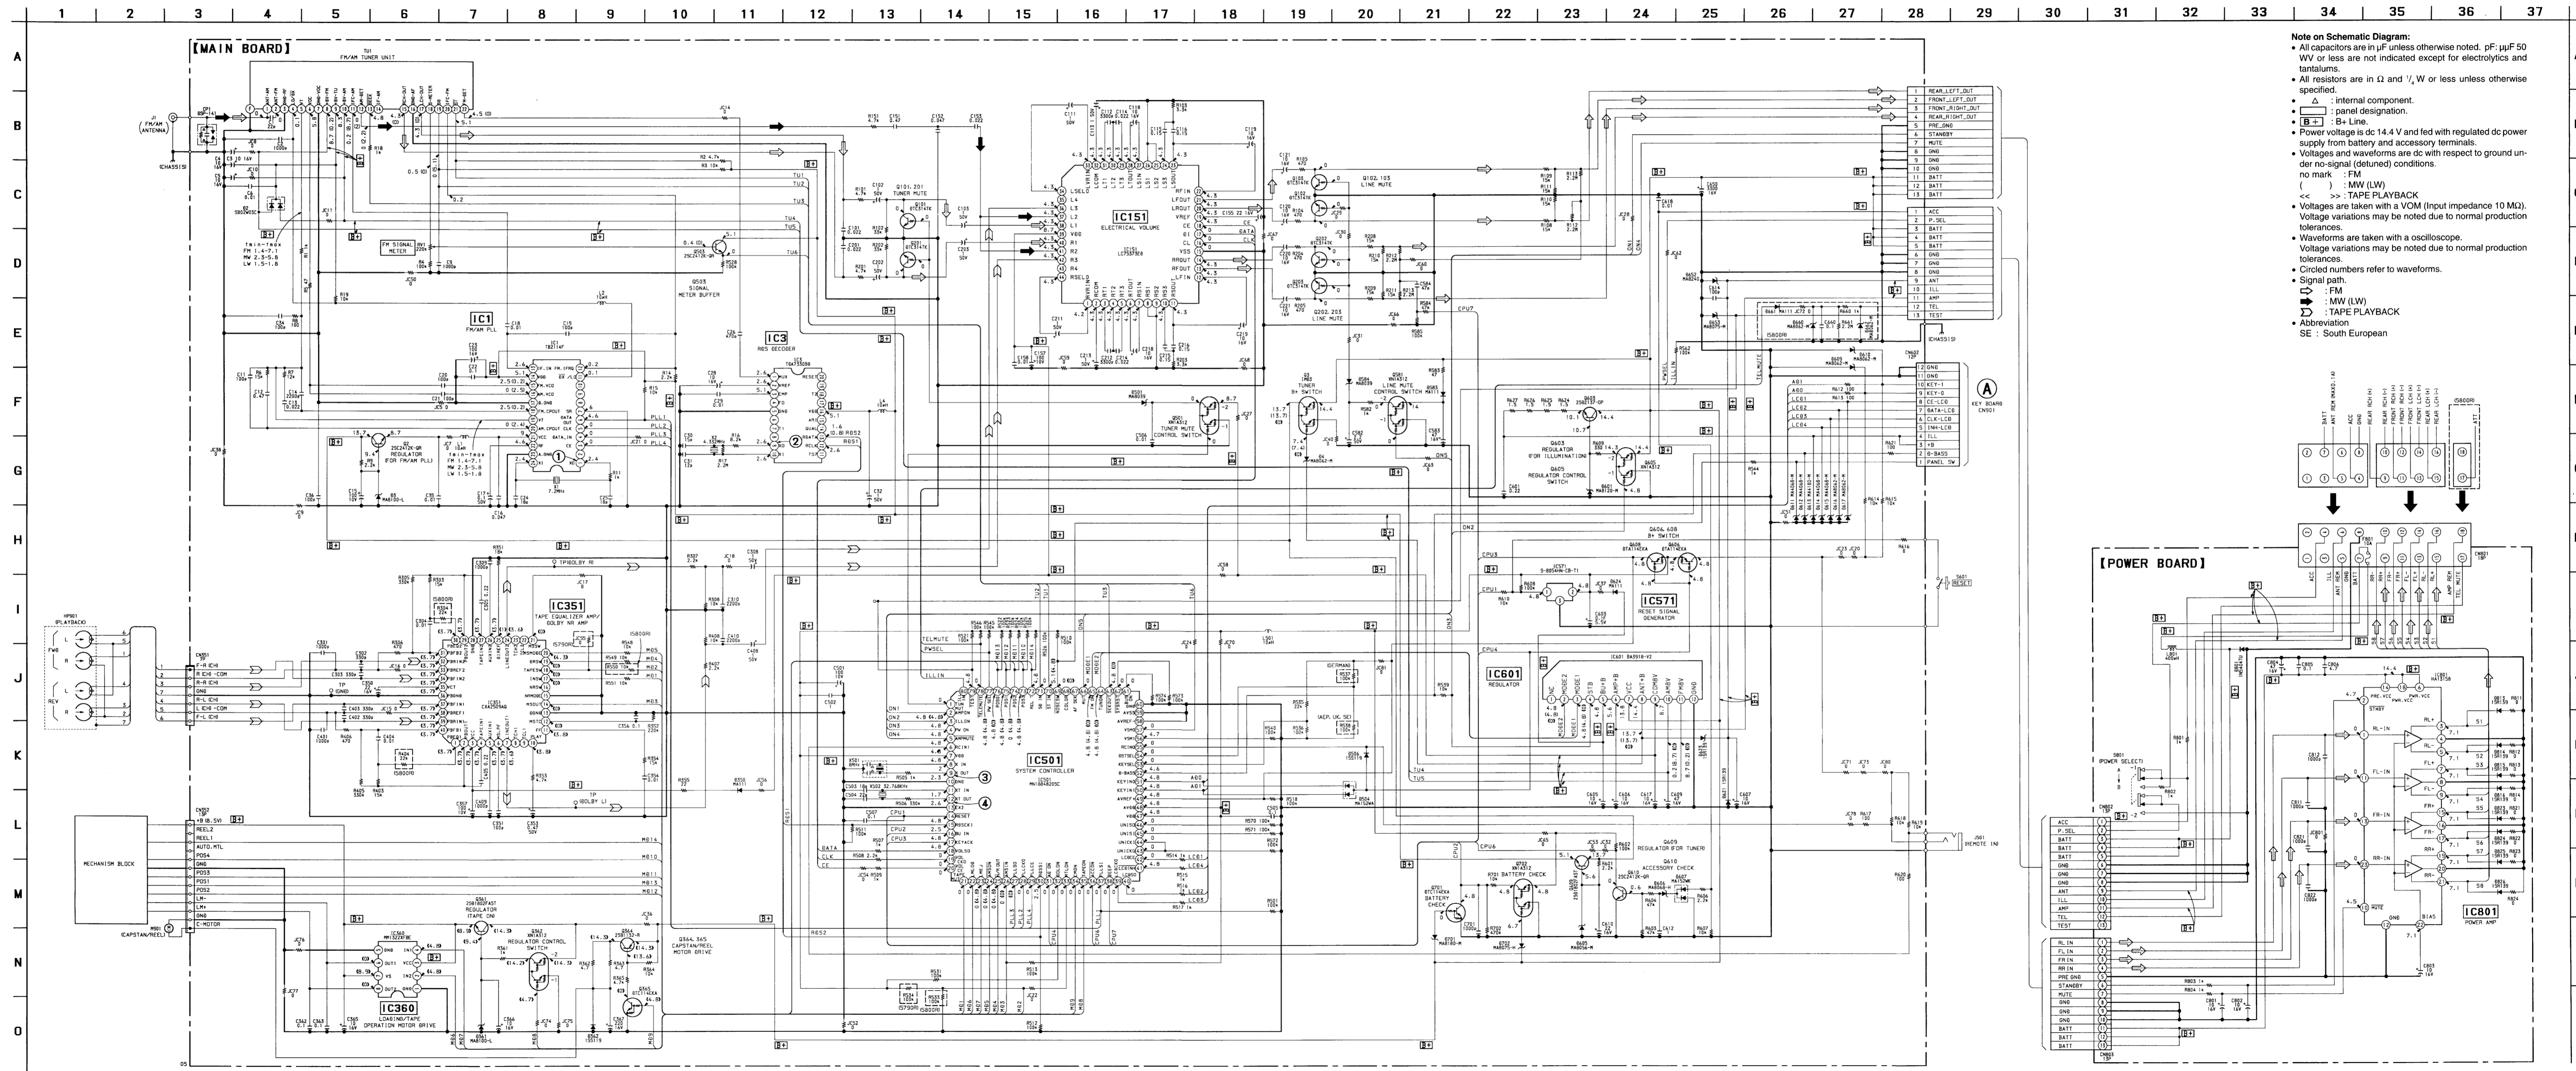


Note on Schematic Diagram:

- All capacitors are in μF unless otherwise noted. pF : μF 50 WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and $\frac{1}{4}$ W or less unless otherwise specified.
- Δ : internal component.
- \square : panel designation.
- $\text{B} \pm$: B+ Line.
- Power voltage is dc 14.4 V and fed with regulated dc power supply from battery and accessory terminals.
- Voltages and waveforms are dc with respect to ground under no-signal (detuned) conditions.
- no mark: FM
- <<: TAPE PLAYBACK
- Voltages are taken with a VOM (Input impedance 10 M Ω). Voltage variations may be noted due to normal production tolerances.
- Waveforms are taken with an oscilloscope. Voltage variations may be noted due to normal production tolerances.
- Circled numbers refer to waveforms.
- Signal path.
- \square : MW (LW)
- \square : TAPE PLAYBACK
- Abbreviation SE: South European

6-3. PRINTED WIRING BOARD - PANEL Section - (XR-5790R)

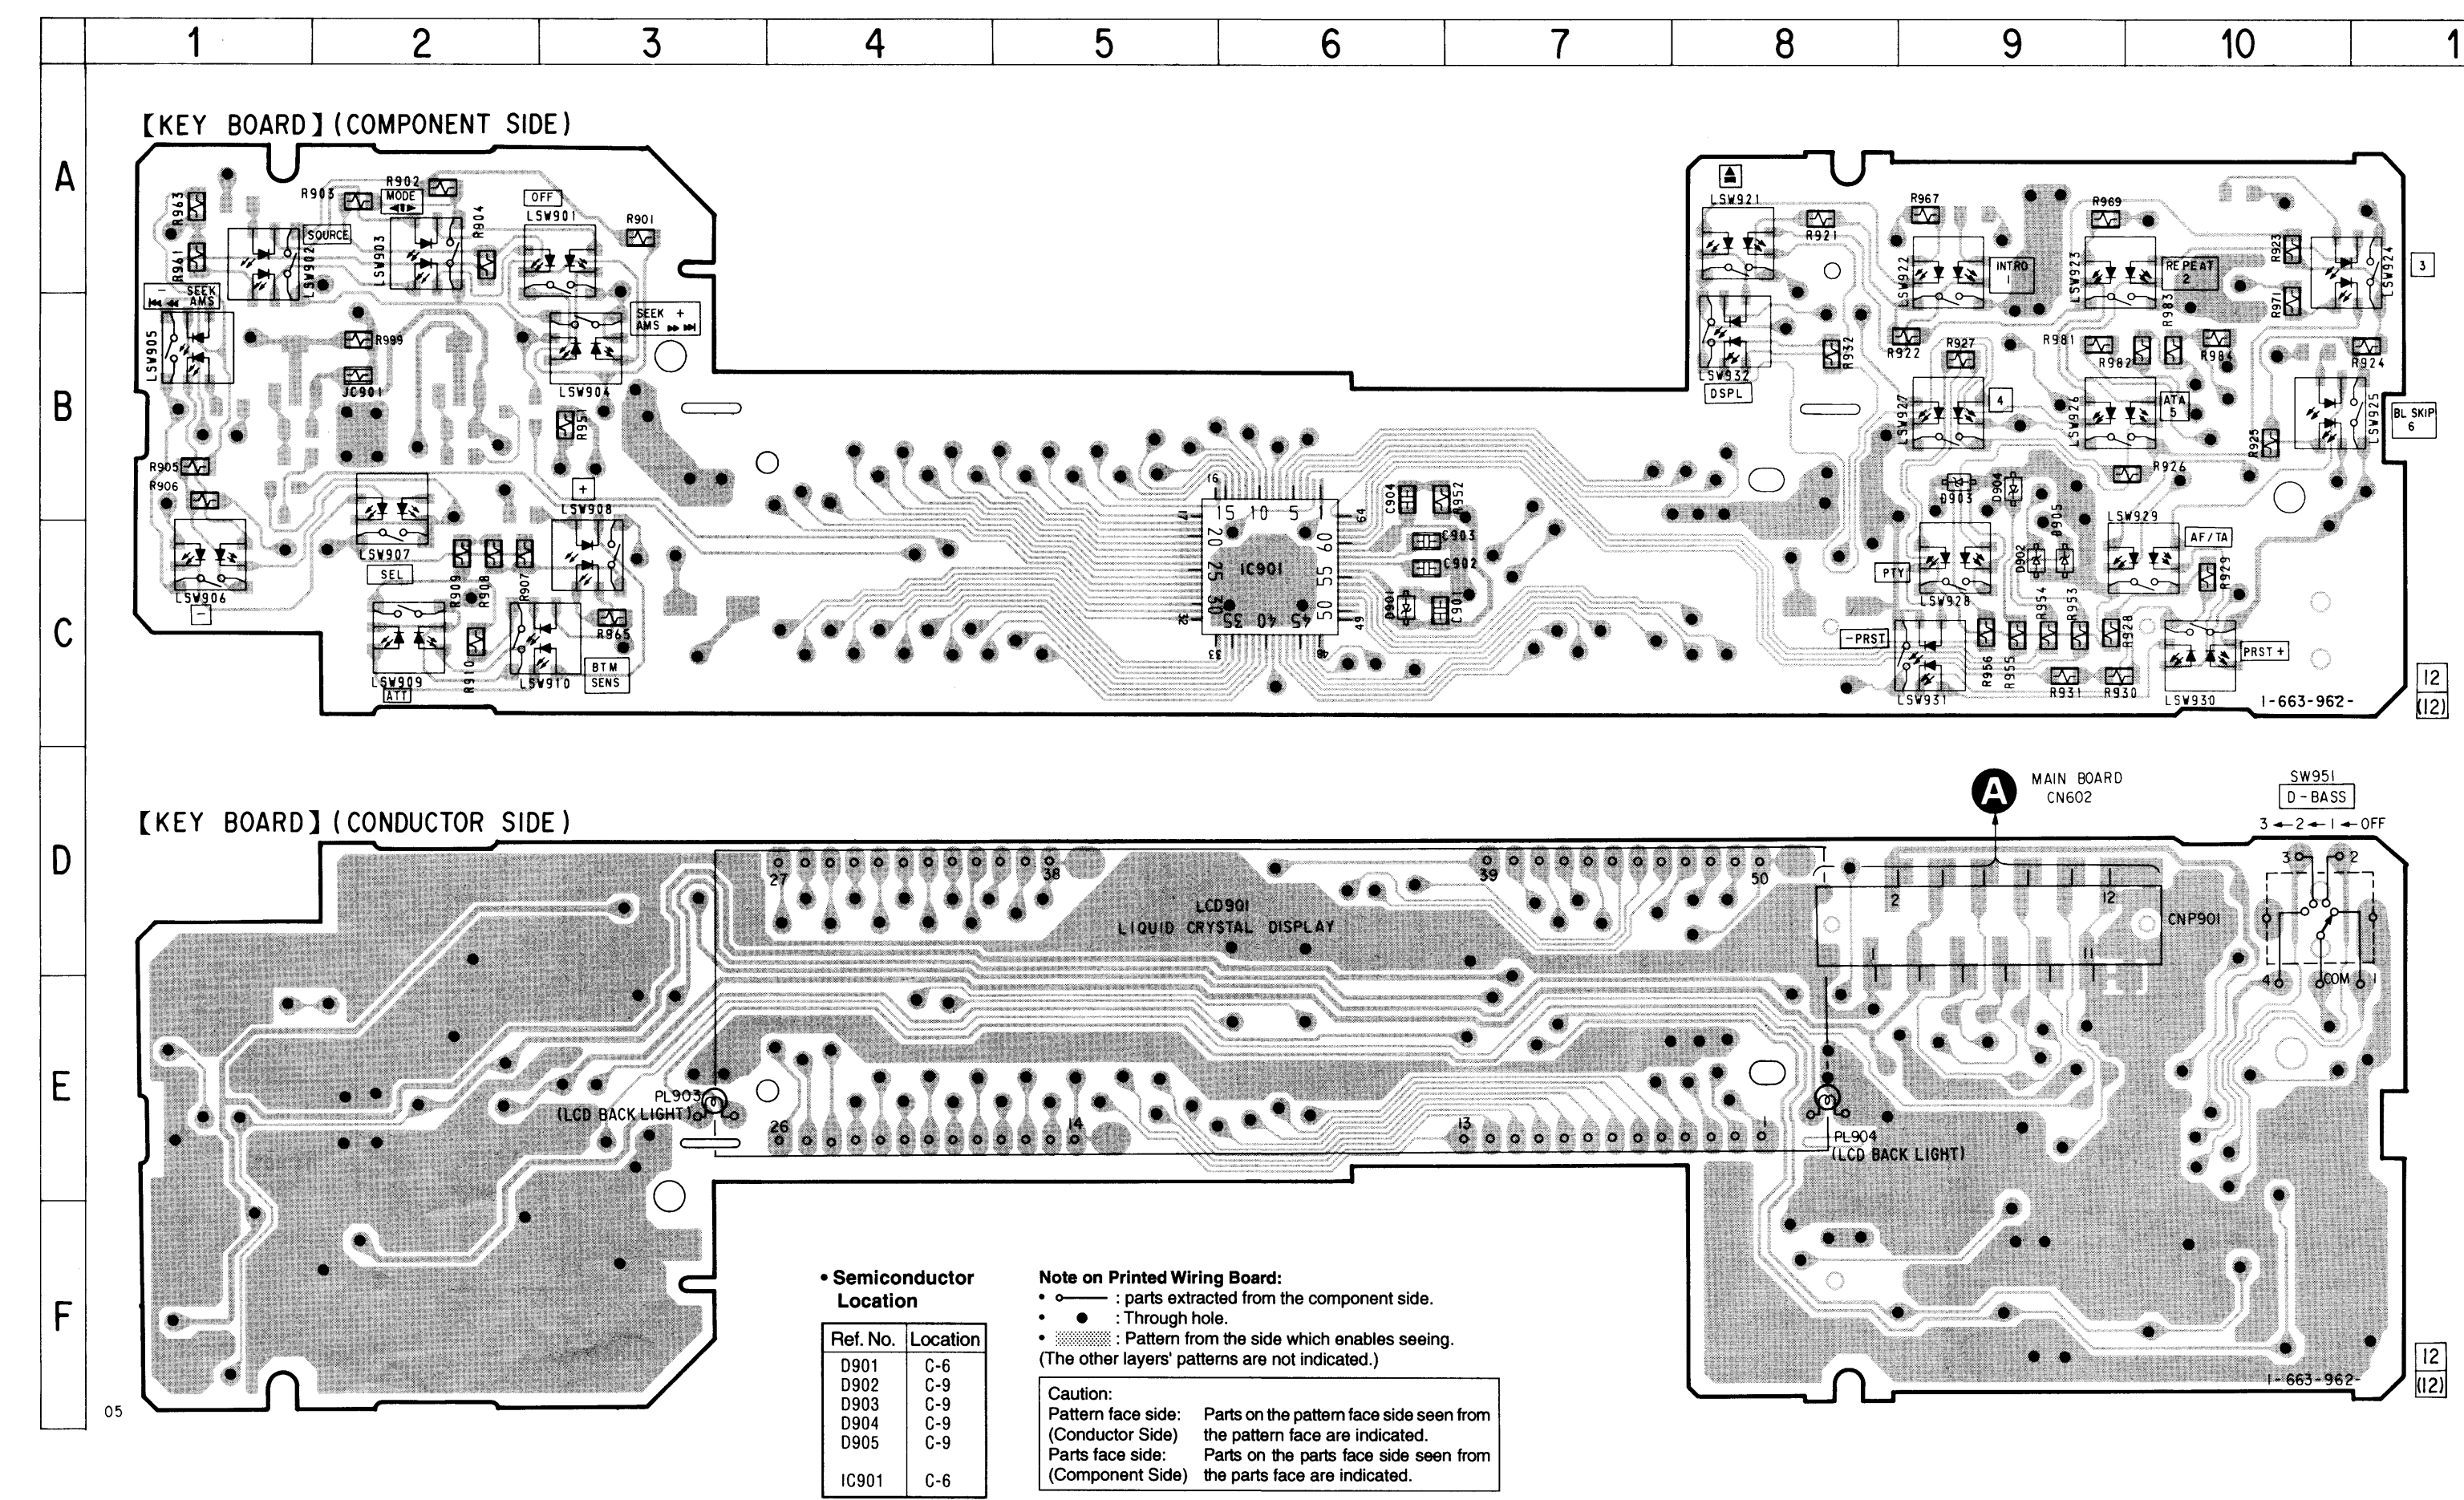


6-4. SCHEMATIC DIAGRAM - PANEL Section - (XR-5790R)

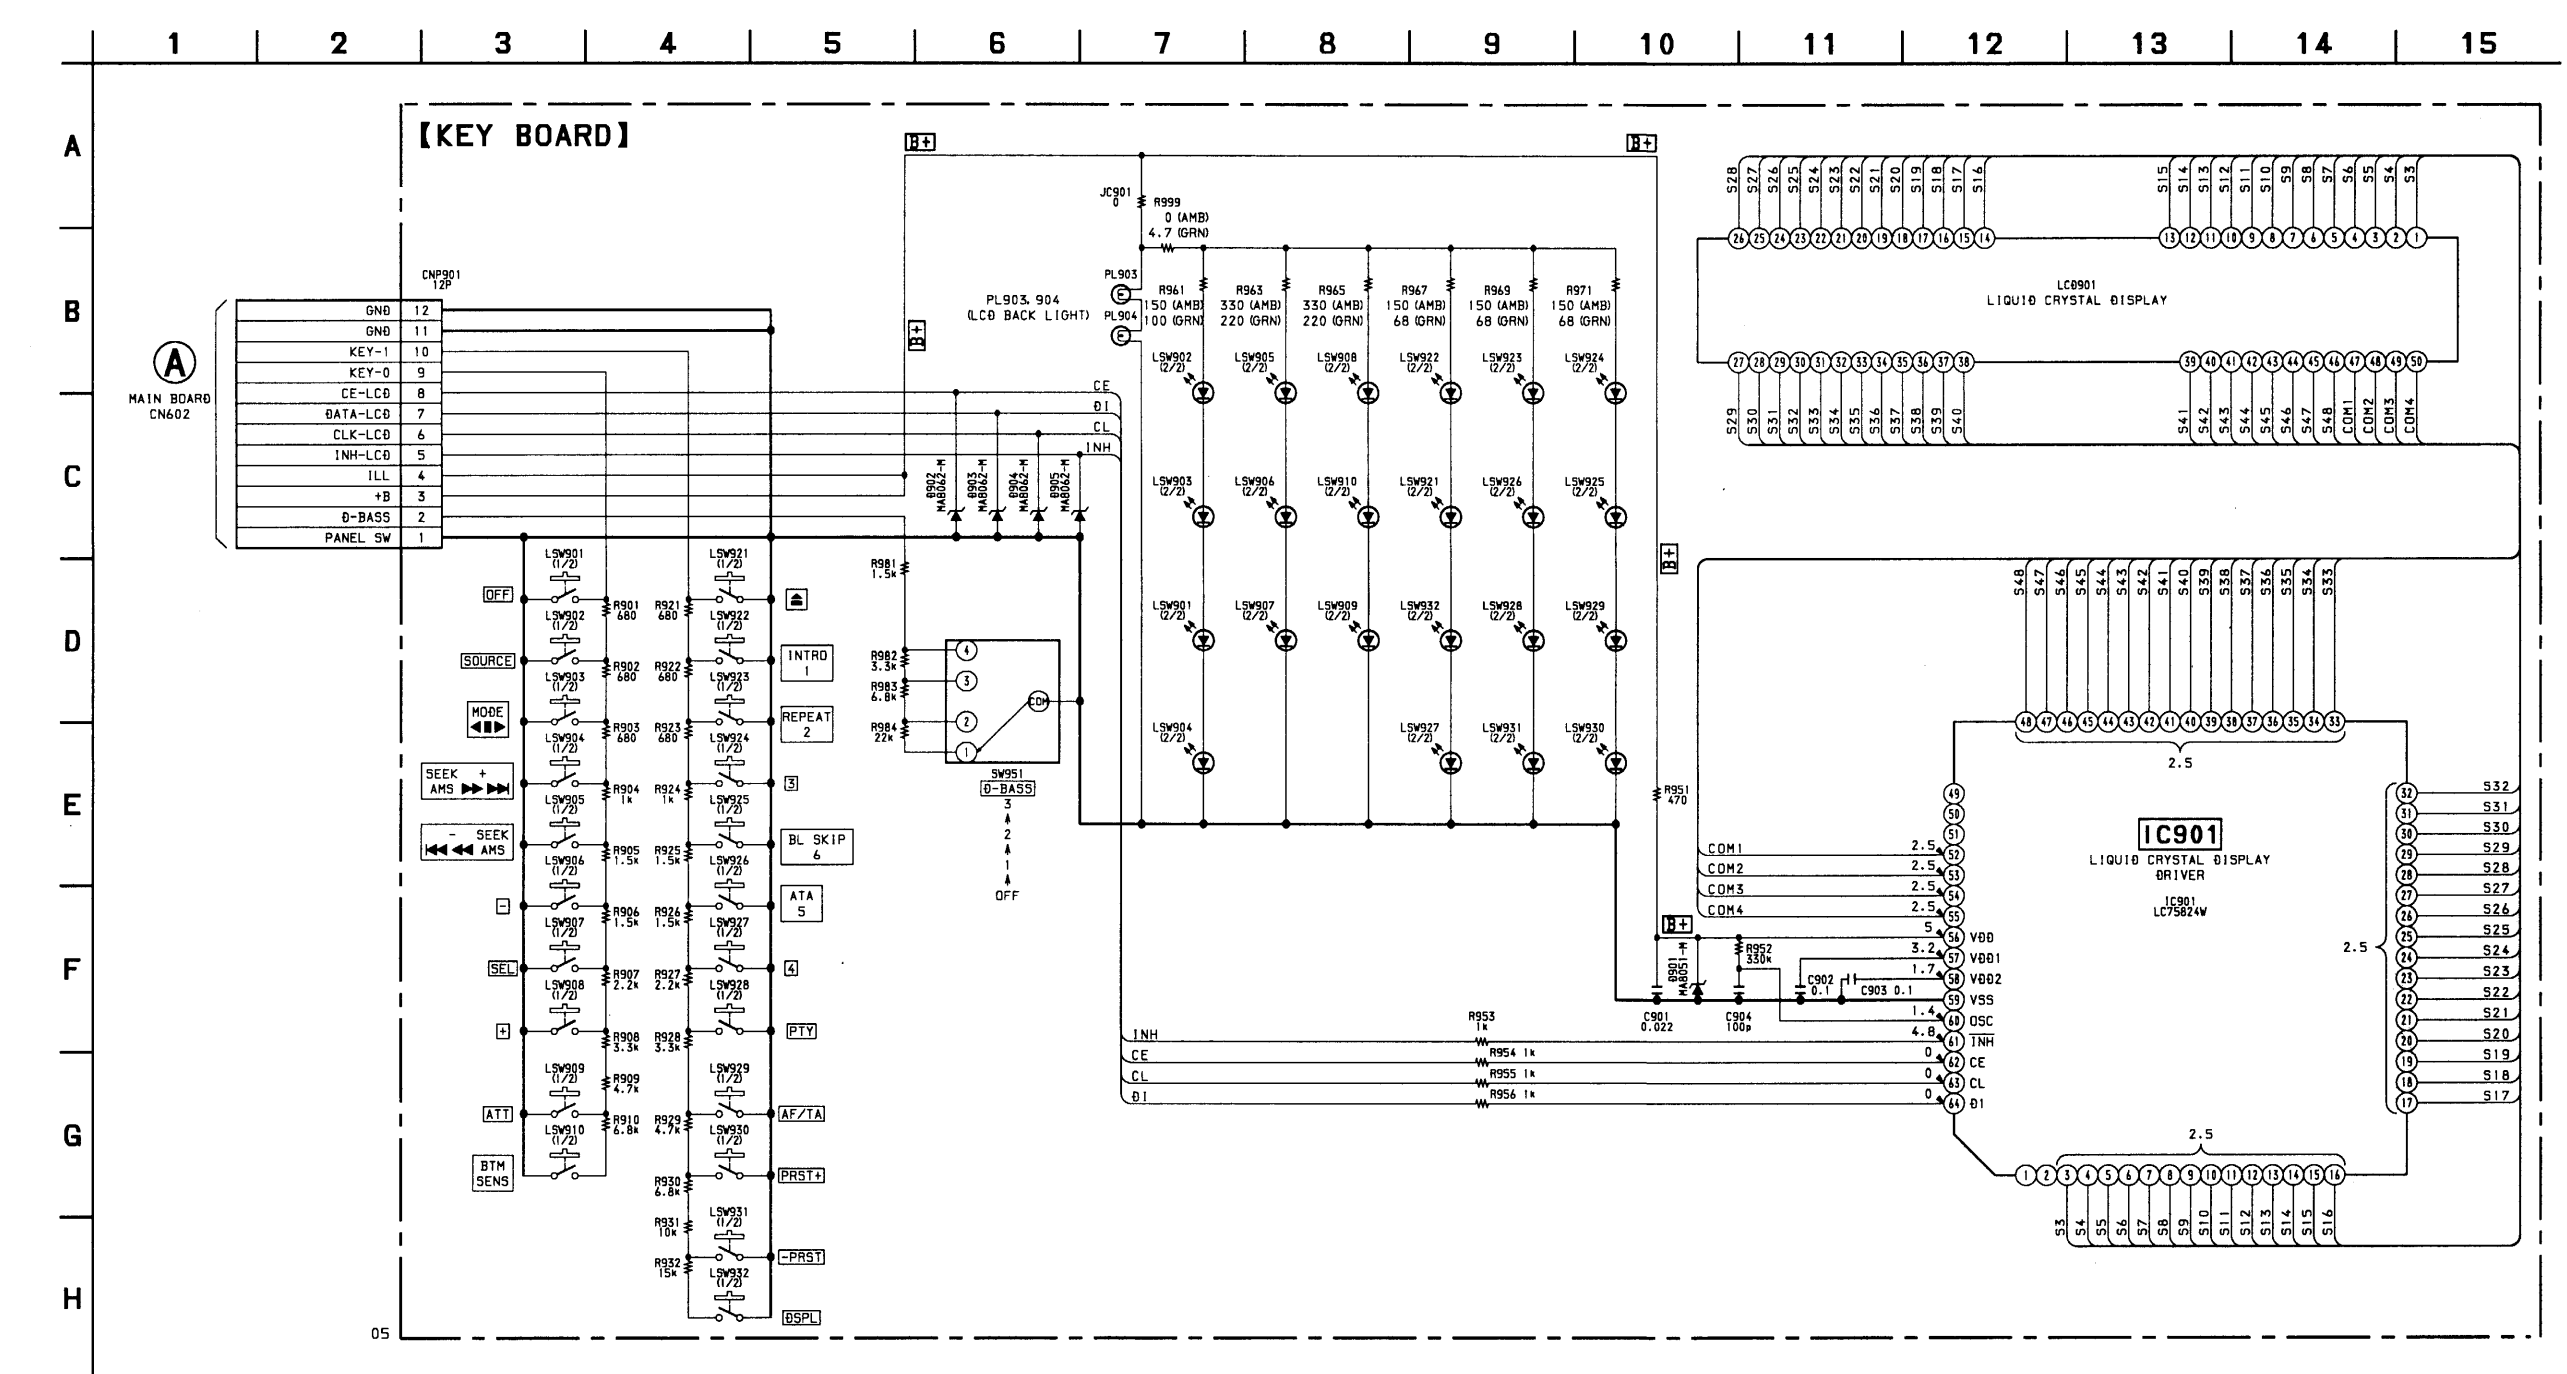


Note on Schematic Diagram:

- All capacitors are in μF unless otherwise noted. pF : μF 50 WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and $\frac{1}{4}W$ or less unless otherwise specified.
- ▨ : panel designation.
- B+ : B+ Line.
- Power voltage is dc 14.4 V and fed with regulated dc power supply from battery and accessory terminal.
- Voltages are dc with respect to ground under no-signal (detuned) conditions. no mark : FM
- Voltages are taken with a VOM (Input impedance 10 M Ω). Voltage variations may be noted due to normal production tolerances.
- Abbreviation
AMB : AMBER illumination model.
GRN : GREEN illumination model.

6-5. PRINTED WIRING BOARD - PANEL Section - (XR-5800R)

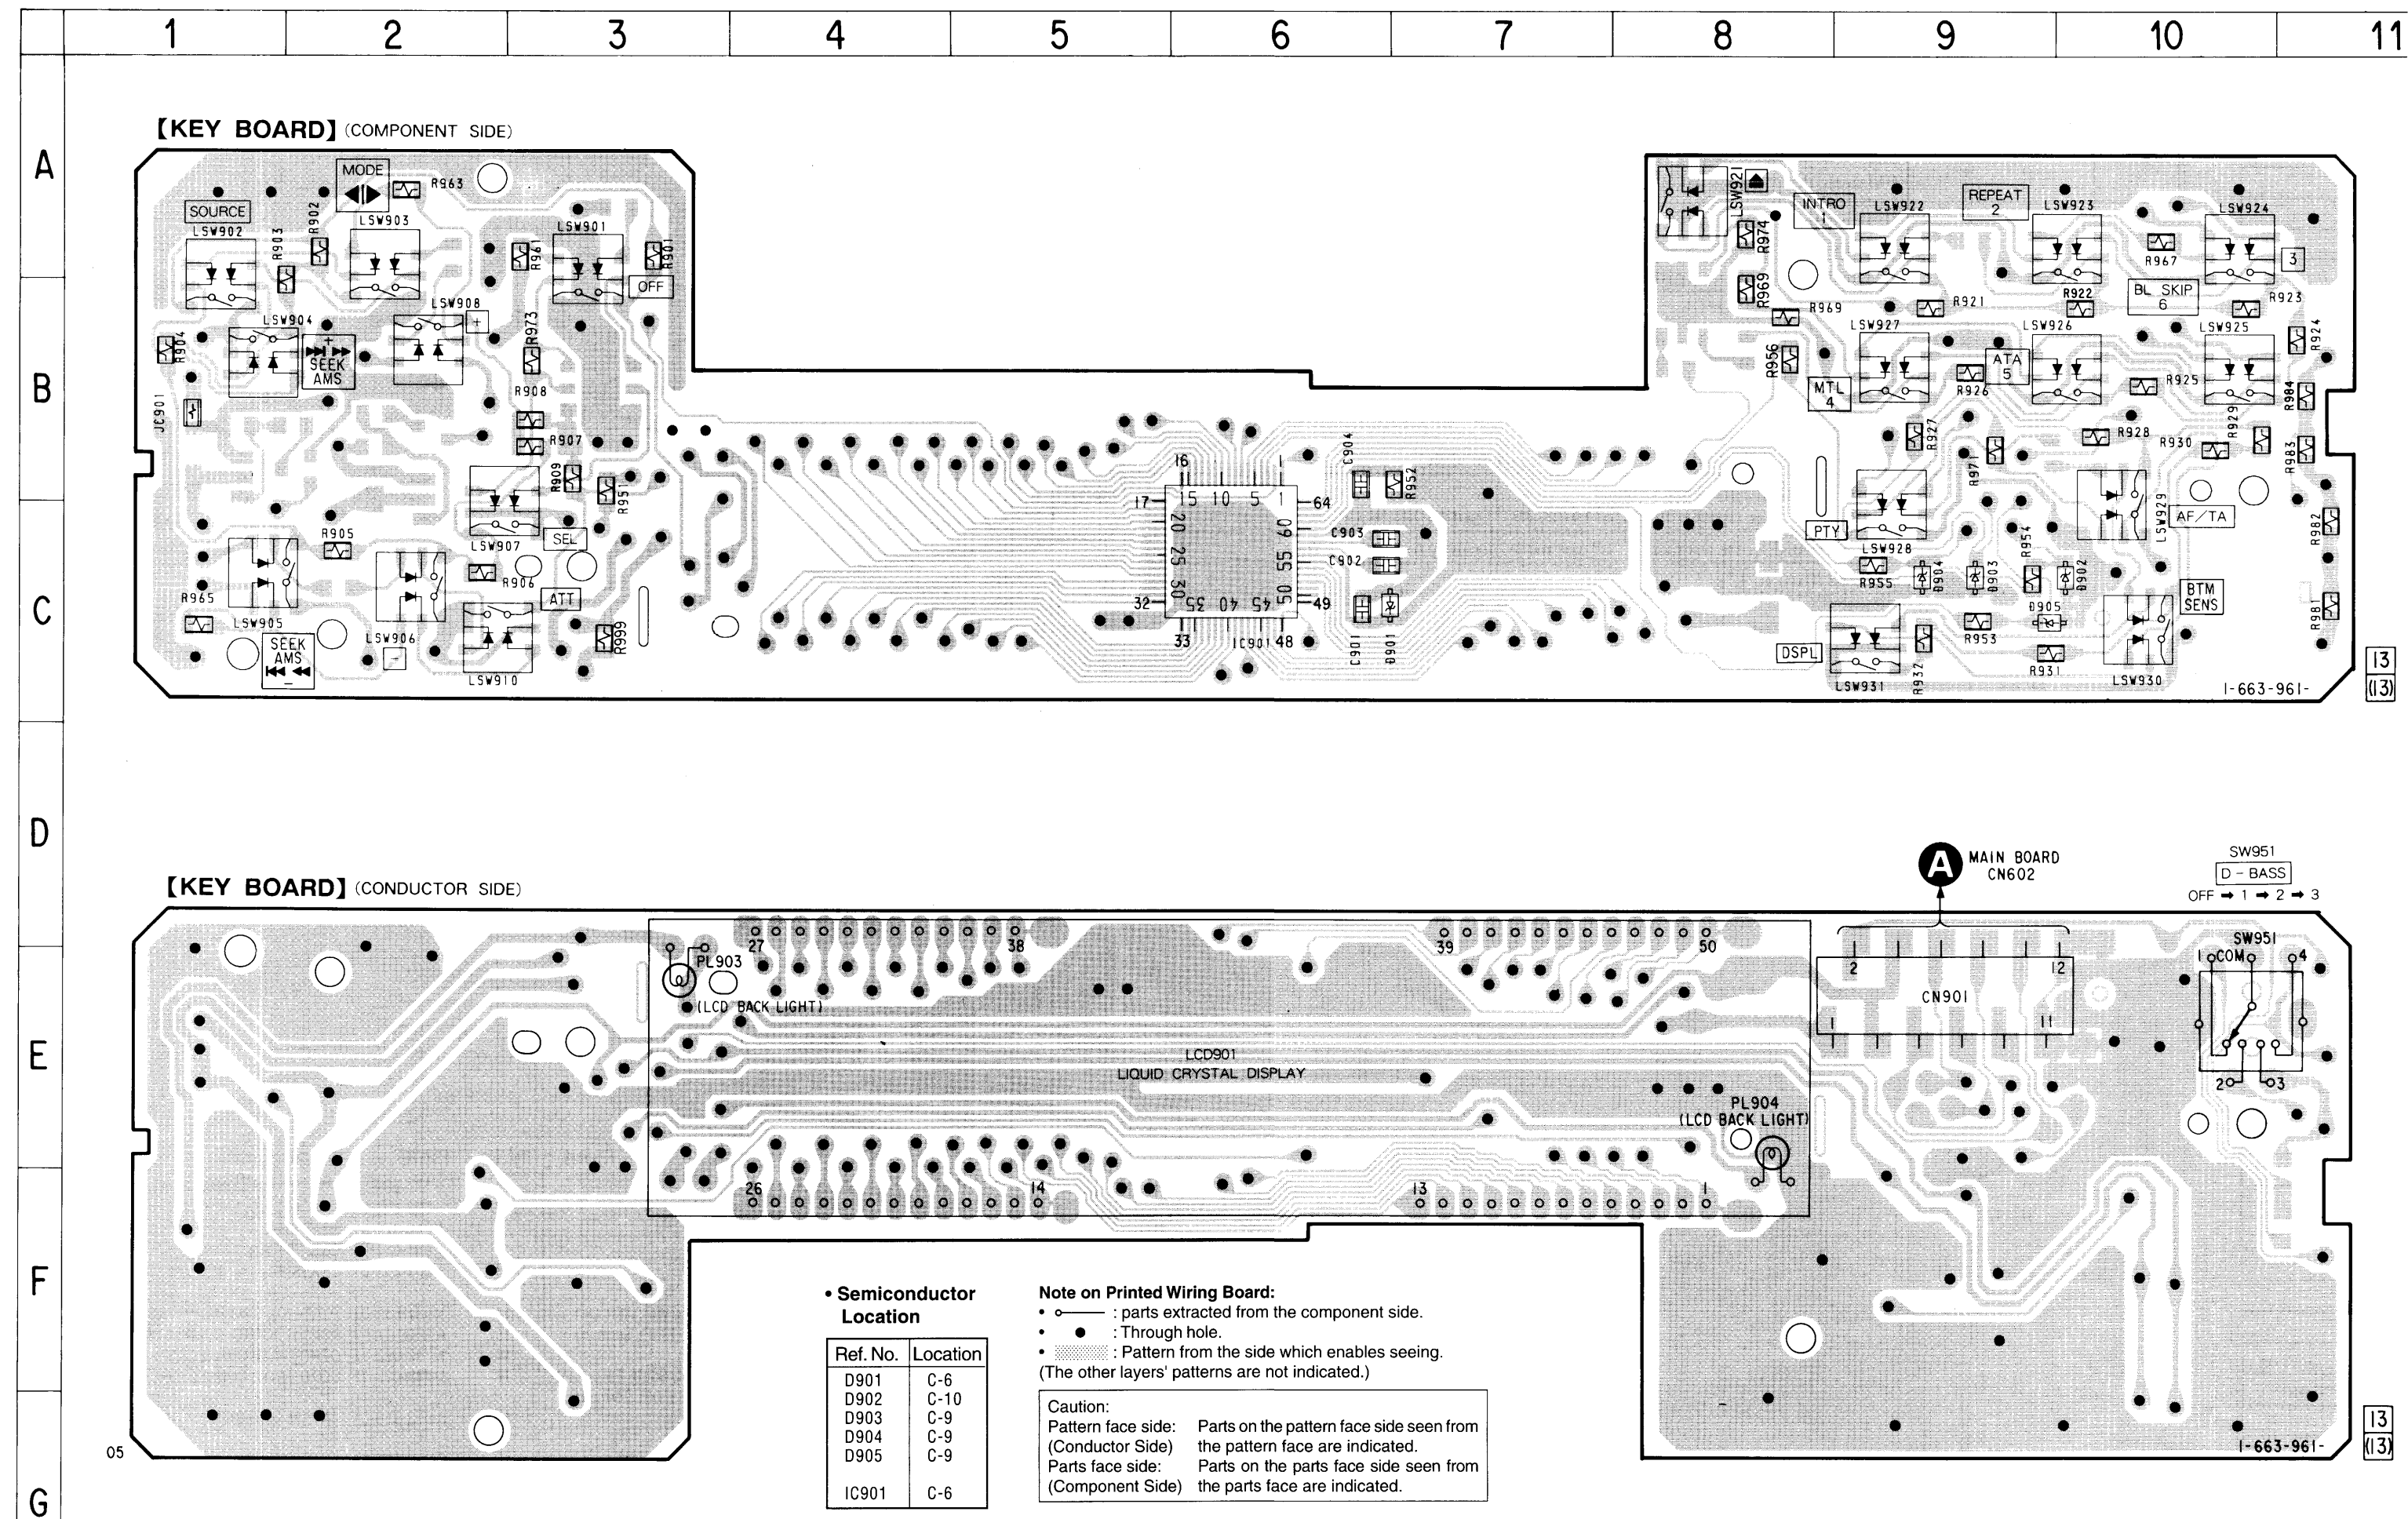

6-6. SCHEMATIC DIAGRAM - PANEL Section - (XR-5800R)

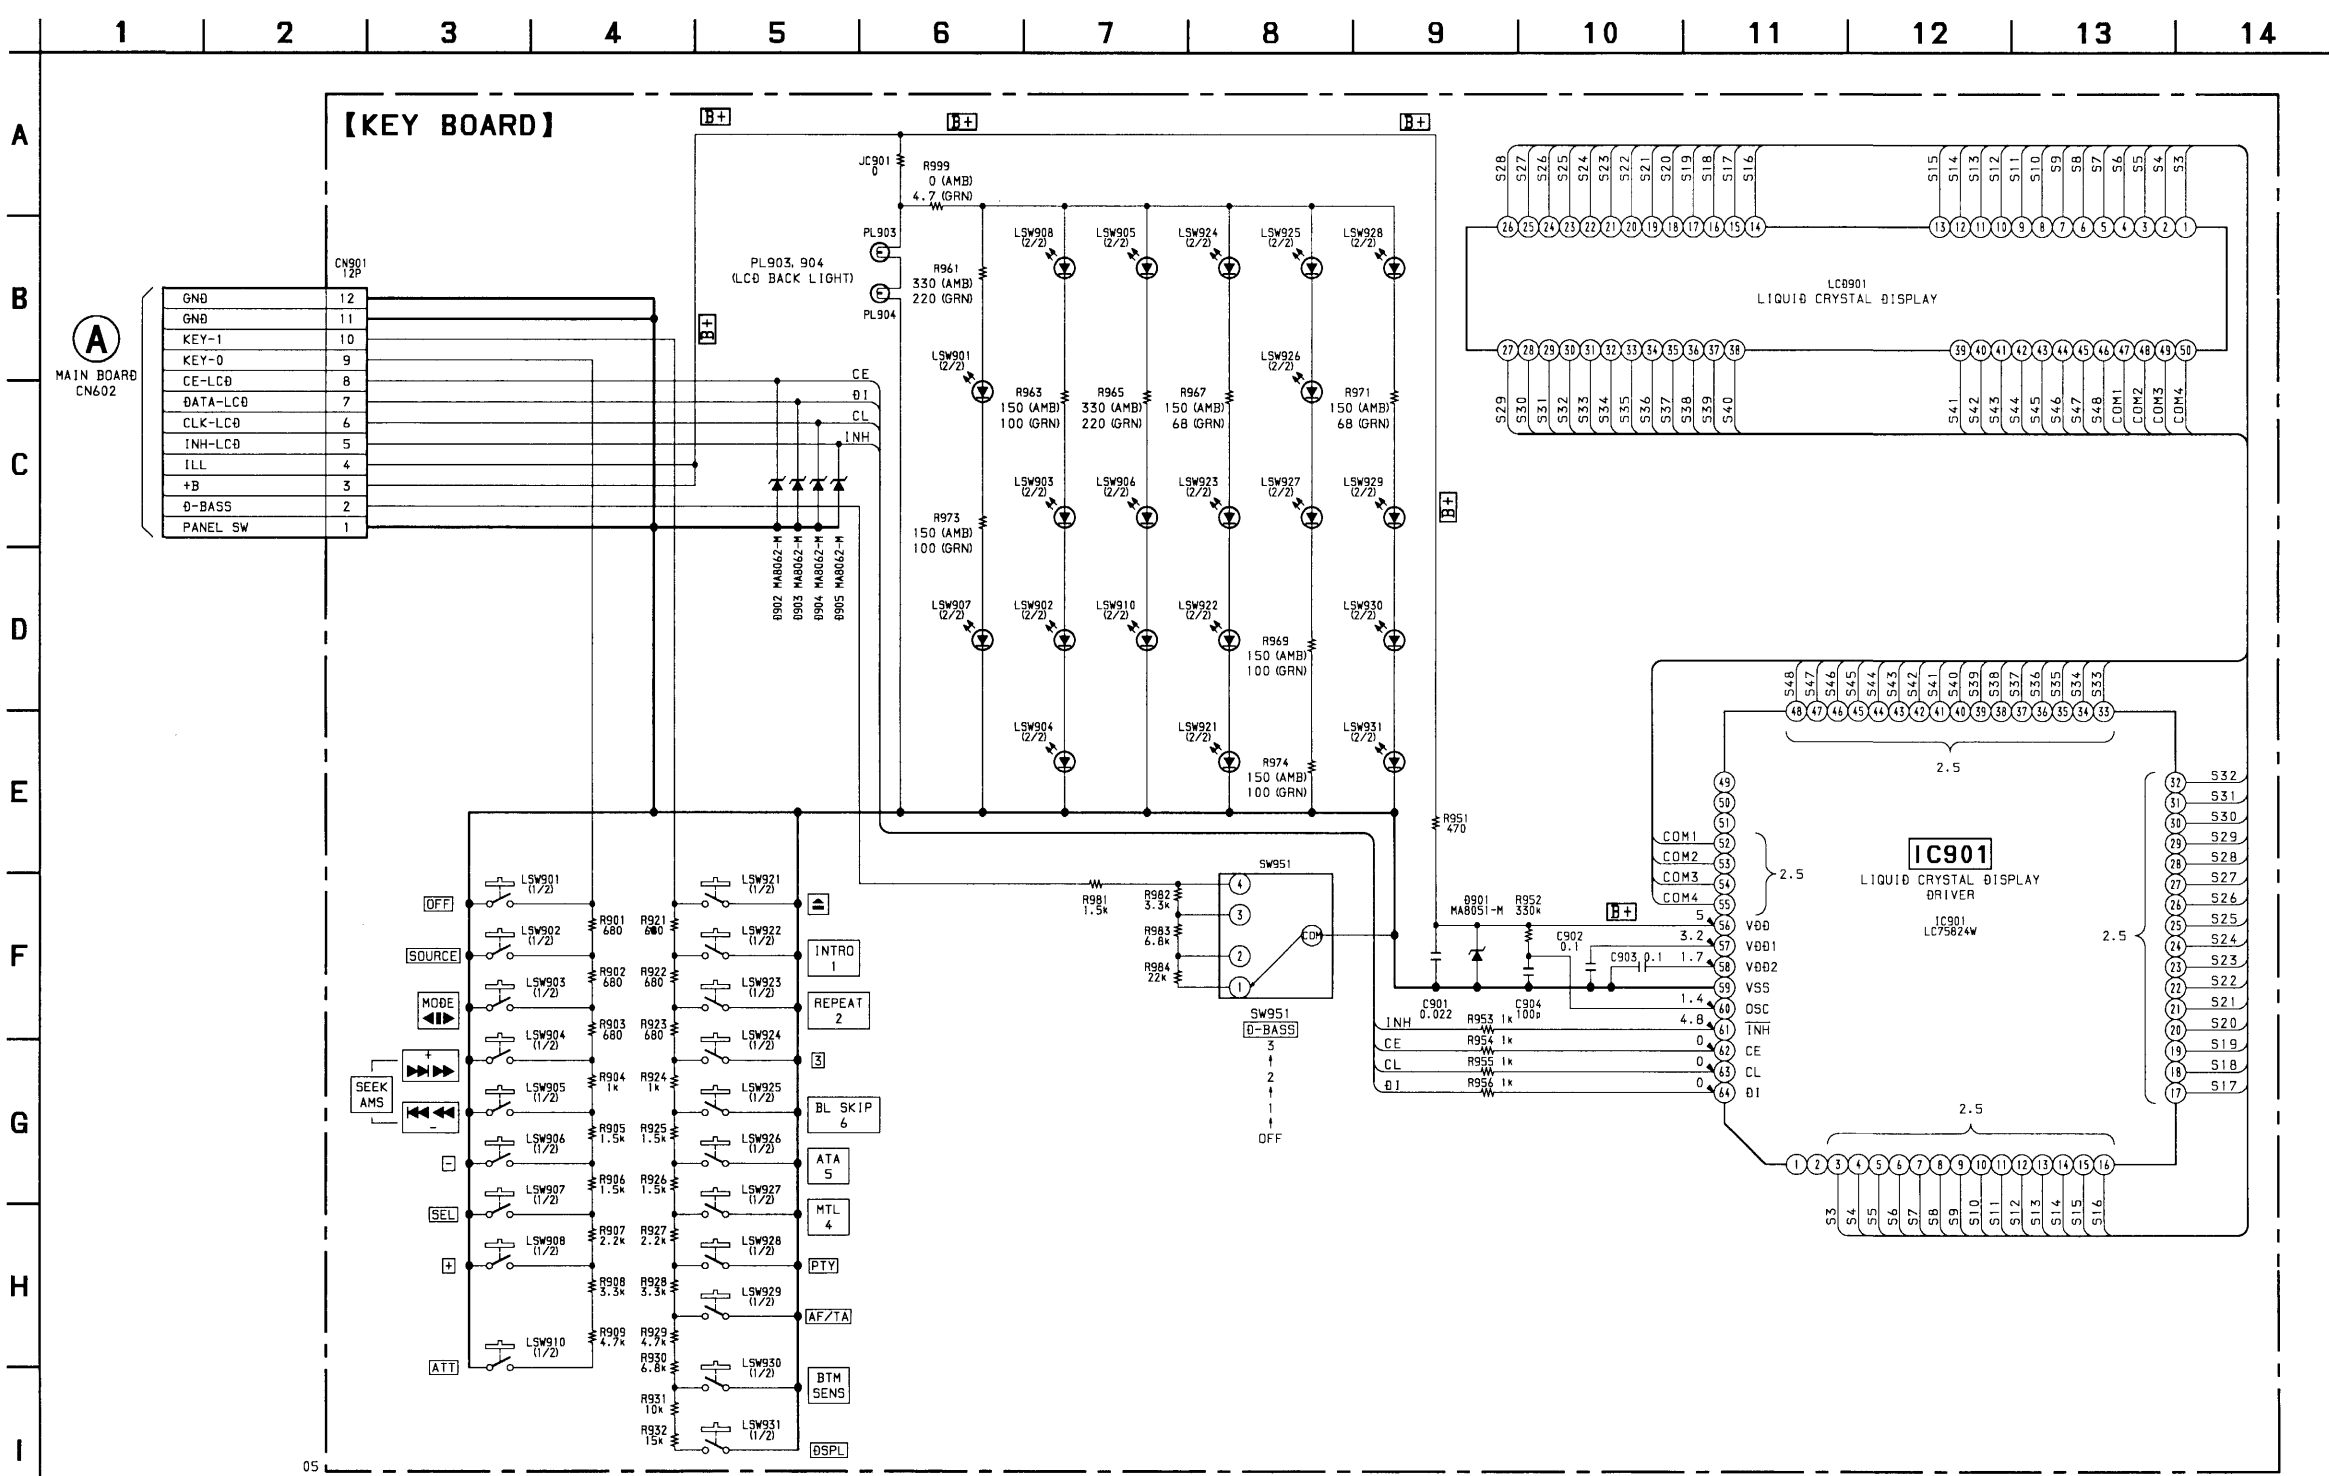

Note on Schematic Diagram:

- All capacitors are in μF unless otherwise noted. pF : μpF 50 WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and $1/4\text{W}$ or less unless otherwise specified.
- ▨ : panel designation.
- B+ : B+ Line.
- Power voltage is dc 14.4 V and fed with regulated dc power supply from battery and accessory terminal.

- Voltages are dc with respect to ground under no-signal (detuned) conditions. no mark : FM
- Voltages are taken with a VOM (Input impedance 10 M Ω). Voltage variations may be noted due to normal production tolerances.
- Abbreviation
 AMB : AMBER illumination model.
 GRN : GREEN illumination model.

• MAIN BOARD IC501 MN1884820SC (SYSTEM CONTROLLER)

Pin No.	Pin Name	I/O	Function
1	TUNMUT	O	FM audio signal muting control output terminal "H": muting on
2	AMPON	O	Standby control signal output to the power amplifier (IC801) "L": standby
3	ILLON	O	Power supply on/off control signal output terminal at the illumination and liquid crystal display driver (IC901) "H": power on At power select switch (S801) on mode: "H" output at the accessory on At power select switch (S801) off mode: "H" output at the power on
4	PW ON	O	Main system power supply on/off control signal output to the BA3918 (IC601) "H": power on
5	AMPMUTE	O	Muting control signal output to the power amplifier (IC801) "L": muting on
6	RCIN1	I	Rotary remote commander shift key A/D input terminal
7	VDD	—	Power supply terminal (+5V)
8	X IN	I	Main system clock input terminal (8 MHz)
9	X OUT	O	Main system clock output terminal (8 MHz)
10	GND	—	Ground terminal
11	XT IN	I	Sub system clock input terminal (32.768 kHz)
12	XT OUT	O	Sub system clock output terminal (32.768 kHz)
13	EX2	I	Connected to ground
14	RESET	I	System reset signal input from the reset signal generator (IC571) and reset switch (S601) "L" is input for several 100 msec after power on, then it changes to "H"
15	RDCKI	I	Serial data transfer clock signal input from the RDS decoder (IC3)
16	BU IN	I	Battery detect signal input terminal "H": battery on
17	KEYACK	I	Input of acknowledge signal for the key entry Acknowledge signal is input to accept function and eject keys in the power off status On at input of "L"
18	VOLSO	O	Serial data output to the electrical volume (IC151)
19	VOLCKO	O	Serial data transfer clock signal output to the electrical volume (IC151)
20	VOLCE	O	Chip enable signal output to the electrical volume (IC151)
21	TAPEMUT	O	Tape muting on/off control signal output to the CXA2509AQ (IC351) "H": tape muting on
22	LMLOD	O	Loading/tape operation motor control signal output to the MM1322XFBE (IC360) (For the loading direction and forward side operation) *1
23	LMEJ	O	Loading/tape operation motor control signal output to the MM1322XFBE (IC360) (For the eject direction and reverse side operation) *1
24	AMSON	O	Tape auto music sensor control signal output to the CXA2509AQ (IC351) "L" is output to lower the gain for audio level at FF/REW
25	N/R OUT	O	Forward/reverse direction control signal output to the CXA2509AQ (IC351) "L": forward direction, "H": reverse direction
26	AMSIN	I	Whether a music is present or not from CXA2509AQ (IC351) is detected at auto music sensor "L": music is present, "H": music is not present
27	PLLSO	O	PLL serial data output to the FM/AM PLL (IC1)
28	PLLCKO	O	PLL serial data transfer clock signal output to the FM/AM PLL (IC1)
29	PLLCE	O	PLL serial chip enable output to the FM/AM PLL (IC1)
30	RDSSI	I	Serial data input from the RDS decoder (IC3)
31	AD ON	O	Power supply on/off control signal output for the A/D converter "L": power on
32	DOLON	I/O	Dolby control in/out terminal At initial mode: valid/invalid selection input of dolby function ("L" input: valid) At normal mode: dolby on/off control signal output "H": dolby on Not used this function in this set (fixed at "H")

Pin No.	Pin Name	I/O	Function
33	MTLON	I/O	METAL control in/out terminal At initial mode: valid/invalid selection input of METAL function (“L” input: valid) At normal mode: METAL on/off control signal output “H”: METAL on XR-5790R: Not used this function in this set (fixed at “H”) XR-5800R: Used for the this function
34	CMON	O	Capstan/reel motor (M901) drive signal output terminal “H”: motor on
35	TAPEON	O	Tape system power supply on/off control signal output terminal “H”: tape on
36	ACCON	I	Accessory detect signal input terminal “L”: accessory on
37	PLLSI	I	PLL serial data input from the FM/AM PLL (IC1)
38	BEEP	O	Beep sound output terminal
39	LCDCKO	O	Serial data transfer clock signal output to the liquid crystal display driver (IC901)
40	LCDSO	O	Serial data output to the liquid crystal display driver (IC901)
41	LCDINH	O	Blank indicate control signal output to the liquid crystal display driver (IC901) “L”: no display
42	LCDCE	O	Chip enable output to the liquid crystal display driver (IC901)
43	UNICKO	O	Serial data transfer clock signal output terminal for the unilink Not used (pull down)
44	UNICKI	I	Serial data reading clock signal input terminal for the unilink Not used (fixed at “L”)
45	UNISI	I	Serial data input terminal for the unilink Not used (fixed at “L”)
46	UNISO	O	Serial data output terminal for the unilink Not used (pull down)
47	VDD	—	Power supply terminal (+5V)
48	AVDD	—	Power supply terminal (+5V) (for A/D converter)
49	AVREF+	I	Reference voltage input terminal (+5V) (for A/D converter)
50	KEYIN1	I	Key input terminal (A/D input) XR-5790R: ▲, INTRO 1, REPEAT 2, 3, BL SKIP 6, ATA 5, 4, PTY, AF/TA, PRST +/-, DSPL keys input (LSW921 to LSW932) XR-5800R: ▲, INTRO 1, REPEAT 2, 3, BL SKIP 6, ATA 5, MTL 4, PTY, AF/TA, BTM SENS, DSPL keys input (LSW921 to LSW931)
51	KEYIN0	I	Key input terminal (A/D input) XR-5790R: OFF, SOURCE, MODE ◀▶, + ▶▶▶▶ SEEK AMS, - ◀◀◀◀ SEEK AMS, VOLUME -, SEL, VOLUME +, ATT, BTM SENS keys input (LSW901 to LSW910) XR-5800R: OFF, SOURCE, MODE ◀▶, + ▶▶▶▶ SEEK AMS, - ◀◀◀◀ SEEK AMS, VOLUME -, SEL, VOLUME +, ATT keys input (LSW901 to LSW908 and LSW910)
52	D-BASS	I	D-BASS switch (SW951) input (A/D input)
53	KEYSEL	I	Setting terminal for the key (fixed at center voltage)
54	DSTSEL	I	Destination setting terminal AEP, UK, South European models: fixed at “L”, German model: fixed at “H”
55	RCIN0	I	Rotary remote commander shift key A/D input terminal
56	VSM1	I	Signal meter voltage detection input terminal Not used (fixed at “L”)
57	VSM0	I	FM and AM signal meter voltage detection input from the FM/AM tuner unit (TU1)
58	AVREF-	I	Reference ground terminal
59	AVSS	—	Ground terminal (for A/D converter)
60	GND	—	Ground terminal
61	BUSON	O	Bus on/off control signal output terminal Not used (pull down)
62	SYSRST	O	Reset signal output terminal “L”: reset Not used (pull down)
63	SEKOUT	O	Seek control signal output to the FM/AM tuner unit (TU1)
64	TUNON	O	Tuner system power supply on/off control signal output to the BA3918 (IC601) “H”: tuner on
65	FM ON	O	FM system power supply on/off control signal output to the BA3918 (IC601) “H”: FM on
66	MUT	O	Line muting control signal output terminal “H”: line muting on

Pin No.	Pin Name	I/O	Function
67	AF SEK	O	AF seek control signal output terminal Not used (open)
68	COLOR	I	Setting terminal for the illumination color "L": amber, "H": green Not used (open)
69	NOSESW	I	Detects the removal of the attaching and removing type front panel block "L": attaching
70	$\overline{\text{ST IN}}$	I/O	Input of FM stereo detection signal from FM/AM tuner unit (TU1), and output of forced monaural control signal to FM/AM tuner unit (TU1) (Commonly used for stereo display input and forced monaural output) FM stereo detection at input of "L", forced monaural at output of "L"
71	SD IN	I	Station detector detect input from the FM/AM tuner unit (TU1) Stop level for SEEK, BTM, etc. is determined SD is present at input of "H"
72	REL T	I	Reel table rotation detect signal input from the take-up and supply reel sensor
73	POS3	I	Tape position detect input from tape operation switch on the mechanism block
74	POS2	I	
75	POS1	I	
76	POS0	I	
77	PW SEL	I	Power select switch (S801) input terminal "L": position A (halt mode), "H": position B (operation mode)
78	$\overline{\text{TELEMUTE}}$	I	Telephone muting signal input terminal At input of "L", the signal is attenuated by -20 dB Used for XR-5800R only
79	$\overline{\text{TEST}}$	I	Setting terminal for the test mode "L": test mode (normally fixed at "H")
80	ILLIN	I	Not used (fixed at "L")

*1 loading/tape operation motor control

MODE TERMINAL	STOP	LOADING/ FORWARD	EJECT/ REVERSE	BRAKE
LMLOD (pin ②)	"L"	"H"	"L"	"H"
LMEJ (pin ③)	"L"	"L"	"H"	"H"


SECTION 7 EXPLODED VIEWS

NOTE:

- -XX and -X mean standardized parts, so they may have some difference from the original one.
- Color Indication of Appearance Parts
Example:
KNOB, BALANCE (WHITE) . . . (RED)
 ↑ ↑
 Parts Color Cabinet's Color


- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.
- Hardware (# mark) list and accessories and packing materials are given in the last of the electrical parts list.

(1) CHASSIS SECTION

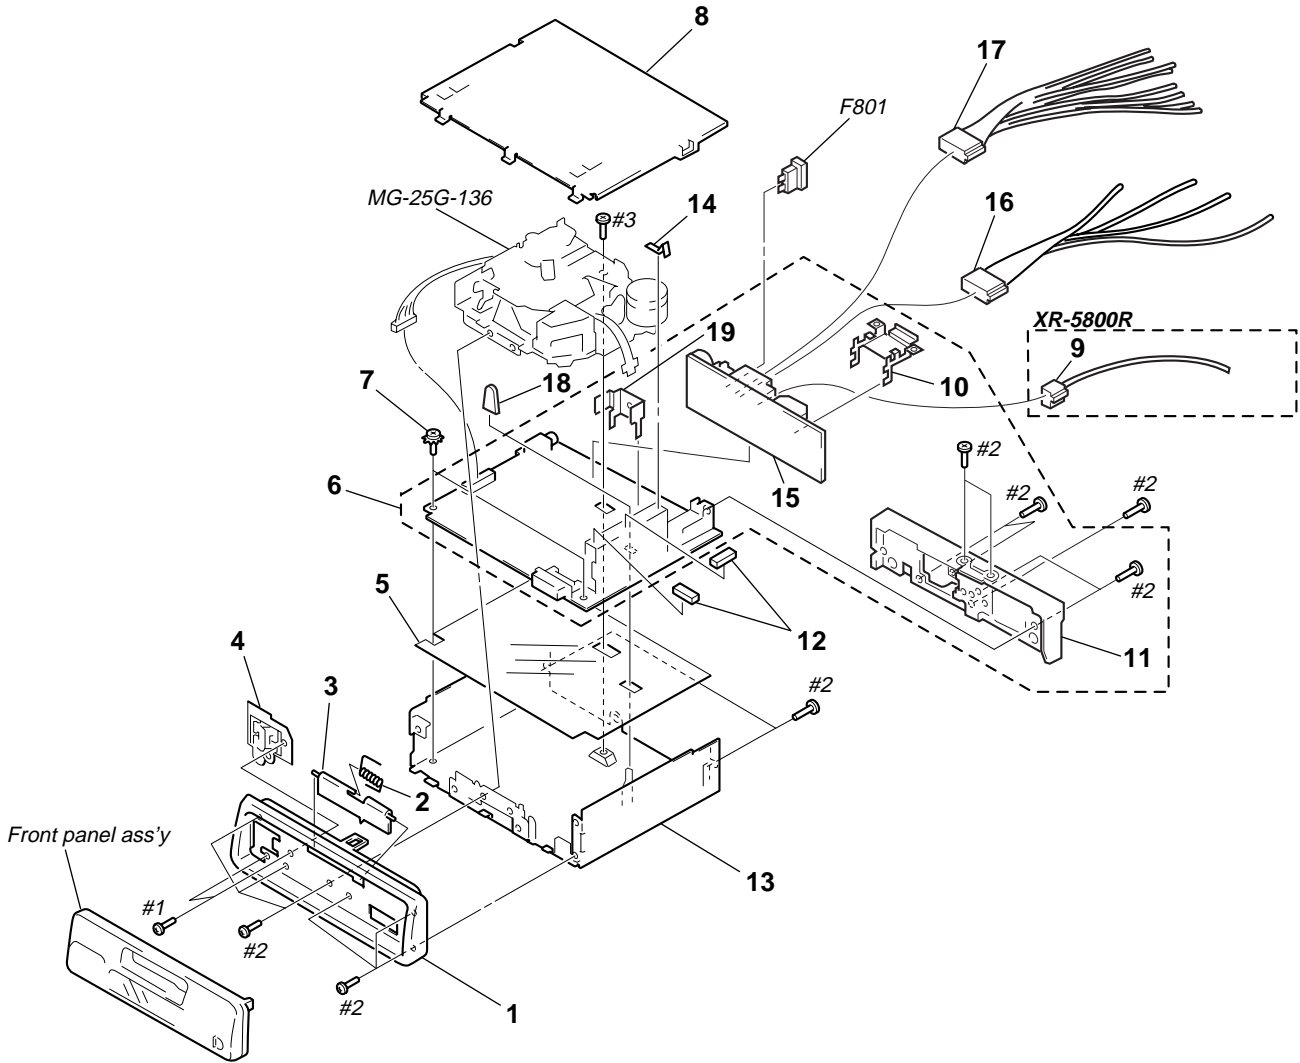


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
1	3-009-294-01	PANEL, SUB		9	1-777-989-31	CORD (WITH CONNECTOR) (ATT) (5800R)	
2	3-935-003-01	SPRING, TORSION		* 10	3-009-307-01	BRACKET (IC)	
3	3-932-205-21	DOOR, CASSETTE		* 11	3-010-471-01	HEAT SINK	
4	X-3367-636-1	LOCK ASSY		12	3-935-014-01	CUSHION (U)	
* 5	3-009-306-01	SHEET, INSULATING		* 13	3-009-813-01	CHASSIS	
* 6	A-3313-356-A	MAIN BOARD, COMPLETE (5790R: AEP, UK)		14	3-937-650-01	PLATE (C), GROUND	
* 6	A-3313-357-A	MAIN BOARD, COMPLETE (5790R: German)		* 15	A-3309-740-A	POWER BOARD, COMPLETE	
* 6	A-3313-363-A	MAIN BOARD, COMPLETE (5800R: AEP, UK, South European)		16	1-782-092-11	CORD (WITH CONNECTOR) (ISO-P) (POWER)	
* 6	A-3313-364-A	MAIN BOARD, COMPLETE (5800R: German)		17	1-782-093-11	CORD (WITH CONNECTOR) (ISO-S) (SPEAKER)	
7	3-915-923-01	SCREW, GROUND POINT		18	3-012-859-01	CAP (25), RUBBER	
* 8	X-3373-269-1	COVER ASSY (ISO)		* 19	3-012-105-01	BRACKET (HS)	
				F801	1-532-877-11	FUSE (BLADE TYPE) (AUTO FUSE) (10A)	

**(2) FRONT PANEL SECTION
(XR-5790R)**

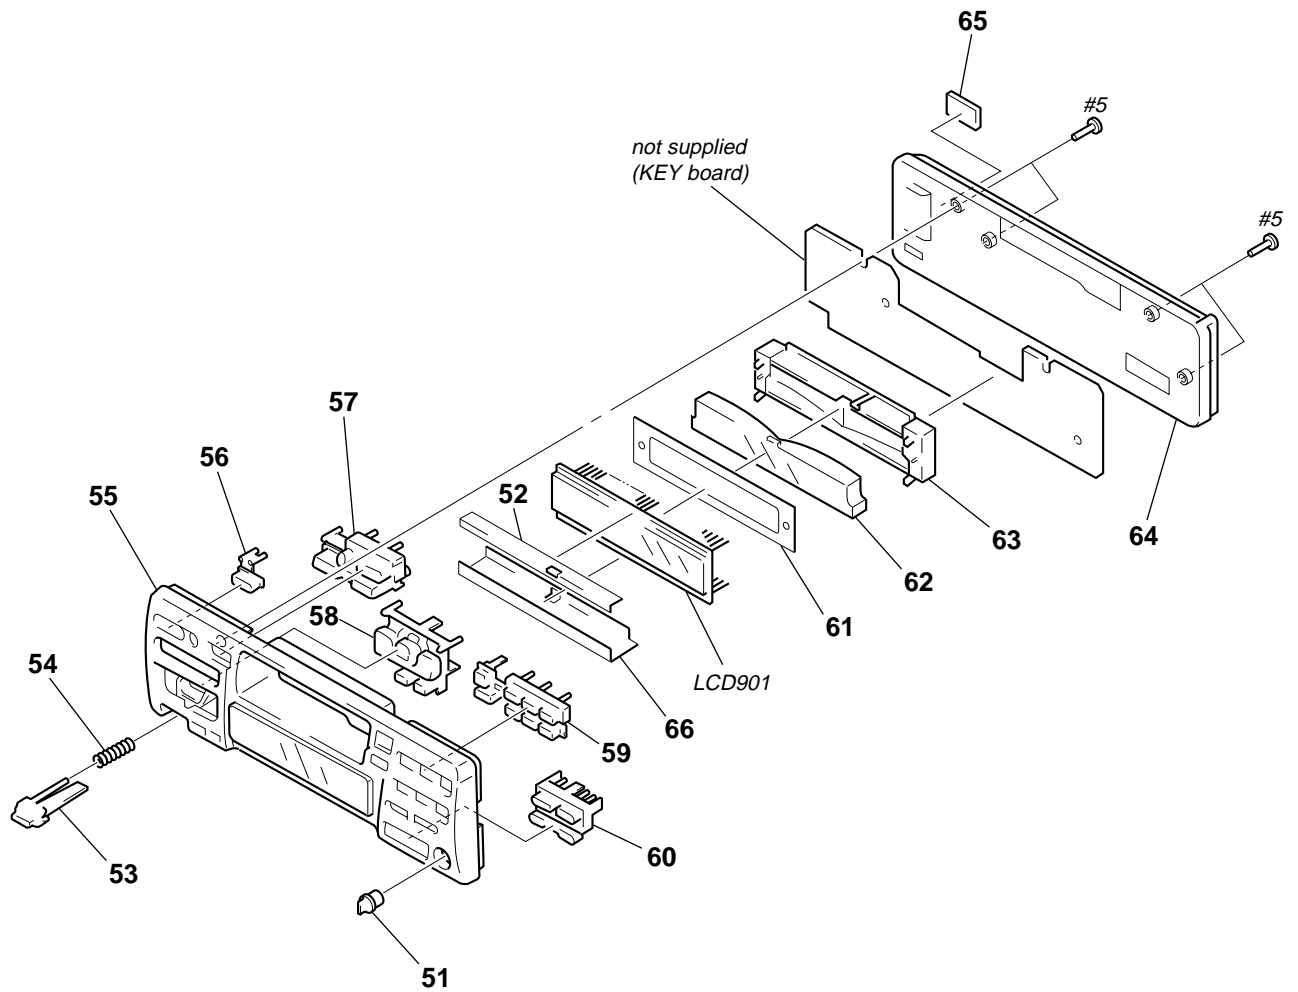


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
51	3-018-930-01	KNOB (D-BASS)		60	3-010-389-01	BUTTON (P. A. P) (PTY. AF/TA. -. PRST. +)	
* 52	3-014-857-01	SHEET (LCD) (T)		* 61	3-010-375-01	SHEET (REFLECTOR)	
53	3-010-398-01	BUTTON (RELEASE)		* 62	3-018-385-01	PLATE (LCD), LIGHT GUIDE	
54	3-010-395-01	SPRING (RELEASE)		* 63	3-018-386-01	HOLDER (LCD)	
55	X-3374-695-1	PANEL SUB ASSY		64	3-010-382-01	PANEL, FRONT BACK	
56	3-010-383-01	BUTTON (SOURCE)		65	3-015-036-01	CUSHION (BACK PANEL)	
57	3-010-384-01	BUTTON (M. O. S)		* 66	3-014-861-01	SHEET (LCD) (B)	
58	3-010-385-11	BUTTON (S. M. +/-) (-. SEL. +. ATT. SENS)		LCD901	1-801-968-11	DISPLAY PANEL, LIQUID CRYSTAL	
59	3-010-387-01	BUTTON (PRESET)					
			(▲. 1. 2. 3. 4. 5. 6. DSPL)				

**(3) FRONT PANEL SECTION
(XR-5800R)**

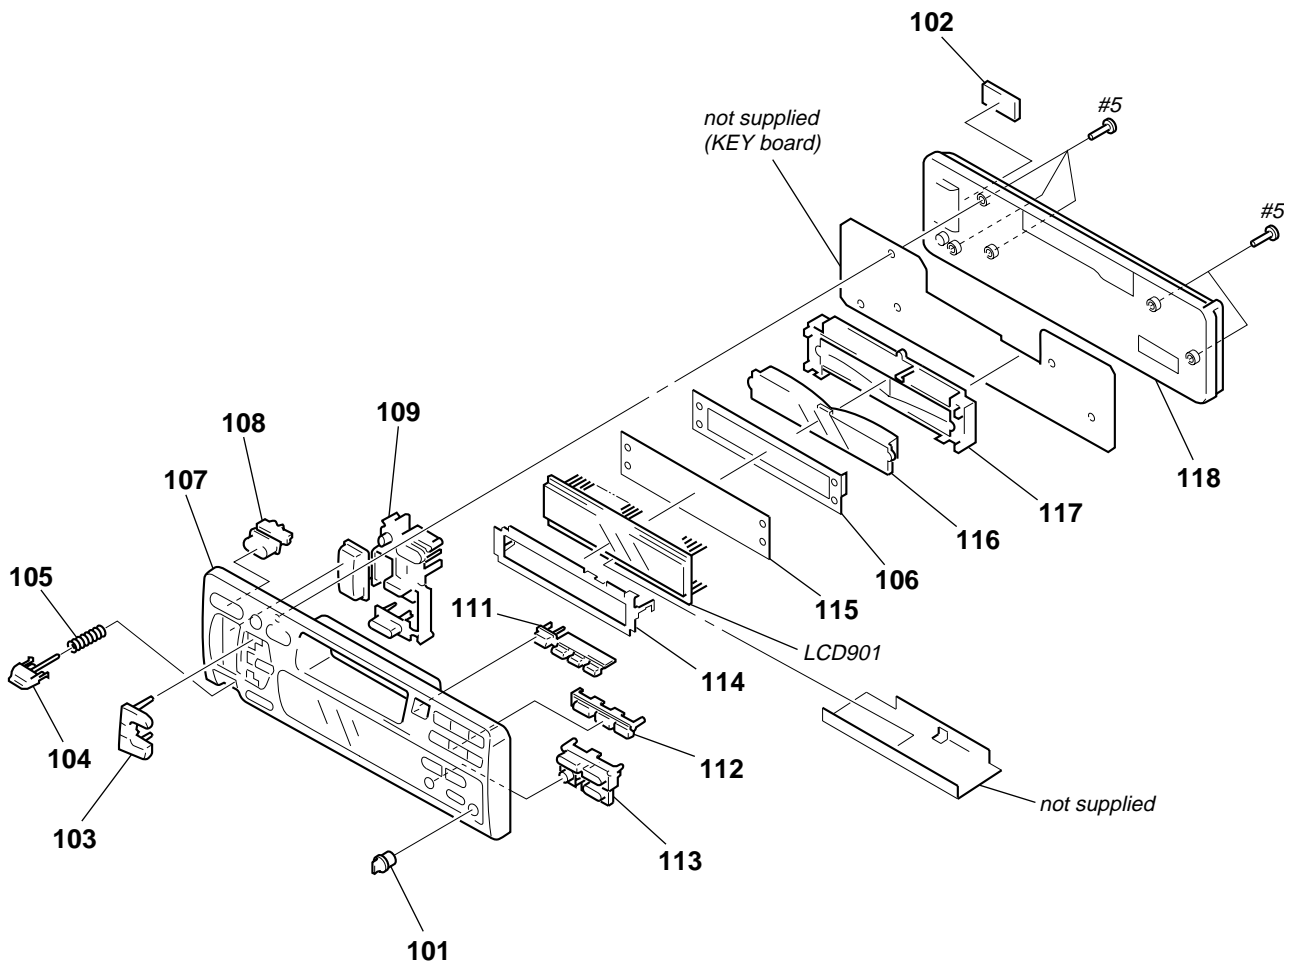

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
101	3-018-799-01	BUTTON (D-BASS)		111	3-016-927-01	BUTTON (1-3) (▲. 1. 2. 3)	
102	3-015-036-01	CUSHION (BACK PANEL)		112	3-016-928-11	BUTTON (4-6) (4. 5. 6)	
103	3-016-924-01	BUTTON (L) (2) (+. -)		113	3-016-929-01	BUTTON (R) (2) (PTY. AF/TA. ●. SENS)	
104	3-009-304-01	BUTTON (RELEASE)		* 114	3-019-151-01	PLATE (LCD), GROUND	
105	3-932-475-01	SPRING (RELEASE)		* 115	3-019-150-01	SHEET (REFLECTOR)	
* 106	3-019-149-01	PLATE, LCD		* 116	3-018-612-01	PLATE, LIGHT GUIDE	
107	X-3374-682-1	PANEL SUB ASSY		* 117	3-018-611-01	HOLDER (LCD)	
108	3-009-300-01	BUTTON (SOURCE)		118	3-010-519-01	PANEL, FRONT BACK	
109	3-018-797-11	BUTTON (L) (3) (+ >>>>> SEEK AMS. <<<<<< -. ●. OFF. SEL. ATT)		LCD901	1-801-968-11	DISPLAY PANEL, LIQUID CRYSTAL	

**(4) MECHANISM DECK SECTION
(MG-25G-136)**

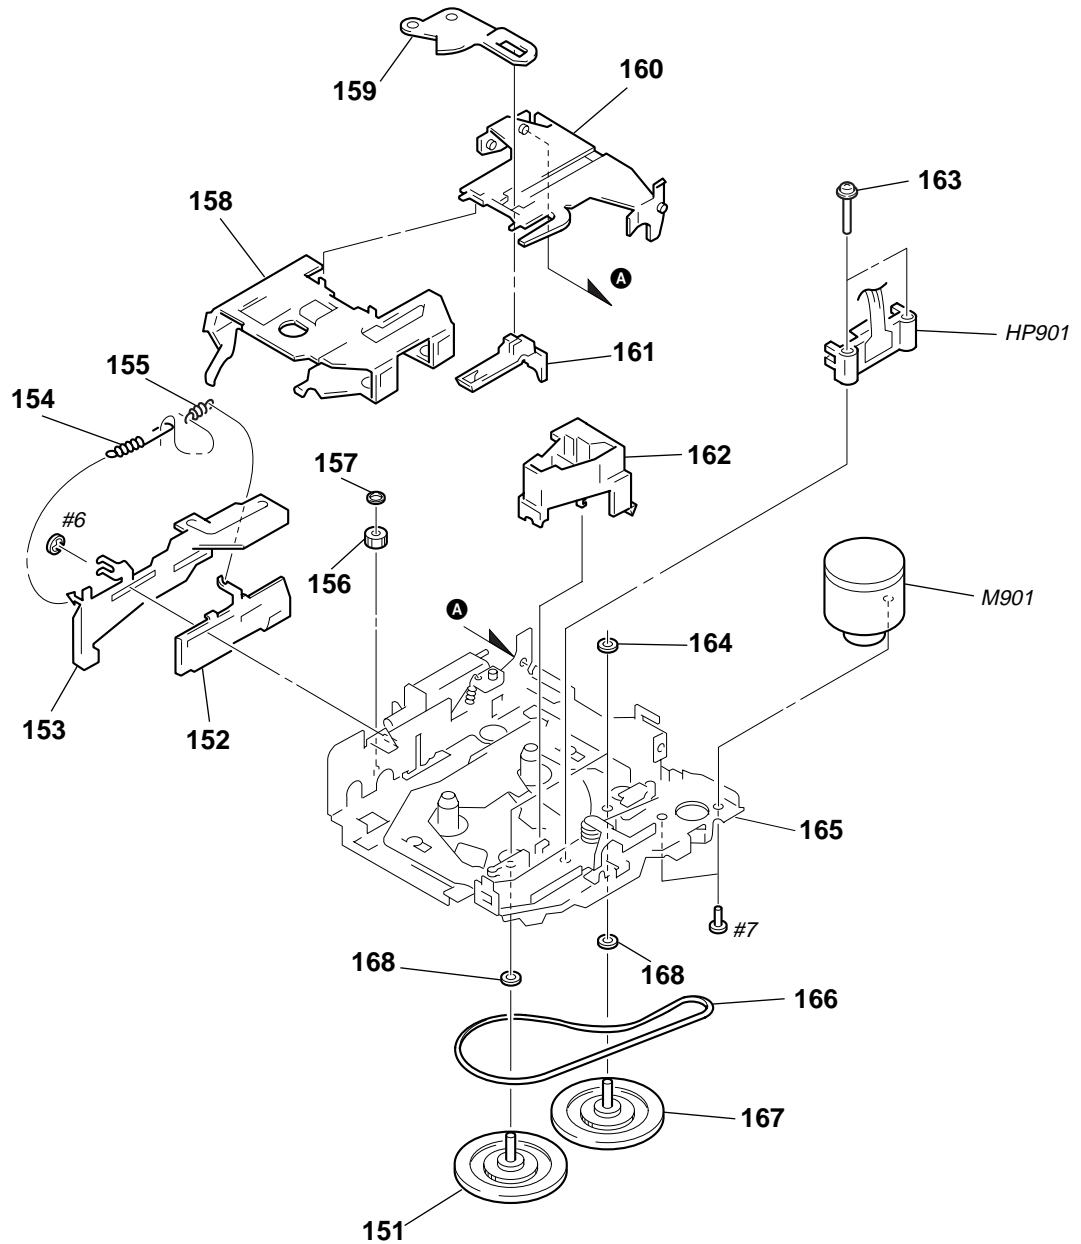

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
151	A-3291-667-A	CLUTCH (FR) ASSY		161	3-933-346-01	CATCHER	
* 152	3-019-130-01	LEVER (LDG-A)		162	3-933-344-01	GUIDE (C)	
* 153	3-019-131-01	LEVER (LDG-B)		163	3-014-798-01	SCREW (HEAD), SPECIAL	
154	3-020-539-01	SPRING (LD-1), TENSION		164	3-364-151-01	WASHER	
155	3-020-540-01	SPRING (LD-2), TENSION		165	A-3301-267-A	CHASSIS ASSY (G)	
156	3-020-542-01	GEAR (LOADING FT)		166	3-017-302-01	BELT (25)	
157	3-341-753-11	WASHER, POLYETHYLENE		167	3-936-853-01	FLYWHEEL (F)	
158	3-020-533-01	HOUSING		168	3-701-437-21	WASHER	
* 159	3-020-532-01	ARM (SUCTION)		HP901	1-500-196-21	HEAD, MAGNETIC (PLAYBACK)	
160	3-020-534-01	HANGER		M901	A-3291-665-A	MOTOR ASSY, MAIN (CAPSTAN/REEL)	

KEY

**SECTION 8
ELECTRICAL PARTS LIST**

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX and -X mean standardized parts, so they may have some difference from the original one.
- RESISTORS
All resistors are in ohms.
METAL: Metal-film resistor.
METAL OXIDE: Metal oxide-film resistor.
F: nonflammable

- Items marked “*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- SEMICONDUCTORS
In each case, u: μ , for example:
uA. . . : μ A. . . uPA. . . : μ PA. . .
uPB. . . : μ PB. . . uPC. . . : μ PC. . .
uPD. . . : μ PD. . .
- CAPACITORS
uF: μ F
- COILS
uH: μ H

When indicating parts by reference number, please include the board.

Ref. No.	Part No.	Description	Remark
		KEY BOARD *****	
*	3-010-375-01	SHEET (REFLECTOR)	
*	3-018-385-01	PLATE (LCD), LIGHT GUIDE	
*	3-018-386-01	HOLDER (LCD)	
*	3-018-611-01	HOLDER (LCD)	
*	3-018-612-01	PLATE, LIGHT GUIDE	
*	3-019-149-01	PLATE, LCD	
*	3-019-150-01	SHEET (REFLECTOR)	
		< CAPACITOR >	
C901	1-163-033-00	CERAMIC CHIP 0.022uF	50V
C902	1-165-319-11	CERAMIC CHIP 0.1uF	50V
C903	1-165-319-11	CERAMIC CHIP 0.1uF	50V
C904	1-163-251-11	CERAMIC CHIP 100PF 5%	50V
		< CONNECTOR >	
CN901	1-764-423-11	PIN, CONNECTOR 12P	
		< DIODE >	
D901	8-719-420-90	DIODE MA8051-M	
D902	8-719-422-64	DIODE MA8062-M	
D903	8-719-422-64	DIODE MA8062-M	
D904	8-719-422-64	DIODE MA8062-M	
D905	8-719-422-64	DIODE MA8062-M	
		< IC >	
IC901	8-759-365-90	IC LC75824W	
		< SHORT CHIP >	
JC901	1-216-295-00	SHORT (CHIP) 0	
		< LIQUID CRYSTAL DISPLAY >	
LCD901	1-801-968-11	DISPLAY PANEL, LIQUID CRYSTAL	
		< SWITCH >	
LSW901	1-762-617-11	SWITCH, KEY BOARD (WITH LED) (OFF)	(AMBER)
LSW901	1-762-619-11	SWITCH, KEY BOARD (WITH LED) (OFF)	(GREEN)

Ref. No.	Part No.	Description	Remark
LSW902	1-762-617-11	SWITCH, KEY BOARD (WITH LED) (SOURCE)	(AMBER)
LSW902	1-762-619-11	SWITCH, KEY BOARD (WITH LED) (SOURCE)	(GREEN)
LSW903	1-762-617-11	SWITCH, KEY BOARD (WITH LED)	(MODE ◀▶) (AMBER)
LSW903	1-762-619-11	SWITCH, KEY BOARD (WITH LED)	(MODE ◀▶) (GREEN)
LSW904	1-762-617-11	SWITCH, KEY BOARD (WITH LED)	(SEEK AMS, + ▶▶▶▶) (AMBER)
LSW904	1-762-619-11	SWITCH, KEY BOARD (WITH LED)	(SEEK AMS, + ▶▶▶▶) (GREEN)
LSW905	1-762-617-11	SWITCH, KEY BOARD (WITH LED)	(SEEK AMS, ◀◀◀◀-) (AMBER)
LSW905	1-762-619-11	SWITCH, KEY BOARD (WITH LED)	(SEEK AMS, ◀◀◀◀-) (GREEN)
LSW906	1-762-617-11	SWITCH, KEY BOARD (WITH LED) (-)	(AMBER)
LSW906	1-762-619-11	SWITCH, KEY BOARD (WITH LED) (-)	(GREEN)
LSW907	1-762-617-11	SWITCH, KEY BOARD (WITH LED) (SEL)	(AMBER)
LSW907	1-762-619-11	SWITCH, KEY BOARD (WITH LED) (SEL)	(GREEN)
LSW908	1-762-617-11	SWITCH, KEY BOARD (WITH LED) (+)	(AMBER)
LSW908	1-762-619-11	SWITCH, KEY BOARD (WITH LED) (+)	(GREEN)
LSW909	1-762-617-11	SWITCH, KEY BOARD (WITH LED) (ATT)	(5790R: AMBER)
LSW909	1-762-619-11	SWITCH, KEY BOARD (WITH LED) (ATT)	(5790R: GREEN)
LSW910	1-762-617-11	SWITCH, KEY BOARD (WITH LED)	(BTM, SENS) (5790R: AMBER)
LSW910	1-762-617-11	SWITCH, KEY BOARD (WITH LED) (ATT)	(5800R: AMBER)
LSW910	1-762-619-11	SWITCH, KEY BOARD (WITH LED)	(BTM, SENS) (5790R: GREEN)
LSW910	1-762-619-11	SWITCH, KEY BOARD (WITH LED) (ATT)	(5800R: GREEN)
LSW921	1-762-617-11	SWITCH, KEY BOARD (WITH LED) (▲)	(AMBER)
LSW921	1-762-619-11	SWITCH, KEY BOARD (WITH LED) (▲)	(GREEN)
LSW922	1-762-617-11	SWITCH, KEY BOARD (WITH LED) (INTRO, 1)	(AMBER)

KEY

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
LSW922	1-762-619-11	SWITCH, KEY BOARD (WITH LED) (INTRO, 1) (GREEN)		R903	1-216-045-00	METAL CHIP	680 5% 1/10W
LSW923	1-762-617-11	SWITCH, KEY BOARD (WITH LED) (REPEAT, 2) (AMBER)		R904	1-216-049-11	RES, CHIP	1K (2012)
LSW923	1-762-619-11	SWITCH, KEY BOARD (WITH LED) (REPEAT, 2) (GREEN)		R905	1-216-053-00	METAL CHIP	1.5K 5% 1/10W
LSW924	1-762-617-11	SWITCH, KEY BOARD (WITH LED) (3) (AMBER)		R906	1-216-053-00	METAL CHIP	1.5K 5% 1/10W
LSW924	1-762-619-11	SWITCH, KEY BOARD (WITH LED) (3) (GREEN)		R907	1-216-057-00	METAL CHIP	2.2K 5% 1/10W
				R908	1-216-061-00	METAL CHIP	3.3K 5% 1/10W
				R909	1-216-065-00	METAL CHIP	4.7K 5% 1/10W
				R910	1-216-069-00	METAL CHIP	6.8K 5% 1/10W (5790R)
LSW925	1-762-617-11	SWITCH, KEY BOARD (WITH LED) (BL SKIP, 6) (AMBER)		R921	1-216-045-00	METAL CHIP	680 5% 1/10W
LSW925	1-762-619-11	SWITCH, KEY BOARD (WITH LED) (BL SKIP, 6) (GREEN)		R922	1-216-045-00	METAL CHIP	680 5% 1/10W
LSW926	1-762-617-11	SWITCH, KEY BOARD (WITH LED) (ATA, 5) (AMBER)		R923	1-216-045-00	METAL CHIP	680 5% 1/10W
LSW926	1-762-619-11	SWITCH, KEY BOARD (WITH LED) (ATA, 5) (GREEN)		R924	1-216-049-11	RES, CHIP	1K (2012)
LSW927	1-762-617-11	SWITCH, KEY BOARD (WITH LED) (4) (5790R: AMBER)		R925	1-216-053-00	METAL CHIP	1.5K 5% 1/10W
LSW927	1-762-617-11	SWITCH, KEY BOARD (WITH LED) (MTL, 4) (5800R: AMBER)		R926	1-216-053-00	METAL CHIP	1.5K 5% 1/10W
LSW927	1-762-619-11	SWITCH, KEY BOARD (WITH LED) (4) (5790R: GREEN)		R927	1-216-057-00	METAL CHIP	2.2K 5% 1/10W
LSW927	1-762-619-11	SWITCH, KEY BOARD (WITH LED) (MTL, 4) (5800R: GREEN)		R928	1-216-061-00	METAL CHIP	3.3K 5% 1/10W
LSW928	1-762-617-11	SWITCH, KEY BOARD (WITH LED) (PTY) (AMBER)		R929	1-216-065-00	METAL CHIP	4.7K 5% 1/10W
LSW928	1-762-619-11	SWITCH, KEY BOARD (WITH LED) (PTY) (GREEN)		R930	1-216-069-00	METAL CHIP	6.8K 5% 1/10W
LSW929	1-762-617-11	SWITCH, KEY BOARD (WITH LED) (AF/TA) (AMBER)		R931	1-216-073-00	METAL CHIP	10K 5% 1/10W
LSW929	1-762-619-11	SWITCH, KEY BOARD (WITH LED) (AF/TA) (GREEN)		R932	1-216-077-00	METAL CHIP	15K 5% 1/10W
LSW930	1-762-617-11	SWITCH, KEY BOARD (WITH LED) (PRST, +) (5790R: AMBER)		R951	1-216-041-00	METAL CHIP	470 5% 1/10W
LSW930	1-762-617-11	SWITCH, KEY BOARD (WITH LED) (BTM, SENS) (5800R: AMBER)		R952	1-216-109-00	METAL CHIP	330K 5% 1/10W
LSW930	1-762-619-11	SWITCH, KEY BOARD (WITH LED) (PRST, +) (5790R: GREEN)		R953	1-216-049-11	RES, CHIP	1K (2012)
LSW930	1-762-619-11	SWITCH, KEY BOARD (WITH LED) (BTM, SENS) (5800R: GREEN)		R954	1-216-049-11	RES, CHIP	1K (2012)
LSW931	1-762-617-11	SWITCH, KEY BOARD (WITH LED) (-, PRST) (5790R: AMBER)		R955	1-216-049-11	RES, CHIP	1K (2012)
LSW931	1-762-617-11	SWITCH, KEY BOARD (WITH LED) (DSPL) (5800R: AMBER)		R956	1-216-049-11	RES, CHIP	1K (2012)
LSW931	1-762-619-11	SWITCH, KEY BOARD (WITH LED) (-, PRST) (5790R: GREEN)		R961	1-216-025-00	RES, CHIP	100 (2012)
LSW931	1-762-619-11	SWITCH, KEY BOARD (WITH LED) (DSPL) (5800R: GREEN)		R961	1-216-029-00	METAL CHIP	150 5% 1/10W (5790R: AMBER)
LSW932	1-762-617-11	SWITCH, KEY BOARD (WITH LED) (DSPL) (5790R: AMBER)		R961	1-216-033-00	METAL CHIP	220 5% 1/10W (5800R: GREEN)
LSW932	1-762-619-11	SWITCH, KEY BOARD (WITH LED) (DSPL) (5790R: GREEN)		R961	1-216-037-00	METAL CHIP	330 5% 1/10W (5800R: AMBER)
				R963	1-216-025-00	RES, CHIP	100 (2012) (5800R: GREEN)
				R963	1-216-029-00	METAL CHIP	150 5% 1/10W (5800R: AMBER)
				R963	1-216-033-00	METAL CHIP	220 5% 1/10W (5790R: GREEN)
				R963	1-216-037-00	METAL CHIP	330 5% 1/10W (5790R: AMBER)
				R965	1-216-033-00	METAL CHIP	220 5% 1/10W (GREEN)
				R965	1-216-037-00	METAL CHIP	330 5% 1/10W (AMBER)
				R967	1-216-021-00	METAL CHIP	68 5% 1/10W (GREEN)
				R967	1-216-029-00	METAL CHIP	150 5% 1/10W (AMBER)
				R969	1-216-021-00	METAL CHIP	68 5% 1/10W (5790R: GREEN)
				R969	1-216-025-00	RES, CHIP	100 (2012) (5800R: GREEN)
PL903	1-517-633-21	LAMP, PILOT (LCD BACK LIGHT)		R969	1-216-029-00	METAL CHIP	150 5% 1/10W (AMBER)
PL904	1-517-633-21	LAMP, PILOT (LCD BACK LIGHT)		R971	1-216-021-00	METAL CHIP	68 5% 1/10W (GREEN)
				R971	1-216-029-00	METAL CHIP	150 5% 1/10W (AMBER)
R901	1-216-045-00	METAL CHIP	680 5% 1/10W				
R902	1-216-045-00	METAL CHIP	680 5% 1/10W				

KEY

MAIN

Ref. No.	Part No.	Description	Remark			Ref. No.	Part No.	Description	Remark		
R973	1-216-025-00	RES, CHIP	100 (2012)	(5800R: GREEN)		C35	1-164-232-11	CERAMIC CHIP	0.01uF		50V
R973	1-216-029-00	METAL CHIP	150	5%	1/10W (5800R: AMBER)	C36	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
R974	1-216-025-00	RES, CHIP	100 (2012)	(5800R: GREEN)		C101	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V
R974	1-216-029-00	METAL CHIP	150	5%	1/10W (5800R: AMBER)	C102	1-126-160-11	ELECT	1uF	20%	50V
R981	1-216-053-00	METAL CHIP	1.5K	5%	1/10W	C103	1-126-160-11	ELECT	1uF	20%	50V
R982	1-216-061-00	METAL CHIP	3.3K	5%	1/10W	C111	1-126-160-11	ELECT	1uF	20%	50V
R983	1-216-069-00	METAL CHIP	6.8K	5%	1/10W	C112	1-164-182-11	CERAMIC CHIP	0.0033uF	10%	50V
R984	1-216-081-00	METAL CHIP	22K	5%	1/10W	C113	1-126-160-11	ELECT	1uF	20%	50V
R999	1-216-295-11	SHORT (CHIP)	0		(AMBER)	C114	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V
R999	1-216-308-00	METAL CHIP	4.7	5%	1/10W (GREEN)	C115	1-164-492-11	CERAMIC CHIP	0.15uF	10%	16V
		< SWITCH >				C116	1-164-492-11	CERAMIC CHIP	0.15uF	10%	16V
SW951	1-762-937-11	SWITCH, ROTARY (D-BASS)				C118	1-126-157-11	ELECT	10uF	20%	16V

*	A-3313-356-A	MAIN BOARD, COMPLETE (5790R: AEP, UK)				C152	1-163-809-11	CERAMIC CHIP	0.047uF	10%	25V
*	A-3313-357-A	MAIN BOARD, COMPLETE (5790R: German)				C153	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V
*	A-3313-363-A	MAIN BOARD, COMPLETE (5800R: AEP, UK, South European)				C155	1-124-234-00	ELECT	22uF	20%	16V
*	A-3313-364-A	MAIN BOARD, COMPLETE (5800R: German) ***** (Including POWER BOARD, COMPLETE)				C157	1-124-584-00	ELECT	100uF	20%	10V
*	3-009-307-01	BRACKET (IC)				C158	1-163-031-11	CERAMIC CHIP	0.01uF		50V
*	3-010-471-01	HEAT SINK				C201	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V
*	3-012-105-01	BRACKET (HS)				C202	1-126-160-11	ELECT	1uF	20%	50V
	7-685-793-09	SCREW +PTT 2.6X8 (S)				C203	1-126-160-11	ELECT	1uF	20%	50V
		< CAPACITOR >				C211	1-126-160-11	ELECT	1uF	20%	50V
C1	1-163-235-11	CERAMIC CHIP	22PF	5%	50V	C212	1-164-182-11	CERAMIC CHIP	0.0033uF	10%	50V
C2	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V	C213	1-126-160-11	ELECT	1uF	20%	50V
C3	1-126-157-11	ELECT	10uF	20%	16V	C214	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V
C4	1-126-157-11	ELECT	10uF	20%	16V	C215	1-164-492-11	CERAMIC CHIP	0.15uF	10%	16V
C5	1-126-157-11	ELECT	10uF	20%	16V	C216	1-164-492-11	CERAMIC CHIP	0.15uF	10%	16V
C6	1-164-232-11	CERAMIC CHIP	0.01uF		50V	C218	1-126-157-11	ELECT	10uF	20%	16V
C9	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V	C219	1-126-157-11	ELECT	10uF	20%	16V
C11	1-163-251-11	CERAMIC CHIP	100PF	5%	50V	C220	1-126-157-11	ELECT	10uF	20%	16V
C12	1-107-823-11	CERAMIC CHIP	0.47uF	10%	16V	C221	1-126-157-11	ELECT	10uF	20%	16V
C13	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V	C301	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V
C14	1-164-161-11	CERAMIC CHIP	0.0022uF	10%	100V	C302	1-163-263-11	CERAMIC CHIP	330PF	5%	50V
C15	1-124-584-00	ELECT	100uF	20%	10V	C303	1-163-263-11	CERAMIC CHIP	330PF	5%	50V
C16	1-163-809-11	CERAMIC CHIP	0.047uF	10%	25V	C304	1-164-232-11	CERAMIC CHIP	0.01uF		50V
C17	1-124-463-00	ELECT	0.1uF	20%	50V	C305	1-164-489-11	CERAMIC CHIP	0.22uF	10%	16V
C18	1-164-232-11	CERAMIC CHIP	0.01uF		50V	C308	1-126-160-11	ELECT	1uF	20%	50V
C19	1-163-251-11	CERAMIC CHIP	100PF	5%	50V	C309	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V
C20	1-163-251-11	CERAMIC CHIP	100PF	5%	50V	C310	1-164-161-11	CERAMIC CHIP	0.0022uF	10%	100V
C21	1-163-251-11	CERAMIC CHIP	100PF	5%	50V	C350	1-124-234-00	ELECT	22uF	20%	16V
C22	1-163-077-00	CERAMIC CHIP	0.1uF	10%	25V	C351	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C23	1-126-933-11	ELECT	100uF	20%	16V	C353	1-124-465-00	ELECT	0.47uF	20%	50V
C24	1-163-099-00	CERAMIC CHIP	18PF	5%	50V	C354	1-164-232-11	CERAMIC CHIP	0.01uF		50V
C25	1-163-099-00	CERAMIC CHIP	18PF	5%	50V	C356	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C26	1-163-133-00	CERAMIC CHIP	470PF	5%	50V	C357	1-124-584-00	ELECT	100uF	20%	10V
C28	1-126-157-11	ELECT	10uF	20%	16V	C362	1-165-319-11	CERAMIC CHIP	0.1uF		50V
C29	1-164-232-11	CERAMIC CHIP	0.01uF		50V	C363	1-165-319-11	CERAMIC CHIP	0.1uF		50V
C30	1-163-231-11	CERAMIC CHIP	15PF	5%	50V	C365	1-126-157-11	ELECT	10uF	20%	16V
C31	1-163-229-11	CERAMIC CHIP	12PF	5%	50V	C366	1-126-157-11	ELECT	10uF	20%	16V
C32	1-126-160-11	ELECT	1uF	20%	50V	C367	1-126-934-11	ELECT	220uF	20%	16V
C34	1-163-251-11	CERAMIC CHIP	100PF	5%	50V	C401	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V
						C402	1-163-263-11	CERAMIC CHIP	330PF	5%	50V
						C403	1-163-263-11	CERAMIC CHIP	330PF	5%	50V
						C404	1-164-232-11	CERAMIC CHIP	0.01uF		50V

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
C405	1-164-489-11	CERAMIC CHIP	0.22uF 10% 16V	D613	8-719-034-94	DIODE MA4180-M(QZ)	
C408	1-126-160-11	ELECT	1uF 20% 50V	D614	8-719-109-97	DIODE RD6.8ES-B2	
C409	1-163-009-11	CERAMIC CHIP	0.001uF 10% 50V	D615	8-719-109-97	DIODE RD6.8ES-B2	
C410	1-164-161-11	CERAMIC CHIP	0.0022uF 10% 100V	D616	8-719-422-64	DIODE MA8062-M	
C501	1-124-584-00	ELECT	100uF 20% 10V	D617	8-719-422-64	DIODE MA8062-M	
C502	1-109-982-11	CERAMIC CHIP	1uF 10% 10V	D621	8-719-970-02	DIODE 1SR139-400	
C503	1-163-099-00	CERAMIC CHIP	18PF 5% 50V	D623	8-719-970-02	DIODE 1SR139-400	
C504	1-163-235-11	CERAMIC CHIP	22PF 5% 50V	D624	8-719-404-49	DIODE MA111	
C505	1-165-319-11	CERAMIC CHIP	0.1uF 50V	D652	8-719-018-04	DIODE MA8240-TX	
C506	1-164-232-11	CERAMIC CHIP	0.01uF 50V	D653	8-719-422-76	DIODE MA8075-M	
C507	1-164-004-11	CERAMIC CHIP	0.1uF 10% 25V	D660	8-719-422-64	DIODE MA8062-M (5800R)	
C582	1-124-257-00	ELECT	2.2uF 20% 50V	D661	8-719-404-49	DIODE MA111 (5800R)	
C583	1-124-589-11	ELECT	47uF 20% 16V	D662	8-719-422-64	DIODE MA8062-M (5800R)	
C584	1-163-243-11	CERAMIC CHIP	47PF 5% 50V	D701	8-719-057-80	DIODE MA8160-M-TX	
C601	1-164-222-11	CERAMIC CHIP	0.22uF 25V	D702	8-719-422-80	DIODE MA8075-H-TX	
C603	1-125-710-11	DOUBLE LAYER	0.1F 5.5V			< IC >	
C605	1-126-157-11	ELECT	10uF 20% 16V	IC1	8-759-448-88	IC TB2114F(EL)	
C606	1-126-157-11	ELECT	10uF 20% 16V	IC3	8-759-163-63	IC TDA7330BD-013TR	
C607	1-126-157-11	ELECT	10uF 20% 16V	IC151	8-759-443-67	IC LC75373ED	
C609	1-124-589-11	ELECT	47uF 20% 16V	IC351	8-752-079-78	IC CXA2509AQ-T4	
C610	1-124-234-00	ELECT	22uF 20% 16V	IC360	8-759-395-97	IC MM1322XFBE	
C612	1-109-982-11	CERAMIC CHIP	1uF 10% 10V	IC501	8-759-492-40	IC MN1884820SC	
C614	1-163-251-11	CERAMIC CHIP	100PF 5% 50V	IC571	8-759-940-45	IC S-8054HN-CB	
C617	1-126-157-11	ELECT	10uF 20% 16V	IC601	8-759-347-49	IC BA3918-V2	
C618	1-164-232-11	CERAMIC CHIP	0.01uF 50V			< JACK >	
C650	1-126-936-11	ELECT	3300uF 20% 16V	J1	1-764-808-14	JACK (ANT) (FM/AM ANTENNA)	
C660	1-164-004-11	CERAMIC CHIP	0.1uF 10% 25V (5800R)	J501	1-566-822-41	JACK (REMOTE IN)	
C701	1-163-009-11	CERAMIC CHIP	0.001uF 10% 50V			< SHORT CHIP >	
		< CONNECTOR >		JC5	1-216-295-11	SHORT (CHIP) 0	
CN351	1-766-260-11	CONNECTOR, FFC/FPC (ZIF) 7P		JC7	1-216-295-11	SHORT (CHIP) 0	
* CN352	1-506-995-11	PIN, CONNECTOR (PC BOARD) 13P		JC8	1-216-295-11	SHORT (CHIP) 0	
CN602	1-764-422-11	PLUG, CONNECTOR 12P		JC9	1-216-295-11	SHORT (CHIP) 0	
		< DISCHARGE GAP >		JC10	1-216-295-11	SHORT (CHIP) 0	
* CP1	1-517-422-11	GAP, SPARK		JC11	1-216-295-11	SHORT (CHIP) 0	
		< DIODE >		JC14	1-216-295-11	SHORT (CHIP) 0	
D2	8-719-991-65	DIODE SB02W03C		JC15	1-216-295-11	SHORT (CHIP) 0	
D3	8-719-423-07	DIODE MA8100-L-TX		JC16	1-216-295-11	SHORT (CHIP) 0	
D4	8-719-422-64	DIODE MA8062-M		JC17	1-216-295-11	SHORT (CHIP) 0	
D350	8-719-404-49	DIODE MA111		JC18	1-216-295-11	SHORT (CHIP) 0	
D361	8-719-423-07	DIODE MA8100-L-TX		JC20	1-216-295-11	SHORT (CHIP) 0	
D362	8-719-911-19	DIODE 1SS119		JC21	1-216-295-11	SHORT (CHIP) 0	
D501	8-719-422-12	DIODE MA8039		JC22	1-216-295-11	SHORT (CHIP) 0	
D504	8-719-400-20	DIODE MA152WA		JC23	1-216-295-11	SHORT (CHIP) 0	
D506	8-719-911-19	DIODE 1SS119		JC24	1-216-295-11	SHORT (CHIP) 0	
D583	8-719-404-49	DIODE MA111		JC27	1-216-295-11	SHORT (CHIP) 0	
D584	8-719-422-12	DIODE MA8039		JC28	1-216-295-11	SHORT (CHIP) 0	
D601	8-719-423-32	DIODE MA8120-M		JC29	1-216-295-11	SHORT (CHIP) 0	
D605	8-719-977-03	DIODE DTZ5.6B		JC29	1-216-295-11	SHORT (CHIP) 0	
D606	8-719-017-67	DIODE MA8068H		JC30	1-216-295-11	SHORT (CHIP) 0	
D607	8-719-801-78	DIODE 1SS184		JC31	1-216-295-11	SHORT (CHIP) 0	
D609	8-719-422-64	DIODE MA8062-M		JC32	1-216-295-11	SHORT (CHIP) 0	
D610	8-719-422-64	DIODE MA8062-M		JC36	1-216-295-11	SHORT (CHIP) 0	
D611	8-719-109-97	DIODE RD6.8ES-B2		JC37	1-216-295-11	SHORT (CHIP) 0	
D612	8-719-109-97	DIODE RD6.8ES-B2		JC38	1-216-295-11	SHORT (CHIP) 0	

MAIN

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
JC40	1-216-295-11	SHORT (CHIP) 0		Q702	8-729-020-67	TRANSISTOR XN1A312-TX	
JC50	1-216-296-00	SHORT (CHIP) 0				< RESISTOR >	
JC51	1-216-296-00	SHORT (CHIP) 0					
JC52	1-216-296-00	SHORT (CHIP) 0					
JC53	1-216-296-00	SHORT (CHIP) 0		R1	1-216-049-11	RES, CHIP 1K (2012)	
JC54	1-216-296-00	SHORT (CHIP) 0		R2	1-216-065-00	METAL CHIP 4.7K 5%	1/10W
JC55	1-216-296-00	SHORT (CHIP) 0 (5790R)		R3	1-216-073-00	METAL CHIP 10K 5%	1/10W
JC56	1-216-296-00	SHORT (CHIP) 0		R4	1-216-097-00	RES, CHIP 100K (2012)	
JC58	1-216-296-00	SHORT (CHIP) 0		R5	1-216-017-00	RES, CHIP 47 (2012)	
JC59	1-216-296-00	SHORT (CHIP) 0		R6	1-216-077-00	METAL CHIP 15K 5%	1/10W
JC60	1-216-296-00	SHORT (CHIP) 0		R7	1-216-075-00	METAL CHIP 12K 5%	1/10W
JC62	1-216-296-00	SHORT (CHIP) 0		R8	1-216-025-00	RES, CHIP 100 (2012)	
JC63	1-216-296-00	SHORT (CHIP) 0		R9	1-216-057-00	METAL CHIP 2.2K 5%	1/10W
JC65	1-216-296-00	SHORT (CHIP) 0		R11	1-216-049-11	RES, CHIP 1K (2012)	
JC66	1-216-296-00	SHORT (CHIP) 0		R14	1-216-057-00	METAL CHIP 2.2K 5%	1/10W
JC67	1-216-296-00	SHORT (CHIP) 0		R15	1-216-073-00	METAL CHIP 10K 5%	1/10W
JC68	1-216-296-00	SHORT (CHIP) 0		R16	1-216-071-00	METAL CHIP 8.2K 5%	1/10W
JC70	1-216-296-00	SHORT (CHIP) 0		R17	1-216-129-00	METAL CHIP 2.2M 5%	1/10W
JC71	1-216-296-00	SHORT (CHIP) 0		R18	1-216-049-11	RES, CHIP 1K (2012)	
JC72	1-216-296-00	SHORT (CHIP) 0 (5800R)		R19	1-216-073-00	METAL CHIP 10K 5%	1/10W
JC73	1-216-296-00	SHORT (CHIP) 0		R101	1-216-065-00	METAL CHIP 4.7K 5%	1/10W
JC74	1-216-296-00	SHORT (CHIP) 0		R102	1-216-085-00	METAL CHIP 33K 5%	1/10W
JC75	1-216-296-00	SHORT (CHIP) 0		R103	1-216-061-00	METAL CHIP 3.3K 5%	1/10W
JC76	1-216-296-00	SHORT (CHIP) 0		R104	1-216-190-00	RES, CHIP 470 (3216)	
JC77	1-216-296-00	SHORT (CHIP) 0		R105	1-216-190-00	RES, CHIP 470 (3216)	
JC78	1-216-296-00	SHORT (CHIP) 0		R108	1-216-077-00	METAL CHIP 15K 5%	1/10W
JC80	1-216-296-00	SHORT (CHIP) 0		R109	1-216-077-00	METAL CHIP 15K 5%	1/10W
JC81	1-216-296-00	SHORT (CHIP) 0		R110	1-216-077-00	METAL CHIP 15K 5%	1/10W
		< COIL >		R111	1-216-077-00	METAL CHIP 15K 5%	1/10W
L1	1-412-006-31	INDUCTOR CHIP 10uH		R112	1-216-129-00	METAL CHIP 2.2M 5%	1/10W
L2	1-410-509-11	INDUCTOR 10uH		R113	1-216-129-00	METAL CHIP 2.2M 5%	1/10W
L4	1-410-509-11	INDUCTOR 10uH		R151	1-216-065-00	METAL CHIP 4.7K 5%	1/10W
L501	1-410-509-11	INDUCTOR 10uH		R201	1-216-214-00	RES, CHIP 4.7K (3216)	
		< TRANSISTOR >		R202	1-216-085-00	METAL CHIP 33K 5%	1/10W
Q2	8-729-120-28	TRANSISTOR 2SC1623-L5L6		R203	1-216-061-00	METAL CHIP 3.3K 5%	1/10W
Q3	8-729-907-28	TRANSISTOR IMD3		R204	1-216-041-00	METAL CHIP 470 5%	1/10W
Q101	8-729-920-21	TRANSISTOR DTC314TKH04		R205	1-216-041-00	METAL CHIP 470 5%	1/10W
Q102	8-729-920-21	TRANSISTOR DTC314TKH04		R208	1-216-077-00	METAL CHIP 15K 5%	1/10W
Q103	8-729-920-21	TRANSISTOR DTC314TKH04		R209	1-216-077-00	METAL CHIP 15K 5%	1/10W
Q201	8-729-920-21	TRANSISTOR DTC314TKH04		R210	1-216-077-00	METAL CHIP 15K 5%	1/10W
Q202	8-729-920-21	TRANSISTOR DTC314TKH04		R211	1-216-077-00	METAL CHIP 15K 5%	1/10W
Q203	8-729-920-21	TRANSISTOR DTC314TKH04		R212	1-216-129-00	METAL CHIP 2.2M 5%	1/10W
Q361	8-729-015-11	TRANSISTOR 2SD1802FAST-TL		R213	1-216-129-00	METAL CHIP 2.2M 5%	1/10W
Q362	8-729-020-67	TRANSISTOR XN1A312-TX		R303	1-216-077-00	METAL CHIP 15K 5%	1/10W
Q364	8-729-106-60	TRANSISTOR 2SB1115A		R304	1-216-081-00	METAL CHIP 22K 5%	1/10W (5800R)
Q365	8-729-900-53	TRANSISTOR DTC114EK		R305	1-216-109-00	METAL CHIP 330K 5%	1/10W
Q501	8-729-020-67	TRANSISTOR XN1A312-TX		R306	1-216-190-00	RES, CHIP 470 (3216)	
Q503	8-729-120-28	TRANSISTOR 2SC1623-L5L6		R307	1-216-057-00	METAL CHIP 2.2K 5%	1/10W
Q581	8-729-020-67	TRANSISTOR XN1A312-TX		R308	1-216-073-00	METAL CHIP 10K 5%	1/10W
Q603	8-729-423-99	TRANSISTOR 2SD2137-OP		R351	1-208-812-11	RES, CHIP 18K	
Q605	8-729-020-67	TRANSISTOR XN1A312-TX		R352	1-216-105-00	RES, CHIP 220K (2012)	
Q606	8-729-027-23	TRANSISTOR DTA114EKA-T146		R353	1-216-065-00	METAL CHIP 4.7K 5%	1/10W
Q608	8-729-027-23	TRANSISTOR DTA114EKA-T146		R354	1-216-077-00	METAL CHIP 15K 5%	1/10W
Q609	8-729-015-11	TRANSISTOR 2SD1802FAST-TL		R355	1-216-009-00	METAL CHIP 22 5%	1/10W
Q610	8-729-120-28	TRANSISTOR 2SC1623-L5L6		R361	1-216-049-11	RES, CHIP 1K (2012)	
Q701	8-729-900-53	TRANSISTOR DTC114EK		R362	1-249-389-11	CARBON 4.7 5%	1/4W
				R363	1-249-389-11	CARBON 4.7 5%	1/4W
				R364	1-216-073-00	METAL CHIP 10K 5%	1/10W

MAIN

POWER

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
R365	1-216-065-00	METAL CHIP	4.7K 5% 1/10W	R601	1-216-057-00	METAL CHIP	2.2K 5% 1/10W
R403	1-216-077-00	METAL CHIP	15K 5% 1/10W	R602	1-216-097-00	RES, CHIP	100K (2012)
R404	1-216-081-00	METAL CHIP	22K 5% 1/10W (5800R)	R603	1-216-089-00	RES, CHIP	47K (2012)
R405	1-216-109-00	METAL CHIP	330K 5% 1/10W	R604	1-216-089-00	RES, CHIP	47K (2012)
R406	1-216-190-00	RES, CHIP	470 (3216)	R606	1-216-206-00	RES, CHIP	2.2K (3216)
R407	1-216-057-00	METAL CHIP	2.2K 5% 1/10W	R607	1-216-073-00	METAL CHIP	10K 5% 1/10W
R408	1-216-073-00	METAL CHIP	10K 5% 1/10W	R608	1-216-097-00	RES, CHIP	100K (2012)
R501	1-216-097-00	RES, CHIP	100K (2012)	R609	1-216-037-00	METAL CHIP	330 5% 1/10W
R505	1-216-049-11	RES, CHIP	1K (2012)	R610	1-216-073-00	METAL CHIP	10K 5% 1/10W
R506	1-216-109-00	METAL CHIP	330K 5% 1/10W	R612	1-216-025-00	RES, CHIP	100 (2012)
R507	1-216-198-00	RES, CHIP	1K (3216)	R613	1-216-025-00	RES, CHIP	100 (2012)
R508	1-216-206-00	RES, CHIP	2.2K (3216)	R614	1-208-806-11	RES, CHIP	10K
R509	1-216-198-00	RES, CHIP	1K (3216)	R615	1-208-806-11	RES, CHIP	10K
R510	1-216-097-00	RES, CHIP	100K (2012)	R616	1-216-295-11	SHORT (CHIP)	0
R511	1-216-097-00	RES, CHIP	100K (2012)	R617	1-216-025-00	RES, CHIP	100 (2012)
R512	1-216-097-00	RES, CHIP	100K (2012)	R618	1-208-806-11	RES, CHIP	10K
R513	1-216-097-00	RES, CHIP	100K (2012)	R619	1-208-806-11	RES, CHIP	10K
R514	1-216-198-00	RES, CHIP	1K (3216)	R620	1-216-025-00	RES, CHIP	100 (2012)
R515	1-216-198-00	RES, CHIP	1K (3216)	R621	1-216-025-00	RES, CHIP	100 (2012)
R516	1-216-198-00	RES, CHIP	1K (3216)	R624	1-249-383-11	CARBON	1.5 5% 1/6W
R517	1-216-198-00	RES, CHIP	1K (3216)	R625	1-249-383-11	CARBON	1.5 5% 1/6W
R518	1-216-246-00	RES, CHIP	100K (3216)	R626	1-249-383-11	CARBON	1.5 5% 1/6W
R521	1-216-246-00	RES, CHIP	100K (3216)	R627	1-249-383-11	CARBON	1.5 5% 1/6W
R522	1-216-097-00	RES, CHIP	100K (2012)	R660	1-216-198-00	RES, CHIP	1K (3216) (5800R)
R523	1-216-097-00	RES, CHIP	100K (2012)	R661	1-216-129-00	METAL CHIP	2.2M 5% 1/10W (5800R)
R524	1-216-097-00	RES, CHIP	100K (2012)	R701	1-216-073-00	METAL CHIP	10K 5% 1/10W
R525	1-216-097-00	RES, CHIP	100K (2012)	R702	1-216-113-00	METAL CHIP	470K 5% 1/10W
R526	1-216-097-00	RES, CHIP	100K (2012)			< VARIABLE RESISTOR >	
R528	1-216-097-00	RES, CHIP	100K (2012)				
R531	1-216-246-00	RES, CHIP	100K (3216)	RV1	1-241-768-11	RES, ADJ, CARBON 220K	
R533	1-216-246-00	RES, CHIP	100K (3216) (5800R)			< SWITCH >	
R534	1-216-246-00	RES, CHIP	100K (3216) (5790R)	S601	1-692-431-21	SWITCH, TACTILE (RESET)	
R535	1-208-814-11	RES, CHIP	22K			< TUNER UNIT >	
R536	1-216-246-00	RES, CHIP	100K	TU1	1-693-373-11	TUNER UNIT (FM/AM TUNER UNIT)	
R537	1-216-097-00	RES, CHIP	100K (2012) (German)			< VIBRATOR >	
R538	1-216-246-00	RES, CHIP	100K (3216) (AEP, UK, South European)	X1	1-567-848-11	VIBRATOR, CRYSTAL (7.2MHz)	
R539	1-208-806-11	RES, CHIP	10K	X2	1-579-242-41	VIBRATOR, CRYSTAL (4.332MHz)	
R540	1-216-097-00	RES, CHIP	100K (2012)	X501	1-579-125-11	VIBRATOR, CERAMIC (8MHz)	
R544	1-216-049-11	RES, CHIP	1K (2012)	X502	1-567-098-41	VIBRATOR, CRYSTAL (32.768kHz)	
R545	1-216-097-00	RES, CHIP	100K (2012)	*****			
R546	1-216-097-00	RES, CHIP	100K (2012)	* A-3309-740-A	POWER BOARD, COMPLETE		
R548	1-216-222-00	RES, CHIP	10K (3216)	*****			
R549	1-216-222-00	RES, CHIP	10K (3216)	(Included in MAIN BOARD, COMPLETE)			
R551	1-249-429-11	CARBON	10K 5% 1/4W			< CAPACITOR >	
R550	1-216-073-00	METAL CHIP	10K 5% 1/10W (5800R)	C801	1-126-157-11	ELECT	10uF 20% 16V
R562	1-216-097-00	RES, CHIP	100K (2012)	C802	1-126-157-11	ELECT	10uF 20% 16V
R570	1-216-097-00	RES, CHIP	100K (2012)	C803	1-126-157-11	ELECT	10uF 20% 16V
R571	1-216-097-00	RES, CHIP	100K (2012)	C804	1-124-589-11	ELECT	47uF 20% 16V
R572	1-216-246-00	RES, CHIP	100K (3216)	C805	1-136-165-00	FILM	0.1uF 5% 50V
R573	1-216-097-00	RES, CHIP	100K (2012)	C806	1-164-506-11	CERAMIC CHIP	4.7uF 16V
R574	1-216-097-00	RES, CHIP	100K (2012)	C811	1-163-009-11	CERAMIC CHIP	0.001uF 10% 50V
R582	1-216-198-00	RES, CHIP	1K (3216)				
R583	1-216-166-00	RES, CHIP	47 (3216)				
R584	1-216-238-00	RES, CHIP	47K (3216)				
R585	1-216-097-00	RES, CHIP	100K (2012)				

POWER

Ref. No.	Part No.	Description	Remark
C812	1-163-009-11	CERAMIC CHIP 0.001uF 10%	50V
C821	1-163-009-11	CERAMIC CHIP 0.001uF 10%	50V
C822	1-163-009-11	CERAMIC CHIP 0.001uF 10%	50V
< CONNECTOR >			
CN801	1-778-985-11	PIN, CONNECTOR (ISO)	
CN802	1-778-983-11	PIN, CONNECTOR (PC BOARD) 13P	
CN803	1-778-983-11	PIN, CONNECTOR (PC BOARD) 13P	
< DIODE >			
D801	8-719-049-38	DIODE 1N5404TU	
D813	8-719-970-02	DIODE 1SR139-400	
D814	8-719-970-02	DIODE 1SR139-400	
D815	8-719-970-02	DIODE 1SR139-400	
D816	8-719-970-02	DIODE 1SR139-400	
D823	8-719-970-02	DIODE 1SR139-400	
D824	8-719-970-02	DIODE 1SR139-400	
D825	8-719-970-02	DIODE 1SR139-400	
D826	8-719-970-02	DIODE 1SR139-400	
< IC >			
IC801	8-759-490-48	IC HA13158	
< SHORT CHIP >			
JC801	1-216-296-00	SHORT (CHIP) 0	
< COIL >			
L801	1-416-046-11	COIL, CHOKE 400uH	
< RESISTOR >			
R801	1-216-198-00	RES, CHIP 1K (3216)	
R802	1-216-198-00	RES, CHIP 1K (3216)	
R803	1-216-049-11	RES, CHIP 1K (2012)	
R804	1-216-049-11	RES, CHIP 1K (2012)	
R811	1-216-296-00	SHORT (CHIP) 0	
R812	1-216-296-00	SHORT (CHIP) 0	
R813	1-216-296-00	SHORT (CHIP) 0	
R814	1-216-296-00	SHORT (CHIP) 0	
R821	1-216-296-00	SHORT (CHIP) 0	
R822	1-216-296-00	SHORT (CHIP) 0	
R823	1-216-296-00	SHORT (CHIP) 0	
R824	1-216-296-00	SHORT (CHIP) 0	
< SWITCH >			
S801	1-571-478-11	SWITCH, SLIDE (POWER SELECT)	

MISCELLANEOUS *****			
9	1-777-989-31	CORD (WITH CONNECTOR) (ATT) (5800R)	
16	1-782-092-11	CORD (WITH CONNECTOR) (ISO-P) (POWER)	
17	1-782-093-11	CORD (WITH CONNECTOR) (ISO-S)	
(SPEAKER)			
F801	1-532-877-11	FUSE (BLADE TYPE) (AUTO FUSE) (10A)	
HP901	1-500-196-21	HEAD, MAGNETIC (PLAYBACK)	
M901	A-3291-665-A	MOTOR ASSY, MAIN (CAPSTAN/REEL)	

Ref. No.	Part No.	Description	Remark
***** HARDWARE LIST *****			
#1	7-621-772-10	SCREW +B 2X4	
#2	7-685-793-09	SCREW +PTT 2.6X8 (S)	
#3	7-685-792-09	SCREW +PTT 2.6X6 (S)	
#5	7-685-106-19	SCREW +P 2X10 TYPE2 NON-SLIT	
#6	7-624-104-04	STOP RING 2.0, TYPE-E	
#7	7-627-553-17	PRECISION SCREW +P 2X2 TYPE 3	

ACCESSORIES & PACKING MATERIALS *****			
1-473-067-71	REMOTE COMMANDER (RM-X4S)	(5800R: AEP, UK, South European)	
3-861-508-11	MANUAL, INSTRUCTION (ENGLISH, SPANISH, SWEDISH, PORTUGUESE)	(5800R: AEP, UK)	
3-861-508-21	MANUAL, INSTRUCTION (FRENCH, GERMAN, DUTCH, ITALIAN)	(5800R: AEP)	
3-861-508-31	MANUAL, INSTRUCTION (CZECH, GREEK, POLISH, TURKISH, ENGLISH)	(5800R: South European)	
3-861-508-41	MANUAL, INSTRUCTION (GERMAN)	(5800R: German)	
3-861-509-11	MANUAL, INSTRUCTION, INSTALL (ENGLISH, SPANISH, SWEDISH, PORTUGUESE)	(5800R: AEP, UK)	
3-861-509-21	MANUAL, INSTRUCTION, INSTALL (FRENCH, GERMAN, DUTCH, ITALIAN)	(5800R: AEP, German)	
3-861-509-31	MANUAL, INSTRUCTION, INSTALL (CZECH, GREEK, POLISH, TURKISH, ENGLISH)	(5800R: South European)	
3-861-512-11	MANUAL, INSTRUCTION (ENGLISH, SPANISH, SWEDISH, PORTUGUESE)	(5790R: AEP, UK)	
3-861-512-21	MANUAL, INSTRUCTION (FRENCH, GERMAN, DUTCH, ITALIAN)	(5790R: AEP)	
3-861-512-41	MANUAL, INSTRUCTION (GERMAN)	(5790R: German)	
3-861-513-11	MANUAL, INSTRUCTION, INSTALL (ENGLISH, SPANISH, SWEDISH, PORTUGUESE)	(5790R: AEP, UK)	
3-861-513-21	MANUAL, INSTRUCTION, INSTALL (FRENCH, GERMAN, DUTCH, ITALIAN)	(5790R: AEP, German)	
3-861-513-31	MANUAL, INSTRUCTION, INSTALL (CZECH, GREEK, POLISH, TURKISH, ENGLISH)	(5800R: South European)	
3-861-973-11	MANUAL, INSTRUCTION, INSTALL (for RM-X4S) (ENGLISH, FRENCH, GERMAN, SPANISH, DUTCH, SWEDISH, ITALIAN, PORTUGUESE, POLISH, CZECH, GREEK, TURKISH))	(5800R: AEP, UK, South European)	
3-921-278-01	LABEL (DSPL) (for RM-X4S)	(5800R: AEP, UK, South European)	
X-3373-412-1	CASE (PANEL) ASSY (for FRONT PANEL)		

Ref. No.	Part No.	Description	Remark
----------	----------	-------------	--------

PARTS FOR INSTALLATION AND CONNECTIONS

501	3-916-161-31	FRAME ASSY	
502	X-3370-077-1	SCREW ASSY (AE. KEY), FITTING	
503	1-777-989-31	CORD (WITH CONNECTOR) (ATT) (5800R)	
504	1-782-093-11	CORD (WITH CONNECTOR) (ISO-S)	(SPEAKER)
505	1-782-092-11	CORD (WITH CONNECTOR) (ISO-P) (POWER)	
506	X-3373-432-1	BRACKET ASSY (for RM-X4S)	(5800R: AEP, UK, South European)
507	1-465-459-21	ADAPTER, ANTENNA	

