

SECTION 3 TRANSCEIVER PROGRAMMING

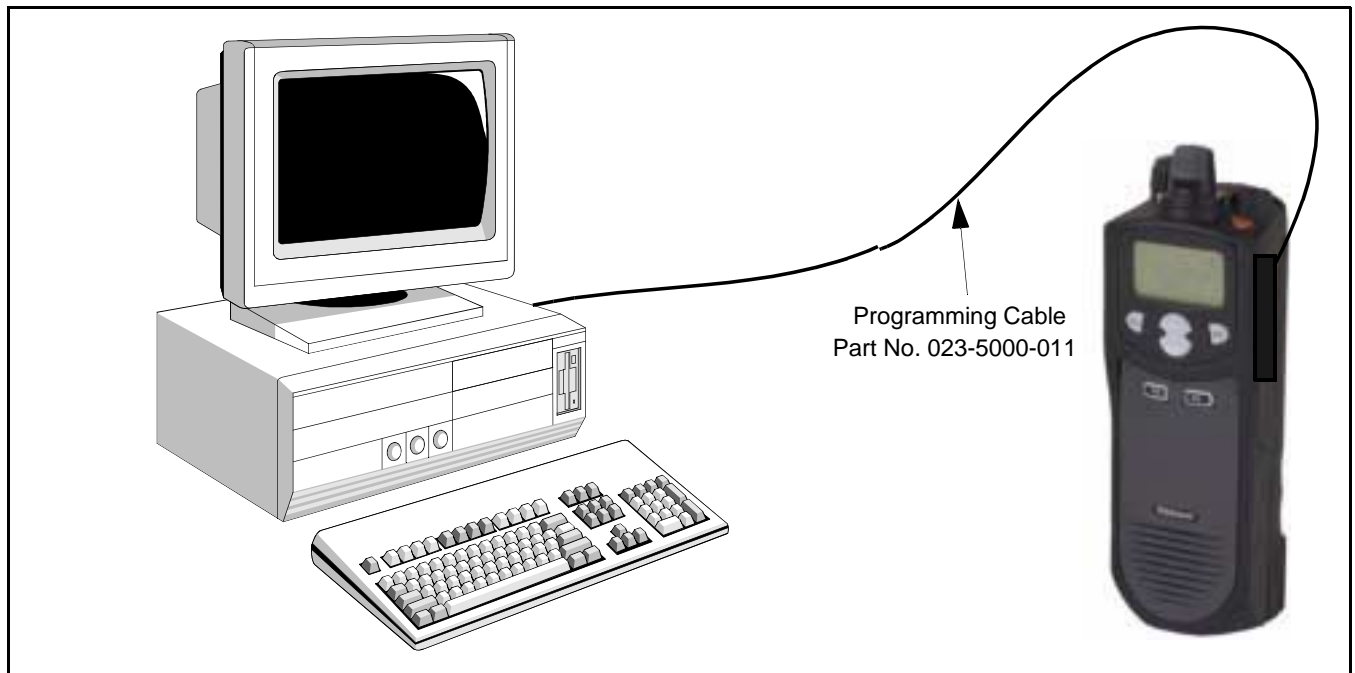


Figure 3-1 Programming Setup

3.1 GENERAL

3.1.1 PROGRAMMING SETUP

The following items are required to program the transceiver. The part numbers of this equipment are shown in Table 1-1 in Section 1. The programming set-up is shown above.

- IBM® PC or compatible personal computer
- Programming Cable, Part No. 023-5000-011
- PCTrunk programming software, Part No. 023-9998-453

NOTE: The -011 cable, -453 software, and a PCTrunk manual are included in the 5005 Series Programming Kit, Part No. 250-5000-003.

3.1.2 COMPUTER DESCRIPTION

The computer used to run this program should meet the following minimum requirements:

- Windows® 3.1 or 95/98 (Windows NT/2000 is supported only by PCTrunk Version 5.10.0 or later).

- Intel® 486 processor or equivalent
- At least 4 MB of RAM
- A hard disk drive with at least 5 MB of free space
- A CD-ROM drive
- An available serial port

NOTE: With the descriptions which follow, it is assumed that you have a basic understanding of how to use your Windows-based operating system. If you are not familiar with some of the Windows functions described, refer to your Help Screens and manuals included with your Windows software.

3.1.3 PCTRUNK SOFTWARE INSTALLATION

The PCTrunk software is supplied on a CD-ROM. Install this software as follows:

1. Make sure that there are no other Windows applications open during this installation procedure. Also, make sure that the computer meets the minimum requirements listed in the preceding section.
2. Insert the PCTrunk CD-ROM in the CD drive of your computer.

3. **Windows 3.1** - In the Program Manager, double click the SETUP.EXE file on the CD-ROM or click this file name and select File > Run.

Windows 95/98/NT/2000 - Select Start > Settings > Control Panel and double click "Add/Remove Programs". Then click Install and Next. When SETUP.EXE is automatically located on the CD-ROM, click Next, select the location for the start-up icon, and enter the name you want to call the program.

4. Follow the instructions displayed by the setup program. The default directory for the program is \Program Files\PCTrunk. If you wish to use some other directory, click Browse and select it or type the name.

3.1.4 CONNECTING COMPUTER TO TRANSCEIVER

Connect Programming Cable, Part No. 023-5000-011, from the computer serial port to the accessory jack on the side of the transceiver. Since, this cable contains interface circuitry, an RPI is not required, and it has a female DB9 connector for connecting to the computer. This cable is available as part of the programming kit or separately (see Section 3.1.1).

3.1.5 STARTING AND EXITING

To Start PCTrunk From Windows 3.1

In the Program Manager, open the PCTrunk group window. Then double-click the PCTrunk icon.

To Start PCTrunk From Windows 95/98/NT

Click the Start button, select the PCTrunk group, and then click PCTrunk 5.xx.x.

To Exit PCTrunk:

Select File > Exit or press ALT + F4.

3.1.6 PROGRAMMING FILE TYPES

Programming data is stored in two disk files that can be saved, read, copied, and deleted (see Section

3.3.1). The two types that are stored for each programming session have the same name but different extensions as follows:

Programming File (.DAT) - Contains all programming information except what is in the following .460 file.

Scrambling File (.460) - Contains all information relating to the Transcript 460 scrambler. This file is saved only if this scrambling is used.

3.1.7 HELP FILES

To display help information on the current screen, click Help in the menu bar or press F1.

3.1.8 SCREEN GROUPS

General

The following screen groups are displayed:

Radio-Wide - These screens program parameters that are the same for all systems and channels. Separate screens are displayed for General, Conventional, SMARTNET/SmartZone, and Portable Options parameters. Refer to Section 3.4 for more information on these screens.

System - These screens program the parameters that are unique to the displayed Conventional, SMARTNET, or SmartZone system. The system to be edited is selected as described in Section 3.1.11.

Channel - This screen programs unique channel parameters and assigns channels to each zone. The specific parameters indicated in this screen are determined by the type of system selected in the "Type" box (Conventional Analog, Conventional Project 25, SMARTNET).

3.1.9 DISPLAYING SCREENS

The latest release of PCTrunk uses a different method of displaying screens. Proceed as follows to select which screens are displayed with the early and revised versions:

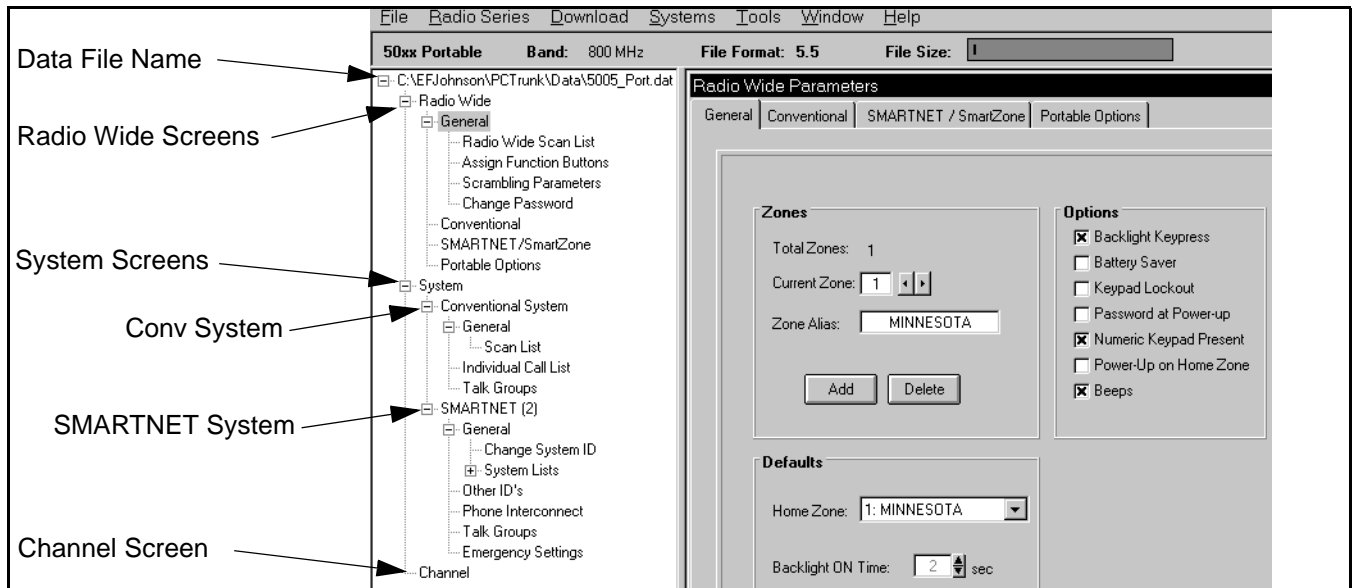


Figure 3-2 Main Screen (Later PCTrunk Versions)

Revised PC Trunk (Version 5.10.0 or Later)

Revised versions of PCTrunk use a pane on the left side of the screen (see Figure 3-2) to display the screen structure similar to the directory structure of a hard drive. Click the “+” to expand the branch and “-” to collapse it. Then to display a screen, simply click its name. The current screen may have to be closed in order to select another one.

Early PCTrunk (Versions Prior to 5.10.0)

With early versions of PCTrunk, the screens are displayed in cascade style or they can be minimized like any Windows screen. To cascade the active screens, select Window > Cascade from the menu bar.

To pop a screen to the front, click the applicable button shown below. For example, if the Channel screen is displayed and you want to quickly pop the Radio-Wide screen to the front, click the Radio-Wide button. These buttons can be displayed or hidden by clicking Window > Toolbar. A window can also be displayed by selecting it in the Window Menu.



Screen Pop-Up Buttons (Early PC Trunk Versions)

3.1.10 FILE SIZE INDICATOR

The maximum number of channels that can be programmed may be limited by the available memory space in the radio (see Section 1.2.5). A running indication of the amount of memory used by the current data if it was downloaded to the radio is displayed by a bar graph as shown in Figure 3-2 and the preceding illustration. When the bar reaches the right end, available memory is full and some channels may need to be deleted to program more information.

3.1.11 CREATING AND DISPLAYING SYSTEMS

To create a new SMARTNET or SmartZone system, select Systems > Add Systems and then the desired system type from the menu bar (see Section 3.3.7). This menu is also used to delete a system.

NOTE: Only one conventional system can be set up, and it is automatically created when a new file is created as described in Section 3.2.1. Therefore, there is no option to add a conventional system.

Only one system can be displayed at a time, so select the system to be edited as described in the preceding section. Systems are indicated by number and type. Channels or talk groups for all programmed systems are set up in the Channels screen. Therefore, any system can be selected when programming channel information.

3.2 PROGRAMMING PROCEDURE

The following is a general procedure you can use to program a transceiver.

3.2.1 PRELIMINARY

1. Select a programming file as follows:

Create a New File - To start with a new file containing default parameters, select File > New and then the frequency band of the radio (VHF/ UHF/ 800 MHz).

Open An Existing File - To open an existing file stored on disk, select File > Open and then the file to be opened.

Upload a File From a Radio - To transfer a file from a radio to the computer to edit or use as a basis to program another radio, connect the radio to the computer as described in Section 3.1.4. Then turn the radio on and select Upload from the menu bar. Only the .DAT programming file is uploaded. The .460 scrambling file cannot be uploaded for security reasons.

2. Before or after creating the programming file, be sure the correct type (portable or mobile) is selected by the Radio Type menu (see Section 3.3.2).
3. A conventional system is automatically set up when a new programming file is created. If SMARTNET or SmartZone systems are also to be programmed, set them up as described in Section 3.1.11.

3.2.2 PROGRAMMING RADIO WIDE PARAMETERS

1. To display a Radio Wide screen, click the screen name under Radio Wide in the left pane or click the Radio Wide button or select Window > Radio Wide (see Section 3.1.9).
2. Program the applicable information in these screens as described in Section 3.4.

3.2.3 PROGRAMMING CONVENTIONAL SYSTEMS

NOTE: If no conventional channels are to be programmed, skip this section.

1. Make sure the conventional system is displayed by clicking it in the left pane or selecting Window > Conventional in the menu bar.
2. If required, display the Conventional System screen by clicking the System button or selecting Window > Conv System (see Section 3.1.9).
3. Program the conventional systems and channels as described in Section 3.5.

3.2.4 PROGRAMMING SMARTNET AND SMARTZONE SYSTEMS

NOTE: If no SMARTNET or SmartZone systems are to be programmed, skip this section.

1. Make sure the desired SMARTNET or SmartZone system is displayed by clicking it in the left pane or selecting Window > SMARTNET or SmartZone in the menu bar.
2. If required, display the screens for that system by clicking the System button or selecting Window > Desired System (see Section 3.1.9).
3. Program the SMARTNET/SmartZone system and talk groups as described in Section 3.6.
4. To program additional SMARTNET/SmartZone systems, add a new system as described in Section 3.1.11 and repeat Section 3.6.


3.2.5 PROGRAMMING RADIO (DOWNLOADING FILE)

When all the required programming information has been entered in the various programming screens, the information can be programmed (downloaded) into the radio. When downloading a file, be sure that all connections between the computer and radio are secure, the radio is turned on, and the proper serial port is selected (see Section 3.3.1). Then proceed as follows:

1. Select Download from the menu bar and then the file type to be transferred (programming or scrambling).
 - If the power-up password is enabled, the programming password must be entered to download or upload a file (see Section 3.7).
 - If a file is already loaded, the current file is transferred to the radio.
 - If no file is currently loaded, a dialog box appears to select the desired file.
2. Repeat for the other file type (if required).


NOTE: The information which follows (Sections 3.3-3.6) provides detailed descriptions of the parameters that are displayed in the various PCTrunk screens.

3.3 MENU COMMANDS



Menu Bar

3.3.1 FILE MENU

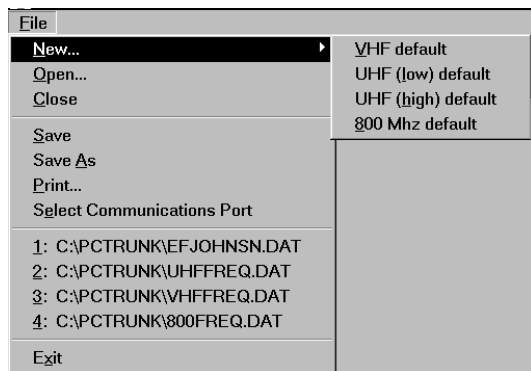

New - Creates a programming file with default parameters for the selected frequency range.

Open - Opens a programming file that was previously saved to disk. If a modified file is currently open, you are asked if that file should be saved before the new file is opened.

Close - Closes the current file. If the file has been modified and the changes have not been saved, you are asked if the changes should be saved before closing.

Save - Saves the current file to disk using the current file name.

Save As - Same as “Save” except you are prompted to enter a new file name if desired.

Print - Prints the information in the current file.

Select Communications Port - Displays the Communications Port dialog box which is used to select the serial port that is used to connect the transceiver to the computer (see Section 3.1.4).


Exit - Closes the PCTrunk program. If the current file has been modified and the changes have not been saved, you are asked if the changes should be saved before closing.

3.3.2 RADIO SERIES MENU



The Radio Series menu shown above selects the radio being programmed. Select “50xx Portable”.

3.3.3 DOWNLOAD MENU

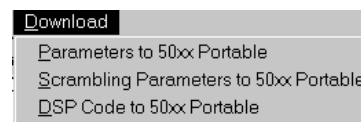


NOTE: If the power-up password is enabled as described in Section 3.4.2, the programming password must be entered to download a file. Refer to Section 3.7 for more information on passwords.

Parameters to 50xx Series Portable - Transfers the current programming file to the radio connected to the computer.

Scrambling Parameters to 50xx Series Portable - Transfers the selected scrambling parameters file to the radio connected to the computer.

DSP Code to 50xx Series Portable - Used along with the proper data file to update the radio operating software.

3.3.4 UPLOAD MENU



The Upload Menu is displayed only in the opening screen before a programming file is created. The following options are displayed:

Parameters from 50xx Portable - Transfers the programming data from a radio to the PCTrunk program. This data can then be viewed, edited, or saved to a disk file as desired. Scrambling parameters cannot be transferred out of a radio for security purposes.


Version Information from 50xx Portable - Displays the software version number and serial number of the connected radio.

3.3.5 SYSTEMS MENU




The Systems Menu is used to create new SMARTNET and SmartZone systems. It is also used to delete current systems. Conventional systems cannot be added because only one can be used and it is automatically created (see Section 3.1.11).

3.3.6 TOOLS MENU




The Tools menu is used to convert files in Format 5.4 to Format 5.5 when applicable. For example, if a file is in Format 5.4 and new radios are purchased which use Format 5.5, it can be converted to the new format using this function.

3.3.7 WINDOW MENU

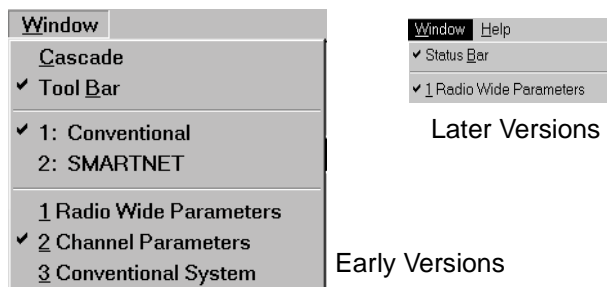

With early versions of PCTrunk, the Window Menu can be used to select the system to be edited and also to pop one of the screens to the front. With later versions, it is used only to turn the status bar on and off (see Section 3.1.9).

3.3.8 HELP MENU

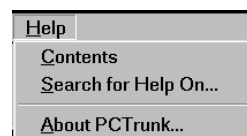

Contents - Displays the help system table of contents.

Search For Help On - Displays the search dialog box that allows searching for a help topic by keyword.

About PCTrunk - Displays the software version number of PCTrunk and the address of the E.F. Johnson Company.

3.4 RADIO-WIDE PARAMETER SCREENS

3.4.1 INTRODUCTION


The radio-wide screens program the parameters that are the same for all systems, channels, and zones. Separate screens are used for General, Conventional, SMARTNET/SmartZone, and Portable Options parameters. Refer to the information which follows.

3.4.2 RADIO-WIDE GENERAL SCREEN

Band

Displays the operating band selected by the File > New menu (see Section 3.3.1). The selected operating band must match that of the radio being programmed.

This parameter is displayed in the status bar with later PCTrunk versions (see Figure 3-2).

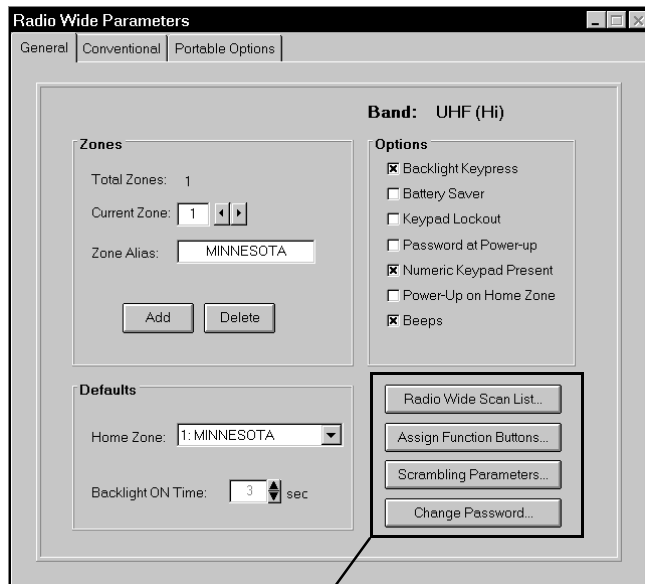

These screens selected in left pane w/version 5.10.0 or later.

Radio-Wide General Screen

Zones

Total Zones - The total number of zones currently set up. The maximum number allowed is 16. Zones are added by clicking the Add button (see following).

Current Zone - Indicates the currently selected zone. To select another zone, click the up/down arrows.

Zone Alias - Edits the unique alpha identification for the displayed zone. Up to 10 characters can be entered. The zone alias is briefly displayed whenever a new zone is selected. Refer to Section 1.2.5 for more information on zones.

Add (Zones) Button - Adds another zone.

Delete (Zones) Button - Deletes the last zone added.

Defaults

Home Zone - Selects the zone that is selected by the Home Zone option switch if programmed.

Backlight On Time - Programs the length of time in

seconds that the backlight stays on after it is enabled by pressing a key (see following) or by the Backlight option switch.

Options

Backlight Keypress - If checked, the backlight turns on for the Backlight On Time whenever a key is pressed.

Battery Saver - If checked, the radio goes into a low current operating mode during periods of low activity to conserve battery power.


Keypad Lockout - If checked, the keypad is totally disabled and cannot be re-enabled by the user. All functions must then be assigned to keys on the side.

Password at Power-Up - If checked, the Password On Power-Up feature is enabled. Then each time power is turned on, the power-up password must be entered to operate the radio (see Section 3.7).

Numeric Keypad Present - This is checked if the transceiver is a 16-key (DTMF) model.

Power Up On Home Zone - If checked, the home zone is always selected at power-up.

Beeps - If checked, enables all tones. Otherwise, no tones sound (see Section 2.4.11).

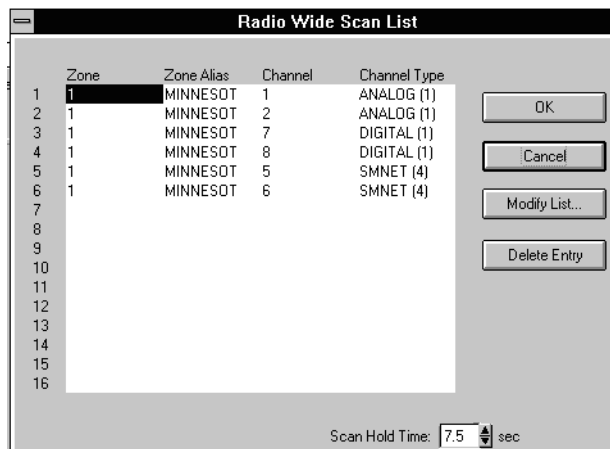

Radio-Wide Scan List Screen


NOTE: With PCTrunk, Version 5.10.0 or later, the following screens are selected by clicking their name in the left pane, not by clicking the button in the General screen.

Radio Wide Scan List Screen

NOTE: The radio-wide scan list cannot be programmed until all channels to be included have been set up as described in the Conventional and SMARTNET/SmartZone sections (3.5 and 3.6, respectively).

Clicking the Radio Wide Scan List name in the left pane or that button in the General screen displays the preceding screen which programs the radio-wide scan list described in Section 2.5.6. The buttons and other parameters in this screen are as follows:

Modify List... Button - Displays the following screen that selects the channels in each Zone and System that are in this scan list. Select each Zone and then the channels to be included from that zone.

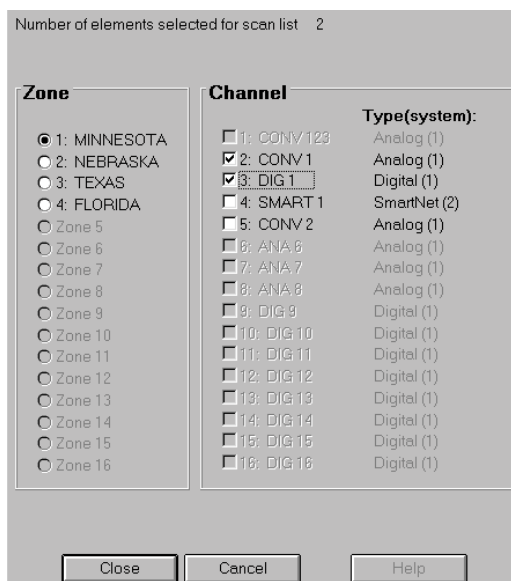


Delete Entry - Deletes the selected channel from the scan list.

Scan Hold Time - This programs the delay that occurs before radio-wide scanning resumes after a

message is no longer being received. Times of 0 - 7.5 seconds can be programmed (see Section 2.5.4).

Assign Function Buttons Screen

Clicking Assign Functions Buttons in left pane or that button in the General screen displays the option switches. The option switches can be programmed with a different set of functions for each operating mode (conventional, SMARTNET/SmartZone). For example, selecting a conventional channel enables the conventional functions and selecting a SMARTNET channel selects the SMARTNET functions. The functions that can be programmed for each mode are listed in Section 2.2.

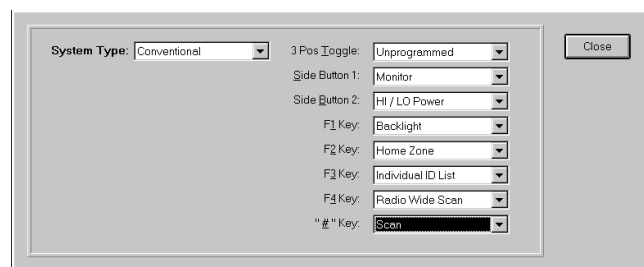


Assign Function Buttons Screen

Program the option switches as follows:

1. In the System Type pull-down menu, select the mode to be programmed (either conventional or SMARTNET/SmartZone).
2. To program a switch, click the arrow to display the pull-down menu and then select the desired function from that menu.
3. Repeat for all switches and modes to be programmed and then exit this screen by clicking the Close button.

Scrambling Parameters Screen

If 460 Scrambling is used (see Section 2.6.17), click the Scrambling Parameters button in the General screen to display the following screen. This screen programs scrambling and other signaling options, and the Codes screen modifies the list of scrambling codes which are stored in the radio. The buttons and other parameters in these screens operate as follows:

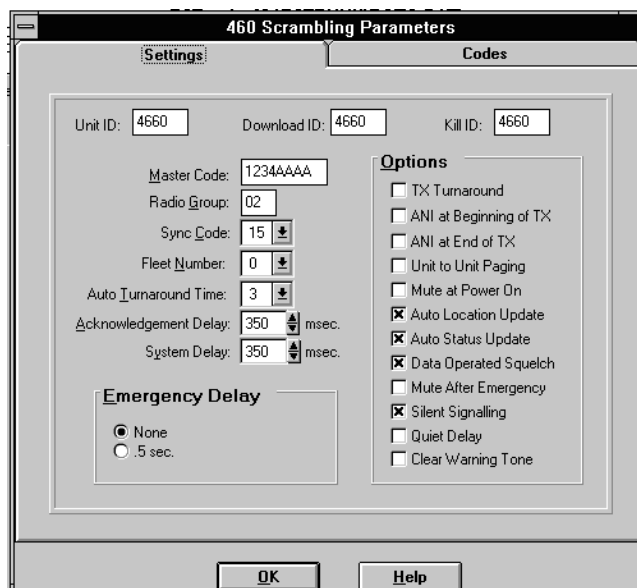

460 Scrambler Settings Screen

Settings Screen

Unit ID - Uniquely identifies the radio for Flashcall signaling.

Download ID - This ID must be received by the radio for it to accept a download of its scrambling parameters.

Kill ID - This ID must be received by the radio for the kill operation to occur.

Master Code - Displays the master code used by the scrambler. Two scramblers must be programmed with the same master code to communicate. The field is an 8-digit hexadecimal number (0-9, A-F).

Radio Group - Sets the group number of the scrambler from 00-99.

Sync Code - Scrambling sync code from 0-15. Two scramblers must have the same sync code to communicate.

Fleet Number - Number from 0-15 used when multiple fleets of scramblers are used.

Auto Turnaround Time - Time from 0-7 seconds after receiving a coded message that the scrambler ignores the clear code switch setting and forces the coded mode.

Acknowledgment Delay - Delay time from 50-1550 ms before the scrambler responds to information received from a controller.

System Delay - Delay time from 50-1550 ms between when the PTT switch is pressed and the scrambler transmits data over the air.

Emergency Delay - The amount of time the scrambler waits to send the emergency signal after the emergency switch is pressed. No delay or a 0.5 sec delay can be selected.

Tx Turnaround - If selected, inserts a delay between when scrambled information is received and then transmitted. This delay allows scramblers in the system to prepare for the new data.

ANI at Beginning of Tx - If selected, sends a Flashcall ANI at the beginning of every clear mode transmission.

ANI at End of Tx - If selected, sends a Flashcall ANI at the end of every clear mode transmission.

Unit-to-Unit Paging - If selected, enables a single unit page.

Mute at Power On - If selected, mutes the audio when powered up until the radio transmits, receives a Flashcall selective call, or OTAR reprogramming of scrambling parameters.

Auto Location Update - If selected, causes the scrambler to automatically send the user location every time it changes.

Auto Status Update - If selected, causes the scrambler to automatically send the user status each time it changes.

Data Operated Squelch - If selected, causes the scrambler to mute audio when incoming Flashcall data is received.


Mute After Emergency - If selected, causes the scrambler to mute the audio after sending an emergency signal until the unit transmits.

Silent Signaling - If selected, causes the scrambler to send a tone ahead of data packets that forces the receiving unit to mute its audio before the data burst is heard.

Quiet Delay - If selected, adds an extra 100 ms lead-in delay at the beginning of the silent signaling tone (if enabled).

Clear Warning Tone - If selected, sends a tone burst at 5-second intervals during clear mode transmissions. This alerts the listener that the conversation is not secure.

Codes Screen

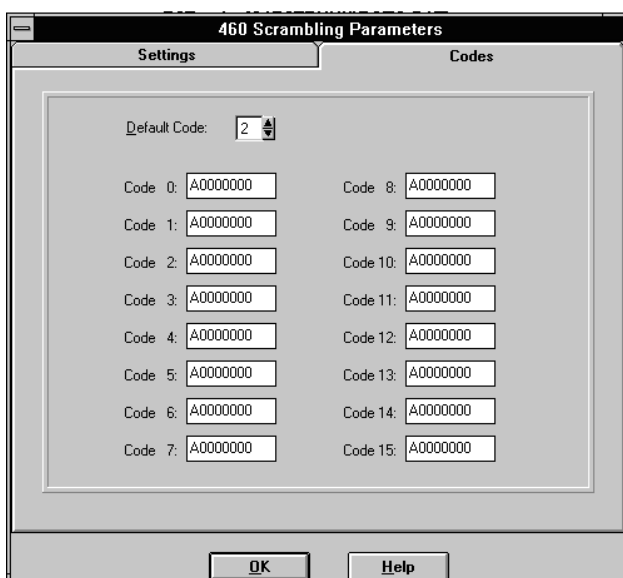

460 Scrambler Codes Screen

Default Code - Code space to use in the radio.

Codes 0 - 15 - Edit the box to enter a code. All codes must begin with A0. The last six digits can be programmed for any value using hex digits 0-9, A-F.


Change Password Screen

Displays the following screen which is used to change the Power-Up and Programming passwords. The default passwords are eight zeros (00000000). Refer to Section 3.7 for more password information. The power-up password function is utilized if “Password at Power Up” is checked on the Radio Wide General screen (see Section 3.4.2).



Change Password Screen

3.4.3 RADIO-WIDE CONVENTIONAL SCREEN

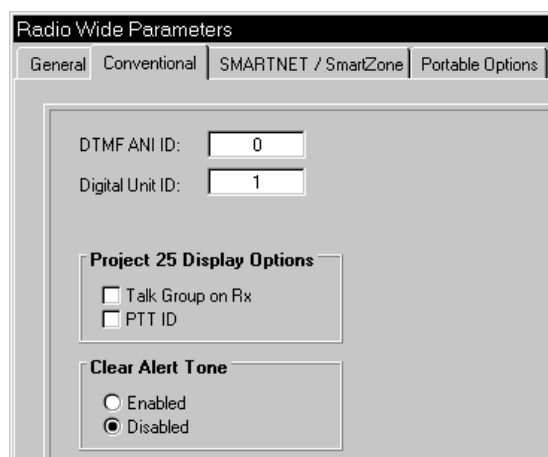

The radio-wide conventional screen is shown above, and it programs the following parameters:

DTMF PTT ID - The PTT ID is used on a channel programmed for pre- or post-transmit ANI. This ID consists of eight digits from 0-9.

Digital Unit ID - When operating on a Project 25 (digital) channel, this number identifies the radio. Each radio must have a different ID, and it must be between 1 and 16777216.

Project 25 Display Options


These functions select what is displayed when individual calls are received. If neither function is selected, the selected talk group alias or channel number is displayed (see “Individual Calls” in Section 2.6.16). With group calls, the talk group or channel number is always displayed.

Talk Group on Rx - The alias of the talk group on which the call is being received is displayed.

PTT ID - The ID of the mobile placing the call is displayed.

Clear Alert Tone - If it is enabled, a short beep sounds to indicate the clear (non encrypted) mode is selected. This tone sounds with SecureNet and digital OFB encryption only (not with 460 encryption).

3.4.4 RADIO-WIDE SMARTNET/SMARTZONE SCREEN

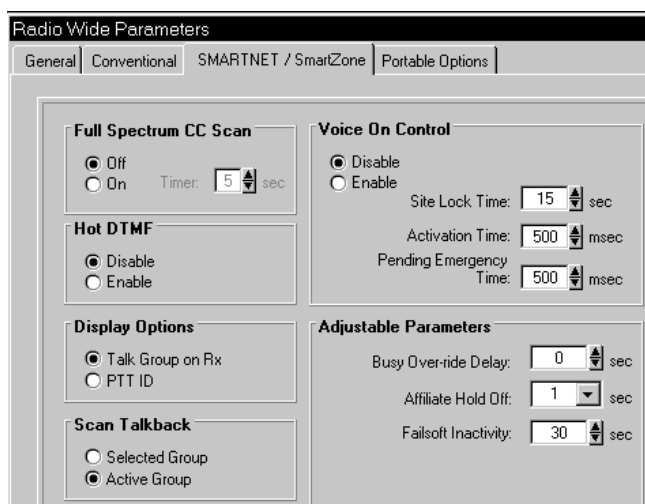

The radio-wide SMARTNET/SmartZone screen is shown above, and it is used to program these parameters:

Full Spectrum CC Scan

In a SmartZone system, if all potential control channel frequencies have been searched, the radio enters a channel-by-channel search across the full spectrum that the radio covers. The timer sets the time it performs this scan before it checks the expected frequencies again. After it checks these frequencies, it returns to full spectrum scanning. This cycle repeats until a control channel is found.

On-Off - Enables or disables full spectrum scan.

Timer - Sets the time that full spectrum scanning occurs as just described.

Hot DTMF

Enable/Disable - When enabled, allows the user to send DTMF tones while transmitting. When disabled, pressing numeric keys (0-9, *, #) while transmitting has no affect. This option is not functional with SecureNet operation.

Display Options

See description in Section 3.4.3.

Scan Talkback

When a message is received when scanning, this determines if the response always occurs on the selected talk group or the talk group of the call (when not the same).

Voice On Control

With SmartZone operation, some remote sites are designated Voice On Control sites. In these sites, if all available traffic channels are occupied, control channels become traffic channels when additional traffic channels are requested. The Voice On Control parameters determine how the radio reacts to various situations that may occur. For example, when a conversation is complete, the radio may look for a control channel that has become a traffic channel.

Enable/Disable - Determines if the voice on control parameters are active.

Site Lock Time - This is the amount of time a radio remains on the Voice On Control site before looking for another site.

Activation Time - This is the amount of time the radio waits when the control channel comes back from Voice On Control before it transmits any pending ISWs. This prevents all radios on a Voice On Control site from submitting ISWs at the same time.

Pending Emergency Time - This is the amount of time the radio waits to submit an Emergency ISW after the control channel returns from the Voice On Control mode.


Adjustable Parameters

Busy Override Delay - With SmartZone operation, this is the amount of time a user must press the PTT switch to override a SmartZone busy that occurs because some member of the talk group is present at a site where there are no traffic channels available.

Affiliate Hold Off - With SmartZone operation, this is the delay time that occurs after acquiring the control channel before it sends an affiliation ISW. This prevents all radios on the system from sending affiliation ISWs at the same time.

Failsoft Inactivity - Programs failsoft operation (see Section 2.7.11). If the radio remains inactive (no receive or transmit activity on channel) while operating in the failsoft mode for the programmed time, the radio momentarily leaves the failsoft mode and attempts to find a control channel. If “0” is programmed, the radio does not leave the failsoft mode.

3.4.5 RADIO-WIDE PORTABLE OPTIONS SCREEN

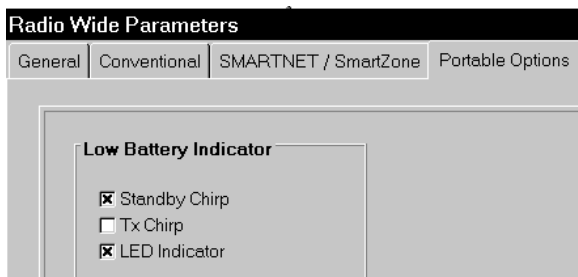

The radio-wide Portable Options screen is shown above, and it is used to program these parameters:

Standby Chirp - If this box is checked, a chirp sounds periodically in the standby mode while a low battery condition is being detected.

Tx Chirp - If this box is checked, a chirp sounds each time the PTT switch is pressed while a low battery condition is being detected.

LED Indicator - If this box is checked, the LED on the top panel indicates a low battery condition (green in standby, flashing red in transmit).

3.5 PROGRAMMING CONVENTIONAL SYSTEMS AND CHANNELS


3.5.1 INTRODUCTION

The following information describes how to program conventional channels (both analog and Project 25). Only one conventional system can be programmed, and it is automatically set up when the programming file is selected as described in Section 3.1.6. Up to 256 conventional channels can be programmed (if no SMARTNET/SmartZone systems are programmed). Refer to Section 1.2.5 for more information on systems and channels.

The following is the recommended procedure for programming conventional channels:

1. Program the radio-wide information as described in Section 3.4.
2. If other types of systems have been programmed, make sure the conventional system is selected in the left pane or by selecting Window > Conventional in the menu bar (see Section 3.1.11).
3. Program the conventional system information and then the channel information as follows (both analog and Project 25 digital channels).

3.5.2 CONVENTIONAL SYSTEM GENERAL SCREEN

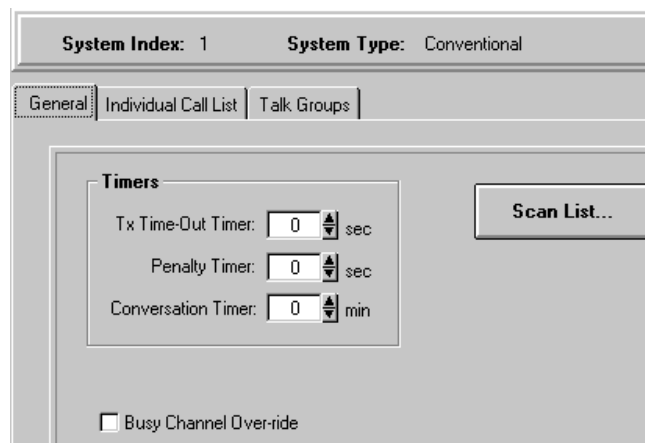

The conventional system General screen is shown above, and it programs the following parameters:

Timers

Tx Time-Out Timer - This timer limits the length of transmissions (Section 2.4.10). Times up to 3 minutes, 45 seconds in 15-second steps can be programmed.

Penalty Timer - This timer disables transmitting after the time-out timer expires (Section 2.6.7). Times up to 3 minutes, 45 seconds in 15-second steps can be programmed.


Conversation Timer - This timer limits the total length of a conversation (Section 2.6.8). Times up to 7.5 minutes in 0.5-minute steps can be programmed.

Busy Channel Override - Selects if the Busy Channel Lockout feature can be overridden by quickly releasing and then pressing the PTT switch (Section 2.6.5).

Scan List Screen


Clicking the Scan List in the left pane or that button in the General screen displays the following screen which is used to program the conventional scan lists described in Section 2.5.5.

NOTE: The conventional scan lists cannot be programmed until all the conventional channels are programmed. Therefore, first program the channels as described in Sections 3.5.5, 3.5.6, and 3.5.7.

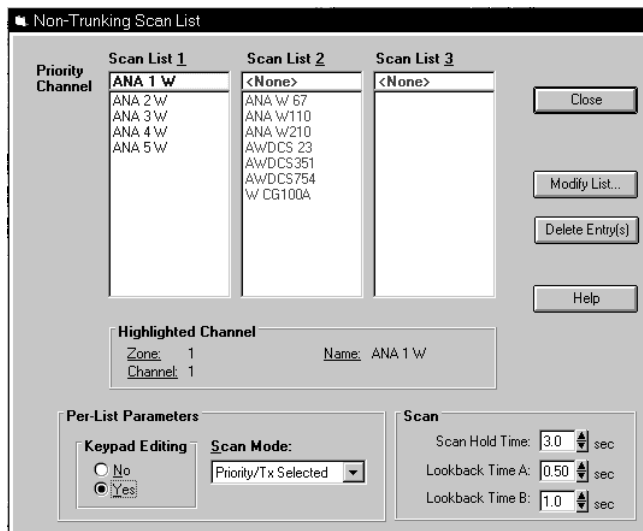

Conventional System Scan List Screen

To modify a list, click **Modify List...** and the screen which follows is displayed. Select the desired scan list in the box on the top and then select the zone and the channels from that zone to be included. Repeat for each zone. Do this for each list programmed. The **Delete Entry(s)** button deletes the selected channel(s) from the scan list.

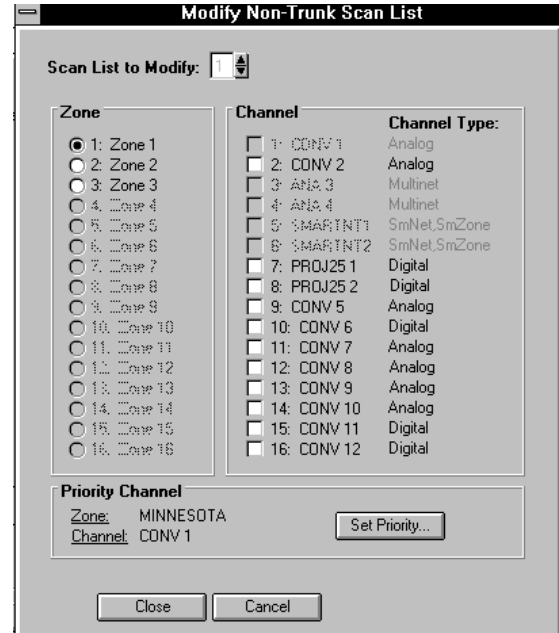

Conventional System Modify Scan List Screen

The following parameters are programmed in the preceding Conventional System Scan List Screen.

Keypad Editing

This selects if the user is allowed to edit the scan list. This requires the Scan Edit option switch as described in Section 2.6.12. User editing can be enabled or disabled on each scan list.

Scan Mode

This function selects the channel on which transmissions occur when the PTT switch is pressed while scanning. In addition, it selects if priority sampling is used and also the type of priority channel (see “Priority Channel” description which follows). The following modes are available:

No Priority - Priority sampling does not occur (all channels are scanned in sequence). The radio transmits on the selected channel.

Priority/Tx Priority - Priority sampling occurs and the priority channel is the one programmed in the selected scan list. The radio transmits on the priority channel.

Priority/Tx Selected - Priority sampling occurs and the priority channel is the one programmed in the selected scan list. The radio transmits on the selected channel.

Priority on Sel Chan - The priority channel is always the selected channel (even if the scan list is programmed with a priority channel). The radio transmits on the selected channel.

Talkback - No priority sampling occurs. The radio transmits on the channel of a call while scanning is halted. Then when scanning resumes, it transmits on the selected channel.

Scan Timers


Scan Hold Time - Sets the delay that occurs before scanning resumes after a signal is no longer received (see Section 2.5.4).

Lookback Time A - This time determines how often the priority channel is checked for activity. Times of 0.25-4.00 seconds in 0.25-second steps can be programmed.


Lookback Time B - This time determines how often the priority channel is checked once an incorrect Call Guard (CTCSS/DCS) or NAC code is detected. Since it takes much longer to detect an incorrect Call Guard signal than a carrier, this time should be relatively long to prevent the interruptions from making a message difficult to understand. Times of 0.5-8.0 seconds can be programmed in 0.5-second steps.

Priority Channel Selection

The Scan Mode parameter just described selects if priority channel sampling is enabled on the selected scan list. It also selects the type or priority channel (either fixed or selected) if applicable.


If the “Priority/Tx Priority” or “Priority/Tx Selected” mode is programmed, fixed priority sampling is selected. The priority channel must then be chosen for the scan list. To do this, click the  button in the Modify Scan List screen and then select the desired zone/channel. If any of the other modes is selected, the priority channel does not need to be chosen. Refer to Section 2.6.13 for more information on priority sampling.


3.5.3 CONVENTIONAL SYSTEM INDIVIDUAL CALL LIST SCREEN

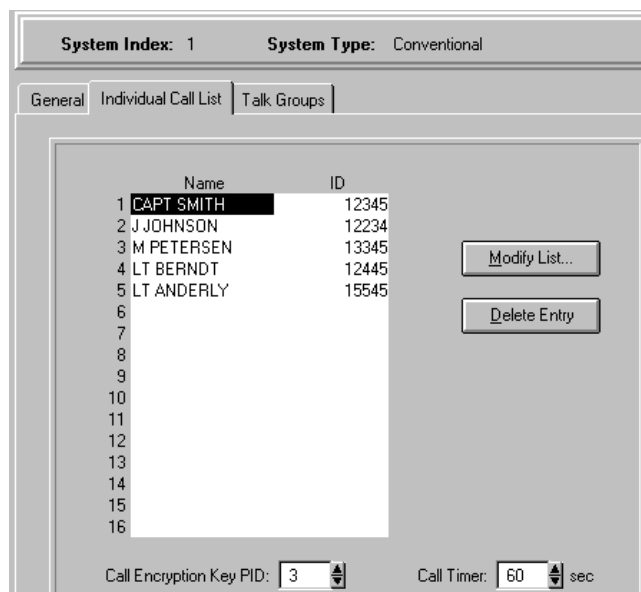

NOTE: This screen can be left unprogrammed if no conventional Project 25 digital channels are programmed or individual calling is not used.


Individual calls can be placed on Project 25 digital channels as described in Section 2.6.16. The IDs that can be called are programmed in the Individual Call List programmed by the Individual Call List screen. This screen is shown above, and the parameters it programs are as follows:


 **Modify List Button** - Clicking this button displays the screen that programs the alias (tag) and individual ID for each call. An alias can have up to 10 characters, and the individual IDs can be 1-16777216.

 **Delete Entry Button** - Clicking this button deletes the selected entry.

Call Encryption PID - Indicates which DES-OFB encryption key should be used for secure private calls.

Call Timer - Sets the maximum time that the radio remains in the individual call mode after an individual call is received. A response must be made before this timer expires.

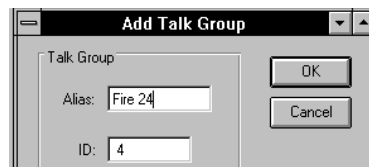


 - Deletes the selected talk group.

Strapping Mode - Selects if secure communication is not used, always selected, or is switch selectable on that talk group (see Section 2.6.17).


Secure Code - If secure communication is enabled, selects the secure code key used on that talk group.


3.5.4 CONVENTIONAL SYSTEM TALK GROUP SCREEN

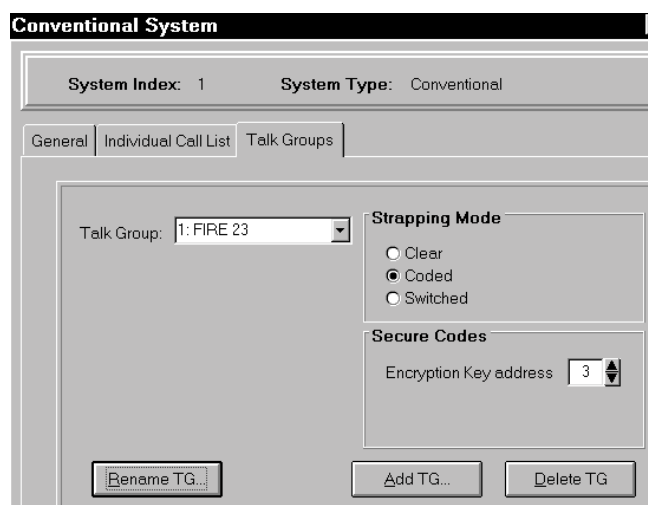

The conventional system Talk Group screen shown above is used to set up Project 25 talk groups (it is not used with analog channels). These talk groups are assigned to channels on the Channel screen (see Section 3.5.7). The parameters in this screen are as follows:

Talk Group - Displays the talk group to be edited. To select another, click the scroll button to the right of the box.

 - Displays the screen used to change the alias of the selected talk group.

 - Displays the following screen that is used to add a new Project 25 talk group. The alias and ID of the talk group are specified in this screen. Group IDs from 1-65535 can be programmed with Project 25 operation.

3.5.5 SETTING UP CONVENTIONAL CHANNELS

The conventional Channel screen shown in Figure 3-3 is displayed when a conventional analog channel is selected, and the screen shown in Figure 3-4 is displayed when a conventional Project 25 (digital) channel is selected. These screens program unique channel parameters and also assign channels to the selectable zones displayed by the transceiver.

The general procedure for setting up a conventional channel is as follows. Refer to the descriptions which follow this procedure for information on the parameters in the channel screens.

1. Make sure that the desired zone is selected in the Zone box.
2. Select the channel number in the Channels Index box which is to be programmed with the channel (this will be the number displayed when the channel is selected).
3. To assign a conventional channel, select “Conventional” as the channel type. Then select “Analog” if it is an analog channel or “Project 25” if it is a Project 25 channel.
4. Click the Modify button to display the screen which enables that channel and programs the alias (tag) and transmit and receive frequencies. Then program the other parameters in the main part of the screen. Refer to the next section or Section 3.5.7 for more information, whichever is applicable.

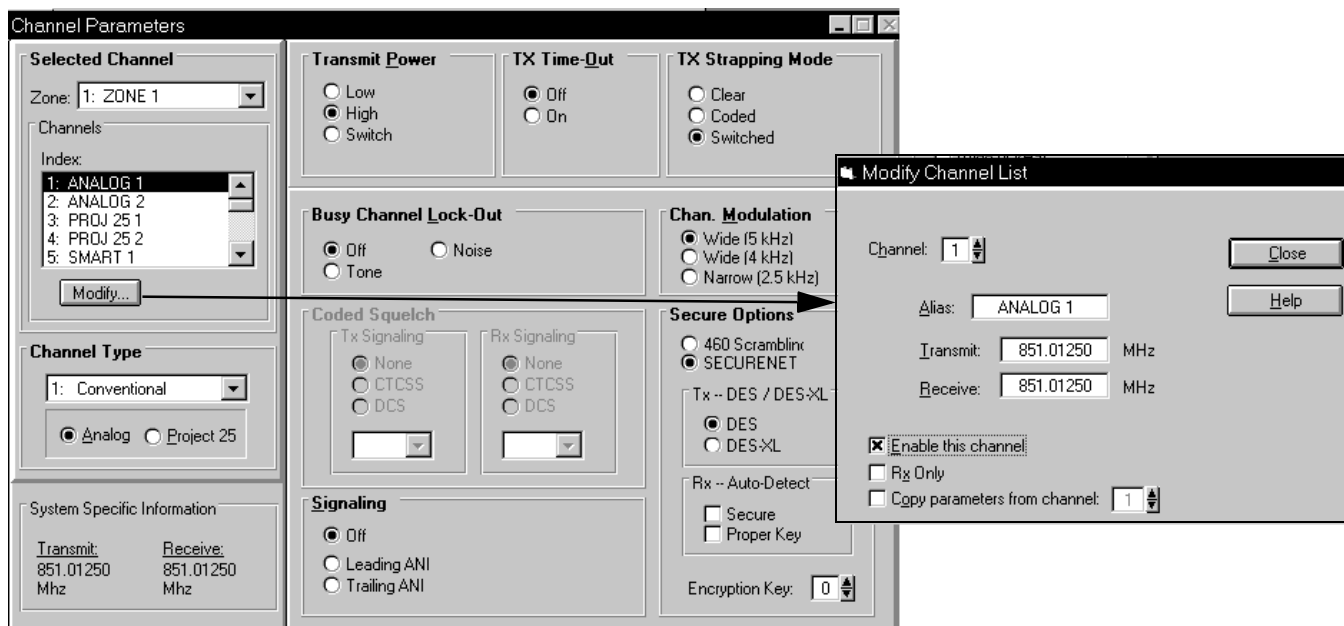


Figure 3-3 Conventional Analog Channel Screen

3.5.6 CONVENTIONAL ANALOG CHANNEL SCREEN PARAMETERS

The following parameters are programmed in the Conventional Analog Channel screen shown in Figure 3-3.

Selected Channel

Zone Box - Clicking the arrow to the right of this box displays the available zones. Click on a zone to select it. Zones and zone aliases are set up on the Radio-Wide General screen described in Section 3.4.2.

Channel Index Box - Displays the available channels in the selected zone. The channel type is selected by the Channel Type box below it.

Modify Button - Displays the Modify Channel List screen also shown in Figure 3-3. This screen enables the channel (makes it selectable) and programs the following channel parameters:

- Channel - Selects the channel to be edited.
- Alias - Programs the identification that is displayed when the channel is selected. Up to 10 characters can be programmed.
- Transmit - Programs the transmit frequency of the channel.

Receive - Programs the receive frequency of the channel.

Enable This Channel - The box must be checked for the channel to be selectable.

Rx Only - The box is checked if the channel is to be receive only (transmitter disabled).

Copy Parameters From Channel - If another channel is selected, the parameters from that channel are copied to the new channel.

NOTE: Channel numbers not assigned must be programmed for conventional operation and then not enabled in the above screen because SMARTNET/SmartZone channels cannot be disabled.

Channel Type

Channel Type Box - Selects the specific system from which the channel is selected. All programmed systems are displayed by number and type (conventional, SMARTNET, SmartZone). In addition, with conventional channels, either analog or Project 25 is selected. When a different channel type is selected, the screen for that type of channel is automatically displayed.

System Specific Information - With conventional systems, indicates the frequency of the selected channel without having to select the Modify box.

Transmit Power

This fixes the transmit power on the channel for the high or low level or allows it to be switch selectable (the Hi/Lo Power option switch is then required). Selectable power is not available with 800 MHz models (Section 2.6.10).

Tx Time-Out

This enables or disables the time-out timer on the channel. The time-out timer time is programmed in the conventional system General screen (Section 2.4.10).

Busy Channel Lockout

Off = disabled, Noise = transmit disallowed if carrier is detected, Tone = transmit allowed only if correct Call Guard code is detected (Section 2.6.5).

Coded Squelch

This sets the transmit and receive Call Guard (CTCSS/DCS) coding, if any, used on the channel. If “None” is selected, no code is transmitted and carrier-controlled squelch is used when receiving (Section 2.6.6). The standard Call Guard tones and codes are listed in Table 3-1 located on page 3-29.

Signaling

Off - No ANI signaling is used.

Leading ANI - A DTMF-coded ID is sent at the beginning of each transmission. This ID is set in the radio-wide conventional screen (Section 2.6.15).

Trailing ANI - A DTMF-coded ID is sent at the end of each transmission.

Channel Modulation

This selects if the channel modulation is wide-band (5 kHz), narrowband (2.5 kHz), or NPSPAC (4 kHz). NPSPAC (public safety) modulation applies to 800 MHz models only.

Tx Strapping Mode

NOTE: See Section 2.6.17 for more information.

Clear - All transmissions on the channel occur in the clear (unscrambled) mode.

Coded - All transmissions on the channel occur in the secure (scrambled) mode selected by Coded Options.

Switched - The clear or secure status of the channel is selected by the Clear/Secure option switch.

Secure Options

These options select either the Transcript 460 or SecureNet™ DES type of secure communication when either the coded or switched strapping mode is selected.

Tx DES/DES-XL - Selects either DES or DES-XL encryption protocol.

Rx AutoDetect - With the SecureNet protocol, selecting “Secure” enables automatic detection of encrypted receive signals. This may increase the response time of the radio to an incoming signal. Selecting “Proper Key” causes the radio to search the available SecureNet keys until it finds a match for the current transmission.

Encryption Key - Selects the encryption key from 0-15 that is used on the channel. This refers to the hardware location in the radio of the real key.

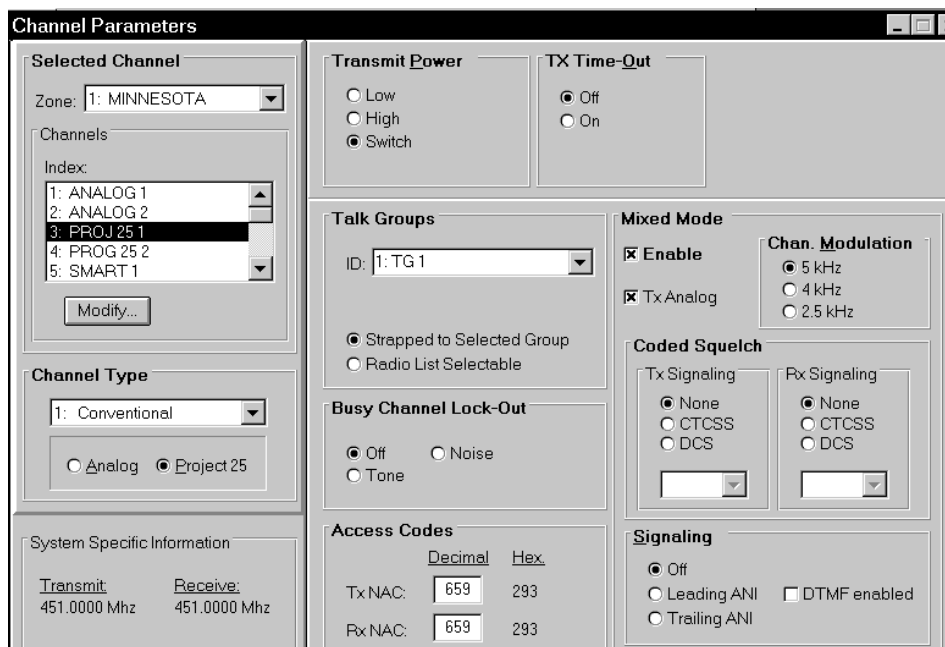


Figure 3-4 Conventional Project 25 Digital Channel Screen

3.5.7 CONVENTIONAL PROJECT 25 (DIGITAL) CHANNEL SCREEN PARAMETERS

The following parameters are programmed in the conventional Project 25 digital channel screen shown in Figure 3-4. Refer to Section 2.6.16 for more information on Project 25 operation.

The Selected Channel, Channel Type, Transmit Power, and Transmit Time-Out Parameters are programmed the same as with analog channels described in preceding section.

Talk Groups

This selects the Project 25 talk group that is assigned to the channel. The talk group programs the talk group ID, strapping mode, and encryption key address. Talk groups for Project 25 channels are programmed in the Conventional System Talk Group screen described in Section 3.5.4.

Strapped to Selected Group - If this parameter is selected, the talk group on that channel is always the selected talk group and cannot be changed.

Radio List Selectable - If this parameter is selected, the talk group may be changed by the radio operator using the (Digital) Talk Group Select option switch.

Busy Channel Lockout

Off = disabled, Noise = transmit disallowed if carrier is detected, NAC = transmit allowed only if correct NAC is detected (Section 2.6.5).

Access Codes

Programs the transmit and receive NAC (Network Access Code). These codes can be 0-4095. Refer to Section 2.6.16 for more information.

Mixed Mode

A mixed mode that allows both analog and Project 25 operation to be programmed on a channel can be enabled on the Project 25 channel screen (see Figure 3-4). This mode is programmed as follows:

Enable - Checking this box selects mixed analog/Project 25 operation on the channel.

Tx Analog - Checking this box selects Transmit = analog/Receive = Project 25. If it is not checked, the opposite is selected.

When the mixed mode is selected, the channel modulation, coded squelch, and ANI signaling parameters for the analog channel must then be programmed.

These parameters are programmed the same as described in Section 3.5.6.


3.6 PROGRAMMING SMARTNET/SMARTZONE SYSTEMS AND CHANNELS

3.6.1 INTRODUCTION

To program SMARTNET and SmartZone systems and channels, proceed as follows:

1. Program the SMARTNET/SmartZone radio-wide information as described in Section 3.4.
2. To create a new SMARTNET/SmartZone system, select the Systems > Add Systems in the menu bar (see Section 3.1.11). Up to sixteen systems of any type can be programmed as described in Section 1.2.5.
3. Program the SMARTNET/SmartZone system information as described starting in the next section. Make sure the desired SMARTNET or SmartZone system is displayed by clicking it in the left pane or selecting it in the Window menu in the menu bar (see Section 3.1.9). Then program the channels as described starting in Section 3.6.8.

3.6.2 SMARTNET/SMARTZONE SYSTEM GENERAL SCREEN

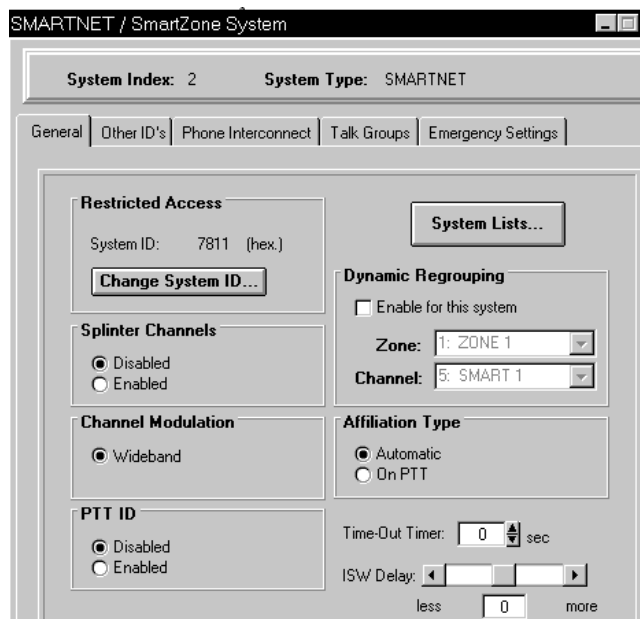

The preceding SMARTNET/SmartZone System General screen programs the following parameters:

Restricted Access

Change System ID Button - Displays the Change System ID screen which is used to enter the system ID of the system. This ID is entered as a hexadecimal number from 0-9 and A-F. Valid numbers are from 0001-FFFF. The system ID corresponding to the desired ID must also be located in the “key” subdirectory of the program file.

System ID - Read-only field which shows the ID of the system currently being edited.

Splinter Channels

When splinter channels are enabled, the receive and transmit frequencies are 12.5 kHz lower than the normal frequencies. Splinter channels are used only as required in the Mexico and Canada border areas for frequencies between 806 and 820.975 MHz.

Channel Modulation

When “Wideband” is enabled, the radio operates with a 4 kHz maximum deviation between 821.000 and 824.975 MHz and 5 kHz maximum deviation for all other frequencies. When it is disabled, deviation is 5 kHz with all frequencies.

System Lists Button

This button displays the screens used to program the various per system lists. Refer to Section 3.6.7 for more information on these lists.

Dynamic Regrouping

Enable For This System - When this box is checked, a dynamic regrouping channel is enabled. This is a SMARTNET channel which has the corresponding talk group dynamically set by the dispatcher.

Zone - The physical zone containing the dynamic regrouping channel. The value is selected on the Channel Parameters screen.

Channel - The physical channel used for dynamic regrouping. The value is selected on the Channel Parameters screen.

Affiliation Type

Automatic - The radio immediately affiliates with the central controller as soon as it is turned on and automatically re-affiliates each time the talk group is changed.

On PTT - The radio affiliates with the central controller only when the PTT switch is pressed.


Time-Out Timer

This programs the time-out timer setting for the system. It can be programmed for 0 min, 15 sec up to 3 min, 45 sec or it can be disabled (see Section 2.4.10).

ISW Delay

Increasing or decreasing this value changes the transmission timing of ISWs relative to the reception of OSWs.

3.6.3 SMARTNET/SMARTZONE SYSTEM OTHER ID'S SCREEN

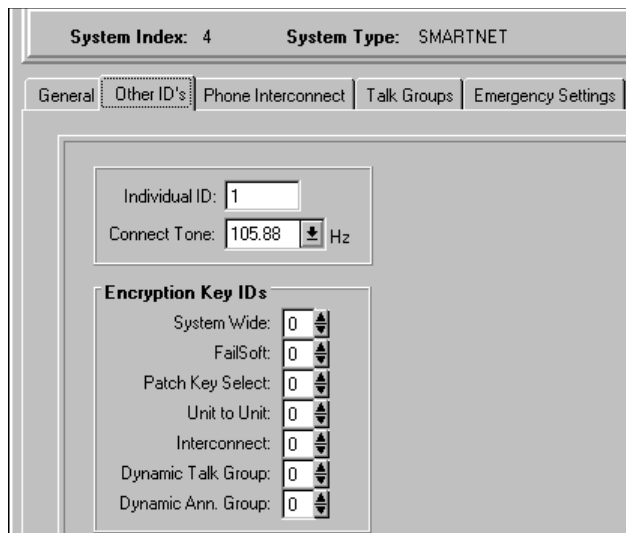

The SMARTNET/SmartZone Other ID's screen is shown above, and it programs the following parameters.

Individual ID - Uniquely identifies the radio on a particular system. Each radio must have a different Unit ID. Valid Unit IDs are from 1-63535.

Connect Tone - The tone expected by the controller on the traffic channel to verify that a subscriber transmission is occurring. This tone should be set the same as it is in the controller.

Encryption Key IDs

Programs SecureNet Encryption ID selection that is used in all except group calls.

System Wide - Key used for system-wide calls (typically originated by the dispatcher).

Failsoft - Key used in failsoft conditions (see Section 2.7.11).

Patch Key Select - Key used in patch calls.

Unit To Unit - Key used for unit-to-unit (private) calls.

Interconnect - Key used for telephone interconnect calls.

Dynamic Talk Group - Key used for the dynamic regrouping talk group when it is a standard talk group.

Dynamic Ann. Group - Key used for the dynamic regrouping talk group when it is an announcement group.

3.6.4 SMARTNET/SMARTZONE SYSTEM PHONE INTERCONNECT SCREEN

The SMARTNET/SmartZone Phone Interconnect screen follows on the next page, and it programs the following parameters.

Phone Interconnect


Refer to Section 2.7.6 for more information on telephone calls.

Disabled - Telephone calls cannot be placed or received.

Answer Only - Telephone calls can be received but not placed.

List Only - Telephone calls can be placed and received, and numbers can be recalled from memory only.

Unlimited - Telephone calls can be placed and received, and numbers can be recalled from memory or dialed using a microphone keypad.

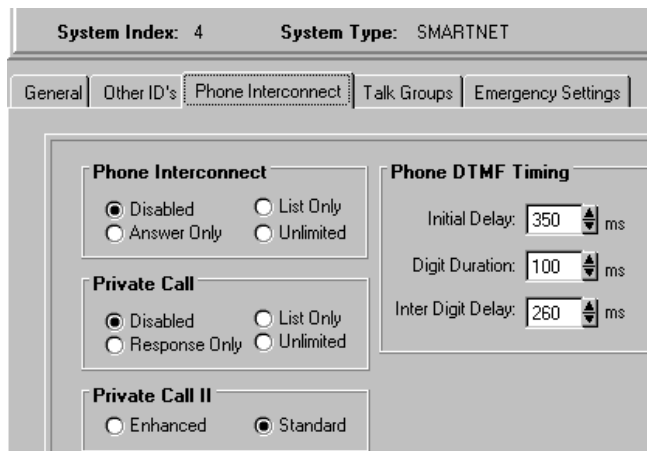

SMARTNET/SmartZone Phone Interconnect Screen

Private Call

This is the same as above, except for private (unit-to-unit) calls. Refer to Section 2.7.4 for more information.

Private Call II

This programs either standard or enhanced private calls as follows:

Standard - The user does not receive any feedback when the called radio is not active in the system. Only a “No Answer” is received if the called radio does not answer.

Enhanced - When a call is placed, the system tells the user if the called radio is currently active in the system and within range. The calling radio displays “No Ack” if the called radio is not active in the system and “No Answer” if it is active but does not answer.


Phone DTMF Timing

Initial Delay - Delay from 50-500 milliseconds from when a traffic channel is granted for phone interconnect to the start of the dialing out of the phone number.

Digit Duration - Duration from 50-500 milliseconds of each phone number digit.

Inter-Digit Delay - Delay from 50-500 milliseconds between each digit of a phone number. start here

3.6.5 SMARTNET/SMARTZONE SYSTEM TALK GROUPS SCREEN

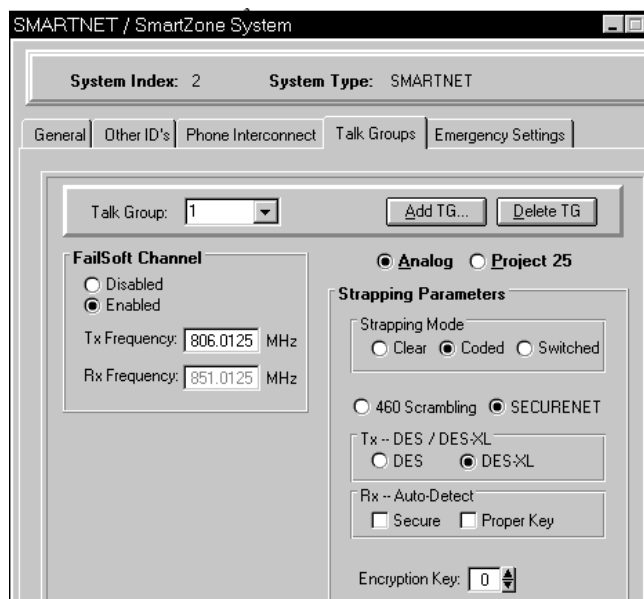

The SMARTNET/SmartZone Talk Groups screen shown above is used to set up SMARTNET/SmartZone talk groups and program unique talk group information. The parameters programmed in this screen are as follows:

Talk Group - Selects the talk group to program. This is the actual ID of the talk group. Talk groups are added or deleted by clicking the Add TG or Delete TG button (see following). Talk groups are assigned to channels on the channel screen (see Section 3.6.9).

Add TG... - Clicking this button displays a dialog box that adds a new talk group. The alias (alpha tag) of up to ten characters is entered, and the new group is then added after the others that are already set up.

Each SMARTNET/SmartZone system can be programmed with up to 256 talk groups.

Delete TG - Clicking this button deletes the currently selected talk group (the one displayed in the “Talk Group” box).

Failsoft Channel

Enable - Enables a failsoft channel on the talk group if a controller failure occurs (see Section 2.7.11).

Disable - The failsoft mode is not entered if the controller fails.

Tx/Rx Frequency - Programs the failsoft channel frequency if “Enabled” is checked.

Analog/Project 25

This selects the type of SMARTNET/SmartZone channel as analog or Project 25 (digital).

Strapping Parameters

The Strapping Parameters program the channel type (analog or Project 25 digital) and encryption on the talk group as follows:

Clear Mode - All transmissions on the talk group occur in the clear (unscrambled) mode.

Coded Mode - All transmissions on the talk group occur in the secure (scrambled) mode selected as follows.

Switched Mode - The clear or secure status of the talk group is selected by the Clear/Secure option switch.

NOTE: Refer to Section 2.7.15 for more SMARTNET/SmartZone encryption information.


460 Scrambling/SecureNet Mode - These options select either the Transcrypt 460 or DES type of secure communication when either the coded or switched strapping mode is selected.

Tx DES/DES-XL - Selects either DES or DES-XL encryption protocol.

Rx Secure Autodetect - With the SecureNet protocol, selecting “Secure” enables automatic detection of encrypted receive signals. This may increase the response time of the radio to an incoming signal. Selecting “Proper Key” causes the radio to search the available SecureNet keys until it finds a match for the current transmission.

Encryption Key - Selects the encryption key used on the talk group. This is a number from 0-15 that refers to a hardware location in the radio that contains the real key.

3.6.6 SMARTNET/SMARTZONE SYSTEM EMERGENCY SETTINGS SCREEN

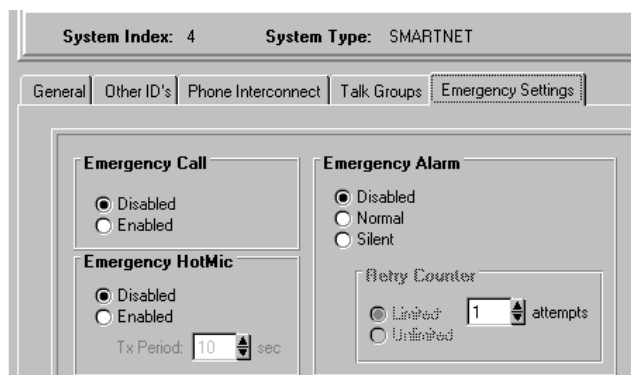

The SMARTNET/SmartZone Emergency Settings screen and the parameters programmed in this screen are as follows:

Emergency Call

Enable - When the Emergency option switch and then the PTT switch are pressed, an emergency group call is transmitted.

Disable - An emergency group call is not authorized.

Emergency Hot Mic

Enable - When an emergency alarm is generated and the emergency alarm acknowledgment received, the emergency mode is automatically entered and transmitting begins for the time specified by the Tx Period parameter (see following).

Disable - Automatic transmissions do not occur.

Tx Period - Defines the period during which transmissions occur with the microphone audio unmuted (without user intervention). Times of 10-120 seconds in 10-second steps can be selected.

Emergency Alarm

Disabled - No emergency signal is sent when the user presses the Emergency option switch.

Normal - When the user presses the Emergency option switch, an emergency signal is sent to the dispatcher. Audio and visual feedback is provided by the radio.


Silent - Same as “Normal” except no audio or visual feedback is provided.

Retry Counter - When “Unlimited” is selected, an emergency call is repeated until acknowledged or canceled. When “Limited” is checked, calls are attempted only the specified number of times.

3.6.7 SMARTNET/SMARTZONE SYSTEM LISTS SCREENS

Clicking System Lists in the left pane under SMARTNET > General or the **System Lists...** button in the General screen described in Section 3.6.2 displays the screens used to program the various lists that are unique for each SMARTNET/SmartZone system. These screens are as follows:

Trunking Phone List Screen

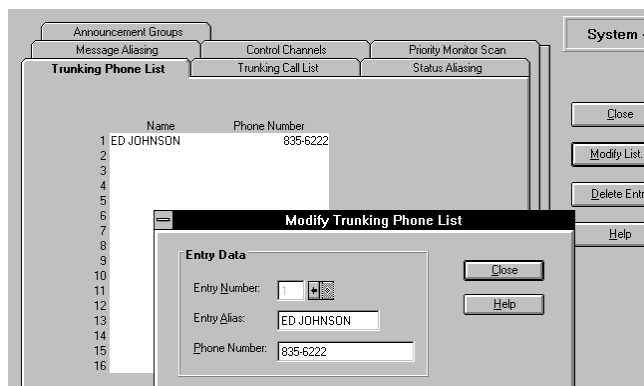

This screen programs the phone number list if used (see Section 2.7.6). To edit this list, click the Trunking Phone List tab and then the “Modify List”

button on the right side of the screen. The following information is then programmed in the dialog box that is displayed:

Entry Number - This box selects the entry to be edited. The scroll bars to the right of this box select the desired entry. A phone list can contain up to 16 entries. Selecting a new entry number automatically validates and stores the current entry. If the current entry contains an invalid field (for example, too many digits in the phone number), the entry number does not change and the invalid field is highlighted.


Entry Alias - Up to ten characters can be entered to identify the phone number. This identification is displayed when phone numbers are selected by the user from the list. Only uppercase letters can be entered, so lowercase letters are automatically converted to uppercase by the program.

Phone Number - This is the number dialed when the location is selected. Characters that can be entered include 0-9, #, (,), and P (a “P” programs a pause). The maximum number of digits excluding (,) and spaces is 16, and the maximum including (,) and spaces is 24.

Close - Clicking this button verifies the current entry, stores it, and then closes the dialog box. If the current entry contains an invalid field, the dialog box does not close and the invalid field is highlighted.

Help - Accesses the Help screen. Help can also be selected at any time by pressing the F1 key.

Message Aliasing Screen

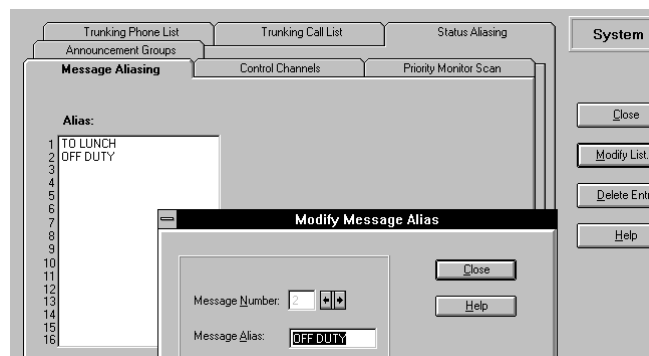

This screen associates an alias (name) with each message number (see Section 2.7.8). To edit this list,


click the Message Aliasing tab and then the “Modify List” button on the right side. The following information is then programmed in the dialog box that is displayed:

Message Number - This box selects the message to be edited. The scroll bars to the right of this box select the desired message number.

Message Alias - Programs the alias which can be up to any ten alphanumeric characters.

Close Button - Validates the entry and closes the dialog box. The entry is also validated when another message number is selected.

Announcement Groups Screen

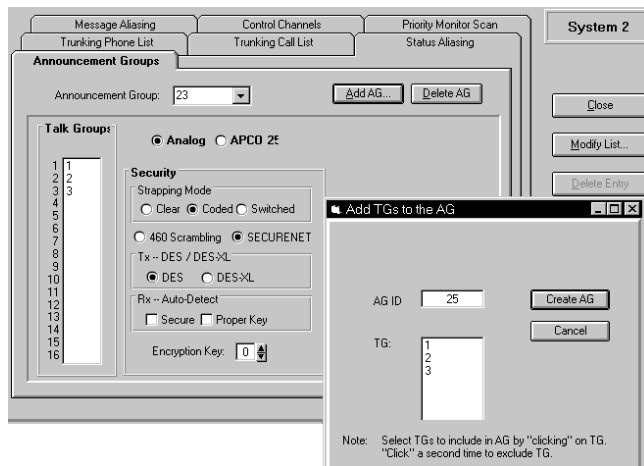

This screen programs the announcement groups that are used to communicate with several talk groups simultaneously. There can be up to 3 announcement groups per system, and each announcement group can have up to 15 talk groups.

To create an announcement group, click the “Add AG” button and the “Add TGs to the AG” screen also shown above is displayed. Enter the announcement group ID, click the talk groups to select/deselect those that are to be included, and then create the announcement group by clicking the “Create AG” button. To delete the current announcement group, click the “Delete AG” button.

To edit an announcement group, click the “Modify List” button and select the announcement

group to be edited from the “AG” pull-down menu. Then click the talk groups to select/de-select them and then click the “Update List” button to make the changes.


Main Screen Parameters

Talk Groups - This is a read-only list of all talk groups currently in the announcement group.

Analog/Project 25 - Programs the type of communication associated with the announcement group. Either analog or digital (Project 25) communication can be selected.

Security - Defines the type of secure communication used, if any, for the announcement group. These parameters are programmed similar to those on the Talk Group screen described in Section 3.6.5.

Control Channels Screen

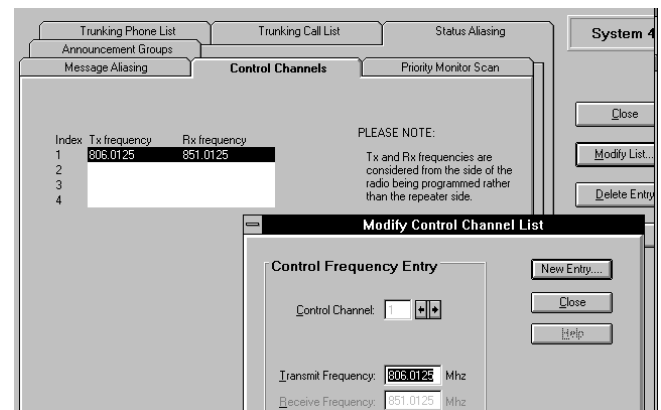

This screen allows the system manager to view and edit the control channels. Each SMARTNET system can have up to four control channels, and each SmartZone system can have up to 32 control channels. Only one control channel is active at a time.

To edit this list, click the Control Channels tab and then the “Modify List” button on the right side. The following information is then programmed in the dialog box that is displayed:


Control Channel - Selects the control channel to be edited. To add a new channel, click the “New Entry” button.

Frequency - The transmit and receive frequency of the control channel. These are the mobile frequencies, not the repeater frequencies. Only multiples of 5 kHz and 6.25 kHz are valid. With 800 MHz frequencies, a receive frequency 45 MHz above the transmit frequency is automatically entered.

New Entry Button - Click this button to display the dialog box used to add another control channel.

Close Button - Verifies the current entry, stores it, and then closes the dialog box. If the current entry contains an invalid field, the dialog box does not close and the invalid field is highlighted.

Trunking Call List Screen

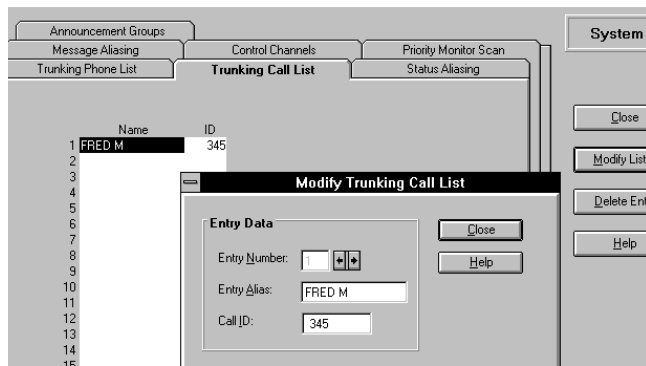

This screen is shown above, and it allows the list of IDs used for private calls to be programmed. A maximum of 16 IDs can be programmed (see Section 2.7.4).


To edit this list, click the Trunking Call List tab and then the “Modify List” button on the right side. This following information is then programmed in the dialog box that is displayed:

Entry Number - This box selects the entry to be edited. The scroll bars to the right of this box select the desired entry. A phone list can contain up to 16 entries. Selecting a new entry number automatically validates and stores the current entry. If the current entry contains an invalid field, the entry number does not change and the invalid field is highlighted.

Entry Alias - Up to ten characters can be entered to identify the user being called. This identification is displayed when the mobile to be called is selected by the user from the list. Only uppercase letters can be entered, so lowercase letters are automatically converted to uppercase by the program.

Call ID - This is the ID of the radio being called. Valid entries are 1-49152. A “0” is detected as no entry.

Priority Monitor Scan Screen

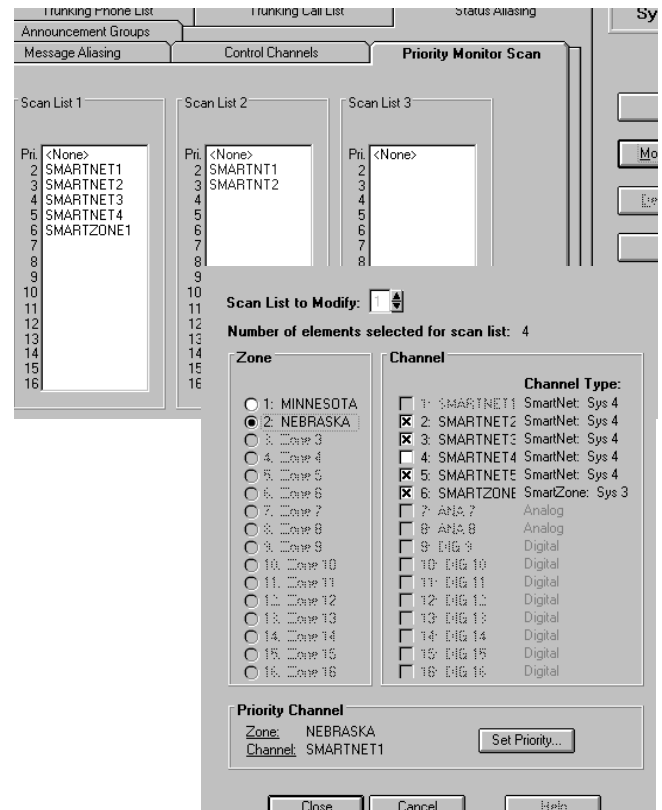


This screen is shown above, and it programs up to three Priority Monitor scan lists that are allowed. Each scan list can contain up to 15 channels plus a priority channel (see Section 2.7.12). These channels must be from the same SMARTNET/SmartZone system. Channels set up for other systems are not allowed.

To edit a list, click the Priority Monitor Scan tab and then click the “Modify List” button on the right side. A screen similar to the top screen shown above is then displayed to select the channels to be included in that scan list. Select channels as follows:

1. Select the scan list to be edited using the scroll bars next to the “Scan List To Modify” box.
2. Select the first zone with channels to be included and select the desired channels. Repeat for the other zones.

- To select the priority channel, click the Set Priority button. Then select the desired Zone/Channel or “None” if no priority channel is to be scanned.
- Repeat the preceding steps for the other scan lists if applicable.

Status Aliasing Screen

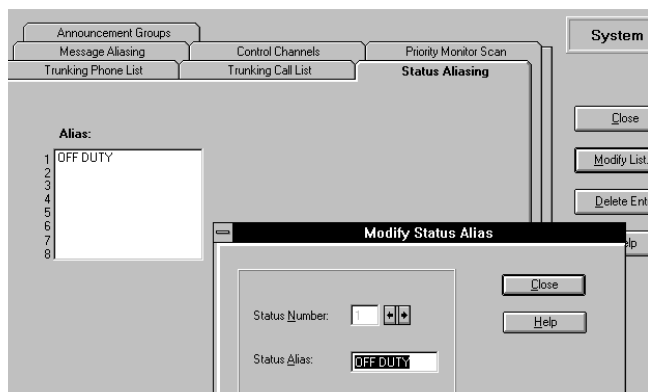

This screen is shown above, and it programs the alias for each of up to eight status conditions that can be sent. The meaning of each status number is defined by the system manager. Refer to Section 2.7.9 for more information.


To edit this list, click the Status Aliasing tab and then the “Modify List” button on the right side. The following information is then programmed in the dialog box that is displayed:

Status Number - The scroll bars to the right of this box select the status number that is to be edited.

Status Alias - Programs up to 10 characters that identify the status. This identification is displayed when the user selects a status condition.

Other Band Trunking Screen

The Other Band Trunking screen follows, and it is displayed only when programming channels in the VHF and UHF frequency bands. It is used to define the relationship between the transmit and receive channel frequencies in these bands. With 800 MHz systems, this is not required because the difference between the transmit and receive frequency is always 45 MHz.

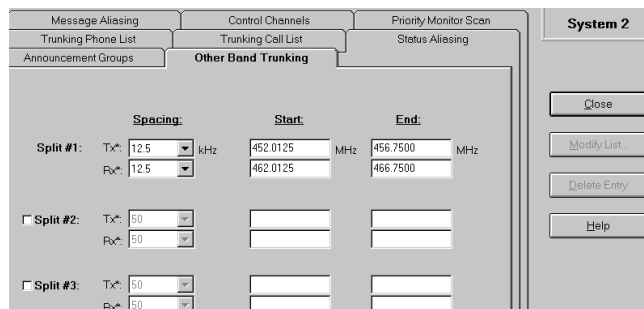

Other Band Trunking Screen

This screen organizes the available frequency band into three sub-bands, called splits. Each split is defined by a start frequency, stop frequency, and channel spacing as follows. Frequencies outside the defined split cannot be accessed by the radio. These frequency splits must be defined the same way they are defined for the trunking controller.

Tx and Rx Spacing - Spacing in kHz between each potential transmit and receive frequency.

Tx and Rx Start Frequency - Start in MHz of the band split for transmit and receive frequencies.

Tx and Rx Stop Frequency - Stop in MHz of the band split for transmit and receive frequencies.

3.6.8 SETTING UP SMARTNET/SMARTZONE CHANNELS

The SMARTNET/SmartZone Channel screen shown in Figure 3-5 is displayed when the SMARTNET or SmartZone channel type is selected. The channel screen programs unique channel parameters and also assigns channels to the selectable zones displayed by the transceiver.

The general procedure for setting up a SMARTNET/SmartZone channel is as follows. Refer to the descriptions which follow this procedure for information on SMARTNET/SmartZone Channel screen parameters.

- Make sure that the desired zone is selected in the Zone box.
- Select the channel number in the Channels Index box which is to be programmed with the channel. This will be the number displayed when the channel is selected.

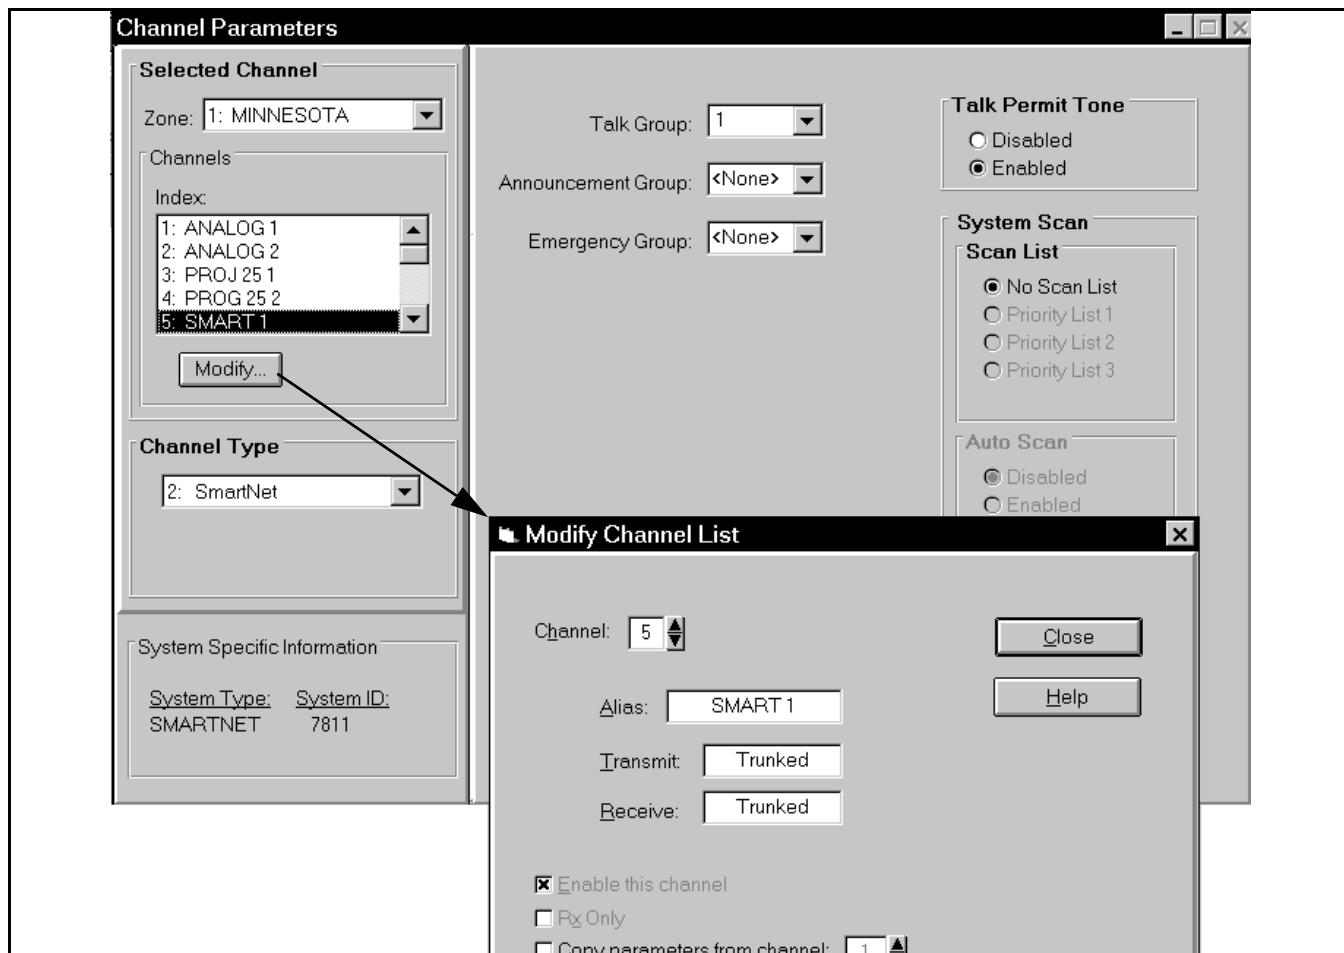


Figure 3-5 SMARTNET/SmartZone Channel Screen

3. To set up a SMARTNET channel, select “SMARTNET” as the channel type, and to set up a SmartZone channel, select “SmartZone”.
4. Click the Modify button to display the dialog box shown in the lower part of Figure 3-5. This box programs the alias (tag) that is displayed when it is selected.
5. Program the other parameters in the main part of the screen (see information which follows).

3.6.9 SMARTNET/SMARTZONE CHANNEL SCREEN PARAMETERS

The following parameters are programmed in the SMARTNET/SmartZone channel screen shown in Figure 3-5.

Selected Channel

Zone Box - Clicking the arrow to the right of this box displays the available zones. Click on a zone to select it. Zones and zone aliases are set up on the Radio-Wide General screen described in Section 3.4.2.

Channel Index Box - Displays the channels in the selected zone. The channel type is selected by the Channel Type box below it.

Modify... - Displays the screen shown in the lower part of Figure 3-5. The parameters programmed in this screen are as follows:

Channel - Selects the channel to be edited.

Alias - Programs the identification that is displayed when the channel is selected. Up to 10 characters can be programmed.

Transmit - Not programmable because the transmit frequency is dynamically assigned over the air (“Trunked” is always displayed).

Receive - Dynamically assigned like the preceding transmit frequency.

Enable This Channel - Not used because SMARTNET/SmartZone channels are always enabled if set up. To disable a channel so that it is not selectable, choose the conventional type and do not check this box.

Copy Parameters From Channel - If another channel is selected in the box, the parameters from that channel are copied to the new channel.

Channel Type

Channel Type Box - Selects the specific system from which the channel is selected. All programmed systems are displayed by number and type (conventional, SMARTNET, SmartZone). When a different channel type is selected, the screen for that type of channel is automatically displayed.

Other Screen Parameters

System Specific Information - With SMARTNET/SmartZone systems, indicates the system ID programmed on the system General screen (see Section 3.6.2).

Talk Group - Selects the talk group selected by that channel. Talk groups are programmed in the Talk Group screen described in Section 3.6.5.

Announcement Group - Selects one of up to three announcement groups selected by the channel. Refer to “Announcement Group Screen” in Section 3.6.7 for more information.

Emergency Group - Selects the talk group used for emergency calls.

Talk Permit Tone - When enabled, a short tone sounds after a request for a group call has been approved by the main controller. This indicates that speaking can begin. When disabled, no audio feedback is used to indicate when speaking can begin.

System Scan - Selects the Priority Monitor Scan list selected by the channel (see “Priority Monitor Scan

Screen” description in Section 3.6.7). If “No Scan List” is programmed, scanning is not selectable on that channel.

Auto Scan - When enabled and a channel is selected, the radio automatically begins scanning the scan list associated with that channel. When disabled, scanning can only be started manually by the Scan option switch.

3.7 PASSWORD OPERATION

3.7.1 GENERAL

The 50xx portable radio can be programmed with a Power-Up and Programming password. If the Power-Up password is enabled, it must be entered each time power is turned on to make the radio operational. This prevents unauthorized use. The Programming password must be entered to access the keypad programming feature of the radio. This prevents unauthorized reprogramming of the transceiver. Currently, the 50xx portable is the only transceiver that is programmed with the PCTrunk software that utilizes password access. More information on these two passwords follows.

3.7.2 POWER-UP PASSWORD

The Power-Up password function is enabled on the Radio-Wide General screen described in Section 3.4.2. This password must then be entered each time transceiver power is turned on. In addition, since the radio resets after downloading or uploading data, it must be entered after performing those functions (see Sections 3.3.3 and 3.3.4). When entering the password using the radio keypad, enter the eight password digits and then press the **ENT** key. If an error is made, press the **CLR** key to start over.

To enable the power-up password function on the programmer screen, the Power-Up password must be entered. This prevents the radio from being programmed with an unknown password which would make it inoperable. The password is a series of eight numbers, and it is programmed by clicking the “Change Password” button on the Radio-Wide General screen. The default password is eight zeros (00000000), and it may need to be entered as the “old” password if applicable. The password can also be

changed using the radio keypad when the keypad is locked by entering the old password and then pressing the # key. Refer to Section 2.4.3 for more information.

If the Power-Up password has been enabled in the radio connected to the programmer, the Programming password described in the next section must then be entered before a data can be downloaded or uploaded. This prevents an unauthorized person from reading radio data or changing radio programming.

If the password is forgotten, it can be overridden by pressing the lower button on the side 8 times. This unlocks the radio and reverts to the default password of “00000000”. However, it also erases all channel

frequencies, trunked group IDs, and encryption information. Therefore, the radio must be reprogrammed after this is done to make it operational again.

3.7.3 PROGRAMMING PASSWORD

The Programming password must be entered to enable the Keypad Programming mode described in Section 2.9. This prevents an unauthorized person from changing the radio programming. As described in the preceding section, the Programming password must also be entered when downloading or uploading data from a radio that has the Power-Up password function enabled.

Table 3-1 Call Guard (CTCSS/DCS) Codes and Tones

Recommended Tone Call Guard Codes									
Code	Freq	Code	Freq	Code	Freq	Code	Freq	Code	Freq
		09	91.5	18	123.0	27	167.9	37*	241.8
01	67.0	10	94.8	19	127.3	28	173.8	38*	250.3
02	71.9	11**	97.4	20	131.8	29	179.9	39**	69.3
03	74.4	12	100.0	21	136.5	30	186.2	40**	206.5
04	77.0	13	103.5	22	141.3	31	192.8	41**	229.1
05	79.7	14	107.2	23	146.2	32	203.5	42**	254.1
06	82.5	15	110.9	24	151.4	33	210.7		
07	85.4	16	114.8	25	156.7	34*	218.1		
08	88.5	17	118.8	26	162.2	35*	225.7		
* These tones normally are not used because of their close proximity to the voice frequencies									
** This tone is normally not used because it may cause interference with adjacent tones.									
Recommended Digital Call Guard Codes									
023	065	131	172	261	346	431	532	654	743
025	071	132	174	263	351	432	546	662	754
026	072	134	205	265	364	445	565	664	
031	073	143	223	271	365	464	606	703	
032	074	152	226	306	371	465	612	712	
043	114	155	243	311	411	466	624	723	
047	115	156	244	315	412	503	627	731	
051	116	162	245	331	413	506	631	732	
054	125	165	251	343	423	516	632	734	

800 MHz Channels

FCC Chan. No.	Mobile Rx Freq.	Mobile Tx Freq.	FCC Chan. No.	Mobile Rx Freq.	Mobile Tx Freq.	FCC Chan. No.	Mobile Rx Freq.	Mobile Tx Freq.
1	851.0125	806.0125	49	852.2125	807.2125	97	853.4125	808.4125
2	851.0375	806.0375	50	852.2375	807.2375	98	853.4375	808.4375
3	851.0625	806.0625	51	852.2625	807.2625	99	853.4625	808.4625
4	851.0875	806.0875	52	852.2875	807.2875	100	853.4875	808.4875
5	851.1125	806.1125	53	852.3125	807.3125	101	853.5125	808.5125
6	851.1375	806.1375	54	852.3375	807.3375	102	853.5375	808.5375
7	851.1625	806.1625	55	852.3625	807.3625	103	853.5625	808.5625
8	851.1875	806.1875	56	852.3875	807.3875	104	853.5875	808.5875
9	851.2125	806.2125	57	852.4125	807.4125	105	853.6125	808.6125
10	851.2375	806.2375	58	852.4375	807.4375	106	853.6375	808.6375
11	851.2625	806.2625	59	852.4625	807.4625	107	853.6625	808.6625
12	851.2875	806.2875	60	852.4875	807.4875	108	853.6875	808.6875
13	851.3125	806.3125	61	852.5125	807.5125	109	853.7125	808.7125
14	851.3375	806.3375	62	852.5375	807.5375	110	853.7375	808.7375
15	851.3625	806.3625	63	852.5625	807.5625	111	853.7625	808.7625
16	851.3875	806.3875	64	852.5875	807.5875	112	853.7875	808.7875
17	851.4125	806.4125	65	852.6125	807.6125	113	853.8125	808.8125
18	851.4375	806.4375	66	852.6375	807.6375	114	853.8375	808.8375
19	851.4625	806.4625	67	852.6625	807.6625	115	853.8625	808.8625
20	851.4875	806.4875	68	852.6875	807.6875	116	853.8875	808.8875
21	851.5125	806.5125	69	852.7125	807.7125	117	853.9125	808.9125
22	851.5375	806.5375	70	852.7375	807.7375	118	853.9375	808.9375
23	851.5625	806.5625	71	852.7625	807.7625	119	853.9625	808.9625
24	851.5875	806.5875	72	852.7875	807.7875	120	853.9875	808.9875
25	851.6125	806.6125	73	852.8125	807.8125	121	854.0125	809.0125
26	851.6375	806.6375	74	852.8375	807.8375	122	854.0375	809.0375
27	851.6625	806.6625	75	852.8625	807.8625	123	854.0625	809.0625
28	851.6875	806.6875	76	852.8875	807.8875	124	854.0875	809.0875
29	851.7125	806.7125	77	852.9125	807.9125	125	854.1125	809.1125
30	851.7375	806.7375	78	852.9375	807.9375	126	854.1375	809.1375
31	851.7625	806.7625	79	852.9625	807.9625	127	854.1625	809.1625
32	851.7875	806.7875	80	852.9875	807.9875	128	854.1875	809.1875
33	851.8125	806.8125	81	853.0125	808.0125	129	854.2125	809.2125
34	851.8375	806.8375	82	853.0375	808.0375	130	854.2375	809.2375
35	851.8625	806.8625	83	853.0625	808.0625	131	854.2625	809.2625
36	851.8875	806.8875	84	853.0875	808.0875	132	854.2875	809.2875
37	851.9125	806.9125	85	853.1125	808.1125	133	854.3125	809.3125
38	851.9375	806.9375	86	853.1375	808.1375	134	854.3375	809.3375
39	851.9625	806.9625	87	853.1625	808.1625	135	854.3625	809.3625
40	851.9875	806.9875	88	853.1875	808.1875	136	854.3875	809.3875
41	852.0125	807.0125	89	853.2125	808.2125	137	854.4125	809.4125
42	852.0375	807.0375	90	853.2375	808.2375	138	854.4375	809.4375
43	852.0625	807.0625	91	853.2625	808.2625	139	854.4625	809.4625
44	852.0875	807.0875	92	853.2875	808.2875	140	854.4875	809.4875
45	852.1125	807.1125	93	853.3125	808.3125	141	854.5125	809.5125
46	852.1375	807.1375	94	853.3375	808.3375	142	854.5375	809.5375
47	852.1625	807.1625	95	853.3625	808.3625	143	854.5625	809.5625
48	852.1875	807.1875	96	853.3875	808.3875	144	854.5875	809.5875

800 MHz Channels

FCC Chan. No.	Mobile Rx Freq.	Mobile Tx Freq
---------------	-----------------	----------------

FCC Chan. No.	Mobile Rx Freq.	Mobile Tx Freq
---------------	-----------------	----------------

FCC Chan. No.	Mobile Rx Freq	Mobile Tx Freq
---------------	----------------	----------------

145	854.6125	809.6125	193	855.8125	810.8125	241	857.0125	812.0125
146	854.6375	809.6375	194	855.8375	810.8375	242	857.0375	812.0375
147	854.6625	809.6625	195	855.8625	810.8625	243	857.0625	812.0625
148	854.6875	809.6875	196	855.8875	810.8875	244	857.0875	812.0875
149	854.7125	809.7125	197	855.9125	810.9125	245	857.1125	812.1125
150	854.7375	809.7375	198	855.9375	810.9375	246	857.1375	812.1375
151	854.7625	809.7625	199	855.9625	810.9625	247	857.1625	812.1625
152	854.7875	809.7875	200	855.9875	810.9875	248	857.1875	812.1875
153	854.8125	809.8125	201	856.0125	811.0125	249	857.2125	812.2125
154	854.8375	809.8375	202	856.0375	811.0375	250	857.2375	812.2375
155	854.8625	809.8625	203	856.0625	811.0625	251	857.2625	812.2625
156	854.8875	809.8875	204	856.0875	811.0875	252	857.2875	812.2875
157	854.9125	809.9125	205	856.1125	811.1125	253	857.3125	812.3125
158	854.9375	809.9375	206	856.1375	811.1375	254	857.3375	812.3375
159	854.9625	809.9625	207	856.1625	811.1625	255	857.3625	812.3625
160	854.9875	809.9875	208	856.1875	811.1875	256	857.3875	812.3875
161	855.0125	810.0125	209	856.2125	811.2125	257	857.4125	812.4125
162	855.0375	810.0375	210	856.2375	811.2375	258	857.4375	812.4375
163	855.0625	810.0625	211	856.2625	811.2625	259	857.4625	812.4625
164	855.0875	810.0875	212	856.2875	811.2875	260	857.4875	812.4875
165	855.1125	810.1125	213	856.3125	811.3125	261	857.5125	812.5125
166	855.1375	810.1375	214	856.3375	811.3375	262	857.5375	812.5375
167	855.1625	810.1625	215	856.3625	811.3625	263	857.5625	812.5625
168	855.1875	810.1875	216	856.3875	811.3875	264	857.5875	812.5875
169	855.2125	810.2125	217	856.4125	811.4125	265	857.6125	812.6125
170	855.2375	810.2375	218	856.4375	811.4375	266	857.6375	812.6375
171	855.2625	810.2625	219	856.4625	811.4625	267	857.6625	812.6625
172	855.2875	810.2875	220	856.4875	811.4875	268	857.6875	812.6875
173	855.3125	810.3125	221	856.5125	811.5125	269	857.7125	812.7125
174	855.3375	810.3375	222	856.5375	811.5375	270	857.7375	812.7375
175	855.3625	810.3625	223	856.5625	811.5625	271	857.7625	812.7625
176	855.3875	810.3875	224	856.5875	811.5875	272	857.7875	812.7875
177	855.4125	810.4125	225	856.6125	811.6125	273	857.8125	812.8125
178	855.4375	810.4375	226	856.6375	811.6375	274	857.8375	812.8375
179	855.4625	810.4625	227	856.6625	811.6625	275	857.8625	812.8625
180	855.4875	810.4875	228	856.6875	811.6875	276	857.8875	812.8875
181	855.5125	810.5125	229	856.7125	811.7125	277	857.9125	812.9125
182	855.5375	810.5375	230	856.7375	811.7375	278	857.9375	812.9375
183	855.5625	810.5625	231	856.7625	811.7625	279	857.9625	812.9625
184	855.5875	810.5875	232	856.7875	811.7875	280	857.9875	812.9875
185	855.6125	810.6125	233	856.8125	811.8125	281	858.0125	813.0125
186	855.6375	810.6375	234	856.8375	811.8375	282	858.0375	813.0375
187	855.6625	810.6625	235	856.8625	811.8625	283	858.0625	813.0625
188	855.6875	810.6875	236	856.8875	811.8875	284	858.0875	813.0875
189	855.7125	810.7125	237	856.9125	811.9125	285	858.1125	813.1125
190	855.7375	810.7375	238	856.9375	811.9375	286	858.1375	813.1375
191	855.7625	810.7625	239	856.9625	811.9625	287	858.1625	813.1625
192	855.7875	810.7875	240	856.9875	811.9875	288	858.1875	813.1875

800 MHz Channels

FCC Chan. No.	Mobile Rx Freq.	Mobile Tx Freq.	FCC Chan. No.	Mobile Rx Freq.	Mobile Tx Freq.	FCC Chan. No.	Mobile Rx Freq.	Mobile Tx Freq.
289	858.2125	813.2125	337	859.4125	814.4125	385	860.6125	815.6125
290	858.2375	813.2375	338	859.4375	814.4375	386	860.6375	815.6375
291	858.2625	813.2625	339	859.4625	814.4625	387	860.6625	815.6625
292	858.2875	813.2875	340	859.4875	814.4875	388	860.6875	815.6875
293	858.3125	813.3125	341	859.5125	814.5125	389	860.7125	815.7125
294	858.3375	813.3375	342	859.5375	814.5375	390	860.7375	815.7375
295	858.3625	813.3625	343	859.5625	814.5625	391	860.7625	815.7625
296	858.3875	813.3875	344	859.5875	814.5875	392	860.7875	815.7875
297	858.4125	813.4125	345	859.6125	814.6125	393	860.8125	815.8125
298	858.4375	813.4375	346	859.6375	814.6375	394	860.8375	815.8375
299	858.4625	813.4625	347	859.6625	814.6625	395	860.8625	815.8625
300	858.4875	813.4875	348	859.6875	814.6875	396	860.8875	815.8875
301	858.5125	813.5125	349	859.7125	814.7125	397	860.9125	815.9125
302	858.5375	813.5375	350	859.7375	814.7375	398	860.9375	815.9375
303	858.5625	813.5625	351	859.7625	814.7625	399	860.9625	815.9625
304	858.5875	813.5875	352	859.7875	814.7875	400	860.9875	815.9875
305	858.6125	813.6125	353	859.8125	814.8125	401	861.0125	816.0125
306	858.6375	813.6375	354	859.8375	814.8375	402	861.0375	816.0375
307	858.6625	813.6625	355	859.8625	814.8625	403	861.0625	816.0625
308	858.6875	813.6875	356	859.8875	814.8875	404	861.0875	816.0875
309	858.7125	813.7125	357	859.9125	814.9125	405	861.1125	816.1125
310	858.7375	813.7375	358	859.9375	814.9375	406	861.1375	816.1375
311	858.7625	813.7625	359	859.9625	814.9625	407	861.1625	816.1625
312	858.7875	813.7875	360	859.9875	814.9875	408	861.1875	816.1875
313	858.8125	813.8125	361	860.0125	815.0125	409	861.2125	816.2125
314	858.8375	813.8375	362	860.0375	815.0375	410	861.2375	816.2375
315	858.8625	813.8625	363	860.0625	815.0625	411	861.2625	816.2625
316	858.8875	813.8875	364	860.0875	815.0875	412	861.2875	816.2875
317	858.9125	813.9125	365	860.1125	815.1125	413	861.3125	816.3125
318	858.9375	813.9375	366	860.1375	815.1375	414	861.3375	816.3375
319	858.9625	813.9625	367	860.1625	815.1625	415	861.3625	816.3625
320	858.9875	813.9875	368	860.1875	815.1875	416	861.3875	816.3875
321	859.0125	814.0125	369	860.2125	815.2125	417	861.4125	816.4125
322	859.0375	814.0375	370	860.2375	815.2375	418	861.4375	816.4375
323	859.0625	814.0625	371	860.2625	815.2625	419	861.4625	816.4625
324	859.0875	814.0875	372	860.2875	815.2875	420	861.4875	816.4875
325	859.1125	814.1125	373	860.3125	815.3125	421	861.5125	816.5125
326	859.1375	814.1375	374	860.3375	815.3375	422	861.5375	816.5375
327	859.1625	814.1625	375	860.3625	815.3625	423	861.5625	816.5625
328	859.1875	814.1875	376	860.3875	815.3875	424	861.5875	816.5875
329	859.2125	814.2125	377	860.4125	815.4125	425	861.6125	816.6125
330	859.2375	814.2375	378	860.4375	815.4375	426	861.6375	816.6375
331	859.2625	814.2625	379	860.4625	815.4625	427	861.6625	816.6625
332	859.2875	814.2875	380	860.4875	815.4875	428	861.6875	816.6875
333	859.3125	814.3125	381	860.5125	815.5125	429	861.7125	816.7125
334	859.3375	814.3375	382	860.5375	815.5375	430	861.7375	816.7375
335	859.3625	814.3625	383	860.5625	815.5625	431	861.7625	816.7625
336	859.3875	814.3875	384	860.5875	815.5875	432	861.7875	816.7875

800 MHz Channels

FCC Chan. No.	Mobile Rx Freq.	Mobile Tx Freq.	FCC Chan. No.	Mobile Rx Freq.	Mobile Tx Freq.	FCC Chan. No.	Mobile Rx Freq.	Mobile Tx Freq.
433	861.8125	816.8125	481	863.0125	818.0125	529	864.2125	819.2125
434	861.8375	816.8375	482	863.0375	818.0375	530	864.2375	819.2375
435	861.8625	816.8625	483	863.0625	818.0625	531	864.2625	819.2625
436	861.8875	816.8875	484	863.0875	818.0875	532	864.2875	819.2875
437	861.9125	816.9125	485	863.1125	818.1125	533	864.3125	819.3125
438	861.9375	816.9375	486	863.1375	818.1375	534	864.3375	819.3375
439	861.9625	816.9625	487	863.1625	818.1625	535	864.3625	819.3625
440	861.9875	816.9875	488	863.1875	818.1875	536	864.3875	819.3875
441	862.0125	817.0125	489	863.2125	818.2125	537	864.4125	819.4125
442	862.0375	817.0375	490	863.2375	818.2375	538	864.4375	819.4375
443	862.0625	817.0625	491	863.2625	818.2625	539	864.4625	819.4625
444	862.0875	817.0875	492	863.2875	818.2875	540	864.4875	819.4875
445	862.1125	817.1125	493	863.3125	818.3125	541	864.5125	819.5125
446	862.1375	817.1375	494	863.3375	818.3375	542	864.5375	819.5375
447	862.1625	817.1625	495	863.3625	818.3625	543	864.5625	819.5625
448	862.1875	817.1875	496	863.3875	818.3875	544	864.5875	819.5875
449	862.2125	817.2125	497	863.4125	818.4125	545	864.6125	819.6125
450	862.2375	817.2375	498	863.4375	818.4375	546	864.6375	819.6375
451	862.2625	817.2625	499	863.4625	818.4625	547	864.6625	819.6625
452	862.2875	817.2875	500	863.4875	818.4875	548	864.6875	819.6875
453	862.3125	817.3125	501	863.5125	818.5125	549	864.7125	819.7125
454	862.3375	817.3375	502	863.5375	818.5375	550	864.7375	819.7375
455	862.3625	817.3625	503	863.5625	818.5625	551	864.7625	819.7625
456	862.3875	817.3875	504	863.5875	818.5875	552	864.7875	819.7875
457	862.4125	817.4125	505	863.6125	818.6125	553	864.8125	819.8125
458	862.4375	817.4375	506	863.6375	818.6375	554	864.8375	819.8375
459	862.4625	817.4625	507	863.6625	818.6625	555	864.8625	819.8625
460	862.4875	817.4875	508	863.6875	818.6875	556	864.8875	819.8875
461	862.5125	817.5125	509	863.7125	818.7125	557	864.9125	819.9125
462	862.5375	817.5375	510	863.7375	818.7375	558	864.9375	819.9375
463	862.5625	817.5625	511	863.7625	818.7625	559	864.9625	819.9625
464	862.5875	817.5875	512	863.7875	818.7875	560	864.9875	819.9875
465	862.6125	817.6125	513	863.8125	818.8125	561	865.0125	820.0125
466	862.6375	817.6375	514	863.8375	818.8375	562	865.0375	820.0375
467	862.6625	817.6625	515	863.8625	818.8625	563	865.0625	820.0625
468	862.6875	817.6875	516	863.8875	818.8875	564	865.0875	820.0875
469	862.7125	817.7125	517	863.9125	818.9125	565	865.1125	820.1125
470	862.7375	817.7375	518	863.9375	818.9375	566	865.1375	820.1375
471	862.7625	817.7625	519	863.9625	818.9625	567	865.1625	820.1625
472	862.7875	817.7875	520	863.9875	818.9875	568	865.1875	820.1875
473	862.8125	817.8125	521	864.0125	819.0125	569	865.2125	820.2125
474	862.8375	817.8375	522	864.0375	819.0375	570	865.2375	820.2375
475	862.8625	817.8625	523	864.0625	819.0625	571	865.2625	820.2625
476	862.8875	817.8875	524	864.0875	819.0875	572	865.2875	820.2875
477	862.9125	817.9125	525	864.1125	819.1125	573	865.3125	820.3125
478	862.9375	817.9375	526	864.1375	819.1375	574	865.3375	820.3375
479	862.9625	817.9625	527	864.1625	819.1625	575	865.3625	820.3625
480	862.9875	817.9875	528	864.1875	819.1875	576	865.3875	820.3875

800 MHz Channels

FCC Chan. No.	Mobile Rx Freq.	Mobile Tx Freq.	FCC Chan. No.	Mobile Rx Freq.	Mobile Tx Freq.	FCC Chan. No.	Mobile Rx Freq.	Mobile Tx Freq.
577	865.4125	820.4125	623	866.3000	821.3000	669	866.9000	821.9000
578	865.4375	820.4375	624	866.3125	821.3125	670	866.9125	821.9125
579	865.4625	820.4625	625	866.3250	821.3250	671	866.9250	821.9250
580	865.4875	820.4875	626	866.3375	821.3375	672	866.9375	821.9375
581	865.5125	820.5125	627	866.3500	821.3500	673	866.9500	821.9500
582	865.5375	820.5375	628	866.3625	821.3625	674	866.9625	821.9625
583	865.5625	820.5625	629	866.3750	821.3750	675	866.9750	821.9750
584	865.5875	820.5875	630	866.3875	821.3875	676	866.9875	821.9875
585	865.6125	820.6125	631	866.4000	821.4000	-	867.0000	822.0000
586	865.6375	820.6375	632	866.4125	821.4125	677	867.0125	822.0125
587	865.6625	820.6625	633	866.4250	821.4250	-	867.0250	822.0250
588	865.6875	820.6875	634	866.4375	821.4375	678	867.0375	822.0375
589	865.7125	820.7125	635	866.4500	821.4500	679	867.0500	822.0500
590	865.7375	820.7375	636	866.4625	821.4625	680	867.0625	822.0625
591	865.7625	820.7625	637	866.4750	821.4750	681	867.0750	822.0750
592	865.7875	820.7875	638	866.4875	821.4875	682	867.0875	822.0875
593	865.8125	820.8125	-	866.5000	821.5000	683	867.1000	822.1000
594	865.8375	820.8375	639	866.5125	821.5125	684	867.1125	822.1125
595	865.8625	820.8625	-	866.5250	821.5250	685	867.1250	822.1250
596	865.8875	820.8875	640	866.5375	821.5375	686	867.1375	822.1375
597	865.9125	820.9125	641	866.5500	821.5500	687	867.1500	822.1500
598	865.9375	820.9375	642	866.5625	821.5625	688	867.1625	822.1625
599	865.9625	820.9625	643	866.5750	821.5750	689	867.1750	822.1750
600	865.9875	820.9875	644	866.5875	821.5875	690	867.1875	822.1875
-	866.0000	821.0000	645	866.6000	821.6000	691	867.2000	822.2000
601	866.0125	821.0125	646	866.6125	821.6125	692	867.2125	822.2125
-	866.0250	821.0250	647	866.6250	821.6250	693	867.2250	822.2250
602	866.0375	821.0375	648	866.6375	821.6375	694	867.2375	822.2375
603	866.0500	821.0500	649	866.6500	821.6500	695	867.2500	822.2500
604	866.0625	821.0625	650	866.6625	821.6625	696	867.2625	822.2625
605	866.0750	821.0750	651	866.6750	821.6750	697	867.2750	822.2750
606	866.0875	821.0875	652	866.6875	821.6875	698	867.2875	822.2875
607	866.1000	821.1000	653	866.7000	821.7000	699	867.3000	822.3000
608	866.1125	821.1125	654	866.7125	821.7125	700	867.3125	822.3125
609	866.1250	821.1250	655	866.7250	821.7250	701	867.3250	822.3250
610	866.1375	821.1375	656	866.7375	821.7375	702	867.3375	822.3375
611	866.1500	821.1500	657	866.7500	821.7500	703	867.3500	822.3500
612	866.1625	821.1625	658	866.7625	821.7625	704	867.3625	822.3625
613	866.1750	821.1750	659	866.7750	821.7750	705	867.3750	822.3750
614	866.1875	821.1875	660	866.7875	821.7875	706	867.3875	822.3875
615	866.2000	821.2000	661	866.8000	821.8000	707	867.4000	822.4000
616	866.2125	821.2125	662	866.8125	821.8125	708	867.4125	822.4125
617	866.2250	821.2250	663	866.8250	821.8250	709	867.4250	822.4250
618	866.2375	821.2375	664	866.8375	821.8375	710	867.4375	822.4375
619	866.2500	821.2500	665	866.8500	821.8500	711	867.4500	822.4500
620	866.2625	821.2625	666	866.8625	821.8625	712	867.4625	822.4625
621	866.2750	821.2750	667	866.8750	821.8750	713	867.4750	822.4750
622	866.2875	821.2875	668	866.8875	821.8875	714	867.4875	822.4875

800 MHz Channels

FCC Chan. No.	Mobile Rx Freq.	Mobile Tx Freq.	FCC Chan. No.	Mobile Rx Freq.	Mobile Tx Freq.	FCC Chan. No.	Mobile Rx Freq.	Mobile Tx Freq.
-	867.5000	822.5000	759	868.1000	823.1000	807	868.7000	823.7000
715	867.5125	822.5125	760	868.1125	823.1125	808	868.7125	823.7125
-	867.5250	822.5250	761	868.1250	823.1250	809	868.7250	823.7250
716	867.5375	822.5375	762	868.1375	823.1375	810	868.7375	823.7375
717	867.5500	822.5500	763	868.1500	823.1500	811	868.7500	823.7500
718	867.5625	822.5625	764	868.1625	823.1625	812	868.7625	823.7625
719	867.5750	822.5750	765	868.1750	823.1750	813	868.7750	823.7750
720	867.5875	822.5875	766	868.1875	823.1875	814	868.7875	823.7875
721	867.6000	822.6000	767	868.2000	823.2000	815	868.8000	823.8000
722	867.6125	822.6125	768	868.2125	823.2125	816	868.8125	823.8125
723	867.6250	822.6250	769	868.2250	823.2250	817	868.8250	823.8250
724	867.6375	822.6375	770	868.2375	823.2375	818	868.8375	823.8375
725	867.6500	822.6500	771	868.2500	823.2500	819	868.8500	823.8500
726	867.6625	822.6625	772	868.2625	823.2625	820	868.8625	823.8625
727	867.6750	822.6750	773	868.2750	823.2750	821	868.8750	823.8750
728	867.6875	822.6875	774	868.2875	823.2875	822	868.8875	823.8875
729	867.7000	822.7000	775	868.3000	823.3000	823	868.9000	823.9000
730	867.7125	822.7125	776	868.3125	823.3125	824	868.9125	823.9125
731	867.7250	822.7250	777	868.3250	823.3250	825	868.9250	823.9250
732	867.7375	822.7375	778	868.3375	823.3375	826	868.9375	823.9375
733	867.7500	822.7500	779	868.3500	823.3500	827	868.9500	823.9500
734	867.7625	822.7625	780	868.3625	823.3625	828	868.9625	823.9625
735	867.7750	822.7750	781	868.3750	823.3750	829	868.9750	823.9750
736	867.7875	822.7875	782	868.3875	823.3875	830	868.9875	823.9875
737	867.8000	822.8000	783	868.4000	823.4000	-	869.0000	824.0000
738	867.8125	822.8125	784	868.4125	823.4125	-	869.0125	824.0125
739	867.8250	822.8250	785	868.4250	823.4250	-	869.0250	824.0250
740	867.8375	822.8375	786	868.4375	823.4375	-	869.0375	824.0375
741	867.8500	822.8500	787	868.4500	823.4500	-	869.0500	824.0500
742	867.8625	822.8625	788	868.4625	823.4625	-	869.0625	824.0625
743	867.8750	822.8750	789	868.4750	823.4750	-	869.0750	824.0750
744	867.8875	822.8875	790	868.4875	823.4875	-	869.0875	824.0875
745	867.9000	822.9000	791	868.5000	823.5000	-	869.1000	824.1000
746	867.9125	822.9125	792	868.5125	823.5125	-	869.1125	824.1125
747	867.9250	822.9250	793	868.5250	823.5250	-	869.1250	824.1250
748	867.9375	822.9375	794	868.5375	823.5375	-	869.1375	824.1375
749	867.9500	822.9500	795	868.5500	823.5500	-	869.1500	824.1500
750	867.9625	822.9625	796	868.5625	823.5625	-	869.1625	824.1625
751	867.9750	822.9750	797	868.5750	823.5750	-	869.1750	824.1750
752	867.9875	822.9875	798	868.5875	823.5875	-	869.1875	824.1875
-	868.0000	823.0000	799	868.6000	823.6000	-	869.2000	824.2000
753	868.0125	823.0125	800	868.6125	823.6125	-	869.2125	824.2125
-	868.0250	823.0250	801	868.6250	823.6250	-	869.2250	824.2250
754	868.0375	823.0375	802	868.6375	823.6375	-	869.2375	824.2375
755	868.0500	823.0500	803	868.6500	823.6500	-	869.2500	824.2500
756	868.0625	823.0625	804	868.6625	823.6625	-	869.2625	824.2625
757	868.0750	823.0750	805	868.6750	823.6750	-	869.2750	824.2750
758	868.0875	823.0875	806	868.6875	823.6875	-	869.2875	824.2875

800 MHz Channels

FCC Chan. No.	Mobile Rx Freq.	Mobile Tx Freq
---------------	-----------------	----------------

FCC Chan. No.	Mobile Rx Freq.	Mobile Tx Freq
---------------	-----------------	----------------

FCC Chan. No.	Mobile Rx Freq	Mobile Tx Freq
---------------	----------------	----------------

-	869.3000	824.3000
-	869.3125	824.3125
-	869.3250	824.3250
-	869.3375	824.3375
-	869.3500	824.3500
-	869.3625	824.3625
-	869.3750	824.3750
-	869.3875	824.3875
-	869.4000	824.4000
-	869.4125	824.4125
-	869.4250	824.4250
-	869.4375	824.4375
-	869.4500	824.4500
-	869.4625	824.4625
-	869.4750	824.4750
-	869.4875	824.4875
-	869.5000	824.5000
-	869.5125	824.5125
-	869.5250	824.5250

-	869.5375	824.5375
-	869.5500	824.5500
-	869.5625	824.5625
-	869.5750	824.5750
-	869.5875	824.5875
-	869.6000	824.6000
-	869.6125	824.6125
-	869.6250	824.6250
-	869.6375	824.6375
-	869.6500	824.6500
-	869.6625	824.6625
-	869.6750	824.6750
-	869.6875	824.6875
-	869.7000	824.7000
-	869.7125	824.7125
-	869.7250	824.7250
-	869.7375	824.7375
-	869.7500	824.7500
-	869.7625	824.7625

-	869.7750	824.7750
-	869.7875	824.7875
-	869.8000	824.8000
-	869.8125	824.8125
-	869.8250	824.8250
-	869.8375	824.8375
-	869.8500	824.8500
-	869.8625	824.8625
-	869.8750	824.8750
-	869.8875	824.8875
-	869.9000	824.9000
-	869.9125	824.9125
-	869.9250	824.9250
-	869.9375	824.9375
-	869.9500	824.9500
-	869.9625	824.9625
-	869.9750	824.9750
-	869.9875	824.9875

SECTION 4 CIRCUIT DESCRIPTION

4.1 GENERAL OVERVIEW

4.1.1 INTRODUCTION

The E.F Johnson 5100 series digital portable radio is a microcontroller-based radio that uses a Digital Signal Processor (DSP) to provide the following modes of operation:

Narrowband Analog - FM modulation with a maximum deviation of 2.5 kHz. This mode is usually used in systems where the channel spacing is 12.5 kHz. Call Guard (CTCSS or DCS) subaudible squelch signaling can be used in this mode.

Wideband Analog - FM modulation with a maximum deviation of 5 kHz. This mode is usually used in systems where the channel spacing is 25 kHz or 30 kHz. Call Guard (CTCSS or DCS) subaudible squelch signaling can be used in this mode.

Project 25 Digital - The voice is digitized, error corrected, optionally encrypted and transmitted using C4FM modulation according to the Project 25 standard. This mode can be used in channel spacings of 12.5 kHz.

The DSP processes the received signals and generates the appropriate output signals. The microcontroller controls the hardware and provides an interface between hardware and DSP.

PC Boards

This radio contains the following PC boards:

- RF Board
- Digital Board
- Keypad Board
- Four flex circuits that provide interconnection and support for the volume, on/off, and LED controls.
- Encryption board (optional)

The Keypad Board provides the input/output interface for the user. It accepts input from the keypad and the various control knobs and sends the appropriate signals to the DSP on the Digital Board and to the RF Board for proper configuration. It provides the dual display information to inform the user of the status of the radio. It also performs all RS-232 communications between the radio and remote computer stations for the purposes of radio programming, tuning, encryption key loading and software downloading.

4.1.2 ANALOG MODE

Receive Mode

The signal is routed from the antenna connector to the RF Board where it is filtered, amplified, and mixed with the first local oscillator frequency generated by the synthesizer. The resulting IF signal is also filtered and amplified and sent to the ABACUS chip.

The signal is then mixed with the second local oscillator frequency to create a second IF signal of 450 kHz. The second IF signal is then sampled at 14.4 Msp/s and downconverted to baseband. The baseband signal is then decimated to a lower sample rate that is selectable at 20 kHz. This signal is then routed via a serial interface using a differential current output to the ADSIC chip on the Digital Board.

On the Digital Board the ADSIC digitally filters the input signal, performs frequency discrimination to obtain the message signal and then routes the message signal to the DSP. The DSP first performs a carrier-detection squelch function on the radio. If a signal is determined to be present, the audio portion of the signal is resampled to an 8 kHz rate and then filtered appropriately. The filtered signal is then routed back to a D/A in the ADSIC to produce an analog signal for output to the audio power amplifier (PA) and then the speaker. Any detected signaling information is decoded and the resulting information is sent to the microcontroller.

Transmit Mode

The signal from the microphone is amplified by the audio PA and is then routed to the ADSIC chip where it is first digitized at a 16 ksps rate and then sent to the DSP. The DSP performs the required filtering, adds the desired signaling, converts the sample rate to 48 ksps and then sends the resulting signal back to a D/A in the ADSIC to produce the analog modulation signal for the VCO. The modulated VCO signal is then sent to the RF PA for transmission.

4.1.3 PROJECT 25 DIGITAL MODE

Introduction

In Project 25 Digital Mode, the carrier is modulated with 4 discrete deviation levels. These levels are ± 600 Hz and ± 1800 Hz. Digitized voice is created using an IMBETM vocoder.

Receive Mode

The signal is processed in the same way as an analog mode transmission until after the squelch function is performed. If a signal is detected to be present, the DSP resamples the signal from 20 kHz to 24 kHz. This is done so that the sample rate is an integer multiple (5x) of the data rate of the digital modulation which is 4800 symbols/sec (9600 bits/sec).

The resampled signal is then processed by a demodulator routine to extract the digital information. The resulting bit stream (9600 bps) is sent to a routine that performs unframing, error-correction, and voice decoding. The result of these operations is a reconstructed voice signal sampled at 8 kHz. The sampled voice signal is sent to a D/A in the ADSIC to produce an analog signal for output to the audio power amplifier and speaker.

Transmit Mode

The microphone signal is processed as in the analog mode until it reaches the DSP. At this point the audio signal is processed by a voice encoding routine to digitize the information. The resulting samples are then converted to a bit stream that is placed into the proper framing structure and error protected. The resulting bit stream has a bit rate of 9600 Hz.

This bit stream is then encoded, two bits at a time, into a digital level corresponding to one of the four allowable frequency deviations. This produces 16-bit symbols with a rate of 4800 Hz. The symbols are resampled to a rate of 48 kHz and filtered to comply with channel bandwidth requirements. The filtered signal is then sent to a D/A in the ADSIC to produce the analog modulation signal for the VCO. The modulated VCO signal is then mixed up to the final transmit frequency and then sent to the RF PA for transmission.

4.1.4 RF BOARD

NOTE: The RF Board is not field serviceable. It must be replaced as a unit with a new board.

The receiver front end consists of a preselector, RF amplifier, second preselector, and mixer. Both preselectors on the VHF and UHF board are varactor-tuned, two-pole filters controlled by the microcontroller unit through the D/A IC. The 800 MHz board uses stripline technology for the preselector. The RF amplifier is a dual-gate gallium-arsenide IC. The mixer is a double-balanced, transformer-coupled active mixer. Injection is provided by the VCO through an injection filter. See Table 4-1 for local oscillator (LO) and first IF information.

Table 4-1 LO and First IF Frequencies

	VHF	UHF	800 MHz
LO Frequency range	181.15 - 219.15 MHz	329.65 - 446.65 MHz	776.65 - 796.65 MHz
First IF Frequency	45.15 MHz	73.35 MHz	73.35 MHz

The frequency generation function is performed by three ICs and associated circuitry. The reference oscillator provides a frequency standard to the synthesizer/prescaler IC which controls the VCO IC. The VCO IC actually generates the first LO and transmit injection signals and buffers them to the required power level. The synthesizer/prescaler circuit module incorporates frequency division and comparison circuitry to keep the VCO signals stable. The synthesizer/prescaler IC is controlled by the microcontroller through a serial bus. Most of the synthesizer circuitry is enclosed in rigid metal on the RF Board to reduce microphonic effects.

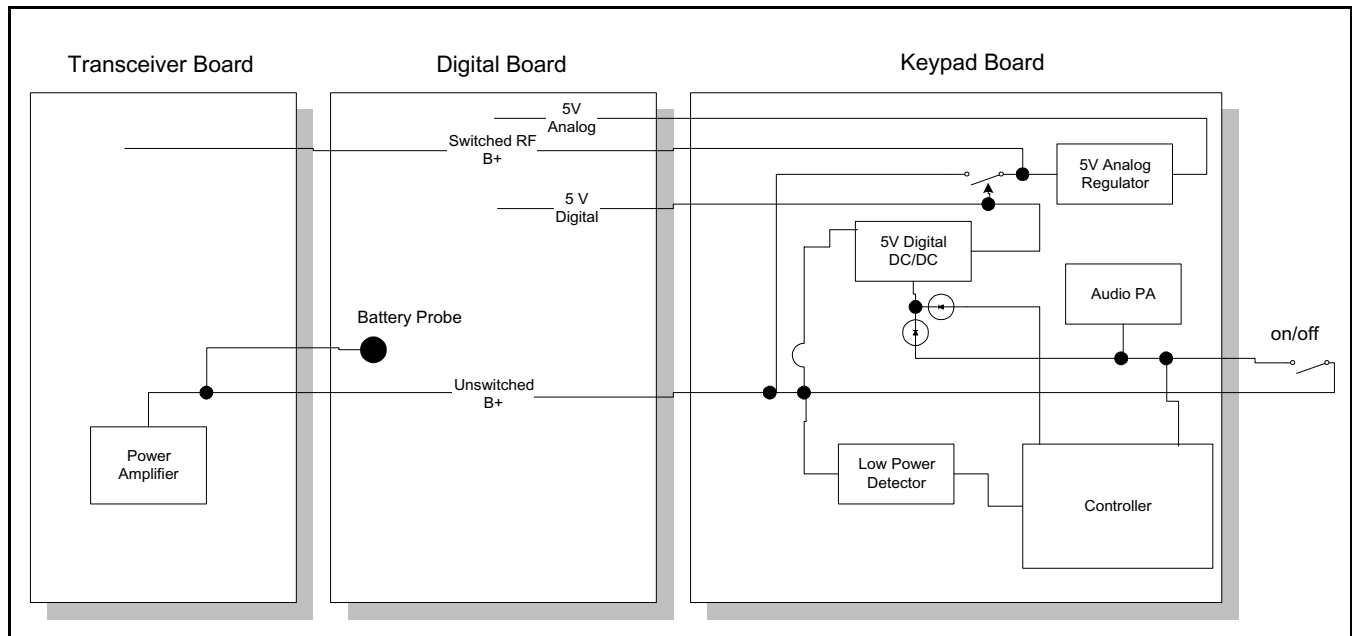


Figure 4-1 Power Supply Diagram

The receiver back end consists of a two-pole crystal filter, IF amplifier, a second two-pole crystal filter, and the ABACUS digital back-end IC. The two pole filters are wide enough to accommodate 5 kHz modulation. Final IF filtering is done digitally in the ADSIC.

The ABACUS digital back-end chip consists of an amplifier, second mixer, IF analog-to-digital converter, a baseband down-converter, and a 2.4 MHz synthesis circuit to provide a clock to the ADSIC on the Digital Board. The second LO is generated by discrete components external to the ABACUS. The output of the ABACUS is a digital bit stream that is current driven on a differential pair to reduce noise generation.

The transmitter consists of an RF power amplifier IC that amplifies an injection signal from the VCO. Transmit power is controlled by two custom ICs that monitor the output of a directional coupler and adjust the power amplifier control voltages correspondingly. The signal passes through a Rx/Tx switch that uses PIN diodes to automatically provide an appropriate interface to transmit or receive signals.

4.1.5 DIGITAL BOARD

The Digital Board contains the ADSIC, DSP (TMS320C50), static RAM, FLASH memory, and a programmable logic IC. The RF Board and Keypad/Display Board are connected to the Digital Board. The ADSIC performs the Frequency Discrimination and receiver filtering functions. It also performs analog-to-digital (A/D) and digital-to-analog (D/A) conversion. The DSP performs demodulation and modulation, voice encoding and decoding, audio filtering, and squelch signaling. The software for the radio is stored in FLASH memory that is loaded in to static RAM at turn-on. The programmable logic IC controls which device (Flash, SRAM, or UART) is connected to the DSP address and data bus.

4.1.6 KEYPAD/DISPLAY BOARD

The Keypad Board contains the microcontroller (HC08), audio circuits, front LCD display assembly, display driver, and 5V analog and 5V digital regulators. All interfaces to the side connector and the switches are on this board. The microcontroller determines transmit/receive frequencies, power levels, and display content. It communicates with the DSP via a serial interface.

4.2 POWER SUPPLY

4.2.1 GENERAL

The radio is typically powered by a battery which is fastened at the back of the radio. The electrical contact between the battery and the radio occurs on probes located on the Digital board (see Figure 4-1). However the positive battery voltage (UNSWB+) is directly routed through a small flex circuit (Power Flex) to contacts located on the bottom of the RF Board.

The UNSWB+ signal is then routed to the RF power amplifier module and ALC IC on the RF Board. It also passes through a fuse and is then routed to the Digital Board.

The UNSWB+ signal passes through the Digital Board without being used and is transferred to the Keypad Board. On the keypad board, the UNSWB+ signal is routed as follows:

- Input of the 5V digital regulator
- Electronic switch which controls the input of the 5V analog regulator and the “switched RF B+”
- “On/off switch” located on the top of the radio
- Low voltage detector
- Audio amplifier power FET

4.2.2 POWER ON OPERATION

When the user turns the radio on using the top panel “on/off switch”, the following sequence of events occur:

1. Power is applied to the shutdown pin of the 5V digital regulator.
2. The 5-volt digital supply is created.
3. The appearance of the 5V digital supply turns on the electronic switch which applies the battery voltage to the “Switched RF B+” line and to the input of the 5V analog regulator.
4. The 5-volt analog supply is created.
5. If the battery voltage is high enough, the low voltage detector output goes high.

6. The controller sets the control line to the shutdown pin of the DC/DC converter to a high level.
7. The controller sets the radio in an operational mode.

4.2.3 POWER OFF OPERATION

When the user turns the radio off using the top panel “on/off switch”, the following sequence of events occur:

1. The “on/off switch” opens.
2. Power is removed from the shutdown pin of the 5V DC/DC converter.
3. The controller detects that the power is off through the pin connected to Switched B+.
4. The controller performs all required save operations.
5. The controller resets the control line to the shutdown pin of the DC/DC converter.
6. The 5-volt Digital source disappears.
7. The electronic switch opens.
8. The switched RF B+ and 5V analog sources disappear.

4.2.4 LOW VOLTAGE DETECT

Low battery voltage is detected by a comparator chip. When a low voltage condition is detected (less than 6.3V), the following actions occur:

1. The low voltage detector output goes low which alerts the controller.
2. The controller prevents any action which could have a damaging effect (like writing in flash memory).
3. The controller releases its control of the shutdown pin of the DC/DC converter.
4. The transmitter switches to the low power mode.

RF BOARD

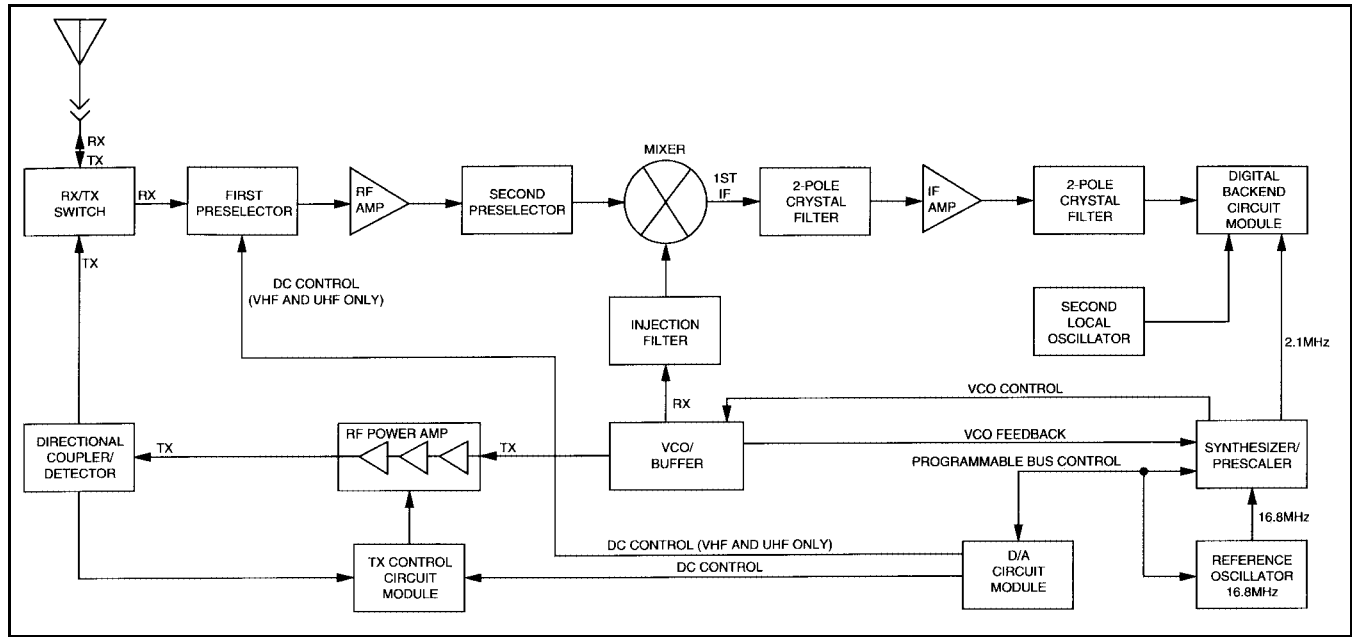


Figure 4-2 RF Board Block Diagram

5. When the voltage gets really low, the 5 volt DC/DC converter automatically shuts down.
6. The 5-volt analog and switched RF B+ sources turn off.

4.3 RF BOARD CIRCUIT DESCRIPTION

4.3.1 FREQUENCY GENERATION UNIT

The Frequency Generation Unit (FGU) consists of these three major sections: (1) high stability reference oscillator, (2) fractional-N synthesizer, and (3) VCO buffer. A 5-volt regulator supplies power to the FGU. The regulator output voltage is filtered and then distributed to the transmit and receive VCOs and the VCO buffer IC. The mixer LO injection signal and transmit frequency are generated by the receive VCO and transmit VCO, respectively. The receive VCO uses an external active device, and the transmit VCO active device is a transistor inside the VCO buffer.

The receive VCO is a Colpitts-type oscillator. The receive VCO signal is received by the VCO buffer where it is amplified by a buffer inside the IC. The amplified signal is routed through a low-pass filter and injected as the first LO signal into the mixer. In the VCO buffer, the receive VCO signal is also routed to an internal prescaler buffer. The buffered output is

applied to a low-pass filter. After filtering, the signal is routed to a prescaler divider in the synthesizer.

The divide ratios for the prescaler circuits are determined from information stored in an EEPROM. The microprocessor extracts data for the division ratio as determined by the position of the channel-select switch and routes the signal to a comparator in the synthesizer. A 16.8 MHz reference oscillator applies the 16.8 MHz signal to the synthesizer. The oscillator signal is divided into one of three pre-determined frequencies. A time-based algorithm is used to generate the fractional-N ratio.

If the two frequencies in the synthesizer's comparator differ, an error voltage is produced. The phase detector error voltage is applied to the loop filter. The filtered voltage alters the VCO frequency until the correct frequency is synthesized.

In the transmit mode, the modulation of the carrier is achieved by using a two-port modulation technique. The modulation for low frequency tones, such as CTCSS and DCS, is achieved by injecting the tones into the A/D section of the fractional-N divider, generating the required deviation. Modulation of the high frequency audio signals is achieved by modulating the varactor through a frequency compensation network.

RF BOARD (CONT'D)

The transmit VCO signal is amplified by an internal buffer, routed through a low-pass filter, and then sent to the transmit power amplifier module. The reference oscillator supplies a 16.8 MHz clock to the synthesizer where it is divided down to a 2.1 MHz clock. This divided down clock is fed to the ABACUS IC.

4.3.2 ANTENNA SWITCH

A pair of diodes is used to electronically steer the RF signal between the receiver and transmitter. In the transmit mode, RF is routed through a transmit switching diode and sent to the antenna. In receive mode, RF is received from the antenna, routed through a receive switching diode and applied to the RF amplifier.

4.3.3 RECEIVER FRONT END

The RF signal from the antenna is sent through a bandpass filter. The bandpass filter is electronically tuned by the microcontroller via the D/A IC by applying a control voltage to the varactor diodes in the filter. The D/A output range is extended through the use of a current mirror. Wideband operation of the filter is achieved by retuning the bandpass filter across the band.

The output of the bandpass filter is applied to a wideband amplifier. After being amplified by the RF amplifier, the RF signal is further filtered by a second broadband, fixed tuned, bandpass filter to improve spurious rejection.

The filtered RF signal is routed via a broadband 50 Ω transformer to the input of a broadband mixer/buffer. The mixer uses GaAs FETs in a double-balanced Gilbert Cell configuration. The RF signal is mixed with a first LO signal of about -10 dBm supplied by the FGU. Mixing of the RF and the first LO results in an output signal which is the first IF frequency according to Figure 4-1. The first IF signal output is routed through a transformer and impedance matching components and is then applied to a two-pole crystal filter. The 2-pole crystal filter removes unwanted mixer products.

4.3.4 RECEIVER BACK END

The output of the crystal filter is matched to the input of the IF buffer amplifier transistor. The output

of the IF amplifier is applied to a second crystal filter through a matching circuit. This filter supplies further attenuation at the IF sidebands to increase radio selectivity.

In the ABACUS IC the first IF frequency is amplified and then downconverted to 450 KHz, the second IF frequency. At this point, the analog signal is converted into two digital bit streams via a sigma-delta A/D converter. The bit streams are then digitally filtered and mixed down to baseband and filtered again. The differential output data stream is then sent to the ADSIC on the Digital Board where it is processed to produce the recovered audio.

The ABACUS IC is electronically programmable, and the amount of filtering, which is dependent on the radio channel spacing and signal type, is controlled by the microcontroller. Additional filtering, which used to be provided externally by a conventional ceramic filter, is replaced by internal digital filters in the ABACUS IC. The ABACUS IC contains a feedback AGC circuit to expand the dynamic range of the sigma-delta converter. The differential output data contains the quadrature (I and Q) information in 16-bit words, the AGC information in a 9-bit word, imbedded word sync information and fill bits dependent on sampling speed. A fractional-N synthesizer is also incorporated on the ABACUS IC for 2nd LO generation.

The 2nd LO/VCO is a Colpitts oscillator. The VCO has a varactor diode to adjust the VCO frequency. The control signal for the varactor is derived from a loop filter.

4.3.5 TRANSMITTER

The transmitter consists of three major sections: Harmonic Filter, RF Power Amplifier, and the ALC (Automatic Level Control) circuit.

The RF signal from the PA module is routed through a coupler, then through the harmonic filter, then to the antenna switch. The RF power amplifier module is a wide-band multi-stage amplifier. The nominal input and output impedance of the power amplifier is 50 Ω . The DC bias for the RF power amplifier is controlled by a switching transistor. The microcontroller uses the D/A IC to produce a ready

REVISION 2 DIGITAL BOARD

signal for the transmit ALC IC. The synthesizer sends a LOC signal to the transmit ALC IC. When both the ready signal and LOC signal are available to the transmit ALC IC, the switching transistor for the RF power amplifier is turned on.

A coupler module samples the forward power and the reverse power of the PA output voltage. Reverse power is present when there is other than 50 Ω impedance at the antenna port. Sampling is achieved by coupling some of the forward and/or reverse power for rectification and summing. The resulting DC voltage is then applied to the transmit ALC IC as an RF strength indicator.

The transmit ALC circuit is the core of the power control loop. Circuits in the transmit ALC module compare the RF strength indicator to a reference value and generate a bias signal that is applied to the base of a transistor. This transistor varies the DC control voltage applied to the RF PA controlling the RF power.

4.4 DIGITAL BOARD

4.4.1 INTRODUCTION

The Digital Signal Processing (DSP) functions are performed by the DSP chip (U12) and the ADSIC (U3) with the support of FLASH (U2) and SRAM (U5, U6) memory devices. Functions previously performed in hardware like filtering and limiting are performed by software running in the DSP chip. The digital board connects with the Keypad Board via J4 and with the RF board via J1.

4.4.2 DIGITAL SIGNAL PROCESSING OVERVIEW

The DSP section consists of a DSP chip (U12), the ADSIC (U3), two 128K x 8-bit Static RAM chips (U5, U6), one 512K x 16-bit FLASH ROM memory chip (U2), a UART chip (U7), a programmable logic IC (U1), and two glue-logic chips (U4, U9). The FLASH ROM contains the program code executed by the DSP. Depending on the operational mode selected for the radio, different sections of the program code in the FLASH ROM are copied into SRAM for faster execution.

The ADSIC is a support chip for the DSP. It provides the interface between the DSP and the analog signal paths, and between the DSP and the ABACUS chip on the RF Board. Configuration of the ADSIC is handled primarily by the microcontroller. The DSP has access to a few memory-mapped registers on the ADSIC.

In receive mode, the ADSIC interfaces the DSP with the ABACUS IC on the RF Board. The ADSIC collects the I and Q samples from the ABACUS and performs channel filtering and frequency discrimination on the signals. The resulting demodulated signal is routed to the DSP via the serial port for further processing. After the DSP processing, the signal is sent to the ADSIC Speaker D/A by writing to a memory-mapped register. The ADSIC then converts the processed signal from the DSP to an analog signal and then outputs this signal to the speaker power amplifier on the keypad board.

In transmit mode the ADSIC Microphone A/D digitizes the analog signal from the microphone. The DSP reads these values from a memory-mapped register in the ADSIC. After processing, the DSP sends the modulation signal to the ADSIC via the serial port. In the ADSIC, the VCO D/A converts the sampled modulation signal into an analog signal and then routes this signal to the VCO on the RF Board.

4.4.3 RECEIVE SIGNAL PATH

The ABACUS IC on the RF Board provides a digital back end for the receiver section. It provides a digital output of I (in phase) and Q (quadrature) samples which represent the IF signal at the receiver back end. These samples are routed to the ADSIC where the signal is filtered and frequency discriminated to recover the modulating signal.

The recovered signal is sent to the DSP chip for processing. The ADSIC interface to the ABACUS is comprised of four signals SBI, DIN, DIN*, and ODC. The ODC signal is a clock the ABACUS provides to the ADSIC. Most internal ADSIC functions are clocked by this ODC signal at a rate of 2.4 MHz and are available as soon as the power is supplied to the circuitry. This signal initially may be 2.4 or 4.8 MHz after power-up. It is programmed by the ADSIC through the SBI signal to 2.4 MHz when the ADSIC is

DIGITAL BOARD (CONT'D)

initialized by the microcontroller through the SPI bus. For any functionality of the ADSIC to exist, including initial programming, the reference clock must be present.

SBI is a programming data line for the ABACUS. This line is used to configure the operation of the ABACUS and is driven by the ADSIC. The microcontroller programs many of the ADSIC operational features through the SPI interface. There are 36 configuration registers in the ADSIC of which 4 contain configuration data for the ABACUS. When these particular registers are programmed by the microcontroller, the ADSIC in turn sends this data to the ABACUS through the SBI.

DIN and DIN* are the data lines in which the I and Q data words are transferred from the ABACUS. These signals make up a differentially encoded current loop. Instead of sending TTL-type voltage signals, the data is transferred by flowing current one way or the other through the loop. This helps reduce internally generated spurious emissions on the RF Board. The ADSIC contains an internal current loop decoder which translates these signals back to TTL logic and stores the data in internal registers.

The ADSIC performs digital IF filtering and frequency discrimination on the signal, sending the baseband demodulated signal to the DSP. The internal digital IF filter is programmable with up to 24 taps. These taps are programmed by the microcontroller through the SPI interface.

The DSP processes this data through the SSI serial port. This is a six-port synchronous serial bus. The ADSIC transfers the data to the DSP on the TxD line at a rate of 2.4 MHz. This is clocked synchronously by the ADSIC which provides a 2.4 MHz clock on SCKT. In addition, a 20 kHz interrupt is provided on TFS to signal the arrival of a data packet. This means a new I and Q sample data packet is available to the DSP at a 20 kHz rate which represents the sampling rate of the received data. The DSP then processes this data to extract audio, signaling, and other information based on the 20 kHz interrupt.

In addition to the SPI programming bus, the ADSIC also contains a parallel configuration bus. This bus is used to access registers mapped into the DSP

memory. Some of these registers are used for additional ADSIC configuration controlled directly by the DSP. Some of the registers are data registers for the speaker D/A. Analog speaker audio is processed through this parallel bus where the DSP outputs the speaker audio digital data words to this speaker D/A. In addition, an analog waveform is generated which is output to SDO (Speaker Data Out).

In conjunction with speaker D/A, ADSIC contains a programmable attenuator to set the rough signal attenuation. However, the fine levels and differences between signal types are adjusted through the DSP software algorithms. The speaker D/A attenuator setting is programmed by the microcontroller through the SPI bus.

The ADSIC provides an 8 kHz interrupt to the DSP on IRQB for processing the speaker data samples. This 8 kHz signal must be enabled through the SPI programming bus by the microcontroller and is necessary for any audio processing to occur.

4.4.4 TRANSMIT SIGNAL PATH

The ADSIC contains an analog-to-digital (ADC) converter for the microphone. The microphone path in the ADSIC also includes an attenuator that is programmed by the microcontroller through the SPI bus. The microphone input in the ADSIC is on pin MAI (U3-19). The microphone ADC converts the analog signal to a series of data words and stores them in internal registers. The DSP accesses this data through the parallel data bus. As with the speaker data samples, the DSP reads the microphone samples from registers mapped into its memory space. The ADSIC provides an 8 kHz interrupt to the DSP on IRQB for processing the microphone data samples.

The DSP processes these microphone samples and generates and mixes the appropriate signaling and filters the resultant data. This data is then transferred to the ADSIC on the DSP SSI port. The ADSIC generates a 48 kHz interrupt so that a new sample data packet is transferred at a 48 kHz rate and sets the transmit data sampling rate at 48 ksps. These samples are then input to a transmit D/A which converts the data to an analog waveform. This waveform is the modulation signal from the ADSIC and is connected to the VCO on the RF Board.

DIGITAL BOARD (CONT'D)

4.4.5 DSP CHIP (U12)

DSP chip U12 has a 16-bit data bus and a 16-bit address bus. It has 10K words of internal SRAM from which 0.5K are used only to store data and 9.5K are used either for data or for program storage. The DSP bus can access through its buses the following external devices:

SRAM U5 and U6 - These two chips are 128K x 8 chips. U5 stores the lower byte of the word while U6 stores the higher byte. Those chips are selected by asserting CE2 high and CE1* low. The programmable logic IC is responsible for controlling the select lines of these ICs.

FLASH ROM U2 - This chip is 512K x 16 words in size. It is selected by asserting CE* low. The programmable logic IC is responsible for controlling the select line of this IC.

ADSIC U3 - The ADSIC contains several registers which can be read from or written to by the DSP. The ADSIC IC has an output which drives a data/address bus enable signal for the programmable logic IC.

UART U7 - This chip converts data from the DSP into serial data. It is used to interface with the optional encryption board.

Programmable Logic U1 - This IC arbitrates access to the DSP's address/data bus between the flash (U2), SRAMs (U5,U6), and UART (U7). The DSP can modify the memory configuration by writing to a series of registers in the programmable logic IC. In order to reduce power consumption, the programmable logic IC can be "disconnected" from the DSP's address/data bus using the bus enable input on the programmable logic IC (pin 44).

The DSP uses memory as data space, program space, and I/O space as follows. Refer to Figure 4-3 for more information.

Program Space - Internal SRAM, external SRAM, and FLASH memory.

Data Space - Internal SRAM and external SRAM.

I/O Space - Programmable logic IC, ADSIC, and the UART.

The DSP accesses the difference spaces by setting the corresponding lines PS*, DS*, IS* low. Only one of these three signals can be low at a given time. When the DSP accesses internal SRAM, none of these lines is activated.

The programmable logic IC (PLD) acts as the primary arbitrator of the DSP's memory map. The FLASH ROM and the SRAM are both mapped in the program space and cannot both be active at the same time. The DSP may control which type of memory is mapped in program space by enabling the programmable logic IC (PLD), then manipulating a register in the PLD. In addition, the DSP can manipulate other registers to control paging of both the Flash and the SRAM. Paging refers to the swapping of 64K word blocks of Flash or SRAM into or out of the DSP's memory map.

FLASH ROM U2 is used to permanently store the program to be executed in the DSP. However, it is slow to access, so to fully utilize the speed of the DSP, the program stored in the FLASH ROM must be copied into the SRAM. As the size of the SRAM is half the size of the FLASH ROM, only the code required for the current mode of operation is copied in the SRAM. As previously mentioned, the FLASH ROM and the SRAM cannot be active at the same time. Thus we use the internal data memory as a temporary buffer to transfer the program from the FLASH ROM to the SRAM.

The following hardware interrupts are used on the DSP:

Interrupt	Description
INT1*	8 kHz interrupt for speaker DAC and microphone ADC from ADSIC
INT2*	125 kHz signal from ADSIC
INT3*	2 kHz timer interrupt from the Controller on the Keypad Board.
INT4*	Interrupt from the UART
NMI*	Not used

Connector J2 allows connection to an emulator for debugging purposes. The emulator connects to some dedicated pins on the DSP.

DIGITAL BOARD (CONT'D)

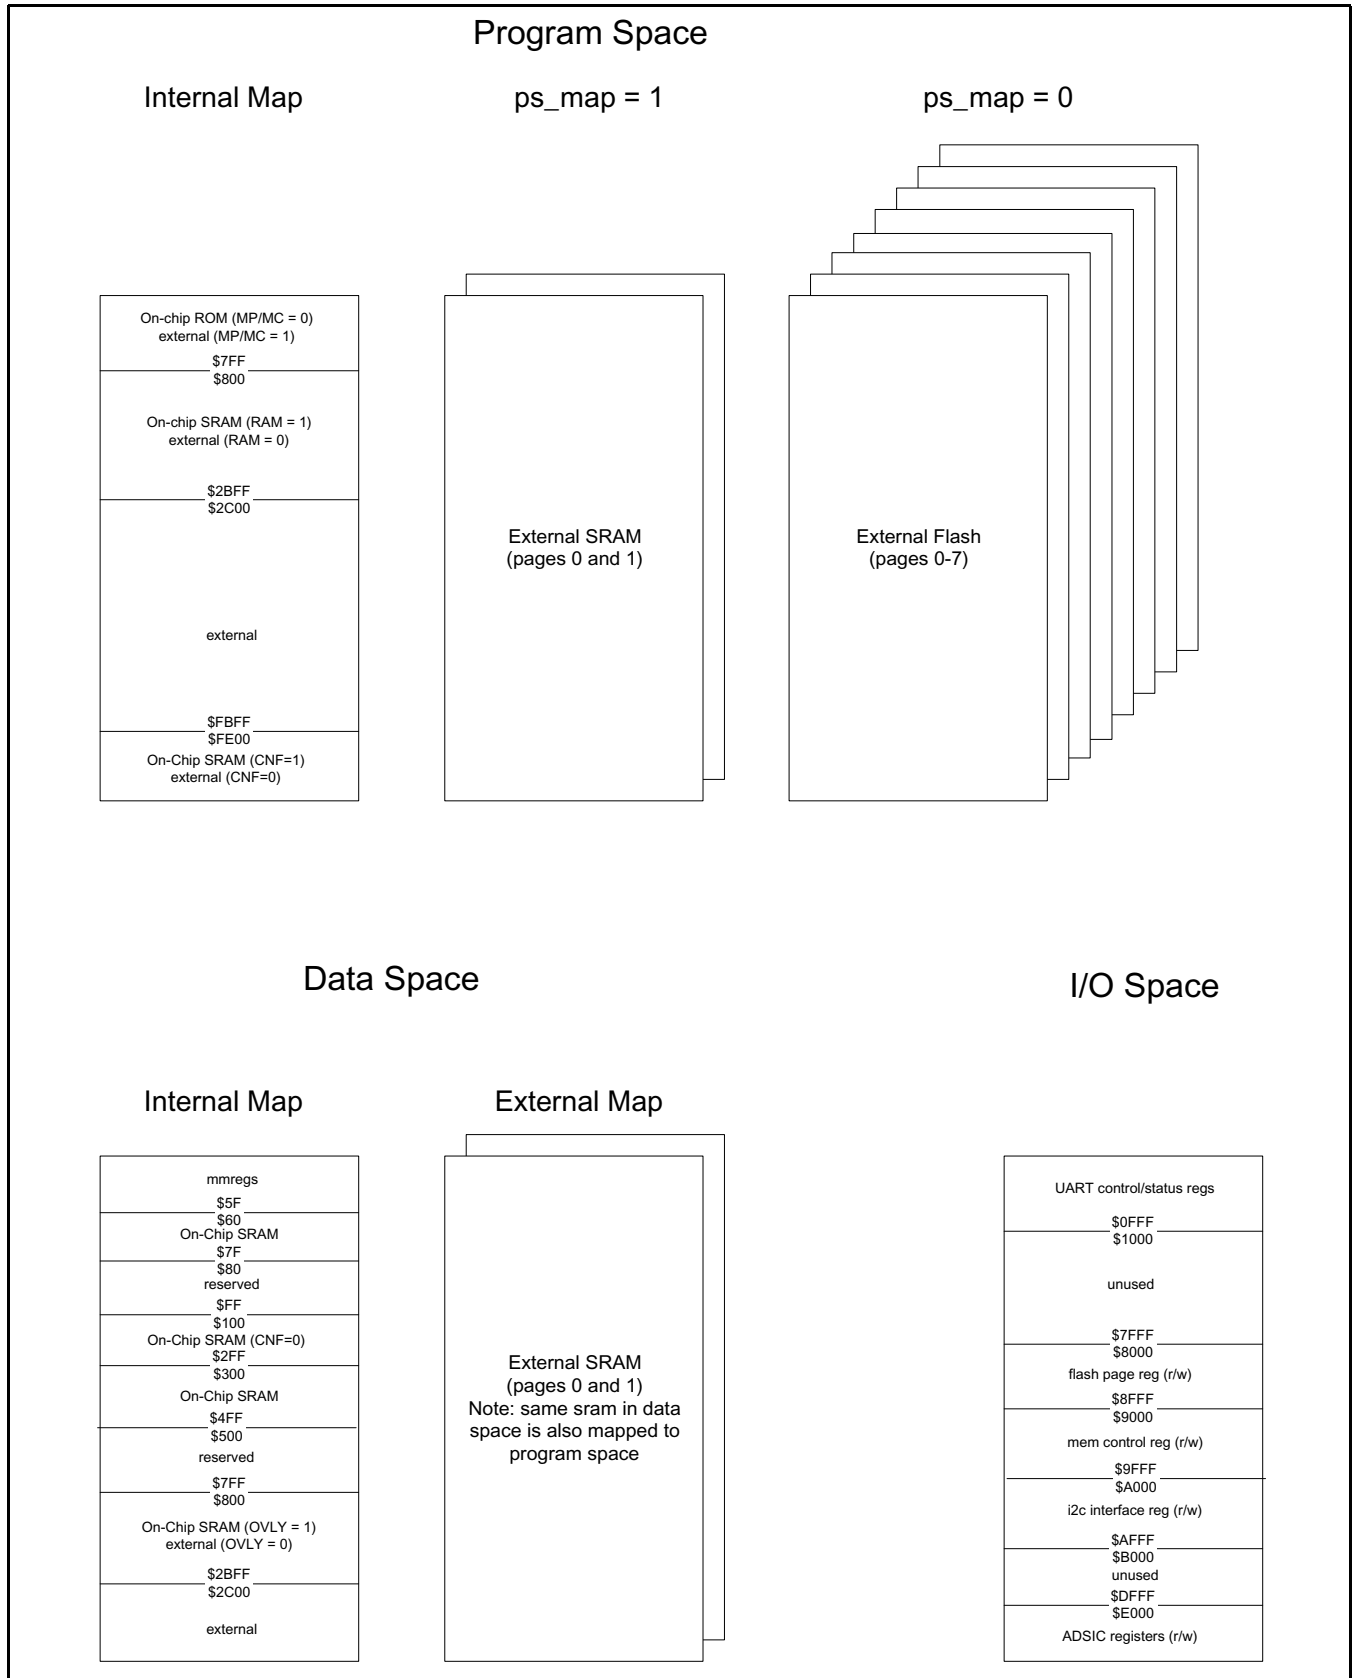


Figure 4-3 Memory Utilization

DIGITAL BOARD (CONT'D)

4.4.6 UART

The UART performs parallel to serial and serial to parallel conversion. The serial format used is a 9-bit format with start and stop bits. The serial transmission speed is 19200 bps. The UART appears as eight registers visible in the I/O space of the DSP starting at every multiple of 0008h from 0000h to 07FFh. U11 performs the address decoding by selecting the UART when both IS* and A15 are low. Crystal Y2 along with the internal oscillator of the UART provides the clock required to generate the correct bit rate on the serial output of the UART.

When the UART receives a new serial word or is ready to accept a new word to send from the DSP, it generates an interrupt on INTRN. This pin is connected to one of the hardware interrupt lines on the DSP. The DSP responds by reading the status register in the UART and by answering accordingly.

4.4.7 ADSIC

The ADSIC is a complex custom IC which performs many analog-to-digital, digital-to-analog, and purely digital functions as previously described. The ADSIC has four internal registers accessible by the DSP. They are selected through the use of address lines A15, A14, A13, A2, A1, A0, IS* (IS* needs to be inverted with U4 to be compatible with the logic level required by the ADSIC), RD*, and WR*. Two of these registers are read-only while the two others are write-only. Therefore, they can be accessed as two locations in the I/O spaces. Due to the decoding performed, those locations appear at the following addresses: Fxx0h, Fxx1h, Fxx8h, Fxx9h, Exx0h, Exx1h, Exx8h, and Exx9h.

Crystal Y1 along with the internal oscillator in the ADSIC provide a 20 MHz clock. This clock signal is used internally by the ADSIC and is also multiplied by two to provide a 40 MHz clock to the DSP. The frequency of the clock can be electronically shifted a small amount by controlling varicap D1 through the OSCW pin (U3-97). This removes interference created on some channels by the clock.

The ADSIC and DSP exchange the sampled receive data and the sampled VCO modulation signal through a serial port. This serial port consists of pins

SCKR*, RFS, RxD, TxD, SCKT, and TFS on the ADSIC. U21 and U1 modify the relative phase of TxD and TFS to be compatible with the timing required on the serial port of the DSP.

SDO is the output of the internal speaker DAC. MAI is the input of the internal microphone attenuator and is followed by the microphone ADC.

The ADSIC is configured partially by the DSP through its data and address bus (see preceding). However, most of the configuring is provided through an SPI compatible serial bus. This SPI serial bus consists of pins SEL*, SPD, and SCLK. The other side of this bus is connected to the controller on the Keypad Board.

4.5 KEYPAD BOARD

4.5.1 INTRODUCTION

The Keypad Board contains a microcontroller, LCD Display, Display Driver, Audio circuits, and Power supply. The Keypad Board interfaces with the Digital board via J4, with the Top Control rigid flex circuit via J13, and with the side buttons, PTT switch, and accessory connector through J5.

4.5.2 FUNCTIONAL DESCRIPTION

The microcontroller provides an interface between the hardware and the DSP (on the Digital Board). When the user presses or rotates a control such as the channel selector switch, a side option or PTT switch, or a keypad key, the microcontroller signals the change to the DSP. Conversely, when the DSP needs to change the display or an LED, it signals the microcontroller which then performs the action. The microcontroller also controls peripheral ICs such as the synthesizer, reference oscillator, display, and ADSIC.

The microcontroller uses a serial bus to communicate with the DSP and another RS232 bus to communicate with the side port connector. The side connector bus is used for external communication with a computer running the programming or tuning software. Finally, the microcontroller maintains certain operating parameters in the associated EEPROM which is controlled via a two-wire serial bus.

KEYPAD BOARD (CONT'D)

4.5.3 MICROCONTROLLER

The microcontroller is a Motorola M68HC08XL36 chip. It includes 28K bytes of internal ROM memory and 1K byte of internal SRAM. It does not have an external bus and therefore cannot access any external program memory.

The clock to the microcontroller is provided by Y1 and an internal oscillator. The frequency of the clock can be slightly offset by polarizing the base of Q3 through software control. This prevents RF interference on some channels caused by the clock.

The microcontroller contains an SPI-compatible synchronous serial bus. This bus consists of pins MISO (U1-53), MOSI (U1-52), SPCK (U1-50), and a chip enable for each device with which it communicates. The devices which communicate with the microcontroller through this bus are as follows:

- Top Display driver chip (Top Display board)
- Front Display driver chip (Digital board)
- ADSIC chip (Digital board)
- Reference Oscillator (RF Board)
- Front-End DAC (RF Board)
- Synthesizer chip (RF Board)
- Optional DES board.

The microcontroller communicates with the DSP chip (Digital board) through a custom serial bus. This serial port includes pins PTA3 (U1-8), PTA4 (U1-9), PTA5 (U1-10), PTA6 (U1-11), and PTA7 (U1-12).

The microcontroller uses its SCI asynchronous serial bus for external communication with a computer running programming or tuning software. The SCI pins RxD (U1-42) and TxD (U1-43) are connected to RS232 driver receiver U5. The other signals of a standard RS232 computer port (DSR, DTR, CTS, RTS) are generated using microcontroller input/outputs.

The RS232 driver U5 converts signals from a logic level of 0 and 5 V to a logic level of -10 and +10V. The chip contains an internal charge pump to generate -10V and +10V from the 5V power supply. The RS232 chip can be put in standby mode by leaving the line K/F-RS232* floating. This line is connected to the side connector which allows it to turn on U5 only when a computer is connected to the radio.

The keypad interfaces with the microcontroller through eight lines (4 rows x 4 columns). The microcontroller regularly polls these lines to detect a key closure.

Serial EEPROM U3 is used to store some important radio parameters. The EEPROM is read to or written from using I/O lines PTC6 and PTC7 of the microcontroller. PTC6 is used for the Data line, and PTC7 is used as a clock line.

Shift register U14 expands the number of I/O lines of the microcontroller. It uses the same data and clock as the EEPROM plus an additional line (U1-45) to control the latch. Other user interface inputs such as the PTT and toggle switches are directly connected to an I/O line of the microcontroller.

4.5.4 LOW VOLTAGE DETECT

Voltage comparator U4 detects a low voltage condition and communicates this information to the microcontroller through the pin PTC5 (U1-30). The microcontroller can also detect through I/O IRQ2* (U1-62) that a battery is connected.

4.5.5 LCD DISPLAYS AND DISPLAY DRIVERS

The radio has two displays which each have eight characters, several icons and a backlight. One display is located on the Keypad Board while the other display is located on the Top Display Board. Each display is driven by its own driver. The drivers are programmed by the microcontroller through the SPI bus. Both display drivers are connected to the common PI bus but are individually addressable so that the displays may show different information at the same time.

4.5.6 AUDIO CIRCUITS

The audio circuits on the Keypad/Display Board consist of four op amps, two audio power amplifiers, and an analog switch.

In receive mode, the analog receive waveform created by the ADSIC (on the Digital Board) is fed to an op amp summing amplifier (U9B). This amplifier sums in the audio tones that are generated by the microcontroller. The output of the summing amplifier

KEYPAD BOARD (CONT'D)

is then fed through the volume control potentiometer to a second op amp buffer.

The buffer output is routed to a pair of audio power amplifiers: one to drive the internal speaker and another to drive the external speaker. Only one of these audio power amplifiers can be active at a time. The active power amplifier is selected by the OPT SEL 1 line (J5-12). The MUTE line turns the active power amplifier on or off by disconnecting the battery voltage from the audio power amplifier IC using the transistor Q4. Transistors Q8 and Q9 and their associated RC networks remove popping sounds from the speaker audio by delaying the unmuting of the audio amp compared to the unMUTE command.

In transmit mode, the audio for transmission can be selected from either an internal or external microphone, depending upon the presence of an external microphone and which PTT is pressed. An analog switch is used to route either the internal or external microphone signal to the microphone amplifier. The external microphone signal is buffered by an op amp. The microphone amplifier has a gain of ten, and is equipped with a pair of clipping diodes to prevent the amplified microphone signal from over-driving the A/D input on the ADSIC.

4.5.7 VOLTAGE REGULATION

The 5-Volt Digital Supply is produced by switching DC-DC converter U12 which operates off the Unswitched B+ Supply. The switching frequency is around 160 kHz. A switching regulator is used to improve efficiency since the 5-Volt Digital Supply power consumption is a large percentage of the total power consumption of the radio. The peak-to-peak residual ripple on the 5-Volt Digital supply is approximately 50 mV.

The DC-DC converter is controlled by a wired AND gate on the Shutdown pin of the device. The two inputs of the wired AND gate are the SW_B+ and the output PTC4 of the microcontroller U1. When either input is high, the DC-DC converter is operating.

The DC-DC converter has a soft-start feature (R98, C136) to prevent chattering of the output regulated voltage due to “bouncing” of the on/off switch. The converter has current limiting that limits output

current to 1.5 A. The under voltage protection turns the converter off if the input (Unswitched B+) voltage drops below 5.45 V.

The 5-Volt Analog Supply is produced by a linear regulator running from the Unswitched B+ Supply. The Unswitched B+ input to the regulator is switched on and off by a FET that is turned on by the 5-Volt Digital Supply. The peak-to-peak output ripple of the 5-Volt Analog regulator is less than 10 mV which is appropriate for analog circuits.

4.6 TRANSMIT FREQUENCY DETERMINATION

The operational frequency of the transmitter is determined by the PLL (Phase-Locked-Loop) consisting of synthesizer U204 and VCO circuit Q202/U201. Reference oscillator U203 generates and supplies a reference signal of 16.8 MHz to synthesizer. The synthesizer contains a programmable reference divider, programmable A and B dividers, a programmable prescaler counter (P), and a programmable fractional N divider with two programmable values (N numerator and N denominator).

All of these dividers are programmed through the serial interface which connects the synthesizer to the controller microprocessor. The 16.8 MHz reference oscillator frequency is divided down to a synthesizer reference frequency of 2.1, 2.4, or 2.225 MHz. This signal is fed to the phase detector which generates the steering voltage for the VCO. The output of the VCO circuit is coupled back and divided by AP+B and then divided by the fractional divider and fed into the second input of the phase detector. The VCO buffer has two outputs. One input goes to the input of Rx mixer chip U2, and the other is applied to the input of power amplifier module U105.

4.7 HARMONIC FILTER

The transmitter harmonic filter consists of C148-C151, L126, L127, and L128. With VHF models only, it also consists of C129 and C130. The circuit is essentially a seven-pole low-pass filter. With VHF units only, two additional poles are inserted by C129 and C130 which are series resonant with L126 and L127.

SECTION 5 ALIGNMENT PROCEDURE

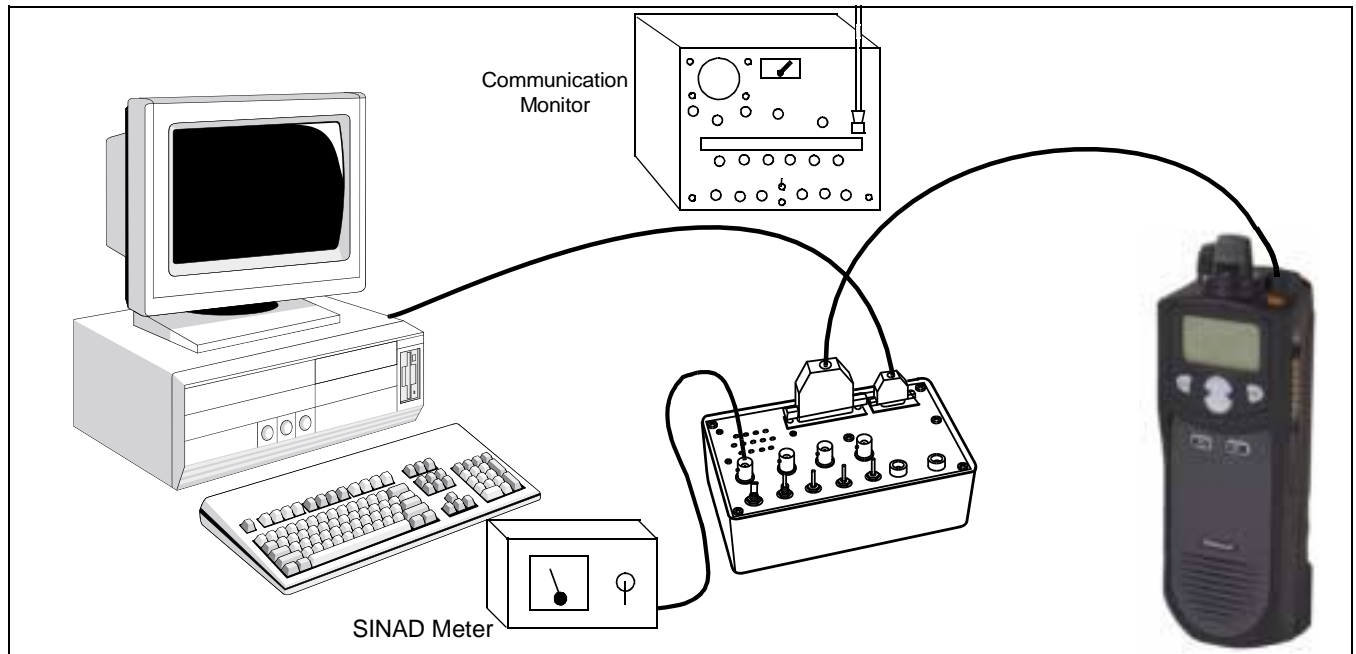


Figure 5-1 Alignment Setup

5.1 GENERAL

5.1.1 INTRODUCTION

The following alignment procedure should be performed if repairs are made that could affect the factory alignment or if adjustments may have changed for some other reason.

To perform transceiver alignment, a PC-compatible computer, the programming interface cable, and PCTune software are required (see Table 1-1). In addition, to adjust the squelch level, the Radio Interface Box (RIB) and radio-to-RIB cable are required. The programming setup is shown in Figure 5-1.

All adjustments are set digitally using the computer. Therefore, there is no need to disassemble the transceiver to access adjustment points. In addition, audio test signals are generated internally, so an audio generator is not required. The required test equipment is shown in Figure 5-1.

5.1.2 TUNE SOFTWARE

General

The PCTune software is a Windows® program. Minimum software and hardware requirements are as follows:

- Windows® 95, 98, or 3.1
- 386SX or faster microprocessor
- 4 megabytes of RAM
- 3 megabytes free space available on hard drive.
- An available serial port

Software Installation

Proceed as follows to install this software:

1. Close all applications that are currently running (other than Windows).
2. Insert the disk containing the PCTune software in drive A: (or B:).

- From the Windows 95 taskbar, choose RUN and open SETUP.EXE on drive A: (or B:). Alternatively, use File Explorer and double click SETUP.EXE.

From the Windows 3.1 Program Manager, choose FILE > RUN and select the SETUP.EXE file on drive A: (or B:).

- Follow the instructions on the screen. The program is automatically loaded on the hard drive and start-up shortcuts or groups are created.

Starting PCTune

From Windows 95 - Select Start in the taskbar, then Programs > PCTune > PCTune x.x.x.

From Windows 3.1 - From the Program Manager, open the PCTune group and then double click the PCTune icon.

Exiting PCTune

Select FILE > EXIT or press ALT + F4.

On-Line Help

On-line help is not available at this time.

5.1.3 PRELIMINARY

- With transceiver power turned off, connect the female DB9 connector of the programming interface cable to an unused serial port of the computer.
- Connect the other end of the programming interface cable to the accessory/programming jack on the side of the transceiver.
- Start the program as described in the preceding section. Select Options > Set Com Port and make sure that the correct serial port is selected (see screen in Figure 5-2).
- Turn transceiver power on and select Tuning > Complete Tuning to automatically step through a complete alignment or Partial Tuning to adjust only certain settings or randomly select adjustments.

- The computer then attempts to establish communication with the transceiver. A message is displayed to indicate success or failure. From this point, prompts are displayed for each step of the programming procedure.

5.2 TRANSMIT FREQUENCY TUNING

The transmit frequency is set by transmitting on the indicated frequency and then adjusting the reference oscillator frequency via the tuning software. Proceed as follows:

- Connect a 50-ohm load to the antenna jack and monitor the transmit signal with a communication monitor.
- Set the communication monitor to the indicated frequency and click OK to key the transmitter.
- Adjust the frequency by clicking the + and – keys. The current setting is indicated in the “Current Value” box. When the frequency is correct, click OK again to complete the adjustment and store the setting.

5.3 TRANSMIT MODULATION TUNING

Transmit modulation is set by balancing the modulation produced by 80 Hz and 3 kHz tones and then setting modulation limiting using a 1 kHz tone. All these tones are internally generated by the transceiver, so no external audio generator is required. Proceed as follows:

- Click OK with “TX Modulation” selected. Set the communication monitor for the displayed frequency.
- Click OK to transmit a signal modulated with an 80 Hz tone. Enter the resulting deviation (in hertz) in the displayed box and click OK.
- Continue following the screen instructions to adjust the 3 kHz tone deviation. The + and – buttons are clicked to set the deviation to the indicated level. The 1 kHz tone deviation is then adjusted.

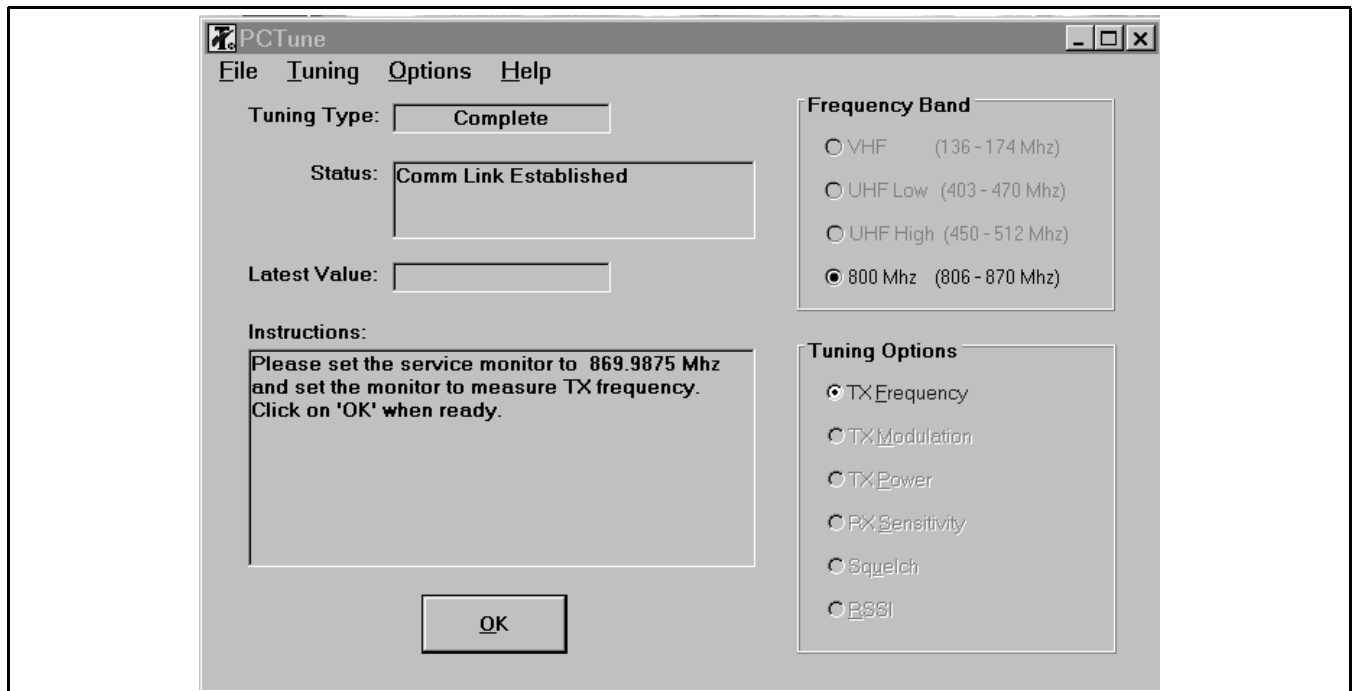


Figure 5-2 Tuning Software Screen (800 MHz Models)

4. The preceding 3 kHz and 1 kHz tone adjustments are then repeated on several other frequencies across the band. After the last adjustment is made, the transmitter unkeys and the settings are stored.

2. Inject the frequencies and signal levels indicated on the computer screen. When tuning is complete, a message is displayed and the settings are saved.

5.4 TRANSMIT POWER ADJUSTMENT

Set transmitter power output as follows:

1. Connect a wattmeter and 50-ohm load to the antenna jack. Click OK with “TX Power” selected.
2. Follow on-screen instructions to adjust for the displayed power output at various frequencies across the band.
3. When the last setting is complete, the transmitter unkeys and the settings are stored.

5.5 RECEIVE SENSITIVITY TUNING

NOTE: This adjustment is not performed with 800 MHz models.

The receiver front end is tuned as follows:

1. Connect an RF signal generator to the antenna jack. Click OK with “RX Sensitivity” selected.

5.6 SQUELCH ADJUSTMENT

NOTE: With some early models, this adjustment cannot be made using the PCTune software so an error message is displayed when it is selected.

Test Setup

This adjustment requires access to the receive audio signal so that SINAD can be measured. It is recommended that this be done using the RIB (Radio Interface Box). This box allows the receive audio signal to be monitored while the computer is connected to the accessory/programming jack.

Adjustment Procedure

1. Connect an RF signal generator to the antenna jack. Click OK with “Squelch” selected.
2. Set the signal generator for the indicated frequency and modulation. Adjust the generator output level for 12 dB SINAD and click OK.

3. When prompted, adjust the output level for 8 dB SINAD and click OK.
4. Proceed as prompted and when this adjustment is complete, a message is displayed and the settings are stored.

5.7 RSSI ADJUSTMENT

NOTE: With some early models, this adjustment cannot be made using the PCTune software so an error message is displayed when it is selected.

This adjustment calibrates the RSSI signal level. Proceed as follows:

1. Connect an RF signal to the antenna jack. Click OK with “RSSI” selected.
2. Set the generator for the indicated frequency and output level and click OK.
3. Select the other output levels as prompted. When this adjustment is complete, a message is displayed the settings are stored.

SECTION 6 PARTS LIST

Ref No.	Description	Part No.
RF BOARD (A450)		
Individual replacement parts not available. Replace entire assembly.		
DIGITAL BOARD (A100) Part No. 023-5005-100/-105		
C 001	.1 μ F +80/-20% Z5U 25V cer smd	510-3680-104
C 002	.1 μ F +80/-20% Z5U 25V cer smd	510-3680-104
C 003	.1 μ F +80/-20% Z5U 25V cer smd	510-3680-104
C 004	.1 μ F +80/-20% Z5U 25V cer smd	510-3680-104
C 005	.1 μ F +80/-20% Z5U 25V cer smd	510-3680-104
C 006	.1 μ F +80/-20% Z5U 25V cer smd	510-3680-104
C 007	.1 μ F +80/-20% Z5U 25V cer smd	510-3680-104
C 008	220 pF \pm 5% NPO 50V cer smd	510-3674-221
C 009	220 pF \pm 5% NPO 50V cer smd	510-3674-221
C 010	.1 μ F +80/-20% Z5U 25V cer smd	510-3680-104
C 011	.1 μ F +80/-20% Z5U 25V cer smd	510-3680-104
C 012	.1 μ F +80/-20% Z5U 25V cer smd	510-3680-104
C 013	.1 μ F +80/-20% Z5U 25V cer smd	510-3680-104
C 014	.1 μ F +80/-20% Z5U 25V cer smd	510-3680-104
C 015	.1 μ F +80/-20% Z5U 25V cer smd	510-3680-104
C 016	.1 μ F +80/-20% Z5U 25V cer smd	510-3680-104
C 017	.1 μ F +80/-20% Z5U 25V cer smd	510-3680-104
C 018	.1 μ F +80/-20% Z5U 25V cer smd	510-3680-104
C 019	.1 μ F +80/-20% Z5U 25V cer smd	510-3680-104
C 020	.1 μ F +80/-20% Z5U 25V cer smd	510-3680-104
C 021	.1 μ F +80/-20% Z5U 25V cer smd	510-3680-104
C 022	.1 μ F +80/-20% Z5U 25V cer smd	510-3680-104
C 023	.1 μ F +80/-20% Z5U 25V cer smd	510-3680-104
C 024	.1 μ F +80/-20% Z5U 25V cer smd	510-3680-104
C 025	10 pF \pm 0.1 pF NPO 50V cer smd	510-3673-100
C 026	.1 μ F +80/-20% Z5U 25V cer smd	510-3680-104
C 027	10 pF \pm 0.1 pF NPO 50V cer smd	510-3673-100
C 028	6.2 pF \pm 0.1 pF NPO 50V cer smd	510-3673-629
C 029	5.1 pF \pm 0.1pF NPO 50V cer smd	510-3673-519
C 030	470 pF \pm 5% NPO 50V cer smd	510-3674-471
C 031	470 pF \pm 5% NPO 50V cer smd	510-3674-471
C 032	.22 μ F \pm 10% Z5U 25V cer smd	510-3686-224
C 033	220 pF \pm 5% NPO 50V cer smd	510-3674-221
C 034	220 pF \pm 5% NPO 50V cer smd	510-3674-221
C 035	.1 μ F +80/-20% Z5U 25V cer smd	510-3680-104
C 036	.1 μ F +80/-20% Z5U 25V cer smd	510-3680-104

Ref No.	Description	Part No.
C 037	220 pF \pm 5% NPO 50V cer smd	510-3674-221
C 038	220 pF \pm 5% NPO 50V cer smd	510-3674-221
C 039	220 pF \pm 5% NPO 50V cer smd	510-3674-221
C 040	220 pF \pm 5% NPO 50V cer smd	510-3674-221
C 041	470pF \pm 5% NPO 50V cer smd	510-3674-471
C 042	220 pF \pm 5% NPO 50V cer smd	510-3674-221
C 043	.1 μ F +80/-20% Z5U 25V cer smd	510-3631-104
C 044	220 pF \pm 5% NPO 50V cer smd	510-3674-221
C 045	.1 μ F +80/-20% Z5U 25V cer smd	510-3680-104
C 046	220 pF \pm 5% NPO 50V cer smd	510-3674-221
C 047	220 pF \pm 5% NPO 50V cer smd	510-3674-221
C 048	10pF \pm 0.1 pF NPO 50V cer smd	510-3673-100
C 049	10 pF \pm 0.1 pF NPO 50V cer smd	510-3673-100
C 050	33 pF \pm 10% X7R 25V cer smd	510-3675-330
C 051	33 pF \pm 10% X7R 25V cer smd	510-3675-330
C 052	470 pF \pm 5% NPO 50V cer smd	510-3674-471
C 053	470 pF \pm 5% NPO 50V cer smd	510-3674-471
C 054	470 pF \pm 5% NPO 50V cer smd	510-3674-471
C 055	470 pF \pm 5% NPO 50V cer smd	510-3674-471
C 056	220 pF \pm 5% NPO 50V cer smd	510-3674-221
C 057	.1 μ F +80/-20% Z5U 25V cer smd	510-3680-104
C 058	470 pF \pm 5% NPO 50V cer smd	510-3674-471
C 059	470 pF \pm 5% NPO 50V cer smd	510-3674-471
C 060	.1 μ F +80/-20% Z5U 25V cer smd	510-3680-104
C 061	220 pF \pm 5% NPO 50V cer smd	510-3674-221
C 062	220 pF \pm 5% NPO 50V cer smd	510-3674-221
C 063	.1 μ F +80/-20% Z5U 25V cer smd	510-3680-104
C 064	.1 μ F +80/-20% Z5U 25V cer smd	510-3680-104
C 065	220 pF \pm 5% NPO 50V cer smd	510-3674-221
C 066	.1 μ F +80/-20% Z5U 25V cer smd	510-3680-104
C 067	220 pF \pm 5% NPO 50V cer smd	510-3674-221
C 068	.1 μ F +80/-20% Z5U 25V cer smd (-100 boards)	510-3680-104
	220 pF \pm 5% NPO 50V cer smd (-105 boards)	510-3674-221
C 069	.1 μ F +80/-20% Z5U 25V cer smd (-100 boards)	510-3680-104
	220 pF \pm 5% NPO 50V cer smd (-105 boards)	510-3674-221
C 070	220 pF \pm 5% NPO 50V cer smd	510-3674-221
C 071	220 pF \pm 5% NPO 50V cer smd	510-3674-221
C 072	220 pF \pm 5% NPO 50V cer smd	510-3674-221

DIGITAL BOARD (CONT'D)

Ref No.	Description	Part No.
C 074	220 pF ±5% NPO 50V cer smd	510-3674-221
C 076	.1 µF +80/-20% Z5U 25V cer smd	510-3680-104
C 078	220 pF ±5% NPO 50V cer smd	510-3674-221
C 079	.1 µF +80/-20% Z5U 25V cer smd	510-3680-104
C 080	220 pF ±5% NPO 50V cer smd	510-3674-221
C 081	220 pF ±5% NPO 50V cer smd	510-3674-221
C 082	220 pF ±5% NPO 50V cer smd	510-3674-221
C 091	220 pF ±5% NPO 50V cer smd	510-3674-221
C 092	220 pF ±5% NPO 50V cer smd	510-3674-221
C 093	220 pF ±5% NPO 50V cer smd	510-3674-221
C 094	220 pF ±5% NPO 50V cer smd	510-3674-221
C 095	220 pF ±5% NPO 50V cer smd	510-3674-221
C 096	220 pF ±5% NPO 50V cer smd	510-3674-221
C 097	220 pF ±5% NPO 50V cer smd	510-3674-221
C 098	220 pF ±5% NPO 50V cer smd	510-3674-221
C 157	220 pF ±5% NPO 50V cer smd	510-3674-221
C 158	33 pF ±10% X7R 25V cer smd	510-3675-330
C 159	33 pF ±10% X7R 25V cer smd	510-3675-330
C 160	33 pF ±10% X7R 25V cer smd	510-3675-330
C 161	220 pF ±5% NPO 50V cer smd	510-3674-221
C 162	220 pF ±5% NPO 50V cer smd	510-3674-221
C 163	33 pF ±10% X7R 25V cer smd	510-3675-330
C 164	33 pF ±10% X7R 25V cer smd	510-3675-330
C 165	33 pF ±10% X7R 25V cer smd	510-3675-330
C 166	33 pF ±10% X7R 25V cer smd	510-3675-330
C 167	33 pF ±10% X7R 25V cer smd	510-3675-330
C 168	33 pF ±10% X7R 25V cer smd	510-3675-330
C 169	33 pF ±10% X7R 25V cer smd	510-3675-330
C 170	33 pF ±10% X7R 25V cer smd	510-3675-330
C 171	220 pF ±5% NPO 50V cer smd	510-3674-221
D 001	Diode, 1.5 pF SOT-23	523-1504-029
D 002	Zener diode, 5.6V SOT-23	523-2601-569
EP 101	Contact, power	013-1724-001
EP102	Z ground strip	017-1210-056
EP 103	Contact, battery pogo pin	515-9500-104
J 001	10-pin socket, x 2	515-7113-070
J 002	18-pin flex connector	515-7010-438
J 004	31-pin connector	515-7109-130
L 001	1.8 µH inductor, 350mA	542-9230-027
L 002- L 036	Inductor, ferrite smd (-100 boards)	542-9230-023

Ref No.	Description	Part No.
	Inductor, ferrite smd (-105 boards)	542-9230-021
MP 101	Shield, pogo	017-1210-053
PC 101	Flex circuit, power	035-1800-180
PC 100	PC board, digital trunking	035-5005-100
	PC board, digital non-trunk	035-5005-105
PC101	Power flex circuit board, pogo pin	035-5005-101
Q 001	NPN general purpose SOT-23	576-0003-658
R 001	4.7k ohm ±5% 1/16W smd	569-0155-472
R 002	4.7k ohm ±5% 1/16W smd	569-0155-472
R 003	10k ohm ±5% 1/16W smd	569-0155-103
R 004	4.7k ohm ±5% 1/16W smd	569-0155-472
R 005	10k ohm ±5% 1/16W smd	569-0155-103
R 006	10k ohm ±5% 1/16W smd	569-0155-103
R 007	390k ohm ±5% 1/16W smd	569-0155-394
R 008	100k ohm ±5% 1/16W smd	569-0155-104
R 009	4.7k ohm ±5% 1/16W smd	569-0155-472
R 010	100k ohm ±5% 1/16W smd	569-0155-104
R 011	10k ohm ±5% 1/16W smd	569-0155-103
R 012	33k ohm ±5% 1/16W smd	569-0155-333
R 013	100k ohm ±5% 1/16W smd	569-0155-104
R 014	10k ohm ±5% 1/16W smd	569-0155-103
R 015	10k ohm ±5% 1/16W smd	569-0155-103
R 016	0 ohm jumper	569-0155-001
R 017	0 ohm jumper	569-0155-001
R 018	10k ohm ±5% 1/16W smd	569-0155-103
R 019	10k ohm ±5% 1/16W smd	569-0155-103
R 020	0 ohm jumper	569-0155-001
R 021	1.0M ohm ±5% 1/16W smd	569-0155-105
R 022	15k ohm ±5% 1/16W smd	569-0155-153
R 023	6.8k ohm ±5% 1/16W smd	569-0155-682
R 024	1k ohm ±5% 1/16W smd	569-0155-102
R 025	0 ohm jumper	569-0155-001
R 026	0 ohm jumper	569-0155-001
R 027	0 ohm jumper (-100 board)	569-0155-001
	47k ohm ±5% 1/16W smd (-105 board)	569-0155-473
R 028	0 ohm jumper (-100 board)	569-0155-001

DIGITAL BOARD (CONT'D)

Ref No.	Description	Part No.
	100k ohm $\pm 5\%$ 1/16W smd (-105 board)	569-0155-104
R 029	47k ohm $\pm 5\%$ 1/16W smd	569-0155-473
R 030	1k ohm $\pm 5\%$ 1/16W smd (-100 board)	569-0155-102
	0 ohm jumper (-105 board)	569-0155-001
R 031	10 ohm $\pm 5\%$ 1/16W smd	569-0155-100
R 032	10 ohm $\pm 5\%$ 1/16W smd	569-0155-100
R 033	0 ohm jumper (-100 board)	569-0155-001
	10k ohm $\pm 5\%$ 1/16W smd (-105 board)	569-0155-103
R 034	22k ohm $\pm 5\%$ 1/16W smd	569-0155-223
R 035	22k ohm $\pm 5\%$ 1/16W smd	569-0155-223
R 036	22k ohm $\pm 5\%$ 1/16W smd	569-0155-223
R 037	0 ohm jumper	569-0155-001
R 038	0 ohm jumper	569-0155-001
R 039	10k ohm $\pm 5\%$ 1/16W smd	569-0155-103
R 040	10k ohm $\pm 5\%$ 1/16W smd	569-0155-103
R 041	0 ohm jumper	569-0155-001
R 042	0 ohm jumper	569-0155-001
R 043	0 ohm jumper	569-0155-001
R 044	0 ohm jumper	569-0155-001
R 045	22k ohm $\pm 5\%$ 1/16W smd	569-0155-223
R 046	22k ohm $\pm 5\%$ 1/16W smd	569-0155-223
R 047	22k ohm $\pm 5\%$ 1/16W smd	569-0155-223
R 048	22k ohm $\pm 5\%$ 1/16W smd	569-0155-223
R 049	22k ohm $\pm 5\%$ 1/16W smd	569-0155-223
R 050	22k ohm $\pm 5\%$ 1/16W smd	569-0155-223
R 051	22k ohm $\pm 5\%$ 1/16W smd	569-0155-223
R 052	22k ohm $\pm 5\%$ 1/16W smd	569-0155-223
R 053	22k ohm $\pm 5\%$ 1/16W smd	569-0155-223
R 054	22k ohm $\pm 5\%$ 1/16W smd	569-0155-223
R 055	22k ohm $\pm 5\%$ 1/16W smd	569-0155-223
R 056	22k ohm $\pm 5\%$ 1/16W smd	569-0155-223
R 057	22k ohm $\pm 5\%$ 1/16W smd	569-0155-223
R 058	22k ohm $\pm 5\%$ 1/16W smd	569-0155-223
R 059	22k ohm $\pm 5\%$ 1/16W smd	569-0155-223
R 060	22k ohm $\pm 5\%$ 1/16W smd	569-0155-223
R 061	22k ohm $\pm 5\%$ 1/16W smd	569-0155-223
R 062	22k ohm $\pm 5\%$ 1/16W smd	569-0155-223
R 063	22k ohm $\pm 5\%$ 1/16W smd	569-0155-223
R 064	0 ohm jumper	569-0155-001
R 065	1k ohm $\pm 5\%$ 1/16W smd	569-0155-102

Ref No.	Description	Part No.
R 087	0 ohm jumper	569-0155-001
R 090	10k ohm $\pm 5\%$ 1/16W smd	569-0155-103
R 091	1k ohm $\pm 5\%$ 1/16W smd	569-0155-102
R 092	1k ohm $\pm 5\%$ 1/16W smd	569-0155-102
R 093	1k ohm $\pm 5\%$ 1/16W smd	569-0155-102
R 094	1k ohm $\pm 5\%$ 1/16W smd	569-0155-102
R 095	1k ohm $\pm 5\%$ 1/16W smd	569-0155-102
R 096- R 100	0 ohm jumper	569-0165-001
U 001	Programmable logic (-100 board, revision 2)	544-1015-032
	Microprocessor assembly (-100 board, revision 3)	023-1870-043
	Counter, preset 74HC161 (-105 board)	544-1010-161
U 002	Flash ROM 512k x 16 AT49 (-100 board)	544-1028-192
U 003	ADSIC, DSP supp BGA106 (all except following)	544-1010-015
	ADSIC, DSP supp QFP package (-100 board, rev 3)	544-9100-002
U 004	NAND, 2 Input TC7SHOOFU	544-1010-012
U 005	RAM 128k x 8 CY7C1009 (-100 board)	544-1011-028
	SRAM, 64k x 8,IS61C512 (-105 board)	544-1011-026
U 006	RAM 128k x 8 CY7C1009 (-100 board)	544-1011-028
	SRAM, 64k x 8,IS61C512 (-105 board)	544-1011-026
U 007	Rec/trans SCC2691	544-1012-691
U 008	EEPROM, 32k x 8 AT24C256W (-100 board)	544-1020-256
	PEROM, FLASH AT29C010A (-105 board)	544-1010-010
U 009	NAND, 2-input TC7SH00FU (-100 board)	544-1010-012
	OR, 2-input TC7SH32FU (-105 board)	544-1010-013
U 010	PEROM, FLASH AT29C010A	544-1010-010
U 011	OR, 2-input TC7SH32FU	544-1010-013
U 012	DSP TMS320C50PGEA	544-1010-018
U 021	D-flip flop TC7W74FU	544-1010-014
Y 001	Crystal,20.0000 MHz	521-3060-037
Y 002	Crystal,3.6864 MHz	521-3060-053

KEYPAD BOARD

Ref No.	Description	Part No.
KEYPAD BOARD (A4xx) Part No. 023-5005-4xx		
A 430	DES interface board assembly	023-5005-430
C 001	.1 μ F +80/-20% Z5U 25V cer smd	510-3680-104
C 002	.1 μ F +80/-20% Z5U 25V cer smd	510-3680-104
C 003	.1 μ F +80/-20% Z5U 25V cer smd	510-3680-104
C 004	.1 μ F +80/-20% Z5U 25V cer smd	510-3680-104
C 005	330 pF \pm 5% X7R 25V cer smd	510-3675-331
C 006	220 pF \pm 5% NPO 25V cer smd	510-3674-221
C 007	.1 μ F +80/-20% Z5U 25V cer smd	510-3680-104
C 008	.1 μ F +80/-20% Z5U 25V cer smd	510-3680-104
C 009	.1 μ F +80/-20% Z5U 25V cer smd	510-3680-104
C 010	22 pF \pm 5% NPO 25V cer smd	510-3674-220
C 011	2.7 pF \pm 10% NPO 25V cer smd	510-3674-279
C 012	.1 μ F +80/-20% Z5U 25V cer smd	510-3680-104
C 013	22 pF \pm 5% NPO 25V cer smd	510-3674-220
C 014	4700 pF \pm 10% X7R 25V cer smd	510-3675-472
C 015	220 pF \pm 5% NPO 25V cer smd	510-3681-221
C 016	220 pF \pm 5% NPO 25V cer smd	510-3674-221
C 017	220 pF \pm 5% NPO 25V cer smd	510-3674-221
C 018	220 pF \pm 5% NPO 25V cer smd	510-3674-221
C 019	220 pF \pm 5% NPO 25V cer smd	510-3674-221
C 020	220 pF \pm 5% NPO 25V cer smd	510-3674-221
C 021	220 pF \pm 5% NPO 25V cer smd	510-3674-221
C 022	220 pF \pm 5% NPO 25V cer smd	510-3674-221
C 023	220 pF \pm 5% NPO 25V cer smd	510-3674-221
C 024	220 pF \pm 10% X7R 25V cer smd	510-3681-221
C 025	220 pF \pm 5% NPO 25V cer smd	510-3674-221
C 026	220 pF \pm 5% NPO 25V cer smd	510-3674-221
C 027	220 pF \pm 10% X7R 25V cer smd	510-3681-221
C 028	.01 μ F \pm 10% X7R 25V cer smd	510-3675-103
C 029	220 pF \pm 5% NPO 25V cer smd	510-3674-221
C 030	220 pF \pm 5% NPO 25V cer smd	510-3674-221
C 031	220 pF \pm 10% X7R 25V cer smd	510-3681-221
C 032	220 pF \pm 10% X7R 25V cer smd	510-3681-221
C 033	100 pF \pm 5% NPO 25V cer smd	510-3674-101
C 034	10 pF \pm 0.1 pF NP0 50V cer smd	510-3673-100
C 035	220 pF \pm 5% NPO 25V cer smd	510-3674-221
C 036	220 pF \pm 5% NPO 25V cer smd	510-3674-221
C 037	220 pF \pm 5% NPO 25V cer smd	510-3674-221
C 038	33 pF \pm 5% NPO 50V cer smd	510-3601-330
C 039	100 μ F 16V smd tantalum	510-2616-101
C 040	1 μ F +80/-20% Z5U 25V cer smd	510-3631-105

Ref No.	Description	Part No.
C 041	220 pF \pm 10% X7R 25V cer smd	510-3681-221
C 042	220 pF \pm 5% NPO 25V cer smd	510-3674-221
C 043	1 μ F +80/-20% Z5U 25V cer smd	510-3631-105
C 044	220 pF \pm 10% X7R 25V cer smd	510-3681-221
C 045	220 pF \pm 5% NPO 25V cer smd	510-3674-221
C 046	220 pF \pm 5% NPO 25V cer smd	510-3674-221
C 047	220 pF \pm 5% NPO 25V cer smd	510-3674-221
C 048	220 pF \pm 5% NPO 25V cer smd	510-3674-221
C 049	10 pF \pm 0.1 pF NP0 50V cer smd	510-3673-100
C 050	220 pF \pm 5% NPO 25V cer smd	510-3674-221
C 051	220 pF \pm 5% NPO 25V cer smd	510-3674-221
C 052	.1 μ F +80/-20% Z5U 25V cer smd	510-3680-104
C 053	.1 μ F +80/-20% Z5U 25V cer smd	510-3680-104
C 054	10 pF \pm 0.1 pF NP0 50V cer smd	510-3673-100
C 055	100 pF \pm 5% NPO 25V cer smd	510-3674-101
C 056	100 μ F 10V smd tantalum	510-2624-100
C 057	.47 μ F \pm 10% Z5U 16V cer smd	510-3605-474
C 058	4.7 μ F 10V smd tantalum	510-2624-479
C 059	.1 μ F +80/-20% Z5U 25V cer smd	510-3680-104
C 060	.1 μ F +80/-20% Z5U 25V cer smd	510-3680-104
C 061	.1 μ F +80/-20% Z5U 25V cer smd	510-3680-104
C 062	.47 μ F \pm 10% Z5U 16V cer smd	510-3605-474
C 063	.1 μ F +80/-20% Z5U 25V cer smd	510-3680-104
C 064	.47 μ F \pm 10% Z5U 16V cer smd	510-3605-474
C 065	.47 μ F \pm 10% Z5U 16V cer smd	510-3605-474
C 066	.1 μ F +80/-20% Z5U 25V cer smd	510-3680-104
C 067	220 pF \pm 5% NPO 25V cer smd	510-3674-221
C 068	4.7 μ F 10V smd tantalum	510-2624-479
C 069	.1 μ F +80/-20% Z5U 25V cer smd	510-3680-104
C 070	220 pF \pm 5% NPO 25V cer smd	510-3674-221
C 071	220 pF \pm 5% NPO 25V cer smd	510-3674-221
C 072	220 pF \pm 5% NPO 25V cer smd	510-3674-221
C 073	220 pF \pm 5% NPO 25V cer smd	510-3674-221
C 074	100 pF \pm 5% NPO 25V cer smd	510-3674-101
C 075	.1 μ F +80/-20% Z5U 25V cer smd	510-3680-104
C 076	220 pF \pm 5% NPO 25V cer smd	510-3674-221
C 077	.1 μ F +80/-20% Z5U 25V cer smd	510-3680-104
C 078	.1 μ F +80/-20% Z5U 25V cer smd	510-3680-104
C 079	1 μ F +80/-20% Z5U 25V cer smd	510-3631-105
C 080	100 pF \pm 5% NPO 25V cer smd	510-3674-101
C 081	1 μ F +80/-20% Z5U 25V cer smd	510-3631-105
C 082	.001 μ F \pm 10% X7R 25V cer smd	510-3675-102
C 083	1 μ F +80/-20% Z5U 25V cer smd	510-3631-105
C 084	220 pF \pm 10% X7R 50V cer smd	510-3681-221
C 085	220 pF \pm 5% NPO 25V cer smd	510-3674-221

KEYPAD BOARD (CONT'D)

Ref No.	Description	Part No.	Ref No.	Description	Part No.
C 086	220 pF ±5% NPO 25V cer smd	510-3674-221	C 131	220 pF ±10% X7R 25V cer smd	510-3681-221
C 087	100 pF ±5% NPO 25V cer smd	510-3674-101	C 132	47 pF ±5% NPO 25V cer smd	510-3674-470
C 088	220 pF ±5% NPO 25V cer smd	510-3674-221	C 133	47 pF ±5% NPO 25V cer smd	510-3674-470
C 089	220 pF ±5% NPO 25V cer smd	510-3674-221	C 134	47 pF ±5% NPO 25V cer smd	510-3674-470
C 090	220 pF ±5% NPO 25V cer smd	510-3674-221	C 135	1 μF +80/-20% Z5U 25V cer smd	510-3631-105
C 091	10 pF ±0.1 pF NPO 50V cer smd	510-3673-100	C 136	.1 μF +80/-20% Z5U 25V cer smd	510-3680-104
C 092	1 μF +80/-20% Z5U 25V cer smd	510-3631-105	C 137	.01 μF ±10% X7R 25V cer smd	510-3675-103
C 093	100 pF ±5% NPO 25V cer smd	510-3674-101	C 138	1 μF +80/-20% Z5U 25V cer smd	510-3631-105
C 094	100 pF ±5% NPO 25V cer smd	510-3674-101	C 139	68 μF ±10% 16V tantalum	510-2625-680
C 095	220 pF ±5% NPO 25V cer smd	510-3674-221	C 140	68 μF ±10% 16V tantalum	510-2625-680
C 096	220 pF ±5% NPO 25V cer smd	510-3674-221	C 141	100 μF 16V smd tantalum	510-2616-101
C 097	220 pF ±5% NPO 25V cer smd	510-3674-221	C 142	4.7 μF 10V smd tantalum	510-2624-479
C 098	220 pF ±5% NPO 25V cer smd	510-3674-221	C 143	4.7 μF 10V smd tantalum	510-2624-479
C 099	220 pF ±5% NPO 25V cer smd	510-3674-221	C 144	68 μF ±10% 16V tantalum	510-3674-221
C 100	220 pF ±5% NPO 25V cer smd	510-3674-221	C 146	220 pF ±10% X7R 25V cer smd	510-3674-221
C 101	220 pF ±5% NPO 25V cer smd	510-3674-221	C 147	3900 pF ±10% X7R 25V cer smd	510-3675-392
C 102	220 pF ±5% NPO 25V cer smd	510-3674-221	C 148	220 pF ±10% X7R 25V cer smd	510-3681-221
C 103	220 pF ±5% NPO 25V cer smd	510-3674-221	C 149	220 pF ±10% X7R 25V cer smd	510-3681-221
C 104	220 pF ±5% NPO 25V cer smd	510-3674-221	C 150	220 pF ±10% X7R 25V cer smd	510-3681-221
C 105	220 pF ±5% NPO 25V cer smd	510-3674-221	C 151	220 pF ±10% X7R 25V cer smd	510-3681-221
C 106	220 pF ±5% NPO 25V cer smd	510-3674-221	C 152	220 pF ±10% X7R 25V cer smd	510-3681-221
C 107	220 pF ±5% NPO 25V cer smd	510-3674-221	C 153	220 pF ±10% X7R 25V cer smd	510-3681-221
C 108	220 pF ±5% NPO 25V cer smd	510-3674-221	C 154	220 pF ±10% X7R 25V cer smd	510-3681-221
C 109	220 pF ±5% NPO 25V cer smd	510-3674-221	C 155	220 pF ±10% X7R 25V cer smd	510-3681-221
C 110	220 pF ±5% NPO 25V cer smd	510-3674-221	C 156	220 pF ±10% X7R 25V cer smd	510-3681-221
C 111	220 pF ±5% NPO 25V cer smd	510-3674-221	C 157	220 pF ±10% X7R 25V cer smd	510-3681-221
C 112	220 pF ±5% NPO 25V cer smd	510-3674-221	C 158	220 pF ±10% X7R 25V cer smd	510-3681-221
C 113	220 pF ±5% NPO 25V cer smd	510-3674-221	C 159	220 pF ±10% X7R 25V cer smd	510-3681-221
C 114	220 pF ±5% NPO 25V cer smd	510-3674-221	C 160	220 pF ±10% X7R 25V cer smd	510-3681-221
C 115	220 pF ±5% NPO 25V cer smd	510-3674-221	C 161	220 pF ±10% X7R 25V cer smd	510-3681-221
C 116	220 pF ±5% NPO 25V cer smd	510-3674-221	C 162	220 pF ±10% X7R 25V cer smd	510-3681-221
C 117	220 pF ±5% NPO 25V cer smd	510-3674-221	C 163	220 pF ±10% X7R 25V cer smd	510-3681-221
C 118	220 pF ±5% NPO 25V cer smd	510-3674-221	C 164	220 pF ±10% X7R 25V cer smd	510-3681-221
C 119	220 pF ±5% NPO 25V cer smd	510-3674-221	C 165	220 pF ±10% X7R 25V cer smd	510-3681-221
C 120	220 pF ±5% NPO 25V cer smd	510-3674-221	C 166	220 pF ±10% X7R 25V cer smd	510-3681-221
C 121	220 pF ±5% NPO 25V cer smd	510-3674-221	C 167	220 pF ±10% X7R 25V cer smd	510-3681-221
C 122	220 pF ±5% NPO 25V cer smd	510-3674-221	C 168	220 pF ±10% X7R 25V cer smd	510-3681-221
C 123	220 pF ±5% NPO 25V cer smd	510-3674-221	C 169	220 pF ±10% X7R 25V cer smd	510-3681-221
C 124	220 pF ±5% NPO 25V cer smd	510-3674-221			
C 125	220 pF ±5% NPO 25V cer smd	510-3674-221	CR 400	Front display backlight	585-5000-001
C 126	220 pF ±5% NPO 25V cer smd	510-3674-221			
C 127	220 pF ±5% NPO 25V cer smd	510-3674-221	D 001	5.6V zener SOT-23	523-2601-569
C 128	220 pF ±5% NPO 25V cer smd	510-3674-221	D 002	Diode MMBD301LT1	523-1504-040
C 129	68 μF ±10% 16V tantalum	510-3674-221	D 004	5.6V zener SOT-23	523-2601-569
C 130	220 pF ±5% NPO 25V cer smd	510-3674-221	D 005	Schottky diode rectifier	523-0519-034

KEYPAD BOARD (CONT'D)

Ref No.	Description	Part No.
D 007	5.6V zener SOT-23	523-2601-569
D 008	10V zener SOT-23	523-2601-100
D 009	10V zener SOT-23	523-2601-100
D 010	10V zener SOT-23	523-2601-100
D 011	Diode MMBD301LT1	523-1504-040
D 013	Diode MMBD301LT1	523-1504-040
D 014	Diode MMBD301LT1	523-1504-040
D 015	5.6V zener SOT-23	523-2601-569
D 017	LED, green SMD HSMG-C670	549-4101-019
D 019	LED, green SMD HSMG-C670	549-4101-019
D 020	LED, green SMD HSMG-C670	549-4101-019
D 021	LED, green SMD HSMG-C670	549-4101-019
D 022	LED, green SMD HSMG-C670	549-4101-019
D 023	10V zener SOT-23	523-2601-100
D 024	10V zener SOT-23	523-2601-100
D 025	5.1V zener SOT-23	523-2601-519
D 035	LED, green SMD HSMG-C670	549-4101-019
D 036	LED, green SMD HSMG-C670	549-4101-019
D 037	LED, green SMD HSMG-C670	549-4101-019
D 038	LED, green SMD HSMG-C670	549-4101-019
D 039	LED, green SMD HSMG-C670	549-4101-019
D 040	LED, green SMD HSMG-C670	549-4101-019
D 041	LED, green SMD HSMG-C670	549-4101-019
D 042	LED, green SMD HSMG-C670	549-4101-019
D 043	LED, green SMD HSMG-C670	549-4101-019
D 044	LED, green SMD HSMG-C670	549-4101-019
D 045	LED, reen SMD HSMG-C670	549-4101-019
DS 400	LCD glass, radio front	549-5000-002
EP 400	Grounding contact	537-5001-009
J 002	Connector, flex 18-pin	515-7010-438
J 004	Connector, microminiature	515-7113-073
J 005	24-pin socket, ZIF	515-9500-017
J 013	24-pin socket, ZIF	515-9500-017
L 002	1.8 μ H 250 mA smd inductor	542-9230-027
L 003	33 μ H 1.2A smd inductor	542-9230-025
L 004	Ferrite bead, 600 ohm smd	542-9230-035
L 005	Ferrite bead, 600 ohm smd	542-9230-035
L 006	Ferrite bead, 600 ohm smd	542-9230-035
L 007	Ferrite bead, 600 ohm smd	542-9230-035
L 008	Ferrite bead, 600 ohm smd	542-9230-035
L 009	Ferrite bead, 600 ohm smd	542-9230-035
L 010	Ferrite bead, 600 ohm smd	542-9230-035

Ref No.	Description	Part No.
L 011	Ferrite bead, 600 ohm smd	542-9230-035
L 012	Ferrite bead, 600 ohm smd	542-9230-035
L 013	Ferrite bead, 600 ohm smd	542-9230-035
L 014	Ferrite bead, 600 ohm smd	542-9230-035
L 015	Ferrite bead, 600 ohm smd	542-9230-035
L 016	Ferrite bead, 600 ohm smd	542-9230-035
L 017	Ferrite bead, 600 ohm smd	542-9230-035
L 018	Ferrite bead, 600 ohm smd	542-9230-035
L 019	Ferrite bead, 600 ohm smd	542-9230-035
L 020	Ferrite bead, 600 ohm smd	542-9230-035
L 021	Ferrite bead, 600 ohm smd	542-9230-035
L 022	Ferrite bead, 600 ohm smd	542-9230-035
L 023	Ferrite bead, 600 ohm smd	542-9230-035
L 024	Ferrite bead, 600 ohm smd	542-9230-035
L 025	Ferrite smd inductor	542-9230-023
L 026	Ferrite smd inductor	542-9230-023
L 027	Ferrite smd inductor	542-9230-023
L 028	Ferrite smd inductor	542-9230-023
L 029	Ferrite smd inductor	542-9230-023
L 030	Ferrite smd inductor	542-9230-023
L 031	Ferrite smd inductor	542-9230-023
L 032	Ferrite smd inductor	542-9230-023
L 033	Ferrite bead, 600 ohm smd	542-9230-035
L 034	Ferrite bead, 600 ohm smd	542-9230-035
L 035	Ferrite bead, 600 ohm smd	542-9230-035
L 036	Ferrite bead, 600 ohm smd	542-9230-035
L 037	Ferrite bead, 600 ohm smd	542-9230-035
L 038	Ferrite bead, 600 ohm smd	542-9230-035
L 039	Ferrite bead, 600 ohm smd	542-9230-035
L 040	Ferrite bead, 600 ohm smd	542-9230-035
L 041	Ferrite smd inductor	542-9230-023
L 042	Ferrite smd inductor	542-9230-023
L 043	Ferrite smd inductor	542-9230-023
L 044	Ferrite smd inductor	542-9230-023
L 045	Ferrite smd inductor	542-9230-023
L 046	Ferrite smd inductor	542-9230-023
L 047	Ferrite smd inductor	542-9230-023
L 048	Ferrite smd inductor	542-9230-023
L 049	Ferrite smd inductor	542-9230-023
L 050	Ferrite smd inductor	542-9230-023
L 053	Ferrite smd inductor	542-9230-023
L 054	Ferrite smd inductor	542-9230-023
L 055	Ferrite smd inductor	542-9230-023
L 056	Ferrite smd inductor	542-9230-023
L 057	Ferrite smd inductor	542-9230-023

KEYPAD BOARD (CONT'D)


Ref No.	Description	Part No.
L 058	Ferrite smd inductor	542-9230-023
L 059	Ferrite smd inductor	542-9230-023
L 060	Ferrite smd inductor	542-9230-023
L 061	Ferrite smd inductor	542-9230-023
L 063	Ferrite smd inductor	542-9230-023
L 064	Ferrite smd inductor	542-9230-023
MP 400	Front LCD holder, stamped	014-2229-508
P 400	Elastomeric connector	515-9900-007
P 430	Header, 8-pin	515-9500-018
PC400	PC board, keypad	035-5005-400
PC430	PC board, DES interface	035-5000-030
Q 001	NPN general purpose SOT-23	576-0003-658
Q 002	NPN general purpose SOT-23	576-0003-658
Q 004	P-chan enh mode MOSFET	576-0003-707
Q 005	NPN general purpose SOT-23	576-0003-658
O 006	NPN general purpose SOT-23	576-0003-658
Q 007	NPN general purpose SOT-23	576-0003-658
Q 008	NPN general purpose SOT-23	576-0003-658
Q 009	NPN general purpose SOT-23	576-0003-658
O 010	NPN general purpose SOT-23	576-0003-658
Q 011	P-chan enh mode MOSFET	576-0003-707
Q 012	NPN general purpose SOT-23	576-0003-658
Q 013	NPN general purpose SOT-23	576-0003-658
Q 014	NPN general purpose SOT-23	576-0003-658
Q 015	P-chan enh mode MOSFET	576-0003-707
R 001	100k ohm $\pm 5\%$ 1/16W smd	569-0155-104
R 002	100k ohm $\pm 5\%$ 1/16W smd	569-0155-104
R 003	100k ohm $\pm 5\%$ 1/16W smd	569-0155-104
R 004	100k ohm $\pm 5\%$ 1/16W smd	569-0155-104
R 005	10k ohm $\pm 5\%$ 1/16W smd	569-0155-103
R 006	10k ohm $\pm 5\%$ 1/16W smd	569-0155-103
R 007	100k ohm $\pm 5\%$ 1/16W smd	569-0155-104
R 008	10k ohm $\pm 5\%$ 1/16W smd	569-0155-103
R 009	1k ohm $\pm 5\%$ 1/16W smd	569-0155-102
R 010	10k ohm $\pm 5\%$ 1/16W smd	569-0155-103
R 011	10k ohm $\pm 5\%$ 1/16W smd	569-0155-103
R 012	100k ohm $\pm 5\%$ 1/16W smd	569-0155-104
R 013	10k ohm $\pm 5\%$ 1/16W smd	569-0155-103
R 014	56k ohm $\pm 5\%$ 1/16W smd	569-0155-563
R 015	10k ohm $\pm 5\%$ 1/16W smd	569-0155-103


Ref No.	Description	Part No.
R 016	0 ohm jumper	569-0155-001
R 017	1.0M ohm $\pm 5\%$ 1/16W smd	569-0155-105
R 018	100k ohm $\pm 5\%$ 1/16W smd	569-0155-104
R 019	10k ohm $\pm 5\%$ 1/16W smd	569-0155-103
R 020	100k ohm $\pm 5\%$ 1/16W smd	569-0155-104
R 021	100k ohm $\pm 5\%$ 1/16W smd	569-0155-104
R 022	100k ohm $\pm 5\%$ 1/16W smd	569-0155-104
R 023	1k ohm $\pm 5\%$ 1/16W smd	569-0155-102
R 024	220 ohm $\pm 5\%$ 1/16W smd	569-0155-221
R 025	220 ohm $\pm 5\%$ 1/16W smd	569-0155-221
R 026	0 ohm jumper	569-0155-001
R 027	47k ohm $\pm 5\%$ 1/16W smd	569-0155-473
R 028	4.75k ohm $\pm 1\%$ 1/16W smd	569-0156-903
R 029	10k ohm $\pm 5\%$ 1/16W smd	569-0155-103
R 030	6.19k, $\pm 1\%$ 1/16W smd	569-0156-904
R 031	10k ohm $\pm 5\%$ 1/16W smd	569-0155-103
R 032	10k ohm $\pm 5\%$ 1/16W smd	569-0155-103
R 033	100k ohm $\pm 5\%$ 1/16W smd	569-0155-104
R 034	220 ohm $\pm 5\%$ 1/16W smd	569-0155-221
R 035	0 ohm jumper	569-0155-001
R 036	100k ohm $\pm 5\%$ 1/16W smd	569-0155-104
R 037	27k ohm $\pm 5\%$ 1/16W smd	569-0155-273
R 038	10k ohm $\pm 5\%$ 1/16W smd	569-0155-103
R 039	2k ohm $\pm 5\%$ 1/16W smd	569-0155-202
R 040	100k ohm $\pm 5\%$ 1/16W smd	569-0155-104
R 041	100k ohm $\pm 5\%$ 1/16W smd	569-0155-104
R 042	100k ohm $\pm 5\%$ 1/16W smd	569-0155-104
R 043	100k ohm $\pm 5\%$ 1/16W smd	569-0155-104
R 044	4.7k ohm $\pm 5\%$ 1/16W smd	569-0155-472
R 045	47k ohm $\pm 5\%$ 1/16W smd	569-0155-473
R 046	390 ohm $\pm 5\%$ 1/16W smd	569-0155-391
R 047	4.7k ohm $\pm 5\%$ 1/16W smd	569-0155-473
R 048	22k ohm $\pm 5\%$ 1/16W smd	569-0155-223
R 049	10k ohm $\pm 5\%$ 1/16W smd	569-0155-103
R 050	390 ohm $\pm 5\%$ 1/16W smd	569-0155-391
R 051	4.7k ohm $\pm 5\%$ 1/16W smd	569-0155-472
R 052	10k ohm $\pm 5\%$ 1/16W smd	569-0155-103
R 053	10k ohm $\pm 5\%$ 1/16W smd	569-0155-103
R 054	100k ohm $\pm 5\%$ 1/16W smd	569-0155-104
R 055	100k ohm $\pm 5\%$ 1/16W smd	569-0155-104
R 056	47k ohm $\pm 5\%$ 1/16W smd	569-0155-473
R 057	360k ohm $\pm 5\%$ 1/16W smd	569-0155-364
R 058	130k ohm $\pm 5\%$ 1/16W smd	569-0155-134
R 059	180k ohm $\pm 5\%$ 1/16W smd	569-0155-184
R 060	220 ohm $\pm 5\%$ 1/16W smd	569-0155-221


KEYPAD BOARD (CONT'D)


Ref No.	Description	Part No.	Ref No.	Description	Part No.
R 061	150 ohm $\pm 5\%$ 1/8W smd	569-0115-151	R 097	220 ohm $\pm 5\%$ 1/16W smd	569-0155-221
R 062	1k ohm $\pm 5\%$ 1/16W smd	569-0155-102	R 098	510k ohm $\pm 5\%$ 1/16W smd	569-0155-514
R 063	100k ohm $\pm 5\%$ 1/16W smd	569-0156-104	R 099	150k ohm $\pm 5\%$ 1/16W smd	569-0155-154
R 064	27k ohm $\pm 5\%$ 1/16W smd	569-0155-273	R 100	27k ohm $\pm 5\%$ 1/16W smd	569-0155-273
R 065	22k ohm $\pm 5\%$ 1/16W smd	569-0155-223	R 101	100k ohm $\pm 5\%$ 1/16W smd	569-0155-104
R 066	10k ohm $\pm 5\%$ 1/16W smd	569-0155-103	R 102	100k ohm $\pm 5\%$ 1/16W smd	569-0155-104
R 067	100k ohm $\pm 5\%$ 1/16W smd	569-0155-104	R 103	0 ohm jumper	569-0155-001
R 068	2.2k ohm $\pm 5\%$ 1/16W smd	569-0155-222	R 104	0 ohm jumper	569-0155-001
R 069	220 ohm $\pm 5\%$ 1/16W smd	569-0155-221	R 108	1k ohm $\pm 5\%$ 1/16W smd	569-0155-102
R 070	220 ohm $\pm 5\%$ 1/16W smd	569-0155-221	R 109	220k ohm $\pm 5\%$ 1/16W smd	569-0155-224
R 071	220 ohm $\pm 5\%$ 1/16W smd	569-0155-221	R 110	0 ohm jumper	569-0155-001
R 072	47k ohm $\pm 5\%$ 1/16W smd	569-0155-473	R 111	100k ohm $\pm 5\%$ 1/16W smd	569-0155-104
R 073	220 ohm $\pm 5\%$ 1/16W smd	569-0155-221	R 112	150 ohm $\pm 5\%$ 1/16W smd	569-0115-151
R 074	220 ohm $\pm 5\%$ 1/16W smd	569-0155-221	R 113	150 ohm $\pm 5\%$ 1/16W smd	569-0115-151
R 075	220 ohm $\pm 5\%$ 1/16W smd	569-0155-221	R 114	100k ohm $\pm 5\%$ 1/16W smd	569-0155-104
R 076	220 ohm $\pm 5\%$ 1/16W smd	569-0155-221	R 116	Zero ohm jumper	569-0165-001
R 077	220 Ohm $\pm 5\%$ 1/16W smd	569-0155-221	R 117	Zero ohm jumper	569-0165-001
R 078	0 ohm jumper	569-0155-001	R 118	Zero ohm jumper	569-0165-001
R 079	100k ohm $\pm 5\%$ 1/16W smd	569-0155-104	R 119	Zero ohm jumper	569-0115-001
R 080	100k ohm $\pm 5\%$ 1/16W smd	569-0155-104	U 001	Microprcsr, MC68HC708 (unrev bd)	023-1870-045
R 081	200k ohm $\pm 5\%$ 1/16W smd	569-0155-204		Microprcsr, MC68HC908 (rev bd)	544-9100-003
R 082	100k ohm $\pm 5\%$ 1/16W smd	569-0155-104	U 002	Analog MUX TC4W53FU	544-1010-011
R 083	100k ohm $\pm 5\%$ 1/16W smd	569-0155-104	U 003	EEPROM, 1K 2.5V 24LC02B	544-1012-402
R 084	100k ohm $\pm 5\%$ 1/16W smd	569-0155-104	U 004	Voltage detector, micropower	544-1027-665
R 085	100k ohm $\pm 5\%$ 1/16W smd	569-0155-104	U 005	RS-232 driver LTC13381G	544-1015-706
R 086	1k ohm $\pm 5\%$ 1/16W smd	569-0155-102	U 006	Audio amp, 0.5W w/vol control	544-2006-026
R 087	150k ohm $\pm 5\%$ 1/16W smd	569-0155-154	U 007	Audio amp, 0.5W w/vol control	544-2006-026
R 088	2.2k ohm $\pm 5\%$ 1/16W smd	569-0155-222	U 008	Analog MUX TC4W53FU	544-1010-011
R 089	220 ohm $\pm 5\%$ 1/16W smd	569-0155-221	U 009	Op amp, SO-8 MC33182D	544-1010-030
R 090	220 ohm $\pm 5\%$ 1/16W smd	569-0155-221	U 010	Op amp, SO-8 MC33182D	544-1010-030
R 091	10k ohm thermistor	569-3004-041	U 011	LCD driver MC14LC5003	544-1010-017
R 092	2k ohm $\pm 5\%$ 1/16W smd	569-0155-202	U 012	DC-DC converter 5V MAX744AE	544-1010-744
R 093	0 ohm jumper	569-0155-001	U 013	Regulator, 5V LT11211ST-5	544-1011-121
R 094	0 ohm jumper	569-0155-001	U 014	Shift register, 8-bit 4094	544-3016-094
R 095	150 ohm $\pm 5\%$ 1/8W smd	569-0115-151	W 101	Wire, black 30 gauge solid	592-0080-069
R 096	220 ohm $\pm 5\%$ 1/16W smd	569-0155-221	Y 001	Crystal, 4.9152 MHz	521-3060-023


EXPLODED VIEWS

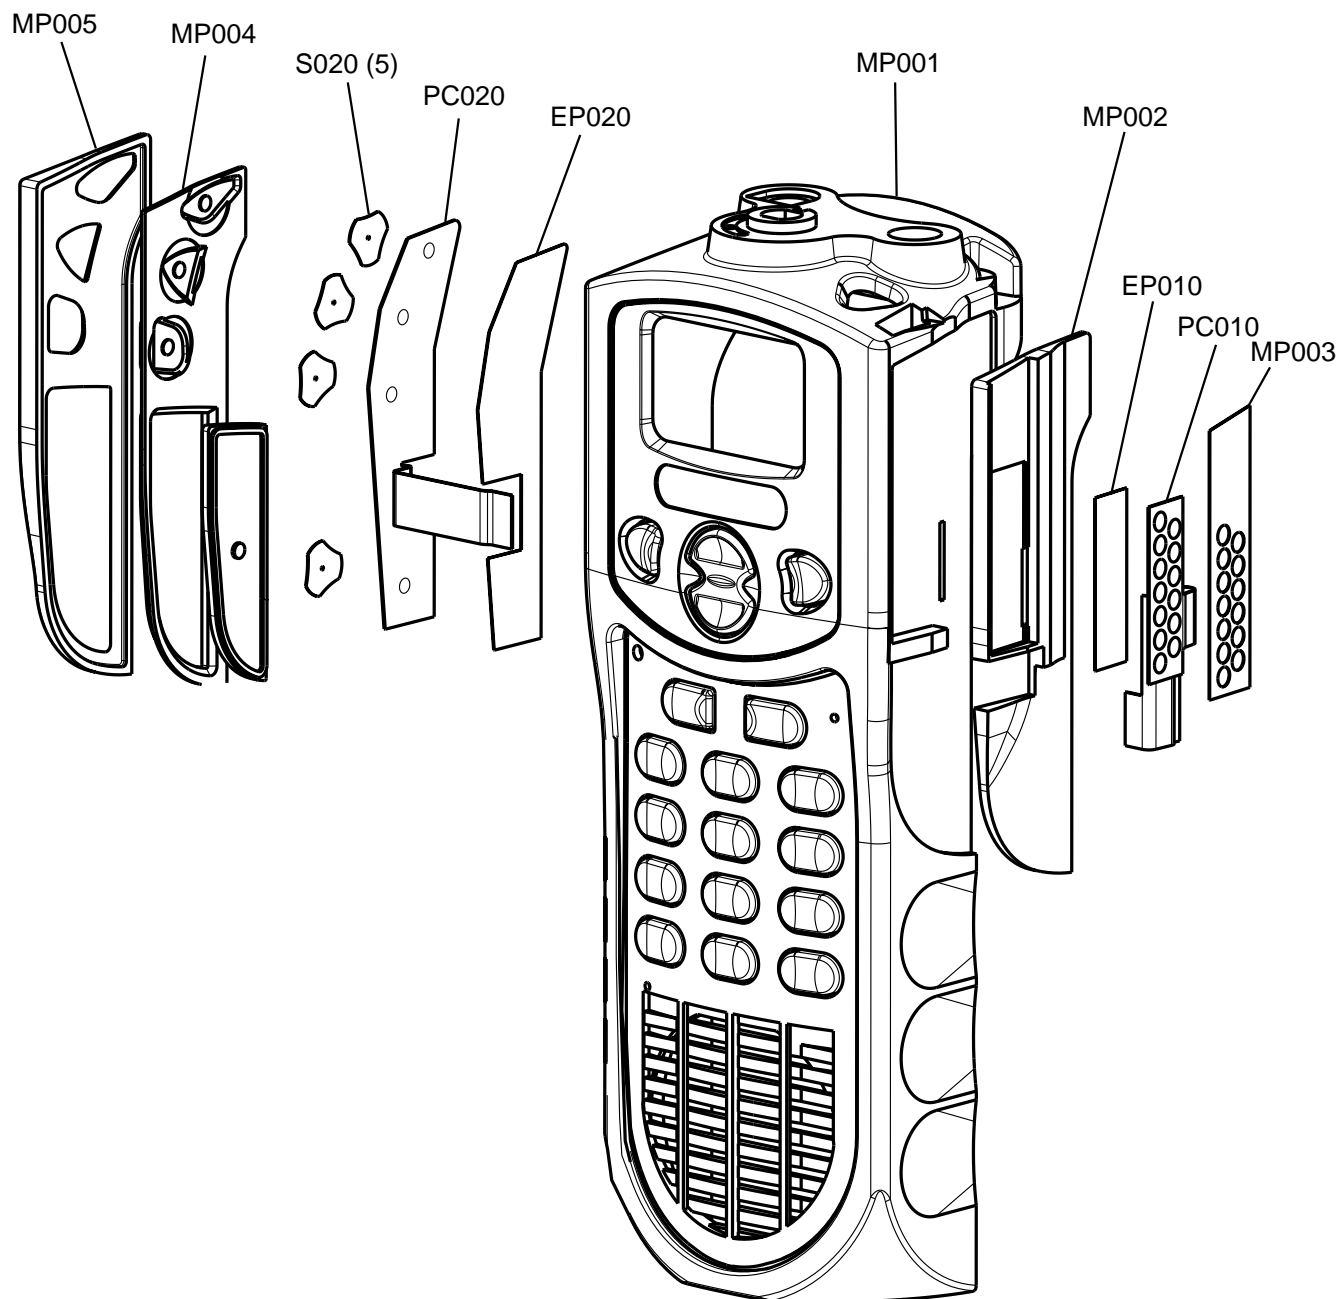


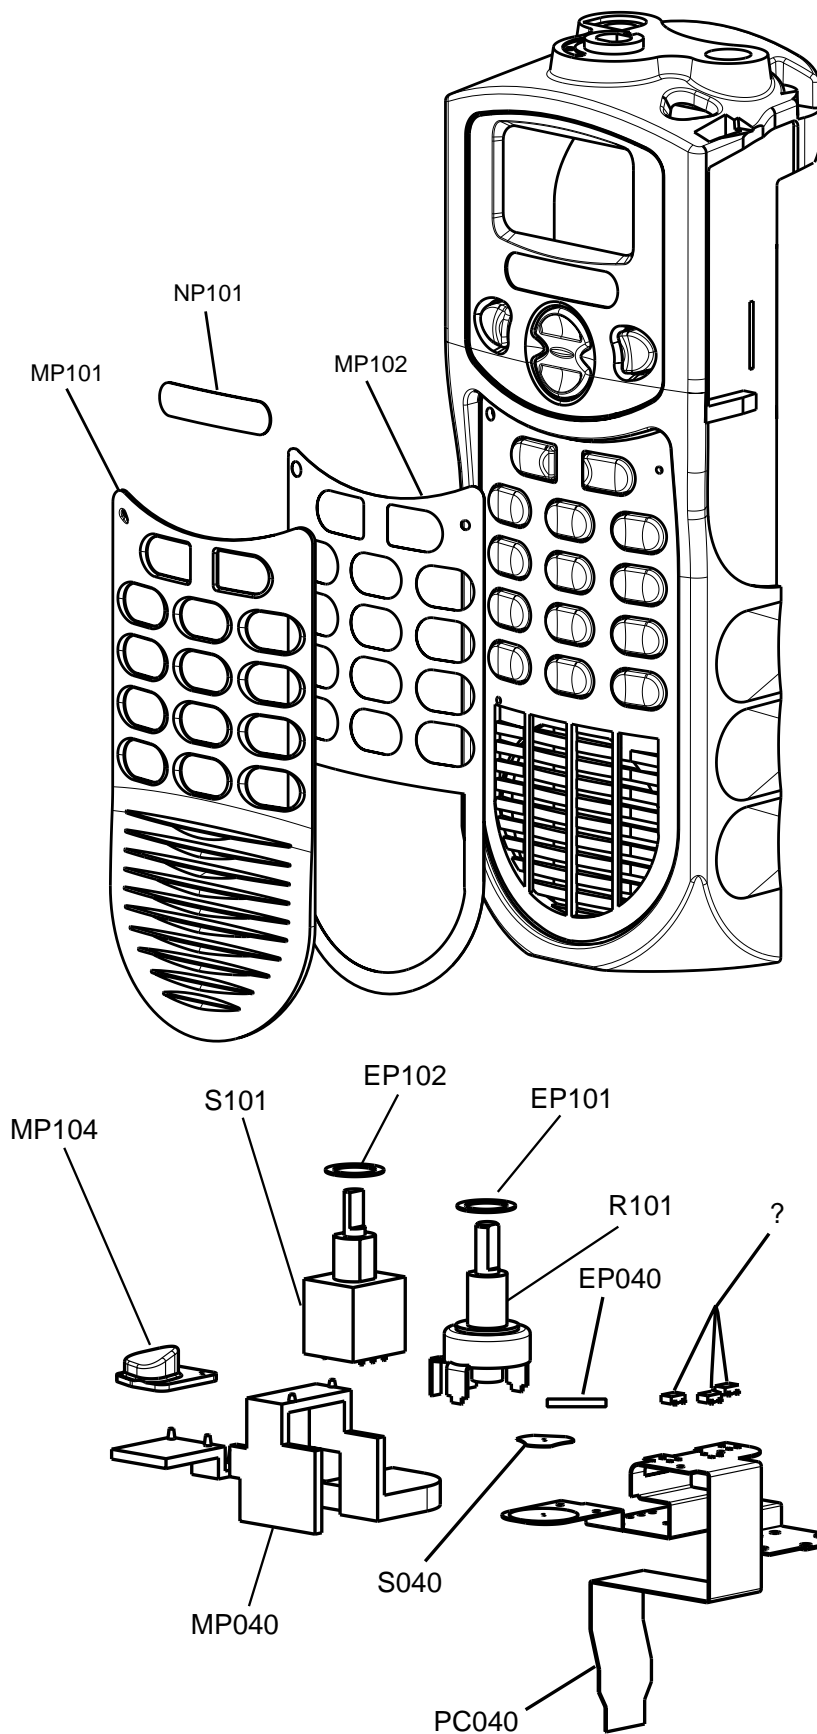

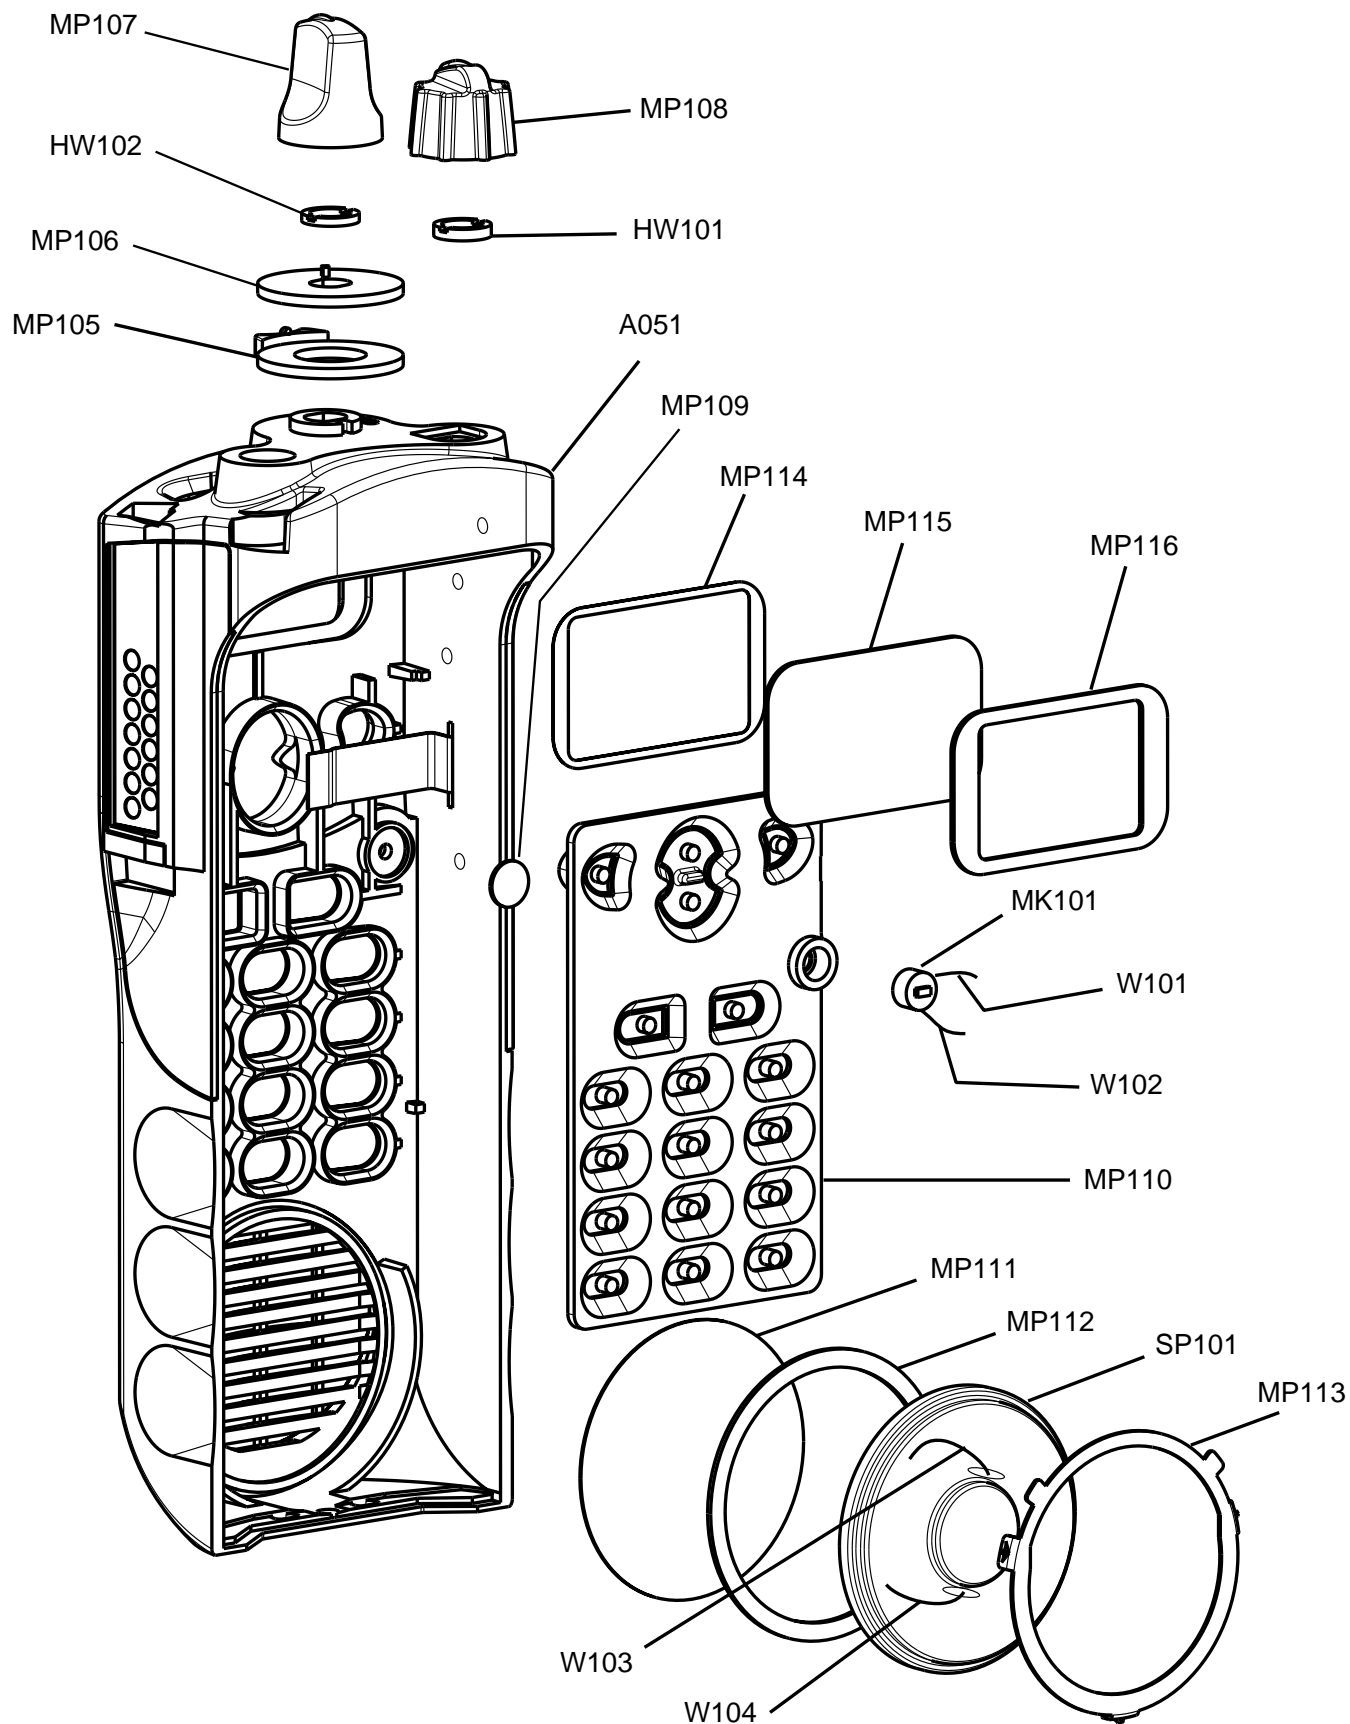

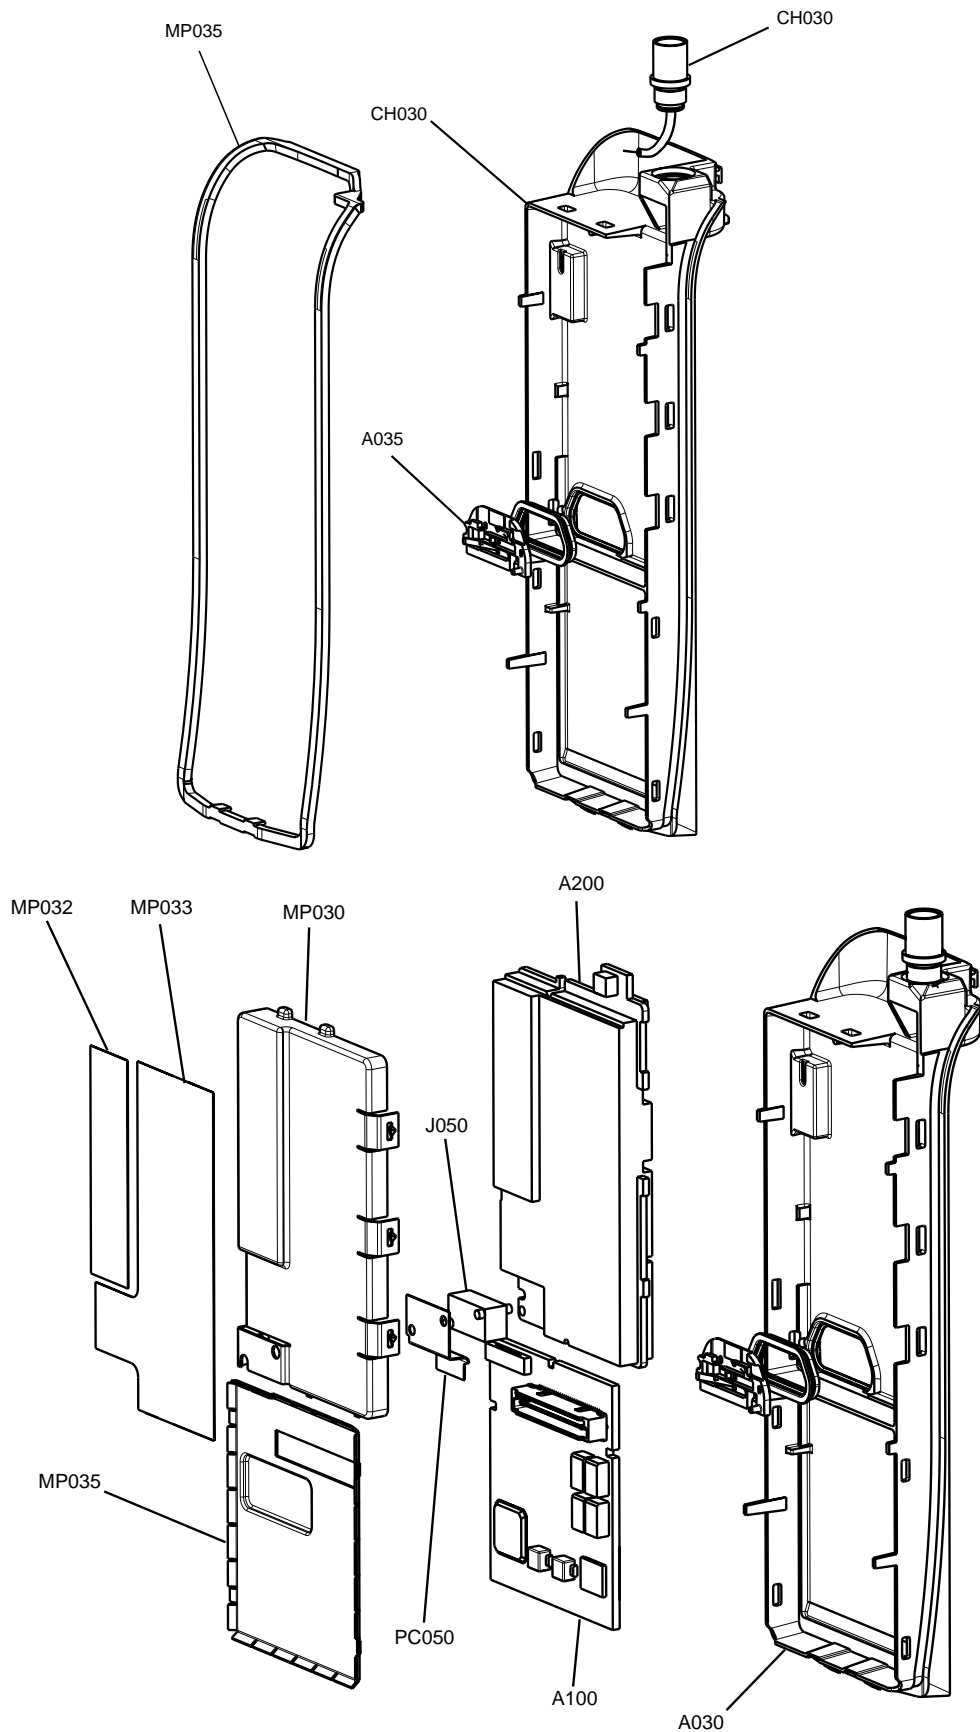


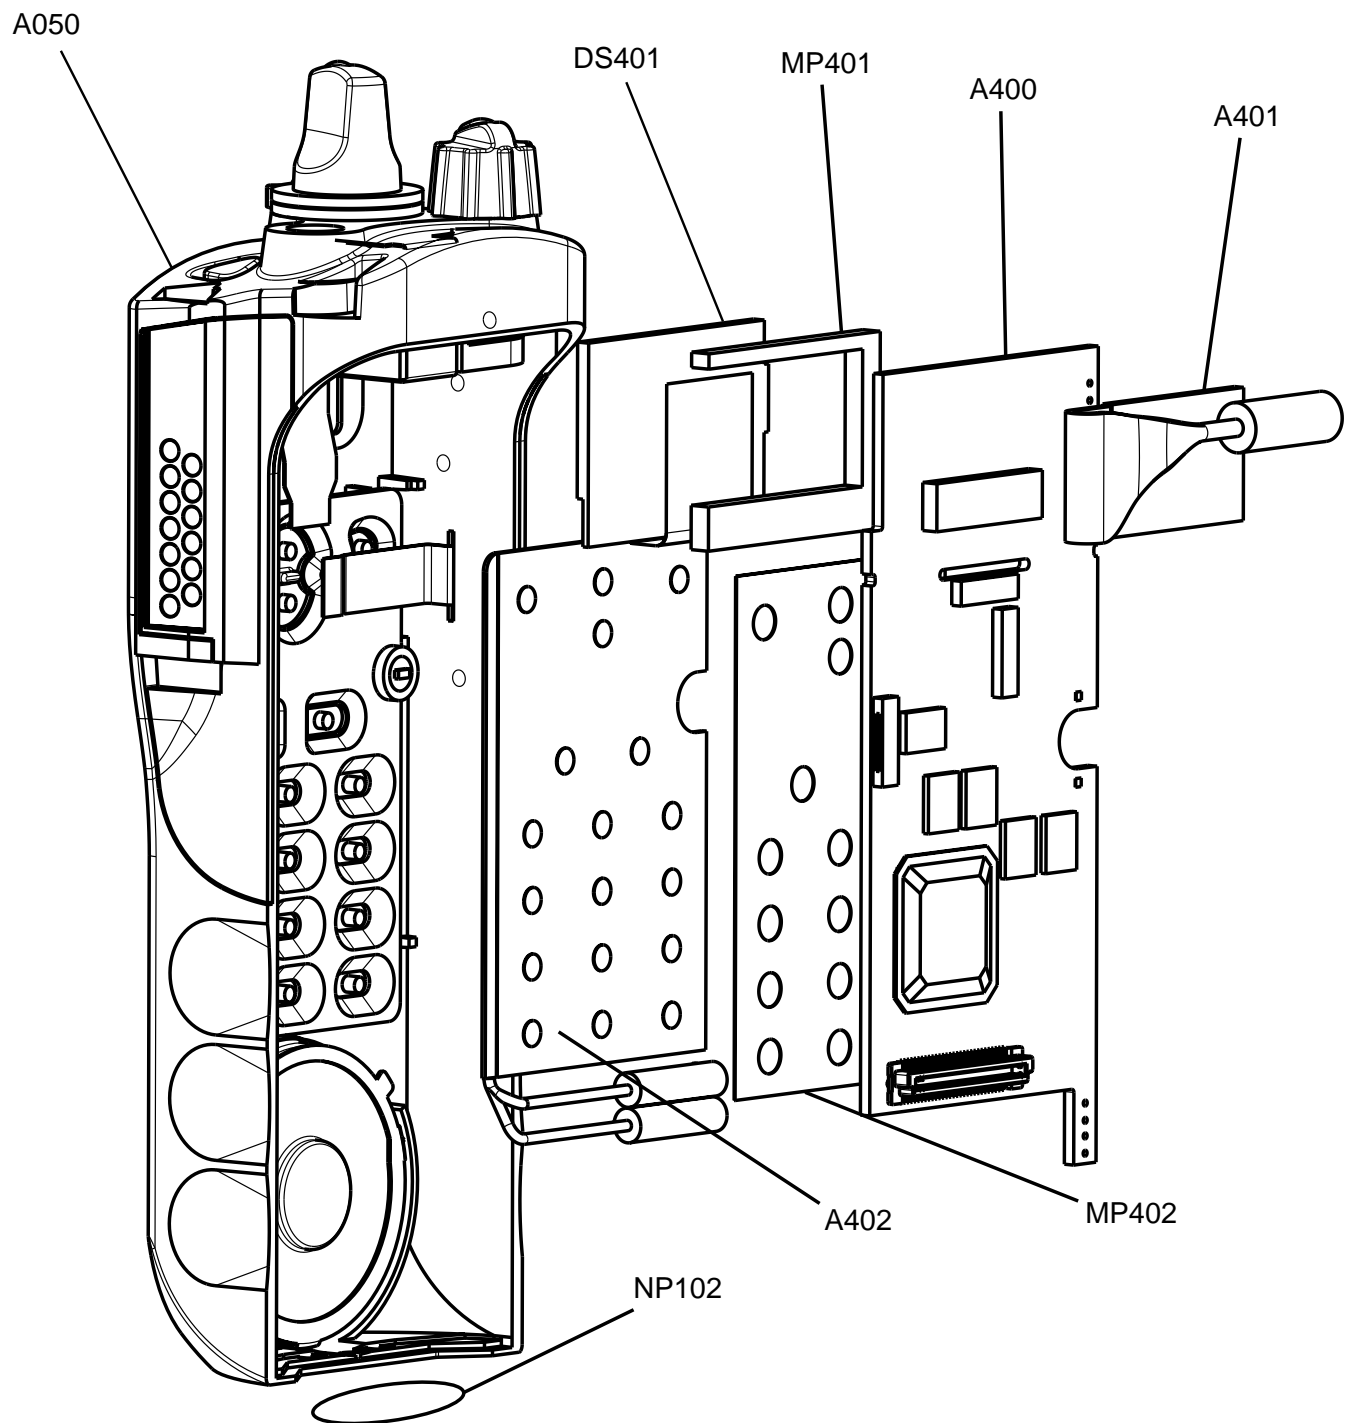

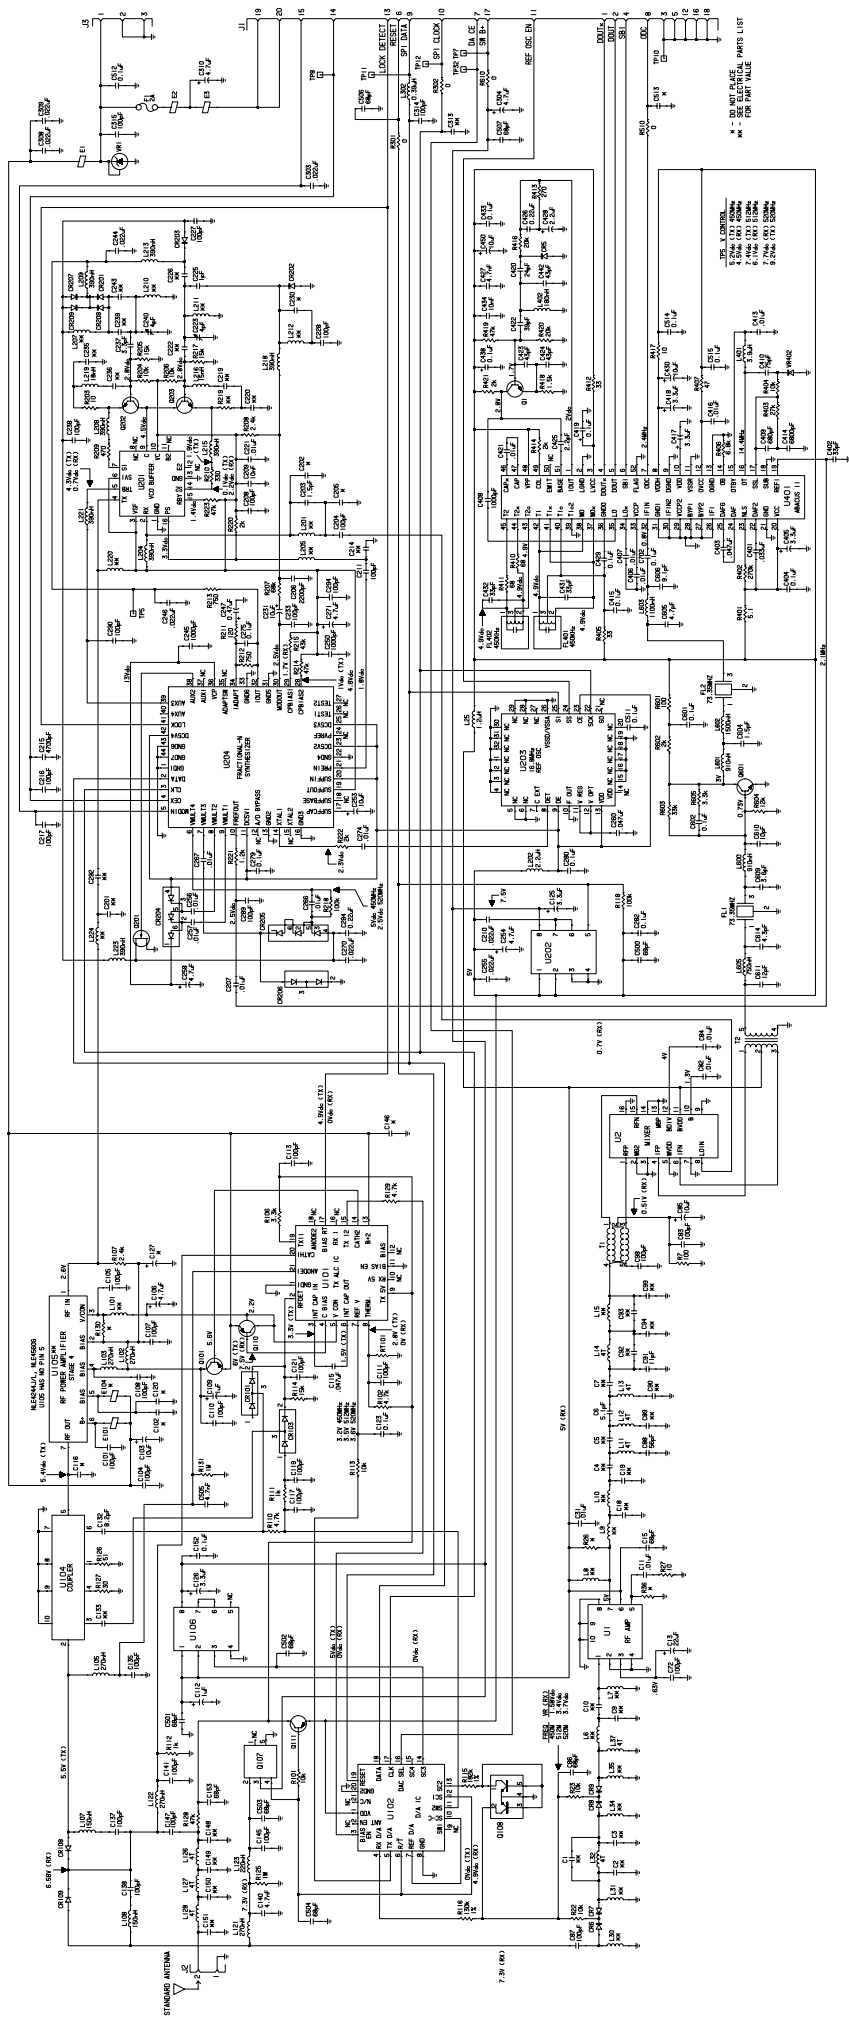

NOTE: Individual replacement parts are not available for the RF board, so the entire board must be replaced if it is defective.


UHF RF BOARD SCHEMATIC

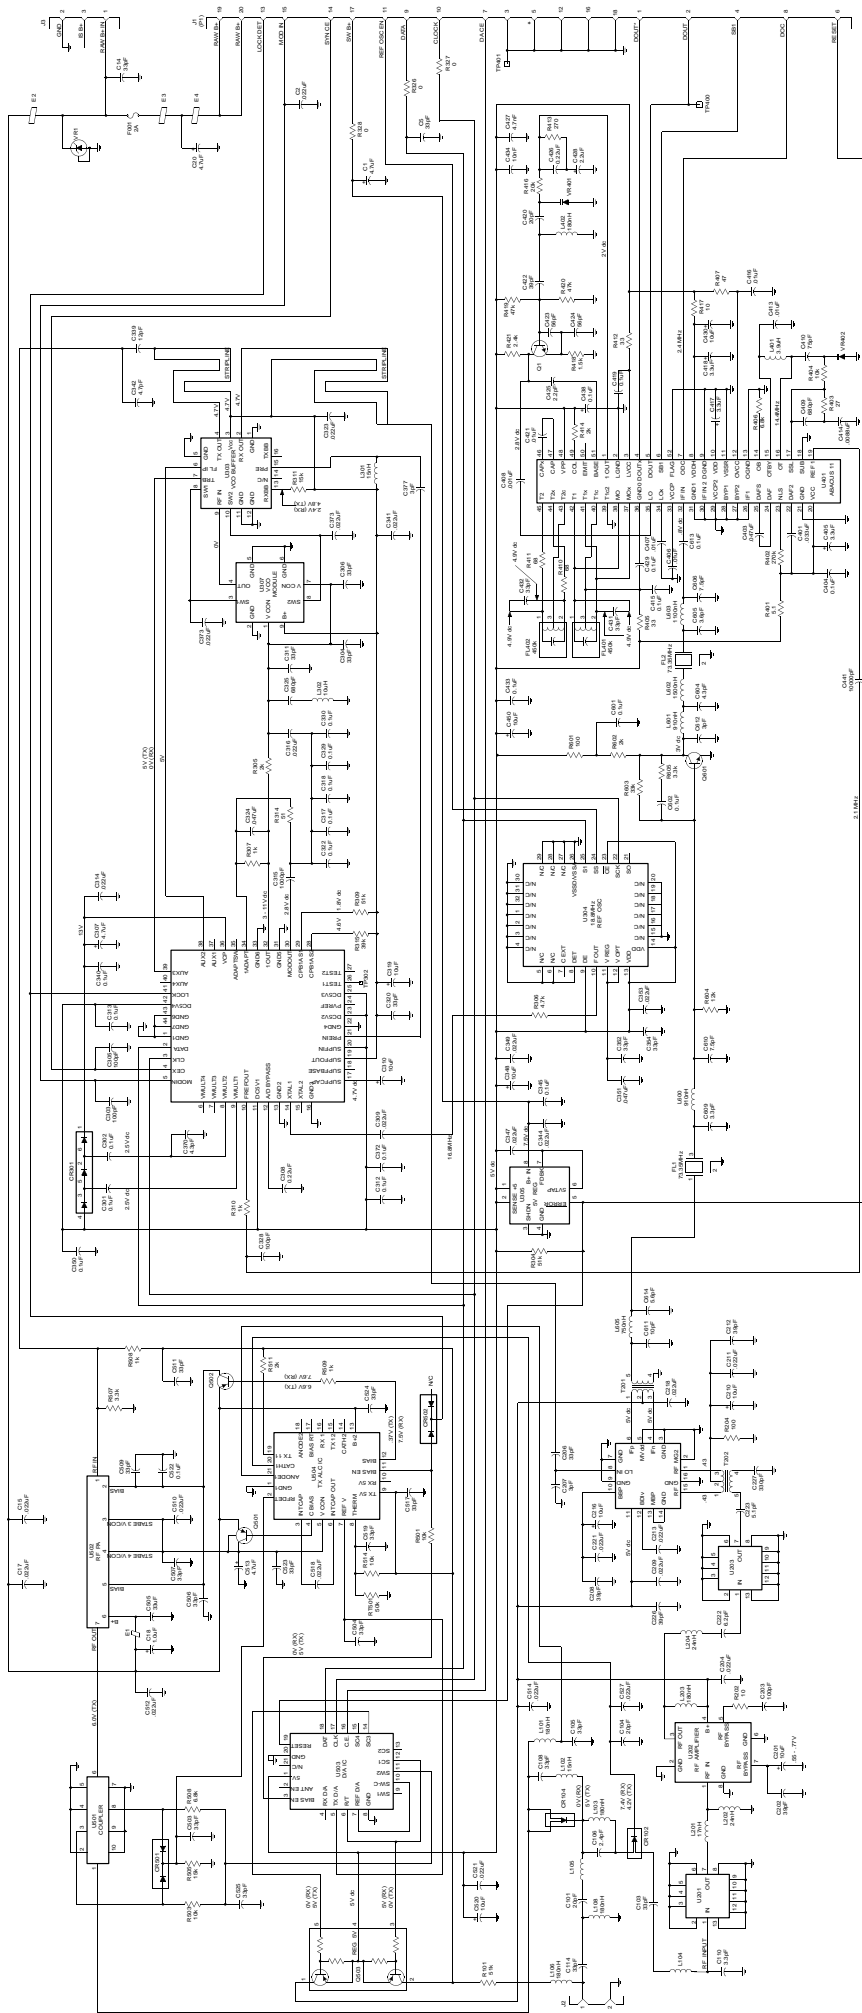



NOTE: Individual replacement parts are not available for the RF board, so the entire board must be replaced if it is defective.

800 MHZ RF BOARD SCHEMATIC


TOP VIEW

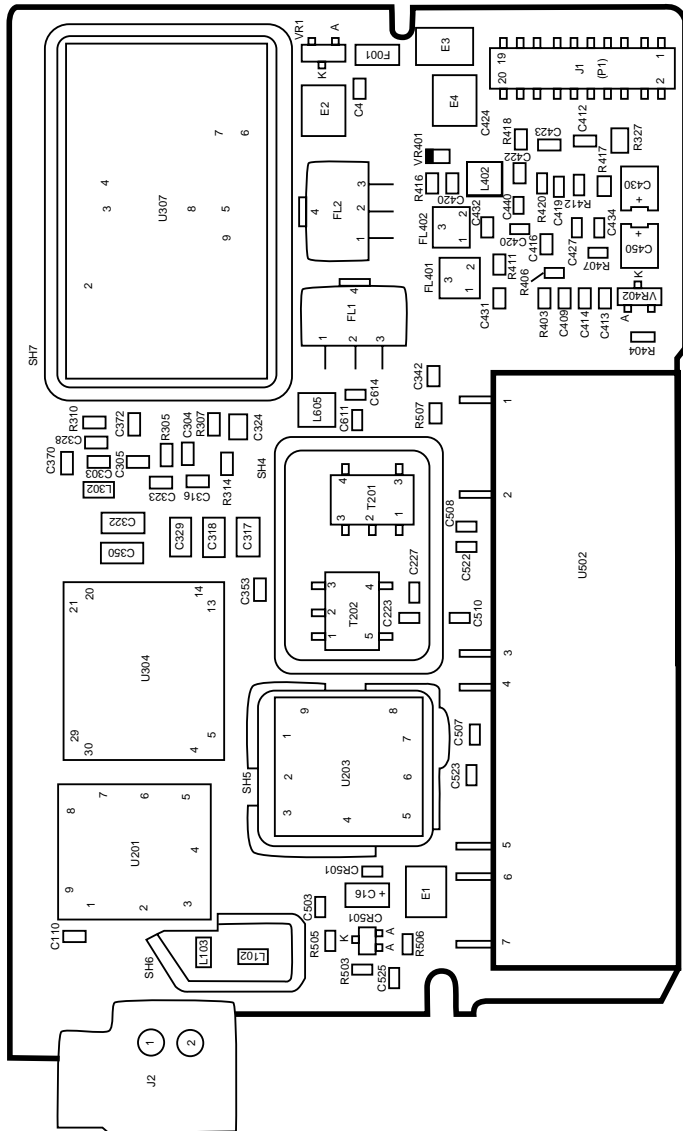


BOTTOM VIEW

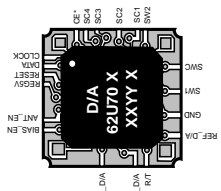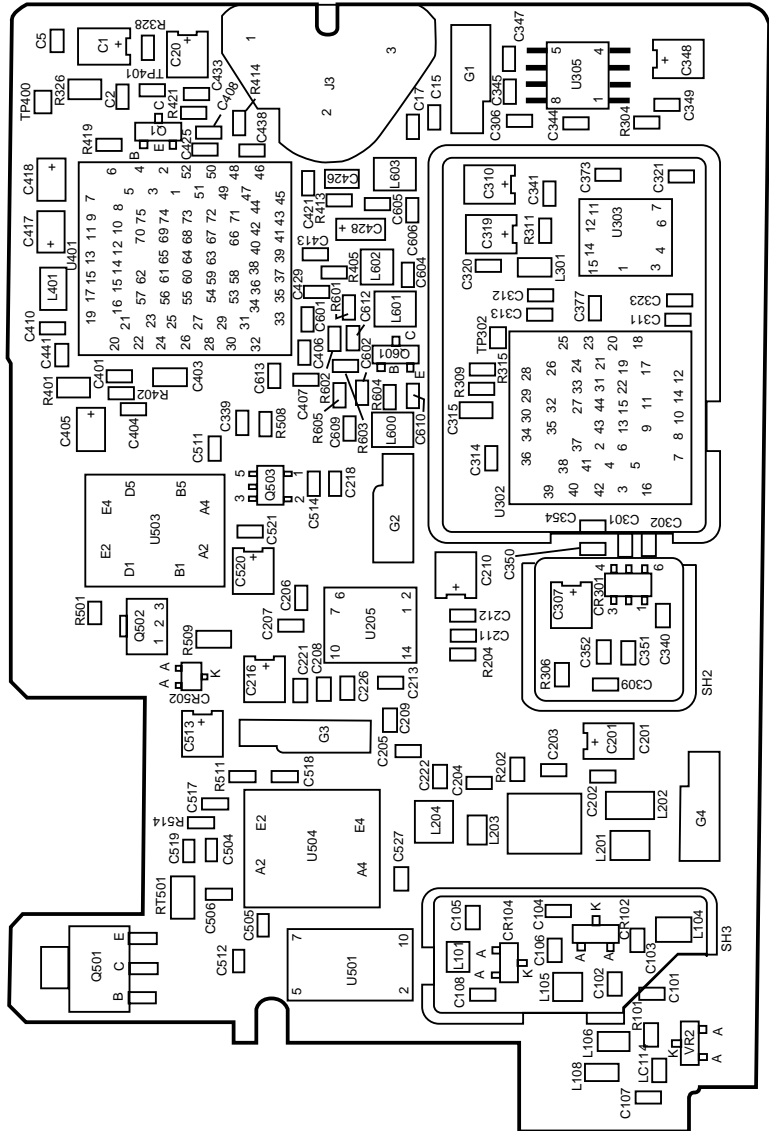


U101

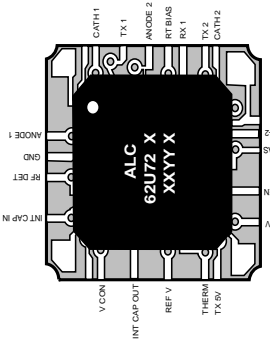


U102

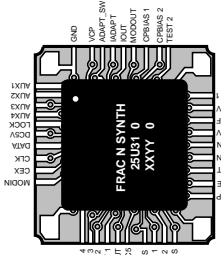


U204

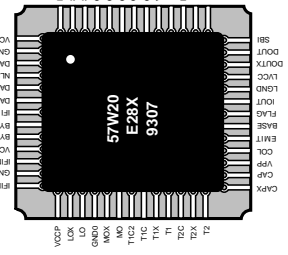

U401

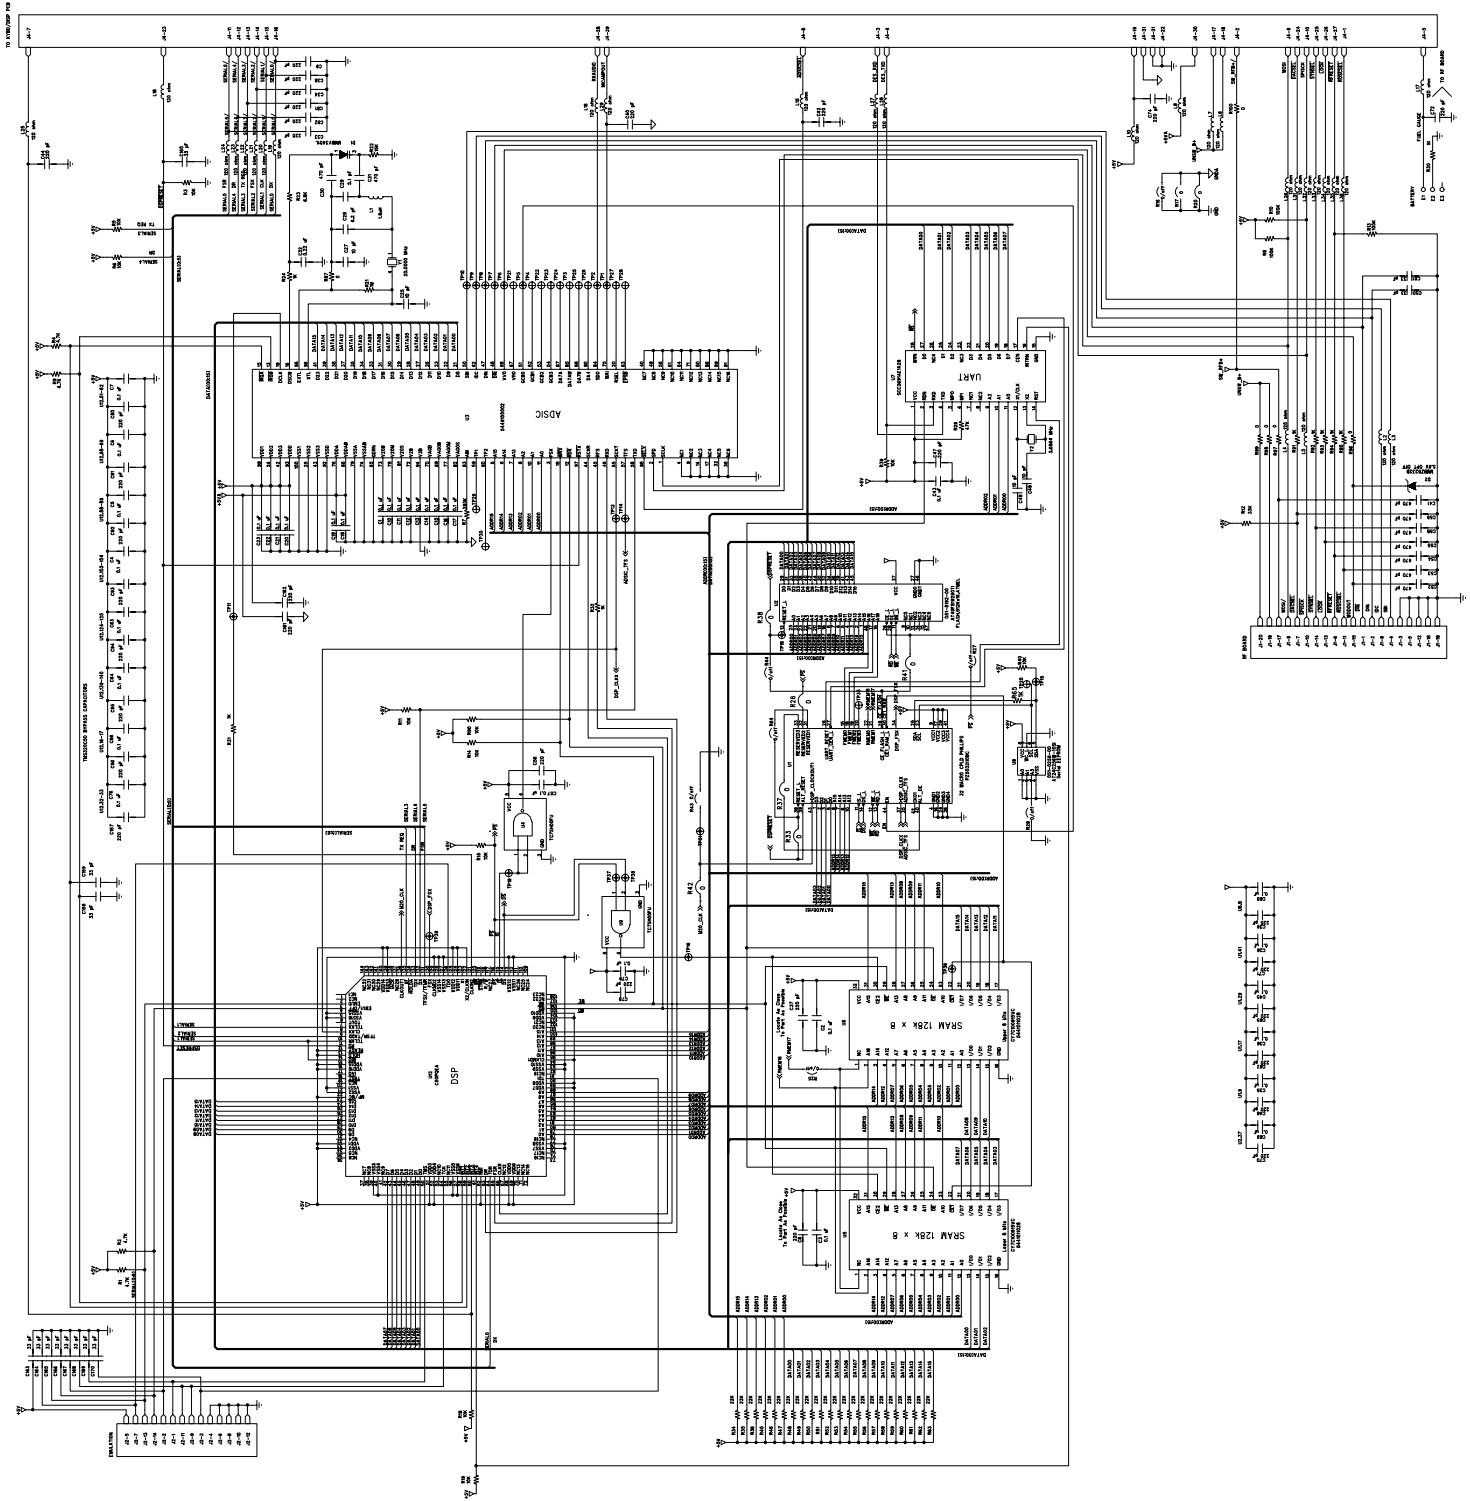

LOGIC BOARD (REV. 3) SCHEMATIC

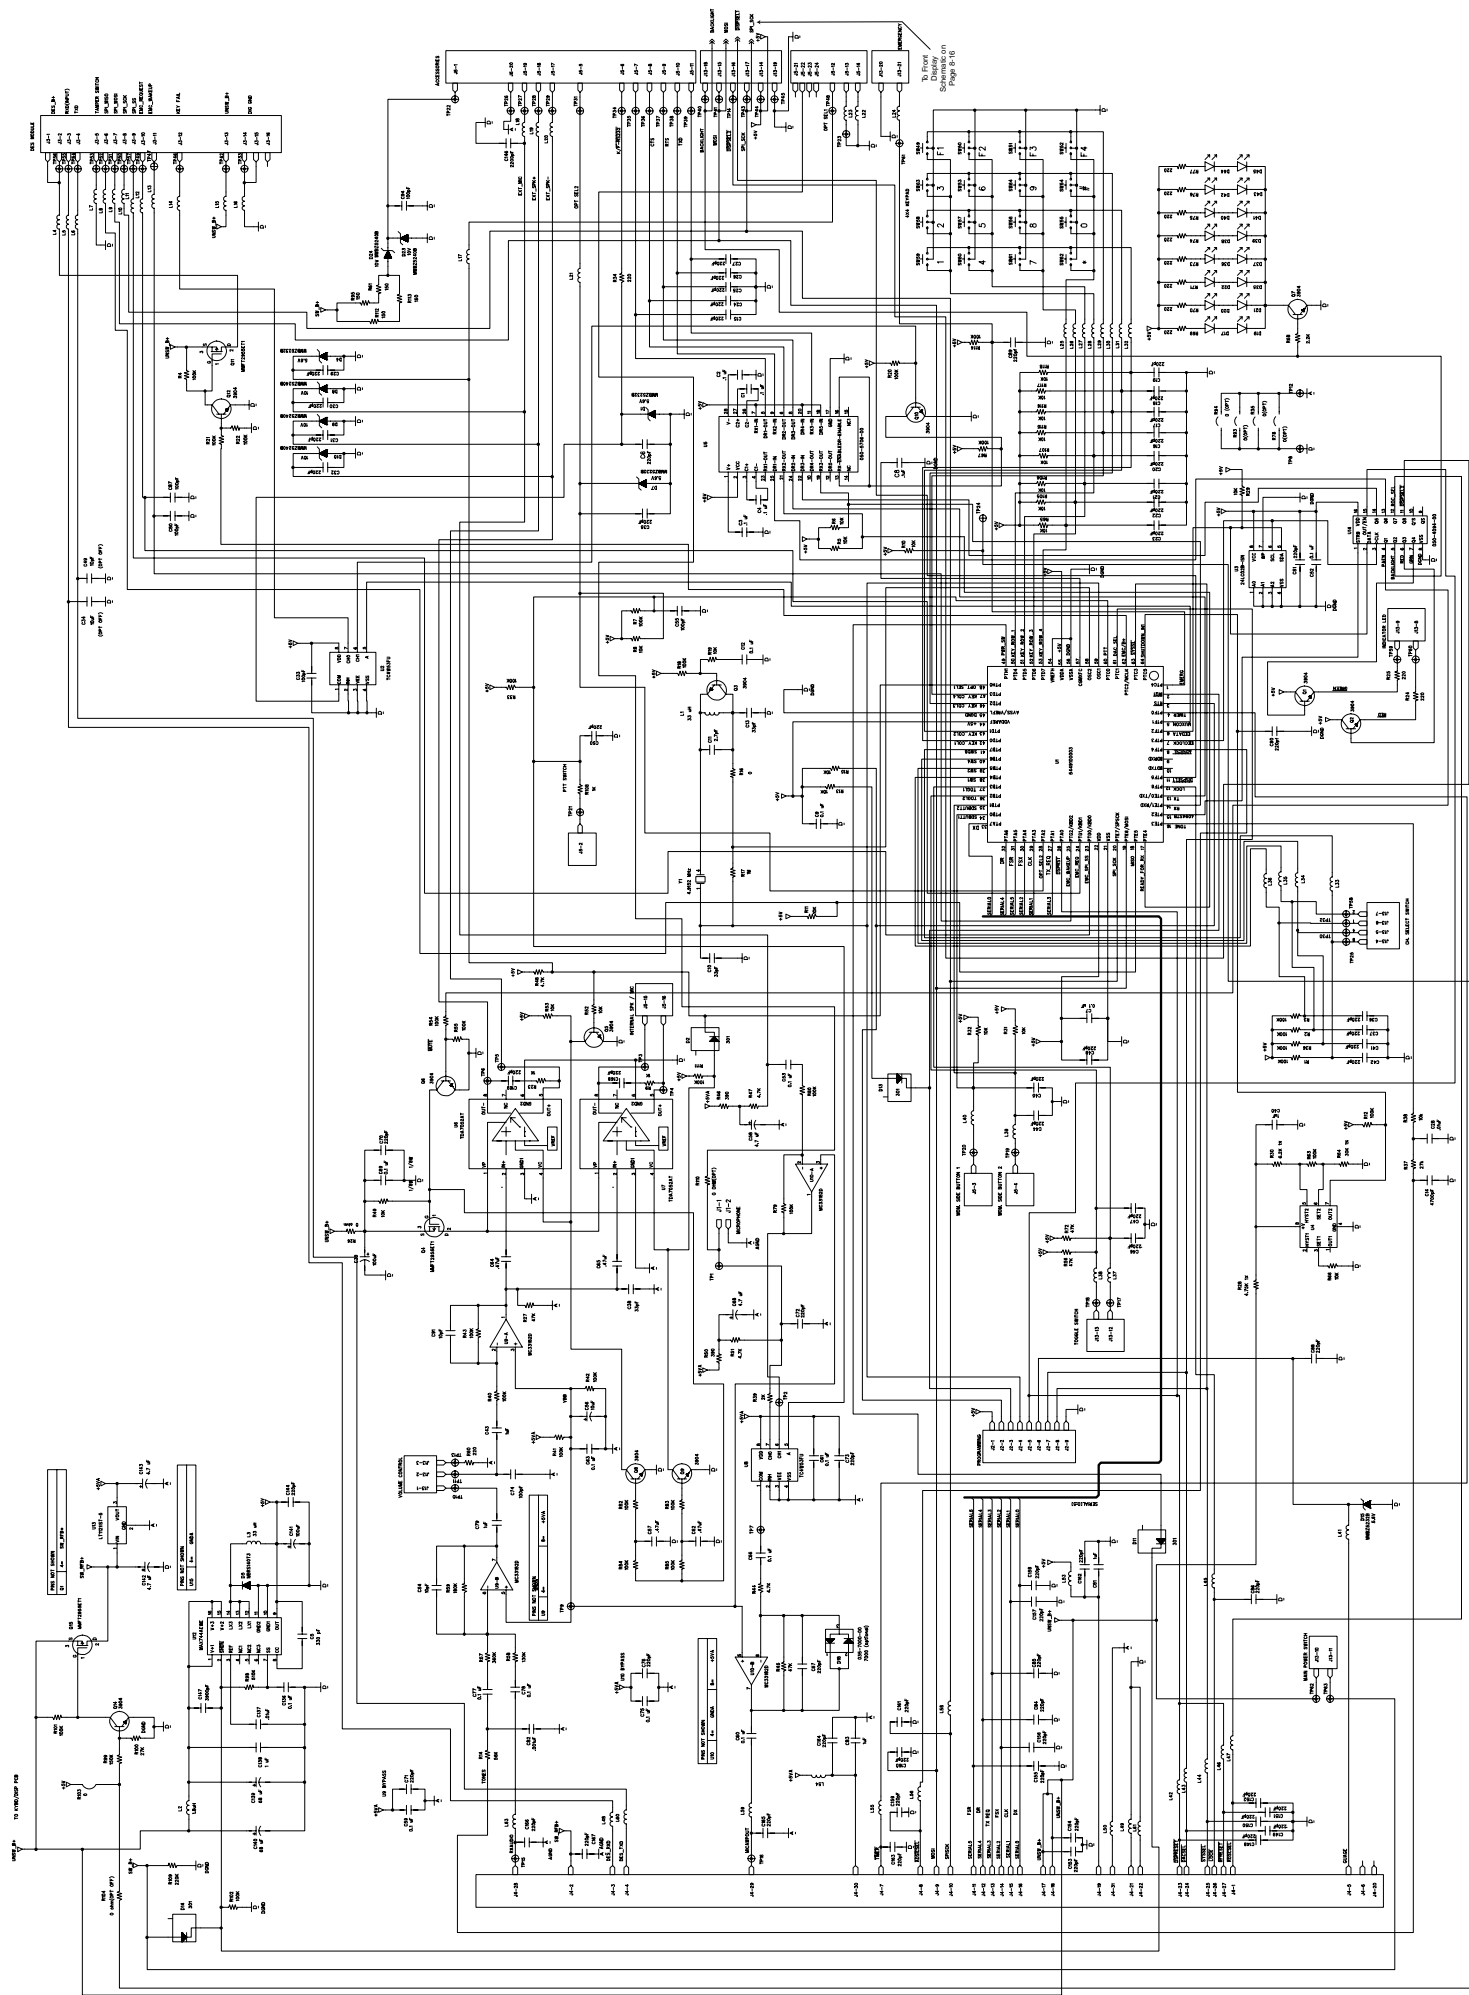

REVISED KEYPAD BOARD SCHEMATIC