



GODOX PHOTO EQUIPMENT CO.LTD

Camera Flash

TT600

Foreword

Before using this product

Please read this user manual carefully in order to ensure your safety and the proper operation of this product. Keep for future reference.

Thank you for purchasing a GODOX product.

TT600 camera flash adopts Godox wireless X system and 2.4G ratio transmission, which is compatible with AD360II-C、AD360II-N、TT685C、TT685N、X1T-C、X1T-N, etc. Fit all DSLR camera brands e.g. Canon, Nikon, Sony, etc.

This TT600 camera flash features:

- GN60 (m ISO 100, @200mm). Adjust from 1/1 to 1/128 in 1/3rd stops
- Built-in 2.4G wireless transmission to support transmitting and receiving
- High speed sync, wireless remote control, multi flash and manual focus assist
- Stable consistency and color temperature with good even lighting
- User-friendly LCD display & control panel

For Your Safety

- Always keep this product dry. Do not use in rain or in damp conditions.
- This product contains high-voltage electronic parts. Touching the high-voltage circuit inside it may result in electric shock. Do not disassemble. Should repairs become necessary, this product must be sent to an authorized maintenance center.
- Stop using this product if it breaks open due to extrusion, falling or strong hit. Otherwise, electric shock may occur if you touch the electronic parts inside it.
- Do not fire the flash directly into the eyes (especially those of babies) within short distances. Otherwise visual impairment may occur. When taking pictures for babies, keep the flash unit at least 1 meter (3.3 feet) away from them. Using bounce flash to reduce light intensity is also recommended.
- Do not use the flash unit in the presence of flammable gases, chemicals and other similar materials. In certain circumstances, these materials may be sensitive to the strong light emitting from this flash unit and fire or electromagnetic interference may result.
- Do not leave or store the flash unit in places where the ambient temperature reads over 50°C (e.g. in automobile). Otherwise the electronic parts may be damaged.

Contents

Foreword

For Your Safety

Name of Parts

Body

Control Panel

LCD Panel

What' s in the Box of TT600?

Separately Sold Accessories

Attaching to a Camera

Using the Flash

Power Management

Flash Output

ZOOM: Setting the Flash Coverage

M Mode

Multi Mode: Stroboscopic Flash

S1 Mode

S2 Mode

⚡ Hi-Speed Sync Triggering

Custom Function----Focus Assist Beam

Buzz Function

Wireless Flash Shooting: Ratio (2.4G) Transmission

Wireless Control Function

Sync Triggering

Custom Function----Sleep Function

Protection Function

Advanced Application

Technical Data

Maintenance

Name of Parts

● **Body**

01. Catchlight Panel
02. Built-In Wide Panel (Retracted)
03. Flash Head
04. Optic Control Sensor
05. Focus Assist Beam
06. Wireless Control Port
07. Sync Cord Jack
08. Hotshoe
09. Lock Ring
10. Battery Compartment

● **Control Panel**

11. < MODE/  > Mode Selection Button/Wireless Mode Selection (Long Keypress)
12. <  **ZOOM**  > Zoom / Function Custom Button (Long Keypress)
13. < GR/CH > Group/ Channel Setting (Long Keypress)
14. Select Dial
15. < **SET** > Set Button
16. ON/OFF Power Switch
17. <  > Test Button / Flash Ready Indicator
18. <  **MF**  > Focus Assist Beam / High Speed Sync Button (Long Keypress)

- **LCD Panel**

19. <M> Manual Flash Mode
20. <S1> S1 Slave Flash Triggering
21. <S2> S2 Slave Flash Triggering
22. <Multi> Multi/Stroboscopic Flash Mode
23. <↕H> High Speed Sync Triggering
24. <🔋> Battery Level Indication
25. <🎵> Sound Beep Indication
26. <Z²> Sleep Status
27. <🔥> Overtemperature Indication
28. <📶> Wireless Signal Transmission
29. <🔦> Focus Assist Beam Indicator
30. Channel
31. Group



- **What' s in the Box of TT600?**

- 1-flash unit
- 1-Mini Stand
- 1-Protection Case
- 1-Instruction manual

- **Separately Sold Accessories**

The product can be used in combination with the following accessories sold separately, so as to

achieve best photography effects:

Cells II high speed trigger, FT-16S power & trigger control, Car charger, Mini softbox, White & Silver Reflector, Honeycomb, Color gels, Snoot, etc.

Attaching to a Camera

1. Attach the Camera Flash.

Slip the camera flash' s mounting foot into the camera' s hotshoe all the way.

2. Secure the Camera Flash.

Rotate the locking screw on
the mounting foot until it locks up.

3. Detach the Camera Flash.

Rotate the locking screw on the
mounting foot until it is loosened.

Using the Flash

1. Power Management

Use ON/OFF Power Switch (16) to power the flash unit on or off. Turn off if it will not be used for an extended period of time. This flash unit has Sleep Function and will enter into sleep status when there is no operation for a long time. For Sleep Function setting, see the following instruction.

2. Flash Output

- Flash output can be varied from 1/128th power to 1/1 full power in 1/3 stop increments. To obtain a correct flash exposure, use a hand-held flash meter to determine the required flash output.
- Adjust the power output by rotating Select Dial (14). The following table makes it easier to see how the stop changes in terms of f/stop when you increase or decrease the flash output:

Figures displayed when reducing flash output level→

1/1	1/1-0.3	1/1-0.7	1/2	1/2-0.3	1/2-0.7	1/4	...	OF
	1/2+0.7	1/2+0.3		1/4+0.7	1/4+0.3		...	

←Figures displayed when increasing flash output level



When "OF" is shown on the LCD display, it means no flash output and flash firing is turned off.

3. ZOOM: Setting the Flash Coverage

The flash coverage can be set to match the lens focal length from 24 mm to 200 mm.

ZOOM

Press <  > button (12) and rotate Select Dial (14) to change the flash coverage.



When setting the flash coverage, make sure it covers the lens focal length so that the picture will not have a dark periphery.

4. M Mode: Manual Mode

Press MODE Selection Button (11) to enter M mode. In this mode, you can set the flash unit onto your camera hot shoe or your trigger hot shoe for firing.

Before shooting, adjust the flash power output. When the camera's shutter is pressed, the flash will fire synchronously. Slave triggering mode is not available in M mode.

5. Multi Mode: Stroboscopic Flash

Press Mode Selection Button (11) to enter Multi mode (Stroboscopic flash). With stroboscopic flash, a rapid series of flashes is fired. It can be used to capture multiple images of a moving subject in a single photograph.

You can set the firing frequency (number of flashes per sec. expressed as Hz), the number of flashes, and the flash output.

For setting procedures, see the following:

- Press the Mode Selection Button (11) so that "Multi" is displayed.
- Press Set Button (15) to select the item to be set. The item blinks.
- Rotate Select Dial (14) to set a desired number.

Calculating the Shutter Speed

During stroboscopic flash, the shutter remains open until the firing stops. Use the provided formula to calculate the shutter speed required to capture the full sequence of flashes:

$$\text{Number of flashes} / \text{Firing frequency} = \text{Shutter speed}$$

For example, if the number of flashes is 10 and the firing frequency is 5 Hz, the shutter speed should be at least 2 sec.

Note:

- Stroboscopic flash is most effective with a highly reflective subject against a dark background.
- Using a tripod and a remote switch is recommended.
- A flash output of 1/1 or 1/2 cannot be set for stroboscopic flash.
- Stroboscopic flash can be used with "buLb" .

Maximum Stroboscopic Flashes :

Flash Output \ Hz	1	2	3	4	5	6-7	8-9
1/4	7	6	5	4	4	3	3
1/8	14	14	12	10	8	6	5
1/16	30	30	30	20	20	20	10
1/32	60	60	60	50	50	40	30
1/64	90	90	90	80	80	70	60
1/128	100	100	100	100	100	90	80

Flash Output \ Hz	10	11	12-14	15-19	20-50	60-199
1/4	2	2	2	2	2	2
1/8	4	4	4	4	4	4
1/16	8	8	8	8	8	8
1/32	20	20	20	18	16	12
1/64	50	40	40	35	30	20
1/128	70	70	60	50	40	40



To avoid overheating and deteriorating the flash head during stroboscopic flash, do not use stroboscopic flash more than 10 times in succession.

6. S1 Mode: S1 Slave Triggering Mode

Long Press <zoom/Fn> button for 2 seconds to enter the custom menu and press Set Button to choose Sn. Then, turn the Select Dial to choose OFF/S1/S2. In S1 mode, the flash unit can function as a slave flash for creating multiple lighting effects. It is respectively applicable to manual flash environment.

In S1 mode, the flash unit will fire synchronously when the master flash fires, the same effect as that by the use of radio triggers.

7. S2 Mode: S2 Slave Triggering Mode

Long Press <ZOOM/Fn> button for 2 seconds to enter the custom menu and press Set Button to choose Sn. Then, turn the Select Dial to choose OFF/S1/S2. In S2 mode, the flash unit can function as a slave flash for creating multiple lighting effects. It is applicable when using a TTL master flash.

In S2 mode, the flash unit will ignore a single "preflash" from the master flash and will only fire

in response to the second, actual flash from the master.

8. Hi-Speed Sync Triggering

- To enter  mode, long press <   > button and hold for 2 seconds.
- To exit  mode, press Mode Selection Button or long press <   > button and hold for 2 seconds again.
- In  hi-speed sync triggering mode, you can use a hi-speed sync trigger to have your flash unit synchronized with all shutter speeds of cameras (max. 1/8000 second, up to your camera). This is convenient when you want to use aperture priority for fill-flash portraits.

Note:

*Hi-speed sync triggering mode is effective only when the flash unit is used together with the following flash triggers.

1. Hi-speed sync trigger, e.g., Godox Cells II transceiver.
2. TTL wireless flash trigger X1C
3. TTL wireless flash trigger X1N

*Hi-speed sync triggering mode is not available when TT600 is mounted onto the camera



To avoid overheating or deteriorating the flash head during high speed sync flash, the over-temperature protection function will be activated automatically after 10 continuous high-speed flashes and the recycle time becomes 10 seconds longer.

9.

- Under poorly-lit or low-contrast conditions, you can press <   > button (18) to turn on the focus assist beam in order to make it easier to autofocus.

- The beam will automatically put out certain seconds after the last pop is fired. The time between the last fire and the auto shutdown of focus assist beam is called No-Flash Time. The time is user adjustable and set to 10 seconds by default.
- Press <  > button and hold for 2 seconds to enter Custom Function. Then press "SET" button to enter "FC" mode. The LCD panel displays "FC" (Auto shutdown of focus assist lamp) and "No-Flash Time" . Rotate Select Dial (14) to set a desired time for the flash. Press  > button to return.

No-Flash Time	Meaning
10 seconds	10 seconds after the last fire, focus assist lamp will automatically get out.
20 seconds	20 seconds after the last fire, focus assist lamp will automatically get out.
30 seconds	30 seconds after the last fire, focus assist lamp will automatically get out.

10. Buzz Function


To turn the buzz function on or off, press <  > button and hold for 2 seconds to enter Custom Function. Then press "SET" button to enter "bp" mode. The LCD displays "ON" means buzz is turned on while "OF" means buzz is turned off.

When the buzzer is turned on,  is shown on the LCD display.

11. Wireless Flash Shooting: Ratio (2.4G) Transmission

- TT600 has 2.4G ratio transmission (Master/Slave)
- Wireless mode setting: Long press < MODE/  > button and hold for 2 seconds until  icon is blinking. Turn the Select Dial to set from OFF/Master(M)/Slave(S) mode.
- Channel setting: Long press < GR/CH > button and hold for 2 seconds until the figure besides the CH is blinking. Turn the Select Dial to choose the channel from 1~32.

- Group setting: Short press < GR/CH > button to select group. In Master mode, groups can be selected from M/A/B/C/D/E; while in Slave mode, groups can be selected from A/B/C/D/E.
- As TT600 adopts Godox wireless X system, it is compatible with AD360II-C、 AD360II-N、 TT685C、 TT685N、 X1T-C、 X1T-N wireless control, etc.
- See the picture below:

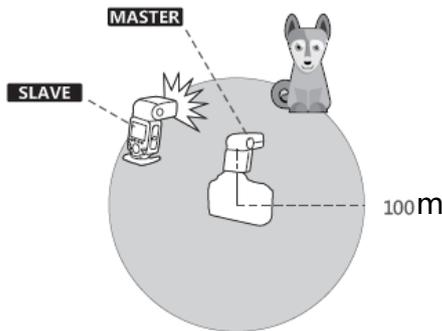

12. Wireless Control Function

- The flash unit is built in with a Wireless Control Port (6) so that you can wirelessly adjust the power level of the flash and control the on-or-off of your flash, focus assist beam and buzzer, as well as trigger the flash.
- To control the flash wirelessly, you need a Godox FT series remote control set (on-camera and on-flash). Insert its receive end into the Wireless Control Port (6) on the flash and insert the transmit end into the camera hot shoe. Settings made on the hotshoe-mounted transmit and receive ends will be wirelessly communicated to the flash. Then you can press the camera shutter-release button to trigger the flash. You can also hold the transmit end at hand to control your off-camera flash.
- For full instructions on the use of FT series remote control, see its user manual.

13. Sync Triggering

The Sync Cord Jack (7) is a $\Phi 3.5\text{mm}$ plug. Insert a trigger plug here and the flash will be fired synchronously with the camera shutter.

14. Custom Function----Sleep Function

- This product is equipped with Sleep Function to avoid battery drain when the flash unit is idle.
- Press < ZOOM Fn > button and hold for 2 seconds to enter the sleep Function Mode. The LCD panel displays "SL" (Sleep) and "Sleeping Time" . Idle time before entering Sleep Mode is 10 minutes by default. Rotate Select Dial (14) to set a desired time for the flash or to turn off Sleep Function. Press < ZOOM Fn > button to return.

Idle Time	Meaning
OF	Sleep Function is turned off. The flash unit will not automatically enter sleep mode.
3	Idle time before entering Sleep Mode is set to 3 minutes.
10	Idle time before entering Sleep Mode is set to 10 minutes.
30	Idle time before entering Sleep Mode is set to 30 minutes.
60	Idle time before entering Sleep Mode is set to 60 minutes.

- When the flash enters sleep mode, the LCD panel displays a "Z^Z" icon.
- To wake up the flash unit, press any button on the flash unit, or press the camera release button, or press the trigger TEST button.

Note:

The idle time before entering Sleep Mode is recommended to set short. This can ensure a longer battery life.

15. C.Fn Setting Custom Functions

Custom Function Signs	Function	Settings & Description	Operation
	Sleeping	Settable Time:	1. Press <Zoom/Fn> button to

SL	Time Setting	<p><3> 3 minutes</p> <p><10> 10 minutes</p> <p><30> 30 minutes</p> <p><60> 60 minutes</p> <p><OF> (OFF)</p>	<p>enter Custom Functions.</p> <p>2. Turn the Select Dial to adjust sleeping time.</p> <p>3. Press <Zoom/Fn> button to return.</p> <p>*Press any button can wake up the flash.</p> <p>* The idle time before entering Sleep Mode is recommended to set short. This can ensure a longer battery life.</p>
FC	Auto Power OFF Time Setting of Auto Focus Assist	<p><10>10 seconds</p> <p><20>20 seconds</p> <p><30>30 seconds</p>	<p>1. Press <Zoom/Fn> button to enter Custom Functions.</p> <p>2. Press SET button to enter FC states.</p> <p>3. Turn the Select Dial to adjust.</p> <p>4. Press <Zoom/Fn> button to return.</p>
bp	Buzz Setting	<p><ON> On</p> <p><OF> Off</p>	<p>1. Press <Zoom/Fn> button to enter Custom Functions.</p> <p>2. Press SET button to enter bp states.</p> <p>3. Turn the Select Dial to adjust.</p> <p>4. Press <Zoom/Fn> button to</p>

			return.
bL	Backlight Setting	Backlight can be set as follows : <ON> : Always lighting <12> : Off in 12 sec. <OF> : Off	<ol style="list-style-type: none"> 1. Press <Zoom/Fn> button to enter Custom Functions. 2. Press SET button to enter bL states. 3. Turn the Select Dial to adjust. 4. Press <Zoom/Fn> button to return.
OS	Optic Slave Mode	<OF> Off <S1> S1 mode <S2> S2 mode	<ol style="list-style-type: none"> 1. Press <Zoom/Fn> button to enter Custom Functions. 2. Press SET button to enter OS states. 3. Turn the Select Dial to adjust. 4. Press <Zoom/Fn> button to return.

Protection Function

1. Over-Temperature Protection

- To avoid overheating and deteriorating the flash head, do not fire more than 30 continuous flashes in fast succession at 1/1 full power. After 30 continuous flashes, allow a rest time of at least 10 minutes.
- If you fire more than 30 continuous flashes and then fire more flashes in short intervals, the inner over-temperature protection function may be activated and make the recycling time

about 10 to 15 seconds. If this occurs, allow a rest time of about 10 minutes, and the flash unit will then return to normal.

- When the over-temperature protection is started,  is shown on the LCD display.

Number of flashes that will activate over-temperature protection:

Power Output Level	Number of Flashes
1/1	30
1/2 +0.7	40
1/2 +0.3	50
1/2	60
1/4 (+0.3,+0.7)	100
1/8 (+0.3,+0.7)	200
1/16 (+0.3,+0.7)	300
1/32 (+0.3,+0.7)	500
1/64 (+0.3,+0.7)	1000
1/128 (+0.3,+0.7)	

Number of flashes that will activate over-temperature protection in high-speed sync mode:

Power	Times
1/1	15
1/2 (+0.3,+0.7) ;	20
1/4 (+0.3,+0.7) 1/8 (+0.3,+0.7) ;	30
1/16 (+0.3,+0.7) 1/32 (+0.3,+0.7) ;	40
1/64 (+0.3,+0.7) ;	50

2. Other Protections

The system provides real-time protection to secure the device and your safety. The following lists prompts for your reference:

Prompts on LCD Panel	Meaning
E0	A failure occurs on the temperature sensor. Please send this kit to a maintenance center.
E1	A failure occurs on the recycling system so that the flash cannot fire. Please restart the flash unit. If the problem still exists, please send this product to a maintenance center.
E2	The system gets excessive heat. Please allow a rest time of 10 minutes.
E3	The voltage on two outlets of the flash tube is too high. Please send this product to a maintenance center.

Advanced Application

1. Bounce Flash

By pointing the flash head toward a wall or ceiling, the flash will bounce off the surface before illuminating the subject. This can soften shadows behind the subject for a more natural-looking shot.

2. Creating a Catchlight

With the catchlight panel, you can create a catchlight in the subject' s eyes to add life to the facial expression.

3. Using the Wide Panel

Pull out the built-in wide panel to enlarge the flash lighting range, so as to get more softened and

natural lighting effect.

Technical Data

Product Model	TT600
Guide No. (1/1 power @ 200mm)	GN60 (m ISO 100)
Vertical Rotation Angle	-7° to 90°
Horizontal Rotation Angle	0 to 360°
Power Supply	Ni-MH batteries (recommended) or 4*LR6 alkaline batteries
Full Power Flashes	Approx. 230 (2500mA Ni-MH batteries)
Recycle Time	Approx. 0.1-2.6 seconds (eneloop Ni-MH batteries of Panasonic). Red LED indicator will light up when the flash is ready.
Flash Duration	1/300s - 1/20000s
Color Temperature	5600±200K
Wireless Flash Function	Master, Slave, Off
Controllable slave groups	5 (A, B, C, D, E)
Transmission Range (approx.)	100m
Channel	1~32
Dimension	64mm *76mm*190 mm
Weight without Battery	400g
Weight with Battery	500g

Maintenance

-Shut down the device immediately should abnormal operation be detected.

-Avoid sudden impacts and the lamp should be dedusted regularly.

- It is normal for the flash tube to be warm when in use. Avoid continuous flashes if unnecessary.
- Maintenance of the flash must be performed by our authorized maintenance department which can provide original accessories.
- This product, except consumables e.g. flash tube, is supported with a one-year warranty.
- Unauthorized service will void the warranty.
- If the product had failures or was wetted, do not use it until it is repaired by professionals.
- Changes made to the specifications or designs may not be reflected in this manual.

FCC Warning

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user' s authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no

guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

—Reorient or relocate the receiving antenna.

—Increase the separation between the equipment and receiver.

—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

—Consult the dealer or an experienced radio/TV technician for help.