

ATTACHMENT E.

- USER MANUAL -

INFORMATION TO USER :

NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

CAUTION

Changes or modifications not expressly approved
by the manufacturer responsible for compliance
could void the user's authority to operate the equipment

- INDEX -

ATTACHMENT E.....	1
- USER MANUAL -	1
1. SUMMARY	4
2. SYSTEM CONFIGURATION	5
3. SPECIFICATIONS.....	10
3.1 Electrical Specifications (applicable to both Uplink & Downlink)	10
3.2 Electrical and Environment Specifications	10
3.3 Functions.....	11
4. SET UP	13
4.1 System Set up	13
4.2 Troubleshooting	16
5. WEB USER INTERFACE	17
5.1 IP Address verification and Explorer setting.....	17
5.2 PCS Web UI	18

1. SUMMARY

US PCS 1900 RF repeater is an analog RF repeater, which improves PCS network.

US PCS 1900 RF repeater receives RF signal from BTS and transmits it to the blanked and shadowed area, thus providing and improving voice and image data services. US PCS 1900 RF repeater's goal is to support BTS's functions proportionately.

US PCS 1900 RF repeater communicates with BTS wirelessly, thus saving additional costs for its maintenance.

US PCS 1900 RF repeater consists of PA (Downlink, Uplink), IF, LNA (Downlink, Uplink), I/O & Control divisions, which are supplied with Alarm LED, thus providing quick and easy maintenance and troubleshooting of the repeater.

This manual describes in general structure of US PCS1900 repeater, its application, maintenance and troubleshooting, installation and operation etc.

Abbreviation

PA: Power Amplifier

IF: Intermediate Frequency

LNA: Low Noise Amplifier

I/O: Input/Output

Ethernet Instruction “ This equipment is indoor use and all the communication wirings are limited to inside of the building” or similar texts.

Replaceable batteries instruction

CAUTION

RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECTIVE TYPE.


DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS

For PLUGGABLE EQUIPMENT, the socket-outlet shall be installed near the equipment and shall be easily accessible.

2. System Configuration

2.1 US PCS 1900 service organization


US PCS 1900 repeater decreases blanked and shadowed areas and extends cell coverage by re-transmitting signal. The signal is received from BTS via Antenna directly, thus excluding additional expenses for signal transmission (like cabling). Service organization of CDMA In-building RF repeater is shown at the picture below. Donor Antenna is directed to BTS, and being divided at Service Antennas are installed in the building and parking place. Pass Loss should be taken into consideration while dividing and cabling.

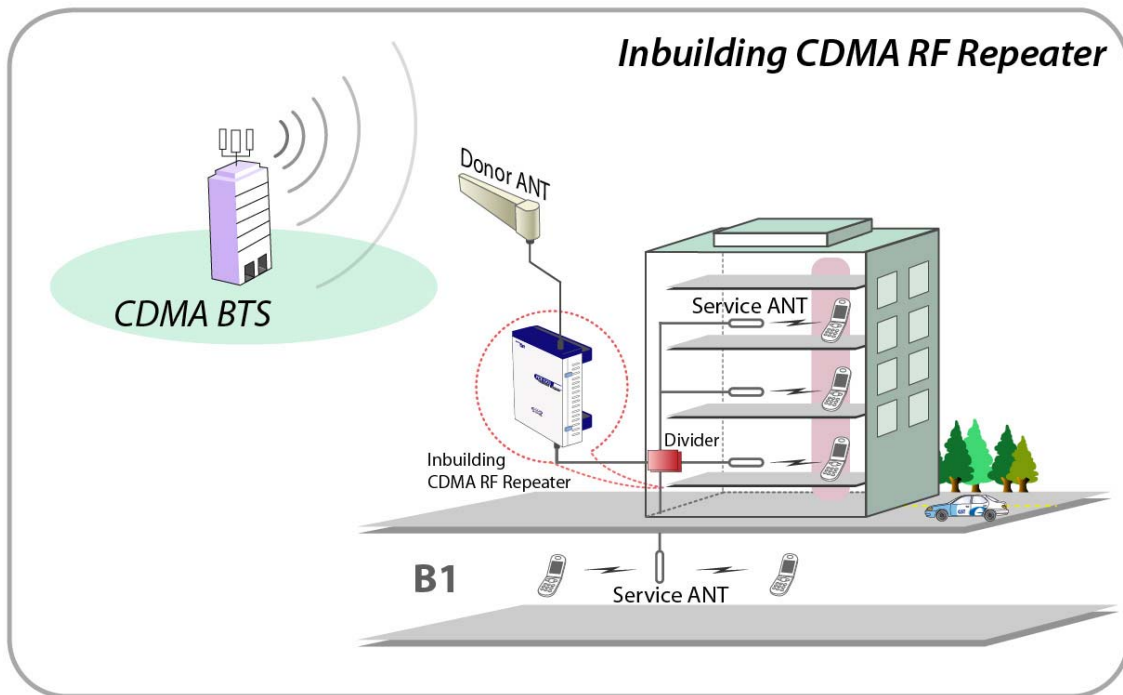

<Pic.1> US PCS 1900 Service organization


2.2 System Design and Operation

2.2.1 System design

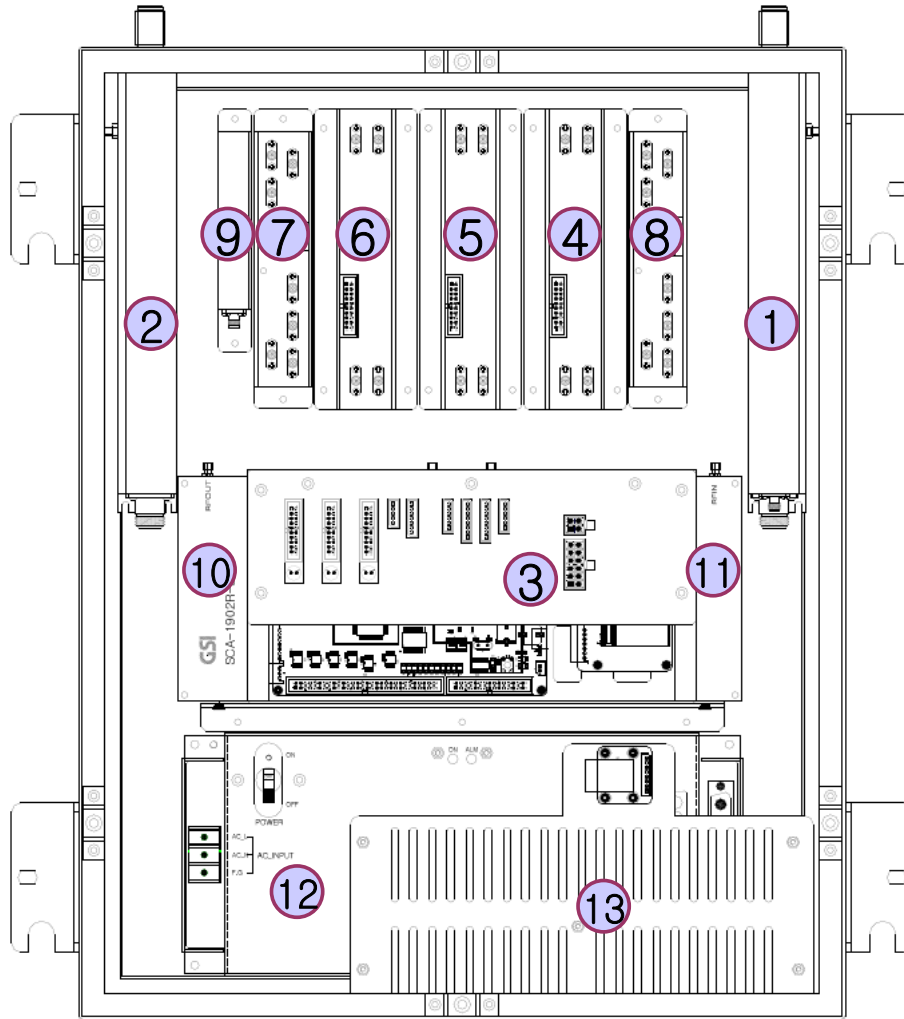


- | | | | |
|---------------------|------------------|-------------------|----------------|
| ① Donor Cavity | ② Service Cavity | ③ I/O & NMS Board | ④ IF-10MHz |
| ⑤ IF-15MHz | ⑥ IF-20MHz | ⑦ RVS LNA | ⑧ FWD LNA |
| ⑨ Waveform Detector | ⑩ FWD HPA | ⑪ RVS HPA | ⑫ Power Supply |
| ⑬ HUB | | | |

<Pic.2> Repeater's inside structure

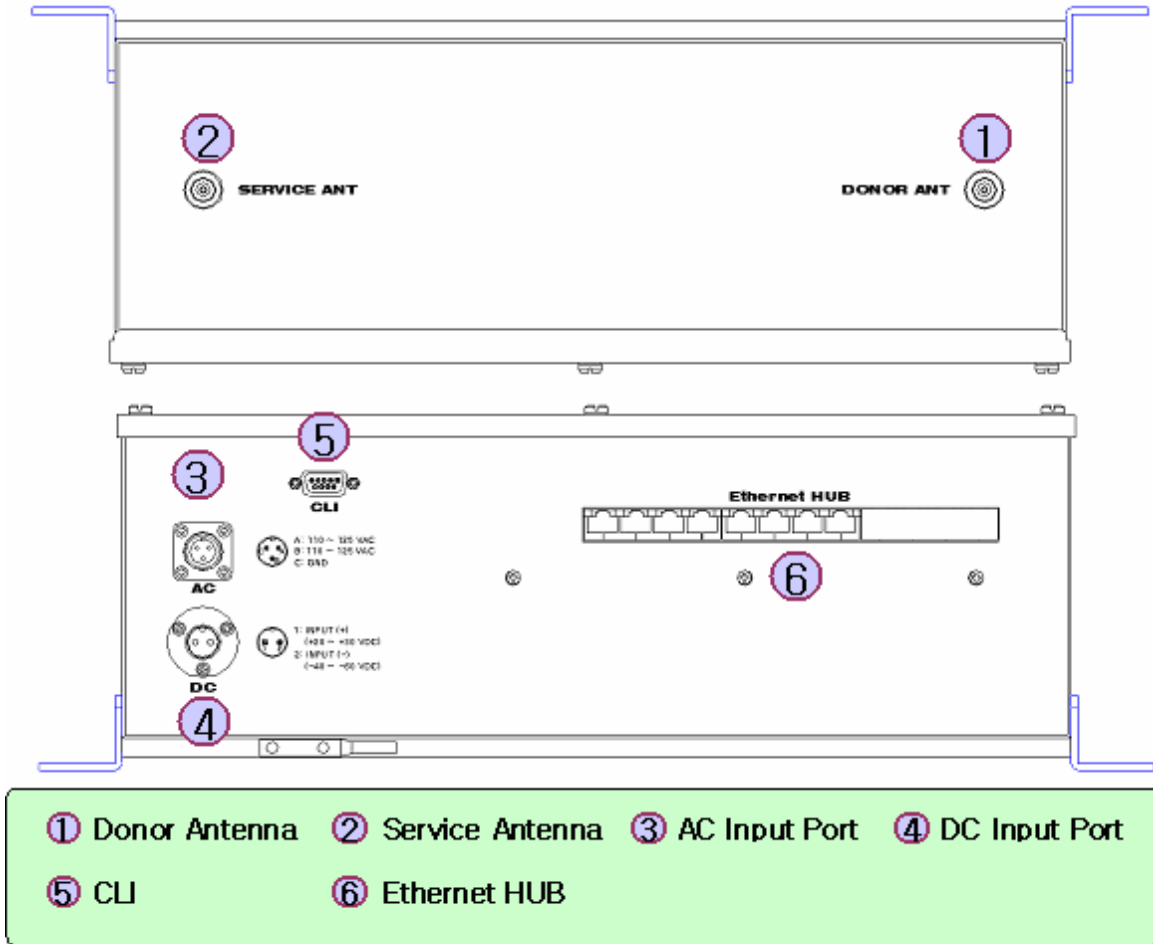


<Pic.3> Repeater's Top and Bottom panels

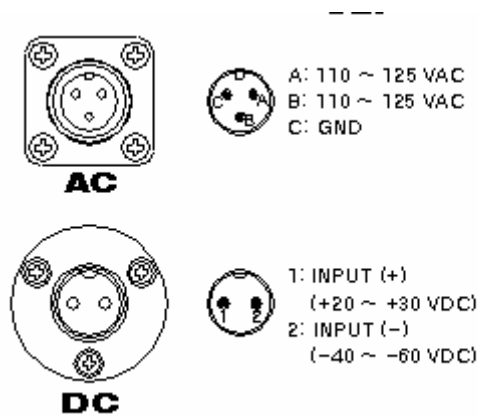

<Pic.4> AC & DC ports

2.2.2 Uplink Path

FWD and RVS Gain Budgets have similar structure. In case of Uplink Path, RF signal is transmitted from Service Antenna to Service Cavity Filter and RVS LNA division, then the signal is transferred to IF division, where desirable Band is selected by passing 6 Paths of RF Switch and SAW filter. Selected Band is got together in FWD LNA division, and then transmitted to Donor Antenna passing through Digital ATT (10dB ATT Range) and Donor Cavity Filter. Then the signal is transmitted to BTS through Donor Antenna.

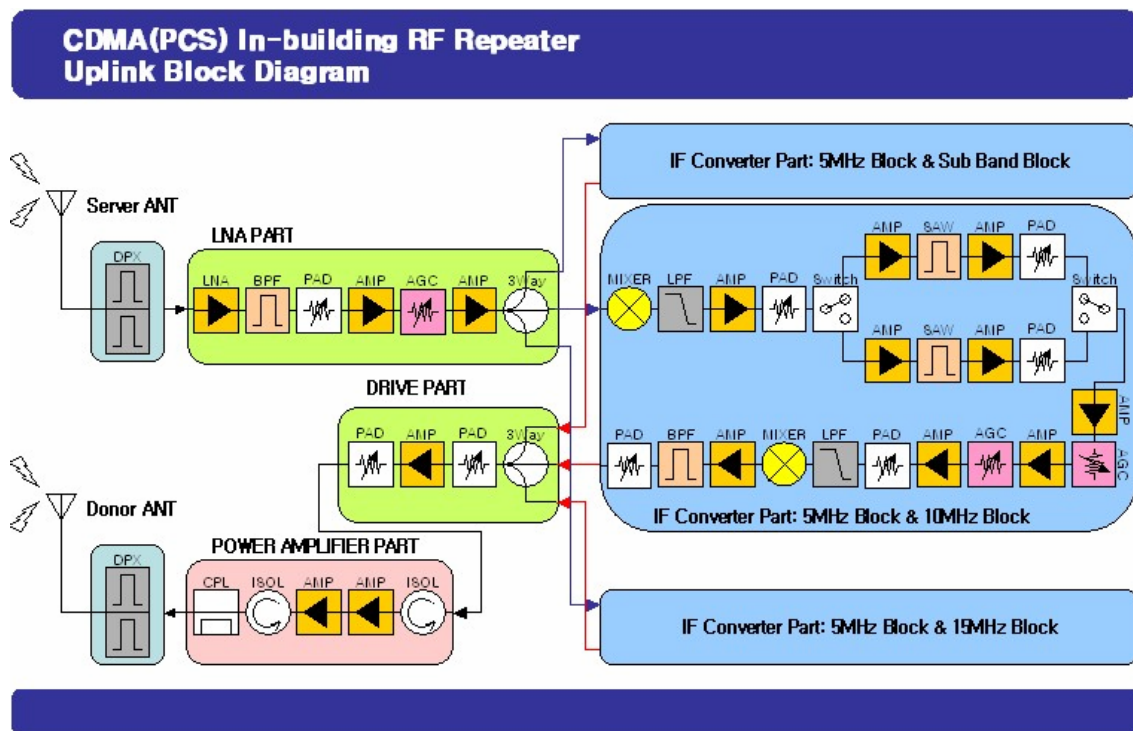


<Pic.5> Uplink Block Diagram

2.2.3 Downlink Path


Downlink Path is organized in reverse order of Uplink Path.

In case of Downlink Path, RF signal is transmitted from Donor Antenna to Donor Cavity Filter and FWD LNA division, then the signal is transferred to IF division, where desirable Band is selected by passing 6 Paths of RF Switch and SAW filter. Attenuation range is 40dB in Digital Attenuator. Selected Band is transmitted to FWD Drive Am and Service Cavity Filter, after that the signal is transferred to Service Antenna.

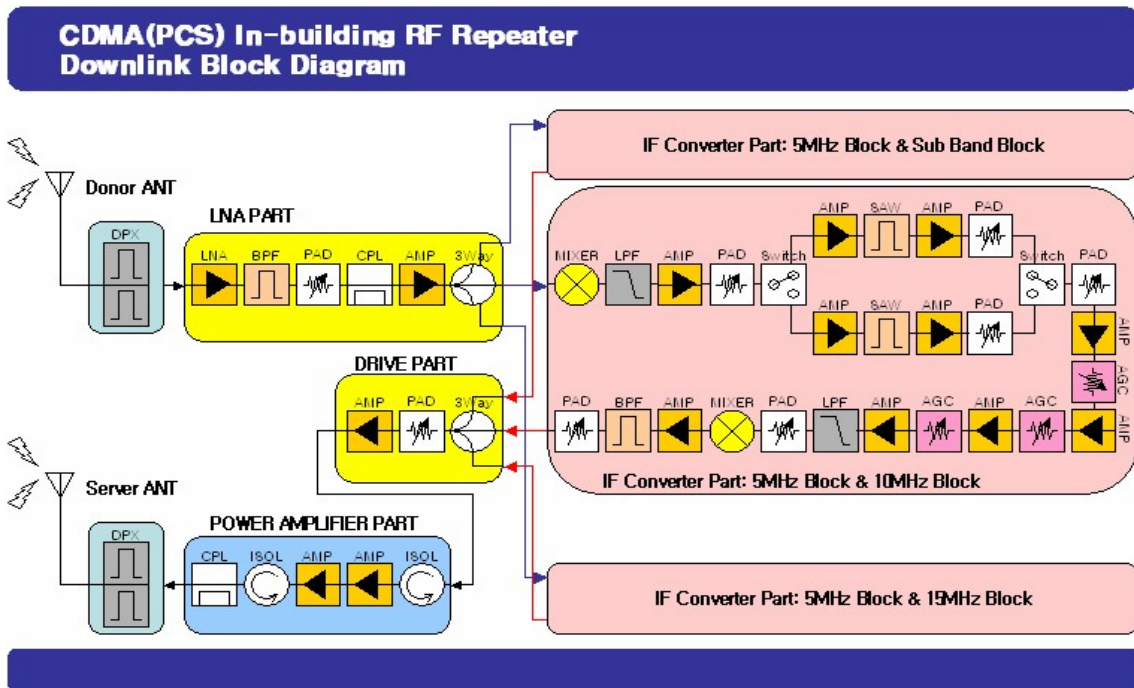

<Pic.6> Downlink Block Diagram

2.2.4 US PCS Frequency Selection

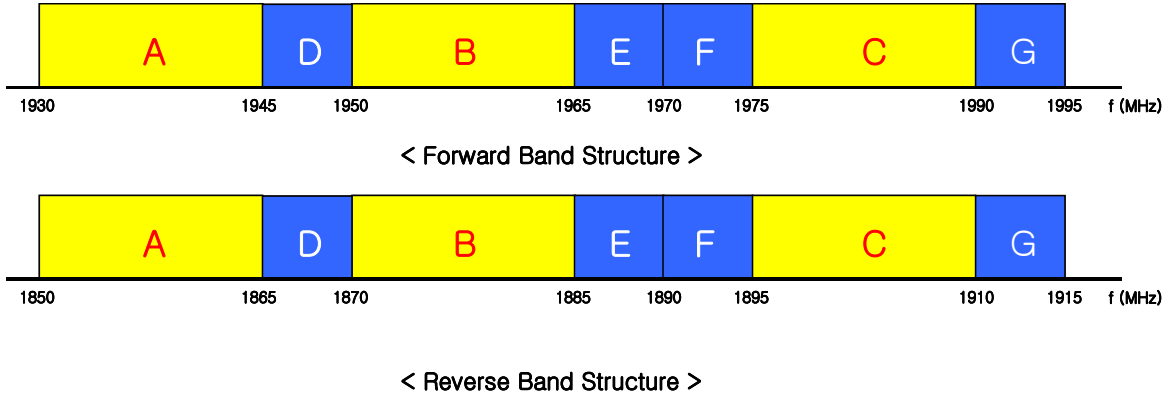

<Pic.7> PCS Band Structure

US PCS 1900 repeater has 5MHz, 10MHz, 15MHz, 20MHz Paths in IF division, so any of these bandwidths can be chosen for providing service. But there are some cases when this choice is not applicable.

- Not continuous 4 Paths [5 MHz each], so total band is 20MHz (i.e. A1A3B2C1, A1A2B1B2)

3. Specifications

3.1 Electrical Specifications (applicable to both Uplink & Downlink)

Characteristics		Specification
Frequency Range	Forward	1930 ~ 1995MHz
	Reverse	1850 ~ 1915MHz
System Group Delay		< 5 μ s
Characteristic Impedance		50 ohm
VSWR		Max1.5 : 1
Input Power Range		-58 ~ -18dBm (for both Uplink and Downlink)
System Isolation		> 90dB
Gain Range		55dB ~ 95 dB
Noise Figure		< 4.5 dB @ Max Gain <12 dB @Min Gain
Gain Adjustment Step(Accuracy)		1dB(\pm 0.5dB)
Pass Band Ripple		2.5dB(\pm 1.25dB)
Maximum Output Power		5W / 37dBm
Spurious Emissions		>45 dBc @885kHz >55 dBc @1.98kHz <-13dBm @Fc \pm 2.25MHz (RBW: 1MHz)
IF Path		5MHz/10MHz/15MHz/20MHz (SAW Filter Bandwidth)
IF Frequency		FWD: 200 MHz, RVS: 120MHz
Band Select		Local Shift & RF Switching
Roll Offs		> 50dBc @1MHz
Waveform Quality Factor		min 0.912

3.2 Electrical and Environment Specifications

Characteristics	Specification
Size(inch) / Type	16.1(W) x 23.6(L) x 7.17(H)

Power	AC 120V 60Hz 5.5A
Temperature / Weight	0°C ~ +50°C / 26kg
Connector TYPE	N Type Female

3.3 Functions

Parameter	Specification
Gain Control	<ul style="list-style-type: none"> Adjustable DL and UL Gain range 55~95dB Display default Gain and current Gain function
AGC Auto Gain Control	<ul style="list-style-type: none"> It always operates in Downlink AGC ON status To maintain same Downlink output power despite flexible input signal strength. To add or subtract Attenuation level referring to AGC Power Limit level.
ALC Auto Limit Control	<ul style="list-style-type: none"> To limit output power as far as default range Set up via GUI Automatic Gain decrement when output power of repeater is higher than default level Automatic Gain recovery when output power of repeater is reduced. Shutdown when output power is higher than default level in Minimum Gain Automatic Recovery Algorithm conversion after Shutdown status
Gain Balance	<ul style="list-style-type: none"> Downlink ATT is applied to Uplink during AGC state Setting and maintenance of output level Additional attenuation to ALC Level
Oscillation Check	<ul style="list-style-type: none"> Isolation Check in initial set up or Reset Monitoring Oscillation comparing to minimum/maximum Noise Floor level When Oscillation occurred, repeater attempts to stabilize Isolation through Gain control function. Shutdown repeater when Oscillation still goes in Minimum Gain Automatic Recovery Algorithm conversion after Shutdown status
Spurious Emission Alarm	<ul style="list-style-type: none"> Noise Floor Observation in case of ± 2.25MHz down at the center In case of Noise level > -13dBm, Spurious Emission is stabilized automatically In case of Oscillation Spurious Emission Alarming in Minimum Gain, repeater will be shutdown Automatically Switch to Recovery Algorithm at Shutdown

HYUNDAI CALIBRATION & CERTIFICATION TECHNOLOGIES CO., LTD.

SAN 136-1, AMI-RI, BUBAL-EUP, ICHEON-SI, KYOUNGKI-DO, 467-701, KOREA

TEL:+82 31 639 8517 FAX:+82 31 639 8525 www.hct.co.kr

Band Select	<ul style="list-style-type: none"> To select either 5MHz/10MHz/15MHz/20MHz
Power Monitoring Function	<ul style="list-style-type: none"> Monitoring repeater's output level
DL Input control	<ul style="list-style-type: none"> Monitoring Donor ANT input power of DL
Automatic Recovery	<ul style="list-style-type: none"> When in repeater shutdown, it periodically recovers output power of repeater then monitors alarming
Security	<ul style="list-style-type: none"> Support HTTPS for Web Browser security User authentication through User ID and Password
Temperature control	<ul style="list-style-type: none"> Monitoring temperature of repeater Maximum and minimum set up is possible. Shutdown in over temperature Automatic recovery after temperature becomes normal. (Hysteresis 10 degree)
VSWR Monitoring	<ul style="list-style-type: none"> Monitoring VSWR of Donor ANT Port (Every one and half minute) Reporting VSWR Alarm and Shutdown when the rate is 3:1 Automatic Recovery Algorithm conversion after Shutdown status
IP address report via E-mail	<ul style="list-style-type: none"> When in PPP reconnection, E-mail which includes HTML to connect to newly assigned IP Address, reports to operator.
DHCP Client	<ul style="list-style-type: none"> Automatic IP assignment
DHCP Server	<ul style="list-style-type: none"> Server function for automatic IP assignment
Web GUI	<ul style="list-style-type: none"> Remote and local user browser support through Web Browser
SNMP Agent	<ul style="list-style-type: none"> NMS report via SNMPv2 Trap
LED Display	<ul style="list-style-type: none"> LED displays power and operation status on front side of repeater system. DL input and output signal level is verified by LED bar.

4. SET UP


4.1 System Set up

4.1.1 Constitution (based on 1 SET)

Parameter	Item	Quantity
Major accessory	US PCS 37 dBm Case	1 EA
Additional components	Main power input Cable	1 EA
	Fixable Screw	1 SET
	Mountable Bracket	1 EA
User Manual	Manual	1 EA

4.1.2 Notice

- 1) System Power check: Major electricity is AC120V, therefore please input electricity after power verification.
- 2) Input condition optimization: DL input condition is -56 ~ -16dBm. User should verify input condition of Donor ANT.
- 3) Isolation check between DONOR/SERVICE ANT: Isolation condition of this equipment is 95dBc (Gain+ 15dB). User should check its condition before installation.

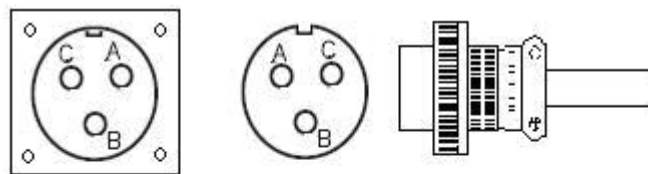

Wall Mount Receptacle

AC Plug


A: AC 120V
B: AC 120V
C: GND

<Pic. 8> MS 3100 A 10SL-3 (Wall Mount Receptacle) & MS3010 A 10SL-3(Plug)

4.1.3 System set up

- 1) This equipment is basically wall mountable installation.
- 2) Once aforementioned process is done, open for service get ready.
- 3) For grounding, there is a grounding terminal in main power supply side and the grounding terminal on a site and unit should be connected same.
- 4) System installation work is basically performed more than two people and should be careful for unexpected accident.

4.1.4 Open for service

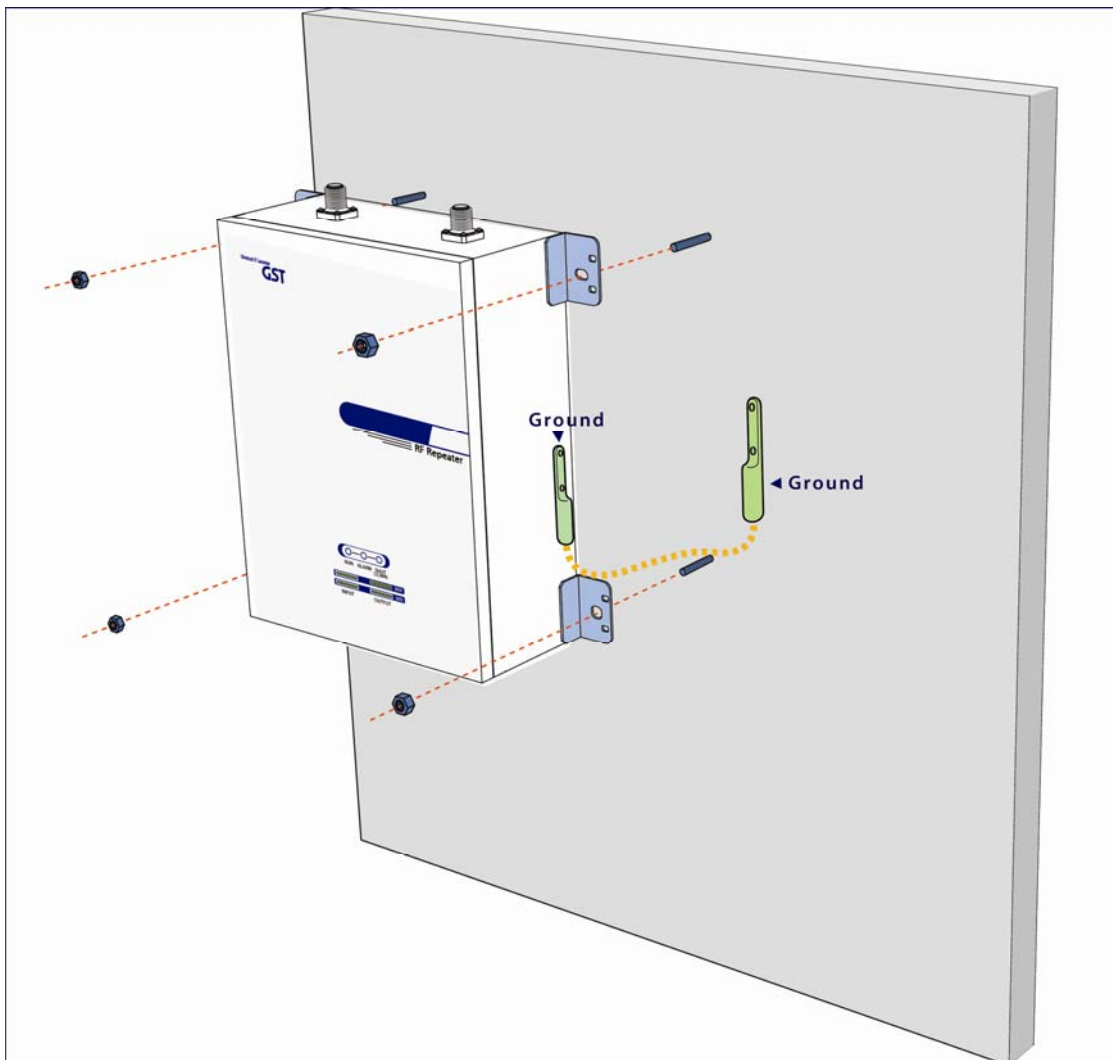

<Pic.9> Case mounts

1) Check points before open

a. Verification of system installation status

Electricity, In/out antenna, coaxial cable connection, equipment mounts status.

b. Verification of system accessories

User should check whole necessary accessories.

c. Check receipt signal level

User should check whether receipt environmental condition is in accordance with system specification, so that system operation will be optimized.

2) Check points after open

a. Check by external LED

① RUN: Green light ON (Off: Green light off)

② ALARM: Green light in normal status, Red light in alarming

③ SHUT DOWN: Green light in normal status, Red light in Shutdown

⑤ Number of LED bar on front side of repeater will show input signal level.

Less than -56dBm: LED 1bar

-56dBm~-48dBm: LED 2bars

-48dBm~-39dBm: LED 3 bars

-39dBm~-31dBm: LED 4 bars

-31dBm~-23dBm: LED 5 bars

Number of LED bar in output power side will show output power signal level


Less than +30dBm: LED 1bar

+31dBm~+33dBm: LED 2 bars

+34dBm: LED 3 bars

+35dBm: LED 4 bars

More than +36dBm: LED 5 bars

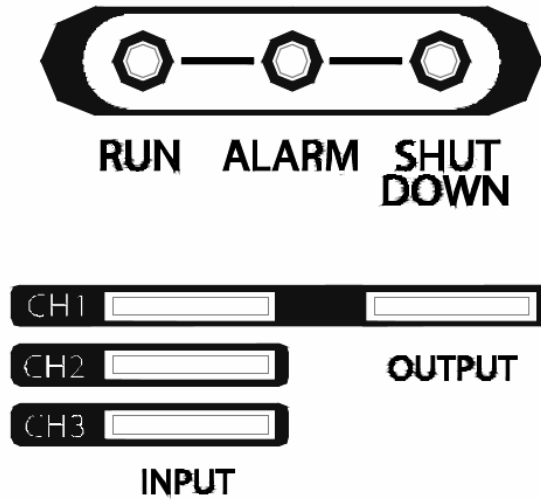

<Pic.10> Front LED Indicator

4.2 Troubleshooting

In case, abnormal operation is detected, user should check abnormal parts via remote accessible function or field debug, then conduct repair after turn it off.

4.2.1 Necessary Testing and Measuring equipment

- RF Power Meter: 10Watt Max, 50ohm
- Signal Generator: 3GHz
- Spectrum Analyzer: 3GHz
- Multi Meter

4.2.2 Notice


- Trouble shooting should be performed with drastic knowledge basis.
- Unsure parts should not be disassembled.
- When in trouble shooting, technician should use attenuator to check output side.

5. WEB USER INTERFACE

5.1 IP Address verification and Explorer setting

5.1.1 IP Address verification and Explorer setting

- (1) Start->Control Panel->Network Connections
- (2) Double-click Local Area Connections at LAN or High Speed internet
- (3) Click Internet Protocol (TCP/IP) at General tap and click Properties.
- (4) Apply automatic IP address assignment at local connection

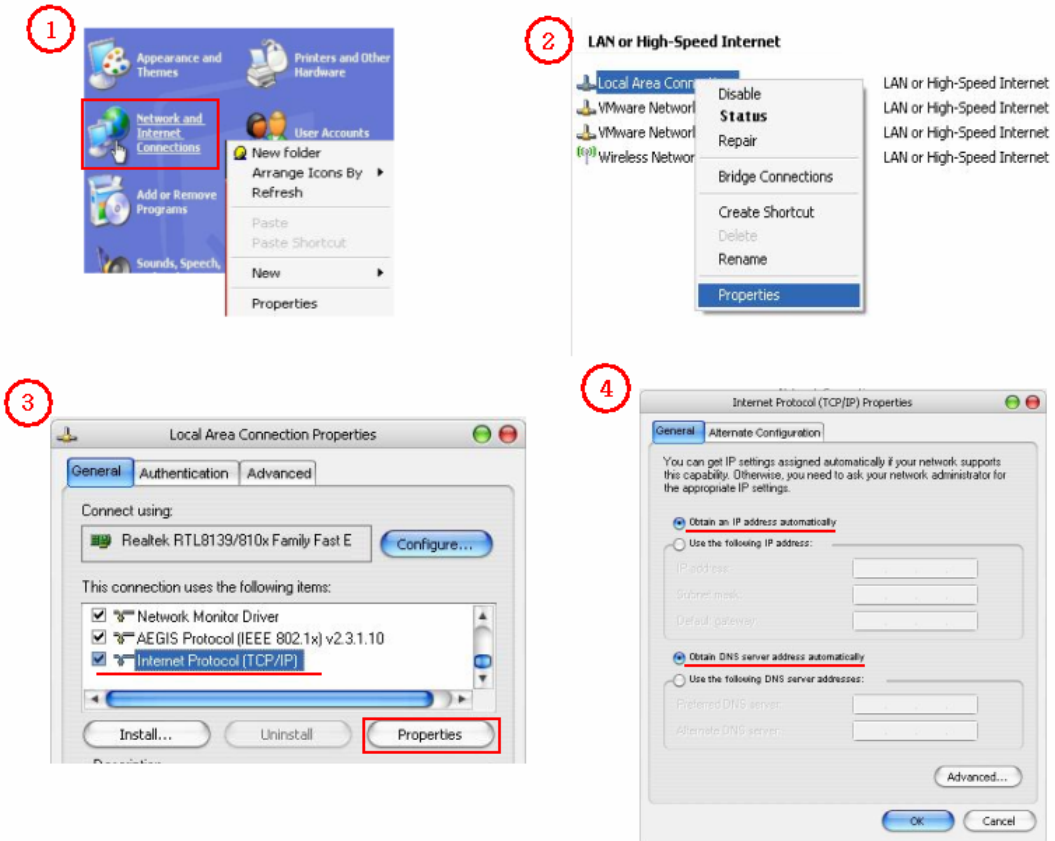


- (5) Verify assigned IP address at local connection.
(Unless IP address is not assigned, please click repair.)



5.1.2 Explorer option setting


- Proceed step by step as indicated in below. All files and records should be removed.
- Set up mode will be displayed after (2) click.
- Please proceed along following set up mode screen shot.

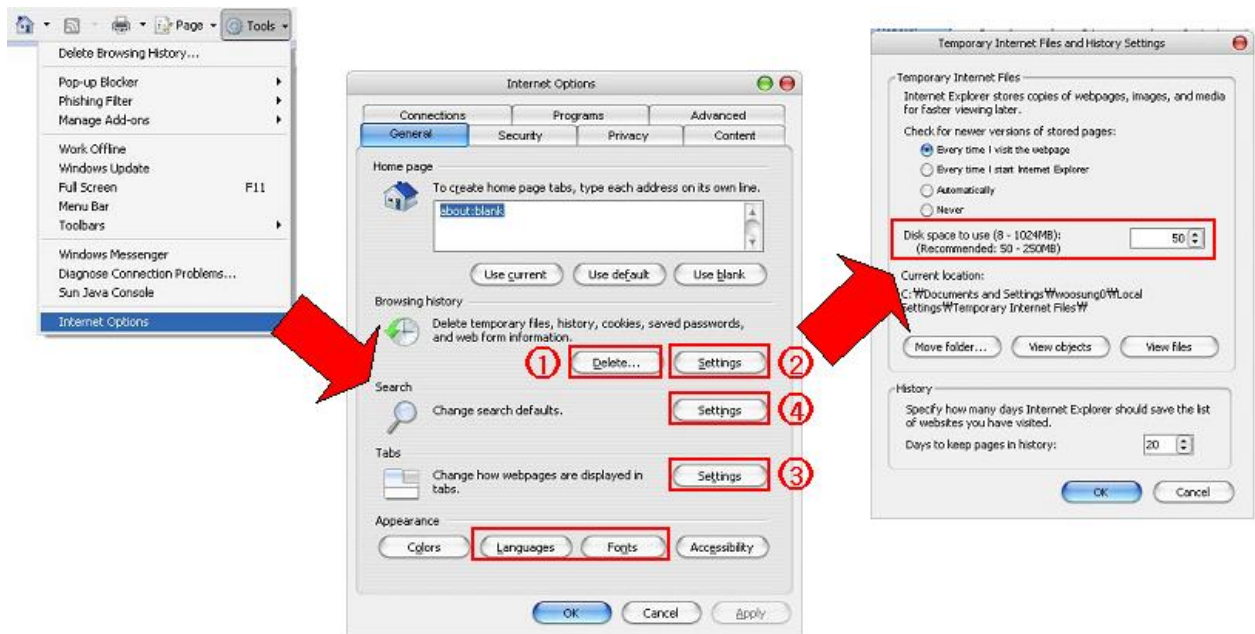

5.2 PCS Web UI

5.2.1 Web UI connection

- Input desirable IP address.
- Default Use Name and Password for Web UI is 'admin'.

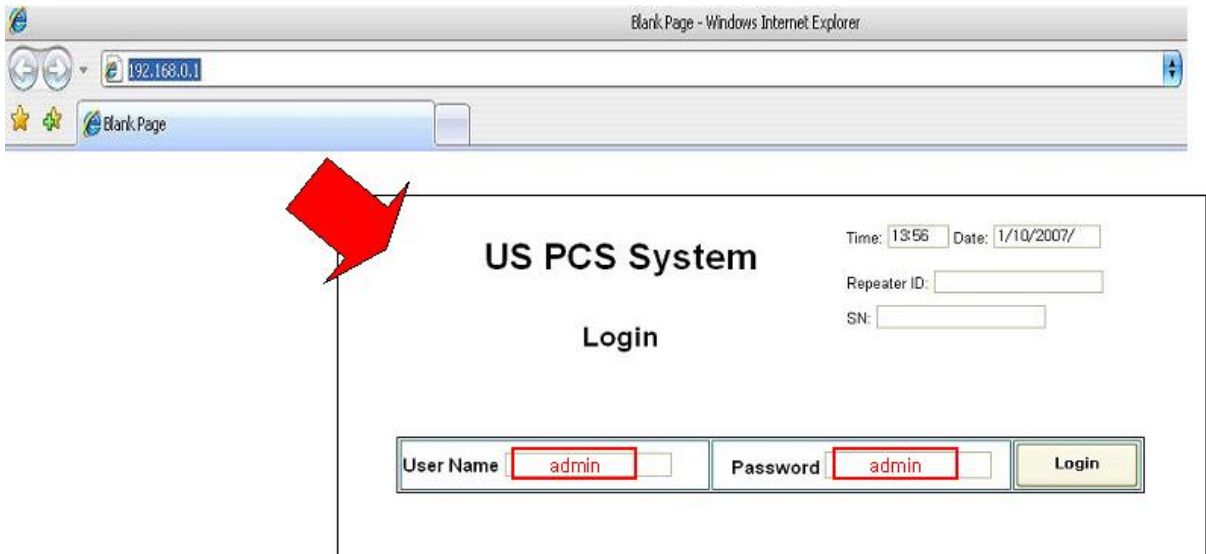

5.2.2 Link menu

- Following screen shot is located left-top side of main menu and those are linked to relative window.

▶ Logout
▶ Status
▶ RF Configuration
▶ Alarm Configuration
▶ Communications Configuration
▶ User Management
▶ Logs
▶ Sub System / Mailing List
▶ Troubleshooting
▶ Remote Software Upgrade
▶ System Reset

1. Logout
2. Status : It displays current status of Repeater
3. RF Configuration : It can control Repeater parameters
4. Alarm Configuration : It displays arising alarms
5. Communication Configuration : It displays communication mode in connection with Repeater
6. User Management : User addition and deletion
7. Logs : History data for setting & controls, each route
8. Sub System/Mailing List : Mailing List
9. Troubleshooting : Q&A
10. Remote Software Upgrade : Software upgrade
11. System Reset : Reset

5.3 Web UI control

5.3.1 Status

- Currently setting level check at this menu tap.



RF Status												
Downlink Output Power	-30.0	dBm	Uplink Output Power	-30.0	dBm							
Downlink CH1 Attenuation	0.0	dB	Uplink CH1 Attenuation	0.0	dB							
Downlink CH2 Attenuation	0.0	dB	Uplink CH2 Attenuation	0.0	dB							
Downlink CH3 Attenuation	0.0	dB	Uplink CH3 Attenuation	0.0	dB							
Downlink AGC Limit	0.0	dBm	Uplink ALC Limit	0.0	dBm							
Temperature	30.3	deg C	Temperature Limit	70.0	deg C							
AGC Control	OFF		ALC Control	OFF								
Downlink HPA	OFF		Uplink HPA	OFF								
Gain Balance	OFF		Isolation Control	OFF								
Downlink ALC Limit	0.0											
Band Select Status												
Band Select Status												
Band Width : 5 MHz												
Selected Bandwidth :	ON	CH1 RSSI :	-80.0 dBm									
Selected Bandwidth :	OFF	CH2 RSSI :	-80.0 dBm									
Selected Bandwidth :	OFF	CH3 RSSI :	-80.0 dBm									
A1	A2	A3	D	B1	B2	B3	E	F	C1	C2	C3	G
<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

5.3.2 RF Configuration

- Setting level can be changed at this menu tap.
- (1) Level change
- (2) Click Apply button



RF Configuration												
Gain Balance Control	OFF	Temperature Limit	60									
Peak Downlink Output Power	0.0	ALC Downlink Limit	10									
Isolation Control	OFF	ALC Uplink Limit	20									
Downlink HPA	OFF	Uplink HPA	40									
CH1 Downlink ATT	0.0	CH1 Uplink ATT	50									
CH2 Downlink ATT	0.0	CH2 Uplink ATT	60									
CH3 Downlink ATT	0.0	CH3 Uplink ATT	70									
AGC Control	OFF	ALC Control	80									
			90									
			100									
			dB									
			dB									
			dB									
			dB									
			dB									
Band width Select Control												
Band width : 20 MHz												
A1	A2	A3	D	B1	B2	B3	E	F	C1	C2	C3	G
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
(2) <input type="button" value="Apply"/>												

5.3.3 Alarm Configuration

- (1) On/Off function for entire alarm report
- (2) Alarm status

- (3) On/Off function for individual alarm category
- (4) Alarm SNMP Mapping
- User may set and change its level per it field condition and click apply button.

Number	Name	State	Active	SNMP Mapping	Last Triggered
1	oscillationalarm	Normal	Disable	RF Power	
2	Downlink over-input alarm	Normal	Disable	RF Power	
3	Uplink over-output alarm	Normal	Disable	RF Power	
4	Downlink over-output alarm	Normal	Disable	RF Power	
5	Temperature alarm	Normal	Disable	RF Power	
6	VSWR alarm	Normal	Disable	RF Power	
7	Spurious Emission alarm	Normal	Disable	RF Power	
8	Downlink LNA alarm	Normal	Disable	RF Power	
9	Uplink LNA alarm	Normal	Disable	RF Power	
10	CH1 Module alarm	Normal	Disable	RF Power	
11	CH2 Module alarm	Normal	Disable	RF Power	
12	CH3 Module alarm	Normal	Disable	RF Power	
13	Downlink PAM alarm	Normal	Disable	RF Power	
14	Uplink PAM alarm	Normal	Disable	RF Power	
15	Dc matter/Current alarm	Normal	Disable	RF Power	

5.3.4 Communication Configuration

- This provides all necessary information related to network
- To provide relative information about DHCP and modem

LAN port IP address (RJ45 port for local access)	0.0.0.0
Obtain an IP Address automatically	<input type="radio"/> DHCP <input checked="" type="radio"/> STATIC
IP Address	10.10.10.220
Netmask	255.255.255.0
Gateway	10.10.10.1
DNS Server	168.126.63.1
DHCP Server	OFF
Wireless Modem IP address	0.0.0.0
Heartbeat Port	
Heartbeat Period minute	0 min
Alarm Reporting IP Address (default the same as Heartbeat)	
Alarming Port (default the same as Heartbeat)	
Repeater ID	

5.3.5 User Management

- Add and Remove user, Assigning accessibility

- (1) User Registration: Click Register after input required information
- (2) User Removal: Click Delete upon click of user name you wish to remove.
- (3) Super User: Accessible to all kinds of information path

Read/Write: Accessible to all kinds of information path except for User management path.

Read: Checking status only. No control

The screenshot shows the 'User Management' section of the interface. A navigation menu on the left has 'User Management' selected. The main content area contains a registration form with the following fields: 'User' (with a 'Must be 5-8 characters' note), 'Password' (with a 'Must be 5-8 characters' note), 'Password confirm', and 'Authority' (a dropdown menu). The 'Authority' dropdown is open, showing options: 'Super User', 'Read/Write', and 'Read'. Below the form are 'Register' and 'Reset' buttons. Below the form is a table with one row containing the name 'admin' and a 'Delete' button.

5.3.6 Logs

- All users' access record will be saved as a log.

The screenshot shows the 'Logs' section of the interface. A navigation menu on the left has 'Logs' selected. The main content area displays a table with the following data:

Date & Time	User	Operation	Description
1/3/1996 - 7:26:41	admin	Login	Login
1/3/1996 - 23:45:3	admin	Login	Login
1/3/1996 - 23:45:10	admin	logs	Checked
1/3/1996 - 23:45:18	admin	Status	Checked
1/3/1996 - 23:45:21	admin	RF Configuration	Checked
1/3/1996 - 23:45:24	admin	logs	Checked
1/3/1996 - 23:45:30	admin	RF Configuration	Checked
1/3/1996 - 23:45:33	admin	Status	Checked
1/3/1996 - 23:45:38	admin	RF Configuration	Checked

5.3.7 Sub System/Mailing List

- Set up e-mail address the place you wish to receive alarm.

- ▶ Logout
- ▶ Status
- ▶ RF Configuration
- ▶ Alarm Configuration
- ▶ Communications Configuration
- ▶ User Management
- ▶ Logs
- ▶ Sub System / Mailing List
- ▶ Troubleshooting
- ▶ Remote Software Upgrade
- ▶ System Reset

Mailing List		
E-mail	Mail Server	Manager E-mail
1		empty
2		empty
3	empty	empty
4		empty

Sub Systems	
Repeater ID	Link
None local system	None local system

5.3.8 Troubleshooting

Following is a trouble shooting table, which is frequently occurred to repeater and treatment method.

- ▶ Logout
- ▶ Status
- ▶ RF Configuration
- ▶ Alarm Configuration
- ▶ Communications Configuration
- ▶ User Management
- ▶ Logs
- ▶ Sub System / Mailing List
- ▶ Troubleshooting
- ▶ Remote Software Upgrade
- ▶ System Reset

STATE	CAUSE	ACTION	Remark
STATUS LED Display turned off	1. Cable in power supply connecting is being cut 2. Defective LED Display	Checking cable connection	
No signal from Repeater	1. Cable inside of the repeater is being cut. 2. Defective Coaxial cable 3. When in shutdown	1. Should check power cable connection in power supply part of the repeater 2. Change the Coaxial cable.	
Repeater Shut-Down	Power supply DC matter/ Current Alarm	1. Power supply change	
	Downlink over-input alarm	1. Checking input level 2. Unit replacement when input level is normal	
	VSWR alarm	1. Reset (on/off) 2. Checking Service ANT connection 3. Unit replacement	
	Uplink Oscillation alarm	1. Checking setup level 2. Reset 3. Setting Factory mode 4. Unit replacement	
the smallest field replaceable unit alarming	CH2 Module alarm	1. Checking LED on IF2 Module 2. Unit replacement	
	CH3 Module alarm	1. Checking LED on IF3 Module 2. Unit replacement	
	Downlink PAM	1. Checking LED on Power AMP Module 2. Unit replacement	
	Uplink PAM	1. Checking LED on Power AMP Module 2. Unit replacement	

5.3.9 Remote Software Upgrade

- Upload repeater operation program.

- ▶ Logout
- ▶ Status
- ▶ RF Configuration
- ▶ Alarm Configuration
- ▶ Communications Configuration
- ▶ User Management
- ▶ Logs
- ▶ Sub System / Mailing List
- ▶ Troubleshooting
- ▶ Remote Software Upgrade
- ▶ System Reset

US PCS System

Remote Software Upgrade

Time: Date:

Repeater ID:

SN:

5.3.10 System Reset

- Reset repeater.

