

EUT:Voice/FAX/Modem Card

FCC ID:DK4DF1156IVR3

GVC CORPORATION

USER'S MANUAL

Section One - Introduction

This 56 Kbps* Plug and Play FAX/Voice/Data Speakerphone Modem connects your computer to all popular high speed modems available today. The modem incorporates "K56Plus" (56Kbps) technology to provide increased download speeds using regular telephone lines. The modem incorporates Plug and Play for ease of installation.

This manual describes the hardware installation procedures for your new modem. Additional information on AT commands and S-registers is provided so that your system can be customized for a particular operating environment.

**Note: K56Plus is capable of downloading at 56Kbps. However, current FCC regulations limit its speeds to 53Kbps.*

Section Two - Installation

This section will provide step by step instructions on how to install your new 56 Kbps FAX/Voice/Data modem. Installation of this modem product is a three-step process consists of 1) actual hardware installation, 2) plug and play configuration, and 3) communication software installation and configuration.

2.1 Unpacking Your Modem

Be certain that you have all the items listed below. This package contains:

- | | |
|--------------------------|--------------------------|
| • A modem | • A telephone cable |
| • User's manual | • Software for the modem |
| • Software user's manual | |

2.2 What You Need

You will need:

1. A Phillips-head screwdriver
2. A) A Plug and Play enabled Operating System (e.g., Windows 95),
or
B) A Plug and Play Revision 1.0a compliant PC.

-
4. Carefully slide the internal modem into the slot you have chosen, applying even pressure until the modem is completely seated in the slot.
 5. Fasten the retaining bracket with the screw from the slot cover. Make sure the modem is properly aligned. Store the slot cover for future use.
 6. Replace the computer cover and plug in your computer.
 7. Connect the telephone cable from the modem's **LINE** connector to the telephone wall jack.
 8. Optionally, connect your telephone to the modem's **PHONE** connector.
 9. Turn your computer on. Your modem is now installed.

2.4 Hardware Configuration (Plug and Play)

Your modem is configured using the Plug and Play (PnP) capabilities of your computer. Plug and Play is a set of specifications that define the ability for the computer hardware and operating system to automatically configure all compliant devices that are installed, relieving the user of the need to determine which addresses and interrupts to use for each device. Consult your PC's owner's manual to determine if it is PnP Revision 1.0a compliant. You most likely have a Plug and Play Revision 1.0a compliant system if it was purchased after June 1994 or if the BIOS is dated after June 1994.

Proceed to one of the following sections, depending on your system's configuration:

- **Section 2.4.1** if you are running Windows 95 (with or without a Plug and Play PC)
- **Section 2.4.2** if you are running Windows 3.1x or DOS on a PnP-compliant PC.
- **Section 2.4.3** if you are running DOS or Windows 3.1x on a non-PnP PC.

2.4.1 Configuring in Windows 95

The version of Windows 95 you have will determine which set of dialog boxes is presented to you when

Windows will now find a second device on the modem. Make sure that the driver disk is still in the disk drive and click "Next." Windows will find the second driver. Click "Finish" to complete the installation.

When all necessary files are copied, the modem is configured. Windows 95 will assign the modem a COM port and IRQ line. **Proceed to Section 2.5.**

2.4.2 Configuring in a Plug and Play System without Windows 95

When this modem is installed in a Plug and Play system without Windows 95, the computer's BIOS will assign a COM port and IRQ line to the modem.

Proceed to Section 2.5, Software Installation/Configuration.

2.4.3 Configuring in a Non-Plug and Play System

Computers without native Plug and Play capabilities require the use of the included modem driver. If you have not already installed this driver, refer to the file README.1ST on the Windows 95 driver disk for installation and configuration instructions. Once the driver is installed the modem is enabled and configured during system boot-up. The COM port and IRQ settings that are assigned to the modem will be displayed on the screen as the driver is loaded.

If the PC is running Windows 3.1x, configure Windows to properly recognize these modem settings by opening **PROGRAM MANAGER|MAIN|CONTROL PANEL**, click on **PORTS** and follow Windows 3.1x user's manual instructions on configuring the installed modem COM port.

Proceed to Section 2.5, Software Installation/Configuration.

2.5 Software Installation and Configuration

You are now ready to install and configure the communication software. Refer to your software manual for installation procedures.

We suggest the following communication parameters when you first use your data communication soft-

2.8 Using Your Modem

The communication software included with your modem product provides a user friendly interface to access the fax, voice and data functions of your modem. ***This software should be sufficient for all of your communication needs.*** There may be times when you need to access the modem manually via modem commands. Read Section 3 for a summary description of the modem command set before manually accessing the modem. You may want to read the software manual first, however, as the software may already provide a user friendly method of accessing the functions you need (i.e. dialing or answering calls).

2.9 Where To Go From Here

You should familiarize yourself with the functions available from the included software by reading its manual. You will be accessing most, if not all, of the modem's functions from this software. You may also use any other commercially available communication software with the modem. Read Section 3 only if you are interested in accessing the modem manually, and not through the included software. Section 4 and 5 contain reference material, and can be skipped. If you have difficulties getting your modem to work, read Section 6 - Troubleshooting to find answers to commonly asked questions and problems.

Section Three - AT Command Set

3.1 Executing Commands

Commands are accepted by the modem while it is in Command Mode. Your modem is automatically in Command Mode until you dial a number and establish a connection. Commands may be sent to your modem from a PC running communication software or any other terminal devices.

Your modem is capable of data communication at rates of: **300, 1200, 2400, 4800, 9600, 14400, 19200, 28800, 38400, 57600, and 115200 bps.** Make sure your COM port baud rate settings in your communications software is set to one of the above speeds.

- AudioSpan (simultaneous audio/voice and data)*
 - ITU-T V.61 modulation (4.8 kbps data plus audio)
 - Handset, headset, or half-duplex speakerphone
- ITU-T V.70 DSVD (option)
 - ITU-T G.729 Annex A with interoperable G.729 Annex B
 - SIG (special interest group) DigiTalk DSVD
 - Voice/silence detection and handset echo cancellation
 - Handset, headset, or half-duplex speakerphone
- Full-duplex speakerphone (FDSP) mode
 - Over PSTN or ISDN B channel (option)
 - Switching to/from data, fax, DSVD and VoiceView
 - Microphone gain and muting
 - Speaker volume control and muting
 - Adaptive line and acoustic echo cancellation
 - Loop gain control, transmit and receive path AGC
 - Acoustic echo cancellation concurrent with DSVD
 - Noise suppression
 - Room monitor
- V.80 and Rockwell Video Ready synchronous access modes support host-controlled communication protocols
 - H.324 interface support
- V.8/V.8bis and supporting AT commands (V.25 ter with Annex A)
- Data/Fax/VoiceView/Voice call discrimination
- Voice, telephony, audio, VoiceView
 - Voice (8-bit μ-Law compression/decompression)
 - TIA-695 command set
 - VoiceView alternating voice and data (option)
 - 8-bit linear and 8-bit μ-Law record/playback
 - 8.0 kHz, 11.025 kHz, 22.050 kHz and 44.1 kHz (down sampled to 11.025)
 - Handset, acoustic, line echo cancellation
 - Music on hold from host or analog hardware input
 - TAM support with concurrent DTMF detect, ring detect and caller ID
- World-class operation (option)
 - Call progress, blacklisting, multiple country support
- Integrated internal hybrid
- Caller ID and distinctive ring detect
- Modem and audio paths concurrent across PCI bus
- Single profile stored in host
- System compatibilities
 - Windows 95 and Windows NT operating systems
 - Microsoft's PC 97 Design Initiative compliant
 - Unimodem/V compliant
- 32-bit PCI Local Bus interface
 - Conforms to the PCI Local Bus Specification, Production Version, Revision 2.1
 - PCI Bus Mastering interface to the MDP
 - CardBus support with 512-byte RAM for CIS
 - 33 MHz PCI clock support
- Device packages:
 - Bus Interface in 176-pin TQFP
 - MDP in 144-pin TQFP
- +3.3V operation

-
- 2. Make sure the correct terminal emulation mode is being used (see communication software manual).
-

High pitch tone is heard whenever you answer the phone.

- 1. Make sure Auto-Answer is turned off. Your modem is factory configured to NOT auto-answer. Issue **AT&F** to factory reset your modem.
-

Modem experiences errors while communicating with a remote modem.

- 1. Make sure the DTE speed is the same as the modem connection speed when in Direct Mode.
 - 2. Make sure the remote system and your modem use the same communication parameters (speed, parity, etc.).
 - 3. Make sure RTS/CTS hardware flow control is enabled and XON/XOFF software flow control is disabled in the communication software.
 - 4. Make sure the data speed is not faster than your computer's capability. Most IBM compatibles are capable of 19,200 bps under DOS and Windows 3.X. Operating at higher speeds under Windows requires a 486 or faster CPU or Windows 95.
-

Modem experiences bursts of errors or suddenly disconnects while communicating with a remote modem.

- 1. Make sure Call Waiting is turned off.
 - 2. Make sure the phone line does not exhibit excess noise.
-

Modem exhibits poor voice record or playback.

- 1. Make sure the correct modem type is selected in the Voice/FAX software. Use "Generic Rockwell" or similar selection.
-

Section Seven - Support and Service

In the unlikely event you experience difficulty in the use of this product, we suggest you: (1) consult the Troubleshooting section of this guide and (2) consult with your dealer. To obtain service for this product, follow the Return Merchandise Authorization Procedure as outlined in the Warranty card.

In the event that this equipment should fail to operate properly, disconnect the equipment from the phone line to determine if it is causing the problem. If the problem is with the equipment, discontinue use and contact your dealer or vendor.

The FCC also requires the transmitter of a FAX transmission be properly identified (per FCC Rules Part 68, Sec. 68.381 (c) (3)).

DOC Compliance Information

NOTICE: The Canadian Department of Communications label identifies certified equipment. This certification means that the equipment meets certain telecommunications network protective, operational and safety requirements. The Department does not guarantee the equipment will operate to the user's satisfaction.

Before installing this equipment, users ensure that it is permissible to be connected to the facilities of the local telecommunications company. The equipment must also be installed using an acceptable method of connection. The customer should be aware that compliance with the above conditions may not prevent degradation of service in some situations.

The information contained in this manual has been validated at the time of this manual's production. The manufacturer reserves the right to make any changes and improvements in the product described in this manual at any time and without notice. Consequently the manufacturer assumes no liability for damages incurred directly or indirectly from errors, omissions or discrepancies between the product and the manual.

All registered trademarks are the property of their respective owners.

Copyright © 1997 All rights reserved. No reproduction of this document in any form is permitted without prior written authorization from the Manufacturer.



SPORTON LAB.

D700701

Certificate No:

CERTIFICATE OF COMPLIANCE

Authorized under Declaration of Conformity
according to

47 CFR, Part 2 and Part 15 of the FCC Rules

EXHIBIT C

Equipment Under Test : PERSONAL COMPUTER

Model No. : P2L97

Applicant : FIRST INTERNATIONAL COMPUTER INC.

6F, Formosa Plastics Rear Building 201,

Tung Hwa N, Rd., Taipei, Taiwan, R.O.C.



HEREBY

CERTIFY THAT:

THE MEASUREMENTS SHOWN IN THIS TEST REPORT WERE MADE IN ACCORDANCE WITH THE PROCEDURES GIVEN IN ANSI C63.4 - 1992 AND THE ENERGY EMITTED BY THIS EQUIPMENT WAS PASSED BOTH RADIATED AND CONDUCTED EMISSIONS CLASS B LIMITS. THE TESTING WAS COMPLETED ON SEP. 02, 1997 AT SPORTON INTERNATIONAL INC. LAB. IN NEI HWU.

W. L Huang OCT 02, 97

W. L Huang

GENERAL MANAGER

First Edition

GZ/DR - Version 1.0

Caution: This internal modem adapter is to be installed in UL listed computers only. Always disconnect the modem adapter from the telephone system during installation or when the cover is removed from the computer.

UL Notice

NOTICE: The Load Number (LN) assigned to each terminal device denotes the percentage of the total load to be connected to a telephone loop which is used by the device, to prevent overloading. The termination on a loop may consist of any combination of devices subject only to the requirement that the sum of the Load Numbers of all the devices does not exceed 100.

Caution: Users should not attempt to make such connections themselves, but should contact the appropriate electrical authorities.

Caution: Users should ensure that the electrical connections of the power system, if present, are connected together. This precaution may be particularly important in rural areas.

NOTICE: Repairs to certified equipment should be made by an authorized Canadian maintenance facility designated by the supplier. Any repairs or alterations made by the user to this equipment, or equipment maintained by the user, may void the warranty.

Repairs to certified equipment should be made by an authorized Canadian maintenance facility designated by the supplier. Any equipment maintained by the user, may void the warranty.

Appendix A - Specifications

Appendix C - Notices

If your telephone equipment causes harm to the telephone network, the Telephone Company may disconnect your service temporarily. If possible, they will notify in advance. But, if advance notice is not practical, you will be notified as soon as possible. You will be informed of your right to file a complaint with the FCC.

Your telephone company may make changes in its facilities, equipment, operations, or procedures that could affect proper operation of your equipment. If they do, you will be notified in advance so you can make arrangements to keep your service uninterrupted telephone service.

The FCC prohibits this equipment to be connected to party lines or common telephone service.

- Modem does not respond to commands.**
1. Make sure the communication software is configured to talk to the modem on the correct COM port and IRQ setting (same COM port and IRQ setting as the modem). Your communication software must know which adapter to use. Similarly, IRQ settings must be set correctly to data to it. Similarly, IRQ settings must be set correctly to address your modem if using it in the system in order to pass data to it. You may have been initialized to not display responses. You may accidentally reset the modem by issuing AT&F and press ENTER. The factory default allows the modem connection responses after a command has been executed.
- Modem does not dial.**
1. Make sure the modem is connected to a working phone line. Replace the modem with a working phone line. Replace the modem with a working phone line to ensure that the phone line is working.
 2. Make sure the phone line is connected to the jack marked LINE. Incorrect connection prevents the modem from operating properly. Refer to Section 2.3 for modem connection instructions.
- Modem dials but does not connect.**
1. Make sure the IRQ setting is identical on both the modem and the software. Modem and software must be configured identically.
 2. Make sure the phone line is working properly. Replace the line. If the line is noisy, you may have difficulty connecting to the remote device.
- Modem makes a connection but no data appears on your screen.**
1. Make sure the correct data format (data bits, stop bits, and parity bits) and flow control (RTS/CTS) are being used.

Modem makes a connection but no data

1. Make sure the IRQ setting is identical on both the modem and the software. Modem and software must be configured identically.
2. Make sure the phone line is working properly. Replace the line. If the line is noisy, you may have difficulty connecting to the remote device.

Modem makes a connection but no data appears on your screen.

1. Make sure the correct data format (data bits, stop bits, and parity bits) and flow control (RTS/CTS) are being used.


Modem makes a connection but no data appears on your screen.

1. Make sure the IRQ setting is identical on both the modem and the software. Modem and software must be configured identically.
2. Make sure the phone line is working properly. Replace the line. If the line is noisy, you may have difficulty connecting to the remote device.

Modem makes a connection but no data appears on your screen.

1. Make sure the IRQ setting is identical on both the modem and the software. Modem and software must be configured identically.
2. Make sure the phone line is working properly. Replace the line. If the line is noisy, you may have difficulty connecting to the remote device.

Section Six - Troubleshooting

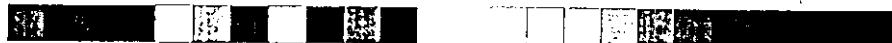

- The Rockwell RCV56HCF-PCI Host-Controlled Modem Device Family supports high speed analog data, high speed fax, quad flat packs (QFPs), Host-controlled modem software and the interface to the RCV56HCF hardware. Figure 1-1 illustrates the general structure of the RCV56HCF software and the interface to the RCV56HCF hardware. Figure 1-2 illustrates the major hardware interfaces supported by each model.
- Using K56flex™ technology, the RCV56HCF can receive data at speeds up to 56 kbps from a digitally connected K56flex compactable central site modem, such as a Rockwell RCV56CSM modem. K56flex modems take advantage of the PSTN which is primarily digital except for the client modem to central office local loop and are ideal for applications such as remote access to an Internet service provider (ISP), on-line service, or corporate site. The RCV56HCF can send data up to V.34 rates.
- In V.34 data mode, the modem operates at line speeds up to 33600 bps. Error correction (V.42/MNP 2-4) and data compression (V.42 bis/MNP 5) maximize data transfer integrity and boost average data throughput. Non-error-correcting mode is also supported.
- AudioSpan (analog simultaneous audio/voice and data) operation supports a data rate with audio of 4.8 kbps.
- The modem supports fax Group 3 send and receive rates up to 28800 bps and T.30 protocol.
- V.80 and Rockwell Video Ready compatible synchronous access modes support host-controlled communication protocols, e.g., H.324 video conferencing.
- In voice/audio mode, PCM coding and decoding at 8000 Hz sample rate allows efficient digital storage of voice/audio. This mode supports digital telephone answering machine, voice annotation, and audio recording/playback.
- Accelerator kits and reference designs are available to minimize application design time and costs.
- This designer's guide describes the modem hardware capabilities and identifies the supporting commands. Commands and parameters are defined in the RCV56HCF Command Reference Manual (Order No. 1118).
- Data modem
- K56flex, 33.6 kbps, V.34, V.32 bis, V.32, V.22 bis, V.22A/B, V.23, and V.21; Bell 212A and 103
- V.42 LAPM and MNP 2-4 error correction
- V.42 bis and MNP 5 command set
- V.25 ter (Annex A) and EIA 602 command set
- Fax modem send and receive rates up to 28800 bps
- ITU-T V.34 fax, V.17, V.27 ter, and V.21 ch 2
- EIA/TIA 578 Class 1, Class 1.0 (T.31) fax
- PC Bus support 2B+D channels
- IOM-2 interface to external U or S/T transceiver
- Simultaneous transfer of B1, B2, D channels (144 kbps; 64 kbps x 2, 16 kbps)
- V.34, DSV, FDSF, audio functions over B channel

FEATURES

- Data modem
- K56flex, 33.6 kbps, V.34, V.32 bis, V.32, V.22 bis, V.22A/B, V.23, and V.21; Bell 212A and 103
- V.42 LAPM and MNP 2-4 error correction
- V.42 bis and MNP 5 command set
- V.25 ter (Annex A) and EIA 602 command set
- Fax modem send and receive rates up to 28800 bps
- ITU-T V.34 fax, V.17, V.27 ter, and V.21 ch 2
- EIA/TIA 578 Class 1, Class 1.0 (T.31) fax
- PC Bus support 2B+D channels
- IOM-2 interface to external U or S/T transceiver
- Simultaneous transfer of B1, B2, D channels (144 kbps; 64 kbps x 2, 16 kbps)
- V.34, DSV, FDSF, audio functions over B channel

• Data modem

-K56flex, 33.6 kbps, V.34, V.32 bis, V.32, V.22 bis, V.22A/B, V.23, and V.21; Bell 212A and 103

-V.42 LAPM and MNP 2-4 error correction

-V.42 bis and MNP 5 command set

-V.25 ter (Annex A) and EIA 602 command set

-Fax modem send and receive rates up to 28800 bps

-ITU-T V.34 fax, V.17, V.27 ter, and V.21 ch 2

-EIA/TIA 578 Class 1, Class 1.0 (T.31) fax

-PC Bus support 2B+D channels

• IOM-2 interface to external U or S/T transceiver

-Simultaneous transfer of B1, B2, D channels (144 kbps; 64 kbps x 2, 16 kbps)

-V.34, DSV, FDSF, audio functions over B channel

• Data modem

-K56flex, 33.6 kbps, V.34, V.32 bis, V.32, V.22 bis, V.22A/B, V.23, and V.21; Bell 212A and 103

-V.42 LAPM and MNP 2-4 error correction

-V.42 bis and MNP 5 command set

-V.25 ter (Annex A) and EIA 602 command set

-Fax modem send and receive rates up to 28800 bps

-ITU-T V.34 fax, V.17, V.27 ter, and V.21 ch 2

-EIA/TIA 578 Class 1, Class 1.0 (T.31) fax

-PC Bus support 2B+D channels

• IOM-2 interface to external U or S/T transceiver

-Simultaneous transfer of B1, B2, D channels (144 kbps; 64 kbps x 2, 16 kbps)

-V.34, DSV, FDSF, audio functions over B channel

• Data modem

-K56flex, 33.6 kbps, V.34, V.32 bis, V.32, V.22 bis, V.22A/B, V.23, and V.21; Bell 212A and 103

-V.42 LAPM and MNP 2-4 error correction

-V.42 bis and MNP 5 command set

-V.25 ter (Annex A) and EIA 602 command set

-Fax modem send and receive rates up to 28800 bps

-ITU-T V.34 fax, V.17, V.27 ter, and V.21 ch 2

-EIA/TIA 578 Class 1, Class 1.0 (T.31) fax

-PC Bus support 2B+D channels

• IOM-2 interface to external U or S/T transceiver

-Simultaneous transfer of B1, B2, D channels (144 kbps; 64 kbps x 2, 16 kbps)

-V.34, DSV, FDSF, audio functions over B channel

In order to test your modem you should be familiar with your communication software. Load and setup your modem sure that the COM Port and IRQ settings of the software match the settings of your terminal mode. Make sure that the COM Port and IRQ settings of the modem match the software and enter into "terminal mode".

With your communication software loaded and setup your modem properly installed, if required, refer to Section 6 for more details.

2.7 Testing Your Modem After Installation

2.6 Using the Fax, Voice, and Speakerphone

We suggest that a "Generic Class 1" modem type should be selected in your fax software, and a "Generic Rockwell" modem type should be selected in your Voice software. Note that your software must be configured to communicate with the modem on the same COM port and IRQ line used by the modem.

ware. Consult the software manual for information on using these and other parameters/features.

Insert the driver disk into the disk drive and click "Next". Windows will find the driver on the driver disk. Click "Finish". Windows 95 may request its own installation disks or CD as required.

Update Device Driver Wizard

When Windows 95 starts for the first time after card installation, it detects the modem and displays the

24.1.2 Windows 95 Release 4.00.950 B

Windows 95 may request its own installation disks or CD-ROM for some files. Insert the Windows 95 disks or CD-ROM and IRQ line. Proceed to Section 2.5.

The **Install Disk** dialog box now instructs you to insert the manufacturer's installation disk into the drive selected, and then click OK. Insert the modem's driver diskette into the disk drive and type A:(or B:) if inserted in drive B) in the "Copy manufacturer's files from" box. Click OK.

Under **New Hardware** Found, when asked to "Select which driver you want to install for your new hardware", click on "Driver from disk provided by hardware manufacturer", click on "OK".

Z4.1.1.1 Windows 95 Release 4.00.950

Section 2.4.1.1 When Windows 95 starts for the first time after card installation, it detects the modem and it displays the New Hardware dialog box.

Section 2.4.1.2 When Windows 95 starts for the first time after card installation, it detects the modem and it displays the Update Device Driver Wizard dialog box.

Installing the modem in Windows 95. Proceed to one of the following sections, depending on your Windows 95 setup.

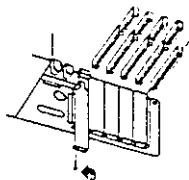


Figure 2-1 Expansion Slots

1. Turn off and unplug your computer from the AC power supply cover.
 2. Remove your computer's cover (refer to your computer's owner's manual).
 3. Select any available half-card slot, and then remove the slot cover (refer to Figure 2-1).
- Discharge any static electricity from your body by touching any bare metal surface of the PC system, such as its metal. Turn off and unplugging your PC before installation. Working with AC powered and static-sensitive equipment may cause damage to your PC. Exercise caution at all times when manipulating your PC. Exercising caution at all times when installing or removing components from your computer will help prevent damage to your computer.

2.3 Hardware Installation

- The README.1ST file can be viewed by loading it into any wordprocessor or any texteditor (i.e. DOS EDIT, NOTEPAD). It may also be viewed by using the DOS TYPE command. Refer to your wordprocessor manual or DOS Windows references for information on loading text files.
2. If running DOS or Windows 3.x, configure the modem using the included modem driver. Instructions for installing this driver are included in the text file called README.1ST on the Windows 95 driver disk.
- If you have neither ZA or ZB above, you have two options to provide Plug and Play functionality to your PC. Proceed to Section 2.3 now if you have everything required.

1. Install Windows 95
- If you have neither ZA or ZB above, you have two options to provide Plug and Play functionality to your PC. Proceed to Section 2.3 now if you have everything required.



NOTE

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, including interference that may cause undesired operation; (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.