




Digital Answerer User's Guide

29869

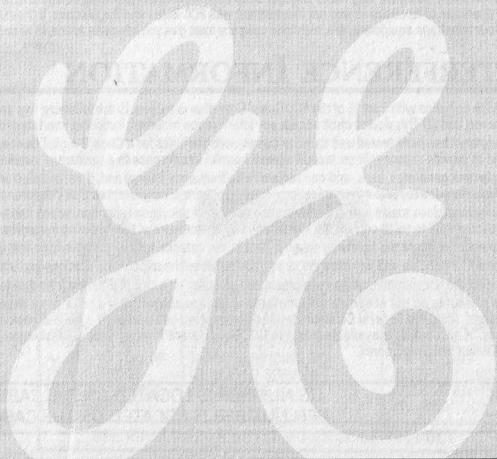

We bring good things to life.

EQUIPMENT APPROVAL INFORMATION

Your telephone equipment is approved for connection to the Public Switched Telephone Network and is in compliance with parts 15 and 68, FCC Rules and Regulations and the Technical Requirements for Telephone Terminal Equipment published by ACTA.

1 Notification to the Local Telephone Company

On the bottom of this equipment is a label indicating, among other information, the US number and Ringer Equivalence Number (REN) for the equipment. You must, upon request, provide this information to your telephone company.

The REN is useful in determining the number of devices you may connect to your telephone line and still have all of these devices ring when your telephone number is called. In most (but not all) areas, the sum of the RENs of all devices connected to one line should not exceed 5. To be certain of the number of devices you may connect to your line as determined by the REN, you should contact your local telephone company.

A plug and jack used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirements adopted by the ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. See installation instructions for details.

Notes

- This equipment may not be used on coin service provided by the telephone company.
- Party lines are subject to state tariffs, and therefore, you may not be able to use your own telephone equipment if you are on a party line. Check with your local telephone company.
- Notice must be given to the telephone company upon permanent disconnection of your telephone from your line.
- If your home has specially wired alarm equipment connected to the telephone line, ensure the installation of this product does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer.

2 Rights of the Telephone Company

Should your equipment cause trouble on your line which may harm the telephone network, the telephone company shall, where practicable, notify you that temporary discontinuance of service may be required. Where prior notice is not practicable and the circumstances warrant such action, the telephone company may temporarily discontinue service immediately. In case of such temporary discontinuance, the telephone company must: (1) promptly notify you of such temporary discontinuance; (2) afford you the opportunity to correct the situation; and (3) inform you of your right to bring a complaint to the Commission pursuant to procedures set forth in Subpart E of Part 68, FCC Rules and Regulations.

The telephone company may make changes in its communications facilities, equipment, operations or procedures where such action is required in the operation of its business and not inconsistent with FCC Rules and Regulations. If these changes are expected to affect the use or performance of your telephone equipment, the telephone company must give you adequate notice, in writing, to allow you to maintain uninterrupted service.

INTERFERENCE INFORMATION

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference; and (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna (that is, the antenna for radio or television that is "receiving" the interference).
- Reorient or relocate and increase the separation between the telecommunications equipment and receiving antenna.
- Connect the telecommunications equipment into an outlet on a circuit different from that to which the receiving antenna is connected.

If these measures do not eliminate the interference, please consult your dealer or an experienced radio/television technician for additional suggestions. Also, the Federal Communications Commission has prepared a helpful booklet, "How To Identify and Resolve Radio/TV Interference Problems." This booklet is available from the U.S. Government Printing Office, Washington, D.C. 20402. Please specify stock number 004-000-00345-4 when ordering copies.

US NUMBER IS LOCATED ON THE CABINET BOTTOM
REN NUMBER IS LOCATED ON THE CABINET BOTTOM

TABLE OF CONTENTS

EQUIPMENT APPROVAL INFORMATION	2	SETTING THE SECURITY CODE	10
INTERFERENCE INFORMATION	2	ADJUSTING THE VOLUME	11
TABLE OF CONTENTS	3	ANSWERER OPERATION	12
MODULAR JACK REQUIREMENTS	4	GREETING INDICATORS	12
INSTALLING THE BATTERY	4	ANSWER ON/OFF INDICATOR	12
BEFORE YOU BEGIN	4	MESSAGES COUNTER	13
PARTS CHECKLIST	4	MAILBOX INDICATORS	13
INSTALLATION	5	PLAYING MESSAGES	14
INSTALLATION INFORMATION	5	WHILE PLAYING MESSAGES	14
IMPORTANT INSTRUCTIONS FOR MOVING		MESSAGE MOVE	15
THE ANSWERER	6	MESSAGE SCAN	15
SETUP	6	WHILE SCANNING MESSAGES	16
RECORDING THE GREETING	6	ERASING ALL MESSAGES IN A MAILBOX ..	16
REVIEWING THE GREETING	7	LEAVING A MEMO	17
ERASING THE GREETING	7	TWO-WAY RECORD	17
RETURNING TO THE DEFAULT GREETING	7	SCREENING CALLS	
REVIEWING THE SETTINGS	7	(AUTO DISCONNECT FEATURE)	18
CHANGING THE SETTINGS	8	REMOTE ACCESS	19
SETTING THE TIME	8	GENERAL PRODUCT CARE	20
TO SET THE HOUR	8	SERVICE	20
TO SET THE MINUTES	8	TROUBLESHOOTING TIPS	21
TO SET THE DAY	8	LIMITED WARRANTY	22
SETTING THE RINGS TO ANSWER	9	INDEX	23
TOLL SAVER	9		
SETTING THE INCOMING MESSAGE			
LENGTH	10		



THE LIGHTNING FLASH AND ARROW HEAD WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF "DANGEROUS VOLTAGE" INSIDE THE PRODUCT.

CAUTION:
RISK OF ELECTRIC SHOCK
DO NOT OPEN

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



THE EXCLAMATION POINT WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF IMPORTANT INSTRUCTIONS ACCOMPANYING THE PRODUCT.

WARNING: TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

SEE MARKING ON BOTTOM / BACK OF PRODUCT

BEFORE YOU BEGIN




CAUTION: When using telephone equipment, there are basic safety instructions that should always be followed. Refer to the **IMPORTANT SAFETY INSTRUCTIONS** provided with this product and save them for future reference.

PARTS CHECKLIST

Make sure your package includes the following items:



Answerer

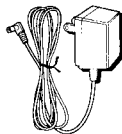

AC power supply



Telephone line cord

MODULAR JACK REQUIREMENTS

You need an RJ11 type modular jack, which is the most common type of phone jack and might look like the one pictured here installed in your home. If you don't have a modular jack, call your local phone company to find out how to get one installed.

INSTALLING THE BATTERY

In the event of a power loss, a 9-volt battery (not included) enables the answerer to retain greetings and messages stored in memory. To install the battery:

1. Remove the battery compartment door on the bottom of the unit by loosening the screw with a Phillips screwdriver. Lift the door.
2. Connect a fresh 9-volt alkaline battery (not included). The large and small contacts on the battery clip and the battery will interlock. Once connected, place the battery inside the battery compartment.
3. Replace the battery compartment door and tighten the screw.


NOTE: If the battery is low or not installed, the unit announces "Low Battery" at the end of message playback.

Wall plate



Modular telephone line jack

Battery compartment door



Battery clip




Battery




INSTALLATION


1. Plug the telephone line cord into a modular wall jack.

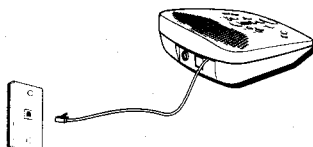

2. Connect the telephone line cord from your telephone into the jack on the back of the answerer marked PHONE. (You don't have to connect your telephone in order for the answerer to record incoming messages.)

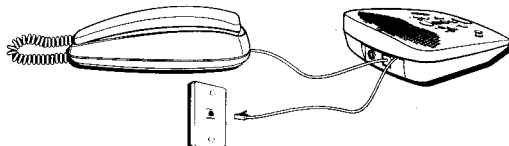

3. Connect the small end of the power supply into the POWER 9V AC jack on the back of the answerer. Plug the other end into an AC power outlet. The unit beeps 3 times and is ready for setup or to answer calls with the default greeting and settings.

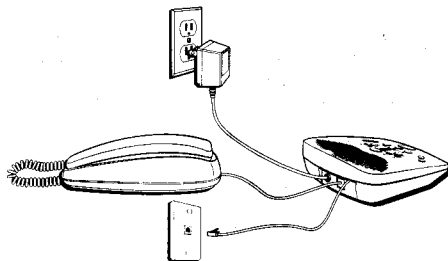

CAUTION: Only use the ATLINKS USA, Inc. 5-2434A (white)/5-2418A (black) power supply that was packed with this unit. Using other power supplies may damage the unit.



INSTALLATION INFORMATION

- Never install telephone wiring during a lightning storm.
- Never touch uninsulated telephone wires or terminals, unless the telephone line has been disconnected at the network interface.
- Use caution when installing or modifying telephone lines.

IMPORTANT INSTRUCTIONS FOR MOVING THE ANSWERER

To move the answerer to a different location in the house, follow these instructions:

1. Disconnect the phone line or any phones you may have connected to the unit.
2. Install a battery, if you have not already done so. This will ensure that your messages are not lost. See "Installing the Battery".
3. Go to the electrical outlet and unplug the power supply. **DO NOT UNPLUG THE POWER JACK CONNECTED TO THE UNIT.** If you do, all memory will be erased.
4. Move the unit and phone line to the desired location.
5. Plug in the power supply into an electrical outlet.
6. The MESSAGES indicator shows that the messages have not been erased.
7. Connect all necessary phone lines.

SETUP

RECORDING THE GREETING

Before using your new answerer, you should record a greeting (the announcement callers hear when your answering system answers a call). Two greetings can be recorded. If you don't record a greeting, callers hear a default greeting which says, "After tone, record message."

You can record two types of greetings, one to use only one mailbox, or one to direct callers to leave messages in specific mailboxes. This is especially useful for active families or small businesses.

When recording the greeting, you should be about 6 inches from the unit. This ensures the best recording quality. Eliminate as much background noise as possible.

Both types of greetings are recorded by the following:

1. Prepare your greeting.

Sample Single Mailbox Greeting: *Hi, this is (use your name here). I can't answer the phone right now, so please leave your name, number, and a brief message after the tone, and I'll get back to you. Thanks for calling.*

NOTE: You can direct callers to leave messages in a specific mailbox by having them press the desired mailbox (1-4) after the greeting plays. If no mailbox is selected, the incoming messages automatically go into mailbox 1.

NOTE: The greeting **must** be 2 seconds or longer to be valid.

**Default Mailbox
for incoming messages**

Mailbox 1

Sample Multi-Mailbox Greeting: *Hi, this is (use your name here). We can't answer the phone right now, so please press 1 to direct your message to (name1), press 2 to direct your message to (name2), press 3 to direct your message to (name3), press 4 to direct your message to (name4). Leave your name, number, and a brief message after the tone, and we'll get back to you. Thanks for calling.*

2. Hold down the desired GREETING button. The unit displays o1 for greeting A record and o2 for greeting B record.
3. After the tone, say your greeting.
4. Release GREETING A or B when you finish.

REVIEWING THE GREETING

To review the greeting, press and release GREETING A or B.

ERASING THE GREETING

There are two ways to erase your greeting.

1. To erase your greeting while listening to it, press and hold ERASE until the unit announces, "Greeting Erased". Then record your new greeting.
2. To re-record your greeting from any point, press and hold GREETING A or B. After the tone, say your greeting. Release GREETING A or B when you finish.


RETURNING TO THE DEFAULT GREETING

To return to the answerer's default greeting after you've recorded one, press and hold the GREETING A or GREETING B button until a beep sound is heard and then release the button.

Alternatively, you can also press and hold the ERASE button when the greeting is playing, release the ERASE button until the unit announces "Greeting Erased".

REVIEWING THE SETTINGS

This function allows you to review the current time/day, number of rings before the unit answers a call, incoming message length, and the security code. Press and release the SET button to review the current settings. The unit announces the current setting.

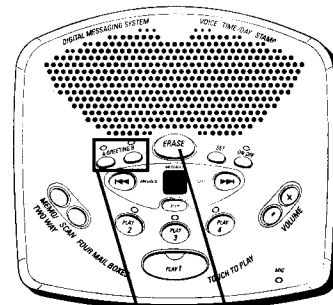

ERASE button
GREETING buttons
and indicators

Default Settings

Time	12 a.m. Sunday
Rings to Answer	4
Message Length	2 minutes
Security Code	0123

NOTE: To exit review, press and release STOP.

CHANGING THE SETTINGS

Press and hold the SET button to enter the change mode. The unit announces the current time and day. To change, press NEXT or PREVIOUS. To set and go on to the next item, press SET.

NOTE: To scroll from one setting to the next, press and release SET. To exit the change list, press STOP.

SETTING THE TIME

For each message received, a time/day stamp is added at the end of the message.

To SET THE HOUR

1. Press and release NEXT or PREVIOUS until the unit announces and displays the correct hour.
2. Once the hour is set, press SET to enter the minutes menu.


To SET THE MINUTES

1. Press and release NEXT or PREVIOUS until the unit announces and displays the correct minutes.
2. Once the minutes are set, press SET to enter the day menu.

To SET THE DAY

1. Press and release NEXT or PREVIOUS until the unit announces and displays the correct day.
2. Once the day is set, press SET. The unit announces the time/day, then enters the rings to answer menu.

NOTE: The days of the week show in the display as numbers. For example, "Sunday" shows as 0.

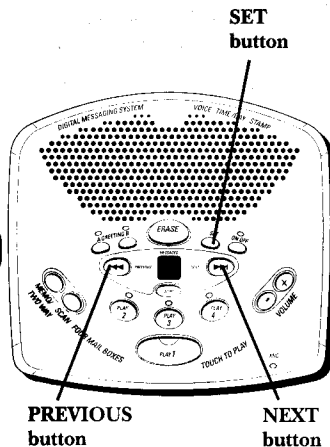

Range of Settings

Time	
Hour	12 a.m. - 11 p.m.
Minute	0 - 59
Day	Sunday - Saturday
Rings to Answer	2, 3, 4, 5, 6, 7, 8, toll saver
Message Length	1, 2, 3, 4 minutes
Security Code	0, 0 - 9, 0 - 9, 0 - 9

SETTING THE RINGS TO ANSWER

This feature is used to set the unit to answer a call after a specific number of rings.


The unit announces the rings to answer. To change, press NEXT or PREVIOUS. To set and go on to the next item, press SET.

1. Press and release NEXT or PREVIOUS until the unit announces and displays the correct number of rings for the answerer to pick up.
2. Once the rings to answer is set, press SET. The unit announces the rings to answer, then enters the incoming message length menu.

TOLL SAVER

The toll saver is the final setting in the Rings to Answer menu. This feature allows you to know if you have new messages when calling the machine from a remote phone. If you have new messages, the unit will ring twice before answering. If you don't, it will ring four times. This allows you to hang up before the machine answers so that you don't have to pay toll charges.

NOTE: The message counter displays 00 for toll saver.

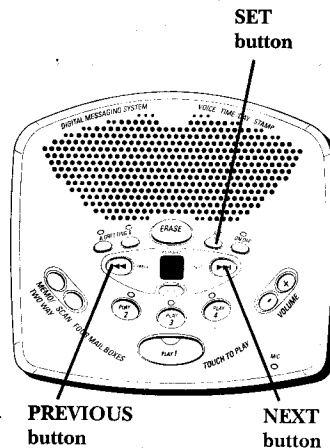

SETTING THE INCOMING MESSAGE

LENGTH

The message length is the length of time (in minutes) the caller has to leave a message.

The unit announces and displays the current message length. To change, press NEXT or PREVIOUS. To set and go on to the next item, press SET.

1. Press and release **NEXT** or **PREVIOUS** until the unit announces and displays the correct incoming message length.
2. Once the length is set, press **SET**. The unit announces the message length, then enters the security code menu.


SETTING THE SECURITY CODE

The security code is a programmable 4-digit code which can be used to access remote functions.

IMPORTANT: The first digit is factory set at zero and cannot be changed.

The unit announces the current security code. To change, press NEXT or PREVIOUS. To set and exit press SET.

1. Press and release NEXT or PREVIOUS to choose the second digit (the first digit is not programmable). The unit announces all 4 digits, but only the selected digit will change.
2. Once you have the desired second digit, press SET to save it and move on to the third digit.
3. Press and release NEXT or PREVIOUS to choose the third digit. Only the third digit will change.

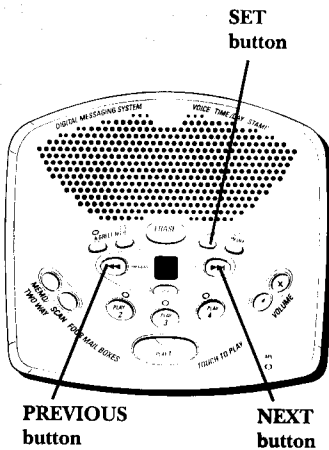


4. Once you have the desired third digit, press SET to save it and move on to the fourth digit.
5. Press and release NEXT or PREVIOUS to choose the fourth digit. Only the fourth digit will change.
6. Once you have the desired fourth digit, press SET to save it. The answerer repeats all the settings.

NOTE: To exit any menu, press and release STOP. Also, setup will cancel if no buttons have been pushed within 30 seconds.


IMPORTANT: The setup settings will not be erased even after a power outage.

ADJUSTING THE VOLUME

Use the VOLUME + and - buttons to increase the volume up and down. The unit beeps when it is not announcing a setting or playing a message. It also beeps 3 times when the maximum or minimum volume is reached.

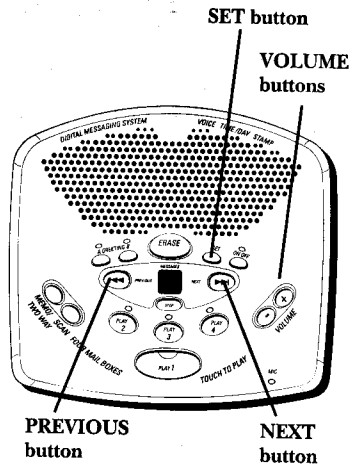

ANSWERER OPERATION

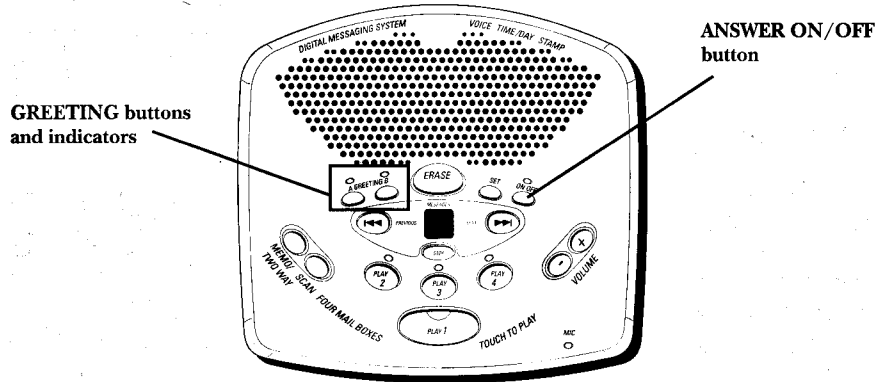

GREETING INDICATORS

The GREETING indicators let you know what greeting will be used to answer a call.

GREETING A indicator is on — Greeting A will be used.

GREETING B indicator is on — Greeting B will be used.

ANSWER ON/OFF INDICATOR

The ANSWER ON/OFF indicator lets you know whether your answerer is on or off. When the answerer is off, it answers calls after 10 rings but doesn't play the greeting. The answerer doesn't take messages when it is off.

Indicator is on — Answerer is on and will answer calls according to the Rings to Answer setting.

Indicator is off — Answerer is off, but you might still have messages.


NOTE: You can play messages, review/change settings, and review/change the greeting even if the answerer is off.

MESSAGES COUNTER

The MESSAGES counter gives you a numeric display of how many messages you have.

- **MESSAGES counter has a number displayed (not flashing)** — No new messages. Shows total of old messages.
- **MESSAGES counter has a flashing number displayed** — There are new messages. Shows total of new and old messages.
- **MESSAGES counter has bars (—)** — Unit is OFF or in remote control mode.
- **MESSAGES counter has an "F" flashing on the display** — Memory is full.

NOTE: While the messages are playing, the MESSAGES counter will display the messages in the order they were received.

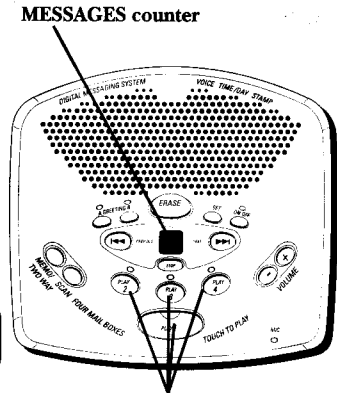

MAILBOX INDICATORS

The mailbox indicators tell you if you have any messages in each individual mailbox and if they are new or old.

- **Mailbox indicator is on** — There are no new messages, but there are old ones.
- **Mailbox indicator is off** — There are either no messages or the answerer is turned off.
- **Mailbox indicator is flashing** — There are new messages.

NOTE: An old message is one that has been listened to **completely**, including the time/day stamp. A new message is one that HAS NOT been listened to completely. Stopping a message before listening to the time/day stamp makes the message remain as new.


PLAYING MESSAGES

You can play the messages in each individual mailbox separately.

- To play messages, press and release the desired mailbox button.

WHILE PLAYING MESSAGES

- To stop playback, press and release STOP.
- To restart the message that is playing, press and hold PREVIOUS.
- To listen to a previous message, press and release PREVIOUS.
- To skip to the next message, press and release NEXT.
- To fast forward within a message, press and hold NEXT.
- To erase a message while it is playing, press and release the ERASE button. The answerer announces, "Message Erased" to confirm the message has been erased.

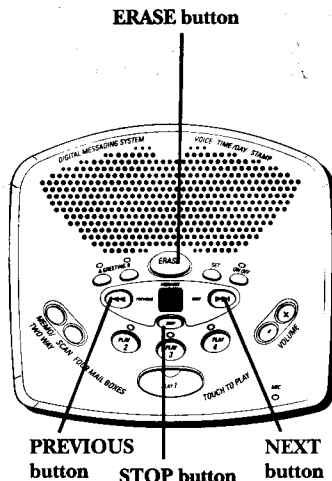

TIP: You can stop the unit from erasing a message you just tried to erase by pressing PREVIOUS before the unit says, "End of Messages."

NOTE: When messages are played, the new messages are played first, followed by the old messages in the order they were received. When all messages are old, the messages play back in the order they were received.

MESSAGE MOVE


The Message Move feature allows you to easily move messages from one mailbox to another.

1. Press and release the desired mailbox where the message you want to move is located.
2. Press and release NEXT or PREVIOUS until the desired message to move is playing.
3. Press and release the mailbox button where you want the message to move. The unit announces the message has been moved.
4. Release the mailbox button. The moved message is now a "new" message in that mailbox.

MESSAGE SCAN

Message Scan allows you to listen to the first 5 seconds of each message within a mailbox.

1. Press and release SCAN. The unit shows Sc and asks you to select a mailbox.
2. Press the desired mailbox button. The unit plays back the first 5 seconds of each message in the mailbox. When finished, it automatically exits Scan mode.

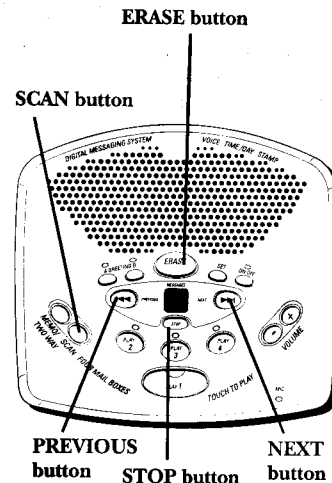

WHILE SCANNING MESSAGES

- To stop playback, press and release STOP.
- To hear the complete message, press and release the mailbox button where the message is located before the unit goes on to the next message.
- To restart the message, press and hold PREVIOUS.
- To skip to the next message, press and release NEXT.
- To erase the message, press and hold ERASE until the unit announces it has been erased.
- To move the message to another mailbox, press and release the desired mailbox where you want to move the message.

NOTE: New messages must be heard **completely**, including the time/day stamp, before they can be erased. The unit will announce you have no messages to erase, if not.

ERASING ALL MESSAGES IN A MAILBOX


1. When the answerer isn't playing or recording messages, press and hold ERASE. The answerer will ask you to select a mailbox.
2. Press and release the mailbox button you want to erase. The answerer announces the messages have been erased.

TIP: The 29869 is equipped with a special feature to retrieve deleted messages.

You may retrieve a deleted message by pressing the button for the mailbox from which you just deleted the message. The Message Counter shows the original number of messages stored in that mailbox before the message deletion.

Do not press any other buttons before you retrieve a deleted message, otherwise the messages is permanently deleted.

NOTE: If there are unheard messages in a mailbox, they will not be erased by Erase All. If there are only new messages in a mailbox, the unit will announce "Zero messages erased".

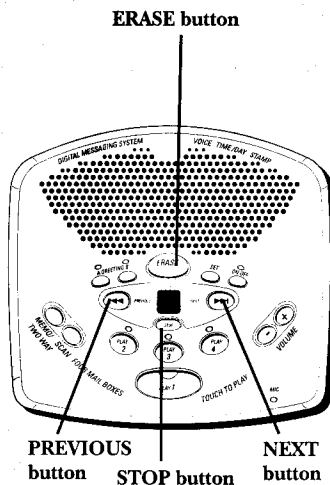

LEAVING A MEMO

This feature allows you to leave a memo for someone in a specific mailbox.

1. Press and release the MEMO/TWO WAY button. The unit shows *Lc* on the display and asks you to select a mailbox.
2. Press and hold the desired mailbox button. Record after the tone.
3. Release the mailbox button when you finish. The unit treats the memo as a message, as the MESSAGES counter and mailbox indicator show.


NOTE: The length of time for recording a memo depends on how many messages are currently stored by the answerer.

TWO-WAY RECORD

Two-Way Record allows you to record both sides of a phone conversation.

1. Pick up an extension phone or answer a call before the machine answers the call. Please note, a phone must be off the hook.
2. Press and hold MEMO/TWO WAY. Release after the announcement. The unit shows *Lr* on the display and asks you to select a mailbox.

MEMO/ TWO WAY button

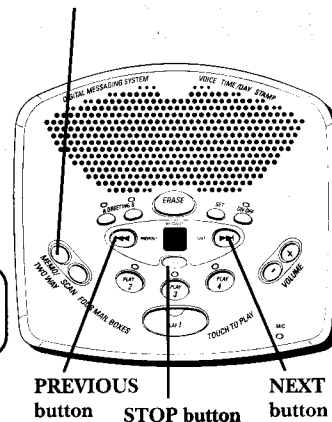

- The unit treats the 2-way recorded conversation as a message, as the MESSAGES counter and mailbox indicator show.

SCREENING CALLS (AUTO DISCONNECT FEATURE)

You can access your answer from any touch-tone phone by entering your 4-digit security code (the default security code is 0123). The remote functions do not work with rotary or push-button pulse-dialing phones. You can cut out the wallet-size remote card near the back of the User's Guide so you know the touch-tone commands when you're picking up messages from another location.

1. Call your telephone number.
2. After you hear the beep that follows the greeting, enter your 4-digit security code. To bypass the greeting, you can enter your 4-digit security code at any time while the greeting is playing.
3. The unit plays the remote menu after the correct security code has been entered. Menu selections can be made at any time while the menu is playing.

NOTE: After the unit plays the remote menu, it will wait several seconds for a command, then disconnect.

GENERAL PRODUCT CARE

To keep your answerer working and looking good, follow these guidelines:

- Avoid putting it near heating appliances and devices that generate electrical noise (for example, motors or fluorescent lamps).
- DO NOT expose to direct sunlight or moisture.
- Avoid dropping answerer and/or other rough treatment.
- Clean with a soft cloth.
- Never use a strong cleaning agent or abrasive powder because this will damage the finish.
- Retain the original packaging in case you need to ship it at a later date.

SERVICE

If trouble is experienced with this equipment, for repair or warranty information, please contact customer service at **1-800-448-0329**. If the equipment is causing harm to the telephone network, the telephone company may request that you disconnect the equipment until the problem is resolved.

This product may be serviced only by the manufacturer or its authorized service agents. Changes or modifications not expressly approved by ATLINKS USA, Inc. could void the user's authority to operate this product. For instructions on how to obtain service, refer to the warranty included in this guide or call customer service at **1-800-448-0329**.

Or refer inquiries to:
ATLINKS USA, Inc.
Manager, Consumer Relations
P O Box 1976
Indianapolis, IN 46206

Attach your sales receipt to the booklet for future reference or jot down the date this product was purchased or received as a gift. This information will be valuable if service should be required during the warranty period.

Purchase date _____

Name of store _____

TROUBLESHOOTING TIPS

<i>Problem</i>	<i>Explanation/Solution</i>
Doesn't answer, or answers on 10th ring	<ul style="list-style-type: none">• Make sure answerer is turned on.• Memory is full, erase some messages.• Check AC power and phone line connections.
Incoming messages are incomplete	<ul style="list-style-type: none">• Was an extension phone picked up?• The caller left a message that is longer than the message length you set during setup.• Memory is full.• You accidentally pressed a mailbox button when you were playing the messages.
Won't respond to remote commands	<ul style="list-style-type: none">• Must use touch-tone phone.• Must enter correct security code.• Did unit hang up? If you take no action for a period of time, it automatically hangs up.
Answerer doesn't work	<ul style="list-style-type: none">• Unplug power cord from the electrical outlet and plug it back in to reset the answerer. If that doesn't work, unplug the power cord from the back of the unit and plug it back in. This is a complete reset.
Can't hear messages	<ul style="list-style-type: none">• Adjust volume control.
Unit announces "Battery Low"	<ul style="list-style-type: none">• Install a new 9-volt alkaline battery.
Can't restart message	<ul style="list-style-type: none">• You must play message for at least 5 seconds before pressing PREVIOUS button.
Messages indicator flashes rapidly	<ul style="list-style-type: none">• Memory is full. Erase messages.
Battery good but messages were lost	<ul style="list-style-type: none">• Was the AC power supply unplugged from back of unit?
Greeting continues to play even after an extension phone is picked up	<ul style="list-style-type: none">• This is normal operation. Auto disconnect is delayed for 2 seconds after the unit answers a call. If you are near the unit, press STOP to stop the greeting.

LIMITED WARRANTY

What your warranty covers:

- Defects in materials or workmanship.

For how long after your purchase:

- One year, from date of purchase.

(The warranty period for rental units begins with the first rental or 45 days from date of shipment to the rental firm, whichever comes first.)

What we will do:

- Provide you with a new or, at our option, a refurbished unit. The exchange unit is under warranty for the remainder of the original product's warranty period.

How you get service:

- Properly pack your unit. Include any cables, etc., which were originally provided with the product. We recommend using the original carton and packing materials.
- "Proof of purchase in the form of a bill of sale or receipted invoice which is evidence that the product is within the warranty period, must be presented to obtain warranty service." For rental firms, proof of first rental is also required. Also print your name and address and a description of the defect. Send via standard UPS or its equivalent to:

ATLINKS USA, Inc.
c/o Thomson
11721 B Alameda Ave.
Socorro, Texas 79927

- Pay any charges billed to you by the Exchange Center for service not covered by the warranty.
- Insure your shipment for loss or damage. ATLINKS accepts no liability in case of damage or loss.
- A new or refurbished unit will be shipped to you freight prepaid.

What your warranty does not cover:

- Customer instruction. (Your Owner's Manual provides information regarding operating instructions and user controls. Any additional information, should be obtained from your dealer.)
- Installation and setup service adjustments.
- Batteries.
- Damage from misuse or neglect.
- Products which have been modified or incorporated into other products.
- Products purchased or serviced outside the USA.
- Acts of nature, such as but not limited to lightning damage.

Product Registration:

- Please complete and mail the Product Registration Card packed with your unit. It will make it easier to contact you should it ever be necessary. The return of the card is not required for warranty coverage.

Limitation of Warranty:

- THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT. ALL OTHER WARRANTIES, EXPRESS OR IMPLIED (INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE) ARE HEREBY DISCLAIMED. NO VERBAL OR WRITTEN INFORMATION GIVEN BY ATLINKS USA, INC., ITS AGENTS, OR EMPLOYEES SHALL CREATE A WARRANTY OR IN ANY WAY INCREASE THE SCOPE OF THIS WARRANTY.
- REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. ATLINKS USA, INC. SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. THIS DISCLAIMER OF WARRANTIES AND LIMITED WARRANTY ARE GOVERNED BY THE LAWS OF THE STATE OF INDIANA. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE.

How state law relates to this warranty:

- Some states do not allow the exclusion nor limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts so the above limitations or exclusions may not apply to you.
- This warranty gives you specific legal rights, and you also may have other rights that vary from state to state.

If you purchased your product outside the USA:

- This warranty does not apply. Contact your dealer for warranty information.

INDEX

A

- Adjusting the Volume 11
- Answer On/Off Indicator 12
- Answerer Operation 12

B

- Before You Begin 4

C

- Changing the Settings 8

E

- Equipment Approval Information 2
- Erasing All Messages in a Mailbox 16
- Erasing the Greeting 7

G

- General Product Care 20
- Greeting Indicators 12

I

- Important Instructions for Moving the Answerer 6
- Installation 5
- Installing the Battery 4
- Interference Information 2

L

- Leaving a Memo 17
- Limited Warranty 22

M

- Mailbox Indicators 13
- Message Move 15
- Message Scan 15
- Messages Counter 13
- Modular Jack Requirements 4

P

- Parts Checklist 4
- Playing Messages 14

R

- Recording the Greeting 6
- Remote Access 19
- Returning to the Default Greeting 7
- Reviewing the Greeting 7
- Reviewing the Settings 7

S

- Screening Calls (Auto Disconnect

- Feature) 18
- Service 20
- Setting the Incoming Message Length 10
- Setting the Rings to Answer 9
- Setting the Security Code 10
- Setting the Time 8
- Setup 6

T

- To Set the Day 8
- To Set the Hour 8
- To Set the Minutes 8
- Toll Saver 9
- Troubleshooting Tips 21
- Two-Way Record 17

W

- While Playing Messages 14
- While Scanning Messages 16

**Cut out this
remote access
card so that you
can take it with
you to help you
use the remote
features.**

FOLD

2-9869

Digital
Answerer



Write your 4-digit security code here.
(First digit is factory set to 0)

			0
--	--	--	---

1. Dial phone number of the answerer.
2. Enter 4-digit security code during greeting or after the beep.
3. Enter touch-tone command.
4. Hang up.

To:

Press:

- | | |
|---|---|
| Play messages | 1 |
| Play previous message | 7 |
| <i>(during message playback)</i> | |
| Skip to next message | 9 |
| <i>(during message playback)</i> | |
| Erase message | 0 |
| <i>(During message playback)</i> | |
| Turn on answerer | 2 |
| Turn off answerer | 3 |
| Leave a memo | 4 |
| <i>(press 6 when finished)</i> | |
| Record greeting | 5 |
| <i>(press 6 when finished)</i> | |
| Stop function | 6 |
| <i>(or hang up during menu playback)</i> | |
| To set rings to answer
and message limit | 7 |
| Play greeting | 8 |
| To set greeting | 9 |
| Erase message | 0 |