

## Brief overview



- 1 **Display** in idle status
- 2 **Battery charge status** ( → page 16)
- 3 **Display keys** ( → page 19)
- 4 **Message key** ( → page 34)  
Access to Calls and Message lists.  
Flashes: New message or new call
- 5 **End Call key, On/Off key**  
End call, cancel function, go back one menu level (press briefly), back to idle status (press and hold), activate/deactivate handset (press and hold in idle status)
- 6 **Pound key**  
Keypad lock on/off (press and hold in idle status);  
Toggles between uppercase/lowercase letter and digits
- 7 **Quick list key** ( → page 29)  
Open Quick list
- 8 **Charging socket**
- 9 **Microphone**
- 10 **Flash key**  
- Consultation call (flash)  
- Insert a dialing pause (press and hold)
- 11 **Asterisk key**  
Ringer on/off (press and hold);  
With an open connection: switch between pulse dialing/touch-tone dialing (press briefly);  
Text input: Open table of special characters
- 12 **Key 1**  
Dial answering machine (SL785 only)/  
Network mailbox (press and hold)
- 13 **Talk key**  
Accept a call; open Last Number Redial list (press briefly); start dialing (press and hold)
- 14 **Handsfree key**  
Switch between earpiece and handsfree mode;  
Lights up: handsfree activated;  
Flashes: incoming call
- 15 **Control key** ( → page 18)
- 16 **Signal strength** ( → page 16)
- 17 **Answering machine symbol** (SL785 only)  
Answering machine switched on;  
Flashes: Answering machine is recording a message or is being operated by another internal party

## Base station



Registration/  
Paging key  
( → page 45)

## Display symbols

# Display symbols

The following symbols are displayed independently of the settings and the operating status of your telephone:

Signal strength (→ page 16)  
 or Eco mode symbol (→ page 42)

Answering machine switched on (SL785 only)

Bluetooth activated (→ page 50)  
 or (Bluetooth headset/data device) connected

Ringer switched off (→ page 54)

Keypad lock switched on (→ page 21)

Battery charging (→ page 16)

Battery charge status (→ page 16)

Number of new messages:  
 ◆ In the list of received appointments (→ page 44)  
 ◆ In the list of missed calls (→ page 34)  
 ◆ In the network mailbox (→ page 16)

Name of the handset (→ page 47)

Current month and year (→ page 16)

Alarm switched on and wake-up time (→ page 44)

Current time (→ page 16)

Appointment added to the calendar (→ page 42)

Current date (→ page 16)

### Signaling

External call (→ page 26)



Alarm clock (→ page 44)



Internal call (→ page 46)



Appointment (→ page 42) / Anniversary (→ page 32)



Answering machine is recording (→ page 36)



# Contents

---

<b>Brief overview</b> .....	<b>1</b>
<b>Safety precautions</b> .....	<b>6</b>
<b>Gigaset SL780/SL785 – more than just a telephone</b> .....	<b>7</b>
<b>First steps</b> .....	<b>8</b>
Check the pack contents .....	8
Connecting the base station .....	9
Installing the base station and charging cradle .....	10
Setting up the handset for use .....	11
Setting the date and time .....	14
Connecting the USB cable .....	16
What would you like to do next? .....	17
<b>Using the phone</b> .....	<b>18</b>
Control key .....	18
Display keys .....	19
Keys on the keypad .....	19
Correcting incorrect entries .....	19
Menu guidance .....	20
Activating/deactivating the handset .....	21
Activating/deactivating the keypad lock .....	21
Illustration of operating steps in the user guide .....	22
<b>Menu tree</b> .....	<b>24</b>
<b>Making calls</b> .....	<b>26</b>
Making an external call .....	26
Ending a call .....	26
Accepting a call .....	26
Caller ID .....	27
Handsfree talking .....	28
Switch to mute .....	28
<b>Using the directory and lists</b> .....	<b>29</b>
Directory/Quick list .....	29
Last Number Redial list .....	33
Answering Machine list (Gigaset SL785 only) .....	33
Call lists .....	33
Opening lists with the Message key .....	34
<b>Making cost-effective calls</b> .....	<b>35</b>
Linking Quick list numbers with one number .....	35

## Contents

<b>Operating the answering machine on the Gigaset SL785 base station</b> .....	<b>36</b>
Operation using the handset .....	36
Activating/deactivating call screening .....	39
Setting the recording parameters .....	39
Resetting fast access for the answering machine using key 1 .....	40
Operating when on the move (remote operation) .....	40
<b>Using the network mailbox</b> .....	<b>41</b>
Configuring Fast Access for the network mailbox .....	41
Viewing the network mailbox message .....	41
<b>ECO DECT</b> .....	<b>42</b>
<b>Setting an appointment (calendar)</b> .....	<b>42</b>
Displaying missed appointments, anniversaries .....	44
<b>Setting the alarm clock</b> .....	<b>44</b>
<b>Using several handsets</b> .....	<b>45</b>
Registering handsets .....	45
Deregistering handsets .....	45
Locating a handset ("paging") .....	45
Changing the base station .....	46
Making internal calls .....	46
Listening in to an external call .....	47
Changing the name of a handset .....	47
Changing a handset's internal number .....	47
<b>Using a handset as a room monitor</b> .....	<b>48</b>
<b>Using Bluetooth devices</b> .....	<b>49</b>
<b>Handset settings</b> .....	<b>51</b>
Quick access to functions and numbers .....	51
Changing the display language .....	52
Setting the display .....	52
Activating/deactivating auto answer .....	53
Changing the handsfree/earpiece volume .....	53
Changing ringers .....	53
Activating/deactivating advisory tones .....	55
Setting your own area code .....	55
Restoring the handset default settings .....	55
<b>Base station settings</b> .....	<b>56</b>
Protecting against unauthorized access .....	56
Activating/deactivating music on hold .....	56
Repeater support .....	56
Restoring the base station to the factory settings .....	56

## Contents

<b>Connecting the base station to the PABX</b> .....	<b>57</b>
Dialing modes and recall .....	57
Setting pauses .....	57
Switching temporarily to touch-tone dialing (DTMF) .....	57
<b>Questions and answers</b> .....	<b>58</b>
<b>Environment</b> .....	<b>59</b>
<b>Appendix</b> .....	<b>60</b>
Care .....	60
Contact with liquid .....	60
Specifications .....	60
Writing and editing text .....	61
<b>Additional functions in the PC interface</b> .....	<b>62</b>
Industry Canada Certification .....	64
<b>FCC / ACTA Information</b> .....	<b>64</b>
Safety precautions .....	66
End-user limited warranty .....	67
<b>Mounting the base station to the wall</b> .....	<b>73</b>
<b>Index</b> .....	<b>74</b>

## Safety precautions

# Safety precautions

### Warning

Read the safety precautions and the user guide before use.

Explain their content and the potential hazards associated with using the telephone to your children.



Only use the power adapter supplied, as indicated on the bottom of the base station.



Only use the **recommended, rechargeable batteries** (→ page 60); other batteries pose significant health risks and could result in personal injury.

Do not charge the handset in charging unit or base station while the headset is connected.



The operation of medical appliances may be affected. Be aware of the technical conditions in your particular environment (such as a doctor's office).



Do not hold the rear of the handset to your ear when it is ringing or when the handsfree function is activated. Otherwise, you risk serious and permanent damage to your hearing.

The handset may cause an unpleasant humming noise in hearing aids.



Do not install the charging cradle in bathrooms or shower areas. The base station and charging cradle are not splashproof (→ page 60).



Do not use your phone in environments that pose an explosion hazard (e.g., paint shops).



If you give your Gigaset to someone else, make sure you also give them the user guide.



Please remove faulty base stations from use or have them repaired by our service department, as they could interfere with other wireless services.

### Please note

Not all of the functions described in this user guide are available in all countries.

## Gigaset SL780/SL785 – more than just a telephone

---

Your telephone sets new standards for the way you communicate at home.

The configuration and user interface of the cordless phone are unique, providing you with first-class voice quality in handsfree mode, while the various ports (Bluetooth, USB) offer you high flexibility.

The large TFT display, user-friendly keypad, and clearly laid out menu are very simple to use.

It can do a whole lot more:

- ◆ You can use Bluetooth™ for wireless communication with other devices (e.g., headsets) that also use this technology.
- ◆ Synchronize your address books on your telephone, mobile phone, and PC with Bluetooth™ or using the USB port and Gigaset QuickSync software.
- ◆ You can save appointments and anniversaries in your phone, and it will remind you of them in advance.
- ◆ You can designate important people as VIPs so you can identify important calls from the ringer.
- ◆ If you do not wish to be disturbed, you can simply set up a time control so that your phone will only ring when it is convenient. VIP calls will still be connected.
- ◆ You can program the keys of your phone with important numbers or frequently used functions. The number is then dialed or the function started by simply pressing a key.
- ◆ Gigaset Green Home – Be environmentally aware when using your phone. For more information, visit [www.gigaset.com/customer-care](http://www.gigaset.com/customer-care).

You can find additional information on your telephone at [www.gigaset.com/gigasetSL78H](http://www.gigaset.com/gigasetSL78H).

**Have fun using your new phone!**

## First steps

# First steps

---

## Check the pack contents



- 1 One Gigaset SL780/SL785 base station
- 2 One base station cover stand
- 3 One power adapter for the base station
- 4 One Gigaset SL78H handset
- 5 One battery
- 6 One battery cover
- 7 One belt clip
- 8 One charging cradle with power adapter
- 9 One phone cord
- 10 One user guide
- 11 USB cable
- 12 CD-ROM (driver for USB cable)

## Connecting the base station

- ▶ Connect the power adapter **1** and phone jack **2** to the base station, and place the cables in the cable recesses.



- ▶ Place the cover in the notches on the back of the base station and click into place (**not if mounting on the wall**).

- ▶ **First** connect the power adapter **3**.
- ▶ **Then** connect the phone jack **4**.



### Please note:

- ◆ The power adapter must **always be connected**, as the phone will not operate without connection to an electrical outlet.
- ◆ Only use the power adapter and phone cord **supplied**. Pin connections on telephone cables can vary (pin connections → page 61).

## First steps

### Installing the base station and charging cradle

The base station and charging cradle are designed for use in enclosed dry rooms within a temperature range of +5°C to +45°C.

- ▶ Install the base station on a level, nonslip surface in a central location in your house or apartment, or mount the base station on the wall → page 73.

#### **Please note**

Keep in mind the range of the base station. It is up to 985 feet (300 m) in unobstructed outdoor areas and up to 165 feet (50 m) inside buildings. The range is reduced when Eco mode ( → page 42) is activated.

The phone's feet do not usually leave any marks on surfaces. However, because of the multitude of varnishes and polishes used on today's furnishings, marks on surfaces cannot be completely ruled out.

#### **Please note:**

- ◆ Never expose the telephone to heat sources, direct sunlight, or other electrical devices.
- ◆ Protect your Gigaset from moisture, dust, corrosive liquids, and vapors.

## Setting up the handset for use

The display and keypad are protected by a protective plastic film.  
**Please remove the protective film!**

### Inserting the battery and closing the battery cover

#### Warning

Use only the rechargeable batteries ( → page 60) recommended by Gigaset Communications GmbH\*; using other batteries could result in significant health risks and property damage. For example, the outer casing of the batteries could be destroyed, or the batteries could explode. The phone could also malfunction or be damaged as a result of using batteries that are not the recommended type.

\* Gigaset Communications GmbH is a trademark licensee of Siemens AG.

- ▶ First insert the battery at the top **a**.
- ▶ Then press the battery downwards **b** until it clicks into place.



- ▶ Align the protrusions on the side of the battery cover with the notches on the inside of the casing.
- ▶ Then press the cover until it clicks into place.

## First steps

If you need to **reopen the battery cover** to connect the USB cable or change the battery:

- ▶ Remove the belt clip (if attached).
- ▶ Place your fingernail into the notch at the bottom of the casing and pull the battery cover upwards.



To **change the battery**, place your fingernail in the cavity in the casing and pull the battery upwards.



## Attaching/removing the belt clip

The handset has notches on each side to attach the belt clip.

- ▶ **To attach** – Press the belt clip onto the back of the handset so that the protrusions on the belt clip engage the notches.
- ▶ **To remove** – Using your right thumb, apply pressure to the center right of the belt clip, push the fingernail of your left index finger between the clip and the casing, and lift the clip upwards.



### Placing the handset in the charging cradle

- ▶ Insert the power adapter of the charging cradle into the electrical outlet.
- ▶ Place the handset in the charging cradle, with its **display facing forward**.

The handset is registered with the base station at the factory. You do not need to complete a registration. If you wish to use your handset with a different base station or use further handsets with your base station, you will have to register the handset manually → page 45.

To charge the battery, leave the handset in the charging cradle.

#### Please note

Only place the handset into the charging cradle specifically intended for it.

### First battery charge and discharge

The correct charge status can only be displayed if the battery is first fully charged **and then** discharged.



- ▶ Place the handset in the charging cradle for **six hours**.



- ▶ Once the battery is fully charged, remove the handset from the charging cradle and do not put it back again until the battery is fully discharged.


#### Please note

- ◆ After the first battery charge **and** discharge, you can place your handset in the charging cradle after every call.
- ◆ Always repeat the charging and discharging procedure if you remove the battery from the handset and reinsert it.
- ◆ The battery may heat up during charging. This is not dangerous.
- ◆ After a time, the charge capacity of the battery will decrease for technical reasons.

## First steps

### Setting the date and time


Set the date and time so that the correct date and time can be assigned to incoming calls, and so that the alarm and the calendar can be used.

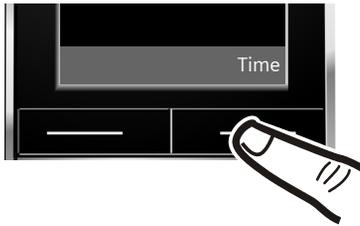


- ▶ Press the key below **Time** on the display screen to open the input field. (If you have already set the time and date, open the input field using the menu → page 25.)




The **Date/Time** submenu is shown on the display.

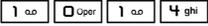- ▶ The active input position flashes. Enter the month, day, and year as an 8-digit number using the keypad (e.g.,  for 10/14/2008).

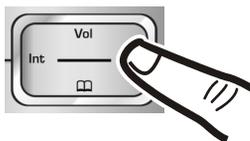

Press the **right** or **left** Control key to change the input position and correct an entry.

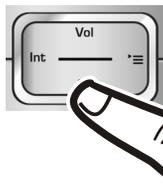


- ▶ Press **down** on the Control key to switch to the time input field.

- ▶ Enter the hours and minutes as four-digit numbers using the keypad (e.g.,  for 07:15 am). Change the input position with the Control key, if necessary.



## First steps

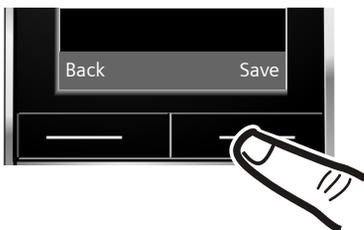

- ▶ Press the key below **Save** on the display screen to confirm your entry.



The display shows **Saved**. You will hear a confirmation tone.



- ▶ Press the key below **Back** on the display screen to return to idle status.

## First steps

### Display in idle status

Once the phone is registered and the time set, the idle display is shown, as in this example. If the answering machine is activated, the answering machine icon  will be displayed in the header.

The following is displayed after successful registration:

- ◆ The strength of the reception signal between the base station and handset:
  - Good to poor: 
  - No reception:  flashes
- ◆ Battery charge status:
  -  (dead to full)
  -  flashing: battery almost dead
  -  (charging)



Your answering machine is set with a prerecorded announcement.

#### Please note

The display of the calendar in idle status can be activated or deactivated (→ page 42).

**Your phone is now ready for use!**

## Connecting the USB cable

To connect your telephone to a PC (→ page 62), you can connect the supplied USB cable to the back panel of your phone.

- ▶ Remove the belt clip (if attached) (→ page 12).
- ▶ Remove the battery cover (→ page 12).
- ▶ Connect the USB cable to the USB socket **1**.



## What would you like to do next?

Now that you have successfully started your Gigaset, you will probably want to adapt it to your personal requirements. Use the following guide to quickly locate the most important topics.

If you are unfamiliar with menu-driven devices, such as other Gigaset telephones, you should first read the section entitled "Using the phone" → page 18.

Information on ...	... is located here.
Setting the ringer and volume	▶ page 53
Setting the handset volume	▶ page 53
Recording your own announcement for the answering machine	▶ page 36
Setting Eco mode	▶ page 42
Operating the telephone on a PABX	▶ page 57
Registering existing Gigaset handsets to a base station	▶ page 45
Transferring directory entries from existing Gigaset handsets to your new handset(s)	▶ page 31
Using Bluetooth devices	▶ page 49
Connecting the phone to the PC	▶ page 62

If you have any questions about using your phone, please read the troubleshooting tips (→ page 58) or contact our Customer Care team (→ page 67).

Using the phone

## Using the phone

### Control key

Below, the side of the Control key that you must press in a given operating situation is shown in black (top, bottom, right, left, center), for example,  for "press right on the Control key" or  for "press the center of the Control key."

The Control key has a number of different functions:



#### When the handset is in idle status

-  Open the directory.
-  Open the main menu.
-  Open the list of handsets.
-  Open the menu for setting the handset's call volume ( → page 53), ringers ( → page 53), and advisory tones ( → page 55).

#### In the main menu, submenus, and lists

-  /  Scroll up/down line by line.

#### In input fields

You can use the Control key to move the cursor up , down , right , or left .

#### During an external call

-  Open the directory.
-  Initiate an internal consultation call.
-  Adjust the loudspeaker volume for earpiece and handsfree mode.

#### Functions when pressing the middle of the Control key

Depending on the operating situation, the key has different functions.


- ◆ **In idle status** the key opens the main menu.
- ◆ **In submenus and selection and input fields**, the key takes on the function of the Display keys **OK**, **Yes**, **Save**, or **Change**.

#### Please note

In these instructions, functions are explained using the right Control key and the Display keys. However, if you prefer, you can use the Control key as described above.

## Display keys

The function of the Display keys changes depending on the particular operating situation. Example:

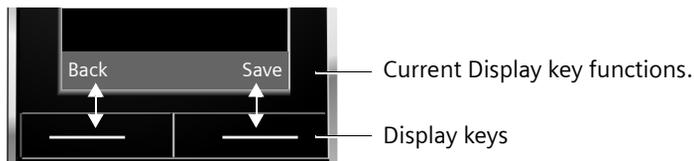

Some important Display keys:

<b>Options</b>	Open a context-dependent menu.
<b>OK</b>	Confirm selection.
<b>&lt; C</b>	Delete key: Backspace deletes one character at a time.
<b>Back</b>	Go back one menu level or cancel operation.
<b>Save</b>	Store entry.
<b>Redial</b>	Open the Last Number Redial list.

## Keys on the keypad

 /  / , etc.

Press the matching key on the handset.



Enter digits or letters.

## Correcting incorrect entries

You can correct incorrect characters in the input fields by navigating to the incorrect entry using the Control key. You can then:

- ◆ Press **<C** to delete the character to the left of the cursor.
- ◆ Insert characters to the left of the cursor.
- ◆ Overwrite the highlighted (flashing) character (e.g., when entering the time and date).

## Using the phone

### Menu guidance

Your telephone's functions are accessed using a menu that has a number of levels.

#### Main menu (first menu level)


- ▶ When the handset is in idle status, press the **right**  Control key to open the main menu.

The main menu functions are shown as icons on the display. The selected function is marked by an orange circle around the symbol, and the corresponding name is shown in the display header.

To access a function, open the corresponding submenu (next menu level):

- ▶ Use the Control key  to select the required function, and press the Display key **OK**.

**Briefly** press the Display key **Back** or the End Call key  to revert back to idle status.

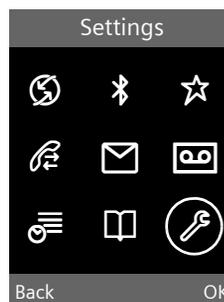


#### Submenus

The functions in the submenus are displayed as lists (example on the right).

To access a function:

- ▶ Scroll to the function with the Control key  and press **OK**.

**Briefly** press the Display key **Back** or the End Call key  to return to the previous menu level/cancel the operation.

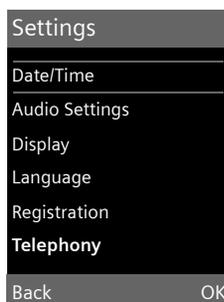

#### Reverting to idle status

You can revert to idle status from anywhere in the menu as follows:

- ▶ Press and **hold** the End Call key .

Or:

- ▶ Do not press any key: After 2 minutes, the display will **automatically** revert to idle status.

Settings that have not been saved by selecting the Display key **OK**, **Yes**, **Save**, or **Change** will be lost.

An example of the display in idle status is shown on page 16.

## Activating/deactivating the handset



With the phone in idle status, press and **hold** the End Call key (confirmation tone) to switch off the handset. Press and **hold** the End Call key again to switch the handset on.

### Please note

When the handset is switched on, an animation of a clock will be displayed for several seconds.

## Activating/deactivating the keypad lock

The keypad lock prevents any inadvertent use of the phone.



Press and **hold** the Pound key in idle status to activate or deactivate the keypad lock. You will hear the confirmation tone.

When the keypad lock is activated, you will see the  icon on the display and a message when you press a key.

The keypad lock is deactivated automatically if someone calls you. It is reactivated when the call is finished.

## Using the phone

### Illustration of operating steps in the user guide


The operating steps are shown in abbreviated form.

#### Example:

The illustration:

 → **Settings** → **Telephony** → **Auto Answer** (☑ = on)

means:

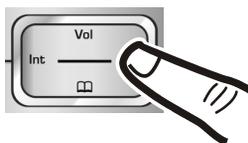

- ▶ Press **right** on the Control key  to open the main menu.



- ▶ Use the right, left, down, and up Control key  to navigate to the **Settings** submenu.



- ▶ Press down on the Control key  until the **Telephony** menu appears on the display.
- ▶ Press the Display key **OK** to confirm your selection.

## Using the phone



The **Auto Answer** function has already been selected.

- ▶ Press the Display key **Change** to activate/deactivate the function.



Changes are effective immediately and do not have to be confirmed.

- ▶ Press the key below **Back** on the display to return to the previous menu level.

**or**

Press and **hold** the End Call key  to return to idle status.

## Menu tree

# Menu tree

---

With the telephone in **idle status**, press  (open main menu):

## Bluetooth

Activation	→ page 50
Search for Headset	→ page 50
Search for DataDevice	→ page 50
Known Devices	→ page 50
Own Device	→ page 51

## Additional Features

Room Monitor	→ page 48
--------------	-----------

## Call Lists

All Calls	→ page 33
Outgoing Calls	→ page 33
Accepted Calls	→ page 33
Missed Calls	→ page 33

## Voice Mail

Play Messages	Network Mailbox	→ page 41
	Answering Machine *	→ page 36
Activation *		→ page 36
Announcements *	Record Announcemnt. *	→ page 36
	Play Announcement *	→ page 36
	Delete Announcemnt. *	→ page 36
	Record Advisory Msg. *	→ page 36
	Play Advisory Message *	→ page 36
	Delete Advisory Msg. *	→ page 36
Recordings *		→ page 39
Call Screening *		→ page 39
Network Mailbox		
Set Key 1	Network Mailbox	→ page 41
	Answering Machine *	→ page 36

\*Only base station with answering machine

 **Organizer**

Calendar	→ page 42
Alarm Clock	→ page 44
Missed Alarms	→ page 44

 **Settings**

Date/Time	→ page 14	
Audio Settings	Handset Volume	→ page 53
	Ringer Settings	→ page 54
	Advisory Tones	→ page 55
	Music on Hold	→ page 56
Display	Screensaver	→ page 52
	Backlight	→ page 53
Language	→ page 52	
Registration	Register Handset	→ page 45
	De-register Handset	→ page 45
	Select Base	→ page 46
Telephony	Auto Answer	→ page 53
	Area Codes	→ page 55
	Listening In	→ page 47
	Dialing Mode	→ page 57
	Recall	→ page 57
	Local Area Code	
	Extra Codes	
System	Eco mode	→ page 42
	Repeater Mode	→ page 56
	System PIN	→ page 56
Reset	Handset Reset	→ page 55
	Base Reset	→ page 56

## Making calls

### Making calls

#### Making an external call

External calls are calls using the public telephone network.

  Enter the number and press the Talk key.

Or:

  Press and **hold** the Talk key , and then enter the number.

You can cancel the dialing operation with the End Call key .

You are shown the duration of the call while the call is in progress.

#### Please note

Dialing using the directory, the Quick list (page 1, page 29) or the Calls and Last Number Redial lists (page 33/ page 33) saves you from having to re-enter numbers and network provider prefixes ("Quick list numbers").

#### Continuing a call on a Bluetooth headset

**Requirement:** Bluetooth is activated; a connection has been established between the Bluetooth headset and the handset (→ page 50).

Press the Talk key on the Bluetooth headset; it may take up to 5 seconds to establish a connection to the handset.

For further details about your headset, see the user guide issued with it.

#### Ending a call

 Press the End Call key.

### Accepting a call

The handset indicates an incoming call in three ways: by ringing, by a display on the screen, and by the flashing Handsfree key .

You can accept the call by:

- ▶ Pressing the Talk key .
- ▶ Pressing the Handsfree key .
- ▶ Gigaset SL780: Press the Display key  **Accept**.
- ▶ Gigaset SL785: Press the Display key  to forward the call to the answering machine (→ page 38).

If the handset is in the charging cradle and the **Auto Answer** function is activated (→ page 53), the handset will take a call automatically when you lift it out of the cradle.

To deactivate the ringer, press the **Silence** Display key. You can take the call as long as it is displayed on the screen.

#### Accepting a call on a Bluetooth headset

**Requirement:** Bluetooth is activated; a connection has been established between the Bluetooth headset and the handset (→ page 50).

**Only press the Talk key on the headset when the headset rings;** it can take up to 5 seconds.

For further details about your headset, see the user guide issued with it.


## Caller ID

When you receive a call, the caller's number and/or name is displayed on the screen if the following conditions are met:

- ◆ Your network provider supports CIP, CI, and CNIP.
  - CI (caller ID): the caller's number is transmitted.
  - CIP (caller ID presentation): the caller's number is displayed.
  - CNIP (calling name identification presentation): the caller's name is displayed.
- ◆ You have arranged CIP or CNIP with your network provider.
- ◆ The caller has requested CI from the network provider.

## Call display with CIP/CI

If the caller's number is saved in your directory, the caller's name will be displayed.

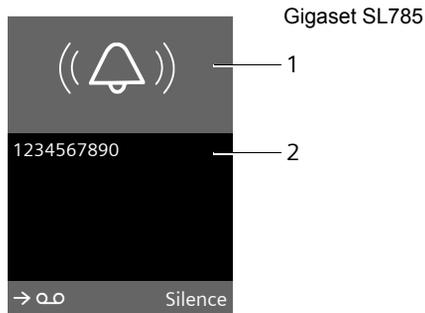

- 1 Ringer icon
- 2 Number or name of caller

The following is displayed in place of the number:

- ◆ **External**, if no number is transmitted.
- ◆ **Unavailable**, if the caller has not arranged caller ID.

## Display with CNIP

If you have CNIP, the name (town/city) that is registered with your network provider for the caller's number will **also** be displayed. If the number of the caller is stored in your directory, the CNIP display is replaced by the corresponding directory entry.



- 1 Caller's number
- 2 Name and town

The display shows:

- ◆ **External**, if no number is transmitted.
- ◆ **Unavailable**, if the caller has not arranged caller ID.

## Making calls

### Handsfree talking

---

In handsfree mode, instead of holding the handset to your ear, you can put it down, for example, on the table in front of you. This allows others to participate in the call.

### Activating/deactivating handsfree mode

---

#### Activating while dialing



Enter the number and press the Handsfree key.

- ▶ You should inform your caller before you use the handsfree function so that they know someone else is listening.

#### Switching between earpiece and handsfree mode



Press the Handsfree key.

During a call and when listening to the answering machine (Gigaset SL785 only), activate or deactivate handsfree mode.

If you wish to place the handset in the charging cradle during a call:

- ▶ Press and hold the Handsfree key  while placing the handset into the base station. If the Handsfree key  does not light up, press the key again.

For instructions on how to adjust the loudspeaker volume → page 53.

### Switch to mute

---

You can deactivate the microphone in your handset during an external call.

#### Mute

Press the Display key to mute the handset. The display shows **Microphone is off**.

#### Mute off

Press the Display key to reactivate the microphone.

## Using the directory and lists

The options are:

- ◆ Directory
- ◆ Quick list
- ◆ Last Number Redial list
- ◆ Call lists
- ◆ List of missed appointments
- ◆ Answering Machine list  
(Gigaset SL785 only)

You create the directory and Quick list for your own individual handset. You can also send lists/entries to other handsets (→ page 31).

### Directory/Quick list

You can save a total of 500 entries in the directory and Quick list.

#### Please note

For quick access to a number from the directory or the Quick list (using Quick Dial keys), you can assign the number to a key (→ page 51).

### Directory

In the **directory**, you can save

- ◆ Up to three numbers and their associated first and last names
- ◆ E-mail addresses
- ◆ Anniversaries, with reminder
- ◆ VIP ringer, with VIP symbol

You open the directory in idle status using the  key.

#### Length of the entries

3 numbers: max. 32 digits each

First and last names:  
max. 16 characters each

E-mail address: max. 60 characters

### Quick list

The **Quick list** is used to store the access codes for network providers ("Quick list numbers").

- ▶ Open the Quick list in idle status by pressing the  key.

#### Length of the entries

Number: max. 32 digits

Name: max. 16 characters

### Storing a number in the directory

 → **New Entry**

- ▶ Change multiple-line input:

**First Name: / Last Name:**

Enter a name in at least one of the fields.

(For instructions on how to enter text and special characters, please see → page 61.)

**Phone (Home): / Phone (Office): /**

**Phone (Mobile):**

Enter a number in at least one of the fields.

When scrolling through the directory, the entries are highlighted by a prefixed symbol:  /  / .

**E-Mail:**

Enter e-mail address.

**Anniversary:**

Select **On** or **Off**.

With setting **On**:

Enter **Anniversary (Date)** and **Anniversary (Time) Anniversary (Signal)**, and select reminder type → page 32.

**Caller Melody (VIP) :**

Mark a directory entry as a **VIP** (very important person) by assigning a specific ringer to it. VIP calls are recognized by the ringer.

When scrolling through the directory, VIP entries are highlighted by the  symbol.

**Requirement:** Caller ID (→ page 27).

**Save**

Press the Display key.

## Using the directory and lists

### Storing a number in the Quick list

 → **New Entry**

▶ Change multiple-line input:

**Name:**

Enter name.

**Number:**

Enter the number.

**Save** Press the Display key.

### Order of directory entries

Directory entries are generally sorted alphabetically by last name. Spaces and digits take first priority. If only the first name was entered in the directory, it is incorporated into the sort order instead of the last name.

The sort order is as follows:

1. Space
2. Digits (0–9)
3. Letters (alphabetical)
4. Other characters

To bypass the alphabetical order of the entries, insert a space or a digit in front of the first letter of the last name. These entries will then move to the beginning of the directory.

### Selecting entries in the directory and Quick list

 /  Open the directory or Quick list.

You have the following options:

- ◆ Use  to scroll through the entries until the name you want is selected.
- ◆ Enter the first letters of the name (max. 8); if necessary, scroll to the entry with the  key.

The directory searches for the last name. If a last name has not been added, it will search for the first name.

### Dialing with the directory/Quick list

 /  →  (Select entry).

 Press the Talk key. The number is dialed.

### Managing directory/Quick list entries

#### Viewing entries

 /  →  (Select entry).

**View** Press the Display key. The entry is displayed.

**Options** Press the Display key.

The following functions can be selected with :

#### Display Number

To edit or add to a saved number, or to save it as a new entry, press  after the number is displayed.

#### Delete Entry

Delete selected entry.

#### Copy Entry

**to Internal:** Send a single entry to a handset (→ page 31).

**vCard via Bluetooth:** Send a single entry in vCard format using Bluetooth.

#### Editing entries

 /  →  (Select entry).

**View** **Edit** Press the Display keys one after the other.

▶ Carry out changes and save.

#### Using other functions

 /  →  (Select entry)

→ **Options** (Open menu)

The following functions can be selected with :

#### Display Number

Save or modify a saved number, and then dial with  or save as a new entry; to do so, press  after the number appears on the display.

#### Edit Entry

Edit selected entry.

**Delete Entry**

Delete selected entry.

**Copy Entry**

**to Internal:** Send a single entry to a handset ( → page 31).

**vCard via Bluetooth:** Send a single entry in vCard format using Bluetooth.

**Delete All**

Delete **all** entries in the directory/Quick list.

**Copy All**

**to Internal:** Send the complete list to a handset ( → page 31).

**vCard via Bluetooth:** Send the complete list in vCard format using Bluetooth.

**Available Memory**

Display the available entries in the directory and Quick list ( → page 29).

**Using Quick Dial keys**

- ▶ Press and **hold** the required Quick Dial key ( → page 51).

**Sending the directory/Quick list to another handset****Requirements:**

- ◆ The sending and receiving handsets must both be registered to the same base station.
- ◆ The other handset and the base station can send and receive directory entries.

 /  →  (Select entry)  
→ **Options** (Open menu) → **Copy Entry / Copy All** → **to Internal**

 Select the internal number of the receiving handset and press **OK**.

You can transfer several individual entries one after the other by responding **Yes** to the **Entry copied - Copy next entry?** prompt.

A successful transfer is confirmed by a message and confirmation tone on the receiving handset.

**Please note:**

- ◆ Entries with identical numbers are not overwritten on the receiving handset.
- ◆ The transfer is canceled if the phone rings or if the memory of the receiving handset is full.
- ◆ Anniversary reminders, pictures, and sounds entered are not sent.

**Transferring the directory as a vCard with Bluetooth**

In Bluetooth mode ( → page 50), you can transfer directory entries in vCard format (e.g., to exchange entries with your mobile phone).

 →  (Select entry) → **Options** (Open menu) → **Copy Entry / Copy All** → **vCard via Bluetooth**

The list of "Known Devices" ( → page 50) is displayed.

 Select device and press **OK**.

**Receiving a vCard with Bluetooth**

If a device from the "Known Devices" list ( → page 50) sends a vCard to your handset, this takes place automatically. You are informed about it on the display.

If the sending device does not appear in the list, you will be asked on the display to enter the device PIN for the sending device:

 Enter the PIN for the **sending** Bluetooth device and press **OK**.

The transferred vCard is available as a directory entry.

## Using the directory and lists

### Copying a displayed number to the directory

Numbers displayed in a list (e.g., the Call lists or the Last Number Redial list), or during a call can be copied to the directory.

If you have CNIP, the first 16 characters of the transmitted name are also copied to the **Last Name** line.

A number is displayed:

**Options** → **Copy to Directory**

▶ Complete the entry → page 29.

Gigaset SL785: Message playback is interrupted while transferring the number from the Answering Machine list.

### Copying a number or e-mail address from the directory

In some situations, you can open the directory to copy a number or e-mail address, for example. Your handset does not have to be in idle status.

▶ Depending on the situation, open the directory with  or .

 Select entry (→ page 30).

### Saving an anniversary in the directory

For each number in the directory, you can save an anniversary and specify a time at which a reminder call should be made on the anniversary (default setting: **Anniversary: Off**).

Anniversaries are automatically recorded in the calendar (→ page 42).

 →  (Select entry)

**View** **Edit** Press the Display keys one after the other.

 Scroll to the Anniversary line.

 Select **On**.

▶ Change multiple-line input:

**Anniversary (Date)**

Enter month/day/year in 8-digit format.

**Anniversary (Time)**

Enter the hour/minute for the reminder call in 4-digit format.

**Anniversary (Signal)**

Select the type of signal for the reminder.

**Save** Press the Display key.

#### Please note

A time must be specified for reminder calls. If you select a visual signal, a time is not required and is automatically set to 00.00.

### Deactivating anniversaries

 →  (Select entry)

**View** **Edit** Press the Display keys one after the other.

 Scroll to the Anniversary line.

 Select **Off**.

**Save** Press the Display key.

### Reminder call on an anniversary

**In idle status**, a reminder call is shown on the display of the handset (→ page 2) and signaled with the selected ringer.

You can:

**Off** Press the Display key to acknowledge and end the reminder call.

**When you are on the phone**, a reminder call is indicated on the handset with a **single** advisory tone.

Anniversaries that are indicated during a call and that are elapsed are entered in the **Missed Alarms** list (→ page 44).

## Last Number Redial list

The Last Number Redial list contains the twenty numbers last dialed with the handset (max. 32 digits). If a number is in the directory or the Quick list, then the appropriate name will be displayed.

### Manual last number redial

-  Press the key **briefly**.
-  Select entry.
-  Press the Talk key again.  
The number is dialed.

When a name is displayed, you can display the corresponding phone number by pressing the Display key **View**.

### Managing entries in the Last Number Redial list

-  Press the key **briefly**.
-  Select entry.
- Options** Open menu.

The following functions can be selected with :

#### Copy to Directory

Copy an entry to the directory (page 29).

**Display Number** (as in the directory, page 30)

**Delete Entry** (as in the directory, page 31)

**Delete All** (as in the directory, page 31)

## Answering Machine list (Gigaset SL785 only)

You can use the **Answering Machine list** to listen to the messages that are on the answering machine.

## Call lists

**Requirement:** Caller ID (CIP, page 27)

Your telephone stores various types of calls:

- ◆ Answered calls
- ◆ Outgoing calls
- ◆ Missed calls
- ◆ Calls recorded by the answering machine (Gigaset SL785 only)

You can view each type of call separately or see an overview of all calls. Each call record contains the last 20 numbers in its category.

When in idle status, open the Call lists by selecting the **Calls** Display key or using the menu:



### List entry

New messages are displayed at the top.

Example of list entries:



- ◆ List type (in header)
- ◆ Status of entry
  - Bold:** New entry
- ◆ Number or name of caller
- ◆ Date and time of call (if set, page 14)
- ◆ Type of entry:
  - Accepted calls (  )
  - Missed calls (  )
  - Outgoing calls (  )
  - Calls recorded by the answering machine ( , Gigaset SL785 only)

## Using the directory and lists

Select the **View** Display key to access additional information, including, for example, the number linked with the name. If you have CNIP, then the name and town registered with your network provider for the calling number will be displayed. If the name and town are not shown, it means that the caller has not requested caller ID or that caller ID has been withheld.

Select the **Options** Display key to choose the following options:

### Copy to Directory

Copy a displayed number to the directory.

### Delete Entry

Delete selected entry.

### Delete All

Delete all entries.

When you quit the Call lists, all entries are set to the status "old," meaning the next time you open the list, they will no longer be shown in bold.

## Opening lists with the Message key

You can use the Message key  to open the following list selection:

- ◆ Answering Machine list Network Mailbox, if your network provider supports this function and Fast Access is set for the network mailbox (→ page 41).
- ◆ List of missed calls
- ◆ List of missed appointments (→ page 44)

An advisory tone sounds as soon as a **new message** arrives in a list. The  key flashes (it goes off when the key is pressed). In **idle status**, the display shows an icon for the new message:

Icon	New message...
	... in the Answering Machine list or on the network mailbox
	... in the <b>Missed Call</b> lists
	... in the <b>Missed Alarms</b> list

The number of new entries is displayed to the right of the corresponding icon.



### Please note

If calls are saved in the network mailbox, you will receive a message if the appropriate settings have been made (see your network provider user guide).

## List selection

The lists displayed after pressing the Message key  depend on whether there are any new messages.

- ◆  **key does not flash (no new messages):** All the lists containing messages and the Network Mailbox list are displayed.
- ◆  **key flashes (new messages received):** You see all the lists containing **new** messages. If only one list contains new messages, it will be opened automatically.

Lists containing new messages are at the top of the list and are marked in bold font.



Select a list with . To open, press **OK**.

## Making cost-effective calls

---

Sign up with a network provider that offers significantly low-cost call rates. You can manage the numbers in the Quick list.

## Linking Quick list numbers with one number

---

You can insert the dialing code of a network provider ahead of the number ("linking").



Open Quick list.



Select entry (Quick list number).

### Options

Press the Display key.

### Display Number

Select and press **OK**.



Enter number or select number from the directory (→ page 32).



Press the Talk key. Both numbers are dialed.

## Operating the answering machine on the Gigaset SL785 base station

# Operating the answering machine on the Gigaset SL785 base station

You can access the answering machine using the handset or by remote operation (from another telephone/mobile phone). You can record your own announcement or advisory message using the handset.

### Answering machine mode

You can use the answering machine in two different modes.

- ◆ In **Answer & Record** mode, the caller hears the announcement and can then leave a message.
- ◆ In **Answer only** mode, the caller hears your announcement but cannot leave a message.

### Operation using the handset

The handset loudspeaker activates **automatically** if you receive an acoustic prompt or message while operating. You can switch it off with the Handsfree key .

### Activating/deactivating and setting the answering machine mode

You can choose between **Answer & Record**, **Answer only** and **Alternating**. By using the **Alternating** setting, you can activate the answer and record mode for a set period; outside this period the caller will hear the advisory message.

 →  → **Activation** (✓ = on)

**Edit** Press the Display key.

- ▶ Change multiple-line input:

#### Activation:

Select **On** or **Off** to activate/deactivate the answering machine.

#### Mode:

Select **Answer & Record**, **Answer only** or **Alternating**.

If the **Alternating** mode is selected:

#### Record from:

Using 4-digit format, enter hours/minutes for the start of the period.

(The time **must** be set on the phone beforehand.)

#### Record until:

Using 4-digit format, enter hours/minutes for the end of the period.

**Save** Press the Display key.

When you switch the answering machine on, the remaining memory time is announced. If the time has not yet been set, an appropriate announcement is made (Set time → page 14). The **ALO** icon appears in the display.

The phone is supplied with prerecorded announcements for the answer and record mode and for answer-only mode. If a personal announcement has not been recorded, the relevant prerecorded announcement is used.

If the message memory is full and **Activation: On** has been selected, saving is interrupted, and you will receive an instruction to delete old messages.

### Recording a personal announcement/advisory message

 →  → **Announcements** → **Record Announcement** / **Record Advisory Msg**.

**OK** Press the Display key to start the recording.

You hear the ready tone (short tone).

- ▶ Now say your announcement (at least 3 secs.).

**End** Press the Display key to end the recording.

Cancel recording with  or **Back**. Restart the recording with **OK**.

## Operating the answering machine on the Gigaset SL785 base station

After recording, the announcement is played back for you to check. You can rerecord the announcement with **New**.

### Please note:

- ◆ Recording ends automatically if the maximum recording time of 170 seconds is exceeded or there is a break in speech for more than 2 seconds.
- ◆ If you cancel the recording, the prerecorded announcement will be used again.
- ◆ If the answering machine's memory is full, it will switch to **Answer only** mode.
  - ▶ Delete old messages and the answering machine will automatically switch back to **Answer & Record** mode. Repeat recording if required.

### Playing back announcements

 →  → **Announcements** → **Play Announcement / Play Advisory Message**

If you have not recorded a personal announcement, the relevant prerecorded announcement is played.

Record a new announcement while playing back the announcement:

**New** Press the Display key.

If the answering machine's memory is full, it will switch to **Answer only** mode.

- ▶ Delete old messages and the answering machine will automatically switch back to **Answer & Record** mode. Repeat recording if required.

### Deleting announcements/advisory messages

 →  → **Announcements** → **Delete Announcemnt. / Delete Advisory Msg.**

**Yes** Press the Display key to confirm the prompt.

Once you have deleted your announcement, the relevant prerecorded announcement will be used again.

### Playing back messages

The date and time of each message is logged (provided this has been set → page 14) and displayed during the playback. If caller ID is activated, the caller's number or name is displayed. If the caller's number is saved in the directory, the caller's name is displayed.

### Playing back new messages

New messages that have not yet been played back are indicated by the **OO** symbol in the second display line and by the  key flashing on the handset.

 Press the Message key.

**Answer Machine: (Answering Machine)**  
Select and press **OK**.

If there are new messages, playback then begins with the first new message. After the last new message, you will hear the end tone and an announcement about how much recording time remains.

If the message has been saved with the date and time, you will hear an appropriate announcement before playback begins.

### Playing back old messages

You can listen to old message if there are no more new messages. Begin playback as described under "Playing back new messages."

After the entry time and date have been played back (approx. 3 seconds), a new message assumes the status "old."

### Stopping and controlling playback

During message playback:


 Pause playback. Press  again to resume.

**Or**

**Options** Open menu.


**Pause** Select and press **OK**.  
To continue, select **Continue** and press **OK**.

## Operating the answering machine on the Gigaset SL785 base station

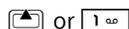

Go to the start of the current message.

**Press twice** to go back to the previous message.

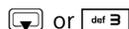

Skip to next message.

**Press twice** to skip to the message after next.

If playback is interrupted for over a minute, the answering machine returns to idle status.

### Marking a message as "new"

A previously played back "old" message is displayed as a "new" message again.

#### During message playback:

Press the Asterisk key.

**Or:**

Open menu.

#### Mark as New

Select and press .

An announcement informs you of the message's new status.

Playback of the current message is canceled. Playback of next message starts, if applicable.

The key on the handset flashes.

### Copying the phone number of a message to the directory

During playback or pause:

→ **Copy to Directory**

▶ Complete the entry → page 32.

### Deleting messages

You can either delete all old messages together or individually.

#### Deleting all old messages

During playback or pause:

→ **Delete Old List**

Press the Display key to confirm the prompt.

Press the Display key to confirm the prompt.

### Deleting individual old messages

During playback or pause:

Press the Display key.

### Answering a call from the answering machine

You can answer a call while the answering machine is recording or being operated through remote operation:

/

Press the Talk or Display key.

Recording stops, and you can speak to the caller.

If 2 seconds of the call have already been recorded when you answer, the call will be displayed as a new message. The key on the handset flashes.

You can answer the call even if it is not signaled on the handset.

### Diverting an external call to the answering machine

You can divert an incoming external call to the answering machine even if it is deactivated.

**Requirement:** Sufficient memory space is available on the answering machine.

An external call is signaled on the handset:

Select Display key.

The answering machine immediately starts in recording mode and records the call. The set time for the call acceptance (→ page 39) is ignored.

## Operating the answering machine on the Gigaset SL785 base station

### Activating/deactivating two-way record

You can record an **external** call with the answering machine.

- ▶ Inform the caller that the call is being recorded.

**Options** Open menu.

#### Two-way Record

Select and press **OK**.

Two-way record is indicated on the display by an advisory text and is added to the Answering Machine list as a new message.

**End** Press the Display key to stop two-way record.

The maximum recording time depends on the memory available on the answering machine. If the memory is full, you will hear an end tone, the recording is aborted, and the call recorded up to that point is listed in the Answering Machine list as a new message.

### Activating/deactivating call screening

While a message is being recorded, you can screen a call through the loudspeaker of registered handsets.

#### Permanently activating/deactivating call screening

 →  → **Call Screening** (☑ = on)

**Change** Select Display key to activate/deactivate the function.

#### Deactivating call screening for the current recording

You can switch off the function on the handset during the recording.

**Silence** Press the Display key.

### Setting the recording parameters

The answering machine has already been preset at the factory. Use the handset to make individual settings.

 →  → **Recordings**

- ▶ Change multiple-line input:

**Length:**

Select maximum recording time:  
**1 Min., 2 Min., 3 Min. or Maximum.**

**Quality:**

Select recording quality **Long Play, High** or **Excellent**. If the quality is higher, the maximum recording time is reduced.

**Ring Delay:**

Select when the answering machine should accept a call:  
**Immediately, after 10 sec., 18 sec., 30 sec.**  
or **Auto**.

**Save** Press the Display key.

#### Information about call acceptance

In **Auto** mode, the following applies to call acceptance:

- ◆ If there are no new messages, the answering machine answers a call after 18 seconds.
- ◆ If new messages are present, the answering machine answers a call after 10 seconds.

When operating remotely ( → page 40), you can tell after approx. 15 seconds that there are no new messages (otherwise the answering machine would already have accepted your call). There will be no call charges if you hang up at this point.

## Operating the answering machine on the Gigaset SL785 base station

### Changing the language for voice prompt and prerecorded announcement

-  Open the main menu.
-     Oper     
- Enter digits **and** press
-   To set English.
-   To set French.
-   To set Spanish.

### Resetting fast access for the answering machine using key 1

By default, key  has been assigned to Fast Access to the integrated answering machine. However, if you have set the network mailbox for Fast Access (→ page 41), you can reset this setting.

 →  → **Set Key 1**

#### Answering Machine

Select and press .

Once you have selected the answering machine, press and **hold** key . You will be connected directly.

The setting for Fast Access applies to all registered handsets.

### Operating when on the move (remote operation)

You can check and activate your answering machine from any other telephone (hotel, pay phone, etc.).

#### Requirements:

- ◆ You have set a system PIN other than 0000 (→ page 56).
- ◆ The phone you are using for remote operation has touch-tone dialing (DTMF), meaning you hear different tones when you press the keys. Alternatively, you can use a code transmitter (available from your mobile phone retailer).

### Calling the answering machine and playing back messages



Dial your own number.

When you hear your announcement, press , and enter the system PIN.

You will be informed whether any new messages have been recorded. The messages are now played back. You can now operate the answering machine with the keypad.

The following keys are used for operation:

-  To return to the start of the current message.  
Press twice to go back to the previous message.
-  Stop playback. Press again to resume.
-  Go to the next message.
-  Delete current message.

### Activating the answering machine

- ▶ Phone home and let the phone ring until you hear: "Please enter PIN."



Enter system PIN.

Your answering machine is activated. It tells you how much memory time is left.

The messages are now played back.

The answering machine cannot be deactivated remotely.

## Using the network mailbox

The network mailbox is your network provider's voice mail within the network. You cannot use the network mailbox unless you have **requested** it from your network provider.

## Configuring Fast Access for the network mailbox

With Fast Access, you can dial the network mailbox or the integrated answering machine (Gigaset SL785 only) directly.

Gigaset SL780: Fast access is preset for the network mailbox. You only need to enter the number of the network mailbox.

Gigaset SL785: The integrated answering machine is preset for Fast Access. You can configure the network mailbox instead. Ask your network provider about this.

## Configuring Fast Access for the network mailbox and entering the network mailbox number

 →  → Set Key 1

### Network Mailbox

Select and press **Select**  
(● = selected).



Enter the number for the network mailbox.

**Save**

Press the Display key.

The setting for Fast Access applies to all Gigaset SL78H handsets.

## Calling the network mailbox



Press and **hold**. You are connected straight to the network mailbox.



Press the Handsfree key , if required. You will hear the network mailbox announcement.

## Viewing the network mailbox message

When a message is recorded, you receive a call from the network mailbox. If you have requested caller ID, the network mailbox number will be displayed. If you take the call, the new messages are played back. If you do not take the call, the network mailbox number will be saved in the missed Call lists, and the Message key flashes (→ page 34).

## ECO DECT

### ECO DECT

You are helping to protect the environment with your Gigaset SL780/SL785.

#### Reduced energy consumption

Your telephone has a power-saving adapter plug and uses less power.

#### Reduced transmission power

The transmission power of your telephone is **automatically** reduced depending on the distance to the base station.

You can reduce the transmission power of the handset and base station even further by using Eco mode or Eco Mode+:

##### ◆ Eco mode

80% transmission power reduction in standby and talk mode.

#### Activate/deactivate Eco mode

 → Settings → System → Eco mode

**Change** Press the Display key  
( = on).

#### Status displays

Display icon	
	Reception strength: – Good to poor – No reception

#### Please note

- ◆ Activating **Eco mode** reduces the range of the base station.
- ◆ Eco mode and repeater support (→ page 56) cancel each other out, meaning if you use a repeater, you cannot use Eco mode.

## Setting an appointment (calendar)

You can use your handset to remind yourself of up to thirty appointments. Anniversaries entered in the directory (→ page 32) are automatically recorded in the calendar.

You can select whether the graphical calendar should be displayed in idle status. To do this, select

**Calendar** → **Options** → **Show Cal. in Idle**  
( = display)

Press **Change** to activate/deactivate the function ( = on).

## Saving an appointment

**Requirement:** The date and time have already been set (→ page 14).

 →  → **Calendar**



- ◆ The current date is highlighted in orange.
- ◆ Days on which appointments have already been saved are highlighted in orange.

 /  Select the desired day in the graphical calendar.

The selected day is highlighted in orange. The current date changes to white.

 Press the middle of the Control key.

## Setting an appointment (calendar)

- ◆ If appointments have already been entered, this will open the list of existing appointments on that day. Select <New Entry> → **OK** to open the data input window.
- ◆ If no appointments have been entered, the data input window will open immediately to add the new appointment.
- ▶ Change multiple-line input:

### Appointment:

Select **On** or **Off**.

### Date:

Enter month/day/year in 8-digit format.

### Time:

Enter hours/minutes in 4-digit format.

### Text:

Enter text (max. 16 characters). The text appears as the appointment name in the list and will be displayed on the screen during the appointment reminder. If you do not enter any text, only the date and time of the appointment are displayed.

### Save


Press the Display key.

### Please note

If you have already saved thirty appointments, you will have to first delete an existing appointment before adding a new one.

## Signaling appointments and anniversaries

In idle status, an appointment reminder is signaled with the selected ringer (→ page 53) and will sound for 60 seconds. The entered text, date, and time are displayed.

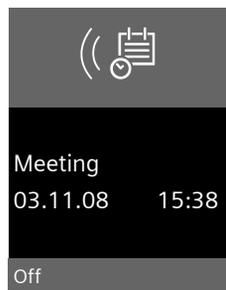

### You can either deactivate an appointment reminder:

#### Off

Press the Display key to deactivate the appointment reminder.

### Please note

During a call, the appointment reminder is signaled by a short tone.

## Managing appointments

→ → **Calendar**



Select a day in the graphical calendar and press the Control key . (Days on which appointments have already been saved are highlighted in orange in the calendar).



Select appointment for the day.

#### Options

Open menu

You have the following options:

#### View Entry

View selected appointment.

Open the **Options** menu for editing, deleting, and activation/deactivation.

#### Edit Entry

Edit selected appointment.

#### Delete Entry

Delete selected appointment.

## Setting the alarm clock

### Activate / Deactivate

Activate/deactivate the selected appointment.

### Delete All

Delete **all** appointments.

## Displaying missed appointments, anniversaries

Missed appointments/anniversaries (→ page 32) are displayed in the **Missed Alarms** list if:

- ◆ You do not accept an appointment/anniversary.
- ◆ The appointment/anniversary was signaled during a phone call.
- ◆ The handset is deactivated at the time of the appointment/anniversary.

The symbol  and the number of **new** entries are shown in the display. The most recent entry is at the head of the list.

Open the list by selecting the **Message key**  (→ page 34) or using the **menu**:

 →  → **Missed Alarms**

Select appointment/anniversary.

Information about the appointment/anniversary is displayed. A missed appointment is displayed with the appointment name, and a missed anniversary is displayed with the last name and first name. The date and time will also be shown.

**Delete** Delete appointment

If 10 entries are already stored in the list, the next appointment reminder will delete the oldest entry.

## Setting the alarm clock

**Requirement:** The date and time have already been set (→ page 14).

### Activating/deactivating the alarm clock and setting the wake-up time

 →  → **Alarm Clock**

▶ Change multiple-line input:

**Activation:**

Select **On** or **Off**.

**Time:**

Enter the wake-up time in 4-digit format.

**Occurrence:**

Select **Daily** or **Monday-Friday**.

**Volume:**

Set the volume (1–6).

**Melody:**

Select melody.

**Save** Press the Display key.

In idle status, the  icon and wake-up time are displayed.

A wake-up call is signaled on the display and with the selected ringer (→ page 2). The wake-up call sounds for 60 seconds. If no key is pressed, the wake-up call is repeated twice at five-minute intervals and then turned off.

During a call, the wake-up call is only signaled by a short tone.

### Deactivating the wake-up call/repeat after a pause (snooze mode)

**Requirement:** A wake-up call is sounding.

**OFF** Press the Display key. The wake-up call is deactivated.

**Or**

**Snooze** Press the Display key or any other key. The wake-up call is deactivated and then repeated after 5 minutes. After the second repetition, the wake-up call is deactivated completely.

## Using several handsets

### Registering handsets

You can register up to six handsets to your base station.

A Gigaset SL78H handset can be registered on up to four base stations.

#### Manually registering the Gigaset SL78H to the Gigaset SL780/SL785

You must activate manual registration of the handset on both the handset and the base station.

Once it has been registered, the handset returns to idle status. The handset's internal number is shown on the display (e.g., INT 1). If not, repeat the procedure.

#### On the handset

The handset must not be registered to a base station.

**Register** Press the Display key.

The handset is already registered to a base station:

 →  → Registration  
→ Register Handset

 Select base station, (e.g., Base 3) and press **OK**.

 If required, enter the system PIN for the base station and press **OK**.

A message displays indicating that a search is in progress for a base station ready for registration.

#### On the base station

Within 60 seconds, press and hold the Registration/Paging key on the base station (→ page 1) (approx. 3 seconds).

### Registering other handsets

You can register other Gigaset handsets and handsets of other devices with GAP functionality as follows:

#### On the handset

- ▶ Start to register the handset as described in its user guide.

#### On the base station

Press and hold the Registration/Paging key on the base station (→ page 1) (approx. 3 sec.).

### Deregistering handsets

You can deregister any other registered handset from any registered Gigaset SL78H handset.

 →  → Registration  
→ De-register Handset

 Select the internal subscriber you wish to deregister and press **OK**.  
(The handset you are currently using is highlighted with <).  
 Enter the current system PIN and press **Save**.

 Enter the current system PIN and press **Save**.

**Yes** Press the Display key.

### Locating a handset ("paging")

You can locate your handset using the base station.

- ▶ **Briefly** press the Registration/Paging key on the base station (→ page 1).
- ▶ All handsets will ring simultaneously ("paging"), even if the ringers are deactivated.

#### Ending paging

- ▶ **Briefly** press the Registration/Paging key on the base station or press the Talk key  on the handset.

## Using several handsets

### Changing the base station

If your handset is registered to more than one base station, you can set it to a particular base station or to the base station that has the best reception (**Best Base**).

 →  → **Registration** → **Select Base**

 Select one of the registered base stations or **Best Base**, and press **Select**.

### Making internal calls

Internal calls to other handsets registered to the same base station are free of charge.

#### Calling a specific handset

 Initiate internal call.  
 Enter the number of the handset.

Or:

 Initiate internal call.  
 Select handset.  
 Press the Talk key.

#### Calling all handsets ("group call")

 Initiate internal call.  
 Press the Asterisk key.  
 Or

**Call All** Select menu option and

 Press the Talk key.

All handsets are called.

#### Ending a call

 Press the End Call key.

### Transferring a call to another handset

You can transfer an external call to another handset (connect).

 Open the list of handsets.  
 The external party hears hold music if activated  
 (→ page 56).

 Select a handset or **Call All** and press **OK**.

When the internal party answers:

▶ If necessary announce the external call.

 Press the End Call key.

The external call is transferred to the other handset.

If the internal party does **not** answer or the line is busy, press the Display key **End** to return to the external call.

When transferring a call, you can also press the End Call key  before the internal party answers.

Then, if the internal party does not answer or the line is busy, the call will automatically return to you.

### Internal consultation/conference calls

When you are conducting an **external** call, you can call an **internal** party at the same time for consultation, or hold a conference call between all 3 parties.

You are conducting an **external** call:

 Open the list of handsets.  
 The external party hears hold music if activated  
 (→ page 56).

 Select handset and press **OK**.  
 You are connected to the internal party.

Either:

**End** Press the Display key.  
 You are reconnected with the external subscriber.

Or:

**Conf.** Press the Display key.  
 All 3 parties are connected to each other.

#### Ending a conference call

 Press the End Call key.

If an **internal** party presses the End Call key , the other handset remains connected to the external party.

## Accepting/rejecting call waiting

If you receive an **external** call during an **internal** call, you will hear the call waiting tone (short tone). The caller's number or name will appear in the display if caller ID is enabled.

### Ending an internal call, accepting an external call

**Accept** Press the Display key.

The internal call is **ended**. You are connected to the external caller.

### Rejecting the external call

**Reject** Press the Display key.

The call waiting tone is turned off. You remain connected to the internal participant. The ringer can still be heard on other registered handsets.

## Listening in to an external call

**Requirement:** The Listening In function must be activated.

You are conducting an external call. An internal party can listen in on this call and take part in the conversation. All the participants are made aware of the "listening in" by a signal tone.

### Activating/deactivating listening in

 →  → **Telephony** → **Listening In**

Press **Change** to activate/deactivate the function ( = on).

### Internal listening in

The line is busy with an external call. Your screen will display information to that effect. You want to listen in to the external call.

 Press and **hold** the Talk key.

You can listen in to the call. All parties hear a signal tone. During this time, this handset displays the **Conference** message, and it is not possible to dial another number from this handset.

### Ending listening in

 Press the End Call key.

All parties hear a signal tone.

If the **first** internal party presses the End Call key , the handset that has "listened in" remains connected to the external party.

## Changing the name of a handset

The names "INT 1", "INT 2," and so on, are assigned automatically at registration.

You can change these names. The name must be no more than 10 characters. The changed name is displayed in every handset's list.

 Open the list of handsets. Your own handset is indicated by ◀.

 Select handset.

**Options** Open menu.

**Rename**

 Enter name.

**Save** Press the Display key.

## Changing a handset's internal number

A handset is **automatically** assigned the lowest free number when it is registered. If all slots are occupied, number 6 is overwritten if the handset is in idle status. You can change the internal number of all registered handsets (1–6).

 Open the list of handsets. Your own handset is indicated by ◀.

**Options** Open menu.

**Assign Handset No.**

Select and press **OK**.

 Select number. Only numbers that have not been assigned are displayed.

**Save** Press the Display key to save the input.

## Using a handset as a room monitor

### Using a handset as a room monitor

If the room monitor is activated, a previously saved destination number is called as soon as a set noise level is reached. You can save an internal or external number in your handset as the destination number. All of the handset keys are deactivated, with the exception of the Display keys.

The room monitor call to an external number stops after around 90 seconds. The room monitor call to an internal number (handset) stops after approx. 3 minutes (depending on the base station). When the room monitor is activated, all keys are locked except the End Call key. The handset's speaker is muted.

When the room monitor is activated, incoming calls to the handset are indicated **without a ringer** and are only shown on the screen. The display and keypad are not illuminated and advisory tones are also turned off.

If you accept an incoming call, the room monitor is suspended for the duration of the call, but the function **remains** activated.

If you deactivate then reactivate the handset, the room monitor remains activated.

#### Warning!

- ◆ You should always check the operation of the room monitor before use. For example, test its sensitivity. Check the connection if you are forwarding the room monitor to an outside number.
- ◆ When the function is switched on, the handset's operating time is considerably reduced. If necessary, place the handset in the charging cradle. This ensures that the battery does not drain.
- ◆ Ideally, the handset should be positioned 1 to 2 meters (3 to 6 feet) away from the baby. The microphone must be directed toward the baby.
- ◆ The connection to which the room monitor is forwarded must not be blocked by an activated voice mail.

### Activating the room monitor and entering the destination number

 →  → Room Monitor

- ▶ Change multiple-line input:

#### Activation:

Select **On** to activate.

#### Alarm to:

Select **Internal** or **External**.

**External number:** Select the number from the directory (press Display key ) or enter it directly.

**Internal number:** Select Display key **Change** → Select handset or **Call All** if you want to call all registered handsets → **OK**.

In idle status, the destination number or the internal destination number is displayed.

#### Sensitivity:

Select noise level sensitivity (**Low** or **High**).

- ▶ Press **Save** to save the settings.

## Using Bluetooth devices

When the room monitor function is activated, the idle display appears as shown below:



### Changing the set destination number

→ → Room Monitor

- ▶ Enter and save number as described in "Activating the room monitor and entering the destination number" (→ page 48).

### Cancel/deactivate room monitor

Press the End Call key to cancel the call when the **room monitor is activated**.

**In the idle status**, press the Display key **OFF** to deactivate the room monitor mode.

### Deactivating the room monitor remotely

**Requirements:** The phone must support touch-tone dialing and the room monitor should be set for an external destination number.

- ▶ Accept the call from the room monitor and press keys .

The room monitor function will deactivate after the call ends. There will be no further room monitor calls. The other room monitor settings (e.g., no ringer) on the handset will remain activated until you press the Display key **OFF** on the handset.

To reactivate the room function with the same phone number:

- ▶ Turn on the activation again and save with **Save** (→ page 48).

## Using Bluetooth devices

Your Gigaset SL78H handset can communicate wirelessly with other devices using Bluetooth™ technology.

Before you can use your Bluetooth devices, you must first activate Bluetooth and then register the devices to the handset.

You can register one Bluetooth headset to the handset. You can also register up to 5 data devices (PC, PDA) to send and receive directory entries as vCards or exchange data with the computer (→ page 62).

To use the phone numbers, dialing codes (country and area code) must be stored in the directory (→ page 55).

You will find a description of how to operate your Bluetooth devices in the user guides for these devices.

#### Please note

- ◆ On your handset, you can operate headsets that have the **headset** or **handsfree profile**. If both profiles are available, the handsfree profile will be used to communicate.
- ◆ It can take up to 5 seconds to create a connection between your handset and a Bluetooth headset. This applies both when a call is accepted using the headset or transferred to the headset, and when a number is dialed from the headset.

## Using Bluetooth devices

### Activating/deactivating Bluetooth mode

 →  → Activation

Press **Change** to activate or deactivate Bluetooth mode ( = activated).

In idle status, the  icon on the handset shows that Bluetooth mode is activated (→ page 2):

### Registering Bluetooth devices

The distance between the handset in Bluetooth mode and the activated Bluetooth device (headset or data device) should be no more than 33 feet (10 m).

#### Please note

- ◆ If you register a headset, any headset that is already registered will be overwritten.
- ◆ If you would like to use a headset with a handset that is already registered to another device (e.g., to a mobile phone), please **deactivate** the connection before you start the registration process to the Gigaset.

 →  → Search for Headset / Search for DataDevice

The search can take up to 30 seconds.

Once the device has been found, its name will be shown on the display.

**Options** Press the Display key.

**Trust Device** Select and press **OK**.



Enter the PIN for the Bluetooth device you want to **register** and press **OK**.

The device is saved in the list of known devices.

### Canceling/repeating current search

To cancel search:

**Cancel** Press the Display key.

Repeat search, if necessary:

**Options** Press the Display key.

**Repeat Search**

Select and press **OK**.

### Editing the list of known (trusted) devices

#### Open list

 →  → Known Devices

A corresponding icon appears next to each device name in the list displayed:

Icon	Meaning
	Bluetooth headset
	Bluetooth data device

If a device is connected, the corresponding symbol  is shown in the header of the display.

#### Viewing entries

Open list →  (select entry)

**Options** Press the Display key.

**View Entry** Select and press **OK**.

Device name and address are displayed.

Back with **OK**.

#### Deregistering Bluetooth devices

Open list →  (select entry)

**Options** Press the Display key.

**Delete Entry** Select and press **OK**.

#### Please note

If you deregister an activated Bluetooth device, it may try to reconnect as an "unregistered device."

## Changing the name of a Bluetooth device

Open list →  (select entry)

**Options** Press the Display key.

**Edit Name** Select and press **OK**.



Change the name.

**Save** Press the Display key

## Rejecting/accepting an unregistered Bluetooth device

If a Bluetooth device that is not registered in the list of known devices tries to connect to the handset, you will be prompted on the display to enter the PIN for the Bluetooth device (bonding).

### ◆ Reject

**Back** Press the Display key.

### ◆ Accept



Enter the PIN for the Bluetooth device you want to **accept** and press **OK**.

If you have accepted the device, you can use it temporarily (meaning as long as it is within range or until you deactivate the handset) or save it to the list of known devices.

Once the PIN has been confirmed, save to the list of known devices:

- **Yes** Press the Display key.
- **No** Press the Display key:  
Use temporarily.

## Changing the Bluetooth name of the handset

You can change the name used to identify the handset on the display of another Bluetooth device.

 →  → **Own Device**

**Change** Press the Display key



Change the name.

**Save** Press the Display key

## Handset settings

Your handset is preconfigured, but you can change the settings to suit your individual requirements.

## Quick access to functions and numbers

You can assign a number or a function to each of the Digit keys  and  to .

The left and right Display keys have a function preselected by default. You can change the assignment (→ page 52).

The number is then dialed or the function started by simply pressing a key.

## Assigning Digit keys

**Requirement:** You have not yet assigned a number or function to the Digit key.

- ▶ Press and **hold** the Digit key.

The list of possible key assignments is opened. The following can be selected:

### Quick Dial / Quick list

Assign key to a number from the directory or Quick list.

The directory or Quick list is opened.

- ▶ Select an entry and press **OK**.

If you delete or edit an entry in the directory or Quick list, there is no effect on the assignment to the Digit/Display key.

### Room Monitor

Assign menu for setting and activating the room monitor to a key (→ page 48).

### Alarm Clock

Assign menu for setting and activating the alarm clock to a key (→ page 44).

### Calendar

Open calendar/enter new appointment.

## Handset settings

### Bluetooth

Assign the Bluetooth menu to a key.

### Redial

Display the Last Number Redial list.

### INT

Internal calls (→ page 46).

## Starting the function, dialing the number

Press and **hold** the Digit key while in handset idle status, or **briefly** press the Display key.

Depending on the key assignment:

- ◆ Numbers are dialed directly.
- ◆ The function menu is opened.

## Changing key assignments

### Display key

- ▶ Press and **hold** the left or right Display key.

The list of possible key assignments is opened.

- ▶ Proceed as described when first assigning the Digit key (→ page 51).

Using the Display key, the selected function or name of the phone number in the directory or Quick list is displayed (abbreviated if necessary) on the bottom display line.

### Digit key

- ▶ **Briefly** press the Digit key.

**Change** Press the Display key. The list of possible key assignments is displayed.

- ▶ Proceed as described when first assigning the key as a Quick Dial (→ page 51).

## Changing the display language

You can view the display texts in different languages.

 →  → Language

The current language is indicated by a .

 Select language and press **Select**.

If you accidentally choose a language you do not understand:

 →  →  →  →   
Press keys in sequence and confirm by selecting **OK**.

 Select the correct language and press **Select**.

## Setting the display

### Setting the screensaver

In idle status, the clock can be displayed as a screensaver. This will replace the idle status display. It may conceal the calendar, date, time, and name.

The screensaver is not displayed in certain situations, for example, during a call or if the handset is deregistered.

If a screensaver is activated, the **Screen-saver** menu option is marked with .

 →  → Display → Screensaver

The current setting is displayed.

- ▶ Change multiple-line input:

#### Activation:

Select **On** (screensaver is displayed) or **Off** (no screensaver).

#### Selection:

Select screensaver **or**

**View** Press the Display key.  
The active screensaver is displayed.

 Select screensaver and press **OK**.

**Save** Press the Display key.

When the screensaver conceals the display, **briefly** press  to show the idle display.

## Setting the display backlight

Depending on whether or not the handset is in the charging cradle, you can activate or deactivate the backlight. If it is activated, the display is permanently dimmed.

 →  → **Display** → **Backlight**

The current setting is displayed.

▶ Change multiple-line input:

**In Charger**

Select **On** or **Off**.

**Out of Charger**

Select **On** or **Off**.

### Please note

With the **On** setting, the standby time of the handset can be significantly reduced.

**Save** Press the Display key.

## Activating/deactivating auto answer

If you activate this function, you can simply answer a call by lifting the handset out of the charging cradle, without having to press the Talk key .

 →  → **Telephony** → **Auto Answer**

**Change** Press Display key ( = on).

## Changing the handsfree/earpiece volume

You can set the loudspeaker volume for handsfree talking and the earpiece volume to five different levels.

In idle status:

 → **Handset Volume**

 Set the earpiece volume.



Scroll to the **Speaker** line.



Set the handsfree volume.

**Save**

Press the Display key, if necessary, to save the setting permanently.

Setting the volume during a call:



Press the Control key.



Select volume.

The setting will automatically be saved after approx. 3 seconds; if not, press the Display key **Save**.

If  is assigned to another function:

**Options** Open menu.

**Volume** Select and press **OK**.

Configure setting (see above).

### Please note

You can also set the call volume, ringers, and advisory tones through the menu (→ page 25).

## Changing ringers

◆ **Volume:**

You can choose between five volumes (1–5; e.g., volume 3 = ) and the "crescendo" ringer (6; volume increases with each ring =  ▲).

◆ **Ringers:**

You can select a ringer from a list of preloaded ringers.

You can set different ringers for the following functions:

◆ **Ext. Calls:** For external calls

◆ **Internal Calls:** For internal calls

◆ **Appointments:** For set appointments (→ page 42)

◆ **All:** The same ringer for all functions

## Handset settings

### Settings for individual functions

Set the volume and melody depending on the type of signaling required.

In idle status:

-  → **Ringer Settings**
-  Select setting (e.g., Ext. Calls) and press **OK**.
-  Set volume (1–6).
-  Scroll to the next line.
-  Select melody.
- Save** Press the Display key to save the setting.

#### Additionally for external calls:

Once you have selected the melody, you can specify a time period when you do not want the telephone to ring (e.g., during the night).

#### Time Control:

Select **On** or **Off**.

#### Suspend ringing from:

In 4-digit format, enter the start of the period.

#### Suspend ringing until:

In 4-digit format, enter the end of the period.

#### Please note

During this period, you will continue to receive calls from numbers to which you have assigned a personalized melody in the directory (VIP).

### Same ringer for all functions

In idle status:

-  → **Ringer Settings** → **All**
- ▶ Set volume and ringer (see "Settings for individual functions").
- Save** Press the Display key.
- Yes** Confirm the prompt to save your settings.

#### Please note

You can also set the call volume, ringers, and advisory tones through the menu (→ page 25).

### Activating/deactivating the ringer

You can deactivate the ringer on your handset before you answer a call or when the handset is in idle status; the ringer can be deactivated permanently or just for the current call. The ringer cannot be reactivated while an external call is in progress.

#### Deactivating the ringer permanently

-  Press and **hold** the Asterisk key.

The  icon appears in the display.

#### Reactivating the ringer

-  Press and **hold** the Asterisk key.

#### Deactivating the ringer for the current call

- Silence** Press the Display key.

### Activating/deactivating the alert tone

In place of the ringer, you can activate an alert tone. When you get a call, you will hear a **short tone** ("Beep") instead of the ringer.

-  Press and **hold** the Asterisk key, and **within 3 seconds:**

- Beep** Press the Display key. A call will now be signaled by **one** short alert tone.
- The  icon appears in the display.

## Activating/deactivating advisory tones

Your handset uses advisory tones to tell you about different activities and statuses. The following advisory tones can be activated/deactivated independently of each other:

- ◆ **Key click:** Every key press is confirmed.
- ◆ **Acknowledgment tones:**
  - **Confirmation tone** (ascending tone sequence): At the end of an entry/setting and when a new entry arrives in the Answering Machine list or Call lists
  - **Error tone** (descending tone sequence): When you make an incorrect entry
  - **Menu end tone:** When scrolling to the end of a menu
- ◆ **Battery low beep:** The battery requires charging.

In idle status:

 → **Advisory Tones**

▶ Change multiple-line input:

**Key Tones:**

Select **On** or **Off**.

**Confirmation:**

Select **On** or **Off**.

**Battery:**

Select **On**, **Off** or **In Call**. The battery warning tone is activated/deactivated and only sounds during a call.

 Press the Display key.

### Please note

You can also set the call volume, ringers, and advisory tones through the menu (→ page 25).

## Setting your own area code

To transfer phone numbers (e.g., in vCards), it is essential that your area code (international and local area code) is saved on the phone.

Some of these numbers are already pre-set.

 →  → **Telephony** → **Area Codes**

Check that the (pre)set area code is correct.

▶ Change multiple-line input:

 Select/change input field.

 Navigate in the input field.

 If necessary, delete number: press the Display key.

 Enter number.

 Press the Display key.

**Example:**



## Restoring the handset default settings

You can reset individual settings and changes that you have made.

The following settings are **not** affected by a reset

- ◆ Registration to the base station
- ◆ Date and time
- ◆ Entries in the calendar
- ◆ Entries in the directory, Quick list, Call lists

 →  → **Reset** → **Handset Reset**

 Press the Display key.

## Base station settings

### Base station settings

The base station settings are carried out using a registered Gigaset SL78H handset.

### Protecting against unauthorized access

Protect the system settings of the base station with a PIN known only to you. The system PIN must be entered when, for example, registering/deregistering a handset to/from the base station or when restoring the default settings.

### Changing the system PIN

You can change the 4-digit system PIN preset on the base station (default setting: 0000) to a 4-digit PIN known only by you.

Gigaset SL785: Setting a system PIN facilitates remote operation of the answering machine → page 40.

 →  → **System** → **System PIN**



Enter the current system PIN and press **OK**.



Enter your new system PIN and press **OK**.

### Resetting the system PIN

If you have forgotten your system PIN, you can reset the base station to the original code 0000:

Disconnect the power cord from the base station. Hold down the Registration/Paging key on the base station while reconnecting the power cable to the base station. Release the key after a while.

The base station has now been reset, and the system PIN 0000 set.

#### Please note

All handsets are deregistered and must be reregistered.

### Activating/deactivating music on hold

 →  → **Audio Settings**  
→ **Music on Hold**

Press **Change** to activate or deactivate the music on hold ( = on).

### Repeater support

With a repeater, you can increase the range and reception strength of your base station. You must activate repeater mode. This will terminate any calls that are in progress.

**Requirement:** A repeater is registered. Eco mode is deactivated.

 →  → **System** → **Repeater Mode**

Press **Change** to deactivate repeater mode ( = on).

#### Please note

Repeater support and Eco mode (→ page 42) cancel each other out, meaning both functions cannot be used at the same time.

### Restoring the base station to the factory settings

When the settings are restored

- ◆ Date and time will be retained
- ◆ Eco mode is deactivated
- ◆ Handsets are still registered
- ◆ The system PIN is not reset

 →  → **Reset** → **Base Reset**



Enter the system PIN and press **OK**.

**Yes**

Press the Display key.

## Connecting the base station to the PABX

The following settings are only necessary when your PABX requires them; see the PABX user guide.

### Dialing modes and recall

The current setting is indicated by .

### Changing the dialing mode

The following dialing modes can be selected:

◆ Touch-tone dialing (DTMF)

◆ Pulse dialing

 →  → Telephony → Dialing Mode

 Select dialing mode and press **Select** ( = selected).

### Setting recall

Your phone is preset at the factory for operation on the main connection. For operation on a PABX, you may have to change this value. Please refer to the user guide for your PABX.

 →  → Telephony → Recall

 Select recall and press **Select**. ( = set value). Possible values are: 80 ms, 100 ms, 120 ms, 180 ms, 250 ms, 300 ms, 600 ms, 800 ms.

## Setting pauses

### Changing pause after line seizure

You can change the length of the pause inserted between pressing the Talk key  and sending the number.

 Open the main menu.

Press keys.

 Enter digit for the pause length (1 = 1 sec.; 2 = 3 sec.; 3 = 7 sec.) and press **OK**.

### Changing the pause after the Flash key

You can change the length of the pause if your PABX requires this (refer to the user guide for your PABX).

 Open the main menu.

Press keys.

 Enter a digit for the length of the pause (1 = 800 ms; 2 = 1600 ms; 3 = 3200 ms) and press **OK**.

## Switching temporarily to touch-tone dialing (DTMF)

If your PABX still operates with pulse dialing (DP), but you need touch-tone dialing (DTMF) for a connection (e.g., to listen to the network mailbox), you must switch to touch-tone dialing for the call.

**Requirement:** You are conducting a call or have already dialed an external number.

 Press the Asterisk key.

After the call has ended, pulse dialing is automatically reactivated.

## Questions and answers

### Questions and answers

If you have any questions about using your phone, visit us any time at [www.gigaset.com/customer-care](http://www.gigaset.com/customer-care). The table below contains a list of common problems and possible solutions.

<p><b>Registration or connection problems with a Bluetooth headset.</b></p> <ul style="list-style-type: none"> <li>▶ Reset the Bluetooth headset (see the user guide for your headset).</li> <li>▶ Delete registration data from the handset when deregistering the device (→ page 50).</li> <li>▶ Repeat the registration process (→ page 50).</li> </ul>
<p><b>The display is blank.</b></p> <ol style="list-style-type: none"> <li>1. The handset is not switched on.             <ul style="list-style-type: none"> <li>▶ Press and <b>hold</b> the End Call key .</li> </ul> </li> <li>2. The battery is dead.             <ul style="list-style-type: none"> <li>▶ Charge the battery or replace it (→ page 11).</li> </ul> </li> </ol>
<p><b>"No Base" flashes in the display.</b></p> <ol style="list-style-type: none"> <li>1. The handset is outside the range of the base station.             <ul style="list-style-type: none"> <li>▶ Move the handset closer to the base station.</li> </ul> <p>The base station's range is reduced because Eco mode is activated.</p> <ul style="list-style-type: none"> <li>▶ Deactivate Eco mode (→ page 42), or reduce the distance between the handset and the base station.</li> </ul> </li> <li>2. The base station is not turned on.             <ul style="list-style-type: none"> <li>▶ Check the base station's power adapter (→ page 9).</li> </ul> </li> </ol>
<p><b>"Please register handset" flashes in the display.</b></p> <p>Handset has not been registered with the base station or has been deregistered.</p> <ul style="list-style-type: none"> <li>▶ Register the handset (→ page 45).</li> </ul>
<p><b>Handset does not ring.</b></p> <p>The ringer is deactivated.</p> <ul style="list-style-type: none"> <li>▶ Activate the ringer (→ page 54).</li> </ul>

**You cannot hear a ringer/dial tone from the landline network.**

The phone cord supplied has not been used or has been replaced by a new cord with the wrong pin connections.

- ▶ Always use the phone cord supplied, or ensure that the pin connections are correct when purchasing from a retailer (→ page 9).

**Error tone sounds after system PIN prompt.**

You have entered the wrong system PIN.

- ▶ Reset the system PIN to 0000 (→ page 56).

**Forgotten the system PIN.**

- ▶ Reset the system PIN to 0000 (→ page 56).

**The other party cannot hear you.**

You have pressed the **Mute** Display key. The handset is muted.

- ▶ Activate the microphone again (→ page 28).

**The number of the caller is not displayed despite CIP.**

Caller ID is not enabled.

- ▶ **The caller** should ask the network provider to release Caller ID (CI).

**You hear an error tone when keying an input (a descending tone sequence).**

Action has failed/invalid input.

- ▶ Repeat the operation. Watch the display and refer to the user guide, if necessary.

**You cannot listen to messages on the network mailbox.**

Your PABX is set for pulse dialing.

- ▶ Set your PABX to touch-tone dialing.

**Gigaset SL785 only**

**No time is specified for a message in the Call lists.**

- Date and time have not been set.
- ▶ Set the date/time ( → page 14).

**The answering machine announces "PIN is incorrect" during remote operation.**

1. You have entered the wrong system PIN.
  - ▶ Enter the system PIN again.
2. The system PIN is still set to 0000.
  - ▶ Change the system PIN ( → page 56).

**The answering machine is not recording any messages/has switched to answer only.**

- Its memory is full.
- ▶ Delete old messages.
  - ▶ Play back new messages and delete.

**Environment****Our environmental mission statement**

At Gigaset Communications GmbH, we take our social responsibilities very seriously and are actively committed to improving the world we live in. Our ideas, technologies, and actions serve people, society, and the environment. The goal of our activities around the world is to secure sustainable life resources for humanity. Throughout the entire life cycle of each of our products, we are committed to taking a responsible environmental approach. We assess the environmental impact of our products, including their manufacture, procurement, distribution, use, service, and disposal, as early as the product and process design stages.

Further information on our environmentally friendly products and processes is available on the Internet at [www.gigaset.com](http://www.gigaset.com).

**Environmental management system**

Gigaset Communications GmbH is certified compliant with the EN 14001 and ISO 9001 international standards.

**ISO 14001 (Environment):** Certified since September 2007 by TÜV SÜD Management Service GmbH.

**ISO 9001 (Quality):** Certified since February 17, 1994, by TÜV SÜD Management Service GmbH.

**Ecological energy consumption**

The use of ECO DECT ( → page 42) saves energy and actively contributes to environmental protection.

## Appendix

### Disposal

---

All electrical and electronic equipment should be disposed of separately from general household waste, using the sites designated by local authorities.



If a product displays this symbol of a crossed-out garbage can, the product is subject to European Directive 2002/96/EC.



The appropriate disposal and separate collection of used equipment prevents potential harm to health and the environment. .

For further information on disposing of your used equipment, please contact your local authorities, or your waste collection service.

## Appendix

---

### Care

---

- ▶ Wipe the base station, charging cradle, and handset with a **damp** cloth (do not use solvent) or an antistatic cloth.

**Never** use a dry cloth. This can cause static.

### Contact with liquid

---

If the handset should come into contact with liquid:

1. **Immediately switch the handset off and remove the batteries.**
2. Allow the liquid to drain from the handset.
3. Pat all parts dry, then place the handset, with the battery compartment open and the keypad facing down, in a dry, warm place **for at least 72 hours** (**never** in a microwave oven, convection oven, etc.).
4. **Do not switch on the handset again until it is completely dry.**

Once fully dried, you should be able to use it again normally.

## Specifications

---

### Recommended batteries

---

Technology: Lithium ion (Li-ion)

Voltage: 3.7 V

Capacity: 830 mAh

Type: V30145-K1310-X444

The handset is supplied with the recommended battery. Only the original battery may be used.

In light of continuous advances in battery technology, we regularly update the list of recommended batteries in the FAQ section of the Gigaset Customer Care pages:

[www.gigaset.com/customer-care](http://www.gigaset.com/customer-care)

## Handset operating and charging times

The operating time of your Gigaset depends on the capacity and age of the battery as well as the way you use the device. (All times are maximum possible times and apply when the display back-light is switched off).

Standby time	approx. 200 hours (8 days)
Talktime	approx. 15 hours
Charging time	approx. 3.5 hours

## Base station power consumption


In standby mode	approx. 1.3 W
During a call	approx. 1.5 W

## General specifications

DECT standard	is supported
GAP standard	is supported
No. of channels	60 duplex channels
Radio frequency range	1880–1900 MHz
Duplex method	Time multiplex, 10-ms frame length
Channel grid	1728 kHz
Bit rate	1152 kbit/s
Modulation	GFSK
Language code	32 kbit/s
Transmission power	10 mW, average power per channel
Range	up to 300 m outdoors, up to 50 m indoors

Base station power supply	120V ~/60 Hz
Environmental operating conditions	+5°C to +45°C, 20% to 75% relative humidity
Dialing mode	DTMF (touch-tone dialing)/DP (pulse dialing)

## Pin connections on the telephone jack

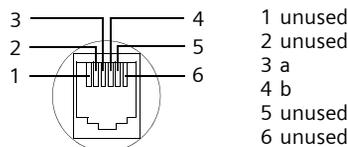

## Writing and editing text

The following rules apply when writing text:

- ◆ Control the cursor with .
- ◆ Characters are inserted to the left of the cursor.
- ◆ Press the Asterisk key to show the table of special characters. Select the required character, then press the Display key **Insert** to insert the character at the cursor position.
- ◆ The first letter of the name of directory entries is automatically capitalized, followed by lowercase letters.

## Writing names

Press the relevant key several times to enter the corresponding letters/characters.

If you press and **hold** a key, the corresponding digit will be inserted.

## Additional functions in the PC interface

### Standard characters

	1x	2x	3x	4x	5x	6x	7x	8x	9x	10x
1	<sup>1)</sup>	<sup>2)</sup>	1							
2	a	b	c	2	ä	á	à	â	ã	ç
3	d	e	f	3	ë	é	è	ê		
4	g	h	i	4	ï	í	ì	î		
5	j	k	l	5						
6	m	n	o	6	ö	ñ	ó	ò	ô	õ
7	p	q	r	s	7	ß				
8	t	u	v	8	ü	ú	ù	û		
9	w	x	y	9	ÿ	ý	æ	ø	å	
0	.	,	?	!	0					

1) Space

2) Line break

### Setting uppercase/lowercase or digits

Press the Pound key briefly to switch from Abc to 123 mode, from 123 to abc mode, and from abc to Abc mode (uppercase: 1st letter uppercase, all others lowercase). Press the Pound key before entering the letter.

You can see on the display whether uppercase letters, lowercase letters, or digits is selected.

## Additional functions in the PC interface

You can connect your handset to your computer using Bluetooth (→ page 49) or the supplied USB cable. If you want to use the Bluetooth connection, your computer must be equipped with a suitable dongle. To transfer data using the USB port, you must install the driver software from the supplied CD before connecting the USB cable (→ page 16).

To enable your handset to communicate with the PC, the **Gigaset QuickSync** program must be installed on your PC (free to download at [www.gigaset.com/gigasetSL780](http://www.gigaset.com/gigasetSL780)).

### Please note

- ◆ If Bluetooth is activated and the supplied USB cable is plugged into the connection socket (→ page 16), Bluetooth is automatically deactivated.
  - If a Bluetooth voice connection has already been established, Bluetooth is not deactivated until the connection is deactivated.
  - If a Bluetooth data connection has already been established, the response depends on the receiving device.
- ◆ Bluetooth is automatically reactivated when the USB cable is removed.
- ◆ If Bluetooth is deactivated and the USB cable is plugged in, Bluetooth cannot be activated.

## Additional functions in the PC interface

### Transferring data

You can synchronize your telephone directory with Outlook using the **Gigaset QuickSync** program (see the program's Help functions).

During the transfer of data between handset and PC, you will see **Data transfer in progress** on the display. During this time, the keypad is disabled, and incoming calls will be ignored.

### Updating the firmware

- ▶ Connect your phone to your PC using the **USB cable** supplied (→ page 16).
- ▶ Start the **Gigaset QuickSync** program on your PC.
- ▶ Establish a connection to your handset.
- ▶ Select **[Settings]** → **[Device Properties]** to open the **[Device]** tab
- ▶ Click **[Firmware Update]**

This launches the firmware update.

The data is initially loaded from the update server over the Internet.

The amount of time this takes depends on the speed of your Internet connection.

The display on your phone is switched off, and the Message key  and Handsfree key  start flashing.

The update process can take up to 10 minutes (not including the download time).

**Do not interrupt the process or remove the USB cable.** Once the update is complete, your phone will automatically restart.

### Procedure in case of an error

If your phone does not work properly following the update, repeat the update process. If you cannot establish a connection to the PC, proceed as follows:

- ▶ Remove the USB cable from the telephone
- ▶ Remove the battery (→ page 12)
- ▶ Press and hold keys  and  simultaneously
- ▶ Replace the battery
- ▶ Reconnect the USB cable
- ▶ Release keys  and  simultaneously

Proceed as described under "**Updating the firmware**".

### Bluetooth Qualified Design Identity

The Bluetooth QD ID for your Gigaset SL78H is: B013322.

## FCC / ACTA Information

### Industry Canada Certification

Operation is subject to the following two conditions (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

**NOTICE:** The Industry Canada label identifies certified equipment. This certification means that the equipment meets certain telecommunications network, protective, operational and safety requirements as prescribed in the appropriate Terminal Equipment Technical Requirements document(s). The Department does not guarantee the equipment will operate to the user's satisfaction.

Before installing this equipment, users should ensure that it is permissible to be connected to the facilities of the local telecommunications company. The equipment must also be installed using an acceptable method of connection. The customer should be aware that compliance with the above conditions may not prevent degradation of service in some situations.

Repairs to certified equipment should be coordinated by a representative designated by the supplier. Any repairs or alterations made by the user to this equipment, or equipment malfunctions, may give the telecommunications company cause to request the user to disconnect the equipment.

Users should ensure for their own protection that the electrical ground connections of the power utility, telephone lines and internal metallic water pipe system, if present, are connected together.

This precaution may be particularly important in rural areas

**NOTE:** Users should not attempt to make such connections themselves, but should contact the appropriate electric inspection authority, or electrician, as appropriate.

This product meets the applicable Industry Canada technical specifications.

The Ringer Equivalence Number is an indication of the maximum number of devices allowed to be connected to a telephone interface. The termination of an interface may consist of any combination of devices subject only to the requirement that the sum of the RENs of all devices does not exceed five.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

### FCC / ACTA Information

**Warning:** Changes or modifications to this unit not expressly approved by Gigaset Communications USA LLC could void the FCC authority to operate the equipment. This includes the addition of any external antenna device.

This equipment complies with Part 68 of the FCC rules and the requirements adopted by the ACTA. On the bottom of the base station is a label that contains, among other information, a product identifier in the format US:AAAEQ##TXXXX. If requested, this number must be provided to the telephone company.

A plug and jack used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirements adopted by the ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. See installation instructions for details.

The REN is used to determine the number of devices that may be connected to a telephone line. Excessive RENs on a telephone line may result in the devices not ringing in response to an incoming call. In most but not all areas, the sum of RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to a line, as determined by the total RENs, contact the local telephone company. For products approved after July 23, 2001, the REN for this product is part of the product identifier that has the format US:AAAEQ##TXXXX. The digits represented by ## are the REN without a decimal point (e.g., 03 is a REN of 0.3). For earlier products, the REN is separately shown on the label.

A copy of the supplier's Declaration of Conformity (SDoC) is available at this Internet address: [www.gigaset.com/docs](http://www.gigaset.com/docs).

If this equipment causes harm to the telephone network, the telephone company will notify you in advance, that temporary discontinuance of service may be required. But if advance notice isn't practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary.

## FCC / ACTA Information

The telephone company may make changes in its facilities, equipment, operations or procedures that could affect the operation of the equipment. If this happens the telephone company will provide advance notice in order for you to make necessary modifications to maintain uninterrupted service. If you experience trouble with this telephone system, disconnect it from the network until the problem has been corrected or until you are sure that the equipment is not malfunctioning.

If trouble is experienced with this equipment, for repair or warranty information, please contact Support at 1-866 374 3864. If the equipment is causing harm to the telephone network, the telephone company may request that you disconnect the equipment until the problem is resolved. This equipment is of a type that is not intended to be repaired by the Customer (user).

This telephone system may not be used on coin service provided by the telephone company. Connection to party line service is subject to state tariffs. Contact the state public utility commission, public service commission or corporation commission for information. Privacy of communications may not be ensured when using this phone.

If your home has specially wired alarm equipment connected to the telephone line, ensure the installation of this equipment does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer.

This telephone system equipment has been tested and found to comply with the limits for Class B digital device, pursuant to Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. These limits are designed to provide reasonable protection against harmful interference in a residential installation. Some cordless telephones operate at frequencies that may cause interference to nearby TV's and VCR's; to minimize or prevent such interference, the system base should not be placed near or on top of a TV or VCR; and, if interference is experienced, moving the base farther away from the TV or VCR will often reduce or eliminate the interference.

However, there is no guarantee that interference will not occur in a particular installation. If this telephone system does cause harmful

interference to radio or television reception, which can be determined by turning the system off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the base station and receiver.
3. Connect the base station into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio TV technician for help.

### Notice for Direct Inward Dialing ("DID")

ALLOWING THIS EQUIPMENT TO BE OPERATED IN SUCH A MANNER AS TO NOT PROVIDE FOR PROPER ANSWER SUPERVISION AS A VIOLATION OF PART 68 OF THE FCC'S RULES.

### Notice to Hearing Aid Wearers:

This phone system is compatible with inductively coupled hearing aids.

### Power Outage:

In the event of a power outage, your cordless telephone will not operate. The cordless telephone requires electricity for operation. You should have a telephone that does not require electricity available for use during power outages.

### Notice:

The installation of the base unit should allow at least 8 inches between the base and persons to be in compliance with FCC RF exposure guidelines.

For body worn operation, the portable part (handset) has been tested and meets FCC RF exposure guidelines. Use with an accessory that contains metal parts may not ensure compliance with FCC RF exposure guidelines.

Notice to telephone company service:

If you need service from your telephone company, please provide them with the information

- Facility interface Code (FIC)
- Service Order Code (SOC)
- Universal Service Order Code (USOC)

as indicated on the label on the bottom side of the base station.

## FCC / ACTA Information

### Safety precautions

Before using your telephone equipment, basic safety instructions should always be followed to reduce the risk of fire, electric shock and injury to persons.

1. Read and understand all instructions.
2. Follow all warnings and instructions marked on the product.
3. Unplug this product from the wall telephone jack and power outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use damp cloth for cleaning.
4. Do not use this product near water, for example, near a bathtub, wash bowl, kitchen sink, or laundry tub, in a wet basement or near a swimming pool.
5. Place this product securely on a stable surface. Serious damage and/or injury may result if the unit falls.
6. Slots or openings in the cabinet and the back and bottom are provided for ventilation, to protect it from overheating. These openings must not be blocked or covered. This product should never be placed near or over a radiator or heat register, or in a place where proper ventilation is not provided.
7. This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your dealer or local power company.
8. Do not place objects on the power cord. Install the unit where no one can step or trip on the cord.
9. Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.
10. Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short out parts that could result in the risk of fire or electric shock. Never spill liquid of any kind on this product.
11. To reduce the risk of electric shock or burns, do not disassemble this product. Take it to a qualified service center when service is required. Opening or removing covers may expose you to dangerous voltages, dangerous electrical current or other risks. Incorrect reassembly can cause electric shock when the appliance is subsequently used.

12. Unplug the product from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- a.) When the power cord is damaged or frayed.
- b.) If liquid has been spilled into the product.
- c.) If the product has been exposed to rain or water.
- d.) If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions because improper adjustment of other controls may result in damage and may require extensive work by a qualified technician to restore the product to normal operation.
- e.) If the product has been dropped or physically has been damaged.
- f.) If the product exhibits a distinct change in performance.

13. Avoid using a telephone (other than a cordless type) during a thunderstorm. There may be a remote risk of electrical shock from lightning. Therefore we suggest a surge arrester.

14. Do not use the telephone to report a gas leak in the vicinity of the leak.

15. Emergency/911 numbers may not be dialed if the keypad is locked.

16. Minimum No. 26 AWG telecommunication line cord must be used with this phone.

### BATTERY SAFETY PRECAUTIONS

To reduce the risk of fire, injury or electric shock, and to properly dispose of batteries, please read and understand the following instructions.

CONTAINS ALKALINE NICKEL METAL HYDRIDE BATTERY. BATTERY MUST BE RECYCLED OR DISPOSED OF PROPERLY. DO NOT DISPOSE OF IN MUNICIPAL WASTE.

1. Only use the batteries specified for use with this product.
2. DO NOT USE ALKALINE NICKEL CADMIUM OR ALKALINE LITHIUM BATTERIES, or mix batteries of different sizes or from different manufacturers in this product. DO NOT USE NONRECHARGEABLE BATTERIES.
3. Do not dispose of the batteries in a fire; the cells may explode. Do not expose batteries to water. Check with local codes for special disposal instructions.
4. Do not open or mutilate the batteries. Released electrolyte is corrosive and may cause damage to the eyes or skin. The electrolyte may be toxic if swallowed.
5. Exercise care in handling the batteries in order not to short the batteries with conducting materials such as rings, bracelets, and keys. The batteries or conducting material may over-

heat and cause burns or fire.

6. Charge the batteries provided with, or identified for use with, this product only in accordance with the instructions and limitations specified in the user's manual. Do not attempt to charge the batteries with any means other than that specified in the users manual.

7. Periodically clean the charge contacts on both the charger and handset.

## Service (Customer Care)

**Customer Care Warranty for Cordless Products**  
**To obtain Customer Care Warranty service,**  
**product operation information, or for problem resolution, call:**  
**Toll Free: 1-886-274-8758**  
**9:00 a.m. – 5:00 p.m. Monday-Saturday**

### End-user limited warranty

This product is covered by a one year limited warranty. Any repair replacement or warranty service, and all questions about this product should be directed to: 1-866-374-3864.

This limited, non-transferable warranty is provided to the original buyer/end-consumer ("you") for systems, handsets and accessories (collectively, "Product") provided by Gigaset Communications USA LLC ("Gigaset USA"). Gigaset USA warrants to you that at the date of purchase, the product is free of defects in workmanship and materials and the software included in the Product will perform in substantial compliance to its program specifications.

#### 1. WARRANTY PERIOD

The Product warranty period is one (1) year from the original date of purchase by you. Proof of purchase (e.g., sales slip or invoice) must be provided with any Product returned during the warranty period. Batteries supplied with the Products are warranted to be free from defects at the time of purchase only.

#### 2. EXCLUSIVE REMEDY

Gigaset USA's entire liability and your exclusive remedy if the Product is defective in materials or workmanship during the warranty period

and is returned shall be that the Product will be repaired or replaced as set forth in Section 4 below. Reconditioned replacement components, parts or materials may be used in the replacement or repair. Data in the memory of the Product may be lost during repair.

#### 3. THIS LIMITED WARRANTY DOES NOT COVER AND IS VOID WITH RESPECT TO THE FOLLOWING:

- Cosmetic damage, physical damage to the surface of the Product, including, without limitation, breakage, cracks, dents, scratches or adhesive marks on the LCD screen or outside casing of the Product.
- Products which have been repaired, maintained or modified (including the antenna) by anyone other than Gigaset USA or a Gigaset USA-approved repair facility, or that have been improperly installed.
- Cost of installation, removal or reinstallation.
- Damage due to any telephone, electronic, hardware or software program, network, Internet or computer malfunctions, failures, or difficulties of any kind, including without limitation, server failure or incomplete, incorrect, garbled or delayed computer transmissions.

## Service (Customer Care)

- Equipment and components not manufactured, supplied or authorized by Gigaset USA.
- Modification of the Product's components, or operation of the Product in an unsuitable environment or in a manner for which it is not intended, including but not limited to failures or defects caused by misuse, abuse, accidents, physical damage, abnormal operation, improper handling or storage, neglect, alterations, unauthorized installation, removal or repairs, failure to follow instructions, problems caused by the carrier's network coverage, exposure to fire, water or excessive moisture or dampness, floods, or extreme changes in climate or temperature, acts of God, riots, acts of terrorism, spills of food or liquids, viruses or other software flaws introduced into the Product, or other acts which are not the fault of Gigaset USA and which the Product is not specified to tolerate, including damage caused by mishandling or blown fuses.
- Products which have had warranty stickers, electronic serial number and/or serial number label removed, altered, rendered illegible or fraudulently applied to other equipment.
- Signal reception problems (unless caused by defect in material or workmanship in the Product).
- Products operated outside published maximum ratings.
- Performance of the Products when used in combination with other products or equipment not manufactured, supplied or authorized by Gigaset USA.
- Consumables (such as batteries and fuses).
- Payments for labor or service to representatives or service centers not authorized to perform product maintenance by Gigaset USA.
- Loss of data.
- Testing and examination discloses that the alleged defect or malfunction in the Product does not exist.

This warranty does not cover customer education, instruction, installation or removal, set up adjustments, problems related to service(s) provided by a carrier or other service provider, and/or signal reception problems. Gigaset USA shall not be responsible for software, firmware, information, or memory data contained in, stored on, or integrated with any Products returned for repair, whether under warranty or not.

This warranty is valid only in the United States.  
**USE WITH ACCESSORIES NOT SUPPLIED BY GIGASET USA OR NOT OTHERWISE EXPRESSLY AUTHORIZED BY GIGASET USA MAY VOID WARRANTY.**

## 4. WARRANTY CLAIM PROCEDURE

All warranty claims must be made by notifying Gigaset USA prior to the expiration of the warranty period. Gigaset USA's obligation to provide warranty support shall not extend past the end of the warranty period, except that any product repaired or replaced during the warranty period shall continue to be warranted for the balance of such warranty period or thirty (30) days, whichever is greater.

Throughout the warranty period, Support will be available Monday through Saturday from 9:00 a.m. to 5:00 p.m., excluding National holidays. Support service will be provided for you by accessing the toll free customer service number:

**1-886-274-8758**

## 5. LIMITATION OF WARRANTY

Gigaset USA makes no warranty or representation that the software in the Products will meet your requirements or will work in combination with any hardware or applications software products provided by third parties, that the operation of the software will be uninterrupted or error free, or that all defects in the software products will be corrected.

## 6. LIMITATION ON REMEDIES; NO CONSEQUENTIAL OR OTHER DAMAGES

Your exclusive remedy for any breach of this limited warranty is as set forth above. Except for any refund elected by Gigaset USA, **YOU ARE NOT ENTITLED TO ANY DAMAGES, INCLUDING BUT NOT LIMITED TO CONSEQUENTIAL DAMAGES**, if the Product does not meet the limited warranty, and, to the maximum extent allowed by applicable law, even if any remedy fails of its essential purpose. The terms below ("Exclusion of Incidental, Consequential and Certain Other Damages") are also incorporated into this limited warranty. Some states/jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This limited warranty gives you specific legal rights. You may have

others which vary from state/jurisdiction to state/jurisdiction.

## 7. DISCLAIMER OF WARRANTIES

GIGASET USA AND ITS SUPPLIERS PROVIDE THE PRODUCT AND SUPPORT SERVICES (IF ANY) AS IS AND WITH ALL FAULTS. THE LIMITED WARRANTY IS IN LIEU OF ANY OTHER EXPRESS WARRANTIES (IF ANY) CREATED BY ANY DOCUMENTATION OR PACKAGING EXCEPT FOR THE LIMITED WARRANTY, AND TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW IS IN LIEU OF ANY IMPLIED OR STATUTORY WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, OF ACCURACY OR COMPLETENESS OR RESPONSES, OF RESULTS, OF WORKMANLIKE EFFORT, OF LACK OF VIRUSES AND OF LACK OF NEGLIGENCE, ALL WITH REGARD TO THE PRODUCT, AND THE PROVISION OF OR FAILURE TO PROVIDE SUPPORT SERVICES. ALSO, THERE IS NO WARRANTY OR CONDITION OF TITLE, QUIET ENJOYMENT, QUIET POSSESSION, OR CORRESPONDENCE TO DESCRIPTION OR NON-INFRINGEMENT WITH REGARD TO THE PRODUCT. Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above exclusions or limitations may not apply to you. If an implied warranty or condition is created by your state and federal or state law prohibits disclaimer of it, you also have an implied warranty or condition, BUT ONLY AS TO DEFECTS DISCOVERED DURING THE PERIOD OF THIS LIMITED WARRANTY (ONE YEAR). AS TO ANY DEFECTS DISCOVERED AFTER THE ONE YEAR PERIOD, THERE IS NO WARRANTY OR CONDITION OF ANY KIND. This limited warranty gives you specific legal rights, and you may also have other rights which vary from state to state. In no event shall Gigaset USA's liability exceed the cost of repairing or replacing defective Products as provided herein, and any such liabilities will terminate upon expiration of the warranty period.

Any supplements or updates to the Product or the software in the Product, including without limitation, any (if any) software fixes or upgrades or bug fixes provided to you after the expiration of the one year limited warranty period are not covered by any warranty or condition, express, implied or statutory.

## 8. EXCLUSION OF INCIDENTAL, CONSEQUENTIAL AND CERTAIN OTHER DAMAGES

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL GIGASET USA, SELLER OR THEIR SUPPLIERS BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT, OR CONSEQUENTIAL DAMAGES WHATSOEVER (INCLUDING, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS OR CONFIDENTIAL OR OTHER INFORMATION, FOR BUSINESS INTERRUPTION, FOR PERSONAL INJURY, FOR LOSS OF PRIVACY, FOR FAILURE TO MEET ANY DUTY INCLUDING OF GOOD FAITH OR OF REASONABLE CARE, FOR NEGLIGENCE, AND FOR ANY OTHER PECUNIARY OR OTHER LOSS WHATSOEVER) ARISING OUT OF OR IN ANY WAY RELATED TO THE USE OF OR INABILITY TO USE THE PRODUCT, THE PROVISION OF OR FAILURE TO PROVIDE SUPPORT SERVICES, OR OTHERWISE UNDER OR IN CONNECTION WITH ANY PROVISION OF THIS LIMITED WARRANTY, EVEN IN THE EVENT OF THE FAULT, TORT (INCLUDING NEGLIGENCE), STRICT LIABILITY, BREACH OF CONTRACT OR BREACH OF WARRANTY OF GIGASET USA OR SELLER OR ANY SUPPLIER, AND EVEN IF GIGASET USA OR SELLER OR ANY SUPPLIER HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. REPAIR OR REPLACEMENT, AS PROVIDED UNDER THE WARRANTY, IS YOUR SOLE AND EXCLUSIVE REMEDY FOR BREACH OF THE LIMITED WARRANTY.

## 9. LIMITATION OF LIABILITY AND REMEDIES

NOTWITHSTANDING ANY DAMAGES THAT YOU MIGHT INCUR FOR ANY REASON WHATSOEVER (INCLUDING, WITHOUT LIMITATION, ALL DAMAGES REFERENCED ABOVE AND ALL DIRECT OR GENERAL DAMAGES), THE ENTIRE LIABILITY OF GIGASET USA, SELLER AND ANY OF THEIR SUPPLIERS UNDER ANY PROVISION OF THIS LIMITED WARRANTY AND YOUR EXCLUSIVE REMEDY FOR ALL OF THE FOREGOING (EXCEPT FOR ANY REMEDY OF REPAIR OR REPLACEMENT ELECTED BY GIGASET USA OR SELLER OR SUPPLIER WITH RESPECT TO ANY BREACH OF THE LIMITED WARRANTY) SHALL BE LIMITED TO THE GREATER OF THE AMOUNT ACTUALLY PAID BY YOU FOR THE PRODUCT OR FIVE DOLLARS (\$5.00 USD). THE FOREGOING LIMITATIONS, EXCLUSIONS AND DISCLAIMERS SHALL APPLY TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, EVEN IF ANY REMEDY FAILS ITS ESSENTIAL PURPOSE.

## Service (Customer Care)

### 10. GOVERNING LAW

This limited warranty will be governed by the laws of Texas, and excluding the United Nations Convention on Contracts for the International Sale of Goods.

If you want to learn more about Service or for Support on your phone, visit our web site at <http://www.gigaset.com> or please call **1-886-274-8758**.

Issued by  
Gigaset Communications GmbH  
Schlavenhorst 66, D-46395 Bocholt  
Gigaset Communications GmbH is a trademark licensee of Siemens AG

© Gigaset Communications GmbH 2008  
All rights reserved.  
Subject to availability. Rights of modifications reserved.  
Product attributes subject to change.  
We reserve the right, to make changes without notice in equipment design and/or components.  
Part Number:A31008-M2009-XXXX-1-XX  
© Copyright 2008.

## Accessories

# Accessories

---

### Gigaset handsets

Upgrade your Gigaset to a cordless PABX:

#### Gigaset SL78H handset

- ◆ Illuminated graphical color display (256k colors)
- ◆ Illuminated keypad
- ◆ Handsfree talking
- ◆ Polyphonic ringers
- ◆ Directory for around 500 entries
- ◆ PC interface to manage directory entries
- ◆ Bluetooth
- ◆ Room monitor

[www.gigaset.com/gigasetSL78H](http://www.gigaset.com/gigasetSL78H)



#### Gigaset S67H/S68H handset

- ◆ Illuminated graphical color display (65k colors)
- ◆ Illuminated keypad
- ◆ Handsfree talking
- ◆ Polyphonic ringers
- ◆ Directory for around 250 entries
- ◆ Picture CIP
- ◆ Headset socket
- ◆ Bluetooth (Gigaset S68H only)
- ◆ Room monitor

[www.gigaset.com/gigasetS67H](http://www.gigaset.com/gigasetS67H)



## Accessories

### Gigaset SL37H handset

- ◆ Illuminated graphical color display (65k colors)
- ◆ Illuminated keypad
- ◆ Handsfree talking
- ◆ Polyphonic ringers
- ◆ Directory for around 250 entries
- ◆ Picture CIP
- ◆ PC interface (e.g., for managing directory entries, ringers, and screensavers)
- ◆ Headset socket
- ◆ Bluetooth
- ◆ Room monitor
- ◆ Walkie-talkie function

[www.qigaset.com/qigasetSL37H](http://www.qigaset.com/qigasetSL37H)



### Gigaset repeater

The Gigaset repeater can be used to increase the reception range between your Gigaset handset and the base station.

[www.qigaset.com/qigasetrepeater](http://www.qigaset.com/qigasetrepeater)



### Gigaset HC450: Door intercom for cordless phones

- ◆ Use the intercom from your cordless phone – no need for a landline home phone
- ◆ Intuitive user functions using the Display keys (open door, switch on entry light)
- ◆ Simple to configure using the handset menu
- ◆ Divert to outside phone numbers (intercom feature)
- ◆ Simple to install and register with the Gigaset system
- ◆ Replaces existing call button – no further cable is needed
- ◆ Supports the existing doorbell and standard door opener
- ◆ Configuration options for the second ringer key (separate intercom call, activate entrance lighting, or function as the first ringer key)

[www.qigaset.com/GigasetHC450](http://www.qigaset.com/GigasetHC450)




## Mounting the base station to the wall

All accessories and batteries are available from your phone retailer.



Only use original accessories. This prevents possible health risks and property damage and also ensures compliance with all relevant regulations.

## Mounting the base station to the wall

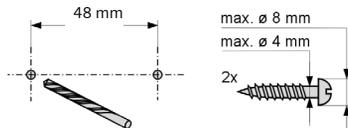

## Index

**Index****A**

Access protection . . . . . 56  
 Accessories . . . . . 71  
 Acknowledgment tones . . . . . 55  
 Activating  
   advisory tones . . . . . 55  
   answering machine . . . . . 36  
   answering machine  
     (remote operation) . . . . . 40  
   appointment . . . . . 42  
   call acceptance . . . . . 53  
   handset . . . . . 21  
   internal listening in . . . . . 47  
   keypad lock . . . . . 21  
   room monitor . . . . . 48  
   two-way record . . . . . 39  
 Advisory tones . . . . . 55  
 Alarm clock . . . . . 44  
 Alert tone . . . . . 54  
 Anniversary . . . . . 32  
   deactivating . . . . . 32  
   missed . . . . . 44  
   saving in directory . . . . . 32  
 Announcement (answering machine) . 37  
 Answer only mode  
   (answering machine) . . . . . 36  
 Answering machine . . . . . 36  
   activating/deactivating . . . . . 36  
   deleting messages . . . . . 38  
   playing back messages . . . . . 37  
   recording a personal announcement/  
     answer only . . . . . 36  
   remote operation . . . . . 40  
   scrolling back . . . . . 37  
   scrolling forward . . . . . 37  
 Answering Machine list . . . . . 33, 34  
 Answering machine, see also  
   Network mailbox  
 Appointment . . . . . 42  
 Appointment/anniversary  
   display missed . . . . . 44  
 Appointments  
   activating/deactivating . . . . . 43  
   deleting . . . . . 43  
   managing . . . . . 43  
 Area code  
   setting own area code . . . . . 55

Assigning a key . . . . . 51  
 Assigning a number key . . . . . 51  
 Asterisk key . . . . . 1  
 Automatic  
   call acceptance . . . . . 26, 53

**B**

Base station  
   changing . . . . . 46  
   connecting . . . . . 9  
   connecting to PABX . . . . . 57  
   power consumption . . . . . 61  
   restoring factory settings . . . . . 56  
   setting . . . . . 56  
   setting up . . . . . 10  
   system PIN . . . . . 56  
 Battery  
   charging . . . . . 1, 2, 13  
   display . . . . . 1, 2  
   icon . . . . . 1, 2, 16  
   inserting . . . . . 11  
   recommended batteries . . . . . 60  
   tone . . . . . 55  
 Best base station . . . . . 46  
 Birthday, see Anniversary  
 Bluetooth  
   accepting a call . . . . . 26  
   activate . . . . . 50  
   changing device name . . . . . 51  
   deregistering devices . . . . . 50  
   list of known devices . . . . . 50  
   registering devices . . . . . 50  
   setting own area code . . . . . 55  
   transferring directory (vCard) . . . . 31

**C**

Calendar . . . . . 42  
 Call  
   accepting . . . . . 26  
   accepting (Bluetooth) . . . . . 26  
   diverting (connecting) . . . . . 46  
   ending . . . . . 26  
   external . . . . . 26  
   internal . . . . . 46  
   party listening in . . . . . 47  
   picking up from answering  
     machine . . . . . 38  
   transferring (connecting) . . . . . 47  
   two-way record . . . . . 39  
 Call acceptance . . . . . 39, 53

- Call duration . . . . . 26
- Call lists . . . . . 33
- Call screening during recording . . . . . 39
- Call waiting
  - internal call . . . . . 47
- Caller ID . . . . . 27
- Calling
  - external . . . . . 26
  - internal . . . . . 46
- Care of the telephone . . . . . 60
- Changing
  - destination number . . . . . 49
  - device name (Bluetooth) . . . . . 51
  - dialing mode . . . . . 57
  - display language . . . . . 52
  - earpiece volume . . . . . 53
  - handsfree volume . . . . . 53
  - internal number of a handset . . . . . 47
  - name of a handset . . . . . 47
  - pauses . . . . . 57
  - ringer . . . . . 53
  - system PIN . . . . . 56
- Character set . . . . . 62
- Charge status display . . . . . 1, 2
- CI, CIP . . . . . 27
- CIP picture . . . . . 27
- CNIP . . . . . 27
- Conference (internal) . . . . . 46
- Confirmation tone . . . . . 55
- Connecting, base station to PABX . . . . . 57
- Consultation call (internal) . . . . . 46
- Control key . . . . . 1, 18
- Correcting incorrect entries . . . . . 19
- Customer Care . . . . . 67
- D**
- Deactivating
  - advisory tones . . . . . 55
  - answering machine . . . . . 36
  - appointment . . . . . 42
  - call acceptance . . . . . 53
  - handset . . . . . 21
  - internal listening in . . . . . 47
  - keypad lock . . . . . 21
  - room monitor . . . . . 49
  - two-way record . . . . . 39
- Delete key . . . . . 19
- Deleting
  - announcement for answering machine . . . . . 37
  - characters . . . . . 19
  - message . . . . . 38
- Deregistering (handset) . . . . . 45
- Deregistering devices (Bluetooth) . . . . . 50
- Destination number (room monitor) . . . . . 48
- Dialing
  - directory . . . . . 30
  - mode . . . . . 57
  - Quick Dial . . . . . 51
  - Quick list . . . . . 30
  - using Quick Dial . . . . . 31
- Directory . . . . . 29
  - copying number from text . . . . . 32
  - managing entries . . . . . 30
  - opening . . . . . 18
  - order of entries . . . . . 30
  - saving anniversary . . . . . 32
  - saving entry . . . . . 29
  - sending entry/list to handset . . . . . 31
  - transferring a vCard (Bluetooth) . . . . . 31
  - using to enter numbers . . . . . 32
- Display
  - backlight . . . . . 53
  - changing display language . . . . . 52
  - in idle status . . . . . 20
  - memory (directory/Quick list) . . . . . 31
  - missed appointments/
    - anniversaries . . . . . 44
    - name (CNIP) . . . . . 27
    - network mailbox message . . . . . 41
    - number (CI/CIP) . . . . . 27
    - screensaver . . . . . 52
    - setting . . . . . 52
- Display keys . . . . . 1, 19
  - assigning . . . . . 51
- Disposal . . . . . 60
- DP (pulse dialing) . . . . . 57
- E**
- Earpiece mode . . . . . 28
- Earpiece volume . . . . . 53
- ECO DECT . . . . . 42
- Eco mode . . . . . 42
- E-mail address
  - copying from the directory . . . . . 32
- End Call key . . . . . 1, 26
- Ending, call . . . . . 26
- Entry
  - selecting from directory . . . . . 30
- Environment . . . . . 59

**Index**

- Error tone . . . . . 55
- External call
  - diverting to ans. mach. . . . . 38
- F**
- Fast access
  - answering machine . . . . . 40
  - network mailbox. . . . . 41
- Firmware update . . . . . 63
- Flash key . . . . . 1, 57
- G**
- General troubleshooting . . . . . 58
- Group call . . . . . 46
- H**
- Handset
  - activating/deactivating . . . . . 21
  - advisory tones . . . . . 55
  - changing internal number. . . . . 47
  - changing name . . . . . 47
  - changing the number . . . . . 47
  - changing to a different base
    - station. . . . . 46
  - changing to best reception . . . . . 46
  - contact with liquid . . . . . 60
  - deregistering . . . . . 45
  - display backlight. . . . . 53
  - display language. . . . . 52
  - diverting a call . . . . . 46
  - earpiece volume . . . . . 53
  - handsfree volume. . . . . 53
  - idle status . . . . . 20
  - list . . . . . 18
  - locating . . . . . 45
  - muting. . . . . 28
  - paging . . . . . 45
  - registering . . . . . 45
  - registering to a different
    - base station . . . . . 46
  - restoring to factory settings. . . . . 55
  - screensaver . . . . . 52
  - setting . . . . . 51
  - setting up. . . . . 11
  - using room monitor . . . . . 48
  - using several . . . . . 45
- Handset operating time
  - in room monitor mode . . . . . 48
- Handsfree
  - key . . . . . 1
  - talking. . . . . 28
- Headset (Bluetooth) . . . . . 49
- Hearing aids . . . . . 6
- Help . . . . . 58
- I**
- Icon
  - alarm clock . . . . . 44
  - answering machine . . . . . 36, 39
  - battery . . . . . 16
  - display . . . . . 19
  - for new messages . . . . . 34
  - keypad lock . . . . . 21
  - new message . . . . . 37
  - ringer . . . . . 54
- Idle status (display) . . . . . 20
- Idle status, returning to . . . . . 20
- Incorrect input (correction) . . . . . 19
- Installing, base station . . . . . 10
- Internal
  - conference . . . . . 46
  - consulting. . . . . 46
  - listening in . . . . . 47
  - making calls . . . . . 46
- Internal call. . . . . 46
- call waiting . . . . . 47
- K**
- Key 1 (Fast Access) . . . . . 1, 40
- Keypad lock . . . . . 21
- Keys
  - Asterisk key . . . . . 1
  - Control key . . . . . 1, 18
  - Delete key . . . . . 19
  - Display keys. . . . . 1, 19
  - End Call key. . . . . 1, 26
  - Fast Access . . . . . 1, 40
  - Flash key . . . . . 1
  - Handsfree key . . . . . 1
  - Message key . . . . . 1
  - On/Off key . . . . . 1
  - Pound key . . . . . 1, 21
  - Quick Dial . . . . . 31
  - Quick list key . . . . . 1
  - Talk key . . . . . 1, 26

**L**

Language, display	52
Last number redial	33
List	29
Answering Machine	33, 34
Call lists	33
Handsets	18
Known Devices (Bluetooth)	50
Missed Calls	33
Network mailbox	33
Quick list	29
Listening in on a call	47
Locating, handset	45
Lock	
activating/deactivating keypad lock	21

**M**

Making calls	
accepting a call	26
cost-effective calls	35
external	26
internal	46
Manual last number redial	33
Medical appliances	6
Memory	
directory/Quick list	31
Menu	
end tone	55
opening	18
overview	24
prompting	20
Message key	1
opening lists	34
Messages	36
copy the number to the	
directory	38
deleting	38
marking as "new"	38
new message icon	37
playing back	37
Microphone	1
Missed	
anniversary	44
appointment	44
calls	33
Music on hold	56
Muting	
handset	28

**N**

Name	
displaying caller's name (CNIP)	27
of a handset	47
Network mailbox	41
Number	
as destination for room monitor	48
copying from directory	32
copying to directory	32
displaying caller's number (CIP)	27
entering with directory	32
saving in the directory	29

**O**

On/Off key	1
Order in directory	30

**P**

PABX	
connecting base station	57
pauses	57
setting dialing mode	57
setting recall	57
switching to touch-tone dialing	57
Pack contents	8
Paging	45
Paging key	1
Pause	
after Flash key	57
after line seizure	57
PC Interface	62
PIN change	
system PIN	56
Pin connections	61
Playing back	
announcement (answering	
machine)	37
message (answering machine)	37
Pound key	1, 21
Power adapter	6
Power consumption (base station)	61
Protecting the phone against access	56
Pulse dialing	57

**Q**

Questions and answers	58
Quick Dial	29, 51
Quick list	29
Quick list key	1
Quick list numbers	29, 35

**Index****R**

Range	10
Recall	57
Reception booster, see Repeater	
Recording	
quality	39
time	39
two-way record	39
Registering (handset)	45
Registering devices (Bluetooth)	50
Registration key	1
Reminder call	32
Remote operation	40
Repeater	56
Ringer	
changing	53
setting volume	53
Room monitor	48

**S**

Screensaver	52
Searching in directory	30
Sending	
directory entry to handset	31
Sensitivity (room monitor)	48
Service (Customer Care)	67
Setting	
date	14, 25
screensaver	52
time	14, 25
Setting up	
handset	11
Signal tone, see Advisory tones	
Snooze mode	44
Sound, see Ringer	
Special functions	57
Specifications	60
System settings	56

**T**

Talk key	1, 26
Telephone jack, pin connections	61
Touch-tone dialing	57

**U**

Update	63
USB connection	16

**V**

Viewing the network mailbox	
message	41
VIP (directory entry)	29
Volume	
earpiece	53
earpiece volume	53
handset handsfree volume	53
loudspeaker	53
ringer	53
setting	54

**W**

Warning tone, see Advisory tones	
Writing and editing text	61