


RECEIVER REMOTE CONTROL FUNCTION

The receiver can remote control the power and direction of the camera. The operation is as below.

Remote control the camera's power

Press the **CAM. ON/OFF** button on the receiver to power on the camera; press the button again to power off.

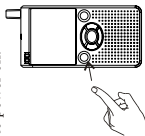

Note:

- If the channel indicator **CH1** on the receiver lights up, the camera at channel 1 can be remote controlled.

Remote control the camera's direction


- Press the **AUTO** button once on the receiver to activate the camera to rotate horizontally for a period.
- Press the **◀/▶** button on the receiver to rotate the camera at horizontal direction manually. The max. angle is 270 degree.
- Press the **▲/▼** button on the receiver to rotate the camera at vertical direction manually. The max. angle is 120 degree.

CHANNEL LOOPING SETUP

The receiver supports up to 3 cameras working at the same time. You could press and hold the **CHANNEL** button on the receiver for 2 seconds to enable the automatic looping function. The channels are shown on the monitor/TV one by one every 8 seconds.

Press the **CHANNEL** button on the receiver again to exit the looping function.

You can press the **CHANNEL** button to manually select the channel.



CAUTIONS

- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
- Turn off the Camera/Receiver if the system is not in use.
- The adapter is used as the disconnect device from the mains. The adapter shall remain readily operable.
- The Camera/Receiver can only be completely disconnected from the mains by unplugging the adapter.
- Do not cut the DC power cable of the apparatus to fit with another power source.
- Attention should be drawn to the environment aspects of battery disposal.

SPECIFICATIONS

Imaging Sensor	CMOS
CCD/CMOS Pixel Size	628 × 582 (PAL) 510 × 492 (NTSC)
Minimum Illumination	0 lux
Transmission Frequency	ISM 2.400MHz~2.483MHz
Transmission Power	10mW/CE:2mW/FCC
Modulation Type	FM
Bandwidth	18MHz
Power Supply	+9V _{batt}
Consumption Current (Max.)	300mA(max)
Horizontal Rotating Angle (Max.)	270
Vertical Rotating Angle (Max.)	120
Unobstructed Effective Ranges (Min.)	100m
Night Vision Ranges (Min.)	5m
Dimensions(W × D × H)	103 × 104 × 103 (mm)
Weight (about)	298g
LCD	2.5" TFT
LCD Resolution	480 × 234
Receiving Frequency	ISM 2.400MHz~2.483MHz
Demodulation Type	FM
Receiving Sensitivity	≤ -85dBm
Power Supply	+9V _{batt}
Consumption Current (Max.)	320mA
Dimensions(W × D × H)	68 × 149 × 26(mm) (Excluding Antenna)
Weight (about)	148g
Operating Temperature	0°C~+50°C/+32°F~+122°F
Operating Humidity	85%RH

*Channel Frequencies: CH1=2.414MHz, CH2=2.430MHz, CH3=2.446MHz
 *Actual transmission range may vary according to weather, location, interference and building construction.

*All the specifications are subject to minor change without prior notice.

EU Environmental Protection

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.



Operation Guide

2.4GHz Wireless


Remote Control Camera Kit

Model: 8602Q


PACKING LIST

- ① 2.4GHz wireless camera × 1
- ② 2.4GHz wireless receiver × 1
- ③ Adapter for camera × 1
- ④ Adapter for receiver × 1
- ⑤ AV cable × 1
- ⑥ Earphone × 1

STRUCTURE
CAMERA

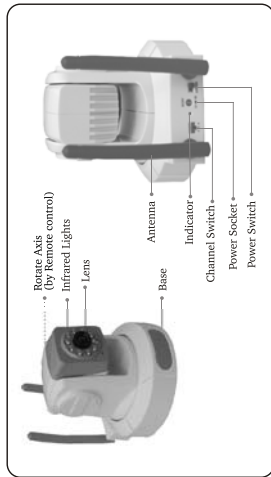


RECEIVER

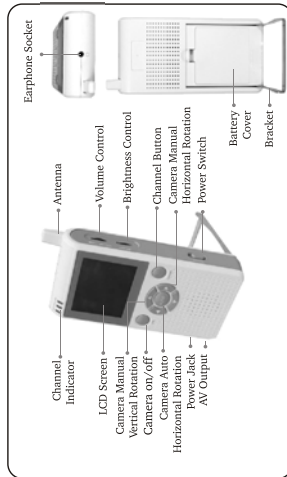

INSTALLATION


1. Locate the camera to a specific position.

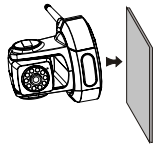

2. Connect the camera to the adapter (DC 9V 1.5A) and then slide the power switch to **ON** position. The power indicator lights up.




3. Connect the receiver to the adapter (DC 9V 1.5A) and slide the power switch to **ON** position.

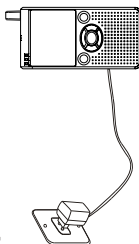


Notes:

- This receiver can also work on dry battery. Please load 4 AAA batteries to the battery compartment with their polarities matched.


- The AC adapter will work instead of batteries after it is plugged. If the receiver is left unused for a long time, please unplug the adapter and remove the batteries.

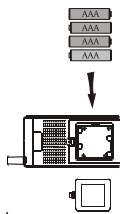


4. Set the channel of receiver same as that of camera by pressing the channel button continuously, and the pictures are displayed on the LCD screen.



Note: For more clear pictures, please connect the receiver to a monitor/TV with AV cable.



5. Adjust the brightness and volume of the receiver to a satisfied level.



Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The equipment complies with FCC radiation exposure limit set forth for uncontrolled Environment.

Changes or modifications to this unit not expressly approved by the party responsible for compliance will void the user's authority to operate the equipment. Any change to the equipment will void FCC grant.