

Pause: press **OK** button in playing status to pause;
press again to resume;

Fast Forward: press and hold on the ► button for about 2 seconds;


Fast Backward: press and hold on the ◀ button for about 2 seconds;
(In the fast forward or fast backward mode, press the **OK** button to
return to normal play mode.)


Stop/Exit: press the **MENU** button.



For View Pictures:


Press the ◀ or ► button to select picture, press **OK** button to view
and press again to exit.

Delete Video/Picture

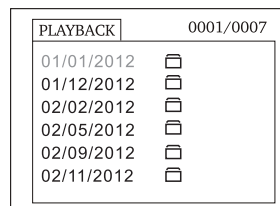1. In realtime monitoring status, press  button to display:




2. Press ◀ or ► button to select folder, then press **OK** button.
3. Press the ◀ or ► button to select the file, and then press   button.

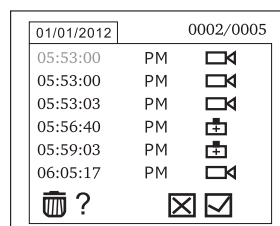

4. Press the ◀ or ▶ button to select between and , that is, to cancel or delete. Once you have yellow highlighted your selection, press the **OK** button.


Deleting Folder

Deleting a folder is done in the same way as deleting a single file.

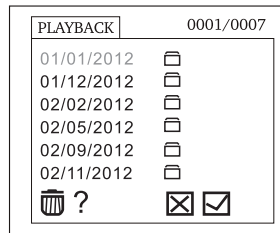


How to enter the Setting Mode

In real-time monitoring mode, press the **MENU** button.

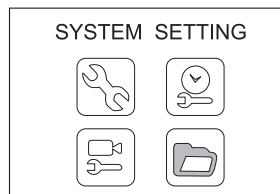

Language Setting


1. In the setting mode, press the ◀ or ▶ button to select 'SYSTEM SETTING', and then press **OK** button.
2. Press the ◀ or ▶ button to select 'Language', and then press **OK** button, the following interface will appear:

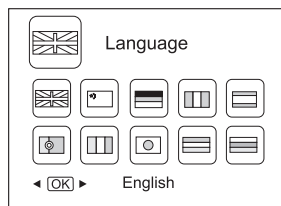

3. Press the ◀ or ▶ button to select your language.
4. Press **OK** button to confirm and exit.

Video System Setting


1. In the setting mode, press the ◀ or ▶ button to select 'SYSTEM SETTING', and then press **OK** button.
2. Press the ◀ or ▶ button to select 'Video System', and then press **OK** button.

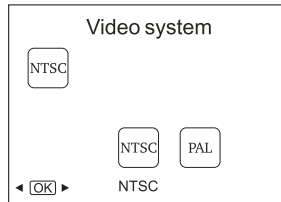

3. Press the ◀ or ▶ button to select between PAL and NTSC. Once you have highlighted your desired selection, press the **OK** button.

Format

1. In the setting mode, press the ◀ or ▶ button to select 'SYSTEM SETTING', and then press **OK** button.
2. Press the ◀ or ▶ button to select 'Format', and then press **OK** button.

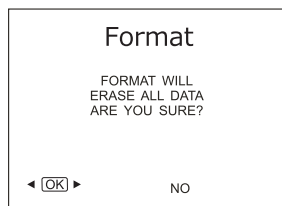

3. Press the ◀ or ▶ button to select between YES and NO, that is, to format or cancel. Once you have highlighted your selection, press the **OK** button.

Default Setup

1. In the setting mode, press the ◀ or ▶ button to select 'SYSTEM SETTING', and then press **OK** button.
2. Press the ◀ or ▶ button to select 'Default Setup' and then press **OK** button.




3. Press the ◀ or ▶ button to select between YES and NO, that is to restore default or cancel. Once you have highlighted your selection, press the **OK** button.

View Version Information

1. In the setting mode, press the ◀ or ▶ button to select 'SYSTEM SETTING', and then press **OK** button.
2. Press the ◀ or ▶ button to select 'Version' and then press **OK** button.
You will now be able to view the version details of this product.

Date/Time Setting


1. In the setting mode, press the ◀ or ▶ button to select 'Date/Time' and then press **OK** button to enter the following interface:

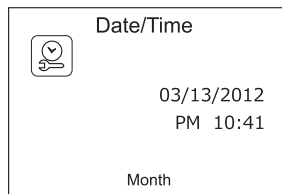

2. Press **OK** button to select Date or Time; Press the ◀ or ▶ button to modify. Press the **MENU** button to confirm and exit.

Frame Rate Setting


1. In the setting mode, press the ◀ or ▶ button to select 'RECORDER SETTING', and then press **OK** button.
2. Press the ◀ or ▶ button to select 'Frame Rate' and then press **OK** button.

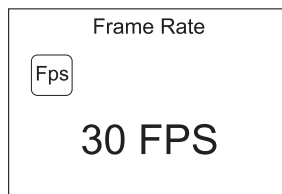

3. Press the ◀ or ▶ button to select suitable frame rate. press **OK** button to confirm and exit.

Time Stamp Setting

1. In the setting mode, press the ◀ or ▶ button to select 'RECORDER SETTING', and then press **OK** button.
2. Press the ◀ or ▶ button to select 'Time Stamp' and then press **OK** button.

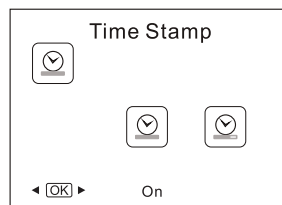

3. Press the ◀ and ▶ buttons to select "NO" or "OFF", then press **OK** button to confirm and exit.

Event Playback

1. In the setting mode, press the ◀ or ▶ button to select 'EVENT PLAYBACK', and then press **OK** button.
2. For other operation, see "Play Video/Picture", "Delete Video/Picture", "Delete Folder" section.

SPECIFICATIONS

Camera	Model No.	WIC-5200
	Image Sensor	CMOS
	Total Pixels	640x480
	Horizontal View Angle	48 degree
	Transmission Frequency	2468MHz
	Minimum Illumination	0 Lux
	Modulation Type	FM
	Bandwidth	18MHz
	Tube Diameter	9mm
	Unobstructed Effective Range	32.8 ft.
	Waterproof Capacity	IP67 (for camera tube only)
	Consumption Current (Max.)	200mA
	Charge Time (Min.)	3 hours
	Work Time (Min.)	4 hours
	Monitor	Dimensions (W x D x H)
Weight (Approximately)		1.02 lbs.
LCD Screen Type		3.5" TFT-LCD
Effective Pixels		320 (R.G.B.) X 240
Video System		NTSC/PAL
Transmission Frequency		2468MHz
Consumption Current (Max.)		500mA
Charge Time (Min.)		3 hours
Work Time (Min.)		2 hours
Picture/Video Resolution		640x480 pixels
Frame Rate		30 frame/second
Memory		SD Card
Picture Format		JPG
Video Format		AVI
Video Size		<27M byte/minute
Total	Dimensions (W x D x H)	4.4 x 4.4 x 1.5 (in.)
	Weight (Approximately)	0.51 lbs.
	Power Supply	Built-in Li-battery
	USB Power Adapter	5V / 1500mA
	Operating Temperature	0°C ~ +40°C / +32°F ~ +104°F
	Operation Humidity	15% ~ 85% RH

- * Actual transmission range may vary according to the weather, location, interference and building construction.
- * All the specifications are subject to minor change without prior notice.

▲ CAUTION

- Do not expose the monitor or handheld unit to dripping or splashing liquids.
- Turn off the camera and monitor when not in use.
- Use only the AC adaptor and cable supplied with the unit.
- Properly dispose of the batteries. Exposure to high temperatures can cause the batteries to explode. Do not dispose of batteries in a fire. When stored, place tape over the terminals to prevent direct contact with other objects. Some countries have regulations concerning battery disposal. Please follow all applicable regulations.

WARRANTY INFORMATION

Consumer Warranty

This Whistler Inspection Camera is warranted to the original purchaser for a period of one year from the date of original purchase against all defects in materials and workmanship. This limited warranty is void if the unit is abused, modified, installed improperly, or if the housing and/or serial numbers have been removed. There are no express warranties covering this product other than those set forth in this warranty. All express or implied warranties for this product are limited to the above time. Whistler is not liable for damages arising from the use, misuse, or operation of this product. During the warranty period, defective units will be repaired without charge to the purchaser when returned with a dated store receipt to the address below. Units returned without a dated store receipt will be handled as described in section "Service Out of Warranty".

Note: Damage caused by incorrect battery placement or battery leakage is not covered under this warranty.

When returning a unit for service, please follow these instructions:

1. Ship the unit in the original carton or in a suitable sturdy equivalent, fully insured, with return receipt request to: Whistler Repair Dept.
551 N. 13th St.
Rogers, AR 72756

Please allow 3 weeks turnaround time.

Important: Whistler will not assume responsibility for loss or damage incurred in shipping. Therefore, please ship your unit insured with return receipt requested. CODs will not be accepted!

2. Include with your unit the following information, clearly printed:

- Your name and street address (for shipping via UPS), a daytime telephone number and an email address, if applicable.
- A detailed description of the problem (e.g., "Cannot adjust brightness on monitor").
- A copy of your dated store receipt or bill of sale.

3. Be certain your unit is returned with its serial number. For reference, please write your unit's serial numbers in the following spaces: Monitor S/N: Handheld unit S/N:

Units without serial numbers are not covered under warranty. Important: To validate that your unit is within the warranty period, make sure you keep a copy of your dated store receipt. You may register your warranty online at www.whistlergroup.com, however, for warranty verification purposes, a copy of your dated store receipt must accompany any unit sent in for warranty work.

Service Out of Warranty

Units will be repaired at "out of warranty" service rates when:

- The unit's original warranty has expired.
- A dated store receipt is not supplied.
- The unit has been returned without its serial number.
- The unit has been abused, modified, installed improperly, or had its housing removed.

The minimum out of warranty service fee for your Whistler Inspection Camera is \$75.00 (U.S.). If you require out of warranty service, please return your unit as outlined in the section "Service Under Warranty" along with a certified check or money order for \$75.00. Payment may also be made by MasterCard, VISA, or American Express; personal checks are not accepted. In the event repairs cannot be covered by the minimum \$75.00 service fee, you will be contacted by a Whistler technical service specialist who will outline options available to you. If you elect not to have your unit repaired, it will be returned to you along with your certified check or money order.

ACCESSORIES

Call 1-800-531-0004 or visit www.whistlergroup.com for available accessories.

TROUBLESHOOTING

Why won't the monitor turn on?

Make sure that the monitor has been charged at least overnight before first use. Press the reset button on the unit.

Message on monitor says to "See manual for troubleshooting".

Make sure that the handheld unit is turned on and that the camera tube is properly attached to the handheld unit.

Why does the video look "Scrambled"?

There are two video formats that the inspection camera can be set to: NTSC format which is used in North America and PAL format which is used in some overseas countries. Enter the menu selection and check the video format to make sure the monitor is in NTSC format.

The power light comes on but nothing shows on the screen?

- This could be due to weak battery in the handheld unit. Recharge overnight.
- Is the camera tube fully inserted to the handheld unit? When connecting the camera tube to the handheld unit, make sure the keyed ends are properly aligned. Once they are lined up, press in firmly and then finger tighten the knob to hold the connector in place.
- Rotate the handheld unit's Power On/LED Brightness control to the "ON" position and continue to increase the camera's LED lights.

Why is my picture upside down?

Simply press the image orientation button or move the camera tube to properly orient the image.

What is the maximum depth the waterproof camera can be submerged?

Approximately 12 feet - the camera extension limit of the unit. Camera tube has a rating of IP67.

What format are the pictures and movies saved as?

Still images are saved in a .jpg format. Movies are saved in a .AVI format with video resolution at 640x480 pixels.

The monitor works great when close to the handset but reception gets worse the further away the monitor is from the handheld unit.

Make sure there are no Bluetooth devices, Cordless Phones or home network devices turned on as these devices can cause interference.

Video Output, will it display live video or will it only display playback of recorded video?

When connected to a different monitor the unit will display live video as well as picture and recorded playback.

FCC INFORMATION

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference,
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC ID: TW5GB8863

Note: Changes or modifications not expressly approved by Whistler could void the user's authority to operate the equipment.

NOTE: USE ONLY PROVIDED POWER ADAPTOR

Caution

**RISK OF EXPLOSION IF BATTERY IS REPLACED
BY AN INCORRECT TYPE**

EU Environmental Protection

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.



This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.