

6. Zooming *

you can also enlarge the picture, Press the Zoom button once, the picture will be enlarge 2X; press again, then back to the original size.

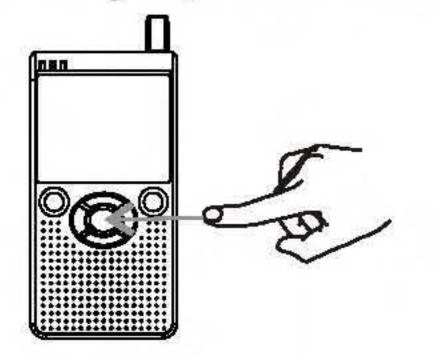


TIP:

- * Press the CTRL Button to turn on/off the LCD Screen and keep the voice for sleeping mode.
- * Hold the CTRL Button for 3 second, the pictures will be upside down, so user could install the camera upside down as a optional.

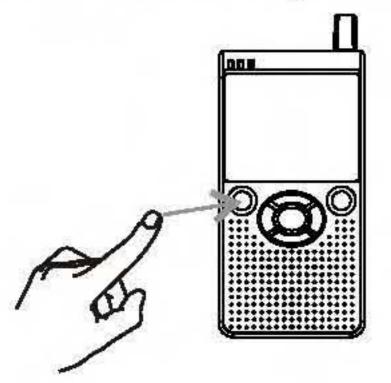

* You may connect the receiver to a monitor/TV with AV cable to view more clear pictures.

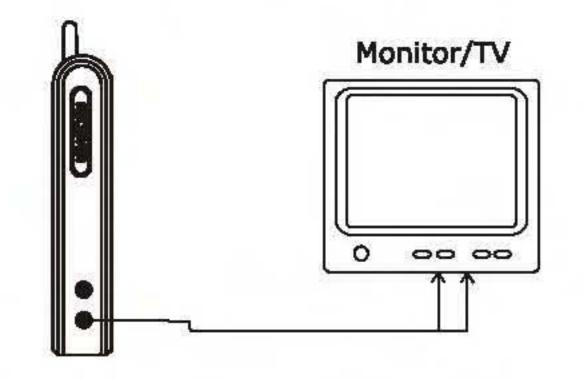

RECEIVER REMOTE CONTROL THE DIRECTION OF THE CAMERA

The receiver can remote control direction of the camera. The operation is as below:

- 1. Press the < / > button on the receiver to rotate the camera at horizontal direction manually. The max. Angle is 270 degree.
- 2. Press the \blacktriangle / \bigtriangledown button on the receiver to rotate the camera at vertical direction manually. The max. Angle is 120 degree.

FCC INFORMATION

This device complies with part15 of the FCC rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference.

(2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the authority of the user to operate the equipment.

CAUTIONS

- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
- Turn off the camera/receiver if the system is not in use.
- The camera/receiver can only be completely disconnected from the mains by unplug the adapter.
- Do not cut the DC power cable of the apparatus to fit with another
- power source. Attention should be drawn to the environment aspects of battery
- disposal.

SPECIFICATIONS

	Item	Value
General	Transmission Frequency	ISM 2,400 ~ 2,483 MHz
	Transmission Power	17dBm
	Unobstructed Effective Range	300m(Min.)
	Spread Spectrum	FHSS
	Modulation Mode	GFSK
	Operating Temperature	0°C ~ +50°C / +32°F ~ +122°F
	Operating Humidity	15%~85%
Camera	Imaging Sensor Type	CMOS
	Picture Total Pixels	640 x 480
	Minimum Illumination	OLux (IR ON) 5Lux(IR OFF)
	Night Vision Distance	5m(Min.)
	View Angle	55°
	Bandwidth	3MHz
	Sound Detection Sensitivity	<-38dB
	Consumption Current(Max.)	500mA
	Power Supply	5V _{pc}
	Dimensions(W x D x H)	112 x 109 x 133mm
	Weight(About)	420g
Receiver	LCD Screen Type	2.36 " TFT-LCD
	Effective Pixels	480(R.G.B) x 234
	Receiving Sensitivity	-80dBm
	Consumption Current(Max.)	200mA
	Battery Working Time	3 hours
	Power Supply	5V _{pc}
	Dimensions(W x D x H)	68 x 149 x 26 mm
	Weight(About)	135 g

* Actual transmission range may vary according to weather, location, interference and building construction. * All the specification are subject to minor change without prior notice.

Manufacturer: Shenzhen Gospell Smarthome Electronic., LTD ADD:F/12 F518 Idea Land Baoyuan Road Baoan Central

Area shenzhen City P.R China



Operation Guide

2.4GHz Digital Solution Wireless Remote Pan/Tilt Camera Kit Model No.: 8229JE


Version No.: 1.0 the graphics included are subject to minor change without notice

PACKING LIST

- 2.4GHz wireless camera x 1
- ② 2.4GHz wireless receiver x 1
- ③ Adapter for camera x 1
- ④ Adapter for receiver x 1
- ⑤ AV cable x 1
- ⑥ Earphone x 1



DIAGRAM

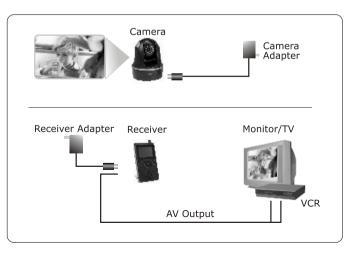


STRUCTURE






INSTALLATION

1. Locate the camera to a specific position.

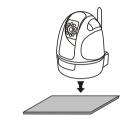


2. Connect the camera to the adapter and then slide the power switch to **ON** position. The power indicator lights up.

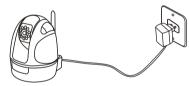

Connect the receiver to the adapter and slide the power switch to ON position.




Notes: * This receiver can also work on dry battery. Please load 4 AAA batteries to the battery compartment with their polarities matched. * the AC adapter will work instead of batteries after it is plugged. If the receiver is left unused for a long time, please unplug the adapter and remove the batteries.

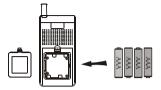


4. Code checking *

By pressing the Channel button on the receiver and at the same time press the Learning Key on back of the camera, you may see the Code Checking indicator sparking for about 5 seconds, once it turned off itself, it means the Code Checking press has well done, and the picture will show up on the LCD screen.

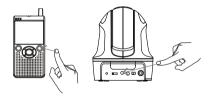

5. Adjust the brightness and volume of the receiver to a satisfied level.

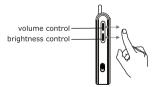

Declaration of Conformity

Hereby, ShenZhen Gospell Smarthome Electronic Co., Ltd., declares that this device is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference

to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.

-Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

To assure continued compliance, any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. (Example- use only shielded interface cables when connecting to computer or peripheral devices).

Radiation Exposure Statement

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body and must not be co-located or operating in conjunction with any other antenna or transmitter.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Caution!

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user authority to operate the equipment.

The product will not hold to the ears during to the operation.