




DM-10

OEM INTERFACE MANUAL

CONTENTS – OEM INTERFACE MANUAL


1. DM10 TRANSCEIVER MODULE OUTLINE DRAWING.....	5
1.1. MECHANICAL.....	8
1.2. ELECTRICAL	11
1.2.1. ELECTRICAL PERFORMANCE	13
1.2.2. MOBILE STATION POWER CLASS.....	13
1.3. POWER CONSUMPTION.....	15
1.3.1. TRANSMIT/TALK MODE	15
1.3.2. STANDBY MODE	16
1.3.3. SLEEP MODE (MINIMUM DC POWER CONSUMPTION)	16
2. ABSOLUTE MAXIMUM RATINGS.....	17
3. SAFETY	18
3.1. EXPOSURE TO RADIO FREQUENCY ENERGY	18
3.2. MODULE OPERATION	19
3.3. POSTED FACILITIES	19
3.4. ELECTRONIC DEVICES.....	19
3.5. BLASTING AREAS.....	20
3.6. POTENTIALLY EXPLOSIVE ATMOSPHERES	20
3.7. VEHICLES.....	21
3.8. FOR VEHICLES EQUIPPED WITH AN AIRBAG	21
3.9. RESPONSIBLE USE	21
4. TECHNICAL SPECIFICATIONS.....	27
4.1. GENERAL	27
4.2. RECEIVER SECTION.....	28
4.3. TRANSMITTER SECTION	29
4.4. CONNECTORS.....	30
4.4.1. 30-PIN INTERFACE CONNECTIONS	30
4.4.2. RF INTERFACE CONNECTOR.....	32
4.4.3. DETAILED SIGNAL DESCRIPTIONS	33
4.4.4. SYSTEM CONNECTOR CMOS INTERFACE LEVELS	40
4.4.5. ACCESSORY CONNECTOR.....	41
4.4.6. SYSTEM CONNECTOR.....	42

1. DM10 Transceiver Module Outline Drawing

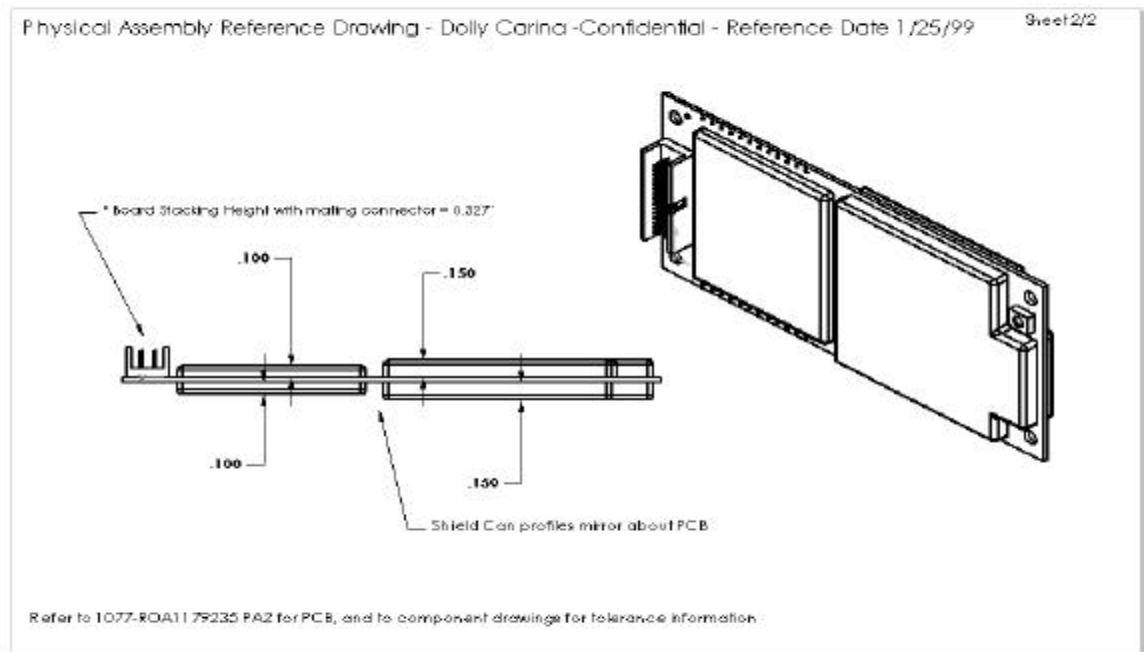

1.1. Mechanical


The DM-10 module has no mechanical elements other than the main PCB assembly. All critical electronic components are shielded using sheet metal cans to prevent internal/external electromagnetic interference from degrading the module's performance and to prevent the module from interfering with other nearby devices. The following figure shows a typical mounting configuration of the module with the main motherboard assembly. The module is plugged into the fixed mating connector and secured with four screws to the standoff components.

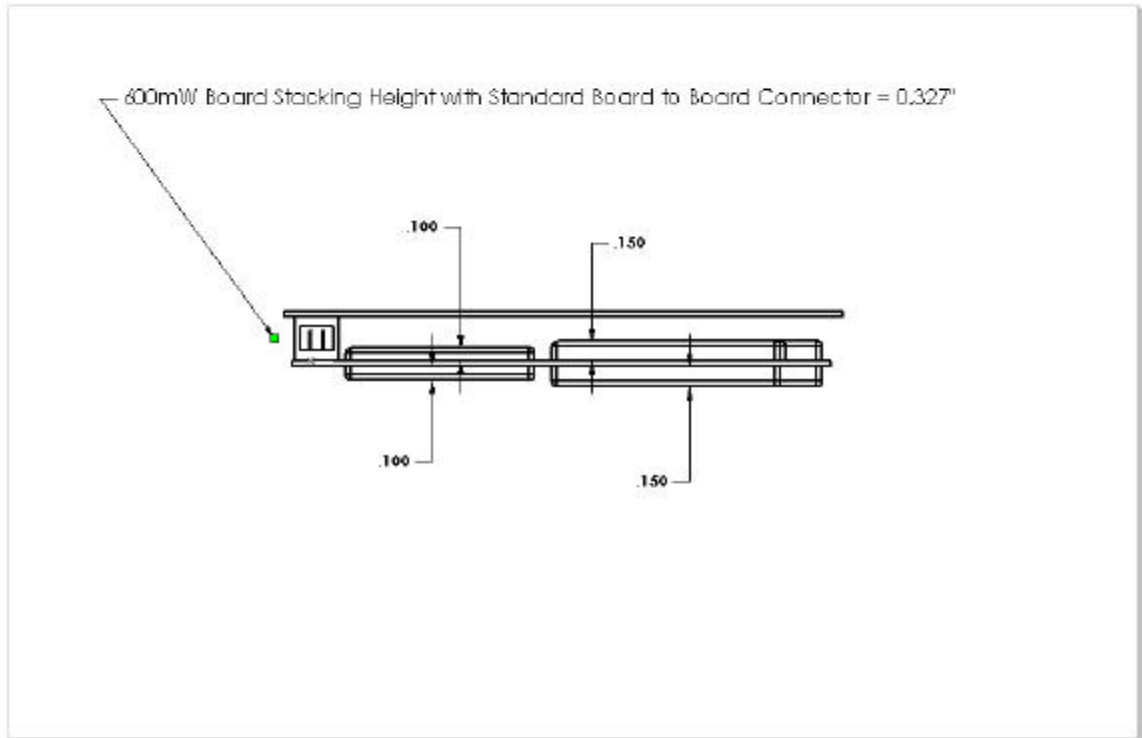

1.2. Electrical

The diagram below shows an overview of the electrical interface between the DM-10 module and a typical application.

DM-10 Electrical Interface

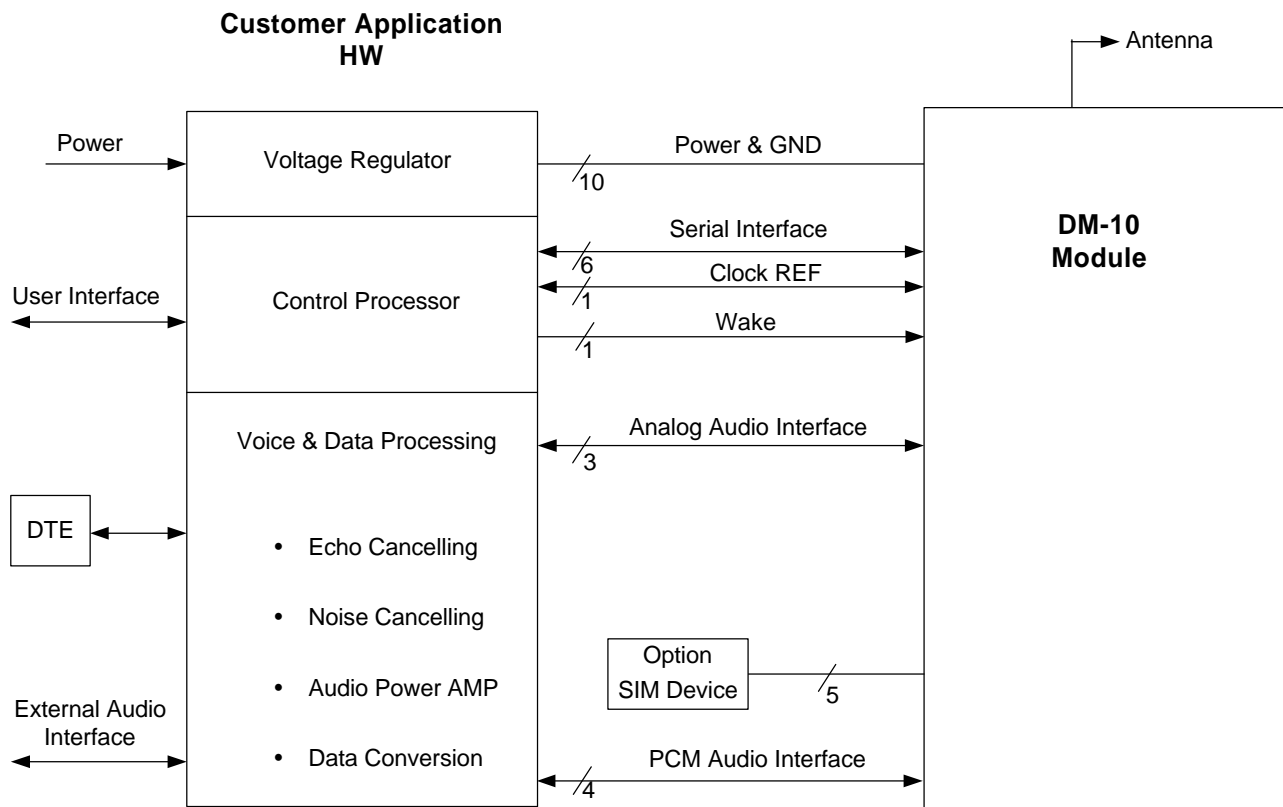

1.2.1. Electrical Performance

Electrical performance parameters are valid only when the terminating impedance at the output of the antenna connector exhibits a VSWR of less than 2:1 for all phase angles in the frequency band of operation. High VSWR loads at the antenna connector adversely affect current consumption, linearity, and power efficiency of the module and may prevent operation or cause internal damage.

The RF performance of the DM-10 fully meets the following specifications:

- IS-136 TDMA Cellular mode – Per IS-137 specification
- 553 AMPS Cellular mode – Per IS-19 specification

Exhibit 8: OEM Interface Manual

- CDPD Mode – Per Cellular Digital Packet Data (CDPD) System Specification, Release 1.1, 19 January 1995 (CDPD will be supported in a future release of the DM10).

1.2.2. Mobile Station Power Class

The module is able to operate in several modes and different output power levels. Typical applications require output power levels similar to those in a handheld cellular phone (600-mW nominal) which is considered a power class IV unit for dual mode operation. It is possible to increase the output power level to that of a class I unit (4 W nominal) during the 5 second analog burst data mode. The table below shows the nominal output power levels (Effective Radiated Power, assuming an antenna system gain of 1 dBd (3.15 dBi) [2.5 dBd (4.65 dBi) antenna gain with 1.5 dB cable loss]).

Mobile Station Nominal Power Levels

	Mobile Station Power Level (dBW)										
	0	1	2	3	4	5	6	7	8	9	10
Class I	6	2	-2	-6	-10	-14	-18	-22	-22	-22	-22
Class IV	-2	-2	-2	-6	-10	-14	-18	-22	-27±3	-32±4	-37±5

*Note: Output power levels maintained within range of +2 / -4 dB unless otherwise noted

Power levels 8-10 valid for digital mode only

1.3. Power Consumption

1.3.1. Transmit/Talk Mode

DC current in mA		AMPS Mode	IS-136 Mode	CDPD Mode
600 mWatt	Peak	617	590	590
	RMS	617	355	355
3 W Burst	Peak	1810	-	-

1.3.2. Standby Mode

DC current in mA		AMPS Mode	IS-136 Mode	CDPD Mode
RMS		36	15	15

1.3.3. Sleep Mode (Minimum DC Power consumption)

A power down or "sleep mode" is available in which the module is placed in a low power consumption state under control of the host application. In this mode, the unit consumes approximately TBD uA of current as measured from the VCC_6V supply input on pin 1 of the system connector. A logic level "0" on pin 19 of the system connector returns the unit to full operation although there may be a significant delay while the module reestablishes registration with the cellular network

2. Absolute Maximum Ratings

Parameter	Rating	Units
Supply voltage		
6.0 volts	5.2-6.8	Volts
13.6 volts	10.88-16.32	Volts
Operating temperature	-40 to +70	°C
Storage temperature	-40 to +85	°C

3. Safety

3.1. Exposure to Radio Frequency Signals

This OEM module is a low power radio transmitter and receiver. The module is not designed as or to be configured as a hand held device. Use as a portable transmitter will require separate FCC approval for SAR compliance. Typical usage of this OEM module includes:

- remote electrical meter reading
- telematic communication for vehicles
- fixed wireless terminals

Warning:

1. At no time is the antenna to be located closer than 20 centimeters to a normally occupied location.
2. At no time should an antenna system with greater than 1.0 dBd (3.15 dBi) gain be used with this module in any normally occupied area. The recommended antenna system configuration is a standard automotive antenna with 2.5 dBd (4.65 dBi) antenna gain and 1.5 dB cable loss.

3.2. Module Operation

Safe and efficient use of this module requires a properly terminated antenna. DO NOT operate the module with a damaged or missing antenna, replace a damaged or missing antenna immediately otherwise damage to the module may result and could violate FCC regulations. DO NOT operate this device within 8 inches (20 cm) of a person unless proper shielding from the antenna is installed.

3.3. Posted Facilities

Do not operate this device where posted notices require wireless devices to be turned off.

3.4. Electronic Devices

Most electronic equipment is shielded from RF signals. However, certain electronic equipment may not be shielded properly against RF signals.

Pacemakers

The Health Industries Manufacturers Association recommends that a minimum separation of six (6) inches be maintained between a wireless transmitter and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research and recommendations of Wireless Technology Research. Persons with Pacemakers should always keep the antenna/module more than 6 inches from their pacemaker when the module is on; if you have a reason to suspect that interference is taking place, turn off the module immediately.

Hearing Aids

Some digital wireless devices may interfere with some hearing aids.

Other Medical Devices

If you use any other type of personal medical device in the presence of this transceiver, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

3.5. Blasting Areas

To avoid interfering with blasting operations, turn your module off when in a “blasting area” or in areas posted: “Turn off two-way radio”. Obey all signs and instructions.

3.6. Potentially Explosive Atmospheres

Turn your module off when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Areas with a potentially explosive atmosphere are often, but not always, clearly marked. They include such areas as gasoline stations; below deck on boats; fuel or chemical storage or transfer facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or particles, such as grain dust or metal powders; and any other area where you would normally be advised to turn off your vehicle engine.

3.7. Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

3.8. For Vehicles Equipped with an Airbag

An airbag inflates with a great force. Do not place objects including both installed or portable wireless equipment in the area over the airbag or in the airbag deployment area. If in-vehicle wireless equipment is improperly installed and the airbag inflates, serious injury could result.

3.9. Responsible Use

OEM Manufacturers providing telematic devices for vehicular use are encouraged to incorporate the following CTIA guidance for safe and responsible wireless phone use into their user’s manuals:

A Guide to Safe and Responsible Wireless Phone Use

TENS OF MILLIONS OF PEOPLE IN THE U.S. TODAY TAKE ADVANTAGE OF THE UNIQUE COMBINATION OF CONVENIENCE, SAFETY AND VALUE

DELIVERED BY THE WIRELESS TELEPHONE. QUITE SIMPLY, THE WIRELESS PHONE GIVES PEOPLE THE POWERFUL ABILITY TO COMMUNICATE BY VOICE--ALMOST ANYWHERE, ANYTIME--WITH THE BOSS, WITH A CLIENT, WITH THE KIDS, WITH EMERGENCY PERSONNEL OR EVEN WITH THE POLICE. EACH YEAR, AMERICANS MAKE BILLIONS OF CALLS FROM THEIR WIRELESS PHONES, AND THE NUMBERS ARE RAPIDLY GROWING.

But an important responsibility accompanies those benefits, one that every wireless phone user must uphold. When driving a car, driving is your first responsibility. A wireless phone can be an invaluable tool, but good judgment must be exercised at all times while driving a motor vehicle--whether on the phone or not.

The basic lessons are ones we all learned as teenagers. Driving requires alertness, caution and courtesy. It requires a heavy dose of basic common sense---keep your head up, keep your eyes on the road, check your mirrors frequently and watch out for other drivers. It requires obeying all traffic signs and signals and staying within the speed limit. It means using seatbelts and requiring other passengers to do the same.

But with wireless phone use, driving safely means a little more. This brochure is a call to wireless phone users everywhere to make safety their first priority when behind the wheel of a car. Wireless telecommunications is keeping us in touch, simplifying our lives, protecting us in emergencies and providing opportunities to help others in need. When it comes to the use of wireless phones, safety is your most important call.

Wireless Phone "Safety Tips"

Below are safety tips to follow while driving and using a wireless phone, which should be easy to remember.

- 1. Get to know your wireless phone and its features such as speed dial and redial.** Carefully read your instruction manual and learn to take advantage of valuable features most phones offer, including automatic redial and memory. Also, work to memorize the phone keypad so you can use the speed dial function without taking your attention off the road.
- 2. When available, use a hands free device.** A number of hands free wireless phone accessories are readily available today. Whether you choose an installed mounted device for your wireless phone or a speaker phone accessory, take advantage of these devices if available to you.
- 3. Position your wireless phone within easy reach.** Make sure you place your wireless phone within easy reach and where you can grab it without removing your eyes from the road. If you get an incoming call at an inconvenient time, if possible, let your voice mail answer it for you.
- 4. Suspend conversations during hazardous driving conditions or situations.** Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow and ice can

be hazardous, but so is heavy traffic. As a driver, your first responsibility is to pay attention to the road.

- 5. Do not take notes or look up phone numbers while driving.** If you are reading an address book or business card, or writing a "to do" list while driving a car, you are not watching where you are going. It's common sense. Don't get caught in a dangerous situation because you are reading or writing and not paying attention to the road or nearby vehicles.
- 6. Dial sensibly and assess the traffic;** if possible, place calls when you are not moving or before pulling into traffic. Try to plan your calls before you begin your trip or attempt to coincide your calls with times you may be stopped at a stop sign, red light or otherwise stationary. But if you need to dial while driving, follow this simple tip--dial only a few numbers, check the road and your mirrors, then continue.
- 7. Do not engage in stressful or emotional conversations that may be distracting.** Stressful or emotional conversations and driving do not mix--they are distracting and even dangerous when you are behind the wheel of a car. Make people you are talking with aware you are driving and if necessary, suspend conversations, which have the potential to divert your attention from the road.
- 8. Use your wireless phone to call for help.** Your wireless phone is one of the greatest tools you can own to protect yourself and your family in dangerous situations--with your phone at your side, help is only three numbers away. Dial 9-1-1 or other local emergency number in the case of fire, traffic accident, road hazard or medical emergency. Remember that it is a free call on your wireless phone!
- 9. Use your wireless phone to help others in emergencies.** Your wireless phone provides you a perfect opportunity to be a "Good Samaritan" in your community. If you see an auto accident, crime in progress or other serious emergency where lives are in danger, call 9-1-1 or other local emergency number, as you would want others to do for you.
- 10. Call roadside assistance or a special wireless non-emergency assistance number when necessary.** Certain situations you encounter while driving may require attention but are not urgent enough to merit a call for emergency services. But you still can use your wireless phone to lend a hand. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number.

Careless, distracted individuals and people driving irresponsibly represent a hazard to everyone on the road. Since 1984, the Cellular Telecommunications Industry Association and the wireless industry have conducted educational outreach to inform wireless phone users of their responsibilities as safe drivers and good citizens. As we approach a new century, more and more of us will take advantage of the benefits of wireless telephones. And, as we take to the roads, we all have a responsibility to drive safely.

4. Technical Specifications

4.1. General

All ratings @12V supply unless otherwise specified

Parameter	Conditions	Min	Typ	Max	Unit
Frequency range	Transmit	834.390		835.620	MHz
	Receive	879.390		880.620	MHz
Channel spacing			30		kHz
Number of channels			42		
Supply voltage		+8.5		+18	Volts
Supply voltage ripple	10 Hz to 200 kHz			200	mV
Supply current	Sleep ¹		12	15	mAmps
	Standby ²		25	50	mAmps
	Transmit ³		1300	1800	mAmps
Operating Temperature		-40		+60	°C
Antenna port impedance			50		Ohms

Notes

1. In sleep mode neither the receiver nor the transmitter is operating. The communications interface is completely operational.
2. When receiving a relatively strong signal (>-100 dBm), the typical current is approximately 25 mA. When the signal strength is less than -100 dBm, the operating current is approximately 45 mA.
3. Typical operating current during transmit mode is approximately 1300 mA. The current required in this mode is sensitive to the quality of the antenna termination impedance. With a poorly matched antenna, the operating current can approach 2 Amps. Note that a transmission lasts approximately 118 milliseconds.

4.2. Receiver Section

Parameter	Conditions	Min	Typ	Max	Units
Sensitivity ¹				-116	dBm
Adjacent channel rejection		16			dB
Alternate channel rejection		60			dB
Intermod rejection		65			dB
RSSI range (digital)		-116		-60	dBm
RSSI accuracy (digital)			+/- 3		dB
RSSI range (analog)		0.75		1.75	volts

Notes

- ¹ Sensitivity is measured with respect to an analog test point after demodulation of the received signal. External filtering is applied to make the test consistent with sensitivity tests typically

Exhibit 8: OEM Interface Manual

performed on cellular telephones (as per IS-19B). The criteria for this test is > 12 dB SINAD for a 1 kHz audio tone modulating the carrier to 8 kHz peak deviation.

4.3. Transmitter Section

Parameter	Min	Typ	Max	Units
Power output ¹	0.0063		3	Watts (nom)
Transmission duty cycle			2.5	%
Peak Deviation		+/- 8		kHz
Frequency Stability	- 2.5		+ 2.5	ppm
Carrier switching time			2	msec
Channel switching time			40	msec
Power levels (per CMAC)		8		(pwr levels 0-7)

Notes

¹ The actual power output is controlled by the AMPS system via the CMAC register in the overhead control message. Per EIA/TIA-553, the output power varies from +8 dBm to +36 dBm, in 4 dB steps.

4.4. Connectors

4.4.1. 30-pin Interface Connections

Pin	Signal Name	Description	TYPE
1	GND	Chassis Ground	-
2	GND/AD_in	Chassis Ground (optionally A/D input)	-/I
3	AFMS	Audio from module	O
4	GND	Chassis Ground	-
5	AGND	Analog ground	-
6	ATMS	Audio to module	I
7	OUT2 *	Reserved	O
8	WAKE	Switches the main voltage regulator on/off	I
9	IN2 *	Reserved	I
10	OUT1 *	Reserved	O/I
11	VDD *	Logic reference	O
12	IN1 *	Reserved	I
13	PCMCLK	PCM Clock output	O
14	PCMSYNC	PCM Frame sync	O
15	PCMULD	PCM Voice input	I
16	PCMDLD	PCM Voice output	O
17	GND	Chassis Ground	-
18	GND	Chassis Ground	-
19	DCD/VppFlash	Data Carrier Detect and Flash Programming Voltage Input	O/I
20	REF_CLK	19.44 MHz reference clock output	O

Exhibit 8: OEM Interface Manual

Pin	Signal Name	Description	TYPE
21	CTS	Clear to send	O
22	DTR	Data Terminal Ready	I
23	TD	Serial data to module	I
24	RTS	Request to Send	I
25	VCC_12V	12 vdc supply (needed only for 3 Watt burst applications)	I
26	RD	Serial data from module	O
27	VCC_12V	12 vdc supply (needed only for 3 Watt burst applications)	I
28	VCC_12V	12 vdc supply (needed only for 3 Watt burst applications)	I
29	VCC_6V	6 vdc regulated supply voltage	I
30	VCC_6V	6 vdc regulated supply voltage	I

* Pin used for SIM Interface in GSM based products. Pin function reserved for future use by U.S. products.

Notes

In modem mode, pin 8 is configured as an output and indicates whether a message is stored in the output buffer. In standalone mode, pin 8 is configured as an input and is used to warn the transceiver of an impending power failure.

4.4.2. RF Interface Connector

Radio frequency (RF) signals from the module to the external, customer-supplied antenna are made through a surface mount, microminiature snap-on M/A-COM connector. A wide variety of compatible mating connectors is available. A Pigtail assembly and the inter-series cable assembly from M/A-COM are two options. Since the mating connector can rotate through 360°, the application developer has maximum flexibility for routing the RF coax assembly. The total height of the mated M/A-COM RF connectors is 0.12 inches.

4.4.3. Detailed Signal Descriptions

DGND	This is the supply voltage return (VCC_6V and VCC_12V)		
A/D_in		Minimum	Maximum
	Input voltage for 0000 0000 word		0.05V
	Input voltage for 1111 1111 word	3.25V	
	Linearity	± 0.5 LSB	
	Absolute accuracy	-10mV	+10mV
	Conversion time to within 0.5 bit	5μ sec	
	Input impedance	1MΩ	
	External source impedance		

Exhibit 8: OEM Interface Manual

AFMS	Module audio output Output Impedance (active state) Output Impedance (inactive state) Output Impedance (pwr down state) Drive capacity into 50 Ω Drive capacity into 5 k Ω	(0.3 – 3.5 kHz) $Z_{out} < 10 \Omega$ in series with $\geq 3.3 \mu F$ (-20%) $Z_{out} < 10 \Omega$ to VDD/2 $Z_{out} > 30 k\Omega$ 1.1 V _{P-P} min. 2.0 V _{P-P} min./ 4.0 V _{P-P} max.
	External Device audio input Input Impedance	$Z_{in} > 50 \Omega$
	Volume control	± 12 dB from nominal > - 40 dB (mute)
	Levels to external audio input	28 mVrms nominal 450 mVrms max.
ATMS	All sources must be AC coupled except for a microphone device. External audio source should be DC coupled in order for module to supply DC power to microphone.	
	External audio source Output impedance (active state) Output impedance (inactive state)	$Z_{out} \leq 100 \Omega$ $Z_{out} > 10 k$
	Module audio input Input impedance Output DC level unloaded for external audio source power	$Z_{in} > 2 k\Omega$ 2.0 V min.
	Levels from external audio source HGA = 0	45 mVrms nominal 340 mVrms max.
	Audio input signal is amplified an additional 32 db and a DC bias is provided to the microphone when HGA = 1	1.5 mVrms nominal
OUT1, OUT2	CMOS open drain output with 1 mA drive (See Section 4.3.4)	
WAKE	TTL compatible active low input (WAKE pin is tied to VDD through 51k Ω resistor, recommend open collector/drain transistor)	
I_01, I_03	CMOS bi-directional, tri-state output with 2mA drive (See Section 4.3.4)	
VDD	2.7 Vdc min 3.4 Vdc nominal 5.5 Vdc max	
PCMCLK	(See Section 4.3.4)	
PCMSYNC	(See Section 4.3.4)	
PCMULD	(See Section 4.3.4)	
PCMDLD	(See Section 4.3.4)	
DCD/VppFlash	(See Section 4.3.4)	
	VppFlash programming voltage. Capability = 60 ma min	11.8 – 12.2 Vdc
REF_CLK	Frequency	19.44 MHz this output is switchable
	Output Level	0.7 min 1.0 typ 1.4 max volts _{P2P}
	Harmonic Content	-10dBc max
RTS, CTS, DTR	(See Section 4.3.4)	

Exhibit 8: OEM Interface Manual

RD,TD	(See Section 4.3.4)
VCC_12V	13.6 volt \pm 20%, 1.5 A max
VCC_6V	6 volt \pm 13.3% regulated, 1A max

4.4.4. System Connector CMOS Interface Levels

Quantity	Symbol	Limits			Units
		Min	Typ	Max	
High level output voltage (I_{OH} = rated)	V_{OH}	0.9 *VDD		VDD	Volts
Low level output voltage (I_{OL} = rated)	V_{OL}	0		0.1.*VDD	Volts
High level input voltage	V_{IH}	0.8 *VDD		VDD	Volts
Low level input voltage	V_{IL}	0		0.2 *VDD	Volts

4.4.5. Accessory Connector

Connections to an optional accessory board are made through a 14-pin accessory connector. Add-on accessories under consideration include a GPS receiver, a Bluetooth transceiver, and a CeBus transceiver

16-Pin Accessory Connector Functions

Connector / Pin	Signal Name	Description
X353 / 1	VCC_6V	6 VDC supply input
X353 / 2	GND	Digital ground
X353 / 3	CLKREQ	Request from accessory to keep providing reference clock
X353 / 4	ARESET	Reset signal to accessory
X351 / 1	ASYNC	Request from accessory for frame sync
X351 / 2	TBD	SPARE
X351 / 3	IU3T	DTMS
X351 / 4	IU3R	DFMS
X351 / 5	ADATAUP	Data to accessory (PCM link)
X351 / 6	APCMSYNC	Sync line (PCM link)
X351 / 7	APCMCLK	Clock line (PCM link)
X351 / 8	ADATDOWN	Data from accessory board (PCM link)
X351 / 9	ASYSCLK	19.44 MHz reference clock to accessory
X351 / 10	AWAKE	Wake-up signal to accessory
X351 / 11	IU2T	IU2T
X351 / 12	IU2R	IU2R

4.4.6. System Connector

External interfaces to the module are made primarily through a 30-pin, standard 0.050 inch pitch, ODU header shown.