


## Dialock Furniture Safe

### Areas of application



- For use with all Dialock solutions
- Added functions within Complete Solution
- For use with Dialock Tiris Transponders
- Protection of valuable items in the hotel, office, spas, clinics, residential and other buildings

### Function

- The locking action is activated if an authorized electronic key is presented to the reader module.

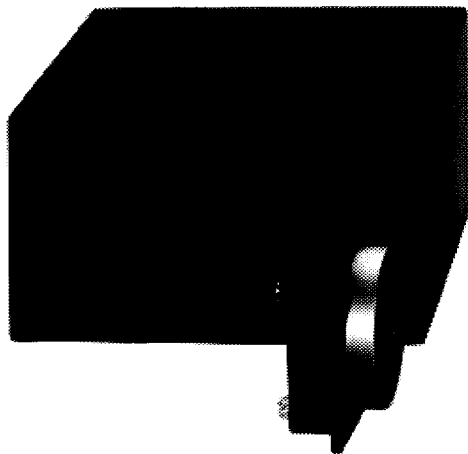

Model DMT 32

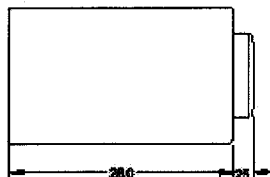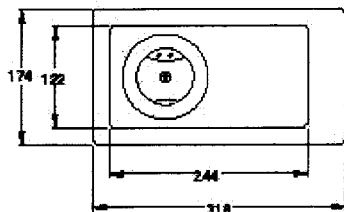

### Features

- Electro-mechanical locking

### Electronic control unit:

- Reader module for data exchange with electronic keys
- Reader Module is activated by pressing a button
- LEDs red/green for visual indication of programming process/locking status/battery status
- Audit Trail-stores up to 150 access attempts \*
- Integrated real-time clock for the programming of time limited locking authorization \*
- Infrared interface for communication with mobile programming devices \*

### Power

- Uses 4 AA alkaline high-performance batteries-1.5V
- Battery change after approx. 6000 locking cycles or 2 years
- If batteries are dead, reader module can be powered by attaching the external batteries

### Configurations

- Simple solution - Please order programming key sticks separately.
- \*Complete solution - Please order programming key sticks separately.

### Finish

- Single walled carbon steel
- Color: RAL 9005 (deep black) paint

### Technical data

Weight:	16 kg
Wall Thickness:	2 mm
Thickness of front panel and door :	6 mm
Number of locking bolts:	2

### Installation

With 2 bolts, the safe can be attached to the wall or to the floor

### Supplied with

- Safe
- 4 batteries- AA alkaline high-performance 1.5V
- External emergency power supply

**Model No:** DMT 32

**Cat. No.** 836.46.911

Packing: 1 pc.

# HÄFELE

Locks, Catches, RTA  
and PAS® Fittings  
Shelf Supports  
Bed Fittings

## 2

## Dialock Furniture Safes

Programming keys  
sticks.....page 2.69


**For details contact  
dialock Department  
Architectural Products Group  
1-888-437-7477 or  
+1-336-889-2322**

Dimensional data not binding.  
We reserve the right to alter  
Specifications without notice.

2.71B

**Montageanleitung**  
**Mounting instructions**  
**Instructions de montage**  
**Istruzioni di montaggio**  
**Instrucciones de instalación**

  
**diaLock**  
**HÄFELE**

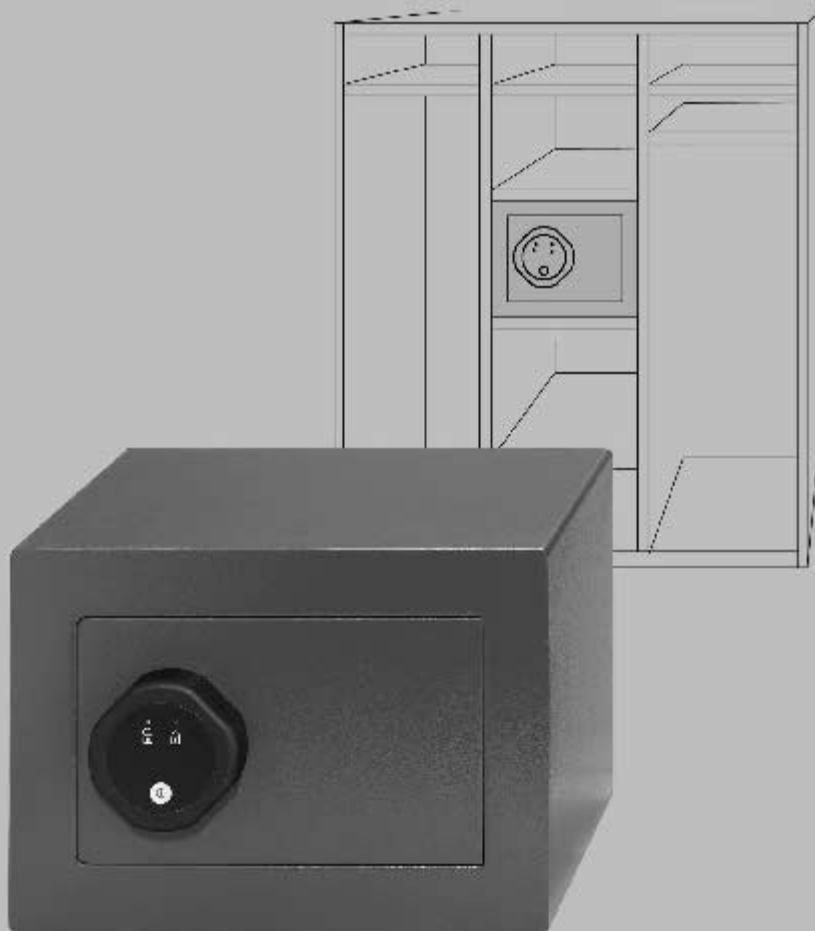

**Tresor TM3, TM4**

**Safe TM3, TM4**

**Coffre-fort TM3, TM4**

**Cassaforte TM3, TM4**

**Caja fuerte TM3, TM4**

**Technical information**

All safes are supplied in the basic method of operation.

In this method of operation, locking authorisations can be allocated to personnel keys directly at the safe with a special programming key stick (green). The locking authorisations are withdrawn again directly at the safe with a clearing key stick (red).

Guest keys are authorised via the software Hotel.

The configuration takes place when the system is initiated.

Technical data:


weight	
TM3	13 kg
TM4	19 kg, with removable shelf (sheet steel)
thickness of steel material	2 mm, single walled
thickness of front plate and door	6 mm
safety level	A according to VDMA, norm 24992
number of locking bolts	2

## Supply schedule


- safe
- safe TM4: removable shelf (sheet steel)
- four Mignon-1,5-V-batteries (already inserted)
- battery holder TRE emergency power supply

## Installation


The safe is designed for installation into furniture.

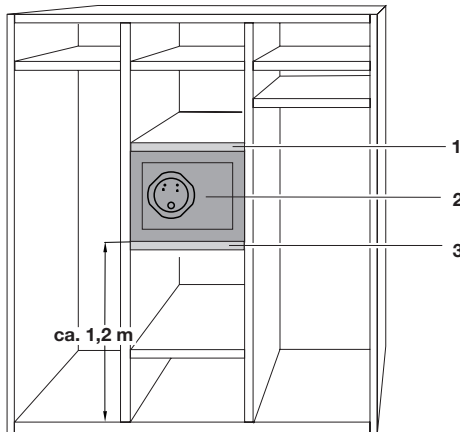

- 1 end plate (19 mm thick)
- 2 safe
- 3 base plate (35 to 40 mm thick)

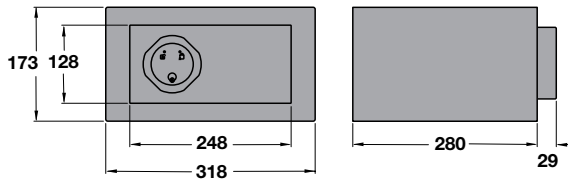

*Built-in dimensions of safe TM3*

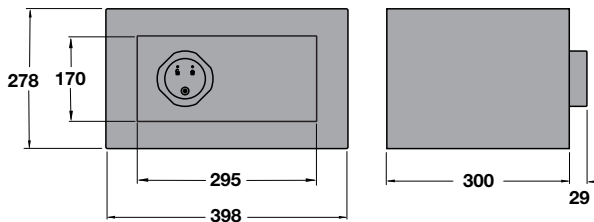

*Built-in dimensions of safe TM4*

1. Glue and screw fix the base plate to the side panels of the cabinet at approx. 1.2 m above the cabinet base.
2. Glue and screw fix the end plate to the side panels of the cabinet above the base plate.
3. Insert the safe.

### **Screw fix the safe in the cabinet**

1. For screw fixing to the rear panel of the cabinet: from the inside of the safe, push two screws through the 10 mm drillings in the back panel of the safe and screw fix the safe to the cabinet.
2. For screw fixing to the base plate: from the inside of the safe, push four screws through the 8 mm drillings in the base of the safe and screw fix the safe to the base plate.

## Initiation

### **Allocation of programming and clearing key stick**

In the basic method of operation, the programming and clearing key sticks must be allocated during the first initiation.

Avoid misuse of the electronic keys by unauthorised persons: keep the programming and clearing key sticks in a safe place, as these will allow allocation of locking authorisations to an electronic key.

1. Have the green programming key stick and the red clearing key stick ready.
2. Push the white button on the display of the safe.  
the green indicator (LED) flashes for a few seconds.
3. Hold the green programming key stick in front of the display, whilst the green LED flashes.  
The red indicator (LED) is illuminated once as confirmation of the allocation process, afterwards it flashes.

4. Hold the red clearing key stick in front of the display, whilst the red LED flashes.  
The green indicator (LED) flashes for a few seconds.  
The safe switches off automatically.

If errors occurred during the allocation:

- ⇒ switch the safe back on.
- ⇒ re-allocate the programming and clearing key stick.

If errors re-occur:

- ⇒ contact your Dialock sales office.

## **Brief operating instructions for the basic method of operation**

### **Allocation of locking authorisations to a personnel key**

1. Push the white button on the display.  
The red indicator (LED) is illuminated.
2. Hold the green programming key stick in front of the display.  
The green indicator (LED) flashes.
3. Hold the personnel key to be allocated in front of the display within 5 seconds.  
The green indicator (LED) is illuminated briefly.  
The access authorisation for the personnel key to be allocated has been given.
4. Remove the allocated personnel key.  
The safe switches off automatically.  
  
If the red indicator (LED) is illuminated, the attempt was unsuccessful:  
⇒ repeat the allocation of locking authorisations.
5. Hold the next personnel key to be allocated in front of the display in intervals of 5 seconds.

### **Withdrawal of locking authorisations from the personnel key**

1. Push the white button on the display.  
The red indicator (LED) is illuminated.
2. Hold the red clearing key stick in front of the display.  
The red indicator (LED) flashes.
3. Hold the personnel key to be deleted in front of the display.  
The red indicator (LED) is illuminated briefly.  
The locking authorisation is withdrawn.  
The safe switches off automatically.

### **Withdrawal of locking authorisations from all personnel keys**

When a personnel key is lost and should no longer have any locking authorisations, all personnel keys have to be deleted at the safe. Afterwards, all respective personnel keys re-allocated with locking authorisations.

1. Push the white button on the display.  
The red indicator (LED) is illuminated.

2. Hold the red clearing key stick in front of the display.  
The red indicator (LED) flashes..
3. Hold the green programming key stick in front of the display.  
The red indicator (LED) is illuminated briefly.  
The locking authorisations are withdrawn.
4. Re-allocate locking authorisations to all personnel keys, which need to retain these.

### **Change of batteries**

When the batteries are weak, the red and green indicators (LED) flash alternately once the safe is switched on.

The smooth operation of the safe is only guaranteed, if the batteries are replaced immediately.

1. Open the battery compartment on the inside of the safe door with a cross slot screw driver.
2. Insert four new mignon-1,5-V-batteries (cat. no. 910.54.980). Make sure, the polarity is correct!
3. Close and screw fix the battery compartment.

### **Emergency opening**

1. Connect the battery holder TRE emergency power supply on the underside of the display.
2. Hold the valid key in front of the display.
3. Open the safe door.
4. Change the batteries.






### Operation

Guest keys are allocated automatically, when locking the safe for the first time.




Up to four guest keys can be allocated per safe.

### Locking of the safe

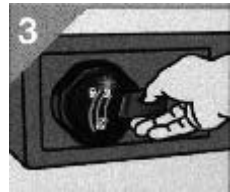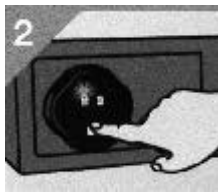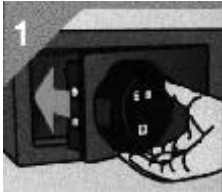

1. Close the safe door.
2. Push the white button on the display.  
The green indicator (LED) is illuminated.
3. Hold the electronic key in front of the safe.  
The green and the red indicators (LED) flash alternately and the bolts move audibly.  
The red indicator (LED) is illuminated.  
The safe is locked.

### Opening of the safe

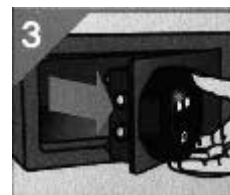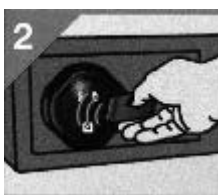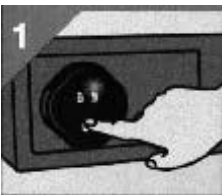

1. Push the white button on the display.  
The red indicator (LED) is illuminated.  
The safe is switched on.
2. Hold the electronic key in front of the safe.  
The green and red indicators (LED) flash alternately and the bolts move audibly.  
The green indicator (LED) is illuminated.
3. Open the safe door.

### **Montaganleitung 732.29.108**

Der Nachdruck der Montageanleitung, auch auszugsweise, oder die Nachahmung der Abbildungen und Zeichnungen sowie die Nachahmung der Gestaltung sind verboten.

Für Druckfehler und Irrtümer, die bei der Erstellung der Montageanleitung unterlaufen sind, ist jede Haftung ausgeschlossen.

Liefermöglichkeiten und technische Änderungen vorbehalten.

Stand 06.00

### **Mounting instructions 732.29.108**

The reprint of the mounting instructions, even extracts, or copying of the illustrations and drawings as well as copying of the layout are prohibited.

No liability is accepted for printing errors or errors occurred during the creation of the mounting instructions.

We reserve the right for technical changes and changes of availability.

Status 06.00

### **Instructions de montage 732.29.108**

Il est interdit de reproduire les instructions de montage ou d'en imprimer des extraits, d'en copier des illustrations et des dessins ou d'en imiter la présentation.

Il ne sera assumé aucune responsabilité quant aux erreurs et fautes pouvant résulter de l'impression de ces instructions de montage.

Tous les droits de possibilités de livraison et de modifications techniques sont réservés.

Version du 06.00

### **Istruzioni di montaggio 732.29.108**

E' vietata la copia delle istruzioni di montaggio, anche soltanto parziale, oppure delle raffigurazioni e dei disegni come anche la riproduzione del layout.

E' esclusa qualsiasi responsabilità nei nostri confronti in caso d'errori di stampa e sbagli, sorti durante la produzione delle istruzioni di montaggio.

Con riserva di ulteriori possibilità di fornitura e di modifiche tecniche.

Stato 06.00

### **Instrucciones del instalación 732.29.108**

Queda rigurosamente prohibida la reproducción total o parcial de esta documentación, así como la imitación de sus ilustraciones, dibujos o diseño.

No nos hacemos responsables en manera alguna de las erratas o equivocaciones que pudieran existir en estas instrucciones de instalación.

Nos reservamos la posibilidad de suministro y los derechos a modificación.

Versión del 06.00

## **Copyright**

### **Häfele GmbH & Co**

Adolf-Häfele-Strasse 1 · D-72202 Nagold

Postfach 1237 · D-72192 Nagold

Telefon +49 (0) 74 52 / 95-0

Telefax +49 (0) 74 52 / 95-200

E-Mail: info@haefele.de · www.haefele.de