



Printed on the recyclable paper Printed in Korea Part No. 942189020001-01

www.hansolel.co.kr

# **FCC** Information

This equipment has been tested and found to comply with limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment can generates, uses, and radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful inteference to radio Communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause unacceptable interference to radio and television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced Radio/TV technician for help.

PRODUCT NAME : 19" COLOR MONITOR MODEL NUMBER : E19BL FCC RULES : TESTED TO COMPLY WITH FCC PART 15, CLASS B OPERATING ENVIRONMENT : FOR HOME OR OFFICE USE FCC COMPLIANCE STATEMENT : This device complies with part 15 of FCC Rules. Operation is subject to the following two conditions : (1) This device may not cause harmful interference, and (2) this device must accept

any interference received, including interference that may cause undesired operation.

THE PARTY RESPONSIBLE FOR PRODUCT COMPLIANCE HANSOL MULTITECH, INC. 7001, VILLAGE DRIVE, SUITE 255, BUENA PARK, CA. 90621, USA TEL : (714)562-5151

## Introduction

. 4
. 4
- 5
. 6
•

### Installation

Connection to your personal computer.		 7
Pin assignment table D-sub mini 15 pin co	nnector	 7

## Controls

OSD Controls	
OSD Menus	

## Troubleshooting

No picture	12
Image is scrolling or unstable	12
Picture is fuzzy	12
Picture bounces or a waving pattern is present in the picture	12
Edges of the display image are not square	12
Display image is not centered, too small, or too large	12

# **Specifications**

Electrical specifications	
Mechanical specifications	
Environmental specification	s

## Appendix

Preset Timings	

#### Caution

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

#### **Canadian Notice**

This Class B digital apparatus meets all requirements of the Canadian Interference Causing Equipment Regulations.

#### **Avis Canadien**

Cet appareil numérique de la classe B respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

#### Notice

The information contained in this document is subject to change without notice.

3

## Package

Congratulations on your purchase of this top quality color monitor!

The items illustrated below are contained in the carton.

First, be sure that your carton includes all of them.

If any items are missing or damaged, please contact your local dealer or supplier.

- Color Monitor

- AC Power input cable
- User's Manual

# Safety information

 Provided with this monitor is a detachable power supply cord with IEC320 style terminations. It may be suitable for connection to any UL listed personal computer with similar configuration. Before making the connection ensure that the voltage rating of the computer convenience outlet is the same as the monitor and that the ampere rating of the computer convenience outlet is equal to or exceeds the monitor current rating.

For 120Volt applications use only UL listed detachable power cord with NEMA configuration 5-15P type(parallel blades) plug cap.

For 240Volt applications use only UL listed detachable power cord with NEMA configuration 6-15P type(tandem blades) plug cap.

- Use only a power source and connection appropriate for the monitor as indicated on the marking label.
- Slots and openings in the cabinet are provided for ventilation; these openings must not be blocked or covered. Never push objects of any kind into cabinet slots or other openings.
- Never insert anything metallic into the monitor openings. Doing so may create a danger of electric shock.
- To avoid electric shock, never touch the inside of the monitor.
  Only a qualified technician should open the monitor's case.
- Unplug the monitor from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp, lint-free cloth for cleaning.
- Install the monitor near an outlet that you can reach easily. Disconnect the product by grasping the plug firmly and pulling in from the outlet.
   Never disconnect it by pulling the cord.

# Features

# Superior image

- On Screen menu fingertip control system to visually select and adjust screen using buttons on front panel and on screen menus.
- The exclusive double dynamic focus system with a hyperbolic focus compensation circuit controls the electron beams resulting in a fine image display over the entire area of the screen.
- Super contrast screen for superior contrast and richer color.
- Advanced INVAR Shadow mask for superior focus, brightness and color.
- 19", 0.26dot pitch high resolution, non-interlaced technology provides sharp, flicker-free images.
- On screen menu color control system easily allows the white of the image to be adjusted as well as R.G. B signals, resulting in true-to-life colors.

# Ergonomic Design

- Flat, square screen to reduce image distortion and glare, thus relieving eye strain.
- Tilt base allowing 90° rotation in the horizontal and 17° in the vertical for greater user comfort.
- Low-leak radiation prevention meeting MPR **I** and the very stringent TCO (option) magnetic field emissions standards for increased user safety.

# Environmentally Friendly

- Power management circuit conforming to VESA DPMS standards controls energy consumption when monitor is not in use, you save energy.
- All plastic parts are recyclable. All materials are strictly selected to ensure ease of maintenance, inspection and disposal.

## Timing

- Automatic tracking of horizontal frequencies of 30 ~ 85 kHz, and vertical frequencies of 47 to 160 Hz.
- Ten timings are factory preset for image size and position
- Ten additional timings are user definable.
- Synchronizing input signals (separate, composite) can be automatically selected.

5

Installation

#### System Flexibility

- Equipped with DDC1, DDC2B and DDC2Bi for Plug & Play compatibility.
- Monitor is compatible with VGA, SVGA, VESA and high resolution video modes up to 1280(H) ×1024(V) @ 75Hz
- Monitor may be used with IBM or compatible PC, MAC.
- Automatic universal power supply is built in permitting AC power input of 100 240V AC, 50 or 60Hz.
- Self-test menu allows the display unit to be checked on screen without connecting to a computer.
- Compact case minimizes desktop space giving you a large screen image without loss of workspace.
- Power cable included easily plugs into a standard outlet.

### Power management system

This monitor complies with VESA, Nutek, and Energy Star power saving requirements. The power saving system works only when used with VESA DPMS compliant PC's and/or graphic controllers.

State	LED	Power	Recovery Time
On	Green	Normal (95 Watts)	N/A
Stand by	Green	< 65 Watts	< 2 Sec
Suspend	Green/Blink(0.5 Sec)	< 15 Watts	< 5 Sec
Off	Green/Blink(1Sec)	< 5 Watts	< 15 Sec

The monitor goes into various power saving stages depending on the incoming video signal as shown in the following table

State	Horizontal Sync	Vertical Sync
On	On	On
Stand by	Off	On
Suspend	On	Off
Off	Off	Off


#### Note

The monitor automatically goes through the DPMS steps when it is idle. To release the monitor from the DPMS condition, press any key on the keyboard or mouse.

## Connection to your computer

### A CAUTION

Ensure that both the PC and the display monitor are switched off.

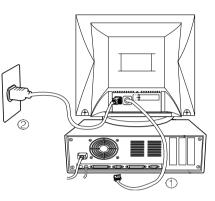

To attach the monitor to your system, as shown in the following illustrations.


- Insert the AC power cord ⊘into monitor and then into an AC power outlet.
- Connect the signal cable ① to the 15pin graphics connector of the system and tighten the fastening screws.
- 3. To turn on the monitor, push the power switch.

Note : To attach the monitor to the Macintosh system, please contact an authorized dealer.(Need to use a special adaptor)

# Pin assignment table D-Sub Mini 15pin connector

Pin No.	Assignment
1	Red Video
2	Green Video
3	Blue Video
4	Frame Ground
5	Ground
6	Red Video Ground
7	Green Video Ground
8	Blue Video Ground
9	N.C
10	Sync. Ground
11	Ground
12	SDA
13	H-Sync.
14	V-Sync.
15	SCL

The 15-pin D-Sub connector (male) of the signal cable (IBM Systems) :

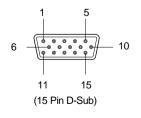

7

# Controls

## OSD controls

"ON SCREEN DISPLAY MENU" controls include the following extended controls such as Size, Position, Geometry, Color Adjust, Brightness and Contrast Utilities. Adjustments are saved instantly. The currently addressed control can be reset to factory settings by pressing the Reset button.



#### Function of OSD buttons on the front of the monitor

- DO : Displays OSD main Menu.
- 1) When Main menu is displayed. : Selects function with RED ICON.
- 2) When Submenu is displayed. : Selects function with RED ICON.

#### 1) When no OSD on the Screen,

- $\cdot\,$  In the main menu, move the function to select one of the controls.
- · In submenu, adjust the bar to increase or decreases the adjustment.
- 2) When no OSD on the Screen,
  - ✓ / ▼ : Direct Brightness access.
  - $\blacktriangle$  /  $\blacktriangleright$  : Direct Contrast access.

#### Additional front controls

- Power Switch : Turns the monitor power on or off. When the power is on, the LED is on.
- LED Power indicator Light : Located up side of the power switch and indicates the monitor's power mode. Each mode reduces the amount of power used by the monitor.

### Accessing on screen menu

Press DO Button.

### Turning off on screen menu

When in the main menu, press the EXIT button. When in submenus, press the EXIT button twice.

## OSD Menu

OSD MENU	MENU	-	+	ł
1. NO OSD	Proceeds to NO.2	Proceeds to NO.3	Proceeds to NO.4	No meaning
2. MAIN MENU POSITION POSITION PRESS MENU KEY PRESS MENU KEY	The function with RED ICON is - Performed : Recall, Degauss - Selected and blinked : Color Adjust, Zoom - Proceeded : Others	Moves to function	on you want.	Exit to No.1
3. BRIGHTNESS	Moves to No.2	Decreases the brightness	Increases the brightness	Exit to No.1
4. CONTRAST	Moves to No.2	Decreases the contrast	Increases the contrast	Exit to No.1
5.H/V-POSITION	Toggles horizontal or vertical position	Moves the image down or left in the selected function.	Moves the image up or right in the selected function.	Exit to No.2
6. H/V-SIZE	Toggles horizontal or vertical size	Shinks the image in the selected function.	Expands the image in the selected function.	Exit to No.2
	Odd press : Selects and blinks the function with RED ICON	Controls the am Selected funcion metry controls n	n. (Refer to Geo-	Exit to No.2
I Diana International Interna	Even press : Stops blinking and ready to move function you want.	Moves to function	on you want.	Exit to No.2

ENGLISH

OSD MENU	MENU	-	+	ł
8. MOIRE	Odd press : Selects and blinks the function with RED ICON		ount of the selected control these key ge not to shiver.	Exit to No.2
V. MOIRE ADJUST	Even press : Stops blinking and ready to move function you want.	Moves to function	on you want.	
9. LANGUAGE ► ENCLIGH DEUTSCH FRANÇAIS ESPAÑOL PORTUGLĖS ITALIANO PRESS MENU KEY	Selects the languages with RED ICON and Exit to No.2	Moves to langua	age you want.	Exit to No.2
10. OSD POSITION	Toggles OSD position horizontally or vertically.	Moves the OSD menu left or down in the selected function.	Moves the OSD menu right or up in the selected function.	Exit to No.2
11. COLOR MODE color-temp	Odd press : Blinks the RED ICON - color menu ICON.	Moves to color r and the selected will blink.	node you want d "color mode"	Exit to No.1
	Even press : Stops blinking and ready to move function you want.	Moves to function	on you want.	Exit to No.1
	When the color mode ICON is blinking in user mode, press, then go to color adjust mode No.12.	_	_	-
12. COLOR ADJUST MODE	Odd press : Selects and blinks the function you want.	Controls the amo you want.	ount of function	Exit to No.11
USER 50 RB - Red background raster GB - Green background raster BB - Blue background raster RG - Red level gain GG - Green level gain BG - Blue level gain	Even press : Stops blinking and ready to move function you want.	Moves to the fur	nction you want.	Exit to No.11
- Diue ievei Yali i				

	U	MENU	-	+	Ð
13. ZOOM <u>zoom</u> 13. E DX (13) 2000 20	] 🕞	Odd press : Selects zoom and blinks the zoom ICON.	Shinks the image horizontally and vertically.	Expands the image horizontally and vertically.	Exit to No.1
	50	Even press : Stops blinking and ready to move another function.	Moves to the fu	nction you want.	Exit to No.1
∎ Recall () <b>(</b> )	lf you	control to the factory setti want to return to the facto ICON.	0		
∎ Degauss (⊗)	electro conve	ates the build-up of stray on beams and affect the j rgence. When pressed, y n is demagnetized.	purity of the scree	en colors, focus, a	and
Caution		e allow aminimum of 20 mi	inutes to elapse b	etween uses of th	e Degauss
		. Do no hold the button do ass circuitry.	own continuously	to avoid decreasi	0
* Geometry Cor IBB GB BB RG USER	Degua	ass circuitry.	ols allow you to a		ng the life the

## No picture

- Check that the AC cord is correctly connected.
- Check that the AC socket is live by plugging in another piece of equipment.
- Power switch and computer power switch should be in position.
- Ensure that the signal cable is properly connected to the video card or PC.
- Ensure that the video card is securely seated in the PC.
- Check the connector for bent or pushed-in pins.
- Press a key on the keyboard or move the mouse, in case the screen power-saver mode has blanked the screen.

### Image is scrolling or unstable

- Signal cable should be securely attached to the computer
- Check the pin assignments and signal timings of the monitor and your video card with respect to recommended timings and pin assignments.
- Ensure that the video card is securely seated in the PC.

## Picture is fuzzy

- Adjust the Contrast and Brightness Controls.
- Push the Degauss Button once.

**Caution** : A minimum interval of 20 minutes should exist before the Degauss Button is used a second time. Do not hold the button down continuously.

## Picture bounces or a waving pattern is present in the picture

- Move electrical devices that may be causing electrical interference away from the monitor.
- See the inside front cover of this manual for FCC information.
- Unshielded audio speakers placed next to the monitor can cause picture distortion. Move the speakers away.

## Edges of the display image are not square

 Adjust the distortion using the Side Pincushion or Trapezoid Pincushion Balance, Parallel adjustment controls under the on screen menu.

### Display image is not centered, too small, or too large

 Adjust the horizontal and vertical image sizes using the Horizontal and Vertical Size adjustment controls under the on screen menu.

Electrical	Specifications
------------	----------------

ITEM		E19BL		
CRT Type		19", 90° deflection FST		
CRT Dot	pitch	0.26mm		
CRT Sur	face	Non-glare		
	Sync	H/V Separate, TTL, positive/negative		
Input		H/V Composite, TTL, positive/negative		
Signal	Video	RGB Analog (0.7Vp-p), positive		
		75 $_{\Omega}$ Terminated		
Scanning	Horizontal	30KHz~85KHz (Automatically)		
frequency	Vertical	47Hz~160Hz (Automatically)		
Maximum Re	esolution	1280Dots ×1024Lines (75Hz)		
Pixel Clock(Max.)		135 MHz		
Display Size (Standard)		Horizontal 350mm, Vertical 262mm		
Power Consumption(Max.)		110 Watts		
Power Supply		AC 100~240Volt, 50/60Hz ±3Hz		
Input Connector		D-Sub, 15Pin Connectors		
Display Colors		Unlimited		

## Mechanical Specifications

ITEM	1	E19BL	
	Unit	18.5 ″(W) ×18.2 ″(D) ×18.3 ″(H)	
Dimension		470mm(W) × 462.5mm(D) × 466mm(H)	
DIMENSION	Carton	21.6 "(W) ×22.6 "(D) ×22.4"(H)	
		540mm(W) ×537mm(D) ×543mm(H)	
Weight	Net	43lbs (19.5Kg)	
	Gross	49.6lbs (22.5Kg)	


# Environmental Specifications


ITEN	1	E19BL	
Temperature	Operating	32°F to 104°F (0°C to 40°C)	
remperature	Storage	-4°F to 140°F (-20°C to 60°C)	
Humi	dity	10% to 85% R.H. Non-condensing	

ENGLISH

## Preset Timings

This Monitor E19BL has preset modes for the 10most popular industry standards for 'Plug and Play" capability.

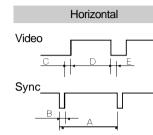

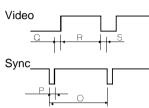

Vertical

Resolution	IE	BM	VESA			
	VGA/70Hz	VGA/60Hz	640/85Hz	800/75Hz	800/85Hz	
Timing	720 ×400	640×480	640×480	800 ×600	800  imes 600	
H-Freq(kHz)	31.469	31.469	43.269	46.875	53.674	
secمرA	31.777	31.777	23.111	21.333	18.631	
Busec	3.813	3.813	1.556	1.616	1.138	
secمرC	1.907	1.907	2.222	3.232	2.702	
Dµsec	25.422	25.422	17.778	16.162	14.222	
secھرE	0.636	0.636	1.556	0.323	0.569	
V-Freq(Hz)	70.09	59.94	85.008	75	85.061	
Omsec	14.268	16.684	11.764	13.333	11.756	
Pmsec	0.064	0.064	0.069	0.064	0.056	
Qmsec	1.08	1.048	0.578	0.448	0.503	
Rmsec	12.711	15.253	11.093	12.8	11.179	
Smsec	0.413	0.318	0.023	0.021	0.019	
Pixel rate(MHz)	28.322	25.175	36	49.5	56.25	
H-Polarity	Negative	Negative	Negative	Positive	Positive	
V-Polarity	Positive	Negative	Negative	Positive	Positive	
Resolution		VESA			MACINTOSH	
	1024/75Hz	1024/85Hz	1280/75Hz	640/67Hz	832/75Hz	
Timing	1024 ×768	1024 ×768	1280 ×1024	640 ×480	832 ×624	
H-Freq(kHz)	60.023	68.677	79.976	35	49.726	
Ausec	16.660	14.561	12.504	28.571	20.11	
Busec	1.219	1.016	1.067	2.116	1.117	
Cµsec	2.235	2.201	1.837	3.175	3.91	
Dµsec	13.003	10.836	9.481	21.164	14.524	
Eµsec	0.203	0.508	0.119	2.116	0.559	
V-Freq(Hz)	75.029	84.997	75.025	66.667	74.551	
Omsec	13.328	11.765	13.329	15	13.414	
Pmsec	0.050	0.044	0.038	0.086	0.06	
Qmsec	0.466	0.524	0.475	1.114	0.784	
Rmsec	12.795	11.183	12.804	13.714	12.549	
Smsec	0.017	0.015	0.013	0.086	0.02	
Pixel rate(MHz)	78.750	94.5	135	30.24	57.284	
	10.100	01.0	100	00.21	011201	
H-Polarity	Positive	Positive	Positive	Negative	Negative	

14 User's Manual

Positive

Positive

Positive

Negative

Negative

V-Polarity