

Rhein Tech Laboratories, Inc.
360 Herndon Parkway
Suite 1400
Herndon, VA20170
<http://www.rheintech.com>

Client: Harris Corporation
Model: CS-7000 Desktop Station
ID's: AQZ-XG-100M00/122D-XG100M00
Standards: FCC Part 80, 90/IC RSS-119
Report #: 2011168

Appendix I: User Manuals

Please refer to the following pages.



CS7000 Control Station



MANUAL REVISION HISTORY

REV	DATE	REASON FOR CHANGE
-	May/08	Initial release.
A	Aug/08	Updated product naming and rear panel diagram.
B	Jun/09	Updated company information.
C	Oct/11	Updated to include Unity XG-100M information.

Harris Corporation, Public Safety and Professional Communications (PSPC) Business continually evaluates its technical publications for completeness, technical accuracy, and organization. You can assist in this process by submitting your comments and suggestions to the following:

Harris Corporation
PSPC Business
Technical Publications
221 Jefferson Ridge Parkway
Lynchburg, VA 24501

fax your comments to: 1-434-455-6851
or
e-mail us at: PSPC_TechPubs@harris.com

ACKNOWLEDGEMENT

This device is made under license under one or more of the following US patents: 4,590,473; 4,636,791; 5,148,482; 5,185,796; 5,271,017; 5,377,229; 4,716,407; 4,972,460; 5,502,767; 5,146,497; 5,164,986; 5,185,795; 5,226,084; 5,247,579; 5,491,772; 5,517,511; 5,630,011; 5,649,050; 5,701,390; 5,715,365; 5,754,974; 5,826,222; 5,870,405; 6,161,089; and 6,199,037 B1. DVSI claims certain rights, including patent rights under aforementioned U.S. patents, and under other U.S. and foreign patents and patents pending. Any use of this software or technology requires a separate written license from DVSI.

CREDITS

All brand and product names are trademarks, registered trademarks, or service marks of their respective holders. AMBE is a registered trademark and IMBE, AMBE+, and AMBE+2 are trademarks of Digital Voice Systems, Inc.

NOTICE!

The material contained herein is subject to U.S. export approval. No export or re-export is permitted without written approval from the U.S. Government. Rated: EAR99 in accordance with U.S. Dept. of Commerce regulations 15CFR774, Export Administration Regulations.

Information and descriptions contained herein are the property of Harris Corporation. Such information and descriptions may not be copied or reproduced by any means, or disseminated or distributed without the express prior written permission of Harris Corporation, PSPC Business, 221 Jefferson Ridge Parkway, Lynchburg, VA 24501.

Repairs to this equipment should be made only by an authorized service technician or facility designated by the supplier. Any repairs, alterations or substitutions of recommended parts made by the user to this equipment not approved by the manufacturer could void the user's authority to operate the equipment in addition to the manufacturer's warranty.



This product conforms to the European Union WEEE Directive 2002/96/EC. Do not dispose of this product in a public landfill. Take it to a recycling center at the end of its life.

This manual is published by **Harris Corporation** without any warranty. Improvements and changes to this manual necessitated by typographical errors, inaccuracies of current information, or improvements to programs and/or equipment, may be made by **Harris Corporation** at any time and without notice. Such changes will be incorporated into new editions of this manual. No part of this manual may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying and recording, for any purpose, without the express written permission of **Harris Corporation**.

TABLE OF CONTENTS

Section	Page
1 SAFETY INFORMATION	5
1.1 SAFETY CONVENTIONS.....	5
2 GENERAL DESCRIPTION	6
3 CONTROLS AND CONNECTIONS	7
3.1 LOCAL CONTROL STATION	7
3.1.1 DC Power Indicator.....	7
3.1.2 Transceiver.....	7
3.1.3 Local Speaker.....	7
3.2 REMOTE CONTROL STATIONS.....	8
3.2.1 Remote Station Microphone.....	8
3.2.2 Intercom Switch.....	8
3.2.3 Remote Switch and LED Indicator.....	8
3.2.4 Station Volume Control.....	9
3.2.5 VU Meter.....	9
3.3 REAR PANEL FEATURES.....	9
3.3.1 AC Power Switch/Cord/Fuse Assembly.....	9
3.3.2 Main Antenna Connector	10
3.3.3 Internal Fan.....	10
3.3.4 Earth Ground.....	10
3.3.5 CAN Port.....	10
3.3.6 Phone Line Connection (Optional).....	10
3.3.7 Computer Connection.....	10
3.3.8 LAN.....	10
3.3.9 Serial A.....	10
3.3.10 Serial B.....	11
3.3.11 External I/O.....	11
3.3.12 Optional Antenna Connector.....	11
4 CONTROL STATION OPERATION.....	12
4.1 POWERING UP THE STATION.....	12
4.2 GENERAL OPERATION.....	12
4.2.1 Setting Up And Using The Control Station Transceiver.....	12
4.2.2 To Receive a Call (Local-Only Control Stations).....	12
4.2.3 To Make (Transmit) a Call (Local-Only Control Stations).....	12
4.2.4 To Receive a Call (Remote Controlled Stations).....	12
4.2.5 To Make (Transmit) a Call (Remote Controlled Stations).....	13
4.3 REMOTE CONTROL OPERATION.....	13
4.3.1 Enabling Remote Control.....	13
4.3.2 Disabling Remote Control.....	13
4.4 INTERCOM OPERATION.....	14
4.4.1 Continuous Intercom Operation (Intercom-Only Mode).....	14
4.4.2 Momentary Intercom Operation.....	14

TABLE OF CONTENTS

Section	Page
5 REFERENCE MATERIAL	15
6 INTERCOM AND REMOTE SWITCH SUMMARY	16
7 WARRANTY.....	17

TABLES

Table 5-1: Reference Documents	15
Table 6-1: Summary of Remote and Intercom Switch Positions	16

FIGURES

Figure 2-1: CT-013892-001 Local Control Station with Scan Head (Front View).....	6
Figure 2-2: CT-013892-002 Local/Remote Control Station with System Head (Front View)	6
Figure 3-1: Front Panel Features – Local Control Station.....	7
Figure 3-2: Front Panel Features – Remote Control Station	9
Figure 3-3: Rear Panel Features – Local and Remote Stations	11

1 SAFETY INFORMATION

1.1 SAFETY CONVENTIONS

The following conventions are used throughout this manual to alert the user to general safety precautions that must be observed during all phases of operation, service, and repair of this product. Failure to comply with these precautions or with specific warnings elsewhere in this manual violates safety standards of design, manufacture, and intended use of the product. Harris Corporation assumes no liability for the customer's failure to comply with these standards.



The **WARNING** symbol calls attention to a procedure, practice, or the like, which, if not correctly performed or adhered to, could result in personal injury. Do not proceed beyond a **WARNING** symbol until the conditions identified are fully understood or met.



The **CAUTION** symbol calls attention to an operating procedure, practice, or the like, which, if not performed correctly or adhered to, could result in a risk of danger, damage to the equipment, or severely degrade the equipment performance.



The **NOTE** symbol calls attention to supplemental information, which may improve system performance or clarify a process or procedure.



The **ESD** symbol calls attention to procedures, practices, or the like, which could expose equipment to the effects of Electro-Static Discharge. Proper precautions must be taken to prevent ESD when handling circuit modules.



The electrical hazard symbol is a **WARNING** indicating there may be an electrical shock hazard present.

2 GENERAL DESCRIPTION

The Harris® CS7000 Control Stations shown in Figure 2-1 and Figure 2-2 are state-of-the-art Control Stations. The slimline design of the CS7000 Control Station provides a convenient method to equip offices, shops and other remote locations with radio communications.

The CS7000 Control Station supports several models of Harris mobile products. CS7000 Control Stations may be equipped with an M5300, M7300, or a Unity® XG-100M mobile transceiver. The M5300 transceiver is a single band transceiver capable of OpenSky®, EDACS®, and Conventional modes of operation. The M7300 transceiver is a dual-band 700/800 MHz transceiver capable of EDACS, Conventional, P25, and OpenSky modes of operation. The Unity XG-100M mobile radio is a full featured multi-mode multi-band transceiver. The transceiver may be equipped with the Scan Control Head (Figure 2-1) or a System Control Head (Figure 2-2).

The CS7000 Control Station may also be equipped with a remote interface board allowing remotely located desktop station controllers to share radio communications with the local operation of the Desktop Station.

The Desktop Station is available in the following models:

- Desktop Station configuration with only local controls.
- Desktop Station configuration with local and remote control capability.

Local Control Desktop Station model CT-013892-001, shown in Figure 2-1, is designed to provide local control of the mobile transceiver (shown with a Scan Control Head) in a desktop control station configuration.

Local/Remote Control Desktop Station model CT-013892-002, shown in Figure 2-2, includes a built-in remote controller board and front panel controls. This model is designed to provide local and remote control operation.



Figure 2-1: CT-013892-001 Local Control Station with Scan Head (Front View)



Figure 2-2: CT-013892-002 Local/Remote Control Station with System Head (Front View)

3 CONTROLS AND CONNECTIONS

3.1 LOCAL CONTROL STATION

The Local Control Station (shown in Figure 3-1), model CT-013892-001, includes front panel controls, indicators, and other features. The following are general descriptions of each feature.

3.1.1 DC Power Indicator

A DC power indicator is located on the front-left station panel. This indicator illuminates when the station’s main built-in power supply is turned on and supplying DC voltage to Control Station.

3.1.2 Transceiver

The CS7000 Control Station may be equipped with an M5300, M7300, or Unity XG-100M transceiver, respectively. The M5300 transceiver is a single band transceiver capable of EDACS, Conventional and OpenSky modes of operation. The M7300 transceiver is a dual band 700/800 MHz transceiver capable of EDACS, Conventional, P25, and OpenSky modes of operation. The Unity XG-100M mobile radio is a full featured multi-mode multi-band transceiver. Each model Harris transceiver requires a CH721 Scan or System Control Head. The CH721 Scan Control Head provides control of the transceiver’s basic set of features. The CH721 Control Head provides a full featured set of transceiver controls.

3.1.2.1 Transceiver ON/OFF/Volume Control

Local Control Stations rely on the transceiver’s ON/OFF-Volume control for volume level setting. Refer to Section 3.2.4 when setting the volume on remote control stations.

3.1.2.2 Local Station Microphone

The transceiver’s microphone connector shown in Figure 3-1 is used for local control stations. Refer to Section 3.2.1 when connecting a microphone to a remote control station.

3.1.3 Local Speaker

The station contains a front firing local speaker for improved performance.

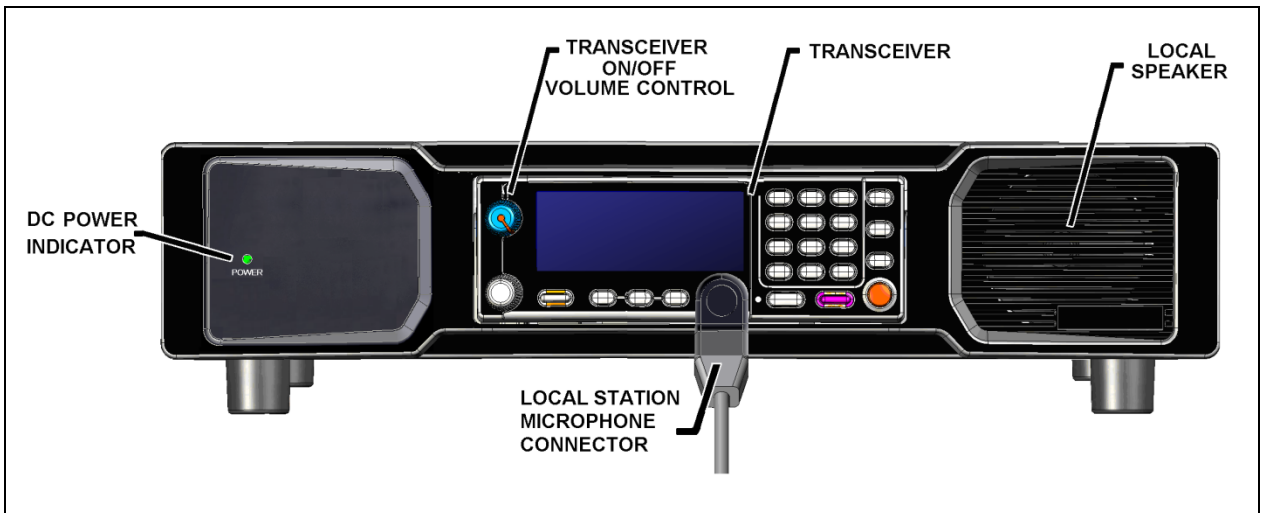


Figure 3-1: Front Panel Features – Local Control Station

3.2 REMOTE CONTROL STATIONS

In addition to the features found on the local control station, the Remote Control Station, model CT-013892-002, includes the features described in the following sub-sections.

3.2.1 Remote Station Microphone

The microphone for remote control stations is connected to the remote station microphone connector as shown in Figure 3-2. Refer to Section 3.1.2.2 when connecting a microphone to a local control station.



For Remote Control Stations, the microphone **MUST** be connected to the Control Station's remote station microphone connector found on the front-left faceplate panel. Connecting the microphone directly to the transceiver will result in improper operation of the remote control features.

3.2.2 Intercom Switch

The Intercom Switch places the Control Station in one of two intercom modes, or normal mode. The Intercom Switch may be set to one of the following three (3) settings:

- M (UP - Momentary position): This is a spring loaded momentary position that places the local station in the INTERCOM mode until the operator releases the switch; at which time it will return to the OFF position. Holding the INTERCOM switch in the M position, and keying the Local Station Microphone, will NOT key the transceiver. Local Station Microphone audio will be heard only at remote controllers until the switch is released.
- OFF (Center position): This position is the NORMAL mode. Transmissions made from the Local Station Microphone will key the transceiver and transmitted audio will be heard only over-the-air. Remote controllers will also hear the Control Station's Local Microphone audio if the REMOTE switch is set to the ON position.
- ON (Down position): This position places the Control Station operation in the INTERCOM mode. Transmissions made from the Local Station Microphone will NOT key the transceiver. Local Station Microphone audio will be heard only by Remote Controllers. Transmissions made by Remote Controllers will only be heard over the Local Speaker (Remote Controller transmissions will not key the transceiver).

3.2.3 Remote Switch and LED Indicator

The Remote Switch provides the local control operator the ability to enable access by remote controllers. The Remote Switch may be set to one of the following two (2) settings:

- ON (Down position): This position is the NORMAL mode of operation. It enables Remote Controller access to the Control Station and illuminates the Remote Indicator LED. Remote Controllers will be able to transmit or receive over-the-air via the Control Station's transceiver.
- OFF (UP position): This position disables radio access to and from Remote Controllers. In this position, Remote Controllers will not be able to transmit or receive over the Control Station's radio.



The Remote Switch must be set to the ON position to allow remote controllers to transmit and receive over-the-air via the Control Station's transceiver.

3.2.4 Station Volume Control

The Station Volume Control functions as the Control Station’s master volume control on stations equipped with the remote control option. The volume control setting for the transceiver is pre-programmed to a fixed level to ensure proper Control Station operation in remote applications.

3.2.5 VU Meter

Control Stations equipped for remote control operation also include a VU Meter. The VU Meter displays, in bar graph format, audio levels to and from remote controllers.

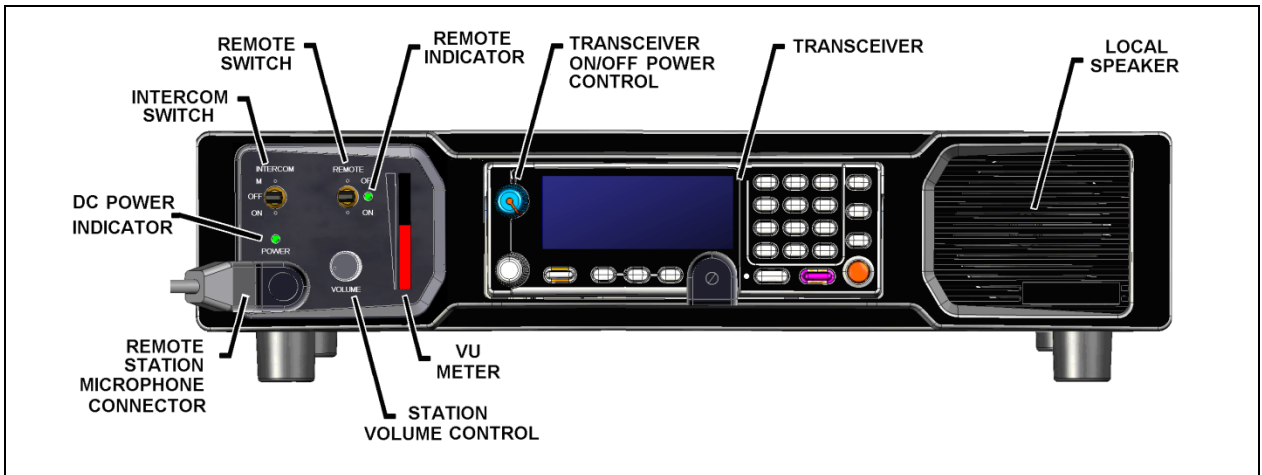


Figure 3-2: Front Panel Features – Remote Control Station

3.3 REAR PANEL FEATURES

All versions of the CS7000 Control Station share similar rear panel features. CS7000 Control Stations equipped from the factory with a Unity XG-100M also includes a rear-panel mounted BNC antenna connection for low-band (30 to 50 MHz) operation. The following sub-sections provide a brief description of the available rear panel features.

3.3.1 AC Power Switch/Cord/Fuse Assembly

The AC Power Switch/Cord/Fuse assembly is located on the left side of the rear panel when facing the rear panel. As indicated, it serves as the main Control Station ON/OFF switch, AC cord receptacle, and houses the fuses for the main AC line input. This switch controls AC power to the 120/240, 50/60 Hz internal AC power supply.

3.3.1.1 AC Power Switch

The main AC Power Switch for the Control Station is located on the left side of the rear panel (when facing the rear panel), and is part of the AC Power Switch/Cord/Fuse assembly.

3.3.1.2 AC Power Cord Receptacle

The AC Power Cord receptacle for the Control Station is located on the left side of the rear panel (when facing the rear panel) and is part of the AC Power Switch/Cord/Fuse assembly. The receptacle is an industry standard IEC-302 type 3-pin power connector.

3.3.1.3 **AC Fuse**

The main AC power fuses for the Control Station are located on the left side of the rear panel (when facing the rear panel) and is part of the AC Power Switch/Cord/Fuse assembly. Caution should be taken when replacing a suspected blown fuse to ensure the proper value replacement fuse is re-installed. Fuse replacement should only be attempted by authorized service personnel.

3.3.2 **Main Antenna Connector**

The Control Station antenna connector located on the rear panel is a 50 ohm Type-N female panel-mounted connector. Care must be taken to ensure proper antenna connections at all times.

3.3.3 **Internal Fan**

The Control Station employs an internal cooling fan which is mounted inside the cabinet near the center of the rear panel. The fan opening must, at all times, be kept clean and free of objects that could potentially block the free flow of air.

3.3.4 **Earth Ground**

The Earth Ground connection is a #10-32 stud used to help dissipate any stray electrical currents away from the station and to earth ground. This connection should be made before applying AC power to the Control Station.

3.3.5 **CAN Port**

The Controller Area Network (CAN) port is similar to standard serial ports and supports full-duplex connectivity to optional Harris Corporation devices. However, unlike standard serial ports, multiple CAN devices may share a common CAN bus. A CAN bus is limited to a maximum distance of 250 ft. between the two furthest devices connected to the CAN bus. The Control Station can be connected anywhere along the bus. A fiber optic CAN bus extender may be used when CAN bus distances greater than 250 feet are required.

3.3.6 **Phone Line Connection (Optional)**

The Phone Line connection is an RJ-11 type connection used to connect remotely located tone remote controllers to the station via a 2-wire or 4-wire dedicated phone line.

3.3.7 **Computer Connection**

The Computer connection is an RJ-45 type Ethernet port. This port is used to communicate locally with the Control Station via PC for programming, while the LAN port is connected to a Voice-over-Internet Protocol (VoIP) controller network.

3.3.8 **LAN**

The LAN connection is an RJ-45 type Ethernet port. This port is used to connect the desktop to a VoIP controller network. The controllers may access Control Station functions, commands, and handle transmit and receive audio as IP packets making this a superior option for users with IP connectivity.

3.3.9 **Serial A**

The Serial A connection is a USB Type B connection, and is used to access the transceiver's serial USB programming port.

3.3.10 **Serial B**

The Serial B connection is a DB-9 DCE female connection, and is used to access the transceiver’s serial RS-232 programming port.

3.3.11 **External I/O**

The External I/O connector is a DB-25 female connection. This port provides access to local controlling features of the transceiver such as PTT, TX audio, RX audio, etc. Foot switches and other local external customer devices may be connected to the Control Station using this connector.

3.3.12 **Optional Antenna Connector**

CS7000 Control Stations equipped from the factory with a Unity XG-100M also include a rear-panel mounted BNC female antenna connection for low-band (30 to 50 MHz) operation. Care must be taken to ensure proper antenna connections at all times.

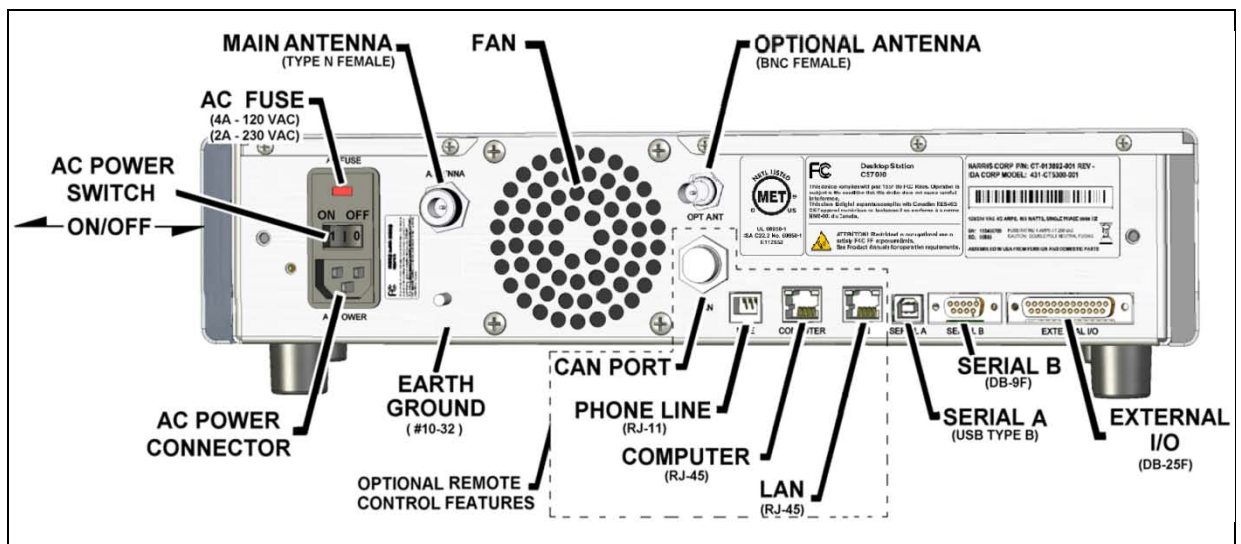


Figure 3-3: Rear Panel Features – Local and Remote Stations

4 CONTROL STATION OPERATION

4.1 POWERING UP THE STATION

1. Make sure the Control Station is connected to a functional AC power outlet.
2. On the Control Station's rear panel (refer to Figure 3-3), turn on the main ON/OFF power switch located just above the AC power cord. The front panel Power Indicator should be illuminated green.
3. Turn on the transceiver's ON/OFF Power switch (refer to Figure 3-1).

4.2 GENERAL OPERATION

4.2.1 **Setting Up And Using The Control Station Transceiver**

Receiving and transmitting a message is affected by how the transceiver, installed into the Control Station, is programmed; and, how the supporting communications system operates. Refer to the specific Mobile Radio Operator's Manual or Quick Guide for a detailed description and operation for the transceiver installed in the Control Station. Contact your local system administrator or other trained and qualified operators for system information.

4.2.2 **To Receive a Call (Local-Only Control Stations)**

1. Set the transceiver to the desired System, Group, or Channel (depends on radio programming) using the System/Group or Channel knob. The Control Station is now ready to receive messages from other radios in the system.
2. When the first call is received, it may be necessary to adjust the VOLUME control to the desired listening level. Use the transceiver's VOLUME control to set the volume level.

4.2.3 **To Make (Transmit) a Call (Local-Only Control Stations)**

1. If more than one channel is available, select the proper channel using the radio's System/Group Channel knob.
2. For conventional (non-trunked) systems, press the monitor button on the microphone and listen to make sure no one else is using the channel.
3. Press the PTT switch on the microphone, and then speak into the microphone using a normal speaking voice. Always release the PTT switch as soon as the message is completed, and listen for an answer to the call.

4.2.4 **To Receive a Call (Remote Controlled Stations)**

1. Set the transceiver to the desired system, group, or channel (depends on radio programming) using the System/Group/Channel knob.
2. Set the REMOTE switch on the Control Station to the ON (down) position so remote controllers can also hear received messages. The Control Station is now ready to perform the following:
 - Receive messages over-the-air from other radios in the system.
 - Pass the received signal to remote controllers connected to the Control Station.
 - Receive transmissions from remote controllers.

3. When the first call is received, it may be necessary to adjust the volume control to the desired listening level. Use the Station Volume Control to set to local speaker volume level. Setting this control does not affect the volume level heard by remote controllers.

4.2.5 **To Make (Transmit) a Call (Remote Controlled Stations)**

1. If more than one channel is available, select the proper channel using the radio's System/Group/Channel knob.
2. Set the REMOTE switch to the ON (down) position to allow remote controllers to key the Control Station.
3. The Control Station is now ready to transmit messages over-the air from remote controllers connected to the Control Station.
4. For conventional (non-trunked) systems, press the monitor button on the microphone, or set the INTERCOM switch to the M (up) position and listen to make sure no one else is using the channel.
5. Press the PTT switch on the microphone, and then speak into the microphone using a normal speaking voice. Always release the PTT switch as soon as the message is completed, and listen for an answer to the call.

4.3 REMOTE CONTROL OPERATION

Control Stations equipped with Intercom and Remote switches may be remotely controlled. The Intercom and Remote switches determine when remote controllers connected to the Control Station may send and receive messages via the Control Station.

4.3.1 **Enabling Remote Control**

Perform the following steps to enable Remote Control Capability:

1. Make sure the Control Station is powered up (refer to Section 4.1).
2. Set the INTERCOM switch to the OFF (center) position.
3. Set the REMOTE switch to the ON (down) position.



NOTE

Setting the INTERCOM switch to OFF (center) position and the REMOTE switch to ON (down) position is typically the NORMAL mode of operation for remote control equipped Control Stations.

4.3.2 **Disabling Remote Control**

Perform the following steps to disable Remote Control operation:

1. Make sure the Control Station is powered up (see Section 4.1).
2. Set the INTERCOM switch to the OFF (center) position.
3. Set the REMOTE switch to the OFF (up) position.



NOTE

Setting the REMOTE switch to the OFF position disables communications to and from remote controllers including intercom operation.

4.4 INTERCOM OPERATION


Control Stations equipped with Intercom and Remote switches may make intercom calls to and from remote controllers connected to the Control Station. The Intercom and Remote switches determine when and how the Control Station makes intercom calls.

4.4.1 Continuous Intercom Operation (Intercom-Only Mode)

The Continuous Intercom mode of operation allows transmissions between the Control Station and Remote Controllers (over-the-air transmissions via the Control Station are disabled during this mode).

Perform the following steps to make an Intercom call:

1. Make sure the Control Station is powered up (see Section 4.1).
2. Set the INTERCOM switch to the ON position.
3. Set the REMOTE switch to the OFF position.
4. Press and hold the PTT switch on the Local Station Microphone at the beginning of each transmission. Release the PTT switch at the end of each transmission.

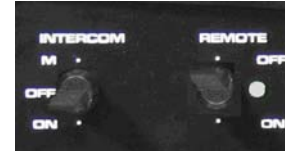

In the Continuous Intercom mode, neither audio from the Local Station Microphone, nor a remote controller will be transmitted over-the-air. Only intercom communications is possible!

4.4.2 Momentary Intercom Operation

The M position on the Intercom switch is spring-loaded (momentary) and returns the switch to the OFF position when released. This switch position allows the Control Station's local operator to make an intercom call without leaving the Control Station in continuous intercom mode. This is a convenient position to use since the ON position disables over-the-air transmissions from the Control Station.

Perform the following steps to make a Momentary Intercom call:

1. Make sure the Control Station is powered up (see Section 4.1).
2. Set the INTERCOM switch to the M position.
3. Set the REMOTE switch to the OFF position.
4. Press and hold the PTT switch on the Local Station Microphone at the beginning of each transmission. Release the PTT switch at the end of each transmission.
5. Release the INTERCOM switch when the intercom call is complete.



Audio from the Local Station Microphone or a remote controller will NOT be transmitted over-the-air during this switch configuration. Only intercom communications are possible!

5 REFERENCE MATERIAL





It may be necessary to consult one or more of the following manuals. These manuals will also provide additional guidance if you encounter technical difficulties during the installation or testing processes.

Table 5-1: Reference Documents

DOCUMENTATION	MANUAL NUMBER
CS7000 Installation Manual	MM-014714-001
M5300 Transceiver Operator's Manual	MM-012125-001
M5300 Transceiver Quick Guide when using OpenSky Systems	MM-012997-001
M5300 Transceiver Quick Guide when using P25, EDACS, or Conventional Systems	MM-013232-001
M7300 Transceiver Operator's Manual	MM-014718-001
M7300 Transceiver Quick Guide when using OpenSky Systems	MM-014368-001
M7300 Transceiver Quick Guide when using P25, EDACS, or Conventional Systems	MM-014369-001
Unity XG-100M Transceiver Operator's Manual	14221-1200-2000
Unity XG-100M Transceiver Quick Guide	14221-1200-1000

6 INTERCOM AND REMOTE SWITCH SUMMARY

Table 6-1: Summary of Remote and Intercom Switch Positions

SWITCH POSITIONS	PTT BUTTON ¹ STATUS	TRANSMIT PRIORITY ²	COMMENTS
INTERCOM AND REMOTE ENABLED 	Receive Mode (No PTTs Pressed).	N/A	The Control Station's receiver audio is heard at the Control Station's speaker and at the Remote Controller's speaker.
	PTT on Control Station Microphone Pressed.	1	Audio from Control Station's Microphone is heard at the Remote Controller's speaker.
	Intercom Mode Selected on the Remote Controller and PTT Pressed.	2	Audio from Remote Controller's Microphone is heard at the Control Station's speaker.
	Transmit Channel Selected on the Remote Controller and PTT Pressed.	2	Audio from Remote Controller's microphone is heard at the Control Station's speaker, and transmitted over-the-air.
INTERCOM-ONLY (REMOTE DISABLED) 	Receive Mode (No PTTs Pressed).	N/A	The Control Station's receiver audio is heard at the Control Station's speaker.
	PTT on Control Station Microphone Pressed.	1	Audio from Control Station's Microphone is heard at the Remote Controller's speaker.
	Remote Controller PTT Pressed.	2	Microphone audio from Remote Controller is heard at the Control Station's speaker.
REMOTE ENABLED 	Receive Mode (No PTTs Pressed).	N/A	The Control Station's receiver audio is heard at its speaker and at the Remote Controller's speakers. ¹
	PTT on Control Station Microphone Pressed.	1	Audio from Control Station's microphone is heard at Remote Controller's speaker, and transmitted over-the-air.
	Intercom Mode Selected on the Remote Controller and PTT Pressed.	2	Microphone audio from Remote Controller is heard at the Control Station's speaker.
	Transmit Channel Selected on the Remote Controller and PTT Pressed.	2	Audio from Remote Controller's microphone is heard at the Control Station's speaker and transmitted over-the-air.
REMOTE DISABLED 	Receive Mode (No PTTs Pressed).	N/A	The Control Station's receiver audio is heard at the Control Station's speaker.
	PTT on Control Station Microphone Pressed.	1	Audio from the Control Station's Microphone is transmitted over-the-air.

- Regarding all PTT actions, it is possible for the Control Station to be programmed to hinder all PTT actions when its receiver is unmuted (receiving an over-the-air call). PTT actions are restored once the receiver is muted.
- PTT actions from the Control Station's microphone will always take precedence over PTT requests from Remote Controllers.

7 WARRANTY

- A. Harris Corporation, a Delaware Corporation, through its RF Communications Division (hereinafter "Seller") warrants to the original purchaser for use (hereinafter "Buyer") that Equipment manufactured by or for the Seller shall be free from defects in material and workmanship, and shall conform to its published specifications. With respect to all non-Seller Equipment, Seller gives no warranty, and only the warranty, if any, given by the manufacturer shall apply. Rechargeable batteries are excluded from this warranty but are warranted under a separate Rechargeable Battery Warranty (ECR-7048).
- B. Seller's obligations set forth in Paragraph C below shall apply only to failures to meet the above warranties occurring within the following periods of time from date of sale to the Buyer and are conditioned on Buyer's giving written notice to Seller within thirty (30) days of such occurrence:
1. for fuses and non-rechargeable batteries, operable on arrival only.
 2. for parts and accessories (except as noted in B.1), ninety (90) days.
 3. for P7300, P7200, P7100^{IP}, P5400, P5300, P5200, P5100, P3300, M7300, M7200 (including V-TAC), M7100^{IP}, M5300 and M3300 radios, two (2) years, effective 10/01/2007.
 4. for Unity[®] XG-100P, three (3) years.
 5. for all other equipment of Seller's manufacture, one (1) year.
- C. If any Equipment fails to meet the foregoing warranties, Seller shall correct the failure at its option (i) by repairing any defective or damaged part or parts thereof, (ii) by making available at Seller's factory any necessary repaired or replacement parts, or (iii) by replacing the failed Equipment with equivalent new or refurbished Equipment. Any repaired or replacement part furnished hereunder shall be warranted for the remainder of the warranty period of the Equipment in which it is installed. Where such failure cannot be corrected by Seller's reasonable efforts, the parties will negotiate an equitable adjustment in price. Labor to perform warranty service will be provided at no charge during the warranty period only for the Equipment covered under Paragraph B.3 and B.4. To be eligible for no-charge labor, service must be performed at Seller's factory, by an Authorized Service Center (ASC) or other Servicer approved for these purposes either at its place of business during normal business hours, for mobile or personal equipment, or at the Buyer's location, for fixed location equipment. Service on fixed location equipment more than thirty (30) miles from the Service Center or other approved Servicer's place of business will include a charge for transportation.
- D. Seller's obligations under Paragraph C shall not apply to any Equipment, or part thereof, which (i) has been modified or otherwise altered other than pursuant to Seller's written instructions or written approval or, (ii) is normally consumed in operation or, (iii) has a normal life inherently shorter than the warranty periods specified in Paragraph B, or (iv) is not properly stored, installed, used, maintained or repaired, or, (v) has been subjected to any other kind of misuse or detrimental exposure, or has been involved in an accident.
- E. The preceding paragraphs set forth the exclusive remedies for claims based upon defects in or nonconformity of the Equipment, whether the claim is in contract, warranty, tort (including negligence), strict liability or otherwise, and however instituted. Upon the expiration of the warranty period, all such liability shall terminate. The foregoing warranties are exclusive and in lieu of all other warranties, whether oral, written, expressed, implied or statutory. NO IMPLIED OR STATUTORY WARRANTIES OF MERCHANTABILITY OR FITNESS FOR PARTICULAR PURPOSE SHALL APPLY. IN NO EVENT SHALL THE SELLER BE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL, SPECIAL, INDIRECT OR EXEMPLARY DAMAGES.

This warranty applies only within the United States.

Harris Corporation
RF Communications Division
221 Jefferson Ridge Parkway
Lynchburg, VA 24501
1-800-528-7711

Harris Corporation
RF Communications Division
1680 University Avenue
Rochester, NY 14610
1-585-244-5830

ECR-7047L

