

HF-SH01

Low Power WiFi Module User Manual

V 1.3



Overview of Characteristic

- ◇ Support IEEE802.11b/g/n Wireless Standards
- ◇ Based on Self-developed High Cost Effective MCU
- ◇ Ultra-Low-Power for Battery Applications with Excellent Power Save Scheme
- ◇ Support UART/SPI/PWM/GPIO Data Communication Interface
- ◇ Support Work As STA/AP/AP+STA Mode
- ◇ Support Smart Link Function (APP program provide)
- ◇ Support Wireless and Remote Firmware Upgrade Function
- ◇ Support WPS Function
- ◇ Support Multi-TCP Link (5 Channel) Application
- ◇ Support Soft Key Power Control
- ◇ Support Internal/External Antenna Option
- ◇ Single +3.3V Power Supply
- ◇ Smallest Size: 23.1mm x 32.8mm x2.7mm
- ◇ FCC/CE Certificated

TABLE OF CONTENTS

LIST OF FIGURES	6
LIST OF TABLES	7
HISTORY	8
1. PRODUCT OVERVIEW	9
1.1. General Description	9
1.1.1 Device Features.....	9
1.1.2 Device Parameters.....	10
1.1.3 Key Application	10
1.2. Hardware Introduction	11
1.2.1. Pins Definition.....	11
1.2.2. Electrical Characteristics	13
1.2.3. Mechanical Size.....	14
1.2.4. On-board Chip Antenna	14
1.2.5. External Antenna	15
1.2.6. Evaluation Kit.....	15
1.2.7. Order Information	17
1.3. Typical Application	18
1.3.1. Hardware Typical Application	18
2. FUNCTIONAL DESCRIPTION	20
2.1. Wireless Networking	20
2.1.1. Basic Wireless Network Based On AP (Infrastructure).....	20
2.1.2. Wireless Network Based On AP+STA	20
2.2. Work Mode : Transparent Transmission Mode	21
2.3. UART Frame Scheme	22
2.3.1. UART Free-Frame	22
2.3.2. UART Auto-Frame	22
2.4. Encryption	23
2.5. Power Save Scheme	23
2.6. Parameters Configuration	24
2.7. Firmware Update	24
2.8. GPIO/PWM Function	25
2.9. SOCKET B Function	26
2.10. Multi-TCP Link Connection	26
3. OPERATION GUIDELINE	28
3.1. Configuration via Web Accessing	28
3.1.1. Open Web Management Interface.....	28
3.1.2. System Page	28
3.1.3. Work Mode Page	29
3.1.4. STA Setting Page.....	29
3.1.5. AP Setting Page.....	30

3.1.6.	Other Setting Page.....	31
3.1.7.	Account Management Page	31
3.1.8.	Upgrade Software Page	32
3.1.9.	Restart Page.....	32
3.1.10.	Restore Page	32
3.2.	HF-LPB100 Usage Introduction	33
3.2.1.	Software Debug Tools.....	33
3.2.2.	Network Connection.....	33
3.2.3.	Default Parameter Setting	34
3.2.4.	Module Debug.....	34
3.3.	Typical Application Examples	35
3.3.1.	Wireless Control Application.....	35
3.3.2.	Remote Management Application.....	36
3.3.3.	Transparent Serial Port Application	36
4.	AT+INSTRUCTION INTRODUCTION.....	37
4.1.	Configuration Mode	37
4.1.1.	Switch to Configuration Mode.....	37
4.2.	AT+ Instruction Set Overview.....	38
4.2.1.	Instruction Syntax Format.....	38
4.2.2.	AT+ Instruction Set.....	39
4.2.2.1.	AT+E.....	41
4.2.2.2.	AT+WMODE	41
4.2.2.3.	AT+ENTM	41
4.2.2.4.	AT+TMODE.....	42
4.2.2.5.	AT+MID.....	42
4.2.2.6.	AT+VER.....	42
4.2.2.7.	AT+RELD.....	42
4.2.2.8.	AT+FCLR	43
4.2.2.9.	AT+Z.....	43
4.2.2.10.	AT+H.....	43
4.2.2.11.	AT+CFGRD	43
4.2.2.12.	AT+CFGWR.....	43
4.2.2.13.	AT+CFGFR.....	44
4.2.2.14.	AT+CFGTF	44
4.2.2.15.	AT+UART	44
4.2.2.16.	AT+ UARTE	45
4.2.2.17.	AT+ UARTE	45
4.2.2.18.	AT+ UARTE	45
4.2.2.19.	AT+ UARTE.....	45
4.2.2.20.	AT+ SEND	46
4.2.2.21.	AT+ RECV	46
4.2.2.22.	AT+ PING	46
4.2.2.23.	AT+NETP	46

4.2.2.24.	AT+ MAXSK.....	47
4.2.2.25.	AT+ TCPLK.....	47
4.2.2.26.	AT+ TCPTO.....	48
4.2.2.27.	AT+TCPDIS.....	48
4.2.2.28.	AT+SOCKB.....	48
4.2.2.29.	AT+TCPDISB.....	49
4.2.2.30.	AT+TCPTOB.....	49
4.2.2.31.	AT+TCPLKB.....	49
4.2.2.32.	AT+SNDB.....	50
4.2.2.33.	AT+RCVB.....	50
4.2.2.34.	AT+WSSSID.....	50
4.2.2.35.	AT+WSKEY.....	50
4.2.2.36.	AT+ WANN.....	51
4.2.2.37.	AT+ WSMAC.....	51
4.2.2.38.	AT+ WSLK.....	52
4.2.2.39.	AT+ WSLQ.....	52
4.2.2.40.	AT+WSCAN.....	52
4.2.2.41.	AT+ WSDNS.....	52
4.2.2.42.	AT+ LANN.....	53
4.2.2.43.	AT+WAP.....	53
4.2.2.44.	AT+WAKEY.....	53
4.2.2.45.	AT+WAMAC.....	54
4.2.2.46.	AT+WADHCP.....	54
4.2.2.47.	AT+WADMN.....	54
4.2.2.48.	AT+PLANG.....	55
4.2.2.49.	AT+UPURL.....	55
4.2.2.50.	AT+UPFILE.....	55
4.2.2.51.	AT+UPWEB.....	56
4.2.2.52.	AT+UPCFG.....	56
4.2.2.53.	AT+UPNVR.....	56
4.2.2.54.	AT+UPAUTO.....	56
4.2.2.55.	AT+LOGSW.....	57
4.2.2.56.	AT+LOGPORT.....	57
4.2.2.57.	AT+UPST.....	57
4.2.2.58.	AT+WEBU.....	57
4.2.2.59.	AT+MSLP.....	58
4.2.2.60.	AT+NTPRF.....	58
4.2.2.61.	AT+NTPEN.....	58
4.2.2.62.	AT+NTPTM.....	59
4.2.2.63.	AT+WRMID.....	59
4.2.2.64.	AT+RLDEN.....	59
4.2.2.65.	AT+ASWD.....	59
4.2.2.66.	AT+MDCH.....	60

4.2.2.67. AT+TXPWR 60

5. PACKAGE INFORMATION 61

5.1. Recommended Reflow Profile 61

5.2. Device Handling Instruction (Module IC SMT Preparation)..... 61

5.3. Shipping Information 62

APPENDIX A: HW REFERENCE DESIGN 63

APPENDIX B: CONTROL GPIO/PWM FUNCTION WITH NETWORK COMMANDS 64

B.1 Network Command 64

B.2 Hexadecimal Network Command 67

APPENDIX C: HTTP PROTOCOL TRANSFER 70

C.1. HTTP AT command..... 70

C.1.1. AT+ HTTPURL 70

C.1.2. AT+ HTTPTP 70

C.1.3. AT+ HTTPPH 70

C.1.4. AT+ HTTPCN 71

C.1.5. AT+ HTTPUA 71

C.1.6. AT+ HTTPDT 71

C.2. HTTP Example 71

APPENDIX D: CONTACT INFORMATION 73

LIST OF FIGURES

Figure 1.	HF-LPB100 View	11
Figure 2.	HF-LPB100 Pins Map	11
Figure 3.	HF-LPB100 Mechanical Dimension.....	14
Figure 4.	HF-LPB100 PCB Symbol Size	14
Figure 5.	Suggested Module Placement Region	15
Figure 6.	HF-LPB100 Evaluation Kit	16
Figure 7.	HF-LPB100 Order Information	17
Figure 8.	HF-LPB100 Hardware Typical Application.....	18
Figure 9.	HF-LPB100 Basic Wireless Network Structure	20
Figure 10.	HF-A11 AP+STA Network Structure	21
Figure 11.	Socket B function demo	26
Figure 12.	Multi-TCP Link Data Transmission Structure.....	27
Figure 13.	Open Web Management page.....	28
Figure 14.	System Web Page	29
Figure 15.	Work Mode Page	29
Figure 16.	STA Setting Page.....	30
Figure 17.	AP Setting Page.....	30
Figure 18.	Other Setting Page.....	31
Figure 19.	Account Page.....	31
Figure 20.	Upgrade SW page.....	32
Figure 21.	Restart Page.....	32
Figure 22.	Restore Page.....	33
Figure 23.	STA Interface Debug Connection	33
Figure 24.	AP Interface Debug Connection	34
Figure 25.	“CommTools” Serial Debug Tools.....	34
Figure 26.	“TCPUDPDbg” Tools Create Connection.....	34
Figure 27.	“TCPUDPDbg” Tools Setting.....	35
Figure 28.	“TCPUDPDbg” Tools Connection	35
Figure 29.	Wireless Control Application.....	35
Figure 30.	Remote Management Application.....	36
Figure 31.	Transparent Serial Port Application	36
Figure 32.	HF-LPB100 Default UART Port Parameters	37
Figure 33.	Switch to Configuration Mode.....	37
Figure 34.	“AT+H” Instruction for Help.....	38
Figure 35.	Reflow Soldering Profile	61
Figure 36.	Shipping Information	62

LIST OF TABLES

Table 1	HF-LPB100 Module Technical Specifications.....	10
Table 2	HF-LPB100 Pins Definition	11
Table 3	HF-LPB100 External Antenna Parameters.....	15
Table 4	HF-LPB100 Evaluation Kit Interface Description	16
Table 6	Standby Mode Status and Wake Up	23
Table 7	HF-LPB100 GPIO/PWM Pin Mapping Table	25
Table 8	HF-LPB100 Web Access Default Setting	28
Table 9	Error Code Description	39
Table 10	AT+ Instruction Set List.....	39
Table 11	Reflow Soldering Parameter	61

HISTORY

Ed. V1.0 08-01-2013 First Version.

Ed. V1.1 09-10-2013 Update AT command.

Ed. V1.2 10-10-2013 Update AT command. Update PWM/GPIO function. Add HTTP protocol demo. Add auto-frame function.

Ed. V1.3 10-18-2013 Update module view, add nReload Pin wireless upgrade and config description, add nLink Pin wireless upgrade indication description.

High-Flying

1. PRODUCT OVERVIEW

1.1. General Description

The HF-LPB100 is a fully self-contained small form-factor, single stream, 802.11b/g/n Wi-Fi module, which provide a wireless interface to any equipment with a Serial/SPI/USB interface for data transfer. HF-LPB100 integrate MAC, baseband processor, RF transceiver with power amplifier in hardware and all Wi-Fi protocol and configuration functionality and networking stack, in embedded firmware to make a fully self-contained 802.11b/g/n Wi-Fi solution for a variety of applications.

The HF-LPB100 employs the world's lowest power consumption embedded architecture. It has been optimized for all kinds of client applications in the home automation, smart grid, handheld device, personal medical application and industrial control that have lower data rates, and transmit or receive data on an infrequent basis.

The HF-LPB100 integrates all Wi-Fi functionality into a low-profile, 23.1x32.8x 2.7mm SMT module package that can be easily mounted on main PCB with application specific circuits. Also, module provides built-in antenna, external antenna option.

1.1.1 Device Features

- Single stream Wi-Fi @ 2.4 GHz with support for WEP security mode as well as WPA/WPA2
- Based on Self-developed High Cost Performance MCU
- Ultra-low-power operation with all kinds of power-save modes.
- Includes all the protocol and configuration functions for Wi-Fi connectivity.
- Support STA/AP/AP+STA Mode
- Support Smart Link Function
- Support Wireless and Remote Firmware Upgrade Function
- Support Max 6 Channel PWM/GPIO Output
- Integrated chip antenna, antenna connector options.
- Compact surface mount module 23.1mm x 32.8mm x 2.7mm.
- Full IPv4 and IPv6 stack.
- Low power RTOS and drivers.
- FCC Certified.
- RoHS and CE compliant.
- Single supply – 3.3V operation.

1.1.2 Device Parameters

Table 1 HF-LPB100 Module Technical Specifications

Class	Item	Parameters
Wireless Parameters	Certification	FCC/CE
	Wireless standard	802.11 b/g/n
	Frequency range	2.412GHz-2.484GHz
	Transmit Power	802.11b: +16 +/-2dBm (@11Mbps)
		802.11g: +14 +/-2dBm (@54Mbps)
		802.11n: +13 +/-2dBm (@HT20, MCS7)
	Receiver Sensitivity	802.11b: -93 dBm (@11Mbps ,CCK)
802.11g: -85 dBm (@54Mbps, OFDM)		
Antenna Option	External:I-PEX Connector Internal:On-board PCB antenna	
Hardware Parameters	Data Interface	UART SPI, PWM, GPIO
	Operating Voltage	2.8~3.6V
	Operating Current	Peak [Continuous TX]: ~200mA
		Normal [WiFi ON/OFF, DTIM=100ms]: Average. ~12mA, Peak: 200mA
		Standby [WiFi Shutdown]: <200uA
		Power Down Switch: <10uA
	Operating Temp.	-40°C - 85°C
Storage Temp.	-45°C - 125°C	
Dimensions and Size	23.1mm × 32.8mm × 2.7mm	
Software Parameters	Network Type	STA /AP/STA+AP
	Security Mechanisms	WEP/WPA-PSK/WPA2-PSK
	Encryption	WEP64/WEP128/TKIP/AES
	Update Firmware	Local Wireless, Remote
	Customization	Web Page Upgrade Support SDK for application develop
	Network Protocol	IPv4, TCP/UDP/FTP/HTTP
	User Configuration	AT+instruction set. Android/ iOS Smart Link APP tools

1.1.3 Key Application

- Remote equipment monitoring
- Asset tracking and telemetry
- Security
- Industrial sensors and controls
- Home automation
- Medical devices

1.2. Hardware Introduction

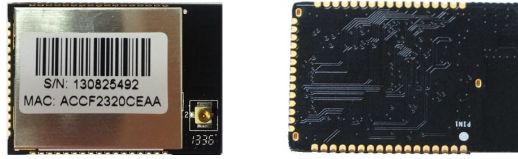


Figure 1. HF-LPB100 View

1.2.1. Pins Definition

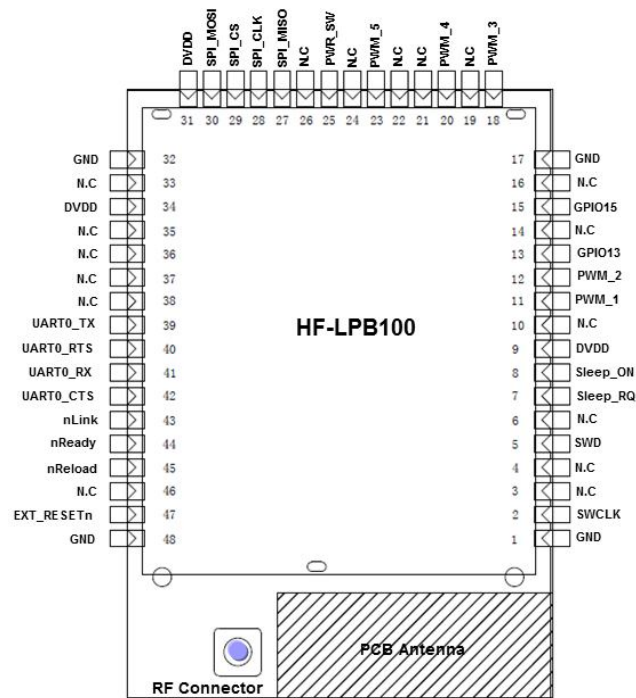


Figure 2. HF-LPB100 Pins Map

Table 2 HF-LPB100 Pins Definition

Pin	Description	Net Name	Signal Type	Comments
1,17,32,48	Ground	GND	Power	
2	Debug Pin	SWCLK	I, PD	Debug functional pin, No connect if not use.
3		NC		
4		NC		
5	Debug Pin	SWD	I/O,PU	

6		N.C		No connect
7	GPIO	Sleep_RQ	I,PU	GPIO7, No connect if not use.
8	GPIO	Sleep_ON	O	GPIO8, No connect if not use.
9	+3.3V Power	DVDD	Power	
10		N.C		No connect
11	PWM/GPIO	PWM_1	I/O	GPIO11, No connect if not use.
12	PWM/GPIO	PWM_2	I/O	GPIO12, No connect if not use.
13	GPIO	GPIO13	I/O	GPIO13, No connect if not use.
14		N.C		No connect
15	WPS/GPIO	GPIO15	I/O	GPIO15, WPS Function Pin.
16		N.C		No connect
18	PWM/GPIO	PWM_3	I/O	GPIO18, No connect if not use.
19		N.C		No connect
20	PWM/GPIO	PWM_4	I/O	GPIO20, No connect if not use.
21		N.C		No connect
22		N.C		No connect
23	GPIO	PWM_5	I/O	GPIO23, No connect if not use.
24		N.C		No connect
25	Power Control Switch	PWR_SW	I,PU	“0” – Power Down Mode(Lowest Power Consumption) “1” – Normal mode
26		N.C		No connect
27	SPI Interface	SPI_MISO	I	GPIO27, No connect if not use.
28	SPI Interface	SPI_CLK	I/O	GPIO28, No connect if not use.
29	SPI Interface	SPI_CS	I/O	GPIO29, No connect if not use.
30	SPI Interface	SPI_MOSI	O	GPIO30, No connect if not use.
31	+3.3V Power	DVDD	Power	
33		N.C		No connect
34	+3.3 Power	DVDD	Power	
35		N.C		No connect
36		N.C		No connect
37		N.C		No connect
38		N.C		No connect
39	UART0	UART0_TX	O	GPIO39, No connect if not use.
40	UART0	UART0_RTS	I/O	GPIO40, No connect if not use.
41	UART0	UART0_RX	I	GPIO41, No connect if not use.
42	UART0	UART0_CTS	I/O	GPIO42, No connect if not use.
43	Wi-Fi Status	nLink	O	Detailed functions see <Notes>
44	Module Boot Up Indicator	nReady	O	“0” – Boot-up OK; “1” – Boot-up No OK; No connect if not use.;
45	Multi-Function	nReload	I,PU	Detailed functions see <Notes>
46		N.C		No connect

47	Module Reset	EXT_RESETn	I,PU	“Low” effective reset input.
----	--------------	------------	------	------------------------------

<Notes>

nReload Pin (Button) function:

1. When this pin is set to “low” during module boot up, the module will enter wireless firmware and config upgrade mode. This mode is used for customer manufacture. (High-Flying will provide software tools for customer batch configuration and upgrade firmware during mass production)
2. After module is powered up, short press this button (“Low” < 3s) to make the module go into “Smart Link “ config mode, waiting for APP to set password and other information.
3. After module is powered up, long press this button (“Low” > 3s) to make the module recover to factory setting.

High-Flying strongly suggest customer fan out this pin to connector or button for “Manufacture” and “ Smart Link” application.

nLink Pin (LED) function:

1. At wireless firmware and config upgrade mode , this LED used to indicate configure and upgrade status.
 2. At “Smart Link “ config mode, this LED used to indicate APP to finish setting.
 3. At normal mode, it’s Wi-Fi link status indicator
- High-Flying strongly suggest customer fan out this pin to LED.

1.2.2. Electrical Characteristics

Absolute Maximum Ratings:

Parameter	Condition	Min.	Typ.	Max.	Unit
Storage temperature range		-45		125	°C
Maximum soldering temperature	IPC/JEDEC J-STD-020			260	°C
Supply voltage		0		3.8	V
Voltage on any I/O pin		0		3.3	V
ESD (Human Body Model HBM)	TAMB=25°C			2	KV
ESD (Charged Device Model, CDM)	TAMB=25°C			1	KV

Power Supply & Power Consumption:

Parameter	Condition	Min.	Typ.	Max.	Unit
Operating Supply voltage		2.8	3.3	3.8	V
Supply current, peak	Continuous Tx		200		mA
Supply current, IEEE PS	DTIM=100ms		12		mA
Output high voltage	Sourcing 6mA	2.8			V
Output low voltage	Sinking 6mA			0.2	V
Input high voltage		2.2			V
Input low voltage				0.8	V

- Antenna can't be shielded by any meal enclosure; All cover, include plastic, shall away from antenna at least 10mm;

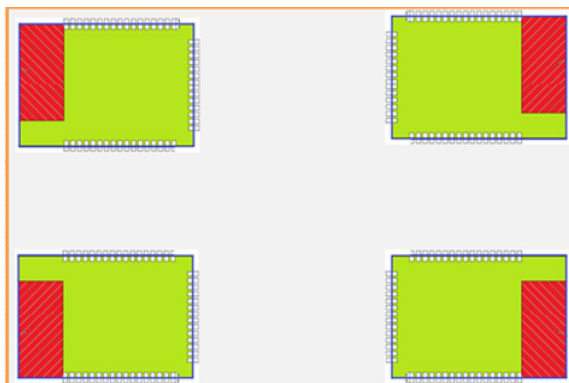


Figure 5. Suggested Module Placement Region

High-Flying suggest HF-LPB100 module better locate in following region at customer board, which to reduce the effect to antenna and wireless signal, and better consult High-Flying technical people when you structure your module placement and PCB layout.

1.2.5. External Antenna

HF-LPB100 module supports internal antenna and external antenna option for user dedicated application.

If user select external antenna, HF-LPB100 modules must be connected to the 2.4G antenna according to IEEE 802.11b/g/n standards.

The antenna parameters required as follows:

Table 3 HF-LPB100 External Antenna Parameters

Item	Parameters
Frequency range	2.4~2.5GHz
Impedance	50 Ohm
VSWR	2 (Max)
Return Loss	-10dB (Max)
Connector Type	I-PEX or populate directly

1.2.6. Evaluation Kit

High-Flying provides the evaluation kit to promote user to familiar the product and develop the detailed application. The evaluation kit shown as below, user can connect to HF-LPB100 module with the RS-232 UART, RS485, USB (Internal UART-USB convetor) or Wireless port to configure the parameters, manage the module or do the some functional tests.

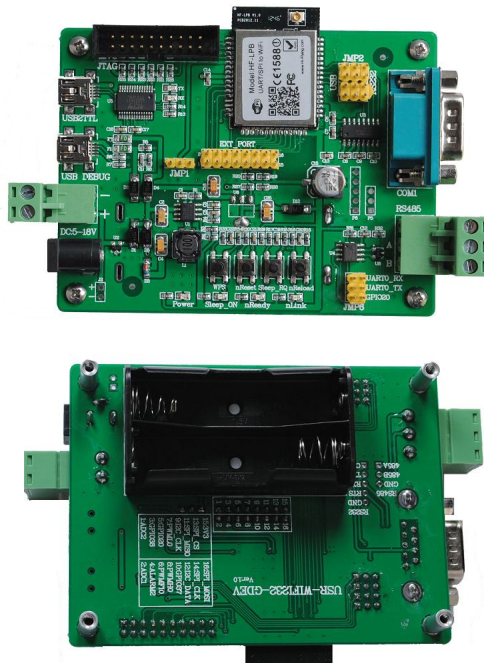


Figure 6. HF-LPB100 Evaluation Kit

Notes: User need download USB - UART port driver from High-Flying web or contact with technical support people for more detail.

The external interface description for evaluation kit as follows:

Table 4 HF-LPB100 Evaluation Kit Interface Description

Function	Name	Description
External Interface	COM1	Main data/command RS-232 interface
	RS485	Main data/command RS-485 interface
	JTAG	JTAG data debug interface (Not for user use)
	USB2TTL	UART to USB debug interface. (For PC without RS232, need load driver). Can be Power input.
	USB DEBUG	USB2.0 data interface.
	DC Jack	DC jack for power in, 5~18V input.
	DC5-18V	DC jack for power in, 5~18V input.
	BAT	2 Li-Battery Power Supply.
	EXT PORT	HF-LPB100 GPIO function extend interface connector
	JMP1,JMP2	Reserved, No Jumper required.
	JMP3	4Pin USB or RS232 Jumper. Left jump select USB.
	JMP6	3Pin RS485 Jumper. No jump selects RS232.

LED	Power	3.3V Power Indicator
	nLink	nLink -WiFi LINK Indicator See 1.2.1
	nReady	nReady – Module Bootup Ready Indicator On (“low”)- Module bootup OK; Off (“high”)- Mouule botup failed; Twinkle- Remote Upgrade Ongoing;
	Sleep_ON	Sleep_ON-Module asleep or awake Indicator On (“low”)- Module in shutdown(deep sleep) status; Off (“high”)- Mouule in normal status; Twinkle- Bootloader Upgrade Ongoing;
Button	nReset	Used to reset the module.
	nReload	Restore factory default configuration after push this pin more than 3s. See 1.2.1
	WPS	WPS Button (Reserved, No Use)
	Sleep_RQ	Pin Sleep Control button, more than 3s to put module in standby mode.

1.2.7. Order Information

Base on customer detailed requirement, HF-LPB100 series modules provide different variants and physical type for detailed application.

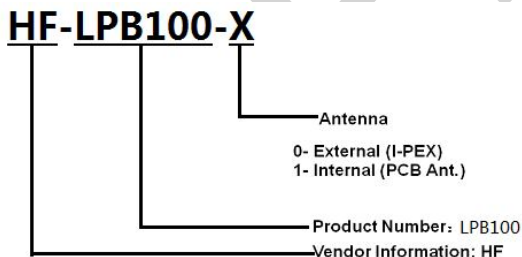


Figure 7. HF-LPB100 Order Information

1.3. Typical Application

1.3.1. Hardware Typical Application

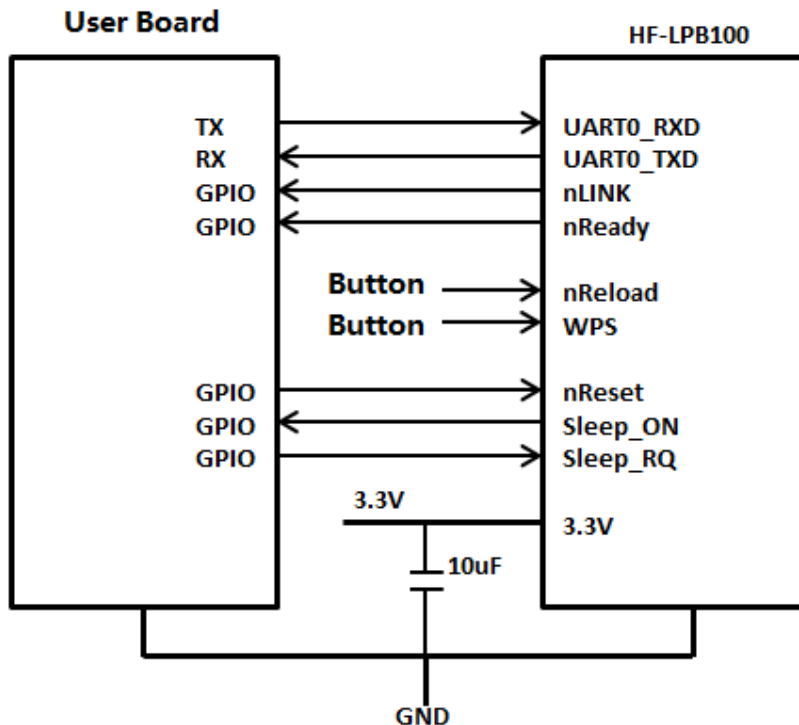


Figure 8. HF-LPB100 Hardware Typical Application

Notes:

nReset- Module hardware reset signal. Input. Logics “0” effective.

There is pull-up resistor internal and no external pull-up required. When module power up or some issue happened, MCU need assert nRST signal “0” at least 10ms, then set “1” to keep module fully reset.

nLink- Module WiFi connection status indication. Output.

(This pin is recommend to connect to LED, indicate status when the module in wireless upgrade mode)

When module connects to AP (AP associated), this pin will output “0”. This signal used to judge if module already at WiFi connection status. There is pull-up resistor internal and no external pull-up required. If nLink function not required, can leave this pin open.

nReady- Module boot up ready signal. Output. Logics “0” effective.

The module will output “0” after normal boot up. This signal used to judge if module finish boot up and ready for application or working at normal mode. If nReady function not required, can leave this pin open.

nReload- Module restore to factory default configuration. Input. Logics “0” effective.

(This pin is recommend to connect to button, is used to enter wireless upgrade mode)

User can de-assert nReload signal “0” more than 3s through button or MCU pin, then release, module will restore to factory default configuration and re-start boot up process.. If nReload function not required, can leave this pin open.

Sleep_RQ- Module Pin Sleep Control. Input.

The user should de-assert this pin low “0”, after 3’s assert to high ”1” to put the module to sleep status. Also at the deep sleep/standby mode, user can de-assert this pin low “0”, after 1’s assert to high ”1” to put the module to wake up the module. If Sleep_RQ function not required, can leave this pin open.

Sleep_ON- Module Pin Sleep Indicator. Output.

This pin is used to indicate that the module is asleep (Module output “0”) or awake (Module output “1”) status. If user doesn’t use pin sleep function, can leave this pin open.

UART0_TXD/RXD- UART port data transmit and receive signal.

2. FUNCTIONAL DESCRIPTION

2.1. Wireless Networking

HF-LPB100 module can be configured as both wireless STA and AP base on network type. Logically there are two interfaces in HF-LPB100. One is for STA, and another is for AP. When HF-LPB100 works as AP, other STA equipments are able to connect to wireless LAN via HF-LPB100 module. Wireless Networking with HF-LPB100 is very flexible.

Notes:

AP: that is the wireless Access Point, the founder of a wireless network and the centre of the network nodes. The wireless router we use at home or in office may be an AP.

STA: short for Station, each terminal connects to a wireless network (such as laptops, PDA and other networking devices) can be called with a STA device.

2.1.1. Basic Wireless Network Based On AP (Infrastructure)

Infrastructure: it's also called basic network. It built by AP and many STAs which join in.

The characters of network of this type are that AP is the centre, and all communication between STAs is transmitted through the AP. The figure following shows such type of networking.



Figure 9. HF-LPB100 Basic Wireless Network Structure

2.1.2. Wireless Network Based On AP+STA

HF-LPB100 module support AP+STA network mode, means module support one AP interface and one STA interface at the same time, as following figure,

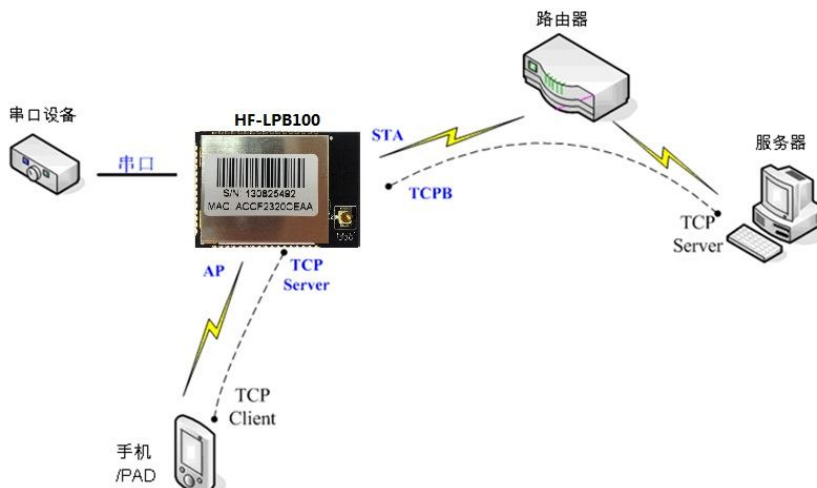


Figure 10. HF-A11 AP+STA Network Structure

When module enables AP+STA function, Module's STA interface can connect with router and connect to TCP server in the network. At the same time, module's AP interface is also active and permit phone/PAD to connect through TCPB, then phone/PAD can control user device and and setting the module parameters,

The advantage of AP+STA mode is:

- Users can easily setting and track user device through Phone/PAD and not change the original network setting.
- Users can easily setting module's parameters through WiFi when module works as STA mode.

2.2. Work Mode : Transparent Transmission Mode

HF-LPB100 module support serial interface transparent transmission mode. The benefit of this mode is achieves a plug and play serial data port, and reduces user complexity furthest. In this mode, user should only configure the necessary parameters. After power on, module can automatically connect to the default wireless network and server.

As in this mode, the module's serial port always work in the transparent transmission mode, so users only need to think of it as a virtual serial cable, and send and receive data as using a simple serial. In other words, the serial cable of users' original serial devices is directly replaced with the module; user devices can be easy for wireless data transmission without any changes.

The transparent transmission mode can fully compatible with user's original software platform and reduce the software development effort for integrate wireless data transmission.

The parameters which need to configure include:

- **Wireless Network Parameters**
 - Wireless Network Name (SSID)
 - Security Mode
 - Encryption Key

- **TCP/UDP Linking Parameters**
 - Protocol Type
 - Link Type (Server or Client)
 - Target Port ID Number
 - Target Port IP Address
- **Serial Port Parameters**
 - Baud Rate
 - Data Bit
 - Parity (Check) Bit
 - Stop Bit
 - Hardware Flow Control

2.3. UART Frame Scheme

2.3.1. UART Free-Frame

HF-LPB100 support UART free-frame function. If user select open this function, module will check the intervals between any two bytes when receiving UART data. If this interval time exceeds defined value (50ms default), HF-LPB100 will think it as the end of one frame and transfer this free-frame to WiFi port, or HF-LPB100 will receive UART data until 1000 bytes, then transfer 1000 bytes frame to WiFi port.

HF-LPB100's default interval time is 50ms. User can also set this interval to fast (10ms) through AT command. But user have to consider if user MCU can send UART data with 10ms interval, or the UART data may be divided as fragments.

Through AT command: AT+UARTTE=fash/normal, user can set the interval time: fast (10ms) and normal (50ms).

2.3.2. UART Auto-Frame

HF-LPB100 support UART auto-frame function. If user select open this function and setting auto-frame trigger length and auto-frame trigger time parameters, then module will auto frame the data which received from UART port and transmitting to the network as pre-defined data structure.

- **Auto-frame trigger length:** The fixed data length that module used to transmitting to the network.
- **Auto-frame trigger time:** After the trigger time, if UART port received data can't reach auto-frame trigger length, then module will transmitting available data to the network and bypass the auto-frame trigger length condition.

Detailed UART auto-frame function can refer to AT+ instruction set "UARTF/UARTFT/UARTFL" introduction.

2.4. Encryption

Encryption is a method of scrambling a message that makes it unreadable to unwanted parties, adding a degree of secure communications. There are different protocols for providing encryption, and the HF-LPB100 module supports following:

- ◆ WEP
- ◆ WPA-PSK/TKIP
- ◆ WPA-PSK/AES
- ◆ WPA2-PSK/TKIP
- ◆ WPA2-PSK/AES

2.5. Power Save Scheme

HF-LPB100 module can work at two modes based on different power save scheme:

- **Normal (Active/Sleep) Mode** - AP Associated, WiFi ON/OFF based on internal control
- **Standby Mode** - Non AP Associated, WiFi Shut down

Normal (Active/Sleep) Mode Normal mode is no DTIM related (Default mode), module will monitor the interval to Active/Sleep.

Standby Mode allows the WiFi circuitry to be powered down, which results in the lowest sleep current, but at the expense of longer wake up times. This is due to the module associating with the access point every time when it wakes up. The intent of this option is to allow for longer sleep times. Standby mode can through AT+MSLP command or trigger "Sleep_RQ" pin to go in.

The standby mode status and wakeup method as follows: For standby mode, module provides two wakes up options, user can select one or whole as the module wake up option. Refer to AT Instruction (Power Management Instruction Set) for more detailed setting.

- "Sleep_RQ" Pin Wake Up
- "Reset" Pin Wake Up

Table 6 Standby Mode Status and Wake Up

	Status				Wake Up Method			
	Wi-Fi	MCU	Current	UART	GPIO	Timeout	AT Command	Reset Pin
Standby	OFF	OFF	<80uA	OFF	Yes	No	No	Yes

Sleep_RQ Pin Wake Up Option allows an external microcontroller to determine when HF-LPB100 should sleep and when it should wake by controlling the "Sleep_RQ" and "Sleep_ON" pin. at the standby mode, user can de-assert this pin low "0", after 1's assert to high "1" to put the module to wake up the module. If user doesn't use pin sleep function, can leave this pin open.

Sleep_RQ Pin Wake Up Option allows an external microcontroller to de-assert "Reset" pin to low "0" to reset the module.

2.6. Parameters Configuration

HF-LPB100 module supports two methods to configuration parameters: **Web Accessing** and **AT+instruction set**.

Web accessing means users can configure parameters through Web browser. When HF-LPB100 module connected to wireless network, parameters configuration is done on a PC connected to the same wireless network.

AT+instruction set configuration means user configure parameters through serial interface command. Refer to “AT+instruction set” chapter for more detail.

2.7. Firmware Update

HF-LPB100 module supports two on-line upgrade methods:

- Webpage Wi-Fi Upgrade
- Remote Upgrade

Webpaged based Wi-Fi upgrade, please refer to 3.1.8 firmware upgrade page, user can upload firmware file from PC to HF-LPB100.

HF-LPB100 module also support upgrade from remote HTTP server, keep module connects to AP router before execute remote HTTP upgrade. Remote upgrade have two methods: **Direct Download and Upgrade**, **Configure File Based Upgrade**.

◆ Configure File Based Upgrade

AT+UPURL command to set the remote directory which the configuration file located, such as AT+UPURL=http://www.hi-flying.com/admin/down/

Notes: The last '/' can't be remove

AT+UPFILE command to set the configuration file name, such as AT+UPFILE=config.txt

AT+UPST command to start remote Application upgrade. After execute this command, the module will firstly download configuration file (“config.txt”), then download the upgrade file base on the URL address listed in the configure file.

AT+UPWEB command to start remote Webpage upgrade. After execute this command, the module will firstly download configuration file (“config.txt”), then download the upgrade file base on the WEB address listed in the configure file.

AT+UPCFG command to start remote Factory Config upgrade. After execute this command, the module will firstly download configuration file (“config.txt”), then download the upgrade file base on the CFG address listed in the configure file.

AT+UPNVR command to start remote NVRAM Data upgrade. After execute this command, the module will firstly download configuration file (“config.txt”), then download the upgrade file base on the NVR address listed in the configure file.

AT+UPAUTO command to start remote upgrade. After execute this command, the module will firstly download configuration file (“config.txt”), then download the upgrade file base on the URL, WEB, CFG address listed in the configure file. It include the functions of AT+UPST, AT+UPWEB, AT+UPCFG.

General “config.txt” file format as following example:

```
[URL]="http://10.10.100.100:80/lpb.bin"
[WEB]="http://10.10.100.100:80/web.bin"
[NVR]="http://10.10.100.100:80/nvram.dat"
[CFG]= "http://10.10.100.100:80/cfg.bin"
```

[URL]= the URL address of Application.

[WEB]=the URL address of Webpage

[NVR]= the URL address of NVRAM data

[CFG]= the URL address of Factory Parameter File

◆ Direct Download and Upgrade

AT+UPURL command to set the remote directory and file name, such as:

```
AT+UPURL=http://www.hi-flying.com!/admin/down/,lpb.bin
```

After execute this command, the module will directly download the “lpb.bin” file from remote directory and start upgrade Application.

Notes: please contact with high-flying technical people before upgrade firmware, or maybe damage the module and can't work again.

2.8. GPIO/PWM Function

HF-LPB100 module can provide many GPIOs, which include max 6 PWM/GPIO control pins. User devices can read/write GPIO/PWM pins status.

Table 7 HF-LPB100 GPIO/PWM Pin Mapping Table

GPIO	Configured Function	Description	Default Setting	Type
GPIO11	PWM/GPIO Channel	PWM_1	GPIO11	I/O
GPIO12	PWM/GPIO Channel	PWM_2	GPIO12	I/O
GPIO15	GPIO Channel	GPIO15	GPIO15	I/O
GPIO18	PWM/GPIO Channel	PWM_3	GPIO18	I/O
GPIO20	PWM/GPIO Channel	PWM_4	GPIO20	I/O
GPIO23	GPIO Channel	PWM_5	GPIO23	I/O

When module works at PWM mode, PC and other devices can setup connection (TCP/UDP) through WiFi, then read/write GPIO/PWM information through command data.


- GPIO n OUT 0, Set GPIO n as output and output '0', Response GPIO OK or GPIO NOK;
- GPIO n OUT 1, Set GPIO n as output and output '1', Response GPIO OK or GPIO NOK;
- GPIO n GET, Read GPIO n pin status, Response +ok=1 or GPIO NOK
- GPIO n SET, Save GPIO n set, Response GPIO OK or GPIO NOK
- PWM n frequency duty, Set PWM n Channel output, Response GPIO OK or GPIO NOK
- PWM n GET, Read PWM n Channel set, Response +ok=frequency duty or PWM NOK
- PWM n SET, Save PWM n Channel set, Response PWM OK or PWM NOK

Notes: Please refer to Appendix B for details to use GPIO/PWM.

2.9. SOCKET B Function

HF-LPB100 support double socket communication, the socket B function is disabled by default.

After the module is started, send command “AT+SOCKB” to set the connection parameter, send command “AT+TCPDISB=on” to try to connect with TCP server, the module will stop connecting after three failures. Send command “AT+TCPDISB=on” to make connection. Send command “AT+TCPDISB=off” to close connection. Send command “AT+TCPLKB” to inquire TCP connection.

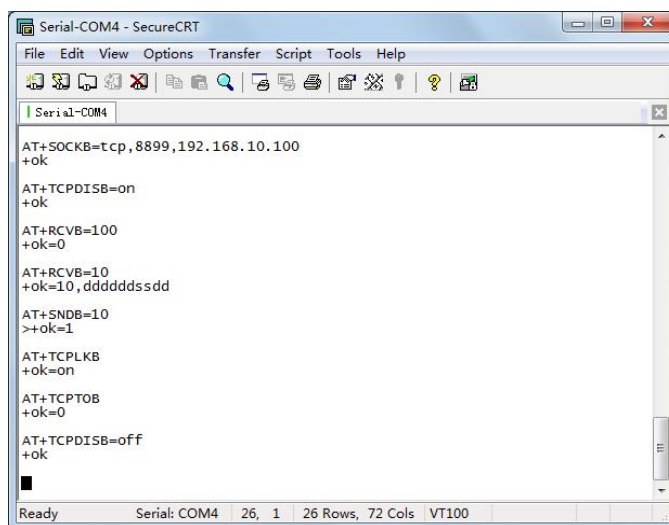

```
Serial-COM4 - SecureCRT
File Edit View Options Transfer Script Tools Help
Serial-COM4
AT+SOCKB=tcp,8899,192.168.10.100
+ok
AT+TCPDISB=on
+ok
AT+RCVB=100
+ok=0
AT+RCVB=10
+ok=10,dddddsdd
AT+SNDB=10
>+ok=1
AT+TCPLKB
+ok=on
AT+TCPTOB
+ok=0
AT+TCPDISB=off
+ok
Ready Serial: COM4 26, 1 26 Rows, 72 Cols VT100
```

Figure 11. Socket B function demo

2.10. Multi-TCP Link Connection

When HF-LPB100 module configured as TCP Server, it supports Multi-TCP link connection, and maximum 5 TCP clients permit to connect to HF-LPB100 module. User can realize multi-TCP link connection at each work mode.

Multi-TCP link connection will work as following structure:

Upstream: All dates from different TCP connection or client will be transmitted to the serial port as a sequence.

Downstream: All data from serial port (user) will be duplicate and broadcast to every TCP connection or client.

Detailed multi-TCP link data transmission structure as following figure:

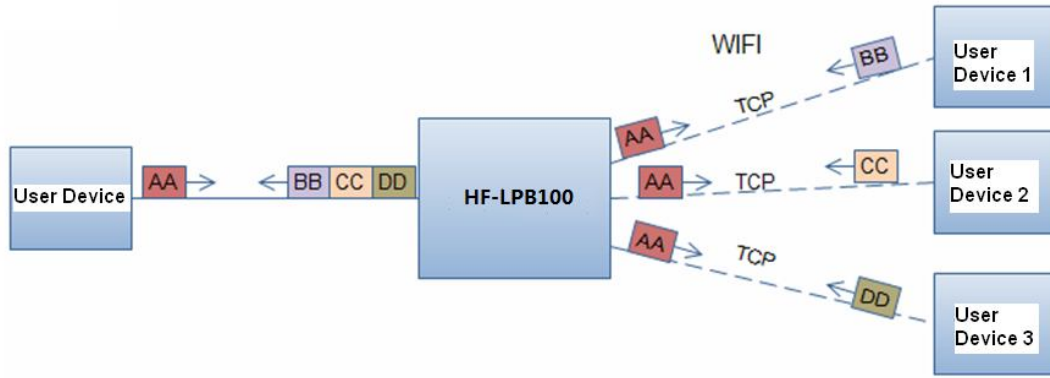


Figure 12. Multi-TCP Link Data Transmission Structure

3. OPERATION GUIDELINE

3.1. Configuration via Web Accessing

When first use HF-LPB100 modules, user may need some configuration. User can connect to HF-LPB100 module's wireless interface with following default setting information and configure the module through laptop.

Table 8 HF-LPB100 Web Access Default Setting

Parameters	Default Setting
SSID	HF-LPB100
IP Address	10.10.100.254
Subnet Mask	255.255.255.0
User Name	Admin
Password	Admin

3.1.1. Open Web Management Interface

- Step 1: Connect laptop to SSID "HF-LPB100" of HF-LPB100 module via wireless LAN card;
 Step 2: After wireless connection OK. Open Wen browser and access "<http://10.10.100.254>";
 Step 3: Then input user name and password in the page as following and click "OK" button.



Figure 13. Open Web Management page

The HF-LPB100 web management page support English and Chinese language. User can select language environment at the top right corner and click "Apply" button.

The main menu include nine pages: "System", "Work Mode", "STA Setting", "AP Setting", "Other Setting", "Account", "Upgrade SW", "Restart", "Restore".

3.1.2. System Page

At this page, user can check current device's important information and status such as: device ID (MID), software version, wireless work mode and related Wi-Fi parameters.

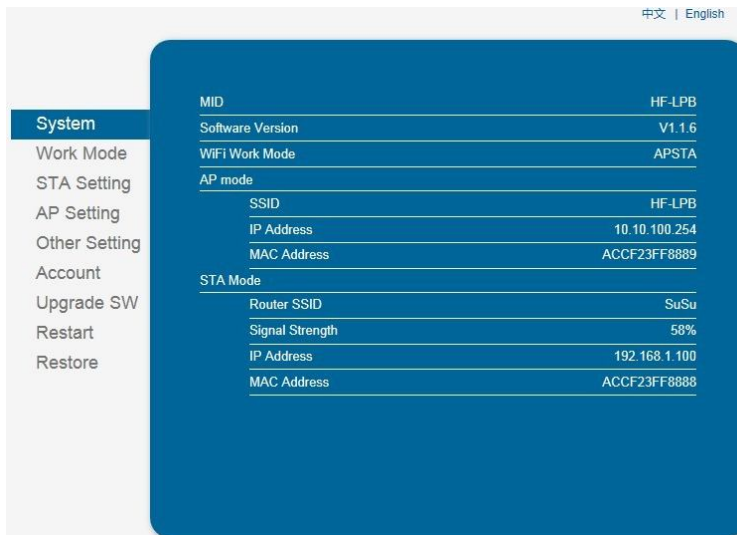


Figure 14. System Web Page

3.1.3. Work Mode Page

HF-LPB100 module can works at AP mode to simplify user’s configuration, can also works at STA to connect remote server through AP router. Also, it can configure at AP+STA mode which provide very flexible application for customers.

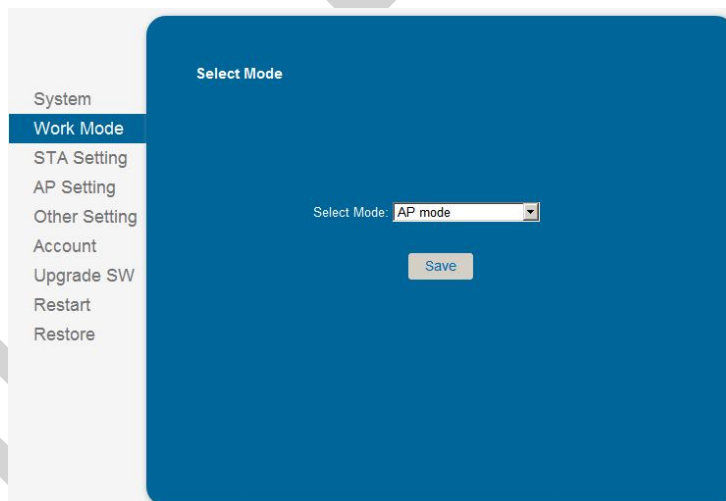


Figure 15. Work Mode Page

3.1.4. STA Setting Page

User can push “Scan” button to auto search Wi-Fi AP router nearby, and can connect with associate AP through some settings. Please note the encryption information input here must be fully same with Wi-Fi AP router’s configuration, and then it can link with AP correctly.



Figure 16. STA Setting Page

3.1.5. AP Setting Page

When user select module works at AP and AP+STA mode, then need setting this page and provide wireless and network parameters. Most of the system support DHCP to achieve IP address, so we suggest to “Enable” DHCP server in most applications.

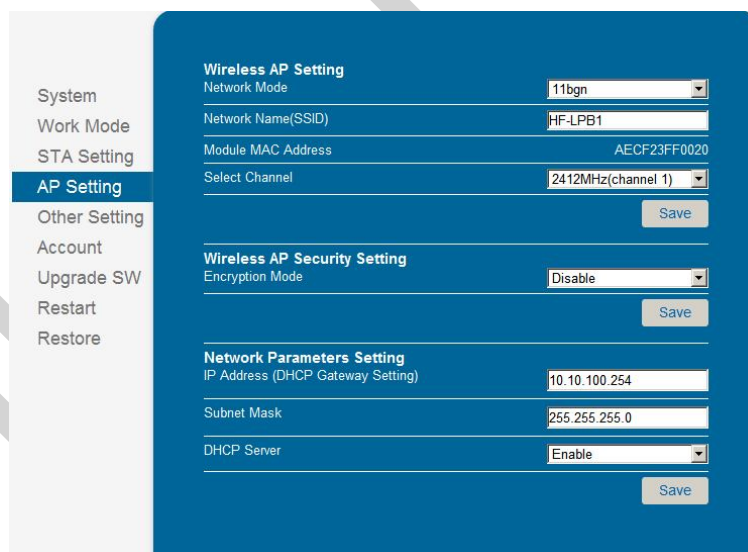


Figure 17. AP Setting Page

3.1.6. Other Setting Page

HF-LPB100 usually works at data transparent transmission mode. At this mode, the user device which connected with HF-LPB100 will connect and communicate with remote PC or server. At this page, user need setting serial port communication parameters and defines TCP related protocol parameters.

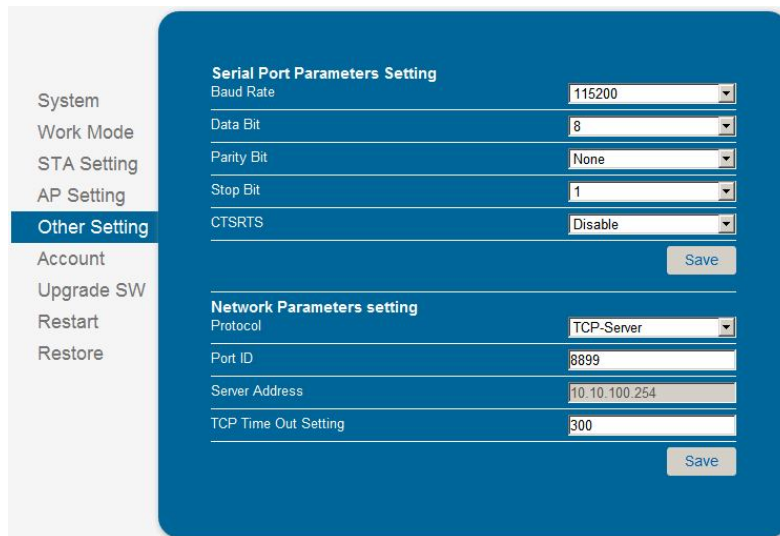


Figure 18. Other Setting Page

3.1.7. Account Management Page

This page set web server's user name and password.

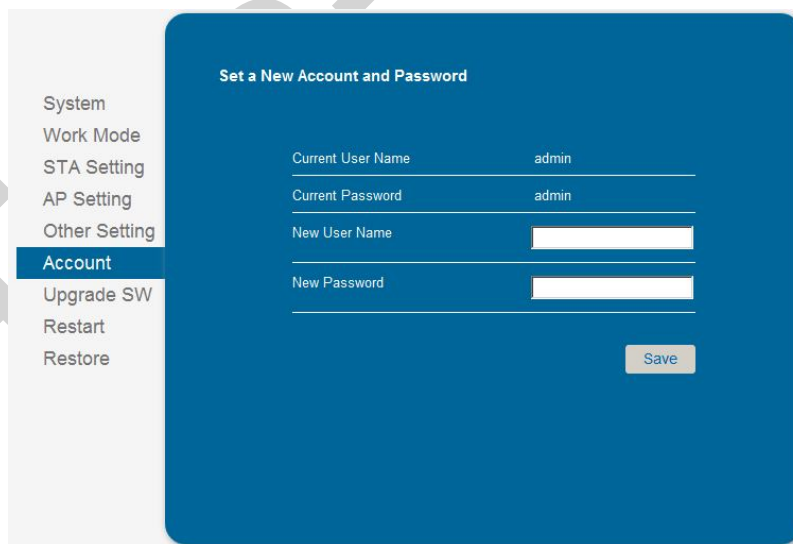


Figure 19. Account Page

3.1.8. Upgrade Software Page

User can upgrade new software (firmware) version through Wi-Fi.

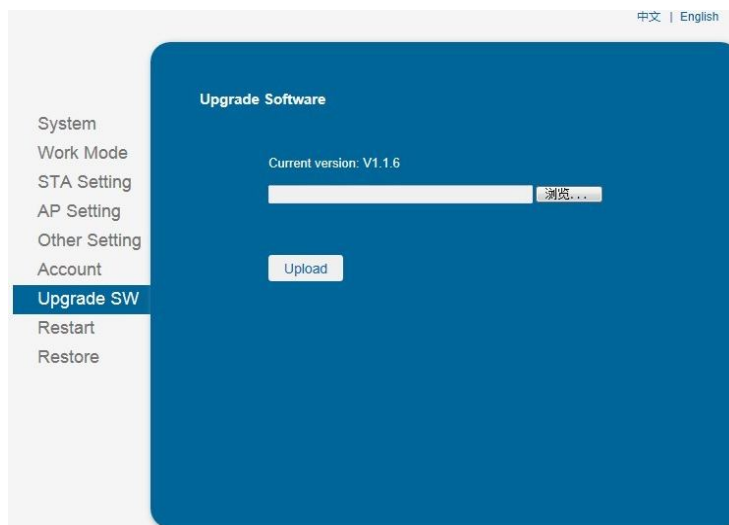


Figure 20. Upgrade SW page

3.1.9. Restart Page

Most of the setting and configuration can only effective after system restart. User shall restart after finish all setting.

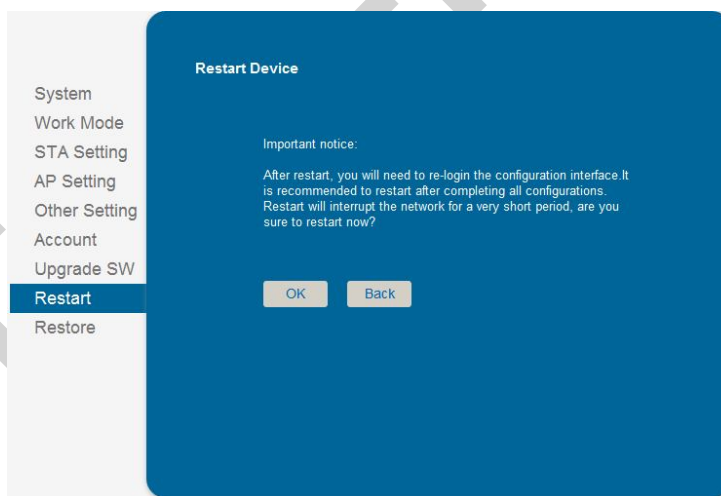


Figure 21. Restart Page

3.1.10. Restore Page

After module restore factory default setting, all user configuration profile will lose.

User can access <http://10.10.100.254> to set again, and user name and password is “admin”. HF-LPB100 will restore to AP mode for factory default setting.

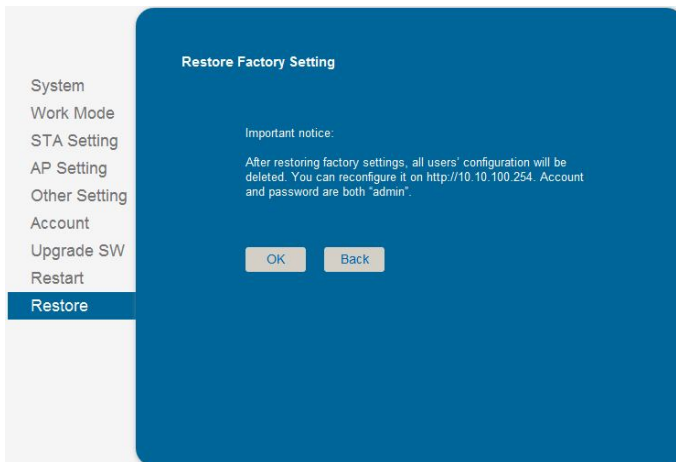




Figure 22. Restore Page

3.2. HF-LPB100 Usage Introduction

3.2.1. Software Debug Tools

High-Flying use two common software tools debugging and applying HF-LPB100 module. (User can also select other tools used to debug serial port).

- Serial Debugging Software: ComTools  ComTools.exe
- Ethernet Debugging Software: TCPUDPDbg  TCPUDPDbg.exe

3.2.2. Network Connection

User can select two methods to connect HF-LPB100 module base on dedicated application.

- **Use HF-LPB100 STA interface.** HF-LPB100 and debug PC2 connect to a wireless AP, another PC1 (or user device) connect to HF-LPB100 module with serial port:



Figure 23. STA Interface Debug Connection

- **Use HF-LPB100 AP interface.** Debug PC2 connect to HF-LPB100 through wireless connection, another PC1 (or user device) connect to HF-LPB100 module with serial port.



Figure 24. AP Interface Debug Connection

3.2.3. Default Parameter Setting

- Default SSID: HF-LPB100;
- Deault security mode: open,none;
- User UART parameter setting:115200,8,1,None;
- Default network parameter setting:TCP,Server,8899,10.10.100.254;
- Module IP address: dhcp,0.0.0.0,0.0.0.0,0.0.0.0;

3.2.4. Module Debug

PC1 open “CommTools” program, setting the same serial port parameters with HF-LPB100 module and open serial port connection.

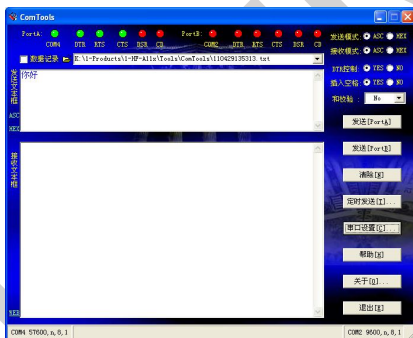


Figure 25. “CommTools” Serial Debug Tools

PC2 open “TCPUDPDbg” program, and create a new connection. If HF-LPB100 configured as Server mode, “TCPUDPDbg” Tools shall create “Client” mode connection. Or otherwise, create a “Server” mode connection.

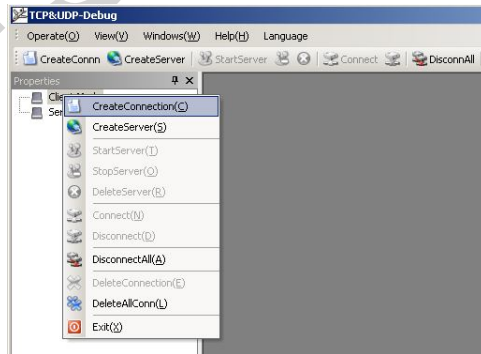


Figure 26. “TCPUDPDbg” Tools Create Connection

Then setting the TCP/UDP connection parameters. Default as following:

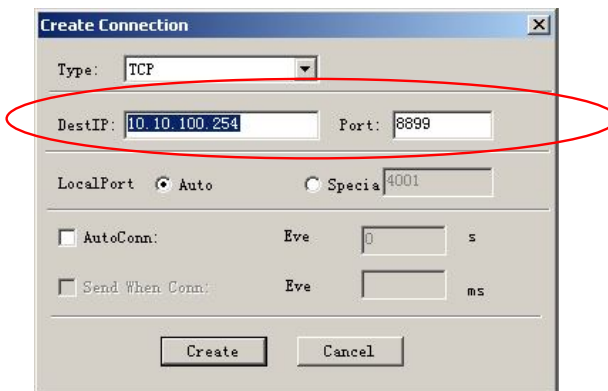


Figure 27. "TCPUDPDbg" Tools Setting

Then, click "Create" button to create a connection.

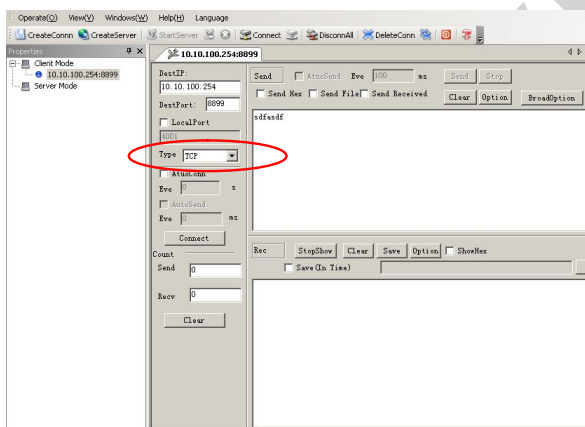


Figure 28. "TCPUDPDbg" Tools Connection

Now, in transparent transmission mode, data can be transferred from "CommTools" program to "TCPUDPDbg" program, or in reverse. You can see data in receiver side will keep same as in sender side.

3.3. Typical Application Examples

3.3.1. Wireless Control Application



Figure 29. Wireless Control Application

For this wireless control application, HF-LPB100 works as Ad-Hoc mode. Module's serial port connects to user device. So, control agent (Smart phone for this example) can manage and control the user device through the wireless connection with HF-LPB100 module.

3.3.2. Remote Management Application

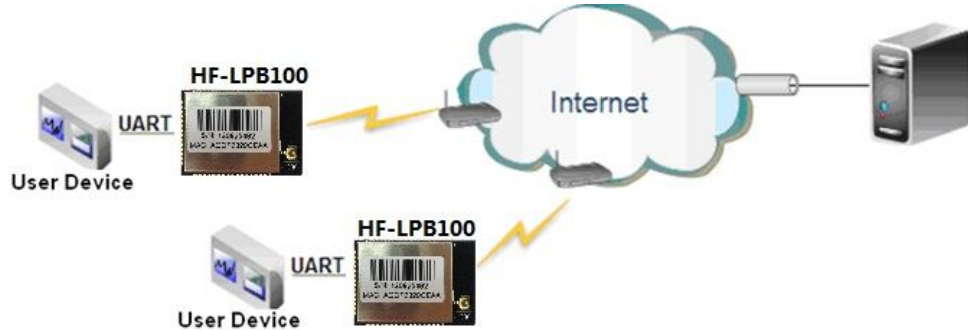


Figure 30. Remote Management Application

For this remote management application, HF-LPB100 works as STA mode and connects to Internet through wireless AP. Module configured as TCP Client and communicates with remote TCP server at Internet. Module's serial port connects to user device.

So, user device's data or sampling information can send to remote TCP server for storage or processing. Also remote TCP server can send command to control and manage the user device through the wireless network.

3.3.3. Transparent Serial Port Application

For this transparent serial port application, two HF-LPB100 modules connect as below figures to build up a transparent serial port connection. HF-LPB100 works as Ad-Hoc mode to connect each other.



Figure 31. Transparent Serial Port Application

4. AT+INSTRUCTION INTRODUCTION

4.1. Configuration Mode

When HF-LPB100 power up, it will default works as transparent transmission mode, then user can switch to configuration mode by serial port command. HF-LPB100 UART default parameters setting as below figure,

Uart Setting	
Baudrate	115200
Data Bits	8
Parity	None
Stop	1
CTSRTS	Disable

Figure 32. HF-LPB100 Default UART Port Parameters

In configuration mode, user can setting the module through AT+ instruction set, which cover all web page setting function.

4.1.1. Switch to Configuration Mode

Two steps to finish switching from transparent transmission mode to configuration mode.

- **UART input “+++”, after module receive “+++”, and feedback “a” as confirmation.**
- **UART input “a”, after module receive “a” and feedback “+ok” to go into AT+ instruction set configuration mode.**

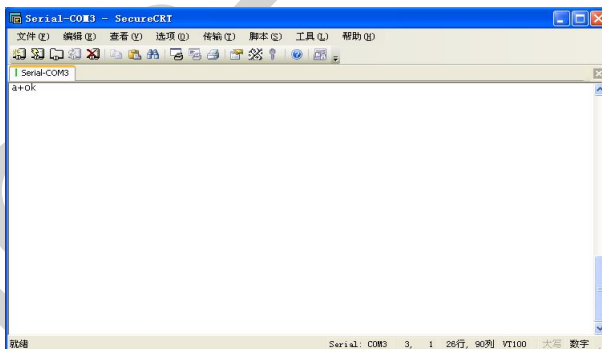


Figure 33. Switch to Configuration Mode

Notes:

1. When user input “+++” (No “Enter” key required), the UART port will display feedback information “a”, and not display input information “+++” as above UART display.
2. Any other input or wrong step to UART port will cause the module still works as original mode (transparent transmission).

AT+ Instruction Set Overview

User can input AT+ Instruction through hyper terminal or other serial debug terminal, also can program the AT+ Instruction to script. User can also input “AT+H” to list all AT+ Instruction and description to start.

```

AT+H
+ok

AT+: NONE command, reply "+ok".
AT+ASWD: Set/Query WiFi configuration code.
AT+E: Echo ON/Off, to turn on/off command line echo function.
AT+ENTM: Goto Through Mode.
AT+NETP: Set/Get the Net Protocol Parameters.
AT+UART: Set/Get the UART Parameters.
AT+UARTF: Enable/disable UART AutoFrame function.
AT+UARTFT: Set/Get time of UART AutoFrame.
AT+UARTFL: Set/Get frame length of UART AutoFrame.
AT+UARTTE: Set/Query UART free-frame trigger time between two byte.
AT+PING: General PING command.
AT+WAP: Set/Get the AP parameters.
AT+WKEY: Set/Get the Security Parameters of WIFI AP Mode.
AT+WMODE: Set/Get the WIFI Operation Mode (AP or STA).
AT+WKEY: Set/Get the Security Parameters of WIFI STA Mode.
AT+WSSID: Set/Get the AP's SSID of WIFI STA Mode.
AT+WSLK: Get Link Status of the Module (Only for STA Mode).
AT+WSQL: Get Link Quality of the Module (Only for STA Mode).
AT+WSCAN: Get The AP site Survey (only for STA Mode).
AT+WEBU: Set/Get the Login Parameters of WEB page.
AT+TCPK: Get The state of TCP link.
AT+TCPTO: Set/Get TCP time out.
AT+TCPDIS: Connect/Dis-connect the TCP Client link
AT+RECV: Recv data from UART
AT+SEND: Send data to UART
AT+WANN: Set/Get The WAN setting if in STA mode.
AT+LANN: Set/Get The LAN setting if in ADHOC mode.
AT+RELD: Reload the default setting and reboot.
AT+RLDEN: Put on/off the GPIO12.
AT+Z: Reset the Module.
AT+MID: Get The Module ID.
AT+VER: Get application version.
AT+H: Help.

```

Figure 34. "AT+H" Instruction for Help

4.2.1. Instruction Syntax Format

AT+Instruction protocol is based on the instruction of ASCII command style, the description of syntax format as follow.

- **Format Description**
 - <>: Means the parts must be included
 - [: Means the optional part

- **Command Message**

AT+<CMD>[op][para-1,para-2,para-3,para-4...]<CR>

- AT+: Prefix of command message;
- CMD: Command string;
- [op]: Symbol of command operator,
 - ◆ "=": The command requires parameters input;
 - ◆ "NULL": Query the current command parameters setting;
- [para-n]: Parameters input for setting if required;
- <CR>:"Enter" Key, it's 0x0a or 0x0d in ASCII;

Notes: When input AT+Instruction, “AT+<CMD>” character will display capital letter automatic and other_parts will not change as you input.

➤ **Response Message**

+<RSP>[op] [para-1,para-2,para-3,para-4...]<CR><LF><CR><LF>

- +: Prefix of response message;
- RSP: Response string;
 - ◆ “ok” : Success
 - ◆ “ERR”: Failure
- [op] : =
- [para-n]: Parameters if query command or Error code when error happened;
- <CR>: ASCII 0x0d;
- <LF>: ASCII 0x0a;

➤ **Error Code**

Table 9 Error Code Description

Error Code	Description
-1	Invalid Command Format
-2	Invalid Command
-3	Invalid Operation Symbol
-4	Invalid Parameter
-5	Operation Not Permitted

4.2.2. AT+ Instruction Set

Table 10 AT+ Instruction Set List

Instruction	Description
<null>	NULL
Managment Instruction Set	
E	Open/Close show back function
WMODE	Set/Query Wi-Fi work mode (AP/STA/APSTA)
ENTM	Set module into transparent transition mode
TMODE	Set/Query module data transfer mode
MID	Query module ID information
VER	Query module software version information
RELD	Restore to factory default setting
FCLR	Erase factory setting
Z	Re-start module
H	Help
Configure Parameters Instruction Set	
CFG RD	Batch Read User Configure Parameters
CFG WR	Batch Write Configure Parameters

CFGFR	Batch Read Factory Default Configure Parameters
CFGTF	Copy User Parameters to Factory Default Parameters
UART Instruction Set	
UART	Set/Query serial port parameters
UARTFT	Open/Close UART auto-frame function
UARTFT	Set/Query UART auto-frame trigger time
UARTFL	Set/Query UART auto-frame trigger length
UARTTE	Set/Query UART free-frame trigger time between two bytes
Command Mode Set	
SEND	Send Data at Command Mode
RECV	Receive Data at Command Mode
Network Instruction Set	
PING	Network "Ping" Instruction
NETP	Set/Query network protocol parameters
MAXSK	Set/Query TCP Client connection number
TCPLK	Query if TCP link already build-up
TCPTO	Set/Query TCP timeout
TCPDIS	Open/Close TCP link
SOCKB	Set/Query SOCKB parameters
TCPDISB	Open/Close SOCKB TCP link
TCPTOB	Set/Query SOCKB TCP timeout
TCPLKB	Query if SOCKB TCP link already build-up
SNDB	Send data to SOCKB in Command Mode
RCVB	Receive data from SOCKB in Command Mode
Wi-Fi STA Instruction Set (Effective when module works as STA)	
WSKEY	Set/Query STA security parameters
WSSID	Set/Query associated AP SSID parameters
WANN	Set/Query STA's network parameters
WSMAC	Set/Query STA's MAC address
WSLK	Query STA Wi-Fi link status
WSLQ	Query STA Wi-Fi signal strength
WSCAN	Scan AP
WSDNS	Set/Query STA's Static DNS server address
Wi-Fi AP Instruction Set (Effective when module works as AP)	
LANN	Set/Query AP's network parameters
WAP	Set/Query AP Wi-Fi parameters
WAKEY	Set/Query AP security parameters
WAMAC	Set/Query AP MAC address
WADHCP	Set/Query AP DHCP Server status
WADMN	Set/Query AP webpage domain name
Webpage Management Instruction Set	
PLANG	Set/Query Webpage Language Option
WEBU	Set/Query Webpage User name and Code
Remote Upgrade Instruction Set	
UPURL	Set/Query remote upgrade URL address
UPFILE	Set/Query remote upgrade configure file name
UPWEB	Start remote web upgrade
UPCFG	Start remote config file upgrade
UPNVR	Start remote NVRAM data upgrade

UPAUTO	Start remote upgrade
LOGSW	Open/Close remote upgrade log
LOGPORT	Set/Query UDP port of remote upgrade log
UPST	Start remote Application upgrade
Power Management Instruction Set	
MSLP	Set/Query deep sleep/standby mode parameters
Network Time Set	
NTPRF	Set/Query time calibration interval
NTPEN	Enable/Disable time calibration function
NTPTM	Query time
Others Instruction Set	
WRMID	Set module ID
RLDEN	Set/Query GPIO45 status
ASWD	Set/Query WiFi configuration code
MDCH	Set Wi-Fi Auto Switch Function
TXPWR	Set/Query Wi-Fi Transmit Power

WiFi Config Tools don't support "CFGRD" command yet.

4.2.2.1. AT+E

- Function: Open/Close show back function;
- Format:

AT+E<CR>

+ok<CR>< LF ><CR>< LF >

When HF-LPB100 module firstly switch from transparent transmission to configuration mode, show back status is open, input "AT+E" to close show back function, input "AT+E" again to open show back function.

4.2.2.2. AT+WMODE

- Function: Set/Query WIFI work mode;
- Format:

- ◆ Query Operation

AT+WMODE<CR>

+ok=<mode><CR>< LF ><CR>< LF >

- ◆ Set Operation

AT+ WMODE=<mode><CR>

+ok<CR>< LF ><CR>< LF >

- Parameters:
 - ◆ mode:Wi-Fi work mode
 - ◇ AP
 - ◇ STA
 - ◇ APSTA

4.2.2.3. AT+ENTM

- Function: Set module into transparent transmission mode;
- Format:

```
AT+ENTM<CR>
+ok<CR>< LF ><CR>< LF >
```

When operate this command, module switch from configuration mode to transparent transmission mode.

4.2.2.4. AT+TMODE

- Function: Set/Query module data transfer mode.
- Format:
 - ◆ Query Operation

```
AT+TMODE<CR>
+ok=<tmode><CR>< LF ><CR>< LF >
```

- ◆ Set Operation

```
AT+TMODE=<tmode><CR>
+ok<CR>< LF ><CR>< LF >
```

- Parameters:
 - ◆ tmode: data transfer mode, include:
 - ◇ throughput
 - ◇ cmd
 - ◇ pwm

4.2.2.5. AT+MID

- Function: Query module ID information;
- Format:
 - ◆ Query Operation

```
AT+MID<CR>
+ok=<module_id><CR>< LF ><CR>< LF >
```

- Parameters:
 - ◆ module_id: Module ID information;
 - ◇ HF-LPB100;

Notes: User can set this parameter through AT+WRMID.

4.2.2.6. AT+VER

- Function: Query module software version information;
- Format:
 - ◆ Query Operation

```
AT+VER<CR>
+ok=<ver><CR>< LF ><CR>< LF >
```

- Parameters:
 - ◆ ver: Module software version information;

4.2.2.7. AT+RELD

- Function: module restore to factory default setting;
- Format:
 - ◆ Set Operation

AT+ RELD<CR>
+ok=rebooting...<CR>< LF ><CR>< LF >

When operate this command, module will restore to factory default setting and reboot.

4.2.2.8. AT+FCLR

- Function: Erase factory setting;
- Format:
 - ◆ Query Operation

AT+FCLR<CR>
+ok=<status><CR>< LF ><CR>< LF >

4.2.2.9. AT+Z

- Function: Re-start module;
- Format:

AT+ Z<CR>

4.2.2.10. AT+H

- Function: Help;
- Format:
 - ◆ Query Operation

AT+H<CR>
+ok=<command help><CR>< LF ><CR>< LF >

- Parameters:
 - ◆ command help: command introduction;

4.2.2.11. AT+CFGRD

- Function: Batch Read User Configure Parameters;
- Format:
 - ◆ Query Operation

AT+CFGRD<CR>
+ok=<config><CR>< LF ><CR>< LF >

- Parameters:
 - ◆ config: the first two bytes means the length of configuration parameters;

4.2.2.12. AT+CFGWR

- Function: Batch Write User Configure Parameters;
- Format:
 - ◆ Set Operation

AT+CFGWR=<config><CR>
+ok<CR>< LF ><CR>< LF >

- Parameters:
 - ◆ config: the first two bytes means the length of configuration parameters;

4.2.2.13. AT+CFGFR

- Function: Batch Read Factory Default Configure Parameters;
 - Format:
 - ◆ Query Operation
- AT+CFGFR<CR>**
+ok=<config><CR>< LF ><CR>< LF >
- Parameters:
 - ◆ config: the first two bytes means the length of configuration parameters;

4.2.2.14. AT+CFGTF

- Function: Copy User Parameters to Factory Default Parameters;
 - Format:
 - ◆ Query Operation
- AT+CFGTF<CR>**
+ok=<status><CR>< LF ><CR>< LF >
- Parameters:
 - ◆ status: feedback operation status;

4.2.2.15. AT+UART

- Function: Set/Query serial port parameters;
 - Format:
 - ◆ Query Operation
- AT+UART<CR>**
+ok=<baudrate,data_bits,stop_bit,parity><CR>< LF ><CR>< LF >
- ◆ Set Operation
- AT+UART=<baudrate,data_bits,stop_bit,parity><CR>**
+ok<CR>< LF ><CR>< LF >
- Parameters:
 - ◆ baudrate:
 - ◇ 300,600,1200,1800,2400,4800,9600,19200,38400,57600,115200,230400,380400,460800.
 - ◆ data_bits:
 - ◇ 8
 - ◆ stop_bits:
 - ◇ 1,2
 - ◆ parity:
 - ◇ NONE
 - ◇ EVEN
 - ◇ ODD
 - ◆ Flowctrl: (CTSRTS)
 - ◇ NFC: No hardware flow control
 - ◇ FC: hardware flow control

4.2.2.16. AT+ UARTF

- Function: Open/Close UART auto-frame function;

- Format:

- ◆ Query Operation

AT+ UARTF<CR>

+ok=<para><CR>< LF ><CR>< LF >

- ◆ Set Operation

AT+ UARTF=<para ><CR>

+ok<CR>< LF ><CR>< LF >

- Parameters:

- ◆ para:

- ◇ disable - Close auto-frame function;
- ◇ enable - Open auto-frame function;

4.2.2.17. AT+ UARTFT

- Function: Set/Query UART auto-frame trigger time;

- Format:

- ◆ Query Operation

AT+ UARTFT<CR>

+ok=<time><CR>< LF ><CR>< LF >

- ◆ Set Operation

AT+ UARTFT=<time ><CR>

+ok<CR>< LF ><CR>< LF >

- Parameters:

- ◆ time: Range 100 ~10000; Unit: ms. Auto-frame trigger time

4.2.2.18. AT+ UARTFL

- Function: Set/Query UART auto-frame trigger length;

- Format:

- ◆ Query Operation

AT+ UARTFL<CR>

+ok=<len><CR>< LF ><CR>< LF >

- ◆ Set Operation

AT+ UARTFL=<len ><CR>

+ok<CR>< LF ><CR>< LF >

- Parameters:

- ◆ len: Range 8 ~1000; Unit: Byte. Auto-frame trigger length;

4.2.2.19. AT+ UARTTE

- Function: Set/Query UART free-frame trigger time between two bytes;

- Format:

- ◆ Query Operation

AT+ UARTTE<CR>

+ok=<mode><CR>< LF ><CR>< LF >

- ◆ Set Operation

AT+ UARTTE=<mode><CR>

+ok<CR>< LF ><CR>< LF >

- Parameters:
 - ◆ mode:
 - ◇ fast: free-frame trigger time between two bytes is 10ms;
 - ◇ normal: free-frame trigger time between two bytes is 50ms;

4.2.2.20. AT+ SEND

- Function: Send Data at Command Mode.
- Format:

AT+SEND=<data_lenth><CR>

+ok<CR>< LF ><CR>< LF >

- Parameters:
 - ◆ data_lenth: Lenth of send data. Range: 0~1000 Byte

The UART port will wait 3 seconds for input after this command is sent OK. The data received from UART port is sent to socket. If the interval of two bytes is more than 10ms, the data will be sent instantly.

4.2.2.21. AT+ RECV

- Function: Receive Data at Command Mode.
- Format:

AT+RECV=<data_lenth><CR>

+ok=< data_lenth, data_content><CR>< LF ><CR>< LF >

- Parameters:
 - ◆ data_lenth: Lenth of receive data. Range: 0~1000 Byte
 - ◆ data_content: contents of receive data.

If not receive any data in 3 second, then feedback +ok=0.

4.2.2.22. AT+ PING

- Function: Network "PING" Instruction.
- Format:

- ◆ Set Operation

AT+ PING=<IP_address ><CR>

+ok=<sta><CR>< LF ><CR>< LF >

- Parameters:
 - ◆ sta: feedback result
 - ◇ Success
 - ◇ Timeout
 - ◇ Unknown host

4.2.2.23. AT+NETP

- Function: Set/Query network protocol parameters;

- Format:
 - ◆ Query Operation


```
AT+NETP<CR>
```

```
+ok=<protocol,CS,port,IP><CR>< LF ><CR>< LF >
```
 - ◆ Set Operation


```
AT+NETP=<protocol,CS,port,IP><CR>
```

```
+ok<CR>< LF ><CR>< LF >
```

- Parameters:
 - ◆ protocol:
 - ◇ TCP
 - ◇ UDP
 - ◆ CS: Network mode:
 - ◇ SERVER
 - ◇ CLIENT
 - ◆ Port: protocol port ID: Decimal digit and less than 65535
 - ◆ IP: Server's IP address when module set as client

If set as UDP SERVER, the module will save the IP address and port of the latest UDP packet received. The data will be sent to the saved IP address and port. If the module hasn't saved any IP address and port when power up. The data will be sent to the IP address and port which is set by this command.

If set as UDP,CLIENT, the data will always be sent to the IP address and port set by this command.

4.2.2.24. AT+ MAXSK

- Function:Set/ Query TCP Client connection number.
- Format:
 - ◆ Query Operation


```
AT+MAXSK<CR>
```

```
+ok=<num><CR>< LF ><CR>< LF >
```
 - ◆ Set Operation


```
AT+MAXSK=<num><CR>
```

```
+ok<CR>< LF ><CR>< LF >
```
- Parameters:
 - ◆ num: TCP Client connection number. Range: 1~5. 5 is the default value it means when the module work in TCP server , it accepts max 5 TCP client connect to it.

4.2.2.25. AT+ TCPLK

- Function: Query if TCP link already build-up;
- Format:


```
AT+TCPLK<CR>
```

```
+ok=<sta><CR>< LF ><CR>< LF >
```
- Parameters:
 - ◆ sta.: if module already setup TCP link;

- ◇ on: TCP link setup;
- ◇ off: TCP link not setup;

4.2.2.26. AT+ TCPTO

- Function: Set/Query TCP timeout;
- Format:
 - ◆ Query Operation


```
AT+ TCPTO<CR>
```

```
+ok=<time><CR>< LF ><CR>< LF >
```
 - ◆ Set Operation


```
AT+ TCPTO=<time ><CR>
```

```
+ok<CR>< LF ><CR>< LF >
```
- Parameters:
 - ◆ time: TCP timeout time.
 - ◇ ≤ 600, (600s);
 - ◇ ≥ 0, (0 means no timeout);
 - ◇ Default, 300s;

4.2.2.27. AT+TCPDIS

- Function: Open/Close TCP link;
- Format:
 - ◆ Query Opera


```
AT+TCPDIS<CR>
```

```
+ok=<sta><CR>< LF ><CR>< LF >
```
 - ◆ Set Operation


```
AT+ TCPDIS =<on/off><CR>
```

```
+ok<CR>< LF ><CR>< LF >
```
- Parameters:

When query, sta.: Feedback if TCP Client can be link,

 - ◇ On, TCP link close
 - ◇ off, TCP link on

When setting, “off” means close TCP link. After finish this command, module disconnect TCP link and not connect again. “On” means open TCP link. After finish this command, module re-connect TCP server right away.

4.2.2.28. AT+SOCKB

- Function: Set/Query SOCKB parameters
- Format:
 - ◆ Query Operation


```
AT+SOCKB<CR>
```

```
+ok=<protocol,port,IP><CR>< LF ><CR>< LF >
```
 - ◆ Set Operation


```
AT+SOCKB=<protocol,port,IP><CR>
```


+ok<CR>< LF ><CR>< LF >

- Parameters:
 - ◆ Protocol: Protocol type:
 - ◇ TCP: Only for TCP Client
 - ◇ UDP
 - ◆ Port: Protocol Port in decimal, less than 65535
 - ◆ IP: Destination IP address, domain name is support

4.2.2.29. AT+TCPDISB

- Function: Open/Close TCP_B connection
- Format:
 - ◆ Query Operation

AT+TCPDISB<CR>

+ok=<sta><CR>< LF ><CR>< LF >

- ◆ Set Operation

AT+ TCPDISB =<on/off><CR>

+ok<CR>< LF ><CR>< LF >

- Parameters:

When setting, “off” means close TCP link. After finish this command, module disconnect TCP link and not connect again. “On” means open TCP link. After finish this command, module re-connect TCP server right away.

4.2.2.30. AT+TCPTOB

- Function: Set/Query OperationTCP_B timeout
- Format:
 - ◆ Query Operation

AT+ TCPTOB<CR>

+ok=<time><CR>< LF ><CR>< LF >

- ◆ Set Operation

AT+ TCPTOB=<time ><CR>

+ok<CR>< LF ><CR>< LF >

- Parameters

- ◆ Time: TCP timeout
 - ◇ <= 600:600s
 - ◇ >=0:0 means no timeout
 - ◇ Default:300s

The module will not connect TCP_B after TCP timeout. The module will make connection after another “TCPDIS” command.

4.2.2.31. AT+TCPLKB

- Function:Query TCP_B connection status
- Format:

AT+ TCPLKB<CR>

+ok=<sta><CR>< LF ><CR>< LF >

- Parameters:
 - ◆ sta.: TCP_B connection status
 - ◇ on: TCP connected
 - ◇ off: TCP disconnected

4.2.2.32. AT+SNDB

- Function: Send datas to SOCKB at Command Mode
- Format:

AT+SNDB=<data_lenth ><CR>

+ok<CR>< LF ><CR>< LF >

- Parameters:
 - ◆ data_lenth: Lenth of send data. Range: 0~1000 Byte

The UART port will wait 3 seconds for input after this command is sent OK. The data received from UART port is sent to socket. If the interval of two bytes is more than 10ms, the data will be sent instantly.

4.2.2.33. AT+RCVB

- Function: Receive datas from SOCKB at Command Mode
- Format:

AT+RCVB=<data_lenth><CR>

+ok=< data_lenth, data_content><CR>< LF ><CR>< LF >

- Parameters:
 - ◆ data_lenth: Lenth of receive data. Range: 0~1000 Byte
 - ◆ data_content: contents of receive data.

If not receive any data in 3 second, then feedback +ok=0.

4.2.2.34. AT+WSSSID

- Function: Set/Query Wi-Fi associated AP SSID parameters.
- Format:
 - ◆ Query Operation

AT+WSSSID<CR>

+ok=<ap's ssid><CR>< LF ><CR>< LF >

- ◆ Set Operation

AT+ WSSSID=<ap's ssid ><CR>

+ok<CR>< LF ><CR>< LF >

- Parameters:
 - ◆ ap's ssid: AP's SSID (Within 32 character);

4.2.2.35. AT+WSKEY

- Function: Set/Query STA security parameters;
- Format:
 - ◆ Query Operation

AT+WSKEY<CR>

+ok=<auth,encry,key><CR>< LF ><CR>< LF >

- ◆ Set Operation

AT+ WSKEY=< auth,encry,key><CR>

+ok<CR>< LF ><CR>< LF >

- Parameters:
 - ◆ auth: Authentication mode
 - ◇ OPEN
 - ◇ SHARED
 - ◇ WPAPSK
 - ◇ WPA2PSK
 - ◆ encry:Encryption algorithm
 - ◇ NONE: When “auth=OPEN”, effective
 - ◇ WEP: When “auth=OPEN” or “SHARED”, effective
 - ◇ TKIP: When “auth= WPAPSK” or “WPA2PSK”, effective
 - ◇ AES: When “auth= WPAPSK” “WPA2PSK”, effective
 - ◆ key: password, ASCII code, shall less than 64 bit and greater than 8bit

4.2.2.36. AT+ WANN

- Function: Set/Query STA network setting;
- Format:
 - ◆ Query Operation

AT+WANN<CR>

+ok=<mode,address,mask,gateway><CR>< LF ><CR>< LF >

- ◆ Set Operation

AT+ WANN=< mode,address,mask,gateway ><CR>

+ok<CR>< LF ><CR>< LF >

- Parameters:
 - ◆ mode: STA's IP network setting
 - ◇ static: Static IP
 - ◇ DHCP: Dynamic IP
 - ◆ address: STA IP address;
 - ◆ mask: STA subnet mask;
 - ◆ gateway: STA gateway address;

4.2.2.37. AT+ WSMAC

- Function: Set/Query STA MAC address parameters;
- Format:
 - ◆ Query Operation

AT+WSMAC<CR>

+ok=<mac_address><CR>< LF ><CR>< LF >

- ◆ Set Operation

AT+ WSMAC=<code,mac_address><CR>

+ok<CR>< LF ><CR>< LF >

- Parameters:
 - ◆ code: security code
 - ◇ 8888 (default value)
 - ◆ Mac_address: STA MAC address, such as ACCF23FF1234

4.2.2.38. AT+ WSLK

- Function: Query STA WiFi link status
- Format:
 - ◆ Query Operation

AT+ WSLK<CR>**+ok=<ret><CR>< LF ><CR>< LF >**

- Parameters:
 - ◆ ret
 - ◇ "Disconnected", if no WiFi connection;
 - ◇ "AP' SSID (AP's MAC") , if WiFi connection available;
 - ◇ "RF Off", if WiFi OFF;

4.2.2.39. AT+ WSLQ

- Function: Query STA WiFi signal strength;
- Format:
 - ◆ Query Operation

AT+ WSLQ<CR>**+ok=<ret><CR>< LF ><CR>< LF >**

- Parameters:
 - ◆ ret
 - ◇ "Disconnected", if no WiFi connection;
 - ◇ "AP's WiFi signal strength" , if WiFi connection available;

4.2.2.40. AT+WSCAN

- Function: Scan AP;
- Format:

AT+ WSCAN<CR>**+ok=<ap_site><CR>< LF ><CR>< LF >**

- Parameters:
 - ◆ ap_site: AP searched;

4.2.2.41. AT+ WSDNS

- Function: Set/Query STA static DNS server address;
- Format:
 - ◆ Query Operation

AT+WSDNS<CR>**+ok=<address><CR>< LF ><CR>< LF >**

- ◆ Set Operation

AT+ WSDNS =<address><CR>

+ok<CR>< LF ><CR>< LF >

- Parameters:
 - ◆ address: STA's DNS server address; Effective right away.

4.2.2.42. AT+ LANN

- Function: Set/Query AP's network parameters;
- Format:
 - ◆ Query Operation

AT+LANN<CR>

+ok=<ipaddress,mask><CR>< LF ><CR>< LF >

- ◆ Set Operation

AT+ LANN=< ipaddress,mask><CR>

+ok<CR>< LF ><CR>< LF >

- Parameters:
 - ◆ ipaddress: AP's IP address;
 - ◆ mask: AP's net mask;

4.2.2.43. AT+WAP

- Function: Set/Query AP Wi-Fi parameters;
- Format:
 - ◆ Query Operation

AT+WAP<CR>

+ok=<wifi_mode,ssid,channel><CR>< LF ><CR>< LF >

- ◆ Set Operation

AT+ WAP =<wifi_mode,ssid,channel><CR>

+ok<CR>< LF ><CR>< LF >

- Parameters:
 - ◆ wifi_mode: Wi-Fi mode, include:
 - ◇ 11B
 - ◇ 11BG
 - ◇ 11BGN (Default Value)
 - ◆ ssid:SSID at AP mode
 - ◆ channel: Wi-Fi channel selection:
 - ◇ AUTO
 - ◇ CH1~CH11; (Default CH1)

4.2.2.44. AT+WKEY

- Function: Set/Query AP Wi-Fi security parameters;
- Format:
 - ◆ Query Operation

AT+WKEY<CR>

+ok=<auth,encry,key><CR>< LF ><CR>< LF >

- ◆ Set Operation

AT+ WAKEY=< auth,encry,key><CR>

+ok<CR>< LF ><CR>< LF >

- Parameters:
 - ◆ auth: include
 - ◇ OPEN
 - ◇ WPA2PSK
 - ◆ Encry: include
 - ◇ NONE: When “auth=OPEN” available;
 - ◇ AES: When “auth=WPA2PSK” available;
 - ◆ key: security code, ASCII code, smaller than 64bit and bigger than 8 bit;

4.2.2.45. AT+WAMAC

- Function: Query AP MAC address parameters;
- Format:
 - ◆ Query Operation

AT+WAMAC<CR>

+ok=<mac_address><CR>< LF ><CR>< LF >

- Parameters:
 - ◆ mac_address:AP’s MAC address;

Note: Module AP mode’s MAC address is related to STA mode’s MAC address. If user need change to others, please contact with high-flying technical people.

4.2.2.46. AT+WADHCP

- Function: Set/Query AP DHCP server status;
- Format:
 - ◆ Query Operation

AT+WADHCP<CR>

+ok=<status><CR>< LF ><CR>< LF >

- ◆ Set Operation

AT+ WADHCP=<status><CR>

+ok<CR>< LF ><CR>< LF >

- Parameters:
 - ◆ status:AP’s DHCP server function status:
 - ◇ on:DHCP Server Open;
 - ◇ off:DHCP Server Close:

4.2.2.47. AT+WADMN

- Function: Set/Query AP webpage domain name;
- Format:
 - ◆ Query Operation

AT+WADMN<CR>

+ok=<domain_name><CR>< LF ><CR>< LF >

- ◆ Set Operation

AT+ WADMN =<domain_name><CR>

+ok<CR>< LF ><CR>< LF >

- Parameters:
 - ◆ Domain_name: Webpage domain name (within 20 characters, can't all numbers).

4.2.2.48. AT+PLANG

- Function: Set/ Query webpage language option;
- Format:
 - ◆ Query Operation

AT+ PLANG<CR>

+ok=<language> <CR>< LF ><CR>< LF >

- ◆ Set Operation

AT+ PLANG=<language> <CR>

+ok<CR>< LF ><CR>< LF >

- Parameters:
 - ◆ language: webpage's language
 - ◇ CN: Chinese Version (Default);
 - ◇ EN: English Version;

4.2.2.49. AT+UPURL

- Function: Set/ Query remote upgrade URL address;
- Format:
 - ◆ Query Operation

AT+ UPURL<CR>

+ok=<url> <CR>< LF ><CR>< LF >

- ◆ Set Operation

AT+ UPURL=<url,filename> <CR>

+ok<CR>< LF ><CR>< LF >

- Parameters:
 - ◆ url: the upgrade file url address; the last charter shall be "/" (within 20 characters).
 - ◆ filename: the upgrade file name, it's optional and not saved parameter. If provide this file name here, the module will start upgrade right away;

4.2.2.50. AT+UPFILE

- Function: Set/ Query remote upgrade configure file name;
- Format:
 - ◆ Query Operation

AT+ UPFILE<CR>

+ok=<filename> <CR>< LF ><CR>< LF >

- ◆ Set Operation

AT+ UPFILE=<filename> <CR>

+ok<CR>< LF ><CR>< LF >

- Parameters:

- ◆ filename: the upgrade configure file name (within 20 characters).

4.2.2.51. AT+UPWEB

- Function: Remote webpage upgrade
- Format:
 - ◆ Query Operation

AT+UPWEB<CR>

+ok=<log><CR>< LF ><CR>< LF >

- Parameters:
 - ◆ log: Some status print log from remote upgrade.

Note: After execute this command, the HF-LPB100 will automatic start upgrade Webpage base on the setting of UPURL, UPFILE command contents;

4.2.2.52. AT+UPCFG

- Function: Remote factory setting upgrade
- Format:
 - ◆ Query Operation

AT+UPCFG<CR>

+ok=<log><CR>< LF ><CR>< LF >

- Parameters:
 - ◆ log: Some status print log from remote upgrade.

Note: After execute this command, the HF-LPB100 will automatic start upgrade base on the setting of UPURL, UPFILE command contents;

4.2.2.53. AT+UPNVR

- Function: Remote NVRAM data upgrade
- Format:
 - ◆ Query Operation

AT+UPNVR<CR>

+ok=<log><CR>< LF ><CR>< LF >

- Parameters:
 - ◆ log: Some status print log from remote upgrade.

Note: After execute this command, the HF-LPB100 will automatic start upgrade base on the setting of UPURL, UPFILE command contents;

4.2.2.54. AT+UPAUTO

- Function: Remote Application, Webpage, factory setting upgrade
- Format:
 - ◆ Query Operation

AT+UPAUTO<CR>

+ok=<log><CR>< LF ><CR>< LF >

- Parameters:
 - ◆ log: Some status print log from remote upgrade.

Note: After execute this command, the HF-LPB100 will automatic start upgrade Application, Webpage, factory setting base on the setting of UPURL, UPFILE command contents;

4.2.2.55. AT+LOGSW

- Function: Open/Close remote upgrade logfile
- Format:
 - ◆ Query Operation


```
AT+LOGSW<CR>
```

```
+ok=<status><CR>< LF ><CR>< LF >
```
 - ◆ Set Operation


```
AT+LOGSW=<status><CR>
```

```
+ok<CR>< LF ><CR>< LF >
```
- Parameters:
 - ◆ status:
 - ◇ on: Open. The UART Port will print some upgrade status when upgrading. the log file will be sent to UDP Port after successfully
 - ◇ off: Close.

4.2.2.56. AT+LOGPORT

- Function: Set/Query remote upgrade UDP port of log file.
- Format:
 - ◆ Query Operation


```
AT+LOGPORT<CR>
```

```
+ok=<port><CR>< LF ><CR>< LF >
```
 - ◆ Set Operatioin:


```
AT+ LOGPORT =<port><CR>
```

```
+ok<CR>< LF ><CR>< LF >
```
- Parameters:
 - ◇ port: The remote upgrade UDP port of log file.

4.2.2.57. AT+UPST

- Function: Start remote upgrade;
- Format:
 - ◆ Query Operation


```
AT+ UPST<CR>
```

```
+ok=<log> <CR>< LF ><CR>< LF >
```
- Parameters:
 - ◆ log: feedback the status of remote upgrade;

Note: After execute this command, the HF-LPB100 will automatic start upgrade base on the setting of UPURL, UPFILE command contents;

4.2.2.58. AT+WEBU

- Function: Set/ Query webpage user name and password;
- Format:

- ◆ Query Operation

AT+ WEBU<CR>

+ok=<username,password> <CR>< LF ><CR>< LF >

- ◆ Set Operation

AT+ WEBU=<username,password><CR>

+ok<CR>< LF ><CR>< LF >

- Parameters:

- ◆ username: User Name, within 15 characters, not support empty.
- ◆ password: password, within 15 characters, support empty.

4.2.2.59. AT+MSLP

- Function: Set/Query deep sleep/standby mode parameters;

- Format:

- ◆ Query Operation

AT+ MSLP<CR>

+ok=<ret><CR>< LF ><CR>< LF >

- ◆ Set Operation

AT+ MSLP=<mode><CR>< LF ><CR>< LF >

- Parameters:

- ◆ ret:
 - ◇ normal: normal mode (100ms interval)
- ◆ mode:
 - ◇ normal: normal mode (100ms interval)
 - ◇ standby: WiFi shut down mode

4.2.2.60. AT+NTPRF

- Function: Set /Query time calibration interval

- Format:

- ◆ Query Operation

AT+ NTPRF<CR>

+ok=<num><CR>< LF ><CR>< LF >

- ◆ Set Operation

AT+ NTPRF=<num><CR>

+ok<CR>< LF ><CR>< LF >

- Parameters:

- ◆ num: time calibration interval, range:0~720, default:30 minutes, 10 minutes for each step, set 0 means no time calibration automatically.

4.2.2.61. AT+NTPEN

- Function: Enable/Disable time calibration function.

- Format:

- ◆ Query Operation

AT+ NTPEN<CR>

+ok=<status><CR>< LF ><CR>< LF >

- ◆ Set Operation

AT+ NTPEN=<status><CR>

+ok<CR>< LF ><CR>< LF >

- Parameters:
 - ◆ status: status of time calibration
 - on: Enable time calibration
 - off: Disable time calibration

4.2.2.62. AT+NTPTM

- Function: Query network time
- Format:
 - ◆ Query Operation

AT+ NTPTM<CR>

+ok=<time><CR>< LF ><CR>< LF >

- Parameters:
 - ◆ time: networ time, for example: 2013-10-9 16:10:42 Wed. if it shows Not Available means that the time calibration function is not enabled or the module doesn't connect to the internet.

4.2.2.63. AT+WRMID

- Function: Set module ID;
- Format:
 - ◆ Set Operation

AT+ WRMID=<wrmid> <CR>< LF ><CR>< LF >

- Parameters:
 - ◆ wrmid: set module's ID (within 20 characters).

4.2.2.64. AT+RLDEN

- Function: Set/Query GPIO45 function status
- Format:
 - ◆ Query Operation

AT+RLDEN<CR>

+ok=<status><CR>< LF ><CR>< LF >

- ◆ Set Operation

AT+RLDEN=<status><CR>

+ok<CR>< LF ><CR>< LF >

- Parameters:
 - ◆ status: The status of module's GPIO45(nReload) function
 - ◇ on: GPIO45 function (nReload) is enabled.
 - ◇ off: GPIO45 function is disabled

4.2.2.65. AT+ASWD

- Function: Set/Query WiFi Configuration Password;

- Format:
 - ◆ Query Operation
AT+ ASWD<CR>
+ok=<aswd> <CR>< LF ><CR>< LF >
 - ◆ Set Operation
AT+ ASWD=<aswd> <CR>< LF ><CR>< LF >
- Parameters:
 - ◆ aswd: WiFi Configuration Password (within 20 characters).

4.2.2.66. AT+MDCH

- Function: Set Wi-Fi Auto Switch Function
- Format:
 - ◆ Query Operation
AT+ MDCH<CR>
+ok=<mode> <CR>< LF ><CR>< LF >
 - ◆ Set Operation
AT+ MDCH=<mode> <CR>< LF ><CR>< LF >
- Parameters:
 - ◆ mode: Wi-Fi Auto Switch Mode
 - ◇ off: Disable Wi-Fi auto switch.
 - ◇ on: Enable Wi-Fi auto switch. When the module(STA mode) fail to connect to router, it will switch to AP mode itself in one minute.
 - ◇ auto: Enable Wi-Fi auto detect function. The module will reset itself when encounter any abnormal. The default time interval is 10 minutes.
 - ◇ 3-120: unit: minute. Set the time interval to reset itself when abnormal.

4.2.2.67. AT+TXPWR

- Function: Set/Query Wi-Fi Transmit Power, Real Transmit Power=Default Transmit Power(16dBm) – [Setting Value] * 0.5dBm
- Format:
 - ◆ Query Operation
AT+TXPWR <CR>
+ok=<num><CR>< LF ><CR>< LF >
 - ◆ Set Operation
AT+TXPWR=<num><CR>
+ok<CR>< LF ><CR>< LF >
- Parameters:
 - ◆ num: [Setting Value]. The default is 0, it can be sent from 0 ~ 24. If set to 24, the module transmit power will be at a minimum of 4dBm. Reboot to make this setting change valid. It will not restore to default if reload the module.

5. PACKAGE INFORMATION

5.1. Recommended Reflow Profile

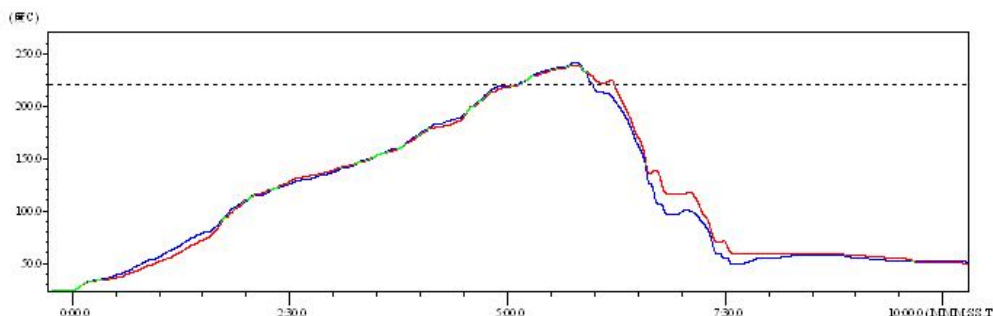


Figure 35. Reflow Soldering Profile

Table 11 Reflow Soldering Parameter

NO.	Item	Temperature (Degree)	Time(Sec)
1	Reflow Time	Time of above 220	35~55 sec
2	Peak-Temp	260 max	

- Note:**
1. Recommend to supply N2 for reflow oven.
 2. N2 atmosphere during reflow (O2<300ppm)

5.2. Device Handling Instruction (Module IC SMT Preparation)

1. Shelf life in sealed bag: 12 months, at <30°C and <60% relative humidity (RH)
2. After bag is opened, devices that will be re-baked required after last baked with window time 168 hours.
3. Recommend to oven bake with N2 supplied
4. Recommend end to reflow oven with N2 supplied
5. Baked required with 24 hours at 125+/-5°C before rework process for two modules, one is new module and two is board with module
6. Recommend to store at ≤ 10% RH with vacuum packing
7. If SMT process needs twice reflow:

- (1) Top side SMT and reflow
- (2) Bottom side SMT and reflow

Case 1: Wifi module mounted on top side. Need to bake when bottom side process over 168 hours window time, no need to bake within 168 hours

Case 2: Wifi module mounted on bottom side, follow normal bake rule before process

Note: Window time means from last bake end to next reflow start that has 168 hours space.

5.3. Shipping Information

TRAY

Size: 420*245*34 mm



BOX

Size: 422*247*72 mm (inside)



CARTON

Size: 440*260*320 mm (inside)



Figure 36. Shipping Information


Note:

1 tray = 5*20pcs = 100 pcs

1 box = 2 trays = 2 * 100 pcs = 200pcs

1 carton = 4 boxes = 4 * 200 pcs = 800pcs

APPENDIX A: HW REFERENCE DESIGN

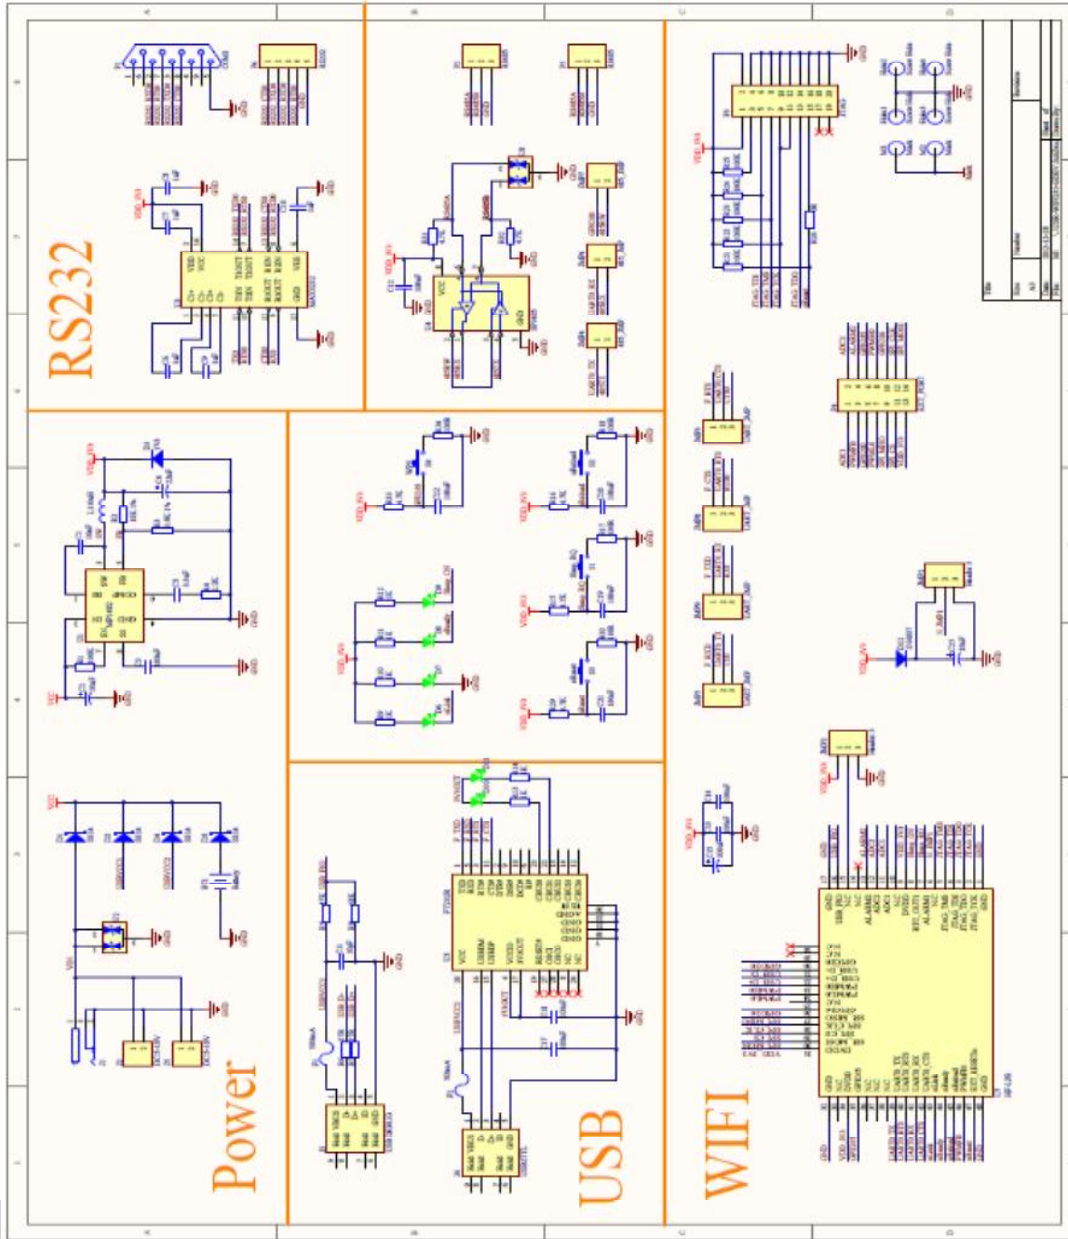

Detailed HF-LPB100 Evaluation Board design source files, pls access High-Flying web download page or contact with High-Flying technical support people to acquire.


APPENDIX B: CONTROL GPIO/PWM FUNCTION WITH NETWORK COMMANDS

Send command data to control module's GPIO, PWM port after make network connection with TCP or UDP protocol. The status of GPIO won't be changed if the module is reset

B.1 Network Command

B.1.1 GPIO <channel> OUT <value>


- Function: Set GPIO Channel value temporarily. .
- Parameters:
 - ◆ channel:GPIO Channel number, it can be 11、12、15、18、20、23(GPIO Pin number)
 - ◆ value:GPIO Channel value,1(high voltage), 0(low voltage)
- Return Data:
 - ◆ GPIO OK: Command successful
 - ◆ GPIO NOK: Command failed

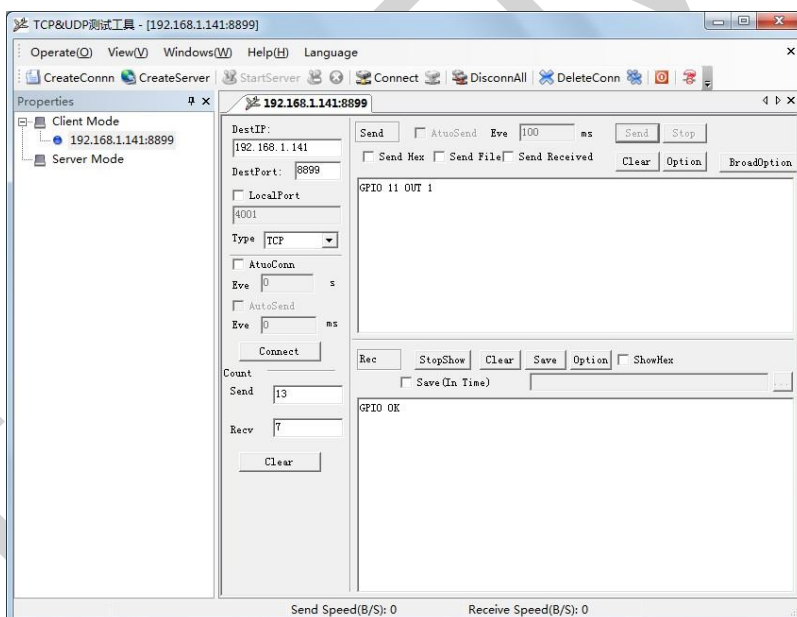

B.1.2 GPIO <channel> GET

- Function: Query GPIO Channel value
- Parameters:
 - ◆ channel: GPIO Channel number,it can be 11、12、15、18、20、23(GPIO Pin number)
- Return Data:
 - ◆ +ok=<value>
 - value:GPIO Channel value

◆ GPIO NOK: Command failed

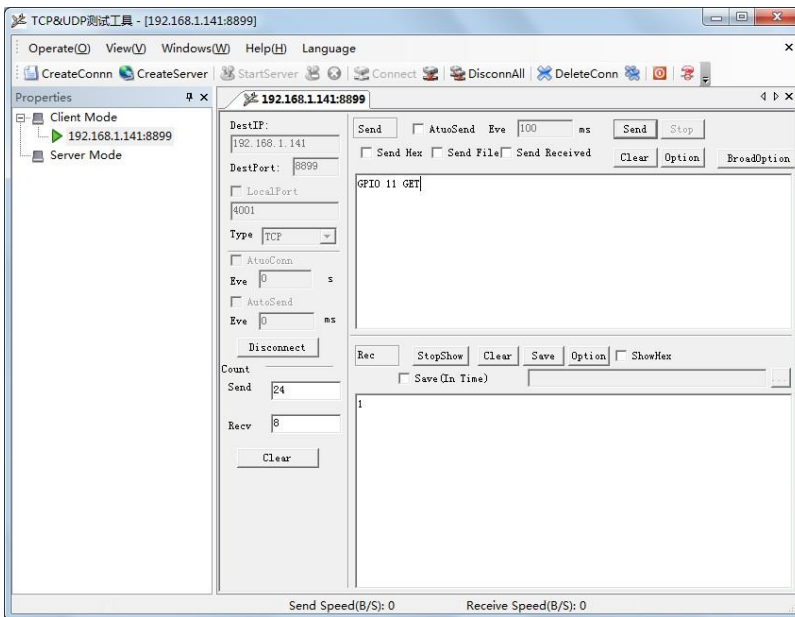


B.1.3 GPIO <channel> SET

- Function: Save GPIO Channel setting
- Parameters:
 - ◆ channel:GPIO Channel number,it can be 11、12、15、18、20、23(GPIO Pin number)
- Return Data:
 - ◆ GPIO OK: Command successful
 - ◆ GPIO NOK: Command failed


B.1.4 PWM <channel frequency duty>

- Function: Set PWM Channel output temporarily
- Parameters:
 - ◆ channel:PWM Channel number, it can be 11、12、18、20(GPIO Pin number)
 - ◆ frequency:PWM Channel frequency, it can be 500~60000
 - ◆ duty:PWM Channel duty, it can be 0~100.
- Return Data:
 - ◆ PWM OK: Command successful
 - ◆ PWM NOK: Command failed

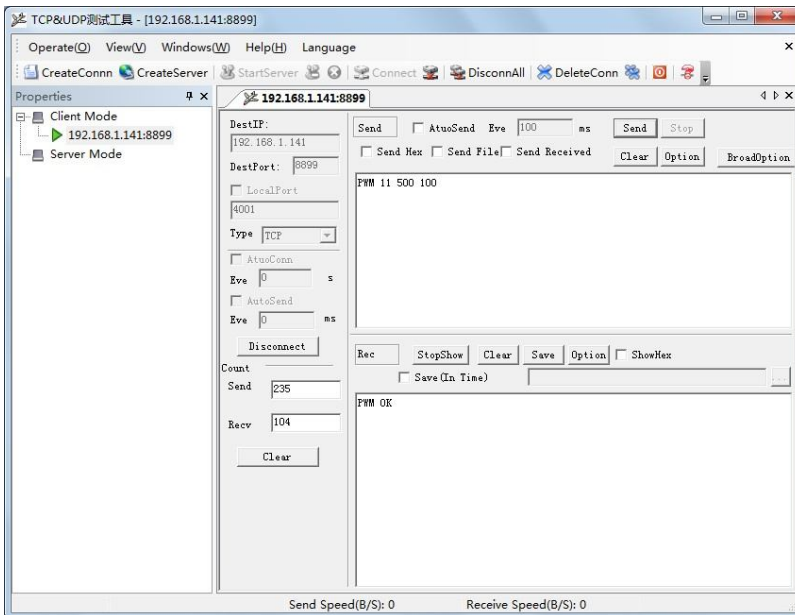

B.1.5 PWM <channel> GET

- Function: Query PWM Channel output
- Parameters:
 - ◆ channel: PWM Channel number, it can be 11、12、18、20(GPIO Pin number)
- Return Data:
 - ◆ +ok=<frequency duty>
 - frequency: PWM Channel frequency
 - duty: PWM Channel duty
 - ◆ PWM NOK: Command failed

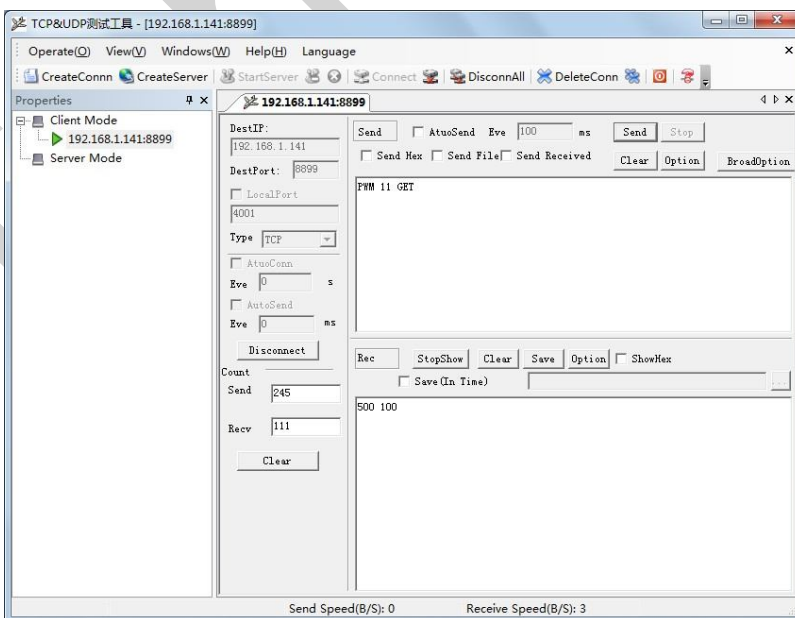


- B.1.6 PWM <channel> SET**
- Function: Save PWM Channel setting
 - Parameters:
 - ◆ channel: PWM Channel number, it can be 11、12、18、20(GPIO Pin number)
 - Return Data:
 - ◆ PWM OK: Command successful
 - ◆ PWM NOK: Command failed


B.2 Hexadecimal Network Command

Send hexadecimal data to fastly read module's port status.

- B.2.1 Read all GPIO Channel**
- Send Data **【0a】** :
 - Return Data: **【8a <value>】**
 - ◆ value: bit0、bit1 represent GPIO15、GPIO23 value.

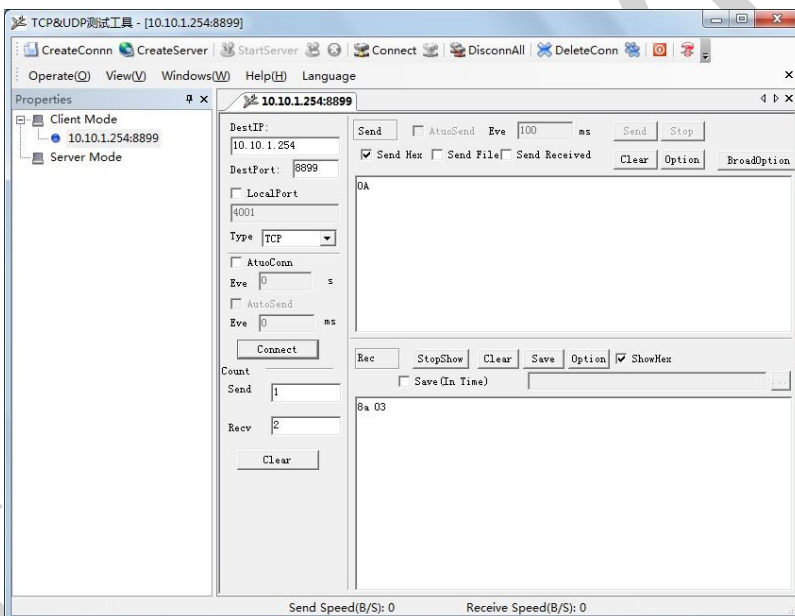

- B.2.2 Reverse GPIO Channel value**
- Send Data **【03 <channel>】** :
 - ◆ channel: GPIO Channel number, it can be 01、02(GPIO15、GPIO23)
 - Return Data: **【83 <channel value>】**
 - ◆ channel: GPIO Channel number, it can be 01、02(GPIO15、GPIO23)
 - ◆ value: GPIO Channel value, 0 or 1

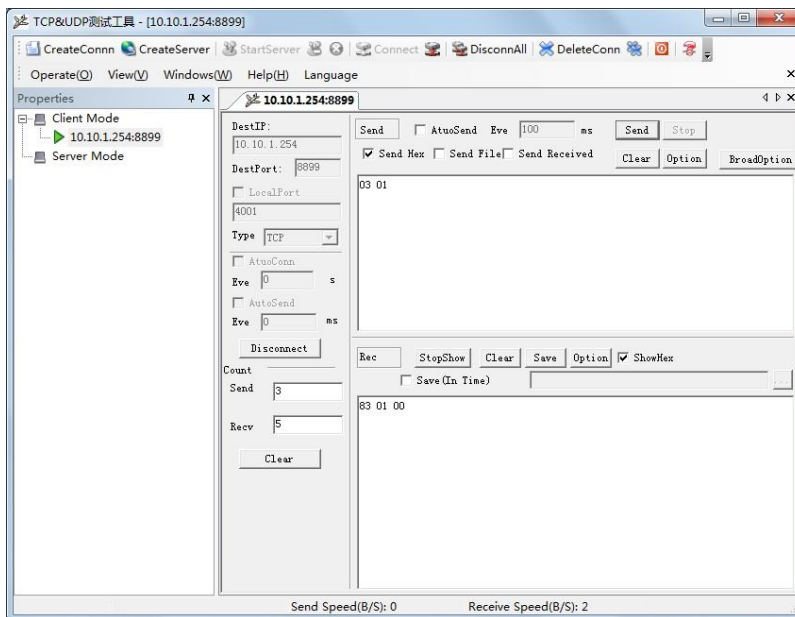

B.2.3 Read All PWM Channel Frequency

- Send Data: **【30】** :
- Return Data: **【b0 <value1 value2 value3 value4 value5 value6 value7 value8>】**
 - ◆ value1: High byte of PWM Channel 0(GPIO11) frequency
 - ◆ value2: Low byte of PWM Channel 0(GPIO11) frequency
 - ◆ value3: High byte of PWM Channel 1(GPIO12) frequency
 - ◆ value4: Low byte of PWM Channel 1(GPIO12) frequency
 - ◆ value5: High byte of PWM Channel 2(GPIO18) frequency
 - ◆ value6: Low byte of PWM Channel 2(GPIO18) frequency
 - ◆ value7: High byte of PWM Channel 3(GPIO20) frequency
 - ◆ value8: Low byte of PWM Channel 3(GPIO20) frequency

B.2.4 Write PWM Channel Frequency

- Send Data: **【32 <channel value1 value2>】** :
 - ◆ channel: PWM Channel number
 - ◆ value1: High byte of PWM Channel frequency
 - ◆ value2: Low byte of PWM Channel frequency
- Return Data: **【b2 <channel value1 value2>】**
 - ◆ Channel: PWM Channel number
 - ◆ value1: High byte of PWM Channel frequency
 - ◆ value2: Low byte of PWM Channel frequency

B.2.5 Read All PWM Channel Duty

- Send Data: **【20】** :
- Return Data: **【a0 <value1 value2 value3 value4>】**
 - ◆ value1: Duty of PWM Channel 0
 - ◆ value2: Duty of PWM Channel 1

- ◆ value3: Duty of PWM Channel 2
- ◆ value4: Duty of PWM Channel 3

B.2.6 Write PWM Channel Duty

- Send Data: **【22 <channel value1>】** :
 - ◆ channel:PWM Channel number
 - ◆ value1: Duty of PWM Channel
- Return Data: **【a2 <channel value1>】**
 - ◆ Channel:PWM Channel number
 - ◆ value1: Duty of PWM Channel

B.2.7 Save Present GPIO,PWM Setting

- Send Data: **【7a】** :
- Return Data: **【fa】**

B.2.8 Assert All GPIO Channel Low

- Send Data: **【04】** :
- Return Data: **【84 00】**

B.2.9 Assert All GPIO Channel High

- Send Data: **【05】** :
- Return Data: **【85 01】**

B.2.10 Read Resources of module

- Send Data: **【7e】** :
- Return Data: **【fe <value1 value2 value3>】**
 - ◆ value1: Module's GPIO output pin number .
 - ◆ value2:Module's GPIO input pin number
 - ◆ value3:Module's PWM pin number

APPENDIX C: HTTP PROTOCOL TRANSFER

HF-LPB100 module support http data transfer in command mode. If any detailed HTTP protocol, contact us and we may support customization.

C.1. HTTP AT command

C.1.1. AT+ HTTPURL

- Function: Set /Query HTTP server IP address and Port Number.

- Format:

- ◆ Query Operation

AT+HTTPURL<CR>

+ok=<IP,Port><CR>< LF ><CR>< LF >

- ◆ Set Operation

AT+HTTPURL=<IP,Port><CR>

+ok<CR>< LF ><CR>< LF >

- Parameters:

- ◆ IP: IP address.
- ◆ Port: Port number.

C.1.2. AT+ HTTPTP

- Function: Set /Query HTTP request type

- Format:

- ◆ Query Operation

AT+HTTPTP<CR>

+ok=<Type><CR>< LF ><CR>< LF >

- ◆ Set Operation

AT+HTTPTP=<Type><CR>

+ok<CR>< LF ><CR>< LF >

- Parameters:

- ◆ Type: GET(default) or POST.

C.1.3. AT+ HTTPPH

- Function: Set/Query HTTP protocol header path.

- Format:

- ◆ Query Operation

AT+HTTPPH<CR>

+ok=<Path><CR>< LF ><CR>< LF >

- ◆ Set Operation

AT+HTTPPH=<Path><CR>

+ok<CR>< LF ><CR>< LF >

- Parameters:
 - ◆ Path: Max length is 50 bytes.

C.1.4. AT+ HTTPCN

- Function: Set/Query Connection of HTTP protocol header
- Format:

- ◆ Query Operation

AT+HTTPCN<CR>

+ok=<Connection><CR>< LF ><CR>< LF >

- ◆ Set Operation

AT+HTTPCN=<Connection><CR>

+ok<CR>< LF ><CR>< LF >

- Parameters:
 - ◆ Connection: Max length is 20 bytes.

C.1.5. AT+ HTTPUA

- Function: Set/Query User-Agent of HTTP protocol header.
- Format:

- ◆ Query Operation

AT+HTTPUA<CR>

+ok=<Parameter><CR>< LF ><CR>< LF >

- ◆ Set Operation

AT+HTTPUA=<Parameter><CR>

+ok<CR>< LF ><CR>< LF >

- Parameters:
 - ◆ Parameter: Max length is 20 bytes.

C.1.6. AT+ HTTPDPT

- Function: Send HTTP request or data.
- Format:

- ◆ Set Operation

AT+HTTPDPT=<Data><CR>

+ok<CR>< LF ><CR>< LF >

- Parameters:
 - ◆ Data: HTTP request data, send AT+HTTPDPT directly if no data to be sent.

C.2. HTTP Example

HTTP parameter settings are as follows:

AT+HTTPURL=192.168.1.1,80	Set HTTP server address and port
AT+HTTPPT=POST	Set HTTP request type
AT+HTTPPH=/abcd	Set HTTP protocol header path
AT+HTTPCN= keep-alive	Set HTTP Connection area

AT+HTTPUA=lwip1.3.2 Set HTTP User-Agent area

If send "AT+HTTPDT", the data packet will be sent as the following instance including the two new line:

```
POST /abcd HTTP/1.1
Connection:keep-alive
User-Agent:lwip1.3.2
Content-Length:0
Host:192.168.0.127:8999
```

If send AT+HTTPDT=abcd, the data packet will be sent as the following instance:

```
POST /abcd HTTP/1.1
Connection:keep-alive
User-Agent:lwip1.3.2
Content-Length:4
Host:192.168.0.127:8999
```

abcd

The data received from HTTP server will be output to serial port and end with "+ok".

If the module hasn't received data from HTTP server for 5 second, it will cut the TCP link with HTTP server.

APPENDIX D: CONTACT INFORMATION

Address: Room.511/510, Building 7, No.365, Chuanhong Road, Pudong New Area,
Shanghai, China, 201202

Web: www.hi-flying.com

Service Online: 400-189-3108

Sales Contact: sales@hi-flying.com

For more information about High-Flying modules, applications, and solutions, please visit our web site
<http://www.hi-flying.com/en/>

END OF DOCUMENT

© Copyright High-Flying, May, 2011

The information disclosed herein is proprietary to High-Flying and is not to be used by or disclosed to unauthorized persons without the written consent of High-Flying. The recipient of this document shall respect the security status of the information. The master of this document is stored on an electronic database and is “write-protected” and may be altered only by authorized persons at High-Flying. Viewing of the master document electronically on electronic database ensures access to the current issue. Any other copies must be regarded as uncontrolled copies.

FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body