

Sprint PCS®

The clear alternative to cellular.SM

© 2002 Sprint Spectrum L.P. All rights reserved. No reproduction in whole or in part without prior written approval. Sprint, Sprint PCS, Sprint PCS Phone, Sprint PCS Wireless Web, Sprint PCS Wireless Web Mail, Sprint PCS Wireless Web Short Mail and the diamond logo are trademarks of Sprint Communications Company L.P. All other trademarks are property of their respective owners.

Table of Contents

Welcome to Sprint PCS	9
1. Getting Started with Sprint PCS Service	11
▶ Turning Your Phone ON and OFF	12
▶ Getting Started with Sprint PCS Service	13
▶ Setting Up Your Voicemail	14
▶ Getting Help	14
▶ Understanding this User Guide	18
2. Getting to Know Your Sprint PCS Phone™	19
▶ Parts Name	20
▶ Viewing the Display Screen	23
▶ Features of Your SH-P300	24
▶ Using the Battery	26
▶ Using the Key Guard	30
▶ Using the TPO Switch	30
▶ Displaying Your Phone Number and Version Information	32
▶ Setting Your Sprint PCS Phone to Offline Mode	32
3. Understanding Roaming	33
▶ Understanding How Roaming Works	34
▶ Setting Your Phone's Roam Mode	34
▶ Setting an Alert When Roam Charges Apply (Call Guard)	35
4. Making and Answering Calls	37
▶ Making Calls	38
▶ Answering Calls	38
▶ Adjusting Volume During a Conversation	38
▶ Muting a Call	39
▶ Dialing Options	39
▶ Incoming Call Notification	40
▶ Missed Call Notification	41
▶ In-Call Options	41

▶ End-of-Call Options	42
▶ Dialing Phone Numbers With Pauses	42
▶ Calling Emergency Numbers	43
▶ Displaying Your Phone Number	43
▶ Using Any Key Answer	43
▶ Using Auto Answer	44
▶ Using Sprint PCS Voice Command SM	45
5. Navigating Through Menus and Entering Text	49
▶ Menu Navigation	50
▶ Working with the Menu Structure	50
▶ Viewing the Menus	51
▶ Automatic Pop-up Window Display	53
▶ Checking the Guide for the Operation Procedure	54
▶ Selecting a Character Input Mode	54
▶ Entering Characters by Tapping the Keypad	55
▶ Entering Characters Using T9 Text Input	56
6. Managing Call History	59
▶ Viewing the Call History List (Outgoing, Incoming and Missed)	60
▶ Call History Options	60
▶ Making a Call from the Call History	61
▶ Erasing All Call History	61
7. Using Sprint PCS Service Features	63
▶ Using Caller ID	64
▶ Responding to Call Waiting	64
▶ Three-Way Calling	65
▶ Forwarding Your Calls	66
8. Managing Messaging	67
▶ Setting Up Voicemail	68
▶ Knowing When You Have Messages	68
▶ Message Types	68

▶ Retrieving Your Voicemail Messages	69
▶ Clearing the Voicemail Message Icon	70
▶ Sending Web Messages	71
▶ New Web Messages	71
▶ Displaying Web Messages	72
▶ Erasing Individual, All or All Old Sprint PCS Web Messages	74
▶ Classifying Sprint PCS Web Messages	74
▶ Sprint PCS Wireless Web Update Options	74
▶ New Web Alert	75
▶ Displaying Web Alert	75
▶ Viewing the Browser Information	75
▶ Adding Preset Messages	75
9. Using Your Internal Phone Book	77
▶ Saving New Entries	78
▶ Finding Internal Phone Book Entries	81
▶ Dialing from an Internal Phone Book Memory Location	85
▶ Editing the Internal Phone Book	85
▶ Erasing Stored Entries	86
▶ Assigning Names to Internal Phone Book Groups	86
▶ Speed Dialing	87
▶ Speed Dialing Directly from Phonebook Memory Numbers	88
▶ 4-Digit, 5-Digit Dialing	89
▶ Dialing Sprint PCS Service	89
10. Changing Your Phone's Settings	91
▶ Changing Ringer Volume	92
▶ Changing Alarm/Schedule Volume	92
▶ Changing Key Volume	92
▶ Changing Wakeup Tone	93
▶ Changing Receiver Volume	93
▶ Selecting Melody Types	94
▶ Setting Alerts	95

▶ Changing Your Standby Mode Display	96
▶ Changing Display Color	97
▶ Changing the Contrast	97
▶ Changing the Animation	98
▶ Changing the Backlight Settings	100
▶ Changing the Greeting	102
▶ Setting the Sleep Mode	102
▶ Changing the Clock Size	103
▶ Changing the Illumination Settings	103
▶ Setting the Location Information	105
▶ Changing the Menu Language	105
▶ Setting the Ringer to Silent or Reduced Volume When Taking the Phone Out of Your Bag	106
▶ Changing the Environment Mode Setting Name	106

11. Setting Your Phone's Security 109

▶ Accessing the Security Menu	110
▶ Locking Your Phone	110
▶ Changing Your Lock Code	111
▶ Locking the Use of Web	111
▶ Locking Mails	112
▶ Restricting Calls	112
▶ Storing Special Numbers	113
▶ Setting the Secret Mode	113
▶ Erasing the Entire Internal Phone Book	114
▶ Resetting Your Phone	114

12. Using the Voice Dialing Feature of Your Sprint PCS Phone 115

▶ Using Voice-Activated Dialing	116
▶ Programming Voice Dial Tag to Your Phone	116
▶ Reviewing Voice Dialing Entries	117
▶ Erasing Voice Dialing Entries	117

13. Personal Information Management 119

- ▶ Managing Schedules 120
- ▶ Using the Task List 126
- ▶ Making a Note of a Phone Number During a Call 130
- ▶ Using Your Sprint PCS Phone as a Wake-up Alarm 131
- ▶ Using the Calculator 133

14. Experiencing Sprint PCS Wireless WebSM 135

- ▶ The Sprint PCS Wireless Web 136
- ▶ The Sprint PCS Wireless Web Browser 137
- ▶ Launching the Sprint PCS Wireless Web Browser 137
- ▶ Web Guard 139
- ▶ Using the Sprint PCS Wireless Web Browser 140
- ▶ Troubleshooting 148
- ▶ MY Sprint PCS Wireless Web 149
- ▶ Games 150
- ▶ Using Sprint PCS Wireless Web Mail 151
- ▶ Using AOL Instant Messenger Service 153
- ▶ Using Sprint PCS Wireless Web Short Mail 155
- ▶ Signing up for Sprint PCS Wireless Web Updates 158
- ▶ Setting Up a Sprint PCS Wireless Web Connection 158

15. Selecting Your Accessories 163

- ▶ Accessory Options 164
- ▶ How to Order 165

16. Knowing Performance and Safety Guidelines 167

- ▶ Getting the Most Out of Your Reception 168
- ▶ Maintaining Safe Use of and Access to Your Phone 170
- ▶ Caring for the Battery 173
- ▶ Acknowledging Special Precautions and the FCC Notice 174
- ▶ Owner's Record 178
- ▶ User Guide Proprietary Notice 178

17. Terms and Conditions & Warranty Information 179

- ▶ Terms of Conditions of Services 180
- ▶ Manufacturer's Warranty 199

Welcome to Sprint PCS

Sprint PCS built the only all-digital, all-PCS nationwide network from the ground up for clearer calls, serving more than 300 major metropolitan areas. We built our network to give you what we believe you really want from a wireless phone: clear sound, private conversations and time-saving features.

And Sprint Personal Communications Services® can do something even more far-reaching – simplify your life. Our advanced technology is designed to grow with your communications needs so that one day, you'll be able to rely entirely on your Sprint PCS Phone™ to stay connected.

This guide will introduce you to our technology and your new Sprint PCS Phone through simple, easy-to-follow instructions. Since you're probably anxious to start using your phone, we encourage you to immediately flip to Section One – Getting Started With Sprint PCS Service. This section provides all the information you need to quickly activate your phone, set up your voicemail and much more. It also contains information on how to contact Sprint PCS should you have questions about service, want to purchase additional products or services, or just check your account balance.

Thank you for choosing Sprint PCS.

Getting Started with Sprint PCS Service

In This Section

- ▶ **Turning Your Phone ON and OFF**
 - ▶ **Getting Started with Sprint PCS Service**
 - ▶ **Setting Up Your Voicemail**
 - ▶ **Getting Help**
 - ▶ **Understanding this User Guide**
-

This section walks you through the step-by-step basics of setting up service for your Sprint PCS Phone™, including unlocking or activating your phone, setting up your voicemail and how to contact Sprint PCS for assistance.

Once you have completed this section, you're ready to explore the advanced features of your new phone.

Turning Your Phone ON and OFF

Turning Your Phone ON

1. Fully extend the antenna to receive the best reception.
2. Press and hold **END/⓪** until your phone is turned ON.

Once your phone is ON, it displays “Looking for Service...” indicating that your phone is searching for a signal. When your phone finds a signal, it automatically enters Standby mode – the phone’s idle state. At this point, you are ready to begin making and receiving calls.

If your phone is unable to find a signal after 15 minutes of searching, a Power Save feature is automatically activated. When a signal is found, your phone automatically returns to Standby mode.

In Power save mode, your phone searches for a signal periodically without your intervention. You can also initiate a search for Sprint PCS Service by pressing any key (when your phone is turned ON).

Turning Your Phone OFF

- ▶ Press and hold **END/⓪** until you see “Power off” on the display.

Your screen remains blank while your phone is off, unless you’re charging the battery.

Tip:

The Power Save feature helps to conserve your battery power when you are in an area where there is no signal.

Getting Started with Sprint PCS Service

Determine if Your Phone is Already Activated

If you received your phone in the mail or purchased it at a Sprint® Store, your phone is probably already activated. All you need to do is unlock your phone.

If your phone is not activated, please refer to your Activation Brochure for easy step-by-step instructions.

Unlocking Your Phone

Follow these steps to unlock your phone:

1. Press **END/0** to turn the phone on.
2. When “Locked” is displayed on the display screen, press **Unlock** (right soft key).
3. Enter your four-digit lock code. For security purposes, the code is not visible as you type.

Activating Your Phone

To activate your phone, follow the directions in the Activation Brochure that was included with your phone. Or visit <http://activate.sprintpcs.com> and activate your phone online.

Tip:

If you can't recall your lock code, try using the last four digits of either your Social Security number or Sprint PCS Phone Number or try 0000. If none of these work, call Sprint PCS Customer Care at 1-888-211-4PCS (4727).


Note:

The voicemail setup process may vary in certain Affiliate areas.

Setting Up Your Voicemail

All unanswered calls to your Sprint PCS Phone are automatically transferred to voicemail, even if your phone is off or in use. To avoid missing any important messages, you will want to set up your Sprint PCS voicemail box and personal greeting as soon as your Sprint PCS Phone is activated.

To set up voicemail, follow these steps:

1. From the Standby mode, press and hold  .
2. Follow the system prompts to create your passcode, record your greeting, record your name announcement and choose whether to activate One-Touch Message Access (a feature that lets you press one key to access messages and bypasses the need for you to enter your passcode).

For more information on accessing voicemail messages, see page XX.




Getting Help

Visit our Web Site




Stop by www.sprintpcs.com to get up-to-date information on Sprint PCS. You can also:

- ▶ Review coverage maps
- ▶ Learn how to use voicemail
- ▶ Access your account information
- ▶ Purchase accessories
- ▶ Add additional options to your service plan
- ▶ Check out frequently asked questions
- ▶ And much more

Sprint PCS Customer Care

Sprint PCS Customer Advocates are available to assist you 24 hours a day, seven days a week. Simply dial 1-888-211-4PCS (4727) from any phone, or press    from your activated Sprint PCS Phone while on the Sprint PCS Nationwide Network.

To call the Customer Care from the Standby mode:

1. From the Standby mode, move the cursor key right to display the Phone Book menu.
2. Highlight **Service Calls** and press .
3. Highlight **Customer Care** and press .
4. Press .

Once you dial Sprint PCS Customer Care, you can access a number of helpful account services through our automated Customer Care line. By following the voice prompts, you'll be able to learn more about Sprint PCS Products and Services, get Sprint PCS coverage by zip code or request a copy of your invoice.

Tip:

If you need to reach Sprint PCS Customer Care while you are off the Sprint PCS Network, dial 1-888-211-4PCS (4727).

Tip:

If you have a question regarding the operation of your Sprint PCS Phone, dial 1-888-211-4PCS (4727) from another phone so you can use your Sprint PCS Phone while speaking with Customer Care.

Tip:
Prepaid Options Menu is only available to Sprint PCS customers that have a Prepaid account.

Sprint PCS Directory Assistance

Sprint PCS Directory Assistance provides a variety of services, including: residential, business and government listings; assistance with local or long-distance calls; movie listings; hotel, restaurant and shopping information and major local event information. There is a per call charge and you will be billed for airtime.

▶ Press **4 1 1 TALK**.

OR

1. From the Standby mode, move the cursor key right to display the Phone Book menu.
2. Highlight **Service Calls** and press **[OK]**.
3. Highlight **Dir Assist** and press **[OK]**.
4. Press **TALK**.

Prepaid Calls

Prepaid customers can access the Prepaid Options Menu to receive account balance notification, replenish their account or speak with Sprint PCS Customer Care. There are two ways to access the Prepaid Options Menu, free of charge.

▶ Press *** 7 2 9 TALK**.

OR




1. From the Standby mode, move the cursor key right to display the Phone Book menu.
2. Highlight **Service Calls** and press **[OK]**.
3. Highlight **Prepaid** and press **[OK]**.
4. Press **TALK**.

Dialing Sprint PCS Roadside Rescue

If you need emergency service on the road, you can get help from Sprint PCS Roadside Rescue. Follow these steps:

► Press      .

OR




1. From the Standby mode, move the cursor key right to display the Phone Book menu.
2. Highlight **Service Calls** and press .
3. Highlight **Road Assist** and press .
4. Press .

Receiving Automated Billing Information

For your convenience, your phone gives you free access to billing information on your Sprint PCS Account. This information includes balance due, payment received, billing cycle and the amount of minutes used since your last billing cycle. Follow these steps to access this information:

1. Press   .
2. Follow the voice prompts to receive the information you want.

OR

1. From the Standby mode, move the cursor key right to display the Phone Book menu.
2. Highlight **Service Calls** and press .
3. Highlight **Account Info** and press .
4. Press .




Note:

This service may not be available in all Affiliate areas.

Note:
Sprint PCS
Operator
Services may not
be available in all
Affiliate areas.

Sprint PCS Operator Services

Sprint PCS Operator Services can provide assistance in placing collect calls or calls billed to a local telephone calling card or a third party.

1. From the Standby mode, press and hold  (or press  ).

Understanding this User Guide

This user guide introduces you to Sprint PCS technology and all the features of your new Sprint PCS Phone – through easy-to-follow instructions.

- ▶ **Sections** breakdown categories of information to progressively take you all the way from learning the basics to using the most advanced phone features.
- ▶ **Tips** highlight special shortcuts and timely reminders to help you make the most of your new phone.
- ▶ **The Index** helps you find specific information quickly.

We know that your time is valuable and that's why we've designed this guide to be used in a building block format or in stand-alone sections. You'll get the most out of your phone if you read each section. However, if you'd like to get right to a specific feature, you'll be able to locate the specific section using the colored tabs. Follow the instructions in that section and you'll be ready to use your phone in no time.

Getting to Know Your Sprint PCS Phone™


In This Section

- ▶ **Parts Name**
 - ▶ **Viewing the Display Screen**
 - ▶ **Features of Your SH-P300**
 - ▶ **Using the Key Guard**
 - ▶ **Using the TPO Switch**
 - ▶ **Using the Battery**
 - ▶ **Displaying Your Phone Number and Version Information**
 - ▶ **Setting Your Sprint PCS Phone to Offline Mode**
-

Your Sprint PCS Phone is packed with features that simplify your life and expand your ability to stay connected to the people and information that are important to you. We know that you're anxious to start using it, so this section will give you a quick introduction to your new phone. Easy-to-follow instructions will guide you through the basics of the most common features of your phone and you'll be on your way to using it in no time.

Don't forget the other chapters in this guide. They're filled with information about the capabilities and benefits of your new Sprint PCS Phone. They include detailed step-by-step instructions that familiarize you with all the features and explain how to customize your phone to meet your specific needs.

Parts Name

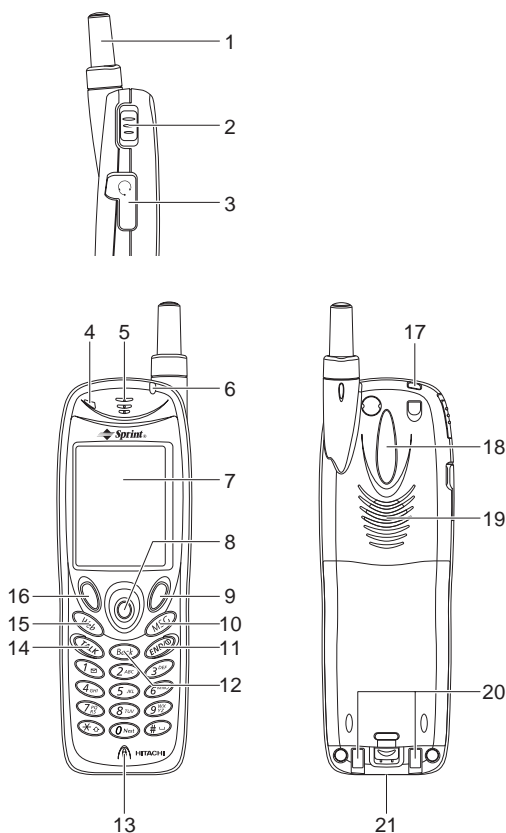

- 1. Antenna:** The voice on the other end sounds clearest when the antenna is all the way up.
- 2. TPO Switch:** Used to set how to handle incoming calls.
- 3. Headset Jack:** Provides connection for an optional headset.
- 4. Optical Sensor:** Detects brightness. You can set this function to stop the ringer or reduce the

















ringer volume when brightening is detected (for example, when you take the phone out of your pocket) or to turn on the backlight according to the ambient light level.





- 5. Earpiece:** Lets you hear the caller's voice and voice prompts.
- 6. LED (green/orange/red light):** Flashes green and orange when you have incoming calls. And flashes red while charging; when charging is completed, the lamp turns green.
- 7. Display Screen:** Displays phone status icons, menus, functions, etc.
- 8. Cursor Key:** Scrolls through the menu options, Phone Book list, Call History list, etc. The move left key provides a shortcut to the shortcuts menus and the move right key jumps to the Phone Book menu. Pressing the center of the Cursor Key displays the top menu.
- 9. Soft Key (right):** Lets you select the menu (option) corresponding to the bottom right line on the Display Screen.
- 10. MSG:** Lets you launch the Messaging application. This key also functions as the page down key in the Phone Book and Calendar displays.
- 11. END/POWER:** Lets you disconnect a call and return to the Standby mode. Lets you put the caller on hold when receiving incoming calls. Or turns the phone ON and OFF.
- 12. Back:** Allows you to clear characters from the screen and also to go back to the previous screen.

- 13. Microphone:** You should speak into this microphone.
- 14. TALK:** Lets you place a call, receive a call, answer Call Waiting, use Three-Way Calling and Voice Dial.
- 15. Web:** Lets you launch the Browser. This key also functions as the page up key in the Phone Book and Calendar displays.
- 16. Soft Key (left):** Lets you select the menu (option) corresponding to the bottom left line on the Display Screen.
- 17. Handstrap Slot:** Used to attach the hand strap.
- 18. Back illumination:** Flashes when you have incoming calls.
- 19. Speaker:** Issues ringing tone when receiving a call, sounds when using the Jukebox feature, the other party's voice when Speaker Phone is set to ON.
- 20. Charge Terminal:** Used to charge the phone on the optional Desktop Charger.
- 21. External Connection Terminal:** Used to connect the Travel Charger. Also used to connect the phone to a PC.

Viewing the Display Screen

This list identifies the symbols you'll see on your display screen.

- ▶  shows your current signal strength. The more lines you have, the stronger your signal.
- ▶ **PhoneOFF** lights in OFFLINE mode.
- ▶  means your phone cannot find a signal.
- ▶  tells you a call is in progress.
- ▶  lights during data downloading.
- ▶  3G Data Service is active;  (flashing): receiving data;  (flashing): sending data; : 3G Data Service is dormant; : 3G Data Service is unavailable.
- ▶  indicates the Speaker Phone is set to ON.
- ▶  indicates you have new Voicemail(s) waiting.
- ▶  indicates you have new message(s) waiting.
- ▶  indicates you have both new Voicemail(s) and message(s) waiting.
- ▶ **R** indicates the phone is roaming on another service provider's network. If this icon is not displayed, you are on the Sprint PCS Nationwide Network.
- ▶  shows the level of your battery charge. The more black you see, the more power you have left. (While charging: flashes)
- ▶  indicates the Location setting is ON.
- ▶  indicates the Location setting is OFF.

- ▶  indicates Alarm is set.
- ▶  indicates Snooze Alarm is set.
- ▶  indicates your phone is in vibrate mode.
- ▶  indicates the browser page is secure.

Soft Keys

You can select the menus or options, which are described at the bottom line of the display screen, by pressing the corresponding soft key (left/right). In this User Manual, the explanation for selecting such menus/options is as shown below:

- ▶ Press Options.

(It means, “Press the soft key (left/right) corresponding to Options.”)

Features of Your SH-P300

Congratulations on the purchase of your Sprint PCS Phone™ (SH-P300). This phone is lightweight, easy-to-use, reliable and offers many significant features:

- ▶ Provides access to other PCS networks where Sprint PCS has implemented roaming agreements (pages XX-XX).
- ▶ Sprint PCS Wireless WebSM Browser provides access to the wireless Internet in digital mode (page XX-XX).
- ▶ Sprint PCS Wireless Web MailSM, AOL Instant MessengerSM Service and Sprint PCS Wireless Web Short MailSM provide quick and convenient text messaging capabilities (page XX-XX).

- ▶ Sprint PCS Wireless WebSM Connection offers wireless modem capabilities for your personal computer (pages XX-XX). For using this feature Sprint PCS Wireless WebTM connection kit must be purchased. The purchase information is described in Accessory Guide included in this User Guide.
- ▶ Sprint PCS Voice CommandSM lets you dial phone numbers by speaking someone's name, or the digits in their phone number (pages XX-XX).
- ▶ Voice Dialing lets you call the phone numbers by saying the programmed names into the phone (pages XX-XX).
- ▶ "Get New" function lets you download the image (pictures), sound (melody), applications or games to the phone from Web site.
- ▶ Voice Memo function can record your voice in the Standby mode (page XX).
- ▶ Speed Dialing lets you call the phone number stored in the Phone Book by one touch dialing (page XX).
- ▶ Phone book can store up to 200 entries. Each entry can contain 5 phone numbers, 1 Email, 1 Web, Ringer and Picture (section 9).
- ▶ Calendar function provides a convenient way to manage your schedule and uses alarms and messages to remind you of scheduled events (pages XX-XX).
- ▶ Tegic T9 text input decrease the time of entering characters and gives you the easier way to edit the text messages (pages XX-XX).

Note:

Long backlight settings, searching for service, vibrate mode, game use and Browser use affect the battery's talk and standby times.

Tip:

Be sure to charge your phone's battery and watch your indicator to ensure your levels are okay.

Using the Battery

Battery Capacity

Your Sprint PCS Phone is equipped with a Lithium Ion (Li-Ion) battery. It allows you to recharge your battery before it is fully drained. The battery provides approximately 200 minutes of continuous digital talk time or approximately 220 hours of continuous digital standby time.

When there are approximately 5 minutes of talk time left, the blank battery icon blinks, the warning message appears on your display screen, and the phone sounds an audible alert.

When the battery is completely drained, the warning message appears and the phone sounds an audible alert again. Thirty seconds later, the phone powers down.


Installing the Battery

Your Sprint PCS Phone comes with a Li-Ion battery. Follow these steps to install it:

1. Push the lock button in the direction in A to unlock the battery cover. Grasp the cover on both sides next to the mark where it sticks out and remove the lid as in B.
2. Place the battery in the body so that the tabs on the battery and the slots in the phone are aligned.
3. While pushing the battery up, press it into the body.
4. Fit the tabs on the top of the battery cover into the slots of the body.

5. While pushing the battery cover in direction C, align it with the body and press down D in the middle of the cover until you hear it catch. To lock the cover in place, press the lock button in direction E.


Finally, make sure the battery cover is securely closed.

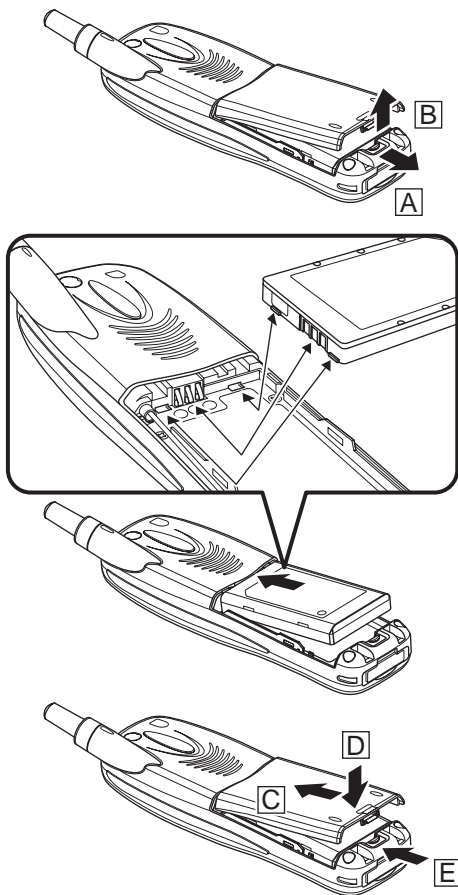

Removing the Battery

Follow these easy steps, to remove the battery:

1. Make sure the power is off so that you don't lose any stored numbers or messages.
2. Push the lock button in the direction in A to unlock the battery cover. Grasp the cover on both sides next to the mark where it sticks out and remove the lid as in B.
3. Hold the battery and pull it up and out.

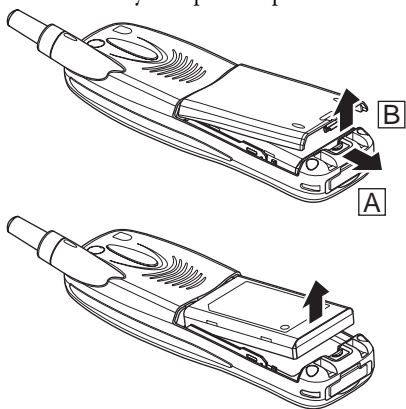

Charging the Battery

Your Sprint PCS Phone comes with a rechargeable battery. You should charge the battery as soon as possible so you can begin using your phone.

Keeping track of your battery's charge is important. If your battery level becomes too low, your phone automatically turns off and you'll lose everything you were just working on. For a quick check of your phone's battery level, glance at the battery charge indicator located on your phone's display screen. If the battery charge gets too low, the blank battery

Warning!:

Using the wrong battery charger could cause damage to your phone and void the warranty.

icon starts blinking, and the phone sounds a warning tone.



Always use a Sprint PCS-approved Travel Charger, the optional Desktop Charger or the optional Vehicle Power Adapter to charge your battery.

Using the Travel Charger

When you're ready to charge your battery, it is vital that you use only Hitachi-approved chargers. To use your Travel Charger:

1. Open the External Connection Terminal cover of your phone.
2. Plug the Travel Charger into a wall outlet.
3. Plug the other end of the Travel Charger into the bottom of your phone, with the battery installed.

► Charging when your phone is turned on:

The battery icon  blinks and LED lights red while charging. When charging is complete, the battery icon  lights and LED turns green.

► Charging when your phone is turned off:


LED lights red while charging. When charging is complete, LED turns green.

With the phone switched off, it generally takes about 100 minutes to fully charge a completely rundown battery. With the sprint PCS-approved Li-Ion battery, it is okay to recharge the battery before it becomes completely run down.

Note:

Keep the phone away from appliances such as radios during charging to avoid interference with radio reception.

Tip:

Switching this function on disables the operation of all the keys, but you can still answer incoming calls by pressing  and use the cursor keys to adjust the ringer volume when a call comes in.

Using the Key Guard

Your Sprint PCS Phone is equipped with a Key Guard function which prevents the phone from operating when keys are pressed accidentally, such as when you carry the phone in your bag while it is switched on.

To switch Key guard ON:

1. From the Standby mode, press and hold .

To switch Key guard OFF:

1. Press any key.
2. While the pop up message is displayed, press .

Using the TPO Switch

Your Sprint PCS Phone has 3 operating modes which differ in the way calls and messages are received. You can set the mode simply by using this switch, which provides a quick and easy way to select modes suited to various places and situations.

- ▶ The mode names for the three switch positions are **Silent** (top), **Environment** (middle), and **Normal** (bottom).
- ▶ Slide the switch up or down to switch modes. The mode name appears on the Standby screen.
- ▶ You can select **Meeting, Outdoor, Office,** or **Private** as the name for Environment mode. (See page XX.)

- You cannot change the settings for Silent mode, but you can change the settings from the defaults in the other modes. (See page XX.)

Mode Name	Limit Use (In/Out)	Default Volume Setting	Default Melody Type
Silent	—	Silent	No sounds
Environment			
Meeting	—	Silent	TBD (Mode settings take precedence)
Outdoor	—	High+ Vibrate	TBD (Mode settings take precedence)
Office	Office group only	Medium	TBD (Mode settings take precedence)
Private	Private group only	High+ Vibrate	TBD (Internal Phone Book settings take precedence)
Normal	—	Medium	TBD (Internal Phone Book settings take precedence)

Displaying Your Phone Number and Version Information

Just in case you forget your own phone number, your Sprint PCS Phone can remind you. You can also check your current user name or the version number of the software, hardware, PRL (Preferred Roaming List) and Browser installed on your Sprint PCS Phone.

To display your phone number and version information:

1. From the Standby mode, press **Menu** to display the menu.
2. Highlight **Phone Info** and press **OK**.

Setting Your Sprint PCS Phone to Offline Mode

If you set your Sprint PCS Phone to offline mode, you will be unable to receive calls or messages even when you are in a Sprint service area. However, you will still be able to make emergency calls.

To switch to Offline mode:

1. From the Standby mode, press **Options** to display the option menu.
2. Highlight **Offline Mode** and press **OK**.

Note:

When you are on an aircraft, you should follow any instructions given by the airline staff, even if your Sprint PCS Phone is in Offline mode.

Understanding Roaming

In This Section

- ▶ **Understanding How Roaming Works**
 - ▶ **Setting Your Phone's Roam Mode**
 - ▶ **Setting an Alert When Roam Charges Apply (Call Guard)**
-

Roaming is the ability to make or receive calls while you're off the Sprint PCS Nationwide Network. Your new Sprint PCS Phone™ works anywhere on the Sprint PCS Nationwide Network and allows you to roam on PCS CDMA networks where compatible wireless service is available.

This section explains how roaming works as well as special features that let you manage your roaming experience.

Tip:

Remember, when you're using your phone off the Sprint PCS Network, always dial numbers using 11 digits (1 + area code + number).

Note:

You will pay a higher per-minute rate for roaming calls.

Tip:

If you're on a call when you leave the Sprint PCS Network and enter an area where roaming is available, your call is dropped. If your call is dropped in an area where you think Sprint PCS Service is available, turn your phone off and on again to reconnect to the Sprint PCS Nationwide Network.

Understanding How Roaming Works

Your phone's display screen always lets you know when you're off the Sprint PCS Network and start roaming by displaying the **R** icon.

Roaming on Other PCS CDMA Networks

When you're roaming on other PCS CDMA networks, your call quality will be similar to the quality you receive when making calls while on the Sprint PCS Network. You may not be able to access certain calling features, such as Sprint PCS Wireless Web, however, all of your calls are still private and secure.

Setting Your Phone's Roam Mode

Your Sprint PCS Phone allows you to control your ability to roam. By using the menu option **Roaming**, you determine which signals your phone accepts.

Set Mode

Choose from three different settings on your phone to control your roaming experience:

1. From the Standby mode, press the center of the cursor key to display the top menu.
2. Select the **Setting** icon and press **OK**.
3. Highlight **Roaming** and press **OK**.
4. Highlight **Set Mode** and press **OK**.
5. To select an option, highlight it and press **OK**.

- ▶ **Automatic:** This setting seeks Sprint PCS Service. When Sprint PCS Service is unavailable, it searches for an alternative system.
- ▶ **Sprint PCS:** This setting allows you to select the Sprint PCS Nationwide Network only and prevents roaming on other networks.
- ▶ **PCS:** This setting allows you to select the PCS Network only and prevents roaming on other networks.

Setting an Alert When Roam Charges Apply (Call Guard)

In addition to the roaming icon, Call Guard alerts you when roaming charges apply. The following settings apply to Call Guard.

Call Guard

This feature makes it easy to control when you roam by reminding you when you are about to make or receive a roaming call. It also requires you to take additional steps before placing or answering a roaming call. These additional steps are not required when you make or receive calls while on the Sprint PCS Nationwide Network.

To Turn the Call Guard Feature On/Off:

1. From the Standby mode, press the center of the cursor key to display the top menu.
2. Select **Settings** icon and press .
3. Highlight **Roaming** and press .
4. Highlight **Call Guard** and press .
5. Highlight **On** or **Off** and press .

Note:

Speed Dialing is not available when you are roaming with Call Guard enabled.

To Place Roaming Calls with Call Guard On:

1. From the Standby mode, dial 1 + area code + the seven-digit number (You can also initiate a call from the Internal Phone Book, Call History or Sprint PCS Web Messages).
 2. Press **TALK** (or press **Options**, highlight **Call** and press **OK**).
- A warning message displays.
3. Press **OK** to proceed.

To Answer Incoming Roaming Calls with Call Guard On:

1. Press **TALK**.
- A warning message displays.
2. Press **OK** to proceed.

Making and Answering Calls

In This Section

- ▶ **Making Calls**
 - ▶ **Answering Calls**
 - ▶ **Adjusting Volume During a Conversation**
 - ▶ **Muting a Call**
 - ▶ **Dialing Options**
 - ▶ **Incoming Call Notification**
 - ▶ **Missed Call Notification**
 - ▶ **In-Call Options**
 - ▶ **End-of-Call Options**
 - ▶ **Dialing Phone Numbers With Pauses**
 - ▶ **Calling Emergency Numbers**
 - ▶ **Displaying Your Phone Number**
 - ▶ **Using Any Key Answer**
 - ▶ **Using Auto Answer**
 - ▶ **Using Sprint PCS Voice CommandSM**
-

Your Sprint PCS PhoneTM gives you different options for making calls so that you can use the method that works best for you. Once you learn the basics here, the possibilities are endless.

Tip:

When making calls off the Sprint PCS Network, always dial using 11 digits (1 + area code + phone number).

Tip:

To redial your last outgoing phone number, press **TALK** twice.

Making Calls

Your Sprint PCS Phone™ offers many different ways to make calls, including Sprint PCS Voice CommandSM (page XX), Speed Dialing (page XX), Voice Dialing (page XX) and using Call History (page XX).

To make a call using your key pad:

1. Make sure your phone is on.
2. Enter a phone number. (If you make a mistake while dialing, press **Back** to erase one digit at a time. Or, press and hold **Back** to erase the entire number.)
3. Press **TALK**.
4. When you are finished, press **END/⓪**.

Answering Calls

1. Make sure your phone is on. If your phone is off, incoming calls go to voicemail.
2. When your phone rings, press **TALK**.
3. To disconnect the call, press **END/⓪**.

Adjusting Volume During a Conversation

Whether you need to hear more or less of a conversation, adjust the volume during a call.

- Move the cursor key upward or downward.

Muting a Call

There are times when it's necessary to mute a call so that your caller does not hear you or certain background noise.

To use this function during a call:

1. Press **[Options]** to display the option menu.
2. Highlight **Turn Mute ON** and press **[OK]**.
 - ▶ When the phone is muted, “-MUTE-” appears on the display.

To unmute a call:

1. Press **[Options]** to display the option menu.
2. Highlight **Turn Mute OFF** and press **[OK]**.

Dialing Options

[Options] is displayed when you enter numbers in the Standby mode.

To select an option:

1. Press **[Options]** to display the option menu.
2. Highlight one of options and press **[OK]**.
 - ▶ **Call** to dial the phone number.
 - ▶ **Save Phone #** to save the phone number in your Internal Phone Book, (See “Saving New Entries” on page 78)
 - ▶ **Prepend** to add numbers to the beginning of the phone number.
 - ▶ **Hard Pause** to insert a hard pause. (See “Dialing Phone Numbers With Pauses” on page 42.)

- ▶ **Time Pause** to insert a time pause. (See “Dialing Phone Numbers With Pauses” on page 42.)

Incoming Call Notification

Depending upon your settings, your Sprint PCS Phone notifies you of incoming calls in the following ways:

- ▶ The phone rings and/or vibrates.
- ▶ The LED flashes.
- ▶ The backlight illuminates.
- ▶ The screen displays an incoming call message and animation.
- ▶ The phone number of the caller displays, if the phone number is available.
- ▶ If the phone number is in your Internal Phone Book, the name identified with that number displays.

You can perform the following when you have an incoming call.

- ▶ Press **TALK** to answer incoming calls.
- ▶ Press **END/⓪** to put the caller on hold.
- ▶ Move the cursor key upward or downward to change the ringer volume.
- ▶ When an incoming call is not answered, the Missed Call log is displayed on your screen.

Missed Call Notification

When an incoming call is not answered, the Missed Call Log is displayed on your screen.

To display the missed call entry:

- ▶ Highlight **Missed Calls** and press **OK**.

To dial the Missed Call entry's phone number:

- ▶ Highlight the entry, press **Details** and then press **TALK**.

In-Call Options

During a call, you can display the following menu options by pressing **Options**.

To select an option, highlight one of options and press **OK**.

- ▶ **Turn Mute ON** to mute your phone's microphone. Select **Turn Mute OFF** to reactivate the microphone.
- ▶ **3-Way Calling** to call a third party. (See "Three-Way Calling" on page 65.)
- ▶ **Speaker Phone** to hear the caller's voice from the speaker on the back of the phone.
- ▶ **Scratch Pad** to make a memo of the phone number. (See "Making a Note of a Phone Number During a Call" on page 130.)

Note:

The End-of-Call options are not displayed for calls identified as No ID or Restricted.

End-of-Call Options

After receiving a call from or making a call, the phone number (or the Phone Book entry name) and the duration of the call are displayed. You can display the following menu options by pressing **Options** while the phone number is displayed.

To select an option, highlight one of the options and press **OK**.

- ▶ **Call** to dial the phone number.
- ▶ **Save Phone #** to save the phone number in your Internal Phone Book. (See “Using Your Internal Phone Book” on page 77.)

Dialing Phone Numbers With Pauses

You can dial phone number with pauses for use with automated systems, such as voicemail or credit card billing numbers. If you select a hard pause, the next set of numbers are not dialed until you press **TALK**. If you select a time pause, your phone automatically sends the next set of numbers after two seconds.

To dial phone numbers with pauses:

1. Enter the phone number.
2. Press **Options** to display the option menu.
3. Highlight either **Hard Pause** or **Time Pause** and press **OK**. Hard Pauses are displayed as a “H” and Time Pauses as a “T”.
4. Enter additional numbers.
5. When finished, press **TALK**.

When dialing a number with a hard pause, press **TALK** to send the next set of numbers.

Calling Emergency Numbers

You can place calls to 911, even if your phone is locked or your account is restricted.

1. Dial **9** **1** **1** and press **TALK**.
2. When you are finished, press **END/⓪**.
3. Press **Options** to display the option menu.
4. Highlight **Exit Emergency** and press **OK**.
5. Highlight **Yes** and press **OK**.

Displaying Your Phone Number

Just in case you forget your own phone number, your Sprint PCS Phone can remind you.

To display your phone number:

1. From the standby mode, press **Menu** to display the menu.
2. Highlight **Phone Info** and press **OK**.

Using Any Key Answer

This feature allows you to answer incoming calls by pressing any key (not including **END/⓪**, Cursor key or **Back**).

To activate this feature:

1. From the Standby mode, press the center of the cursor key to display the top menu.
2. Select the **Settings** icon and press **OK**.
3. Highlight **Others** and press **OK**.

4. Highlight **Any Key Answer** and press .
 5. Highlight **ON** and press .
- To deactivate this feature, highlight **OFF** at step 5 above.

Using Auto Answer

This feature sets the phone to automatically pick up after 1 to 30 seconds. This feature only works with the headset (must be purchased separately).

To activate this feature:

1. From the Standby mode, press the center of the cursor key to display the top menu.
 2. Select the **Settings** icon and press .
 3. Highlight **Others** and press .
 4. Highlight **Auto Answer HS** and press .
 5. Highlight **ON** and press .
 6. Enter the number of seconds from 1 to 30 for the pick up time and press .
- To deactivate this feature, highlight **OFF** at step 5 above.







Using Sprint PCS Voice CommandSM

With Sprint PCS, the first wireless provider to offer innovative Voice Command technology, reaching your friends, family, co-workers and teammates has never been easier – especially when you're on the go.

With Sprint PCS Voice Command:

- ▶ You can store all your contact's phone numbers, so you can simply say the name of the person you want to call.
- ▶ There's no need to punch in a lot of numbers, memorize voicemail passwords or try to dial while you're driving.
- ▶ You can call anyone in your address book – even if you don't remember their phone number.



It's Easy To Start

Just dial   2  from your Sprint PCS Phone™ to activate the service. You can also dial    to go through a Sprint PCS Voice Command tutorial directly from your phone.



Create Your Own Address Book

You can program up to 500 names into your address book, with each name having up to five phone numbers. That's 2,500 phone numbers – and with the advanced technology of Sprint PCS Voice Command – you can have instant access to all of them.

There are four ways to update your address book:

- ▶ **On the Web:** Go to www.talk.sprintpcs.com and receive a fully functional Web-based address book to create and update your contacts.
- ▶ **Use an Existing Address Book:** Upload your contacts from Microsoft® Outlook®, Microsoft Excel® and other personal information software into your address book for no additional charge.
- ▶ **Call Directory Assistance:** If you don't have a computer or Internet access handy, you can have Sprint PCS Directory Assistance look up phone numbers for you and automatically add them to your address book. Just say, "Call operator," and we'll add two names and numbers to your address book for our standard directory assistance charge.
- ▶ **Use Voice Recordings:** Simply dial   **TALK** and say, "Add name." You will then be asked to say the name and number you want to add to your personal address book. Your address book can store up to 20 Voice Recordings at once.

How It Works

1. Once you've signed up for Sprint PCS Voice Command and created your address book, all you do is press   **TALK**. You'll hear a tone followed by the prompt "Ready."
2. After the "Ready" prompt, simply say, in a natural voice, the name of the person or the number you'd like to call. For example, you can say, "Call Jane at work," "Call John on his wireless phone," "Call 555-1234" or "Look up Bob."

3. The number will automatically be dialed. Keep in mind that Sprint PCS Voice Command recognizes not only your voice, but any voice, so others can experience the same convenience if they use your phone.

For more helpful hints on Sprint PCS Voice Command, visit www.talk.sprintpcs.com.

Navigating Through Menus and Entering Text

In This Section

- ▶ **Menu Navigation**
 - ▶ **Working with the Menu Structure**
 - ▶ **Viewing the Menus**
 - ▶ **Automatic Pop-up Window Display**
 - ▶ **Checking the Guide for the Operation Procedure**
 - ▶ **Selecting a Character Input Mode**
 - ▶ **Entering Characters by Tapping the Keypad**
 - ▶ **Entering Characters Using T9 Text Input**
-

This section is a road map to using your phone and also shows how to enter characters in your phone. Every function and feature can be accessed through a menu. Take a few moments to know your way around and how to enter text. You'll find it makes your phone easier to use.

Menu Navigation

Your Sprint PCS Phone allows you to scroll through menus quickly and easily.

To navigate through the menu:

1. From the Standby mode, press **Menu** (Soft Key left).
2. Highlight your desired menu option by moving the cursor key upward or downward.
The menu runs over 2 screens.
3. Press **OK** (Soft Key left).

Working with the Menu Structure

Selecting Menu Items

As you navigate through the menu, the options are highlighted. Select an option by highlighting it and pressing **OK** (Soft Key left).

For example, if you want to view your last incoming call:

1. From the Standby mode, press **Menu**.
2. Highlight **Call History** and press **OK**. (It may already be highlighted.)
3. Move the cursor key downward to highlight **Incoming Calls** and press **OK**.

If you have received any calls, they are displayed sequentially from the most recent call.

OR

You can press the number that corresponds to the desired option on the numeric keys.

1. From the Standby mode, press **Menu**.
2. Press **1** to select **Call History**.
3. Press **2** to select **Incoming Calls**.

Backing Up Within a Menu

To go to the previous menu:

- ▶ Press **Back**.

To go to the Standby screen:

- ▶ Press **END/0**.

Viewing the Menus

Menu Diagram

Menus let you check or change your phone settings. The following outline shows your phone's menu structure.

1. Call History

1. Outgoing Calls
2. Incoming Calls
3. Missed Calls
4. Erase Calls

2. Phone Book

1. Find Name
2. Add New Entry
3. Speed Dial #s
4. Group Name
5. Service Calls

3. Messaging

4. Wireless Web

5. Downloads

1. All
2. Images
3. Applications
4. Ringer&Audio
5. Games

6. Voicemail

1. Call Voicemail
2. Clear Count

7. Email

1. Compose
2. Inbox
3. Outbox
4. Draft
5. Downloads
6. Settings
7. Check New Mail

8. Voice Dial

1. Program
2. Preview
3. Erase All

9. Settings

1. Sounds
2. Display
3. Wireless Web
4. Roaming
5. Location
6. Messaging
7. Security

8. Text Input

9. Others

10. Calculator

11. Jukebox

1. Play

2. Random Play

3. Charge & Play

4. Program

5. Volume

12. PIM

1. Schedule

2. Task List

3. Notepad

4. Alarm

5. Clock Adjust

13. Phone Info

14. Guide

15. Key Guard

Automatic Pop-up Window Display

Your Sprint PCS Phone features an automatic pop-up window function to provide help when you are using the phone.

- **Preview Window:** For some menu options, a pop-up window appears showing the settings information for the selected item, allowing you to check the information without having to press .

- **Information Window:** Displays the OK, Notice or Error icon and a message to show the result of an operation. The window disappears automatically after 5 seconds or when you press **OK**.

Checking the Guide for the Operation Procedure

This function displays explanations of key operations. This function allows you to check the operation method when the User Guide is not handy.

1. From the Standby mode, press **Menu** to display the main menu.
2. Highlight **Guide** and press **OK**.
3. Scroll up or down to display the information on the key operation you want to check.
4. When you have finished checking the operation method, press **OK**.

Selecting a Character Input Mode


Your Sprint PCS Phone™ provides convenient ways to enter words, letters and numbers.

To change the character input mode:

In a text entry field (e.g. for entering a message on page XX and an event summary on page XX, etc.), press the center of the cursor key.

Each time you press the cursor key, the input mode changes in a cycle from T9 Word → Alphanumeric (“abc” displayed) → Numeric (“123” displayed).

You can also switch between uppercase and lowercase by pressing **✱⇑** (Shift key). Each time

you press , the input mode changes in a cycle from T9 word/abc (all lowercase) → T9 Word/Abc (initial caps) → T9WORD/ABC (all uppercase).












The currently selected mode is shown at the bottom center of the display.
















Entering Characters by Tapping the Keypad

To enter characters by tapping the keypad, select the **abc** mode (see “Selecting a Character Input Mode” above).

Press the corresponding key until the desired character appears.


Characters scroll in the following order. If no key is pressed for approximately 2 seconds, the cursor automatically moves to the next space.

- ▶  Back-space All clear (by pressing and hold)
- ▶  1 ,.@1?!*# 1 (by pressing and hold)
- ▶  2 abc2 2 (by pressing and hold)
- ▶  3 def3 3 (by pressing and hold)
- ▶  4 ghi4 4 (by pressing and hold)
- ▶  5 jkl5 5 (by pressing and hold)
- ▶  6 mno6 6 (by pressing and hold)
- ▶  7 pqrs7 7 (by pressing and hold)
- ▶  8 tuv8 8 (by pressing and hold)
- ▶  9 wxyz9 9 (by pressing and hold)
- ▶  One-character-shifted Caps Lock Unshifted

- ▶  0,Next(T9 mode) 0 (by pressing and hold)
 - ▶  Space
- In Spanish mode, character scroll in the following order:
- ▶  Back-space All clear (by pressing and hold)
 - ▶  ., @ 1¿?;!*# 1 (by pressing and hold)
 - ▶  abcáãç2 2 (by pressing and hold)
 - ▶  defé3 3 (by pressing and hold)
 - ▶  ghií4 4 (by pressing and hold)
 - ▶  jkl5 5 (by pressing and hold)
 - ▶  mnoóñ6 6 (by pressing and hold)
 - ▶  pqr7 7 (by pressing and hold)
 - ▶  tuvüü8 8 (by pressing and hold)
 - ▶  wxyz9 9 (by pressing and hold)
 - ▶  One-character-shifted Caps Lock Unshifted
 - ▶  0,Next(T9 mode) 0 (by pressing and hold)
 - ▶  Space

Entering Characters Using T9 Text Input

To enter characters using T9 Text Input, select the **T9 Word** mode (see “Selecting a Character Input Mode” above).

T9 Text Input analyzes the letters you enter using an intuitive word database and creates a suitable word. (The word may change as you type.) If the word you want does not display after you have entered all the letters, press  (or move the

cursor key upward or downward) to scroll through additional word selections.

Managing Call History

In This Section

- ▶ **Viewing the Call History List (Outgoing, Incoming and Missed)**
 - ▶ **Call History Options**
 - ▶ **Making a Call from the Call History**
 - ▶ **Erasing All Call History**
-

The Call History helps you manage your time more effectively. It keeps track of incoming calls, calls made from your Sprint PCS Phone™ and missed calls. This section guides you through accessing and making the most of your Call History.

Viewing the Call History List (Outgoing, Incoming and Missed)

You'll find your Call History invaluable. It is a list of the last 20 phone numbers or Internal Phone Book entries for calls you placed, accepted or missed. Call History makes redialing a number fast and easy. It is continually updated as new numbers are added to the beginning of the list and the oldest entries are removed from the bottom of the list.

Each entry contains the phone number (if it is available) and Internal Phone Book entry name (if the phone number is in your Internal Phone Book). Duplicate calls may only appear once on the list.

To view a Call History entry:

1. From the Standby mode, press **Menu** to display the menu.
2. Highlight **Call History** and press **OK**.
3. Highlight **Outgoing Calls**, **Incoming Calls** or **Missed Calls** and press **OK**.

Call History Options

For additional information and options for a particular call, highlight a Call History entry and press **Details**, then **Options**. This feature gives you the option of selecting:

- ▶ **Call** to dial the phone number.
- ▶ **Save Phone #** to save the sender's phone number in your Internal Phone Book. (See "Using Your Internal Phone Book" on page 77.)

- ▶ **Messaging** sends a message to that phone number.
- ▶ **Prepend** to add numbers to the beginning of the phone number.
- ▶ **Erase Call** to erase the entry.

Making a Call from the Call History

To place a call from Call History:

1. From the Standby mode, press **[Menu]** to display the main menu.
 2. Highlight **Call History** and press **[OK]**.
 3. Highlight either **Outgoing Calls**, **Incoming Calls** or **Missed Calls** and press **[OK]**.
 4. Highlight the entry you want to call by scrolling through the list.
 5. Press **TALK**.
- or
- Press **[Details]** and press **[TALK]**.

Erasing All Call History

To erase individual Call History entries, see “Call History Options” on page 60.

To erase all Call History:

1. From the Standby mode, press **[Menu]** to display the menu.
2. Highlight **Call History** and press **[OK]**.
3. Highlight **Erase Calls** and press **[OK]**.
4. Highlight **Outgoing Calls**, **Incoming Calls**, **Missed Calls** or **All Calls** and press **[OK]**.

Note:

If you erase a call history entry, you will be prompted whether you wish to erase the next entry or not. This continues until all entries have been erased or you press **Back**.

Note:

You cannot make calls from Call History to entries identified as No ID or Restricted. Data calls can only be dialed through a personal computer.

5. Highlight **Yes** and press .

Using Sprint PCS Service Features

In This Section

- ▶ **Using Caller ID**
 - ▶ **Responding to Call Waiting**
 - ▶ **Three-Way Calling**
 - ▶ **Forwarding Your Calls**
-

Now that you've mastered the basics, you can begin to focus on where you want to go. This section guides you step-by-step through the calling features that enhance your Sprint PCS Service. From Caller ID to Call Forwarding, using these features will help you make the most of your Sprint PCS Service.

Using Caller ID

Caller ID lets you know who's calling by displaying the number of the person calling when your phone rings. If the caller's name and number are already stored in your Internal Phone Book, the corresponding name appears with the number. In the same way, if you call someone who has this feature, your phone number displays on their phone.

If you want to block your phone number from being displayed for a specific outgoing call, follow these steps:

1. Press ***67**.
2. Enter the number you want to call.
3. Press **TALK**.

To permanently block your number, call Sprint PCS Customer Care (see page XX for number).

Responding to Call Waiting

Call Waiting alerts you of incoming calls while you're on a call by sounding beeps. The display screen informs you that a call is coming in and shows the caller's name (if you have the Phone Book entry) or the phone number.

To respond to an incoming call while you're on a call:

- ▶ Press **TALK**.

This step puts the first caller on hold and answers the second call.

Tip:

For those calls where you don't want to be interrupted, you can temporarily disable Call Waiting by pressing ***67** before placing your call. Call Waiting is automatically reactivated once you end the call.

To switch back to the first caller:

- ▶ Press **TALK** again.

Three-Way Calling

With Three-Way Calling, you can talk to two different people at the same time. When using this feature, the normal airtime rates will be charged for each of the two calls.

1. Enter a number you wish to call.
2. Press **TALK**.
3. Once you have established the connection, press **TALK** (or press **Options**, highlight **3-WayCalling** and press **OK**).
4. Enter the second number you wish to call.
 - ▶ You can also select a phone number from your Phone Book or Call History.
5. Press **TALK**.
6. When you're connected to the second party, press **TALK** once more to begin your three-way call.

If one of the people you called hangs up, you and the remaining caller stay connected. If you initiated the call and are the first to hang up, all three callers are disconnected.

Tip:

You don't have to worry about being interrupted during a Sprint PCS Wireless Web call because Call Waiting and Three-Way Calling are automatically disabled.

Note:

You are charged a higher rate for calls you have forwarded.

Forwarding Your Calls

Call Forwarding lets you forward all your incoming calls to another phone number — even when your phone is turned off. You can continue to make calls from your phone with Call Forwarding activated.

To Activate Call Forwarding:

1. Press *** 7 2**.
2. Enter the area code and phone number to which your calls should be forwarded.
3. Press **TALK**. You will hear a tone confirming the activation of Call Forwarding.

To Deactivate Call Forwarding:

1. Press *** 7 2 0**.
2. Press **TALK**. You will hear a tone to confirm the deactivation.


Managing Messaging

In This Section


- ▶ **Setting Up Voicemail**
 - ▶ **Knowing When You Have Messages**
 - ▶ **Message Types**
 - ▶ **Retrieving Your Voicemail Messages**
 - ▶ **Clearing the Voicemail Message Icon**
 - ▶ **Sending Web Messages**
 - ▶ **New Web Messages**
 - ▶ **Displaying Web Messages**
 - ▶ **Erasing Individual, All or All Old Sprint PCS Web Messages**
 - ▶ **Classifying Sprint PCS Web Messages**
 - ▶ **Sprint PCS Wireless Web Update Options**
 - ▶ **New Web Alert**
 - ▶ **Displaying Web Alert**
 - ▶ **Viewing the Browser Information**
 - ▶ **Adding Preset Messages**
-

Your Sprint PCS Phone™ is always working to help you stay connected—even when you're unavailable. With three types of messaging, you can depend on being notified of important information. This section steps you through the messaging functions available on your Sprint PCS Phone.

Tip:

You can reply to a message by pressing  while the body of the message is displayed.

Tip:

When you are roaming off the Sprint PCS Network, you may not receive notification of new voicemail messages. It is recommended that you periodically check your voicemail by dialing 1 + area code + your Sprint PCS Phone Number. When your voicemail box answers, press  and enter your pass code.

Note:


Sprint PCS Wireless Web services may not be available in certain Affiliate areas.

Setting Up Voicemail

The first thing you'll want to do after activating your phone is to set up your voicemail. See Section 1 page 14 for instructions.

Knowing When You Have Messages

There are several ways your Sprint PCS Phone alerts you of new messages:

- ▶ By displaying a message on display screen.
- ▶ By playing the assigned melody type.
- ▶ By flashing LED.
- ▶ By displaying new message icon  at the top of display screen.

If you have received multiple messages, the number of unread messages is displayed on the screen along with the number of messages waiting.

Message Types

There are three types of messaging features available from your Sprint PCS Phone's menu. You can receive voicemail, Sprint PCS Web Messages (also known as page/text or SMS messages) and Sprint PCS Web Alerts (also known as Browser messages) as long as your phone has enough memory locations to store them.

- ▶ **Voicemail** automatically captures calls when you can't answer your phone or it is turned off. The voicemail system sends a notification to your phone when you have new voice messages or numeric pages.

- ▶ **Web Messages** include Sprint PCS Wireless Web Messages,* Sprint PCS Wireless Web Updates* and alerts that notify you of new Sprint PCS Wireless Web MailSM*. (For more information, see “Sending Web Messages” on page 71 or “Signing up for Sprint PCS Wireless Web Updates” on page 158.)
- ▶ **Web Alerts** let you know when you receive Sprint PCS Wireless Web Short MailSM* or an AOL Instant Message*. (For more information on each feature, see “Using Sprint PCS Wireless Web Short Mail” on page 155-XX or “Using AOL Instant Messenger Service” on page 153-XX.)

*You may need to subscribe to the Sprint PCS Wireless Web to use these features, depending on your service plan.

Retrieving Your Voicemail Messages

You can review your messages directly from your Sprint PCS Phone or from any other touch-tone phone. To dial from your Sprint PCS Phone, you can either speed dial your voicemail box or use the menu keys.

Using One-Touch Message Access:

1. From the Standby mode, press and hold **1**. Follow the system prompts.
- ▶ When you have a voicemail notification, you can access to the message by pressing **TALK**.

Tip:

Your phone accepts messages even when it is turned **off**. However, you are only notified of new messages when your phone is turned **on**.

Tip:

You are charged for airtime minutes when you are accessing your voicemail from your Sprint PCS Phone.

Using the Menu Keys on Your Sprint PCS Phone to Access Your Messages:

1. From the Standby mode, press **Menu** to display the main menu.
2. Highlight **Voicemail** and press **OK**.
3. Highlight **Call Voicemail** and press **OK**.
4. Press **TALK**.

Using a Phone Other Than Your Sprint PCS Phone to Access Your Messages:

1. Dial your Sprint PCS Phone Number.
2. When your voicemail box answers, press ***6**.
3. Enter your pass code.

Clearing the Voicemail Message Icon

Your phone may temporarily continue to display the icon after you have checked your voicemail messages.

To clear the icon from the display screen:

1. From the Standby mode, press **Menu** to display the main menu.
2. Highlight **Voicemail** and press **OK**.
3. Highlight **Clear Count** and press **OK**.
4. Highlight **Yes** and press **OK**.

Sending Web Messages

Numeric Pages

Callers can send a numeric page to your phone when they reach your voicemail box. Numeric paging to a Sprint PCS Phone comes at no additional charge on any service plan that includes Sprint PCS Voicemail.

Sprint PCS Wireless Web Messages

There are three ways to send a Sprint PCS Wireless Web Message to a Sprint PCS Phone:

- ▶ E-mail (your phone number@messaging.sprintpcs.com).
- ▶ Through the Sprint PCS Web site — www.sprintpcs.com. Select the wireless web messaging link.
- ▶ Using messaging software.

Sprint PCS Wireless Web Updates

To have Sprint PCS Wireless Web Updates automatically sent to your phone, see “Signing up for Sprint PCS Wireless Web Updates” on page 158.

New Web Messages

When you receive a new Web Message, your phone notifies you and (TBA)

Web Message Storage

Your Sprint PCS Phone can store up to XXX Web Messages.

(TBA)

Note:

The numeric paging option for your Sprint PCS Phone must be turned on for your phone to receive pages. This option can be set by entering your voicemail feature options.

Displaying Web Messages

To display a Web Message from the message notification alert, see “New Web Messages” on page 71.

To display a Web Message from the main menu:

(TBA)

Web Message Options

After you display a Web Message, press to display Web Message options. To select an option, highlight it and press .

(TBA)

Prepending a Phone Number from a Web Message

After you display a Sprint PCS Web Message that contains call back number, press to display message options.

If you happen to be outside your local area code and need to add a prefix to a phone number:

(TBA)

Extracting Phone Number or Email/Web Address from a Web Message

After you display a Sprint PCS Web Message, press to display message options.

To extract a phone number contained in the message:

(TBA)

Adding a Folder To the Sprint PCS Web Message

When the message contains any word of X to XX letters, you can automatically have the message field to a defined folder.

(TBA)

If you want to set optional feature to the added folder:

(TBA)

Moving a Sprint PCS Web Message Into the Other Folder

After you display a Sprint PCS Web Message, press to display message options. You need at least one defined folder.

If you want to move the message into another folder:

(TBA)

Changing the Displaying Font Size of a Sprint PCS Web Message

After you display a Sprint PCS Web Message, press to display message options.

To adjust the displaying font size:


(TBA)

Note:

If ?? user defined folders exist, "Add Folder" menu disappears.

Erasing Individual, All or All Old Sprint PCS Web Messages

To erase a message:

1. After you display a Sprint PCS Web Message, press  to display message options.

(TBA)

Classifying Sprint PCS Web Messages

Your Sprint PCS Phone allows you to classify received messages into ?(How many?) User-defined Folders. If new messages contain the keyword, set by you, they are stored into the folder. You can store up to ? (How many?) messages.

To create a folder from the folder list display:

(TBA)

- If you want to set optional feature to the added folder:

(TBA)

Sprint PCS Wireless Web Update Options

To have Sprint PCS Wireless Web Updates automatically sent to your phone, see "Signing up for Sprint PCS Wireless Web Updates" on page 158.

After you display a Sprint PCS Wireless Web Update, press the appropriate Soft Key that are changed, depending on each URL, to display Sprint PCS Wireless Web Update options. Follow the system prompts to progress as needed.

New Web Alert

When you receive a new Web Alert, your phone notifies you and displays the following options.

(TBA)

Displaying Web Alert


You are notified of new Web Alerts by the  icon.

To display an alert from the main menu:

(TBA)

Viewing the Browser Information

To view the Browser information:

1. In the Messaging menu, highlight **BrowserProfiles** and press .

(TBA)

Adding Preset Messages

You can use the procedure below to add a new preset message.

(TBA)

Using Your Internal Phone Book

In This Section

- ▶ **Saving New Entries**
 - ▶ **Finding Internal Phone Book Entries**
 - ▶ **Dialing from an Internal Phone Book Memory Location**
 - ▶ **Editing the Internal Phone Book**
 - ▶ **Erasing Stored Entries**
 - ▶ **Assigning Names to Internal Phone Book Groups**
 - ▶ **Speed Dialing**
 - ▶ **Speed Dialing Directly from Phonebook Memory Numbers**
 - ▶ **4-Digit, 5-Digit Dialing**
 - ▶ **Dialing Sprint PCS Service**
-

Now you know the basics that help make it easier to stay in touch with people and information. This section helps you make the most of your contacts and use your time more effectively when you're trying to connect with the important people in your life.

Saving New Entries

Your Sprint PCS Phone can store up to 200 Internal Phone Book entries. Phone Book entries can store up to a total of 1,000 phone numbers and the entry's name can contain 48 characters.

To save a new entry:

1. From the Standby mode, enter the phone number you want to save.
2. Press **Options** to display the option menu.
3. Highlight **Save Phone #** and press **OK**.
4. Highlight the appropriate phone type and press **OK**.
5. Highlight **Name** and press **OK**.
6. Enter a name and press **Save**. See pages 54-64 for entering method.
7. Select your desired category and press **OK**.
8. Enter the details and press **Save**. (See “Items that Can Be Stored in the Internal Phone Book” on page 79.)
9. Press **Save**.

OR

1. Move the cursor key right to display the Phone Book menu.
2. Highlight **Add New Entry** and press **OK**.
3. Highlight **Name** and press **OK**.
4. Enter a name, and press **Save**.
5. Highlight **Phone #1** and press **OK**.

6. Enter the phone number and press **Save**.
7. Highlight the appropriate phone type and press **OK**.
8. Select your desired category and press **OK**.
9. Enter the details and press **Save**. (See “Items that Can Be Stored in the Internal Phone Book” below.)
10. Press **Save**.

Items that Can Be Stored in the Internal Phone Book

You can store the following items in the Internal Phone Book:

- ▶ **Name:** Stores a name.
- ▶ **Phone #1—#5:** Used to store up to 5 phone numbers.
- ▶ **Phone Type:** Once you have stored a phone number, you can select Other, Home, Office, Mobile, Fax, or Data as the Phone Type. You can also switch between Normal Phone Type and Priority Phone Type by pressing Soft Key right. When you are making a call from a Phone Book that contains multiple stored phone numbers, this function calls the number set as the Priority number.
- ▶ **Email:** Stores an e-mail address.
- ▶ **Email Type:** Once you have stored an e-mail address, you can select Other, Home, Office, or Mobile as the Email Type.
- ▶ **Group:** You can allocate entries to groups. This makes entry retrieval easier by classifying the

Tip:

- You can include pauses in a phone number. (See “Dialing Options” on page 39).
- If you store an entry in the Internal Phone Book when Secret Mode is set to ON, the entry is stored as secret data. (See “Setting the Secret Mode” on page 113).

Tip:

If you enter “*”, the lowest available number is set as in that digit position.

Phone Book entries. You can assign any name you like to a group. (See “Assigning Names to Internal Phone Book Groups” on page 86).

- ▶ **Memory #s:** Stores a 3-digit memory number between 000 and 199. When you store an entry in the Phone Book, the lowest available number is displayed. Memory numbers are a useful way to make calls and search for Phone Book entries.
- ▶ **Address:** Stores an address (up to 80 characters).
- ▶ **Address Type:** Once you have stored an address, you can select Other, Home, or Office as the Address Type.
- ▶ **Memo:** Stores a memo (up to 80 characters) for a Phone Book entry with a memory number between 000 and 099.
- ▶ **URL:** Stores a URL (up to 128 characters).
- ▶ **Blood Type:** Stores a blood type.
- ▶ **Birthday:** Stores a birthday. Enter all the digits.
- ▶ **Image:** Pastes image stored in Downloads.
- ▶ **Melody Type:** Stores a melody type. Selecting Default sets the default melody type. Selecting Personal allows you to store a melody type of your choice. (See “Selecting Melody Types” on page 94).
- ▶ **Melody Tempo:** The melody tempo can only be set when you have stored a melody type for which melody tempos can be specified. (See “Selecting Melody Types” on page 94).
- ▶ **Blink Pattern:** Stores a blink pattern. Selecting Default sets the default blink pattern. Selecting

Personal allows you to store a blink pattern of your choice. (See “Changing the Illumination Settings” on page 103).

- **Bright Speed:** The bright speed can only be set when you have stored a blink pattern for which bright speeds can be specified. (See “Changing the Illumination Settings” on page 103).

Finding Internal Phone Book Entries

There are several ways to display your Internal Phone Book entries.

Follow the steps outlined in the sections below to display entries from the Internal Phone Book menu.

Finding Names

You can review all the entries stored in your Internal Phone Book or find an entry quickly by following these simple steps:

1. Move the cursor key right to display the Phone Book menu.
2. Highlight **Find Name** and press **OK**.
3. Enter the first letters of the name to display the Phone Book list entries that start with the entered letters.

or

Press **Find** or move the cursor key upward or downward to display the list of all entries.

4. Highlight your desired entry by scrolling and press **OK**.

Tip:

You can search the Internal Phone Book entries even during a call.

Finding Groups

To find an Internal Phone Book entry by its group:

1. Move the cursor key right to display the Phone Book menu.
2. Highlight **Find Name** and press **OK**.
3. Press **Options**.
4. Highlight **Search Method** and press **OK**.
5. Highlight **Find Group** and press **OK**.
6. Move the cursor key upward or downward to highlight your desired group and press **Find**.

or

Enter the group number and press **Find**.

7. Highlight your desired entry by scrolling and press **OK**.

Finding Memory #s

To find an Internal Phone Book entry by its memory number:

1. Move the cursor key right to display the Phone Book menu.
2. Highlight **Find Name** and press **OK**.
3. Press **Options**.
4. Highlight **Search Method** and press **OK**.
5. Highlight **Find Memory #s** and press **OK**.
6. Enter the memory number of your desired entry.

or

Press **[Find]** or move the cursor key upward or downward to display the list of all entries and highlight your desired entry by scrolling.

7. Press **[OK]**.

Options Available While Searching

The following options are available while searching for Phone Book entries. Press **[Options]** to display the option menu, highlight one of the options, then press **[OK]**.

- ▶ **Search Method:** Changes the search method to Find Name, Find Group, or Find Memory #s.
- ▶ **Add New Entry:** Adds a new Phone Book entry. (See “Saving New Entries” on page 78)
- ▶ **Secret Mode:** Sets the Secret Mode. (See “Setting the Secret Mode” on page 113.)
- ▶ **Edit Group:** Appends a group name. (See “Assigning Names to Internal Phone Book Groups” on page 86).
- ▶ **Count Entries:** Shows the number of entries stored in the Phone Book and the remaining number of entries that can be stored in the Phone Book.
- ▶ **Symbols** to enter symbols.

Options After a Phone Book Search

When you display an Internal Phone Book list, highlight your desired entry and press **[Options]**. Then highlight one of the options and press **[OK]**.

- ▶ **Call:** Dials the phone number. (If multiple phone numbers are stored, the phone number set as the Priority number is called.)
- ▶ **Email:** Sends an E-mail.
- ▶ **Send Pbsignal:** Sends the phone number.
- ▶ **Edit Entry:** Edits the entry (See “Editing the Internal Phone Book” on page 85).
- ▶ **Erase One:** Erases the entry (See “Erase an Entry” on page 86).
- ▶ **Erase All:** Erases all the entries. (See “Erase All Entries” on page 86).
- ▶ **Make vCard:** Stores Internal Phone Book data in a data folder. Data stored in a data folder can be attached to e-mail messages or sent to a computer, etc. (See “Managing Data” on page 144).
- ▶ **Speed Dial #s:** Registers a stored name or phone number as a Speed Dial entry. (See “Speed Dialing” on page 87).
- ▶ **Count Entries:** Shows the number of entries stored in the Phone Book and the remaining number of entries that can be stored in the Phone Book.

Displaying Phone Book Entry Details

You can use this procedure to view the details of stored entries that are too long to fit on one line.

1. After retrieving the Phone Book entry, move the cursor key upward or downward to select the entry you want to view the details for.
2. Press .

Note:

You can view Phone Book entry details during a call, but images cannot be displayed.

3. Highlight the desired item and press **OK**.

Dialing from an Internal Phone Book Memory Location

You can use the procedure below to make a call directly from the Phone Book.

To make a call from the Phone Book:

1. Search the Phone Book and move the cursor key upward or downward to highlight the entry you want to call.

or

Search Phone Book and display the details screen for the Phone Book entry you want to call.

2. Press **TALK**.

Editing the Internal Phone Book

You can use the procedure below to change the information stored in the Phone Book.

To edit the Phone Book:

1. Search the Phone Book and then move the cursor key upward or downward to highlight the entry you want to edit.

or

Search the Phone Book and display the details screen for the Phone Book entry you want to edit.

2. Press **Options**.
3. Highlight **Edit Entry** and press **OK**.
4. Edit the Phone Book entry. (See “Saving New Entries” on page 78).

Tip:

If you do not press any keys for a few seconds while an item is selected, the details of the entry that will not fit on one line are displayed in the Preview window.

Erasing Stored Entries

There are 2 ways to delete Phone Book entries.

Erase an Entry

To erase an entry from your Internal Phone Book:

1. Display the details screen for the Phone Book entry you want to delete.
2. Press **[Options]** to display the option menu.
3. Highlight **Erase One** and press **[OK]**.
4. Highlight **Yes** and press **[OK]**.

Erase All Entries

To erase all entries from your Internal Phone Book:

1. Display any details screen for the Phone Book entry.
2. Press **[Options]** to display the option menu.
3. Highlight **Erase All** and press **[OK]**.
4. Highlight **Yes** and press **[OK]**.

Assigning Names to Internal Phone Book Groups

You can assign a name of your choice to each of the Phone Book groups numbered 03 to 20.

To assign a group name:

1. Move the cursor key right to display the Phone Book menu.
2. Highlight **Group Name** and press **[OK]**.
3. Highlight your desired group number and press **[OK]**.

4. Enter or edit the name and press . See pages XX-XX for entering method.

Speed Dialing

With this feature you can dial phone numbers stored under keys 2 to 9 with one key press.

Storing Speed Dial Numbers

To store a speed dial number:

1. Move the cursor key right to display the Phone Book menu.
2. Highlight **Speed Dial #s** and press .
3. Highlight your desired number and press .
4. Enter a name and press .
5. Enter a phone number and press .

OR

1. Move the cursor key right to display the Phone Book menu.
2. Highlight **Speed Dial #s** and press .
3. Highlight your desired number and press .
4. Highlight **From PhoneBook** and press .
5. Search the Phone Book.
6. Highlight your desired phone number and press .

Using Speed Dial Numbers

To use speed dial:

1. From the Standby mode, press and hold the appropriate key that corresponds to the memory location for approximately two seconds.

OR

1. From the Standby mode, press the appropriate key, and then press **TALK**.

Speed Dial Options

Display a list of the speed dial numbers, press **Options** and highlight one of the options, then press **OK**.

- ▶ **Erase One** to erase the speed dial number.
- ▶ **Erase All** to erase all speed dial numbers.
- ▶ **From PhoneBook** to store the entry from the Phone Book.

Speed Dialing Directly from Phonebook Memory Numbers

You can use Speed Dial to call phone numbers stored under Phone Book memory numbers 00 to 91 just by entering the last 2 digits of the memory number.

To make a call using Speed Dial:

1. Enter a memory number and press **TALK**.

OR

1. When you enter the memory number, press and hold the 2nd digit.

4-Digit, 5-Digit Dialing

Enter four or five digits to dial the phone number in your Internal Phone Book that ends with the four or five digits you entered.

To use 4-Digit, 5-Digit Dialing:

1. Dial the last four or five digits of an Internal Phone Book entry's phone number and press

TALK.

Dialing Sprint PCS Service

You can quickly and easily call one of the services provided by Sprint by simply selecting the Service Call option.

To dial a service:

1. Move the cursor key right to display the Phone Book menu.
2. Highlight **Service Calls** and press **OK**.
3. Highlight **Customer Care**, **Dir Assist**, **Prepaid**, **Road Assist** or **Account Info** and press **OK**.
4. Press **TALK**.

Note:

4-Digit, 5-Digit Dialing dials the first number in your Internal Phone Book that matches the four or five digits.

Changing Your Phone's Settings

In This Section

- ▶ **Changing Ringer Volume**
 - ▶ **Changing Alarm/Schedule Volume**
 - ▶ **Changing Key Volume**
 - ▶ **Changing Wakeup Tone**
 - ▶ **Changing Receiver Volume**
 - ▶ **Selecting Melody Types**
 - ▶ **Setting Alerts**
 - ▶ **Changing Your Standby Mode Display**
 - ▶ **Changing Display Color**
 - ▶ **Changing the Contrast**
 - ▶ **Changing the Animation**
 - ▶ **Changing the Backlight Settings**
 - ▶ **Changing the Greeting**
 - ▶ **Setting the Sleep Mode**
 - ▶ **Changing the Clock Size**
 - ▶ **Changing the Illumination Settings**
 - ▶ **Setting the Location Information**
 - ▶ **Changing the Menu Language**
 - ▶ **Setting the Ringer to Silent or Reduced Volume When Taking the Phone Out of Your Bag**
 - ▶ **Changing the Environment Mode Setting Name**
-

This section describes how you can change your phone's settings to best suit your requirements. Take a few moments to review these options and adjust or add settings that are right for you.

Tip:

You can change the ringer volume in the Standby mode or while ringing, by moving the cursor key upward or downward.

Note:

Sound settings can be set independently in the Environment and Normal mode, and are not available in the Silent mode.

Changing Ringer Volume

To change the ringer volume:

1. From the Standby mode, press the center of the cursor key to display the top menu.
2. Select the **Settings** icon and press .
3. Highlight **Sounds** and press .
4. Highlight **Volume** and press .
5. Highlight **Ringer** and press .
6. Move the cursor key upward or downward to select your desired volume level and press .

Changing Alarm/Schedule Volume

To change the alarm/schedule volume:

1. From the Standby mode, press the center of the cursor key to display the top menu.
2. Select the **Settings** icon and press .
3. Highlight **Sounds** and press .
4. Highlight **Volume** and press .
5. Highlight **Alarm/Schedule** and press .
6. Move the cursor key upward or downward to select your desired volume level and press .

Changing Key Volume

To change the key volume:

1. From the Standby mode, press the center of the cursor key to display the top menu.
2. Select the **Settings** icon and press .
3. Highlight **Sounds** and press .

4. Highlight **Volume** and press **OK**.
5. Highlight **Key Beep** and press **OK**.
6. Move the cursor key upward or downward to select your desired volume level and press **OK**.

Changing Wakeup Tone

You can change the volume of wakeup tone (sounds when you turn the phone on), with this feature.

1. From the Standby mode, press the center of the cursor key to display the top menu.
2. Select the **Settings** icon and press **OK**.
3. Highlight **Sounds** and press **OK**.
4. Highlight **Volume** and press **OK**.
5. Highlight **Wakeup Tone** and press **OK**.
6. Move the cursor key upward or downward to select your desired volume level and press **OK**.

Changing Receiver Volume

To adjust the receiver volume:

1. From the Standby mode, press the center of the cursor key to display the top menu.
2. Select the **Settings** icon and press **OK**.
3. Highlight **Sounds** and press **OK**.
4. Highlight **Volume** and press **OK**.
5. Highlight **Receiver** and press **OK**.
6. Move the cursor key upward or downward to select your desired volume level and press **OK**.



Tip:

You can change the receiver volume during a conversation, by moving the cursor key upward or downward.

Note:

Melody type settings can be set independently in the Environment and Normal mode, and are not available in the Silent mode.

Tip:











If you press  you can listen to the melody type highlighted. Move the cursor key upward or downward to listen to other melody types. Press  to make your selection.

Selecting Melody Types

Melody types help you identify incoming calls and messages. You can assign melody types to types of calls and types of messages.

Selecting Melody Types for Voice Calls

To select a melody type for voice calls so you can tell what kind of call is coming in by the melody:

1. From the Standby mode, press the center of the cursor key to display the top menu.
2. Select the **Settings** icon and press .
3. Highlight **Sounds** and press .
4. Highlight **Melody Type** and press .
5. Highlight **Voice Calls** and press .
6. Highlight one of items within **with Caller ID, No Caller ID** or **Roaming**.
7. Press .
8. Highlight **Melody** and press .
9. Highlight **Preset** or **Downloads** (if you have downloaded data) and press .
10. Highlight your desired melody type and press .
11. If you have chosen a melody type that allows for changing the tempo, highlight **Tempo** and press .
12. Highlight your desired melody tempo and press .

Selecting Melody Types for Voicemail/Messaging

To select a melody type for voice mails/Messaging:

1. From the Standby mode, press the center of the cursor key to display the top menu.
2. Select the **Settings** icon and press **OK**.
3. Highlight **Sounds** and press **OK**.
4. Highlight **Melody Type** and press **OK**.
5. Highlight **Voicemail** or **Messaging** and press **OK**.
6. Highlight **Melody** and press **OK**.
7. Highlight **Preset** or **Downloads** (if you have downloaded data) and press **OK**.
8. Highlight your desired melody type and press **OK**.
9. If you have chosen a melody type that allows for changing the tempo, highlight **Tempo** and press **OK**.
10. Highlight your desired melody tempo and press **OK**.

Setting Alerts

Your phone comes with the following two options to keep you aware of what's going on by sounding the alert.

- ▶ **Service** sets the alert to On or Off, to let you know when you are leaving a Sprint PCS Service area and starting to Roam.

Tip:

If you press **Play** you can listen to the melody type highlighted. Move the cursor key upward or downward to listen to other melody types. Press **OK** to make your selection.

- ▶ **Minute** sets a minute reminder that beeps every minute during a conversation. This helps you track your phone use.

To set the alerts:

1. From the Standby mode, press the center of the cursor key to display the top menu.
2. Select the **Settings** icon and press .
3. Highlight **Sounds** and press .
4. Highlight **Alerts** and press .
5. Highlight **Service** or **Minute** and press .
6. Highlight your desired option **ON** or **OFF** and press .

Changing Your Standby Mode Display

You can set the wallpaper in the Standby mode to an image you like.

1. From the Standby mode, press the center of the cursor key to display the top menu.
2. Select the **Settings** icon and press .
3. Highlight **Display** and press .
4. Highlight **Wallpaper** and press .
5. Highlight one of items from **OFF** (with no wallpaper), **Preset** or **Downloads** (if you have downloaded data).
6. Highlight your desired wallpaper and press .

Note:

If you press you can preview the wallpaper highlighted. Move the cursor key upward or downward to preview other wallpapers. Press to make your selection.

Changing Display Color

Three different display color settings are available.

To change the display color setting:

1. From the Standby mode, press the center of the cursor key to display the top menu.
2. Select the **Settings** icon and press .
3. Highlight **Display** and press .
4. Highlight **Color** and press .
5. Highlight your desired color and press .

Changing the Contrast

To change the contrast on the phone's display:

1. From the Standby mode, press the center of the cursor key to display the top menu.
2. Select the **Settings** icon and press .
3. Highlight **Display** and press .
4. Highlight **Contrast** and press .
5. Move the cursor key left or right to select your desired contrast and press .

Changing the Animation

This feature lets you change the animation for these options.

- ▶ **Screen Saver** sets a screen saver on the Standby mode display.
- ▶ **Start Up** sets an animation when turning the phone on.
- ▶ **Shut Down** sets an animation when turning the phone off.
- ▶ **Email (Send)** sets an animation for sending e-mail.
- ▶ **Email (Receive)** sets an animation for receiving e-mail.
- ▶ **Web Connection** sets an animation for web connection.

Note:

The screen saver starts 7 seconds after returning to the Standby mode and after another 3 minutes, your phone will enter the sleep mode.

Setting Screen Saver

To set a screen saver:

1. From the Standby mode, press the center of the cursor key to display the top menu.
2. Select the **Settings** icon and press .
3. Highlight **Display** and press .
4. Highlight **Animation** and press .
5. Highlight **Screen Saver** and press .
6. Highlight **OFF** (screen saver off), **Preset** or **Downloads** (if you have downloaded data) and press .

7. Highlight your desired screen saver and press **OK**.

Changing Start Up/Shut Down Animation

To set a start up/shut down animation:

1. From the Standby mode, press the center of the cursor key to display the top menu.
2. Select the **Settings** icon and press **OK**.
3. Highlight **Display** and press **OK**.
4. Highlight **Animation** and press **OK**.
5. Highlight **Start Up** or **Shut Down** and press **OK**.
6. Highlight your desired animation and press **OK**.

Changing Send E-mail/Receive E-mail/Web Connection Animation

Follow these steps:

1. From the Standby mode, press the center of the cursor key to display the top menu.
2. Select the **Settings** icon and press **OK**.
3. Highlight **Display** and press **OK**.
4. Highlight **Animation** and press **OK**.
5. Highlight one of items within **Email (Send)**, **Email (Receive)** or **Web Connection** and press **OK**.
6. Highlight **Preset** or **Downloads** (if you have downloaded data) and press **OK**.
7. Highlight your desired animation and press **OK**.

Tip:

If you press **Play** you can preview the screen saver highlighted. Move the cursor key upward or downward to preview other screen savers. Press **OK** to make your selection.

Tip:

If you press **Play** you can preview the animation highlighted. Move the cursor key upward or downward to preview other animations. Press **OK** to make your selection.

Changing the Backlight Settings

Setting the backlight for the display, cursor key and numeric buttons.

Setting the Backlight When Using E-mail, Web and Java

Set whether to have the backlight on continuously while using e-mail, the web, and JAVA applications.

Follow these steps:

1. From the Standby mode, press the center of the cursor key to display the top menu.
2. Select the **Settings** icon and press .
3. Highlight **Display** and press .
4. Highlight **Back Light** and press .
5. Highlight **Application** and press .
6. Highlight your desired option **Always ON** or **Always OFF** and press .

Changing the Bright Time

Set the backlight to light or not when you press a button. If you set it to ON, you can choose how long it will be lit, from 1 to 60 seconds.

Follow these steps:

1. From the Standby mode, press the center of the cursor key to display the top menu.
2. Select the **Settings** icon and press .
3. Highlight **Display** and press .
4. Highlight **Back Light** and press .
5. Highlight **Bright Time** and press .

Note:

Long backlight settings affect the battery's talk and standby times.

6. Highlight your desired option **1-60Sec** (ON) or **OFF** and press **OK**.
7. If you choose **1-60Sec**, enter a number from 1 to 60 for the length of time the backlight will stay lit and press **OK**.

Setting the Backlight Optical Sensor Control

This feature turns on the backlight, according to surrounding light levels.

Follow these steps:

1. From the Standby mode, press the center of the cursor key to display the top menu.
2. Select the **Settings** icon and press **OK**.
3. Highlight **Display** and press **OK**.
4. Highlight **Back Light** and press **OK**.
5. Highlight **Optical Sensor** and press **OK**.
6. Highlight your desired option **ON** or **OFF** and press **OK**.

Setting the Power Save

Using the Power Save function saves battery power by changing the brightness of the backlight and how long it stays lit.

Follow these steps:

1. From the Standby mode, press the center of the cursor key to display the top menu.
2. Select the **Settings** icon and press **OK**.
3. Highlight **Display** and press **OK**.
4. Highlight **Back Light** and press **OK**.

5. Highlight **Power Save** and press .
6. Highlight your desired option **ON** or **OFF** and press .

Changing the Greeting

To change the name displayed in the Greeting Area in the Standby mode:

1. From the Standby mode, press the center of the cursor key to display the top menu.
2. Select the **Settings** icon and press .
3. Highlight **Display** and press .
4. Highlight **Greeting** and press .
5. Highlight your desired option **User Name** or **Custom** and press .
6. If you chose **User Name**, press Again; if you chose **Custom**, enter the desired name and press .

Setting the Sleep Mode

This feature helps conserve your battery power by restricting the display in the Standby mode.

To set the sleep mode:

1. From the Standby mode, press the center of the cursor key to display the top menu.
2. Select the **Settings** icon and press .
3. Highlight **Display** and press .
4. Highlight **Sleep Mode** and press .
5. Highlight your desired option **ON** or **OFF** and press .

Changing the Clock Size

You can choose the clock size displayed on the Standby screen from among Large, Small or OFF (not displayed).

To change the clock size:

1. From the Standby mode, press the center of the cursor key to display the top menu.
2. Select the **Settings** icon and press .
3. Highlight **Display** and press .
4. Highlight **Clock Size** and press .
5. Highlight your desired clock size and press .

Changing the Illumination Settings

When receiving an incoming call, the back illumination of the phone blinks in seven colors to alert you. You can select from the following items to set how it blinks.

- ▶ **Blink Pattern** sets the blink pattern.
- ▶ **Bright Speed** sets how fast the illumination blinks.
- ▶ **Edit Pattern** enables you to create an original blinking pattern.

Changing the Blink Patterns

To change the blink pattern:

1. From the Standby mode, press the center of the cursor key to display the top menu.
2. Select the **Settings** icon and press .
3. Highlight **Display** and press .

4. Highlight **Illumination** and press .
5. Highlight **Blink Pattern** and press .
6. Highlight your desired blink pattern and press .

Changing the Bright Speed

To change the bright speed:

1. From the Standby mode, press the center of the cursor key to display the top menu.
2. Select the **Settings** icon and press .
3. Highlight **Display** and press .
4. Highlight **Illumination** and press .
5. Highlight **Bright Speed** and press .
6. Highlight your desired bright speed and press .

Editing the Blink Pattern

To edit your original illumination blink pattern:

1. From the Standby mode, press the center of the cursor key to display the top menu.
2. Select the **Settings** icon and press .
3. Highlight **Display** and press .
4. Highlight **Illumination** and press .
5. Highlight **Edit Pattern** and press .
6. Highlight an original pattern you wish to edit and press .

The color that will illuminate is displayed in a list from the top.

7. Move the cursor key upward or downward to select the color you want to change.
8. Move the cursor key left or right to select your desired color.
9. Repeat step 7-8. When finished editing, press **[OK]**.

Setting the Location Information

Enables the network to detect the location of your phone.

To activate this feature:

1. From the Standby mode, press the center of the cursor key to display the top menu.
 2. Select the **Settings** icon and press **[OK]**.
 3. Highlight **Location** and press **[OK]**.
 4. Scroll the display by moving the cursor key downward until **[OK]** is shown.
 5. Press **[OK]**.
 6. Highlight **ON** and press **[OK]**.
- To deactivate this feature, highlight **OFF** at step 6 above.

Changing the Menu Language

When you first turn your phone on, the menus are displayed in English.

To change the menu language to Spanish:

1. From the Standby mode, press the center of the cursor key to display the top menu.
2. Select the **Settings** icon and press **[OK]**.
3. Highlight **Others** and press **[OK]**.

Note:

This setting can be set independently in the Environment and Normal mode, and are not available in the Silent mode.

4. Highlight **Language** and press .

5. Highlight **Espan l** and press .

► To change back the language to English, highlight **English** at step 5 above.

Setting the Ringer to Silent or Reduced Volume When Taking the Phone Out of Your Bag

Your phone can automatically stop ringer or lower the volume when you take your phone out of your bag, the inner pocket of your jacket, or other dark places.

To activate this feature:

1. From the Standby mode, press the center of the cursor key to display the top menu.
2. Select the **Settings** icon and press .
3. Highlight **Others** and press .
4. Highlight **Optical Sensor** and press .
5. Highlight your desired setting from **OFF** (deactivate this feature), **Volume OFF** or **Volume Low** and press .

Changing the Environment Mode Setting Name

When you set the TPO Switch to the Environment mode, you can change the name of the mode displayed on the Standby and other screens. Also, the default settings change according to the name of the mode. (See “Using the TPO Switch” on page 30.)

1. From the Standby mode, press the center of the cursor key to display the top menu.
2. Select the **Settings** icon and press .
3. Highlight **Others** and press .
4. Highlight **Environment** and press .
5. Highlight your desired setting from **Meeting**, **Outdoor**, **Office** or **Private** and press .

Setting Your Phone's Security

In This Section

- ▶ **Accessing the Security Menu**
 - ▶ **Locking Your Phone**
 - ▶ **Changing Your Lock Code**
 - ▶ **Locking the Use of Web**
 - ▶ **Locking Mails**
 - ▶ **Restricting Calls**
 - ▶ **Storing Special Numbers**
 - ▶ **Setting the Secret Mode**
 - ▶ **Erasing the Entire Internal Phone Book**
 - ▶ **Resetting Your Phone**
-

By using the security setting on your Sprint PCS Phone™, you receive peace of mind without sacrificing flexibility. With several options available, you can customize your phone to meet your personal needs.

Accessing the Security Menu

You must enter your lock code to view the Security menu. The lock code consists of four digits, and the default code is “0000”.

To access the Security menu:

1. From the Standby mode, press the center of the cursor key to display the top menu.
2. Select the **Settings** icon and press .
3. Highlight **Security** and press .
4. Enter lock code. (Press to erase single digit.)

Digits are replaced by * on the display.

Locking Your Phone

When your phone is locked, you can only receive incoming calls or make calls to 911, Sprint PCS Customer Care or special numbers. All other functions of the phone are disabled.

To lock your phone:

1. From the Security menu, highlight **Lock Phone** and press .
2. Depending on your preference, highlight either **Lock Now** or **On Power-up**, and press .
- ▶ **Lock Now** to lock your phone immediately.
 - ▶ **On Power-up** to lock your phone every time the phone is turned on.
3. Press .

Unlocking Your Phone

To unlock your phone:

1. From the Locked display, press **UNLOCK**.
 2. Enter lock code.
- If you want to cancel the “On Power-up” setting, highlight **Unlocked** instead at the step 2 in “Locking Your Phone” previously.

Changing Your Lock Code

To change your lock code:

1. From the Security menu, highlight **Change Lock** and press **OK**.
2. Enter new lock code, “1234” for example.
3. Highlight **Yes** to set the code or **No** to redo from the step 2 above, and press **OK**.

Locking the Use of Web

Set your phone to prompt for your lock code before connecting to the Web.

To lock the use of Web:

1. From the Security menu, highlight **Lock Web** and press **OK**.
 2. Highlight **ON** and press **OK**.
- To enable again, highlight **OFF** at step 2 above.

Tip:

If you cannot recall your lock code, try using the last four digits of either your Social Security number or Sprint PCS Phone Number or try 0000. If none of these work, call Sprint PCS Customer Care at 1-888-211-4PCS(4727).

Note:
Restricted
incoming calls
are forwarded to
voice mail.

Locking Mails

Set your phone to prompt you for your lock code before using Mail functions (Messaging, Email). Messaging can still be received.

To lock mail function:

1. From the Security menu, highlight **Lock Mail** and press .

2. Highlight **ON** and press .

▶ To enable again, highlight **OFF** at step 2 above.

Restricting Calls

You can restrict which phone numbers you can receive calls from or dial.

To restrict calls:

1. From the Security menu, highlight **Limit Use** and press .

2. Highlight **Outgoing** or **Incoming**, and press .

3. Highlight your desired option and press .

▶ **Allow All:** You can make or receive all calls. (Deactivate this feature.)

▶ **PhoneBook only:** Only Phone Book entries are available to make or receive call.

▶ **Special # only:** Only three special number's entries are available to make or receive calls.

Storing Special Numbers

You can save three special numbers in addition to your Internal Phone Book entries (they can be the same number).

To add or replace a special number:

1. From the Security menu, highlight **Special #s** and press **[OK]**.
2. Highlight the entry number where you would like to store the number and press **[OK]**.
3. Enter the phone number.

or

Press **[Options]**, then highlight **Phone Book** and press **[OK]**. Using the same procedure to search the phonebook and highlight the phone number, then press **[OK]**.

4. Press **[OK]**.

- To erase the registered number, highlight it and press **[Erase]** at step 2 above.

Setting the Secret Mode

You can register numbers you wish to keep secret. Phone numbers registered in the Phone Book while the Secret Mode is On cannot be accessed when the phone is switched to the normal mode.

Once you switch back to the Secret Mode, you can access the Secret numbers.

1. From the Security menu, highlight **Secret Mode** and press **[OK]**.

Tip:

You can switch to the Secret Mode while searching in the Phone Book by pressing **[Options]** → **Secret Mode** → and entering the Lock code.

2. Highlight **ON** to switch to Secret Mode or **OFF** to cancel it and press .

Erasing the Entire Internal Phone Book

This function erases the Internal Phone Book and all Special#s data.

To erase the entire Internal Phone Book:

1. From the Security menu, highlight **Erase Phone Book** and press .
 2. If you're sure you want to erase your Phone Book, highlight **OK** and press .
- ▶ To cancel, highlight **Cancel** at step 2 above.

Resetting Your Phone

Caution: This function erases all data in your phone and restores all your settings to the factory defaults.

To reset your phone:

1. From the Security menu, highlight **Reset Phone** and press .
 2. If you're sure you want to reset your phone, highlight **OK** and press .
- ▶ To cancel, highlight **Cancel** at step 2 above.

Using the Voice Dialing Feature of Your Sprint PCS Phone

In This Section

- ▶ **Using Voice-Activated Dialing**
 - ▶ **Programming Voice Dial Tag to Your Phone**
 - ▶ **Reviewing Voice Dialing Entries**
 - ▶ **Erasing Voice Dialing Entries**
-

This section explains the Voice Dialing feature of your phone. The easy-to-follow instructions explain how to program voice dial tag and make calls.

Note:

Record Voice Dial tags in a quiet environment and without the aid of an accessory (for example, a headset).

Using Voice-Activated Dialing

You can use a Voice Dial tag to automatically dial a phone number in your Internal Phone Book.

To use a voice Dial tag to call a phone number:

1. From the Standby mode, press **TALK**.
2. Follow the voice prompts, and recite the entry's Voice Dial tag into your phone's microphone.

Programming Voice Dial Tag to Your Phone

You can program up to 20 Voice Dial tags.

To program a voice dial tag:

1. From the Standby mode, press **Menu** to display the menu.
2. Highlight **Voice Dial** and press **OK**.
3. Highlight **Program** and press **OK**.
4. The phone will prompt you to say the name you want to program.
Wait for the beep and then say the name.
5. Respond to the prompt by repeating the name after the beep.
6. Enter a phone number and press **SAVE**.

Reviewing Voice Dialing Entries

1. From the Standby mode, press **Menu** to display the menu.
2. Highlight **Voice Dial** and press **OK**.
3. Highlight **Review** and press **OK**.
4. Highlight the desired entry and press **OK**.
5. Starting with the selected entry, recorded names play in order out loud.

Erasing Voice Dialing Entries

To erase an individual Voice Dialing entry:

1. From the Standby mode, press **Menu** to display the menu.
2. Highlight **Voice Dial** and press **OK**.
3. Highlight **Review** and press **OK**.
4. Highlight the desired entry and press **OK**.
5. While the recorded name plays, press **Erase**.
6. Highlight **YES** and press **OK**.

To erase all Voice Dialing entry:

1. From the Standby mode, press **Menu** to display the menu.
2. Highlight **Voice Dial** and press **OK**.
3. Highlight **Erase All** and press **OK**.
4. Highlight **YES** and press **OK**.

Personal Information Management

In This Section

- ▶ **Managing Schedules**
 - ▶ **Using the Task List**
 - ▶ **Making a Note of a Phone Number During a Call**
 - ▶ **Using Your Sprint PCS Phone as a Wake-up Alarm**
 - ▶ **Using the Calculator**
-

Your Sprint PCS Phone™ has been equipped with several personal information management features to help you manage your busy lifestyle. These features turn your phone into a time management planner that helps you keep up with your contacts, schedules and commitments. You can also use your Sprint PCS Phone™ to manage data you have downloaded yourself, taking productivity to a whole new level.

Note:

If you are in a service area the time/date cannot be adjusted manually.

Managing Schedules

Use the Calendar to remind you of important events or calls you need to make. You can schedule up to 100 events.

Setting the Time/Date

In a no service area, it's necessary to set the actual time and date in order to use Calendar functions.

Time/Date settings are available from 12:00 AM, Jan 1, 1998 to 11:59 PM, Dec 31, 2097.

To set the Time/Date manually:

1. From the Standby mode, press **[Menu]** to display the main menu.
2. Highlight **PIM** and press **[OK]**.
3. Highlight **Clock Adjust** and press **[OK]**.
4. Using the numeric keys and cursor key, input the date and time. Press the Soft Key right to switch between AM and PM.
5. Press **[OK]**.

Setting Holidays

You can set up to 100 of your personal holidays. Holidays can be selected by date or day of the week. The dates/days registered as holidays are displayed in red.

To set a holiday:

1. From the Standby mode, press the center of the cursor key to display the top menu.
2. Press **[CLNDR]** to display the calendar display.

3. Press **Options** to display the option menu.
4. Highlight **Holiday ON/OFF** and press **OK**.
5. To select a date, highlight the date and press **Options**.
To select a day of the week, press **Options**.
6. When setting a date, highlight **Oneday** and press **OK**.
When setting a day of the week, highlight the desired day of the week and press **OK**.
7. Press **Back** to finish the settings and return to the calendar display.

Resetting Holidays

To reset a date registered as a holiday:

1. From the calendar display, press **Options** to display the option menu.
2. Highlight **Holiday ON/OFF** and press **OK**.
3. Highlight the date you wish to reset, and press **Options**.
4. Highlight **Oneday** or the day of the week, and press **OK**.

To reset all registered holidays:

1. From the calendar display, press **Options** to display the option menu.
2. Highlight **Reset Holiday** and press **OK**.
3. Highlight **Yes** and press **OK**.

Tip:

When Secret Mode is set to ON, events added to the schedule are stored as secret data. (See "Setting the Secret Mode" on page 113.).

Adding an Event to the Schedule

Your Scheduler helps organize your time and reminds you of important events.

To add an event:

1. From the Standby mode, press the center of the cursor key to display the top menu.
2. Press **CLNDR** to display the calendar display.
3. Highlight the day you want to add an event to.
4. Press **Options** to display the option menu.
5. Highlight **Add New Entry** and press **OK**.
6. Highlight one of the following event details, and press **OK**.
 - ▶ **Summary:** (Input required) Enter a summary of your event (up to 40 characters). Type and Frequency can be selected.
 - ▶ **Start Time:** Schedule the start day and time. All day can be selected instead of a Start time. The default Start time setting is the date highlighted on the calendar display and 12:00 am.
 - ▶ **End Time:** Schedule the end day and time. The default End time is the day following the date highlighted on the calendar display and 12:00 am.
 - ▶ **Alarm:** Edit the alarm time (number of minutes the alarm sounds before an event starts) and select the melody type. You can also switch the Alarm OFF. The default alarm time is 15 minutes before an event.

- ▶ **Frequency:** Repeating an event. Select One Time, Daily, Weekly, Monthly or Yearly.
- ▶ **Place:** Enter the name of the place where the event will be held (up to 40 characters).
- ▶ **Details:** Enter details of your event (up to 80 characters).
- ▶ **URL:** Enter the URL of a web page related to the event (up to 128 characters).

7. Press **Save** to schedule the event.

When the Time for a Scheduled Event is Reached

There are several ways your Sprint PCS Phone alerts you of scheduled events:

- ▶ The Alarm Melody sounds.
- ▶ An animated cartoon is displayed.
- ▶ The backlight lights and the event details are displayed.

To stop the alarm tone:

Press **Stop**, **TALK**, **END/0**, or any of the numeric keys.

- ▶ Press **Web** to browse the displayed URL while the alarm sounds.

Viewing Events

To view your scheduled events:

1. From the Standby mode, press the center of the cursor key to display the top menu.
2. Press **CLNDR** to display the calendar display.

Tip:

- Even if you switch the Spint PCS Phone off, the phone will be turned on and the alarm sounds. During a call or while a call is coming in, the alarm operates when the call ends.
- The alarm tone automatically stops after 60 seconds.

Tip:

You can change the calendar display from a monthly display to a weekly display. From the calendar display, press **Options** → Highlight **Display WEEK** → Press **OK**. To return to the monthly display, from the calendar display, press **Options** → Highlight **Display MONTH** → Press **OK**.

3. Highlight the day you want to view, and press

Move.

The event list for that day appears.

4. Highlight one of the events from the list, press

OK.

5. Highlight the item you want to view, and press

OK.

- ▶ To browse stored URLs, press **Options** instead of **OK** in step 4, highlight **URL Jump** and then press **OK**.

Editing Event Items

To change an event:

1. From the event list display, highlight the event you want to edit.
2. Press **Options** to display option menu.
3. Highlight **Edit** and press **OK**.
4. Highlight the item you want to edit and press **OK**, then edit the item.
5. Press **Save**.
6. Highlight **Yes** and press **OK**.

Erasing Events

To erase an event:

1. From the Event List display, highlight the event you want to erase and press **Options**.
2. Highlight **Erase One**, **Erase Past** or **Erase All** and press **OK**.

3. Highlight **Yes** and press **OK**.

- ▶ **Erase One:** Erases the selected event.
- ▶ **Erase Past:** Erases the selected past events. When you enter a date, events on that and previous dates are erased.
- ▶ **Erase All:** Erases all the events.

Schedule Options

On monthly calendar, weekly calendar, event list and event details displays, you can display the following menu options by pressing **Options**. (Menu options vary for each display.)

- ▶ **Add New Entry:** Adds a new event. (See “Adding an Event to the Schedule” on page 122.)
- ▶ **Display WEEK:** Changes the calendar display to a weekly display.
- ▶ **Display MONTH:** Changes the calendar display to a monthly display.
- ▶ **Edit:** Edits the details of the event.
- ▶ **Erase One:** Erases the selected event.
- ▶ **Erase Past:** Erases the selected past event.
- ▶ **Erase All:** Erases all the events.
- ▶ **Holiday ON/OFF:** Sets holiday ON and OFF.
- ▶ **Reset Holiday:** Resets all registered holidays.
- ▶ **Make vCalendar:** Stores selected events or all the events in a data folder.
- ▶ **Attach Email:** Sends an e-mail with the selected event as an attachment.

Tip:

When you use **Erase Past** or **Erase All**, you do not need to select the events to be erased.

- ▶ **Make shortcut?:** Makes a shortcut to the calendar display.
- ▶ **Starts Tasklist:** Starts up the Task List function.
- ▶ **URL Jump:** Connects to the stored URL.

Using the Task List

You can use the Task List to manage tasks you have to perform.

Storing a New Task

Your Sprint PCS Phone can store and manage up to 50 Task items.

To add an entry to your Task List:

1. From the Standby mode, press **Menu** to display the main menu.
2. Highlight **PIM** and press **OK**.
3. Highlight **Task List** and press **OK**.
4. Press **Options** to display the option menu.
5. Highlight **Add New Entry** and press **OK**.
6. Highlight **Summary** and press **OK**.
7. Enter summary (up to 40 characters) and press **Save**.
8. Select summary type of the Task and press **OK**.
9. Highlight **Limit Time** or **Alarm** and press **OK**.
 - ▶ **Limit Time:** Enter the limit time for the Task.
 - ▶ **Alarm:** Sets the time when the alarm goes off and the alarm tone used.
10. Press **Save**.

Recording the Completion of a Task

To tell your Sprint PCS Phone that you have completed a task:

1. From the Task List display, highlight the completed task and press **[OK]**.
2. Press **[Done]**.
or
Highlight **Undone** and press **[OK]**.
3. Enter the date and time when you completed the task and then press **[Save]**.
▶ Press the Soft Key right to switch between AM and PM.

When the Time Limit for a Task is Reached

There are several ways your Sprint PCS Phone alerts you of stored tasks for which completion has not been recorded by the specified Limit Time.

- ▶ By displaying task's summary and limit time.
- ▶ By illuminating the backlight on the LCD.
- ▶ If an alarm was set, the alarm sounds and the Sprint PCS Phone vibrates at the specified time.

To clear the Summary display:

Press **[OK]**, **[TALK]**, **[END/⓪]**, or any of the numeric keys.

Displaying Task Details

You can view the details of a stored entry simply by selecting the desired entry in the Task List.

Tip:

- Even if you switch the Sprint PCS Phone off, the phone will be turned on and the summary displays. During a call or while a call is coming in, the summary is displayed when the call ends.
- The summary automatically disappears after 60 seconds.

Tip:

If you do not press a key for a few seconds while an entry is selected, the details for that entry appear in the Preview window.

To view the task details:

1. From the Task List display, highlight the entry you want to view and press **OK**.
2. Highlight the desired item and press **OK**.

Editing Task Details

To change a Task item:

1. From the Task List display, highlight the entry you want to edit and press **OK**.
2. Press **Options**.
3. Highlight **Edit** and press **OK**.
4. Highlight the item you want to edit and press **OK**.
5. Edit the item and press **OK**.
6. Press **Save**.
7. Highlight **Yes** and press **OK**.

Changing the Task List Display Method

To change the way the Task List is displayed:

1. From the Task List display, press **Options**.
2. Highlight **Change Display** and press **OK**.
3. Highlight **Show All**, **Undone** or **Done** and press **OK**.
 - ▶ **Show All**: Shows all the tasks.
 - ▶ **Undone**: Shows only uncompleted tasks.
 - ▶ **Done**: Shows only completed tasks.

Erasing Tasks

To erase a task:

1. From the Task List display, highlight the item you want to erase and press **Options**.
2. Highlight **Erase One**, **Erase Done** or **Erase All** and press **OK**.
 - ▶ **Erase One**: Erases the selected task.
 - ▶ **Erase Done**: Erases only the completed tasks.
 - ▶ **Erase All**: Erases all the tasks.
3. Highlight **Yes** and press **OK**.

Task Options

When you display the Task list, highlight the desired entry and press **Options**. Then highlight one of the options and press **OK**.

- ▶ **Add New Entry**: Adds a new task. (See “Storing a New Task” on page 126)
- ▶ **Edit**: Edits the details of a task. (See “Editing Task Details” on page 128)
- ▶ **Change Display**: Changes the way the Task List is displayed. (See “Changing the Task List Display Method” on page 128.)
- ▶ **Erase One**: Erases the selected task. (See “Erasing Tasks” on page 129)
- ▶ **Erase Done**: Erases the completed tasks. (See “Erasing Tasks” on page 129)
- ▶ **Erase All**: Erases all the tasks. (See “Erasing Tasks” on page 129)

Tip:

When you use **Erase Done** or **Erase All**, you do not need to select the tasks to be erased.

Tip:

Scratch Pad is continually updated as new numbers are added to the beginning of the list and the oldest entries are removed from the bottom of the list.

- ▶ **Make vCalendar:** Stores an entry or all the entries in a data folder.
- ▶ **Attach Email:** Sends an e-mail with the selected entry as an attachment.
- ▶ **Make shortcut?:** Makes a shortcut to the Task List display.
- ▶ **Start Schedule:** Starts up the Schedule function.

Making a Note of a Phone Number During a Call

During a call, you can note down a phone number as a memo and store it in your Sprint PCS Phone. The Scratch Pad function can store up to 3 items.

Storing Information in the Scratch Pad

To record a phone number during a call:

1. During the call, press **[Options]**.
2. Highlight **Scratch Pad** and press **[OK]**.
3. Enter a phone number and press **[Save]**.

Viewing Scratch Pad Items

You can view a Scratch Pad memo simply by selecting the desired memo in the Scratch Pad list.

To view a Scratch Pad memo:

1. From the Standby mode or during a call, press **[Options]** to display the option menu.
 2. Highlight **Scratch Pad** and press **[OK]**.
 3. Highlight the entry you want to view and press **[OK]**.
- ▶ To call the highlighted entry, press **TALK**.

Scratch Pad Options

When you display a Scratch Pad list, highlight the desired entry and press **Options**. Then highlight one of the options and press **OK**.

- ▶ **Call:** Dials the recorded phone number.
- ▶ **Save Phone #:** Saves the recorded phone number in your Internal Phone Book. (See “Using Your Internal Phone Book” on page 77.)
- ▶ **Messaging:** Sends a message to the recorded phone number.
- ▶ **Prepend:** Adds a number to the beginning of the recorded phone numbers.
- ▶ **Erase One** to erase the entry.
- ▶ **Erase All** to erase all entries.

Using Your Sprint PCS Phone as a Wake-up Alarm

You can use your Sprint PCS Phone as a wake-up alarm. You can set the alarm to go off at the same time every day or at a set time on the same day every week. You can store up to 10 wake-up alarm settings.

Storing a New Alarm

To store a new alarm:

1. From the Standby mode, press **Menu** to display the top menu.
2. Highlight **PIM** and press **OK**.
3. Highlight **Alarm** and press **OK**.

4. Highlight the number of the new alarm setting you want to store and press **[OK]**.
5. Highlight **Entry** and press **[OK]**.
6. Highlight **Mode** and press **[OK]**.
7. Highlight **Date**, **Daily** or **Weekly** and press **[OK]**.
 - ▶ **Date:** The alarm sounds at the specified time and date. You must specify a date and time.
 - ▶ **Daily:** The alarm sounds at the specified time every day. You must specify a time.
 - ▶ **Weekly:** The alarm sounds on the specified day at the specified time every week. You must specify the day of the week and the time. You can specify more than one day of the week.
8. Highlight **Message**, **Alarm** or **Snooze** and press **[OK]**.
 - ▶ **Message:** Enter a message to be displayed when the alarm sounds (up to 128 characters).
 - ▶ **Alarm:** Sets the alarm melody type.
 - ▶ **Snooze:** Sets the Snooze function to ON or OFF.
9. Highlight **Save** and press **[OK]**.

Alarm Operation

There are several ways your Sprint PCS Phone alerts you when the specified time is reached.

- ▶ By sounding the alarm and vibrating.
- ▶ By illuminating the backlight on the LCD.
- ▶ By displaying the alarm animation.
- ▶ By displaying a message (if entered).

To stop the alarm tone:

Press **[Stop]**, **[Snooze]**, **TALK**, **END/⓪**, or any of the numeric keys. If the Snooze function is enabled, the alarm sounds 5 times at 5-minute intervals.

To cancel the Snooze function:

1. Press **[Snooze]** when alarm sounds.
2. Highlight **Yes** and press **[OK]**.
 - ▶ If you do not select **YES** or **NO** within 5 seconds the phone returns to the standby mode.

OR

1. Between snooze alarms, press the center of the cursor key.
2. Press **Ⓜ**.
3. Highlight **Yes** and press **[OK]**.

Canceling or Erasing an Alarm

To cancel or erase an alarm:

1. From the Alarm List display, highlight the entry you want to cancel or erase and press **[OK]**.
2. Highlight **Release** or **Erase** and press **[OK]**.

Using the Calculator

You can use your Sprint PCS Phone as a calculator.

To perform calculations:

1. From the Standby mode, press **[Menu]** to display the top menu.
2. Highlight **Calculator** and press **[OK]**.
3. Press the keys to perform calculations.

Tip:

- Even if you switch the Spint PCS Phone off, the phone will be turned on and the alarm sounds.
- The alarm tone automatically stops after 60 seconds.

Tip:

Canceling (releasing) an alarm does not erase the stored alarm settings.

0 — **9** : Enter numbers

Move the Cursor key up: \times (multiply)

Move the Cursor key down: \div (divide)

Move the Cursor key left: $-$ (subtract)

Move the Cursor key right: $+$ (add)

Press the Cursor key: $=$ (show calculation result)

Web key: $+/-$ (change the displayed number from $+$ to $-$ and vice-versa)

MSG key: Decimal point

Back key: Clear the displayed number. Press and hold to clear all the data.

% key: Show as a percentage.

T key: Show amount including tax (shows the tax-inclusive value for a specified tax rate).

Calculator Options

When you display the Calculator, press **Options** to highlight one of the options and then press **OK**.

► **Copy:** Copies the displayed number.

► **Tax Rate:** Changes the tax rate.

Experiencing Sprint PCS Wireless WebSM

In This Section

- ▶ The Sprint PCS Wireless Web
 - ▶ The Sprint PCS Wireless Web Browser
 - ▶ Launching the Sprint PCS Wireless Web Browser
 - ▶ Web Guard
 - ▶ Using the Sprint PCS Wireless Web Browser
 - ▶ Troubleshooting
 - ▶ MY Sprint PCS Wireless Web
 - ▶ Games
 - ▶ Using Sprint PCS Wireless Web Mail
 - ▶ Using AOL Instant Messenger Service
 - ▶ Using Sprint PCS Wireless Web Short Mail
 - ▶ Signing up for Sprint PCS Wireless Web Updates
 - ▶ Setting Up a Sprint PCS Wireless Web Connection
-

By now you've discovered the great features that come with your Sprint PCS Phone[™]. Now it's time to experience the Sprint PCS Wireless Web. Let the adventure begin.

Note:
Sprint PCS
Wireless Web
service will not
work when
roaming off the
Sprint PCS
Nationwide
Network and may
not be available
in select affiliate
areas.

The Sprint PCS Wireless Web


With the Sprint PCS Wireless Web and your wireless Internet-ready phone, you have access to many features via the wireless Internet:

- ▶ **The Sprint PCS Wireless Web Browser** allows you to view specially-designed versions of popular web sites.
- ▶ **Sprint PCS Wireless Web Mail** lets you send and receive e-mail quickly and easily.
- ▶ **The AOL Instant Messenger Service** lets you keep in touch with family and friends via two-way instant messaging.
- ▶ **With Sprint PCS Wireless Web Short Mail**, you can use a person's Sprint PCS Phone Number to send instant text messages to their Internet-ready Sprint PCS Phone-and they can send messages to you.
- ▶ **Sprint PCS Wireless Web Updates** let you receive daily information updates, including weather, stock quotes and sports scores.
- ▶ **The Sprint PCS Wireless Web Connection** lets you connect to the Internet or your company's network with a laptop PC or Hand-held computing device and a Sprint PCS Wireless Web™ Connection Kit.

The Sprint PCS Wireless Web Browser

Your Phone comes equipped with a Browser, which allows you to access up-to-the minute information through the Sprint PCS Wireless Web.

You can view specially-designed versions of popular Internet sites, including Yahoo!®, Amazon.com®, The Weather Channel® and more. Browsing the Sprint PCS Wireless Web using your phone is different than using a home computer because sites display specialized text and reduce their graphics.

The Browser connects to the Internet by placing a call. While you are connected to the Internet, “” (the data communication icon) is displayed, unlike a normal phone call.


Service charges vary depending on your service option.

Launching the Sprint PCS Wireless Web Browser

To launch the Sprint PCS Wireless Web Browser:

1. From the Standby mode, press the **Web** key.

OR

1. From the Standby mode, press the center of the cursor key to display the top menu.
2. Select the **Web** icon and then **Browser** icon, press .

The first time you use the Browser, you'll be prompted to enable the security feature. This automatic process will take 3–6 minutes to complete and it occurs just once. When the process

Note:

The Sprint PCS wireless Web Home Page is subject to change.

is complete, you're ready to start using the Sprint PCS Wireless Web.

Following the security setup, you'll see the Sprint PCS Wireless Web Home Page. This is the main page for the Browser and it gives you access to all the sites in the Sprint PCS Wireless Web. The next time you use the Browser, you may not see the home page at first because the Browser will display the page you were viewing when you last exited the Browser.

WIRELESS WEB

- 1 My Wireless Web
 - 2 Messaging
 - 3 Games
 - 4 Web Portals
 - 5 Entertainment
 - 6 Finance
 - 7 Sports
 - 8 News & Weather
 - 9 @ SprintPCS*
 - More...
- OK MENU

PAGE 2

- 1 What's New?
 - 2 Shopping
 - 3 Travel
 - 4 Tools & Reference
 - 5 People
 - 6 Business Tools
 - 7 Search...
 - 8 Go To...
- OK MENU

The Sprint PCS Wireless Web Home Page

You may notice that sometimes the Browser will launch without placing a call. This is because the phone stores recently viewed pages in its memory cache. The Browser will connect automatically when you access a page that's not stored in the cache.

If the phone has been inactive for a while and a new wireless Internet site has not been requested, the Browser will automatically disconnect. The Browser will remain active—only the connection will end. The Browser will automatically reconnect when you go to a wireless Internet site that's not stored in the phone's memory cache. For this reason, you may find that you are billed for several network connections within a single session. This is normal and is designed to minimize airtime charges.

When launching the Browser, you may need to take an extra step or see a reminder that Browser calls will be charged. (See “Web Guard” below for more information.)

Web Guard

The Web Guard requires you to take an extra step each time you launch or exit the Browser.

To change the Web Guard setting:

1. From the Standby mode, press the center of the cursor key to display the top menu.
 2. Select the **Settings** icon and press .
 3. Highlight **Wireless Web** and press .
 4. Highlight **Web Guard** and press .
 5. To select an option, highlight it and press .
- ▶ **At Start** to require an extra step when launching the Browser.
 - ▶ **At End** to require an extra step when exiting the Browser.
 - ▶ **Both** to require an extra step when launching and when exiting the Browser.

- ▶ **Neither** to switch Web Guard OFF.

Using the Sprint PCS Wireless Web Browser

Using the Browser is easy once you've learned a few basics. Here are some tips for navigating the Sprint PCS Wireless Web:

Soft Keys

The bottom line of the Browser contains a row of Soft Keys. These are your main controls for getting around.

To activate a Soft Key:

- ▶ Press the Soft Key (left/right), which corresponds to the Soft Key that appears on the bottom line of the MiniBrowser.

Scrolling

As with other parts of your phone's menu, you'll have to scroll up and down to see everything on some wireless Internet sites.

- ▶ Press the cursor key upward or downward to scroll line by line.

Selecting

Once you've learned how to activate Soft Keys, you can start navigating wireless Internet sites.

- ▶ Select on-screen items by using the cursor key to highlight the desired item, then press appropriate Soft Key (left/right).
- ▶ You'll find that the Soft Key left is often labeled "OK."

- ▶ If the items on a page are numbered, you can also use your keypad (number keys) to select an item.

Links, which appear [in brackets], allow you to jump to different wireless Internet pages, select special functions or even place phone calls and send e-mail.

- ▶ Select links by highlighting the link and then activating the appropriate Soft Key, which is usually (but not always) the Soft Key left.

Going Home

There are three ways to return to the Sprint PCS Wireless Web Home Page:

- ▶ Press **Web** to display the Browser Menu, highlight **Home** and press **OK**.
- ▶ Press the Soft Key right to display the Right-Click Menu, highlight **Home** and press **OK**.
- ▶ Press and hold **Back**.

Going to a Wireless Internet Site

From the Sprint PCS Wireless Web Home Page, you can go to a wireless Internet site simply by highlighting the desired site name and activating the OK Soft Key. Note that the list of wireless Internet sites extends beyond one page.

- ▶ Select **More...** to see additional site listings.
- ▶ To access a site that does not appear on the Home Page, use the **Go To...** function (on page 2 of the Home Page). You'll be required to enter the URL (site address) for the site you want to visit. It is

Tip:

The tenth item in a numbered list may be selected by pressing the **0** on your phone's keypad, even though the number 0 doesn't appear on the screen.

not necessary to enter “http://” before the site name. Only HDML and WML sites are accessible.

You can also visit a site from the Browser menu on your Sprint PCS Phone by entering the site’s URL.

The procedure for using this function is as follows:

1. Press **Web** to display the Browser Menu.
2. Highlight **Go to URL** and press **OK**.
3. Press **Edit**.
4. Enter the URL for the site you want to visit, and press **Done**.
5. Press **OK**.

Going Back

- To go back one page, press **Back**.

Entering Text

Some wireless Internet sites require that you enter text using your phone’s keypad. See “Entering Characters Using T9 Text Input” on page 56 or “Entering Characters by Tapping the Keypad” on page 55.

Creating a Bookmark

Bookmarks allow you to store the address of favorite wireless Internet pages for easy access at a later time.

To create a bookmark:

1. Go to the page you want to mark.
2. Press **Web** to display the Browser Menu.

3. Highlight **Mark this page** and press **OK**.

When a page has a title, it is automatically used for the name of the bookmark.

4. When you wish to change the name, press **Edit**, enter the name and press **Done**.

5. Highlight the locations other than Textfield and press **Save**.

A message appears confirming the bookmark was added to the list.

6. Press **OK** to return to the screen that you marked and resume navigation within the Sprint PCS Wireless Web Browser.

- ▶ The new bookmark is added to the bottom of your bookmark list.
- ▶ If the bookmarked page has no title, the page's URL is displayed in the bookmark list.

Accessing a Bookmark

To access a bookmark:

1. Press **Web** to display the Browser Menu.
2. Highlight **View Bookmarks** and press **OK**.
3. Highlight the bookmark you want to display and press **JUMP**.

Deleting a Bookmark

1. From the bookmark list, highlight the bookmark you want to delete.
2. Press the Soft Key right to display the Right-Click menu.
3. Highlight **Erase One** or **Erase All** and press **OK**.

Note:

- Bookmarking a page does not store the page contents, just its address.
- Some pages cannot be bookmarked. Bookmark availability is determined by web site developers.

► **Erase One:** Erases the selected bookmark.

► **Erase All:** Erases all the bookmarks.

4. Highlight **Yes** and press .

Editing a Bookmark

1. From the bookmark list, highlight the bookmark you want to edit.

2. Press the Soft Key right to display the Right-Click menu.

3. Highlight the URL or bookmark title and press .

4. Highlight **Edit** and press .

5. Enter the new URL or bookmark title and press .

6. Highlight the locations other than Textfield and press .

A message appears confirming that the edited bookmark has been saved.

7. Press .

Downloading

Use the procedure below to download data such as images, ringers, audio files and games to your Sprint PCS Phone from Web sites that offer downloading services.

To download data:

1. Go to the site that offers the service and access the list of download files.

2. Highlight the file name you wish to download, and press .

3. Highlight **Yes** and press .

When downloading ends, a completion message appears.

4. Press .

5. A “Continue” screen or a screen showing “Continue” as one of the list of options given below appears. Highlight an option and press .

- ▶ **Launch:** Maintains the connection to the Web (???) and launches the downloaded application.
- ▶ **Options ???**
- ▶ **Exit:** Disconnects from the Web and returns you to the Standby screen.
- ▶ **Continue:** Maintains the connection to the Web and displays the page specified by the downloaded file.

The Browser Menu

The Browser Menu contains several special functions. To access the Browser Menu, after launching the Browser, press .

- ▶ **Back:** Returns to the previous page.
- ▶ **Home:** Returns to the Home page.
- ▶ **Mark this page:** Adds the current page to your bookmarks.
- ▶ **View Bookmarks:** Displays the bookmarks list.
- ▶ **Recent pages:** Lists recently visited Web pages. Use this function in the same way as bookmarks.

Note:

With some kinds of data, prompts may appear during downloading. Follow the instructions given in the prompts.

Tip:

When the page you are browsing offers its own optional functions, those functions appear as options at the top of the Right-Click menu.

- ▶ **Go to URL:** Displays the web page specified by the URL you enter directly.
- ▶ **Show URL:** Displays the URL of the page you are currently browsing.
- ▶ **Refresh this page:** Updates the information on the currently displayed page.
- ▶ **Help:** Displays the help topics.
- ▶ **Restart Browser:** Restarts the Browser.
- ▶ **About Browser:** Displays the Browser name and version.
- ▶ **Preferences:** Allow you to customize the Browser settings.

Right-Click Menu

The Right-Click menu gives you instant access to the operations listed below. To access the Right-Click Menu, press the Soft Key right while you are browsing a Web site.

- ▶ **Back:** Returns to the previous page.
- ▶ **Home:** Returns to the Home page.
- ▶ **Mark this page:** Adds the current page to your bookmarks.
- ▶ **More Options:** Displays the Browser Menu.

Customizing the Browser Settings

Use the procedure below to customize the Sprint PCS Wireless Web Browser to suit your needs.

To customize the Browser settings:

1. Press **Web** to display the Browser Menu.

2. Highlight **Preference** and press .
3. The following options are displayed. Highlight one of the options and press .
- ▶ **TBD(Sprint):** Changes the page used as your Home page.
- ▶ **TBD(Sprint):** Restores the default Home page setting.
- ▶ **Style Sheets:** Switches CSS (Cascading Style Sheet) On or Off.
- ▶ **Font Size:** Sets the text (font) size to either Large or Small.
- ▶ **Font:** Sets the font used for text.
- ▶ **Background Color:** Sets the background color.
- ▶ **Hyperlink Color:** Sets the color of unused hypertext links.
- ▶ **Plain Text Color:** Sets the color used for text.
- ▶ **FollowedLinkColor:** Sets the color of used hypertext links.
- ▶ **Show Images:** Switches image display On or Off.
- ▶ **Edit Cookies:** Edits Cookies.
4. Highlight the desired settings and press , or edit the settings as desired and press .

Ending a Browser Session

To end a browser session and disconnect from the Sprint PCS Wireless Web, press .

Troubleshooting

If you're having trouble using the Sprint PCS Wireless Web Browser, use the following trouble shooting guide:

Problem: You can't escape from a particular site.

Recommendation: Go to the Sprint PCS Wireless Web Home Page via the Browser Menu. Press **Web**, highlight **Home** then press **OK**.

Problem: You continue to receive errors when using a certain site.

Recommendation: Try again later. Sites are sometimes temporarily inaccessible due to high traffic. If the problem persists, there may be a problem with the site.

Problem: The Browser appears to be malfunctioning or stops responding.

Recommendation: Reset the Browser by displaying the Browser Menu and selecting **Restart Browser** option. If that doesn't work, turn your phone off then on again. If that also fails, try removing the battery and then replacing it. If none of these solutions work, please contact Sprint PCS Customer Care.

Problem: An error message says the phone is not yet registered for Sprint PCS Wireless Web services.

Recommendation: Sprint PCS Wireless Web services can take longer to activate than voice services. Please try again later. If the problem persists for more than one day, please contact Sprint PCS Customer Care.

Problem: The message “Service Not Available” appears.

Recommendation: Your phone can’t acquire a signal or you are in an area that does not yet support Sprint PCS Wireless Web services. If possible, try to find an area that supports Sprint PCS Wireless Web services. If you continue to receive this message, please contact Sprint PCS Customer Care.

Problem: The message “Data Server Unavailable” appears.

Recommendation: Sprint PCS Wireless Web services are temporarily unavailable for some reason. Please try again later. If this problem persists, please contact Sprint PCS Customer Care.

Problem: The message “IP Address Missing” appears.

Recommendation: Your phone’s factory settings have been altered. Please contact Sprint PCS Customer Care for assistance.

MY Sprint PCS Wireless Web

My sprint PCS Wireless Web lets you manage your Wireless Web bookmarks and create a personalized menu of wireless Internet sites to give you control over your Internet experience. Simply log on to www.sprintpcs.com from your PC, click on the Manage section and locate your account profile. From there, you can build and modify your menu by selecting and arranging your favorite web sites into as many as 27 customized folders. When you launch the Sprint PCS Wireless Web on your Sprint

PCS Phone, you will instantly see your personalized menu.

To customize and access My Sprint PCS Wireless Web:

1. From your personal computer, log on to www.sprintpcs.com.
2. Enter the **Manage** section and enter your Sprint PCS Phone Number and password.
3. Click on **My Wireless Web** and select the web sites and folders you would like to include in your personalized Wireless Web.
4. From your Sprint PCS Phone, launch the Sprint PCS Wireless Web.
5. From the Sprint PCS Wireless Web Home Page, select **My Wireless Web** and press . Your personalized menu of folders and bookmarks will display.

Games

Using the keys on your Sprint PCS Phone, you can play a variety of entertaining games. Test your card-playing skills in a rousing game of blackjack. Pretend you're a gladiator in ancient Rome. Or play entertaining trivia games with your friends and family. This great feature comes in handy when you have some downtime or anytime you just want to have a little fun.

To play a game on the Sprint PCS Wireless Web:

1. Launch the Sprint PCS Wireless Web.
2. From the Sprint PCS Wireless Web Home Page, select **Games** and press .

3. Select the game you wish to play and press **OK**.
4. Follow the game instructions on your display screen.

Using Sprint PCS Wireless Web Mail

With Sprint PCS Wireless Web Mail, you can set up a Sprint PCS e-mail account at no additional charge and perform many of the typical e-mail functions from your Sprint PCS Phone that you can from your personal computer.

You can manage your Sprint PCS Wireless Web Mail account from your Sprint PCS Phone or personal computer at www.sprintpcs.com. You can also access other select e-mail providers, including America Online®, Yahoo!®, Juno®, MSN/Hotmail® and more.

To access Sprint PCS Wireless Web Mail:

1. Launch the Sprint PCS Wireless Web on your Sprint PCS Phone.
2. From the Sprint PCS Wireless Web Home Page, select the **Messaging** folder and press the Soft Key left.
3. From the Messaging folder, select **Sprint PCS Mail** and press the Soft Key left. If you're a first-time user, prompts will help you set up your Sprint PCS Wireless Web account by establishing a user name and password.
4. To view your messages, select **Inbox** with Sprint PCS Wireless Web Mail and press the Soft Key left.
5. Scroll to select the message you wish to read and press the Soft Key left.

6. Once you've read a message, use the quick actions and the end of each message (**Erase**, **Reply**, **Reply All** or **Next Message**) or select **Menu** for a full list of options.

To compose a Sprint PCS Wireless Web Message:

1. Launch the Sprint PCS Wireless Web on your Sprint PCS Phone.
2. From the Sprint PCS Wireless Web Home Page, select the **Messaging** folder and press the Soft Key left.
3. From the Messaging folder, select **Sprint PCS Mail** and press the Soft Key left.
4. Select **Compose** and press the Soft Key left.
5. Select **Add Name** to enter the address of the person to whom you're sending a message and press the Soft Key left.
6. Select **Next** to enter the subject of your e-mail and your specific message.
7. Select **Send** when your message is ready to be delivered.

Using AOL Instant Messenger Service

The AOL Instant Messenger Service lets you keep in touch with family and friends via two-way instant messaging. Simply type a message using your Sprint PCS Phone or personal computer, send it off to friends and family on your Buddy List® group, and they'll receive your message in an instant. Messages can be sent from Sprint PCS Phone to Sprint PCS Phone, personal computer to Sprint PCS Phone and Sprint PCS Phone to personal computer. When you receive a new message, you will be informed by a Sprint Wireless Web Alert—even when you are not logged on to the Sprint PCS Wireless Web.

To sign up for AOL Instant Messenger service, visit the AOL Instant Messenger page from your personal computer at www.sprintpcs.com. Or visit www.aol.com and register for an AOL Instant Messenger screen name and password by downloading the software as instructed. You do not have to be an AOL member to utilize this service.

To access AOL Instant Messenger for your Sprint PCS Phone:

1. Launch the Sprint PCS Wireless Web on your Sprint PCS Phone.
2. From the Sprint PCS Wireless Web Home Page, select the **Messaging** folder and press the Soft Key left.
3. From the Messaging folder, select **AOL IM** and press the Soft Key left.

4. When the AOL Instant Messenger screen is displayed, highlight the **OK** Soft Key and press the Soft Key left.
5. Enter your AOL Instant Messenger screen name and press the Soft Key left. (Use the screen name you created when you signed up for the AOL Instant Messenger Service.)
6. Enter the password associated with your screen name and press the Soft Key left. The AOL Instant Messenger menu is displayed.

To send AOL Instant Messages:

1. Access the AOL Instant Messenger screen as outlined above and enter your screen name and password, then **CONVERSATIONS**, **ONLINE BUDDIES** and **OFFLINE BUDDIES** appear.
2. Highlight **CONVERSATIONS** and press the Soft Key left.
3. Enter the screen name of the person to whom you wish to send a message and press the Soft Key left.
4. Select **OK**.
5. Highlight **Quick Reply** and press the Soft Key left.
6. Select your desired item and press the Soft Key left.
7. Select the prepared message that you want and press the Soft Key left.
8. Select **SEND** to send the message.

If you want to make your own message, follow these instructions:

1. From the step 5 above, move the cursor key downward.
2. Press the Soft Key left.
3. Enter your text message and press the Soft Key left.
4. Select **SEND** to send the message.

To read AOL Instant Messages:

1. When you receive an AOL Instant Message, you will see **Alert from "AIM".View it now?** on your display screen.
2. Press View (Soft Key left), then message list appears.
 - ▶ The Screen Name and message appears as the header.
(*: Unread message)
3. Highlight your desired header of the message and press the Soft Key left to see the message.

Using Sprint PCS Wireless Web Short Mail

With Sprint PCS Wireless Web Short Mail, you can use a person's Sprint PCS Phone Number to send instant text messages from your Internet-ready Sprint PCS Phone to their Internet-ready Sprint PCS Phone—and they can send messages to you. When you receive a new message, you'll automatically be notified with a Sprint PCS Web Alert.

To send a Short Mail message:

1. Launch the Sprint PCS Wireless Web on your Sprint PCS Phone.

Note:

If your phone does not receive Web Alerts, you cannot receive Short Mail Messages.

2. From the Sprint PCS Wireless Web Home Page, select the **Messaging** folder and press the Soft Key left.
3. Select **Short Mail** and press the Soft Key left.
4. Select **Compose** and enter the Sprint PCS Phone Number of the person to whom you wish to send a message.
5. Enter a Sprint PCS Phone Number and press the Soft Key left.
6. Select **Type Msg** (to enter a message up to 100 characters), **Pre-Set Msgs** (to select a preset message) or **Icons** and press the Soft Key left.
7. Enter your text or select a preset message or icon and press the Soft Key left.
8. To send the message, press **SEND** (Soft Key left).

To read a Short Mail message:

1. When you receive a Short Mail message, you will see **Alert from "Short Mail".View it now?** on your display screen.
2. Press **View** (Soft Key left), then message list appears.
 - ▶ The last four-digit number and the message appear as the header.
(*: Unread message)
3. Highlight your desired header of the message and press the Soft Key left to see the message details.

To reply to a Short Mail message:

1. While the message is open, scroll to **Reply** and press the Soft Key left.

2. Select **Type Msg** (to enter a message up to 100 characters), **Pre-Set Msgs** (to select a preset message) or **Icons** and press the Soft Key left.
3. Enter your text or select a preset message or icon and press the Soft Key left.
4. To send the message, press **SEND** (Soft Key left).

To add and/or edit pretyped messages:

1. Launch the Sprint PCS Wireless Web from your Sprint PCS Phone.
2. From the Sprint PCS Wireless Web Home Page, select the **Messaging** folder and press the Soft Key left.
3. Select **Short Mail** and press the Soft Key left.
4. Select **Menu** and press the Soft Key left.
5. From the **Options Menu** highlight **Pre-Set Msgs** and press the Soft Key left.
6. From the **Edit Pre-Set MS** menu, select **(Add New)** or the message you wish to edit and press the Soft Key left.
7. Enter your new message or changes and press the Soft Key left.

Signing up for Sprint PCS Wireless Web Updates

With Sprint PCS Wireless Web Updates, you can have the Internet-based information sent directly to your Sprint PCS Phone at the times you choose. When you select the Sprint PCS Wireless Web option, up to 50 updates can be sent to your phone each month at no additional charge.

To select the Internet-based information you want sent to your Sprint PCS Phone:

1. From your computer, log on to the Internet.
2. Go to the site from which you want to receive information. A few of the sites you can visit are America Online[®], amazon.com[®], eCompare![®], ebay[®], FoxSports.com[®], and FTD.com[®]. (The location where you request updates within each site will vary.)
3. Where indicated on the site, input your Sprint PCS 10-digit phone number followed by “@messaging.sprintpcs.com.” For example: 5551234567@messaging.sprintpcs.com.

Upon completing the registration process, you should begin receiving your updates on your Sprint PCS Phone as requested.

Setting Up a Sprint PCS Wireless Web Connection

Getting Started

Your Wireless Internet-ready Sprint PCS Phone allows you to connect to a laptop PC, hand-held or palm-sized computing device to send and receive

e-mail, access the Internet or your company's network and more, without searching for a wall-mounted telephone jack. In just three steps, you can use your connectivity:

1. First, you'll need a Sprint PCS Wireless Web Connection Kit (sold separately).
 2. Connect your laptop PC to your Sprint PCS Phone by using the serial data cable. The cable adapter will connect to a handheld or palm-sized computing device.
 3. Finally, take a few minutes to install the Sprint PCS DialerSM software onto your computer using your CD.
- ▶ For complete details on how to install and use the software, refer to the user guide in the Sprint PCS Wireless Web Connection Kit you purchased.

Placing a Data Call

To place a data call while you're connected to the Sprint PCS Wireless Web:

1. First, make sure the cable is connected properly.
 2. Open the Sprint PCS Dialer application on your computer and place the call.
- ▶ The phone displays the number your computer is calling and a "Connecting" message is displayed.
 - ▶ Once the call successfully connects, your phone's display shows you information on the status of the data call.

Note:

You will not have to install the Sprint PCS Dialer for Palm® or HPC/Windows CE.

Note:
Caller ID is not available on Sprint PCS Wireless Web Browser calls.

Receiving Sprint PCS Wireless Web Calls

Most users use the Sprint PCS Wireless Web Connection to place outgoing data/fax calls. But you can also set up your Sprint PCS Phone to receive (host) data and fax calls. Because each phone model is different, the Sprint PCS Wireless Web Connection Kit doesn't include instructions for how to set up your phone to receive data and fax calls. Here's the procedure to set up your Sprint PCS Phone to receive a (mobile-terminated) data or fax call:

1. Select the menu option to enable incoming data/fax calls. Note that incoming voice calls are not possible when your Sprint PCS Phone is set to receive data/fax calls.
2. Once you've received the incoming data/fax call, you may want to return the phone to its normal state by disabling incoming data/fax calls.

Using Special Features During a Sprint PCS Wireless Web Call

Your phone gives you the ability to use special features while you're on a Sprint PCS Wireless Web call. They are outlined below.

- ▶ **Caller ID:** Just like your phone stores regular Caller ID numbers, it also stores the numbers of incoming Sprint PCS Wireless Web Connection calls. To distinguish between the two types of calls, "Data" or "Fax" displays along with the number of the caller when you view your Caller ID records.

- ▶ **Call Waiting:** If someone tries to reach you while you're connected to the Sprint PCS Wireless Web, your phone behaves like it is turned OFF. Depending on your service, callers may get your voicemail. Call Waiting is automatically deactivated whenever you place or receive a Sprint PCS Wireless Web Connection call.
- ▶ **Accessing features:** You can still access most of your phone's features while you're connected on a Sprint PCS Wireless Web Connection call. You can navigate the phone's menu system to change or view your phone's features or phone book entries. You can also read messages or view the Caller ID records that you received before placing the call.

Ending a Sprint PCS Wireless Web Call

It's important to note that some of the normal ways to end a call won't work with the Sprint PCS Wireless Web Connection calls. You should always close the connection through the application on your computer. Your phone will then return to Standby mode.

Selecting Your Accessories

In This Section

- ▶ **Accessory Options**
 - ▶ **How to Order**
-

We offer a variety of accessories for your new Sprint PCS Phone™. Choose from chargers, batteries and hands-free-devices—all designed to give you more flexibility and convenience.

Accessory Options

Standard Battery

The standard battery provides approximately 3 hours (200 minutes) of continuous digital talk time or approximately 9 days (220 hours) of continuous digital standby time. The battery charges in about 2 hours (100 minutes) using any of the charging accessories available with this phone.

Cigarette Lighter Adapter

You can charge your phone (even during a call) in your vehicle using the cigarette lighter adapter.

Desktop Charger

The Desktop Charger uses an AC adapter and is provided with your phone for convenient charging.

Traveler Charger

Compact and lightweight, this is a convenient way to charge your phone while on the road.

Headset

The Sprint PCS Mobile Headset provides a convenient method of hands-free operation. When the headset is plugged into the headset jack, the phone automatically enters hands-free mode. In this mode, the earpiece and microphone on the phone are disabled to ensure privacy and reduce ambient noise.

Sprint PCS Wireless Web Kit

This convenient connectivity kit connects to the serial port and contains Sprint PCS Dialer software, a serial data cable and a cable adapter to connect your Sprint PCS Phone to your mobile computing device. The Sprint PCS Wireless Web Connection Kit is designed for Apple® Macintosh® portables, PC laptops and Windows® CE devices.

USB Cable?

???

How to Order

Most Sprint PCS Accessories found at local Sprint PCS Centers can also be purchased through the Sprint PCS Accessory HotlineSM by calling 1-800-974-ACC1 (2221) from your Sprint PCS Phone. Next day delivery is offered in select areas. You can also visit our web site at www.sprintpcs.com.

Knowing Performance and Safety Guidelines

In This Section

- ▶ **Getting the Most Out of Your Reception**
 - ▶ **Maintaining Safe Use of and Access to Your Phone**
 - ▶ **Caring for the Battery**
 - ▶ **Acknowledging Special Precautions and the FCC Notice**
 - ▶ **Owner's Record**
 - ▶ **User Guide Proprietary Notice**
-

Part of getting the most out of your Sprint PCS Phone™ is knowing where and how it works at optimum efficiency. This section outlines performance and safety guidelines that ensure you experience the full quality your Sprint PCS Phone was designed to give you.

Getting the Most Out of Your Reception

Keeping Tabs on Signal Strength

The quality of each call you make or receive depends on the signal strength in your area. Your phone informs you of the current strength by displaying a number of bars next to the signal strength icon. The more bars displayed, the stronger the signal. If you're inside a building, being near a window may give you better reception.

Understanding Power Save Feature

If your phone is unable to find a signal after 15 minutes of searching, a Power Save feature is automatically activated. If your phone is on, it periodically rechecks service availability or you can check yourself by pressing any key. Anytime the Power Save feature is activated, a message displays on the screen. When a signal is found, your phone returns to Standby mode.

Understanding How Your Phone Operates

Your phone is basically a radio transmitter and receiver. When it's turned on, it receives and transmits radio frequency (RF) signals. When you use your phone, the system handling your call controls the power level. This power can range from 0.1 μW to 0.2 W in digital mode.

Knowing Radio Frequency Safety

The design of your Sprint PCS Phone complies with updated NCRP standards described below.

In 1991–92, the Institute of Electrical and Electronics Engineers (IEEE) and the American National Standards Institute (ANSI) joined in updating ANSI's 1982 standard for safety levels with respect to human exposure to RF signals. More than 120 scientists, engineers and physicians from universities, government health agencies and industries developed this updated standard after reviewing the available body of research. In 1993, the Federal Communications Commission (FCC) adopted this updated standard in a regulation. In August 1996, the FCC adopted hybrid standard consisting of the existing ANSI/IEEE standard and the guidelines published by the National Council of Radiation Protection and Measurements (NCRP).

Maintaining your Phone's Peak Performance

There are several simple guidelines to operating your phone properly and maintaining safe, satisfactory service.

- ▶ Hold the phone with the antenna up, fully-extended and over your shoulder.
- ▶ Try not to ever hold, bend or twist the phone antenna.
- ▶ Don't use the phone if the antenna is damaged.
- ▶ Speak directly into the mouthpiece.
- ▶ Avoid exposing your phone and accessories to rain or liquid spills. If your phone does get wet, immediately turn the power off and remove the battery. If it's inoperable, return it to a Sprint PCS Center or call Sprint PCS Customer Care for service.

Note:

For the best care of your phone, only Sprint PCS authorized personnel should service your phone and its accessories. Faulty service may void the warranty.

Maintaining Safe Use of and Access to Your Phone

FAILURE TO FOLLOW THE INSTRUCTIONS OUTLINED MAY LEAD TO SERIOUS PERSONAL INJURY AND POSSIBLE PROPERTY DAMAGE

Using Your Phone While Driving

Talking on your phone while driving (or operating the phone without a hands-free device) is prohibited in some jurisdictions. Laws vary as to specific restrictions. Remember that safety always comes first.

When using your phone in the car:

- ▶ Get to know your phone and its features, such as speed dial and redial.
- ▶ When available, use a hands-free device.
- ▶ Position your phone within easy reach.
- ▶ Let the person you are speaking to know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions.
- ▶ Do not take notes or look up phone numbers while driving.
- ▶ Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic.
- ▶ Do not engage in stressful or emotional conversations that may divert your attention from the road.
- ▶ Dial **9 1 1 TALK** to report serious emergencies. It's free from your wireless phone.

- ▶ Use your phone to help others in emergencies.
- ▶ Call roadside assistance or a special non-emergency wireless number when necessary.

Following Safety Guidelines

To operate your phone safely and efficiently, always follow any special regulations in a given area. Turn your phone off in areas where use is forbidden or when it may cause interference or danger.

Using Your Phone Near Other Electronic Devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, RF signals from wireless phones may affect inadequately shielded electronic equipment.

RF signals may affect improperly installed or inadequately shielded electronic operating and entertainment systems in motor vehicles. Check with the manufacturer or its representative to determine if these systems are adequately shielded from external RF signals. Also check with the manufacturer regarding any equipment that has been added to your vehicle.

Consult the manufacturer of any personal medical devices, such as pacemakers and hearing aids, to determine if they are adequately shielded from external RF signals.

Tip:

Purchase an optional Hands-Free Car Kit.

Note:

Always turn off the phone in health care facilities and request permission before using the phone near medical equipment.

Note:

Never transport or store flammable gas, liquid or explosives in the compartment of your vehicle that contains your phone or accessories.

Turning Off Your Phone Before Flying

Turn off your phone before boarding any aircraft. To prevent possible interference with aircraft systems, the U.S. Federal Aviation Administration (FAA) regulations require you to have permission from a crew member to use your phone while the plane is on the ground. To prevent any risk of interference, FCC regulations prohibit using your phone while the plane is in the air.

Turning Off Your Phone in Dangerous Areas

To avoid interfering with blasting operations, turn off your phone when in a blasting area or in other areas with signs indicating that two-way radios should be turned off. Construction crews often use remote-control RF devices to set off explosives.

Turn off your phone when you're in any area that has a potentially explosive atmosphere. Although it's rare, your phone or its accessories could generate sparks. Sparks could cause an explosion or a fire resulting in bodily injury or even death. These areas are often, but not always, clearly marked. They include:

- ▶ Fueling areas such as gas stations
- ▶ Below deck on boats
- ▶ Fuel or chemical transfer or storage facilities
- ▶ Areas where the air contains chemicals or particles such as grain, dust or metal powders
- ▶ Any other area where you would normally be advised to turn off your vehicle engine

Restricting Children's Access to Your Phone

Your Sprint PCS Phone is not a toy. Children should not be allowed to play with it because they could hurt themselves and others, damage the phone or make calls that increase your phone bill.

Caring for the Battery

Protecting Your Battery

The guidelines listed below help you get the most out of your battery's performance.

- ▶ Use only Sprint PCS-approved batteries and desktop chargers. These chargers are designed to maximize battery life. Using other batteries or chargers voids your warranty and may cause damage.
- ▶ In order to avoid damage, charge the battery only in temperatures that range from 32°F to 113°F (0°C to 45°C).
- ▶ Don't use the battery charger in direct sunlight or in high humidity areas, such as the bathroom.
- ▶ Never dispose of the battery by incineration.
- ▶ Keep the metal contacts on top of the battery clean.
- ▶ Don't attempt to disassemble or short-circuit the battery.
- ▶ The battery may need recharging if it has not been used for a long period of time.
- ▶ It's best to replace the battery when it no longer provides acceptable performance. It can be

Note:

For safety, do not handle a damaged or leaking Lilon battery.

recharged hundreds of times before it needs replacing.

- ▶ Don't store the battery in high temperature areas for long periods of time. It's best to follow these storage rules:

Less than one month: -4°F to 140°F (-20°C to 60°C)

More than one month: -4°F to 113°F (-20°C to 45°C)

Disposal of Lithium Ion (Li-Ion) Batteries

For safe disposal options of your Lilon batteries, contact your nearest Sprint PCS-authorized service center.

Special note: Be sure to dispose of your battery properly. In some areas, the disposal of batteries in household or business trash may be prohibited.

Acknowledging Special Precautions and the FCC Notice

FCC Notice

The phone may cause TV or radio interference if used in close proximity to receiving equipment. The FCC can require you to stop using the phone if such interference cannot be eliminated.

Vehicles using liquefied petroleum gas (such as propane or butane) must comply with the National Fire Protection Standard (NFPA-58). For a copy of this standard, contact the National Fire Protection Association, One Batterymarch Park, Quincy, MA 02269, Attn: Publication Sales Division.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ▶ Reorient or relocate the receiving antenna.
- ▶ Increase the separation between the equipment and receiver.
- ▶ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ▶ Consult the dealer or an experienced radio/TV technician for help.

Cautions

Any changes or modifications to your phone not expressly approved in this document could void your warranty for this equipment and void your authority to operate this equipment. Only use approved batteries, antennas and chargers. The use of any unauthorized accessories may be dangerous and voids the phone warranty if said accessories cause damage or a defect to the phone.

Although your phone is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending or sitting on it.

Body-Worn Operation

To maintain compliance with FCC RF exposure guidelines, if you wear a handset on your body, use the Sprint PCS supplied or approved carrying case, holster or other body-worn accessory. If you do not use a body-worn accessory, ensure the antenna is at least 0.394 inch (1 centimeter) from your body when transmitting. Use of non-Sprint PCS approved accessories may violate FCC RF exposure guidelines.

For more information about RF exposure, please visit the FCC website at www.fcc.gov.

Specific Absorption Rate (SAR) for Wireless Phones

The SAR is a value that corresponds to the relative amount of RF energy absorbed in the head of a user of a wireless handset.

The SAR value of a phone is the result of an extensive testing, measuring and calculation process. It does not represent how much RF the phone emits. All phone models are tested at their highest value in strict laboratory settings. But when in operation, the SAR of a phone can be substantially less than the level reported to the FCC. This is because of a variety of factors including its proximity to a base station antenna, phone design and other factors. What is important to remember is that each phone meets strict federal guidelines. Variations in SARs do not represent a variation in safety.

All phones must meet the federal standard, which incorporates a substantial margin of safety. As stated above, variations in SAR values between different model phones do not mean variations in safety. SAR values at or below the federal standard of 1.6 W/kg are considered safe for use by the public.

The highest reported SAR values of SH-P300 are:
PCS mode (Part 24) - Head: 0.41 W/kg; Body-worn:
0.093 W/kg

FCC Radio Frequency Emission

This phone meets the FCC Radio Frequency Emission Guidelines. FCC ID number: ABLSP20. More information on the phone's SAR can be found from the following FCC website: <http://www.fcc.gov/oet/fccid>

Owner's Record

The model number, regulatory number and serial number are located on a nameplate inside the battery compartment. Record the serial number in the space provided below.

This will be helpful if you need to contact us about your phone in the future.

Model: SH-P300

Serial No.:

User Guide Proprietary Notice

CDMA Technology is licensed by QUALCOMM Incorporated under one or more of the following patents:

4,901,307	5,109,390	5,267,262	5,416,797
5,506,865	5,544,196	5,657,420	5,101,501
5,267,261	5,414,796	5,504,773	5,535,239
5,600,754	5,778,338	5,228,054	5,337,338
5,710,784	5,056,109	5,568,483	5,659,569
5,490,165	5,511,073		

T9 Text Input is licensed by Tegic Communications and is covered by U.S. Pat. 5,818,437, U.S. Pat. 5,953,541, U.S. Pat. 6,011,554 and other patents pending.

Terms and Conditions & Warranty Information

In This Section

- ▶ **Terms of Conditions of Services**
 - ▶ **Manufacturer's Warranty**
-

This section contains the Terms of Conditions of Services and the manufacturer's warranty for your Sprint PCS

Terms of Conditions of Services

Thanks for choosing to connect with Sprint PCS. These terms and conditions are part of your agreement with Sprint PCS for Sprint personal communication services.

For the most current version of the terms and conditions, please visit our website at www.sprintpcs.com or call Sprint PCS Customer Care at 1-888-211-4PCS, because the terms of conditions included with your Sprint PCS may not be the most current version. If you activated Sprint PCS Services before the effective date of these terms of conditions, these terms and conditions replaces and supersedes any previous terms and conditions.

If you have questions about your Sprint PCS Services, call Sprint PCS Customer Care at 1-888-211-4PCS(4727) visit our Web site at www.sprintpcs.com.

Agreement

Your agreement (“Agreement”) with Sprint Spectrum L.P. and any of its affiliates doing business as Sprint PCS providing Sprint Personal Communications Services (“Services”) to you is made up of these Terms and Conditions of Services (“Terms”) and the Service Plan that we agree to provide you. Your “Service Plan” is described in our marketing materials and includes the rates and features we set for that Service Plan. We use the words “we,” “us,” “our” or “Sprint PCS” to refer to Sprint Spectrum L.P. and its affiliates doing business as Sprint PCS in these Terms. When you activate Services or attempt to use our Services (including, without limitation, attempting place a call on the Sprint PCS Network or off the Sprint PCS Network when roaming, including “911” or similar calls), you accept the Agreement.

Provision of Service

Your purchase of Sprint PCS phones or other equipment does not mean that we must provide Services to you. We may decide not to provide Services to you for any lawful reason. We may request that you provide us with any information we reasonably require to determine whether you qualify for Services. Services in some areas are managed and provided under contract with Sprint PCS by independent affiliates with access to the Sprint PCS Network. Some Services may not be available or may operate differently in certain affiliate markets.

Credit Verification

You must have and keep satisfactory credit to receive and continue to receive Services. We will verify your credit before agreeing to provide Services to you and we may verify your credit at any time while we provide Services to you. Credit verification may include a review of credit reports that we receive from commercially available credit bureaus. We may require a guarantee of payment by an individual or entity approved by us. If at any time we determine, in our sole discretion, that payment for Services may not be made when due, we may suspend Services to your phone and require that you provide payment on account or a guarantee of payment before we resume Services to your phone.

Changes to Agreement

We may change this Agreement at any time (but see Service Plan). Any changes to the Terms are effective when we publish the revised terms. If you use our Services or make any payment to us on or after the effective date of the changes, you accept the changes. If you do not accept the changes, you may terminate Services (but see Terminations and Changing Service Plans). For purposes of the Agreement, “use” includes keeping the right to access the Sprint PCS Network by not terminating Services. You may not modify the Agreement except for your Service Plan (see Termination and Changing Service Plans).

Service Plan

You may be eligible for a fixed length Service Plan (“Term Service Plan”) or for a month-to-month Service Plan (“Non-Term Service Plan”). We determine the Service Plan for which you qualify. We may offer non-identical Service Plans to different individuals or entities. Services and coverage under some Service Plans may be more limited than available under other Service Plans. Your Service Plan sets out the charges for the Services and is your Service Plan until that Service Plan is changed, you switch to a different Service Plan, or your Services terminate. Your Service Plan may require that you make a deposit, prepayment, or a series of deposits or prepayments, or be subject to an account spending limit, before Services are activated or maintained.

Changing Service Plans

If you are on a Non-Term Service Plan, you may change to a different Service Plan for which you qualify. Any change is effective at the start of your next full invoicing cycle unless otherwise specified by us at the time that you place your change order. If you change or add a different Service Plan or service feature and the change is effective prior to the start of your next full invoicing cycle, you will be invoiced a prorated amount. We may require a service charge for implementing any change directed by you as well as the Service Plan or optional service features you select. If you are on a Term Service Plan, your ability to change to another Service Plan may be limited and we may require you to pay a termination fee as set out in your Service Plan.

Use of Services and Equipment; Availability

You must be at least 18 years old to subscribe to our Services. We may require you to provide proof of your age and identity. If you are under 18 years old you may be eligible for certain Services that have Account Spending Limits if a person 18 years or older is also named as a subscriber on the Account. Services and equipment may not be used for any unlawful, fraudulent or abusive purpose. By requesting Services, you agree that you will not use Services and equipment in any unlawful, fraudulent or abusive manner. You may not resell or lease Services or equipment to anyone.

Services are available within the operating range of the Sprint PCS Network. Coverage and quality of Services may be affected by conditions within or beyond our control, including atmospheric, geographic, or topographic conditions. We do not guarantee that there will be no interruptions or delays in Services. Your Sprint PCS Phone™ will not accept the services of any wireless provider other than Sprint PCS (but see Roaming).

Number

We assign a phone number (“Number”) to the phone or other equipment used by you on the Sprint PCS Network. We may change the Number without compensation by giving you prior notice. You do not own the Number. You may not modify the Number we program into any phone or other equipment.

Phone Activation Fee

You may be required to pay a non-refundable phone activation fee when you activate a new Number, have us switch a Number to a different phone, we activate a different phone on your existing account or your Service Plan says so. Details on any applicable phone activation fee are set out in your Service Plan or can be obtained by calling Sprint PCS Customer Care.

Charges

For most forms of wireless Service, your usage will be charged from the time you first initiate contact between your phone or other wireless device and the network until the network connection is broken, whether or not you are successful in connecting with the service with which you seek to connect, even if the connection is later broken or dropped. An exception is that you are not charged for voice calls that are not completed. You are charged for completed calls to your Number from the time shortly before the phone starts ringing until the call is terminated by either party. You will be charged peak rates for the entire duration of calls initiated during the peak time periods applicable to your Service. You will be charged off-peak rates for the entire duration of calls initiated during the off-peak time periods applicable to your Service.

In addition to these usage charges, you may be charged for recurring monthly service charges, applicable local and long-distance toll charges, other usage charges, connection fees, roaming charges, directory assistance, call completion charges, optional features you select at an extra cost, and taxes and other regulatory related charges. Charges for most Services are incurred in one -minute increments, with partial minutes of rounded up to the next highest minute. You must pay, by each invoice due date, all charges for Services provided to the Number for each phone or other equipment that our records show you activated, no matter who actually uses or has possession of the phone or other equipment at the time Services are provided.

Voice Command

Sprint PCS Voice CommandSM is an optional service that allows you to place calls by using speech recognition technology. Call to 911 or similar emergency numbers cannot be placed through the Voice Command feature. Airtime and applicable long distance charges for a call completed from your Number using the Voice Command feature begin when you press or activate the TALK or similar keys and end when

your call is terminated by hitting the END key or by returning to the Voice Command platform. If you initiate and complete another call without leaving the Voice Command platform, a separate charge for that call will begin from the time the previous call was terminated. Airtime and applicable long distance charges will be applied to the entire length of a completed call initiated from Voice Command. Using Directory Assistance to input names into your Voice Command address book will incur additional charges. Details on charges for the Voice Command feature can be found in the marketing materials for this feature, by visiting www.sprintpcs.com or by calling Sprint PCS Customer Care.

Invoicing

Invoicing cycles are approximately 30 days in length. Invoicing cycles and dates may change from time to time. Except as otherwise provided in your Service Plan, monthly recurring charges (MRCs) are invoiced one invoicing cycle in advance. Charges for Services are usually invoiced as soon as possible after the changes accrue. We may, however, invoice you for usage and changes occurring before the invoicing cycle being invoiced, if they were not previously invoiced. If you are invoiced for usage incurred during a prior invoicing cycle, those minutes will be applied to your Service Plan minutes for the current invoicing cycle. However, if you change your Service Plan between the time the usage was incurred and the beginning of the current invoicing cycle, those minutes from the prior invoicing cycle will be charged at the rate per minutes for usage over included minutes provided in the Service Plan in effect at the time the usage was incurred.

Payment

If you have authorized payment for Services or equipment by credit card or by debiting a bank account, no additional notice or consent is required before we invoice the credit card or debit the bank account for all amounts due to us or billed by us on behalf of a third party. You

must promptly notify us of any change in your invoicing address or of the credit card or bank account used for payment. We reserve the right to require payment by money order, cashier's check or other secured form of payment. If we take action to receive payment beyond invoicing you for charges for Services or equipment, you must pay our costs and expenses of collection, including attorneys' fees and expenses, the fees of any collection agency and court costs. If we act as an invoicing agent for a third -party service provider, payments received are first applied to amounts due and owing to us and any remaining amounts are applied to sums due and owing to the third-party service provider. We may charge an additional fee for any check or other negotiable instrument endorsed by you and returned unpaid by a financial institution for any reason. You may be charged fees for certain methods of payment.

Late Payment Charges

Payment is past due if we do not receive it by the due date shown on your invoice. Any payment for Services and equipment not made when due accrues late charges until paid at the rate of 1.5% per month or at the highest rate allowed by law. Late charges are prorated daily for each day that payment is past due, but are not compounded monthly. Acceptance of late or partial payments (even if marked "paid in full") does not waive our right to collect all amounts that you owe us.

Disputed Charges

You may raise any dispute that you have about any charges invoiced to you within 15 days of the date of the invoice or you have accepted the invoice. You may notify us of any dispute by notifying Sprint PCS Customer Care. Calls to our sales or general business offices are not notice of a dispute. If disputed invoice procedures are described on the invoice, you must follow them.

Termination. Non-Term Service Plan.

If you are on a Non-Term Service Plan you may terminate Service at any time by giving us notice. Subject to the terms of this Agreement, we

may terminate Services at any time, with or without notice. We may deactivate any Number before you receive notice of termination without liability to you. Termination by either of us may be with or without cause.

Termination. Term Service Plan.

If you are on a Term Service Plan (1) your ability to terminate Services before the end of the term is limited, (2) your ability to change to another Service Plan before the end of the term may be limited, and may result in a termination or activation fee, (3) you may be required to pay a termination fee, (4) we may not terminate Services without cause before the end of the term and (5) if we terminate Services for cause before the end of the term, you may be required to pay a termination fee. No termination fee is charged if you terminate a Term Service Plan within 14 days of activation of your Sprint PCS Phone. During the term we must give each other notice to terminate Services. At and after the expiration of the term, you may terminate Services at any time by giving us notice and we may, subject to this Agreement, terminate Services at any time, with or without notice.

Termination. General.

Regardless of whether you have a Non-Term or a Term Service Plan, we may terminate or suspend Services to you without liability (1) if you breach any provision of this Agreement (including if you fail to pay any charges for Services), or (2) if you fail to pay any charges due us for equipment or otherwise. If you promptly cure the breach, we may, but are not obligated to, reactivate Services to you. You must pay all charges for (a) Services provided before termination of a Number and (b) equipment, regardless of who terminates Service. If Services are terminated before the end of your current invoicing cycle, (i) the monthly recurring charge is not prorated to the date of termination, and (ii) you will not receive a credit or refund for any unused minutes in your Service Plan.

Account Spending Limit

If we agree to provide Services to you on an Account Spending Limit basis, we will tell you your Account Spending Limit before we start Services to your Number, or as reasonably practicable after the limit is imposed. If we require a deposit for you to establish or keep Services on an Account Spending Limit basis, we will hold the deposit as partial guarantee of payment for Services (see Deposits). Charges for Services accrue against your Account Spending Limit as they are incurred. We may charge an initial ASL start up fee. We may charge a monthly ASL service fee, in addition to your recurring monthly service charge. We may suspend Services to your Number without prior notice to you when your account balance reaches your Account Spending Limit. Services are restored when you have paid any past due balance and pay a specified minimum amount to reduce your account balance below your Account Spending Limit. We may change this minimum amount at any time upon notice to you. You may pay any past due balance and the minimum amount by any method authorized by Sprint PCS. Call Sprint PCS Customer Care for information about authorized methods of making these payments. We may charge you a fee for calls that involve our live customer care services. If we provide Services to you on an Account Spending Limit basis, Service and coverage may be limited in certain ways. You must pay all charges for Services even if they exceed the amount of your Account Spending Limit.

Deposits

If we require a deposit for you to establish or keep Services, we will hold the deposit as partial guarantee of payment for Services. We may change the deposit amount at any time to reflect revised estimated monthly charges based upon your usage. A deposit may not be used to pay any invoice (unless it is used to pay a final invoice) or delay payment. The deposit amount, the length of time we hold the deposit and charges to the deposit amount are determined based on your credit and payment history. The rate of interest on the deposit is subject to change. We may mix deposits with our other funds. If Services are

terminated for any reason, we may, without notice to you, apply your deposit toward payment of outstanding charges and return any excess to you at your last known address within 75 days after termination of Services. If the U.S. Postal Service cannot deliver the money to you and returns it to us, we will hold it for you for one year from the date of return and, during that period, we may charge a monthly servicing fee against the deposit balance. Any money held during this one-year period will not accrue interest for your benefit. You forfeit any portion of the money left after the one-year period.

Wireless Web and Voice Portal Services

Wireless Web Services are part of the Services that can be obtained through Sprint PCS. Wireless Web service may not be immediately available in some Sprint PCS affiliate markets. Use of Wireless Web Services requires a wireless data compatible phone or certain other equipment (or both) and is subject to any memory, storage or other limitation in the phone or other equipment. The Caller ID blocking feature is not available when using Wireless Web Services. For data calls (including Wireless Web and Voice Portal calls) that are attempted, but not completed, you are charged for the time during which the network attempts to connect the call. You are charged for time spent connected to the Wireless Web or Voice Portal, including time spent browsing on the Internet or Voice Portal and reviewing or scrolling through Internet information on-line while still connected to the Sprint PCS Network. Not all Internet sites can be accessed and you may receive an error message if you attempt to access a site that cannot be accessed through Wireless Web Services. You are also charged for Wireless Web connections to review your Sprint PCS account information. Wireless Web Services and Voice Portal data calls may not be available when you are roaming off the Sprint PCS Network. Wireless Web Services are not available to you if you are on a Sprint PCS Prepaid Service Plan. If you receive Services on an Account Spending Limit basis, you may be limited in the Wireless Web and Voice Portal Services available to you. Call Sprint PCS Customer Care or visit our

website at www.sprintpcs.com for availability and equipment compatibility information. Specific additional information about Wireless Web Services and Voice Portal Services, including pricing, included minutes and combining with other Service Plans, is available in our standard sales collateral for Sprint PCS Wireless Web Services and Voice Portal Services at www.sprintpcs.com. Sprint PCS is not a publisher of third party content that can be accessed through Wireless Web Services or Voice Portal Services. Sprint PCS is not responsible for any opinions, advice, statements, services or other information is provided by third parties and accessible through Wireless Web Services or Voice Portal Services. Neither Sprint PCS nor its vendors or licensors guarantees the accuracy, completeness or usefulness of information that is obtained through the Wireless Web Services or Voice Portal Services. You are responsible for evaluating such content.

Taxes and Other Regulatory Related Charges

We invoice you for taxes, fees and other charges levied by federal, state or local authorities, or foreign government on Services. We also assess charges associated with regulatory mandates and obligations, such as Universal Service and Enhanced 911 service. If you claim any tax exemption, you must provide us with a valid tax-exempt document. Any tax exemption applies only from the date we receive a valid tax-exempt document.

Roaming

Calls made outside of your Home Service Area and outside of the Sprint PCS Network are “roaming” calls. Your Sprint PCS phone is specifically designed and engineered to work only on the Sprint PCS Network. It works on another CDMA PCS provider’s system only when a roaming agreement is in place between Sprint PCS and the other provider. If your Sprint PCS Phone is a dual-mode phone, it works on both a CDMA PCS provider’s system (in addition to the Sprint PCS Network) and a wireless analog telecommunications provider’s system only when roaming agreements are in place between Sprint PCS and the other providers. If

we do not have a roaming agreement in place, you may be able to place roaming calls “manually” by using a valid credit card. If there is a gap or other interruption of coverage within a Sprint PCS coverage area that prevents connection with the Sprint PCS network and your dual-mode phone is set to roam automatically when outside Sprint PCS coverage, you may incur roaming fees within a Sprint PCS coverage area. Certain features are not available when roaming. Roaming rates may be different from and higher than the rates you pay for calls within your Sprint PCS Home Service Area and on the Sprint PCS Network. Roaming charges are invoiced according to the practices of the roaming service provider. When roaming, you are subject to the limitation of liability provisions and other applicable rules imposed by the roaming service provider.

Interruption of Service

We may give credit for a continuous interruption of Services for more than 24 hours on a case-by-case basis. Interruptions caused by your negligent or willful actions, or by failure of equipment or service not provided by us, or by causes beyond our reasonable control, do not qualify for credit. We may provide you with an airtime credit of one minute for a call that is disconnected because of transmission limitations caused by atmospheric, geographic or topographic conditions and that you redial within one minute of disconnection. You must notify us within 24 hours of the disconnection to request credit.

Phones and Other Equipment

Phones and other equipment may be purchased and returned as provided in the purchase documents. We are not the manufacturer of the phones or other equipment.

The only warranties on the phones or other equipment are any limited warranties extended by the manufacturers. We have no liability in connection with the phones and other equipment or for the manufacturers’ acts or omissions.

Lost or Stolen Equipment

If your phone or other equipment is lost or stolen, you must notify us by calling Sprint PCS Customer Care. You are responsible for all charges for Services provided to the Number for the lost or stolen equipment before you notify us of the loss or theft. We will deactivate Services to the Number upon notification to us of any loss or theft. You may be required to provide evidence of the loss or theft (for example, a police report or sworn statement). If the equipment is later found, we may require that you exchange it for another phone or other equipment before we reactivate services (if we do reactivate Services), as well as require you to pay a reactivation fee. We will deactivate Services to any Number without prior notice to you if we suspect any unlawful or fraudulent use of the Number. You agree to cooperate reasonably with us in investigating suspected unlawful or fraudulent use.

Caller ID

If you do not want people you call to get the Number assigned to your phone, you must call Sprint PCS Customer Care for information about automatic Caller ID blocking. The Number assigned to your phone can be blocked on a per-call basis by dialing *67 + Destination Number + OK, but Caller ID delivery resumes on the next call you make. Caller ID display on incoming calls to your Number depends on receiving the information from the calling party.

TTY Access

A TTY (also known as TDD or Text Telephone) is a telecommunications device that allows people who are deaf or hard of hearing, or who have speech or language disabilities, to communicate by telephone. It is not possible to use your phone with a TTY.

Pay-Per-Call Service

We will not complete calls from your Number to 900,976 and similar numbers for pay-per-call services.

International Calling

You may be limited in the international destinations that you can call with Services. You should contact Sprint PCS Customer Care for information about international destinations that you cannot call.

Limitation of Liability

Except as otherwise provided in this section, our sole liability to you for any loss or damage arising out of providing or failing to provide Services (including mistakes, omissions, interruptions, delays, errors, or defects) does not exceed (1) in cases related to a specific piece of equipment, the prorated MRC for Services to the piece of equipment during the affected period, or (2) in cases not related to a specific piece of equipment, the prorated MRCs for the Services to you during the affected period. Neither we nor our vendors, suppliers or licensors are liable for any damage arising out of or in connection with:

- a) any act or omission of any telecommunications service or other service provider other than us;
- b) any directory listing;
- c) any dropped calls or inability to place or receive calls;
- d) any interruption of Services, including interruptions caused by equipment or facilities failure or shortages, transmission limitations or system capacity limitations;
- e) traffic or other accidents, or any health-related claims allegedly arising from the use of Services, phones, equipment or accessories used in connection with the Services;

- f) the use of Sprint PCS Wireless Services, including the accuracy or reliability of any information obtained from the Internet using Sprint PCS Wireless Web Services or from Voice Portal Services, or Internet services, content or applications not supported by Sprint PCS;
- g) any late or failed message delivery;
- h) any interruption or failure of 911 or E911 emergency services or identification of the Number, address or name associated with any person accessing or attempting to access emergency services from your phone;
- i) the installation or repair of any products or equipment by parties who are not our authorized employees or agents;
- j) events due to factors beyond our control, including acts of God (including, without limitation, weather-related phenomena, fire or earthquake), war, riot, strike, or orders of governmental authority;
- k) any act or omission of any third party or independent contractor that offers products or services in conjunction with or through the Services, or
- l) your negligent or intentional act or omission.

NO CONSEQUENTIAL OR OTHER DAMAGES

UNDER NO CIRCUMSTANCES ARE WE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL, PUNITIVE OR SPECIAL DAMAGES OF ANY NATURE WHATSOEVER ARISING OUT OF OR IN CONNECTION WITH PROVIDING OR FAILING TO PROVIDE SERVICES, PHONES OR OTHER EQUIPMENT USED IN CONNECTION WITH THE SERVICES, INCLUDING, WITHOUT LIMITATION, LOST PROFITS, LOSS OF BUSINESS, OR COST OF REPLACEMENT PRODUCTS AND SERVICES. THIS SECTION SURVIVES TERMINATION OF THIS AGREEMENT.

Indemnification

You indemnify and defend us, our partners, directors, officers, employees and agents from and against any claim, action, damage, liability and expense arising out of or in connection with: (1) your acts or omissions that occur in connection with your use of the Services or equipment used in connection with the Services, and (2) any communications you make or receive using the Services. This indemnification extends to and includes any attorney's fees and costs incurred by us arising from any actions or claims to which this indemnification applies, or from the contesting of the applicability of this provision. This section survives termination of this Agreement.

ARBITRATION OF DISPUTES

ANY CLAIM, CONTROVERSY OR DISPUTE, WHETHER SOUNDING IN CONTRACT, STATUTE, OR TORT, INCLUDING FRAUD, MISPRESENTATION, OR ANY OTHER LEGAL THEORY, RELATED DIRECTLY OR INDIRECTLY TO THE SERVICES, WHETHER BETWEEN THE COMPANY AND THE CUSTOMER OR BETWEEN THE COMPANY AND THE COSTOMER, ON THE ONE HAND, AND EMPLOYEES, AGENTS OR AFFILIATED BUSINESSES OF THE OTHER PARTY, ON THE OTHER HAND, SHALL BE RESOLVED BY ARBITRATION AS PRESCRIBED IN THIS SECTION. THE FEDERAL ARBITRATION ACT, NOT STATE LAW, GOVERNS THE QUESTION OF WHETHER A CLAIM IS SUBJECT TO ARBITRATION.

A single arbitrator engaged in the practice of law will conduct the arbitration under the rules of the American Arbitration Association. The arbitrator will be selected in accordance with AAA procedures from a list of qualified people maintained by the AAA. All expedited procedures prescribed by the AAA rules will apply, and each party will bear their own costs and attorney's fees.

No discovery will be permitted, excepts that the parties will exchange, thirty days prior to the hearing on their dispute, all documents to be submitted to the arbitrator, including any reports or summaries, and a

list of the names and addresses of those persons to be called to testify. Following exchange of this information, the parties may agree to waive a hearing.

The arbitrator will have authority only to award compensatory damages and will not have authority to award punitive damages, lost profits, or other non-compensatory damages. The arbitrator's decision and award will be final and binding, and judgment on the award rendered by the arbitrator may be entered in any court with jurisdiction. The arbitrator's decision must not contain findings of fact or conclusions of law.

If any party files a judicial or administrative action asserting a claim that is subject to arbitration and another party successfully stays such action or compels arbitration, the party filing that action must pay the other party's costs and expenses incurred in seeking such stay or compelling arbitration, including attorney's fees.

Notices

You may get our current address for written notice by calling Sprint PCS Customer Care. Written notice to you is sent to your last known address in our invoicing records. Written notice is deemed delivered 3 days after deposit in the U.S. mail, postage prepaid, and properly addressed. Unless required by this Agreement or Applicable Laws, (1) you may notify us by calling Sprint PCS Customer Care, and (2) we may notify you by leaving a message for you on your Sprint PCS Phone, answering machine or with your answering service. Notice addresses may be changed by giving notice as provided in this section.

Choice of Law; Jurisdiction

This Agreement is governed by and must be construed under federal law and the laws of the State of Kansas, without regard to choice of law principles. You agree to submit yourself to the personal jurisdiction of the courts in the State of Kansas.

General

If either of us does not enforce any right or remedy available under this Agreement, that failure is not a waiver of the right or remedy for any other breach or failure by the other party. Our waiver of any requirement in any one instance is not a general waiver of that requirement and does not amend this Agreement. If any part of this Agreement is held invalid or unenforceable, that part is interpreted consistent with Applicable Laws as nearly as possible to reflect the original intentions of the parties and the rest of this Agreement remains in full force and effect. Section headings are for descriptive purposes only and are not used to interpret this Agreement. You may not assign this Agreement to any other person or entity without our prior written approval. This Agreement (including any referenced documents and attachments) makes up the entire agreement between you and us and replaces all prior written or spoken agreements, representations, promises or understandings between you and us.

The provisions of this Agreement that are contemplated to be enforceable after the termination of the Agreement survive termination of this Agreement. This Agreement is subject to any applicable federal and state law (collectively, “Applicable Laws”). If there is a conflict, the Service Plan (including any Term Service Plan) controls over the Terms.

The following provisions are not generally applicable and apply only to customers whose Service Plans include these terms:

Traveling

If you are making or receiving calls outside you Home Service Area but on the Sprint PCS Network, you may be charged for Services at a “travel” rate for both outgoing and incoming traveling calls. Long distance charges may not be included in the travel rate. Traveling charges do not apply if you subscribe to a Home Rate USA plan or to both Toll-Free USA and Home Rate USA. (See Home Rate USA and Toll-

Free USA for more information.) You do not have to register your Number when traveling outside your Home Service Area.

Home Rate USA

This service lets you make or receive calls from anywhere on the Sprint PCS Network at your Home Service Area airtime rates.

Toll-Free USA

This Service lets you call from anywhere on the Sprint PCS Network to anywhere in the United States, Puerto Rico and the U.S. Virgin Islands and be charged at your Home Service Area airtime rates, with no additional long distance charges. If you have Home Rate USA but do not have Toll-Free USA, and if you make a long distance call outside of your defined local calling area, you are invoiced for the long distance charges.

Manufacturer's Warranty

Customer Limited Warranty

SPRINT SPECTRUM, L.P., (Sprint PCS) offers you a limited warranty that the enclosed subscriber unit (Product), including accessories in the product package, will be free from defects in material or workmanship as follows:

SUBSCRIBER UNIT:

A. SPRINT PCS ONE (1) YEAR LIMITED WARRANTY: For a period of one (1) year from the date of purchase, Sprint PCS will, at its option, either pay the parts and labor charges to any authorized Sprint PCS Phone™ service facility to repair or replace a defective product (with new or rebuilt parts/replacements). After this one (1) year period, you must pay all parts, shipping and labor charges.

B. REPAIRS: For a period equal to the remainder of the original limited warranty period on an original Product or for the 180 days after the date of repair/replacement, whichever is longer, Sprint PCS will repair or replace (with new or rebuilt replacement) defective parts or Product used in the repair or replacement of the original Product under this Limited Warranty.

Proof of purchase in the form of a bill of sales or receipted invoice warranty repair document which is evidence that the Product is within the warranty period must be presented to obtain warranty service. This limited warranty is not transferable to any third party, including but not limited to any subsequent purchaser or owner of the Products.

Transfer or resale of a Product will automatically terminate warranty coverage with respect to the Products.

This limited warranty does not cover and is void with respect to the following: (i) Products which have been improperly installed, repaired, maintained or modified (including the antenna); (ii) Products which have been subjected to misuse (including Products used in conjunction with hardware electrically or mechanically incompatible or used with

accessories not supplied by Sprint PCS), abuse accident, physical damage, abnormal operation, improper handling and storage, neglect, exposure to fire, water or excessive moisture or dampness or extreme changes in climate or temperature, (iii) Products operated outside published maximum ratings; (iv) cosmetic damage; (v) Products on which warranty stickers or Product serial numbers have been removed, altered, or rendered illegible; (vi) customer instruction; (vii) cost of installation, removal or reinstallation; (viii) signal reception problems (unless caused by defect in material and workmanship); (ix) damage the result of fire, flood, acts of God or other acts which are not the fault of Sprint PCS and which the Product is not specified to tolerate, including damage caused by mishandling and blown fuses; (x) consumables (such as fuses); or (xi) any Products which have been opened, repaired, modified or altered by anyone other than Sprint PCS or a Sprint PCS authorized service center.

This warranty does not cover customer education, instruction, installation, set up adjustments, or signal reception problems.

This warranty is valid only in the United States.

USE WITH ACCESSORIES NOT SUPPLIED BY SPRINT PCS OR OTHERWISE NOT EXPRESSLY AUTHORIZED BY SPRINT PCS MAY BE DANGEROUS.

SPRINT PCS SPECIFICALLY DISCLAIMS LIABILITY, AND SHALL HAVE NO OBLIGATION TO PROVIDE TO BUYER ANY OTHER REMEDY, FOR ANY AND ALL DIRECT, INDIRECT, SPECIAL, GENERAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, INCLUDING, BUT NOT LIMITED TO LOSS OF PROFITS, LOST SALES, LOSS OF USE OF THE PRODUCT, OR ANTICIPATED PROFITS ARISING OUT OF USE OF OR INABILITY TO USE ANY PRODUCT (FOR EXAMPLE, WASTED AIRTIME CHARGES DUE TO THE MALFUNCTION OF A PRODUCT), DAMAGE DUE TO IMPROPER OPERATION OR MAINTENANCE, INSTALLATION, CONNECTION TO IMPROPER VOLTAGE SUPPLY. OR ATTEMPTED REPAIR OF THE PRODUCT BY ANYONE OTHER THAN A FACILITY AUTHORISED BY SPRINT PCS. THIS WARRANTY DOES NOT COVER

PRODUCTS SOLD AS IS OR WITH ALL FAULTS, OR CONSUMABLES, (SUCH AS FUSES). THIS WARRANTY DOES NOT APPLY WHEN THE MALFUNCTION RESULTS FROM USE OF THE PRODUCT IN CONJUNCTION WITH ACCESSORIES, PRODUCTS OR ANCILLARY OR PERIPHERAL EQUIPMENT NOT SUPPLIED BY OR EXPRESSLY AUTHORIZED FOR USE BY SPRINT PCS, AND WHERE IT IS DETERMINED BY SPRINT PCS THAT THERE IS NO FAULT WITH THE PRODUCT ITSELF.

REPAIR OR REPLACEMENT, AS PROVIDED UNDER THE WARRANTY, IS YOUR SOLE AND EXCLUSIVE REMEDY FOR BREACH OF THE LIMITED WARRANTY. TO THE EXTENT PERMITTED BY APPLICABLE LAW, SPRINT PCS MAKES NO OTHER WARRANTIES OF ANY KIND, EXPRESS OR IMPLIED, WITH RESPECT TO THE PRODUCTS FOR A PARTICULAR PURPOSE OR AGAINST INFRINGEMENT WITHIN THE TIME PERIOD SPECIFIED IN THE LIMITED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some States do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty last, so the above limitations or exclusions may not apply to you.

This limited warranty gives you specific legal rights, and you may have other rights which vary from the State to State.

For other Warranty Service Information, please call SPRINT PCS CUSTOMER CARE at 1-888-211-4727.

