



DIGITAL PORTABLE RADIO  
PD68X OWNER'S MANUAL

Welcome to the world of Hytera and thank you for purchasing this product. This manual includes a description of the functions and step-by-step procedures for use. It also includes a troubleshooting guide. To avoid bodily injury or property loss caused by incorrect operation, please carefully read the *Safety Information Booklet* before use.

This manual is applicable to the following product:

PD68X Digital Portable Radio (X may represent 2, 5, 6 or 8).

DIGITAL PORTABLE RADIO



## Copyright Information

Hytera is the trademark or registered trademark of Hytera Communications Corporation Limited (the Company) in the People's Republic of China (PRC) and/or other countries or areas. The Company retains the ownership of its trademarks and product names. All other trademarks and/or product names that may be used in this manual are properties of their respective owners.

The product described in this manual may include the Company's computer programs stored in memory or other media. Laws in PRC and/or other countries or areas protect the exclusive rights of the Company with respect to its computer programs. The purchase of this product shall not be deemed to grant, either directly or by implication, any rights to the purchaser regarding the Company's computer programs. The Company's computer programs may not be copied, modified, distributed, decompiled, or reverse-engineered in any manner without the prior written consent of the Company.

## Disclaimer

The Company endeavors to achieve the accuracy and completeness of this manual, but no warranty of accuracy or reliability is given. All the specifications and designs are subject to change without notice due to continuous technological development. No part of this manual may be copied, modified, translated, or distributed in any manner without the prior written consent of the Company.

We do not guarantee, for any particular purpose, the accuracy, validity, timeliness, legitimacy or completeness of the third-party products and contents involved in this manual.

If you have any suggestions or would like to receive more information, please visit our website at: <http://www.hytera.com>.

## FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates and can radiate radio frequency energy. If not installed and used in accordance with the instructions, it may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. Verification of harmful interference by this equipment to radio or television reception can be determined by turning it off and then on. The user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a different circuit to that of the receiver's outlet.
- Consult the dealer or an experienced radio/TV technician for help.

Operation is subject to the following two conditions:

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.

Note: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## Compliance with RF Exposure Standards

Hytera's radio complies with the following RF energy exposure standards and guidelines:

- United States Federal Communications Commission, Code of Federal Regulations; 47 CFR § 1.1307, 1.1310 and 2.1093
- American National Standards Institute (ANSI) / Institute of Electrical and Electronic Engineers (IEEE) C95.1:2005; Canada RSS102 Issue 5 March 2015
- Institute of Electrical and Electronic Engineers (IEEE) C95.1:2005 Edition

## RF Exposure Compliance and Control Guidelines and Operating Instructions

To control your exposure and ensure compliance with the occupational/controlled environmental exposure limits, always adhere to the following procedures.

Guidelines:

- Do not remove the RF Exposure Label from the device.
- User awareness instructions should accompany device when transferred to other users.
- Do not use this device if the operational requirements described herein are not met.

Operating Instructions:

- Transmit no more than the rated duty factor of 50% of the time. To transmit (talk), press the **Push-To-Talk (PTT)** key. To receive calls, release the **PTT** key. Transmitting 50% of the time, or less, is important because the radio generates measurable RF energy only when transmitting (in terms of measuring for standards compliance).
- Keep the radio unit at least 2.5 cm away from the face. Keeping the radio at the proper distance is important as RF exposure decreases with distance from the antenna. The antenna should be kept away from the face and eyes.
- When worn on the body, always place the radio in a Hytera-approved holder, holster, case, or body harness or by use of the correct clip for this product. Use of non-approved accessories may result in exposure

levels which exceed the FCC's occupational/controlled environmental RF exposure limits.

- Use of non-approved antennas, batteries, and accessories causes the radio to exceed the FCC RF exposure guidelines.
- Contact your local dealer for the product's optional accessories.

## ISED Statement

The device has been tested and complies with SAR limits, users can obtain Canadian information on RF exposure and compliance.

Après examen de ce matériel aux conformité aux limites DAS et/ou aux limites d'intensité de champ RF, les utilisateurs peuvent sur l'exposition aux radiofréquences et la conformité and compliance d'acquérir les informations correspondantes

This device complies with Innovation, Science and Economic Development Canada Compliance license-exempt RSS standard(s).

Operation is subject to the following two conditions:

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.

Le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada *applicables aux appareils radio*. xempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

(1) l'appareil ne doit pas produire de brouillage,  
et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement

## EU Regulatory Conformance

As certified by the qualified laboratory, the product is in compliance with the essential requirements and other relevant provisions of the following directives: 1999/5/EC or 2014/53/EU, 2006/66/EC, 2011/65/EU, and 2012/19/EU.

Please note that the above information is applicable to EU countries only.

# Contents



<b>Documentation Conventions</b> .....	<b>3</b>
<b>Packing List</b> .....	<b>4</b>
<b>Product Overview</b> .....	<b>5</b>
Product Controls .....	5
Programmable Keys .....	6
<b>Before Use</b> .....	<b>6</b>
Charging the Battery .....	6
Attaching the Battery .....	7
Attaching the Antenna .....	7
Attaching the Belt Clip .....	7
Attaching the Audio Accessories .....	7
<b>Basic Operations</b> .....	<b>8</b>
Turning On/Off the Radio .....	8
Adjusting the Volume .....	8
Checking the Battery Power .....	8
Locking or Unlocking Keys and Knobs .....	9
Using the Keypad .....	9
Switching the Operation Mode .....	9
Selecting a Zone and Channel .....	10
<b>Status Indications</b> .....	<b>10</b>
LCD Icons .....	10
LED Indications .....	12
<b>Call Services</b> .....	<b>13</b>

Group Call .....	13
Private Call .....	15
Phone Call .....	16
All Call .....	18
Broadcast Call (Trunking Only) .....	20
Include Call (Trunking Only) .....	21
Analog Call (Conventional Only) .....	21
<b>Message Services</b> .....	<b>22</b>
Viewing a Message .....	22
Sending a Message .....	22
Deleting a Message .....	23
<b>Supplementary Features</b> .....	<b>23</b>
Basic Settings .....	24
Contact Management .....	26
Audio Optimization .....	26
MIC & SPK .....	28
One Touch Call/Menu .....	28
Scan .....	29
Hunt .....	30
Roam .....	31
Talk Around .....	31
TOT .....	31
VOX .....	32
Call Divert .....	32
Call Priority .....	32
DGNA .....	32

GPS .....	33
Work Order .....	34
Data Query .....	34
Control Services .....	35
Analog Services .....	36
Personal Safety Services .....	36
Communication Security Services .....	38
<b>Troubleshooting .....</b>	<b>40</b>
<b>Care and Cleaning .....</b>	<b>42</b>
Product Care .....	42
Product Cleaning .....	42
<b>Optional Accessories .....</b>	<b>42</b>
<b>Abbreviations .....</b>	<b>43</b>

# Documentation Conventions

## Icon Conventions

Icon	Description
 <b>Note</b>	Indicates references that can further describe the related topics.
 <b>Caution</b>	Indicates situations that could cause data loss or equipment damage.

## Notation Conventions

Item	Description	Example
<b>Boldface</b>	Denotes menus, tabs, parameter names, window names, dialogue names, and hardware buttons.	To save the configuration, click <b>Apply</b> .
		The <b>Log Level Settings</b> dialogue appears.
		Press the <b>PTT</b> key.

Item	Description	Example
" "	Denotes messages, directories, file names, folder names, and parameter values.	The screen displays "Invalid Battery!".
		Open "PDT_PSS.exe".
		Go to "D:/opt/local".
		In the <b>Port</b> text box, enter "22".
>	Directs you to access a multi-level menu.	Go to <b>File &gt; New</b> .
<i>Italic</i>	Denotes document titles.	For details about using the DWS, refer to <i>Dispatch Workstation User Guide</i> .
Courier New	Denotes commands and their execution results.	To set the IP address, run the following command: <code>vos-cmd - m name IP</code>



## Packing List

Please unpack carefully and check that all items listed below are received. If any item is missing or damaged, please contact your dealer.

Item	Quantity (PCS)	Item	Quantity (PCS)
Radio	1	Antenna	1
Battery	1	Belt Clip	1
Charger	1	Strap	1
Power Adapter	1	Documentation Kit	1




### Note

Check whether the frequency band marked on the antenna label matches that on the radio label. If not, please contact your dealer.

# Product Overview

## Product Controls

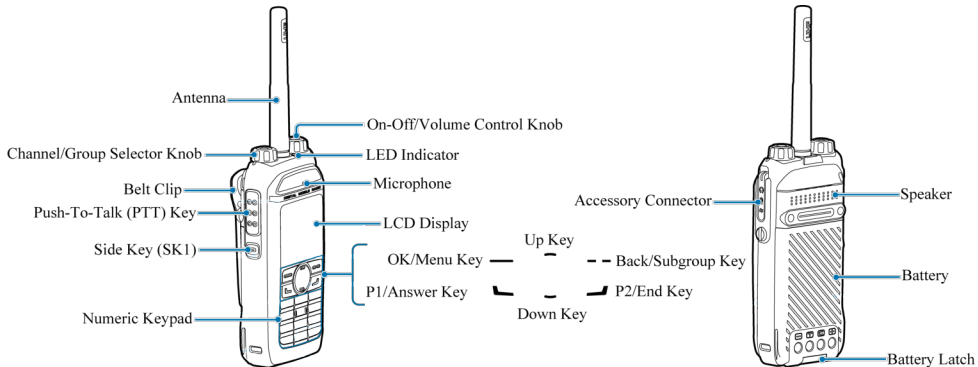

## Programmable Keys

You can request your dealer to program your radio to use the following keys as shortcuts to radio features:

- Conventional mode: **SK1**, **P1** key, **P2** key, **Up** key, and **Down** key.
- Trunking mode: **SK1**, **Up** key, and **Down** key.

Please consult your dealer for assignable radio features.

## Before Use

## Charging the Battery

### Caution

- Use the charger specified by the Company to charge the battery.
- Read the *Safety Information Booklet* before charging.

The new battery is uncharged. Before initial use, fully charge the battery to ensure optimum performance.

To charge the battery, do as follows:

1. Insert the output connector of the power adapter into the port on the back of the charger.
2. Plug the power adapter into a power outlet that is off.
3. Place the battery into the charger, and then switch the power outlet on.

To determine the charging status, check the light-emitting diode (LED) indicator on the charger according to the following table:

LED Indicator	Charging Status
Flashes red slowly	The battery fails to make proper contact with the charger.
Glows red	The battery is charging.
Glows orange	The battery is charged to 90% or above.
Glows green	The battery is fully charged.
Flashes red rapidly	The battery fails to be charged.


If the LED indicator flashes red slowly, take the battery out of the charger, and then replace it into the charger for proper contact.

If the LED indicator flashes red rapidly, please contact your dealer to check whether the battery or power adapter is damaged.

### Note

You can also charge the radio with battery attached. It is recommended that your radio remains powered off during charging.

## Attaching the Battery

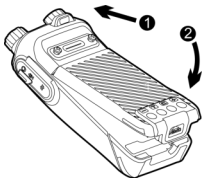

### Note

To remove the battery, make sure that the radio is turned off, and then slide the battery latch upwards to unlock the battery.

## Attaching the Antenna




### Caution

Do not hold the radio by the antenna, as it may reduce the radio performance and life span of the antenna.

## Attaching the Belt Clip

1. Use a Phillips screwdriver to turn the screws counter-clockwise on the back of the radio and remove them.
2. Align the screw holes on the belt clip with those on the back of the radio.
3. Put the screws back in place as shown below, and use the Phillips screwdriver to turn them clockwise until hand tight.

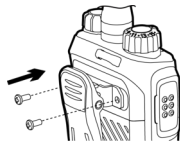

## Attaching the Audio Accessories

### Note

For optimal waterproof and dustproof performance, do close the accessory connector cover and fasten the screw when no accessory is attached.

1. Loosen the screw fixing the accessory connector cover as shown below, and open the cover.




2. Align the accessory plug with the accessory connector, and then tighten the screw on the accessory plug as shown below.




## Basic Operations

### Turning On/Off the Radio

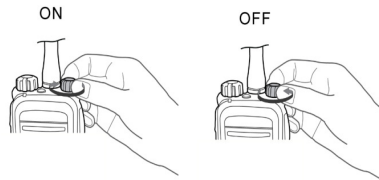



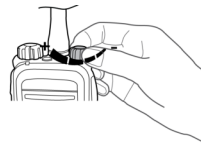


### Adjusting the Volume



### Checking the Battery Power

To check the battery power, press and hold the preprogrammed **Battery Power Indicator** key. The following table lists the battery power


indications. The icon  indicates that the battery runs low. In this case, please recharge or replace the battery.

Icon	LED Indication/Tone
	The LED indicator glows green.
	The LED indicator glows orange.
	The LED indicator glows red.
	The LED indicator glows red and an alert tone sounds.

## Locking or Unlocking Keys and Knobs

When the keypad is not in use, it is recommended that you lock it to avoid accidental operations.

To lock or unlock the keypad, do one of the following from the home screen:

- Press the preprogrammed **Keypad Lock** key.
- Press the **OK/Menu** key and then press .





To allow the keypad to be locked automatically, enable the Keypad Lock feature as follows:

1. Go to **Menu > Settings > Radio Set > Keypad Lock**.
2. Select **Enable**, and set **Delay Time** by pressing the **Up** or **Down** key.

In addition, you can go to **Menu > Settings > Radio Set > Optional Key** to set whether the corresponding keys and knobs still work when the keypad is locked.

## Using the Keypad

You can use the keypad to enter user aliases or IDs and text messages.

- To switch the input method between alphabetic mode and numeric mode, press .
- To enter special characters, press  in alphabetic mode or  in numeric mode.
- To enter a space, press  in alphabetic mode.

## Switching the Operation Mode

The radio can operate in conventional mode or trunking mode. In conventional mode, you can receive and transmit voice and data after selecting the required channel. In trunking mode, you can receive and transmit voice and data after the radio registers successfully.

To switch the operation mode, do one of the following:

- Go to **Menu > Mode > Manual Switch**, and then select the required mode.
- Press the preprogrammed **Operation Mode Switch** key.

To allow the radio to automatically switch to a mode based on signal strength, go to **Menu > Mode > Auto Switch**, and then select **Enable**.

## Selecting a Zone and Channel

In conventional mode, the radio receives and transmits data and voice on the selected channel. A zone is a group of channels within the same operational area. Before selecting a channel, make sure that the current zone contains the channel.

To select a zone, do one of the following:

- Go to **Menu > Zone**, and then select the required zone.
- Press the preprogrammed **Zone Up** or **Zone Down** key.

To select a channel, do one of the following:


- Rotate the **Channel Selector** knob.
- Press the preprogrammed **Channel Up** or **Channel Down** key.

## Status Indications





### LCD Icons













The following tables list icons that may appear on the radio's liquid-crystal display (LCD).






### Operation Mode Icons

Icon	Radio Status
<b>DM</b>	Direct Mode: The radio operates in conventional mode and transmits and receives directly.
<b>RM</b>	Repeater Mode: The radio operates in conventional mode and transmits and receives through a repeater.
<b>TM-DW</b>	Trunking Mode - Digital Wide: The radio operates in trunking mode and registers with multiple BSs connected through the network.
<b>TM-DL</b>	Trunking Mode - Digital Local: The radio operates in trunking mode and registers with a single BS.
	The Mode Automatic Switch feature is enabled.






### Basic Status Icons

Icon	Radio Status
	The Dual-Tone Multi-Frequency (DTMF) keypad is enabled.
	The number of bars indicates the charge left in the battery.
	There is no signal in conventional or <b>TM-DW</b> mode.
	The number of bars indicates the signal strength in conventional or <b>TM-DW</b> mode.

Icon	Radio Status
	There is no signal in <b>TM-DL</b> mode.
	The number of bars indicates the signal strength in <b>TM-DL</b> mode.
	The radio is set at high power.
	The radio is set at low power.
	An accessory is connected.
	The Global Positioning System (GPS) feature is enabled, and the radio receives GPS data.
	The GPS feature is enabled, but the radio receives no GPS data.
	The radio is in emergency mode.
	The radio is roaming.
	The Scrambler or Encrypt feature is enabled.
	The radio is scanning or hunting.
	The radio stays on a non-priority channel.
P <sub>1</sub>	The radio stays on priority channel 1.
P <sub>2</sub>	The radio stays on priority channel 2.









Icon	Radio Status
	The Voice Operated Transmit (VOX) feature is enabled.
	The Monitor feature is enabled.
	The speaker is turned on.
	The radio operates in silent mode.
	The Loudness and Quality Optimizer (LQO) feature is enabled.

### Short Data Icons

Icon	Radio Status
	There is/are unread short message(s).
	The Inbox is full.
	There is/are unread status message(s).
	There is/are unread work order(s).
	The work order list is full.



## Call Icons

Icon	Radio Status
	There is/are alert call(s).
	There is/are missed call(s).
	The Call Divert feature is enabled.
	A half-duplex private call is in progress.
	A private call is in progress or a private contact is in the contact list.
	A group call is in progress or a group contact is in the contact.
	An all call is in progress.
	An include call is in progress.

## LED Indications

LED Indicator	Radio Status
Flashes green	Being turned on.
Flashes green slowly	Standby in trunking mode.
Glow green	Receiving.
Glow red	Transmitting.

LED Indicator	Radio Status
Flashes red	Establishing a call in trunking mode. This indication is applicable to the calling radio.
Flashes orange slowly	Scanning, hunting, or roaming.
Flashes orange rapidly	<ul style="list-style-type: none"><li>● Conventional mode: Working in emergency mode.</li><li>● Trunking mode: Establishing a Full Off Air Call Set-Up (FOACSU) call. This indication is applicable to the called radio.</li></ul>
Glow orange	Call hang time: No voice is being transmitted or received on the channel during a call. Within such a period, you can press and hold the <b>PTT</b> key and speak.

## Call Services

You can initiate various types of calls in different manners. When initiating a call in Manual Dial manner in trunking mode, you need to enter a number complying with the dial rule. For the detailed dial rule, please consult your dealer.

When you are speaking during a call, keep the microphone about 2.5 to 5 cm away from your mouth. This ensures optimal voice quality on the receiving radio.







## Group Call





A group call is a call from an individual user in a group to other members in the group.

## Initiating a Group Call



The following table describes how to initiate a group call in conventional mode and trunking mode.

Mode	Manner	Operation
Conventional	Preset Contact	<ol style="list-style-type: none"><li>1. Rotate the <b>Channel Selector</b> knob to select the channel associated with the target group contact.</li><li>2. Press and hold the <b>PTT</b> key to initiate the call.</li></ol>
	Contact List / Favorites	<ol style="list-style-type: none"><li>1. Go to <b>Menu &gt; Contact &gt; Contact List / Favorites</b>.</li><li>2. Select the target group contact.</li><li>3. Press and hold the <b>PTT</b> key to initiate the call.</li></ol>
	Manual Dial	<ol style="list-style-type: none"><li>1. Go to <b>Menu &gt; Contact &gt; Manual Dial</b>.</li><li>2. Press <b>[#*]</b> to switch the input mode to <b>Group ID</b>.</li><li>3. Enter the target group ID using the keypad.</li><li>4. Press and hold the <b>PTT</b> key to initiate the call.</li></ol>
Trunking	Preset Contact	<ol style="list-style-type: none"><li>1. Rotate the <b>Group Selector</b> knob to</li></ol>

Mode	Manner	Operation
		<ol style="list-style-type: none"> <li>select the target group contact.</li> <li>Press and hold the <b>PTT</b> key to initiate the call.</li> </ol>
	Favorites	<ol style="list-style-type: none"> <li>Go to <b>Menu &gt; Contact &gt; Favorites</b>.</li> <li>Select the target group contact.</li> <li>Press  or press and hold the <b>PTT</b> key to initiate the call.</li> </ol>
	Subgroup	<ol style="list-style-type: none"> <li>Press the preprogrammed <b>Subgroup</b> key or go to <b>Menu &gt; Subgroup</b>.</li> <li>Select the required subgroup, and then select <b>Member</b>.</li> <li>Select the target group contact.</li> <li>Press  or press and hold the <b>PTT</b> key to initiate the call.</li> </ol>
	Manual Dial	<ol style="list-style-type: none"> <li>Go to <b>Menu &gt; Settings &gt; Radio Set &gt; Keypad Mode</b>, and then select <b>Enable</b>.</li> <li>From the home screen, enter the group call number using the keypad.</li> <li>Press  or  or press and hold the <b>PTT</b> key to initiate the call.</li> </ol>

Mode	Manner	Operation
	ReDial/BackDial Call Log	<ol style="list-style-type: none"> <li>From the home screen, press  or  (if preprogrammed as the <b>ReDial</b> or <b>BackDial</b> key).</li> <li>Select the target group contact from the list.</li> <li>Press  or press and hold the <b>PTT</b> key to initiate the call.</li> </ol>
Conventional/ Trunking	Call Log	<ol style="list-style-type: none"> <li>Go to <b>Menu &gt; Call Logs &gt; Outgoing/Incoming/Missed &gt; Outgoing List / Incoming List / Missed List</b>.</li> <li>Select the target group contact.</li> <li>Press  or press and hold the <b>PTT</b> key to initiate the call.</li> </ol>

## Receiving a Group Call

When you receive a group call, the radio displays . The call is established automatically. In trunking mode, the radio displays  after the call is established successfully.

## Ending a Group Call

A group call ends when no party speaks in call hang time.

In trunking mode, a group call also ends in any of the following cases:

- The calling party ends the call.
- The call duration exceeds the period preset by your dealer.
- A preemptive or emergency call interrupts the call.
- The base station signal is lost.

## Private Call







A private call is a call from an individual user to another individual user.

### Initiating a Private Call

The following table describes how to initiate a private call in conventional mode and trunking mode.


Mode	Manner	Operation
Conventional	Preset Contact	<ol style="list-style-type: none"> <li>1. Rotate the <b>Channel Selector</b> knob to select the channel associated with the target private contact.</li> <li>2. Press and hold the <b>PTT</b> key to initiate the call.</li> </ol>
	Contact List / Favorites	<ol style="list-style-type: none"> <li>1. Go to <b>Menu &gt; Contact &gt; Contact List / Favorites</b>.</li> <li>2. Select the target private contact.</li> <li>3. Press and hold the <b>PTT</b> key to initiate the call.</li> </ol>

Mode	Manner	Operation
Conventional	Manual Dial	<ol style="list-style-type: none"> <li>1. Go to <b>Menu &gt; Contact &gt; Manual Dial</b>.</li> <li>2. Press <b>[**]</b> to switch the input mode to <b>Private ID</b>.</li> <li>3. Enter the target private ID using the keypad.</li> <li>4. Press and hold the <b>PTT</b> key to initiate the call.</li> </ol>
		Preset Contact
Trunking	Favorites / Private Contact	<ol style="list-style-type: none"> <li>1. Go to <b>Menu &gt; Contact &gt; Favorites / Private Contact</b>.</li> <li>2. Select the target private contact.</li> <li>3. Press <b>[ ]</b> or press and hold the <b>PTT</b> key to initiate the call.</li> </ol>
	Manual Dial	<ol style="list-style-type: none"> <li>1. Go to <b>Menu &gt; Settings &gt; Radio Set &gt; Keypad Mode</b>, and then select <b>Enable</b>.</li> <li>2. From the home screen, enter the private call number using the keypad.</li> </ol>

Mode	Manner	Operation
		3. Press  or  or press and hold the <b>PTT</b> key to initiate the call.
	ReDial/BackDial Call Log	<ol style="list-style-type: none"> <li>1. From the home screen, press  or  (if preprogrammed as the <b>ReDial</b> or <b>BackDial</b> key).</li> <li>2. Select the target private contact from the list.</li> <li>3. Press  or press and hold the <b>PTT</b> key to initiate the call.</li> </ol>
Conventional/ Trunking	Call Log	<ol style="list-style-type: none"> <li>1. Go to <b>Menu &gt; Call Logs &gt; Outgoing/Incoming/Missed &gt; Outgoing List / Incoming List / Missed List</b>.</li> <li>2. Select the target private contact.</li> <li>3. Press  or press and hold the <b>PTT</b> key to initiate the call.</li> </ol>





## Receiving a Private Call

### Conventional Mode

When you receive a private call, the radio displays . The call is established automatically.

### Trunking Mode

Depending on the system settings, you can answer a private call in one of the following ways:

- **FOACSU**  
When you receive a private call, the radio displays . Press  or press and hold the **PTT** key within the preset period to answer the call. After the call is established successfully, the radio displays .
- **Off Air Call Set-Up (OACSU)**  
When you receive a private call, the radio displays . The call is established automatically.

### Ending a Private Call

A private call ends when no party speaks in call hang time.

In trunking mode, a private call also ends in any of the following cases:

- The calling or called party ends the call.
- The call duration exceeds the period preset by your dealer.
- A preemptive or emergency call interrupts the call.
- The base station signal is lost.


### Phone Call




In conventional mode, you can initiate or receive a call to or from a Public Switched Telephone Network (PSTN) terminal. In trunking mode, you can





initiate or receive a call to or from a PSTN or Private Automatic Branch eXchange (PABX) terminal.

## Initiating a Phone Call

The following table describes how to initiate a phone call in conventional mode and trunking mode.

Mode	Manner	Operation
Conventional	Manual Dial	<ol style="list-style-type: none"> <li>Go to <b>Menu &gt; Phone &gt; DTMF Keypad</b>, and then select <b>Enable</b>.</li> <li>Access the phone system in one of the following manner: <ul style="list-style-type: none"> <li>From the home screen, enter the preprogrammed connect code using the keypad, and then press and hold the <b>PTT</b> key.</li> <li>If the One-Key Connect feature is enabled, press  to transmit the connect code.</li> </ul> <p>After accessing the phone system successfully, the radio enters the DTMF Dial mode.</p> </li> <li>From the home screen, enter the phone number using the keypad.</li> </ol>

Mode	Manner	Operation
		<ol style="list-style-type: none"> <li>Press and hold the <b>PTT</b> key to initiate the call.</li> </ol>
	Contact List	<ol style="list-style-type: none"> <li>Enable the DTMF keypad and access the phone system as described above.</li> <li>Go to <b>Menu &gt; Phone &gt; Phone Contact</b>, and then select the target phone contact.</li> <li>Press and hold the <b>PTT</b> key to initiate the call.</li> </ol>
	Favorites / Private Contact	<ol style="list-style-type: none"> <li>Go to <b>Menu &gt; Contact &gt; Favorites / Private Contact</b>.</li> <li>Select the target phone contact.</li> <li>Press  or press and hold the <b>PTT</b> key to initiate the call.</li> </ol>
Trunking	Manual Dial	<ol style="list-style-type: none"> <li>Go to <b>Menu &gt; Settings &gt; Radio Set &gt; Keypad Mode</b>, and then select <b>Enable</b>.</li> <li>From the home screen, enter the phone number using the keypad.</li> <li>Press  or  or press and hold the <b>PTT</b> key to initiate the call.</li> </ol>
	Call Log	<ol style="list-style-type: none"> <li>Go to <b>Menu &gt; Call Logs &gt; Outgoing/Incoming/Missed &gt; Outgoing List / Incoming List / Missed</b></li> </ol>

Mode	Manner	Operation
		<p><b>List.</b></p> <ol style="list-style-type: none"> <li>2. Select the target phone contact.</li> <li>3. Press  or press and hold the <b>PTT</b> key to initiate the call.</li> </ol>
	ReDial/BackDial Call Log	<ol style="list-style-type: none"> <li>1. From the home screen, press  or  (if preprogrammed as the <b>ReDial</b> or <b>BackDial</b> key).</li> <li>2. Select the target phone contact from the list.</li> <li>3. Press  or press and hold the <b>PTT</b> key to initiate the call.</li> </ol>




## Receiving a Phone Call

### Conventional Mode

When receiving a call from a phone, you need to transmit the preprogrammed connect code to access the telephone system as described in Initiating a Phone Call.

After the radio accesses the telephone system successfully, the call is established automatically.

### Trunking Mode

When you receive a call from a phone, the radio displays . To answer the call, press  or press and hold the **PTT** key within the preset period. After the call is established successfully, the radio displays .

### Ending a Phone Call

In conventional mode, a phone call ends in any of the following cases:

- You transmit the preprogrammed disconnect code in the same way as the connect code.
- The phone user hangs up.

In trunking mode, a phone call ends in any of the following cases:

- The calling or called party ends the call.
- The call duration exceeds the period preset by your dealer.
- A preemptive or emergency call interrupts the call.
- The base station signal is lost.

## All Call

### Conventional Mode

An all call is a call from an individual user to all other users on the current channel.

## Trunking Mode

An all call is a call from an individual user to all other users in a specific BS, area, or system.

According to whether the called party can respond, the all call is classified into the following two types:

- Broadcast All Call: The called party cannot respond to the call.
- General All Call: The called party can respond to the call.

To set the type, go to **Menu > Settings > Radio Set > All Call**, and then select **Broadcast Call** or **General Call**.



### Note

The radio must be authorized by your dealer for you to initiate an all call.


## Initiating an All Call

The following table describes how to initiate an all call in conventional mode and trunking mode.

Mode	Manner	Operation
Conventional	Preset Contact	<ol style="list-style-type: none"><li>1. Rotate the <b>Channel Selector</b> knob to select the channel associated with the all call contact.</li><li>2. Press and hold the <b>PTT</b> key to initiate the call.</li></ol>
	Contact List	<ol style="list-style-type: none"><li>1. Go to <b>Menu &gt; Contact &gt; Contact List</b>.</li><li>2. Select the all call contact.</li><li>3. Press and hold the <b>PPT</b> key to initiate the call.</li></ol>
Trunking	Manual Dial	<ol style="list-style-type: none"><li>1. Go to <b>Menu &gt; Settings &gt; Radio Set &gt; Keypad Mode</b>, and then select <b>Enable</b>.</li><li>2. From the home screen, enter the all call number using the keypad.</li><li>3. Press  or  or press and hold the <b>PTT</b> key to initiate the call.</li></ol>
	ReDial Call Log	<ol style="list-style-type: none"><li>1. From the home screen, press  (if preprogrammed as the <b>ReDial</b> key).</li><li>2. Select the all call log from the list.</li><li>3. Press  or press and hold the <b>PTT</b> key to initiate the call.</li></ol>



## Receiving an All Call

When you receive an all call, the radio displays , and the call is established automatically.

## Ending an All Call

In conventional mode, an all call ends when the Time-out Timer (TOT) expires.

In trunking mode, an all call ends in any of the following cases:





- The calling party ends the call.
- The call duration exceeds the period preset by your dealer.
- A preemptive or emergency call interrupts the call.
- The base station signal is lost.





## Broadcast Call (Trunking Only)

A broadcast call is a special group call to which the called party cannot respond. The radio must be authorized by your dealer for you to initiate a broadcast call.



## Initiating a Broadcast Call

The following table describes how to initiate a broadcast call.

Manner	Operation
Favorites	<ol style="list-style-type: none"><li>1. Go to <b>Menu &gt; Contact &gt; Favorites</b>.</li><li>2. Select the target group contact, and then press the <b>OK/Menu</b> key.</li><li>3. Select <b>Call Type</b>, and then select <b>Broadcast Call</b>.</li><li>4. Press  or press and hold the <b>PTT</b> key to initiate the call.</li></ol>
Subgroup	<ol style="list-style-type: none"><li>1. Press the preprogrammed <b>Subgroup</b> key or go to <b>Menu &gt; Subgroup</b>.</li><li>2. Select the required subgroup, and then select <b>Member</b>.</li><li>3. Select the target group contact, and then press the <b>OK/Menu</b> key.</li><li>4. Select <b>Call Type</b>, and then select <b>Broadcast Call</b>.</li><li>5. Press  or press and hold the <b>PTT</b> key to initiate the call.</li></ol>
Manual Dial	<ol style="list-style-type: none"><li>1. Go to <b>Menu &gt; Settings &gt; Radio Set &gt; Keypad Mode</b>, and then select <b>Enable</b>.</li><li>2. From the home screen, enter the broadcast call number using the keypad.</li><li>3. Press  or  or press and hold the <b>PTT</b> key to initiate the call.</li></ol>
Call Log	<ol style="list-style-type: none"><li>1. Go to <b>Menu &gt; Call Logs &gt; Outgoing/Incoming/Missed &gt; Outgoing List /</b></li></ol>

Manner	Operation
	<p><b>Incoming List / Missed List.</b></p> <ol style="list-style-type: none"> <li>2. Select the target group contact, and then press the <b>OK/Menu</b> key.</li> <li>3. Select <b>Call Type</b>, and then select <b>Broadcast Call</b>.</li> <li>4. Press  or press and hold the <b>PTT</b> key to initiate the call.</li> </ol>
ReDial/BackDial Call Log	<ol style="list-style-type: none"> <li>1. From the home screen, press  or  (if preprogrammed as the <b>ReDial</b> or <b>BackDial</b> key).</li> <li>2. Select the target group contact from the list, and then press the <b>OK/Menu</b> key.</li> <li>3. Select <b>Call Type</b>, and then select <b>Broadcast Call</b>.</li> <li>4. Press  or press and hold the <b>PTT</b> key to initiate the call.</li> </ol>

## Receiving a Broadcast Call

When you receive a broadcast call, the radio displays . The call is established automatically. In trunking mode, the radio displays  after the call is established successfully.

## Ending a Broadcast Call

A broadcast call ends in any of the following cases:

- The calling party ends the call.
- The call duration exceeds the period preset by your dealer.

- A preemptive or emergency call interrupts the call.
- The base station signal is lost.

## Include Call (Trunking Only)

An include call is a call initiated to another group in call hang time of an ongoing group call, so that the group joins the ongoing call. The radio must be authorized by your dealer for you to initiate an include call.

For operations of the include call, see "Group Call" on page 13.

## Analog Call (Conventional Only)

In conventional mode, you can initiate or receive a call on an analog channel with or without signaling.

## Call Without Signaling

A call without signaling is a call initiated to all other users on an analog channel without signaling.

To initiate a call without signaling, do as follows:

1. Rotate the **Channel Selector** knob to select the required channel.
2. Press and hold the **PTT** key, and speak into the microphone.

## Call With Signaling

A call with signaling is a call initiated to a specific contact on an analog channel with signaling.

To initiate a call with signaling, do as follows:

1. Rotate the **Channel Selector** knob to select the required channel.
2. Go to **Menu > Contact > Contact List**, and then select the target contact.
3. Press and hold the **PTT** key, and speak into the microphone.

## Message Services

The Message feature allows you to send and receive the following types of messages in trunking mode or on a digital channel in conventional mode:

- New messages: messages created using the keypad.
- Quick text messages: frequently used messages predefined by your dealer but editable.
- Status messages (trunking only): frequently used messages predefined by your dealer and not editable.

## Viewing a Message

To view a newly received message, directly press the **OK/Menu** key.

To view a received message from the Inbox, a sent message, or a saved message, go to **Menu > Message > InBox/OutBox/Drafts > Inbox List / Outbox List / Drafts List**, and then select the required message.

## Sending a Message

### Sending a New Message

1. Go to **Menu > Message > New Msg**, and then type the text using the keypad.
2. Press the **OK/Menu** key, and then select **Send**.
3. Select the target contact, and then press the **OK/Menu** key.

---

#### Note

Instead of directly sending the new message, you can also select **Save** in conventional mode or select **Save to Drafts** or **Save to QuickText** in trunking mode to save the new message, and send it later.

---

### Sending a Quick Text Message

1. Go to **Menu > Message > Quick Text**, and then select the required quick text message.
2. (Optional) Edit the message, and then press the **OK/Menu** key.
3. Select **Send**, and then select the target contact.
4. Press the **OK/Menu** key.

## Sending a Status Message

1. Go to **Menu > Message > Status Msg**, and then select the required status message.
2. Press the **OK/Menu** key, and then select the target contact.
3. Press the **OK/Menu** key.

## Deleting a Message

To delete a message from the InBox, OutBox, or Drafts, do as follows:

1. Go to **Menu > Message > InBox/OutBox/Drafts > Inbox List / Outbox List / Drafts List**.
2. Select the required message, and then press the **OK/Menu** key.
3. Select **Delete**, and then press the **OK/Menu** key.

To delete all messages from the InBox, OutBox, or Drafts, do as follows:

1. Go to **Menu > Message > InBox/OutBox/Drafts**.
2. Select **Delete All**, and then press the **OK/Menu** key.

## Supplementary Features

The supplementary features of the radio vary with the operation mode. For details, see the following table.

Feature	Conventional		Trunking
	Digital	Analog	
Basic Settings	√	√	√
Contact Management	√	√	√
Mic Automatic Gain Control (AGC)	√	√	√
Treble Boost	√	√	√
3-Band Equalizer	√	√	√
LQO	√	√	√
Audio Feedback Suppression	√	×	√
MIC & SPK	√	√	√
One Touch Call/Menu	√	√	√
Scan	√	√	×
Hunt	×	×	√
Roam	√	×	√
Talk Around	√	√	×
TOT	√	√	√
VOX	√	√	√
Call Divert	×	×	√
Call Priority	×	×	√
Dynamic Group Number Assignment	×	×	√

Feature	Conventional		Trunking
	Digital	Analog	
(DGNA)			
GPS	√	√	√
Work Order	√	×	√
Data Query	×	×	√
Control Services	√	×	×
Analog Services	×	√	×
Personal Security Services	√	√	√
Encrypt	√	×	√
Scrambler	×	√	×
Erasing Data in Emergency	√	√	√
Stun	×	×	√
Kill	×	×	√

## Basic Settings

You can go to **Menu > Settings > Radio Set** and then do the following operations:

If you want to...	Then...
Set the language	Select <b>Language</b> , and then select the required language.
Turn on or off the power-on password	<ol style="list-style-type: none"> <li>1. Go to <b>Password &gt; On/Off</b>, and then select <b>On</b> or <b>Off</b>.</li> <li>2. Enter the password (<b>88888888</b> by default), and then press the <b>OK/Menu</b> key.</li> </ol>
Change the password	<ol style="list-style-type: none"> <li>1. Go to <b>Password &gt; Password Set</b>.</li> <li>2. Enter the old password (<b>88888888</b> by default), and then press the <b>OK/Menu</b> key.</li> <li>3. Enter the new password under <b>Input Password</b> and <b>Checkout</b>, and then press the <b>OK/Menu</b> key.</li> </ol>
Check whether the battery is approved by Hytera	Select <b>Battery</b> . If the battery is an approved one, the radio will display "Certificated Battery".
Set the backlight	Select <b>Backlight</b> , and select one of the following as required: <ul style="list-style-type: none"> <li>● <b>Off</b>: The backlight remains off.</li> <li>● <b>On</b>: The backlight remains on.</li> <li>● <b>Timed</b>: The backlight automatically goes</li> </ul>

If you want to...	Then...
	out if no operation or activity is performed within the preset period.
Adjust the brightness of the backlight	Select <b>Brightness</b> , and then press the <b>Up</b> or <b>Down</b> key.
Set the LCD mode	Select <b>Day/Night</b> , and then select <b>Day Mode</b> or <b>Night Mode</b> .
Turn on or off the LED indication	Select <b>LED</b> , and then select <b>Enable</b> or <b>Disable</b> .
Turn on or off the silent mode	Go to <b>Tone &gt; Radio Silent</b> , and then select <b>Silent On</b> or <b>Silent Off</b> .
Turn on or off a specific tone	<ol style="list-style-type: none"> <li>1. Select <b>Tone</b>, and then select the required tone.</li> <li>2. Select <b>On/Off</b>, and then select <b>Enable</b> or <b>Disable</b>.</li> </ol>
Adjust the volume of a specific tone	<ol style="list-style-type: none"> <li>1. Select <b>Tone</b>, and then select the required tone.</li> <li>2. Select <b>Tone Volume</b>, and then select the required level.</li> </ol>
Turn on or off the Vibration feature	Go to <b>Vibration &gt; On/Off</b> , and then select <b>Enable</b> or <b>Disable</b> .

If you want to...	Then...
Set a specific vibration type	<ol style="list-style-type: none"> <li>1. Select <b>Vibration</b>, and then select the required vibration type.</li> <li>2. Select <b>Settings</b>, and then set <b>Duration</b>, <b>Cycles</b>, or <b>Interval Time</b> as required.</li> </ol>
Adjust the power level	<p>Select <b>Power Level</b>, and then select one of the following as required:</p> <ul style="list-style-type: none"> <li>● <b>High Power</b>: Enables communication with distant radios but consumes more battery power.</li> <li>● <b>Low Power</b>: Enables communication with close radios and saves battery power.</li> </ul>
Set the time zone	<ol style="list-style-type: none"> <li>1. Go to <b>Date &amp; Time &gt; Time Zone</b>, and then press the <b>OK/Menu</b> key,</li> <li>2. Press the <b>Up</b> or <b>Down</b> key to change the time zone, and then press the <b>OK/Menu</b> key.</li> </ol>
Set the time format (trunking only)	Go to <b>Date &amp; Time &gt; Time Format</b> , and then select <b>24 Hour</b> or <b>12 Hour</b> .
Check the remaining rental period	Go to <b>Rent &gt; Rent Query</b> .
Turn off all visible and audible indications	Select <b>Covert Mode</b> , and then select <b>On</b> .

If you want to...	Then...
Allow or disallow the radio to send its alias during voice transmission	Select <b>Send Alias</b> , and then select <b>On</b> or <b>Off</b> .

## Contact Management

### Adding a Contact

You can add a contact to the following lists:

- Conventional: Contact List, Phone Contact, and Favorites
- Trunking: Private Contact and Favorites

### Adding a Contact to the Contact List or Phone Contact List

1. Go to **Menu > Contact/Phone > New Contact > Input ID / Edit ID**.
2. Enter the ID using the keypad, and then press the **OK/Menu** key.
3. Select **Input Alias / Edit Alias**, and enter the alias using the keypad.
4. Press the **OK/Menu** key, and then select **Save**.

### Adding a Contact to the Private Contact List

1. Go to **Menu > Contact > New Contact > Input ID**.
2. Enter the ID using the keypad, and then press the **OK/Menu** key.
3. Select the contact type (**Private ID**, **PABX**, or **PSTN**).
4. Select **Input Alias**, and enter the alias using the keypad.
5. Press the **OK/Menu** key, and then select **Save**.

### Adding a Contact to the Favorites List

To add a frequently used contact to the **Favorites** list, do as follows:

- In conventional mode, go to **Menu > Contact > Favorites > Add Contact**, and then select the required contact.
- In trunking mode, go to **Menu > Contact > Favorites > Folder Management > Add Contact**, and then select the required contact.

### Deleting a Contact

To delete a contact from one of the above-mentioned lists, do as follows:

1. Select the required contact from the corresponding list.
2. Select **Del Contact** or **Delete**, and then press the **OK/Menu** key.

### Creating a Folder Under Favorites (Trunking Only)

1. Go to **Menu > Contact > Favorites > Folder Management > Add Folder**.
2. Use the keypad to enter the folder name, and then press the **OK/Menu** key.

After creating the folder, you can go to **Folder Management > Add Contact** under the folder to add contacts to the folder.

## Audio Optimization

The features described in this section help optimize voice quality.

## Turning On or Off the Mic AGC feature

The Mic AGC feature allows the radio to automatically keep the microphone gain within a proper range during transmission. This provides optimized voice with proper volume for the receiving party.

To turn on or off this feature, go to **Menu > Settings > Audio Set > Digital Mic AGC / Analog Mic AGC**, and then select **On** or **Off**.

## Turning On or Off the Treble Boost feature

The Treble Boost feature allows the radio to output louder voice for better audio clarity.

To turn on or off this feature, go to **Menu > Settings > Audio Set > Audio Optimization > Treble Boost**, and then select **On** or **Off**.



### Note

With this feature enabled, the LQO feature and 3-Band Equalizer feature are unavailable.

## Setting the 3-Band Equalizer Feature

The 3-band Equalizer feature allows the radio to automatically adjust the sound effect of received voice according to preset frequency gains.

To turn on or off this feature, go to **Menu > Settings > Audio Set > Audio Optimization > 3-Band Equalizer > Equalizer Switch**, and then select **On** or **Off**.

To set the low, mid, or high frequency gain, do as follows:

1. Go to **Menu > Settings > Audio Set > Audio Optimization > 3-Band Equalizer > Low Freq. Gain / Mid Freq. Gain / High Freq. Gain**, and then press the **OK/Menu** key.
2. Press the **Up** or **Down** key to change the value, and then press the **OK/Menu** key.

It is recommended that you set the frequency gains according to the following table:

Scenario	Low Frequency Gain (dB)	Mid Frequency Gain (dB)	High Frequency Gain (dB)
Square	0	3	5
Indoor	3.5	1.5	-1.5
Downtown	2	2	8

## Turning On or Off the LQO Feature

The LQO feature allows the radio to automatically adjust the volume and effect of received voice in different environments.

To turn on or off this feature, go to **Menu > Settings > Audio Set > LQO**, and then select **On** or **Off**.



## Turning On or Off the Audio Feedback Suppression Feature

The Audio Feedback Suppression feature helps reduce the noises arising from short-distance communication.

To turn on or off this feature, go to **Menu > Settings > Audio Set > Audio Feedback Suppression**, and then select **On** or **Off**.

## MIC & SPK

The MIC & SPK feature allows you to select the microphone and speaker used by the radio for transmitting and receiving voice respectively.

### Selecting the Microphone

To set whether the radio uses the external or internal microphone, go to **Menu > Settings > Radio Set > MIC & SPK > MIC Selection**, and then select one of the following as required:

- **Follow PTT**: When you transmit by pressing and holding the radio's PTT key, the radio uses the internal microphone; otherwise, it uses the external microphone.
- **Only Internal**: The radio uses only the internal microphone.
- **Only External**: The radio uses only the external microphone.
- **External First**: When an audio accessory is connected, the radio uses the external microphone; otherwise, it uses the internal microphone.

## Selecting the Speaker

To set whether the radio uses the external or internal speaker, go to **Menu > Settings > Radio Set > MIC & SPK > SPK Selection**, and then select one of the following as required:

- **External First**: When an audio accessory is connected, the radio uses the external speaker; otherwise, it uses the internal speaker.
- **INTR & EXTR**: The radio uses both the internal speaker and external speaker.
- **Only External**: The radio uses only the external speaker.

## One Touch Call/Menu

The One Touch Call/Menu feature allows you to press the preprogrammed **One Touch Call/Menu** key to quickly access a service assigned by your dealer. The services available for assignment are as follows:

Service Type	Description
Voice and Data Services in Conventional Mode	Analog Channel: To call a 5-tone or 2-tone contact.
	Digital Channel: <ul style="list-style-type: none"><li>● To initiate a group call or send a quick text or GPS message to the group contact.</li><li>● To initiate a private call, radio check, remote monitor, radio enable, or radio disable or send a quick text</li></ul>

Service Type	Description
	<p>message, alert call, or GPS message to the private contact.</p> <ul style="list-style-type: none"> <li>● To initiate an all call to the all call contact.</li> </ul>
Voice and Data Services in Trunking Mode	<ul style="list-style-type: none"> <li>● To initiate a private, emergency, or preemptive call or send a text or status message to the private contact.</li> <li>● To initiate a group, broadcast, emergency, preemptive, preemptive broadcast, or emergency broadcast call or send a text or status message to the group contact.</li> <li>● To initiate an all call to the all call contact.</li> </ul>
Menu	To directly access the designated menu. Check with your dealer for specific menus.

If the preprogrammed **One Touch Call/Menu** key is a numeric key, you need to go to **Menu > Settings > Radio Set > Keypad Mode**, and then select **One Touch Call/Menu**.


To initiate a one touch call on the digital channel in conventional mode, you need to press the **PTT** key after pressing the preprogrammed **One Touch Call/Menu** key.

## Scan

The Scan feature allows you to listen to activities on other channels, keeping a track of your team members. With this feature enabled, the radio searches the scan list preset for the current channel and stay on a channel with activities.

### Turning On or Off the Scan Feature

To turn on or off the Scan feature, go to **Menu > Scan > Scan On/Off**, and then select **On** or **Off**.

With the Scan feature enabled, the radio displays , and the LED indicator slowly flashes orange. When detecting activities on a channel, the radio stays on it, and the LED indicator glows green.

#### Note

If you do not want to listen to the activities on the channel, press the preprogrammed **Nuisance Temporary Delete** key to temporarily remove the channel from the scan list.

### Adding a Channel to a Scan List

1. Go to **Menu > Scan > Scan List**, and then select the required scan list.
2. Select **Edit/View**, and then select **Add CH**.
3. Select the required channel.

## Setting a Priority Channel

You can set a channel in the scan list as priority channel 1 or 2, which will be scanned more frequently than a non-priority channel.

To set a priority channel, do as follows:

1. Go to **Menu > Scan > Scan List**, and then select the required scan list.
2. Select **Edit/View**, and then select the required channel.
3. Select **Edit Prio CH > Set PrioCH-1 / Set PrioCH-2**.

To change a priority channel to a non-priority channel, select the priority channel marked with P<sub>1</sub> or P<sub>2</sub>, and then select **Edit Prio CH > Disable PrioCH**.

## Deleting a Channel from a Scan List

1. Go to **Menu > Scan > Scan List**, and then select the required scan list.
2. Select **Edit/View**, and then select the required channel.
3. Select **Delete CH**.

## Hunt

In trunking mode, the radio must register with a BS for normal operation.

The Hunt feature allows the radio to:

- Hunt through the Trunked Station Control Channels (TSCCs) for an available BS for registration.
- Always work under a BS with higher signal strength after registration, ensuring smooth communication.

## Selecting the Mode for Fixed TSCC Hunt

If the radio is preprogrammed by your dealer to use the Fixed TSCC hunt for registration, you can go to **Menu > Hunt > TSCC Hunt**, and then select one of the following modes as required:

- **Comprehensive Hunt**: allows the radio to hunt all TSCCs within the preset frequency range.
- **Short Hunt**: allows the radio to hunt the TSCCs in the fixed TSCC list predefined by your dealer.
- **Team Hunt**: allows the radio to hunt the TSCCs in the team hunt list predefined by your dealer.

## Turning On or Off the Background Hunt Feature

The Background Hunt feature allows the radio in standby mode to keep detecting the signal strength of the current BS. If the signal strength goes below the preset threshold, the radio switches to another BS with higher signal strength.

To turn on or off this feature, go to **Menu > Hunt > Background Hunt**, and then select **Enable** or **Disable**.

## Turning On or Off the Homestation Hunt Feature

In an overlapping area, it is recommended that you request the dealer to set the frequently used channel as the homestation channel and enable the Homestation Hunt feature. In this case, the radio operating on another channel switches back to the homestation channel after the signal strength of the homestation channel reaches the preset threshold.

To turn on or off this feature, go to **Menu > Hunt > Homestation Hunt**, and then select **Enable** or **Disable**.

## Turning On or Off the Handover Feature

The Handover feature prevents call drops or discontinuous voice caused by low signal strength. With this feature enabled, the radio automatically switches to another BS with higher signal strength if the signal strength of the current BS goes below the preset threshold during a call.

To turn on or off this feature, go to **Menu > Hunt > Handover > Handover On/Off**, and then select **Enable** or **Disable**.

To set whether handover is allowed during transmission, go to **Menu > Hunt > Handover > Handover in Tx**, and then select **Enable** or **Disable**.

## Roam

The Roam feature allows you to enjoy seamless communication across sites or networks.

In conventional mode, you can turn on or off this feature as follows: Go to **Menu > Roam > Roam On/Off**, and then select **On** or **Off**.

In trunking mode, this feature needs to be turned on or off by your dealer.

## Talk Around

The Talk Around feature allows the radio to continue transmitting and receiving when the repeater is not operating, or when your radio is out of the repeater's coverage but within other radio's coverage.

To turn on or off this feature, go to **Menu > Settings > Radio Set > Talk Around**, and then select **Enable** or **Disable**.


## TOT

The TOT feature allows the radio to automatically stop transmission and keep beeping when the period preset by your dealer expires. To stop beeping, release the **PTT** key. You need to wait for a certain period (also preset by your dealer) to initiate transmission again.

This feature aims to prevent a radio user from occupying a channel for an extended period and to avoid radio damage due to overheating.

## VOX

The VOX feature allows you to transmit voice without pressing and holding the **PTT** key. The radio automatically transmits voice when the volume reaches the preset level.

To turn on or off this feature, go to **Menu > Settings > Radio Set > VOX > On/Off**, and then select **On** or **Off**. When this feature is enabled, the radio displays .

To set the sensitivity of the external or internal microphone, go to **Menu > Settings > Radio Set > VOX > Gain Level > External/Internal**, and then select the appropriate level. A higher gain level indicates lower sensitivity, which requires higher volume for triggering transmission.

## Call Divert

The Call Divert feature allows you to divert an incoming half-duplex private call to a designated radio.

To turn on this feature, do as follows:

1. Go to **Menu > Settings > Radio Set > Call Divert > On/Off**, and then select **On**.
2. Select **Divert ID**, and enter the ID using the keypad.
3. Press the **OK/Menu** key.

To turn off this feature, select **Off** under **Call Divert**.

## Call Priority

The Call Priority feature allows you to set the priority of voice services except emergency call. When all channels are occupied, the call requests are put in a queue according to their priorities. During queuing, the radio displays "Call Queued".

To set the priority, go to **Menu > Settings > Radio Set > Priority**, and then select one of the following as required: **Low**, **Medium**, **High**, and **Preemption**.

The **Preemption** option is available only when the Preemptive Call feature is enabled by your dealer. A preemptive call does not need to queue.

## DGNA

The DGNA feature allows you to join a dynamic group added by the authorized dispatcher over the air interface according to temporary task requirements. The dispatcher can also delete the dynamic group from your radio.

The radio displays "DGNA Success!" when the dynamic group is added successfully and "DGNA Deleted" when the dynamic group is deleted. The added dynamic group is saved in a dynamic subgroup list under Subgroup on your radio.

## GPS

The GPS feature allows you to view your location information, query location information of another radio user, and send your location information to the dispatch station or another radio.

### Turning On or Off the GPS Feature

In conventional mode, go to **Menu > Accessories > GPS > GPS On/Off**, and then select **On** or **Off**.

In trunking mode, the GPS feature needs to be turned on or off by your dealer.

### Viewing Location Information

You can view location information of your radio and another radio.

#### Viewing Location Information of Your Radio

Go to **Menu > Accessories > GPS > Position**.

#### Viewing Location Information of Another Radio

- Trunking Mode

To view location information of the nearest radio in a designated group, go to **Menu > Accessories > GPS > Query Neighbors > Group Contact**, and then select the required group contact.

- Digital Channel in Conventional Mode

To view the location information of another radio, go to **Menu > Accessories > GPS > Query Location > Contact List**, and select the required private contact.

### Sending Location Information

In conventional mode, you can send your location information to a target contact as follows:

1. Go to **Menu > Accessories > GPS > Position**, and then press the **OK/Menu** key.
2. Select **Contact List**, and then select the target contact.

In trunking mode, you can send your location information to the dispatch station as follows:

1. Go to **Menu > Accessories > GPS > Msg with Position**.
2. Edit the message using the keypad, and then press the **OK/Menu** key.

### Turning On or Off the Voice with GPS Feature

The Voice with GPS feature allows the radio to automatically send GPS data during voice transmission.

To turn on or off this feature, go to **Menu > Accessories > GPS > Voice with GPS**, and then select **On** or **Off**.

## Work Order

The Work Order feature allows you to receive a task from the dispatcher and report the latest task state to the dispatcher at each stage of the task.

### Viewing a Task

To view a task in any state, go to **Menu > Work Orders > All Task**, select the required task, and then select **Details**.

To view a task that has not been processed, go to **Menu > Work Orders > New Task**, select the required task, and then select **Details**.

After a task is processed and the task state is updated, the task is moved from the **New Task** list to the list of the corresponding state. To view a task in a specific state, do as follows:

1. Go to **Menu > Work Orders**, and then select the corresponding list.
2. Select the required task, and then select **Details**.

### Reporting the Task State

To report the latest state of a task, do as follows:

1. Select the required task as described above.
2. Select the state to be reported, and then press the **OK/Menu** key.

If the corresponding task state is associated with a numeric key by your dealer, you can also press the numeric key to report the state after selecting the required task.

## Data Query

The Data Query feature allows you to query related information from a third party by sending the keyword, for example, a vehicle number.

To query information, do as follows:

1. Go to **Menu > Query**, and then select the required item.
2. Enter the keyword using the keypad, and then press the **OK/Menu** key.
3. (Optional) Enter the password for data query, and then press the **OK/Menu** key.

## Control Services

On the digital channel in conventional mode, you can initiate the following control services to a private contact.

Feature	Description	Operation
Alert Call	Allows you to alert a private contact to call you back.	<p>To trigger the corresponding feature, do one of the following:</p> <ul style="list-style-type: none"> <li>● Through Favorites / Contact List               <ol style="list-style-type: none"> <li>1. Go to <b>Menu &gt; Contact &gt; Favorites / Contact List</b>.</li> <li>2. Select the target private contact.</li> <li>3. Go to <b>Ctrl Services &gt; Alert Call / Radio Check / Remote Monitor / Radio Enable / Radio Disable</b>.</li> </ol> </li> <li>● Through Keypad Mode               <ol style="list-style-type: none"> <li>1. Go to <b>Menu &gt; Settings &gt; Radio Set &gt; Keypad Mode</b>, and then select <b>Enable</b>.</li> <li>2. Press <b>[#]</b> to switch the input mode to <b>Private ID</b>.</li> <li>3. From the home screen, enter the target private ID using the keypad , and then press the <b>OK/Menu</b> key.</li> <li>4. Go to <b>Ctrl Services &gt; Alert Call / Radio Check / Remote Monitor / Radio Enable / Radio Disable</b>.</li> </ol> </li> </ul>
Radio Check	Allows you to check whether another radio is operating on the current channel without disturbing that radio user.	
Remote Monitor	Allows you to remotely monitor activities surrounding another radio.	
Radio Enable	Allows you to remotely enable a disabled radio for normal operation.	
Radio Disable	Allows you to remotely disable another radio.	



## Analog Services

The following features are available only on an analog channel in conventional mode.


### Turning On or Off the Compandor Feature

The Compandor feature allows the radio to compress transmitted voice signals, which suppresses ambient noise and improves audio quality.

To turn on or off this feature, go to **Menu > Settings > Radio Set > Compandor**, and then select **Enable** or **Disable**.

### Turning On or Off the Monitor Feature


The Monitor feature allows the radio to receive weak signals.

To turn on this feature, press the preprogrammed **Monitor** key or press and hold the preprogrammed **Monitor Momentary** key. In this case, the radio displays .

To turn off this feature, press the preprogrammed **Monitor** key again or release the preprogrammed **Monitor Momentary** key.

### Turning On or Off the Squelch Off Feature

The Squelch Off feature allows the radio's speaker to keep turned on no matter whether the squelch condition is satisfied.

To turn on this feature, press the preprogrammed **Squelch Off** key or press and hold the preprogrammed **Squelch Off Momentary** key. In this case, the radio displays .

To turn off this feature, press the preprogrammed **Squelch Off** key again or release the preprogrammed **Squelch Off Momentary** key.

### Setting the Squelch Level

The squelch level refers to the squelch threshold required for the radio's speaker to be turned on.

To set the squelch level, go to **Menu > Settings > Radio Set > Squelch**, and then select **Open**, **Normal**, or **Tight** (from low to high) as required. Generally, a higher squelch level requires higher signal strength. If the squelch level is set to **Open**, the speaker will always keep turned on.

## Personal Safety Services

The features described in this section ensure personal safety.

### Using the Emergency Feature

The Emergency feature allows you to ask for help from your companion or the control centre in case of emergency.

In emergency mode, the radio gives different indications according to the preset emergency type. The available emergency types are as follows:

Emergency Type	Description
Siren Only	The radio sounds shrill alarm tones with visible indications.
Regular	The radio gives audible and visible indications.
Silent	The radio gives no audible or visible indication, and you cannot listen to a received call.
Silent w/ Voice	The radio gives no audible or visible indication, but you can listen to a received call.
Alarm w/ Siren	The radio sends an alarm and sounds shrill alarm tones with visible indications.

In addition, you can request your dealer to set one of the following emergency modes:

Emergency Mode	Description
Alarm	Allows you to send an emergency alarm.
Call	Allows you to initiate an emergency call.
Alarm W/Call	Allows you to send an emergency alarm and initiate an emergency call.

The three emergency modes can be combined with any of the following emergency types: **Regular**, **Silent**, and **Siren w/ Voice**.

## Triggering the Emergency Mode

To trigger the emergency mode, press the preprogrammed **Emergency On** key. The radio then enters the preset emergency mode with or without indications depending on the preset emergency type.

In trunking mode, you can also initiate an emergency call as follows:

1. Go to **Menu > Contact > Favorites**, and then select the target group contact.
2. Select **Call Type**, and then select **Emergency Call**.
3. Press and hold the **PTT** key to initiate the call.

If the Call to Follow feature is enabled by your dealer, the radio will transmit automatically. You can directly speak into the microphone in the preset period.

## Exiting the Emergency Mode

To exit the emergency mode (as the initiating party) or emergency alert mode (as the receiving party), press the preprogrammed **Emergency Off** key or turn off the radio.

## Turning On or Off the Man Down Feature

The Man Down feature allows the radio to enter the emergency mode when it tilts at an angle greater than the specified angle or stays motionless for a preset period.

To turn on or off this feature, go to **Menu > Settings > Radio Set > Man Down**, and then select **Enable** or **Disable**.

## Turning On or Off the Lone Worker Feature

The Lone Worker feature allows the radio to enter the emergency mode when no operation is detected for a preset period.

To turn on or off this feature, go to **Menu > Settings > Radio Set > Lone Worker**, and then select **Enable** or **Disable**.

## Communication Security Services

The features described in this section ensure communication security.

### Using the Encrypt Feature

The Encrypt feature prevents eavesdropping and ensures communication privacy. It allows the radio to automatically encrypt transmitted voice or data. Only the receiving radio with the same key value or ID can decrypt the voice or data.

### Turning On or Off the Encrypt Feature

Go to **Menu > Settings > Radio Set > Encrypt > On/Off**, and then select **On** or **Off**.

### Setting the Encrypt Key (Conventional Only)

In conventional mode, you can add, edit, or select an encrypt key.

### Adding an Encrypt Key

Go to **Menu > Settings > Radio Set > Encrypt > New Key**, set the related parameters, and then select **Save**.

The related parameters are as follows:

- **Key ID:** a unique key index ranging from 1 to 255.
- **Key Alias:** a string containing up to 16 characters .
- **Key Length:** the number (10, 32, or 64) of characters in the key.
- **Key Value:** a string containing digits and letters A to F.

### Selecting an Encrypt Key

1. Go to **Menu > Settings > Radio Set > Encrypt > Key List**.
2. Select the required key, and then select **Select**.

### Editing an Encrypt Key

1. Go to **Menu > Settings > Radio Set > Encrypt > Key List**.
2. Select the required key, and then select **Edit**.
3. Edit the ID, alias, or value, and then select **Save**.

### Selecting Encrypted Service (Trunking Only)

In trunking mode, you can set which kind of service will be encrypted. Do as follows:

1. Go to **Menu > Settings > Radio Set > Encrypt > Encrypt Service**.
2. Select **Only Voice**, **Only Data**, or **Voice and Data** as required.

## Turning On or Off the Scrambler Feature

The Scrambler feature prevents eavesdropping and ensures communication privacy. It allows the radio to invert the frequency spectrum of transmitted audio signals. Only the receiving radio with the same scrambler setting can restore the audio signals.

To enable or disable this feature, go to **Menu > Settings > Radio Set > Scrambler**, and then select **Enable** or **Disable**.

## Erasing Data in Emergency

In case of emergency, you can erase encryption data, for example, the encrypt key, from the radio, preventing the data from unauthorized access.

To erase the data, press the **SKI** and **PTT** key by turns twice, and make sure the press interval is less than 1.5 seconds. Then, press **SKI** to confirm.

## Restoring the Stunned Radio

When being stunned, the radio displays "Radio Stunned!" In this case, you cannot initiate call and message services.

To restore normal operation, request your dealer to program the radio or send a Revive command. When being enabled by a Revive command, the radio displays "Revive Success!"

## Restoring the Killed Radio

When being killed, the radio displays "Radio Killed!" In this case, you can only power on or off the radio.

To restore normal operation, request your dealer to burn the radio.

## Troubleshooting

Phenomena	Analysis	Solution
You cannot turn on the radio.	The battery may be installed improperly.	Remove and reattach the battery.
	The battery power have run out.	Recharge or replace the battery.
	The battery may suffer from poor contact caused by dirtied or damaged battery contacts.	Clean the battery contacts or replace the battery.
The radio cannot register.	The radio may not be detecting signals from the BS.	Make sure the radio is within the coverage of the BS.
	The radio may not be authorised.	Contact the BS manager to check if the radio is authorised in the network management system.
The radio registers repeatedly.	The signal may be intermittent.	Make sure the radio is within the coverage of the BS.
The radio cannot establish a call.	The signal may be weak.	Make sure the radio is within the coverage of the BS.
The called party disconnects repeatedly during communication.	The signal may be intermittent or weak.	Make sure the radio is within the coverage of the BS.
The voice is unclear.	The signal may be weak.	Make sure call participants are within the communication range.
You cannot use the keys.	The keypad may not work temporarily.	Restart the radio.
The LCD does not display any information.	The LCD may not work temporarily.	Restart the radio.

<b>Phenomena</b>	<b>Analysis</b>	<b>Solution</b>
During receiving, the voice is weak or discontinuous.	The battery voltage may be low.	Recharge or replace the battery.
	The volume level may be low.	Increase the volume.
	The antenna may be loose or may be installed incorrectly.	Turn off the radio, and then remove and reattach the antenna.
	The speaker may be blocked.	Clean the surface of the speaker.
You cannot communicate with other group members.	The frequency or signaling type may be inconsistent with that of other members.	Verify that your TX/RX frequency and signaling type are correct.
	The channel type (digital or analog) may be set incorrectly.	Verify that you are on the correct digital or analog channel.
	You may be too far away from other members.	Move towards other members.
You hear unknown voices or noise.	You may be interrupted by radios using the same frequency.	Change the frequency, or adjust the squelch level.
	The radio in analog mode may be set with no signaling.	Set signaling for all radios operating at the same frequency to avoid interference.
You are unable to hear anyone because of too much noise and hiss.	You may be too far away from other members.	Move towards other members.
	You may be in an unfavourable position. For example, your communication may be blocked by high buildings or blocked in an underground area.	Move to an open and flat area, restart the radio, and try again.
	It may be the result of external disturbance (such as electromagnetic interference).	Stay away from equipment that may cause interference.
The GPS cannot locate your position.	The radio may not receive GPS signals due to unfavourable position.	Move to an open and flat area, and try again.

If the above solutions cannot fix your problems, or you may have some other queries, please contact your local dealer for more technical support.

## Care and Cleaning

To guarantee optimal performance as well as a long service life of the product, please follow these tips.

### Product Care

- Do not pierce or scrape the product.
- Keep the product far away from substances that can corrode the circuitry.
- Do not hold the product by the antenna or earpiece cable.
- Close the accessory connector cover when no accessory is in use.

### Product Cleaning

---

#### Caution

Turn off the product and remove the battery before cleaning.

---

- Clean up the dust and fine particles on the product surface and charging piece with a clean and dry lint-free cloth or a brush regularly.
- Use neutral cleanser and a non-woven fabric to clean the keys, knobs, and front case after long-time use. Do not use chemical preparations such as stain removers, alcohol, sprays or oil preparations, so as to avoid surface case damage.
- If the radio is used in a harsh environment (such as sea and salt fog), periodically clean and dry the radio.
- Make sure the product is completely dry before use.

## Optional Accessories

Contact your local dealer for the optional accessories used with the product.

---

#### Caution

Use the accessories specified by Hytera only; otherwise, the Company will not be liable for any loss or damage arising out of the use of any unauthorised accessories.

---

## Abbreviations

Abbreviation	Full Name
AGC	Automatic Gain Control
BS	base station
CDCSS	Continuous Digital-Coded Squelch System
CTCSS	Continuous Tone-Coded Squelch System
DGNA	Dynamic Group Number Assignment
DTMF	Dual-Tone Multi-Frequency
FOACSU	Full Off Air Call Set-Up
GPS	Global Positioning System
LCD	liquid-crystal display
LED	light-emitting diode
LQO	Loudness and Quality Optimizer
OACSU	Off Air Call Set-Up
PABX	Private Automatic Branch eXchange
PSTN	Public Switched Telephone Network
PTT	Push-To-Talk
SK	Side Key

Abbreviation	Full Name
TM-DL	Trunking Mode - Digital Local
TM-DW	Trunking Mode - Digital Wide
TOT	Time-out Timer
TSCC	Trunked Station Control Channel
VOX	Voice Operated Transmit





is the trademark or registered trademark of **Hytera Communications Corporation Limited**.

© 2016 Hytera Communications Corporation Limited. All Rights Reserved.

Address: Hytera Tower, Hi-Tech Industrial Park North, 9108#Beihuan Road,  
Nanshan District, shenzhen, People's Republic of China

Postcode: 518057

<http://www.hytera.com>