

ATTACHMENT E. USERS MANUAL

A725 Multiscanning Color Monitor

BACK

NEXT

3-5-2. Other operating systems

No drivers are required for other operating systems, such as DOS, Windows 3.1x or Windows NT.

3-6. Setting the refresh rate

Follow the instructions below to set your refresh rate in Windows 98.

1. Go to the configuration window (Start-Settings-Configuration window).
2. Double click on the 'Display' icon.
3. Click on the 'Settings' tab.
4. Click on the 'Advanced' button.
5. Click on 'Adapter' and select 85Hz from the list.
6. Click on 'Apply' to accept the selected value.

The recommended setting is a resolution of 800x600 and a refresh rate of 85Hz.

Preset Timing Table


No.	Resolution	Horizontal Frequency	Refresh Rate
1	720×400	31.5 KHz	70 Hz
2	640×480	43.3 KHz	85 Hz
3	640×480	50.6 KHz	100 Hz
4	800×600	46.9 KHz	75 Hz
5	800×600*	53.7 KHz	85 Hz
6	800×600	63.9 KHz	100 Hz
7	1024×768	60.0 KHz	75 Hz
8	1024×768*	68.7 KHz	85 Hz

* Recommended primary mode.

4. Adjusting the picture

A725 Multiscanning Color Monitor

You can adjust the screen display by using the buttons located below the screen.

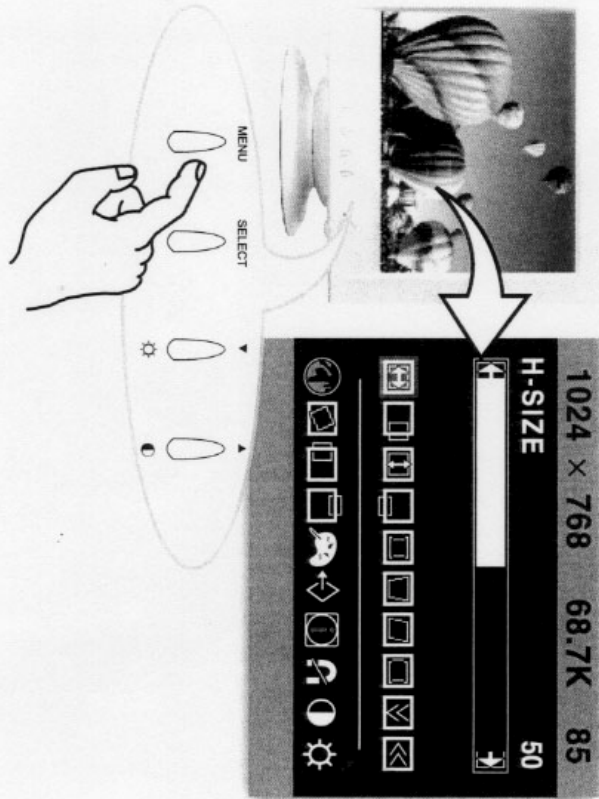

BACK

NEXT

A725

Multiscanning Color Monitor

BACK

NEXT

4-1. Using the On Screen Display

1. Push the MENU button to call the OSD to the screen. The resolution and frequency are displayed at the top of the menu box for your information.
2. Push the ▲ or ▼ button to choose the item you want to adjust. The selected item is highlighted.
3. Push the SELECT button to adjust the highlighted item.
4. Use the ▲ or ▼ button to adjust the selection.
5. Push the SELECT button to return to the previous menu if you are in a submenu.
6. The display unit automatically saves the new settings in 3 to 4 seconds after your last adjustments and the menu disappears. You can also push the MENU button to make the menu disappear.

4-2. Direct access buttons



Brightness :
Use the button ▼ to select the brightness adjustment.
Adjust with ▲ or ▼ button.



Contrast :
Use the button ▲ to select the contrast adjustment.
Adjust with ▲ or ▼ button.








4-3. OSD Adjustments

You can play the movie file to see how to adjust the picture image by clicking each icon or title hereunder.

A725 Multiscanning Color Monitor

BACK
NEXT

The OSD adjustments available to you are listed below.

-  **H. SIZE**
Adjusts the horizontal size of the entire screen image.
-  **H. POSITION**
Adjusts the horizontal position of the entire screen image.
-  **V. SIZE**
Adjusts the vertical size of the entire screen image.
-  **V. POSITION**
Adjusts the vertical position of the entire screen image.
-  **PINCUSHION**
If the vertical sides of the picture curve in or bulge out, you can correct the pincushion distortion by using this adjustment.
-  **TRAPEZOID**
If the picture is wider at the top or at the bottom, you can correct the trapezoid distortion by using this adjustment.
-  **PARALLEL**
If the sides of the screen image are tilted, you can correct the parallel distortion by using this adjustment.

A725 Multiscanning Color Monitor

BACK

NEXT

**PIN BALANCE**

If the sides of the picture are bowed to the right or to the left, you can correct the pincushion balance by using this adjustment.

**V. MOIRE**

Clears vertical moire if a series of concentric circles or arcs appear on your screen.

**H. MOIRE**

Clears horizontal moire if a series of concentric circles or arcs appear on your screen.

Moire is an interference pattern that makes the screen seem to have faint lines. A picture that is rasterised or consists of (small) repeating figures is sensitive to moire interference. Strong colors are also liable to intensify moire.

The moire pattern on the screen does not affect the printout of the image.

**LANGUAGE**

You can select the language in which adjustment menus are displayed. The following languages are available: English, French, German, Italian, Spanish, Swedish, Finnish, Danish and Portuguese.

**ROTATION**

If the entire screen image is tilted, you can correct the distortion by using this adjustment.

A725 Multiscanning Color Monitor

BACK

NEXT



OSD H. POSITION

Adjusts the OSD menu's horizontal position on the screen.



OSD V. POSITION

Adjusts the OSD menu's vertical position on the screen.



COLOR CONTROL

Color temperature affects the tint of the image. With lower color temperatures the image turns reddish and with higher temperatures bluish.

1024 x 768	68.7K	85
USER	6500	9300
R	63	63
G	62	62
B	59	59

There are three color settings available: 9300K, 6500K or USER. With the USER setting you can set individual values for red, green and blue.




RECALL

If you operate your display unit in a factory preset mode, this function deletes adjustments you made for size, position and shape, and restores the properties which have been set in the factory. If you operate your display unit in a user mode, this function has no effect except that the contrast will be reset to the maximum value and the brightness to the cut-off level.



INFORMATION

Information shows horizontal and vertical sync polarity of current timing set.

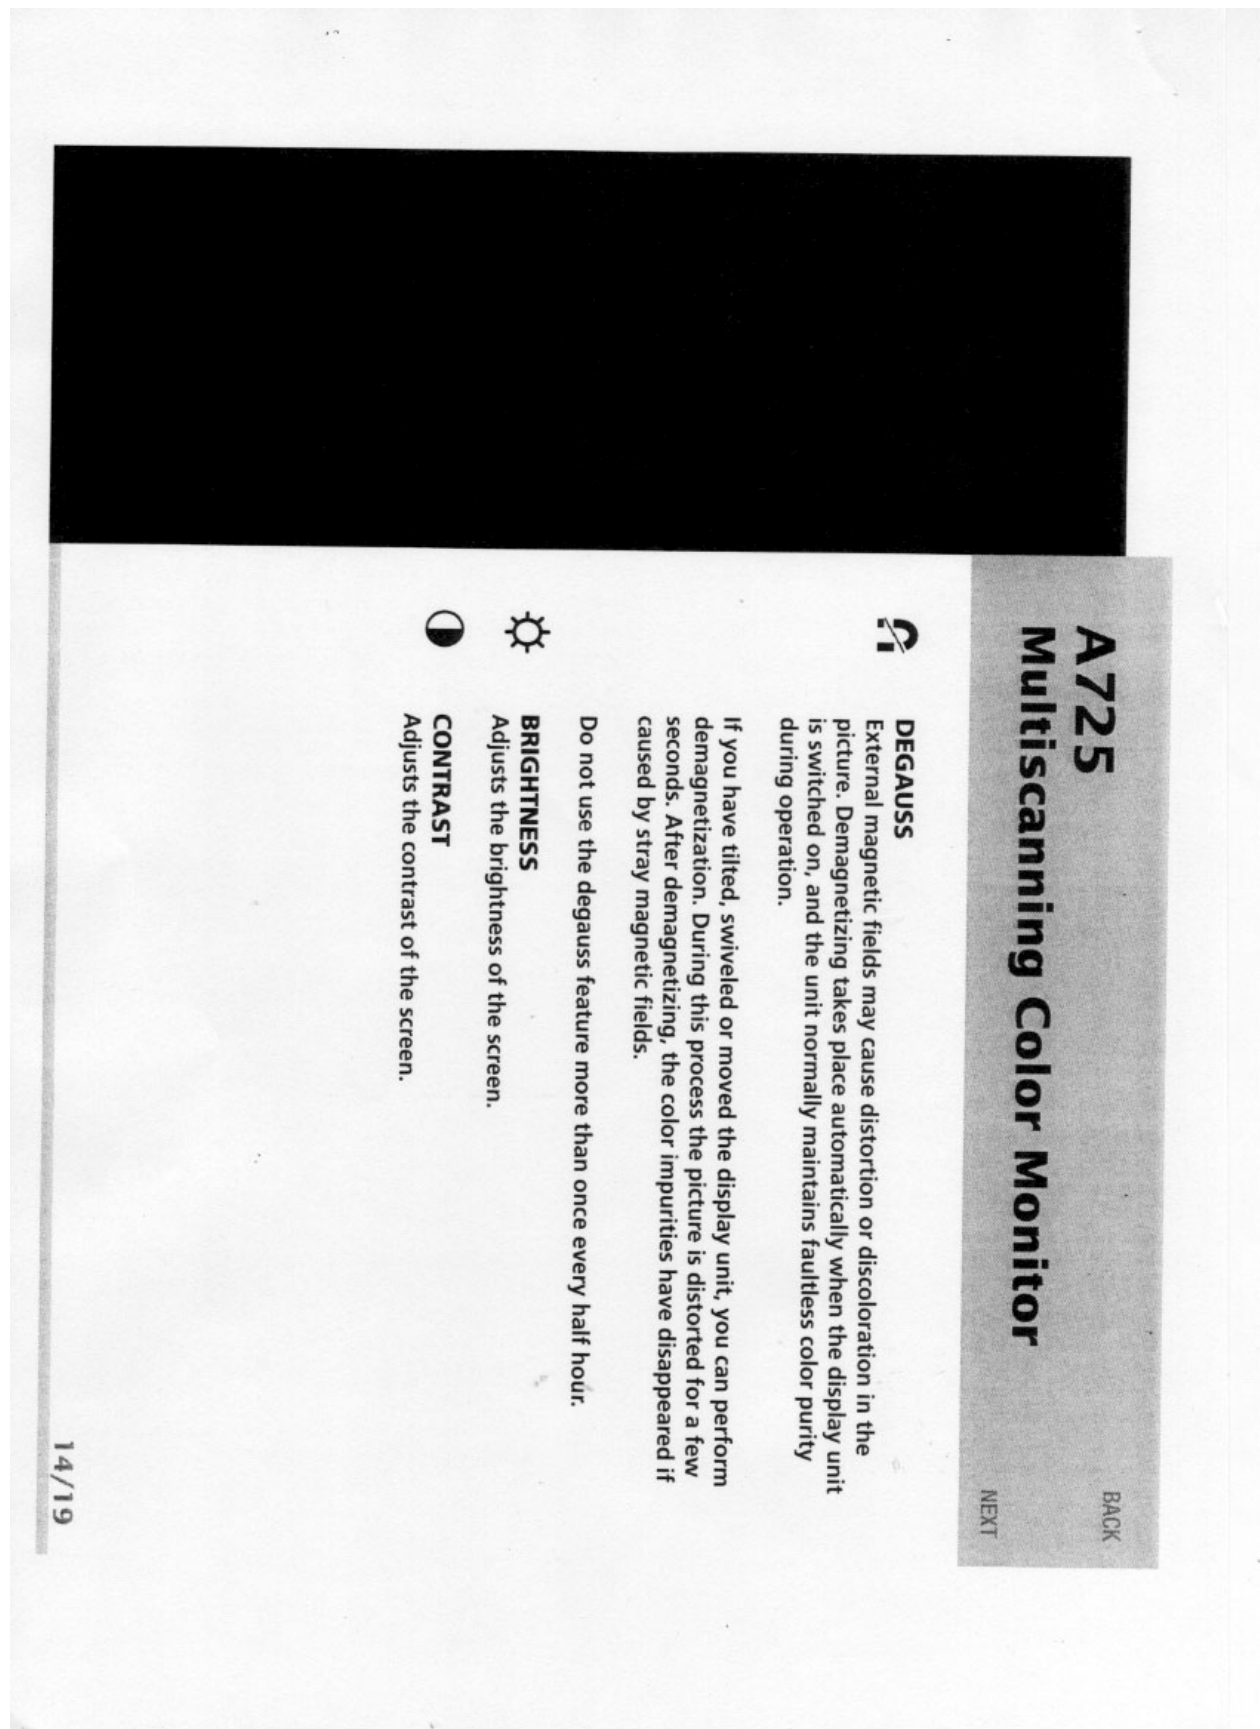

A725 Multiscanning Color Monitor

BACK
NEXT

5. Display power management

Reducing power consumption

If the power management function of your computer is enabled, your monitor turns on and off automatically. You can control power management features from your computer.

Your computer may have power management features which enable the computer or monitor to enter a power saving mode when the system is idle. You can reactivate the system by pressing any key or moving the mouse.

Mode	LED	Power consumption
Normal	Green	/00 W
Standby	Green/Orange blinking (1sec.)	≤ 15 W
Suspend off	Green/Orange blinking (0.5sec.) Orange	≤ 15 W
Soft Power Switch off	Not illuminated	≤ 8 W
Unplugged	Not illuminated	0 W

1 The power button does not disconnect the display unit from the mains. The only way to isolate the display unit completely from the mains supply is to unplug the mains cable.

6. Troubleshooting

A725 Multiscanning Color Monitor

BACK

NEXT

If your monitor is not functioning properly, you may be able to solve the problem by reading followings.

Problem	Possible solution
Blank screen	<p>If the power LED is not lit, push the power switch to turn the monitor on. If the display unit is powered through the computer, check that the computer is switched on.</p> <p>The display unit might be in standby mode. Push one of the keyboard keys. Check that the keyboard is properly connected to the computer.</p> <p>Check that the power cable is correctly connected to the display unit and to the power outlet.</p>
Error message: OUT OF RANGE	<p>The graphics adapter is set for too high refresh rate or line frequency. Select another display mode with lower frequencies in computer.</p>
Self diagnostics message NO SIGNAL	<p>This message indicates that the signal is missing or faulty. Check that the signal cable connector is properly connected and that the connection pins are not bent or damaged. If the connector is loose, tighten the connector's screws.</p>

A725 Multiscanning Color Monitor

BACK

NEXT

Problem	Possible solution
The display does not enter power management mode	The video signal from the computer does not comply with VESA DPMS standard. Either the computer or the graphics adapter is not using the VESA DPMS power management function.
Screen flickers	The screen may seem to flicker when the refresh rate is less than 75Hz. See the list of recommended modes in the section <i>Preset timing table</i> .
Color defects	If your color is not uniform, demagnetize the display unit as described in the section <i>Degaussing under OSD adjustments</i> , and make sure that the display unit is at least 30cm from any other electrical equipment. Check that the signal cable connector is properly connected and that the connection pins are not bent or damaged. Try another color temperature. If the picture has strong color defects, switch off the display unit and the computer.
Size, position, shape or quality unsatisfactory	Make sure that other electrical devices are at least quality 30cm away. Adjust the picture characteristics as described in the section <i>Adjusting the picture</i> .
Duplicated images	A problem with your graphics adapter or display unit. Contact your service representative.

A725 Multiscanning Color Monitor

BACK

NEXT

Problem	Possible solution
Windows Plug and Play does not recognise the monitor	If your computer is DDC compatible, the display type is automatically correct. If, however, you need to change the display type, you will find the display units listed under Hyundai Electronics in the manufacturer's list.

If the above troubleshooting hints do not help you find a solution to the problem, contact an authorized service agent. If the monitor is sent for service, use the original package if possible.

Unplug the display unit from the power outlet and contact a service agent when:

- The monitor does not operate normally according to the operating instructions.
- The monitor exhibits a distinct change in performance.
- The monitor has been dropped or the cabinet has been damaged.
- The monitor has been exposed to rain, or water or liquid has been spilled onto the monitor.

Contacting service

A725 Multiscanning Color Monitor

BACK

7. Specifications

Picture tube	17"(viewable size : 15.7") Dot pitch 0.27 mm Anti-Static, anti-glare, TCO treatment coated. factory preset area : 305X229 mm
Display area	Infinite
Number of color	R,G,B Analog, 15 pin D-sub
Input signals	Horizontal : 30 to 70kHz Vertical : 50 to 150Hz
Frequency rate	108MHz
Maximum bandwidth	1280X1024@60Hz
Maximum resolution	100-240 VAC 1.5A
Input voltage	0W
Power consumption	VESA DPM5
Power Management	Lower than EPA recommendation
Plug & Play	VESA DDC 1/2B
OSD menu	H/V POSITION, H/V SIZE, PINCUSHION, TRAPEZOID, PARALLEL, PIN BALANCE, H/V- MOIRE, LANGUAGES, ROTATION, OSD H/V POSITION, COLOR CONTROL, RECALL, INFORMATION, DEGAUSS, BRIGHTNESS, CONTRAST
Ergonomics, Safety and EMC	FCC Class B, CE, VCCI UL, CSA, TÜV-GS, ISO-9241-3/7/8, DHHS, NEMKO, DEMKO, FIMKO, SEMKC
Operating Temperature	0 ~ 40° C
Weight	13.7Kg unpacked, 16.7Kg packed
Dimensions (W X H X D mm)	404 X 408 X 420 mm

• Specification is subject to change without notice for performance improvement.