



## BASIC MANUAL

VHF/UHF DUAL BAND TRANSCEIVER

**ID-4100A**

**ID-4100E**

---

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**WARNING:** MODIFICATION OF THIS DEVICE TO RECEIVE CELLULAR RADIOTELEPHONE SERVICE SIGNALS IS PROHIBITED UNDER FCC RULES AND FEDERAL LAW.

---

Thank you for choosing this Icom product. This product is designed and built with Icom's state of the art technology and craftsmanship. With proper care, this product should provide you with years of trouble-free operation.

This product combines traditional analog technologies with the new digital technology, Digital Smart Technologies for Amateur Radio (D-STAR), for a balanced package.

## IMPORTANT

**READ ALL INSTRUCTIONS** carefully and completely before using the transceiver.

**SAVE THIS INSTRUCTION MANUAL**— This instruction manual contains basic operating instructions for the ID-4100A/ID-4100E.


For Advanced features and instructions, see the Operating Guide that is on the Icom website.

## EXPLICIT DEFINITIONS

WORD	DEFINITION
<b>⚠ DANGER!</b>	Personal death, serious injury or an explosion may occur.
<b>⚠ WARNING!</b>	Personal injury, fire hazard or electric shock may occur.
<b>CAUTION</b>	Equipment damage may occur.
<b>NOTE</b>	Recommended for optimum use. No risk of personal injury, fire or electric shock.

## SUPPLIED ACCESSORIES

The following accessories are supplied with the transceiver.

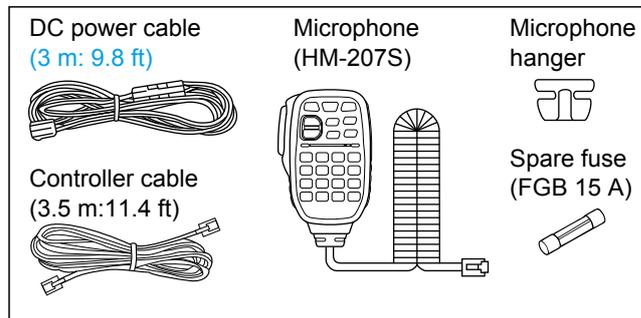

---

# ABOUT THE CONSTRUCTION OF THE MANUAL

---

(As of April 2017)

You can see the following manuals to use and understand this transceiver.

## **Basic manual (This manual)**

Instructions for the basic operations, precautions, installations, and connections.

## **D-STAR Guide (Comes with the transceiver)**

Instructions for registering your call sign to a gateway repeater or the basic operations of D-STAR.

## **About the DV Gateway function (PDF type)**

Instructions for the system requirement or operations to use the DV Gateway function.

## **Operating guide (PDF type)**

Instructions for the advanced operations, as shown below.

- Memory operation
- Scan operation
- Priority watch operation
- D-STAR operation <Advanced>
- GPS operation
- Using a microSD card
- Voice memory operation
- Repeater and duplex operations
- Menu screen <Advanced>
- Other functions
- Options
- Bluetooth® operation

To read the guide or instructions, Adobe® Acrobat® Reader® is required. If you have not installed it, please download the Adobe® Acrobat® Reader® from Adobe Systems Incorporated's website.

---

# OPTIONS

(As of April 2017)

## Microphone/Speaker

HM-207S	HAND MICROPHONE (REMOTE-CONTROL)
HM-209	NOISE CANCELING MICROPHONE
HM-232	HAND MICROPHONE (SIMPLE)
OPC-440	MIC EXTENSION CABLE: 5 m (16.4 ft)
OPC-647	MIC EXTENSION CABLE: 2.5 m (8.2 ft)
SP-35	EXTERNAL SPEAKER: 2 m (6.5 ft)
SP-35L	EXTERNAL SPEAKER: 6 m (19.6 ft)
SP-30	EXTERNAL SPEAKER: 2.8 m (9.1 ft)

## Software

CS-4100	CLONING SOFTWARE
RS-MS1A	Android™ APPLICATION
RS-MS3W	TERMINAL MODE/ACCESS POINT MODE SOFTWARE: For Windows
RS-MS3A	TERMINAL MODE/ACCESS POINT MODE APPLICATION: For Android™ devices
OPC-1529R	DATA CABLE: RS-232C type
OPC-2350LU	DATA CABLE: USB type
OPC0478UC	CLONING CABLE: USB type

## Bluetooth

UT-137	Bluetooth® UNIT
VS-3	Bluetooth® HEADSET

## Others

MBA-8	CONTROLLER BRACKET
MBF-1	MOUNTING BASE
MBF-4	MOBILE BRACKET
OPC-345	DC POWER CABLE
OPC-589	MIC ADAPTOR CABLE
OPC-1156	CONTROLLER EXTENSION CABLE: 3.5 m (11.4 ft)

Icom is not responsible for the destruction, damage to, or performance of any Icom or non-Icom equipment, if the malfunction is because of:

- Force majeure, including, but not limited to, fires, earthquakes, storms, floods, lightning, other natural disasters, disturbances, riots, war, or radioactive contamination.
- The use of Icom transceivers with any equipment that is not manufactured or approved by Icom.

---

# TABLE OF CONTENTS FOR YOUR PURPOSE

---

---

## PRECAUTIONS

---

⚠ **DANGER HIGH VOLTAGE! NEVER** touch the antenna connector during transmission. This may result in an electrical shock or burn.

⚠ **DANGER! NEVER** operate the transceiver near unshielded electrical blasting caps or in an explosive atmosphere.

⚠ **DANGER! NEVER** place the transceiver where air bag deployment may be obstructed during mobile operations.

⚠ **WARNING RF EXPOSURE!** This transceiver emits Radio Frequency (RF) energy. Extreme caution should be observed when operating this transceiver. If you have any questions regarding RF exposure and safety standards please refer to the Federal Communications Commission Office of Engineering and Technology's report on Evaluating Compliance with FCC Guidelines for Human Radio Frequency Electromagnetic Fields (OET Bulletin 65).

⚠ **WARNING! NEVER** operate the transceiver while driving a vehicle. Safe driving requires your full attention—anything less may result in an accident.

⚠ **WARNING! NEVER** operate the transceiver with an earphone or other audio accessories at high volume levels. Continuous high volume operation may cause a ringing in your ears. If you experience ringing, reduce the volume level or discontinue use.

⚠ **WARNING! NEVER** connect the transceiver to an AC outlet. This may pose a fire hazard or result in an electric shock.

⚠ **WARNING! NEVER** connect the transceiver to a power source of more than 16 V DC such as a 24 V DC battery. This could cause a fire or damage the transceiver.

⚠ **WARNING! NEVER** reverse the DC power cable polarity when connecting to a power source. This could damage the transceiver.

⚠ **WARNING! NEVER** operate the transceiver during a lightning storm. It may result in an electric shock, cause a fire or damage the transceiver. Always disconnect the power source and antenna before a storm.

⚠ **WARNING! NEVER** cut the DC power cable between the DC plug and fuse holder. If an incorrect connection is made after cutting, the transceiver may be damaged.

⚠ **WARNING! NEVER** let metal, wire or other objects touch any internal part or connectors on the rear panel of the transceiver. This may result in an electric shock or this could cause a fire or damage the transceiver.

⚠ **WARNING! NEVER** operate or touch the transceiver with wet hands. This may result in an electric shock or may damage the transceiver.

---

⚠ **WARNING! NEVER** operate the transceiver if it emits an abnormal odor, sound or smoke. Immediately turn OFF the transceiver power and remove the power cable. Contact your Icom dealer or distributor for advice.

⚠ **WARNING! NEVER** place the transceiver where normal operation of the vehicle may be hindered or where it could cause bodily injury.

**CAUTION: DO NOT** expose the transceiver to rain, snow or any liquids.

**CAUTION: DO NOT** change the internal settings of the transceiver. This may reduce transceiver performance and/or damage the transceiver.

**CAUTION: DO NOT** use harsh solvents such as Benzine or alcohol to clean the transceiver, as they will damage the transceiver's surfaces. If the transceiver becomes dusty or dirty, wipe it clean with a soft, dry cloth.

**CAUTION: DO NOT** place or leave the transceiver in areas with temperatures below  $-10^{\circ}\text{C}$  ( $+14^{\circ}\text{F}$ ) or above  $+60^{\circ}\text{C}$  ( $+140^{\circ}\text{F}$ ). Be aware that temperatures on a vehicle's dashboard can exceed  $+80^{\circ}\text{C}$  ( $+176^{\circ}\text{F}$ ) in direct sunlight, resulting in permanent damage to the transceiver if left there for long periods of time.

**CAUTION: DO NOT** start the vehicle engine when the transceiver's power is ON. Ignition voltage spikes can damage the transceiver.

**CAUTION: DO NOT** use non-Icom microphones. Other manufacturer's microphones have different pin assignments, and may damage the transceiver.

**DO NOT** push the PTT when not actually desiring to transmit.

**DO NOT** place the transceiver in excessively dusty environments or in direct sunlight.

**DO NOT** place the transceiver against walls or putting anything on top of the transceiver. This will obstruct heat dissipation.

**DO NOT** place the transceiver in an insecure place to avoid inadvertent use by unauthorized persons.

**DO NOT** place the transceiver where hot or cold air blows directly onto it, during mobile operation.

**DO NOT** operate the transceiver without running the vehicle's engine, during mobile operation. When the transceiver's power is ON and your vehicle's engine is OFF, the vehicle's battery will soon become exhausted.

**NOTE:** During maritime mobile operation, keep the transceiver and microphone as far away as possible from the magnetic navigation compass to prevent erroneous indications.

**BE CAREFUL!** The rear panel will become hot when continuously operating the transceiver for long periods of time.

## DÉFINITIONS EXPLICITES

MOT	DÉFINITION
<b>⚠ DANGER!</b>	Risque d'accident mortel, de blessures corporelles graves ou d'explosion.
<b>⚠ MISE EN GARDE</b>	Risque de blessures corporelles, d'incendie ou de choc électrique.
<b>ATTENTION</b>	Risque de dégât matériel.
<b>REMARQUE</b>	Inconvénient seulement, en cas de non-respect. Absence de risque de blessures corporelles, d'incendie ou de choc électrique.

## MISE AU REBUT



Le pictogramme poubelle barrée sur notre produit, notre documentation ou nos emballages vous rappelle qu'au sein de l'Union européenne, tous les produits électriques et électroniques, batteries et accumulateurs (batteries rechargeables) doivent être mis au rebut dans les centres de collecte indiqués à la fin de leur période de vie. Vous ne devez pas

mettre au rebut ces produits avec les déchets municipaux non triés. Ils doivent être mis au rebut dans le respect de la réglementation en vigueur dans votre secteur.

## PRÉCAUTIONS

- ⚠ **DANGER HIGH VOLTAGE! NEVER** touch the antenna connector during transmission. This may result in an electrical shock or burn.
- ⚠ **DANGER! NEVER** operate the transceiver near unshielded electrical blasting caps or in an explosive atmosphere.
- ⚠ **DANGER! NEVER** place the transceiver where air bag deployment may be obstructed during mobile operations.
- ⚠ **WARNING RF EXPOSURE!** This transceiver emits Radio Frequency (RF) energy. Extreme caution should be observed when operating this transceiver. If you have any questions regarding RF exposure and safety standards please refer to the Federal Communications Commission Office of Engineering and Technology's report on Evaluating Compliance with FCC Guidelines for Human Radio Frequency Electromagnetic Fields (OET Bulletin 65).
- ⚠ **WARNING! NEVER** operate the transceiver while driving a vehicle. Safe driving requires your full attention—anything less may result in an accident.
- ⚠ **WARNING! NEVER** operate the transceiver with an earphone or other audio accessories at high volume levels. Continuous high volume operation may cause a ringing in your ears. If you experience ringing, reduce the volume level or discontinue use.
- ⚠ **WARNING! NEVER** connect the transceiver to an AC outlet. This may pose a fire hazard or result in an electric shock.
- ⚠ **WARNING! NEVER** connect the transceiver to a power source of more than 16 V DC such as a 24 V DC battery. This could cause a fire or damage the transceiver.
- ⚠ **WARNING! NEVER** reverse the DC power cable polarity when connecting to a power source. This could damage the transceiver.

---

⚠ **WARNING! NEVER** operate the transceiver during a lightning storm. It may result in an electric shock, cause a fire or damage the transceiver. Always disconnect the power source and antenna before a storm.

⚠ **WARNING! NEVER** cut the DC power cable between the DC plug and fuse holder. If an incorrect connection is made after cutting, the transceiver may be damaged.

⚠ **WARNING! NEVER** let metal, wire or other objects touch any internal part or connectors on the rear panel of the transceiver. This may result in an electric shock or this could cause a fire or damage the transceiver.

⚠ **WARNING! NEVER** operate or touch the transceiver with wet hands. This may result in an electric shock or may damage the transceiver.

⚠ **WARNING! NEVER** operate the transceiver if it emits an abnormal odor, sound or smoke. Immediately turn OFF the transceiver power and remove the power cable. Contact your Icom dealer or distributor for advice.

⚠ **WARNING! NEVER** place the transceiver where normal operation of the vehicle may be hindered or where it could cause bodily injury.

**CAUTION: DO NOT** expose the transceiver to rain, snow or any liquids.

**CAUTION: DO NOT** change the internal settings of the transceiver. This may reduce transceiver performance and/or damage the transceiver.

**CAUTION: DO NOT** use harsh solvents such as Benzine or alcohol to clean the transceiver, as they will damage the transceiver's surfaces. If the transceiver becomes dusty or dirty, wipe it clean with

a soft, dry cloth.

**CAUTION: DO NOT** place or leave the transceiver in areas with temperatures below  $-10^{\circ}\text{C}$  ( $+14^{\circ}\text{F}$ ) or above  $+60^{\circ}\text{C}$  ( $+140^{\circ}\text{F}$ ). Be aware that temperatures on a vehicle's dashboard can exceed  $+80^{\circ}\text{C}$  ( $+176^{\circ}\text{F}$ ) in direct sunlight, resulting in permanent damage to the transceiver if left there for long periods of time.

**CAUTION: DO NOT** start the vehicle engine when the transceiver's power is ON. Ignition voltage spikes can damage the transceiver.

**CAUTION: DO NOT** use non-Icom microphones. Other manufacturer's microphones have different pin assignments, and may damage the transceiver.

**DO NOT** push the PTT when not actually desiring to transmit.

**DO NOT** place the transceiver in excessively dusty environments or in direct sunlight.

**DO NOT** place the transceiver against walls or putting anything on top of the transceiver. This will obstruct heat dissipation.

**DO NOT** place the transceiver in an insecure place to avoid inadvertent use by unauthorized persons.

**DO NOT** place the transceiver where hot or cold air blows directly onto it, during mobile operation.

**DO NOT** operate the transceiver without running the vehicle's engine, during mobile operation. When the transceiver's power is ON and your vehicle's engine is OFF, the vehicle's battery will soon become exhausted.

**NOTE:** During maritime mobile operation, keep the transceiver and microphone as far away as possible from the magnetic navigation compass to prevent erroneous indications.

**BE CAREFUL!** The rear panel will become hot when continuously operating the transceiver for long periods of time.

---

## PRÉCAUTIONS (Continued)

---

Icom n'est pas responsable de la destruction ou des dommages sur l'émetteur-récepteur Icom, si le dysfonctionnement est causé par :

- Force majeure, sans toutefois s'y limiter, les incendies, tremblements de terre, tempêtes, inondations, la foudre, ou autres catastrophes naturelles, perturbations, émeutes, guerre, ou contamination radioactive.
- L'utilisation de l'émetteur-récepteur Icom avec tout équipement non fabriqué ou approuvé par Icom.

---

## INFORMATION FCC

---

### • POUR LES RAYONNEMENTS NON INTENTIONNELS DE CLASSE B:

Cet équipement a été testé et reconnu conforme aux limites fixées pour un appareil numérique de classe B, conformément au point 15 de la réglementation FCC. Ces limites ont été fixées afin d'assurer une protection raisonnable contre les interférences nocives dans une installation résidentielle.

Cet équipement génère, utilise et peut émettre un rayonnement de fréquence radio. S'il n'a pas été installé conformément aux instructions, il peut par ailleurs créer des interférences perturbant les communications radio. Toutefois, il n'y a aucune garantie que les interférences ne se produiront pas dans une installation particulière.

Si cet équipement crée des interférences perturbant la réception de la radio ou de la télévision, comme cela peut être déterminé en éteignant et en allumant l'équipement, l'utilisateur est invité à essayer de corriger l'interférence en prenant une ou plusieurs des mesures ci-après:

- Réorienter ou changer de place l'antenne de réception.
- Éloigner l'équipement et le récepteur.
- Connecter l'équipement sur une prise sur un autre circuit que celui sur lequel le récepteur est connecté.
- Faire appel au revendeur ou à un technicien radio/TV expérimenté.

**MISE EN GARDE:** Tout changement ou modification, non expressément approuvé par Icom Inc., peut annuler l'autorisation de l'utilisateur à utiliser cet appareil conformément à la réglementation FCC.

---

## IMPORTANT NOTES


---

### ◇ When using the GPS receiver

- GPS signals cannot pass through metal objects. When using the transceiver inside a vehicle, you may not receive GPS signals. We recommend you use it near a window. Please avoid the areas where:
  1. The driver's view will be blocked.
  2. The air bags could deploy.
  3. The unit becomes a driving obstacle.
- The Global Positioning System (GPS) is built and operated by the U.S. Department of Defense. The Department is responsible for accuracy and maintenance of the system. Any changes by the Department may affect the accuracy and function of the GPS system.
- When the GPS receiver is activated, please do not cover the remote controller with anything that will block the satellite signals.
- The GPS receiver may not work if used in the following locations:
  1. Tunnels or high-rise buildings
  2. Underground parking lots
  3. Under a bridge or viaduct
  4. In remote forested areas
  5. Under bad weather conditions (rainy or cloudy day)

### ◇ About GPS antenna

This transceiver's GPS antenna is located at the top back of the controller. If the controller's rear panel is covered with any object that interrupts the GPS signals from the satellites, the GPS receiver will not calculate its position. Therefore, when you are using the GPS feature, be sure the controller is positioned so the antenna has a clear view to receive signals from the satellites.

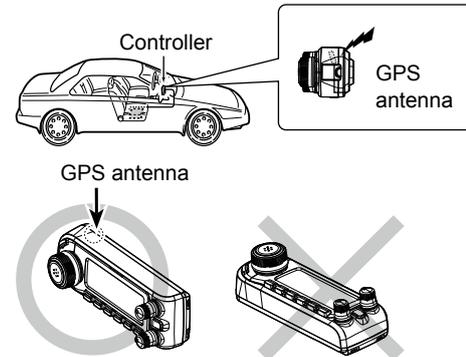

### ◇ Spurious signals

Spurious signals may occur at some frequencies. These are created in the internal circuit and does not indicate a transceiver malfunction. You may avoid the spurious signals with the [Heterodyne function](#). (p. ??)

---

# TABLE OF CONTENTS

---

---

## TABLE OF CONTENTS (Continued)

---

Icom, Icom Inc. and Icom logo are registered trademarks of Icom Incorporated (Japan) in Japan, the United States, the United Kingdom, Germany, France, Spain, Russia, Australia, New Zealand, and/or other countries.

Adobe and Adobe Reader are either registered trademarks or trademarks of Adobe Systems Incorporated, in the United States and/or other countries.

The Bluetooth word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Icom Inc. is under license.

Other trademarks and trade names are those of their respective owners.

Android and the Android logo are trademarks of Google, Inc.

IOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.


All other products or brands are registered trademarks or trademarks of their respective holders.

## ■ Installing the controller

### ◇ When attaching to the main unit


#### Attaching:

Slide the controller in the direction of the arrow until the controller is locked and makes a 'click' sound.

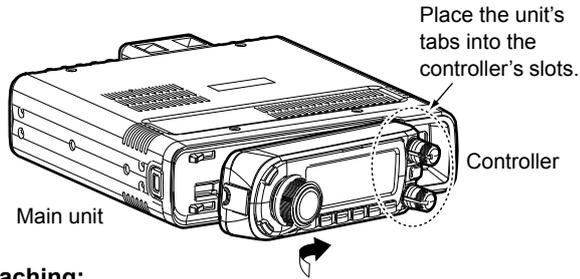

#### Detaching:

1. Push the release button on the main unit. (1)
2. Slide the controller to the left (2), then pull it out. (3)

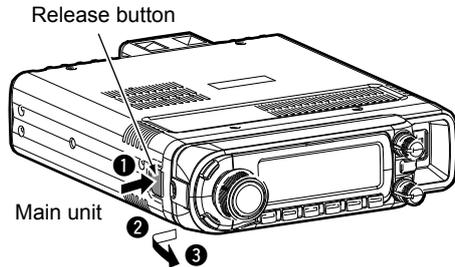


### ◇ When connecting to the main unit

Connect the controller to the main unit with the supplied control cable.

① The following longer cables are usable, depending on the installation location.

- OPC-440 MIC EXTENSION CABLE: 5 m (16.4 ft)
- OPC-647 MIC EXTENSION CABLE: 2.5 m (8.2 ft)
- OPC-1156 CONTROLLER EXTENSION CABLE: 3.5 m (11.4 ft)
- SP-35 EXTERNAL SPEAKER: 2 m (6.5 ft)
- SP-35L EXTERNAL SPEAKER: 6 m (19.6 ft)
- SP-30 EXTERNAL SPEAKER: 2.8 m (9.1 ft)

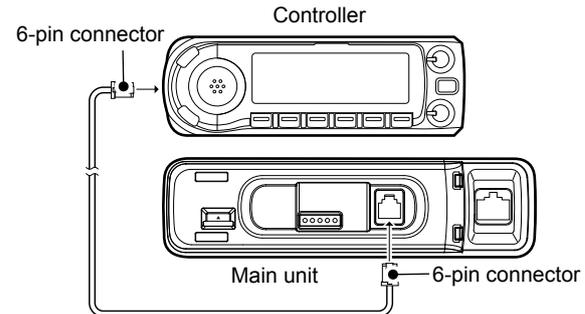


## ■ Installing the controller


### ◇ When installing into your vehicle

You can install the controller on the dashboard or the console of your vehicle with the optional MBA-8 CONTROLLER BRACKET and the MBF-1 MOUNTING BASE. (p. ??)


1. Attach the MBF-1 to the dashboard or the console.  
① See the MBF-1 instruction manual for details.

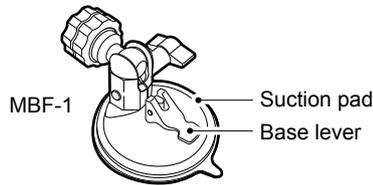

2. Attach the MBA-8 to the controller's rear panel with the two supplied screws, as shown below.

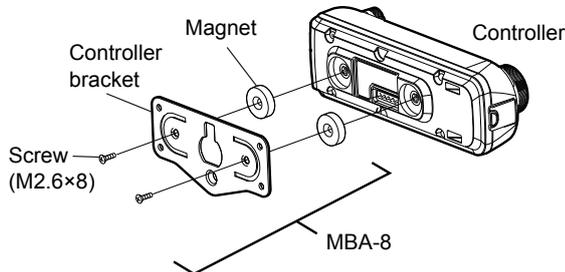

3. Slide the MBA-8's guide down over the MBF-1's locking head, as shown below.  
① Be sure the locking head fits into the slot at the top of the guide.
4. Tighten the lock knob to securely attach the controller.
5. Adjust the viewing angle of the controller, then tighten the adjustment knob.

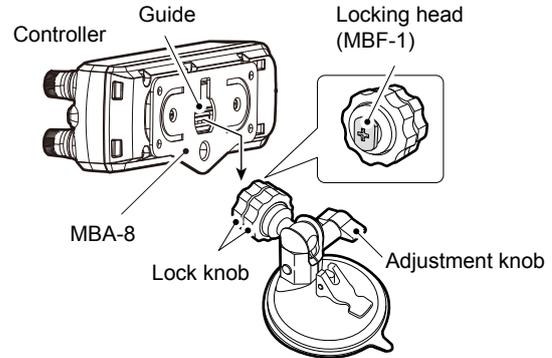

# 1 INSTALLATION AND CONNECTIONS


## ■ Installing the controller (Continued)

### ◇ Attaching to a flat surface

You can install the controller on a flat surface with the optional MBA-8 CONTROLLER BRACKET.

When attaching the MBA-8 to a wall, use self-tapping screws\* (3 mm, 0.12 in (d)).


1. Attach the magnets to the controller.

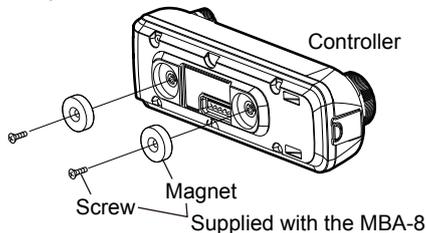

2. Attach the MBA-8 to a wall.

Self-tapping screw\*  
(3 mm, 0.12 in (d))

When you attach a screw to this hole, use a self-tapping screw\* (4 mm, 0.2 in (d)).

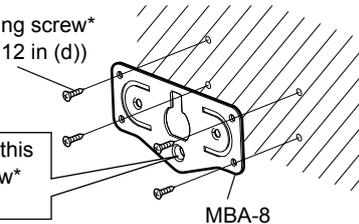


3. Attach the controller to the MBA-8 that is attached to a wall.

\* User supplied

## ■ Connecting a microphone

Plug in the microphone into the microphone jack on the main unit.

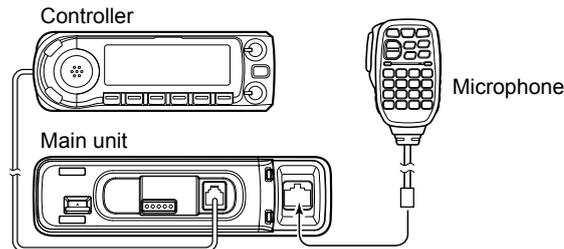


## ■ Connecting to a DC power supply

Confirm that the transceiver is OFF, then connect to a 13.8 V DC power source with at least 15 A capacity.

**⚠ WARNING! NEVER** remove the fuse holders from the DC power cable.

**CAUTION: DO NOT** reverse the polarity when connecting the DC power cable.

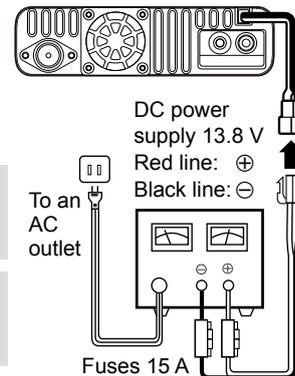


## ■ Installing in a vehicle

**CAUTION: DO NOT** place the main unit or remote controller where normal operation of the vehicle may be hindered or where it could cause bodily injury.


**CAUTION: DO NOT** place the main unit or remote controller where air bag deployment may be obstructed.

**CAUTION: DO NOT** place the transceiver or remote controller where hot or cold air blows directly onto it.

### Remote controller installation

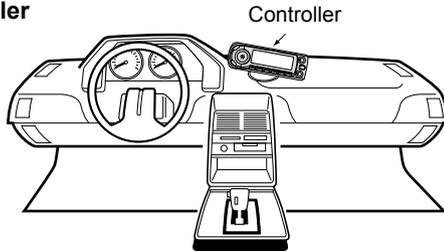


### Main unit installation

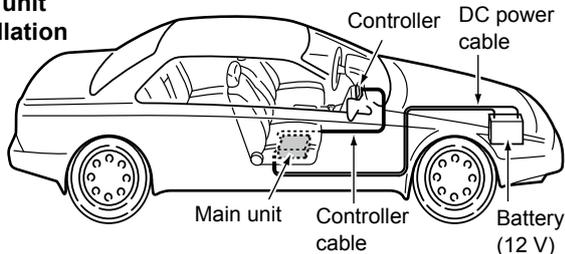

### ◇ Using the mounting bracket

You can install the main unit on the dashboard or the console of your vehicle with the optional MBF-4 MOBILE BRACKET.

1. Drill 4 holes where the mounting bracket is to be installed.
  - ① Approximately 5.5 ~ 5.6 mm (0.21 ~ 0.22 inch)(d) when using nuts, approximately 2 ~ 3 mm (0.08 ~ 0.12 inch)(d) when using self-tapping screws.
2. Insert the supplied screws, nuts and washers through the mounting bracket and tighten.
3. Adjust the angle to suit your needs.

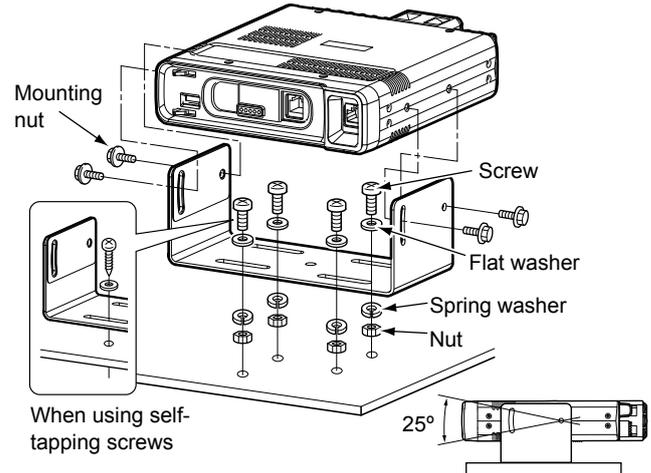

# 1 INSTALLATION AND CONNECTIONS

## ■ Installing an antenna

To obtain maximum performance from the transceiver, select a high-quality antenna and mount it in a good location.


### Antenna location

Roof-mount antenna


(Drill a hole or use a magnetic mount.)

Gutter-mount antenna

Trunk-mount antenna

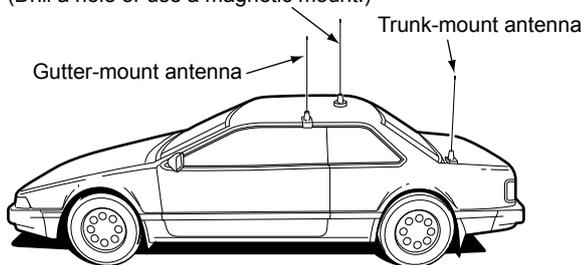

Connect the antenna to the antenna connector on the rear panel of the main unit.

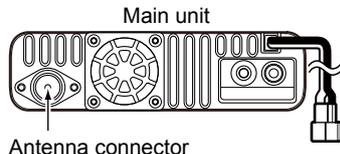

### NOTE:

- Make the coaxial cable as short as possible.
- Be sure to seal the antenna connection.


### ◇ About the antenna

For radio communications, the antenna is of critically importance, along with output power and receiver sensitivity. Select a well-matched 50  $\Omega$  antenna and coaxial cable feedline. We recommend 1.5:1 or better Voltage Standing Wave Ratio (VSWR) on your operating bands.

### ◇ About the internal duplexer

The transceiver has an internal duplexer, and you can easily connect a dual band antenna. If you connect separate the VHF and UHF antennas, use an external duplexer.

### When you connect VHF and UHF antennas separately:

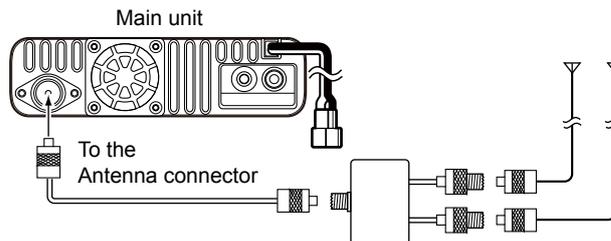

## ■ Connecting to a battery


### ⚠ WARNING!

- **NEVER** remove the fuses from the cable connecting the transceiver to a power source, especially a car battery.
- **NEVER** connect the transceiver directly to a 24 V battery. The transceiver may not receive well on some frequencies when installed in a hybrid vehicle, or any type of electric vehicle (fuel cell vehicle). This is because vehicle's electric components, such as the inverter system, generate a lot of electrical noise.

### CAUTION:

- **DO NOT** use a cigarette lighter socket as a power source when operating in a vehicle. The plug may cause voltage drops and ignition noise may be superimposed onto transmit or receive audio.
- **DO NOT** pull or bend the DC power cable.
- **DO NOT** reverse the polarity when connecting the DC power cable.
- Use a rubber grommet when passing the DC power cable through a metal plate to prevent a short circuit.

### CONNECTING TO A VEHICLE BATTERY

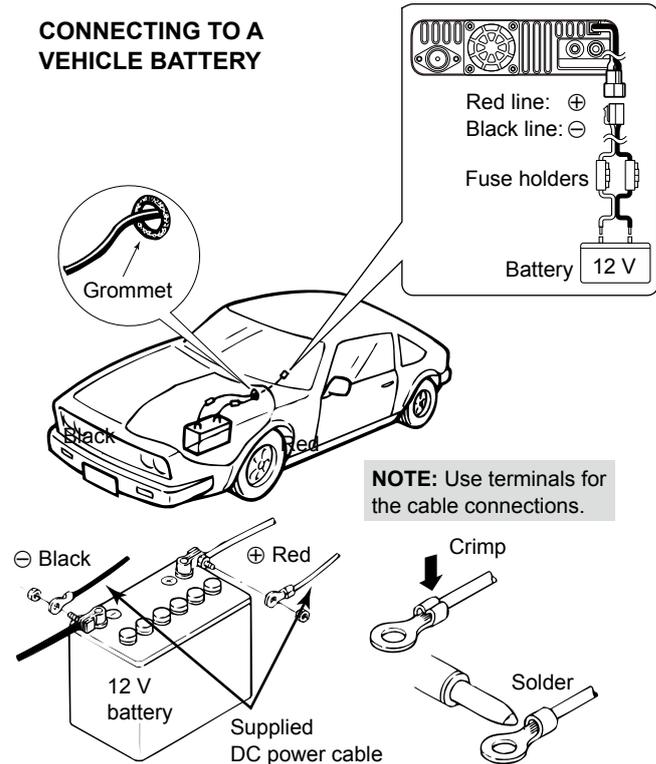

# 1 INSTALLATION AND CONNECTIONS


## ■ Installing the UT-137

When you install the optional UT-137 Bluetooth® unit in the transceiver, you can communicate with other Bluetooth device.


**WARNING! BE SURE TO** disconnect the DC power cable before starting the following procedures.

**NOTE:** Before touching the transceiver or UT-137, remove static electricity from your body by touching a grounded object such as a grounded piece of equipment. The static electricity from your body may damage the transceiver or the UT-137, or cause data lost.


1. Turn the transceiver upside-down.
2. Remove the three screws from the bottom of the transceiver and the four screws from the sides, then lift off the bottom cover.

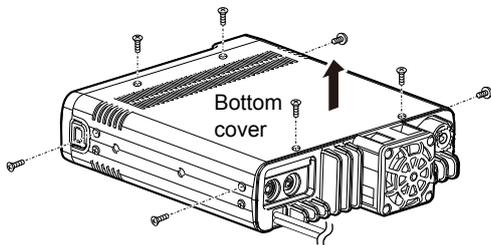


3. Place one end the UT-137 under the edge of the front panel, with the connector facing down.

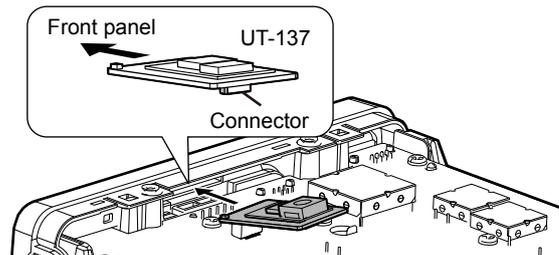

4. Carefully, push the connector into the socket.  
① Ensure the UT-137 is installed correctly.

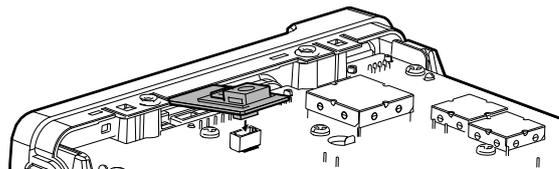

5. Reattach the bottom cover and screws.

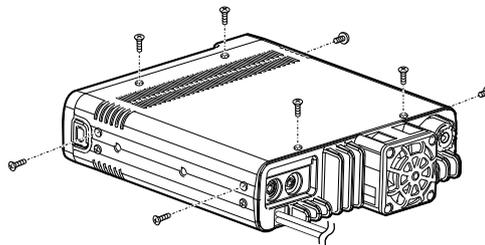

## ■ Electromagnetic Interference


When you use a Bluetooth device, pay attention to the following:

Bluetooth devices operate on the 2.4 GHz band.

The 2.4 GHz band is also used by other devices, such as Wireless LAN products, microwave ovens, RFID systems, amateur radio stations, and so on.

When using the Bluetooth device near such devices, interference may occur, causing a decrease in communication speed, and an unstable connection. In such cases, use this device away from the other devices, or stop using those devices.

## ■ Controller — Front panel

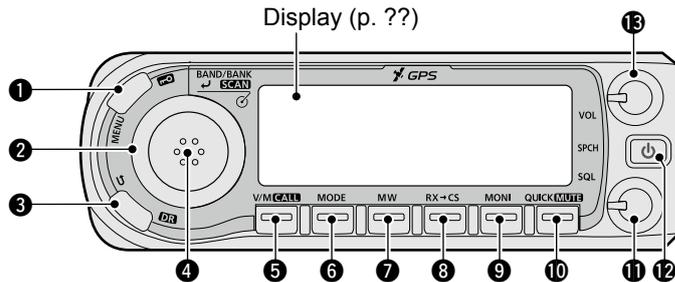

### 1 MENU • LOCK KEY [MENU] (MENU)

- Push to display the MENU screen.
- Hold down for 1 second to turn the Lock function ON or OFF.

### 2 CLEAR • DR KEY [DR] (DR)

- Push to toggle between “TO” and “FROM” on the DR screen.
- Push to go back a tree level of the MENU screen.
- Hold down for 1 second to display the DR screen.

### 3 TUNING DIAL [DIAL] (DIAL)

- Selects an operating frequency.
- Selects an option of “TO” or “FROM” on the DR screen.
- Selects a Menu or Quick Menu item.
- Selects an option of the Menu or Quick Menu item.
- Selects a character in the Character Entry mode.

### 4 BAND/BANK • ENTER • SCAN KEY [BAND/BANK] (SCAN)

- In the VFO mode, push to enter the Band Select mode.
- In the Memory mode, push to open the Bank Select window.
- Push to set a Menu or Quick Menu item option.
- Hold down for 1 second to open the Scan Type Select window.
- Hold down for 3 seconds to start the last selected scan.

### 5 VFO/MEMORY • CALL KEY [V/M] (CALL)

- Push to toggle between the VFO and Memory modes.
- In the Call channel mode, push to cancel the mode.
- Hold down for 1 second to enter the Call channel mode.

### 6 MODE KEY [MODE] (MODE)

- Push to select an operating mode.

**7 MEMORY WRITE KEY [MW]**

- Push to open the Memory Write window.
- Hold down for 1 second to save the operating data into a blank channel.
- While the scan is paused, hold down for 1 second to set the frequency as a skip channel.

**8 RX CALL SIGN CAPTURE KEY [RX→CS]**

- Push to display the RX>CS screen.
- Hold down for 1 second to set the received station call sign as the destination (UR) call sign.

**9 MONITOR KEY [MONI]**

Push to turn the Monitor function ON or OFF.

**10 QUICK MENU • MUTE KEY [QUICK] (MUTE)**

- Push to open the Quick Menu window.
- Hold down for 1 second to turn the Mute function ON or OFF.

**11 SQUELCH CONTROL [SQL]**

Adjusts the squelch level.

- ① Normally, set the squelch level to where noise and the "BUSY" icon just disappear. (closed)
- ① The RF attenuator activates and increases the attenuation when rotated clockwise at beyond the center position.

**12 POWER • SPEECH KEY [⏻](SPCH)**

- Push to audibly announce the displayed frequency, operating mode or call sign.
- Hold down for 1 second to turn the transceiver ON or OFF.


**13 MICROPHONE CONNECTOR (p. ??)**

Connects the supplied or an optional microphone.

**14 VOLUME CONTROL [VOL]**

Adjusts the audio volume level.

### ■ Controller — Display

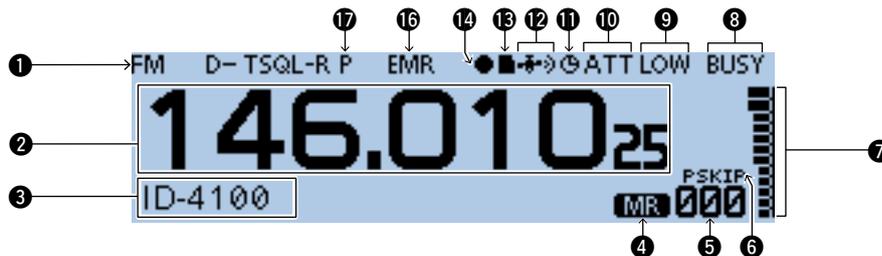

#### ① MODE ICONS

Displays the selected operating mode.

#### ② FREQUENCY READOUT

Displays the operating frequency.

#### ③ MEMORY NAME DISPLAY

#### ④ MEMORY MODE ICON

#### ⑤ MEMORY CHANNEL NUMBER

- Displays the selected Memory channel number, Memory Bank, and so on.
- “WX” is displayed when the Weather channel mode is ON. (Only the USA version transceiver)

#### ⑥ SKIP ICON

- SKIP: Displayed when Memory Skip is selected.
- PSKIP: Displayed when Program Skip is selected.

#### ⑦ S/RF METER

- Displays the relative signal strength of the receive signal.
- Displays the output power level of the transmit signal.

#### ⑧ BUSY/MUTE ICONS

- BUSY: Displayed while a signal is being received or the squelch is open.  
Blinks while the monitor function is activated.
- MUTE: Displayed while the mute is activated.
- TX: Displayed while transmitting.

#### ⑨ POWER ICONS

Displays the output power level of the transmit signal in three levels.

- ① When you select high power, the power icon disappears.

**10 S-METER SQUELCH/ATTENUATOR ICONS**

- S SQL: Displayed when the S-meter squelch is activated.
- “ATT: Displayed when the Attenuator function is activated.

**11 AUTO POWER OFF ICON**

Displayed when the Auto power OFF function is ON.

**12 GPS ICON**

- Displays the status of the GPS receiver.
-  is displayed when you set the GPS alarm.

**13 microSD CARD ICON**

- Displayed when a microSD card is inserted.
- Blinks while accessing the microSD card.

**14 RECORD ICON**

- : Displayed while the transceiver is recording.
- : Displayed while the recording is paused.

**15 Bluetooth ICON**

Displayed when you make a Bluetooth connection between your transceiver that has the optional UT-137 Bluetooth unit installed and a Bluetooth device.

**16 EMR/BK/PACKET LOSS/AUTO REPLY ICONS**

- EMR: Displayed when you select the Enhanced Monitor Request (EMR) mode.
- BK: Displayed when you select the Break-in (BK) mode.
- L: Displayed when packet loss has occurred.
- : Displayed when you select the Automatic Reply function.

**17 PRIORITY ICON**

Displayed when Priority watch is turned ON.

**18 TONE ICONS**

Mode: FM/FM-N

- TONE: Enables the subaudible tone encoder.
- TSQL ((•)): Enables the tone squelch with the Pocket Beep function.
- TSQL: Enables the Tone Squelch function.
- DTCS ((•)): Enables the DTCS squelch with the Pocket Beep function.
- DTCS: Enables the DTCS Squelch function.
- TSQL-R: Enables the Reverse Tone Squelch function.
- DTCS-R: Enables the Reverse DTCS Squelch function.
- DTCS (“DTCS” blinks):  
When you transmit, the selected DTCS code is superimposed on your normal signal.  
When you receive, the function is OFF.
- T-DTCS (“T” blinks):  
When you transmit, the selected subaudible tone is superimposed on your normal signal.  
When you receive, the DTCS squelch opens only for a signal that includes a matching DTCS code and polarity. (Audio is heard)

## 2 PANEL DESCRIPTION

### ■ Controller — Display (Continued)



#### 18 TONE ICONS (Continued)

##### • D-TSQL (“D” blinks):

When you transmit, the selected DTCS code is superimposed on your normal signal.

When you receive, the tone squelch opens only for a signal that includes a matching tone frequency. (Audio is heard)

##### • T-TSQL (“T” blinks):

When you transmit, the selected subaudible tone is superimposed on your normal signal.

When you receive, the tone squelch opens only for a signal that includes a matching tone frequency. (Audio is heard)


#### Mode: DV

- DSQ L ((•)): Enables the Digital Call Sign squelch function with the Pocket Beep function.
- DSQ L: Enables the Digital Call Sign squelch function.
- CSQ L ((•)): Enables the Digital Code squelch function with the Pocket Beep function.
- CSQ L: Enables the Digital Code squelch function.

#### 19 DUPLEX ICON


- “D-”: Displayed while the minus duplex operation.
- “D+”: Displayed while the plus duplex operation.

## ■ Main unit — Front panel

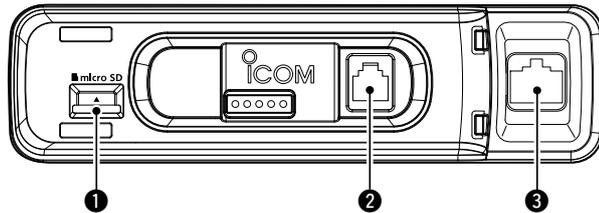

- ❶ **microSD CARD SLOT [micro SD]**  
Insert a microSD card (user supplied).
- ❷ **CONTROLLER CONNECTOR**  
Connect to the controller using the supplied control cable.
- ❸ **MICROPHONE CONNECTOR**  
Plug in the supplied or optional microphone.


### ◇ Microphone connector information

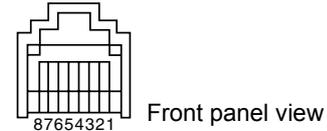

PIN No.	NAME	DESCRIPTION	SPECIFICATIONS
1	8 V	+8 V DC output	Maximum 10 mA
2	MIC U/D	Frequency Up/Down	UP: Ground DN: Ground through 470 Ω
3	M8V SW	Grounds when the HM-207 is connected	—
4	PTT	PTT input	Ground for transmission
5	MIC E	Microphone ground	—
6	MIC	Microphone input	—
7	GND	PTT ground	—
8	DATA IN	When the HM-207 is connected, inputs HM-207 data	—

## 2 PANEL DESCRIPTION

### ■ Main unit — Rear panel

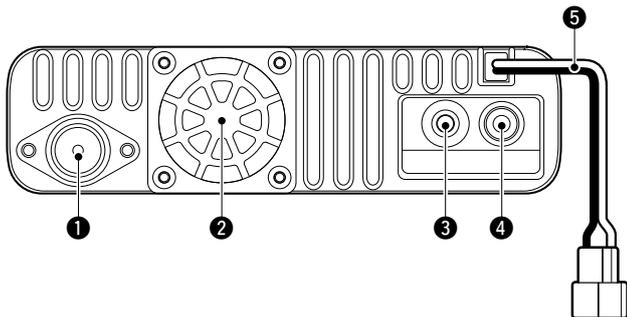

#### ❶ ANTENNA CONNECTOR

Connect a 50  $\Omega$  impedance antenna with a PL-259 connector.

- ❶ The transceiver has a built-in duplexer, so you can use a 144 and 430 MHz dual-band antenna without needing an external duplexer.

#### ❷ COOLING FAN

The cooling fan for heat dissipation.

- ❶ You can select the Fan control option in the MENU screen, and automatically start to rotate when you begin transmitting, or continuously rotate from power ON.

#### ❸ DATA JACK [DATA]

Connect a PC through the optional data communication cable, for cloning or data communication in the DV mode.

#### ❹ EXTERNAL SPEAKER JACK


Connect to an 8  $\Omega$  external speaker.

#### ❺ DC POWER SOCKET [DC 13.8V]

Connect a 13.8 V DC power source through the supplied DC power cable.

## ■ Microphone (HM-207S)

With the HM-207S, you can input numbers for frequency or Memory channel setting, and easily adjust the audio volume or squelch level.

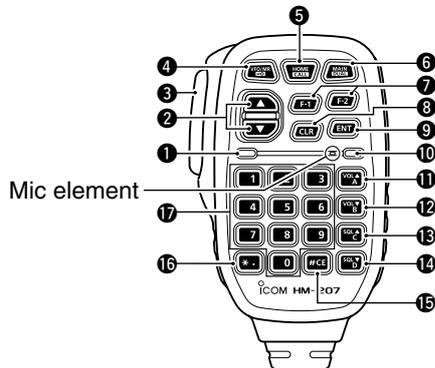


- ① **LED 1**  
Lights red while holding down [PTT].
- ② **[▲]/[▼] (UP/DOWN) KEYS**
  - Push to change the operating frequency or Memory channel.
  - Hold down to continuously change the frequency or Memory channel.
- ③ **[PTT] SWITCH**  
Hold down to transmit, release to receive.

- ④ **[VFO/MR-] KEY**
  - Push to toggle between the VFO and Memory modes.
  - Hold down for 1 second to turn the Lock function ON or OFF.
- ⑤ **[HOME/CALL] KEY**
  - Push to select the Home channel.
  - Hold down for 1 second to enter or cancel the Call channel mode.
- ⑥ **[BAND] KEY**  
Push to select the operating bands.
- ⑦ **[F-1] KEY**  
Push to activate the preset function of the [F-1] key.  
(Default: During RX/Standby: [MODE]  
During TX: [T-CALL])
- [F-2] KEY**  
Push to activate the preset function of the [F-2] key.  
(Default: During RX/Standby: [Monitor]  
During TX: [---])

**TIP:** You can assign a desired function in the MENU screen.

## 2 PANEL DESCRIPTION

### ■ Microphone (HM-207) (Continued)

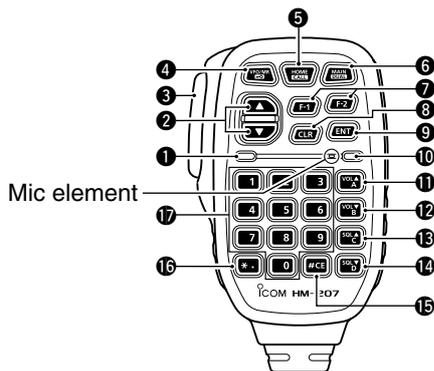

#### 8 [CLR] KEY

Push to cancel the MENU screen or Quick Menu window, then return to the standby screen.

#### 9 [ENT] KEY

- In the VFO mode, push to enter the Frequency Entry mode.
- In the Memory mode, push to enter the Memory Channel Number Entry mode.
- After entering the number, push to set.

#### 10 LED 2

Lights green when transceiver's power is ON.

#### 11 [VOL▲/A] KEY

- Push to increase the audio output level.
- In the DTMF Code Entry mode, push to input 'A.'

#### 12 [VOL▼/B] KEY

- Push to decrease the audio output level.
- In the DTMF Code Entry mode, push to input 'B.'

#### 13 [SQL▲/C] KEY

- Push to increase the squelch level.
- In the DTMF Code Entry mode, push to input 'C.'

#### 14 [SQL▼/D] KEY

- Push to decrease the squelch level.
- In the DTMF Code Entry mode, push to input 'D.'

#### 15 [#/CE] KEY

- In the Frequency Entry mode, push to delete a number.
- In the DTMF Code Entry mode, push to input '#.'

#### 16 [\*/.] KEY

- In the Frequency Entry mode, push to input a '.' (decimal point).
- In the DTMF Code Entry mode, push to input '\*'.

#### 17 [0] to [9] KEYS

In the Frequency or DTMF Code Entry mode, push to input '0' through '9.'

### ◇ Setting frequency and Memory channel

Example of frequency setting:

- First, push [VFO/MR] to select the VFO mode.

To enter the frequency 435.680 MHz:

- Push [4], [3], [5], [6], [8], [0], then [ENT].

To change 435.680 MHz to 435.540 MHz:

- Push [•], [5], [4], [0], then [ENT].

To enter the 433.000 MHz frequency:

- Push [4], [3], [3], then [ENT].

Example of Memory channel setting:

- First, push [VFO/MR] to select the Memory mode.


To select the Memory channel '5':

- Push [5] then [ENT].

## ■ Turning ON the power

Hold down [⏻] for 1 second to turn ON the power.

- A beep sounds.
  - After the opening message and power source voltage are displayed, the operating frequency or repeater name is displayed.
- ① Hold down [⏻] for 1 second again to turn OFF the power.

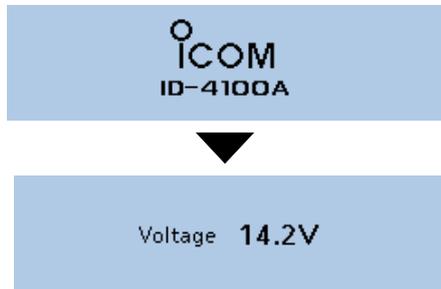

## ■ Monitor function

The Monitor function is used to listen to weak signals without disturbing the squelch setting.

Push [MONI] to open or close the squelch.


- “BUSY” blinks and audio is heard when the squelch is open.

## ■ Setting audio volume and squelch level

1. Rotate [VOL] to adjust the audio level.
2. Rotate [SQL] until the noise and “BUSY” just disappear.



- Rotating [SQL] clockwise makes the squelch tight. Tight squelch is for strong signals.
- When rotating [SQL] clockwise beyond the center position, [SQL] can be used as ‘S-meter Squelch’ or ‘Attenuator.’ Select the [SQL] option in the MENU screen. (p. ??) (MENU > Function > Squelch/ATT Select)

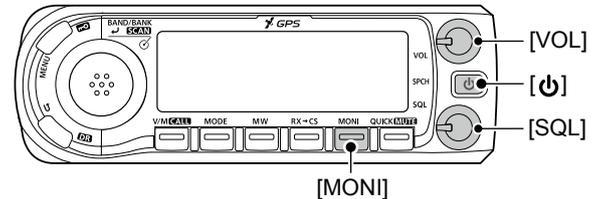

## ■ Quick Menu window

In the Quick Menu window, the selectable items differ, depending on the operating mode or function. The items listed below are examples.


VFO mode	Memory mode	Call CH mode	DR function
Band Select	Bank Select	TX Power	Group Select
TX Power	TX Power	DUP	Repeater Detail
DUP	DUP	TONE	TX Power
TONE	TONE	TS	DTMF TX
MHz	TS	DTMF TX	Voice TX
TS	SKIP	Voice TX	RX History
DTMF TX	DTMF TX	GPS Information	GPS Information
Voice TX	Voice TX	GPS Position	GPS Position
GPS Information	GPS Information	Weather Information*1	Weather Information*1
GPS Position	GPS Position	Temporary Skip*2	Temporary Skip*2
Weather Information*1	Weather Information*1	PRIO Watch	PRIO Watch
Temporary Skip*2	Temporary Skip*2	Weather CH*3	Weather CH*3
PRIO Watch	PRIO Watch	Weather Alert*3	Weather Alert*3
Weather CH*3	Weather CH*3	Display Type	Home CH Set
Weather Alert*3	Weather Alert*3	Clock	DSQL
Home CH Set	Home CH Set	Voltage	SKIP
Clock	Display Type	Band Scope	Clock
Voltage	Clock	<<REC Start>>	Voltage
Band Scope	Voltage		<<REC Start>>
<<REC Start>>	Band Scope		
	<<REC Start>>		

\*1 Displayed when the D-PRS TX format is set to "Weather."

\*2 Displayed while scanning.

\*3 Displayed in only the USA version transceivers

## ◇ Quick Menu window operation

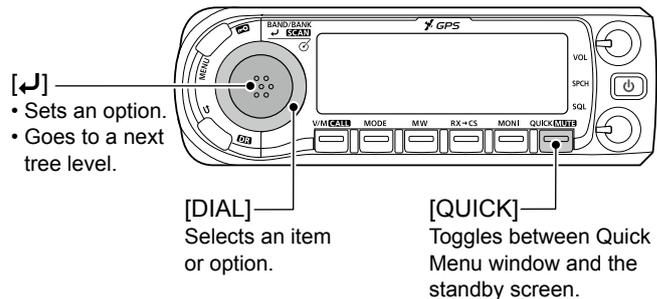

### Simplified description—'Select' operation


In this manual, user's 'Select' operation is simplified.

#### Simplified description:

1. Push [QUICK].
2. Select "TX Power," then push [↵].

#### Operation:

1. Push [QUICK] to open the Quick Menu window.
2. Rotate [DIAL] to select "TX Power," then push [↵].

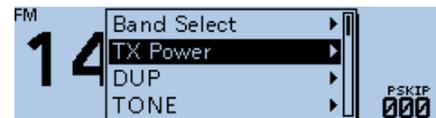

## 3 BASIC OPERATION

### ■ Selecting the Mode

#### ◇ VFO mode

You use the VFO mode to set the operating frequency.

#### ◇ Memory mode

You use the Memory mode to operate on Memory channels.

#### ◇ Call channel mode

You use the Call channel mode to operate on the Call channels.

1. Push [V/M] several times until you enter the VFO or Memory mode.
  - In the Memory mode, **MR** and the selected Memory channel number are displayed.

#### ① Information


- Pushing [V/M] toggles between the VFO and Memory modes.
  - To enter the Call channel mode, hold down [V/M](CALL) for 1 second.
  - In the Call channel mode, “144 C0,” “144 C1,” “430 C0,” or “433 C1” is displayed.
  - In the Call channel mode, push [V/M](CALL) to cancel the mode.
2. Rotate [DIAL] to select an operating frequency or a channel.

#### ◇ Weather channel mode

(Selectable in only the USA version transceivers)

You can use the Weather channel mode to hear weather broadcasts from the NOAA (National Oceanographic and Atmospheric Administration) broadcasts.

1. Push [QUICK].
  2. Rotate [DIAL] to select “WX CH,” then push [↵].
    - The selected weather channel number (“WX-01” to “WX-10”) is displayed.
- ① To cancel the mode, select “WX CH OFF” in the Quick Menu window.

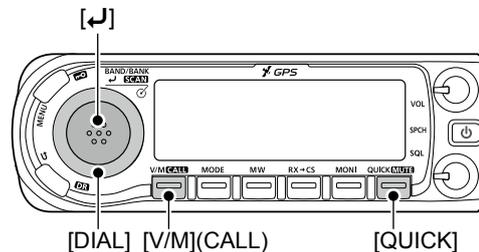

## ■ Selecting the operating band

The transceiver can receive on the AIR, 144 MHz, 230 MHz, 300 MHz, and 430 MHz bands.

You can transmit on only the amateur band frequencies.

1. Push [V/M] several times until you enter the VFO mode.
2. Push [BAND].
  - Enters the Band Select mode.



3. Rotate [DIAL] to select an operating band.
4. Push [↵].
  - Sets the band, then returns to the standby screen.

**TIP:** You can select the operating band in the Quick Menu window.

1. Push [QUICK].
2. Rotate [DIAL] to select “Band Select,” then push [↵].
3. Select an operating band, then push [↵].


## ■ Selecting the operating mode

The transceiver has a total of 5 operating modes, AM, AM-N, FM, FM-N, and DV. (Default: FM)

By pushing [MODE], you can select an operating mode.

### ① Information

- You can select the AM mode for only the AIR, 230 MHz, and 300 MHz bands.
- You can select the AM-N mode for only the AIR band.
- You can select the FM, FM-N, or DV modes for only the 144 MHz, 230 MHz, 300 MHz, and 430 MHz bands.
- While in the FM-N mode, the TX modulation is automatically set to narrow (approximately  $\pm 2.5$  kHz)
- When you set the “GPS TX Mode” item to “D-PRS” or “NMEA,”  is displayed besides the mode icon. (See the Operating Guide on the Icom website for details.)

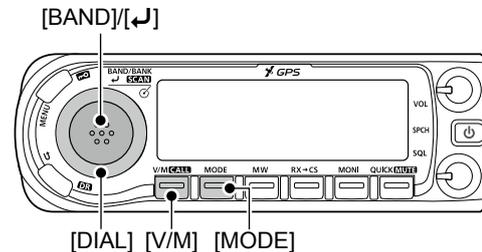

### 3 BASIC OPERATION

## ■ Setting a frequency

### ◇ Selecting a tuning step

If you select the operating frequency by rotating [DIAL] in the VFO mode, the frequency changes in the selected tuning step.

① The VFO mode scan and the Band Scope function also use this step to search for a signal.

1. Push [QUICK].
2. Rotate [DIAL] to select “TS,” then push [↵].
3. Select a tuning step, then push [↵].

#### Options (kHz):

5.0	6.25	8.33*	10.0	12.5	15
20	25	30	50	Auto*	

\*Selectable only in the AIR band mode.

• Sets the tuning step, then returns to the standby screen.


① You can set the tuning step for both the VFO and Memory mode.

① You can set the tuning step for each band.


### ◇ Selecting the 1 MHz tuning

You can change the operating frequency in ‘MHz’ steps for quick tuning.

1. Push [QUICK].
2. Rotate [DIAL] to select “MHz,” then push [↵].
  - Enters the 1 MHz Tuning Select mode.

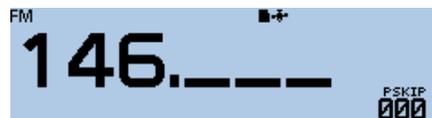

3. Rotate [DIAL].
  - The frequency changes in 1 MHz steps.
4. Push [↵].
  - Sets the frequency, then returns to the standby screen.

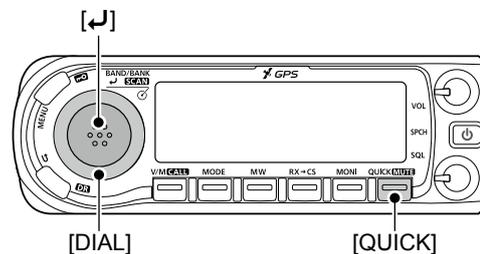

## ■ Lock function

You can use the Lock function to prevent accidental frequency changes and unnecessary function access.

Hold down [LCK] for 1 second to turn the Lock function ON or OFF.

- “LOCK ON” or “LOCK OFF” is briefly displayed when the Lock function is turned ON or OFF.
- ① When the Lock function is ON and you operate the transceiver, “LOCK” is displayed.
- ① You can still use [PWR], [PTT], [SQL], [VOL] and [MONI], even if the Lock function is ON.


## ■ DR function

The DR (D-STAR Repeater) function is for D-STAR repeater operation. This function enables you to easily select the preset repeaters and UR call signs by rotating [DIAL]. See the D-STAR guide comes with transceiver for details.

1. Hold down [DR] for 1 second.
  - Displays the DR screen.
2. Push [DR] several times until you select “FROM.”



3. Rotate [DIAL] to select an access repeater.
4. Push [DR].
  - Cancels the DR screen.

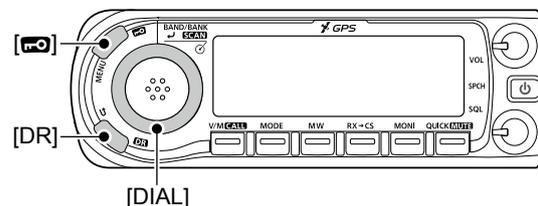


## 3 BASIC OPERATION

### ■ Speech function

The Speech function audibly announces information after pushing [SPCH]. Also, you can set various Speech functions, such as the DIAL Speech function or Mode Speech function on the MENU screen. (p. ??)

#### ① Information

- In the VFO, Memory, or Call channel mode, the Speech function announces the displayed frequency and operating mode.
- On the DR screen, the Speech function announces the displayed call sign.
- When you push [SPCH] while recording the received audio in the DV mode, the received audio will be muted, and no audio is recorded onto the SD card. In modes other than the DV mode, the received audio will be recorded.

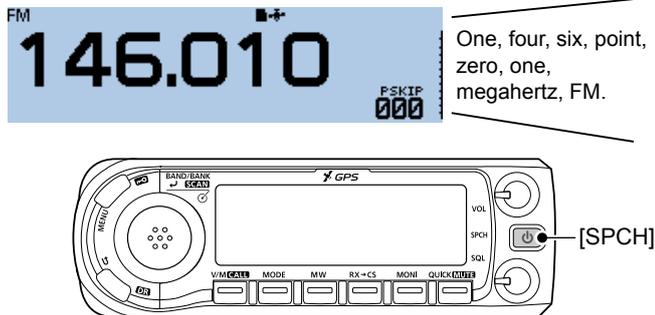


### ■ Home Channel function

You can set the often-used frequency, Memory channel, or repeater as the Home channel in each mode (VFO/Memory/DR). The Home channels are selectable by pushing [HOME] on the microphone in each mode.

- ① To select the Home channel by pushing [HOME], the Home CH key function must be assigned into an [F-1] or [F-2] key. See the Operating Guide on the Icom website for details.

#### ◇ Setting a Home channel

1. Select the VFO or Memory mode, or the DR screen to set a Home channel. (pp. ??, ??)
2. Select a frequency, Memory channel, or an access repeater to be set as a Home channel. (pp. ??, ??)
3. Push [QUICK].
4. Rotate [DIAL] to select “Home CH Set,” then push [↵].
5. Select “Set Frequency” (VFO mode), “Set Channel” (Memory mode), or “Set Repeater” (DR screen), then push [↵].

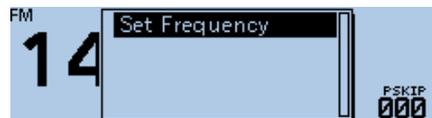

- Sets a Home channel, then returns to the standby screen.

## ■ Transmitting

### ◇ Transmitting on an Amateur band

Before transmitting, monitor the operating frequency to make sure transmitting won't cause interference to other stations on the same frequency.


**CAUTION: DO NOT** transmit without an antenna. This may damage the transceiver.

**NOTE:** You can transmit on only the amateur band frequencies.

1. Set the operating frequency. (p. ??)
2. Push [QUICK].
3. Rotate [DIAL] to select "TX Power," then push [↵].
  - Opens the TX Power Select window.
4. Select the transmit output power level, then push [↵].
  - ① Select a level to suit your operating requirements.
  - ① When you select high power, the power icon disappears.
5. Hold down [PTT] to transmit, and speak at your normal voice level.
  - **TX** is displayed while transmitting.
  - The S/R/F meter displays the output power level.



6. Release [PTT] to receive.

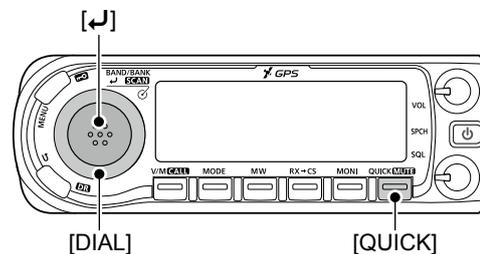

## ■ MENU screen description

The MENU screen is displayed after pushing [MENU]. You can use the MENU screen to set infrequently changed values or function settings.


See the following pages for details of each set screen.

DUP/TONE...	p. ??	DTMF/T-CALL	p. ??
Manage Memory	p. ??	QSO/RX Log	p. ??
Scan	p. ??	Function	p. ??
Voice Memo	p. ??	Display	p. ??
Voice TX	p. ??	Sounds	p. ??
GPS	p. ??	Time Set	p. ??
Call Sign	p. ??	DV Gateway	p. ??
RX History	p. ??	SD Card	p. ??
DV Memory	p. ??	Bluetooth Set	p. ??
My Station	p. ??	Others	p. ??
DV Set	p. ??		
SPEECH	p. ??		

**TIP:** The MENU screen is constructed in a tree structure. You may go to the next tree level, or go back a level, depending on the selected item.

## ■ Selecting a MENU item

### ◇ MENU screen operation

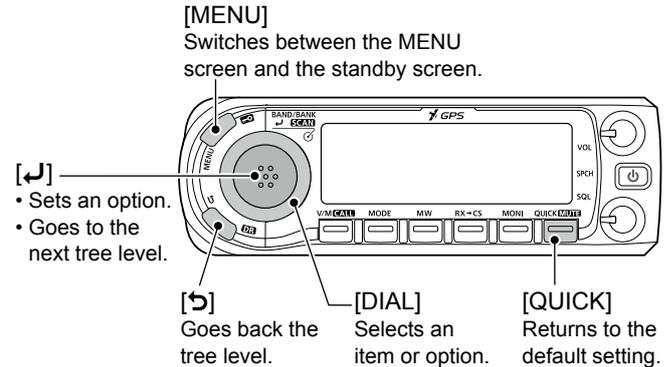

### Simplified description—'Select' operation

In this manual, user's 'Select' operation is simplified as shown below.

#### Simplified description:

Select "30min."

#### Operation:

Rotate [DIAL] to select "30min."

### ◇ Selecting a Menu item

Example: Set the “Auto Power OFF” item to “30 min.”

Time Set > **Auto Power OFF**

1. Push [MENU].
2. Rotate [DIAL] to select “Time Set,” then push [↵].
3. Select “Auto Power OFF,” then push [↵].
4. Select “30min,” then push [↵].
  - Sets the option, then goes back a tree level. (TIME SET screen is displayed.)
5. Push [MENU].
  - Returns to the standby screen.

**TIP: To return to the default setting:**

1. Push [QUICK] in step 4.
2. Select “Default,” then push [↵].

## ■ Menu items and their details

This topic describes the Menu items and their details.

### DUP/TONE...

Settings to access repeaters.

#### Offset Freq

Sets the frequency offset for duplex (repeater) operation.

#### Repeater Tone

Selects a tone frequency used to access the repeaters.

#### TSQL Freq

Selects a tone frequency for the Tone Squelch or the Pocket Beep function.

#### Tone Burst

Turns the Tone Burst function ON or OFF.

This function is used to suppress the squelch tail noise of FM mode on the RX side, if you transmit a signal which superimposes the CTCSS tone or subaudible tone.

#### DTCS Code

Selects a DTCS (both encoder/decoder) code for DTCS Squelch or the Pocket Beep function.

#### DTCS Polarity

Selects the DTCS polarity for the DTCS Squelch or the Pocket Beep function.

#### Digital Code

Selects a digital code for the Digital Code Squelch function.

## 4 MENU SCREEN

### ■ Menu items and their details (Continued)

#### Manage Memory

Displays your Memory or Call channel data.

##### Memory CH

Displays the Memory channels.

##### Call CH

Displays the Call channels.

#### Scan

Set scan options.

##### Pause Timer

Selects the Scan Pause time. When receiving signals, the scan pauses according to the this set period of time.

##### Resume Timer

Selects the Scan Resume time from a pause after the received signal disappears.

##### Temporary Skip Timer

Selects the Temporary Skip time. When the time is set, specified frequencies are skipped for this set period of time during a scan.

##### Program Skip

Turns the Program Skip Scan function ON or OFF for a VFO mode scan.

##### Bank Link

Selects banks to be scanned during a Bank Link scan.

##### Program Scan Edge

Sets the frequency ranges for a Program scan.

##### Program Link

Sets the Link function for the Program Scan Edge channels. See the [Operating Guide on the Icom website](#) for details.

#### Voice Memo

Set the TX/RX voice recording options.

##### QSO Recorder

Set QSO recorder options.

##### <<REC Start>>\*

Starts recording the received signal audio.

##### Play Files\*

Plays the recorded audio.

##### Recorder Set

##### REC Mode

Selects whether or not to record the TX audio.

##### RX REC Condition

Selects whether or not the squelch status affects the RX voice audio recording.

##### File Split

Selects whether or not to automatically create a new file if transmission and reception, or squelch status (open and close) is changed.

##### PTT Auto REC

Turns the PTT Automatic Recording function ON or OFF.

##### Player Set

##### Skip Time

Sets the Skip time to rewind or forward the recorded audio when you push the fast-rewind or fast-forward key during playback.

##### DV Auto Reply\*

Records a voice audio to use for the Auto Reply function in the DV mode.

\*A microSD card is required.

**Voice TX**

Set microphone voice recording options.

**Record\***

Starts recording the microphone audio.

**TX Set****Repeat Time**

Sets the repeat interval. The transceiver repeatedly transmits the recorded voice audio at this interval.

**TX Monitor**

The TX Monitor function outputs the TX voice audio from the speaker during voice transmission.

**<<TX>>\***

The transceiver transmits the recorded voice audio.

**GPS**

Set GPS options.

**GPS Set****GPS Select**

Selects either the internal or an external GPS receiver that the transceiver receives its position data from.

**Manual Position**

Manually enter your current position.

**GPS Out (To DATA jack)**

Turns the output of GPS information from the internal GPS receiver to the [DATA] jack ON or OFF.

**GPS TX Mode**

Set the GPS TX mode.

**OFF**

Turns OFF the GPS TX function.

**D-PRS (DV-A)**

(GPS > GPS TX Mode)

Set D-PRS options.

**Unproto Address**

Enters an unproto address, or keeps the default.

**TX Format****Position****Symbol**

Selects a desired D-PRS Symbol to transmit.

**SSID**

Selects the APRS® call sign SSID.

**Comment**

Enters a comment to transmit.

**Time Stamp**

Selects the format to transmit the current UTC time as a time stamp.

**Altitude**

Turns the altitude transmit option ON or OFF.

**Data Extension**

Selects whether or not to transmit the course/speed, power/height/gain/directivity data.

**Object** (GPS > GPS TX Mode > TX Format)

**Object Name**

Enters a object station name to transmit.

**Data Type**

Selects a object station's status to transmit.

**Symbol**

Selects a object station's symbol to transmit.

\*A microSD card is required.

## 4 MENU SCREEN

### ■ Menu items and their details (Continued)

**Comment** (GPS > GPS TX Mode > TX Format > Object)

Enters a object station's comment to transmit.

**Position**

Sets a object station's position data to transmit.

**Data Extension**

Selects whether to transmit the object station's course/speed data, power/height/gain/directivity data or not.

**Course**

Sets a object station's course to transmit.

**Speed**

Sets a object station's speed to transmit.

**Power**

Selects a object station's TX power level to transmit.

**Height**

Selects the height of the object station to transmit.

**Gain**

Selects the antenna gain of the object station to transmit.

**Directivity**

Selects the antenna directivity of the object station to transmit.

**SSID**

Selects the APRS® call sign SSID for the object station.

**Time Stamp**

Selects a format to transmit the current UTC time as a time stamp.

**Item** (GPS > GPS TX Mode > TX Format)

**Item Name**

Enters an item station name to transmit.

**Data Type** (GPS > GPS TX Mode > TX Format > Item)

Selects an item station's status to transmit.

**Symbol**

Selects an item station's symbol to transmit.

**Comment**

Enters an item station's comment to transmit.

**Position**

Sets an item station's position data to transmit.

**Data Extension**

Selects whether to transmit the item station's course/speed data, power/height/gain/directivity data or not.

**Course**

Sets an item station's course to transmit.

**Speed**

Sets an item station's speed to transmit.

**Power**

Selects an item station's TX power level to transmit.

**Height**

Selects the height of the item station to transmit.

**Gain**

Selects the antenna gain of the item station to transmit.

**Directivity**

Selects the antenna directivity of the item station to transmit.

**SSID**

Selects the APRS® call sign SSID for the item station.

**Weather** (GPS > GPS TX Mode > TX Format)

**Symbol**

Selects a weather station's symbol to transmit.

**SSID** (GPS > GPS TX Mode > TX Format > Weather)

Selects the APRS® call sign SSID for the weather station.

**Comment**

Enters a weather station's comment to transmit.

**Time Stamp**

Selects a format to transmit the current UTC time as a time stamp.

**NMEA (DV-G)** (GPS > GPS TX Mode)

Set NMEA options.

**GPS Sentence**

Transmits position data in selected GPS sentences.

**GPS Message**

Enter a GPS message to be transmitted.

**GPS Information**

Displays the received GPS information.

**GPS Position**

Displays your position, RX station, GPS memory and Alarm positions.

**GPS Memory**

Shows the GPS memory contents.

**GPS Alarm**

Set GPS alarm options.

**Alarm Select**

Select the target for the GPS alarm function.

**Alarm Area (Group)**

Enter the GPS alarm active range.

**Alarm Area (RX/Memory)**

Select the GPS alarm active range.

**GPS Logger\*****GPS Logger**

Turns the GPS logger function ON or OFF, to store your route as you move.

**Record Interval**

Selects the GPS Logger function record interval.

**Record Sentence**

Selects the GPS Logger function record sentences.

**GPS Auto TX**

Selects a time option for the GPS automatic transmission function.

**Call Sign**

Set and display the DV mode call signs.

**UR: CQCQCQ, R1: -----, R2: -----, MY: -----**

Displays the operating call signs.

Sets the operating call signs according to the type of call you want to make.

**RX History**

Displays the received call history in the DV mode.

**RX01:**

Displays the calls your transceiver received.

**DV Memory**

Stores call signs or repeater information to use in the DV mode.

**Your Call Sign**

Stores station call signs. Add or edit call signs.

\*A microSD card is required.

## 4 MENU SCREEN

### ■ Menu items and their details (Continued)

#### **Repeater List**

Stores repeater information. Add or edit repeater information. (See the [Operating Guide on the Icom website](#) for details of the preloaded data.)

**NOTE:** The repeater list described in this manual may differ from your preloaded list.

#### **My Station**

Sets and stores MY call sign to use in the DV mode.

##### **My Call Sign**

Stores MY call signs.

Select or edit a MY call sign to use in the DV mode.

##### **TX Message**

Stores TX Messages.

Select or edit TX Message to use in the DV mode.

#### **DV Set**

Sets values for the DV mode operations.

##### **Tone Control**

Set the received audio tones.

###### **RX Bass**

Sets the DV mode received audio bass filter level to Cut, Normal or Boost.

###### **RX Treble**

Sets the DV mode received audio treble filter level to Cut, Normal or Boost.

###### **RX Bass Boost**

Turns the DV mode received audio Bass Boost function ON or OFF

##### **TX Bass**

(DV Set > Tone Control)

Sets the DV mode transmit audio bass filter level to Cut, Normal or Boost.

##### **TX Treble**

Sets the DV mode transmit audio treble filter level to Cut, Normal or Boost.

##### **Auto Reply**

Selects the Automatic Reply function.

##### **DV Data TX**

Selects manually or automatically to transmit data.

##### **DV Fast Data**

The DV Fast data mode sends data through both the audio and data frames in the DV mode. The data speed of the DV Fast data mode (approximately 3480 bps) is 3.5 times faster than the low-speed data communication mode (approximately 950 bps). In the DV Fast data mode, no audio can be sent.

##### **Fast Data**

Selects whether or not to use DV Fast data mode for data communication in the DV mode.

##### **GPS Data Speed**

Set the GPS data transmission speed in the DV Fast data mode.

##### **TX Delay (PTT)**

Set the TX delay time after releasing [PTT] when the "DV Data TX" is set to "PTT" and data is sent in the DV Fast data mode.

##### **Digital Monitor**

Selects the DV mode RX monitoring when [SQL] is held down.

##### **Digital Repeater Set**

Turns the digital repeater setting function ON or OFF. This function is usable in any DV mode except when using the DR function.

**DV Auto Detect** (DV Set)

Turns the DV mode automatic detect function ON or OFF.

**RX Record (RPT)**

The transceiver can record the data of up to 50 individual calls.

**BK**

Turns the BK (Break-in) function ON or OFF. The BK function enables you to break into a conversation between two stations with call sign squelch enabled.

**EMR**

Turns the EMR (Enhanced Monitor Request) communication mode ON or OFF.

After turning OFF the transceiver, the EMR mode will be cancelled.

**EMR AF Level**

Sets the audio output level when an EMR mode signal is received.

**SPEECH**

Sets the Speech functions.

**RX Call Sign SPEECH**

Selects the RX call sign speech function option while ON, or turn it OFF.

**RX>CS SPEECH**

Turns the RX>CS Speech function ON or OFF.

**DIAL SPEECH**

Turns the Dial Speech function ON or OFF.

**MODE SPEECH**

Turns the Operating Mode Speech function ON or OFF.

**SPEECH Language**

Selects either English or Japanese as the desired speech language.

**Alphabet**

Selects the alphabet character announcement type.

**SPEECH Speed**

Selects Slow or Fast speech speed.

**SPEECH Level**

Sets the volume level for the voice synthesizer.

**DTMF/T-CALL**

Sets the DTMF Memory functions.

**DTMF Memory**

Shows a list of the DTMF memory channels. The DTMF memory can store up to 24-digit DTMF code.

**DTMF Speed**

Selects the DTMF transfer speed.

**QSO/RX Log**

Sets the QSO/RX History Log options.

**QSO Log\***

Selects whether or not to make a communication log on the microSD card.

**RX History Log\***

Selects whether or not to make a DV mode's receive history log on the microSD card.

**CSV Format**

Set CSV format options.

**Separator/Decimal**

Selects the separator and the decimal character for the CSV format.

\*A microSD card is required.

## 4 MENU SCREEN

### ■ Menu items and their details (Continued)

**Date** (QSO/RX Log > CSV Format)

Selects the date format.

### Function

Sets various function's options.

#### Squelch/ATT Select

Selects to use the S-Meter Squelch or the Attenuator function for the [SQL] control.

#### Squelch Delay

Selects to shorten or lengthen the time until the squelch opens.

#### Fan Control

Selects the cooling fan control condition.

#### Dial Speed-UP

Turns the dial speed acceleration ON or OFF.

#### Auto Repeater\*

Turns the Auto Repeater function ON or OFF.

#### Remote MIC Key

Selects the key function for [F-1] or [F-2] on the supplied remote-control microphone.

#### During RX/Standby

Selects the key function to be used while receiving or in the standby mode.

#### During TX

Selects the key function to be used while transmitting.

#### Up/Down MIC Key

Selects the key function for [UP] or [DN] on the optional hand microphone.

#### During RX/Standby (Function > Up/Down MIC Key)

Selects the key function to be used while receiving or in the standby mode.

#### During TX

Selects the key function to be used while transmitting.

#### One-Touch PTT(Remote MIC)

Turns the One-Touch PTT function ON or OFF.

#### PTT Lock

Turns the PTT Lock function ON or OFF.

#### Busy Lockout

Turns the Busy Lockout function ON or OFF.

#### Time-Out Timer

Selects the Time-Out Timer time options.

#### Active Band

Enables continuous frequency selection across all bands by rotating [DIAL].

#### MIC Gain

Sets the microphone sensitivity to suit your preference.

#### Data Speed

Selects the data transmission speed for low-speed communication, or between the [DATA] jack and external modules like a GPS receiver, and so on.

#### CI-V

Set CI-V options.

#### CI-V Address

Sets the transceiver's unique CI-V hexadecimal address code.

#### CI-V Baud Rate

Sets the CI-V code transfer speed.

\*Does not appear, depending on the transceiver version.

**CI-V Transceive** (Function > CI-V)

Turns the CI-V Transceive function ON or OFF.

**CI-V Bluetooth→REMOTE Transceive Address**

Sets the address to inhibit the external control with CI-V for the transceiver through the [SP2] (REMOTE) jack.

**Power OFF (With No Controller)**

Selects whether or not to automatically turn OFF the transceiver when the controller is disconnected from the transceiver.

**Display**

Sets the Display options.

**LCD Backlight Brightness**

Selects the LCD backlight brightness level.

**LCD Backlight Color**

Selects the LCD backlight color.

**Key Backlight Brightness**

Selects the key backlight brightness level.

**Key Backlight Color**

Selects the key backlight color.

**Backlight Night Time Setting****Night Time Setting**

Selects whether or not to turn down the backlight brightness for nighttime operation.

**Brightness**

Selects the backlight brightness level for nighttime operation.

**Night Time Start**

Sets the start time for nighttime operation.

**Night Time End**

Sets the end time for nighttime operation.

**Auto Dimmer Setting****Auto Dimmer**

Sets the Auto Dimmer function for nighttime operation.

**Auto Dimmer Timer**

Sets the time period until the backlight turns OFF when the "Auto Dimmer" item is set to "Auto-OFF" or "Auto-1" to "Auto-3."

**Auto Dimmer Cancel (PTT)**

Selects the transceiver operation when [PTT] is pushed while the Auto Dimmer is activated.

**Auto Dimmer Cancel (DV RX)**

Selects the transceiver operation when receiving a DV signal while the Auto Dimmer is activated.

**LCD Contrast**

Sets the contrast level of the LCD.

**RX Call Sign**

Selects the call sign and message display option when receiving a call.

**RX Position Indicator**

Selects whether or not to display the indicator when the position data is included in the signal received in the DV mode.

**RX Position Display**

Selects whether or not to display the caller's position data in a dialog when the data is included in the signal received in the DV mode.

**RX Position Display Timer**

Sets the RX position data display time period.

**Reply Position Display**

Selects whether or not to display the caller's position data in a dialog when the data is included in the Auto Reply signal.

## 4 MENU SCREEN

### ■ Menu items and their details (Continued)

#### **TX Call Sign** (Display)

Selects whether or not to display My or Your call sign while transmitting.

#### **Scroll Speed**

Selects the scrolling speed of the message, call sign, or other text.

#### **Opening Message**

Selects whether or not to display the opening message at power ON.

#### **Voltage (Power ON)**

Selects whether or not to display the voltage of the battery or external DC power source at power ON.

#### **Display Unit**

Set Display units options.

##### **Latitude/Longitude**

Selects position format to display the position.

##### **Altitude/Distance**

Selects the units to display the distance and altitude.

##### **Speed**

Selects the units to display the speed.

##### **Temperature**

Selects the units to display the temperature.

##### **Barometric**

Selects the units to display the barometric pressure.

##### **Rainfall**

Selects the units to display the rainfall.

##### **Wind Speed**

Selects the units to display the wind speed.

#### **Display Language**

Selects the display language in the DR screen or Menu screen. When “English” is selected in “System Language,” this setting will disappear.

#### **System Language**

Selects English or Japanese as the system language of the transceiver.

### Sounds

Sets the Sound options.

#### **Beep Level**

Sets the beep output level.

#### **Key-Touch Beep**

Turns the confirmation beep tones when key is pushed, ON or OFF.

#### **Home CH Beep**

Turns the Home CH Beep ON or OFF.

#### **Band Edge Beep**

Turns the Band edge beep ON or OFF.

#### **Scan Stop Beep**

Turns the scan stop beep ON or OFF.

#### **Standby Beep**

Turns the standby beep function in the DV mode ON or OFF.

#### **Scope AF Output**

Selects the audio output option during a sweep.

**Time Set**

Sets the Time options.

**Date/Time****DATE**

Sets the current date.

**TIME**

Sets the current time.

**GPS Time Correct**

Sets to automatically correct the time using a GPS signal.

**UTC Offset**

Enters the time difference between UTC and the local time.

**Auto Power OFF**

Turns the Auto power OFF function ON or OFF.

**DV Gateway**

Enters the Terminal mode or Access Point mode.

**<<Terminal Mode>>**

Enters the Terminal mode.

**<<Access Point Mode>>**

Enters the Access Point mode.

**SD Card\***

Sets the SD card options.

**Load Setting****File selection**

Loads the settings file to the transceiver.

**Save Setting****<<New File>>**

Saves the settings as a new file.

**File selection**

Saves the settings in a selected file.

**Import/Export**

Import or export the CSV format file.

**Import**

Selects to import the Your call sign, Repeater list, or GPS memory data in the CSV format file.

**Export**

Selects to export the Your call sign, Repeater list, or GPS memory data in the CSV format file.

**CSV Format****Separator/Decimal**

Selects the separator and the decimal character for the CSV format.

**Date**

Selects the date format.

**SD Card Info**

Displays the free space and remaining recording time of the card.

**Firmware Update**

Enters the Firmware Update mode.

**Format**

Formats the card.

**Unmount**

Electronically unmounts the card.

\*A microSD card is required.

## 4 MENU SCREEN

### ■ Menu items and their details (Continued)

#### Bluetooth Set\*

Sets the Bluetooth® options.

##### Bluetooth

Turns the Bluetooth function ON or OFF.

##### Auto Connect

Selects whether or not to automatically connect to a paired Bluetooth device when the device is turned ON.

##### Pairing/Connect

Selects to pair or connect to a Bluetooth device.

##### Device Search

###### Search Headset

Searches for a Bluetooth headset.

###### Search Data Device

Searches for a Bluetooth data device.

###### RS-MS11

Searches for an iOS device.

##### Pairing list

Displays the paired device.

##### <<Pairing Reception>>

Accepts the connection request from a Bluetooth device.

##### Headset Set

###### AF Output

Selects the AF output option for when you use a Bluetooth headset.

###### Headset Function Select

Selects the desired PTT and microphone combination when either a Bluetooth headset or the radio microphone are used.

##### VOX

(Bluetooth Set > Headset Set)

##### VOX

Turns the VOX function ON or OFF when you use a Bluetooth headset.

##### VOX Level

Sets the MIC Gain level.

When the microphone input level is higher than this set value, the transceiver starts to transmit, and the input level is lower than this set value, it returns to receive.

##### VOX Delay

Sets the VOX Delay time for the transmitter stays ON after you stop speaking before the VOX switches to receive.

##### VOX Time-Out Timer

Sets the VOX Time-Out Timer to prevent an accidental prolonged transmission.

##### Icom Headset

Sets to use the optional Icom Bluetooth headset (VS-3).

##### Power Save

Sets the Power save function to prolong the headset battery.

##### One-Touch PTT

Sets the One-Touch PTT function to toggle between transmission and reception by pushing [PTT].

##### PTT Beep

Sets to sound a beep when you push [PTT].

##### Custom Key Beep

Sets to sound a beep when you push the custom key ([PLAY]/[FWD]/[RWD]).

\*The optional UT-137 is required.

**Custom Key** (Bluetooth Set > Headset Set > Icom Headset)

Selects the key function of the custom key ([PLAY]/[FWD]/[RWD]).

**Data Device Set**

Sets the data device options.

**Serialport Function**

Selects to transmit or receive the CI-V command or the DV data.

**Bluetooth Device Information**

Shows the optional UT-137 Bluetooth unit information.

**Initialize Bluetooth Device**

Selects to reset the optional UT-137 Bluetooth unit.

**Others**

Sets other options.

**Information****Voltage**

Shows the voltage of the external DC power source.

**Version**

Shows the transceiver's firmware version number.

**Clone****Clone Mode**

Reads or writes the CS-4100 data from or to the PC.

**Reset****Partial Reset**

Returns all settings to their defaults, without clearing the memory contents, call sign memories or repeater lists.

**All Reset**

Clears all programming and memories, and return all settings to their defaults.

## ■ Entering Memory channels


The Memory mode is useful to quickly select often-used repeaters.

This section describes the basic channel content entry.  
See the Operating Guide on the Icom website for details.

Example: Entering 146.030 MHz/FM mode into a blank channel.

Hold down [MW] for 1 second.

- The memory contents are briefly displayed, then the operating data is saved into a blank channel.

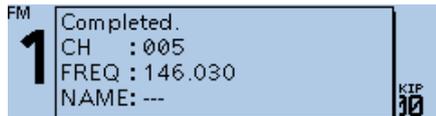

## ■ Checking the Memory contents

You can check the Memory contents on the MEMORY LIST screen.

Example: Checking the contents of Memory channel 5.

Manage Memory > **Memory CH**

1. Push [MENU].
2. Select "Manage Memory," then push [↵].
3. Select "Memory CH," then push [↵].
  - Displays the MEMORY CH screen.
4. Select "ALL," then push [↵].
  - Displays the ALL screen.
5. Select "005," then push [↵].



- Displays the data in Channel 5 on the MEMORY CH (005CH) screen.
  - ① You can select a page by rotating [DIAL].
6. Push [MENU].
    - Returns to the standby screen.

## ■ Selecting a Memory channel

In the Memory mode, you can select the Memory channels by rotating [DIAL].

1. Push [V/M] several times until you enter the Memory mode.



Displayed

- ① Pushing [V/M] toggles between the VFO and Memory modes.
2. Rotate [DIAL].
  - Selects a Memory channel.

Scanning is a versatile function that can automatically search for signals. A scan makes it easier to locate stations to contact or listen to, or to skip unwanted channels or frequencies.

This section describes the basic scan operation. See the Operating Guide on the Icom website for details.

## ■ VFO mode scan

1. Push [V/M] several times until you enter the VFO mode.
2. Hold down [BAND] for 1 second.
  - Opens the Scan Type Select window.
  - ① If you hold down [BAND] for 3 seconds, the last selected scan starts.
3. Rotate [DIAL] to select a scan type, then push [↵].
  - The scan starts.



- ① The decimal point and the selected scan type icon blink.
- ① When receiving a signal, the S-meter displays the received signal strength.
4. Push [BAND].
  - Cancels the scan.

## ◇ Scan type

The VFO mode scan has 6 scan types.

- ALL: Full scan
- BAND: Band scan
- P-LINK0 ~ 9: Program link scan
- P00 ~ 24: Program scan
- DUP: Duplex scan  
(Displayed only when duplex is set.)
- TONE: Tone scan  
(For the Tone Squelch scanning)

- ① The frequencies that are set as a Skip channel (PSKIP) are skipped during a scan. (p. ??)
- ① When the “Program Skip” item is set to “OFF,” the Skip channel frequencies are not skipped. (p. ??)  
(Scan > **Program Skip**)

### TIP:

- During a scan, rotating [DIAL] switches the scanning direction.
- During a scan, you can change the operating band, tuning step, and so on, on the Quick Menu window.
- The scan continuously runs, even if you push [MENU] or [QUICK] during a scan.

### ◇ Setting the skip frequencies

You can set unnecessary frequencies as a Skip channel (PSKIP) to be skipped during a scan. The Skip function speeds up a scan.

1. Start the VFO scan.
  - When a signal is received, the scan pauses.
2. Hold down [MW] for 1 second.
  - Sets the frequency as a Skip channel into empty Memory channel 999.
  - The entered Memory channel number blinks.
  - ① If channel 999 already has content, the transceiver automatically searches for another blank channel to use. If there is no blank channel, a beep sounds, and the frequency is not set as a Skip channel.
3. After setting, the scan resumes.

**TIP:** Once frequencies are set as a Skip channel, these frequencies are skipped until clearing the skip setting. To clear the skip setting, see [page ??](#) for details.

① The skip setting is also cleared when the Memory channel set as a Skip channel is deleted. See the Operating Guide on the Icom website for details.

## 6 SCAN OPERATION

### ■ Memory scan

**NOTE:** Two or more memory channels, which are not set as Skip channels, must be entered to start a Memory scan.

1. Push [V/M] several times until you enter the Memory mode.
2. Hold down [BAND] for 1 second.
  - Opens the Scan Type Select window.
  - ① If you hold down [BAND] for 3 seconds, the last selected scan starts.
3. Rotate [DIAL] to select a scan type, then push [↵].
  - The scan starts.



- ① The decimal point and **MR** blink.
- ① When receiving a signal, the S-meter displays the received signal strength.
4. Push [BAND].
  - Cancels the scan

### ◇ Scan type

The Memory mode scan has 6 scan types.

- ALL: Full scan
- BAND: Band Memory scan
- MODE: Mode Memory scan
- DUP: Duplex scan  
(Displayed only when duplex is set.)
- TONE: Tone scan  
(For the Tone squelch scanning)

- ① The channels that are set as a Skip channel (PSKIP or SKIP) are skipped during a scan. (p. ??)
- ① When two or more Memory channels, which are not set as Skip channels, are entered in a bank, the Memory bank scan is usable. See the Operating Guide on the Icom website for details.

#### TIP:

- During a scan, rotating [DIAL] switches the scanning direction.
- The scan continuously runs, even if you push [MENU] or [QUICK] during a scan.

## ■ Setting and clearing a Skip channel

You can set or clear a Skip channel setting.  
The channels that are set as a Skip channel are skipped during a scan. (p. ??)

1. Push [V/M] several times until you enter the Memory mode.
2. Rotate [DIAL] to select the Memory channel.
3. Push [QUICK].
4. Rotate [DIAL] to select "SKIP," then push [↵].
5. Select the option, then push [↵].
  - OFF: Cancel the skip setting.
  - SKIP: Skipped during a memory scan.
  - PSKIP: Skipped during both VFO and memory scans.



- When a Skip channel is set, "SKIP" or "PSKIP" is displayed.

## ■ About the microSD card

**NOTE:** The microSD and microSDHC cards are not supplied. (user supplied)

A microSD card of up to 2 GB, or an microSDHC of up to 32 GB, can be used with the ID-4100A/E.

Icom has checked the compatibility with the following microSD and microSDHC cards.

(As of April 2017)

Brand	Type	Memory size
SanDisk®	microSD	2 GB
	microSDHC	4/8/16/32 GB

### ① Information

- The performance of the cards listed above is not guaranteed.
- Throughout the rest of this document, the microSD card and an microSDHC card are simply called microSD cards.
- Icom recommends that you format all microSD cards to be used with the transceiver, even preformatted microSD cards for PCs or other uses. (p. ??)

**TIP:** Saving the factory default data is recommended. To save data, insert the card into the transceiver's slot, then select the "SD Card" item on the MENU screen.  
(MENU > SD Card > **Save Setting**)


### NOTE:

- Before using the microSD card, read the instructions of the microSD card thoroughly.
- If you do any of the following, the microSD card data may be corrupted or deleted.
  - You remove the microSD card from the transceiver while accessing the microSD card.
  - You change the external power supply's voltage while accessing the microSD card.
  - You start the vehicle engine while accessing the microSD card.
- Do not touch the contacts of the microSD card.
- The transceiver takes a longer time to recognize a high capacity microSD card.
- The microSD card will get warm if used continuously for a long period of time.
- The microSD card has a certain lifetime, so data reading or writing may not be possible after using it for a long time period.
- When reading or writing data is impossible, the microSD card's lifetime has ended. In this case, purchase a new one. We recommend you make a backup file of the important data onto your PC.
- Icom will not be responsible for any damage caused by data corruption of an microSD card.

## ■ Inserting the microSD card

**NOTE:** Before inserting, be sure to check the card direction. If the card is forcibly or inversely inserted, it will damage the card and/or the slot.

1. Turn OFF the transceiver.
  2. Insert the card into the slot until it locks in place, and makes a 'click' sound.
  3. Turn ON the transceiver.
    - "■" is displayed when the microSD card is inserted.
- ① While accessing the microSD card, "■" and "■" alternately blink.

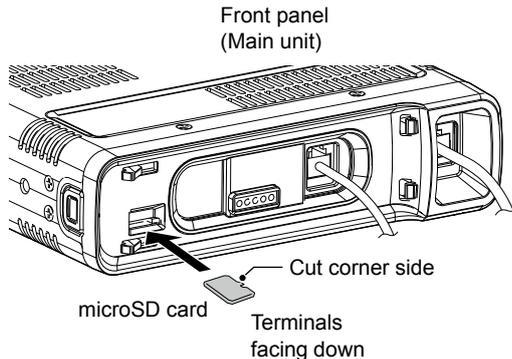

## ◇ Formatting the microSD card

When you use a brand new microSD card, format it by doing the following steps.

- ① Formatting a card erases all its data. Before formatting any used card, back up its data onto your PC.

### SD Card > Format

1. Turn OFF the transceiver, then insert the card into the slot.
2. Turn ON the transceiver.
  - "■" is displayed.
3. Push [MENU].
4. Rotate [DIAL] to select "SD Card," then push [↵].
  - SD CARD screen is displayed.
5. Select "Format," then push [↵].
  - The confirmation dialog "Format OK?" is displayed.
6. Select "YES," then push [↵].



- The formatting starts and the display shows the formatting progress.
- ① After formatting ends, the display automatically returns to the screen displayed before the "Format OK?" window.

## 6 RECORDING A QSO ONTO A microSD CARD

### ■ Recording a QSO audio

**NOTE:** Once the voice recording starts, it will continue until you stop recording, even if you turn OFF the transceiver.

1. Push [QUICK].
2. Rotate [DIAL] to select "<<REC Start>>," then push [↵].
  - "Recording started" is briefly displayed, and voice recording starts.

#### ① Information


- "●" is displayed while the transceiver is recording.
  - "⏸" is displayed while the recording is paused.
  - Recording is continuous until you manually stop recording, or the card becomes full.
  - If the recording file's content reaches 2GB, the transceiver automatically creates a new file, and continues recording.
3. Push [QUICK].
  4. Select "<<REC Stop>>," then push [↵].
    - "Recording stopped" is briefly displayed, and voice recording stops.

**TIP:** When the PTT Automatic Recording function is ON, the recording automatically starts when [PTT] is pushed. (MENU > Voice Memo > QSO Recorder > Recorder Set > PTT Auto REC)

### ■ Playing recorded audio

Voice Memo > QSO Recorder > Play Files

1. Push [MENU].
2. Rotate [DIAL] to select "Voice Memo," then push [↵].
  - VOICE MEMO screen is displayed.
3. Select "QSO Recorder," then push [↵].
  - QSO RECORDER screen is displayed.
4. Select "Play Files," then push [↵].
  - PLAY FILES screen is displayed.
5. Select the folder that contains the file you want to play.
  - The file list is displayed.
  - ① The folder is named yyyyymmdd (y: year, m: month, d: day.)
6. Select the file that you want to play.
  - VOICE PLAYER screen is displayed, and the file starts to play.

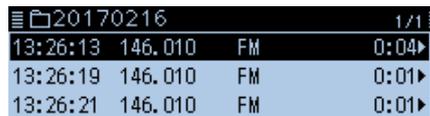


7. Push [↵].
  - Stops the playing, then the VOICE PLAYER screen closes.

## ■ Removing the microSD card

**NOTE: DO NOT** remove the card from the transceiver while the card is being accessed. Otherwise, the card data may be corrupted or deleted.

### ◇ Removing the microSD card


1. Turn OFF the power.
2. Push in the microSD card until a click sounds, and then carefully pull it out.

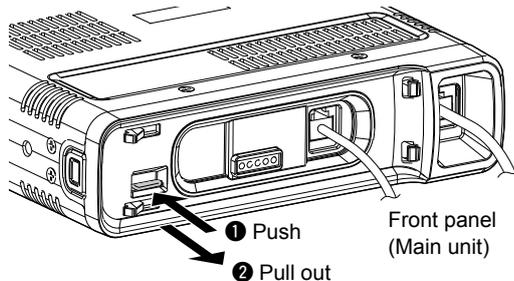

### ◇ Removing the microSD card while the transceiver's power is ON

#### SD Card > Unmount

1. Push [MENU].
2. Rotate [DIAL] to select "SD Card," then push [↵].
  - SD CARD screen is displayed.
3. Select "Unmount," then push [↵].
  - The confirmation dialog "Unmount OK?" is displayed.
4. Select "YES," then push [↵].

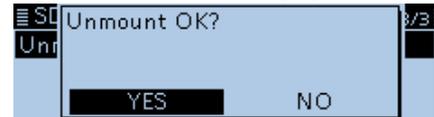

- When the unmounting is completed, "Unmount is completed." is briefly displayed, then the display automatically returns to the screen displayed before the "Unmount OK?" window.
5. Push in the microSD card until a click sounds, and then carefully pull it out.

**NOTE:** The built-in GPS receiver cannot calculate its position if it cannot receive signals from the GPS satellites. Refer to [page ??](#) for details.

## ■ GPS operation

The transceiver has a built-in GPS receiver. You can check your current position, and transmit GPS data in the DV mode.

See the Operating Guide on the Icom website for details.

### ◇ GPS receive setting

Confirm the GPS receiver is receiving your position.

The GPS icon blinks when searching for satellites.



The GPS icon stops blinking when the minimum needed number of satellites is found.



- ① It may take only a few seconds to receive, or it may take a few minutes, depending on your operating environment. If you have difficulties receiving, we recommend that you try a different location.
- ① When the "GPS Select" item is set to "Manual," the icon does not appear.  
(MENU > GPS > GPS Set > **GPS Select**)

## ■ Checking your GPS position


You can check your current position.

If you transmit while displaying the GPS position screen, the screen closes.

But you can check your current position, RX position, and so on by touching the GPS icon while transmitting.

### ◇ Displaying Position Data

1. Push [QUICK].
2. Select "GPS Position," then push [↵].

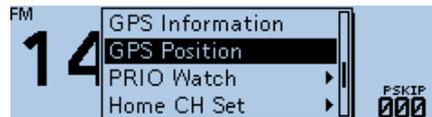

- Displays the GPS POSITION screen.


3. Rotate [DIAL].
  - Selects the page.

<div style="display: flex; justify-content: space-between; border-bottom: 1px solid black;"> <span>GPS POSITION</span> <span>1/5</span> </div> <div style="display: flex; justify-content: space-between;"> <div style="text-align: center;">  <p>MY 275°</p> </div> <div style="text-align: left;"> <p>35° 45.00' N    ALT: 45ft</p> <p>135° 36.00' E    SPEED: 21.2mph</p> <p>GL: PM75TS    TIME: 18:15:30</p> </div> </div>	My position screen
<div style="display: flex; justify-content: space-between; border-bottom: 1px solid black;"> <span>GPS POSITION</span> <span>2/5</span> </div> <div style="display: flex; justify-content: space-between;"> <div style="text-align: center;">  <p>RX</p> </div> <div style="text-align: left;"> <p>34° 37.23' N    ALT: 105ft</p> <p>135° 34.20' E    DST: 78.0m</p> <p>GL: PM74SD</p> </div> </div>	Received position screen 1
<div style="display: flex; justify-content: space-between; border-bottom: 1px solid black;"> <span>GPS POSITION</span> <span>3/5</span> </div> <div style="display: flex; justify-content: space-between;"> <p>COURSE: 95°</p> <p>SPEED: 7.8mph</p> </div> <div style="text-align: right;"> <p>JA3YUA</p> <p> (13:08)</p> </div>	Received position screen 2
<div style="display: flex; justify-content: space-between; border-bottom: 1px solid black;"> <span>GPS POSITION</span> <span>4/5</span> </div> <div style="display: flex; justify-content: space-between;"> <div style="text-align: center;">  <p>MEM</p> </div> <div style="text-align: left;"> <p>35° 42.59' N    GL: PM95VR</p> <p>139° 48.65' E    DST: 236m</p> <p>Tokyo Skytree</p> </div> </div>	GPS memory position screen
<div style="display: flex; justify-content: space-between; border-bottom: 1px solid black;"> <span>GPS POSITION</span> <span>5/5</span> </div> <div style="display: flex; justify-content: space-between;"> <div style="text-align: center;">  <p>ALM</p> </div> <div style="text-align: left;"> <p>35° 37.73' N    GL: PM95VP</p> <p>139° 47.80' E    DST: 236m</p> <p>Tokyo Big Sight</p> </div> </div>	GPS alarm position screen

(Example)

4. Push [5].
  - Returns to the standby screen.

### About the GPS POSITION screen

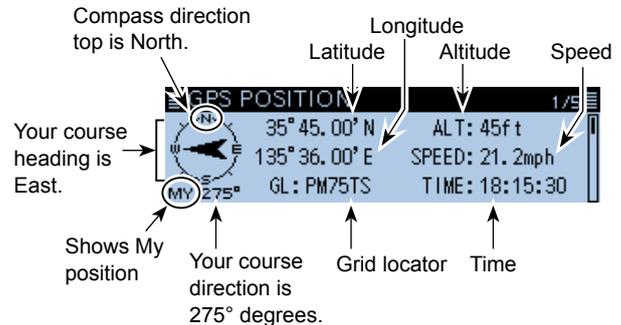

GPS POSITION screen (MY)

## ■ Resetting

Occasionally, erroneous information will be displayed when, for example, first applying power. This may be caused externally by static electricity or by other factors. If this problem occurs, turn OFF the transceiver. After waiting a few seconds, turn ON the transceiver again. If the problem is still there, perform a Partial reset or an All reset.

A Partial reset resets the operating settings to their default values (VFO frequency, VFO settings, menu contents) without clearing data as listed below:


Memory channel contents	Scan Edge contents
Call channel contents	Call sign memories
Message data	DTMF memory contents
GPS Memory contents	Repeater list

**BE CAREFUL!** An All reset clears all programming and returns all settings to their factory defaults. See the [Operating Guide on the Icom web site](#) for details.

### ◇ Partial Reset

Others > Reset > **Partial Reset**


1. Push [MENU].
2. Rotate [DIAL] to select “Others,” then push [↵].  
• OTHERS screen is displayed.
3. Select “Reset,” then push [↵].  
• RESET screen is displayed.
4. Select “Partial Reset,” then push [↵].  
• The confirmation dialog “Partial Reset?” is displayed.
5. Select “YES,” then push [↵].

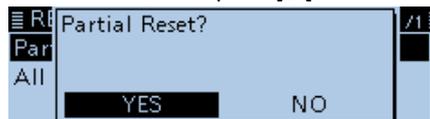

- When the partial reset is completed, “PARTIAL RESET” is displayed, then the display automatically returns to the default screen.

## ■ Fuse replacement

A fuse is installed in each fuse holder of the supplied DC power cable. If a fuse blows, or the transceiver stops functioning, track down the source of the problem if possible, repair it and then replace the damaged fuse with a new rated one (FGB 15 A).

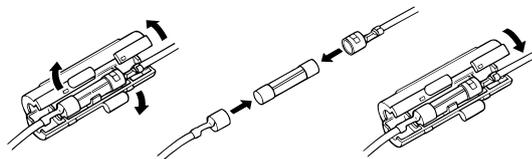

**⚠ WARNING! NEVER** remove the fuse holders from the DC power cable. **USE** only the applicable fuses.

**NOTE:** Before replacing the fuse, be sure to disconnect the DC cable from the power supply.

## ■ Power protect function

The transceiver is equipped with a protection circuit for the power amplifier. The circuit activates when the transceiver continuously transmit at high power, and then temperature becomes extremely high.

In this case, the transceiver automatically reduces transmit output power to low (approximately 5 W).

When the Power Protect function activates, wait until the transceiver's temperature returns to normal.

**NOTE:** When the power supply voltage is over **17.0 V**, the transceiver automatically displays "Over Voltage," and then sounds a warning beep. In this case, the transceiver may be damaged, and contact your nearest Icom Dealer or Service Center.

## ■ Troubleshooting

To communicate through the repeater, your signal must access to the repeater. When your signal accesses your local repeater, but it is not sent to the destination repeater, the repeater replies with an status message.

PROBLEM	POSSIBLE CAUSE	SOLUTION	REF.
Transceiver does not turn ON.	<ul style="list-style-type: none"> <li>• The power cable is improperly connected.</li> <li>• A fuse is blown.</li> <li>• Power source voltage is not correct.</li> </ul>	<ul style="list-style-type: none"> <li>• Reconnect the DC power cable correctly.</li> <li>• Correct the cause, then replace the fuse with an equivalent fuse. (Fuses are installed in the DC power cable and in the internal PA unit.)</li> <li>• Apply the correct 13.8 V DC.</li> </ul>	<p>p. ??</p> <p>p. ??</p> <p>p. ??</p>
No sound comes from the speaker.	<ul style="list-style-type: none"> <li>• The audio volume level is too low.</li> <li>• The squelch is closed.</li> <li>• The tone squelch is ON in the FM mode.</li> <li>• The external speaker is not connected.</li> <li>• The audio is muted.</li> </ul>	<ul style="list-style-type: none"> <li>• Rotate [VOL] clockwise to obtain a suitable listening level.</li> <li>• Rotate [SQL] to 12 o'clock position to open the squelch.</li> <li>• Turn OFF the Tone squelch.</li> <li>• Correct the cause, then reconnect.</li> <li>• Hold down [MUTE] to release mute.</li> </ul>	p. ??
Sensitivity is too low, and only strong signals are audible.	<ul style="list-style-type: none"> <li>• The antenna is defective or the coaxial cable connector is shorted or cut.</li> <li>• The Attenuator function is turned ON.</li> <li>• The squelch is set too tight.</li> </ul>	<ul style="list-style-type: none"> <li>• Reconnect to the antenna connector.</li> <li>• Turn OFF the attenuator.</li> <li>• Rotate [SQL] to adjust the squelch level.</li> </ul>	p. ??

PROBLEM	POSSIBLE CAUSE	SOLUTION	REF.
Transmitting is impossible.	<ul style="list-style-type: none"> <li>• Duplex function are ON, and the transmit and receive frequencies are different.</li> <li>• The transmit power level is set to LOW or MID.</li> <li>• The PTT Lock function is activated.</li> <li>• The Busy Lockout function is activated.</li> </ul>	<ul style="list-style-type: none"> <li>• Turn OFF the Duplex function.</li> <li>• Set the transmit power level to HIGH.</li> <li>• Turn OFF the PTT Lock function.</li> <li>• Turn OFF the Busy Lockout function.</li> </ul>	p. ??
The displayed frequency is erroneous.	<ul style="list-style-type: none"> <li>• The CPU has malfunctioned.</li> <li>• External factors have caused the fault.</li> </ul>	<ul style="list-style-type: none"> <li>• Reset the transceiver.</li> <li>• Disconnect and connect to the DC power supply.</li> </ul>	p. ?? p. ??
Frequency cannot be set.	<ul style="list-style-type: none"> <li>• The Lock function is activated.</li> <li>• The VFO mode is not selected.</li> </ul>	<ul style="list-style-type: none"> <li>• Hold down [LOCK] for 1 second to turn OFF the Lock function.</li> <li>• Push [V/M] to select the VFO mode.</li> </ul>	p. ??
A Program Scan does not start.	<ul style="list-style-type: none"> <li>• The VFO mode is not selected.</li> <li>• The same frequencies are entered into the scan edges.</li> </ul>	<ul style="list-style-type: none"> <li>• Push [V/M] to select the VFO mode.</li> <li>• Enter different frequencies into the scan edges.</li> </ul>	p. ??
A Memory Scan does not start.	<ul style="list-style-type: none"> <li>• The Memory mode is not selected.</li> <li>• Only one or no memory channel has been programmed.</li> </ul>	<ul style="list-style-type: none"> <li>• Push [V/M] to select the Memory mode.</li> <li>• Program two or more memory channels.</li> </ul>	p. ??
During tone squelch operation, the received audio breaks off at the other station.	<ul style="list-style-type: none"> <li>• Transmitter's microphone gain is too high.</li> </ul>	<ul style="list-style-type: none"> <li>• Set the microphone sensitivity to low.</li> <li>• Turn ON the ALC function.</li> </ul>	p. ??
Transmission is automatically cut off.	<ul style="list-style-type: none"> <li>• The Time-out timer function is activated.</li> </ul>	<ul style="list-style-type: none"> <li>• Turn OFF the Time-out timer function.</li> </ul>	p. ??

## ◇ General

## • Frequency coverage:

EUR	RX	118 ~ 174 MHz* <sup>1</sup> , 230 ~ 550 MHz* <sup>2</sup>
	TX	144 ~ 146 MHz, 430 ~ 440 MHz
ITR	RX	144 ~ 146 MHz, 430 ~ 434 MHz, 435 ~ 438 MHz
	TX	144 ~ 146 MHz, 430 ~ 434 MHz, 435 ~ 438 MHz
USA	RX	118 ~ 174 MHz* <sup>3</sup> , 230 ~ 550 MHz* <sup>4</sup>
	TX	144 ~ 148 MHz, 430 ~ 450 MHz
EXP	RX	118 ~ 174 MHz* <sup>3</sup> , 230 ~ 550 MHz* <sup>2</sup>
	TX	137 ~ 174 MHz* <sup>3</sup> , 400 ~ 470 MHz* <sup>2</sup>

\*<sup>1</sup> Guaranteed only 144 ~ 146 MHz\*<sup>2</sup> Guaranteed only 430 ~ 440 MHz\*<sup>3</sup> Guaranteed only 144 ~ 148 MHz\*<sup>4</sup> Guaranteed only 430 ~ 450 MHz\*<sup>6</sup> Guaranteed only 400 ~ 470 MHz

- Mode: F2D/F3E (FM/FM-N), F7W (DV), A3E (AM/AM-N) RX only
- No. of memory channels: 1000 channels
- No. of program scan channels: 25 channels  
(2 edge frequencies in each channel)
- No. of call channels: 4 channels  
(2 channels × 2 bands)
- No. of repeater lists: 1,500

- No. of GPS memory: 300
- Antenna impedance: 50 Ω (SO-239)
- Usable temperature range: -10°C to +60°C  
(+14°F to +140°F)
- Frequency stability: ±2.5 ppm (-10°C to +60°C,  
+14°F to +140°F)
- Digital transmission speed: 4.8 kbps
- Voice coding speed: 2.4 kbps
- Frequency resolution: 5 kHz, 6.25 kHz, 8.33 kHz\*,  
10 kHz, 12.5 kHz, 15 kHz,  
20 kHz, 25 kHz, 30 kHz, and  
50 kHz

\*Selectable depending on the operating band or mode.

- Power supply: 13.8 V DC ±15%  
(negative ground)
- Current drain:
  - Transmit  
Maximum current drain: ≤ 13.0 A
  - Receive  
Standby: ≤ 0.9 A  
Maximum audio: ≤ 1.2 A
- Dimensions: 150(W) × 40(H) × 171.9(D) mm  
5.9(W) × 1.6(H) × 6.8(D) inch  
(projections are not included)
- Weight (approximate): 1.2 kg, 2.6 lb  
(microphone, cable, and  
bracket are not included)

◇ **Transmitter**

- Modulation system:
  - FM/FM-N Variable reactance frequency modulation
  - DV GMSK reactance frequency modulation
- Max Deviation:
  - FM  $\leq \pm 5.0$  kHz
  - FM-N  $\leq \pm 2.5$  kHz
- Occupied bandwidth: Less than 6.0 kHz (DV)
- Microphone impedance: 600  $\Omega$
- Spurious emission:  $\leq -60$  dBc
- Output power: High 50 W, Mid 15 W, Low 5 W

◇ **Receiver**

- Receive system: Double Conversion Superheterodyne system
- IF frequencies:
  - 1st IF 46.35 MHz
  - 2nd IF 450 kHz
- Sensitivity (except spurious points)
  - Amateur bands
    - FM/FM-N (12 dB SINAD)  $\leq 0.18$   $\mu$ V
    - DV (BER 1%)  $\leq 0.22$   $\mu$ V

Except Amateur bands

- FM/FM-N (12 dB SINAD)
  - $\leq 0.32$   $\mu$ V (137.000 to 159.995 MHz)
  - $\leq 0.32$   $\mu$ V (160.000 to 174.000 MHz)
  - $\leq 1.8$   $\mu$ V (230.000 to 259.000 MHz)
  - $\leq 0.56$   $\mu$ V (260.000 to 321.995 MHz)
  - $\leq 0.56$   $\mu$ V (322.000 to 374.995 MHz)
  - $\leq 0.56$   $\mu$ V (375.000 to 399.995 MHz)
  - $\leq 0.32$   $\mu$ V (400.000 to 499.995 MHz)
  - $\leq 0.56$   $\mu$ V (500.000 to 550.000 MHz)
- AM/AM-N (10 dB S/N)
  - $\leq 1$   $\mu$ V (118.000 to 136.991 MHz)
  - $\leq 5.6$   $\mu$ V (230.000 to 259.000 MHz)
  - $\leq 1.8$   $\mu$ V (260.000 to 321.995 MHz)
  - $\leq 1.8$   $\mu$ V (322.000 to 374.995 MHz)

- Squelch sensitivity:  $\leq 0.13$   $\mu$ V (Threshold)
- Selectivity:
  - FM  $\geq 60$  dB
  - FM-N  $\geq 55$  dB
  - DV  $\geq 50$  dB
- Spurious and image rejection ratio:  $\geq 60$  dB
- AF output power:  $\geq 2.0$  W (at 10% distortion with an 8  $\Omega$  load)
- AF output impedance: 8  $\Omega$

## ■ COUNTRY CODE LIST

### • ISO 3166-1

	Country	Codes		Country	Codes
1	Austria	AT	18	Liechtenstein	LI
2	Belgium	BE	19	Lithuania	LT
3	Bulgaria	BG	20	Luxembourg	LU
4	Croatia	HR	21	Malta	MT
5	Czech Republic	CZ	22	Netherlands	NL
6	Cyprus	CY	23	Norway	NO
7	Denmark	DK	24	Poland	PL
8	Estonia	EE	25	Portugal	PT
9	Finland	FI	26	Romania	RO
10	France	FR	27	Slovakia	SK
11	Germany	DE	28	Slovenia	SI
12	Greece	GR	29	Spain	ES
13	Hungary	HU	30	Sweden	SE
14	Iceland	IS	31	Switzerland	CH
15	Ireland	IE	32	Turkey	TR
16	Italy	IT	33	United Kingdom	GB
17	Latvia	LV			

## ■ DISPOSAL



The crossed-out wheeled-bin symbol on your product, literature, or packaging reminds you that in the European Union, all electrical and electronic products, batteries, and accumulators (rechargeable batteries) must be taken to designated collection locations at the end of their working life. Do not dispose of these products as unsorted municipal waste. Dispose of them according to the laws in your area.

## ■ FCC INFORMATION

### • FOR CLASS B UNINTENTIONAL RADIATORS:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**CAUTION:** Changes or modifications to this device, not expressly approved by Icom Inc., could void your authority to operate this device under FCC regulations.

# 11 Chapter

---

1

2

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18

19

# MENU ITEM LIST

The first tree level of each Menu category are listed below.

DUP/TONE...	Offset Freq
	Repeater Tone
	TSQL Freq
	Tone Burst
	DTCS Code
	DTCS Polarity
	Digital Code
Manage Memory	Memory CH
	Call CH
Scan	Pause Timer
	Resume Timer
	Temporary Skip Timer
	Program Skip
	Bank Link
	Program Scan Edge
	Program Link
Voice Memo	QSO Recorder
	Player Set
	DV Auto Reply
Voice TX	Record
	TX Set
	<<TX>>
GPS	GPS Set
	GPS TX Mode
	GPS Information
	GPS Position
	GPS Memory
	GPS Alarm
	GPS Logger
	GPS Auto TX
Call Sign	—
RX History	—

DV Memory	Your Call Sign
	Repeater List
My Station	My Call Sign
	TX Message
DV Set	Tone Control
	Auto Reply
	DV Data TX
	DV Fast Data
	Digital Monitor
	Digital Repeater Set
	DV Auto Detect
	RX Record (RPT)
	BK
	EMR
EMR AF Level	
SPEECH	RX Call Sign SPEECH
	RX>CS SPEECH
	DIAL SPEECH
	MODE SPEECH
	SPEECH Language
	Alphabet
	SPEECH Speed
SPEECH Level	
DTMF/T-CALL	DTMF Memory
	DTMF Speed
QSO/RX Log	QSO Log
	RX History Log
	CSV Format



# Count on us!

#12 EUR-01

<Intended Country of Use>											
<input checked="" type="checkbox"/>	AT	<input checked="" type="checkbox"/>	BE	<input checked="" type="checkbox"/>	CY	<input checked="" type="checkbox"/>	CZ	<input checked="" type="checkbox"/>	DK	<input checked="" type="checkbox"/>	EE
<input checked="" type="checkbox"/>	FI	<input checked="" type="checkbox"/>	FR	<input checked="" type="checkbox"/>	DE	<input checked="" type="checkbox"/>	GR	<input checked="" type="checkbox"/>	HU	<input checked="" type="checkbox"/>	IE
<input checked="" type="checkbox"/>	IT	<input checked="" type="checkbox"/>	LV	<input checked="" type="checkbox"/>	LT	<input checked="" type="checkbox"/>	LU	<input checked="" type="checkbox"/>	MT	<input checked="" type="checkbox"/>	NL
<input checked="" type="checkbox"/>	PL	<input checked="" type="checkbox"/>	PT	<input checked="" type="checkbox"/>	SK	<input checked="" type="checkbox"/>	SI	<input checked="" type="checkbox"/>	ES	<input checked="" type="checkbox"/>	SE
<input checked="" type="checkbox"/>	GB	<input checked="" type="checkbox"/>	IS	<input checked="" type="checkbox"/>	LI	<input checked="" type="checkbox"/>	NO	<input checked="" type="checkbox"/>	CH	<input checked="" type="checkbox"/>	BG
<input checked="" type="checkbox"/>	RO	<input checked="" type="checkbox"/>	TR	<input checked="" type="checkbox"/>	HR						

#13 ITR-01

<Intended Country of Use>											
<input type="checkbox"/>	AT	<input type="checkbox"/>	BE	<input type="checkbox"/>	CY	<input type="checkbox"/>	CZ	<input type="checkbox"/>	DK	<input type="checkbox"/>	EE
<input type="checkbox"/>	FI	<input type="checkbox"/>	FR	<input type="checkbox"/>	DE	<input type="checkbox"/>	GR	<input type="checkbox"/>	HU	<input type="checkbox"/>	IE
<input checked="" type="checkbox"/>	IT	<input type="checkbox"/>	LV	<input type="checkbox"/>	LT	<input type="checkbox"/>	LU	<input type="checkbox"/>	MT	<input type="checkbox"/>	NL
<input type="checkbox"/>	PL	<input type="checkbox"/>	PT	<input type="checkbox"/>	SK	<input type="checkbox"/>	SI	<input type="checkbox"/>	ES	<input type="checkbox"/>	SE
<input type="checkbox"/>	GB	<input type="checkbox"/>	IS	<input type="checkbox"/>	LI	<input type="checkbox"/>	NO	<input type="checkbox"/>	CH	<input type="checkbox"/>	BG
<input type="checkbox"/>	RO	<input type="checkbox"/>	TR	<input type="checkbox"/>	HR						